



EOS 10 / MG

EOS 10 QD / MG

EOS 10S / MG

REF. No. C12-8132 / 9


C12-8133 / 7

C12-8135 / 8

PARTS CATALOG

C46-1582	SEMI HARD CASE EH3-L
C46-1583	SEMI HARD CASE EH3-LL
C51-9971	GRIP EXTENSION GR-60
C56-1291	NECK STRAP 17

CANON EOS 10, 10QD, 10S

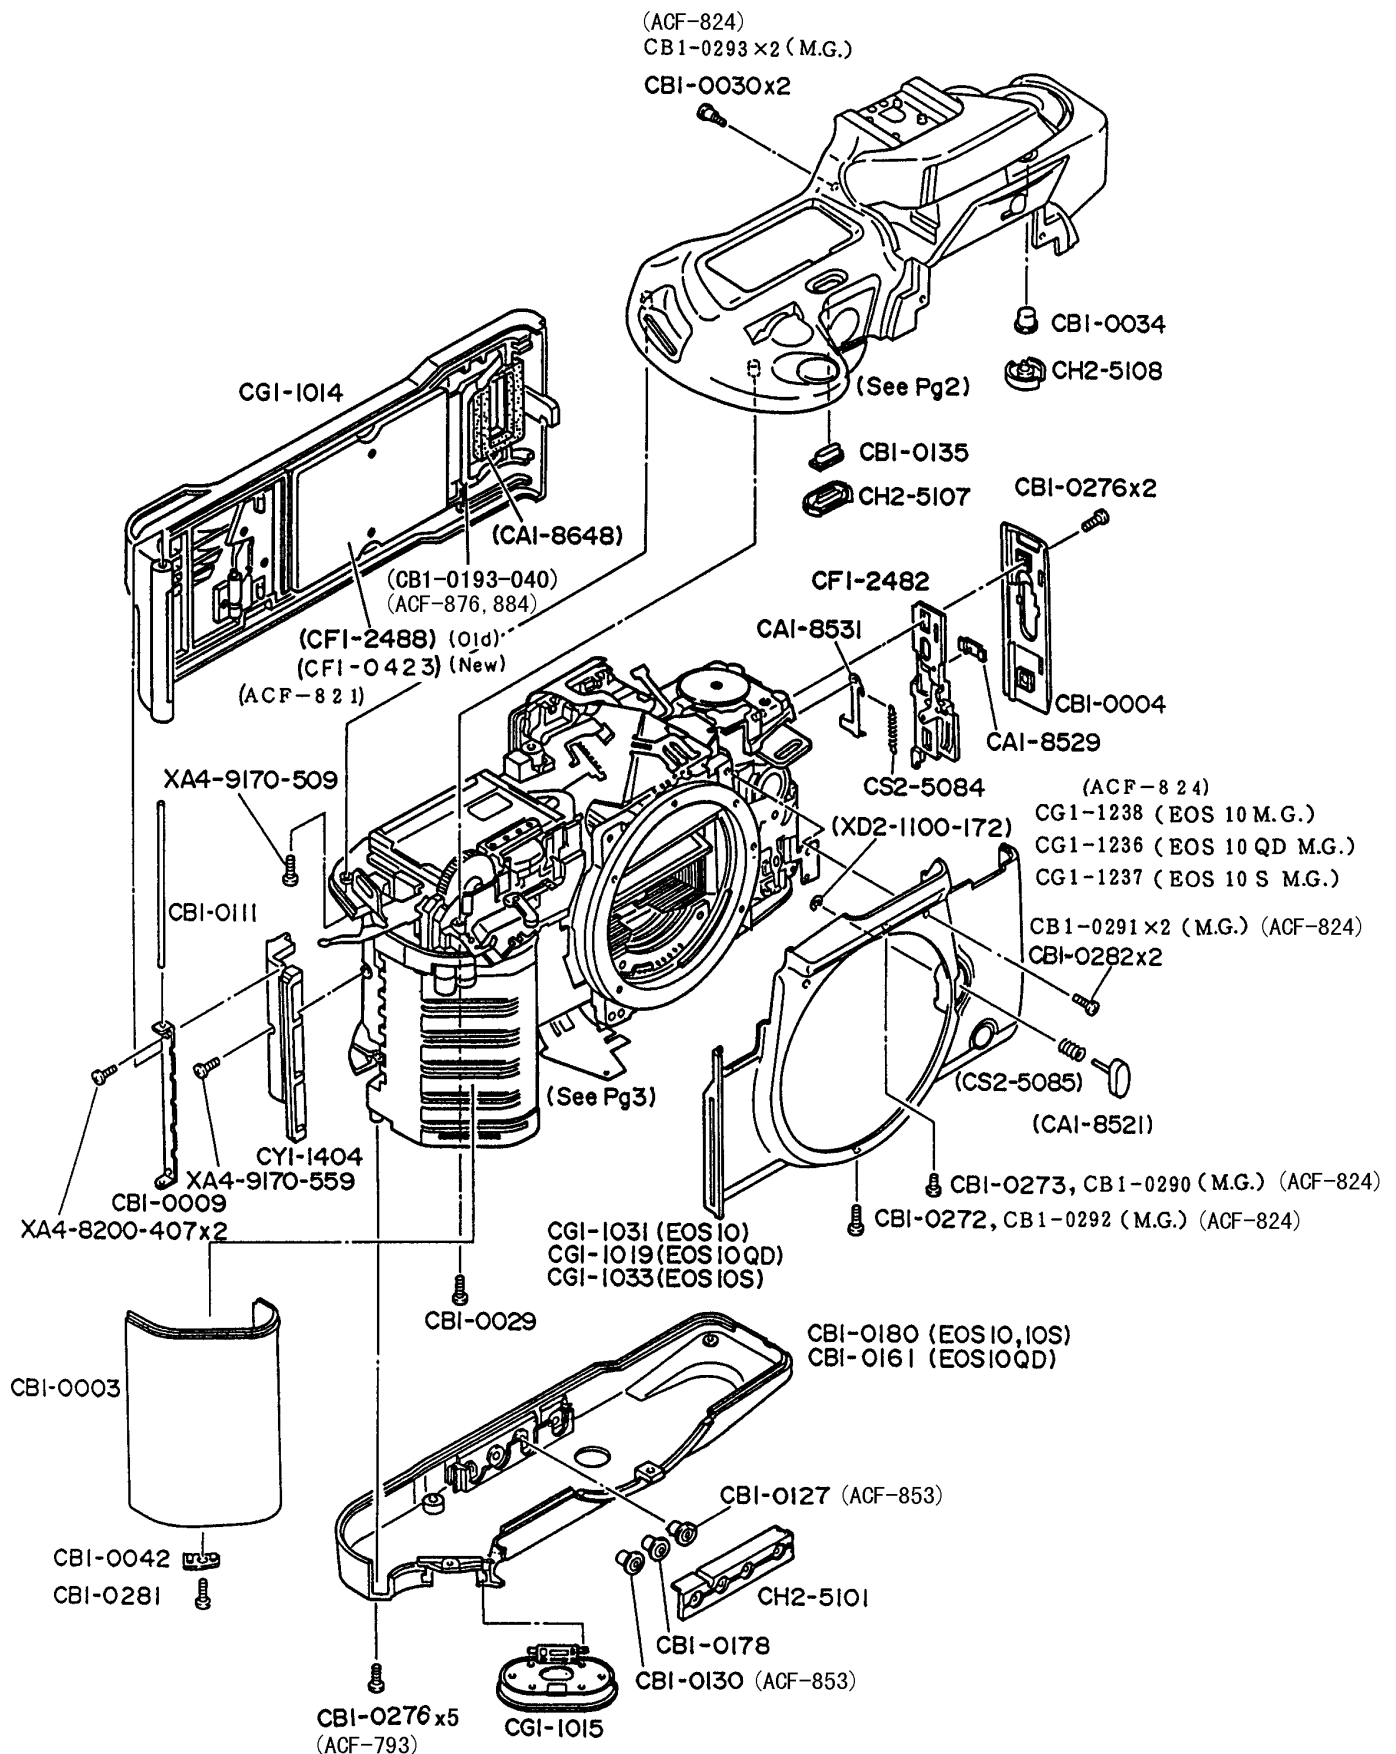

PARTS LIST

REF. NO. C12-8132, 3, 5, 7, 8, 9

NEW	PART NO.	CLASS	QTY	DESCRIPTION
	CA1-8521-000	C	1	BUTTON, UNLOCK
	CA1-8529-000	D	1	BUTTON, UNLOCK
	CA1-8531-000	E	1	LEVER, LOCK
	CA1-8648-000	D	1	SHIELD, LIGHT
	CB1-0003-000	D	1	COVER, GRIP
	CB1-0004-000	C	1	COVER, LATCH
	CB1-0009-000	E	1	HINGE
	CB1-0029-000	F	1	SCREW, CROSS-RECESS,PH
	CB1-0030-000	F	2	SCREW, STUD
	CB1-0034-000	E	1	BUTTON, POP-UP
	CB1-0042-000	E	1	HOLDER, GRIP COVER
	CB1-0111-000	E	1	SHAFT, BACK COVER
	CB1-0127-000	D	1	BUTTON, FUNCTION
	CB1-0130-000	D	1	BUTTON, EXP. COMPENSATION
	CB1-0135-000	E	1	BUTTON, ST-RC
	CB1-0161-000	C	1	COVER, BASE
	CB1-0178-000	D	1	BUTTON, AF MODE
	CB1-0180-000	C	1	COVER, BASE
	CB1-0193-000	E	1	SPRING, CARTRIDGE
	CB1-0272-000		1	SCREW, CROSS-RECESS,PH
	CB1-0273-000		1	SCREW, CROSS-RECESS,PH
	CB1-0276-000		7	SCREW, CROSS-RECESS,PH
	CB1-0281-000		1	SCREW, CROSS-RECESS,PH
	CB1-0282-000		2	SCREW, CROSS-RECESS,PH
	CB1-0290-000	F	1	SCREW, CROSS-RECESS,PH
	CB1-0291-000	F	2	SCREW, CROSS-RECESS,PH
	CB1-0292-000	F	1	SCREW, CROSS-RECESS,PH
	CB1-0293-000	F	2	SCREW, STUD
	CF1-0423-000	D	1	PLATE, PRESSURE
	CF1-2482-000	D	1	LEVER, LATCH
	CF1-2488-000	E	1	PLATE, PRESSURE
	CG1-1014-000	D	1	BACK COVER ASS'Y
	CG1-1015-000	C	1	BATTERY COVER ASS'Y
	CG1-1019-000	D	1	FRONT PANEL ASS'Y
	CG1-1031-000	D	1	FRONT PANEL ASS'Y
	CG1-1033-000	D	1	FRONT PANEL ASS'Y
	CG1-1236-000	E	1	FRONT PANEL ASS'Y
	CG1-1237-000	E	1	FRONT PANEL ASS'Y
	CG1-1238-000	E	1	FRONT PANEL ASS'Y
	CH2-5101-000	E	1	CONTACT, RUBBER
	CH2-5107-000	E	1	CONTACT, ST-RC
	CH2-5108-000	E	1	CONTACT, POP-UP
	CS2-5084-000	D	1	SPRING, LOCK
	CS2-5085-000	D	1	SPRING, COIL
	CY1-1404-000	D	1	COVER, HINGE
	XA4-8200-407		2	SCREW, CROSS-RECESS,PH
	XA4-9170-509		1	SCREW, CROSS-RECESS,PH
	XA4-9170-559		1	SCREW, CROSS-RECESS,PH
	XD2-1100-172		1	RETAINING RING (E-TYPE) M1.7


[illegible]

PARTS LIST

REF. NO. C12-8132, 3, 5, 7, 8, 9

NEW	PART NO.	CLASS	QTY	DESCRIPTION
	CA1-6504-040	D	1	SHOE, ACCESSORY
	CA1-8614-000	E	1	CLASP
	CA1-8666-050	E	1	BASE, ACC. SHOE
	CA1-9328-000	C	1	SPRING, PLATE
	CB1-0020-000	E	1	BUTTON, AE LOCK
	CB1-0041-000	E	1	BUTTON, AF SENSOR SELECT
	CB1-0132-000	D	1	BUTTON, RELEASE
	CB1-0133-000	D	1	WINDOW, LCD
	CB1-0144-000	D	1	COVER, FLASH
	CB1-0146-000	D	1	PANEL, FLASH
	CB1-0177-000	D	1	TAPE, LCD WINDOW
	CB1-0289-000	E	1	COVER, FLASH
	CG1-1013-000	D	1	TOP COVER ASS'Y
	CG1-1235-000	E	1	TOP COVER ASS'Y
	CS1-6812-000	E	1	SPRING
	CY1-1405-000	E	1	XENON LAMP ASS'Y
	WE2-9018-000	E	1	COIL, TRIGGER
	XA1-3170-507		4	SCREW, CROSS-RECESS, PH
	XA4-9170-407		1	SCREW, CROSS-RECESS, PH
	XA4-9170-409		1	SCREW, CROSS-RECESS, PH
	XA4-9170-459		2	SCREW, CROSS-RECESS, PH
	XD2-1100-132		1	WASHER, RETAINING 1.3MM

CANON EOS10, 10QD, 10S

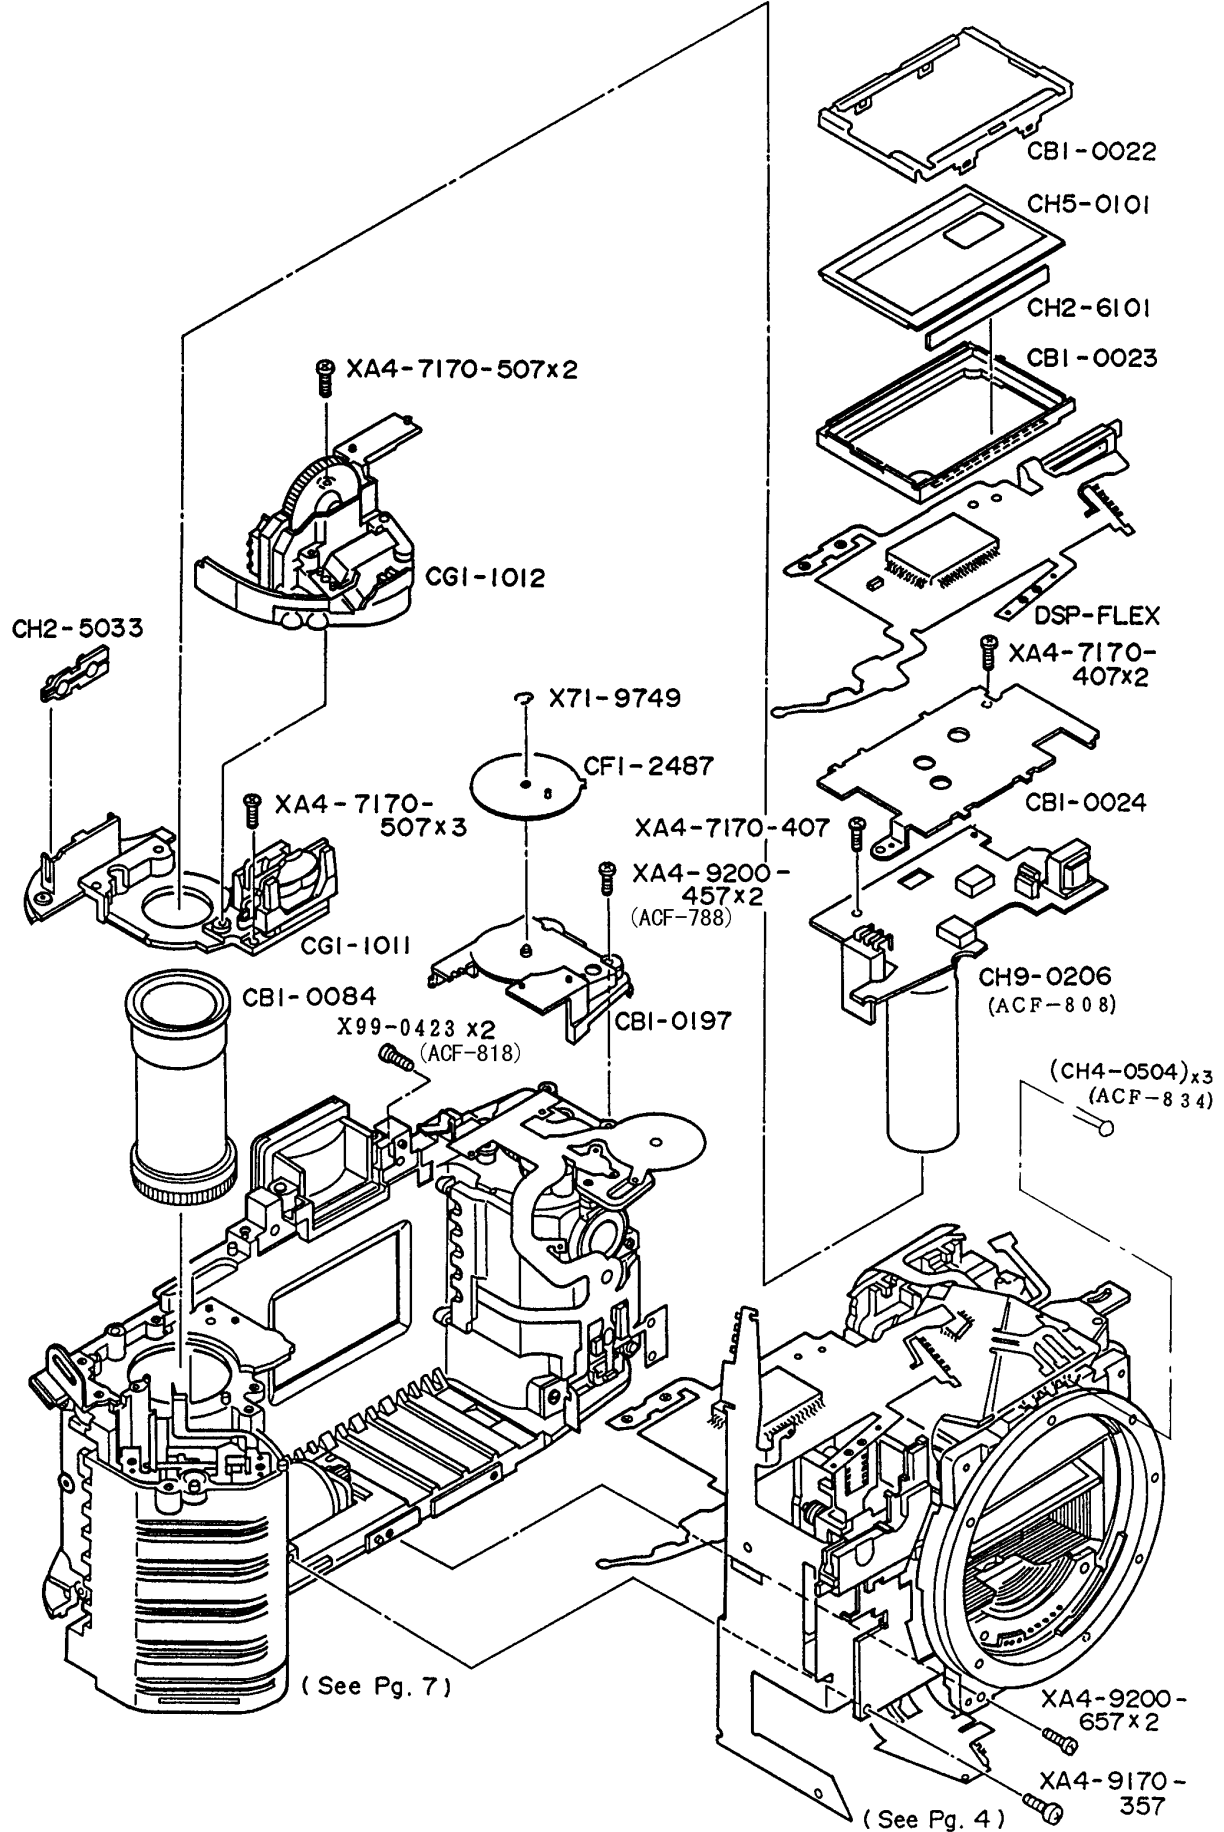


PARTS LIST

REF. NO. C12-8132, 3, 5, 7, 8, 9

NEW	PART NO.	CLASS	QTY	DESCRIPTION
	CB1-0022-000	E	1	HOLDER, LCD
	CB1-0023-000	E	1	CASE, LCD
	CB1-0024-000	E	1	BASEPLATE, LCD
	CB1-0084-000	E	1	SPOOL
	CB1-0197-000	E	1	BASE, MODE DIAL
	CF1-2487-000	E	1	CONTACT, MODE
	CG1-1011-000	E	1	AF LED ASS'Y
	CG1-1012-000	D	1	DIAL ASS'Y
	CH2-5033-000	D	1	CONTACT, RUBBER
	CH2-6101-000	E	1	CONNECTOR, LCD
	CH4-0504-000	E	3	LED, AF
	CH5-0101-000	D	1	LCD
	CH9-0206-000	E	1	FLASH PCB ASS'Y
	X71-9749-000		1	RETAINER
	X99-0423-000		2	SCREW, CROSS-RECESS, PH
	XA4-7170-407		3	SCREW, CROSS-RECESS, PH
	XA4-7170-507		5	SCREW, CROSS-RECESS, PH
	XA4-9170-357		1	SCREW, CROSS-RECESS, PH
	XA4-9200-457		2	SCREW, CROSS-RECESS, PH
	XA4-9200-657		2	SCREW, CROSS-RECESS, PH

CANON EOS10, 10QD, 10S

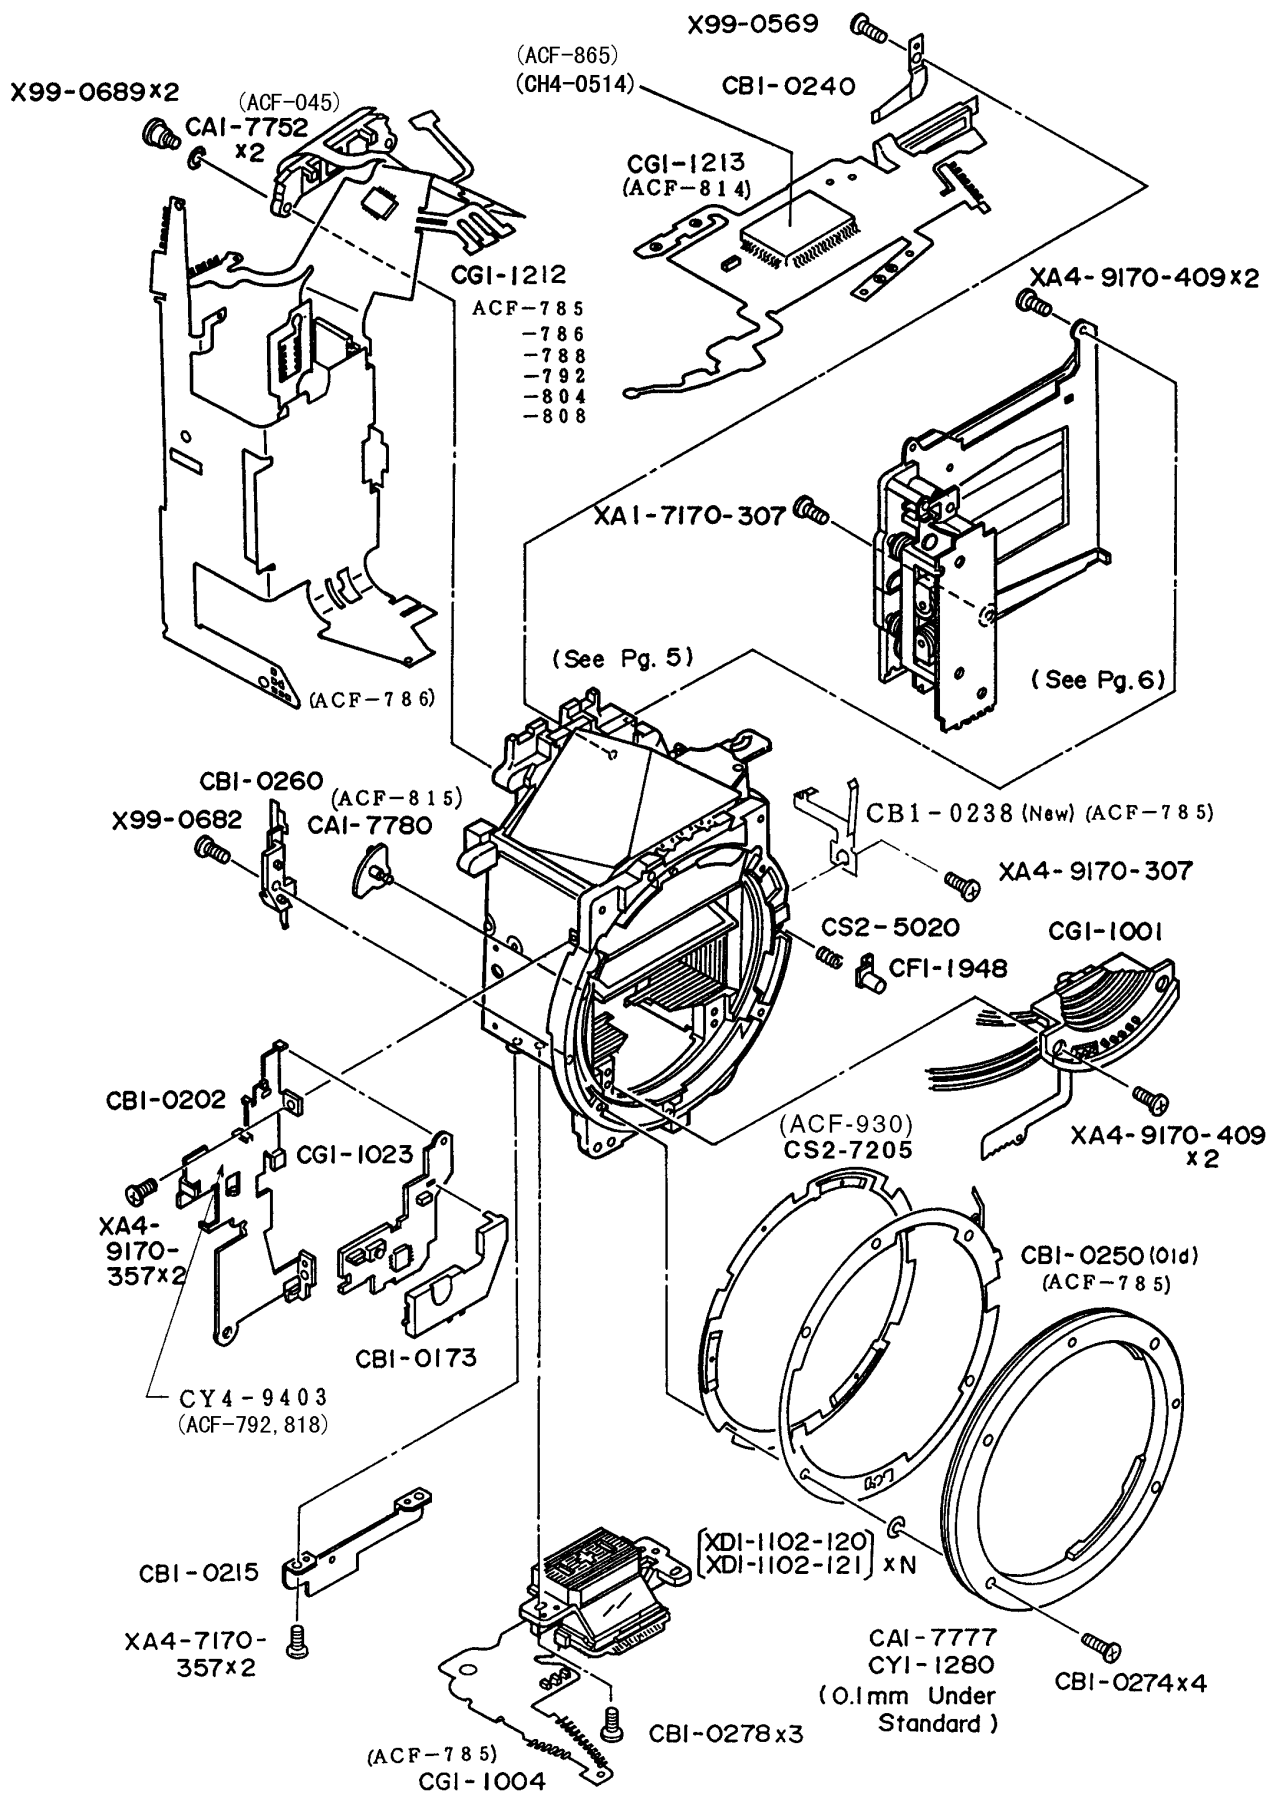


PARTS LIST

REF. NO. C12-8132, 3, 5, 7, 8, 9

NEW	PART NO.	CLASS	QTY	DESCRIPTION
	CA1-7752-000	E	2	WASHER, WAVE
	CA1-7777-000	C	1	MOUNT, BODY
	CA1-7780-000	E	1	INTERLOCK, LENS MOTOR
	CB1-0173-000	E	1	CASE, SHIELD
	CB1-0202-000	E	1	PLATE, WING
	CB1-0215-000	E	1	HOLDER, SHUTTER UNIT
	CB1-0238-000	E	1	PLATE, GND
	CB1-0240-000	E	1	HOLDER, FINDER LCD
	CB1-0250-000	E	1	SPACER, MOUNT
	CB1-0260-000	E	1	SWITCH, LENS DETECTOR
	CB1-0274-000		4	SCREW, CROSS-RECESS, PH
	CB1-0278-000		3	SCREW, CROSS-RECESS, PH
	CF1-1948-000	E	1	LEVER, LENS LOCK
	CG1-1001-000	D	1	MOUNT CONTACT ASS'Y
	CG1-1004-000	E	1	AF UNIT
	CG1-1023-000	D	1	REMOTE PCB ASS'Y
	CG1-1212-000	D	1	MAIN FLEX ASS'Y
	CG1-1213-000	D	1	DISPLAY FLEX ASS'Y
	CH4-0514-000	E	1	IC, LCD DRIVER
	CS2-5020-000	E	1	SPRING, COIL
	CS2-7205-000	D	1	SPRING, MOUNT
	CY1-1280-000	C	1	MOUNT, BODY
	CY4-9403-000		1	TAPE, INSULATOR
	X99-0569-000		1	SCREW, CROSS-RECESS, PH
	X99-0682-000		1	SCREW, CROSS-RECESS, PH
	X99-0689-000		2	SCREW, CROSS-RECESS, PH
	XA1-7170-307		1	SCREW, CROSS-RECESS, PH
	XA4-7170-357		2	SCREW, CROSS-RECESS, PH
	XA4-9170-307		1	SCREW, CROSS-RECESS, FCH
	XA4-9170-357		2	SCREW, CROSS-RECESS, PH
	XA4-9170-409		4	SCREW, CROSS-RECESS, PH
	XD1-1102-120	N		WASHER
	XD1-1102-121	N		SHIM. WASHER

CANON EOS 10, 10QD, 10S

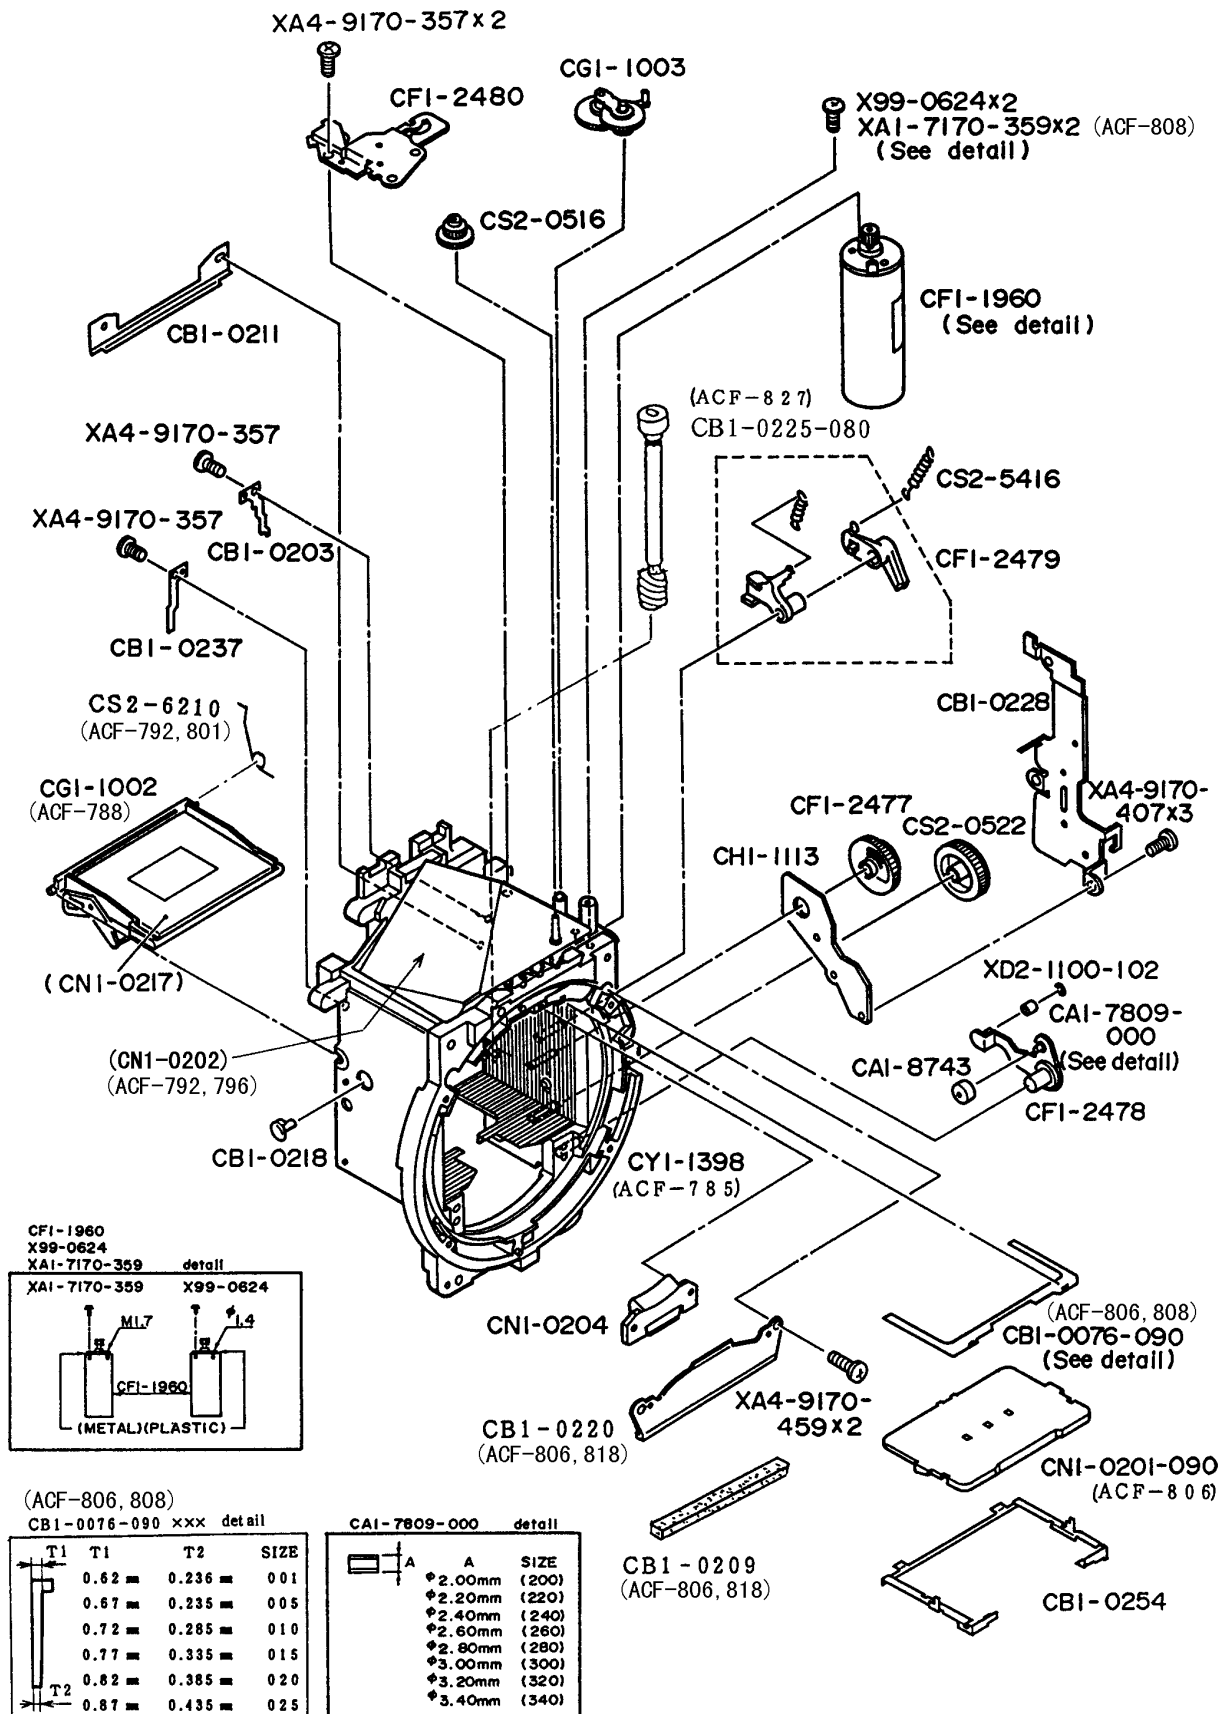


PARTS LIST

REF. NO. C12-8132, 3, 5, 7, 8, 9

NEW	PART NO.	CLASS	QTY	DESCRIPTION
	CA1-7809-000(XXX)	E	1	COLLAR, SHUTTER CHARGE LEVER
	CA1-8743-000	D	1	COLLAR, SHUTTER CHARGE
	CB1-0076-090(XXX)	E	1	WASHER, FINDER BACK ADJ
	CB1-0203-000	E	1	HINGE-L, MAIN MIRROR
	CB1-0209-000	D	1	CUSHION, MIRROR
	CB1-0211-000	E	1	SHIELD, LIGHT
	CB1-0218-000	E	1	STOPPER, SUB MIRROR
	CB1-0220-000	D	1	PLATE, PROTECTION
	CB1-0225-080	E	1	SHAFT, WORM GEAR
	CB1-0228-000	E	1	PLATE, MIRROR BOX SIDE
	CB1-0237-000	E	1	HINGE-R, MAIN MIRROR
	CB1-0254-000	E	1	HOLDER, FOCUSING SCREEN
	CF1-1960-000	D	1	MOTOR, REWINDING DC UNDER 10W
	CF1-2477-000	E	1	GEAR, MIRROR CAM
	CF1-2478-000	E	1	LEVER, S
	CF1-2479-000	E	1	LEVER, MIRROR FUNCTION
	CF1-2480-000	E	1	PLATE, COVER
	CG1-1002-000	E	1	MAIN MIRROR ASS'Y
	CG1-1003-000	D	1	PLANETARY GEAR ASS'Y
	CH1-1113-000	D	1	BOARD, CONTACT
	CN1-0201-090	D	1	SCREEN, FOCUSING
	CN1-0202-000	E	1	PENTAPRISM
	CN1-0204-000	E	1	PRISM, SID
	CN1-0217-000	D	1	MIRROR
	CS2-0516-000	E	1	GEAR
	CS2-0522-000	E	1	GEAR, SHUTTER CAM
	CS2-5416-000	E	1	SPRING, COIL
	CS2-6210-000	E	1	SPRING
	CY1-1398-000	E	1	PENTAPRISM/MIRROR BOX ASS'Y
	X99-0624-000		2	SCREW, CROSS-RECESS, PH
	XA1-7170-359		2	SCREW, CROSS-RECESS, PH
	XA4-9170-357		4	SCREW, CROSS-RECESS, PH
	XA4-9170-407		3	SCREW, CROSS-RECESS, PH
	XA4-9170-459		2	SCREW, CROSS-RECESS, PH
	XD2-1100-102		1	E RING

CANON EOS 10, 10QD, 10S

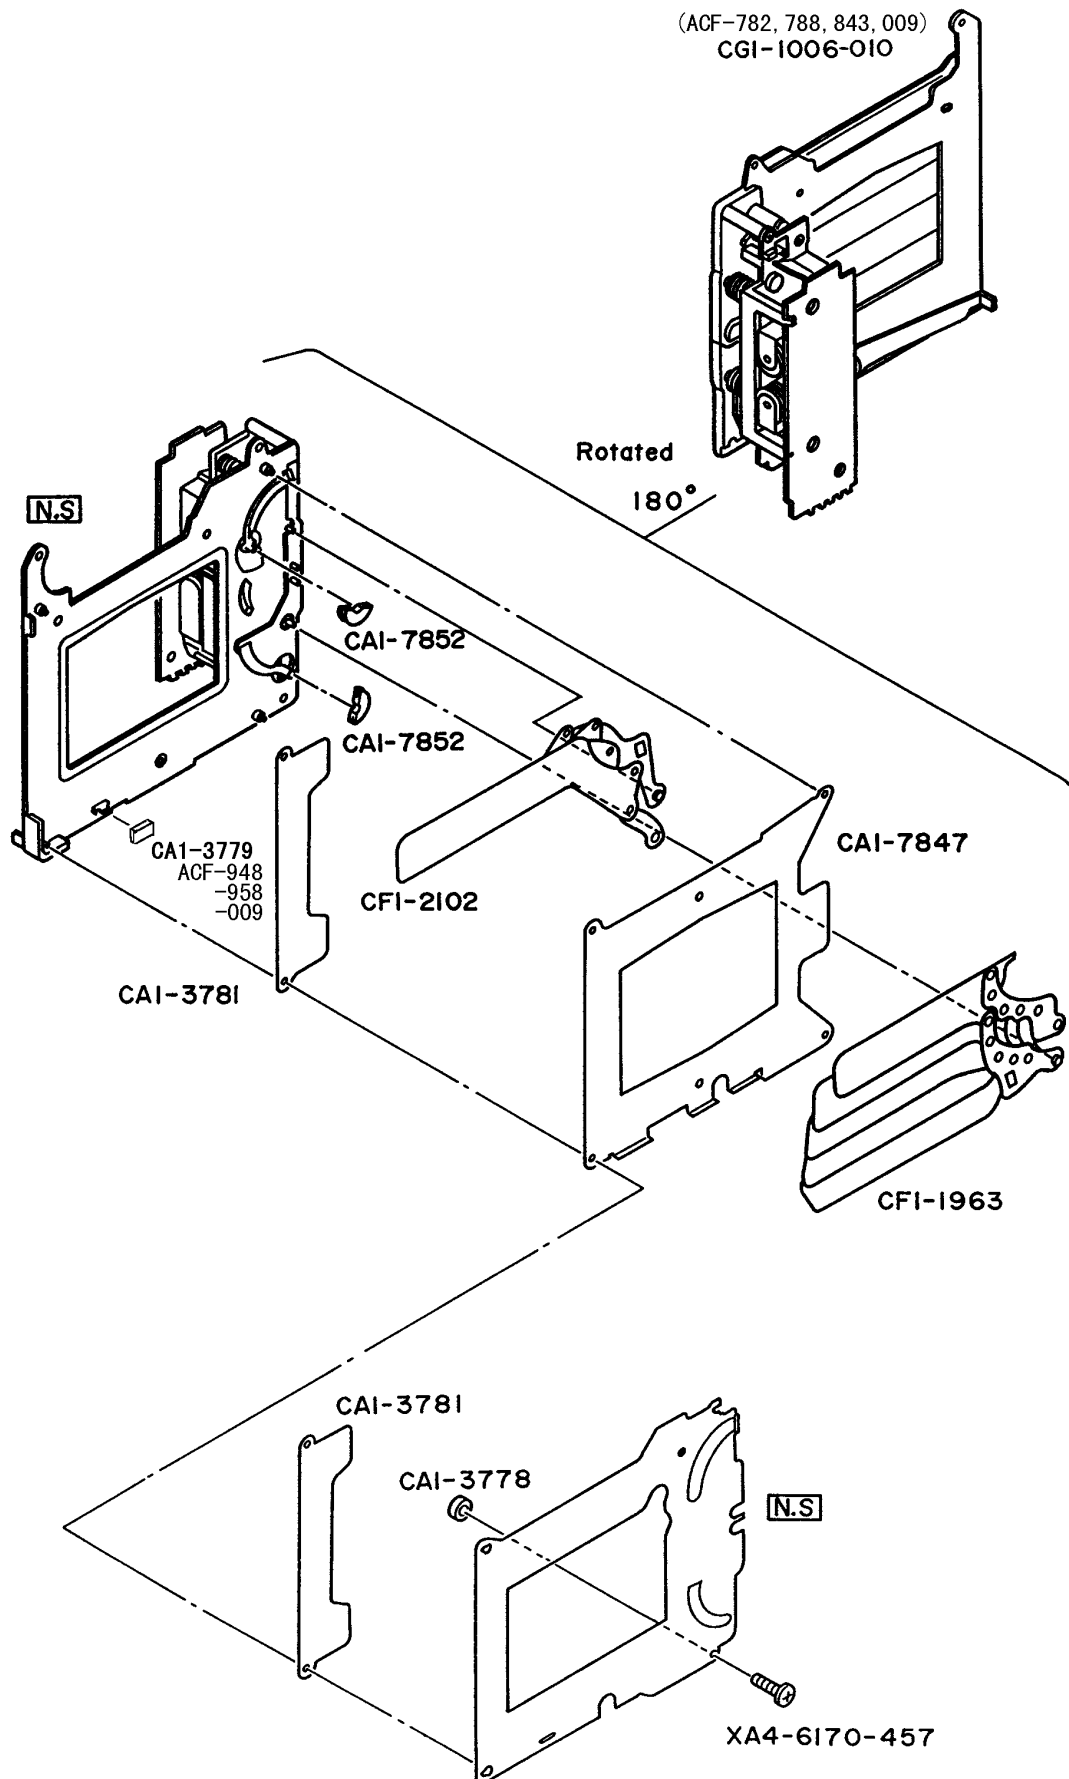


PARTS LIST

REF. NO. C12-8132, 3, 5, 7, 8, 9

NEW	PART NO.	CLASS	QTY	DESCRIPTION
	CA1-3778-000	E	1	RUBBER, STOPPER-A
	CA1-3779-000	E	1	RUBBER, STOPPER-B
	CA1-3781-000	E	2	SPACER
	CA1-7847-000	E	1	PLATE, SEPARATOR
	CA1-7852-000	E	2	STOPPER
	CF1-1963-000	C	1	CURTAIN, SHUTTER
	CF1-2102-000	C	1	CURTAIN, SHUTTER
	CG1-1006-010	D	1	SHUTTER UNIT
	XA4-6140-457		1	SCREW, CROSS-RECESS, PH

CANON EOS10, 10QD, 10S

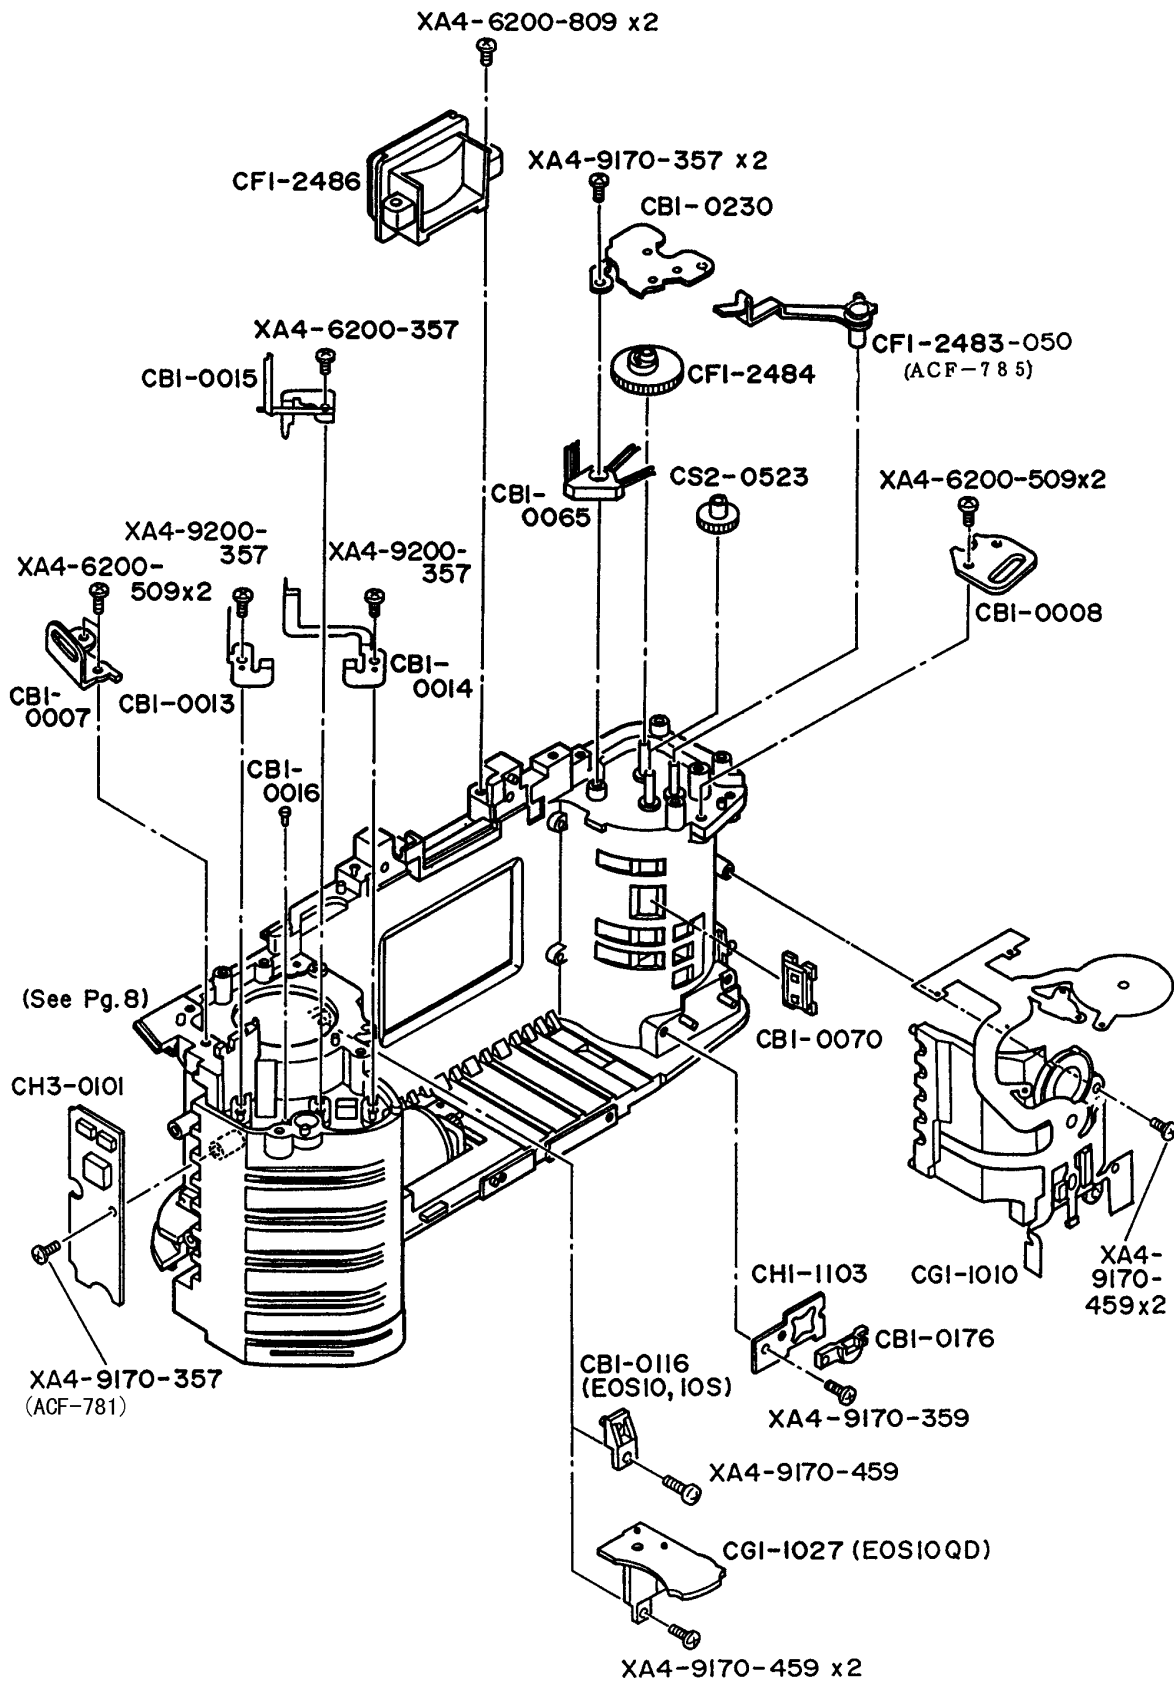


PARTS LIST

REF. NO. C12-8132, 3, 5, 7, 8, 9

NEW	PART NO.	CLASS	QTY	DESCRIPTION
	CB1-0007-000	E	1	LUG, NECK STRAP
	CB1-0008-000	E	1	LUG, NECK STRAP
	CB1-0013-000	E	1	CONTACT, BATTERY (+)
	CB1-0014-000	D	1	CONTACT, BATTERY (-)
	CB1-0015-000	E	1	CONTACT, RESET
	CB1-0016-000	E	1	PIN, RESET
	CB1-0065-000	D	1	CONTACT, FLASH DETECTOR
	CB1-0070-000	E	1	SEAT, DX
	CB1-0116-000	E	1	SHIELD, LIGHT
	CB1-0176-000	E	1	PLATE, BCD
	CB1-0230-000	E	1	PLATE, CAM GEAR
	CF1-2483-050	E	1	LEVER, FLASH POP-UP
	CF1-2484-000	E	1	GEAR, FLASH CAM
	CF1-2486-000	D	1	EYEPIECE
	CG1-1010-000	E	1	DX CONTACT ASS'Y
	CG1-1027-000	D	1	DATE UNIT
	CH1-1103-000	E	1	SWITCH, BCD
	CH3-0101-000	D	1	CONVERTER, DC/DC
	CS2-0523-000	E	1	GEAR
	XA4-6200-357		1	SCREW, CROSS-RECESS, PH
	XA4-6200-509		4	SCREW, CROSS-RECESS, PH
	XA4-6200-809		2	SCREW, CROSS-RECESS, PH
	XA4-9170-357		3	SCREW, CROSS-RECESS, PH
	XA4-9170-359		1	SCREW, CROSS-RECESS, PH
	XA4-9170-459		5	SCREW, CROSS-RECESS, PH
	XA4-9200-357		2	SCREW, CROSS-RECESS, PH

CANON EOS10, 10QD, 10S

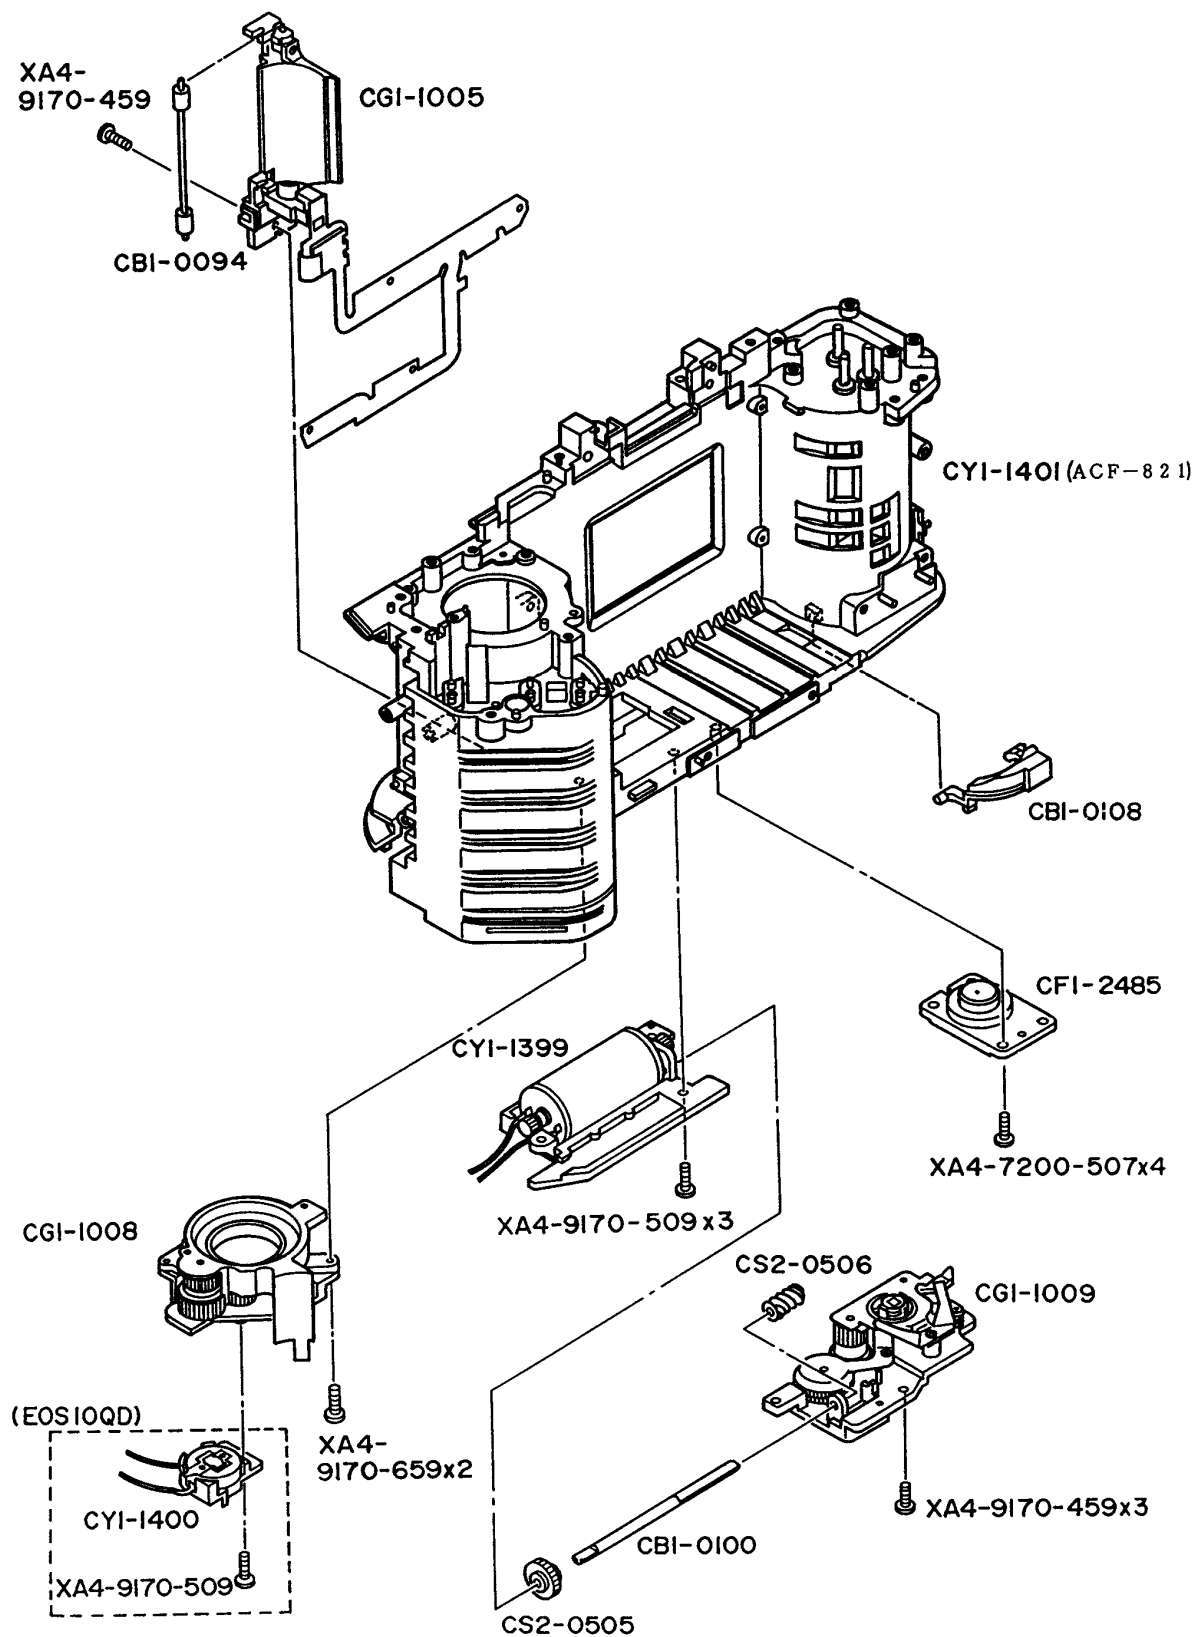


PARTS LIST

REF. NO. C12-8132, 3, 5, 7, 8, 9


NEW	PART NO.	CLASS	QTY	DESCRIPTION
	CB1-0094-000	E	1	ROLLER, FILM GUIDE
	CB1-0100-000	E	1	SHAFT, REWIND GEAR
	CB1-0108-000	E	1	GUIDE, FILM CARTRIDGE
	CF1-2485-000	E	1	SOCKET, TRIPOD
	CG1-1005-000	E	1	SIGNAL UNIT
	CG1-1008-000	E	1	WINDING MECHANISM ASS'Y
	CG1-1009-000	D	1	REWIND MECHANISM ASS'Y
	CS2-0505-000	E	1	GEAR, REWIND
	CS2-0506-000	E	1	GEAR, REWIND WORM
	CY1-1399-000	D	1	WINDING MOTOR ASS'Y
	CY1-1400-000	E	1	CAPACITOR, BACK UP
	CY1-1401-000	E	1	BODY
	XA4-7200-507		4	SCREW, CROSS-RECESS, PH
	XA4-9170-459		4	SCREW, CROSS-RECESS, PH
	XA4-9170-509		4	SCREW, CROSS-RECESS, PH
	XA4-9170-659		2	SCREW, CROSS-RECESS, PH

CANON EOS10, 10QD, 10S (ACC)


C46-1582 SEMI HARD CASE EH3-L
 C46-1583 SEMI HARD CASE EH3-LL

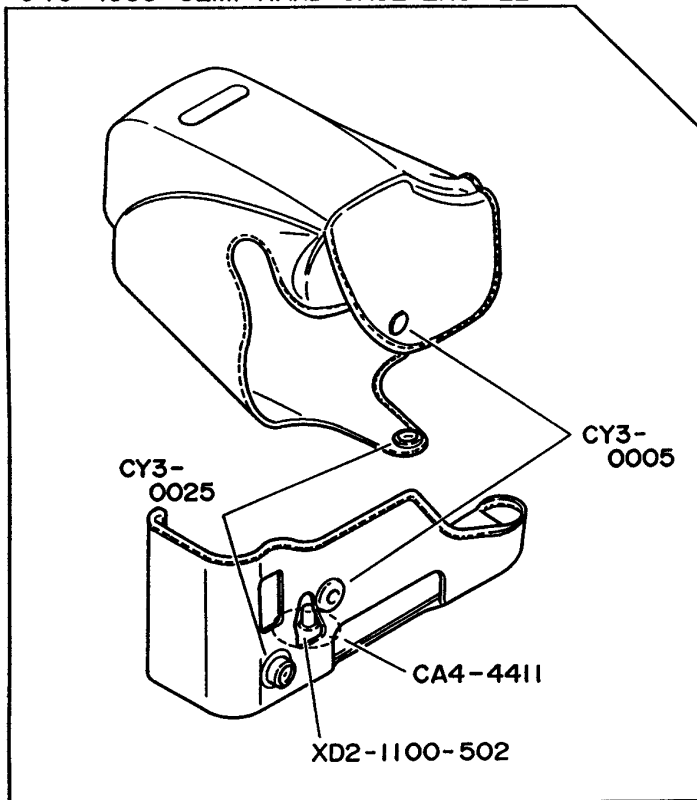


C58-5581 BARCODE READER E

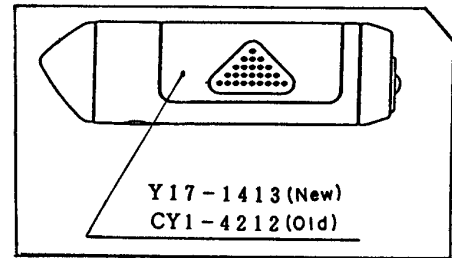

C56-1291 NECK STRAP 17

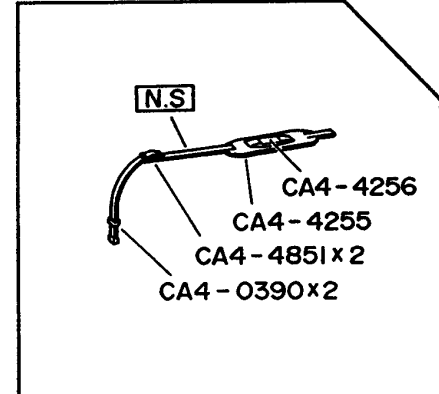

C51-9971 GRIP EXTENSION GR-60

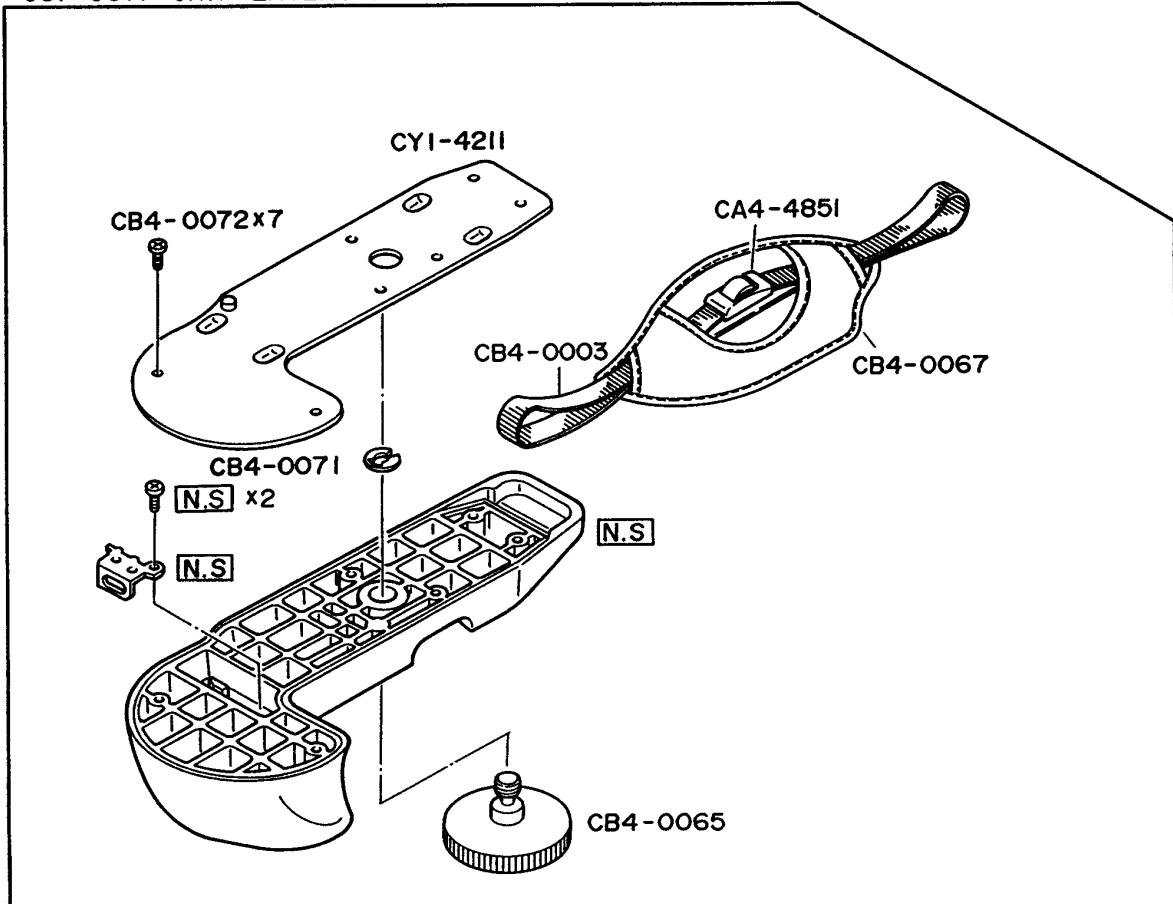

SEMI HARD CASE & NECK STRAP 17

REF. NO. C46-1582, 1583, C56-1291

SYMBOL	PART NO.	CLASS	QTY	DESCRIPTION
	CA4-0390-000	D	2	LOOP
	CA4-4255-000	E	1	PAD, SHOULDER
	CA4-4256-000	D	1	COVER, EYEPiece
	CA4-4411-000	D	1	SCREW, TIGHTENING
	CA4-4851-000	E	2	CLASP
	CY3-0005-000	D	1	HOOK
	CY3-0025-000	D	1	HOOK
	XD2-1100-502		1	E RING

GRIP EXTENSION GR-60

REF. NO. C51-9971

SYMBOL	PART NO.	CLASS	QTY	DESCRIPTION
	CA4-4851-000	E	1	CLASP
	CB4-0003-000	E	1	STRAP, WRIST
	CB4-0065-000	E	1	SCREW, TIGHTENING (GR-60)
	CB4-0067-000	D	1	PAD, BACK
	CB4-0071-000	E	1	G RING
	CB4-0072-000		7	SCREW, CROSS-RECESS, PH
	CY1-4211-000	E	1	PLATE, GRIP (GR-60)

ELECTRIC PARTS LIST

REF. NO. C12-8132, 3, 5, 7, 8, 9

NEW	SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
		CH3-0101-000	D	1	CONVERTER, DC/DC	
	T-MOS	CH4-0213-000	D	1	IC	SFX10
	IC-8, 9	CH4-0218-000	D	2	IC	MPC1710
	IC-1	CH4-0512-000	E	1	IC	LC4068
	LCD1	CH5-0101-000	D	1	LCD	
		CH4-0504-000	E	3	LED, AF	GL3UR8
		WE2-9018-000	E	1	COIL, TRIGGER	
	X' TAL	WK2-0188-000	E	1	OSCILLATOR, CRYSTAL	32.768KHZ
	X' TAL	WK2-5023-000	E	1	OSCILLATOR, CRYSTAL	20MHZ
		Y11-2801-000			LEAD (WHITE)	
		Y11-2802-000			LEAD (BLACK)	
		Y11-2803-000			LEAD (RED)	
		Y11-2804-000			LEAD (PINK)	
		Y11-2806-000			LEAD (ORANGE)	
		Y11-2807-000			LEAD (YELLOW)	
		Y11-2809-000			LEAD (GREEN)	
		Y11-2811-000			LEAD (BLUE)	
		Y11-2812-000			LEAD (PURPLE)	
		Y11-2813-000			LEAD (BROWN)	
		Y11-4402-000			LEAD (BLACK)	
		Y11-4403-000			LEAD (RED)	
		Y11-4411-000			LEAD (BLUE)	
		Y11-4901-000			LEAD (WHITE)	
		Y11-4902-000			LEAD (BLACK)	
		Y11-4904-000			LEAD (PINK)	
		Y11-4906-000			LEAD (ORANGE)	
		Y11-5001-000			LEAD (WHITE)	
		Y11-5002-000			LEAD (BLACK)	
		Y11-5003-000			LEAD (RED)	
		Y11-5011-000			LEAD (BLUE)	