

Canon

EOS 700

EOS 700 Q.D.


REF.NO.C12-8062

C12-8063

PARTS

CATALOG

CANON EOS 700
EOS 700 Q.D.

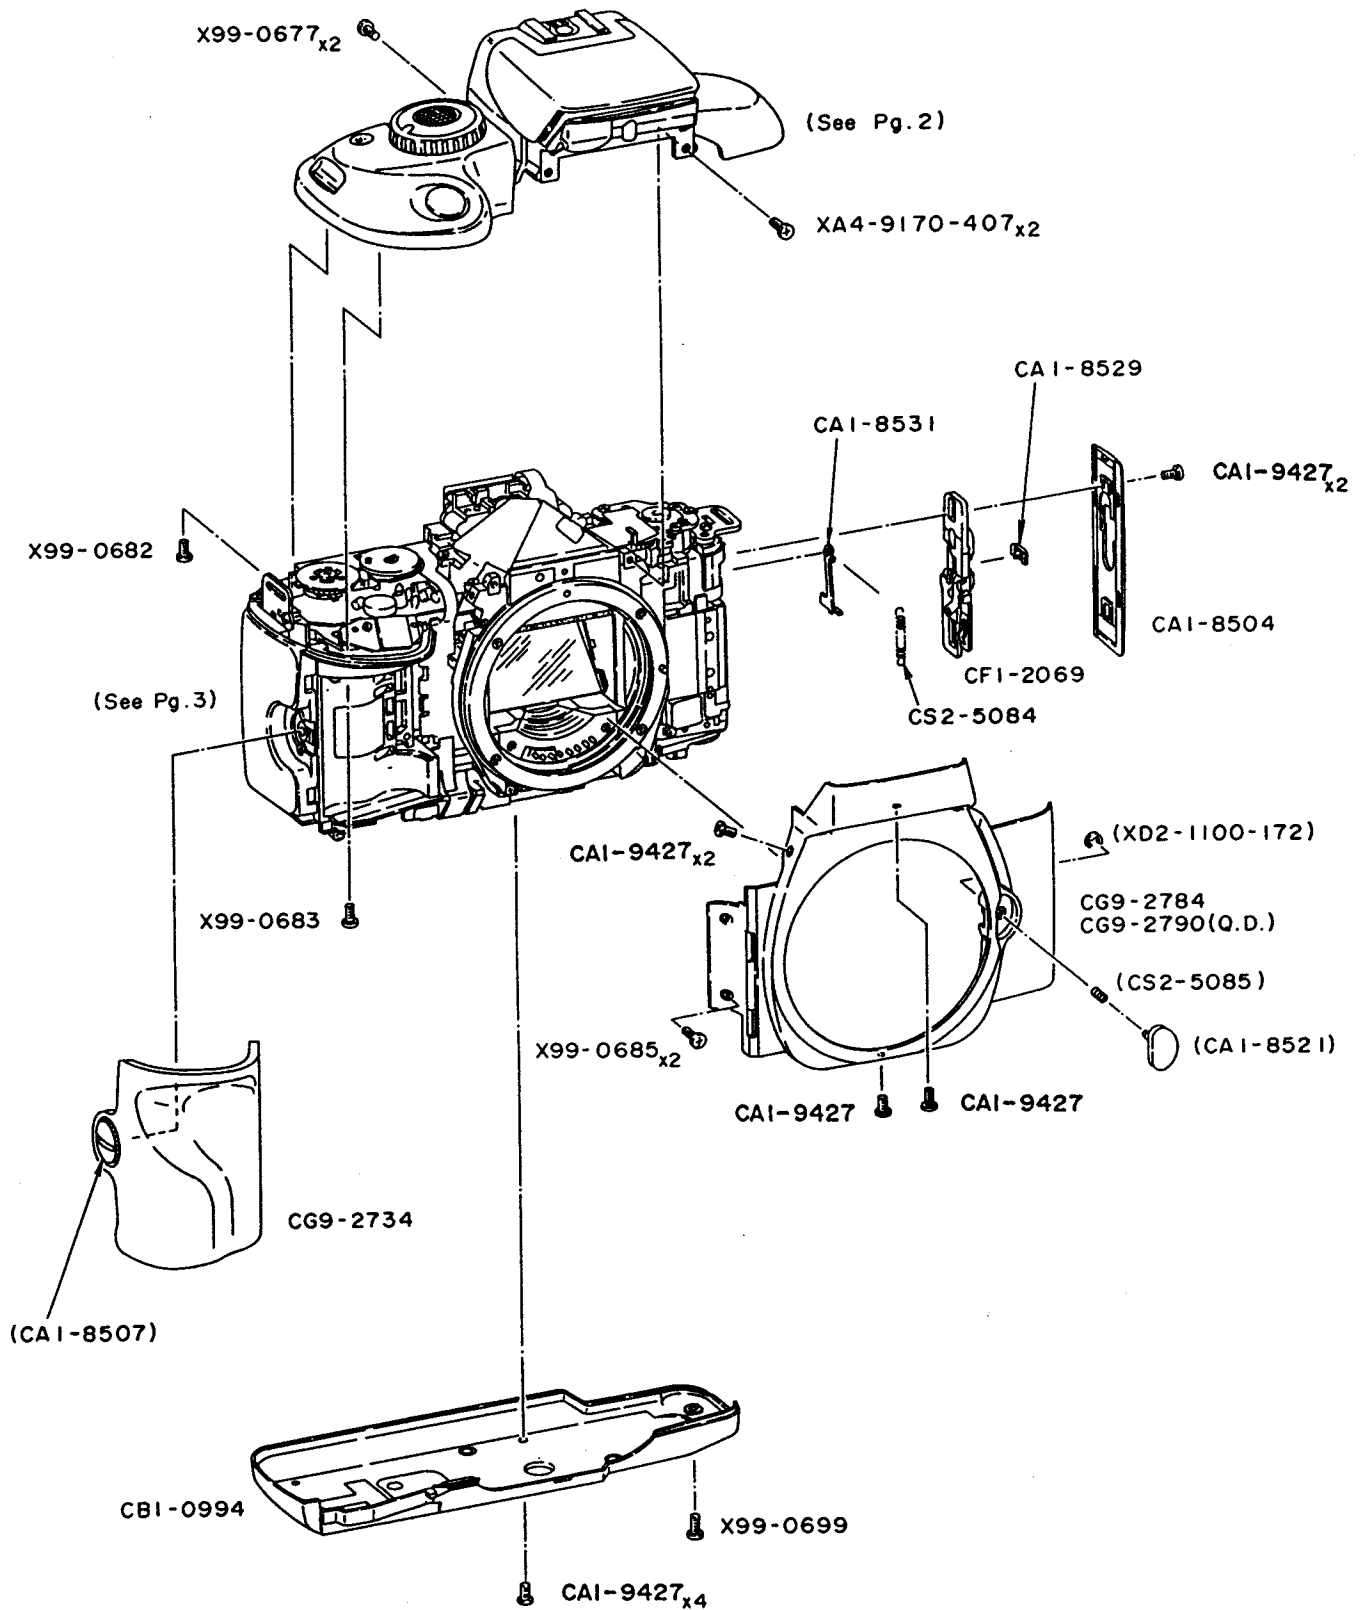


PARTS LIST

REF.NO.C12-8062,63

NEW PARTS NO.	CLASS	QTY	DESCRIPTION
CA1-8504-000	D	1	COVER, HOOK
CA1-8507-000	D	1	SCREW
CA1-8521-000	C	1	BUTTON, UNLOCK
CA1-8529-000	D	1	BUTTON, UNLOCK
CA1-8531-000	E	1	LEVER, LOCK
CA1-9427-000		10	SCREW
CB1-0994-000	C	1	COVER, BASE
CF1-2069-000	D	1	SW UNIT, BACK COVER
CG9-2734-000	E	1	GRIP
CG9-2784-000	C	1	COVER ASS'Y, FRONT
CG9-2790-000	C	1	COVER ASS'Y, FRONT
CS2-5084-000	D	1	SPRING, LOCK
CS2-5085-000	D	1	SPRING, COIL
X99-0677-000		2	SCREW
X99-0682-000		1	SCREW
X99-0683-000		1	SCREW
X99-0685-000		2	SCREW
X99-0699-000		1	SCREW
XA4-9170-407		2	SCREW
XD2-1100-172		1	RING, RETAINING (E-TYPE)

CANON EOS 700 EOS 700 Q.D.

REF. NO. C12-8062
C12-8063

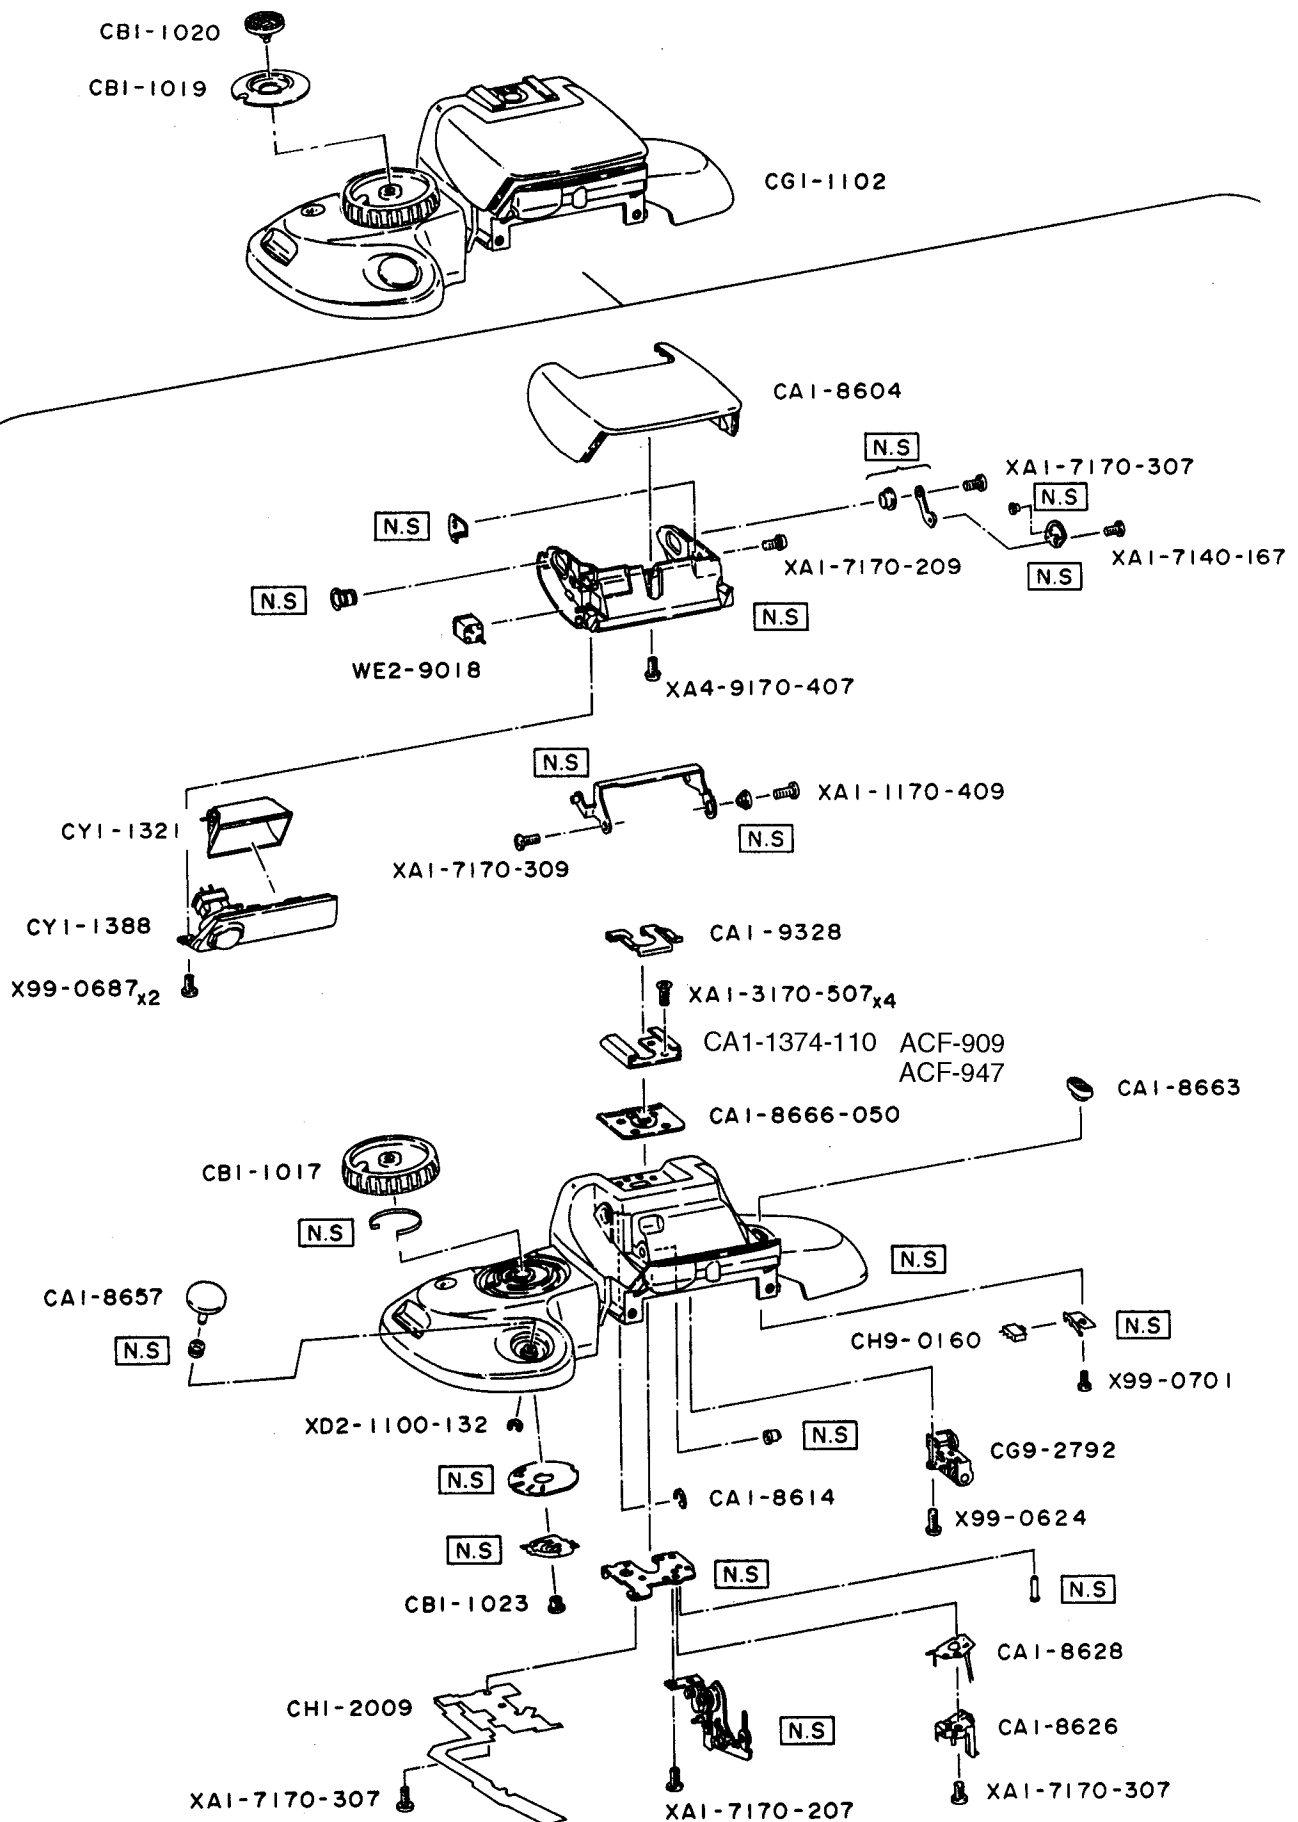


PARTS LIST


REF.NO.C12-8062,63

NEW PARTS NO.	CLASS	QTY	DESCRIPTION
CA1-1374-110	B	1	SHOE, ACCESSORY
CA1-8604-000	C	1	COVER, ST.
CA1-8614-000	E	1	CLASP
CA1-8626-000	E	1	CONTACT, ACC.SHOE
CA1-8628-000	E	1	CONTACT, ACC.SHOE GND
CA1-8657-000	C	1	BUTTON, RELEASE
CA1-8663-000	D	1	LEVER, ST.SW
CA1-8666-050	E	1	BASE, ACC.SHOE
CA1-9328-000	C	1	SPRING, PLATE
CB1-1017-000	C	1	DIAL, MAIN
CB1-1019-000	C	1	DIAL, MODE INDICATE
CB1-1020-000	C	1	SCREW, MAIN DIAL
CB1-1023-000		1	HOLDER, CLICK SPRING
CG1-1102-000	D	1	COVER ASS'Y, TOP
CG9-2792-000	E	1	MAGNET, FLASH
CH1-2009-000	D	1	FLEX, TOP COVER
CH9-0160-000	D	1	SWITCH, SLIDE
CY1-1321-000	D	1	REFLECTOR UNIT
CY1-1388-000	E	1	PANEL ASS'Y, FLASH
WE2-9018-000	E	1	COIL, TRIGGER
X99-0624-000		1	SCREW
X99-0687-000		2	SCREW
X99-0701-000		1	SCREW
XA1-1170-409		1	SCREW
XA1-3170-507		4	SCREW
XA1-7140-167		1	SCREW
XA1-7170-207		1	SCREW
XA1-7170-209		1	SCREW
XA1-7170-307		2	SCREW
XA1-7170-309		1	SCREW
XA4-9170-407		1	SCREW
XD2-1100-132		1	WASHER, RETAINING 1.3MM

CANON EOS 700 EOS 700 Q.D.

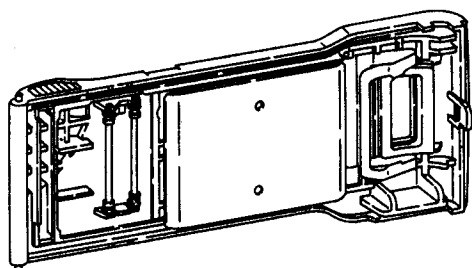 REF. NO. C12-8062
C12-8063


(See Pg. 4, 5)

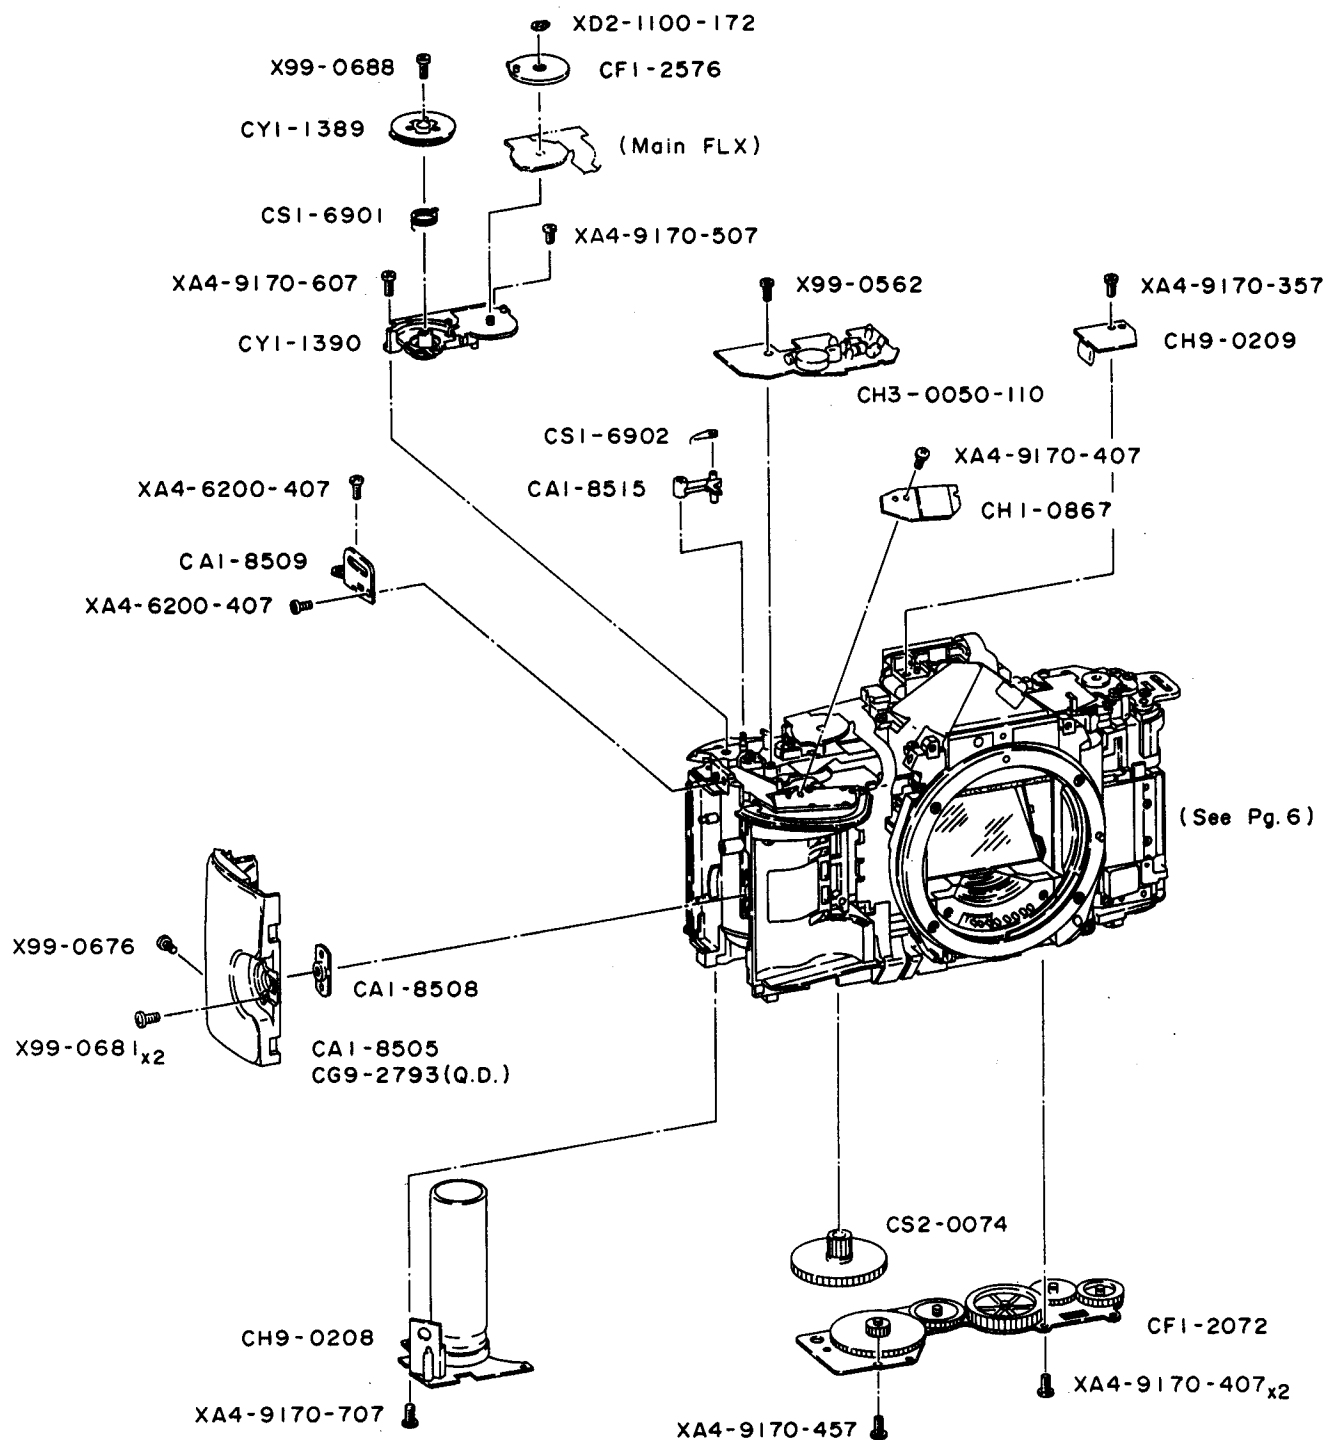

(See Pg. 6)


PARTS LIST

REF.NO.C12-8062,63


NEW PARTS NO.	CLASS	QTY	DESCRIPTION
CA1-8505-000	D	1	COVER, HINGE
CA1-8508-000	E	1	SOCKET, GRIP
CA1-8509-000	E	1	LUG, NECK STRAP
CA1-8515-000	E	1	LEVER, COUNTER DRIVE
CF1-2072-000	E	1	PLATE ASS'Y, GEAR
CF1-2576-000	D	1	CONTACT, MAIN SW
CG9-2793-000	D	1	COVER, HINGE
CH1-0867-000	D	1	RELEASE BOARD
CH3-0050-110	D	1	CONVERTER, DC/DC
CH9-0208-000	E	1	CBA, BOTTOM
CH9-0209-000	E	1	PRISM CBA, ROOF
CS1-6901-000	E	1	SPRING
CS1-6902-000	E	1	SPRING
CS2-0074-000	E	1	GEAR, PREWIND SUN
CY1-1389-000	D	1	COUNTER UNIT, FILM
CY1-1390-000	E	1	BASE UNIT, COUNTER
X99-0562-000		1	SCREW
X99-0676-000		1	SCREW
X99-0681-000		2	SCREW
X99-0688-000		1	SCREW
XA4-6200-407		1	SCREW
XA4-9170-357		2	SCREW
XA4-9170-407		1	SCREW
XA4-9170-457		3	SCREW
XA4-9170-507		1	SCREW
XA4-9170-607		1	SCREW
XA4-9170-707		1	SCREW
XD2-1100-172		1	RING, RETAINING (E-TYPE)

CANON EOS 700
EOS 700 Q.D.

REF. NO. C12-8062
C12-8063

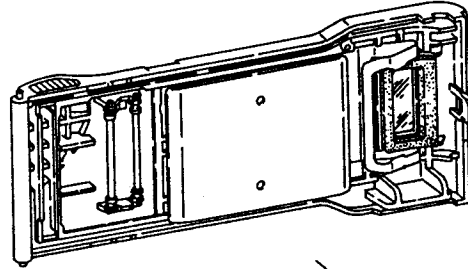

CAI-0446

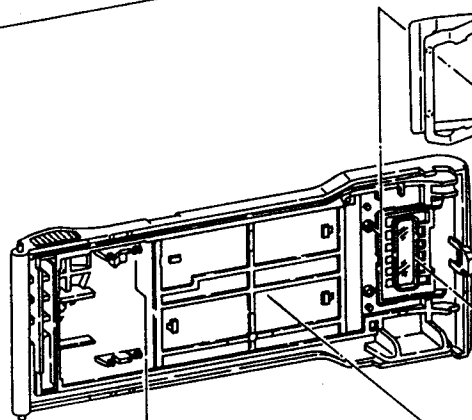

CAI-6523-060

CY4-0080

CY4-0081 x2

CB1-2748 x2

ACF-884

N.S.




CAI-8648

CAI-8651 x2

CAI-8645 x2

CAI-8651 x2

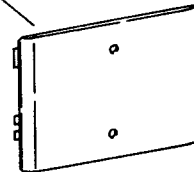

CFI-0423-001

ACF-922



PARTS LIST

REF.NO.C12-8062,63

NEW PARTS NO.	CLASS	QTY	DESCRIPTION
CA1-6523-060	E	1	HOLDER, FILM MAGAZINE
CA1-8645-000	D	2	ROLLER
CA1-8648-000	D	1	SHIELD, LIGHT
CA1-8651-000	E	4	HOLDER, FILM ROLLER
CB1-2748-000		2	SCREW
CF1-0423-001	D	1	PLATE, PRESSURE
CG1-0446-000	D	1	BACK COVER ASS'Y

CANON EOS 700 EOS 700 Q.D.

REF. NO. C12-8062
C12-8063

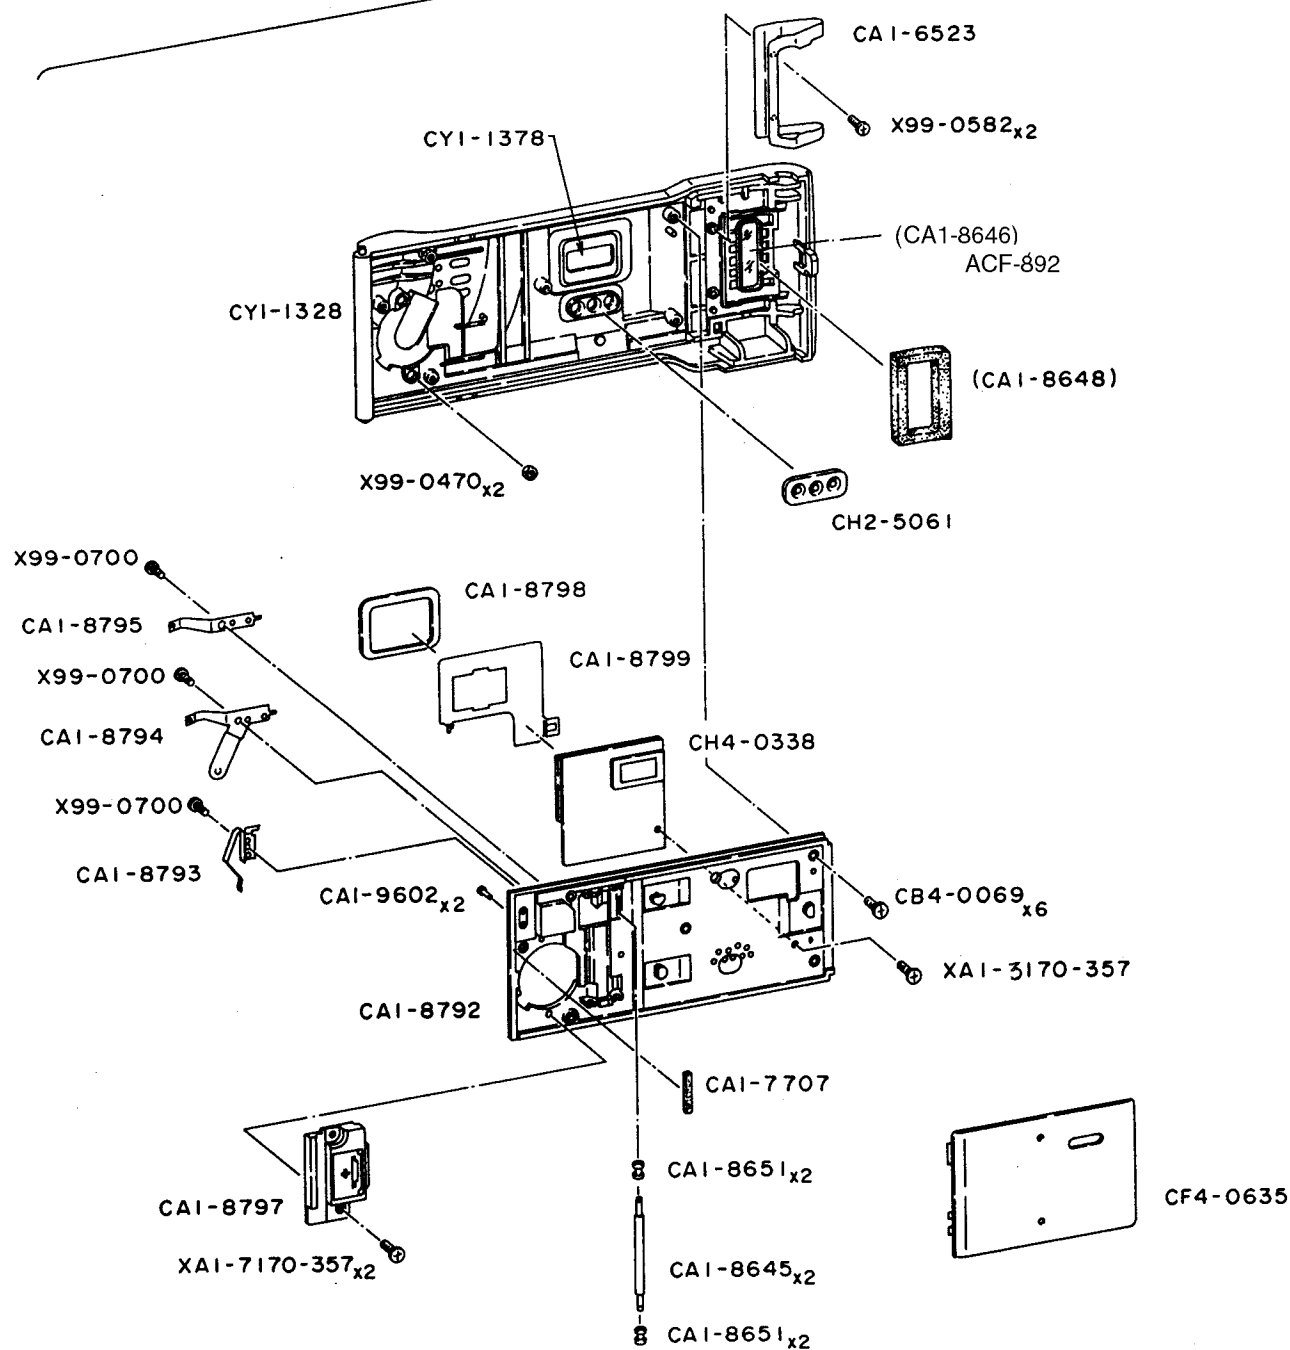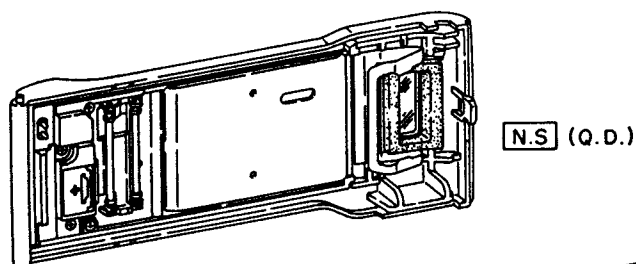


PARTS LIST

REF.NO.C12-8062,63

NEW PARTS NO.	CLASS	QTY	DESCRIPTION
CA1-6523-060	E	1	HOLDER, FILM MAGAZINE
CA1-7707-000	E	1	SHIELD, LIGHT
CA1-8645-000	D	2	ROLLER
CA1-8646-000	E	1	FILM, WINDOW
CA1-8648-000	D	1	SHIELD, LIGHT
CA1-8651-000	E	4	HOLDER, FILM ROLLER
CA1-8792-000	D	1	COVER, INNER
CA1-8793-000	E	1	CONTACT 1, DATE BATTERY
CA1-8794-000	E	1	CONTACT 2, DATE BATTERY
CA1-8795-000	E	1	CONTACT, DATE TRIGGER
CA1-8797-000	D	1	COVER, DATE BATTERY
CA1-8798-000	E	1	SHIELD, LIGHT DATE WINDOW
CA1-8799-000	E	1	SHIELD, DATE
CA1-9602-000	D	2	PIN, CONTACT
CB4-0069-000		6	SCREW
CF4-0635-000	D	1	PLATE, PRESSURE
CH2-5061-000	E	1	CONTACT, RUBBER
CH4-0338-000	E	1	DATE CBA
CY1-1328-000	D	1	COVER, BACK (QD)
CY1-1378-000	D	1	WINDOW, DATE
X99-0470-000		2	NUT
X99-0582-000		2	SCREW
X99-0700-000		3	SCREW
XA1-3170-357		1	SCREW
XA1-7170-357		2	SCREW

CANON EOS 700 EOS 700 Q.D.

REF. NO. C12-8062
C12-8063

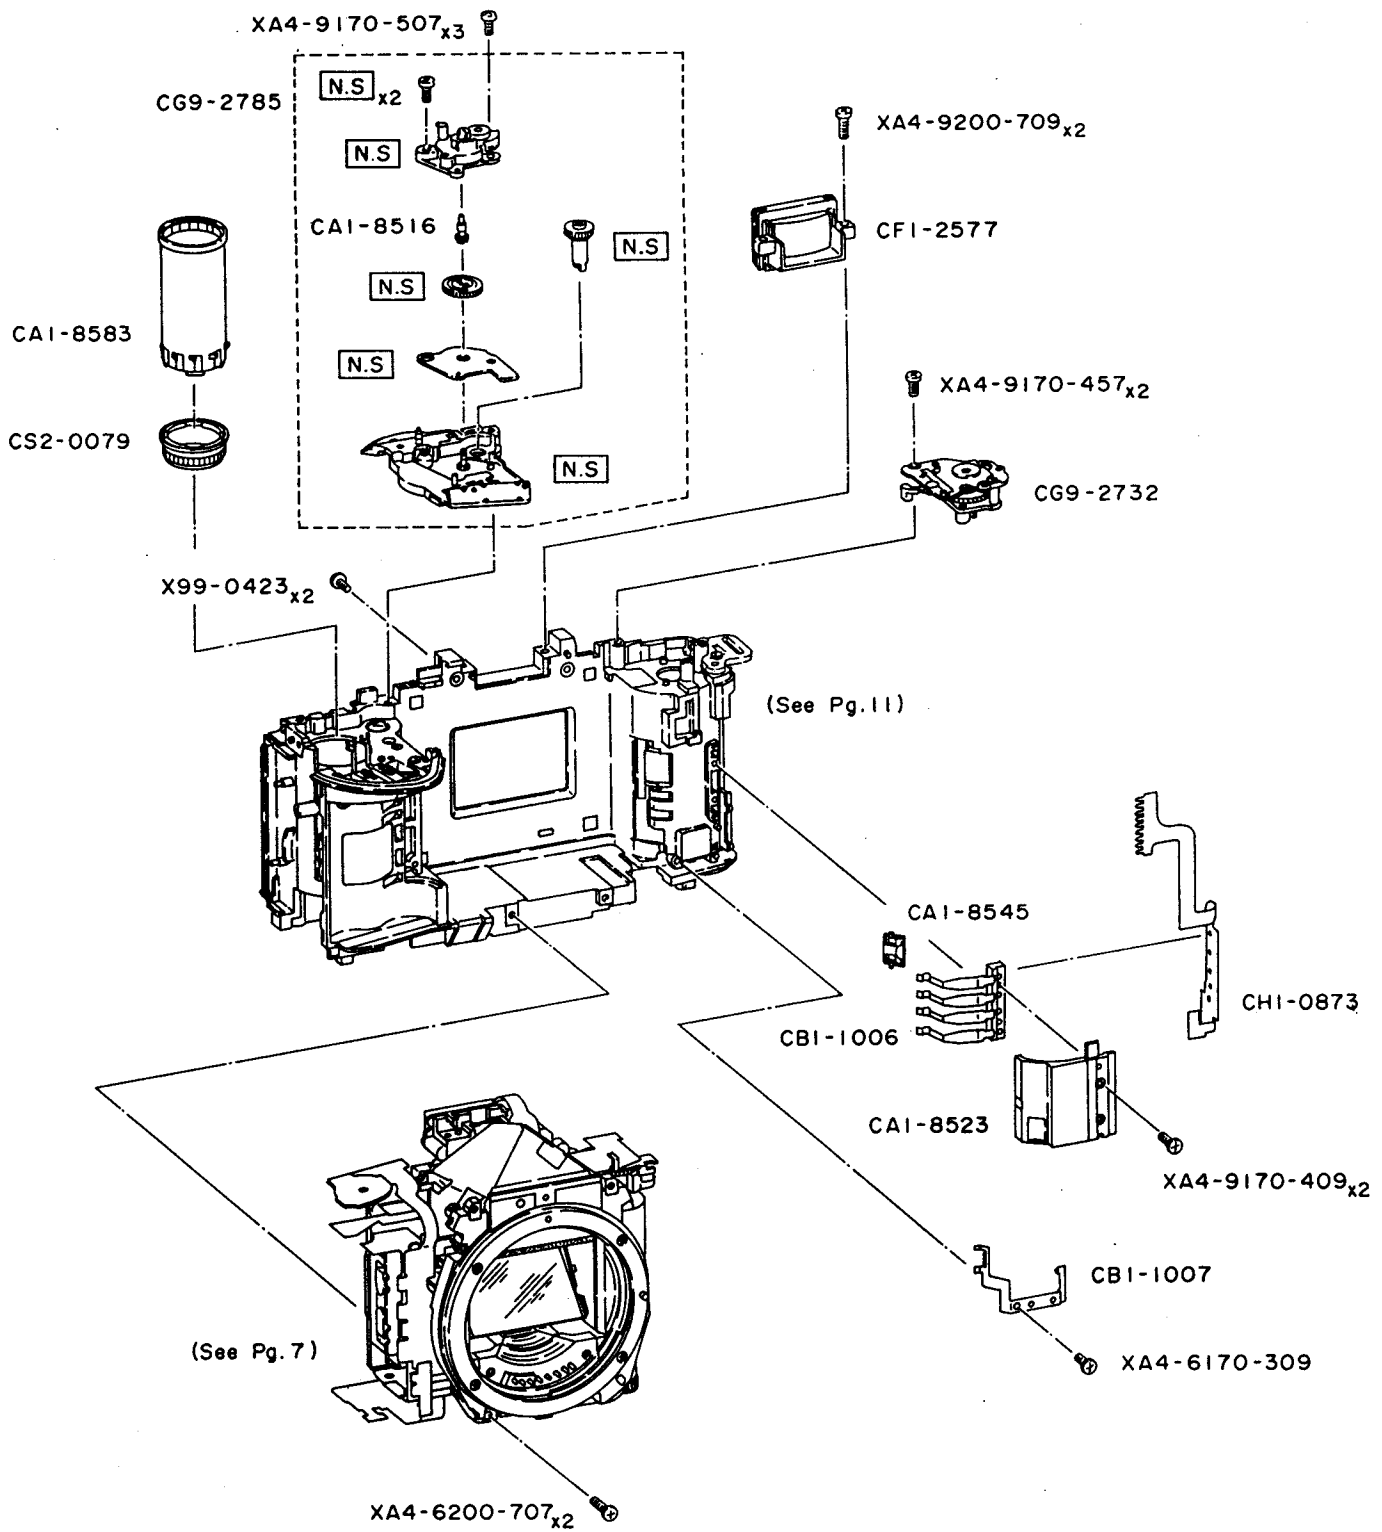

PARTS LIST

REF.NO.C12-8062,63


NEW PARTS NO.	CLASS	QTY	DESCRIPTION
CA1-8516-000	C	1	GEAR, FILM COUNTER
CA1-8523-000	E	1	COVER, DX
CA1-8545-000	E	1	SEAT, DX
CA1-8583-000	E	1	SPOOL
CB1-1006-000	E	1	CONTACT, DX
CB1-1007-000	E	1	CONTACT, CARTRIDGE
CF1-2577-000	D	1	EYEPiece
CG9-2732-000	E	1	REWIND ASS'Y
CG9-2785-000	E	1	BASE ASS'Y, SIGNAL
CH1-0873-000	E	1	FLEX, D
CS2-0079-000	E	1	GEAR, SPOOL
X99-0423-000		2	SCREW
XA4-6170-309		1	SCREW
XA4-6200-407		2	SCREW
XA4-9170-409		2	SCREW
XA4-9170-457		2	SCREW
XA4-9170-507		3	SCREW
XA4-9200-709		2	SCREW

CANON EOS 700 EOS 700 Q.D.

REF. NO. C12-8062
C12-8063

CA1-7569-000
CA1-8535-000 detail


 A	A	SIZE
	0.05 mm	(005)
	0.10 mm	(010)
	0.12 mm	(012)
	0.15 mm	(015)
	0.20 mm	(020)

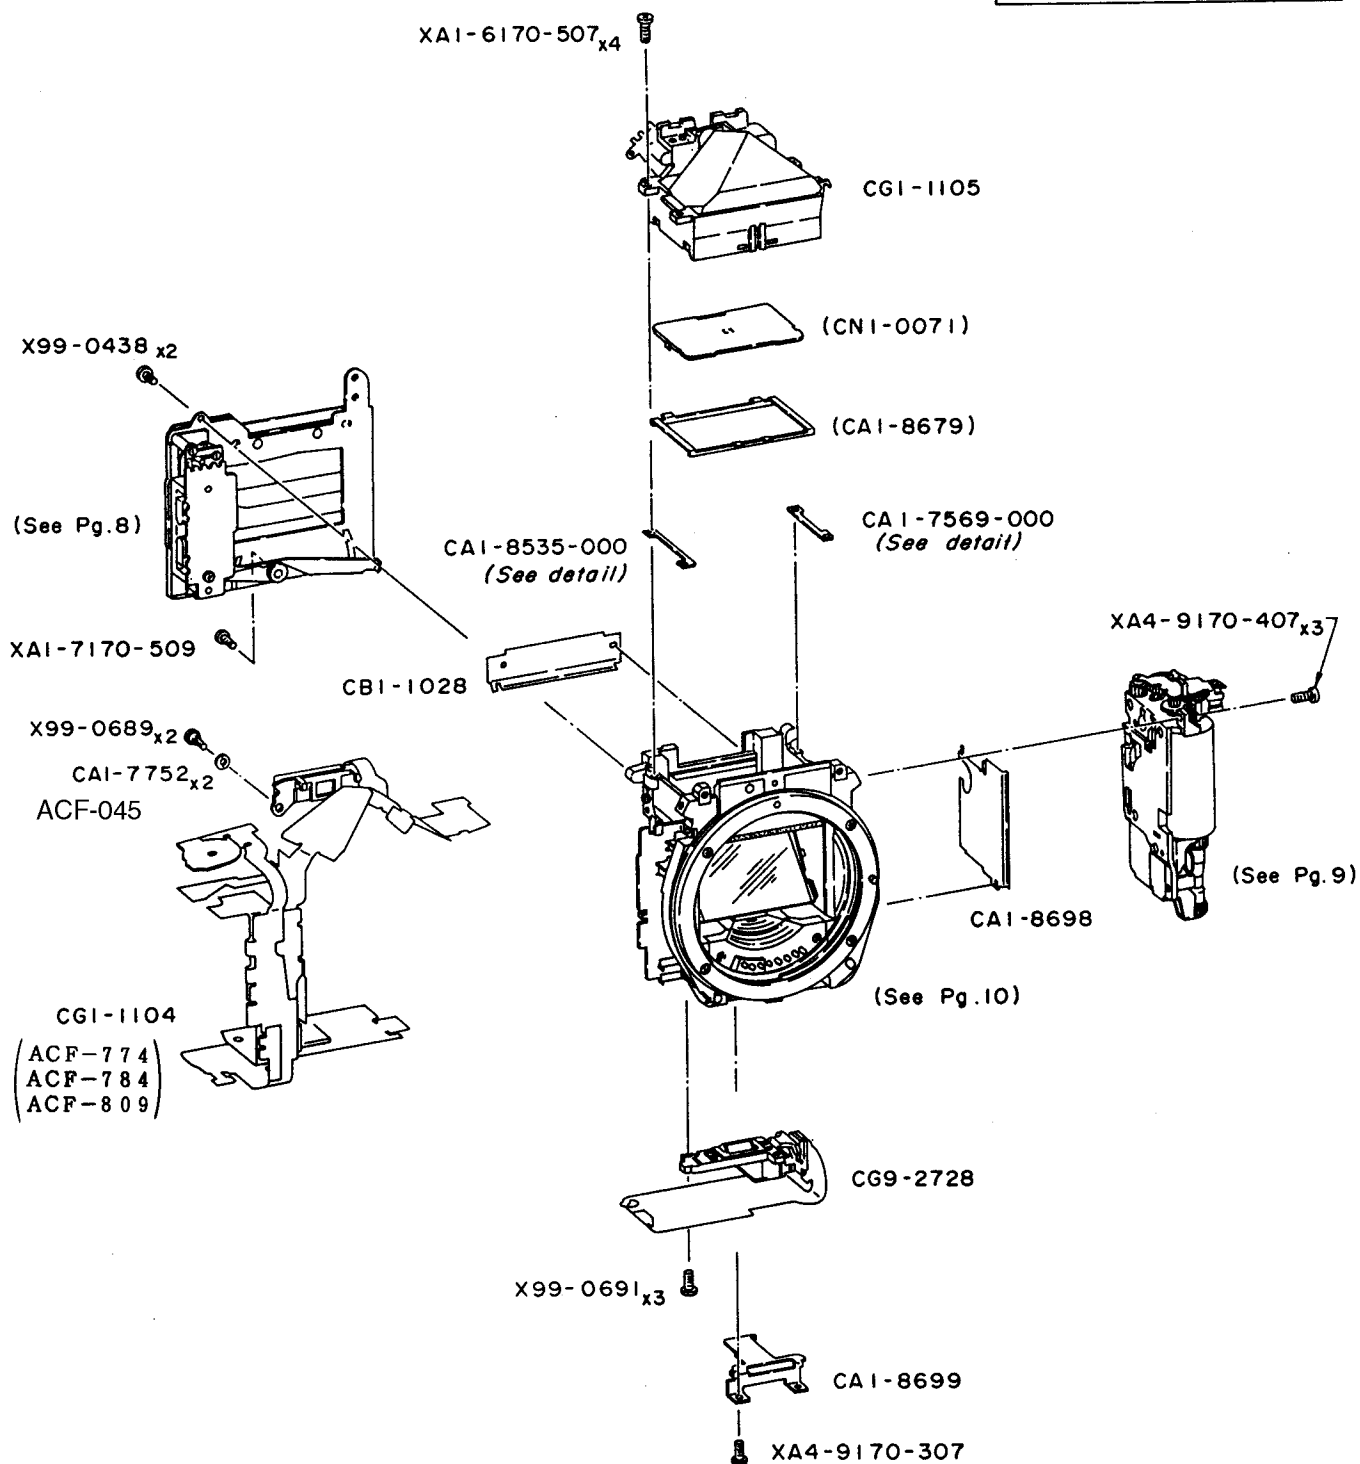

PARTS LIST

REF.NO.C12-8062,63

NEW PARTS NO.	CLASS	QTY	DESCRIPTION
CA1-7569-000(XXX)	E	1	WASHER, ADJUSTING
CA1-7752-000	E	2	WASHER, WAVE
CA1-8535-000(XXX)	E	1	WASHER, ADJUSTING
CA1-8679-000	E	1	HOLDER, FOCUSING SCREEN
CA1-8698-000	E	1	SHIELD, LIGHT
CA1-8699-000	E	1	BASE, CONNECTING
CB1-1028-000	E	1	SHIELD, LIGHT
CG1-1104-000	E	1	FLEX ASS'Y, MAIN
CG1-1105-000	D	1	PRISM ASS'Y, ROOF
CG9-2728-000	E	1	AF ASS'Y
CN1-0071-000	C	1	SCREEN, FOCUSING
X99-0438-000		2	SCREW
X99-0689-000		2	SCREW
X99-0691-000		3	SCREW
XA1-6170-507		4	SCREW
XA1-7170-509		1	SCREW
XA1-9170-407		3	SCREW
XA4-9170-307		1	SCREW

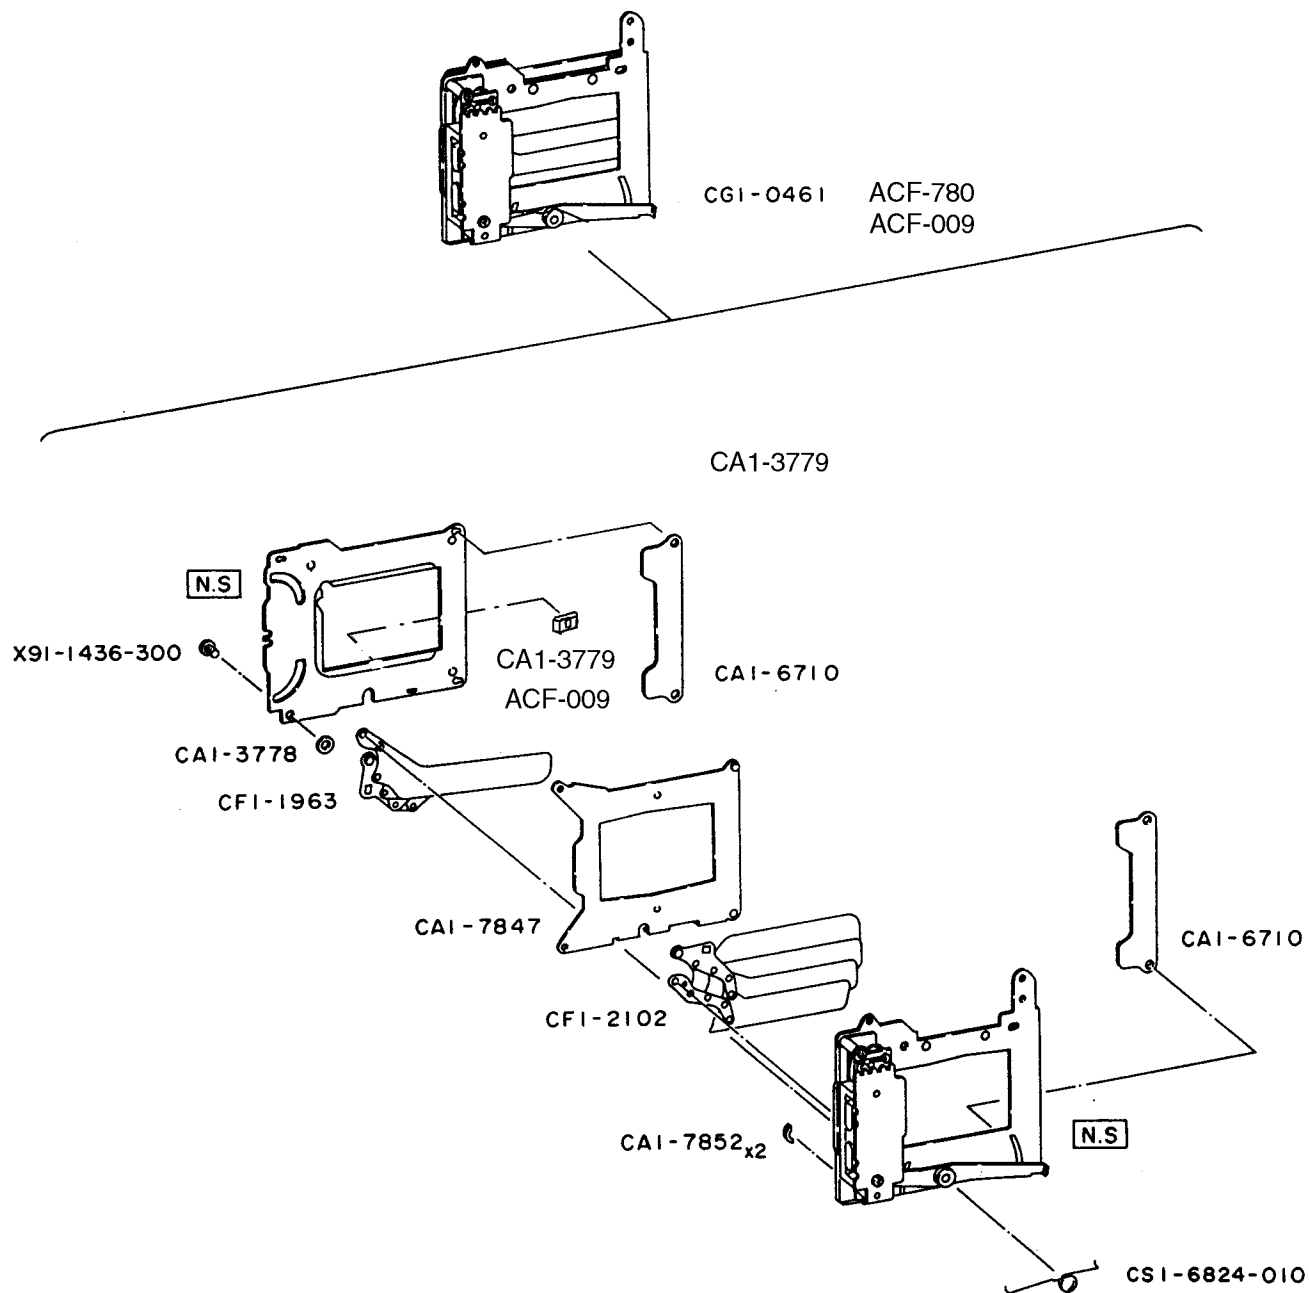CANON EOS 700
EOS 700 Q.D.REF. NO. C12-8062
C12-8063

PARTS LIST

REF.NO.C12-8062,63


NEW PARTS NO.	CLASS	QTY	DESCRIPTION
CA1-3778-000	E	1	RUBBER, STOPPER-A
CA1-3779-000	E	1	RUBBER, STOPPER-B
CA1-6710-000	E	2	SPACER
CA1-7847-000	E	1	PLATE, SEPARATOR
CA1-7852-000	E	2	STOPPER
CF1-1963-000	C	1	CURTAIN, SHUTTER
CF1-2102-000	C	1	CURTAIN, SHUTTER, PETP
CG1-0461-000	E	1	SHUTTER UNIT
CS1-6824-010	E	1	SPRING
X91-1436-300		1	SCREW

CANON EOS 700 EOS 700 Q.D.

 REF. NO. C12-8062
C12-8063

CAI-7809-000 detail

A	A	SIZE
	ø 2.00 mm	(200)
	ø 2.20 mm	(220)
	ø 2.40 mm	(240)
	ø 2.60 mm	(260)
	ø 2.80 mm	(280)
	ø 3.00 mm	(300)
	ø 3.20 mm	(320)
	ø 3.40 mm	(340)

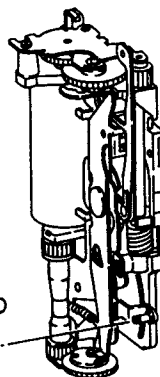

CY1-1418

CAI-7809-000
(See detail)

XD2-1100-102

XA4-9170-307_{x2}

N.S.

N.S.

N.S.

CS2-0091

CS2-0092

CS2-0094

XD2-1100-102

CS2-0030

XA4-9170-407_{x2}

N.S.

N.S.

CS2-0031

XA4-9170-307

CS2-5088

N.S.

N.S.

CHI-2006

CY1-1332

CAI-8743

CS2-0097

N.S.

N.S.

PARTS LIST

REF.NO.C12-8062,63


NEW PARTS NO.	CLASS	QTY	DESCRIPTION
CA1-7809-000(XXX)	E	1	COLLAR, SHUTTER CHARGE LEVER
CA1-8743-000	D	1	COLLAR, SHUTTER CHARGE
CH1-2006-000	E	1	BOARD, CONTACT
CS2-0030-000	E	1	GEAR, WIND
CS2-0031-000	E	1	GEAR, WORM
CS2-0091-000	E	1	GEAR-1
CS2-0092-000	E	1	GEAR, SUN-1
CS2-0093-000	E	1	GEAR, SUN-2
CS2-0094-000	E	1	GEAR, PLANETARY-1
CS2-0095-000	E	1	GEAR, PLANETARY-2
CS2-0097-000	E	1	GEAR, CHARGE
CS2-5088-000	E	1	SPRING, POWER LEVER
CY1-1332-000	D	1	GEAR, MIRROR UP-DOWN
CY1-1418-000	E	1	POWER UNIT
WL1-0082-000	E	1	MOTOR
XA4-9170-307		3	SCREW
XA4-9170-407		2	SCREW
XD2-1100-102		3	RING, E

CANON EOS 700 EOS 700 Q.D.

 REF. NO. C12-8062
C12-8063

CAI-7795-000 detail

	A	SIZE
Main	φ 2.50 mm	(025)
	φ 2.60 mm	(026)
	φ 2.70 mm	(027)
	φ 2.80 mm	(028)
	φ 2.90 mm	(029)
	φ 3.00 mm	(030)
	φ 3.10 mm	(031)
	φ 3.20 mm	(032)

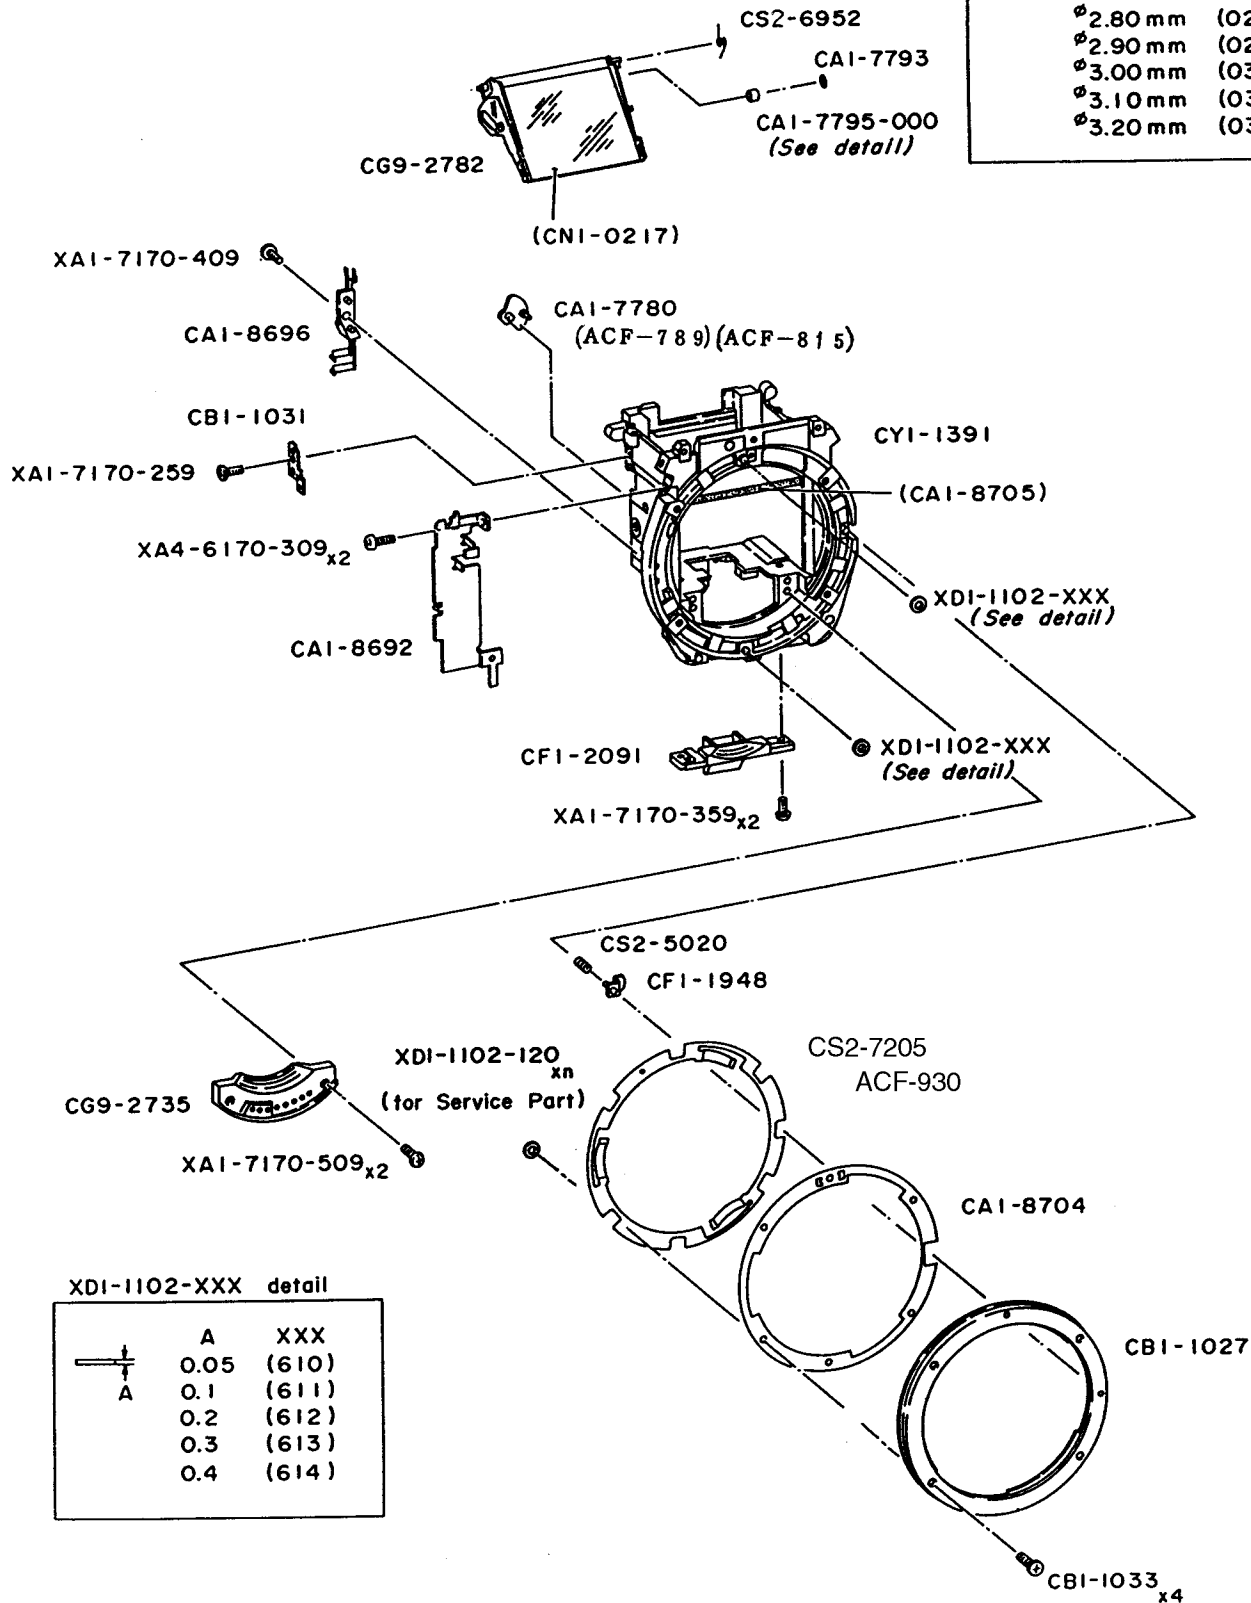

XDI-1102-XXX detail

	A	XXX
	0.05	(610)
	0.1	(611)
	0.2	(612)
	0.3	(613)
	0.4	(614)

PARTS LIST


REF.NO.C12-8062,63

NEW PARTS NO.	CLASS	QTY	DESCRIPTION
CA1-7780-000	E	1	INTERLOCK, LENS MOTOR
CA1-7793-000	E	1	RING, C
CA1-7795-000(XXX)	E	1	COLLAR, MIRROR UP
CA1-8692-000	E	1	WING
CA1-8696-000	E	1	CONTACT, INTERLOCK
CA1-8704-000	E	1	SPACER, MOUNT
CA1-8705-000	E	1	CUSHION
CB1-1027-000	C	1	MOUNT, BODY
CB1-1031-000	E	1	HINGE, MIRROR
CB1-1033-000		4	SCREW
CF1-1948-000	E	1	LEVER, LENS LOCK
CF1-2091-000	E	1	SENSOR ASS'Y, FLASH
CG9-2735-000	E	1	CONTACT ASS'Y
CG9-2782-000	D	1	MIRROR ASS'Y
CN1-0217-000	D	1	MIRROR
CS2-5020-000	E	1	SPRING, COIL
CS2-6952-000	E	1	SPRING
CS2-7205-000	D	1	SPRING, MOUNT
CY1-1391-000	D	1	MIRROR BOX
XA1-7170-259		1	SCREW
XA1-7170-359		2	SCREW
XA1-7170-409		1	SCREW
XA1-7170-509		2	SCREW
XA4-6170-309		2	SCREW
XD1-1102-120			WASHER
XD1-1102-XXX			WASHER

CANON EOS 700 EOS 700 Q.D.


REF. NO. C12-8062
C12-8063

CG9-2731 detail

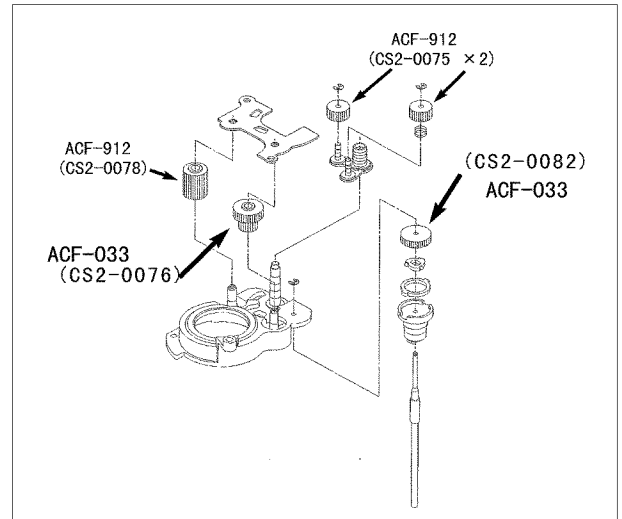

CS1-6535-000 detail

A	A	SIZE
	110°	(110)
	115°	(115)
	120°	(120)

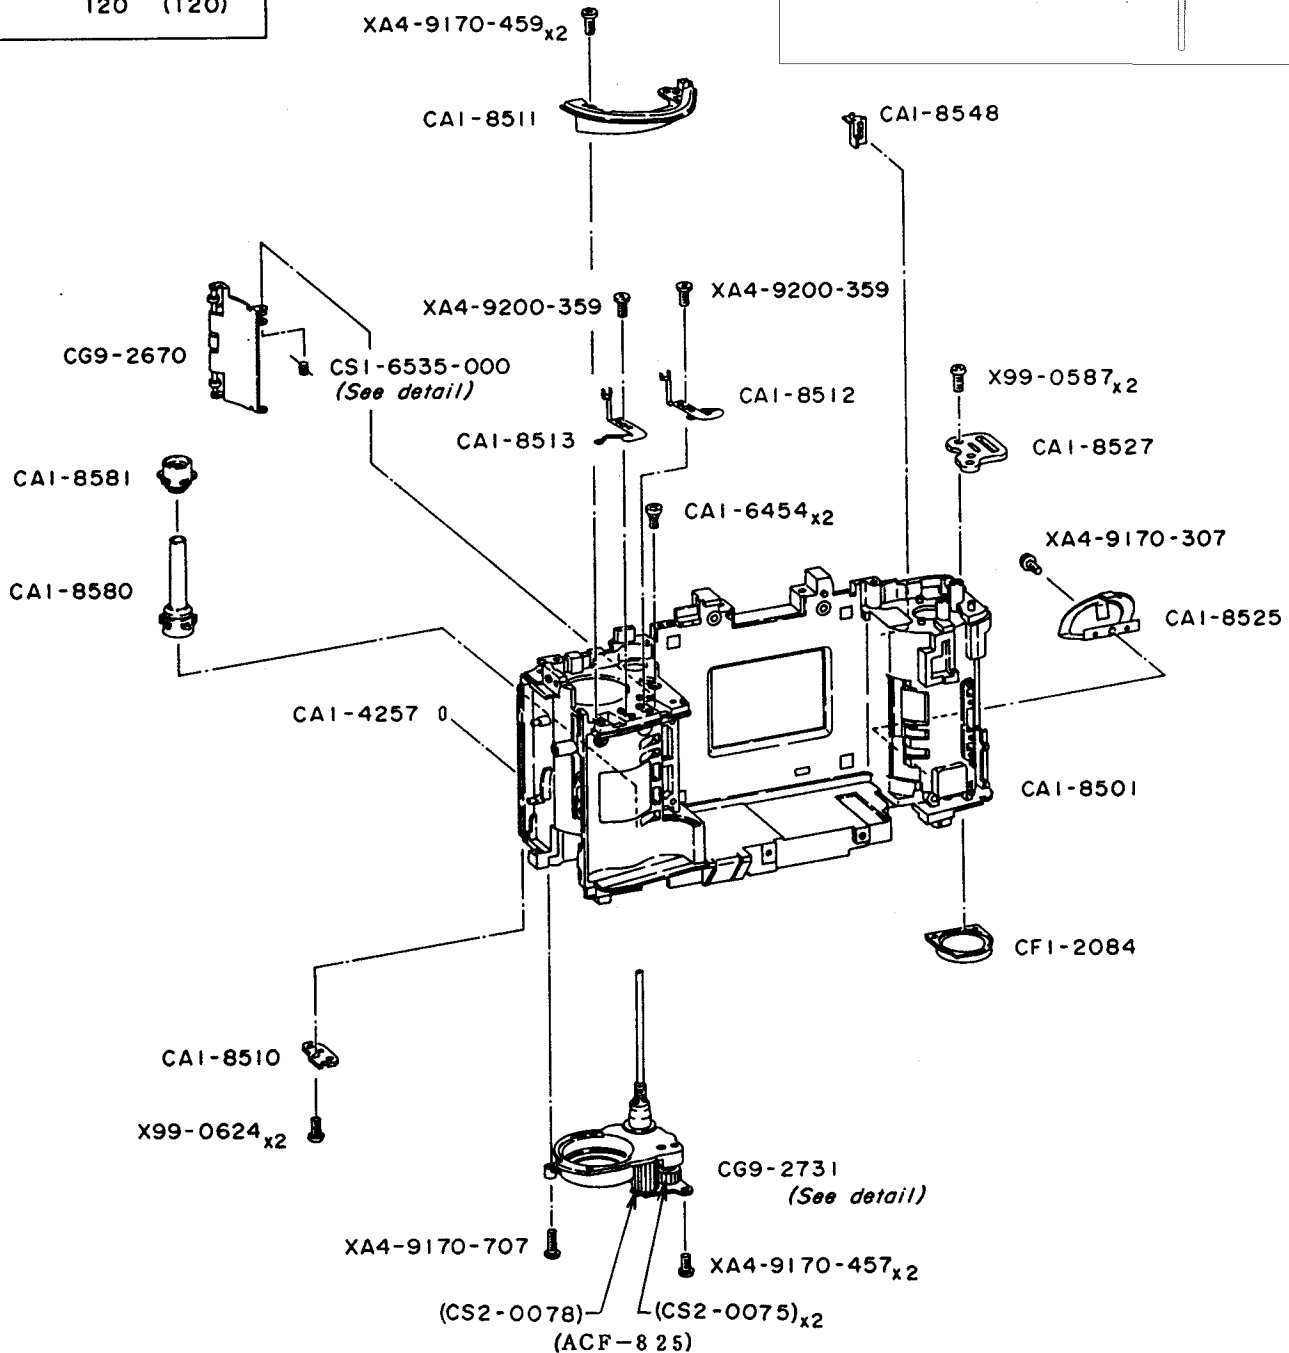

PARTS LIST

REF.NO.C12-8062,63


NEW PARTS NO.	CLASS	QTY	DESCRIPTION
CA1-4257-000	D	1	SEAL, FILM
CA1-6454-000	E	2	SCREW, AL COVER SHAFT
CA1-8501-000	E	1	BODY
CA1-8510-000	E	1	HINGE, BACK COVER
CA1-8511-000	E	1	COVER, BATTERY
CA1-8512-000	E	1	CONTACT, BATTERY
CA1-8513-000	E	1	CONTACT, BATTERY
CA1-8525-000	E	1	SPRING, PLATE
CA1-8527-000	E	1	LUG, NECK STRAP
CA1-8548-000	E	1	HOLDER, CASSETTE
CA1-8580-000	E	1	SPROKET-1
CA1-8581-000	E	1	SPROKET-2
CF1-2084-000	E	1	BEEPER
CG9-2670-000	D	1	COVER ASS'Y, AL
CG9-2731-000	E	1	PREWIND ASS'Y
CS1-6535-000(XXX)	E	1	SPRING
XA4-9170-307		1	SCREW
XA4-9170-457		2	SCREW
XA4-9170-459		2	SCREW
XA4-9170-707		1	SCREW
XA4-9200-359		2	SCREW
X99-0578-000		2	SCREW
X99-0624-000		2	SCREW
CS2-0075-000	E	2	GEAR-1
CS2-0078-000	E	1	GEAR-2
CS2-0076-000	E	1	GEAR, SPRO SECOND STEPS
CS2-0082-000	E	1	GEAR, ONE WAY

CANON EOS 700, 700 Q.D. (ACC)


C46-1461 SEMI HARD CASE EH4-S

C46-1462 SEMI HARD CASE EH4-L

C46-1463 SEMI HARD CASE EH4-LL

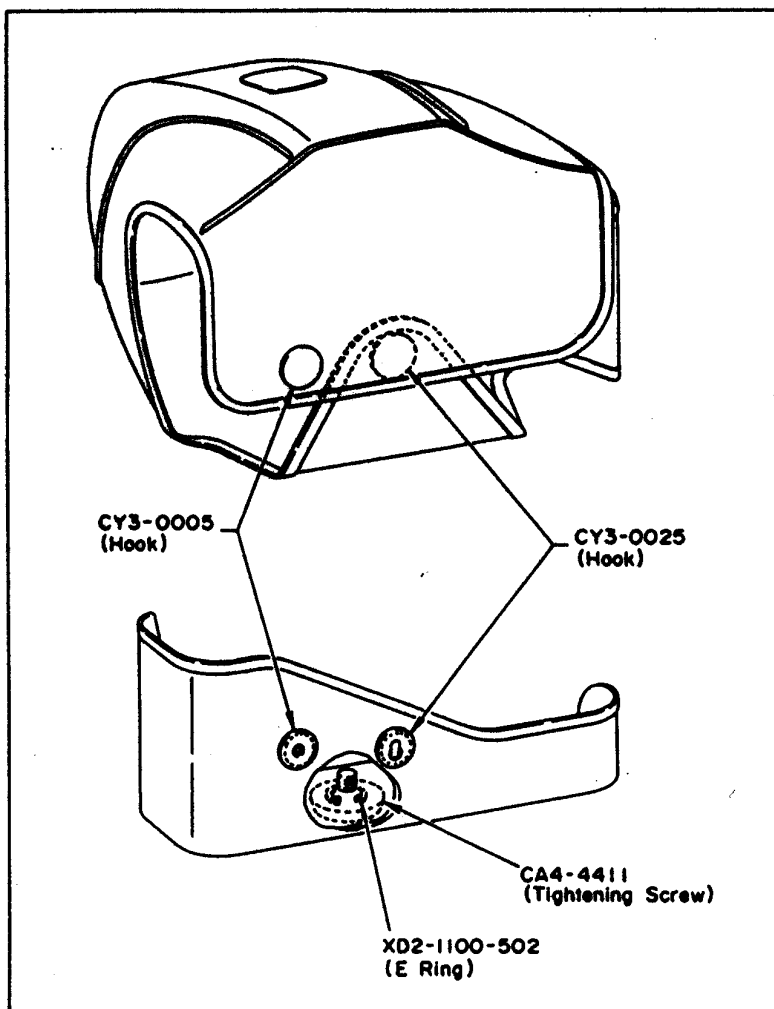

C56-1461 WIDE STRAP EW-1

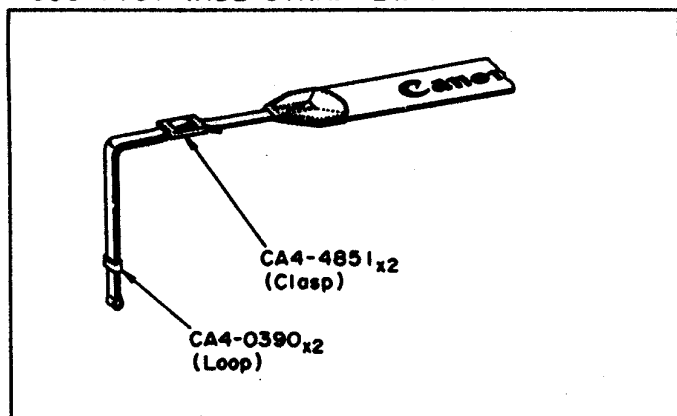

ELECTRIC PARTS LIST

REF.NO.C12-8062,63

NEW	SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARK
	IC-1	CH4-0211-000	D	1 IC		LC4021
	IC-2	CH4-0333-000	D	1 IC		T1913F
	IC-3	WA3-5208-000	D	1 IC		HCMC74HC86F
	IC-5	CH4-0218-000	D	1 IC		MPC1710
	IC-6	CH4-0213-000	D	1 IC		SFX10
	IC-7	CH4-0560-000	D	1 IC		LC4067A
	OSC	WK2-0541-000	E	1 OSCILLATOR, FAR		12MHZ
	TR1,2	CH4-0214-000	D	2 TRANSISTOR		HS5143
		CH2-3463-000		LEAD		SHIELD
		CH2-3496-000		LEAD		GREEN
		CH2-3497-000		LEAD		RED
		CH2-3498-000		LEAD		TRANSPARENT
		Y11-3702-000		LEAD		BLACK
		Y11-3703-000		LEAD		RED
		Y11-3902-000		LEAD		BLACK
		Y11-3904-000		LEAD		PINK
		Y11-3906-000		LEAD		ORANGE
		Y11-3909-000		LEAD		GREEN
		Y11-3910-000		LEAD		SKY BLUE
		Y11-3911-000		LEAD		BLUE
		Y11-3912-000		LEAD		PURPLE
		Y11-3913-000		LEAD		BROWN
		Y11-3914-000		LEAD		GRAY
		Y11-4401-000		LEAD		WHITE
		Y11-4702-000		LEAD		BLACK
		Y11-4703-000		LEAD		RED
		Y11-4902-000		LEAD		BLACK
		Y11-4903-000		LEAD		RED
		Y11-4904-000		LEAD		PINK
		Y11-4906-000		LEAD		ORANGE
		Y11-4907-000		LEAD		YELLOW
		Y11-5001-000		LEAD		WHITE
		Y11-5011-000		LEAD		BLUE