



 
EOS 55	REF.NO. C12-8281
EOS 55 (BLACK)	C12-8282
ELAN II E	C12-8283
ELAN II E QD	C12-8284
EOS 50 E	C12-8286
EOS 50 E QD	C12-8287
EOS 50 E (BLACK)	C12-8288
ELAN II	C12-8293
ELAN II QD	C12-8294
EOS 50	C12-8296
EOS 50 QD	C12-8297
SEMI HARD CASE EH9-L	C46-1922
WIDE STRAP EW-100BB	C56-1641
BATTERY PACK BP-50	C50-1901

PARTS CATALOG

CANON

EOS 55 / (BLACK)
 ELAN II E / QD
 EOS 50 E / QD
 EOS 50 E (BLACK)
 ELAN II / QD
 EOS 50 / QD

REF. C12-8281, 8282
 C12-8283, 8284
 C12-8286, 8287
 C12-8288
 C12-8293, 8294
 C12-8296, 8297

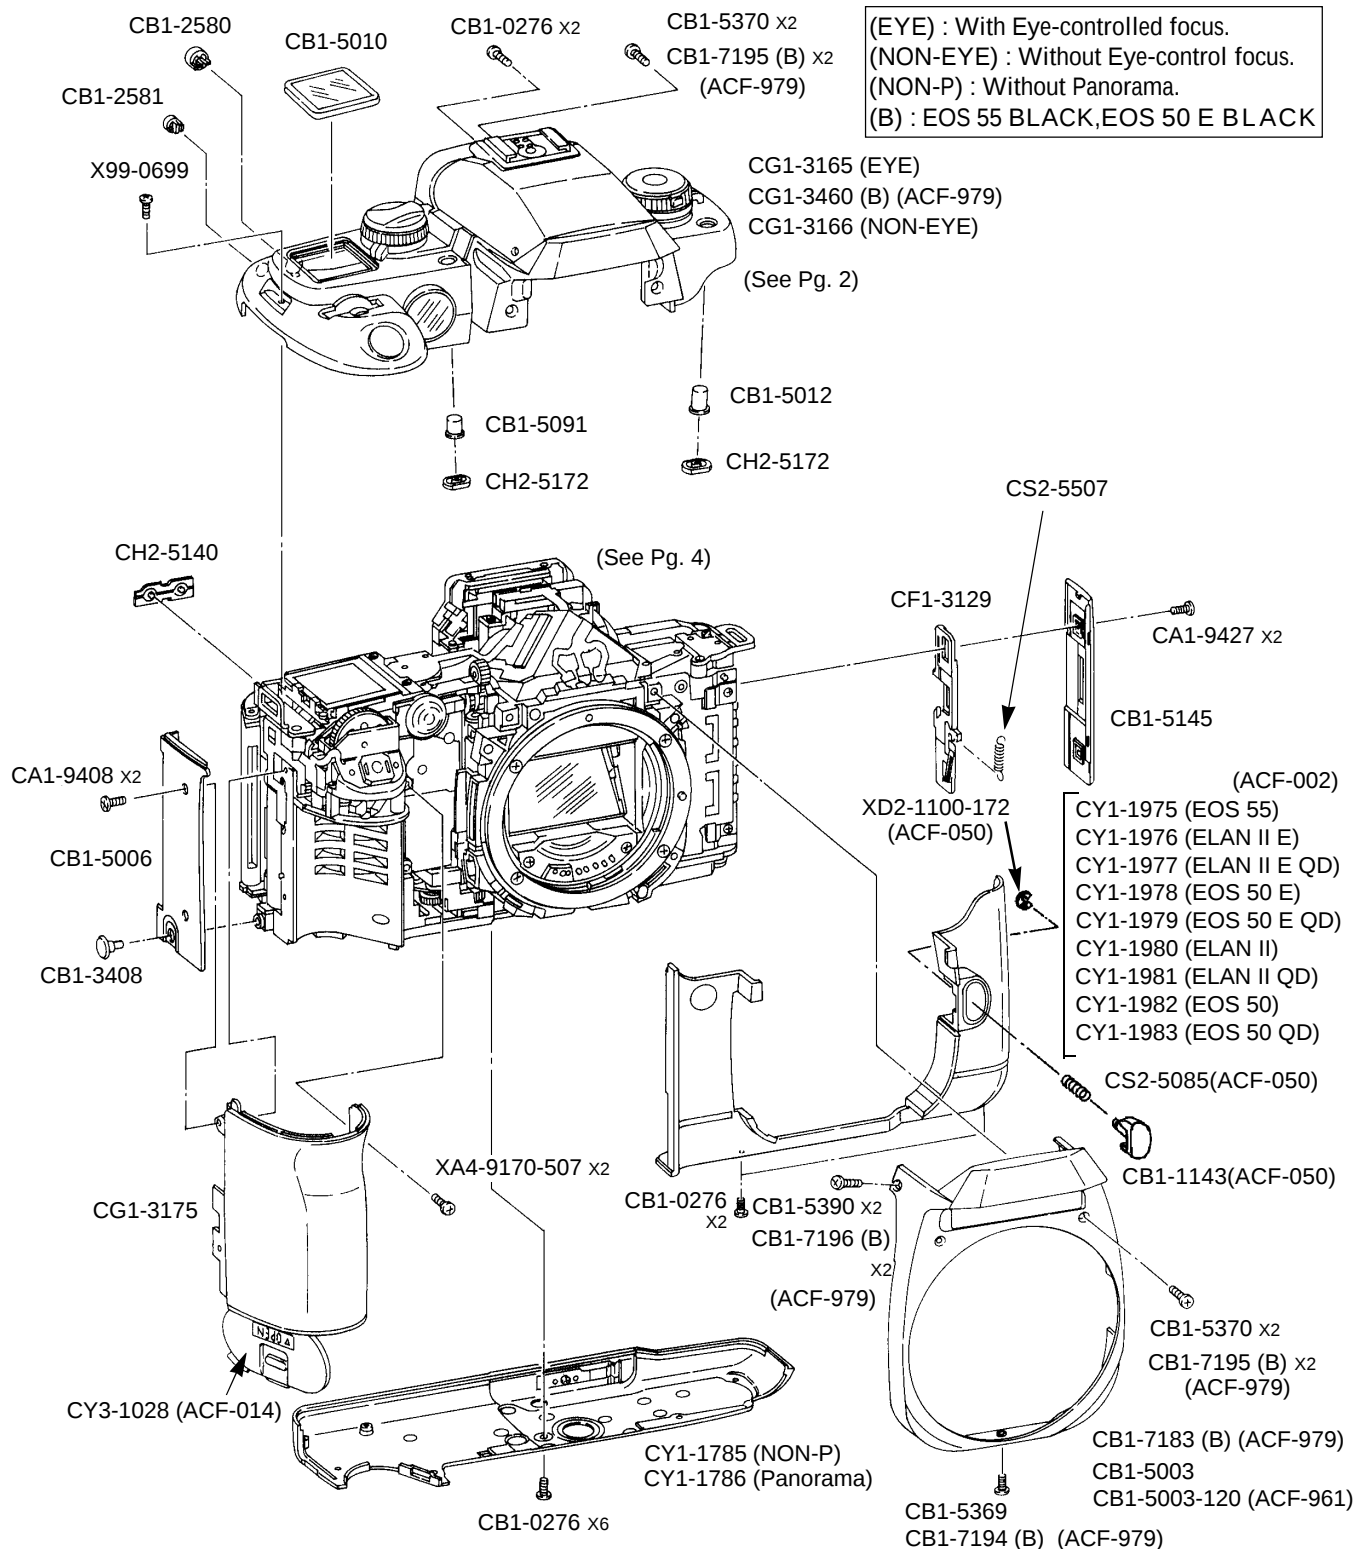

REF.No.C12-8281,8282
 C12-8283,8284
 C12-8286,8287
 C12-8288
 C12-8293,8294
 C12-8296,8297


PARTS LIST

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9408-000		2	SCREW
	CA1-9427-000		2	SCREW
	CB1-0276-000		10	SCREW
	CB1-1143-000	C	1	BUTTON, LENS RELEASE
	CB1-2580-000	E	1	BUTTON, AE LOCK
	CB1-2581-000	E	1	BUTTON, CAL
	CB1-3408-000	C	1	CAP, REMOTE
	CB1-5003-000	C	1	COVER, MOUNT
	CB1-5003-120	D	1	COVER, MOUNT
	CB1-5006-000	D	1	COVER, HINGE
	CB1-5010-000	C	1	WINDOW, LCD
	CB1-5012-000	E	1	BUTTON, TOP 1
	CB1-5091-000	E	1	BUTTON, TOP 2
	CB1-5145-000	D	1	COVER, BACK COVER LATCH
	CB1-5369-000		1	SCREW
	CB1-5370-000		4	SCREW
	CB1-5390-000		2	SCREW
	CB1-7183-000	D	1	COVER, MOUNT (Black)
	CB1-7194-000	D	1	SCREW
	CB1-7195-000	D	4	SCREW
	CB1-7196-000	D	2	SCREW
	CF1-3129-000	E	1	LEVER, BACK COVER LATCH
	CG1-3165-000	D	1	COVER ASS'Y, TOP (EYE)
	CG1-3166-000	D	1	COVER ASS'Y, TOP (NON-EYE)
	CG1-3175-000	D	1	GRIP UNIT
	CG1-3460-000	D	1	COVER ASS'Y, TOP (Black)
	CH2-5140-000	D	1	CONTACT, RUBBER
	CH2-5172-000	D	2	CONTACT, RUBBER
	CS2-5085-000	D	1	SPRING, COIL
	CS2-5507-000	E	1	SPRING, COIL
	CY1-1785-000	C	1	COVER, BOTTOM (NON-P)
	CY1-1786-000	C	1	COVER, BOTTOM (PANORAMA)
	CY1-1975-000	D	1	COVER, FRONT (EOS 55)
	CY1-1976-000	D	1	COVER, FRONT (ELAN II E)
	CY1-1977-000	D	1	COVER, FRONT (ELAN II E QD)
	CY1-1978-000	D	1	COVER, FRONT (EOS 50E)
	CY1-1979-000	D	1	COVER, FRONT (EOS 50E QD)
	CY1-1980-000	D	1	COVER, FRONT (ELAN II)
	CY1-1981-000	D	1	COVER, FRONT (ELAN II QD)
	CY1-1982-000	D	1	COVER, FRONT (EOS 50)
	CY1-1983-000	D	1	COVER, FRONT (EOS 50 QD)
	CY3-1028-000	D	1	COVER ASS'Y, BATTERY
	X99-0699-000		1	SCREW
	XA4-9170-507		2	SCREW
	XD2-1100-172	F	1	RETAINING RING (E-TYPE), M1.7

CANON

EOS 55 / (BLACK)
 ELAN II E / QD
 EOS 50 E / QD
 EOS 50 E (BLACK)

 REF. C12-8281, 8282
 C12-8283, 8284
 C12-8286, 8287
 C12-8288

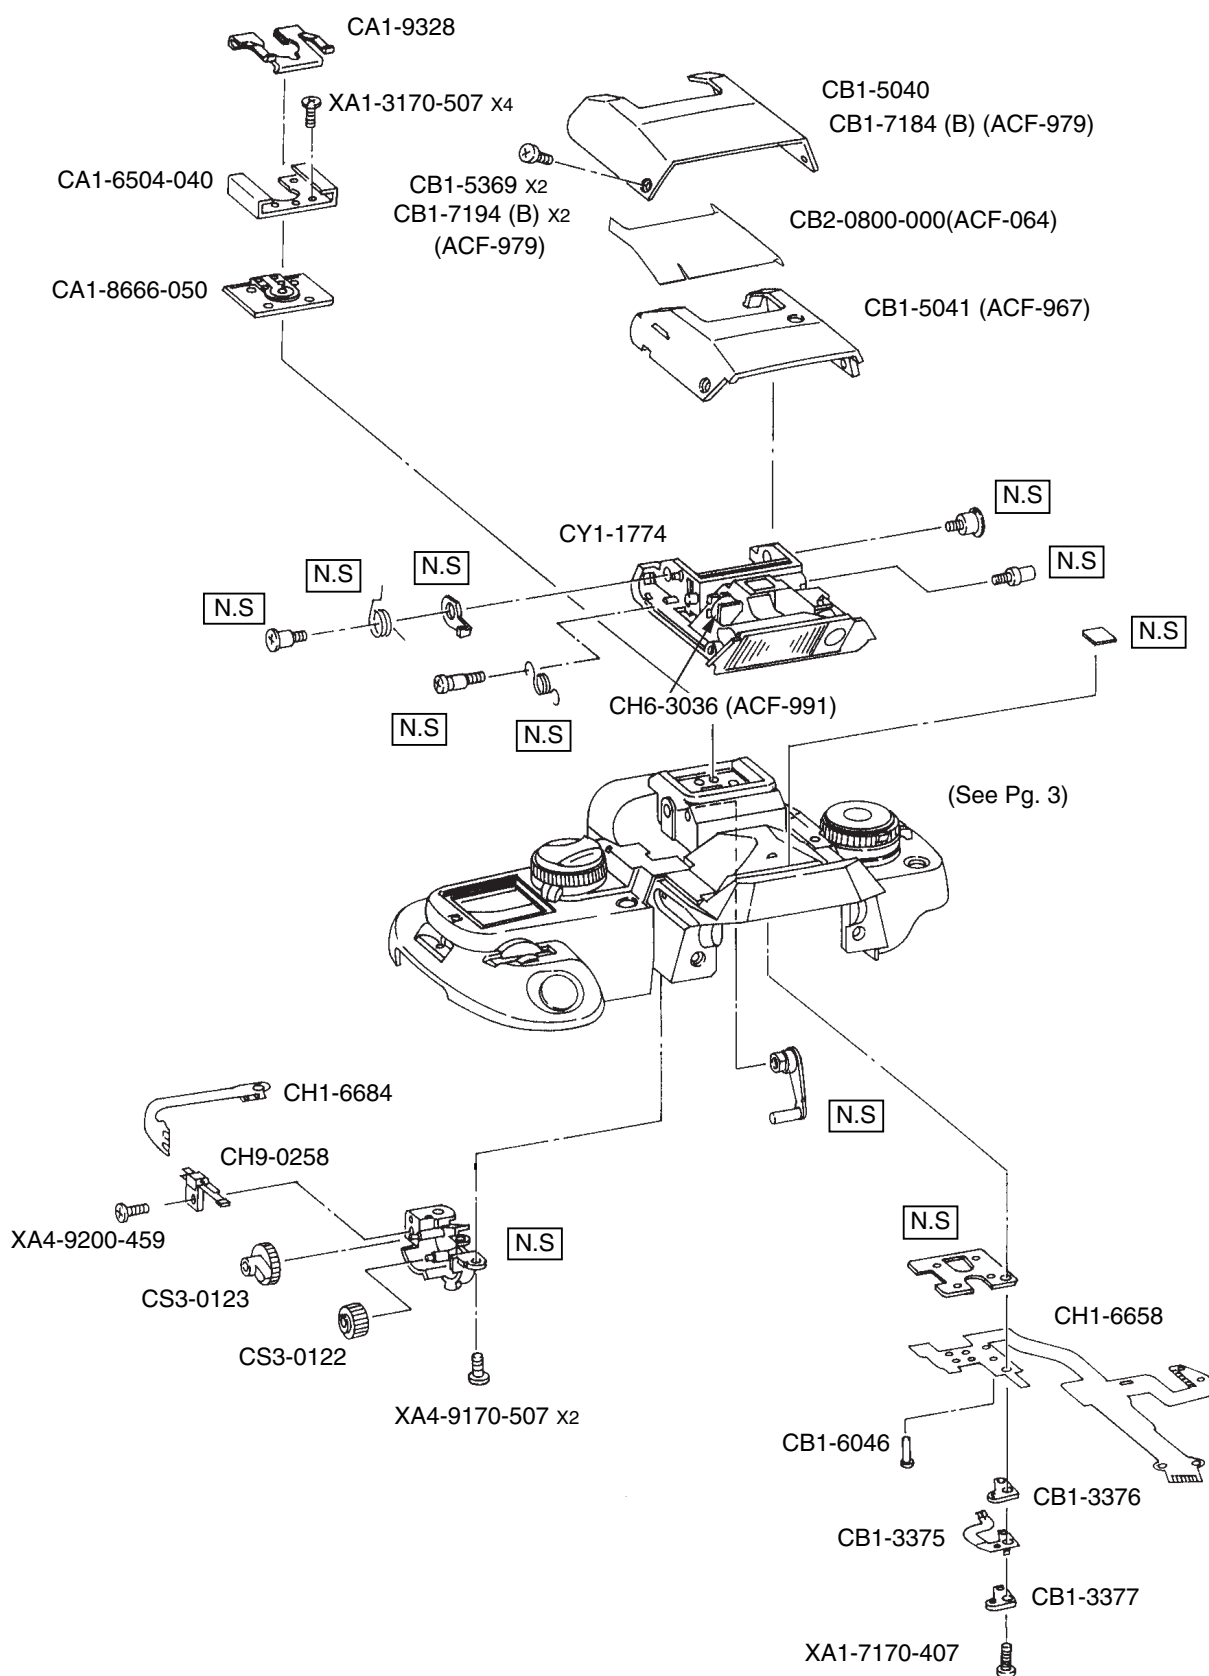

REF.No.C12-8281,8282
 C12-8283,8284
 C12-8286,8287
 C12-8288
 C12-8293,8294
 C12-8296,8297


PARTS LIST

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-6504-000	E	1	SHOE, ACCESSORY
	CA1-8666-050	E	1	BASE, ACC. SHOE
	CA1-9328-000	E	1	SPRING, PLATE
	CB1-3375-000	E	1	CONTACT, SHOE IN USE
	CB1-3376-000	E	1	BASE, SHOE IN USE 1
	CB1-3377-000	E	1	BASE, SHOE IN USE 2
	CB1-5040-000	C	1	COVER, FLASH
	CB1-5041-000	D	1	COVER, INNER FLASH
	CB1-5369-000		2	SCREW
	CB1-6046-000	E	1	PIN, ACC. SHOE
	CB1-7184-000	D	1	COVER, FLASH (Black)
	CB1-7194-000	D	2	SCREW
	CB2-0800-000	D	1	PLATE, SHIELD
	CH1-6658-000	D	1	FPC, TOP
	CH1-6684-000	D	1	FPC, POP-UP SWITCH
	CH6-3036-000	E	1	COIL, TRIGGER
	CH9-0258-000	E	1	SWITCH, LEAF
	CS3-0122-000	E	1	GEAR, FLASH 4
	CS3-0123-000	E	1	GEAR, CAM FLASH
	CY1-1774-000	D	1	FLASH HEAD UNIT
	XA1-3170-507		4	SCREW
	XA1-7170-407		1	SCREW
	XA4-9170-507		2	SCREW
	XA4-9200-459		1	SCREW

CANON

EOS 55 / (BLACK)
 ELAN II E / QD
 EOS 50 E / QD
 EOS 50 E (BLACK)
 ELAN II / QD
 EOS 50 / QD

 REF. C12-8281, 8282
 C12-8283, 8284
 C12-8286, 8287
 C12-8288
 C12-8293, 8294
 C12-8296, 8297

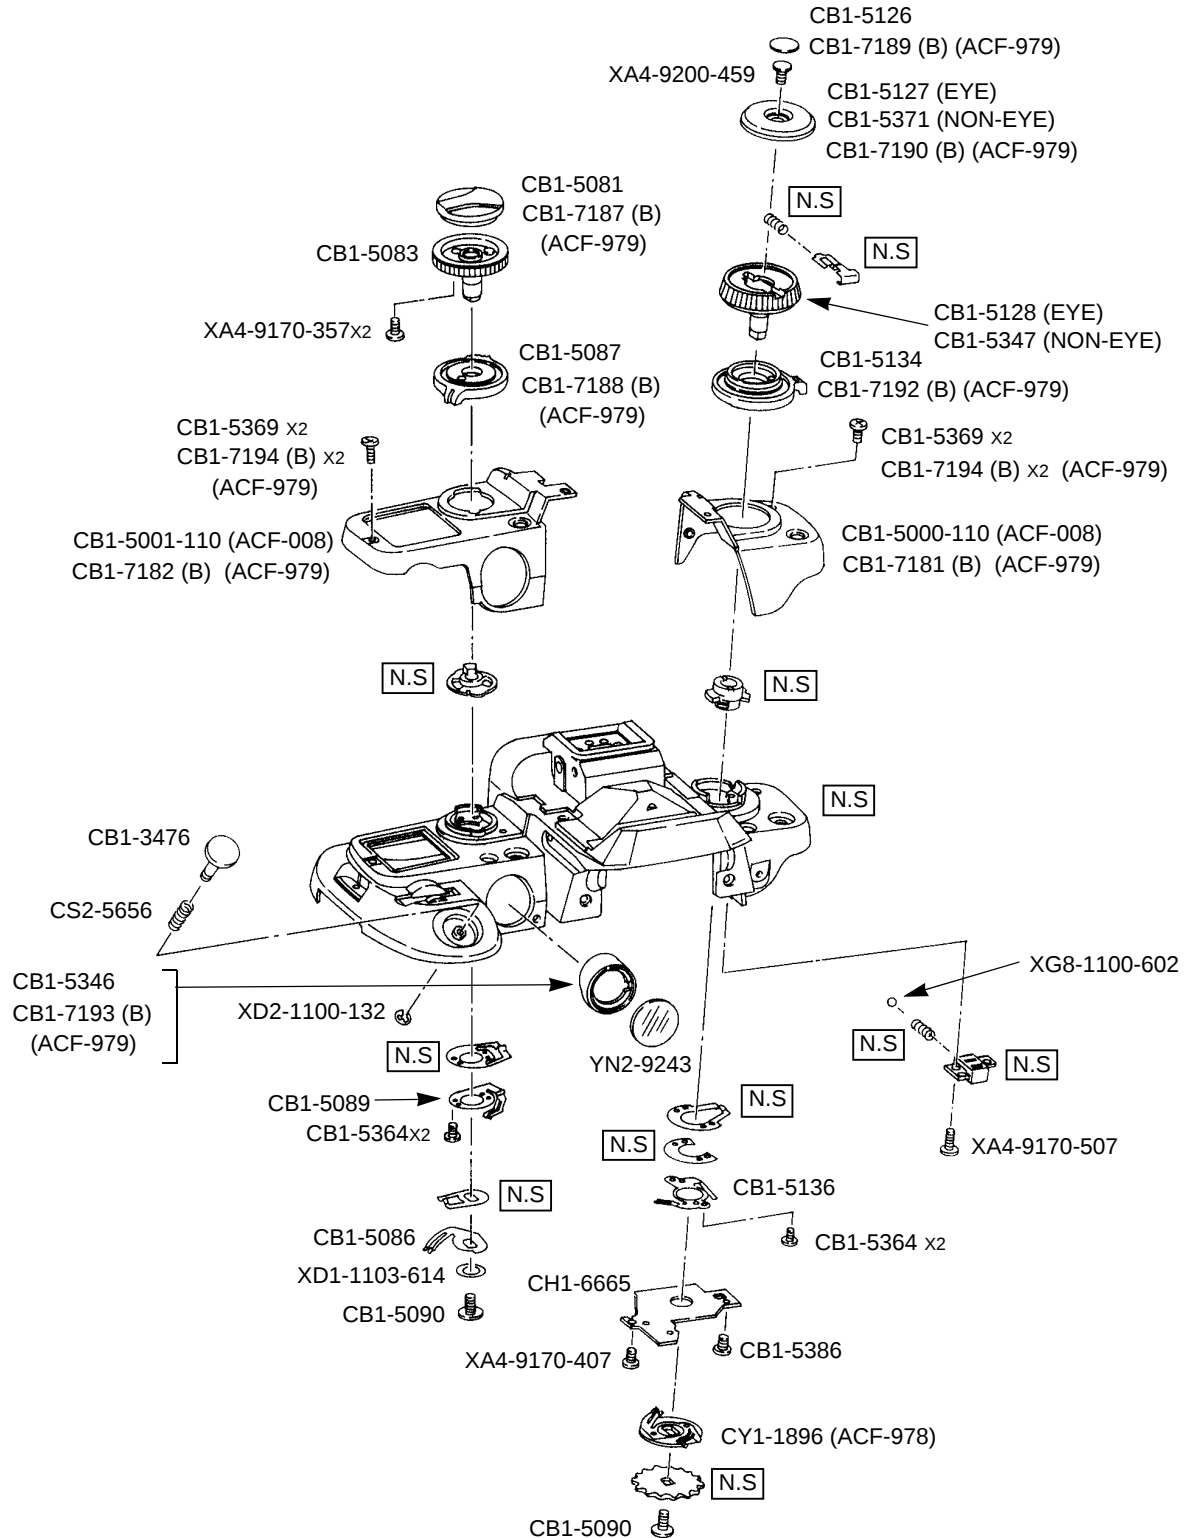

REF.No.C12-8281,8282
 C12-8283,8284
 C12-8286,8287
 C12-8288
 C12-8293,8294
 C12-8296,8297


PARTS LIST

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-3476-000	D	1	BUTTON, RELEASE
	CB1-5000-110	D	1	COVER, TOP 1
	CB1-5001-110	D	1	COVER, TOP 2
	CB1-5081-000	D	1	COVER, AF MODE DIAL
	CB1-5083-000	D	1	DIAL, AF MODE
	CB1-5086-000	E	1	CONTACT, AF MODE DIAL
	CB1-5087-000	D	1	DIAL, DRIVE MODE
	CB1-5089-000	E	1	CONTACT, DRIVE MODE DIAL
	CB1-5090-000		2	SCREW
	CB1-5126-000	D	1	CAP, BLIND
	CB1-5127-000	D	1	COVER, COMMAND DIAL (EYE)
	CB1-5128-000	D	1	DIAL, COMMAND (EYE)
	CB1-5134-000	D	1	DIAL, METERING
	CB1-5136-000	E	1	CONTACT, METERING DIAL
	CB1-5346-000	D	1	COVER, AF LED
	CB1-5347-000	D	1	DIAL, COMMAND (NON-EYE)
	CB1-5364-000		4	SCREW
	CB1-5369-000		4	SCREW
	CB1-5371-000	D	1	COVER, COMMAND DIAL (NON-EYE)
	CB1-5386-000		1	SCREW
	CB1-7181-000	D	1	COVER, TOP 1 (Black)
	CB1-7182-000	D	1	COVER, TOP 2 (Black)
	CB1-7187-000	D	1	COVER, AF MODE DIAL (Black)
	CB1-7188-000	D	1	DIAL, DRIVE MODE (Black)
	CB1-7189-000	D	1	CAP, BLIND (Black)
	CB1-7190-000	D	1	COVER, COMMAND DIAL (Black)
	CB1-7192-000	D	1	DIAL, METERING (Black)
	CB1-7193-000	D	1	COVER, AF LED (Black)
	CB1-7194-000		4	SCREW
	CH1-6665-000	D	1	PCB, COMMAND DIAL
	CS2-5656-000	E	1	SPRING, COIL
	CY1-1896-000	E	1	CONTACT, MODE DIAL
	XA4-9170-357		2	SCREW
	XA4-9170-407		1	SCREW
	XA4-9170-507		1	SCREW
	XA4-9200-459		1	SCREW
	XD1-1103-614		1	WASHER
	XD2-1100-132		1	E RING
	XG8-1100-602		1	BOLL
	YN2-9243-000	D	1	PANEL, AF LED

CANON

EOS 55 / (BLACK)
 ELAN II E / QD
 EOS 50 E / QD
 EOS 50 E (BLACK)
 ELAN II / QD
 EOS 50 / QD

 REF. C12-8281, 8282
 C12-8283, 8284
 C12-8286, 8287
 C12-8288
 C12-8293, 8294
 C12-8296, 8297

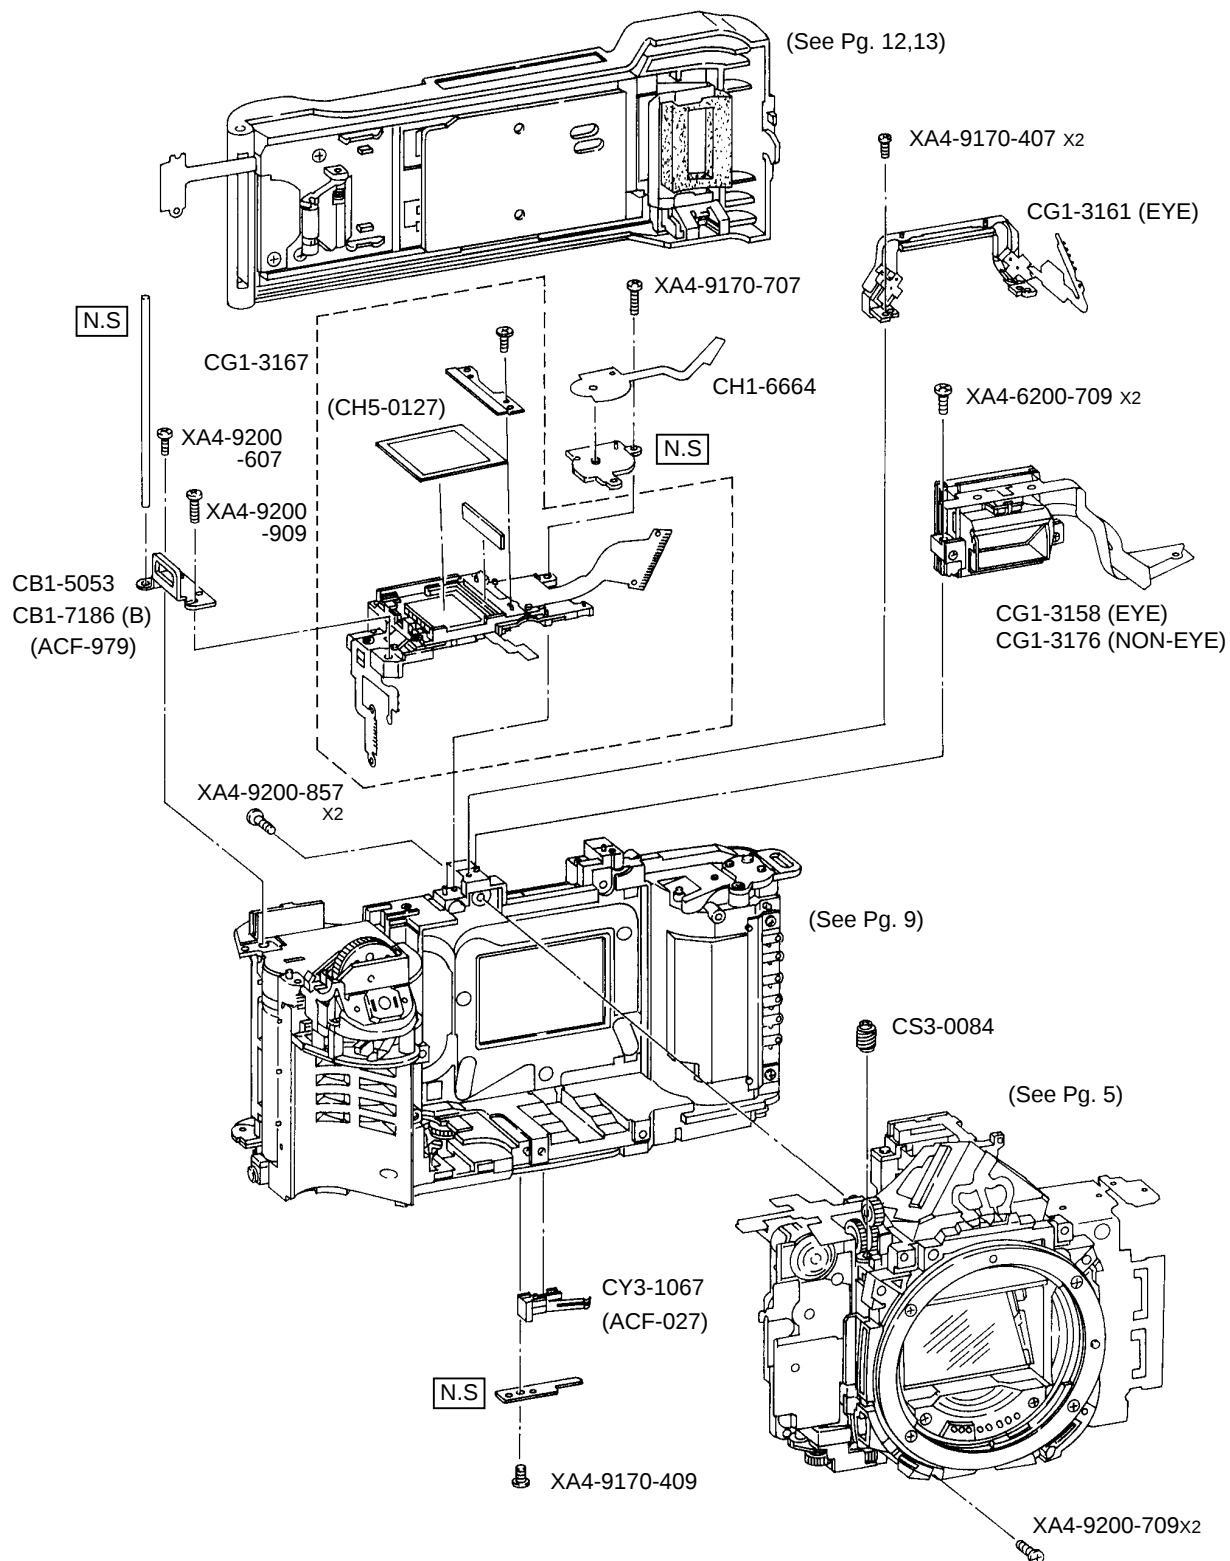

REF.No.C12-8281,8282
 C12-8283,8284
 C12-8286,8287
 C12-8288
 C12-8293,8294
 C12-8296,8297


PARTS LIST

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-5053-000	D	1	LUG, NECK STRAP
	CB1-7186-000	D	1	LUG, NECK STRAP (Black)
	CG1-3158-000	D	1	EYEPIECE UNIT (EYE)
	CG1-3161-000	D	1	HV UNIT
	CG1-3167-000	D	1	LCD UNIT
	CG1-3176-000	D	1	EYEPIECE UNIT (NON-EYE)
	CH1-6664-000	D	1	FPC, AF MODE DIAL
	CH5-0127-000	D	1	LCD
	CS3-0084-000	E	1	GEAR, WORM
	CY3-1067-000	E	1	CONTACT ASS'Y,PANORAMA
	XA4-6200-709		2	SCREW
	XA4-9170-407		2	SCREW
	XA4-9170-409		1	SCREW
	XA4-9170-707		1	SCREW
	XA4-9200-607		1	SCREW
	XA4-9200-709		2	SCREW
	XA4-9200-857		2	SCREW
	XA4-9200-909		1	SCREW

CANON

EOS 55 / (BLACK)
 ELAN II E / QD
 EOS 50 E / QD
 EOS 50 E (BLACK)
 ELAN II / QD
 EOS 50 / QD

 REF. C12-8281, 8282
 C12-8283, 8284
 C12-8286, 8287
 C12-8288
 C12-8293, 8294
 C12-8296, 8297

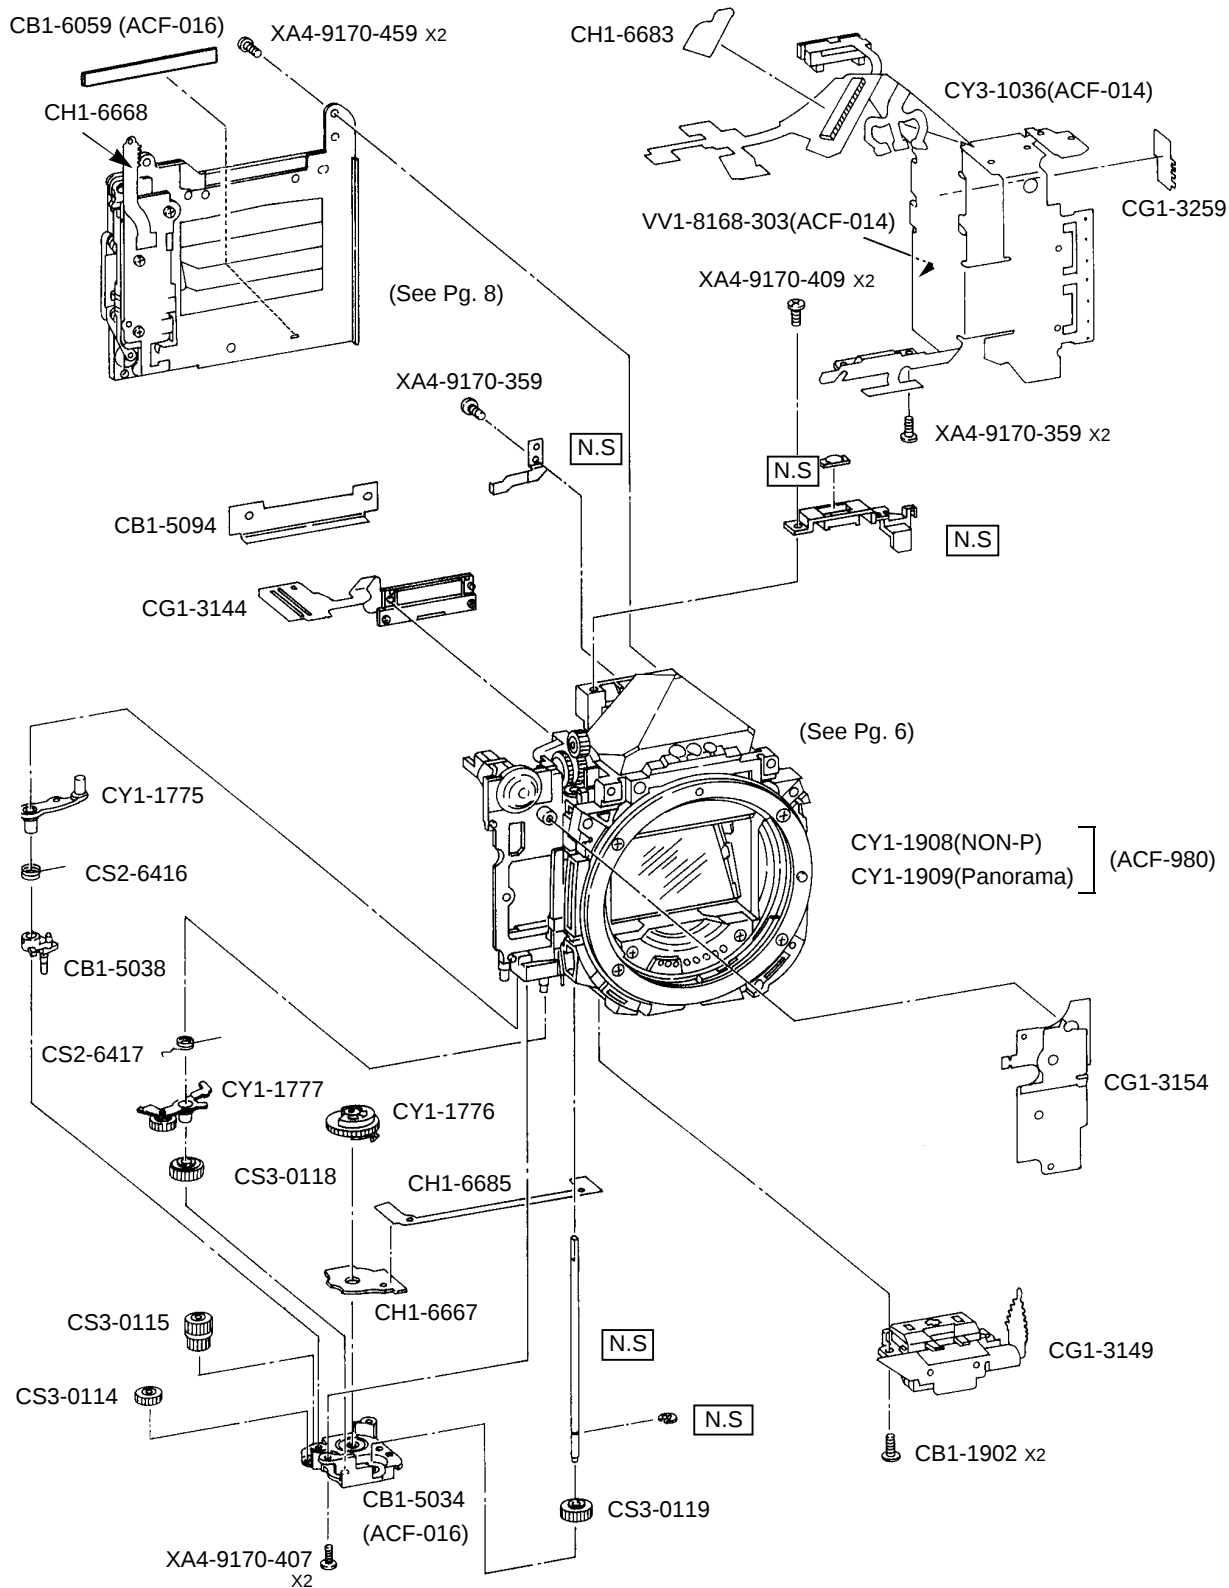

REF.No.C12-8281,8282
 C12-8283,8284
 C12-8286,8287
 C12-8288
 C12-8293,8294
 C12-8296,8297


PARTS LIST

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-1902-000		2	SCREW
	CB1-5034-000	E	1	COVER,GEAR
	CB1-5038-000	E	1	LEVER, CAM
	CB1-5094-000	E	1	SHEET, LIGHT SHIELD
	CB1-6059-000	D	1	SHEET
	CG1-3144-000	D	1	VIEWFINDER LCD UNIT
	CG1-3149-000	D	1	AF UNIT
	CG1-3154-000	D	1	FPC ASS'Y, DC/DC
	CG1-3259-000	D	1	FPC ASS'Y, PANORAMA
	CH1-6667-000	E	1	PCB, PHASE
	CH1-6668-000	E	1	FPC, SHUTTER
	CH1-6683-000	E	1	FPC, EXTENSION FLASH
	CH1-6685-000	E	1	FPC, EXTENSION PHASE SIGNAL
	CS2-6416-000	E	1	SPRING, TORSION
	CS2-6417-000	E	1	SPRING, TORSION
	CS3-0114-000	E	1	GEAR, CHARGE 1
	CS3-0115-000	E	1	GEAR, CHARGE 2
	CS3-0118-000	E	1	GEAR, FLASH 2
	CS3-0119-000	E	1	GEAR, FLASH 3
	CY1-1775-000	E	1	LEVER, CHARGE
	CY1-1776-000	E	1	CHARGE CAM GEAR UNIT
	CY1-1777-000	E	1	FLASH ARM UNIT
	CY1-1908-000	E	1	MIRROR BOX UNIT (NON-P)
	CY1-1909-000	E	1	MIRROR BOX UNIT (Panorama)
	CY3-1036-000	D	1	FPC ASS'Y, MAIN
	VV1-8168-303	E	1	RESISTOR, 30k OHM, 1/16W
	XA4-9170-359		3	SCREW
	XA4-9170-407		2	SCREW
	XA4-9170-409		2	SCREW
	XA4-9170-459		2	SCREW

CANON

EOS 55 / (BLACK)
 ELAN II E / QD
 EOS 50 E / QD
 EOS 50 E (BLACK)
 ELAN II / QD
 EOS 50 / QD

 REF. C12-8281, 8282
 C12-8283, 8284
 C12-8286, 8287
 C12-8288
 C12-8293, 8294
 C12-8296, 8297

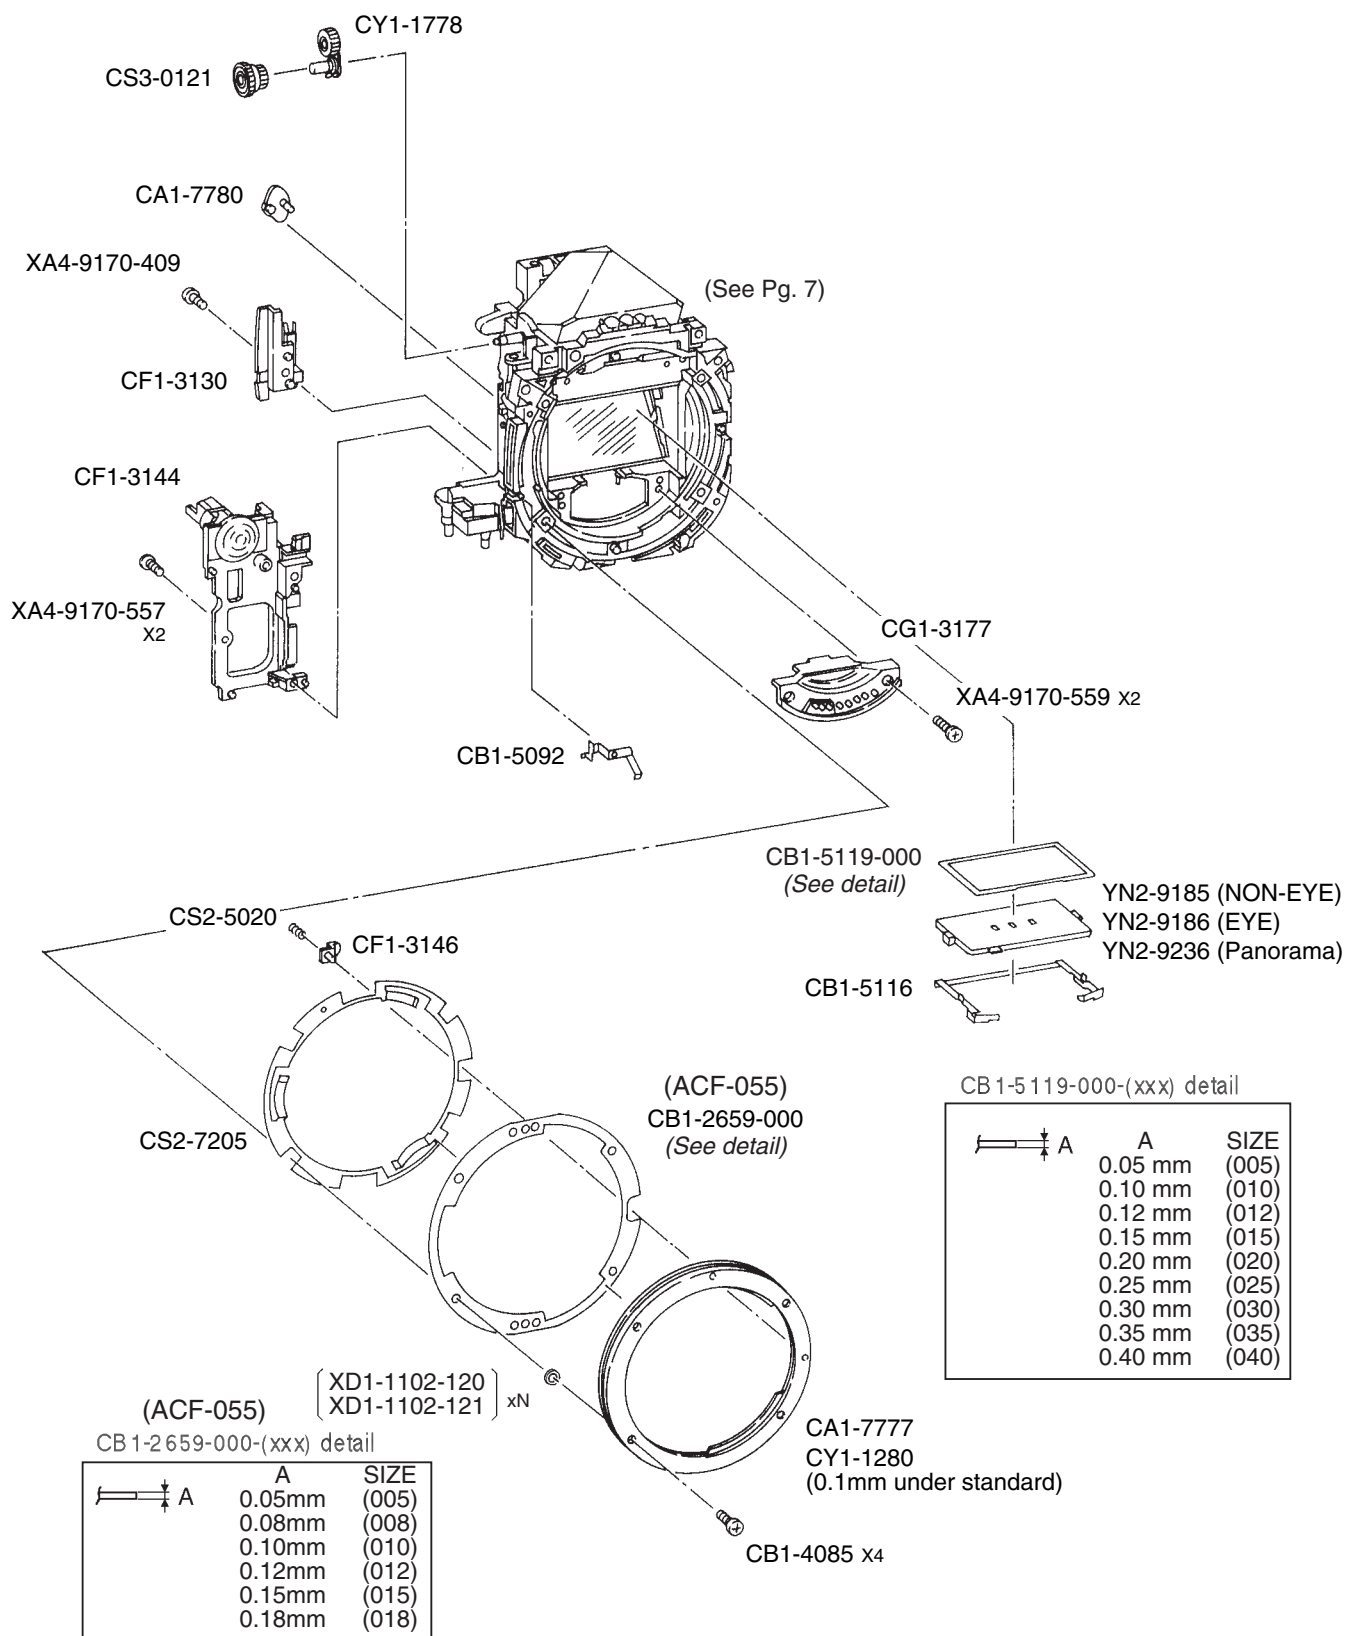

REF.No.C12-8281,8282
 C12-8283,8284
 C12-8286,8287
 C12-8288
 C12-8293,8294
 C12-8296,8297


PARTS LIST

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-7777-000	C	1	MOUNT, BODY
	CA1-7780-000	E	1	LEVER, LENS INTERLOCK
	CB1-2659-000 (00	D		SPACER, MOUNT
	CB1-2659-000 (00	D		SPACER, MOUNT
	CB1-2659-000 (01	D		SPACER, MOUNT
	CB1-2659-000 (01	D		SPACER, MOUNT
	CB1-2659-000 (01	D		SPACER, MOUNT
	CB1-2659-000 (01	D		SPACER, MOUNT
	CB1-4085-000		4	SCREW
	CB1-5092-000	E	1	PLATE, GND
	CB1-5116-000	E	1	HOLDER, FOCUSING SCREEN
	CB1-5119-000 (00	D	1	SPACER, FOCUSING SCREEN
	CB1-5119-000 (01	D		SPACER, FOCUSING SCREEN
	CB1-5119-000 (01	D		SPACER, FOCUSING SCREEN
	CB1-5119-000 (01	D		SPACER, FOCUSING SCREEN
	CB1-5119-000 (02	D		SPACER, FOCUSING SCREEN
	CB1-5119-000 (02	D		SPACER, FOCUSING SCREEN
	CB1-5119-000 (03	D		SPACER, FOCUSING SCREEN
	CB1-5119-000 (03	D		SPACER, FOCUSING SCREEN
	CB1-5119-000 (04	D		SPACER, FOCUSING SCREEN
	CF1-3130-000	E	1	CONTACT, LENS INTERLOCK
	CF1-3144-000	E	1	WING UNIT
	CF1-3146-000	E	1	LEVER, LENS LOCK
	CG1-3177-000	E	1	MOUNT CONTACT UNIT
	CS2-5020-000	E	1	SPRING, COIL
	CS2-7205-000	D	1	SPRING, MOUNT
	CS3-0121-000	E	1	GEAR, FLASH UP
	CY1-1778-000	E	1	GEAR ASS'Y, FLASH PLANETARY
	CY1-1280-000	C	1	MOUNT, BODY
	XA4-9170-409		1	SCREW
	XA4-9170-557		2	SCREW
	XA4-9170-559		2	SCREW
	XD1-1102-120		1	WASHER
	XD1-1102-121		1	WASHER
	YN2-9185-000	D	1	SCREEN, FOCUSING (NON-EYE)
	YN2-9186-000	D	1	SCREEN, FOCUSING (EYE)
	YN2-9236-000	D	1	SCREEN, FOCUSING (PANORAMA)

CANON

EOS 55 / (BLACK)
 ELAN II E / QD
 EOS 50 E / QD
 EOS 50 E (BLACK)
 ELAN II / QD
 EOS 50 / QD

 REF. C12-8281, 8282
 C12-8283, 8284
 C12-8286, 8287
 C12-8288
 C12-8293, 8294
 C12-8296, 8297

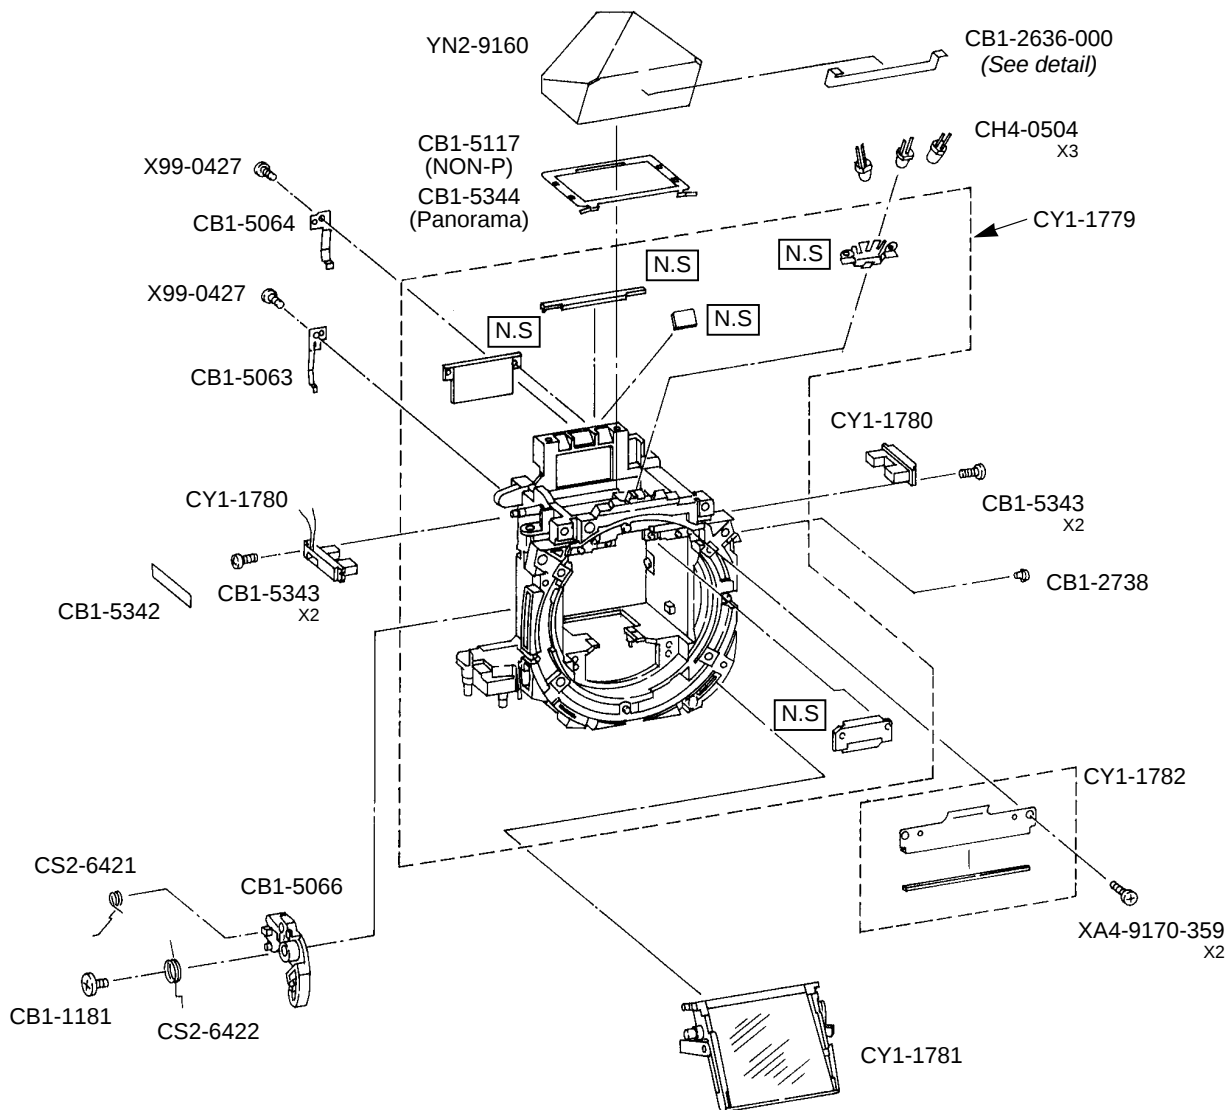

CB1-2636-000-(xxx) detail

 A	A	SIZE
	0.30 mm	(030)
	0.40 mm	(040)
	0.50 mm	(050)
	0.60 mm	(060)
	0.70 mm	(070)
	0.80 mm	(080)

REF.No.C12-8281,8282
 C12-8283,8284
 C12-8286,8287
 C12-8288
 C12-8293,8294
 C12-8296,8297


PARTS LIST

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-1181-000		1	SCREW
	CB1-2636-000 (03	E	1	SPACER, PENTAPRISM
	CB1-2636-000 (04	E		SPACER, PENTAPRISM
	CB1-2636-000 (05	E		SPACER, PENTAPRISM
	CB1-2636-000 (06	E		SPACER, PENTAPRISM
	CB1-2636-000 (07	E		SPACER, PENTAPRISM
	CB1-2636-000 (08	E		SPACER, PENTAPRISM
	CB1-2738-000	E	1	STOPPER, SUB MIRROR
	CB1-5063-000	E	1	HOLDER, MIRROR 1
	CB1-5064-000	E	1	HOLDER, MIRROR 2
	CB1-5066-000	E	1	LEVER, MIRROR UP
	CB1-5117-000	E	1	MASK, FINDER (NON-P)
	CB1-5342-000	E	1	SHEET, LIGHT SHIELD
	CB1-5343-000		4	SCREW
	CB1-5344-000	E	1	MASK, FINDER (PANORAMA)
	CH4-0504-000	E	3	LED, SI
	CS2-6421-000	E	1	SPRING, TORSION
	CS2-6422-000	E	1	SPRING, TORSION
	CY1-1779-000	E	1	MIRROR BOX UNIT
	CY1-1780-000	E	2	PANORAMA LED UNIT
	CY1-1781-000	E	1	MIRROR UNIT
	CY1-1782-000	D	1	PLATE, PROTECTION
	X99-0427-000		2	SCREW
	XA4-9170-359		2	SCREW
	YN2-9160-000	D	1	PENTAPRISM

CANON


EOS 55 / (BLACK)
ELAN II E / QD
EOS 50 E / QD
EOS 50 E (BLACK)
ELAN II / QD
EOS 50 / QD

 REF. C12-8281, 8282
C12-8283, 8284
C12-8286, 8287
C12-8288
C12-8293, 8294
C12-8296, 8297

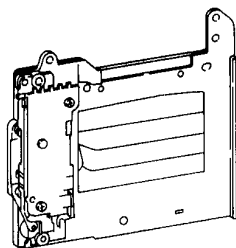


CG1-3155 (NON-P)
CG1-3156 (Panorama)

 XA4-4140-457 x2

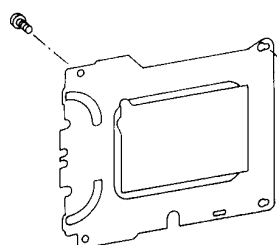

N.S

 
CA1-3781

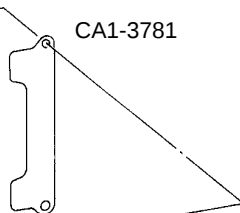



CF1-2764



 CB1-2032

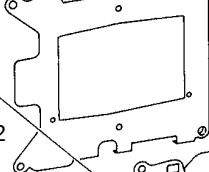


CF1-2763

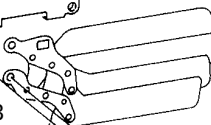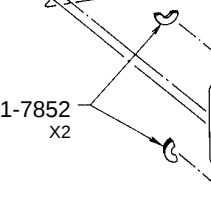  CA1-7852
x2

CB1-2044 (ACF-948)



 N.S



N.S

REF.No.C12-8281,8282
C12-8283,8284
C12-8286,8287
C12-8288
C12-8293,8294
C12-8296,8297


PARTS LIST

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-3781-000	E	2	SPACER
	CA1-7852-000	E	2	STOPPER, RUBBER
	CB1-2032-000	E	1	PLATE, SEPARATOR
	CB1-2044-000	E	1	RUBBER, STOPPER
	CF1-2763-000	C	1	CURTAIN, 2ND SHUTTER
	CF1-2764-000	C	1	CURTAIN, 1ST SHUTTER
	CG1-3155-000	C	1	SHUTTER UNIT (NON-P)
	CG1-3156-000	C	1	SHUTTER UNIT (PANORAMA)
	XA4-4140-457		2	SCREW

CANON

EOS 55 / (BLACK)
 ELAN II E / QD
 EOS 50 E / QD
 EOS 50 E (BLACK)
 ELAN II / QD
 EOS 50 / QD

 REF. C12-8281, 8282
 C12-8283, 8284
 C12-8286, 8287
 C12-8288
 C12-8293, 8294
 C12-8296, 8297

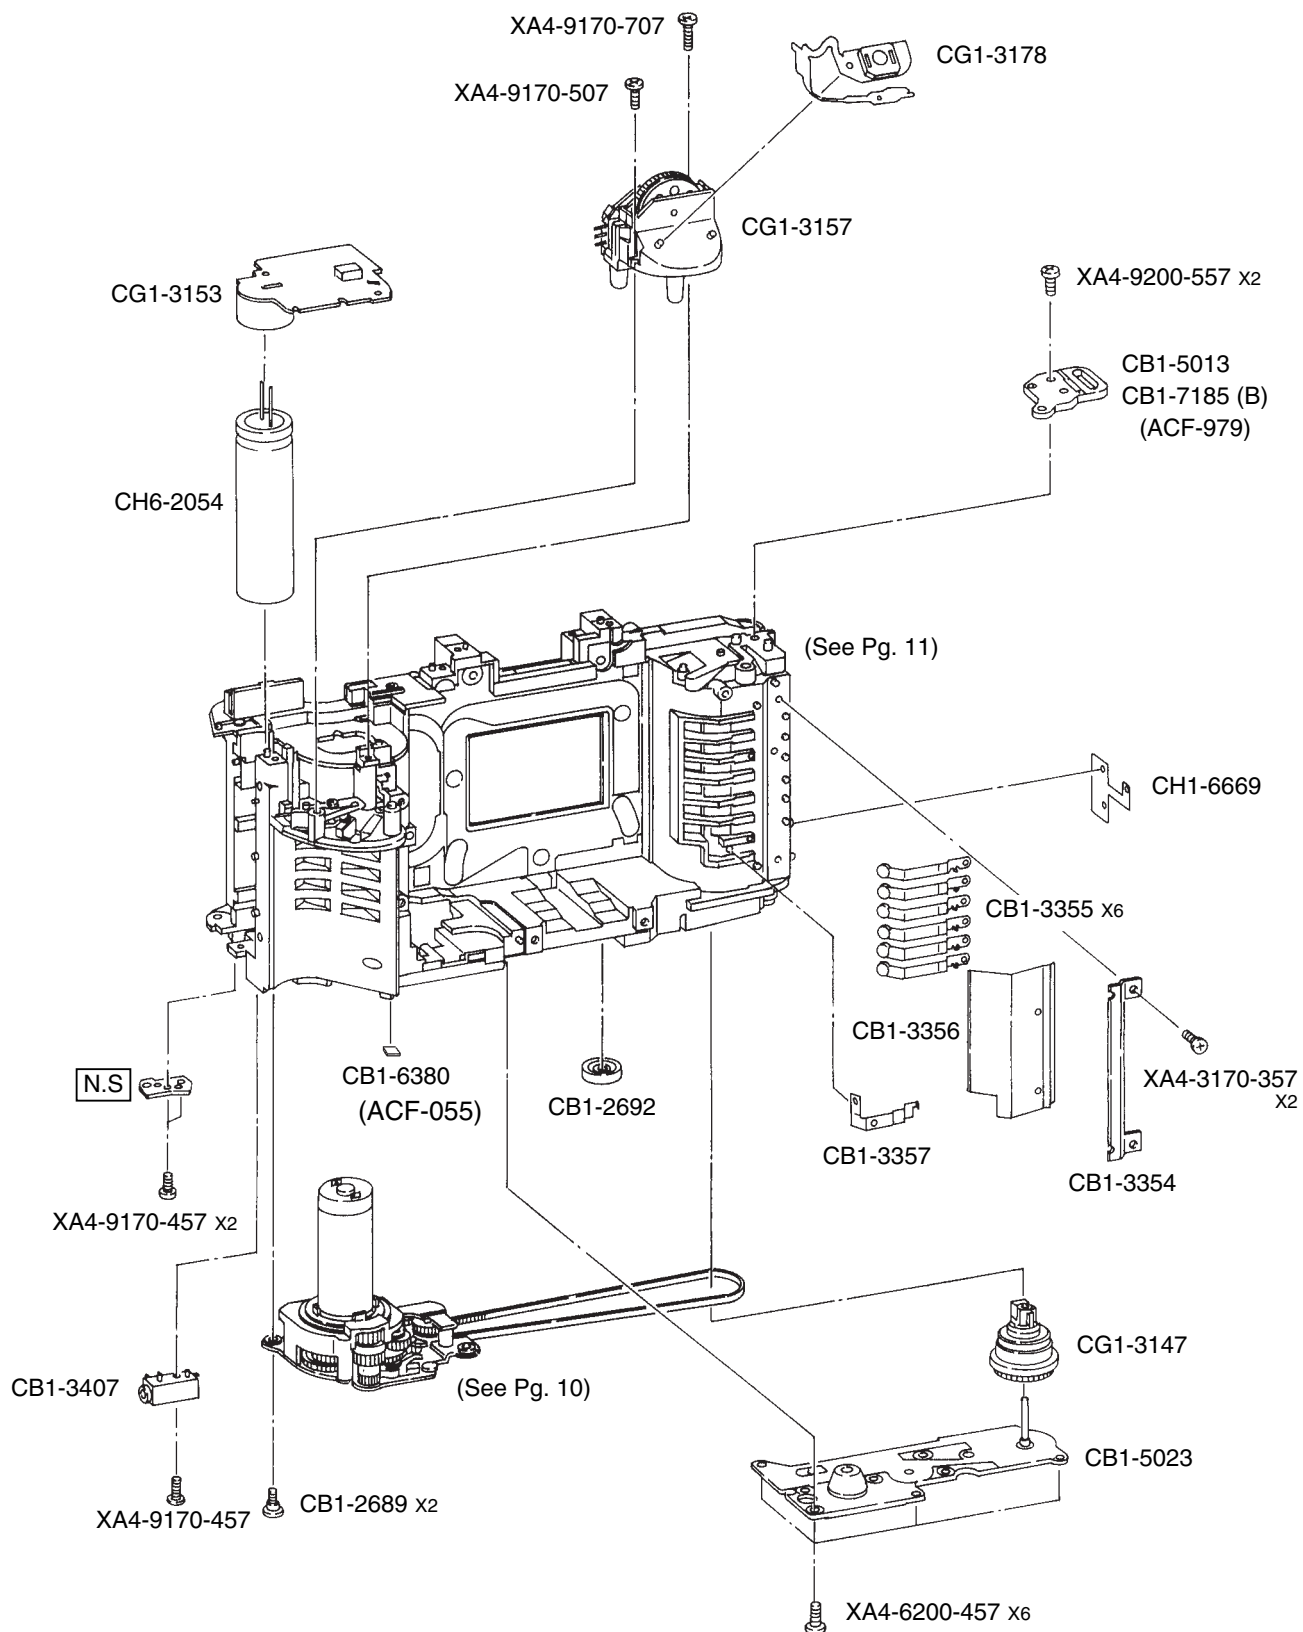

REF.No.C12-8281,8282
 C12-8283,8284
 C12-8286,8287
 C12-8288
 C12-8293,8294
 C12-8296,8297


PARTS LIST

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-2689-000		2	SCREW
	CB1-2692-000	E	1	PULLEY, IDLER
	CB1-3354-000	E	1	HOLDER, DX
	CB1-3355-000	E	6	CONTACT, DX
	CB1-3356-000	E	1	SHEET, DX
	CB1-3357-000	E	1	CONTACT, FILM CARTRIDGE
	CB1-3407-000	D	1	TERMINAL, REMOTE
	CB1-5013-000	D	1	LUG, NECK STRAP
	CB1-5023-000	E	1	BASE, TRIPOD
	CB1-6380-000	E	1	SPACER , BASE PLATE 1
	CB1-7185-000	D	1	LUG, NECK STRAP (Black)
	CG1-3147-000	E	1	FORK ASS'Y
	CG1-3153-000	D	1	PCB ASS'Y, FLASH
	CG1-3157-000	D	1	DIAL ASS'Y
	CG1-3178-000	D	1	FPC ASS'Y, RELEASE
	CH1-6669-000	E	1	FPC, BACK COVER SWITCH
	CH6-2054-000	D	1	CAPACITOR, MAIN
	XA4-3170-357		2	SCREW
	XA4-6200-457		6	SCREW
	XA4-9170-457		3	SCREW
	XA4-9170-507		1	SCREW
	XA4-9170-707		1	SCREW
	XA4-9200-557		2	SCREW

CANON

EOS 55 / (BLACK)
 ELAN II E / QD
 EOS 50 E / QD
 EOS 50 E (BLACK)
 ELAN II / QD
 EOS 50 / QD

 REF. C12-8281, 8282
 C12-8283, 8284
 C12-8286, 8287
 C12-8288
 C12-8293, 8294
 C12-8296, 8297

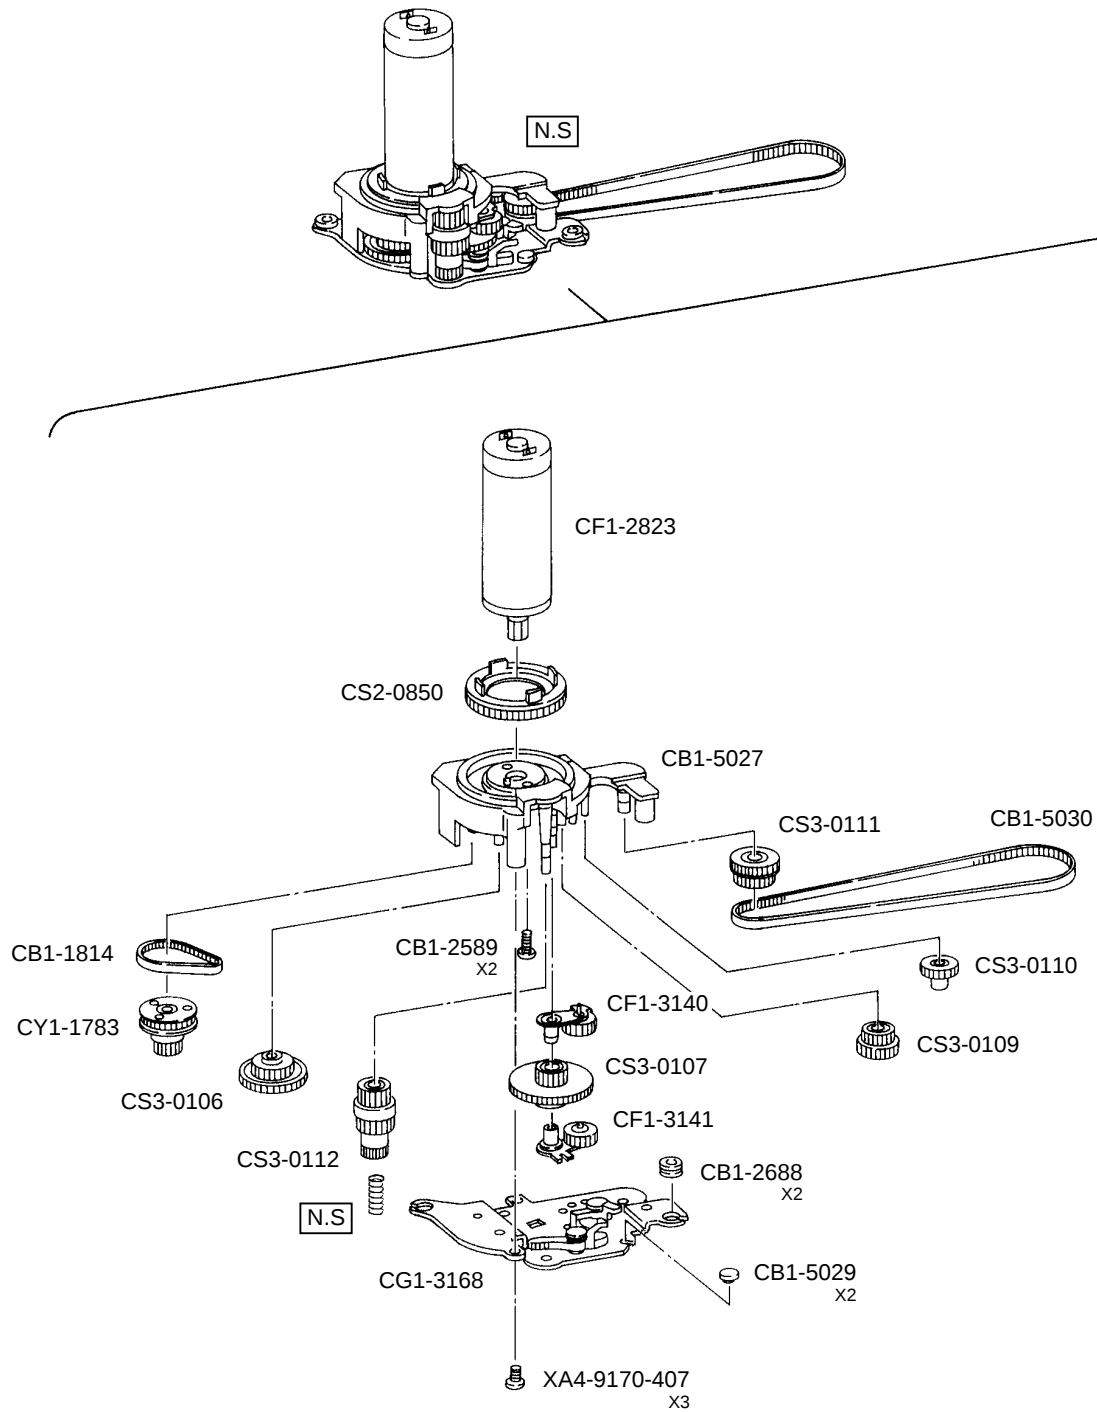

REF.No.C12-8281,8282
 C12-8283,8284
 C12-8286,8287
 C12-8288
 C12-8293,8294
 C12-8296,8297


PARTS LIST

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-1814-000	D	1	BELT, GEAR DRIVE
	CB1-2589-000		2	SCREW
	CB1-2688-000	E	2	MOUNT, VIBRATION
	CB1-5027-000	E	1	HOUSING, GEAR
	CB1-5029-000	E	2	CUSHION
	CB1-5030-000	D	1	BELT, GEAR DRIVE
	CF1-2823-000	D	1	MOTOR UNIT
	CF1-3140-000	E	1	ARM, 1ST PLANETARY
	CF1-3141-000	E	1	ARM, 2ND PLANETARY
	CG1-3168-000	E	1	BASE PLATE UNIT
	CS2-0850-000	E	1	GEAR, SPOOL DRIVE
	CS3-0106-000	E	1	GEAR, WIND 2
	CS3-0107-000	E	1	GEAR, SUN
	CS3-0109-000	E	1	GEAR, REWIND 1
	CS3-0110-000	E	1	GEAR, REWIND 2
	CS3-0111-000	E	1	GEAR, REWIND DRIVE
	CS3-0112-000	E	1	GEAR, SPOOL
	CY1-1783-000	E	1	GEAR ASS'Y, 1ST WIND
	XA4-9170-407		3	SCREW

CANON

EOS 55 / (BLACK)
 ELAN II E / QD
 EOS 50 E / QD
 EOS 50 E (BLACK)
 ELAN II / QD
 EOS 50 / QD

 REF. C12-8281, 8282
 C12-8283, 8284
 C12-8286, 8287
 C12-8288
 C12-8293, 8294
 C12-8296, 8297

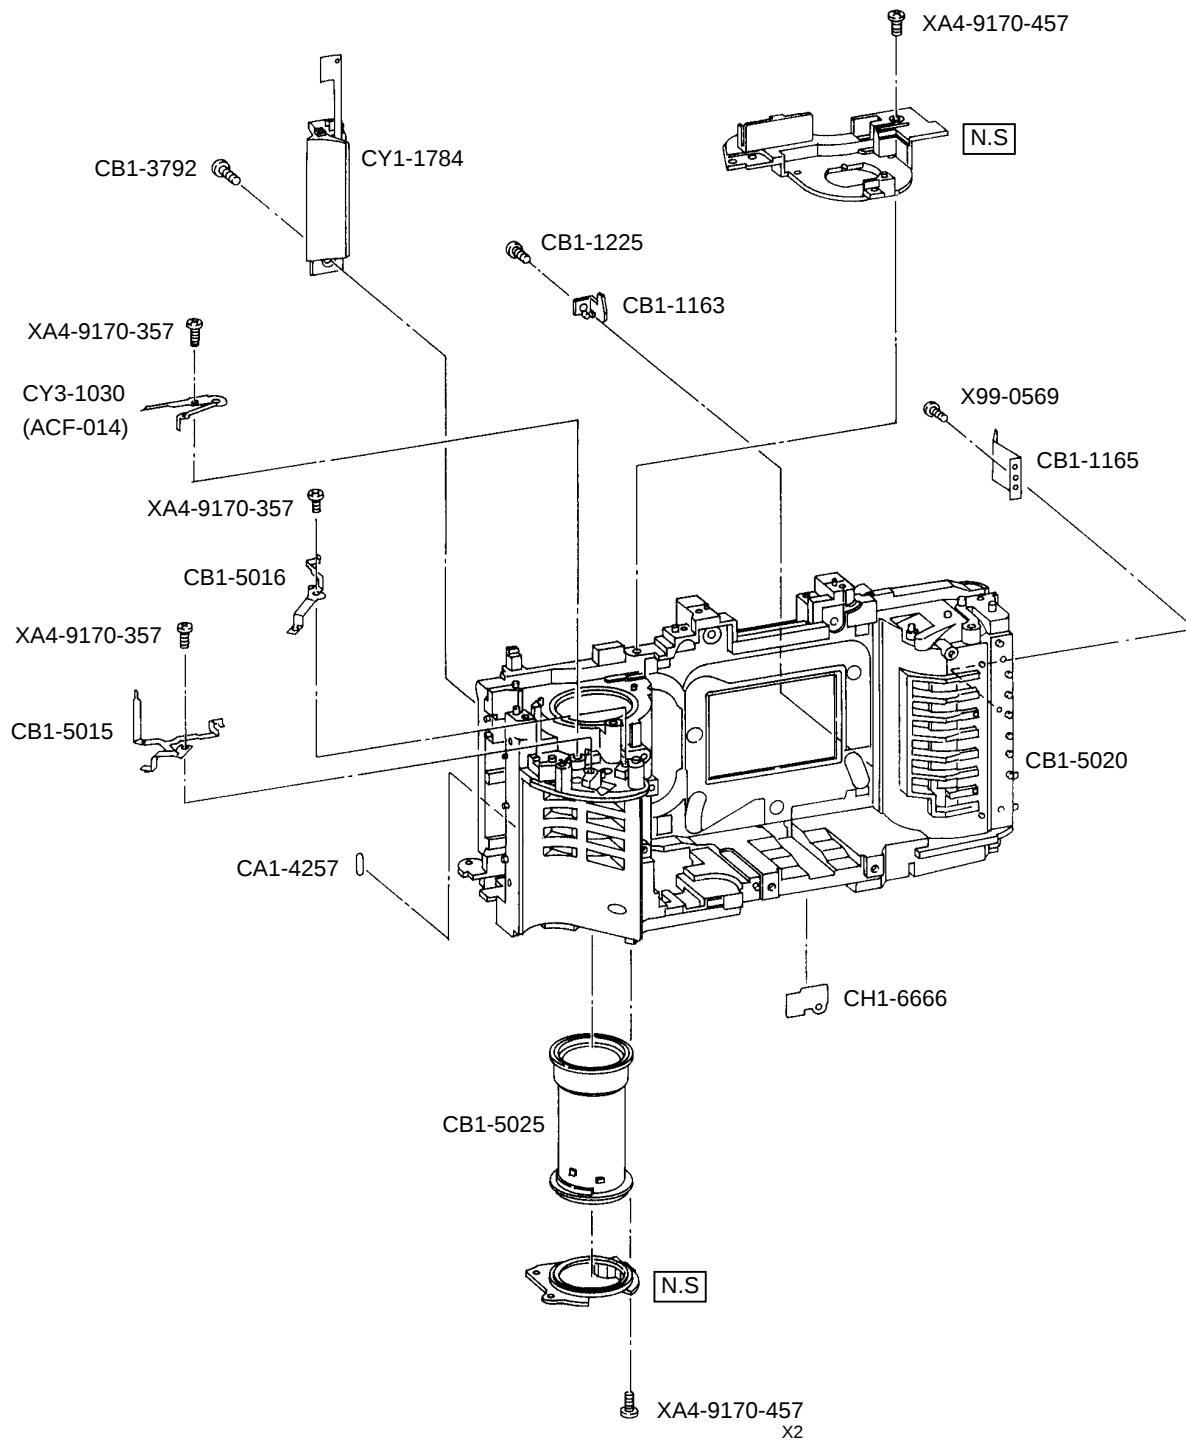

REF.No.C12-8281,8282
 C12-8283,8284
 C12-8286,8287
 C12-8288
 C12-8293,8294
 C12-8296,8297

PARTS LIST

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-4257-000	E	1	SEAL, FILM
	CB1-1163-000	E	1	JAW, FILM CARTRIDGE
	CB1-1165-000	D	1	GUIDE, FILM CARTRIDGE
	CB1-1225-000		1	SCREW
	CB1-3792-000		1	SCREW
	CB1-5015-000	E	1	CONTACT, BATTERY (-)
	CB1-5016-000	E	1	CONTACT, BATTERY (+)
	CB1-5020-000	E	1	BODY
	CB1-5025-000	D	1	SPOOL
	CH1-6666-000	E	1	FPC, PANORAMA SWITCH
	CY1-1784-000	D	1	SIGNAL UNIT
	CY3-1030-000	E	1	CONTACT, RESET
	X99-0569-000		1	SCREW
	XA4-9170-357		3	SCREW
	XA4-9170-457		3	SCREW

REF.No.C12-8281,8282
 C12-8283,8284
 C12-8286,8287
 C12-8288
 C12-8293,8294
 C12-8296,8297


PARTS LIST

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-6525-000	E	1	SPRING, PLATE
	CB1-0183-000	E	1	ROLLER, BACK COVER GUIDE
	CB1-1923-000	D	1	DIAL, REAR INPUT
	CB1-1924-000	E	1	CONTACT, DIAL
	CB1-1926-000	E	1	DETENT, DIAL
	CB1-1927-000	E	1	CONTACT, DIAL LOCK SWITCH
	CB1-1930-000	E	1	CONTACT, DATE BATTERY (-)
	CB1-1934-000		1	SCREW
	CB1-2678-000		1	SCREW
	CB1-3359-000	E	1	HOLDER, ROLLER
	CB1-3786-000	D	1	SHIELD, LIGHT
	CB1-3787-000	E	1	SPRING, CARTRIDGE
	CB1-4070-000	E	1	CONTACT, DATE BATTERY (+)
	CB1-5263-000	E	1	KNOB, DIAL LOCK SWITCH
	CB1-6549-000	E	1	TAPE,BP
	CF1-2715-000	D	1	PLATE, PRESSURE (QD)
	CF1-2931-000	D	1	PLATE, PRESSURE (PANORAMA)
	CH1-1280-000	E	1	PCB, REAR DIAL
	CH1-6659-000	E	1	FPC, BACK
	CH2-5111-000	E	1	SWITCH, DATE
	CH4-0532-000	D	1	PCB ASS'Y, DATE (QD)
	CH4-0644-000	D	1	PCB ASS'Y, DATE (PANORAMA)
	CS2-3233-000	E	1	SHAFT, ROLLER HOLDER
	CS2-5594-000	E	1	SPRING, COIL
	CS2-5764-000	E	1	SPRING, COIL
	CS2-6966-000	E	1	SPRING, TORSION
	CY3-1025-000	D	1	BACK COVER UNIT (P-QD)
	CY3-1026-000	D	1	BACK COVER UNIT (QD)
	VW4-1027-103	F	1	CAPACITOR, 0.01 μ F, 25V
	X99-0427-000		2	SCREW
	X99-0470-000		1	NUT
	X99-0582-000		1	SCREW
	X99-0583-000		1	SCREW
	X99-0685-000		5	SCREW
	XA1-7170-407		1	SCREW
	XA4-3170-457		1	SCREW
	XD1-1103-614		1	WASHER
	XG8-1100-581		1	BALL


CANON

ELAN II E
 EOS 50 E
 EOS 50 E (BLACK)
 ELAN II
 EOS 50

 REF. C12-8283
 C12-8286
 C12-8288
 C12-8293
 C12-8296

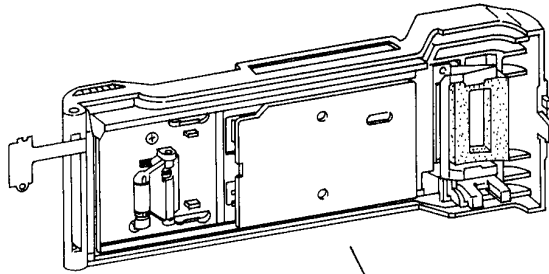

CY3-1027 (NON-QD) (ACF-004)
 (Pressure plate not included.)

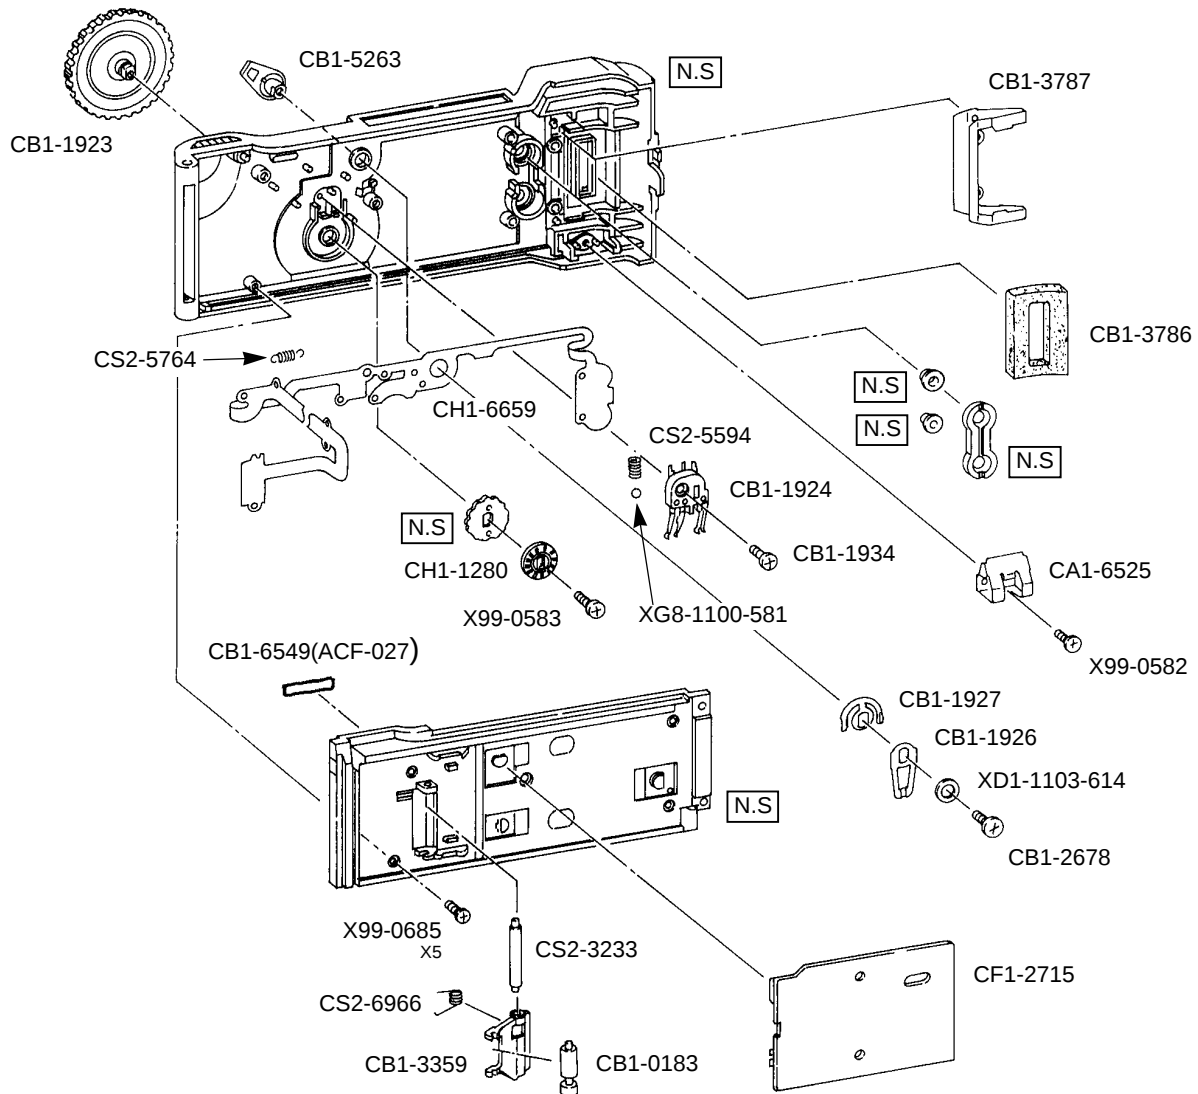 


REF.No.C12-8281,8282
 C12-8283,8284
 C12-8286,8287
 C12-8288
 C12-8293,8294
 C12-8296,8297

PARTS LIST


NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-6525-000	E	1	SPRING, PLATE
	CB1-0183-000	E	1	ROLLER, BACK COVER GUIDE
	CB1-1923-000	D	1	DIAL, REAR INPUT
	CB1-1924-000	E	1	CONTACT, DIAL
	CB1-1926-000	E	1	DETENT, DIAL
	CB1-1927-000	E	1	CONTACT, DIAL LOCK SWITCH
	CB1-1934-000		1	SCREW
	CB1-2678-000		1	SCREW
	CB1-3359-000	E	1	HOLDER, ROLLER
	CB1-3786-000	D	1	SHIELD, LIGHT
	CB1-3787-000	E	1	SPRING, CARTRIDGE
	CB1-5263-000	E	1	KNOB, DIAL LOCK SWITCH
	CB1-6549-000	E	1	TAPE,BP
	CF1-2715-000	D	1	PLATE, PRESSURE (QD)
	CH1-1280-000	E	1	PCB, REAR DIAL
	CH1-6659-000	E	1	FPC, BACK
	CS2-3233-000	E	1	SHAFT, ROLLER HOLDER
	CS2-5594-000	E	1	SPRING, COIL
	CS2-5764-000	E	1	SPRING, COIL
	CS2-6966-000	E	1	SPRING, TORSION
	CY3-1027-000	D	1	BACK COVER UNIT (NON-QD)
	X99-0582-000		1	SCREW
	X99-0583-000		1	SCREW
	X99-0685-000		5	SCREW
	XD1-1103-614		1	WASHER
	XG8-1100-581		1	BALL

CANON EOS 55 / 55(BLACK), EOS ELAN II E / QD,
EOS 50 E / QD, EOS 50 E(BLACK)
EOS ELAN II / QD, EOS 50 / QD
(ACCESSORY)

 
C46-1922 SEMI HARD CASE EH9-L

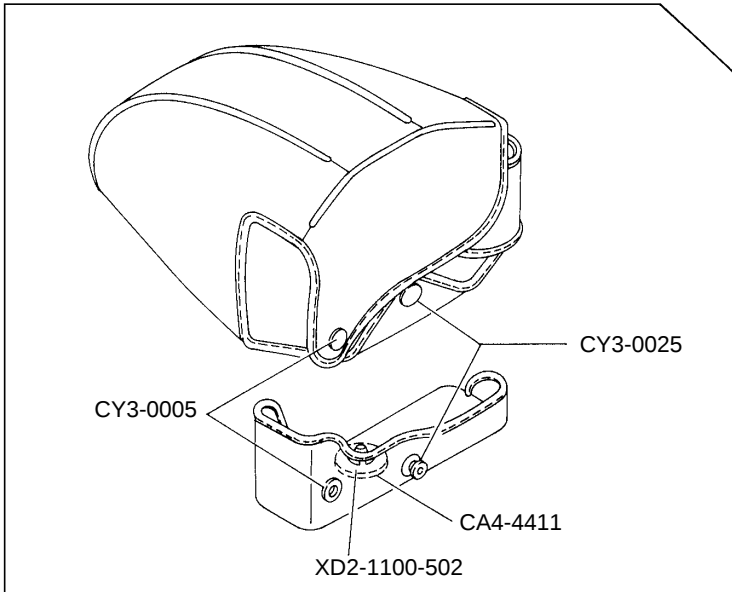

C56-1641 WIDESTRAP
EW-100BB

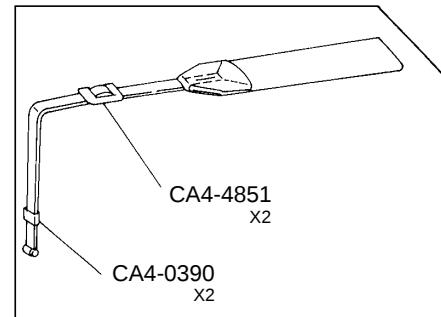 

C50-1901 BATTERY PACK BP-50

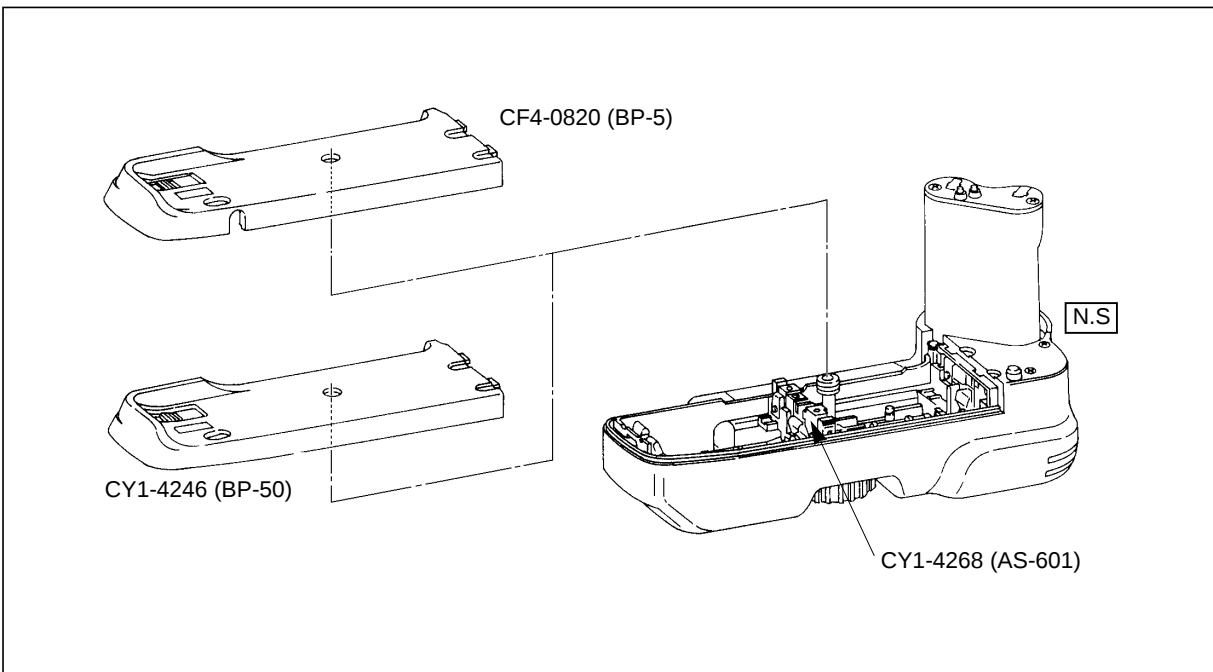 

REF.No.C12-8281,8282
 C12-8283,8284
 C12-8286,8287
 C12-8288
 C12-8293,8294
 C12-8296,8297

PARTS LIST

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA4-0390-000	E	2	LOOP
	CA4-4411-000	E	1	SCREW, TIGHTENING
	CA4-4851-000	E	2	CLASP
	CY3-0005-000	E	1	HOOK
	CY3-0025-000	E	1	HOOK
	XD2-1100-502		1	E RING

BATTERY PACK BP-50

REF.NO. C50-1901

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CF4-0820-000	D	1	COVER ASS'Y, BATTERY (BP-5)
	CY1-4246-000	D	1	COVER ASS'Y, BATTERY (BP-50)
	CY1-4268-000	E	1	BATTERY SPACER UNIT

ELECTRIC PARTS LIST

REF.No.C12-8281,8282

C12-8283,8284

C12-8286,8287

C12-8288

C12-8293,8294

C12-8296,8297

NEW	SYMBOL	PARTS NO.	DESCRIPTION	REMARK
	LCD DR.	CH4-0587-000	LCD DRIVER	
	TRG	CH6-3036-000	COIL, TRIGGER	
	RPR3	VV1-8168-303	RESISTOR, 30k OHM, 1/16W	
		VW4-1027-103	CAPACITOR, 0.01 μ F, 25V	
		Y11-3701-000	LEAD	WHITE
		Y11-3702-000	LEAD	BLACK
		Y11-3703-000	LEAD	RED
		Y11-3706-000	LEAD	ORANGE
		Y11-3711-000	LEAD	BLUE
		Y11-3714-000	LEAD	GLAY
		Y11-3901-000	LEAD	WHITE
		Y11-3902-000	LEAD	BLACK
		Y11-3903-000	LEAD	RED
		Y11-3904-000	LEAD	PINK
		Y11-3906-000	LEAD	ORANGE
		Y11-3907-000	LEAD	YELLOW
		Y11-3909-000	LEAD	GREEN
		Y11-3911-000	LEAD	BLUE
		Y11-3912-000	LEAD	PURPLE
		Y11-3913-000	LEAD	BROWN
		Y11-4402-000	LEAD	BLACK
		Y11-4403-000	LEAD	RED
		Y11-4404-000	LEAD	PINK
		Y11-5001-000	LEAD	WHITE
		Y11-5002-000	LEAD	BLACK
		Y11-5003-000	LEAD	RED