




IX240 SLR CAMERA

EOS IX E REF.NO.C12-4701

EOS IX C12-4703

PARTS CATALOG

CANON EOS IX E [A] EOS IX [B]

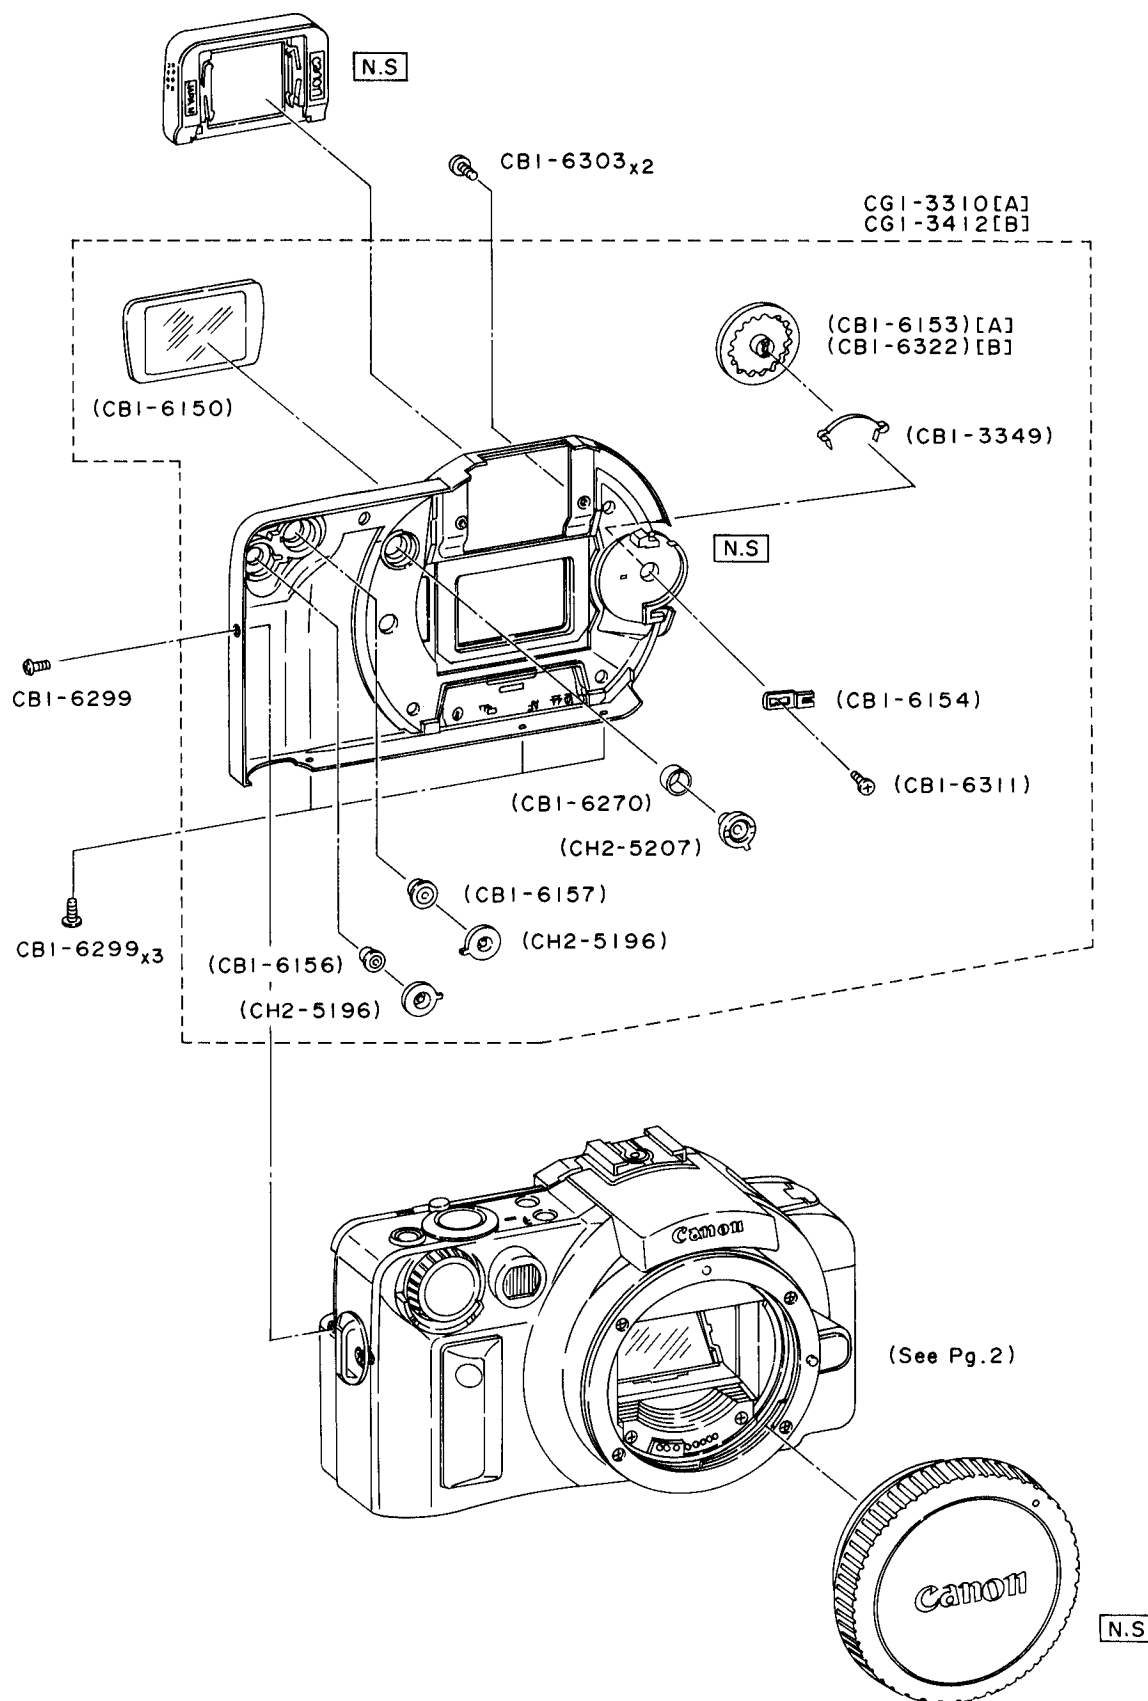


PARTS LIST

REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION	
	CB1-3349-000	C	1	SPRING, MAIN CLICK	
	CB1-6150-000	E	1	WINDOW, LCD	
	CB1-6153-000	E	1	DIAL, MODE SELECT	EOS IX E
	CB1-6154-000	E	1	LEVER, MODE DIAL	
	CB1-6156-000	E	1	BUTTON, AV-T	
	CB1-6157-000	E	1	BUTTON, AE-L	
	CB1-6270-000	E	1	BUTTON, PRINT ASPECT	
	CB1-6299-000	F	4	SCREW	
	CB1-6303-000	F	2	SCREW	
	CB1-6311-000	F	1	SCREW	
	CB1-6322-000	E	1	DIAL, MODE SELECT	EOS IX
	CG1-3310-000	D	1	COVER ASS'Y, REAR	EOS IX E
	CG1-3412-000	D	1	COVER ASS'Y, REAR	EOS IX
	CH2-5196-000	E	2	CONTACT, RUBBER SW	
	CH2-5207-000	E	1	CONTACT, RUBBER SW	

CANON EOS IX E [A]
EOS IX [B]

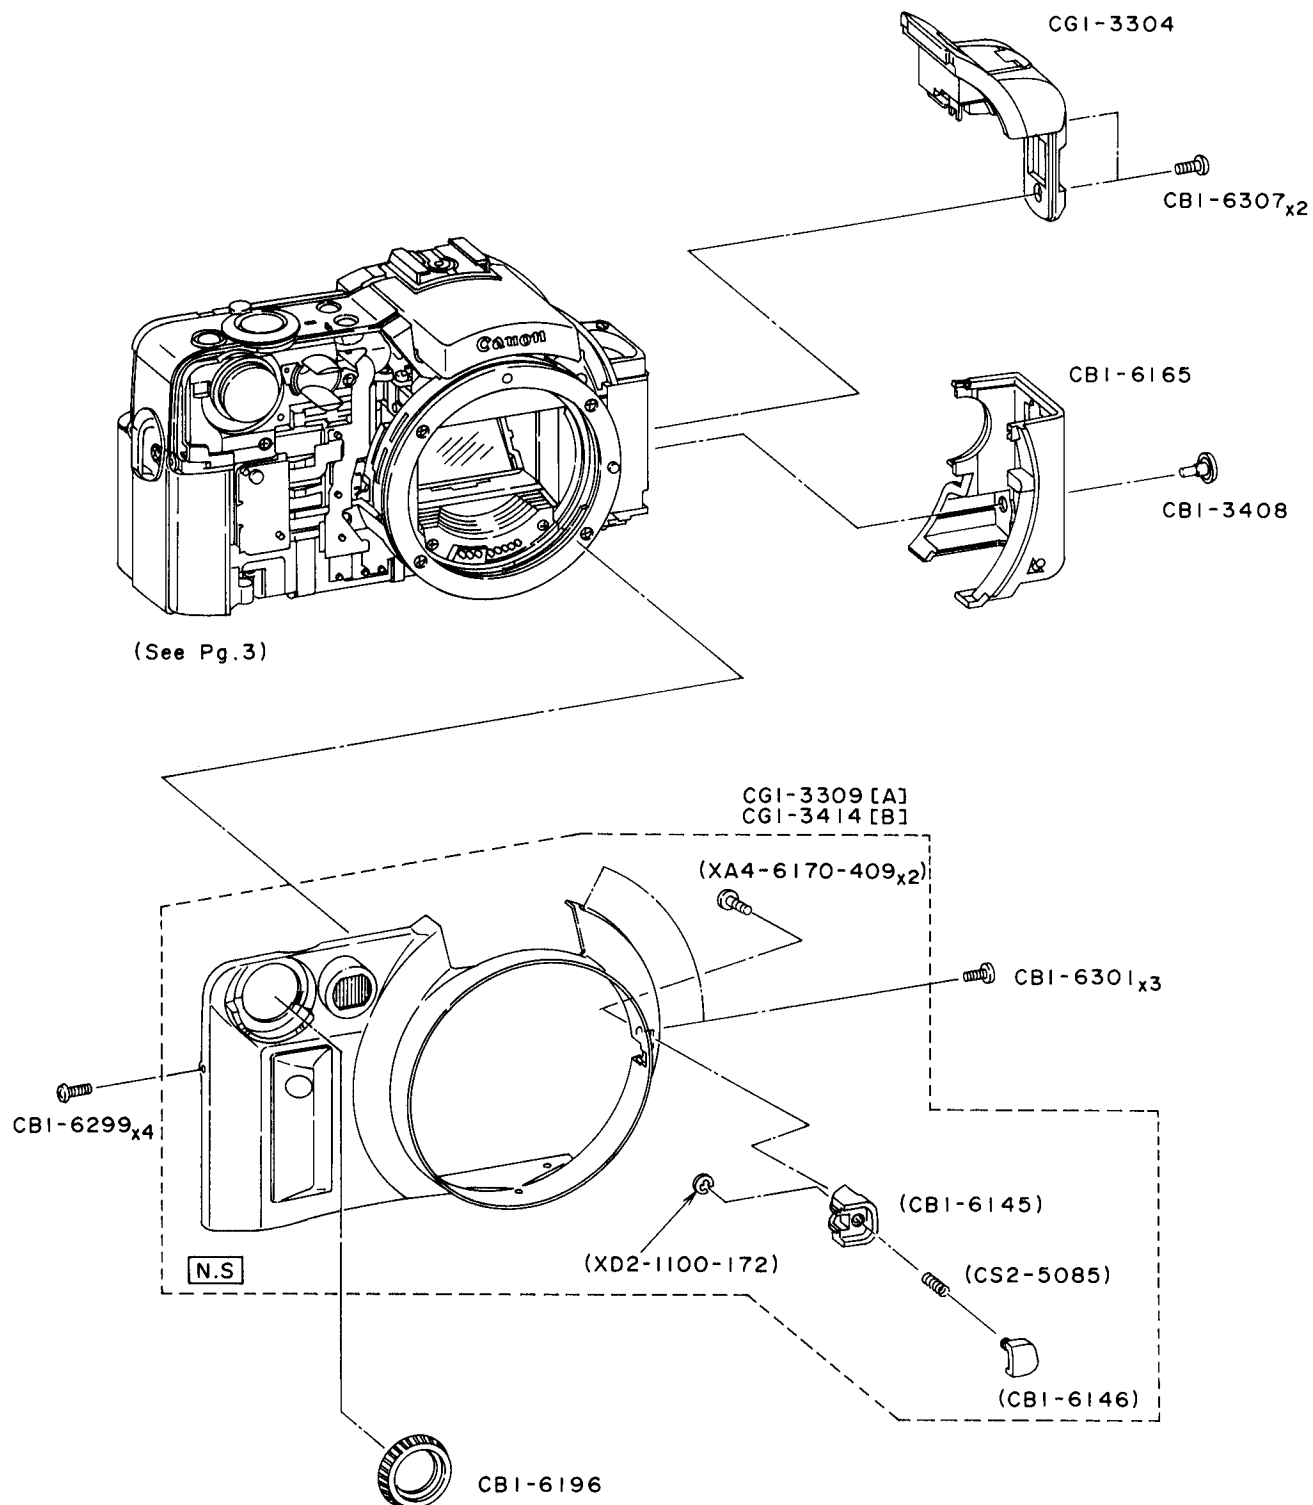


PARTS LIST

REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION	
	CB1-3408-000	C	1	CAP, REMOCON TERMINAL	
	CB1-6145-000	E	1	HOLDER, LENS UNLOCK BUTTON	
	CB1-6146-000	E	1	BUTTON, LENS ANLOCK	
	CB1-6165-000	D	1	COVER, CARTRIGE	
	CB1-6196-000	E	1	RING, SELECT DIAL	
	CB1-6299-000	F	4	SCREW	
	CB1-6301-000	F	3	SCREW	
	CB1-6307-000	F	2	SCREW	
	CG1-3304-000	D	1	COVER ASS'Y, CARTRIGE	
	CG1-3309-000	D	1	COVER ASS'Y, FRONT	EOS IX E
	CG1-3414-000	D	1	COVER ASS'Y, FRONT	EOS IX
	CS2-5085-000	E	1	SPRING, COIL	
	XA4-6170-409	F	2	SCREW	
	XD2-1100-172	F	1	RING, E	

CANON EOS IX E [A] EOS IX [B]

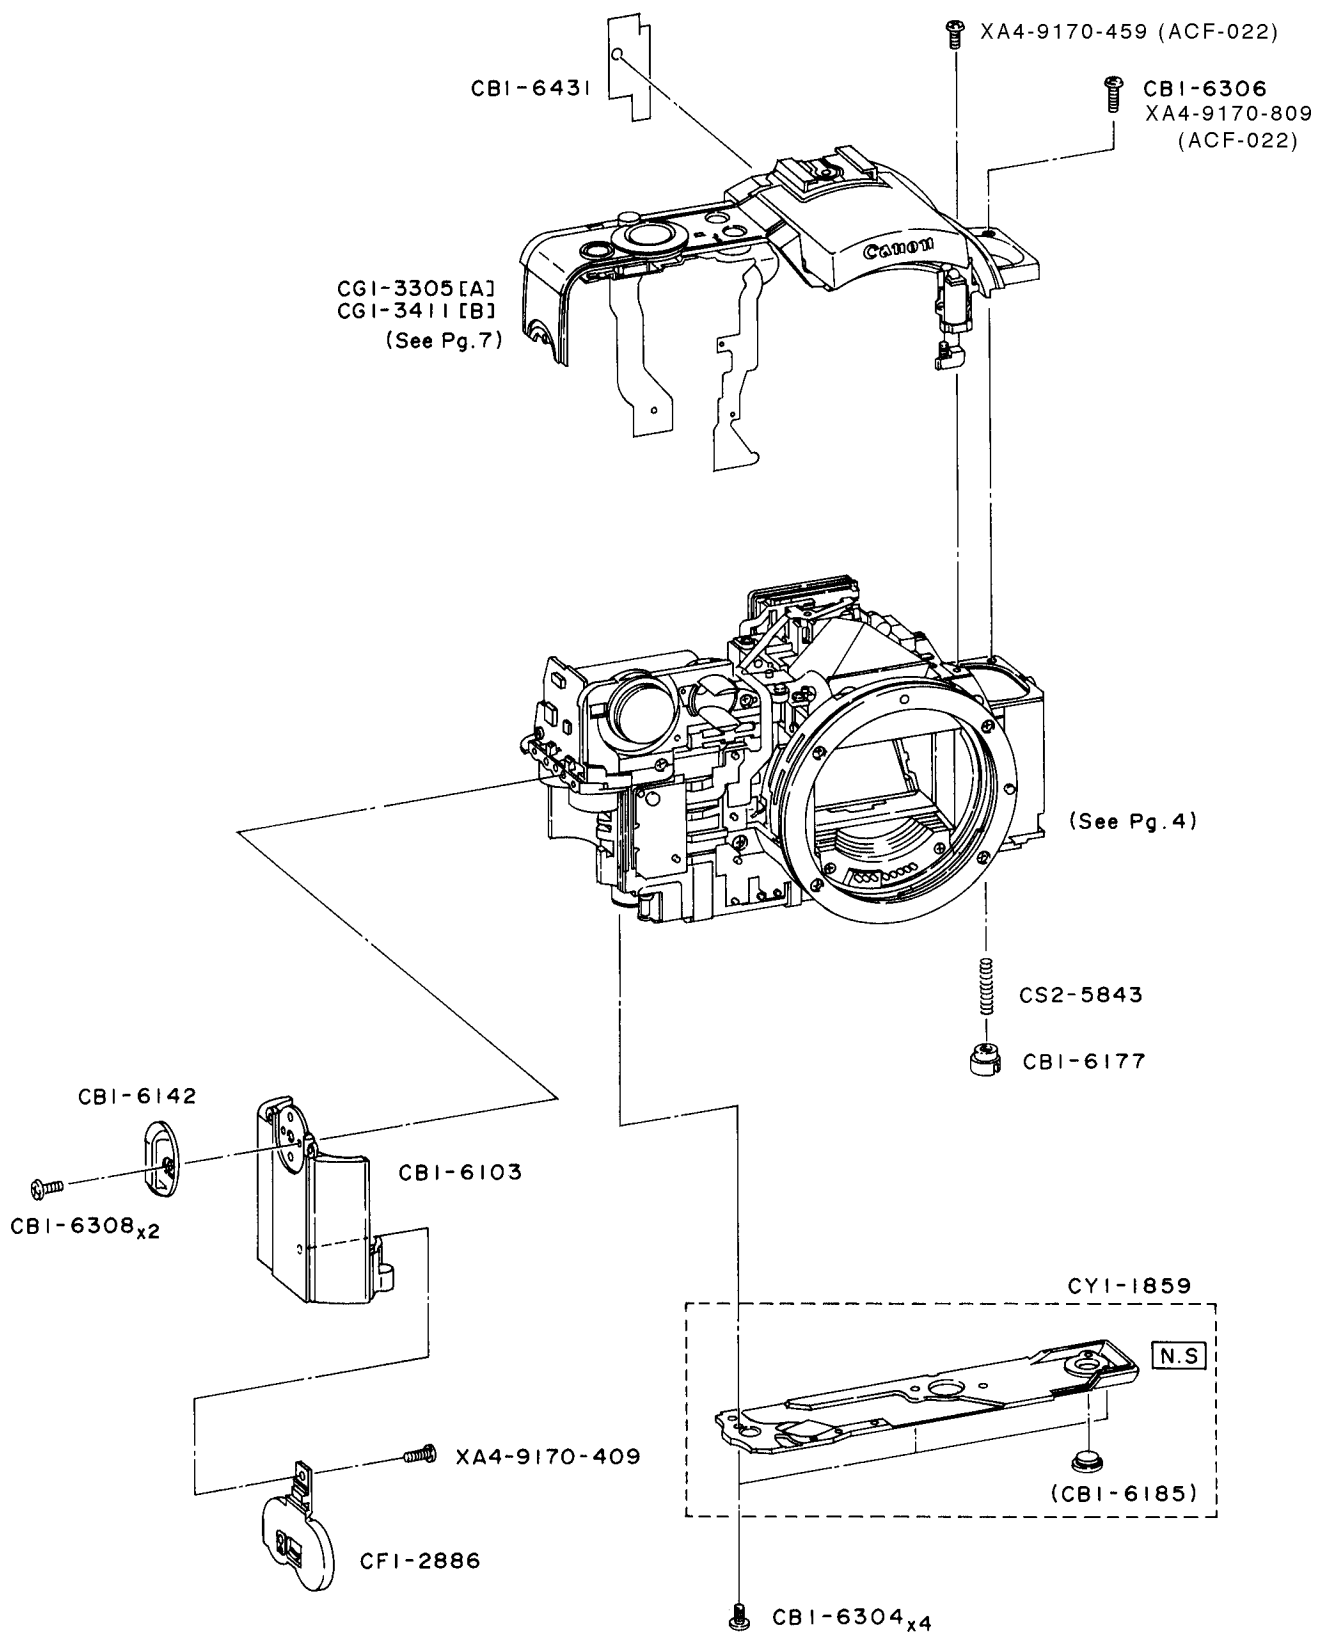


PARTS LIST

REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION	
	CB1-6103-000	E	1	CASE, BATTERY	
	CB1-6142-000	E	1	HOLDER, STRAP	
	CB1-6177-000	E	1	CAP, FORK GEAR	
	CB1-6185-000	E	1	CAP, FILM EMERGENCY REWIND	
	CB1-6304-000	F	5	SCREW	
	CB1-6306-000	F	1	SCREW	
	CB1-6308-000	F	2	SCREW	
	CB1-6431-000	D	1	LIGHT SHIELD	
	CF1-2886-000	D	1	BATTERY COVER ASS'Y	
	CG1-3305-000	D	1	COVER ASS'Y, TOP	EOS IX E
	CG1-3411-000	D	1	COVER ASS'Y, TOP	EOS IX
	CS2-5843-000	E	1	SPRING, COIL	
	CY1-1859-000	D	1	COVER, BOTTOM	
	XA4-9170-409	F	1	SCREW	
	XA4-9170-459	F	1	SCREW	
	XA4-9170-809	F	1	SCREW	

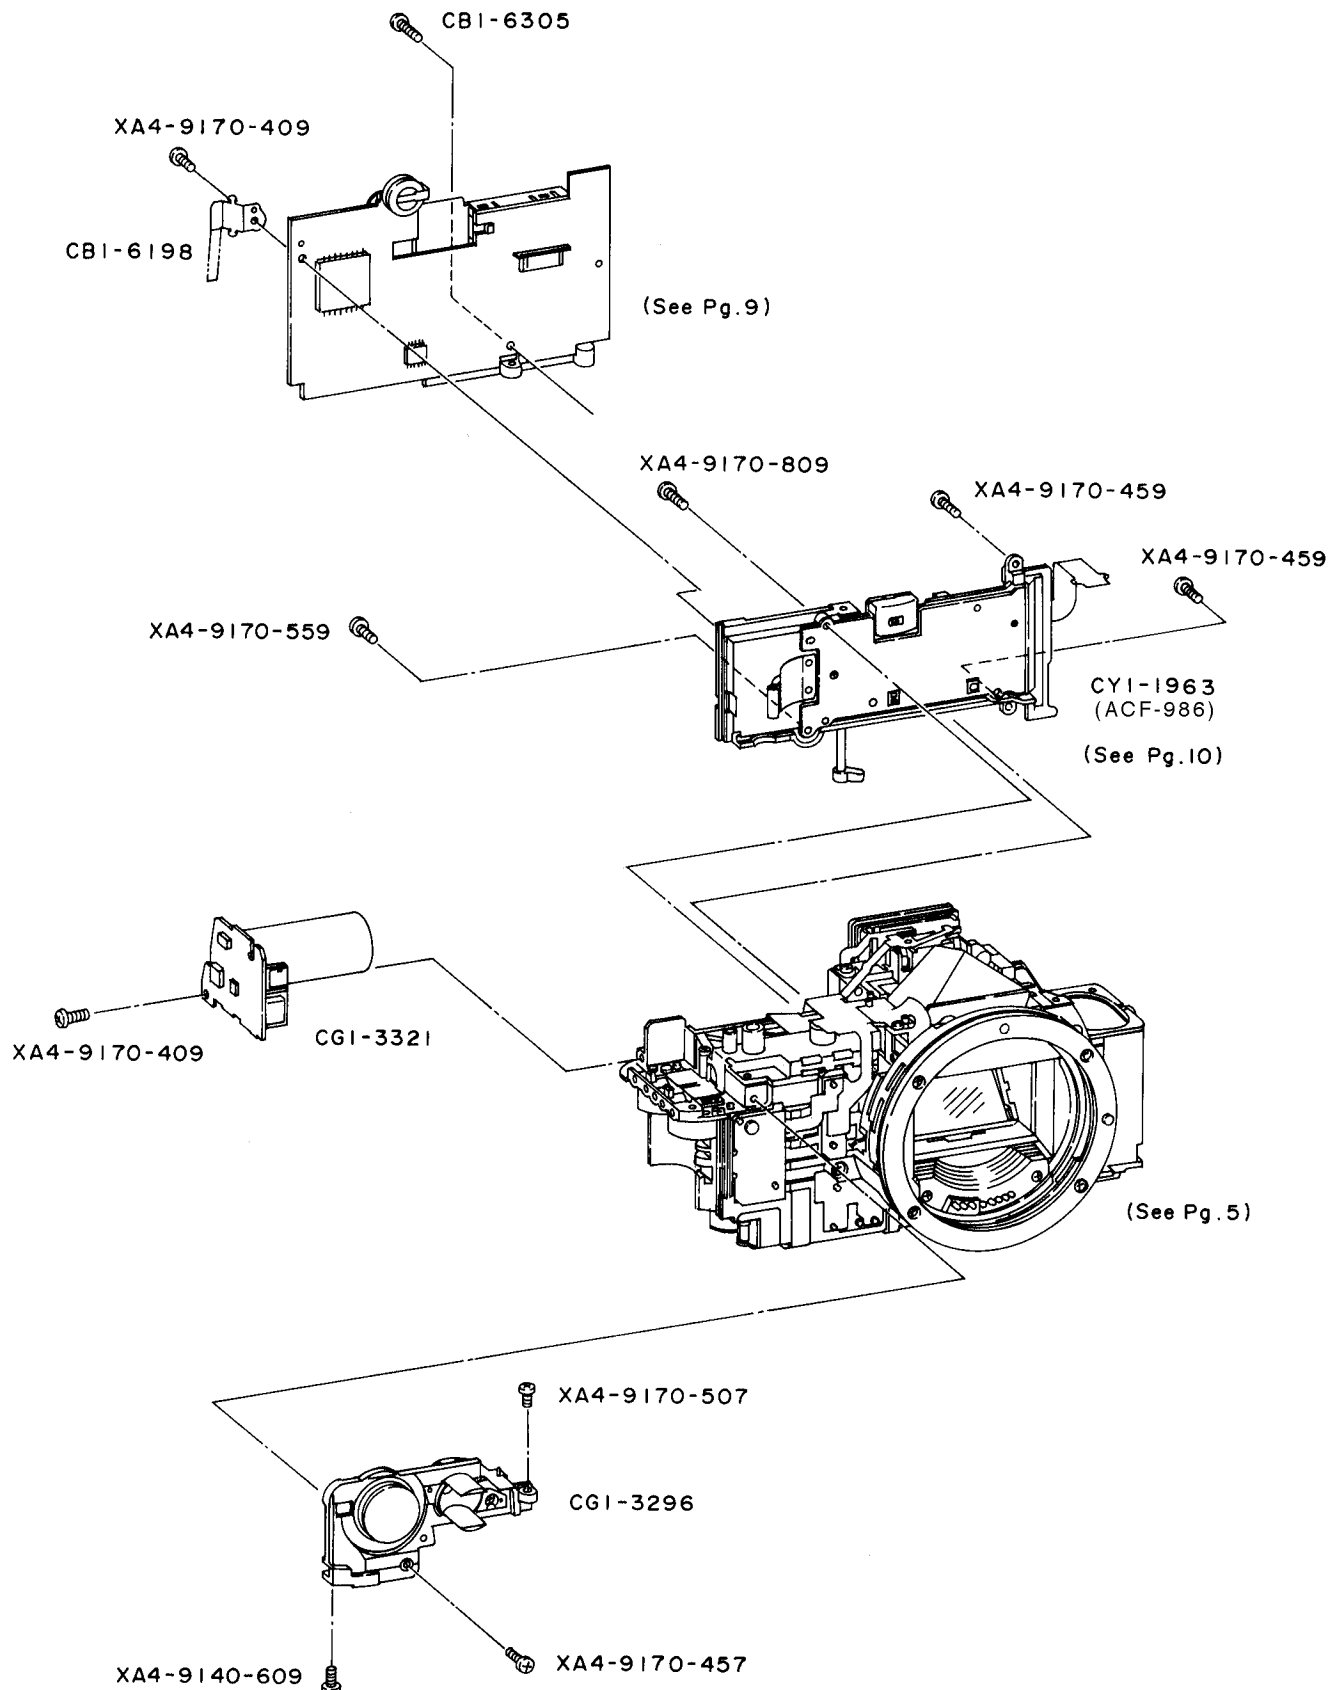
CANON EOS IX E [A]
EOS IX [B]

PARTS LIST

REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-6198-000	E	1	PLATE, REAR COVER GND
	CB1-6305-000	F	1	SCREW
	CG1-3296-000	E	1	DIAL ASS'Y, SELECT
	CG1-3321-000	D	1	PCB ASS'Y, FLASH
	CY1-1963-000	D	1	FILM PRESSURE PLATE ASS'Y
	XA4-9140-609	F	1	SCREW
	XA4-9170-409	F	2	SCREW
	XA4-9170-457	F	1	SCREW
	XA4-9170-459	F	2	SCREW
	XA4-9170-507	F	1	SCREW
	XA4-9170-559	F	1	SCREW
	XA4-9170-809	F	1	SCREW

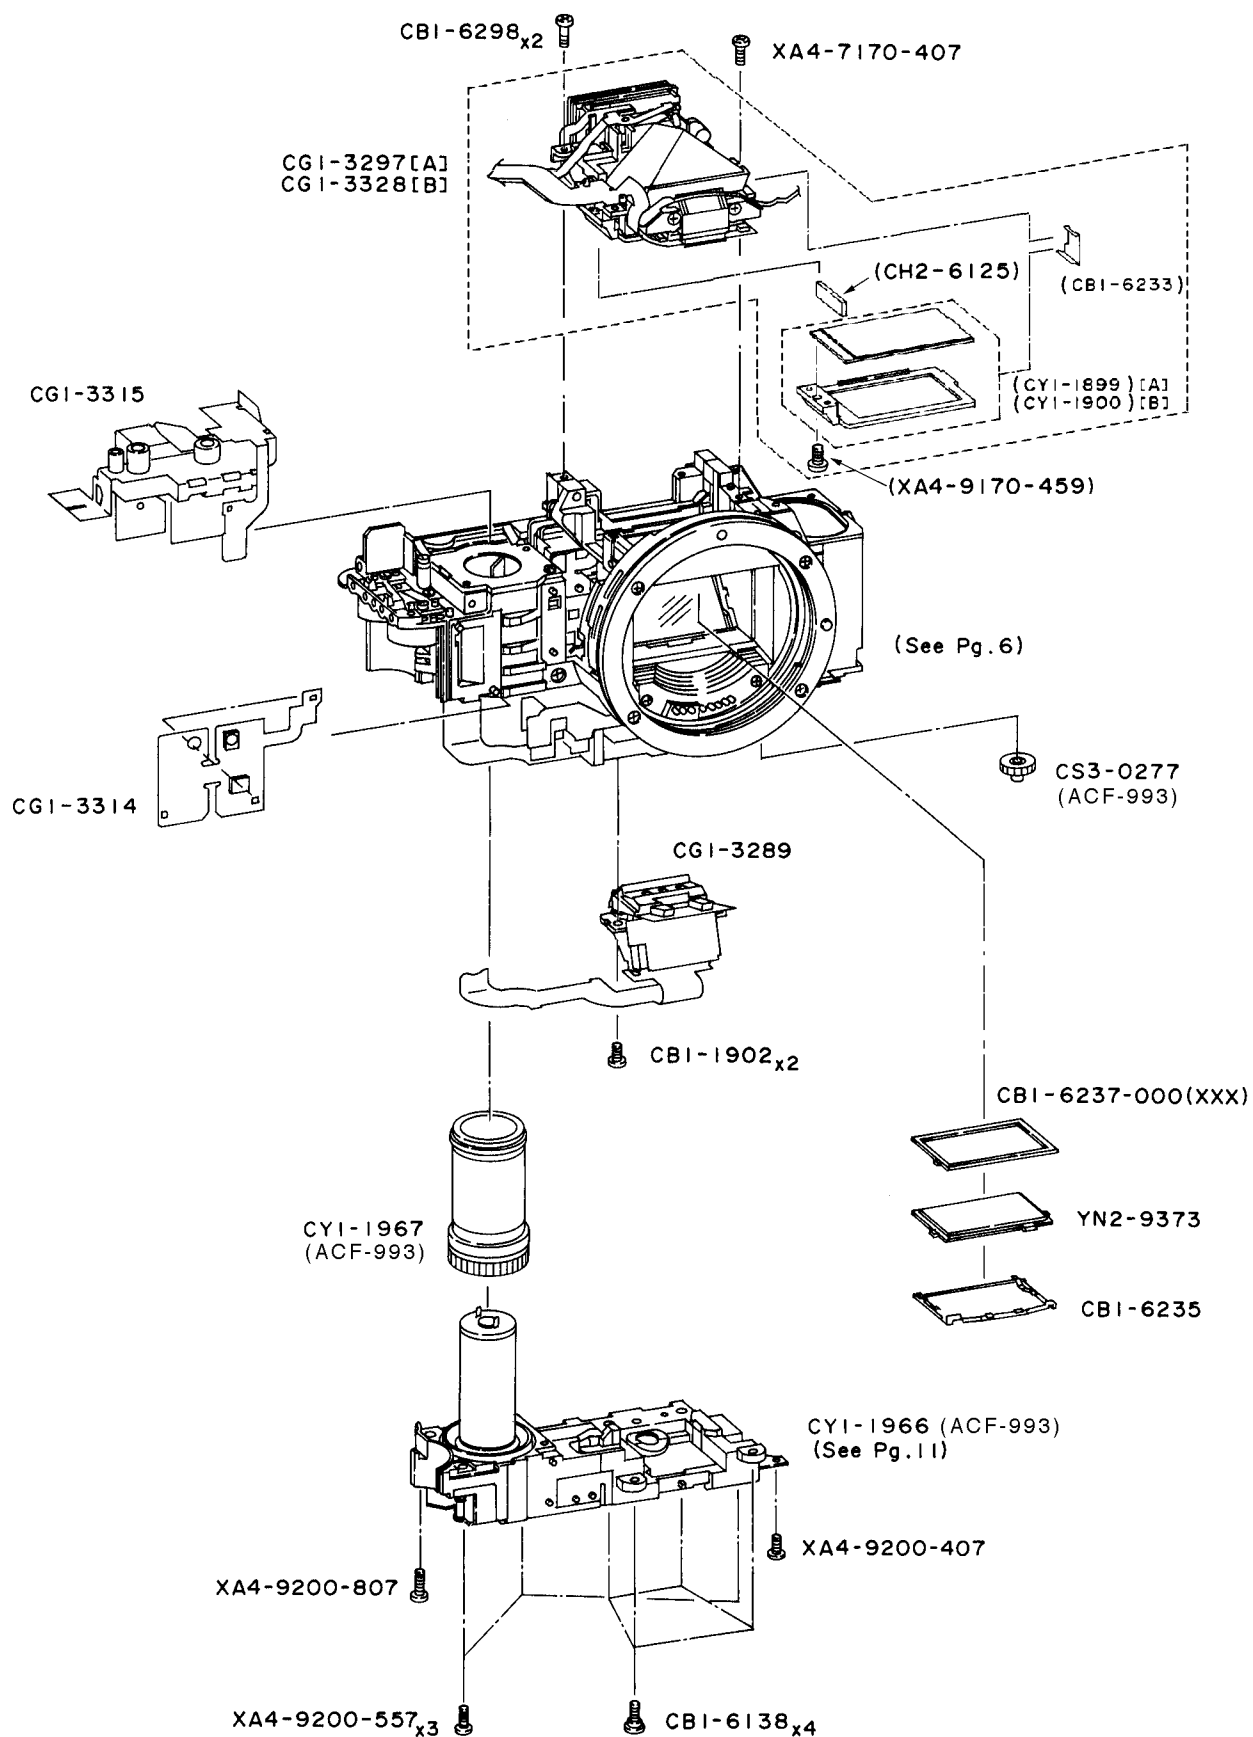
CANON EOS IX E [A]
EOS IX [B]

PARTS LIST

REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION	
	CB1-1902-000	F	2	SCREW	
	CB1-6138-000	F	4	SCREW	
	CB1-6233-000	E	1	HOLDER, FLC LEFT	
	CB1-6235-000	E	1	HOLDER, FOCUSING SCREEN	
	CB1-6237-000 010	E	1	SPACER, FOCUSING SCREEN	
	CB1-6237-000 020	E	1	SPACER, FOCUSING SCREEN	
	CB1-6237-000 030	E	1	SPACER, FOCUSING SCREEN	
	CB1-6237-000 040	E	1	SPACER, FOCUSING SCREEN	
	CB1-6237-000 050	E	1	SPACER, FOCUSING SCREEN	
	CB1-6237-000 060	E	1	SPACER, FOCUSING SCREEN	
	CB1-6237-000 070	E	1	SPACER, FOCUSING SCREEN	
	CB1-6237-000 080	E	1	SPACER, FOCUSING SCREEN	
	CB1-6237-000 090	E	1	SPACER, FOCUSING SCREEN	
	CB1-6237-000 100	E	1	SPACER, FOCUSING SCREEN	
	CB1-6298-000	F	2	SCREW	
	CG1-3289-000	D	1	AF ASS'Y	
	CG1-3297-000	E	1	PENTAPRISM ASS'Y	EOS IX E
	CG1-3314-000	D	1	FPC ASS'Y, REMOCON	
	CG1-3315-000	D	1	FPC ASS'Y, MOTOR	
	CG1-3328-000	E	1	PENTAPRISM ASS'Y	EOS IX
	CH2-6125-000	E	1	CONTACT, ELASTIC	
	CS3-0277-000	E	1	GEAR, REWIND TRANSFER (4)	
	CY1-1899-000	E	1	LCD ASS'Y, FINDER	EOS IX E
	CY1-1900-000	E	1	LCD ASS'Y, FINDER	EOS IX
	CY1-1966-000	E	1	FILM LOADING BASE ASS'Y	
	CY1-1967-000	E	1	SPOOL ASS'Y	
	XA4-7170-407	F	1	SCREW	
	XA4-9170-459	F	1	SCREW	
	XA4-9200-407	F	1	SCREW	
	XA4-9200-557	F	3	SCREW	
	XA4-9200-807	F	1	SCREW	
	YN2-9373-000	D	1	SCREEN, FOCUSING	

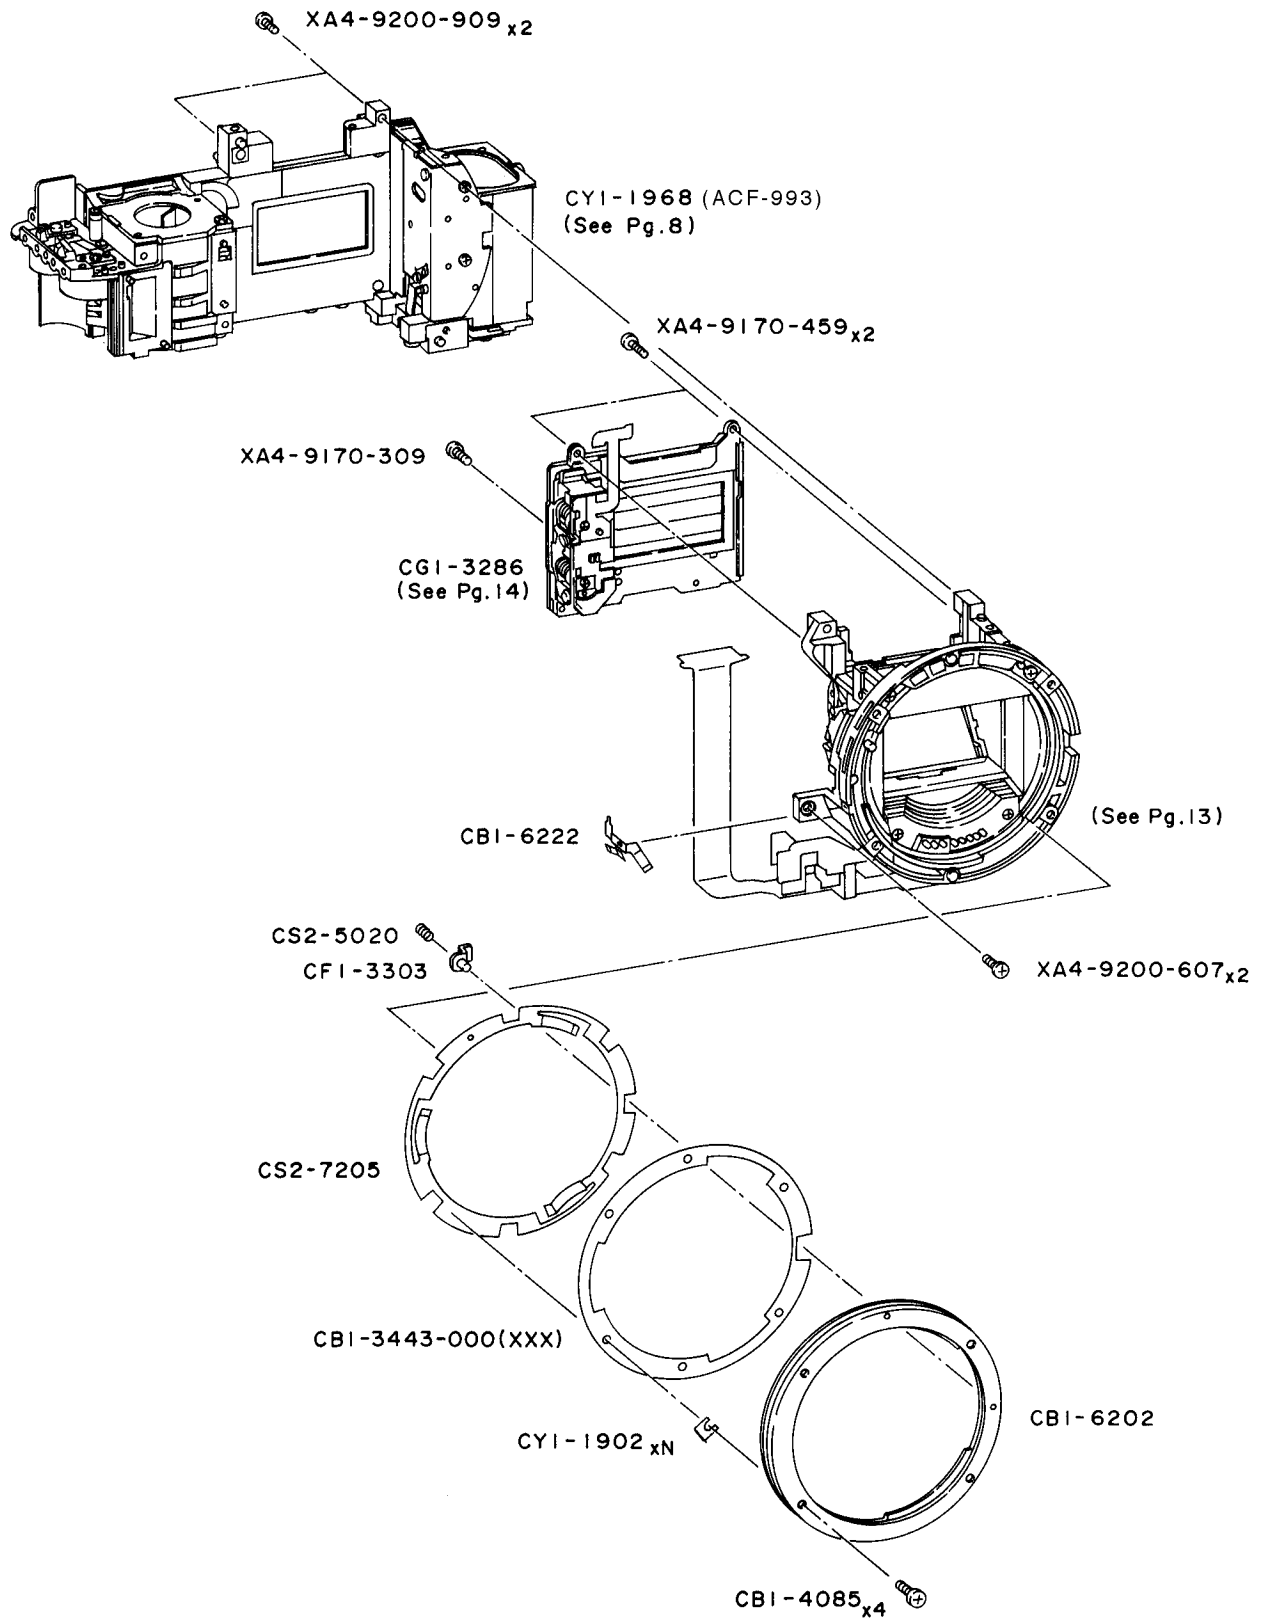CANON EOS IX E [A]
EOS IX [B]

PARTS LIST


REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-3443-000 005	E	1	SPACER, MOUNT
	CB1-3443-000 010	E	1	SPACER, MOUNT
	CB1-3443-000 012	E	1	SPACER, MOUNT
	CB1-3443-000 015	E	1	SPACER, MOUNT
	CB1-3443-000 018	E	1	SPACER, MOUNT
	CB1-4085-000	F	4	SCREW
	CB1-6202-000	E	1	BODY MOUNT
	CB1-6222-000	E	1	PLATE, MOUNT GND
	CF1-3303-000	E	1	LEVER, LENS LOCK
	CG1-3286-000	C	1	SHUTTER ASS'Y
	CS2-5020-000	E	1	SPRING, COIL
	CS2-7205-000	E	1	SPRING, MOUNT
	CY1-1902-000	E	1	SPACER, MOUNT
	CY1-1968-000	E	1	BODY ASS'Y
	XA4-9170-309	F	1	SCREW
	XA4-9170-459	F	2	SCREW
	XA4-9200-607	F	2	SCREW
	XA4-9200-909	F	2	SCREW

0.05 mm

CANON EOS IX E [A] EOS IX [B]

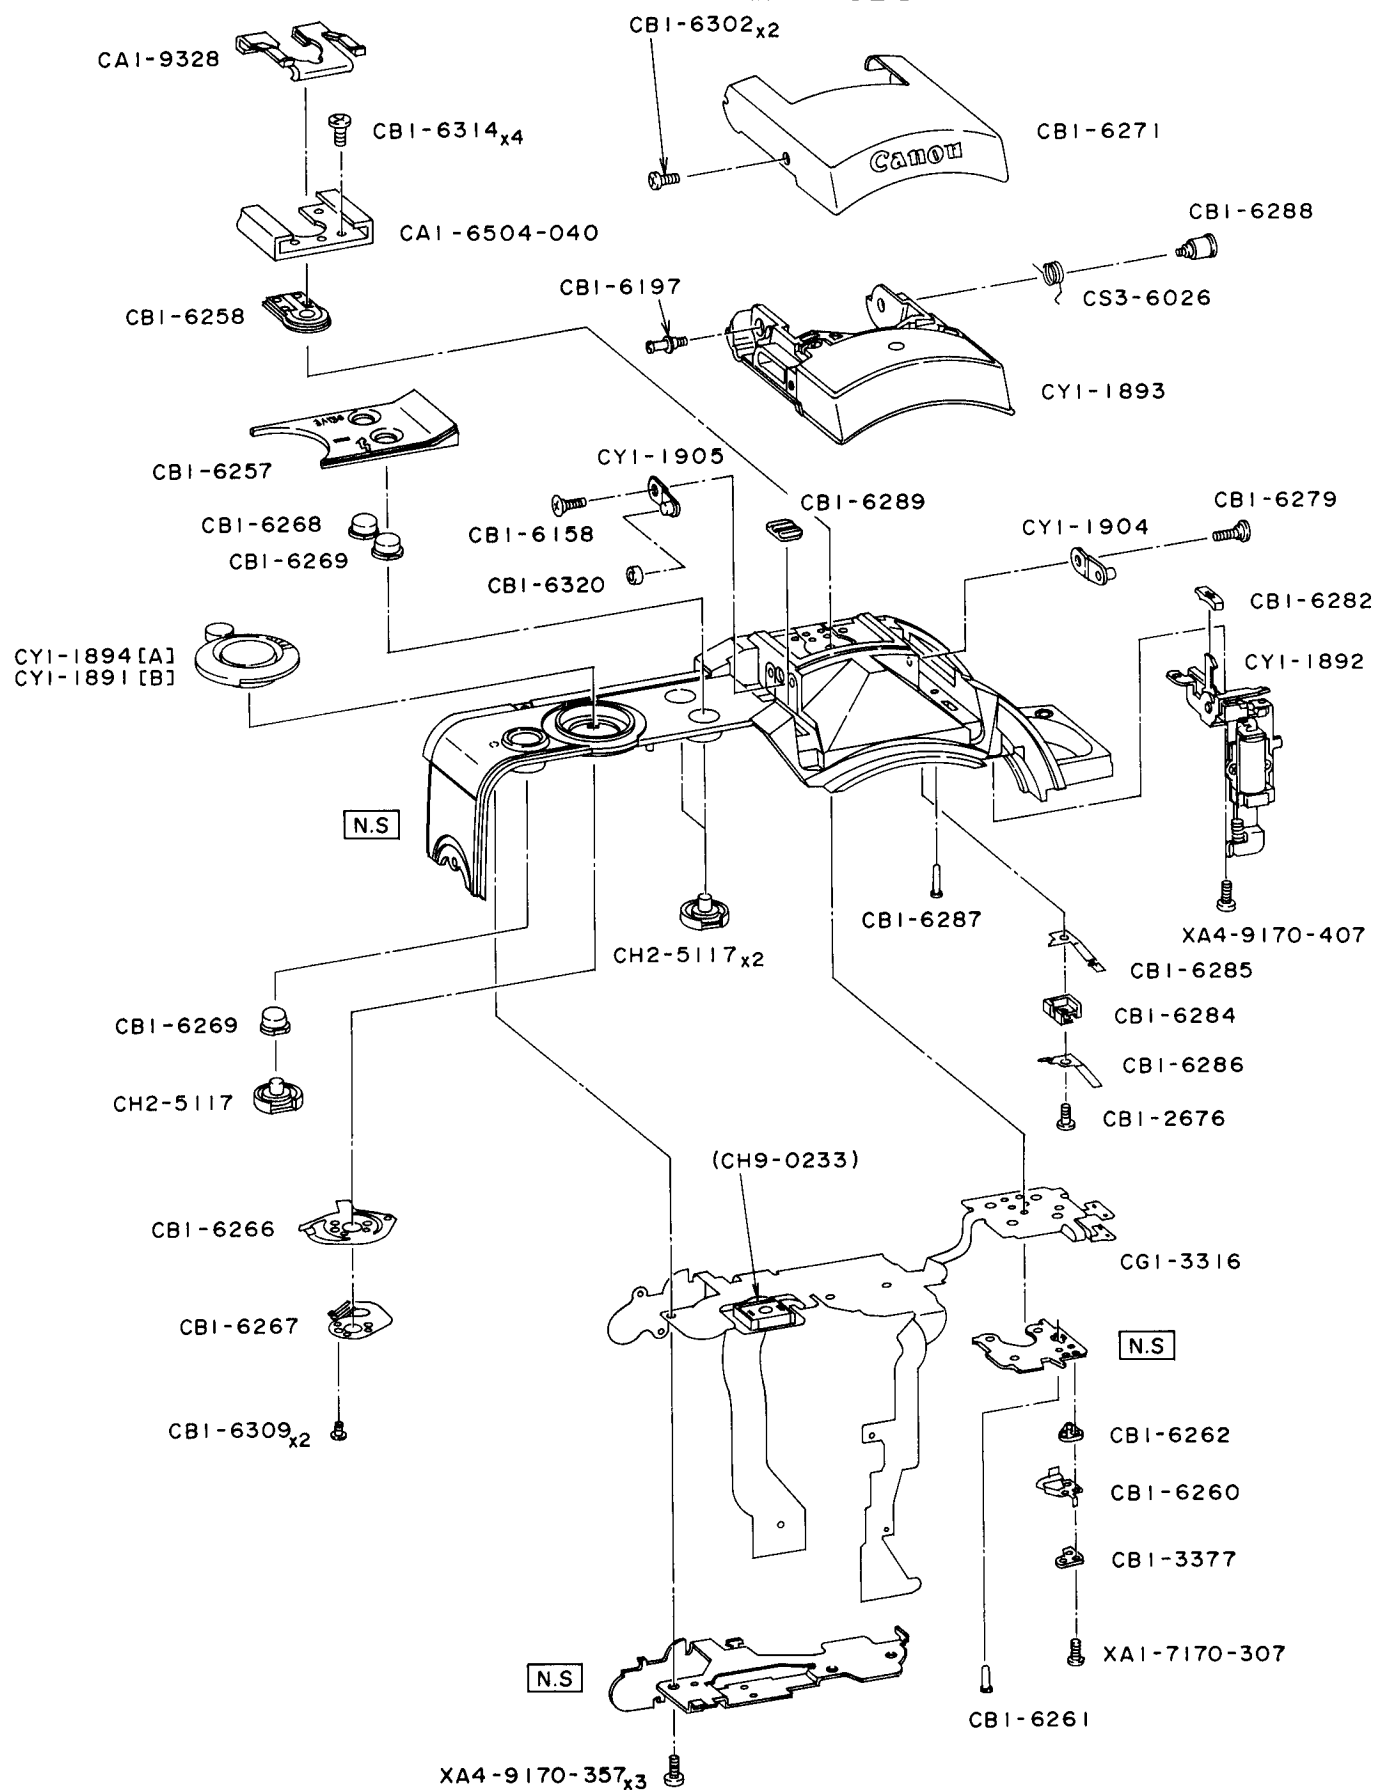


PARTS LIST

REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION	
	CA1-6504-040	D	1	SHOE, ACCESSORY	
	CA1-9328-000	C	1	SPRING, PLATE	
	CB1-2676-000	F	1	SCREW	
	CB1-3377-000	E	1	CONTACT, SHOE IN USE 2	
	CB1-6158-000	F	1	SCREW	
	CB1-6197-000	F	1	SCREW	
	CB1-6257-000	E	1	PLATE, TOP COVER	
	CB1-6258-000	E	1	BASE, ACCESORY SHOE	
	CB1-6260-000	E	1	CONTACT, SHOE IN USE	
	CB1-6261-000	E	1	SHAFT, ACC.SHOE	
	CB1-6262-000	E	1	BASE, SHOE IN USE 1	
	CB1-6266-000	E	1	SPRING, PLATE	
	CB1-6267-000	E	1	CONTACT, MAIN SW	
	CB1-6268-000	E	1	BUTTON, TOP COVER SW(BLUE)	
	CB1-6269-000	E	2	BUTTON, TOP COVER SW(BLACK)	
	CB1-6271-000	D	1	COVER, FLASH	
	CB1-6279-000	F	1	SCREW, FLASH ARM	
	CB1-6282-000	D	1	COVER, FLASH HOOK	
	CB1-6284-000	E	1	HOLDER, FLASH POP UP SW	
	CB1-6285-000	E	1	CONTACT, POP UP SW 1	
	CB1-6286-000	E	1	CONTACT, POP UP SW 2	
	CB1-6287-000	E	1	SHAFT, FLASH POP UP	
	CB1-6288-000	F	1	SCREW, FLASH CASE(L)	
	CB1-6289-000	E	1	DAMPER, FLASH POP UP	
	CB1-6302-000	F	2	SCREW	
	CB1-6309-000	F	2	SCREW	
	CB1-6314-000	F	4	SCREW	
	CB1-6320-000	E	1	TUBE, FLASH STOPPER	
	CG1-3316-000	D	1	FPC ASS'Y, TOP	
	CH2-5117-000	E	3	CONTACT, RUBBER	
	CH9-0233-000	E	1	SWITCH, RELEASE	
	CS3-6026-000	E	1	SPRING, TORTION	
	CY1-1891-000	E	1	DIAL ASS'Y, MAIN SW	EOS IX
	CY1-1892-000	E	1	SOLENOID ASS'Y	
	CY1-1893-000	D	1	FLASH ASS'Y	
	CY1-1894-000	E	1	DIAL ASS'Y, MAIN SW	EOS IX E
	CY1-1904-000	E	1	LEVER, FLASH LEFT ARM	
	CY1-1905-000	E	1	LEVER, FLASH RIGHT ARM	
	XA1-7170-307	F	1	SCREW	
	XA4-9170-357	F	3	SCREW	
	XA4-9170-407	F	1	SCREW	

CANON EOS IX E [A] EOS IX [B]

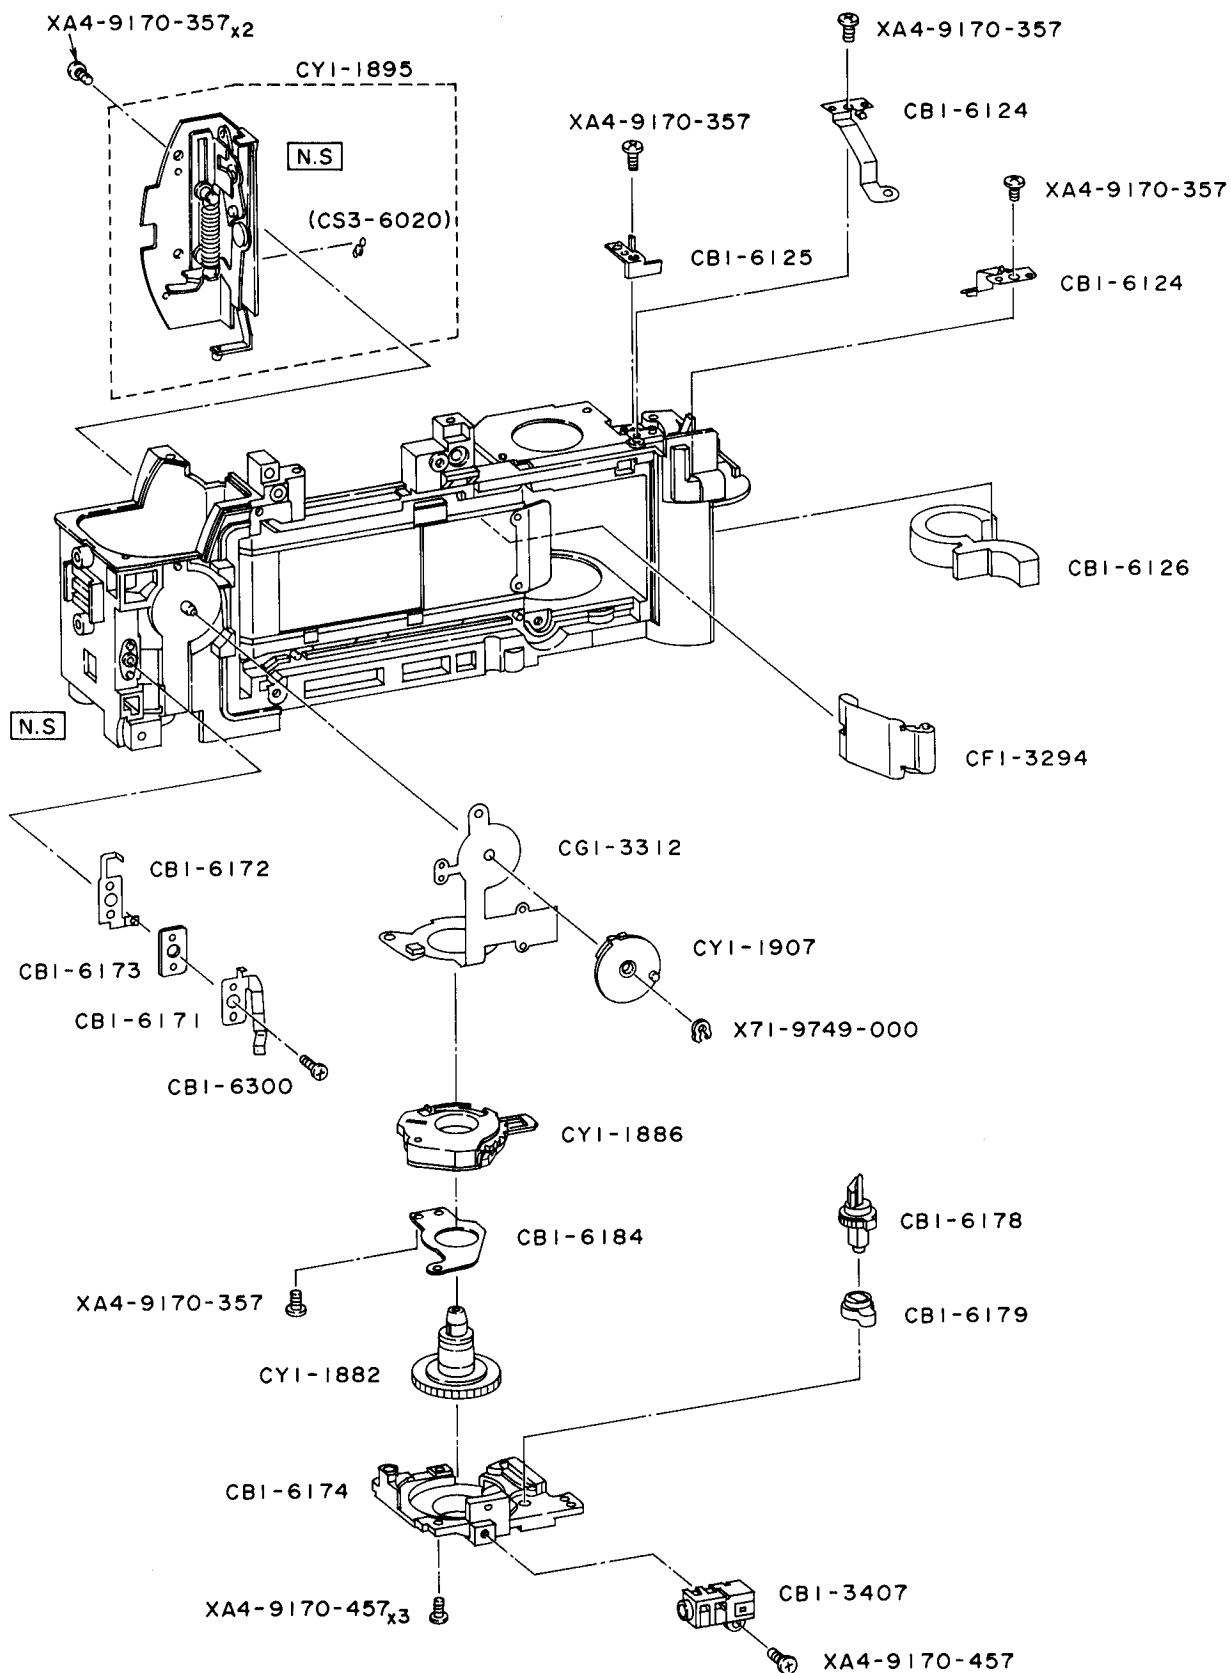


PARTS LIST

REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-3407-000	E	1	TERMINAL, REMOTE
	CB1-6124-000	E	2	CONTACT, BATTERY
	CB1-6125-000	E	1	CONTACT, BATTERY RESET
	CB1-6126-000	E	1	CUSHION, BATTERY
	CB1-6171-000	E	1	CONTACT, CARTRIGE IN SW G
	CB1-6172-000	E	1	CONTACT, CARTRIGE IN SW
	CB1-6173-000	E	1	INSULATOR, CRT IN SW
	CB1-6174-000	D	1	COVER, FORK GEAR
	CB1-6178-000	E	1	DISK DRIVER
	CB1-6179-000	E	1	DISK DRIVER REVOLVER
	CB1-6184-000	E	1	PLATE, FORK PARTITION
	CB1-6300-000	F	1	SCREW
	CF1-3294-000	D	1	AL HOLDER ASS'Y
	CG1-3312-000	D	1	FPC ASS'Y, MODE DIAL
	CS3-6020-000	E	1	SPRING, TORTION
	CY1-1882-000	E	1	GEAR ASS'Y, FORK
	CY1-1886-000	E	1	GEAR ASS'Y, CRT CONTROL
	CY1-1895-000	E	1	LEVER ASS'Y, EJECT
	CY1-1907-000	E	1	CONTACT ASS'Y, MODE DIAL
	X71-9749-000	E	1	RETAINER
	XA4-9170-357	F	6	SCREW
	XA4-9170-457	F	4	SCREW

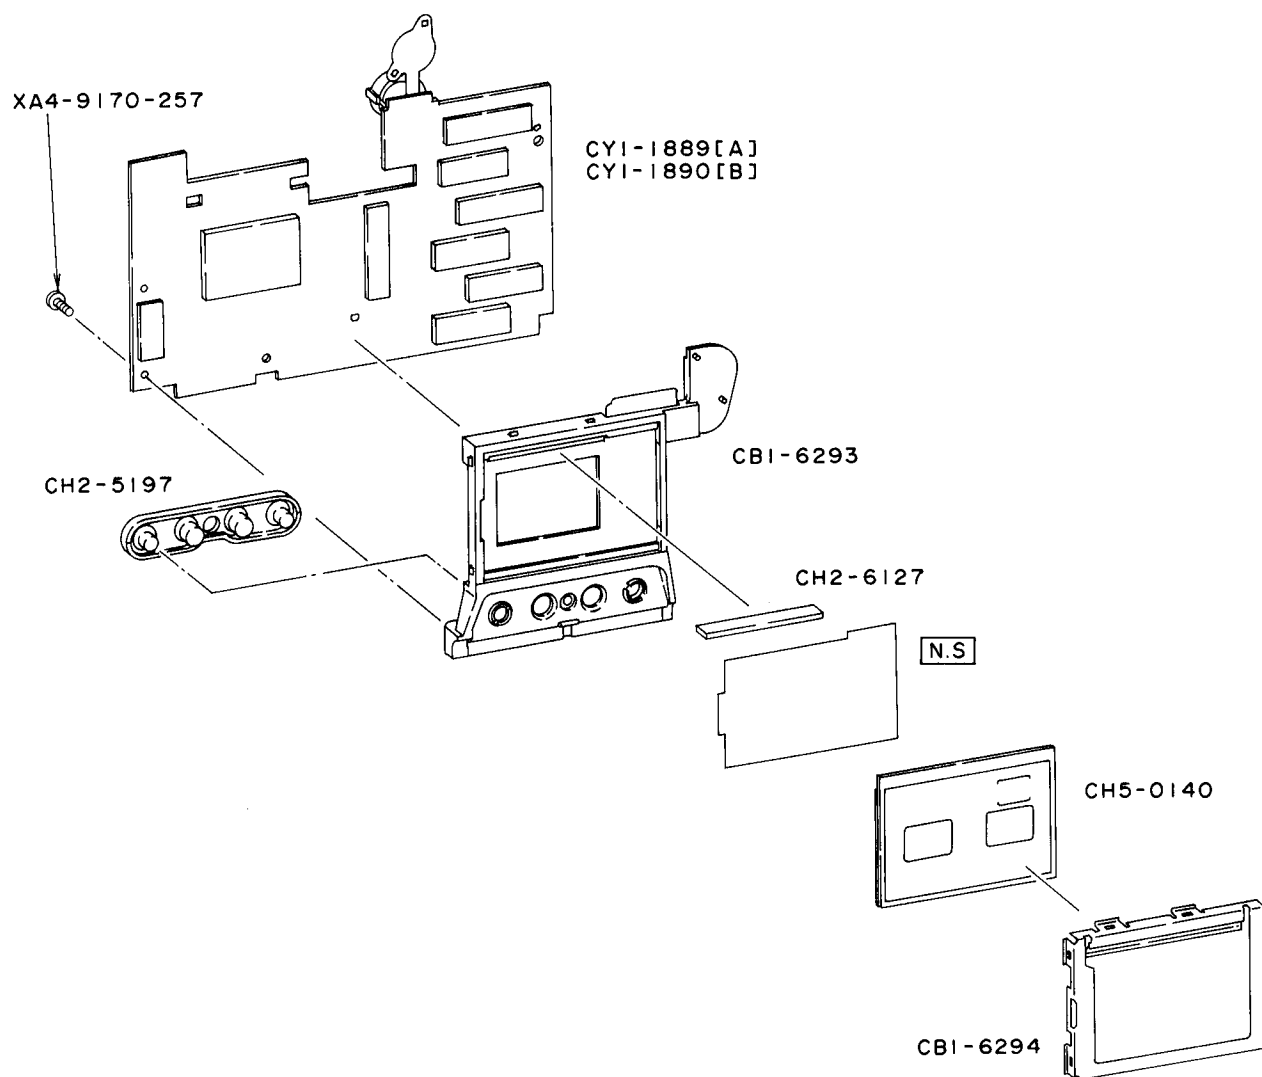
CANON EOS IX E [A]
EOS IX [B]

PARTS LIST

REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION	
	CB1-6293-000	E	1	HOLDER, LCD BASE	
	CB1-6294-000	E	1	HOLDER, LCD	
	CH2-5197-000	E	1	CONTACT, RUBBER SW	
	CH2-6127-000	E	1	CONTACT, ELASTIC	
	CH5-0140-000	D	1	LCD, OUT SIDE	
	CY1-1889-000	D	1	PCB ASS'Y, MAIN	EOS IX E
	CY1-1890-000	D	1	PCB ASS'Y, MAIN	EOS IX
	XA4-9170-257	F	1	SCREW	

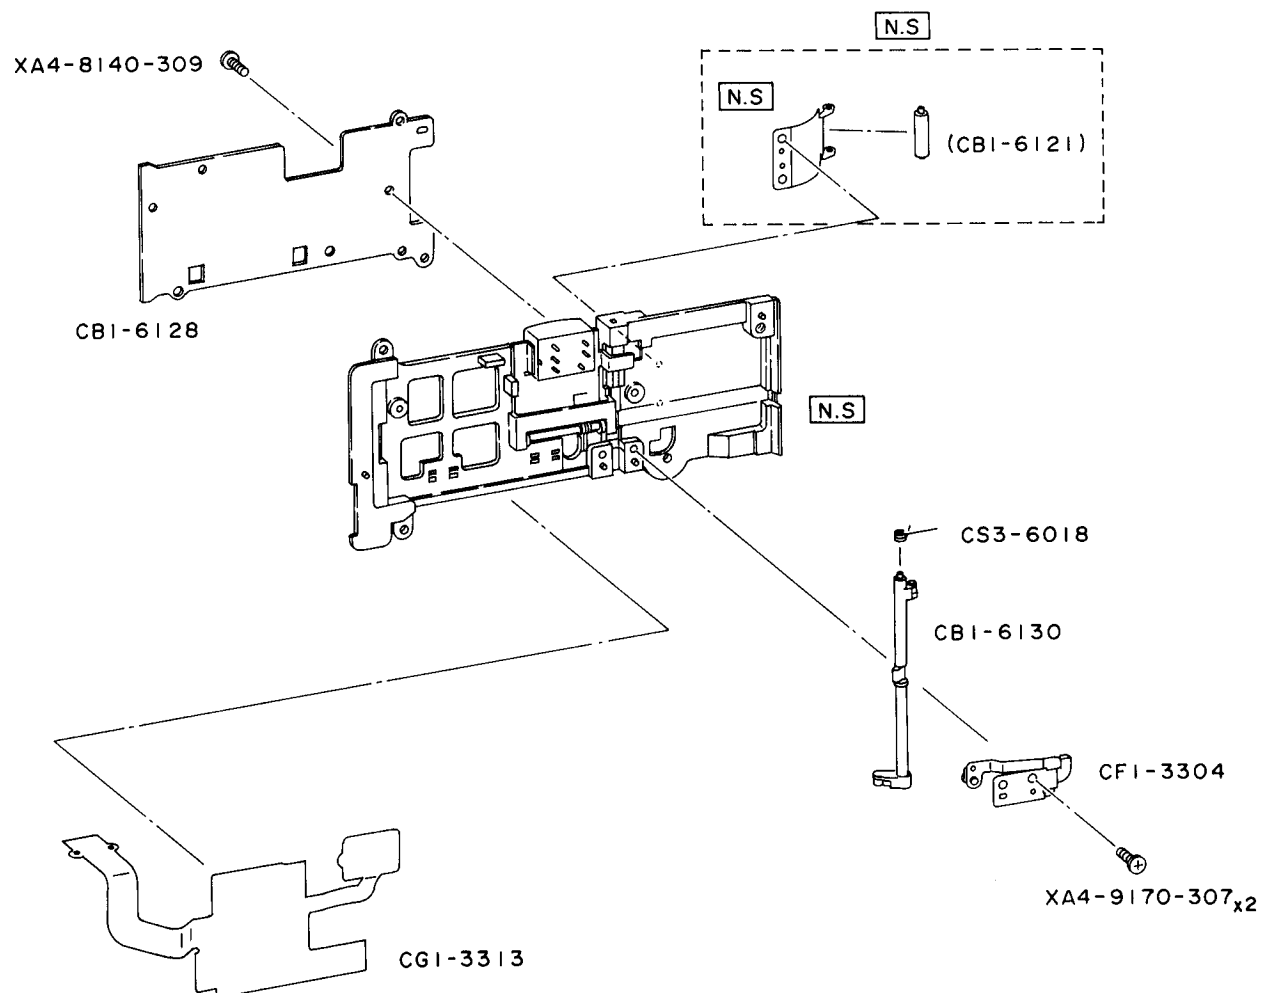CANON EOS IX E [A]
EOS IX [B]


PARTS LIST

REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-6121-000	E	1	ROLLER, AL
	CB1-6128-000	E	1	PLATE, FILM PRESSURE
	CB1-6130-000	E	1	CAM SHAFT
	CF1-3304-000	E	1	HOLDER ASS'Y, CAM SHAFT
	CG1-3313-000	D	1	FPC ASS'Y, IX
	CS3-6018-000	E	1	SPRING, TORTION
	XA4-8140-309	F	1	SCREW
	XA4-9170-307	F	2	SCREW

CANON EOS IX E [A] EOS IX [B]

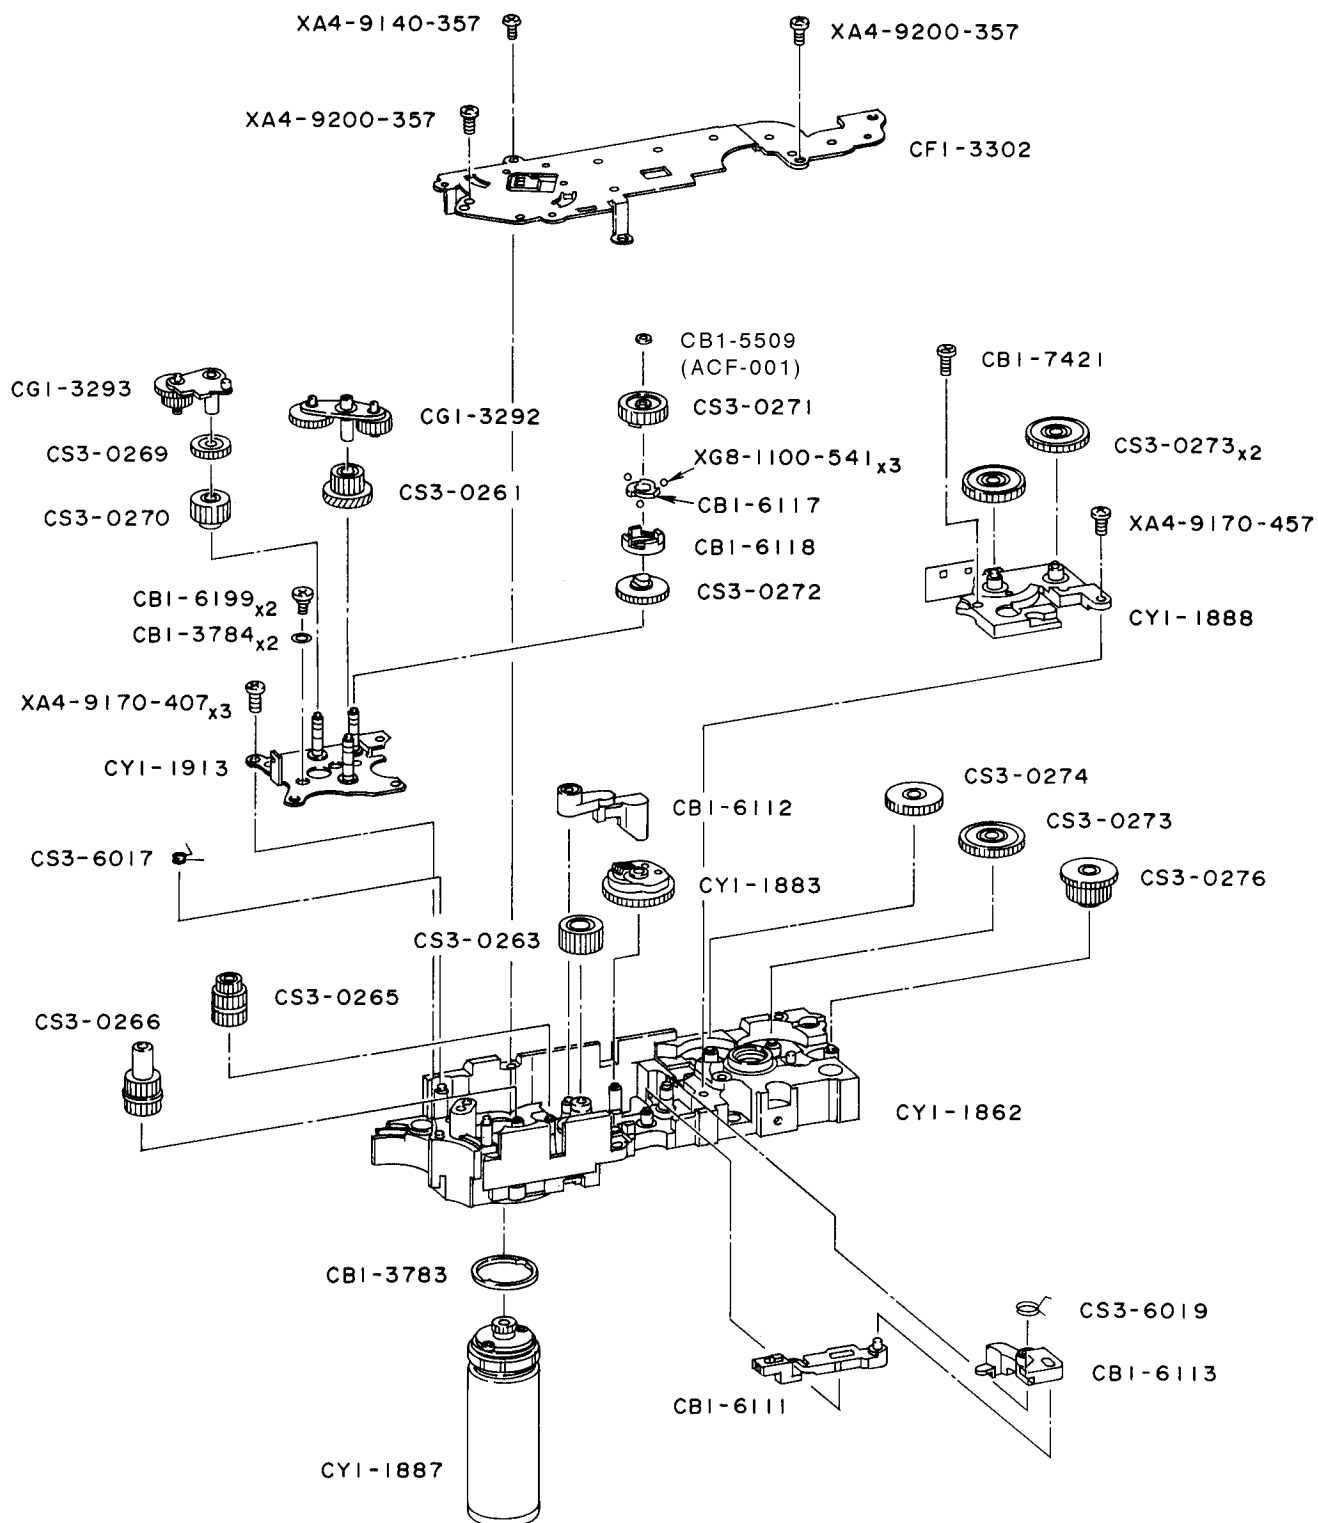


PARTS LIST

REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-3783-000	E	1	RUBBER, GEAR HEAD MOTOR
	CB1-3784-000	F	2	SPACER
	CB1-5509-000	E	1	NUT, ONEWAY GEAR
	CB1-6111-000	E	1	LEVER, STP
	CB1-6112-000	E	1	LEVER, CHANGE
	CB1-6113-000	E	1	LEVER, DRIVE
	CB1-6117-000	E	1	CAM, ONEWAY
	CB1-6118-000	E	1	CLUTCH, ONEWAY GEAR
	CB1-6199-000	F	2	SCREW
	CB1-7421-000	F	1	SCREW
	CF1-3302-000	E	1	PLATE ASS'Y, GEAR
	CG1-3292-000	E	1	ARM ASS'Y, PLANETARY GEAR 1
	CG1-3293-000	E	1	ARM ASS'Y, PLANETARY GEAR 2
	CS3-0261-000	E	1	GEAR, CHANGE
	CS3-0263-000	E	1	GEAR, DRIVE CAM
	CS3-0265-000	E	1	GEAR, SP DRIVE(1)
	CS3-0266-000	E	1	GEAR, SP DRIVE(2)
	CS3-0269-000	E	1	GEAR, REWIND SUN
	CS3-0270-000	E	1	GEAR, THRUST
	CS3-0271-000	E	1	GEAR, ONEWAY(1)
	CS3-0272-000	E	1	GEAR, ONEWAY(2)
	CS3-0273-000	E	3	GEAR, REWIND TRANSFER(1)
	CS3-0274-000	E	1	GEAR, REWIND TRANSFER(2)
	CS3-0276-000	E	1	GEAR, REWIND TRANSFER(3)
	CS3-6017-000	E	1	SPRING, TORTION
	CS3-6019-000	E	1	SPRING, TORTION
	CY1-1862-000	E	1	TRIPOD BASE ASS'Y
	CY1-1883-000	E	1	GEAR ASS'Y, CAM
	CY1-1887-000	E	1	MOTOR ASS'Y, FILM
	CY1-1888-000	E	1	HOLDER ASS'Y, CAM GEAR
	CY1-1913-000	E	1	HOLDER ASS'Y, GEAR
	XA4-9140-357	F	1	SCREW
	XA4-9170-407	F	3	SCREW
	XA4-9170-457	F	1	SCREW
	XA4-9200-357	F	2	SCREW
	XG8-1100-541	F	3	BALL, STEEL

CANON EOS IX E [A]
EOS IX [B]

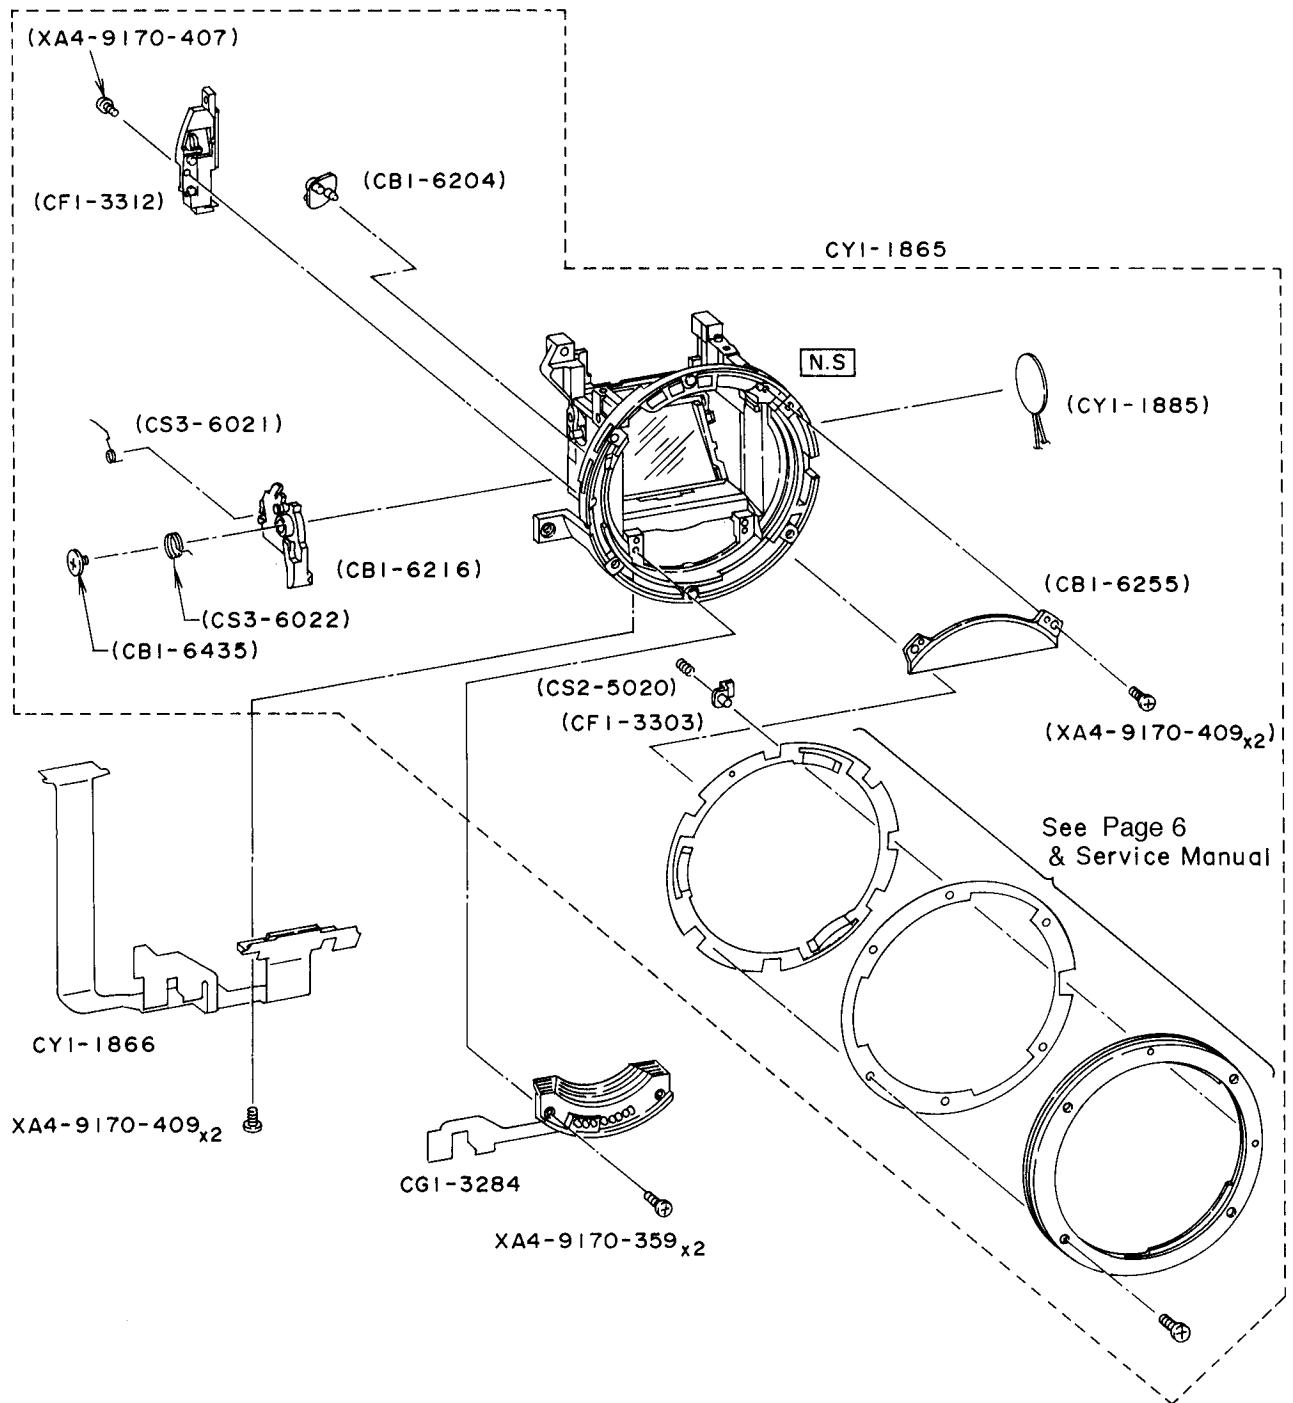


PARTS LIST

REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-6204-000	E	1	LEVER, LENS INTERLOCK
	CB1-6216-000	E	1	LEVER, MIRROR UP
	CB1-6255-000	E	1	COVER, MIRROR BOX FRONT
	CB1-6435-000	F	1	SCREW
	CF1-3312-000	E	1	SW ASS'Y, LENS INTERLOCK
	CG1-3284-000	E	1	CONTACT ASS'Y, LENS MOUNT
	CS3-6021-000	E	1	SPRING, TORTION
	CS3-6022-000	E	1	SPRING, TORTION
	CY1-1865-000	E	1	MIRROR BOX ASS'Y
	CY1-1866-000	D	1	FPC ASS'Y, TTL
	CY1-1885-000	E	1	BUZZER ASS'Y
	XA4-9170-359	F	2	SCREW
	XA4-9170-407	F	1	SCREW
	XA4-9170-409	F	4	SCREW

CANON EOS IX E [A]
EOS IX [B]


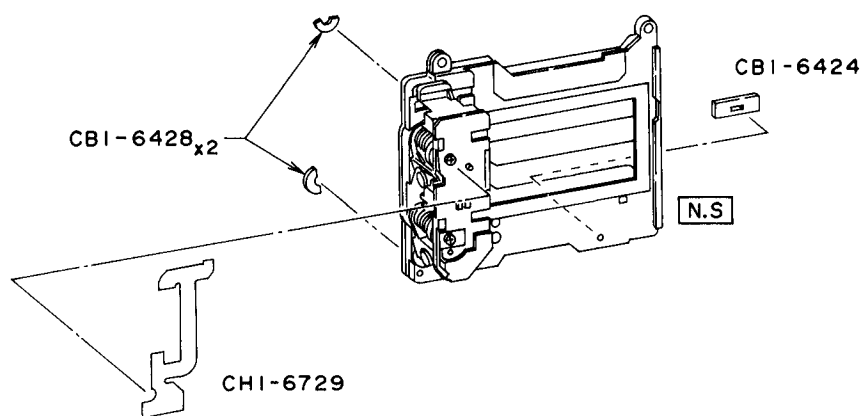


PARTS LIST

REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-6424-000	E	1	DAMPER, SHUTTER BLADE
	CB1-6428-000	E	2	DAMPER, BLADE SHAFT
	CH1-6729-000	E	1	FPC, SHUTTER

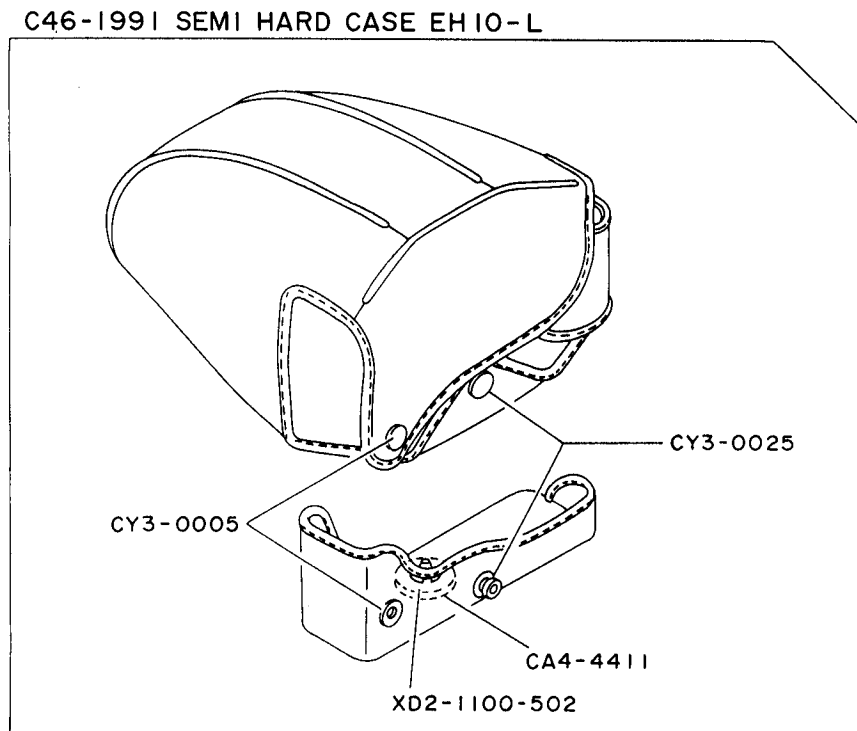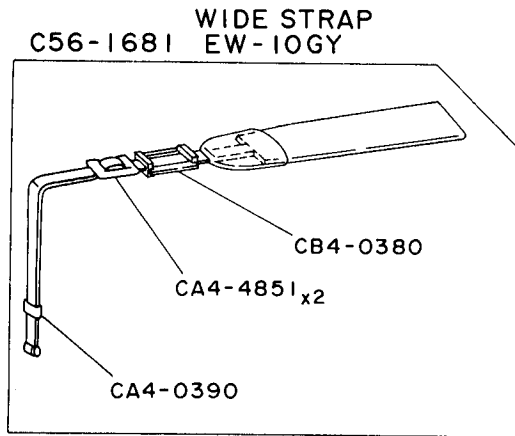CANON EOS IX E [A]
EOS IX [B]

PARTS LIST

REF.No.C12-4701

C12-4703

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION	
	C56-1681-000	E	1	WIDE STRAP	
	CA4-0390-000	E	1	LOOP	EW-10GY
	CA4-4411-000	F	1	SCREW	EH10-L
	CA4-4851-000	E	2	CLASP	EW-10GY
	CB4-0380-000	E	1	CAP, EYEPICE	EW-10GY
	CY3-0005-000	E	1	HOOK	EH10-L
	CY3-0025-000	E	1	HOOK	EH10-L
	XD2-1100-502	F	1	RING, E	EH10-L

ELECTRIC PARTS LIST

REF.No.C12-4701
C12-4703

NEW	SYMBOL	PARTS NO.	DESCRIPTION	REMARK
		VD7-1601-001	FUSE, 24V/1A	
		Y11-3711-000	LEAD WIRE	BLUE
		Y11-3901-000	LEAD WIRE	WHITE
		Y11-3902-000	LEAD WIRE	BLACK
		Y11-3903-000	LEAD WIRE	RED
		Y11-3904-000	LEAD WIRE	PINK
		Y11-3906-000	LEAD WIRE	ORANGE
		Y11-3907-000	LEAD WIRE	YELLOW
		Y11-3909-000	LEAD WIRE	GREEN
		Y11-3912-000	LEAD WIRE	PURPLE
		Y11-3913-000	LEAD WIRE	BROWN
		Y11-3914-000	LEAD WIRE	GRAY
		Y11-4402-000	LEAD WIRE	BLACK
		Y11-4403-000	LEAD WIRE	RED