




EOS KISS III	REF.NO. C12-8441
EOS REBEL 2000	C12-8443
EOS REBEL 2000 DATE	C12-8444
EOS 300	C12-8446
EOS 300 DATE	C12-8447

PARTS CATALOG

CANON

EOS KISS III
EOS REBEL 2000 / DATE
EOS 300 / DATE

REF. C12-8441
C12-8443, 8444
C12-8446, 8447

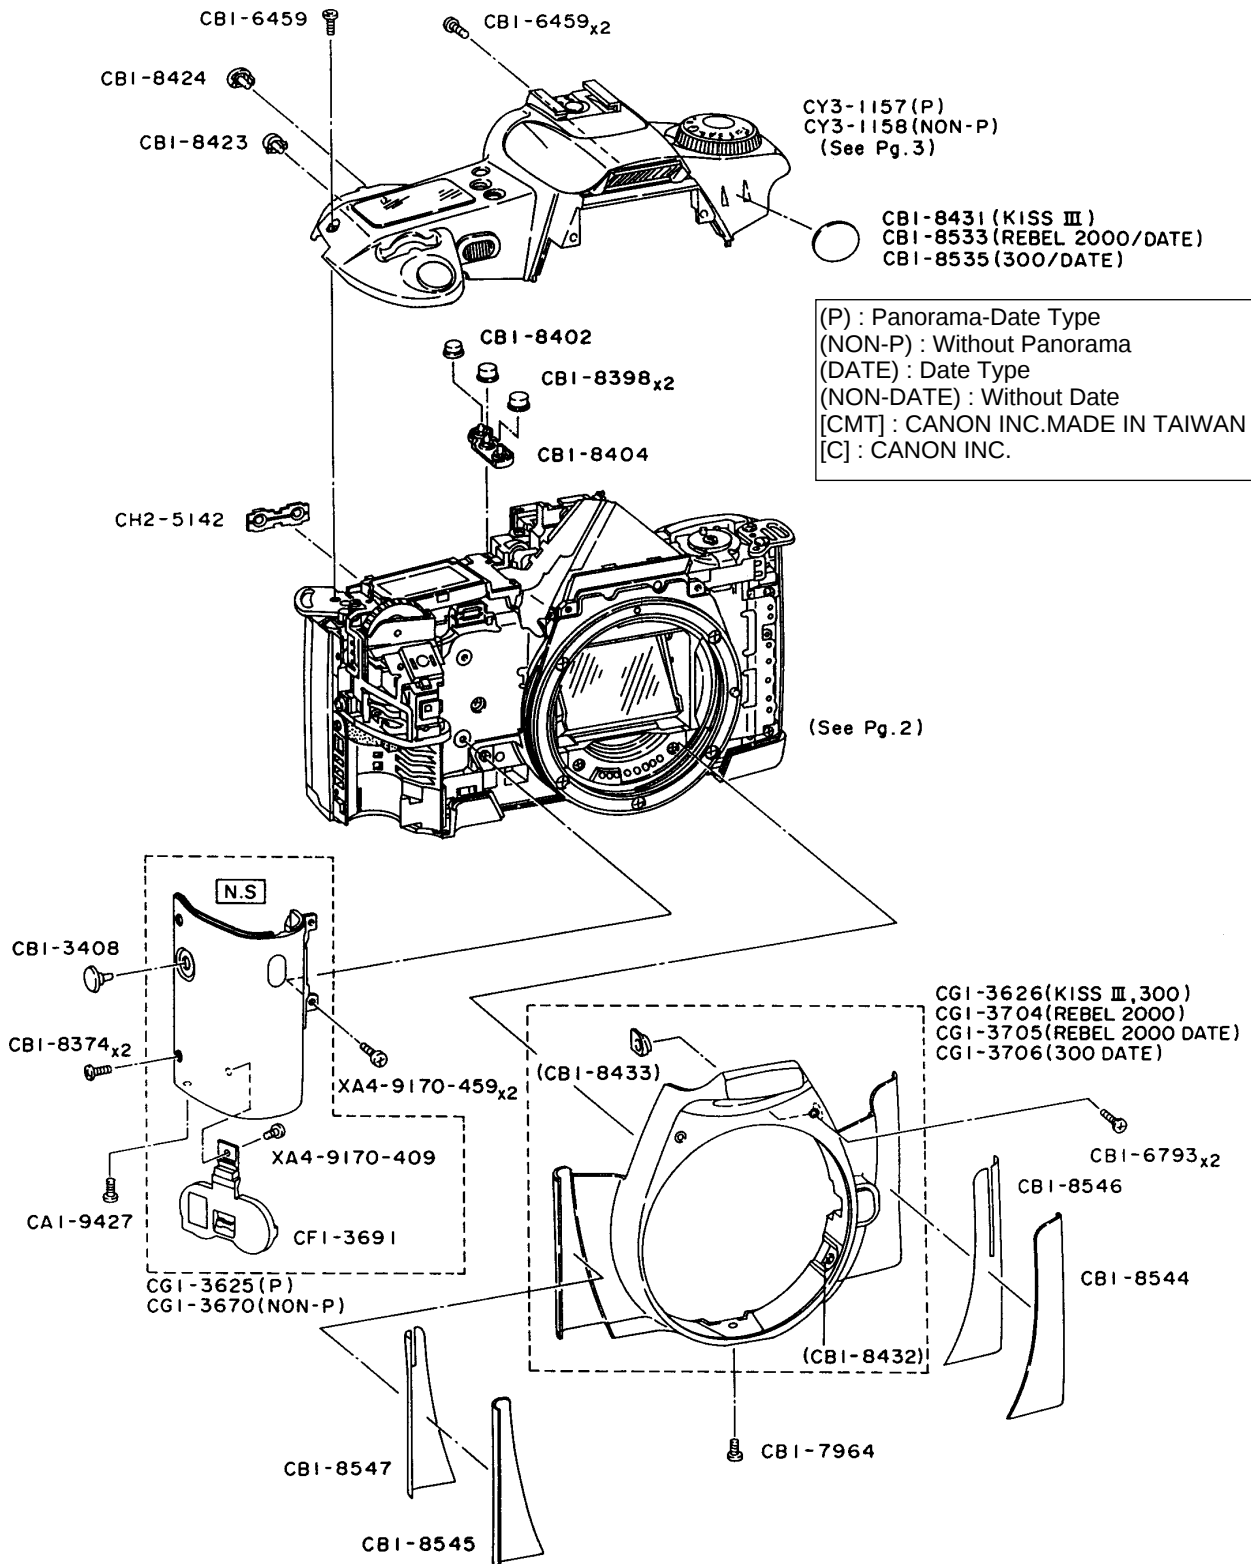

PARTS LIST

REF.No.C12-8441

C12-8443,44


C12-8446,47

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9427-000	-	1	SCREW
	CB1-3408-000	C	1	CAP, REMOTE
	CB1-6459-000	-	3	SCREW
	CB1-6793-000	-	2	SCREW
	CB1-7964-000	-	1	SCREW
	CB1-8374-000	-	2	SCREW
	CB1-8398-000	E	2	BUTTON, AF/FUNCTIN
	CB1-8402-000	E	1	BUTTON, SELF- TIMER
	CB1-8404-000	E	1	CONTACT, RUBBER
	CB1-8423-000	E	1	BUTTON, EXPOSURE
	CB1-8424-000	E	1	BUTTON, AE LOCK
	CB1-8431-000	C	1	PLATE, NAME (KISS III)
	CB1-8432-000	E	1	BUTTON, STOP DOWN
	CB1-8433-000	E	1	BUTTON, FLASH POP-UP
	CB1-8533-000	C	1	PLATE, NAME (REBEL 2000/DATE)
	CB1-8535-000	C	1	PLATE, NAME (300/DATE)
	CB1-8544-000	E	1	COVER, LEATHER (LEFT)
	CB1-8545-000	E	1	COVER, LEATHER (RIGHT)
	CB1-8546-000	E	1	TAPE, DOUBLE SIDED (LEFT)
	CB1-8547-000	E	1	TAPE, DOUBLE SIDED (RIGHT)
	CF1-3691-000	E	1	COVER ASS'Y, BATTERY
	CG1-3625-000	E	1	GRIP UNIT (P)
	CG1-3626-000	E	1	COVER ASS'Y, FRONT (KISS III / 300)
	CG1-3670-000	E	1	GRIP UNIT (NON-P)
	CG1-3704-000	E	1	COVER ASS'Y, FRONT (REBEL 2000)
	CG1-3705-000	E	1	COVER ASS'Y, FRONT (REBEL 2000 DATE)
	CG1-3706-000	E	1	COVER ASS'Y, FRONT (300 DATE)
	CH2-5142-000	E	1	CONTACT, RUBBER
	CY3-1157-000	E	1	COVER ASS'Y, TOP (P)
	CY3-1158-000	E	1	COVER ASS'Y, TOP (NON-P)
	XA4-9170-409	-	1	SCREW
	XA4-9170-459	-	2	SCREW

CANON

EOS KISS III
EOS REBEL 2000 / DATE
EOS 300 / DATE

REF. C12-8441
C12-8443, 8444
C12-8446, 8447

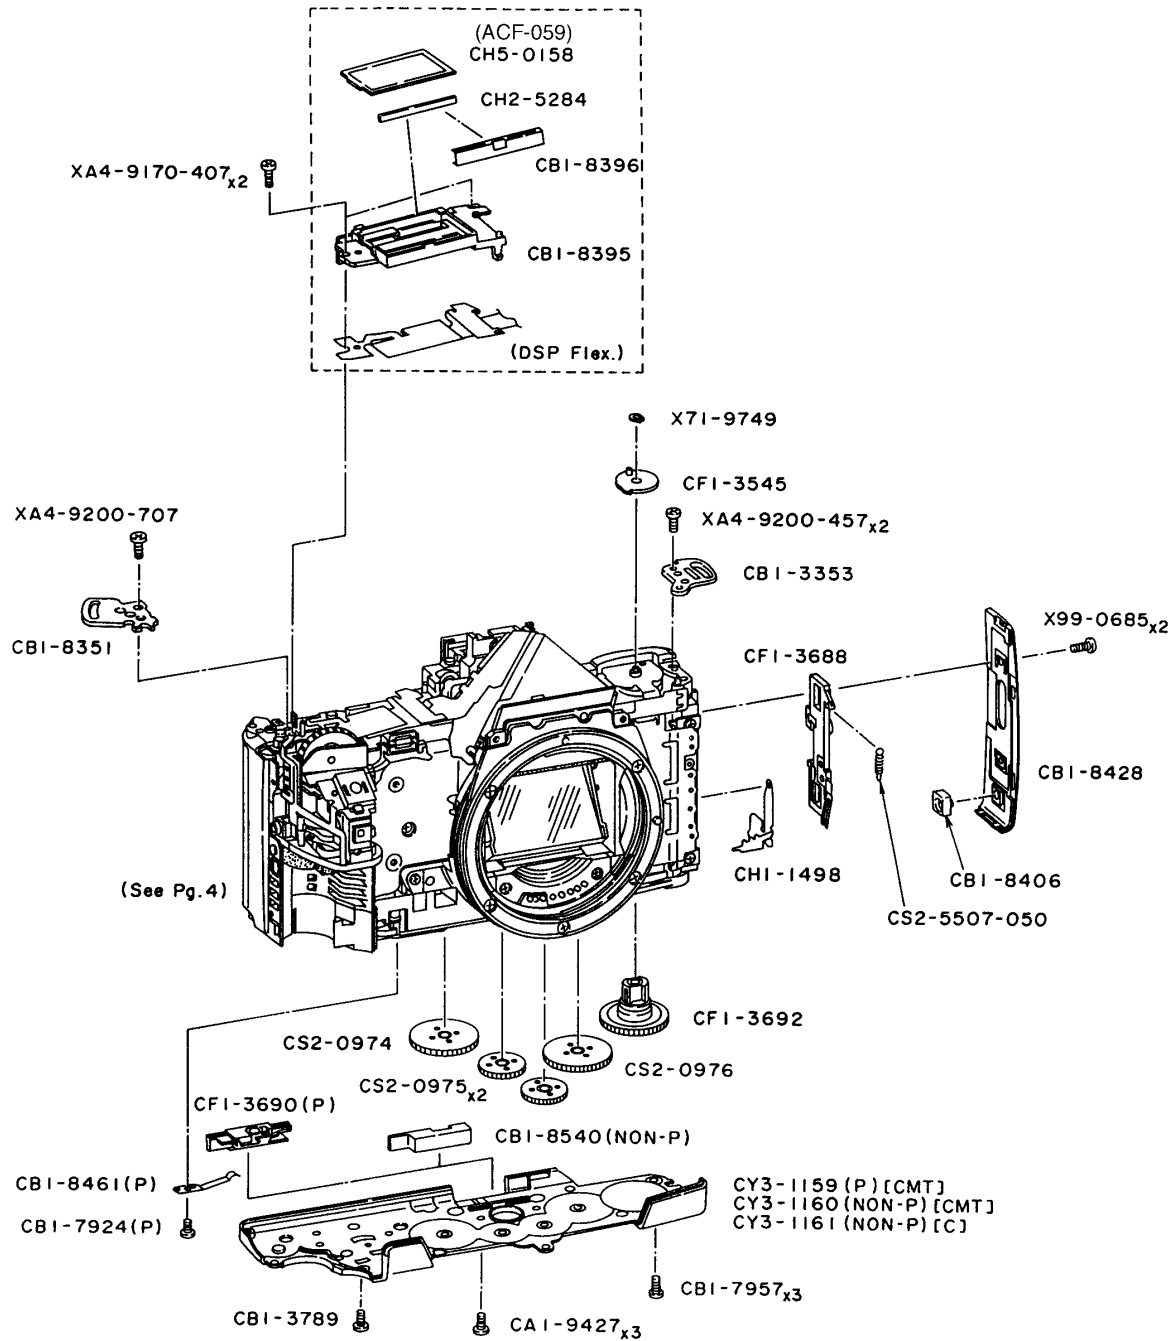

PARTS LIST

REF.No.C12-8441

C12-8443,44


C12-8446,47

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9427-000	-	3	SCREW
	CB1-3353-000	E	1	LUG, NECKSTRAP (LEFT)
	CB1-3789-000	-	1	SCREW
	CB1-7924-000	-	1	SCREW
	CB1-7957-000	-	3	SCREW
	CB1-8351-000	E	1	LUG, NECKSTRAP (RIGHT)
	CB1-8395-000	E	1	CASE, OUTSIDE LCD
	CB1-8396-000	E	1	HOLDER, OUTSIDE LCD
	CB1-8406-000	E	1	SWITCH, REWIND
	CB1-8428-000	D	1	COVER, LATCH
	CB1-8461-000	E	1	SPRING, PANORAMA CLICK
	CB1-8540-000	E	1	SHIELD, LIGHT (NON-P)
	CF1-3545-000	E	1	CONTACT, MODE
	CF1-3688-000	D	1	LEVER, LATCH
	CF1-3690-000	E	1	PANORAMA LEVER ASS'Y
	CF1-3692-000	E	1	FORK ASS'Y
	CH1-1498-000	E	1	FPC, BP
	CH2-5284-000	E	1	CONNECTOR, OUTSIDE LCD
	CH5-0158-000	C	1	LCD, OUTSIDE
	CS2-0974-000	E	1	GEAR, REWIND 1
	CS2-0975-000	E	2	GEAR, REWIND 2
	CS2-0976-000	E	1	GEAR, REWIND 3
	CS2-5507-050	E	1	SPRING, BACK COVER LATCH
	CY3-1159-000	E	1	COVER, BASE (P) [CMT]
	CY3-1160-000	E	1	COVER, BASE (NON-P) [CMT]
	CY3-1161-000	E	1	COVER, BASE (NON-P) [C]
	X71-9749-000	E	1	G RING
	X99-0685-000	-	2	SCREW
	XA4-9170-407	-	2	SCREW
	XA4-9200-457	-	2	SCREW
	XA4-9200-707	-	1	SCREW

CANON

EOS KISS III
EOS REBEL 2000 / DATE
EOS 300 / DATE

REF. C12-8441
C12-8443, 8444
C12-8446, 8447

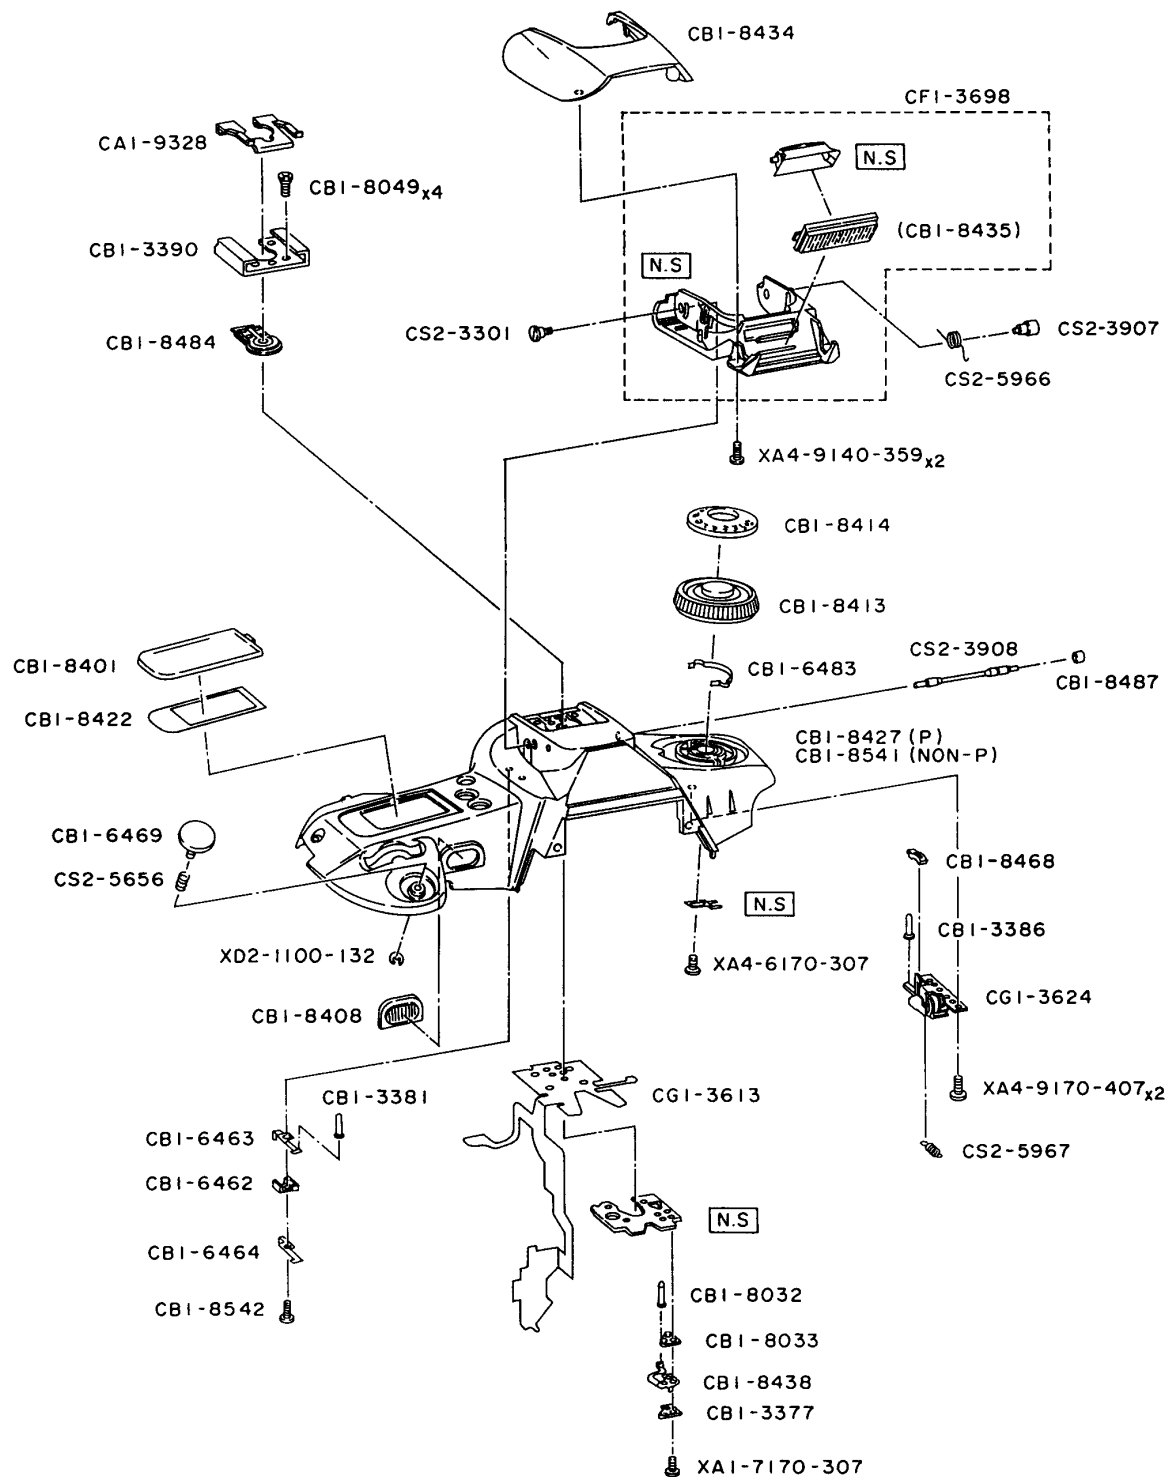

PARTS LIST

REF.No.C12-8441

C12-8443,44


C12-8446,47

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9328-000	E	1	SPRING, PLATE
	CB1-3377-000	E	1	BASE, SHOE IN USE 2
	CB1-3381-000	E	1	PIN, POP-END SWITCH
	CB1-3386-000	D	1	PIN, ARMATURE SPRING
	CB1-3390-000	E	1	SHOE, ACCESSORY
	CB1-6462-000	E	1	BASE, POP-END SWITCH
	CB1-6463-000	E	1	CONTACT, POP-END 1
	CB1-6464-000	E	1	CONTACT, POP-END 2
	CB1-6469-000	D	1	BUTTON, RELEASE
	CB1-6483-000	E	1	CLICK SPRING, MODE DIAL
	CB1-8032-000	E	1	PIN, ACC. SHOE
	CB1-8033-000	E	1	BASE, SHOE IN USE 1
	CB1-8049-000	-	4	SCREW
	CB1-8401-000	D	1	WINDOW, OUTSIDE LCD
	CB1-8408-000	E	1	PANEL, LAMP
	CB1-8413-000	D	1	DIAL, MODE
	CB1-8414-000	D	1	CAP, MODE DIAL
	CB1-8422-000	D	1	TAPE, DOUBLE SIDED
	CB1-8427-000	D	1	COVER, TOP (P)
	CB1-8434-000	C	1	COVER, FLASH
	CB1-8435-000	D	1	PANEL, FLASH
	CB1-8438-000	E	1	CONTACT, SHOE IN USE
	CB1-8468-000	E	1	COVER, FLASH HOOK
	CB1-8484-000	E	1	BASE, ACC. SHOE
	CB1-8487-000	E	1	STOPPER, RUBBER
	CB1-8541-000	D	1	COVER, TOP (NON-P)
	CB1-8542-000	-	1	SCREW
	CF1-3698-000	D	1	FLASH HEAD UNIT
	CG1-3613-000	D	1	FPC ASS'Y, TOP
	CG1-3624-000	D	1	FLASH MAGNET ASS'Y
	CS2-3301-000	E	1	SCREW
	CS2-3907-000	E	1	SCREW
	CS2-3908-000	E	1	SHAFT, FLASH STOPPER
	CS2-5656-000	E	1	SPRING, COIL
	CS2-5966-000	E	1	SPRING, POP UP
	CS2-5967-000	E	1	SPRING, FLASH MAGNET
	XA1-7170-307	-	1	SCREW
	XA4-6170-307	-	1	SCREW
	XA4-9140-359	-	2	SCREW
	XA4-9170-407	-	2	SCREW
	XD2-1100-132	-	1	E RING

CANON

EOS KISS III
EOS REBEL 2000 / DATE
EOS 300 / DATE

REF. C12-8441
C12-8443, 8444
C12-8446, 8447

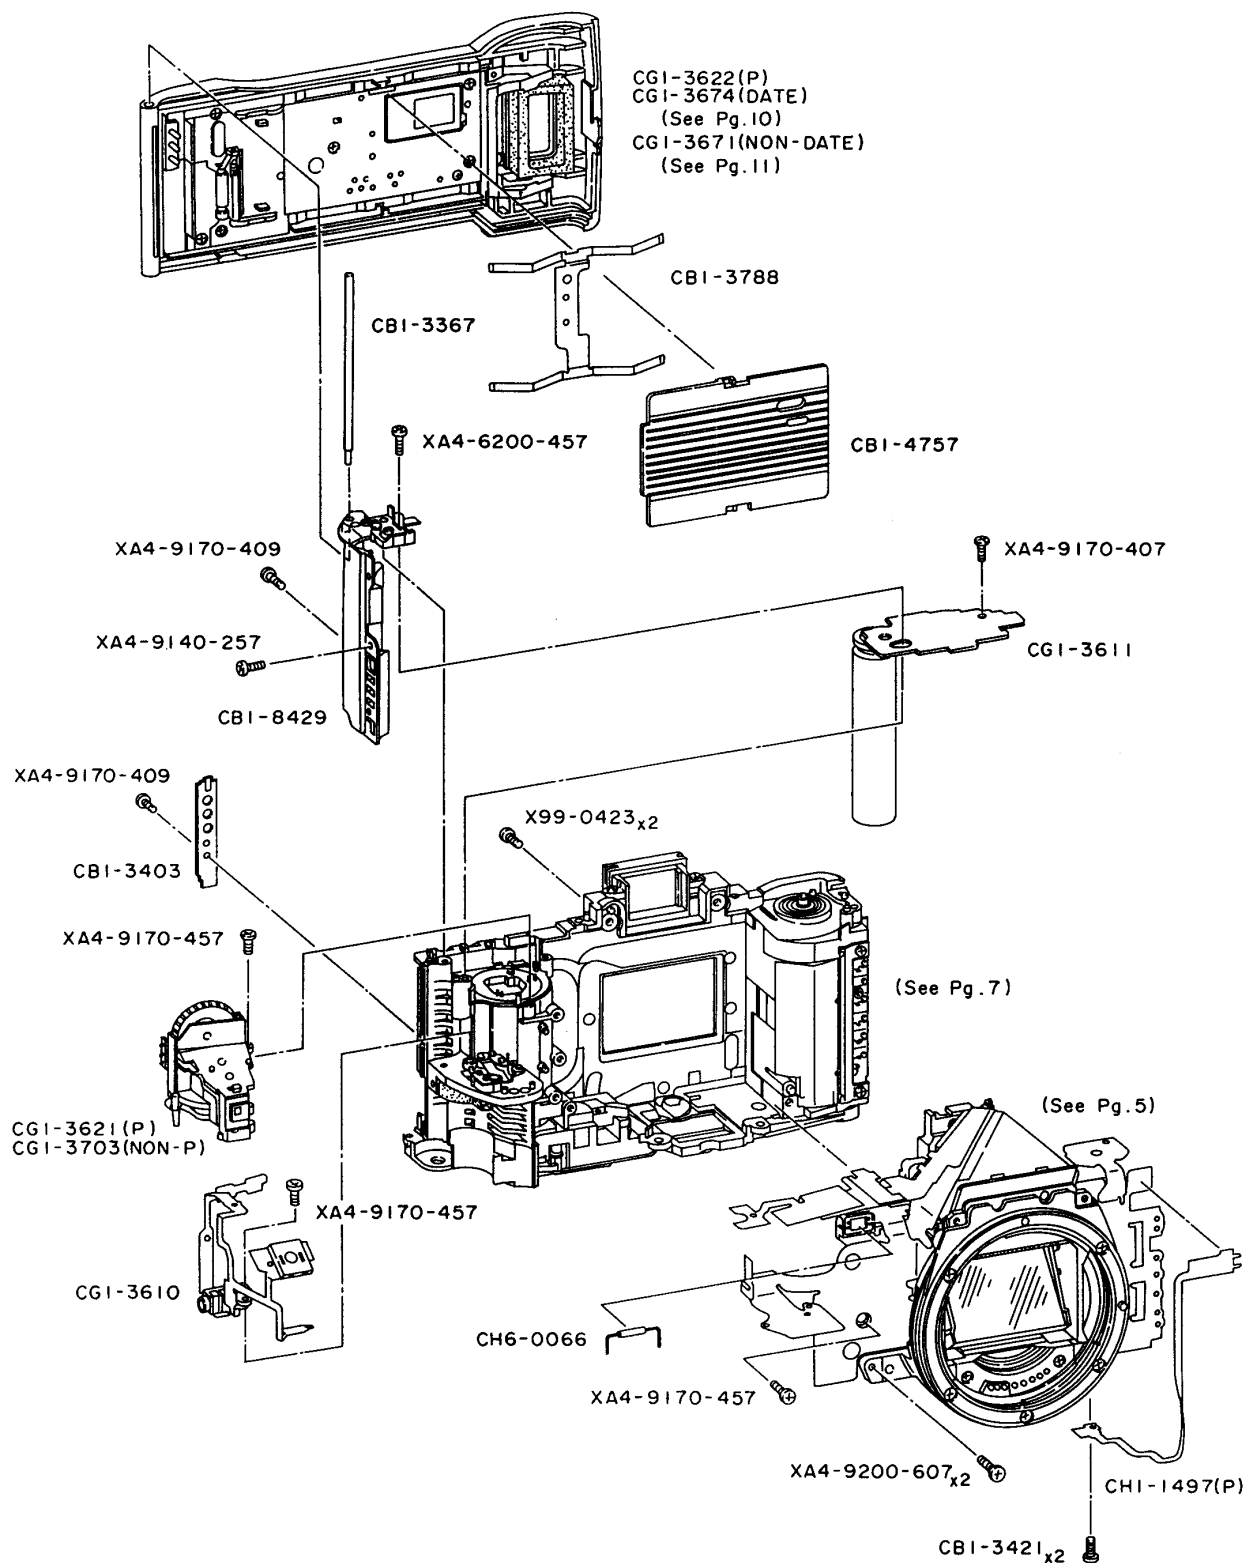

PARTS LIST

REF.No.C12-8441

C12-8443,44


C12-8446,47

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-3367-000	E	1	HINGE, BACK COVER
	CB1-3403-000	E	1	COVER, DATE CONTACT
	CB1-3421-000	-	2	SCREW
	CB1-3788-000	D	1	SPRING, PRESSURE PLATE
	CB1-4757-000	D	1	PLATE, PRESSURE
	CB1-8429-000	D	1	COVER, HINGE
	CG1-3610-000	D	1	FPC ASS'Y, RELEASE
	CG1-3611-000	C	1	PCB ASS'Y, FLASH
	CG1-3621-000	D	1	DIAL ASS'Y (P)
	CG1-3622-000	D	1	COVER ASS'Y, BACK (P)
	CG1-3671-000	D	1	COVER ASS'Y, BACK (NON-DATE)
	CG1-3674-000	D	1	COVER ASS'Y, BACK (DATE)
	CG1-3703-000	D	1	DIAL ASS'Y (NON-P)
	CH1-1497-000	E	1	FPC, PANORAMA SWITCH
	CH6-0066-000	E	1	LAMP, INCANDESCENT
	X99-0423-000	-	2	SCREW
	XA4-6200-457	-	1	SCREW
	XA4-9140-257	-	1	SCREW
	XA4-9170-407	-	1	SCREW
	XA4-9170-409	-	2	SCREW
	XA4-9170-457	-	3	SCREW
	XA4-9200-607	-	2	SCREW

CANON

EOS KISS III
EOS REBEL 2000 / DATE
EOS 300 / DATE

REF. C12-8441
C12-8443, 8444
C12-8446, 8447

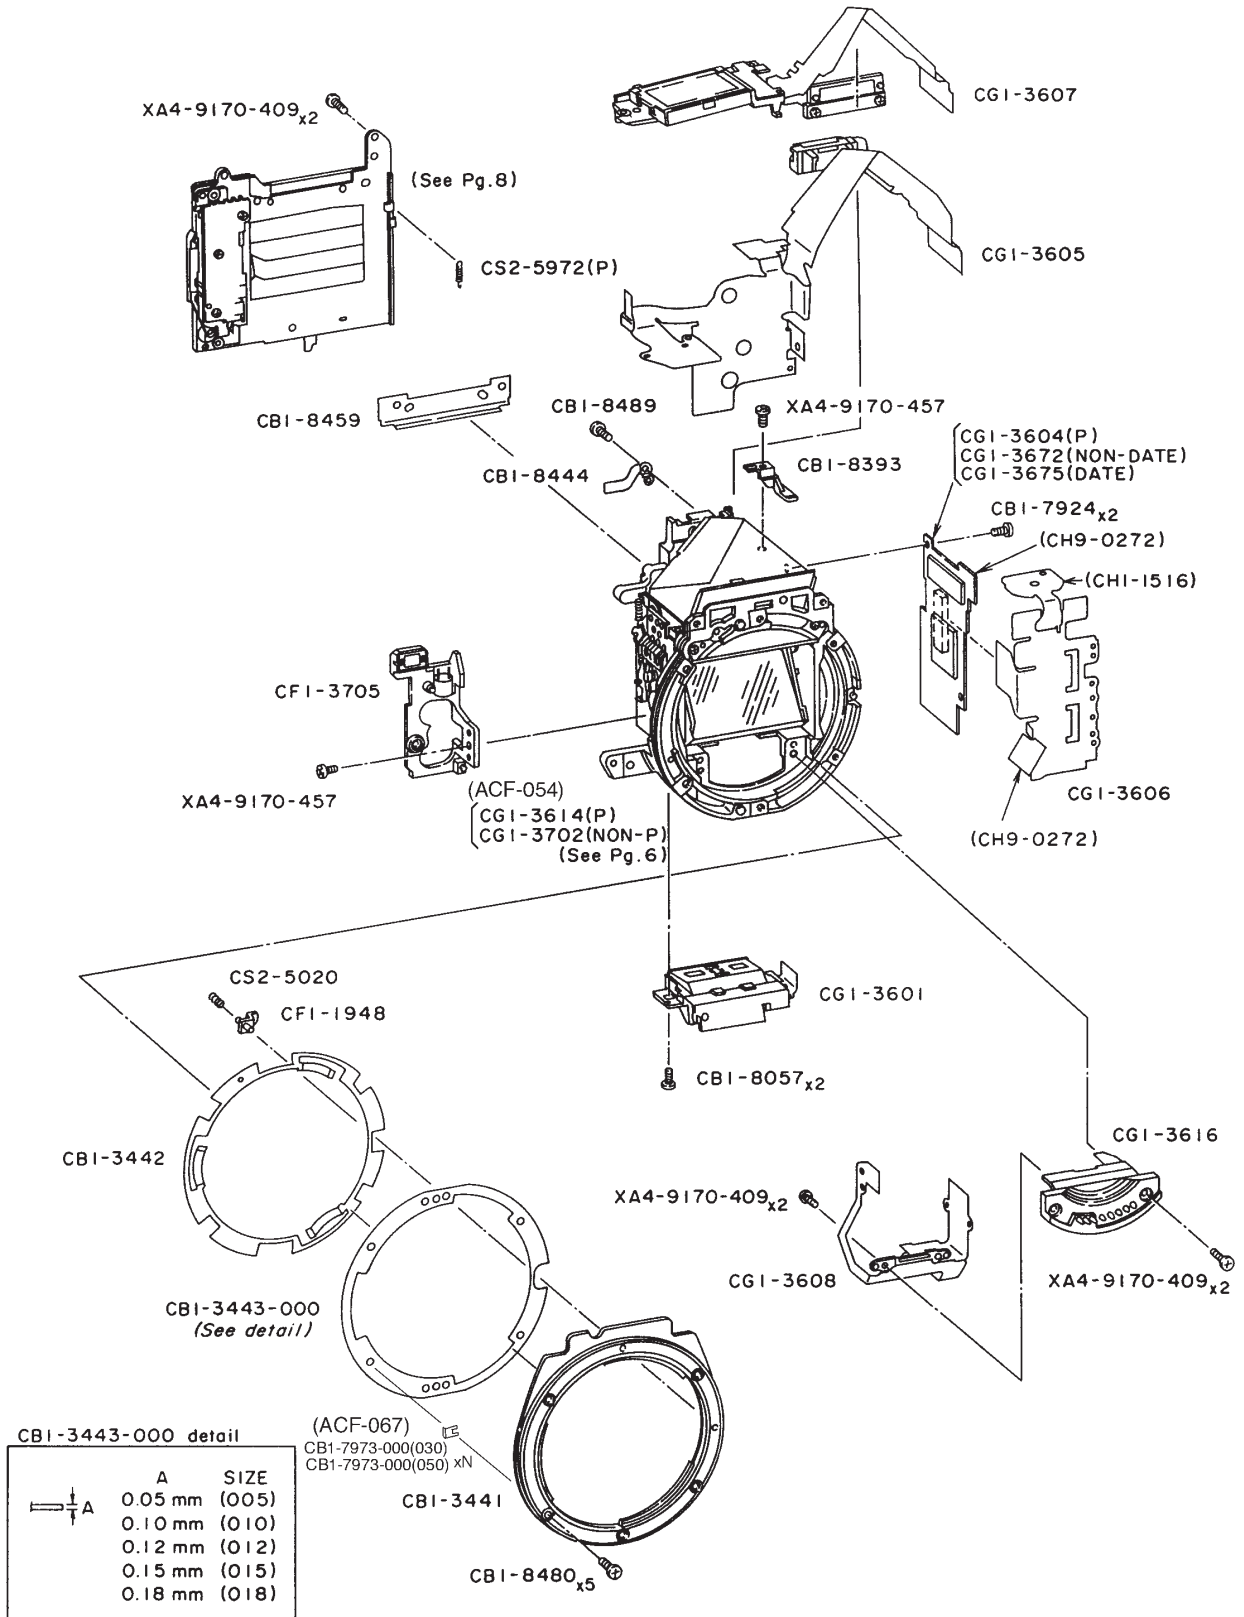

PARTS LIST

REF.No.C12-8441

C12-8443,44


C12-8446,47

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-3441-000	C	1	MOUNT, BODY
	CB1-3442-000	E	1	SPRING, MOUNT
	CB1-3443-000 (0	D	1	SPACER, MOUNT
	CB1-3443-000 (0	D	1	SPACER, MOUNT
	CB1-3443-000 (0	D	1	SPACER, MOUNT
	CB1-3443-000 (0	D	1	SPACER, MOUNT
	CB1-3443-000 (0	D	1	SPACER, MOUNT
	CB1-7924-000	-	2	SCREW
	CB1-7973-000 (0	E	1	SPACER, MOUNT (0.03mm)
	CB1-7973-000 (0	E	1	SPACER, MOUNT (0.05mm)
	CB1-8057-000	E	2	SCREW
	CB1-8393-000	E	1	HOLDER, FPC
	CB1-8444-000	E	1	HOLDER, INSIDE LCD
	CB1-8459-000	E	1	SHIELD, LIGHT
	CB1-8480-000	-	5	SCREW
	CB1-8489-000	-	1	SCREW
	CF1-1948-000	E	1	LEVER, LENS LOCK
	CF1-3705-000	E	1	WING UNIT
	CG1-3601-000	D	1	AUTO FOCUS UNIT
	CG1-3604-000	C	1	PCB ASS'Y, MAIN (P)
	CG1-3605-000	C	1	FPC ASS'Y, MD
	CG1-3606-000	C	1	FPC ASS'Y, DX
	CG1-3607-000	C	1	FPC ASS'Y, DISPLAY
	CG1-3608-000	D	1	FPC ASS'Y, TTL
	CG1-3614-000	D	1	MIRROR BOX UNIT (P)
	CG1-3616-000	D	1	MOUNT CONTACT UNIT
	CG1-3672-000	C	1	PCB ASS'Y, MAIN (NON-DATE)
	CG1-3675-000	C	1	PCB ASS'Y, MAIN (DATE)
	CG1-3702-000	D	1	MIRROR BOX UNIT (NON-P)
	CH1-1516-000	C	1	FPC, DP
	CH9-0272-000	E	2	SWITCH, ELEMENT KEY
	CS2-5020-000	E	1	SPRING, COIL
	CS2-5972-000	E	1	SPRING, PANORAMA MASK DRIVE
	XA4-9170-409	-	6	SCREW
	XA4-9170-457	-	2	SCREW

CANON

EOS KISS III
EOS REBEL 2000 / DATE
EOS 300 / DATE

REF. C12-8441
C12-8443, 8444
C12-8446, 8447

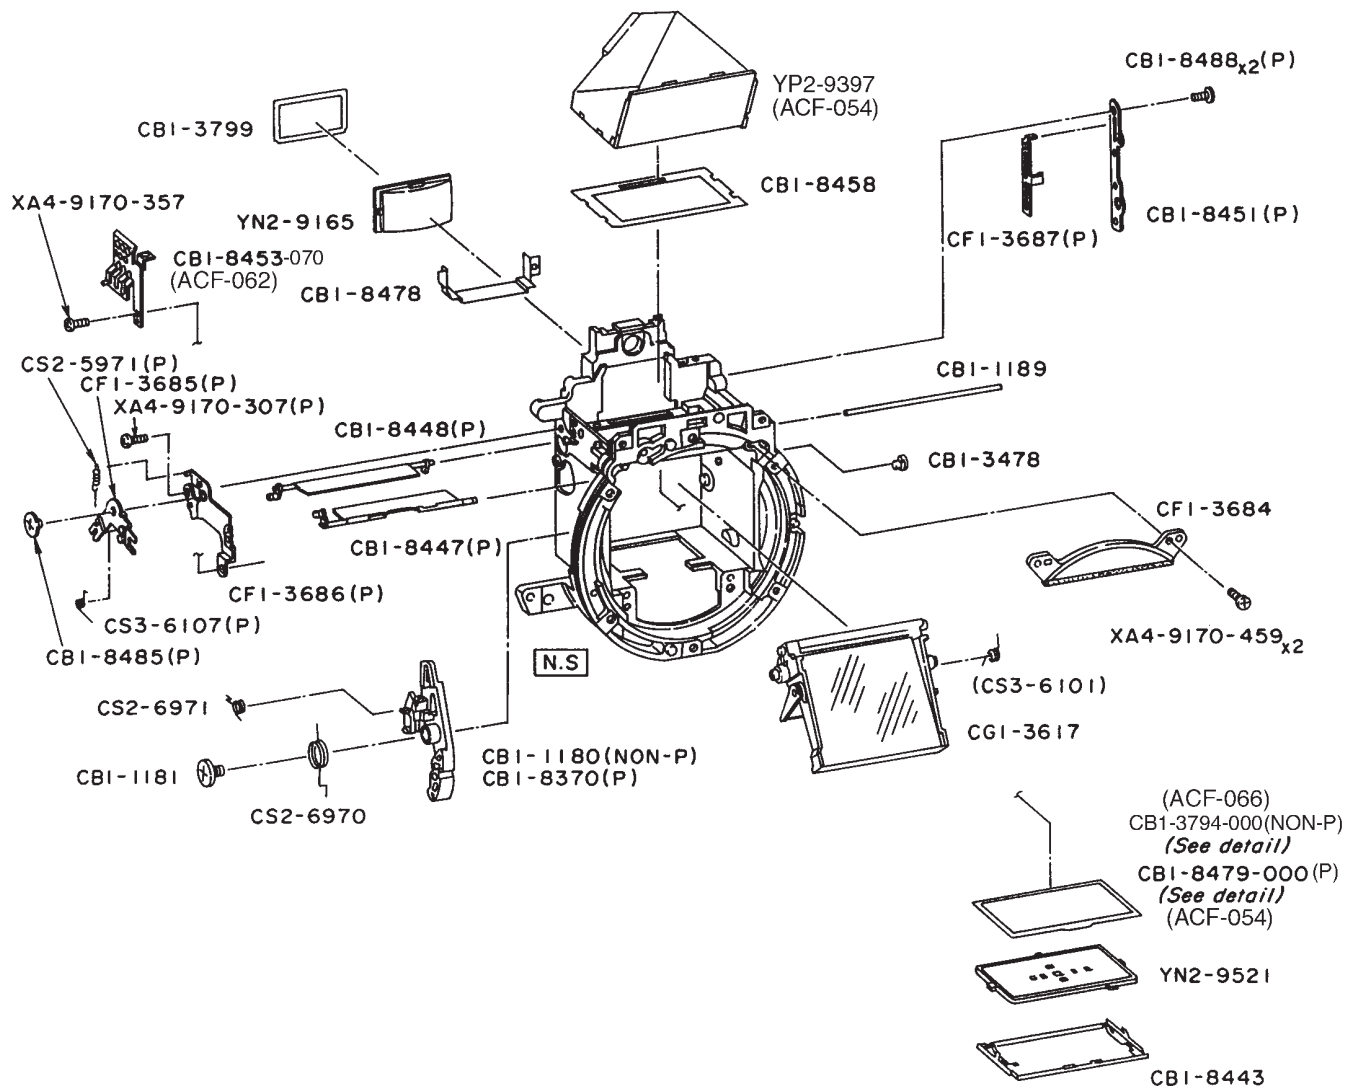

(NON-PANORAMA) (ACF-066)
CBI-3794-000(XXX) detail

$\frac{1}{2}A$	A	SIZE
	0.05mm	(005)
	0.10mm	(010)
	0.12mm	(012)
	0.15mm	(015)
	0.20mm	(020)
	0.25mm	(025)
	0.30mm	(030)
	0.35mm	(035)
	0.40mm	(040)
	0.45mm	(045)
	0.50mm	(050)
	0.55mm	(055)

(PANORAMA) (ACF-054)
CBI-8479-000 detail

$\frac{1}{2}A$	A	SIZE
	0.12 mm	(012)
	0.15 mm	(015)
	0.20 mm	(020)
	0.25 mm	(025)
	0.30 mm	(030)
	0.35 mm	(035)
	0.40 mm	(040)
	0.45 mm	(045)
	0.50 mm	(050)
	0.60 mm	(060)
	0.70 mm	(070)

PARTS LIST


REF.No.C12-8441

C12-8443,44

C12-8446,47

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-1180-000	E	1	LEVER, MIRROR UP (NON-P)
	CB1-1181-000	E	1	SCREW
	CB1-1189-000	E	1	HINGE, MAIN MIRROR
	CB1-3478-000	E	1	STOPPER, SUB MIRROR
	CB1-3794-000	D	1	WASHER, FINDER BACK ADJUST(NON-P)
	CB1-3799-000	E	1	MASK, EYEPIECE
	CB1-8370-000	E	1	LEVER, MIRROR UP (P)
	CB1-8443-000	E	1	HOLDER, FOCUSING SCREEN
	CB1-8447-000	E	1	PLATE, PANORAMA FRONT
	CB1-8448-000	E	1	PLATE, PANORAMA BACK
	CB1-8451-000	E	1	PLATE, PANORAMA (LEFT)
	CB1-8453-070	E	1	PLATE, PANORAMA COVER
	CB1-8458-000	E	1	MASK, FINDER
	CB1-8478-000	E	1	SHIELD, EYEPIECE LIGHT
	CB1-8479-000(01	E	1	SPACER, FOCUSING SCREEN(P)
	CB1-8479-000(01	E	1	SPACER, FOCUSING SCREEN(P)
	CB1-8479-000(02	E	1	SPACER, FOCUSING SCREEN(P)
	CB1-8479-000(02	E	1	SPACER, FOCUSING SCREEN(P)
	CB1-8479-000(03	E	1	SPACER, FOCUSING SCREEN(P)
	CB1-8479-000(03	E	1	SPACER, FOCUSING SCREEN(P)
	CB1-8479-000(04	E	1	SPACER, FOCUSING SCREEN(P)
	CB1-8479-000(04	E	1	SPACER, FOCUSING SCREEN(P)
	CB1-8479-000(05	E	1	SPACER, FOCUSING SCREEN(P)
	CB1-8479-000(06	E	1	SPACER, FOCUSING SCREEN(P)
	CB1-8479-000(07	E	1	SPACER, FOCUSING SCREEN(P)
	CB1-8485-000		1	SCREW
	CB1-8488-000	-	2	SCREW
	CF1-3684-000	D	1	PLATE, PROTECTION
	CF1-3685-000	E	1	PLATE, PANORAMA LEVER (RIGHT)
	CF1-3686-000	E	1	PLATE, PANORAMA (RIGHT)
	CF1-3687-000	E	1	PLATE, PANORAMA LEVER (LEFT)
	CG1-3617-000	D	1	MIRROR UNIT
	CS2-5971-000	E	1	SPRING, PANORAMA LEVER RETURN
	CS2-6970-000	E	1	SPRING, MIRROR UP
	CS2-6971-000	E	1	SPRING, MIRROR RETURNING
	CS3-6101-000	E	1	SPRING, SUB MIRROR RETURN
	CS3-6107-000	E	1	SPRING, PANORAMA LEVER
	XA4-9170-307	-	1	SCREW
	XA4-9170-357	-	1	SCREW
	XA4-9170-459	-	2	SCREW
	YN2-9165-000	E	1	LENS, FRONT EYEPIECE
	YN2-9521-000	C	1	SCREEN, FOCUSING
	YP2-9397-000	C	1	PENTAMIRROR ASS'Y

CANON

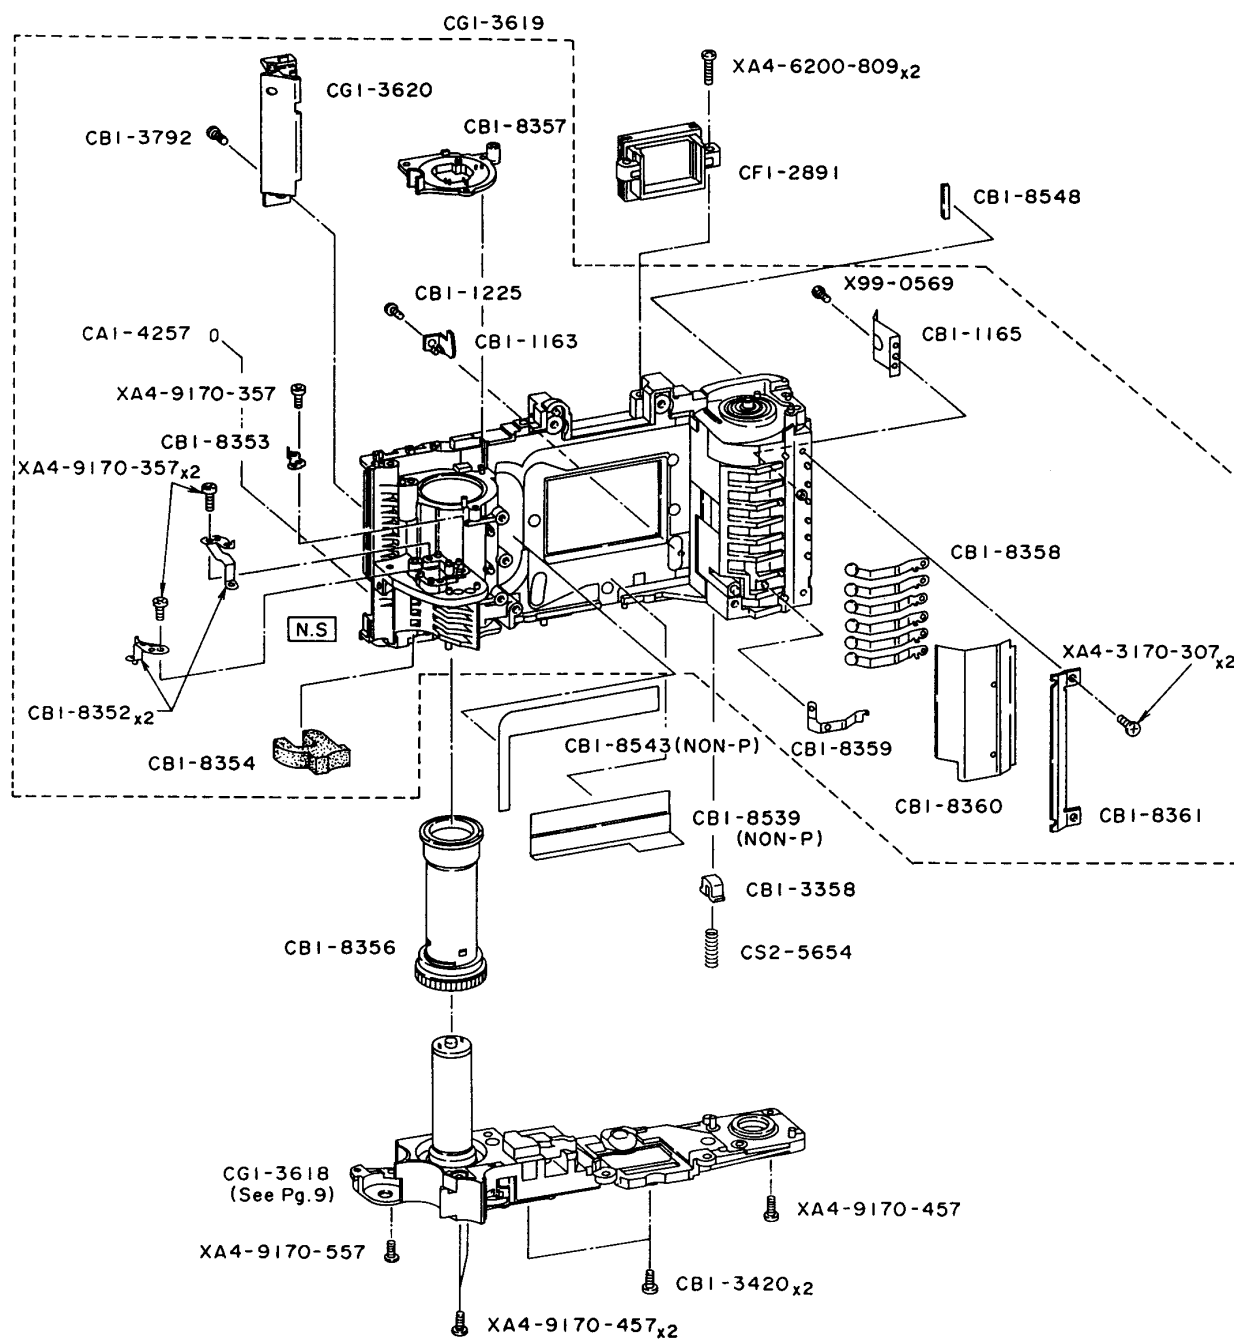EOS KISS III
EOS REBEL 2000 / DATE
EOS 300 / DATEREF. C12-8441
C12-8443, 8444
C12-8446, 8447

PARTS LIST

REF.No.C12-8441

C12-8443,44


C12-8446,47

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-4257-000	E	1	SEAL, FILM
	CB1-1163-000	E	1	JAW, FILM CARTRIDGE
	CB1-1165-000	E	1	GUIDE, FILM CARTRIDGE
	CB1-1225-000	E	1	SCREW
	CB1-3358-000	E	1	UP LEVER, FILM CARTRIDGE
	CB1-3420-000	-	2	SCREW
	CB1-3792-000	-	1	SCREW
	CB1-8352-000	E	2	CONTACT, BATTERY
	CB1-8353-000	E	1	CONTACT, RESET
	CB1-8354-000	E	1	CUSHION, BATTERY
	CB1-8356-000	E	1	SPOOL
	CB1-8357-000	E	1	BASE, SPOOL
	CB1-8358-000	E	1	CONTACT, DX
	CB1-8359-000	E	1	CONTACT, FILM CARTRIDGE
	CB1-8360-000	E	1	COVER, DX CONTACT
	CB1-8361-000	E	1	HOLDER, DX CONTACT
	CB1-8539-000	E	1	SHIELD, LIGHT (NON-P)
	CB1-8543-000	E	1	SHIELD, LIGHT (NON-P)
	CB1-8548-000	E	1	SHIELD, LIGHT
	CF1-2891-000	E	1	EYEPiece ASS'Y
	CG1-3618-000	D	1	BOTTOM PLATE ASS'Y
	CG1-3619-000	D	1	BODY UNIT
	CG1-3620-000	E	1	SIGNAL ASS'Y
	CS2-5654-000	E	1	SPRING, COIL
	X99-0569-000	-	1	SCREW
	XA4-3170-307	-	2	SCREW
	XA4-6200-809	-	2	SCREW
	XA4-9170-357	-	3	SCREW
	XA4-9170-457	-	3	SCREW
	XA4-9170-557	-	1	SCREW

CANON

EOS KISS III
EOS REBEL 2000 / DATE
EOS 300 / DATE

REF. C12-8441
C12-8443, 8444
C12-8446, 8447

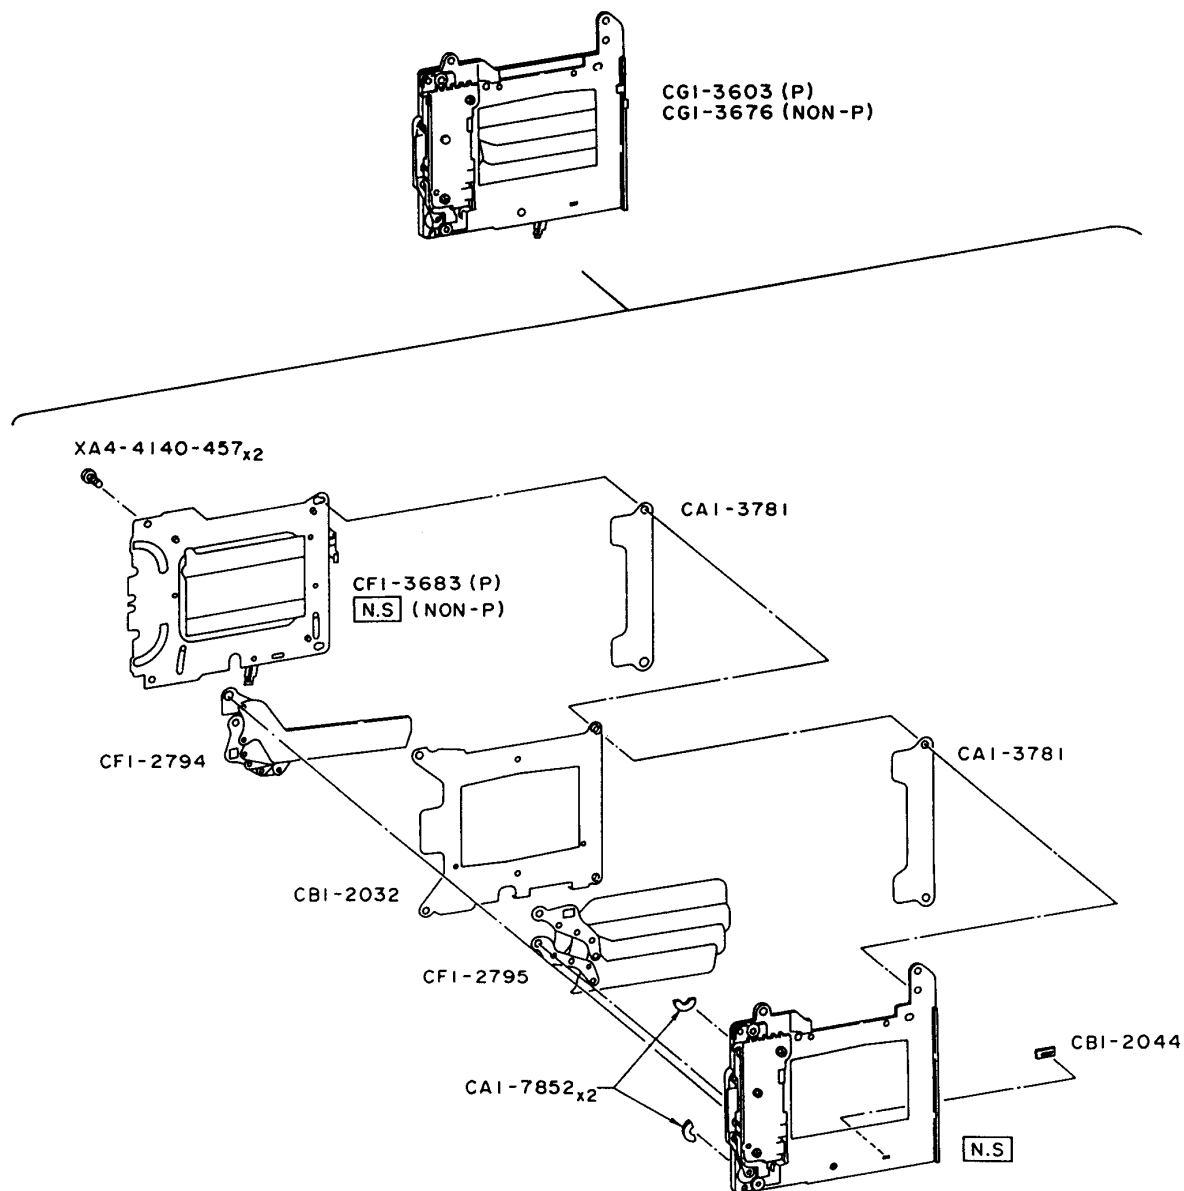

PARTS LIST

REF.No.C12-8441

C12-8443,44


C12-8446,47

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-3781-000	E	2	SPACER
	CA1-7852-000	E	2	STOPPER, RUBBER
	CB1-2032-000	E	1	PLATE, SEPARATOR
	CB1-2044-000	E	1	STOPPER, SHUTTER CURTAIN
	CF1-2794-000	C	1	CURTAIN, 2ND SHUTTER
	CF1-2795-000	C	1	CURTAIN, 1ST SHUTTER
	CF1-3683-000	D	1	PANORAMA COVER ASS'Y
	CG1-3603-000	C	1	SHUTTER UNIT (P)
	CG1-3676-000	C	1	SHUTTER UNIT (NON-P)
	XA4-4140-457	-	2	SCREW

CANON

EOS KISS III
EOS REBEL 2000 / DATE
EOS 300 / DATE

REF. C12-8441
C12-8443, 8444
C12-8446, 8447

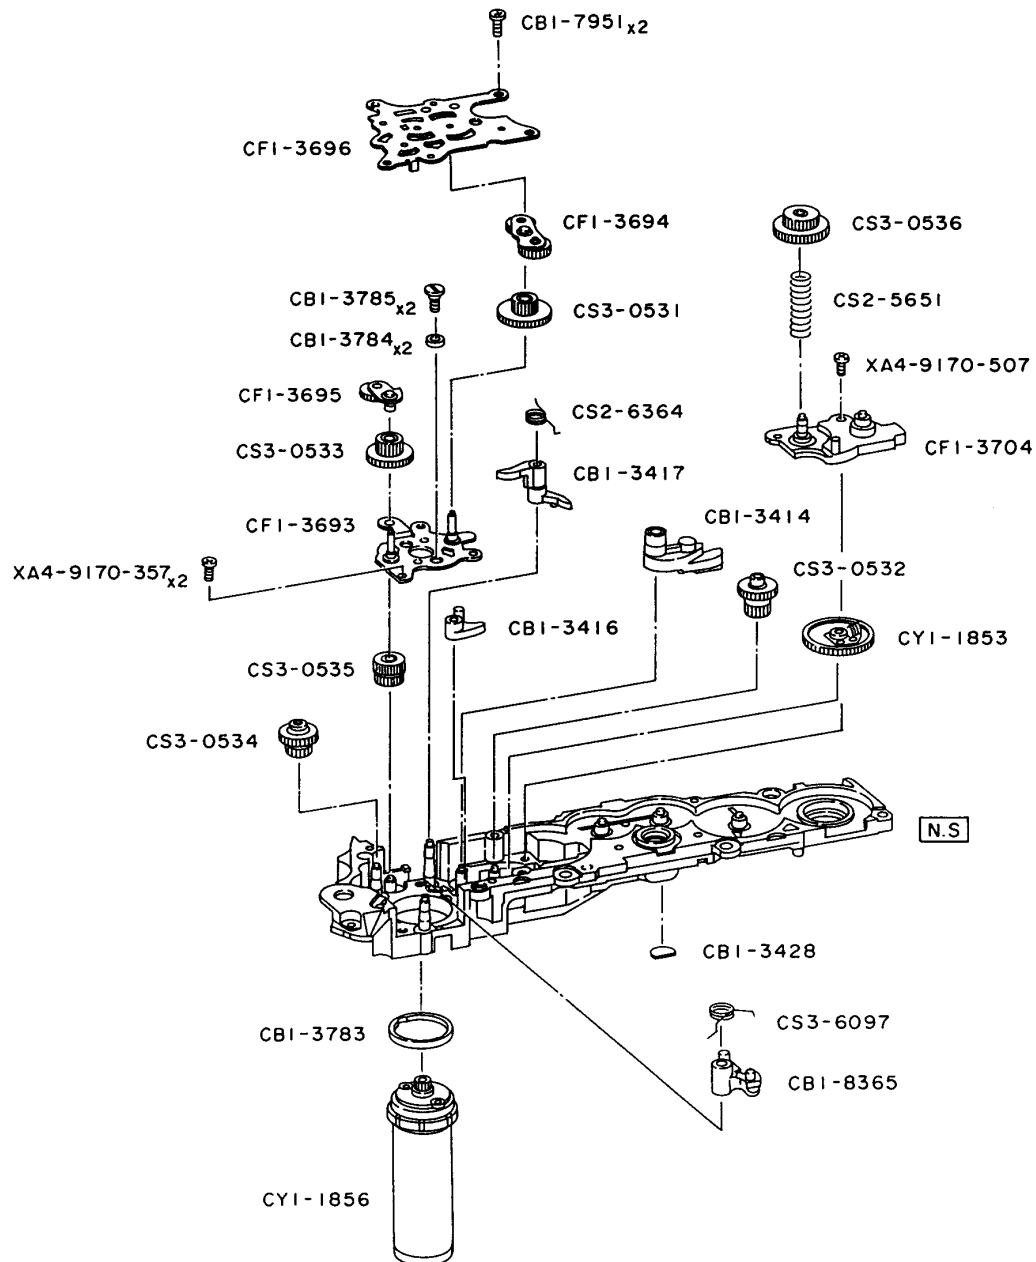

PARTS LIST

REF.No.C12-8441

C12-8443,44


C12-8446,47

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-3414-000	E	1	LEVER, CHARGE
	CB1-3416-000	E	1	LEVER, RESET 1
	CB1-3417-000	E	1	LEVER, RESET 2
	CB1-3428-000	E	1	COVER, TRIPOD
	CB1-3783-000	E	1	CUSHION, MOTOR
	CB1-3784-000	E	2	WASHER, RUBBER
	CB1-3785-000	-	2	SCREW
	CB1-7951-000	-	2	SCREW
	CB1-8365-000	E	1	LEVER, BACK COVER
	CF1-3693-000	E	1	GEAR COVER ASS'Y
	CF1-3694-000	E	1	PLANETARY GEAR ASS'Y 1
	CF1-3695-000	E	1	PLANETARY GEAR ASS'Y 1
	CF1-3696-000	E	1	LOWER COVER ASS'Y
	CF1-3704-000	D	1	PHASE SIGNAL ASS'Y
	CS2-5651-000	E	1	SPRING, REWIND FRICTION
	CS2-6364-000	E	1	SPRING, RESET
	CS3-0531-000	E	1	GEAR, CHARGE SUN
	CS3-0532-000	E	1	GEAR, CHARGE TRANSFER
	CS3-0533-000	E	1	GEAR, PREWIND SUN
	CS3-0534-000	E	1	GEAR, PREWIND TRANSFER
	CS3-0535-000	E	1	GEAR, SPOOL TRANSFER
	CS3-0536-000	E	1	GEAR, REWIND TRANSFER
	CS3-6097-000	E	1	SPRING, BACK COVER RESET
	CY1-1853-000	D	1	CAM GEAR ASS'Y
	CY1-1856-000	D	1	MOTOR ASS'Y
	XA4-9170-357	-	2	SCREW
	XA4-9170-507	-	1	SCREW

CANON

EOS KISS III
EOS REBEL 2000 DATE
EOS 300 DATE

REF. C12-8441
C12-8444
C12-8447

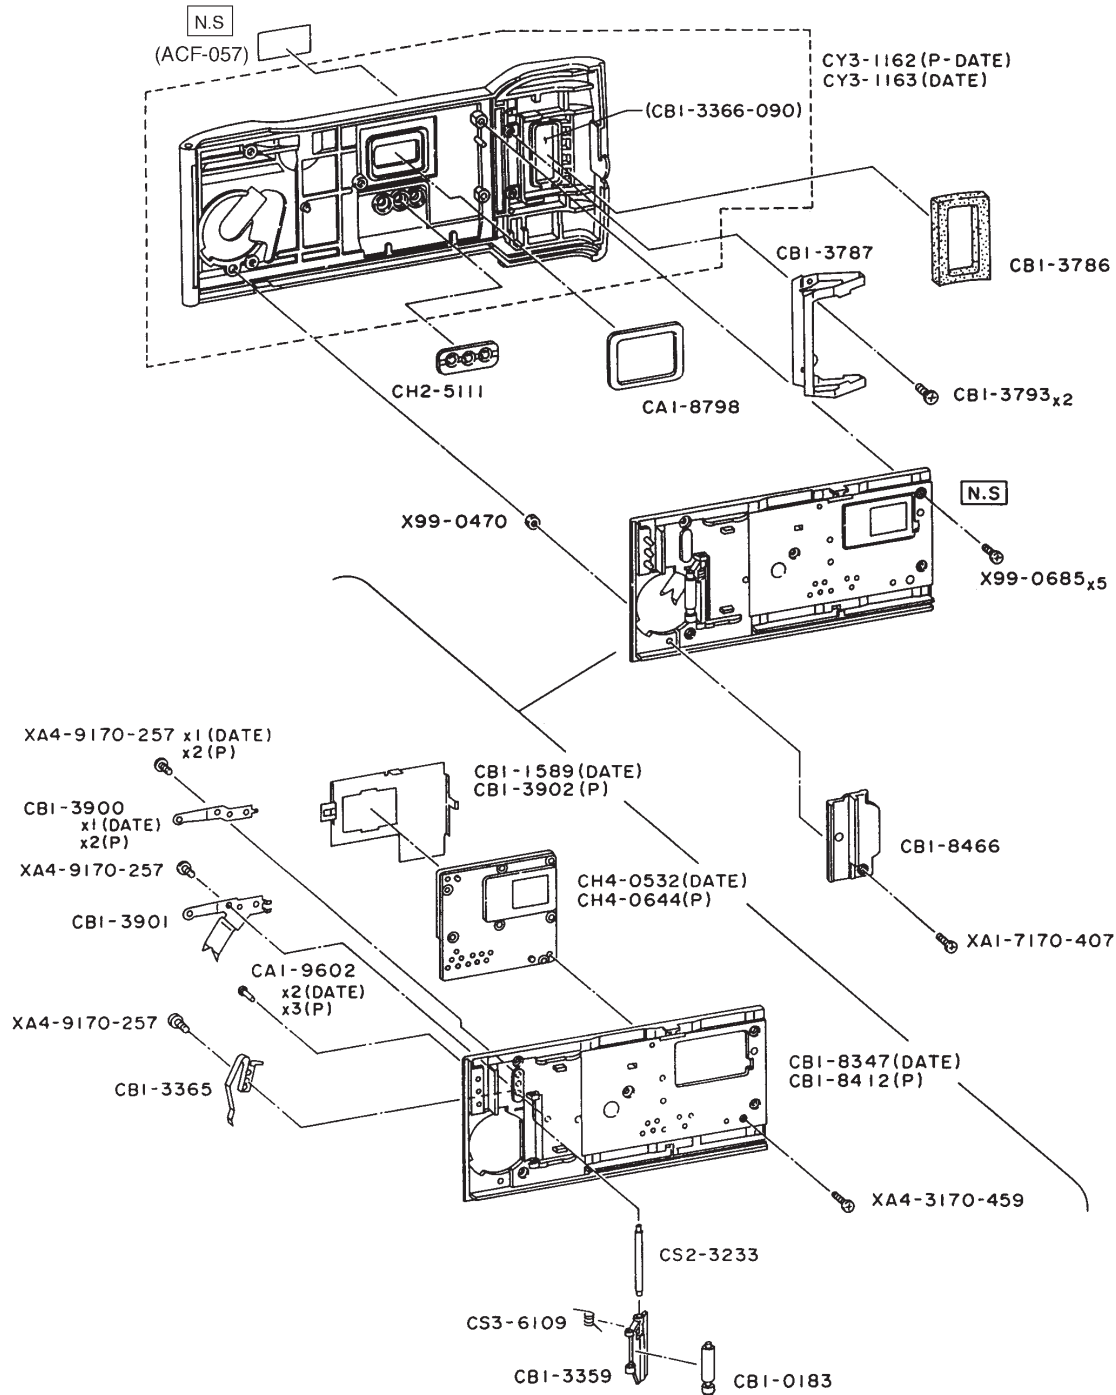

PARTS LIST


REF.No.C12-8441

C12-8443,44

C12-8446,47

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-8798-000	D	1	LIGHT SHIELD, DATE WINDOW
	CA1-9602-000	E	3	PIN, DATE CONTACT
	CB1-0183-000	E	1	ROLLER, BACK COVER GUIDE
	CB1-1589-000	E	1	PLATE, SHIELD (DATE)
	CB1-3359-000	E	1	HOLDER, ROLLER
	CB1-3365-000	E	1	CONTACT, DATE BATTERY (+)
	CB1-3366-090	E	1	WINDOW, FILM
	CB1-3786-000	D	1	SHIELD, LIGHT
	CB1-3787-000	E	1	SPRING, CARTRIDGE
	CB1-3793-000	-	2	SCREW
	CB1-3900-000	E	2	CONTACT, DATE SIGNAL
	CB1-3901-000	E	1	CONTACT, DATE BATTERY (-)
	CB1-3902-000	E	1	PLATE, SHIELD (P)
	CB1-8347-000	E	1	COVER, INNER (DATE)
	CB1-8412-000	E	1	COVER, INNER (P)
	CB1-8466-000	E	1	COVER, BATTERY
	CH2-5111-000	E	1	SWITCH, DATE
	CH4-0532-000	D	1	PCB ASS'Y, DATE (DATE)
	CH4-0644-000	D	1	PCB ASS'Y, DATE (P)
	CS2-3233-000	E	1	SHAFT, ROLLER HOLDER
	CS3-6109-000	E	1	SPRING, TORSION
	CY3-1162-000	D	1	BACK COVER UNIT (P)
	CY3-1163-000	D	1	BACK COVER UNIT (DATE)
	X99-0470-000	-	1	NUT
	X99-0685-000	-	5	SCREW
	XA1-7170-407	-	1	SCREW
	XA4-3170-459	-	1	SCREW
	XA4-9170-257	-	4	SCREW

CANON

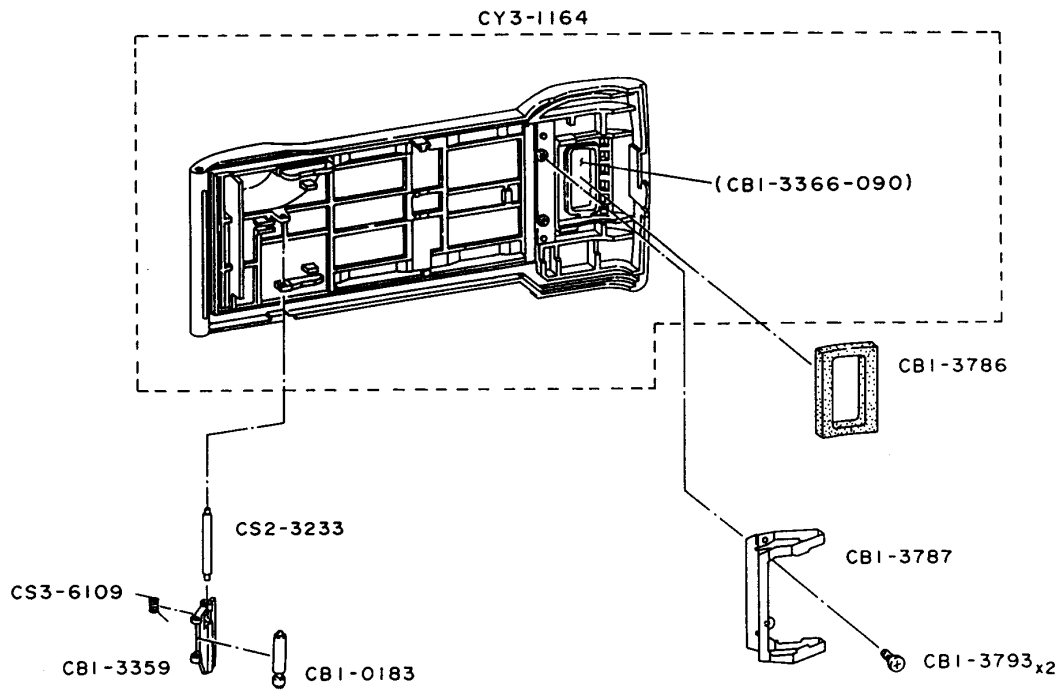EOS REBEL 2000
EOS 300REF. C12-8443
C12-8446

PARTS LIST

REF.No.C12-8441

C12-8443,44

C12-8446,47


NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-0183-000	E	1	ROLLER, BACK COVER GUIDE
	CB1-3359-000	E	1	HOLDER, ROLLER
	CB1-3366-090	E	1	WINDOW, FILM
	CB1-3786-000	D	1	SHIELD, LIGHT
	CB1-3787-000	E	1	SPRING, CARTRIDGE
	CB1-3793-000	-	2	SCREW
	CS2-3233-000	E	1	SHAFT, ROLLER HOLDER
	CS3-6109-000	E	1	SPRING, TORSION
	CY3-1164-000	D	1	BACK COVER UNIT (NON-DATE)

CANON


EOS KISS III
EOS REBEL 2000 / DATE
EOS 300 / DATE
(ACCESSORY)

REF. C12-8441
C12-8443, 8444
C12-8446, 8447


C46-2061 SEMI HARD CASE EH13-L

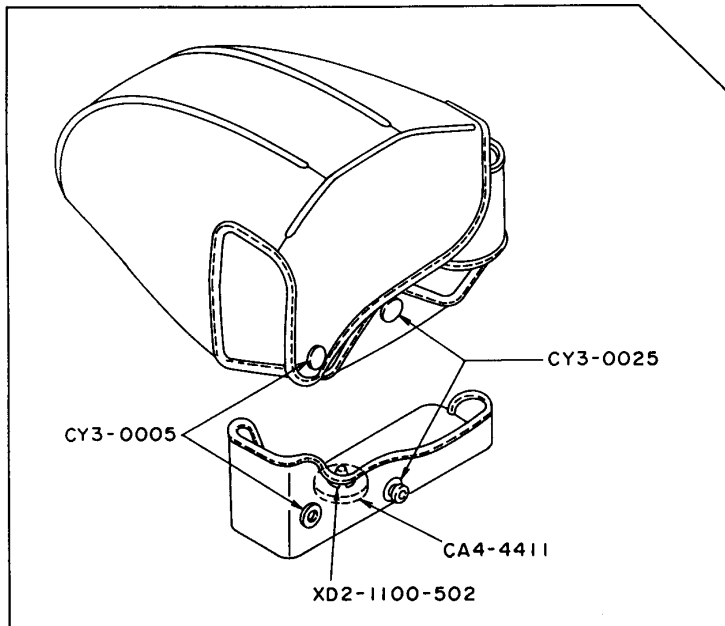

C56-1611 WIDE STRAP
EW-100BM

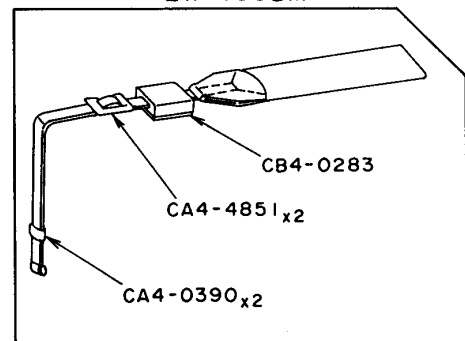

C50-1991 BATTERY PACK BP-200

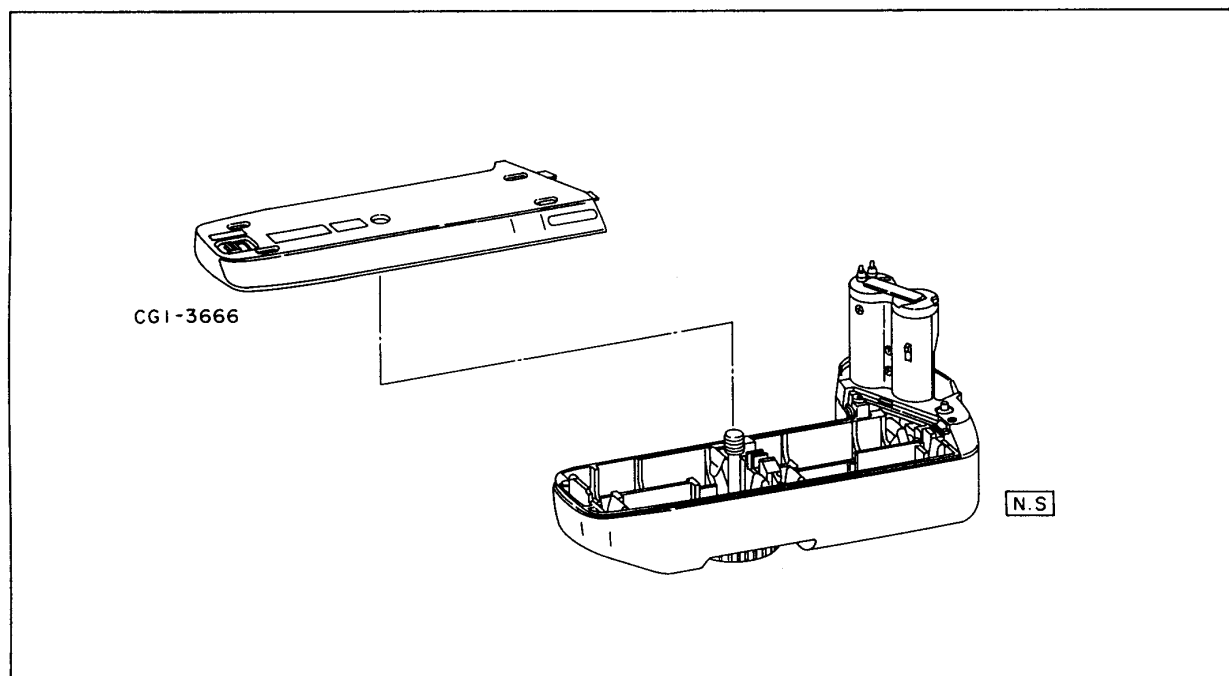

PARTS LIST

REF.N/C46-2061
C56-1611

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA4-0390-000	E	2	LOOP
	CA4-4411-000	E	1	SCREW, TIGHTENING
	CA4-4851-000	E	2	CLASP
	CB4-0283-000	E	1	CAP, EYEPiece
	CY3-0005-000	E	1	HOOK
	CY3-0025-000	E	1	HOOK
	XD2-1100-502	-	1	E RING

REF.N/C50-1991

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CG1-3666-000	E	1	COVER ASS'Y, BATTERY

ELECTRIC PARTS LIST

REF.No.C12-8441

C12-8443,44

C12-8446,47

NEW	SYMBOL	PARTS NO.	DESCRIPTION	REMARK
	FUSE	VD7-1941-501	FUSE 1.5A, SF024MCF1R5	
	T-MOS	WA2-5620-000	MOS-FET, SFX50SOT89	
	MD1	WA4-6332-000	MOTOR DRIVER, MPC17A10SVM	
		CH2-7074	LEAD	WHITE
		Y11-3901	LEAD	WHITE
		Y11-3902	LEAD	BLACK
		Y11-3903	LEAD	RED
		Y11-3904	LEAD	PINK
		Y11-3907	LEAD	YELLOW
		Y11-3909	LEAD	GREEN
		Y11-3914	LEAD	GLAY
		Y11-4401	LEAD	WHITE
		Y11-4402	LEAD	BLACK
		Y11-4403	LEAD	RED
		Y11-4411	LEAD	BLUE
		Y11-5001	LEAD	WHITE
		Y11-5011	LEAD	BLUE