



NEW EOS KISS (SILVER)	REF.NO.C12-8341
NEW EOS KISS (BLACK)	C12-8351
EOS 500 N (SILVER)	C12-8346
EOS 500 N QD (SILVER)	C12-8347
EOS REBEL G (BLACK)	C12-8353
EOS REBEL G QD (SILVER)	C12-8344
EOS 500 N (BLACK)	C12-8356
EOS 500 N QD (BLACK)	C12-8357
EOS REBEL G (SILVER)	C12-8343
(CANADA)	

PARTS CATALOG

CANON

NEW EOS KISS (S) / (B)

EOS 500 N / QD (S)

EOS REBEL G (B) / QD (S)

EOS 500 N / QD (B)

EOS REBEL G (S) (CANADA)


REF. C12-8341, 8351

C12-8346, 8347

C12-8353, 8344

C12-8356, 8357

C12-8343

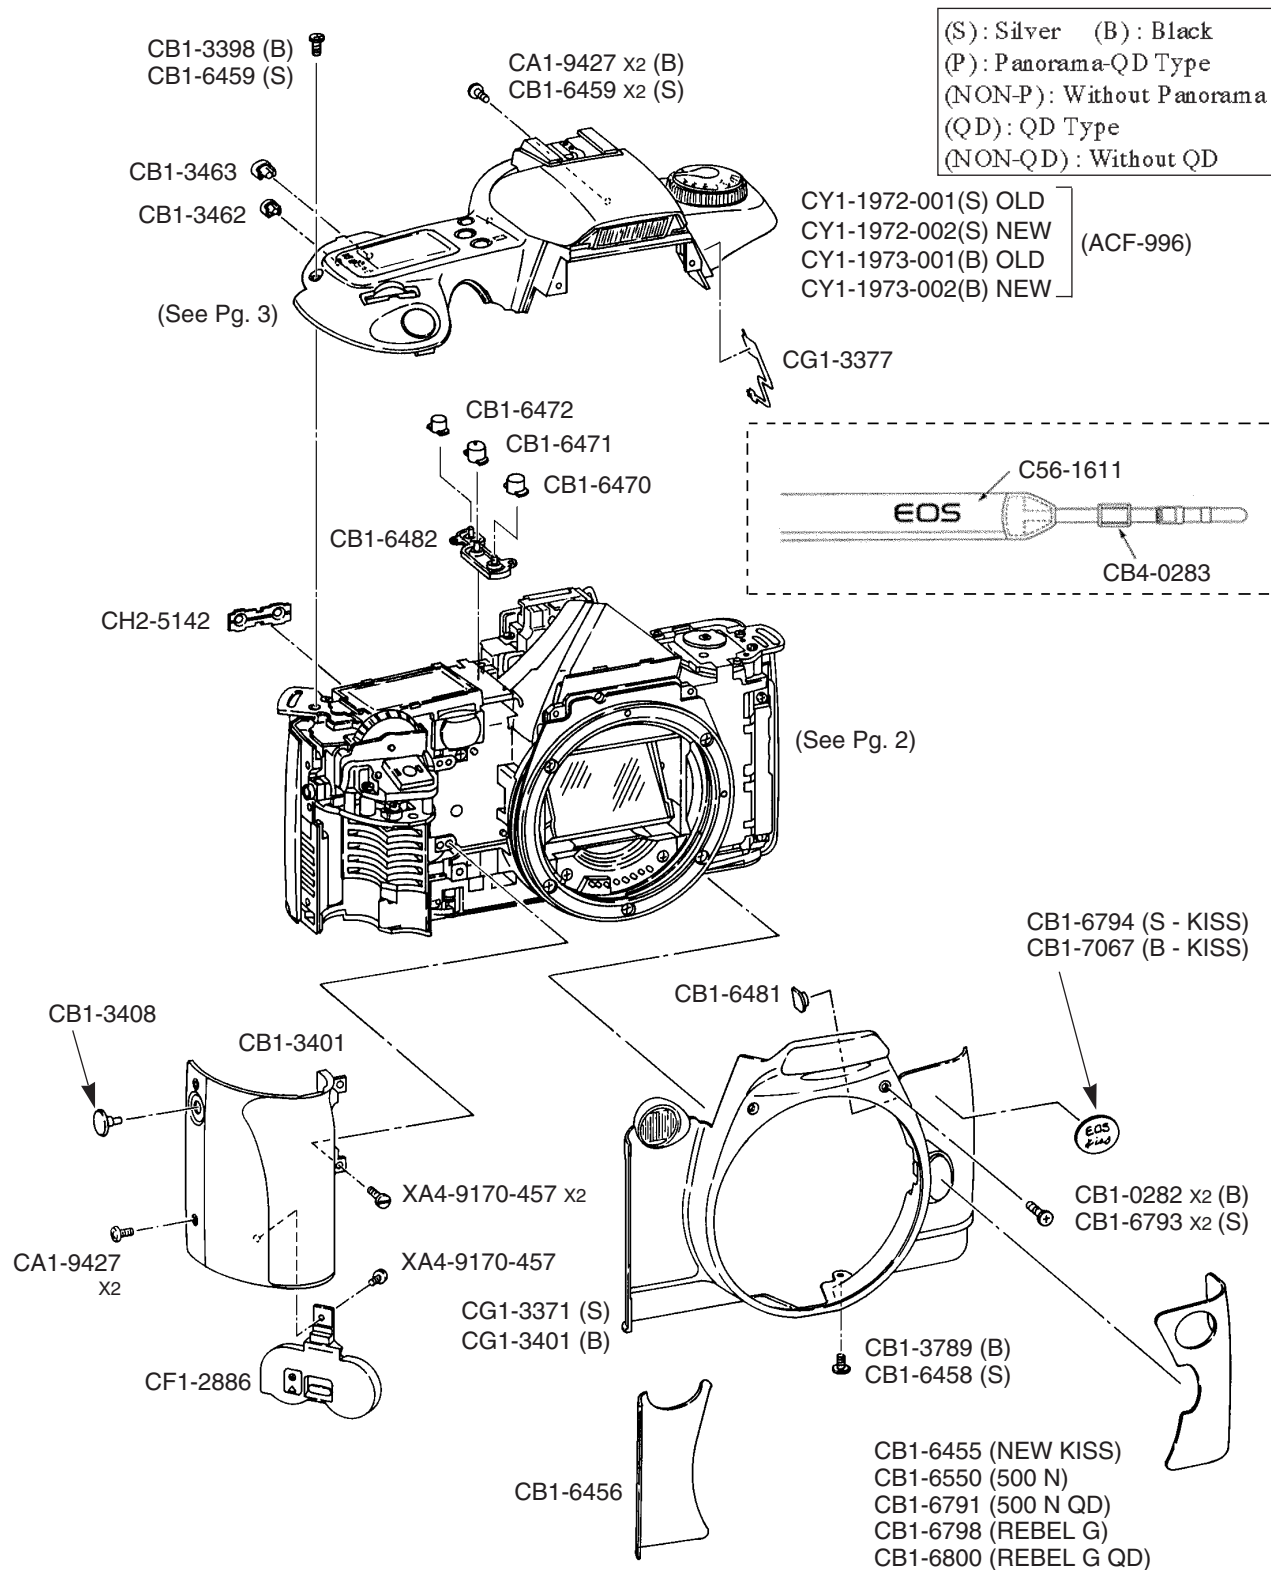

PARTS LIST


REF.No.C12-8341,8351
 C12-8346,8347
 C12-8353,8344
 C12-8356,8357
 C12-8343

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9427-000		4	SCREW,
	CB1-0282-000		2	SCREW,
	CB1-3398-000		1	SCREW,
	CB1-3401-000	E	1	GRIP
	CB1-3408-000	C	1	CAP, REMOTE
	CB1-3462-000	E	1	BUTTON, EXPOSURE
	CB1-3463-000	E	1	BUTTON, AE LOCK
	CB1-3789-000		1	SCREW,
	CB1-6455-000	C	1	COVER, LEATHER (KISS)
	CB1-6456-000	C	1	COVER, LEATHER (RIGHT)
	CB1-6458-000		1	SCREW,
	CB1-6459-000		3	SCREW,
	CB1-6470-000	E	1	BUTTON, AF SELECT
	CB1-6471-000	E	1	BUTTON, FUNCTION
	CB1-6472-000	E	1	BUTTON, SELF-TIMER
	CB1-6481-000	E	1	BUTTON, FLASH POP-UP
	CB1-6482-000	E	1	CONTACT, RUBBER
	CB1-6550-000	C	1	COVER, LEATHER (500N)
	CB1-6791-000	C	1	COVER, LEATHER (500N QD)
	CB1-6793-000		2	SCREW,
	CB1-6794-000	C	1	PLATE, NAME (SILVER)
	CB1-6798-000	C	1	COVER, LEATHER (REBEL G)
	CB1-6800-000	C	1	COVER, LEATHER (REBEL G QD)
	CB1-7067-000	C	1	PLATE, NAME (BLACK)
	CB4-0283-000	E	1	CAP,EYEPiece
	CF1-2886-000	C	1	COVER ASS'Y, BATTERY
	CG1-3371-000	C	1	COVER ASS'Y, FRONT (SILVER)
	CG1-3377-000	D	1	FPC, POP-UP SWITCH
	CG1-3401-000	C	1	COVER ASS'Y, FRONT (BLACK)
	CH2-5142-000	E	1	CONTACT, RUBBER
	CY1-1972-001	C	1	COVER ASS'Y,TOP (SILVER)
	CY1-1972-002	C	1	COVER ASS'Y,TOP (SILVER)
	CY1-1973-001	C	1	COVER ASS'Y,TOP (BLACK)
	CY1-1973-002	C	1	COVER ASS'Y,TOP (BLACK)
	XA4-9170-457		3	SCREW,

CANON

NEW EOS KISS (S) / (B)
 EOS 500 N / QD (S)
 EOS REBEL G (B) / QD (S)
 EOS 500 N / QD (B)
 EOS REBEL G (S) (CANADA)

REF. C12-8341, 8351
 C12-8346, 8347
 C12-8353, 8344
 C12-8356, 8357
 C12-8343

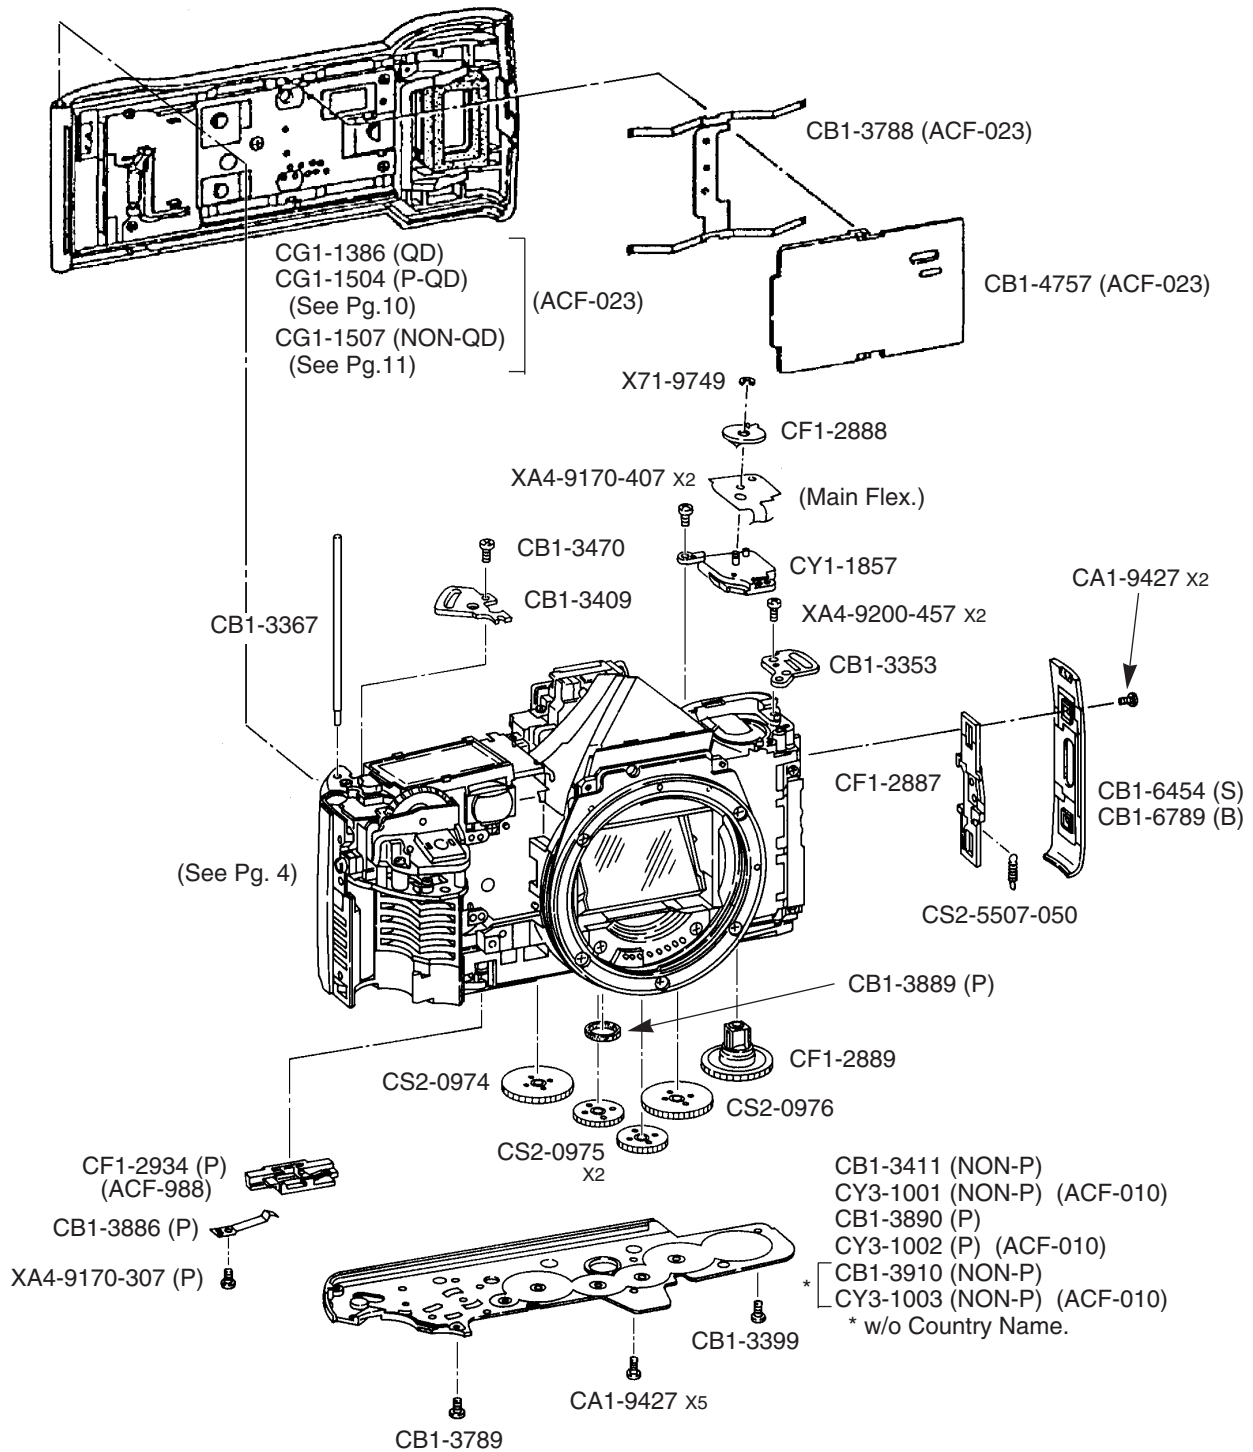

PARTS LIST


REF.No.C12-8341,8351
 C12-8346,8347
 C12-8353,8344
 C12-8356,8357
 C12-8343

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9427-000		7	SCREW,
	CB1-3353-000	E	1	LUG, NECKSTRAP (LEFT)
	CB1-3367-000	E	1	HINGE, BACK COVER
	CB1-3399-000		1	SCREW,
	CB1-3409-000	E	1	LUG, NECKSTRAP (RIGHT)
	CB1-3411-000	C	1	COVER ,BASE (NON-P)
	CB1-3470-000		1	SCREW,
	CB1-3788-000	D	1	SPRING, PRESSURE PLATE
	CB1-3789-000		1	SCREW,
	CB1-3886-000	E	1	SPRING, PANORAMA CLICK
	CB1-3889-000	D	1	SHIELD, LIGHT
	CB1-3890-000	C	1	COVER, BASE (PANORAMA)
	CB1-3910-000	C	1	COVER, BASE (GENERIC)
	CB1-4757-000	D	1	PLATE, PRESSURE
	CB1-6454-000	C	1	COVER, LATCH (SILVER)
	CB1-6789-000	C	1	COVER, LATCH (BLACK)
	CF1-2887-000	D	1	LEVER, LATCH
	CF1-2888-000	E	1	CONTACT, MODE
	CF1-2889-000	E	1	FORK ASS'Y
	CF1-2934-000	D	1	PANORAMA LEVER ASS'Y
	CG1-1386-000	D	1	COVER ASS'Y, BACK (QD)
	CG1-1504-000	D	1	COVER ASS'Y, BACK (PANORAMA)
	CG1-1507-000	D	1	COVER ASS'Y, BACK (NON-QD)
	CS2-0974-000	E	1	GEAR, REWIND 1
	CS2-0975-000	E	2	GEAR, REWIND 2
	CS2-0976-000	E	1	GEAR, REWIND 3
	CS2-5507-050	E	1	SPRING, BACK COVER LATCH
	CY1-1857-000	E	1	MODE SWITCH BASE UNIT
	CY3-1001-000	C	1	COVER,BASE (NON-P)
	CY3-1002-000	C	1	COVER,BASE (PANORAMA)
	CY3-1003-000	C	1	COVER,BASE (GENERIC)
	X71-9749-000	E	1	G RING
	XA4-9170-307		1	SCREW,
	XA4-9170-407		2	SCREW,
	XA4-9200-457		2	SCREW,

CANON

NEW EOS KISS (S) / (B)
 EOS 500 N / QD (S)
 EOS REBEL G (B) / QD (S)
 EOS 500 N / QD (B)
 EOS REBEL G (S) (CANADA)

REF. C12-8341, 8351
 C12-8346, 8347
 C12-8353, 8344
 C12-8356, 8357
 C12-8343

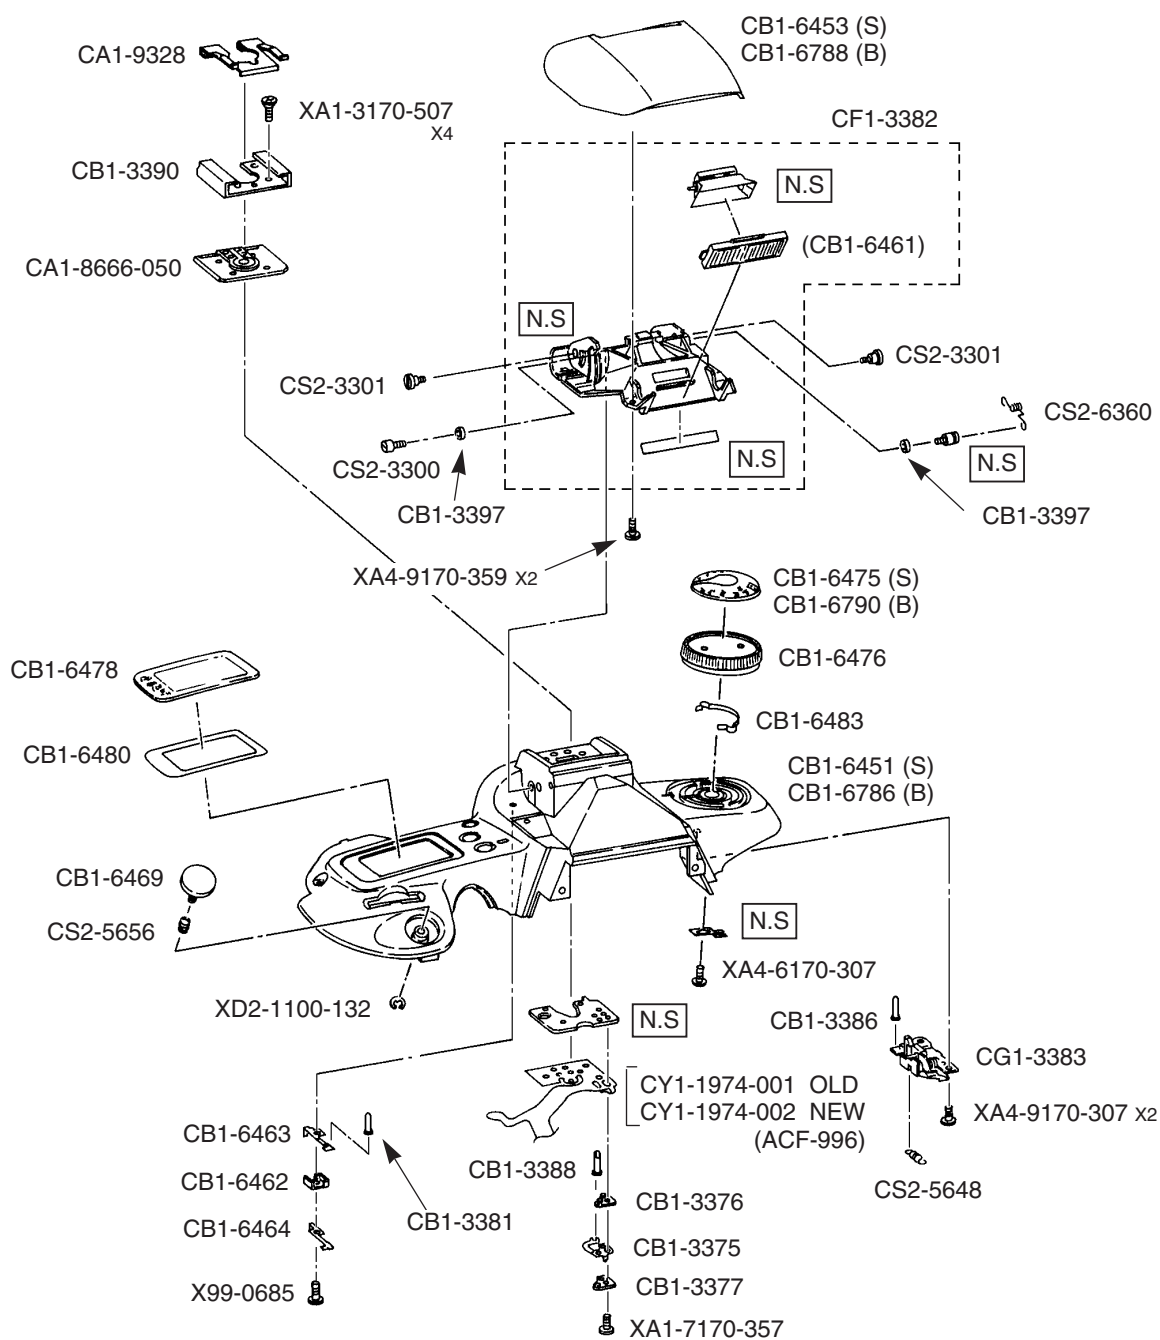

PARTS LIST


REF.No.C12-8341,8351
 C12-8346,8347
 C12-8353,8344
 C12-8356,8357
 C12-8343

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-8666-050	E	1	BASE, ACC. SHOE
	CA1-9328-000	E	1	SPRING, PLATE
	CB1-3375-000	E	1	CONTACT, SHOE IN USE
	CB1-3376-000	E	1	BASE, SHOE IN USE 1
	CB1-3377-000	E	1	BASE, SHOE IN USE 2
	CB1-3381-000	E	1	PIN, POP-END SWITCH
	CB1-3386-000	D	1	PIN, ARMATURE SPRING
	CB1-3388-000	E	1	PIN, ACC. SHOE
	CB1-3390-000	E	1	SHOE, ACCESSORY
	CB1-3397-000	E	2	STOPPER, RUBBER
	CB1-6451-000	D	1	COVER, TOP (SILVER)
	CB1-6453-000	C	1	COVER, FLASH (SILVER)
	CB1-6461-000	D	1	PANEL, FLASH
	CB1-6462-000	E	1	BASE, POP-END SWITCH
	CB1-6463-000	E	1	CONTACT, POP-END 1
	CB1-6464-000	E	1	CONTACT, POP-END 2
	CB1-6469-000	D	1	BUTTON, RELEASE
	CB1-6475-000	D	1	CAP, MODE DIAL (SILVER)
	CB1-6476-000	D	1	DIAL, MODE
	CB1-6478-000	D	1	WINDOW, OUTSIDE LCD
	CB1-6480-000	D	1	TAPE, DOUBLE-SIDED
	CB1-6483-000	E	1	CLICK SPRING, MODE DIAL
	CB1-6786-000	D	1	COVER, TOP (BLACK)
	CB1-6788-000	C	1	COVER, FLASH (BLACK)
	CB1-6790-000	D	1	CAP, MODE DIAL (BLACK)
	CF1-3382-000	D	1	FLASH HEAD UNIT
	CG1-3383-000	D	1	FLASH MAGNET ASS'Y
	CS2-3300-000	E	1	SCREW,
	CS2-3301-000	E	2	SCREW,
	CS2-5648-000	E	1	SPRING, FLASH MAGNET
	CS2-5656-000	E	1	SPRING, COIL
	CS2-6360-000	E	1	SPRING, POP UP
	CY1-1974-001	C	1	FPC ASS'Y, TOP
	CY1-1974-002	C	1	FPC ASS'Y, TOP
	X99-0685-000		1	SCREW,
	XA1-3170-507		4	SCREW,
	XA1-7170-357		1	SCREW,
	XA4-6170-307		1	SCREW,
	XA4-9170-307		2	SCREW,
	XA4-9170-359		2	SCREW,
	XD2-1100-132		1	E RING

CANON

NEW EOS KISS (S) / (B)
 EOS 500 N / QD (S)
 EOS REBEL G (B) / QD (S)
 EOS 500 N / QD (B)
 EOS REBEL G (S) (CANADA)

REF. C12-8341, 8351
 C12-8346, 8347
 C12-8353, 8344
 C12-8356, 8357
 C12-8343

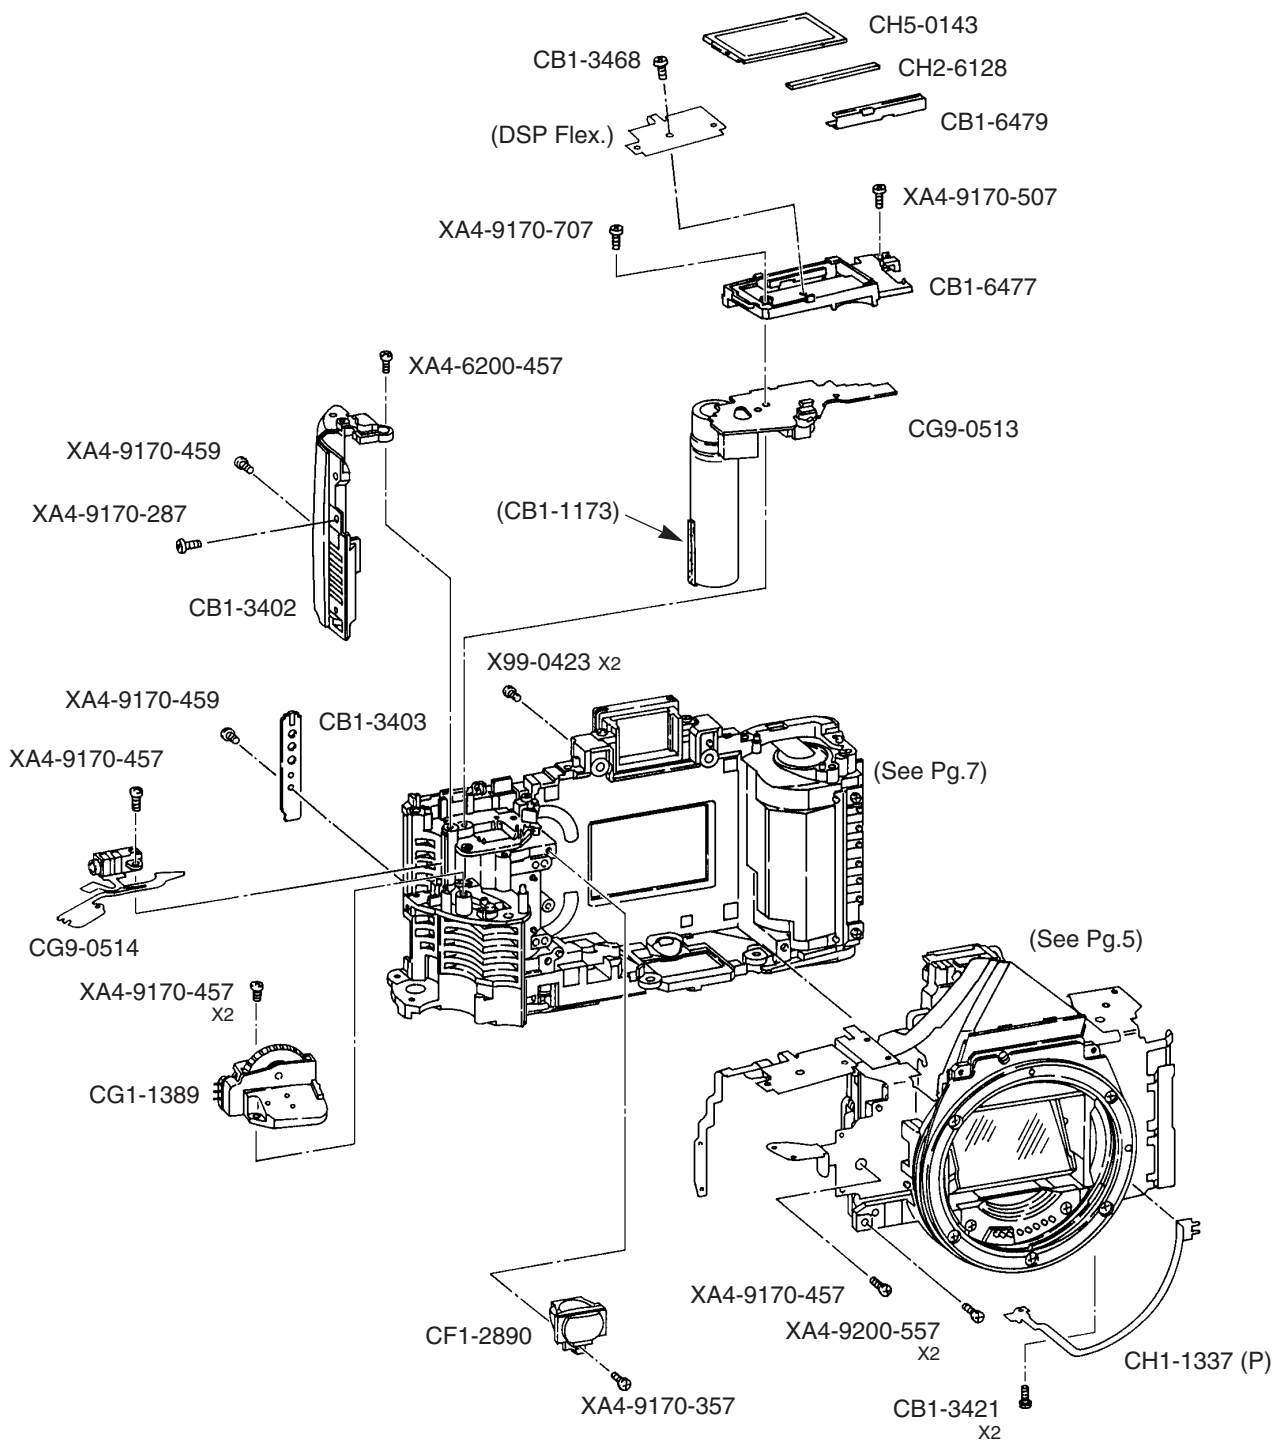

PARTS LIST


REF.No.C12-8341,8351
 C12-8346,8347
 C12-8353,8344
 C12-8356,8357
 C12-8343

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-1173-000	E	1	CUSHION, FOAM RUBBER
	CB1-3402-000	D	1	COVER, HINGE
	CB1-3403-000	E	1	COVER, DATE CONTACT
	CB1-3421-000		2	SCREW,
	CB1-3468-000		1	SCREW,
	CB1-6477-000	E	1	CASE, OUTSIDE LCD
	CB1-6479-000	E	1	HOLDER, OUTSIDE LCD
	CF1-2890-000	E	1	AF LED ASS'Y
	CG1-1389-000	D	1	DIAL ASS'Y
	CG9-0513-000	C	1	PCB ASS'Y, FLASH
	CG9-0514-000	D	1	FPC ASS'Y, RELEASE
	CH1-1337-000	E	1	FPC, PANORAMA SWITCH
	CH2-6128-000	E	1	CONNECTOR, OUTSIDE LCD
	CH5-0143-000	C	1	LCD, OUTSIDE
	X99-0423-000		2	SCREW,
	XA4-6200-457		1	SCREW,
	XA4-9170-287		1	SCREW,
	XA4-9170-357		1	SCREW,
	XA4-9170-457		4	SCREW,
	XA4-9170-459		2	SCREW,
	XA4-9170-507		1	SCREW,
	XA4-9170-707		1	SCREW,
	XA4-9200-557		2	SCREW,

CANON

NEW EOS KISS (S) / (B)
 EOS 500 N / QD (S)
 EOS REBEL G (B) / QD (S)
 EOS 500 N / QD (B)
 EOS REBEL G (S) (CANADA)

REF. C12-8341, 8351
 C12-8346, 8347
 C12-8353, 8344
 C12-8356, 8357
 C12-8343

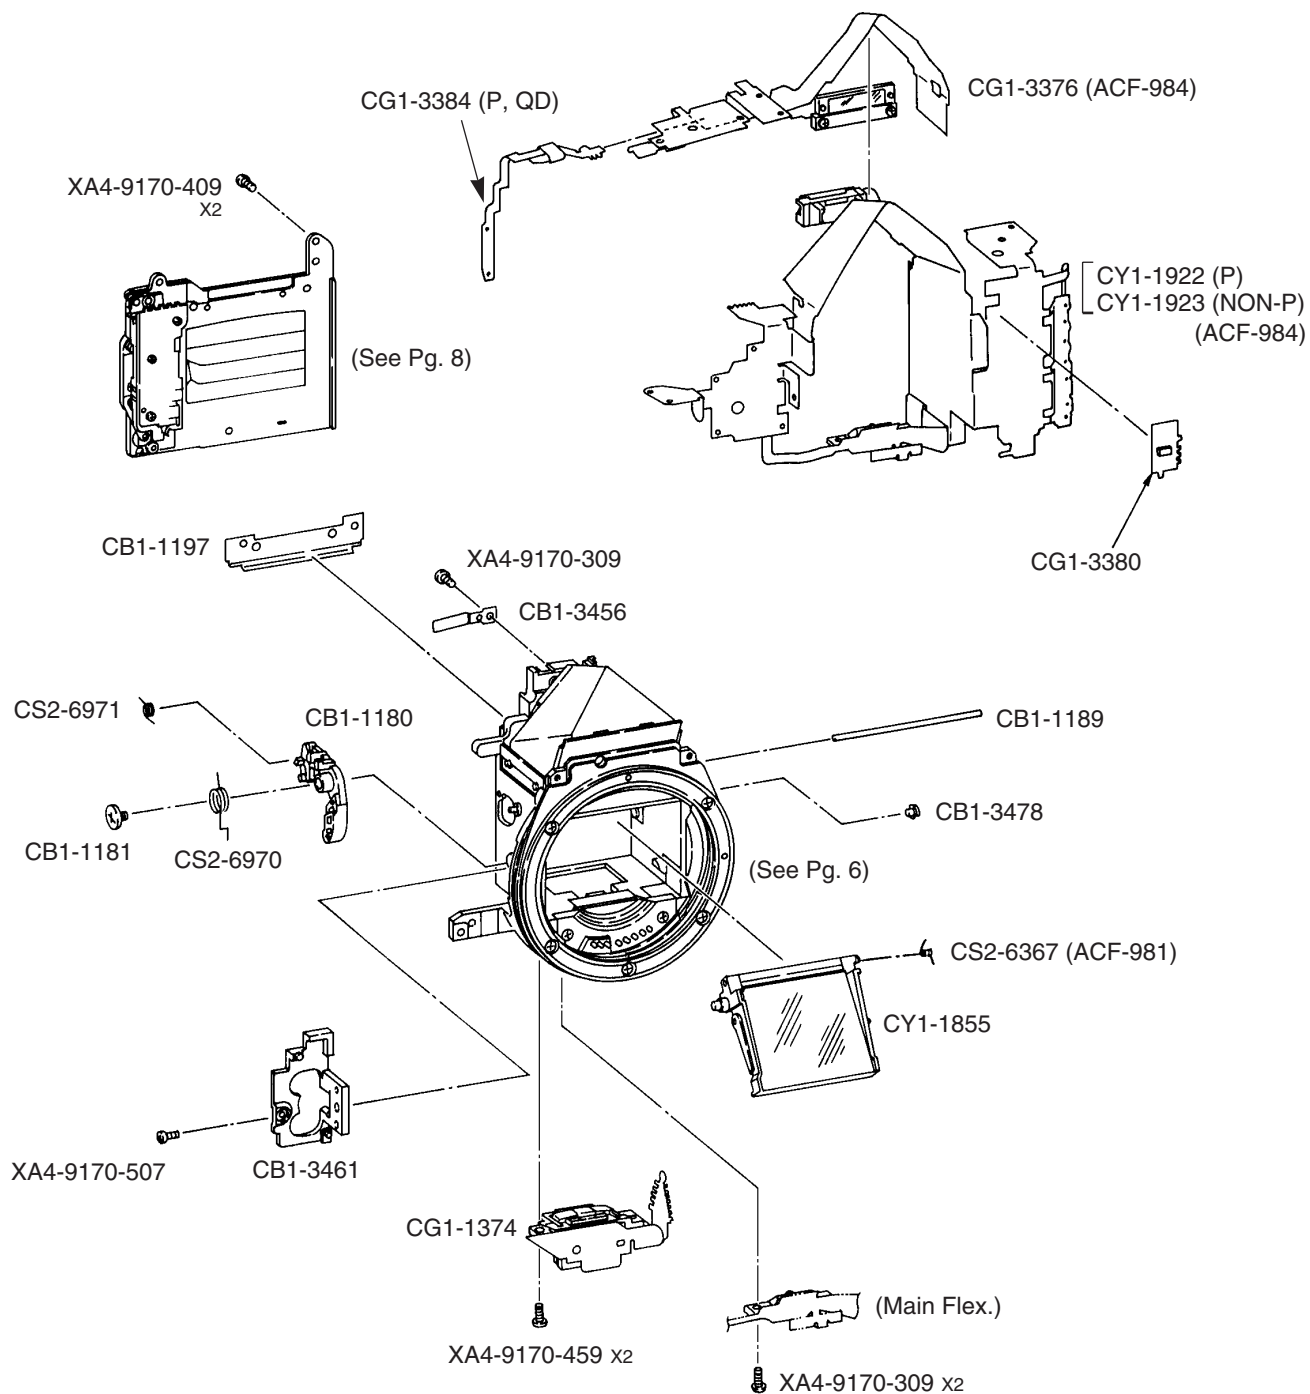

PARTS LIST


REF.No.C12-8341,8351
 C12-8346,8347
 C12-8353,8344
 C12-8356,8357
 C12-8343

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-1180-000	E	1	LEVER, MIRROR UP
	CB1-1181-000	E	1	SCREW,
	CB1-1189-000	E	1	HINGE, MAIN MIRROR
	CB1-1197-000	E	1	SHIELD, LIGHT
	CB1-3456-000	E	1	HOLDER, INSIDE LCD
	CB1-3461-000	E	1	WING
	CB1-3478-000	E	1	STOPPER, SUB MIRROR
	CG1-1374-000	D	1	AUTO FOCUS UNIT
	CG1-3376-000	C	1	FPC ASS'Y, DISPLAY
	CG1-3380-000	C	1	FPC ASS'Y, MAGNET
	CG1-3384-000	D	1	FPC ASS'Y, DATE
	CS2-6367-000	D	1	SPRING, SUB MIRROR RETURN
	CS2-6970-000	E	1	SPRING, MIRROR UP
	CS2-6971-000	E	1	SPRING, MIRROR RETURNING
	CY1-1855-000	D	1	MIRROR UNIT
	CY1-1922-000	C	1	FPC ASS'Y, MAIN (PANORAMA)
	CY1-1923-000	C	1	FPC ASS'Y, MAIN (NON-P)
	XA4-9170-309		3	SCREW,
	XA4-9170-409		2	SCREW,
	XA4-9170-459		2	SCREW,
	XA4-9170-507		1	SCREW,

CANON

NEW EOS KISS (S) / (B)
 EOS 500 N / QD (S)
 EOS REBEL G (B) / QD (S)
 EOS 500 N / QD (B)
 EOS REBEL G (S) (CANADA)

REF. C12-8341, 8351
 C12-8346, 8347
 C12-8353, 8344
 C12-8356, 8357
 C12-8343

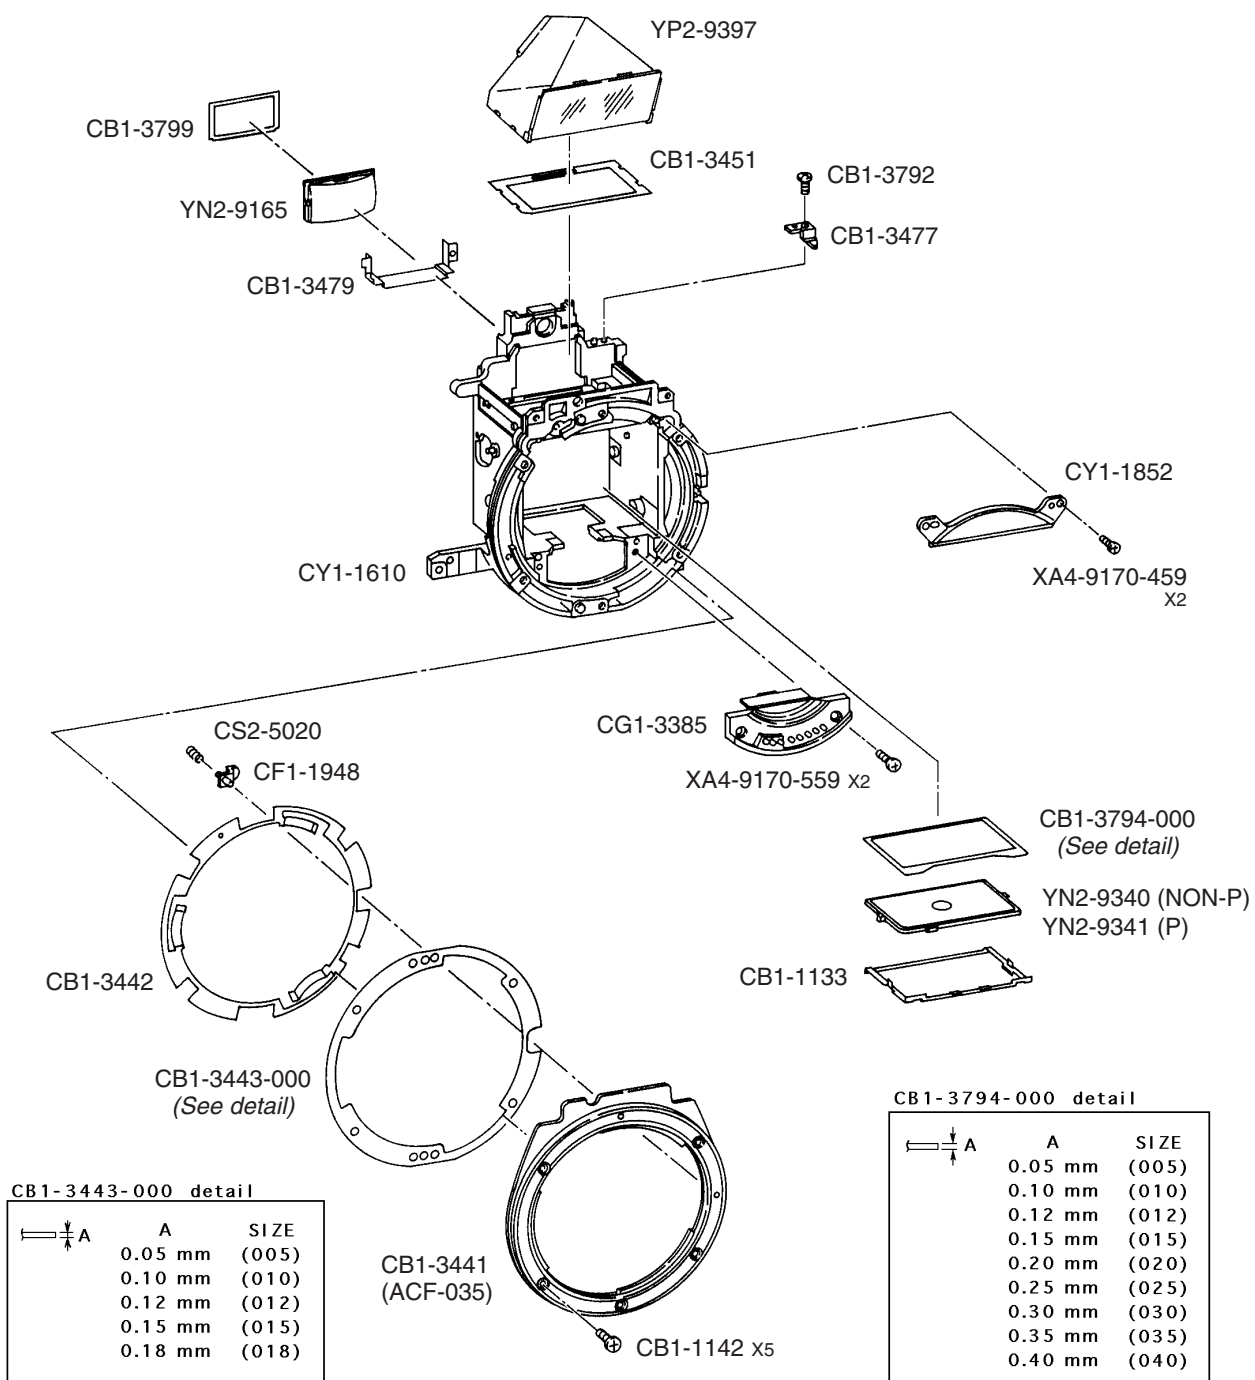

PARTS LIST


REF.No.C12-8341,8351
 C12-8346,8347
 C12-8353,8344
 C12-8356,8357
 C12-8343

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-1133-000	E	1	HOLDER, FOCUSING SCREEN
	CB1-1142-000		5	SCREW,
	CB1-3441-000	C	1	MOUNT, BODY
	CB1-3442-000	E	1	SPRING, MOUNT
	CB1-3443-000 (005)	D	1	SPACER, MOUNT
	CB1-3443-000 (010)	D	1	SPACER, MOUNT
	CB1-3443-000 (012)	D	1	SPACER, MOUNT
	CB1-3443-000 (015)	D	1	SPACER, MOUNT
	CB1-3443-000 (018)	D	1	SPACER, MOUNT
	CB1-3451-000	E	1	MASK, FINDER
	CB1-3477-000	E	1	STOPPER, MAIN FLEX.
	CB1-3479-000	E	1	SHIELD, EYEPIECE LIGHT
	CB1-3792-000		1	SCREW,
	CB1-3794-000 (005)	D	1	SPACER, FOCUSING SCREEN
	CB1-3794-000 (010)	D	1	SPACER, FOCUSING SCREEN
	CB1-3794-000 (012)	D	1	SPACER, FOCUSING SCREEN
	CB1-3794-000 (015)	D	1	SPACER, FOCUSING SCREEN
	CB1-3794-000 (020)	D	1	SPACER, FOCUSING SCREEN
	CB1-3794-000 (025)	D	1	SPACER, FOCUSING SCREEN
	CB1-3794-000 (030)	D	1	SPACER, FOCUSING SCREEN
	CB1-3794-000 (035)	D	1	SPACER, FOCUSING SCREEN
	CB1-3794-000 (040)	D	1	SPACER, FOCUSING SCREEN
	CB1-3799-000	E	1	MASK, ,EYEPIECE
	CF1-1948-000	E	1	LEVER, LENS LOCK
	CG1-3385-000	D	1	MOUNT CONTACT UNIT
	CS2-5020-000	E	1	SPRING, COIL
	CY1-1610-000	D	1	MIRROR BOX UNIT
	CY1-1852-000	D	1	PLATE, PROTECTION
	XA4-9170-459		2	SCREW,
	XA4-9170-559		2	SCREW,
	YN2-9165-000	E	1	EYEPIECE, FRONT
	YN2-9340-000	D	1	SCREEN, FOCUSING (NON-P)
	YN2-9341-000	D	1	SCREEN, FOCUSING (PANORAMA)
	YP2-9397-000	C	1	PENTAMIRROR ASS'Y

CANON

NEW EOS KISS (S) / (B)
 EOS 500 N / QD (S)
 EOS REBEL G (B) / QD (S)
 EOS 500 N / QD (B)
 EOS REBEL G (S) (CANADA)

REF. C12-8341, 8351
 C12-8346, 8347
 C12-8353, 8344
 C12-8356, 8357
 C12-8343

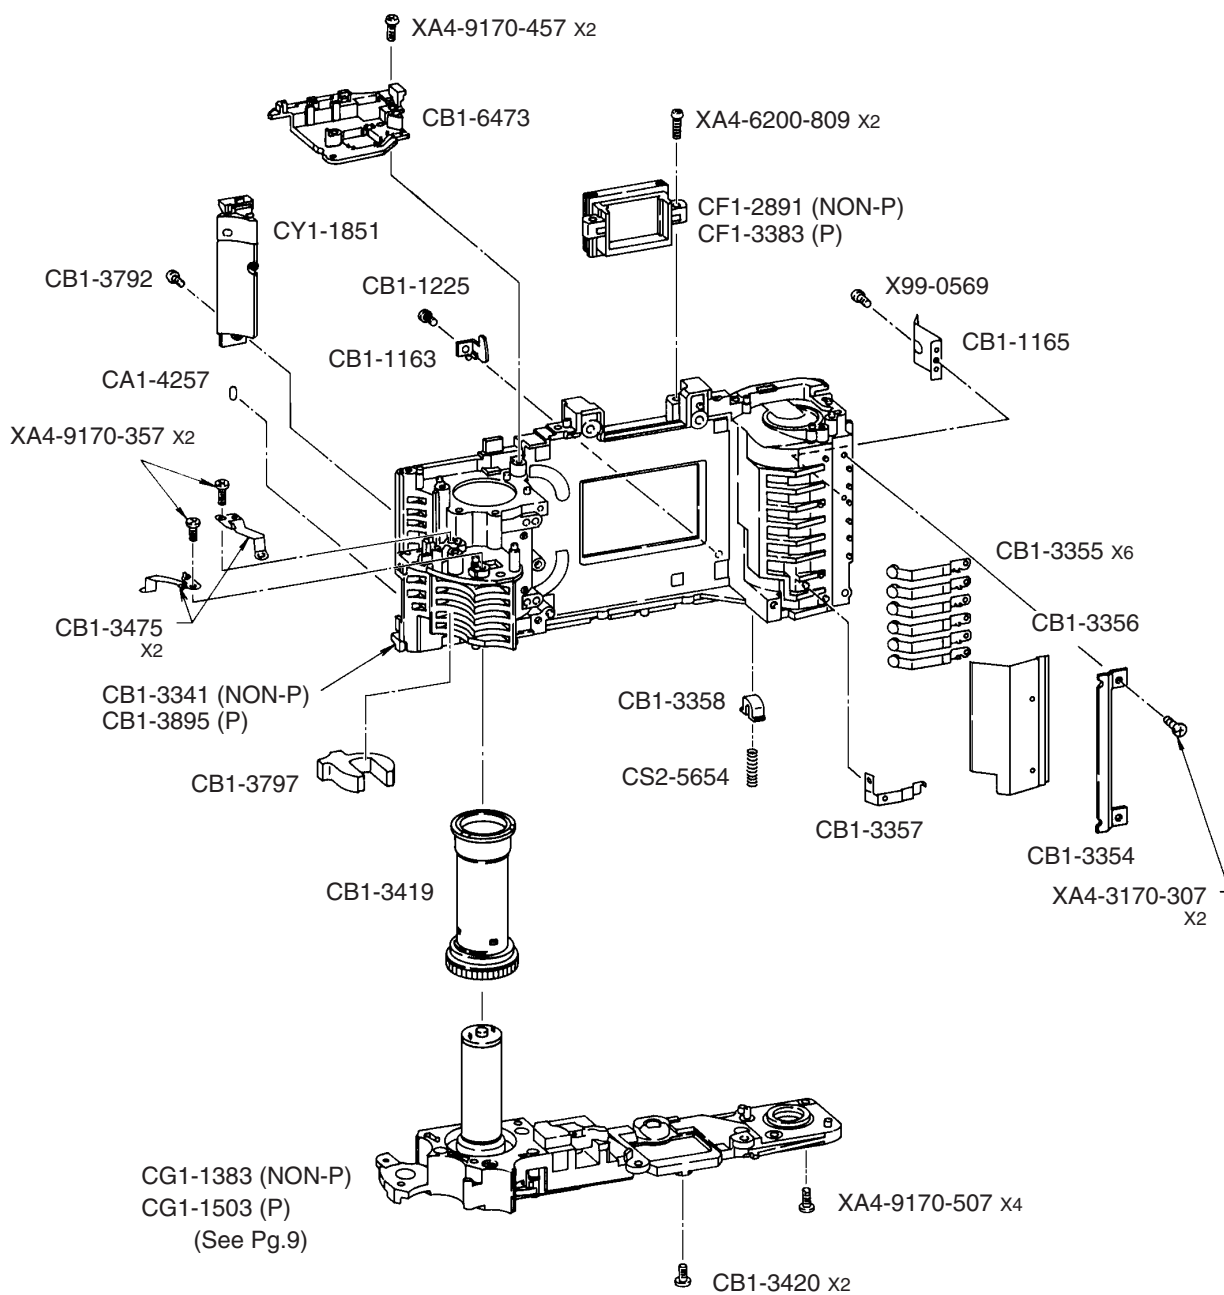

PARTS LIST


REF.No.C12-8341,8351
 C12-8346,8347
 C12-8353,8344
 C12-8356,8357
 C12-8343

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-4257-000	E	1	SEAL, FILM
	CB1-1163-000	E	1	JAW, FILM CARTRIDGE
	CB1-1165-000	E	1	GUIDE, FILM CARTRIDGE
	CB1-1225-000	E	1	SCREW,
	CB1-3341-000	E	1	BODY (NON-P)
	CB1-3354-000	E	1	HOLDER, DX CONTACT
	CB1-3355-000	E	6	CONTACT, DX
	CB1-3356-000	E	1	COVER, DX CONTACT
	CB1-3357-000	E	1	CONTACT, FILM CARTRIDGE
	CB1-3358-000	E	1	UP LEVER, FILM CARTRIDGE
	CB1-3419-000	E	1	SPOOL
	CB1-3420-000		2	SCREW,
	CB1-3475-000	E	2	CONTACT, BATTERY
	CB1-3792-000		1	SCREW,
	CB1-3797-000	E	1	CUSHION, BATTERY
	CB1-3895-000	E	1	BODY (PANORAMA)
	CB1-6473-000	E	1	BASE, SPOOL
	CF1-2891-000	E	1	EYEPiece ASS'Y (NON-P)
	CF1-3383-000	E	1	EYEPiece ASS'Y (PANORAMA)
	CG1-1383-000	D	1	BOTTOM PLATE ASS'Y (NON-P)
	CG1-1503-000	D	1	BOTTOM PLATE ASS'Y (PANORAMA)
	CS2-5654-000	E	1	SPRING, COIL
	CY1-1851-000	E	1	SIGNAL ASS'Y
	X99-0569-000		1	SCREW,
	XA4-3170-307		2	SCREW,
	XA4-6200-809		2	SCREW,
	XA4-9170-357		2	SCREW,
	XA4-9170-457		2	SCREW,
	XA4-9170-507		4	SCREW,


CANON

NEW EOS KISS (S) / (B)
 EOS 500 N / QD (S)
 EOS REBEL G (B) / QD (S)
 EOS 500 N / QD (B)
 EOS REBEL G (S) (CANADA)

REF. C12-8341, 8351
 C12-8346, 8347
 C12-8353, 8344
 C12-8356, 8357
 C12-8343

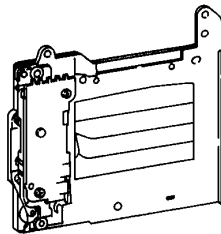

(Old) CG1-1376
 (New) CG1-3676 (ACF-052)
 (NON-P)
 CG1-1484 (P)

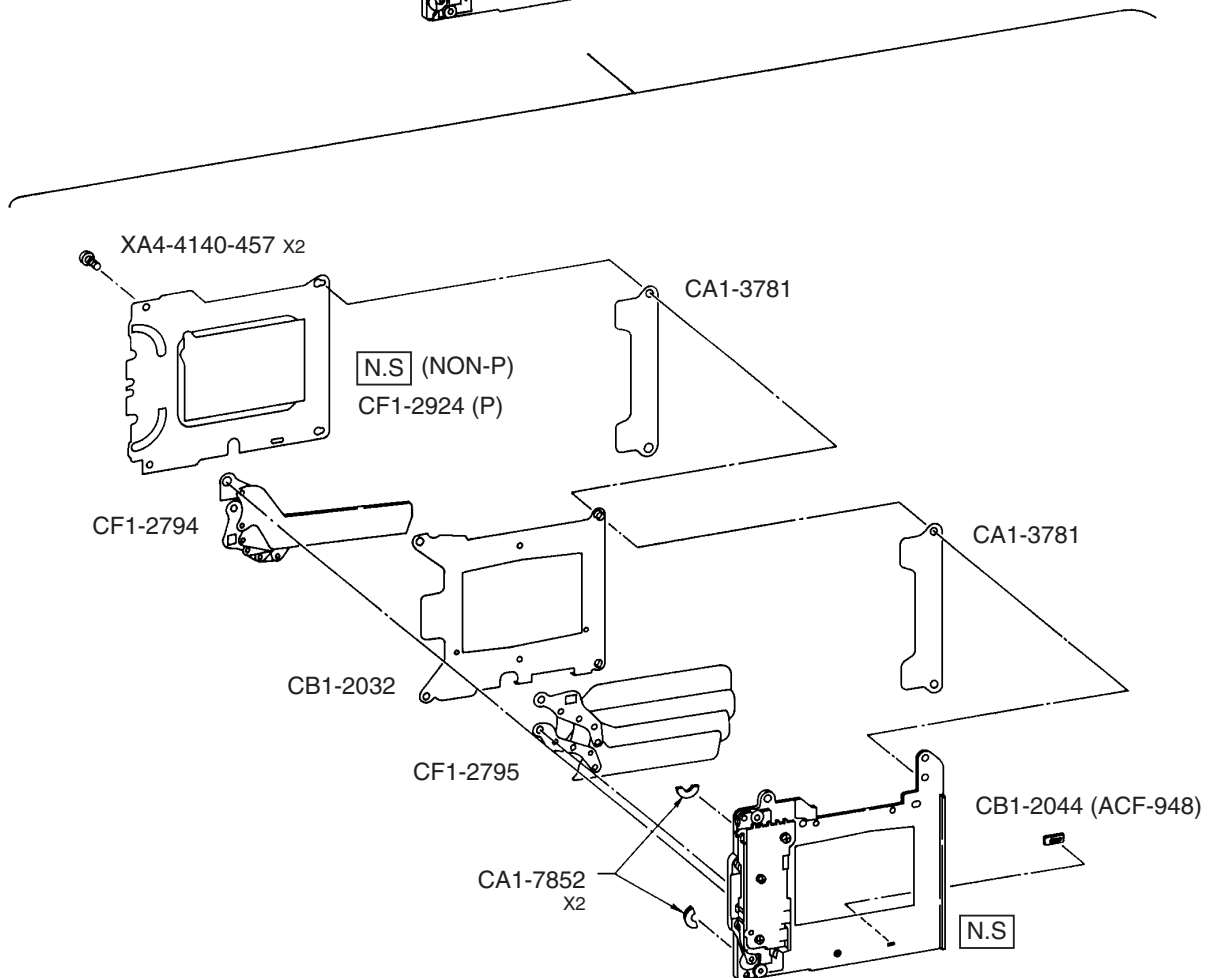

PARTS LIST


REF.No.C12-8341,8351
 C12-8346,8347
 C12-8353,8344
 C12-8356,8357
 C12-8343

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-3781-000	E	2	SPACER
	CA1-7852-000	E	2	STOPPER, RUBBER
	CB1-2032-000	E	1	PLATE, SEPARATOR
	CB1-2044-000	E	1	RUBBER,STOPPER
	CF1-2794-000	C	1	CURTAIN, 1ST SHUTTER
	CF1-2795-000	C	1	CURTAIN, 2ND SHUTTER
	CF1-2924-000	D	1	PANORAMA COVER ASS'Y
	CG1-1376-000	C	1	SHUTTER UNIT (NON-P)
	CG1-1484-000	C	1	SHUTTER UNIT (PANORAMA)
	CG1-3676-000	C	1	SHUTTER UNIT (NON-P)
	XA4-4140-457		2	SCREW

CANON

NEW EOS KISS (S) / (B)
 EOS 500 N / QD (S)
 EOS REBEL G (B) / QD (S)
 EOS 500 N / QD (B)
 EOS REBEL G (S) (CANADA)

REF. C12-8341, 8351
 C12-8346, 8347
 C12-8353, 8344
 C12-8356, 8357
 C12-8343

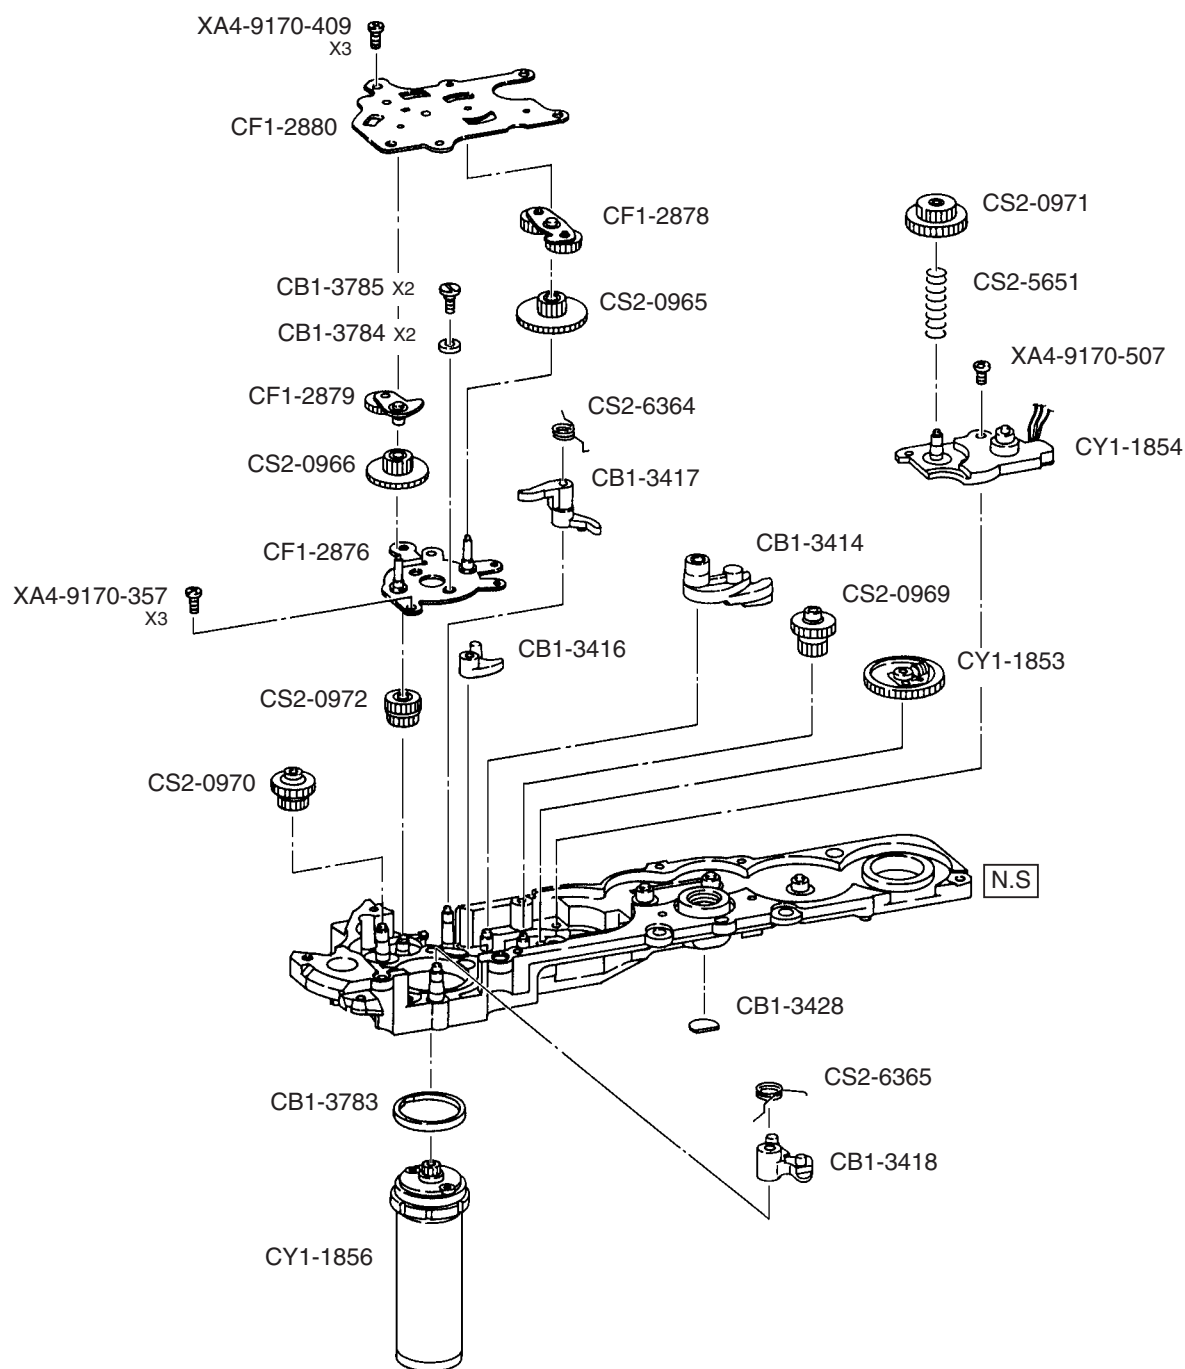

PARTS LIST


REF.No.C12-8341,8351
 C12-8346,8347
 C12-8353,8344
 C12-8356,8357
 C12-8343

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-3414-000	E	1	LEVER, CHARGE
	CB1-3416-000	E	1	LEVER, RESET-1
	CB1-3417-000	E	1	LEVER, RESET-2
	CB1-3418-000	E	1	LEVER, BACK COVER
	CB1-3428-000	E	1	COVER, TRIPOD
	CB1-3783-000	E	1	CUSHION, MOTOR
	CB1-3784-000	E	2	WASHER, RUBBER
	CB1-3785-000		2	SCREW,
	CF1-2876-000	E	1	GEAR COVER ASS'Y
	CF1-2878-000	E	1	PLANETARY GEAR ASS'Y 1
	CF1-2879-000	E	1	PLANETARY GEAR ASS'Y 2
	CF1-2880-000	E	1	LOWER COVER ASS'Y
	CS2-0965-000	E	1	GEAR, CHARGE SUN
	CS2-0966-000	E	1	GEAR, PREWIND SUN
	CS2-0969-000	E	1	GEAR, CHARGE TRANSFER
	CS2-0970-000	E	1	GEAR, PREWIND TRANSFER
	CS2-0971-000	E	1	GEAR, REWIND TRANSFER
	CS2-0972-000	E	1	GEAR, SPOOL TRANSFER
	CS2-5651-000	E	1	SPRING, REWIND FRICTION
	CS2-6364-000	E	1	SPRING, RESET
	CS2-6365-000	E	1	SPRING, BACK COVER RESET
	CY1-1853-000	D	1	CAM GEAR ASS'Y
	CY1-1854-000	D	1	PHASE SIGNAL ASS'Y
	CY1-1856-000	D	1	MOTOR ASS'Y
	XA4-9170-357		3	SCREW,
	XA4-9170-409		3	SCREW,
	XA4-9170-507		1	SCREW,

CANON

NEW EOS KISS (S) / (B)
 EOS 500 N QD (S)
 EOS REBEL G QD (S)
 EOS 500 N QD (B)

REF. C12-8341, 8351
 C12-8347
 C12-8344
 C12-8357

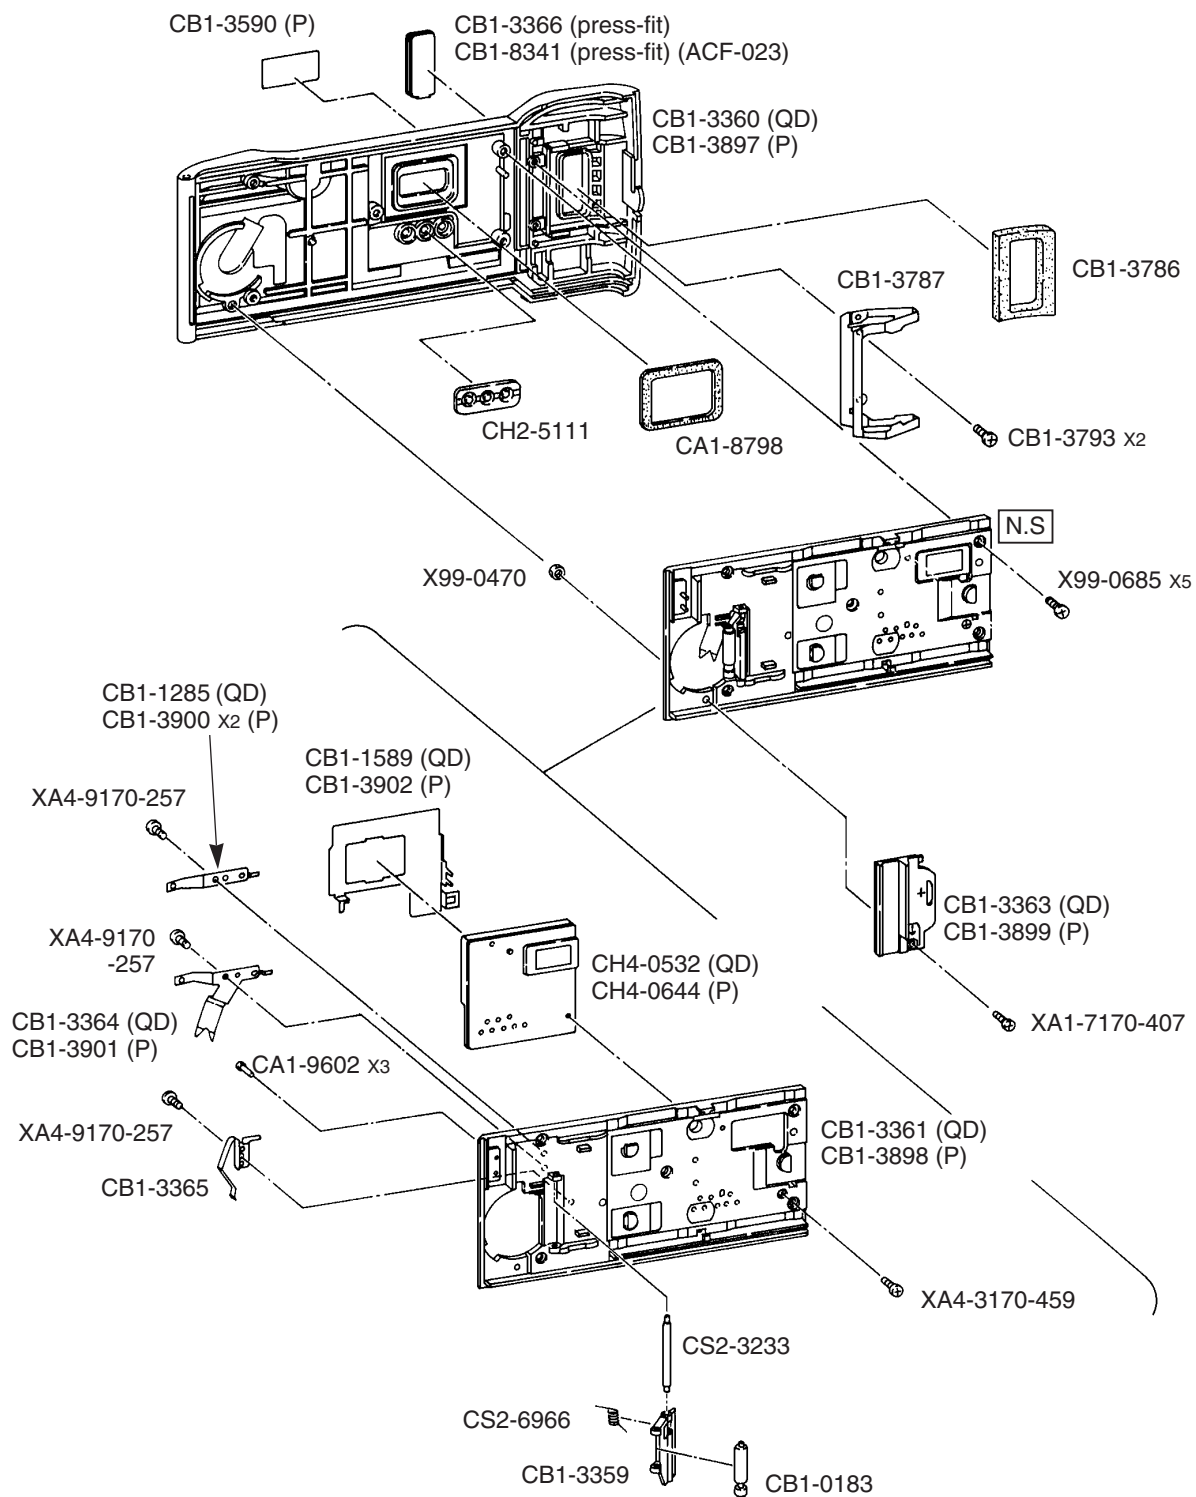

PARTS LIST

REF.No.C12-8341,8351
 C12-8346,8347
 C12-8353,8344
 C12-8356,8357
 C12-8343

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-8798-000	D	1	LIGHT SHIELD, DATE WINDOW
	CA1-9602-000	E	3	PIN, DATE CONTACT
	CB1-0183-000	E	1	ROLLER, BACK COVER GUIDE
	CB1-1285-000	E	1	CONTACT, DATE SIGNAL
	CB1-1589-000	E	1	PLATE, SHIELD (QD)
	CB1-3359-000	E	1	HOLDER, ROLLER
	CB1-3360-000	D	1	COVER, BACK (QD)
	CB1-3361-000	E	1	COVER, INNER (QD)
	CB1-3363-000	E	1	COVER, BATTERY (QD)
	CB1-3364-000	E	1	CONTACT, DATE BATTERY (-)
	CB1-3365-000	E	1	CONTACT, DATE BATTERY (+)
	CB1-3366-000	E	1	WINDOW, FILM
	CB1-3590-000	D	1	SEAL, PANORAMA
	CB1-3786-000	D	1	SHIELD, LIGHT
	CB1-3787-000	E	1	SPRING, CARTRIDGE
	CB1-3793-000		2	SCREW
	CB1-3897-000	E	1	COVER, BACK (PANORAMA)
	CB1-3898-000	E	1	COVER, INNER (PANORAMA)
	CB1-3899-000	E	1	COVER, BATTERY (PANORAMA)
	CB1-3900-000	E	2	CONTACT, DATE SIGNAL
	CB1-3901-000	E	1	CONTACT, DATE BATTERY (-)
	CB1-3902-000	E	1	PLATE, SHIELD (PANORAMA)
	CB1-8341-000	E	1	WINDOW, FILM
	CH2-5111-000	E	1	SWITCH, DATE
	CH4-0532-000	D	1	PCB ASS'Y, DATE (QD)
	CH4-0644-000	D	1	PCB ASS'Y, DATE (PANORAMA)
	CS2-3233-000	E	1	SHAFT, ROLLER HOLDER
	CS2-6966-000	E	1	SPRING, TORSION
	X99-0470-000		1	NUT
	X99-0685-000		5	SCREW,
	XA1-7170-407		1	SCREW,
	XA4-3170-459		1	SCREW
	XA4-9170-257		3	SCREW,

CANON

EOS 500 N (S)

EOS REBEL G (B)

EOS 500 N (B)


EOS REBEL G (S) (CANADA)

REF.C12-8346

C12-8353

C12-8356

C12-8343

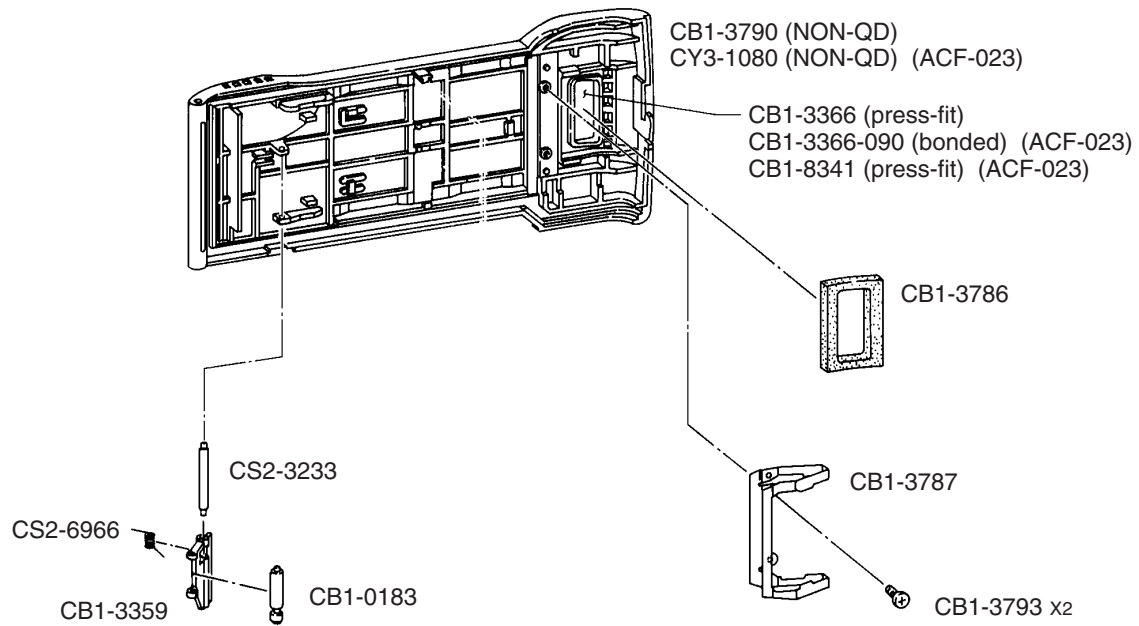

PARTS LIST

REF.No.C12-8341,8351
 C12-8346,8347
 C12-8353,8344
 C12-8356,8357
 C12-8343

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-0183-000	E	1	ROLLER, BACK COVER GUIDE
	CB1-3359-000	E	1	HOLDER, ROLLER
	CB1-3366-000	E	1	WINDOW, FILM
	CB1-3366-090	E	1	WINDOW, FILM
	CB1-3786-000	D	1	SHIELD, LIGHT
	CB1-3787-000	E	1	SPRING, CARTRIDGE
	CB1-3790-000	D	1	COVER, BACK (NON-QD)
	CB1-3793-000		2	SCREW,
	CB1-8341-000	E	1	WINDOW, FILM
	CS2-3233-000	E	1	SHAFT, ROLLER HOLDER
	CS2-6966-000	E	1	SPRING, TORSION
	CY3-1080-000	D	1	BACK COVER UNIT (NON-QD)

ELECTRIC PARTS LIST

REF.No.C12-8341,8351

C12-8346,8347

C12-8353,8344

C12-8356,8357

C12-8343

NEW	SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARK
	EF IC	CH4-0641-000			EF IC, LC4090	
	AE IC	CH4-0642-000			AE IC, LC4089	
	T-MOS	WA2-5620-000			MOS-FET, SFX50	
	DC/DC IC	WA4-5457-000			DC/DC IC, MB3776APNF	
	MOTIR DR	WA4-6332-000			MOTOR DRIVER, MPC17A10SVM	
		VR7-2200-105	E	1	RESISTOR	
		Y11-3402-000			LEAD	BLACK
		Y11-3403-000			LEAD	RED
		Y11-3702-000			LEAD	BLACK
		Y11-3703-000			LEAD	RED
		Y11-3901-000			LEAD	WHITE
		Y11-3902-000			LEAD	BLACK
		Y11-3903-000			LEAD	RED
		Y11-3904-000			LEAD	PINK
		Y11-3906-000			LEAD	ORANGE
		Y11-3907-000			LEAD	YELLOW
		Y11-3909-000			LEAD	GREEN
		Y11-3911-000			LEAD	BLUE
		Y11-3914-000			LEAD	GLAY
		Y11-5001-000			LEAD	WHITE
		Y11-5011-000			LEAD	BLUE