




SURE SHOT CLASSIC 120	REF.NO.	C13-3832
PRIMA SUPER 120		C13-3833
SURE SHOT CLASSIC 120 CAPTION		C13-3842
PRIMA SUPER 120 CAPTION		C13-3843
AUTOBOY 120		C13-3851

PARTS CATALOG

CODE	Country of Origin
C	CANON INC.
CMT	CANON INC. MADE IN TAIWAN

CANON [A]SURE SHOT CLASSIC 120
 [B]PRIMA SUPER 120
 [C]SURE SHOT CLASSIC 120 CAPTION
 [D]PRIMA SUPER 120 CAPTION
 [E]AUTOBOY 120

REF. NO. C13-3832
 C13-3833
 C13-3842
 C13-3843
 C13-3851

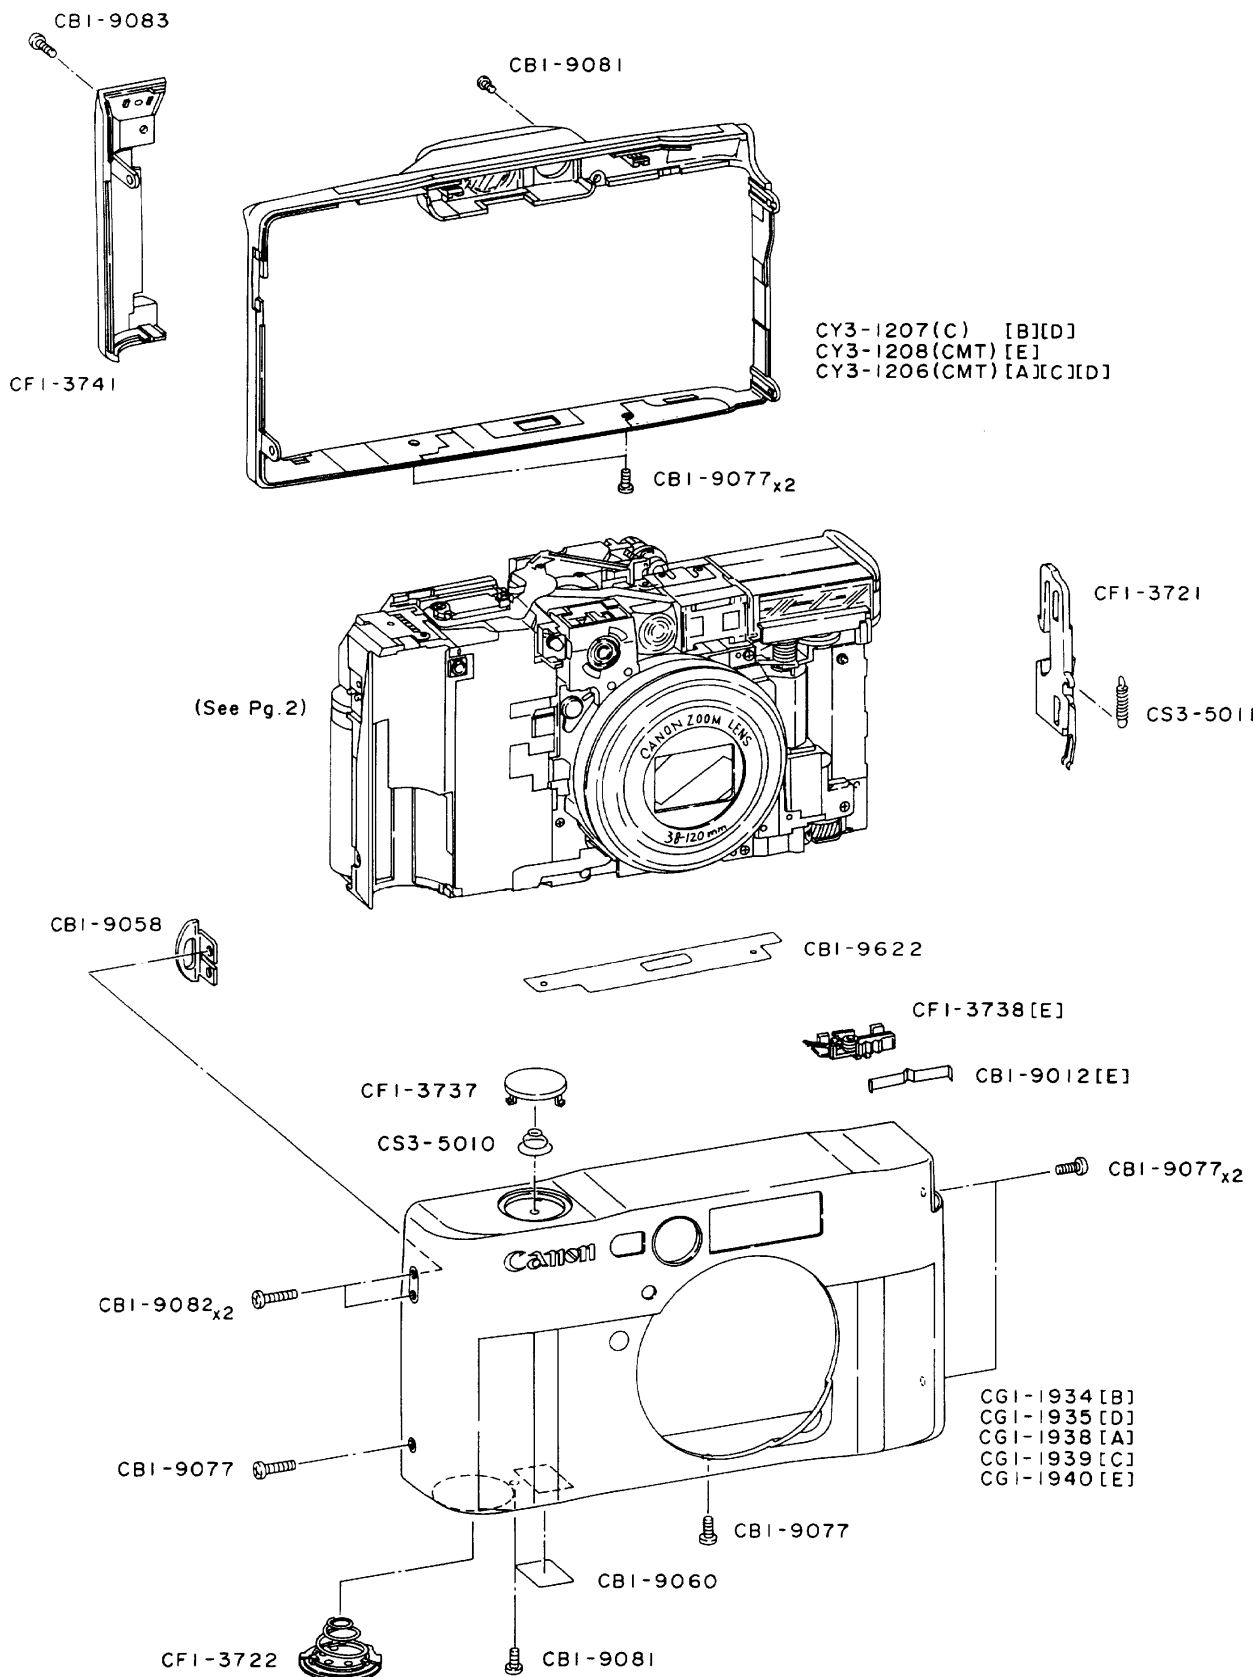


PARTS LIST

REF.NO.C13-3832[A],42[C]
 C13-3833[B],43[D]
 C13-3851[E]

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
*	CB1-9012-000	E	1	SPRING, CLICK
*	CB1-9058-000	E	1	HOLDER, STRAP
*	CB1-9060-000	C	1	CAP, CONTACT
*	CB1-9077-000	F	6	SCREW
*	CB1-9081-000	F	2	SCREW
*	CB1-9082-000	F	2	SCREW
*	CB1-9083-000	F	1	SCREW
*	CB1-9622-000	D	1	SHIELD, LIGHT
*	CF1-3721-000	C	1	KNOB, BACK COVER
*	CF1-3722-000	C	1	COVER ASS`Y, BATTERY
*	CF1-3737-000	C	1	BUTTON ASS`Y, RELEASE
*	CF1-3738-000	C	1	KNOB ASS`Y, PANORAMA
*	CF1-3741-000	C	1	COVER ASS`Y, REAR2
*	CG1-1934-000	C	1	COVER ASS`Y, FRONT[B]
*	CG1-1935-000	C	1	COVER ASS`Y, FRONT[D]
*	CG1-1938-000	C	1	COVER ASS`Y, FRONT[A]
*	CG1-1939-000	C	1	COVER ASS`Y, FRONT[C]
*	CG1-1940-000	C	1	COVER ASS`Y, FRONT[E]
*	CS3-5010-000	D	1	SPRING, RELEASE BUTTON
*	CS3-5011-000	D	1	SPRING, BACK COVER KNOB
*	CY3-1206-000	C	1	COVER ASS`Y, REAR1(CMT)
*	CY3-1207-000	C	1	COVER ASS`Y, REAR1(C)
*	CY3-1208-000	C	1	COVER ASS`Y, REAR1(PANORAMA)

CANON [A] SURE SHOT CLASSIC 120
 [B] PRIMA SUPER 120
 [C] SURE SHOT CLASSIC 120 CAPTION
 [D] PRIMA SUPER 120 CAPTION
 [E] AUTOBOY 120

REF. NO. C13-3832
 C13-3833
 C13-3842
 C13-3843
 C13-3851

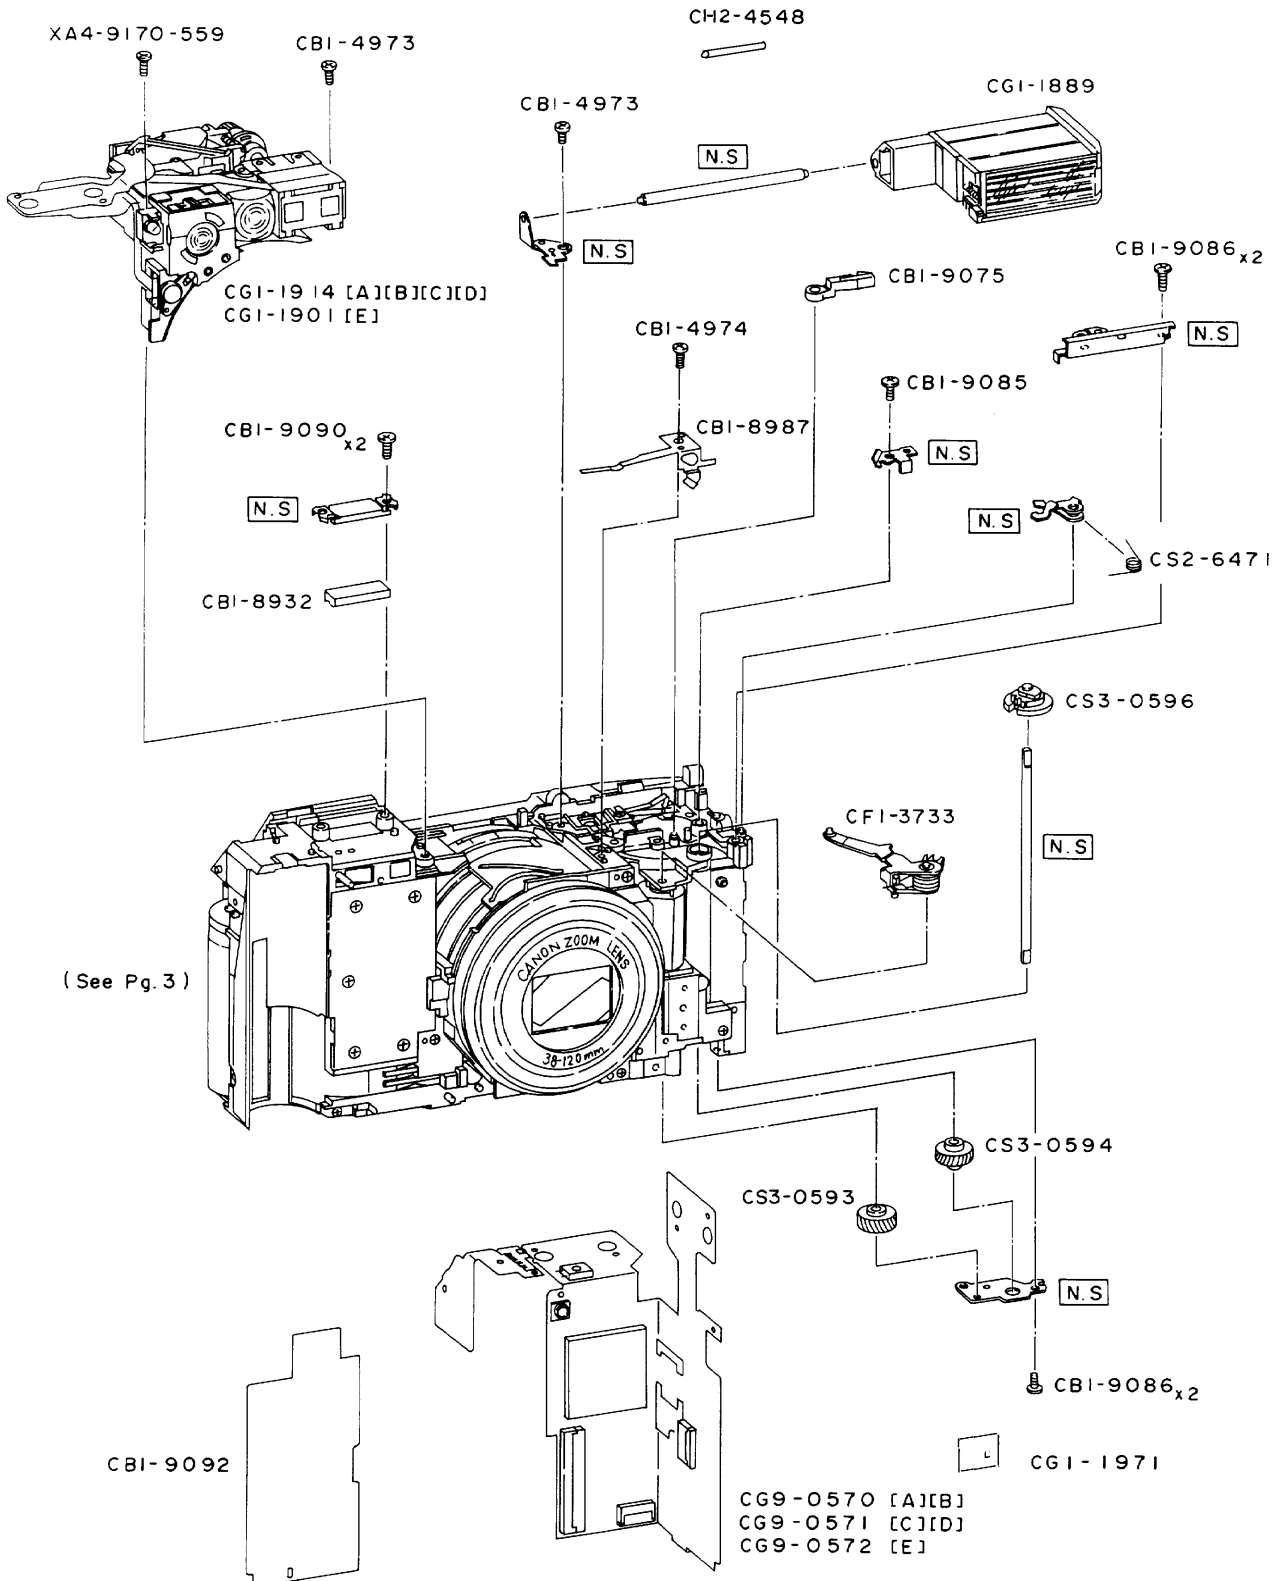


PARTS LIST

REF.NO.C13-3832[A],42[C]
 C13-3833[B],43[D]
 C13-3851[E]

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-4973-000	F	2	SCREW
	CB1-4974-000	F	1	SCREW
*	CB1-8932-000	E	1	RUBBER, CONNECTOR
*	CB1-8987-000	D	1	SPRING, FINDER CAM
*	CB1-9075-000	D	1	LEVER2, FLASH ZOOM
*	CB1-9085-000	F	1	SCREW
*	CB1-9086-000	F	4	SCREW
*	CB1-9090-000	F	2	SCREW
*	CB1-9092-000	E	1	SHEET,MAIN FPC
*	CF1-3733-000	D	1	DRIVE ASS`Y, FLASH
*	CG1-1889-000	C	1	FLASH ASS`Y
*	CG1-1901-000	C	1	FINDER ASS`Y (PANORAMA)
*	CG1-1914-000	C	1	FINDER ASS`Y (NORMAL)
*	CG1-1971-000	D	1	RESET FPC ASS`Y
*	CG9-0570-000	C	1	MAIN FPC ASS`Y(NON QD)
*	CG9-0571-000	C	1	MAIN FPC ASS`Y(QD)
*	CG9-0572-000	C	1	MAIN FPC ASS`Y(PANORAMA)
*	CH2-4548-000	D	2	TUBE, LAMP
*	CS2-6471-000	D	1	SPRING, ZOOM LEVER
*	CS3-0593-000	D	1	GEAR, FLASH DRIVE 2
*	CS3-0594-000	D	1	GEAR, FLASH DRIVE 3
*	CS3-0596-000	D	1	GEAR,FLASH DRIVE CAM
	XA4-9170-559	F	1	SCREW

CANON [A]SURE SHOT CLASSIC 120
 [B]PRIMA SUPER 120
 [C]SURE SHOT CLASSIC 120 CAPTION
 [D]PRIMA SUPER 120 CAPTION
 [E]AUTOBOY 120


REF. NO. CI3-3832
 CI3-3833
 CI3-3842
 CI3-3843
 CI3-3851

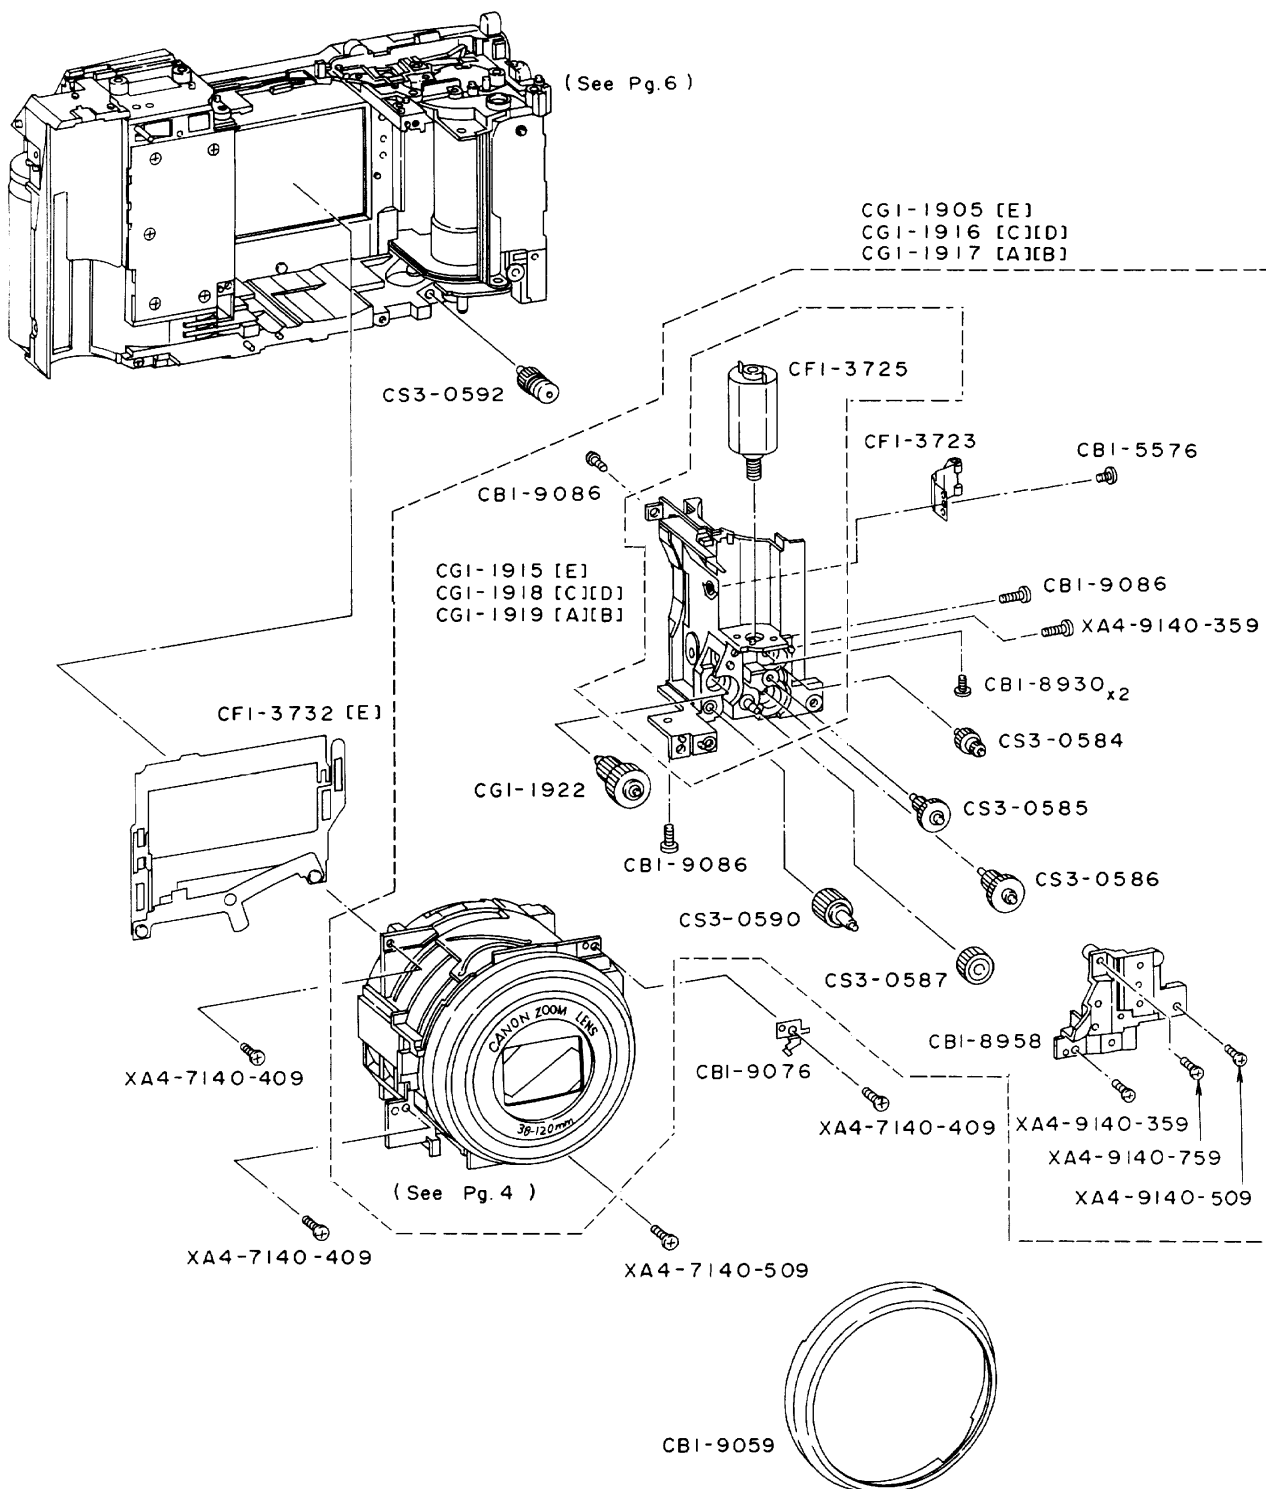

PARTS LIST

REF.NO.C13-3832[A],42[C]
 C13-3833[B],43[D]
 C13-3851[E]

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
*	CB1-5576-000	F	1	SCREW
*	CB1-8930-000	F	2	SCREW
*	CB1-8958-000	E	1	COVER, ZOOM GEAR
*	CB1-9059-000	C	1	RING, FIX BARREL
*	CB1-9076-000	E	1	CONTACT, GND
*	CB1-9086-000	F	3	SCREW
*	CF1-3723-000	D	1	ROLLER ASS`Y, BODY
*	CF1-3725-000	D	1	MOTOR ASS`Y, ZOOM
*	CF1-3732-000	D	1	WING ASS`Y, PANORAMA
*	CG1-1905-000	C	1	LENS BARREL ASS`Y (PANORAMA)
*	CG1-1915-000	D	1	GUIDE ASS`Y, AL (PANORAMA)
*	CG1-1916-000	C	1	LENS BARREL ASS`Y (QD)
*	CG1-1917-000	C	1	LENS BARREL ASS`Y (NON QD)
*	CG1-1918-000	D	1	GUIDE ASS`Y, AL(QD)
*	CG1-1919-000	D	1	GUIDE ASS`Y, AL(NON QD)
*	CG1-1922-000	D	1	GEAR 5 ASS`Y, ZOOM
*	CS3-0584-000	D	1	GEAR 1, ZOOM
*	CS3-0585-000	D	1	GEAR 2, ZOOM
*	CS3-0586-000	D	1	GEAR 3, ZOOM
*	CS3-0587-000	D	1	GEAR 4, ZOOM
*	CS3-0590-000	D	1	GEAR 6, ZOOM
*	CS3-0592-000	D	1	GEAR, FLASH DRIVE 1
	XA4-7140-409	F	3	SCREW
	XA4-7140-509	F	1	SCREW
	XA4-9140-359	F	2	SCREW
	XA4-9140-509	F	1	SCREW
	XA4-9140-759	F	1	SCREW

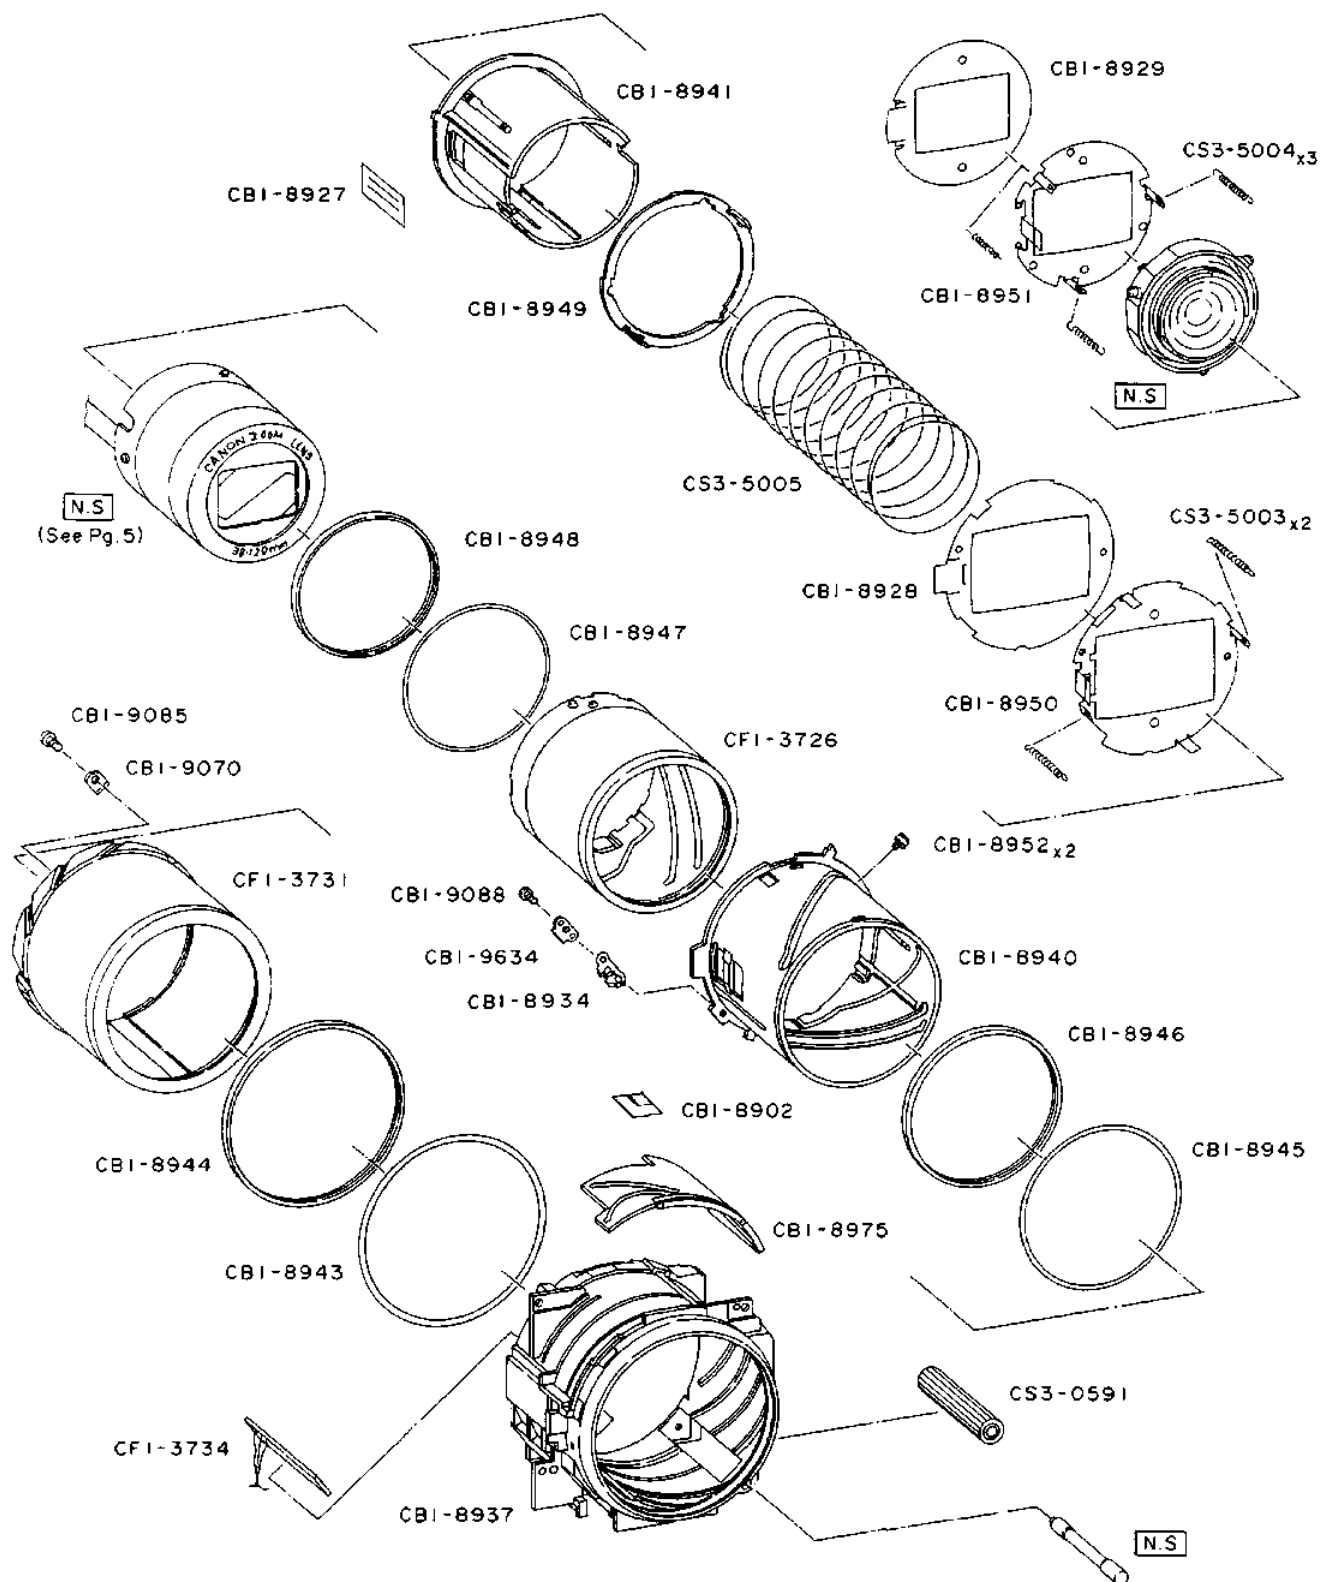


PARTS LIST

REF.NO.C13-3832[A],42[C]
 C13-3833[B],43[D]
 C13-3851[E]

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
*	CB1-8902-000	D	1	SHIELD, LIGHT
*	CB1-8927-000	D	1	SHIELD, LIGHT
*	CB1-8928-000	E	1	PLATE, 1ST SHEET
*	CB1-8929-000	E	1	PLATE, 2ND SHEET
*	CB1-8934-000	C	1	BRUSH, ZOOM
*	CB1-8937-000	E	1	BARREL, FIX
*	CB1-8940-000	E	1	BARREL, GUIDE 1
*	CB1-8941-000	E	1	BARREL, GUIDE 2
*	CB1-8943-000	E	1	RING, LIGHT SHIELD
*	CB1-8944-000	E	1	RUBBER, LIGHT SHIELD
*	CB1-8945-000	E	1	RING, LIGHT SHIELD 1
*	CB1-8946-000	E	1	RUBBER, LIGHT SHIELD 1
*	CB1-8947-000	E	1	RING, LIGHT SHIELD 2
*	CB1-8948-000	D	1	RUBBER, LIGHT SHIELD 2
*	CB1-8949-000	D	1	RING, BARREL NUT
*	CB1-8950-000	E	1	PLATE, MOVING APERTURE 1
*	CB1-8951-000	E	1	PLATE, MOVING APERTURE 2
*	CB1-8952-000	E	2	PIN, DRIVE 2
*	CB1-8975-000	E	1	PLATE, FINDER CAM
*	CB1-9070-000	D	1	PLATE, STOP
*	CB1-9085-000	F	1	SCREW
*	CB1-9088-000	F	1	SCREW
*	CB1-9634-000	E	1	SHEET, BRUSH
*	CF1-3726-000	C	1	BARREL ASS'Y, 2nd CAM
*	CF1-3731-000	C	1	BARREL ASS'Y, 1st CAM
*	CF1-3734-000	D	1	PLATE, ZOOM POSITION
*	CS3-0591-000	D	1	GEAR, ZOOM DRIVE
*	CS3-5003-000	C	2	SPRING, MOVING APERTURE 1
*	CS3-5004-000	C	3	SPRING, MOVING APERTURE 2
*	CS3-5005-000	E	1	SPRING, LENS HOLD

CANON [A]SURE SHOT CLASSIC 120
[B]PRIMA SUPER 120
[C]SURE SHOT CLASSIC 120 CAPTION
[D]PRIMA SUPER 120 CAPTION
[E]AUTOBOY 120

REF. NO. C13-3832
C13-3833
C13-3842
C13-3843
C13-3851

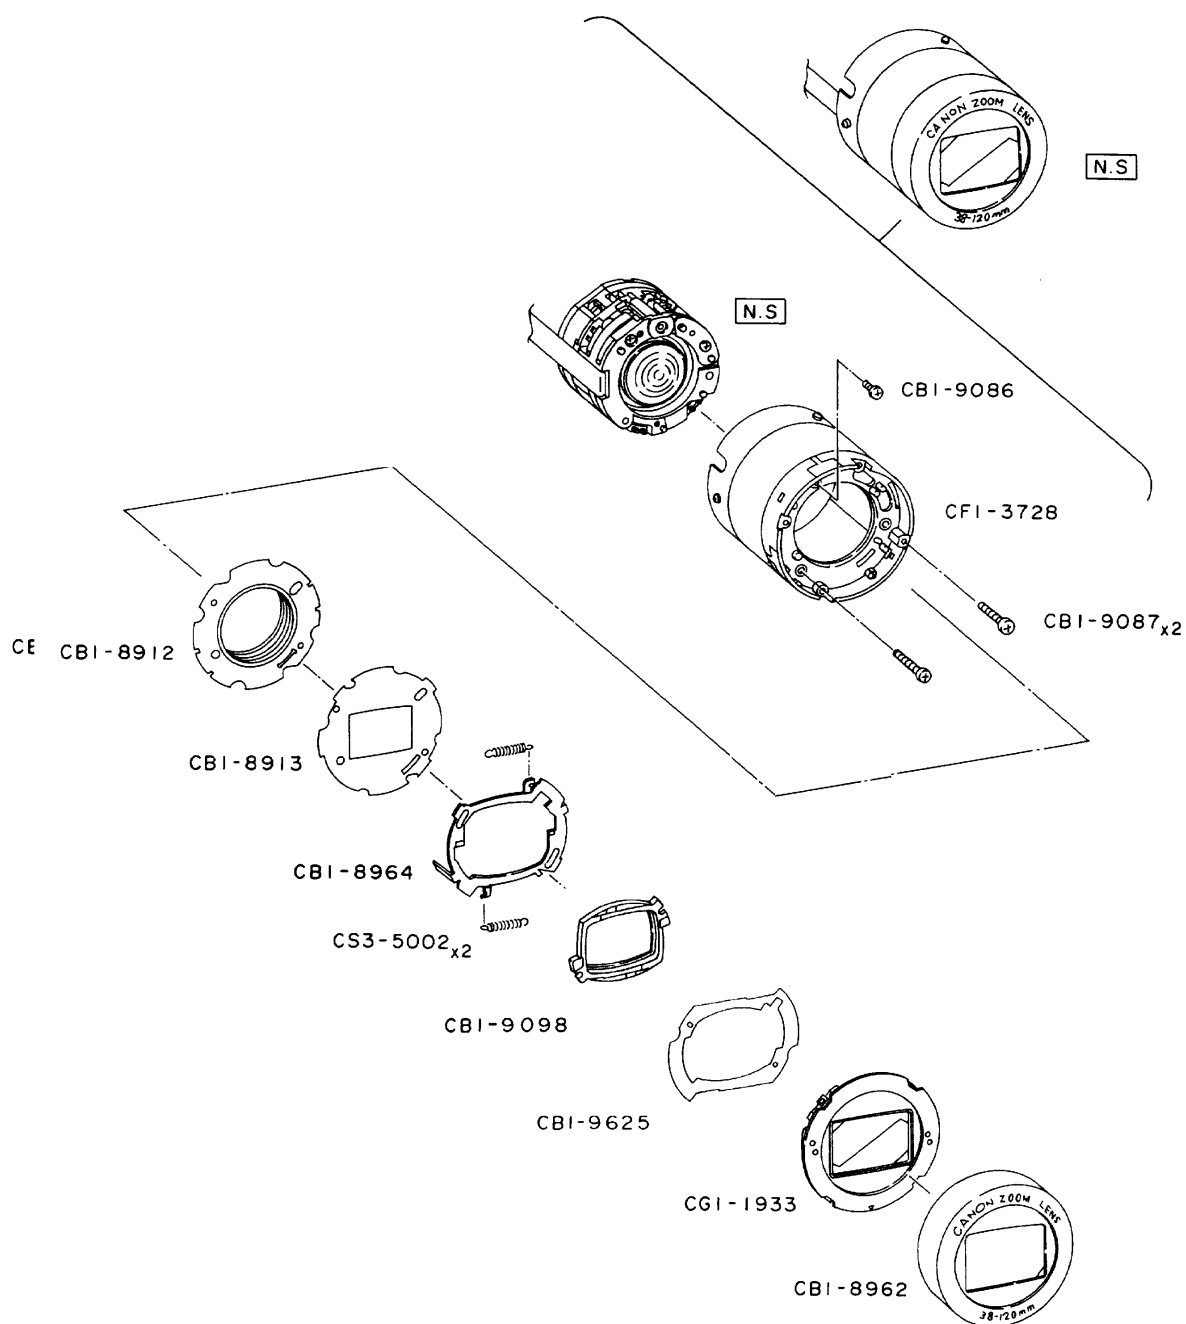

PARTS LIST

REF.NO.C13-3832[A],42[C]

C13-3833[B],43[D]

C13-3851[E]

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
*	CB1-8912-000	E	1	RUBBER, LIGHT SHIELD
*	CB1-8913-000	E	1	PLATE, MASK
*	CB1-8962-000	C	1	COVER, 1ST BARREL
*	CB1-8964-000	E	1	LEVER, BARRIER
*	CB1-9086-000	F	1	SCREW
*	CB1-9087-000	F	2	SCREW
*	CB1-9098-000	C	1	RING, BARRIER
*	CB1-9625-000	D	1	LIGHT, SHIELD
*	CF1-3728-000	C	1	BARREL ASS`Y, 1ST LENS
*	CG1-1933-000	C	1	BARRIER ASS`Y
*	CS3-5002-000	D	2	SPRING, BARRIER OPEN

PARTS LIST

REF.NO.C13-3832[A],42[C]


C13-3833[B],43[D]

C13-3851[E]

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-3499-000	E	1	HOLDER, CARTRIDGE
	CB1-6967-000	D	1	STICKER, FILM
*	CB1-9002-000	D	1	CONTACT1, FLASH
*	CB1-9003-000	D	1	CONTACT2, FLASH
*	CB1-9004-000	E	1	SPACER, FLASH CONTACT
*	CB1-9061-000	E	1	COVER, SPOOL
*	CB1-9065-000	D	1	LIGHT, SHIELD
*	CB1-9073-000	F	1	WASHER(NON QD)
*	CB1-9086-000	F	1	SCREW
*	CB1-9095-000	D	1	TAPE, LIGHT SHIELD
*	CB1-9609-000	D	1	SHIELD, LIGHT
*	CB1-9613-000	D	1	SHIELD, LIGHT
*	CB1-9614-000	D	1	SHIELD, LIGHT
*	CG1-1887-000	C	1	FPC ASS'Y, LED
*	CH1-1527-000	D	1	FPC, FLASH SWITCH
*	CH6-3066-000	D	1	AL-EL CAPACITOR, MAIN
	XA4-7140-207	F	1	SCREW

CANON [A]SURE SHOT CLASSIC 120
 [B]PRIMA SUPER 120
 [C]SURE SHOT CLASSIC 120 CAPTION
 [D]PRIMA SUPER 120 CAPTION
 [E]AUTOBOY 120

REF. NO. C13-3832
 C13-3833
 C13-3842
 C13-3843
 C13-3851

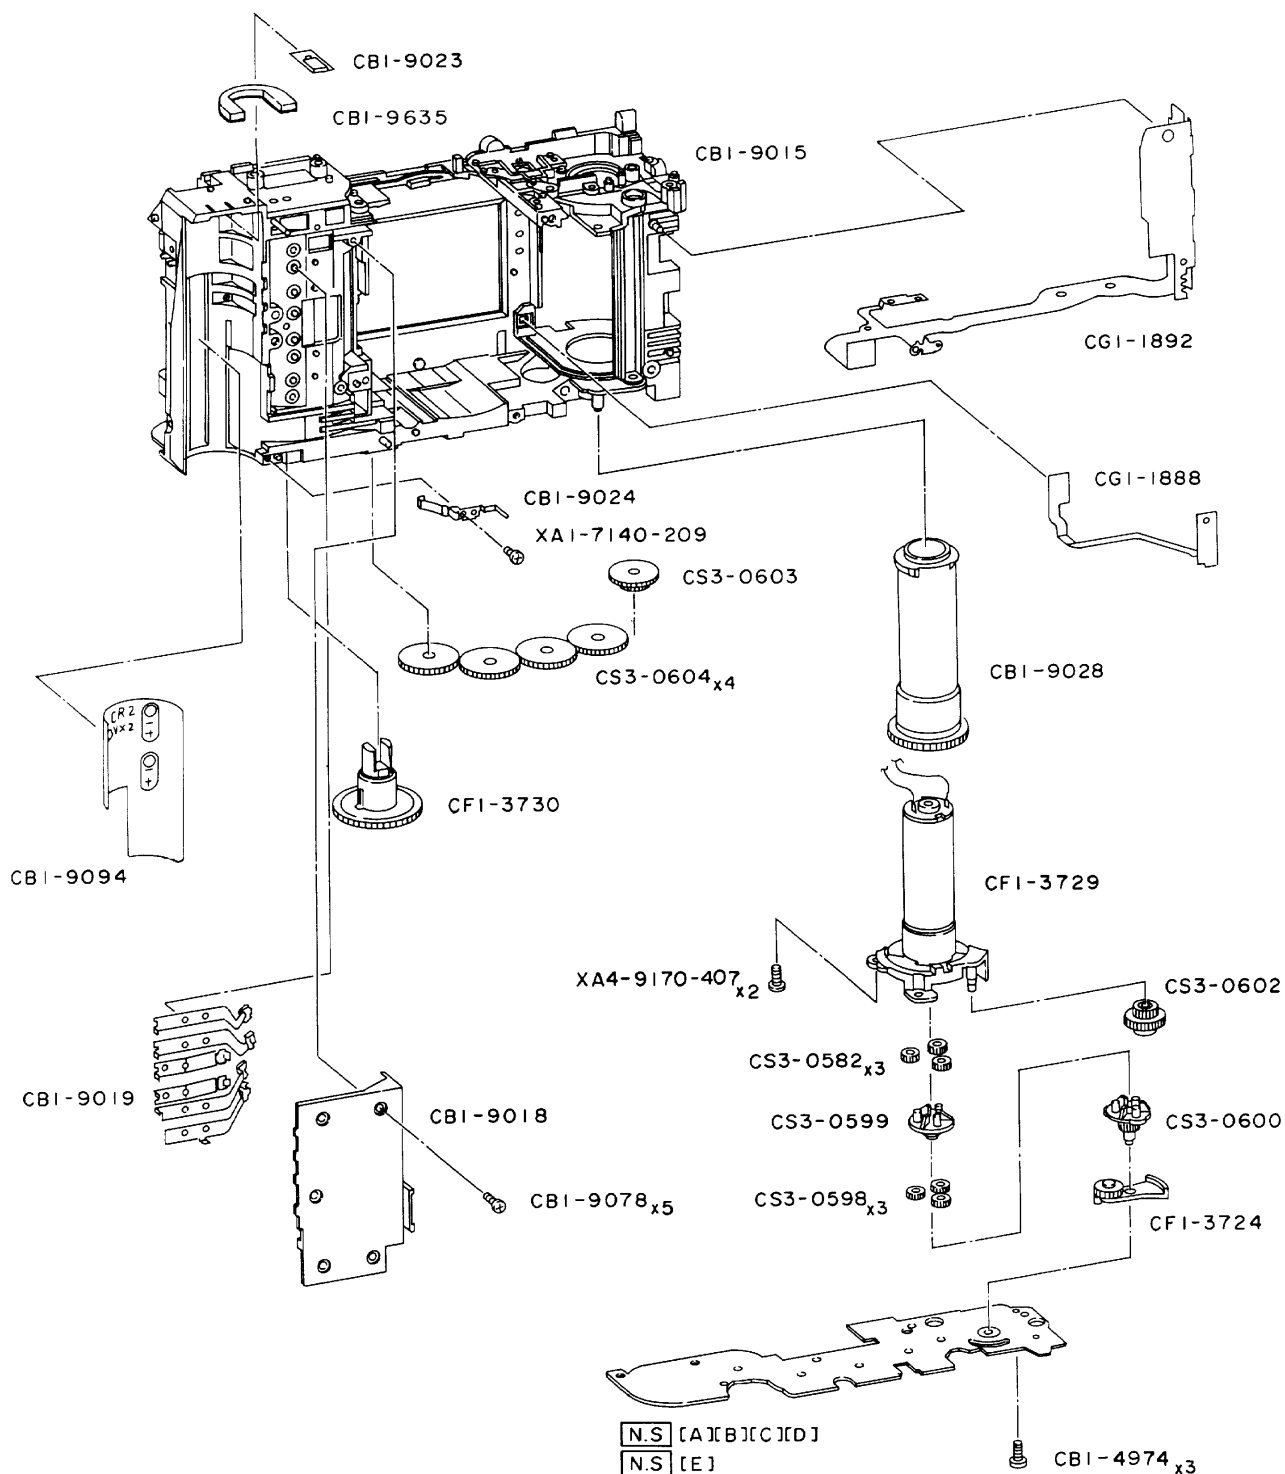

PARTS LIST

REF.NO.C13-3832[A],42[C]


C13-3833[B],43[D]

C13-3851[E]

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-4974-000	F	3	SCREW
*	CB1-9015-000	E	1	BODY, MAIN
*	CB1-9018-000	E	1	COVER, DX CONTACT
*	CB1-9019-000	D	1	CONTACT,DX
*	CB1-9023-000	D	1	CONTACT, BATTERY (+)
*	CB1-9024-000	D	1	CONTACT, BATTERY (-)
*	CB1-9028-000	E	1	GEAR, SPOOL
*	CB1-9078-000	F	5	SCREW
*	CB1-9094-000	D	1	BATTERY MARK
*	CB1-9635-000	D	1	SPACER, BATTERY CONTACT
*	CF1-3724-000	D	1	GEAR ASS'Y, PLANET ARM
*	CF1-3729-000	D	1	MOTOR ASS'Y, FILM
*	CF1-3730-000	D	1	GEAR ASS'Y, FORK
*	CG1-1888-000	C	1	FPC ASS'Y, PR
*	CG1-1892-000	D	1	FPC ASS'Y, FLASH1
*	CS3-0582-000	D	3	GEAR 3, PLANET
*	CS3-0598-000	D	3	GEAR 1, PLANET
*	CS3-0599-000	E	1	HOLDER, PLANET GEAR 3
*	CS3-0600-000	E	1	HOLDER, PLANET GEAR 1
*	CS3-0602-000	D	1	GEAR, WINDING
*	CS3-0603-000	D	1	GEAR 1, REWIND
*	CS3-0604-000	D	4	GEAR 2, REWIND
	XA1-7140-209	F	1	SCREW
	XA4-9170-407	F	2	SCREW

CANON [A]SURE SHOT CLASSIC 120
 [B]PRIMA SUPER 120
 [C]SURE SHOT CLASSIC 120 CAPTION
 [D]PRIMA SUPER 120 CAPTION
 [E]AUTOBOY 120

REF. NO. C13-3832
 C13-3833
 C13-3842
 C13-3843
 C13-3851

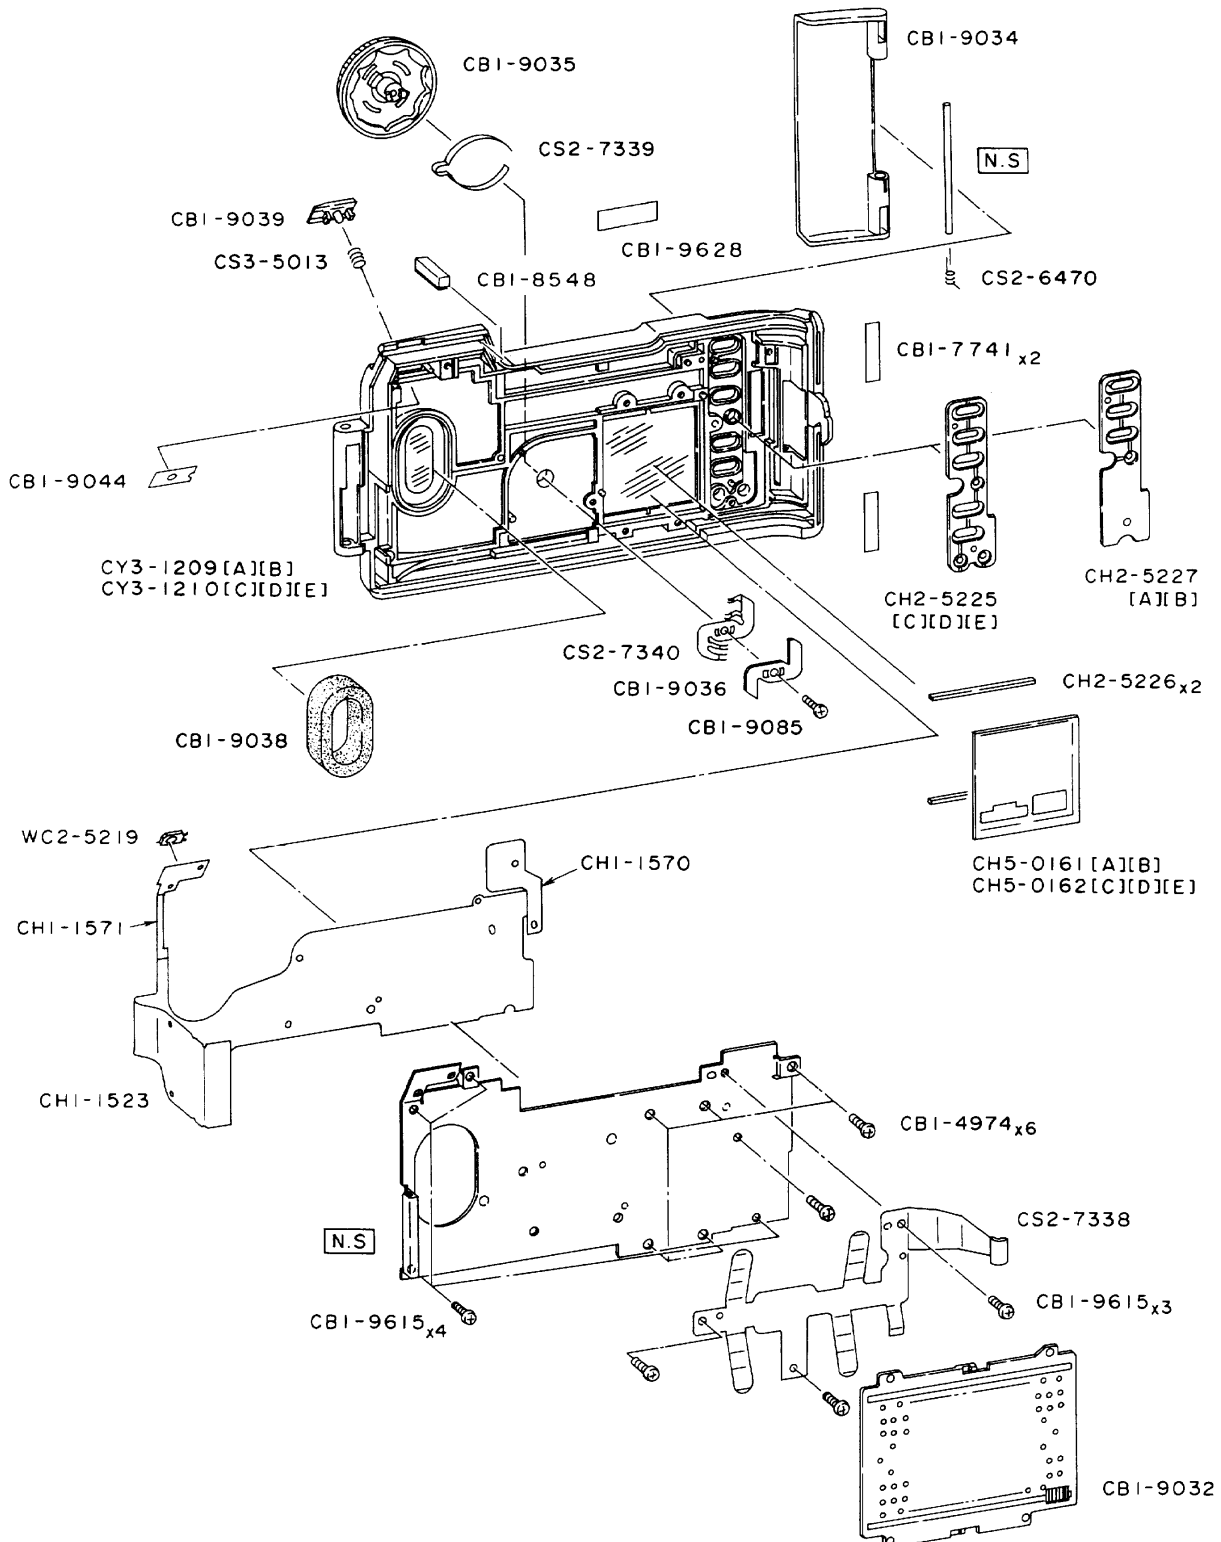

PARTS LIST

REF.NO.C13-3832[A],42[C]
C13-3833[B],43[D]
C13-3851[E]

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-4974-000	F	6	SCREW
*	CB1-7741-000	D	2	SHIELD, LIGHT
	CB1-8548-000	E	1	SHIELD, LIGHT
*	CB1-9032-000	D	1	PLATE, PRESSURE
*	CB1-9034-000	C	1	COVER, BUTTON
*	CB1-9035-000	C	1	DIAL, MODE
*	CB1-9036-000	C	1	PLATE, MODE
*	CB1-9038-000	D	1	SHIELD, LIGHT
*	CB1-9039-000	C	1	BUTTON, ZOOM WIDE
*	CB1-9044-000	D	1	SHIELD, LIGHT
*	CB1-9085-000	F	1	SCREW
*	CB1-9615-000	F	7	SCREW
*	CB1-9628-000	D	1	SHIELD, LIGHT
*	CH1-1523-000	D	1	FPC, LCD
*	CH1-1570-000	D	1	FPC, BUTTON
*	CH1-1571-000	D	1	FPC, WIDE SWITCH
*	CH2-5225-000	C	1	BUTTON, MODE(QD)
*	CH2-5226-000	D	2	RUBBER, CONDUCTIVE
*	CH2-5227-000	C	1	BUTTON, MODE(NON QD)
*	CH5-0161-000	C	1	LCD (NON QD)
*	CH5-0162-000	C	1	LCD (QD)
*	CS2-6470-000	D	1	SPRING, BUTTON COVER
*	CS2-7338-000	D	1	SPRING, PRESSURE PLATE
*	CS2-7339-000	D	1	SPRING, MODE DIAL
*	CS2-7340-000	D	1	CONTACT, MODE DIAL
*	CS3-5013-000	D	1	SPRING, ZOOM BUTTON
*	CY3-1209-000	C	1	COVER ASS`Y, BACK(NON QD)
*	CY3-1210-000	C	1	COVER ASS`Y, BACK(QD)
	WC2-5219-000	C	1	SWITCH

ELECTRIC PARTS LIST

REF.NO.C13-3832[A],33[C]

C13-3842[B],43[D]

C13-3851[E]

NEW	SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARK
		Y11-3702			LEAD	BLACK
		Y11-3703			LEAD	RED
		Y11-3707			LEAD	YELLOW
		Y11-3712			LEAD	PURPLE
		Y11-3713			LEAD	BROWN
		Y11-3714			LEAD	GRAY
		Y11-3902			LEAD	BLACK
		Y11-3913			LEAD	BROWN
		Y11-3914			LEAD	GRAY
		Y11-4402			LEAD	BLACK
		Y11-4403			LEAD	RED
		Y11-4411			LEAD	BLUE
		Y11-4413			LEAD	BROWN