Canon SERVICE INFORMATION

MODEL: **PowerShot S20** No. : ZSIP-A008E

SUBJECT : Parts List (Camera body)

CONTENTS :

Parts List of the PowerShot S20 is attached herewith.

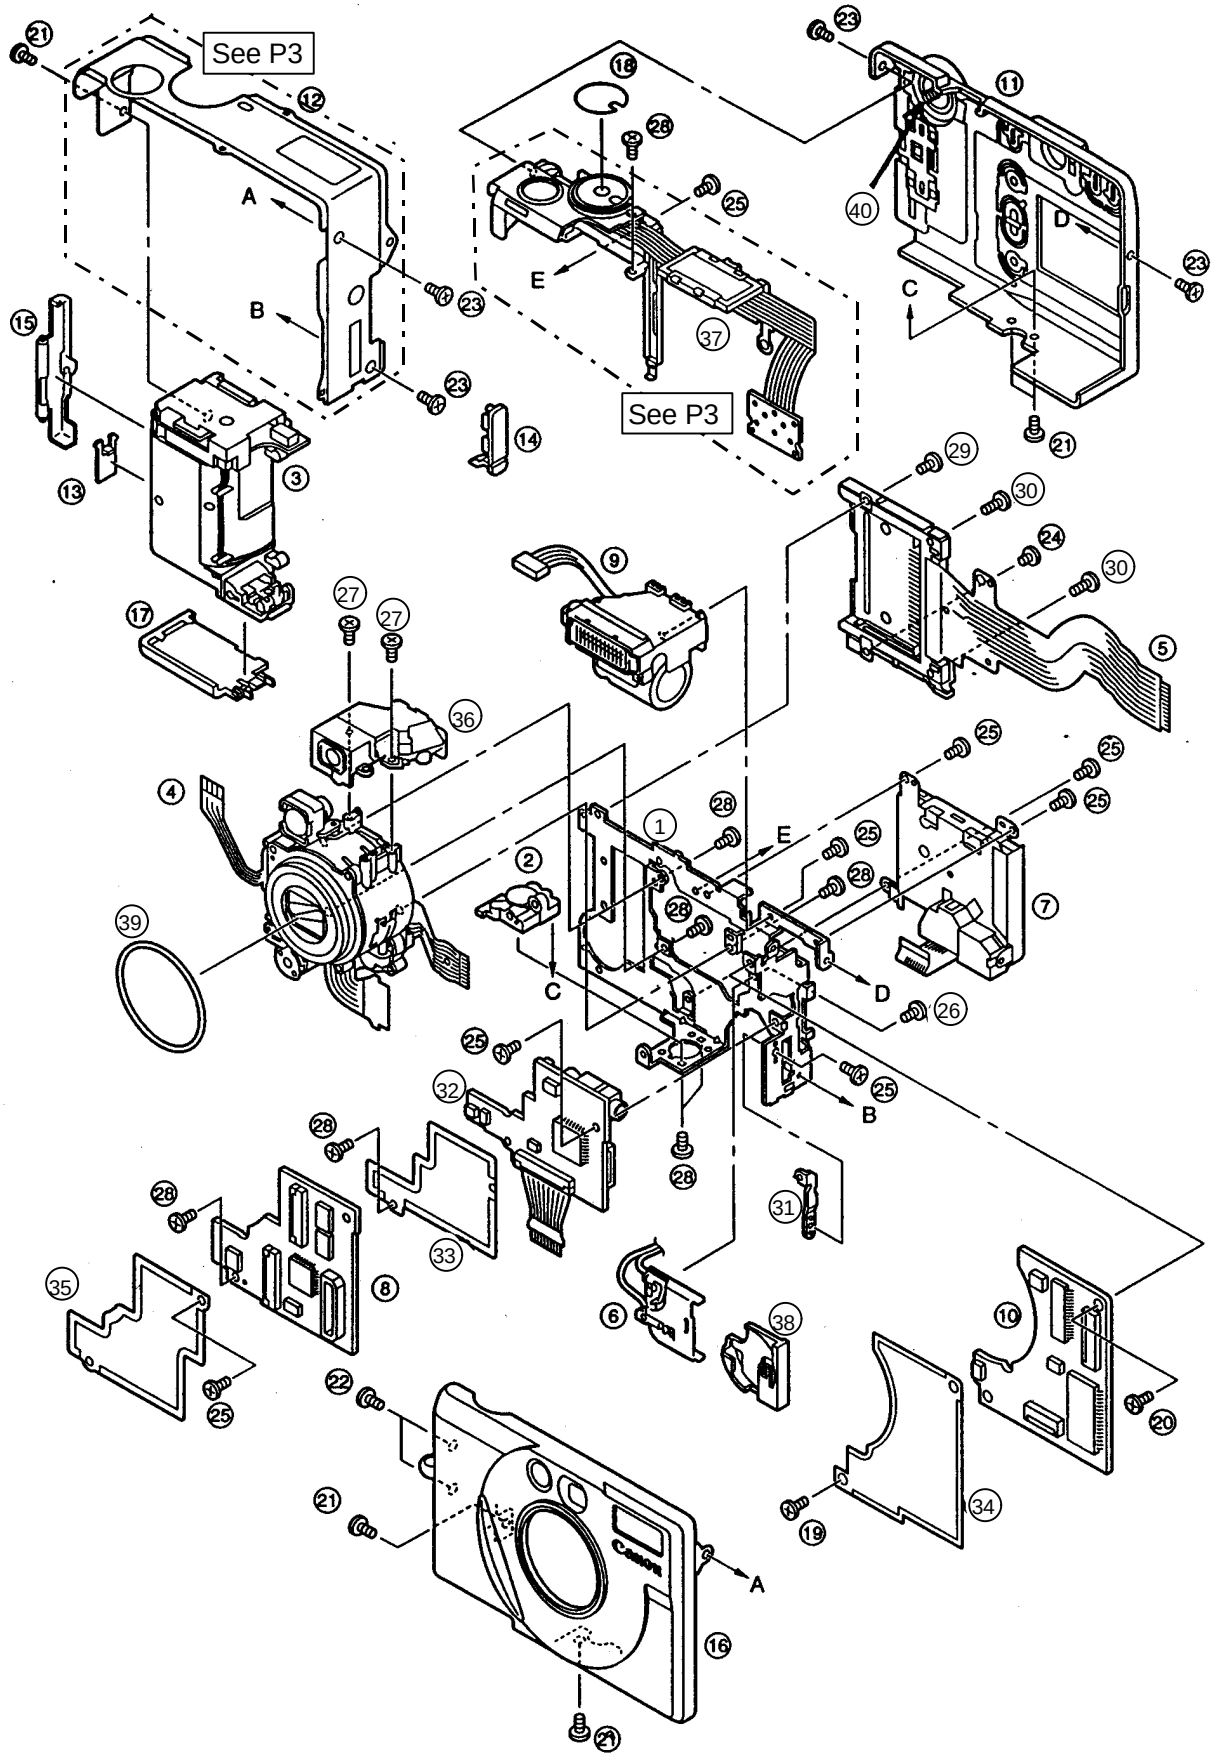
See P3
See P3
A
B
C
D
E
Canon

Parts List (PowerShot S20)

SYMBOL	PARTS NO.	CLASS	Q'TY	DESCRIPTION	REMARKS
1	FC3-0074-000	H	1	FRAME, MAIN	
2	FC3-0075-000	H	1	SOCKET, TRIPOD	
3	FG3-0559-000	K	1	BATTERY BOX UNIT	
4	CM1-1034-000	K	1	OPTICAL UNIT	NEW
5	FG3-0561-000	M	1	CF UNIT	
6	FG3-0562-000	K	1	HOLDER UNIT, LI BATTERY	
7	CY4-6038-000	K	1	LCD UNIT	NEW
8	CM1-1031-000	M	1	PCB ASS'Y, IMAGE PROCESS	NEW
9	FG3-0566-000	K	1	FLASH UNIT	
10	CM1-1032-000	M	1	PCB ASS'Y, MAIN	NEW
11	CM1-1039-000	K	1	REAR COVER UNIT	NEW
12	CM1-1042-000	K	1	TOP COVER	NEW
13	FC3-0109-000	F	1	COVER, DC COUPLER	
14	FC3-0103-000	F	1	COVER, INTERFACE	
15	CD1-3132-000	F	1	COVER, CF	NEW
16	CM1-1040-000	K	1	FRONT COVER UNIT	NEW
17	CD1-3131-000	F	1	COVER, BATTERY	NEW
18	CD1-3147-000	H	1	PLATE, DIAL	NEW
19	FC2-8736-000	G	1	SCREW	
20	FC3-0118-000	G	1	SCREW	
21	FC3-0137-000	G	5	SCREW	
22	FC3-0140-000	G	2	SCREW	
23	FC3-0143-000	G	4	SCREW	
24	XA1-7170-167	G	1	SCREW	
25	XA1-7170-307	G	8	SCREW	
26	XA4-5170-307	G	1	SCREW	
27	XA4-9140-357	G	2	SCREW	
28	XA4-9170-307	G	8	SCREW	
29	XA4-9170-409	G	1	SCREW	
30	XA4-9170-607	G	2	SCREW	
31	FC3-0116-000	H	1	PLATE, IMAGE PROCESS	
32	CY4-6036-000	M	1	PCB ASS'Y, LJ	
33	FC3-0138-000	H	1	SHEET, SHEILD, LJ	
34	FC3-0110-000	H	1	SHEET, SHEILD, MAIN	
35	FC3-0139-000	H	1	SHEET, SHEILD, IMAGE PROCESS	
36	CM1-1036-000	K	1	FINDER UNIT	NEW
37	CM1-1038-000	K	1	RELEASE BASE UNIT	NEW
38	FC3-0093-000	H	1	HOLDER, LITHIUM BATTERY	
39	FC3-0178-000	H	1	SHEET, LENS BARREL	
40	FS4-2698-000	C	1	SPRING, OMNI SELECTOR	

RELEASE BASE UNIT (CM1-1038-000)

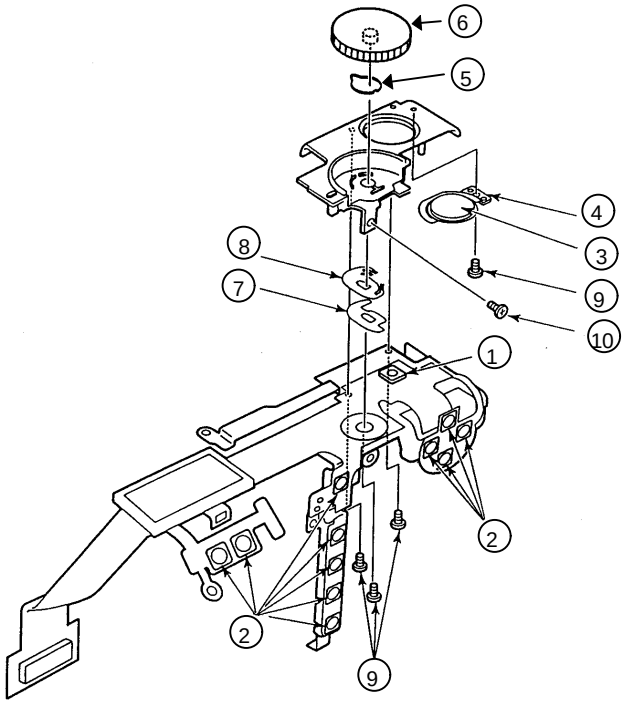

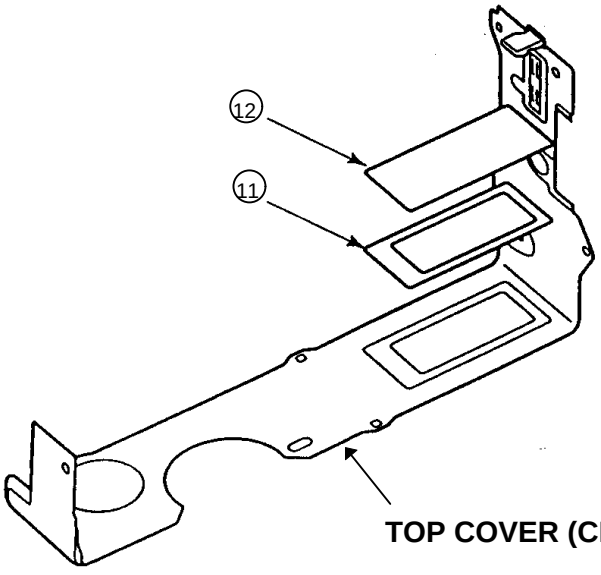

TOP COVER (CM1-1042-000)

Parts List (PowerShot S20)

SYMBOL	PARTS NO.	CLASS	Q'TY	DESCRIPTION	REMARKS
1	WC2-5309-000	D	1	SWITCH, RELASE	
2	WC2-5319-000	D	11	SWITCH, OPERATION BUTTONS	
3	CB1-5562-000	J	1	TOP, RELEASE	
4	FC3-0123-000	H	1	BUTTON, RELEASE	
5	FC2-8744-000	C	1	SPRING, DIAL	
6	CD1-3146-000	H	1	DIAL, MODE	
7	FC2-9371-000	H	1	SPACER, MODE	
8	CB1-4573-000	C	1	BRUSH, MODE	
9	XA4-9170-359	G	4	SCREW	
10	XA1-7170-257	G	1	SCREW	
11	FC3-0124-000	Y	1	ADHESIVE SHEET, LCD WINDOW	
12	FC3-0117-000	F	1	WINDOW, LCD	