
FEBRUARY 1974

Parts List No. 775410

KODAK CAROUSEL Slide Projector, Models 760, 760H, 850, 850H, 860, and 860H
KODAK CAROUSEL Projector Case, Model B

This parts list supercedes Parts List No. 775031, and Parts List Supplement No. 775031-1

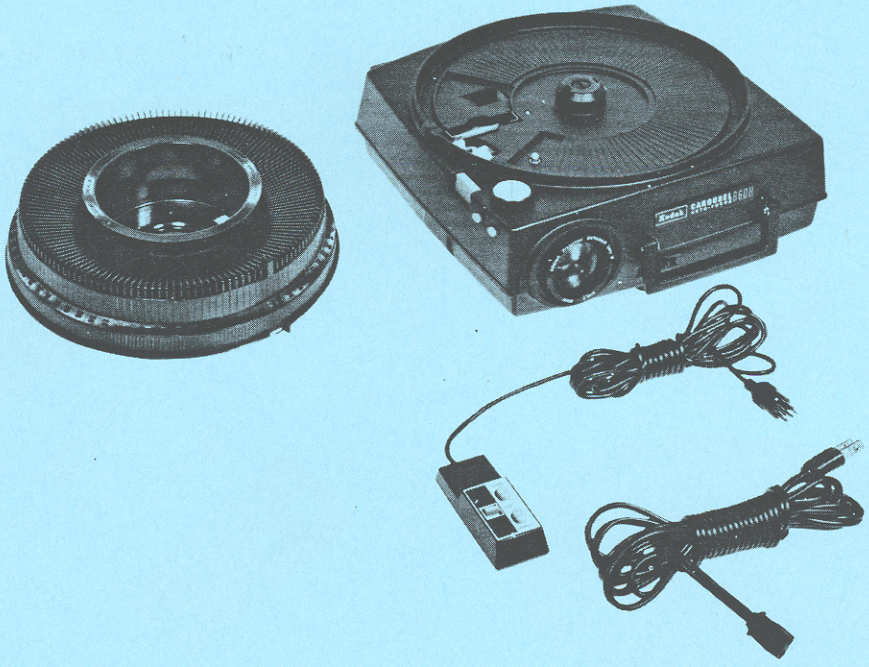

Order parts from / ***Eastman Kodak Company, Central Parts Service***
800 Lee Road, Rochester, New York 14650
Order by PART NUMBER

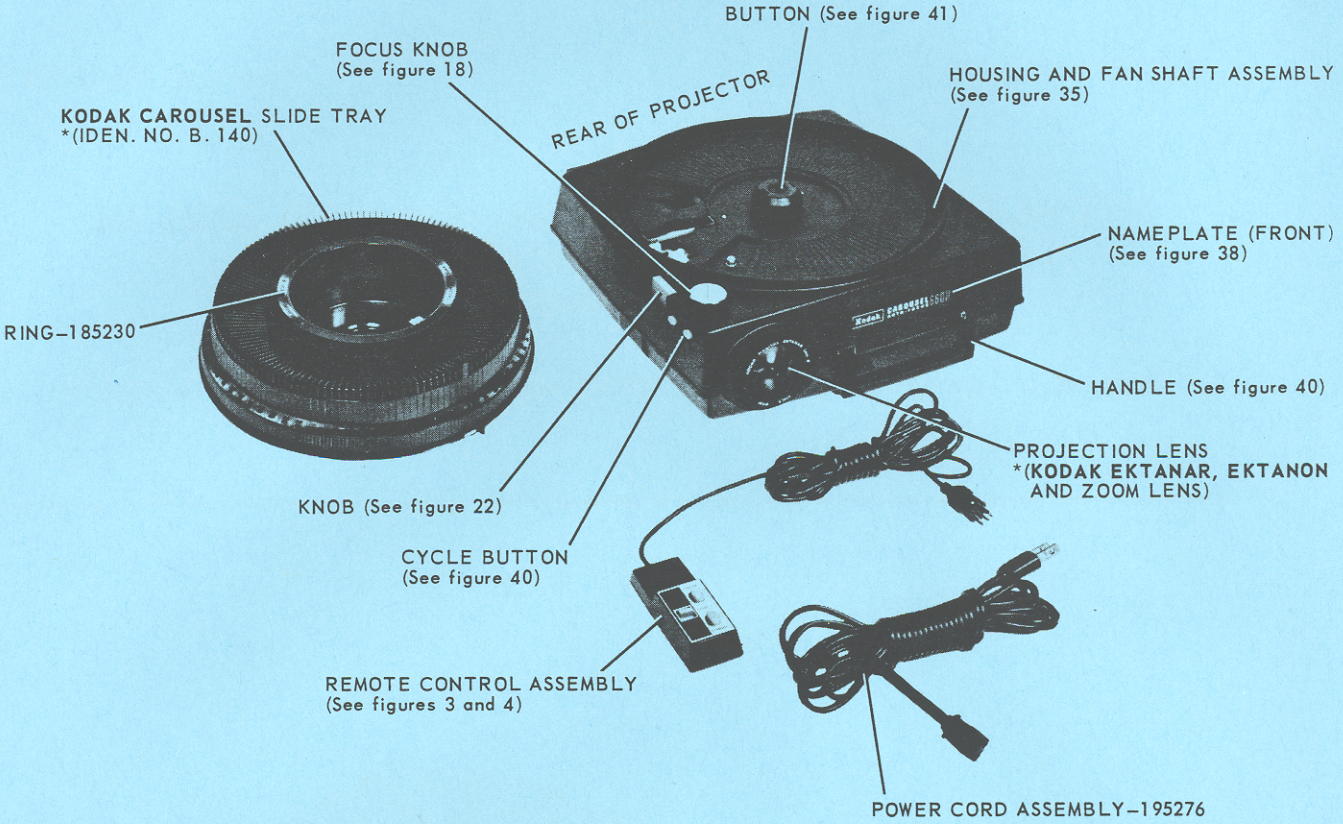


FIGURE 1 *Listed in KODAK Price Catalog

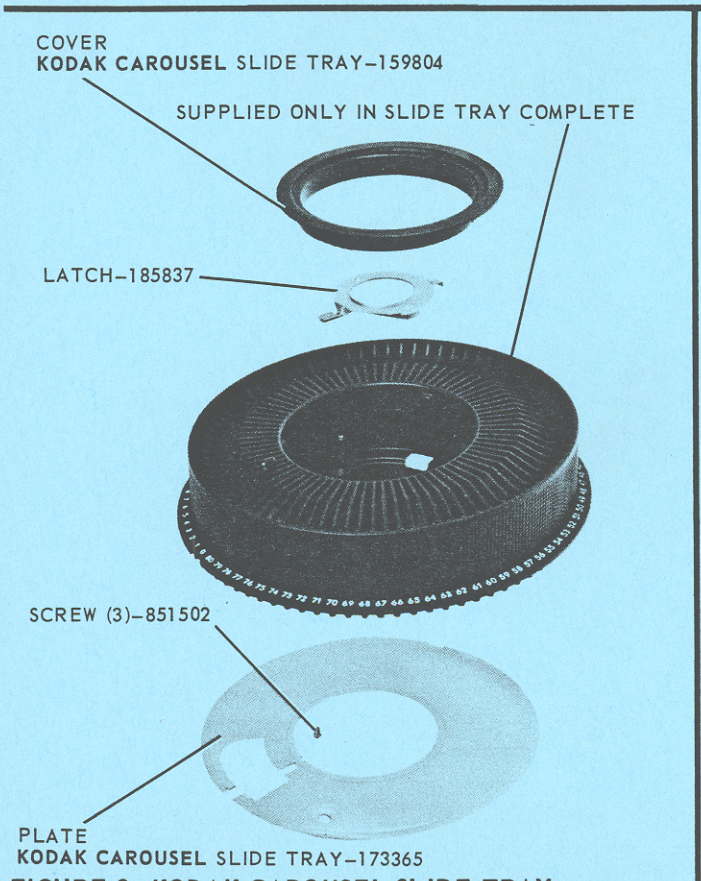


FIGURE 2 *KODAK CAROUSEL* SLIDE TRAY (Iden. No. 581) Listed in KODAK Price Catalog

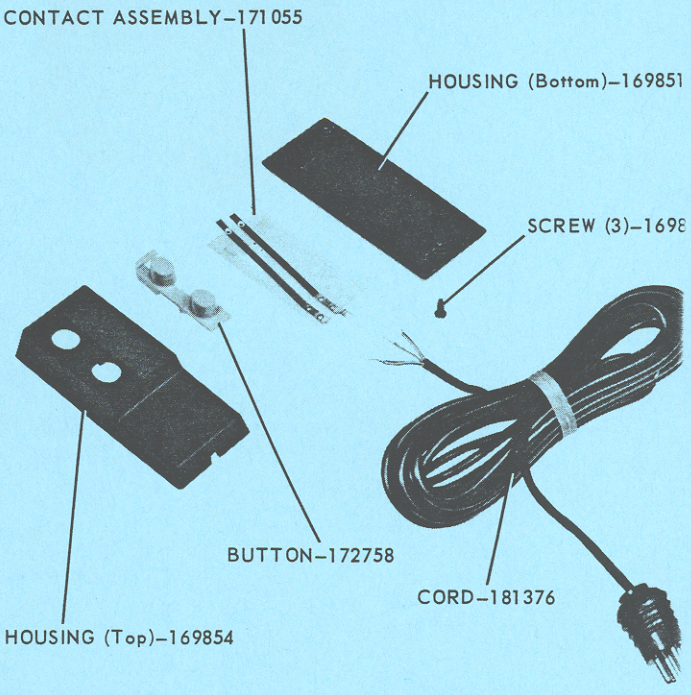


FIGURE 3 REMOTE CONTROL ASSEMBLY–171054 MODELS 760, 760H, 850, AND 850H

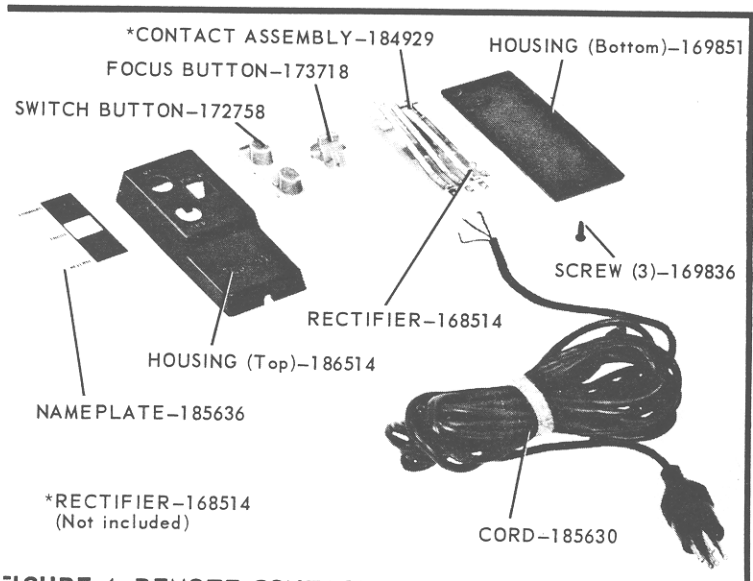


FIGURE 4 REMOTE CONTROL ASSEMBLY–184927
MODELS 860 AND 860H

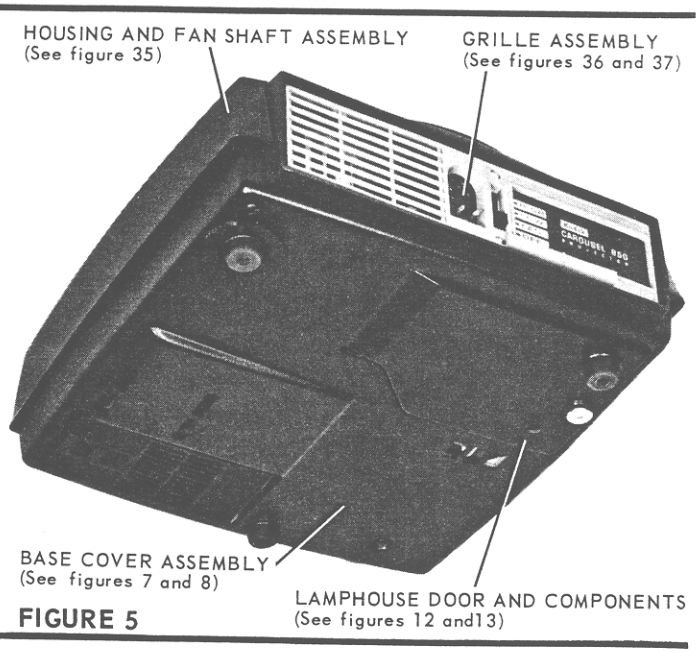


FIGURE 5

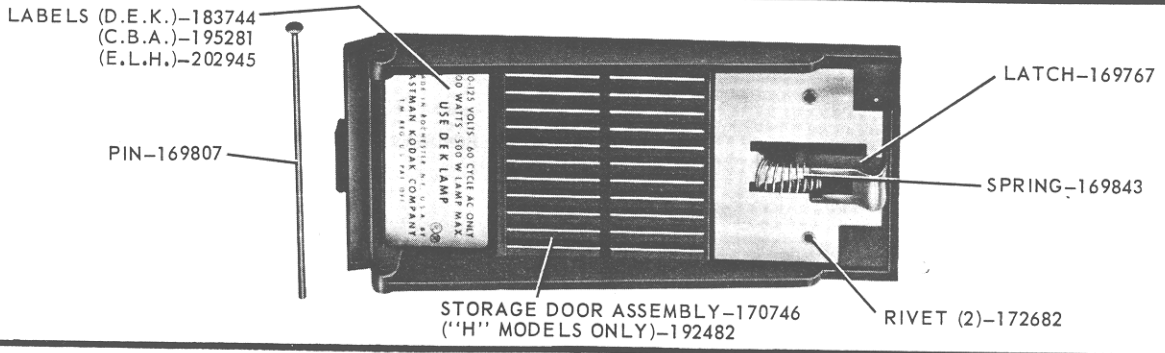


FIGURE 6

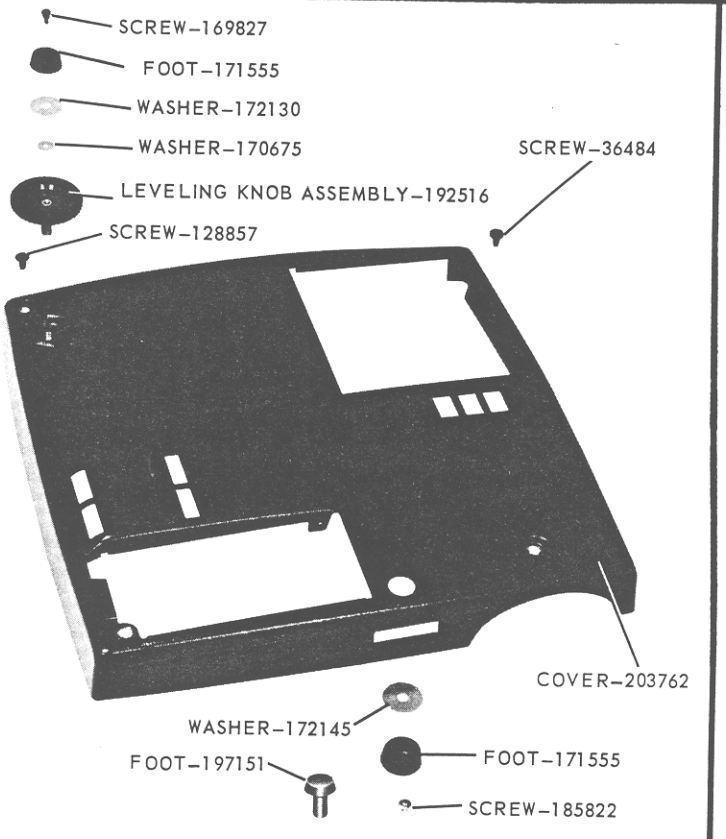


FIGURE 7 MODELS 760, 850 AND 860 ONLY

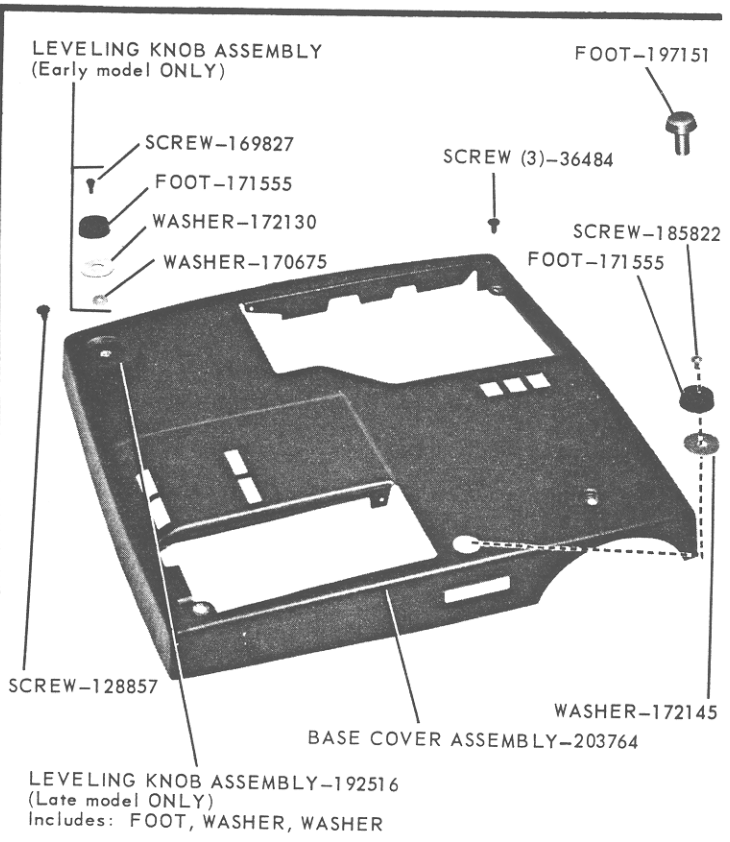


FIGURE 8 MODELS 760H, 850H, AND 860H



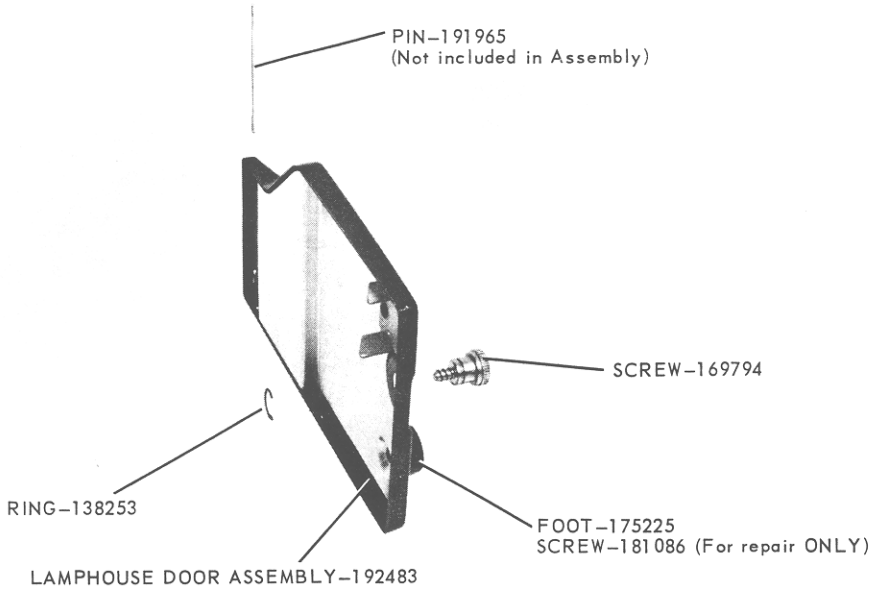


FIGURE 9 LAMPHOUSE DOOR ASSEMBLY–192483

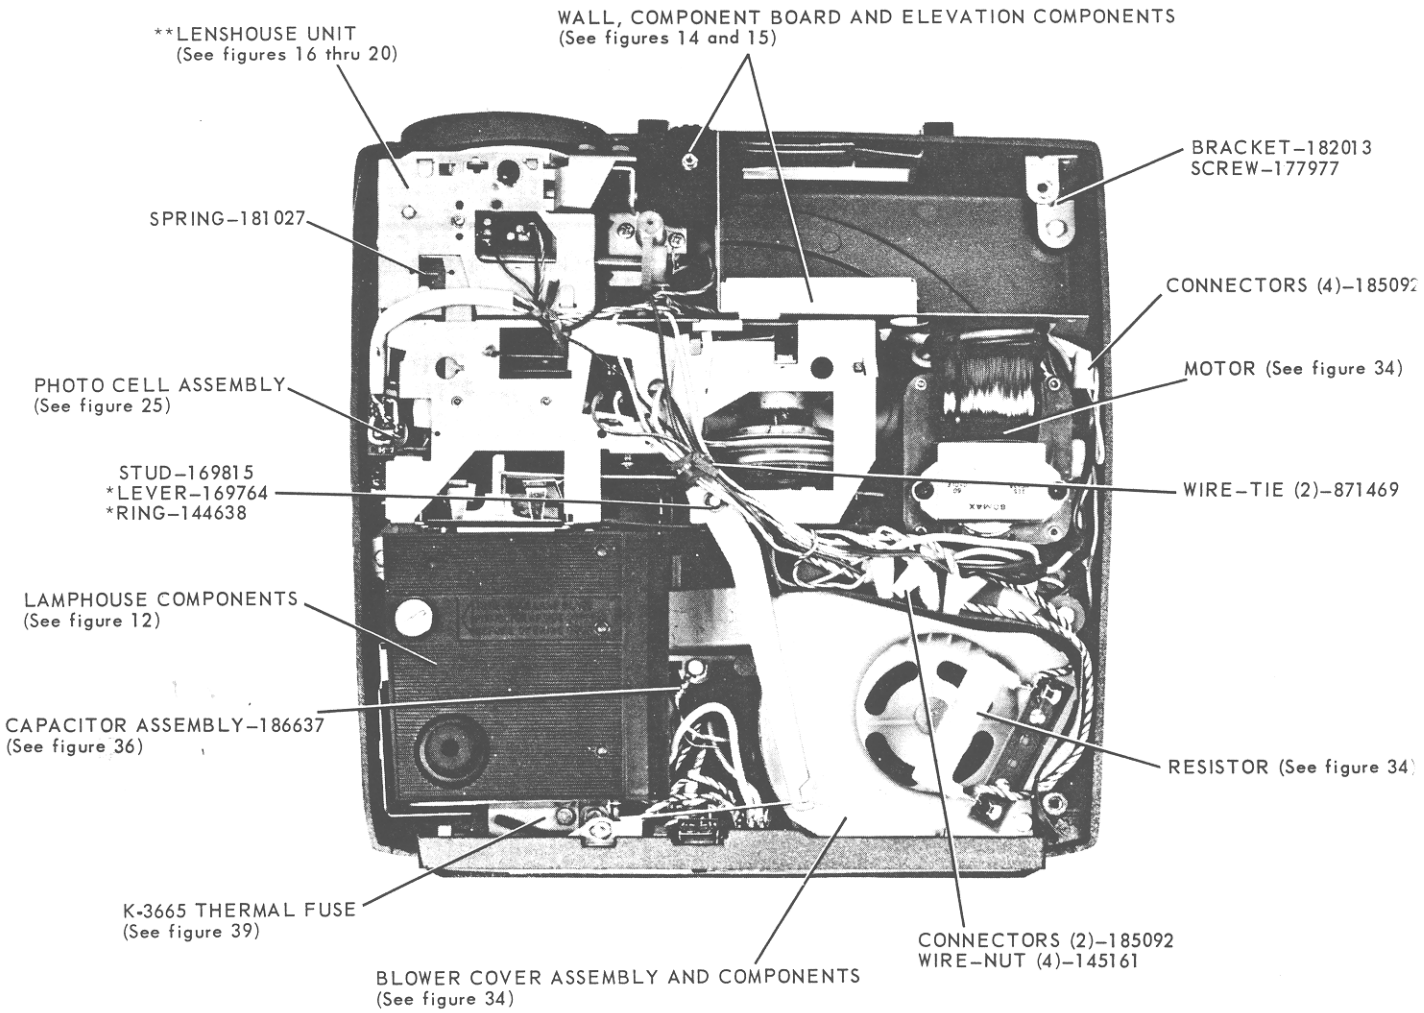


*EXCEPT–Remote solenoid and timing components
**EXCEPT–Remote solenoid

FIGURE 10 MODELS *760, **850, AND 860

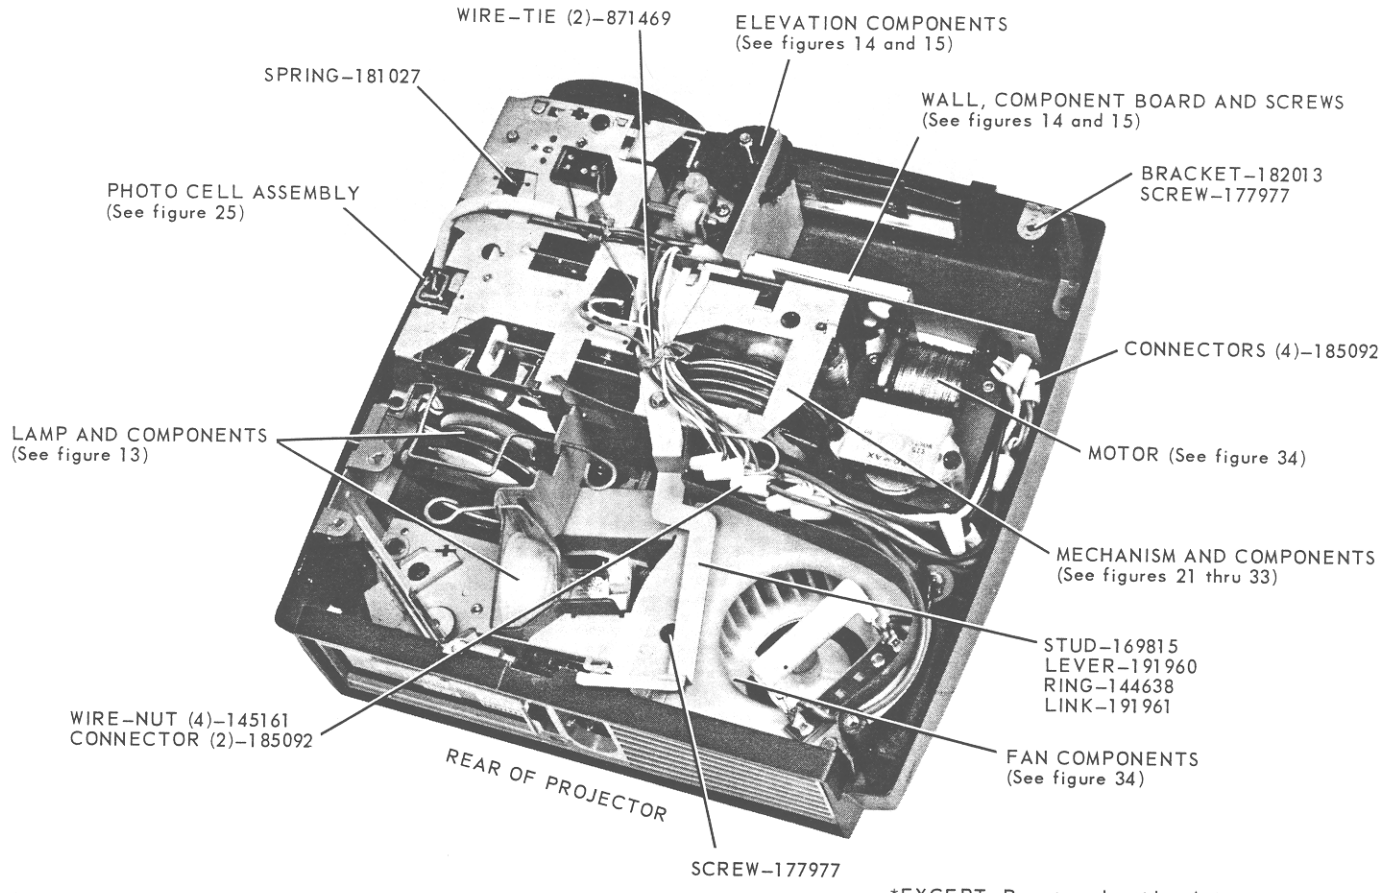

IGURE 11 MODELS *760H, **850H, AND 860H

*EXCEPT–Remote solenoid and timing components
**EXCEPT–Remote solenoid

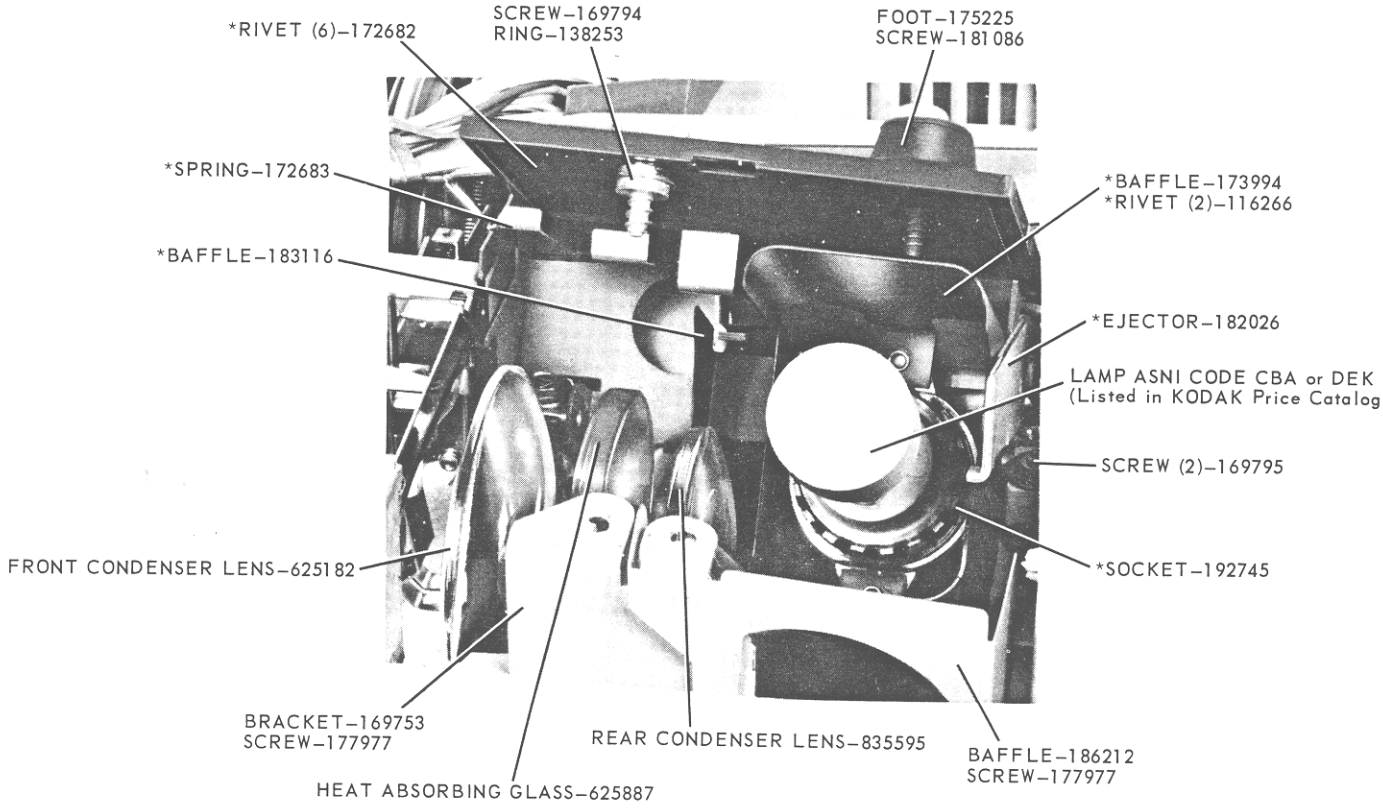

**GURE 12 *LAMPHOUSE DOOR ASSEMBLY–180920
MODELS 760, 850 AND 860 ONLY**

*PARTS INCLUDED IN LAMPHOUSE DOOR ASSEMBLY

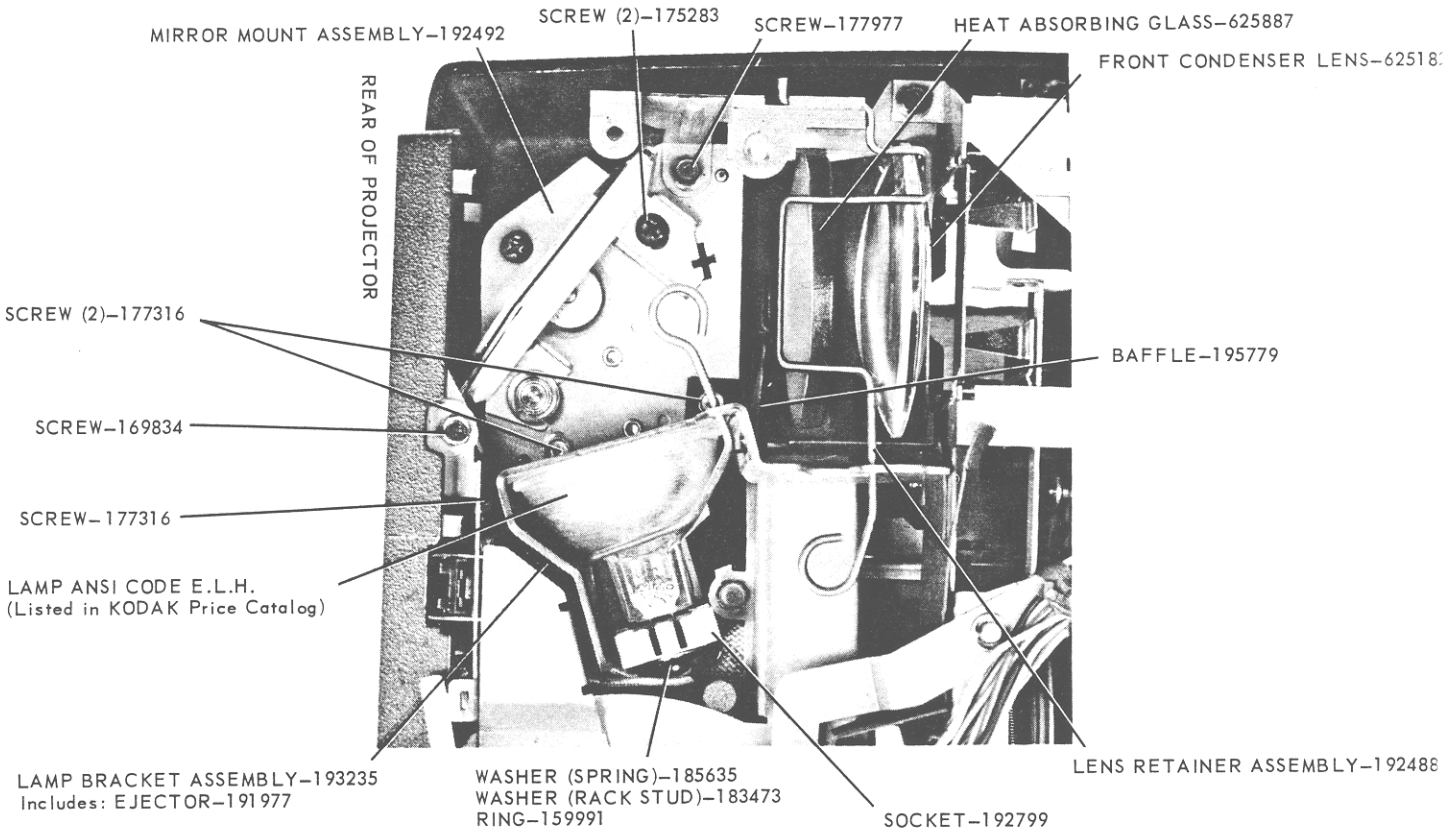


FIGURE 13

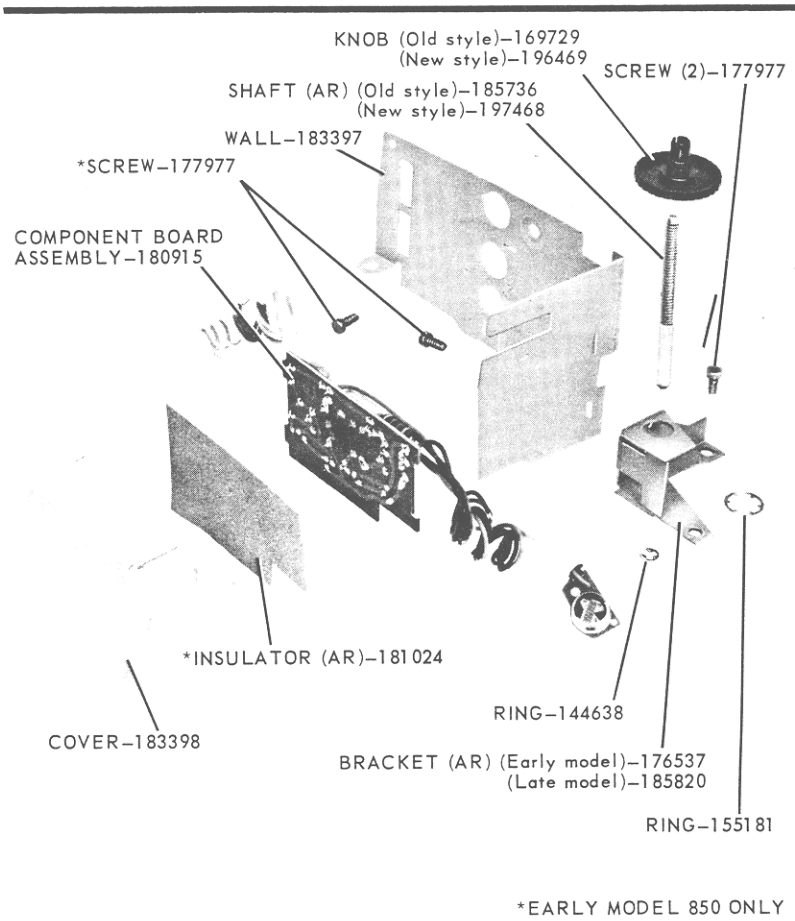


FIGURE 14 MODELS 760, 760H, 850 AND 850H ONLY


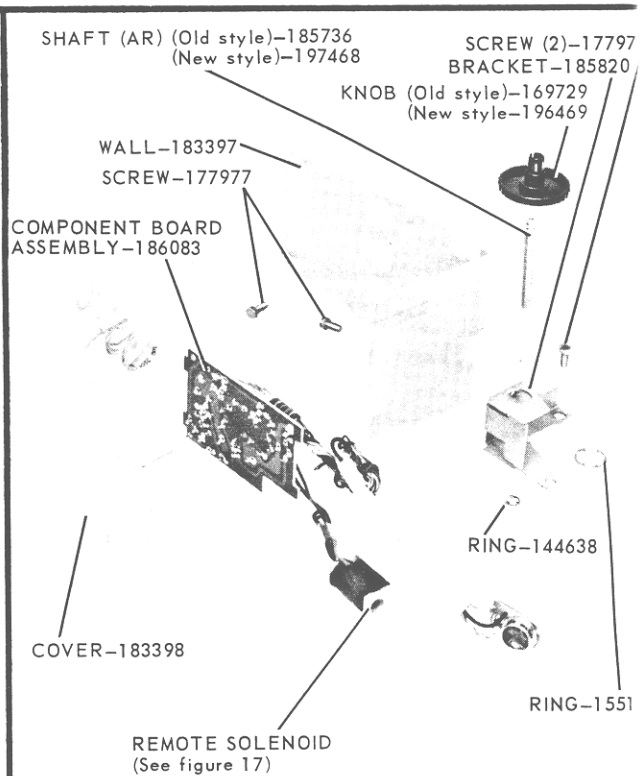


FIGURE 15 MODELS 860 AND 860H ONLY

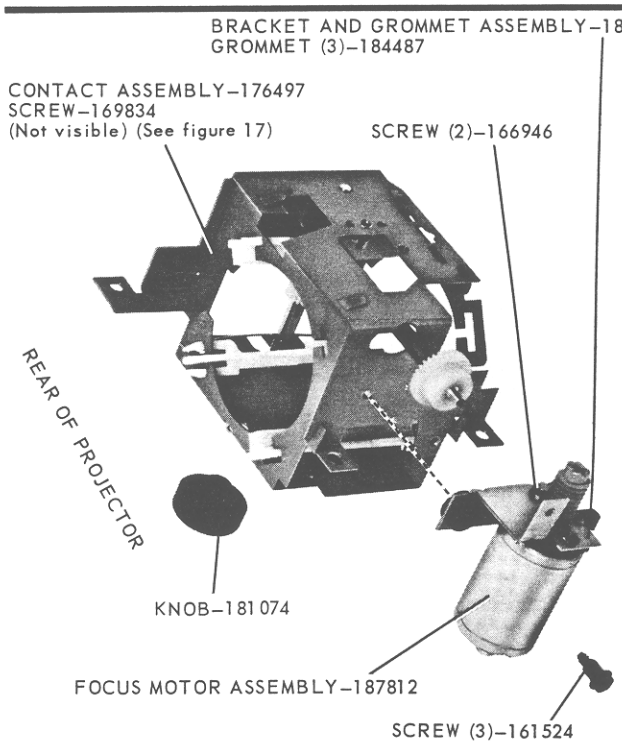

IGURE 16 MODELS 760, 760H, 850 and 850H ONLY


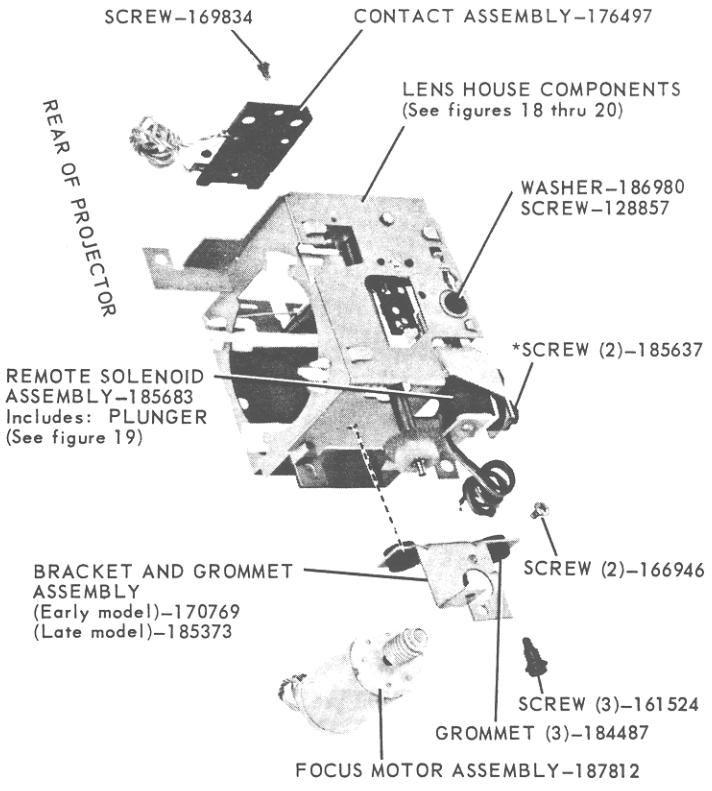


FIGURE 17

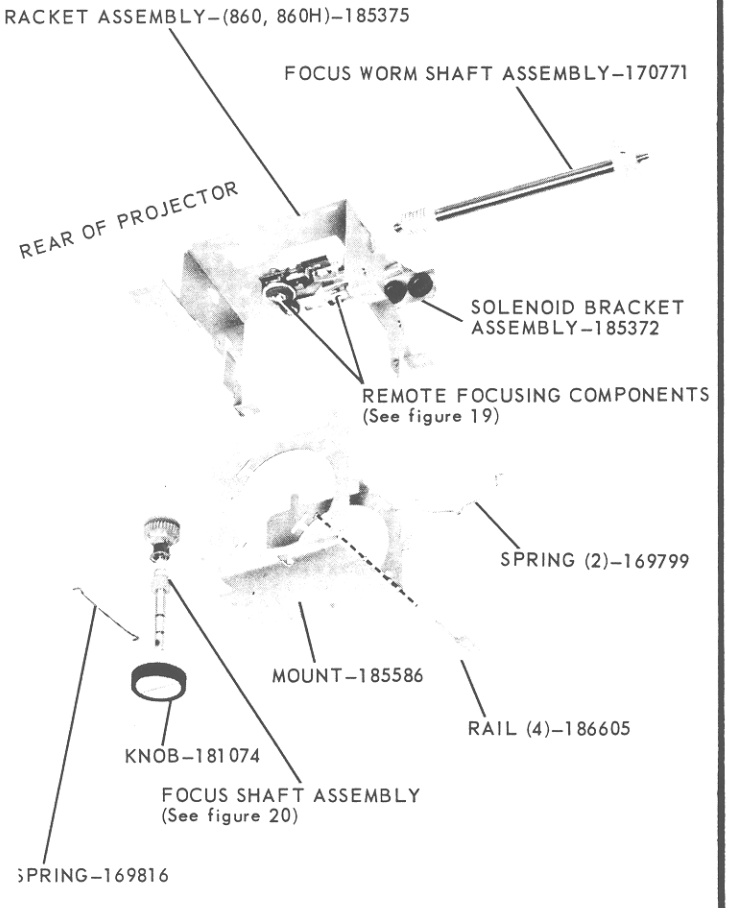

GURE 18

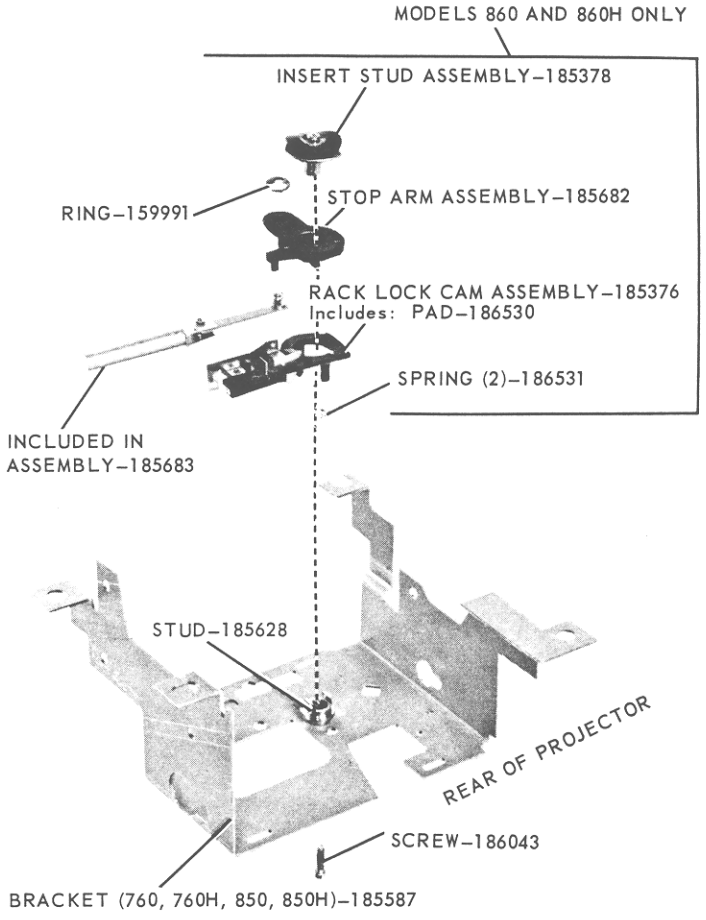


FIGURE 19

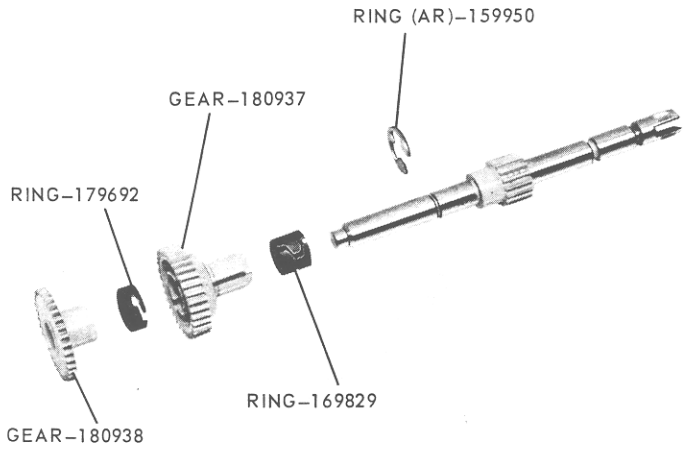


FIGURE 20 FOCUS SHAFT ASSEMBLY–180917

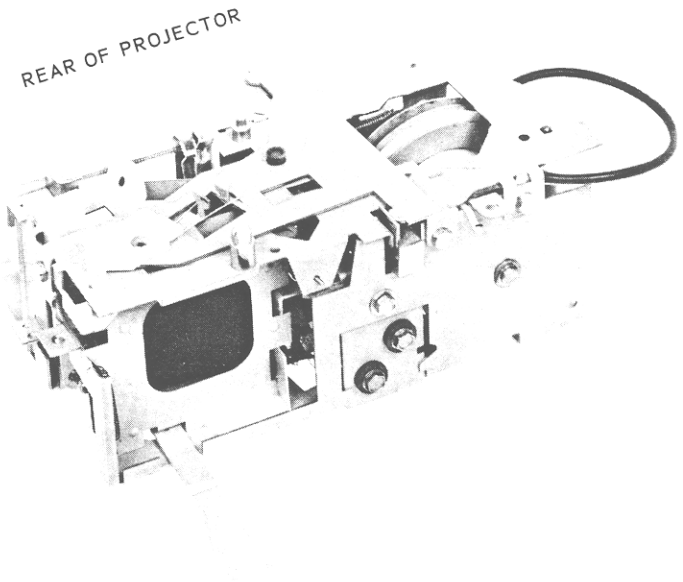


FIGURE 21 MECHANISM ASSEMBLY
(760)–190275 (850 and 860)–185370
(760H)–192771 (850H and 860H)–192495

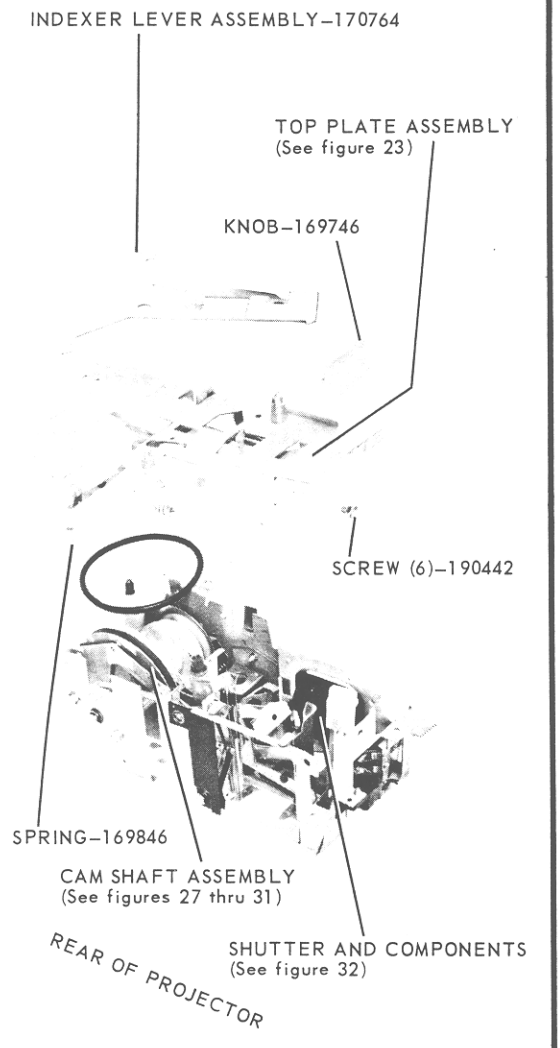


FIGURE 22

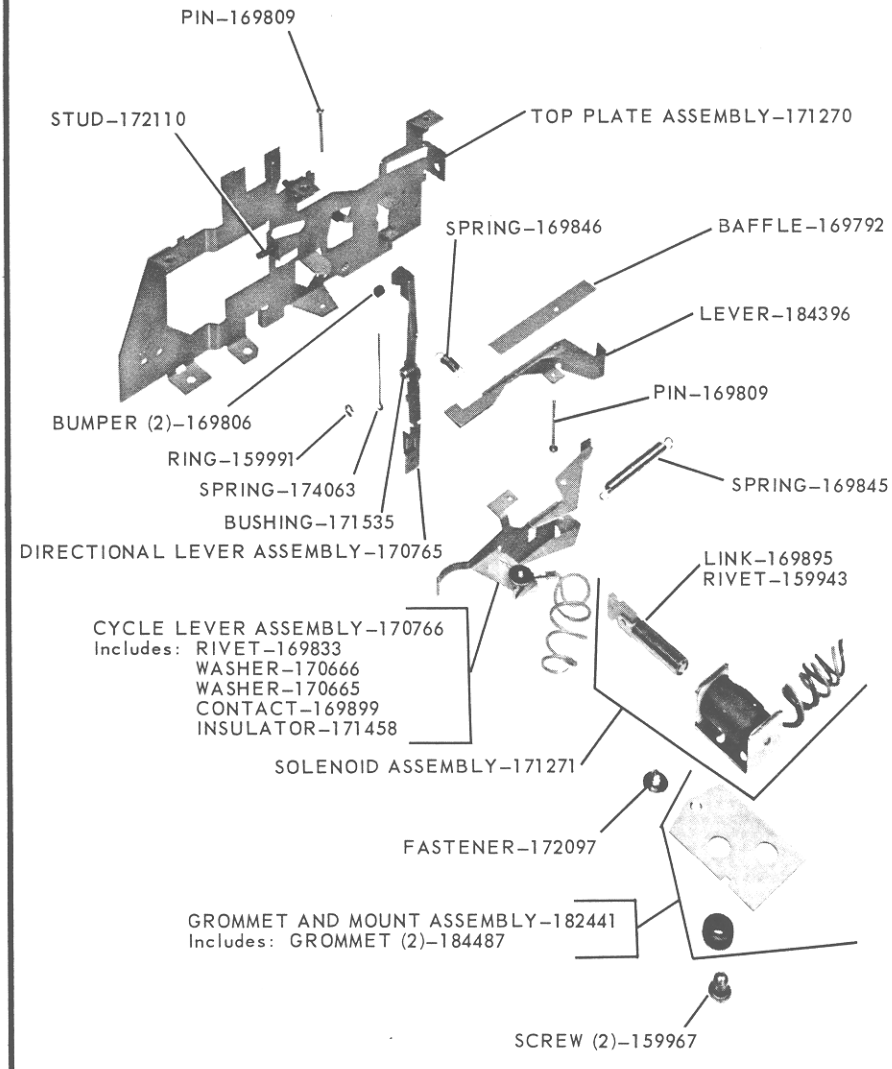


FIGURE 23

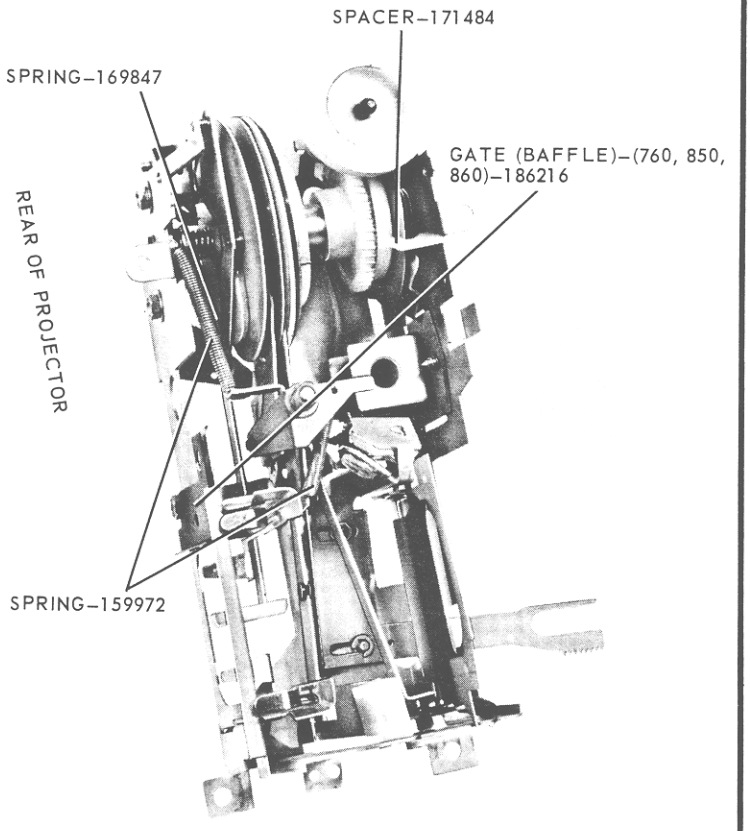


FIGURE 24



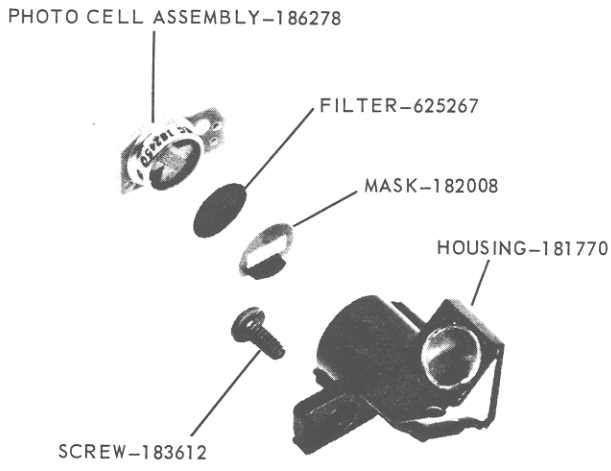


FIGURE 25

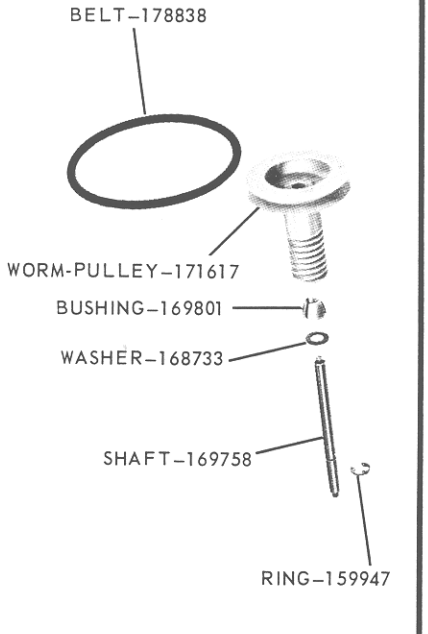

IGURE 26

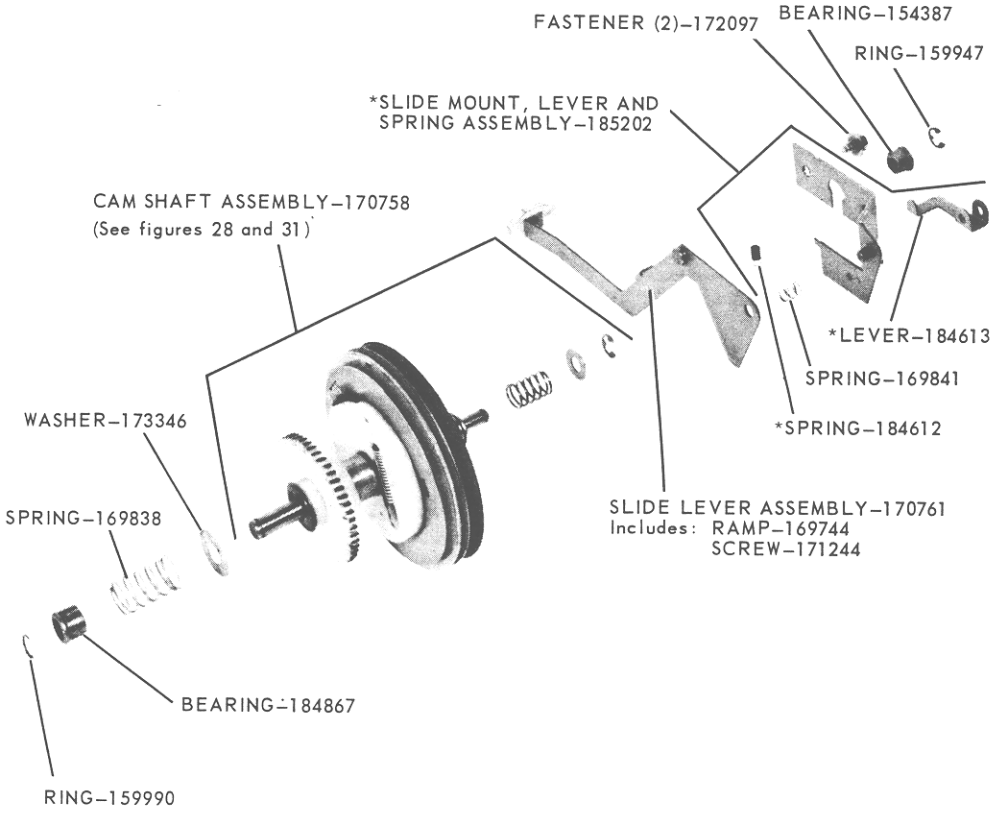

*Parts included in Slide Mount Lever and Spring Assembly

FIGURE 27 MODELS 760 and 760H ONLY

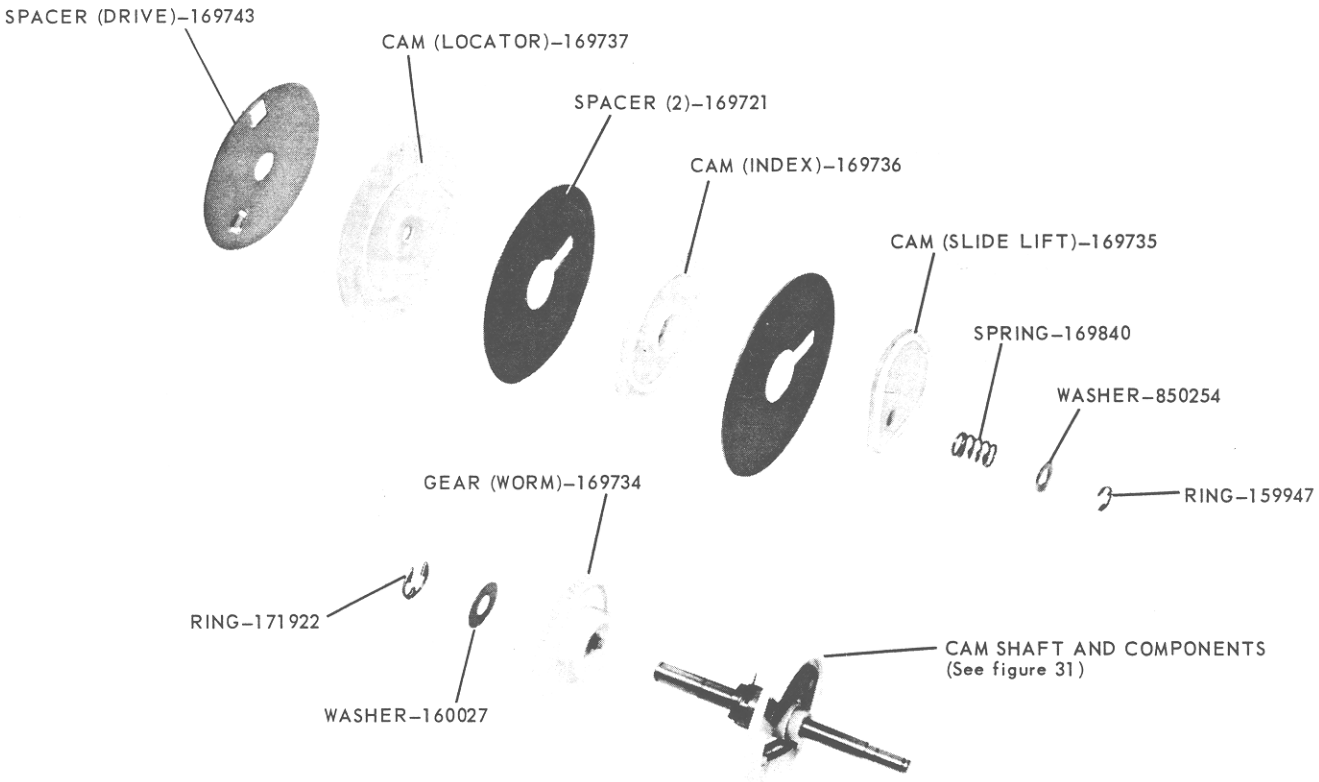


FIGURE 28 CAM SHAFT ASSEMBLY–170758

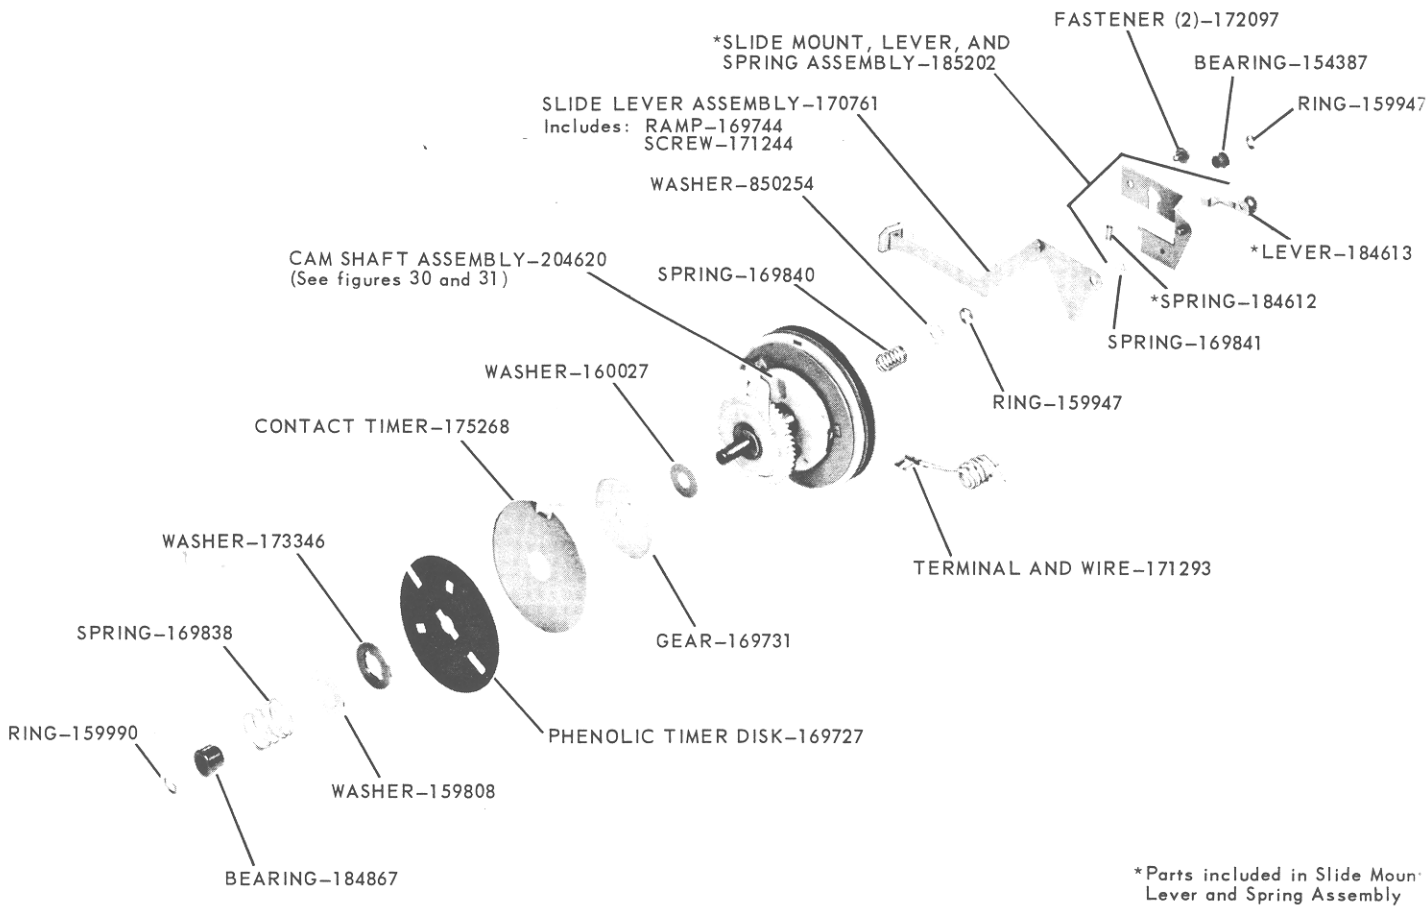


FIGURE 29

MODELS 850, 850H, 860
and 860H ONLY

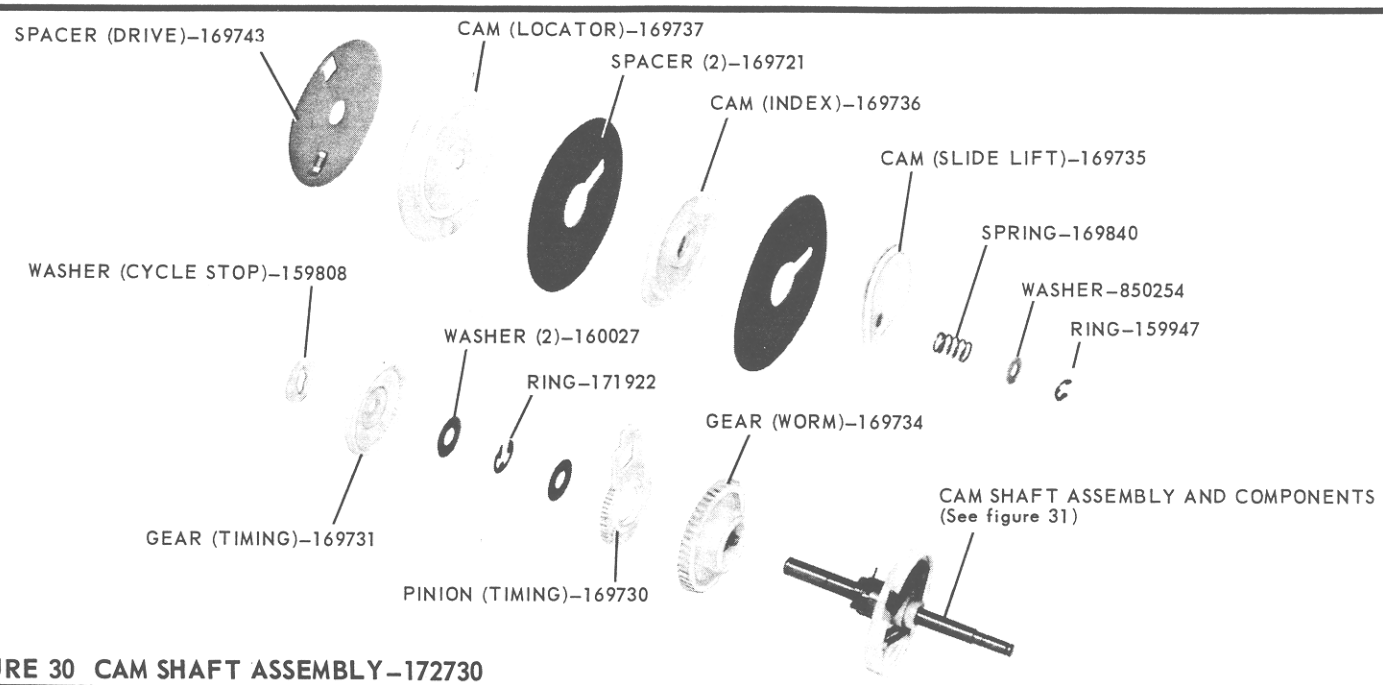


FIGURE 30 CAM SHAFT ASSEMBLY–172730

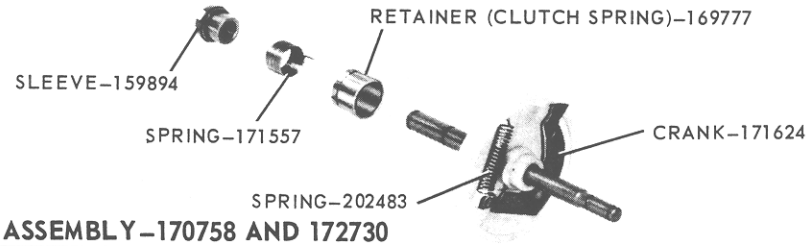


FIGURE 31 CAM SHAFT ASSEMBLY–170758 AND 172730

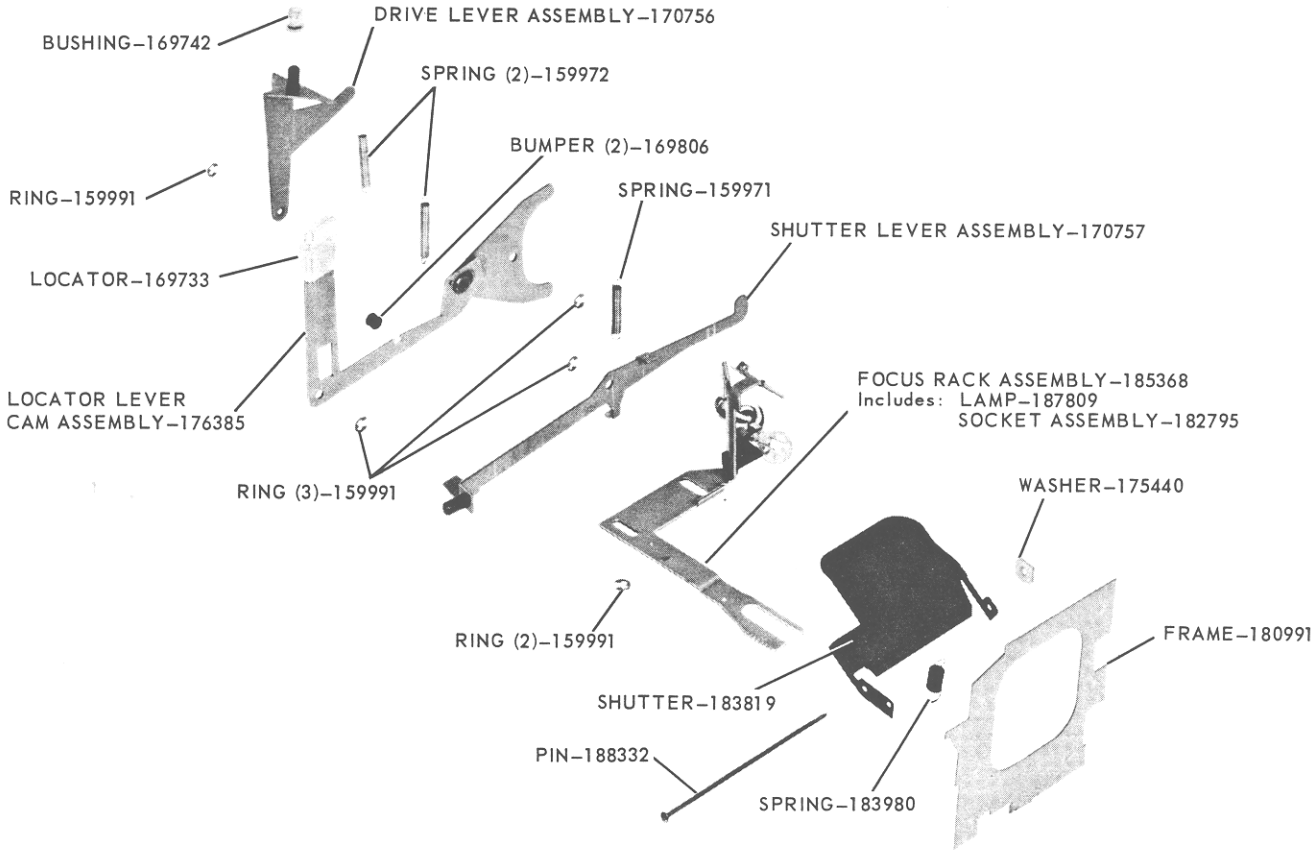


FIGURE 32

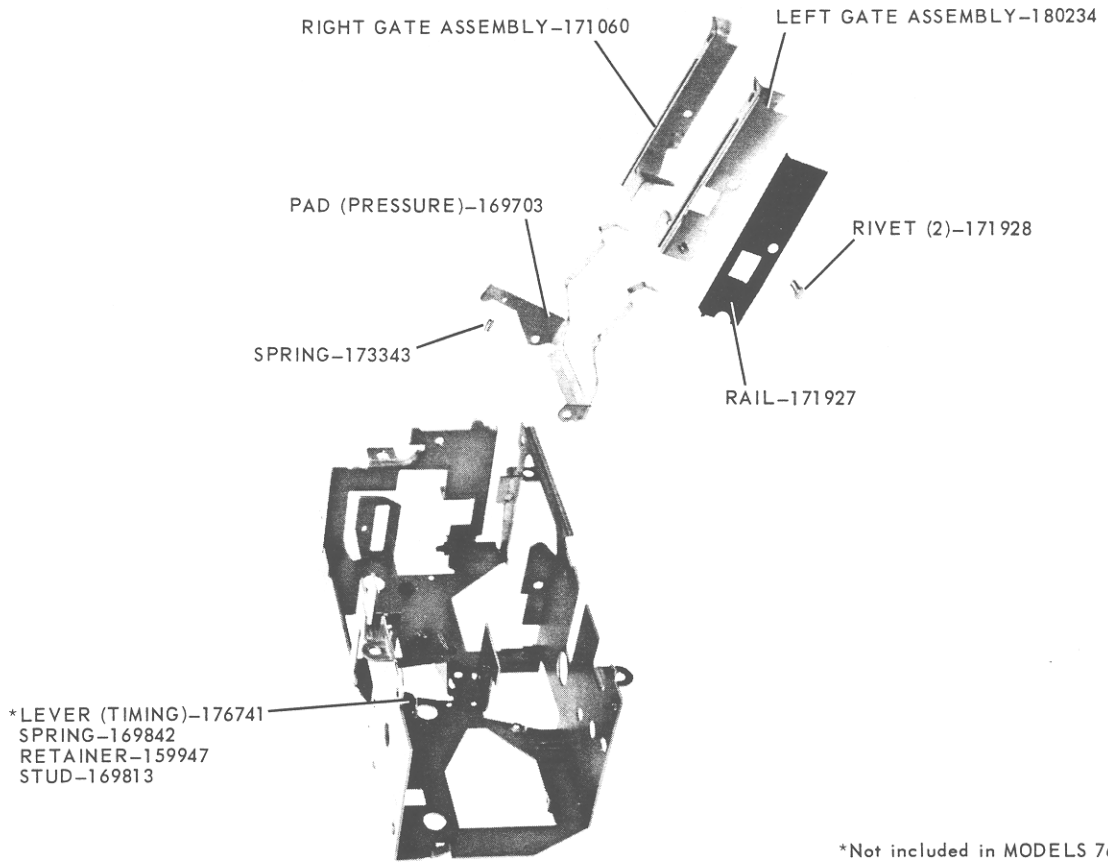


FIGURE 33

*Not included in MODELS 760 and 760H

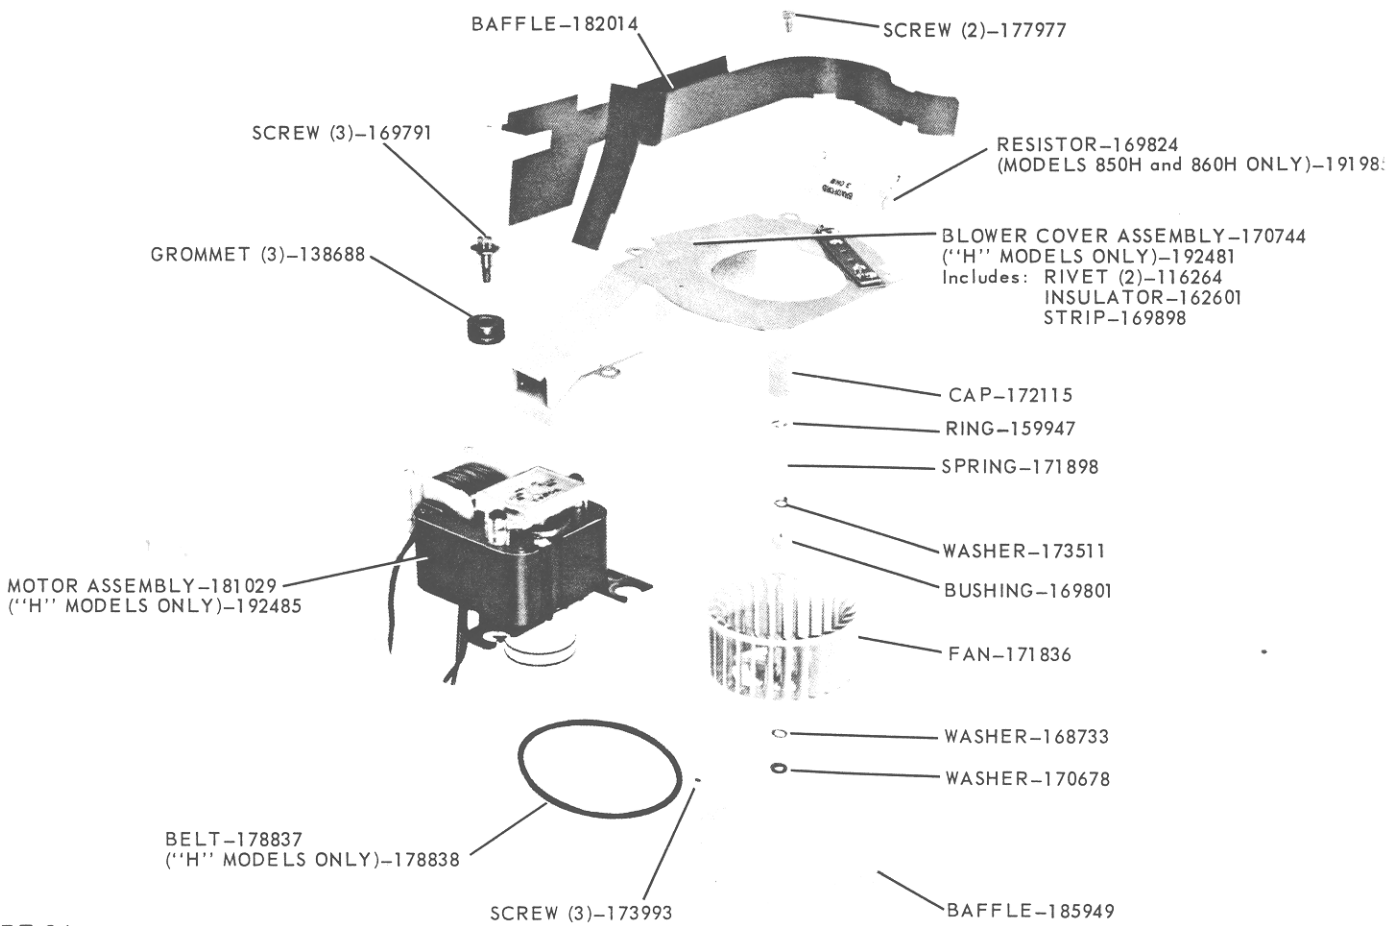


FIGURE 34

Order by PART NUMBER, NAME, and EQUIPMENT MODEL.

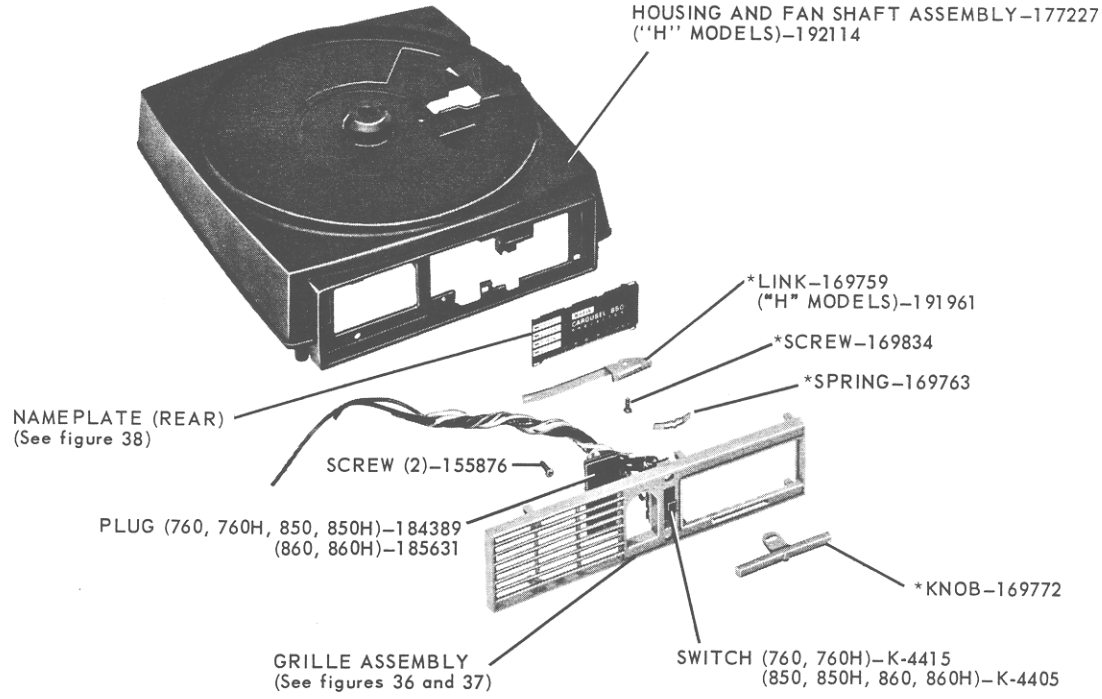


FIGURE 35

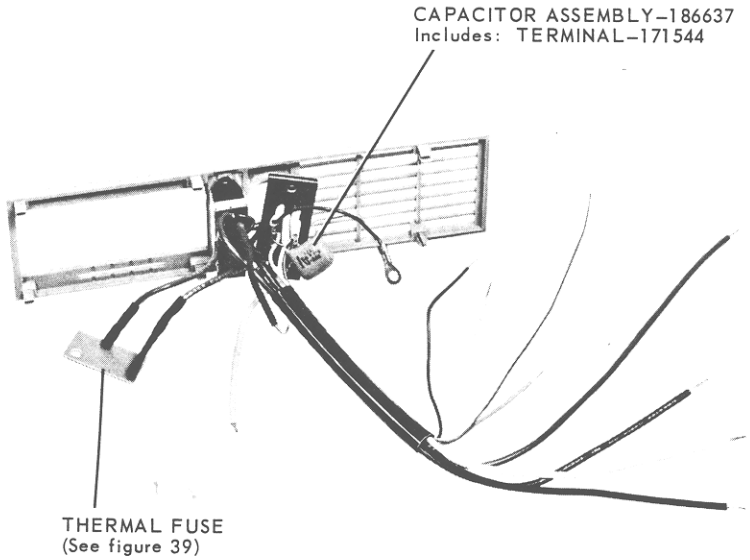


FIGURE 36 GRILLE ASSEMBLY (760)–187010
(850)–187014
(860)–187016


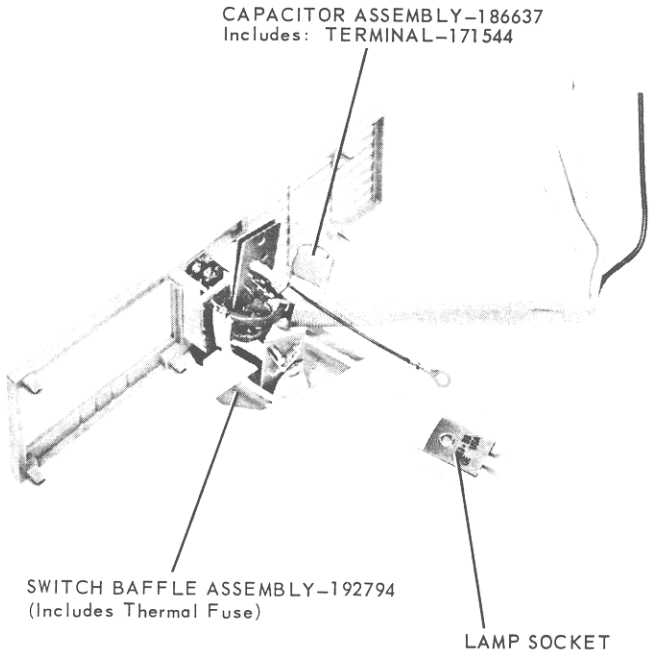


FIGURE 37 GRILLE ASSEMBLY (760H)–192762
(850H)–192486
(860H)–192783

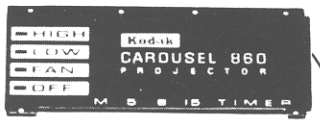

NAMEPLATE (REAR) (760)–189977
(760H)–192774
(850)–180932
(850H)–191983
(860)–185639
(860H)–192780

NAMEPLATE (FRONT) (760)–189976
(760H)–192773
(850)–181579
(850H)–191984
(860)–185638
(860H)–192779



FIGURE 38

MODELS 760, 850, and 860

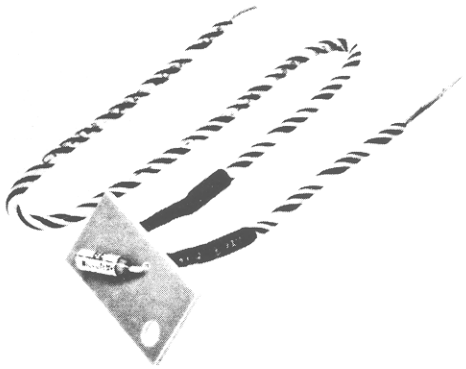


FIGURE 39 K–3665 THERMAL FUSE



PIN (2)–176540


BUTTON–176468

BRACKET–176541

NAMEPLATE (FRONT)
(See figure 38)

HANDLE–176539

FIGURE 40

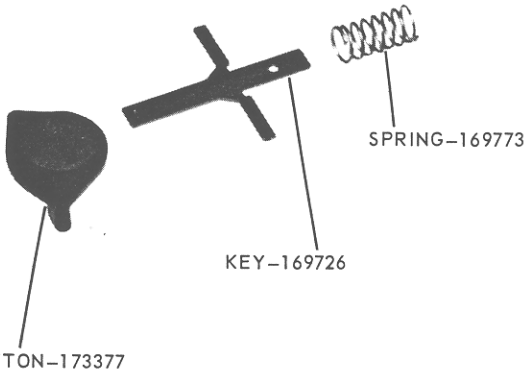

SPRING–169773

KEY–169726

BUTTON–173377

FIGURE 41

CATCH COMPLETE (2)–761748

HANDLE COMPLETE–761747
(With attaching parts)

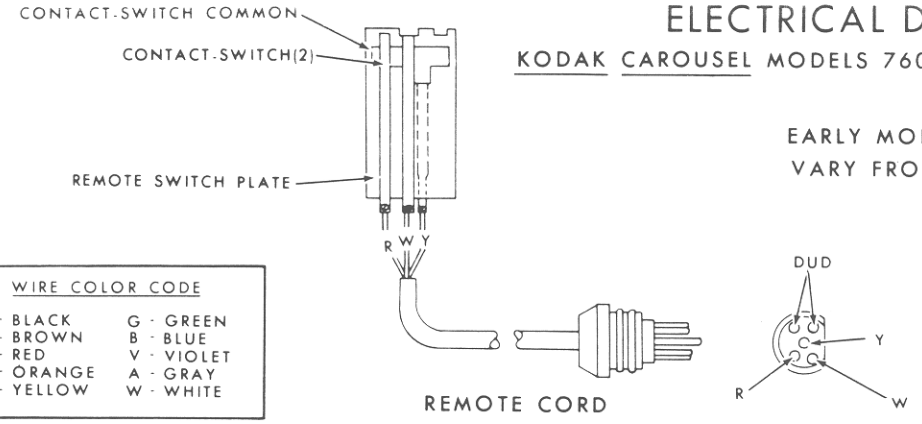


FIGURE 42 *KODAK CAROUSEL* PROJECTOR CASE, MODEL B Listed in KODAK Price Catalog

ELECTRICAL DIAGRAMS


KODAK CAROUSEL MODELS 760 and 760H PROJECTORS


EARLY MODEL PROJECTORS MAY VARY FROM DIAGRAMS SHOWN



WIRE COLOR CODE

K - BLACK	G - GREEN
N - BROWN	B - BLUE
R - RED	V - VIOLET
O - ORANGE	A - GRAY
Y - YELLOW	W - WHITE

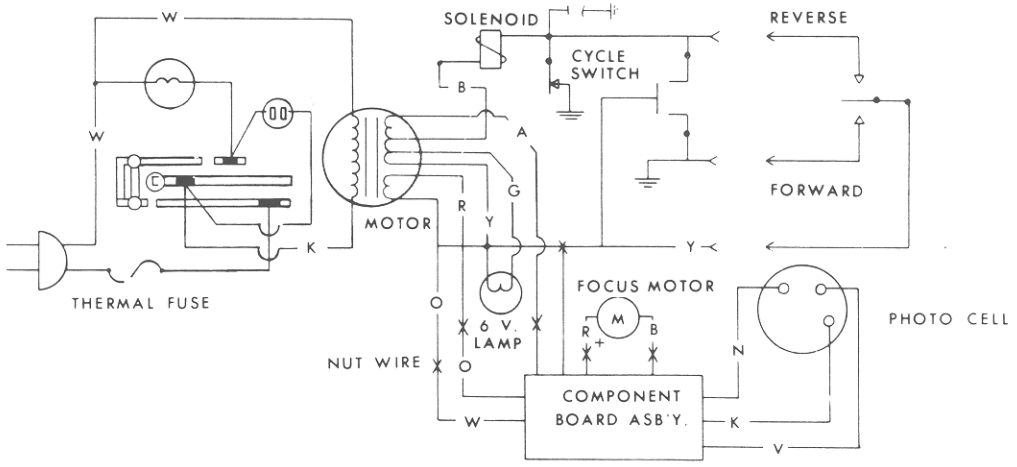


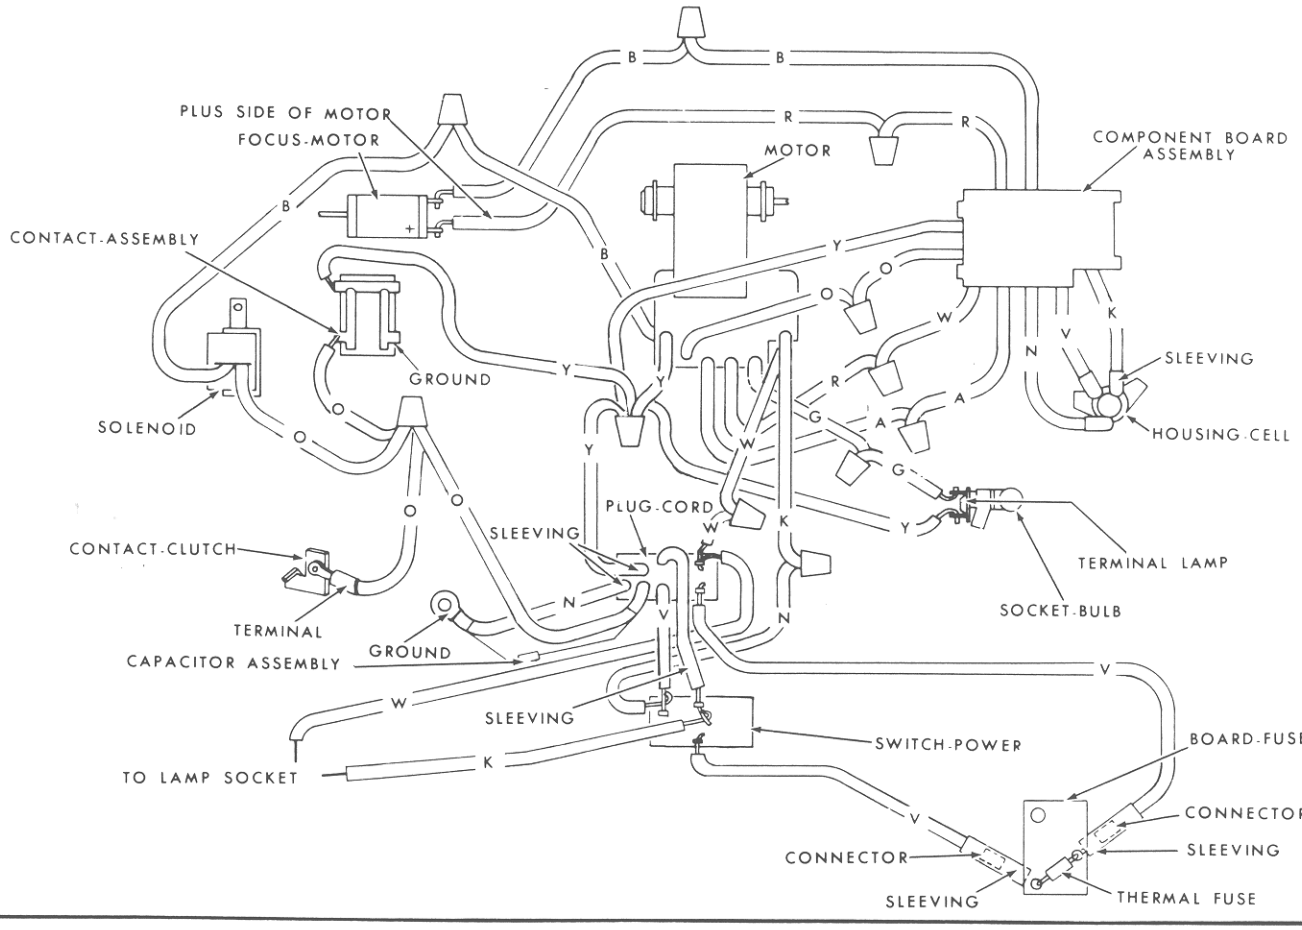

ELECTRICAL DIAGRAMS


KODAK CAROUSEL MODELS 850 and 850H PROJECTORS


EARLY MODEL PROJECTORS MAY VARY FROM DIAGRAMS SHOWN

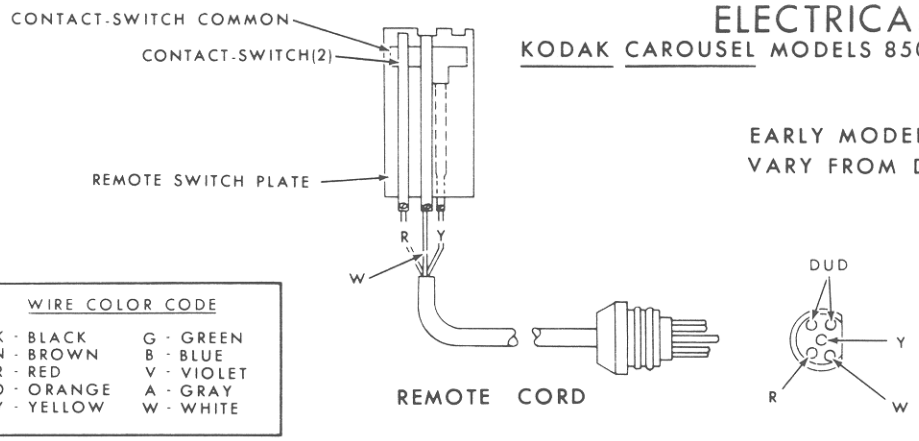

WIRE COLOR CODE

K - BLACK	G - GREEN
N - BROWN	B - BLUE
R - RED	V - VIOLET
O - ORANGE	A - GRAY
Y - YELLOW	W - WHITE

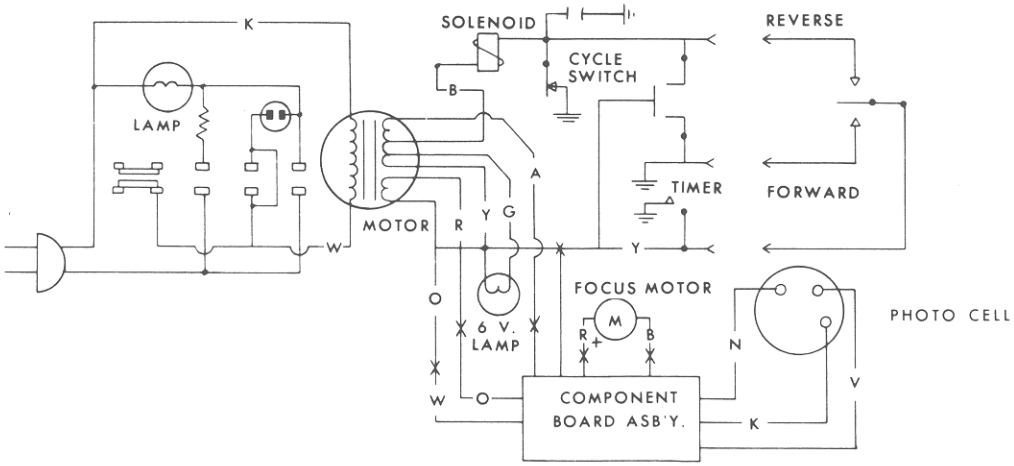


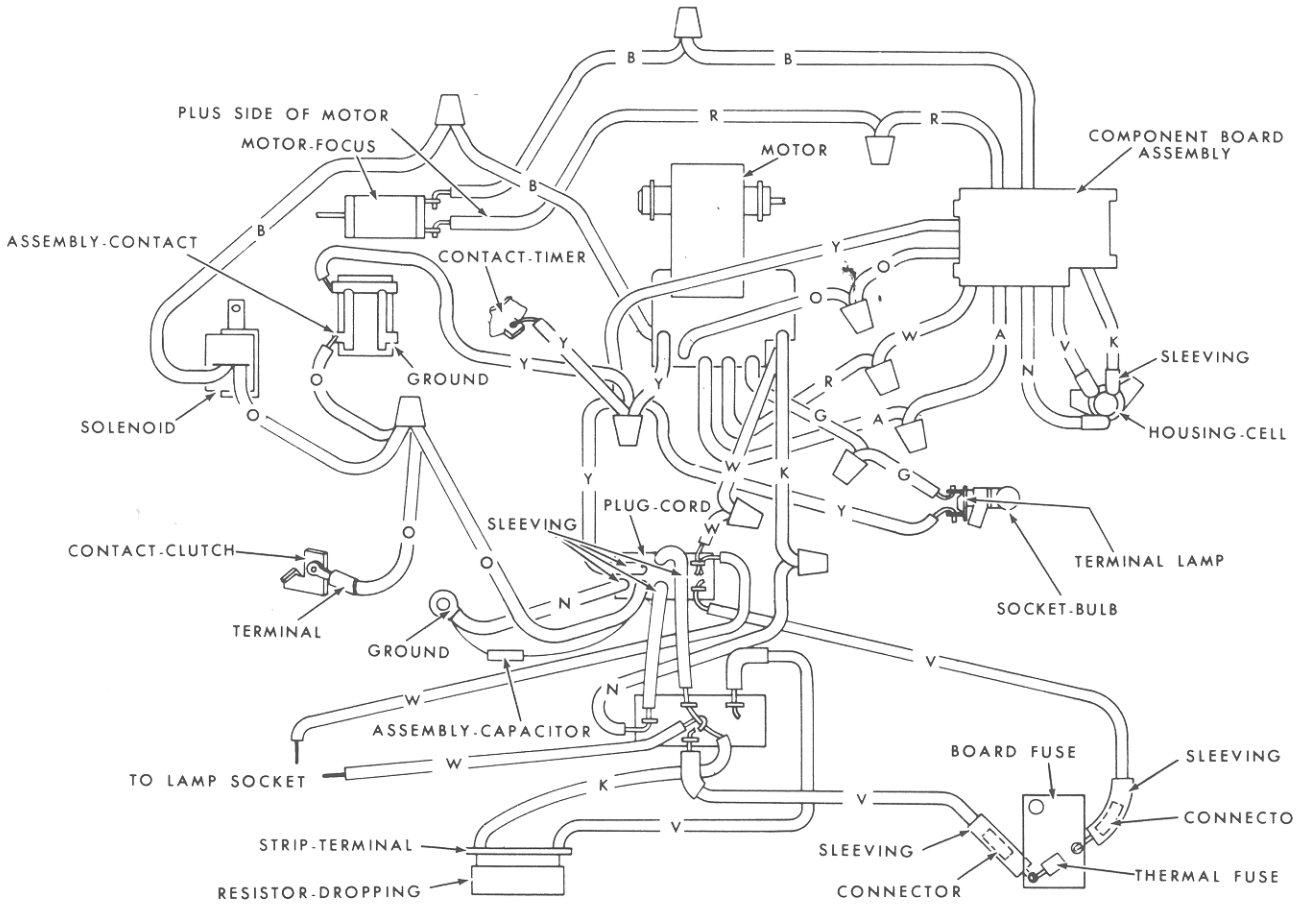

ELECTRICAL DIAGRAMS

KODAK CAROUSEL MODELS 860 and 860H PROJECTORS

EARLY MODEL PROJECTORS MAY VARY FROM DIAGRAMS SHOWN

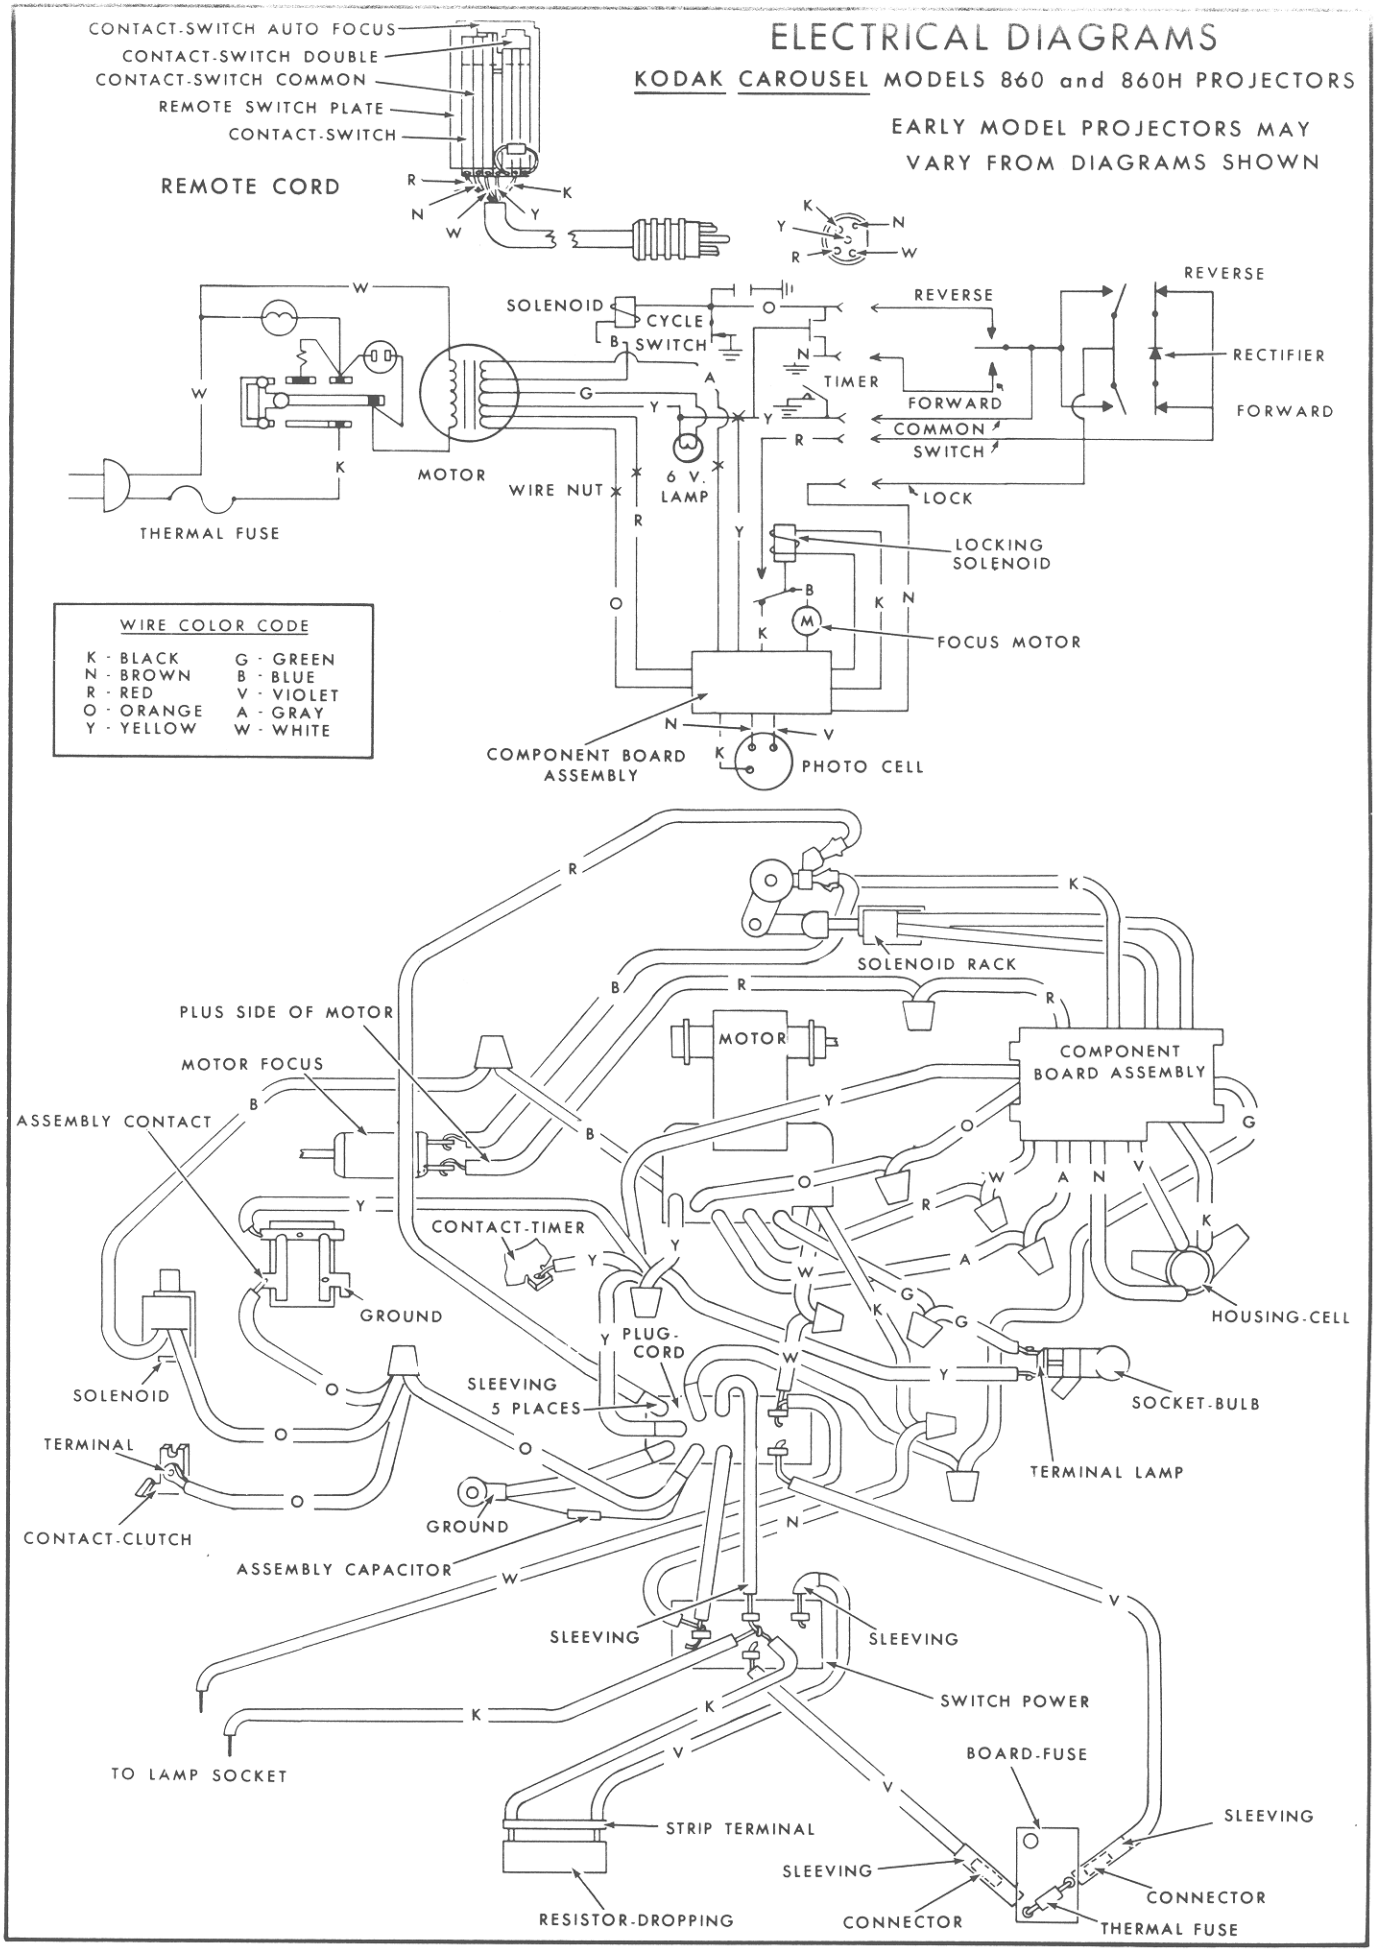

Part No.	MODELS 760	760H	850	850H	860	860H	Part Name	Fig.
	X	X	X	X	X	X	*KODAK Projection EKTANON Lens - 7-inch, f/3.5 Rack focusing	1
	X	X	X	X	X	X	*KODAK Projection EKTANAR Lens - 5-inch, f/3.5 Rack focusing	1
	X	X	X	X	X	X	*KODAK Projection Zoom Lens - 4-inch to 6-inch, f/3.5, Rack focusing	1
	X	X	X	X	X	X	*KODAK Projection EKTANAR Lens - 4-inch, f/3.5 Rack focusing	1
	X	X	X	X	X	X	*KODAK Projection EKTANAR Lens - 5-inch, f/2.8 Rack focusing	1
	X	X	X	X	X	X	*KODAK Projection EKTANAR Lens - 3-inch, f/3.5, Rack focusing	1
	X	X	X	X	X	X	*KODAK CAROUSEL Slide Tray, B 140, ID. No. 581	1,2
	X	X	X	X	X	X	*Lamp ANSI Code DEK, 500W, 120V or 125V (Specify Voltage)	12
	X	X	X	X	X	X	*Lamp ANSI Code CBA, 500W, 120V or 125V (Specify Voltage)	12
		X		X		X	*Lamp ANSI Code ELH, 300W, 120V	13
K-3665	X		X		X		Thermal Fuse	10,37,39
K-4405			X	X	X	X	Power Switch Kit	35
K-4415	X	X					Power Switch Kit	35
36484	X	X	X	X	X	X	Screw - Tap., Type B, No. 8 X 1/4	7,8
116264	X	X	X	X	X	X	Rivet - Blower cover	34
116266	X		X		X		Rivet - Lamp socket	12
128857	X	X	X	X	X	X	Screw - Base cover, Remote solenoid (860 and 860H)	7,8,17
138253	X	X	X	X	X	X	Ring - Retaining, Truarc No. 5103-37 or equiv	9,12
138688	X	X	X	X	X	X	Grommet - Drive motor	34
144638	X	X	X	X	X	X	Ring - Retaining, ext., Truarc No. 5133-15 or equiv.	10,11,14,15
145161	X	X	X				WIRE-NUT	10,11
154387	X	X	X	X	X	X	Bearing - Cam shaft, rear	27,29
155181	X	X	X	X	X	X	Ring - Retaining, ext., Truarc No. 5105-37 or equiv.	14,15
155876	X	X	X	X	X	X	Screw - Tap., Type F, min hd. 6-32 x 3/8	35
159804	X		X		X		Cover - Slide tray	2
159808			X	X	X	X	Washer - Cycle stop	29,30
159894	X	X	X	X	X	X	Sleeve - Cam	31
159943	X	X	X	X	X	X	Rivet - Solenoid link	23
159947	X	X	X	X	X	X	Ring - Retaining, ext., Truarc No. 5133-18 or equiv	26,28,29,33,34
159950	X	X	X	X	X	X	Ring - Retaining, ext., Truarc No. X5133-21 or equiv (A.R.)	20
159967	X	X	X	X	X	X	Screw - Solenoid mounting	23
159971	X	X	X	X	X	X	Spring - Pressure pad	32
159972	X	X	X	X	X	X	Spring - Driver lever	24,32
159979	X	X	X	X	X	X	Spring	33
159990	X	X	X	X	X	X	Ring - Retaining, ext., Truarc No. 3103-25 or equiv.	27,29
159991	X	X	X	X	X	X	Ring - Retaining, Truarc No. 5133-12	13,19,23,32
160027	X	X	X	X	X	X	Washer - Cam shaft	28,29,30
161524	X	X	X	X	X	X	Screw - Focus motor bracket	16,17
162601			X	X	X	X	Insulator - Resistor	34
166946	X	X	X	X	X	X	Screw - Tap., Type B, pad hd., No. 5 x 3/16	16,17
168514					X	X	Rectifier - Remote control	4
168733	X	X	X	X	X	X	Washer - Worm shaft, fan	26,34
169703	X	X	X	X	X	X	Pad - Pressure	33
169721	X	X	X	X	X	X	Spacer - Cam	28,30
169726	X	X	X	X	X	X	Key - Spindle	41
169727			X	X	X	X	Disc - Timer, phenolic	29
169729	X	X	X	X	X	X	Knob - Elevating	14,15
169730			X	X	X	X	Pinion - Timing (cam)	30
169731			X	X	X	X	Gear - Timing	29,30
169733	X	X	X	X	X	X	Locator - Locator lever	32

*Listed in KODAK Price Catalog

Part No.	MODELS 760	760H	850	850H	860	860H	Part Name	Fig.
169734	X	X	X	X	X	X	Gear - Worm (cam)	28,30
169735	X	X	X	X	X	X	Cam - Slide lift (cam)	28,30
169736	X	X	X	X	X	X	Cam - Index (cam)	28,30
169737	X	X	X	X	X	X	Cam - Locator (cam)	28,30
169742	X	X	X	X	X	X	Bushing - Drive post	32
169743	X	X	X	X	X	X	Spacer - Drive (cam)	28,30
169744	X	X	X	X	X	X	Ramp - Slide lever	27,29
169746	X	X	X	X	X	X	Knob - Select	22
169753	X		X		X		Bracket - Condenser lens	12
169758	X	X	X	X	X	X	Shaft - Worm	26
169759			X		X		Link - Timing lever	35
169763			X	X	X	X	Spring - Timer knob	35
169764			X		X		Lever - Timer	10
169767	X	X	X	X	X	X	Latch - Storage door	6
169772			X	X	X	X	Knob - Timer	35
169773	X	X	X	X	X	X	Spring - Spindle key	41
169777	X	X	X	X	X	X	Retainer - Clutch spring	31
169791	X	X	X	X	X	X	Screw - Drive motor grommet	34
169792	X	X	X	X	X	X	Baffle - Shutter	23
169794	X	X	X	X	X	X	Screw - Lamphouse door, lock	9,12
169795	X		X		X		Screw - Lamphouse door	12
169799	X	X	X	X	X	X	Spring - Lens rail	18
169801	X	X	X	X	X	X	Bushing - Fan	26,34
169806	X	X	X	X	X	X	Bumper - Rubber	23,32
169807	X	X	X	X	X	X	Pin - Storage door hinge	6
169809	X	X	X	X	X	X	Pin - Half cycle lever	23
169813			X	X	X	X	Stud - Timer switch	32
169815			X	X	X	X	Stud - Timer lever	10,11
169816	X	X	X	X	X	X	Spring - Focus shaft	18
169824			X	X	X	X	Resistor - 3 ohm, 15-20 watts, High temperature	34
169827	X	X	X	X	X	X	Screw - Leveling foot	7,8
169829	X	X	X	X	X	X	Ring - Compression, Timmerman No. C3157-20-4 or equiv	20
169833	X	X	X	X	X	X	Rivet - Cycle lever	23
169834			X	X	X	X	Screw - Tap., Type B, hex hd, No. 6 x 1/4	13,16,17,35
169836	X	X	X	X	X	X	Screw - Tap., Type B, min hd, No. 4 x 5/6	3,4
169838			X	X	X	X	Spring - Cam drive shaft	27,29
169840	X	X	X	X	X	X	Spring - Cam shaft	28,29,30
169841	X	X	X	X	X	X	Spring - Slide lever stud	27,29
169842			X	X	X	X	Spring - Timer lever	33
169843	X	X	X	X	X	X	Spring - Storage door latch	6
169845	X	X	X	X	X	X	Spring - Select lever	23
169846	X	X	X	X	X	X	Spring - Directional lever	22,23
169847	X	X	X	X	X	X	Spring - Slide lever	24
169851	X	X	X	X	X	X	Housing - Bottom (remote)	3,4
169854	X	X	X	X	X	X	Housing - Top (remote)	3
169895	X	X	X	X	X	X	Link - Solenoid	23
169898			X	X	X	X	Strip - Terminal	34
169899	X	X	X	X	X	X	Contact - Cycle lever	23
170665	X	X	X	X	X	X	Washer - Cycle lever	23
170666	X	X	X	X	X	X	Washer - Cycle lever	23
170675	X	X	X	X	X	X	Washer - Leveling knob	7,8
170678	X	X	X	X	X	X	Washer - Fan (cork)	34
170744	X		X		X		Blower Cover Assembly	34
170746	X		X		X		Storage Door Assembly	6
170753	X	X	X	X	X	X	Left Gate Assembly	33
170756	X	X	X	X	X	X	Driver Lever Assembly	32

Part No.	MODELS 760	760H	850	850H	860	860H	Part Name	Fig.
170757	X	X	X	X	X	X	Shutter Lever Assembly	32
170758	X	X					Cam Shaft Assembly	27,31
170761	X	X	X	X	X	X	Slide Lever Assembly	27,29
170764	X	X	X	X	X	X	Indexer Lever Assembly	22
170765	X	X	X	X	X	X	Directional Lever Assembly	23
170766	X	X	X	X	X	X	Cycle Lever Assembly	23
170769			X		X		Bracket and Grommet Assembly	17
170771	X	X	X	X	X	X	Focus Worm Shaft Assembly	18
171054	X	X	X	X			Remote Control Assembly	3
171055	X	X	X	X			Contact Assembly - Remote cord	3
171060	X	X	X	X	X	X	Right Gate Assembly	33
171244	X	X	X	X	X	X	Screw - For repair only	27,29
171270	X	X	X	X	X	X	Top Mechanism Plate Assembly	23
171271	X	X	X	X	X	X	Solenoid Assembly	23
171293			X	X	X	X	Terminal and Wire - Contact timer	29
171458	X	X	X	X	X	X	Insulator - Cycle lever	23
171484			X	X	X	X	Spacer - Timer contact	24
171535	X	X	X	X	X	X	Bushing - Directional lever	23
171544	X	X	X	X	X	X	Terminal - Capacitor	10,36,37
171555	X	X	X	X	X	X	Foot - Elevating knob, lamphouse door	7,8
171557	X	X	X	X	X	X	Spring - Clutch	31
171617	X	X	X	X	X	X	Worm - Pulley	26
171624	X	X	X	X	X	X	Crank - Cam	31
171836	X	X	X	X	X	X	Fan	34
171898	X	X	X	X	X	X	Spring - Fan shaft	34
171922	X	X	X	X	X	X	Ring - Cam	28,30
171927	X	X	X	X	X	X	Rail - Slide lever	33
171928	X	X	X	X	X	X	Rivet - Gate	33
172097	X	X	X	X	X	X	Fastener - Tap., Type BP, hex hd., with washer, No. 8 x 6/16	23,27,29
172110	X	X	X	X	X	X	Stud - Top plate	23
172115	X	X	X	X	X	X	Cap - Fan	34
172130	X	X	X	X	X	X	Washer - Leveling foot (Early Model only)	7,8
172145	X	X	X	X	X	X	Washer - Elevating foot (Early Model only)	7,8
172682	X		X		X		Rivet - Doors	6,12
172683	X		X		X		Spring - Condenser lenses	12
172758	X	X	X	X	X	X	Button - Remote cord	3,4
173343	X	X	X	X	X	X	Spring - Pressure pad	33
173346			X	X	X	X	Washer - Timer (AR)	27,29
173365	X		X		X		Plate - Slide tray	2
173377	X	X	X	X	X	X	Button - Tray removal	41
173511	X	X	X	X	X	X	Washer - Fan bushing	34
173718					X	X	Button - Focus	4
173993	X	X	X	X	X	X	Screw	34
173994	X	X	X	X	X	X	Baffle - Lamp	2
174063	X	X	X	X	X	X	Spring - Directional lever	23
175225	X	X	X	X	X	X	Foot - Leveling	7,8,9,12
175268			X	X	X	X	Contact - Timer	29
175283		X		X		X	Screw - Housing	13
175440	X	X	X	X	X	X	Washer - Shutter	32
176385	X	X	X	X	X	X	Locator Lever Cam Assembly	32
176468	X	X	X	X	X	X	Button - Cycle	38
176497	X	X	X	X	X	X	Contact Assembly - Switch	16,17
176537			X				Bracket - Elevating (AR)	14
176539	X	X	X	X	X	X	Handle	38
176540	X	X	X	X	X	X	Pin - Handle mounting	38

Part No.	MODELS 760	760H	850	850H	860	860H	Part Name	Fig.
176541	X	X	X	X	X	X	Bracket - Handle	38
176741			X	X	X	X	Lever - Timer	33
177227	X		X		X		Housing and Fan Shaft Assembly	35
177316		X		X		X	Screw - Switch baffle	13
177977	X	X	X	X	X	X	Screw - Tap., upset hex hd., 8-32 x 3/8	10,11,12,13,14,15,34
178837	X		X		X		Belt - Fan	34
178838	X	X	X	X	X	X	Belt - Mechanism, fan on "H" Models	24,34
179692	X	X	X	X	X	X	Ring - Rack clutch	20
180160	X	X	X	X	X	X	Lever	33
180234	X	X	X	X	X	X	Left Gate Assembly	33
180915	X	X	X				Photocell and Component Board Assembly	14
180917	X	X	X	X	X	X	Focus Shaft Assembly (Complete)	20
180920	X		X		X		Lamphouse Door Assembly	12
180932			X				Nameplate - Rear	38
180937	X	X	X	X	X	X	Gear - Focus clutch	20
180938	X	X	X	X	X	X	Gear - Rack clutch	20
180991	X	X	X	X	X	X	Frame - Light	32
181024			X				Insulator - Component Board (A.R.)	14
181027	X	X	X	X	X	X	Spring - Rack	10,11
181029	X		X		X		Motor Assembly	34
181074	X	X	X	X	X	X	Knob - Focus	16,18
181086	X	X	X	X	X	X	Screw - Foot, lamphouse door	9,12
181376	X	X	X	X			Cord - Remote	3
181579			X				Nameplate - Front	38
181770	X	X	X	X	X	X	Housing - Cell assembly	25
182008	X	X	X	X	X	X	Mask - Filter	25
182013	X	X	X	X	X	X	Bracket - Base cover	10,11
182014	X	X	X	X	X	X	Baffle - Bottom, air	34
182026	X		X		X		Ejector - Lamp	12
182441	X	X	X	X	X	X	Grommet and Mount Assembly	23
182795	X		X		X		Socket Assembly (Auto-Focus rack)	32
183108	X	X	X	X	X	X	Spring	33
183116	X		X		X		Baffle - Stray light	12
183397	X	X	X	X	X	X	Wall	14,15
183398	X	X	X	X	X	X	Cover - Component board	14,15
183473		X		X		X	Washer - Rack stud	13
183612	X	X	X	X	X	X	Screw - Cell housing	25
183744	X		X		X		Label - Storage door	6
183819	X	X	X	X	X	X	Shutter	32
183980	X	X	X	X	X	X	Spring	32
184389	X	X	X	X			Plug - Cord	35
184396	X	X	X	X	X	X	Lever - Select	23
184487	X	X	X	X	X	X	Grommet - Solenoid	16,17,23
184612	X	X	X	X	X	X	Spring - Slide lever	27,29
184613	X	X	X	X	X	X	Lever - Cam detent	27,29
184867	X	X	X	X	X	X	Bearing - Mechanism Assembly	27,29
184927					X	X	Remote Control Assembly	4
184929					X	X	Contact Assembly - Remote cord	4
185092	X	X	X	X	X	X	Connector - Wire	10,11
185202	X	X	X	X	X	X	Slide Lever Mount Assembly	27,29
185230	X	X	X	X	X	X	Ring - Slide tray	1
185368	X	X	X	X	X	X	Focus Rack Assembly	32
185370			X		X		Mechanism Assembly	21
185372					X	X	Solenoid Bracket Assembly	18
185373	X	X	X	X	X	X	Bracket and Grommet Assembly	16,17
185375					X	X	Bracket Assembly	18

Part No.	MODELS 760	760H	850	850H	860	860H	Part Name	Fig
185376					X	X	Rack Lock Cam Assembly	19
185378					X	X	Insert Stud Assembly	19
185586	X	X	X	X	X	X	Lens Mount	18
185587	X	X	X	X			Bracket - Lens mount	18
185628				X	X		Stud	19
185630					X	X	Cord - Auto, remote	4
185631					X	X	Plug - Cord	35
185635		X		X		X	Springwasher - Lamp stud	13
185636					X	X	Nameplate - Remote	4
185637					X	X	Screw - Remote solenoid	17
185638					X		Nameplate - Front	38
185639					X		Nameplate - Rear	38
185682					X	X	Stop Arm Rack Assembly	19
185683					X	X	Remote Solenoid Assembly	17,19
185736	X	X	X	X	X	X	Shaft - Elevating (AR)	14,15
185820	X	X	X	X	X	X	Bracket - Elevating	14,15
185822	X	X	X	X	X	X	Screw - Elevating foot	7,8
185837	X		X		X		Latch - Slide tray	2
185949	X	X	X	X	X	X	Baffle - Blower	34
186043					X	X	Screw - Insert, stud	19
186083					X	X	Photocell and Component Board Assembly	15
186212	X		X		X		Baffle - Heat	12
186216	X		X		X		Baffle - Gate	24
186278	X	X	X	X	X	X	Photocell Assembly	25
186514					X	X	Housing - Remote cord (top)	4
186530					X	X	Pad - Rack lock	19
186531					X	X	Spring - Rack lock	19
186532					X	X	Spring - Rack lock	19
186605	X	X	X	X	X	X	Rail - Lens	18
186637	X	X	X	X	X	X	Capacitor Assembly	10,36,37
186980					X	X	Washer - Solenoid bracket	17
187010	X						Grille Assembly	36
187014			X				Grille Assembly	36
187016					X		Grille Assembly	36
187809	X	X	X	X	X	X	Lamp - Focus rack	32
187812	X	X	X	X	X	X	Focus Motor Assembly	16,17
188332	X	X	X	X	X	X	Pin - Shutter	32
189976	X						Nameplate - Front	38
189977	X						Nameplate - Rear	38
190275	X						Mechanism Assembly	21
190442	X	X	X	X	X	X	Screw	22
191960				X		X	Lever - Timer	11
191961				X		X	Link - Timer	11
191965		X		X		X	Pin - Lamphouse door	9
191977		X		X		X	Ejector - Lamp	13
191983				X			Nameplate - Rear	38
191984				X			Nameplate - Front	38
191985				X		X	Resistor - Dropping	34
192114		X		X		X	Housing and Fan Shaft Assembly	35
192448		X		X		X	Lens Retainer Assembly	13
192481				X		X	Blower Cover Assembly	34
192482		X		X		X	Storage Door Assembly	6
192483		X		X		X	Lamphouse Door Assembly	9
192485		X		X		X	Motor Assembly	34
192486				X			Grille Assembly	36
192487		X		X		X	Mirror and Bracket Assembly	13

Part No.	MODELS 760	760H	850	850H	860	860H	Part Name	Fig.
192495				X		X	Mechanism Assembly	21
192516		X		X		X	Leveling Knob Assembly	7,8
192745	X		X		X		Socket - Lamp	12
192762		X					Grille Assembly	36
192771		X					Mechanism Assembly	21
192773		X					Nameplate - Front	38
192774		X					Nameplate - Rear	38
192779						X	Nameplate - Front	38
192780						X	Nameplate - Rear	38
192783						X	Grille Assembly	36
192794		X		X		X	Switch Baffle Assembly	37
193217		X		X		X	Socket - Lamp	13
193235		X		X		X	Lamp Bracket and Mirror Assembly	13
195276	X	X	X	X	X	X	Power Cord Assembly	1
195281	X		X		X		Label - Lamp	6
195779		X		X		X	Baffle - Stray light	13
196469	X	X	X	X	X	X	Knob - Elevation	14,15
197151	X	X	X	X	X	X	Foot - Projector	7,8
197468	X	X	X	X	X	X	Shaft - Elevating (AR)	14,15
202483	X	X	X	X	X	X	Spring - Crank	31
202945		X		X		X	Label - Lamp	6
203762	X		X		X		Base Cover Assembly	7
203764		X		X		X	Base Cover Assembly	8
204620			X	X	X	X	Cam Shaft Assembly	29,30
625182	X	X	X	X	X	X	Front Condenser Lens	12,13
625267	X	X	X	X	X	X	Filter - WRATTEN	25
625887	X	X	X	X	X	X	Glass - Heat absorbing	12,13
761747	X	X	X	X	X	X	Handle - Complete	42
761748	X	X	X	X	X	X	Catch - Complete	42
835595	X		X		X		Lens - Rear	12
850254	X	X	X	X	X	X	Washer - Cam shaft	28,29,30
851502	X		X		X		Screw - Slide tray	2
871469	X	X	X	X	X	X	Wire - Tie	10,11

Order by PART NUMBER, NAME, and EQUIPMENT MODEL.

KODAK, CAROUSEL, EKTANON, EKTANAR and WRATTEN are trademarks.

Customer Equipment Services Division

EASTMAN KODAK COMPANY • ROCHESTER, N. Y. 14650



14-2-74-A
Pub. Pt. No. 775410

Printed in the United States of America