




PARTS LIST

for the

***KODAK EKTAPRO* Slide Projector**

Model 3020, 4020, 5020, 7020, 9020, 9020 Cine

with ACCESSORIES



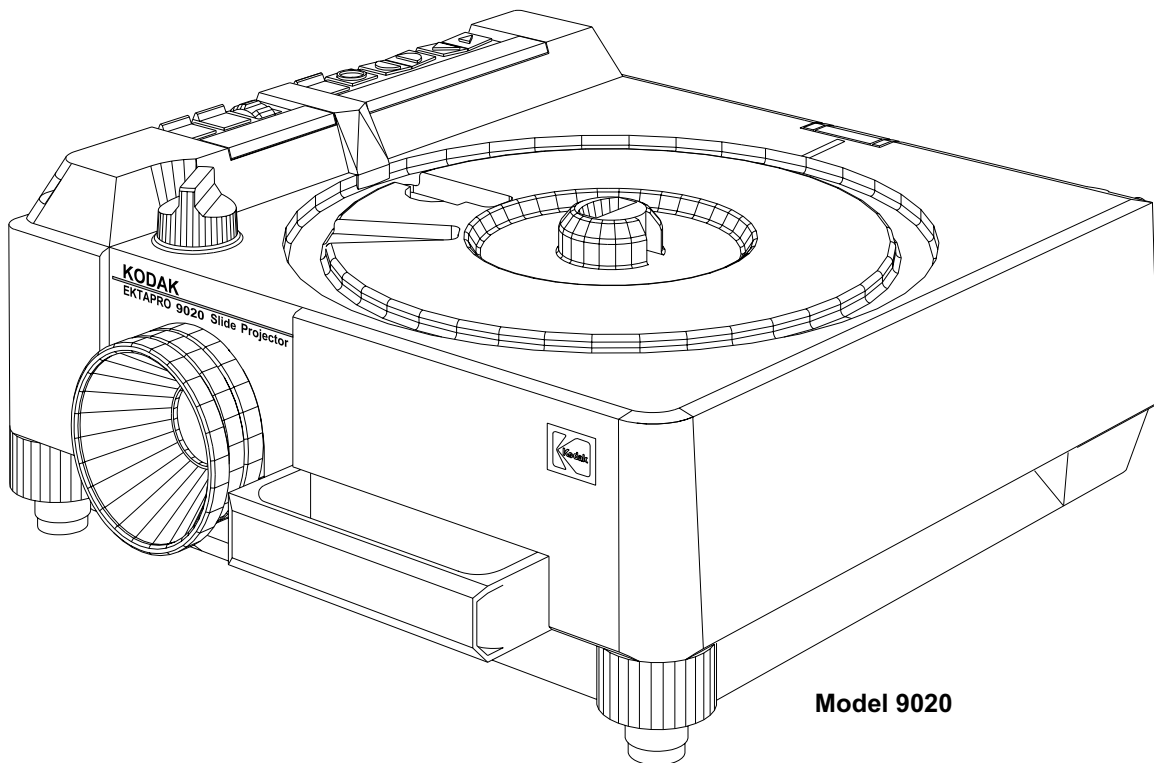





PLEASE NOTE




The information contained herein is based on the experience and knowledge relating to the subject matter gained by Kodak prior to publication. No patent license is granted by this information. Kodak reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from the use of this information, even if loss or damage is caused by Kodak's negligence or other fault.


TABLE OF CONTENTS

COMPONENT	PAGE
PARTS LIST	
UPPER HOUSING	1 - 2
BUTTONS	3 - 4
HOUSING CENTER	5 - 6
LENS MOUNT	7 - 8
RETAINER AF ASSEMBLY	9 - 10
SLIDE POSITIONING	11 - 14
POWER SUPPLY and KEYBOARD.....	15 - 18
BACK PLATE	19 - 22
LOWER HOUSING.....	23 - 26
LAMP MODULE	27 - 30
PARTS LIST - ACCESSORIES	
KODAK EKTAPRO 80 Slide Tray	31 - 32
KODAK EKTAPRO Cable Remote.....	33 - 34
KODAK EKTAPRO IR Remote System RA, RA/LP and IR Remote Receiver RA.....	35 - 36
KODAK EKTAPRO 7/12 PIN Module and 7/12 PIN Adapter Cable	37 - 37
KODAK EKTAPRO Twin Socket Adapter	39 - 40
Cable Assy and Wires for EKTAPRO Projectors 3020 - 9020.....	41
ALPHANUMERICAL PARTS LIST.....	44
NUMERICAL PARTS LIST	54

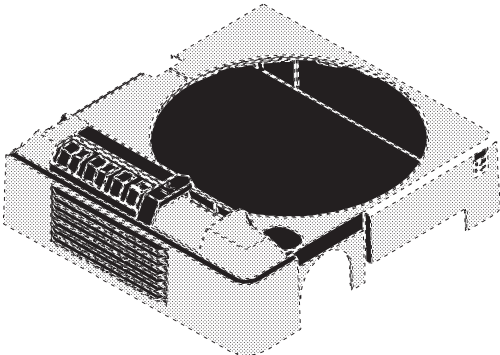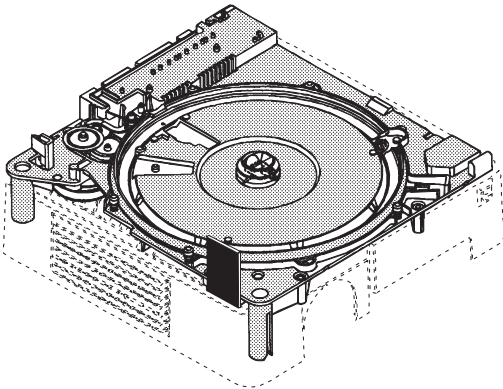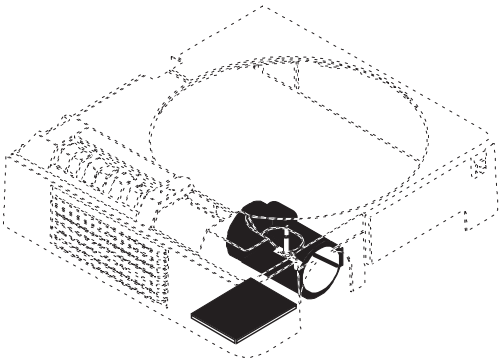
		Page
	Upper Housing	1, 2
	Buttons	3, 4
	Center Housing	5, 6
	Transport Stepper Motor	
	PCB Tray Motion	
	Lens Mount, Shutter, Magnet	7, 8
	Autofocus	9, 10

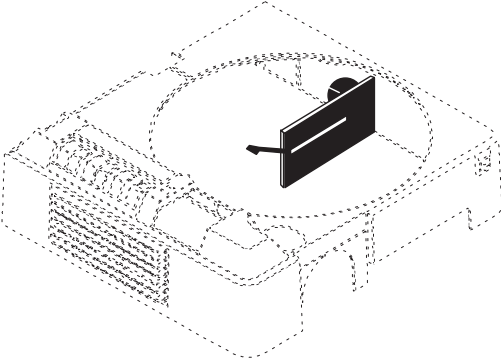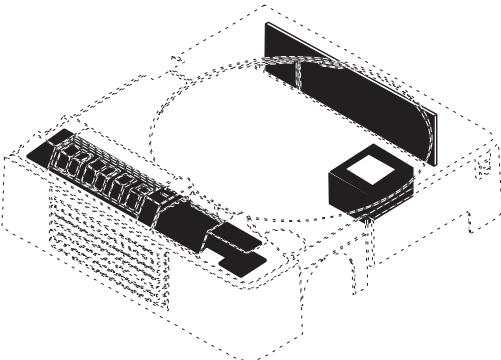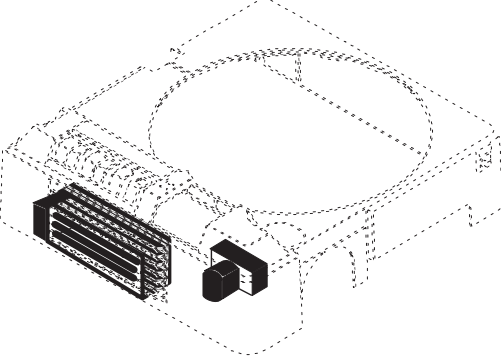		Page
	Frame Mechanism	11, 12
	Cam and Shuttle Sensor Assy	
	Cam and Levers	13, 14
	PCB Keyboard	15, 16
	PCB Power Supply	
	Transformer	
	Focus-Motor,Fan	17, 18

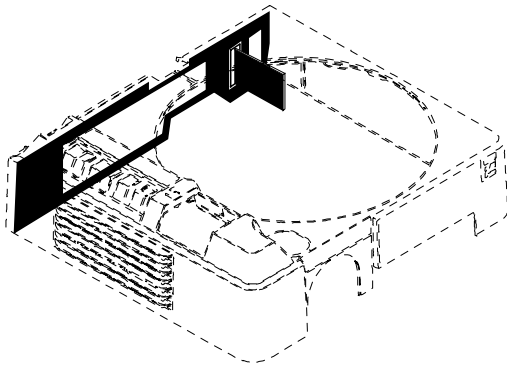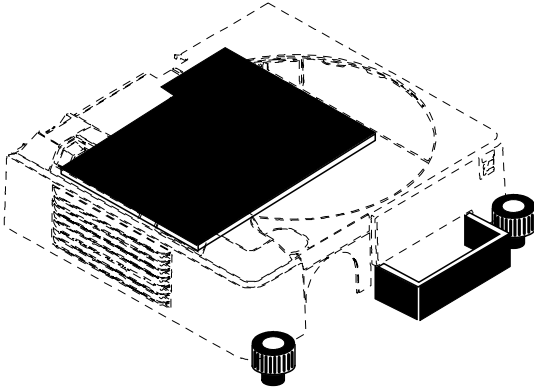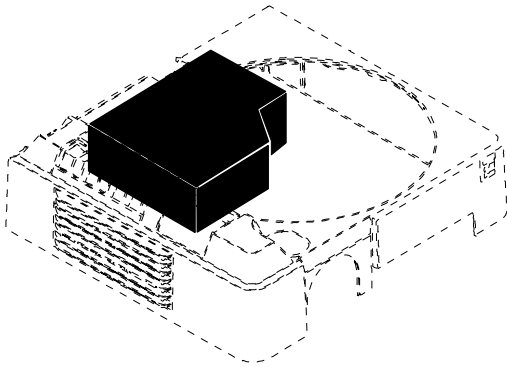
		Page
	PCB Back Panel	19,20
	Back Plate	
	Power Cord Fuses	21,22
	12/7 Pin Module	37,38
	PCB Masterboard	23,24
	Microcontroller	
	Elevator	25,26
	Rating Label	
	Handle Lower Housing	
	Lamp Module	27,28
	Condensor Lens	29,30

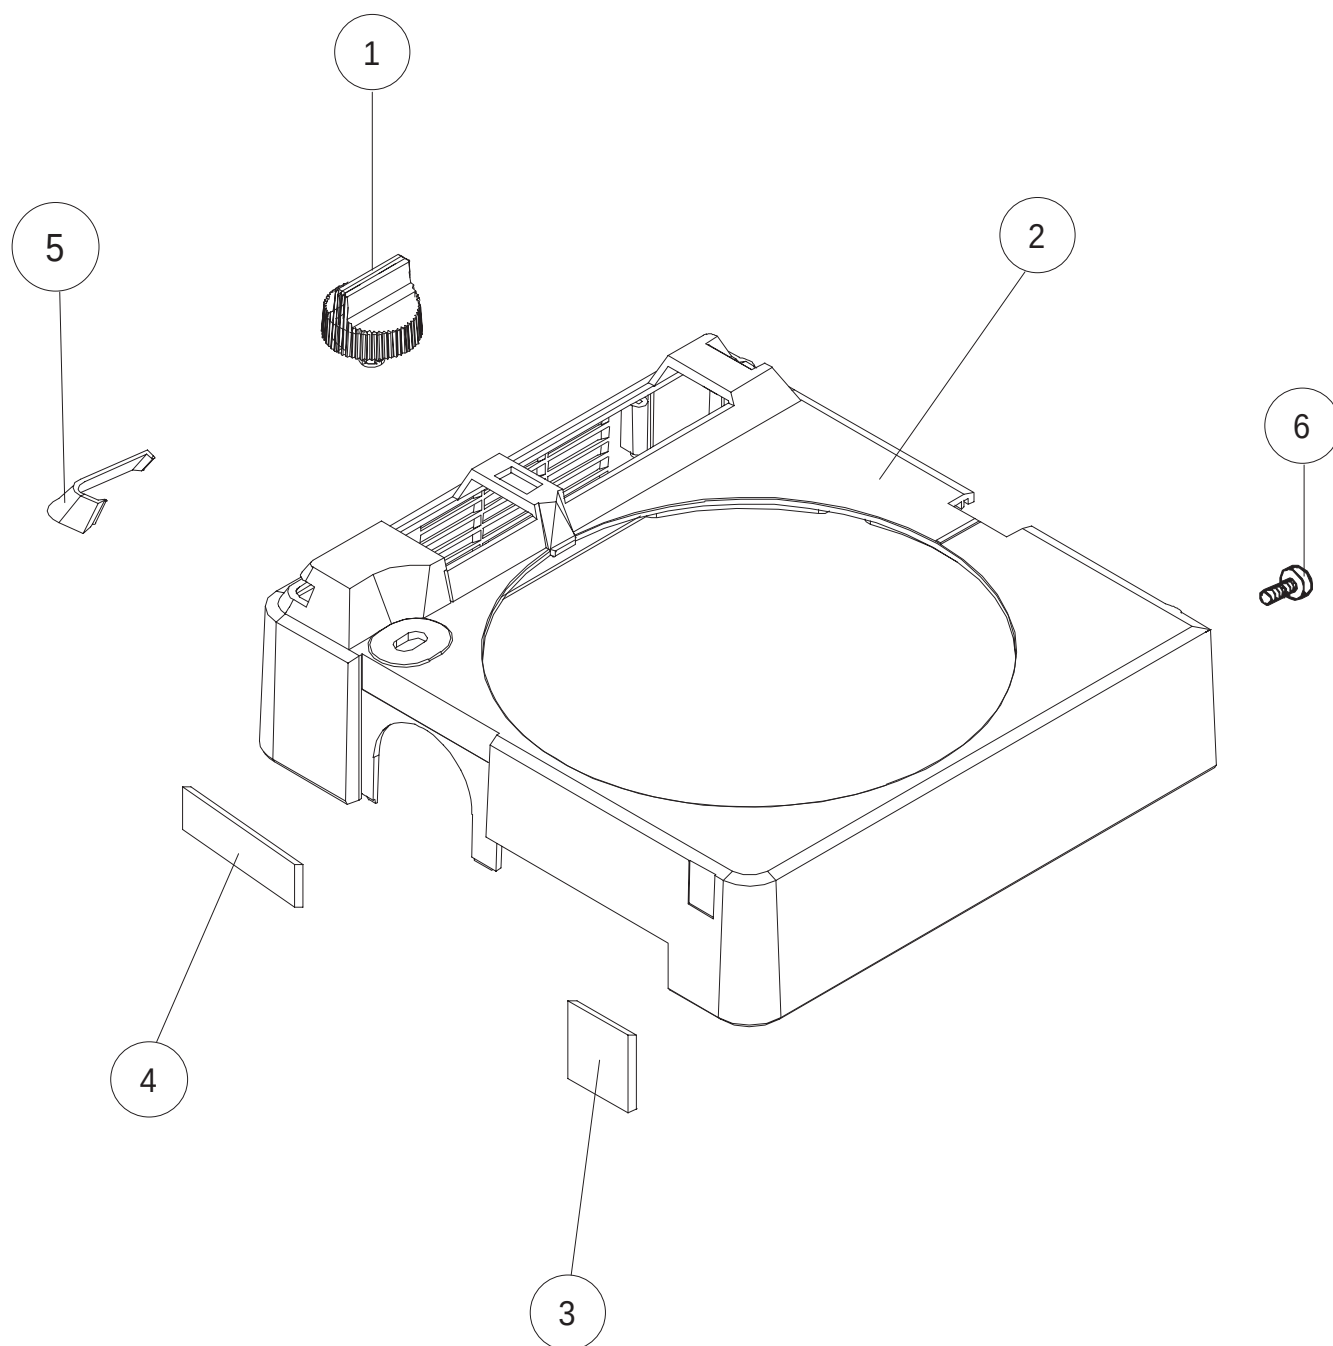


No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C	Part No.	Description	Quantity
1	•	•	•	•	•		6200701	Knob	1
2	•	•	•	•	•		6202254	Housing - Upper	1
3	•	•	•	•	•		4901411	Symbol - Corporate	1
4	•						6203031	Label - Model	1
		•					6204022	Label - Model	1
			•				6205022	Label - Model	1
				•			6207022	Label - Model	1
					•		6209022	Label - Model	1
5	•	•	•	•	•		6202031	Window	1
6	•	•	•	•	•		4302421	Screw	2

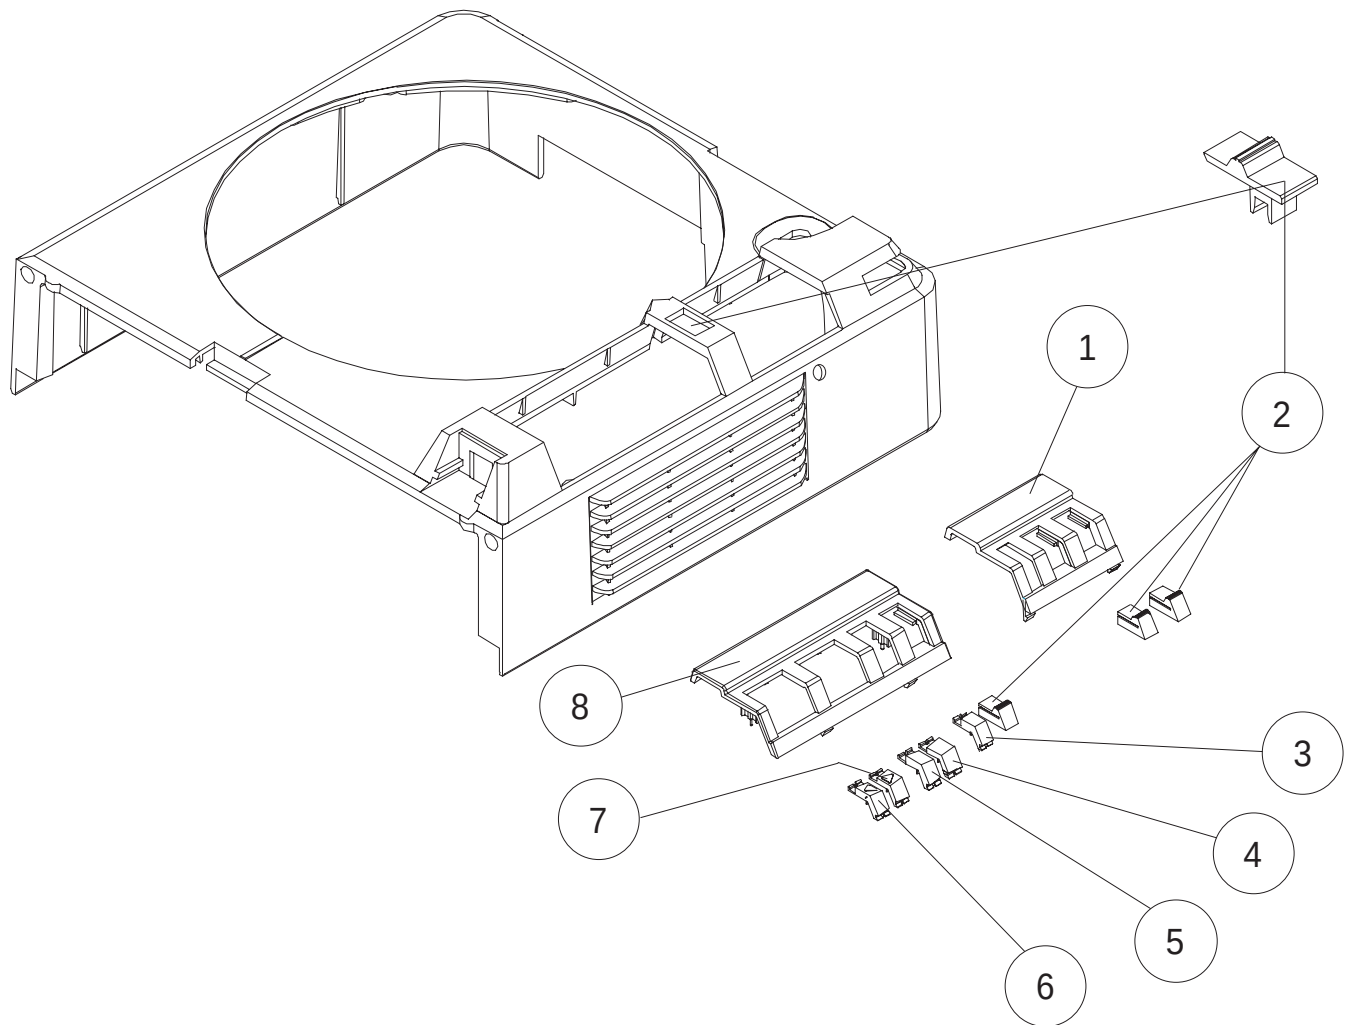

No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C	Part No.	Description	Quantity
1	•	•		•			6202071	Plate - Cover	1
			•				6205102	Plate - Cover	1
					•		6208102	Plate - Cover	1
2	•	•		•			6202181	Button	1
			•				6202181	Button	2
					•		6202181	Button	3
	•	•	•	•	•		6202191	Button -Tray Switch	1
3	•	•	•	•	•		6202171	Button - Stand-by	1
4	•	•	•	•	•		6202141	Button - Forward Focus	1
5	•	•	•	•	•		6202131	Button - Reverse Focus	1
6	•	•	•	•	•		6202161	Button - Forward	1
7	•	•	•	•	•		6202151	Button - Reverse	1
8	•	•	•	•	•		6202062	Plate - Cover	1
8				•			6207722	Plate - Cover, Korea	1

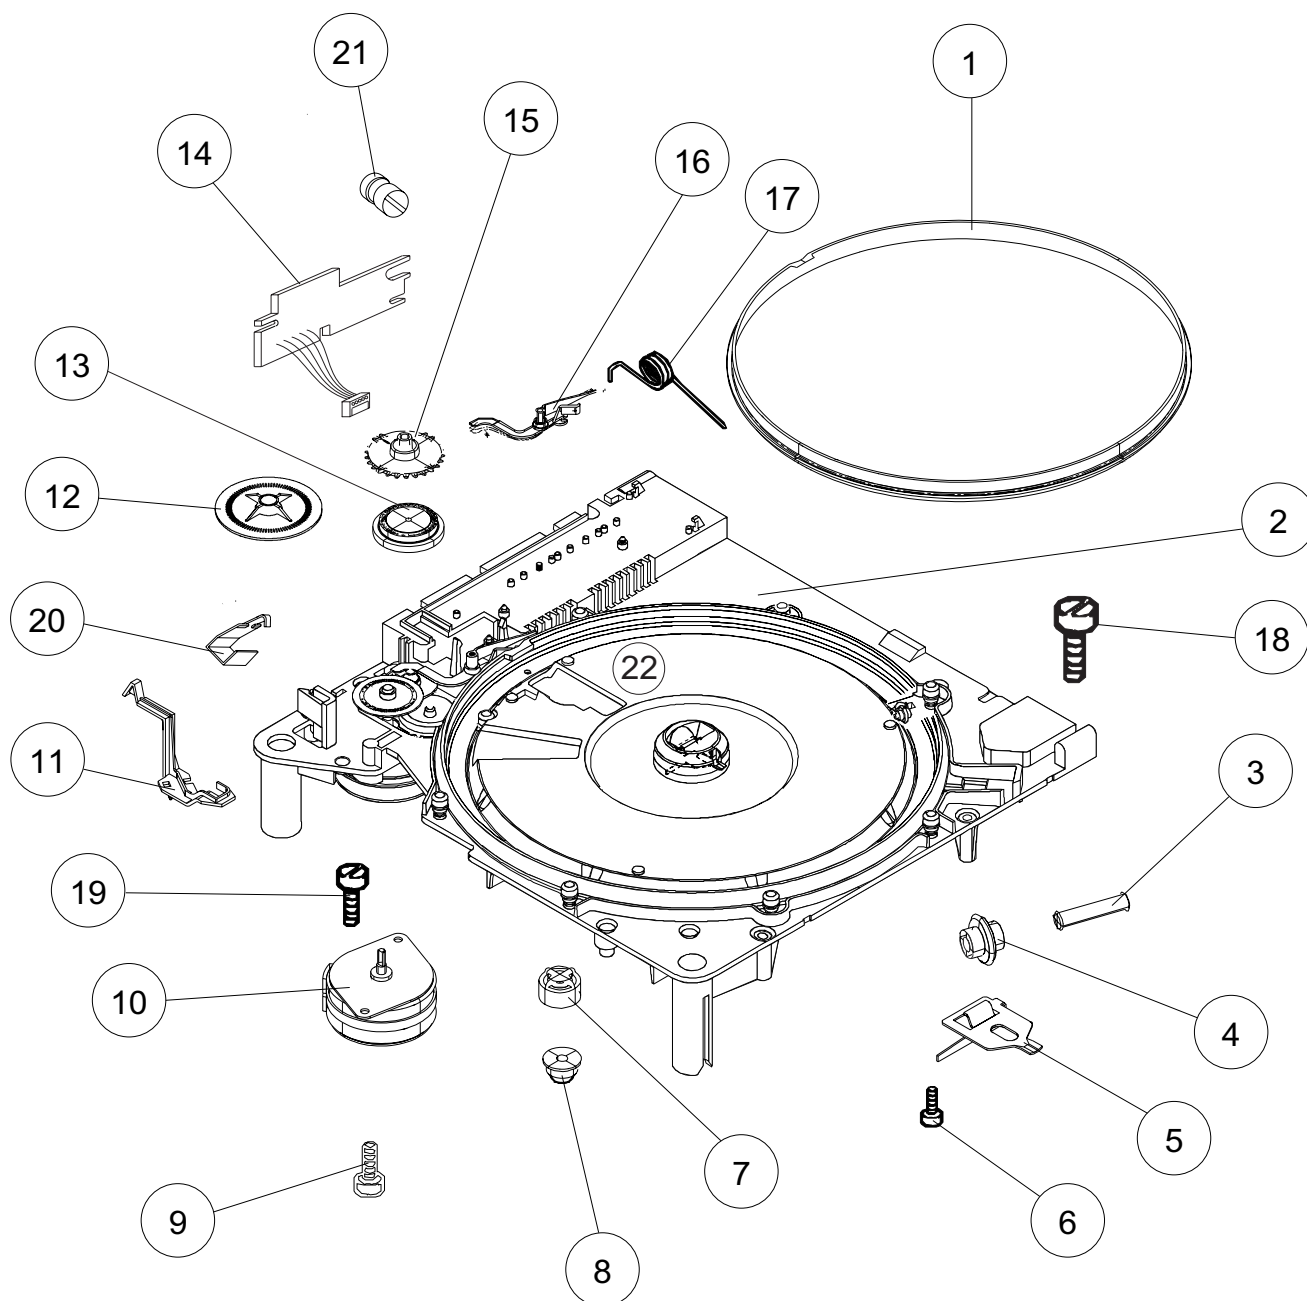


No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C	Part No.	Description	Quantity
1	•	•	•	•	•		6200824	Ring - Drive	1
2	•	•	•	•	•		6200804	Housing - Center (with clip)	1
3	•	•	•	•	•		4719391	Roller - Shaft	3
4	•	•	•	•	•		6200871	Roller - Bearing	3
5	•	•	•	•	•		6200922	Latch	1
6	•	•	•	•	•		4302411	Screw	1
7	•	•	•	•	•		6200911	Retainer	8
8	•	•	•	•	•		6200931	Roller	8
9	•	•	•	•	•		4302421	Screw	2
10	•	•	•	•	•		6217364	Motor	1
11	•	•	•	•	•		6200811	Indicator - Focus	1
12	•	•	•	•	•		6201881	Disk - Coder Serial No. 118 500 and above	1
13	•	•	•	•	•		6200861	Wheel - Gear	1
14	•	•	•	•	•		6210824	PCB - Tray Motion	1
15	•	•	•	•	•		6200971	Wheel - Gear	1
16	•	•	•	•	•		6201521	Lever - Zero (new style)	1
17	•	•	•	•	•		6200631	Spring (new style)	1
18	•	•	•	•	•		4301911	Screw	2
19	•	•	•	•	•		4302361	Screw	2
20	•	•	•	•	•		6201871	Clip	1
21	•	•	•	•	•		6201861	Eccentric	2
22				•	•		6205451	Warning Label	1

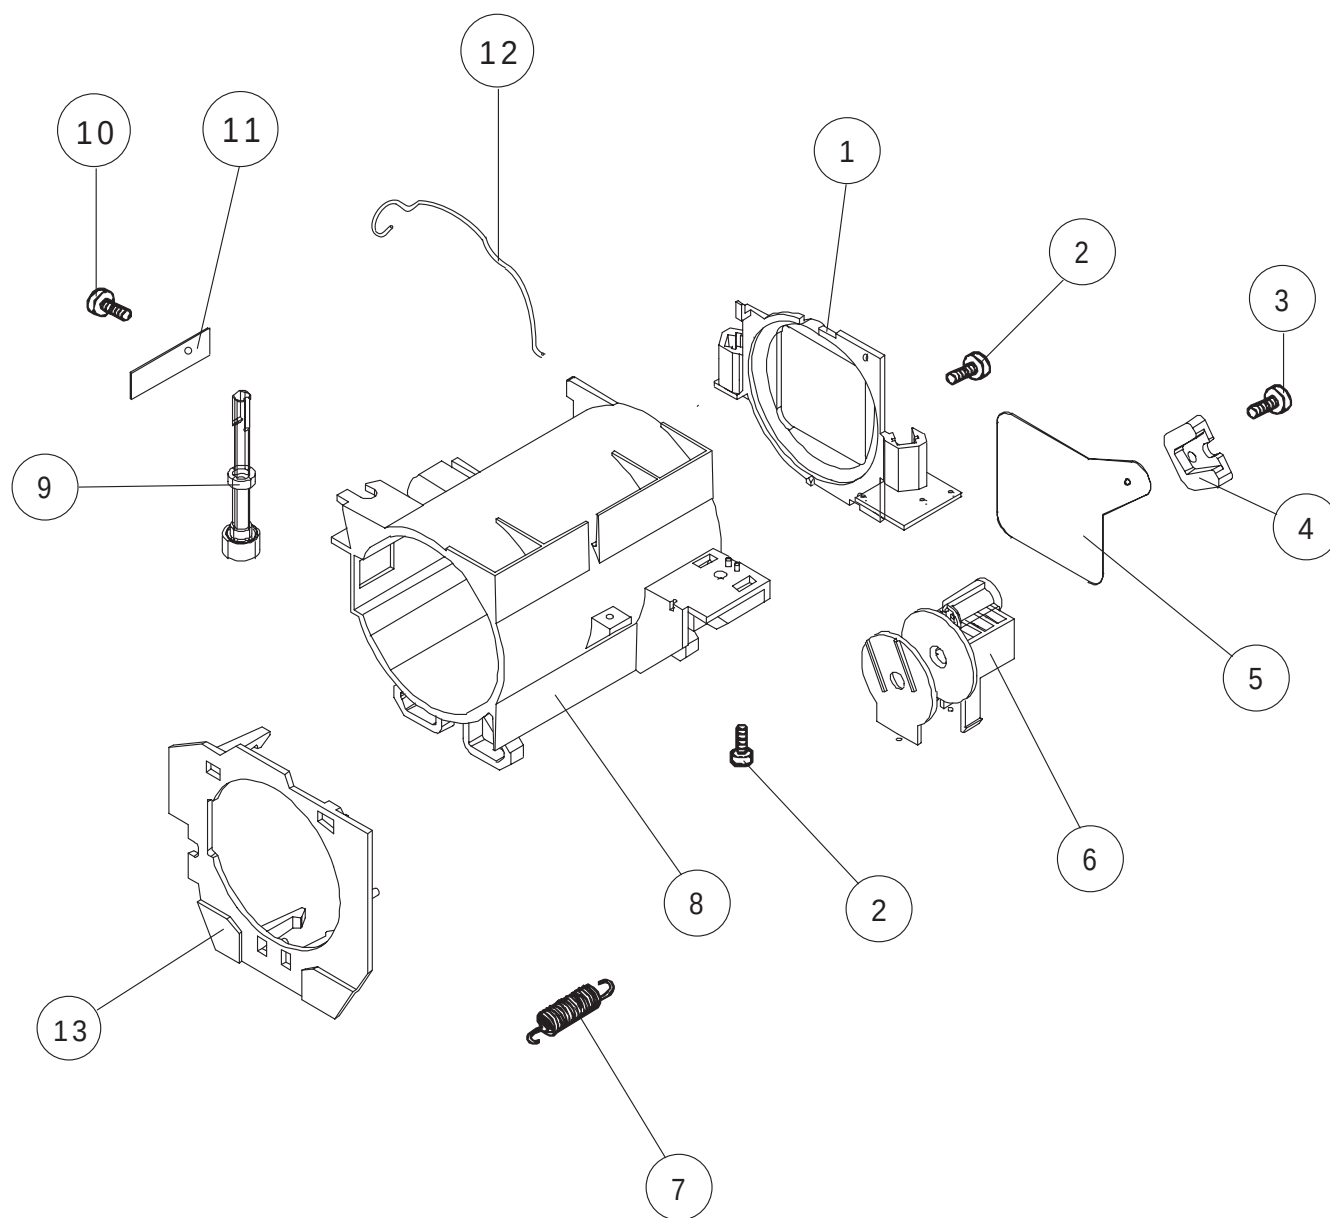


	3	4	5	7	9	A						
	0	0	0	0	0	0						
	2	2	2	2	2	2						
	0	0	0	0	0	0						
No.							Part No.	Description				Quantity
1	▪	▪	▪	▪	▪	▪	6200751	Retainer - AF				1
2	▪	▪	▪	▪	▪	▪	4301881	Screw.				2
	▪	▪	▪	▪	▪	▪	4301881	Screw.				3
3	▪	▪	▪	▪	▪	▪	4302541	Screw.				1
4	▪	▪	▪	▪	▪	▪	6200741	Absorber- Shock				1
5	▪	▪	▪	▪	▪	▪	6201674	Shutter				1
6	▪	▪	▪	▪	▪	▪	6217624	Magnet.				1
7	▪	▪	▪	▪	▪	▪	6200721	Spring.				1
8	▪	▪	▪	▪	▪	▪	6200502	Mount - Lens*				1
	▪	▪	▪	▪	▪	▪	6200500	Mount - Lens**				1
9	▪	▪	▪	▪	▪	▪	6200691	Shaft.				1
10	▪	▪	▪	▪	▪	▪	4302381	Screw.				1
11	▪	▪	▪	▪	▪	▪	6200622	Plate.				1
12	▪	▪	▪	▪	▪	▪	6200531	Spring.				1
13	▪	▪	▪	▪	▪	▪	6201311	Baffle - Light				1

☞ * before serial No 136 317 xxxx for focus motor part No 621 7344


☞ **commencing serial No 136 317 xxxx for focus motor part No 621 7345

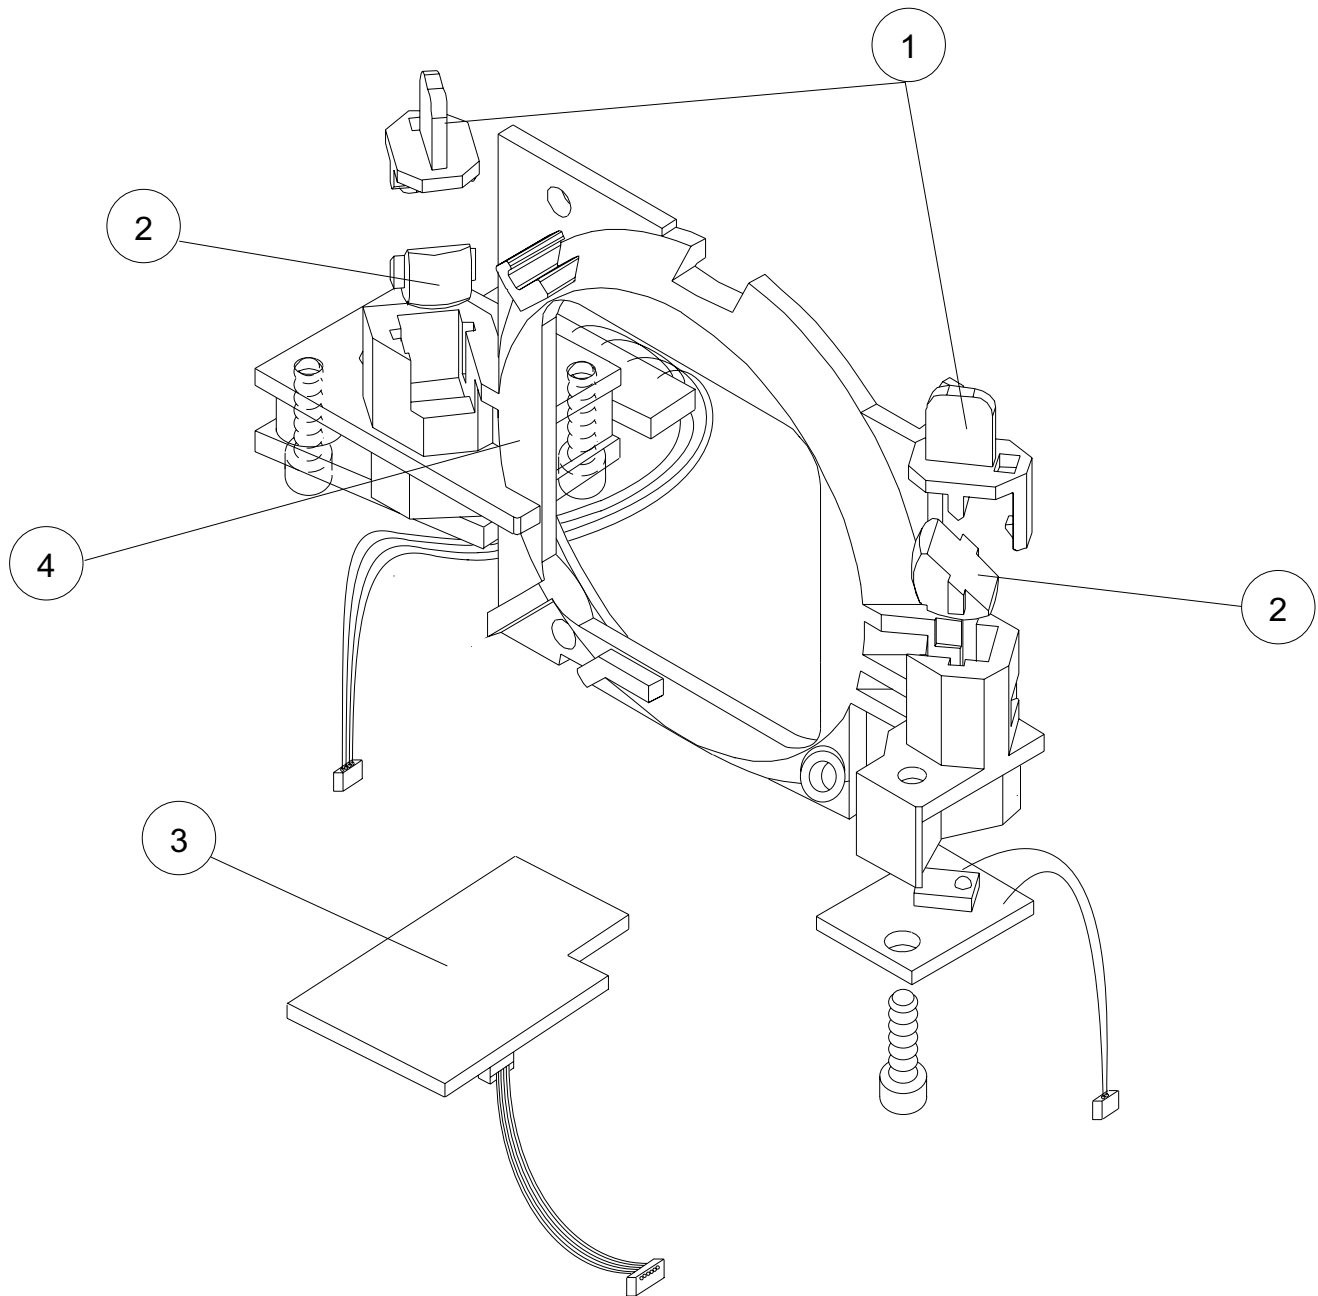

No.	3	4	5	7	9	A	Part No.	Description	Quantity
	0	0	0	0	0	C			
	2	2	2	2	2	C			
	0	0	0	0	0				
1			•		•		6205061	Cover - Prism	2
2			•		•		6150131	Prism	2
3			•		•		6210854	PCB - AF II	1
4			•		•		6205753	Retainer AF III Assembly	1

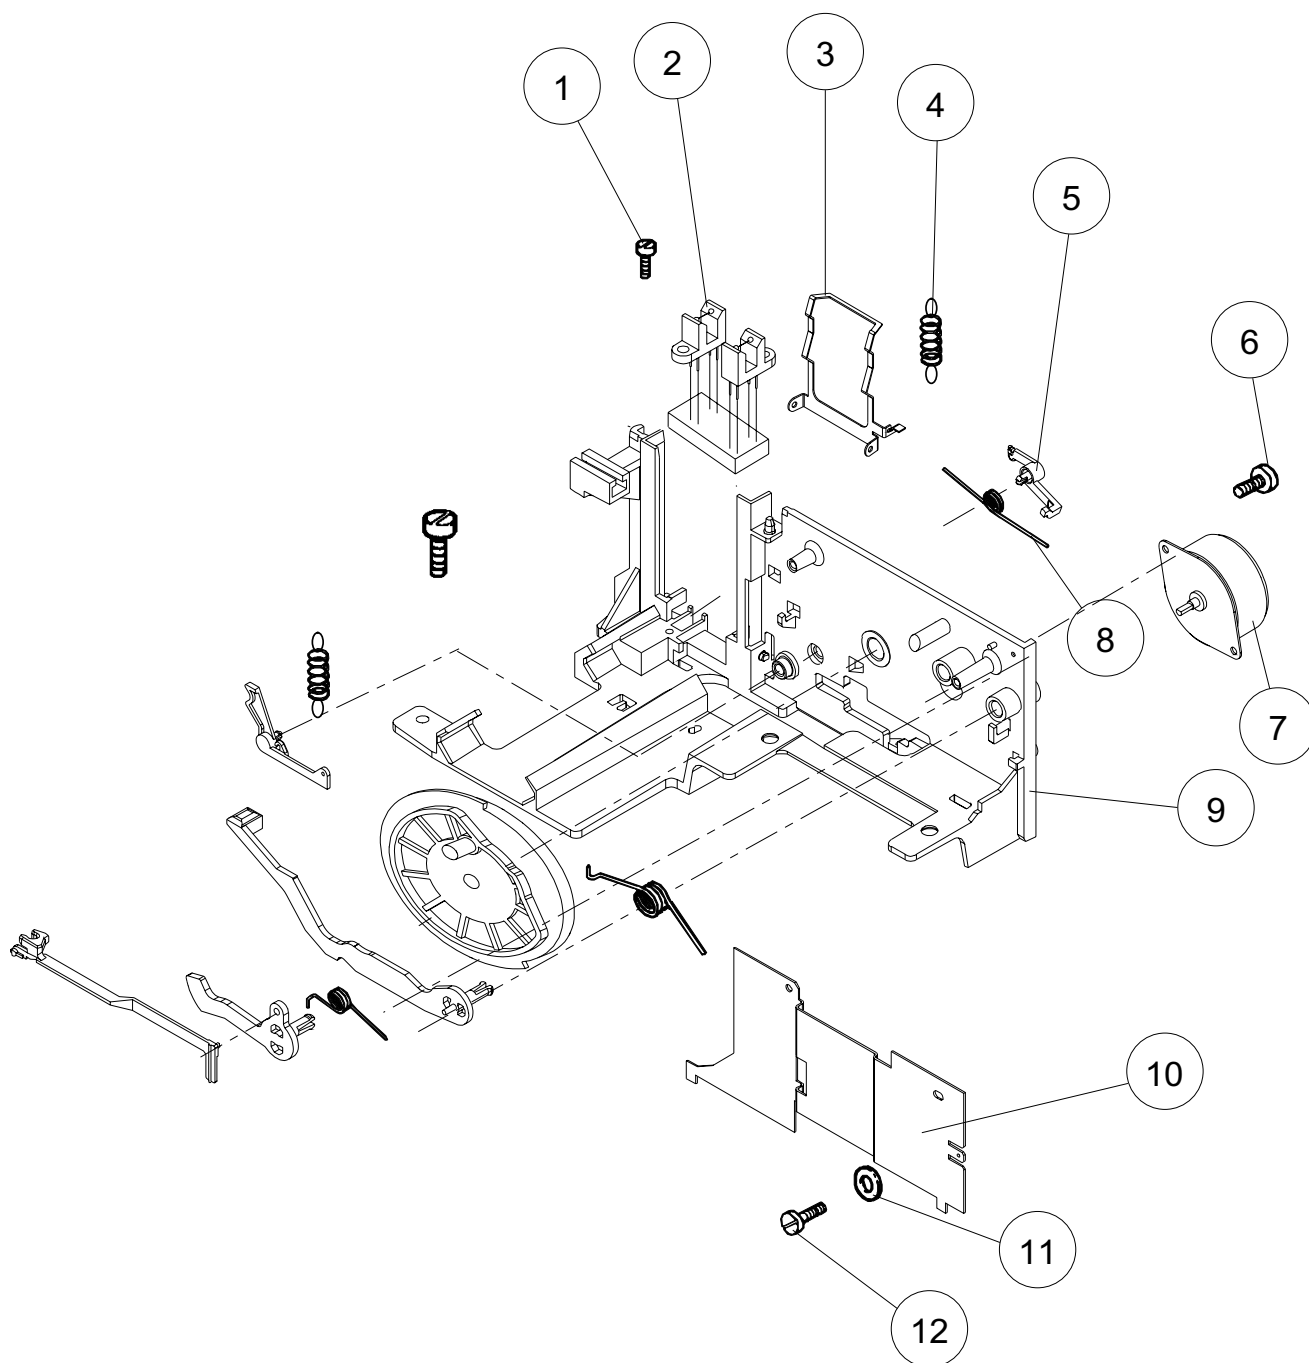


No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C	Part No.	Description	Quantity
1	•	•	•	•	•		4282851	Screw	2
2	•	•	•	•	•		6217094	Cam and Shutter Sensor Assembly	1
3	•	•	•	•	•		6200354	Pad - Pressure	1
4	•	•	•	•	•		6201541	Spring	1
5	•	•	•	•	•		6200381	Lever	1
6	•	•	•	•	•		4302491	Screw	2
7	•	•	•	•	•		6217584	Motor	1
8	•	•	•	•	•		6200281	Spring	1
9	•	•	•	•	•		6200295	Frame - Mechanism	1
10	•	•	•	•	•		6200262	Cover - Mechanism Frame	1
11	•	•	•	•	•		4485810	Washer	2
12	•	•	•	•	•		4282851	Screw	2

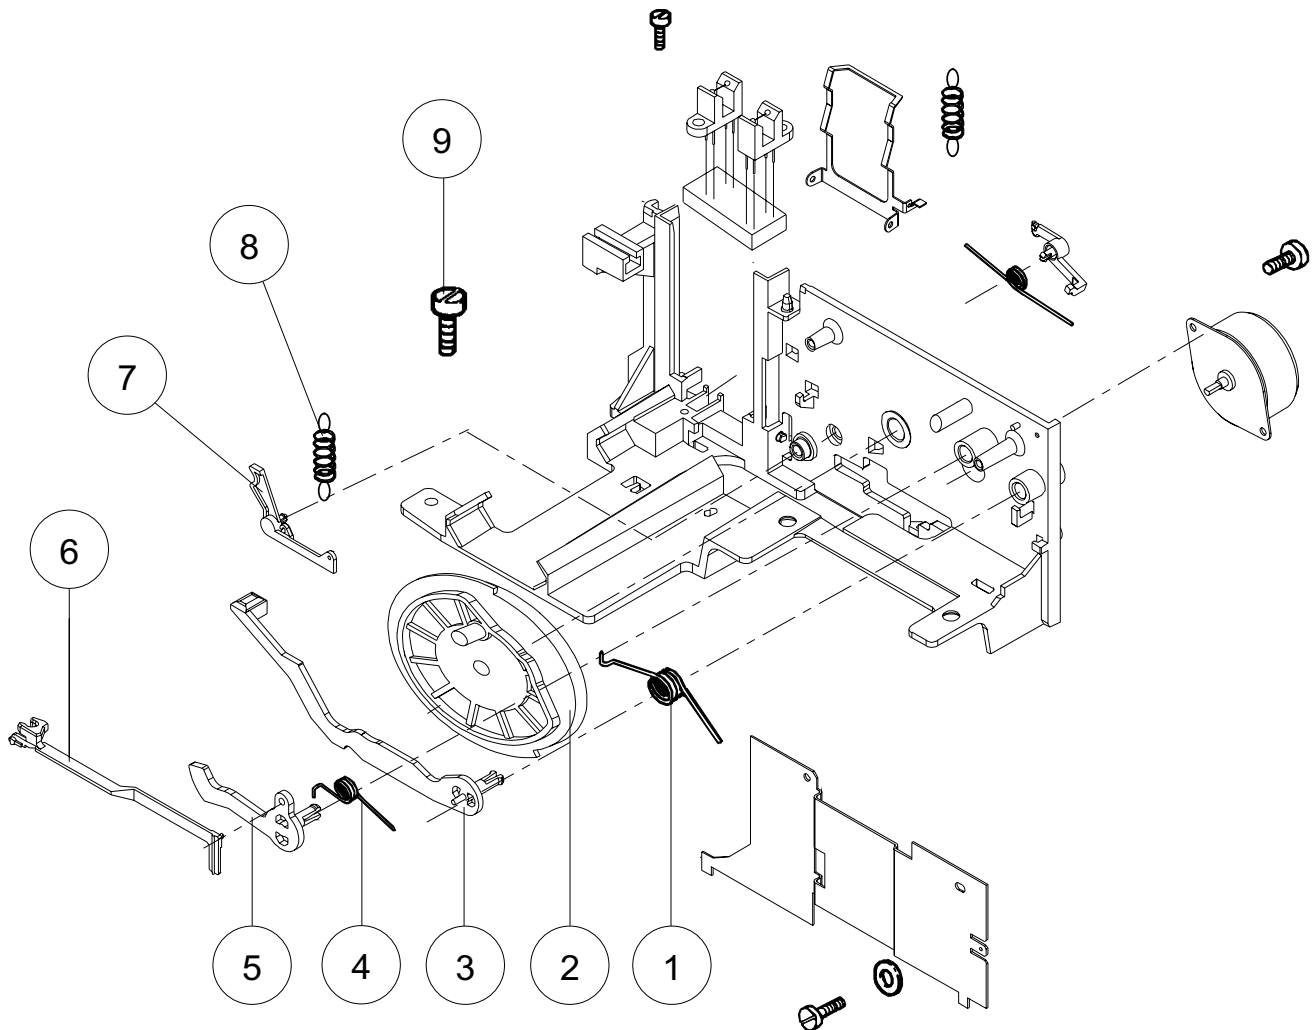

No.	3	4	5	7	9	A	Part No.	Description	Quantity
	0	0	0	0	0	C			
1	•	•	•	•	•	•	6201491	Spring	1
2	•	•	•	•	•	•	6200453	Cam	1
3	•	•	•	•	•	•	6200401	Lifter - Slide	1
4	•	•	•	•	•	•	6200371	Spring	1
5	•	•	•	•	•	•	6200471	Lever	1
6	•	•	•	•	•	•	6200271	Lever - Tray Release	1
7	•	•	•	•	•	•	6200331	Lever - Slide Regulation	1
8	•	•	•	•	•	•	6200341	Spring	1
9	•	•	•	•	•	•	4302421	Screw	1


No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C	Part No.	Description	Quantity
1	•	•	•	•	•		6210314	PCB - Keyboard	1
			•		•		6210414	PCB - Keyboard	1
					•		6210394	PCB - Keyboard	1
2	•	•	•	•	•		6200953	Lamp Housing Assembly	1
3				•	•		4282921	Screw	1
4				•	•		6217804	Socket	1
5				•	•		6207101	Adapter	1
6	•	•	•	•	•		4302421	Screw	2
7				•	•		6200031	Shield - Power Supply	1
8	•						6210704	PCB - Power Supply	1
		•	•	•	•		6210774	PCB - Power Supply for SMD	1
9	•	•	•	•	•		4301921	Screw	4
10	•						6217564	Transformer	1
		•	•	•	•		6217614	Transformer	1
	•	•	•	•	•		6217634	Transformer, Japan	1
11	•	•	•	•	•		4534441	Wire Ground 280mm (11inch)	1

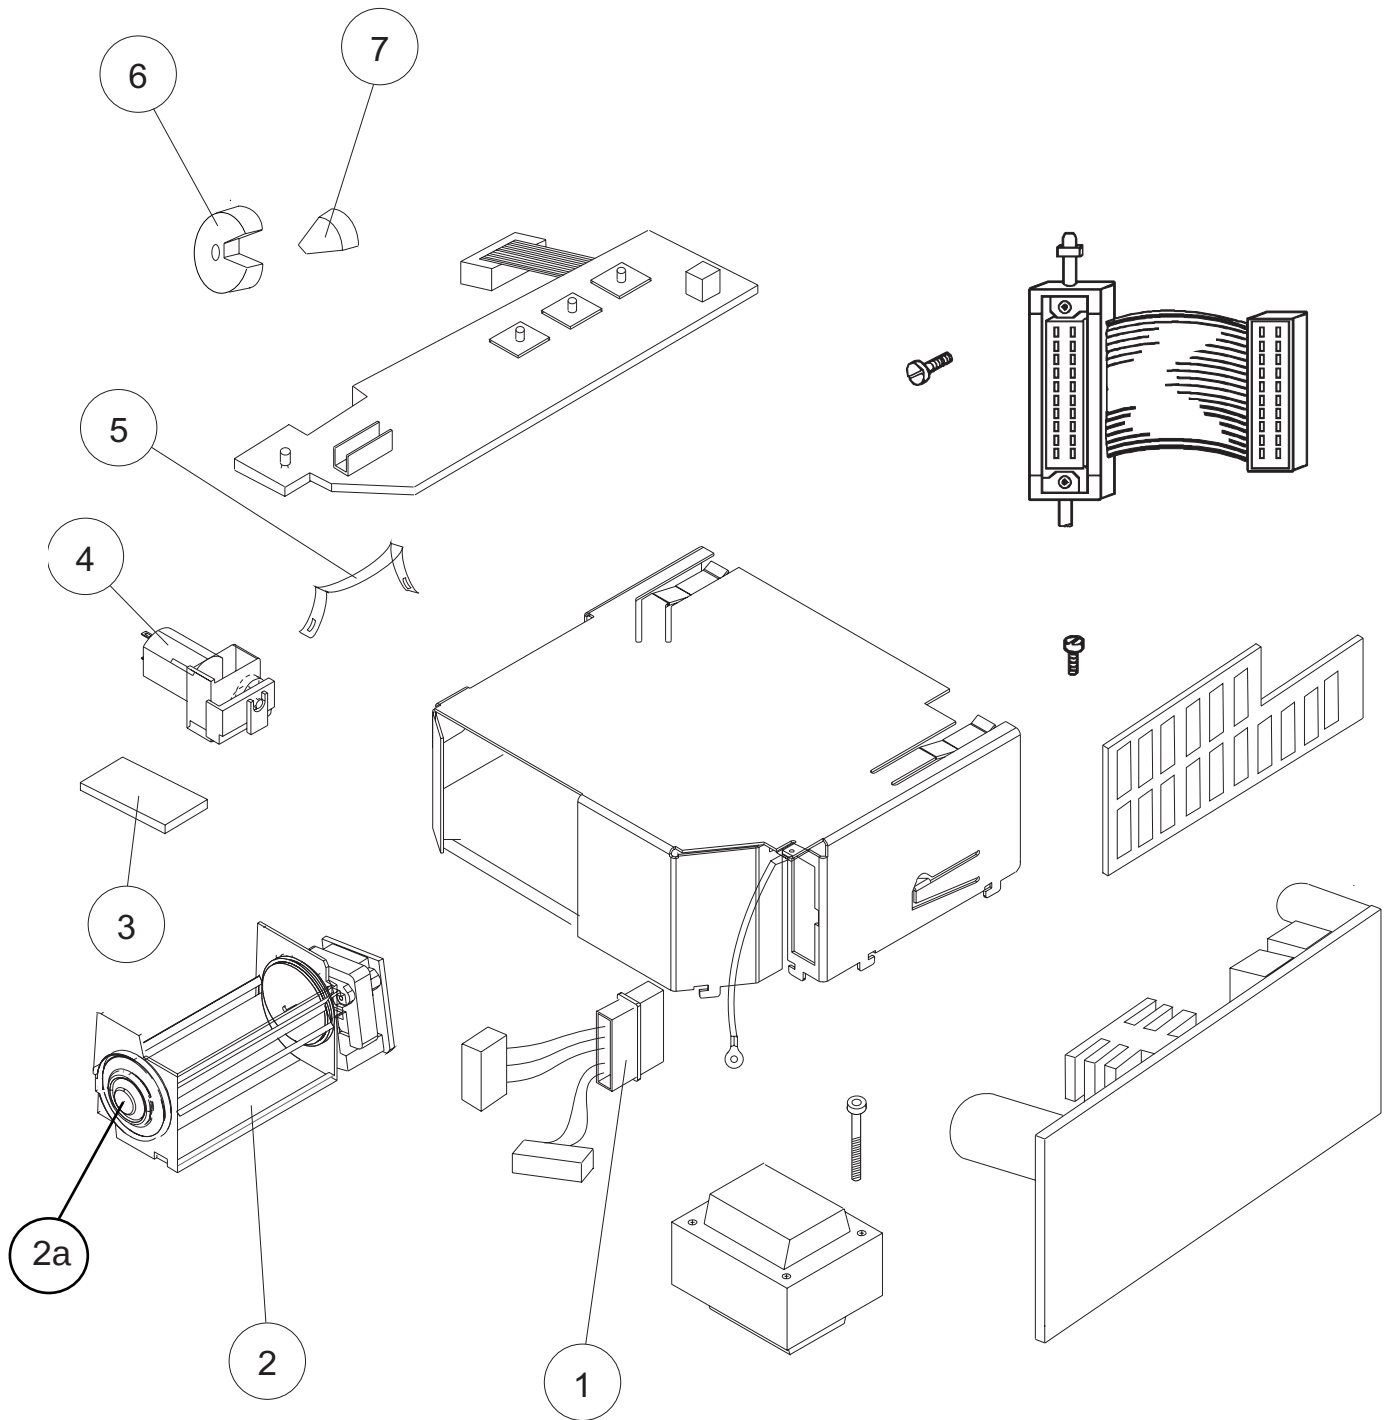


No.	3	4	5	7	9	A	Part No.	Description	Quantity
	0	0	0	0	0	C			
	2	2	2	2	2	C			
1	0	0	0	0	0		6217191	. . Single Socket Assembly.	1
		▪	▪	▪	▪		6217391	. . DualSocket Assembly.	1
2	▪	▪	▪	▪	▪		6217674	. . Fan.	1
2a	▪	▪	▪	▪	▪		G 9904591	. . Fan Bearing (Ball Bearing).. . . .	1
3	▪	▪	▪	▪	▪		6200041	. . Pad - Focusing Motor Rubber	1
4	▪	▪	▪	▪	▪		6217344	. . Motor - Focus*. ☞	1
	▪	▪	▪	▪	▪		6217345	. . Motor - Focus**. ☞	1
5	▪	▪	▪	▪	▪		6200481	. . Spring.	1
6			▪		▪		6205202	. . Timer	1
7			▪		▪		6205212	. . Timer	1

☞ *before serial No 136 317 xxxx for lens mount part No 620 0502


☞ **commencing serial No 136 317 xxxx for lens mount part No 620 0500

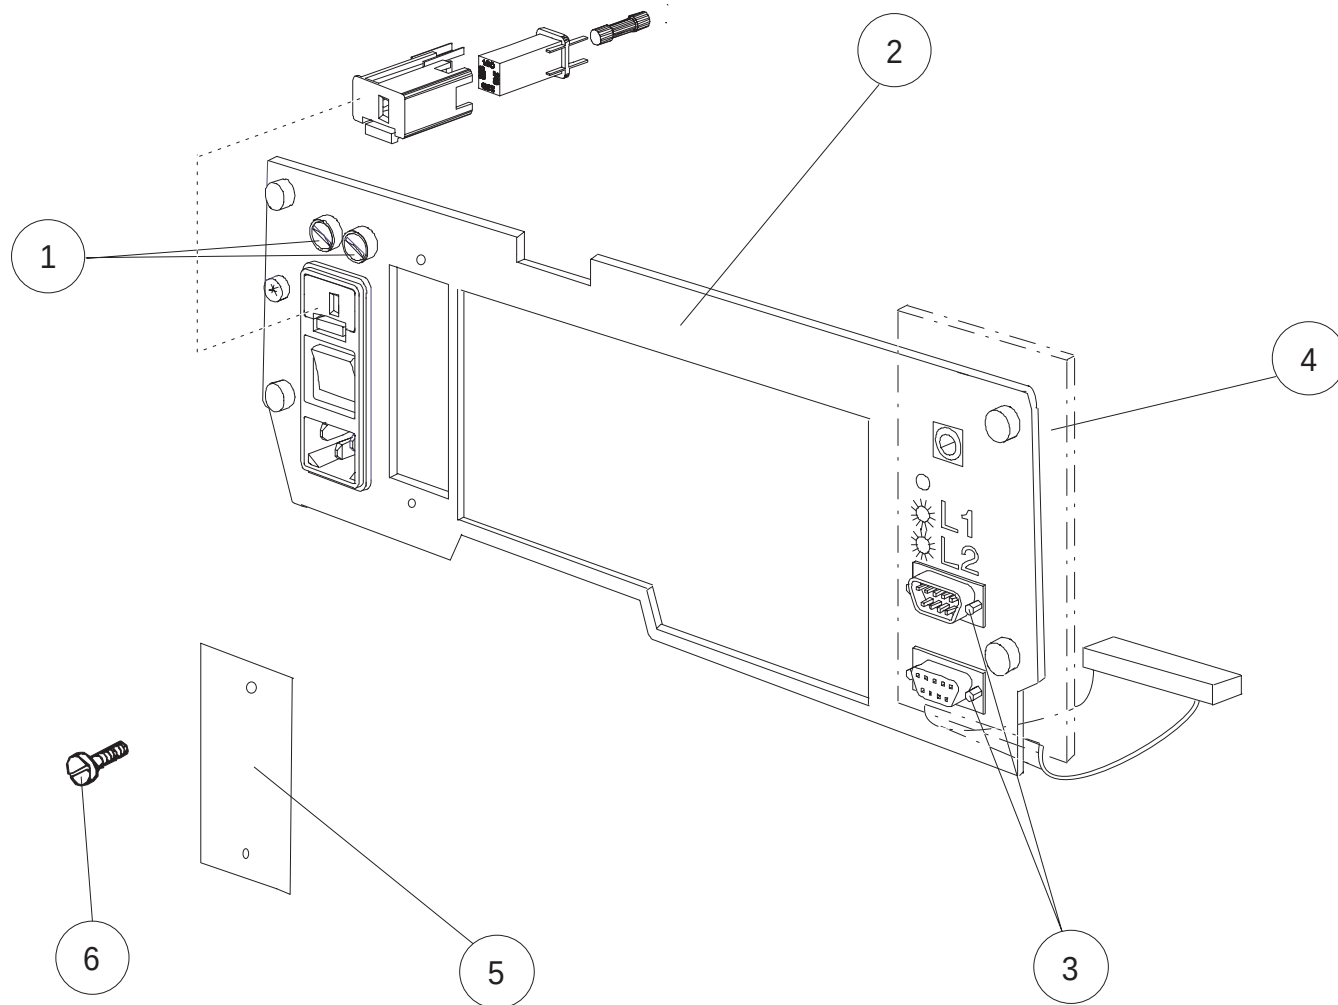


No.	3	4	5	7	9	A	Part No.	Description	Quantity
	0	0	0	0	0	C			
	2	2	2	2	2	C			
	0	0	0	0	0				
1	•	•	•	•	•		4535021	Fuse Holder Assembly	2
	•	•	•	•	•		4541051	Fuse T1.25A.	1
				•	•		4539891	Fuse T1.25A US and Canada	1
	•	•	•	•	•		4515691	Fuse T2,A.	1
				•	•		4541201	Fuse T2,8A US and Canada	1
2	•						6202100	Plate - Back	1
		•	•				6205300	Plate - Back	1
				•	•		6207300	Plate - Back	1
				•			6207710	Plate - Back, Korea	1
				•	•		6207901	Plate - Back, US (Label Fuse 2.8A)	1
3		•	•	•	•		6215061	Screw	2-4
4		•	•				6210504	PCB-Back Panel	1
				•	•		6210554	PCB-Back Panel	1
5				•	•		6207321	Cover	1
6				•	•		4283671	Screw	2

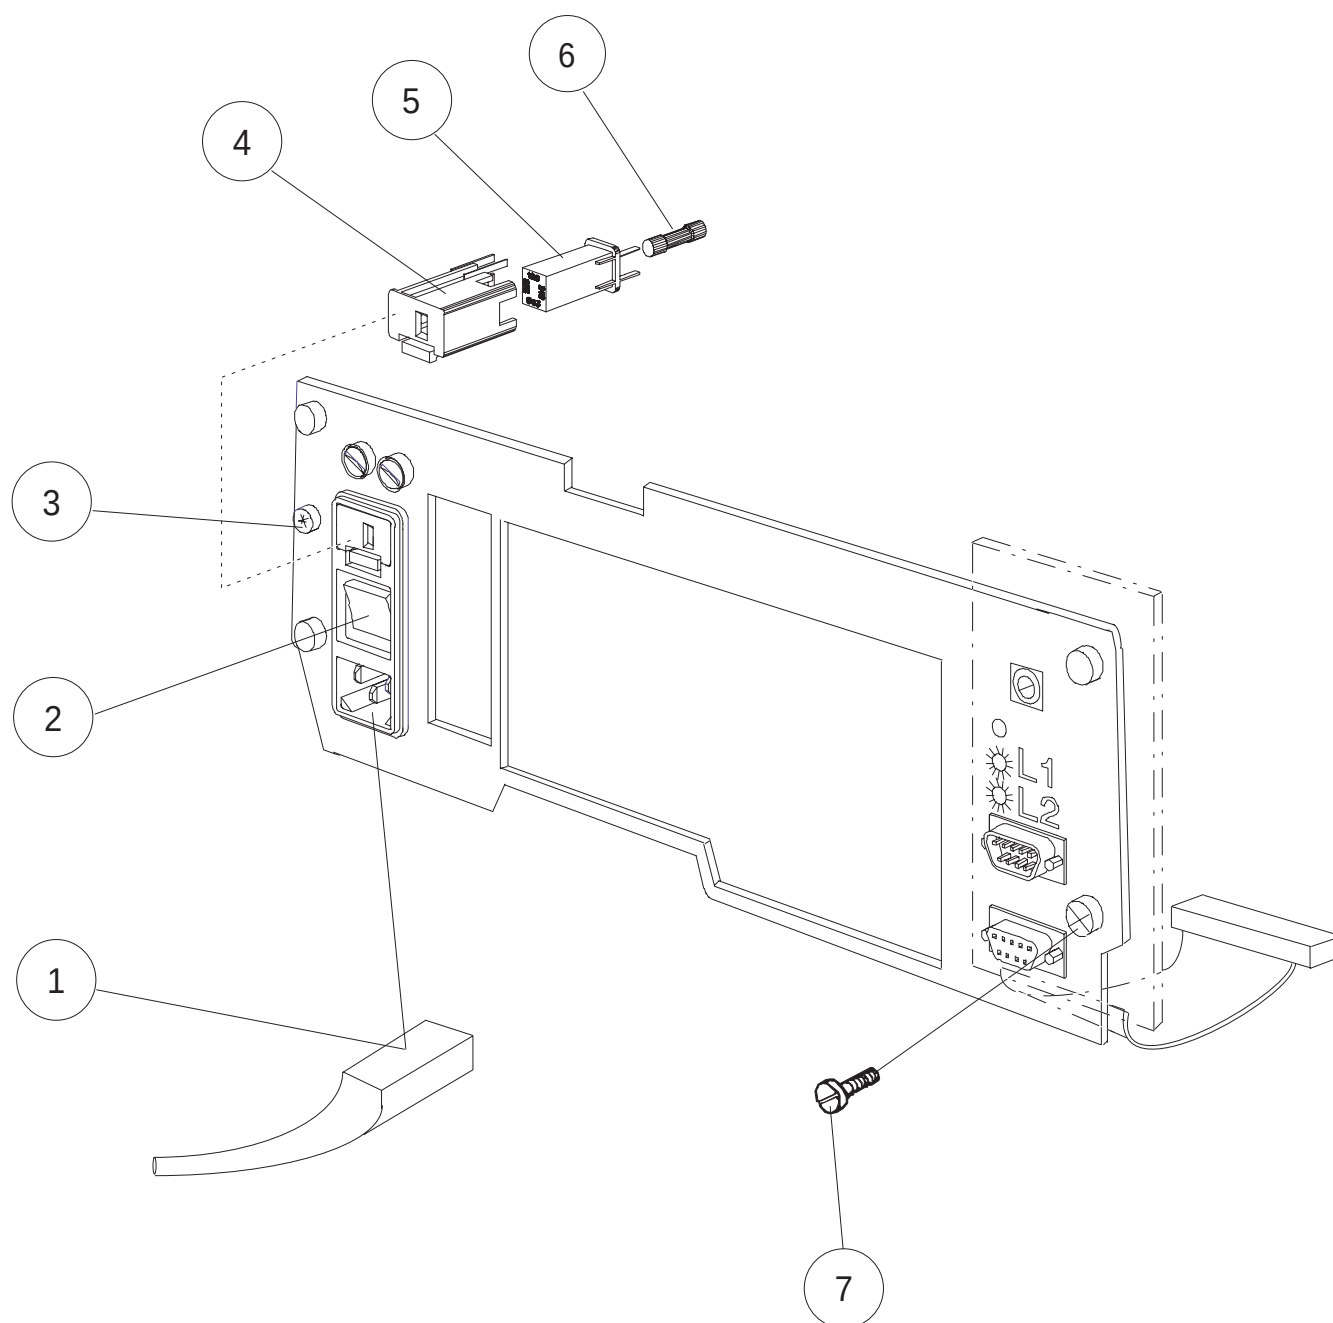


No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C	Part No.	Description	Quantity
1	•	•	•	•	•		4513990	Cord - Power, German	1
	•	•	•	•	•		6217861	Cord - Power, Australia	1
	•	•	•	•	•		6217851	Cord - Power, UK	1
	•	•	•	•	•		6004060	Cord - Power, France	1
	•	•	•	•	•		6037200	Cord - Power, CH	1
				•	•		6051531	Cord - Power, US and Canada	1
2	•	•	•	•	•		6217024	Socket and Switch Assembly	1
				•			6217842	Socket and Switch Assembly, Korea	1
3	•	•	•	•	•		4282501	Screw	1
	•	•	•	•	•		4488121	Washer	1
	•	•	•	•	•		4852712	Nut	1
4	•	•	•	•	•		6217751	Holder - Fuse	1
5	•	•	•	•	•		6217231	Selector - Voltage, Europe	1
				•	•		6217241	Selector - Voltage, US and Canada	1
	•	•	•	•	•		6217261	Selector - Voltage, Japan	1
6	•	•	•	•	•		4515691	Fuse T2A, Europe 220-240 Volt	1
				•	•		4534021	Fuse T4A, US and Canada 100-120 Volt	1
				•	•		4535381	Fuse T2A, US and Canada 220-240 Volt	1
	•	•	•	•	•		4531821	Fuse T4 A , Japan 110-120 Volt	1
7	•	•	•	•	•		4302421	Screw	2

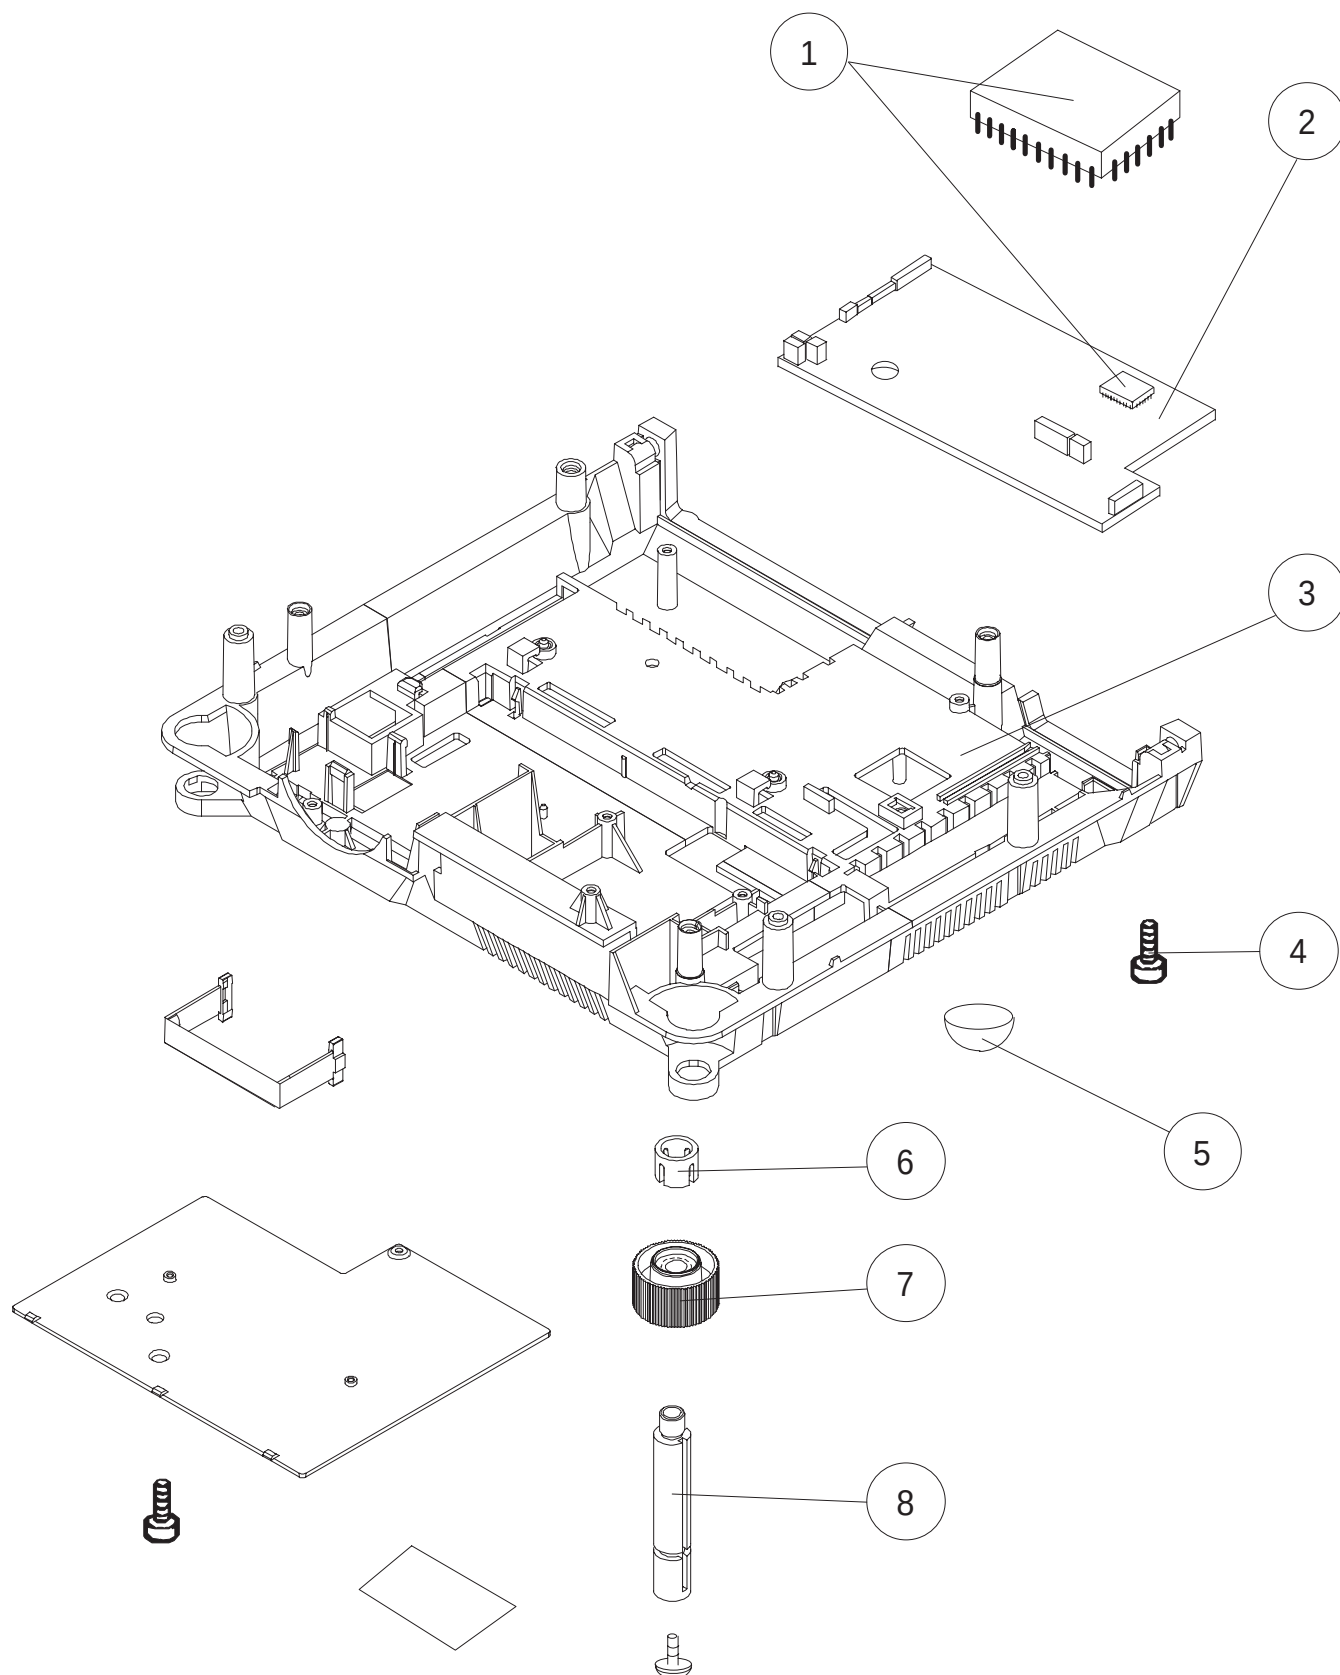

No.	3 0 2 0	4 0 1 0	4 0 2 0	5 0 2 0	7 0 1 0	7 0 2 0	9 0 1 0	9 0 2 0	C i n e	A C C	Part No.	Description	Quantity
1	▪										6214394	Microcontroller, V 2.34	1
		▪	▪								6215144	Microcontroller, V 4.8	1
				▪							6215154	Microcontroller, V4.8	1
					▪	▪					6215174	Microcontroller, V 4.8	1
							▪	▪			6215184	Microcontroller, V4.8. . .	1
									▪		6215164	Microcontroller, V4.9 (for E 9020 Cine)	1
2	▪										6210034	Master PCB Assembly	1
			▪			▪					6210074	Master PCB Assembly for SMD	1
				▪				▪			6210094	Master PCB Assembly for SMD	1
3	▪		▪	▪		▪		▪			6202264	Housing - Lower.	1
4	▪		▪	▪		▪		▪			4302361	Screw.	4
5	▪		▪	▪		▪		▪			6200131	Foot - Rubber.	1
6	▪		▪	▪		▪		▪			6200141	Buffer	2
7	▪		▪	▪		▪		▪			6200061	Knob - Right Elevator.	1
	▪		▪	▪		▪		▪			6200081	Knob - Left Elevator .	1
8	▪		▪	▪		▪		▪			6200051	Elevator - Right	1
	▪		▪	▪		▪		▪			6200071	Elevator - Left.	1

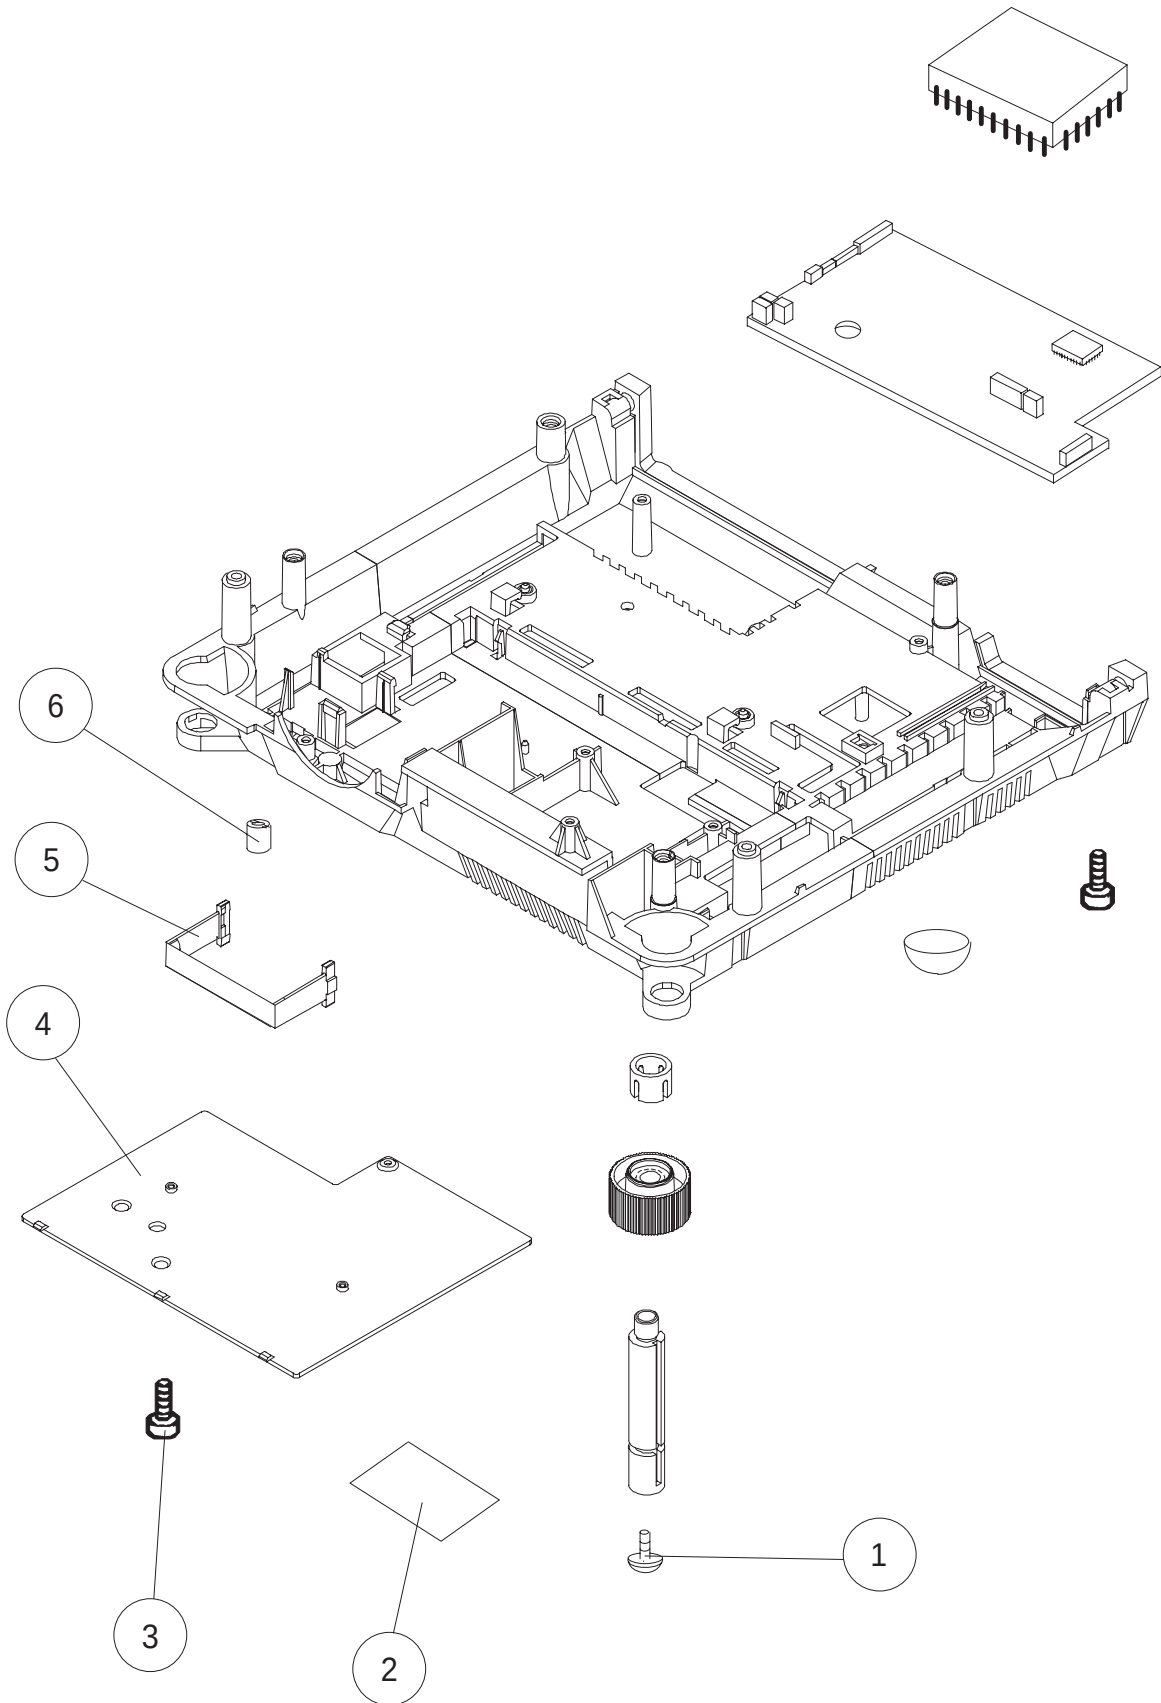


No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C	Part No.	Description	Quantity
1	•	•	•	•	•		6200091	Foot - Elevator	2
2	•						6203261	Label - Rating, Standard	1
		•					6204261	Label - Rating, Standard	1
			•				6205281	Label - Rating, Standard	1
				•			6207261	Label - Rating, Standard	1
				•			6207881	Label - Rating, USA and Canada.	1
				•			6207691	Label - Rating, Korea	1
					•		6208061	Label - Rating, Standard	1
			•				6205861	Label - Rating, Japan	1
					•		6208321	Label - Rating, Japan	1
					•		6208421	Label - Rating, USA and Canada.	1
3	•	•	•	•	•		4302421	Screw	1
4	•	•	•	•	•		6200202	Cover	1
5	•	•	•	•	•		6201801	Handle	1
6	•	•	•	•	•		G9903835	Screw - Insert	-

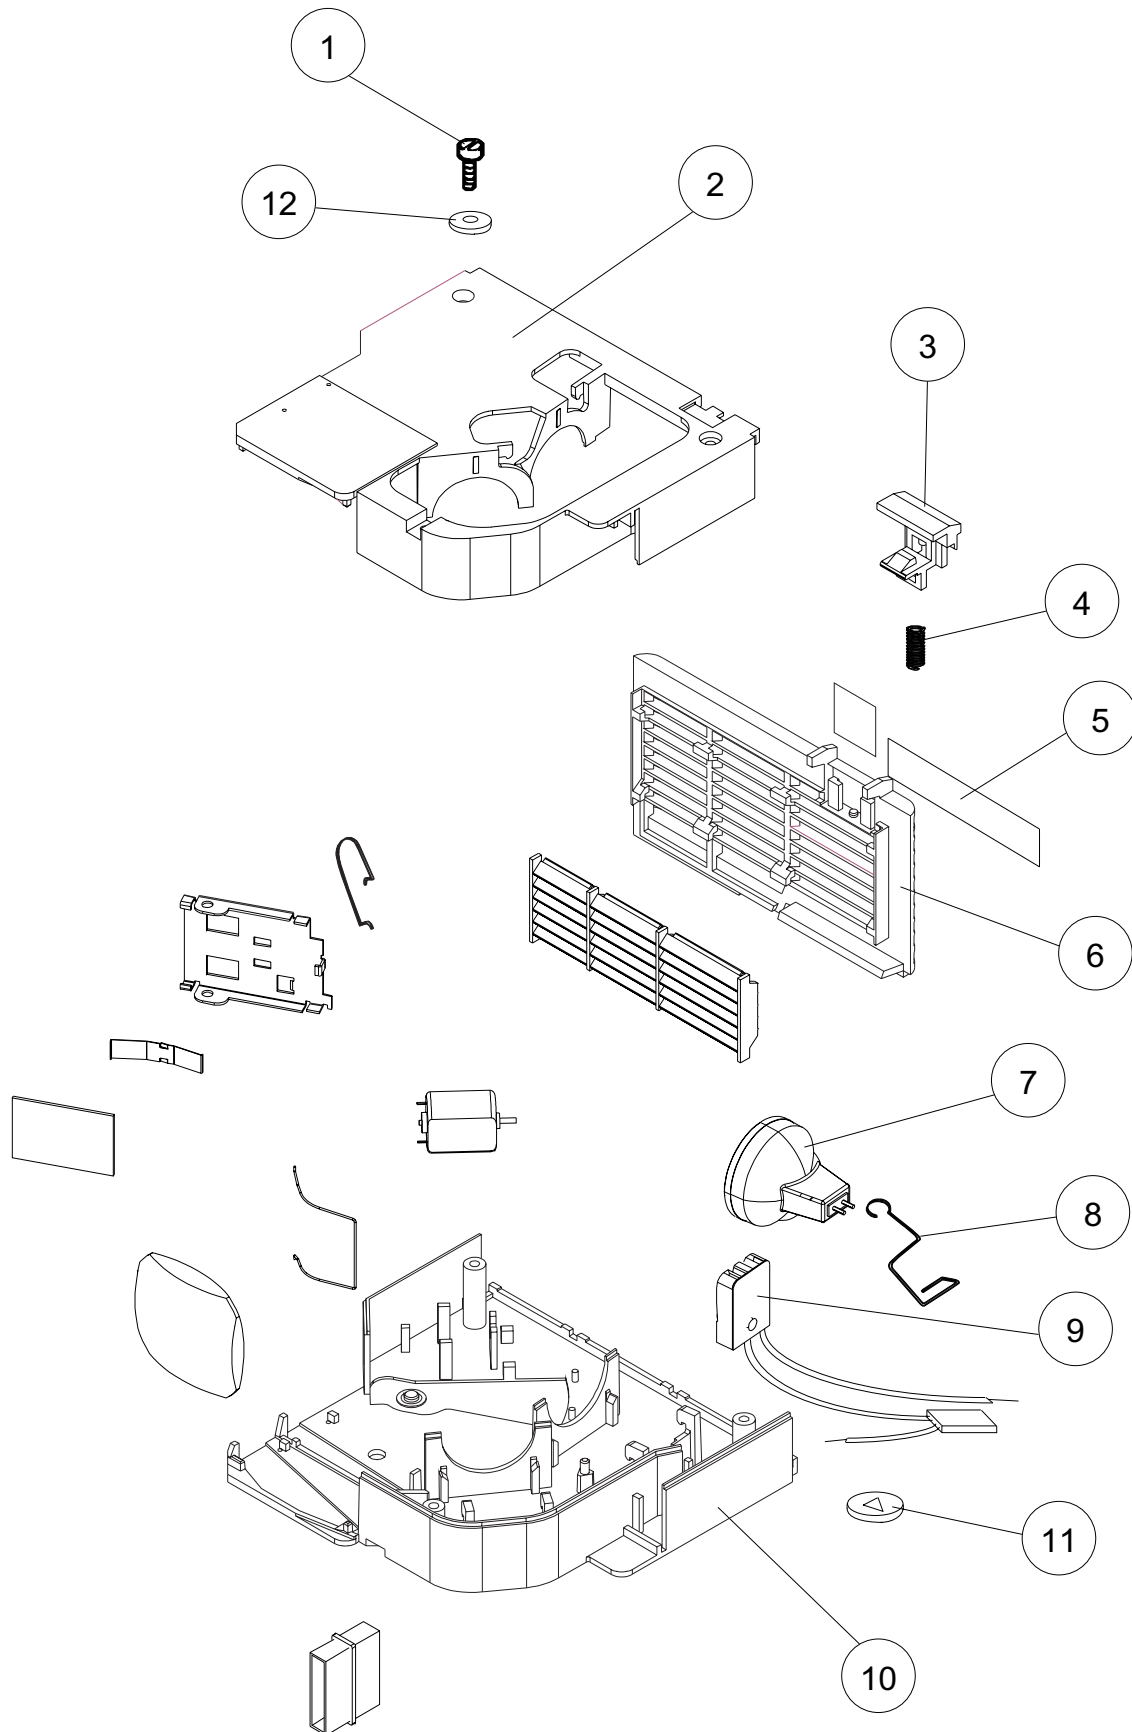

No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C	Part No.	Description	Quantity
1	•	•	•	•	•		4302531	Screw	3
2	•	•	•	•	•		6201141	Housing - Lamp	1
3	•	•	•	•	•		6201361	Latch - Release	1
4	•	•	•	•	•		6201461	Spring	1
5	•						6201381	Label - Lamp Module, Single	1
		•	•	•	•		6205481	Label - Lamp Module, Dual	1
				•			6207771	Label - Lamp Module, Korea, Dual	1
6	•	•	•	•	•		6201352	Plate - Grill	1
7	•	•	•	•	•		*	Lamp, 35h, 70h and 200h	1-2
8	•	•	•	•	•		6201101	Ejector	1-2
9	•						6217154	Lamp Socket Assembly, Single	1
		•	•	•	•		6217200	Lamp Socket Assembly, Dual	1
10	•	•	•	•	•		6201131	Housing - Lamp	1
11	•	•	•	•	•		4487440	Circlip	1
12	•	•	•	•	•		4488121	Washer	2

* Listed in the KODAK Price Catalogue

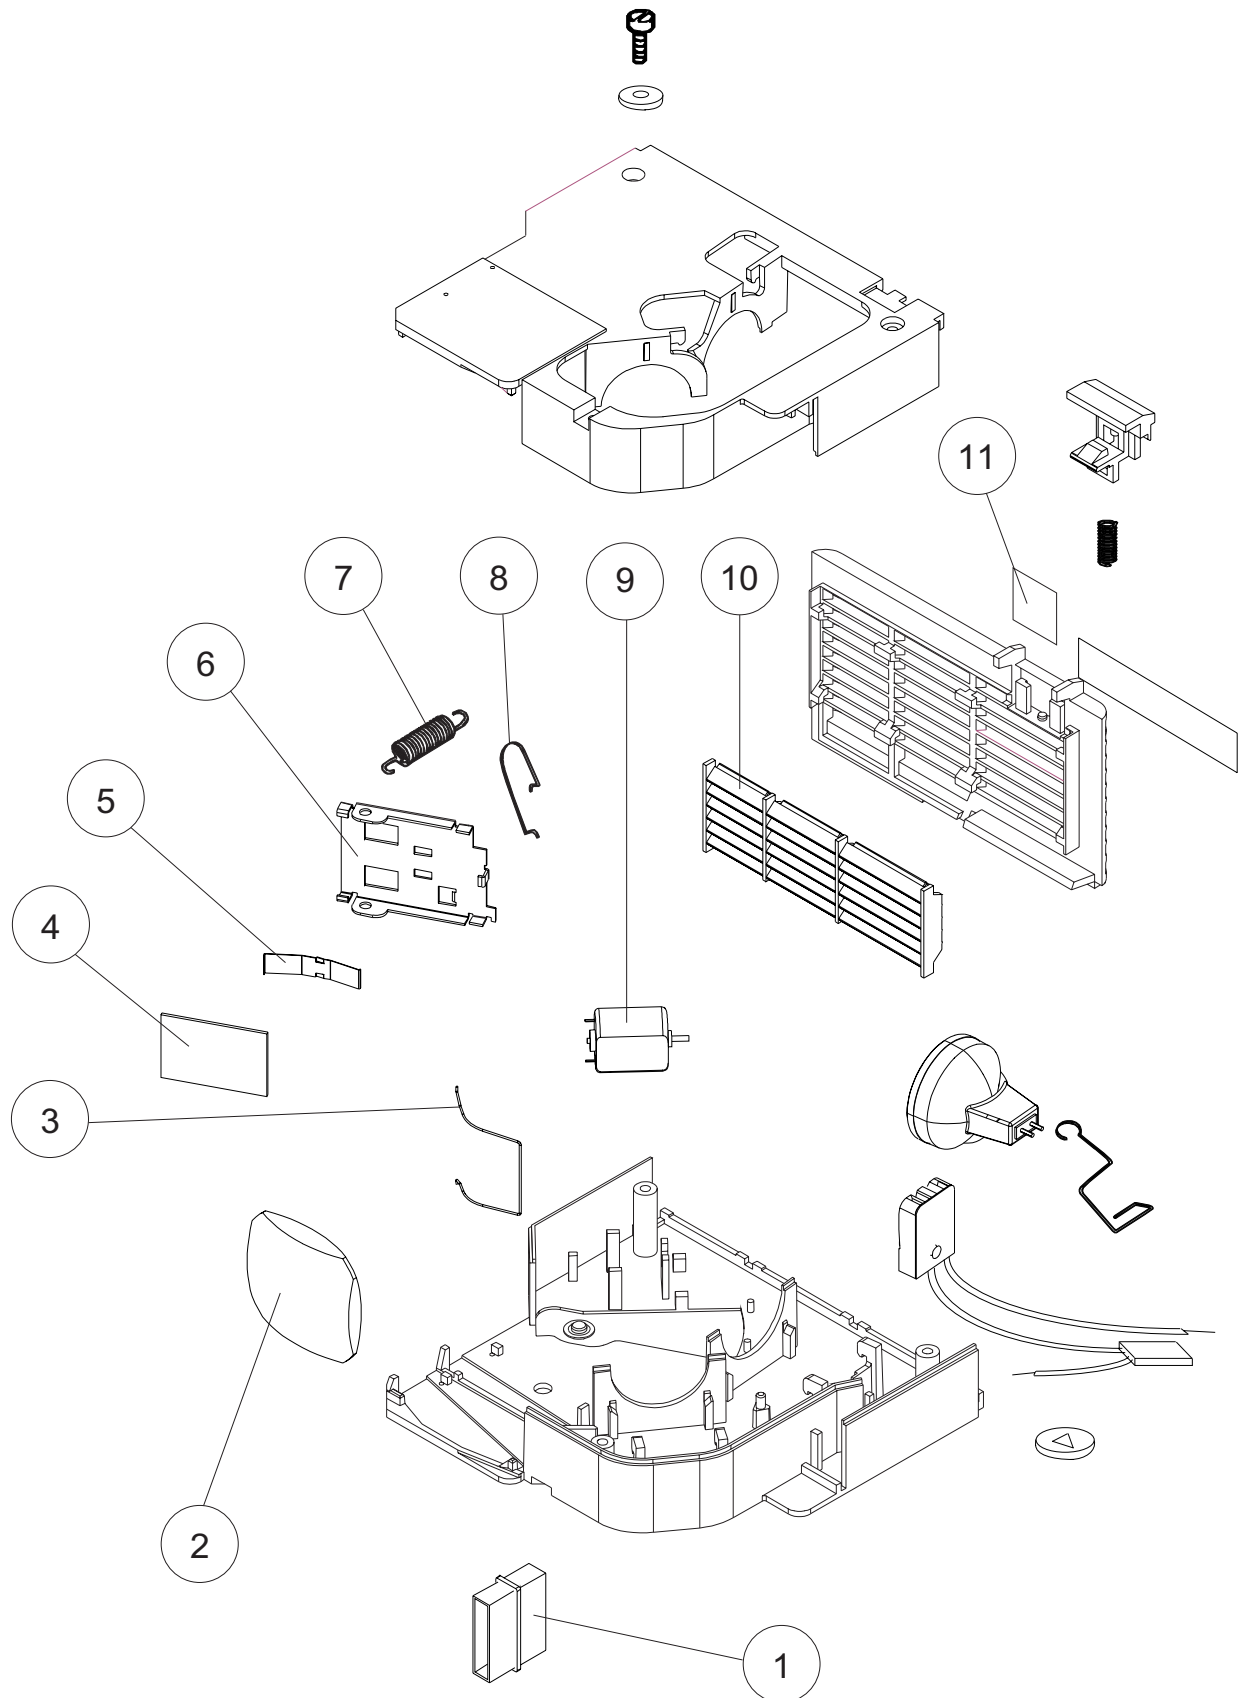


No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C	Part No.	Description	Quantity
1	•	•	•	•	•		6217171	Plug	1
2	•	•	•	•	•		6201752	Lens - Condenser, for Slide 24 x 36 mm	1
	•	•	•	•	•		6220335	Lens - Condenser, for Superslide (4 x 4 optional)	1
3	•	•	•	•	•		6201211	Clip	1
	•	•	•	•	•		6201731	Clip, for Superslide (4 x 4 optional)	1
4	•	•	•	•	•		6201994	Mirror	1
5	•	•	•	•	•		6201190	Spring (black coated)	1
6	•	•	•	•	•		6201180	Holder - Mirror (black coated)	1
7	•						6200361	Spring	1
8		•	•	•	•		6205421	Spring	1
9		•	•	•	•		6217134	Motor	1
10	•	•	•	•	•		6201111	Plate - Air Exhaust	1
11	•	•	•	•	•		6201941	Label EXTRA BRIGHT	1

Single Lamp Module complete
Dual Lamp Module complete

CAT 718 4351 see Price Catalogue
CAT 718 4369 see Price Catalogue


KODAK EKTAPRO 80 Slide Tray

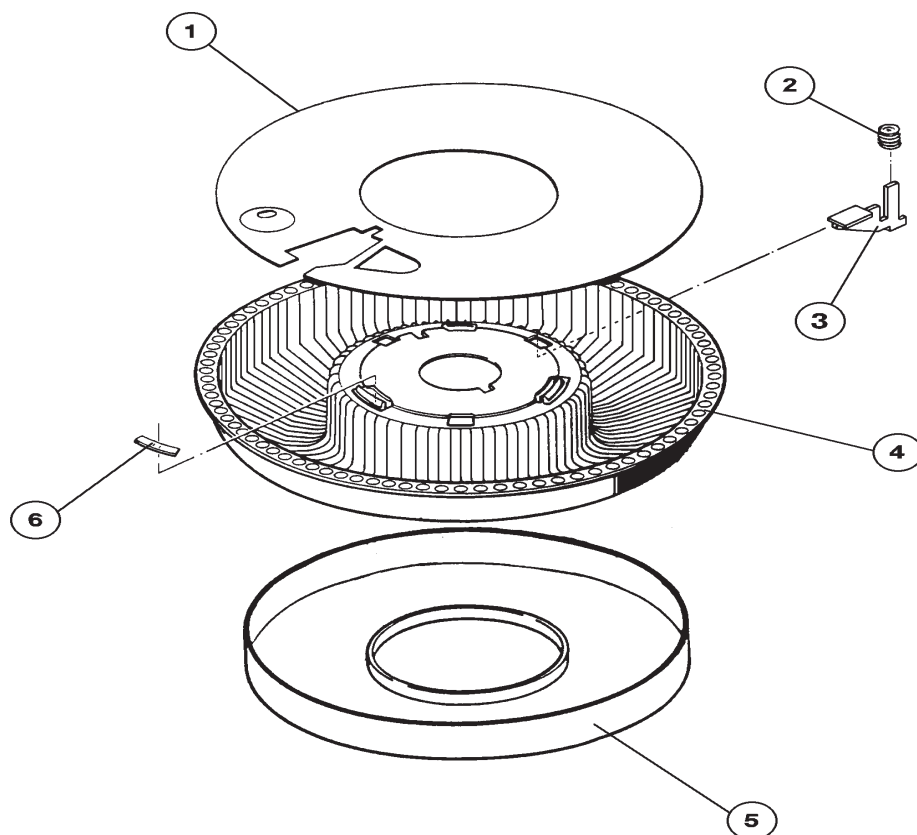

No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C	Part No.	Description	Quantity
1						•	6036312	 Plate	1
2						•	6036331	 Spring	1
3						•	6036321	 Lever	1
4						•	*	 Tray - Slide	1
5						•	6006100	 Cover	1
6						•	6036341	 Spring	3

* Listed in the Price Catalogue


KODAK EKTAPRO Cable Remote

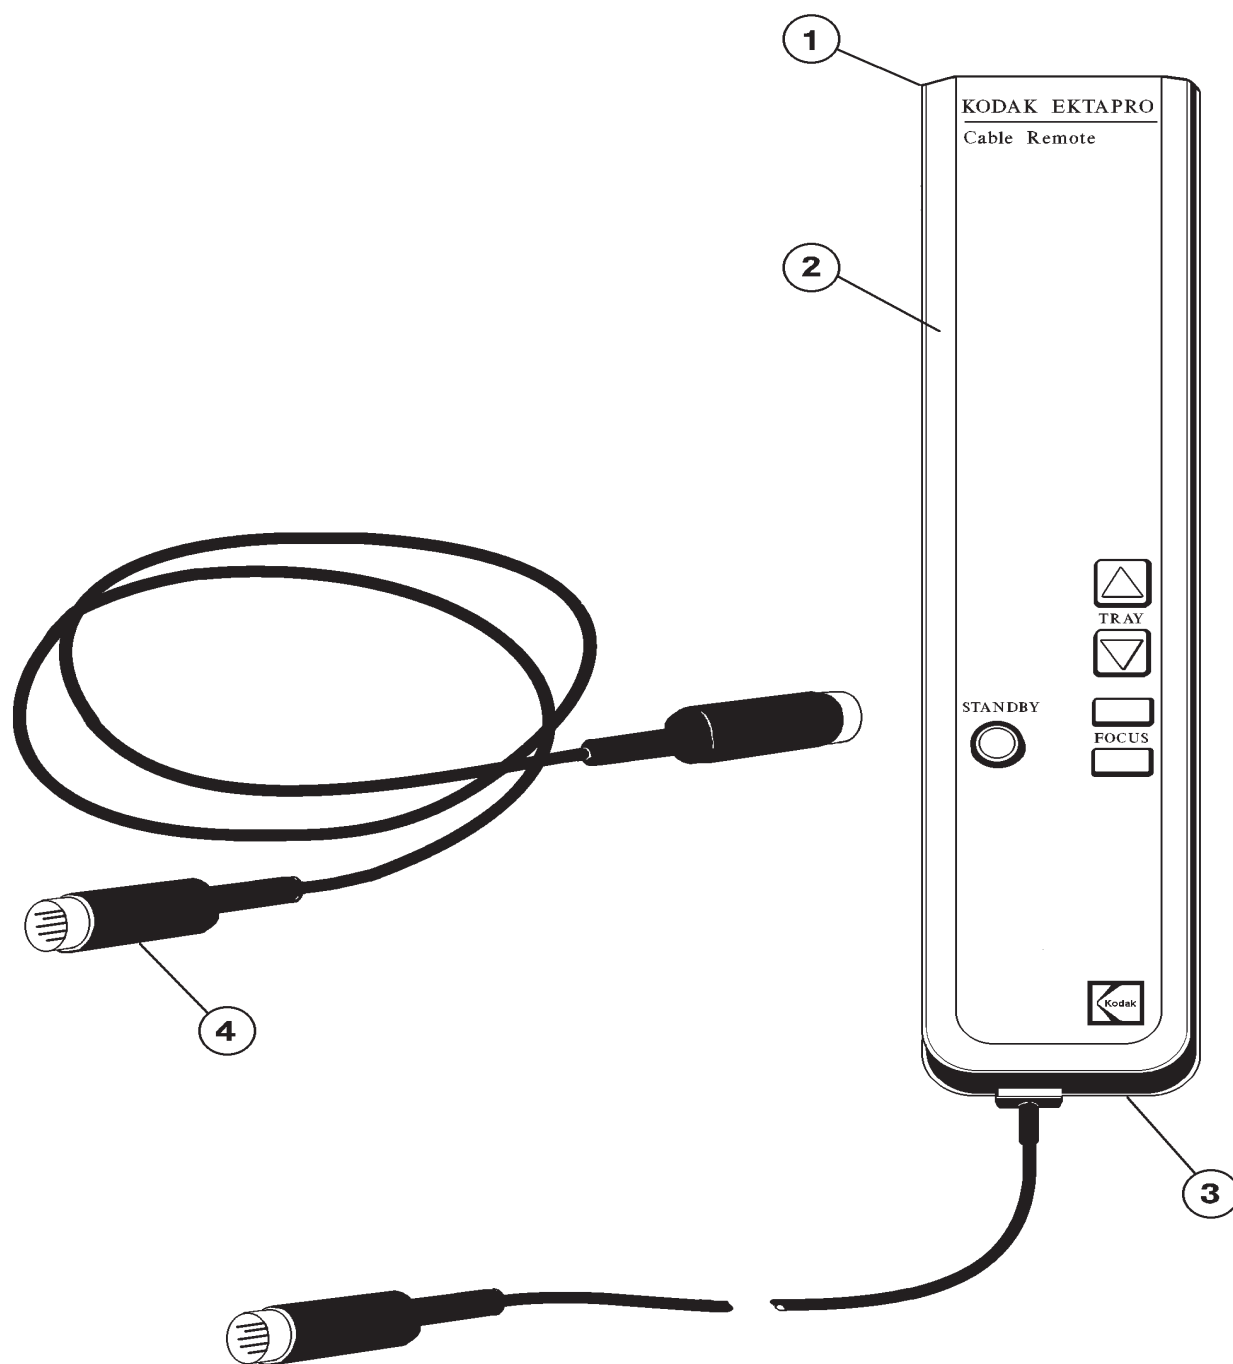

No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C C	Part No.	Description	Quantity
1						•	*.....	Remote - Cable	
2						•	6220224	Top	1
3						•	6220134	Base	1
4						•	*.....	Extension	

* Listed in the Price Catalogue


KODAK EKTAPRO IR Remote System RA,RA/LP and IR Remote Receiver RA

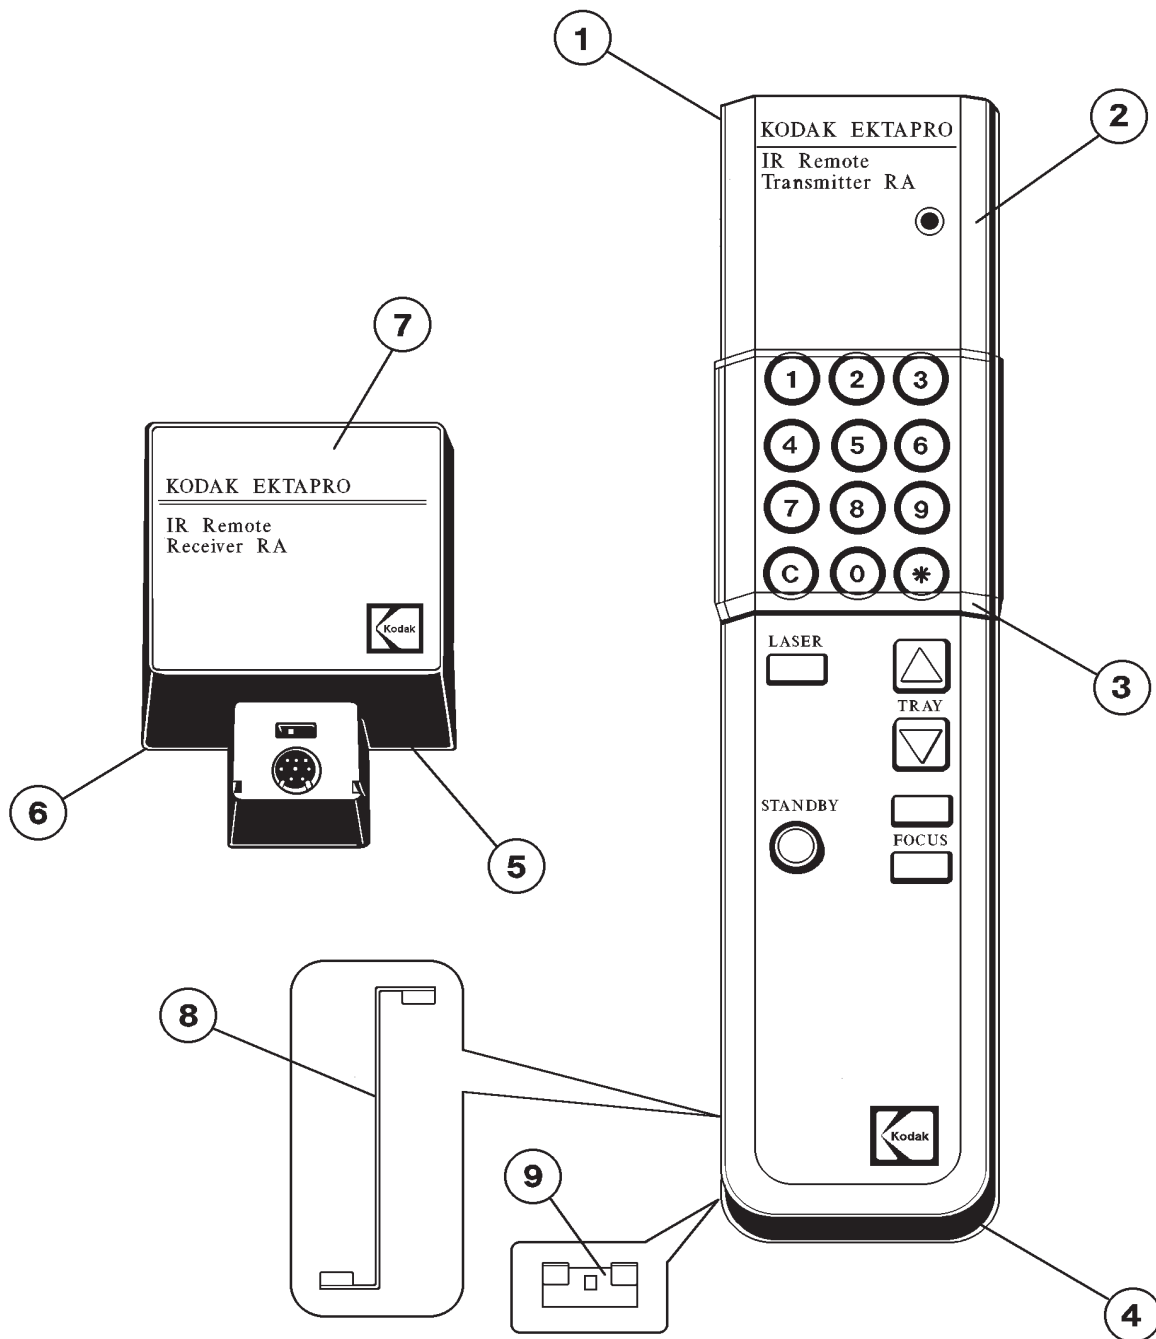

No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C	Part No.	Description	Quantity
1						•	6220105	Remote - IR, for RA/LP	1
						•	6220155	Remote - IR, for RA	1
2						•	6220164	Top-RA	1
							6220114	Top-RA/LP	1
3						•	6220144	Slide Cover, for RA and RA/LP1	
4						•	6220134	Base, for RA and RA/LP1	
5						•	6220364	Cover - Front	1
6						•	6220374	Cover - Back	1
7						•	*	Receiver - IR, Remote, for RA	
8						•	6220401	Battery Contact - Long	1
9						•	6220411	Battery Contact - Short	1

* Listed in the Price Catalogue


KODAK EKTAPRO 7/12 PIN Module and 7/12 PIN Adapter Cable

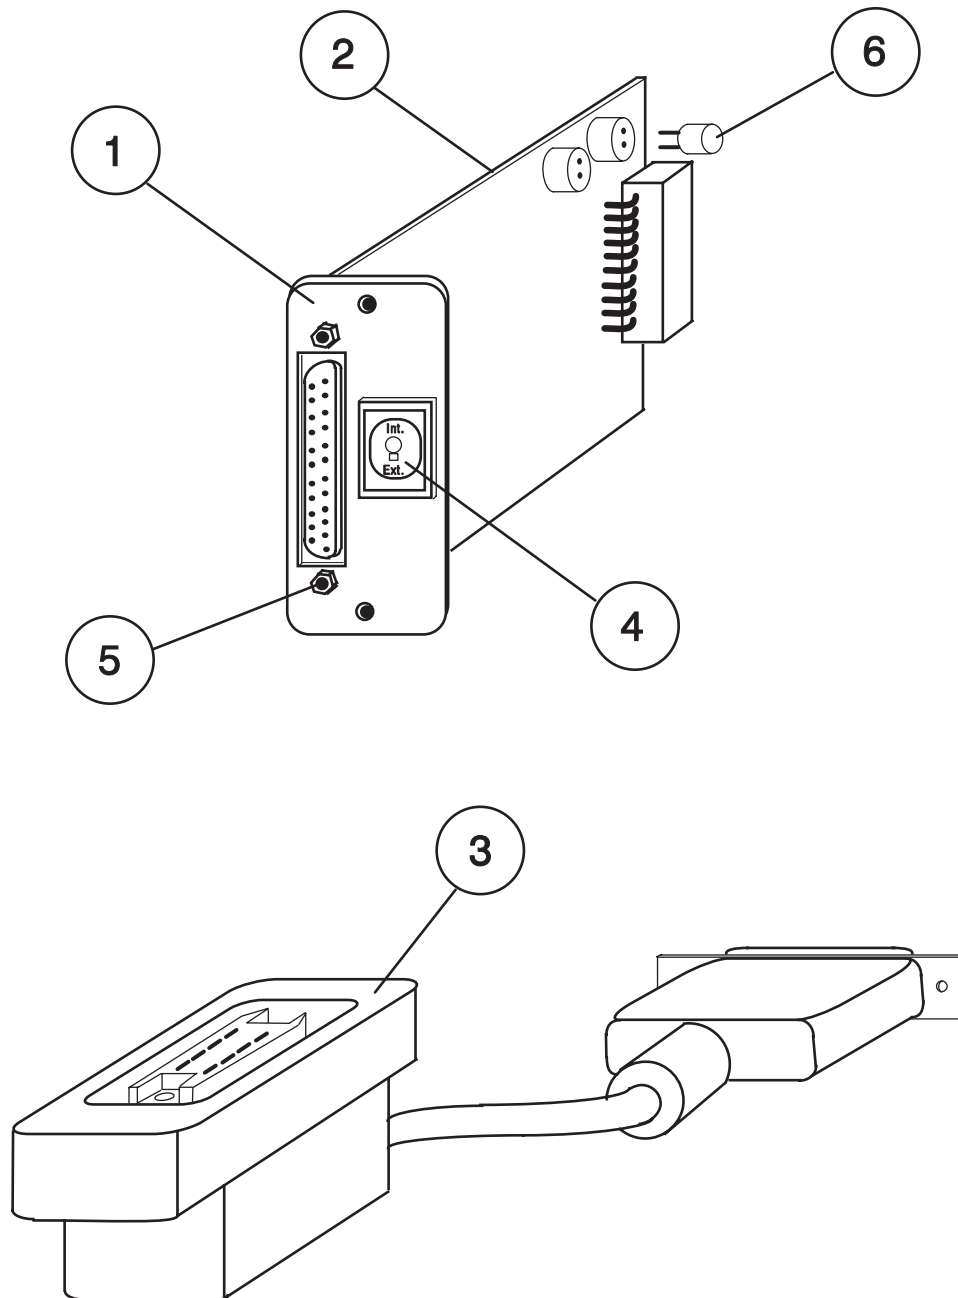

No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C	Part No.	Description	Quantity
1						•	6207331	Plate	1
2						•	*	Module - 7/12 PIN	1
3						•	*	Cable - 7/12 PIN Adapter	1
4						•	6220191	Switch	1
5						•	6215061	Screw	2
						•	4488131	Washer	2
6						•	4539981	Fuse T 0,8A	2

* Listed in the Price Catalogue

Cable Assy and Wires for EKTAPRO PROJECTORS Model 3020 - 9020

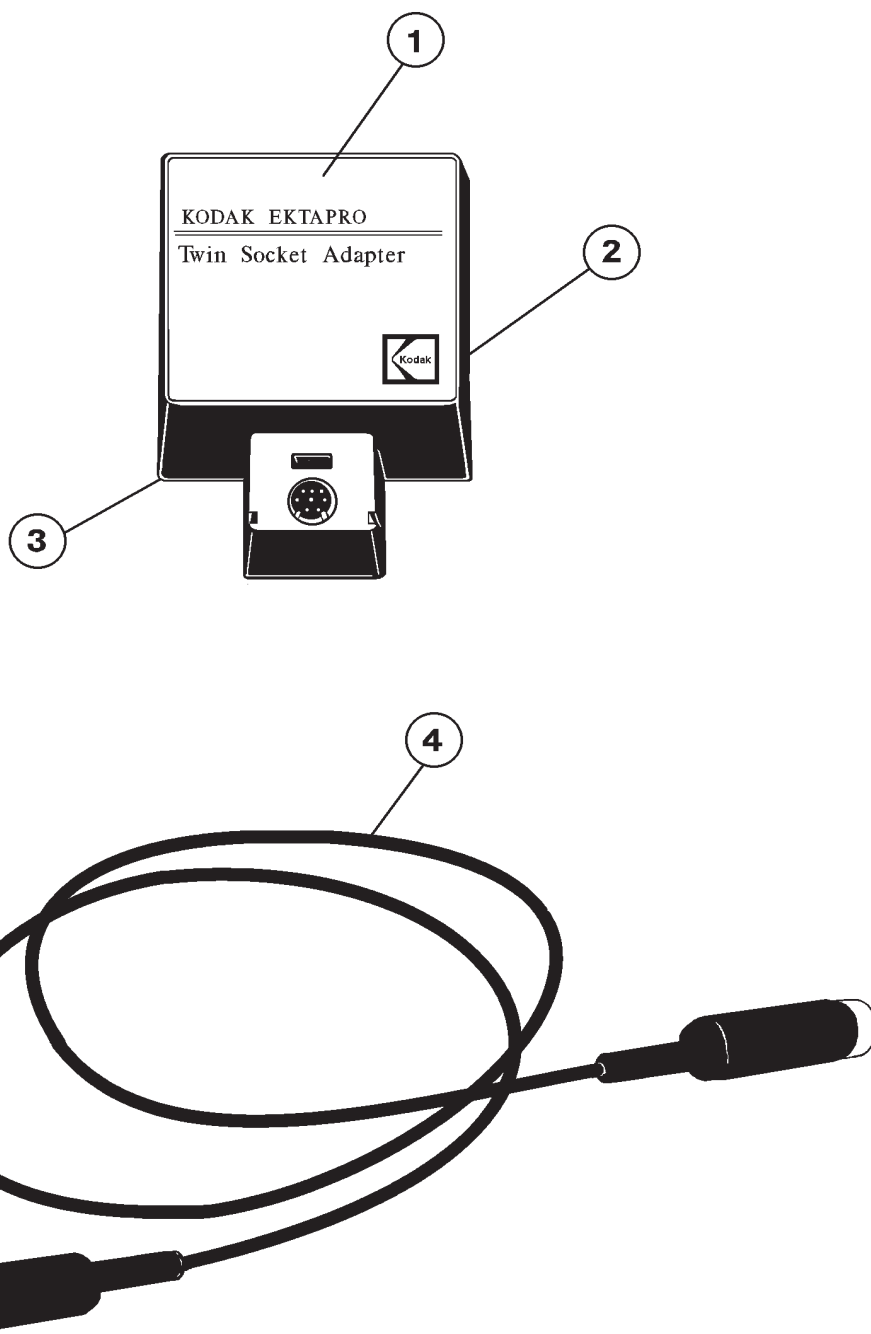

No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C C	Part No.	Description	Quantity
1						•	*.....	Adapter - Twin Socket	
2						•	6220174	Cover - Front	1
3						•	6220184	Cover - Back	1
4						•	*.....	Cable - Connecting, 2m	

* Listed in the Price Catalogue


Cable Assy and Wires for EKTAPRO PROJECTORS Model 3020 - 9020

No.	3 0 2 0	4 0 2 0	5 0 2 0	7 0 2 0	9 0 2 0	A C C	Part No.	Description	Quantity
1		•	•	•	•		6217391	Dual Socket Assembly, Standard, Japan, Korea	1
2	•						6217191	Single Socket Assembly, Standard and Japanese Style	1
3	•	•	•	•	•		6217593	Cable Assembly	1
4	•	•	•	•	•		6217471	Cable Assembly	1
5	•	•	•	•	•		4534411	Wire	1
6	•	•	•	•	•		4534421	Wire	1

NOTE

For the KODAK EKTAPRO Carrying Case and for the KODAK EKTAPRO SELECT Projections Lenses no parts are planned. Possible repairs of the SELECT Projections Lenses should be settled via KODAK AG.

Exception Sleeve PN G9903955

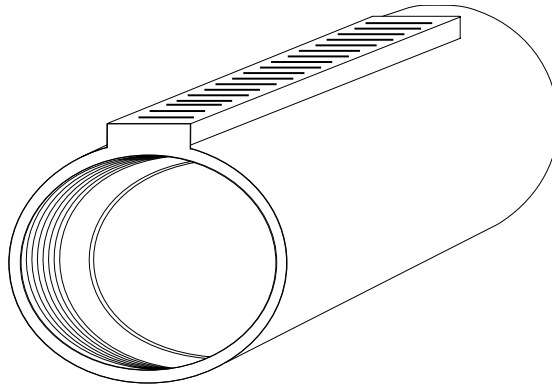

Manufacturer of Lenses:

Docter-Optics GmbH
Prof. Erich Schott Str. 1 - 3
35641 Schöffengrund

Phone: 0049-6445-6090
FAX: 0049-6445-6090-5

ALPHANUMERICAL PARTS LIST

ITEM	Part No.	Page
Absorber - Shock	6200741	8
Adapter	6207101	16
Baffle - Light	6201311	8
Base	6220134	34
Base,	6220134	36
Battery Contact - Long	6220401	36
Battery Contact - Short	6220411	36
Buffer	6200141	24
Button - Forward	6202161	4
Button - Forward Focus	6202141	4
Button - Reverse	6202151	4
Button - Reverse Focus	6202131	4
Button - Stand-by	6202171	4
Button	6202181	4
Button Tray Switch	6202191	4
Cable Assembly	6217471	42
Cable Assembly	6217593	42
Cam	6200453	14
Cam and Shutter Sensor Assembly	6217094	12
Circlip	4487440	28
Clip	6201211	30
Clip	6201871	6
Clip, for Superslide (4 x 4 optional)	6201731	30
Cord - Power, UK	6217851	22
Cord - Power, Australia	6217861	22
Cord - Power, CH.	6037200	22
Cord - Power, France	6004060	22
Cord - Power, German	4513990	22
Cord - Power, US and Canada	6051531	22
Cover	6006100	32
Cover	6200202	26
Cover	6207321	20
Cover - Back	6220184	40
Cover - Back	6220374	36
Cover - Front	6220174	40

ITEM	Part No.	Page
Cover - Front	6220364	36
Cover - Mechanism Frame	6200262	12
Cover - Prism	6205061	10
Disk - Coder Serial No. 118500 and above	6201881	6
Dual Socket Assembly	6217391	18, 42
Eccentric	6201861	6
Ejector	6201101	28
Elevator - Left	6200071	24
Elevator - Right	6200051	24
Fan	6217674	18
Foot - Elevator	6200091	26
Foot - Rubber	6200131	24
Frame - Mechanism	6200295	12
Fuse Holder Assembly	4535021	20
Fuse T0.8A	4539981	38
Fuse T2A, Europe 220-240 Volt	4515691	22
Fuse T2A	4515691	20
Fuse T1.25A US Canada	4539891	20
Fuse T4A , Japan	4531821	22
Fuse T4A, US and Canada 100-120 Volt	4534021	22
Fuse T2A, US and Canada 220-240 Volt	4535381	22
Fuse, T1.25A	4541051	20
Fuse, T2.8A	4541201	20
Handle	6201801	26
Holder - Fuse	6217751	22
Holder - Mirror (black coated)	6201180	30
Housing - Center, with clip	6200804	6
Housing - Lamp	6201131	28
Housing - Lamp	6201141	28
Housing - Lower	6202264	24
Housing - Upper	6202254	2
Indicator - Focus	6200811	6
Knob	6200701	2
Knob - Left Elevator	6200081	24
Knob - Right Elevator	6200061	24

ITEM	Part No.	Page
Label - Lamp Module (single)	6201381	28
Label - Lamp Module (dual)	6205481	28
Label - Lamp Module, Korea (dual)	6207771	28
Label - EXTRA BRIGHT	6201941	30
Label - Model	6203031	2
Label - Model	6204022	2
Label - Model	6205022	2
Label - Model	6207022	2
Label - Model	6209022	2
Label - Rating, Korea	6207691	26
Label - Rating, Japan	6205861	26
Label - Rating, Japan	6208321	26
Label - Rating, Standard	6203261	26
Label - Rating, Standard	6204261	26
Label - Rating, Standard	6205281	26
Label - Rating, Standard	6207261	26
Label - Rating, Standard	6208061	26
Label - Rating, US and Canada	6207881	26
Label - Rating, US and Canada	6208421	26
Lamp Housing Assembly	6200953	16
Lamp Socket Assembly, Dual	6217204	28
Lamp Socket Assembly, Single	6217154	28
Latch	6200922	6
Latch - Release	6201361	28
Lens - Condenser, for Slide 24 x 36 mm	6201752	30
Lens - Condenser, for Superslide (4 x 4)	6220335	30
Lever	6036321	32
Lever	6200381	12
Lever	6200471	14
Lever - Slide Regulation	6200331	14
Lever - Tray Release	6200271	14
Lever - Zero (new style)	6201521	6
Lifter - Slide	6200401	14
Magnet	6217624	8
Master PCB Assembly	6210034	24

ITEM	Part No.	Page
Master PCB Assembly for SMD	6210074.....	24
Master PCB Assembly for SMD	6210094.....	24
Microcontroller, V 2.34... m o d e l 3 0 2 0	6214394.....	24
Microcontroller, V 4.8... m o d e l 4 0 2 0	6215144.....	24
Microcontroller, V 4.8... m o d e l 5 0 2 0	6215154.....	24
Microcontroller, V 4.8... m o d e l 7 0 2 0	6215174.....	24
Microcontroller, V 4.8... m o d e l 9 0 2 0	6215184.....	24
Mirror.....	6211994.....	30
Motor.....	6217134.....	30
Motor.....	6217364.....	6
Motor.....	6217584.....	12
Motor - Focus.....	6217344.....	18
Mount - Lens	6200502.....	8
Nut	4852712.....	22
Pad - Focusing Motor Rubber	6200041.....	18
Pad - Pressure	6200354.....	12
PCB - Tray Motion	6210824.....	6
PCB - AF II.....	6210854.....	10
PCB - Keyboard	6210394.....	16
PCB - Keyboard	6210414.....	16
PCB - Keyboard	6210314.....	16
PCB - Power Supply	6210704.....	16
PCB - Power Supply for SMD	6210774.....	16
PCB-Back Panel.....	6210504.....	20
PCB-Back Panel.....	6210554.....	20
Plate	6036312.....	32
Plate	6200622.....	8
Plate	6207331.....	38
Plate - Air Exhaust.....	6201111.....	30
Plate - Back	6202100.....	20
Plate - Back	6205300.....	20
Plate - Back	6207300.....	20
Plate - Back, Korea	6207710.....	20
Plate - Back, USA (Label Fuse 2.8A)	6207901.....	20
Plate - Cover	6202062.....	4

ITEM	Part No.	Page
Plate - Cover	6205102.	4
Plate - Cover	6208102.	4
Plate - Cover, Korea	6207722.	4
Plate - Cover	6208102.	4
Plate - Cover	6202071.	4
Plate - Grill	6201352.	28
Plug	6217171.	30
Prism	6150131.	10
Remote - IR, for RA	6220155.	36
Remote - IR, for RA/LP	6220105.	36
Retainer	6200911.	6
Retainer - AF	6200751.	8
Retainer AF III Assembly	6205753.	10
Ring - Drive	6200824.	6
Roller	6200931.	6
Roller - Bearing	6200871.	6
Roller - Shaft	4719391.	6
Screw	4282501.	22
Screw	4282851.	12
Screw	4282921.	16
Screw	4283671.	20
Screw	4301881.	8
Screw	4301911.	6
Screw	4301921.	16
Screw	4302361.	6
Screw	4302361.	24
Screw	4302381.	8
Screw	4302411.	6
Screw	4302421.	2
Screw	4302421.	6
Screw	4302421.	14
Screw	4302421.	16
Screw	4302421.	22
Screw	4302421.	26
Screw	4302531.	28

ITEM	Part No.	Page
Screw	4302541	8
Screw	4302491	12
Screw	6215061	20
Screw	6215061	38
Screw Insert	G9903835	26
Selector - Voltage, Europe	6217231	22
Selector - Voltage, Japan	6217261	22
Selector - Voltage, US and Canada	6217241	22
Shaft	6200691	8
Shield - Power Supply	6200031	16
Shutter	6201674	8
Single Socket Assembly	6217191	18, 42
Sleeve	G9903955	43
Slide Cover,	6220144	36
Socket	6217804	16
Socket and Switch Assembly	6217024	22
Socket and Switch Assembly, Korea	6217842	22
Spring	6036331	32
Spring	6036341	32
Spring	6200281	12
Spring	6200341	14
Spring	6200361	30
Spring	6200371	14
Spring	6200481	18
Spring	6200531	8
Spring (balck coated)	6200631	6
Spring	6200721	8
Spring (black coated)	6201190	30
Spring	6201461	28
Spring	6201491	14
Spring	6201541	12
Spring	6205421	30
Switch	6220191	38
*Symbol - Corporate	4901411	2
Timer	6205202	18

ITEM	Part No.	Page
Timer.....	6205212.....	18
Top	6220224.....	34
Top-RA	6220164.....	36
Top-RA/LP	6220114.....	36
Transformer	6217564.....	16
Transformer	6217614.....	16
Transformer, Japan	6217634.....	16
Warning Label	6205451.....	6
Washer	4485810.....	12
Washer	4488121.....	22
Washer	4488131.....	38
Washer	4488121.....	28
Wheel - Gear	6200861.....	6
Wheel - Gear	6200971.....	6
Window	6202031.....	2
Wire	4534411.....	42
Wire	4534421.....	42
Wire Ground	4534441.....	16

NUMERICAL PARTS LIST

PART NO.	Item	Page
4282501	Screw	22
4282851	Screw	12
4282921	Screw	16
4283671	Screw	20
4301881	Screw	8
4301911	Screw	6
4301921	Screw	16
4302361	Screw	6
4302361	Screw	24
4302381	Screw	8
4302411	Screw	6
4302421	Screw	2
4302421	Screw	6
4302421	Screw	14
4302421	Screw	16
4302421	Screw	22
4302421	Screw	26
4302491	Screw	12
4302531	Screw	28
4302541	Screw	8
4485810	Washer	12
4487440	Circlip	28
4488121	Washer	22
4488121	Washer	28
4488131	Washer	38
4513990	Cord - Power, German	22
4515691	Fuse T2A, Europe 220-240 Volt	22
4515691	Fuse T2A	20
4531821	Fuse T4A , Japan	22
4534021	Fuse T4A, US and Canada 100-120 Volt	22
4534411	Wire	42
4534421	Wire	42
4534441	Wire Ground	16
4535021	Fuse Holder Assembly	20
4535381	Fuse T2A, US and Canada 220-240 Volt	22
4539891	Fuse T1.25A US Canada	20

PART NO.	Item	Page
4539981	Fuse T0.8A	38
4541051	Fuse, T1.25A.....	20
4541201	Fuse, T2.8A.....	20
4719391	Roller - Shaft.....	6
4852712	Nut.....	22
4901411	*Symbol - Corporate	2
6004060	Cord - Power, France	22
6006100	Cover.....	32
6036312	Plate.....	32
6036321	Lever	32
6036331	Spring	32
6036341	Spring	32
6037200	Cord - Power, CH.....	22
6051531	Cord - Power, US and Canada	22
6150131	Prism	10
6200031	Shield - Power Supply	16
6200041	Pad - Focusing Motor Rubber	18
6200051	Elevator - Right.....	24
6200061	Knob - Right Elevator	24
6200071	Elevator - Left	24
6200081	Knob - Left Elevator	24
6200091	Foot - Elevator.....	26
6200131	Foot - Rubber	24
6200141	Buffer.....	24
6200202	Cover.....	26
6200262	Cover - Mechanism Frame.....	12
6200271	Lever - Tray Release	14
6200281	Spring	12
6200295	Frame - Mechanism	12
6200331	Lever - Slide Regulation	14
6200341	Spring	14
6200354	Pad - Pressure	12
6200361	Spring	30
6200371	Spring	14
6200381	Lever	12
6200401	Lifter - Slide.....	14

PART NO.	Item	Page
6200453	Cam	14
6200471	Lever	14
6200481	Spring	18
6200502	Mount - Lens	8
6200531	Spring	8
6200622	Plate	8
6200631	Spring (balck coated)	6
6200691	Shaft	8
6200701	Knob	2
6200721	Spring	8
6200741	Absorber - Shock	8
6200751	Retainer - AF	8
6200804	Housing - Center, with clip	6
6200811	Indicator - Focus	6
6200824	Ring - Drive	6
6200861	Wheel - Gear	6
6200871	Roller - Bearing	6
6200911	Retainer	6
6200922	Latch	6
6200931	Roller	6
6200953	Lamp Housing Assembly	16
6200971	Wheel - Gear	6
6201101	Ejector	28
6201111	Plate - Air Exhaust	30
6201131	Housing - Lamp	28
6201141	Housing - Lamp	28
6201180	Holder - Mirror (black coated)	30
6201190	Spring (black coated)	30
6201211	Clip	30
6201311	Baffle - Light	8
6201352	Plate - Grill	28
6201361	Latch - Release	28
6201381	Label - Lamp Module (single)	28
6201461	Spring	28
6201491	Spring	14
6201521	Lever - Zero (new style)	6

PART NO.	Item	Page
6201541	Spring	12
6201674	Shutter	8
6201731	Clip, for Superslide (4 x 4 optional)	30
6201752	Lens - Condenser, for Slide 24 x 36mm	30
6201801	Handle	26
6201861	Eccentric	6
6201871	Clip	6
6201881	Disk - Coder Serial No. 118500 and above	6
6201941	Label - EXTRA BRIGHT	30
6202031	Window	2
6202062	Plate - Cover	4
6202071	Plate - Cover	4
6202100	Plate - Back	20
6202131	Button - Reverse Focus	4
6202141	Button - Forward Focus	4
6202151	Button - Reverse	4
6202161	Button - Forward	4
6202171	Button - Stand-by	4
6202181	Button	4
6202191	Button Tray Switch	4
6202254	Housing - Upper	2
6202264	Housing - Lower	24
6203031	Label - Model	2
6203261	Label - Rating, Standard	26
6204022	Label - Model	2
6204261	Label - Rating, Standard	26
6205022	Label - Model	2
6205061	Cover - Prism	10
6205102	Plate - Cover	4
6205202	Timer	18
6205212	Timer	18
6205281	Label - Rating, Standard	26
6205300	Plate - Back	20
6205421	Spring	30
6205451	Warning Label	6
6205481	Label - Lamp Module (dual)	28

PART NO.	Item	Page
6205753	Retainer AF III Assembly	10
6205861	Label - Rating, Japan	26
6207022	Label - Model	2
6207101	Adapter	16
6207261	Label - Rating, Standard	26
6207300	Plate - Back	20
6207321	Cover	20
6207331	Plate	38
6207691	Label - Rating, Korea	26
6207710	Plate - Back, Korea	20
6207722	Plate - Cover, Korea	4
6207771	Label - Lamp Module, Korea (dual)	28
6207881	Label - Rating, US and Canada	26
6207901	Plate - Back, USA (Label Fuse 2.8A)	20
6208061	Label - Rating, Standard	26
6208102	Plate - Cover	4
6208102	Plate - Cover	4
6208321	Label - Rating, Japan	26
6208421	Label - Rating, US and Canada	26
6209022	Label - Model	2
6210034	Master PCB Assembly	24
6210074	Master PCB Assembly for SMD	24
6210094	Master PCB Assembly for SMD	24
6210314	PCB - Keyboard	16
6210394	PCB - Keyboard	16
6210414	PCB - Keyboard	16
6210504	PCB-Back Panel	20
6210554	PCB-Back Panel	20
6210704	PCB - Power Supply	16
6210774	PCB - Power Supply for SMD	16
6210824	PCB - Tray Motion	6
6210854	PCB - AF II	10
6211994	Mirror	30
6214394	Microcontroller, V 2.34 .. model 3020	24
6215061	Screw	20
6215061	Screw	38



PART NO.	Item	Page
6215144	Microcontroller, V 4.8 . m o d e l 4020.	24
6215154	Microcontroller, V 4.8 . m o d e l 5020.	24
6215174	Microcontroller, V 4.8 . m o d e l 7020.	24
6215184	Microcontroller, V 4.8 . . . model 9020.....	24
6217024	Socket and Switch Assembly	22
6217094	Cam and Shutter Sensor Assembly	12
6217134	Motor	30
6217154	Lamp Socket Assembly, Single	28
6217171	Plug	30
6217191	Single Socket Assembly	18,42
6217204	Lamp Socket Assembly, Dual.	28
6217231	Selector - Voltage, Europe	22
6217241	Selector - Voltage, US and Canada.	22
6217261	Selector - Voltage, Japan	22
6217344	Motor - Focus	18
6217364	Motor	6
6217391	Dual Socket Assembly	18, 42
6217471	Cable Assembly	42
6217564	Transformer	16
6217584	Motor	12
6217593	Cable Assembly	42
6217614	Transformer	16
6217624	Magnet.	8
6217634	Transformer, Japan	16
6217674	Fan.	18
6217751	Holder - Fuse	22
6217804	Socket	16
6217842	Socket and Switch Assembly, Korea	22
6217851	Cord - Power, UK	22
6217861	Cord - Power, Australia.	22
6220105	Remote - IR, for RA/LP	36
6220114	Top-RA/LP.	36
6220134	Base.	34
6220134	Base,	36
6220144	Slide Cover,	36
6220155	Remote - IR, for RA	36

PART NO.	Item	Page
6220164	Top-RA	36
6220174	Cover - Front.....	40
6220184	Cover - Back.....	40
6220191	Switch	38
6220224	Top.....	34
6220335	Lens - Condenser, for Superslide (4X4)	30
6220364	Cover - Front.....	36
6220374	Cover - Back.....	36
6220401	Battery Contact - Long	36
6220411	Battery Contact - Short.....	36
G9903835.....	Screw Insert	26
G9903955.....	Sleeve	43

Compliments of:
www.KodakParts.com



CUSTOMER EQUIPMENT SERVICES KODAK AG STUTTGART GERMANY