




**IXY 25
ELPH 260Z
Z60 IX**

**REF.NO.C13-4051
C13-4052
C13-4053**

PARTS CATALOG

CANON IXY25 [A]
ELPH 260Z [B]
Z60 IX [C]

REF.No. C13-4051
C13-4052
C13-4053

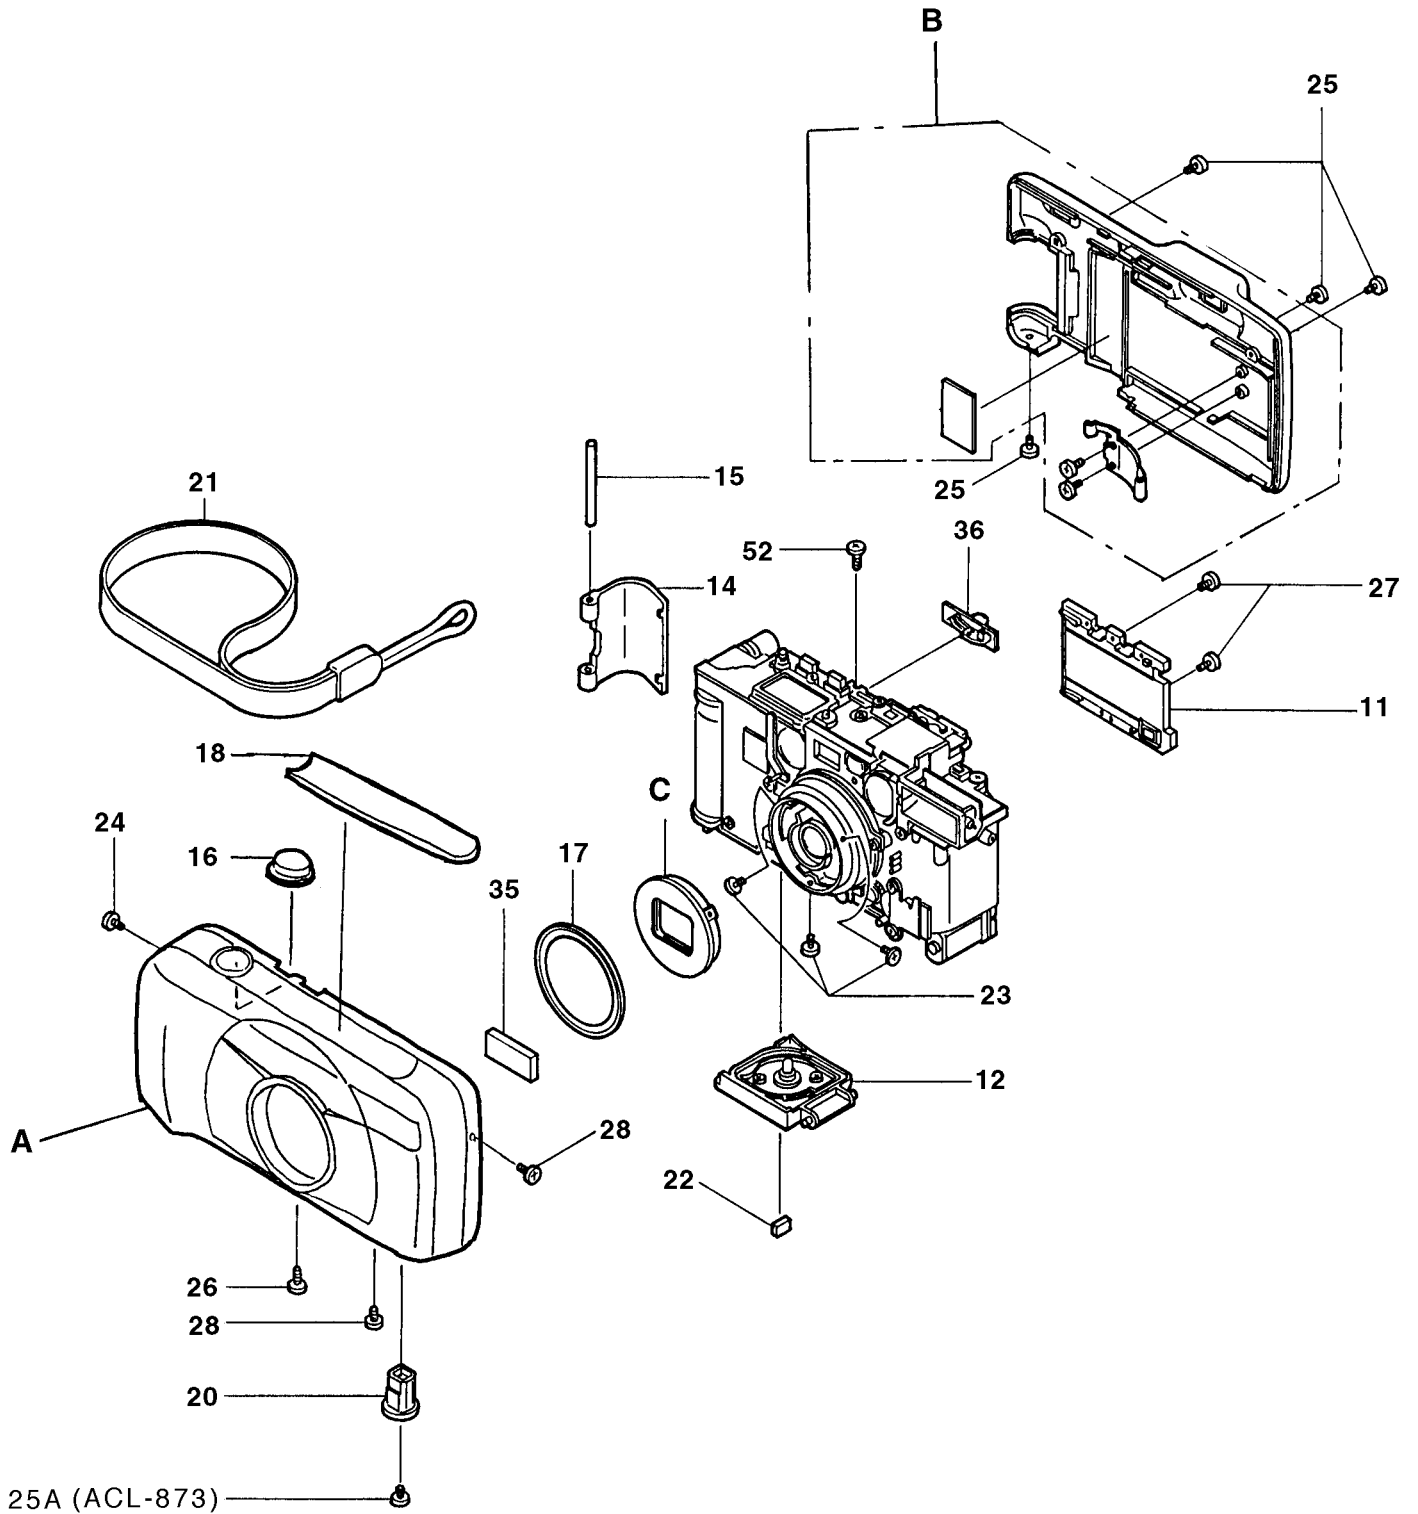


PARTS LIST

REF.No.C13-4051[A]
 C13-4052[B]
 C13-4053[C]

SYMBOL	NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
11		CY2-0896-000	C	1	FILM PRESSURE PLATE ASS'Y
12		CY2-0897-000	C	1	COVER, CARTRIGE
14		CY2-0898-000	C	1	COVER, BATTERY
15		CY2-0899-000	E	1	SHAFT, BATTERY COVER
16		CY2-0900-000	C	1	BUTTON, RELEASE
17		CY2-0901-000	E	1	LIGHT SHIELD RING
18		CY2-0902-000	C	1	COVER, TOP [A]
18		CY2-0991-000	C	1	COVER, TOP [B]
18		CY2-0992-000	C	1	COVER, TOP [C]
20		CY2-0903-000	C	1	SOCKET, TRIPOD
21		CY2-0904-000	C	1	STRAP, HAND
22		CY2-0905-000	E	1	DAMPER, CARTRIGE COVER
23		CY2-0906-000	F	3	SCREW
24		CY2-0907-000	F	1	SCREW
25		CY2-0908-000	F	4	SCREW
26		CY2-0909-000	F	1	SCREW
27		CY2-0910-000	F	2	SCREW
28		CY2-0911-000	F	2	SCREW
35		CY2-0913-000	C	1	PANEL, FLASH
36		CY2-0914-000	C	1	KNOB, PHC
52		CY2-0925-000	F	1	SCREW
25A		CY2-0993-000	F	1	SCREW
A		CY2-0889-000	C	1	COVER ASS'Y, FRONT [A]
A		CY2-0989-000	C	1	COVER ASS'Y, FRONT [B]
A		CY2-0990-000	C	1	COVER ASS'Y, FRONT [C]
B		CY2-0890-000	C	1	COVER ASS'Y, REAR
C		CY2-0891-000	C	1	COVER ASS'Y, LENS

CANON IXY25 [A]
ELPH 260Z [B]
Z60 IX [C]

REF.No. C13-4051
C13-4052
C13-4053

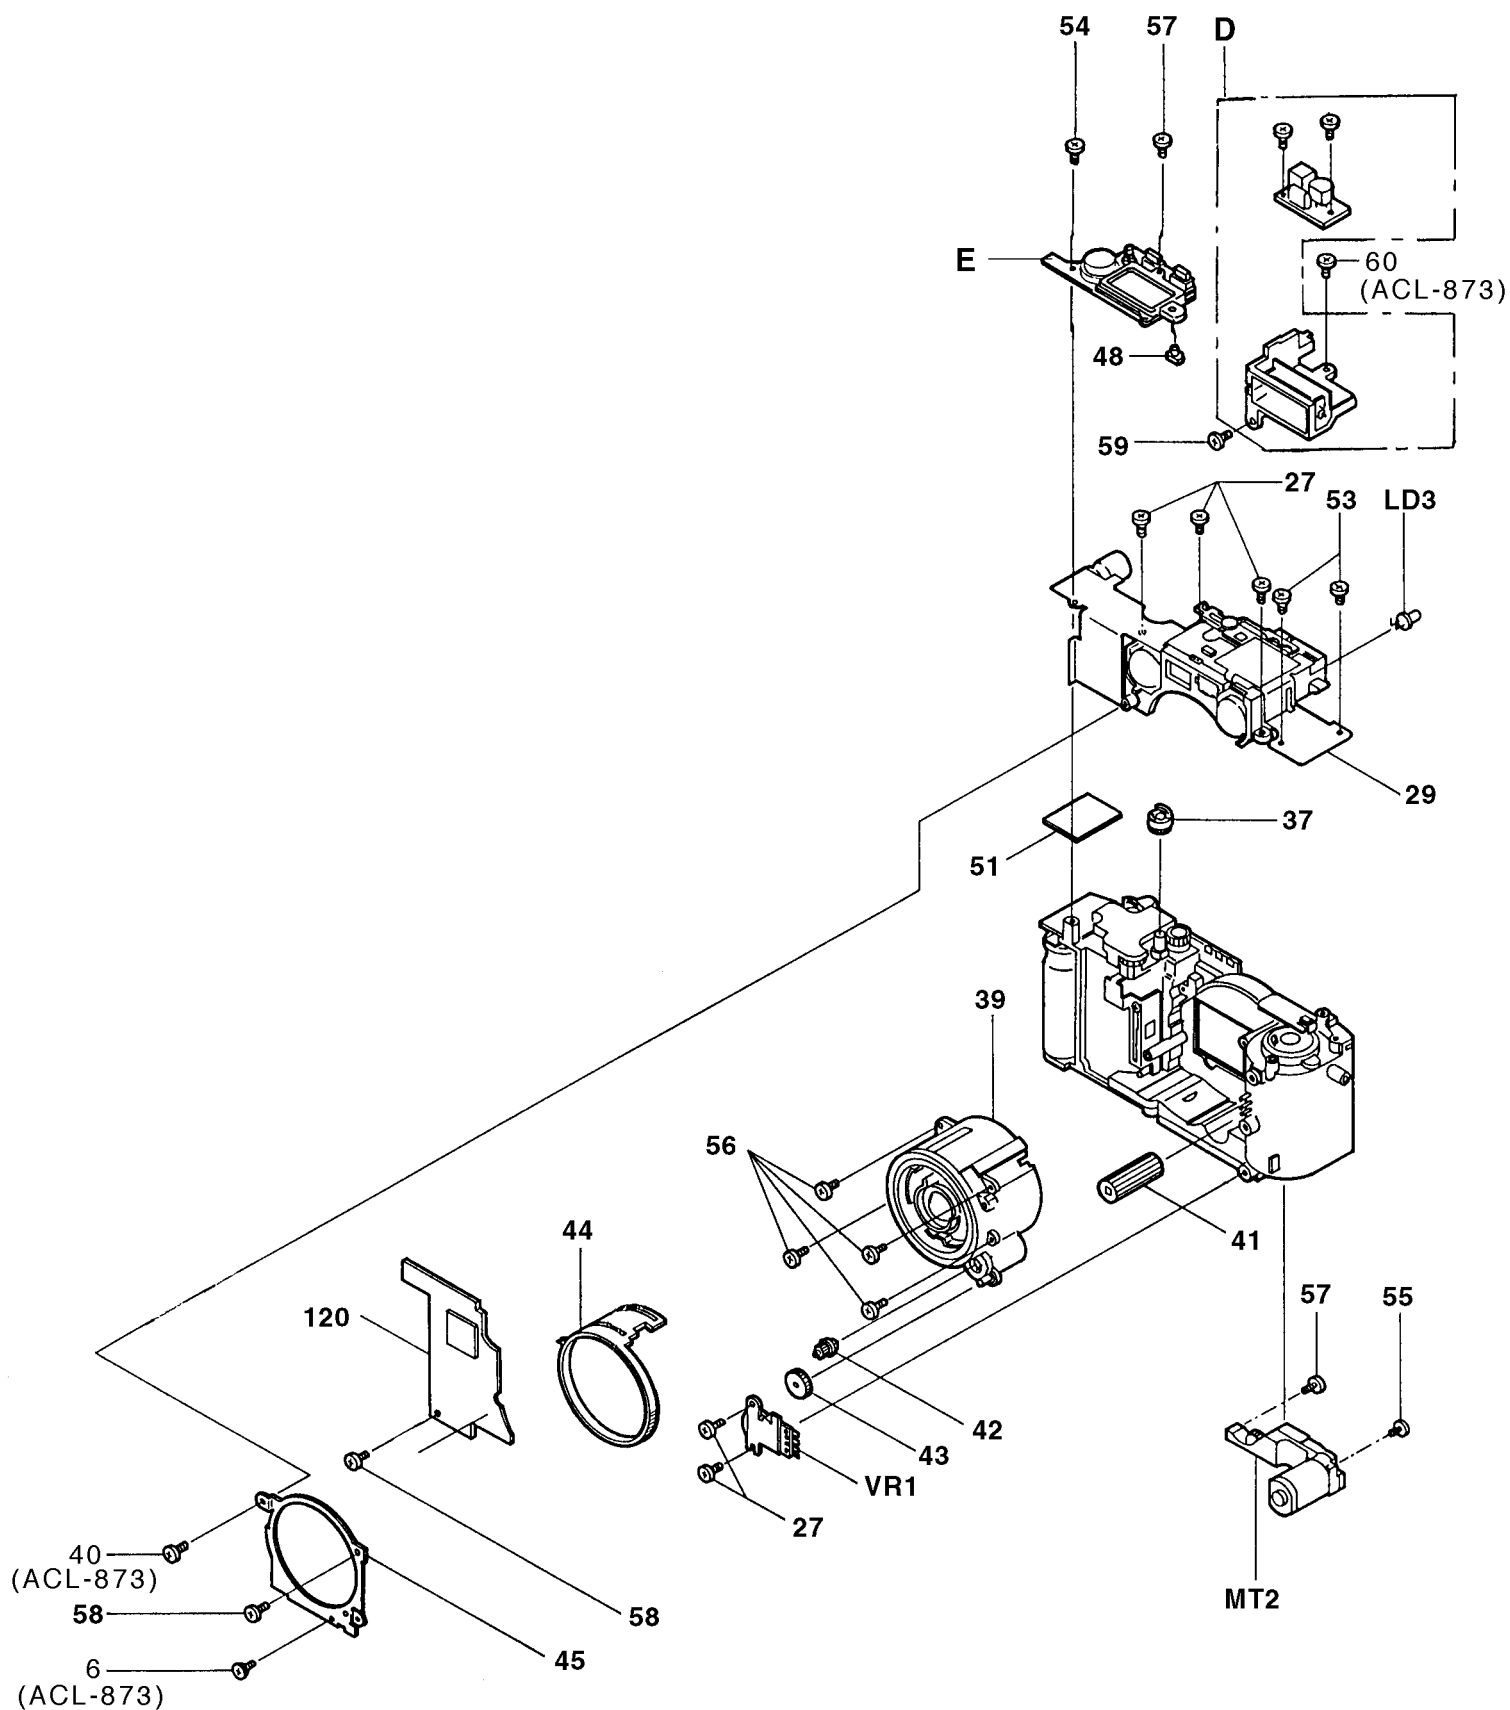


PARTS LIST

REF.No.C13-4051[A]
 C13-4052[B]
 C13-4053[C]

SYMBOL	NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
6		CY2-0894-000	F	1	SCREW
27		CY2-0910-000	F	5	SCREW
29		CY2-0912-000	C	1	FINDER ASS'Y
37		CY2-0915-000	E	1	LEVER ASS'Y, D
39		CY2-0978-000	D	1	LENS ASS'Y
40		CY2-0979-000	F	1	SCREW
41		CY2-0916-000	E	1	GEAR, ZOOM(A)
42		CY2-0917-000	E	1	GEAR, ZOOM(B)
43		CY2-0918-000	E	1	GEAR, VOLUME IDOL
44		CY2-0919-000	E	1	CAM, FINDER
45		CY2-0920-000	E	1	HOLDER, CAM
48		CY2-0923-000	C	1	BUTTON, DATE
51		CY2-0924-000	E	1	MASK, EFU PCB
53		CY2-0926-000	F	2	SCREW
54		CY2-0927-000	F	1	SCREW
55		CY2-0928-000	F	1	SCREW
56		CY2-0929-000	F	4	SCREW
57		CY2-0930-000	F	2	SCREW
58		CY2-0931-000	F	2	SCREW
59		CY2-0932-000	F	1	SCREW
60		CY2-0933-000	F	1	SCREW
120		CY2-0980-000	C	1	PCB ASS'Y, MAIN
D		CY2-0892-000	C	1	FLASH ASS'Y
E		CY2-0893-000	D	1	LCD ASS'Y
LD3		CY2-0986-000	D	1	LED
MT2		CY2-0988-000	D	1	MOTOR ASS'Y, ZOOM
VR1		CY2-0984-000	C	1	ENCORDER VR ASS'Y

CANON IXY25 [A]
ELPH 260Z [B]
Z60 IX [C]

REF.No. C13-4051
C13-4052
C13-4053

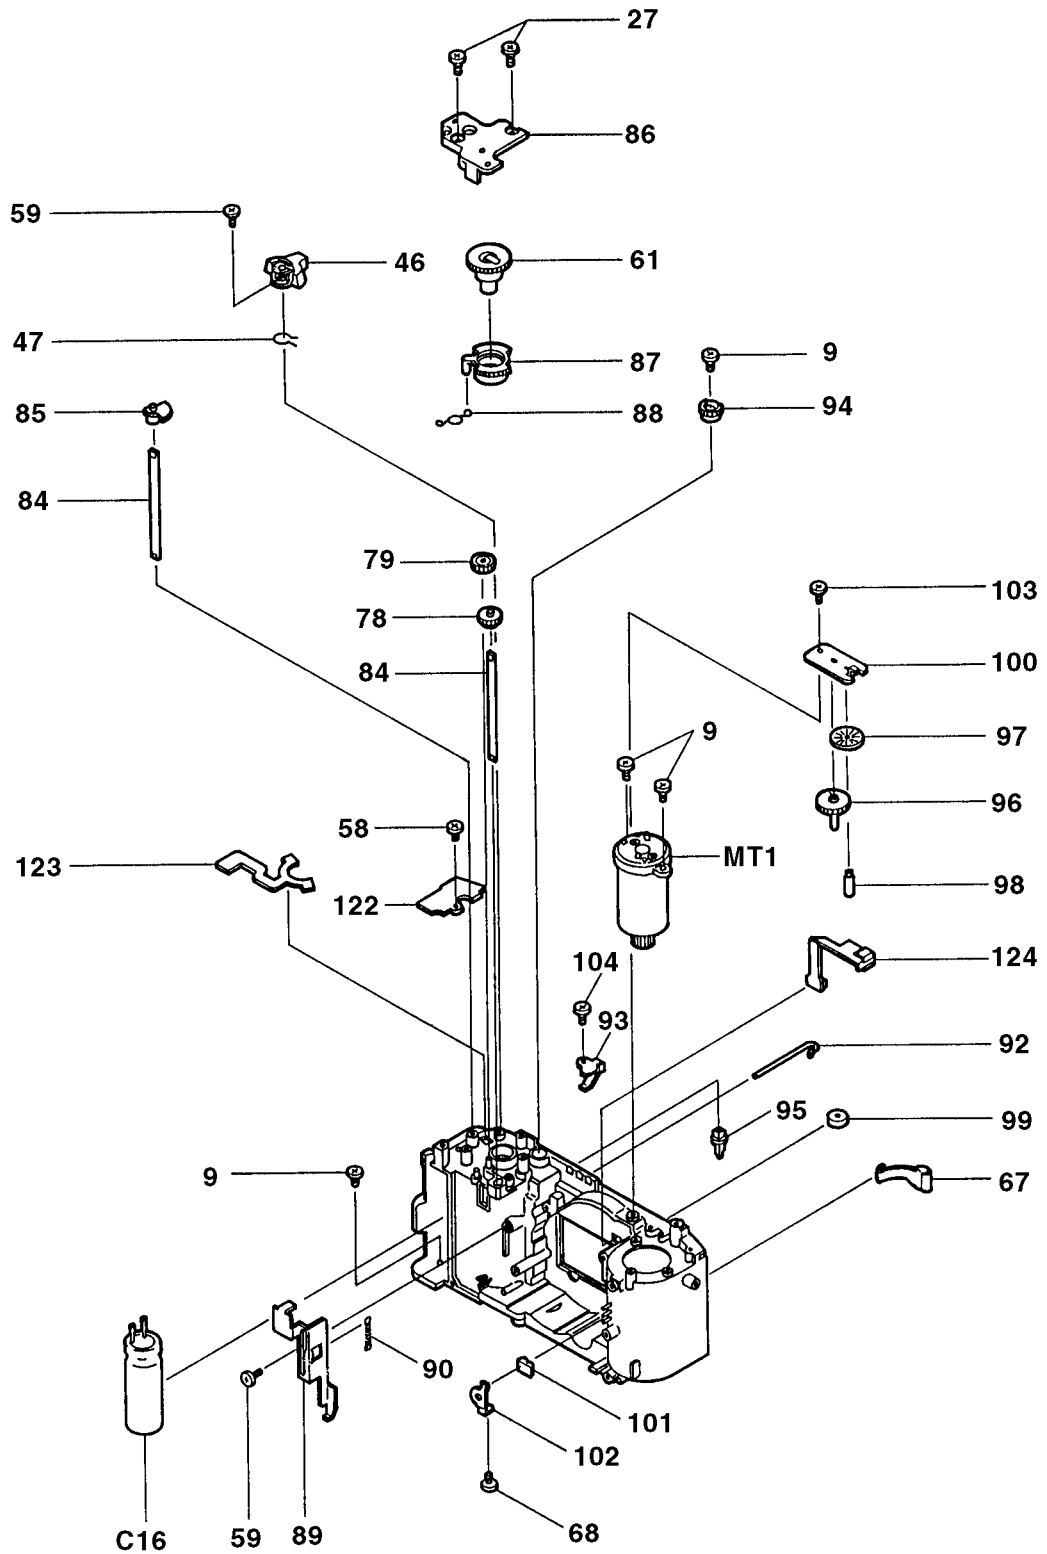


PARTS LIST

REF.No.C13-4051[A]
 C13-4052[B]
 C13-4053[C]

SYMBOL	NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
9		CY2-0895-000	F	4	SCREW
27		CY2-0910-000	F	2	SCREW
46		CY2-0921-000	C	1	KNOB, ZOOM
47		CY2-0922-000	F	1	SPRING, ZOOM KNOB
58		CY2-0931-000	F	1	SCREW
59		CY2-0932-000	F	2	SCREW
61		CY2-0934-000	E	1	HOLDER ASS'Y, LEVER (C)
67		CY2-0940-000	E	1	ROLLER SPRING ASS'Y
68		CY2-0941-000	F	1	SCREW
78		CY2-0951-000	E	1	GEAR (11)
79		CY2-0952-000	E	1	GEAR (12)
84		CY2-0957-000	E	2	SHAFT, GEAR DRIVE
85		CY2-0958-000	E	1	LEVER (B)
86		CY2-0959-000	E	1	PLATE, GEAR HOLDER (B)
87		CY2-0960-000	E	1	LEVER (C)
88		CY2-0961-000	F	1	SPRING, LEVER (C)
89		CY2-0962-000	E	1	LEVER, CARTRIDGE EJECT
90		CY2-0963-000	F	1	SPRING, CARTRIDGE EJECT
92		CY2-0965-000	E	1	CONTACT, BATTERY (+)
93		CY2-0966-000	E	1	CONTACT, BATTERY (-)
94		CY2-0967-000	E	1	LEVER (E)
95		CY2-0968-000	E	1	DISK DRIVER
96		CY2-0969-000	E	1	GEAR, ENCORDER (1)
97		CY2-0970-000	E	1	GEAR, ENCORDER (2)
98		CY2-0971-000	E	1	SHAFT, ENCORDER GEAR (2)
99		CY2-0972-000	E	1	ROLLER, ENCORDER
100		CY2-0973-000	E	1	HOLDER, GEAR (C)
101		CY2-0974-000	E	1	PAD
102		CY2-0975-000	F	1	SPRING, PAD HOLD
103		CY2-0976-000	F	1	SCREW
104		CY2-0977-000	F	1	SCREW
122		CY2-0981-000	C	1	PCB ASS'Y, EFU
123		CY2-0982-000	C	1	FPC ASS'Y, SENSOR
124		CY2-0983-000	C	1	FPC ASS'Y, FILM
C16		CY2-0985-000	C	1	CAPACITOR, AL-EL 330V 150É F
MT1		CY2-0987-000	D	1	MOTOR ASS'Y, FILM

CANON IXY25 [A]
ELPH 260Z [B]
Z60 IX [C]

REF.No. C13-4051
C13-4052
C13-4053

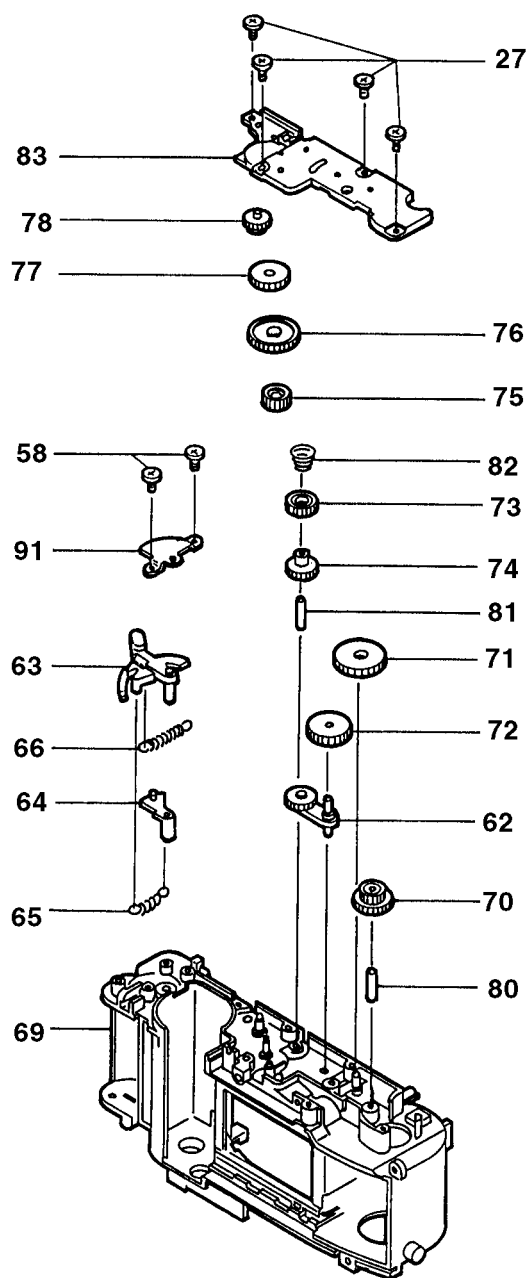

PARTS LIST

REF.No.C13-4051[A]
 C13-4052[B]
 C13-4053[C]

SYMBOL	NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
27		CY2-0910-000	F	4	SCREW
58		CY2-0931-000	F	2	SCREW
62		CY2-0935-000	E	1	GEAR ASS'Y, PLANET
63		CY2-0936-000	E	1	LEVER, CARTRIGE OPENER
64		CY2-0937-000	E	1	LEVER (A)
65		CY2-0938-000	F	1	SPRING, LEVER (A)
66		CY2-0939-000	F	1	SPRING, CARTRIGE OPENER
69		CY2-0942-000	E	1	MAIN BODY ASS'Y
70		CY2-0943-000	E	1	GEAR (4)
71		CY2-0944-000	E	1	GEAR (5)
72		CY2-0945-000	E	1	GEAR (6)
73		CY2-0946-000	E	1	GEAR (8A)
74		CY2-0947-000	E	1	GEAR (8B)
75		CY2-0948-000	E	1	GEAR (8C)
76		CY2-0949-000	E	1	GEAR (9)
77		CY2-0950-000	E	1	GEAR (10)
78		CY2-0951-000	E	1	GEAR (11)
80		CY2-0953-000	E	1	SHAFT, GEAR 4
81		CY2-0954-000	E	1	SHAFT, GEAR 8
82		CY2-0955-000	F	1	SPRING, CLUCH
83		CY2-0956-000	E	1	PLATE, GEAR HOLDER (A)
91		CY2-0964-000	E	1	HOLDER, LEVER