

CHAPTER 4. PARTS CATALOG

CONTENTS

PowerShot A40/PowerShot A30

Casing Parts -----	Pg1
Internal Parts-1 -----	Pg2
Internal Parts-2 -----	Pg3
OPTICAL UNIT -----	Pg4
Accessories-1 -----	Pg5
Accessories-2 -----	Pg6
Accessories-3 -----	Pg7
Service Tools-----	Pg8

CLASS凡例


- A: 使用頻度 高
- B: 使用頻度 中
- C: 使用頻度 低
- D: 安全規格部品
- E: 消耗部品
- F: 標準ネジ、ワッシャー
- S: 供給制限品

Category of CLASS

- A: Frequency of use: High
- B: Frequency of use: Middle
- C: Frequency of use: Low
- D: Safety-related critical parts
- E: Consumable parts
- F: Standard screws and washers
- S: Supply of the parts is limited

Pg1

Casing Parts

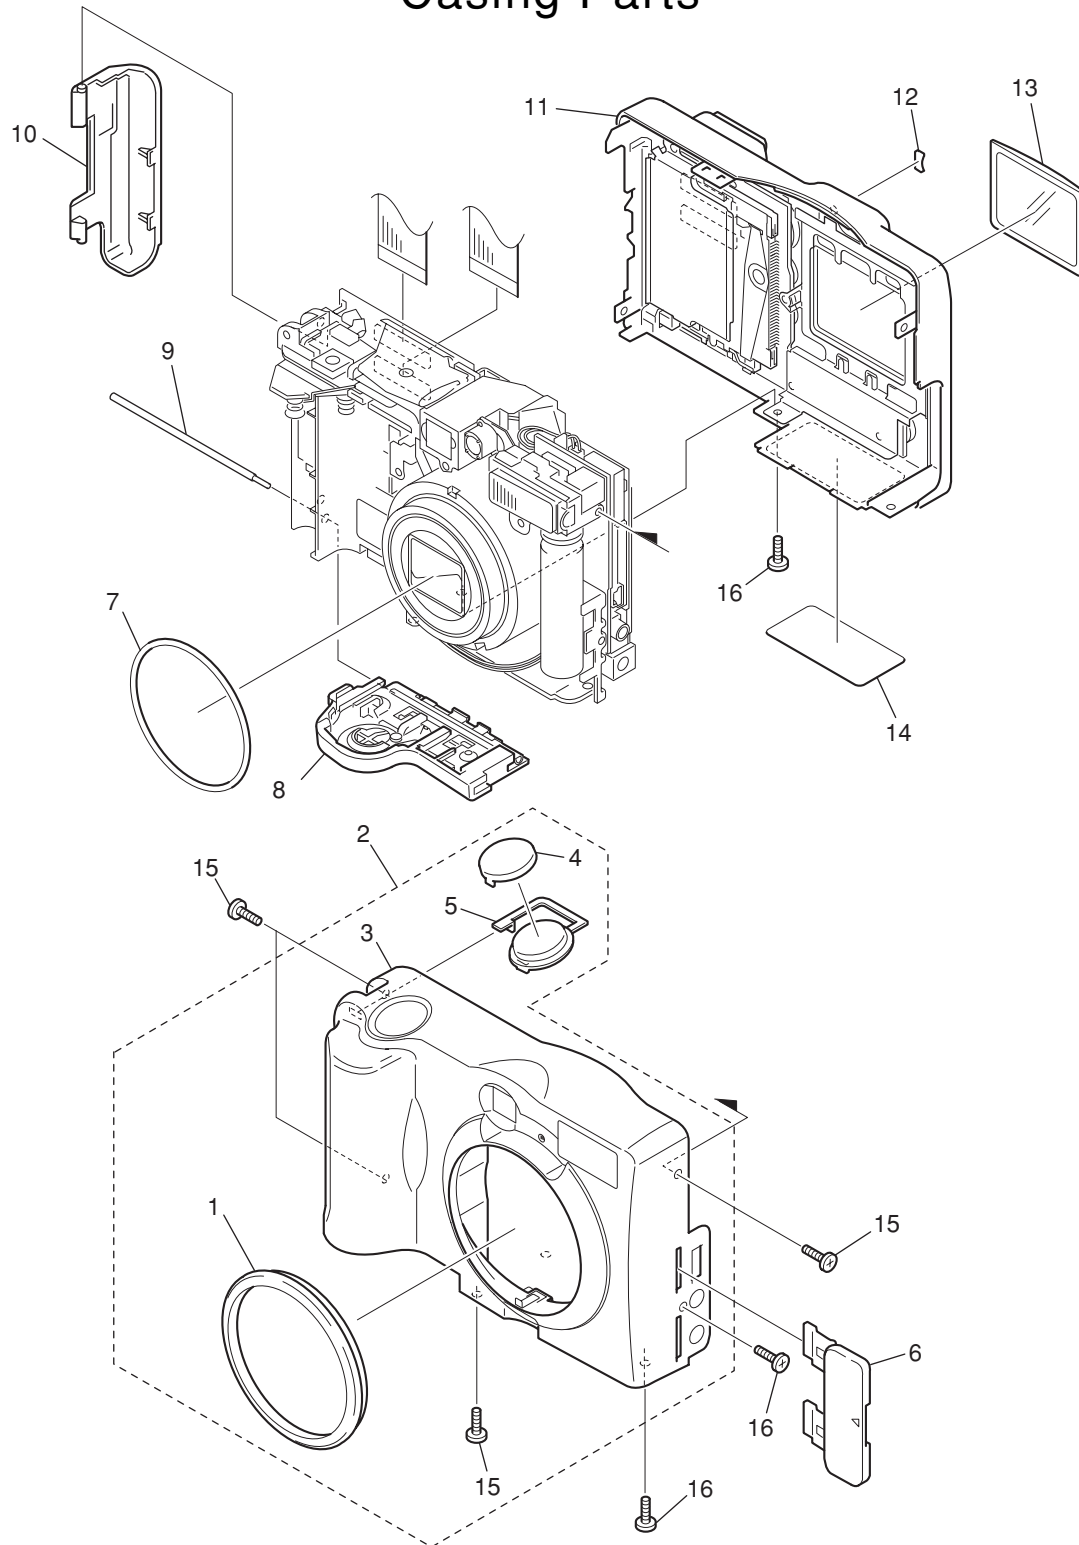


PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CY1-6154-000	B	1	RING, SCREW	A40/A30
2	CM1-1387-000	B	1	FRONT COVER UNIT	A30
3	CM1-1373-000	B	1	FRONT COVER UNIT	A40
4	CD1-3790-000	B	1	CAP, RELEASE	A40
5	CD1-3413-000	B	1	BASE, RELEASE	A40
6	CD1-4260-000	B	1	COVER, CONNECTOR	A40/A30
7	CD1-3432-000	C	1	SHEET, LENS BARREL	A40/A30
8	CM1-1375-000	B	1	BATTERY COVER UNIT	A40
	CM1-1388-000	B	1	BATTERY COVER UNIT	A30
9	CD1-3486-000	C	1	BAR, BATTERY COVER	A40/A30
10	CD1-4261-000	B	1	COVER, CF	A40/A30
11	CM1-1374-000	B	1	REAR COVER UNIT	A40/A30
12	CD1-4274-000	B	1	COVER, HOLE	A40/A30
13	CD1-4265-000	B	1	WINDOW, LCD	A40/A30
14	CY1-6136-000	B	1	PLATE, BODY NUMBER (J)	A40 (FOR JAPAN)
	CY1-6137-000	B	1	PLATE, BODY NUMBER (N)	A40 (FOR USA/CANADA)
	CY1-6138-000	B	1	PLATE, BODY NUMBER (E)	A40 (FOR EUROPE)
	CY1-6139-000	B	1	PLATE, BODY NUMBER (O)	A40 (FOR ASIA/AUSTRARIA)
	CY1-6140-000	B	1	PLATE, BODY NUMBER (J) (MALAYSIA)	A40 (FOR JAPAN)
	CY1-6141-000	B	1	PLATE, BODY NUMBER (N) (MALAYSIA)	A40 (FOR USA/CANADA)
	CY1-6142-000	B	1	PLATE, BODY NUMBER (E) (MALAYSIA)	A40 (FOR EUROPE)
	CY1-6143-000	B	1	PLATE, BODY NUMBER (O) (MALAYSIA)	A40 (FOR ASIA/AUSTRARIA)
	CY1-6144-000	B	1	PLATE, BODY NUMBER (J)	A30 (FOR JAPAN)
	CY1-6145-000	B	1	PLATE, BODY NUMBER (N)	A30 (FOR USA/CANADA)
	CY1-6146-000	B	1	PLATE, BODY NUMBER (E)	A30 (FOR EUROPE)
	CY1-6147-000	B	1	PLATE, BODY NUMBER (O)	A30 (FOR ASIA/AUSTRARIA)
15	CD1-4276-000	F	4	SCREW	A40
	CD1-4283-000	F	4	SCREW	A30
16	CD1-4277-000	F	3	SCREW	A40
	CD1-4284-000	F	2	SCREW	A30
	CD1-4277-000	F	1	SCREW	A30

Pg2

Internal Parts-1

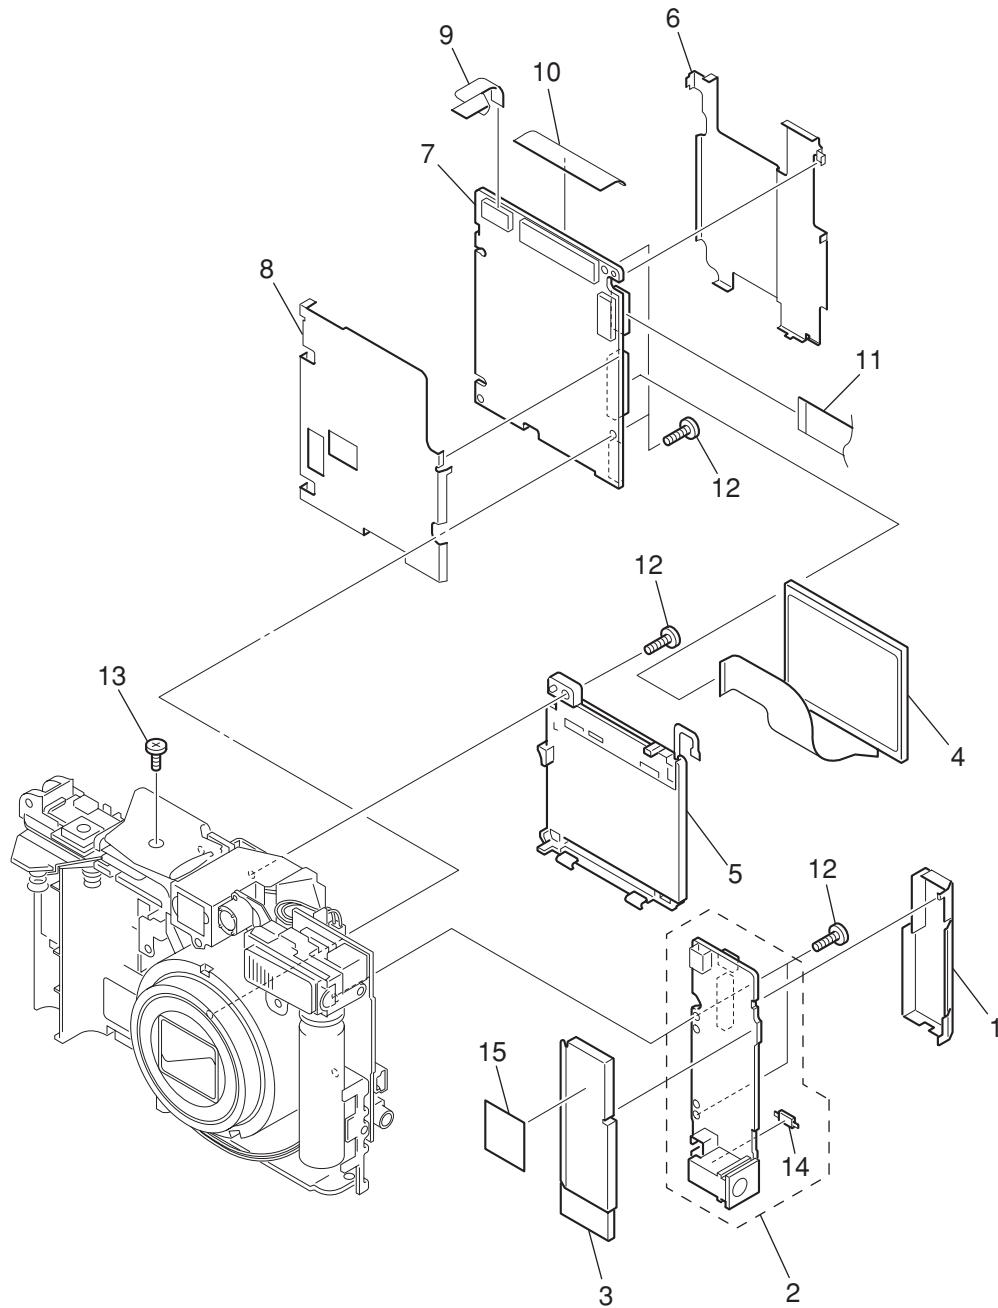


PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CD1-3510-000	C	1	CASE, DC/DC SHIELD 2	A40/A30
2	CM1-1377-000	C	1	DC/DC PCB ASS'Y	A40
	CM1-1390-000	C	1	DC/DC PCB ASS'Y	A30
3	CD1-3509-000	C	1	CASE, DC/DC SHIELD 1	A40/A30
4	WG2-5213-000	C	1	PANEL, LCD	A40/A30
	WG2-5213-001	C	1	PANEL, LCD (SELECTION)	A40/A30
5	CM1-1381-000	C	1	BACK LIGHT UNIT	A40/A30
6	CD1-3508-000	C	1	CASE, MAIN SHIELD 2	A40/A30
7	CM1-1376-000	C	1	MAIN PCB ASS'Y	A40
	CM1-1389-000	C	1	MAIN PCB ASS'Y	A30
8	CD1-3507-010	C	1	CASE, MAIN SHIELD 1	A40/A30
9	CK2-1204-000	C	1	FPC, M-R	A40/A30
10	CD1-4281-000	C	1	SHEET, EM 2	A40/A30
11	CK2-1202-000	C	1	FPC, M-D	A40/A30
12	CD1-4270-000	F	5	SCREW	A40/A30
13	CD1-3441-000	F	1	SCREW	A40/A30
14	WD1-5063-000	C	1	FUSE, MATSU.DENKI UNHH205	A40/A30
15	CD1-4282-000	C	1	SHEET, DC/DC	A40/A30

Pg3

Internal Parts-2

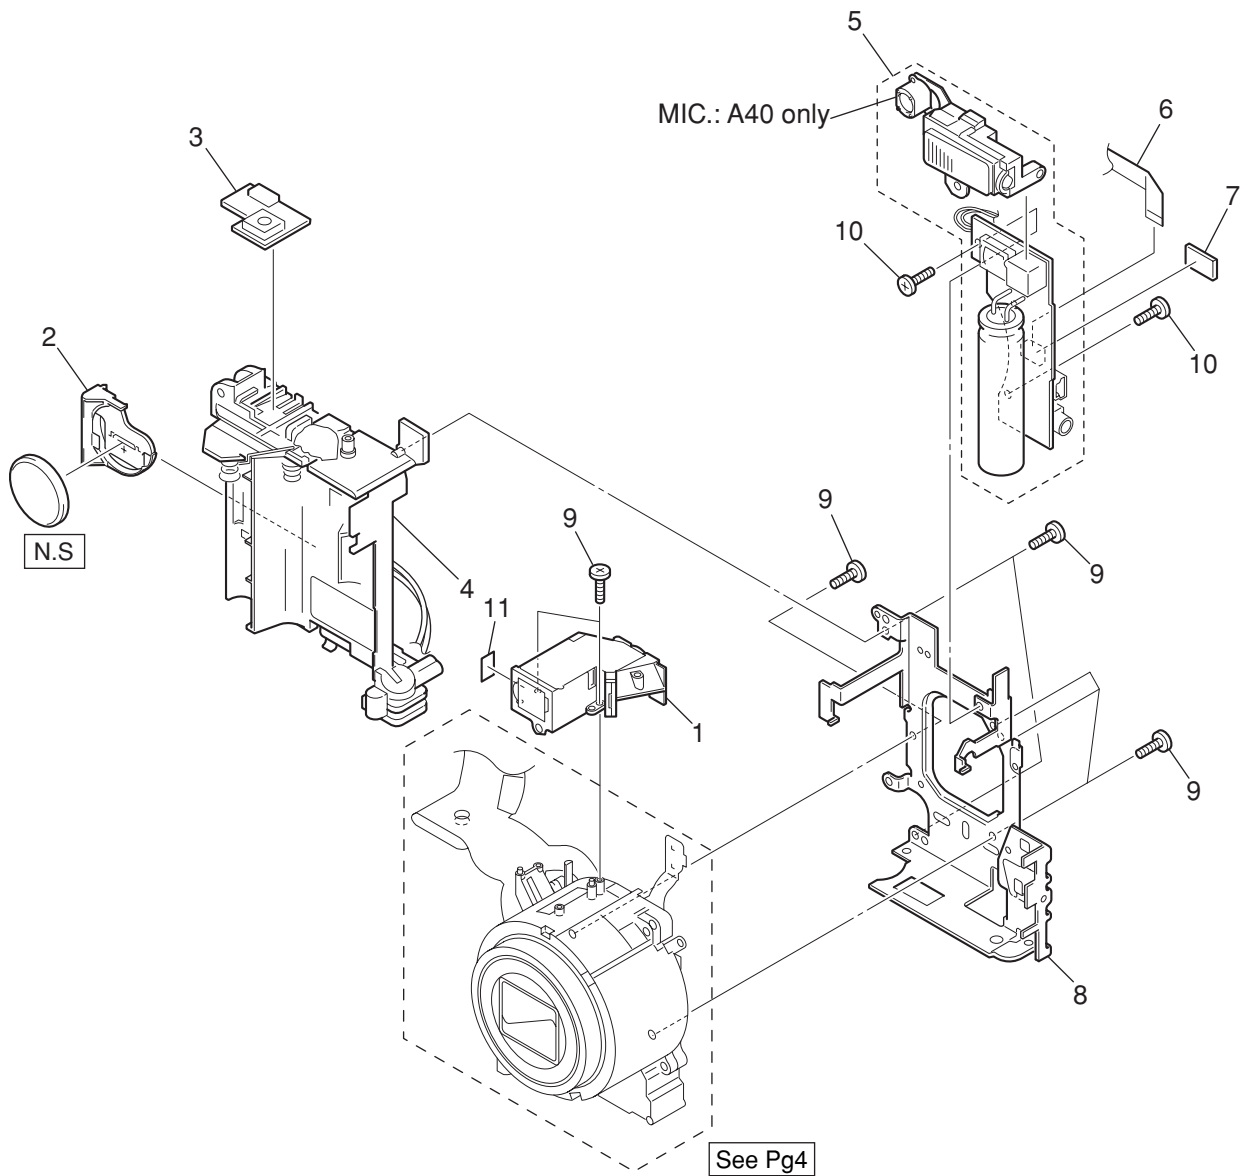


PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CM1-1180-000	B	1	FINDER UNIT	A40/A30
2	CD1-4262-000	B	1	HOLDER, LITHIUM BATTERY	A40/A30
3	CM1-1380-000	C	1	RLS PCB ASS'Y	A40/A30
4	CM1-1383-000	C	1	BATTERY BOX UNIT	A40/A30
5	CM1-1378-000	C	1	FLASH UNIT	A40
	CM1-1391-000	C	1	FLASH UNIT	A30
6	CK2-1203-000	C	1	FPC, M-S	A40/A30
7	CD1-3799-000	C	1	SHEET, EM 1	A40/A30
8	CD1-3473-010	C	1	FRAME, MAIN	A40/A30
9	XA4-9170-407	F	8	SCREW	A40/A30
10	CD1-4270-000	F	2	SCREW	A40/A30
11	CD1-4435-000	C	1	SHEET, CONDUCTION	A40/A30

Pg4

OPTICAL UNIT

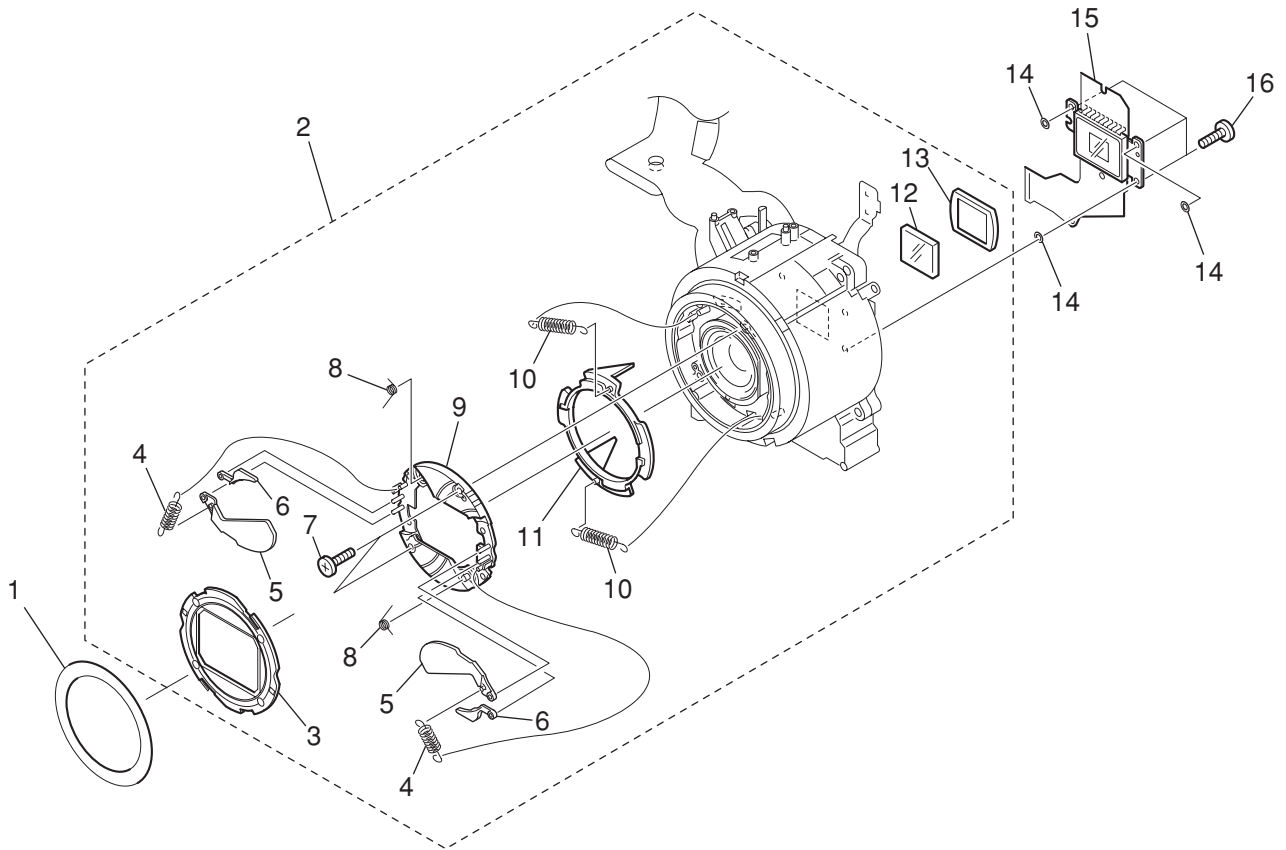


PARTS LIST


SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CD1-4257-000	B	1	PLATE, LENS	A40/A30
2	CY1-6133-000	B	1	OPTICAL UNIT	A40
	CY1-6134-000	B	1	OPTICAL UNIT	A30
3	CD1-4256-000	C	1	CAP, LENS BARREL	A40/A30
4	CS8-5228-000	C	2	SPRING, BARRIER CLOSE	A40/A30
5	CD1-4254-000	B	2	PLATE, BARRIER 1	A40/A30
6	CD1-4255-000	B	2	PLATE, BARRIER 2	A40/A30
7	XA4-9140-359	F	2	SCREW	A40/A30
8	CS8-6159-000	C	2	SPRING, BARRIER PLATE 2	A40/A30
9	CD1-3448-000	C	1	BASE, BARRIER	A40/A30
10	CS8-5229-000	C	2	SPRING, BARRIER OPEN	A40/A30
11	CD1-3447-000	C	1	RING, BARRIER DRIVE	A40/A30
12	YN1-2011-000	C	1	FILTER, IR	A40
	YN1-2021-000	C	1	FILTER, IR	A30
13	FC2-9355-000	C	1	RUBBER, CCD	A40/A30
14	CD1-3443-000 020	C	3	WASHER, CCD	A40
	CD1-3443-000 040	C	3	WASHER, CCD	A30
15	CY1-6092-000	C	1	CCD UNIT	A40
	CY1-6135-000	C	1	CCD UNIT	A30
16	XA4-9140-307	F	3	SCREW	A40/A30

Accessories-1

Wrist Strap WS-200

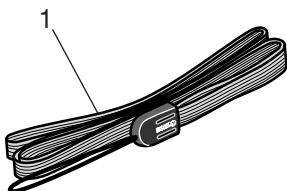


**USB Interface Cable
IFC-300PCU**




N.S

**Compact Power Adapter
CA-PS500**

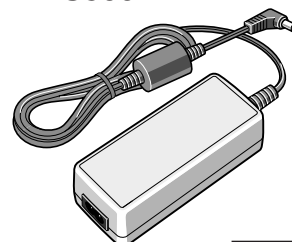


N.S

**Canon Digital Camera
Solution Disk,
ArcSoft Camera Suite Disk**

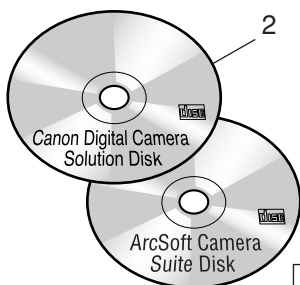


N.S

**Direct Interface Cable
DIF-100**




N.S

AC Cable

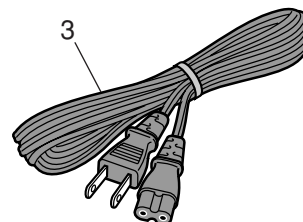


CF Card FC-8M

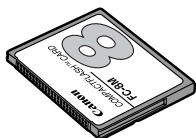

N.S

**Battery Charger
CB-3AH**

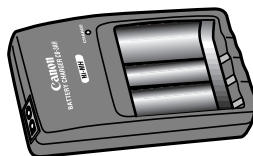


N.S

Soft Case SC-PS600



N.S

Video Cable VC-100

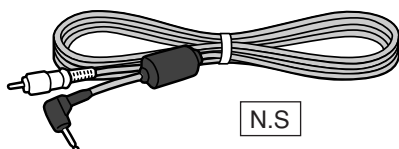

N.S

NiMH Battery NB4-100



N.S

N.S : N.S Stand for No Stock (Product available)

PARTS LIST


SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	C84-1060-000	B	1	WRIST STRAP WS-200	
2	C84-1109-000	S	1	CD-ROM, SOLUTION VER.8.0 (J/E)	
	C84-1110-000	S	1	CD-ROM, SOLUTION VER.8.0 (E/F/S)	
3	WT3-5062-000	C	1	AC CABLE (J)	FOR JAPAN
	WT3-5063-000	C	1	AC CABLE (N)	FOR USA/CANADA
	WT3-5064-000	C	1	AC CABLE (E)	FOR EUROPE/ASIA
	WT3-5115-000	C	1	AC CABLE (B)	FOR ASIA
	WT3-5066-000	C	1	AC CABLE (A)	FOR AUSTRARIA

Accessories-2


**Conversion Lens Adapter
LA-DC52**



**Wide Converter
WC-DC52**

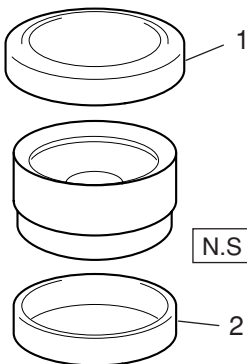


**Tele Converter
TC-DC52**

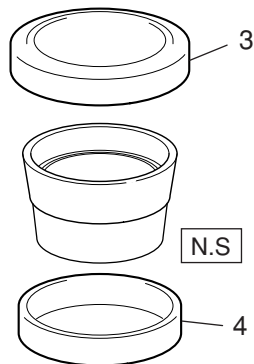


**Close-up Lens
250D (52mm)**




Waterproof Case WP-DC200s

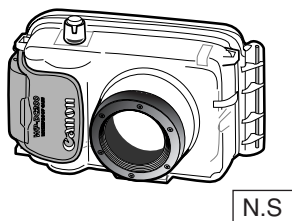


Waterproof Seal

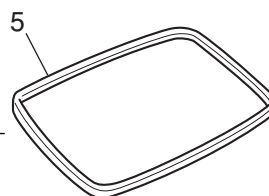


Silicone Grease

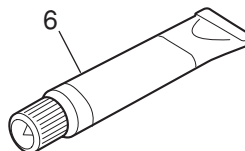

Anti-Condensation Solution

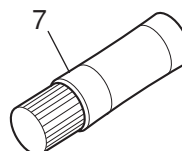

Neck Strap

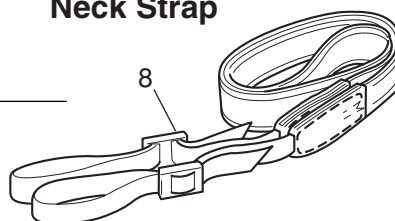


N.S.: N.S Stand for No Stock (Product available)

PARTS LIST


SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CD1-3830-000	B	1	CAP, FRONT	
2	CD1-4042-000	B	1	CAP, REAR	
3	CD1-4315-000	B	1	CAP, FRONT	
4	CD1-4316-000	B	1	CAP, REAR	
5	CY1-6100-000	B	1	PACKING, RUBBER, WP-DC200	
6	DY9-3029-000	C	1	GREASE, PACKING	
7	DY9-3028-000	C	1	PROTECTOR, MOISTURE	
8	CY1-6099-000	B	1	NECK STRAP	

Accessories-3


Camera User Guide

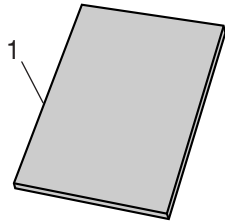

Software Starter Guide

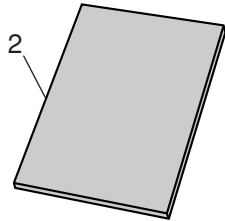

System Map

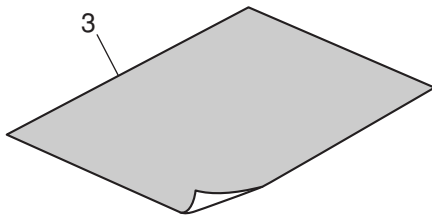

P A R T S L I S T


SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CDI-J028-000	S	1	I.BOOK (J) PS A40/A30	FOR JAPAN
	CDI-E047-000	S	1	I.BOOK (E) PS A40/A30	FOR USA/CANADA/ASIA/ AUSTRARIA
	CDI-F037-000	S	1	I.BOOK (F) PS A40/A30	FOR CANADA
	CDI-S038-000	S	1	I.BOOK (S) PS A40/A30	FOR USA
2	CDI-J032-000	S	1	SOFTWARE GUIDE (J) FOR VER8.0	FOR JAPAN
	CDI-E041-000	S	1	SOFTWARE GUIDE (E) FOR VER8.0	FOR USA/CANADA/ASIA/ AUSTRARIA
	CDI-F031-000	S	1	SOFTWARE GUIDE (F) FOR VER8.0	FOR CANADA
	CDI-S028-000	S	1	SOFTWARE GUIDE (S) FOR VER8.0	FOR USA
3	CDI-J029-000	S	1	SYSTEM MAP (J) PS A40/A30	FOR JAPAN
	CDI-E048-000	S	1	SYSTEM MAP (E) PS A40/A30	FOR USA/CANADA/ASIA/ AUSTRARIA
	CDI-F038-000	S	1	SYSTEM MAP (F) PS A40/A30	FOR CANADA
	CDI-S039-000	S	1	SYSTEM MAP (S) PS A40/A30	FOR USA

Service Tools


DIA BOND NO.1663G BLACK




W-10 Filter

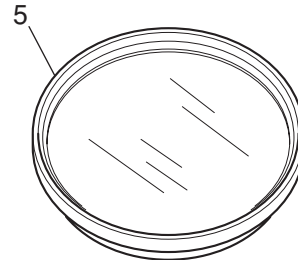


Adhesive Tape SONY T4000

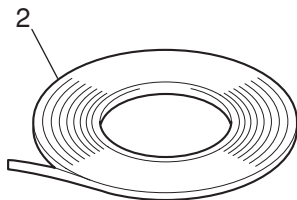



18% Gray Chart

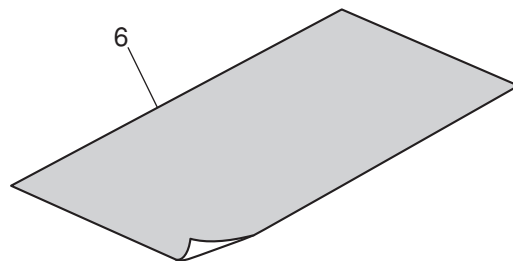

Adhesive Tape 3M NO.56

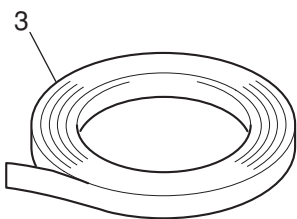

C-12 Filter

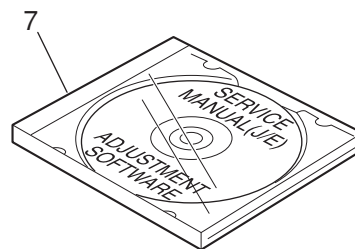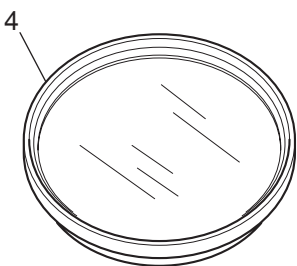

PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CY9-8129-000	Y	1	BOND, DIA BOND NO.1663G BLACK	
2	CY4-6012-000	Y	1	ADHESIVE TAPE, SONY T4000	6mm X 50m Roll
3	CY4-6018-000	Y	1	ADHESIVE TAPE, 3M NO.56	15mm X 66m Roll
4	DY9-2029-000	Y	1	FILTER, C-12	
5	CY9-1543-000	Y	1	FILTER, W-10	
6	CY4-6016-000	Y	1	CHART, 18% GRAY	
7	CY8-4375-031	Y	1	CD-ROM, SERVICE MANUAL (J/E)	