

CHAPTER 4. PARTS CATALOG


CONTENTS

PowerShot A20/PowerShot A10

Casing Parts -----	Pg1
Internal Parts-1 -----	Pg2
Internal Parts-2 -----	Pg3
OPTICAL UNIT -----	Pg4
Accessories-1 -----	Pg5
Accessories-2 -----	Pg6
Accessories-3 -----	Pg7
Service Tools-----	Pg8

Pg1

Casing Parts

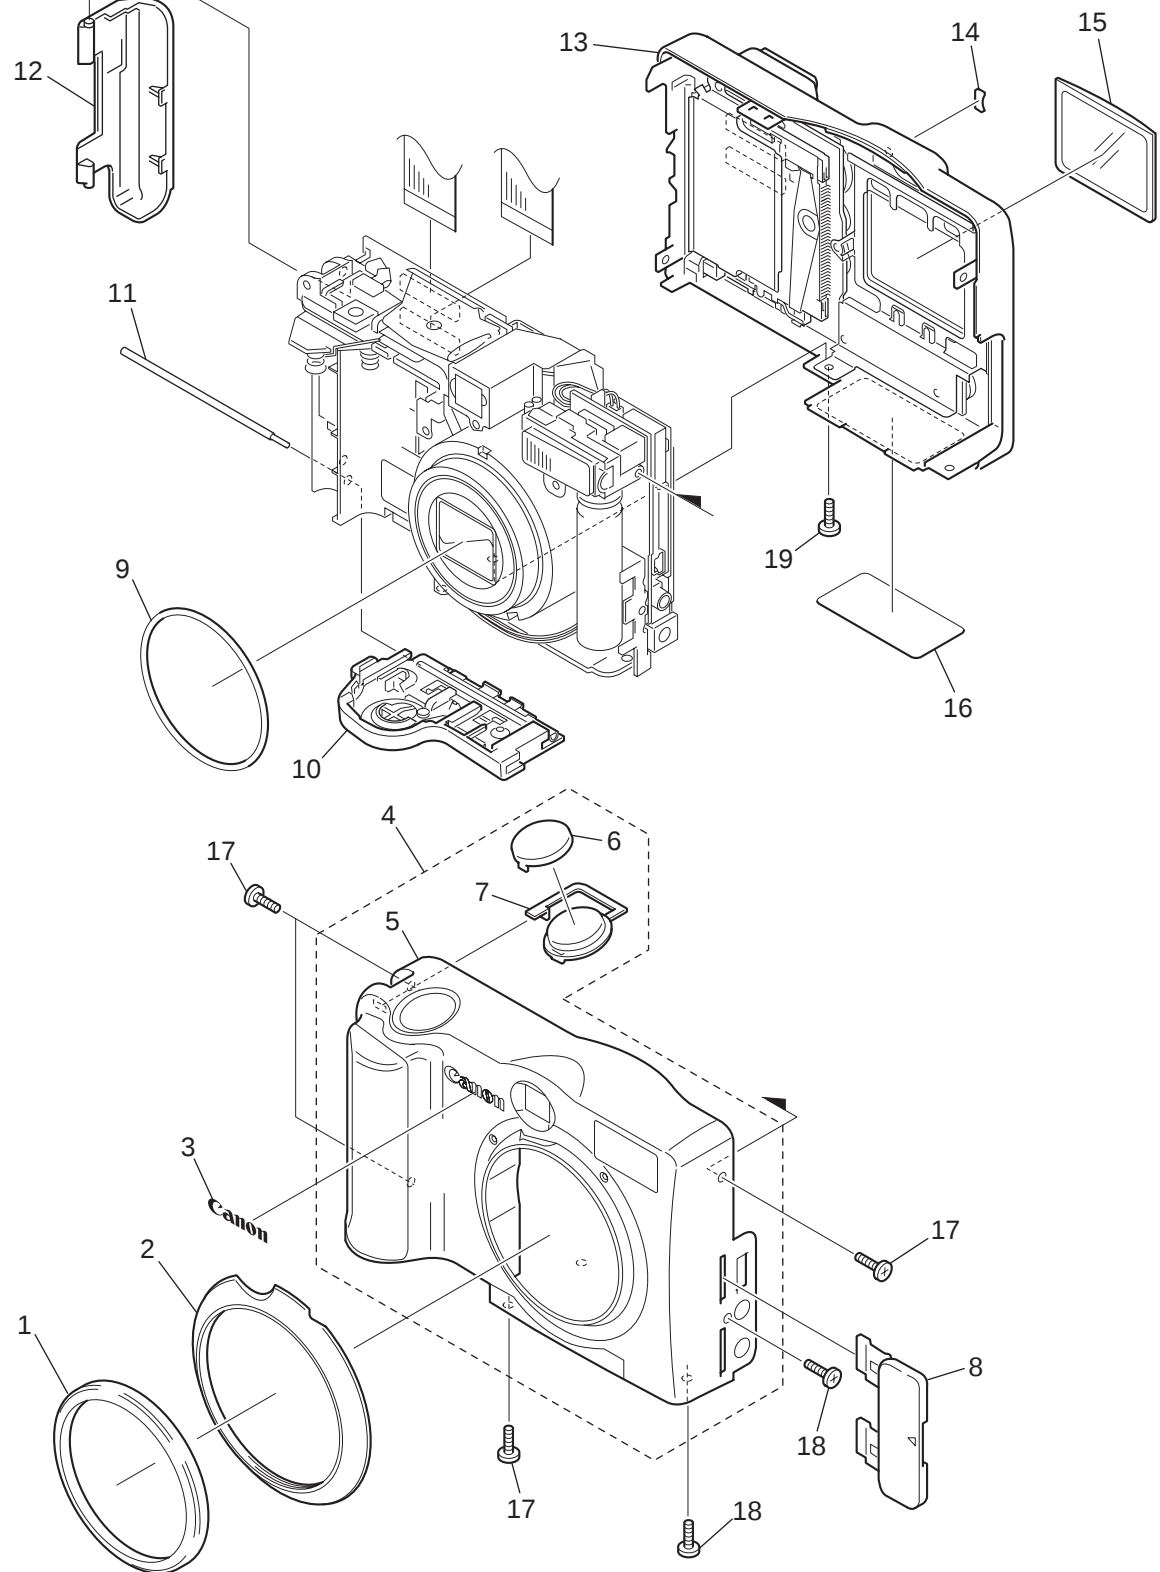

PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CD1-3501-000	B	1	RING, SCREW	A20/A10
2	CD1-3476-000	B	1	RING, DECORATION	A20
	CD1-3414-000	B	1	RING, DECORATION	A10
3	CD1-3514-000	B	1	PLATE, LOGO	A20/A10
4	CM1-1175-000	B	1	FRONT COVER UNIT	A10
5	CM1-1163-000	B	1	FRONT COVER UNIT	A20
6	CD1-3790-000	B	1	CAP, RELEASE	A20
7	CD1-3413-000	B	1	BASE, RELEASE	A20
8	CD1-3477-000	B	1	COVER, CONNECTOR	A20/A10
9	CD1-3432-000	C	1	SHEET, LENS BARREL	A20/A10
10	CM1-1166-000	B	1	BATTERY COVER UNIT	A20
	CM1-1176-000	B	1	BATTERY COVER UNIT	A10
11	CD1-3486-000	C	1	BAR, BATTERY COVER	A20/A10
12	CD1-3478-000	B	1	COVER, CF	A20/A10
13	CM1-1164-000	B	1	REAR COVER UNIT	A20/A10
14	CD1-3521-000	B	1	COVER, HOLE	A20/A10
15	CD1-3494-000	B	1	WINDOW, LCD	A20/A10
16	CY1-6101-000	B	1	PLATE, BODY NUMBER (J)	A20 (FOR JAPAN)
	CY1-6102-000	B	1	PLATE, BODY NUMBER (N)	A20 (FOR USA/CANADA)
	CY1-6103-000	B	1	PLATE, BODY NUMBER (E)	A20 (FOR EUROPE)
	CY1-6104-000	B	1	PLATE, BODY NUMBER (O)	A20 (FOR ASIA/AUSTRARIA)
	CY1-6105-000	B	1	PLATE, BODY NUMBER (J)	A10 (FOR JAPAN)
	CY1-6106-000	B	1	PLATE, BODY NUMBER (N)	A10 (FOR USA/CANADA)
	CY1-6107-000	B	1	PLATE, BODY NUMBER (E)	A10 (FOR EUROPE)
	CY1-6108-000	B	1	PLATE, BODY NUMBER (O)	A10 (FOR ASIA/AUSTRARIA)
17	CD1-3791-000	F	4	SCREW	A20/A10
18	CD1-3793-000	F	2	SCREW	A20/A10
19	CD1-3795-000	F	1	SCREW	A20/A10

CLASS凡例


A: 使用頻度 高
B: 使用頻度 中
C: 使用頻度 低
D: 安全規格部品
E: 消耗部品
F: 標準ネジ、ワッシャー
S: 供給制限品

Category of CLASS

A: Frequency of use: High
B: Frequency of use: Middle
C: Frequency of use: Low
D: Safety-related critical parts
E: Consumable parts
F: Standard screws and washers
S: Supply of the parts is limited

Pg2

Internal Parts-1

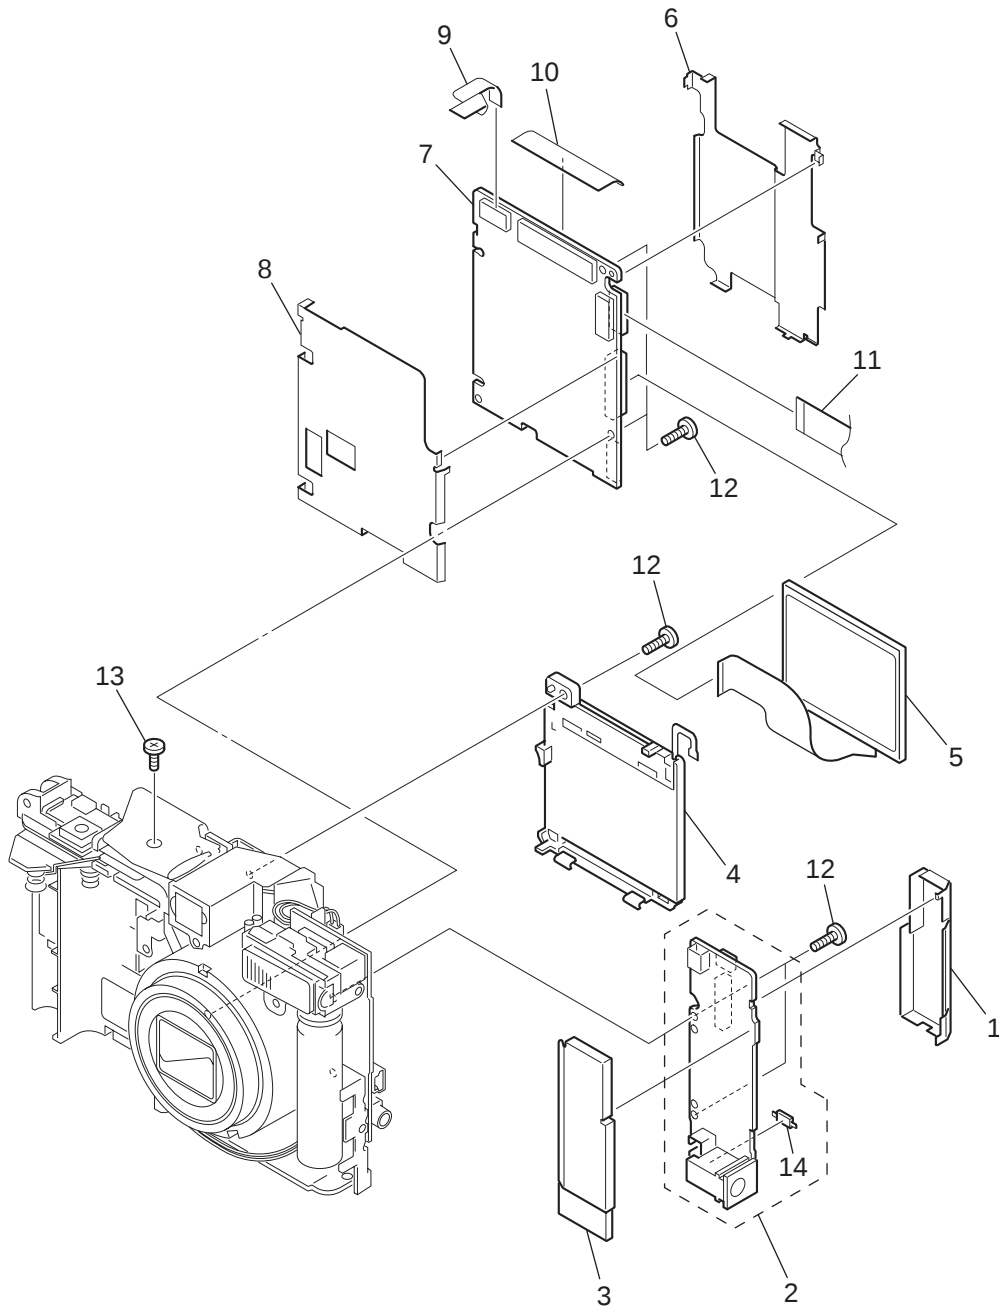


PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CD1-3510-000	C	1	CASE, DC/DC SHIELD 2	A20/A10
2	CM1-1168-000	C	1	DC/DC PCB ASS'Y	A20
	CM1-1179-000	C	1	DC/DC PCB ASS'Y	A10
3	CD1-3509-000	C	1	CASE, DC/DC SHIELD 1	A20/A10
4	WG2-5213-000	C	1	PANEL, LCD	A20/A10
	WG2-5213-001	C	1	PANEL, LCD (SELECTION)	A20/A10
5	CM1-1172-000	C	1	BACK LIGHT UNIT	A20/A10
6	CD1-3508-000	C	1	CASE, MAIN SHIELD 2	A20/A10
7	CM1-1167-000	C	1	MAIN PCB ASS'Y	A20
	CM1-1177-000	C	1	MAIN PCB ASS'Y	A10
8	CD1-3507-000	C	1	CASE, MAIN SHIELD 1	A20/A10
9	CK2-1204-000	C	1	FPC, M-R	A20/A10
10	CD1-3800-000	C	1	SHEET, EM 2	A20/A10
11	CK2-1202-000	C	1	FPC, M-D	A20/A10
12	CD1-3798-000	F	5	SCREW	A20/A10
13	CD1-3441-000	F	1	SCREW	A20/A10
14	WD1-5063-000	C	1	FUSE, MATSU.DENKI UNHH205	A20/A10

Pg3

Internal Parts-2

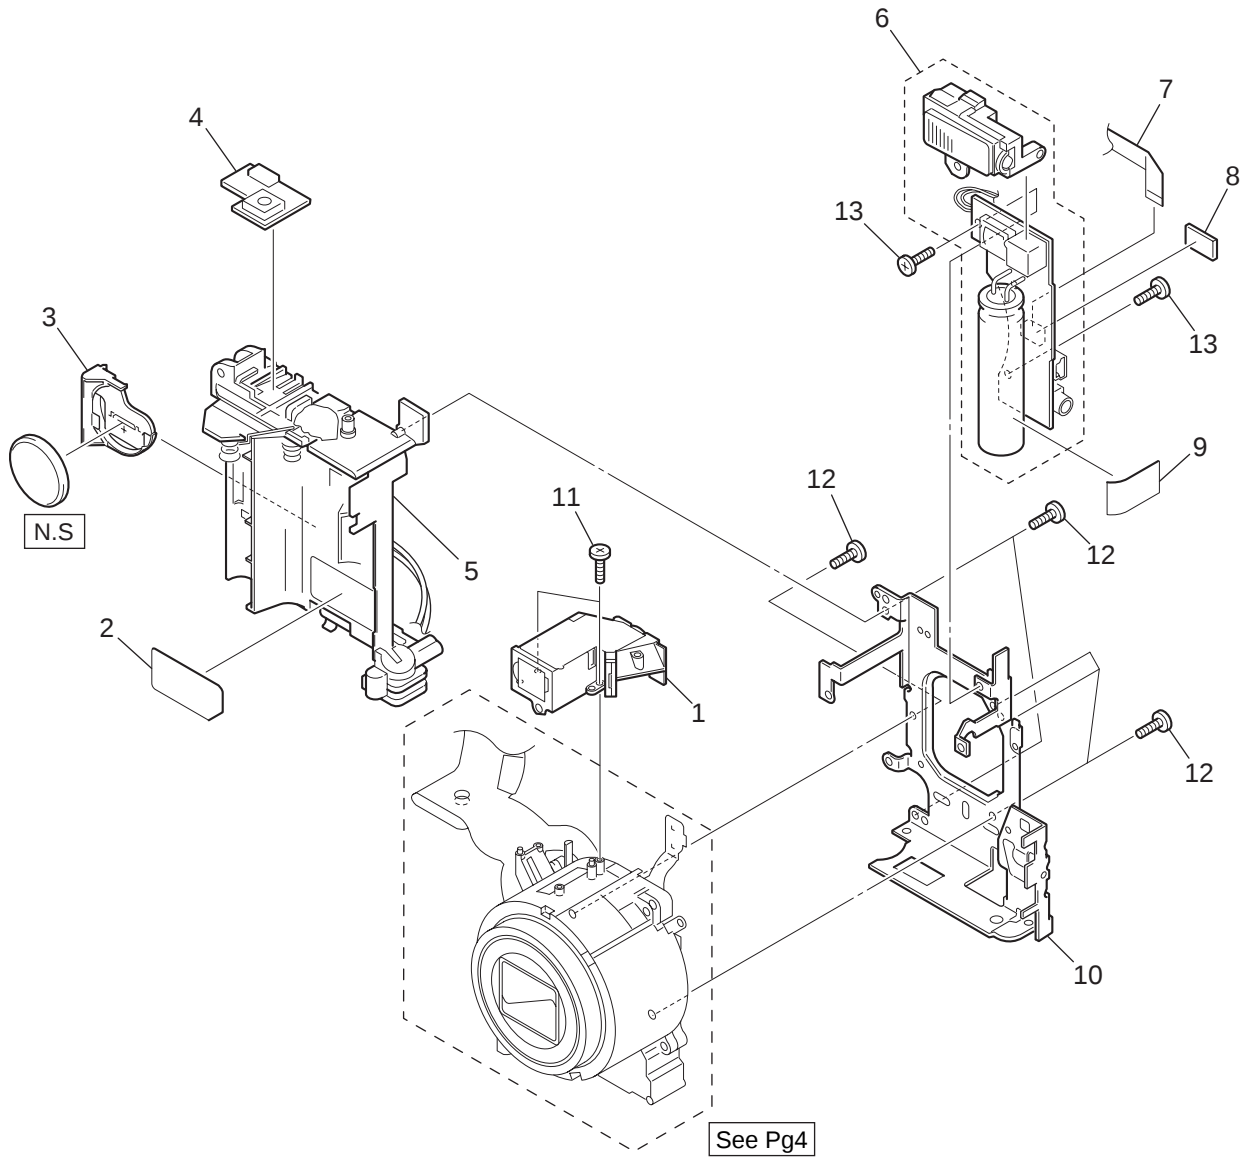


PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CM1-1180-000	B	1	FINDER UNIT	A20/A10
2	CD1-3511-000	B	1	LABEL, BATTERY	A20/A10
3	CD1-3479-000	B	1	HOLDER, LITHIUM BATTERY	A20/A10
4	CM1-1171-000	C	1	RLS PCB ASS'Y	A20/A10
5	CM1-1165-000	C	1	BATTERY BOX UNIT	A20/A10
6	CM1-1169-000	C	1	FLASH UNIT	A20
6	CM1-1178-000	C	1	FLASH UNIT	A10
7	CK2-1203-000	C	1	FPC, M-S	A20/A10
8	CD1-3799-000	C	1	SHEET, EM 1	A20/A10
9	CD1-3700-000	C	1	LABEL, HIGH VOLT. CAUTION	A20/A10
10	CD1-3473-000	C	1	FRAME, MAIN	A20/A10
11	XA4-9140-407	F	2	SCREW	A20/A10
12	XA4-9170-409	F	6	SCREW	A20/A10
13	CD1-3798-000	F	2	SCREW	A20/A10

Pg4

OPTICAL UNIT

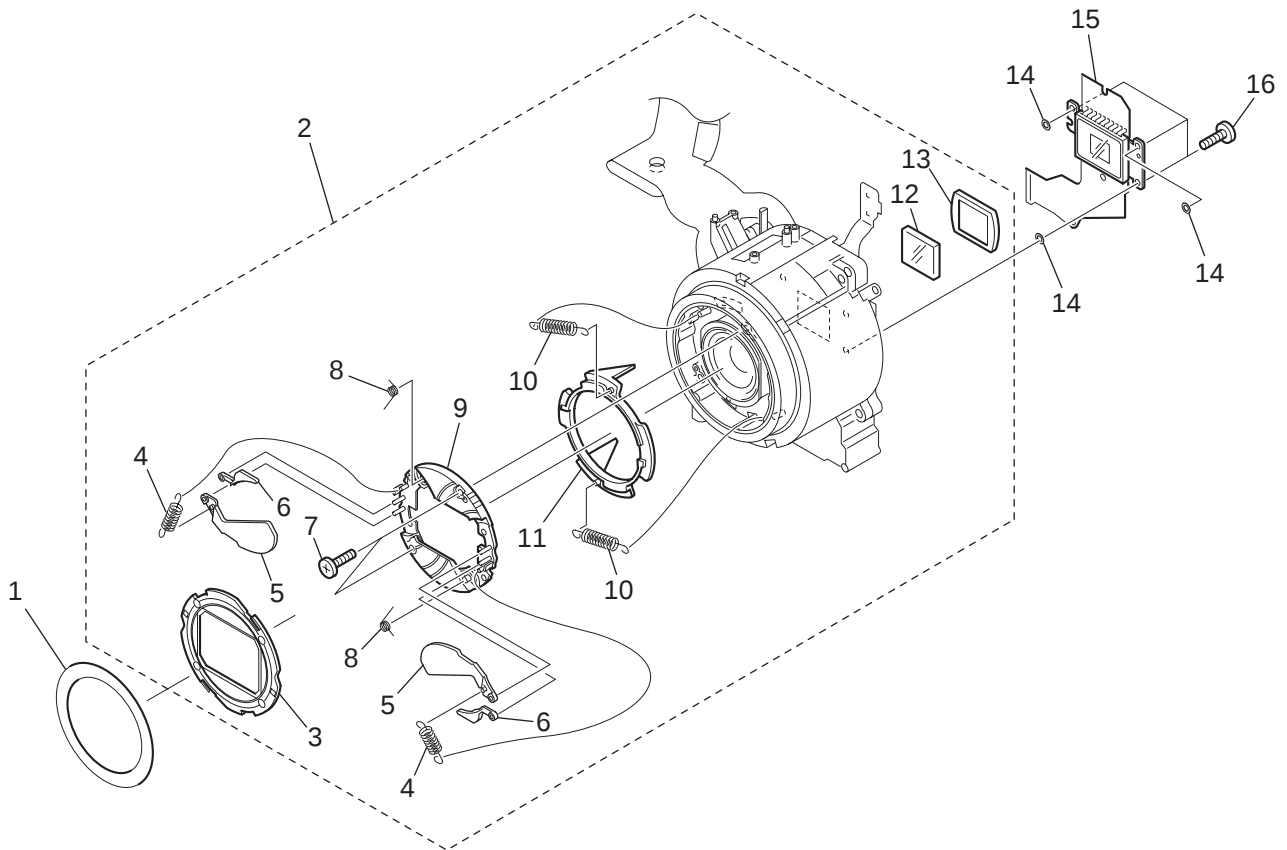


PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CD1-3452-000	B	1	PLATE, LENS	A20/A10
2	CY1-6110-000	B	1	OPTICAL UNIT	A20
	CY1-6111-000	B	1	OPTICAL UNIT	A10
3	CD1-3451-000	C	1	CAP, LENS BARREL	A20/A10
4	CS8-5228-000	C	2	SPRING, BARRIER CLOSE	A20/A10
5	CD1-3449-000	B	2	PLATE, BARRIER 1	A20/A10
6	CD1-3450-000	B	2	PLATE, BARRIER 2	A20/A10
7	XA4-9140-359	F	2	SCREW	A20/A10
8	SC8-6159-000	C	2	SPRING, BARRIER PLATE 2	A20/A10
9	CD1-3448-000	C	1	BASE, BARRIER	A20/A10
10	CS8-5229-000	C	2	SPRING, BARRIER OPEN	A20/A10
11	CD1-3447-000	C	1	RING, BARRIER DRIVE	A20/A10
12	YN1-1780-000	C	1	FILTER, IR	A20
	YN1-1801-000	C	1	FILTER, IR	A10
13	FC2-9355-000	C	1	RUBBER, CCD	A20/A10
14	CD1-3443-000	C	3	WASHER, CCD	A20/A10
15	CY1-6092-000	C	1	CCD UNIT	A20
	CY1-6093-000	C	1	CCD UNIT	A10
16	FC3-0021-000	F	3	SCREW, CCD	A20/A10


Pg5

Accessories-1

Wrist Strap WS-200

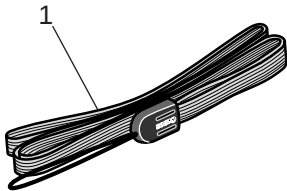


**USB Interface Cable
IFC-300PCU**




N.S

**Compact Power Adapter
CA-PS500**

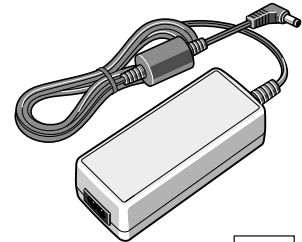


N.S

**Canon Digital Camera
Solution Disk**

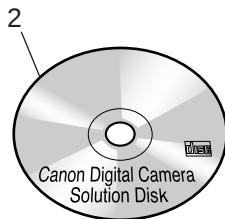


**Direct Interface Cable
DIF-100**




N.S

AC Cable

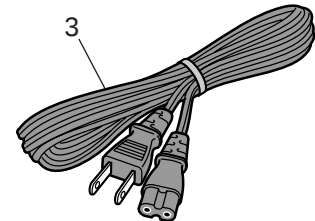

CF Card FC-8M

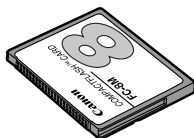


N.S

**Battery Charger
CB-3AH**




N.S

Soft Case SC-PS600

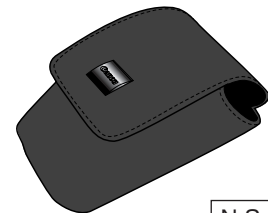

N.S

Video Cable VC-100

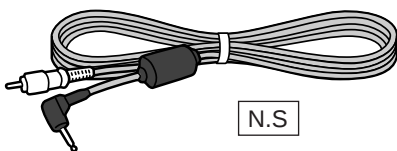

N.S

NiMH Battery NB4-100



N.S

N.S: N.S Stand for No Stock (Product available)

PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	C84-1060-000	B	1	WRIST STRAP WS-200	
2	C84-1061-000	S	1	CD-ROM, SOLUTION DISK 4.0 (J/E)	Expect EUROPE
3	WT3-5062-000	C	1	AC CABLE (J)	FOR JAPAN
	WT3-5063-000	C	1	AC CABLE (N)	FOR USA/CANADA
	WT3-5064-000	C	1	AC CABLE (E)	FOR EUROPE/ASIA
	WT3-5115-000	C	1	AC CABLE (B)	FOR ASIA
	WT3-5066-000	C	1	AC CABLE (A)	FOR AUSTRARIA

Accessories-2

**Conversion Lens Adapter
LA-DC52**



N.S

**Wide Converter
WC-DC52**




N.S

**Close-up Lens
250D (52mm)**




N.S

Waterproof Case WP-DC200

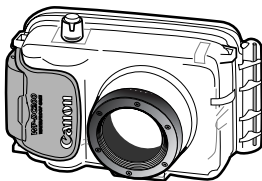


N.S


Waterproof Seal

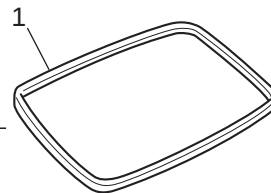


Silicone Grease

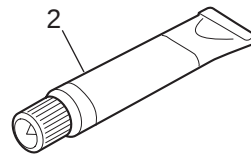

Anti-Condensation Solution

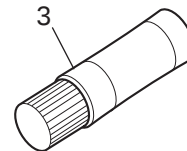

Neck Strap

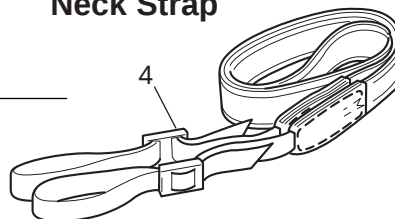


N.S: N.S Stand for No Stock (Product available)

PARTS LIST


SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CY1-6100-000	B	1	PACKING, RUBBER, WP-DC200	
2	DY9-3029-000	C	1	GREASE, PACKING	
3	DY9-3028-000	C	1	PROTECTOR, MOISTURE	
4	CY1-6099-000	B	1	NECK STRAP	

Accessories-3


Camera User Guide

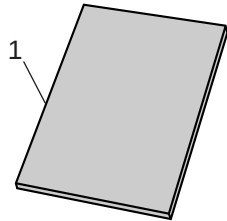

Software Starter Guide

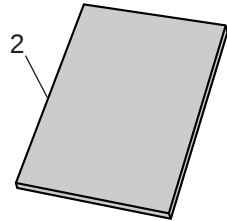

System Map

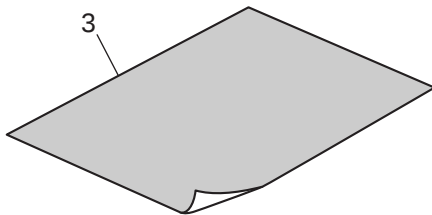

PARTS LIST


SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CDI-J016-010	S	1	I.BOOK (J) PS A20/A10	FOR JAPAN
	CDI-E017-010	S	1	I.BOOK (E) PS A20/A10	FOR USA/CANADA/ASIA/ AUSTRARIA
	CDI-F015-010	S	1	I.BOOK (F) PS A20/A10	FOR CANADA
	CDI-S013-010	S	1	I.BOOK (S) PS A20/A10	FOR USA
2	CDI-J014-010	S	1	SOFTWARE GUIDE (J) PS A20/A10	FOR JAPAN
	CDI-E015-010	S	1	SOFTWARE GUIDE (E) PS A20/A10	FOR USA/CANADA/ASIA/ AUSTRARIA
	CDI-F014-010	S	1	SOFTWARE GUIDE (F) PS A20/A10	FOR CANADA
	CDI-S012-010	S	1	SOFTWARE GUIDE (S) PS A20/A10	FOR USA
3	CDI-J017-010	S	1	SYSTEM MAP (J) PS A20/A10	FOR JAPAN
	CDI-E018-010	S	1	SYSTEM MAP (E) PS A20/A10	FOR USA/CANADA/ASIA/ AUSTRARIA
	CDI-F016-010	S	1	SYSTEM MAP (F) PS A20/A10	FOR CANADA
	CDI-S014-010	S	1	SYSTEM MAP (S) PS A20/A10	FOR USA

Service Tools


DIA BOND NO.1663G BLACK




W-10 Filter

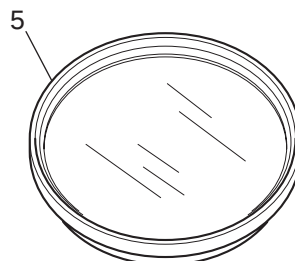



Adhesive Tape SONY T4000

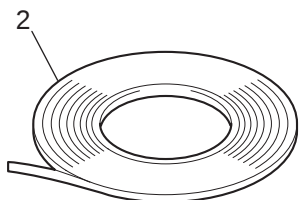



18% Gray Chart

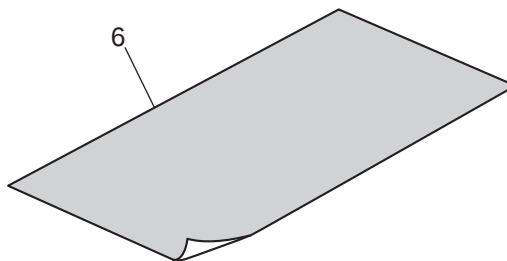

Adhesive Tape 3M NO.56

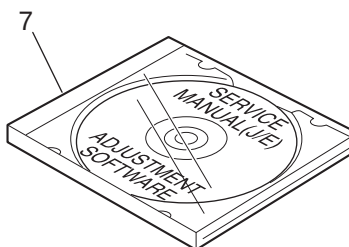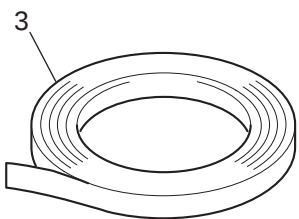

C-12 Filter

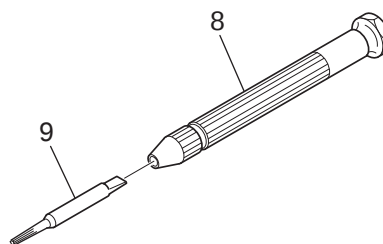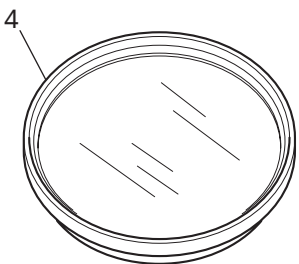

PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CY9-8129-000	Y	1	BOND, DIA BOND NO.1663G BLACK	
2	CY4-6012-000	Y	1	ADHESIVE TAPE, SONY T4000	6mm × 50m Roll
3	CY4-6018-000	Y	1	ADHESIVE TAPE, 3M NO.56	15mm × 66m Roll
4	DY9-2029-000	Y	1	FILTER, C-12	
5	CY9-1543-000	Y	1	FILTER, W-10	
6	CY4-6016-000	Y	1	CHART, 18% GRAY	
7	CY8-4371-031	Y	1	CD-ROM, SERVICE MANUAL (J/E)	
8	CY9-7014-001	Y	1	SCREW DRIVER HANDLE (TB41-1)	
9	CY9-1548-000	Y	1	BIT, HAND DRILL, TORX TX75A (T3)	