



SURE SHOT MEGA ZOOM 105

C13-2662

PRIMA ZOOM 105

C13-2663

AUTOBOY ZOOM 105

C13-2671

SURE SHOT MEGA ZOOM 105

CAPTION

C13-2672

PRIMA ZOOM 105 CAPTION


C13-2673

PARTS

CATALOG

CANON ① SURE SHOT MEGA ZOOM 105
 ② PRIMA ZOOM 105
 ③ AUTOBOY ZOOM 105
 ④ SURE SHOT MEGA ZOOM 105 CAPTION
 ⑤ PRIMA ZOOM 105 CAPTION

REF. NO. C13-2662
 C13-2663
 C13-2671
 C13-2672
 C13-2673

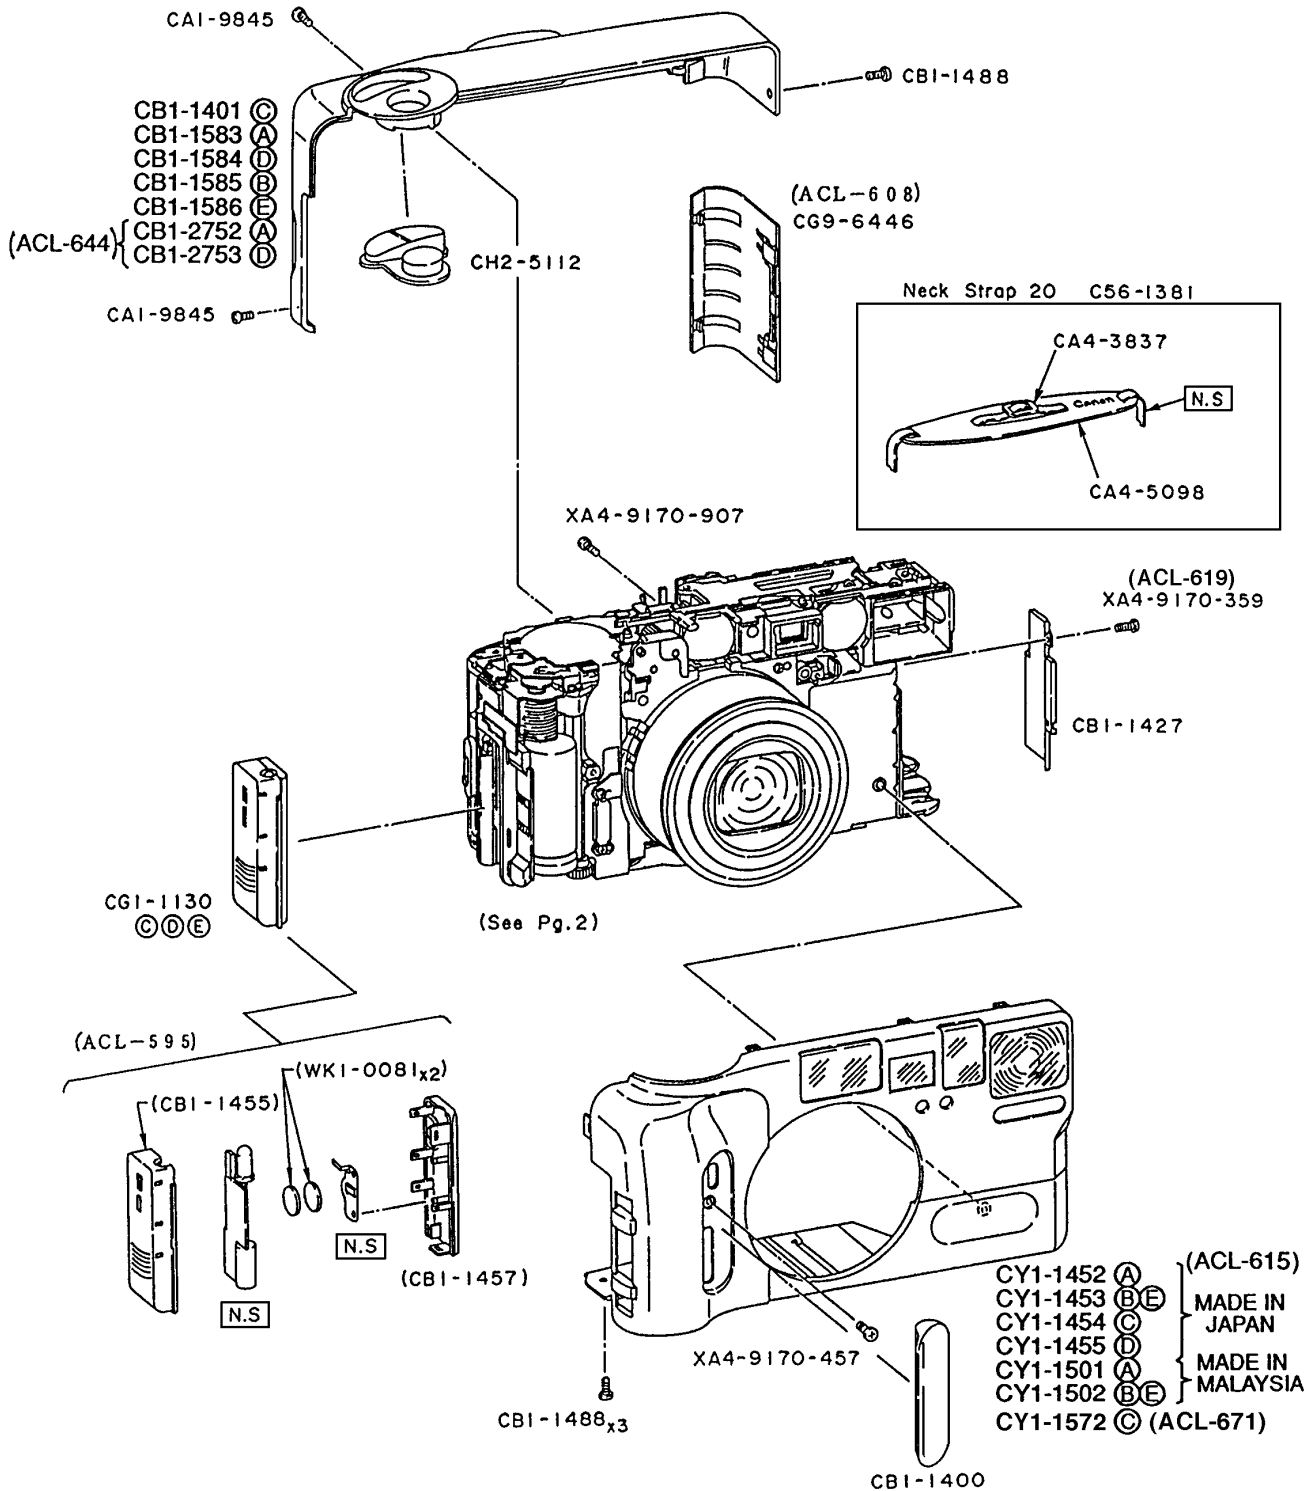

P A R T S L I S T


Pg 1

REF. No. 2662, 2663
2671, 2672, 2673

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9845-000		2	SCREW, CROSS-RECESS, PH
	CA4-3837-000	E	1	CLASP
	CA4-5098-000	E	1	HOLDER, STRAP
	CB1-1400-000	C	1	RUBBER, GRIP
	CB1-1401-000	C	1	COVER, REAR (AUTOBOY)
	CB1-1427-000	D	1	COVER, FLEX
	CB1-1455-000	C	1	COVER, REMOTE
	CB1-1457-000	C	1	COVER, REMOTE
	CB1-1488-000		4	SCREW, CROSS-RECESS, PH
	CB1-1583-000	C	1	COVER, REAR (M.Z. 105)
	CB1-1584-000	C	1	COVER, REAR (M.Z.105 CAP.)
	CB1-1585-000	C	1	COVER, REAR (P.Z. 105)
	CB1-1586-000	C	1	COVER, REAR (P.Z. 105 CAP.)
	CB1-2752-000	C	1	COVER, REAR (M.Z. 105)
	CB1-2753-000	C	1	COVER, REAR (M.Z.105 CAP.)
	CG1-1130-000	C	1	REMOTE CONTROL UNIT
	CG9-6446-000	C	1	COVER, BATTERY
	CH2-5112-000	E	1	SWITCH, RELEASE BUTTON
	CY1-1452-000	C	1	FRONT COVER UNIT (M.Z. 105)
	CY1-1453-000	C	1	FRONT COVER UNIT (P.Z 105/CAP.)
	CY1-1454-000	C	1	FRONT COVER UNIT (AUTOBOY)
	CY1-1455-000	C	1	FRONT COVER UNIT (M.Z. 105 CAP.)
	CY1-1501-000	C	1	FRONT COVER UNIT (M.Z. 105)
	CY1-1502-000	C	1	FRONT COVER UNIT (P.Z. 105/CAP.)
	CY1-1572-000	C	1	FRONT COVER UNIT (AUTOBOY)
	WK1-0081-000	D	2	BATTERY
	XA4-9170-359		1	SCREW, CROSS-RECESS, PH
	XA4-9170-457		1	SCREW, CROSS-RECESS, PH
	XA4-9170-907		1	SCREW, CROSS-RECESS, PH

- CANON
- ① SURE SHOT MEGA ZOOM IO5
 - ② PRIMA ZOOM IO5
 - ③ AUTOBOY ZOOM IO5
 - ④ SURE SHOT MEGA ZOOM IO5 CAPTION
 - ⑤ PRIMA ZOOM IO5 CAPTION

REF. NO. C13-2662
C13-2663
C13-2671
C13-2672
C13-2673

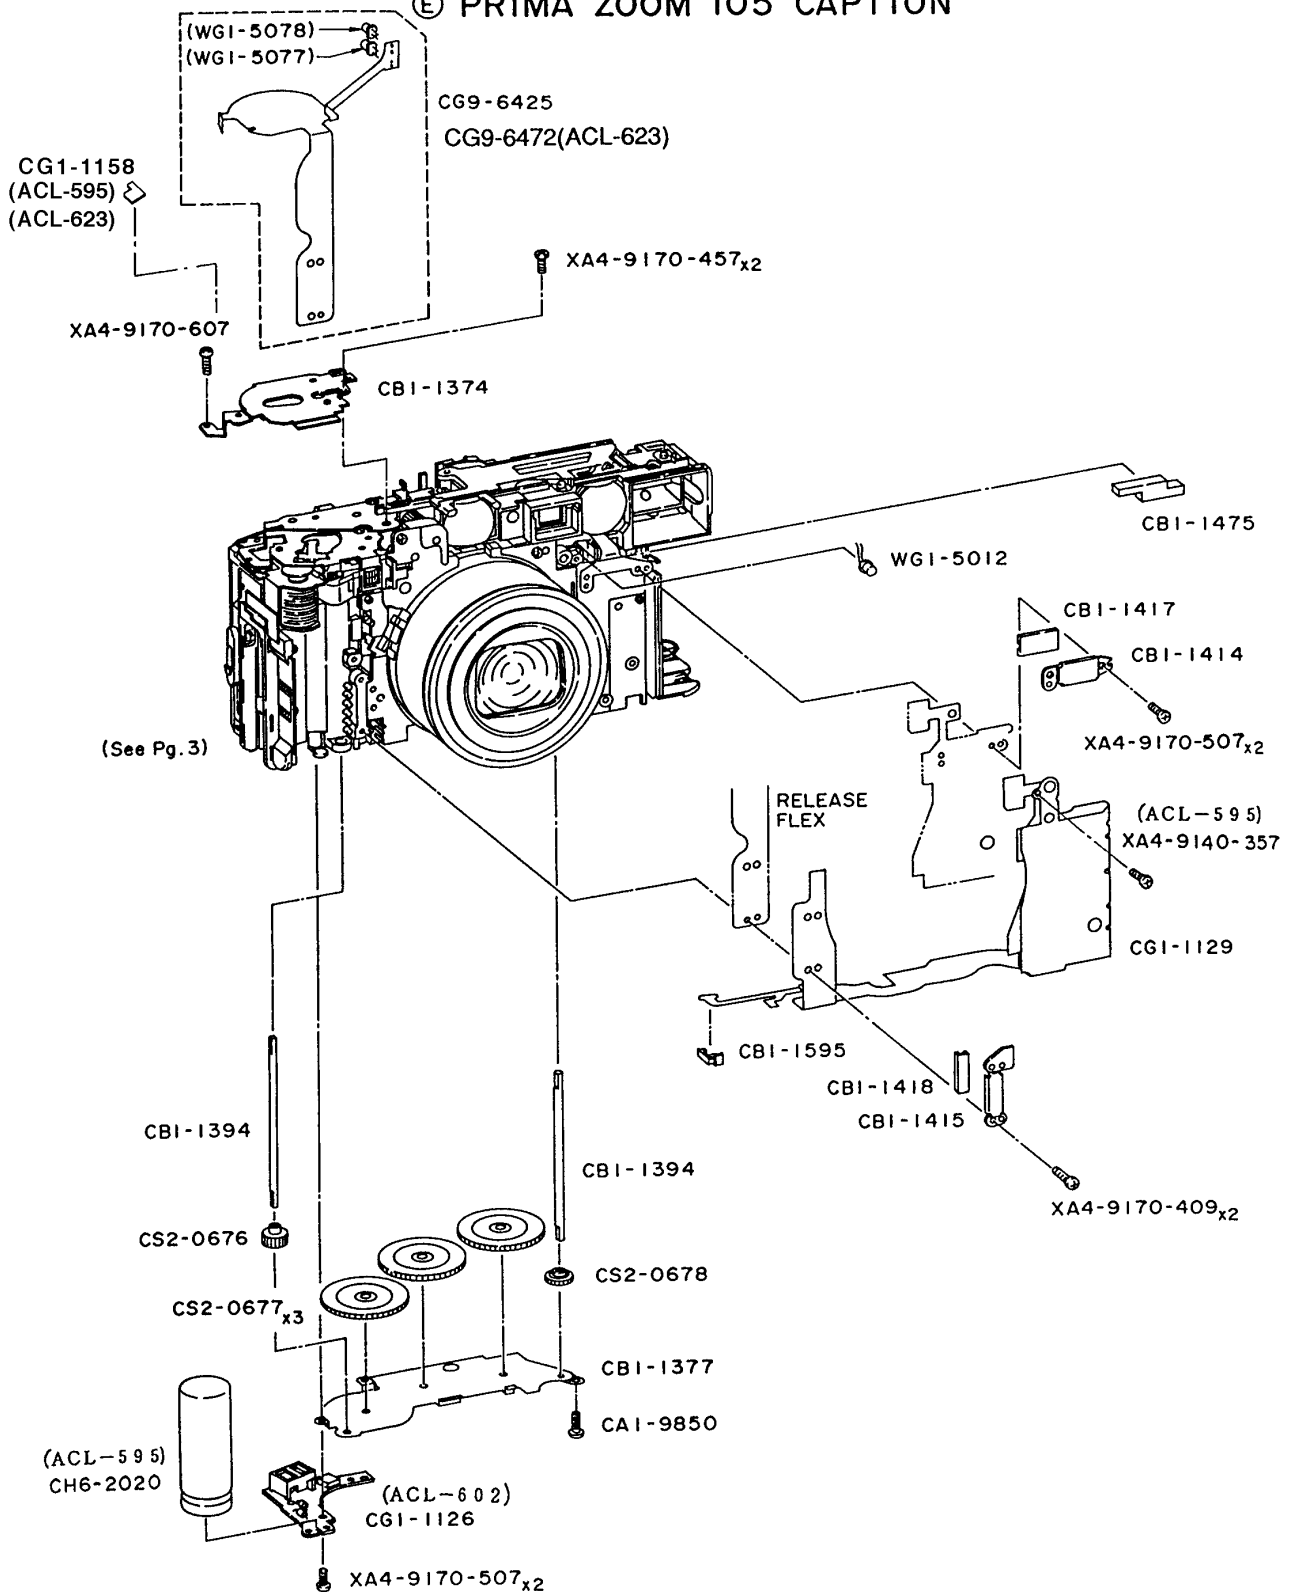

PARTS LIST


Pg 2

REF. No. 2662, 2663
2671, 2672, 2673

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9850-000		1	SCREW, CROSS-RECESS, PH
	CB1-1374-000	D	1	HOLDER, RELEASE FLEX
	CB1-1377-000	E	1	HOLDER, REWIND GEAR
	CB1-1394-000	E	2	SHAFT 1, REWIND
	CB1-1414-000	D	1	HOLDER 1, CONNECTOR
	CB1-1415-000	D	1	HOLDER 2, CONNECTOR
	CB1-1417-000	E	1	RUBBER, PRESSURE
	CB1-1418-000	C	1	RUBBER 2, PRESSURE
	CB1-1475-000	E	1	LIGHT SHIELD
	CB1-1595-000	E	1	CAP, STATIC
	CG1-1126-000	D	1	FLASH BOARD UNIT
	CG1-1129-000	C	1	MAIN FLEX ASS'Y
	CG1-1158-000	D	1	SUB FLEX UNIT
	CG9-6425-000	C	1	RELEASE FLEX ASS'Y (OLD)
	CG9-6472-000	C	1	RELEASE FLEX ASS'Y (NEW)
	CH6-2020-000	C	1	MAIN CAPACITOR
	CS2-0676-000	E	1	GEAR 2, REWIND
	CS2-0677-000	E	3	GEAR 3, REWIND
	CS2-0678-000	E	1	GEAR 4, REWIND
	WG1-5012-000	D	1	LED, SELF
	WG1-5077-000	D	1	LED, AE (RED)
	WG1-5078-000	D	1	LED, AF (GREEN)
	XA4-9140-357		1	SCREW, CROSS-RECESS, PH
	XA4-9170-409		2	SCREW, CROSS-RECESS, PH
	XA4-9170-457		2	SCREW, CROSS-RECESS, PH
	XA4-9170-507		4	SCREW, CROSS-RECESS, PH
	XA4-9170-607		1	SCREW, CROSS-RECESS, PH

CANON ① SURE SHOT MEGA ZOOM 105
 ② PRIMA ZOOM 105
 ③ AUTOBOY ZOOM 105
 ④ SURE SHOT MEGA ZOOM 105 CAPTION
 ⑤ PRIMA ZOOM 105 CAPTION

REF. NO. C13-2662
 C13-2663
 C13-2671
 C13-2672
 C13-2673

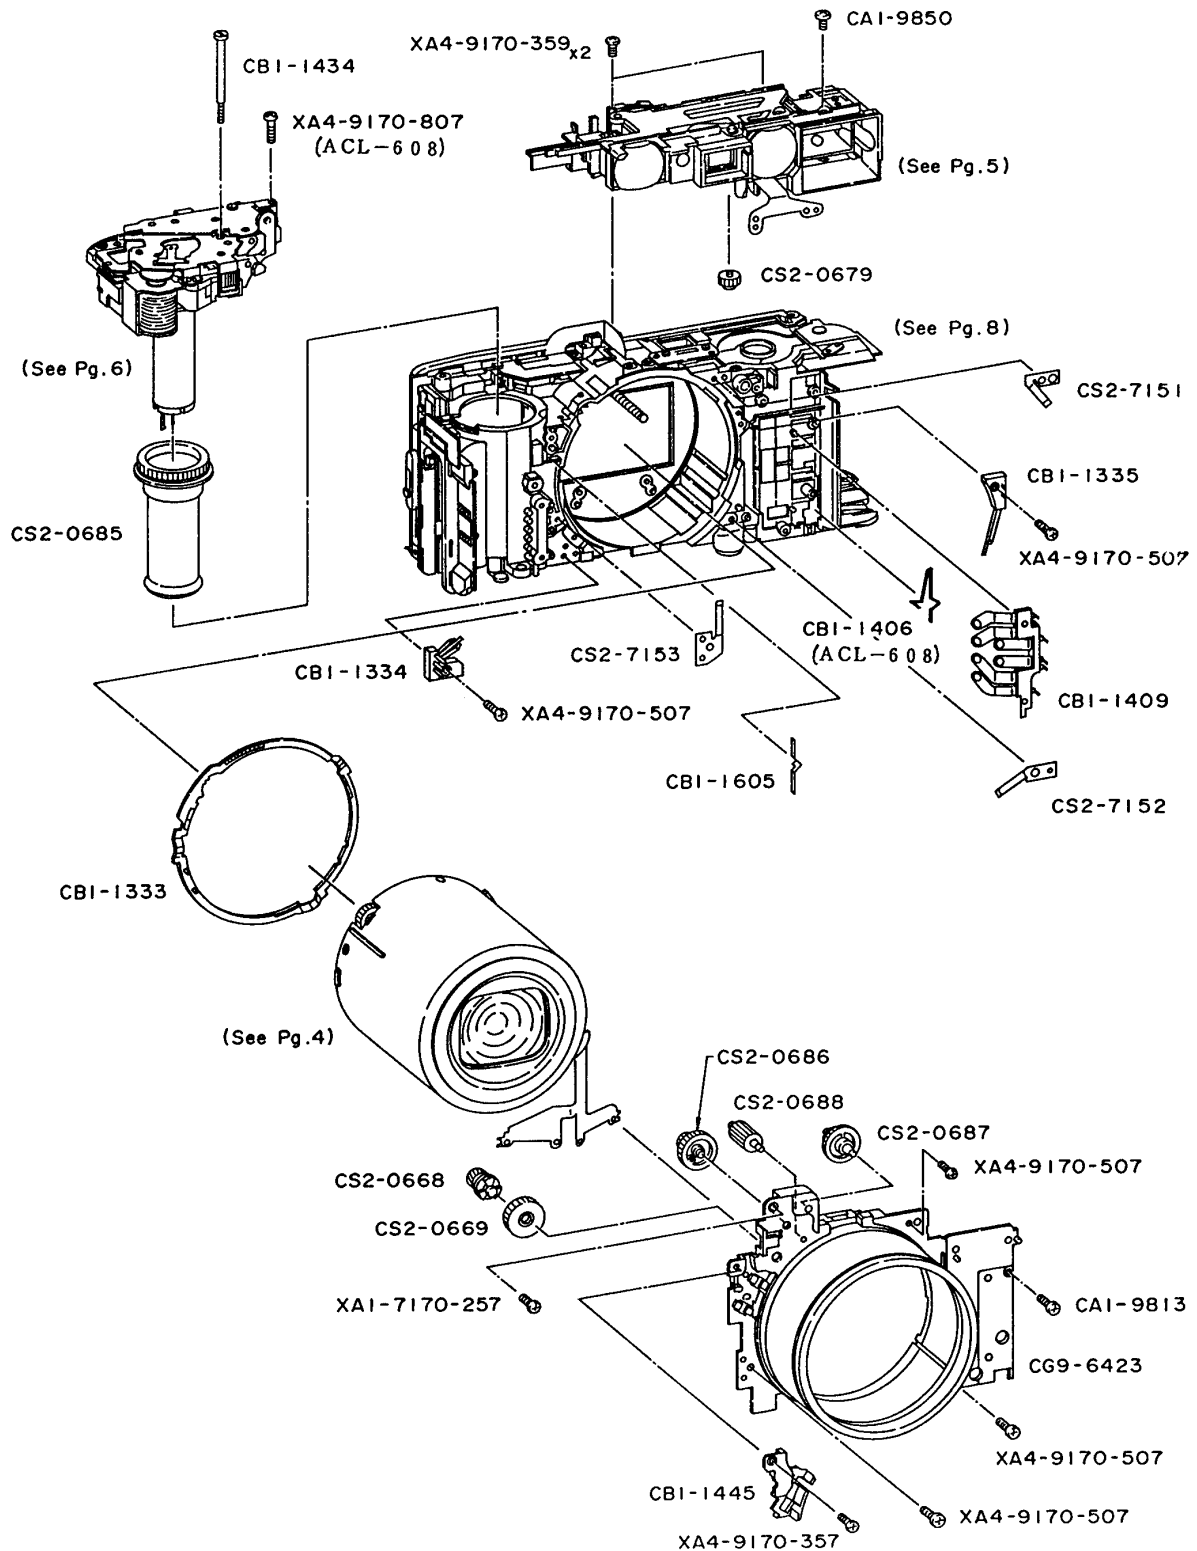

PARTS LIST


Pg 3

REF. No. 2662, 2663
2671, 2672, 2673

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9813-000		1	SCREW, CROSS-RECESS, PH
	CA1-9850-000		1	SCREW, CROSS-RECESS, PH
	CB1-1333-000	E	1	RING, BAYONET
	CB1-1334-000	D	1	SWITCH 3, BAYONET
	CB1-1335-000	D	1	SWITCH, LENS RETRACTED
	CB1-1406-000	D	1	SWITCH, RESET
	CB1-1409-000	D	1	CONTACT, DX
	CB1-1434-000		1	SCREW, SHOULDER
	CB1-1445-000	E	1	COVER, GEAR
	CB1-1605-000	E	1	SPRING
	CG9-6423-000	D	1	FRONT PANEL HOLDER UNIT
	CS2-0668-000	E	1	GEAR, ZOOM
	CS2-0669-000	E	1	GEAR
	CS2-0679-000	E	1	GEAR 5, REWIND
	CS2-0685-000	D	1	SPOOL
	CS2-0686-000	E	1	GEAR 1, FINDER
	CS2-0687-000	E	1	GEAR 2, FINDER
	CS2-0688-000	E	1	GEAR 2, BAYONET
	CS2-7151-000	E	1	HOLDER 1, BAYONET
	CS2-7152-000	E	1	HOLDER 2, BAYONET
	CS2-7153-000	D	1	HOLDER 3, BAYONET
	XA1-7170-257		1	SCREW, CROSS-RECESS, PH
	XA4-9170-357		1	SCREW, CROSS-RECESS, PH
	XA4-9170-359		2	SCREW, CROSS-RECESS, PH
	XA4-9170-507		5	SCREW, CROSS-RECESS, PH
	XA4-9170-807		1	SCREW, CROSS-RECESS, PH

CANON ① SURE SHOT MEGA ZOOM 105
 ② PRIMA ZOOM 105
 ③ AUTOBOY ZOOM 105
 ④ SURE SHOT MEGA ZOOM 105 CAPTION
 ⑤ PRIMA ZOOM 105 CAPTION

REF. NO. C13-2662
 C13-2663
 C13-2671
 C13-2672
 C13-2673

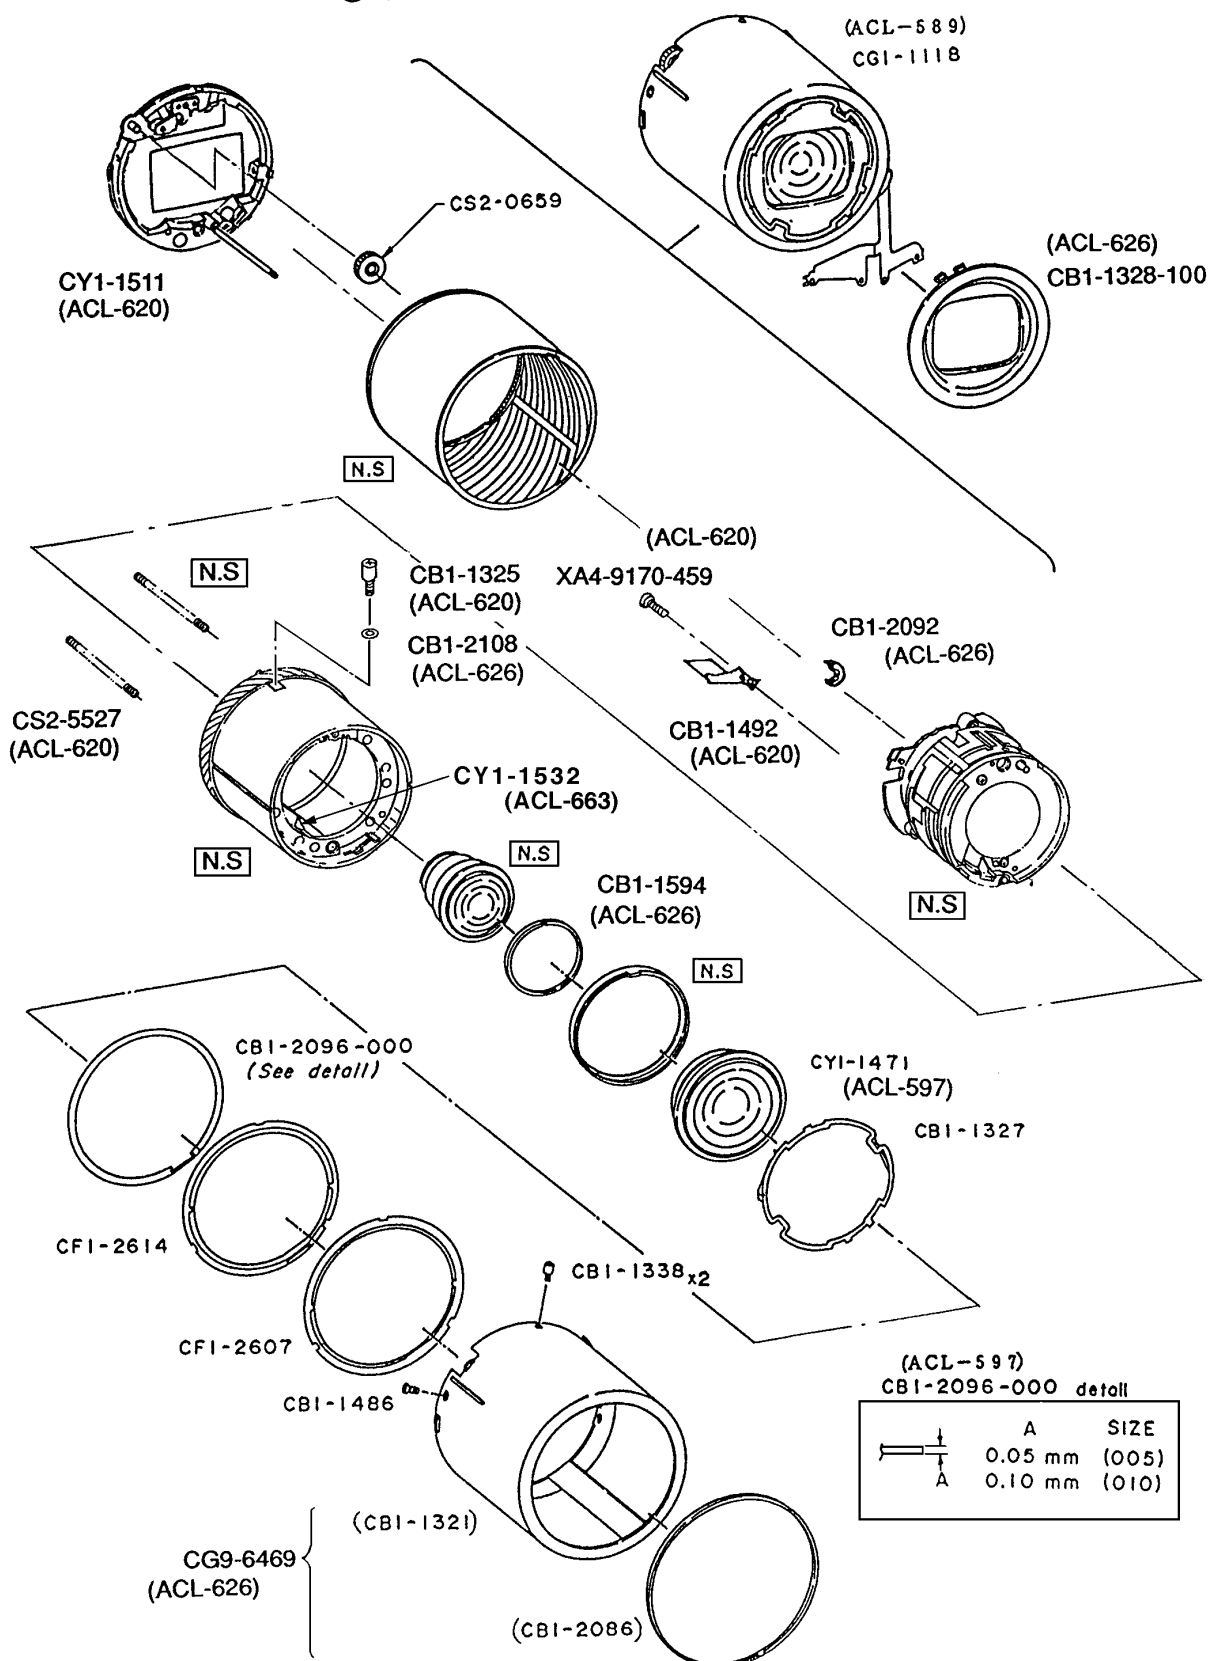


P A R T S L I S T

REF. No. 2662, 2663
2671, 2672, 2673

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-1321-000	D	1	BARREL, GUIDE
	CB1-1325-000	D	1	PIN, CAM
	CB1-1327-000	D	1	SPRING, COIL
	CB1-1328-100	D	1	RING, FRONT
	CB1-1338-000	E	2	SCREW, SHOULDER
	CB1-1486-000		1	SCREW, CROSS-RECESS, PH
	CB1-1492-000	C	1	GUIDE, FLEX
	CB1-1594-000	E	1	RING, 2ND GROUP
	CB1-2086-000	D	1	LIGHT SHIELD
	CB1-2092-000	E	1	HALF COLLAR
	CB1-2096-000 (X)	E	1	WASHER
	CB1-2108-000	E	1	WASHER
	CF1-2607-000	D	1	RING, DUST SHIELD
	CF1-2614-000	C	1	RING, DUST SHIELD
	CG1-1118-000	D	1	LENS BARREL UNIT
	CG9-6469-000	D	1	GUIDE BARREL UNIT
	CS2-0659-000	E	1	GEAR 2, ZOOM DRIVE
	CS2-5527-000	C	1	SPRING
	CY1-1471-000	D	1	1ST GROUP LENS ASS'Y
	CY1-1511-000	C	1	LENS BARREL BASE UNIT
	CY1-1532-000	C	1	PRISM UNIT
	XA4-9170-459		1	SCREW, CROSS-RECESS, PH

CANON ① SURE SHOT MEGA ZOOM IO5
 ② PRIMA ZOOM IO5
 ③ AUTOBOY ZOOM IO5
 ④ SURE SHOT MEGA ZOOM IO5 CAPTION
 ⑤ PRIMA ZOOM IO5 CAPTION

REF. NO. C13-2662
 C13-2663
 C13-2671
 C13-2672
 C13-2673

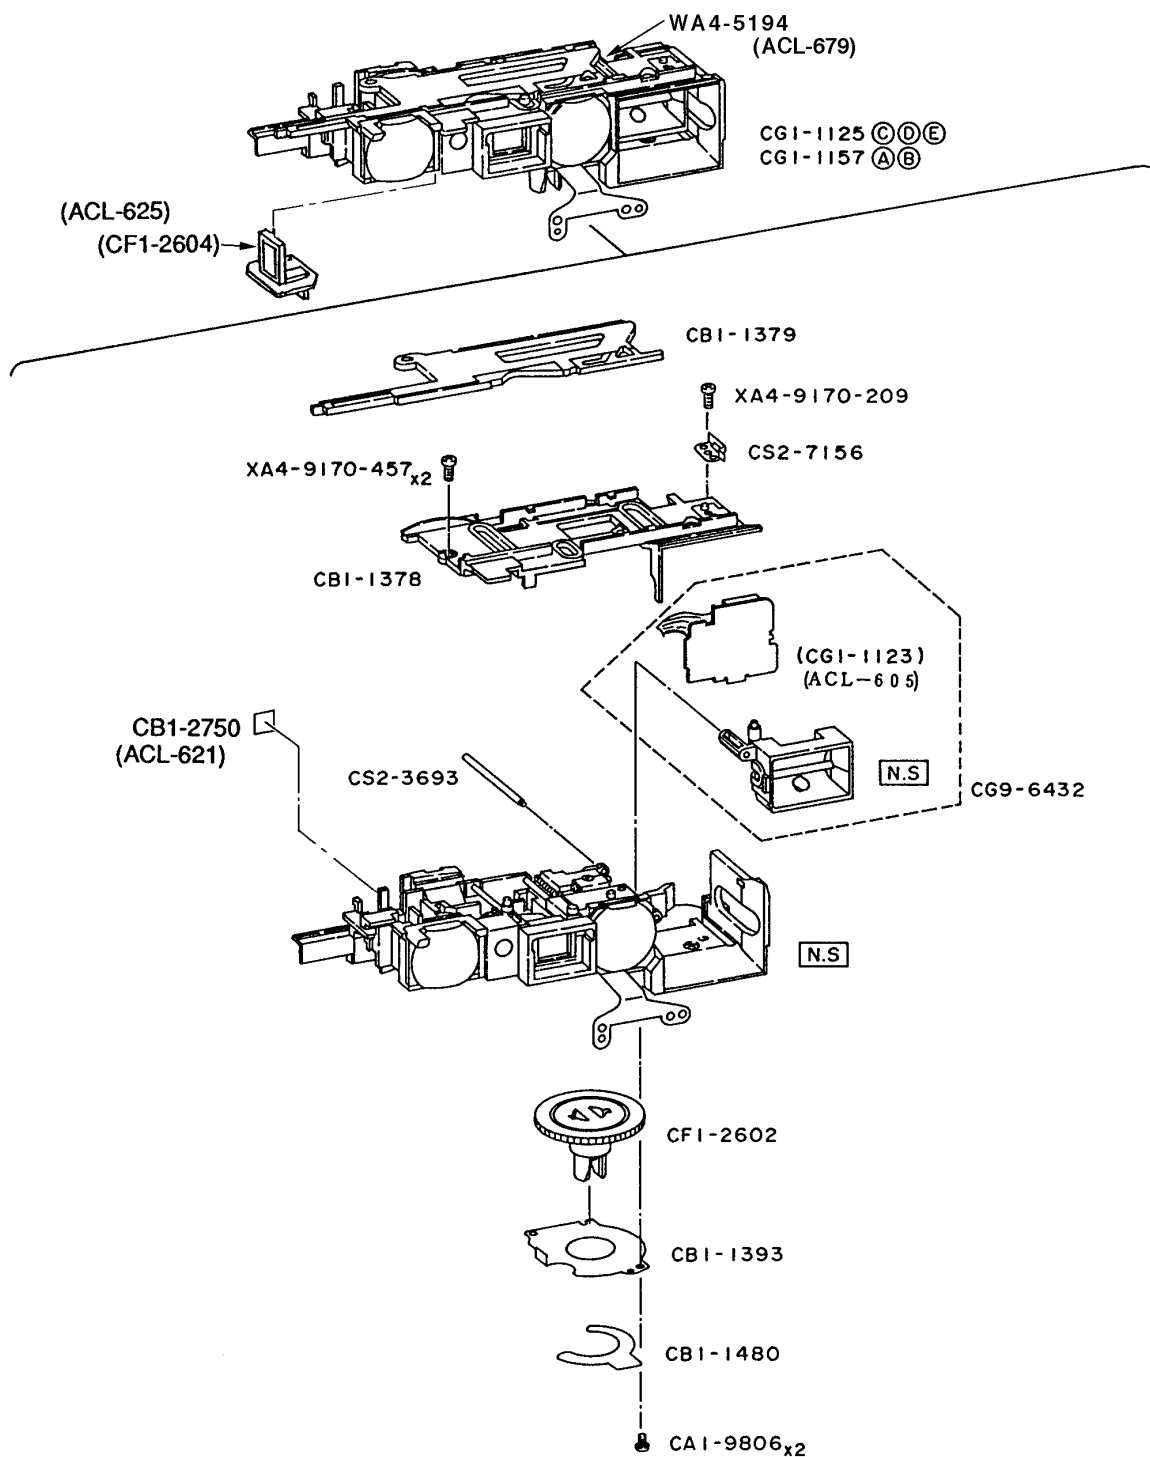

P A R T S L I S T


Pg 5

REF. No. 2662, 2663
2671, 2672, 2673

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9806-000		2	SCREW, CROSS-RECESS, PH
	CB1-1378-000	D	1	COVER, FINDER
	CB1-1379-000	D	1	LEVER, FINDER CAM
	CB1-1393-000	E	1	HOLDER, FORK GEAR
	CB1-1480-000	E	1	TAPE, BOTH SIDE
	CB1-2750-000	E	1	SHEET, LIGHT SHIELD
	CF1-2602-000	E	1	FORK GEAR ASS'Y
	CF1-2604-000	D	1	FINDER FRAME UNIT
	CG1-1123-000	D	1	FLASH 2ND BOARD
	CG1-1125-000	E	1	FINDER UNIT (QD)
	CG1-1157-000	E	1	FINDER UNIT (NON-QD)
	CG9-6432-000	D	1	FLASH UNIT
	CS2-3693-000	E	1	BAR, 1ST GROUP GUIDE
	CS2-7156-000	D	1	SPRING, PLATE
	WA4-5194-000	E	1	IC, REGULATOR, LVC516M-2
	XA4-9170-209		1	SCREW, CROSS-RECESS, PH
	XA4-9170-457		2	SCREW, CROSS-RECESS, PH

- CANON
- ① SURE SHOT MEGA ZOOM 105
 - ② PRIMA ZOOM 105
 - ③ AUTOBOY ZOOM 105
 - ④ SURE SHOT MEGA ZOOM 105 CAPTION
 - ⑤ PRIMA ZOOM 105 CAPTION

REF. NO. C13-2662
C13-2663
C13-2671
C13-2672
C13-2673

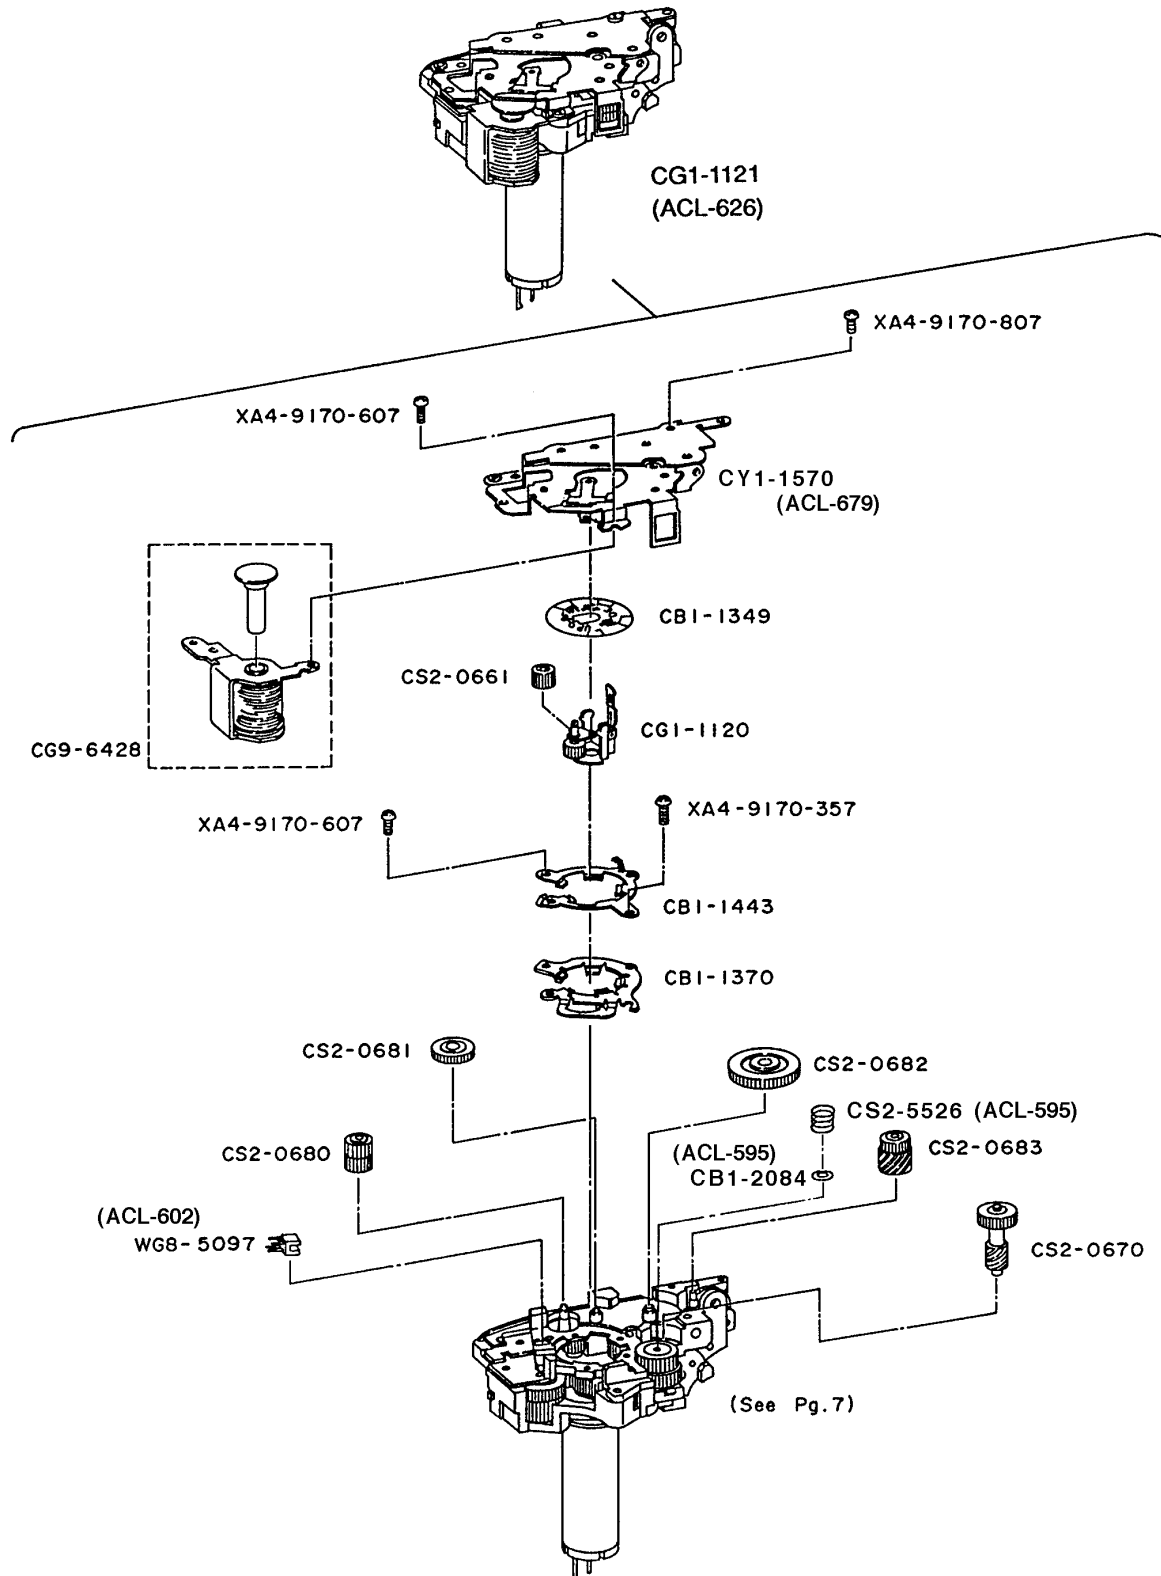

P A R T S L I S T


Pg 6

REF. No. 2662, 2663
2671, 2672, 2673

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-1349-000	D	1	PLATE, SIGNAL
	CB1-1370-000	E	1	STOPPER, CROWN
	CB1-1443-000	E	1	STOPPER, ESCAPE
	CB1-2084-000	E	1	WASHER
	CG1-1120-000	E	1	TURNING, STOPPER ARM ASS'Y
	CG1-1121-000	E	1	POWER DISTRIBUTION UNIT
	CG9-6428-000	D	3	MAGNET UNIT
	CY1-1570-000	D	1	GEAR HOLDER UNIT
	CS2-0661-000	E	1	GEAR, SUN
	CS2-0670-000	E	1	GEAR, ZOOM WORM
	CS2-0680-000	E	1	GEAR 1, C
	CS2-0681-000	E	1	GEAR 2, C
	CS2-0682-000	E	1	GEAR 3, C
	CS2-0683-000	D	1	GEAR, WORM
	CS2-5526-000	E	1	SPRING
	WG8-5097-000	E	1	PHOTO COUPLER
	XA4-9170-357		1	SCREW, CROSS-RECESS, PH
	XA4-9170-607		2	SCREW, CROSS-RECESS, PH
	XA4-9170-807		1	SCREW, CROSS-RECESS, PH

- CANON
- ① SURE SHOT MEGA ZOOM 105
 - ② PRIMA ZOOM 105
 - ③ AUTOBOY ZOOM 105
 - ④ SURE SHOT MEGA ZOOM 105 CAPTION
 - ⑤ PRIMA ZOOM 105 CAPTION

REF. NO. C13-2662
 C13-2663
 C13-2671
 C13-2672
 C13-2673

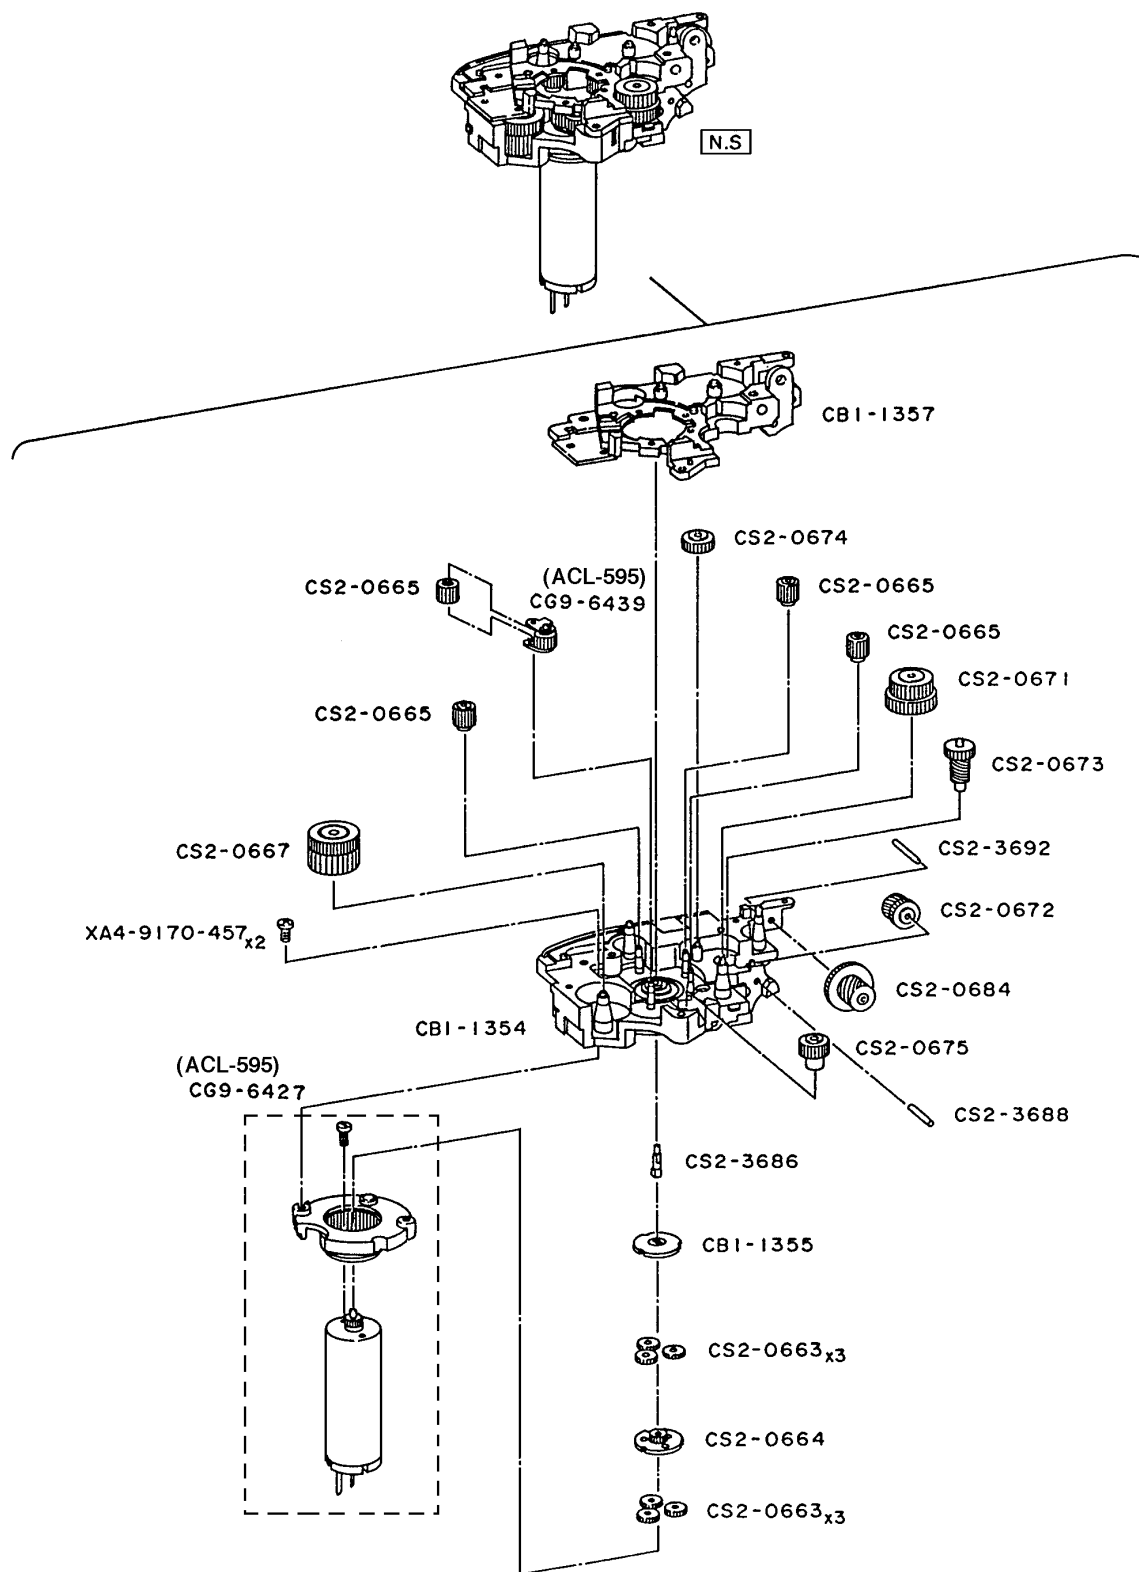

P A R T S L I S T


Pg 7

REF. No. 2662, 2663
2671, 2672, 2673

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-1354-000	D	1	PLATE, GEAR BASE
	CB1-1355-000	E	1	PLATE, SPEED DOWN
	CB1-1357-000	D	1	HOLDER, SHAFT
	CG9-6427-000	E	1	MAIN MOTOR ASS'Y
	CG9-6439-000	E	1	PLANETARY ARM ASS'Y
	CS2-0663-000	E	6	GEAR, SPEED DOWN
	CS2-0664-000	E	1	SHAFT, SPEED DOWN
	CS2-0665-000	E	4	GEAR 1, POWER
	CS2-0667-000	E	1	GEAR 1, WIND
	CS2-0671-000	E	1	GEAR, ZOOM
	CS2-0672-000	E	1	GEAR, BEVEL
	CS2-0673-000	E	1	GEAR, WORM
	CS2-0674-000	E	1	GEAR 1, BAYONET
	CS2-0675-000	E	1	GEAR 1, REWIND
	CS2-0684-000	E	1	GEAR, BEVEL
	CS2-3686-000	E	1	SHAFT, POWER
	CS2-3688-000	E	1	SHAFT, BEVEL GEAR
	CS2-3692-000	E	1	SHAFT, BEVEL GEAR
	XA4-9170-457		2	SCREW, CROSS-RECESS, PH

CANON (A) SURE SHOT MEGA ZOOM 105
 (B) PRIMA ZOOM 105
 (C) AUTOBOY ZOOM 105
 (D) SURE SHOT MEGA ZOOM 105 CAPTION
 (E) PRIMA ZOOM 105 CAPTION

REF. NO. C13-2662
 C13-2663
 C13-2671
 C13-2672
 C13-2673

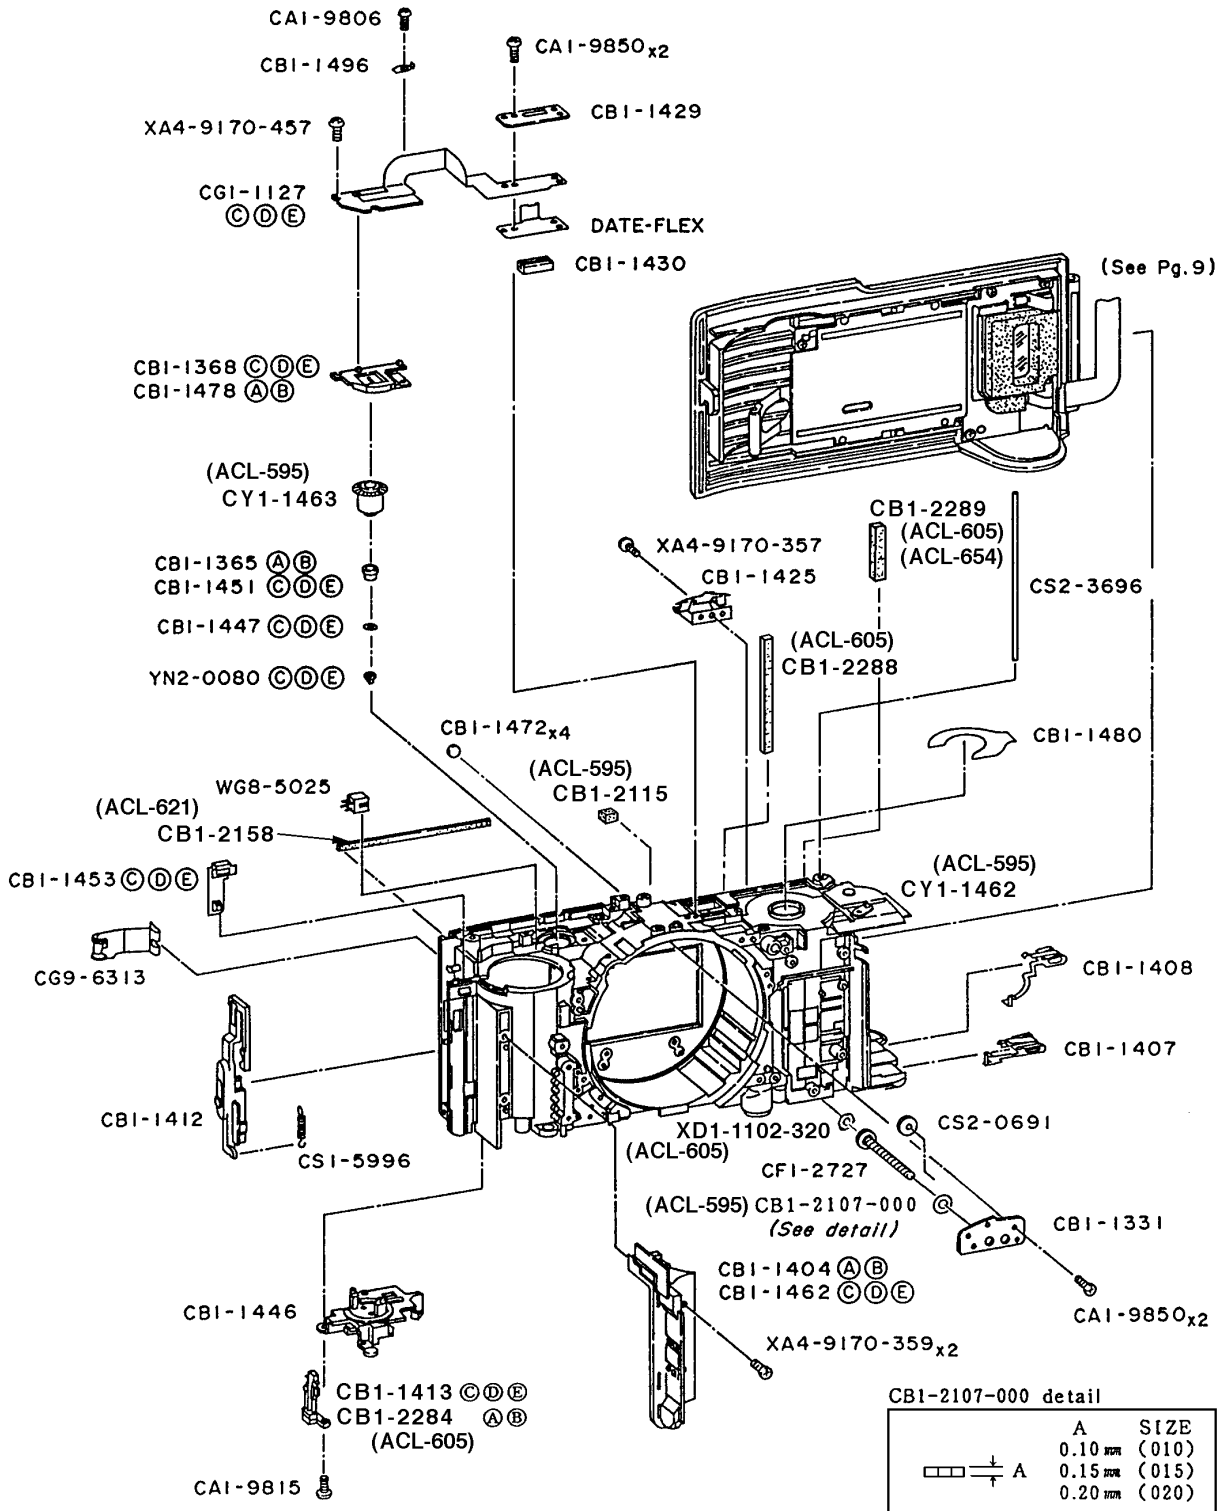


PARTS LIST

REF. No. 2662, 2663
2671, 2672, 2673

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9806-000		1	SCREW, CROSS-RECESS, PH
	CA1-9815-000		1	SCREW, CROSS-RECESS, PH
	CA1-9850-000		4	SCREW, CROSS-RECESS, PH
	CB1-1331-000	E	1	HOLDER, GEAR
	CB1-1365-000	E	1	HOLDER, ROLLER (NON-DATE)
	CB1-1368-000	E	1	BASE, ROLLER HOLDER (DATE)
	CB1-1404-000	D	1	HOLDER, STRAP (NON-DATE)
	CB1-1407-000	D	1	CONTACT 1, BATTERY
	CB1-1408-000	D	1	CONTACT 2, BATTERY
	CB1-1412-000	D	1	LATCH, BACK COVER
	CB1-1413-000	D	1	SWITCH, BACK COVER (DATE)
	CB1-1425-000	E	1	SPRING, CARTRIDGE
	CB1-1429-000	D	1	HOLDER 3, CONNECTOR
	CB1-1430-000	E	1	RUBBER 3, PRESSURE
	CB1-1446-000	D	1	HOLDER, SPOOL
	CB1-1447-000	E	1	WASHER (DATE)
	CB1-1451-000	E	1	HOLDER, ROLLER (DATE)
	CB1-1453-000	E	1	LATCH, REMOTE CONTROL (DATE)
	CB1-1462-000	D	1	HOLDER, STRAP
	CB1-1472-000	E	4	COVER, BLIND
	CB1-1478-000	E	1	BASE, ROLLER HOLDER (NON-DATE)
	CB1-1480-000	E	1	TAPE, BOTH SIDE
	CB1-1496-000	E	1	HOLDER, FLEX
	CB1-2107-000 (D)	E	1	WASHER
	CB1-2115-000	C	1	SHIELD, LIGHT
	CB1-2158-000	E	1	SHIELD, LIGHT
	CB1-2284-000	D	1	SWITCH, BACK COVER (NON-DATE)
	CB1-2288-000	E	1	SHIELD, LIGHT
	CB1-2289-000	E	1	SHIELD, LIGHT
	CF1-2727-000	E	1	GEAR, HELICOID
	CG1-1127-000	D	1	DATE FLEX ASS'Y (DATE)
	CG9-6313-000	E	1	ROLLER UNIT
	CS1-5996-000	E	1	SPRING, COIL
	CS2-0691-000	E	1	GEAR, IDLE
	CS2-3696-000	E	1	SHAFT, HINGE
	CY1-1462-000	E	1	BODY
	CY1-1463-000	D	1	SIGNAL DISK ASS'Y
	WG8-5025-000	E	1	PHOTO COUPLER
	XA4-9170-357		1	SCREW, CROSS-RECESS, PH
	XA4-9170-359		2	SCREW, CROSS-RECESS, PH
	XA4-9170-457		1	SCREW, CROSS-RECESS, PH
	XD1-1102-320		1	WASHER
	YN2-0080-000	E	1	LENS, DATE (DATE)

CANON ① SURE SHOT MEGA ZOOM 105
 ② PRIMA ZOOM 105
 ③ AUTOBOY ZOOM 105
 ④ SURE SHOT MEGA ZOOM 105 CAPTION
 ⑤ PRIMA ZOOM 105 CAPTION

REF. NO. C13-2662
 C13-2663
 C13-2671
 C13-2672
 C13-2673

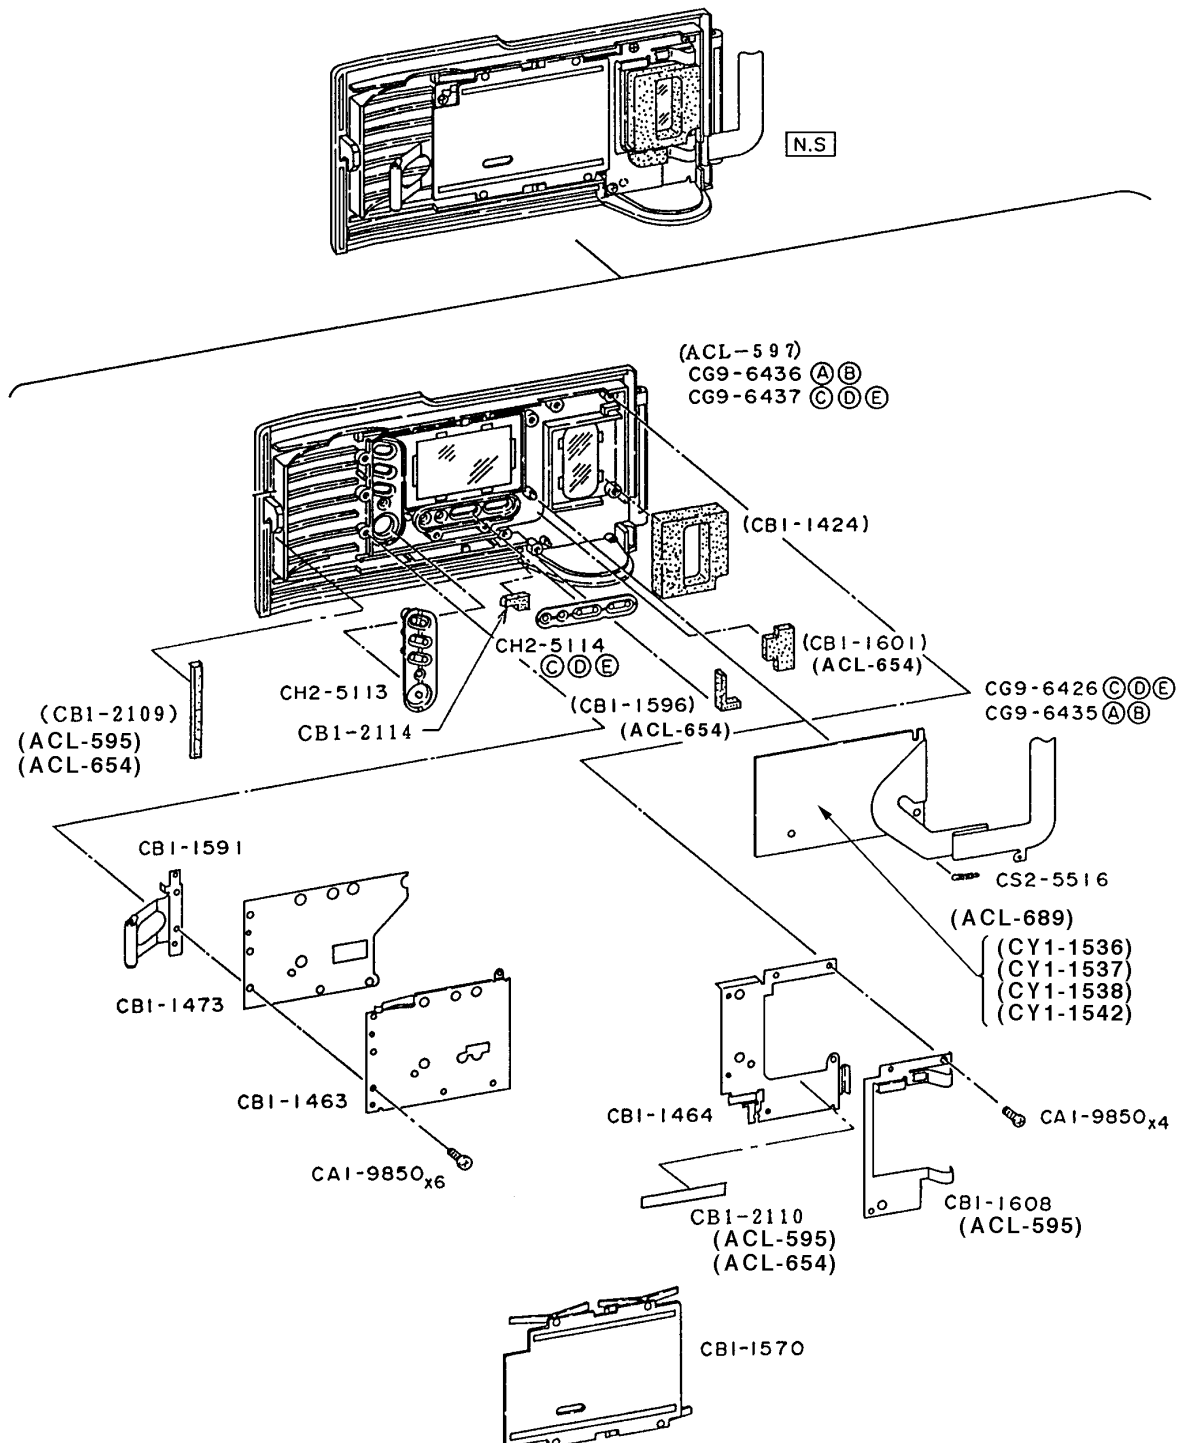

PARTS LIST

Pg 9

REF. No. 2662, 2663
2671, 2672, 2673

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9850-000		10	SCREW, CROSS-RECESS, PH
	CB1-1424-000	C	1	SHIELD, LIGHT
	CB1-1463-000	E	1	HOLDER 1, SWITCH INTERFACE
	CB1-1464-000	E	1	HOLDER 2, SWITCH INTERFACE
	CB1-1473-000	E	1	SHEET, LIGHT SHIELD
	CB1-1570-000	C	1	PLATE, PRESSURE
	CB1-1591-000	E	1	HOLDER, BACK COVER ROLLER
	CB1-1596-000	E	1	SHIELD, LIGHT
	CB1-1601-000	E	1	SHIELD, LIGHT
	CB1-1608-000	E	1	HOLDER, FILM CARTRIDGE
	CB1-2109-000	C	1	SHIELD, LIGHT
	CB1-2110-000	C	1	SHIELD, LIGHT
	CB1-2114-000	C	1	SHIELD, LIGHT
	CG9-6426-000	C	1	SWITCH INTERFACE (DATE)
	CG9-6435-000	C	1	SWITCH INTERFACE (NON-DATE)
	CG9-6436-000	C	1	BACK COVER ASS'Y (NON-DATE)
	CG9-6437-000	C	1	BACK COVER ASS'Y (DATE)
	CH2-5113-000	C	1	BUTTON ASS'Y 1
	CH2-5114-000	C	1	BUTTON ASS'Y 2
	CS2-5516-000	E	1	SPRING, COIL
	CY1-1536-000	C	1	LCD (QD)
	CY1-1537-000	C	1	LCD (NON-QD)
	CY1-1538-000	C	1	HOLDER, LCD (QD)
	CY1-1542-000	C	1	HOLDER, LCD (NON-QD)

ELECTRIC PARTS LIST

REF. No. 2662, 2663
2671, 2672, 2673

NEWSYMBOL	PARTS NO.	DESCRIPTION	REMARK
IC-1	CH4-0572-030	MPU	TB1108AF
IC-6	WA3-6458-000	EEPROM	
IC-13	WA2-5179-000	DRIVER 1	TA8304F
IC-14	WA2-5179-000	DRIVER 2	TA8304F
IC-15	WA2-5178-000	DRIVER3	TA8303F
C4	CH6-2020-000	MAIN CAPACITOR	EC2M2MFF281JR
OSC1	WK2-5094-000	CERAMIC OSCILLATOR	KBR-4.19MCS-TRI
L1	WE2-9046-000	COIL, CHOKE	LQN4N221K-27
LED 1	WG1-5078-000	LED, AF (GREEN)	SHL2310G
LED 2	WG1-5077-000	LED, AE (RED)	SHL2110R
LED 3	WG1-5012-000	LED, SELF	SLH-38VC3F
PC 1	WG8-5025-000	PHOTO COUPLER	PS4704
PC 2	WG8-5097-000	PHOTO COUPLER	TLP-812
	Y11-2801-000	LEAD	WHITE
	Y11-2802-000	LEAD	BLACK
	Y11-2811-000	LEAD	BLUE
	Y11-2814-000	LEAD	GRAY
	Y11-2903-000	LEAD	RED
	Y11-2904-000	LEAD	PINK
	Y11-2906-000	LEAD	ORANGE
	Y11-3907-000	LEAD	YELLOW
	Y11-3911-000	LEAD	BLUE
	Y11-3912-000	LEAD	PURPLE
	Y11-3913-000	LEAD	BROWN
	Y11-3914-000	LEAD	GRAY
	Y11-4402-000	LEAD	BLACK
	Y11-4403-000	LEAD	RED
	Y11-4411-000	LEAD	BLUE
	Y11-5002-000	LEAD	BLACK
	Y11-5003-000	LEAD	RED
	Y11-5007-000	LEAD	YELLOW
	Y11-5014-000	LEAD	GRAY