

AIRCRAFT COMPANY

PAWNEE DIVISION

Wichita, Kansas

FINAL ISSUE

WHERE THIS CATALOG REFERS TO A
SPECIFIC MODEL IT IS NOTED AS FOLLOWS:
'172' FOR THE 172 & SKYHAWK MODELS;
'P172' FOR THE POWERMATIC AND
SKYHAWK POWERMATIC MODELS
F172 FOR THE FRENCH MANUFACTURED 172
FP172 FOR THE FRENCH MANUFACTURED POWERMATIC

THIS CATALOG SUPERSEDES ALL 172 & P172 PARTS

CATALOGS DATED: 15 SEPTEMBER 1962 THRU 15 JUNE 1973

15 JANUARY 1975

P529-12—RAND—1600—1/75

INSERT LATEST CHANGED PAGES. DESTROY SUPERSEDED PAGES.

LIST OF EFFECTIVE PAGES

Dates of issue for original and changed pages are:
Original . . . 0 . . . 15 January 1975

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 660 CONSISTING OF THE FOLLOWING:

Page No.	Change No.	Page No.	Change No.
Title	0	205 thru 236	0
A	0	237 blank	0
i thru xv	0	238 thru 244	0
xvi blank	0	245 blank	0
xvii thru xxxiii	0	246 thru 262	0
xxxiv blank	0	263 blank	0
xxxv thru lvii	0	264 thru 277	0
lviii	0	278 blank	0
1 thru 40	0	279 thru 303	0
41 blank	0	304 blank	0
42 thru 48	0	305 thru 315	0
49 blank	0	316 blank	0
50 thru 58	0	317 thru 319	0
59 blank	0	320 blank	0
60 thru 74	0	321 thru 346	0
75 blank	0	347 blank	0
76 thru 78	0	348 thru 376	0
79 blank	0	377 blank	0
80 thru 92	0	378 thru 386	0
93 blank	0	387 blank	0
94 thru 96	0	388 thru 394	0
97 blank	0	395 blank	0
98 thru 141	0	396 thru 398	0
142 blank	0	399 blank	0
143 thru 146	0	400 thru 447	0
147 blank	0	448 blank	0
148 thru 158	0	449 thru 452	0
159 blank	0	453 blank	0
160 thru 164	0	454 thru 460	0
165 blank	0	461 blank	0
166 thru 178	0	462 thru 474	0
179 blank	0	475 blank	0
180 thru 188	0	476 thru 522	0
189 blank	0	523 blank	0
190 thru 203	0	524 thru 600	0
204 blank	0		

Upon receipt of the second and subsequent changes to this book, personnel responsible for maintaining this publication in current status should ascertain that all previous changes have been received and incorporated.

* The asterisk indicates pages changed, added, or deleted by the current change.

Cessna®

PARTS CATALOG REVISIONS

PCR #76-2

REFERENCE CATALOG NUMBER: P529-12 DATE: 1-28-76

CATALOG TITLE: 172/P172

TO:

FROM:

TO ELIMINATE SHIPMENTS OF INCORRECT PARTS, PLEASE CORRECT YOUR CATALOG IMMEDIATELY AS SHOWN BELOW.

CAT.	PAGE	FIG.	INDEX	CHANGE		REMARKS
				FROM	TO	
172/ P172	357	126	31	0550181-1	0550187-1	

PARTS CATALOG TITLE MODEL 172 AND SKYHAWK (1963 THRU 1974)

PARTS CATALOG NUMBER P529-12 DATED 15 JANUARY 1975

TEMPORARY REVISION NO. 1

DATED: 17 FEBRUARY 1978

This revision consists of the following pages, which replace existing pages in printed catalog:

page 519

File this page following "List of Effective Pages" in the front of your catalog as a record of pages affected by this temporary revision.

INTRODUCTION.

This illustrated parts catalog has been prepared to aid you in easily and quickly identifying parts of the models covered herein.

This catalog features an index system consisting of:

1. An alphabetical index located in the front of the catalog.

2. A numerical index located in the back of the catalog, which lists all parts and figures in which they appear.

STANDARD PARTS.

Many parts having standard usage have been incorporated into the Cessna Standard System. Parts in this group are designated with the part number prefix "S".

For standard hardware items such as Tinnerman nuts, clamps, etc., "AN" and "NAS" numbers have been used.

USABLE ON CODES....Serial listings in this catalog are noted by a letter code located in the usable on code column which is the extreme right hand column of the parts list page. Usable on codes are applicable only to the figure on which they appear. The code letters and the serials to which they apply are listed at the end of the figure.

If no usable on code appears opposite a first column listing of the figure, the usage is applicable to all models and serials covered by this catalog. If no usable on code appears opposite any indented listing, the usage is applicable to all models and serials covered by the figure on which it appears.

Bold face type serials appearing on certain figures are for quick reference to large blocks of airplanes.

F172 and FP172 serial usage is listed together with the United States serial usage immediately following the parts listing on each individual figure where applicable.

NON-INTERCHANGEABLE PARTS....When parts are not interchangeable with earlier models, all parts applicable to the particular usage are listed. The letter code for the individual part usage is listed in the usable on column opposite each part. Care should be exercised in determining proper serial when ordering to insure receipt of correct part.

INTERCHANGEABLE PARTS....When a later design part is completely interchangeable with the part it replaces, both parts will be serialized and the notation "when exhausted use ___", or the abbreviation, "WEU ___" will be entered following the listing of the earlier design part. This means that the earlier design part should be used on airplanes to which they apply until the supply of these parts is exhausted---after which time the later design part must be used. This is done to simplify stocking of parts by our distributors and dealers. The earlier part is as good, physically and functionally, as the later design part---the difference being the later design part can be used on more than one block of airplane serials.

SYMBOLS & PART NUMBER TERMS.

NP - The symbol "NP" appearing in the units per assembly column denotes that the item it appears opposite is not procurable.

AR - The symbol "AR" appearing in the units per assembly column denotes "As Required" and is used to indicate bulk quantity where an indefinite amount is used.

The following is a list of abbreviations that may appear in the description nomenclature:

ALT - Alternate part	INSTL - Installation
ASSY - Assembly	LH - Left hand
BKI - Bulk item	RH - Right hand
FSO - For spares order	WEU - When exhausted use

Other key letter symbols spaced apart from and following the part nomenclature are for cataloging and manufacturing purposes only and are not to be considered by the customer.

A blank entry in the part number column appears before an unprocurable part or installation which is also denoted in the "Units Per Assembly" column by the use of the symbol NP.

GROUP ASSEMBLY PARTS LIST ARRANGEMENT.

This section lists all replaceable items in the airplane and these items are detailed on illustrations throughout the section. The index numbers on the illustration are keyed to each accompanying parts list. The purpose of the index numbers is to provide complete and positive identification of the article, but should not be used for procurement purposes.

a. The figure and index number column of the parts list shows the figure number once at the beginning of the list. The figure number is followed by a dash and the indexed number. The remaining index numbers are preceded by dash only.

b. The part number column identifies the item by part number.

c. In the description column, relationship of items covered is shown by the degree of indention of each item, for example: The wing assembly (Figure 3) is listed in column (1) of the description column. The wing structure, is the next lower assembly and is therefore listed in column (2).

d. If two or more assemblies contain a majority of identical parts or the assemblies are left or right hand, the assemblies are listed together and the next lower assemblies or detail parts are listed as common for both assemblies, with the differing parts coded for usage on the correct major assembly.

e. Attaching parts are listed immediately beneath the item to be attached and preceding any detail parts of the item. They are listed in the same column as the item they attach and are preceded by the caption "Attaching Parts." The end of the attaching parts listing is followed by a separating symbol ---*---.

f. The quantity listed in the "Units Per Assembly" column for attaching parts denotes the quantity necessary to attach only one part. Total quantity necessary to attach more than one part is obtained by multiplying the attaching parts quantity by the number of parts attached.

g. Component parts of the complete airplane which are not included in any assembly, but which are used in conjunction with, or attach to certain assemblies, are listed either preceding the first detail or following the last detail of the assembly or installation, and in the same column as the major assembly or installation.

h. The quantities listed in the "Units Per Assembly" column are the quantity used per figure.

ACCESSORY KITS.

For accessory kit listings, refer to separate Accessory Kit Catalog.

BULK ITEMS.

Certain items such as flexible air hose, rubber mouldings and channels, windshield sealing strips etc., are noted in the catalog listings as bulk items. These listings also note the cut length of these materials for one installation. When an item is listed as a bulk item, it will be supplied to the dealer in the most convenient bulk length or quantity. Reference to the cut length or quantity per installation provides for the most satisfactory disbursement to the customer.

HOW TO ORDER.

USE YOUR CATALOG TO ORDER PARTS. Use parts and Accessories Order Form, which will be supplied by Cessna on request. Give complete information on addresses and make sure the part number and part name are as shown in the catalog. Be sure to specify quantities. Specify how the order is to be shipped, otherwise it will be sent out in the manner that seems best to the shipper.

SERIAL, COLOR, & CORROSION PROOFING.

Be sure to indicate model and serial number of the airplane. Serial number is very important to properly identify parts used on each airplane. When color is involved refer to "Upholstery & Interior Trim" section for example. If corrosion proofing is desired add the letters "CP" following the part number.

DISTRIBUTOR ORDERS.

Distributors will send all orders to the factory with instructions as to the shipping destination. The factory prefers not to make C.O.D. shipments for the distributor and all billing will be made to the distributor in the case of direct shipments.

DEALER ORDERS.

Dealers will place all of their parts order requirements with their distributor. The factory will not honor orders received directly from a dealer. It will be necessary for us to forward it to the distributor for his action. Therefore, dealer orders sent direct to the distributor will result in much faster delivery on any parts that are required.

RETAIL ORDERS.

Retail orders will not be honored by the factory. They are to be placed with the dealer or distributor in the owner's territory and when received directly by the factory will be forwarded to the distributor from whose territory it was received. Considerable saving in time will result to the owner if his orders are placed with his dealer or distributor.

Cessna

Cessna Aircraft Company reserves the right to cancel, add or change the parts and assemblies described in this catalog without notice.

Cessna

"All aircraft, regardless of manufacturer, are certificated under model number designations. However, popular names are often used for marketing purposes. To provide a consistent method of referring to the various aircraft, model numbers will be used in this publication unless names are required to differentiate between versions of the same basic model. The following table provides a cross reference listing of popular name vs. model numbers."


NAME	MODEL YEAR	MODEL	SERIALS	
			BEGINNING	ENDING
172 POWERMATIC OR SKYHAWK POWERMATIC	1963	P172	P17257120	P17257188
FRENCH POWERMATIC	1963	FP172	FP172-0001	FP172-0003
172 OR SKYHAWK	1963	172D	17249545	17250572
	1964	172E	17250573	17251822
	1965	172F	17251823	17253392
	1966	172G	17253393	17254892
	1967	172H	17254893	17256512
	1968	172I	17256513	17257161
	1969	172K	17257162	17258486
	1970	172K	17258487	17259223
	1971	172L	17259224	17259903
	1972	172L	17259904	17260758
	1973	172M	17260759	17261898
	1974	172M	17261899	17263458
REIMS/CESSNA F172	1963	F172D	F172-0001	F172-0018
	1964	F172E	F172-0019	F172-0085
	1965	F172F	F172-0086	F172-0179
	1966	F172G	F172-0180	F172-0319
	1967	F172H	F172-0320	F172-0431
			F172-0436	F172-0442
			F172-0444	F172-0446
	1968	F172H	F172-0432	F172-0435
			F172-0443	F172-0443
			F172-0447	F172-0559
	1969	F172H	F172-0560	F172-0654
	1970	F172H	F17200655	F17200754
	1971	F172K	F17200755	F17200804
	1972	F172L	F17200805	F17200904
	1973	F172M	F17200905	F17201034
	1974	F172M	F17201035	F17201234

FINISH & TRIM PLATE

The "FINISH AND TRIM" plate is located on the left side of the airplane on the lower door jamb directly behind the M. A. A. name plate.

This plate indicates the model year, exterior paint color, upholstery scheme and interior trim colors.

The following diagram is an example showing the sequence and definition of each code symbol on the "FINISH AND TRIM" plate.

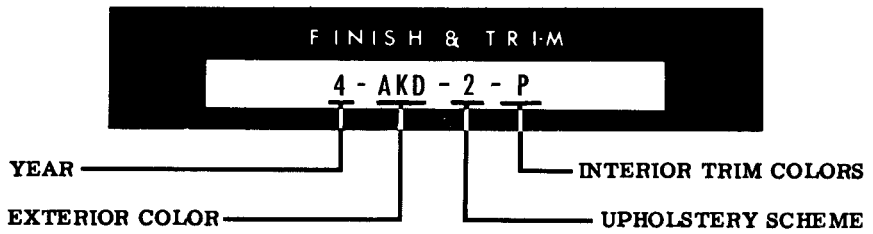

FINISH & TRIM NUMBER (4-AKD-2-P)
"4" = 1964 Model
"AKD" = Emerald Green Metallic, Velvet Black, Mint Green Exterior
"2" = Sorrel Brown Upholstery
"P" = Black Semi-Gloss, Sand and Fawn Interior Trim

1963 THRU 1965

SEE PAGE VI FOR 1966 & ON

CODE CHART

PAINT & UPHOLSTERY COMBINATIONS

Model 172, P172 & SKYHAWK

YEAR		EXTERIOR PAINT		UPHOLSTERY		INTERIOR TRIM		Serial Listing
	CODE	CODE	COLOR	CODE	COLOR	CODE	COLOR	
1963	3	A	ADOBE BEIGE CES-1054-446 or -458*	2	JADE (A)	Q	BLACK (SEMI-GLOSS) CES-1054-156	17249545 THRU 17250572
		B	VESTAL WHITE CES-1054-398 or -170*					
		C	GOLDENROD CES-1054-448 or -183*					
		D	MINT GREEN CES-1054-238 or -412*	3	CRIMSON FLAME (B)		SAND CES-1054-435	F172-0001 THRU F172-0018
		E	PLATINUM BLUE CES-1054-443					
		F	VALOR RED CES-1054-409					
		G	MATADOR RED CES-1054-465 or -338*	4	BLUE CRANE (C)			P17257120 THRU P17257188
		K	TAHOE BLUE METALLIC CES-1054-407 or -394*					
		N	EXECUTIVE GREY METALLIC CES-1054-411.				FAWN CES-1054-419	
		R	COCOA BROWN CES-1054-459	5	FRECKLE BROWN (D)			FP172-0001 THRU FP172-0003
		U	EMERALD CES-1054-350 or -461*					
		SP	SPECIAL COLORS	1	SPECIAL UPHOLSTERY	SP	SPECIAL COLORS	

NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE: CES-1054-439

*On all over painted airplanes, base color will be vinyl. All other colors will be lacquer.

CODE CHART

PAINT & UPHOLSTERY COMBINATIONS

Model 172 & SKYHAWK

YEAR		EXTERIOR PAINT		UPHOLSTERY		INTERIOR TRIM		Serial Listing
	CODE	CODE	COLOR	CODE	COLOR	CODE	COLOR	
1964	4	A	EMERALD GREEN MET. CES-1054-350	2	SORREL BROWN	P	BLACK SEMI-GLOSS CES-1054-156	F172-0019 THRU F172-0085 17250573 THRU 17251822
		B	GOLDENROD CES-1054-448					
		C	VESTAL WHITE CES-1054-398 or -170*					
		D	MINT GREEN CES-1054-238 or -412*					
		E	CORK BROWN CES-1054-463					
		F	JONQUIL YELLOW CES-1054-402 or -416*	3	MUTED BLUE		SAND CES-1054-435	
		G	MUTED BEIGE CES-1054-439 or -399*					
		H	REGAL GREEN MET. CES-1054-404					
		J	ITALIAN GOLD CES-1054-265					
		K	VELVET BLACK CES-1054-151					
		L	SUN GLOW RED CES-1054-493	4	CAPPERICA RED		FAWN CES-1054-419	
		M	TUXEDO BLUE CES-1054-495					
		N	COFFEE BROWN MET. CES-1054-497					
		R	WINE METALLIC CES-1054-505					
		T	HAWAIIAN RED CES-1054-509					
		W	TWILIGHT BLUE CES-1054-511	5	PRIMITIVE GREEN			
		X	SKY BLUE CES-1054-513 or -512*					
		Z	ARISTO BLUE MET. CES-1054-487					
		SP	SPECIAL COLORS	1	SPECIAL UPHOLSTERY	SP	SPECIAL COLORS	

NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE CES-1054-350.

*DENOTES VINYL PAINT.
VINYL IS USED AS BASE COLOR ON OVER-ALL PAINTED AIRPLANES.
ALL OTHER COLORS ARE LACQUER.

CODE CHART
PAINT & UPHOLSTERY COMBINATIONS
Model 172 & SKYHAWK

YEAR		EXTERIOR PAINT		UPHOLSTERY		INTERIOR TRIM		Serial Listing
	CODE	CODE	COLOR	CODE	COLOR	CODE	COLOR	
1965	5	A	EMERALD GREEN CES-1054-350	6	POPPY RED	U	LIGHT GRAY CES-1054-586	F172-0086 THRU F172-0179 17251823 THRU 17253392
		B	GOLDENROD CES-1054-448					
		C	VESTAL WHITE CES-1054-398 or -170*					
		D	ICE BLUE CES-1054-564 or -546*					
		E	AVANTI RED CES-1054-556	7	GOLDEN OLIVE	W	CHESTNUT CES-1054-587	
		F	YUMA YELLOW CES-1054-542					
		G	DESERT BEIGE CES-1054-545					
		H	PLATINUM CES-1054-550 or -565*			X	KHAKI CES-1054-588	
		J	SUNSHINE YELLOW CES-1054-561 or -547*	8	DUSTY BLUE			
		K	VELVET BLACK CES-1054-151					
		L	SUN GLOW RED CES-1054-493			Z	DARK TURQUOISE CES-1054-589	
		M	VENICE BLUE MET CES-1054-572					
		N	AUTUMN RUSSET MET CES-1054-571	9	ADOBE TAN	P	BLACK SEMI GLOSS CES-1054-156 CLOUD GRAY CES-1054-531	
		R	ARISTO BLUE MET CES-1054-487					
		S	SAPPHIRE MIST MET CES-1054-562					
		T	HAWAIIAN RED CES-1054-509					
		SP	SPECIAL COLORS	1	SPECIAL UPHOLSTERY	SP	SPECIAL COLORS	

NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE CES-1054-350

*DENOTES VINYL PAINT.
VINYL IS USED AS BASE COLOR ON OVER-ALL PAINTED AIRPLANES.
ALL OTHER COLORS ARE LACQUER.

FINISH & TRIM PLATE


The "FINISH AND TRIM" plate is located on the left side of the airplane on the lower door jamb directly below the M.A.A. nameplate.

This plate indicates model year, interior color scheme and the exterior color combination.

Interpretation of information stamped on the Finish and Trim Plate is obtained by use of the Color Code Chart for the respective year.

Color Code Charts for yearly models appear on pages immediately following this page.

The Finish and Trim Plate is explained below. Explanatory remarks are keyed to the illustrated example.

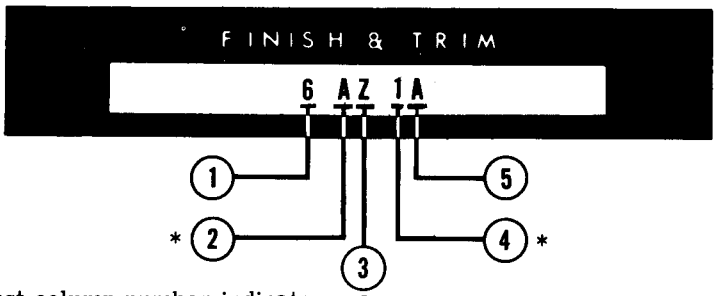

(1) First column number indicates year.

(2) Second column letter or letters indicate interior color code of aircraft. Refer to Color Code Chart for respective year to obtain color.

(3) The letter "B" or "Z" following the interior code indicates optional black carpet.

(4) Third column number or numbers indicate exterior trim. The basic number is found on the Color Code Chart and indicates colors and type paint used on the aircraft.

(5) Arctic color reversal is designated by a prefix "2," "3" or "4" on the exterior color combination code. (Sufix "A" was used for 1966 Model only.)

* The special exterior and/or interior is denoted by the letters "SP" in lieu of the standard codes.

Interpretation of the example Finish and Trim Code 6-AZ-1A that is obtained from 1975 Color Code Chart is:

6 = 1966 model year
A = Coral Interior Scheme
Z = Black Carpet (optional)
1 = Vestal White & Goldenrod exterior
1A = Vestal White & Goldenrod exterior (color reversal)

1966 & ON

SEE PAGE III FOR 1963 THRU 1965

MODEL 172

PAINT CODE CHART

MODEL 172

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR CODE	INTERIOR COLOR	INTERIOR PAINT A	INTERIOR PAINT B	INTERIOR PAINT C	INTERIOR PAINT D	SERIAL LISTING
1 9 6 6	6	A	CORAL	BLACK (SEMI-GLOSS) CES-1054-156	BLACK (SEMI-GLOSS) CES-1054-156	BLACK (SEMI-GLOSS) CES-1054-156	BLACK (SEMI-GLOSS) CES-1054-156	17253393 THRU 17254892
		B	GOLD	DULL BLACK (LACQUER) CES-1054-193	DULL BLACK (LACQUER) CES-1054-193	DULL BLACK (LACQUER) CES-1054-193	DULL BLACK (LACQUER) CES-1054-193	
		C	BLUE	DULL BLACK (EPOXY) CES-1054-482	DULL BLACK (EPOXY) CES-1054-482	DULL BLACK (EPOXY) CES-1054-482	DULL BLACK (EPOXY) CES-1054-482	F172-0180 THRU F172-0319
		D	BRONZE	LIGHT GRAY (LACQUER) CES-1054-531	LIGHT GRAY (LACQUER) CES-1054-531	LIGHT GRAY (LACQUER) CES-1054-531	LIGHT GRAY (LACQUER) CES-1054-531	
		Z	OPTIONAL CARPET (BLACK)	CORAL (LACQUER) CES-1054-661	GOLD (LACQUER) CES-1054-663	BLUE (LACQUER) CES-1054-662	BRONZE (LACQUER) CES-1054-719	
				CORAL (VINYL) CES-1054-746	GOLD (VINYL) CES-1054-748	BLUE (VINYL) CES-1054-747	BRONZE (VINYL) CES-1054-751	

EXTERIOR PAINT

CODE	COLOR COMBINATIONS		
1	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	GOLDENROD CES1054-448 CES1054-803 (ACRYLIC)	
2	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	SAN REMO TURQUOISE CES1054-705 CES1054-804 (ACRYLIC)	
3	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	RACING GREEN CES1054-692 CES1054-805 (ACRYLIC)	
4	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	VALOR RED CES1054-409 CES1054-806 (ACRYLIC)	
5	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	VELVET BLACK CES1054-151 CES1054-807 (ACRYLIC)	
6	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	MIDNIGHT TURQUOISE CES1054-801 (ACRYLIC)	
7	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	HAWAIIAN RED CES1054-509 CES1054-844 (ACRYLIC)	
8	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	AUTUMN RUSSET CES1054-571 CES1054-835 (ACRYLIC)	
40	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	VELVET BLACK CES1054-151 CES1054-807 (ACRYLIC)	SAN REMO TURQUOISE CES1054-705 CES1054-804 (ACRYLIC)
41	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	VELVET BLACK CES1054-151 CES1054-807 (ACRYLIC)	PINEHURST GREEN CES1054-757 CES1054-836 (ACRYLIC)
42	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	BERKSHIRE BROWN CES1054-608 CES1054-830 (ACRYLIC)	GOLDENROD CES1054-448 CES1054-803 (ACRYLIC)
43	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	BERKSHIRE BROWN CES1054-608 CES1054-830 (ACRYLIC)	VALOR RED CES1054-409 CES1054-806 (ACRYLIC)
44	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	ASPEN YELLOW CES1054-606 CES1054-831 (ACRYLIC)	VELVET BLACK CES1054-151 CES1054-807 (ACRYLIC)
45	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	GOLDENROD CES1054-448 CES1054-803 (ACRYLIC)	BERKSHIRE BROWN CES1054-608 CES1054-830 (ACRYLIC)
46	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	SAN REMO TURQUOISE CES1054-705 CES1054-804 (ACRYLIC)	VELVET BLACK CES1054-151 CES1054-807 (ACRYLIC)
47	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	MIDNIGHT TURQUOISE CES1054-801 (ACRYLIC)	VALOR RED CES1054-409 CES1054-806 (ACRYLIC)
48	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	MIDNIGHT TURQUOISE CES1054-801 (ACRYLIC)	ASPEN YELLOW CES1054-606 CES1054-831 (ACRYLIC)
49	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	VALOR RED CES1054-409 CES1054-806 (ACRYLIC)	VELVET BLACK CES1054-151 CES1054-807 (ACRYLIC)
50	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	HAWAIIAN RED CES1054-509 CES1054-844 (ACRYLIC)	VELVET BLACK CES1054-151 CES1054-807 (ACRYLIC)
51	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	PINEHURST GREEN CES1054-757 CES1054-836 (ACRYLIC)	RACING GREEN CES1054-692 CES1054-805 (ACRYLIC)
52	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	VELVET BLACK CES1054-151 CES1054-807 (ACRYLIC)	VALOR RED CES1054-409 CES1054-806 (ACRYLIC)
53	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	SIERRA BEIGE CES1054-680 CES1054-756 (ACRYLIC)	VELVET BLACK CES1054-151 CES1054-807 (ACRYLIC)
54	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	AUTUMN RUSSET CES1054-571 CES1054-835 (ACRYLIC)	VELVET BLACK CES1054-151 CES1054-807 (ACRYLIC)
55	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	CHESTNUT METALLIC CES1054-556 CES1054-845 (ACRYLIC)	SIERRA BEIGE CES1054-680 CES1054-756 (ACRYLIC)
56	VESTAL WHITE CES1054-398 OR -170* CES1054-802 (ACRYLIC)	EMERALD GREEN METALLIC CES1054-350 CES1054-846 (ACRYLIC)	VELVET BLACK CES1054-151 CES1054-807 (ACRYLIC)

NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE: CES1054-439

*On all over painted airplanes, base color will be vinyl. All other colors will be lacquer.

ALL DOMESTIC AIRCRAFT SERIAL 17254679 & ON
WERE PAINTED WITH ACRYLIC PAINT

ALL FRENCH AIRCRAFT WERE PAINTED WITH LACQUER

MODEL 172

PAINT CODE CHART

MODEL 172

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR	INTERIOR PAINT (INTERIOR COLOR CODE) AF	AV	BF	BV	SERIAL LISTING
1967	7	AF Bronze Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	17254893 THRU 17256512
		AV Bronze Vinyl	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	
			DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	
		BF Blue Fabric	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	
		BV Blue Vinyl	BRONZE (LACQUER) CES1054-719 (VINYL) CES1054-751	BRONZE (LACQUER) CES1054-719 (VINYL) CES1054-751	BLUE (LACQUER) CES1054-798 (VINYL) CES1054-799	BLUE (LACQUER) CES1054-798 (VINYL) CES1054-799	
1968	7	CF Avocado Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	F172-0320 THRU F172-0431, F172-0436 THRU F172-0442, F172-0444 THRU F172- 0446
		CV Avocado Vinyl	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	
			DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	
		DF Red Fabric	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	
		DV Red Vinyl	AVOCADO (LACQUER) CES1054-796 (VINYL) CES1054-797	AVOCADO (LACQUER) CES1054-796 (VINYL) CES1054-797	RED (LACQUER) CES1054-718 (VINYL) CES1054-750	RED (LACQUER) CES1054-718 (VINYL) CES1054-750	

EXTERIOR PAINT

CODE	COLOR COMBINATIONS		
1 201 301	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	GOLDEN ROD CES1054-803 (ACRYLIC) CES1054-448*	
2 202 302	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	VALOR RED CES1054-806 (ACRYLIC) CES1054-409*	
3 203 303	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	IMPERIAL BURGUNDY MET (ACRYLIC) CES1054-767 CES1054-847*	
4 204 304	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	VELVET BLACK CES1054-807 (ACRYLIC) CES1054-151*	
5 205 305	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	BELFAST BROWN CES1054-773 (ACRYLIC) CES1054-848*	
6 206 306	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	EMPRESS BLUE CES1054-832 (ACRYLIC) CES1054-604*	
7 207 307	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	VENICE BLUE MET CES1054-833 (ACRYLIC) CES1054-572*	
8 208 308	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	RACING GREEN CES1054-805 (ACRYLIC) CES1054-692*	
70 270 370	VESTAL WHITE CES1054-802 (ACRYLIC)	TROPICAL ORANGE CES1054-774 (ACRYLIC)	ITALIAN GOLD CES1054-834 (ACRYLIC)
71 271 371	VESTAL WHITE CES1054-802 (ACRYLIC)	TROPICAL ORANGE CES1054-774 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)
72 272 372	VESTAL WHITE CES1054-802 (ACRYLIC)	TROPICAL ORANGE CES1054-774 (ACRYLIC)	AUTUMN RUSSET MET CES1054-835 (ACRYLIC)
73 273 373	VESTAL WHITE CES1054-802 (ACRYLIC)	EMPRESS BLUE CES1054-832 (ACRYLIC)	ARISTO BLUE MET CES1054-837 (ACRYLIC)
74 274 374	VESTAL WHITE CES1054-802 (ACRYLIC)	EMPRESS BLUE CES1054-832 (ACRYLIC)	VENICE BLUE MET CES1054-833 (ACRYLIC)
75 275 375	VESTAL WHITE CES1054-802 (ACRYLIC)	EMPRESS BLUE CES1054-832 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)
76 276 376	VESTAL WHITE CES1054-802 (ACRYLIC)	VENICE BLUE MET CES1054-833 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)
77 277 377	VESTAL WHITE CES1054-802 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)	IMPERIAL BURGUNDY MET (ACRYLIC) CES1054-767
78 278 378	VESTAL WHITE CES1054-802 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)
79 279 379	VESTAL WHITE CES1054-802 (ACRYLIC)	IMPERIAL BURGUNDY MET (ACRYLIC) CES1054-767	VELVET BLACK CES1054-807 (ACRYLIC)
80 280 380	VESTAL WHITE CES1054-802 (ACRYLIC)	GOLDEN ROD CES1054-803 (ACRYLIC)	ITALIAN GOLD CES1054-834 (ACRYLIC)
81 281 381	VESTAL WHITE CES1054-802 (ACRYLIC)	GOLDEN ROD CES1054-803 (ACRYLIC)	BELFAST BROWN CES1054-773 (ACRYLIC)
82 282 382	VESTAL WHITE CES1054-802 (ACRYLIC)	BARCELONA BRONZE MET (ACRYLIC) CES1054-770	AUTUMN RUSSET MET CES1054-835 (ACRYLIC)
83 283 383	VESTAL WHITE CES1054-802 (ACRYLIC)	BARCELONA BRONZE MET (ACRYLIC) CES1054-770	IMPERIAL BURGUNDY MET (ACRYLIC) CES1054-767
84 284 384	VESTAL WHITE CES1054-802 (ACRYLIC)	AUTUMN RUSSET MET CES1054-835 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)
85 285 385	VESTAL WHITE CES1054-802 (ACRYLIC)	PINEHURST GREEN CES1054-836 (ACRYLIC)	GLENWOOD GREEN MET CES1054-768 (ACRYLIC)
86 286 386	VESTAL WHITE CES1054-802 (ACRYLIC)	RACING GREEN CES1054-805 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 DASH NUMBER. EXAMPLE: CES1054-156

*Lacquer paint, used on French aircraft only.

MODEL 172

PAINT CODE CHART

MODEL 172

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR CODE	INTERIOR COLOR	INTERIOR PAINT — INTERIOR COLOR CODE					SERIAL LISTING
				AF	AV	BF	BV	CF	
1968	8	AF	Bronze Fabric (F172 ONLY)	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	17256513 THRU 17257161
		AV	Bronze Vinyl (F172 ONLY)	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	
		BF	Blue Fabric	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	
		BV	Blue Vinyl	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	
		CF	Avocado Fabric	BRONZE (LACQUER) CES1054-719 (VINYL) CES1054-751	BRONZE (LACQUER) CES1054-719 (VINYL) CES1054-751	BLUE (LACQUER) CES1054-798 (VINYL) CES1054-799	BLUE (LACQUER) CES1054-798 (VINYL) CES1054-799	AVOCADO (LACQUER) CES1054-796 (VINYL) CES1054-797	
				CV	DF	DV	GF	GV	F172-0432 THRU F172-0435, F172-0443, F172-0447 THRU F172-0559
		CV	Avocado Vinyl	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	
		DF	Red Fabric	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	
		DV	Red Vinyl	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	
		GF	Tan Fabric (172 ONLY)	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	
		GV	Tan Vinyl (172 ONLY)	AVOCADO (LACQUER) CES1054-796 (VINYL) CES1054-797	RED (LACQUER) CES1054-718 (VINYL) CES1054-750	RED (LACQUER) CES1054-718 (VINYL) CES1054-750	TAN (LACQUER) CES1054-717 (VINYL) CES1054-749	TAN (LACQUER) CES1054-717 (VINYL) CES1054-749	

EXTERIOR PAINT

CODE	COLOR COMBINATIONS	
10 210 310	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	TROPICAL ORANGE CES1054-774 (ACRYLIC) CES1054-849*
11 211 311	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	VALOR RED CES1054-806 (ACRYLIC) CES1054-409*
12 212 312	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	CRANBERRY CES1054-875 (ACRYLIC) CES1054-881*
13 213 313	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	EMPRESS BLUE CES1054-832 (ACRYLIC) CES1054-604*
14 214 314	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	VENICE BLUE MET CES1054-833 (ACRYLIC) CES1054-572*
15 215 315	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	VELVET BLACK CES1054-807 (ACRYLIC) CES1054-151*
16 216 316	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	RACING GREEN CES1054-805 (ACRYLIC) CES1054-692*
17 217 317	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	GOLDEN ROD CES1054-803 (ACRYLIC) CES1054-448*
18 218 318	VESTAL WHITE CES1054-802 (ACRYLIC)	ITALIAN GOLD CES1054-834 (ACRYLIC)
19 219 319	VESTAL WHITE CES1054-802 (ACRYLIC)	BELFAST BROWN CES1054-773 (ACRYLIC)
20 220 320	VESTAL WHITE CES1054-802 (ACRYLIC)	IMPERIAL BURGUNDY MET (ACRYLIC) CES1054-767
21 221 321	VESTAL WHITE CES1054-802 (ACRYLIC)	PINEHURST GREEN CES1054-836 (ACRYLIC)
22 222 322	VESTAL WHITE CES1054-802 (ACRYLIC)	GLENWOOD GREEN MET (ACRYLIC) CES 1054-768
23 223 323	VESTAL WHITE CES1054-802 (ACRYLIC)	CHESTNUT MET CES1054-845 (ACRYLIC)

*Lacquer paint, used on French Aircraft only.

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 DASH NUMBER. EXAMPLE: CES1054-156

PAINT CODE CHART

MODEL 172

MODEL 172

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR	INTERIOR PAINT — INTERIOR COLOR CODE BF	BV	DF	DV	LISTING
1969	9	BF Royal Blue Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	17257162 THRU 17258486
		BV Royal Blue Vinyl	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	
		DF Dragon Red Fabric	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	
		DV Dragon Red Vinyl	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	
			BLUE (LACQUER) CES1054-906 (VINYL) CES1054-907	BLUE (LACQUER) CES1054-906 (VINYL) CES1054-907	**RED** (LACQUER) CES1054-904 (VINYL) CES1054-905	**RED** (LACQUER) CES1054-904 (VINYL) CES1054-905	
1969	9	GF Canyon Tan Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	F172-0560 THRU F172-0654
		GV Canyon Tan Vinyl	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	
		HF Veldt Gold Fabric	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	
		HV Veldt Gold Vinyl	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	
			TAN (LACQUER) CES1054-717 (VINYL) CES1054-749	TAN (LACQUER) CES1054-717 (VINYL) CES1054-749	GOLD (LACQUER) CES1054-908 (VINYL) CES1054-909	GOLD (LACQUER) CES1054-908 (VINYL) CES1054-909	

EXTERIOR PAINT

CODE	COLOR COMBINATIONS	
901 2901 3901	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	VALOR RED CES1054-806 (ACRYLIC) CES1054-409*
902 2902 3902	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	BAROQUE GOLD MET CES1054-913 (ACRYLIC) CES1054-928*
903 2903 3903	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	GOLDENROD CES1054-803 (ACRYLIC) CES1054-448*
904 2904 3904	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	BELFAST BROWN CES1054-773 (ACRYLIC) CES1054-848*
905 2905 3905	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	NORDIC BLUE MET CES1054-778 (ACRYLIC) CES1054-929*
906 2906 3906	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	CATALINA BLUE MET CES1054-914 (ACRYLIC) CES1054-930*
907 2907 3907	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	IMPERIAL BURGUNDY MET CES1054-767 (ACRYLIC) CES1054-847*
908 2908 3908	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	EMERALD GREEN MET CES1054-846 (ACRYLIC) CES1054-350*
950 3950	VESTAL WHITE CES1054-802 (ACRYLIC)	EMERALD GREEN MET CES1054-846 (ACRYLIC)
951 3951	VESTAL WHITE CES1054-802 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)
952 3952	TANGIER BEIGE CES1054-916 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)
953 3953	VESTAL WHITE CES1054-802 (ACRYLIC)	IMPERIAL BURGUNDY MET CES1054-767 (ACRYLIC)
954 3954	TANGIER BEIGE CES1054-916 (ACRYLIC)	IMPERIAL BURGUNDY MET CES1054-767 (ACRYLIC)
955 3955	POLARIS BLUE CES1054-917 (ACRYLIC)	CATALINA BLUE MET CES1054-914 (ACRYLIC)
956 3956	VESTAL WHITE CES1054-802 (ACRYLIC)	CATALINA BLUE MET CES1054-914 (ACRYLIC)
957 3957	POLARIS BLUE CES1054-917 (ACRYLIC)	NORDIC BLUE MET CES1054-778 (ACRYLIC)
958 3958	VESTAL WHITE CES1054-802 (ACRYLIC)	NORDIC BLUE MET CES1054-778 (ACRYLIC)
959 3959	SUN YELLOW CES1054-918 (ACRYLIC)	GOLDENROD CES1054-803 (ACRYLIC)
960 3960	SUN YELLOW CES1054-918 (ACRYLIC)	BAROQUE GOLD MET CES1054-913 (ACRYLIC)
961 3961	SUN YELLOW CES1054-918 (ACRYLIC)	BELFAST BROWN CES1054-773 (ACRYLIC)
962 3962	VESTAL WHITE CES1054-802 (ACRYLIC)	GOLDENROD CES1054-803 (ACRYLIC)
963 3963	VESTAL WHITE CES1054-802 (ACRYLIC)	KINGSTON GREEN MET CES1054-919 (ACRYLIC)

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 DASH NUMBER. EXAMPLE: CES1054-156 *Lacquer paint, used on French Aircraft only.

MODEL 172

PAINT CODE CHART

MODEL 172

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR CODE	INTERIOR COLOR	INTERIOR PAINT INTERIOR COLOR CODE AF	AV	BF	BV	SERIAL LISTING
1970	0	AF	Clove Brown Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	17258487 THRU 17259223
		AV	Clove Brown Vinyl	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	
		BF	Silver Teal Fabric	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	
		BV	Silver Teal Vinyl	BROWN (LACQUER) CES1054-970	BROWN (LACQUER) CES1054-970	BLUE (LACQUER) CES1054-972	BLUE (LACQUER) CES1054-972	
				MF	MV	CF	CV	F7200655 THRU F17200754
		MF	Merigold Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	
		MV	Merigold Vinyl	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	
		CF	Light Olive Fabric	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	
		CV	Light Olive Vinyl	MARIGOLD (LACQUER) CES1054-973	MARIGOLD (LACQUER) CES1054-973	OLIVE (LACQUER) CES1054-971	OLIVE (LACQUER) CES1054-971	

EXTERIOR PAINT

CODE	COLOR COMBINATIONS		
701 2701	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	PROVINICAL RED MET CES1054-963 (ACRYLIC) CES1054-998*	
702 2702	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-898*	BLACK CHERRY MET CES1054-964 (ACRYLIC) CES1054-999*	
703 2703	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	VALOR RED CES1054-806 (ACRYLIC) CES1054-409*	
704 2704	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	ITALIAN GOLD CES1054-834 (ACRYLIC) CES1054-265*	
705 2705	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	OLIVE CES1054-944 (ACRYLIC) CES1054-A04*	
706 2706	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	GLENWOOD GREEN MET CES1054-768 (ACRYLIC) CES1054-850*	
707 2707	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	BLUE WING MET CES1054-968 (ACRYLIC) CES1054-A05*	
708 2708	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	VENICE BLUE MET CES1054-833 (ACRYLIC) CES1054-572*	
709 2709	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	VELVET BLACK CES1054-807 (ACRYLIC) CES1054-151*	
710 2710	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398*	TIGER YELLOW CES1054-966 (ACRYLIC) CES1054-A03*	
4701	LUSTER WHITE CES1054-967 (ACRYLIC) CES1054-A10*	PROVINCIAL RED MET CES1054-963 (ACRYLIC) CES1054-998*	
4702	LUSTER WHITE CES1054-967 (ACRYLIC) CES1054-A10*	BLACK CHERRY MET CES1054-964 (ACRYLIC) CES1054-999*	
4703	LUSTER WHITE CES1054-967 (ACRYLIC) CES1054-A10*	VALOR RED CES1054-806 (ACRYLIC) CES1054-409*	
4704	LUSTER WHITE CES1054-967 (ACRYLIC) CES1054-A10*	ITALIAN GOLD CES1054-834 (ACRYLIC) CES1054-265*	
4705	LUSTER WHITE CES1054-967 (ACRYLIC) CES1054-A10*	OLIVE CES1054-944 (ACRYLIC) CES1054-A04*	
4706	LUSTER WHITE CES1054-967 (ACRYLIC) CES1054-A10*	GLENWOOD GREEN MET CES1054-768 (ACRYLIC) CES1054-850*	
4707	LUSTER WHITE CES1054-967 (ACRYLIC) CES1054-A10*	BLUE WING MET CES1054-968 (ACRYLIC) CES1054-A05*	
4708	LUSTER WHITE CES1054-967 (ACRYLIC) CES1054-A10*	VENICE BLUE MET CES1054-833 (ACRYLIC) CES1054-572*	
4709	LUSTER WHITE CES1054-967 (ACRYLIC) CES1054-A10*	VELVET BLACK CES1054-807 (ACRYLIC) CES1054-151*	
4710	LUSTER WHITE CES1054-967 (ACRYLIC) CES1054-A10*	TIGER YELLOW CES1054-966 (ACRYLIC) CES1054-A03*	
740	VESTAL WHITE CES1054-802 (ACRYLIC)	PROVINCIAL RED MET CES1054-963 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)
741	VESTAL WHITE CES1054-802 (ACRYLIC)	PROVINCIAL RED MET CES1054-963 (ACRYLIC)	BLACK CHERRY MET CES1054-964 (ACRYLIC)
742	VESTAL WHITE CES1054-802 (ACRYLIC)	BLACK CHERRY MET CES1054-964 (ACRYLIC)	SILVER MIST MET CES1054-969 (ACRYLIC)
744	VESTAL WHITE CES1054-802 (ACRYLIC)	ITALIAN GOLD CES1054-834 (ACRYLIC)	BUTTERSCOTCH CES1054-990 (ACRYLIC)
745	VESTAL WHITE CES1054-802 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)
746	VESTAL WHITE CES1054-802 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)	SILVER MIST MET CES1054-969 (ACRYLIC)
747	VESTAL WHITE CES1054-802 (ACRYLIC)	VENICE BLUE MET CES1054-833 (ACRYLIC)	BLUE WING MET CES1054-968 (ACRYLIC)
749	VESTAL WHITE CES1054-802 (ACRYLIC)	GLENWOOD GREEN MET CES1054-768 (ACRYLIC)	BLUE WING MET CES1054-968 (ACRYLIC)
750	VESTAL WHITE CES1054-802 (ACRYLIC)	GLENWOOD GREEN MET CES1054-768 (ACRYLIC)	OLIVE CES1054-944 (ACRYLIC)
753	VESTAL WHITE CES1054-802 (ACRYLIC)	OLIVE CES1054-944 (ACRYLIC)	GOLD FIN MET CES1054-965 (ACRYLIC)
4740	LUSTER WHITE CES1054-967 (ACRYLIC)	PROVINCIAL RED MET CES1054-963 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)
4741	LUSTER WHITE CES1054-967 (ACRYLIC)	PROVINCIAL RED MET CES1054-963 (ACRYLIC)	BLACK CHERRY MET CES1054-964 (ACRYLIC)
4742	LUSTER WHITE CES1054-967 (ACRYLIC)	BLACK CHERRY MET CES1054-964 (ACRYLIC)	SILVER MIST MET CES1054-969 (ACRYLIC)
4744	LUSTER WHITE CES1054-967 (ACRYLIC)	ITALIAN GOLD CES1054-834 (ACRYLIC)	BUTTERSCOTCH CES1054-990 (ACRYLIC)
4745	LUSTER WHITE CES1054-967 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)
4746	LUSTER WHITE CES1054-967 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)	SILVER MIST MET CES1054-969 (ACRYLIC)
4747	LUSTER WHITE CES1054-967 (ACRYLIC)	VENICE BLUE MET CES1054-833 (ACRYLIC)	BLUE WING MET CES1054-968 (ACRYLIC)
4749	LUSTER WHITE CES1054-967 (ACRYLIC)	GLENWOOD GREEN MET CES1054-768 (ACRYLIC)	BLUE WING MET CES1054-968 (ACRYLIC)
4750	LUSTER WHITE CES1054-967 (ACRYLIC)	GLENWOOD GREEN MET CES1054-768 (ACRYLIC)	OLIVE CES1054-944 (ACRYLIC)
4753	LUSTER WHITE CES1054-967 (ACRYLIC)	OLIVE CES1054-944 (ACRYLIC)	GOLD FIN MET CES1054-965 (ACRYLIC)

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 DASH NUMBER. EXAMPLE: CES1054-156

*Lacquer paint, used on French Aircraft only.

MODEL 172 PAINT CODE CHART MODEL 172

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR CODE	COLOR	INTERIOR PAINT (INTERIOR COLOR CODE)				SERIAL LISTING	EXTERIOR PAINT CODE	EXTERIOR PAINT COLOR COMBINATIONS		
				AF	AV	BF	BV					
1971	1	AF	Clove Brown Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	17259224 THRU 17259903	101 V101	VESTAL WHITE CES1054-802 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)	
		AV	Clove Brown Vinyl	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193		102 V102	VESTAL WHITE CES1054-802 (ACRYLIC)	DUBONNET' CES1054-A18 (ACRYLIC)	
		BF	Holiday Blue Fabric	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531		103 V103	VESTAL WHITE CES1054-802 (ACRYLIC)	GOLDENROD CES1054-803 (ACRYLIC)	
		BV	Holiday Blue Vinyl	BROWN (LACQUER) CES1054-970	BROWN (LACQUER) CES1054-970	BLUE (LACQUER) CES1054-A25	BLUE (LACQUER) CES1054-A25		104 V104	VESTAL WHITE CES1054-802 (ACRYLIC)	COLONIAL BLUE MET CES1054-A21 (ACRYLIC)	
				CF	CV	DF	DV		105 V105	VESTAL WHITE CES1054-802 (ACRYLIC)	OLIVE CES1054-944 (ACRYLIC)	
		CF	Picnic Green Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156)	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156		106 V106	VESTAL WHITE CES1054-802 (ACHYLIC)	VELVET PLACK CES1054-807 (ACRYLIC)	
		CV	Picnic Green Vinyl	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193		L101	LUSTER WHITE CES1054-967 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)	
		DF	Fiesta Red Fabric	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531		L102	LUSTER WHITE CES1054-967 (ACRYLIC)	DUBONNET' CES1054-A18 (ACRYLIC)	
		DV	Fiesta Red Vinyl	GREEN (LACQUER) CES1054-A31	GREEN (LACQUER) CES1054-A31	RED (LACQUER) CES1054-A28	RED (LACQUER) CES1054-A28		L103	LUSTER WHITE CES1054-967 (ACRYLIC)	GOLDENROD CES1054-803 (ACRYLIC)	
				EL	FL	HL	DL		L104	LUSTER WHITE CES1054-967 (ACRYLIC)	COLONIAL BLUE MET CES1054-A21 (ACRYLIC)	
		EL	Cloud Gray Leather	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156		L105	LUSTER WHITE CES1054-967 (ACRYLIC)	OLIVE CES1054-944 (ACRYLIC)	
		FL	Ebony Leather	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193		L106	LUSTER WHITE CES1054-967 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)	
		HL	Palamino Tan Leather	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531		*111 *V111	VESTAL WHITE CES1054-398 (LACQUER)	VALOR RED CES1054-409 (LACQUER)	
		DL	Fiesta Red Leather				RED (LACQUER) CES1054-A28		*112 *V112	VESTAL WHITE CES1054-398 (LACQUER)	GOLDENROD CES1054-448 (LACQUER)	
									*113 *V113	VESTAL WHITE CES1054-398 (LACQUER)	COLONIAL BLUE MET CES1054-A35 (LACQUER)	
									*114 *V114	VESTAL WHITE CES1054-398 (LACQUER)	SAN REMO TURQUOISE CES1054-705 (LACQUER)	
									*115 *V115	VESTAL WHITE CES1054-398 (LACQUER)	DRACO GREEN MET CES1054-A36 (LACQUER)	
								F17200755 THRU F17200804	171V	VESTAL WHITE CES1054-802 (ACRYLIC)	BUTTERSCOTCH CES1054-990 (ACRYLIC)	ITALIAN GOLD CES1054-834 (ACRYLIC)
									172V	VESTAL WHITE CES1054-802 (ACRYLIC)	BLUE WING MET CES1054-968 (ACRYLIC)	VENICE BLUE MET CES1054-833 (ACRYLIC)
									173V	VESTAL WHITE CES1054-802 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)
									174V	VESTAL WHITE CES1054-802 (ACRYLIC)	FLEET BLUE CES1054-A20 (ACRYLIC)	COLONIAL BLUE MET CES1054-A21 (ACRYLIC)
									175V	VESTAL WHITE CES1054-802 (ACRYLIC)	DUBONNET' CES1054-A18 (ACRYLIC)	GOLDFIN MET CES1054-965 (ACRYLIC)
									176V	VESTAL WHITE CES1054-802 (ACRYLIC)	SILVER MIST MET CES1054-969 (ACRYLIC)	OLIVE CES1054-944 (ACRYLIC)
									177V	VESTAL WHITE CES1054-802 (ACRYLIC)	GOLDENROD CES1054-803 (ACRYLIC)	SEAL BROWN MET CES1054-A17 (ACRYLIC)
									178V	VESTAL WHITE CES1054-802 (ACRYLIC)	CAVALIER GREEN MET CES1054-A22 (ACRYLIC)	SEAL BROWN MET CES1054-A17 (ACRYLIC)
									171L	LUSTER WHITE CES1054-967 (ACRYLIC)	BUTTERSCOTCH CES1054-990 (ACRYLIC)	ITALIAN GOLD CES1054-834 (ACRYLIC)
									172L	LUSTER WHITE CES1054-967 (ACRYLIC)	BLUE WING MET CES1054-968 (ACRYLIC)	VENICE BLUE MET CES1054-833 (ACRYLIC)
									173L	LUSTER WHITE CES1054-967 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)
									174L	LUSTER WHITE CES1054-967 (ACRYLIC)	FLEET BLUE CES1054-A20 (ACRYLIC)	COLONIAL BLUE MET CES1054-A21 (ACRYLIC)
									175L	LUSTER WHITE CES1054-967 (ACRYLIC)	DUBONNET' CES1054-A18 (ACRYLIC)	GOLDFIN MET CES1054-965 (ACRYLIC)
									176L	LUSTER WHITE CES1054-967 (ACRYLIC)	SILVER MIST MET CES1054-969 (ACRYLIC)	OLIVE CES1054-944 (ACRYLIC)
									177L	LUSTER WHITE CES1054-967 (ACRYLIC)	GOLDENROD CES1054-803 (ACRYLIC)	SEAL BROWN MET CES1054-A17 (ACRYLIC)
									178L	LUSTER WHITE CES1054-967 (ACRYLIC)	CAVALIER GREEN MET CES1054-A22 (ACRYLIC)	SEAL BROWN MET CES1054-A17 (ACRYLIC)

NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE: CES1054-802

*Lacquer paint, used on French Aircraft only.

MODEL 172

PAINT CODE CHART

MODEL 172

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR CODE	INTERIOR COLOR	INTERIOR PAINT (INTERIOR COLOR CODE)				SERIAL LISTING	EXTERIOR PAINT			
				AF	AV	BF	BV		CODE	COLOR COMBINATIONS		
1972	2	AF	Java Gold Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156 DULL BLACK (EPOXY) CES1054-482 CLOUD GRAY (LACQUER) CES1054-531 LIGHT GRAY (VINYL) CES1054-533 BROWN (LACQUER) CES1054-970	BLACK SEMI-GLOSS (LACQUER) CES1054-156 DULL BLACK (EPOXY) CES1054-482 CLOUD GRAY (LACQUER) CES1054-531 LIGHT GRAY (VINYL) CES1054-533 BROWN (LACQUER) CES1054-970	BLACK SEMI-GLOSS (LACQUER) CES1054-156 DULL BLACK (EPOXY) CES1054-482 CLOUD GRAY (LACQUER) CES1054-531 LIGHT GRAY (VINYL) CES1054-533 BLUE (LACQUER) CES1054-A41	BLACK SEMI-GLOSS (LACQUER) CES1054-156 DULL BLACK (EPOXY) CES1054-482 CLOUD GRAY (LACQUER) CES1054-531 LIGHT GRAY (VINYL) CES1054-533 BLUE (LACQUER) CES1054-A41	172 SERIAL 17259904 THRU 17260758 F172 SERIAL F17200805 THRU F17200904	201 A201V * 202 A202V 203 A203V * 204 A204V * 205 A205V * 206 A206V * 214V 215V 216V 217V 218V 219V 220V 221V	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER) VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER) VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER) VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC) CES1054-409 (LACQUER) PROVINCIAL RED MET CES1054-963 (ACRYLIC) EMPRESS BLUE CES1054-832 (ACRYLIC) CES1054-899 (LACQUER) CONTRALTO BLUE CES1054-A63 (ACRYLIC) CES1054-A56 (LACQUER) TIGER YELLOW CES1054-966 (ACRYLIC) CES1054-A03 (LACQUER) OLIVE CES1054-944 (ACRYLIC) CES1054-A04 (LACQUER) VELVET BLACK CES1054-807 (ACRYLIC) CONTRALTO BLUE CES1054-A63 (ACRYLIC) VELVET BLACK CES1054-807 (ACRYLIC) PROVINCIAL RED MET CES1054-963 (ACRYLIC) GOLDENROD CES1054-803 (ACRYLIC) DRACO GREEN MET CES1054-A23 (ACRYLIC) VELVET BLACK CES1054-807 (ACRYLIC) OLIVE CES1054-944 (ACRYLIC)	EMPRESS BLUE CES1054-832 (ACRYLIC) EMPRESS BLUE CES1054-832 (ACRYLIC) VALOR RED CES1054-806 (ACRYLIC) VALOR RED CES1054-806 (ACRYLIC) CARNIVAL YELLOW CES1054-A15 (ACRYLIC) TIGER YELLOW CES1054-966 (ACRYLIC) GOLDEN ROD CES1054-803 (ACRYLIC) GOLDFIN METALLIC CES1054-965 (ACRYLIC)
		BV	Bogota Blue Vinyl									
		CF	Cypress Green Fabric	CF BLACK SEMI-GLOSS (LACQUER) CES1054-156 DULL BLACK (EPOXY) CES1054-482 CLOUD GRAY (LACQUER) CES1054-531 LIGHT GRAY (VINYL) CES1054-533 GREEN (LACQUER) CES1054-A45	CV BLACK SEMI-GLOSS (LACQUER) CES1054-156 DULL BLACK (EPOXY) CES1054-482 CLOUD GRAY (LACQUER) CES1054-531 LIGHT GRAY (VINYL) CES1054-533 GREEN (LACQUER) CES1054-A45	DF BLACK SEMI-GLOSS (LACQUER) CES1054-156 DULL BLACK (EPOXY) CES1054-482 CLOUD GRAY (LACQUER) CES1054-531 LIGHT GRAY (VINYL) CES1054-533 RED (LACQUER) CES1054-A49	DV BLACK SEMI-GLOSS (LACQUER) CES1054-156 DULL BLACK (EPOXY) CES1054-482 CLOUD GRAY (LACQUER) CES1054-531 LIGHT GRAY (VINYL) CES1054-533 RED (LACQUER) CES1054-A49				
		CV	Cypress Green Vinyl									
		DF	Tahitian Red Fabric									
		DV	Tahitian Red Vinyl									
		EL	Cloud Gray Leather	EL BLACK SEMI-GLOSS (LACQUER) CES1054-156 DULL BLACK (EPOXY) CES1054-482 CLOUD GRAY (LACQUER) CES1054-531 LIGHT GRAY (VINYL) CES1054-533	FL BLACK SEMI-GLOSS (LACQUER) CES1054-156 DULL BLACK (EPOXY) CES1054-482 CLOUD GRAY (LACQUER) CES1054-531 LIGHT GRAY (VINYL) CES1054-533	HL BLACK SEMI-GLOSS (LACQUER) CES1054-156 DULL BLACK (EPOXY) CES1054-482 CLOUD GRAY (LACQUER) CES1054-531 LIGHT GRAY (VINYL) CES1054-533	DL BLACK SEMI-GLOSS (LACQUER) CES1054-156 DULL BLACK (EPOXY) CES1054-482 CLOUD GRAY (LACQUER) CES1054-531 LIGHT GRAY (VINYL) CES1054-533 RED (LACQUER) CES1054-A49				
		FL	Ebony Leather									
		HL	Palamino Tan Leather									
		DL	Tahitian Red Leather									

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 DASH NUMBER. EXAMPLE: CES1054-156

*LACQUER PAINT, USED ON FRENCH AIRCRAFT ONLY.

MODEL 172 PAINT CODE CHART MODEL 172

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR CODE	COLOR	INTERIOR PAINT — INTERIOR COLOR CODE				SERIAL LISTING	EXTERIOR PAINT — COLOR COMBINATIONS		
				AF	AV	BF	BV		CODE		
1973	3	AF	Java Gold Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	172 SERIAL 17260759 THRU 17261898	301 301A * 302 302A * 303 303A * 304 304A * 305 305A * 306 306A * 315 316 317 318 319 320 321 322 323 333	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER) VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER) VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER) VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER) VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER) VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC) VESTAL WHITE CES1054-802 (ACRYLIC)	CRANBERRY CES1054-875 (ACRYLIC) CES1054-861 (LACQUER) FLAG RED CES1054-A93 (ACRYLIC) CES1054-B03 (LACQUER) TROPICAL ORANGE CES1054-774 (ACRYLIC) CES1054-849 (LACQUER) CONTRALTO BLUE CES1054-A63 (ACRYLIC) CES1054-A56 (LACQUER) EMPRESS BLUE CES1054-832 (ACRYLIC) CES1054-899 (LACQUER) GRANADA GREEN CES1054-A97 (ACRYLIC) CES1054-B04 (LACQUER) TROPICAL ORANGE CES1054-774 (ACRYLIC) VERMILLION CES1054-A94 (ACRYLIC) NUTMEG CES1054-A95 (ACRYLIC) TIGER YELLOW CES1054-966 (ACRYLIC) LIME CES1054-A62 (ACRYLIC) SERENA BLUE CES1054-A96 (ACRYLIC) FLAG RED CES1054-A93 (ACRYLIC) VELVET BLACK CES1054-807 (ACRYLIC) VELVET BLACK CES1054-807 (ACRYLIC) FLAG RED CES1054-A93 (ACRYLIC)	OLIVE CES1054-944 (ACRYLIC) SHOAL TURQUOISE CES1054-804 (ACRYLIC) GRANADA GREEN CES1054-A97 (ACRYLIC) GRANADA GREEN CES1054-A97 (ACRYLIC) OLIVE CES1054-944 (ACRYLIC) CONTRALTO BLUE CES1054-A63 (ACRYLIC) CRANBERRY CES1054-875 (ACRYLIC) FLAG RED CES1054-A93 (ACRYLIC) EMPRESS BLUE CES1054-832 (ACRYLIC) VELVET BLACK CES1054-807 (ACRYLIC)
		AV	Java Gold Vinyl	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482				
		BF	Peacock Blue Fabric	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531				
		BV	Peacock Blue Vinyl	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533				
				BROWN (LACQUER) CES1054-970	BROWN (LACQUER) CES1054-970	BLUE (LACQUER) CES1054-A81	BLUE (LACQUER) CES1054-A81				
				CF	CV	DF	DV				
		CF	Golden Olive Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156				
		CV	Golden Olive Vinyl	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482				
		DF	Poppy Red Fabric	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531				
				LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533				
		DV	Poppy Red Vinyl	GREEN (LACQUER) CES1054-A89	GREEN (LACQUER) CES1054-A89	RED (LACQUER) CES1054-A85	RED (LACQUER) CES1054-A85				
				EL	FL	HL		F172 SERIAL F17200905 THRU F17201034			
		EL	Cloud Gray Leather	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156					
		FL	Ebony Leather	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482					
		HL	Palamino Tan Leather	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531					
				LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533					

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 DASH NUMBER. EXAMPLE: CES1054-156

*LACQUER PAINT, USED ON FRENCH AIRCRAFT ONLY.

MODEL 172

PAINT CODE CHART

MODEL 172

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR	INTERIOR PAINT					SERIAL LISTING	EXTERIOR PAINT			
			AF	BF	CF	DV	GF		CODE	COLOR COMBINATIONS		
1974	4	AF CHESTNUT BROWN FABRIC	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	17261899 THRU 17263458 F17201035 THRU F17201234	401 401A *	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER)	FLAG RED CES1054-A93 (ACRYLIC) CES1054-B03 (LACQUER)	
		BF COPEN BLUE FABRIC	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482		402 402A *	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER)	MAPLE MAROON CES1054-B44 (ACRYLIC) CES1054-B51 (LACQUER)	
		CF OLIVE GREEN FABRIC	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531		403 403A *	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER)	TIGER YELLOW CES1054-966 (ACRYLIC) CES1054-A03 (LACQUER)	
		DF SUNSET RED FABRIC	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533		404 404A *	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER)	PEPPER GREEN CES1054-B50 (ACRYLIC) CES1054-B56 (LACQUER)	
		GF OLD GOLD FABRIC	CHESTNUT BROWN (LACQUER) CES1054-B41	COPEN BLUE (LACQUER) CES1054-B29	OLIVE GREEN (LACQUER) CES1054-B33	SUNSET RED (LACQUER) CES1054-B37	OLD GOLD (LACQUER) CES1054-B25		405 405A *	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER)	EMPRESS BLUE CES1054-832 (ACRYLIC) CES1054-899 (LACQUER)	
			AV	**BV**	**CV**	**DV**	**GV**		406 406A *	VESTAL WHITE CES1054-802 (ACRYLIC) CES1054-398 (LACQUER)	POLE BLUE CES1054-B47 (ACRYLIC) CES1054-B53 (LACQUER)	
		AV CHESTNUT BROWN VINYL	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156					
		BV COPEN BLUE VINYL	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482		413	VESTAL WHITE CES1054-802 (ACRYLIC)	FLAG RED CES1054-A93 (ACRYLIC)	MAPLE MAROON CES1054-B44 (ACRYLIC)
		CV OLIVE GREEN VINYL	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531		418	VESTAL WHITE CES1054-802 (ACRYLIC)	SUMMER GOLD CES1054-B48 (ACRYLIC)	TIGER YELLOW CES1054-966 (ACRYLIC)
			LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533		420	VESTAL WHITE CES1054-802 (ACRYLIC)	POLE BLUE CES1054-B47 (ACRYLIC)	EMPRESS BLUE CES1054-832 (ACRYLIC)
		DV SUNSET RED VINYL	CHESTNUT BROWN (LACQUER) CES1054-B41	COPEN BLUE (LACQUER) CES1054-B29	OLIVE GREEN (LACQUER) CES1054-B33	SUNSET RED (LACQUER) CES1054-B37	OLD GOLD (LACQUER) CES1054-B25		430	VESTAL WHITE CES1054-802 (ACRYLIC)	FLAG RED CES1054-A93 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)
			AL	**EL**	**FL**	**GL**						
		GV OLD GOLD VINYL	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156			431	VESTAL WHITE CES1054-802 (ACRYLIC)	SERENA BLUE CES1054-A96 (ACRYLIC)	POLE BLUE CES1054-B47 (ACRYLIC)
		AL CHESTNUT BROWN LEATHER	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482			432	VESTAL WHITE CES1054-802 (ACRYLIC)	TIGER YELLOW CES1054-966 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)
		EL CLOUD GRAY LEATHER	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531			433	VESTAL WHITE CES1054-802 (ACRYLIC)	NUTMEG CES1054-A95 (ACRYLIC)	MAPLE MAROON CES1054-B44 (ACRYLIC)
		FL EBONY BLACK LEATHER	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533	LIGHT GRAY (VINYL) CES1054-533			434	VESTAL WHITE CES1054-802 (ACRYLIC)	PEPPER GREEN CES1054-B50 (ACRYLIC)	GROVE GREEN CES1054-B49 (ACRYLIC)
		GL OLD GOLD LEATHER	CHESTNUT BROWN (LACQUER) CES1054-B41		BLACK HI-GLOSS (LACQUER) CES1054-151	OLD GOLD (LACQUER) CES1054-B25			435	VESTAL WHITE CES1054-802 (ACRYLIC)	PEPPER GREEN CES1054-B50 (ACRYLIC)	TIGER YELLOW CES1054-966 (ACRYLIC)

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 DASH NUMBER. EXAMPLE CES1054-156

* LACQUER PAINT USED ON FRENCH AIRCRAFT ONLY.

This page intentionally left blank.

UPHOLSTERY & INTERIOR TRIM

UPHOLSTERED PARTS - HOW TO ORDER

1963 THRU 1965 MODELS


SERIAL NUMBER OF AIRCRAFT MUST BE GIVEN WITH PARTS ORDER

1966 MODEL & ON

PARTS MARKED WITH A # FOLLOWING PART NUMBER REQUIRE A SECOND DASH NUMBER FOR COLOR & MATERIAL


HOW TO DETERMINE 2nd DASH NUMBER


1. Find part number of desired part in catalog.
2. Refer to "FINISH & TRIM" plate, in the airplane, for your "Year Code" and "Interior Color Code."

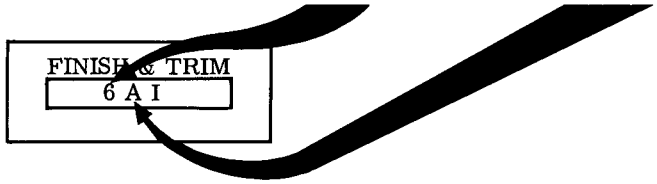

3. Add the "Year Code" and "Interior Color Code," to the part number from catalog.

EXAMPLE OF COMPLETE NUMBER

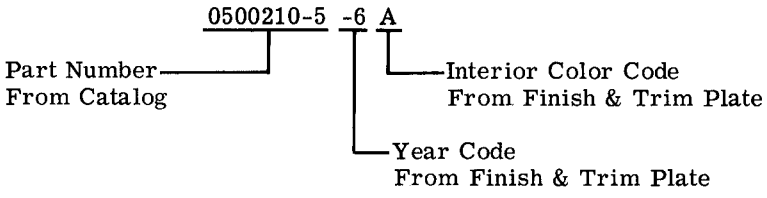

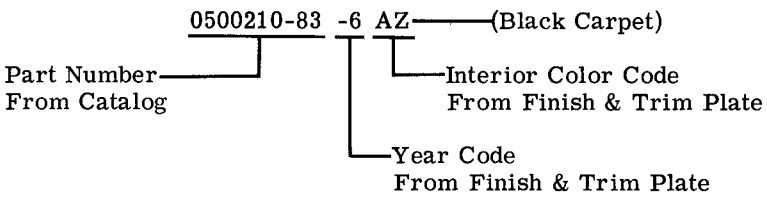

INTERIOR PAINTED OR PLASTIC PARTS HOW TO ORDER

1963 and 1964 MODELS

No special handling is required when ordering parts for 1963 and 1964 aircraft. In this group, the second dash number appears, when required, as a part of the part number.

1965 MODEL

PARTS MARKED WITH A ▫ FOLLOWING PART NUMBER REQUIRE A SECOND DASH NUMBER FOR PROPER COLOR

To obtain second dash number use table "1965 MODEL YEAR."

To use table, "1965 MODEL YEAR," first find number from catalog then find same number in table and add number of color required.

EXAMPLE OF COMPLETE NUMBER

0513321-1 -580

Part Number From Catalog — 2nd Dash Number From Table (Dark Turquoise)


1966 MODEL & ON

PARTS MARKED WITH A ▫ FOLLOWING PART NUMBER REQUIRE A SECOND DASH NUMBER FOR PROPER COLOR.

To obtain second dash number use of correct table, for your model year, is required.

To use table,

1. Find part number of desired part in catalog.
2. Refer to the "Finish and Trim" plate, in the airplane, for your "Interior Color Code."

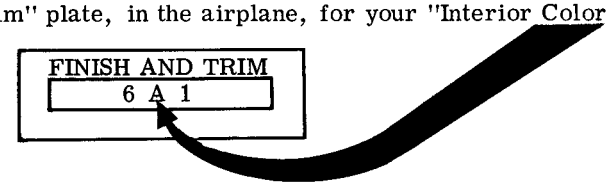

3. Locate part number from catalog in table.
4. Add dash number for color that appears under your "Interior Color Code."

STEP "3" — STEP "4"

INTERIOR PAINTED OR PLASTIC PARTS
1966 MODEL YEAR

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate) A	B	C	D
	17253393 & ON	F172-0180 & ON			
0500210-38	COVER - REAR WINDOW				
0500210-43	PANEL - BAGGAGE COMPARTMENT REAR	722	727	725	726
0500210-43	REAR WINDOW MOULDING	722	727	725	726
0500210-44	COVER - CENTER POST	722	727	725	726
0500210-81	SHIELD - DOORPOST LH	661	663	662	719
0500210-82	SHIELD - DOORPOST RH	661	663	662	719
0500210-94	COVER - WINDOW LH	722	727	725	726
0500210-95	COVER - BAGGAGE DOOR FRAME FWD	722	727	725	726
0500210-96	COVER - BAGGAGE DOOR FRAME AFT	722	727	725	726
0500210-97	PANEL - BAGGAGE COMPARTMENT RH	722	727	725	726
0500210-98	COVER - WINDOW RH	722	727	725	726
0500233-1	COVER - CONSOLE	722	727	725	719
0500312-2	MIRROR & COVER ASSEMBLY	279	279	279	279

EXAMPLES OF COMPLETE NUMBER

0500210-23 -722

Part Number From Catalog — 2nd Dash Number From Table (Interior Color Code A)

INTERIOR PAINTED OR PLASTIC PARTS
1965 MODEL YEAR ONLY

17251823 THRU 17253392 F172-0086 THRU F172-0179

PART NUMBER	PART NAME	TURQUOISE	KHAKI	CHESTNUT	GRAY	BLACK
0500210-23	PANEL - BAGGAGE COMPARTMENT RH		532			
0500210-25	FRAME COVER - BAGGAGE DOOR		532			
0500210-39	MOULDING - REAR WINDOW UPPER		532			
0500210-40	MOULDING - SIDE WINDOW RH		532			
0500210-41	MOULDING - SIDE WINDOW LH		532			
0500210-42	PANEL - BAGGAGE COMPARTMENT REAR		532			
0500210-43	MOULDING - REAR WINDOW LOWER		532			
0500210-44	COVER - CENTER POST		532			
0500210-94	MOULDING - SIDE WINDOW LH		532			
0500210-98	MOULDING - SIDE WINDOW RH		532			
0500210-108	COVER - COWL DECK	825	825	825	825	825
0500233-1	CONSOLE COVER		577	578	579	580
0511470-4	PANEL - BAGGAGE COMPARTMENT REAR		532			
0511482-5	SHIELD		532			
0511482-9	COVER ASSEMBLY - INSTRUMENT LIGHT		532			
0513319-4	COVER - ENGINE INSTRUMENTS		577	578	579	580
0513319-5	COVER - RADIO CUTOUT		577	578	579	580
0513319-12	COVER - STATIONARY PANEL LOWER		577	578	579	580
0513319-13	COVER - STATIONARY PANEL LOWER		577	578	579	580
0513319-17	COVER - SHOCK PANEL	279				
0513319-18	COVER - STATIONARY PANEL UPPER		577	578	579	580
0513319-21	COVER - STATIONARY INSTRUMENT PANEL	279				
0513321-1	DOOR ASSEMBLY - MAP CASE		577	578	579	580
0700114-35	PANEL - BAGGAGE DOOR		532			
0700646-1	SKIRT - SEAT BOTTOM LH		532			
0700646-2	SKIRT - SEAT BOTTOM RH		532			
0700646-3	SKIRT - SEAT BOTTOM LH		532			
0700646-4	SKIRT - SEAT BOTTOM RH		532			
0711133-18	SHIELD ASSEMBLY - RH		532			
0711133-27	SHIELD ASSEMBLY - LH		532			
0711133-33	SHIELD - FRONT DOORPOST		532			
1414110-1	TRIM - SEAT BACK		532			
1414110-3	POCKET ASSEMBLY - MAGAZINE		532			
1414215-7	TRIM ASSEMBLY-SEAT BACK LH		532			
1414215-8	TRIM ASSEMBLY-SEAT BACK RH		532			
1414264-5	POCKET ASSEMBLY-MAGAZINE		532			
1414264-13	TRIM ASSEMBLY-SEAT BACK		532			
1470089-14	MAP LIGHT ASSEMBLY		532			

INTERIOR PAINTED OR PLASTIC PARTS

1966 MODEL YEAR

17253393 THRU 17254892 F172-0180 THRU F172-0319

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate) A	B	C	D
0500210-39	COVER - REAR WINDOW	722	727	725	726
0500210-42	PANEL - BAGGAGE COMPARTMENT REAR	722	727	725	726
0500210-43	REAR WINDOW MOULDING	722	727	725	726
0500210-44	COVER - CENTER POST	722	727	725	726
0500210-81	SHIELD - DOORPOST LH	722	727	725	726
0500210-82	SHIELD - DOORPOST RH	722	727	725	726
0500210-94	COVER - WINDOW LH	722	727	725	726
0500210-95	COVER - BAGGAGE DOOR FRAME FWD	722	727	725	726
0500210-96	COVER - BAGGAGE DOOR FRAME AFT	722	727	725	726
0500210-97	PANEL - BAGGAGE COMPARTMENT RH	722	727	725	726
0500210-98	COVER - WINDOW RH	825	825	825	825
0500210-108	COVER - COWL DECK	722	727	725	726
0500233-1	COVER - CONSOLE	722	727	725	726
0500403-1	COVER - CONTROL YOKE	722	727	725	726
0511470-4	PANEL - BAGGAGE COMPARTMENT REAR	532	532	532	532
0511482-5	SHIELD INSTRUMENT LIGHT CONSOLE	532	532	532	532
0511482-9	COVER ASSEMBLY - INSTRUMENT LIGHT	722	727	725	726
0513319-4	COVER - ENGINE INSTRUMENTS	722	727	725	726
0513319-5	COVER - RADIO CUTOUT	722	727	725	726
0513319-12	COVER - STATIONARY PANEL LOWER	722	727	725	726
0513319-13	COVER - STATIONARY PANEL LOWER	279	279	279	279
0513319-17	COVER - SHOCK PANEL	722	727	725	726
0513319-18	COVER - STATIONARY PANEL UPPER	722	727	725	726
0513321-1	DOOR - MAP CASE	722	727	725	726
0700100-193	RETAINER - UPHOLSTERY	722	727	725	726
0700114-35	PANEL - BAGGAGE COMPARTMENT	193	193	193	193
0700148-1	HOOD - MAPLIGHT	746	748	747	751
0700631-5	FRAME ASSEMBLY - SEAT BOTTOM LH	746	748	747	751
0700631-6	FRAME ASSEMBLY - SEAT BOTTOM RH	722	727	725	726
0700646-1	SKIRT - SEAT LH	722	727	725	726
0700646-2	SKIRT - SEAT RH	722	727	725	726
0700646-3	SKIRT - SEAT LH	722	727	725	726
0700646-4	SKIRT - SEAT RH	661	663	662	719
0711097-2	FRAME ASSEMBLY - SEAT	722	727	725	726
0711133-18	SHIELD ASSEMBLY - FRONT DOORPOST LH	722	727	725	726
0711133-27	SHIELD ASSEMBLY - FRONT DOORPOST RH	722	727	725	726
0711133-33	SHIELD ASSEMBLY - FRONT DOORPOST	722	727	725	726
1414110-1	TRIM - SEAT BACK	722	727	725	726
1414110-3	POCKET ASSEMBLY - MAGAZINE	722	727	725	726
1414215-7	TRIM ASSEMBLY - SEAT BACK LH	722	727	725	726
1414215-8	TRIM ASSEMBLY - SEAT BACK RH	746	748	751	747
1414240-3	BOTTOM ASSEMBLY - SEAT	746	748	751	747
1414240-4	BOTTOM ASSEMBLY - SEAT	722	727	726	725
1414264-5	POCKET ASSEMBLY - MAGAZINE	722	727	726	725
1414264-13	TRIM ASSEMBLY - SEAT BACK	279	279	279	279
1470089-14	MAP LIGHT ASSEMBLY				

INTERIOR PAINTED OR PLASTIC PARTS

1967 MODEL YEAR

17254893 THRU 17256512

F172-0320 THRU F172-0431,
F172-0436 THRU F172-0442,
F172-0444 THRU F172-0446

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)							
		AF	AV	BF	BV	CF	CV	DF	DV
0413484-2	SHIELD-FRONT DOORPOST LH	726	726	794	794	793	793	720	720
0413484-4	SHIELD-FRONT DOORPOST LH	726	726	794	794	793	793	720	720
0500210-39	COVER - REAR WINDOW	726	726	794	794	793	793	720	720
0500210-42	PANEL - BAGGAGE COMPARTMENT REAR	726	726	794	794	793	793	720	720
0500210-43	REAR WINDOW MOULDING	726	726	794	794	793	793	720	720
0500210-81	SHIELD - DOORPOST LH	726	726	794	794	793	793	720	720
0500210-82	SHIELD - DOORPOST RH	726	726	794	794	793	793	720	720
0500210-94	COVER - WINDOW LH	726	726	794	794	793	793	720	720
0500210-95	COVER - BAGGAGE DOOR FRAME FWD	726	726	794	794	793	793	720	720
0500210-96	COVER - BAGGAGE DOOR FRAME AFT	726	726	794	794	793	793	720	720
0500210-97	PANEL - BAGGAGE COMPARTMENT RH	726	726	794	794	793	793	720	720
0500210-98	COVER - WINDOW RH	726	726	794	794	793	793	720	720
0500210-108	COVER-COWL DECK	825	825	825	825	825	825	825	825
0500233-1	COVER-CONSOLE	726	726	794	794	793	793	720	720
0500403-1	COVER-CONTROL YOKE	726	726	726	726	726	726	726	726
0511470-4	PANEL - BAGGAGE COMPARTMENT REAR	726	726	794	794	793	793	720	720
0511482-9	COVER ASSEMBLY-INSTRUMENT LIGHT	532	532	532	532	532	532	532	532
0511482-20	SHIELD-INSTURMENT LIGHT	532	532	532	532	532	532	532	532
0513319-5	COVER-RADIO CUTOUT	279	279	279	279	279	279	279	279
0513390-1	COVER ASSEMBLY - STATIONARY PANEL LWR SKYHAWK	726	726	794	794	793	793	720	720
0513390-6	COVER ASSEMBLY - STATIONARY PANEL LWR 172	726	726	794	794	793	793	720	720
0513390-9	COVER - ENGINE INSTRUMENTS	279	279	279	279	279	279	279	279
0513390-10	COVER ASSEMBLY - STATIONARY PANEL UPR	726	726	794	794	793	793	720	720
0513390-11	COVER - SHOCK PANEL	279	279	279	279	279	279	279	279
0513390-12	DOOR ASSEMBLY - MAP CASE	726	726	794	794	793	793	720	720
0513390-22	COVER - LOWER LH	726	726	794	794	793	793	720	720
0700100-193	RETAINER - UPHOLSTERY	726	726	794	794	793	793	720	720
0700114-35	PANEL - BAGGAGE DOOR	726	726	794	794	793	793	720	720
0700148-1	HOOD - MAPLIGHT	193	193	193	193	193	193	193	193
0700631-5	FRAME ASSEMBLY - SEAT BOTTOM LH	719	719	798	798	796	796	718	718
0700631-6	FRAME ASSEMBLY - SEAT BOTTOM RH	719	719	798	798	796	796	718	718
0700646-1	SKIRT - SEAT LH	726	726	794	794	793	793	720	720
0700646-2	SKIRT - SEAT RH	726	726	794	794	793	793	720	720
0711097-2	FRAME ASSEMBLY - SEAT	719	719	798	798	796	796	718	718
0711133-49	SHIELD - FRONT DOORPOST LH	726	726	794	794	793	793	720	720
0711133-50	SHIELD - FRONT DOORPOST RH	726	726	794	794	793	793	720	720
1414110-1	TRIM - SEAT BACK	726	726	794	794	793	793	720	720
1414110-3	POCKET ASSEMBLY-SEAT	726	726	794	794	793	793	720	720
1414215-7	TRIM ASSEMBLY-SEAT BACK LH	726	726	794	794	793	793	720	720
1414215-8	TRIM ASSEMBLY-SEAT BACK RH	726	726	794	794	793	793	720	720
1470089-14	MAP LIGHT ASSEMBLY	279	279	279	279	279	279	279	279

INTERIOR PAINTED OR PLASTIC PARTS

1968 MODEL YEAR

F172-0432 THRU F172-0435
F172-0443, F172-0447
THRU F172-0559

17256513 THRU 17257161

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)									
		AF	AV	BF	BV	CF	CV	DF	DV	GF	GV
0413484-2	SHIELD-FRONT DOORPOST LH	726	726	794	794	793	793	720	720	721	721
0413484-4	SHIELD-FRONT DOORPOST LH	726	726	794	794	793	793	720	720	721	721
0500210-39	COVER - REAR WINDOW	726	726	794	794	793	793	720	720	721	721
0500210-42	PANEL - BAGGAGE COMPARTMENT REAR	726	726	794	794	793	793	720	720	721	721
0500210-43	MOULDING - REAR WINDOW	726	726	794	794	793	793	720	720	721	721
0500210-44	COVER - CENTER POST	726	726	794	794	793	793	720	720	721	721
0500210-81	SHIELD - DOORPOST LH	726	726	794	794	793	793	720	720	721	721
0500210-82	SHIELD - DOORPOST RH	726	726	794	794	793	793	720	720	721	721
0500210-94	COVER - WINDOW LH	726	726	794	794	793	793	720	720	721	721
0500210-95	COVER - BAGGAGE DOOR FRAME FWD	726	726	794	794	793	793	720	720	721	721
0500210-96	COVER - BAGGAGE DOOR FRAME AFT	726	726	794	794	793	793	720	720	721	721
0500210-97	PANEL - BAGGAGE COMPARTMENT RH	726	726	794	794	793	793	720	720	721	721
0500210-98	COVER - WINDOW RH	726	726	794	794	793	793	720	720	721	721
0500210-108	COVER-COWL DECK	825	825	825	825	825	825	825	825	825	825
0500233-1	COVER - CONSOLE	726	726	794	794	793	793	720	720	721	721
0500403-1	COVER - CONTROL YOKE	726	726	794	794	793	793	720	720	721	721
0511470-4	PANEL - BAGGAGE COMPARTMENT REAR	726	726	794	794	793	793	720	720	721	721
0511482-9	COVER ASSEMBLY - INSTRUMENT LIGHT	532	532	532	532	532	532	532	532	532	532
0511482-20	SHIELD - INSTRUMENT LIGHT	532	532	532	532	532	532	532	532	532	532
0513062-1	SPLICE PLATE	279	279	279	279	279	279	279	279	279	279
0513062-2	SPLICE PLATE	279	279	279	279	279	279	279	279	279	279
0513242-10	COVER - INSTRUMENT PANEL UPPER	279	279	279	279	279	279	279	279	279	279
0513242-18	COVER - SHOCK PANEL	279	279	279	279	279	279	279	279	279	279
0513319-5	COVER - RADIO CUTOUT	279	279	279	279	279	279	279	279	279	279
0513390-9	COVER - ENGINE INSTRUMENTS	279	279	279	279	279	279	279	279	279	279
0513390-12	DOOR ASSEMBLY - MAP CASE	726	726	794	794	793	793	720	720	721	721
0513390-22	COVER - LWR LH	726	726	794	794	793	793	720	720	721	721
0513390-25	COVER ASSEMBLY - INSTRUMENT PANEL LWR	726	726	794	794	793	793	720	720	721	721
0514011-1	TRIM ASSEMBLY-SEAT BACK	726	726	794	794	793	793	720	720	721	721
0700100-193	RETAINER - UPHOLSTERY	726	726	794	794	793	793	720	720	721	721
0700114-35	PANEL - BAGGAGE DOOR	726	726	794	794	793	793	720	720	721	721
0700148-1	HOOD - MAPLIGHT	193	193	193	193	193	193	193	193	193	193
0700631-5	FRAME ASSEMBLY - SEAT BOTTOM LH F172 ONLY	719	719	798	798	796	796	718	718	717	717
0700631-6	FRAME ASSEMBLY - SEAT BOTTOM RH F172 ONLY	719	719	798	798	796	796	718	718	717	717
0700631-5	FRAME ASSEMBLY - SEAT BOTTOM LH 172 & SKYHAWK ONLY			799	799	797	797	750	750	749	749
0700631-6	FRAME ASSEMBLY - SEAT BOTTOM RH 172 & SKYHAWK ONLY			799	799	797	797	750	750	749	749
0700646-1	SKIRT - SEAT LH	726	726	794	794	793	793	720	720	721	721
0700646-2	SKIRT - SEAT RH	726	726	794	794	793	793	720	720	721	721
0711097-2	FRAME ASSEMBLY - AUXILIARY SEAT F172 ONLY	719	719	798	798	796	796	718	718		
0711097-2	FRAME ASSEMBLY - AUXILIARY SEAT 172 & SKYHAWK ONLY			799	799	797	797	750	750	717	717
0711133-50	SHIELD - FRONT DOORPOST RH	726	726	794	794	793	793	720	720	721	721
0715001-1	TRIM - SEAT BACK	726	726	794	794	793	793	720	720	721	721
1414215-7	TRIM ASSEMBLY - SEAT BACK LH	726	726	794	794	793	793	720	720	721	721
1414215-8	TRIM ASSEMBLY - SEAT BACK RH	726	726	794	794	793	793	720	720	721	721
1470089-14	MAPLIGHT ASSEMBLY	279	279	279	279	279	279	279	279	279	279
1715023-3	POCKET ASSEMBLY - MAGAZINE	726	726	794	794	793	793	720	720	721	721

INTERIOR PAINTED OR PLASTIC PARTS

1969 MODEL YEAR

17257162 THRU 17258486 F172-0560 THRU F172-0654

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)							
		BF	BV	DF	DV	GF	GV	HF	HV
0413484-2	SHIELD-FRONT DOORPOST LH	902	902	901	901	721	721	903	903
0413484-4	SHIELD-FRONT DOORPOST LH	902	902	901	901	721	721	903	903
0500210-42	PANEL-BAGGAGE COMPARTMENT REAR	902	902	901	901	721	721	903	903
0500210-44	COVER-CENTER POST	902	902	901	901	721	721	903	903
0500210-81	SHIELD-DOORPOST LH	902	902	901	901	721	721	903	903
0500210-82	SHIELD-DOORPOST RH	902	902	901	901	721	721	903	903
0500210-95	COVER-BAGGAGE DOOR FRAME FWD	902	902	901	901	721	721	903	903
0500210-96	COVER-BAGGAGE DOOR FRAME AFT	902	902	901	901	721	721	903	903
0500210-97	PANEL-BAGGAGE COMPARTMENT RH	902	902	901	901	721	721	903	903
0500210-108	COVER-COWL DECK	825	825	825	825	825	825	825	825
0500210-132	COVER-REAR WINDOW	902	902	901	901	721	721	903	903
0500210-135	MOULDING - REAR WINDOW	902	902	901	901	721	721	903	903
0500233-1	COVER - CONSOLE	902	902	901	901	721	721	903	903
0500233-1	COVER - CONSOLE	902	902	901	901	721	721	903	903
0500403-1	COVER - CONTROL YOKE	902	902	901	901	721	721	903	903
0511470-4	PANEL - BAGGAGE COMPARTMENT RH	532	532	532	532	532	532	532	532
0511482-9	COVER ASSEMBLY - INSTRUMENT LIGHT	532	532	532	532	532	532	532	532
0511482-20	SHIELD - INSTRUMENT LIGHT	279	279	279	279	279	279	279	279
0513062-1	SPLICE PLATE	279	279	279	279	279	279	279	279
0513062-2	SPLICE PLATE USED WITH MAP LIGHT	279	279	279	279	279	279	279	279
0513242-10	COVER - INSTRUMENT PANEL UPPER	279	279	279	279	279	279	279	279
0513242-18	COVER - SHOCK PANEL	279	279	279	279	279	279	279	279
0513319-5	COVER - RADIO CUTOUT	279	279	279	279	279	279	279	279
0513390-9	COVER - ENGINE INSTRUMENTS	902	902	901	901	721	721	903	903
0513390-22	COVER - LWR RH	902	902	901	901	721	721	903	903
0513390-27	COVER - INSTRUMENT PANEL LWR	902	902	901	901	721	721	903	903
0513390-29	COVER - MAP CASE DOOR	902	902	901	901	721	721	903	903
0514011-1	TRIM ASSEMBLY - REAR SEAT BACK	902	902	901	901	721	721	903	903
0514012-1	COVER - WINDOW LH	902	902	901	901	721	721	903	903
0514012-2	COVER - WINDOW RH	906	906	904	904	717	717	908	908
0700100-193	RETAINER - UPHOLSTERY	902	902	901	901	721	721	903	903
0700114-35	PANEL - BAGGAGE DOOR	193	193	193	193	193	193	193	193
0700148-1	HOOD - MAPLIGHT	907	907	749	749	909	909	905	905
0700631-5	FRAME ASSEMBLY - SEAT BOTTOM LH 172 & SKYHAWK ONLY	906	906	904	904	717	717	908	908
0700631-5	FRAME ASSEMBLY - SEAT BOTTOM LH F172 ONLY.	907	907	749	749	909	909	905	905
0700631-6	FRAME ASSEMBLY - SEAT BOTTOM RH 172 & SKYHAWK ONLY	906	906	904	904	717	717	908	908
0700631-6	FRAME ASSEMBLY - SEAT BOTTOM RH F172 ONLY.	902	902	901	901	721	721	903	903
0700646-1	SKIRT - SEAT LH	902	902	901	901	721	721	903	903
0700646-2	SKIRT - SEAT RH	906	906	717	717	908	908	904	904
0711097-2	FRAME ASSEMBLY - SEAT 172 & SKYHAWK ONLY	906	906	904	904	717	717	908	908
0711097-2	FRAME ASSEMBLY - SEAT F172 ONLY.	902	902	901	901	721	721	903	903
0711133-50	SHIELD - FRONT DOORPOST RH	902	902	901	901	721	721	903	903
0715001-1	TRIM - SEAT BACK	902	902	901	901	721	721	903	903
1414215-7	TRIM ASSEMBLY-SEAT BACK LH	902	902	901	901	721	721	903	903
1414215-8	TRIM ASSEMBLY-SEAT BACK RH	279	279	279	279	279	279	279	279
1470089-14	MAPLIGHT ASSEMBLY	902	902	901	901	721	721	903	903
1715023-3	POCKET - MAGAZINE								

INTERIOR PAINTED OR PLASTIC PARTS
1970 MODEL YEAR

17258487 THRU 17259223 F17200655 THRU F17200754

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)							
		AF	BF	MF	CF	AV	BV	MV	CV
0413484-2	SHIELD-FRONT DOORPOST LH	532	532	532	532	532	532	532	532
0413484-4	SHIELD-FRONT DOORPOST LH	532	532	532	532	532	532	532	532
0500210-42	PANEL-BAGGAGE COMPARTMENT REAR	978	976	977	975	978	976	977	975
0500210-44	COVER-CENTER POST	532	532	532	532	532	532	532	532
0500210-81	SHIELD-DOORPOST LH	978	976	977	975	978	976	977	975
0500210-82	SHIELD-DOORPOST RH	978	976	977	975	978	976	977	975
0500210-95	COVER-BAGGAGE DOOR FRAME FWD	978	976	977	975	978	976	977	975
0500210-96	COVER-BAGGAGE DOOR FRAME AFT	978	976	977	975	978	976	977	975
0500210-97	PANEL-BAGGAGE COMPARTMENT RH	978	976	977	975	978	976	977	975
0500210-108	COVER-COWL DECK	825	825	825	825	825	825	825	825
0500210-132	COVER-REAR WINDOW	532	532	532	532	532	532	532	532
0500210-135	MOULDING-REAR WINDOW	532	532	532	532	532	532	532	532
0500233-1	COVER-CONSOLE	978	976	977	975	978	976	977	975
0500403-1	COVER-CONTROL YOKE	978	976	977	975	978	976	977	975
0511470-4	PANEL - BAGGAGE COMPARTMENT REAR	978	976	977	975	978	976	977	975
0511482-9	COVER ASSEMBLY-INSTRUMENT LIGHT	532	532	532	532	532	532	532	532
0511482-20	SHIELD-INSTRUMENT LIGHT	532	532	532	532	532	532	532	532
0513062-1	SPLICE PLATE	989	989	989	989	989	989	989	989
0513062-2	SPLICE PLATE USED WITH MAP LIGHT	989	989	989	989	989	989	989	989
0513242-10	COVER-INSTRUMENT PANEL UPPER	279	279	279	279	279	279	279	279
0513242-26	COVER-SHOCK PANEL	989	989	989	989	989	989	989	989
0513319-5	COVER-RADIO CUTOUT	279	279	279	279	279	279	279	279
0513390-9	COVER-ENGINE INSTRUMENTS	989	989	989	989	989	989	989	989
0513390-22	COVER-LWR RH	978	976	977	975	978	976	977	975
0513390-31	COVER-INSTRUMENT PANEL LWR	978	976	977	975	978	976	977	975
0513390-29	COVER-MAP CASE DOOR	978	976	977	975	978	976	977	975
0514012-1	COVER-WINDOW LH	532	532	532	532	532	532	532	532
0514012-2	COVER-WINDOW RH	532	532	532	532	532	532	532	532
0514017-1	SKIRT-SEAT LH	532	532	532	532	532	532	532	532
0514017-2	SKIRT-SEAT RH	532	532	532	532	532	532	532	532
0514017-3	TRIM-SEAT	532	532	532	532	532	532	532	532
0514018-1	TRIM-SEAT BACK	532	532	532	532	532	532	532	532
0514018-3	POCKET ASSEMBLY-SEAT BACK	532	532	532	532	532	532	532	532
0514044-1	RETAINER - SEAT BOTTOM	532	532	532	532	532	532	532	532
0514055-1	TRIM ASSEMBLY-FRONT SEAT BACK	532	532	532	532	532	532	532	532
0514055-3	POCKET ASSY-SEAT BACK	532	532	532	532	532	532	532	532
0514056-1	TRIM ASSEMBLY-SEAT BACK	532	532	532	532	532	532	532	532
0514057-1	TRIM ASSEMBLY-SEAT BACK LH	532	532	532	532	532	532	532	532
0514057-2	TRIM ASSEMBLY-SEAT BACK RH	532	532	532	532	532	532	532	532
0514058-1	RETAINER-SEAT BOTTOM	532	532	532	532	532	532	532	532
0700100-193	RETAINER - UPHOLSTERY	970	972	973	971	970	972	973	971
0700148-1	HOOD - MAPLIGHT	193	193	193	193	193	193	193	193
0711133-50	SHIELD-FRONT DOORPOST RH	532	532	532	532	532	532	532	532
0714010-1	SKIRT - SEAT LH	532	532	532	532	532	532	532	532
0714010-2	SKIRT - SEAT RH	532	532	532	532	532	532	532	532
0717000-4	PANEL-BAGGAGE DOOR	978	976	977	975	978	976	977	975
1470089-14	MAP LIGHT ASSEMBLY	279	279	279	279	279	279	279	279

INTERIOR PAINTED OR PLASTIC PARTS

1971 MODEL YEAR

17259224 THRU 17259903 F17200755 THRU F17200804

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)											
		AF	AV	BF	BV	CF	CV	DF	DV	EL	FL	HL	DL
0413484-8	SHIELD-FRONT DOORPOST LH	532	532	532	532	532	532	532	532	532	532	532	532
0413484-9	SHIELD-FRONT DOORPOST LH	532	532	532	532	532	532	532	532	532	532	532	532
0414013-6	COVER ASSEMBLY-INSTRUMENT LIGHT	532	532	532	532	532	532	532	532	532	532	532	532
0414013-7	SHIELD-INSTRUMENT LIGHT	532	532	532	532	532	532	532	532	532	532	532	532
0500210-42	PANEL-BAGGAGE COMPARTMENT REAR	978	978	A24	A24	A30	A30	A27	A27	532	279	532	A27
0500210-44	COVER-CENTER POST	532	532	532	532	532	532	532	532	532	532	532	532
0500210-95	COVER-BAGGAGE DOOR FRAME FWD	978	978	A24	A24	A30	A30	A27	A27	532	279	532	A27
0500210-96	COVER-BAGGAGE DOOR FRAME AFT	978	978	A24	A24	A30	A30	A27	A27	532	279	532	A27
0500210-97	PANEL-BAGGAGE COMPARTMENT RH	978	978	A24	A24	A30	A30	A27	A27	532	279	532	A27
0500210-108	COVER-COWL DECK	825	825	825	825	825	825	825	825	825	825	825	825
0500210-132	COVER-REAR WINDOW	532	532	532	532	532	532	532	532	532	532	532	532
0500210-135	MOULDING-REAR WINDOW	532	532	532	532	532	532	532	532	532	532	532	532
0500233-1	COVER-CONSOLE	978	978	A24	A24	A30	A30	A27	A27	279	279	279	A27
0500403-1	COVER-CONTROL YOKE	978	978	A24	A24	A30	A30	A27	A27	279	279	279	A27
0511470-4	PANEL - BAGGAGE COMPARTMENT REAR	978	978	A24	A24	A30	A30	A27	A27	532	279	532	A27
0513076-3	COVER ASSEMBLY-REMOVABLE SWITCH PANEL 172	978	978	A24	A24	A30	A30	A27	A27	279	279	279	A27
0513076-7	COVER ASSEMBLY-REMOVABLE SWITCH PANEL F172	978	978			A30	A30						
0513077-1	COVER-SHOCK PANEL	989	989	989	989	989	989	989	989	989	989	989	989
0513077-4	COVER-ENGINE INSTRUMENTS	989	989	989	989	989	989	989	989	989	989	989	989
0513077-7	SPLICE PLATE	989	989	989	989	989	989	989	989	989	989	989	989
0513077-8	COVER-LOWER RH	978	978	A24	A24	A30	A30	A27	A27	279	279	279	A27
0513077-9	SPLICE PLATE USED WITH MAPLIGHT	989	989	989	989	989	989	989	989	989	989	989	989
0513077-10	COVER ASSEMBLY-INSTRUMENT PANEL LWR	978	978	A24	A24	A30	A30	A27	A27	279	279	279	A27
0513319-5	COVER-RADIO CUTOUT	279	279	279	279	279	279	279	279	279	279	279	279
0513422-1	DOOR ASSY-MAP CASE	978	978	A24	A24	A30	A30	A27	A27	279	279	279	A27
0513423-2	COVER-RADIO SWITCH PANEL 172	279	279	279	279	279	279	279	279	279	279	279	279
0514017-1	SKIRT-SEAT LH	532	532	532	532	532	532	532	532	532	532	532	532
0514017-2	SKIRT-SEAT RH	532	532	532	532	532	532	532	532	532	532	532	532
0514017-3	TRIM-SEAT	532	532	532	532	532	532	532	532	532	532	532	532
0514018-15	TRIM-SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0514018-3	POCKET ASSEMBLY-SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0514044-1	RETAINER - SEAT BOTTOM	532	532	532	532	532	532	532	532	532	532	532	532
0514055-11	TRIM ASSEMBLY-FRONT SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0514055-3	POCKET ASSEMBLY-SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0514056-1	TRIM ASSEMBLY-SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0514057-1	TRIM ASSEMBLY-SEAT BACK LH	532	532	532	532	532	532	532	532	532	532	532	532
0514057-2	TRIM ASSEMBLY-SEAT BACK RH	532	532	532	532	532	532	532	532	532	532	532	532
0514058-1	RETAINER-SEAT BOTTOM	532	532	532	532	532	532	532	532	532	532	532	532
0514064-1	RETAINER-SKYLIGHT	532	532	532	532	532	532	532	532	532	532	532	532

INTERIOR PAINTED OR PLASTIC PARTS

1971 MODEL YEAR

17259224 THRU 17259903 F17200755 THRU F17200804

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)											
		AF	AV	BF	BV	CF	CV	DF	DV	EL	FL	HL	DL
0514065-1	SHIELD-DOORPOST LH	978	978	A24	A24	A30	A30	A27	A27	532	279	532	A27
0514065-2	SHIELD-DOORPOST RH	978	978	A24	A24	A30	A30	A27	A27	532	279	532	A27
0514068-2	COVER ASSEMBLY-SPEAKER	532	532	532	532	532	532	532	532	532	532	532	532
0514069-1	TIARA	532	532	532	532	532	532	532	532	532	532	532	532
0514071-1	COVER-WINDOW LH	532	532	532	532	532	532	532	532	532	532	532	532
0514071-2	COVER-WINDOW RH	532	532	532	532	532	532	532	532	532	532	532	532
0700100-193	RETAINER - UPHOLSTERY	970	970	A25	A25	A31	A31	A28	A28	531	156	531	A28
0700148-1	HOOD - MAPLIGHT	193	193	193	193	193	193	193	193	193	193	193	193
0711133-12	SHIELD-FRONT DOORPOST RH	532	532	532	532	532	532	532	532	532	532	532	532
0717000-4	PANEL-BAGGAGE DOOR	978	978	A24	A24	A30	A30	A27	A27	532	279	532	A27
1470089-14	MAPLIGHT ASSEMBLY	279	279	279	279	279	279	279	279	279	279	279	279

INTERIOR PAINTED OR PLASTIC PARTS

1972 MODEL YEAR

17259904 THRU 17260758 F17200805 THRU F17200904

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)											
		AF	AV	BF	BV	CF	CV	DF	DV	EL	FL	HL	DL
0413204-3	BRACKET-COMPASS	532	532	532	532	532	532	532	532	532	532	532	532
0413484-10	SHIELD-FRONT DOORPOST LH	532	532	532	532	532	532	532	532	532	532	532	532
0413527-4	COVER-RADIO CUTOUT	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0413532-2	TRIM - RADIO COVER	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0414013-7	SHIELD - INSTRUMENT LIGHT	532	532	532	532	532	532	532	532	532	532	532	532
0413013-9	COVER - INSTRUMENT LIGHT	532	532	532	532	532	532	532	532	532	532	532	532
0500210-42	PANEL-BAGGAGE COMPARTMENT REAR	978	978	A44	A44	A48	A48	A52	A52	532	279	532	A52
0500210-44	COVER-CENTER POST	532	532	532	532	532	532	532	532	532	532	532	532
0500210-95	COVER-BAGGAGE DOOR FRAME FWD	978	978	A44	A44	A48	A48	A52	A52	532	279	532	A52
0500210-96	COVER-BAGGAGE DOOR FRAME AFT	978	978	A44	A44	A48	A48	A52	A52	532	279	532	A52
0500210-97	PANEL-BAGGAGE	978	978	A44	A44	A48	A48	A52	A52	532	279	532	A52
0500210-108	COVER-COWL DECK	825	825	825	825	825	825	825	825	825	825	825	825
0500210-132	COVER-REAR WINDOW	532	532	532	532	532	532	532	532	532	532	532	532
0500210-135	MOULDING-REAR WINDOW	532	532	532	532	532	532	532	532	532	532	532	532
0500230-2	SHELF-BAGGAGE	970	970	A41	A41	A45	A45	A49	A49	531	156	531	A49
0500233-1	COVER-CONSOLE	978	978	A44	A44	A48	A48	A52	A52	279	279	279	A52
0500403-1	COVER-CONTROL YOKE	978	978	A44	A44	A48	A48	A52	A52	279	279	279	A52
0511470-4	PANEL - BAGGAGE COMPARTMENT REAR	978	978	A44	A44	A48	A48	A52	A52	532	279	532	532
0513076-19	COVER-SWITCH (172)	978	978	A44	A44	A48	A48	A52	A52	279	279	279	A52
0513076-20	COVER-SWITCH (F172)	978	978	A44	A44	A48	A48	A52	A52	279	279	279	A52
0513077-2	COVER-LOWER	978	978	A44	A44	A48	A48	A52	A52	279	279	279	A52
0513077-8	COVER-LOWER RH	978	978	A44	A44	A48	A48	A52	A52	279	279	279	A52
0513077-20	COVER-LH	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0513077-21	COVER-LH (OPT.)	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0513077-22	COVER - ENGINE INSTRUMENT	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0513077-26	SPLICE PLATE	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0513077-27	SPLICE PLATE (OPT)	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0513423-2	COVER-RADIO SWITCH PANEL	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0513438-1	DOOR ASSY - MAP CASE	978	978	A44	A44	A48	A48	A52	A52	279	279	279	A52
0514017-3	TRIM-SEAT	532	532	532	532	532	532	532	532	532	532	532	532
0514044-1	RETAINER-REAR SEAT BOTTOM	532	532	532	532	532	532	532	532	532	532	532	532
0514056-1	TRIM-REAR SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0514057-1	TRIM-REAR SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0514057-2	TRIM-REAR SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0514058-1	RETAINER-SEAT BOTTOM	532	532	532	532	532	532	532	532	532	532	532	532
0514064-1	RETAINER-SKYLIGHT	532	532	532	532	532	532	532	532	532	532	532	532
0514065-1	SHIELD-DOORPOST LH	978	978	A44	A44	A48	A48	A52	A52	532	279	532	A52
0514065-2	SHIELD-DOORPOST RH	978	978	A44	A44	A48	A48	A52	A52	532	279	532	A52
0514068-	COVER-SPEAKER	532	532	532	532	532	532	532	532	532	532	532	532
0514069-1	TIARA	532	532	532	532	532	532	532	532	532	532	532	532
0514071-1	COVER-WINDOW LH	532	532	532	532	532	532	532	532	532	532	532	532
0514071-2	COVER-WINDOW RH	532	532	532	532	532	532	532	532	532	532	532	532
0514076-1	TRIM-SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0514076-2	TRIM-SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532

INTERIOR PAINTED OR PLASTIC PARTS

1972 MODEL YEAR

17259904 THRU 17260758 F17200805 THRU F17200904

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)											
		AF	AV	BF	BV	CF	CV	DF	DV	EL	FL	HL	DL
0552132-1	COVER-NOSE CAP WINTERIZATION KIT	279	279	279	279	279	279	279	279	279	279	279	279
0552132-2	COVER-NOSE CAP WINTERIZATION KIT	279	279	279	279	279	279	279	279	279	279	279	279
0700100-193	RETAINER-UPHOLSTERY	970	970	A41	A41	A45	A45	A49	A49	532	156	531	A49
0700148-1	MAP LIGHT HOOD	193	193	193	193	193	193	193	193	193	193	193	193
0711133-62	SHIELD-FRONT DOORPOST RH	532	532	532	532	532	532	532	532	532	532	532	532
0714010-1	SKIRT - SEAT RH	532	532	532	532	532	532	532	532	532	552	532	532
0714010-2	SKIRT - SEAT LH	532	532	532	532	532	532	532	532	532	532	532	532
0717000-12	PANEL-BAGGAGE DOOR	978	978	A44	A44	A48	A48	A59	A59	532	279	532	A52
1470089-14	HOUSING MAP LIGHT	193	193	193	193	193	193	193	193	193	193	193	193

INTERIOR PAINTED OR PLASTIC PARTS
1973 MODEL YEAR

17260759 THRU 17261898 F17200905 THRU F17201034

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)										
		AF	AV	BF	BV	CF	CV	DF	DV	EL	FL	HL
0413484-12	SHIELD - FRONT DOORPOST LH	532	532	532	532	532	532	532	532	532	532	532
0413484-13	SHIELD - FRONT DOORPOST LH	532	532	532	532	532	532	532	532	532	532	532
0413531-4	COVER - RADIO CUTOUT	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0413532-2	TRIM - RADIO COVER	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0414013-9	COVER - INSTRUMENT LIGHT	532	532	532	532	532	532	532	532	532	532	532
0414013-7	SHIELD - INSTRUMENT LIGHT	532	532	532	532	532	532	532	532	532	532	532
0500210-42	PANEL - BAGGAGE COMPARTMENT REAR	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0500210-44	COVER - CENTER POST	532	532	532	532	532	532	532	532	532	532	532
0500210-95	COVER - BAGGAGE DOOR FRAME FWD	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0500210-96	COVER - BAGGAGE DOOR FRAME AFT	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0500210-97	PANEL - BAGGAGE	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0500210-108	COVER - COWL DECK	825	825	825	825	825	825	825	825	825	825	825
0500210-132	COVER - REAR WINDOW	532	532	532	532	532	532	532	532	532	532	532
0500210-135	MOULDING - REAR WINDOW	532	532	532	532	532	532	532	532	532	532	532
0500230-2	SHELF - BAGGAGE	970	970	A81	A81	A89	A89	A85	A85	531	156	531
0500233-1	COVER - CONSOLE	978	978	A80	A80	A88	A88	A84	A84	279	279	279
0500403-1	COVER - CONTROL YOKE	978	978	A80	A80	A88	A88	A84	A84	279	279	279
0511470-4	PANEL - BAGGAGE COMPARTMENT REAR	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0513076-19	COVER - SWITCH (172)	978	978	A80	A80	A88	A88	A84	A84	279	279	279
0513077-2	COVER - LOWER	978	978	A80	A80	A88	A88	A84	A84	279	279	279
0513077-8	COVER - LOWER RH	978	978	A80	A80	A88	A88	A84	A84	279	279	279
0513438-1	COVER - MAP CASE DOOR	978	978	A80	A80	A88	A88	A84	A84	279	279	279
0513445-1	COVER - ENGINE INSTRUMENT	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0513445-5	COVER - LH	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0513445-9	SPLICE PLATE	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0513445-10	SPLICE PLATE (OPT.)	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0513446-1	COVER - RADIO SWITCH PANEL	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0514017-3	TRIM - SEAT	532	532	532	532	532	532	532	532	532	532	532
0514044-1	RETAINER - REAR SEAT BOTTOM	532	532	532	532	532	532	532	532	532	532	532
0514056-1	TRIM - REAR SEAT BACK	532	532	532	532	532	532	532	532	532	532	532
0514057-1	TRIM - REAR SEAT BACK	532	532	532	532	532	532	532	532	532	532	532
0514057-2	TRIM - REAR SEAT BACK	532	532	532	532	532	532	532	532	532	532	532
0514058-1	RETAINER - SEAT BOTTOM	532	532	532	532	532	532	532	532	532	532	532
0514064-1	RETAINER - SKYLIGHT	532	532	532	532	532	532	532	532	532	532	532
0514065-1	SHIELD - DOORPOST LH	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0514065-2	SHIELD - DOORPOST RH	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0514068-2	COVER - SPEAKER	532	532	532	532	532	532	532	532	532	532	532
0514069-1	TIARA	532	532	532	532	532	532	532	532	532	532	532
0514071-1	COVER - WINDOW LH	532	532	532	532	532	532	532	532	532	532	532
0514071-2	COVER - WINDOW RH	532	532	532	532	532	532	532	532	532	532	532
0514076-1	TRIM - SEAT BACK	532	532	532	532	532	532	532	532	532	532	532
0514083-1	TRIM - SEAT BACK	532	532	532	532	532	532	532	532	532	532	532

INTERIOR PAINTED OR PLASTIC PARTS
1973 MODEL YEAR

17260759 THRU 17261898 F17200905 THRU F17201034

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)										
		AF	AV	BF	BV	CF	CV	DF	DV	EL	FL	HL
0552132-1	COVER - NOSE CAP WINTERIZATION KIT	279	279	279	279	279	279	279	279	279	279	279
0552132-2	COVER - NOSE CAP WINTERIZATION KIT	279	279	279	279	279	279	279	279	279	279	279
0700100-193	RETAINER - UPHOLSTERY	970	970	A81	A81	A89	A89	A85	A85	532	156	531
0700148-1	MAP LIGHT HOOD	193	193	193	193	193	193	193	193	193	193	193
0711133-66	SHIELD - FRONT DOORPOST RH	532	532	532	532	532	532	532	532	532	532	532
0714010-1	SKIRT - SEAT LH	532	532	532	532	532	532	532	532	532	532	532
0714010-2	SKIRT - SEAT RH	532	532	532	532	532	532	532	532	532	532	532
0717000-12	PANEL - BAGGAGE DOOR	978	978	A80	A80	A88	A88	A84	A84	532	279	532
1470089-14	HOUSING MAP LIGHT	193	193	193	193	193	193	193	193	193	193	193

INTERIOR PAINTED OR PLASTIC PARTS

1974 MODEL YEAR

17261899 THRU 17263458 F17201035 THRU F17201234

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate) AF AL AV	BF BV	CF CV	DF DV	GF GL GV	EL	FL
0413484-12	SHIELD - FRONT DOORPOST LH	532	532	532	532	532	532	532
0413484-13	SHIELD - FRONT DOORPOST LH	532	532	532	532	532	532	532
0413531-31	COVER - RADIO	A59	A59	A59	A59	A59	A59	A59
0413531-59	COVER - RADIO	A59	A59	A59	A59	A59	A59	A59
0414013-7	SHIELD - INSTRUMENT LIGHT	532	532	532	532	532	532	532
0414013-9	COVER - INSTRUMENT LIGHT	532	532	532	532	532	532	532
0500210-44	COVER - CENTER POST	532	532	532	532	532	532	532
0500210-95	COVER - BAGGAGE DOOR FRAME FWD	B40	B28	B32	B36	B24	532	279
0500210-97	PANEL - BAGGAGE	B40	B28	B32	B36	B24	532	279
0500210-108	COVER - COWL DECK	825	825	825	825	825	825	825
0500210-135	MOULDING - READ WINDOW	532	532	532	532	532	532	532
0500233-4	COVER - CONSOLE	B40	B28	B32	B36	B24	532	279
0500403-1	COVER - CONTROL YOKE	B40	B28	B32	B36	B24	532	279
0513076-34	COVER ASSY - SWITCH PANEL	B40	B28	B32	B36	B24	532	279
0513077-8	COVER - LOWER RH	B40	B28	B32	B36	B24	532	279
0513077-28	COVER - INSTRUMENT PANEL LWR LH	B40	B28	B32	B36	B24	532	279
0513438-1	COVER - MAP CASE DOOR	B40	B28	B32	B36	B24	532	279
0513445-13	COVER ASSY - SHOCK PANEL	A59	A59	A59	A59	A59	A59	A59
0513445-22	COVER ASSY - RH INSTRUMENT PANEL	A59	A59	A59	A59	A59	A59	A59
0513445-23	SPLICE PLATE	A59	A59	A59	A59	A59	A59	A59
0513445-24	SPLICE PLATE (OPT)	A59	A59	A59	A59	A59	A59	A59
0513446-2	COVER - RADIO SWITCH PANEL	A59	A59	A59	A59	A59	A59	A59
0513446-4	COVER - RADIO SWITCH PANEL	A59	A59	A59	A59	A59	A59	A59
0514017-3	TRIM - SEAT	532	532	532	532	532	532	532
0514044-1	RETAINER - REAR SEAT BOTTOM	532	532	532	532	532	532	532
0514056-1	TRIM - REAR SEAT BACK	532	532	532	532	532	532	532
0514057-1	TRIM - REAR SEAT BACK	532	532	532	532	532	532	532
0514057-2	TRIM - REAR SEAT BACK	532	532	532	532	532	532	532
0514058-1	RETAINER - SEAT BOTTOM	532	532	532	532	532	532	532
0514064-1	RETAINER - SKYLIGHT	532	532	532	532	532	532	532
0514065-1	SHIELD - DOORPOST LH	532	532	532	532	532	532	532
0514065-2	SHIELD - DOORPOST RH	532	532	532	532	532	532	532
0514068-2	COVER - SPEAKER	532	532	532	532	532	532	532
0514069-1	TIARA	532	532	532	532	532	532	532
0514071-1	COVER - WINDOW LH	532	532	532	532	532	532	532
0514071-2	COVER - WINDOW RH	532	532	532	532	532	532	532
0514076-1	TRIM - SEAT BACK	532	532	532	532	532	532	532
0514083-1	TRIM - SEAT BACK	532	532	532	532	532	532	532
0515009-1	COVER ASSY - EMERGENCY LOCATOR TRANSMITTER	B40	B28	B32	B36	B24	532	279
0515010-10	TRAY - FWD SHOULDER HARNESS	532	532	532	532	532	532	532
0515012-1	PANEL - BAGGAGE COMPARTMENT LWR FWD	B40	B28	B32	B36	B24	532	279
0515012-2	MOULDING - BAGGAGE COMPARTMENT	B40	B28	B32	B36	B24	532	279
0515014-1	COVER - REAR WINDOW	532	532	532	532	532	532	532
0515015-1	PANEL - BAGGAGE COMPARTMENT UPPER	B40	B28	B32	B36	B24	532	279
0515018-1	COVER - BAGGAGE DOOR FRAME AFT	B40	B28	B32	B36	279	B24	532
0515019-3	PANEL - BAGGAGE COMPARTMENT UPPER AFT	B40	B28	B32	B36	B24	532	279

INTERIOR PAINTED OR PLASTIC PARTS

1974 MODEL YEAR

17261899 THRU 17263458 F17201035 THRU F17201234

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)						
		AF AL AV	BF BV	CF CV	DF DV	GF GL GV	EL	FL
0700148-1	MAPLIGHT HOOD	193	193	193	193	193	193	193
0711133-66	SHIELD - FRONT DOORPOST RH	532	532	532	532	532	532	532
0714010-1	SKIRT - SEAT LH	532	532	532	532	532	532	532
0714010-2	SKIRT - SEAT RH	532	532	532	532	532	532	532
0717000-12	PANEL - BAGGAGE DOOR	B40	B28	B32	B36	B24	532	279
1470089-14	HOUSING - MAPLIGHT	193	193	193	193	193	193	193

This page intentionally left blank.

ALPHABETICAL INDEX

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
A	
ACCESSORY KITS-SEE ACCESSORY KIT CATALOG	
ACTUATOR FLAP	159
ACTUATOR SEAT BACK	91
ADAPTER FUEL TANK	16
ADAPTER FUEL TANK	17
ADAPTER OIL FILTER	163
ADAPTER OIL FILTER	164
ADAPTER OIL FILTER WRENCH	163
ADAPTER OIL TEMPERATURE	125
ADAPTER OIL TEMPERATURE	126
ADAPTER OIL TEMPERATURE GAGE	125
ADAPTOR OIL TEMPERATURE	123
ADHESIVE GASKET	1
AFT CARPET	84
AFT CARPET	85
AFT SECTION FUSELAGE	49
AFT SECTION SKIN	52
AILERON	19
AILERON BALANCE WEIGHT	19
AILERON BELLCRANK	19
AILERON BELLCRANK	149
AILERON BELLCRANK	150
AILERON CABLE	149
AILERON CABLE	150
AILERON CABLE	151
AILERON CARRY THRU BAR	149
AILERON CARRY THRU TUBE	149
AILERON CHAIN SPROCKET	147
AILERON CONTROL SYSTEM	149
AILERON CONTROL SYSTEM	150
AILERON HINGE	19
AILERON PULLEY BRACKET	6
AILERON PULLEY BRACKET	8
AILERON PULLEY BRACKET	46
AILERON PULLEY BRACKET	47
AILERON PUSH PULL ROD	19
AILERON PUSH PULL ROD	149
AILERON PUSH PULL ROD	150
AILERON RIB	19
AILERON SERVO	151
AIR BOX	126
AIR FILTER	121
AIR FILTER	123
AIR FILTER	178
AIR FILTER	179
AIR FILTER	182
AIR FILTER	183
AIR FILTER	184
AIR FILTER	185
AIR INLET	31
AIR OUTLET CAP	138
AIR OUTLET CAP	139
AIR SCOOP	11
AIR SCOOP	115
AIR SCOOP	116
AIR SCOOP	117
AIR SCOOP	118
AIR SCOOP	119
AIR SCOOP	120
AIR SCOOP	121
AIR SPEED INDICATOR	103
AIR SPEED INDICATOR	104
AIR TEMPERATURE GAGE CARBURETOR	186
AIR VENT	139
AIR VENT OUTSIDE	138
AIR VENT OUTSIDE	139
AIRBOX	123
AIRBOX	125

NOMENCLATURE	FIGURE
A (Cont)	
AIRBOX FILTER	125
AIRSPEED INDICATOR	101
AIRSPEED INDICATOR	102
AIRSPEED INDICATOR	103
AIRSPEED INDICATOR	104
AIRSPEED INDICATOR	105
AIRSPEED INDICATOR	106
AIRSPEED INDICATOR	161
AIRSPEED INDICATOR TRUE	102
AIRSPEED INDICATOR TRUE	103
AIRSPEED INDICATOR TRUE	104
AIRSPEED INDICATOR TRUE	105
AIRSPEED INDICATOR TRUE	106
ALTERNATE STATIC SOURCE PLACARD	2
ALTERNATE STATIC SOURCE PLACARD	3
ALTERNATOR	127
ALTERNATOR	128
ALTERNATOR	191
ALTERNATOR	203
ALTERNATOR BELT	123
ALTERNATOR BELT	191
ALTERNATOR DRIVE	127
ALTERNATOR DRIVE	203
ALTIMETER	101
ALTIMETER	102
ALTIMETER	103
ALTIMETER	104
ALTIMETER	105
ALTIMETER	161
ALTIMETER SENSITIVE	103
ALTIMETER SENSITIVE	104
ALTIMETER SENSITIVE	105
AMMETER	101
AMMETER	102
AMMETER	103
AMMETER	104
AMMETER	105
AMMETER	106
ARMREST	72
ARMREST	73
ARMREST	74
ARMREST	75
ARMREST	76
ARMREST	84
ARMREST	85
ARMREST BRACKET	49
ARMREST BRACKET	75
ARMREST BRACKET	76
ASH RECEIVER	87
ASH RECEIVER	88
ASH RECEIVER	90
ASH RECEIVER	91
ASH RECEIVER	93
ASH RECEIVER SEAT BACK	87
ASH RECEIVER SEAT BACK	88
ASH RECEIVER SEAT BACK	90
ASH TRAY	84
ASH TRAY	85
ASSIST HANDLE	110
ASSIST STRAP	82
ASSIST STRAP	83
ATTITUDE GYRO	183
AUTO PILOT-NAVOMATIC SEE ELECTRONICS MANUAL	
AUXILIARY FUEL GAGE	102
AUXILIARY FUEL GAGE	104
AUXILIARY FUEL GAGE	172
AUXILIARY FUEL TANK	172
AUXILIARY SEAT	97

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
A (Cont)	
AUXILIARY SEAT	93
AXLE	67
AXLE	68
AXLE BOLT BUCKET	56
AXLE BOLT FERRULE	55
AXLE MAIN LANDING GEAR	67
AXLE MAIN LANDING GEAR	68
AXLE NOSE WHEEL SPACER	55
AXLE SPACER	55
AXLE SPACER	56
B	
BAFFLE INTER CYLINDER	.133
BAFFLE INTER CYLINDER	.136
BAFFLE SEAL	.134
BAFFLE SEAL	.135
BAFFLES ENGINE	.134
BAFFLES ENGINE	.135
BAGGAGE COMPARTMENT PANEL	84
BAGGAGE COMPARTMENT PANEL	85
BAGGAGE DOOR	49
BAGGAGE DOOR	80
BAGGAGE DOOR	81
BAGGAGE DOOR HANDLE	84
BAGGAGE DOOR HANDLE	85
BAGGAGE DOOR HINGE	80
BAGGAGE DOOR HINGE	81
BAGGAGE DOOR JAMB	49
BAGGAGE DOOR LATCH	80
BAGGAGE DOOR LATCH	81
BAGGAGE DOOR LATCH PLATE	80
BAGGAGE DOOR LATCH PLATE	81
BAGGAGE DOOR PANEL	84
BAGGAGE DOOR STOP	49
BAGGAGE LOAD LIMIT PLACARD	84
BAGGAGE NET	84
BAGGAGE NET	85
BAGGAGE PLACARD	2
BAGGAGE PLACARD	3
BAGGAGE PLACARD	84
BAGGAGE PLACARD	85
BAGGAGE PLACARD	.172
BAGGAGE SHELF	82
BAGGAGE SHELF	83
BARREL SHIMMY DAMPENER	64
BARREL SHIMMY DAMPENER	65
BARREL SHIMMY DAMPENER	66
BARREL TURNBUCKLE	.149
BARREL TURNBUCKLE	.150
BARREL TURNBUCKLE	.154
BATTERY	.192
BATTERY BOX	53
BATTERY BOX	54
BATTERY BOX BASE	54
BATTERY BOX LID	53
BATTERY CABLE	.191
BATTERY CABLE	.192
BATTERY CONTACTOR	.191
BATTERY GROUND STRAP	.190
BATTERY GROUND STRAP	.191
BATTERY GROUND STRAP	.192
BATTERY KIT	.190
BATTERY KIT	.191
BATTERY KIT	.192
BEACON LIGHT FLASHER	.201

NOMENCLATURE	FIGURE
B (Cont)	
BEACON LIGHT FLASHING	.201
BEACON ROTATING	.200
BELLCRANK AILERON	19
BELLCRANK AILERON	.149
BELLCRANK AILERON	.150
BELLCRANK ELEVATOR	35
BELLCRANK ELEVATOR	.154
BELLCRANK ELEVATOR	.155
BELT ALTERNATOR	.123
BELT ALTERNATOR	.191
BELT EXTENSION	.109
BELT FRONT SEAT	87
BELT FRONT SEAT SAFETY	.108
BELT REAR SEAT	95
BELT REAR SEAT	.108
BELT SEAT	88
BLAST TUBE	.125
BLAST TUBE	.133
BLAST TUBE	.187
BLAST TUBE GENERATOR	.136
BLAST TUBE SUPPORT	.203
BLOCK FUSELAGE SPAR	34
BLOCK FUSELAGE SPAR	35
BOARD DIODE	.190
BOARD DIODE	.191
BOARD DIODE	.205
BONDING STRAP	.125
BONDING STRAP ENGINE MOUNT	.125
BOOT STEERING LINK	31
BOOT STEERING LINK	32
BOOT STEERING LINK	33
BOTTOM REAR SEAT	95
BOWL FUEL STRAINER	.169
BOWL FUEL STRAINER	.170
BOX AIR	.126
BOX BATTERY	53
BOX BATTERY	54
BOX MAP	.107
BRACE EXHAUST STACK	.125
BRAKE	69
BRAKE	70
BRAKE	71
BRAKE & RUDDER PEDAL	.145
BRAKE CYLINDER	.145
BRAKE CYLINDER BRACKET	.145
BRAKE DISC	69
BRAKE DISC	70
BRAKE HOUSING	69
BRAKE HOUSING	.142
BRAKE HOUSING	.143
BRAKE HOUSING	.144
BRAKE LINE	67
BRAKE LINE	68
BRAKE LINE	.142
BRAKE LINE	.143
BRAKE LINE	.144
BRAKE LINING	69
BRAKE LINING	71
BRAKE PARKING	.142
BRAKE PARKING	.143
BRAKE PARKING	.144
BRAKE PEDAL	.145
BRAKE SYSTEM	.142
BRAKE SYSTEM	.143
BRAKE SYSTEM	.144
BREAKER CIGAR LIGHTER CIRCUIT	.103
BREAKER CIGAR LIGHTER CIRCUIT	.104
BREAKER CIGAR LIGHTER CIRCUIT	.105

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
B (Cont)	
BREAKER CIGAR LIGHTER CIRCUIT	.106
BREATHER LINE	.125
BREATHER LINE	.126
BREATHER TUBE INSULATION	.123
BREATHER TUBE INSULATION	.137
BULB	4
BULB	.101
BULB	.200
BULB ALSO SEE LIGHTS	
BULB WING POSITION LIGHT	4
BULK ITEMS-LIST OF	1
BULKHEAD FRONT DOORPOST	34
BULKHEAD FRONT DOORPOST	35
BULKHEAD LANDING GEAR	46
BULKHEAD LANDING GEAR	47
BULKHEAD TUNNEL AFT	28
BUTTON STATIC SOURCE	33
BUTTON STATIC SOURCE	.161
C	
CABIN AIR CONTROL	99
CABIN AIR CONTROL	.100
CABIN AIR CONTROL	.102
CABIN AIR CONTROL	.103
CABIN AIR CONTROL	.104
CABIN AIR CONTROL	.105
CABIN AIR CONTROL	.106
CABIN AIR CONTROL	.138
CABIN AIR VENT ELBOW	.138
CABIN AIR VENT ELBOW	.139
CABIN AIR VENT SCOOP	10
CABIN DOOR LH	72
CABIN DOOR LH	73
CABIN DOOR RH	74
CABIN DOOR RH	75
CABIN DOOR RH	76
CABIN DOOR STRUCTURE	72
CABIN DOOR STRUCTURE	73
CABIN DOOR STRUCTURE	74
CABIN DOOR STRUCTURE	75
CABIN DOOR STRUCTURE	76
CABIN HEAT CONTROL	99
CABIN HEAT CONTROL	.100
CABIN HEAT CONTROL	.102
CABIN HEAT CONTROL	.103
CABIN HEAT CONTROL	.104
CABIN HEAT CONTROL	.105
CABIN HEAT CONTROL	.106
CABIN HEAT CONTROL	.122
CABIN HEAT CONTROL	.140
CABIN HEAT CONTROL	.141
CABIN HEATING	.140
CABIN HEATING	.141
CABIN HEATING & DEFROSTING SYSTEM	.140
CABIN HEATING & DEFROSTING SYSTEM	.141
CABIN TOP	28
CABIN TOP	29
CABIN TOP	30
CABIN TOP & FIREWALL UPHOLSTERY	82
CABIN TOP & FIREWALL UPHOLSTERY	83
CABIN TOP UPHOLSTERY	82
CABIN TOP UPHOLSTERY	83
CABIN UPHOLSTERY	84
CABIN UPHOLSTERY	85
CABIN VENTILATION SYSTEM	.138

NOMENCLATURE	FIGURE
C (Cont)	
CABIN VENTILATION SYSTEM	.139
CABLES-CONTROL-SEE APPLICABLE SYSTEM	
CAM DOOR LOCK	73
CAM SEAT BACK	91
CAM SEAT BACK	95
CAP AIR OUTLET	.138
CAP AIR OUTLET	.139
CAP FUEL	5
CAP FUEL TANK	16
CAP FUEL TANK	17
CAP GAS	.172
CAP HUB	55
CAP LOWER NOSE	.115
CAP LOWER NOSE	.116
CAP LOWER NOSE	.119
CAP LOWER NOSE	.120
CAP LOWER NOSE	.121
CAP NOSE	.118
CAP NOSE	.121
CAP NOSE GEAR HUB	55
CAP UPPER NOSE	.116
CAP UPPER NOSE	.117
CAP UPPER NOSE	.119
CAP UPPER NOSE	.120
CARBURETOR	.127
CARBURETOR	.128
CARBURETOR	.186
CARBURETOR AIR FILTER	.115
CARBURETOR AIR FILTER	.116
CARBURETOR AIR FILTER	.117
CARBURETOR AIR FILTER	.118
CARBURETOR AIR FILTER	.119
CARBURETOR AIR FILTER	.120
CARBURETOR AIR FILTER	.126
CARBURETOR AIR FILTER	.127
CARBURETOR AIR FILTER SEAL	.123
CARBURETOR AIR FILTER SEAL	.125
CARBURETOR AIR INTAKE FILTER	.115
CARBURETOR AIR INTAKE FILTER	.116
CARBURETOR AIR INTAKE FILTER	.117
CARBURETOR AIR INTAKE FILTER	.118
CARBURETOR AIR INTAKE FILTER	.119
CARBURETOR AIR INTAKE FILTER	.120
CARBURETOR AIR TEMPERATURE GAGE	.101
CARBURETOR AIR TEMPERATURE GAGE	.102
CARBURETOR AIR TEMPERATURE GAGE	.103
CARBURETOR AIR TEMPERATURE GAGE	.104
CARBURETOR AIR TEMPERATURE GAGE	.105
CARBURETOR AIR TEMPERATURE GAGE	.106
CARBURETOR AIR TEMPERATURE GAGE	.186
CARBURETOR HEAT CONTROL	99
CARBURETOR HEAT CONTROL	.100
CARBURETOR HEAT CONTROL	.102
CARBURETOR HEAT CONTROL	.103
CARBURETOR HEAT CONTROL	.104
CARBURETOR HEAT CONTROL	.105
CARBURETOR HEAT CONTROL	.106
CARBURETOR HEAT CONTROL	.122
CARBURETOR HEAT CONTROL	.124
CARBURETOR MIXTURE CONTROL	.124
CARBURETOR TO STRAINER HOSE	.125
CARBURETOR TO STRAINER HOSE	.126
CARD COMPASS	.101
CARD COMPASS	.102
CARGO TIE DOWN EYEBOLT	.108
CARGO TIE DOWN SLIDE	.108
CARPET	84
CARPET	85

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
C (Cont)	
CARPET AFT	84
CARPET AFT	85
CARPET FLOORBOARD	84
CARPET FORWARD	84
CARPET FORWARD	85
CARPET TUNNEL	84
CARPET TUNNEL	85
CASE MAP	.107
CATALOG-HOW TO USE SEE INTRODUCTION	
CATCH MAGNETIC	.107
CENTER SECTION FLOORBOARD	30
CENTER SECTION SPAR	44
CENTER SECTION SPAR	45
CESSNA NAMEPLATE	2
CESSNA PLACARD	2
CESSNA PLACARD	3
CESSNA PLACARD	.200
CHAIN TAB CONTROL	.156
CHAIN TAB CONTROL	.157
CHARGE INDICATOR LIGHT	.102
CHECK LIST PILOTS	3
CHECK VALVE	.172
CIGAR LIGHTER	99
CIGAR LIGHTER	.100
CIGAR LIGHTER	.102
CIGAR LIGHTER	.103
CIGAR LIGHTER	.104
CIGAR LIGHTER	.105
CIGAR LIGHTER	.106
CIGAR LIGHTER KNOB	.102
CIGAR LIGHTER KNOB	.103
CIGAR LIGHTER KNOB	.104
CIGAR LIGHTER KNOB	.105
CIGAR LIGHTER KNOB	.106
CIRCUIT BREAKER	99
CIRCUIT BREAKER	.100
CIRCUIT BREAKER	.102
CIRCUIT BREAKER	.103
CIRCUIT BREAKER	.104
CIRCUIT BREAKER	.105
CIRCUIT BREAKER	.106
CIRCUIT BREAKER	.161
CIRCUIT BREAKER	.190
CIRCUIT BREAKER	.200
CIRCUIT BREAKER	.201
CIRCUIT BREAKER CIGAR LIGHTER	.103
CIRCUIT BREAKER CIGAR LIGHTER	.104
CIRCUIT BREAKER CIGAR LIGHTER	.105
CIRCUIT BREAKER CIGAR LIGHTER	.106
CLIP DOOR HANDLE	72
CLIP DOOR HANDLE	73
CLIP DOOR HANDLE	74
CLIP DOOR HANDLE	75
CLIP DOOR HANDLE	76
CLIP UPHOLSTERY	72
CLIP UPHOLSTERY	73
CLIP UPHOLSTERY	74
CLIP UPHOLSTERY	75
CLIP UPHOLSTERY	76
CLOCK	.101
CLOCK ELECTRIC	.101
CLOCK ELECTRIC	.102
CLOCK ELECTRIC	.103
CLOCK ELECTRIC	.104
CLOCK ELECTRIC	.105
CLOCK ELECTRIC	.106
CLOCK FUSE	.190
CLOCK FUSE	.191

NOMENCLATURE	FIGURE
C (Cont)	
CLUSTER INSTRUMENT	.104
CLUSTER INSTRUMENT	.105
CLUSTER INSTRUMENT	.106
CLUTCH ROTARY	49
CO PILOT SEAT	91
COLOR CHART-PAINT SEE PAGE iii	
COMPASS	.108
COMPASS BRACKET	32
COMPASS BRACKET	33
COMPASS CARD	.101
COMPASS CARD	.102
COMPASS CARD COVER	.101
COMPASS CARD COVER	.102
COMPASS CARD RETAINER	.101
COMPASS CARD RETAINER	.102
COMPASS CORRECTION PLACARD	2
COMPASS CORRECTION PLACARD	3
COMPASS CORRECTION PLACARD	.103
COMPASS CORRECTION PLACARD	.104
COMPASS CORRECTION PLACARD	.105
COMPASS CORRECTION PLACARD	.106
COMPASS MOUNTING BRACKET	31
COMPONENTS & ACCESSORIES ENGINE	.127
COMPONENTS ENGINE	.127
COMPONENTS ENGINE	.128
COMPONENTS FRONT SECTION TUNNEL	37
CONSOLE COVER	84
CONSOLE COVER	85
CONSOLE STRUCTURE	38
CONTACTOR	.190
CONTACTOR BATTERY	.191
CONTACTOR EXTERNAL POWER	.191
CONTACTOR MASTER SOLENOID	.192
CONTACTOR STARTER	.127
CONTACTOR STARTER	.190
CONTACTOR STARTER	.191
CONTINENTAL ENGINE	.122
CONTINENTAL ENGINE	.125
CONTINENTAL ENGINE	.126
CONTROL CABLES-SEE INDIVIDUAL SYSTEM	
CONTROL SYSTEMS-SEE INDIVIDUAL SYSTEMS	
CONTROL WHEEL SEE WHEEL-CONTROL	
CONTROL-PUSHPULL-SEE ENGINE INSTL	
CONTROL-PUSHPULL-SEE INSTRUMENT PANEL	
COOLER OIL	.123
COOLER OIL	.187
COORDINATOR TURN	.103
COORDINATOR TURN	.104
COORDINATOR TURN	.105
CORD TOW HOOK	.108
COURTESY LIGHT	.199
COURTESY LIGHT SHIELD	.199
COWL DECK COVER	82
COWL DECK COVER	83
COWL DOOR	.117
COWL DOOR	.118
COWL DOOR	.119
COWL ENGINE	.115
COWL ENGINE	.116
COWL ENGINE	.117
COWL ENGINE	.118
COWL ENGINE	.119
COWL ENGINE	.120
COWL ENGINE	.121
COWL FLAP	.121
COWL FLAP CONTROL BRACKET	.121
COWL FLAPS CONTROL	.100
COWL FLAPS CONTROL	.124

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE

C (Cont)

COWL LOWER	.115
COWL LOWER	.116
COWL LOWER	.117
COWL LOWER	.119
COWL LOWER	.120
COWL LOWER	.121
COWL UPPER	.115
COWL UPPER	.116
COWL UPPER	.117
COWL UPPER	.119
COWL UPPER	.120
COWL UPPER	.121
CUP FUEL SAMPLER	18
CUP HOLDER	.108
CYLINDER BRAKE	.145
CYLINDER HEAD TEMP GAGE	.100
CYLINDER HEAD TEMPERATURE GAGE	.101
CYLINDER MASTER BRAKE	.146

D

DAMPENER SHIMMY	64
DAMPENER SHIMMY	65
DAMPENER SHIMMY	66
DEADENER SOUND	1
DECAL TAB POSITION INDICATOR	.156
DECALS-SEE PLACARDS	
DECK SKIN	33
DEFLECTOR	.136
DEFROSTER NOZZLE	.141
DETECTOR NAV LIGHT	4
DIMMING TRANSISTORIZED LIGHT	.191
DIODE	.104
DIODE	.190
DIODE	.191
DIODE BOARD	.190
DIODE BOARD	.191
DIODE BOARD	.205
DIODE MASTER SWITCH	.105
DIRECTIONAL GYRO	.101
DIRECTIONAL GYRO	.102
DIRECTIONAL GYRO	.103
DIRECTIONAL GYRO	.104
DIRECTIONAL GYRO	.105
DIRECTIONAL GYRO	.106
DIRECTIONAL GYRO	.176
DIRECTIONAL GYRO	.177
DIRECTIONAL GYRO	.178
DIRECTIONAL GYRO	.179
DIRECTIONAL GYRO	.180
DIRECTIONAL GYRO	.181
DIRECTIONAL GYRO	.182
DIRECTIONAL GYRO	.183
DIRECTIONAL GYRO	.184
DIRECTIONAL GYRO	.185
DISC BRAKE	69
DISC BRAKE	70
DISTRIBUTOR PRIMER	.174
DOME LIGHT SWITCH	.194
DOME LIGHT SWITCH	.195
DOME SPINNER	.112
DOOR BAGGAGE	49
DOOR BAGGAGE	80
DOOR BAGGAGE	81
DOOR CATCH STOP	6
DOOR CATCH STOP	8

NOMENCLATURE	FIGURE

D (Cont)

DOOR COWL	.117
DOOR COWL	.118
DOOR COWL	.119
DOOR FRAME	28
DOOR FRAME	29
DOOR FRAME	30
DOOR GROUND SERVICE PLUG	.205
DOOR HANDLE	73
DOOR HANDLE	74
DOOR HANDLE	75
DOOR HANDLE	76
DOOR HANDLE CLIP	72
DOOR HANDLE CLIP	73
DOOR HANDLE CLIP	74
DOOR HANDLE CLIP	75
DOOR HANDLE CLIP	76
DOOR HANDLE ESCUTCHEON	72
DOOR HANDLE ESCUTCHEON	73
DOOR HANDLE ESCUTCHEON	74
DOOR HANDLE PLACARD	2
DOOR HANDLE PLACARD	3
DOOR HANDLE PLACARD	73
DOOR HANDLE PLACARD	75
DOOR HANDLE PLACARD	76
DOOR HINGE	72
DOOR HINGE	73
DOOR HINGE	74
DOOR HINGE	75
DOOR HINGE	76
DOOR LATCH	55
DOOR LATCH	68
DOOR LATCH	72
DOOR LATCH	73
DOOR LATCH	74
DOOR LATCH	75
DOOR LATCH	77
DOOR LATCH	78
DOOR LATCH	.118
DOOR LATCH	.119
DOOR LATCH	.120
DOOR LATCH BRACKET	77
DOOR LATCH HANDLE	78
DOOR LH CABIN	72
DOOR LH CABIN	73
DOOR LOCK	72
DOOR LOCK	73
DOOR LOCK	80
DOOR LOCK	81
DOOR MAP CASE	.107
DOOR OUTSIDE AIR	31
DOOR OUTSIDE AIR	32
DOOR OUTSIDE AIR	33
DOOR RH CABIN	74
DOOR RH CABIN	75
DOOR RH CABIN	76
DOOR SIDE AIR VENT	.138
DOOR SIDE AIR VENT	.139
DOOR SILL	28
DOOR SILL	29
DOOR SILL	30
DOOR UPPER COWL	.119
DOOR UPPER COWL	.120
DOOR WINDOW	72
DOOR WINDOW	73
DOOR WINDOW	76
DOORPOST	34
DOORPOST	35
DOORPOST SHIELD	83

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
D (Cont)	
DORSAL	49
DORSAL FIN	50
DOWEL HUB ALIGNMENT	.114
DRAIN VALVE	.169
DRAIN VALVE	.172
DRIVE ALTERNATOR	.127
DRIVE ALTERNATOR	.203
DUAL BRAKE HUB	.145
DUCT HEATER	39
DUCT HEATER	40
DUCT HEATER	41
DUCT HEATER	42
E	
ELBOW CABIN AIR VENT	.138
ELBOW CABIN AIR VENT	.139
ELECTRIC CLOCK	.101
ELECTRIC CLOCK	.102
ELECTRIC CLOCK	.103
ELECTRIC CLOCK	.104
ELECTRIC CLOCK	.105
ELECTRIC CLOCK	.106
ELECTRIC CLOCK FUSEHOLDER	.192
ELECTRICAL EQUIPMENT	.190
ELECTRICAL EQUIPMENT	.191
ELECTRICAL EQUIPMENT FUSELAGE	.192
ELECTRONIC EQUIPMENT-SEE ELECTRONICS MANUAL	
ELEMENT FILTER	.178
ELEMENT FILTER	.179
ELEMENT FILTER	.182
ELEMENT FILTER	.183
ELEMENT FILTER	.184
ELEMENT FILTER	.185
ELEMENT KIT FILTER	.163
ELEMENT KIT FILTER	.164
ELEMENT KIT FILTER	.187
ELEVATOR	26
ELEVATOR BALANCE WEIGHT	26
ELEVATOR BELLCRANK	35
ELEVATOR BELLCRANK	.154
ELEVATOR BELLCRANK	.155
ELEVATOR BELLCRANK BRACKET	34
ELEVATOR CABLE	.154
ELEVATOR CABLE	.155
ELEVATOR CONTROL SYSTEM	.154
ELEVATOR CONTROL SYSTEM	.155
ELEVATOR TAB STOP BLOCK	.156
ELEVATOR TAB STOP BLOCK	.157
ELEVATOR TIP	26
ELEVATOR TRIM CONTROL	.156
ELEVATOR TRIM CONTROL	.157
ELEVATOR TRIM CONTROL SYSTEM	.156
ELEVATOR TRIM CONTROL SYSTEM	.157
ELEVATOR TRIM INDICATOR	.157
ELEVATOR TRIM SUPPORT	38
ELEVATOR TRIM TAB	25
ELEVATOR TRIM TAB ACTUATOR	25
ENGINE	.123
ENGINE	.124
ENGINE	.125
ENGINE	.126
ENGINE BAFFLE	.133
ENGINE BAFFLE	.136
ENGINE BAFFLES	.134
ENGINE BAFFLES	.135

NOMENCLATURE	FIGURE
E (Cont)	
ENGINE COMPONENTS	.127
ENGINE COMPONENTS	.128
ENGINE COMPONENTS & ACCESSORIES	.127
ENGINE CONTINENTAL	.122
ENGINE CONTINENTAL	.125
ENGINE CONTINENTAL	.126
ENGINE COWL	.115
ENGINE COWL	.116
ENGINE COWL	.117
ENGINE COWL	.118
ENGINE COWL	.119
ENGINE COWL	.120
ENGINE COWL	.121
ENGINE MOUNT	39
ENGINE MOUNT	40
ENGINE MOUNT	42
ENGINE MOUNT	.123
ENGINE MOUNT	.125
ENGINE MOUNT	.126
ENGINE MOUNT BRACKET	31
ENGINE MOUNT BRACKET	.169
ENGINE MOUNT STRINGER	31
ENGINE MOUNT STRINGER	32
ENGINE MOUNT STRINGER	33
ENGINE OIL PLACARD	2
ENGINE OIL PLACARD	3
ENGINE PRIMER	.105
ENGINE PRIMER	.165
ENGINE PRIMER	.166
EQUIPMENT ELECTRICAL	.190
EQUIPMENT ELECTRICAL	.191
EQUIPMENT FUSELAGE	.108
EQUIPMENT WINTERIZATION	.137
ESCUTCHEON DOOR HANDLE	72
ESCUTCHEON DOOR HANDLE	73
ESCUTCHEON DOOR HANDLE	74
ESCUTCHEON SILENCER	.139
EXHAUST STACK	.131
EXHAUST STACK BRACE	.125
EXHAUST STACK LH	.131
EXHAUST SYSTEM	.132
EXPANDER TIRE	.108
EXTENSION BELT	.109
EXTENSION VALVE	55
EXTENSION VALVE	67
EXTENSION VALVE	68
EXTERNAL POWER CONTACTOR	.191
EXTERNAL POWER FUSE	.190
EXTERNAL POWER FUSE	.191
EXTINGUISHER FIRE	.108
EYEBOLT	84
EYEBOLT	85
EYEBOLT	.108
EYEBOLT	.187
EYEBOLT CARGO TIE DOWN	.108
EYEBOLT HOISTING	.108
EYEBOLT MOORING	31
EYEBOLT MOORING	32
EYEBOLT MOORING	33
EYEBOLT MOORING	52
EYEBROW INSTRUMENT PANEL	.105
EYEBROW INSTRUMENT PANEL	.106
F	
FAIRING MAIN LANDING GEAR SPEED	67

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
F (Cont)	
FAIRING NOSE GEAR SPEED	55
FAIRING SCRAPER	67
FAIRING SCRAPER	68
FAIRING SPEED	55
FAIRING SPEED	67
FAIRING TAILCONE	52
FAIRING WHEEL	67
FAIRING WHEEL	68
FAIRING WING	4
FELT GREASE SEAL	70
FERRULE AXLE BOLT	55
FILLER NECK	16
FILLER NECK	17
FILLER NECK	.172
FILLER NECK FUEL TANK	16
FILLER NECK FUEL TANK	17
FILLET WING	27
FILTER AIR	.121
FILTER AIR	.123
FILTER AIR	.178
FILTER AIR	.179
FILTER AIR	.182
FILTER AIR	.183
FILTER AIR	.184
FILTER AIR	.185
FILTER AIRBOX	.125
FILTER CARBURETOR AIR	.115
FILTER CARBURETOR AIR	.116
FILTER CARBURETOR AIR	.117
FILTER CARBURETOR AIR	.118
FILTER CARBURETOR AIR	.119
FILTER CARBURETOR AIR	.120
FILTER CARBURETOR AIR	.126
FILTER CARBURETOR AIR	.127
FILTER CARBURETOR AIR INTAKE	.115
FILTER CARBURETOR AIR INTAKE	.116
FILTER CARBURETOR AIR INTAKE	.117
FILTER CARBURETOR AIR INTAKE	.118
FILTER CARBURETOR AIR INTAKE	.119
FILTER CARBURETOR AIR INTAKE	.120
FILTER ELEMENT	.178
FILTER ELEMENT	.179
FILTER ELEMENT	.182
FILTER ELEMENT	.183
FILTER ELEMENT	.184
FILTER ELEMENT	.185
FILTER ELEMENT KIT	.163
FILTER ELEMENT KIT	.164
FILTER ELEMENT KIT	.187
FILTER FUEL STRAINER	.169
FILTER FUEL STRAINER	.170
FILTER FULL FLOW OIL	.187
FILTER NOISE	.191
FILTER NOISE	.203
FILTER OIL	.163
FILTER OIL	.164
FILTER OIL	.187
FILTER RELIEF VALVE	.180
FILTER RELIEF VALVE	.181
FIN	22
FIN DORSAL	50
FIN TIP	.201
FINISH & TRIM PLACARD	2
FINISH & TRIM PLACARD	3
FINISH & TRIM PLATE-HOW TO READ	SEE PAGE vi
FIRE EXTINGUISHER	.108
FIRE EXTINGUISHER BRACKET	.108
FIREWALL	39
F (Cont)	
FIREWALL	40
FIREWALL	41
FIREWALL	42
FIREWALL	.189
FIREWALL GROMMETS	43
FITTINGS FLOATPLANE	.187
FLANGE STATIC SOURCE	31
FLAP	20
FLAP ACTUATOR	.159
FLAP ACTUATOR MOTOR	.159
FLAP ATTACHMENT ROLLER	20
FLAP ATTACHMENT ROLLER BUSHING	20
FLAP BELLCRANK BRACKET	6
FLAP BELLCRANK BRACKET	8
FLAP CABLE	.159
FLAP CONTROL BRACKET	20
FLAP CONTROL SYSTEM	.158
FLAP COWL	.121
FLAP INDICATOR	.102
FLAP INDICATOR	.103
FLAP INDICATOR	.104
FLAP INDICATOR	.105
FLAP INDICATOR	.106
FLAP KNOB	.105
FLAP KNOB	.106
FLAP MOTOR HINGE	.159
FLAP POSITION TRANSMITTER ARM	.159
FLAP PULLEY BRACKET	6
FLAP PULLEY BRACKET	8
FLAP PULLEY BRACKET	27
FLAP PULLEY BRACKET	28
FLAP PULLEY BRACKET	46
FLAP PUSH PULL ROD	20
FLAP PUSH ROD	20
FLAP RETRACT CABLE	.159
FLAP SWITCH	.102
FLAP SWITCH	.103
FLAP SWITCH	.104
FLAP SWITCH	.105
FLAP SWITCH	.106
FLAP SWITCH	.159
FLAP SWITCH KNOB	.102
FLAP SWITCH KNOB	.103
FLAP SWITCH KNOB	.104
FLAP SYSTEM ELECTRIC	.159
FLASHER BEACON LIGHT	.201
FLASHER NAVIGATION LIGHT	.190
FLASHER NAVIGATION LIGHT	.192
FLASHING BEACON LIGHT	.201
FLASHING BEACON SWITCH	.103
FLASHING BEACON SWITCH	.105
FLOATPLANE FITTINGS	.187
FLOORBOARD	28
FLOORBOARD	29
FLOORBOARD	30
FLOORBOARD	31
FLOORBOARD	32
FLOORBOARD	33
FLOORBOARD	49
FLOORBOARD CARPET	84
FLOORBOARD CENTER SECTION	30
FLOORBOARD FRONT	35
FLOORBOARD FUSELAGE CENTER SECTION	28
FLOORBOARD FUSELAGE CENTER SECTION	29
FLOORBOARD FUSELAGE CENTER SECTION	30
FLUSH VALVE	18
FORWARD CARPET	84
FORWARD CARPET	85

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
F (Cont)	
FRAME DOOR	28
FRAME DOOR	29
FRAME DOOR	30
FRAME SEAT BOTTOM	90
FRAME WINDOW	72
FRAME WINDOW	73
FRAME WINDOW	76
FRESH AIR SILENCER	.139
FRESH AIR VENT SILENCER	.139
FRONT & CENTER SECTION FUSELAGE	28
FRONT & CENTER SECTION FUSELAGE	29
FRONT & CENTER SECTION FUSELAGE	30
FRONT DOORPOST BULKHEAD	34
FRONT DOORPOST BULKHEAD	35
FRONT FLOORBOARD	35
FRONT SEAT	93
FRONT SEAT	94
FRONT SEAT BELT	87
FRONT SPAR	24
FRONT SPAR SHIELD	82
FRONT SPAR SHIELD	83
FUEL CAP	5
FUEL CELL RIB	6
FUEL CELL RIB	8
FUEL GAGE	99
FUEL GAGE	.100
FUEL GAGE	.102
FUEL GAGE	.103
FUEL GAGE	.104
FUEL GAGE	.105
FUEL GAGE TRANSMITTER	16
FUEL GAGE TRANSMITTER	17
FUEL HOSE	1
FUEL JET	.173
FUEL LINE	.165
FUEL LINE	.166
FUEL LINE	.167
FUEL LINE	.168
FUEL LINES-SEE FUEL SYSTEM	
FUEL MIXTURE CONTROL	.122
FUEL PRIMER	.173
FUEL PRIMER THREE CYLINDER	.173
FUEL PUMP	.128
FUEL SAMPLER CUP	18
FUEL SELECTOR HANDLE	.165
FUEL SELECTOR HANDLE	.166
FUEL SELECTOR HANDLE	.167
FUEL SELECTOR HANDLE	.168
FUEL SELECTOR PLACARD	2
FUEL SELECTOR PLACARD	3
FUEL SELECTOR PLACARD	.166
FUEL SELECTOR PLACARD	.167
FUEL SELECTOR PLACARD	.168
FUEL SELECTOR SHAFT	.165
FUEL SELECTOR SHAFT	.166
FUEL SELECTOR SHAFT	.167
FUEL SELECTOR SHAFT	.168
FUEL SELECTOR VALVE	.166
FUEL SELECTOR VALVE	.171
FUEL SELECTOR VALVE BRACKET	28
FUEL SELECTOR VALVE BRACKET	.165
FUEL SELECTOR VALVE BRACKET	.166
FUEL SELECTOR VALVE BRACKET	.167
FUEL SELECTOR VALVE BRACKET	.168
FUEL SELECTOR VALVE HANDLE	.165
FUEL SELECTOR VALVE PLACARD	.166
FUEL SELECTOR VALVE PLACARD	.167
FUEL SELECTOR VALVE PLACARD	.168

NOMENCLATURE	FIGURE
F (Cont)	
FUEL SELECTOR VALVE SHAFT	.165
FUEL STRAINER	.169
FUEL STRAINER	.170
FUEL STRAINER BOWL	.169
FUEL STRAINER BOWL	.170
FUEL STRAINER BRACKET	.166
FUEL STRAINER BRACKET	.167
FUEL STRAINER BRACKET	.168
FUEL STRAINER FILTER	.169
FUEL STRAINER FILTER	.170
FUEL STRAINER SHROUD	.166
FUEL STRAINER TOP	.169
FUEL STRAINER TOP	.170
FUEL SYSTEM	.165
FUEL SYSTEM	.166
FUEL SYSTEM	.167
FUEL SYSTEM	.168
FUEL TANK	5
FUEL TANK	16
FUEL TANK	17
FUEL TANK	18
FUEL TANK	.172
FUEL TANK ADAPTER	16
FUEL TANK ADAPTER	17
FUEL TANK ADAPTER GASKET	16
FUEL TANK ADAPTER GASKET	17
FUEL TANK AUXILIARY	.172
FUEL TANK CAP	16
FUEL TANK CAP	17
FUEL TANK COVER	4
FUEL TANK DRAIN VALVE	18
FUEL TANK SPACER	12
FUEL TANK SPACER	13
FUEL TANK STRAINER	.165
FUEL TANK STRAINER	.166
FUEL TANK STRAINER	.167
FUEL TANK STRAINER	.168
FUEL TANK STRAP	6
FUEL TANK STRAP	7
FUEL TANK STRAP	8
FUEL TANK STRAP	9
FUEL TANK STRAP	16
FUEL TANK STRAP	17
FUEL TANK VENT VALVE	16
FUEL TANK VENT VALVE	17
FUEL TRANSFER SWITCH	.172
FUEL VALVE	16
FUEL VALVE	17
FUSE	99
FUSE	.100
FUSE	.190
FUSE	.192
FUSE	.204
FUSE CLOCK	.190
FUSE CLOCK	.191
FUSE EXTERNAL POWER	.190
FUSE EXTERNAL POWER	.191
FUSE HOLDER	.191
FUSE HOLDER CLOCK	.190
FUSE HOLDER CLOCK	.191
FUSE HOLDER EXTERNAL POWER	.191
FUSEHOLDER	99
FUSEHOLDER	.100
FUSEHOLDER	.190
FUSEHOLDER ELECTRIC CLOCK	.192
FUSELAGE	27
FUSELAGE AFT SECTION	49
FUSELAGE CENTER SECTION FLOORBOARD	28

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE

F (Cont)

FUSELAGE CENTER SECTION FLOORBOARD	29
FUSELAGE CENTER SECTION FLOORBOARD	30
FUSELAGE ELECTRICAL EQUIPMENT	.192
FUSELAGE EQUIPMENT	.108
FUSELAGE FRONT SECTION STRUCTURE	31
FUSELAGE FRONT SECTION STRUCTURE	32
FUSELAGE FRONT SECTION STRUCTURE	33
FUSELAGE SOUNDPROOFING	86
FUSELAGE SPAR BLOCK	34
FUSELAGE SPAR BLOCK	35
FUSELAGE TAILCONE	52
FUSELAGE TUNNEL	36

G

GAGE-SEE INDIVIDUAL LISTING	
GAS CAP	.172
GAS CAP-SEE FUEL CAP	
GAS GAGE-SEE INSTRUMENT PANEL	
GAS LINES-SEE FUEL SYSTEM	
GASKET ADHESIVE	1
GASKET FUEL TANK ADAPTER	16
GASKET FUEL TANK ADAPTER	17
GEAR HEAVY DUTY NOSE	56
GEAR MAGNETO DRIVE	.127
GENERATOR	.192
GENERATOR 20 AMP	.127
GENERATOR 35 AMP	.127
GENERATOR 35 AMP	.190
GENERATOR 35 AMP	.192
GLASS WINDOW	72
GLASS WINDOW	73
GLASS WINDOW	74
GLASS WINDOW	75
GLASS WINDOW	76
GOVERNOR	.127
GOVERNOR PROPELLER	.126
GOVERNOR PROPELLER	.129
GOVERNOR PROPELLER	.130
GREASE SEAL FELT	60
GREASE SEAL FELT	61
GREASE SEAL FELT	62
GREASE SEAL FELT	63
GREASE SEAL FELT	70
GREASE SEAL FELT	71
GRILL VENT	82
GRILL VENT	83
GROMMETS FIREWALL	43
GROUND SERVICE PLUG	.190
GROUND SERVICE PLUG	.191
GROUND SERVICE PLUG	.192
GROUND SERVICE PLUG	.205
GROUND SERVICE PLUG BRACKET	.192
GROUND SERVICE PLUG DOOR	.205
GROUND SERVICE PLUG LID	.192
GROUND SERVICE PLUG RECEPTACLE	.190
GROUND SERVICE PLUG RECEPTACLE	.191
GROUND SERVICE PLUG RECEPTACLE	.192
GROUND SERVICE PLUG RECEPTACLE	.205
GROUND STRAP	16
GROUND STRAP	17
GROUND STRAP	.101
GROUND STRAP	.102
GROUND STRAP	.103
GROUND STRAP	.104
GROUND STRAP	.105

G (Cont)

GROUND STRAP	.106
GROUND STRAP	.124
GROUND STRAP	.126
GROUND STRAP	.190
GROUND STRAP	.191
GROUND STRAP	.192
GROUND STRAP	.205
GYRO ATTITUDE	.183
GYRO DIRECTIONAL	.101
GYRO DIRECTIONAL	.102
GYRO DIRECTIONAL	.103
GYRO DIRECTIONAL	.104
GYRO DIRECTIONAL	.105
GYRO DIRECTIONAL	.106
GYRO DIRECTIONAL	.176
GYRO DIRECTIONAL	.177
GYRO DIRECTIONAL	.178
GYRO DIRECTIONAL	.179
GYRO DIRECTIONAL	.180
GYRO DIRECTIONAL	.181
GYRO DIRECTIONAL	.182
GYRO DIRECTIONAL	.183
GYRO DIRECTIONAL	.184
GYRO DIRECTIONAL	.185
GYRO HORIZON	.101
GYRO HORIZON	.102
GYRO HORIZON	.103
GYRO HORIZON	.104
GYRO HORIZON	.105
GYRO HORIZON	.106
GYRO HORIZON	.176
GYRO HORIZON	.177
GYRO HORIZON	.178
GYRO HORIZON	.179
GYRO HORIZON	.180
GYRO HORIZON	.181
GYRO HORIZON	.182
GYRO HORIZON	.183
GYRO HORIZON	.184
GYRO HORIZON	.185

H

HANDLE ASSIST	.110
HANDLE BAGGAGE DOOR	84
HANDLE BAGGAGE DOOR	85
HANDLE DOOR	73
HANDLE DOOR	74
HANDLE DOOR	75
HANDLE DOOR	76
HANDLE DOOR LATCH	78
HANDLE FUEL SELECTOR	.165
HANDLE FUEL SELECTOR	.166
HANDLE FUEL SELECTOR	.167
HANDLE FUEL SELECTOR	.168
HANDLE FUEL SELECTOR VALVE	.165
HANDLE INSIDE DOOR	72
HANDLE INSIDE DOOR	73
HANDLE INSIDE DOOR	75
HANDLE INSIDE DOOR	76
HANDLE PARKING BRAKE	.142
HANDLE PARKING BRAKE	.143
HANDLE PARKING BRAKE	.144
HANDLE SEAT	93
HANDLE SEAT	94
HANDLE SEAT ADJUST	89

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
H (Cont)	
HANDLE SEAT ADJUST	94
HANDLE SEAT ADJUSTMENT	88
HANDLE SEAT ADJUSTMENT	92
HANDLE WINDOW	72
HANDLE WINDOW	76
HANDLE WINDOW LATCH	72
HANDLE WINDOW LATCH	73
HARNESS IGNITION	.127
HARNESS SHOULDER	.108
HEAD TEMPERATURE GAGE CYLINDER	.101
HEADLINER	82
HEADLINER	83
HEADLINER RETAINER	28
HEADLINER RETAINER	29
HEADLINER RETAINER	83
HEADLINER WIRE	82
HEADREST	87
HEADREST	88
HEADREST	89
HEADREST	90
HEADREST	93
HEADREST	94
HEADREST	95
HEADREST	96
HEADREST SEAT BACK	88
HEADREST SEAT BACK	90
HEADREST SEAT BACK	95
HEADREST SEAT BACK	96
HEATER	.161
HEATER DUCT	39
HEATER DUCT	40
HEATER DUCT	41
HEATER DUCT	42
HEATING & DEFROSTING SYSTEM CABIN	.140
HEATING & DEFROSTING SYSTEM CABIN	.141
HEATING CABIN	.140
HEATING CABIN	.141
HEATING PLUG	99
HEATING PLUG	.100
HEATING PLUG	.102
HINGE AILERON	19
HINGE BAGGAGE DOOR	80
HINGE BAGGAGE DOOR	81
HINGE BRACKET	72
HINGE BRACKET	73
HINGE BRACKET	76
HINGE DOOR	72
HINGE DOOR	73
HINGE DOOR	74
HINGE DOOR	75
HINGE DOOR	76
HINGE FLAP MOTOR	.159
HINGE MAP BOX DOOR	.107
HINGE STABILIZER	24
HINGE WINDOW	72
HINGE WINDOW	73
HINGE WINDOW	76
HOISTING EYEBOLT	.108
HOISTING PROVISIONS	.187
HOLDER CLOCK FUSE	.190
HOLDER CLOCK FUSE	.191
HOLDER CUP	.108
HOLDER EXTERNAL POWER FUSE	.191
HOLDER FUSE	.191
HOOK GLIDER TOW	.108
HOOK SHOULDER HARNESS	.108
HORIZON GYRO	.101
HORIZON GYRO	.102

NOMENCLATURE	FIGURE
H (Cont)	
HORIZON GYRO	.103
HORIZON GYRO	.104
HORIZON GYRO	.105
HORIZON GYRO	.106
HORIZON GYRO	.176
HORIZON GYRO	.177
HORIZON GYRO	.178
HORIZON GYRO	.179
HORIZON GYRO	.180
HORIZON GYRO	.181
HORIZON GYRO	.182
HORIZON GYRO	.183
HORIZON GYRO	.184
HORIZON GYRO	.185
HORN STALL WARNING	99
HORN STALL WARNING	.100
HORN STALL WARNING	.102
HORN STALL WARNING	.162
HORN STALL WARNING	.190
HORN STALL WARNING	.192
HOSE CARBURETOR TO STRAINER	.125
HOSE CARBURETOR TO STRAINER	.126
HOSE FUEL	1
HOSE MASTER CYLINDER	.142
HOSE MASTER CYLINDER	.143
HOSE MASTER CYLINDER	.144
HOSE OIL PRESSURE	.123
HOSE STRAINER TO CARBURETOR	.165
HOSE STRAINER TO CARBURETOR	.166
HOSES-SEE APPLICABLE SYSTEM	
HOURMETER	.103
HOURMETER	.105
HOURMETER	.106
HOURMETER GAGE	.104
HOW TO ORDER PAINTED PARTS SEE PAGE xix	
HOW TO ORDER PARTS-SEE INTRODUCTION	
HOW TO ORDER UPHOLSTERED PARTS-SEE PAGE xviii	
HOW TO READ FINISH & TRIM PLATE-SEE PAGE vi	
HOW TO USE PARTS CATALOG-SEE PAGE i	
HUB ALIGNMENT DOWEL	.114
HUB CAP	55
HUB CAP NOSE GEAR	55
HUB DUAL BRAKE	.145
I	
IGNITION HARNESS	.127
IGNITION SWITCH	99
IGNITION SWITCH	.102
IGNITION SWITCH KIT	99
IGNITION SWITCH KIT	.100
IGNITION SWITCH KIT	.102
IGNITION SWITCH KIT	.103
IGNITION SWITCH KIT	.104
IGNITION SWITCH KIT	.105
IGNITION SWITCH KIT	.106
INDICATOR-SEE INSTRUMENT PANEL	
INLET AIR	31
INSIDE DOOR HANDLE	72
INSIDE DOOR HANDLE	73
INSIDE DOOR HANDLE	75
INSIDE DOOR HANDLE	76
INSIGNIA	2
INSTRUMENT CLUSTER	.104
INSTRUMENT CLUSTER	.105
INSTRUMENT CLUSTER	.106

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
I (Cont)	
INSTRUMENT CLUSTER LENS	.104
INSTRUMENT PANEL	.102
INSTRUMENT PANEL	.103
INSTRUMENT PANEL COVER RETAINER	82
INSTRUMENT PANEL EQUIPMENT	.102
INSTRUMENT PANEL EQUIPMENT	.103
INSTRUMENT PANEL EQUIPMENT	.104
INSTRUMENT PANEL EQUIPMENT	.105
INSTRUMENT PANEL EQUIPMENT	.106
INSTRUMENT PANEL EQUIPMENT STATIONARY	99
INSTRUMENT PANEL EQUIPMENT STATIONARY	.100
INSTRUMENT PANEL EYEBROW	.105
INSTRUMENT PANEL EYEBROW	.106
INSTRUMENT PANEL LIGHT	.193
INSTRUMENT PANEL LIGHT	.194
INSTRUMENT PANEL LIGHT	.195
INSTRUMENT PANEL STATIONARY	99
INSTRUMENT PANEL STATIONARY	.100
INSTRUMENT-SEE INDIVIDUAL LISTINGS	
INSULATION BREATHER TUBE	.123
INSULATION BREATHER TUBE	.137
INTER CYLINDER BAFFLE	.133
INTER CYLINDER BAFFLE	.136
INTERIOR TRIM HANGER	28
INTERIOR TRIM HANGER	29
INVERTER	.152
INVERTER	.153
J	
JACK PAD	.108
JACK POINT	.108
JACK-HEADSET-SEE CESSNA ELECTRONICS MANUAL	
JACK-MICROPHONE-SEE CESSNA ELECTRONICS MANUAL	
JAMB BAGGAGE DOOR	49
JOINT UNIVERSAL	.147
JOINT UNIVERSAL	.148
K	
KICK PLATE	84
KIT BATTERY	.190
KIT BATTERY	.191
KIT BATTERY	.192
KIT IGNITION SWITCH	99
KIT IGNITION SWITCH	.100
KIT IGNITION SWITCH	.102
KIT IGNITION SWITCH	.103
KIT IGNITION SWITCH	.104
KIT IGNITION SWITCH	.105
KIT IGNITION SWITCH	.106
KIT SEAT ROLLER	87
KIT SEAT ROLLER	88
KIT SEAT ROLLER	89
KIT SEAT ROLLER	90
KIT SEAT ROLLER	92
KIT SEAT ROLLER	93
KIT SHOCK MOUNT	.123
KITS-SEE ACCESSORY KIT CATALOG	
KNOB CIGAR LIGHTER	.102
KNOB CIGAR LIGHTER	.103
KNOB CIGAR LIGHTER	.104
KNOB CIGAR LIGHTER	.105
KNOB CIGAR LIGHTER	.106

NOMENCLATURE	FIGURE
K (Cont)	
KNOB FLAP	.105
KNOB FLAP	.106
KNOB FLAP SWITCH	.102
KNOB FLAP SWITCH	.103
KNOB FLAP SWITCH	.104
KNOB FORE & AFT ADJUSTMENT	90
KNOB FORE & AFT SEAT ADJUSTMENT	87
KNOB LANDING LIGHT SWITCH	99
KNOB LANDING LIGHT SWITCH	.100
KNOB LANDING LIGHT SWITCH	.103
KNOB LANDING LIGHT SWITCH	.104
KNOB LIGHTER	99
KNOB LIGHTER	.100
KNOB MAP BOX DOOR	.107
KNOB MASTER SWITCH	99
KNOB MASTER SWITCH	.100
KNOB MASTER SWITCH	.102
KNOB MASTER SWITCH	.103
KNOB MASTER SWITCH	.104
KNOB NAVIGATION LIGHT SWITCH	99
KNOB NAVIGATION LIGHT SWITCH	.100
KNOB NAVIGATION LIGHT SWITCH	.103
KNOB PITOT HEAT SWITCH	.103
KNOB PRIMER	99
KNOB PRIMER	.100
KNOB PRIMER	.102
KNOB PRIMER	.103
KNOB PRIMER	.104
KNOB PRIMER	.165
KNOB PRIMER	.166
KNOB SEAT ADJUST	93
KNOB SEAT ADJUSTMENT	96
KNOB SILENCER	.139
KNOB THUMB LATCH	74
KNOBS-SEE INDIVIDUAL APPLICATIONS	
L	
LAMP	4
LAMP	.193
LAMP	.194
LAMP	.195
LAMP	.197
LAMP	.198
LAMP	.199
LAMP	.201
LAMP	.202
LAMP TAIL LIGHT	23
LAMPS-SEE BULBS	
LAMPS-SEE LIGHTS	
LANDING GEAR BULKHEAD	46
LANDING GEAR BULKHEAD	47
LANDING GEAR BULKHEAD SKIN	28
LANDING GEAR BULKHEAD SKIN	29
LANDING GEAR BULKHEAD SKIN	30
LANDING GEAR FILLET SEAL	67
LANDING GEAR MAIN	67
LANDING GEAR MAIN	68
LANDING GEAR SEAL	67
LANDING GEAR SPRING	67
LANDING LIGHT	.196
LANDING LIGHT	.197
LANDING LIGHT	.198
LANDING LIGHT BRACKET	10
LANDING LIGHT BRACKET	.197
LANDING LIGHT COVER	4

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
L (Cont)	
LANDING LIGHT SWITCH	99
LANDING LIGHT SWITCH	.100
LANDING LIGHT SWITCH	.102
LANDING LIGHT SWITCH	.103
LANDING LIGHT SWITCH	.105
LANDING LIGHT SWITCH KNOB	99
LANDING LIGHT SWITCH KNOB	.100
LANDING LIGHT SWITCH KNOB	.103
LANDING LIGHT SWITCH KNOB	.104
LANDING LIGHT WINDOW	.196
LANDING LIGHTS	.196
LATCH	54
LATCH	97
LATCH	98
LATCH	.108
LATCH	.124
LATCH	.158
LATCH BAGGAGE DOOR	80
LATCH BAGGAGE DOOR	81
LATCH DOOR	55
LATCH DOOR	68
LATCH DOOR	72
LATCH DOOR	73
LATCH DOOR	74
LATCH DOOR	75
LATCH DOOR	77
LATCH DOOR	78
LATCH DOOR	.118
LATCH DOOR	.119
LATCH DOOR	.120
LATCH THUMB	74
LATCH THUMB	79
LEAD THERMOCOUPLE	.100
LEADING EDGE SKIN	24
LEADING EDGE WING	10
LEADING EDGE WING	11
LEFT WING STRUCTURE	6
LEFT WING STRUCTURE	7
LEFT WING STRUCTURE	8
LEFT WING STRUCTURE	9
LENS INSTRUMENT CLUSTER	.104
LENS STROBE LIGHT	4
LENS TAIL LIGHT	23
LENS TAIL LIGHT CLEAR	23
LEVELER COMPONENTS WING	.152
LEVELER COMPONENTS WING	.153
LEVELER WING	.151
LID BATTERY BOX	53
LID GROUND SERVICE PLUG	.192
LIGHT CHARGE INDICATOR	.102
LIGHT CONTROL WHEEL MAP	.204
LIGHT COURTESY	.199
LIGHT FLASHING BEACON	.201
LIGHT GENERATOR INDICATOR	99
LIGHT GENERATOR INDICATOR	.100
LIGHT LANDING	.196
LIGHT LANDING	.197
LIGHT LANDING	.198
LIGHT MAP	.202
LIGHT MAP	.204
LIGHT OVERVOLTAGE	.106
LIGHT RUDDER	23
LIGHT STROBE	4
LIGHT WING POSITION	4
LIGHTER CIGAR	99
LIGHTER CIGAR	.100
LIGHTER CIGAR	.102
LIGHTER CIGAR	.103
LIGHTER CIGAR	.104
LIGHTER CIGAR	.105
LIGHTER CIGAR	.106
LIGHTER KNOB	99
LIGHTER KNOB	.100
LIGHTS LANDING	.196
LIMIT SWITCHES-SEE SWITCHES	
LINES-SEE INDIVIDUAL SYSTEM	
LINING BRAKE	69
LINING BRAKE	71
LINK LOWER TORQUE	57
LINK LOWER TORQUE	58
LINK PARKING BRAKE CHAIN	.142
LINK STEERING	31
LINK UPPER TORQUE	57
LINK UPPER TORQUE	58
LOCK CONTROL	99
LOCK CONTROL	.100
LOCK CONTROL	.102
LOCK CONTROL	.108
LOCK DOOR	72
LOCK DOOR	73
LOCK DOOR	80
LOCK DOOR	81
LOCK MIXTURE CONTROL	.103
LOWER COWL	.115
LOWER COWL	.116
LOWER COWL	.117
LOWER COWL	.119
LOWER COWL	.120
LOWER COWL	.121
LUBRICATION FITTING	57
LUBRICATION FITTING	58
M	
MAGAZINE POCKET	87
MAGAZINE POCKET	88
MAGAZINE POCKET	90
MAGAZINE POCKET	91
MAGAZINE POCKET	93
MAGNETIC CATCH	.107
MAGNETO	.127
MAGNETO	.128
MAGNETO DRIVE GEAR	.127
MAIN GEAR FAIRING	68
MAIN GEAR WHEEL	70
MAIN GEAR WHEEL	71
MAIN LANDING GEAR	67
MAIN LANDING GEAR	68
MAIN LANDING GEAR AXLE	67
MAIN LANDING GEAR AXLE	68
MAIN LANDING GEAR WHEEL	69
MANIFOLD DRAIN LINE	.174
MANIFOLD PRESSURE GAGE	.100
MANIFOLD PRESSURE GAGE	.186
MAP BOX	.107
MAP BOX DOOR HINGE	.107
MAP BOX DOOR KNOB	.107
MAP CASE	.107
MAP CASE DOOR	.107
MAP COMPARTMENT	.107
MAP LIGHT	.202
MAP LIGHT	.204
MAP LIGHT CONTROL WHEEL	.204
MAP LIGHT SWITCH	.202

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
M (Cont)	
MAPLIGHT	.202
MARKER BEACON PLACARD	.106
MASTER BRAKE CYLINDER	.146
MASTER SOLENOID CONTACTOR	.192
MASTER SOLENOID SHIELD	.190
MASTER SWITCH	99
MASTER SWITCH	.100
MASTER SWITCH	.102
MASTER SWITCH	.103
MASTER SWITCH	.104
MASTER SWITCH	.105
MASTER SWITCH	.106
MASTER SWITCH DIODE	.105
MASTER SWITCH KNOB	99
MASTER SWITCH KNOB	.100
MASTER SWITCH KNOB	.102
MASTER SWITCH KNOB	.103
MASTER SWITCH KNOB	.104
METERING PIN	57
METERING PIN	58
MIKE SWITCH	.148
MIRROR & COVER	.108
MIXTURE CONTROL	99
MIXTURE CONTROL	.100
MIXTURE CONTROL	.102
MIXTURE CONTROL	.103
MIXTURE CONTROL	.104
MIXTURE CONTROL	.105
MIXTURE CONTROL	.106
MIXTURE CONTROL LOCK	.103
MOORING EYEBOLT	31
MOORING EYEBOLT	32
MOORING EYEBOLT	33
MOORING EYEBOLT	52
MOORING RING	21
MOTOR FLAP ACTUATOR	.159
MOULDING REAR WINDOW	82
MOULDING REAR WINDOW	83
MOULDING SIDE WINDOW	82
MOULDING STABILIZER	24
MOULDING WINDOW	82
MOULDING WINDOW	83
MOUNT ENGINE	39
MOUNT ENGINE	40
MOUNT ENGINE	42
MOUNT ENGINE	.123
MOUNT ENGINE	.125
MOUNT ENGINE	.126
MOUNT SHOCK	40
MOUNT SHOCK	41
MOUNT SHOCK	.101
MOUNT SHOCK	.103
MOUNT SHOCK	.104
MOUNT SHOCK	.126
MOUNT TAIL LIGHT	23
MUFFLER	.131
MUFFLER	.132
N	
NAME PLATE M.A.A.	27
NAMEPLATE	2
NAMEPLATE	.130
NAMEPLATE CESSNA	2
NAMEPLATE CONTROL WHEEL	2
NAMEPLATE CONTROL WHEEL	3

NOMENCLATURE	FIGURE
N (Cont)	
NAMEPLATES	2
NAMEPLATES	3
NAMEPLATES & EXTERIOR MARKINGS	2
NAMEPLATES & EXTERIOR MARKINGS	3
NAV LIGHT DETECTOR	4
NAV LIGHT SWITCH	.105
NAVIGATION LIGHT FLASHER	.190
NAVIGATION LIGHT FLASHER	.192
NAVIGATION LIGHT SWITCH	99
NAVIGATION LIGHT SWITCH	.100
NAVIGATION LIGHT SWITCH	.103
NAVIGATION LIGHT SWITCH	.104
NAVIGATION LIGHT SWITCH KNOB	99
NAVIGATION LIGHT SWITCH KNOB	.100
NAVIGATION LIGHT SWITCH KNOB	.103
NAVOMATIC AUTO PILOT-SEE ELECTRONICS MANUAL	
NECK FILLER	16
NECK FILLER	17
NECK FILLER	.172
NECK FUEL TANK FILLER	16
NECK FUEL TANK FILLER	17
NET BAGGAGE	84
NET BAGGAGE	85
NIPPLE PRIMING JET	.122
NIPPLE PRIMING JET	.124
NIPPLE PRIMING JET	.165
NIPPLE PRIMING JET	.166
NIPPLE PRIMING JET	.174
NOISE FILTER	.191
NOISE FILTER	.203
NOSE CAP	.118
NOSE CAP	.121
NOSE CAP LOWER	.115
NOSE CAP LOWER	.116
NOSE CAP LOWER	.119
NOSE CAP LOWER	.120
NOSE CAP LOWER	.121
NOSE CAP UPPER	.116
NOSE CAP UPPER	.117
NOSE CAP UPPER	.119
NOSE CAP UPPER	.120
NOSE GEAR	55
NOSE GEAR	56
NOSE GEAR FITTING	31
NOSE GEAR FITTING	32
NOSE GEAR FITTING	33
NOSE GEAR HEAVY DUTY	56
NOSE GEAR LOWER FITTING	31
NOSE GEAR LOWER FITTING	32
NOSE GEAR LOWER FITTING	33
NOSE GEAR SHOCK STRUT PLACARD	2
NOSE GEAR SHOCK STRUT PLACARD	3
NOSE GEAR STEERING ARM	57
NOSE GEAR STEERING ARM	58
NOSE GEAR UPPER FITTING	31
NOSE GEAR UPPER FITTING	32
NOSE GEAR UPPER FITTING	33
NOSE GEAR WHEEL	59
NOSE GEAR WHEEL	60
NOSE GEAR WHEEL	61
NOSE GEAR WHEEL	62
NOSE GEAR YOKE	58
NOSECAP	.117
NOSECAP	.118
NOZZLE DEFROSTER	.141
NUMERICAL INDEX-SEE LAST SECTION IN CATALOG	
NUT WHEEL FAIRING SUPPORT	67

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE

O

OIL COOLER	.123
OIL COOLER	.187
OIL COOLER PLATE	.137
OIL FILTER	.163
OIL FILTER	.164
OIL FILTER	.187
OIL FILTER ADAPTER	.163
OIL FILTER ADAPTER	.164
OIL FILTER FULL FLOW	.187
OIL FILTER PLACARD	2
OIL FILTER PLACARD	3
OIL FILTER PLACARD	.163
OIL FILTER PLACARD	.164
OIL FILTER PLACARD	.187
OIL GAGE	.104
OIL GAGE	.128
OIL LINE	.100
OIL LINE	.123
OIL PRESSURE GAGE	99
OIL PRESSURE GAGE	.100
OIL PRESSURE GAGE	.102
OIL PRESSURE GAGE	.103
OIL PRESSURE GAGE	.106
OIL PRESSURE HOSE	.123
OIL PRESSURE LINE	99
OIL PRESSURE LINE	.123
OIL PRESSURE LINE	.125
OIL PRESSURE LINE	.126
OIL PRESSURE SWITCH	.123
OIL PRESSURE SWITCH	.125
OIL QUICK DRAIN VALVE	.123
OIL QUICK DRAIN VALVE	.125
OIL SEPARATOR	.180
OIL SEPARATOR	.181
OIL SEPARATOR	.182
OIL SEPARATOR	.183
OIL SEPARATOR	.184
OIL TEMP GAGE	.102
OIL TEMP GAGE	.106
OIL TEMPERATURE ADAPTER	.125
OIL TEMPERATURE ADAPTER	.126
OIL TEMPERATURE ADAPTOR	.123
OIL TEMPERATURE GAGE	99
OIL TEMPERATURE GAGE	.100
OIL TEMPERATURE GAGE	.102
OIL TEMPERATURE GAGE	.103
OIL TEMPERATURE GAGE	.104
OIL TEMPERATURE GAGE ADAPTER	.125
OPERATIONAL LIMITATIONS PLACARD	2
OPERATIONAL LIMITATIONS PLACARD	3
OUTBOARD AUXILIARY SPAR	12
OUTSIDE AIR DOOR	31
OUTSIDE AIR DOOR	32
OUTSIDE AIR DOOR	33
OUTSIDE AIR TEMPERATURE GAGE	.108
OUTSIDE AIR VENT	.138
OUTSIDE AIR VENT	.139
OVERVOLTAGE LIGHT	.106
OVERVOLTAGE SENSOR	.191

P

PAD CONTROL WHEEL	.148
PAD JACK	.108
PAINT-SEE FINISH & TRIM PLATE	SEE PAGE vi
PAINTED PARTS-HOW TO ORDER	SEE PAGE xix

NOMENCLATURE	FIGURE

P (Cont)

PANEL BAGGAGE COMPARTMENT	84
PANEL BAGGAGE COMPARTMENT	85
PANEL BAGGAGE DOOR	84
PANEL EQUIPMENT INSTRUMENT	.102
PANEL EQUIPMENT INSTRUMENT	.103
PANEL EQUIPMENT INSTRUMENT	.104
PANEL EQUIPMENT INSTRUMENT	.105
PANEL EQUIPMENT INSTRUMENT	.106
PANEL INSTRUMENT	.102
PANEL INSTRUMENT	.103
PANEL LIGHT INSTRUMENT	.193
PANEL LIGHT INSTRUMENT	.194
PANEL LIGHT INSTRUMENT	.195
PANEL REMOVABLE	.105
PANEL REMOVABLE	.106
PANEL SHOCK	.102
PANEL SHOCK	.103
PANEL SHOCK	.104
PANEL SHOCK	.105
PANEL SHOCK	.106
PANEL SHOCK MOUNTED	.101
PANEL SHOCK MOUNTED INSTRUMENT	.101
PANEL SOUNDPROOFING	86
PANEL STATIONARY	99
PANEL STATIONARY	.100
PANEL STATIONARY	.102
PANEL STATIONARY	.103
PANEL STATIONARY	.104
PANEL STATIONARY	.105
PANEL STATIONARY	.106
PANEL STATIONARY COVER	99
PANEL STATIONARY COVER	.100
PANEL UPHOLSTERY	72
PANEL UPHOLSTERY	73
PANEL UPHOLSTERY	74
PANEL UPHOLSTERY	75
PANEL UPHOLSTERY	76
PARKING BRAKE	.142
PARKING BRAKE	.143
PARKING BRAKE	.144
PARKING BRAKE CHAIN LINK	.142
PARKING BRAKE CONTROL	99
PARKING BRAKE CONTROL	.100
PARKING BRAKE CONTROL	.142
PARKING BRAKE HANDLE	.142
PARKING BRAKE HANDLE	.143
PARKING BRAKE HANDLE	.144
PARKING BRAKE SPRING	.146
PAWL SEAT ADJUSTMENT	87
PAWL SEAT ADJUSTMENT	90
PAWL SEAT BACK	88
PAWL SEAT BACK	89
PAWL SEAT BACK	96
PEDAL BRAKE	.145
PEDAL BRAKE & RUDDER	.145
PEDAL RUDDER	.145
PEDESTAL	93
PEDESTAL	94
PILOT & CO PILOT SEAT	87
PILOT & CO PILOT SEAT	88
PILOT & CO PILOT SEAT	89
PILOT SEAT	87
PILOT SEAT	88
PILOT SEAT	89
PILOT SEAT	91
PILOTS CHECK LIST	3
PIN BASE PLUG	57
PIN BASE PLUG	58

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
P (Cont)	
PIN METERING	57
PIN METERING	58
PIN SEAT ADJUSTMENT	87
PIN SEAT ADJUSTMENT	88
PIN SEAT ADJUSTMENT	90
PISTON MASTER CYLINDER	.146
PITOT HEAT SWITCH	.103
PITOT HEAT SWITCH	.104
PITOT HEAT SWITCH	.105
PITOT HEAT SWITCH KNOB	.103
PITOT LINE	.161
PITOT SYSTEM	.161
PITOT TUBE	11
PITOT TUBE	.161
PLACARDS SEE FIG 2	
PLATE BAGGAGE DOOR LATCH	80
PLATE BAGGAGE DOOR LATCH	81
PLATE KICK	84
PLATE M.A.A. NAME	27
PLATE OIL COOLER	.137
PLATE PRESSURE	70
PLATE PRESSURE	71
PLATE SCUFF	80
PLATE SCUFF	81
PLATE STRIKE	44
PLATE STRIKE	49
PLATE STRIKER	72
PLATE STRIKER	73
PLATE STRIKER	76
PLUG HEATING	99
PLUG HEATING	.100
PLUG HEATING	.102
PLUG PIN BASE	57
PLUG PIN BASE	58
PLUG SPARK	.125
PLUG SPARK	.126
PLUG SPARK	.127
PLUG SPARK	.128
POCKET MAGAZINE	87
POCKET MAGAZINE	88
POCKET MAGAZINE	90
POCKET MAGAZINE	91
POCKET MAGAZINE	93
POINT JACK	.108
PORTABLE STRETCHER	.109
POSITION TRANSMITTER FLAP	.159
POWER RELAY	.190
POWER RELAY	.191
POWER SEAT	92
POWER SUPPLY STROBE LIGHT	.191
PRESSURE GAGE MANIFOLD	.186
PRESSURE PLATE	70
PRESSURE PLATE	71
PRESSURE SWITCH OIL	.125
PRIMER	1
PRIMER	99
PRIMER	.100
PRIMER	.102
PRIMER	.103
PRIMER	.104
PRIMER DISTRIBUTOR	.174
PRIMER ENGINE	.105
PRIMER ENGINE	.165
PRIMER ENGINE	.166
PRIMER FUEL	.173
PRIMER KNOB	99
PRIMER KNOB	.100
PRIMER KNOB	.102

NOMENCLATURE	FIGURE
P (Cont)	
PRIMER KNOB	.103
PRIMER KNOB	.104
PRIMER KNOB	.165
PRIMER KNOB	.166
PRIMER LINE	.122
PRIMER LINE	.124
PRIMER LINE	.166
PRIMER LINE	.167
PRIMER LINE	.168
PRIMER LINE	.174
PRIMER THREE CYLINDER FUEL	.173
PRIMER ZINC CHROMATE	1
PRIMING SYSTEM SIX CYLINDER	.174
PROPELLER	.111
PROPELLER	.112
PROPELLER	.113
PROPELLER	.114
PROPELLER	.187
PROPELLER CONTROL	.100
PROPELLER GOVERNOR	.126
PROPELLER GOVERNOR	.129
PROPELLER GOVERNOR	.130
PROPELLER PITCH CONTROL	.124
PROVISIONS HOISTING	.187
PULLEYS-SEE APPLICABLE SYSTEM	
PUMP FUEL	.128
PUMP VACUUM	.128
PUMP VACUUM	.180
PUMP VACUUM	.181
PUMP VACUUM	.184
PUMP VACUUM	.185
PUSH ROD DOOR LATCH	78
R	
RADIO COVER	.103
RADIO COVER	.104
RADIO COVER	.105
RADIO COVER	.106
RADIO CUTOUT COVER	.102
RADIO SHELF	49
RADIOS-SEE CESSNA ELECTRONICS MANUAL	
REAR ARM REST SUPPORT	49
REAR SEAT	95
REAR SEAT	96
REAR SEAT BACK	95
REAR SEAT BELT	95
REAR SEAT BOTTOM	95
REAR SEAT COVER	95
REAR SEAT VENTS	.138
REAR SPAR	12
REAR SPAR	24
REAR VIEW MIRROR	.108
REAR WINDOW	49
REAR WINDOW MOULDING	82
REAR WINDOW MOULDING	83
REAR WINDOW RETAINER	49
REAR WINDOW SEALER	49
RECEIVER ASH	87
RECEIVER ASH	88
RECEIVER ASH	90
RECEIVER ASH	91
RECEIVER ASH	93
RECEIVER SEAT BACK ASH	87
RECEIVER SEAT BACK ASH	88
RECEIVER SEAT BACK ASH	90

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
R (Cont)	
RECEPTACLE GROUND SERVICE PLUG	.190
RECEPTACLE GROUND SERVICE PLUG	.191
RECEPTACLE GROUND SERVICE PLUG	.192
RECEPTACLE GROUND SERVICE PLUG	.205
RECLINING ADJUSTMENT HANDLE	87
RECLINING ADJUSTMENT HANDLE	88
RECLINING ADJUSTMENT HANDLE	89
RECLINING ADJUSTMENT HANDLE	90
RECORDING TACHOMETER	99
RECORDING TACHOMETER	.100
REFLECTOR	.193
REFLECTOR	.194
REFLECTOR	.195
REGULATOR VOLTAGE	.127
REGULATOR VOLTAGE	.128
REGULATOR VOLTAGE	.190
REGULATOR VOLTAGE	.191
REGULATOR VOLTAGE	.192
RELAY POWER	.190
RELAY POWER	.191
RELAY SPLIT BUS BAR	.191
RELIEF VALVE	.129
RELIEF VALVE	.179
RELIEF VALVE	.180
RELIEF VALVE	.181
RELIEF VALVE	.182
RELIEF VALVE	.183
RELIEF VALVE	.184
RELIEF VALVE	.185
RELIEF VALVE FILTER	.180
RELIEF VALVE FILTER	.181
REMOVABLE PANEL	.105
REMOVABLE PANEL	.106
RESISTOR	.105
RESISTOR	.106
RESISTOR	.201
RESTRICTOR VALVE	.152
RESTRICTOR VALVE	.153
RETAINER COMPASS CARD	.101
RETAINER COMPASS CARD	.102
RETAINER HEADLINER	28
RETAINER HEADLINER	29
RETAINER HEADLINER	83
RETAINER INSTRUMENT PANEL COVER	82
RETAINER REAR WINDOW	49
RETAINER SEAT BOTTOM	87
RETAINER SEAT BOTTOM	88
RETAINER SEAT BOTTOM	89
RETAINER SEAT BOTTOM	91
RETAINER WINDOW	74
RETAINER WINDOW	75
RETAINER WINDSHIELD	34
RETAINER WINDSHIELD	35
RETAINER WINDSHIELD TOP	28
RETAINER WINDSHIELD TOP	29
RETAINER WINDSHIELD TOP	30
RETAINER WINDSHIELD TOP	48
RHEOSTAT	.101
RHEOSTAT	.193
RIBS-SEE APPLICABLE STRUCTURE	
RIGHT WING STRUCTURE	6
RIGHT WING STRUCTURE	7
RIGHT WING STRUCTURE	8
RIGHT WING STRUCTURE	9
RING MOORING	21
RING TRUE AIRSPEED	.102
RING TRUE AIRSPEED	.103
RING TRUE AIRSPEED	.104
RING TRUE AIRSPEED	.105
RING TRUE AIRSPEED	.106
RIVET SET KIT	71
ROD AILERON PUSH PULL	19
ROD AILERON PUSH PULL	.149
ROD AILERON PUSH PULL	.150
ROD DOOR LATCH PUSH	78
ROD FLAP PUSH	20
ROD FLAP PUSH PULL	20
ROLLER FLAP ATTACHMENT	20
ROLLER KIT SEAT	93
ROTARY CLUTCH	49
ROTATING BEACON	.200
ROTATING BEACON TIP	.200
RUBBER SHOCK MOUNT	.124
RUDDER	23
RUDDER	.188
RUDDER BAR SHIELD	84
RUDDER BAR SHIELD	85
RUDDER CONTROL SYSTEM	.160
RUDDER LIGHT	23
RUDDER PEDAL	.145
RUDDER TIP	23
RUDDER WEIGHT	23
S	
SAFETY BELT	95
SAFETY BELT	97
SAFETY BELT	98
SAFETY BELT	.108
SAFETY BELT FRONT SEAT	.108
SAFETY BELT-ALSO SEE SEAT BELTS	
SCOOP AIR	11
SCOOP AIR	.115
SCOOP AIR	.116
SCOOP AIR	.117
SCOOP AIR	.118
SCOOP AIR	.119
SCOOP AIR	.120
SCOOP AIR	.121
SCOOP CABIN AIR VENT	10
SCRAPER FAIRING	67
SCRAPER FAIRING	68
SCRAPER WHEEL FAIRING	68
SCREEN VENT	82
SCUFF PLATE	80
SCUFF PLATE	81
SEAL BAFFLE	.134
SEAL BAFFLE	.135
SEAL CARBURETOR AIR FILTER	.123
SEAL CARBURETOR AIR FILTER	.125
SEAL FELT GREASE	60
SEAL FELT GREASE	61
SEAL FELT GREASE	62
SEAL FELT GREASE	63
SEAL FELT GREASE	71
SEAL LANDING GEAR	67
SEAL LANDING GEAR FILLET	67
SEAL WINDOW	49
SEALANT	1
SEALER REAR WINDOW	49
SEAT AUXILIARY	97
SEAT AUXILIARY	98
SEAT BACK CAM	91
SEAT BACK CAM	95

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
S(Cont)	
SEAT BACK COVERS-SEE APPLICABLE SEAT	
SEAT BACK CUSHION-SEE APPLICABLE SEAT	
SEAT BACK HEADREST	88
SEAT BACK HEADREST	90
SEAT BACK HEADREST	95
SEAT BACK HEADREST	96
SEAT BACK PAWL	88
SEAT BACK PAWL	89
SEAT BACK PAWL	96
SEAT BACK-SEE INDIVIDUAL SEAT	
SEAT BELT	88
SEAT BELT FITTING	87
SEAT BELT FITTING	88
SEAT BELT FITTING	89
SEAT BELT REAR	108
SEAT BOTTOM-SEE INDIVIDUAL SEAT	
SEAT CO PILOT	91
SEAT FRONT	93
SEAT FRONT	94
SEAT PILOT	87
SEAT PILOT	88
SEAT PILOT	89
SEAT PILOT	91
SEAT PILOT & CO PILOT	87
SEAT PILOT & CO PILOT	88
SEAT PILOT & CO PILOT	89
SEAT POWER	92
SEAT RAIL INBOARD	28
SEAT RAIL INBOARD	29
SEAT RAIL OUTBOARD	28
SEAT RAIL OUTBOARD	29
SEAT REAR	95
SEAT REAR	96
SEAT ROLLER KIT	87
SEAT ROLLER KIT	88
SEAT ROLLER KIT	89
SEAT ROLLER KIT	90
SEAT ROLLER KIT	92
SEAT STOP	87
SEAT STOP	88
SEAT STOP	89
SEAT STOP	90
SEAT STOP	91
SEAT STOP	93
SEAT STOP	94
SEAT STOP-SEE INDIVIDUAL SEAT INSTALLATION	
SEAT VERTICALLY ADJUSTABLE	90
SENSITIVE ALTIMETER	103
SENSITIVE ALTIMETER	104
SENSITIVE ALTIMETER	105
SENSOR OVERVOLTAGE	191
SEPARATOR OIL	180
SEPARATOR OIL	181
SEPARATOR OIL	182
SEPARATOR OIL	183
SEPARATOR OIL	184
SERVICE PLUG GROUND	190
SERVICE PLUG GROUND	191
SERVICE PLUG GROUND	192
SERVICE PLUG GROUND	205
SERVO AILERON	151
SET KIT RIVET	71
SHAFT DOOR HANDLE	72
SHAFT DOOR HANDLE	74
SHAFT DOOR LATCH	78
SHAFT FUEL SELECTOR	165
SHAFT FUEL SELECTOR	166
SHAFT FUEL SELECTOR	167

NOMENCLATURE	FIGURE
S(Cont)	
SHAFT FUEL SELECTOR	168
SHAFT FUEL SELECTOR VALVE	165
SHAFT TACHOMETER	123
SHAFT TACHOMETER DRIVE	99
SHAFT TACHOMETER DRIVE	100
SHAFT TACHOMETER DRIVE	102
SHAFT TACHOMETER DRIVE	103
SHAFT TACHOMETER DRIVE	104
SHAFT TACHOMETER DRIVE	105
SHAFT TACHOMETER DRIVE	106
SHELF BAGGAGE	82
SHELF BAGGAGE	83
SHELF RADIO	49
SHIELD CONTROL TEE	84
SHIELD COURTESY LIGHT	199
SHIELD DOORPOST	83
SHIELD MASTER SOLENOID	190
SHIMMY DAMPENER	64
SHIMMY DAMPENER	65
SHIMMY DAMPENER	66
SHOCK MOUNT	40
SHOCK MOUNT	41
SHOCK MOUNT	101
SHOCK MOUNT	103
SHOCK MOUNT	104
SHOCK MOUNT	126
SHOCK MOUNT KIT	123
SHOCK MOUNT RUBBER	124
SHOCK MOUNTED INSTRUMENT PANEL	101
SHOCK MOUNTED PANEL	101
SHOCK MOUNTED PANEL COVER	101
SHOCK PANEL	102
SHOCK PANEL	103
SHOCK PANEL	104
SHOCK PANEL	105
SHOCK PANEL	106
SHOCK PANEL COVER	102
SHOCK PANEL COVER	103
SHOCK PANEL COVER	104
SHOCK PANEL COVER	105
SHOCK PANEL COVER	106
SHOCK STRUT LOWER	57
SHOCK STRUT NOSE GEAR	57
SHOULDER HARNESS	108
SHOULDER HARNESS HOOK	108
SHROUD	123
SHROUD	131
SHROUD	132
SHROUD	141
SHROUD	203
SHROUD FUEL STRAINER	166
SIDE AIR VENT DOOR	138
SIDE AIR VENT DOOR	139
SIDE BAFFLE	133
SIDE BAFFLE	136
SIDE WINDOW	49
SILENCER ESCUTCHEON	139
SILENCER FRESH AIR	139
SILENCER FRESH AIR VENT	139
SILENCER KNOB	139
SILL DOOR	28
SILL DOOR	29
SILL DOOR	30
SKINS & STRINGERS	14
SKINS & STRINGERS	15
SKINS-SEE APPLICABLE STRUCTURE	
SKYLIGHT WINDOW	30
SLANT LETTERS & NUMERALS STENCILS	3

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
S (Cont)	
SLIDE CARGO TIE DOWN	.108
SOUND DEADENER	1
SOUNDPROOFING FUSELAGE	86
SOUNDPROOFING PANEL	86
SPACER AXLE	55
SPACER AXLE	56
SPACER AXLE NOSE WHEEL	55
SPACER FUEL TANK	12
SPACER FUEL TANK	13
SPAR CENTER SECTION	44
SPAR CENTER SECTION	45
SPAR FRONT	24
SPAR OUTBOARD AUXILIARY	12
SPAR REAR	12
SPAR REAR	24
SPAR WING	13
SPAR WING FRONT	12
SPAR WING REAR	12
SPAR WING REAR	13
SPARK PLUG	.125
SPARK PLUG	.126
SPARK PLUG	.127
SPARK PLUG	.128
SPARS WING	12
SPARS WING	13
SPEAKER COVER	83
SPEAKER-RADIO-SEE CESSNA ELECTRONICS MANUAL	
SPEED FAIRING	55
SPEED FAIRING	67
SPEED FAIRING MAIN LANDING GEAR	67
SPEED FAIRING NOSE GEAR	55
SPINNER	.111
SPINNER	.112
SPINNER	.113
SPINNER	.114
SPINNER DOME	.112
SPLIT BUS BAR RELAY	.191
SPOTLIGHT	.202
SPROCKET AILERON CHAIN	.147
SPROCKET TAB CONTROL	.156
STABILIZER	24
STABILIZER HINGE	24
STABILIZER MOULDING	24
STABILIZER TIP	24
STACK EXHAUST	.131
STACK LH EXHAUST	.131
STAINLESS STEEL CABLES-SEE SPECIFIC SYSTEM	
STALL WARNING HORN	99
STALL WARNING HORN	.100
STALL WARNING HORN	.102
STALL WARNING HORN	.162
STALL WARNING HORN	.190
STALL WARNING HORN	.192
STALL WARNING HORN BRACKET	99
STALL WARNING HORN BRACKET	.100
STALL WARNING HORN BRACKET	.102
STARTER	.127
STARTER	.128
STARTER CONTACTOR	.127
STARTER CONTACTOR	.190
STARTER CONTACTOR	.191
STARTER CONTACTOR CABLE	.191
STARTER CONTROL	99
STARTER CONTROL	.102
STARTER CONTROL	.103
STARTER CONTROL	.122
STARTER CONTROL TUBE	.122
STATIC SOURCE ALTERNATE	.161

NOMENCLATURE	FIGURE
S (Cont)	
STATIC SOURCE BUTTON	33
STATIC SOURCE BUTTON	.161
STATIC SOURCE FLANGE	31
STATIC SOURCE WASHER	31
STATIONARY COVER PANEL	99
STATIONARY COVER PANEL	.100
STATIONARY INSTRUMENT PANEL	99
STATIONARY INSTRUMENT PANEL	.100
STATIONARY INSTRUMENT PANEL EQUIPMENT	99
STATIONARY INSTRUMENT PANEL EQUIPMENT	.100
STATIONARY PANEL	99
STATIONARY PANEL	.100
STATIONARY PANEL	.102
STATIONARY PANEL	.103
STATIONARY PANEL	.104
STATIONARY PANEL	.105
STATIONARY PANEL	.106
STATIONARY PANEL COVER	.102
STATIONARY PANEL COVER	.103
STATIONARY PANEL COVER	.104
STATIONARY PANEL COVER	.105
STEERING LINK	31
STEERING LINK BOOT	31
STEERING LINK BOOT	32
STEERING LINK BOOT	33
STENCILS	2
STENCILS	3
STENCILS SLANT LETTERS & NUMERALS	3
STENCILS VERTICAL LETTERS & NUMERALS	2
STENCILS VERTICAL LETTERS & NUMERALS	3
STEP	67
STEP	68
STEP	.110
STEP & HANDLE REFUELING	.110
STEP STRUT	.110
STOP BAGGAGE DOOR	49
STOP DOOR CATCH	6
STOP DOOR CATCH	8
STOP SEAT	87
STOP SEAT	88
STOP SEAT	89
STOP SEAT	90
STOP SEAT	91
STOP SEAT	93
STOP SEAT	94
STRAINER CONTROL	.102
STRAINER CONTROL	.125
STRAINER DRAIN CONTROL	99
STRAINER DRAIN CONTROL	.100
STRAINER DRAIN CONTROL	.103
STRAINER DRAIN CONTROL	.169
STRAINER DRAIN CONTROL	.170
STRAINER DRAIN LINE	.167
STRAINER DRAIN LINE	.168
STRAINER FUEL	.169
STRAINER FUEL	.170
STRAINER FUEL TANK	.165
STRAINER FUEL TANK	.166
STRAINER FUEL TANK	.167
STRAINER FUEL TANK	.168
STRAP ASSIST	82
STRAP ASSIST	83
STRAP BATTERY GROUND	.190
STRAP BATTERY GROUND	.191
STRAP BATTERY GROUND	.192
STRAP BONDING	.125
STRAP ENGINE MOUNT BONDING	.125
STRAP FUEL TANK	6

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
S (Cont)	
STRAP FUEL TANK	7
STRAP FUEL TANK	8
STRAP FUEL TANK	9
STRAP FUEL TANK	16
STRAP FUEL TANK	17
STRAP GROUND	16
STRAP GROUND	17
STRAP GROUND	.101
STRAP GROUND	.102
STRAP GROUND	.103
STRAP GROUND	.104
STRAP GROUND	.105
STRAP GROUND	.106
STRAP GROUND	.124
STRAP GROUND	.126
STRAP GROUND	.190
STRAP GROUND	.191
STRAP GROUND	.192
STRAP GROUND	.205
STRETCHER PORTABLE	.109
STRIKE PLATE	44
STRIKE PLATE	49
STRIKER PLATE	72
STRIKER PLATE	73
STRIKER PLATE	76
STRIP ASBESTOS	31
STROBE LIGHT	4
STROBE LIGHT SWITCH	.105
STRUT	21
STRUT FITTING	12
STRUT FITTING	13
STRUT FITTING	21
STRUT LOWER SHOCK	57
STRUT NOSE GEAR SHOCK	57
STRUT STEP	.110
SUCTION GAGE	99
SUCTION GAGE	.100
SUCTION GAGE	.102
SUCTION GAGE	.103
SUCTION GAGE	.104
SUCTION GAGE	.105
SUCTION GAGE	.106
SUCTION GAGE	.176
SUCTION GAGE	.177
SUCTION GAGE	.179
SUCTION GAGE	.180
SUCTION GAGE	.181
SUCTION GAGE	.183
SUCTION GAGE	.184
SUCTION GAGE	.185
SUCTION RELIEF VALVE	.177
SUN VISOR	.108
SWITCH COVER	99
SWITCH COVER	.100
SWITCH COVER	.102
SWITCH COVER	.103
SWITCH COVER	.106
SWITCH DOME LIGHT	.194
SWITCH DOME LIGHT	.195
SWITCH FLAP	.102
SWITCH FLAP	.103
SWITCH FLAP	.104
SWITCH FLAP	.105
SWITCH FLAP	.106
SWITCH FLAP	.159
SWITCH FLASHING BEACON	.103
SWITCH FLASHING BEACON	.105
SWITCH FUEL TRANSFER	.172

NOMENCLATURE	FIGURE
S (Cont)	
SWITCH IGNITION	99
SWITCH IGNITION	.102
SWITCH LANDING LIGHT	99
SWITCH LANDING LIGHT	.100
SWITCH LANDING LIGHT	.102
SWITCH LANDING LIGHT	.103
SWITCH LANDING LIGHT	.105
SWITCH MAP LIGHT	.202
SWITCH MASTER	99
SWITCH MASTER	.100
SWITCH MASTER	.102
SWITCH MASTER	.103
SWITCH MASTER	.104
SWITCH MASTER	.105
SWITCH MASTER	.106
SWITCH MIKE	.148
SWITCH NAV LIGHT	.105
SWITCH NAVIGATION LIGHT	99
SWITCH NAVIGATION LIGHT	.100
SWITCH NAVIGATION LIGHT	.103
SWITCH NAVIGATION LIGHT	.104
SWITCH OIL PRESSURE	.123
SWITCH PANEL COVER	.106
SWITCH PITOT HEAT	.103
SWITCH PITOT HEAT	.104
SWITCH PITOT HEAT	.105
SWITCH STROBE LIGHT	.105
SWITCH VACUUM	.180
SWITCH VACUUM	.181
SWITCHES-SEE INSTRUMENT PANEL	
SYSTEMS-SEE INDIVIDUAL LISTINGS	
T	
TAB CONTROL CHAIN	.156
TAB CONTROL CHAIN	.157
TAB CONTROL COVER	36
TAB CONTROL COVER	.156
TAB CONTROL SPROCKET	.156
TAB CONTROL WHEEL	.156
TAB CONTROL WHEEL	.157
TAB CONTROL WHEEL COVER	.156
TAB ELEVATOR TRIM	26
TAB POSITION INDICATOR DECAL	.156
TAB WHEEL CABLE	.156
TAB WHEEL CABLE	.157
TACHOMETER	.102
TACHOMETER	.103
TACHOMETER	.104
TACHOMETER	.105
TACHOMETER	.106
TACHOMETER	.127
TACHOMETER DRIVE SHAFT	99
TACHOMETER DRIVE SHAFT	.100
TACHOMETER DRIVE SHAFT	.102
TACHOMETER DRIVE SHAFT	.103
TACHOMETER DRIVE SHAFT	.104
TACHOMETER DRIVE SHAFT	.105
TACHOMETER DRIVE SHAFT	.106
TACHOMETER RECORDING	99
TACHOMETER RECORDING	.100
TACHOMETER SHAFT	.123
TAIL LIGHT LAMP	23
TAILCONE FAIRING	52
TAILCONE FUSELAGE	52
TAILPIPE	.131

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
T (Cont)	
TANK DRAIN VALVE FUEL	18
TANK FUEL	5
TANK FUEL	16
TANK FUEL	17
TANK FUEL	18
TANK FUEL	.172
TEE CONTROL	.147
THERMOCOUPLE LEAD	.100
THROTTLE CONTROL	99
THROTTLE CONTROL	.100
THROTTLE CONTROL	.102
THROTTLE CONTROL	.103
THROTTLE CONTROL	.104
THROTTLE CONTROL	.105
THROTTLE CONTROL	.106
THROTTLE CONTROL	.122
THROTTLE CONTROL	.124
THUMB LATCH	74
THUMB LATCH	79
THUMB LATCH KNOB	74
THUMB LATCH SPRING	79
TIARA	82
TIARA	83
TIP ELEVATOR	26
TIP FIN	.201
TIP ROTATING BEACON	.200
TIP RUDDER	23
TIP STABILIZER	24
TIP VERTICAL FIN	22
TIP WING	6
TIP WING	7
TIP WING	8
TIP WING	9
TIRE	59
TIRE	60
TIRE	61
TIRE	63
TIRE	69
TIRE	70
TIRE	71
TIRE EXPANDER	.108
TIRE TUBE TYPE	62
TOP CABIN	28
TOP CABIN	29
TOP CABIN	30
TOP FUEL STRAINER	.169
TOP FUEL STRAINER	.170
TORQUE LINK LOWER	57
TORQUE LINK LOWER	58
TORQUE LINK UPPER	57
TORQUE LINK UPPER	58
TORQUE TUBE BELLCRANK	94
TORQUE TUBE ELEVATOR	26
TOW BAR	.108
TOW HOOK CORD	.108
TOW HOOK GLIDER	.108
TRANSISTORIZED LIGHT DIMMING	.191
TRANSMITTER FLAP POSITION	.159
TRANSMITTER FUEL GAGE	16
TRANSMITTER FUEL GAGE	17
TRIM CONTROL ELEVATOR	.156
TRIM CONTROL ELEVATOR	.157
TRIM CONTROL SYSTEM ELEVATOR	.156
TRIM CONTROL SYSTEM ELEVATOR	.157
TRIM TAB ACTUATOR ELEVATOR	25
TRIM TAB ELEVATOR	25
TRIM TAB ELEVATOR	26
TRIM TAB HORN	26

NOMENCLATURE	FIGURE
T (Cont)	
TRUE AIRSPEED INDICATOR	.102
TRUE AIRSPEED INDICATOR	.103
TRUE AIRSPEED INDICATOR	.104
TRUE AIRSPEED INDICATOR	.105
TRUE AIRSPEED INDICATOR	.106
TRUE AIRSPEED RING	.102
TRUE AIRSPEED RING	.103
TRUE AIRSPEED RING	.104
TRUE AIRSPEED RING	.105
TRUE AIRSPEED RING	.106
TUBE AILERON CARRY THRU	.149
TUBE BLAST	.125
TUBE BLAST	.133
TUBE BLAST	.187
TUBE CONTROL	.122
TUBE CONTROL	.147
TUBE CONTROL	.148
TUBE ELEVATOR TORQUE	26
TUBE GENERATOR BLAST	.136
TUBE PITOT	11
TUBE PITOT	.161
TUBE POLYETHYLENE	1
TUBE POLYETHYLENE	.161
TUBE SHOCK STRUT	57
TUBE SHOCK STRUT	58
TUBE STARTER CONTROL	.122
TUBE TYPE TIRE	62
TUNNEL CARPET	84
TUNNEL CARPET	85
TUNNEL COMPONENTS FRONT SECTION	37
TUNNEL FUSELAGE	36
TURN & BANK INDICATOR	.101
TURN & BANK INDICATOR	.102
TURN & BANK INDICATOR	.103
TURN & BANK INDICATOR	.104
TURN & BANK INDICATOR	.105
TURN & BANK INDICATOR	.106
TURN COORDINATOR	.103
TURN COORDINATOR	.104
TURN COORDINATOR	.105
TURN COORDINATOR INDICATOR	.106
TURN COORDINATOR INDICATOR	.152
TURN COORDINATOR INDICATOR	.153
TWIN PACK BEVERAGE	.108
U	
UNIVERSAL JOINT	.147
UNIVERSAL JOINT	.148
UPHOLSTERY CABIN	84
UPHOLSTERY CABIN	85
UPHOLSTERY CABIN TOP	82
UPHOLSTERY CABIN TOP	83
UPHOLSTERY CABIN TOP & FIREWALL	82
UPHOLSTERY CABIN TOP & FIREWALL	83
UPHOLSTERY PANEL	72
UPHOLSTERY PANEL	73
UPHOLSTERY PANEL	74
UPHOLSTERY PANEL	75
UPHOLSTERY PANEL	76
UPPER COWL	.115
UPPER COWL	.116
UPPER COWL	.117
UPPER COWL	.119
UPPER COWL	.120
UPPER COWL	.121

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE

U (Cont)

UPPER COWL DOOR	.119
UPPER COWL DOOR	.120

V

VACUUM LIGHTS TEST PLACARD	2
VACUUM PUMP	.128
VACUUM PUMP	.180
VACUUM PUMP	.181
VACUUM PUMP	.184
VACUUM PUMP	.185
VACUUM SWITCH	.180
VACUUM SWITCH	.181
VACUUM SYSTEM	.180
VACUUM SYSTEM	.181
VACUUM SYSTEM	.182
VACUUM SYSTEM	.183
VACUUM SYSTEM	.184
VACUUM SYSTEM	.185
VACUUM SYSTEM ENGINE DRIVEN	.180
VACUUM SYSTEM ENGINE DRIVEN	.181
VACUUM SYSTEM ENGINE DRIVEN	.182
VACUUM SYSTEM ENGINE DRIVEN	.183
VALVE CHECK	.172
VALVE DRAIN	.169
VALVE DRAIN	.172
VALVE EXTENSION	55
VALVE EXTENSION	67
VALVE EXTENSION	68
VALVE FLUSH	18
VALVE FUEL	16
VALVE FUEL	17
VALVE FUEL SELECTOR	.166
VALVE FUEL SELECTOR	.171
VALVE FUEL TANK VENT	16
VALVE FUEL TANK VENT	17
VALVE OIL QUICK DRAIN	.123
VALVE OIL QUICK DRAIN	.125
VALVE RELIEF	.129
VALVE RELIEF	.179
VALVE RELIEF	.180
VALVE RELIEF	.181
VALVE RELIEF	.182
VALVE RELIEF	.183
VALVE RELIEF	.184
VALVE RELIEF	.185
VALVE RESTRICTOR	.152
VALVE RESTRICTOR	.153
VALVE SUCTION RELIEF	.177
VALVE VENT	.138
VALVE WARM AIR	.140
VALVE WARM AIR	.141
VENT AIR	.139
VENT GRILL	82
VENT GRILL	83
VENT LINE	16
VENT LINE	17
VENT LINE	.165
VENT LINE	.166
VENT LINE	.167
VENT LINE	.168
VENT SCREEN	82
VENT VALVE	.138
VENTILATION SYSTEM CABIN	.138
VENTILATION SYSTEM CABIN	.139
VENTURI & GYROS SYSTEM	.176

NOMENCLATURE	FIGURE

V (Cont)

VENTURI & GYROS SYSTEM	.177
VENTURI & GYROS SYSTEM	.178
VERTICAL FIN TIP	22
VERTICAL LETTERS & NUMERALS STENCILS	2
VERTICAL LETTERS & NUMERALS STENCILS	3
VERTICAL SPEED INDICATOR	.101
VERTICAL SPEED INDICATOR	.102
VERTICAL SPEED INDICATOR	.103
VERTICAL SPEED INDICATOR	.104
VERTICAL SPEED INDICATOR	.105
VERTICAL SPEED INDICATOR	.106
VERTICAL SPEED INDICATOR	.161
VERTICALLY ADJUSTABLE SEAT	90
VIEW MIRROR REAR	.108
VISOR SUN	.108
VOLTAGE REGULATOR	.127
VOLTAGE REGULATOR	.128
VOLTAGE REGULATOR	.190
VOLTAGE REGULATOR	.191
VOLTAGE REGULATOR	.192

W

WARM AIR VALVE	.140
WARM AIR VALVE	.141
WARNING HORN STALL	.162
WASHER STATIC SOURCE	31
WEIGHT AILERON BALANCE	19
WEIGHT ELEVATOR BALANCE	26
WEIGHT RUDDER	23
WHEEL & BRAKE	69
WHEEL & BRAKE	70
WHEEL & BRAKE	71
WHEEL & BRAKE MAIN LANDING GEAR	69
WHEEL & BRAKE MAIN LANDING GEAR	70
WHEEL & BRAKE MAIN LANDING GEAR	71
WHEEL CONTROL	.147
WHEEL CONTROL	.148
WHEEL FAIRING	67
WHEEL FAIRING	68
WHEEL FAIRING SCRAPER	68
WHEEL FAIRING SUPPORT NUT	67
WHEEL MAIN GEAR	70
WHEEL MAIN GEAR	71
WHEEL MAIN LANDING GEAR	69
WHEEL NOSE GEAR	59
WHEEL NOSE GEAR	60
WHEEL NOSE GEAR	61
WHEEL NOSE GEAR	62
WHEEL TAB CONTROL	.156
WHEEL TAB CONTROL	.157
WINDOW	.196
WINDOW DOOR	72
WINDOW DOOR	73
WINDOW DOOR	76
WINDOW FRAME	72
WINDOW FRAME	73
WINDOW FRAME	76
WINDOW GLASS	72
WINDOW GLASS	73
WINDOW GLASS	74
WINDOW GLASS	75
WINDOW GLASS	76
WINDOW HANDLE	72
WINDOW HANDLE	76
WINDOW HINGE	72

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE

W (Cont)

WINDOW HINGE	73
WINDOW HINGE	76
WINDOW LANDING LIGHT	196
WINDOW LATCH HANDLE	72
WINDOW LATCH HANDLE	73
WINDOW MOULDING	82
WINDOW MOULDING	83
WINDOW REAR	49
WINDOW SEAL	49
WINDOW SIDE	49
WINDOW SKYLIGHT	30
WINDSHIELD	48
WINDSHIELD RETAINER	34
WINDSHIELD RETAINER	35
WINDSHIELD TOP RETAINER	28
WINDSHIELD TOP RETAINER	29
WINDSHIELD TOP RETAINER	30
WINDSHIELD TOP RETAINER	48
WING	4
WING COMPLETE	4
WING FAIRING	4
WING FILLET	27
WING FRONT SPAR	12
WING LEVELER	151
WING LEVELER COMPONENTS	152
WING LEVELER COMPONENTS	153
WING POSITION LIGHT	4
WING POSITION LIGHT BULB	4
WING REAR SPAR	12
WING REAR SPAR	13
WING ROOT RIB	6
WING ROOT RIB	8
WING SPAR	13
WING SPAR FITTING	12
WING SPARS	12
WING SPARS	13
WING TIP	6
WING TIP	7
WING TIP	8
WING TIP	9
WING UNIT STALL WARNING	4
WINTERIZATION EQUIPMENT	137
WINTERIZATION PLACARD	2
WINTERIZATION PLACARD	3
WINTERIZATION PLACARD	106
WINTERIZATION PLACARD	137
WIRE HEADLINER	82
WRENCH ADAPTER OIL FILTER	163

Y

YOKE CONTROL	148
YOKE NOSE GEAR	58

This page intentionally left blank.

PARTS LISTING

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7		UNITS PER ASSY	USABLE ON CODE
1 -		MISCELLANEOUS BULK ITEMS ----------		AR	
- 1	C1-C2	CONLEY-WELD EPOXY BASE ADHESIVE.	CEMENTING ---------- PLASTIC TO PLASTIC PLASTIC TO METAL FIBERGLASS TO FIBERGLASS FIBERGLASS TO METAL METAL TO METAL		
- 2	EC880	ADHESIVE-SYNTHETIC RUBBER BASE OIL RESISTANT	CEMENTING ---------- RUBBER TO METAL SOUNDPROOFING TO METAL UPHOLSTERY TO METAL		
- 3	1024A-B	CEMENT PARTS A & B	CEMENTING DE-ICER ---------- AND ABRASION BOOTS TO WING AND STAB- ILIZER LEADING EDGES.		
- 4	1007	PRIMER	USED ONLY FOR PRIMING -------- AREAS WHERE DE-ICER AND ABRASION BOOTS ARE TO BE INSTALLED WITH 1024A-B.		
- 5	576.1	SEALANT-EXTRUDED	WEATHER SEALING ---------- OF METAL LAP JOINTS		
- 6	579.6	SEALANT-EXTRUDED	WEATHER SEALING ---------- OF WINDOWS		
- 7	S1078-1	SEALANT-SYNTHETIC RUBBER-FABRIC REINFORCED .06 THICK .50 WIDE	WINDSHIELD SEALING ----------		
- 8	S1078-2	SEALANT-SYNTHETIC RUBBER-FABRIC REINFORCED .12 THICK .50 WIDE	WINDSHIELD SEALING ----------		
- 9	S1078-3	SEALANT-SYNTHETIC RUBBER-FABRIC REINFORCED 2 MIL MYLAR TAPE BACKING. .06 THICK 1.50 WIDE	WINDSHIELD SEALING ----------		
-10	EC1239A-B	SEALANT-CATALYTIC	GENERAL PURPOSE ---------- FOR FAYING SURFACES- FILLET & RIVET SEALS- FUEL SEALING AND AREAS WHERE SKYDROL IS PRESENT		
-11	700	SEALANT-FIREWALL	SEALING FIREWALL JOINTS ------ AND OPENINGS. WITHSTANDS 2000 DEGREE TEMP FOR 5 MINUTES.		
-12	EC776	ADHESIVE-GASKET FUEL RESISTANT SYNTHETIC RUBBER BASE.	CEMENTING GASKETS ----------		
-13	550	SOUND DEADENER- LIQUID VIBRATION DAMPENER	VIBRATION DAMPENING ---------- CAN BE BRUSHED OR SPRAYED.		
-14	MX25A	PRIMER-ZINC CHROMATE- YELLOW	CORROSION PROOFING ----------		
-14A	LOCTITE 5381	EPOXY MIXER CUP	URETHANE TO URETHANE --------- URETHANE TO METAL POLYCARBONATE TO METAL ABS TO METAL		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
1 -14B	EC2216B/A	ADHESIVE METAL TO METAL PARTS A & B		
-14C	LOCTITE 8721	LOCKING & RETAINING METAL TO METAL COMPOUND		
-15	S51-4	HOSE-FUEL & OIL-1/4 ID AVAILABLE BY THE FOOT	AR	
	S51-6	HOSE-FUEL & OIL-3/8 ID AVAILABLE BY THE FOOT	AR	
	S51-8	HOSE-FUEL & OIL-1/2 ID AVAILABLE BY THE FOOT	AR	
	S51-10	HOSE-FUEL & OIL-5/8 ID AVAILABLE BY THE FOOT	AR	
	S51-12	HOSE-FUEL & OIL-3/4 ID AVAILABLE BY THE FOOT	AR	
	S51-16	HOSE-FUEL & OIL-1.00 ID AVAILABLE BY THE FOOT	AR	
	S51-32	HOSE-FUEL & OIL-2.00 ID AVAILABLE BY THE FOOT	AR	
-16	S202RB	CHANNEL-EXTRUDED BLACK AVAILABLE BY THE FOOT	AR	
	S202VW	CHANNEL-EXTRUDED WHITE AVAILABLE BY THE FOOT	AR	
-17	S292-1	INSULATION SLEEVING-ELEC-.118 ID AVAILABLE BY THE FOOT	AR	
	S292-2	INSULATION SLEEVING-ELEC-.133 ID AVAILABLE BY THE FOOT	AR	
	S292-3	INSULATION SLEEVING-ELEC-.148 ID AVAILABLE BY THE FOOT	AR	
	S292-4	INSULATION SLEEVING-ELEC-.166 ID AVAILABLE BY THE FOOT	AR	
	S292-5	INSULATION SLEEVING-ELEC-.186 ID AVAILABLE BY THE FOOT	AR	
	S292-6	INSULATION SLEEVING-ELEC-.208 ID AVAILABLE BY THE FOOT	AR	
	S292-8	INSULATION SLEEVING-ELEC-.263 ID AVAILABLE BY THE FOOT	AR	
	S292-11	INSULATION SLEEVING-ELEC-5/16 ID AVAILABLE BY THE FOOT	AR	
	S292-12	INSULATION SLEEVING-ELEC-3/8 ID AVAILABLE BY THE FOOT	AR	
	S292-14	INSULATION SLEEVING-ELEC-1/2 ID AVAILABLE BY THE FOOT	AR	
	S292-16	INSULATION SLEEVING-ELEC-3/4 ID AVAILABLE BY THE FOOT	AR	
	S292-28	INSULATION SLEEVING-ELEC-2-1/2 ID AVAILABLE BY THE FOOT	AR	
-18	S1026BG	CLAMP-WRAP TYPE AVAILABLE IN 100 FOOT ROLL	AR	
-19	S1053E7T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 7/8 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E8T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 1.00 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E10T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 1-1/4 DIA	AR	
	S1053K10T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 1-1/4 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E12T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 1-1 1/2 DIA	AR	
	S1053K12T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 1-1/2 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E20T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 2-1/2 DIA	AR	
	S1053K20T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 2-1/2 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E24T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 3.00 DIA	AR	
	S1053K24T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 3.00 DIA	AR	
	S1053K24W	DUCT-FLEXIBLE-SILICONE IMPREGNATED 2 PLY 3.00 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E28T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 3-1/2 DIA	AR	
	S1053K28W	DUCT-FLEXIBLE-SILICONE IMPREGNATED 2 PLY 3-1/2 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E32T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 4.00 DIA	AR	
	S1053K32T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 4.00 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
-20	S1047-1	SEAL-SPONGE RUBBER-1/4 THICK AVAILABLE BY THE FOOT	AR	
	S1047-2	SEAL-SPONGE RUBBER-5/16 THICK AVAILABLE BY THE FOOT	AR	
-21	S1055-1	CHANNEL-EXTRUDED RUBBER AVAILABLE BY THE FOOT	AR	
-22	S1071-1	TUBE-POLYETHYLENE-1/4 DIA AVAILABLE BY THE FOOT	AR	
	S1071-3	TUBE-POLYETHYLENE-3/8 DIA AVAILABLE BY THE FOOT	AR	
	S1071-4	TUBE-POLYETHYLENE-1/2 DIA AVAILABLE BY THE FOOT	AR	
	S1071-5	TUBE-POLYETHYLENE-5/8 DIA AVAILABLE BY THE FOOT	AR	
-23	S1084-1	SEAL-EXTRUDED RUBBER AVAILABLE BY THE FOOT	AR	
-24	S1110ET	DUCT-OVAL-FLEXIBLE-NEOPRENE IMPREGNATED AVAILABLE IN 10 FT LENGTHS ONLY	AR	
-25	S1346-1	SEAL-SPONGE RUBBER AVAILABLE IN 12 FT LENGTHS ONLY	AR	
-26	S1366-1	MOULDING-EXTRUDED PLASTIC-SAND AVAILABLE BY THE FOOT	AR	
	S1366-2	MOULDING-EXTRUDED PLASTIC-FAWN AVAILABLE BY THE FOOT	AR	
	S1366-3	MOULDING-EXTRUDED PLASTIC-BLACK AVAILABLE BY THE FOOT	AR	
-27	S1378-1	SEAL-SPONGE RUBBER-BEIGE AVAILABLE IN 7 FT LENGTHS ONLY	AR	
	S1378-2	SEAL-SPONGE RUBBER-CLOUD GRAY AVAILABLE IN 7 FT LENGTHS ONLY	AR	
-28	S1389-1	SEALER STRIP-FELT-1.00 WIDE AVAILABLE BY THE FOOT	AR	
	S1389-2	SEALER STRIP-FELT-1-1/2 WIDE AVAILABLE BY THE FOOT	AR	
	S1389-3	SEALER STRIP-FELT-2.00 WIDE AVAILABLE BY THE FOOT	AR	
	S1389-4	SEALER STRIP-FELT-1-3/4 WIDE AVAILABLE BY THE FOOT	AR	
	S1389-5	SEALER STRIP-FELT-1-1/4 WIDE AVAILABLE BY THE FOOT	AR	
	S1389-6	SEALER STRIP-FELT-2-1/4 WIDE AVAILABLE BY THE FOOT	AR	
	S1389-7	SEALER STRIP-FELT-1-3/8 WIDE AVAILABLE BY THE FOOT	AR	

CONTINUED ON NEXT PAGE

Bulk Items (Cont)

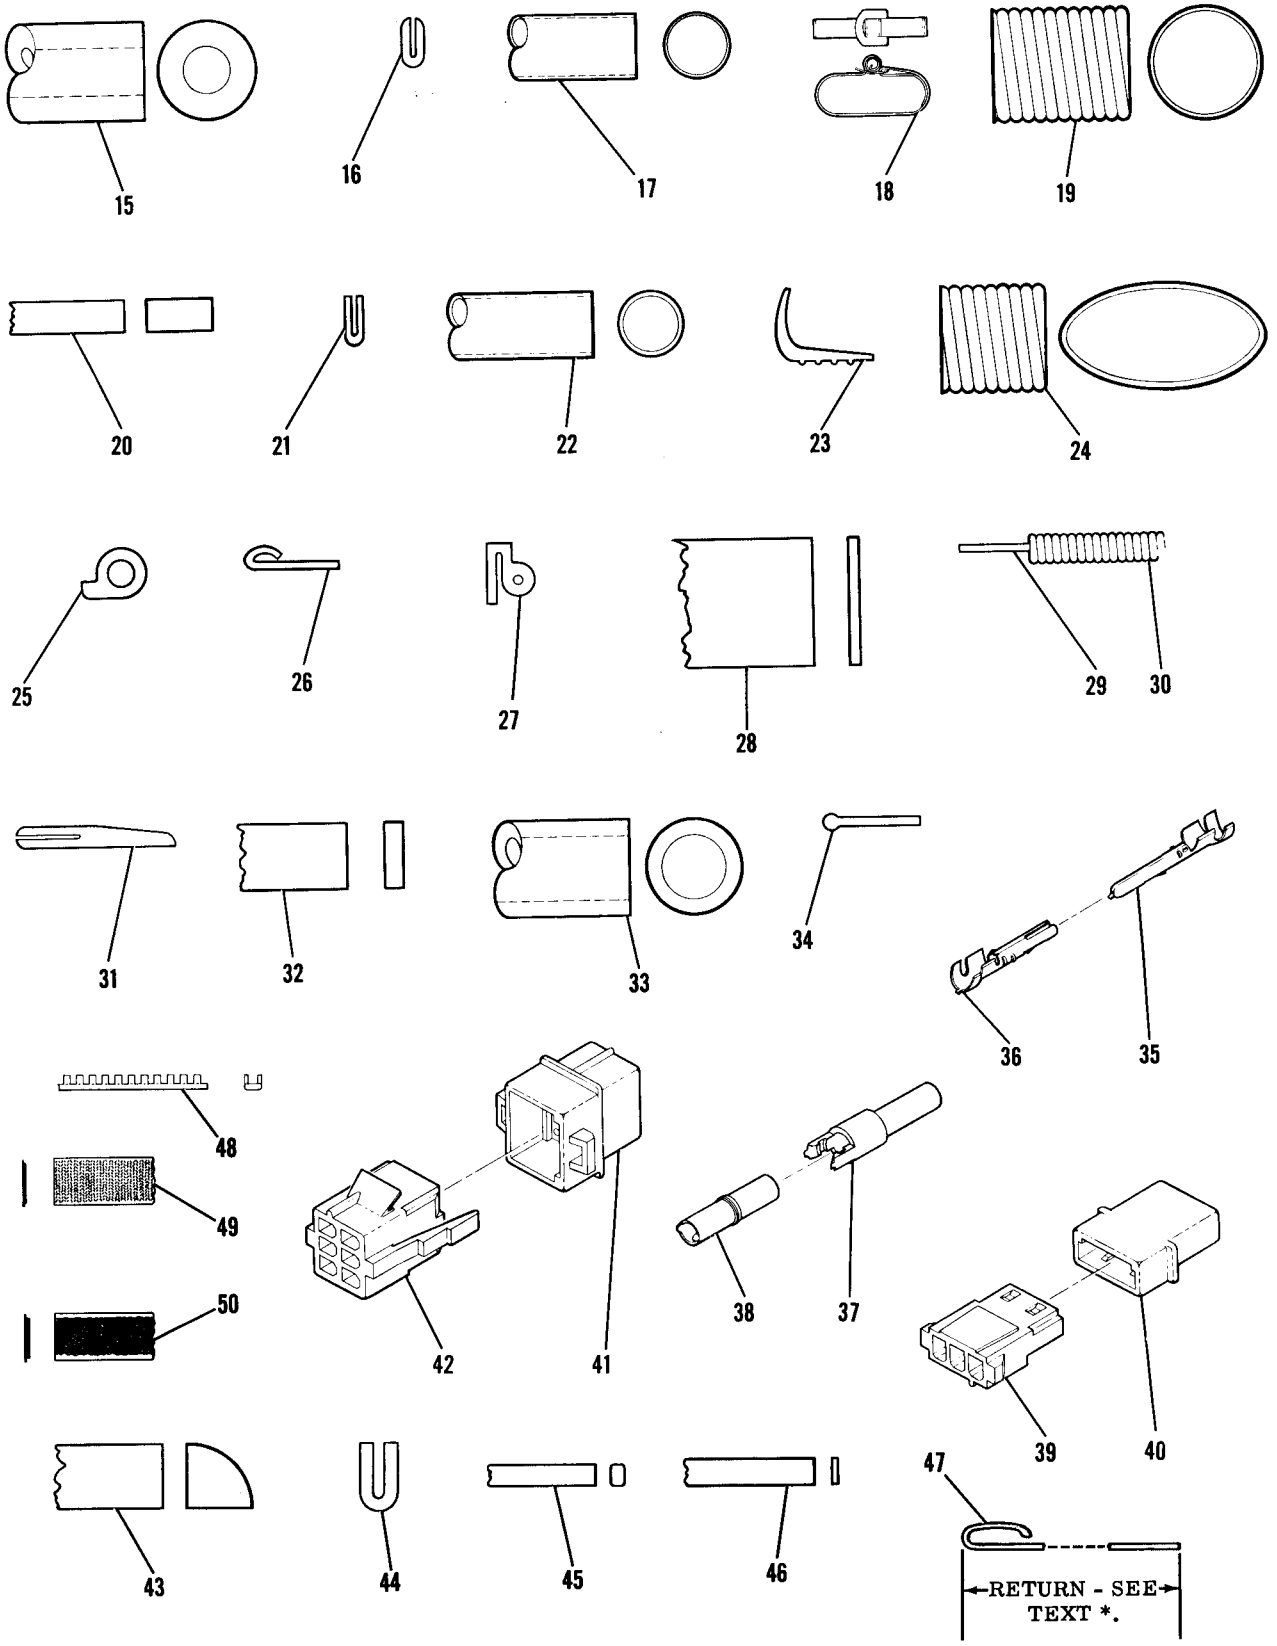


Figure 1. Miscellaneous Bulk Items

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
1 -29	S1398-1		CONTROL-PUSH PULL-WIRE AVAILABLE BY THE FOOT	AR	
-30	S1398-2		CONTROL-PUSH PULL-CASING AVAILABLE BY THE FOOT	AR	
-31	S1415-1		MOULDING-EXTRUDED VINYL	AR	
-32	S1441-1		SEAL-SPONGE RUBBER-3/8 WIDE AVAILABLE BY THE FOOT	AR	
	S1441-2		SEAL-SPONGE RUBBER-1/4 WIDE AVAILABLE BY THE FOOT	AR	
	S1441-3		SEAL-SPONGE RUBBER-1/2 WIDE AVAILABLE BY THE FOOT	AR	
-33	S1495-4		HOSE-RUBBER-1/4 ID AVAILABLE BY THE FOOT	AR	
	S1495-6		HOSE-RUBBER-3/8 ID AVAILABLE BY THE FOOT	AR	
	S1495-8		HOSE-RUBBER-1/2 ID AVAILABLE BY THE FOOT	AR	
	S1495-10		HOSE-RUBBER-5/8 ID AVAILABLE BY THE FOOT	AR	
-34	S1611-1		SEAL-EXTRUDED VINYL AVAILABLE BY THE FOOT	AR	
-35	S1635-1		ELECTRICAL PIN WIRE SIZE 22-18	AR	
	S1635-2		ELECTRICAL PIN WIRE SIZE 18-14	AR	
	S1635-3		ELECTRICAL PIN WIRE SIZE 18 GA-2 WIRE	AR	
-36	S1636-1		ELECTRICAL SOCKET WIRE SIZE 22-18	AR	
	S1636-2		ELECTRICAL SOCKET WIRE SIZE 18-14	AR	
	S1636-3		ELECTRICAL SOCKET WIRE SIZE 18 GA-2 WIRE	AR	
-37	S1637-1		HOUSING-ELECTRICAL PIN	AR	
-38	S1637-2		HOUSING-ELECTRICAL SOCKET	AR	
-39	S1638-1		HOUSING-ELECTRICAL SOCKET-3 CIRCUIT	AR	
-40	S1638-2		HOUSING-ELECTRICAL PIN-3 CIRCUIT	AR	
-41	S1640-6		HOUSING-ELECTRICAL PIN-6 CAVITY	AR	
	S1640-9		HOUSING-ELECTRICAL PIN-9 CAVITY	AR	
	S1640-12		HOUSING-ELECTRICAL PIN-12 CAVITY	AR	
	S1640-15		HOUSING-ELECTRICAL PIN-15 CAVITY	AR	
-42	S1641-6		HOUSING-ELECTRICAL SOCKET-6 CAVITY	AR	
	S1641-9		HOUSING-ELECTRICAL SOCKET-9 CAVITY	AR	
	S1641-12		HOUSING-ELECTRICAL SOCKET-12 CAVITY	AR	
	S1641-15		HOUSING-ELECTRICAL SOCKET-15 CAVITY	AR	
-43	S1116-1		SEAL-NEOPRENE AVAILABLE BY THE FOOT	AR	
-44	S1356		SEAL-EXTRUDED RUBBER AVAILABLE BY THE FOOT	AR	
-45	S1614		LACING-KOROSEAL AVAILABLE BY THE FOOT	AR	
-46	3690-1/8		FILM-BLACK VINYL-1/8 IN WIDE AVAILABLE BY THE ROLL	AR	
	3690-1/4		FILM-BLACK VINYL-1/4 IN WIDE AVAILABLE BY THE ROLL	AR	
	3690-1/2		FILM-BLACK VINYL-1/2 IN WIDE AVAILABLE BY THE ROLL	AR	
-47	S1948-2-1	*	TRIM-EXTRUDED CLOUD GRAY AVAILABLE BY THE FOOT	AR	
	S1948-2-2	*	TRIM-EXTRUDED EBONY AVAILABLE BY THE FOOT	AR	
	S1948-2-3	*	TRIM-EXTRUDED SILVER TEAL BLUE AVAILABLE BY THE FOOT	AR	
	S1948-2-4	*	TRIM-EXTRUDED MARIGOLD AVAILABLE BY THE FOOT	AR	
	S1948-2-5	*	TRIM-EXTRUDED SUN GOLD AVAILABLE BY THE FOOT	AR	
	S1948-2-6	*	TRIM-EXTRUDED LIGHT OLIVE AVAILABLE BY THE FOOT	AR	
	S1948-2-7	*	TRIM-EXTRUDED CLOVE BROWN AVAILABLE BY THE FOOT	AR	
	S1948-2-8	*	TRIM-EXTRUDED HOLIDAY BLUE AVAILABLE BY THE FOOT	AR	
	S1948-2-9	*	TRIM-EXTRUDED FIESTA RED AVAILABLE BY THE FOOT	AR	
	S1948-2-10	*	TRIM-EXTRUDED PICNIC GREEN AVAILABLE BY THE FOOT	AR	
	S1948-2-11	*	TRIM-EXTRUDED BOGOTA BLUE AVAILABLE BY THE FOOT	AR	
	S1948-2-12	*	TRIM-EXTRUDED TAHITIAN RED AVAILABLE BY THE FOOT	AR	
	S1948-2-13	*	TRIM-EXTRUDED CYPRUS GREEN AVAILABLE BY THE FOOT	AR	
	S1948-2-14	*	TRIM-EXTRUDED PEACOCK BLUE AVAILABLE BY THE FOOT	AR	
	S1948-2-15	*	TRIM-EXTRUDED POPPY RED AVAILABLE BY THE FOOT	AR	
	S1948-2-16	*	TRIM-EXTRUDED GOLDEN OLIVE & OLIVE GREEN AVAILABLE BY THE FOOT	AR	
	S1948-2-17	*	TRIM-EXTRUDED SUNSET RED AVAILABLE BY THE FOOT	AR	
	S1948-2-18	*	TRIM-EXTRUDED COPEN BLUE AVAILABLE BY THE FOOT	AR	
	S1948-2-19	*	TRIM-EXTRUDED CHESTNUT BROWN AVAILABLE BY THE FOOT	AR	
	S1948-2-20	*	TRIM-EXTRUDED OLD GOLD AVAILABLE BY THE FOOT	AR	
-48	S1050-1		GROMMET-CATERPILLAR .056 WIDE	AR	
	S1050-2		GROMMET-CATERPILLAR .090 WIDE	AR	
	S1050-3		GROMMET-CATERPILLAR .131 WIDE	AR	
-49	S2092-1		FABRIC FASTENER-HOOK AVAILABLE BY FOOT	AR	
	S2092-3		FABRIC FASTENER-HOOK AVAILABLE BY THE FOOT	AR	
	S2092-31		FABRIC FASTENER-HOOK RIGID VINYL BACKED AVAILABLE BY THE FOOT	AR	
-50	S2092-2		FABRIC FASTENER-PILE AVAILABLE BY FOOT	AR	
	S2092-4		FABRIC FASTENER-PILE AVAILABLE BY THE FOOT	AR	
	S2092-30		FABRIC FASTENER-PILE RIGID VINYL BACKED AVAILABLE BY THE FOOT	AR	

NOTE. *PART NUMBER LISTED IN TEXT HAS A 1/2 INCH RETURN. FOR A 7/8 INCH RETURN CHANGE FIRST DASH NUMBER TO -1. EXAMPLE-S1948-1-4.

Placards

ABCDEFGHIJKLMN
OPQRSTUVWXYZ
-1234567890

ABCDEFGHIJKLMN
OPQRSTUVWXYZ
-1234567890

ABCDEFGHIJKLMN
OPQRSTUVWXYZ
-1234567890

Figure 2. (Sheet 1 of 5) Placards, Nameplates & Exterior Markings

Placards (Cont)

S1500 TYPE STENCILS *
FOR SLANT GOTHIC LETTERS & NUMERALS

LETTERS AND NUMERALS ARE AVAILABLE IN 10 INCH AND 12 INCH HEIGHTS IN EITHER LEFT HAND OR RIGHT HAND SLANT.

LETTERS AVAILABLE ARE A THRU Z.
NUMERALS AVAILABLE ARE 0 THRU 9.

TO ORDER:

EACH LETTER OR NUMERAL WANTED MUST BE ORDERED BY GIVING BASIC PART NUMBER, FOLLOWED BY HEIGHT DESIRED, FOLLOWED BY SPECIFIC LETTER OR NUMERAL AND THE DESIGNATOR L OR R TO INDICATE LEFT OR RIGHT HAND SLANT.

EXAMPLE: S1500 - 10 - M L

- S1500 — BASIC PART NO.
- 10 — HEIGHT WANTED
- M — LETTER WANTED
- L — DIRECTION OF SLANT

S1600 TYPE STENCILS *
FOR VERTICAL GOTHIC LETTERS & NUMERALS

LETTERS AND NUMERALS ARE AVAILABLE IN 6 INCH, 12 INCH AND 20 INCH HEIGHTS. LETTERS AVAILABLE ARE A THRU Z. NUMERALS AVAILABLE ARE 0 THRU 9.

TO ORDER:

EACH LETTER OR NUMERAL WANTED MUST BE ORDERED BY GIVING BASIC PART NUMBER, FOLLOWED BY HEIGHT DESIRED, FOLLOWED BY SPECIFIC LETTER OR NUMERAL WANTED.

EXAMPLE: S1600 - 20 - N

- S1600 — BASIC PART NO.
- 20 — HEIGHT WANTED
- N — LETTER WANTED

* EACH STENCIL PROVIDES FOR EITHER BACKGROUND OR CENTER MASK.


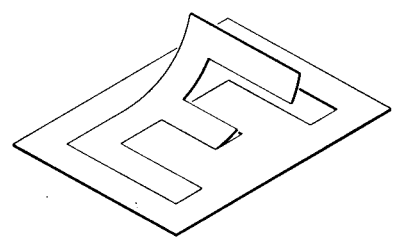


Figure 2. (Sheet 2 of 5) Placards, Nameplates & Exterior Markings

Placards (Cont)

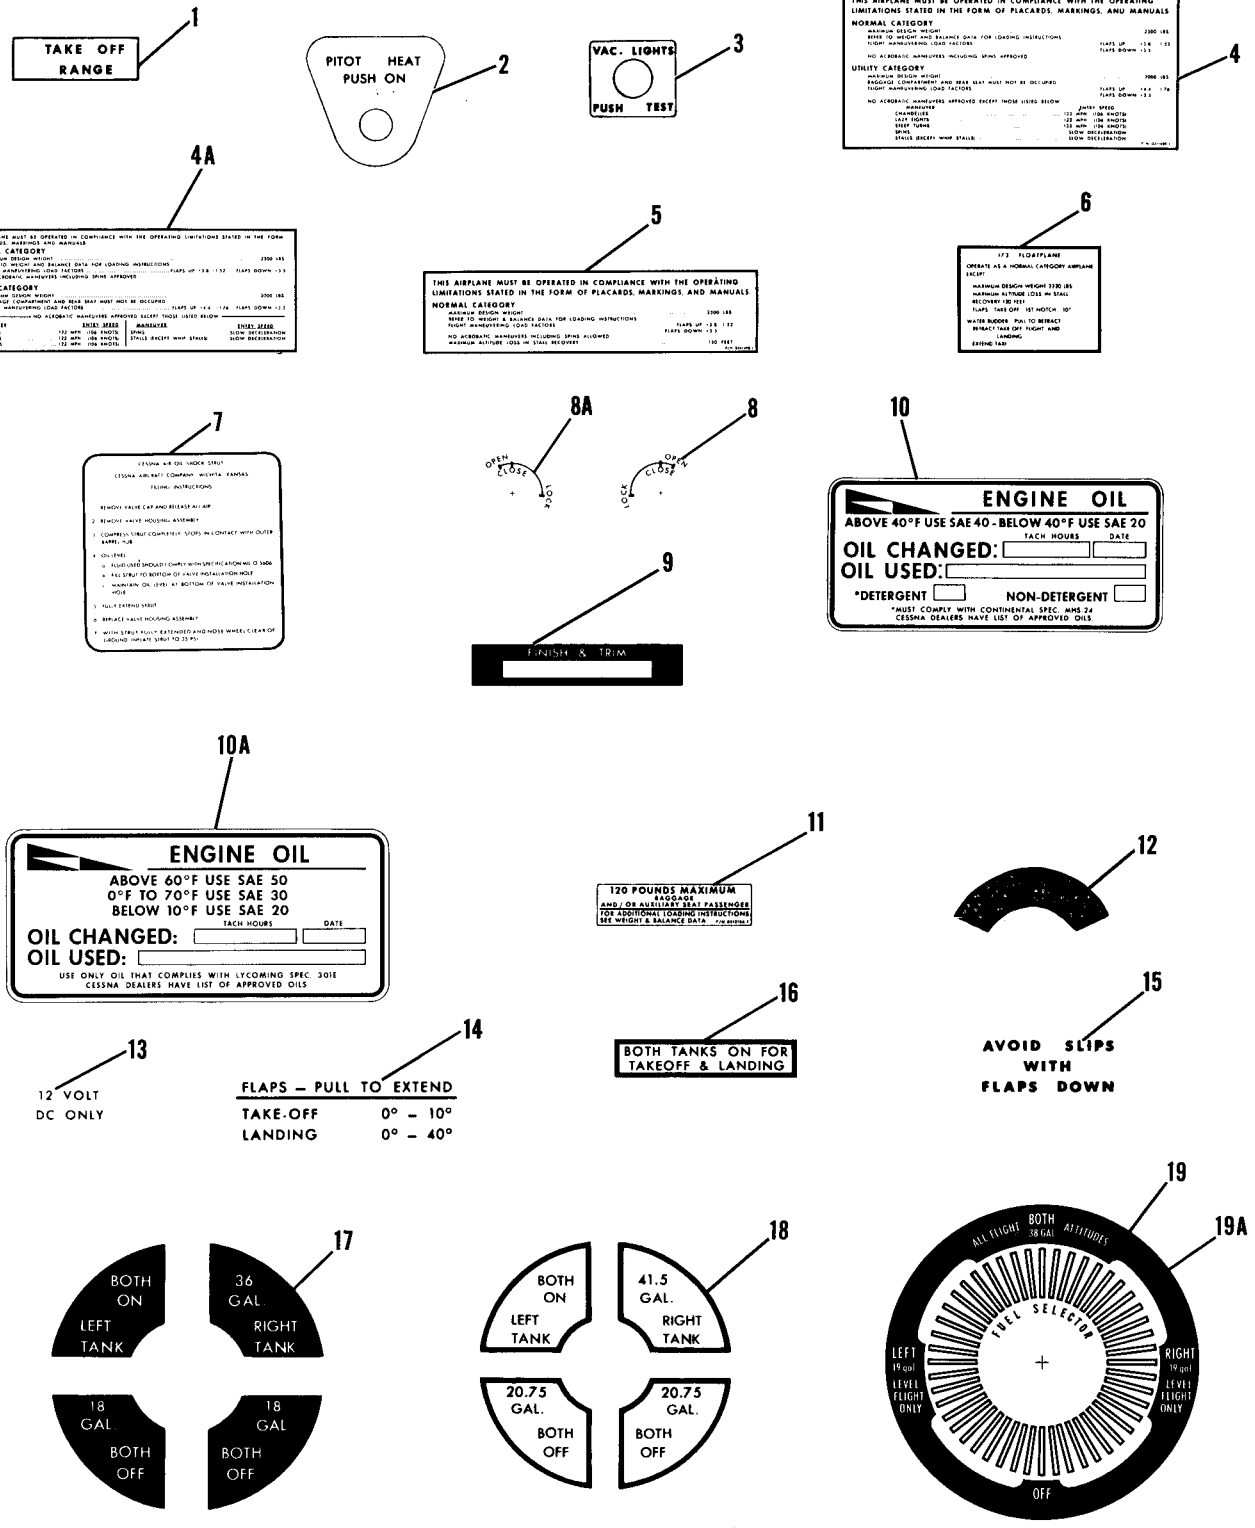

172 SERIAL 17249545 THRU 17257161
F172 SERIAL F172-0001 THRU F172-0559

Figure 2. (Sheet 3 of 5) Placards, Nameplates & Exterior Markings

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
2 -		PLACARDS, NAMEPLATES & EXTERIOR MARKINGS	NP	A
- 1	0413179	PLACARD-TAKE OFF RANGE	1	F
- 2	0513153-6	PLACARD-PITOT HEAT	1	E
- 3	0713705-2	PLACARD-VACUUM LIGHTS TEST	1	F
- 4	0511489-1	PLACARD-OPERATIONAL LIMITATIONS	1	A
- 4A	S1656-4	PLACARD-OPERATIONAL LIMITATIONS	1	V
- 5	0511490-1	PLACARD-OPERATIONAL LIMITATIONS	1	B
- 6	0513219-13	PLACARD-FLOATPLANE	1	A
- 7	0543032	PLACARD-NOSE GEAR SHOCK STRUT	1	S
	0543032-2	PLACARD-NOSE GEAR SHOCK STRUT	1	U
- 8	0700166-1	PLACARD-DOOR HANDLE LH	1	AC
- 8A	0700166-2	PLACARD-DOOR HANDLE RH	1	AC
- 9	0713047	PLACARD-FINISH & TRIM	1	
-10	S1397-2	PLACARD-ENGINE OIL CHANGE	1	N
	S1397-3	PLACARD-ENGINE OIL CHANGE	1	T
	S1397-4	PLACARD-ENGINE OIL CHANGE	1	O
-10A	S1397-6	PLACARD-ENGINE OIL CHANGE	1	Z
-11	0512166-3	PLACARD ASSEMBLY-BAGGAGE	1	
-12	0713209-1	PLACARD-CARBURETOR AIR TEMPERATURE INDICATOR	1	E
-13	0500130-1	PLACARD-GROUND SERVICE RECEPTACLE	1	A
-14	0510194-1	PLACARD-PULL TO EXTEND FLAPS	1	F
-15	0510188	PLACARD-AVOID SLIPS	1	F
-16	0500254-1	PLACARD-TAKE OFF & LANDING WHEN EXHAUSTED USE 0505006-1	1	J
	0505006-1	PLACARD-TAKE OFF & LANDING	1	J
-17	0511167-21	PLACARD-FUEL SELECTOR	1	G
-18	0511167-14	PLACARD-FUEL SELECTOR	1	B
-19	0500246-11	PLACARD-FUEL SELECTOR 18 GAL	1	Y
-19A	0716615-7	PLACARD-FUEL SELECTOR 19 GAL	1	Z

CONTINUED ON NEXT PAGE

Placards (Cont)


172 SERIAL 17249545 THRU 17257161
F172 SERIAL F172-0001 THRU F172-0559

Figure 2. (Sheet 4 of 5) Placards, Nameplates & Exterior Markings

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
2 -20	0500109-1	PLACARD-SKYHAWK RH	1	E
	0500109-2	PLACARD-SKYHAWK LH	1	E
-21	0500109-3	PLACARD-SKYHAWK USED ON CONTROL WHEEL	1	C
-22	0500084-1	NAMEPLATE-CONTROL WHEEL	1	C
-23	0500124-1	PLACARD-POWERMATIC SKYHAWK	1	B
-24	0500124-2	PLACARD-POWERMATIC 172	1	B
-25	0500119-1	PLACARD-POWERMATIC 172 EXTERIOR	1	B
-26	0500119-2	PLACARD-POWERMATIC SKYHAWK EXTERIOR	1	B
-27	0500091-4	NAMEPLATE-172	1	C
-28	0500127-1	NAMEPLATE-172	2	H
-29	0500247-1	PLACARD-172	2	P
-30	0500085-2	EMBLEM-STAR	2	E
-31	0500085-1	INSIGNA-CESSNA	1	E
-32	0500051-3	EMBLEM-172 LH	1	C
	0500051-4	EMBLEM-172 RH	1	C
-33	0500110-1	NAMEPLATE-SKYHAWK	1	C
-34	0500128-1	PLACARD-SKYHAWK	2	H
	0500255-1	PLACARD-SKYHAWK	1	P
-35	S1433-1	PLACARD-CESSNA LABEL	1	A
-36	1400014-1	NAMEPLATE-CESSNA	2	H
-37	0500248-1	NAMEPLATE-CESSNA	1	X
-38	0500125-1	PLATE-CONTROL WHEEL INSIGNA	1	D
-39	0500125-4	INSIGNA-172	1	H
-40	0500249-1	PLACARD-172	1	P
-41	0500125-6	INSIGNA-SKYHAWK	1	H
-42	0500250-1	PLACARD-SKYHAWK	1	P
-42A	S1714-1	PLACARD-ALLIANCE FOR PROGRESS	1	Z
-42B	S1713-1	PLACARD-HANDS OF FRIENDSHIP	1	Z

CONTINUED ON NEXT PAGE

Placards (Cont)

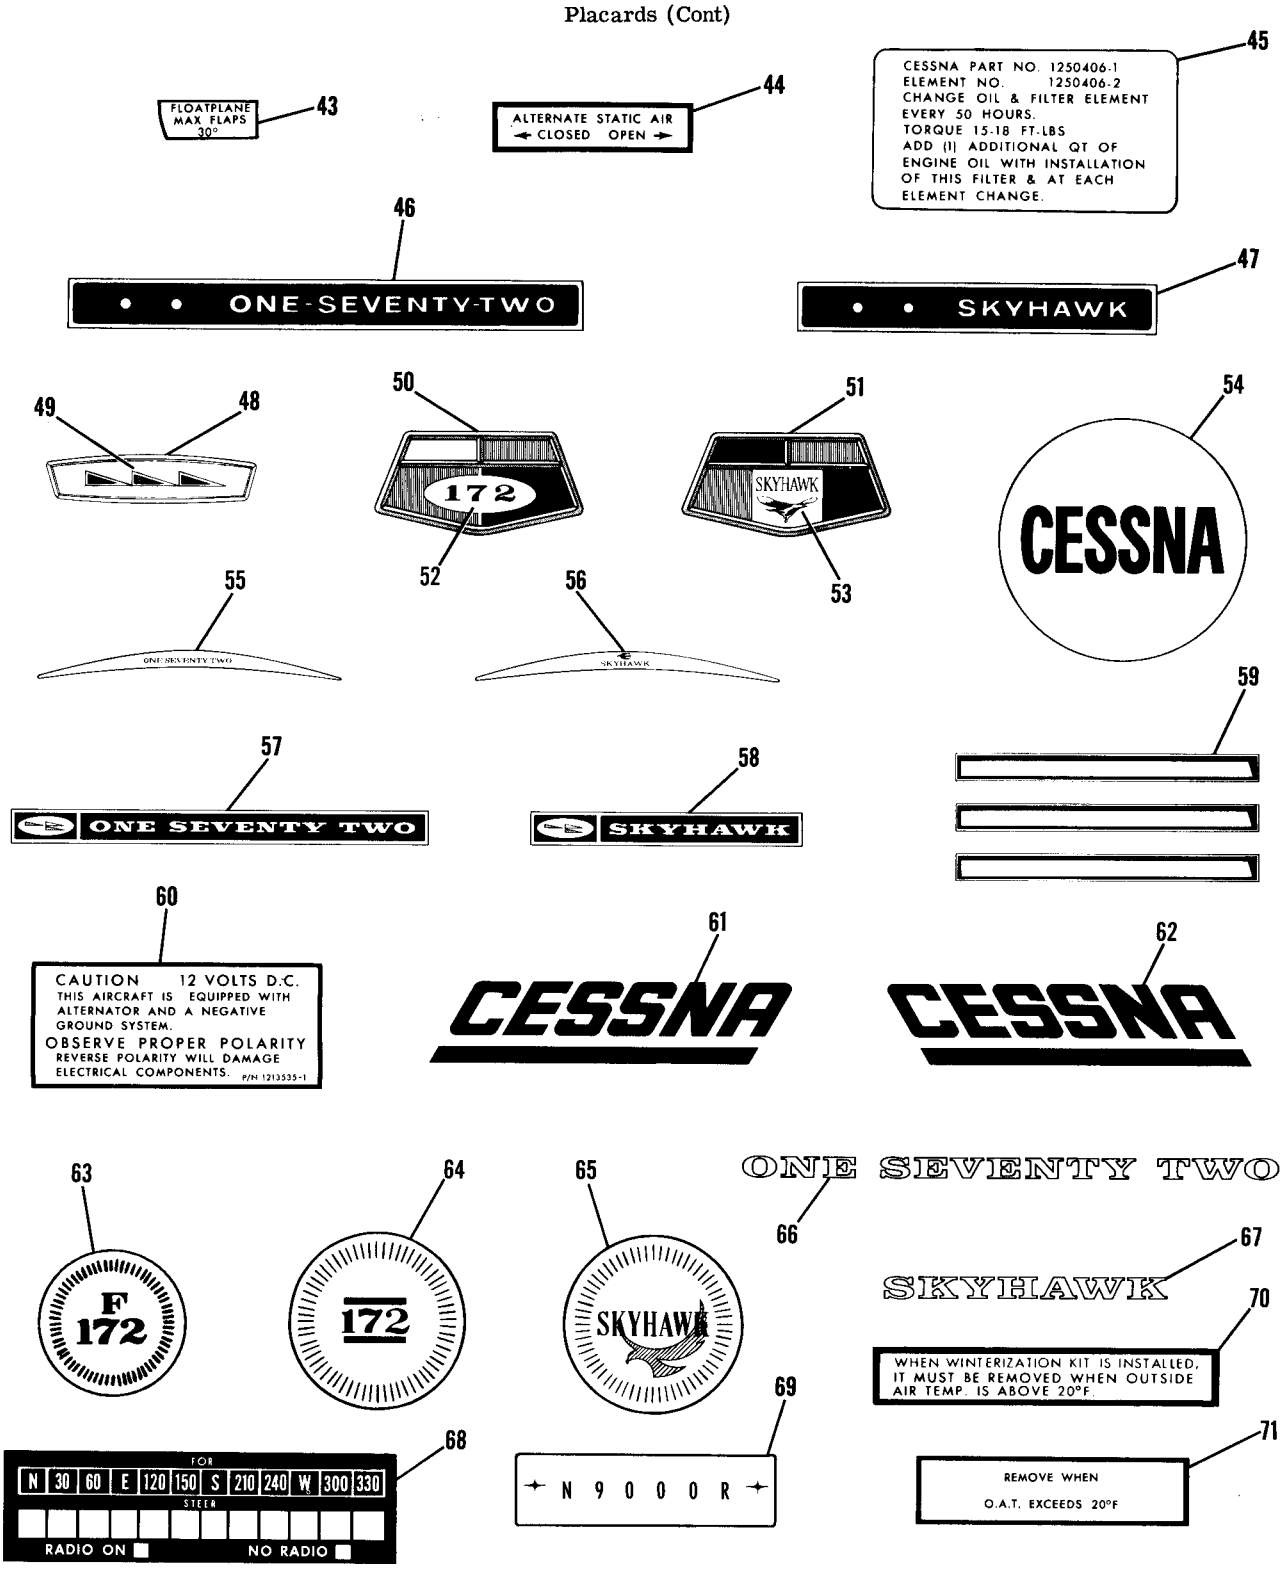

172 SERIAL 17249545 THRU 17257161

F172 SERIAL F172-0001 THRU F172-0559

Figure 2. (Sheet 5 of 5) Placards, Nameplates & Exterior Markings

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
2 -43	1220112-4	PLACARD-FLOATPLANE FLAPS	1	K
-44	1200678-2	PLACARD-ALTERNATE STATIC SOURCE	1	L
-45		PLACARD-OIL FILTER	NP	Q
	1250410-3	PLACARD-OIL FILTER	1	R
-46	0500404-1	PLACARD-ONE SEVENTY TWO	2	T
-47	0500405-1	PLACARD-SKYHAWK	2	T
-48	0500125-1	PLATE	2	T
-49	0700748-1	PLACARD	2	T
-50	0500125-29	PLATE-CONTROL WHEEL INSIGNIA 172	1	T
-51	0500125-31	PLATE-CONTROL WHEEL INSIGNIA SKYHAWK	1	T
-52	0500401-1	INSIGNIA-172	1	T
-53	0500402-1	INSIGNIA-SKYLARK	1	T
-54	0400135-1	NAMEPLATE-CESSNA	2	T
-55	0500262-1	PLACARD-CONTROL WHEEL 172	1	AB
-56	0500263-1	PLACARD-CONTROL WHEEL SKYHAWK	1	AB
-57	0400202-2	PLACARD-EXTERIOR IDENTIFICATION ONE SEVENTY TWO	2	O
-58	0400202-3	PLACARD-EXTERIOR IDENTIFICATION SKYHAWK	2	O
-59	0500266-2	PLACARD-EXTERIOR TRIM SKYHAWK ONLY	6	O
-60	1213535-1	PLACARD-POLARITY	1	U
-61	1205010-1	NAMEPLATE-LH	1	W
-62	1205010-2	NAMEPLATE-RH	1	W
-63	0405002-3	PLACARD-CONTROL WHEEL	1	W
-64	1705003-1	PLACARD-172	1	Z
-65	1705004-1	PLACARD-SKYHAWK	1	Z
-66	1205013-2	PLACARD-EXTERIOR IDENTIFICATION 172	2	Z
-67	1205013-5	PLACARD-EXTERIOR IDENTIFICATION SKYHAWK	2	Z
-68	0400210-1	PLACARD-COMPASS CORRECTION	1	V
-69		PLACARD-AIRPLANE IDENTIFICATION	NP	V
-70	0700319-13	PLACARD-WINTERIZATION WHEN EXHAUSTED USE 0505009-2	1	J
	0505009-2	PLACARD-WINTERIZATION	1	J
-71	0552110-3	PLACARD-WINTERIZATION	1	J
	S1500	STENCILS-SLANT LETTERS & NUMBERS SEE SHEET 1 & 2	AR	
	S1600	STENCILS-VERTICAL LETTERS & NUMERALS SHEET 1 & 2	AR	

A---172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
B---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
C---172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
D---172 SERIAL 17250573 THRU 17254892
F172 SERIAL F172-0019 THRU F172-0319
E---172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
P172 SERIAL 17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
F---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
G---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
H---172 SERIAL 17250573 THRU 17251822
F172 SERIAL F172-0019 THRU F172-0085
J---172 SERIAL 17251823 THRU 17257161
F172 SERIAL F172-0086 THRU F172-0559
K---172 SERIAL 17252204 THRU 17257161
L---172 SERIAL 17252488 THRU 17257161
F172 SERIAL F172-0160 THRU F172-0559
M---DELETED
N---172 SERIAL 17249545 THRU 17253392
F172 SERIAL F172-0001 THRU F172-0179
O---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F172-0559
P---172 SERIAL 17251823 THRU 17253392
F172 SERIAL F172-0086 THRU F172-0179

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
2 -		Q---172 SERIAL 17250751 THRU 17253464 F172 SERIAL F172-0039 THRU F172-0203 R---172 SERIAL 17253465 THRU 17257161 F172 SERIAL F172-0204 THRU F172-0559 S---172 SERIAL 17249545 THRU 17254892 F172 SERIAL F172-0001 THRU F172-0319 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 T---172 SERIAL 17253393 THRU 17254892 F172 SERIAL F172-0180 THRU F172-0319 U---172 SERIAL 17254893 THRU 17257161 F172 SERIAL F172-0320 THRU F172-0559 V---172 SERIAL 17254893 THRU 17257161 F172 SERIAL F172-0320 THRU F172-0559 W---172 SERIAL 17256513 THRU 17257161 F172 SERIAL F172-0432 THRU F172-0435 F172-0443, F172-0447 THRU F172-0559 X---172 SERIAL 17251823 THRU 17253392 F172 SERIAL F172-0086 THRU F172-0179 172 SERIAL 17254893 THRU 17256512 F172 SERIAL F172-0320 THRU F172-0431 F172-0436 THRU F172-0442 F172-0444 THRU F172-0446 Y---172 SERIAL 17251823 THRU 17256512 F172 SERIAL F172-0086 THRU F172-0559 Z---172 SERIAL 17256513 THRU 17257161 AA---172 SERIAL 17249545 THRU 17256512 F172 SERIAL F172-0001 THRU F172-0559 AB---172 SERIAL 17254893 THRU 17256512 F172 SERIAL F172-0320 THRU F172-0431 F172-0436 THRU F172-0442 F172-0444 THRU F172-0446 AC---172 SERIAL 17253393 THRU 17257161 F172 SERIAL F172-0180 THRU F172-0559		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
3 -		PLACARDS, NAMEPLATES & EXTERIOR MARKINGS	NP	A
- 1	1205001-34	PLACARD-OPERATIONAL LIMITATIONS FLOATPLANE	1	S
- 1A	1205001-101	PLACARD-OPERATIONAL LIMITATIONS FLOATPLANE DAY-NIGHT-VFR-IFR	1	J
	1205001-102	PLACARD-OPERATIONAL LIMITATIONS FLOATPLANE DAY-NIGHT-VFR	1	J
	1205001-156	PLACARD-OPERATIONAL LIMITATIONS FLOATPLANE DAY-VFR	1	AE
	1205001-134	PLACARD-OPERATIONAL LIMITATIONS FLOATPLANE DAY-NIGHT-VFR	1	AE
	1205001-133	PLACARD-OPERATIONAL LIMITATIONS FLOATPLANE DAY-NIGHT-VFR-IFR	1	AE
- 2	1205001-12	PLACARD-OPERATIONAL LIMITATIONS 172	1	S
- 2A	1205001-73	PLACARD-OPERATIONAL LIMITATIONS 172 DAY-NIGHT-VFR-IFR	1	V
	1205001-74	PLACARD-OPERATIONAL LIMITATIONS 172 DAY-NIGHT-VFR	1	V
- 2B	1205001-112	PLACARD-OPERATIONAL LIMITATIONS 172 DAY-NIGHT-VFR-IFR	1	AC
	1205001-113	PLACARD-OPERATIONAL LIMITATIONS 172 DAY-NIGHT-VFR	1	AC
- 2C	1205001-127	PLACARD-OPERATIONAL LIMITATIONS 172 DAY-NIGHT-VFR-IFR	1	AE
	1205001-128	PLACARD-OPERATIONAL LIMITATIONS 172 DAY-NIGHT-VFR	1	AE
	1205001-147	PLACARD-OPERATIONAL LIMITATIONS 172 DAY-VFR	1	AE
- 3	1205001-26	PLACARD-OPERATIONAL LIMITATIONS F172	1	T
- 3A	1205001-75	PLACARD-OPERATIONAL LIMITATIONS F172 DAY-NIGHT-VFR-IFR ENGLISH	1	K
	1205001-95	PLACARD-OPERATIONAL LIMITATIONS F172 DAY-NIGHT-VFR-IFR FRENCH	1	K
	1205001-76	PLACARD-OPERATIONAL LIMITATIONS F172 DAY-NIGHT-VFR ENGLISH	1	K
	1205001-96	PLACARD-OPERATIONAL LIMITATIONS F172 DAY-NIGHT-VFR FRENCH	1	K
- 3B	1205001-129	PLACARD-OPERATIONAL LIMITATIONS F172 DAY-NIGHT-VFR-IFR ENGLISH	1	AF
	1205001-131	PLACARD-OPERATIONAL LIMITATIONS F172 DAY-NIGHT-VFR-IFR FRENCH	1	AF
	1205001-130	PLACARD-OPERATIONAL LIMITATIONS F172 DAY-NIGHT-VFR ENGLISH	1	AF
	1205001-132	PLACARD-OPERATIONAL LIMITATIONS F172 NIGHT-VFR FRENCH	1	AF
	1205001-148	PLACARD-OPERATIONAL LIMITATIONS F172 DAY-VFR ENGLISH	1	AF
	1205001-149	PLACARD-OPERATIONAL LIMITATIONS F172 DAY-VFR FRENCH	1	AF
- 4	0543032-2	PLACARD-NOSE GEAR SHOCK STRUT	1	
- 5	0713047	PLACARD-FINISH & TRIM	1	
- 5A	0505020-2	PLACARD-MASTER SWITCH	1	AM
- 6	0505011-1	PLACARD-ENGINE OIL CHANGE	1	
- 6A	C622003-0103	PLACARD-STROBE LIGHT	1	V
	C622003-0105	PLACARD-STROBE LIGHT	1	W
- 7	0716615-7	PLACARD-FUEL SELECTOR 19 GAL WEU 0705048-2	1	
	0705048-2	PLACARD-FUEL SELECTOR 19 GAL	1	
	0716615-9	PLACARD-FUEL SELECTOR 24 GAL LONG RANGE WING WEU 0705048-3	1	
	0705048-3	PLACARD-FUEL SELECTOR 24 GAL LONG RANGE WING	1	
- 8	S1714-1	PLACARD-ALLIANCE FOR PROGRESS	1	
- 9	S1713-1	PLACARD-HANDS OF FRIENDSHIP	1	
-10	1205010-3	PLACARD-LH	1	C
-11	1205010-4	PLACARD-RH	1	C
-11A	0505015-1	PLACARD-WHEEL FAIRING LH	2	E
	0505015-2	PLACARD-WHEEL FAIRING RH	2	E
-12	0700166-1	PLACARD-DOOR HANDLE LH	1	B
-13	0700166-2	PLACARD-DOOR HANDLE RH	1	B
-14	1705015-1	PLACARD-DOOR HANDLE LH	1	N
-14A	1705015-2	PLACARD-DOOR HANDLE RH	1	N
-15	0505017-1	PLATE-CONTROL WHEEL PLACARD	1	AM
-16	0505008-7	PLACARD-CONTROL WHEEL 172	1	P
-17	0505008-8	PLACARD-CONTROL WHEEL F172	1	Q
-18	0505008-2	PLACARD-CONTROL WHEEL SKYHAWK	1	P
-19	0505012-1	PLACARD-PENNANT	2	E
	0505012-2	PLACARD-PENNANT	2	V


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
3 -20	1220112-4	PLACARD-FLOATPLANE FLAPS	1	
-21	0505005-1	PLACARD-ALTERNATE STATIC SOURCE	1	E
-22	1250410-3	PLACARD-OIL FILTER	1	
-23	1205024-1	PLACARD-POLARITY	1	
-24	0400210-1	PLACARD-COMPASS CORRECTION	1	AN
	0400210-2	PLACARD-COMPASS CORRECTION FLOATPLANE ONLY	1	
-25		PLACARD-AIRPLANE IDENTIFICATION	NP	
-26	0505009-2	PLACARD-WINTERIZATION	1	E
-26A	0505009-3	PLACARD-WINTERIZATION	1	F
-26B	0552154-1	PLACARD-WINTERIZATION	1	AR
-27	0552110-3	PLACARD-WINTERIZATION	1	
-28	0710032-2	PLATE-BAGGAGE PLACARD	1	AG
-29	0505007-1	PLACARD-BAGGAGE	1	AG
-29A	0505043-1	PLACARD-BAGGAGE	1	AH
-30	0505006-1	PLACARD-TAKE-OFF & LANDING	1	
-31	S1397-6	PLACARD-ENGINE OIL CHANGE	1	
-32	0505021-3	PLACARD-CONTROL WHEEL 172	1	G
-32A	0505025-4	PLACARD-CONTROL WHEEL 172	1	X
-32B	0505034-1	PLACARD-CONTROL WHEEL 172	1	AC
-33	0505021-4	PLACARD-CONTROL WHEEL SKYHAWK	1	G
-33A	0505025-5	PLACARD-CONTROL WHEEL SKYHAWK	1	X
-33B	0505034-2	PLACARD-CONTROL WHEEL SKYHAWK	1	AC
-34	0505021-5	PLACARD-CONTROL WHEEL F172	1	R
-34A	0505025-6	PLACARD-CONTROL WHEEL F172	1	Y
-34B	0505034-3	PLACARD-CONTROL WHEEL F172	1	AD
-35	1505014-1	PLACARD 172 & SKYHAWK	1	G
-35A	1505022-1	PLACARD 172 & SKYHAWK	2	X
-35B	1705022-1	PLACARD 172 & SKYHAWK	2	AC
-36	1505015-10	PLACARD F172	2	H
-36A	1505024-1	PLACARD F172	2	Y
	0505030-1	PLACARD F172	2	AD
-37	1505015-7	PLACARD 172	2	L
	1505015-40	PLACARD 172	2	U
-37A	0505032-1	PLACARD 172	2	AC
-38	1505015-8	PLACARD F172	2	M
-38A	0505031-1	PLACARD F172	2	AD
-39	1505015-9	PLACARD SKYHAWK	2	L
	0505033-1	PLACARD SKYHAWK	2	AC
	1505015-39	PLACARD SKYHAWK	2	U
-40	1205004-1	PLACARD-MAP LIGHT DIM	1	
-41	0404013-1	PLACARD-CESSNA EXTERIOR EMBLEM	1	W
-42	0505027-1	PLACARD-RPM LIMITATION	1	AB
-43		DELETED-NOT USED		
-44	0505026-1	PILOTS CHECK LIST-172	1	Z
	0505026-2	PILOTS CHECK LIST-F172	1	AA
-45	0405018-1	NAMEPLATE-CONTROL WHEEL	1	AK
-46	0405018-2	NAMEPLATE-CONTROL WHEEL	1	AL
-47	0505036-1	PLACARD-EXTERIOR 172	1	AK
-48	0505037-1	PLACARD-EXTERIOR SKYHAWK	1	AK
-49	0505038-1	PLACARD-EXTERIOR F172	1	AL
-50	0405020-2	PLACARD-EXTERIOR	1	AK
-51	0405022-2	PLACARD-EXTERIOR	1	AL
-52	1205085-1	PLACARD-EMERGENCY LOCATOR TRANSMITTER	1	AJ
-53	1205085-2	PLACARD-EMERGENCY LOCATOR TRANSMITTER	1	AH
-54	0405027-1	NAMEPLATE-CONTROL WHEEL 172	1	AP
-55	0405027-3	NAMEPLATE-CONTROL WHEEL F172	1	AQ
-56	0405027-5	NAMEPLATE-CONTROL WHEEL SKYHAWK	1	AP
-57	0405027-6	NAMEPLATE-CONTROL WHEEL SKYHAWK II	1	AP
-58	0405028-3	PLACARD-EXTERIOR BLACK 172	2	AP
	0405028-1	PLACARD-EXTERIOR WHITE 172 & SKYHAWK	2	AP
-59	0405029-2	PLACARD-EXTERIOR BLACK F172	2	AQ
	0405029-1	PLACARD-EXTERIOR WHITE FRENCH SKYHAWK II	2	AQ
-60	0505044-4	PLACARD-EXTERIOR RH SKYHAWK	1	AH
	0505044-3	PLACARD-EXTERIOR LH SKYHAWK	1	AH
-61	0505044-1	PLACARD-EXTERIOR SKYHAWK	2	AP
-62	0505044-2	PLACARD-EXTERIOR SKYHAWK II	2	AH
-63	0505046-1	PLACARD-EXTERIOR 172	2	AP
-64	0505046-2	PLACARD-EXTERIOR F172	2	AQ
	S1500	STENCILS-SLANT LETTERS & NUMERALS SEE SHEET 1 & 2	AR	
	S1600	STENCILS-VERTICAL LETTERS & NUMERALS SEE SHEET 1 & 2	AR	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
3 -		A---172 SERIAL 17257162 THRU 17263458 F172 SERIAL F172-0560 THRU F17201234 B---172 SERIAL 17257162 THRU 17258364 F172 SERIAL F172-0560 THRU F17200679 C---172 SERIAL 17257162 THRU 17258486 F172 SERIAL F172-0560 THRU F172-0654 D---DELETED E---172 SERIAL 17257162 THRU 17259223 F172 SERIAL F172-0560 THRU F17200754 F---172 SERIAL 17259224 THRU 17263458 F172 SERIAL F17200755 THRU F17201234 G---172 SERIAL 17258487 THRU 17259223 H---F172 SERIAL F17200655 THRU F17200754 J---172 SERIAL 17259224 THRU 17260758 K---F172 SERIAL F17200755 THRU F17200904 L---172 SERIAL 17258487 THRU 17259903 M---F172 SERIAL F17200655 THRU F17200804 N---172 SERIAL 17258365 THRU 17263458 F172 SERIAL F17200680 THRU F17201234 P---172 SERIAL 17257162 THRU 17258486 Q---F172 SERIAL F172-0560 THRU F172-0654 R---F172 SERIAL F17200655 THRU F17200754 S---172 SERIAL 17257162 THRU 17259223 T---F172 SERIAL F172-0560 THRU F17200754 U---172 SERIAL 17259224 THRU 17259903 ALASKAN ONLY V---172 SERIAL 17259224 THRU 17259903 F172 SERIAL F17200755 THRU F17200804 W---172 SERIAL 17259904 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 X---172 SERIAL 17259224 THRU 17259903 Y---F172 SERIAL F17200755 THRU F17200804 Z---172 SERIAL 17259904 THRU 17263458 AA---F172 SERIAL F17200805 THRU F17201234 AB---172 SERIAL 17259570 THRU 17259700 AC---172 SERIAL 17259904 THRU 17260758 AD---F172 SERIAL F17200805 THRU F17200904 AE---172 SERIAL 17260759 THRU 17263458 AF---F172 SERIAL F17200905 THRU F17201234 AG---172 SERIAL 17257162 THRU 17261898 F172 SERIAL F172-0560 THRU F17201034 AH---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234 AJ---172 SERIAL 17258946 THRU 17261898 F172 SERIAL F17200824 THRU F17201034 AK---172 SERIAL 17260759 THRU 17261898 AL---F172 SERIAL F17200905 THRU 17261898 AM---172 SERIAL 17257162 THRU 17259903 F172 SERIAL F172-0560 THRU F17200804 AN---172 SERIAL 17257162 THRU 17260758 F172 SERIAL F172-0560 THRU F17200904 AP---172 SERIAL 17261899 THRU 17263458 AQ---F172 SERIAL F17201035 THRU F17201234 AR---172 SERIAL 17262932, 17262945 THRU 17263458		


Placards (Cont)

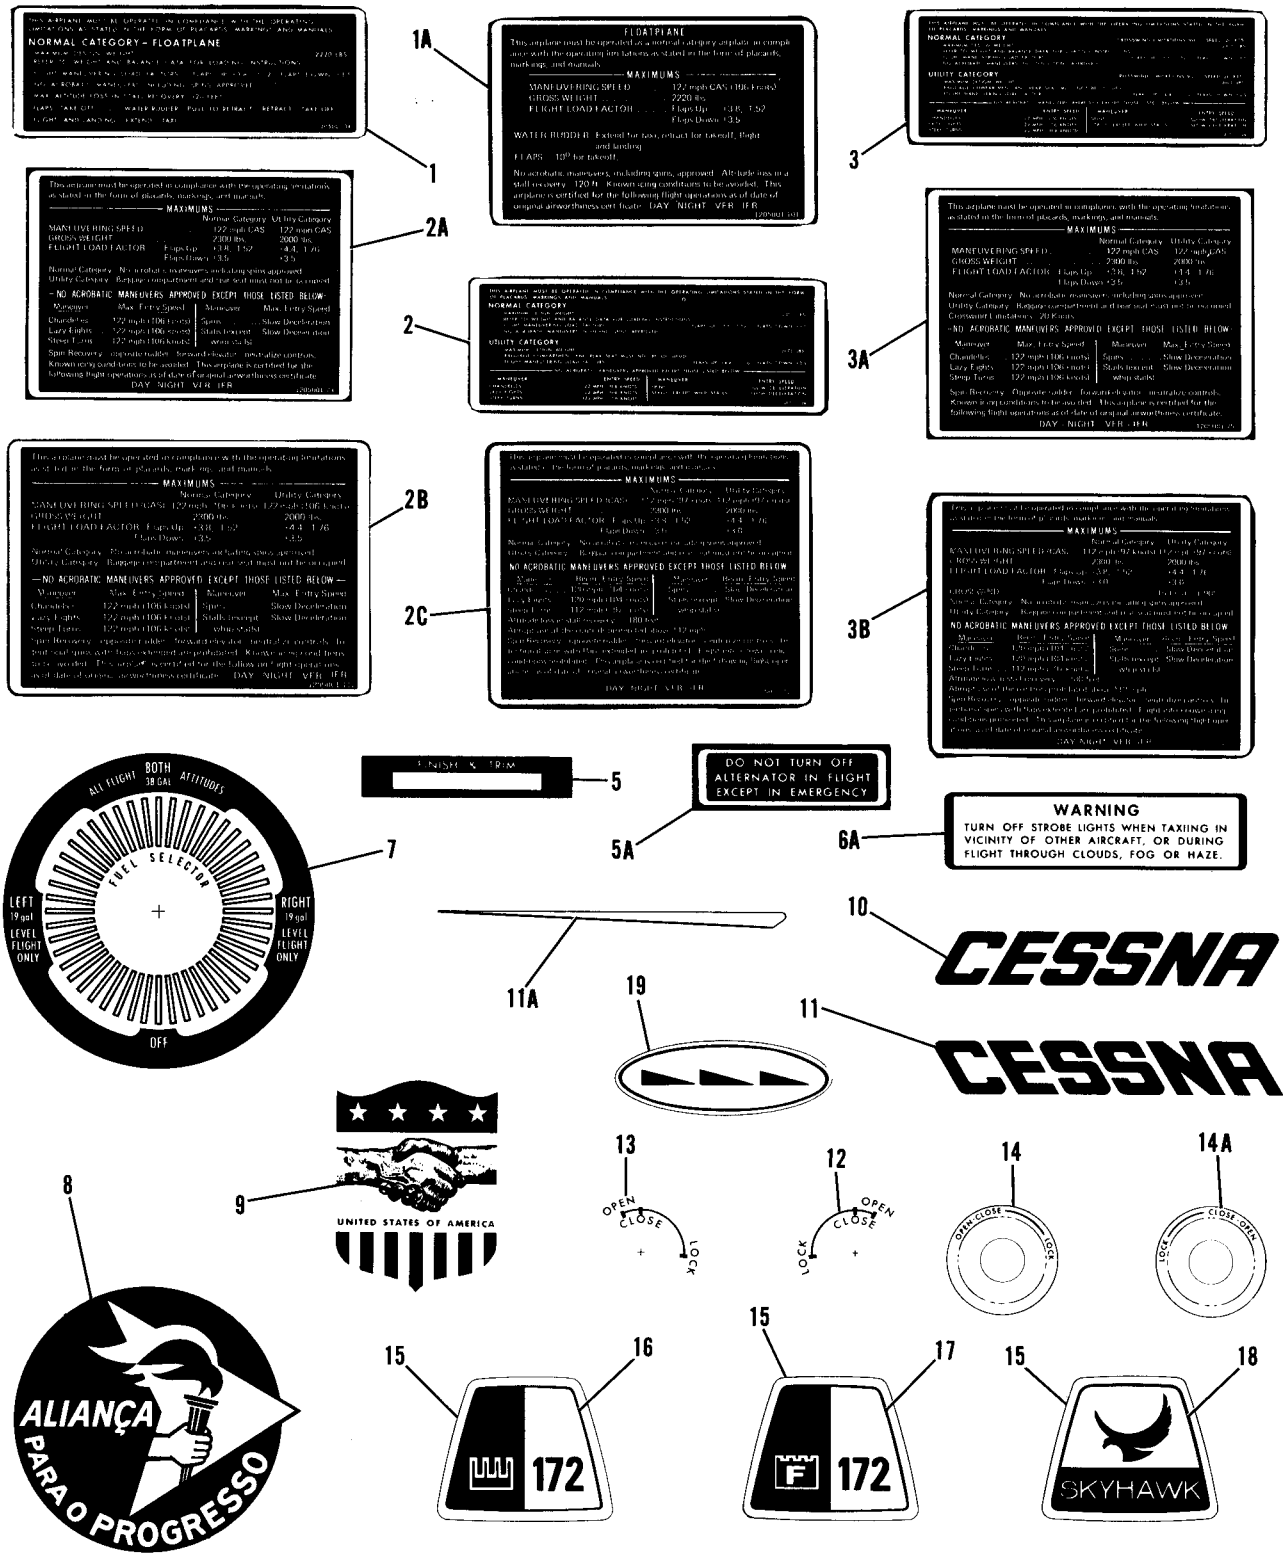

172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234

Figure 3. (Sheet 1 of 4) Placards, Nameplates & Exterior Markings

Placards (Cont)

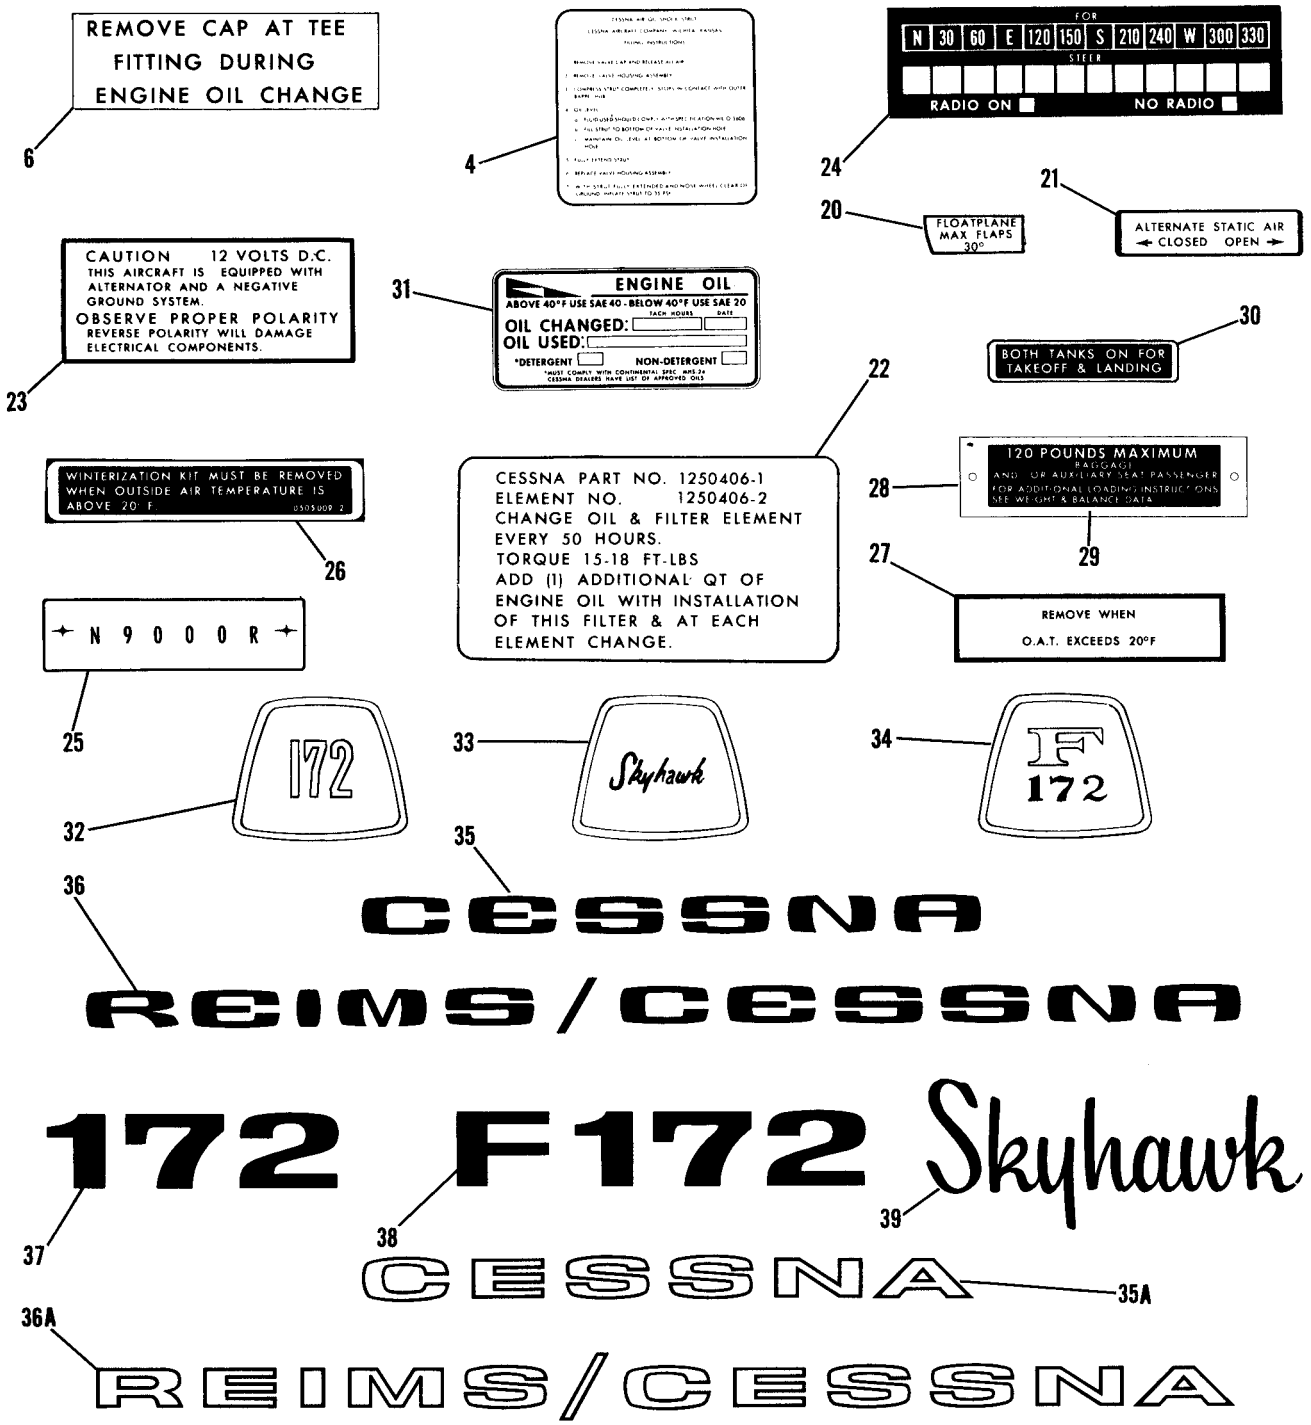

172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234

Figure 3. (Sheet 2 of 4) Placards, Nameplates & Exterior Markings


Placards (Cont)



172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234

Figure 3. (Sheet 3 of 4) Placards, Nameplates & Exterior Markings

Placards (Cont)

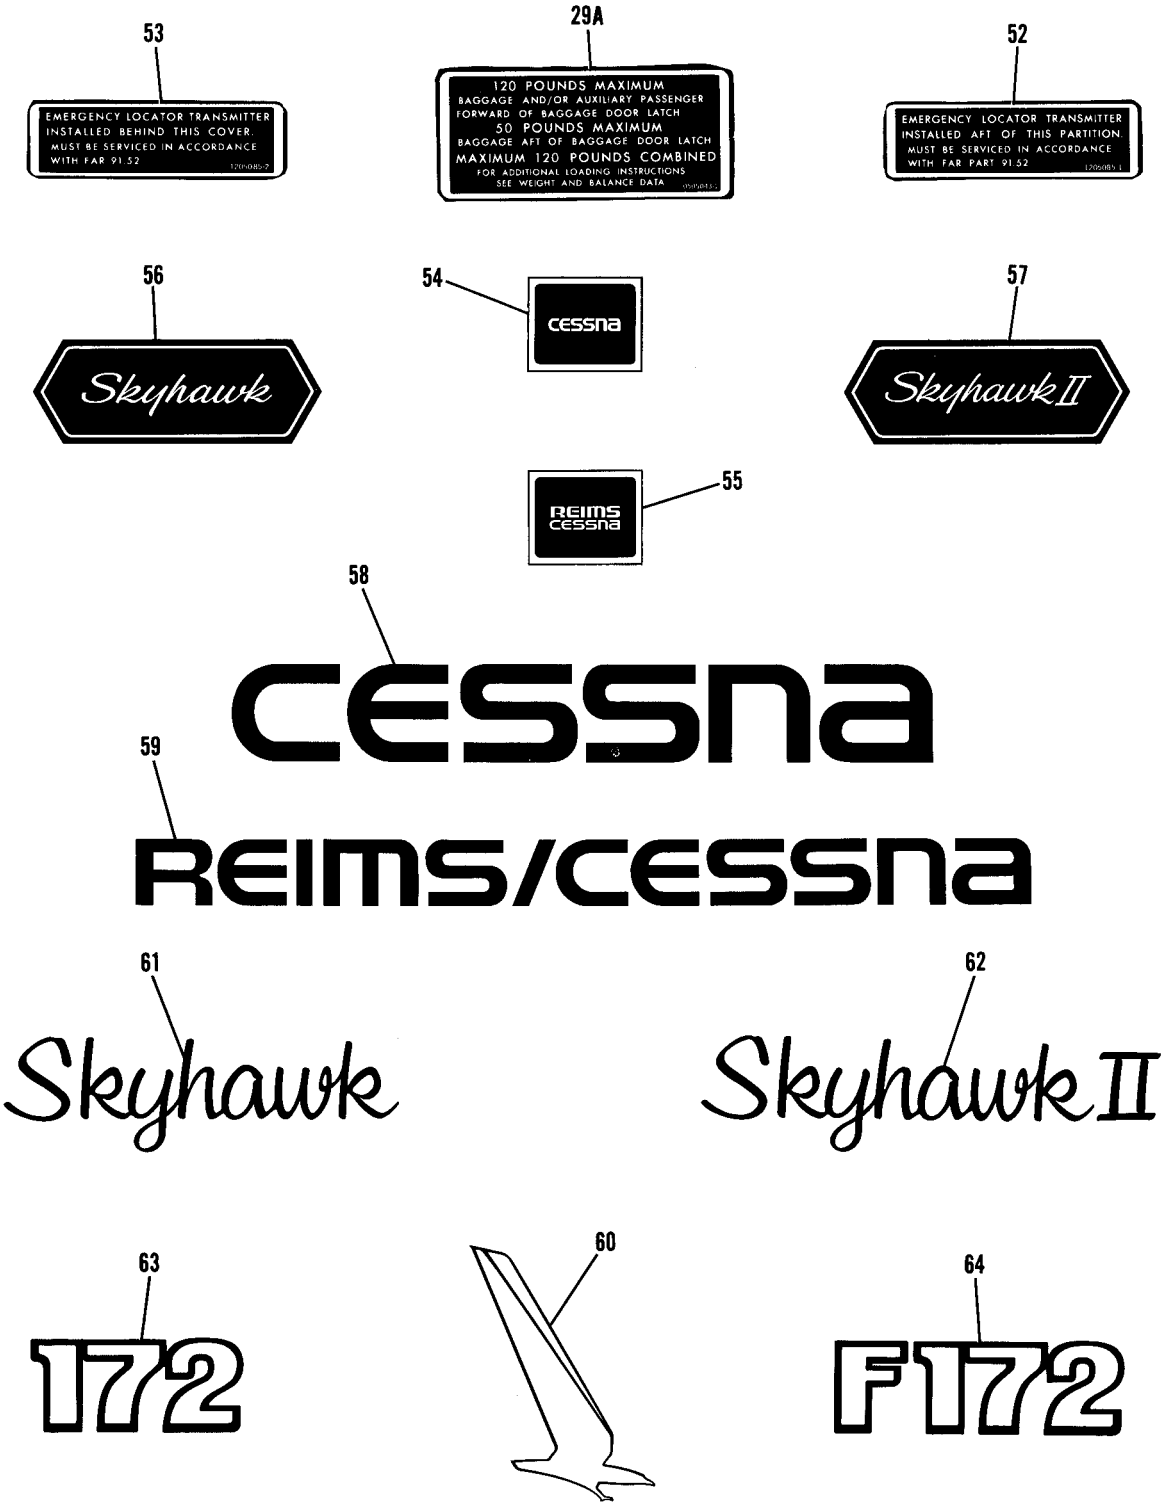

172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234

Figure 3. (Sheet 4 of 4) Placards, Nameplates & Exterior Markings

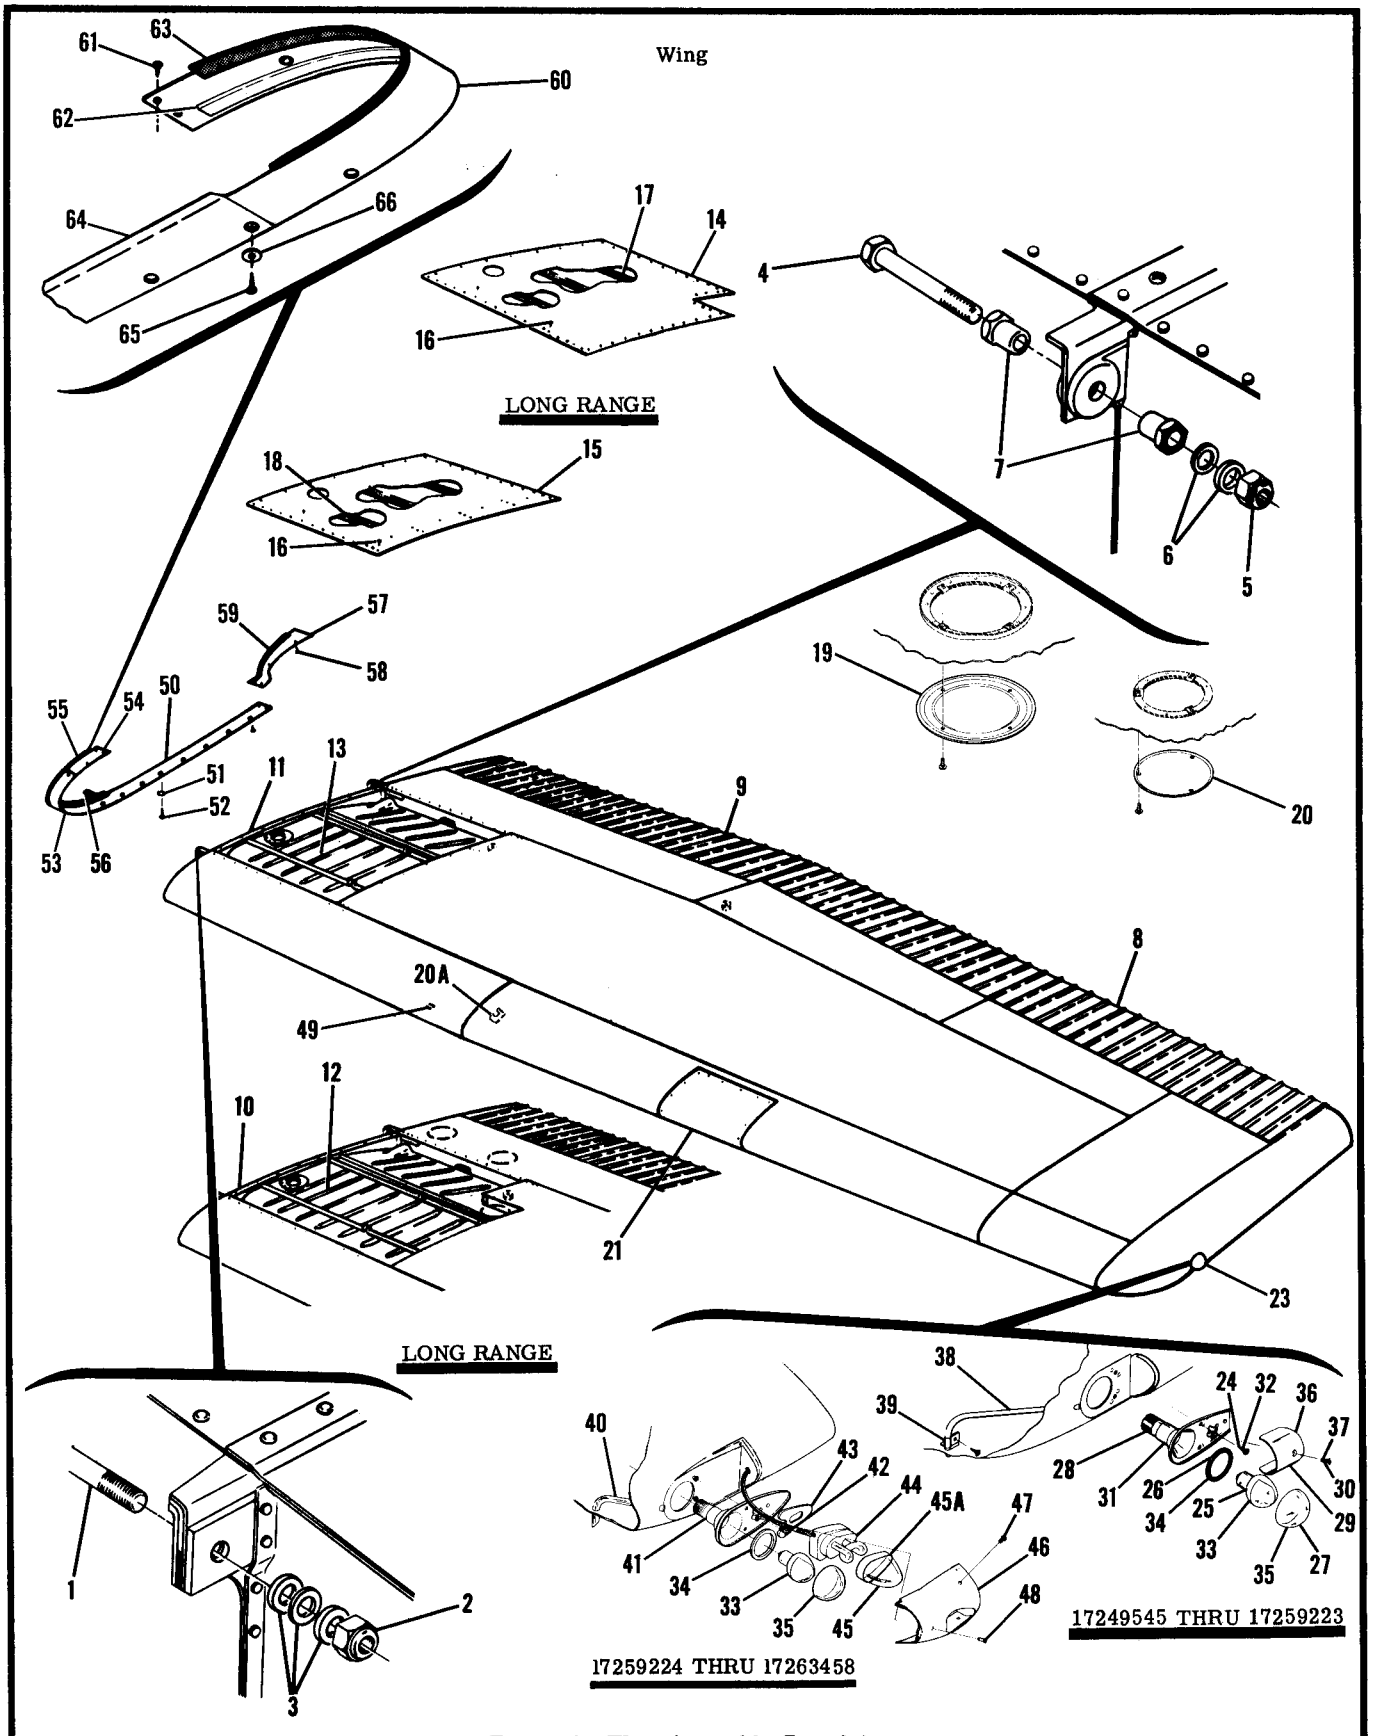


Figure 4. Wing Assembly Complete

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
4 -		WING ASSEMBLY-COMPLETE LH	NP	
		WING ASSEMBLY-COMPLETE RH	NP	
		ATTACHING PARTS		
- 1	AN8-23A	BOLT	1	
- 2	MS20365-820C	NUT	1	
- 3	AN960-816	WASHER	3	
- 4	AN7-24A	BOLT	1	
- 5	MS20365-720C	NUT	1	
- 6	AN960-716	WASHER	2	
- 7	0512123	BUSHING	2	
		---*---		
- 8	SEE FIG 19	AILERON INSTALLATION	1	
- 9	SEE FIG 20	FLAP INSTALLATION	1	
-10	SEE FIG 8	STRUCTURE ASSY-WING	1	V
	SEE FIG 9	STRUCTURE ASSY-WING	1	T
-11	SEE FIG 6	STRUCTURE ASSY-WING	1	U
	SEE FIG 7	STRUCTURE ASSY-WING	1	T
-12	SEE FIG 17	TANK INSTALLATION-FUEL	1	B
-13	SEE FIG 16	TANK INSTALLATION-FUEL	1	A
-14	0522617-1	COVER ASSEMBLY-FUEL TANK TOP LH	1	P
	0522617-2	COVER ASSEMBLY-FUEL TANK TOP RH	1	P
	SEE FIG 5	FUEL TANK WELL COVER ASSYS INSTALLATION LONG RANGE	1	R
-15	0523521-19	COVER ASSEMBLY-FUEL TANK TOP LH	1	N
	0523521-18	COVER ASSEMBLY-FUEL TANK TOP RH	1	N
	SEE FIG 5	FUEL TANK WELL COVER ASSYS INSTALLATION	1	R
		ATTACHING PARTS		
-16	NAS220-12	SCREW	19	P
	NAS220-8	SCREW	41	P
	NAS220-8	SCREW	30	N
	NAS220-7	SCREW	7	N
	NAS220-9	SCREW	11	N
	NAS220-12	SCREW	3	N
		---*---		
-17	0523540-2	PAD-NEOPRENE	2	P
-18	0523521-6	PAD-NEOPRENE	1	N
-19	S329	PLATE-INSPECTION USE WITH 5.82 IN. OPENING	AR	
		ATTACHING PARTS		
	S1021Z8-6	SCREW	4	
		---*---		
-20	S225-1	PLATE-INSPECTION USE WITH 4.00 IN. OPENING	AR	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	3	
		---*---		
-20A	0522101-1	PLATE-COVER	1	X
		ATTACHING PARTS		
	S1021Z8-8	SCREW	2	
		---*---		
-21	0523115-2	COVER-LANDING LIGHT CAP LH ONLY	1	J
		ATTACHING PARTS		
	S1021Z8-6	SCREW	18	
		---*---		
	SEE FIG 196	LANDING LIGHT INSTALLATION LH ONLY	1	
-22	SEE FIG 199	COURTESY LIGHT INSTALLATION	1	
-23	0423006-21	LIGHT ASSEMBLY-WING POSITION LH WHEN EXH USE C622001-0202	1	D
	0423006-22	LIGHT ASSEMBLY-WING POSITION RH WHEN EXH USE C622001-0202	1	D
		ATTACHING PARTS		
-24	S1021Z6-6	SCREW	3	
		---*---		
-25	A7512-12	BULB-WING POSITION LIGHT GMC	1	
-26	A1257A	GASKET-WING POSITION LIGHT GMC	1	
-27	A1280-2	LENS-WING POSITION LIGHT RED LH GMC	1	
	A1280-3	LENS-WING POSITION LIGHT GREEN RH GMC	1	
-28	30-0009-23	LAMP BASE GMC	1	
-29	0423007-1	SHIELD-POSITION LIGHT	1	
		ATTACHING PARTS		
-30	AN5078632R12	SCREW	1	
		---*---		
-31	C622001-0202	LIGHT BASE ASSEMBLY-WING POSITION	2	K
		ATTACHING PARTS		
-32	S1021Z8-6	SCREW	2	F
	NAS446-4-3	NUT	2	F
	AN507-832R8	SCREW	2	G
	NAS1329A08K120	NUT	2	G
		---*---		
-33	A7512-12	BULB-WING POSITION GMC	2	E
-34	A1257A	GASKET GMC	2	E

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
4 -35	A1280-2	LENS-WING POSITION LIGHT LH RED GMC	1	E
	A1280-3	LENS-WING POSITION LIGHT RH GREEN GMC	1	E
-36	0423007-1	SHIELD-WING POSITION LIGHT	2	F
	0423564-1	SHIELD-WING POSITION LIGHT LH	1	G
	0423564-2	SHIELD-WING POSITION LIGHT RH	1	G
		ATTACHING PARTS		
-37	AN507-632R12	SCREW	1	E
		---*---		
-38	0523702-3	DETECTOR LH	1	H
	0523702-4	DETECTOR RH	1	H
		ATTACHING PARTS		
	S1021Z8-6	SCREW	2	H
-39	S1153-1	BRACKET	1	H
	MS21919DG4	CLAMP	1	H
		---*---		
-40	1221201-3	DETECTOR-NAV LIGHT LH	1	M
	1221201-4	DETECTOR-NAV LIGHT RH	1	M
-41	C622001-0201	LIGHT BASE ASSY.-WING POSITION	1	L
		ATTACHING PARTS		
-42	AN507-632R8	SCREW	3	L
	NAS1329A06K120	NUTPLATE	3	L
		---*---		
-43	1520006-1	SPACER-STROBE LIGHT	1	S
-44	C622003-0101	LIGHT-STROBE	1	S
	C622006-0102	LIGHT-STROBE	1	T
-45	C622003-0104	LENS-STROBE LIGHT	1	S
	C622006-0103	LENS-STROBE LIGHT	1	T
-45A	C622006-0105	GASKET	1	T
-46	0523566-5	SHIELD-WING POSITION LIGHT LH WITH STROBE LIGHT	1	S
	0523566-6	SHIELD-WING POSITION LIGHT RH WITH STROBE LIGHT	1	S
	0523566-1	SHIELD-WING POSITION LIGHT LH W/O STROBE LIGHT	1	S
	0523566-2	SHIELD-WING POSITION LIGHT RH W/O STROBE LIGHT	1	S
	0723201-1	SHIELD-WING POSITION LIGHT LH W/O STROBE LIGHT	1	T
	0723201-2	SHIELD-WING POSITION LIGHT RH W/O STROBE LIGHT	1	T
	0723201-3	SHIELD-WING POSITION LIGHT LH WITH STROBE LIGHT	1	T
	0723201-4	SHIELD-WING POSITION LIGHT RH WITH STROBE LIGHT	1	T
		ATTACHING PARTS		
-47	AN507-632R8	SCREW	2	L
-48	AN507-632R14	SCREW	1	S
	AN507-632R12	SCREW	1	T
	NAS1329A06K120	NUTPLATE	2	L
		---*---		
-49	0511062-4	WING UNIT-STALL WARNING LH ONLY	1	C
	0511062-5	WING UNIT-STALL WARNING LH ONLY HEATED	1	C
		ATTACHING PARTS		
	S1021Z8-6	SCREW	4	
	NAS395-17-3	NUT	4	
		---*---		
-50	0520005-12	FAIRING ASSEMBLY-WING LH	1	W
	0520005-13	FAIRING ASSEMBLY-WING RH	1	W
		ATTACHING PARTS		
-51	S290D832	WASHER	14	W
-52	S1022Z8-8	SCREW	14	W
		---*---		
-53	0520005-10	FAIRING-FORWARD WING LH	1	
	0520005-11	FAIRING-FORWARD WING RH	1	
-54	0520005-6	EXTENSION	2	
-55	0520005-3	RUB STRIP	1	
-56	0520005-7	RUB STRIP	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
4 -57	0520008	FAIRING ASSEMBLY-WING REAR LOWER LH	1	
	0520008-1	FAIRING ASSEMBLY-WING REAR LOWER RH	1	
		ATTACHING PARTS		
-58	S1021Z8-6	SCREW	8	
		---*---		
-59	S202R8	MOULDING	AR	
-60	0520015-1	FILLET ASSY-LH	1	T
	0520015-2	FILLET ASSY-RH	1	T
		ATTACHING PARTS		
-61	S1021Z8-8	SCREW	5	T
	S290D832	WASHER	2	T
		---*---		
-62	0520005-3	RUB STRIP	1	
-63	S1078-1	SEAL BULK ITEM	AR	
-64	0520016-1	FAIRING-LH	1	T
	0520016-2	FAIRING-RH	1	T
		ATTACHING PARTS		
-65	S1021Z8-8	SCREW	6	T
-66	S290D832	WASHER	6	T
		---*---		

A---172 SERIAL 17249545 THRU 17263458
F172 SERIAL F172-0001 THRU F17201234
B---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
C---172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
D---172 SERIAL 17249545 THRU 17256515
F172 SERIAL F172-0001 THRU F172-0559
E---172 SERIAL 17256516 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
F---172 SERIAL 17256516 THRU 17258486
F172 SERIAL F172-0560 THRU F172-0654
G---172 SERIAL 17258487 THRU 17259223
F172 SERIAL F17200655 THRU F17200754
H---172 SERIAL 17249545 THRU 17258486
F172 SERIAL F172-0001 THRU F172-0654
J---172 SERIAL 17249545 THRU 17259223
F172 SERIAL F172-0001 THRU F17200804
K---172 SERIAL 17256516 THRU 17259223
F172 SERIAL F172-0560 THRU F17200754
L---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234
M---172 SERIAL 17258487 THRU 17263458
F172 SERIAL F17200655 THRU F17201234
N---172 SERIAL 17249545 THRU 17259903
F172 SERIAL F172-0001 THRU F17200804
P---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
172 SERIAL 17257162 THRU 17259903
F172 SERIAL F172-0560 THRU F17200804
R---172 SERIAL 17259904 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
S---172 SERIAL 17259224 THRU 17260758
F172 SERIAL F17200755 THRU F17200904
T---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234
U---172 SERIAL 17249545 THRU 17260758
F172 SERIAL F172-0001 THRU F17200904
V---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
172 SERIAL 17257162 THRU 17260758
F172 SERIAL F172-0560 THRU F17200904
W---172 SERIAL 17249545 THRU 17260758
F172 SERIAL F172-0001 THRU F17200904
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
X---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804

Wing (Cont)

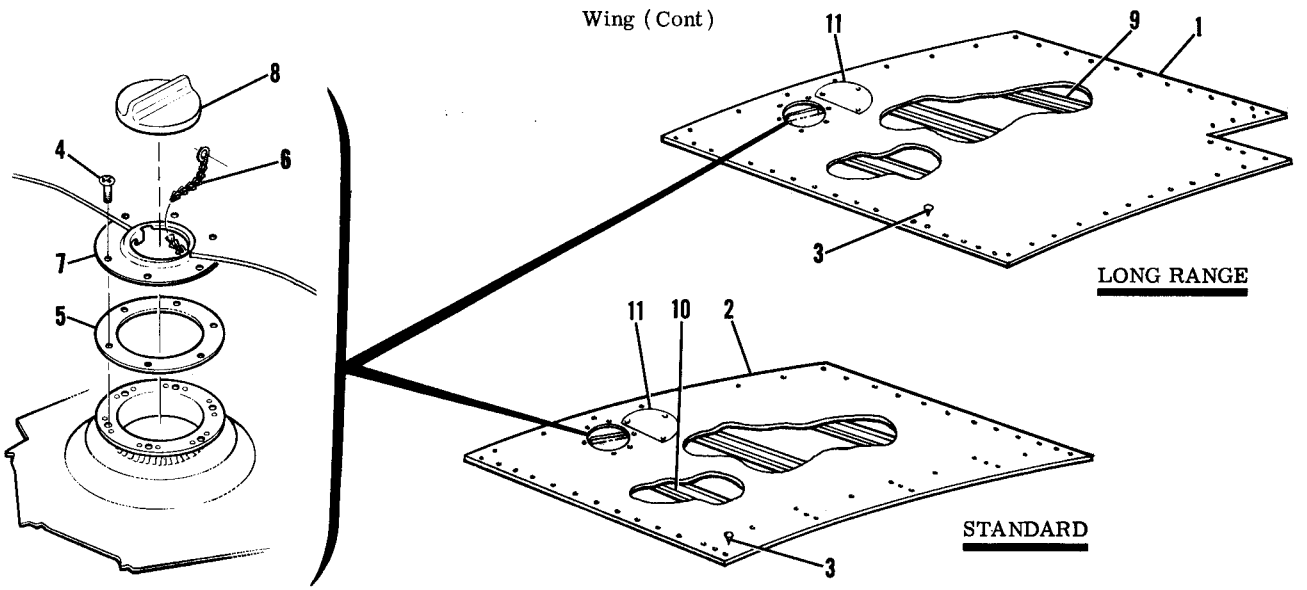

172 SERIAL 17259904 THRU 17263458
F172 SERIAL F17200805 THRU F17201234


Figure 5. Fuel Tank Well Cover Assemblies Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
5 -		FUEL TANK WELL COVERS INSTALLATION	NP	A
- 1	0522617-13	COVER ASSEMBLY-TANK WELL LH LONG RANGE	1	B
	0522617-15	COVER ASSEMBLY-TANK WELL LH LONG RANGE	1	C
	0522617-14	COVER ASSEMBLY-TANK WELL RH LONG RANGE	1	B
	0522617-16	COVER ASSEMBLY-TANK WELL RH LONG RANGE	1	C
- 2	0523521-25	COVER ASSEMBLY-TANK WELL LH	1	B
	0523521-27	COVER ASSEMBLY-TANK WELL LH	1	C
	0523521-24	COVER ASSEMBLY-TANK WELL RH	1	B
	0523521-26	COVER ASSEMBLY-TANK WELL RH	1	C
		ATTACHING PARTS		
- 3	NAS220-12	SCREW LONG RANGE	19	
	NAS220-8	SCREW LONG RANGE	41	B
	NAS220-8	SCREW LONG RANGE	45	C
	NAS220-8	SCREW STD	41	
	NAS220-12	SCREW STD	14	
- 4	AN520-10R8	SCREW	6	
- 5	0426013-2	GASKET	1	
		---*---		
	0426011-5	FUEL FILLER NECK ASSY	1	
- 6	C156001-0104	CHAIN ASSY	1	
- 7	0426011-4	FUEL FILLER NECK CAP ADAPTER	1	
- 8	0426015-1	CAP ASSY-FUEL	1	
- 9	0523540-2	PAD-NEOPRENE LONG RANGE	2	
-10	0523521-6	PAD-NEOPRENE STANDARD	1	
-11	0523558-1	COVER	1	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	3	
	0523619-1	GASKET	1	
	A1274-8Z-3	NUT TIN	3	
		---*---		
		A---172 SERIAL 17259904 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 B---172 SERIAL 17259904 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 C---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200905 THRU F17201234		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
6 -	0523005-200	STRUCTURE ASSEMBLY-RIGHT WING WHEN EXHAUSTED USE 0523005-214	1	A
	0523005-214	STRUCTURE ASSEMBLY-RIGHT WING	1	D
	0523005-222	STRUCTURE ASSEMBLY-RIGHT WING WEU 0523005-100	1	P
	0523005-100	STRUCTURE ASSEMBLY-RIGHT WING	1	R
	0523005-201	STRUCTURE ASSEMBLY-LEFT WING WHEN EXHAUSTED USE 0523005-216	1	B
	0523005-216	STRUCTURE ASSEMBLY-LEFT WING	1	B
	0523005-205	STRUCTURE ASSEMBLY-LEFT WING WHEN EXHAUSTED USE 0523005-215	1	C
	0523005-215	STRUCTURE ASSEMBLY-LEFT WING	1	D
	0523005-83	STRUCTURE ASSEMBLY-LEFT WING	1	K
	0523005-91	STRUCTURE ASSEMBLY-LEFT WING	1	L
- 1	SEE FIG 10	LEADING EDGE ASSEMBLY-WING	1	
- 2	SEE FIG 12	SPARS ASSEMBLY-WING	1	
- 3	SEE FIG 14	SKINS & STRINGERS-WING	1	
- 4	MS21919DG4	CLAMP TIN LH ONLY	1	
	AN74203	CLAMP TIN RH ONLY	1	
- 5	S1021Z8-8	SCREW	1	
- 6	NAS446-4-3	NUT	1	
- 7	0523507	RIB ASSEMBLY-FUEL CELL LH STA 23.625	1	
	0523507-1	RIB ASSEMBLY-FUEL CELL RH STA 23.625	1	
	NAS680A08	NUTPLATE	7	
	NAS444-4	NUTPLATE LH ONLY	6	
- 8	0523519	HAT SECTION-FUEL TANK LOWER	4	F
	0523519	HAT SECTION-FUEL TANK LWR	3	G
- 8A	0523519-7	STIFFENER ASSEMBLY-LH	1	G
	0523519-8	STIFFENER ASSEMBLY-RH	1	G
	0523540	PAD-NEOPRENE	3	
- 9	0523003-48	DOUBLER	1	
-10	0523508-5	RIB ASSEMBLY-RIGHT FUEL CELL STA 57.125	1	
	0523508-35	RIB ASSEMBLY-LEFT FUEL CELL STA 57.125	1	
	NAS680A08	NUTPLATE	11	
-11		DELETED-NOT AVAILABLE		
-12	0523509-1	RIB-WING CENTER SECTION STA 71.375 RH	1	S
	0523509-16	RIB-WING CENTER SECTION STA 71.375 RH	1	R
	0523509-1	RIB-WING CENTER SECTION STA 71.375 LH	1	
	0722201-1	RIB-WING CENTER SECTION STA 85.625	2	
	0523564-2	DOUBLER	1	R
-13	0523517-4	SPACER-RIB FORWARD STA 71.375	1	
-14	0523517-3	SPACER-RIB AFT STA 71.375	1	
-15	0523510-7	RIB-WING CENTER SECTION STA 100 LH	1	
	0523510-6	RIB-WING CENTER SECTION STA 100 RH	1	
-16	0523511-3	RIB-WING CENTER SECTION STA 118	1	
-17	0523512-3	RIB-WING CENTER SECTION STA 136	1	
-18	0523513-3	RIB-WING CENTER SECTION STA 154 LH	1	
	0523513-6	RIB-WING CENTER SECTION STA 154 RH	1	
-19	0523514-3	RIB-WING CENTER SECTION STA 172	1	
-20	0523515-3	RIB-WING CENTER SECTION STA 190	1	
-21	0720608-7	RIB-WING CENTER SECTION STA 208 WHEN EXHAUSTED USE 0720608-15	1	A
	S1863-3A	NUTPLATE TIN	10	
	0720608-15	RIB-WING CENTER SECTION STA 208	1	G
	NAS686A08K	NUTPLATE	1	G
-22	NAS395-4-3	NUT	4	
-23	0523232-2	RIB-WING ROOT TRAILING EDGE STA 23.625	1	
-24	0523231	RIB ASSEMBLY-FLAP TRACK STA 39 & 85.875	2	
	0523231-5	BRACKET	1	
-25	0523233-2	RIB ASSEMBLY-WING TRAILING EDGE STA 57.125	1	
-26	0523233	RIB ASSEMBLY-WING TRAILING EDGE STA 71.375	1	
-27	0523233-3	RUB STRIP	1	
-28	0523230	RIB ASSEMBLY-WING TRAILING EDGE STA 100.5 LH	1	
	0523230-1	RIB ASSEMBLY-WING TRAILING EDGE STA 100.5 RH	1	
	0523230-4	ANGLE LH ONLY	1	
	0523230-5	ANGLE RH ONLY	1	
-29	0523511-4	RIB-WING TRAILING EDGE STA 118	1	
-30	0523512-4	RIB-WING TRAILING EDGE STA 136	1	
-31	0523408	BRACKET-AILERON PULLEY	1	
-32	0523407-1	BRACKET-FLAP PULLEY	1	
-33	0523407	BRACKET-FLAP PULLEY	1	
-34	0523539-2	BRACKET-FLAP BELLCRANK SUPPORT UPPER LH	1	
	0523539-3	BRACKET-FLAP BELLCRANK SUPPORT UPPER RH	1	
-35	0523539-4	BRACKET-FLAP BELLCRANK SUPPORT LOWER LH	1	
	0523539-5	BRACKET-FLAP BELLCRANK SUPPORT LOWER RH	1	
-35A	0522630-2	BRACKET-UPR RH ONLY	1	
	0522630-1	BRACKET-LOWER RH ONLY	1	

CONTINUED ON NEXT PAGE

Wing (Cont)

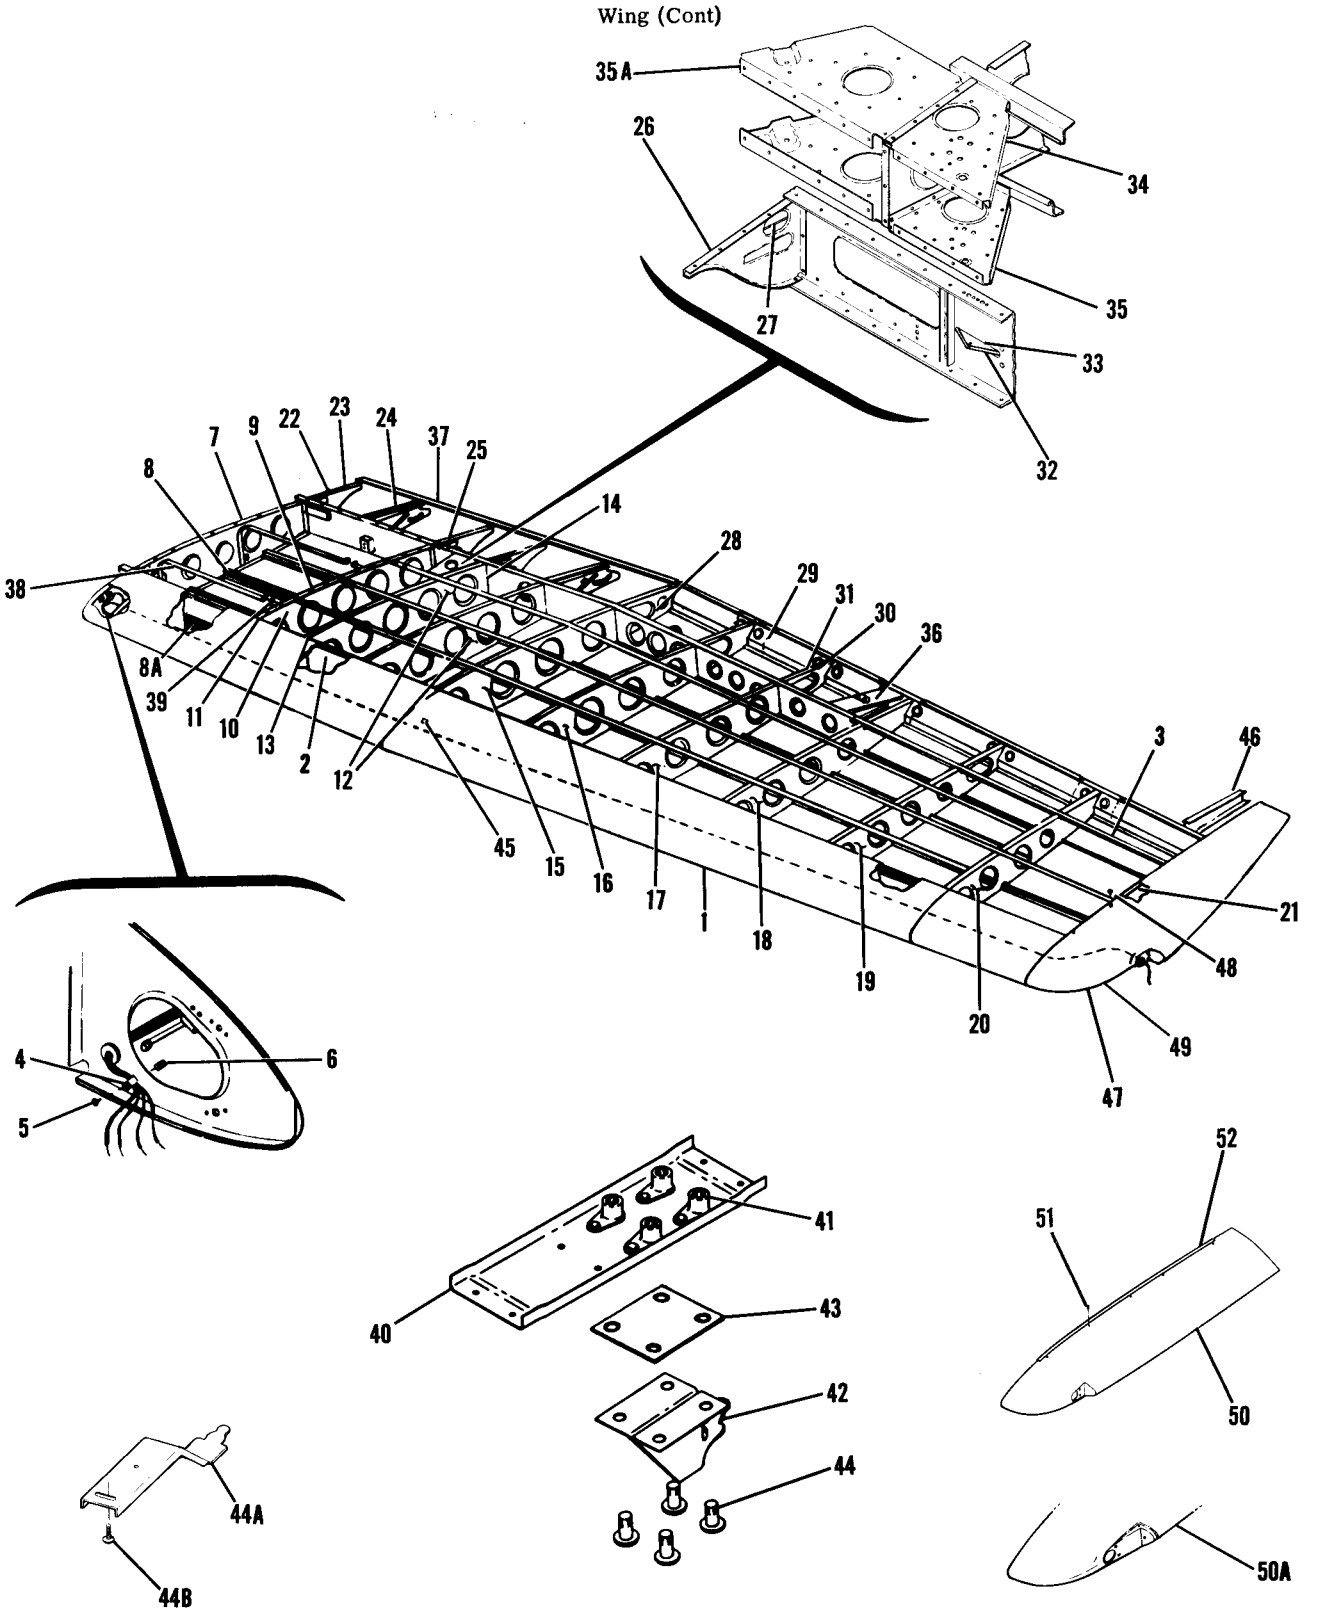

172 SERIAL 17249545 THRU 17260758
F172 SERIAL F172-0001 THRU F17200904

Figure 6. Wing Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
6 -36	0523219-2	CHANNEL-AILERON BELLCRANK UPPER LH	1	
	0523219-3	CHANNEL-AILERON BELLCRANK UPPER RH	1	
	0523219-4	CHANNEL-AILERON BELLCRANK LOWER LH	1	
	0523219-5	CHANNEL-AILERON BELLCRANK LOWER RH	1	
-37	0720005-1	STIFFENER-TRAILING EDGE	1	
-38	0523522	STRAP ASSEMBLY-FUEL TANK INBOARD	2	
	0523522-5	PAD-NEOPRENE	1	
	0523522-7	PAD-NEOPRENE	1	
-39	0523522-1	STRAP ASSEMBLY-FUEL TANK OUTBOARD	2	
-40	0523008-7	CHANNEL ASSEMBLY-DOOR CATCH	1	F
-41	22NA1K-02	NUTPLATE EN	4	F
-42	0523008-3	STOP ASSEMBLY-DOOR CATCH LH	1	F
	0523008-4	STOP ASSEMBLY-DOOR CATCH RH	1	F
		ATTACHING PARTS		
-43	0523008-9	SHIM .063 THICKNESS	AR	F
	0523008-10	SHIM .125 THICKNESS	AR	F
-44	AN520-10R7	SCREW USE WITH NO SHIMS	4	F
	AN520-10R8	SCREW USE WITH 0523008-9 SHIM	4	F
	NAS221-8	SCREW USE WITH 0523008-10 SHIM	4	F
	AN520-10R10	SCREW USE WITH BOTH SHIMS	4	F
		---*---		
-44A	0426209-3	DOOR CATCH	1	E
		ATTACHING PARTS		
-44B	AN515-6R6	SCREW	1	E
		---*---		
-45	51043	PLUG BUTTON UC LH ONLY	1	
-46	0721107-1	FAIRING-LH	1	
	0721107-2	FAIRING-RH	1	
-47	0523701-4	TIP ASSEMBLY-WING WHEN EXHAUSTED USE 0723615-200	1	B
		ATTACHING PARTS		
-48	S1021Z8-8	SCREW	10	B
		---*---		
	S1862-2	NUTPLATE TIN	2	
-49	0723615-200	TIP ASSEMBLY-WING	1	C
		ATTACHING PARTS		
	0423008-8	STIFFENER USED ON UPR SIDE LH & LWR SIDE RH TIP	1	C
	0423008-9	STIFFENER USED ON UPR SIDE RH & LOWER SIDE LH TIP	1	C
	S1021Z8-8	SCREW	10	C
		---*---		
-50	0523565-201	TIP-LH	1	N
	0523565-200	TIP-RH	1	N
-50A	0523565-29	TIP-LH	1	M
	0523565-30	TIP-RH	1	M
		ATTACHING PARTS		
-51	AN515-8R8	SCREW	10	E
		---*---		
-52	0423008-4	STIFFENER-LH UPPER RH LOWER	1	H
	0523565-21	STIFFENER-LH UPPER RH LOWER	1	J
	0423008-5	STIFFENER-RH UPPER LH LOWER	1	H
	0523565-22	STIFFENER-RH UPPER LH LOWER	1	J

NOTE. THIS SPARE INCLUDES ALL ELECTRICAL WIRING NECESSARY FOR INSTALLATION

A---172 SERIAL 17249545 THRU 17258019
F172 SERIAL F172-0001 THRU F172-0654
B---172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
C---172 SERIAL 17254893 THRU 17258019
F172 SERIAL F172-0320 THRU F172-0654
D---172 SERIAL 17258020 THRU 17258486
E---172 SERIAL 17258487 THRU 17260758
F172 SERIAL F17200655 THRU F17200904
F---172 SERIAL 17249545 THRU 17258486
F172 SERIAL F172-0001 THRU F172-0654
G---172 SERIAL 17258020 THRU 17260758
F172 SERIAL F17200655 THRU F17200904
H---172 SERIAL 17258487 THRU 17258895
F172 SERIAL F17200655 THRU F17200795


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
6 -		J---172 SERIAL 17258896 THRU 17260758 F172 SERIAL F17200796 THRU F17200904 K---172 SERIAL 17258487 THRU 17259223 F172 SERIAL F17200655 THRU F17200804 L---172 SERIAL 17259224 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 M---172 SERIAL 17259224 THRU 17260758 F172 SERIAL F17200755 THRU F17200904 N---172 SERIAL 17258487 THRU 17259223 F172 SERIAL F17200655 THRU F17200754 P---172 SERIAL 17258487 THRU 17259904 F172 SERIAL F17200655 THRU F17200804 R---172 SERIAL 17259905 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 S---172 SERIAL 17249545 THRU 17259904 F172 SERIAL F172-0001 THRU F17200804		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
7 -	0523011-1	STRUCTURE ASSEMBLY-LEFT WING	1	A
	0523011-2	STRUCTURE ASSEMBLY-RIGHT WING	1	A
- 1	SEE FIG 11	LEADING EDGE ASSEMBLY-WING	1	
- 2	SEE FIG 13	SPARS ASSEMBLY-WING	1	
- 3	SEE FIG 15	SKINS & STRINGERS-WING	1	
- 4	0523010-1	RIB ASSEMBLY-LH STA 23.625	1	
	0523010-2	RIB ASSEMBLY-RH STA 23.625	1	
- 5	NAS680A08	NUTPLATE UPPER	7	
	S1863-3	NUTPLATE LOWER	6	
- 6	MS35489-9	GROMMET	1	
- 7	0523023-1	REINFORCEMENT	1	
- 8	0523522	STRAP ASSEMBLY-FUEL TANK INBOARD	2	
	0523522-5	PAD-NEOPRENE	1	
- 9	0523522-1	STRAP ASSEMBLY-FUEL TANK OUTBOARD	2	
	0523522-7	PAD-NEOPRENE	1	
-10	0523519-15	STIFFENER ASSEMBLY-LH	1	
	0523519-16	STIFFENER ASSEMBLY-RH	1	
-11	0523519-14	STIFFENER	3	
-12	0523025-1	GUSSET	1	
-13	0523232-6	RIB-TRAILING EDGE STA 23.625	1	
	NAS395-14-3	NUT	3	
-14	0523231-13	RIB ASSEMBLY-FLAP TRACK STA 39.00 & STA 85.875	2	

CONTINUED ON NEXT PAGE

Wing (Cont)

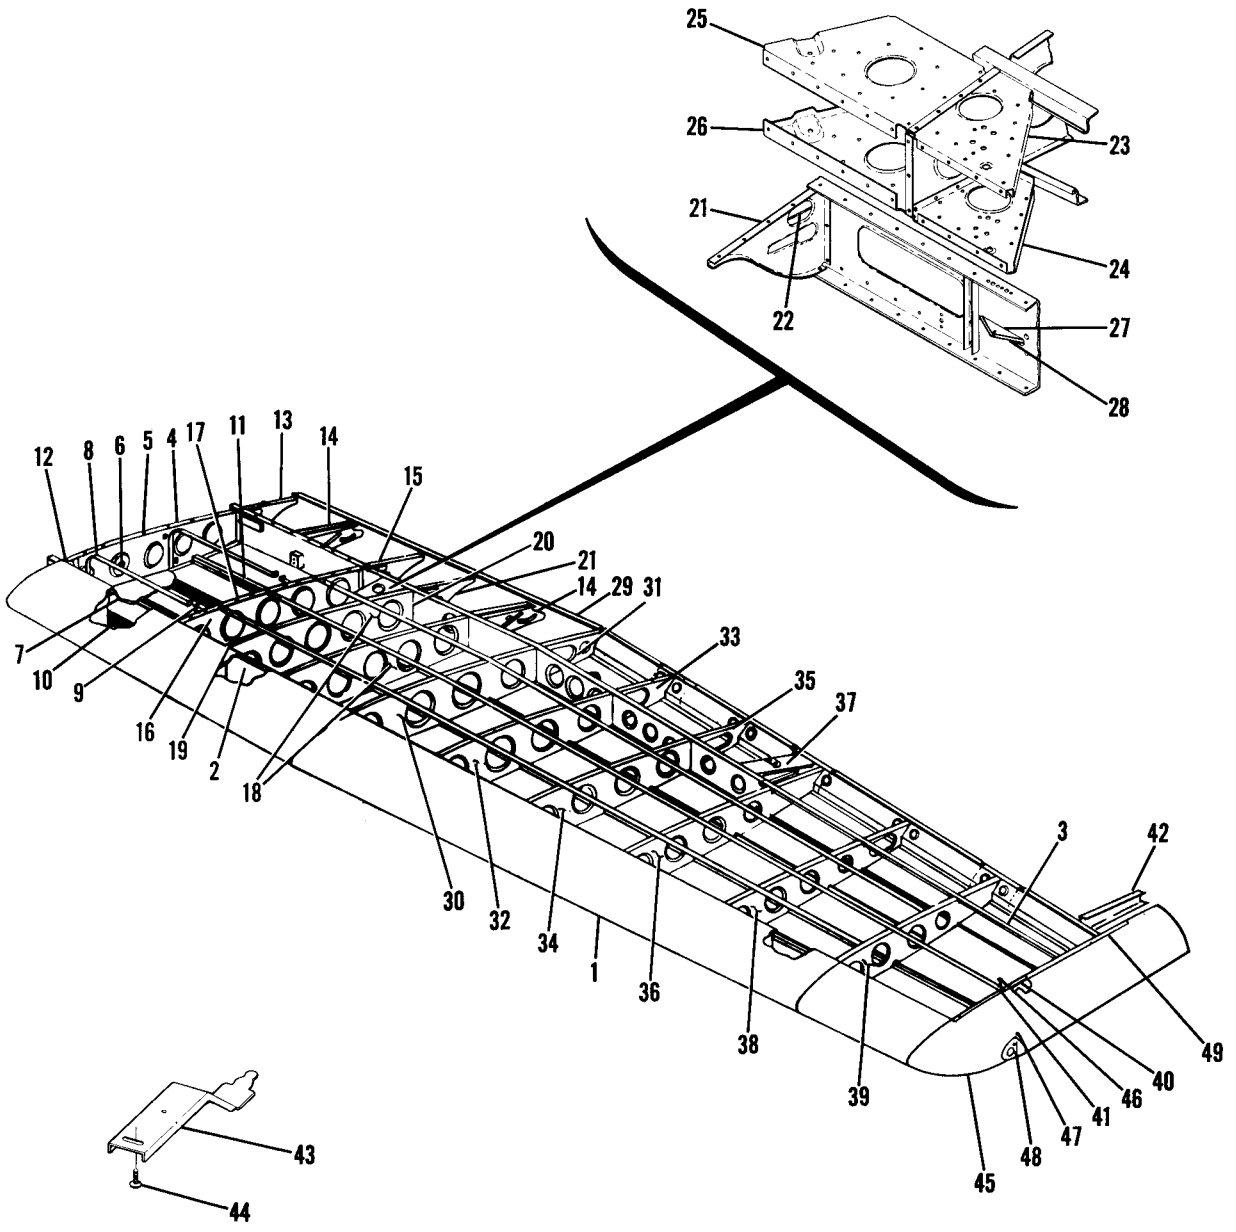


172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Figure 7. Wing Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
7 -15	0523233-11	RIB-TRAILING EDGE STA 57.125	1	
-16	0523508-37	RIB-LH STA 57.125	1	
	0523508-16	RIB-RH STA 57.125	1	
-17	NAS680A08	NUTPLATE	11	
-18	0523509-18	RIB-STA 71.375 & STA 85.625	2	
-19	0523517-4	SPACER	1	
-20	0523517-3	SPACER	1	
-21	0523233-22	RIB ASSEMBLY-TRAILING EDGE STA 71.375	1	
-22	0523233-3	RUB STRIP	1	
-23	0523539-2	BRACKET LH WING	1	
	0523539-3	BRACKET RH WING	1	
-24	0523539-4	BRACKET LH WING	1	
	0523539-5	BRACKET RH WING	1	
-25	0522630-3	BRACKET RH WING ONLY	1	
-26	0522630-4	BRACKET RH WING ONLY	1	
-27	0523407	BRACKET-PULLEY	1	
-28	0523407-1	BRACKET-PULLEY	1	
-29	0720005-3	STIFFENER	1	
-30	0523510-19	RIB ASSEMBLY-LH STA 100.50	1	
	0523510-20	RIB ASSEMBLY-RH STA 100.50	1	
-31	0523230	RIB ASSEMBLY-TRAILING EDGE LH STA 100.50	1	
	0523230-1	RIB ASSEMBLY-TRAILING EDGE RH STA 100.50	1	
	0523230-4	ANGLE-LH	1	
	0523230-5	ANGLE-RH	1	
-32	0523511-14	RIB-STA 118	1	
-33	0523511-15	RIB-TRAILING EDGE STA 118	1	
-34	0523512-19	RIB-STA 136	1	
-35	0523512-22	RIB-TRAILING EDGE STA 136	1	
-36	0523513-13	RIB-LH STA 154	1	
	0523513-14	RIB-RH STA 154	1	
-37	0523219-2	CHANNEL-AILERON BELLCRANK UPPER LH	1	
	0523219-3	CHANNEL-AILERON BELLCRANK UPPER RH	1	
	0523219-4	CHANNEL-AILERON BELLCRANK LOWER LH	1	
	0523219-5	CHANNEL-AILERON BELLCRANK LOWER RH	1	
	CM2692-28-1S	PLUG BUTTON	1	
-38	0523514-7	RIB-STA 172	1	
-39	0523515-7	RIB-STA 190	1	
-40	0722200-1	RIB ASSEMBLY STA 208 LH	1	
	0722200-2	RIB ASSEMBLY STA 208 RH	1	
-41	NAS686A08	NUTPLATE	10	
-42	0721107-1	FAIRING-STA 208 LH	1	
	0721107-2	FAIRING-STA 208 RH	1	
-43	0426209-3	DOOR CATCH	1	
		ATTACHING PARTS		
-44	AN515-6R6	SCREW	1	
		---*---		
-45	0723200-5	WING TIP ASSEMBLY-LH	1	A
	0723200-6	WING TIP ASSEMBLY-RH	1	A
		ATTACHING PARTS		
-46	AN515-8R8	SCREW	12	
		---*---		
-47	NAS1329A06K120	NUTPLATE	2	
-48	NAS1329A06K120	NUTPLATE	3	
-49	0723200-9	STIFFENER UPPER LH	1	
	0723200-10	STIFFENER UPPER RH	1	
	0723200-11	STIFFENER LOWER LH	1	
	0723200-12	STIFFENER LOWER RH	1	

A---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Wing (Cont)

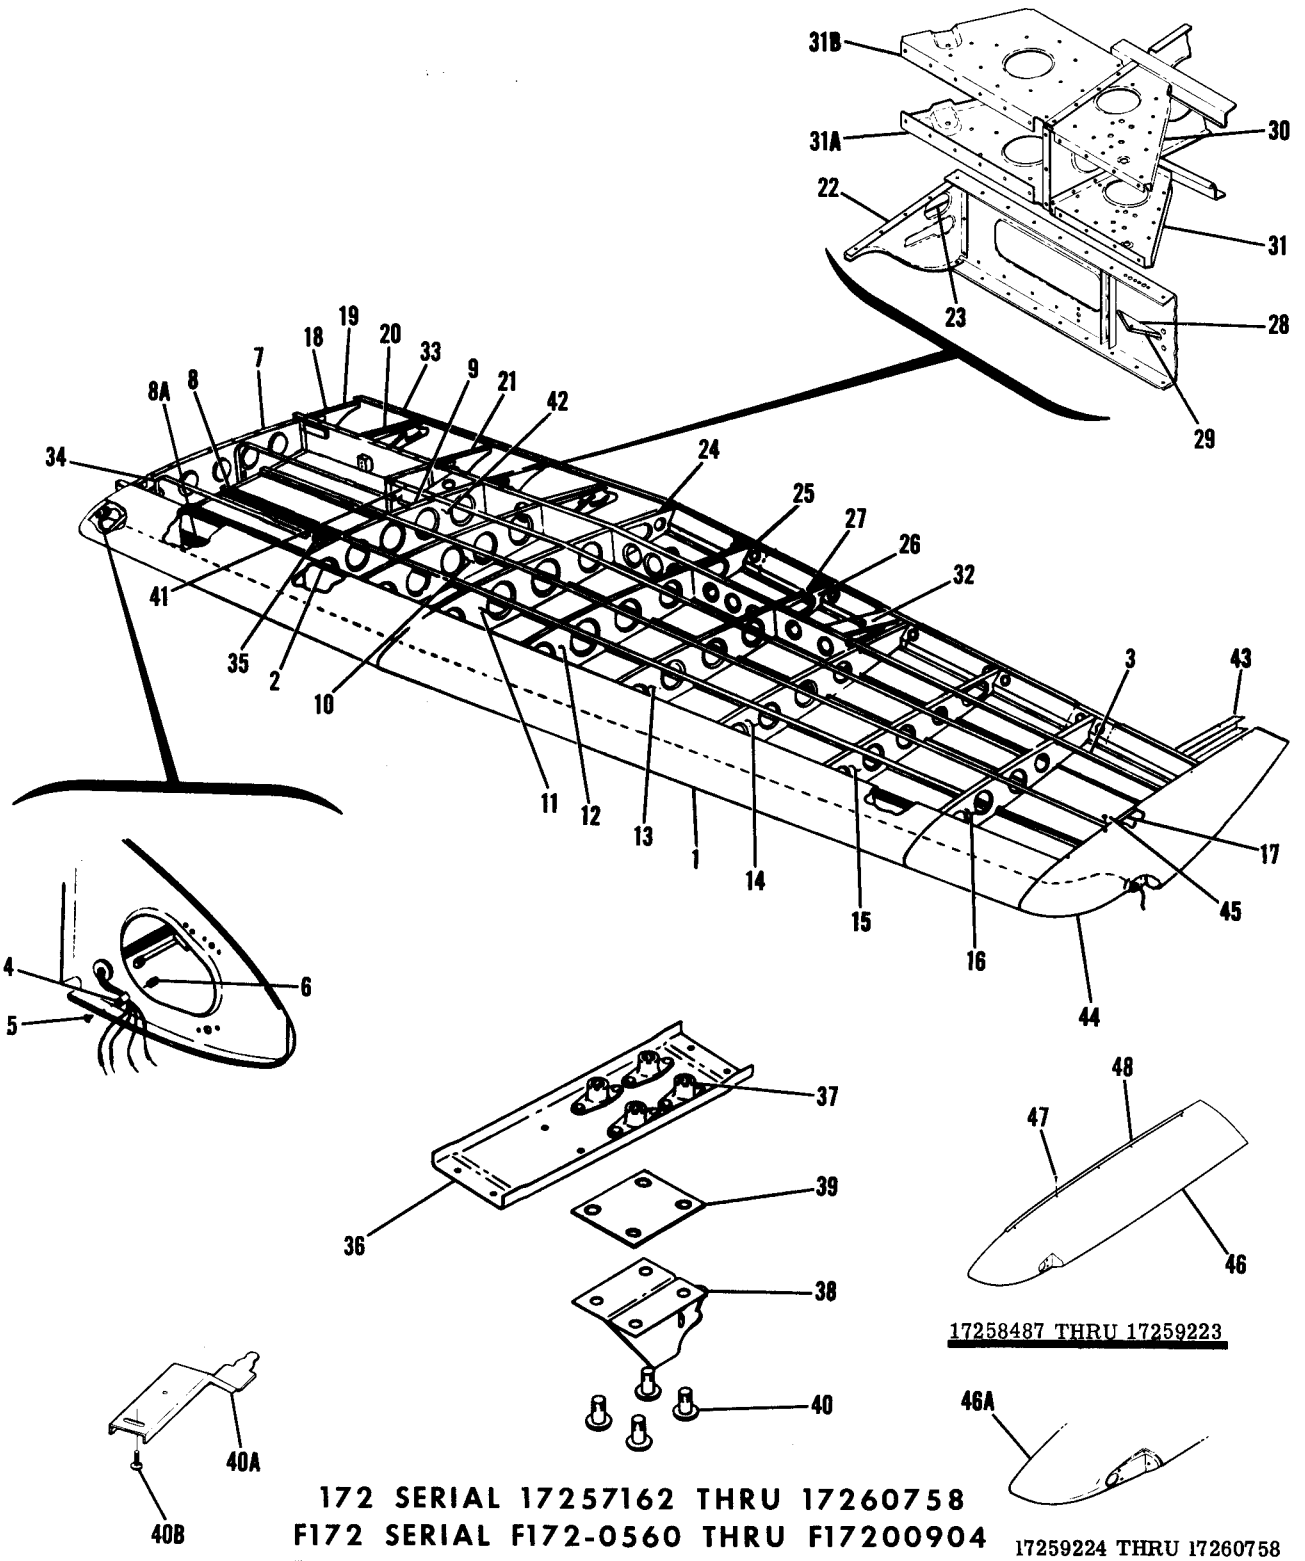

172 SERIAL 17257162 THRU 17260758
F172 SERIAL F172-0560 THRU F17200904
FP172 SERIAL FP172-0001 THRU FP172-0003
P172 SERIAL P17257120 THRU P17257188

Figure 8. Wing Structure Assembly - Long Range

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
8 -	0523005-203	**	STRUCTURE ASSEMBLY-LEFT WING LONG RANGE WHEN EXHAUSTED USE 0523005-217	1	A
	0523005-217	**	STRUCTURE ASSEMBLY-LEFT WING LONG RANGE	1	A
	0523005-202	**	STRUCTURE ASSEMBLY-RIGHT WING LONG RANGE WHEN EXHAUSTED USE 0523005-218	1	A
	0523005-218	**	STRUCTURE ASSEMBLY-RIGHT WING LONG RANGE	1	A
	0523005-209	*	STRUCTURE ASSEMBLY-LEFT WING LONG RANGE WHEN EXHAUSTED USE 0523005-219	1	B
	0523005-219	*	STRUCTURE ASSEMBLY-LEFT WING LONG RANGE	1	B
	0523005-85		STRUCTURE ASSEMBLY-LEFT WING LONG RANGE	1	E
	0523005-92		STRUCTURE ASSEMBLY-LEFT WING LONG RANGE	1	F
	0523005-206	*	STRUCTURE ASSEMBLY-RIGHT WING LONG RANGE WHEN EXHAUSTED USE 0523005-220	1	B
	0523005-220	*	STRUCTURE ASSEMBLY-RIGHT WING LONG RANGE	1	B
	0523005-224	*	STRUCTURE ASSEMBLY-RIGHT WING LONG RANGE WEU 0523005-96	1	J
	0523005-96	*	STRUCTURE ASSEMBLY-RIGHT WING LONG RANGE	1	K
- 1	SEE FIG 10		LEADING EDGE ASSEMBLY-WING	1	
- 2	SEE FIG 12		SPARS ASSEMBLY-WING	1	
- 3	SEE FIG 14		SKINS & STRINGERS-WING	1	
- 4	AN742D3		CLAMP RH ONLY	1	
	MS21919DG4		CLAMP LH ONLY	1	
- 5	S1021Z8-8		SCREW	1	
- 6	NAS446-4-3		NUT	1	
- 7	0523507		RIB ASSEMBLY-LEFT FUEL CELL STA 23.625	1	
	0523507-1		RIB ASSEMBLY-RIGHT FUEL CELL STA 23.625	1	
	NAS680A08		NUTPLATE	1	
	NAS444-4		NUTPLATE LH ONLY	1	
- 8	0523519-2		HAT SECTION-FUEL TANK LOWER	1	
	0523519-1		HAT SECTION-FUEL TANK LOWER	3	D
	0523519-1		HAT SECTION-FUEL TANK LOWER	2	C
	0523540-1		PAD-NEOPRENE	3	
- 8A	0523519-9		STIFFENER ASSEMBLY-LH	1	C
	0523519-10		STIFFENER ASSEMBLY-RH	1	C
- 9	0523003-48		DOUBLER	1	
	0721111-9		RIB ASSEMBLY-STUB STA 57.125 LH	1	
	0721111-10		RIB ASSEMBLY-STUB STA 57.125 RH	1	
	NAS680A08		NUTPLATE	2	
-10	0722201-1		RIB-WING CENTER SECTION STA 85.625	1	
-11	0523510		RIB-WING CENTER SECTION STA 100 LH WHEN EXHAUSTED USE 0523510-7	1	
	0523510-7		RIB-WING CENTER SECTION STA 100 LH	1	
	0523510-1		RIB-WING CENTER SECTION STA 100 RH WHEN EXHAUSTED USE 0523510-6	1	
	0523510-6		RIB-WING CENTER SECTION STA 100 RH	1	
-12	0523511-3		RIB-WING CENTER SECTION STA 118	1	
-13	0523512-3		RIB-WING CENTER SECTION STA 136	1	
-14	0523513-3		RIB-WING CENTER SECTION STA 154 LH	1	
	0523513-6		RIB-WING CENTER SECTION STA 154 RH	1	
-15	0523514-3		RIB-WING CENTER SECTION STA 172	1	
-16	0523515-3		RIB-WING CENTER SECTION STA 190	1	
-17	0720608-7		RIB-WING CENTER SECTION STA 208 WHEN EXHAUSTED USE 0720608-15	1	
	S1863-3A		NUTPLATE TIN	10	
	0720608-15		RIB-WING CENTER SECTION STA 208	1	
	NAS686A08K		NUTPLATE	10	
-18	NAS395-4-3		NUT	4	
-19	0523232-2		RIB-WING ROOT TRAILING EDGE STA 23.625	1	
-20	0523231		RIB-ASSEMBLY-FLAP TRACK STA 39 & 85.875	2	
	0523231-5		BRACKET	1	
-21	0523233-2		RIB ASSEMBLY-WING TRAILING EDGE STA 57.125	1	
-22	0523233		RIB ASSEMBLY-WING TRAILING EDGE STA 71.375	1	
-23	0523233-3		RUB STRIP	1	
-24	0523230		RIB ASSEMBLY-WING TRAILING EDGE STA 100.5 LH	1	
	0523230-1		RIB ASSEMBLY-WING TRAILING EDGE STA 100.5 RH	1	
	0523230-4		ANGLE LH ONLY	1	
	0523230-5		ANGLE RH ONLY	1	
-25	0523511-4		RIB-WING TRAILING EDGE STA 118	1	
-26	0523512-4		RIB-WING TRAILING EDGE STA 136	1	
-27	0523408		BRACKET-AILERON PULLEY	1	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
8 -28	0523407	BRACKET-FLAP PULLEY	1	
-29	0523407-1	BRACKET-FLAP PULLEY	1	
-30	0523539-7	BRACKET-FLAP BELLCRANK SUPPORT UPPER LH	1	
	0523539-8	BRACKET-FLAP BELLCRANK SUPPORT UPPER RH	1	
-31	0523539-9	BRACKET-FLAP BELLCRANK SUPPORT LOWER LH	1	
	0523539-10	BRACKET-FLAP BELLCRANK SUPPORT LOWER RH	1	
-31A	0522630-1	BRACKET ASSEMBLY-LOWER RH ONLY	1	C
-31B	0522630-2	BRACKET ASSEMBLY-UPPER RH ONLY	1	C
-32	0523219-2	CHANNEL-AILERON BELLCRANK UPPER LH	1	
	0523219-3	CHANNEL-AILERON BELLCRANK UPPER RH	1	
	0523219-4	CHANNEL-AILERON BELLCRANK LOWER LH	1	
	0523219-5	CHANNEL-AILERON BELLCRANK LOWER RH	1	
-33	0720005-1	STIFFENER-TRAILING EDGE	1	
-34	0523522-8	STRAP ASSEMBLY-FUEL TANK INBOARD	2	
	0523522-10	PAD-NEOPRENE	1	
-35	0523522-1	STRAP ASSEMBLY-FUEL TANK OUTBOARD	2	
	0523522-7	PAD-NEOPRENE	1	
-36	0523008-7	CHANNEL ASSEMBLY-DOOR CATCH	1	
-37	22NA1K-02	NUTPLATE EN	4	
-38	0523008-3	STOP ASSEMBLY-DOOR CATCH LH	1	D
	0523008-4	STOP ASSEMBLY-DOOR CATCH RH	1	D
		ATTACHING PARTS		
-39	0523008-10	SHIM .063 THICKNESS	AR	D
	0523008-10	SHIM .125 THICKNESS	AR	
-40	AN520-10R7	SCREW USE WITH NO SHIMS	4	D
	AN520-10R8	SCREW USE WITH 0523008-9 SHIM	4	D
	NAS221-8	SCREW USE WITH 0523008-10 SHIM	4	D
	AN520-10R10	SCREW USE WITH BOTH SHIMS	4	D
		---*---		
-40A	0426209-3	DOOR CATCH	1	C
		ATTACHING PARTS		
-40B	AN515-6R6	SCREW	1	C
		---*---		
-41	0523505-1	BULKHEAD ASSEMBLY LH	1	
	0523505-2	BULKHEAD ASSEMBLY RH	1	
-42	0523508-12	RIB ASSEMBLY-FUEL CELL STA 71.375 LH WEU 0523508-25	1	M
	0523508-25	RIB ASSEMBLY-FUEL CELL STA 71.375 LH	1	N
		RIB ASSEMBLY-FUEL CELL STA 71.375 RH FSO 0523508-26 & 0523564-1	1	L
	0523508-26	RIB ASSY-FUEL CELL STA 71.375 RH	1	K
	NAS680A08	NUTPLATE	9	
		DOUBLER-STA 70.88	1	K
-43	0721107-1	FAIRING LH	1	
	0721107-2	FAIRING RH	1	
-44	0523701-4	TIP ASSEMBLY WHEN EXHAUSTED USE 0723615-200	1	D
	0723615-200	TIP ASSEMBLY-WING	1	D
		ATTACHING PARTS		
-45	AN515-8R8	SCREW	10	
		---*---		
	S1862-2	NUTPLATE USED WITH 0523701-4	2	
-46	0523565-201	TIP-LH	1	C
	0523565-200	TIP-RH	1	C
-46A	0523565-29	TIP LH	1	F
	0523565-30	TIP RH	1	F
		ATTACHING PARTS		
-47	AN515-8R8	SCREW	10	C
		---*---		
-48	0423008-4	STIFFENER-LH UPPER RH LOWER	1	G
	0523565-21	STIFFENER-LH UPPER RH LOWER	1	H
	0423008-5	STIFFENER-RH UPPER LH LOWER	1	G
	0523565-22	STIFFENER-RH UPPER LH LOWER	1	H

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
8 -		NOTE. THIS SPARE INCLUDES ALL ELECTRICAL WIRING NECESSARY FOR INSTALLATION NOTE. *THESE ARE OPTIONAL LONG RANGE WINGS FOR MODEL 172 & F172. FOR STANDARD RANGE WING REFER TO FIG 6. NOTE. **THESE ARE LONG RANGE WINGS, STANDARD EQUIPMENT FOR MODEL P172 & FP172. A---P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 B---172 SERIAL 17257162 THRU 17258486 F172 SERIAL F172-0560 THRU F172-0654 C---172 SERIAL 17258487 THRU 17260758 F172 SERIAL F17200655 THRU F17200904 D---P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 172 SERIAL 17257162 THRU 17258486 F172 SERIAL F172-0560 THRU F172-0654 E---172 SERIAL 17258487 THRU 17259223 F172 SERIAL F17200655 THRU F17200804 F---172 SERIAL 17259224 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 G---172 SERIAL 17257162 THRU 17258895 F172 SERIAL F172-0560 THRU F17200795 H---172 SERIAL 17258896 THRU 17260758 F172 SERIAL F17200796 THRU F17200904 J---172 SERIAL 17258487 THRU 17259904 F172 SERIAL F17200655 THRU F17200804 K---172 SERIAL 17259905 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 L---172 SERIAL 17257162 THRU 17259904 P172 SERIAL P17257120 THRU P17257188 F172 SERIAL F172-0560 THRU F17200804 FP172 SERIAL FP172-0001 THRU FP172-0003 M---172 SERIAL 17257162 THRU 17259842 F172 SERIAL F172-0560 THRU F1720844 N---172 SERIAL 17259843 THRU 17260758 F172 SERIAL F1720845 THRU F17200904		

Wing (Cont)

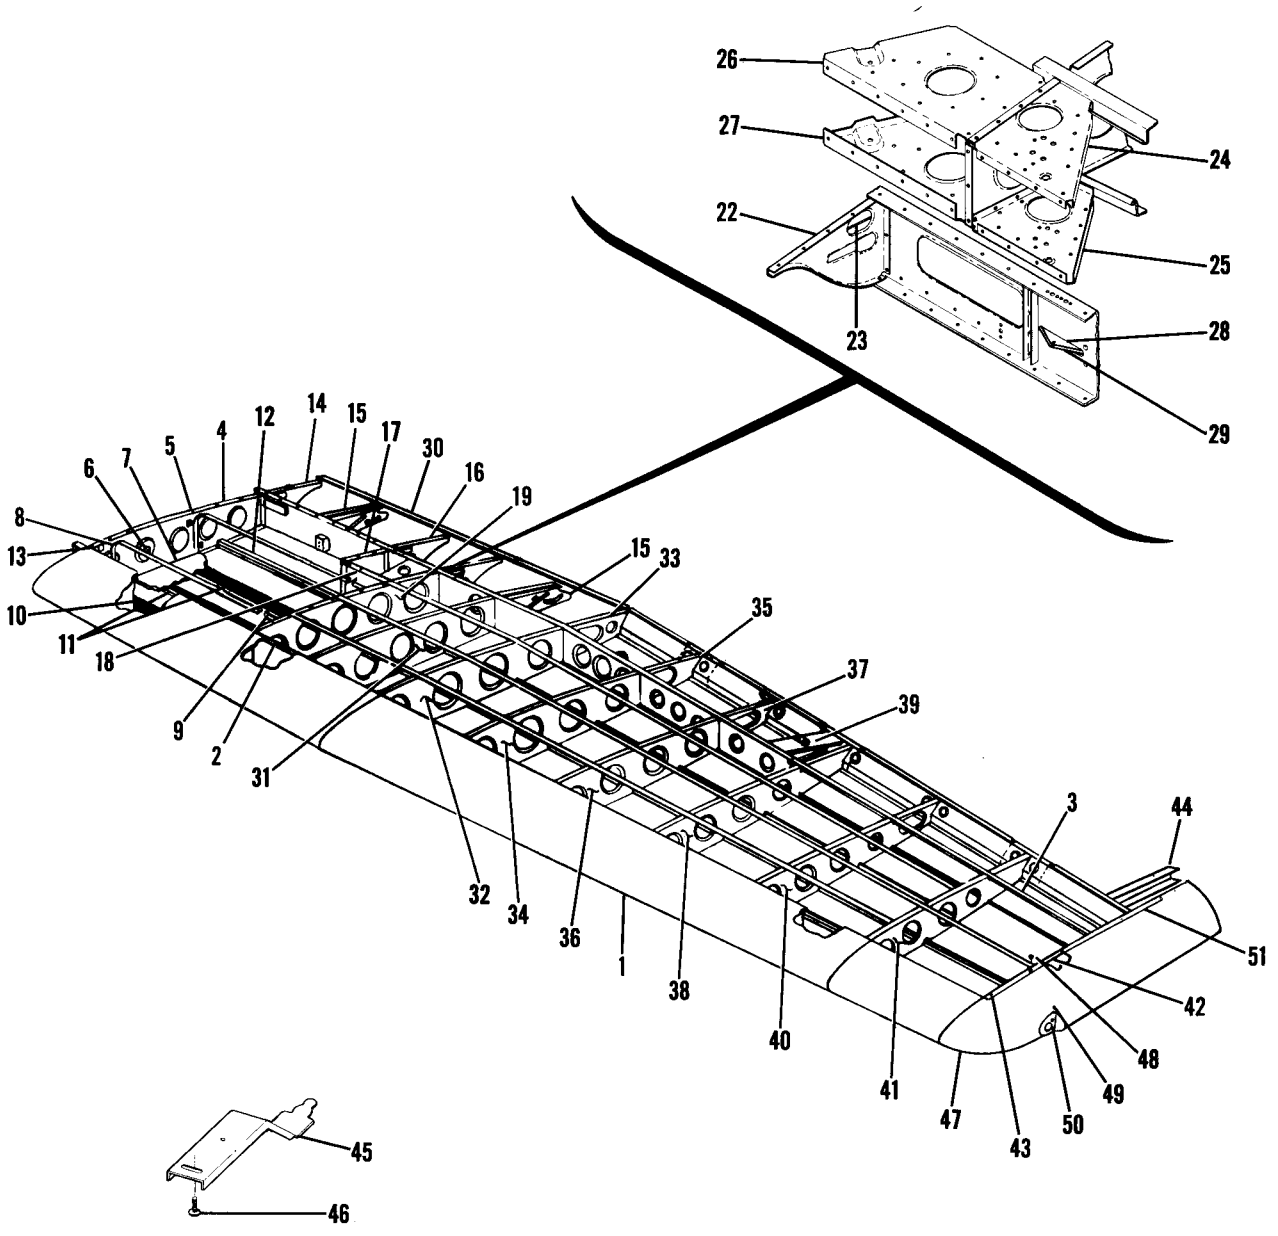

172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Figure 9. Wing Structure Assembly - Long Range

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
9 -	0523011-13	STRUCTURE ASSEMBLY-LEFT WING LONG RANGE	1	A
	0523011-14	STRUCTURE ASSEMBLY-RIGHT WING LONG RANGE	1	A
- 1	SEE FIG 11	LEADING EDGE ASSEMBLY-WING	1	
- 2	SEE FIG 13	SPARS ASSEMBLY-WING	1	
- 3	SEE FIG 15	SKINS & STRINGERS-WING	1	
- 4	0523010-1	RIB ASSEMBLY-LH STA 23.625	1	
	0523010-2	RIB ASSEMBLY-RH STA 23.625	1	
- 5	NAS680A08	NUTPLATE UPPER	7	
	S1863-3	NUTPLATE LOWER	6	
- 6	MS35489-9	GROMMET	1	
- 7	0523023-1	REINFORCEMENT	1	
- 8	0523522-8	STRAP ASSEMBLY-FUEL TANK INBOARD	2	
	0523522-10	PAD-NEOPRENE	1	
- 9	0523522-1	STRAP ASSEMBLY-FUEL TANK OUTBOARD	2	
	0523522-7	PAD-NEOPRENE	1	
-10	0523519-21	STIFFENER ASSEMBLY-LH	1	
	0523519-22	STIFFENER ASSEMBLY-RH	1	
-11	0523519-19	STIFFENER	2	
	S2127-1-46.94	SEAL	3	
-12	0523519-20	STIFFENER	1	
	S2127-1-31.25	SEAL	1	
-13	0523039-2	DOUBLER	1	
-14	0523232-6	RIB-TRAILING EDGE STA 23.625	1	
	NAS395-14-3	NUT	3	
-15	0523231-13	RIB ASSEMBLY-FLAP TRACK STA 39.00 & STA 85.875	2	
-16	0523233-11	RIB-TRAILING EDGE STA 57.125	1	
-17	0721111-29	RIB ASSEMBLY-LH STA 57.125	1	
	0721111-30	RIB ASSEMBLY-RH STA 57.125	1	
	NAS680A08	NUTPLATE	2	
	0523560-1	STIFFENER	1	
-18	0523505-5	BULKHEAD ASSEMBLY	1	
	0523505-6	BULKHEAD ASSEMBLY	1	
	0721100-5	STIFFENER	2	
	NAS680A08	NUTPLATE	4	
-19	0523508-29	RIB ASSEMBLY-LH STA 71.375	1	
	0523508-28	RIB ASSEMBLY-RH STA 71.375	1	
-20		DELETED-NOT USED		
-21		DELETED-NOT USED		
-22	0523233-22	RIB ASSEMBLY-TRAILING EDGE STA 71.375	1	
-23	0523233-3	RUB STRIP	1	
-24	0523539-7	BRACKET LH WING	1	
	0523539-3	BRACKET RH WING	1	
-25	0523539-9	BRACKET LH WING	1	
	0523539-5	BRACKET RH WING	1	
-26	0522630-3	BRACKET RH WING ONLY	1	
-27	0522630-4	BRACKET RH WING ONLY	1	
-28	0523407	BRACKET-PULLEY	1	
-29	0523407-1	BRACKET-PULLEY	1	
-30	0720005-3	STIFFENER	1	
-31	0523509-18	RIB-STA 85.625	1	
-32	0523510-19	RIB ASSEMBLY-LH STA 100.50	1	
	0523510-20	RIB ASSEMBLY-RH STA 100.50	1	
-33	0523230	RIB ASSEMBLY-TRAILING EDGE LH STA 100.50	1	
	0523230-1	RIB ASSEMBLY-TRAILING EDGE RH STA 100.50	1	
	0523230-4	ANGLE-LH	1	
	0523230-5	ANGLE-RH	1	
-34	0523511-14	RIB-STA 118	1	
-35	0523511-15	RIB-TRAILING EDGE STA 118	1	
-36	0523512-19	RIB-STA 136	1	
-37	0523512-22	RIB-TRAILING EDGE STA 136	1	
-38	0523513-13	RIB-LH STA 154	1	
	0523513-14	RIB-RH STA 154	1	
-39	0523219-2	CHANNEL-AILERON BELLCRANK UPPER LH	1	
	0523219-3	CHANNEL-AILERON BELLCRANK UPPER RH	1	
	0523219-4	CHANNEL-AILERON BELLCRANK LOWER LH	1	
	0523219-5	CHANNEL-AILERON BELLCRANK LOWER RH	1	
	CM2692-28-1S	PLUG BUTTON	1	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
9 -40	0523514-7	RIB-STA 172	1	
-41	0523515-7	RIB-STA 190	1	
-42	0722200-1	RIB ASSEMBLY-STA 208 LH	1	
	0722200-2	RIB ASSEMBLY-STA 208 RH	1	
-43	NAS686A08	NUTPLATE	10	
-44	0721107-1	FAIRING-STA 208 LH	1	
	0721107-2	FAIRING-STA 208 RH	1	
-45	0426209-3	DOOR CATCH	1	
		ATTACHING PARTS		
-46	AN515-6R6	SCREW	1	
		---*---		
-47	0723200-5	WING TIP ASSEMBLY-LH	1	A
	0723200-6	WING TIP ASSEMBLY-RH	1	A
		ATTACHING PARTS		
-48	AN515-8R8	SCREW	12	
		---*---		
-49	S1862-2	NUTPLATE	2	
-50	NAS1329A06K120	NUTPLATE	3	
-51	0723200-9	STIFFENER-UPPER LH	1	
	0723200-10	STIFFENER-UPPER RH	1	
	0723200-11	STIFFENER-LOWER LH	1	
	0723200-12	STIFFENER-LOWER RH	1	

A---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

This page intentionally left blank.

Wing (Cont)

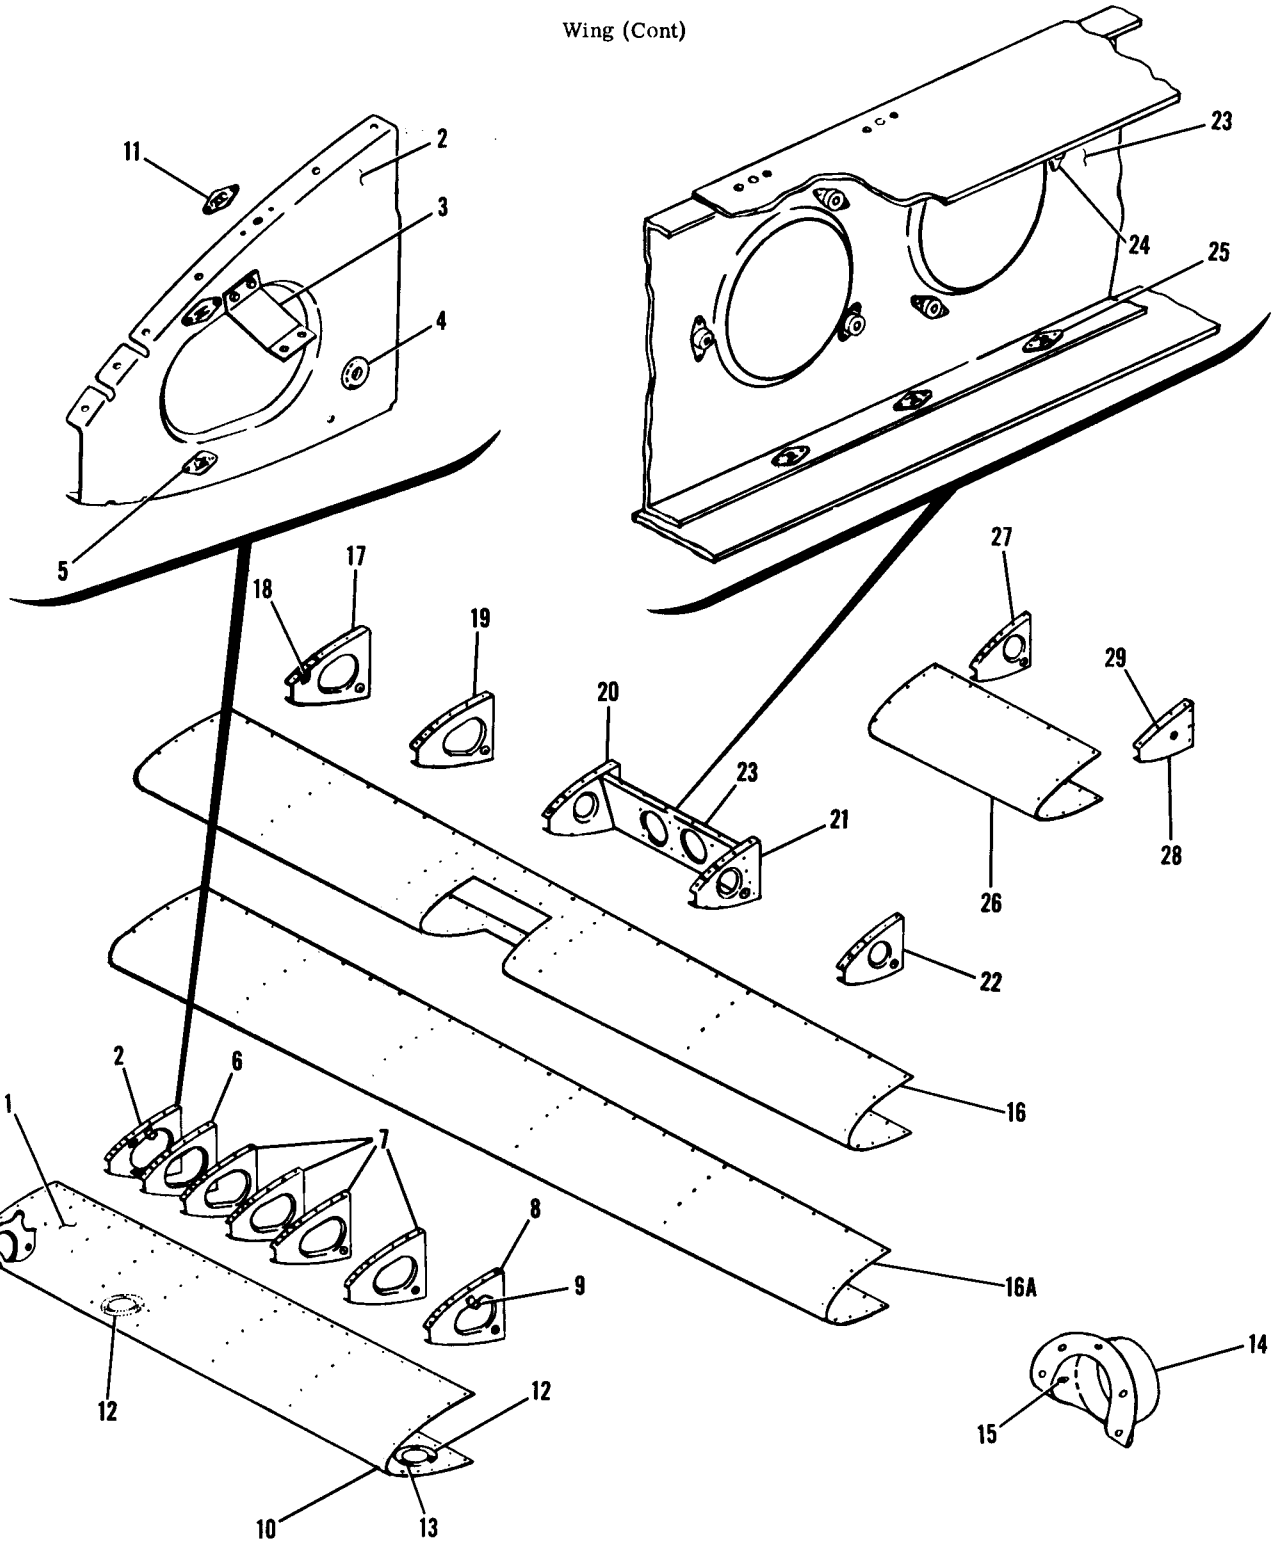


172 SERIAL 17249545 THRU 17260758
F172 SERIAL F172-0001 THRU F17200904
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Figure 10. Wing Leading Edge Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10 -		LEADING EDGE ASSEMBLY-WING	NP	G
	0523005-54	LEADING EDGE ASSEMBLY-INBOARD LH STA 23.625 TO 100	1	A
	0523005-204	LEADING EDGE ASSEMBLY-INBOARD LH STA 22.625 TO 100	1	B
	0523005-55	LEADING EDGE ASSEMBLY-INBOARD RH STA 23.625 TO 100	1	
- 1	0523005-21	SKIN-STA 23.625 TO 100 LH	1	A
	0523005-68	SKIN-STA 23.625 TO 100 LH	1	B
	0523005-22	SKIN-STA 23.625 TO 100 RH	1	
- 2	0523107-2	RIB ASSEMBLY-NOSE STA 23.625 LH	1	
	0523107-3	RIB ASSEMBLY-NOSE STA 23.625 RH	1	
- 3	0422291	BRACKET LH ONLY	1	
- 4	MS20230A2	GROMMET	1	
- 5	NAS444-5	NUTPLATE	2	
- 6	0523107	RIB ASSEMBLY-NOSE STA 32.000	1	
	MS20230A2	GROMMET	1	
- 7	0523108	RIB ASSEMBLY-NOSE STA 40.375 TO 71.375	4	
	MS20230A2	GROMMET	1	
- 8	0523111-1	RIB ASSEMBLY-NOSE STA 85.625 LH	1	
	0523111-2	RIB ASSEMBLY-NOSE STA 85.625 RH	1	
- 9	0422292	BRACKET LH ONLY	1	
	MS20230A2	GROMMET	1	
-10	MS35489-6	GROMMET LH ONLY	1	A
-11	NAS444-5	NUTPLATE	2	
-12	S237-2	DOUBLER-INSPECTION OPENING	3	
-13	NAS395-14-3	NUT	6	
-14	0413157	SCOOP-CABIN AIR VENT	1	
-15	NAS446-4-3	NUTPLATE	1	
	0523005-56	LEADING EDGE ASSEMBLY-CENTER LH STA 100 TO 190	1	E
	0523005-229	LEADING EDGE ASSEMBLY-CENTER LH STA. 100.0 TO 190.0	1	F
	0523005-57	LEADING EDGE ASSEMBLY-CENTER RH STA 100 TO 190	1	G
-16	0523003-10	SKIN-STA 100 TO 190 LH	1	E
-16A	0523003-63	SKIN-STA 100.0 TO 190.0 LH	1	F
	0523003-11	SKIN-STA 100.0 TO 190.0 RH	1	
-17	0523110-1	RIB ASSEMBLY-NOSE STA 100 LH	1	
	0523110-2	RIB ASSEMBLY-NOSE STA 100 RH	1	
-18	NAS444-1	NUTPLATE LH ONLY	1	
	MS20230A2	GROMMET	1	
-19	0523542-1	RIB ASSEMBLY-NOSE STA 118	1	
	MS20230A2	GROMMET	1	
-20	0523512-5	RIB ASSEMBLY-NOSE STA 136	1	
	MS20230A2	GROMMET	1	
-21	0523513-4	RIB ASSEMBLY-NOSE STA 154	1	
	MS20230A2	GROMMET	1	
-22	0523514-4	RIB ASSEMBLY-NOSE STA 172	1	
	MS20230A2	GROMMET	1	
-23	0523106	BRACKET ASSEMBLY-LANDING LIGHT LH ONLY	1	E
-24	NAS680A08	NUTPLATE	6	
-25	NAS444-5	NUTPLATE LH ONLY	18	
	0523005-52	LEADING EDGE ASSEMBLY-OUTBOARD LH	1	
	0523005-53	LEADING EDGE ASSEMBLY-OUTBOARD RH	1	
-26	0523003-56	SKIN-STA 190 TO 208 LH	1	
	0523003-57	SKIN-STA 190 TO 208 RH	1	
-27	0523515-4	RIB ASSEMBLY-NOSE STA 190	1	
	MS20230A2	GROMMET	1	
-28	0720608-23	RIB ASSEMBLY-NOSE STA 208	1	
	MS20230A2	GROMMET	1	
-29	NAS696A08K	NUTPLATE	2	

A---172 SERIAL 17249545 THRU 17254892
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0319
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17254893 THRU 17260758
F172 SERIAL F172-0320 THRU F17200904
C---DELETED
D---DELETED
E---172 SERIAL 17249545 THRU 17259223
F172 SERIAL F172-0001 THRU F17200804
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
F---172 SERIAL 17259224 THRU 17260758
F172 SERIAL F17200805 THRU F17200904
G---172 SERIAL 17249545 THRU 17260758
F172 SERIAL F172-0001 THRU F17200904
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Wing (Cont)

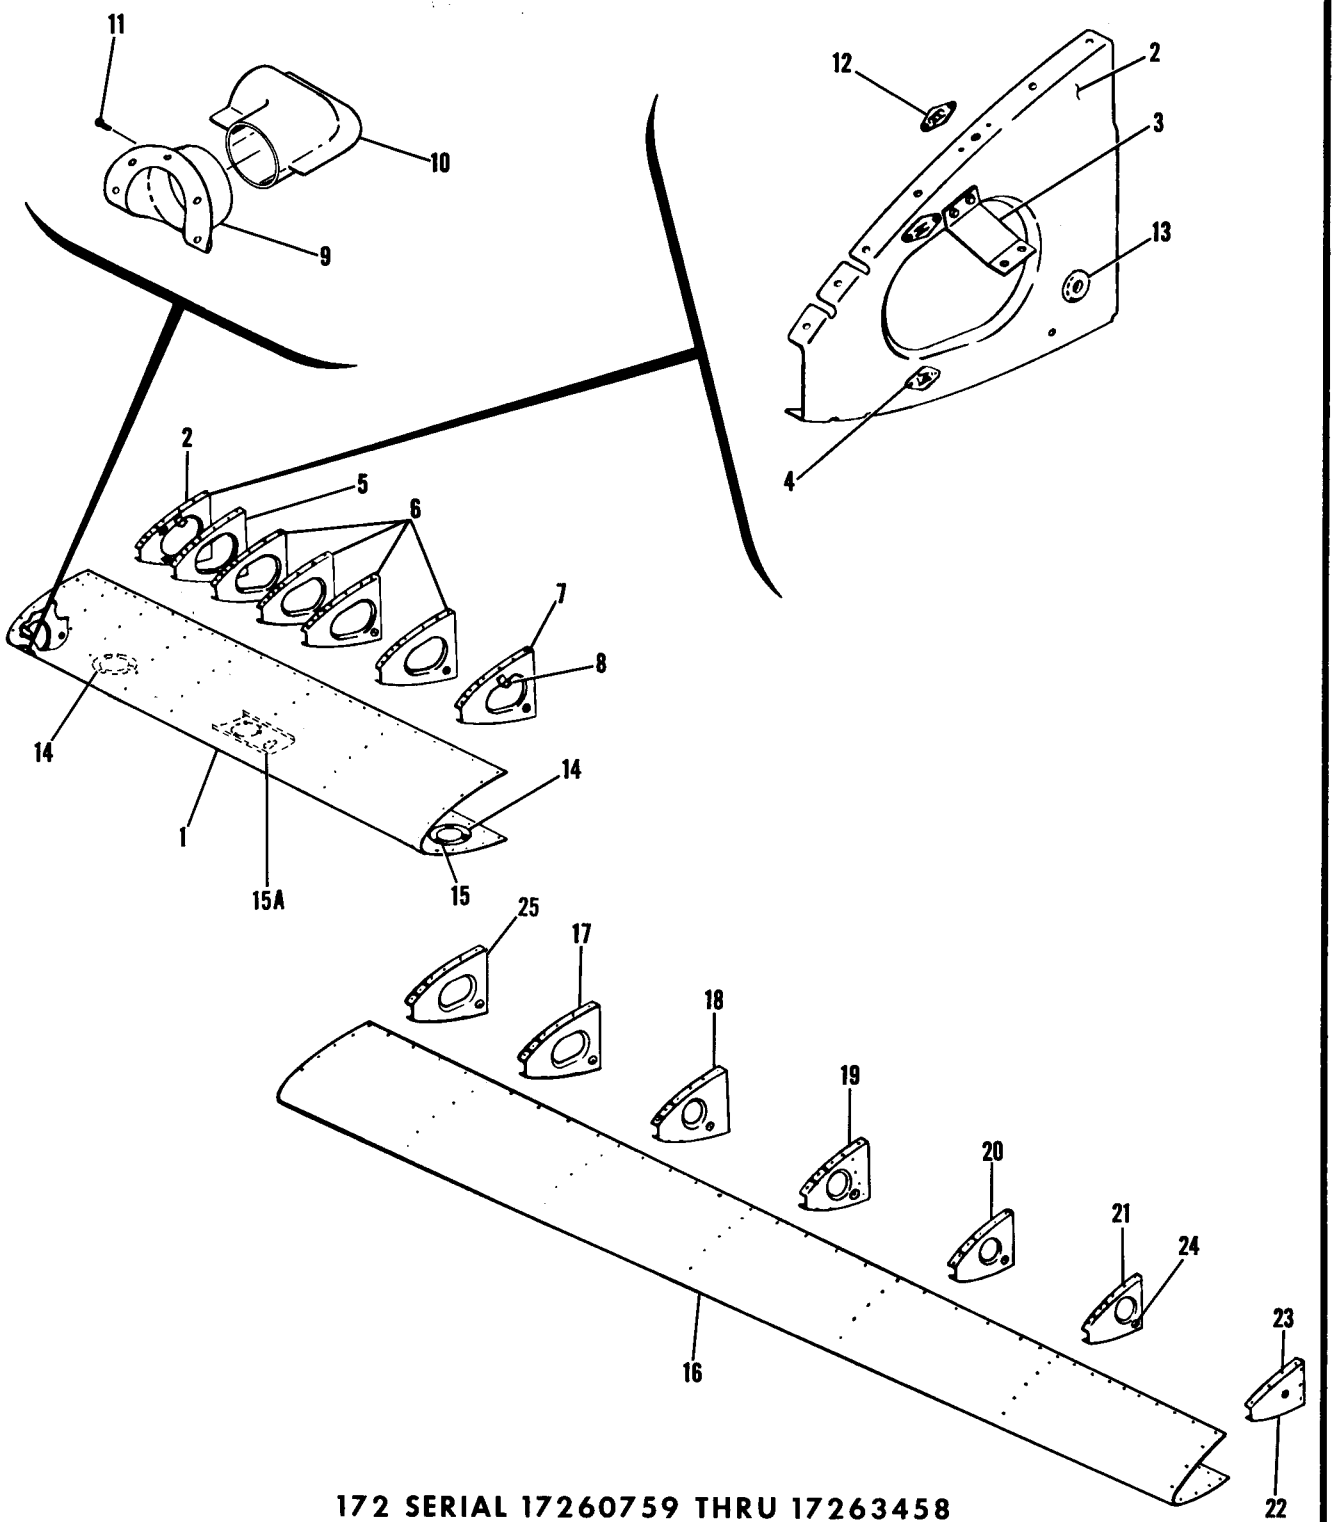


172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Figure 11. Wing Leading Edge Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
11 -		LEADING EDGE ASSEMBLY-WING	NP	A
	0523028-1	LEADING EDGE ASSY LH-INBOARD	1	
	0523028-3	LEADING EDGE ASSY LH-INBOARD LONG RANGE	1	
	0523028-2	LEADING EDGE ASSY RH-INBOARD	1	
	0523028-4	LEADING EDGE ASSY RH-INBOARD LONG RANGE	1	
- 1	0523028-5	SKIN LH	1	
	0523028-7	SKIN LH LONG RANGE	1	
	0523028-6	SKIN RH	1	
	0523028-8	SKIN RH LONG RANGE	1	
- 2	0523026-1	RIB ASSY-STA 23.625 LH	1	
	0523026-2	RIB ASSY-STA 23.625 RH	1	
- 3	0422291	BRACKET	1	
- 4	S1863-3	NUTPLATE	2	
- 5	0523027-3	RIB-STA 32.750	1	
- 6	0523027-1	RIB-STA 40.125 TO STA 71.125	4	
- 7	0523027-2	RIB-STA 85.375	1	
- 8	0422292	BRACKET-LH ONLY	2	
- 9	0722202-1	SCOOP-AIR	1	
		ATTACHING PARTS		
	AN960-4	WASHER	4	
		---*---		
-10	0450314	FITTING	1	
		ATTACHING PARTS		
-11	S1021Z8-8	SCREW	1	
	NAS446-4-3	NUT	1	
		---*---		
-12	S1860-2A	NUTPLATE-UPPER FLANGE	1	
	A6204-8Z3	NUTPLATE-LOWER FLANGE	1	
-13	S1291-8	GROMMET	7	
-14	S237-2	DOUBLER-INSPECTION OPENING LH ONLY	3	
	S237-2	DOUBLER-INSPECTION OPENING RH ONLY	2	
-15	NAS395-14-3	NUT	3	
	0523029-1	LEADING EDGE ASSY LH-OUTBOARD	1	
	0523029-2	LEADING EDGE ASSY RH-OUTBOARD	1	
-15A	0523048-1	DOUBLER ASSY-PITOT TUBE LH ONLY	1	
	NAS395-14-3	NUT	3	
-16	0523029-3	SKIN LH	1	
	0523029-4	SKIN RH	1	
-17	0523031-1	RIB-LH STA 118.00	1	
	0523031-2	RIB-RH STA 118.00	1	
-18	0523032-1	RIB-LH STA 136.00	1	
	0523032-2	RIB-RH STA 136.00	1	
-19	0523033-1	RIB-LH STA 154.00	1	
	0523033-2	RIB-RH STA 154.00	1	
-20	0523034-1	RIB-LH STA 172.00	1	
	0523034-2	RIB-RH STA 172.00	1	
-21	0523035-1	RIB-LH STA 190.00	1	
	0523035-2	RIB-RH STA 190.00	1	
-22	0523036-1	RIB-LH STA 208.00	1	
	0523036-2	RIB-RH STA 208.00	1	
-23	NAS696A08	NUTPLATE	2	
-24	S1291-8	GROMMET	6	
-25	0523030-1	RIB-LH STA 100.00	1	
	0523030-2	RIB-RH STA 100.00	1	
		A---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200905 THRU F17201234		

Wing (Cont)

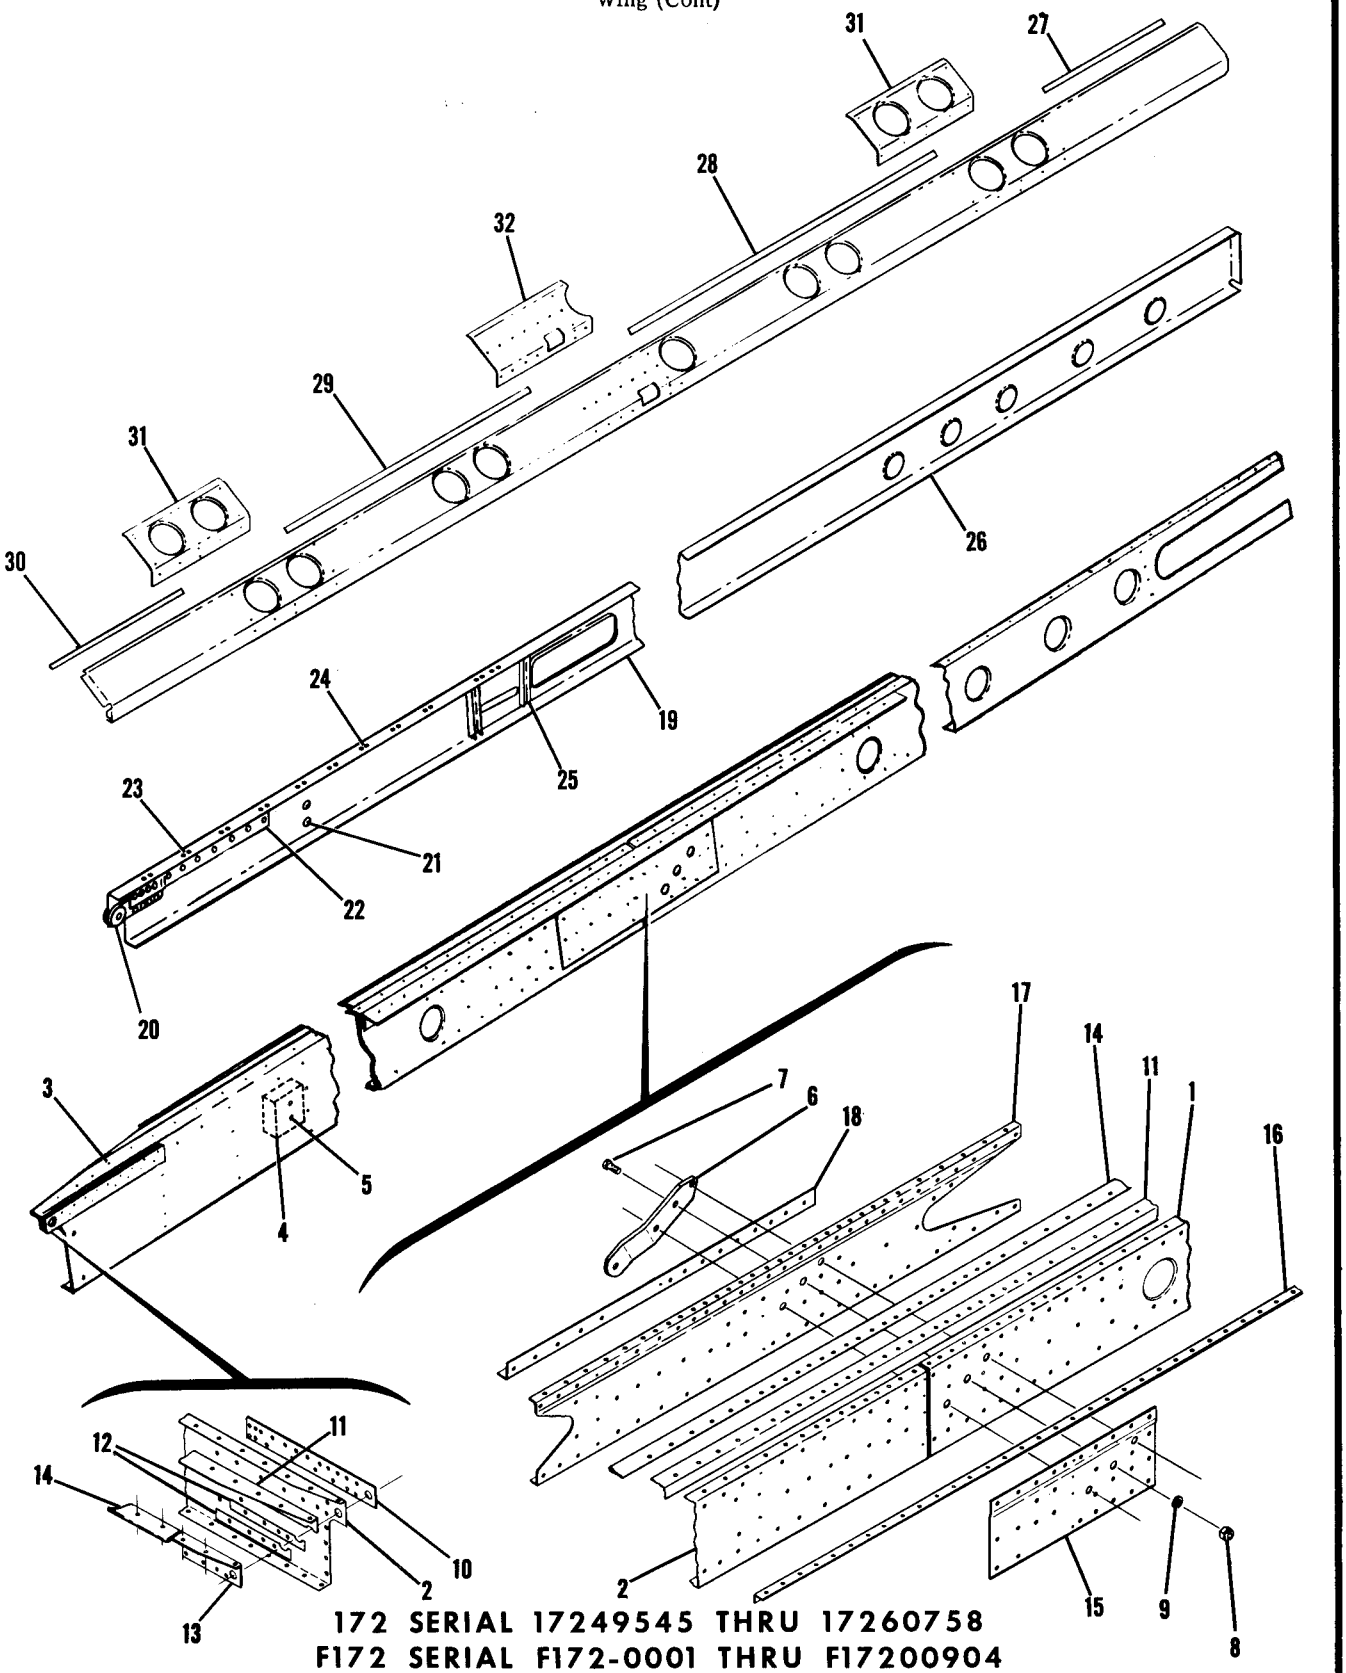

172 SERIAL 17249545 THRU 17260758
F172 SERIAL F172-0001 THRU F17200904

Figure 12. Wing Spars Assemblies


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
12 -			SPARS ASSEMBLIES-WING	NP	G
	0523301-1		SPAR ASSEMBLY-WING FRONT LH	1	A
	0523301-2		SPAR ASSEMBLY-WING FRONT RH	1	A
	0523301-3	*	SPAR ASSEMBLY-WING FRONT LH	1	B
	0523301-4	*	SPAR ASSEMBLY-WING FRONT RH	1	B
- 1	0523317		CHANNEL ASSEMBLY-SPAR OUTBOARD LH	1	
	0523317-1		CHANNEL ASSEMBLY-SPAR OUTBOARD RH	1	
- 2	0523322-1		CHANNEL ASSEMBLY-SPAR INBOARD LH	1	
	0523322-2		CHANNEL ASSEMBLY-SPAR INBOARD RH	1	
- 3	NAS680A08		NUTPLATE	19	
- 4	0523524		SPACER-FUEL TANK	1	A
	0523524	*	SPACER-FUEL TANK	2	B
			ATTACHING PARTS		
- 5	S1021A10-10		SCREW	2	
			---*---		
- 6	0523306		FITTING-STRUT ATTACHMENT	1	
			ATTACHING PARTS		
- 7	AN5-7A		BOLT	3	
- 8	MS21042L5		NUT	3	
- 9	AN960-516		WASHER	3	
			---*---		
-10	0523308		PLATE	1	
-11	0523314		ANGLE-CAP LH	1	
	0523314-1		ANGLE-CAP RH	1	
-12	0523311		SPACER	2	
-13	0523309		ANGLE-LH	1	
	0523309-1		ANGLE-RH	1	
-14	0523315		CAP PLATE-LH	1	
	0523315-1		CAP PLATE-RH	1	
-15	0523319-3		PLATE-LH	1	
	0523319-4		PLATE-RH	1	
-16	0523321-1		ANGLE-LH	1	
	0523321-2		ANGLE-RH	1	
-17	0523318		CHANNEL-SPLICE LH	1	
	0523318-1		CHANNEL-SPLICE RH	1	
-18	0523316		ANGLE-LH	1	
	0523316-1		ANGLE-RH	1	
	0523400-14		SPAR ASSEMBLY-WING REAR LH	1	
	0523400-15		SPAR ASSEMBLY-WING REAR RH WEU 0523400-110	1	E
	0523400-110		SPAR ASSEMBLY-WING REAR RH	1	F
-19	0523400-50		SEGMENT ASSEMBLY-REAR SPAR INBOARD STA 23.625 TO 100 LH	1	
	0523400-51		SEGMENT ASSEMBLY-REAR SPAR INBOARD STA 23.625 TO 100 RH	1	
-20	0422229-3		FITTING-WING SPAR REINFORCEMENT WHEN EXHAUSTED USE 0422229-11	2	C
	0422229-11		FITTING-WING SPAR REINFORCEMENT	2	D
	0523524		SPACER-FUEL TANK	2	
			ATTACHING PARTS		
-21	S1021A10-10		SCREW	2	
			---*---		
-22	0523400-20		ANGLE-REINFORCEMENT LH	1	
	0523400-21		ANGLE-REINFORCEMENT RH	1	
-23	NAS680A08		NUTPLATE	12	
-24	NAS684A08		NUTPLATE	1	
-25	0523409		CHANNEL-REINFORCEMENT	1	
-26	0523406		SEGMENT-REAR SPAR OUTBOARD STA 100 TO 154 LH	1	
	0523406-1		SEGMENT-REAR SPAR OUTBOARD STA 100 TO 154 RH	1	
	0523005-50		SPAR ASSEMBLY-OUTBOARD AUXILIARY LH	1	
	0523005-51		SPAR ASSEMBLY-OUTBOARD AUXILIARY RH	1	
-27	0523813-3		FILLER-TRAILING EDGE	1	
-28	0523813-2		FILLER-TRAILING EDGE	1	
-29	0523813-4		FILLER-TRAILING EDGE	1	
-30	0523813-5		FILLER-TRAILING EDGE	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
12 -31	0523216	REINFORCEMENT	2	
-32	0523215	REINFORCEMENT LH	1	
	0523215-1	REINFORCEMENT RH	1	
		NOTE. *THESE PARTS USED WITH OPTIONAL LONG RANGE WING 17257162 THRU 17260758		
		A---172 SERIAL 17249545 THRU 17260758 F172 SERIAL F172-0001 THRU F17200904 B---P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 SEE NOTE.* C---172 SERIAL 17249545 THRU 17258542 F172 SERIAL F172-0001 THRU F17200739 D---172 SERIAL 17258543 THRU 17260758 F172 SERIAL F17200740 THRU F17200904 E---172 SERIAL 17249545 THRU 17259904 F172 SERIAL F172-0001 THRU F17200804 F---172 SERIAL 17259905 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 G---172 SERIAL 17249545 THRU 17260758 F172 SERIAL F172-0001 THRU F17200904 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		

This page intentionally left blank.

Wing (Cont)

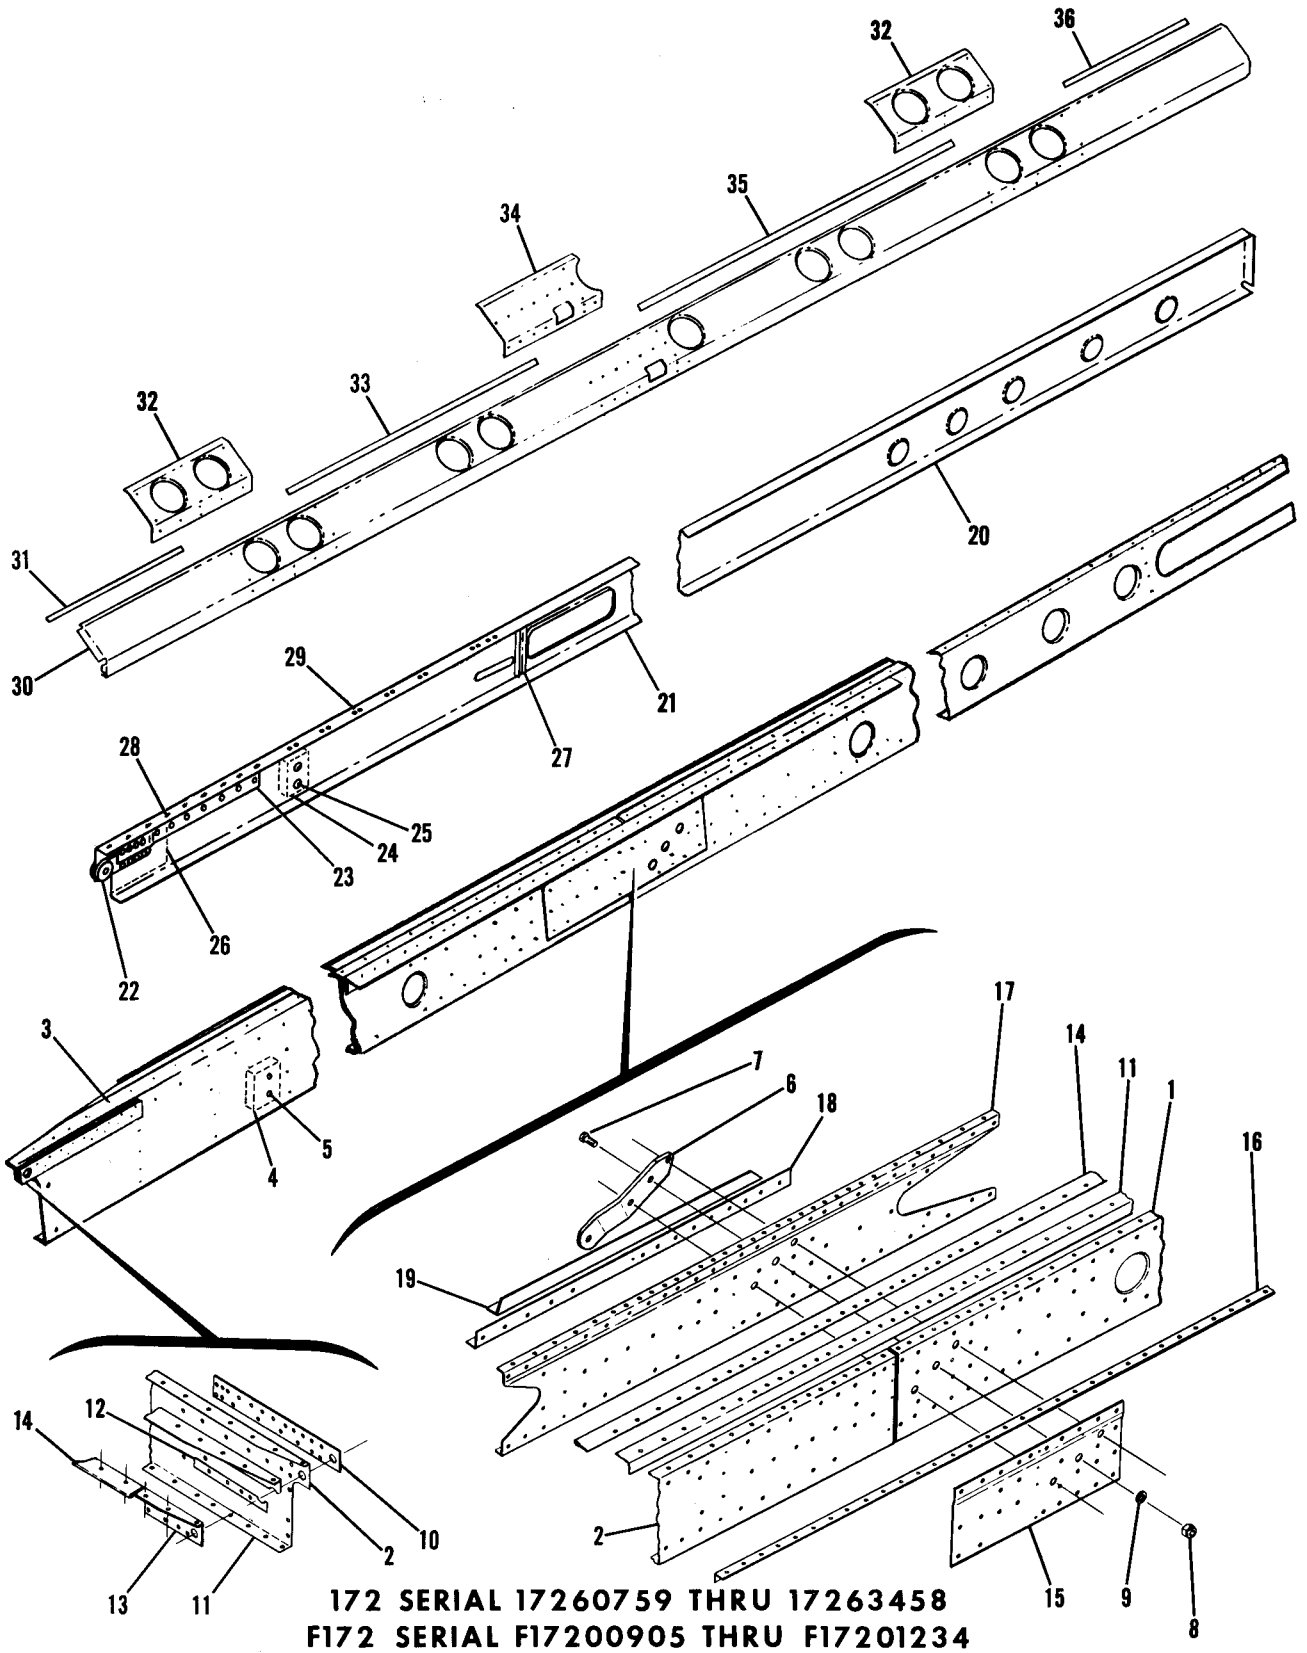


172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Figure 13. Wing Spars Assemblies

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
13 -		SPARS ASSEMBLIES-WING	NP	A
	0523018-1	SPAR ASSEMBLY-WING FWD LH	1	
	0523018-3	SPAR ASSEMBLY-WING FWD LH LONG RANGE	1	
	0523018-2	SPAR ASSEMBLY-WING FWD RH	1	
	0523018-4	SPAR ASSEMBLY-WING FWD RH LONG RANGE	1	
- 1	0523015-1	CHANNEL ASSEMBLY-SPAR OUTBOARD LH	1	
	0523015-2	CHANNEL ASSEMBLY-SPAR OUTBOARD RH	1	
- 2	0523014-1	CHANNEL ASSEMBLY-SPAR INBOARD LH	1	
	0523014-3	CHANNEL ASSEMBLY-SPAR INBOARD LH LONG RANGE	1	
	0523014-2	CHANNEL ASSEMBLY-SPAR INBOARD RH	1	
	0523014-4	CHANNEL ASSEMBLY-SPAR INBOARD RH LONG RANGE	1	
- 3	NAS680A08	NUTPLATE STD	14	
	NAS680A08	NUTPLATE LONG RANGE	19	
- 4	0523524	SPACER-FUEL TANK	1	
		ATTACHING PARTS		
- 5	S1021A10-10	SCREW	2	
		---*---		
- 6	0523306	FITTING-STRUT ATTACHMENT	1	
		ATTACHING PARTS		
- 7	AN5-6A	BOLT	3	
- 8	MS21042L5	NUT	3	
- 9	AN960-516	WASHER	3	
		---*---		
-10	0523016-1	PLATE	1	
-11	0523020-1	SPAR ANGLE LH	1	
	0523020-3	SPAR ANGLE LH LONG RANGE	1	
	0523020-2	SPAR ANGLE RH	1	
	0523020-4	SPAR ANGLE RH LONG RANGE	1	
-12	0523019-1	SPACER	1	
-13	0523017-1	SPAR ANGLE LH	1	
	0523017-2	SPAR ANGLE RH	1	
-14	0523021-1	PLATE LH	1	
	0523021-3	PLATE LH LONG RANGE	1	
	0523021-2	PLATE RH	1	
	0523021-4	PLATE RH LONG RANGE	1	
-15	0422412-1	PLATE LH	1	
	0422412-2	PLATE RH	1	
-16	0523022-1	ANGLE LH	1	
	0523022-2	ANGLE RH	1	
-17	0422414-1	CHANNEL-SPLICE LH	1	
	0422414-2	CHANNEL-SPLICE RH	1	
-18	0422411-1	CHANNEL-SPLICE LH	1	
	0422411-2	CHANNEL-SPLICE RH	1	
-19	0422406-1	STIFFENER LH	1	
	0422406-2	STIFFENER RH	1	
	0523041-1	SPAR ASSEMBLY-WING REAR LH	1	
	0523041-2	SPAR ASSEMBLY-WING REAR RH	1	
-20	0523406-5	CHANNEL-OUTBOARD LH	1	
	0523406-4	CHANNEL-OUTBOARD RH	1	
-21	0523041-3	CHANNEL-INBOARD LH	1	
	0523041-4	CHANNEL-INBOARD RH	1	
-22	0422229-16	FITTING	2	
-23	0523046-1	STIFFENER-LH	1	
	0523046-2	STIFFENER-RH	1	
-24	0523524	SPACER	2	
		ATTACHING PARTS		
-25	S-1021A-10-10	SCREW	2	
		---*---		
-26	0523042-1	DOUBLER	1	
-27	0523409	CHANNEL	1	
-28	NAS680A08	NUTPLATE	16	
-29	NAS684A08	NUTPLATE	1	
-30	0523040-1	SPAR-AILERON AUXILIARY LH	1	
	0523040-2	SPAR-AILERON AUXILIARY RH	1	
-31	0523037-4	SPACER	1	
-32	0523043-1	REINFORCEMENT LH	2	
	0523043-2	REINFORCEMENT RH	2	
-33	0523037-3	SPACER	1	
-34	0523044-1	REINFORCEMENT LH	1	
	0523044-2	REINFORCEMENT RH	1	
-35	0523037-2	SPACER	1	
-36	0523037-1	SPACER	1	

A---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Wing (Cont)

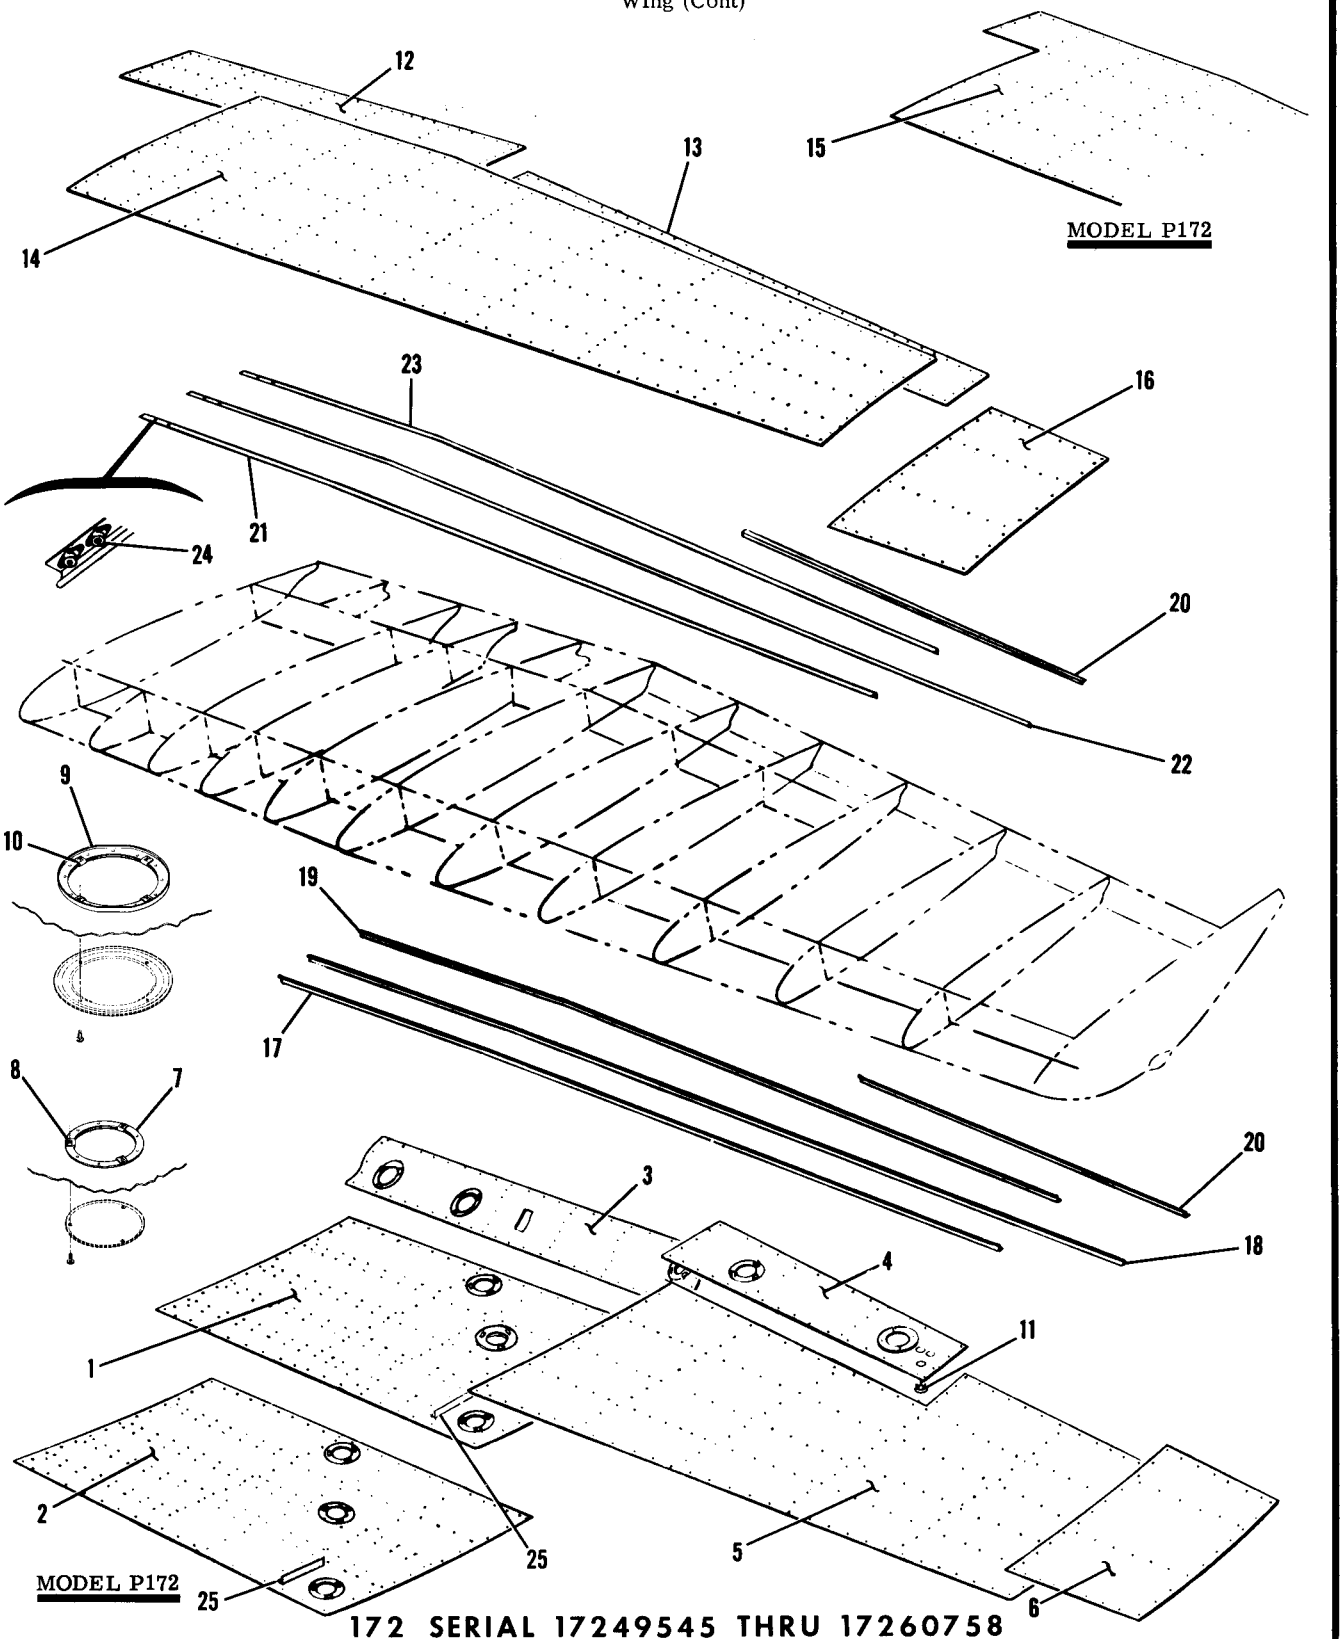


172 SERIAL 17249545 THRU 17260758
F172 SERIAL F172-0001 THRU F17200904

Figure 14. Skins and Stringers Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
14 -			SKINS & STRINGERS INSTALLATION LH	NP	G
			SKINS & STRINGERS INSTALLATION RH	NP	G
- 1	0523005-61		SKIN-LOWER CENTER SECTION STA 23.625 TO 100	1	E
	0523005-87		SKIN-LOWER CENTER SECTION STA 23.625 TO 100	1	F
- 2	0523005-59	*	SKIN-LOWER CENTER SECTION STA 23.625 TO 100	1	E
	0523005-88	*	SKIN-LOWER CENTER SECTION STA 23.625 TO 100	1	F
- 3	0523007-10		SKIN-LOWER TRAILING EDGE STA 22.875 TO 100 LH	1	
	0523007-9		SKIN-LOWER TRAILING EDGE STA 22.875 TO 100 RH	1	
- 4	0523003-79		SKIN-LOWER TE STA 100 TO 154 WHEN EXHAUSTED USE 0523003-62	1	C
	0523003-62		SKIN-LOWER T.E. STA 100 TO 154	1	D
	0523003-52		SKIN-LWR T.E. STA 100 TO 154 USED WITH NAV-O-MATIC INSTL	1	D
- 5	0523003-74		SKIN-LOWER CENTER SECTION STA 100 TO 190	1	
- 6	0523003-83		SKIN-LOWER CENTER SECTION STA 190 TO 208	1	
- 7	S237-2		DOUBLER ASSEMBLY 4.00 IN OPENING	AR	
- 8	NAS395-14-3		NUT	3	
- 9	S330-2		DOUBLER ASSEMBLY 5.82 IN OPENING	AR	
-10	NAS395-14-3		NUT	4	
-11	CM2692-28-1S		PLUG BUTTON UC48155	1	
-12	0523007-42		SKIN-UPPER TRAILING EDGE STA 22.875 TO 100	1	
-13	0523003-80		SKIN-UPPER TRAILING EDGE STA 100 TO 190	1	
-14	0523005-60		SKIN-UPPER CENTER SECTION STA 57.125 TO 190	1	A
-15	0523007-45		SKIN-UPPER CENTER SECTION STA 57.0000 & 70.875 TO 190	1	B
-16	0523003-81		SKIN-UPPER CENTER SECTION STA 190 TO 208	1	
-17	0523541-7		STRINGER-LOWER FORWARD LH	1	A
	0523541-8		STRINGER-LOWER FORWARD RH	1	A
	0520009-7		STRINGER-LOWER FORWARD LH	1	B
	0520009-8		STRINGER-LOWER FORWARD RH	1	B
-18	0523541-9		STRINGER-LOWER CENTER LH	1	A
	0523541-10		STRINGER-LOWER CENTER RH	1	A
	0520009-9		STRINGER-LOWER CENTER LH	1	B
	0520009-10		STRINGER-LOWER CENTER RH	1	B
-19	0523541-11		STRINGER-LOWER AFT LH	1	A
	0523541-12		STRINGER-LOWER AFT RH	1	A
	0520009-11		STRINGER-LOWER AFT LH	1	B
	0520009-12		STRINGER-LOWER AFT RH	1	B
-20	0523003-40		STRINGER-AFT OUTBOARD	2	
-21	0523541-1		STRINGER ASSEMBLY-UPPER FORWARD LH	1	A
	0523541-2		STRINGER ASSEMBLY-UPPER FORWARD RH	1	A
	0520009-1		STRINGER ASSEMBLY-UPPER FORWARD LH	1	B
	0520009-2		STRINGER ASSEMBLY-UPPER FORWARD RH	1	B
-22	0523541-3		STRINGER ASSEMBLY-UPPER CENTER LH	1	A
	0523541-4		STRINGER ASSEMBLY-UPPER CENTER RH	1	A
	0520009-3		STRINGER ASSEMBLY-UPPER CENTER LH	1	B
	0520009-4		STRINGER ASSEMBLY-UPPER CENTER RH	1	B
-23	0523541-5		STRINGER ASSEMBLY-UPPER AFT LH	1	A
	0523541-6		STRINGER ASSEMBLY-UPPER AFT RH	1	A
	0520009-5		STRINGER ASSEMBLY-UPPER AFT LH	1	B
	0520009-6		STRINGER ASSEMBLY-UPPER AFT RH	1	B
-24	NAS680A08		NUT PLATE	2	
-25	0521102-1		STIFFENER	1	

NOTE. *THESE PARTS ARE USED WITH OPTIONAL LONG RANGE WING 17257162 THRU 17260758

A---172 SERIAL 17249545 THRU 17260758
F172 SERIAL F172-0001 THRU F17200904
B---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
SEE NOTE.*
C---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200904
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
D---172 SERIAL 17256513 THRU 17260758
E---172 SERIAL 17249545 THRU 17258486
F172 SERIAL F172-0001 THRU F172-0654
F---172 SERIAL 17258487 THRU 17260758
F172 SERIAL F17200655 THRU F17200904
G---172 SERIAL 17249545 THRU 17260758
F172 SERIAL F172-0001 THRU F17200904
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

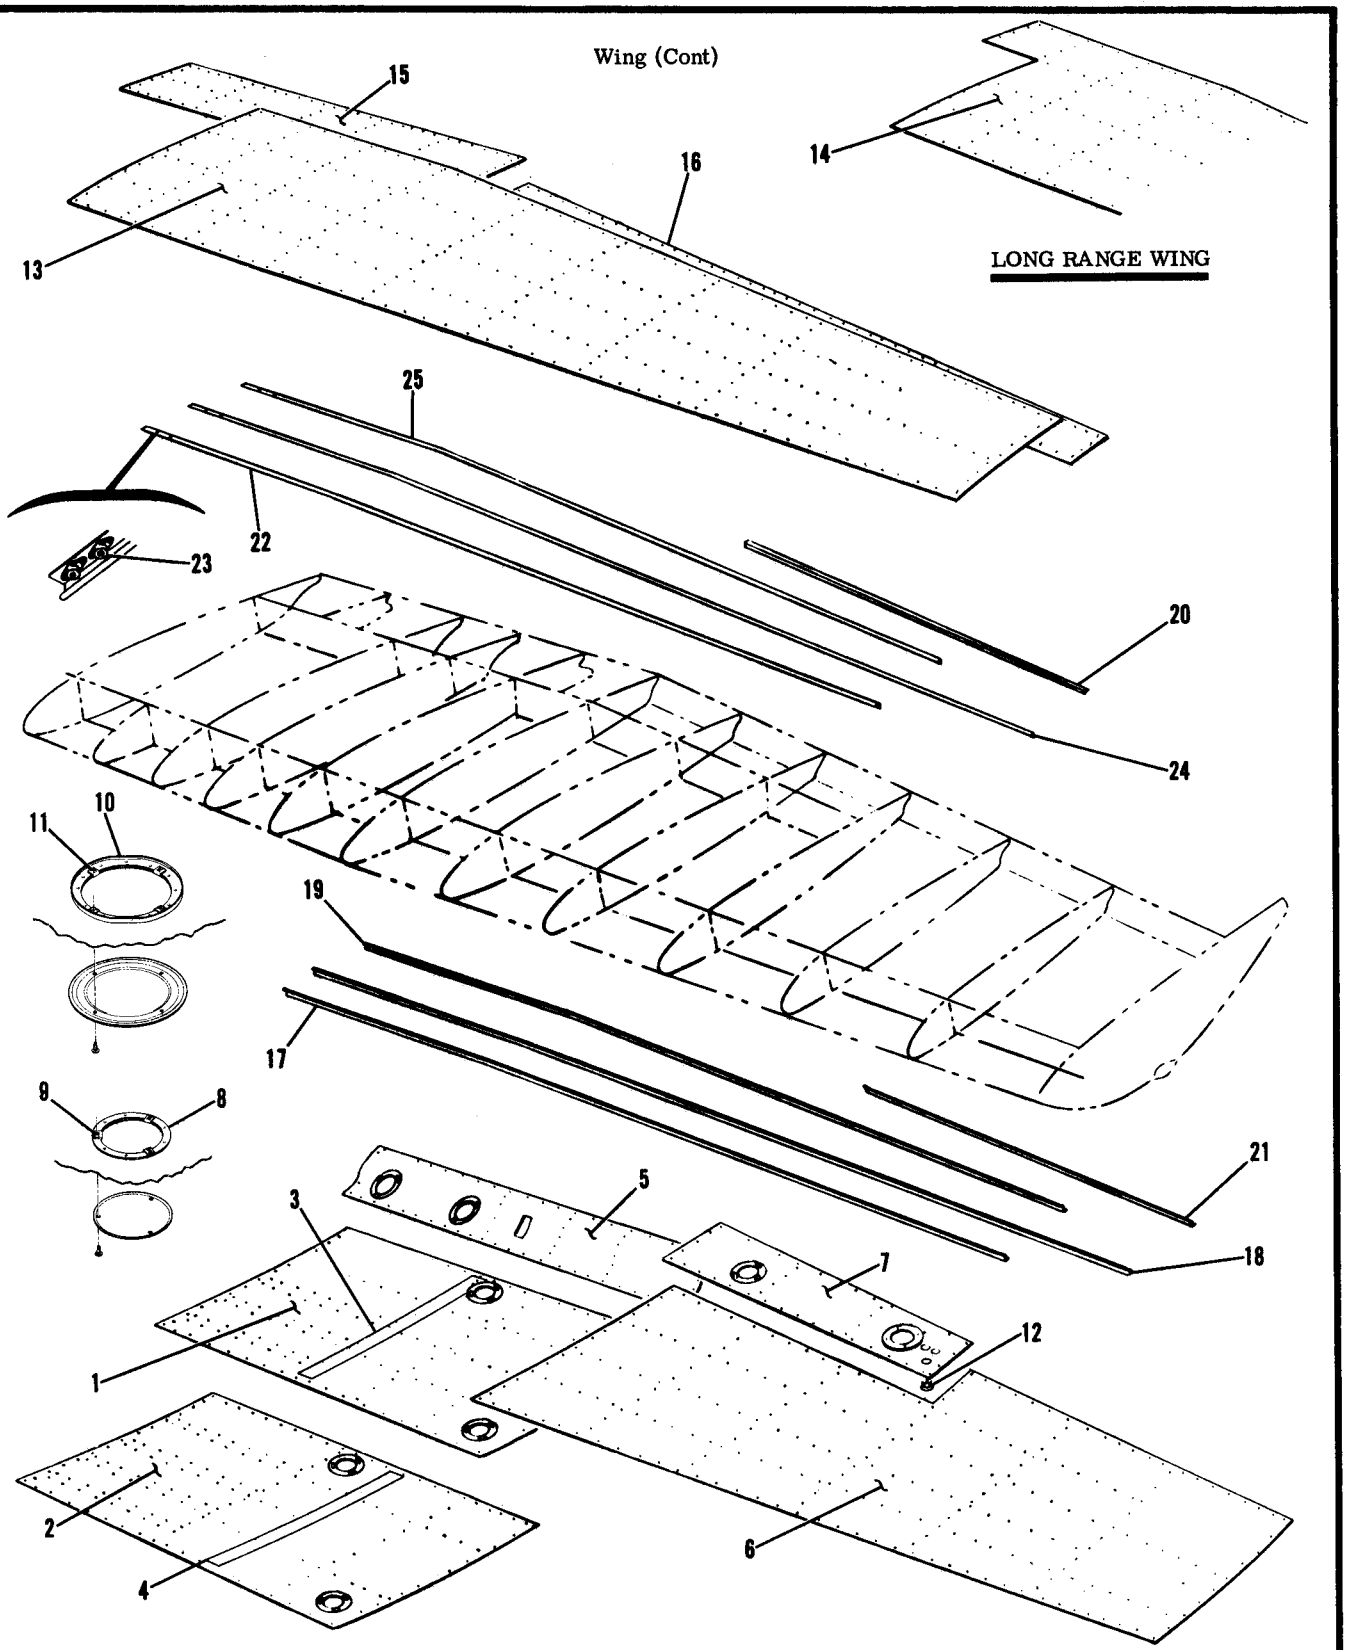

172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234


Figure 15. Skins and Stringers Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
15 -			SKINS & STRINGERS INSTALLATION LH	NP	A
			SKINS & STRINGERS INSTALLATION RH	NP	A
- 1	0523011-5		SKIN-LOWER CENTER SECTION STA23.625 TO 100 LH	1	
	0523011-6		SKIN-LOWER CENTER SECTION STA23.625 TO 100 RH	1	
- 2	0523011-17	*	SKIN-LOWER CENTER SECTION STA23.625 TO 100 LH	1	
	0523011-18	*	SKIN-LOWER CENTER SECTION STA23.625 TO 100 RH	1	
- 3	0523039-1		DOUBLER-LWR FUEL BAY	1	
- 4	0523039-2	*	DOUBLER-LWR FUEL BAY	1	
- 5	0523011-9		SKIN-LOWER TRAILING EDGE STA22.875 TO 100.44 LH	1	
	0523011-8		SKIN-LOWER TRAILING EDGE STA22.875 TO 100.44 RH	1	
- 6	0523011-11		SKIN-LOWER CENTER SECTION STA99.25 TO 208 LH	1	
	0523011-10		SKIN-LOWER CENTER SECTION STA99.25 TO 208 RH	1	
- 7	0523003-62		SKIN-LOWER TRAILING EDGE STA100 TO 154	1	
- 8	S237-2		DOUBLER ASSY 4.00 IN OPENING	AR	
- 9	NAS395-14-3		NUT	3	
-10	S330-2		DOUBLER ASSY 5.82 IN OPENING	AR	
-11	NAS395-14-3		NUT	4	
-12	CM2692-28-1S		PLUG BUTTON	1	
-13	0523011-3		SKIN-UPPER CENTER SECTION STA57.125 TO 208 LH	1	
	0523011-4		SKIN-UPPER CENTER SECTION STA57.125 TO 208 RH	1	
-14	0523011-19	*	SKIN-UPPER CENTER SECTION STA57.00 TO 208 LH	1	
	0523011-20	*	SKIN-UPPER CENTER SECTION STA57.00 TO 208 RH	1	
-15	0523011-7		SKIN-UPPER TRAILING EDGE STA22.875 TO 101.25	1	
-16	0523011-12		SKIN-UPPER TRAILING EDGE STA100.50 TO 208	1	
-17	0523038-7		STRINGER-LOWER FORWARD LH	1	
	0523038-8		STRINGER-LOWER FORWARD RH	1	
	0523038-19	*	STRINGER-LOWER FORWARD LH	1	
	0523038-20	*	STRINGER-LOWER FORWARD RH	1	
-18	0523038-9		STRINGER-LOWER CENTER LH	1	
	0523038-10		STRINGER-LOWER CENTER RH	1	
	0523038-21	*	STRINGER-LOWER CENTER LH	1	
	0523038-22	*	STRINGER-LOWER CENTER RH	1	
-19	0523038-11		STRINGER-LOWER AFT LH	1	
	0523038-12		STRINGER-LOWER AFT RH	1	
	0523038-23	*	STRINGER-LOWER AFT LH	1	
	0523038-24	*	STRINGER-LOWER AFT RH	1	
-20	0523045-5		STRINGER-UPPER LH	1	
	0523045-6		STRINGER-UPPER RH	1	
-21	0523045-1		STRINGER-LOWER LH	1	
	0523045-2		STRINGER-LOWER RH	1	
-22	0523038-1		STRINGER ASSY-UPPER FORWARD LH	1	
	0523038-2		STRINGER ASSY-UPPER FORWARD RH	1	
	0523038-13	*	STRINGER ASSY-UPPER FORWARD LH	1	
	0523038-14	*	STRINGER ASSY-UPPER FORWARD RH	1	
-23	NAS680A08		NUTPLATE	2	
-24	0523038-3		STRINGER ASSY-UPPER CENTER LH	1	
	0523038-4		STRINGER ASSY-UPPER CENTER RH	1	
	0523038-15	*	STRINGER ASSY-UPPER CENTER LH	1	
	0523038-16	*	STRINGER ASSY-UPPER CENTER RH	1	
	NAS680A08		NUTPLATE	2	
-25	0523038-5		STRINGER ASSY-UPPER AFT LH	1	
	0523038-6		STRINGER ASSY-UPPER AFT RH	1	
	0523038-17	*	STRINGER ASSY-UPPER AFT LH	1	
	0523038-18	*	STRINGER ASSY-UPPER AFT RH	1	
	NAS680A08		NUTPLATE	2	

NOTE. *THESE PARTS ARE USED WITH OPTIONAL LONG RANGE WING

A---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Wing (Cont)

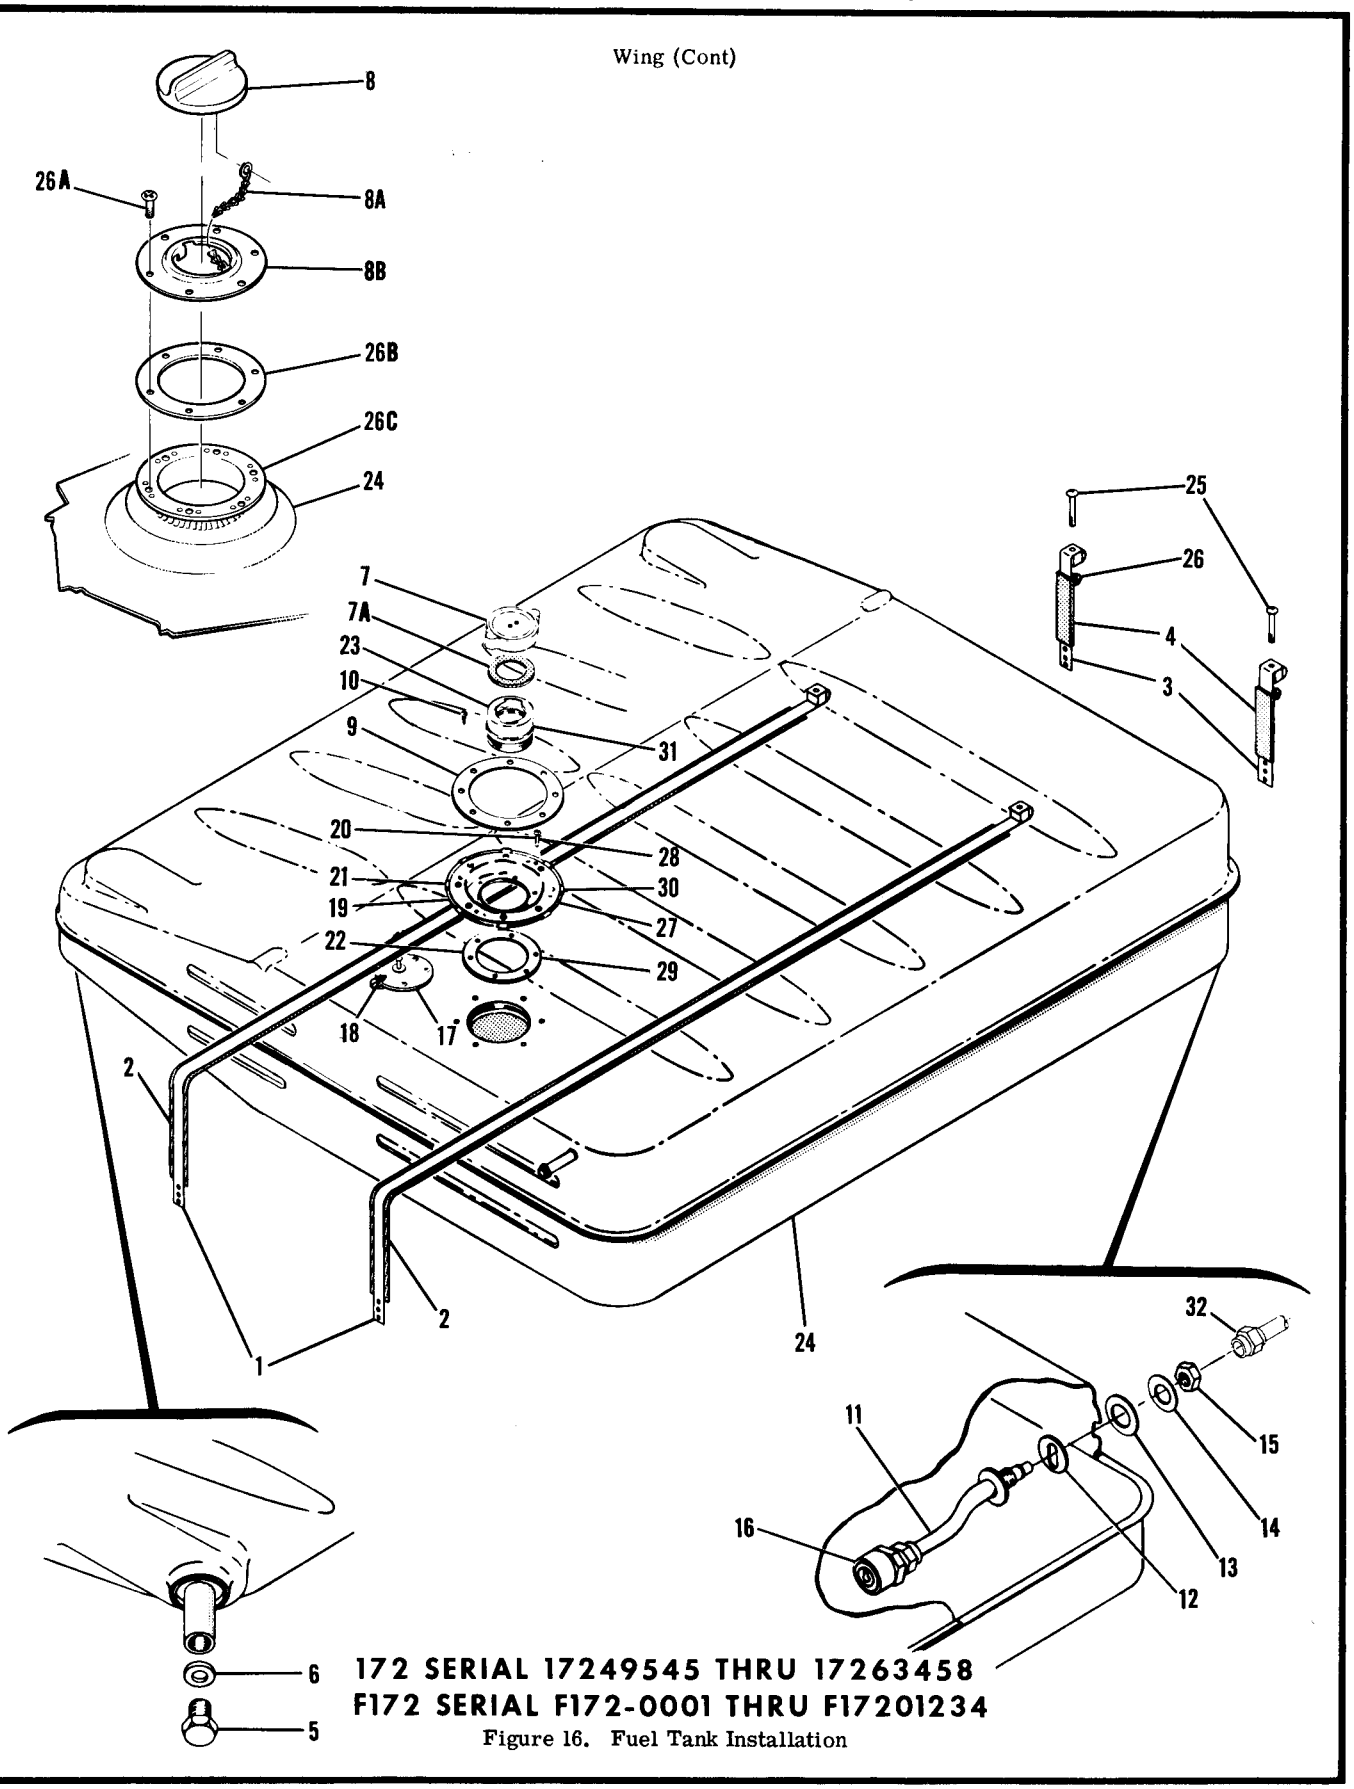

172 SERIAL 17249545 THRU 17263458
F172 SERIAL F172-0001 THRU F17201234

Figure 16. Fuel Tank Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
16 -		TANK INSTALLATION-FUEL LH	NP	A
		TANK INSTALLATION-FUEL RH	NP	A
- 1	0523522	STRAP ASSEMBLY-FUEL TANK INBOARD	2	
- 2	0523522-5	PAD-NEOPRENE	1	
- 3	0523522-1	STRAP ASSEMBLY-FUEL TANK OUTBOARD	2	
- 4	0523522-7	PAD-NEOPRENE	1	
- 5	0523520-9	PLUG-DRAIN	1	
	SEE FIG 18	VALVE-FUEL DRAIN USED WITH SAMPLER CUP	1	
- 6	MS28778-4	GASKET	1	
- 7	0311360-4	CAP ASSEMBLY-FUEL TANK	1	G
- 7A	0311360-5	GASKET-CAP	1	G
- 8	0426015-1	CAP ASSEMBLY-FUEL TANK	1	F
- 8A	C156001-0104	CHAIN ASSY	1	F
- 8B	0426011-4	FUEL FILLER NECK-CAP ADAPTER	1	F
- 9	0523531	GASKET-ADAPTER ASSEMBLY	1	G
-10	S1021Z8-10	SCREW	8	G
-11	0523552-2	WELD ASSEMBLY-FUEL VENT LH TANK ONLY	1	
		ATTACHING PARTS		
-12	0523554-1	GASKET	1	
-13	0523554-2	GASKET	1	
-14	0523556-1	WASHER	1	
-15	AN924-6D	NUT	1	
		---*---		
-16	0716124-6	VALVE ASSEMBLY-FUEL TANK VENT WEU 0716124-9	1	D
	0716124-9	VALVE ASSEMBLY-FUEL TANK VENT	1	E
-17	0523557-1	TRANSMITTER-FUEL GAGE	1	
		ATTACHING PARTS		
	AN520-10R10	SCREW	5	
	AN960D10L	WASHER	5	
	S350	WASHER	5	
-18	0413247	STRAP-GROUND	1	
	S1588-1	GASKET	1	
		---*---		
-19	0523529-1	ADAPTER ASSEMBLY-FUEL TANK	1	B
		ATTACHING PARTS		
-20	AN520-10R10	SCREW	6	
		---*---		
-21	C9876-8-1	NUT TIN	6	
-22	0523532	GASKET-FUEL TANK ADAPTER	2	
-23	0311240-17	FILLER NECK-FUEL TANK	1	B
-24		TANK ASSEMBLY-FUEL LH USE 0526007-201	1	B
		TANK ASSEMBLY-FUEL RH USE 0526007-4	1	B
	0526007-201	TANK ASSEMBLY-FUEL LH	1	C
	0526007-203	TANK ASSEMBLY-FUEL LH	1	F
	0526007-4	TANK ASSEMBLY-FUEL RH	1	C
	0526007-44	TANK ASSEMBLY-FUEL RH	1	F
		ATTACHING PARTS		
-25	AN520-10R36	SCREW	2	
-26	MS21044N3	NUT	2	
-26A	AN520-10R8	SCREW	6	F
-26B	0426013-1	GASKET	1	F
		---*---		
-26C	NAS697A3	NUTPLATE	6	F
-27	0523529-1	ADAPTER ASSEMBLY-FUEL TANK	1	C
		ATTACHING PARTS		
-28	AN520-10R12	SCREW	6	
-29	0523532	GASKET-ADAPTER	2	
		---*---		
-30	C9876-8-1	NUT TIN	6	
-31	0311240-17	FILLER NECK-FUEL TANK	1	C
-32	0523559-8	LINE ASSEMBLY-VENT	1	H
	0523559-12	LINE ASSEMBLY-VENT	1	J


A---172 SERIAL 17249545 THRU 17263458
F172 SERIAL F172-0001 THRU F17201234

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
16 -		B---172 SERIAL 17249545 THRU 17256512 F172 SERIAL F172-0001 THRU F172-0559 C---172 SERIAL 17256513 THRU 17259903 F172 SERIAL F172-0560 THRU F17200804 D---172 SERIAL 17249545 THRU 17259096 F172 SERIAL F172-0001 THRU F17200814 E---172 SERIAL 17259097 THRU 17263458 F172 SERIAL F17200815 THRU F17201234 F---172 SERIAL 17259904 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 G---172 SERIAL 17249545 THRU 17259903 F172 SERIAL F172-0001 THRU F17200804 H---172 SERIAL 17249545 THRU 17260805 F172 SERIAL F172-0001 THRU F17200905 J---172 SERIAL 17260806 THRU 17263458 F172 SERIAL F17200905 THRU F17201234		

This page intentionally left blank.

Wing (Cont)

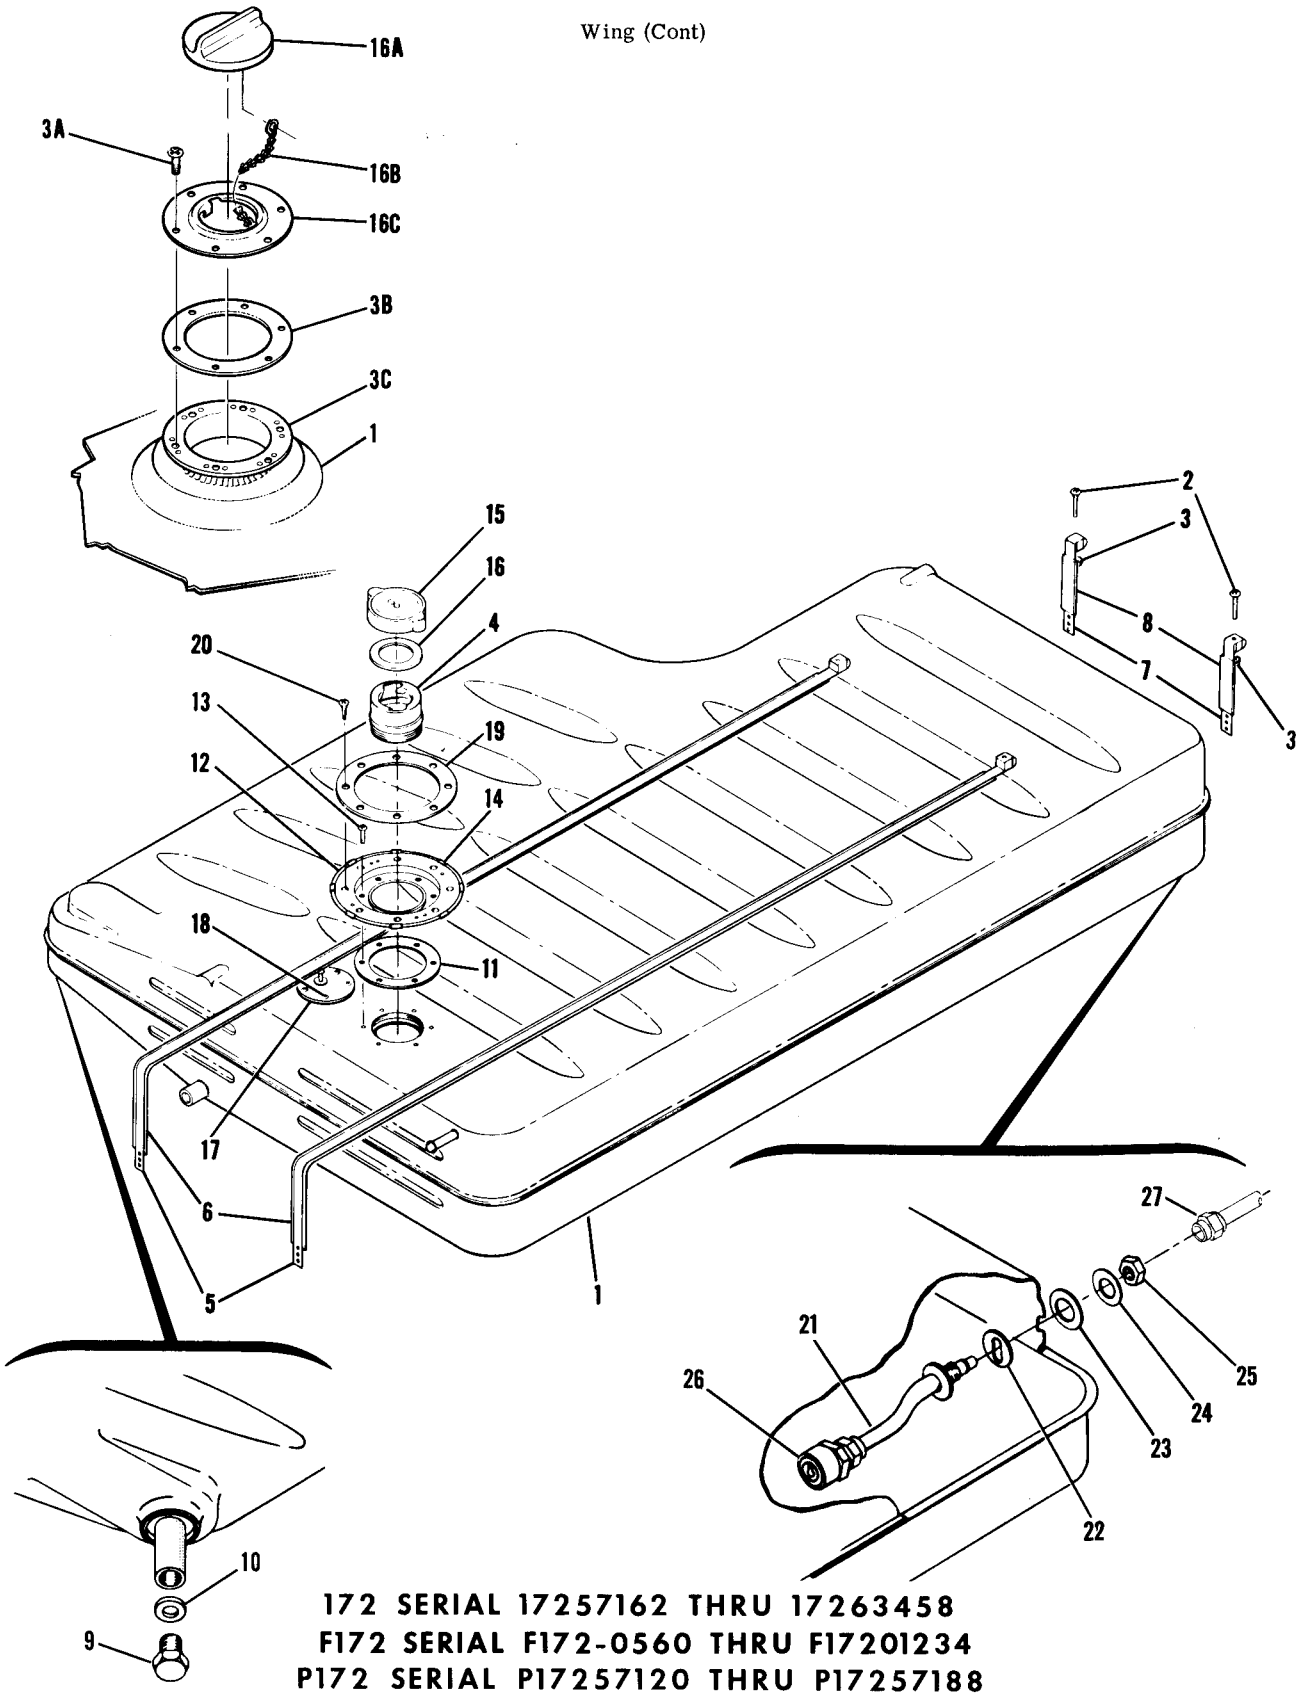

172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
P172 SERIAL P17257120 THRU P17257188

Figure 17. Fuel Tank Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
17 -			TANK INSTALLATION-FUEL LH	NP	A
			TANK INSTALLATION-FUEL RH	NP	A
- 1	0592300-2		TANK ASSEMBLY-FUEL LH P172 ONLY	1	
	0592300-4		TANK ASSEMBLY-FUEL RH P172 ONLY	1	
	0592300-8	*	TANK ASSEMBLY-FUEL LH	1	B
	0592300-9	*	TANK ASSEMBLY-FUEL RH	1	B
	0526000-19	*	TANK ASSEMBLY-FUEL LH	1	E
	0526000-18		TANK ASSEMBLY-FUEL RH	1	E
			ATTACHING PARTS		
- 2	AN520-10R36		SCREW	2	
- 3	MS21044N3		NUT	2	
- 3A	AN520-10R8		SCREW	6	E
- 3B	0426013-1		GASKET	1	E
			---*---		
- 3C	NAS697A3		NUT	6	E
- 4	0311240-17		FILLER NECK-FUEL TANK	1	F
- 5	0523522-8		STRAP ASSEMBLY-FUEL TANK INBOARD	2	
- 6	0523522-10		PAD-NEOPRENE	1	
- 7	0523522-1		STRAP ASSEMBLY-FUEL TANK OUTBOARD	2	
- 8	0523522-7		PAD-NEOPRENE	1	
- 9	0523520-9		PLUG-DRAIN	1	
	SEE FIG 18		VALVE-FUEL DRAIN USED WITH SAMPLER CUP	1	
-10	MS28778-4		GASKET-DRAIN PLUG	2	
-11	0523532		GASKET-FUEL TANK ADAPTER	2	F
-12	0523529-1		ADAPTER ASSEMBLY-FUEL TANK	1	F
			ATTACHING PARTS		
-13	AN520-10R10		SCREW	6	F
			---*---		
-14	C9876-8-1		NUT TIN	8	
-15	0311360-4		CAP ASSEMBLY-FUEL TANK	1	F
-16	0311360-5		GASKET-CAP	1	F
-16A	0426015-1		CAP ASSEMBLY-FUEL TANK	1	E
-16B	C156001-0104		CHAIN ASSY	1	E
-16C	0426011-4		FUEL FILLER NECK-CAP ADAPTOR	2	E
-17	0523557-1		TRANSMITTER-FUEL GAGE	1	
			ATTACHING PARTS		
-18	AN520-10R10		SCREW	5	
	S350		WASHER	5	
	S1588-1		GASKET	1	
	0413247		STRAP-GROUND	1	
			---*---		
-19	0523531		GASKET	1	F
-20	S1021Z8-10		SCREW	8	F
-21	0523552-2		WELD ASSEMBLY-FUEL VENT LH TANK ONLY	1	
			ATTACHING PARTS		
-22	0523554-1		GASKET	1	
-23	0523554-2		GASKET	1	
-24	0523556-1		WASHER	1	
-25	AN924-6D		NUT	1	
			---*---		
-26	0716124-6		VALVE ASSEMBLY-FUEL TANK VENT	1	C
	0716124-9		VALVE ASSEMBLY-FUEL TANK VENT	1	D
-27	0523559-6		VENT LINE ASSEMBLY	1	G
	0523559-11		VENT LINE ASSEMBLY	1	H

NOTE. *THESE PARTS ARE USED WITH OPTIONAL LONG RANGE WING 17257162 THRU 17263458

A---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
B---172 SERIAL 17257162 THRU 17259823
F172 SERIAL F172-0560 THRU F17200804
SEE NOTE.*

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
17 -		C---P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 172 SERIAL 17257162 THRU 17259096 F172 SERIAL F172-0560 THRU F17200814 D---172 SERIAL 17259097 THRU 17263458 F172 SERIAL F17200815 THRU F17201234 E---172 SERIAL 17259824 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 SEE NOTE *. F---P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 172 SERIAL 17257162 THRU 17259823 F172 SERIAL F172-0560 THRU F17200804 G---P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 172 SERIAL 17257162 THRU 17260805 F172 SERIAL F172-0560 THRU F17200904 H---172 SERIAL 17260806 THRU 17263458 F172 SERIAL F17200905 THRU F17201234		

Drain Valve

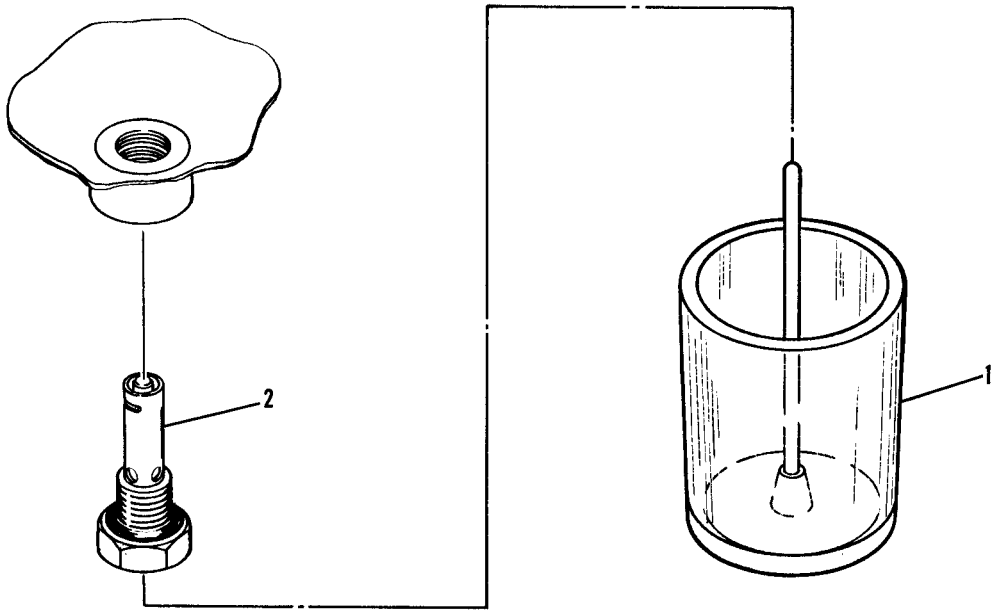


Figure 18. Fuel Tank Drain Valve Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
18 -			FUEL TANK DRAIN VALVE INSTALLATION	1	
- 1	S2107-1	*	CUP-FUEL SAMPLER	1	
- 2	S2106-2	*	VALVE FLUSH	1	
			NOTE. *THESE PARTS & INSTALLATION INSTRUCTIONS ARE AVAILABLE AS A KIT & MAY BE ORDERED UNDER PART NUMBER AK150-82.		

Wing (Cont)

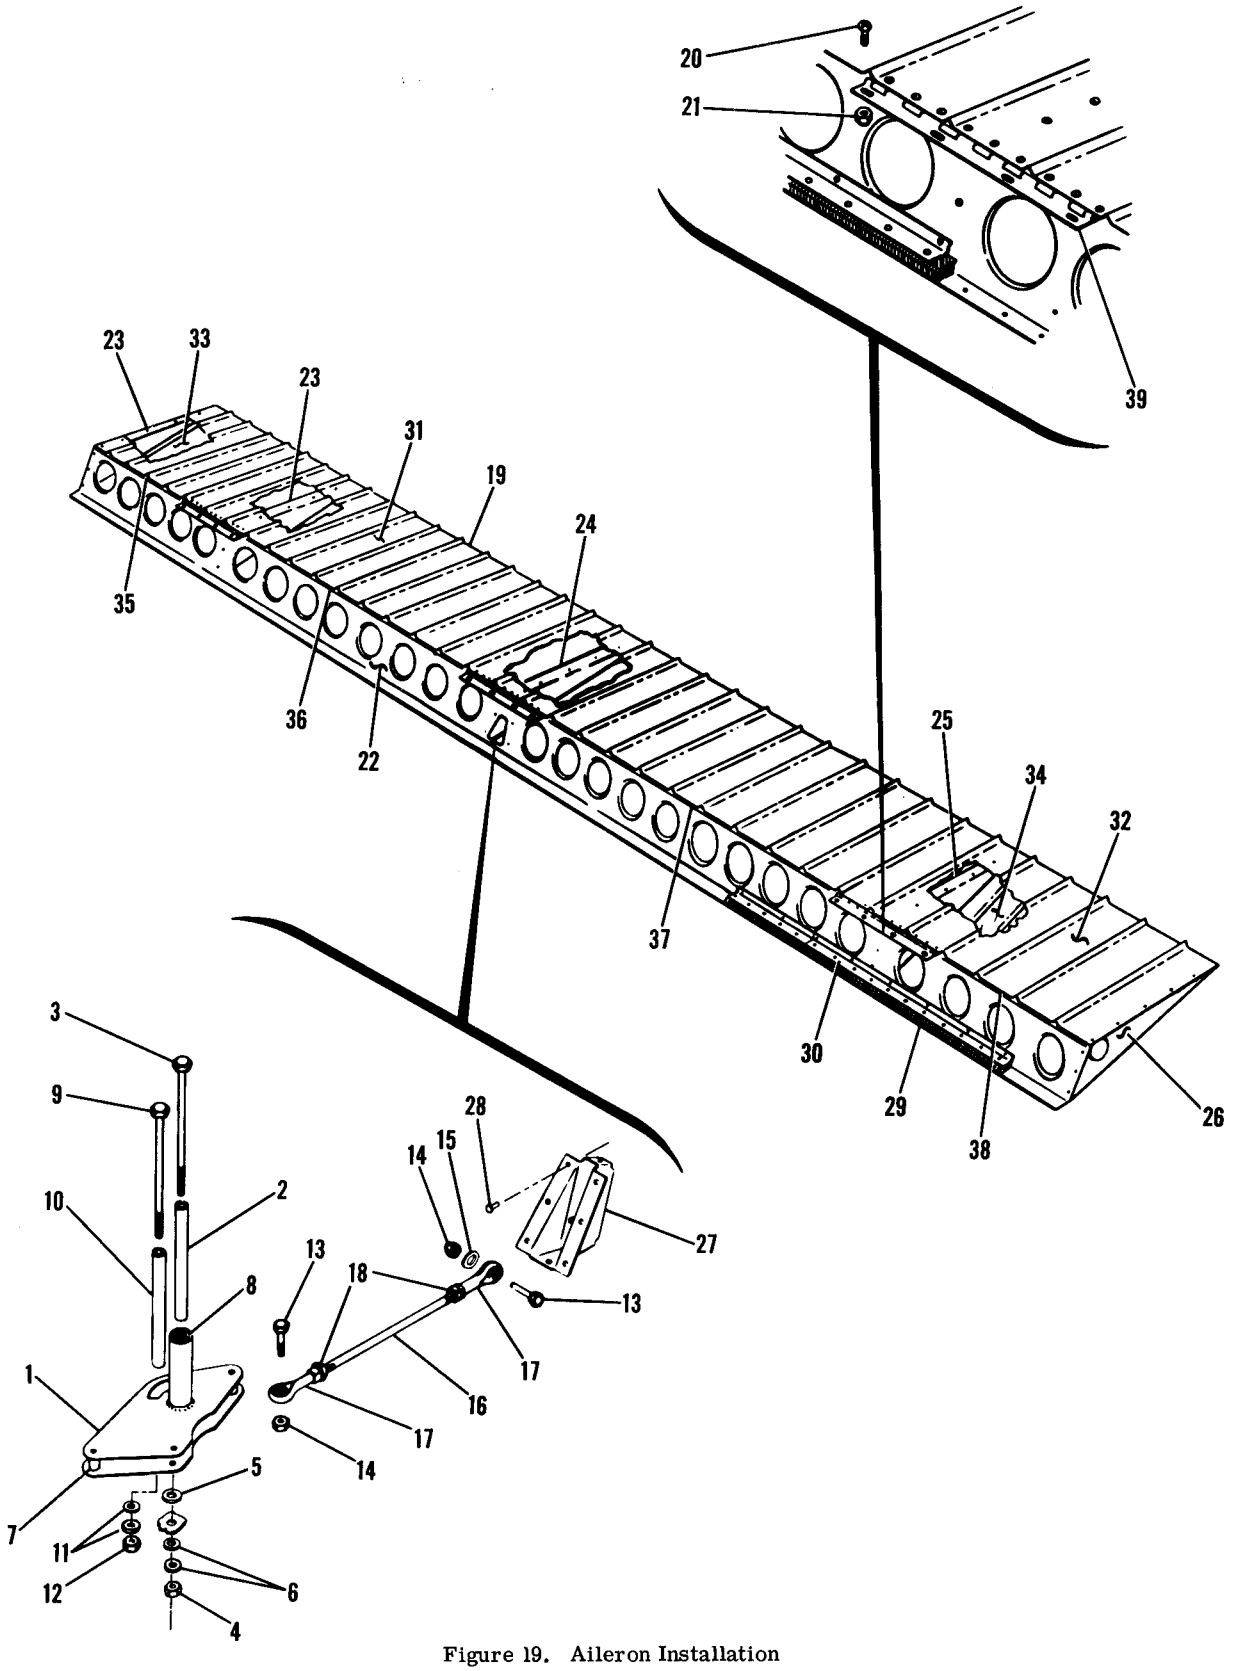


Figure 19. Aileron Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
19 -		AILERON INSTALLATION	NP	
- 1	0523223	BELLCRANK ASSEMBLY-AILERON LH	1	
	0523223-1	BELLCRANK ASSEMBLY-AILERON RH	1	
		ATTACHING PARTS		
- 2	0523221	BUSHING	1	
- 3	AN4-42A	BOLT	1	
- 4	MS21042L4	NUT	1	
- 5	0522629-1	WASHER	1	
- 6	AN960-416	WASHER	2	
		---*---		
- 7	0422280	BUSHING	2	
- 8	B610	BEARING TOR	2	
	B610-P	BEARING TOR ALTERNATE	2	
	B610-DH	BEARING TOR ALTERNATE	2	
- 9	AN4-42A	BOLT-BELLCRANK STOP	1	
-10	0523222	BUSHING-BELLCRANK STOP	1	
-11	AN960-416	WASHER	2	
-12	MS21042L4	NUT-BELLCRANK STOP	1	
	0523218	ROD ASSEMBLY-AILERON PUSH-PULL	2	
		ATTACHING PARTS		
-13	AN3-7A	BOLT	2	
-14	MS21044N3	NUT	2	
-15	AN960-10	WASHER	1	
		---*---		
-16	0523218-2	ROD-AILERON PUSH-PULL	1	
-17	S1819-3	ROD END	2	R
-18	AN316-4R	NUT-CHECK	2	
-19	0523800	AILERON ASSEMBLY LEFT WING	1	
	0523800-1	AILERON ASSEMBLY RIGHT WING	1	
		ATTACHING PARTS		
-20	NAS221-8	SCREW	12	
-21	MS21044N3	NUT	12	
		---*---		
-22	0523806	SPAR-AILERON LH	1	
	0523806-1	SPAR-AILERON RH	1	
-23	0523808	RIB NO.1-AILERON LH	2	
	0523808-2	RIB NO.1-AILERON RH	2	
-24	0523809	RIB NO.2-AILERON LH	1	
	0523809-1	RIB NO.2-AILERON RH	1	
-25	0523810	RIB NO.3-AILERON	1	
-26	0523811-1	RIB NO.4-AILERON LH	1	
	0523811	RIB NO.4-AILERON RH	1	
-27	0523812-2	BRACKET-CONTROL OUTBOARD WHEN EXHAUSTED USE 0760011-1	1	A
	0528812-3	BRACKET-CONTROL INBOARD WHEN EXHAUSTED USE 0760011-1	1	A
	0760011-1	BRACKET-CONTROL WHEN EXHAUSTED USE 0760011-2	1	B
		ATTACHING PARTS		
	0760011-2	BRACKET-CONTROL	1	C
-28	CR163-4-8	RIVET CY	1	
		---*---		
-29	0724115-2	WEIGHT-AILERON BALANCE	3	
		ATTACHING PARTS		
-30	0523814-6	BRACKET-AILERON WEIGHT	1	
		---*---		
-31	0523800-6	SKIN-UPPER INBOARD LH	1	
	0523800-7	SKIN-UPPER INBOARD RH	1	
-32	0523800-8	SKIN-UPPER OUTBOARD LH	1	
	0523800-9	SKIN-UPPER OUTBOARD RH	1	
-33	0523800-10	SKIN-LOWER INBOARD LH	1	
	0523800-11	SKIN-LOWER INBOARD RH	1	
-34	0523800-12	SKIN-LOWER OUTBOARD LH	1	
	0523800-13	SKIN-LOWER OUTBOARD RH	1	
-35	0523813-1	SPACER	1	
-36	0523813-8	SPACER	1	
-37	0523813-6	SPACER	1	
-38	0523813-7	SPACER	1	
-39	0523807	HINGE ASSEMBLY-AILERON	3	

A---172 SERIAL 17249545 THRU 17258030
F172 SERIAL F172-0001 THRU F172-0654
B---172 SERIAL 17258031 THRU 17258250
F172 SERIAL F17200655 THRU F17200739
C---172 SERIAL 17258251 THRU 17263458
F172 SERIAL F17200740 THRU F17201234

Wing (Cont)

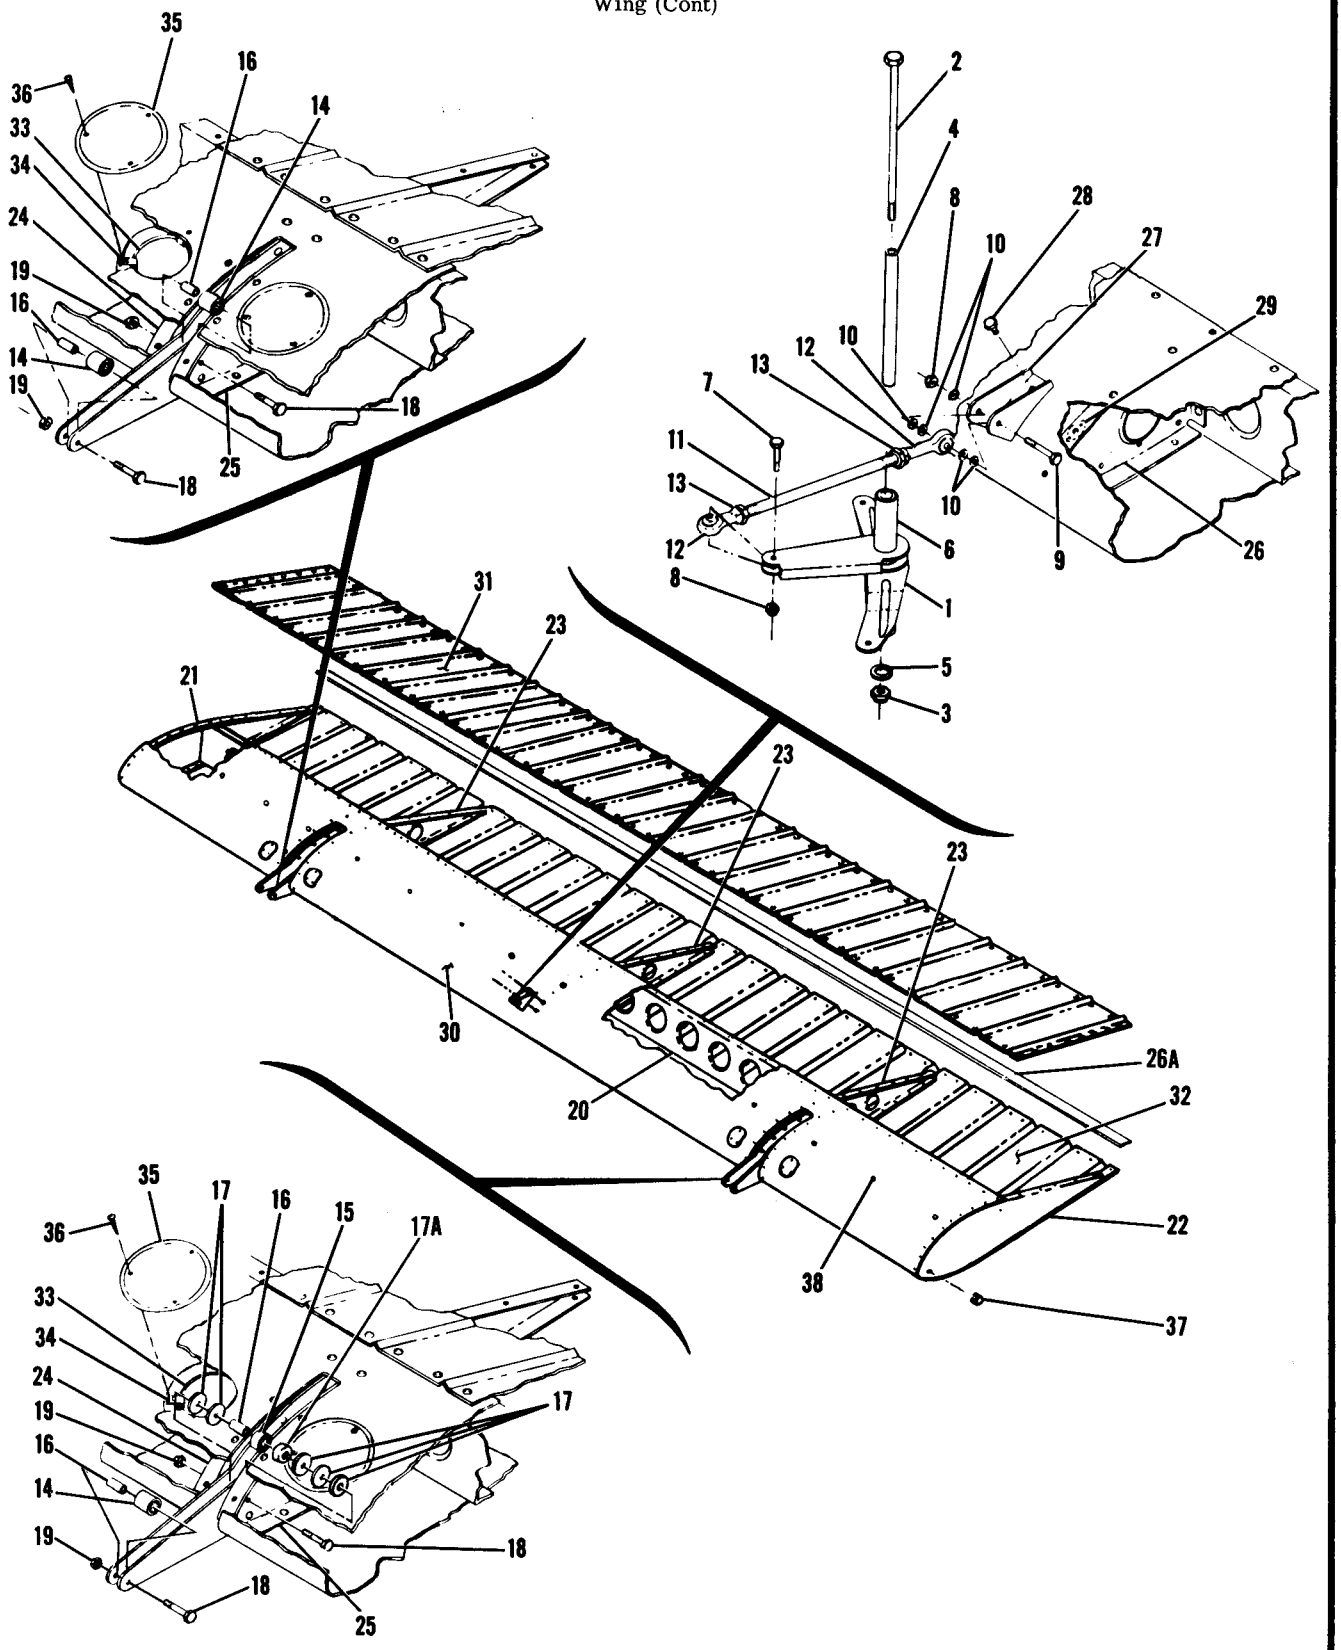


Figure 20. Flap Inatallation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20 -			FLAP INSTALLATION	NP	
- 1	0523535		BELLCRANK ASSEMBLY-LEFT FLAP	1	A
	SEE FIG 159		DRIVE PULLEY ASSEMBLY-LEFT FLAP	1	B
	0523535-1		BELLCRANK ASSEMBLY-RIGHT FLAP	1	A
	SEE FIG 159		DRIVE PULLEY ASSEMBLY-RIGHT FLAP	1	B
			ATTACHING PARTS		
- 2	AN4-60A		BOLT	1	
- 3	MS21042L4		NUT	1	
- 4	0523536		BUSHING	1	
- 5	0522629-1		WASHER	1	
			---*---		
- 6	B610		BEARING TOR	2	
	0523537		ROD ASSEMBLY-FLAP PUSH-PULL	2	
			ATTACHING PARTS		
- 7	AN3-6A		BOLT	1	
- 8	MS21044N3		NUT	2	
- 9	AN3-11A		BOLT	1	
-10	AN960-10		WASHER	5	
			---*---		
-11	0523537-2		ROD-FLAP PUSH-PULL	1	
-12	S1106-3		ROD END	2	
	S1819-3		ROD END ALTERNATE	2	
-13	AN316-4R		NUT-CHECK	2	
	0523901-35	*	FLAP ASSEMBLY-LEFT WING	1	
	0523901-38	*	FLAP ASSEMBLY-RIGHT WING	1	
			ATTACHING PARTS		
-14	0523921		ROLLER ASSEMBLY-FLAP ATTACHMENT	3	
-15	0523920		ROLLER ASSEMBLY-FLAP ATTACHMENT	1	
-16	0523919		BUSHING-FLAP ATTACHMENT ROLLER	4	
-17	0523922		SPACER-FLAP ATTACHMENT	AR	
-17A	1220114-2		SPACER OUTBOARD	1	
-18	AN3-10A		BOLT	4	
-19	MS21044N3		NUT	4	
			---*---		
-20	0523911		SPAR-FLAP LH ONLY	1	
	0523911-1		SPAR-FLAP RH ONLY	1	
-21	0523912		RIB-FLAP INBOARD	1	
-22	0523912-1		RIB-FLAP OUTBOARD	1	
-23	0523923		RIB-FLAP TRAILING EDGE	3	
-24	0523901-14		RIB ASSEMBLY-FLAP SUPPORT ARM RIGHT	2	
-25	0523901-13		RIB ASSEMBLY-FLAP SUPPORT ARM LEFT	2	
-26	0523914		RIB ASSEMBLY-FLAP LEADING EDGE CENTER	1	
-26A	0523901-37		STRIP-REINFORCEMENT	1	
-27	0523918		BRACKET-FLAP CONTROL	1	
			ATTACHING PARTS		
-28	AN3-4A		BOLT	2	
-29	NAS680A3		NUTPLATE	2	
			---*---		
-30	0523901-2		SKIN-FLAP LEADING EDGE LH ONLY	1	
	0523901-3		SKIN-FLAP LEADING EDGE RH ONLY	1	
-31	0523901-36		SKIN-FLAP UPPER LH ONLY	1	
	0523901-39		SKIN-FLAP UPPER RH ONLY	1	
-32	0523901-6		SKIN-FLAP LOWER LH ONLY	1	
	0523901-7		SKIN-FLAP LOWER RH ONLY	1	
-33	S237-4		DOUBLER-ACCESS HOLE	4	
-34	NAS395-14-3		NUT	3	
-35	S225-3		COVER-ACCESS HOLE	4	
			ATTACHING PARTS		
-36	S1021Z8-8		SCREW	3	
			---*---		
-37	CM2692-20-1S		PLUG BUTTON	4	
-38	S1093-1	%	PLUG BUTTON	14	

NOTE. WHEN ORDERING PARTS MARKED *
ALSO ORDER PART MARKED %.

A---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17251823 THRU 17263458
F172 SERIAL F172-0086 THRU F17201234

Strut

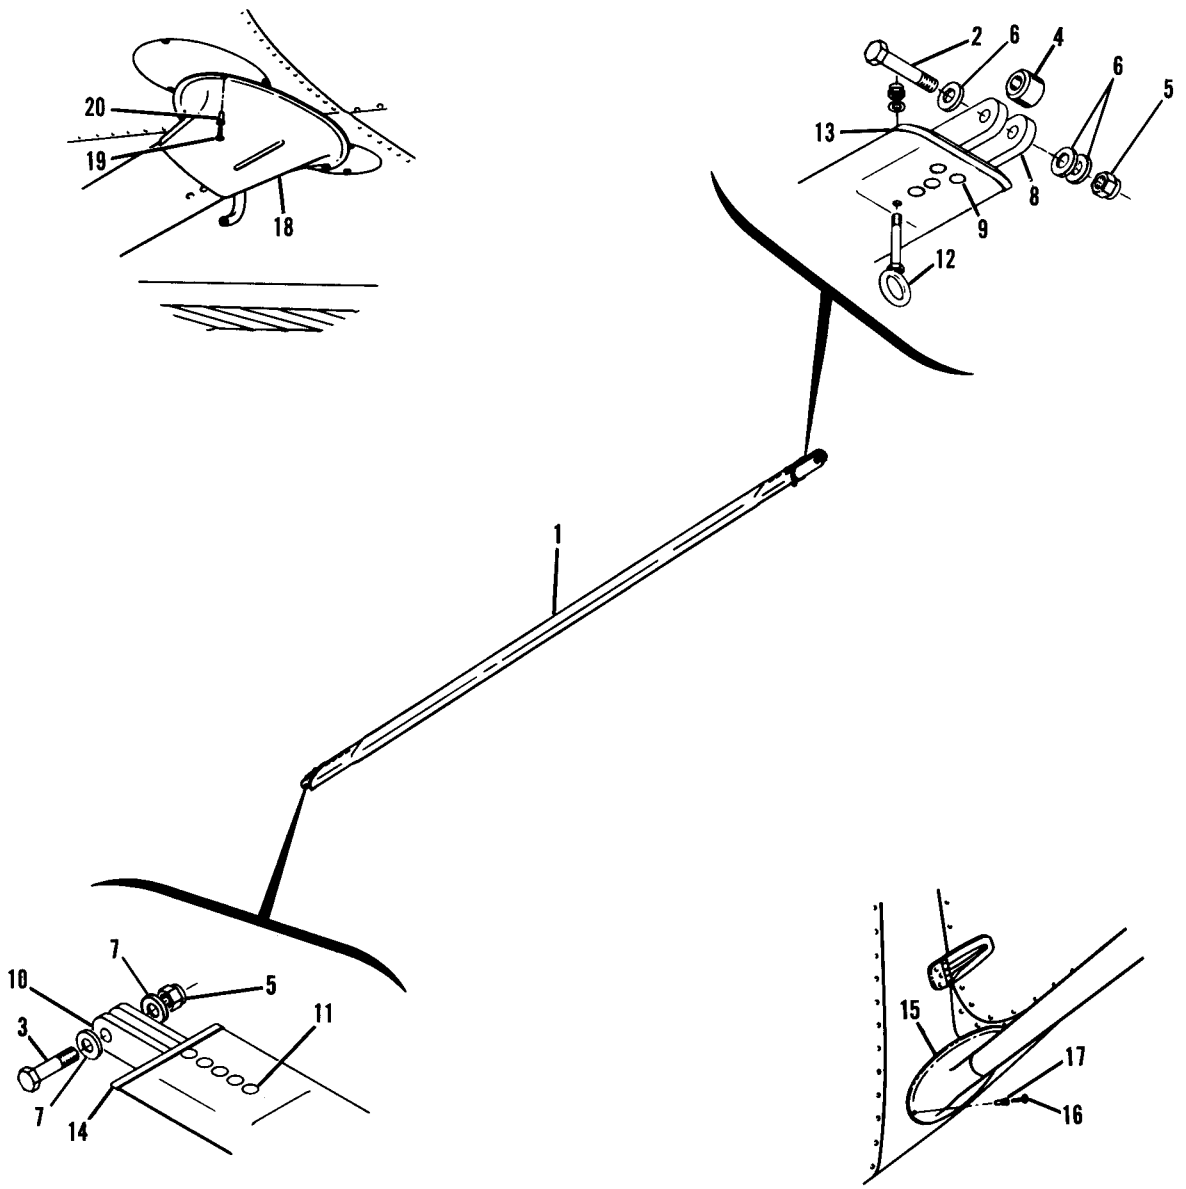


Figure 21. Strut Assembly - Wing

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
21 - 1	0523606-14	STRUT ASSEMBLY-LH	1	A
	0523606-17	STRUT ASSEMBLY-LH	1	B
	0523606-15	STRUT ASSEMBLY-RH	1	A
	0523606-18	STRUT ASSEMBLY-RH	1	B
		ATTACHING PARTS		
- 2	AN8-25A	BOLT	1	
- 3	AN8-17A	BOLT	1	
- 4	0523307-1	SPACER	1	
- 5	MS20365-820C	NUT	2	
- 6	AN960-816	WASHER	3	
- 7	AN960-816	WASHER	2	
		---*---		
- 8	0523614-1	FITTING-STRUT UPPER END	1	
		ATTACHING PARTS		
- 9	MS20470AD10-31	RIVET	4	
	0723600-6	RIVET ALTERNATE	4	
		---*---		
-10	0523608-2	FITTING-STRUT LOWER END	1	
		ATTACHING PARTS		
-11	MS20470AD10-31	RIVET	3	
	MS20426AD10	RIVET	2	
	0723600-6	RIVET ALTERNATE	5	
		---*---		
-12	0523613-1	RING-MOORING	1	
		ATTACHING PARTS		
	MS21042L5	NUT	1	
	AN960-516	WASHER	1	
		---*---		
-13	0523606-5	SEAL-UPPER	1	
-14	0523606-4	SEAL-LOWER	1	
-15	0522150-1	FAIRING-LOWER LH	1	
	0522150-2	FAIRING-LOWER RH	1	
		ATTACHING PARTS		
-16	AN515-8R8	SCREW	3	
-17	NAS1329A08-75	RIVNUT	3	
		---*---		
-18	0522150-3	FAIRING-UPPER LH	1	C
	0522150-4	FAIRING-UPPER RH	1	C
	0523047-1	FAIRING-UPPER LH	1	D
	0523047-2	FAIRING-UPPER RH	1	D
		ATTACHING PARTS		
-19	AN515-8R8	SCREW	3	C
	AN515-8R8	SCREW	4	D
-20	NAS1329A08-75	RIVNUT	3	C
	NAS1329A08-75	RIVNUT	4	D
		---*---		

A---172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17254893 THRU 17263458
F172 SERIAL F172-0320 THRU F17201234
C---172 SERIAL 17249545 THRU 17260758
F172 SERIAL F172-0001 THRU F17200904
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
D---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Empennage (Cont)

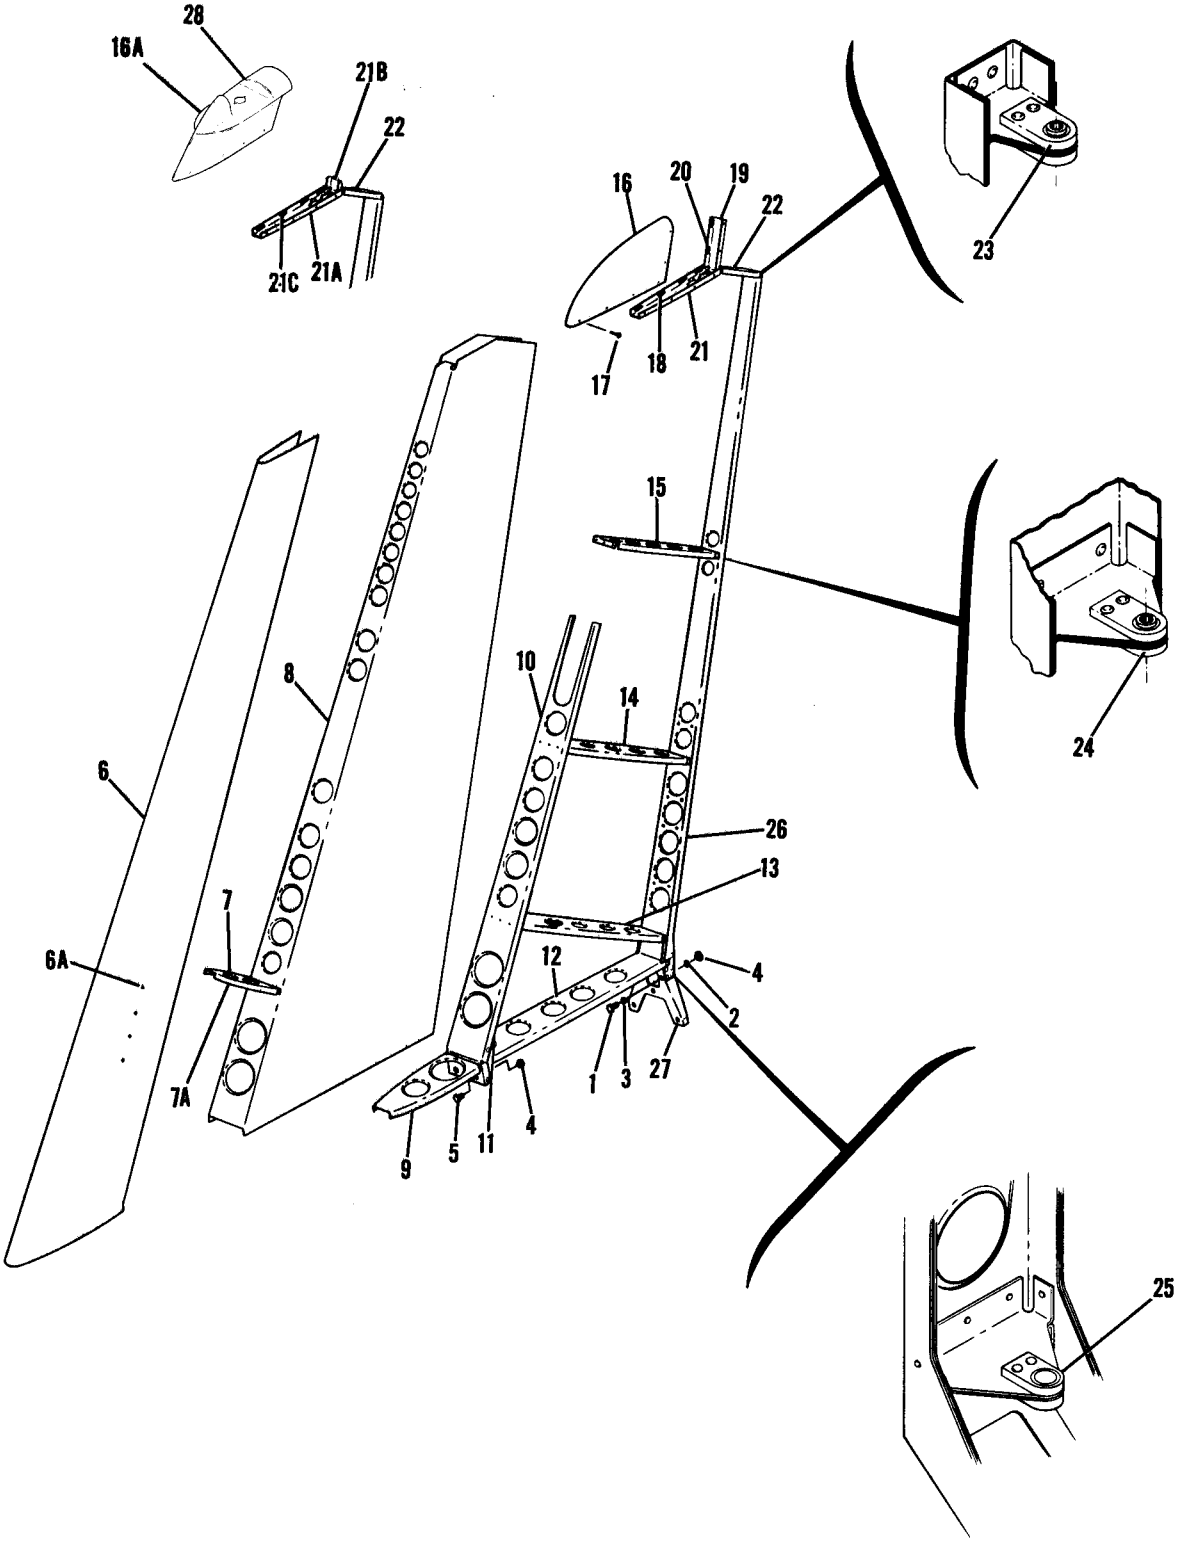


Figure 22. Fin Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
22 -		FIN INSTALLATION	NP	
	0531006-64	FIN ASSEMBLY	1	A
	0531006-77	FIN ASSEMBLY	1	C
	0531006-88	FIN ASSEMBLY	1	G
	0531006-203	FIN ASSEMBLY	1	F
		ATTACHING PARTS		
- 1	AN5-10A	BOLT	2	
- 2	AN960-516	WASHER	2	
- 3	AN960-516L	WASHER	2	
- 4	MS21042L5	NUT	4	
- 5	AN5-5A	BOLT	2	
		---*---		
- 6	0531006-65	SKIN	1	A
	0531006-84	SKIN ASSEMBLY	1	J
	0531006-96	SKIN ASSEMBLY	1	F
- 6A	S1863-3	NUTPLATE TIN	6	B
- 7	0531006-57	RIB	1	A
	0531006-82	RIB ASSEMBLY	1	J
	0531006-95	RIB ASSEMBLY	1	F
- 7A	S1863-3	NUTPLATE TIN	2	B
- 8	0531006-5	SKIN	1	
- 9	0531006-16	RIB	1	
-10	0531006-13	REINFORCEMENT ASSEMBLY-VERTICAL FIN	1	
-11	0531006-15	GUSSET	1	
-12	0531006-17	RIB	1	E
	0531006-87	RIB	1	D
-13	0531006-18	RIB	1	
-14	0531006-19	RIB	1	
-15	0531006-20	RIB	1	
-16	0531006-33-791	TIP-VERTICAL FIN	1	A
	SEE FIG 200	TIP-VERTICAL FIN ROTATING BEACON	1	
	SEE FIG 201	TIP-VERTICAL FIN FLASHING BEACON	1	
-16A	0531013-1	TIP ASSEMBLY-VERTICAL FIN	1	J
		ATTACHING PARTS		
-17	S1021Z6-4	SCREW	12	
-18	S1862-1A	NUT TIN	8	
		---*---		
-19	0531006-22	RIB ASSEMBLY	1	A
-20	S1862-1A	NUT TIN	4	A
-21	0531006-21	RIB	1	A
-21A	0531006-101	RIB ASSY	1	B
-21B	0531014-1	BULKHEAD-VERTICAL FIN CAP	1	
-21C	S1862-1A	NUT	8	
-22	0531006-54	RIB	1	
-23	0531006-39	HINGE HALF ASSEMBLY-UPPER	1	
-24	0531006-44	HINGE HALF ASSEMBLY-MIDDLE	1	
-25	0531006-49	HINGE HALF ASSEMBLY-LOWER	1	
-26	0531006-9	SPAR ASSEMBLY-VERTICAL FIN	1	
-27	0531006-10	FITTING	1	
-28	0531013-1	TIP ASSY-VERTICAL FIN	1	K

A---172 SERIAL 17249545 THRU 17257161
F172 SERIAL F172-0001 THRU F172-0559
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
C---172 SERIAL 17257162 THRU 17259223
F172 SERIAL F172-0560 THRU F17200754
D---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234
E---172 SERIAL 17249545 THRU 17259223
F172 SERIAL F172-0001 THRU F17200754
F---172 SERIAL 17259904 THRU 17263458
F172 SERIAL F17200905 THRU F17201234
G---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F1720755 THRU F17200904
H---DELETED
J---172 SERIAL 17257162 THRU 17259903
F172 SERIAL F172-0560 THRU F17200904
K---172 SERIAL 17259904 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Empennage (Cont)

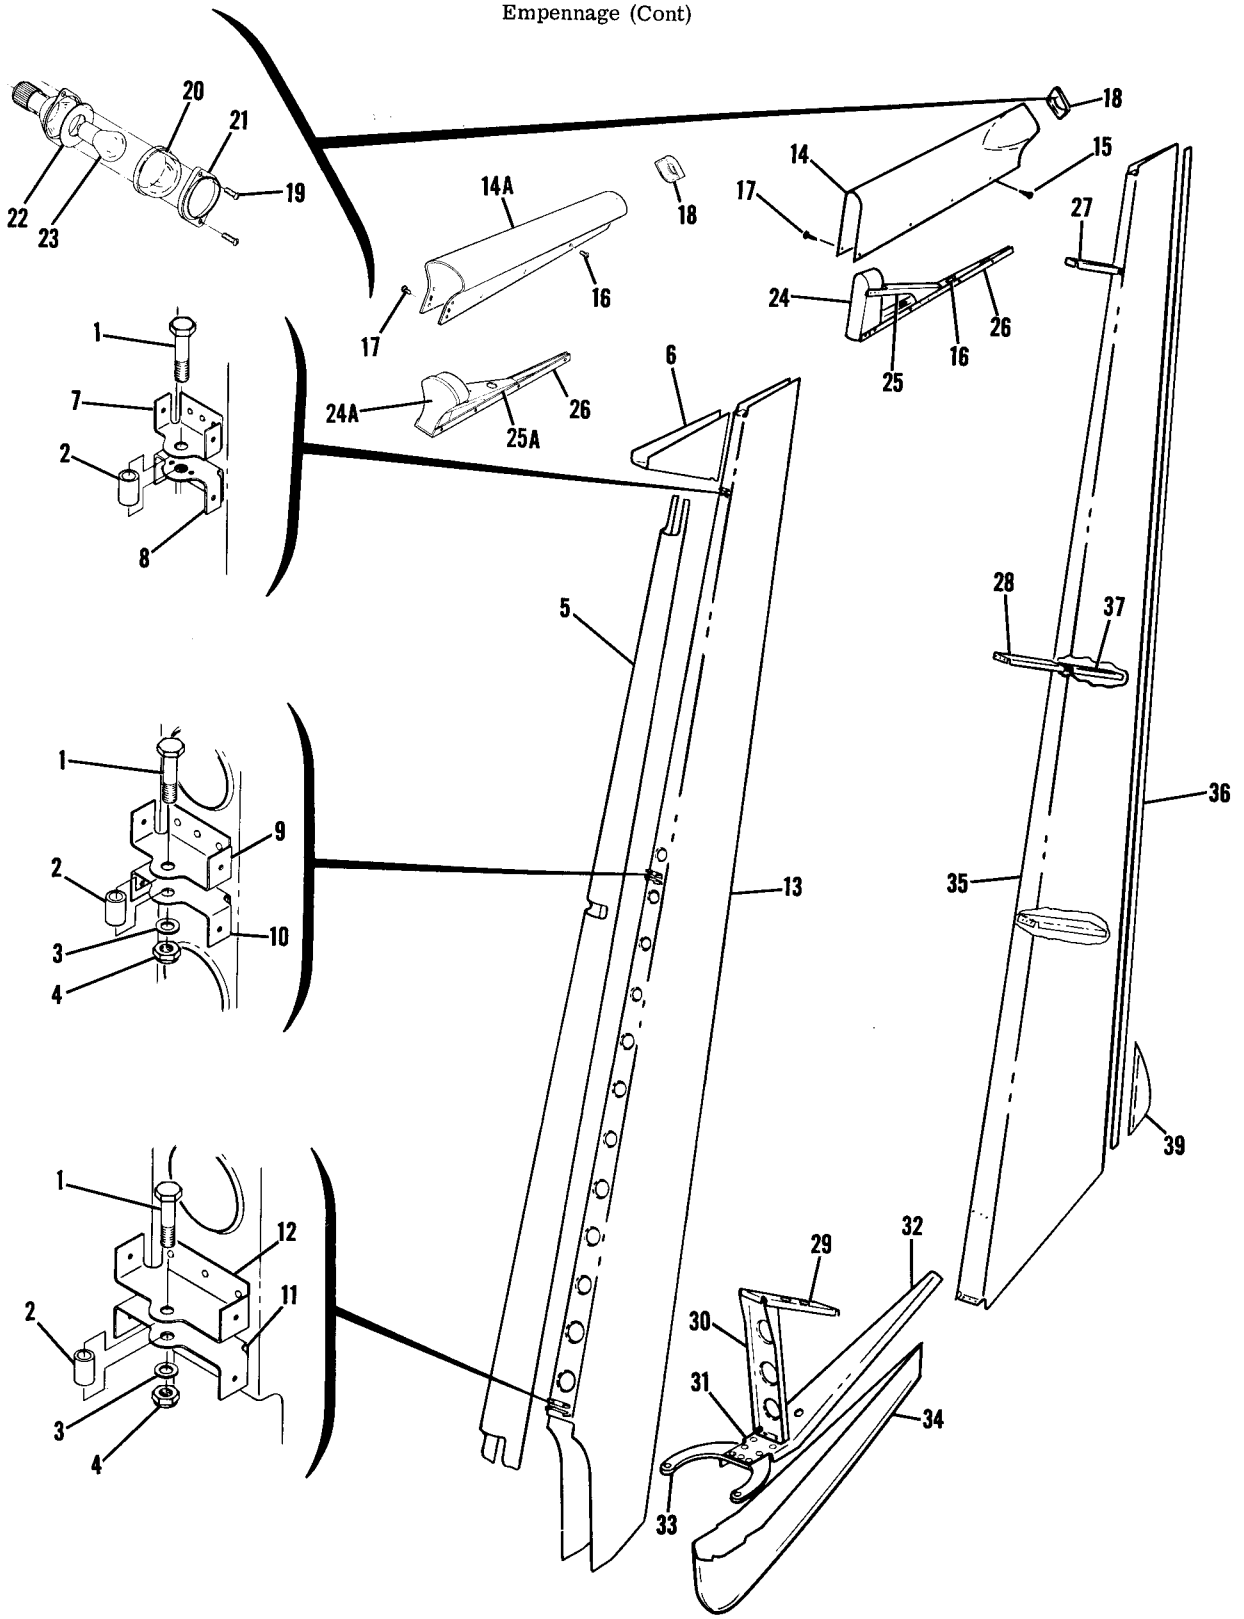


Figure 23. Rudder Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
23 -	0531006-3	RUDDER ASSEMBLY	1	A
	0531006-66	RUDDER ASSEMBLY	1	C
	0531006-81	RUDDER ASSEMBLY	1	E
		ATTACHING PARTS		
- 1	AN4-11A	BOLT	3	
- 2	0532104	BUSHING	3	
- 3	AN960-416	WASHER LOWER & CENTER HINGE ONLY	2	
- 4	MS21042L4	NUT LOWER & CENTER HINGE ONLY	2	
		---*---		
- 5	0531006-6	SKIN	1	A
	0531006-68	SKIN	1	B
- 6	0531006-55	SKIN	1	
- 7	0531006-40	BRACKET WEU 0531018-6	1	F
	0531018-6	BRACKET	1	G
- 8	0531006-63	BRACKET ASSEMBLY WEU 0531018-7	1	F
	0531018-7	BRACKET	1	G
	NAS698A4	NUTPLATE	1	
- 9	0531006-45	BRACKET WEU 0531018-4	1	F
	0531018-4	BRACKET	1	G
-10	0531006-46	BRACKET WEU 0531018-3	1	F
	0531018-3	BRACKET	1	G
-11	0531006-50	BRACKET WEU 0531018-1	1	F
	0531018-1	BRACKET	1	G
-12	0531006-51	BRACKET WEU 0531018-2	1	F
	0531018-2	BRACKET	1	G
-13	0531006-7	SKIN	1	A
	0531006-69	SKIN	1	B
-14	0531006-34-791	TIP-RUDDER	1	D
-14A	0533009-1-791	TIP-RUDDER	1	E
		ATTACHING PARTS		
-15	S1021Z6-4	SCREW	6	
-16	S1862-1A	NUT TIN	6	
-17	AN515-8R8	SCREW	6	
		---*---		
-18	0433007	MOUNT-TAIL LIGHT	1	
	C622001-0102	LIGHT ASSEMBLY-RUDDER	1	D
	C622001-0401	LIGHT ASSEMBLY-RUDDER	1	E
		ATTACHING PARTS		
-19	AN515-4R6	SCREW	2	
		---*---		
-20	A4513-1	LENS-TAIL LIGHT CLEAR GMC	1	
-21	C622001-0104	LENS-RETAINER GMC	1	D
	A2108A	LENS-RETAINER GMC	1	E
-22	A2109-3	GASKET GMC	1	
-23	1777	LAMP-TAIL LIGHT	1	
-24	0531102-3	WEIGHT	1	A
	0531102-5	WEIGHT	1	C
-24A	0533011-1	WEIGHT ASSEMBLY-RUDDER	1	E
-25	0531006-62	RIB	1	D
-25A	0531006-85	RIB	1	E
-26	0531006-30	RIB	1	
-27	0531006-32	RIB	1	
-28	0531006-29	RIB	1	
-29	0531006-28	RIB	1	
-30	0531006-71	RIB	1	
-31	0531006-24	RIB ASSEMBLY	1	
-32	0531006-25	RIB	1	
-33	0531008-1	HORN	1	
-34	0531006-35-791	BUTT-RUDDER	1	D
	0531006-80-791	BUTT-RUDDER	1	E
-35	0531006-8	SKIN	1	A
	0531006-70	SKIN	1	B
-36	0531006-52	FILLER	1	D
	0531006-79	FILLER-RUDDER	1	E
-37	0531006-58	RIB	1	
-38		DELETED		
-39	0533001-3	TRIM TAB-RUDDER	1	E

A---172 SERIAL 17249545 THRU 17252000
F172 SERIAL F172-0001 THRU F172-0119
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
23 -		B---172 SERIAL 17252001 THRU 17263458 F172 SERIAL F172-0120 THRU F17201234 C---172 SERIAL 17250001 THRU 17257161 F172 SERIAL F172-0120 THRU F172-0559 D---172 SERIAL 17249545 THRU 17257161 F172 SERIAL F172-0001 THRU F172-0559 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 E---172 SERIAL 17257162 THRU 17263458 F172 SERIAL F172-0560 THRU F17201234 F---172 SERIAL 17249545 THRU 17259756 F172 SERIAL F172-0001 THRU F17200804 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 G---172 SERIAL 17259757 THRU 17263458 F172 SERIAL F17200805 THRU F17201234		

This page intentionally left blank.

Empennage (Cont)

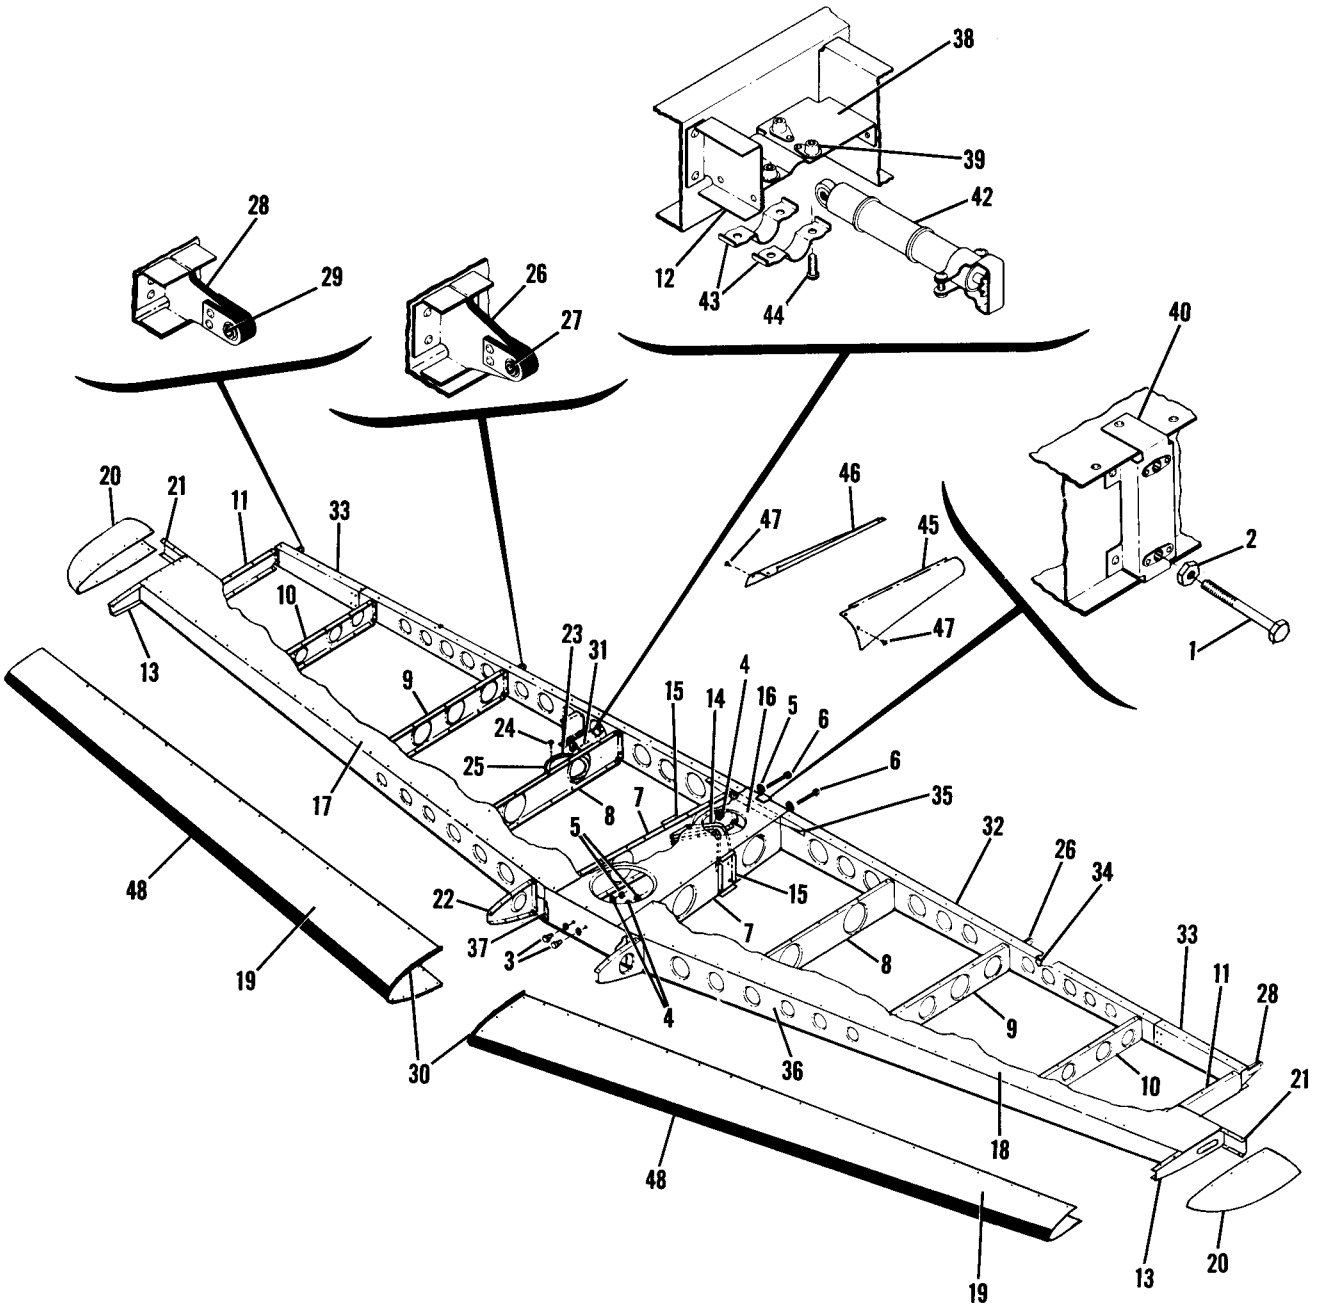


Figure 24. Stabilizer Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
24 -		STABILIZER INSTALLATION	NP	
- 1	NAS428H3-16	BOLT-ELEVATOR STOP	2	
- 2	AN315-3R	NUT-ELEVATOR STOP	2	
	0532001-202	STABILIZER ASSEMBLY	1	
		ATTACHING PARTS		
- 3	AN5-4A	BOLT	2	
	AN960-416	WASHER UNDER NUT	8	
- 4	MS21042L5	NUT	4	
- 5	S1450-5A20-100	WASHER BETWEEN STABILIZER & FITTING	AR	A
	S1450-5A20-080	WASHER BETWEEN STABILIZER & FITTING	AR	A
	S1450-5A20-063	WASHER BETWEEN STABILIZER & FITTING	AR	A
- 6	AN5-23A	BOLT	2	
		---*---		
- 7	0532001-99	RIB-STABILIZER	2	
- 8	0532001-13	RIB-STABILIZER	2	
- 9	0532001-14	RIB-STABLIZER	2	
-10	0532001-15	RIB-STABILIZER	2	
-11	0532001-16	RIB-STABILIZER	2	
-12	0532001-17	STUB RIB-STABILIZER	1	
-13	0532001-77	RIB-STABILIZER OUTBOARD	2	
-14	0532001-21	BRACKET-PULLEY	2	
-15	0532001-22	STIFFENER-STABILIZER	2	
-16	0532001-23	SKIN-STABILIZER CENTER	1	
-17	0532001-74	SKIN-STABILIZER RH	1	
-18	0532001-75	SKIN-STABILIZER LH	1	
-19	0532001-76	SKIN-LEADING EDGE	2	
-20	0532001-93	TIP-STABILIZER	2	
-21	0532001-78	TIP RIB-STABILZIER	2	
-22	0532001-50	RIB-STABILIZER NOSE	2	
-23	0432155	RETAINER-ACUTATOR COVER PLATE	1	
		ATTACHING PARTS		
-24	S1021Z8-8	SCREW	4	
-25	NAS395-14-3	NUT	4	
		---*---		
-26	0532105-6	HINGE ASSEMBLY-STABILIZER	2	
-27	0532104	BUSHING-STABILIZER	1	
	S1003-29A	BEARING-STABILIZER	1	
-28	0532105-9	HINGE ASSEMBLY-STABILIZER	2	
-29	0532104	BUSHING-STABILIZER	1	
	S1003-29A	BEARING-STABILIZER	1	
-30	S1415-1	MOULDING-STABILIZER	2	
		ATTACHING PARTS		
	S1021A4-6	SCREW	2	
	AN960D4L	WASHER	2	
		---*---		
-31	0432123	PLATE-STABILIZER	1	
-32	0532001-96	SPAR ASSEMBLY-REAR	1	
-33	0532001-7	TIP-SPAR	2	
-34	0532001-8	REINFORCEMENT-SPAR	1	
-35	0532001-81	ANGLE-REINFORCEMENT	2	
-36	0532001-98	SPAR ASSEMBLY-FRONT	1	
-37	0532001-97	REINFORCEMENT-SPAR	2	
-38	0532001-20	BRACKET ASSEMBLY-STABILIZER	1	
-39	NAS698A3	NUTPLATE	4	
-40	0532006-1	BRACKET ASSEMBLY	1	
-41		DELETED		
-42	SEE FIG 25	ACTUATOR ASSEMBLY-ELEVATOR TAB	1	
		ATTACHING PARTS		
-43	0432126	CLAMP-ACTUATOR	2	
-44	AN520-10R8	SCREW	4	
		---*---		
-45	0530010-5	FAIRING ASSEMBLY-LH	1	
-46	0530010-6	FAIRING ASSEMBLY-RH	1	
		ATTACHING PARTS		
-47	S1021Z8-8	SCREW	2	
		---*---		
-48	S1938-1	SHOE-HORIZONTAL STABILIZER FSO S1938-1-67.00	2	
		A---172 SERIAL 17260254 THRU 17263458 F172 SERIAL F17200880 THRU F17201234		

Flight Controls (Cont)

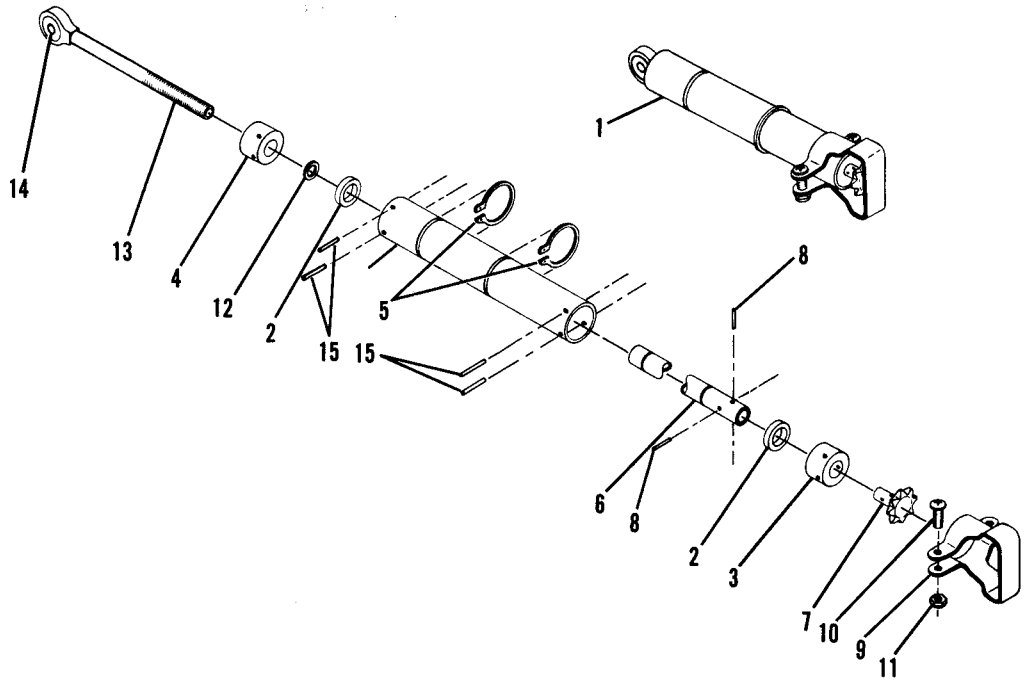


Figure 25. Elevator Trim Tab Actuator Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
25 - 1	0310293-2	ELEVATOR TRIM TAB ACTUATOR ASSEMBLY WEU1260074-1	1	A
	0310293-14	ELEVATOR TRIM TAB ACTUATOR ASSEMBLY WEU 1260074-1	1	B
	1260074-1	ELEVATOR TRIM TAB ACTUATOR ASSEMBLY	1	C
- 2	0310295	COLLAR-ACTUATOR	2	
- 3	0310297-1	BEARING-ACTUATOR	1	
- 4	0310298-1	BEARING-ACTUATOR	1	
- 5	MS16624-1081	RING-RETAINER OUTSIDE	2	
- 6	0310352	SCREW-INTERNAL THREADS	1	A
	0310352-1	SCREW-INTERNAL THREADS	1	B
	1260049-1	SCREW-INTERNAL THREADS	1	C
- 7	0310332	SPROCKET-ROLL CHAIN	1	
		ATTACHING PARTS		
- 8	3/32X.38TYPE3	GROOV-PIN	2	
		---*---		
- 9	0310422	GUARD-ROLL CHAIN	1	A
	0310422-1	GUARD-ROLL CHAIN	1	D
		ATTACHING PARTS		
-10	AN515-8R8	SCREW	2	
-11	MS21044N08	NUT	2	
		---*---		
-12	AN6227-5	PACKING-ACTUATOR	1	
-13	0310362-5	SCREW ASSEMBLY-ACTUATOR	1	
-14	PN3A	BEARING TOR	1	
-15	1/16X.62TYPE3	GROOV-PIN	4	

A---172 SERIAL 17249545 THRU 17253392
F172 SERIAL F172-0001 THRU F172-0203
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17253393 THRU 17254119
F172 SERIAL F172-0204 THRU F172-0319
C---172 SERIAL 17254200 THRU 17263458
F172 SERIAL F172-0320 THRU F17201234
D---172 SERIAL 17253393 THRU 17263458
F172 SERIAL F172-0204 THRU F17201234

This page intentionally left blank.

Empennage (Cont)

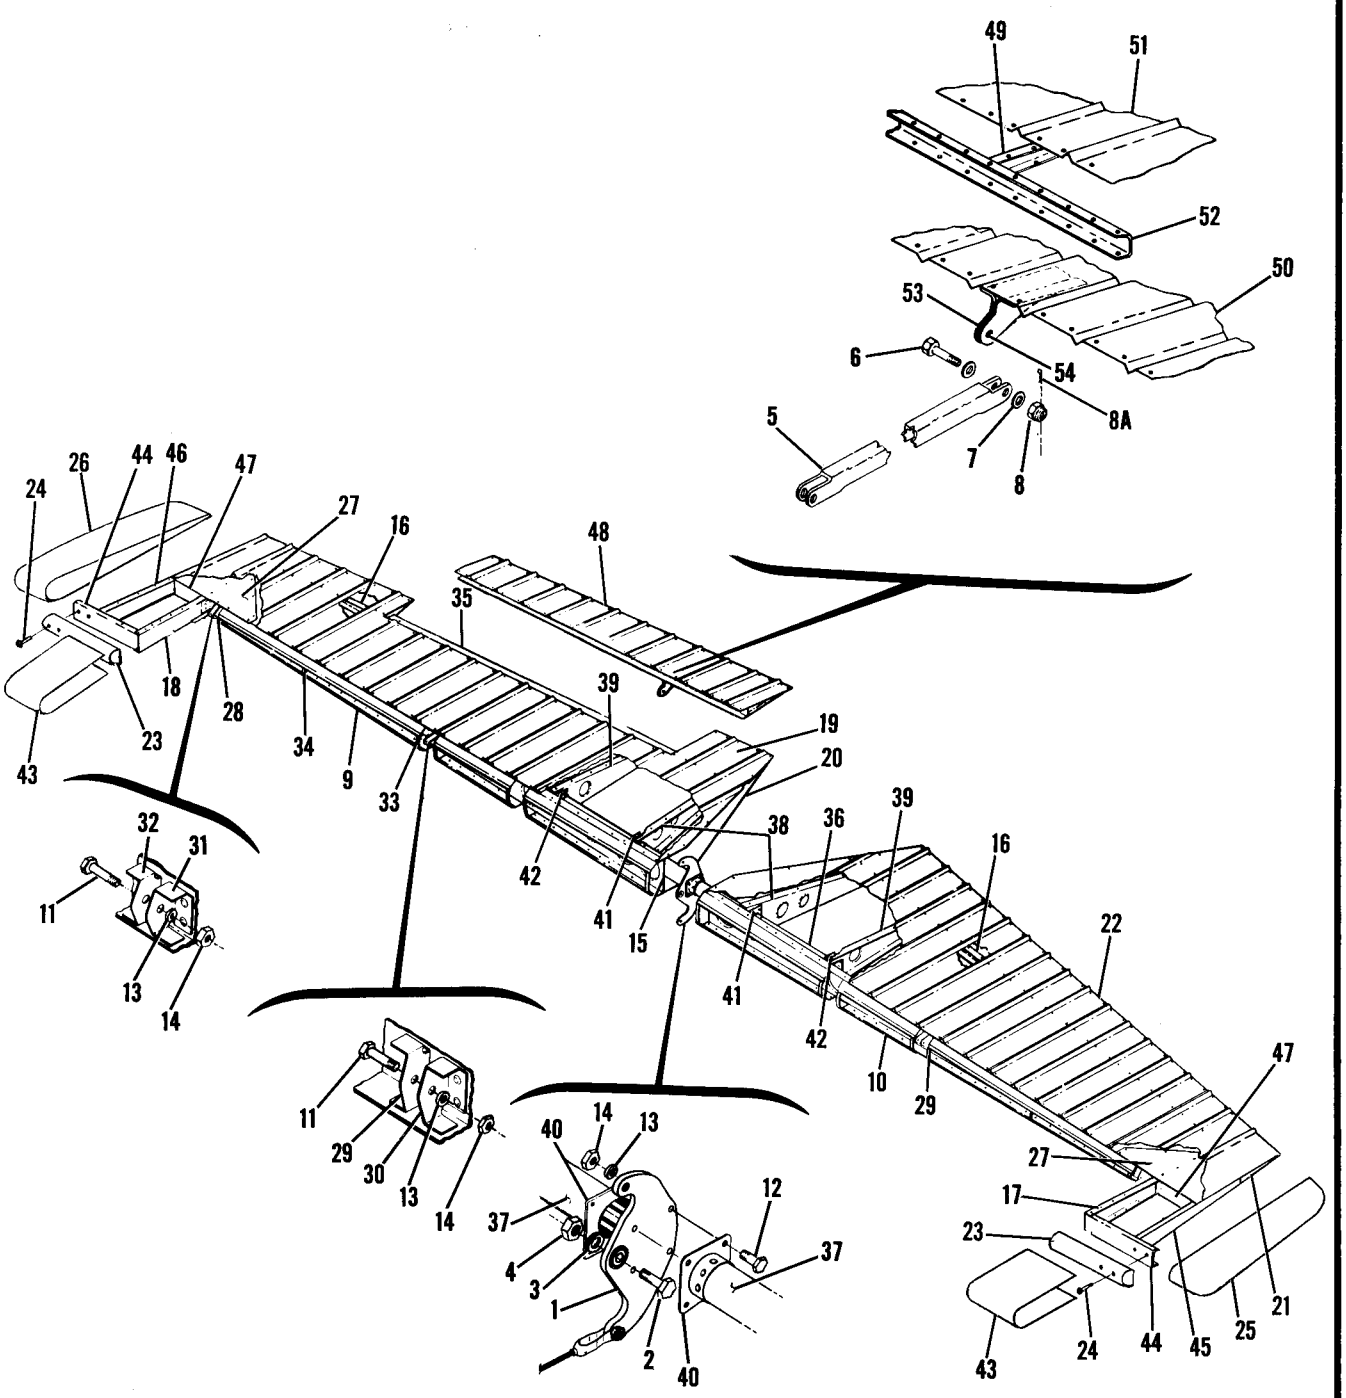


Figure 26. Elevator Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
26 -		ELEVATOR INSTALLATION	NP	
- 1	0534122-1	BELLCRANK ASSEMBLY	1	
		ATTACHING PARTS		
- 2	AN4-14A	BOLT	1	
- 3	AN960-416	WASHER	1	
- 4	MS21042L4	NUT	1	
		---*---		
- 5	0532001-47	CHANNEL-TAB ACTUATOR PUSH-PULL	1	
		ATTACHING PARTS		
- 6	AN3-6	BOLT	2	
- 7	AN960-10L	WASHER	4	
- 8	AN320-3	NUT	2	
- 8A	MS24665-132	COTTER PIN	2	
		---*---		
- 9	0593000-4	ELEVATOR ASSEMBLY-RH LESS TRIM TAB	1	
-10	0532001-73	ELEVATOR ASSEMBLY-LH	1	
		ATTACHING PARTS		
-11	AN4-11A	BOLT	4	
-12	AN4-7A	BOLT	4	
-13	AN960-416	WASHER	12	
-14	MS21042L4	NUT	8	
		---*---		
-15	0532001-28	SPAR-ELEVATOR	1	
-16	0532001-29	CHANNEL-ELEVATOR	1	
-17	0532001-83	RIB-ELEVATOR LH	1	
-18	0532001-82	RIB-ELEVATOR RH	1	
-19	0532001-88	SKIN-ELEVATOR UPPER RH	1	
-20	0532001-90	SKIN-ELEVATOR LOWER RH	1	
-21	0532001-91	SKIN-ELEVATOR LOWER LH	1	
-22	0532001-89	SKIN-ELEVATOR UPPER LH	1	
-23	0532107-1	WEIGHT-ELEVATOR BALANCE	1	
		ATTACHING PARTS		
-24	AN509-8R15	SCREW	2	
		---*---		
-25	0532001-94-791	TIP-ELEVATOR LH	1	
-26	0532001-100-791	TIP-ELEVATOR RH	1	
-27	0532001-86	DOUBLER-ELEVATOR UPPER	1	
-28	0532001-87	DOUBLER-ELEVATOR LOWER	1	
-29	0532105-3	BRACKET-ELEVATOR OUTBOARD	1	
-30	0532105-4	BRACKET-ELEVATOR INBOARD	1	
-31	0531105-10	BRACKET-ELEVATOR INBOARD	1	
-32	0531105-11	BRACKET-ELEVATOR OUTBOARD	1	
-33	0534126-1	CLIP-ELEVATOR INBOARD	5	
-34	0534126-2	CLIP-ELEVATOR OUTBOARD	2	
-35	0532001-45	HINGE ASSEMBLY-TAB RH	1	
-36	0532001-30	TORQUE TUBE ASSEMBLY-ELEVATOR	1	
-37	0532001-31	TUBE-TORQUE	1	
-38	0532001-32	RIB-ELEVATOR	1	
-39	0532001-33	RIB-ELEVATOR	1	
-40	0532001-35	ADAPTER-TORQUE TUBE	1	
-41	0734102-3	ADAPTER-TORQUE TUBE	1	
-42	0734102-4	ADAPTER-TORQUE TUBE	1	
-43	0532001-92	SKIN-ELEVATOR TIP	1	
-44	0532001-95	RIB ASSEMBLY-TIP	1	
-45	0532001-85	RIB-ELEVATOR LH	1	
-46	0532001-84	RIB-ELEVATOR RH	1	
-47	0532001-80	RIB-SPAR EXTENTION	1	
-48	0532001-4	TRIM TAB ASSEMBLY-ELEVATOR	1	A
	0532001-101	TRIM TAB ASSEMBLY-ELEVATOR	1	B
-49	0532001-42	RIB-TAB	1	
-50	0532001-43	SKIN-TAB LOWER	1	
-51	0532001-44	SKIN-TAB UPPER	1	
-52	0532001-48	SPAR-TAB	1	
-53	0334128	HORN ASSEMBLY-TRIM TAB	1	A
	0334128-3	HORN ASSEMBLY-TRIM TAB	1	B
-54	PN-3A	BEARING-HORN ASSEMBLY TOR	1	

A---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17251823 THRU 17263458
F172 SERIAL F172-0086 THRU F17201234

Fuselage

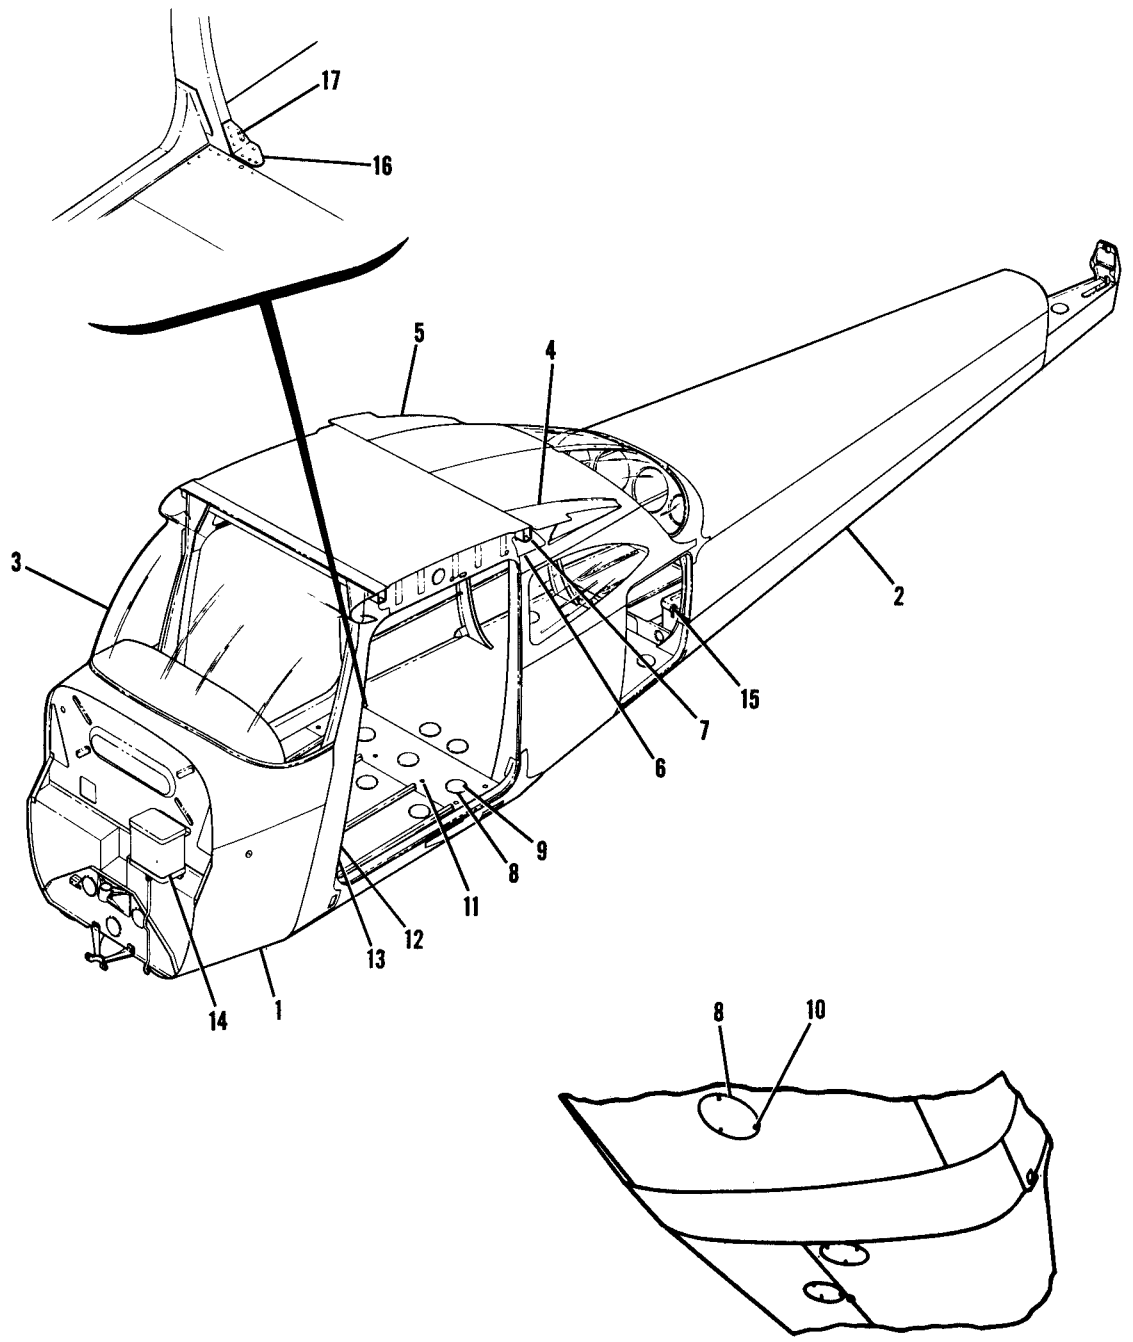



Figure 27. Fuselage Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
27 -		FUSELAGE ASSEMBLY	NP	
- 1	SEE FIG 28	FRONT & CENTER SECTION ASSEMBLY-FUSELAGE	1	C
	SEE FIG 28	FRONT & CENTER SECTION ASSEMBLY-FUSELAGE	1	B
	SEE FIG 29	FRONT & CENTER SECTION ASSEMBLY-FUSELAGE	1	E
	SEE FIG 30	FRONT & CENTER SECTION ASSEMBLY-FUSELAGE	1	F
- 2	SEE FIG 49	AFT SECTION ASSEMBLY-FUSELAGE	1	A
	SEE FIG 49	AFT SECTION ASSEMBLY-FUSELAGE	1	B
- 3	SEE FIG 48	WINDSHIELD INSTALLATION	1	
- 4	0512027-1	FILLET ASSEMBLY-WING LH	1	
- 5	0512027-2	FILLET ASSEMBLY-WING RH	1	
- 6	0512146	PLATE-LH	1	
	0512146-1	PLATE-RH	1	
- 7	0512149-1	BRACKET-FLAP PULLEY LH	1	D
	0512149-2	BRACKET-FLAP PULLEY RH	1	D
- 8	S225-1	PLATE-INSPECTION COVER	19	
- 9	49330	STUD-TRIMOUNT UC	48	
-10	S1021Z8-8	SCREW	9	
-11	41843	PLUG BUTTON UC	6	
-12		NAME PLATE M.A.A.	NP	
-13	0713047	PLACARD-TRIM & FINISH	1	
		ATTACHING PARTS		
	AN535-2-3	SCREW	2	
		---*---		
-14	SEE FIG 53	BOX INSTALLATION-BATTERY	1	A
-15	SEE FIG 54	BOX INSTALLATION-BATTERY	1	B
-16	0512184-1	STIFFENER-LH	1	F
	0512184-2	STIFFENER-RH	1	F
-17	0512185-1	SPACER	2	F

NOTE. SEE FIG 187 & 189 FOR FLOATPLANE FUSELAGE STRUCTURE DETAILS

A---172 SERIAL 17249545 THRU 17263458
F172 SERIAL F172-0001 THRU F17201234
B---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
C---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
D---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
E---172 SERIAL 17251823 THRU 17259223
F172 SERIAL F172-0086 THRU F17200754
F---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234

Fuselage (Cont)

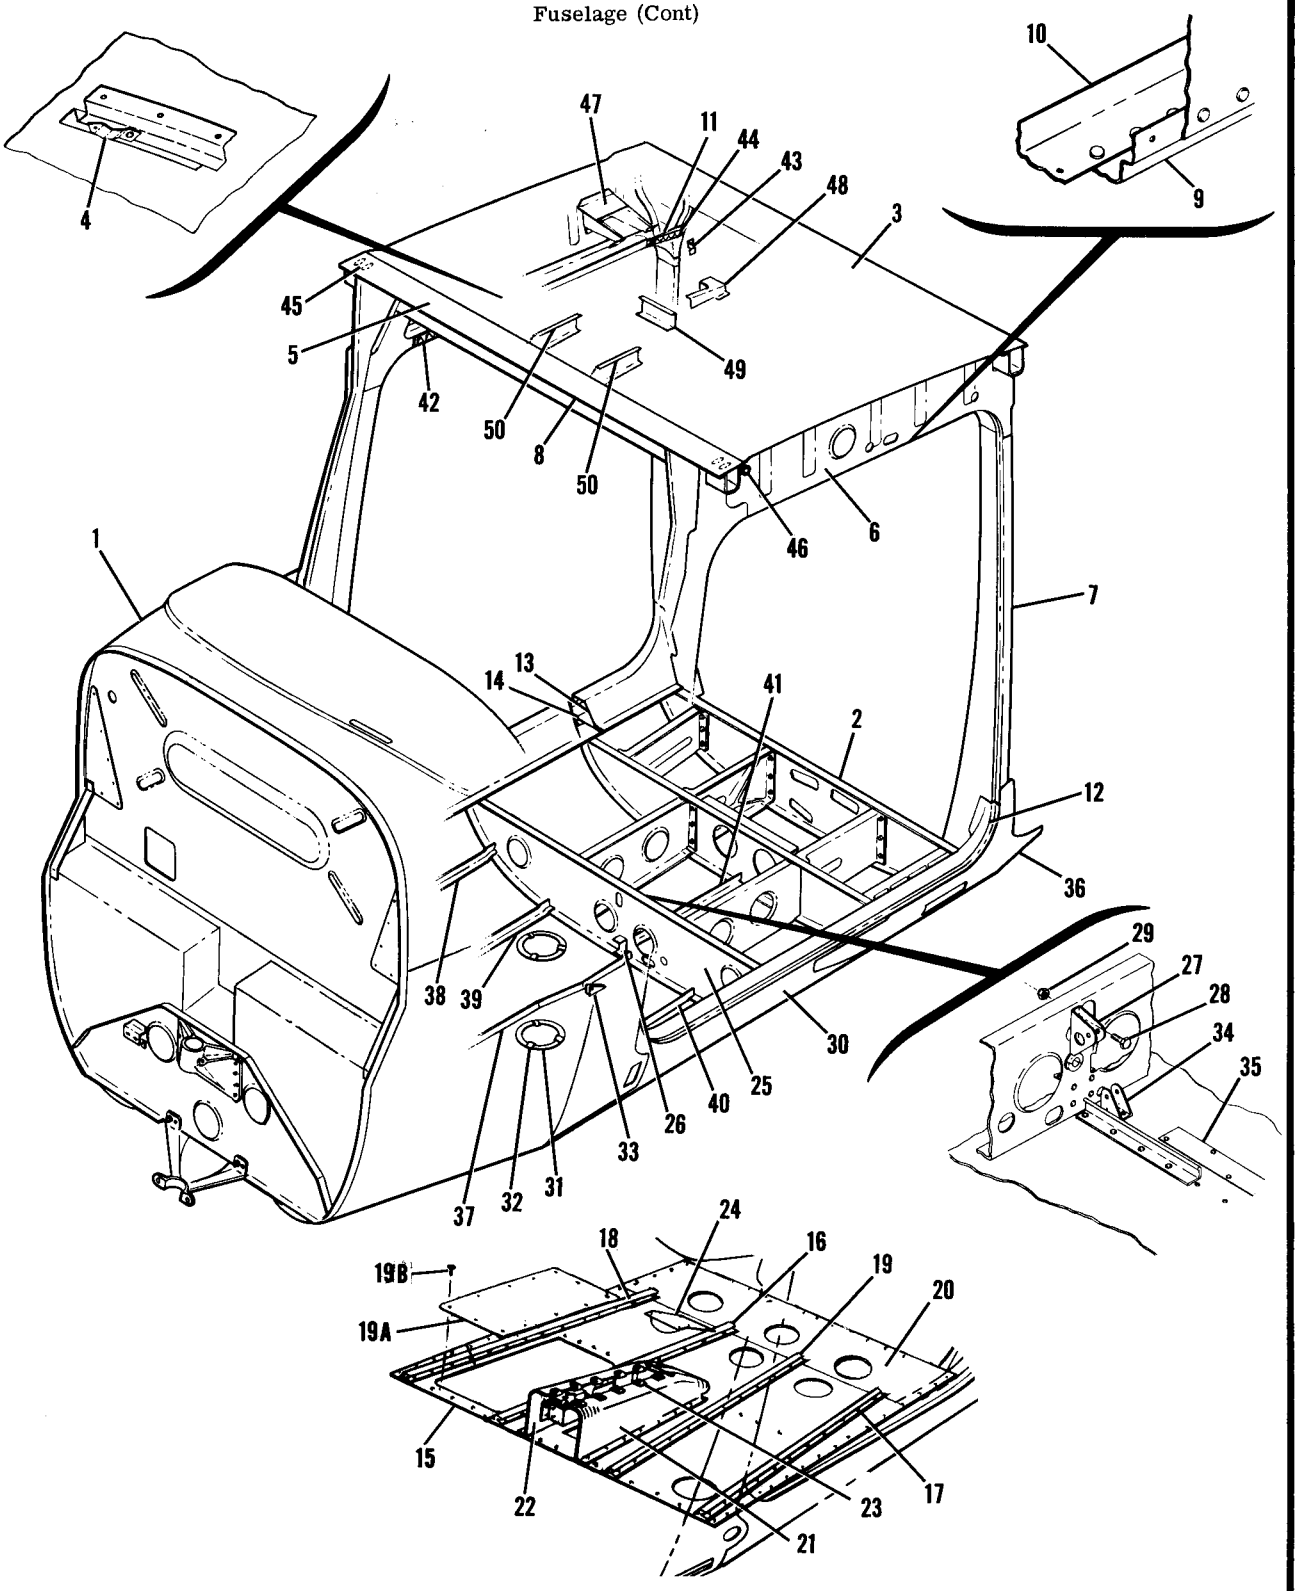

172 SERIAL 17249545 THRU 17251822
P172 SERIAL P17257120 THRU P17257188

Figure 28. Fuselage Front & Center Section Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
28 -	0591102-1	FRONT & CENTER SECTION ASSEMBLY-FUSELAGE	1	A
	0591102-3	FRONT & CENTER SECTION ASSEMBLY-FUSELAGE	1	C
	0591102-2	FRONT & CENTER SECTION ASSEMBLY-FUSELAGE	1	B
- 1	SEE FIG 31	FRONT SECTION ASSEMBLY-FUSELAGE	1	
- 2	SEE FIG 46	BULKHEAD ASSEMBLY-LANDING GEAR	1	
- 3	0511114-9	TOP ASSEMBLY-CABIN	1	
- 4	0411680	HANGER-INTERIOR TRIM	2	
- 5	0511000-24	CAP-FUSELAGE FRONT SPAR	1	
- 6	0511000-43	RIB-FUSELAGE FORWARD SECTION LH	1	
	0511000-44	RIB-FUSELAGE FORWARD SECTION RH	1	
- 7	SEE FIG 44	BULKHEAD ASSEMBLY-STA 65.33	1	
- 8	0513312-1	RETAINER-WINDSHIELD TOP	1	
- 9	0511000-6	FRAME-DOOR UPPER OUTBOARD LH	1	
	0511000-7	FRAME-DOOR UPPER OUTBOARD RH	1	
-10	0511000-22	FRAME-DOOR UPPER INBOARD LH	1	
	0511000-23	FRAME-DOOR UPPER INBOARD RH	1	
-11	0511000-9	GUSSET-UPPER REAR DOOR JAMB RH	1	
	0511000-8	GUSSET-UPPER REAR DOOR JAMB LH	1	
-12	0511116-12	SILL ASSEMBLY-DOOR LOWER LH	1	
-13	0511116-13	SILL ASSEMBLY-DOOR LOWER RH	1	
-14	0511291-2	SUPPORT-LOWER DOOR SILL RH	1	
	0511291-1	SUPPORT-LOWER DOOR SILL LH	1	
-15	0511480-1	FLOORBOARD ASSEMBLY-FUSELAGE CENTER SECTION FORWARD WHEN EXHAUSTED USE 0511480-3	1	D
	0511480-3	FLOORBOARD ASSEMBLY-FUSELAGE CENTER SECTION	1	C
-16	0511240-1	SEAT RAIL-INBOARD RH	1	
-17	0511240-2	SEAT RAIL-OUTBOARD LH	1	
-18	0511240-3	SEAT RAIL-OUTBOARD RH	1	
-19	0511240-4	SEAT RAIL-INBOARD LH	1	
	0511480-2	FLOORBOARD-STA 27.03 TO 56.70 WHEN EXHAUSTED USE 0511480-4	1	D
	0511480-4	FLOORBOARD-STA 27.03 TO 56.70	1	C
-19A	0511249-1	COVER PLATE-FLOORBOARD	1	C
-19B	AN525-832R7	SCREW	12	C
	NAS680A08K	NUT PLATE	12	C
-20	0511479-1	FLOORBOARD-FUSELAGE CENTER SECTION AFT	1	
-21	0510183	BULKHEAD-TUNNEL AFT LH	1	
-22	0510183-1	BULKHEAD-TUNNEL AFT RH	1	
-23	NAS395-12	NUT	9	
-24	0510129-3	PLATE-TUNNEL REAR	1	
-25	0511290-1	BULKHEAD ASSEMBLY-STA 44.00	1	
-26	0511192	BRACKET-FUEL SELECTOR VALVE	1	
-27	0411447	BRACKET-ELEVATOR PULLEY	1	
		ATTACHING PARTS		
-28	AN520-10R7	SCREW	1	
-29	MS21044N3	NUT	1	
		---*---		
-30	0510201-2	SKIN-FUSELAGE CENTER SECTION LOWER	1	
-31	S226-3	DOUBLER-INSPECTION OPENING	2	
-32	NAS395-14-3	NUT	6	
-33	0311752-16	BRACKET-TAB PULLEY	1	
-34	0510174	BRACKET-FLAP PULLEY	1	
-35	0511000-60	RUB STRIP	1	
-36	0511295-2	SKIN-LANDING GEAR BULKHEAD	1	
-37	0511488-1	STRINGER-FUSELAGE CENTER SECTION	1	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
28 -38	0511486-2	ANGLE-RH	1	
	0511486-1	ANGLE-LH	1	
-39	0511486-3	ANGLE-LH	1	
-40	0511486-4	ANGLE-RH	1	
-41	0700326-1	BRACKET-REAR SEAT VENT	2	
-42	0511153	RETAINER ASSEMBLY-HEADLINER	2	
-43	0511150-1	BRACKET-UPHOLSTERY RH	1	
	0511150	BRACKET-UPHOLSTERY LH	1	
-44	0500235-1	RETAINER-HEADLINER	1	
-45	NAS444-4	NUTPLATE	4	
-46	MS35489-118	GROMMET	2	
-47	0700326-1	BRACKET-REAR SEAT VENT	2	
-48	0511483-1	BRACKET-CONSOLE	1	
-49	0511484-1	BRACKET-CONSOLE	1	
-50	0511485-1	BRACKET-SPEAKER	2	
		A---172 SERIAL 17249545 THRU 17250572 F172 SERIAL F172-0001 THRU F172-0018 B---P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 C---172 SERIAL 17250573 THRU 17251822 F172 SERIAL F172-0019 THRU F172-0085 D---172 SERIAL 17249545 THRU 17250572 F172 SERIAL F172-0001 THRU F172-0018 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
29 -	0591102-5	FRONT & CENTER SECTION ASSEMBLY-FUSELAGE	1	A
	0591102-7	FRONT & CENTER SECTION ASSEMBLY-FUSELAGE	1	B
	0591102-8	FRONT & CENTER SECTION ASSEMBLY-FUSELAGE	1	F
	0591102-14	FRONT & CENTER SECTION ASSEMBLY-FUSELAGE	1	G
	0591102-12	FRONT & CENTER SECTION ASSEMBLY-FUSELAGE	1	E
- 1	SEE FIG 32	FRONT SECTION ASSEMBLY-FUSELAGE	1	D
	SEE FIG 33	FRONT SECTION ASSEMBLY-FUSELAGE	1	C
- 2	SEE FIG 46	BULKHEAD ASSEMBLY-LANDING GEAR	1	
- 3	0511114-9	TOP ASSEMBLY-CABIN	1	
- 4	0411680	HANGER-INTERIOR TRIM	2	
- 5	0511000-24	CAP-FUSELAGE FRONT SPAR	1	
- 6	0511000-43	RIB-FUSELAGE FORWARD SECTION LH	1	
	0511000-44	RIB-FUSELAGE FORWARD SECTION RH	1	
- 7	SEE FIG 44	BULKHEAD ASSEMBLY-STA 65.33	1	
- 8	0513312-1	RETAINER-WINDSHIELD TOP	1	
- 9	0511000-6	FRAME-DOOR UPPER OUTBOARD LH	1	
	0511000-7	FRAME-DOOR UPPER OUTBOARD RH	1	
-10	0511000-22	FRAME-DOOR UPPER INBOARD LH	1	
	0511000-23	FRAME-DOOR UPPER INBOARD RH	1	
-11	0511000-9	GUSSET-UPPER REAR DOOR JAMB RH	1	
	0511000-8	GUSSET-UPPER REAR DOOR JAMB LH	1	

CONTINUED ON NEXT PAGE

Fuselage (Cont)

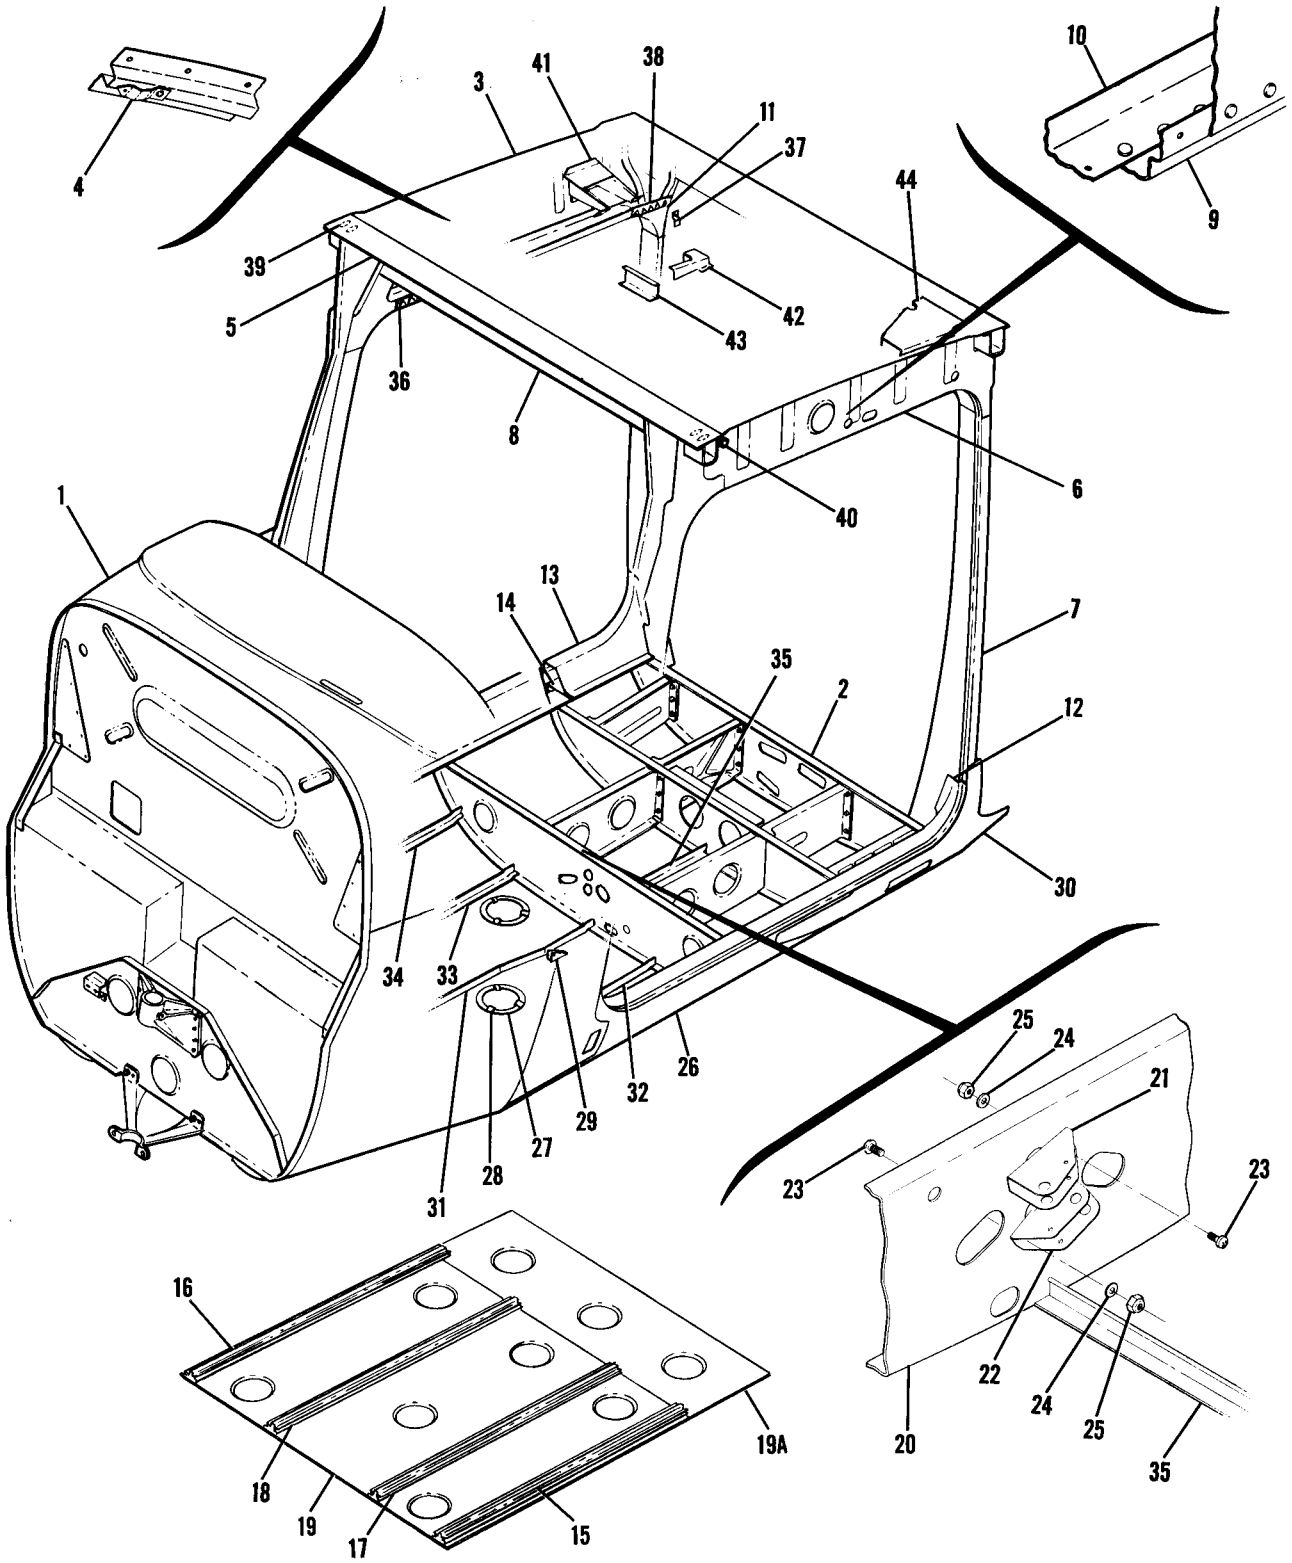


F172 SERIAL F172-0086 THRU F17200754
172 SERIAL 17251823 THRU 17259223

Figure 29. Fuselage Front & Center Section Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
29 -12	0511116-12	SILL ASSEMBLY-DOOR LOWERLH	1	
-13	0511116-13	SILL ASSEMBLY-DOOR LOWER RH	1	
-14	0511291-2	SUPPORT-LOWER DOOR SILL RH	1	
	0511291-1	SUPPORT-LOWER DOOR SILL LH	1	
	0511480-5	FLOORBOARD ASSEMBLY-FUSELAGE CENTER SECTION WEU 0511480-7	1	K
	0511480-7	FLOORBOARD ASSEMBLY-FUSELAGE CENTER SECTION	1	L
-15	0511240-2	SEAT RAIL-OUTBOARD LH	1	H
	0511240-7	SEAT RAIL-OUTBOARD LH	1	J
-16	0511240-3	SEAT RAIL-OUTBOARD RH	1	H
	0511240-8	SEAT RAIL-OUTBOARD RH	1	J
-17	0511240-5	SEAT RAIL-INBOARD LH	1	H
	0511240-9	SEAT RAIL-INBOARD LH	1	J
-18	0511240-6	SEAT RAIL-INBOARD RH	1	H
	0511240-10	SEAT RAIL-INBOARD RH	1	J
	NAS680A08K	NUTPLATE	4	K
-19	0511480-6	FLOORBOARD-STA. 27.41 TO 56.32 WEU 0511480-8	1	K
	0511480-8	FLOORBOARD-STA 27.41 TO 56.32	1	J
-19A	0511479-1	FLOORBOARD	1	
-20	0511497-1	BULKHEAD ASSEMBLY-STA 44.00	1	
-21	0511498-1	BRACKET-PULLEY	1	
-22	0511499-1	BRACKET-PULLEY	1	
		ATTACHING PARTS		
-23	AN520-10R6	SCREW	1	
-24	AN960-8	WASHER	1	
-25	MS21044N3	NUT	1	
		---*---		
-26	0510201-4	SKIN-FUSELAGE CENTER SECTION LOWER	1	
-27	S226-3	DOUBLER	2	
-28	NAS395-14-3	NUT	6	
-29	0511254-1	BRACKET-PULLEY	1	
-30	0511295-2	SKIN-LANDING GEAR BULKHEAD	1	
-31	0511486-5	ANGLE	1	
-32	0511486-4	ANGLE-RH	1	
-33	0511486-3	ANGLE-LH	1	
-34	0511486-2	ANGLE-RH	1	
	0511486-1	ANGLE-LH	1	
-35	0511292-3	ANGLE	1	
-36	0511153	RETAINER-HEADLINER	2	
-37	0511150-1	BRACKET-UPHOLSTERY RH	1	
	0511150	BRACKET-UPHOLSTERY LH	1	
-38	0500235-1	RETAINER-HEADLINER	2	
-39	S1863-3	NUT TIN	4	
-40	MS35489-118	GROMMET	2	
-41	0700326-1	BRACKET-REAR SEAT VENT	2	D
-42	0511483-1	BRACKET-CONSOLE	1	
-43	0511484-1	BRACKET-CONSOLE	1	
-44	1210032-1	VIBRATION DAMPENER-LH	1	
	1210032-2	VIBRATION DAMPENER-RH	1	

A---172 SERIAL 17251823 THRU 17253392
F172 SERIAL F172-0086 THRU F172-0179
B---172 SERIAL 17253393 THRU 17254892
F172 SERIAL F172-0180 THRU F172-0319
C---172 SERIAL 17254893 THRU 17259223
F172 SERIAL F172-0320 THRU F17200754
D---172 SERIAL 17251823 THRU 17254892
F172 SERIAL F172-0086 THRU F172-0319
E---172 SERIAL 17256513 THRU 17259223
F---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F172-0559
G---F172 SERIAL F172-0560 THRU F17200754
H---172 SERIAL 17251823 THRU 17258656
F172 SERIAL F172-0086 THRU F17200739
J---172 SERIAL 17258657 THRU 17259223
F172 SERIAL F17200740 THRU F17200755
K---172 SERIAL 17251823 THRU 17258890
F172 SERIAL F172-0086 THRU F17200754
L---172 SERIAL 17258891 THRU 17259223
F172 SERIAL F17200755 THRU F17200754

Fuselage (Cont)

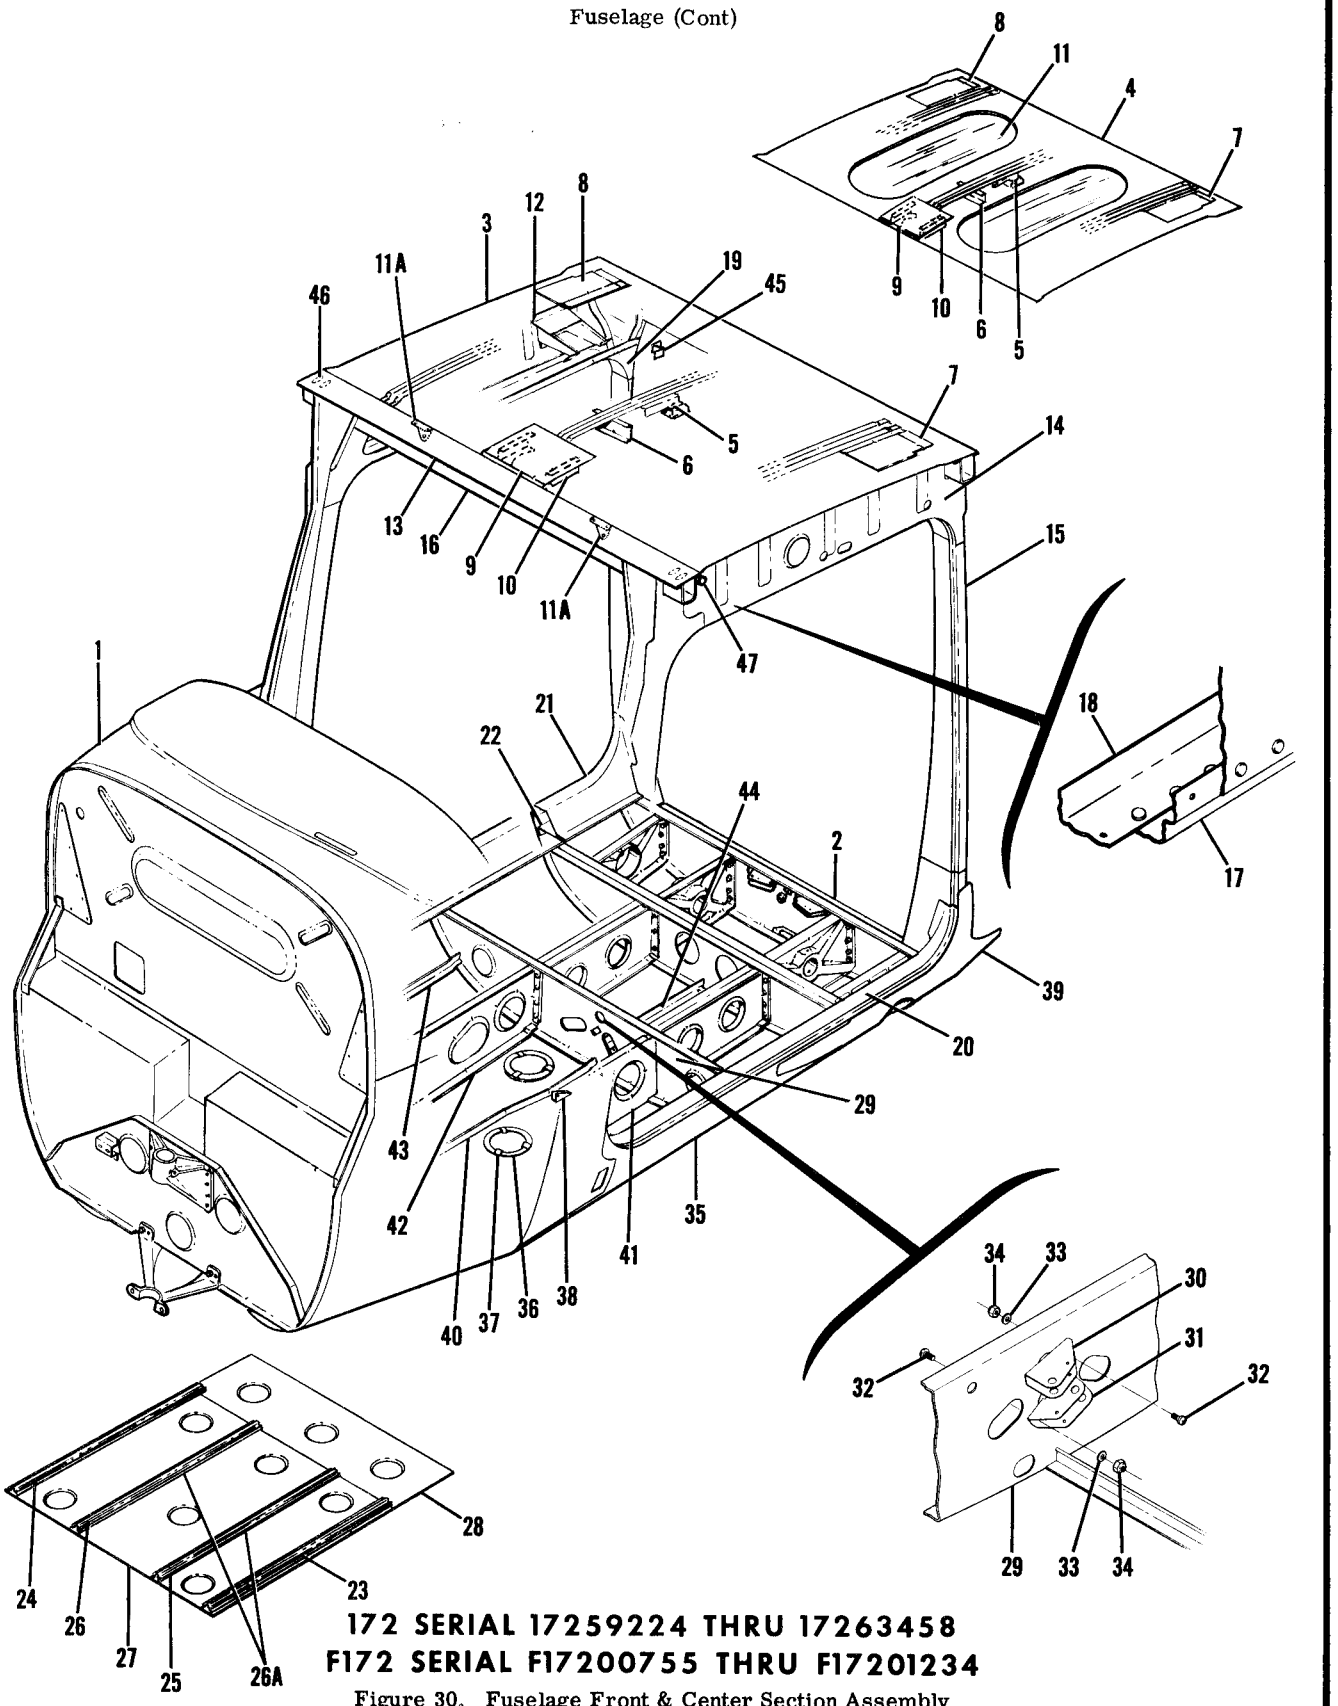

172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234

Figure 30. Fuselage Front & Center Section Assembly


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30 -	0591102-18	FRONT & CENTER SECTION ASSY-FUSELAGE 172	1	A
	0591102-19	FRONT & CENTER SECTION ASSY-FUSELAGE 172 WITH SKYLIGHT	1	A
	0591102-20	FRONT & CENTER SECTION ASSY-FUSELAGE P172	1	B
	0591102-21	FRONT & CENTER SECTION ASSY-FUSELAGE P172 WITH SKYLIGHT	1	B
	0591102-24	FRONT & CENTER SECTION ASSY-FUSELAGE	1	E
	0591102-28	FRONT & CENTER SECTION ASSY-FUSELAGE	1	H
	0591102-30	FRONT & CENTER SECTION ASSY-FUSELAGE	1	J
	0591102-32	FRONT & CENTER SECTION ASSY-FUSELAGE	1	K
	0591102-25	FRONT & CENTER SECTION ASSY-FUSELAGE WITH SKYLIGHT	1	E
	0591102-29	FRONT & CENTER SECTION ASSY-FUSELAGE WITH SKYLIGHT	1	H
	0591102-31	FRONT & CENTER SECTION ASSY-FUSELAGE WITH SKYLIGHT	1	J
	0591102-33	FRONT & CENTER SECTION ASSY-FUSELAGE WITH SKYLIGHT	1	K
- 1	SEE FIG 33	FRONT SECTION ASSEMBLY-FUSELAGE	1	
- 2	SEE FIG 47	BULKHEAD ASSEMBLY-LANDING GEAR	1	
- 3	0511801-4	TOP ASSEMBLY-CABIN	1	
- 4	0511800-2	TOP ASSEMBLY-CABIN SKYLIGHT WEU 0511800-5	1	D
	0511800-5	TOP ASSEMBLY-CABIN SKYLIGHT BRONZE	1	C
- 5	0413495-1	BRACKET ASSEMBLY-CONSOLE	1	
- 6	0511484-2	BRACKET-CONSOLE	1	
- 7	0511798-3	VIBRATION DAMPENER LH	1	
- 8	0511798-4	VIBRATION DAMPENER RH	1	
- 9	0511799-3	GUSSET	1	
-10	0513426-1	SUPPORT-SPEAKER	2	
-11	0511797-1	WINDOW-SKYLIGHT	2	D
	0511797-2	WINDOW-SKYLIGHT BRONZE	2	C
	0411174-3	FRAME-SKYLIGHT WINDOW	2	
	0414014-1	BRACKET-WINDOW TRIM	4	
	0414014-2	BRACKET-WINDOW TRIM	12	
	S1055-1	CHANNEL 45.0 IN LG BULK ITEM REF S1055-1-45.0	2	
-11A	0513399-1	BRACKET-FUEL TUBE	2	C
-12		DELETED-NOT USED		
-13	0511000-75	CAP-FUSELAGE FRONT SPAR	1	
-14	0511000-43	RIB-FUSELAGE FORWARD SECTION LH	1	
	0511000-44	RIB-FUSELAGE FORWARD SECTION RH	1	
-15	SEE FIG 45	BULKHEAD ASSEMBLY-STA. 65.33	1	
-16	0513312-1	RETAINER-WINDSHIELD TOP	1	
-17	0511000-6	FRAME-DOOR UPPER OUTBOARD LH	1	
	0511000-7	FRAME-DOOR UPPER OUTBOARD RH	1	
-18	0511000-22	FRAME-DOOR UPPER INBOARD LH	1	
	0511000-23	FRAME-DOOR UPPER INBOARD RH	1	
-19	0511000-73	GUSSET ASSEMBLY-UPPER REAR DOOR JAMB RH	1	
	0511000-74	GUSSET ASSEMBLY-UPPER REAR DOOR JAMB LH	1	
		ATTACHING PARTS		
	AN525-832R9	SCREW	7	
	AN960-8L	WASHER	7	
	MS21044N08	NUT	7	
		---*---		
	NAS680A4	NUTPLATE	1	
-20	0511116-12	SILL ASSEMBLY-DOOR LOWER LH	1	
-21	0511116-13	SILL ASSEMBLY-DOOR LOWER RH	1	
-22	0511291-2	SUPPORT-LOWER DOOR SILL RH	1	
	0511291-1	SUPPORT-LOWER DOOR SILL LH	1	
	0511480-9	FLOORBOARD ASSY-FUSELAGE CENTER SECTION WEU 0511480-11	1	G
	0511480-11	FLOORBOARD ASSY-FUSELAGE CENTER SECTION	1	F
-23	0511240-11	SEATRAIL-OUTBOARD LH	1	G
	0511243-3	SEATRAIL-OUTBOARD LH	1	F
-24	0511240-12	SEATRAIL-OUTBOARD RH	1	G
	0511243-2	SEATRAIL-OUTBOARD RH	1	F
-25	0511240-15	SEATRAIL-INBOARD LH	1	G
-26	0511240-14	SEATRAIL-INBOARD RH	1	G
-26A	0511243-1	SEATRAIL-INBOARD	2	F
-27	0511480-10	FLOORBOARD-STA 27.41 TO 56.32	1	
-28	0511479-2	FLOORBOARD-CENTER SECTION AFT	1	
		ATTACHING PARTS		
	NAS220-12	SCREW	4	
	AN960-8	WASHER	26	
	MS21044N08	NUT	26	
	NAS220-10	SCREW	8	
	NAS220-9	SCREW	14	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30 -29	0511497-3	BULKHEAD ASSEMBLY-STA 44.00	1	
-30	0511498-1	BRACKET-PULLEY	1	
-31	0511499-1	BRACKET-PULLEY	1	
		ATTACHING PARTS		
-32	AN520-10R6	SCREW	1	
-33	AN960-8	WASHER	1	
-34	MS21044N3	NUT	1	
		---*---		
-35	0510201-5	SKIN-FUSELAGE CENTER SECTION LOWER	1	
-36	S226-3	DOUBLER	2	
-37	NAS395-14-3	NUT	6	
-38	0511254-1	BRACKET-PULLEY	1	
-39	0511295-3	SKIN-LANDING GEAR BULKHEAD	1	
-40	0511486-5	ANGLE	1	
-41	0512058-1	BULKHEAD-LH STA. 27.03 TO STA. 44.0	1	
-42	0512058-2	BULKHEAD-RH STA. 27.03 TO STA. 44.0	1	
-43	0511486-2	ANGLE-RH	1	
	0511486-1	ANGLE-LH	1	
-44	0511292-3	ANGLE	1	
-45	0511150-1	BRACKET-UPHOLSTERY RH	1	
	0511150	BRACKET-UPHOLSTERY LH	1	
-46	S1863-3	NUTPLATE	4	
-47	MS35489-118	GROMMET	2	

A---172 SERIAL 17259224 THRU 17259903
B---F172 SERIAL F17200755 THRU F17200805
C---172 SERIAL 17259904 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
D---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F17200755 THRU F17200804
E---172 SERIAL 17259904 THRU 17260758
F172 SERIAL F17200805 THRU F17200904
F---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234
G---172 SERIAL 17259224 THRU 17260758
F172 SERIAL F17200755 THRU F17200904
H---172 SERIAL 17260759 THRU 17261466
F172 SERIAL F17200905 THRU F17200984
J---172 SERIAL 17261467 THRU 17261898
F172 SERIAL F17200985 THRU F17201034
K---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234

This page intentionally left blank.

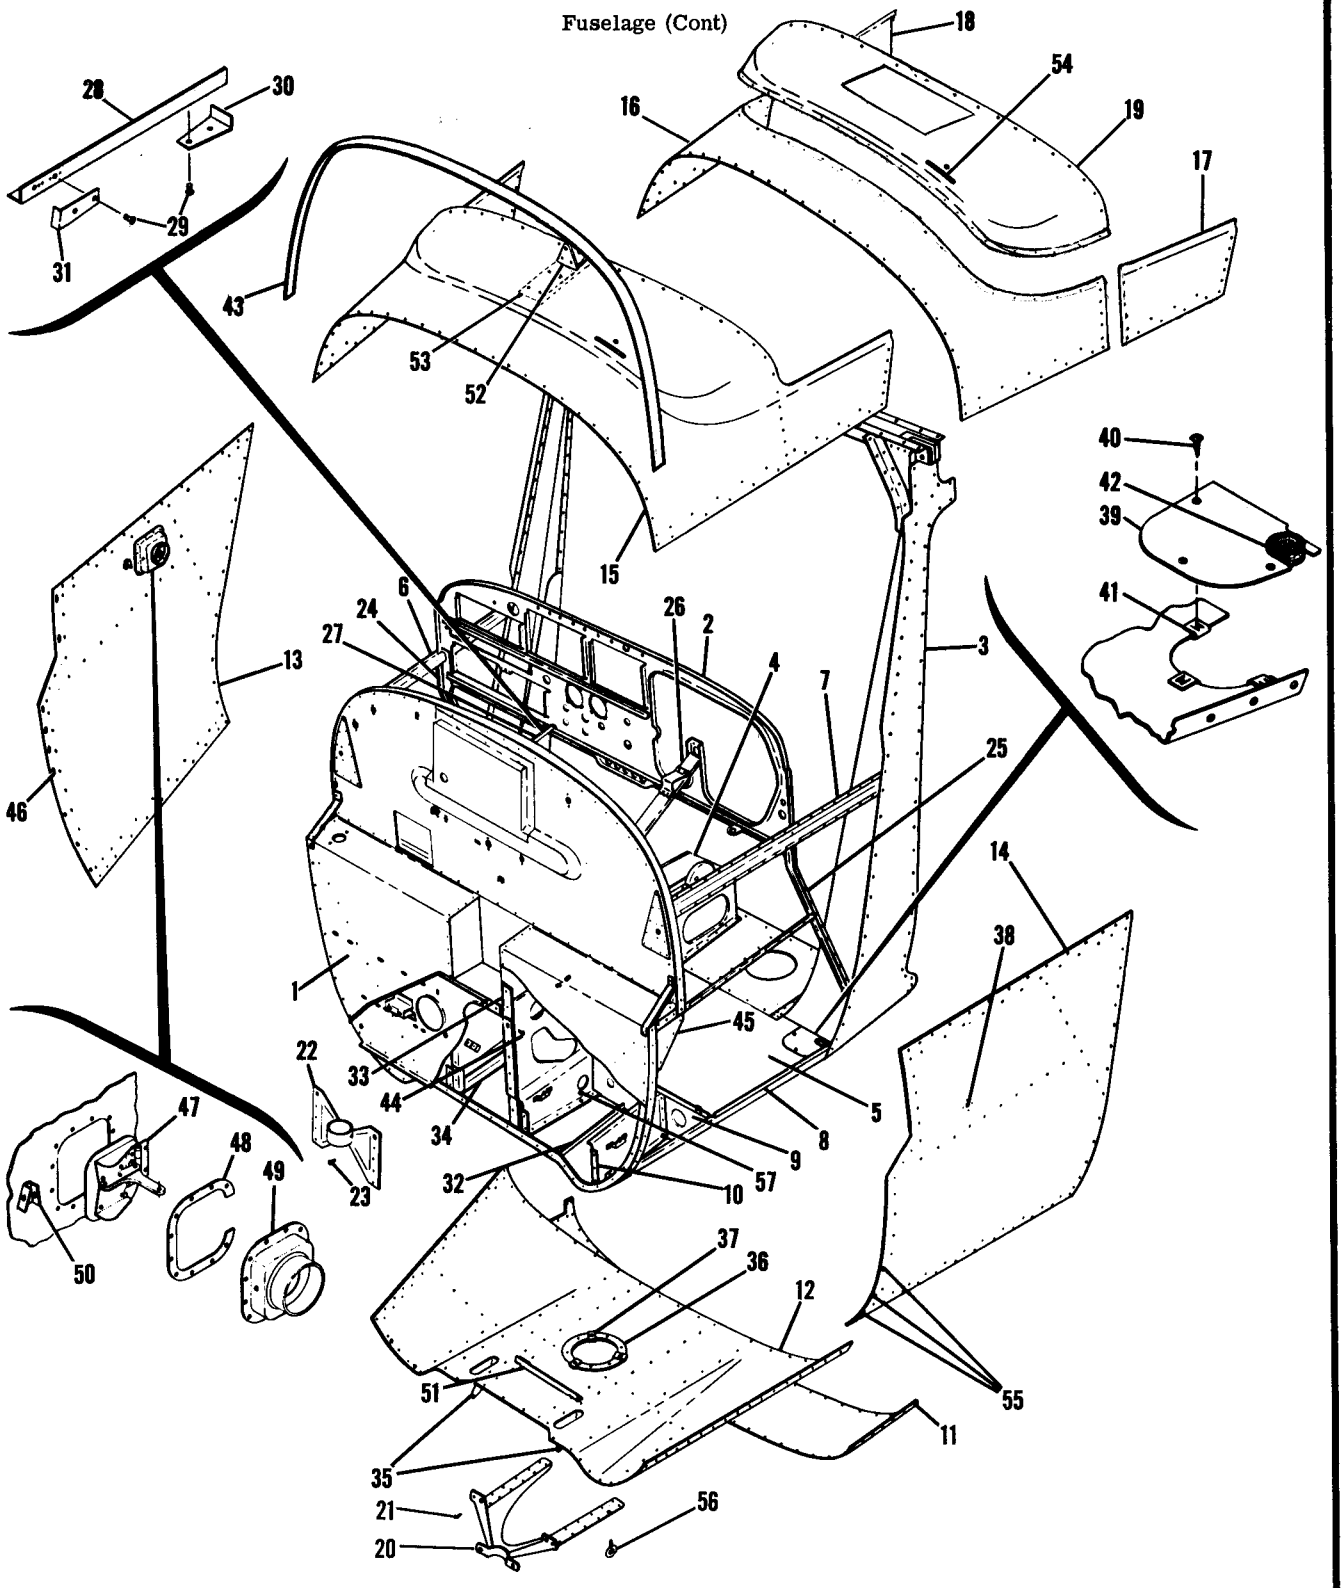

172 SERIAL 17249545 THRU 17251822
P172 SERIAL P17257120 THRU P17257188

Figure 31. Fuselage Front Section Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
31 -	0591302-7	STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	A
	0591302-9	STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	B
	0591303-2	STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	C
- 1	SEE FIG 42	FIREWALL ASSEMBLY	1	A
	SEE FIG 39	FIREWALL ASSEMBLY	1	E
- 2	SEE FIG 99	PANEL ASSEMBLY-STATIONARY	1	B
	SEE FIG 100	PANEL ASSEMBLY-STATIONARY	1	A
	SEE FIG 102	PANEL ASSEMBLY-STATIONARY	1	C
- 3	SEE FIG 34	BULKHEAD ASSEMBLY-FRONT DOORPOST	1	
- 4	SEE FIG 36	TUNNEL ASSEMBLY-FUSELAGE FORWARD	1	
- 5	0513131-1	FLOORBOARD ASSEMBLY-FUSELAGE FRONT SECTION LH	1	
	0513131-2	FLOORBOARD ASSEMBLY-FUSELAGE FRONT SECTION RH	1	D
	0513131-5	FLOORBOARD ASSEMBLY-FUSELAGE FRONT SECTION RH	1	C
- 6	0513132-4	STRINGER ASSEMBLY-ENGINE MOUNT UPPER RH	1	
- 7	0513132-3	STRINGER ASSEMBLY-ENGINE MOUNT UPPER LH	1	
	0513132-11	BRACKET-ENGINE MOUNT ATTACHMENT	1	
- 8	0513132-1	STRINGER ASSEMBLY-ENGINE MOUNT LOWER LH	1	
	0513132-2	STRINGER ASSEMBLY-ENGINE MOUNT LOWER RH	1	
	0513132-9	BRACKET-ENGINE MOUNT ATTACHMENT LH	1	
	0513132-10	BRACKET-ENGINE MOUNT ATTACHMENT RH	1	
- 9	0513053-1	BULKHEAD-FUSELAGE STA. 8.125 LH	1	
	0513053-4	BULKHEAD-FUSELAGE STA. 8.125 RH	1	
-10	0513235-1	BULKHEAD-RUDDER PEDAL OUTBOARD LH	1	
	0513054-4	BULKHEAD-RUDDER PEDAL OUTBOARD RH	1	
-11	0513310-9	SKIN-FRONT SECTION LOWER AFT WHEN EXHAUSTED USE 0513330-9	1	D
	0513330-9	SKIN-FRONT SECTION LOWER AFT	1	C
-12	0513002-5	SKIN-FRONT SECTION LOWER FWD WHEN EXHAUSTED USE 0513330-13	1	A
	0513330-13	SKIN-FRONT SECTION LOWER FWD	1	A
	0513310-2	SKIN-FRONT SECTION LOWER FWD WHEN EXHAUSTED USE 0513330-10	1	B
	0513362-10	SKIN-FRONT SECTION LOWER FWD	1	C
-13	0513310-12	SKIN-FRONT SECTION RH WHEN EXHAUSTED USE 0513330-8	1	B
	0513362-8	SKIN-FRONT SECTION RH	1	C
	0513002-18	SKIN-FRONT SECTION RH WHEN EXHAUSTED USE 0513330-12	1	A
	0513330-12	SKIN-FRONT SECTION RH	1	A
-14	0513310-3	SKIN-FRONT SECTION LH WHEN EXHAUSTED USE 0513330-7	1	B
	0513362-7	SKIN-FRONT SECTION LH	1	C
	0513002-17	SKIN-FRONT SECTION LH WHEN EXHAUSTED USE 0513330-11	1	A
	0513330-11	SKIN-FRONT SECTION LH	1	A
-15	0513002-16	SKIN-FRONT SECTION UPPER	1	A
	0513310-13	SKIN-FRONT SECTION UPPER	1	B
-16	0513362-5	SKIN-FRONT SECTION UPPER	1	C
-17	0513362-3	SKIN-FRONT SECTION UPPER LH	1	C
-18	0513362-4	SKIN-FRONT SECTION UPPER RH	1	C
-19	0513362-6	SKIN-FRONT SECTION UPPER CENTER	1	C
-20	0543016-1	FITTING-NOSE GEAR LOWER	1	
		ATTACHING PARTS		
-21	AN3-5A	BOLT	2	
	MS21044N3	NUT	2	
		---*---		
-22	0543013-1	FITTING-NOSE GEAR UPPER	1	
		ATTACHING PARTS		
-23	AN4-6A	BOLT	2	
	MS21042L4	NUT	2	
		---*---		
-24	0513055-2	BULKHEAD-INSTRUMENT PANEL SUPPORT RH	1	D
	0513325-2	BULKHEAD-INSTRUMENT PANEL SUPPORT RH	1	C
-25	0513055-1	BULKHEAD-INSTRUMENT PANEL SUPPORT LH	1	D
	0513325-1	BULKHEAD-INSTRUMENT PANEL SUPPORT LH	1	C
-26	0513185-1	BRACE ASSEMBLY-STATIONARY INSTRUMENT PANEL LH	1	D
	0513323-1	SUPPORT-PANEL TO FIREWALL LH	1	C
-27	0513152-1	BRACE-STATIONARY INSTRUMENT PANEL RH	1	D


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
31 -28	0513323-2	SUPPORT ASSEMBLY	1	C
		ATTACHING PARTS		
-29	AN515-8R6	SCREW	4	C
		---*---		
	NAS680A08	NUT PLATE	2	
	NAS682A08	NUT PLATE	2	
-30	0513324-1	BRACKET-SUPPORT	1	C
-31	0513324-2	BRACKET-SUPPORT	1	C
-32	0513000-10	ANGLE-BULKHEAD REINFORCEMENT LH	1	
	0513000-9	ANGLE-BULKHEAD REINFORCEMENT RH	1	
-33	0513048-1	ANGLE-LH	1	
	0513048-2	ANGLE-RH	1	
-34	0513038-8	ANGLE-RH	1	
	0513038-7	ANGLE-LH	1	
-35	0543015-6	BOOT-STEERING LINK	2	
	0543026-1	DOUBLER-STEERING LINK	2	
-36	S237-2	DOUBLER	1	
-37	NAS395-14-3	NUT	3	
-38	S347-1	FLANGE-STATIC SOURCE	1	E
	S1141-2	WASHER-STATIC SOURCE FLANGE	1	B
	S1141-1	WASHER-STATIC SOURCE FLANGE	1	C
-39	0713002-3	COVER-WIRE HARNESS ACCESS	1	D
	0713002-3	COVER-WIRE HARNESS ACCESS	2	C
		ATTACHING PARTS		
-40	S1021-6-4	SCREW	3	D
	S1021-6-4	SCREW	6	C
-41	NAS395-3-3	NUT	3	D
	NAS395-3-3	NUT	6	C
		---*---		
-42	MS35489-20	GROMMET	1	D
	MS35489-20	GROMMET	2	C
-43	0513002-6	STRIP-ASBESTOS	1	A
-44	AN3-4A	BOLT	2	
	MS21044N3	NUT	2	
-45	0513137-1	GUSSET-LH	1	
	0513137-2	GUSSET-RH	1	
-46	S1863-3A	NUT	21	E
	S1863-3	NUT	4	C
	S1862-2	NUT	2	C
-47	0713135-2	DOOR ASSEMBLY-OUTSIDE AIR	1	
-48	0713140-1	SEAL	1	
-49	0713139-1	INLET-AIR	1	
-50	0450286	CLIP	1	
-51	0513001-11	ANGLE WHEN EXHAUSTED USE 0513322-1	1	D
	0513322-1	ANGLE	1	C
-52	0413204-2	BRACKET-COMPASS MOUNTING	1	D
	0413204-3	BRACKET-COMPASS MOUNTING	1	C
-53	0513310-14	STIFFENER-BRACKET	1	D
	0513326-1	STIFFENER-BRACKET	1	C
-54	0513345-1	NOZZLE ASSEMBLY	1	C
-55	0513157-1	SNUBBER	10	A
-56	0422344	EYEBOLT-MOORING	1	
		ATTACHING PARTS		
-57	MS21042L5	NUT	1	
		---*---		

A---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
C---172 SERIAL 17250573 THRU 17251822
F172 SERIAL F172-0019 THRU F172-0085
D---172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
E---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085

This page intentionally left blank.

Fuselage (Cont)

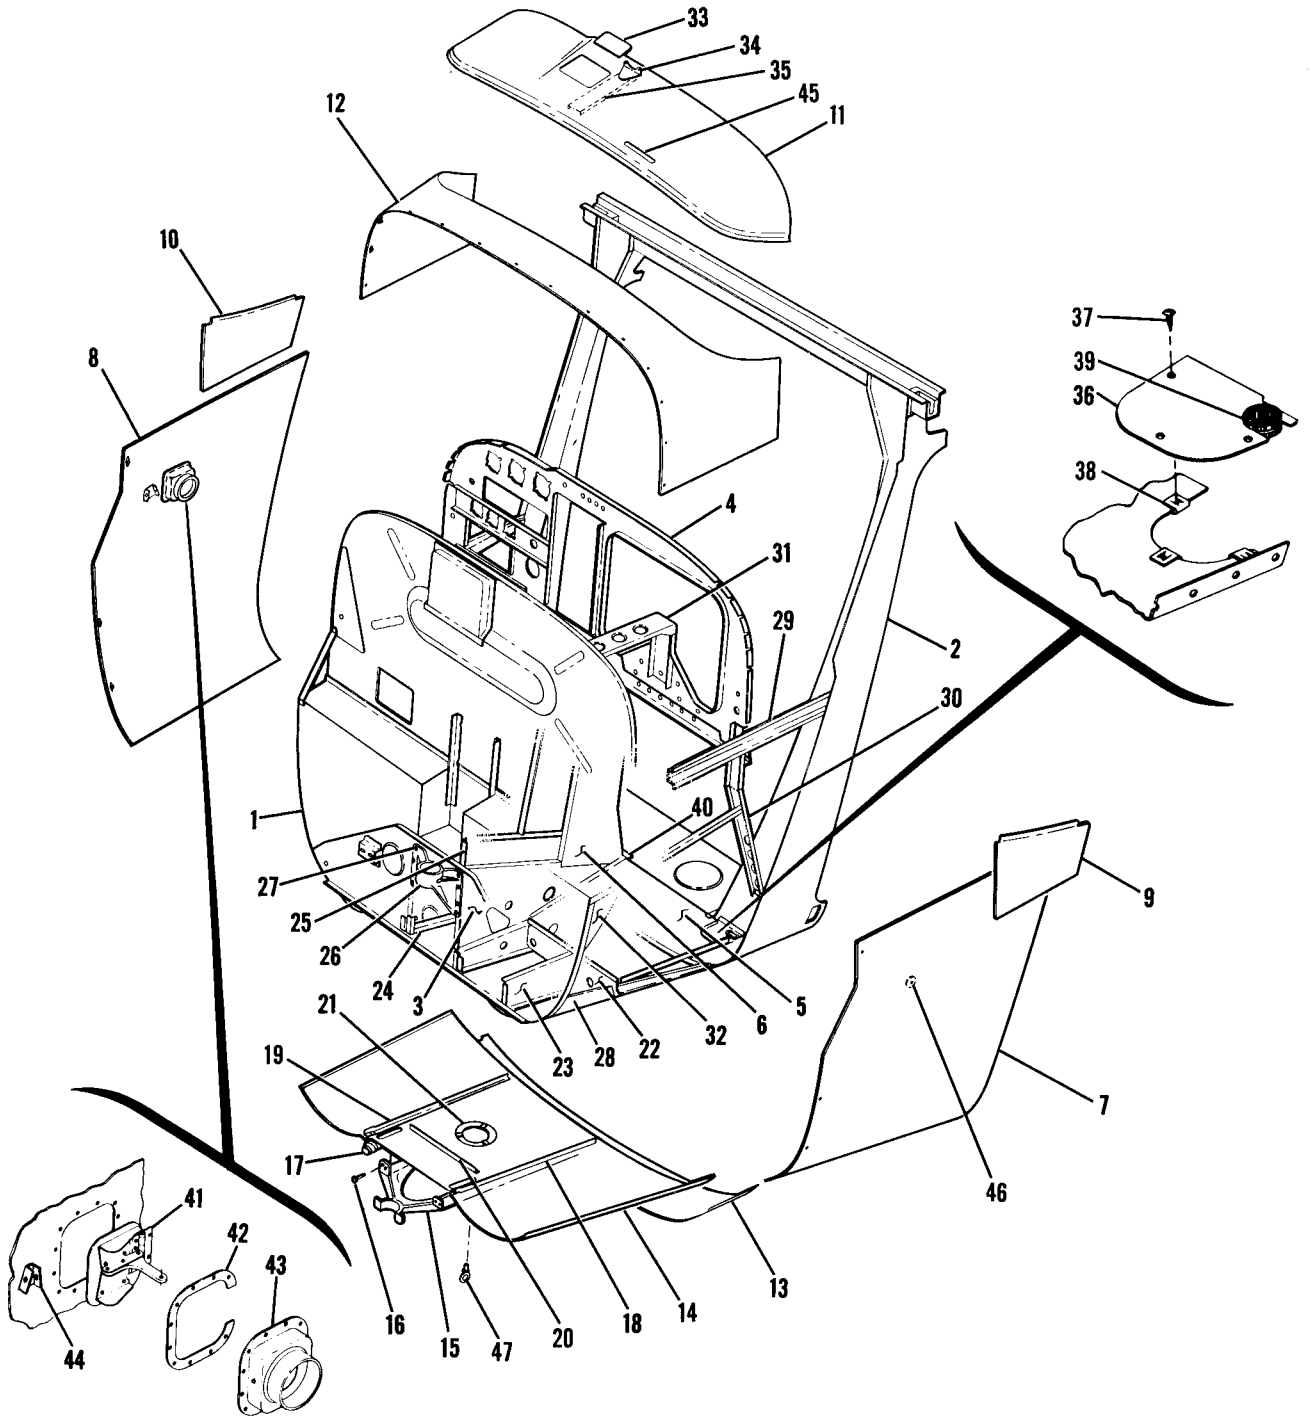


172 SERIAL 17251823 THRU 17254892

Figure 32. Fuselage Front Section Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
32 -	0591304-1	STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	A
- 1	SEE FIG 39	FIREWALL ASSEMBLY	1	
- 2	SEE FIG 35	BULKHEAD ASSEMBLY-FRONT DOORPOST	1	
- 3	SEE FIG 37	TUNNEL COMPONENTS-FRONT SECTION	1	
- 4	SEE FIG 102	PANEL ASSEMBLY-STATIONARY	1	
- 5	0513375-1	FLOORBOARD ASSEMBLY-LH	1	
	0513375-2	FLOORBOARD ASSEMBLY-RH	1	
- 6	SEE FIG 38	CONSOLE STRUCTURE ASSEMBLY	1	
- 7	0513362-7	SKIN-FRONT SECTION LH	1	
- 8	0513362-8	SKIN-FRONT SECTION RH	1	
- 9	0513362-3	SKIN-UPPER SIDE LH	1	
-10	0513362-4	SKIN-UPPER SIDE RH	1	
-11	0513362-6	SKIN-UPPER	1	
-12	0513362-5	SKIN-UPPER	1	
-13	0513362-9	SKIN-LOWER AFT	1	
-14	0513362-10	SKIN-LOWER FWD	1	
-15	0543016-1	FITTING-NOSE GEAR LOWER	1	
		ATTACHING PARTS		
-16	AN3-5A	BOLT	2	
	MS21044N3	NUT	2	
		---*---		
-17	0543015-6	BOOT-STEERING LINK	2	
	0543026-1	DOUBLER-STEERING LINK BOOT	2	
-18	0513000-10	ANGLE-BULKHEAD REINFORCEMENT LH	1	
-19	0513000-9	ANGLE-BULKHEAD REINFORCEMENT RH	1	
-20	0513322-1	ANGLE-REINFORCEMENT	1	
-21	S237-2	DOUBLER	1	
	NAS395-14-3	NUT	3	
-22	0513053-1	BULKHEAD-FUSELAGE STA 8.125 LH	1	
	0513053-4	BULKHEAD-FUSELAGE STA 8.125 RH	1	
-23	0513235-1	BULKHEAD-RUDDER PEDAL OUTBOARD LH	1	
	0513054-4	BULKHEAD-RUDDER PEDAL OUTBOARD RH	1	
-24	0513038-8	ANGLE-RH	1	
	0513038-7	ANGLE-LH	1	
-25	0513369-1	ANGLE-LH	1	
	0513369-2	ANGLE-RH	1	
-26	0543013-1	FITTING-NOSE GEAR UPPER	1	
		ATTACHING PARTS		
-27	NAS144-17	BOLT	2	
	MS21042L4	NUT	2	
		---*---		
-28	0513132-1	STRINGER ASSEMBLY-ENGINE MOUNT LOWER LH	1	
	0513132-2	STRINGER ASSEMBLY-ENGINE MOUNT LOWER RH	1	
-29	0513132-3	STRINGER ASSEMBLY-ENGINE MOUNT UPPER LH	1	
	0513132-4	STRINGER ASSEMBLY-ENGINE MOUNT UPPER RH	1	
-30	0513325-1	BULKHEAD-LH	1	
	0513325-2	BULKHEAD-RH	1	
-31	0513323-1	SUPPORT-INSTRUMENT PANEL	1	
-32	0513137-1	GUSSET-LH	1	
	0513137-2	GUSSET-RH	1	
-33	0513379-1	PLATE	1	
-34	0413204-3	BRACKET-COMPASS	1	
-35	0513326-1	STIFFENER	1	
-36	0713002-3	COVER	2	
		ATTACHING PARTS		
-37	S1021Z6-4	SCREW	3	
-38	NAS395-3-3	NUT	3	
		---*---		
-39	MS35489-205	GROMMET	2	
-40	0513378-1	SHEAR PLATE	1	
-41	0713135-2	DOOR ASSEMBLY-OUTSIDE AIR	1	
-42	0713140-1	SEAL	1	
-43	0713139-1	INLET ASSEMBLY	1	
-44	0450286	CLIP	1	
-45	0513386-1	NOZZLE ASSEMBLY	1	
-46	S347-1	FLANGE	1	
	S1141-1	WASHER	1	
-47	0422344	EYEBOLT-MOORING	1	
		ATTACHING PARTS		
	MS21042L5	NUT	1	
		---*---		

A---172 SERIAL 17251823 THRU 17254892
F172 SERIAL F172-0086 THRU F172-0319

Fuselage (Cont)

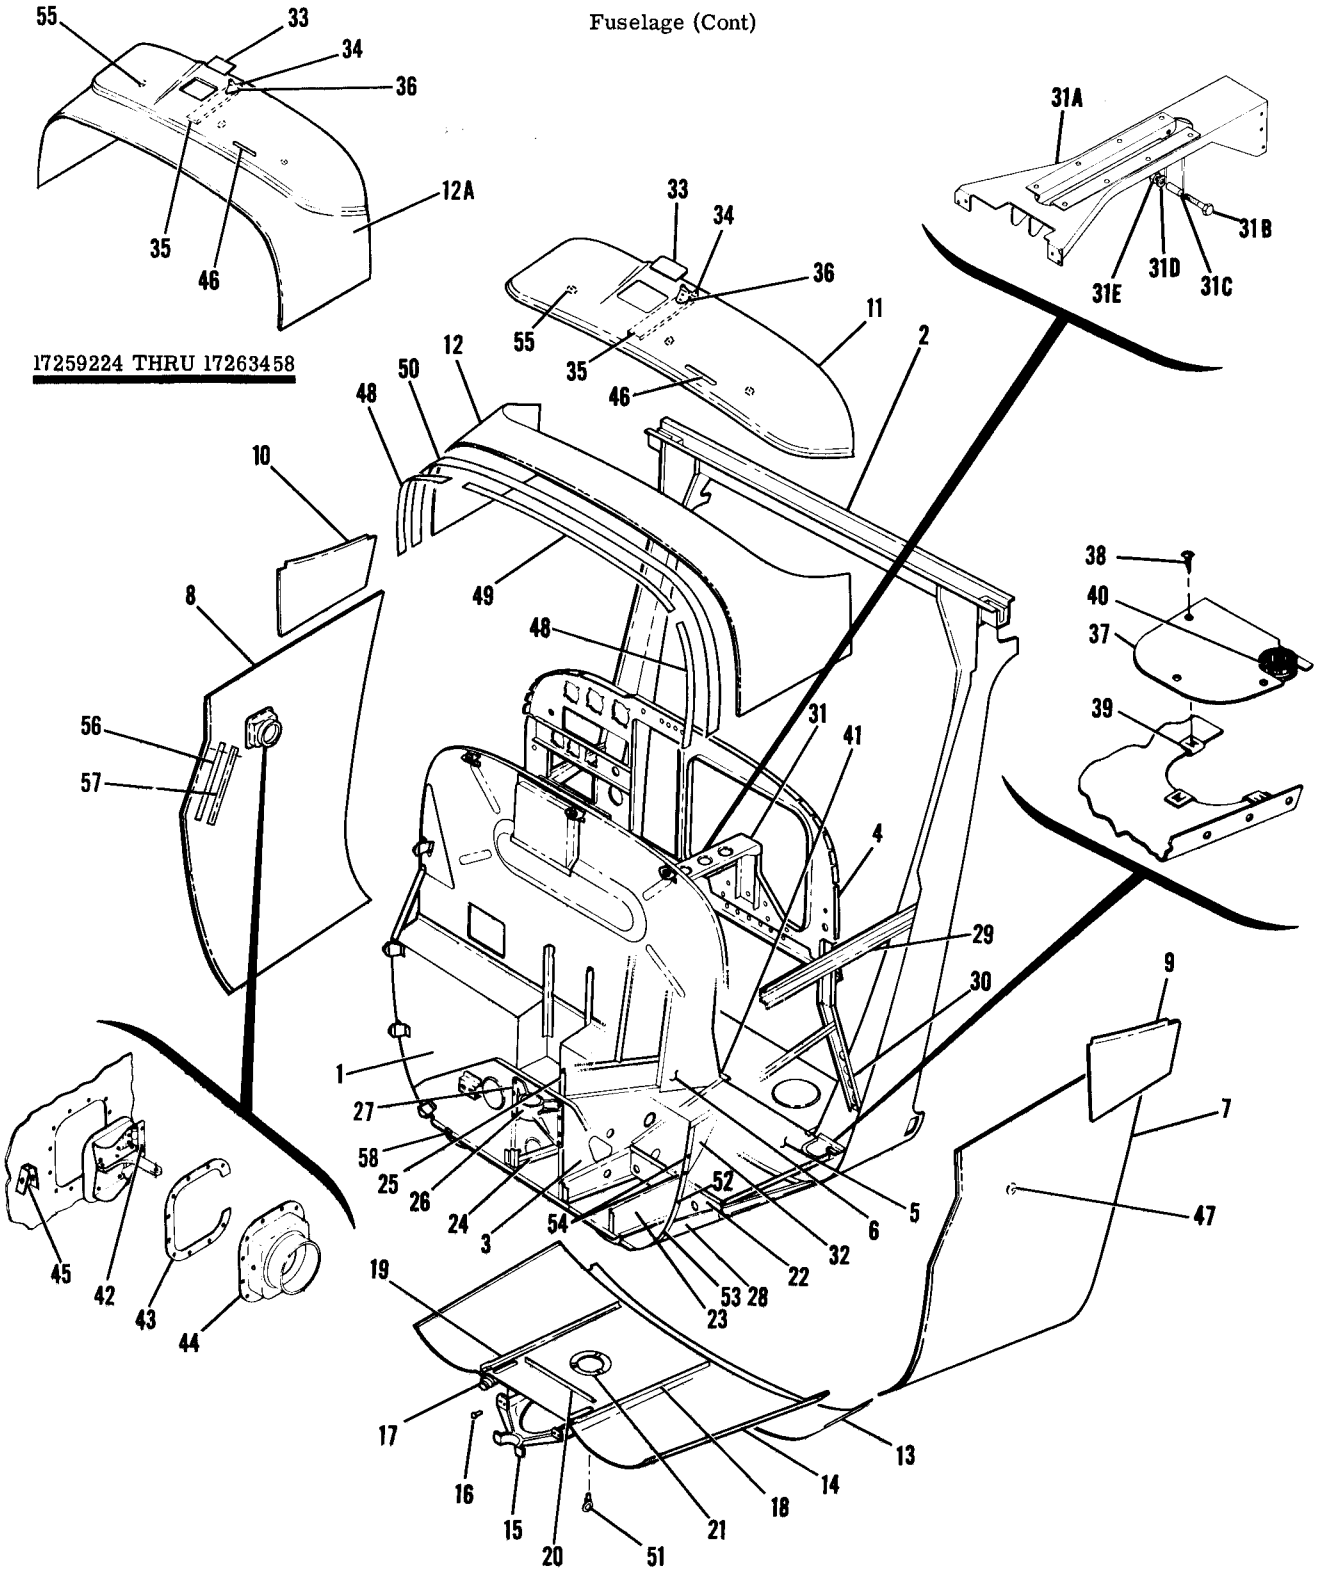

172 SERIAL 17254893 THRU 17263458

Figure 33. Fuselage Front Section Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
33 -	0591304-3		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	C
	0591304-6		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	D
	0591304-5		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	B
	0591304-8		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	H
	0591304-9		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	J
	0591304-11		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	R
	0591304-12		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	M
	0591304-13		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	S
	0591304-14		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	Y
	0591304-15		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	Z
	0591304-16		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	AA
- 1	SEE FIG 40		FIREWALL ASSEMBLY	1	A
	SEE FIG 41		FIREWALL ASSEMBLY	1	B
- 2	SEE FIG 35		BULKHEAD ASSEMBLY-FRONT DOORPOST	1	
- 3	SEE FIG 37		TUNNEL COMPONENTS-FRONT SECTION	1	
- 4	SEE FIG 103		PANEL ASSEMBLY-STATIONARY	1	C
	SEE FIG 104		PANEL ASSEMBLY-STATIONARY	1	N
	SEE FIG 105		PANEL ASSEMBLY-STATIONARY	1	AB
	SEE FIG 106		PANEL ASSEMBLY-STATIONARY	1	AA
- 5	0513375-1		FLOORBOARD ASSEMBLY-LH	1	
	0513375-2		FLOORBOARD ASSEMBLY-RH	1	
- 6	SEE FIG 38		CONSOLE STRUCTURE ASSEMBLY	1	
- 7	0513362-13		SKIN-FRONT SECTION LH WHEN EXHAUSTED USE 0513362-25	1	F
	0513362-25		SKIN-FRONT SECTION LH	1	G
- 8	0513362-14		SKIN-FRONT SECTION RH	1	
- 9	0513362-3		SKIN-UPPER SIDE LH	1	
-10	0513362-4		SKIN-UPPER SIDE RH	1	
-11	0513362-6		SKIN-UPPER	1	K
-12	0513362-12		SKIN-UPPER	1	K
-12A	0513362-38		SKIN-DECK	1	L
-13	0513362-9		SKIN-LOWER AFT	1	
-14	0513362-15		SKIN-LOWER FWD	1	
-15	0543016-1		FITTING-NOSE GEAR LOWER	1	
			ATTACHING PARTS		
-16	AN3-5A		BOLT	2	
	MS21044N3		NUT	2	
			---*---		
-17	0543015-6		BOOT-STEERING LINK	2	
	0543026-1		DOUBLER-STEERING LINK BOOT	2	
-18	0513000-10		ANGLE-BULKHEAD REINFORCEMENT LH	1	
-19	0513000-9		ANGLE-BULKHEAD REINFORCEMENT RH	1	
-20	0513322-1		ANGLE-REINFORCEMENT	1	
-21	S327-2		DOUBLER	1	
	NAS395-14-3		NUT	3	
-22	0513053-1		BULKHEAD-FUSELAGE STA 8.125 LH	1	
	0513053-4		BULKHEAD-FUSELAGE STA 8.125 RH	1	
-23	0513235-1		BULKHEAD-RUDDER PEDAL OUTBOARD LH	1	
	0513054-4		BULKHEAD-RUDDER PEDAL OUTBOARD RH	1	
-24	0513038-8		ANGLE-RH	1	
	0513038-7		ANGLE-LH	1	
-25	0513369-1		ANGLE-LH	1	
	0513369-2		ANGLE-RH	1	
-26	0543013-1		FITTING-NOSE GEAR UPPER	1	
			ATTACHING PARTS		
-27	NAS144-17		BOLT	2	
	MS21042L4		NUT	2	
			---*---		
-28	0513132-1		STRINGER ASSEMBLY-ENGINE MOUNT LOWER LH	1	
	0513132-2		STRINGER ASSEMBLY-ENGINE MOUNT LOWER RH	1	
-29	0513132-3		STRINGER ASSEMBLY-ENGINE MOUNT UPPER LH	1	
	0513132-4		STRINGER ASSEMBLY-ENGINE MOUNT UPPER RH	1	
-30	0513325-1		BULKHEAD-LH	1	K
	0513325-3		BULKHEAD-LH	1	P
	0513325-2		BULKHEAD-RH	1	K
	0513325-4		BULKHEAD-RH	1	P
-31	0513323-1		SUPPORT-INSTRUMENT PANEL	1	C
-31A	0513411-1	*	SUPPORT ASSEMBLY	1	E
-31B	AN3-11A		BOLT	1	
-31C	NAS43HT3-42A		SPACER	1	
-31D	AN960-10		WASHER	1	
-31E	MS21044N3		NUT	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
33 -32	0513137-1	GUSSET-LH	1	
	0513137-2	GUSSET-RH	1	
-33	0513379-1	PLATE	1	
-34	0413204-3	BRACKET-COMPASS	1	W
	0513264-1	BRACKET-COMPASS	1	V
		ATTACHING PARTS		
	AN515B6R8	SCREW	3	
		---*---		
-35	0513326-2	STIFFENER	1	
-36	NAS698A06L	NUTPLATE	2	
	NAS680A06	NUTPLATE	1	
-37	0713002-3	COVER	2	
		ATTACHING PARTS		
-38	S1021Z6-4	SCREW	3	
-39	NAS395-3-3	NUT	3	
		---*---		
-40	MS35489-205	GROMMET	2	
-41	0513378-1	SHEAR PLATE	1	
-42	0713135-2	DOOR ASSEMBLY-OUTSIDE AIR	1	
-43	0713140-1	SEAL	1	
-44	0713139-1	INLET ASSEMBLY	1	
-45	0450286	CLIP	1	
-46	0513386-1	NOZZLE ASSEMBLY	1	
-47	S347-1	FLANGE WHEN EXHAUSTED USE S1776-3	1	F
	S1776-3	BUTTON-STATIC SOURCE	1	X
	S1776-1	BUTTON-STATIC SOURCE	1	V
-48	0513362-18	STRIP-RETAINER	2	T
	0513362-18	STRIP-RETAINER LH	1	U
	0513362-31	STRIP-RETAINER RH	1	U
-49	0513362-19	STRIP-RETAINER	1	
-50	0513362-17	GUARD	1	T
	0513362-30	SEAL	1	U
-51	0422344	EYEBOLT-MOORING	1	
		ATTACHING PARTS		
	MS21042L5	NUT	1	
		---*---		
-52	S1862-2	NUTPLATE	2	
-53	S1863-3	NUTPLATE	4	
-54	S1863-3A	NUTPLATE	21	
-55	S1590-4A	BAND	1	
-56	0513362-32	SEAL RH ONLY	1	U
-57	0513362-33	SEAL RH ONLY	1	U
-58	NAS680A08	NUTPLATE	1	AC
	AN515-8R7	SCREW	1	AC


NOTE. *THIS PART INSTALLED ONLY ON AIRCRAFT HAVING NAV-O-MATIC SYSTEMS-SERIAL 17256513 THRU 17256649, ALL AIRCRAFT SERIAL 17256650 THRU 17263458 HAD THIS INSTALLED.

A---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200804
B---172 SERIAL 17256513 THRU 17258486
C---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F172-0559
D---F172 SERIAL F172-0560 THRU F172-0654
E---172 SERIAL 17256513 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
F---172 SERIAL 17254893 THRU 17258117
F172 SERIAL F172-0320 THRU F17200739
G---172 SERIAL 17258118 THRU 17263458
F172 SERIAL F17200740 THRU F17201234
H---F172 SERIAL F17200655 THRU F17200754
J---172 SERIAL 17258487 THRU 17259223
K---172 SERIAL 17254893 THRU 17259223
F172 SERIAL F172-0320 THRU F17200754
L---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234
M---F172 SERIAL F17200755 THRU F17200804

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
33 -		N---172 SERIAL 17256513 THRU 17259223 F172 SERIAL F172-0560 THRU F17200754 P---172 SERIAL 17259224 THRU 17263458 F172 SERIAL F17200755 THRU F17201234 R---172 SERIAL 17259224 THRU 17259903 S---172 SERIAL 17259904 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 T---172 SERIAL 17254893 THRU 17260251 F172 SERIAL F172-0320 THRU F17200879 U---172 SERIAL 17260252 THRU 17263458 F172 SERIAL F17200880 THRU F17201234 V---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200905 THRU F17201234 W---172 SERIAL 17254893 THRU 17260758 F172 SERIAL F172-0320 THRU F17200904 X---172 SERIAL 17258118 THRU 17260758 F172 SERIAL F17200740 THRU F17200904 Y---172 SERIAL 17260759 THRU 17261466 F172 SERIAL F17200905 THRU F17200984 Z---172 SERIAL 17261467 THRU 17261898 F172 SERIAL F17200985 THRU F17201034 AA---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234 AB---172 SERIAL 17259224 THRU 17261898 F172 SERIAL F17200755 THRU F17201034 AC---172 SERIAL 17262873 THRU 17263458		

Fuselage (Cont)

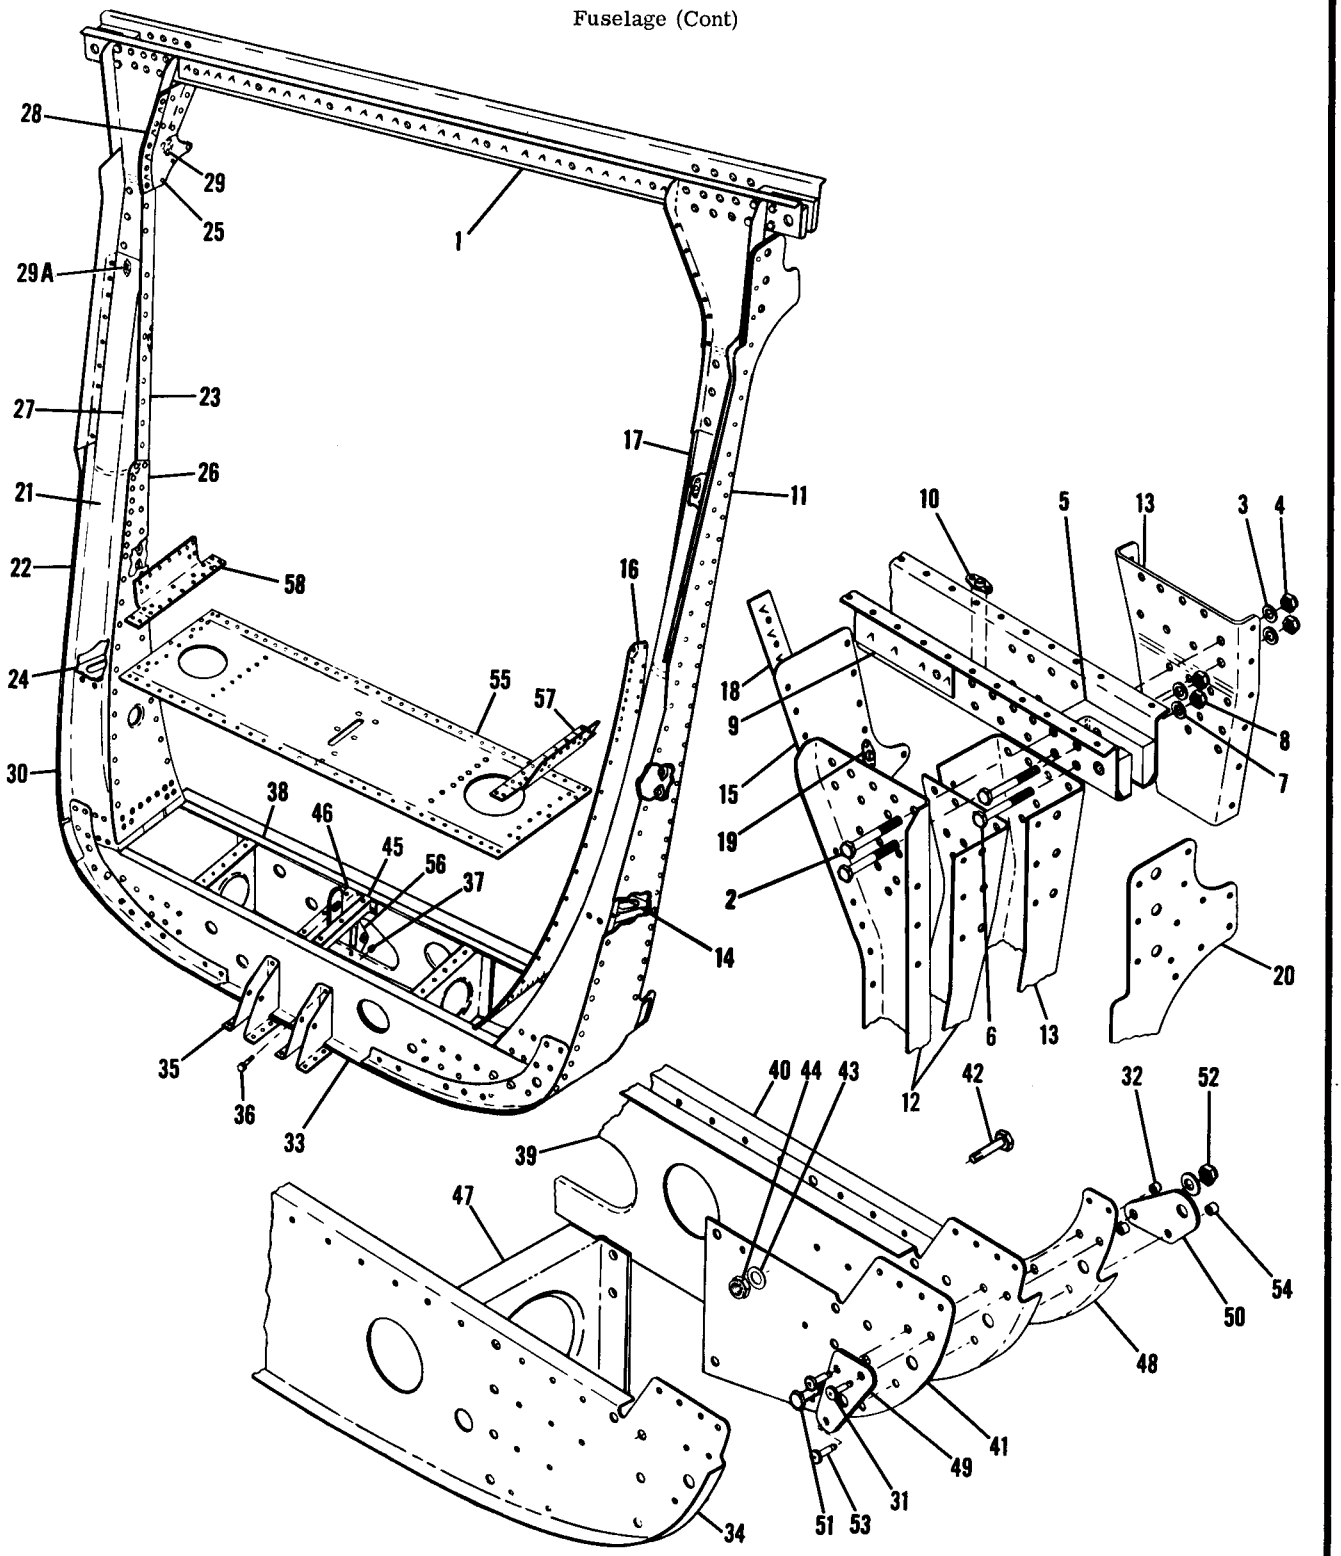


172 SERIAL 17249545 THRU 17251822
P172 SERIAL P17257120 THRU P17257188

Figure 34. Front Doorpost Bulkhead Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
34 -	0591301-17	BULKHEAD ASSEMBLY-FRONT DOORPOST	1	A
- 1	0511162-5	SPAR ASSEMBLY-FUSELAGE CENTER SECTION FORWARD	1	
		ATTACHING PARTS		
- 2	AN3-21A	BOLT	4	
- 3	AN960-10	WASHER	4	
- 4	MS21044N3	NUT	4	
		---*---		
- 5	0411129	BLOCK-FUSELAGE SPAR BEARING	2	
		ATTACHING PARTS		
- 6	AN3-20A	BOLT	2	
- 7	AN960-10	WASHER	2	
- 8	MS21044N3	NUT	2	
		---*---		
- 9	0412496	RETAINER-UPHOLSTERY	1	
-10	NAS680A3	NUTPLATE	4	
-11	0513007-5	DOORPOST ASSEMBLY-FUSELAGE LH	1	
-12	0513006-44	BULKHEAD ASSEMBLY-DOORPOST FORWARD LH	1	
-13	0513006-110	BULKHEAD ASSEMBLY-DOORPOST AFT LH	1	
-14	0713496-3	BRACKET-STIFFENER LH	1	
-15	0513006-42	REINFORCEMENT-DOORPOST INBOARD LH	1	
-16	0513006-8	PLATE-DOORPOST SPLICE LH	1	
-17	0713248-3	RETAINER-WINDSHIELD LH	1	
-18	0513006-25	RETAINER-HEADLINING LH	1	
-19	NAS680A3	NUTPLATE	1	
-20	0513007-3	SKIN-DOORPOST OUTER LH	1	
-21	0513007-6	DOORPOST ASSEMBLY-FUSELAGE RH	1	
-22	0513006-45	BULKHEAD ASSEMBLY-DOORPOST FORWARD RH	1	
-23	0513006-111	BULKHEAD ASSEMBLY-DOORPOST AFT RH	1	
-24	0713496-4	BRACKET-STIFFENER RH	1	
-25	0513006-43	REINFORCEMENT-DOORPOST UPPER INBOARD RH	1	
-26	0513006-22	PLATE-DOORPOST SPLICE RH	1	
-27	0713248-4	RETAINER-WINDSHIELD RH	1	
-28	0513006-26	RETAINER-HEADLINING RH	1	
-29	NAS680A3	NUTPLATE	1	
-29A	S1863-3	NUT PLATE	1	
-30	0513007-4	SKIN-DOORPOST OUTER RH	1	
	0513007-25	BULKHEAD ASSEMBLY-LOWER	1	
-31	NAS178-8-7	RIVET-HI SHEAR	4	
-32	NAS179-8	COLLAR	4	
-33	0513007-9	BULKHEAD ASSEMBLY-FORWARD	1	
-34	0513006-9	BULKHEAD-FORWARD	1	
-35	0510110	BRACKET-CONTROL PULLEY	2	
		ATTACHING PARTS		
-36	AN3-4A	BOLT	1	
-37	MS21044N3	NUT	1	
		---*---		
-38	0513007-10	BULKHEAD ASSEMBLY-AFT	1	
-39	0513006-103	BULKHEAD-AFT	1	
-40	0513006-24	ANGLE-AFT BULKHEAD REINFORCEMENT	1	
-41	0713495-13	PLATE-AFT BULKHEAD REINFORCEMENT LH	1	
	0713495-14	PLATE-AFT BULKHEAD REINFORCEMENT RH	1	
-42	AN3-5A	BOLT	2	
-43	AN960-10	WASHER	2	
-44	MS21044N3	NUT	2	
-45	0510112	BRACKET-ELEVATOR BELLCRANK LH	1	
-46	0510112-1	BRACKET-ELEVATOR BELLCRANK RH	1	
-47	0713054-1	BULKHEAD-LH	1	
	0713054-2	BULKHEAD-RH	1	
-48	0713495-9	STIFFENER-BULKHEAD AFT LH	1	
	0713495-10	STIFFENER-BULKHEAD AFT RH	1	
-49	0713495-55	SPACER	4	
-50	0713495-17	PLATE	2	
-51	AN6-6A	BOLT	2	
-52	MS21042L6	NUT	2	
-53	NAS178-8-7	RIVET-HI SHEAR	2	
-54	NAS179-8	COLLAR	2	
-55	0511487-1	SHEET-FLOORBOARD	1	
-56	0510163	BRACKET	1	
		ATTACHING PARTS		
	AN520-10R7	SCREW	1	
		---*---		
-57	0713495-53	STIFFENER-LH	1	
-58	0713495-54	STIFFENER-RH	1	
		A---172 SERIAL 17249545 THRU 17251822 P172 SERIAL P17257120 THRU P17257188 F172 SERIAL F172-0001 THRU F172-0085 FP172 SERIAL FP172-0001 THRU FP172-0003		

Fuselage (Cont)

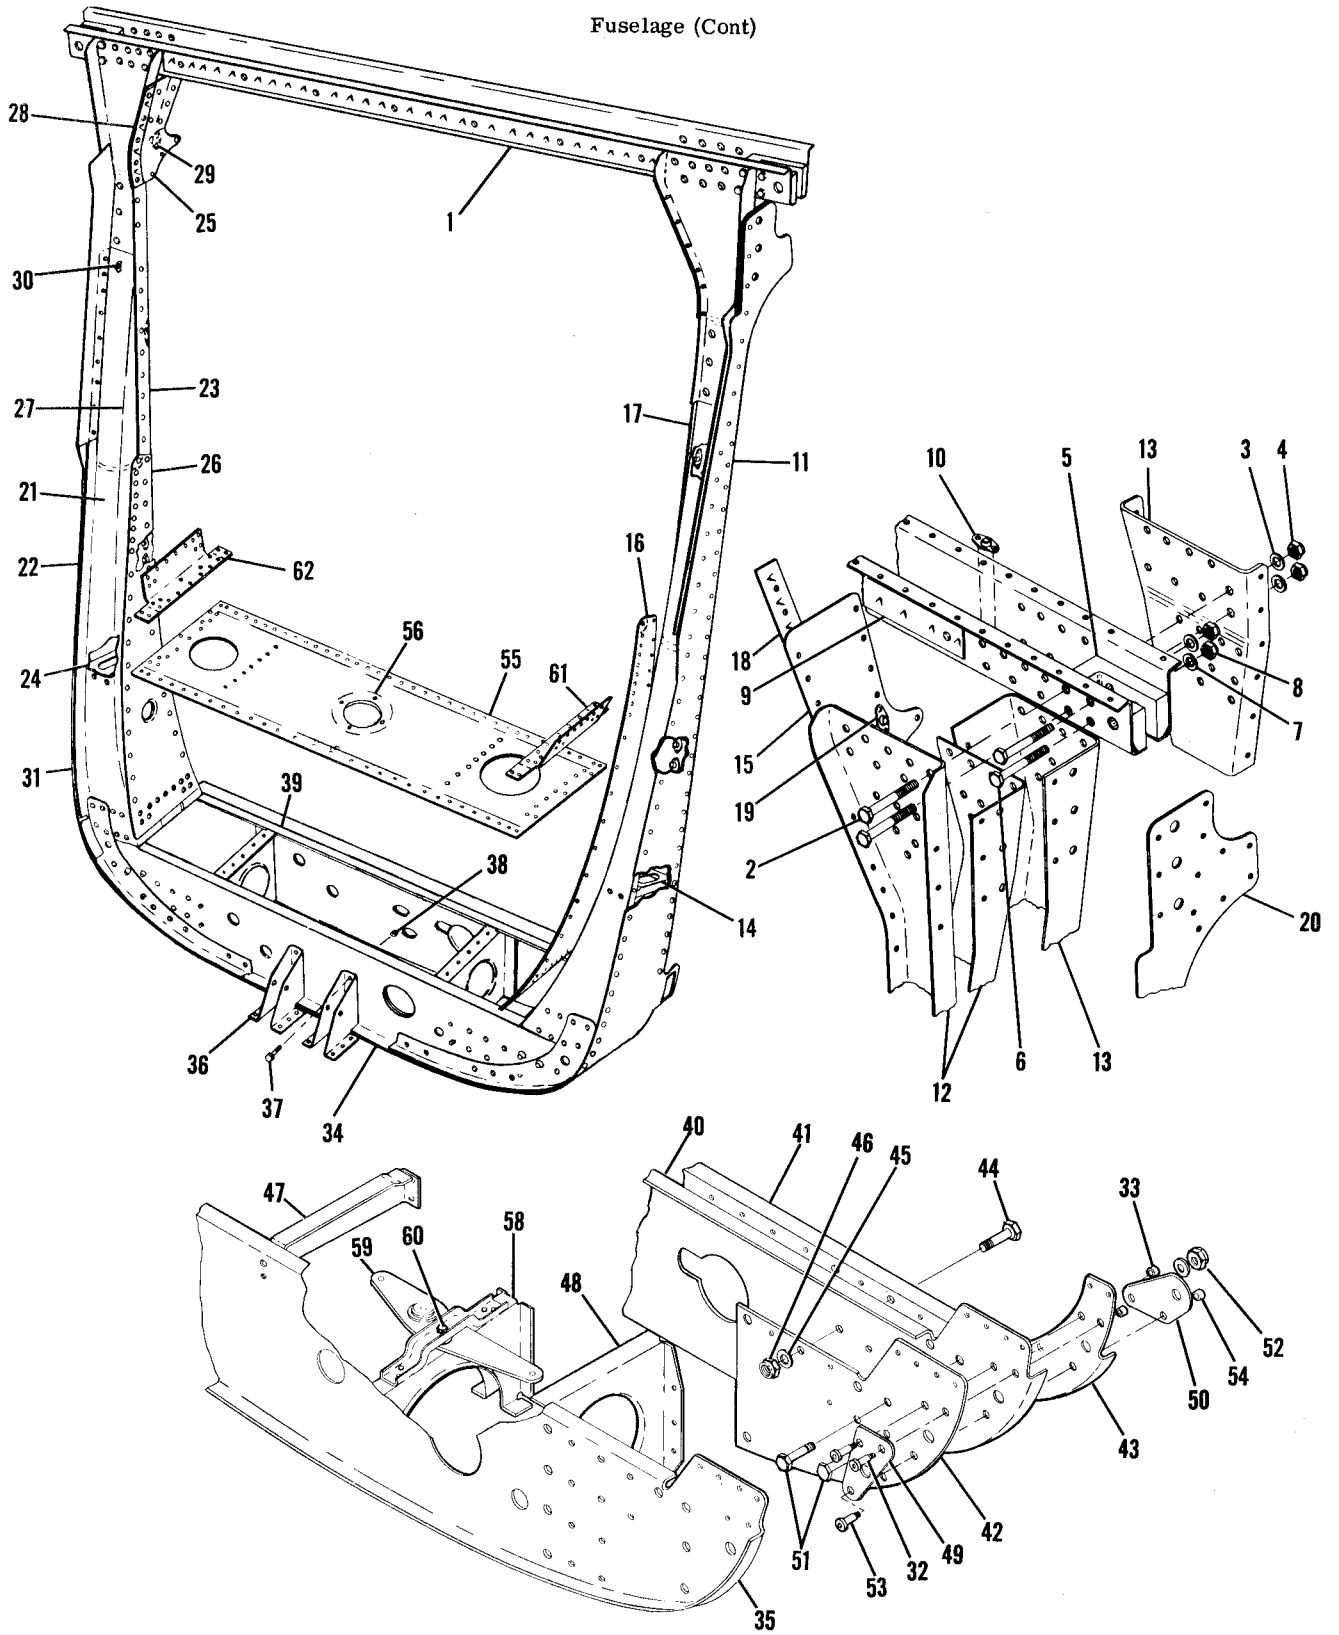

172 SERIAL 17251823 THRU 17263458


Figure 35. Front Doorpost Bulkhead Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
35 -	0513373-1	BULKHEAD ASSEMBLY-FRONT DOORPOST	1	A
	0513373-7	BULKHEAD ASSEMBLY-FRONT DOORPOST	1	C
	0513373-9	BULKHEAD ASSEMBLY-FRONT DOORPOST	1	E
- 1	0511162-5	SPAR ASSEMBLY-FUSELAGE CENTER SECTION FORWARD	1	D
	0511162-9	SPAR ASSEMBLY-FUSELAGE CENTER SECTION FORWARD	1	E
		ATTACHING PARTS		
- 2	AN3-21A	BOLT	4	
- 3	AN960-10	WASHER	4	
- 4	MS21044N3	NUT	4	
		---*---		
- 5	0411129	BLOCK-FUSELAGE SPAR BEARING	2	
		ATTACHING PARTS		
- 6	AN3-20A	BOLT	2	
- 7	AN960-10	WASHER	2	
- 8	MS21044N3	NUT	2	
		---*---		
- 9	0412496	RETAINER-UPHOLSTERY	1	
-10	NAS680A3	NUTPLATE	4	
-11	0513007-5	DOORPOST ASSEMBLY-FUSELAGE LH	1	
-12	0513006-44	BULKHEAD ASSEMBLY-DOORPOST FORWARD LH	1	
-13	0513006-110	BULKHEAD ASSEMBLY-DOORPOST AFT LH	1	
-14	0713496-3	BRACKET-STIFFENER LH	1	
-15	0513006-42	REINFORCEMENT-DOORPOST INBOARD LH	1	
-16	0513006-8	PLATE-DOORPOST SPLICE LH	1	
-17	0713248-3	RETAINER-WINDSHIELD LH	1	
-18	0513006-25	RETAINER-HEADLINING LH	1	
-19	NAS680A3	NUTPLATE	1	
-20	0513007-3	SKIN-DOORPOST OUTER LH	1	
-21	0513007-6	DOORPOST ASSEMBLY-FUSELAGE RH	1	
-22	0513006-45	BULKHEAD ASSEMBLY-DOORPOST FORWARD RH	1	
-23	0513006-111	BULKHEAD ASSEMBLY-DOORPOST AFT RH	1	
-24	0713496-4	BRACKET-STIFFENER RH	1	
-25	0513006-43	REINFORCEMENT-DOORPOST UPPER INBOARD RH	1	
-26	0513006-22	PLATE-DOORPOST SPLICE RH	1	
-27	0713248-4	RETAINER-WINDSHIELD RH	1	
-28	0513006-26	RETAINER-HEADLINING RH	1	
-29	NAS680A3	NUTPLATE	1	
-30	S1863-3	NUTPLATE TIN	1	
-31	0513007-4	SKIN-DOORPOST OUTER RH	1	
	0513373-4	BULKHEAD ASSEMBLY-LOWER	1	A
	0513373-8	BULKHEAD ASSEMBLY-LOWER	1	B
		ATTACHING PARTS		
-32	NAS178-8-7	RIVET-HI SHEAR	4	
-33	NAS179-8	COLLAR	4	
		---*---		
-34	0513373-2	BULKHEAD ASSEMBLY-FORWARD	1	
-35	0513374-1	BULKHEAD-FORWARD	1	
-36	0510110	BRACKET-CONTROL PULLEY	2	
		ATTACHING PARTS		
-37	AN3-4A	BOLT	1	
-38	MS21044N3	NUT	1	
		---*---		
-39	0513373-3	BULKHEAD ASSEMBLY-AFT	1	A
	0513373-6	BULKHEAD ASSEMBLY-AFT	1	B
-40	0513374-2	BULKHEAD-AFT	1	A
	0513374-4	BULKHEAD-AFT	1	B
-41	0513006-24	ANGLE-AFT BULKHEAD REINFORCEMENT	1	A
	0513006-145	ANGLE-AFT BULKHEAD REINFORCEMENT	1	B
-42	0713495-13	PLATE-AFT BULKHEAD REINFORCEMENT LH	1	
	0713495-14	PLATE-AFT BULKHEAD REINFORCEMENT RH	1	
-43	0713495-9	STIFFENER-BULKHEAD AFT LH	1	A
	0713495-10	STIFFENER-BULKHEAD AFT RH	1	A
	0713495-65	STIFFENER-BULKHEAD AFT LH	1	B
	0713495-66	STIFFENER-BULKHEAD AFT RH	1	B
-44	AN3-5A	BOLT	2	
-45	AN960-10	WASHER	2	
-46	MS21044N3	NUT	2	
-47	0511496-1	BRACKET-REINFORCEMENT	2	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
35 -48	0713054-1	BULKHEAD-LH	1	
	0713054-2	BULKHEAD-RH	1	
-49	0713495-55	SPACER	4	
-50	0713495-17	PLATE	2	
-51	AN6-6A	BOLT	4	
-52	MS21042L6	NUT	4	
-53	NAS178-8-7	RIVET-HI SHEAR	2	
-54	NAS179-8	COLLAR	2	
-55	0511493-1	FLOORBOARD ASSY-FRONT DOORPOST	1	
-56	S372-2	DOUBLER ASSY	1	
-57		DELETED-NOT AVAILABLE		
-58	0513063-1	BRACKET ASSEMBLY	1	
	NAS680A4	NUTPLATE	1	
-59	0513370-1	BELLCRANK ASSEMBLY-ELEVATOR	1	
		ATTACHING PARTS		
-60	AN4-10A	BOLT	1	
		---*---		
-61	0713495-53	STIFFENER LH	1	
-62	0713495-54	STIFFENER RH	1	
		A---172 SERIAL 17251823 THRU 17259223		
		F172 SERIAL F172-0086 THRU F17200754		
		B---172 SERIAL 17259224 THRU 17263458		
		F172 SERIAL F17200755 THRU F17201234		
		C---172 SERIAL 17259224 THRU 17261466		
		F172 SERIAL F17200755 THRU F17200984		
		D---172 SERIAL 17251823 THRU 17261466		
		F172 SERIAL F172-0086 THRU F17200984		
		E---172 SERIAL 17261467 THRU 17263458		
		F172 SERIAL F17200985 THRU F17201234		

Fuselage (Cont)

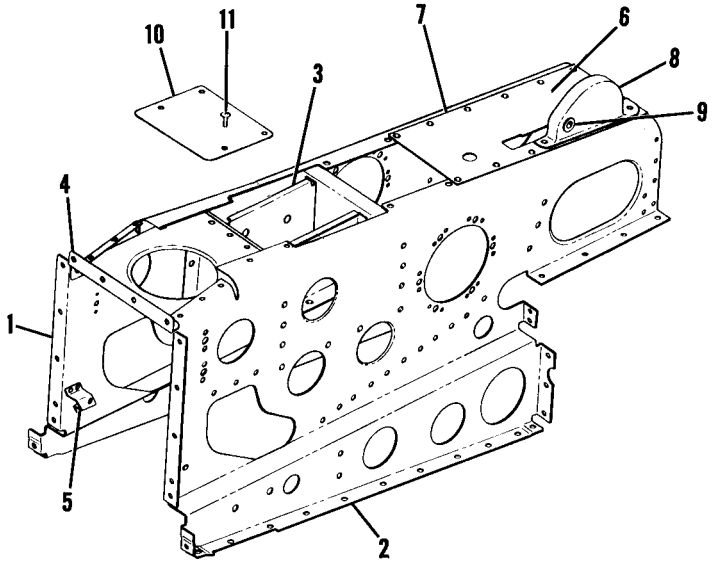


172 SERIAL 17249545 THRU 17251822
P172 SERIAL P17257120 THRU P17257188

Figure 36. Fuselage Tunnel Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
36 -	0591301-11	TUNNEL ASSEMBLY-FUSELAGE FORWARD	1	A
	0591303-3	TUNNEL ASSEMBLY-FUSELAGE FORWARD	1	B
- 1	0510113-14	BULKHEAD ASSEMBLY-TUNNEL FORWARD RH	1	A
	0513314-2	BULKHEAD ASSEMBLY-TUNNEL FORWARD RH	1	B
- 2	0510113-15	BULKHEAD ASSEMBLY-TUNNEL FORWARD LH	1	A
	0513314-1	BULKHEAD ASSEMBLY-TUNNEL FORWARD LH	1	B
- 3	0510135	SUPPORT ASSEMBLY-CONTROL TEE	1	A
	0510135-4	SUPPORT ASSEMBLY-CONTROL TEE	1	B
- 4	0713052	BULKHEAD-TUNNEL REINFORCEMENT	1	A
	0513315-1	BULKHEAD-TUNNEL REINFORCEMENT	1	B
- 5	0510128	BRACKET-RUDDER PEDAL SPRING	2	
- 6	0510138	COVER ASSEMBLY-FUSELAGE TUNNEL AFT	1	
- 7	0510138-2	COVER-FUSELAGE TUNNEL AFT	1	
- 8	0510138-3	COVER ASSEMBLY-TAB CONTROL	1	
- 9	M451	BEARING TOR	1	
-10	0510145-1	COVER-FUSELAGE TUNNEL FORWARD	1	A
	0513317-1	COVER-FUSELAGE TUNNEL FORWARD	1	B
		ATTACHING PARTS		
-11	S1021Z8-6	SCREW	1	A
	S1021Z8-6	SCREW	6	B
		---*---		
		A---172 SERIAL 17249545 THRU 17250572		
		P172 SERIAL P17257120 THRU P17257188		
		F172 SERIAL F172-0001 THRU F172-0018		
		FP172 SERIAL FP172-0001 THRU FP172-0003		
		B---172 SERIAL 17250573 THRU 17251822		
		F172 SERIAL F172-0019 THRU F172-0085		

Fuselage (Cont)

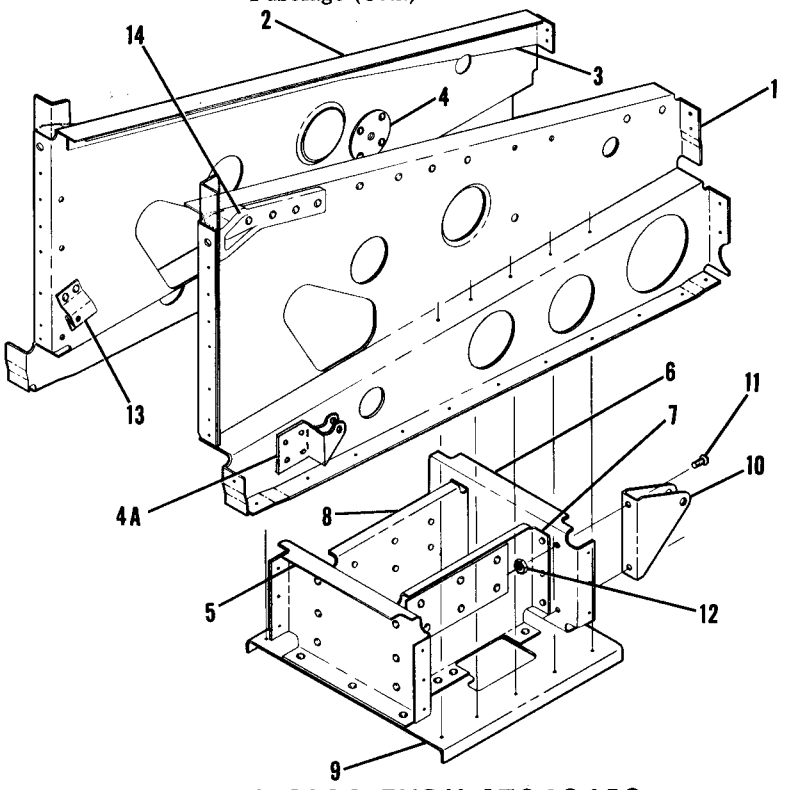


172 SERIAL 17251823 THRU 17263458

Figure 37. Front Section Tunnel Components

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
37 -		TUNNEL COMPONENTS-FRONT SECTION	NP	A
- 1	0513363-1	BULKHEAD ASSEMBLY-TUNNEL LH	1	
- 2	0513363-2	BULKHEAD ASSEMBLY-TUNNEL RH	1	
- 3	0513364-1	ANGLE-TUNNEL LH	1	
	0513364-2	ANGLE-TUNNEL RH	1	
- 4	0713102-1	PLATE	2	
- 4A	0713624-2	ANCHOR	1	
	0513358-1	SUPPORT ASSEMBLY-CONTROL U	1	
- 5	0513359-1	BRACKET-FWD	1	
- 6	0513359-2	BRACKET AFT	1	
- 7	0513360-1	BRACKET ASSEMBLY-LH	1	
- 8	0513360-2	BRACKET ASSEMBLY-RH	1	
- 9	0513361-1	BRACKET SUPPORT	1	
-10	0513376-1	PULLEY BRACKET-TAB	1	
		ATTACHING PARTS		
-11	AN515-8R6	SCREW	2	
-12	MS21044N08	NUT	2	
		---*---		
-13	0510128	BRACKET	2	
-14	0513372-1	FITTING-TUNNEL LH	1	
	0513372-2	FITTING-TUNNEL RH	1	
		A---172 SERIAL 17251823 THRU 17263458 F172 SERIAL F172-0086 THRU F17201234		

Fuselage (Cont)

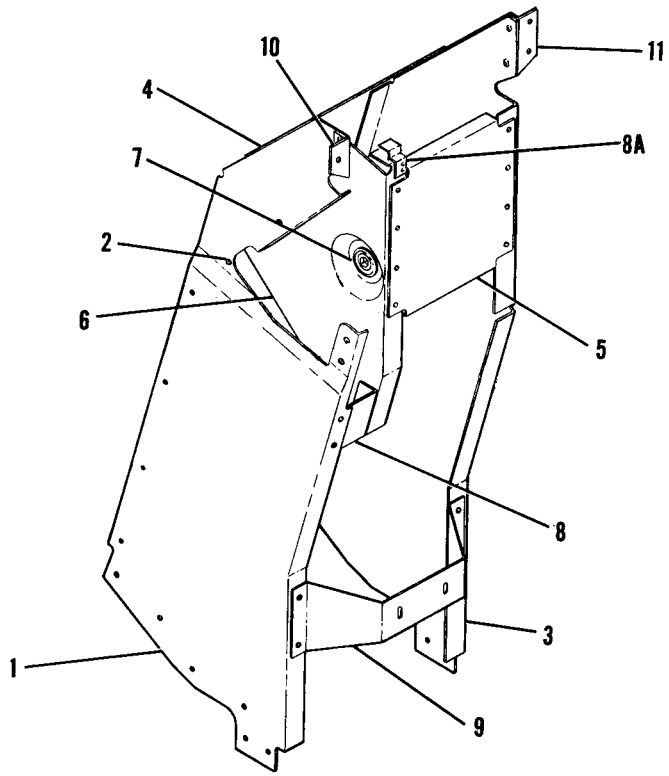

172 SERIAL 17251823 THRU 17263458


Figure 38. Console Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
38 -	0513368-200	CONSOLE STRUCTURE ASSEMBLY WEU 0513368-201	1	A
	0513368-201	CONSOLE STRUCTURE ASSEMBLY	1	C
- 1	0513368-2	SIDE PANEL ASSEMBLY-LH	1	
- 2	NAS697A08	NUTPLATE	4	
- 3	0513368-4	SIDE PANEL-RH	1	
- 4	0513365-1	SUPPORT-AFT	1	
- 5	0513367-1	SUPPORT-FORWARD	1	
- 6	0513366-1	SUPPORT ASSEMBLY-ELEVATOR TRIM	1	
- 7	NAS295M4	BEARING	1	
	0411420	HOUSING	1	
- 8	0713641-3	CLIP	1	
- 9	0511252-1	BRACKET	1	
-10	0513368-7	ANGLE-CONSOLE	1	A
	0513368-10	ANGLE-CONSOLE	1	C
-11	0513368-8	ANGLE-CONSOLE	1	
-12	0513366-4	CLIP	1	B

A---172 SERIAL 17251823 THRU 17259223
F172 SERIAL F172-0086 THRU F17200754
B---172 SERIAL 17257297 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
C---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200754 THRU F17201234

Fuselage (Cont)

ADAPTERS & PLATES ARE NOT REQUIRED PRIOR TO SERIAL 17253393, ADAPTER CUTOUT MUST BE COVERED ON THESE AIRCRAFT.

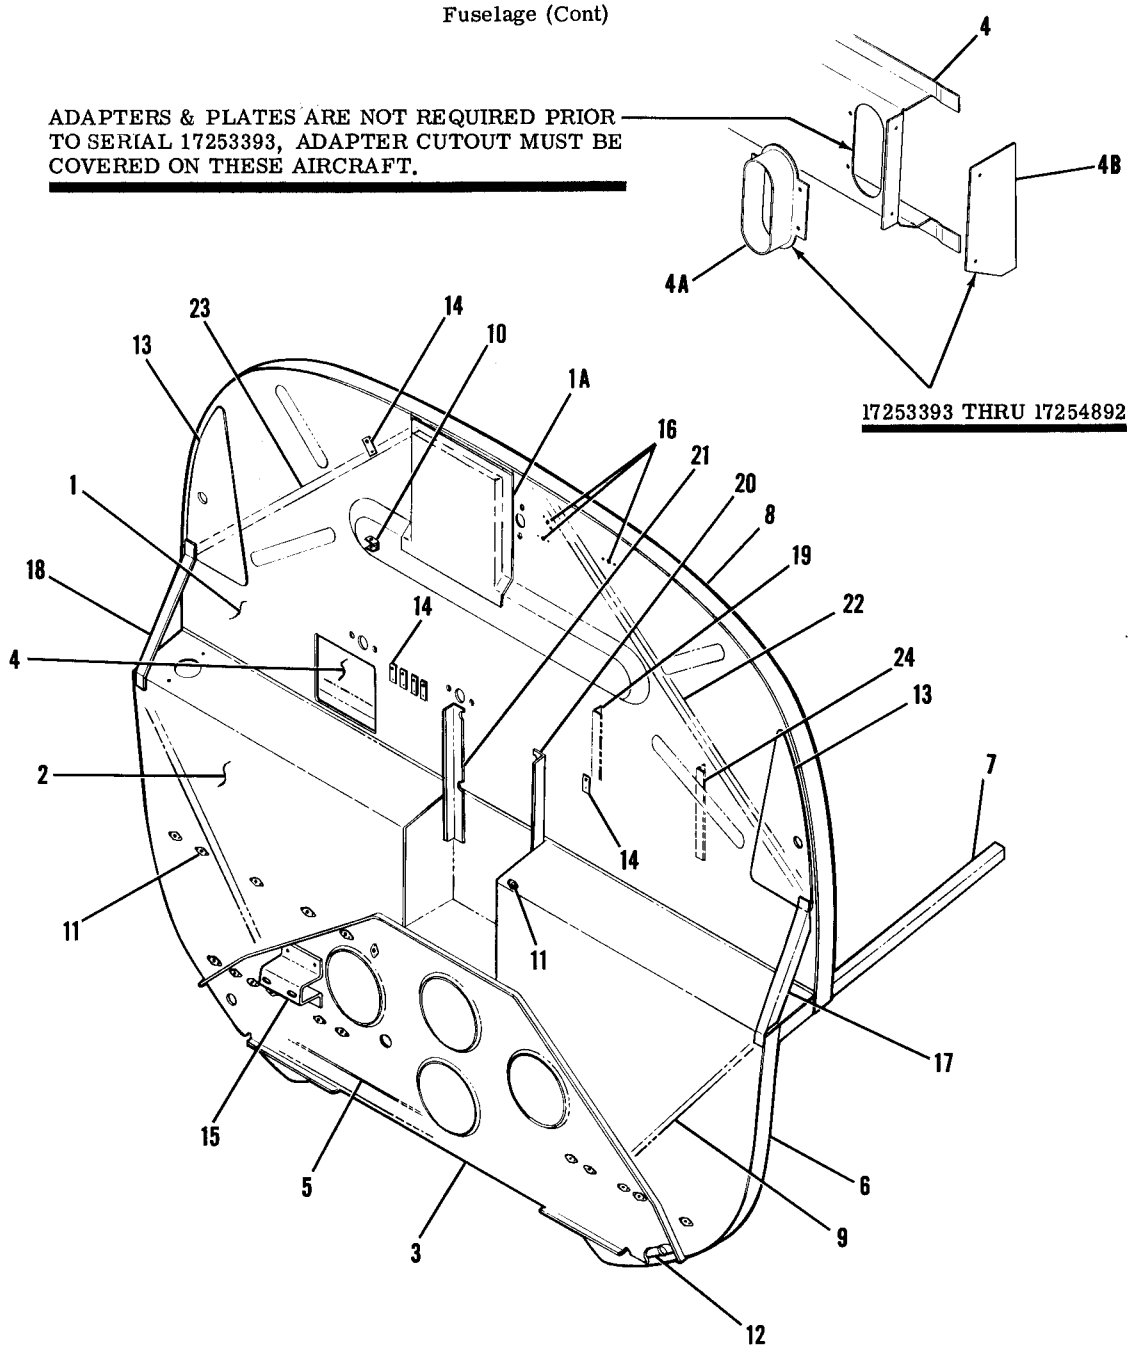

172 SERIAL 17249545 THRU 17254892

Figure 39. Firewall Assembly


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
39 -	0591302-10		FIREWALL ASSEMBLY WHEN EXHAUSTED USE 0591302-12	1	A
	0591302-12		FIREWALL ASSEMBLY	1	B
- 1	0513109-47		SHEET-UPPER WHEN EXHAUSTED USE 0513109-200	1	A
	0513109-200		SHEET-UPPER		
- 1A	0513352-3		PAN-FIREWALL	1	B
- 2	0513109-49		SHEET-LOWER	1	
- 3	0513109-68		REINFORCEMENT WHEN EXHAUSTED USE 0513109-72	1	
	0513109-72		REINFORCEMENT	1	
- 4	0513109-64		DUCT ASSEMBLY-HEATER	1	
- 4A	1253031-3		ADAPTER-HOSE	2	
- 4B	0513387-1		PLATE-END COVER	2	
- 5	0513109-9		ANGLE-LOWER	1	
- 6	0513109-7		ANGLE-LOWER LH	1	
	0513109-11		ANGLE-LOWER RH	1	
- 7	0513109-15	*	ANGLE-LH	1	
	0513109-24	*	ANGLE-RH	1	
- 8	0513109-23		ANGLE-UPPER	1	
- 9	0513109-12		ANGEL-REINFORCEMENT LH	1	
	0513109-8		ANGLE-REINFORCEMENT RH	1	
-10	0450286		CLIP	1	
-11	S1863-3A		NUT TIN	18	
-12	0513109-10		SPACER-ENGINE MOUNT REINFORCEMENT	4	
-13	0513109-29		DOUBLER-ENGINE MOUNT REINFORCEMENT	2	A
	0513109-56		DOUBLER-ENGINE MOUNT REINFORCEMENT	1	B
-14	0753000-13		DOUBLER	6	
-15	0513129		BRACKET	1	
-16	NAS680A4		NUTPLATE	3	
-17	0513002-11		STIFFENER-LH WHEN EXHAUSTED USE 0513327-1	1	A
	0513327-1		STIFFENER-LH	1	B
-18	0513002-12		STIFFENER-RH WHEN EXHAUSTED USE 0513327-2	1	A
	0513327-2		STIFFENER-RH	1	B
-19	0513109-50		ANGLE-LH INBOARD	1	
-20	0500044-9		ANGLE-LH	1	
-21	0500044-10		ANGLE-RH	1	
-22	0500044-23		ANGLE-LH	1	
-23	0500044-11		ANGLE-RH	1	A
	0500044-35		ANGLE-RH	1	B
-24	0513109-50	%	ANGLE-LH OUTBOARD	1	

NOTE. ITEMS MARKED * ARE SHIPPED AS LOOSE PARTS

NOTE. %WHEN ORDERING FIREWALL FOR AIRCRAFT EQUIPPED WITH ELECTRIC STARTER, ALSO ORDER 1 0513109-50 ANGLE

A---172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
B---172 SERIAL 17250573 THRU 17254892
F172 SERIAL F172-0019 THRU F172-0319

Fuselage (Cont)

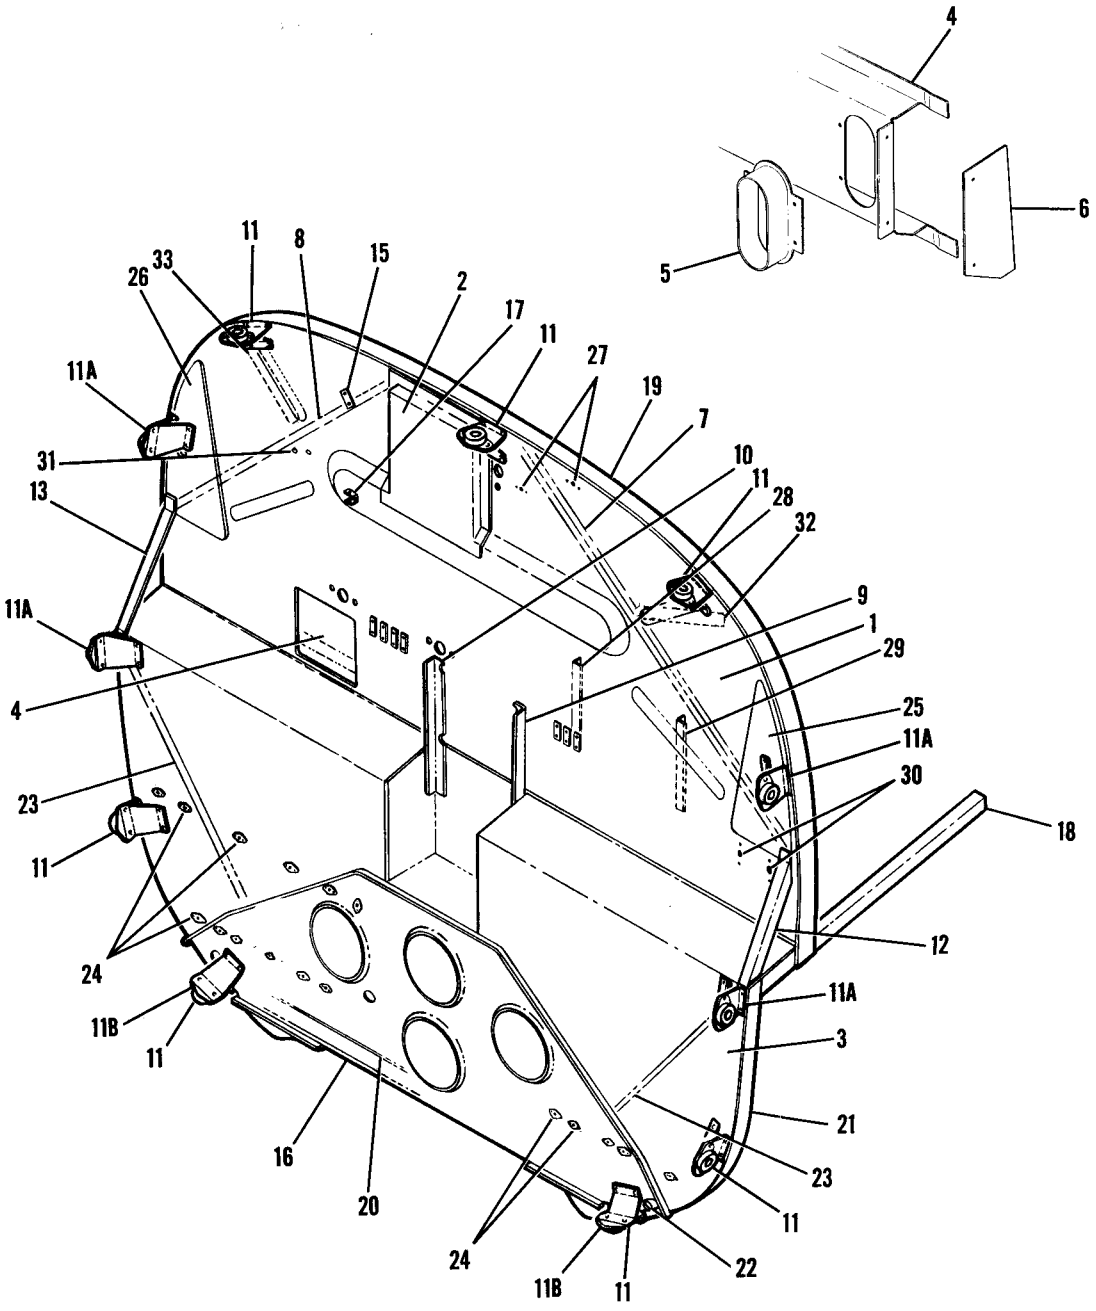

172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200804

Figure 40. Firewall Assembly


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40 -	0591302-14		FIREWALL ASSEMBLY	1	A
- 1	0513109-200		SHEET-UPPER	1	
- 2	0513352-3		PAN-FIREWALL	1	
- 3	0513109-49		SHEET-LOWER	1	
- 4	0513109-64		DUCT ASSEMBLY-HEATER	1	
- 5	1253031-3		ADAPTER-HOSE	2	
- 6	0513387-1		PLATE-END COVER	2	
- 7	0500044-23		ANGLE-LH	1	
- 8	0500044-35		ANGLE-RH	1	
- 9	0500044-9		ANGLE-LH	1	
-10	0500044-10		ANGLE-RH	1	
-11	0453003-1		SHOCK MOUNT ASSEMBLY	7	
-11A	0453003-9		SHOCK MOUNT ASSEMBLY	4	
-11B	0453003-11		SHOCK MOUNT ASSEMBLY FLOATPLANE ONLY	2	
	0500044-37		SHIM FLOATPLANE ONLY	2	
	0500044-38		SHIM FLOATPLANE ONLY	2	
-12	0513327-1		STIFFENER-LH	1	
-13	0513327-2		STIFFENER-RH	1	
-14			DELETED-NEVER USED		
-15	0753000-13		DOUBLER	8	
-16	0513109-68		REINFORCEMENT WHEN EXHAUSTED USE 0513109-72	1	
	0513109-72		REINFORCEMENT	1	
-17	0450286		CLIP	1	
-18	0513109-15	*	ANGLE-LH	1	
	0513109-24	*	ANGLE-RH	1	
-19	0513109-23		ANGLE-UPPER	1	
-20	0513109-9		ANGLE-LOWER	1	
-21	0513109-7		ANGLE-LOWER LH	1	
	0513109-11		ANGLE-LOWER RH	1	
-22	0513109-10		SPACER-ENGINE MOUNT REINFORCEMENT	4	
-23	0513109-12		ANGLE-REINFORCEMENT LH	1	
	0513109-8		ANGLE-REINFORCEMENT RH	1	
-24	S1863-3		NUT TIN	17	
-25	0513109-29		DOUBLER-ENGINE MOUNT REINFORCEMENT LH	1	
-26	0513109-56		DOUBLER-ENGINE MOUNT REINFORCEMENT RH	1	
-27	NAS680A4		NUTPLATE	2	
-28	0513109-50		ANGLE-LH INBOARD	1	
-29	0513109-50	%	ANGLE-LH OUTBOARD	1	
-30	NAS680A08		NUTPLATE	2	
-31	MS21044N3		NUTPLATE	2	
-32	0513109-69		ANGLE-LH	1	
-33	0513109-70		ANGLE-RH	1	

NOTE. *ITEMS MARKED * ARE SHIPPED AS LOOSE PARTS

NOTE. %WHEN ORDERING FIREWALL FOR AIRCRAFT EQUIPPED WITH ELECTRIC STARTER, ALSO ORDER 1 0513109-50 ANGLE

A---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200804

Fuselage (Cont)

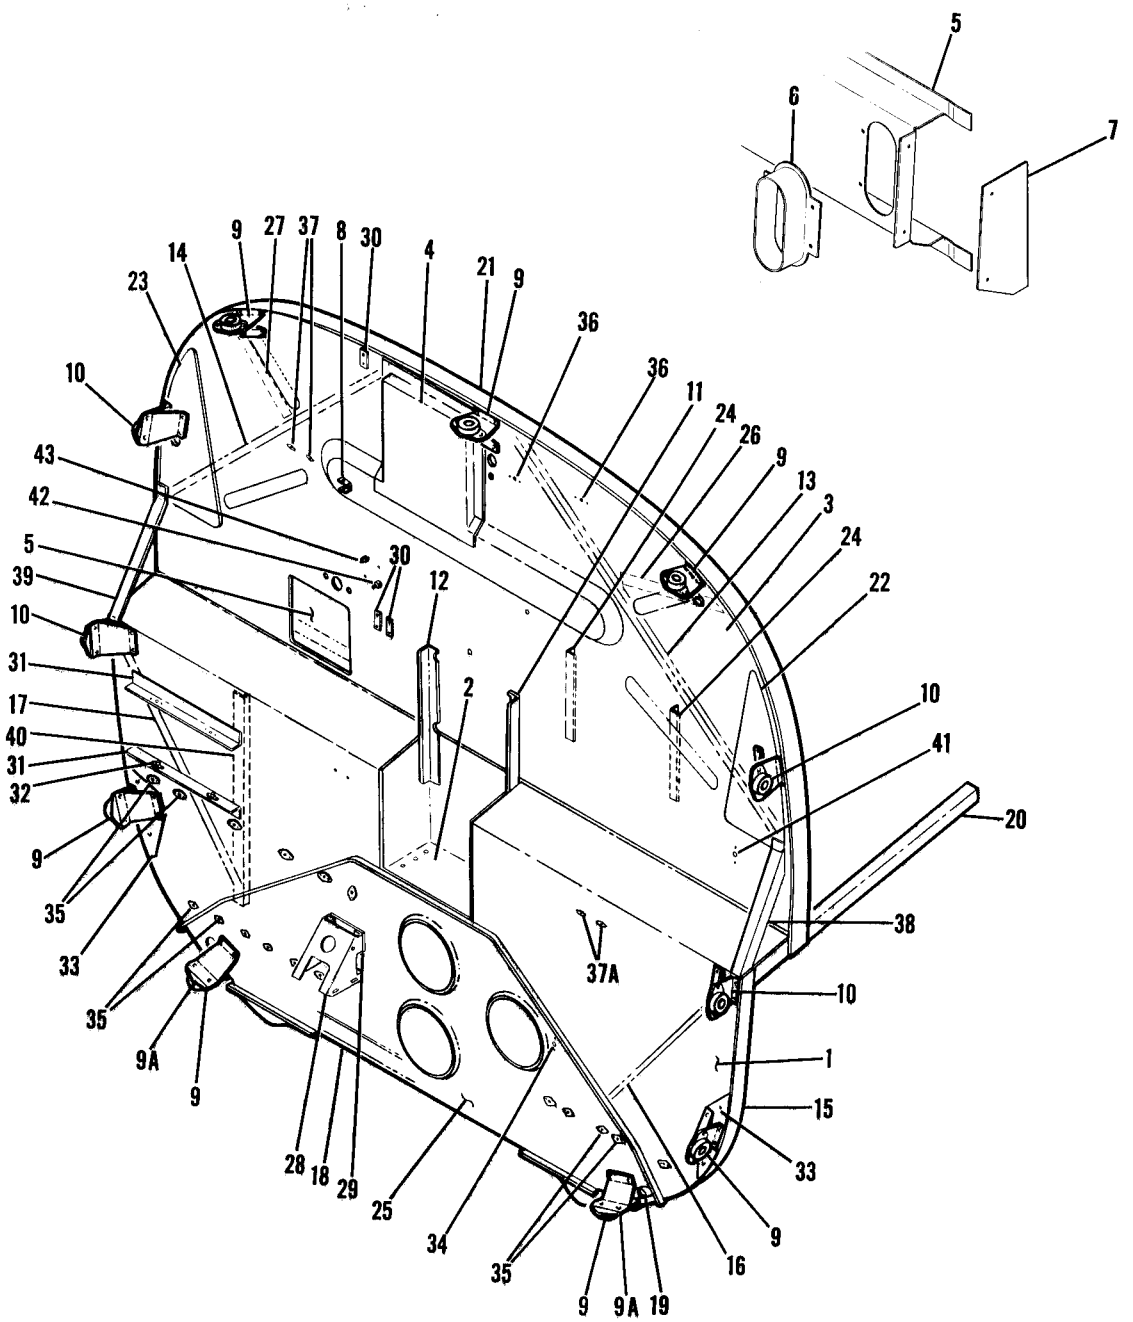


172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Figure 41. Firewall Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
41 -	0553006-200		FIREWALL ASSEMBLY WHEN EXHAUSTED USE 0553006-203	1	A
	0553006-203		FIREWALL ASSEMBLY	1	D
- 1	0553006-202		SHEET-LOWER	1	
- 2	0513109-4		PAN ASSEMBLY	1	
- 3	0553006-201		SHEET-UPPER	1	
- 4	0513352-1		PAN-FIREWALL	1	
- 5	0513109-64		DUCT ASSEMBLY-HEATER	1	
- 6	1253031-3		ADAPTOR-HOSE	2	
- 7	0513387-1		PLATE-END COVER	2	
- 8	0450286		CLIP	1	
- 9	0453003-1		SHOCK MOUNT ASSEMBLY	7	
- 9A	0453003-11		SHOCK MOUNT ASSEMBLY FLOATPLANE ONLY	2	J
	0453003-12		SHOCK MOUNT ASSEMBLY FLOATPLANE ONLY	2	K
	0500044-37		SHIM-MOUNT FLOATPLANE ONLY	2	
	0500044-38		SHIM-MOUNT FLOATPLANE ONLY	2	
-10	0453003-9		SHOCK MOUNT ASSEMBLY	4	
-11	0500044-9		ANGLE-LH	1	
-12	0500044-10		ANGLE-RH	1	
-13	0500044-23		ANGLE-LH	1	
-14	0500044-35		ANGLE-RH	1	
-15	0513109-7		ANGLE-LH	1	
	0513109-11		ANGLE-RH	1	
-16	0513109-12		ANGLE-REINFORCEMENT LH	1	
-17	0513109-8		ANGLE-REINFORCEMENT RH	1	
-18	0513109-9		ANGLE-LOWER	1	
-19	0513109-10		SPACER-ENGINE MOUNT REINFORCEMENT	4	
-20	0513109-15	*	ANGLE-LH	1	
	0513109-24	*	ANGLE-RH	1	
-21	0513109-23		ANGLE-UPPER	1	
-22	0513109-29		DOUBLER-LH	1	
-23	0513109-56		DOUBLER-RH	1	
-24	0513109-50		ANGLE	2	
-25	0513109-72		REINFORCEMENT	1	
-26	0513109-69		ANGLE-LH	1	
-27	0513109-70		ANGLE-RH	1	
-28	0713757-1		BRACKET	1	
-29	1713105-3		SPACER	1	
-30	0753000-13		DOUBLER	3	
-31	1713110-1		BRACKET ASSEMBLY	2	
-32	NAS697A3		NUTPLATE	2	
-33	0553007-1		REINFORCEMENT WEU 0553007-2	2	E
	0553007-2		REINFORCEMENT	2	F
	AN924-2D		NUT	1	
-34	S1863-4		NUTPLATE TIN	1	
-35	S1863-3A		NUTPLATE TIN	17	
-36	NAS680A4		NUTPLATE	2	
-37	NAS697A4		NUTPLATE	2	B
-37A	NAS697A4K		NUTPLATE	2	C
-38	0513327-1		STIFFENER-LH	1	
-39	0513327-2		STIFFENER-RH	1	
-40	0553006-4		STIFFENER	1	
-41	NAS680A08		NUTPLATE	2	
-42	AN832-2D		UNION	1	G
	AN960-516		WASHER	2	G
	AN924-2D		NUT	1	G
-43	1450024-3		UNION	1	H
	AN960D616		WASHER	2	H
	AN924-3D		NUT	1	H

NOTE. *ITEMS MARKED * ARE SHIPPED AS LOOSE PARTS

A---172 SERIAL 17256513 THRU 17257959
B---172 SERIAL 17256513 THRU 17256823
C---172 SERIAL 17256824 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
D---172 SERIAL 17257960 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
E---172 SERIAL 17256513 THRU 17258868
F---172 SERIAL 17258869 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
G---172 SERIAL 17256513 THRU 17259043
H---172 SERIAL 17259044 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
J---172 SERIAL 17256513 THRU 17261229
K---172 SERIAL 17261230 THRU 17263458

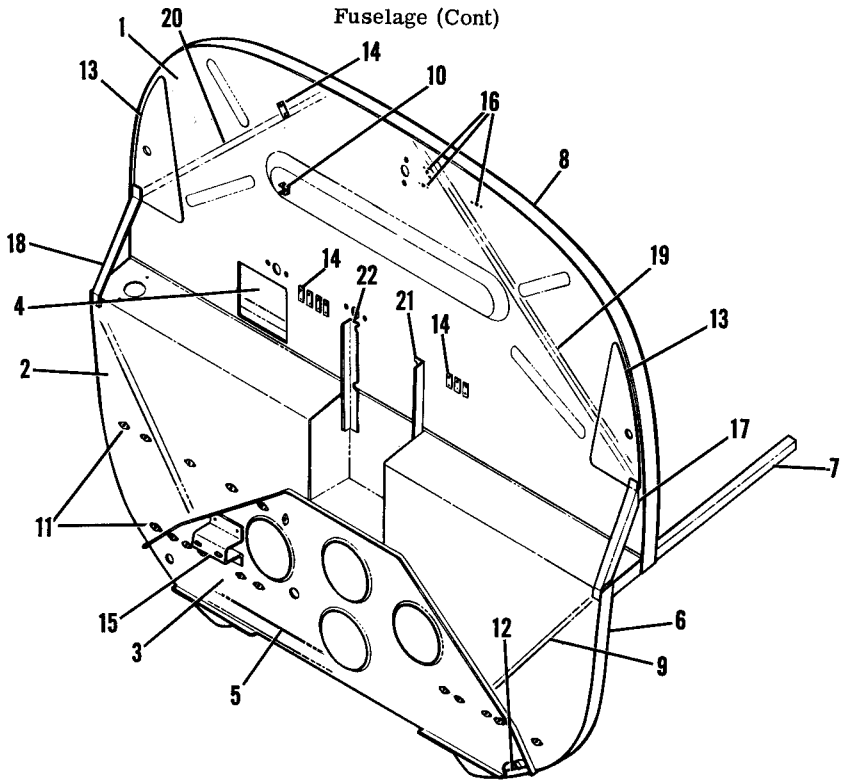

P172 SERIAL P17257120 THRU P17257188

Figure 42. Firewall Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
42 -	0591302-8		FIREWALL ASSEMBLY WHEN EXHAUSTED USE 0591302-11	1	A
	0591302-11		FIREWALL ASSEMBLY	1	
- 1	0513109-48		SHEET-UPPER WHEN EXHAUSTED USE 0513109-54	1	
	0513109-54		SHEET-UPPER	1	
- 2	0513109-31		SHEET-LOWER WHEN EXHAUSTED USE 0513109-55	1	
	0513109-55		SHEET-LOWER	1	
- 3	0513109-72		REINFORCEMENT	1	
- 4	0513109-41		HEATER DUCT ASSEMBLY	1	
- 5	0513109-9		ANGLE-LOWER	1	
- 6	0513109-7		ANGLE-LOWER LH	1	
	0513109-11		ANGLE-LOWER RH	1	
- 7	0513109-15	*	ANGLE-LH	1	
	0513109-24	*	ANGLE-RH	1	
- 8	0513109-23		ANGLE-UPPER	1	
- 9	0513109-12		ANGLE-REINFORCEMENT LH	1	
	0513109-8		ANGLE-REINFORCEMENT RH	1	
-10	0450286		CLIP	1	
-11	S1863-3A		NUT TIN	17	
-12	0513109-10		SPACER-ENGINE MOUNT REINFORCEMENT	4	
-13	0513109-29		DOUBLER-ENGINE MOUNT REINFORCEMENT	2	
-14	0753000-13		DOUBLER	8	
-15	0513129		BRACKET	1	
-16	NAS680A4		NUTPLATE	3	
-17	0513002-11		STIFFENER-LH WHEN EXHAUSTED USE 0513327-1	1	
	0513327-1		STIFFENER-LH	1	
-18	0513002-12		STIFFENER-RH WHEN EXHAUSTED USE 0513327-2	1	
	0513327-2		STIFFENER-RH	1	
-19	0500044-23		ANGLE-LH	1	
-20	0500044-11		ANGLE-RH	1	
-21	0500044-9		ANGLE-LH	1	
-22	0500044-10		ANGLE-RH	1	

NOTE. ITEMS MARKED * ARE SHIPPED AS LOOSE PARTS

A---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Fuselage (Cont)


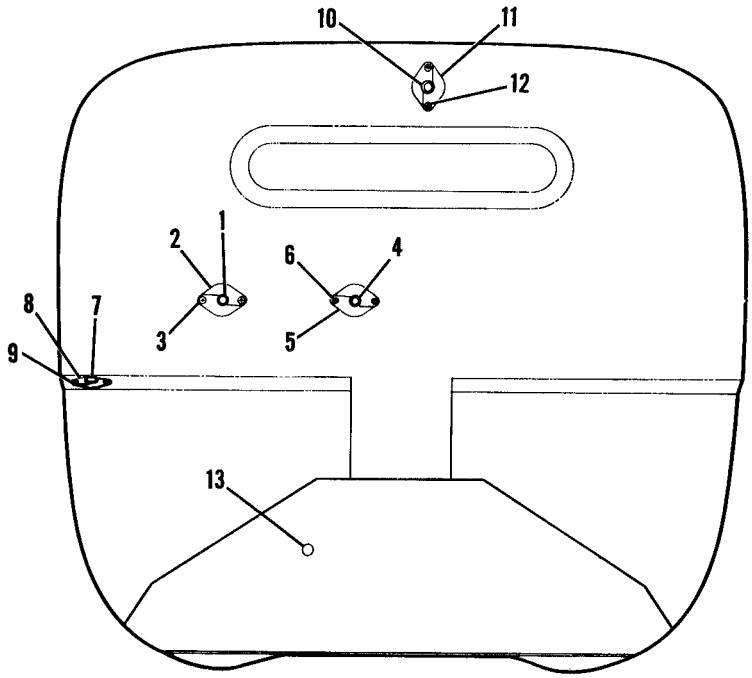


Figure 43. Firewall Grommets Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
43 -		GROMMETS INSTALLATION-FIREWALL	NP	
- 1	NAS557-3A	GROMMET-OIL TEMPERATURE LINE	1	
- 2	S1095-1	SHIELD HALF-OIL TEMPERATURE LINE	2	
		ATTACHING PARTS		
- 3	S1021Z8-6	SCREW	1	
	NAS446-4-3	NUT	1	
		---*---		
- 4	NAS557-4A	GROMMET-TACHOMETER SHAFT	1	
- 5	S1095-2	SHIELD-TACHOMETER SHAFT	2	
		ATTACHING PARTS		
- 6	S1021Z8-6	SCREW	1	
	NAS446-4-3	NUT	1	
		---*---		
- 7	0713003-51	FAIRLEAD-STARTER CABLE	1	A
- 8	S1095-4	SHIELD HALF-STARTER CABLE	2	A
		ATTACHING PARTS		
- 9	S1021Z8-6	SCREW	1	A
	NAS446-4-3	NUT	1	A
		---*---		
-10	NAS557-8A	GROMMET TO ACCOMMODATE 1/2 IN. WIRE BUNDLE	1	
	NAS557-10A	GROMMET TO ACCOMMODATE 5/8 IN. WIRE BUNDLE	1	
	NAS557-12A	GROMMET TO ACCOMMODATE 3/4 IN. WIRE BUNDLE	1	
-11	S1095-4	SHIELD HALF TO ACCOMMODATE 1/2 IN. WIRE BUNDLE	2	
	S1095-5	SHIELD HALF TO ACCOMMODATE 5/8 IN. WIRE BUNDLE	2	
	S1095-6	SHIELD HALF TO ACCOMMODATE 3/4 IN. WIRE BUNDLE	2	
		ATTACHING PARTS		
-12	S1021Z8-6	SCREW	1	
	NAS446-4-3	NUT	1	
		---*---		
-13	S354-3	GROMMET	1	B
	0750032-1	SHIELD	1	B
		A---P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 B---172 SERIAL 17256513 THRU 17263458		

Fuselage (Cont)

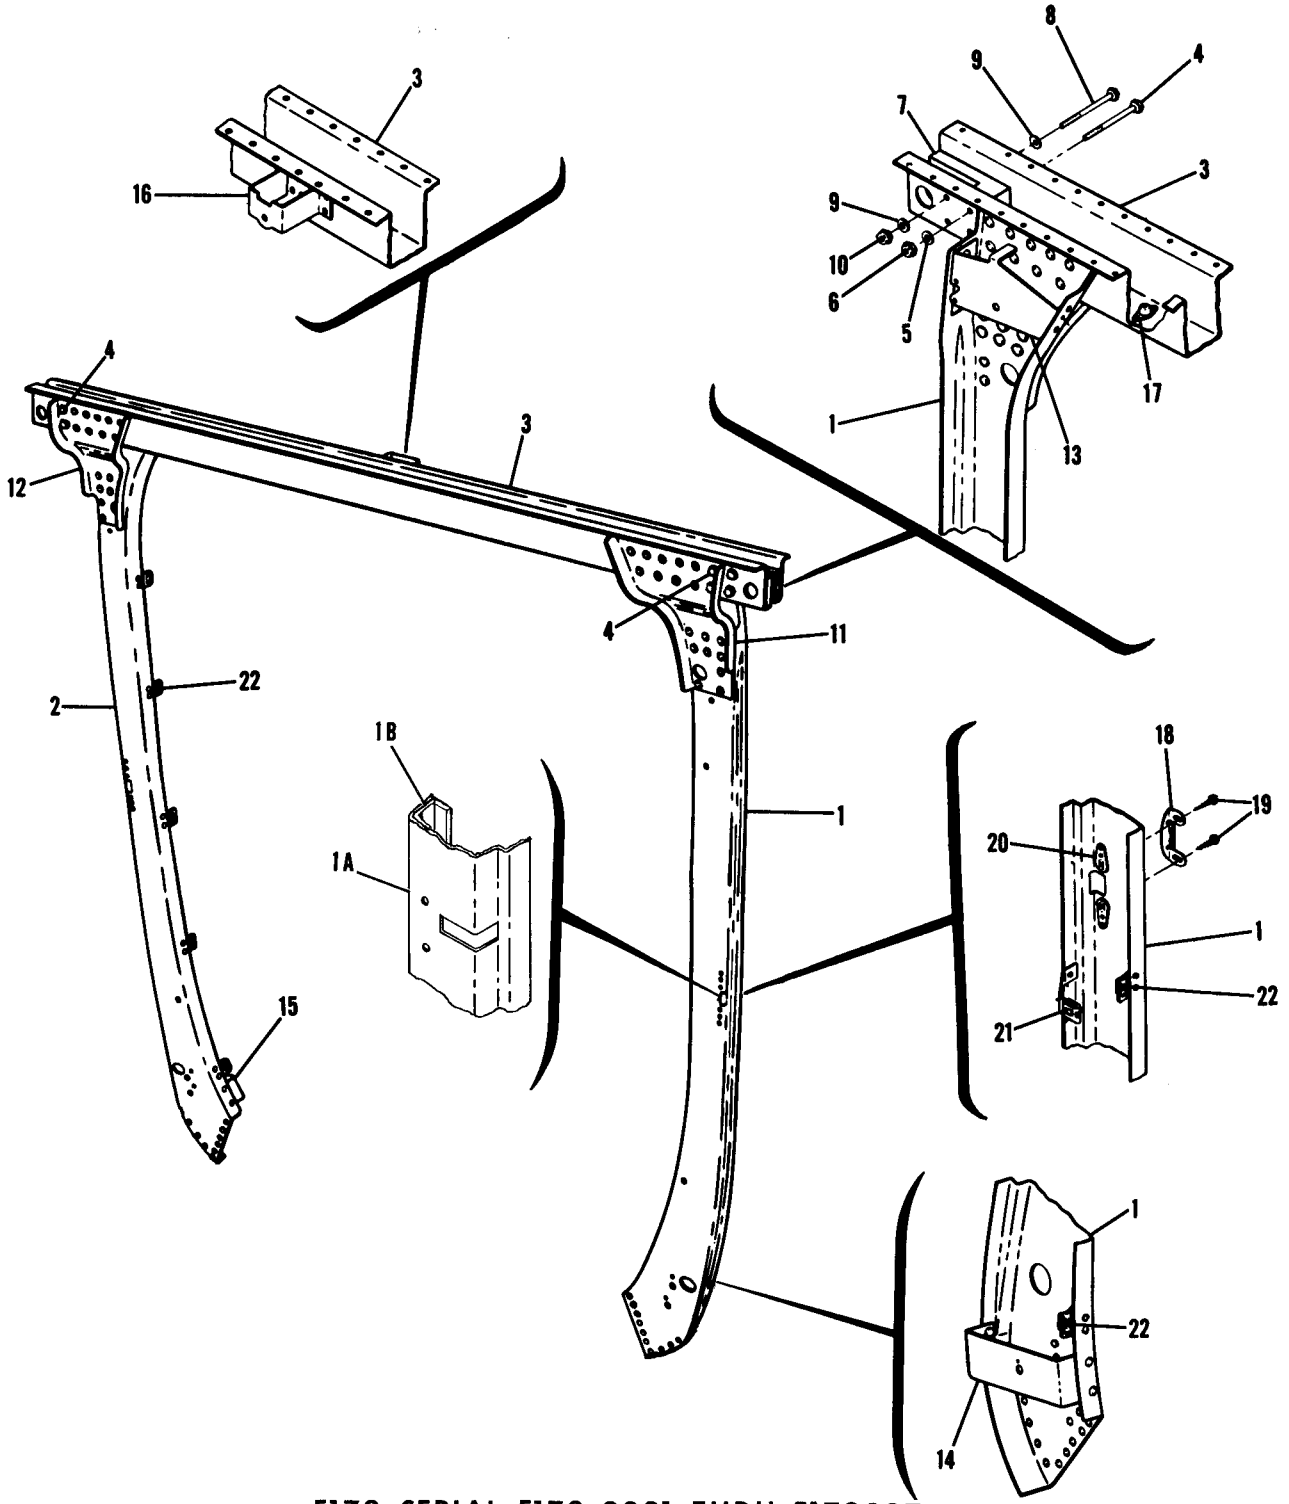


F172 SERIAL F172-0001 THRU F17200754
P172 SERIAL P17257120 THRU P17257188
172 SERIAL 17249545 THRU 17259223

Figure 44. Fuselage Bulkhead Assembly Sta. 65.33

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
44 -	0512124-44	BULKHEAD ASSEMBLY-FUSELAGE STA 65.33	1	A
	0512124-47	BULKHEAD ASSEMBLY-FUSELAGE STA 65.33	1	B
- 1	0512124-35	CHANNEL-LH	1	A
- 1A	0512124-63	CHANNEL-LH	1	B
- 1B	0512124-61	DOUBLER-LH	1	B
- 2	0512124-36	CHANNEL-RH	1	A
	0512124-62	CHANNEL-RH	1	B
	0512124-60	DOUBLER-RH	1	B
- 3	0512124-43	SPAR-CENTER SECTION	1	
		ATTACHING PARTS		
- 4	AN3-20A	BOLT	4	
- 5	AN960-10	WASHER	8	
- 6	MS21044N3	NUT	4	
		---*---		
- 7	0512122	BLOCK-BEARING	2	
		ATTACHING PARTS		
- 8	AN3-20A	BOLT	2	
- 9	AN960-10	WASHER	4	
-10	MS21044N3	NUT	2	
		---*---		
-11	0512124-8	PLATE-SPLICE LH	1	
-12	0512124-9	PLATE-SPLICE RH	1	
-13	0512139-3	BRACKET-AILERON UPPER PULLEY LH	1	
	0512139-2	BRACKET-AILERON UPPER PULLEY RH	1	
-14	0512134	BRACKET-PULLEY LH	1	
-15	0512134-1	BRACKET-PULLEY RH	1	
-16	0512137	BRACKET-PULLEY	1	
-17	NAS682A08	NUT	3	
-18	0411582	STRIKE PLATE	2	A
		ATTACHING PARTS		
-19	AN515-8R8	SCREW	2	A
-20	NAS682A08	NUT EN	2	A
		---*---		
-21	0511185	CLIP	2	
-22	0512150	CLIP	10	A
	NAS395-6-3	NUT	12	

A---172 SERIAL 17249545 THRU 17253392
F172 SERIAL F172-0001 THRU F172-0179
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17253393 THRU 17259223
F172 SERIAL F172-0180 THRU F17200754

Fuselage (Cont)

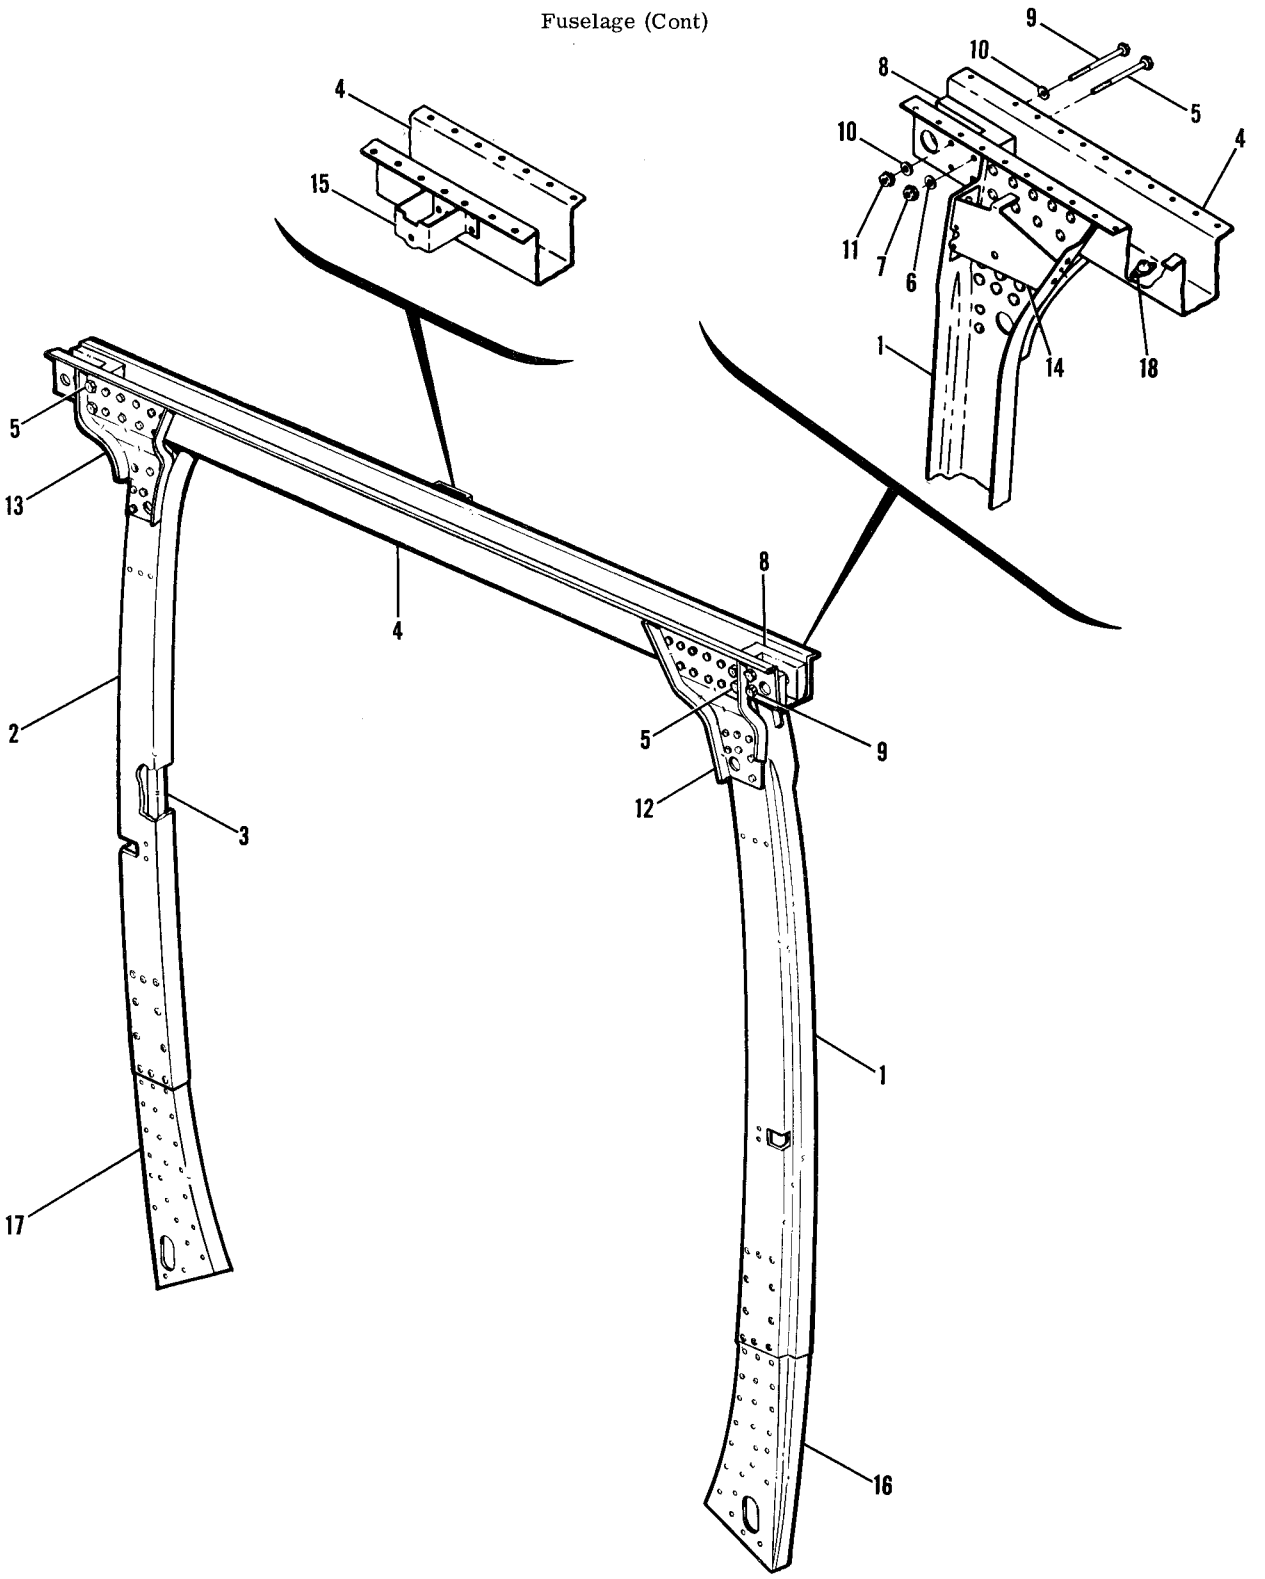


172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234


Figure 45. Rear Doorpost Bulkhead Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
45 -	0512186-1	BULKHEAD ASSEMBLY-FUSELAGE STA. 65.33	1	A
- 1	0512186-5	CHANNEL-LH	1	
- 2	0512186-6	CHANNEL-RH	1	
	0512186-7	DOUBLER-LH WEU 0512186-13	1	
	0512186-13	DOUBLER-LH	1	
- 3	0512186-8	DOUBLER-RH WEU 0512186-12	1	
	0512186-12	DOUBLER-RH	1	
- 4	0512124-78	SPAR-CENTER SECTION	1	
		ATTACHING PARTS		
- 5	AN3-20A	BOLT	4	
- 6	AN960-10	WASHER	8	
- 7	MS21044N3	NUT	4	
		---*---		
- 8	0512122	BLOCK-BEARING	2	
		ATTACHING PARTS		
- 9	AN3-20A	BOLT	2	
-10	AN960-10L	WASHER	4	
-11	MS21044N3	NUT	2	
		---*---		
-12	0512124-79	BRACE-LH	1	
-13	0512124-80	BRACE-RH	1	
-14	0512139-3	BRACKET-AILERON UPPER PULLEY LH	1	
	0512139-2	BRACKET-AILERON UPPER PULLEY RH	1	
-15	0512137	BRACKET-PULLEY	1	
-16	0512183-1	DOUBLER-LH	1	
-17	0512183-2	DOUBLER-RH	1	
-18	NAS682A08	NUTPLATE	3	

A---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU 17201234

Fuselage (Cont)

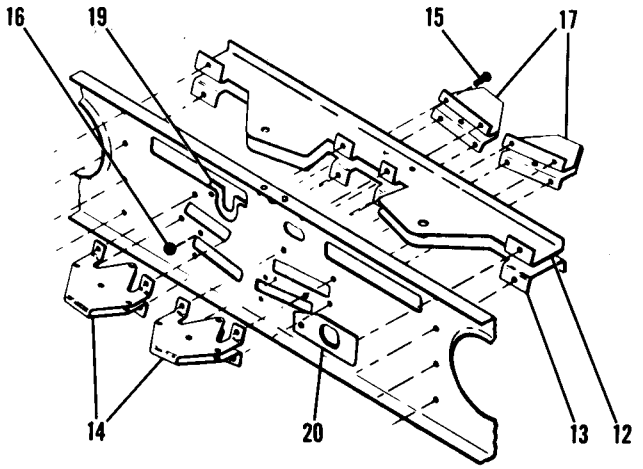

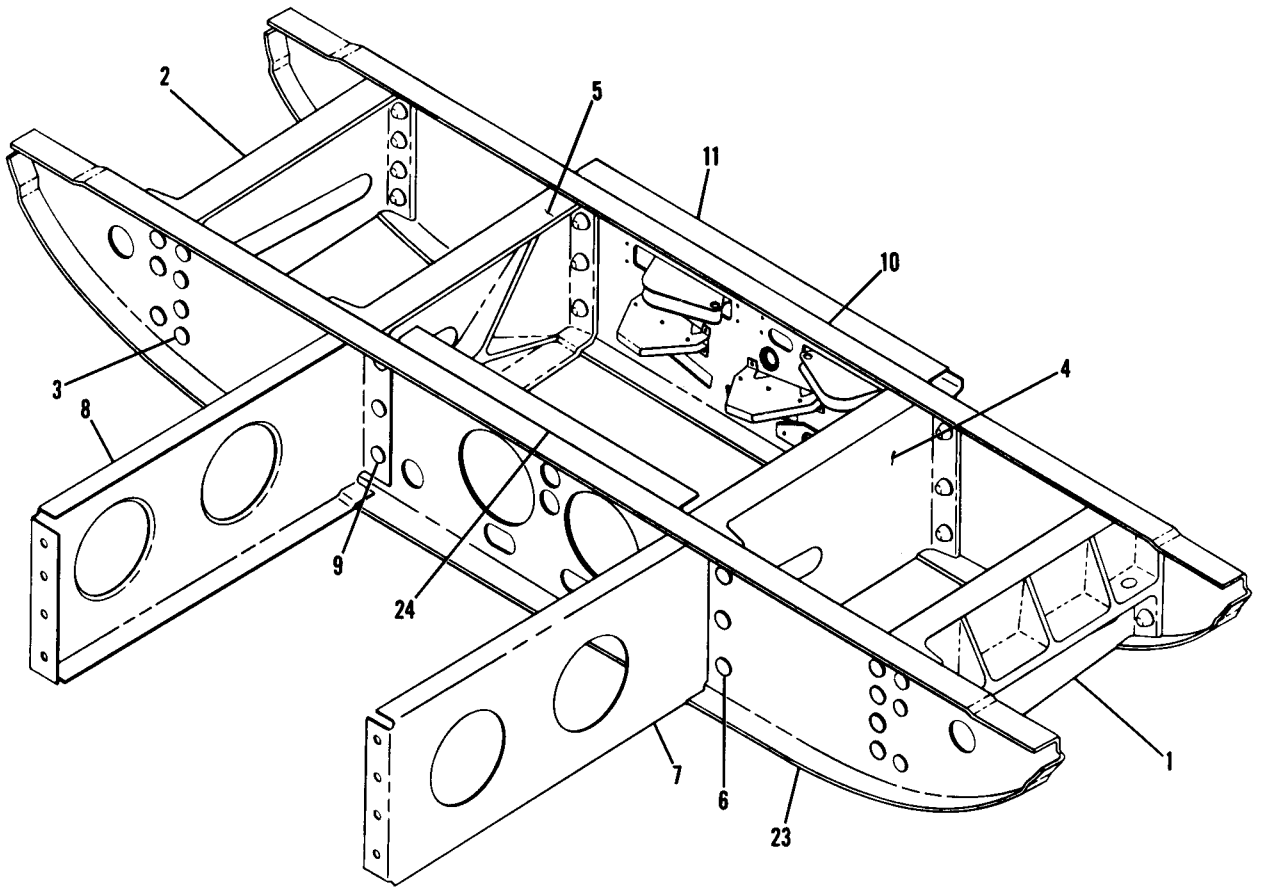

172 SERIAL 17249545 THRU 17259223
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F17200754


Figure 46. Landing Gear Bulkhead Assembly Sta. 44.00 To 65.33

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
46 -	0511289-4		BULKHEAD ASSEMBLY-LANDING GEAR STA 44.00 TO 65.33	1	B
- 1	0541121-1		SUPPORT-OUTBOARD LH	1	
- 2	0541121-2		SUPPORT-OUTBOARD RH	1	
			ATTACHING PARTS		
- 3	NAS178-8-6		RIVET-HI SHEAR	12	
	NAS179-8		COLLAR	12	
			---*---		
- 4	0541122-1		SUPPORT-INBOARD LH	1	
- 5	0541122-2		SUPPORT-INBOARD RH	1	
			ATTACHING PARTS		
- 6	NAS178-8-6		RIVET-HI SHEAR	9	
	NAS179-8		COLLAR	9	
			---*---		
- 7	0511288-1		BULKHEAD-LH	1	
- 8	0511288-2		BULKHEAD-RH	1	
			ATTACHING PARTS		
- 9	NAS178-8-7		RIVET-HI SHEAR	3	
	NAS179-8		COLLAR	3	
			---*---		
-10	0511287		BULKHEAD-LANDING GEAR STA 65.33	1	
-11	0511289-2		ANGLE-BULKHEAD REINFORCEMENT	1	
-12	0512132-15		BRACKET ASSEMBLY-AILERON PULLEY UPPER	1	
-13	0512132-17		BRACKET ASSEMBLY-AILERON PULLEY LOWER	1	
-14	0512128	*	BRACKET-FLAP PULLEY	2	A
			ATTACHING PARTS		
-15	AN515-10R7	*	SCREW	4	A
-16	MS21044N3	*	NUT	4	A
			---*---		
-17	0512129	*	BRACKET-FLAP PULLEY	2	A
-18			DELETED NEVER USED		
-19	0512152		RUB STRIP	1	
-20	0512124-15		FAIRLEAD	1	
-21			DELETED NEVER USED		
-22			DELETED NEVER USED		
-23	0511281		BULKHEAD-LANDING GEAR STA. 56.70	1	
-24	0511289-3		ANGLE-BULKHEAD REINFORCEMENT	1	

NOTE. *THESE PARTS ARE NOT USED ON AIRCRAFT HAVING ELECTRIC FLAPS

A---172 SERIAL 17248735 THRU 17251822
B---172 SERIAL 17249545 THRU 17259223
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F17200754
FP172 SERIAL FP172-0001 THRU FP172-0003

Fuselage (Cont)

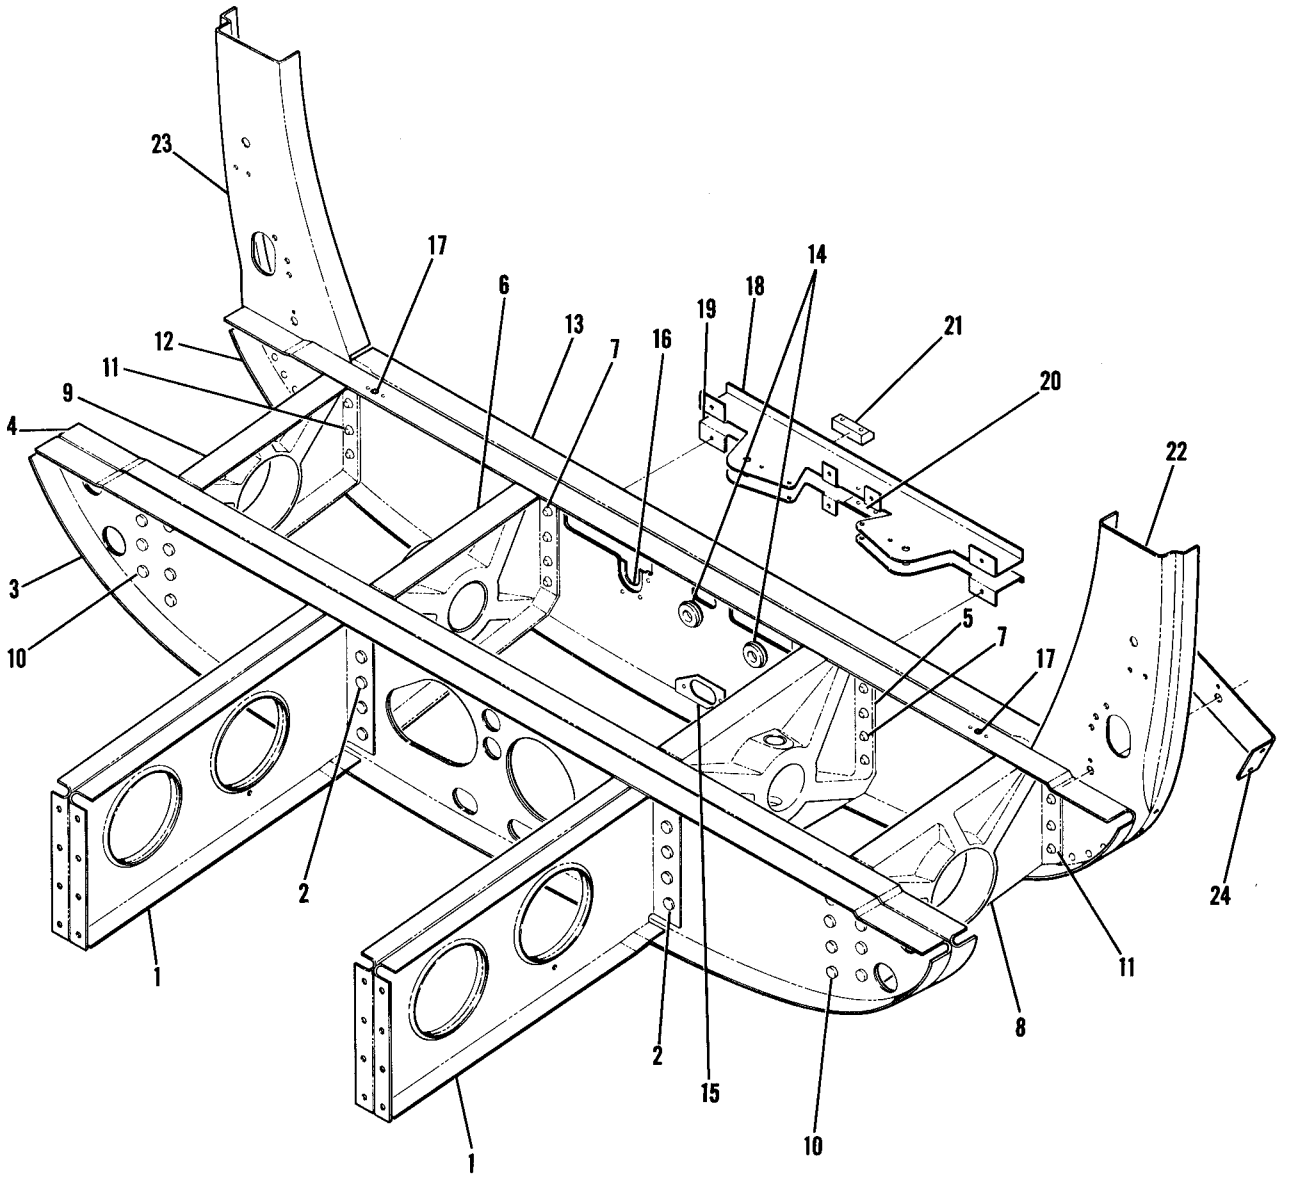

172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234

Figure 47. Landing Gear Bulkhead Assembly Sta. 44.00 To 65.33

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
47 -	0511794-1	BULKHEAD ASSEMBLY-LANDING GEAR STA 44.00 TO 65.33	1	A
- 1	0511777-1	BULKHEAD ASSEMBLY-LANDING GEAR STA 44.00 TO 56.70	2	
		ATTACHING PARTS		
- 2	NAS178-8-9	PIN	10	
	NAS1428-9	PIN ALTERNATE	10	
	NAS179-8	COLLAR	10	
	NAS1080C8	COLLAR ALTERNATE	10	
		---*---		
	0511795-1	BULKHEAD ASSEMBLY-LANDING GEAR STA 56.70	1	
- 3	0511795-3	BULKHEAD-FORWARD STA 56.70	1	
- 4	0511795-2	BULKHEAD-AFT STA 56.70	1	
- 5	0541195-5	LANDING GEAR SUPPORT-INBOARD LH	1	
- 6	0541195-6	LANDING GEAR SUPPORT-INBOARD RH	1	
		ATTACHING PARTS		
- 7	NAS178-8-8	PIN	9	
	NAS1428-8	PIN ALTERNATE	9	
	NAS179-8	COLLAR	9	
	NAS1080C8	COLLAR ALTERNATE	9	
		---*---		
	0512124-15	FAIRLEAD USED ON 0511795-1 ONLY	1	
- 8	0541196-1	LANDING GEAR SUPPORT-OUTBOARD LH	1	
- 9	0541196-2	LANDING GEAR SUPPORT-OUTBOARD RH	1	
		ATTACHING PARTS		
-10	NAS178-8-8	PIN	8	
	NAS1428-8	PIN ALTERNATE	8	
	NAS179-8	COLLAR	8	
	NAS1080C8	COLLAR ALTERNATE	8	
-11	NAS178-8-10	PIN	9	
	NAS1428-8	PIN ALTERNATE	9	
	NAS179-8	COLLAR	9	
	NAS1080C8	COLLAR ALTERNATE	9	
		---*---		
	0511796-1	BULKHEAD ASSEMBLY-LANDING GEAR STA 65.33 WEU 0511796-7	1	B
	0511796-7	BULKHEAD ASSEMBLY-LANDING GEAR STA 65.33	1	C
-12	0511796-3	BULKHEAD-FORWARD STA 65.33 WEU 0511796-9	1	B
	0511796-9	BULKHEAD-FORWARD STA 65.33	1	C
-13	0511796-2	BULKHEAD-AFT STA 65.33 WEU 0511796-8	1	B
	0511796-8	BULKHEAD-AFT STA 65.33	1	C
-14	S338-7	FAIRLEAD HALF	4	
		ATTACHING PARTS		
	S339-P2	CLIP	1	
		---*---		
-15	0511807-1	FAIRLEAD	1	
-16	0511808-1	RUB STRIP	1	
-17	NAS680A4	NUTPLATE	2	
-18	0512132-11	BRACKET ASSEMBLY-AILERON PULLEY UPPER WEU 0512132-15	1	B
	0512132-15	BRACKET ASSEMBLY-AILERON PULLEY UPPER	1	C
	0512132-4	FAIRLEAD	1	
-19	0512132-10	BRACKET ASSEMBLY-AILERON PULLEY LOWER WEU 0512132-17	1	B
	0512132-17	BRACKET ASSEMBLY-AILERON PULLEY LOWER	1	C
-20	0512132-4	FAIRLEAD	1	
-21	0512132-5	FAIRLEAD	1	
-22	0512187-1	CHANNEL-BULKHEAD LH	1	
-23	0512187-2	CHANNEL-BULKHEAD RH	1	
-24	0512134-2	BRACKET-PULLEY LH	1	
	0512134-3	BRACKET-PULLEY RH	1	

A---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 F17201234
B---172 SERIAL 17259224 THRU 17259884
F172 SERIAL F17200750 THRU F17200804
C---172 SERIAL 17259885 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Fuselage (Cont)

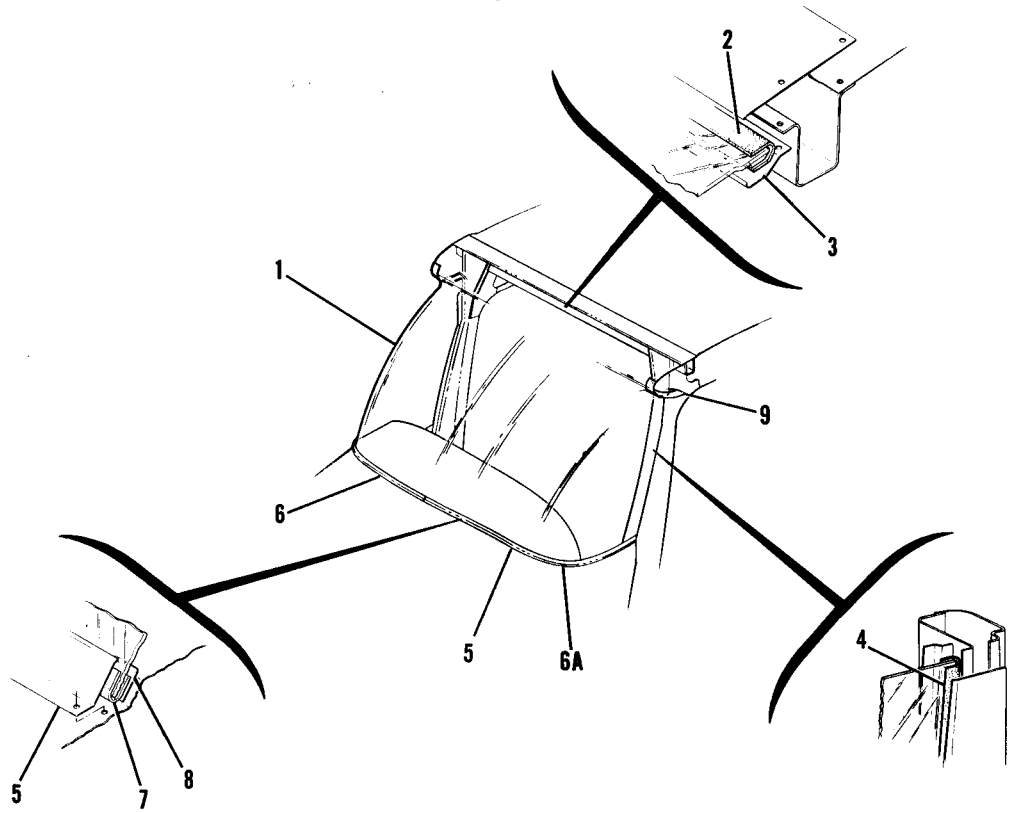


Figure 48. Windshield Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
48 -		WINDSHIELD INSTALLATION	NP	
- 1	0513230-10	WINDSHIELD ASSEMBLY	1	A
	0513230-12	WINDSHIELD ASSEMBLY	1	B
	0513230-14	WINDSHIELD ASSEMBLY TINTED	1	C
- 2	S1389-4	SEAL-FELT 46.50 IN LG BULK ITEM REF S1389-4-46.50	AR	
- 3	0513312-1	RETAINER-WINDSHIELD TOP	1	
- 4	S1389-1	SEAL-FELT 18.50 IN LG BULK ITEM REF S1389-1-18.50	AR	
- 5	0513230-3	RETAINER-OUTSIDE LH WHEN EXHAUSTED USE 0513230-18	1	
- 6	0513230-4	RETAINER-OUTSIDE RH WHEN EXHAUSTED USE 0513230-18	1	
- 6A	0513230-18	RETAINER-OUTSIDE ONE PIECE	1	
- 7	S1389-2	SEAL-FELT 76.50 IN LG BULK ITEM REF S1389-2-76.50	AR	
- 8	0513230-5	RETAINER-INSIDE LH	1	A
	0513230-6	RETAINER-INSIDE RH	1	A
- 9	0413530-1	COVER-WINDSHIELD UPPER EDGE	1	D

A---172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17250573 THRU 17263458
F172 SERIAL F172-0019 THRU F17201234
C---172 SERIAL 17255289 THRU 17263458
D---172 SERIAL 17260359 THRU 17263458
F172 SERIAL F1720880 THRU F17201234

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
49 -	0512030-200	FUSELAGE ASSEMBLY-AFT SECTION	1	E
	0512030-201	FUSELAGE ASSEMBLY-AFT SECTION	1	B
	0512030-202	FUSELAGE ASSEMBLY-AFT SECTION CLEAR GLASS ONLY	1	K
	0512100-200	FUSELAGE ASSEMBLY-AFT SECTION CLEAR GLASS ONLY	1	U
	0512100-205	FUSELAGE ASSEMBLY-AFT SECTION CLEAR GLASS ONLY	1	AC
		FUSELAGE ASSEMBLY-AFT SECTION	NP	X
- 1	SEE FIG 44	BULKHEAD ASSEMBLY-FUSELAGE AFT SECTION STA 65.33	1	S
	SEE FIG 45	BULKHEAD ASSEMBLY-FUSELAGE AFT SECTION STA 65.33	1	T
- 1A	0511262-1	ROTARY CLUTCH ASSEMBLY-LH	1	F
	0511262-2	ROTARY CLUTCH ASSEMBLY-RH	1	F
		ATTACHING PARTS		
- 1B	AN525-10R8	SCREW	2	F
	AN960-10	WASHER	2	F
	MS21044N3	NUT	2	F
		---*---		
- 1C	0512192-1	BUMPER-DOOR LATCH	2	AF
- 2	SEE FIG 52	TAILCONE ASSEMBLY-AFT	1	
- 2A	SEE FIG 51	EXTENDED BAGGAGE INSTALLATION	1	AF
- 3	0512100-3	SKIN-LH WEU 0512100-21	1	V
- 4	0512100-4	SKIN-RH WEU 0512100-21	1	V
	0512100-21	SKIN-REAR SADDLE ONE PIECE	1	AB
	0512100-26	SKIN-REAR SADDLE ONE PIECE	1	X
- 5	0512030-5	SKIN-LH	1	K
- 5A	0512100-11	SKIN-LH	1	L
- 6	0512030-6	SKIN-RH	1	K
	0512100-12	SKIN-RH	1	L
- 7	0512100-5	SKIN-LH	1	S
	0512100-19	SKIN-LH	1	T
- 8	0512100-6	SKIN-RH	1	S
	0512100-20	SKIN-RH	1	T
- 9	0512100-7	SKIN-LH	1	
-10	0512100-8	SKIN-RH	1	
-11	0512100-13	SKIN-LH	1	
-12	0512100-14	SKIN-RH	1	
-13	0512030-13	WINDOW-SIDE LH	1	M
	0512180-5	WINDOW-SIDE LH	1	L
	0512030-23	WINDOW-SIDE LH TINTED	1	J
	0512180-7	WINDOW-SIDE LH TINTED	1	N
-14	0512030-14	WINDOW-SIDE RH	1	M
	0512180-6	WINDOW-SIDE RH	1	L
	0512030-24	WINDOW-SIDE RH TINTED	1	J
	0512180-8	WINDOW-SIDE RH TINTED	1	N
-15	S1166-1	SEAL-WINDOW 69.00 IN LG BULK ITEM	2	
		REF S1166-1-69.00		
-16	0512100-9	WINDOW-REAR	1	
	0512030-25	WINDOW-REAR TINTED	1	P
-17	S1389-2	SEALER-REAR WINDOW	2	
-18	S1389-3	SEALER-REAR WINDOW	2	
-19	S1389-1	SEALER-REAR WINDOW	1	
-20	0512036-1	STIFFENER	1	U
	0512036-3	STIFFENER	1	T
-21	0512021-1	BRACE-LH	1	S
	0512021-3	BRACE-LH	1	T
-21A	0512181-1	BRACKET-WINDOW MOULDING LH	1	
	0512181-2	BRACKET-WINDOW MOULDING RH	1	
-22	0512021-2	BRACE-RH	1	S
-22A	0512021-4	BRACE-RH	1	T
-22B	0512188-2	GUSSET ASSEMBLY-RH	1	T
	0512188-1	GUSSET ASSEMBLY-LH	1	T
-22C	NAS680A4	NUTPLATE	1	T
-23	0512022-1	STRINGER ASSEMBLY-UPPER CENTER LINE	1	
-24	0512022-3	PLATE	1	
-25	NAS680A3K	NUTPLATE	7	
-26	0512023-1	CHANNEL-LH	1	
-27	0512023-2	CHANNEL-RH	1	
-28	0512023-5	CHANNEL ASSEMBLY-LH	1	
	NAS697A08K	NUT PLATE	1	
-29	0512023-4	CHANNEL-RH	1	
-30	0512026-1	BULKHEAD ASSEMBLY-FUSELAGE STA. 90	1	G
	0512026-6	BULKHEAD ASSEMBLY-FUSELAGE STA 90	1	H
	0512026-10	BULKHEAD ASSEMBLY-FUSELAGE STA 90.0	1	T
-31	0512028-1	STIFFENER-LH	1	
-32	0512028-2	STIFFENER-RH	1	
	0512029-7	STRINGER ASSEMBLY-AFT CABIN TOP LH	1	S
	0512029-1	STRINGER ASSEMBLY-AFT CABIN TOP RH	1	T
-32A	0512190-1	CLIP-SHOULDER HARNESS ATTACH	2	T

CONTINUED ON NEXT PAGE

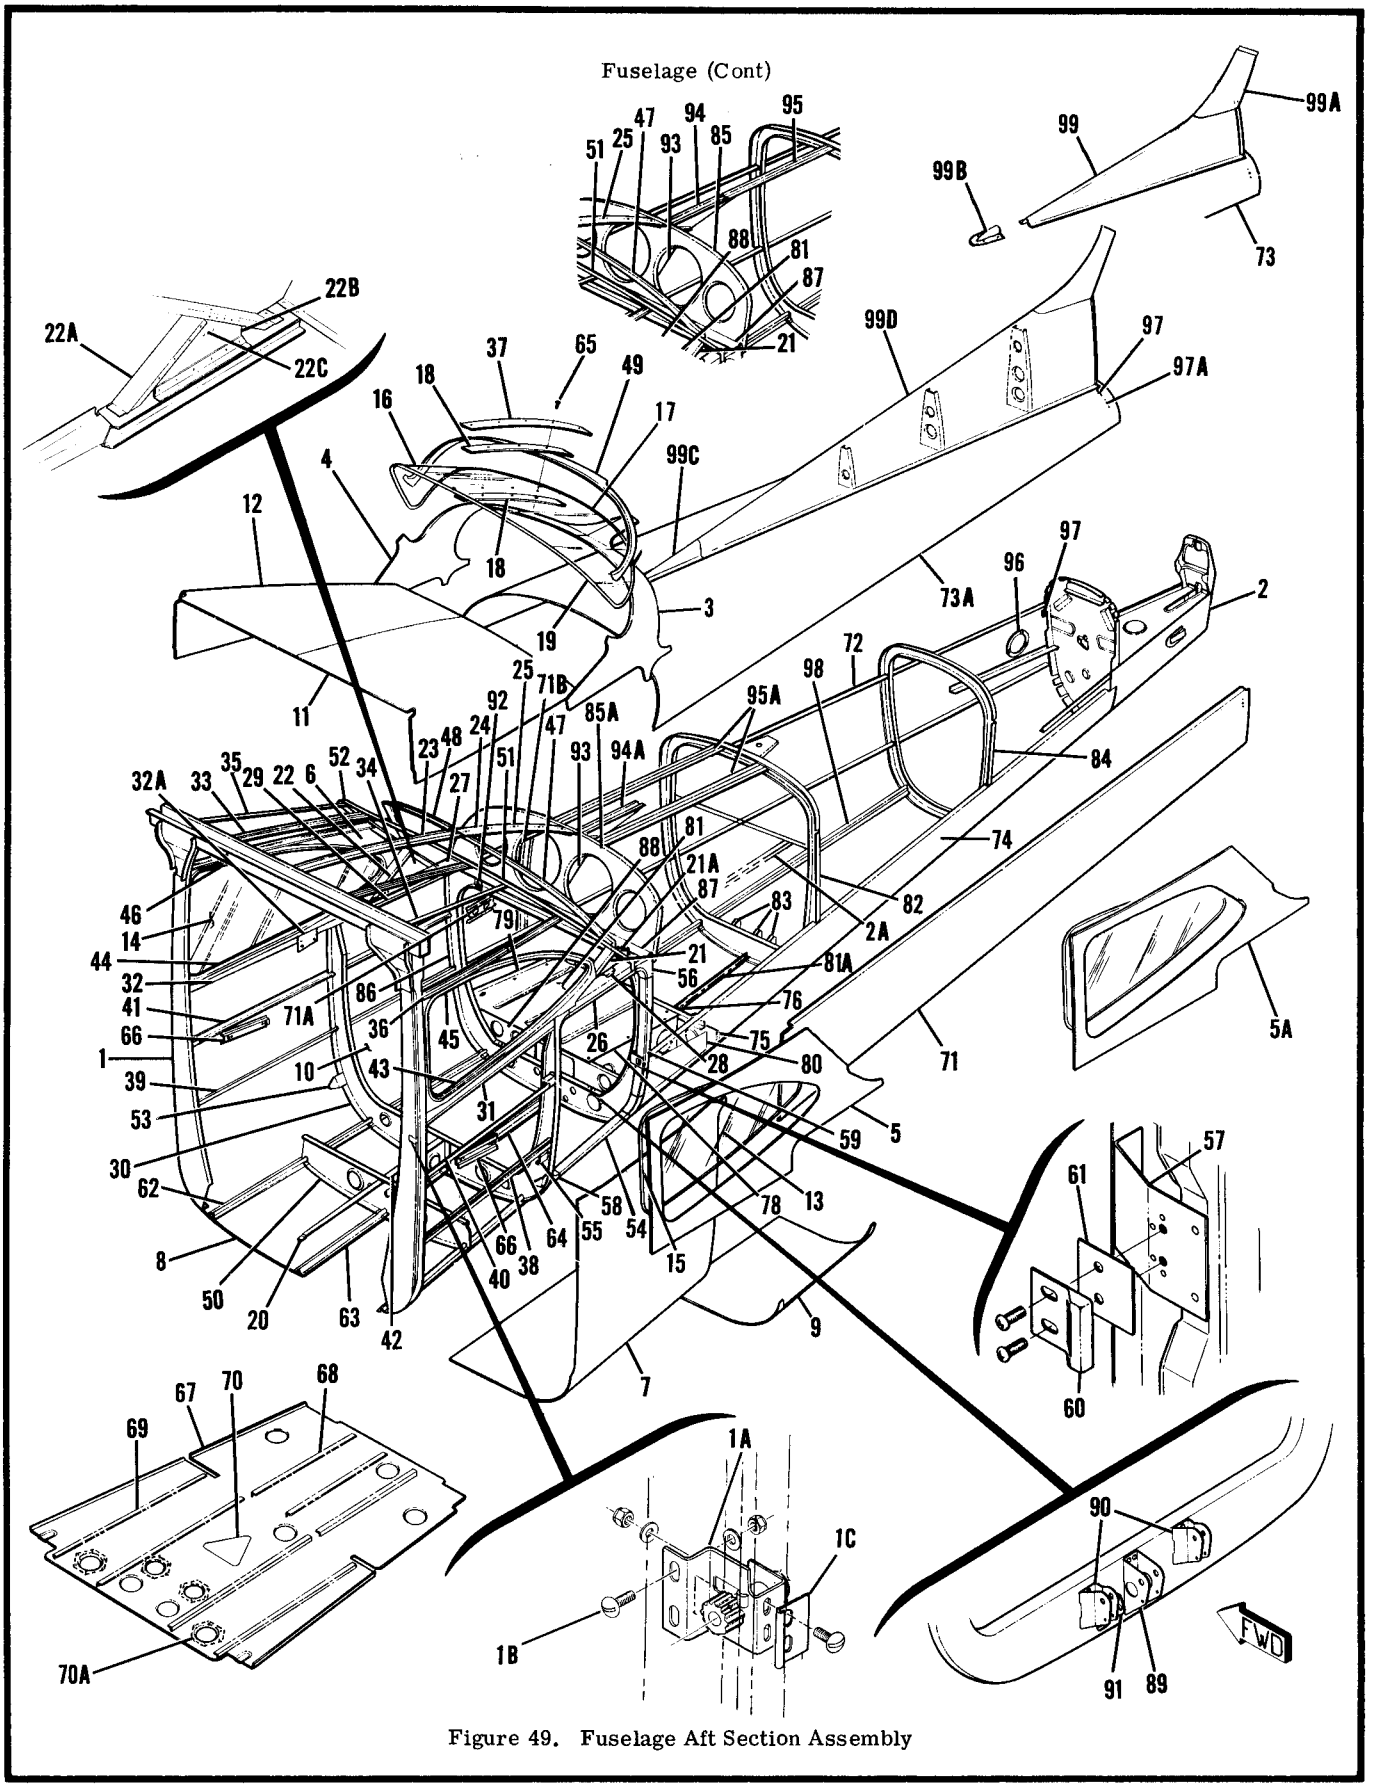


Figure 49. Fuselage Aft Section Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
49 -33	0512029-8	STRINGER ASSEMBLY-AFT CABIN TOP RH	1	S
	0512029-2	STRINGER ASSEMBLY-AFT CABIN TOP RH	1	T
	0411680	HANGER-HEADLINER	2	
-34	0512029-3	STRINGER-LH	1	
-35	0512029-4	STRINGER-RH	1	
-36	0512029-9	STRINGER-LH	1	S
	0512029-5	STRINGER-LH	1	T
	0512029-10	STRINGER-RH	1	S
	0512029-6	STRINGER-RH	1	T
-37	0512032-1	RETAINER ASSEMBLY WHEN EXHAUSTED USE 0512032-4	1	Q
	0512032-4	RETAINER ASSEMBLY	1	R
-38	0512037-1	STRINGER-LH	1	S
	0512037-5	STRINGER-LH	1	T
-39	0512037-1	STRINGER-RH	1	S
	0512037-6	STRINGER-RH	1	T
-40	0512037-3	STRINGER-LH	1	
-41	0512037-4	STRINGER-RH	1	
-42	0512025-1	BULKHEAD ASSEMBLY-STA 80 TO 90	1	S
	NAS697A4	NUTPLATE	1	S
	0512189-1	BULKHEAD ASSEMBLY-STA 80 TO 90	1	T
	NAS697A4	NUTPLATE	2	T
-43	0512038-1	RETAINER-LH LOWER	1	K
	0512177-1	RETAINER-LH LOWER	1	L
-44	0512038-2	RETAINER-RH LOWER	1	K
	0512177-2	RETAINER-RH LOWER	1	L
-45	0512038-3	RETAINER-LH UPPER	1	K
	0512178-1	RETAINER-LH UPPER FWD	1	L
	0512176-1	RETAINER-LH UPPER AFT	1	L
-46	0512038-4	RETAINER-RH UPPER	1	K
	0512178-2	RETAINER-RH UPPER FWD	1	L
	0512176-2	RETAINER-RH UPPER AFT	1	L
-47	0512040-1	RETAINER-LH	1	
-48	0512040-2	RETAINER-RH	1	
-49	0512040-3	RETAINER-REAR WINDOW	1	AD
	0512040-4	RETAINER-REAR WINDOW	1	AE
-50	0512024-1	BULKHEAD	1	
	0512024-3	BULKHEAD ASSY FLOATPLANE ONLY	1	W
-51	0512020-1	BULKHEAD-LH	1	K
	0512020-3	BULKHEAD-LH	1	L
-52	0512020-2	BULKHEAD-RH	1	K
	0512020-4	BULKHEAD-RH	1	L
	0711084-7	PLATE ASSEMBLY-ANCHOR LH	1	
-53	0711084-8	PLATE ASSEMBLY-ANCHOR RH	1	
-54	0711101-8	JAMB-BAGGAGE DOOR LOWER	1	
-55	0711101-10	BRACKET-LOWER HINGE	1	
	0711101-11	BRACKET-UPPER HINGE	1	
-56	0711101-36	GUSSET-BAGGAGE DOOR UPPER	1	
	0711101-43	GUSSET-BAGGAGE DOOR LOWER	1	
-57	0711101-37	REINFORCEMENT ASSEMBLY-STRIKE WEU 0512066-1	1	AG
	0512066-1	BRACKET ASSY-STRIKE	1	AH
	NAS684A08	NUTPLATE	2	
-58	0711101-35	STOP-BAGGAGE DOOR FORWARD	1	
-59	0711101-34	STOP-BAGGAGE DOOR AFT	1	
-60	0311319-1	PLATE-STRIKE	1	
-61	0311319-2	SHIM-STRIKE PLATE	1	
		ATTACHING PARTS		
	AN515-8R6	SCREW	2	
		---*---		
	0512039-1	STRINGER-LH	1	S
	0512039-7	STRINGER LH	1	T
-62	0512039-2	STRINGER-RH	1	S
	0512039-8	STRINGER RH	1	T
-63	0512039-3	STRINGER	1	S
	0512039-6	STRINGER	1	T
-64	0512039-4	STRINGER	1	
-65	AN509-10R10	SCREW	5	Q
	AN525-10R10	SCREW	5	R
-66	0500229-2	SUPPORT-REAR ARM REST	2	
	1717034-1	BRACKET ASSY-ARMREST	1	
	NAS680A3	NUTPLATE	1	
-67	0512034-1	FLOORBOARD ASSEMBLY	1	S
	0512034-7	FLOORBOARD ASSEMBLY	1	T
	0512034-9	FLOORBOARD ASSEMBLY FLOATPLANE ONLY	1	W
-68	0512107-13	STIFFENER	3	

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
49 -69	0512107-12	STIFFENER	4	S
	0512034-42	STIFFENER	4	T
-70	0512033	PLATE	1	S
	0512033-2	PLATE	1	T
-70A	S1209-1	DOUBLER FLOATPLANE ONLY	4	W
-71	0512010-3	SKIN-LH	1	A
	0512010-9	SKIN-LH	1	B
-71A	1260474-1	BRACKET-ELT	1	AE
-71B	0512010-24	STIFFENER-RH	1	AE
-72	0512010-4	SKIN-RH	1	A
	0512010-8	SKIN-RH	1	B
-73	0512010-5	SKIN-TOP	1	Y
-73A	0512010-19	SKIN-TOP	1	X
-74	0512010-21	SKIN-BOTTOM	1	
	0512015-2	BULKHEAD ASSEMBLY	1	
-75	0512015-7	BULKHEAD-LH	1	
	0512015-8	BULKHEAD-RH	1	
-76	0512015-11	ANGLE	1	
	NAS680A3	NUTPLATE	4	
-77		DELETED-NOT USED		
-78	0512015-3	BULKHEAD ASSEMBLY	1	
	NAS680A3	NUTPLATE	3	
-79	0512015-4	ANGLE ASSEMBLY	1	
	NAS680A3	NUTPLATE	3	
-80	0512015-12	BULKHEAD ASSEMBLY	1	B
	NAS680A4	NUTPLATE	1	
-81	0512017-1	SHELF-RADIO	1	
		ATTACHING PARTS		
	NAS520-10R6	SCREW	14	
		---*---		
-81A	0512060-1	STRINGER	1	
-82	0512016-1	BULKHEAD ASSEMBLY-STA 142.00 WEU 0512016-5	1	Y
	0512016-5	BULKHEAD ASSEMBLY-STA 142.00	1	X
-83	0512160-3	BRACKET	3	
		ATTACHING PARTS		
	AN520-10R7	SCREW	1	
	MS21044N3	NUT	1	
		---*---		
-84	0512016-3	BULKHEAD-STA. 178.00	1	
	0512016-7	BULKHEAD-STA. 178.00 FLOATPLANE ONLY	1	
-85	0512012-1	BULKHEAD-CANTED STA 108.00 WEU 0512012-2	1	Y
-85A	0512012-2	BULKHEAD-CANTED STA 108.00	1	X
-86	0512011-1	BULKHEAD ASSEMBLY-STA 108.00	1	
-87	0512019-1	ANGLE	1	
-88	0512015-1	BULKHEAD ASSEMBLY	1	
	NAS680A3	NUTPLATE	4	
-89	0510164	BRACKET-PULLEY	1	
-90	0412467	BRACKET-PULLEY	1	
-91	0512160-2	BRACKET-PULLEY	2	
		ATTACHING PARTS		
	AN3-3A	BOLT	1	
	MS21044N3	NUT	1	
		---*---		
-92	0512045-3	BRACKET ASSEMBLY-BAGGAGE NET	2	
	MS21044N3	NUTPLATE	1	
-93	0512013-2	BRACKET ASSEMBLY-STRINGER STA 108.00	1	S
	NAS680A3	NUTPLATE	2	S
	0512013-1	BRACKET-STRINGER STA 108.00	1	T
-94	0512014-1	BRACKET-STRINGER	1	Y
-94A	0512014-2	BRACKET-STRINGER	1	X
-95	0512018-1	STRINGER	1	Y
-95A	0512059-1	STRINGER	2	X
-96	S237-2	DOUBLER	1	
-97	S1863-3A	NUT	2	
-97A	S1862-2A	NUT	2	
-98	0512041-4	STRINGER-RH	1	B
	0512041-7	STRINGER-LH	1	B
	0512041-4	STRINGER-RH	1	T
	0512041-5	STRINGER-LH	1	T

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
49 -99	0531006-1		DORSAL ASSEMBLY WHEN EXHAUSTED USE 0531006-72 ----------	1	C
	0531006-72	*	DORSAL ASSEMBLY ----------	1	U
	0531006-76		DORSAL ASSEMBLY ----------	1	Z
	S1366-1		CHANNEL-VINYL 8.00 IN LG BULK ITEM ----------	1	C
			REF S-1366-1-800		
	S1611-1		CHANNEL-VINYL 18.00 IN LG BULK ITEM ----------	1	
			REF S1611-1-18.00		
	S1611-1		SEAL-VINYL 6 IN LG BULK ITEM REF S1611-1-16.00	2	
-99A	0531012-1		FAIRING ----------	1	Z
-99B	0731605-3		FAIRING ----------	1	D
-99C	0531020-1		FAIRING ----------	1	X
-99D	SEE FIG 50		DORSAL ASSY ----------	1	X
			NOTE. *WHEN ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIAL 17252425, F172-0160, P17257188 OR FP172-0003, ALSO ORDER 0731605-3 FAIRING.		
			A---172 SERIAL 17249545 THRU 17263458 F172 SERIAL F172-0001 THRU F17201234 B---P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 C---172 SERIAL 17249545 THRU 17252424 F172 SERIAL F172-0001 THRU F172-0159 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 D---172 SERIAL 17252425 THRU 17259903 F172 SERIAL F172-0160 THRU F17201234 E---172 SERIAL 17249545 THRU 17253392 F172 SERIAL F172-0001 THRU F172-0179 F---172 SERIAL 17253392 THRU 17263458 F172 SERIAL F172-0180 THRU F17201234 G---172 SERIAL 17249545 THRU 17255794 F172 SERIAL F172-0001 THRU F172-0479 H---172 SERIAL 17255795 THRU 17259223 F172 SERIAL F172-0480 THRU F17200754 J---172 SERIAL 17255289 THRU 17257161 K---172 SERIAL 17253393 THRU 17257161 F172 SERIAL F172-0180 THRU F172-0559 L---172 SERIAL 17257162 THRU 17263458 F172 SERIAL F172-0560 THRU F17201234 M---172 SERIAL 17249545 THRU 17257161 F172 SERIAL F172-0001 THRU F172-0559 N---172 SERIAL 17257162 THRU 17263458 O---172 SERIAL 17252425 THRU 17257161 F172 SERIAL F172-0160 THRU F172-0559 P---172 SERIAL 17255289 THRU 17263458 Q---172 SERIAL 17249545 THRU 17258130 F172 SERIAL F172-0001 THRU F172-0654 R---172 SERIAL 17258131 THRU 17263458 F172 SERIAL F17200655 THRU F17201234 S---172 SERIAL 17249545 THRU 17259223 F172 SERIAL F172-0001 THRU F17200754 T---172 SERIAL 17259224 THRU 17263458 F172 SERIAL F17200755 THRU F17201234		
			CONTINUED ON NEXT PAGE		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
49 -		U---172 SERIAL 17257162 THRU 17259223 F172 SERIAL F172-0560 THRU F17200754 V---172 SERIAL 17249545 THRU 17259780 F172 SERIAL F172-0001 THRU F1720829 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 W---172 SERIAL 17260759 THRU 17263458 X---172 SERIAL 17259904 THRU 17263458 Y---172 SERIAL 17249545 THRU 17259903 F172 SERIAL F172-0001 THRU F17201234 Z---172 SERIAL 17257162 THRU 17259903 F172 SERIAL F172-0560 THRU F17201234 AA---DELETED AB---172 SERIAL 17259781 THRU 17259903 F172 SERIAL F17200830 THRU F17201234 AC---172 SERIAL 17259224 THRU 17259903 F172 SERIAL F17200755 THRU F17201234 AD---172 SERIAL 17249545 THRU 17259903 F172 SERIAL F172-0001 THRU F17200804 AE---172 SERIAL 17259904 THRU 17203458 F172 SERIAL F17200805 THRU F17201234 AF---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234 AG---172 SERIAL 17249545 THRU 17263409 F172 SERIAL 172-0001 THRU F17201234 AH---172 SERIAL 17263410 THRU 17263458		

Fuselage (Cont)

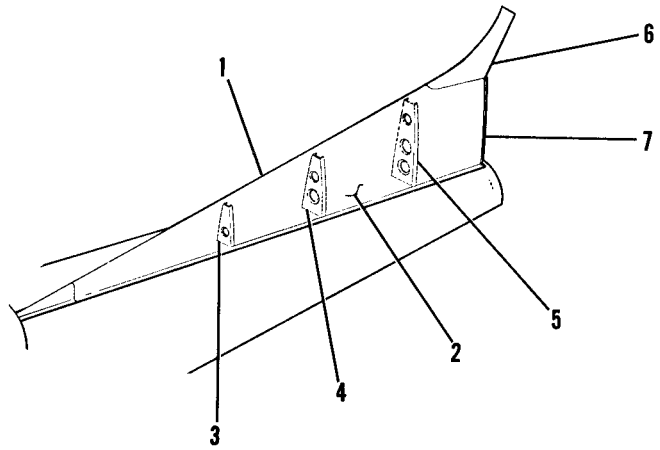


172 SERIAL 17259904 THRU 17263458

Figure 50. Dorsal Fin Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50 - 1	0531019-8	DORSAL FIN ASSEMBLY	1	A
- 2	0531019-9	SKIN	1	
- 3	0531019-3	RIB-FWD	1	
- 4	0531019-4	RIB-CENTER	1	
- 5	0531015-5	RIB-AFT	1	
- 6	0531012-2	FAIRING	1	
- 7	S1161-1	SEAL-VINYL 14 IN LG	2	
		A---172 SERIAL 17259904 THRU 17263458		

Fuselage (Cont)

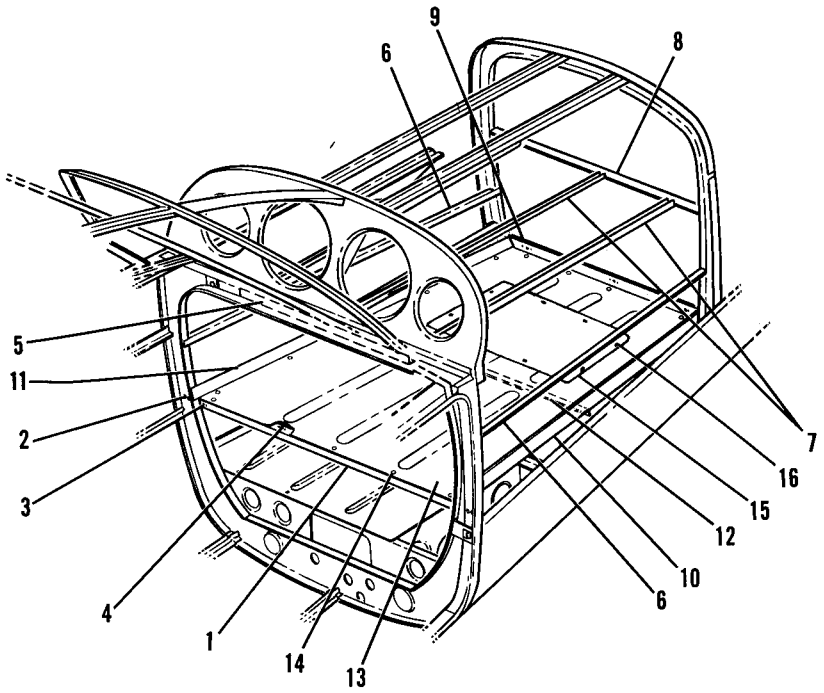

172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234

Figure 51. Extended Baggage Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51 -		EXTENDED BAGGAGE INSTALLATION	NP	A
- 1	0512193-1	SUPPORT ASSY-FWD LOWER	1	
		ATTACHING PARTS		
- 2	AN520-10R6	SCREW	4	
		---*---		
- 3	NAS697A3	NUTPLATE	6	
- 4	NAS680A3	NUTPLATE	5	
- 5	0512194-6	SUPPORT-FWD UPPER	1	
- 6	0512194-1	SUPPORT-SIDEWALL UPPER	2	
- 7	0512194-2	SUPPORT-UPPER	3	
- 8	0512194-4	SUPPORT-AFT UPPER	1	
	NAS680A3	NUTPLATE	3	
- 9	0512193-3	SUPPORT ASSY-AFT LOWER	1	
		ATTACHING PARTS		
	AN525-10R6	SCREW	4	
	MS21044N3	NUT	4	
		---*---		
	NAS680A3	NUTPLATE	5	
-10	0512193-5	SUPPORT ASSY-SIDE LH LOWER	1	
-11	0512193-6	SUPPORT ASSY-SIDE RH LOWER	1	
	NAS680A3	NUTPLATE	4	
-12	0512193-10	SUPPORT ASSY-CENTER	1	
	NAS680A3	NUTPLATE	2	
-13	0512195-1	SHELF-EXTENDED BAGGAGE WEU 0512195-6	1	B
	0512195-6	SHELF-EXTENDED BAGGAGE	1	C
		ATTACHING PARTS		
-14	AN525-10R8	SCREW	20	
		---*---		
-15	0512195-8	COVER-ACCESS	1	C
		ATTACHING PARTS		
-16	S1878-1	STUD	1	
		---*---		

A---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234
B---172 SERIAL 17261899 THRU 17262066
F172 SERIAL F17201035 THRU F17201234
C---172 SERIAL 17262067 THRU 17263458

Fuselage (Cont)


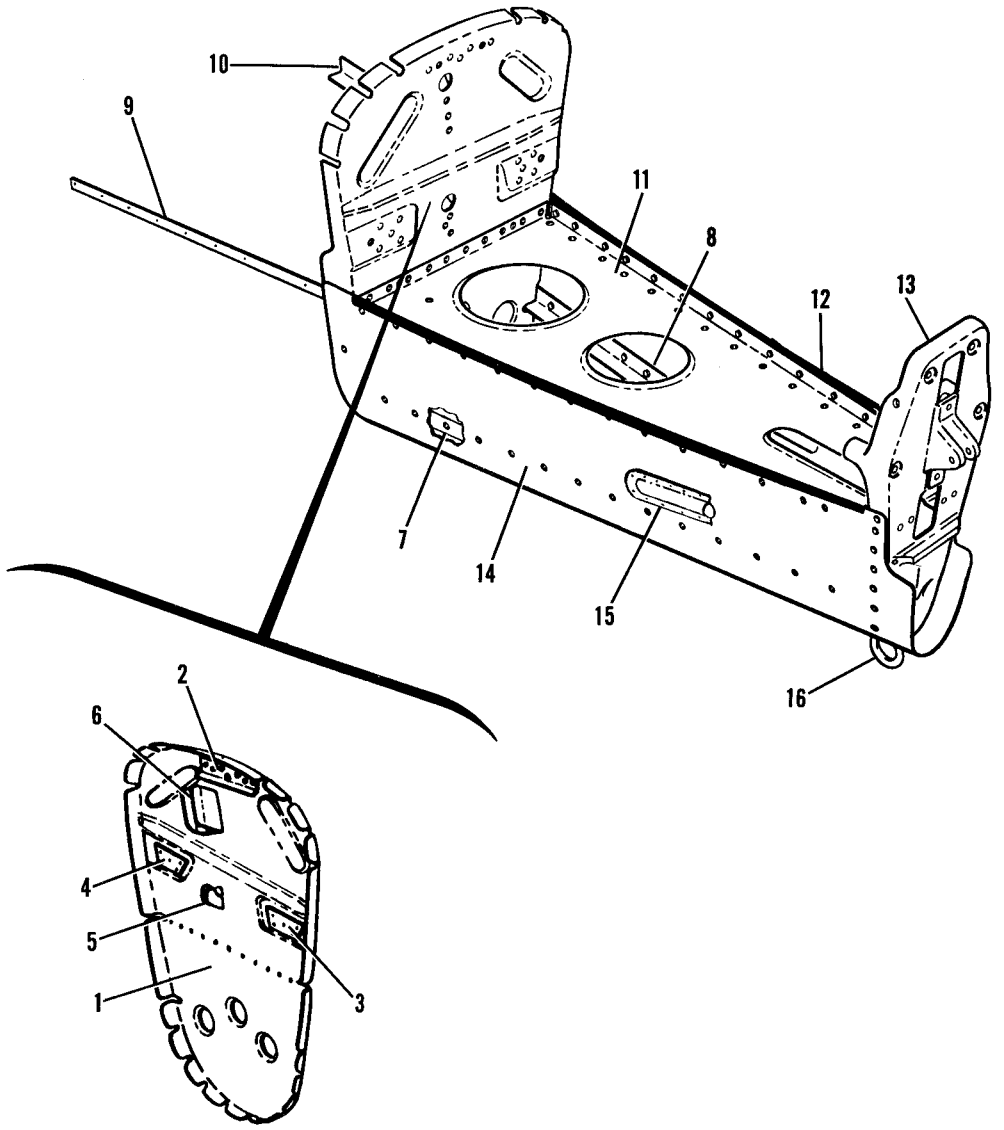


Figure 52. Fuselage Tailcone Assembly Sta. 205.812 To 228.812

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
52 -	0512008-2	TAILCONE ASSEMBLY-FUSELAGE STA 205.812 TO 228.812	1	A
	0512008-8	TAILCONE ASSEMBLY-FUSELAGE STA 205.812 TO 228.812	1	B
	0512008-9	TAILCONE ASSEMBLY-FUSELAGE STA 205.812 TO 228.812	1	C
- 1	0512157	BULKHEAD ASSEMBLY-FUSELAGE AFT SECTION STA 205.812	1	A
	0512157-5	BULKHEAD ASSEMBLY FUSELAGE AFT SECTION STA 205.812	1	D
		WEU 0512157-6		
	0512157-6	BULKHEAD ASSEMBLY-FUSELAGE AFT SECTION STA 205.812	1	E
- 2	0512157-2	DOUBLER-BULKHEAD REINFORCEMENT	1	
- 3	0512143	DOUBLER-BULKHEAD REINFORCEMENT LH	1	
- 4	0512143-1	DOUBLER-BULKHEAD REINFORCEMENT RH	1	
- 5	0512160-5	BRACKET-ELEVATOR PULLEY	1	
	AN520-10R8	SCREW HEAD ON FWD SIDE	1	
	MS21044N3	NUT	1	
	AN960-10L	WASHER	1	
- 6	0412467	BRACKET-TRIM TAB CONTROL PULLEY	1	
- 7	0512001-7	ANGLE-TAILCONE REINFORCEMENT LOWER LH	1	
- 8	0512001-8	ANGLE-TAILCONE REINFORCEMENT LOWER RH	1	
- 9	0512001-9	ANGLE-TAILCONE REINFORCEMENT UPPER LH	1	
-10	0512001-10	ANGLE-TAILCONE REINFORCEMENT UPPER RH	1	
-11	0512156	BULKHEAD-HORIZONTAL	1	
-12	S202RB	MOULDING 22 IN LG BULK ITEM REF S-202RB22.00	AR	
-13	0512159-2	BULKHEAD-FUSELAGE AFT SECTION STA 228.687	1	F
	0512159-3	BULKHEAD-FUSELAGE AFT SECTION STA 228.687	1	C
	0512165-1	PLATE	2	
	NAS395-14-3	NUT	1	
-14	0512008-4	SKIN-AFT SECTION FUSELAGE LOWER	1	
-15	0530011-2	FAIRING-TAILCONE	2	
	0512009-10	RUB STRIP	2	
-16	0422344	EYEBOLT-MOORING	1	
		ATTACHING PARTS		
	22NA-3-054	NUTPLATE EN	1	
	NAS680A5	NUTPLATE ALTERNATE	1	
		---*---		
		A---172 SERIAL 17249545 THRU 17259223 F172 SERIAL F172-0001 THRU F17200754 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 B---172 SERIAL 17259224 THRU 17260253 F172 SERIAL F17200755 THRU F17200879 C---172 SERIAL 17260254 THRU 17263458 F172 SERIAL F1720088 THRU F17201234 D---172 SERIAL 17259224 THRU 17260758 F172 SERIAL F17200755 THRU F17200904 E---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200904 THRU F17201234 F---172 SERIAL 17249545 THRU 17260758 F172 SERIAL F172-0001 THRU F17200904 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		

Fuselage (Cont)

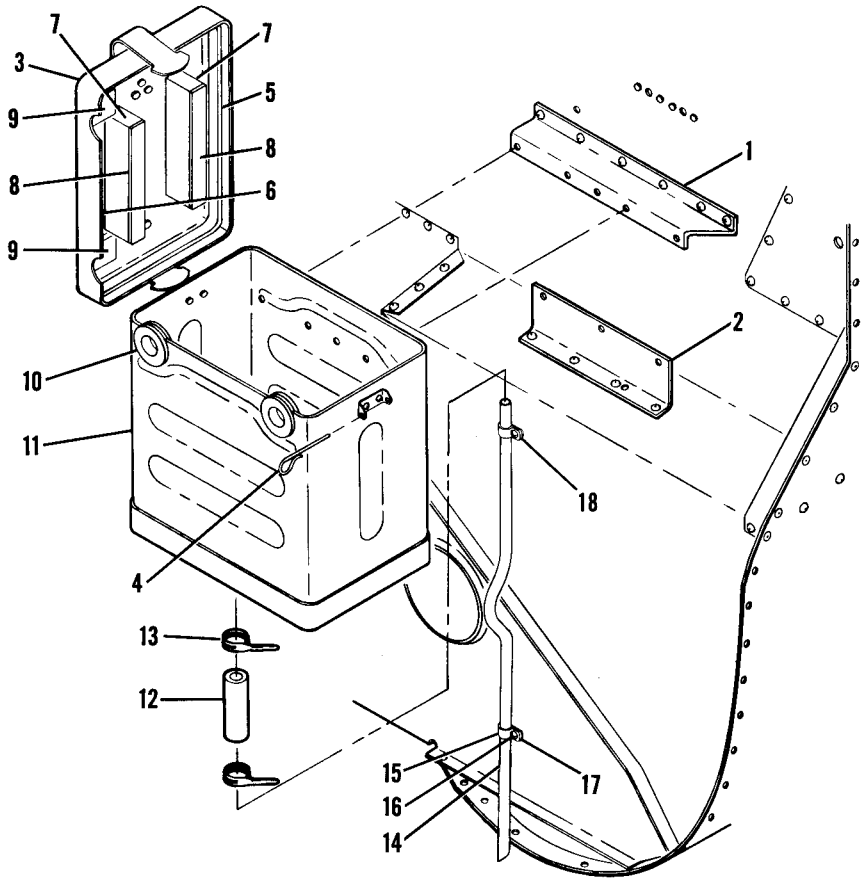


172 SERIAL 17249545 THRU 17263458
F172 SERIAL F172-0001 THRU F17201234

Figure 53. Battery Box Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53 -		BOX INSTALLATION-BATTERY	NP	A
	0513011-11	BOX ASSEMBLY-BATTERY	1	
		ATTACHING PARTS		
- 1	0513253-1	BRACKET-BATTERY BOX UPPER	1	
- 2	0513328-2	BRACKET-BATTERY BOX LOWER	1	
		---*---		
- 3	0413307-21	LID ASSEMBLY-BATTERY BOX	1	
		ATTACHING PARTS		
- 4	AN415-2	PIN	2	
		---*---		
- 5	S1441-1	SEAL 20 IN LG BULK ITEM REF S-1441-1-20.0	1	
- 6	S1441-1	SEAL 5.19 IN LG BULK ITEM REF S-1441-1-5.19	1	
- 7	0413307-5	SPACER-LID WEU 0413354-1	2	
	0413354-1	SPACER	2	
		ATTACHING PARTS		
	S1021Z8-5	SCREW	2	
		---*---		
- 8	0413307-6	INSULATOR-LID	2	
- 9	0413307-7	INSULATOR-LID	2	
-10	MS35489-12	GROMMET	2	
-11	0413307-18	SPOTWELD ASSEMBLY-BATTERY BOX	1	
-12	S51-6	HOSE 2.25 IN LG BULK ITEM REF S-51-6-9	1	B
		ATTACHING PARTS		
-13	NAS397-12-1	CLAMP	2	B
		---*---		
-14	0500106-303	LINE ASSEMBLY-DRAIN	1	B
	S1071-4	TUBE 18.5 IN LG BKI REF S1071-4-18.5	1	C
		ATTACHING PARTS		
-15	AN742D6-27	CLAMP	1	
-16	S1021Z8-6	SCREW	1	
-17	NAS446-4-3	NUT	1	
-18	S1494-8	CLAMP	1	C
		---*---		
		A---172 SERIAL 17249545 THRU 17263458 F172 SERIAL F172-0001 THRU F17201234 B---172 SERIAL 17249545 THRU 17256512 F172 SERIAL F172-0001 THRU F172-0431 F172-0436 THRU F172-0442 F172-0444 THRU F172-0446 C---172 SERIAL 17256513 THRU 17263458 F172 SERIAL F172-0432 THRU F172-0435 F172-0443, F172-0447 THRU F17201234		

This page intentionally left blank.

Fuselage (Cont)

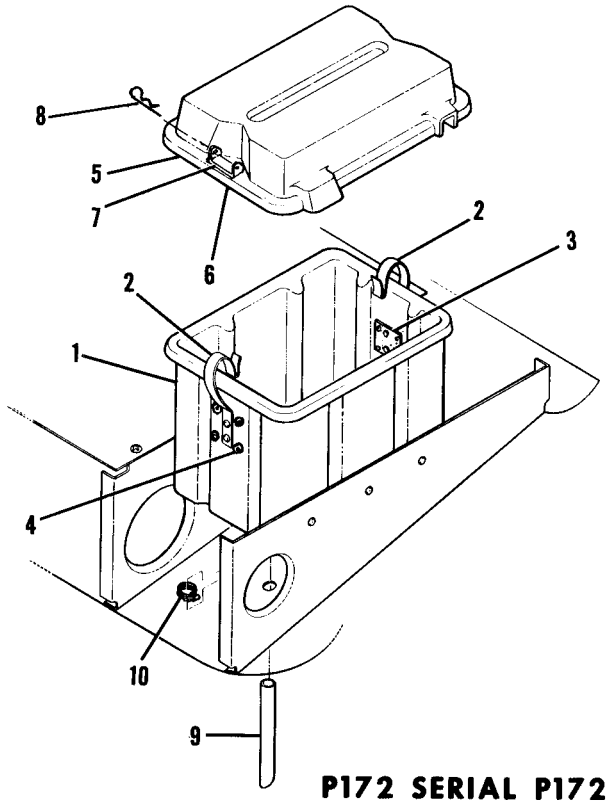

P172 SERIAL P17257120 THRU P17257188

Figure 54. Battery Box Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
54 -		BOX INSTALLATION-BATTERY	NP	A
	0512167-18	BOX ASSEMBLY-BATTERY	1	
- 1	0512167-24	BASE ASSEMBLY-BATTERY BOX	1	
- 2	0512167-10	LATCH-SPRING	2	
- 3	0512167-17	PLATE-BACKING	2	
- 4	AN960-4L	WASHER	8	
- 5	0512167-26	COVER ASSEMBLY-BATTERY BOX	1	
- 6	0512167-16	PLATE-BACKING	2	
- 7	0413307-13	CATCH	2	
- 8	AN415-2	PIN	2	
- 9	S1071-4-	TUBE 4.50 IN LG BULK ITEM REF S1071-4-4.50		
		ATTACHING PARTS		
-10	NAS397-8	CLAMP	1	
		---*---		
		A---P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		

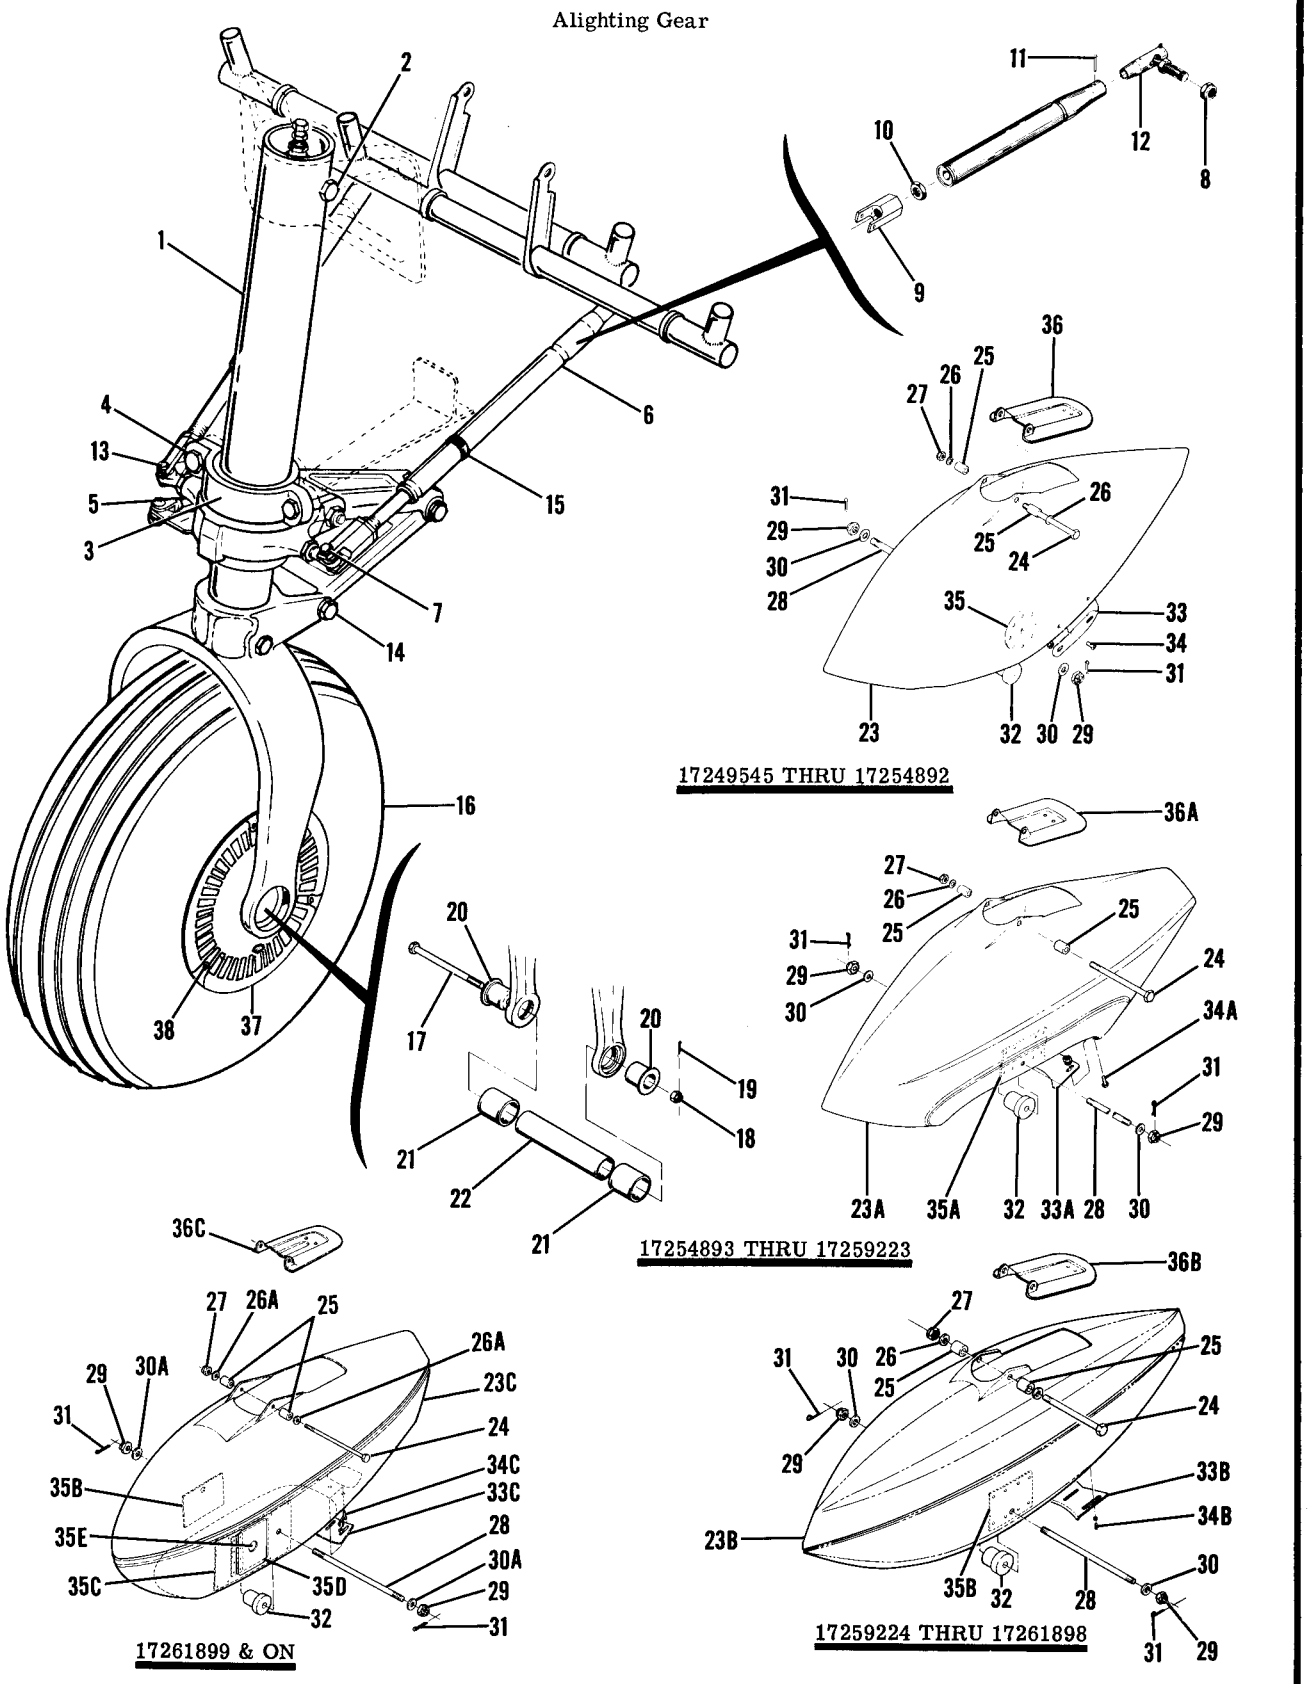


Figure 55. Nose Gear Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
55 -		NOSE GEAR INSTALLATION	NP	
- 1	SEE FIG 57	SHOCK STRUT ASSEMBLY-NOSE GEAR	1	
		ATTACHING PARTS		
- 2	AN5-31A	BOLT	1	
	MS21042L5	NUT	3	
- 3	0543018-1	CAP	1	
- 4	AN5-10A	BOLT	2	
	AN960-516	WASHER	2	
	0543042-1	SHIM .032	AR	
	0543042-2	SHIM .016	AR	
		---*---		
- 5	SEE FIG 64	DAMPENER ASSEMBLY-SHIMMY	1	
		ATTACHING PARTS		
	AN23-17	BOLT	1	
	AN320-3	NUT	2	
	NAS75-3-009	SPACER	1	
	MS24665-132	COTTER PIN	2	
	AN23-11	BOLT	1	
	AN960-10L	WASHER	1	
		---*---		
- 6	0543022-1	TUBE ASSEMBLY-STEERING LH	1	
	0543022-2	TUBE ASSEMBLY-STEERING RH	1	
		ATTACHING PARTS		
- 7	AN3-10A	BOLT	1	
	MS21044N3	NUT	1	
- 8	MS21042L6	NUT	1	
		---*---		
- 9	0543023	CLEVIS	1	
-10	AN316-6R	NUT	1	
-11	MS20435-4	RIVET	1	
-12	C109	BALL JOINT TOK	1	
-13	S1823-3	BEARING-ROD END	2	
-14	AN316-6R	NUT	2	
-15	NAS397-16	CLAMP	2	
-16	SEE FIG 59	WHEEL ASSEMBLY-NOSE GEAR	1	
	SEE FIG 62	WHEEL ASSEMBLY-NOSE GEAR ALT	1	
		ATTACHING PARTS		
-17	AN5-47	BOLT	1	
-18	AN310-5	NUT	1	
-19	MS24665-134	COTTER PIN	1	
-20	0543001	FERRULE-AXLE BOLT	2	
-21	0543037-1	SPACER-AXLE NOSE WHEEL	2	
-22	0543003	TUBE-AXLE	1	
		---*---		
-23	0743609-17	SPEED FAIRING ASSEMBLY-NOSE GEAR	1	B
-23A	0743625-4	SPEED FAIRING ASSEMBLY-NOSE GEAR	1	E
-23B	0543065-1	SPEED FAIRING ASSEMBLY-NOSE GEAR	1	F
-23C	0543079-3	SPEED FAIRING ASSEMBLY-NOSE GEAR	1	G
		ATTACHING PARTS		
-24	AN5-51A	BOLT	1	
-25	0743009-1	SPACER	2	
-26	S1450-5-12-035	WASHER	2	H
-26A	AN960-516L	WASHER	AR	G
-27	MS21042L5	NUT	1	
-28	0742410-27	STUD	1	
-29	AN310-5	NUT	2	
-30	AN960-516L	WASHER	2	H
-30A	S1450-5-12-035	WASHER	2	G
-31	MS24665-136	COTTER PIN	2	
-32	0742410-8	FERRULE	2	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
55 -33	0743609-6	SCRAPER	1	B
-33A	0743625-11	SCRAPER	1	E
-33B	0541205-2	SCRAPER	1	F
-33C	0541221-2	SCRAPER	1	G
		ATTACHING PARTS		
-34	NAS221-7	SCREW	4	B
	MS21044N3	NUT	4	B
-34A	AN520-10R10	SCREW	3	E
	AN960-10	WASHER	3	E
	MS21044N3	NUT	3	E
-34B	AN520-10R6	SCREW	3	F
	AN960-10	WASHER	3	F
	MS21044N3	NUT	3	F
-34C	AN520-10R12	SCREW	3	G
	AN960-10	WASHER	6	G
	MS21044N3	NUT	3	G
		---*---		
-35	0742410-14	DOUBLER	2	B
-35A	0743625-9	DOUBLER	2	E
-35B	0541207-3	DOUBLER	2	F
	0541207-3	DOUBLER	1	G
-35C	0541222-5	DOUBLER-FAIRING	1	G
-35D	0541223-13	DOOR ASSY-SPEED FAIRING	1	G
-35E	KM610-64	LATCH-DOOR CLC	1	
-36	1243616-1	COVER PLATE ASSEMBLY	1	B
-36A	0543063-1	COVER PLATE ASSEMBLY	1	E
-36B	0743063-5	COVER PLATE ASSEMBLY	1	F
-36C	0543063-7	COVER PLATE ASSEMBLY	1	G
		ATTACHING PARTS		
	AN4-31	BOLT	1	
	AN310-4	NUT	1	
	AN960-416L	WASHER	AR	
	MS24665-134	COTTER PIN	1	
		---*---		
-37	0743627-1	HUB CAP-NOSE GEAR VALVE STEM SIDE	1	C
	0743627-3	HUB CAP-NOSE GEAR VALVE STEM SIDE	1	D
	0743627-2	HUB CAP-NOSE GEAR	1	C
	0743627-4	HUB CAP-NOSE GEAR	1	D
		ATTACHING PARTS		
-38	AN515-8R4	SCREW	3	A
	S2191-8-4	SCREW USE WITH MCCAULEY WHEEL	3	
	AN936A8	WASHER	3	A
		---*---		
	6241M	EXTENSION-VALVE DL	1	A
	3680C	EXTENSION-VALVE ALTERNATE SU	1	A

A---172 SERIAL 17254893 THRU 17263458
F172 SERIAL F172-0320 THRU F17201234
B---172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
C---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F172-0431
F172-0436 THRU F172-0442
F172-0444 THRU F172-0446
D---172 SERIAL 17256513 THRU 17263458
F172 SERIAL F172-0432 THRU F172-0435,
F172-0443, F172-0447 THRU F17201234
E---172 SERIAL 17254893 THRU 17259223
F172 SERIAL F172-0320 THRU F17200754
F---172 SERIAL 17259224 THRU 17261898
F172 SERIAL F17200755 THRU F17201034
G---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234
H---172 SERIAL 17249545 THRU 17261898
F172 SERIAL F172-0001 THRU F17201034

This page intentionally left blank.

Alighting Gear (Cont)

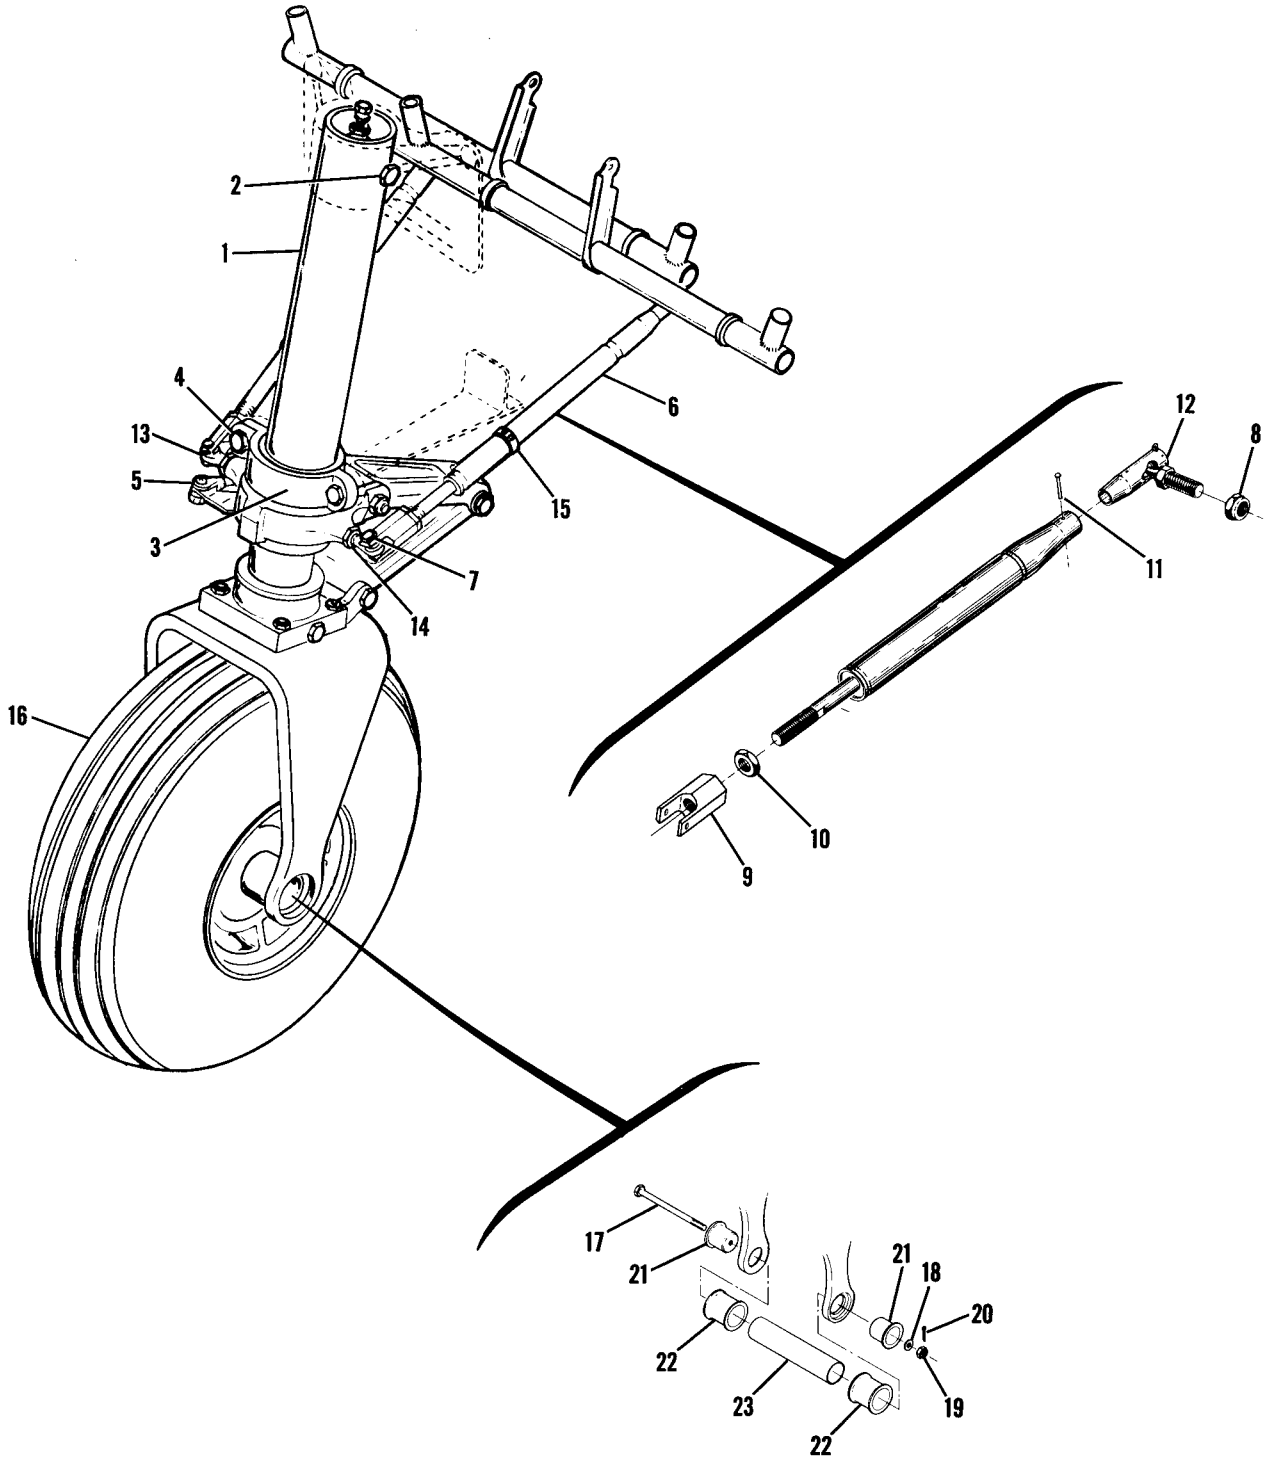


Figure 56. Heavy Duty Nose Gear Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
56 -		NOSE GEAR INSTALLATION-HEAVY DUTY	NP	
- 1	SEE FIG 58	SHOCK STRUT ASSEMBLY-HEAVY DUTY	1	
		ATTACHING PARTS		
- 2	AN5-31A	BOLT	1	
	MS21042L5	NUT	3	
- 3	0543018-1	CAP	1	
- 4	AN5-10A	BOLT	2	
	AN960-516	WASHER	2	
	0543042-1	SHIM .032	AR	
	0543042-2	SHIM .016	AR	
		---*---		
- 5	SEE FIG 65	DAMPENER ASSEMBLY-SHIMMY	1	
		ATTACHING PARTS		
	AN23-17	BOLT	1	
	AN320-3	NUT	2	
	NAS75-3-009	SPACER	1	
	MS24665-132	COTTER PIN	2	
	AN23-12	BOLT	1	
	AN960-10	WASHER	1	
		---*---		
- 6	0543022-1	TUBE ASSEMBLY-STEERING LH	1	
	0543022-2	TUBE ASSEMBLY-STEERING RH	1	
		ATTACHING PARTS		
- 7	AN3-10A	BOLT	1	
	MS21044N3	NUT	1	
- 8	MS21042L6	NUT	1	
		---*---		
- 9	0543023	CLEVIS	1	
-10	AN316-6R	NUT	1	
-11	MS20435M4-14	RIVET	1	
-12	C109	BALL JOINT TOR	1	
-13	S1823-3	BEARING-ROD END	2	
-14	AN316-6R	NUT	2	
-15	NAS397-12	CLAMP	2	
-16	SEE FIG 62	WHEEL ASSEMBLY-6.00X6 HEAVY DUTY	1	
		ATTACHING PARTS		
-17	AN5-55	BOLT	1	
-18	AN960-516L	WASHER	1	
-19	AN310-5	NUT	1	
-20	MS24665-136	PIN-COTTER	1	
-21	1442001-2	BUCKET-AXLE BOLT	2	
-22	1442002-1	SPACER-AXLE	2	
-23	1442001-1	TUBE-AXLE	1	
		---*---		

Alighting Gear (Cont)

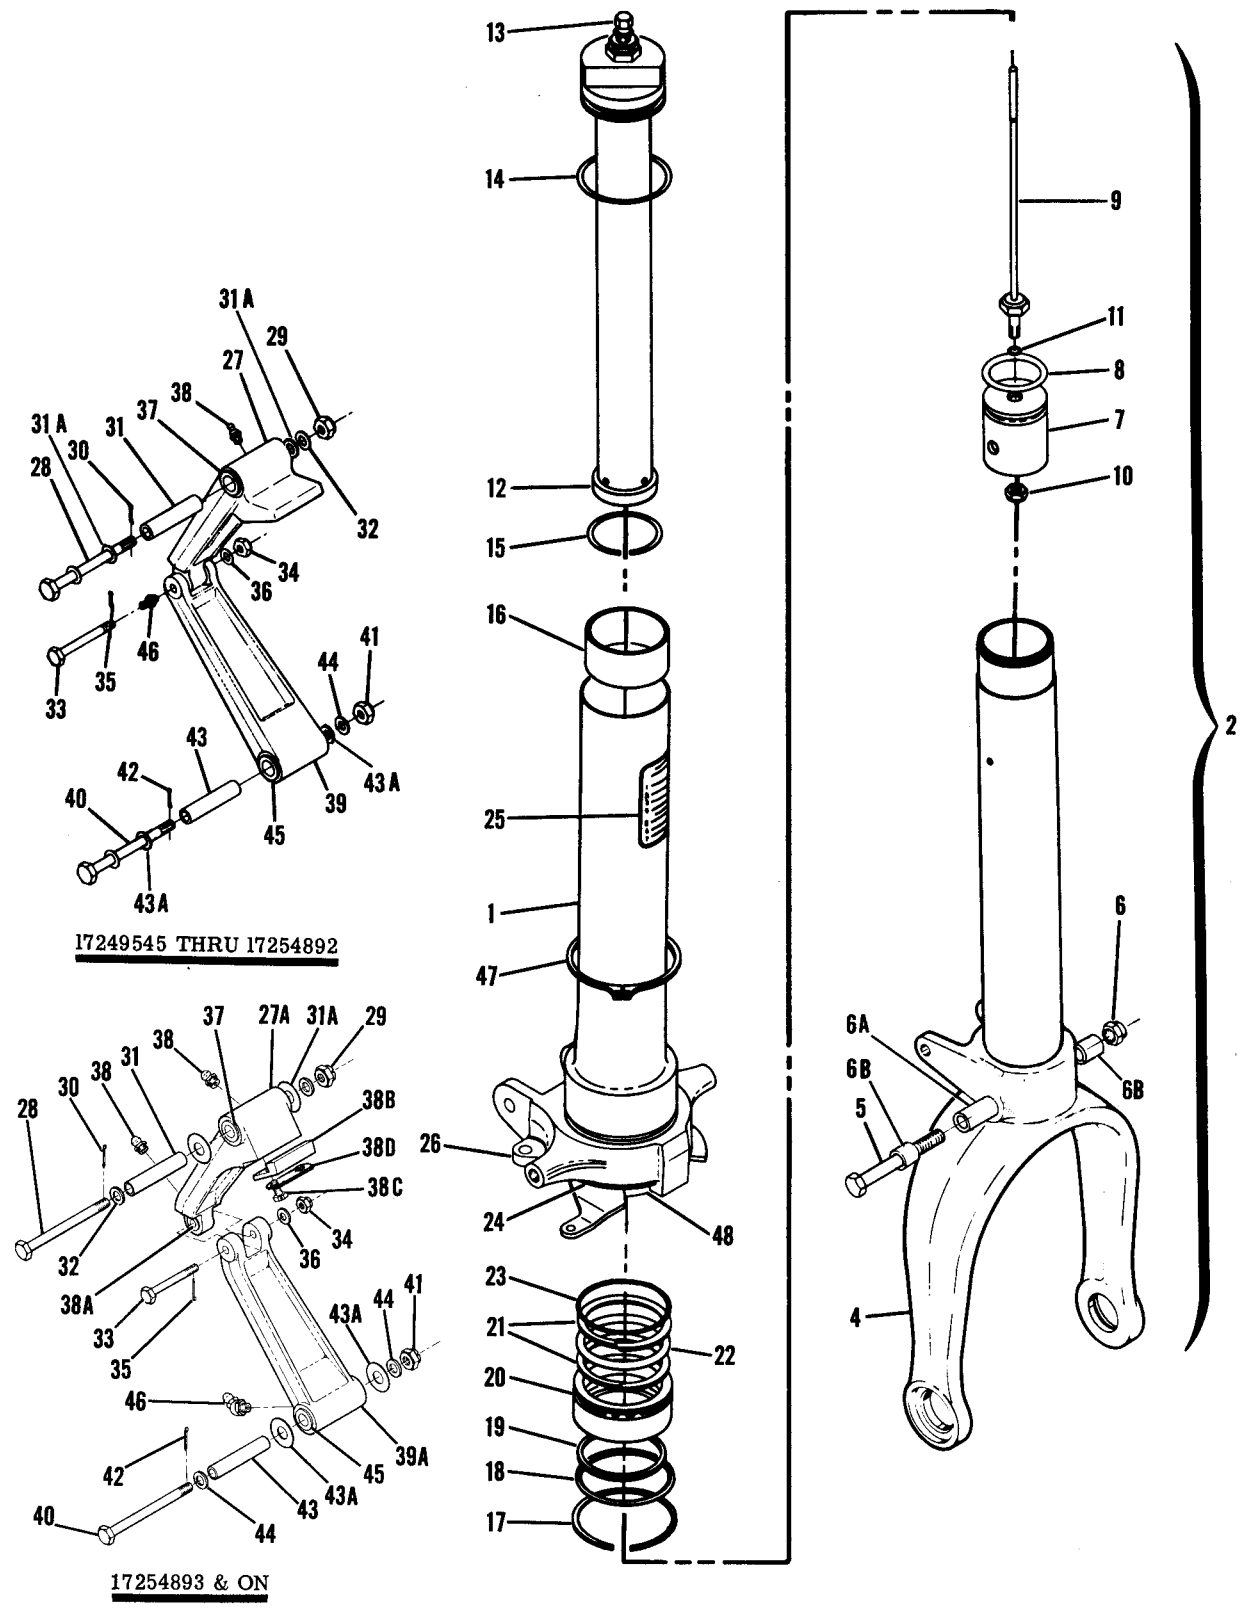


Figure 57. Nose Gear Shock Strut Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
57 -	0543039-200	SHOCK STRUT ASSEMBLY-NOSE GEAR	1	A
	0543062-200	SHOCK STRUT ASSEMBLY-NOSE GEAR	1	B
- 1	0543008-2	TUBE ASSEMBLY-SHOCK STRUT	1	
- 2	0543039-201	SHOCK STRUT ASSEMBLY-LOWER	1	A
	0543062-201	SHOCK STRUT ASSEMBLY-LOWER	1	B
- 3		DELETED		
- 4	SK175-9	FORK-NOSE GEAR	1	
		ATTACHING PARTS		
- 5	AN5-33A	BOLT	1	A
	AN5-47A	BOLT	1	B
- 6	MS21042L5	NUT	1	
- 6A	NAS75-5-231	BUSHING	1	
- 6B	0743009-1	BUSHING	2	B
		---*---		
- 7	0841200-7	PLUG-PIN BASE	1	A
	0743612-1	PLUG-PIN BASE	1	B
- 8	AN6227B26	O RING	1	
- 9	0543046-1	METERING PIN	1	A
	0442017-3	METERING PIN WEU 0442017-7	1	C
	0442017-7	METERING PIN	1	D
		ATTACHING PARTS		
-10	MS21042L4	NUT	1	
-11	AN6227B5	O RING	1	
		---*---		
-12	0543000-6	ORFICE PISTON SUPPORT ASSEMBLY	1	
-13	0543036-1	VALVE ASSEMBLY	1	
	AN901-5A	O RING	1	
-14	AN623083	O RING	1	
-15	0841200-19	LOCK RING	1	
-16	1243021-1	BEARING	1	
-17	0841200-25	LOCK RING	1	
-18	0841200-15	RING-PACK RETAINER	1	
-19	S11065-21	RING-SCRAPER SHWS	1	
-20	1243626-1	RING-PACK SUPPORT	1	
-21	S1628-329	RING-BACK UP	2	
-22	AN6227B32	O RING	1	
-23	AN6230B6	O RING	1	
-24	0543029	WASHER	1	
-25	0543032	PLACARD	1	A
	0543032-2	PLACARD	1	B
-26	0743011-8	ARM ASSEMBLY-NOSE GEAR STEERING	1	
	B44160	BEARING TOR	1	
	AN944-101A	FITTING-LUBRICATION	1	
-27	0543035-8	TORQUE LINK-UPPER	1	A
-27A	0442506-1	TORQUE LINK-UPPER	1	B
		ATTACHING PARTS		
-28	AN4-31	BOLT	1	
-29	AN310-4	NUT	1	
-30	MS24665-134	COTTER PIN	1	
-31	0543047-1	SPACER	1	
-31A	0543048-1	SHIM-TORQUE LINK	AR	
-32	AN960-416L	WASHER	AR	
-33	NAS464-3-22	BOLT	1	
-34	AN310-3	NUT	1	
-35	MS24665-132	COTTER PIN	1	
-36	AN960-10L	WASHER	1	
		---*---		
-37	NAS77-6-88	BUSHING	1	
-38	AN944-101A	FITTING-LUBE	2	
-38A	NAS77-3-23	BUSHING	2	
-38B	0442506-8	STOP LUG	1	B
-38C	AN3H3A	BOLT	2	B

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
57 -38D	0442506-9	LUG-SAFETY	1	
-39	0543035-3	TORQUE LINK-LOWER	1	A
-39A	0442506-2	TORQUE LINK-LOWER	1	B
		ATTACHING PARTS		
-40	AN4-31	BOLT	1	
-41	AN310-4	NUT	1	
-42	MS24665-134	COTTER PIN	1	
-43	0543047-1	SPACER	1	
-43A	0543048-1	SHIM-TORQUE LINK	AR	
-44	AN960-416L	WASHER	AR	
		---*---		
-45	NAS77-6-88	BUSHING	2	
-46	MS15002-3	FITTING-LUBE	1	
-47	MS16624-1275	RING-RETAINING	1	
-48	1243030-5	SHIM .006 THICK	AR	
	1243030-6	SHIM .012 THICK	AR	
	1243030-7	SHIM .020 THICK	AR	

A---172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17254893 THRU 17263458
F172 SERIAL F172-0320 THRU F17201234
C---172 SERIAL 17254893 THRU 17259223
F172 SERIAL F172-0320 THRU F17200754
D---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
58 -			SHOCK STRUT ASSEMBLY-HEAVY DUTY NOSE GEAR	NP	A
	0543062-202		SHOCK STRUT ASSEMBLY-HEAVY DUTY NOSE GEAR	1	B
- 1	0543008-2		TUBE-SHOCK STRUT	1	
- 2	0543045-200	*	HUB & BARREL ASSEMBLY-HEAVY DUTY	1	A
	0543062-203		HUB & BARREL ASSEMBLY-HEAVY DUTY	1	B
- 3	0543046-1		METERING PIN	1	A
	0442017-3		METERING PIN WEU 0442017-7	1	C
	0442017-7		METERING PIN	1	D
- 4	0841200-7		PLUG-PIN BASE	1	A
	0743612-1		PLUG-PIN BASE	1	B
- 5	MS21042L4		NUT	1	
- 6	AN6227B26		O RING	1	
- 7	AN6227B5		O RING	1	
- 8	AN5-51A		BOLT	1	
- 9	AN960-516L		WASHER	1	
-10	MS21042L4		NUT	1	
-11	0743009-1		SPACER-TOW BAR	2	
-11A	NAS75-5-231		BUSHING	1	B
-12	1243623-2	*	YOKE-NOSE GEAR FORK	1	
			ATTACHING PARTS		
-13	AN5-17A		BOLT	4	
-14	AN960-516L		WASHER	4	
-15	MS21042L4		NUT	4	
			---*---		
-16	0842000-44		BRACKET ASSEMBLY	1	A
-17	0543000-6		ORFICE PISTON SUPPORT ASSEMBLY	1	
-18	0543036-1		VALVE ASSEMBLY	1	
	AN901-5A		O RING	1	
-19	AN6230B3		O RING	1	
-20	0841200-19		LOCK RING	1	
-21	1243021-1		BEARING	1	
-22	0841200-25		LOCK RING	1	
-23	0841200-15		RING-PACK RETAINER	1	
-24	S11065-21		RING-SCRAPER SHWS	1	
-25	1243626-1		RING-PACK SUPPORT	1	
-26	S1628-329		RING-BACK UP	2	
-27	AN6227B32		O RING	1	
-28	AN623086		O RING	1	
-29	0543029		WASHER	1	

CONTINUED ON NEXT PAGE

Alighting Gear (Cont)

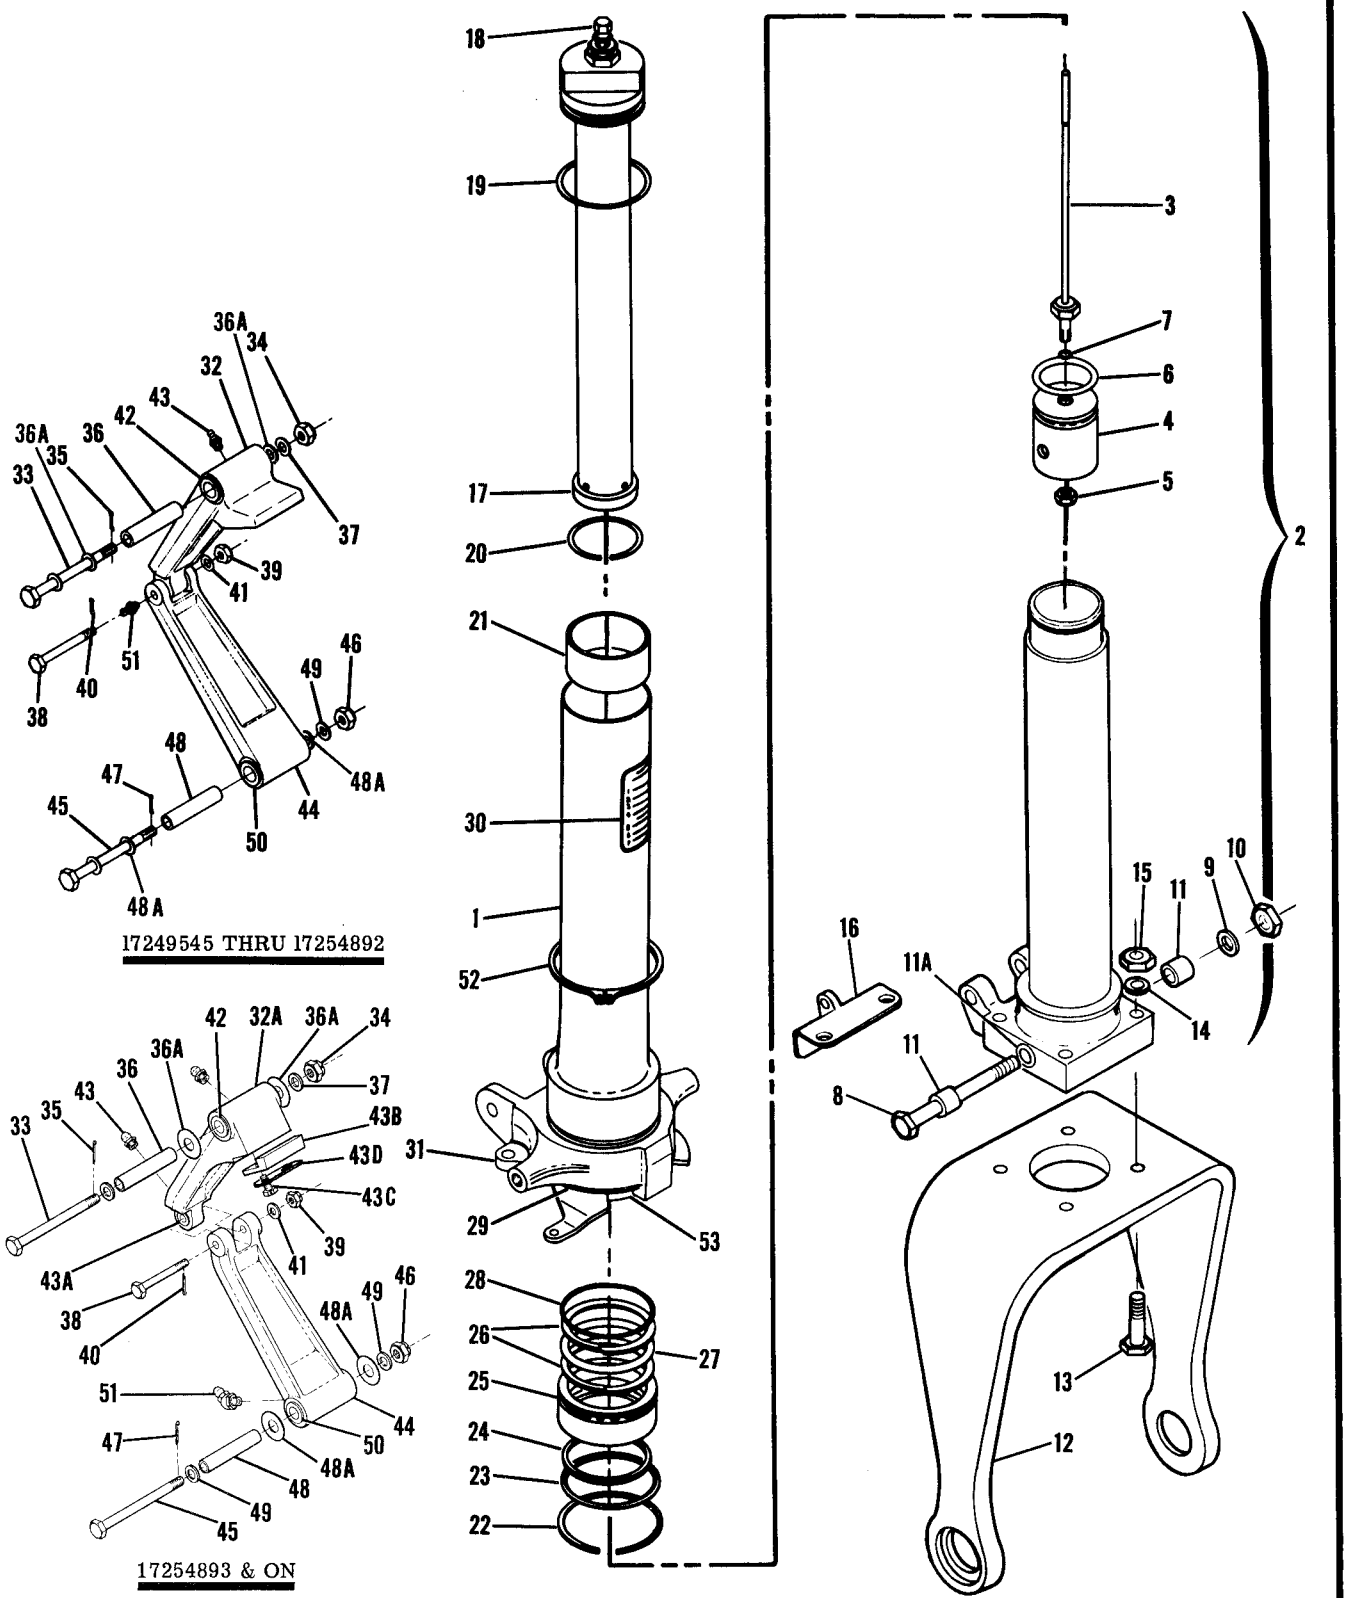



Figure 58. Heavy Duty Nose Gear Shock Strut Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
58 -30	0543032	PLACARD	1	A
	0543032-2	PLACARD	1	B
-31	0743011-8	ARM ASSEMBLY-NOSE GEAR STEERING	1	
	B4416D	BEARING TOR	1	
	AN944-101A	FITTING-LUBRICATION	1	
-32	0543035-8	TORQUE LINK-UPPER	1	A
-32A	0442506-1	TORQUE LINK-UPPER	1	B
		ATTACHING PARTS		
-33	AN4-31	BOLT	1	
-34	AN310-4	NUT	1	
-35	MS24665-134	COTTER PIN	1	
-36	0543047-1	SPACER	1	
-36A	0543048-1	SHIM-TORQUE LINK	AR	
-37	AN960-416L	WASHER	AR	
-38	NAS464-3-22	BOLT	1	
-39	AN310-3	NUT	1	
-40	MS24665-132	COTTER PIN	1	
-41	AN960-10L	WASHER	1	
		---*---		
-42	NAS77-6-88	BUSHING	2	
-43	AN944-101A	FITTING-LUBE	2	
-43A	NAS77-3-23	BUSHING	2	
-43B	0442506-8	STOP LUG	1	B
-43C	AN3-3A	BOLT	2	B
-43D	0442506-9	LUG-SAFETY	1	
-44	0543035-3	TORQUE LINK-LOWER	1	A
-44A	0442506-2	TORQUE LINK-LOWER	1	B
		ATTACHING PARTS		
-45	AN4-31	BOLT	1	
-46	AN310-4	NUT	1	
-47	MS24665-134	COTTER PIN	1	
-48	0543047-1	SPACER	1	
-48A	0543048-1	SHIM-TORQUE LINK	AR	
-49	AN960-416L	WASHER	AR	
		---*---		
-50	NAS77-6-88	BUSHING	2	
-51	MS15002-3	FITTING-LUG	2	
-52	MS16624-1275	RING-RETAINING	1	
-53	1243030-5	SHIM .006 THICK	AR	
	1243030-6	SHIM .012 THICK	AR	
	1243030-7	SHIM .020 THICK	AR	

NOTE. *WHEN REPLACING THIS PART ON AIRCRAFT PRIOR TO SERIAL 17251438 OR F172-0090 IT IS NECESSARY TO CONVERT TO 5-16 INCH DIAMETER BOLTS TO ATTACH THE NOSE WHEEL YOKE TO THE HUB. ENLARGE BOLT HOLES IN MATING PARTS AS NECESSARY TO CONVERT TO 5-16 INCH DIAMETER BOLTS.

A---172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
P172 SERIAL P17257168 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17254893 THRU 17263458
F172 SERIAL F172-0320 THRU F17201234
C---172 SERIAL 17254893 THRU 17259223
F172 SERIAL F172-0320 THRU F17200754
D---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234

Alighting Gear (Cont)

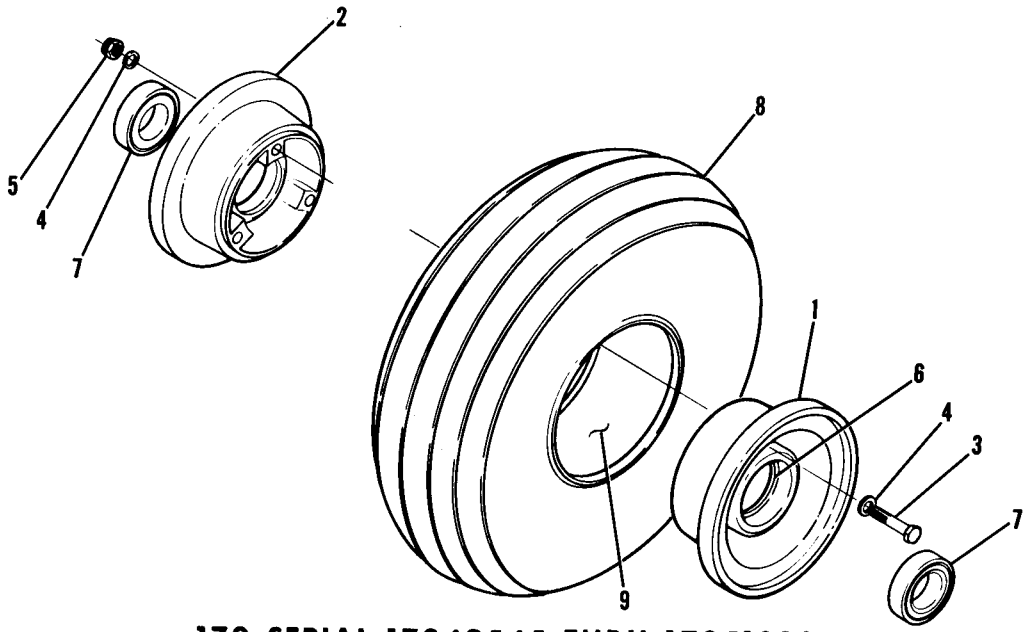


172 SERIAL 17249545 THRU 17251822
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0085

Figure 59. Goodyear Nose Gear Wheel Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
59 -		WHEEL ASSEMBLY-NOSE GEAR GOODYEAR	NP	A
		WHEEL ASSEMBLY GY 9532926	1	
- 1	9541898	WHEEL SUBASSEMBLY-FEMALE GY	1	
- 2	9541899	WHEEL SUBASSEMBLY-MALE GY	1	
		ATTACHING PARTS		
- 3	AN4-14A	BOLT	3	
- 4	AN960-416	WASHER	6	
- 5	FH428	NUT SPS	3	
		---*---		
- 6	LM67010XL	CUP-BEARING TYR	1	
- 7	LM67048XL	CONE-BEARING TYR	2	
- 8	C262003-0102	TIRE 5.00 X 5 -4 PLY	1	
- 9	C262023-0101	TUBE	1	
		A---172 SERIAL 17249545 THRU 17251822 P172 SERIAL P17257120 THRU P17257188 F172 SERIAL F172-0001 THRU F172-0085 FP172 SERIAL FP172-0001 THRU FP172-0003		

Alighting Gear (Cont)

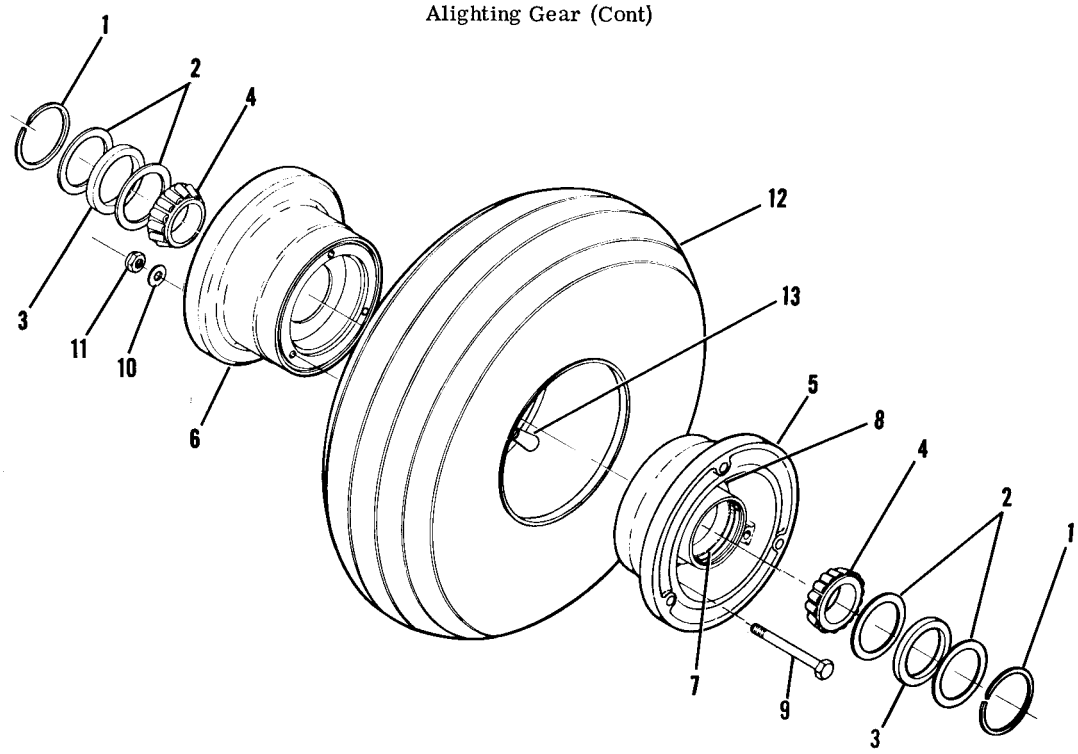

172 SERIAL 17251823 THRU 17263458
F172 SERIAL F172-0086 THRU F17201234

Figure 60. Cleveland Nose Gear Wheel Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
60 -		WHEEL ASSEMBLY-NOSE GEAR CLEVELAND	NP	A
	1241156-12	WHEEL ASSEMBLY CFP 40-77	1	
- 1	155-2	RING CFP	2	
- 2	153-8	RING-GREASE SEAL CFP	4	
- 3	154-6	GREASE SEAL-FELT CFP	2	
- 4	08125	BEARING CFP	2	
- 5	161-31	WHEEL HALF-MALE CFP	1	
- 6	162-28	WHEEL HALF-FEMALE CFP	1	
- 7	08231	CUP-BEARING CFP	1	
- 8	217-1	GROMMET CFP	1	
- 9	AN4-22A	BOLT	3	
-10	AN960-416	WASHER	3	
-11	MS21042L4	NUT	3	
-12	C262003-0102	TIRE 5.00 X 5 4 PLY RATED	1	
	C262001-0102	TIRE-WHITE WALL 5.00X5 4 PLY RATED WEU C262001-0202	1	B
	C262001-0202	TIRE-WHITE WALL 5.00X5 6 PLY RATED	1	C
-13	C262023-0101	TUBE 5.00 X 5	1	

A---172 SERIAL 17251823 THRU 17263458
F172 SERIAL F172-0086 THRU F17201234
B---172 SERIAL 17251823 THRU 17260758
F172 SERIAL F172-0086 THRU F17200904
C---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Alighting Gear (Cont)


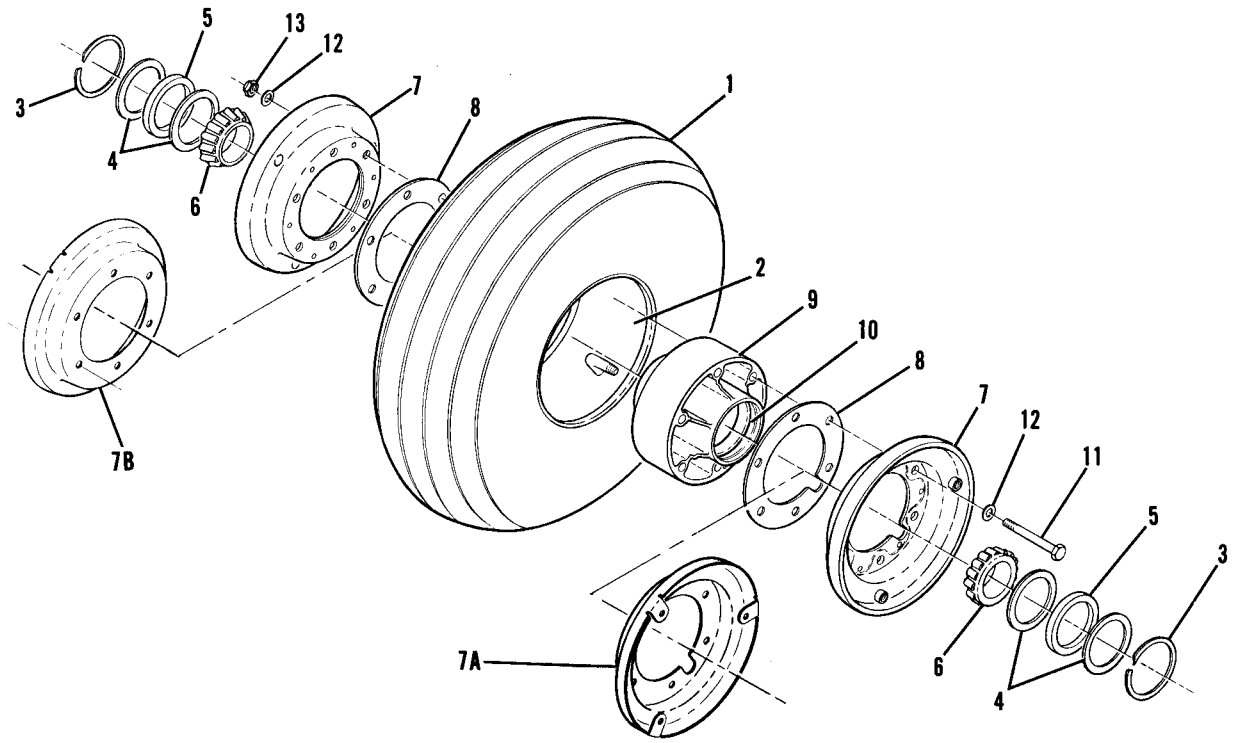


Figure 61. Nose Gear Wheel Assembly (Alternate)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
61 -		WHEEL ASSEMBLY-NOSE GEAR ALTERNATE	NP	A
- 1	C262003-0102	TIRE-BLACKWALL 5.00X5 4 PLY RATED	1	
	C262004-0101	TIRE-WHITEWALL 5.00X5 4 PLY RATED	1	
- 2	C262023-0101	TUBE 5.00X5	1	
	C163002-0201	WHEEL ASSEMBLY WEU C163003-0201	1	B
	C163003-0201	WHEEL ASSEMBLY	1	C
- 3	A1636-23	RING-RETAINING MCL	2	
- 4	A30048	RING-GREASE SEAL MCL	4	
- 5	A30047	GREASE SEAL-FELT MCL	2	
- 6	A30078-2	BEARING MCL	2	
- 7	D30058	FLANGE-WHEEL USE WITH C163002-0201 MCL	2	B
- 7A	C30172-1	FLANGE-WHEEL USE WITH C163003-0201 MCL	1	C
- 7B	C30172	FLANGE-WHEEL USE WITH C163003-0201 MCL	1	C
- 8	B30077	SPACER MCL	2	
- 9	C30057	HUB ASSEMBLY MCL	1	
-10	A30078-1	CUP-BEARING MCL	2	
-11	AN4-24A	BOLT USE WITH C163002-0201	6	B
	A2513-66	BOLT USE WITH C163003-0201 MCL	6	C
-12	AN960-416L	WASHER USE WITH C163002-0201	12	B
	A1638-29	WASHER USE WITH C163003-0201 MCL	12	C
-13	MS21042L4	NUT USE WITH C163002-0201	6	B
	MS20365-428A	NUT USE WITH C163003-0201	6	C
		A---172 SERIAL 17260835 THRU 17263458 F172 SERIAL F17200901 THRU F17201234 B---172 SERIAL 17260835 THRU 17261440 F172 SERIAL F17200901 THRU F17201044 C---172 SERIAL 17261441 THRU 17263458 F172 SERIAL F17201045 THRU F17201234		

This page intentionally left blank.

Alighting Gear (Cont)

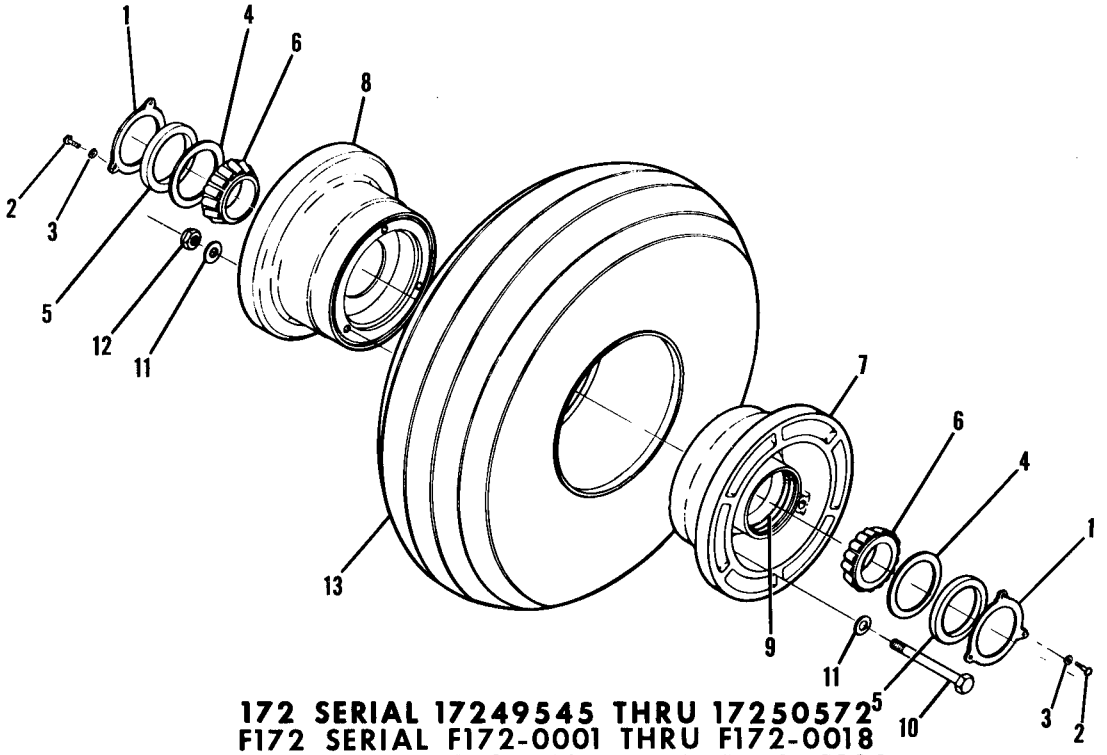


172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
P172 SERIAL P17257120 THRU P17257188

Figure 62. Nose Gear Wheel Assembly-Heavy Duty

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
62 -		WHEEL ASSEMBLY-NOSE GEAR HEAVY DUTY CLEVELAND	NP	A
	0441156-16	WHEEL ASSEMBLY CFP 40-55	1	
- 1	153-10	RING-GREASE SEAL CFP	2	
		ATTACHING PARTS		
- 2	8-32X1/2	SCREW CFP	3	
- 3	1208	WASHER CFP	3	
		---*---		
- 4	A39070	RING-GREASE SEAL CFP	2	
- 5	154-9	GREASE SEAL-FELT CFP	2	
- 6	13889	BEARING CFP	2	
- 7	161-24	WHEEL HALF ASSEMBLY-INNER CFP	1	
- 8	161-23	WHEEL HALF ASSEMBLY-OUTER CFP	1	
- 9	13836	CUP-BEARING CFP	1	
-10	AN4-37A	BOLT	3	
-11	AN960-416	WASHER	3	
-12	MS21042L4	NUT	3	
-13	C262003-0101	TIRE-TUBE TYPE 6.00 X 6	1	
	C262023-0102	TUBE 6.00 X 6	1	
		A---172 SERIAL 17249545 THRU 17250572 F172 SERIAL F172-0001 THRU F172-0018 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		

Alighting Gear (Cont)

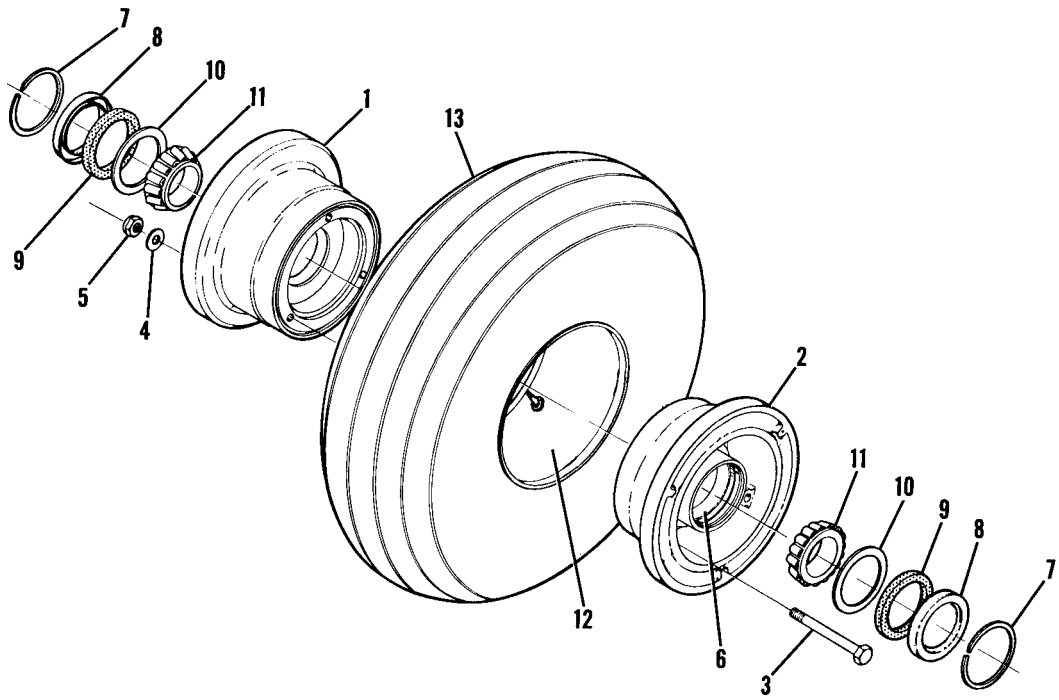


172 SERIAL 17250573 THRU 17263458
F172 SERIAL F172-0019 THRU F17201234

Figure 63. Nose Gear Wheel Assembly-Heavy Duty

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
63 -		WHEEL ASSEMBLY-HEAVY DUTY NOSE GEAR CLEVELAND	NP	A
	1241156-11	WHEEL ASSEMBLY CFP 40-76A	1	
- 1	162-27	WHEEL HALF ASSEMBLY-FEMALE CFP	1	
- 2	161-30	WHEEL HALF ASSEMBLY-MALE CFP	1	
		ATTACHING PARTS		
- 3	AN5-35A	BOLT	3	
- 4	AN960-516	WASHER	6	
- 5	MS21042L5	NUT	3	
		---*---		
- 6	13836	CUP-BEARING CFP	1	
- 7	3023	RING-SNAP CFP	2	
- 8	153-15	RING-GREASE SEAL CFP	2	
- 9	154-13	GREASE SEAL-FELT CFP	2	
-10	A39070	RING-GREASE SEAL	2	
-11	13889	CONE-BEARING	2	
-12	C262003-0101	TUBE-6.00 X 6	1	
-13	C262023-0102	TIRE-6.00 X 6	1	
		A---172 SERIAL 17250573 THRU 17263458 F172 SERIAL F172-0019 THRU F17201234		

Alighting Gear (Cont)

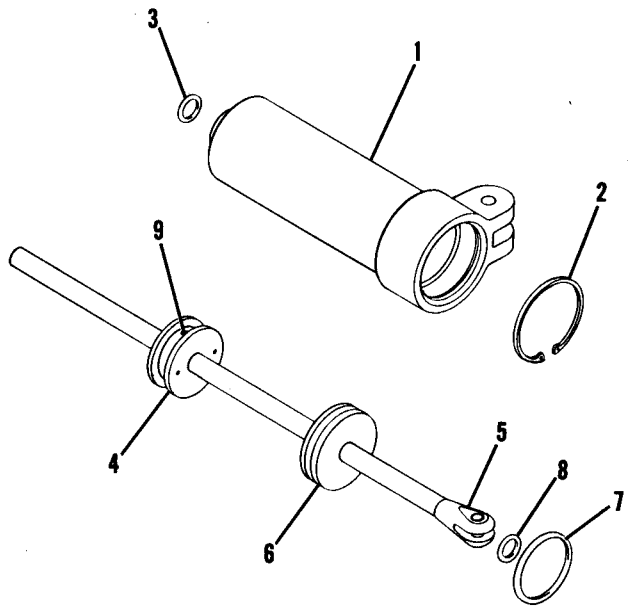

172 SERIAL 17249545 THRU 17256449
F172 SERIAL F172-0001 THRU F172-0519
P172 SERIAL P17257120 THRU P17257188


Figure 64. Shimmy Dampener Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
64 -	*	DAMPENER ASSEMBLY-SHIMMY	NP	A
- 1	0542100-1	BARREL-SHIMMY DAMPENER	1	
- 2	MS16625-131	RING	1	
- 3	AN622786	O RING	1	
- 4	0542118-1	PISTON ASSEMBLY	1	
- 5	0542101-1	SHAFT	1	
- 6	0542102-1	HEAD BEARING	1	
- 7	AN6227B20	O RING	1	
- 8	AN6227B6	O RING	1	
- 9	NAS561P4-14	ROLL PIN	1	

NOTE. *ORDER 0442512-1, SEE FIGURE 65.

A---172 SERIAL 17249545 THRU 17256449
F172 SERIAL F172-0001 THRU F172-0519
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Alighting Gear (Cont)

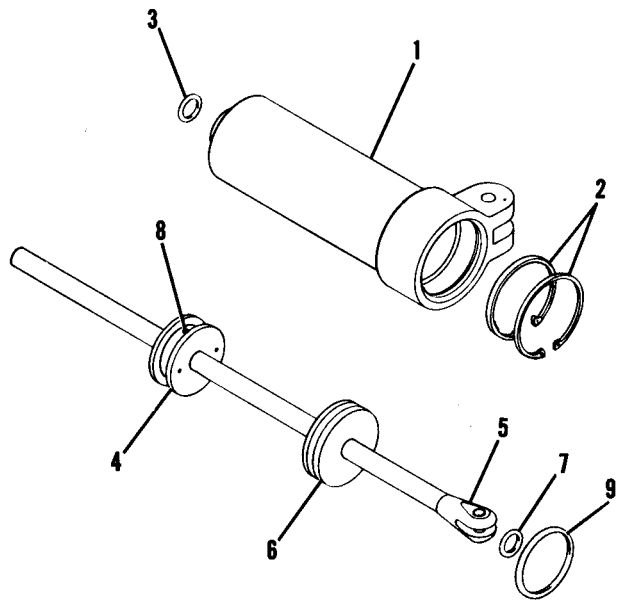

172 SERIAL 17256450 THRU 17263458
F172 SERIAL F172-0520 THRU F17201234

Figure 65. Shimmy Dampener Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
65 -	0442512-1	DAMPENER ASSEMBLY-SHIMMY	1	A
- 1	0542100-6	BARREL-SHIMMY DAMPENER	1	
- 2	MS16625-118	RING-SNAP	2	
- 3	AN6227B6	O RING	1	
- 4	0542118-5	PISTON ASSEMBLY	1	
- 5	0542101-1	SHAFT	1	
- 6	0542102-3	HEAD BEARING	1	
- 7	AN6227B6	O RING	1	
- 8	NAS561P4-14	ROLL PIN	1	
- 9	AN6227B18	O RING	1	
		A---172 SERIAL 17256450 THRU 17263458 F172 SERIAL F172-0520 THRU F17201234		

Alighting Gear (Cont)

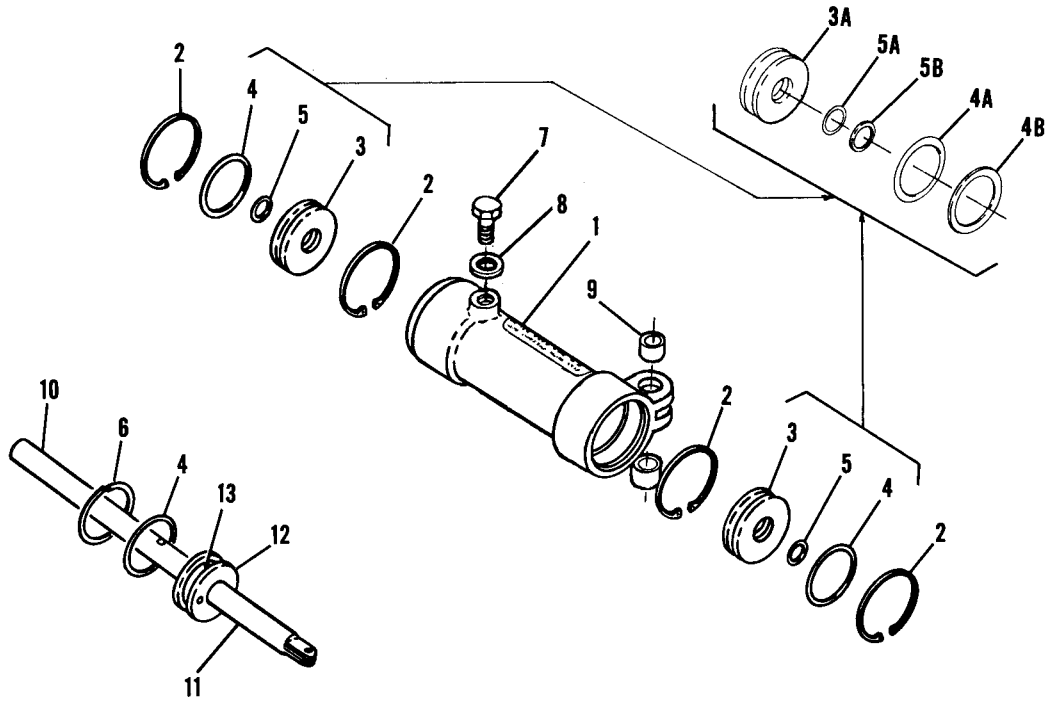


Figure 66. Shimmy Dampener Assembly-Heavy Duty

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
66 -	0543061-1		DAMPENER ASSEMBLY-SHIMMY HEAVY DUTY	1	
- 1	1442112-1		BARREL-SHIMMY DAMPENER	1	
- 2	MS16625-143		RING-LOCK	4	
- 3			HEAD BEARING FOR SPARES ORDER 1442113-9	NP	
	1442113-9	*	HEAD BEARING	2	
- 4	AN6227B22		O RING USE WITH ORIGINAL HEAD BEARING ONLY	3	
- 4A	MS28775-027	%	PACKING RING USE WITH 1442113-9 ONLY	2	
- 4B	S1628-027	%	BACKUP RING USE WITH 1442113-9 ONLY	2	
- 5	AN6227B10		O RING USE WITH ORIGINAL HEAD BEARING ONLY	2	
- 5A	MS28775-112	%	PACKING RING USE WITH 1442113-9 ONLY	2	
- 5B	MS1628-112	%	BACKUP RING USE WITH 1442113-9 ONLY	2	
- 6	MS28782-22		RETAINER	1	
- 7	NAS563-11		BOLT	1	
- 8	600-015-100S		STAT-O-SEAL PKSC	1	
- 9	NAS75-3-008		BUSHING	2	
-10	0543060-1		ROD & PISTON ASSEMBLY	1	
-11	0543060-2		ROD	1	
-12	0543060-3		PISTON	1	
			ATTACHING PARTS		
-13	NAS561P4-18		PIN	1	
			---*---		
			NOTE. *WHEN REPLACING ORIGINAL BEARING WITH THIS PART ALSO ORDER PARTS MARKED %		

This page intentionally left blank.

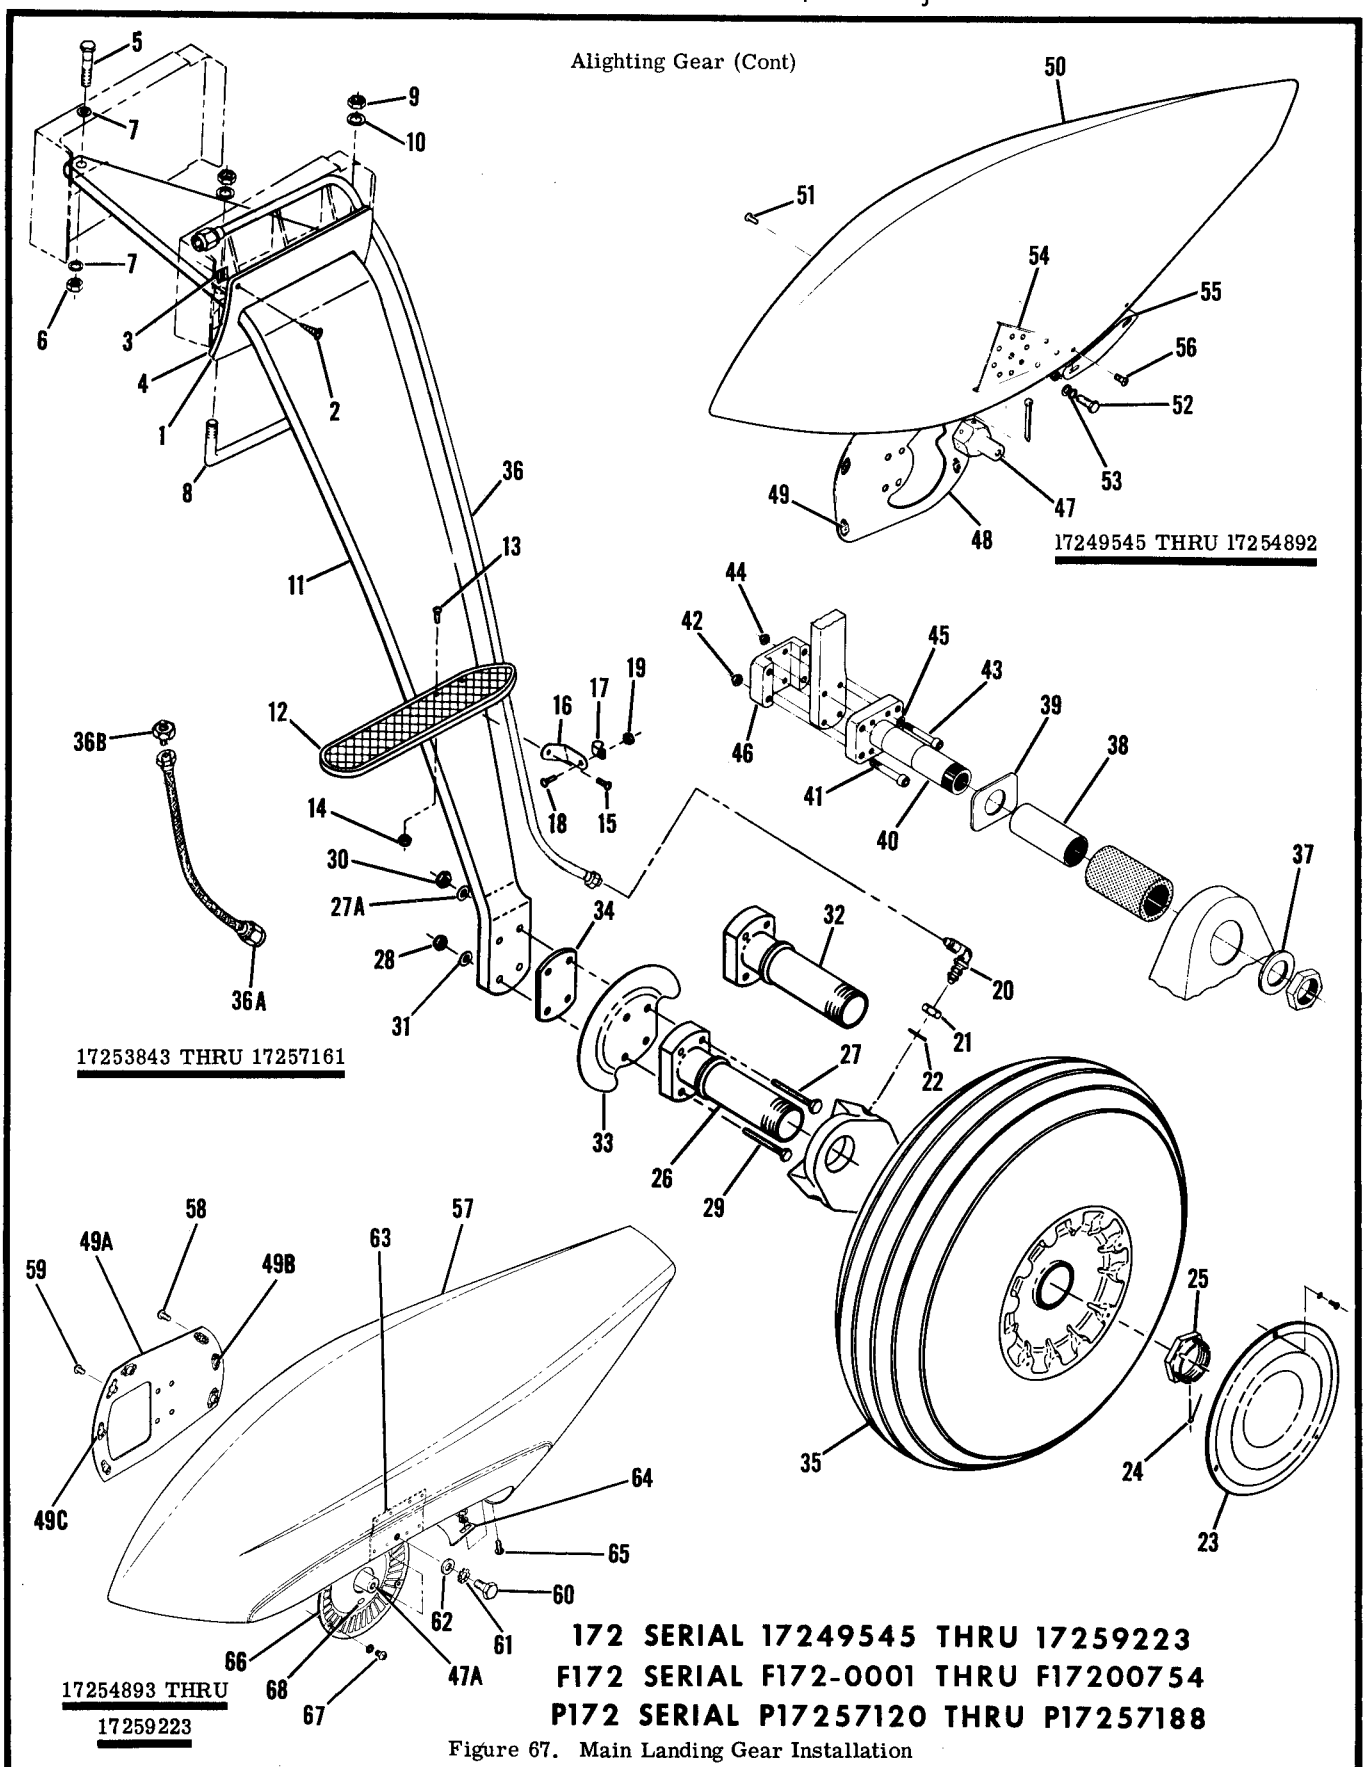


Figure 67. Main Landing Gear Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
67 -		MAIN LANDING GEAR INSTALLATION	NP	Q
- 1	0511071-3	PLATE-LANDING GEAR FILLET LH	1	
	0511071-4	PLATE-LANDING GEAR FILLET RH	1	
		ATTACHING PARTS		
- 2	S1021Z8-8	SCREW	6	
- 3	NAS395-17-3	NUT	6	
		---*---		
- 4	0511072-1	SEAL-LANDING GEAR FILLET	2	
		MAIN LANDING GEAR ASSEMBLY LH	NP	
		MAIN LANDING GEAR ASSEMBLY RH	NP	
		ATTACHING PARTS		
- 5	AN6-15A	BOLT	1	
- 6	MS21042L6	NUT	1	
- 7	AN960D616	WASHER	2	
- 8	0541153	U BOLT	1	
- 9	MS20365-720C	NUT	1	
-10	AN960D716	WASHER	2	
		---*---		
-11	0541164-3	SPRING ASSEMBLY-LANDING GEAR LH	1	
	0541164-4	SPRING ASSEMBLY-LANDING GEAR RH	1	
	0541155-1	BRACKET-STEP LH	1	
	0541155-2	BRACKET-STEP RH	1	
-12	0541154-1	STEP	1	
		ATTACHING PARTS		
-13	AN507-1032R10	SCREW	1	
-14	NAS696A3	NUT	3	
-15	NAS221-9	SCREW	2	
		---*---		
-16	0541156-1	STRAP LH	1	
	0541156-2	STRAP RH	1	
-17	MS21919DG3	CLAMP	1	
		ATTACHING PARTS		
-18	NAS220-6	SCREW	1	
-19	MS21044N08	NUT	1	
		---*---		
-20	MS20823-4D	ELBOW	1	N
	MS20823-3D	ELBOW	1	L
-21	AN924-4D	NUT	1	B
-22	MS28778-4	GASKET	1	B
-23	1241063-2	FAIRING-WHEEL	1	F
	0741048-1	COVER-WHEEL	1	J
	0741048-6	COVER-WHEEL	1	K
		ATTACHING PARTS		
	NAS220-4	SCREW	3	B
	AN515-8R4	SCREW	3	C
	AN936-A8	WASHER	3	
		---*---		
-24	MS24665-351	COTTER PIN	1	
-25	S1117-24	NUT	1	
-26	0541124	AXLE-MAIN LANDING GEAR	1	
		ATTACHING PARTS		
-27	AN5-23A	BOLT UPPER	2	B
	AN5-21A	BOLT UPPER	2	C
	AN5-22A	BOLT UPPER ALTERNATE	2	B
	AN5-23A	BOLT UPPER ALTERNATE	2	C
-27A	AN960-516L	WASHER	AR	
-28	MS21042L5	NUT	2	
-29	AN6-23A	BOLT LOWER	2	B
	AN6-22A	BOLT LOWER	2	C
	AN6-24A	BOLT LOWER ALTERNATE	2	B
	AN6-23A	BOLT LOWER ALTERNATE	2	C
-30	MS21042L6	NUT	2	
-31	AN960-616L	WASHER	AR	C
		---*---		
-32	0541124-1	AXLE-HEAVY DUTY	1	
		ATTACHING PARTS		
	NAS146-40	BOLT	2	
	NAS146-42	BOLT ALTERNATE	2	
	MS21042L6	NUT	2	
	NAS145-41	BOLT	2	
	NAS145-39	BOLT ALTERNATE	2	
	MS21042L5	NUT	2	
	MS20002C5	WASHER	1	
	MS20002C6	WASHER	1	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
67 -33	0441141-3	PLATE-BRAKE DISC COVER LH	1	B
	0441141-4	PLATE-BRAKE DISC COVER RH	1	B
-34		SHIM REFER TO SERVICE MANUAL FOR USAGE	AR	
-35	SEE FIG 69	WHEEL & BRAKE ASSEMBLY-MAIN LANDING GEAR	1	B
	SEE FIG 70	WHEEL & BRAKE ASSEMBLY-MAIN LANDING GEAR	1	C
-36	0500106-281	LINE ASSEMBLY-BRAKE LH	1	B
	0500106-379	LINE ASSEMBLY-BRAKE LH	1	D
	0500118-41	LINE ASSEMBLY-BRAKE LH	1	E
	0500106-282	LINE ASSEMBLY-BRAKE RH	1	B
	0500106-380	LINE ASSEMBLY-BRAKE RH	1	D
	0500118-40	LINE ASSEMBLY-BRAKE RH	1	E
	0500118-61	LINE ASSEMBLY-BRAKE LH	1	M
	0500118-62	LINE ASSEMBLY-BRAKE RH	1	M
	0500118-77	LINE ASSEMBLY-BRAKE LH	1	P
	0500118-76	LINE ASSEMBLY-BRAKE RH	1	P
-36A	S1167-4-0080	HOSE ASSEMBLY	1	E
	S1167-3-0080	HOSE ASSEMBLY	1	P
-36B	AN815-4D	UNION	1	E
	AN815-3D	UNION	1	P
	0741008-5	AXLE ASSEMBLY-SKI LANDING GEAR	1	A
-37	0741008-3	WASHER	1	
-38	0741008-4	BUSHING	1	
-39	0741008-2	WASHER	1	
-40	0741103	AXLE-SKI LANDING GEAR	1	
		ATTACHING PARTS		
-41	NAS146-35	BOLT	6	
-42	MS21042L6	NUT	6	
-43	NAS145-35	BOLT	2	
-44	MS21042L5	NUT	2	
-45	MS20002C5	WASHER	2	
		---*---		
-46	0741008-1	SHOE	1	
		SPEED FAIRING INSTALLATION-MAIN LANDING GEAR	NP	
-47	0441130-2	NUT-WHEEL FAIRING SUPPORT	2	F
-47A	0741047-1	NUT-WHEEL FAIRING SUPPORT	2	G
	MS24665-362	COTTER PIN	2	
-48	0741610-12	SUPPORT BRACKET ASSEMBLY-RH	1	B
	1441010-24	PLATE ASSEMBLY-RH	1	H
	0741610-11	SUPPORT BRACKET ASSEMBLY-LH	1	B
	1441010-27	PLATE ASSEMBLY-LH	1	H
-49	NAS686A3	NUTPLATE	7	B
-49A	0741046-7	PLATE ASSEMBLY-MOUNTING LH	1	G
	0741046-8	PLATE ASSEMBLY-MOUNTING RH	1	G
-49B	NAS686A3	NUTPLATE	4	G
-49C	NAS680A3K	NUTPLATE	3	G
-50	0741610-5	FAIRING ASSEMBLY-MAIN LANDING GEAR LH	1	B
	0541185-5	FAIRING ASSEMBLY-MAIN LANDING GEAR LH	1	H
	0741610-6	FAIRING ASSEMBLY-MAIN LANDING GEAR RH	1	B
	0541185-6	FAIRING ASSEMBLY-MAIN LANDING GEAR RH	1	H
		ATTACHING PARTS		
-51	AN520-10R10	SCREW	7	B
	AN520-10R8	SCREW	4	H
	AN520-10R5	SCREW	3	H
-52	AN6-6A	BOLT	1	
-53	AN936B616	WASHER	1	
	AN960-616L	WASHER	1	
		---*---		
-54	0541180-1	DOUBLER	1	B
-55	0741610-13	SCRAPER	1	
		ATTACHING PARTS		
-56	AN520-10R10	SCREW	4	B
	AN520-10R5	SCREW	4	H
	MS21044N3	NUT	4	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
67 -57	0741046-201	FAIRING-MAIN LANDING GEAR LH	1	O
	0741046-200	FAIRING-MAIN LANDING GEAR RH	1	O
	0741046-203	FAIRING-MAIN LANDING GEAR LH	1	L
	0741046-202	FAIRING-MAIN LANDING GEAR RH	1	L
		ATTACHING PARTS		
-58	AN520-10R8	SCREW	4	G
-59	AN520-10R5	SCREW	3	G
-60	AN6-6A	BOLT	1	G
-61	AN936B616	WASHER	1	G
-62	AN960-616L	WASHER	1	G
		---*---		
-63	0741046-11	DOUBLER	1	G
-64	0741046-14	SCRAPER-FAIRING	1	G
		ATTACHING PARTS		
-65	AN520-10R10	SCREW	3	G
	AN960-10	WASHER	3	G
	MS21044N3	NUT	3	G
		---*---		
-66	0741048-2	CAP-WHEEL	2	O
	0741048-7	CAP-WHEEL	2	L
		ATTACHING PARTS		
-67	AN515-8R4	SCREW	3	G
	AN936A8	WASHER	3	G
		---*---		
-68	6241M	EXTENSION-VALVE DL	2	G
	3680C	EXTENSION-VALVE ALTERNATE SV	2	G

A---172 SERIAL 17249545 THRU 17250572
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0018
FP172 SERIAL FP172-0001 THRU FP172-0003

B---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0019 THRU F172-0085
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

C---172 SERIAL 17251823 THRU 17259223
F172 SERIAL F172-0086 THRU F17200754

D---172 SERIAL 17251823 THRU 17253842
F172 SERIAL F172-0086 THRU F172-0303

E---172 SERIAL 17253843 THRU 17256512
F172 SERIAL F172-0304 THRU F172-0559

F---172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

G---172 SERIAL 17254893 THRU 17259223
F172 SERIAL F172-0320 THRU F17200754

H---172 SERIAL 17251823 THRU 17254892
F172 SERIAL F172-0086 THRU F172-0319

J---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F172-0431,
F172-0436 THRU F172-0442,
F172-0444 THRU F172-0446

K---172 SERIAL 17256513 THRU 17259223
F172 SERIAL F172-0432 THRU F172-0435,
F172-0443, F172-0447 THRU
F17200754.

L---172 SERIAL 17256513 THRU 17259223

M---172 SERIAL 17256513 THRU 17257161


N---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200754

O---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0001 THRU F17200754

P---172 SERIAL 17257162 THRU 17259223
F172 SERIAL F172-0560 THRU F17200754

Q---172 SERIAL 17249545 THRU 17259223
F172 SERIAL F172-0001 THRU F17200754
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Alighting Gear (Cont)

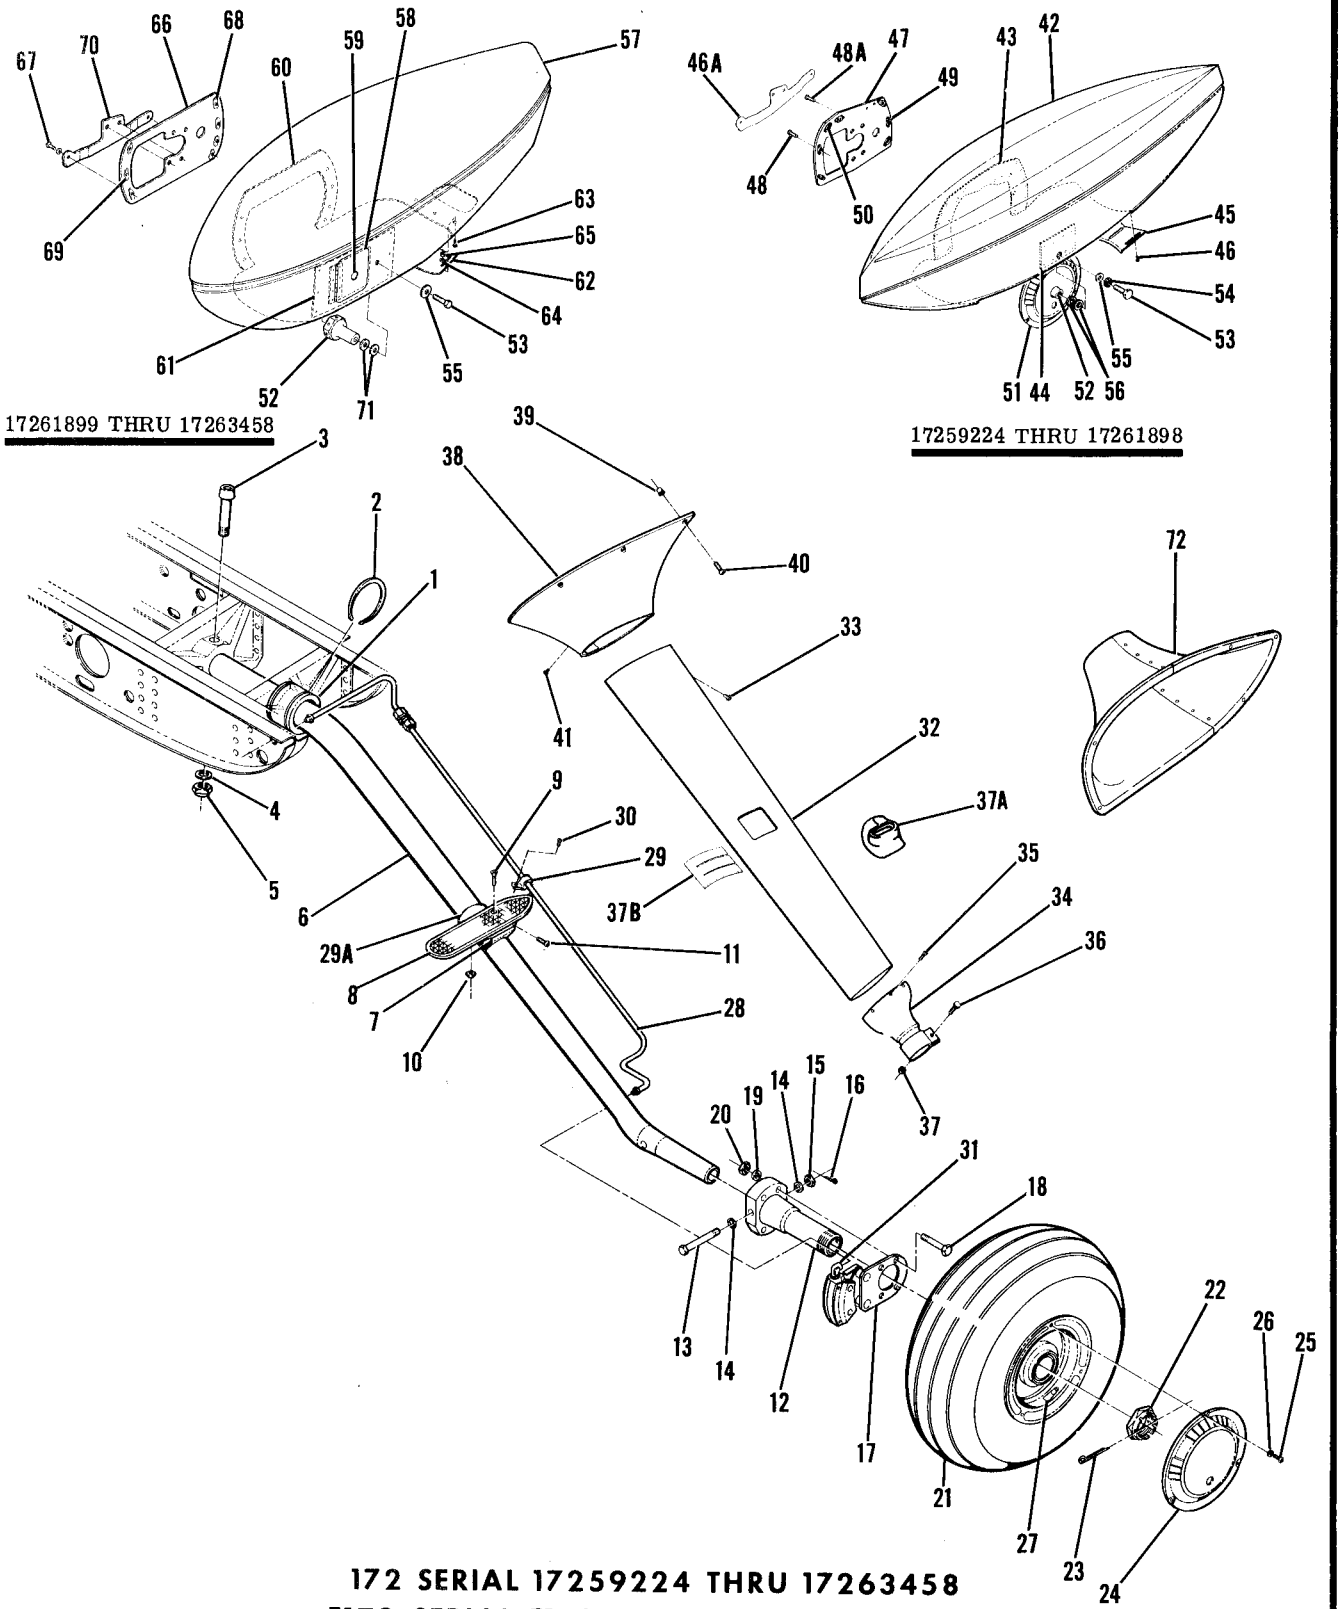

172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234

Figure 68. Main Landing Gear Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
68 -		MAIN LANDING GEAR INSTALLATION	NP	A
- 1	0541202-4	BUSHING	1	
- 2	MS16624-1262	RETAINER	2	
- 3	S2138-1	BOLT	1	
- 4	S1450-10-15-063	WASHER	AR	
- 5	MS20365-1018C	NUT	1	
		MAIN LANDING GEAR ASSEMBLY LH	1	
		MAIN LANDING GEAR ASSEMBLY RH	1	
- 6	0541198-5	SPRING ASSEMBLY-MAIN LANDING GEAR LH WEU 0541198-9	1	C
	0541198-9	SPRING ASSEMBLY-MAIN LANDING GEAR LH	1	D
	0541198-6	SPRING ASSEMBLY-MAIN LANDING GEAR RH WEU 0541198-10	1	C
	0541198-10	SPRING ASSEMBLY-MAIN LANDING GEAR RH	1	D
- 7	0541197-1	BRACKET ASSEMBLY-STEP LH WEU 0541212-1	1	C
	0541212-1	BRACKET ASSEMBLY-STEP LH	1	D
	0541197-2	BRACKET ASSEMBLY-STEP RH WEU 0541212-2	1	C
	0541212-2	BRACKET ASSEMBLY-STEP RH	1	D
- 8	0541211-1	STEP	1	
		ATTACHING PARTS		
- 9	AN507-1032R10	SCREW	1	
-10	MS21044N3	NUT	1	
-11	NAS221-9	SCREW	2	
	MS21044N3	NUT	2	
		---*---		
-12	0541199-1	AXLE-MAIN LANDING GEAR	1	
		ATTACHING PARTS		
-13	NAS464P7LA44	BOLT	1	
-14	AN960-716	WASHER	2	
-15	MS20364-720C	NUT	1	
-16	MS24665-317	PIN-COTTER	1	B
		---*---		
-17	SEE FIG 70	BRAKE ASSEMBLY	1	
		ATTACHING PARTS		
-18	AN5-13A	BOLT	4	
	AN5-14A	BOLT WHEN USED WITH FAIRINGS	4	
-19	AN960-516L	WASHER	4	
-20	MS21042L5	NUT	4	
		---*---		
-21	SEE FIG 70	WHEEL ASSEMBLY-MAIN LANDING GEAR	1	
-22	S1117-24	NUT	1	
-23	MS24665-351	PIN-COTTER	1	
-24	0741048-8	WHEEL CAP	1	
		ATTACHING PARTS		
-25	AN515-8R4	SCREW	3	
	S2191-8-4	SCREW USED WITH MCCAULEY WHEELS	3	
-26	AN936A8	WASHER	3	
		---*---		
-27	6241M	VALVE-EXTENSION DL	1	
	3680C	VALVE-EXTENSION SV ALTERNATE	1	
-28	0500118-126	LINE ASSEMBLY-BRAKE LH	1	
	0500118-127	LINE ASSEMBLY-BRAKE RH	1	
		ATTACHING PARTS		
-29	MS21919DG3	CLAMP	1	
-29A	S1486D26L	CLAMP	1	
-30	S1021Z10-8	SCREW	1	
		---*---		
-31	MS20822-3D	ELBOW	1	
-32	0541193-7	FAIRING ASSEMBLY-MAIN LANDING GEAR LH	1	
	0541193-8	FAIRING ASSEMBLY-MAIN LANDING GEAR RH	1	
		ATTACHING PARTS		
-33	AN515-8R6	SCREW	9	
		---*---		
	NAS680A08	NUTPLATE	7	
	NAS696A08	NUTPLATE	2	
	NAS696A06L	NUTPLATE	3	
-34	0541191-1	COVER PLATE ASSEMBLY-MAIN LANDING GEAR LH	1	
	0541191-2	COVER PLATE ASSEMBLY-MAIN LANDING GEAR RH	1	
		ATTACHING PARTS		
-35	AN515-6R6	SCREW	3	
-36	AN3-4	BOLT	1	
-37	MS21044N3	NUT	1	
		---*---		
-37A	0541213-1	FAIRING-STEP LH	1	E
	0541213-2	FAIRING-STEP RH	1	E
-37B	0541226-1	COVER-STEP BRACKET	2	G


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
68 -38	1741005-239	FAIRING ASSY-MAIN LANDING GEAR LH VESTAL WHITE	1	
	1741005-247	FAIRING ASSY-MAIN LANDING GEAR LH PAINT TO MATCH AIRCRAFT COLOR	1	
	1741005-240	FAIRING ASSY-MAIN LANDING GEAR RH VESTAL WHITE	1	
	1741005-248	FAIRING ASSY-MAIN LANDING GEAR RH PAINT TO MATCH AIRCRAFT COLOR	1	
		ATTACHING PARTS		
-39	S1613-3-75	NUT	5	
-40	AN520-10R12	SCREW	5	
-41	AN515-6R6	SCREW	3	
		---*---		
-42	0541203-1	FAIRING ASSEMBLY-WHEEL MAIN LANDING GEAR LH	1	F
	0541203-2	FAIRING ASSEMBLY-WHEEL MAIN LANDING GEAR RH	1	F
-43	0541206-1	DOUBLER-WHEEL FAIRING	1	
-44	0541207-1	DOUBLER-WHEEL FAIRING	1	
-45	0541205-1	SCRAPER-WHEEL FAIRING	1	
		ATTACHING PARTS		
-46	AN520-10R16	SCREW	3	
	AN960-10	WASHER	3	
	MS21044N3	NUT	3	
		---*---		
-46A	0541210-1	STIFFENER-MAIN GEAR FAIRING-LH	1	F
	0541210-2	STIFFENER-MAIN GEAR FAIRING-RH	1	F
-47	0541188-1	MOUNTING PLATE ASSEMBLY-LH	1	F
	0541188-2	MOUNTING PLATE ASSEMBLY-RH	1	F
		ATTACHING PARTS		
-48	AN520-10R10	SCREW	3	
	AN525-10R12	SCREW	4	
	S1450-309-302	WASHER	7	
		---*---		
-49	NAS686A3	NUTPLATE	4	
-50	NAS680A3K	NUTPLATE	3	
-51	0741048-7	WHEEL CAP USE WITH FAIRING ONLY	2	F
-52	0741047-2	NUT USE WITH FAIRING ONLY	2	
	MS24665-362	PIN-COTTER	2	
-53	AN6-6A	BOLT	2	
-54	AN9368616	WASHER	2	F
-55	AN960-616L	WASHER	2	
-56	AN960-616	WASHER	AR	
-57	0541223-17	FAIRING ASSY-WHEEL MAIN LANDING GEAR LH	1	G
	0541223-16	FAIRING ASSY-WHEEL MAIN LANDING GEAR RH	1	G
-58	0541223-13	DOOR ASSY-FAIRING ACCESS	1	
-59	KM610-64	LATCH-DOOR CLC	1	
-60	0541219-1	DOUBLER-LH FAIRING	1	
	0541219-2	DOUBLER-RH FAIRING	1	
-61	0541222-1	DOUBLER-FAIRING	1	
-62	0541221-1	SCRAPER-FAIRING	2	
		ATTACHING PARTS		
-63	AN520-10R12	SCREW	3	
-64	AN960-10	WASHER	6	
-65	MS21044N3	NUT	3	
		---*---		
	NAS680A08	NUTPLATE	6	
-66	0541220-1	PLATE ASSY-LH MOUNTING	1	G
	0541220-2	PLATE ASSY-RH MOUNTING	1	G
		ATTACHING PARTS		
-67	AN525-10R10	SCREW	7	
	S1450-309-032	WASHER	7	
		---*---		
-68	NAS686A3	NUTPLATE	4	
-69	NAS680A3K	NUTPLATE	3	
-70	0541218-1	STIFFENER-LH FAIRING	1	G
	0541218-2	STIFFENER-RH FAIRING	1	G
-71	AN960-616	WASHER	AR	G

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
68 -72	0541224-1	FAIRING-BRAKE LH	1	G
	0541224-2	FAIRING-BRAKE RH	1	G
		ATTACHING PARTS		
	AN525-832R10	SCREW	6	
	S1021Z6-6	SCREW	4	
		---*---		
		A---172 SERIAL 17259224 THRU 17263458 F172 SERIAL F17200755 THRU F17201234		
		B---172 SERIAL 17259224 THRU 17259684 F172 SERIAL F17200755 THRU F17200804		
		C---172 SERIAL 17259224 THRU 17260554 F172 SERIAL F17200755 THRU F17200879		
		D---172 SERIAL 17260555 THRU 17263458 F172 SERIAL F17200880 THRU F17201234		
		E---172 SERIAL 17260759 THRU 17261898 F172 SERIAL F17200905 THRU F17201034		
		F---172 SERIAL 17259224 THRU 17261898 F172 SERIAL F17200755 THRU F17201034		
		G---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234		

Alighting Gear (Cont)

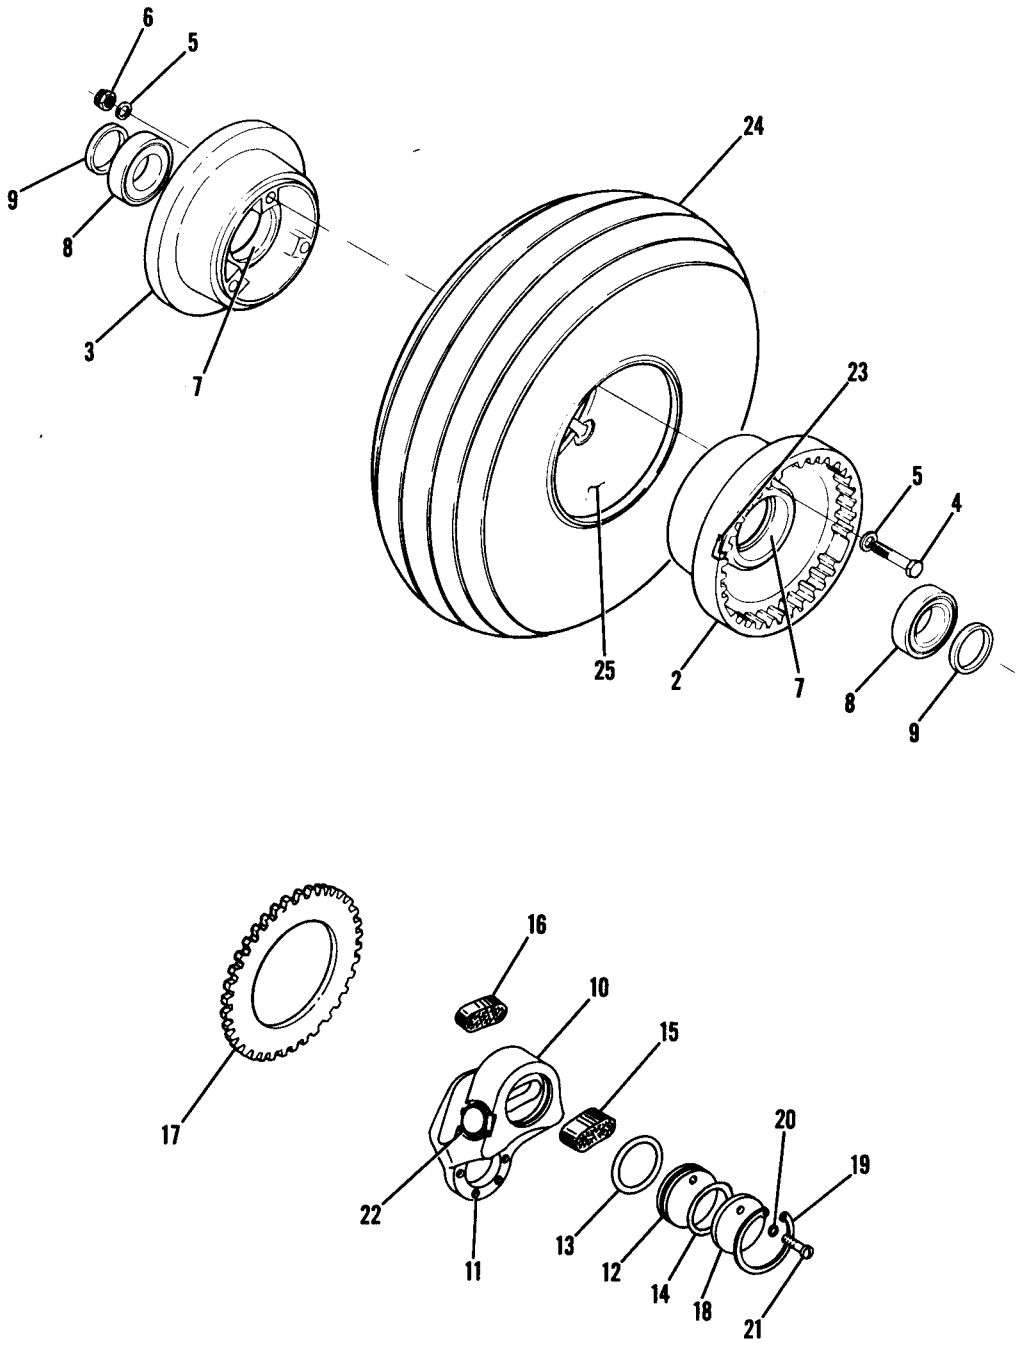


172 SERIAL 17249545 THRU 17251822
F172 SERIAL - SEE CODE C
P172 SERIAL P17257120 THRU P17257188

Figure 69. Main Landing Gear Wheel & Brake Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
69 -		WHEEL & BRAKE ASSEMBLY-MAIN LANDING GEAR	NP	C
	0541183-9	WHEEL ASSEMBLY-MAIN LANDING GEAR GY 9532522	1	
- 1		DELETED, NEVER USED		
- 2	9524201	WHEEL SUBASSEMBLY-INBOARD HALF GY	1	
- 3	9524318	WHEEL SUBASSEMBLY-OUTBOARD HALF GY	1	
		ATTACHING PARTS		
- 4	AN4-13A	BOLT	3	
- 5	AN960-416	WASHER	6	
- 6	FH428	NUT SPS	3	
		---*---		
- 7	13830	CUP-BEARING TI	1	
	9524491	CLIP-VALVE	1	
		ATTACHING PARTS		
	AN504-8R8	SCREW	1	
		---*---		
- 8	13889	CONE-BEARING TI	2	
- 9	9524218	SEAL-BEARING GY	2	
	0541161-3	BRAKE ASSEMBLY-GY9541936 WHEN EXHAUSTED USE 0541161-2	1	A
	0541161-2	BRAKE ASSEMBLY GY9532181	1	B
-10	9541458	HOUSING-BRAKE GY	1	
-11	9521184	BUSHING GY	1	
-12	9524223	PISTON GY	1	
-13	AN6230B2	O RING	1	
-14	AN6230B3	O RING	1	
-15	9525412	LINING-BRAKE GY	1	A
	9511269	LINING-BRAKE GY	1	B
-16	9525413	LINING-BRAKE GY	1	A
	9511271	LINING BRAKE GY	1	B
-17	9532277	DISC-BRAKE GY	1	
-18	9524343	CYLINDER HEAD GY	1	
		ATTACHING PARTS		
-19	MS16625-212	SNAP RING	1	
		---*---		
-20	511846-4	SEAL-BLEEDER GY	1	
-21	AN502-10-6	SCREW-BLEEDER	1	
-22	9520448	PLUG-DRAIN GY	1	
	MS28778-4	GASKET-DRAIN	1	
-23	95-00184	CLIP KIT-BRAKE DISC GY	1	
-24	C262003-0101	TIRE 6.00 X 6 4 PLY	1	
-25	C262023-0102	TUBE	1	

A---172 SERIAL 17249545 THRU 17250533
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0018
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17250534 THRU 17251822
F172 SERIAL F172-0019 THRU F172-0095,-0103, -0105,-0110 AND -0112
C---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0019 THRU F172-0095,-0103, -0105,-0110 AND -0112
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Alighting Gear (Cont)

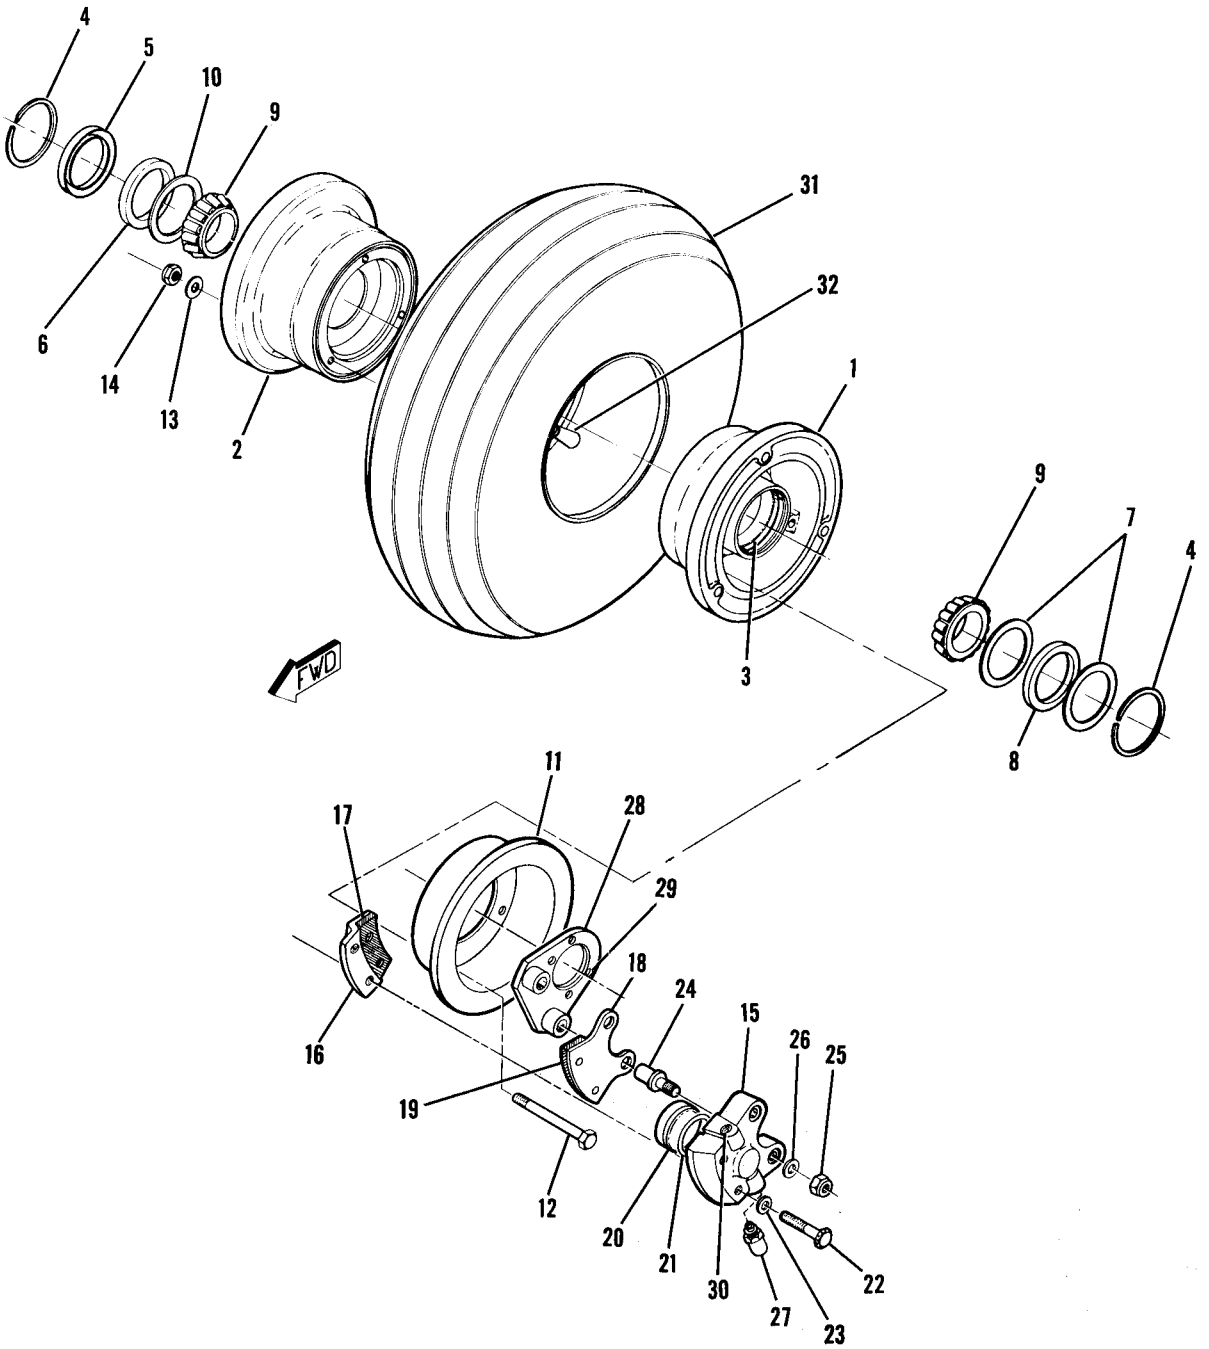

172 SERIAL 17251823 THRU 17263458
F172 SERIAL - SEE CODE A

Figure 70. Main Landing Gear Wheel & Brake Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
70 -			WHEEL & BRAKE ASSEMBLY-MAIN LANDING GEAR	NP	A
	C163001-0103		WHEEL ASSEMBLY-MAIN GEAR CFP40-97A	1	G
	C163001-0104		WHEEL ASSEMBLY-MAIN GEAR CFP 40-113	1	F
- 1	161-30		WHEEL HALF ASSEMBLY-MALE CFP	1	G
	161-04900		WHEEL HALF ASSEMBLY-MALE CFP	1	F
- 2	162-27		WHEEL HALF ASSEMBLY-FEMALE CFP	1	G
	162-04700		WHEEL HALF ASSEMBLY-FEMALE CFP	1	F
- 3	13836		CUP-BEARING	1	
- 4	3023		SNAP RING CFP	1	
- 5	153-15		RING-GREASE SEAL CFP	1	
- 6	154-13		FELT-GREASE SEAL CFP	1	
- 7	3022		RING-GREASE SEAL CFP	2	
- 8	3021		FELT-GREASE SEAL CFP	1	
- 9	13889		CONE-BEARING CFP	2	
-10	A39070		RING-GREASE SEAL CFP	1	
-11	164-26A		DISC ASSEMBLY-BRAKE CFP	1	G
	164-40		DISC ASSEMBLY-BRAKE CFP	1	F
-12	AN5-35A		BOLT	3	G
	AN4-36A		BOLT	3	F
-13	AN960-516		WASHER	3	G
	AN960-416		WASHER	3	F
-14	MS21042L5		NUT	3	G
	AN365-428		NUT	3	F
	C163030-0103	**	BRAKE ASSEMBLY INCLUDES NIPPLE CFP30-63 WHEN EXHAUSTED USE C163030-0107	1	D
	C163030-0105	**	BRAKE ASSEMBLY INCLUDES ELBOW CFP30-36 WHEN EXHAUSTED USE C163030-0107	1	D
	C163030-0107	**	BRAKE ASSEMBLY	1	E
	C163030-0111	**	BRAKE ASSEMBLY	1	F
	91-22		CYLINDER ASSEMBLY CFP	1	G
	091-04400		CYLINDER ASSEMBLY CFP	1	F
-15	61-19		CYLINDER CFP	1	G
	061-03700		CYLINDER CFP	1	F
-16	74-10		BACK PLATE ASSEMBLY CFP	1	
-17	66-30		LINING	1	
-18	73-11		PRESSURE PLATE ASSEMBLY CFP	1	
-19	66-30		LINING CFP	1	
-20	92-17		PISTON ASSEMBLY CFP	1	
-21	AN6230B2		O RING	1	
-22	LP4-17AM		BOLT CFP	2	
-23	AN960-416L		WASHER	2	
-24	69-4		BOLT-ANCHOR CFP	2	
-25	MS21042L4		NUT	2	
-26	AN960-416L		WASHER	2	
-27	FC6446		SCREW-BLEEDER CFP	1	
	183-1		CAP-BLEEDER SCREW CFP	1	
	37-206		SEAT-BLEEDER SCREW CFP	1	
-28	75-31		TORQUE PLATE ASSEMBLY CFP	1	B
	75-37		TORQUE PLATE ASSY CFP	1	G
	075-06700		TORQUE PLATE ASSEMBLY CFP	1	F
-29	145-10		BUSHING-TORQUE PLATE CFP	2	
-30	MS20823-4D		ELBOW USED ON C163030-0105 ASSY	1	D
	AN816-4D		NIPPLE USED ON C163030-0103 ASSY	1	D
-31	C262003-0101		TIRE-6.00X6 4 PR	1	
	C262001-0101		TIRE-WHITE WALL 6.00X6 4 PLY RATED WEU C262001-0201	1	H
	C262001-0201		TIRE-WHITE WALL 6.00X6 6 PLY RATED	1	J
-32	C262023-0102		TUBE-6.00X6	1	

NOTE. *WHEN INITIALLY ORDERING C163030-0103, C163030-0105 OR C163030-0107 FOR AIRPLANES DESCRIBED IN CODE B ALSO ORDER 164-26 BRAKE DISC.


NOTE. **BRAKE ASSEMBLIES DESCRIBED ARE NORMALLY LH, REVERSE FITTINGS & TORQUE PLATE BUSHING FOR RH INSTALLATION.

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
70 -		A---172 SERIAL 17251823 THRU 17263458 F172 SERIAL F172-0096 THRU F172-0102,-0104,-0106 THRU-0109,-0111,-0113 THRU F17201234 B---172 SERIAL 17251823 THRU 17252808 F172 SERIAL F172-0096 THRU F172-0102,-0104,-0106 THRU -0109,-0111,-0113 THRU F172-0204 C---DELETED D---172 SERIAL 17252809 THRU 17256512 F172 SERIAL F172-0204 THRU F172-0559 E---172 SERIAL 17256513 THRU 17259223 F172 SERIAL F172-0560 THRU F17200754 F---172 SERIAL 17259224 THRU 17263458 F172 SERIAL F17200755 THRU F17201234 G---172 SERIAL 17251823 THRU 17259223 F172 SERIAL F172-0096 THRU F172-0102, -0104, -0106 THRU -0109, -0111, -0113 THRU F17200754 H---172 SERIAL 17251823 THRU 17260758 F172 SERIAL F172-0096 THRU F172-0102, -0104, -0106 THRU -0109, -0111, -0113 THRU F17200904 J---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200905 THRU F17201234		

This page intentionally left blank.

Alighting Gear (Cont)

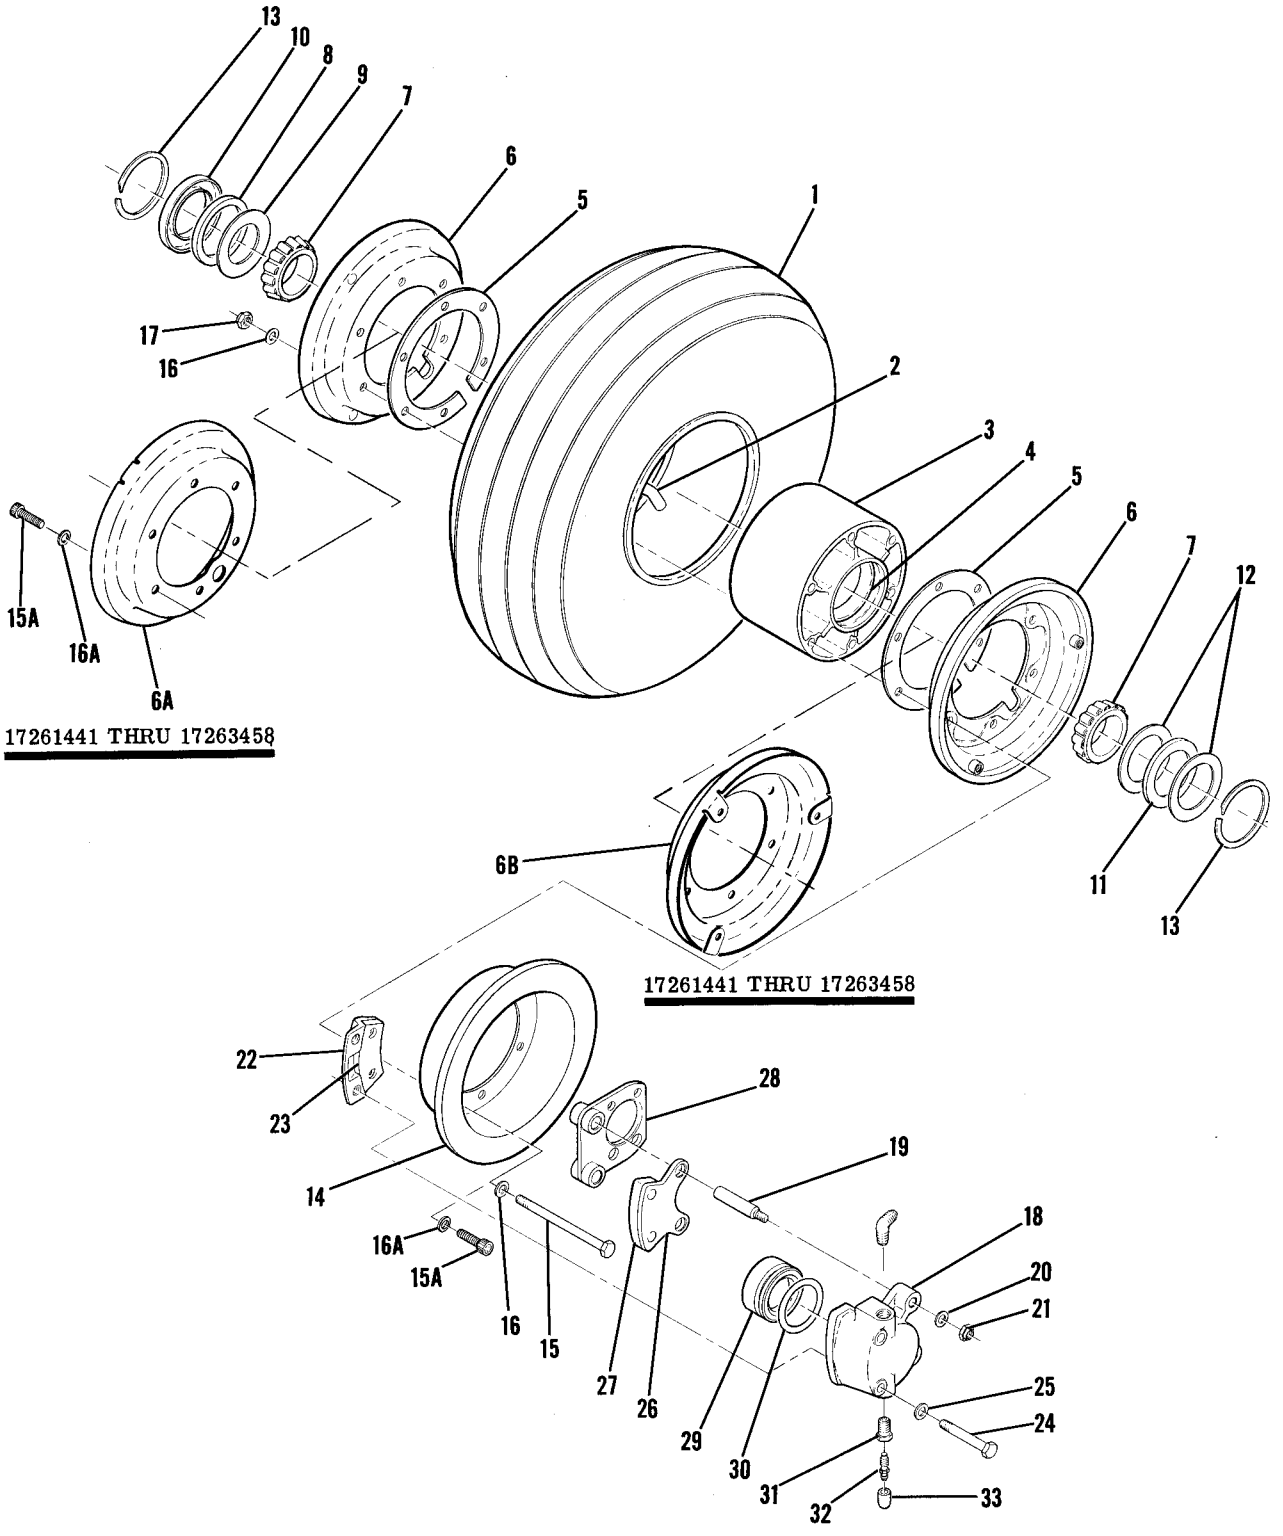

172 SERIAL 17260835 THRU 17263458
F172 SERIAL F17200901 THRU F17201234

Figure 71. Main Gear Wheel & Brake Assembly (Alternate)


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
71 -			WHEEL & BRAKE ASSEMBLY-MAIN LANDING GEAR ALTERNATE	NP	A
- 1	C262003-0101		TIRE-BLACKWALL 6.00X6 4 PLY RATED	1	
	C262004-0102		TIRE-WHITEWALL 6.00X6 4 PLY RATED	1	
- 2	C262023-0102		TUBE 6.00X6	1	
	C163002-0101	*	WHEEL ASSEMBLY-MAIN GEAR WEU C163003-0101	1	B
	C163003-0101	*	WHEEL ASSEMBLY-MAIN GEAR	1	C
- 3	D30065		HUB ASSEMBLY USE WITH C163002-0101 MCL	1	B
	D30256		HUB ASSEMBLY USE WITH C163003-0101 MCL	1	C
- 4	A30079-1		CUP-BEARING MCL	2	
- 5	B30076		SPACER MCL	2	
- 6	D30062		FLANGE-WHEEL USE WITH C163002-0101 MCL	2	B
- 6A	C30163-1		FLANGE-WHEEL USE WITH C163003-0101 MCL	1	C
- 6B	C30163		FLANGE-WHEEL USE WITH C163003-0101 MCL	1	C
- 7	A30079-2		CONE-BEARING MCL	2	
- 8	A30010		GREASE SEAL-FELT MCL	1	
- 9	A30015		RETAINER-GREASE SEAL MCL	1	
-10	A30014		RETAINER-GREASE SEAL MCL	1	
-11	A30011		GREASE SEAL-FELT MCL	1	
-12	A30013		RETAINER-GREASE SEAL MCL	2	
-13	A1636-24		RING-RETAINER MCL	2	
-14	B30007		DISC ASSEMBLY USE WITH C163002-0101 MCL	1	B
	B30195		DISC ASSEMBLY USE WITH C163003-0101 MCL	1	C
-15	AN4-41A		BOLT USE WITH C163002-0101	6	B
-15A	A1635-73		SCREW USE WITH C163003-0101 MCL	12	C
-16	AN960-416L		WASHER USE WITH C163002-0101	12	B
-16A	A1638-30		WASHER USE WITH C163003-0101 MCL	6	C
-16B	A1638-1		WASHER USE WITH C163003-0101 MCL	6	C
-17	MS21042L4		NUT USE WITH C163002-0101	6	B
	C163032-0105	**	BRAKE ASSEMBLY	1	
	C30019		CYLINDER ASSEMBLY MCL	1	
-18	C30041		CYLINDER MCL	1	
-19	A30023		PIN-GUIDE MCL	2	
-20	AN960-416L		WASHER	2	
-21	MS21042L4		NUT	2	
-22	B30027		BACK PLATE ASSEMBLY MCL	1	
-23	B30026		LINING-BRAKE MCL	1	
	A30087		RIVET MCL	2	
-24	AN4H21A		BOLT	2	
-25	AN960-416L		WASHER	2	
-26	B30024		PRESSURE PLATE ASSEMBLY MCL	1	
-27	B30026		LINING-BRAKE MCL	1	
	A30087		RIVET MCL	2	
-28	B30089		TORQUE PLATE ASSEMBLY MCL	1	
-29	A30021		PISTON ASSEMBLY MCL	1	
-30	AN6230B2		O RING	1	
-31	A30030		FITTING-BLEEDER MCL	1	
-32	A30085		FITTING-BLEEDER MCL	1	
-33	A30040		CAP-DUST MCL	1	
	R561		RIVET SET KIT	1	

NOTE. *THIS WHEEL ASSEMBLY MUST BE USED ONLY ON AIRCRAFT ORIGINALLY EQUIPED WITH C163002-0101 OR C163003-0101 MAIN GEAR WHEELS

NOTE. **THIS BRAKE ASSY MUST BE USED WITH C163002-0101 OR C163003-0101 WHEEL ASSYS ONLY.

A---172 SERIAL 17260835 THRU 17263458
F172 SERIAL F17200901 THRU F17201234
B---172 SERIAL 17260835 THRU 17261440
F172 SERIAL F17200901 THRU F17201044
C---172 SERIAL 17261441 THRU 17263458
F172 SERIAL F17201045 THRU F17201234

Door & Window

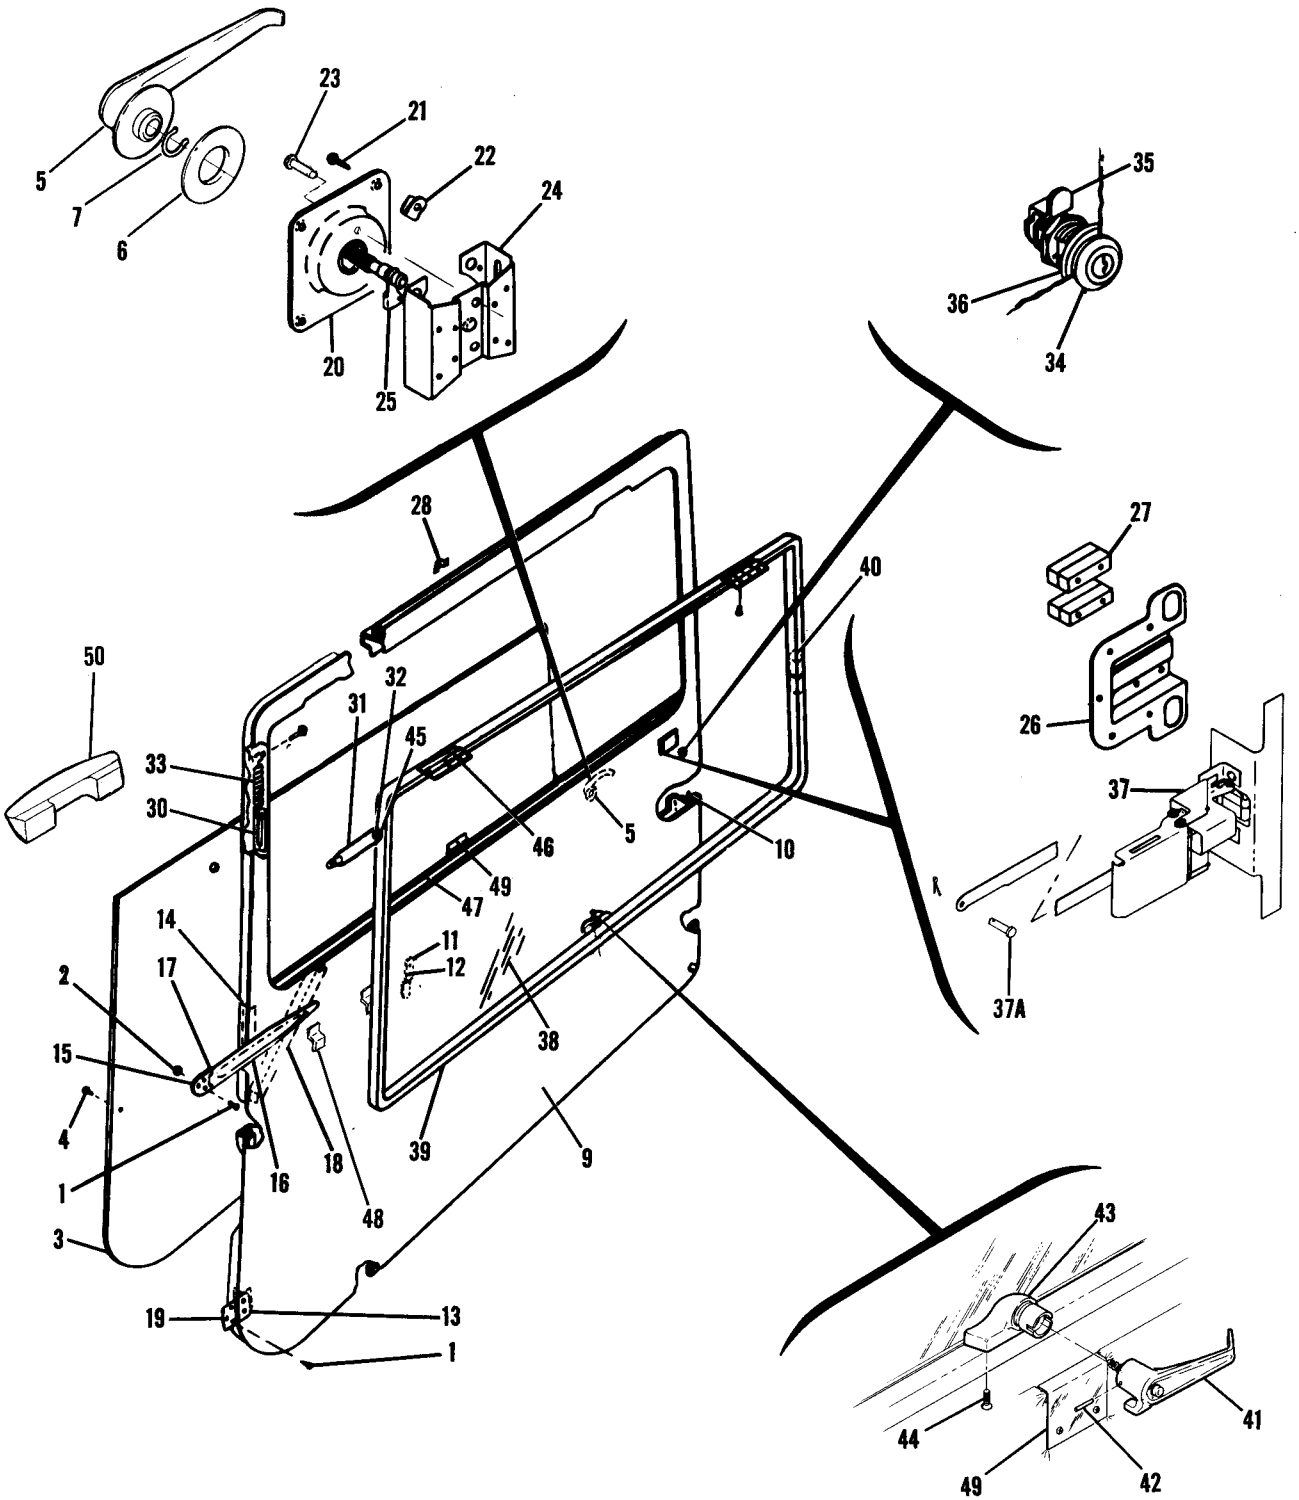

172 SERIAL 17249545 THRU 17253392
P172 SERIAL P17257120 THRU P17257188

Figure 72. Left Cabin Door Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
72 -			CABIN DOOR ASSEMBLY-LH	NP	G
			ATTACHING PARTS		
- 1	AN520-10R9		SCREW	5	
- 2	MS21044N3		NUT	5	
			---*---		
- 3	0500212-1		PANEL ASSEMBLY-UPHOLSTERY SKYHAWK MODELS ONLY	1	A
	0500212-3		PANEL ASSEMBLY-UPHOLSTERY	1	A
	0500217-3		PANEL ASSEMBLY-UPHOLSTERY	1	B
	0500240-5		PANEL ASSEMBLY-UPHOLSTERY	1	F
- 4	807		FASTENER-UPHOLSTERY AJV	17	
- 5	0711027-1		HANDLE-INSIDE DOOR	1	
- 6	0511189-2		ESCUTCHEON-DOOR HANDLE	1	
- 7	0511189-1		CLIP-DOOR HANDLE	1	
- 8			DELETED		
- 9	0511460-1		STRUCTURE ASSEMBLY-CABIN DOOR LH	1	
-10	S1346-1		SEAL 144 IN LG BULK ITEM REF S-1346-1-144	1	
-11	0511463-1		CLIP-UPHOLSTERY RETAINER	2	
			ATTACHING PARTS		
-12	S1021Z4-4		SCREW	2	
			---*---		
-13	0511461-1		REINFORCEMENT-DOOR HINGE	1	
-14	0511464-1		ANGLE-DOOR REINFORCEMENT	1	
	0511280-1		HINGE ASSEMBLY-DOOR UPPER	1	
-15	0511237-1		HINGE HALF ASSEMBLY	1	
-16	0511238-1		HINGE HALF ASSEMBLY	1	
-17	0711001-59		PIN-HINGE UPPER	1	
-18	0511469-1		BRACKET-HINGE UPPER	1	
-19	0511280-3		HINGE-DOOR LOWER	1	
-20	0413195-3		PLATE ASSEMBLY-DOOR HANDLE BEARING	1	
			ATTACHING PARTS		
-21	S1022Z8-8		SCREW	4	
-22	NAS395-16-3		NUT	4	
			---*---		
-23	AN520-10R12		SCREW	1	
-24	0511465-1		BRACKET ASSEMBLY-DOOR HANDLE INNER	1	
-25	0511227-7		SHAFT-DOOR HANDLE	1	
-26	0411576		PAN-DOOR LATCH	1	
-27	0411886		SPACER-DOOR LATCH PAN	4	
-28	A1663-028-1		LATCH-DOOR STOP	1	
-29			DELETED, NEVER USED		
-30	0711021-1		PLATE	1	
-31	0711021-4		ARM ASSEMBLY	1	
			ATTACHING PARTS		
-32	AN525-10R8		SCREW	1	
			---*---		
-33	0711021-9		SPRING	1	
-34	0413323-4		LOCK ASSEMBLY-DOOR WHEN EXHAUSTED USE C253001-0101	1	
	C253001-0101		LOCK ASSEMBLY-DOOR	1	
-35	0413322-3		CAM	1	
-36	0411851		WASHER	1	
-37	0511112-18	*	LATCH ASSEMBLY-DOOR SEE FIGURE 42	1	
			ATTACHING PARTS		
	AN520-10R6		SCREW	8	
-37A	MS20392-1C7		PIN	1	
	MS24665-132		PIN-COTTER	1	
			---*---		
	0711050-19		WINDOW ASSEMBLY-DOOR LH	1	
-38	0711051-1		GLASS ASSEMBLY-WINDOW	1	
	0711051-5		SEAL ONE PIECE TYPE	1	
-39	0711050-5		FRAME-WINDOW LH	1	
-40	0711050-7		SPLICE TUBE	1	
			ATTACHING PARTS		
	CR163-4-4		RIVET CY	8	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
72 -41	0811725-40	HANDLE ASSEMBLY-WINDOW	1	C
	S1483-2	HANDLE ASSEMBLY-WINDOW LATCH	1	D
		ATTACHING PARTS		
-42	NAS561P3-8	ROLL PIN	1	
		---*---		
-43	1411202-201	BRACKET ASSEMBLY-WINDOW LATCH	1	
		ATTACHING PARTS		
-44	NAS514P1032-14	SCREW	2	
	NAS43HT3-34	SPACER	2	
		---*---		
-45	S1613-3-75	RIVNUT GD	1	
-46	0411185-9	HINGE-WINDOW	2	
-47	S1378-2	SEAL-84.0 IN LG BULK ITEM REF S1378-2-84.00	1	
-48	0711125-1	BRACKET-ARM REST FORWARD	1	
	0711125-2	BRACKET-ARM REST AFT	1	
	S1021Z8-8	SCREW	2	
-49	0711021-7	PLATE-STRIKER	1	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	2	
		---*---		
-50	1414082-1	ARMREST ASSEMBLY WHEN EXHAUSTED USE 1414082-7	1	A
	1414082-7	ARMREST ASSEMBLY	1	B
	1414082-14	ARMREST ASSEMBLY	1	F
		ATTACHING PARTS		
	NAS221-17	SCREW	2	
		---*---		
	1414082-6	PAD ASSEMBLY-ARMREST	1	E
	1414082-13	PAD ASSEMBLY-ARMREST	1	F


NOTE. *WHEN ORDERING THIS PART FOR AIRPLANES PRIOR TO SERIAL 17250153 OR P17257178 THAT HAVE NOT BEEN MODIFIED TO SK172-16, ALSO ORDER ONE 0511248-1 SPRING & INSTALL IN ACCORDANCE WITH INSTRUCTIONS OF SK172-16.

A---172 SERIAL 17249545 THRU 17250572
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0018
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17250573 THRU 17251822
F172 SERIAL F172-0019 THRU F172-0085
C---172 SERIAL 17249545 THRU 17250809
F172 SERIAL F172-0001 THRU F172-0040
D---172 SERIAL 17250810 THRU 17253392
F172 SERIAL F172-0041 THRU F172-0179
E---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
F---172 SERIAL 17251823 THRU 17253392
F172 SERIAL F172-0086 THRU F172-0179
G---172 SERIAL 17249545 THRU 17253392
F172 SERIAL F172-0001 THRU F172-0179
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
73 -			CABIN DOOR ASSEMBLY-LH	NP	A
			ATTACHING PARTS		
- 1	AN520-10R9		SCREW	5	
- 2	MS21044N3		NUT	5	
			---*---		
- 3	0500251-5	#	PANEL ASSEMBLY-UPHOLSTERY	1	B
	0500258-5	#	PANEL ASSEMBLY-UPHOLSTERY	1	D
	0500258-29	#	PANEL ASSEMBLY-UPHOLSTERY 172 ONLY	1	E
	0500258-5	#	PANEL ASSEMBLY-UPHOLSTERY SKYHAWK ONLY	1	E
	0514009-5	#	PANEL ASSEMBLY-UPHOLSTERY	1	K
	0514039-5	#	PANEL ASSEMBLY-UPHOLSTERY	1	O
	0514059-5	#	PANEL ASSEMBLY-UPHOLSTERY	1	R
	0514073-5	#	PANEL ASSEMBLY-UPHOLSTERY	1	X
	0515004-3	#	PANEL ASSEMBLY-UPHOLSTERY	1	AB
	0515005-3	#	PANEL ASSEMBLY-UPHOLSTERY	1	AC
- 4	807		FASTENER-UPHOLSTERY AJV	17	M
	S1881-1		FASTENER-UPHOLSTERY	17	O
	S1933-1		FASTENER-UPHOLSTERY	17	P
- 5	0711027-1		HANDLE-INSIDE DOOR	1	H
- 5A	1211250-7		HANDLE-INSIDE DOOR	1	J
	1211251-1		INSERT-DOOR HANDLE	1	J
- 5B	0517006-2		HANDLE-INSIDE DOOR	1	Y
- 6	0511189-1		CLIP-DOOR HANDLE	1	
- 7	0700166-1		PLACARD-DOOR HANDLE LH	1	G
- 8	1705015-1		PLACARD-DOOR HANDLE LH	1	F
- 9	0511189-2		ESCUTCHEON-DOOR HANDLE	1	G
- 9A	1211836-1		WASHER	1	N
-10	0511460-9		STRUCTURE ASSEMBLY-CABIN DOOR LH	1	G
	0511460-23		STRUCTURE ASSEMBLY-CABIN DOOR LH	1	K
	0511460-33		STRUCTURE ASSEMBLY-CABIN DOOR LH	1	O
	0511460-49		STRUCTURE ASSEMBLY-CABIN DOOR LH	1	T
	0511803-1		STRUCTURE ASSEMBLY-CABIN DOOR LH	1	U
-11	S1346-1		SEAL 144 IN LG BULK ITEM REF S1346-1-144	1	
-12	0511463-1		CLIP-UPHOLSTERY RETAINER	2	
			ATTACHING PARTS		
-13	S1021Z4-4		SCREW	2	
			---*---		
-14	0511461-1		REINFORCEMENT-DOOR HINGE	1	
-15	0511464-1		ANGLE-DOOR REINFORCEMENT	1	
	0511280-1		HINGE ASSEMBLY-DOOR UPPER	1	
-16	0511237-1		HINGE HALF ASSEMBLY	1	
-17	0511238-1		HINGE HALF ASSEMBLY	1	
-18	0711001-59		PIN-HINGE UPPER	1	
-19	0511469-1		BRACKET-HINGE UPPER	1	
-20	0511280-3		HINGE-DOOR LOWER	1	
-21	A1663-028-1		LATCH-DOOR STOP WEU A1663-022-1	1	M
	A1663-022-1		LATCH-DOOR STOP TIN	1	L
-22	0711021-1		PLATE	1	
-23	0711021-11		ARM ASSEMBLY ALSO ORDER 0711021-12 SPACER	1	
			ATTACHING PARTS		
-24	AN525-10R8		SCREW	1	
	0711021-12		SPACER	1	
			---*---		
-25	0711021-9		SPRING	1	
-26	0413323-9		LOCK ASSEMBLY-DOOR WHEN EXHAUSTED USE C253001-0101	1	B
	C253001-0101		LOCK ASSEMBLY-DOOR	1	C
-27	0511263-1		CAM-DOOR LOCK	1	
-28	0411851		WASHER	1	
-29	SEE FIG 78		LATCH ASSEMBLY-DOOR	1	
			ATTACHING PARTS		
-30	AN525-832R6		SCREW	9	
-31	S1021Z6-6		SCREW	11	
-31A	AN936B6		WASHER	18	
-32	NAS395-5-3		NUT	10	
	NAS488-1-3		NUT	1	
			---*---		
	0711050-19		WINDOW ASSEMBLY-DOOR LH	1	G
	0711050-23		WINDOW ASSEMBLY-DOOR LH	1	F
-33	0711051-1		GLASS ASSEMBLY-WINDOW	1	
	0711051-2		GLASS ASSEMBLY-WINDOW TINTED	1	
	0711051-5		SEAL	1	
-34	0711050-5		FRAME-WINDOW LH	1	
-35	0711050-7		SPLICE TUBE	1	
			ATTACHING PARTS		
	CR163-4-4		RIVET CY	8	
			---*---		

CONTINUED ON NEXT PAGE

Door & Window (Cont)

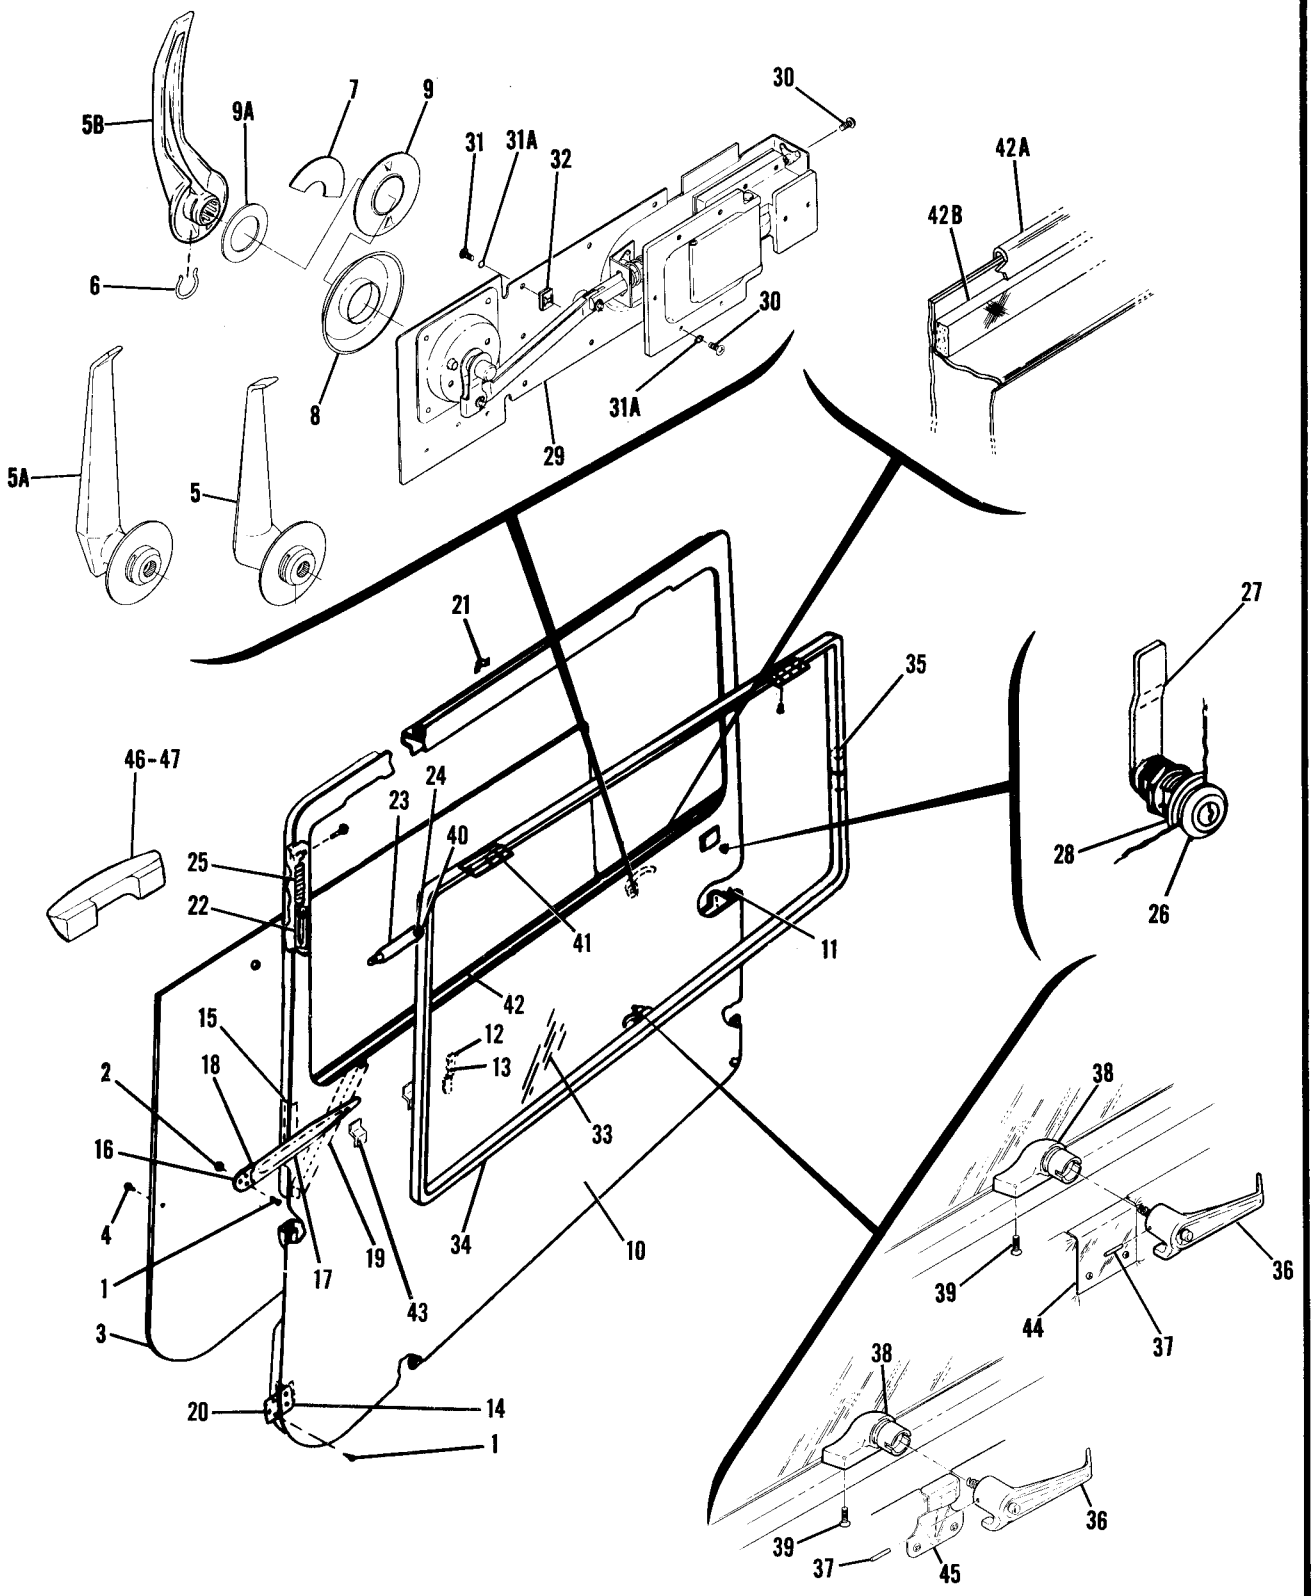

172 SERIAL 17253393 THRU 17263458

Figure 73. Left Cabin Door Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
73 -36	S1483-2		HANDLE ASSEMBLY-WINDOW LATCH	1	
			ATTACHING PARTS		
-37	NAS561P3-8		ROLL PIN	1	
			---*---		
-38	1411202-201		BRACKET ASSEMBLY-WINDOW LATCH	1	
			ATTACHING PARTS		
-39	NAS514P1032-14		SCREW	2	
	NAS43HT3-34		SPACER	2	
			---*---		
-40	S1613-3-75		RIVNUT GD	1	
-41	0411185-9		HINGE-WINDOW	2	M
	0411185-7		HINGE-WINDOW	2	L
-42	S1378-2		SEAL 84.0 IN LG BULK ITEM REF S1378-2-84.00	1	Z
-42A	S2195-1		TRIM 84.0 IN LG BKI REF S2195-1-84.00	1	AA
-42B	S2108-1		SEAL 84.0 IN LG BKI REF S2108-1-84.00	1	AA
-43	0711125-1		BRACKET-ARM REST FORWARD	1	Q
	0711125-2		BRACKET-ARM REST AFT	1	Q
	0711125-5		BRACKET ASSEMBLY-ARM REST FWD	1	T
	0711125-6		BRACKET ASSEMBLY-ARM REST AFT	1	T
	0511804-1		BRACKET ASSEMBLY-ARM REST RH	1	U
	NAS680A3		NUT	2	U
-44	0711021-7		PLATE-STRIKER	1	G
-45	0517002-1		PLATE-STRIKER	1	F
			ATTACHING PARTS		
	S1021Z8-8		SCREW	2	
			---*---		
-46	1414082-18		ARMREST ASSEMBLY	1	V
	1414082-20		ARMREST ASSEMBLY	1	W
			ATTACHING PARTS		
	NAS221-17		SCREW	2	AD
	S1021Z10-20		SCREW	2	AE
	NAS396-7		NUT	2	AE
	AN520-10R20		SCREW	2	W
			---*---		
	1414082-13		PAD ASSEMBLY-ARMREST	1	V
	1414082-21		PAD ASSEMBLY-ARMREST	1	W
-47	0514078-5	#	ARMREST ASSEMBLY	1	S
	0715039-1	#	ARMREST ASSEMBLY	1	AC
			ATTACHING PARTS		
	AN520-10R20		SCREW	2	S
	AN520-10R12		SCREW	2	AC
			---*---		

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.


A---172 SERIAL 17253393 THRU 17263458
F172 SERIAL F172-0180 THRU F17201234
B---172 SERIAL 17253393 THRU 17254892
F172 SERIAL F172-0180 THRU F172-0319
C---172 SERIAL 17254893 THRU 17263458
F172 SERIAL F172-0320 THRU F17201234
D---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F172-0559
E---172 SERIAL 17256513 THRU 17257161
F---172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
G---172 SERIAL 17253393 THRU 17257161
F172 SERIAL F172-0180 THRU F172-0559
H---172 SERIAL 17253393 THRU 17257161
F172 SERIAL F172-0180 THRU F17200904
J---172 SERIAL 17257162 THRU 17260758
K---172 SERIAL 17257162 THRU 17258486
F172 SERIAL F172-0560 THRU F172-0654
L---172 SERIAL 17258487 THRU 17263458
F172 SERIAL F17200655 THRU F17201234
M---172 SERIAL 17253393 THRU 17258486
F172 SERIAL F172-0180 THRU F172-0654
N---172 SERIAL 17258810 THRU 17263458
F172 SERIAL F17200680 THRU F17201234
O---172 SERIAL 17258487 THRU 17259223
F172 SERIAL F17200655 THRU F17200754
P---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
73 -		Q---172 SERIAL 17253393 THRU 17259223 F172 SERIAL F172-0180 THRU F17200754 R---172 SERIAL 17259224 THRU 17259903 F172 SERIAL F17200755 THRU F17200804 S---172 SERIAL 17259904 THRU 17261898 F172 SERIAL F17200805 THRU F17201034 T---172 SERIAL 17259224 THRU 17259903 F172 SERIAL F17200755 THRU F17201234 U---172 SERIAL 17259904 THRU 17263458 V---172 SERIAL 17253393 THRU 17257161 F172 SERIAL F172-0180 THRU F17200754 W---172 SERIAL 17257162 THRU 17259903 F172 SERIAL F17200755 THRU F17200804 X---172 SERIAL 17259904 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 Y---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200905 THRU F17201234 Z---172 SERIAL 17253393 THRU 17261729 F172 SERIAL F172-0180 THRU F17201034 AA---172 SERIAL 17261730 THRU 17263458 F172 SERIAL F17201035 THRU F17201234 AB---172 SERIAL 17260759 THRU 17261898 F172 SERIAL F17200905 THRU F17201034 AC---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234 AD---172 SERIAL 17253393 THRU 17256512 F172 SERIAL F172-0180 THRU F172-0559 AE---172 SERIAL 17256513 THRU 17257161 F172 SERIAL F172-0560 THRU F17200754		

This page intentionally left blank.

Door & Window (Cont)

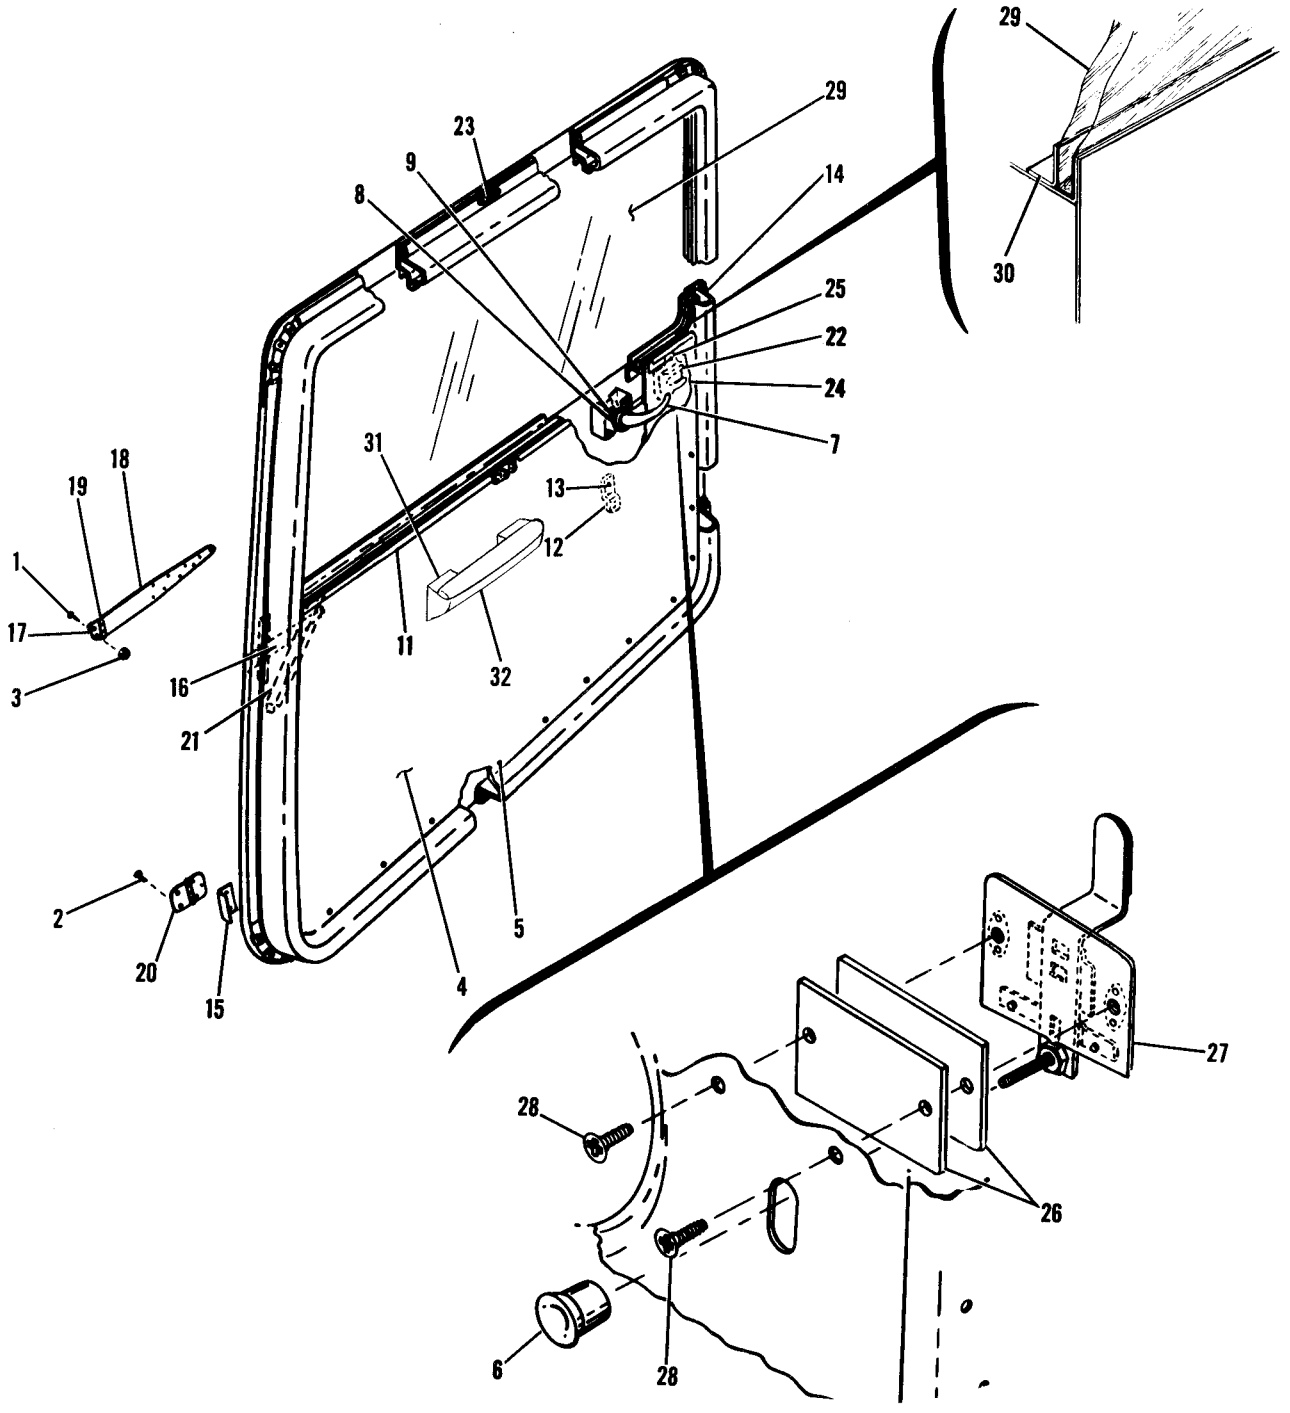

172 SERIAL 17249545 THRU 17253392
P172 SERIAL P17257120 THRU P17257188

Figure 74. Right Cabin Door Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
74 -			CABIN DOOR ASSEMBLY-RH	NP	E
			ATTACHING PARTS		
- 1	AN520-10R8		SCREW	3	
- 2	AN520-10R8		SCREW	2	
- 3	MS21044N3		NUT	5	
			---*---		
- 4	0500212-2		PANEL ASSEMBLY-UPHOLSTERY SKYHAWK ONLY	1	A
	0500212-4		PANEL ASSEMBLY-UPHOLSTERY	1	A
	0500217-4		PANEL ASSEMBLY-UPHOLSTERY	1	B
	0500240-6		PANEL ASSEMBLY-UPHOLSTERY	1	C
- 5	807		FASTENER-UPHOLSTERY PANEL AUV	17	
- 6	0713303-2		KNOB-THUMB LATCH	1	
- 7	0711027-1		HANDLE-DOOR INSIDE	1	
- 8	0511189-2		ESCUTCHEON-DOOR HANDLE	1	
- 9	0511189-1		CLIP-DOOR HANDLE RETAINING	1	
-10			DELETED		
	0511460-2		STRUCTURE ASSEMBLY-CABIN DOOR RH	1	
-11	0711023-15		RETAINER-UPHOLSTERY	1	
-12	0511463-1		CLIP-UPHOLSTERY	2	
			ATTACHING PARTS		
-13	S1021Z4-4		SCREW	2	
			---*---		
-14	S1346-1		SEAL 144 IN LG BULK ITEM REF S-1346-1-144	1	
-15	0511461-1		REINFORCEMENT-DOOR HINGE	1	
-16	0511464-1		ANGLE-DOOR REINFORCEMENT	1	
	0511280-2		HINGE ASSEMBLY-DOOR UPPER RIGHT	1	
-17	0511237-2		HINGE HALF ASSEMBLY	1	
-18	0511238-2		HINGE HALF ASSEMBLY	1	
-19	0711001-59		PIN-HINGE	1	
-20	0511280-4		HINGE ASSEMBLY-DOOR LOWER RIGHT	1	
-21	0511467-1		SHAFT-DOOR HANDLE	1	
	0411576		PAN-DOOR LATCH	1	
	0511227-6		SHAFT-DOOR HANDLE	1	
-22	0411886		SPACER-DOOR LATCH PAN	4	
-23	A1663-028-1		LATCH-DOOR STOP TIN	1	
	0413195-3		PLATE ASSEMBLY-DOOR HANDLE BEARING	1	
			ATTACHING PARTS		
	S1022Z8-8		SCREW	4	
	NAS395-16-3		NUT	4	
			---*---		
	0511465-1		BRACKET ASSEMBLY-DOOR HANDLE INNER	1	
	MS20392-3C27		PIN	1	
-24	0511112-18	*	LATCH ASSEMBLY-DOOR SEE FIGURE 42	1	
			ATTACHING PARTS		
-25	AN520-10R6		SCREW	8	
			---*---		
-26	0511466-1		DOUBLER-THUMB LATCH	2	
-27	SEE FIG 79		LATCH ASSEMBLY-THUMB	1	
			ATTACHING PARTS		
-28	S1021Z8-8		SCREW	2	
			---*---		


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
74 -29	1210040-23	GLASS ASSEMBLY-WINDOW	1	
-30	1210040-10	RETAINER-WINDOW	1	
-31	0711125-1	BRACKET-ARM REST FORWARD	1	
	0711125-2	BRACKET-ARM REST AFT	1	
-32	1414082-1	ARMREST ASSEMBLY WHEN EXHAUSTED USE 1414082-7	1	A
	1414082-7	ARMREST ASSEMBLY	1	B
	1414082-14	ARMREST ASSEMBLY	1	C
		ATTACHING PARTS		
	NAS221-17	SCREW	2	
		---*---		
	1414082-6	PAD ASSEMBLY-ARMREST	1	D
	1414082-13	PAD ASSEMBLY-ARMREST	1	C
		NOTE. *WHEN ORDERING THIS PART FOR AIRPLANES PRIOR TO SERIAL 17250153 OR P17257175 THAT HAVE NOT BEEN MODIFIED TO SK172-16, ALSO ORDER ONE 0511248-1 SPRING & INSTALL IN ACCORDANCE WITH INSTRUCTIONS OF SK172-16.		
		A---172 SERIAL 17249545 THRU 17250572 P172 SERIAL P17257120 THRU P17257188 F172 SERIAL F172-0001 THRU F172-0018 FP172 SERIAL FP172-0001 THRU FP172-0003		
		B---172 SERIAL 17250573 THRU 17251822 F172 SERIAL F172-0019 THRU F172-0085		
		C---172 SERIAL 17251823 THRU 17253392 F172 SERIAL F172-0086 THRU F172-0179		
		D---172 SERIAL 17249545 THRU 17251822 F172 SERIAL F172-0001 THRU F172-0085 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		
		E---172 SERIAL 17249545 THRU 17253392 F172 SERIAL F172-0001 THRU F172-0179 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
75 -			CABIN DOOR ASSEMBLY-RH	NP	A
			ATTACHING PARTS		
- 1	AN520-10R8		SCREW	3	
- 2	AN520-10R8		SCREW	2	
- 3	MS21044N3		NUT	5	
			---*---		
- 4	0500251-6	#	PANEL ASSEMBLY-UPHOLSTERY	1	B
	0500258-6	#	PANEL ASSEMBLY-UPHOLSTERY	1	C
	0500258-30	#	PANEL ASSEMBLY-UPHOLSTERY 172 ONLY	1	D
	0500258-6	#	PANEL ASSEMBLY-UPHOLSTERY SKYHAWK ONLY	1	D
	0514009-6	#	PANEL ASSEMBLY-UPHOLSTERY	1	E
	0514039-6	#	PANEL ASSEMBLY-UPHOLSTERY	1	H
	0514059-6	#	PANEL ASSEMBLY-UPHOLSTERY	1	P
	0514073-6	#	PANEL ASSEMBLY-UPHOLSTERY	1	V
	0515004-4	#	PANEL ASSEMBLY-UPHOLSTERY	1	X
	0515005-4	#	PANEL ASSEMBLY-UPHOLSTERY	1	Y
- 5	807		FASTENER-UPHOLSTERY AJV	17	Z
	S1881-1		FASTENER-UPHOLSTERY	17	H
	S1933-1		FASTENER-UPHOLSTERY	17	AA
- 6	0711027-1		HANDLE-INSIDE DOOR	1	F
- 6A	0511189-1		CLIP-DOOR HANDLE	1	
- 6B	1211250-7		HANDLE-INSIDE DOOR	1	G
	1211251-1		INSERT-DOOR HANDLE	1	
- 6C	0517006-2		HANDLE-INSIDE DOOR	1	W
- 7	0700166-2		PLACARD-DOOR HANDLE	1	L
- 7A	1705015-2		PLACARD-DOOR HANDLE	1	M
- 7B	1211836-1		WASHER	1	J
- 8	0511189-2		ESCUTCHEON	1	L
	0511460-10		STRUCTURE ASSEMBLY-CABIN DOOR RH	1	Z
	0511460-34		STRUCTURE ASSEMBLY-CABIN DOOR RH	1	H
	0511460-50		STRUCTURE ASSEMBLY-CABIN DOOR RH	1	K
	0511803-14		STRUCTURE ASSEMBLY-CABIN DOOR RH	1	T
- 9	0511463-1		CLIP-UPHOLSTERY	2	
			ATTACHING PARTS		
-10	S1021Z4-4		SCREW	2	
			---*---		
-11	S1346-1		SEAL 144 IN LG BULK ITEM REF S1346-1-144	1	
-12	0511461-1		REINFORCEMENT-DOOR HINGE	1	
-13	0511464-1		ANGLE-DOOR REINFORCEMENT	1	
	0511280-2		HINGE ASSEMBLY-DOOR UPPER RIGHT	1	
-14	0511237-2		HINGE HALF ASSEMBLY	1	
-15	0511238-2		HINGE HALF ASSEMBLY	1	
-16	0711001-59		PIN-HINGE	1	
-17	0511280-4		HINGE ASSEMBLY-DOOR LOWER RIGHT	1	
-18	0511467-1		BRACE-HINGE UPPER	1	
-19	A1663-022-1		LATCH-DOOR STOP TIN	1	
-20	SEE FIG 78		LATCH ASSEMBLY-DOOR	1	
			ATTACHING PARTS		
	AN525-832R6		SCREW	9	
-21	S1021Z6-6		SCREW	11	
	NAS488-1-3		NUT	11	
-21A	AN936B6		WASHER	18	
			---*---		
-22	1210040-10		RETAINER-WINDOW	1	
-23	1210040-23		GLASS ASSEMBLY-WINDOW	1	
	1210040-8		GLASS ASSEMBLY-WINDOW TINTED	1	
-24	0711125-1		BRACKET-ARMREST FORWARD	1	N
	0711125-2		BRACKET-ARMREST AFT	1	N
	0711125-6		BRACKET ASSEMBLY-ARMREST FWD	1	K
	0711125-5		BRACKET ASSEMBLY-ARMREST AFT	1	K
	0511804-2		BRACKET ASSEMBLY-ARMREST	1	T
	NAS680A3		NUT	2	T

CONTINUED ON NEXT PAGE

Door & Window (Cont)

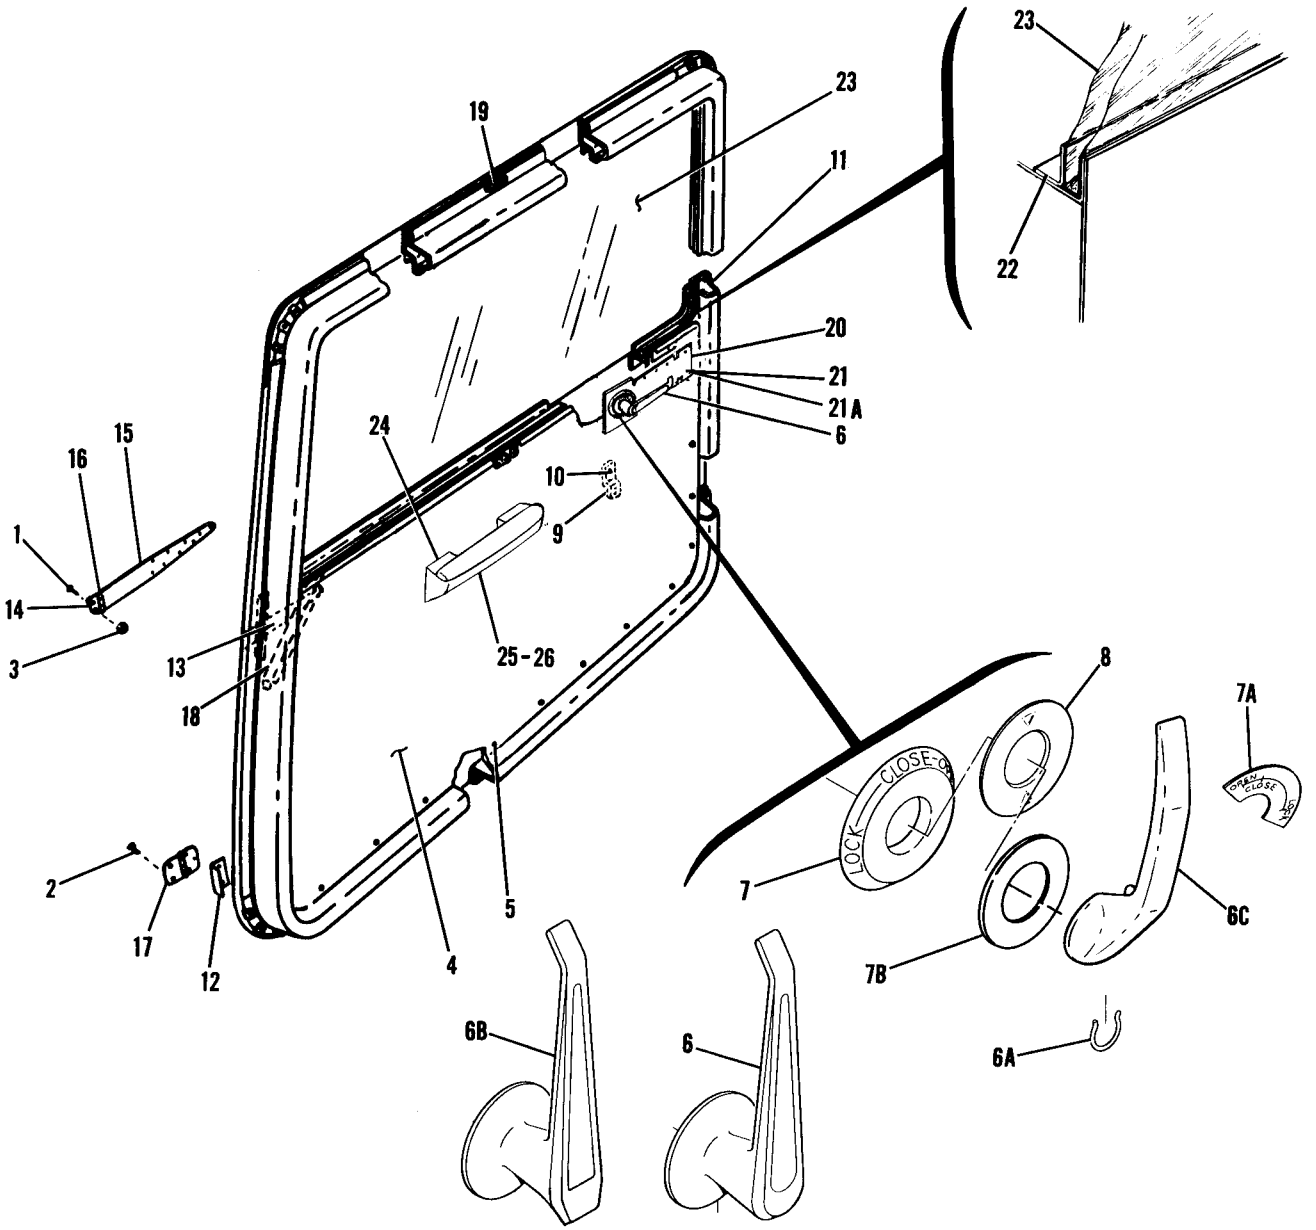

172 SERIAL 17253393 THRU 17263458
F172 SERIAL F172-0180 THRU F17201234


Figure 75. Right Cabin Door Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
75 -25	1414082-18		ARMREST ASSEMBLY	1	U
	1414082-20		ARMREST ASSEMBLY	1	S
			ATTACHING PARTS		
	NAS221-17		SCREW	2	AB
	S1021Z10-20		SCREW	2	AC
	NAS396-7		NUT	2	AC
	AN520-10R20		SCREW	2	S
			---*---		
	1414082-13		PAD ASSEMBLY-ARMREST	1	U
	1414082-21		PAD ASSEMBLY-ARMREST	1	S
-26	0514078-5	#	ARMREST ASSEMBLY	1	R
	0715039-2	#	ARMREST ASSEMBLY	1	Y
			ATTACHING PARTS		
	AN520-10R20		SCREW	2	R
	AN520-10R12		SCREW	2	Y
			---*---		

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.

A---172 SERIAL 17253393 THRU 17263458
F172 SERIAL F172-0180 THRU F17201234
B---172 SERIAL 17253393 THRU 17254892
F172 SERIAL F172-0180 THRU F172-0319
C---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F172-0559
D---172 SERIAL 17256513 THRU 17257161
E---172 SERIAL 17257162 THRU 17258486
F172 SERIAL F172-0560 THRU F172-0654
F---172 SERIAL 17253393 THRU 17257161
F172 SERIAL F172-0180 THRU F17200904
G---172 SERIAL 17257162 THRU 17260758
H---172 SERIAL 17258487 THRU 17259223
F172 SERIAL F17200655 THRU F17200754
J---172 SERIAL 17258810 THRU 17263458
F172 SERIAL F17200680 THRU F17201234
K---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F17200755 THRU F17201234
L---172 SERIAL 17253393 THRU 17257161
F172 SERIAL F172-0180 THRU F172-0654
M---172 SERIAL 17257162 THRU 17263458
F172 SERIAL F17200655 THRU F17201234
N---172 SERIAL 17253393 THRU 17259223
F172 SERIAL F172-0180 THRU F17200754
P---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F17200755 THRU F17200804
R---172 SERIAL 17259904 THRU 17261898
F172 SERIAL F17200805 THRU F17201034
S---172 SERIAL 17257162 THRU 17259903
F172 SERIAL F17200755 THRU F17200804
T---172 SERIAL 17259904 THRU 17263458
U---172 SERIAL 17253393 THRU 17257161
F172 SERIAL F172-0180 THRU F17200754
V---172 SERIAL 17259904 THRU 17260758
F172 SERIAL F17200805 THRU F17200904
W---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234
X---172 SERIAL 17260759 THRU 17261898
F172 SERIAL F17200905 THRU F17201034
Y---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234
Z---172 SERIAL 17253393 THRU 17258486
F172 SERIAL F172-0180 THRU F172-0654
AA---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234
AB---172 SERIAL 17253393 THRU 17256512
F172 SERIAL F172-0180 THRU F172-0559
AC---172 SERIAL 17256513 THRU 17257161
F172 SERIAL F172-0560 THRU F17200754

Door & Window (Cont)

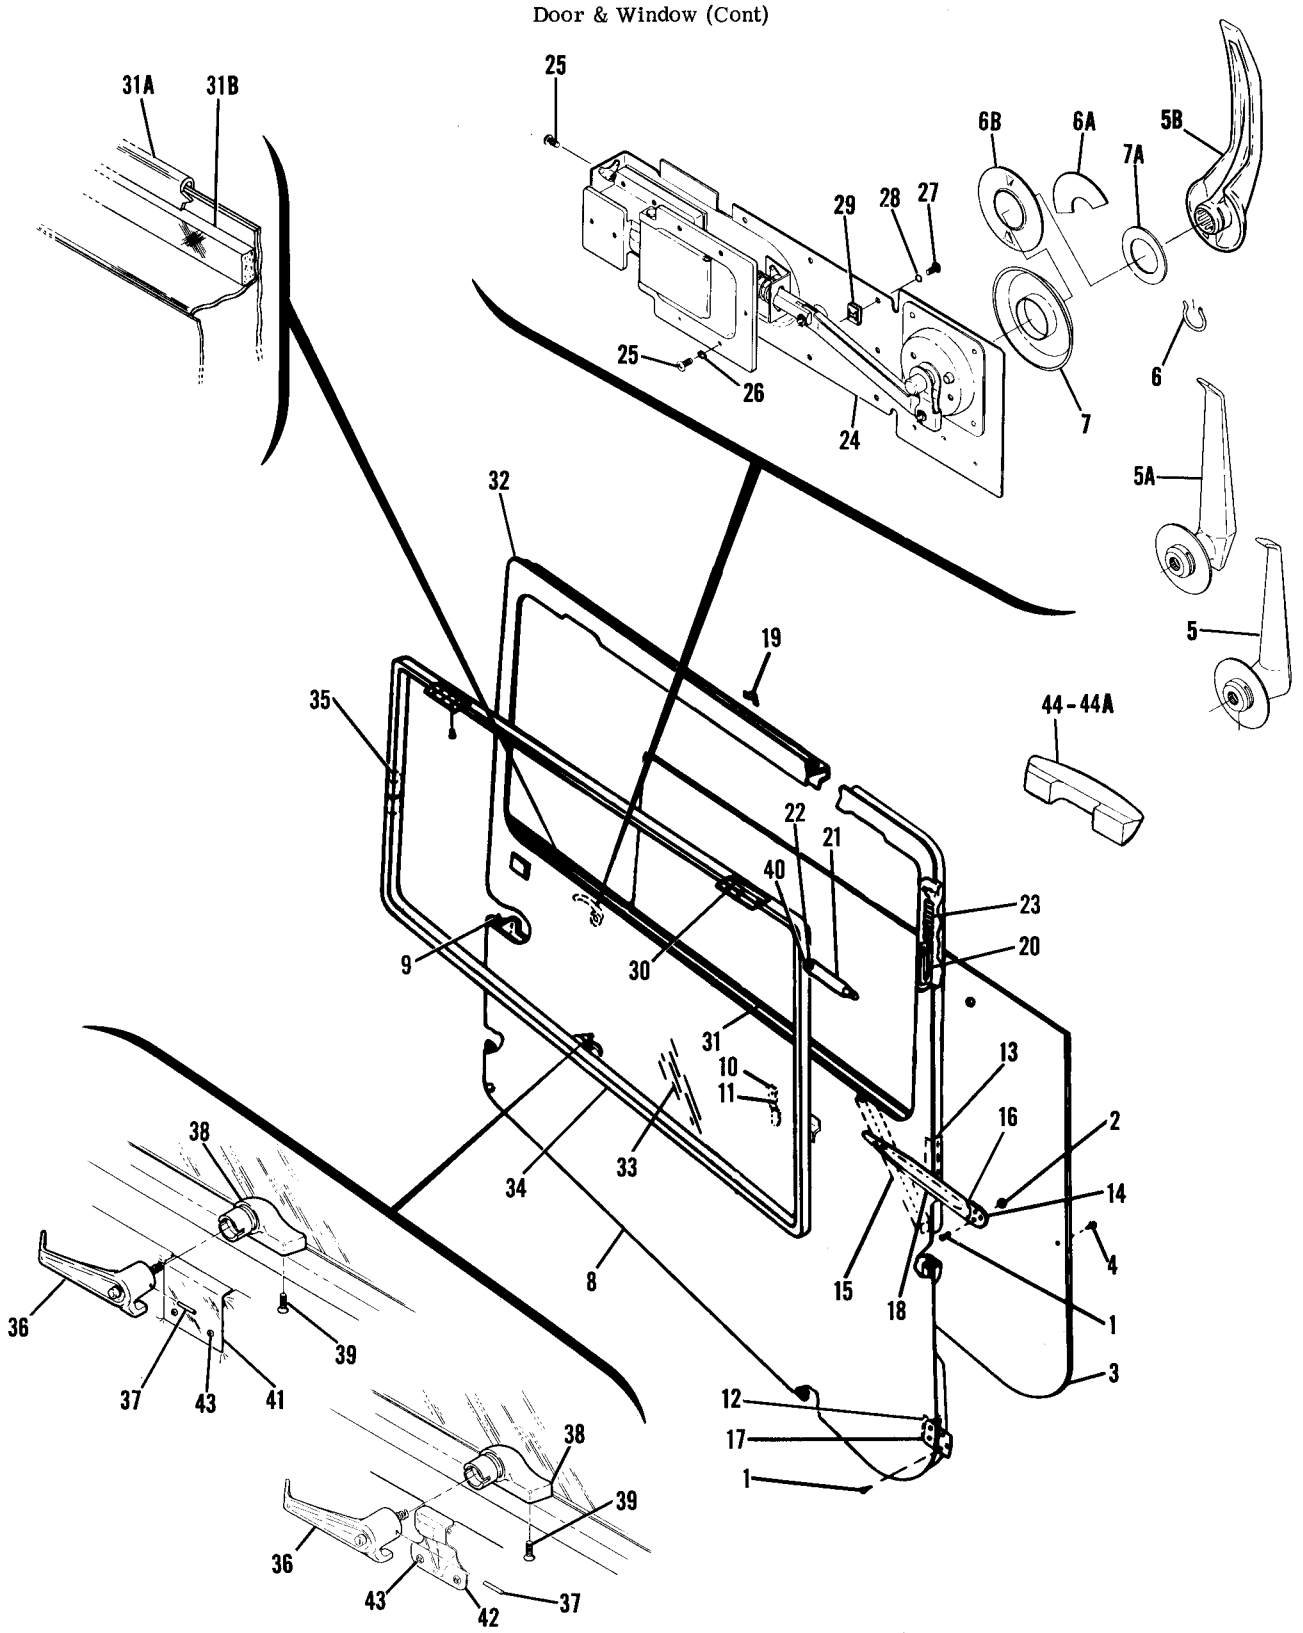

172 SERIAL 17256513 THRU 17263458

Figure 76. Right Cabin Door Assembly-Openable Window

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
76 -			CABIN DOOR ASSEMBLY-RH OPENABLE WINDOW	NP	A
			ATTACHING PARTS		
- 1	AN520-10R8		SCREW	5	
- 2	MS21044N3		NUT	5	
			---*---		
- 3	0500258-40	#	PANEL ASSEMBLY-UPHOLSTERY 172 ONLY	1	B
	0500258-41	#	PANEL ASSEMBLY-UPHOLSTERY SKYHAWK ONLY	1	B
	0514009-16	#	PANEL ASSEMBLY-UPHOLSTERY	1	F
	0514039-16	#	PANEL ASSEMBLY-UPHOLSTERY	1	G
	0514059-17	#	PANEL ASSEMBLY-UPHOLSTERY	1	J
	0514073-17	#	PANEL ASSEMBLY-UPHOLSTERY	1	X
	0515004-18	#	PANEL ASSEMBLY-UPHOLSTERY	1	AB
	0515005-16	#	PANEL ASSEMBLY-UPHOLSTERY	1	AC
	S1881-1		FASTENER-UPHOLSTERY	17	G
	S1933-1		FASTENER-UPHOLSTERY	17	AD
- 4	807		FASTENER-UPHOLSTERY AUV	17	V
- 5	0711027-1		HANDLE-INSIDE DOOR	1	D
- 5A	1211250-7		HANDLE-INSIDE DOOR	1	P
	1211251-1		INSERT-DOOR HANDLE	1	C
- 5B	0517006-2		HANDLE-INSIDE DOOR	1	Y
- 6	0511189-1		CLIP-DOOR HANDLE	1	
- 6A	0700166-2		PLACARD-DOOR HANDLE	1	K
- 6B	0511189-2		ESCUTCHEON	1	K
- 7	1705015-2		PLACARD-DOOR HANDLE	1	L
- 7A	1211836-1		WASHER	1	M
- 8	0511460-200		STRUCTURE ASSEMBLY-CABIN DOOR RH	1	B
	0511460-201		STRUCTURE ASSEMBLY-CABIN DOOR RH	1	H
	0511460-202		STRUCTURE ASSEMBLY-CABIN DOOR RH	1	G
	0511460-203		STRUCTURE ASSEMBLY-CABIN DOOR RH	1	T
	0511803-2		STRUCTURE ASSEMBLY-CABIN DOOR RH	1	U
- 9	S1346-1		SEAL 144 IN LG BULK ITEM REF S1346-1-144	1	
-10	0511463-1		CLIP-UPHOLSTERY RETAINER	2	
			ATTACHING PARTS		
-11	S1021Z4-4		SCREW	2	
			---*---		
	0511804-2N		BRACKET ASSEMBLY-ARMREST	1	R
	NAS680A3		NUT	2	R
-12	0511461-1		REINFORCEMENT-DOOR HINGE	1	
-13	0511464-1		ANGLE-DOOR REINFORCEMENT	1	
	0511280-2		HINGE ASSEMBLY-DOOR UPPER RH	1	
-14	0511237-2		HINGE HALF ASSEMBLY	1	
-15	0511238-2		HINGE HALF ASSEMBLY	1	
-16	0711001-59		PIN-HINGE	1	
-17	0511280-4		HINGE ASSEMBLY-DOOR LOWER RH	1	
-18	0511469-2		BRACKET-HINGE UPPER	1	
-19	A1663-022-1		CATCH-DOOR STOP TIN	1	
-20	0711021-1		PLATE	1	
-21	0711021-11		ARM ASSEMBLY ALSO ORDER 0711021-12 SPACER	1	
			ATTACHING PARTS		
-22	AN525-10R8		SCREW	1	
	0711021-12		SPACER	1	
			---*---		
-23	0711021-9		SPRING	1	
-24	SEE FIG 78		LATCH ASSEMBLY-DOOR	1	
			ATTACHING PARTS		
-25	AN525-832R6		SCREW	9	
-26	AN936A8		WASHER	7	
-27	S1021Z6-6		SCREW	11	
-28	AN936B6		WASHER	11	
-29	NAS395-5-3		NUT	10	
	NAS488-1-3		NUT	1	
			---*---		
-30	0511185-9		HINGE ASSEMBLY-WINDOW	2	V
	0511185-7		HINGE ASSEMBLY-WINDOW	2	W
-31	S1378-2		SEAL 84.0 IN LG BULK ITEM REF S1378-2-84.0	1	Z
-31A	S2195-1		TRIM 84.0 IN LG BKI REF S2195-1-84.0	1	AA
-31B	S2108-1		SEAL 84.0 IN LG BKI REF S2108-1-84.0	1	AA

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
76 -32	S1081-1	*	SEAL * IN LG BULK ITEM REF S1081-1-*	AR	
	0711050-20		WINDOW ASSEMBLY-DOOR RH	1	B
	0711050-24		WINDOW ASSEMBLY-DOOR RH	1	C
-33	0711051-1		GLASS ASSEMBLY-WINDOW	1	
	0711051-2		GLASS ASSEMBLY-WINDOW TINTED	1	
	0711051-5		SEAL	1	
-34	0711050-6		FRAME-WINDOW RH	1	
-35	0711050-7		SPLICE TUBE	1	
			ATTACHING PARTS		
	CR763-4-4		RIVET CY	6	
			---*---		
-36	S1483-1		HANDLE-WINDOW	1	
			ATTACHING PARTS		
-37	NAS561P3-8		ROLL PIN	1	
			---*---		
-38	1411202-201		BRACKET ASSEMBLY-WINDOW LATCH	1	
			ATTACHING PARTS		
-39	NAS514P1032-14		SCREW	2	
	NAS43HT3-34		SPACER	2	
			---*---		
-40	S1613-3-75		RIVNUT	1	
-41	0711021-7		PLATE-STRIKER	1	B
-42	0517002-1		PLATE-STRIKER	1	C
			ATTACHING PARTS		
-43	S1021Z8-8		SCREW	2	
			---*---		
-44	1414082-18		ARMREST ASSEMBLY	1	S
	1414082-20		ARMREST ASSEMBLY	1	E
-44A	0514078-5	#	ARMREST ASSEMBLY	1	AE
	0715039-2	#	ARMREST ASSEMBLY	1	AC
			ATTACHING PARTS		
	S1021Z10-20		SCREW	2	S
	NAS396-7		NUT	2	S
	AN520-10R20		SCREW	2	AF
	AN520-10R12		SCREW	2	AC
			---*---		

NOTE. *THIS PART IS TO BE USED AS A BACK-UP SEAL FOR PRESENT DOOR SEAL AS REQUIRED ON OUTER DOOR CORNERS.


NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.


A---172 SERIAL 17256513 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
B---172 SERIAL 17256513 THRU 17257161
C---172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
D---172 SERIAL 17256513 THRU 17257161
F172 SERIAL F172-0560 THRU F17200904
E---172 SERIAL 17257162 THRU 17259903
F172 SERIAL F17200755 THRU F17200804
F---172 SERIAL 17257162 THRU 17258486
F172 SERIAL F172-0560 THRU F172-0654
G---172 SERIAL 17258487 THRU 17259223
F172 SERIAL F172-0655 THRU F17200754
H---172 SERIAL 17257162 THRU 17258486
F172 SERIAL F172-0560 THRU F172-0654
J---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F17200755 THRU F17200804
K---172 SERIAL 17256513 THRU 17257161
F172 SERIAL F172-0560 THRU F172-0654
L---172 SERIAL 17257162 THRU 17263458
F172 SERIAL F17200655 THRU F17201234
M---172 SERIAL 17258810 THRU 17263458
F172 SERIAL F17200680 THRU F17201234
P---172 SERIAL 17257162 THRU 17260758

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
76 -		R---172 SERIAL 17259904 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 S---172 SERIAL 17256513 THRU 17257161 F172 SERIAL F172-0560 THRU F17200754 T---172 SERIAL 17259224 THRU 17259903 F172 SERIAL F17200755 THRU F17201234 U---172 SERIAL 17259904 THRU 17263458 V---172 SERIAL 17256513 THRU 17258486 F172 SERIAL F172-0560 THRU F172-0654 W---172 SERIAL 17258487 THRU 17263458 F172 SERIAL F172-0655 THRU F17201234 X---172 SERIAL 17259904 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 Y---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200905 THRU F17201234 Z---172 SERIAL 17256513 THRU 17261729 F172 SERIAL F172-0560 THRU F17201034 AA---172 SERIAL 17261730 THRU 17263458 F172 SERIAL F17201035 THRU F17201234 AB---172 SERIAL 17260759 THRU 17261898 F172 SERIAL F17200905 THRU F17201034 AC---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234 AD---172 SERIAL 17259224 THRU 17263458 F172 SERIAL F17200755 THRU F17201234 AE---172 SERIAL 17259904 THRU 17261898 F172 SERIAL F17200805 THRU F17201034 AF---172 SERIAL 17257162 THRU 17261898 F172 SERIAL F17200755 THRU F17201034		

Door & Window (Cont)

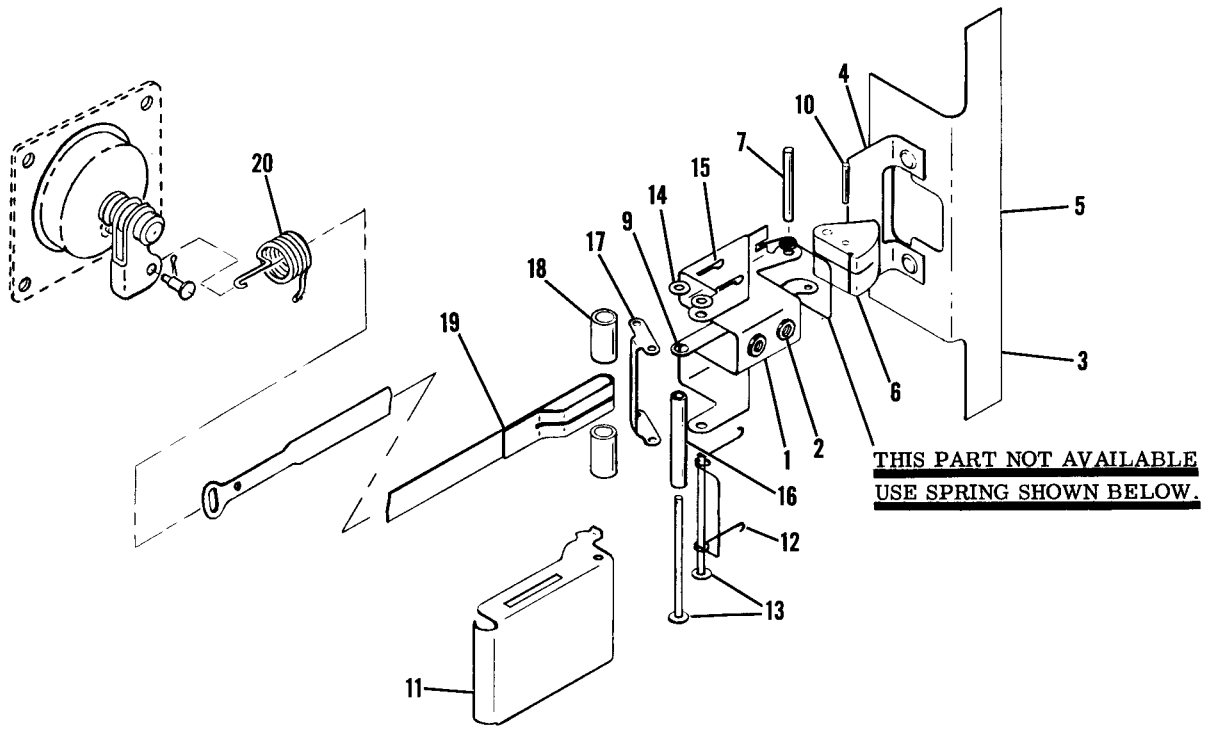

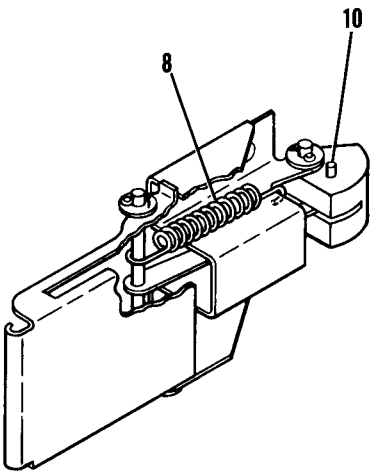

172 SERIAL 17249545 THRU 17253392
P172 SERIAL P17257120 THRU P17257188

Figure 77. Cabin Door Latch Assembly


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
77 -	0511112-18	*	LATCH ASSEMBLY-DOOR	1	C
- 1	0511112-13		HOUSING ASSEMBLY	1	
- 2	S10K75		RIVNUT-HOUSING GD	4	
- 3	0511112-15		BRACKET ASSEMBLY-DOOR LATCH	1	
- 4	0511112-4		BRACKET-LATCH	1	
- 5	0511112-14		PLATE-LATCH	1	
- 6	0411552		CATCH WHEN EXHAUSTED USE 0411552-2	1	A
	0411552-2	**	CATCH	1	B
			ATTACHING PARTS		
- 7	MS20253-5		PIN 1.00 IN LG BULK ITEM REF MS20253-5-100	1	
- 8	0411567-2	**	SPRING	1	
			---*---		
- 9	0511298-1		PULL BAR	1	
			ATTACHING PARTS		
-10	MS20253-2		PIN 0.75 IN LG BULK ITEM REF MS20253-2-75	1	
			---*---		
-11	0411557		HANDLE	1	
			ATTACHING PARTS		
-12	0511119		SPRING	1	
-13	MS20392-1C53		PIN	2	
-14	NAS70A-128-313		WASHER	3	
-15	MS24665-132		PIN-COTTER	2	
-16	0511298-2		SPACER	1	
-17	0411559		SPACER	1	
-18	NAS43DD3-27		SPACER	2	
			---*---		
-19	0411575-11		STRAP	1	
-20	0511248-1		SPRING	1	

NOTE. *WHEN ORDERING THIS PART FOR AIRPLANES PRIOR TO SERIAL 17250153 OR P17257175 THAT HAVE NOT BEEN MODIFIED TO SK172-16, ALSO ORDER ONE 0511248-1 SPRING & INSTALL IN ACCORDANCE WITH INSTRUCTIONS OF SK172-16.

NOTE. **WHEN ORDERING THESE PARTS FOR AIRCRAFT PRIOR TO SERIAL P17257188 OR 17251258 ORDER SK172-16 IN LIEU OF PARTS SHOWN

A---172 SERIAL 17250153 THRU 17251257
B---172 SERIAL 17251258 THRU 17253392
F172 SERIAL F172-0001 THRU F172-0179
C---172 SERIAL 17249545 THRU 17253392
F172 SERIAL F172-0001 THRU F172-0179
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Door & Window (Cont)

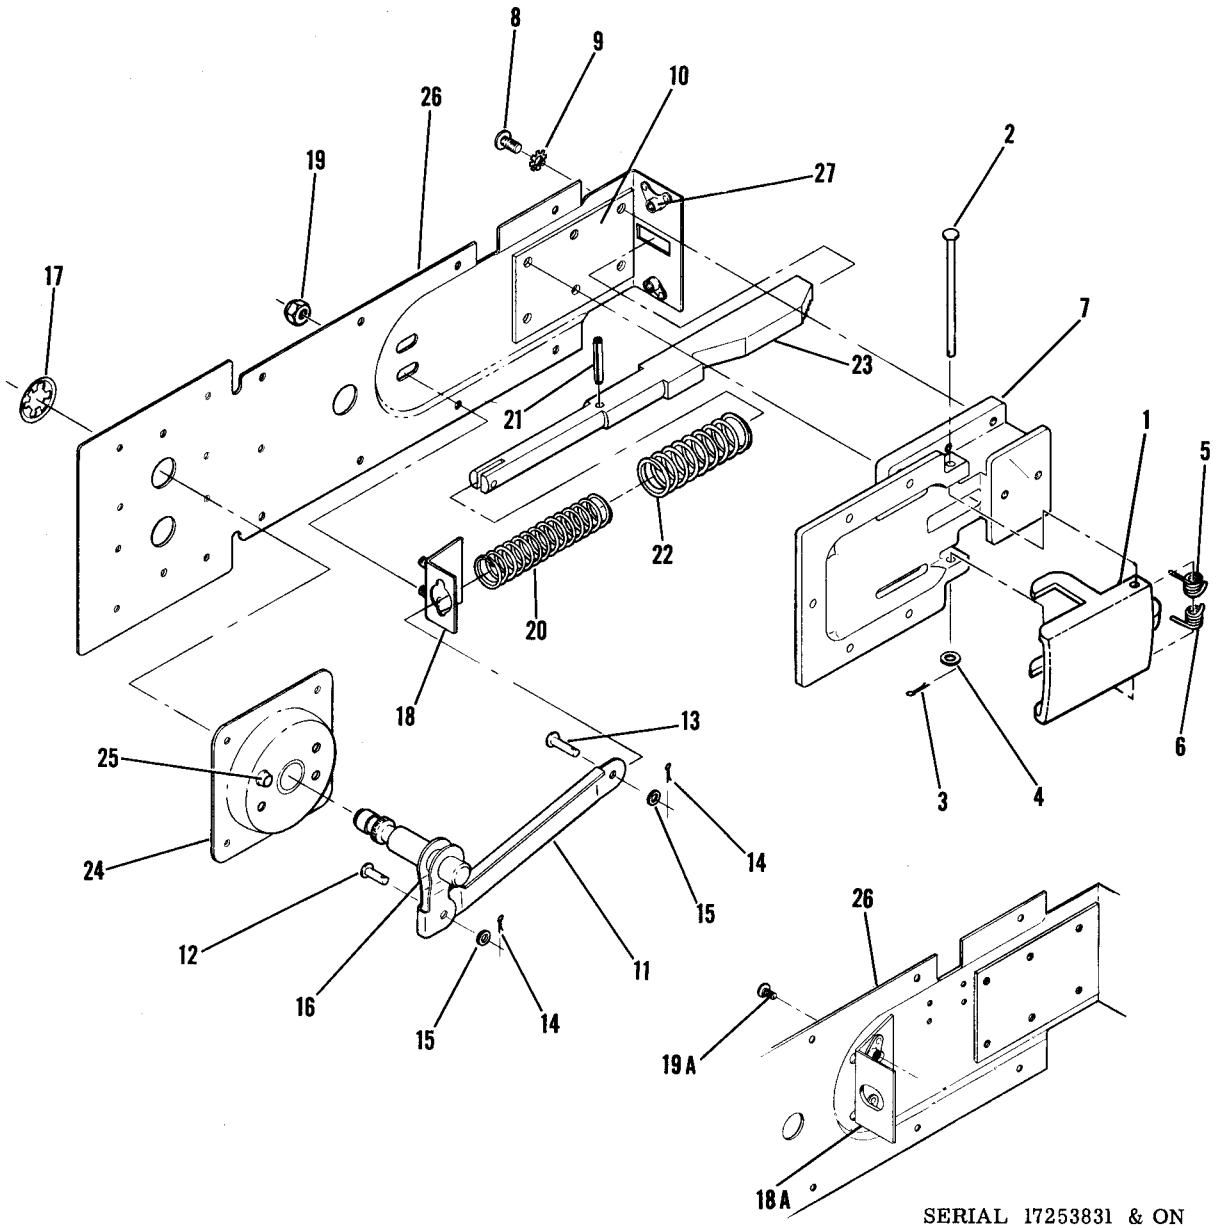

SERIAL 17253831 & ON

172 SERIAL 17253393 THRU 17263458
F172 SERIAL F172-0180 THRU F17201234

Figure 78. Cabin Door Latch Assembly


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
78 -	0511256-1		LATCH ASSEMBLY-DOOR LH	1	A
	0511256-2		LATCH ASSEMBLY-DOOR RH	1	A
- 1	0511259-1		HANDLE ASSY-DOOR LATCH LH WHEN EXHAUSTED USE 0417010-2	1	D
	0511259-2		HANDLE ASSY-DOOR LATCH RH WHEN EXHAUSTED USE 0417010-2	1	D
	0417010-2		HANDLE ASSY-DOOR LATCH	1	E
			ATTACHING PARTS		
- 2	MS20392-1C67		PIN	1	
- 3	MS24665-132		COTTER PIN	1	
- 4	AN960-4		WASHER	1	
- 5	0511261-5		SPRING	1	
- 6	0511261-4		SPRING	1	
			---*---		
- 7	0511258-1		HOUSING-DOOR LATCH	1	
			ATTACHING PARTS		
- 8	AN525-832R6		SCREW	6	
- 9	AN936B8		WASHER	6	
-10	0511264-1		SPACER	1	
			---*---		
-11	1511209-9		PUSH ROD-DOOR LATCH	1	
			ATTACHING PARTS		
-12	MS20392-1C9		PIN	1	
-13	MS20392-1C13		PIN	1	
-14	MS24665-132		COTTER PIN	2	
-15	AN960-4		WASHER	2	
			---*---		
-16	1511212-6		SHAFT ASSEMBLY-DOOR LATCH LH	1	
	1511212-5		SHAFT ASSEMBLY-DOOR LATCH RH	1	
			ATTACHING PARTS		
-17	S1631-8		RETAINING RING	1	
			---*---		
-18	0511265-1		SUPPORT-BOLT	1	B
-18A	0511266-1		SUPPORT ASSEMBLY-BOLT	1	C
			ATTACHING PARTS		
-19	AN340-8		NUT	2	B
-19A	AN525-832R7		SCREW	2	C
			---*---		
-20	0511261-3		SPRING-BOLT	1	
-21	NAS561-3-14		ROLL PIN	1	
-22	0511261-2		SPRING	1	
-23	0511260-1		BOLT-DOOR LATCH LH	1	
	0511260-2		BOLT-DOOR LATCH RH	1	
-24	0413195-5		PLATE ASSEMBLY	1	
-25	A6-75		RIVNUT GD	1	
-26	0511257-1	*	PLATE ASSEMBLY-MOUNTING	1	
-27	NAS698A08		NUTPLATE	2	

NOTE. *WHEN ORDERING THIS PART PRIOR TO SERIAL 17253381 OR F172-0304 ALSO ORDER 0511266-1 SUPPORT ASSEMBLY.

A---172 SERIAL 17253393 THRU 17263458
F172 SERIAL F172-0180 THRU F17201234
B---172 SERIAL 17253393 THRU 17253830
F172 SERIAL F172-0180 THRU F172-0303
C---172 SERIAL 17253831 THRU 17263458
F172 SERIAL F172-0304 THRU F17201234
D---172 SERIAL 17253393 THRU 17256512
F172 SERIAL F172-0180 THRU F172-0479
E---172 SERIAL 17256513 THRU 17263458
F172 SERIAL F172-0480 THRU F17201234

This page intentionally left blank.

Door & Window (Cont)

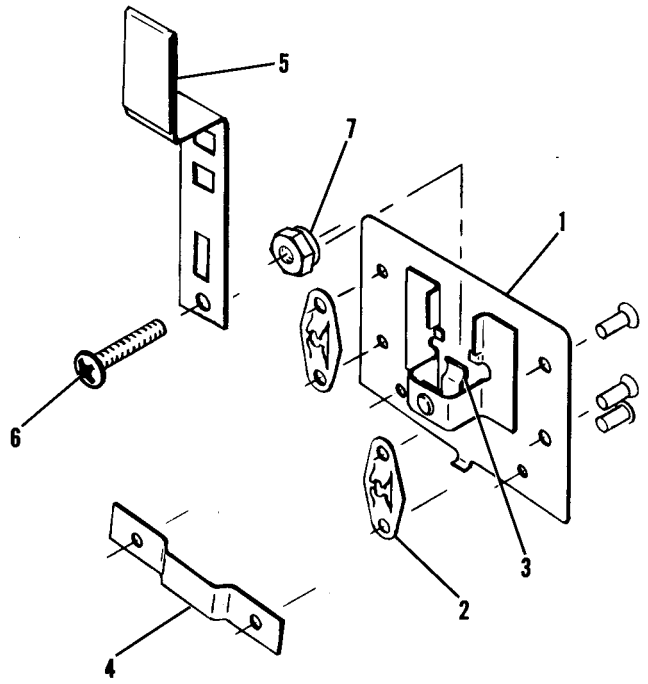


172 SERIAL 17249545 THRU 17253392
P172 SERIAL P17257120 THRU P17257188

Figure 79. Cabin Door Thumb Latch Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
79 -	0411590-1	LATCH ASSEMBLY-THUMB	1	A
- 1	0411665	HOUSING-THUMB LATCH	1	
		ATTACHING PARTS		
- 2	NAS444-4	NUT	2	
		---*---		
- 3	0411591	SPRING-THUMB LATCH	1	
- 4	0411590-3	BRACKET-THUMB LATCH	1	
- 5	0411592-1	BOLT-DOOR LATCH	1	
- 6	AN515-8R12	SCREW	1	
- 7	MS21044N08	NUT	1	

A---172 SERIAL 17249545 THRU 17253392
F172 SERIAL F172-0001 THRU F172-0179
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Baggage Door

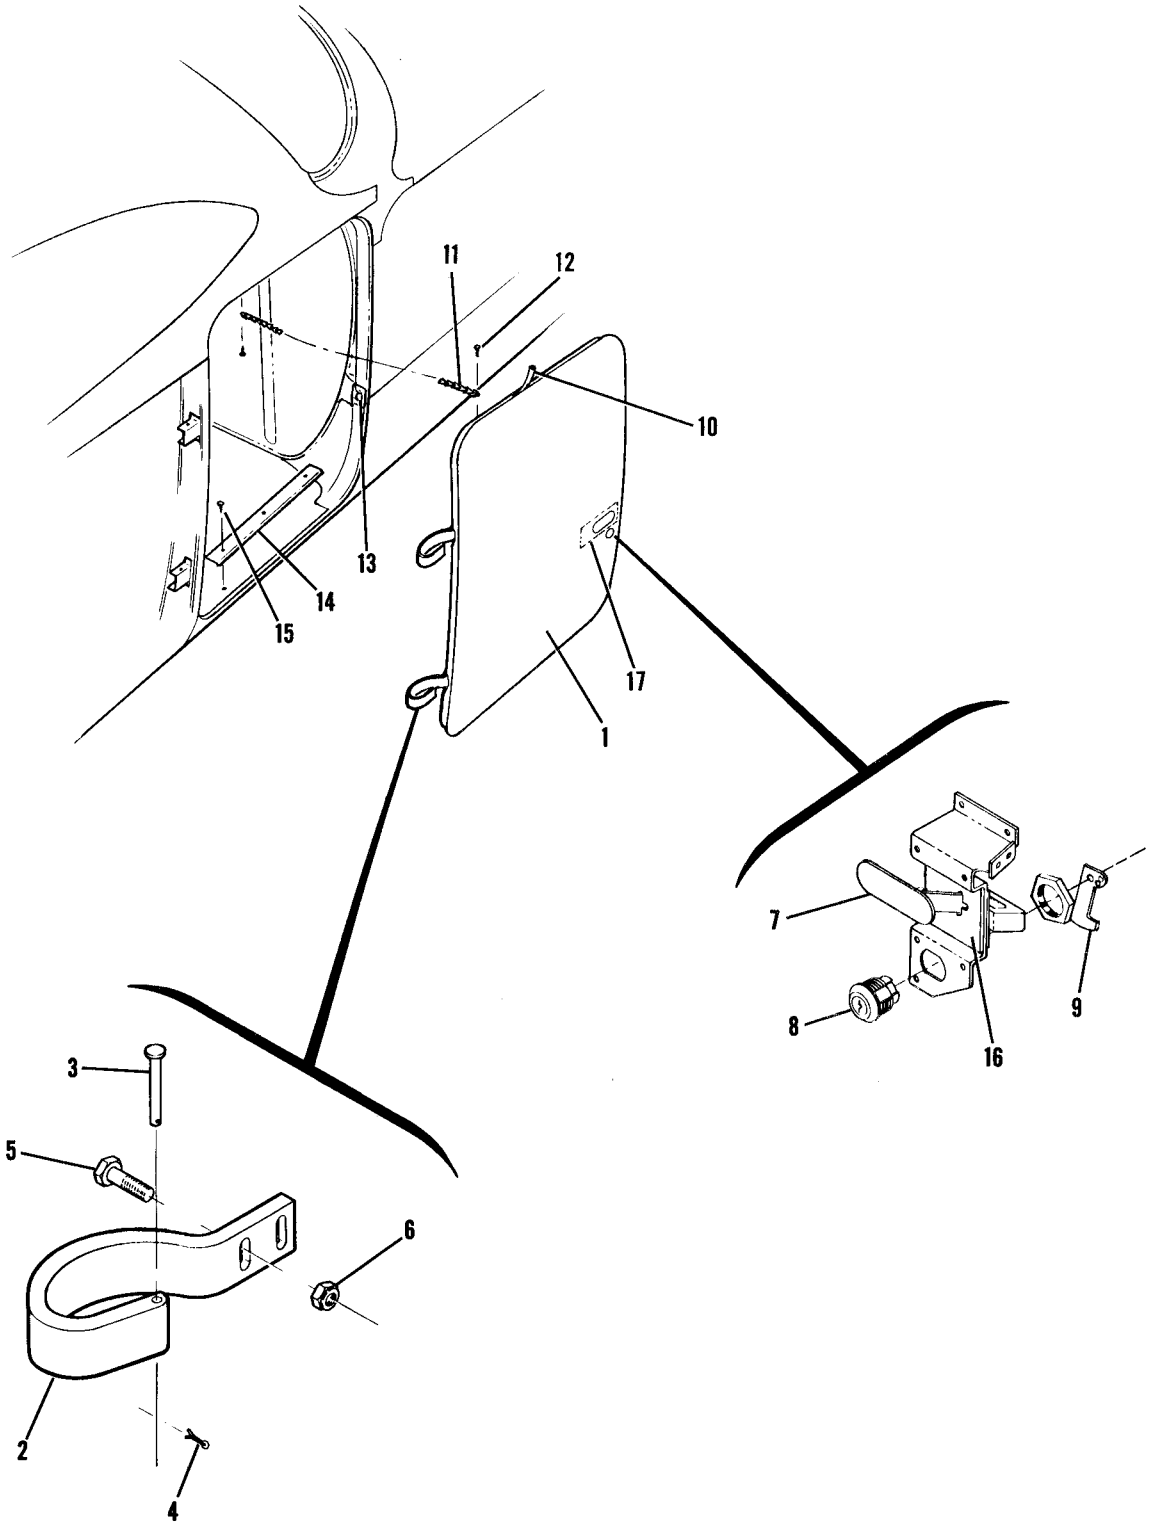


172 SERIAL 17249545 THRU 17258486
P172 SERIAL P17257120 THRU P17257188

Figure 80. Baggage Door Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
80 -		BAGGAGE DOOR INSTALLATION	NP	C
- 1	0711101-33	DOOR ASSEMBLY-BAGGAGE	1	
		ATTACHING PARTS		
- 2	0711102	HINGE-BAGGAGE DOOR	2	
- 3	MS20392-1C49	CLEVIS PIN	2	
- 4	MS24665-132	COTTER PIN	2	
- 5	AN520-10R10	SCREW	4	
- 6	MS21044N3	NUT	4	
		---*---		
- 7	S1189-2	LATCH-BAGGAGE DOOR	1	
- 8	0413323-7	LOCK ASSEMBLY-DOOR WHEN EXHAUSTED USE C253001-0101	1	A
	C253001-0101	LOCK ASSEMBLY-DOOR	1	B
- 9	0711134-1	CAM-BAGGAGE DOOR LOCK	1	
-10	S1084-1	SEAL 80 IN LG BULK ITEM REF S1084-1-80.00	1	
-11	0500210-50	CHAIN ASSEMBLY-BAGGAGE DOOR	1	
		ATTACHING PARTS		
-12	AN515-8R8	SCREW	1	
	AN525-832R8	SCREW	1	
		---*---		
-13	0311319-1	PLATE-BAGGAGE DOOR LATCH	1	
		ATTACHING PARTS		
	AN515-8R6	SCREW	2	
		---*---		
	0311319-2	SHIM-DOOR LATCH PLATE	1	
-14	0311623-1	SCUFF PLATE	1	
		ATTACHING PARTS		
-15	S1021Z4-4	SCREW	3	
		---*---		
-16	0511245-1	SEAL	1	
-17	0511246-3	SEAL	1	

A---172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17254893 THRU 17258486
F172 SERIAL F172-0320 THRU F172-0654
C---172 SERIAL 17249545 THRU 17258486
F172 SERIAL F172-0001 THRU F172-0654
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Baggage Door

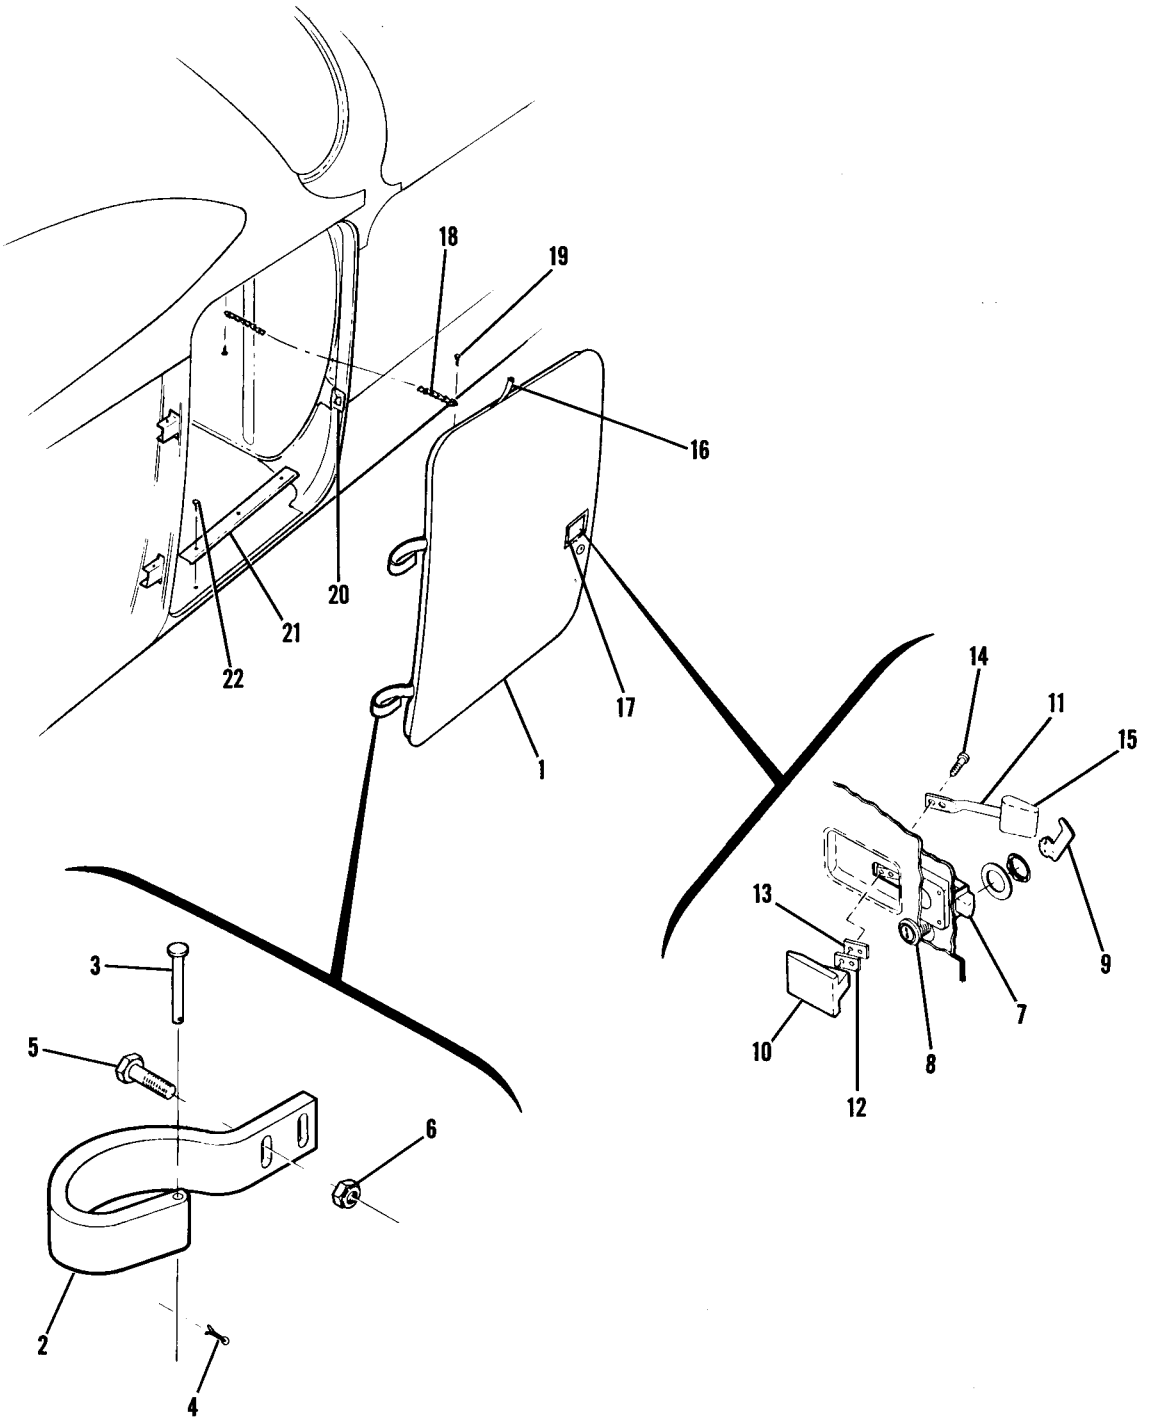


172 SERIAL 17258487 THRU 17263458
F172 SERIAL F17200655 THRU F17201234

Figure 81. Baggage Door Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
81 -		BAGGAGE DOOR INSTALLATION	NP	A
- 1	0717000-1	DOOR ASSEMBLY-BAGGAGE	1	B
	0717000-8	DOOR ASSEMBLY-BAGGAGE WEU 0717000-13	1	C
	0717000-11	DOOR ASSEMBLY-BAGGAGE	1	D
	0717000-13	DOOR ASSEMBLY-BAGGAGE	1	E
		ATTACHING PARTS		
- 2	0711102	HINGE-BAGGAGE DOOR	2	
- 3	MS20392-1C49	CLEVIS PIN	2	
- 4	MS24665-132	COTTER PIN	2	
- 5	AN520-10R10	SCREW	4	
- 6	MS21044N3	NUT	4	
		---*---		
- 7	S1359-7	LATCH ASSEMBLY-BAGGAGE DOOR	1	
- 8	C253001-0101	LOCK ASSEMBLY-DOOR	1	
- 9	0711111-1	CAM	1	
-10	0711705-1	HANDLE-OUTSIDE	1	
-11	1211252-1	HANDLE-INSIDE	1	F
-12	0711709-1	SPACER	1	
-13	0711709-2	SHIM	1	
		ATTACHING PARTS		
-14	M31AS832R8C	SCREW	2	F
	M31AS832R6C	SCREW	2	G
		---*---		
-15	0813526-6	KNOB	1	F
-16	S1084-1	SEAL 80.00 IN LG BULK ITEM REF S1084-1-80.00	1	
-17	0711707-1	PAN	1	J
	0711707-4	PAN	1	H
-18	0500210-50	CHAIN ASSEMBLY-BAGGAGE DOOR	1	
		ATTACHING PARTS		
-19	AN515-8R6	SCREW	1	
	AN525-832R8	SCREW	1	
		---*---		
-20	0311319-1	PLATE-BAGGAGE DOOR LATCH	1	
		ATTACHING PARTS		
	AN515-8R6	SCREW	2	
		---*---		
-21	0311623-1	SCUFF PLATE	1	
		ATTACHING PARTS		
-22	S1021Z4-4	SCREW	3	
		---*---		

A---172 SERIAL 17258487 THRU 17263458
F172 SERIAL F17200655 THRU F17201234
B---172 SERIAL 17258487 THRU 17259223
F172 SERIAL F17200655 THRU F17200804
C---172 SERIAL 17259224 THRU 17259587
D---F172 SERIAL F17200805 THRU F17201234
E---172 SERIAL 17259588 THRU 17263458
F---172 SERIAL 17258487 THRU 17259587
F172 SERIAL F17200655 THRU F17200804
G---172 SERIAL 17259588 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
H---172 SERIAL 17259224 THRU 17263458
J---F172 SERIAL F17200655 THRU F17201234

Upholstery

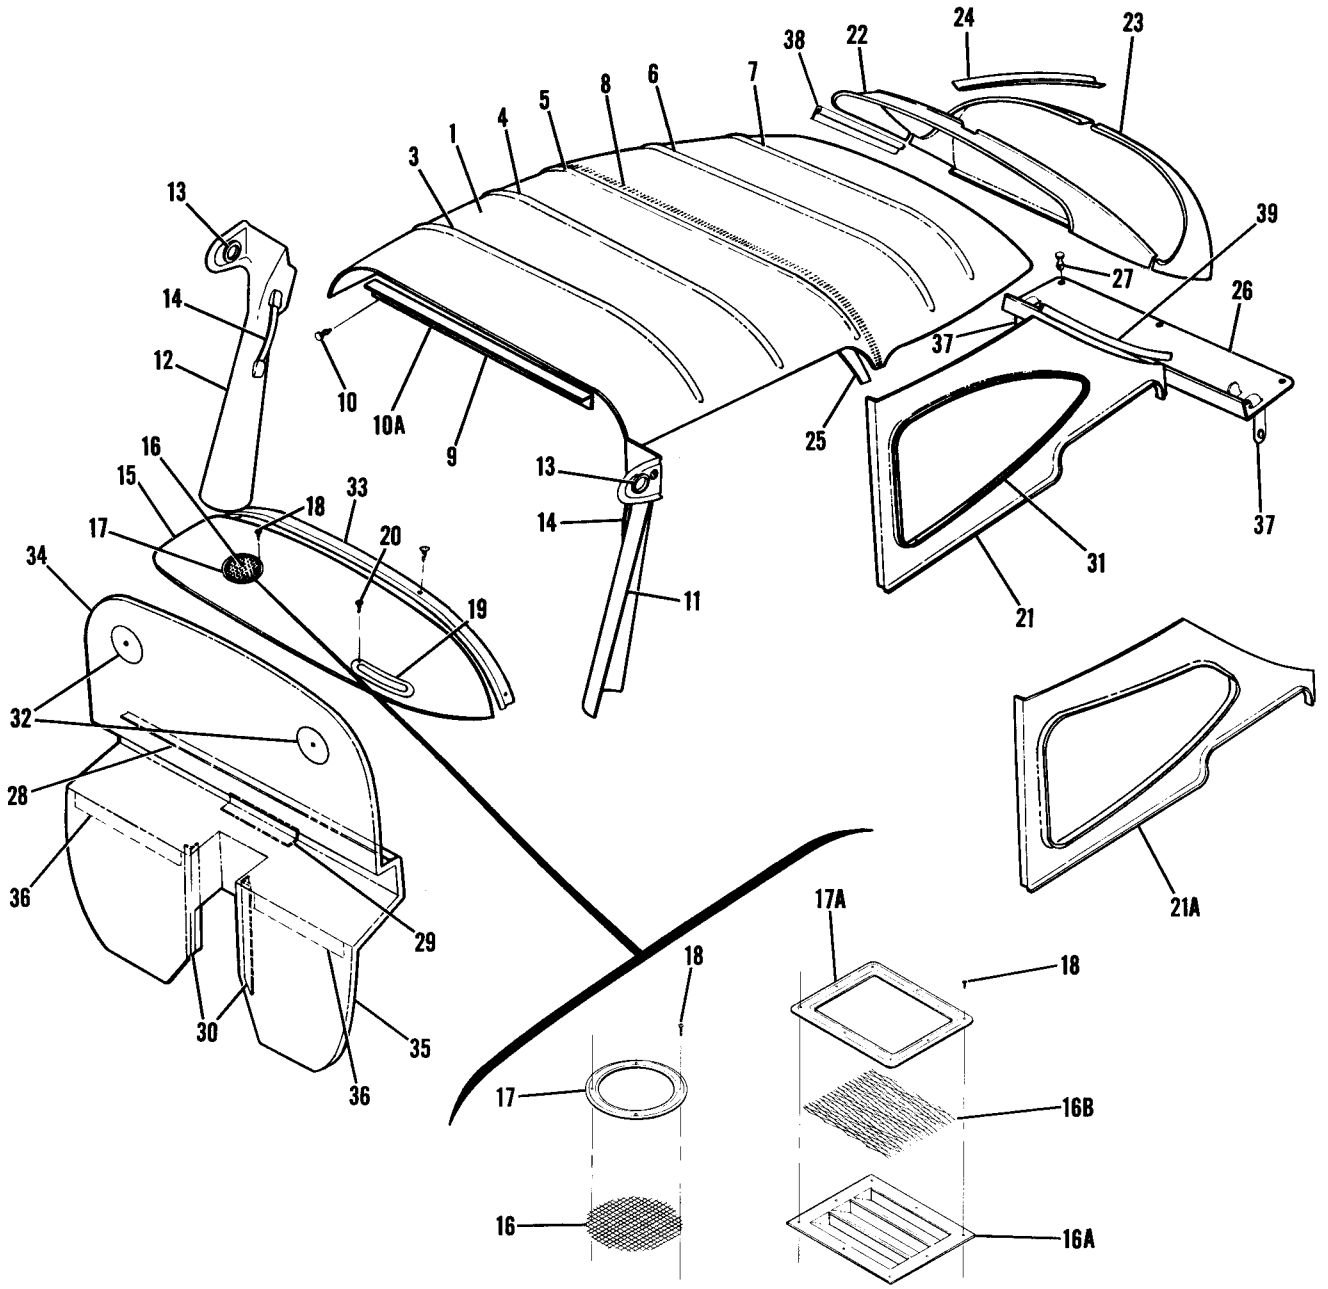

172 SERIAL 17249545 THRU 17259223
F172 SERIAL F172-0001 THRU F17200754
P172 SERIAL P17257120 THRU P17257188

Figure 82. Cabin Top & Firewall Upholstery Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
82 -			UPHOLSTERY INSTALLATION-CABIN TOP & FIREWALL	NP	S
- 1	0500210-5	#	HEADLINER ASSEMBLY	1	
- 2			DELETED NOT USED		
- 3	1200086-5		WIRE-HEADLINER	1	
- 4	1200086-6		WIRE-HEADLINER	1	
- 5	0700100-191		WIRE-HEADLINER	1	
- 6	0500210-11		WIRE-HEADLINER	2	
- 7	0500210-12		WIRE-HEADLINER	2	
- 8	0511001-150		ZIPPER	1	
- 9	0511130		SHIELD-FRONT SPAR	1	
			ATTACHING PARTS		
-10	49265K2215		STUD UC	3	
			---*---		
-10A	XS49306-K110		PLUG BUTTON	2	N
-11	0711133-13		SHIELD ASSEMBLY-LH	1	A
	0711133-27	¤	SHIELD ASSEMBLY-LH	1	G
	0413484-2	¤	SHIELD ASSEMBLY-LH	1	H
-12	0711133-14		SHIELD ASSEMBLY-RH	1	A
	0711133-18	¤	SHIELD ASSEMBLY-RH	1	G
	0711133-50	¤	SHIELD ASSEMBLY-RH	1	H
-13	0413235		GROMMET	2	K
-14	S1362-5		STRAP-ASSIST	1	E
	S1362-6		STRAP-ASSIST	2	D
			ATTACHING PARTS		
	AN509-10R10		SCREW	2	
			---*---		
-15	0500210-108		COVER-COWL DECK	1	F
	0500210-108	¤	COVER-COWL DECK	1	E
-16	0513172-2		SCREEN-VENT	1	B
-16A	0513419-1		LOUVER	1	R
-16B	0500210-69		GRILL-VENT	1	C
-17	0513172-1		RETAINER-VENT	1	B
-17A	0513348-1		RETAINER-COWL DECK COVER	1	C
			ATTACHING PARTS		
-18	S1021Z8-8		SCREW	4	B
	NAS395-16-3		NUT	4	B
	S1021Z8-8		SCREW	8	C
	NAS446-4-3		NUT	8	C
			---*---		
-19	0713046		RETAINER-UPHOLSTERY	1	
			ATTACHING PARTS		
-20	S1021Z4-6		SCREW	4	
			---*---		
-21	0500210-41	¤	MOULDING-SIDE WINDOW LH	1	F
	0500210-94	¤	MOULDING-SIDE WINDOW LH	1	M
	0500210-40	¤	MOULDING-SIDE WINDOW RH	1	F
	0500210-98	¤	MOULDING-SIDE WINDOW RH	1	M
	0514012-2	¤	MOULDING-WINDOW RH	1	N
-21A	0514012-1	¤	MOULDING-WINDOW LH	1	N
-22	0500210-39	¤	MOULDING-REAR WINDOW UPPER	1	L
	0500210-132	¤	MOULDING-REAR WINDOW UPPER	1	N
-23	0500210-43	¤	MOULDING-REAR WINDOW LOWER	1	L
	0500210-135	¤	MOULDING-REAR WINDOW LOWER	1	N
-24	0500210-44	¤	COVER-CENTER POST	1	
-25	0700109-8		TIARA ASSEMBLY SKYHAWK ONLY	1	
			ATTACHING PARTS		
	0700108-1		BRACKET	1	
	0700108-2		BRACKET	1	
	S1023A4-10C		SCREW	4	
	S1066-C1		WASHER	4	
	A9028-4Z-3		NUT TIN	4	
			---*---		
-26	0500230-2		SHELF-BAGGAGE	1	
			ATTACHING PARTS		
-27	H322-4-1-1		PLUNGER HWL	3	
	H322-4-1		GROMMET HWL	3	
			---*---		
-28	0511033-30		ANGLE	1	
			ATTACHING PARTS		
	S1021Z4-6C		SCREW	5	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
82 -29	0513109-21	RETAINER	1	
		ATTACHING PARTS		
	S1021Z4-6C	SCREW	5	
		---*---		
-30	0511033-7	ANGLE	2	
		ATTACHING PARTS		
	S1021Z4-6C	SCREW	2	
	NAS446-2-3	NUT	2	
-31	S1247-1E %	TRIM WHEN EXHAUSTED USE S1948-2	AR	P
	S1948-2 %	TRIM	AR	Q
-32	0400123-1	DISC	2	
		ATTACHING PARTS		
	S1021Z1010	SCREW	1	
	NAS446-5-3	NUT	1	
		---*---		
-33	0513192-1	RETAINER-INSTRUMENT PANEL COVER SKYHAWK ONLY	1	B
	**	RETAINER-INSTRUMENT PANEL COVER	1	J
		ATTACHING PARTS		
	S1022A4-6	SCREW	8	B
		---*---		
-34	0500210-48	COVER-UPPER FIREWALL	1	
-35	0500210-49	COVER-LOWER FIREWALL	1	
-36	0700103-131	STRIP	2	
-37	0500230-3	STRAP ASSEMBLY-BAGGAGE SHELF	2	
-38	0500210-17	TRIM	2	M
-39	S202R	CHANNEL 18.IN LG BULK ITEM REF S-202R1800B	2	

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.

NOTE. %REFER TO FIG 1 FOR SECOND DASH NUMBER TO DEFINE COLOR REQUIRED.


NOTE. **THE FUNCTION OF THIS PART IS NOW INCLUDED IN THE UPPER STATIONARY INSTRUMENT PANEL COVER. REFER TO FIG 102 FOR APPLICABLE PART.

A---172 SERIAL 17249545 THRU 17250000
P172 SERIAL P17257120 THRU P17257169
F172 SERIAL F172-0001 THRU F172-0002
FP172 SERIAL FP172-0001 THRU FP172-0002
B---172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
C---172 SERIAL 17250573 THRU 17259223
F172 SERIAL F172-0019 THRU F17200754
D---172 SERIAL 17251823 THRU 17259223
F172 SERIAL F172-0086 THRU F17200754
E---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
82 -		F---172 SERIAL 17249545 THRU 17253212 F172 SERIAL F172-0001 THRU F172-0251 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 G---172 SERIAL 17250001 THRU 17254892 F172 SERIAL F172-0003 THRU F172-0319 P172 SERIAL P17257170 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 H---172 SERIAL 17254893 THRU 17259223 F172 SERIAL F172-0320 THRU F17200754 J---172 SERIAL 17250573 THRU 17251822 F172 SERIAL F172-0019 THRU F172-0085 K---172 SERIAL 17254892 THRU 17256512 F172 SERIAL F172-0320 THRU F17200754 L---172 SERIAL 17249545 THRU 17257161 F172 SERIAL F172-0001 THRU F172-0559 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 M---172 SERIAL 17253123 THRU 17257161 F172 SERIAL F172-0252 THRU F172-0559 N---172 SERIAL 17257162 THRU 17259223 F172 SERIAL F172-0560 THRU F17200754 P---172 SERIAL 17254892 THRU 17258486 F172 SERIAL F172-0001 THRU F172-0654 Q---172 SERIAL 17258487 THRU 17259223 F172 SERIAL F17200655 THRU F17200754 R---172 SERIAL 17259110 THRU 17259223 S---172 SERIAL 17249545 THRU 17259223 F172 SERIAL F172-0001 THRU F17200754 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		

Upholstery (Cont)

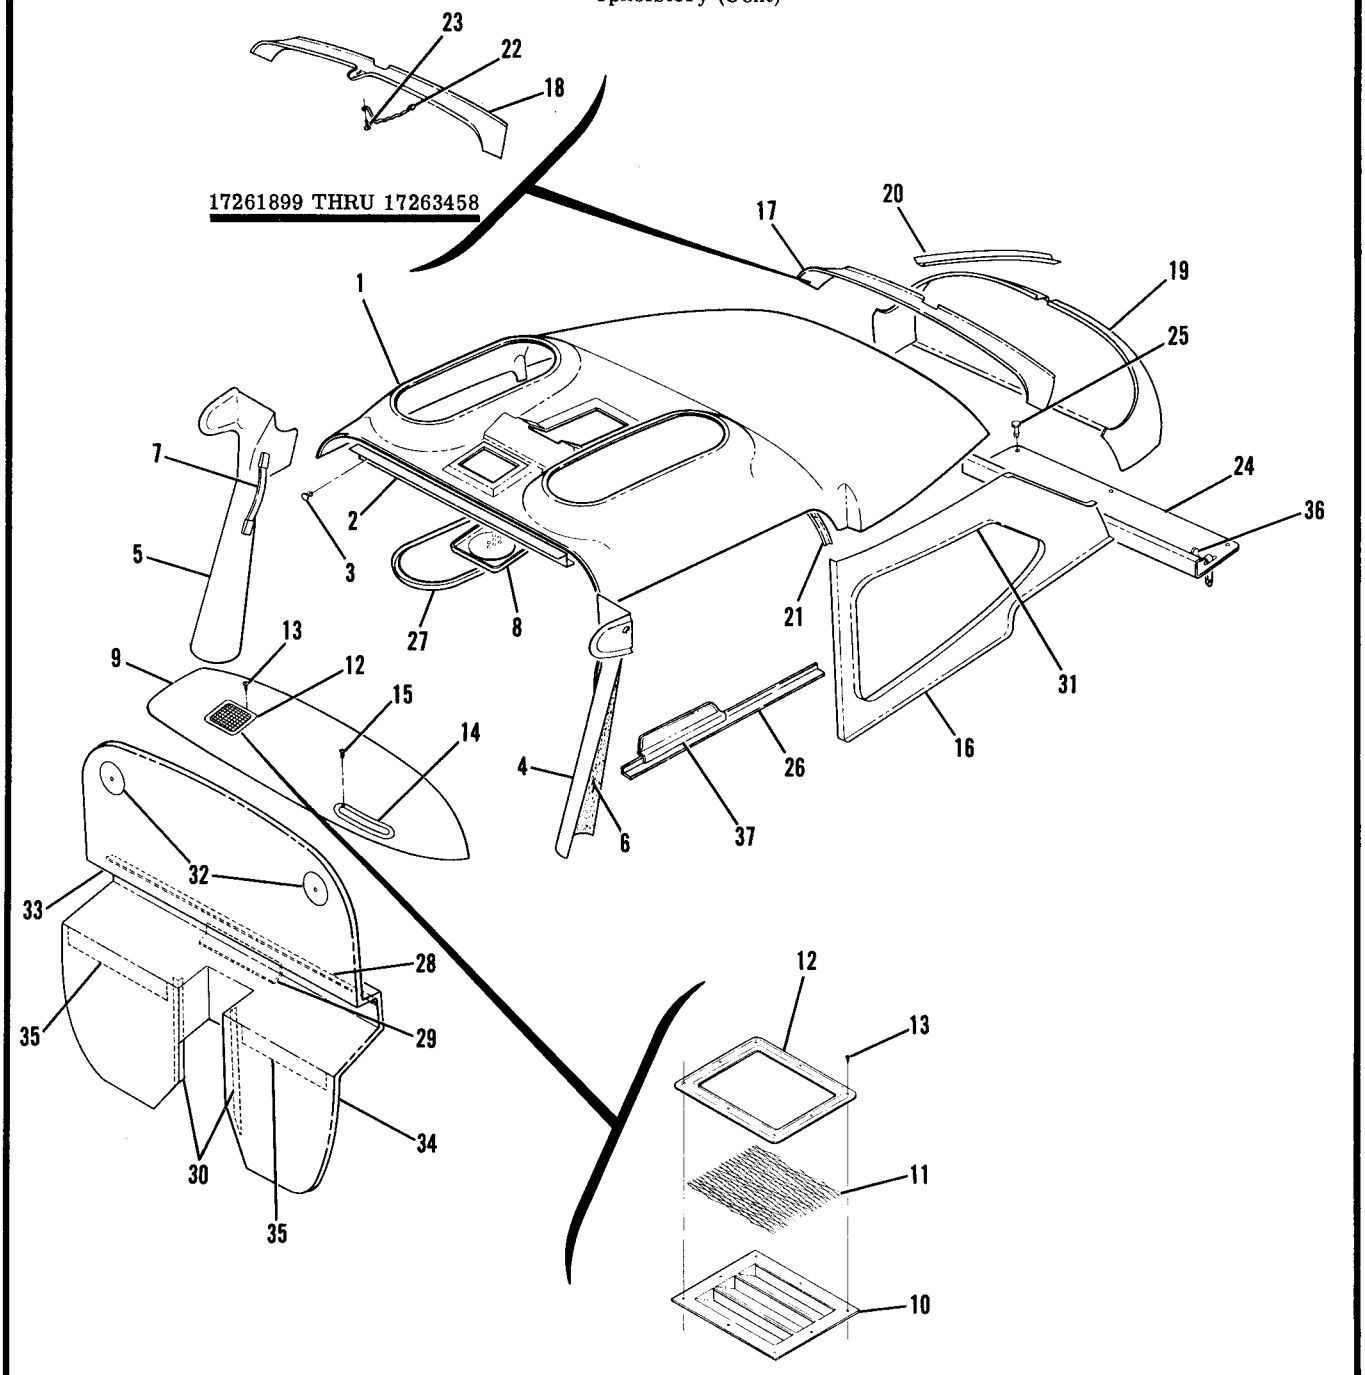

172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234

Figure 83. Upholstery Installation - Cabin Top & Firewall

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
83 -			UPHOLSTERY INSTALLATION-CABIN TOP & FIREWALL	NP	A
- 1	0514062-1		HEADLINER	1	G
	0514062-9		HEADLINER	1	H
	0514062-2		HEADLINER USED WITH SKY LIGHT	1	G
	0514062-10		HEADLINER USED WITH SKY LIGHT	1	H
			ATTACHING PARTS		
	S1021Z4-6		SCREW	3	
			---*---		
- 2	0514067-1		SHIELD-FRONT SPAR	1	
			ATTACHING PARTS		
- 3	S1898-2		STUD	3	
			---*---		
- 4	0413484-8	□	SHIELD ASSEMBLY-DOORPOST LH	1	B
	0413484-10	□	SHIELD ASSEMBLY-DOORPOST LH	1	C
	0413484-12	□	SHIELD ASSEMBLY-DOORPOST LH	1	D
- 5	0711133-12	□	SHIELD ASSEMBLY-DOORPOST RH	1	B
	0711133-62	□	SHIELD ASSEMBLY-DOORPOST RH	1	C
	0711133-66	□	SHIELD ASSEMBLY-DOORPOST RH	1	D
- 6	0513425-1		PAD-DOORPOST SHIELD	2	
- 7	S1362-2		STRAP-ASSIST	2	C
			ATTACHING PARTS		
	AN509-10R10		SCREW	2	
			---*---		
- 8	0514068-2	□	COVER ASSEMBLY-SPEAKER	1	
			ATTACHING PARTS		
	S1021Z6-10		SCREW	4	
			---*---		
- 9	0500210-108	□	COVER-COWL DECK	1	
-10	0513419-1		LOUVER-RADIO VENT	1	
-11	0500210-131		GRILL-VENT	1	
-12	0513348-1		RETAINER-COWL DECK COVER	1	
			ATTACHING PARTS		
-13	S1021Z8-8		SCREW	8	
	NAS446-4-3		NUT	8	
			---*---		
-14	0713046		RETAINER-UPHOLSTERY	1	
			ATTACHING PARTS		
-15	S1021Z4-6		SCREW	4	
			---*---		
-16	0514071-1	□	MOULDING-WINDOW LH	1	
	0514071-2	□	MOULDING-WINDOW RH	1	
-17	0500210-132	□	MOULDING-REAR WINDOW UPPER	1	E
-18	0515014-1	□	MOULDING-REAR WINDOW UPPER	1	F
	S1948-2	%	TRIM-EXTRUDED	AR	F
-19	0500210-135	□	MOULDING-REAR WINDOW LOWER	1	
	S1948-2	%	TRIM-EXTRUDED	AR	
-20	0500210-44	□	COVER-CENTER POST	1	
	S1948-2	%	TRIM-EXTRUDED	AR	
-21	0514069-1	□	TIARA ASSEMBLY	1	
			ATTACHING PARTS		
	S1021Z4-6C		SCREW	4	
			---*---		
-22	0515008-1		COAT HANGER	1	F
			ATTACHING PARTS		
-23	AN525-10RR		SCREW	2	F
			---*---		
-24	0500230-2		SHELF-BAGGAGE	1	E
			ATTACHING PARTS		
-25	HE22-4-1-1		PLUNGER HWL	3	E
	HE22-4-1		GROMMET HWL	3	E
			---*---		
-26	0514072-1		RETAINER-HEADLINER LH	1	
	0514072-2		RETAINER-HEADLINER RH	1	
			ATTACHING PARTS		
	S1021Z4-4		SCREW	5	
			---*---		
-27	0514064-1	□	RETAINER-SKY LIGHT	2	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	8	
			---*---		
-28	0511033-30		ANGLE	1	
			ATTACHING PARTS		
	S1021Z4-6C		SCREW	5	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
83 -29	0513109-21		RETAINER	1	
			ATTACHING PARTS		
	S1021Z4-6C		SCREW	5	
			---*---		
-30	0511033-7		ANGLE	2	
			ATTACHING PARTS		
	S1021Z4-6C		SCREW	2	
	NAS446-2-3		NUT	2	
			---*---		
-31	S1948-2	%	TRIM-WINDOW	AR	
-32	0400123-1		DISC	2	
			ATTACHING PARTS		
	S1021Z10-10		SCREW	1	
	NAS446-5-3		NUT	1	
			---*---		
-33	0500210-48		COVER-UPPER FIREWALL	1	
-34	0500210-49		COVER-LOWER FIREWALL	1	
-35	0700103-131		STRIP	2	
-36	0500230-3		STRAP ASSEMBLY-BAGGAGE SHELF	2	E
-37	0515010-10	¤	TRAY-SHOULDER HARNESS FRONT	2	F
			ATTACHING PARTS		
	S1021A4-6		SCREW	2	
			---*---		

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.


NOTE. %REFER TO FIGURE 1 FOR SECOND DASH NUMBER TO DEFINE COLOR REQUIRED.

A---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234
B---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F17200755 THRU F17200804
C---172 SERIAL 17259904 THRU 17260758
F172 SERIAL F17200805 THRU F17200904
D---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234
E---172 SERIAL 17259224 THRU 17261898
F172 SERIAL F17200755 THRU F17201034
F---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234
G---172 SERIAL 17259224 THRU 17263266
F172 SERIAL F17200755 THRU F17201234
H---172 SERIAL 17263267 THRU 17263458

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
84 -			UPHOLSTERY INSTALLATION-CABIN SIDE PANELS & FLOORBOARD	NP	AJ
- 1	0500211-1		SIDE PANEL-FWD LH SKYHAWK MODELS ONLY	1	A
	0500211-3		SIDE PANEL-FWD LH	1	A
	0500217-1		SIDE PANEL-FWD LH	1	B
	0500240-1		SIDE PANEL ASSEMBLY-FWD LH	1	F
	0500251-1	#	SIDE PANEL ASSEMBLY-FWD LH	1	K
	0500258-1	#	SIDE PANEL ASSEMBLY-FWD LH	1	P
	0500258-27	#	SIDE PANEL ASSEMBLY-FWD LH 172 ONLY	1	Q
	0500258-1	#	SIDE PANEL ASSEMBLY-FWD LH SKYHAWK ONLY	1	N
	0514009-1	#	SIDE PANEL ASSEMBLY-FWD LH	1	V
	0514039-1	#	SIDE PANEL ASSEMBLY-FWD LH	1	Y
	0514059-1	#	SIDE PANEL ASSEMBLY-FWD LH	1	AB
	0514073-1	#	SIDE PANEL ASSEMBLY-FWD LH	1	AF
	0515004-1	#	SIDE PANEL ASSEMBLY-FWD LH	1	AG
- 2	0500211-2		SIDE PANEL-FWD RH SKYHAWK MODELS ONLY	1	A
	0500211-4		SIDE PANEL-FWD RH	1	A
	0500217-2		SIDE PANEL-FWD RH	1	B
	0500240-2		SIDE PANEL ASSEMBLY-FWD RH	1	F
	0500251-2	#	SIDE PANEL ASSEMBLY-FWD RH	1	K
	0500258-2	#	SIDE PANEL ASSEMBLY-FWD RH	1	P
	0500258-28	#	SIDE PANEL ASSEMBLY-FWD RH 172 ONLY	1	Q
	0500258-2	#	SIDE PANEL ASSEMBLY FWD RH SKYHAWK ONLY	1	Q
	0514009-2	#	SIDE PANEL ASSEMBLY-FWD RH	1	V
	0514039-2	#	SIDE PANEL ASSEMBLY-FWD RH	1	Y
	0514059-2	#	SIDE PANEL ASSEMBLY-FWD RH	1	AB
	0514073-2	#	SIDE PANEL ASSEMBLY-FWD RH	1	AF
	0514002-2	#	SIDE PANEL ASSEMBLY-FWD RH	1	AG
- 3	0411030-6		ASH TRAY	2	
- 4	0411030-5		RETAINER-ASH TRAY	2	
			ATTACHING PARTS		
	S1021Z4-8		SCREW	4	
	NAS446-1		NUT	4	
			---*---		
- 4A	1A1002X		ASH TRAY GDR 172 ONLY	2	N
	1A1001		RETAINER-ASH TRAY GDR 172 ONLY	2	N
			ATTACHING PARTS		
	S1021Z4-8		SCREW	4	
	NAS446-1		NUT	4	
			---*---		
- 5	0700100-193		RETAINER-UPHOLSTERY	2	
- 6	0513134-7		RETAINER-UPHOLSTERY LH	1	M
- 7	0513134-8		RETAINER-UPHOLSTERY RH	1	M
- 8	0511177-9		SHIELD-LH	1	E
	0500210-81	¤	SHIELD-LH	1	AA
	0514065-1	¤	SHIELD-LH	1	Z
- 9	0511177-10		SHIELD-RH	1	E
	0500210-82	¤	SHIELD-RH	1	AA
	0514065-2	¤	SHIELD-RH	1	Z
			ATTACHING PARTS		
-10	S1021Z6-6		SCREW	6	
			---*---		
-11	0500213-1		SIDE PANEL-AFT LH SKYHAWK MODELS ONLY	1	A
	0500213-3		SIDE PANEL-AFT LH	1	A
	0500217-5		SIDE PANEL-AFT LH	1	B
	0500240-9		SIDE PANEL ASSEMBLY-AFT LH	1	F
	0500251-9	#	SIDE PANEL ASSEMBLY-AFT LH	1	K
	0500258-9	#	SIDE PANEL ASSEMBLY-AFT LH	1	P
	0500258-31	#	SIDE PANEL ASSEMBLY-AFT LH 172 ONLY	1	Q
	0500258-9	#	SIDE PANEL ASSEMBLY-AFT LH SKYHAWK ONLY	1	Q
	0514009-9	#	SIDE PANEL ASSEMBLY-LH	1	V
	0514039-9	#	SIDE PANEL ASSEMBLY-LH	1	Y
	0514059-9	#	SIDE PANEL ASSEMBLY-LH	1	AB
	0514073-9	#	SIDE PANEL ASSEMBLY-LH	1	AF
	0515004-5	#	SIDE PANEL ASSEMBLY-LH	1	AG

CONTINUED ON NEXT PAGE

Upholstery (Cont)

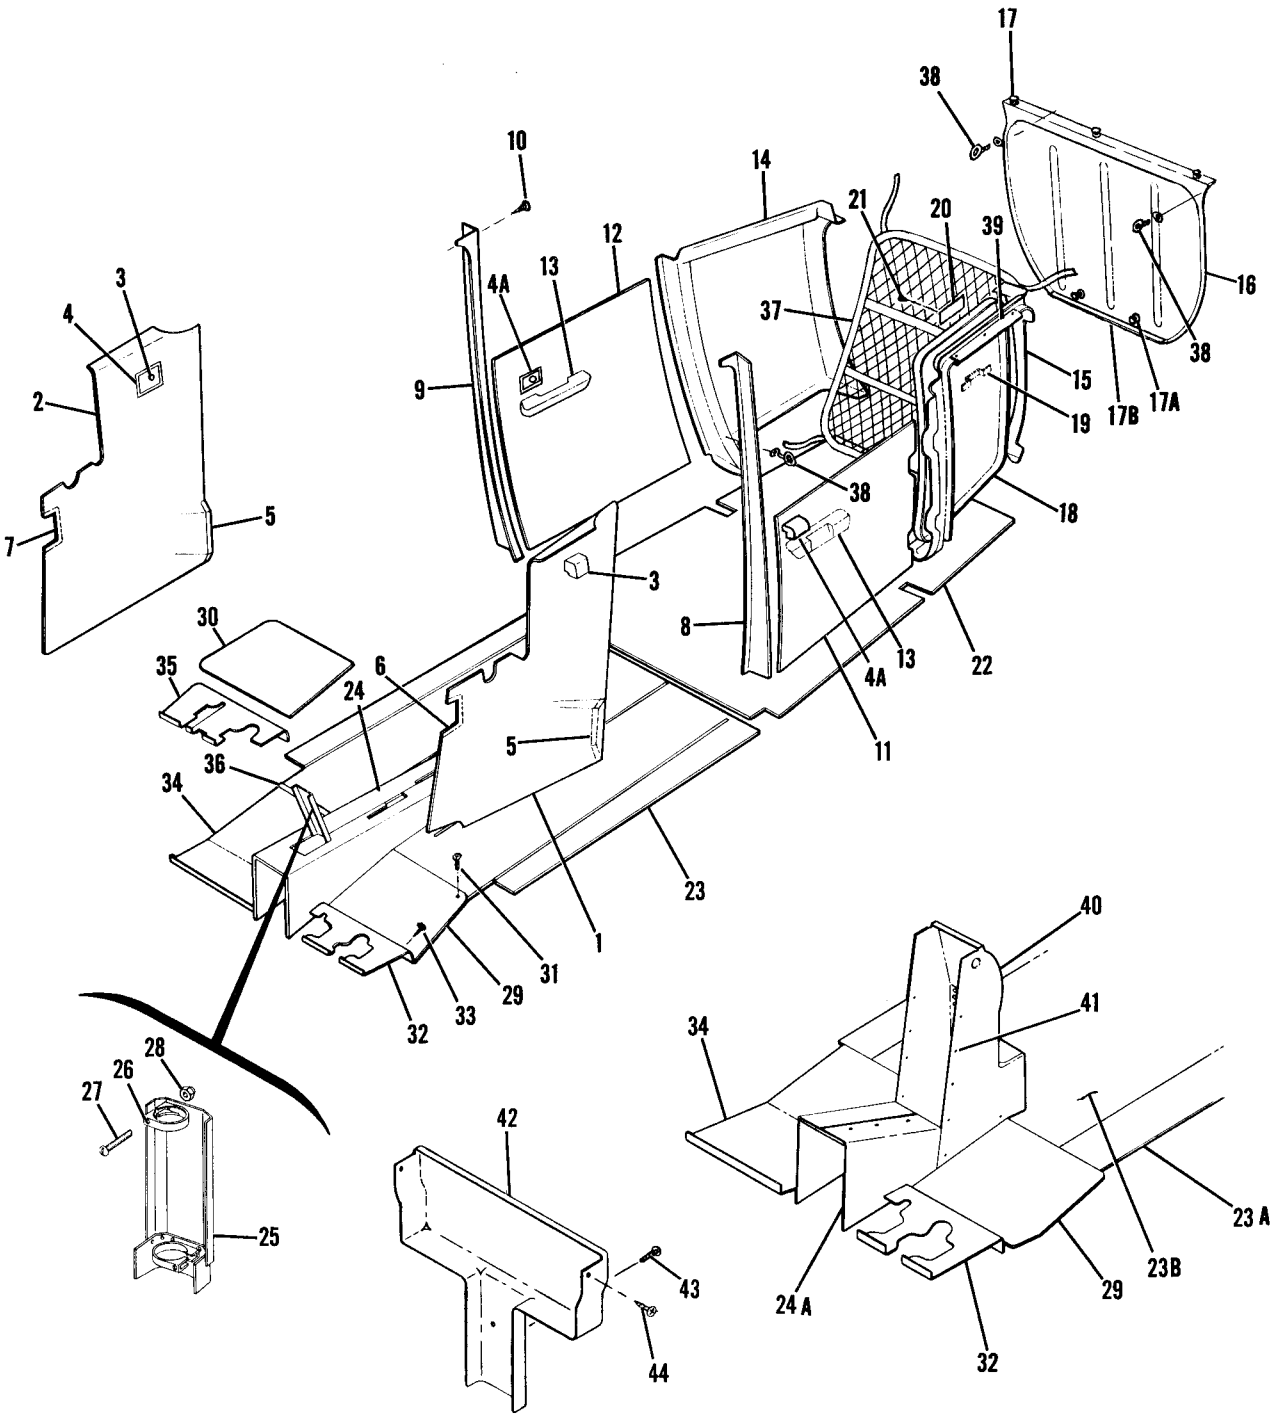

172 SERIAL 17249545 THRU 17261898
F172 SERIAL F172-0001 THRU F17201034
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Figure 84. Cabin Side Panels & Floorboard Upholstery Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
84 -12	0500213-2		SIDE PANEL-RH SKYHAWK MODELS ONLY	1	A
	0500213-4		SIDE PANEL-AFT RH	1	A
	0500217-6		SIDE PANEL-AFT RH	1	B
	0500240-10		SIDE PANEL ASSEMBLY-AFT RH	1	F
	0500251-10	#	PANEL ASSEMBLY-AFT RH	1	K
	0500258-10	#	SIDE PANEL ASSEMBLY-AFT RH	1	P
	0500258-32	#	SIDE PANEL ASSEMBLY-AFT RH 172 ONLY	1	Q
	0500258-10	#	SIDE PANEL ASSEMBLY-AFT RH SKYHAWK ONLY	1	Q
	0514009-10	#	SIDE PANEL ASSEMBLY-AFT RH	1	V
	0514039-10	#	SIDE PANEL ASSEMBLY-AFT RH	1	Y
	0514059-10	#	SIDE PANEL ASSEMBLY-RH	1	AB
	0514073-10	#	SIDE PANEL ASSEMBLY-RH	1	AF
	0515004-6	#	SIDE PANEL ASSEMBLY-RH	1	AG
-13	1414082-1		ARM REST-REAR WHEN EXHAUSTED USE 1414082-7	2	A
	1414082-7		ARMREST	2	B
	1414082-14		ARMREST-REAR	2	F
	1414082-18	#	ARMREST-REAR	1	S
	1414082-20	#	ARMREST-REAR	1	T
	0514079-1	#	ARMREST-REAR LH	1	AC
	0514079-2	#	ARMREST-REAR RH	1	AC
			ATTACHING PARTS		
	S1021Z10-20		SCREW	2	AE
	NAS396-7		NUT TIN	2	AE
	AN520-10R12		SCREW	2	Z
			---*---		
	S1957-2		ASH TRAY	1	AC
	1414082-6		PAD ASSEMBLY-ARMREST	1	C
	1414082-13	#	PAD ASSEMBLY-ARMREST	1	U
	1414082-21	#	PAD ASSEMBLY-ARMREST	1	T
-14	0500210-23	¤	PANEL-BAGGAGE COMPARTMENT RH	1	H
	0500210-97	¤	PANEL-BAGGAGE COMPARTMENT RH	1	J
-15	0500210-25	¤	FRAME COVER-BAGGAGE DOOR	1	H
	0500210-95	¤	FRAME COVER-BAGGAGE DOOR FWD	1	J
	0500210-96	¤	FRAME COVER-BAGGAGE DOOR AFT	1	J
-16	0500210-42	¤	PANEL-BAGGAGE COMPARTMENT REAR	1	
	0511470-4	¤	PANEL ASSEMBLY-BAGGAGE COMPARTMENT REAR USE WITH AUXILIARY SEAT	1	
			ATTACHING PARTS		
-17	H322-4-1		GROMMET HWL	3	
	H323-4-1-1		PLUNGER HWL	3	
-17A	H559-3-1		GROMMET HWL	2	
	H323-3-1-1		PLUNGER HWL	2	
-17B	S1441-1		SEAL 19.0 IN LG BKI REF S1441-1-19.00	1	
			---*---		
-18	0700114-35	¤	PANEL-BAGGAGE DOOR	1	X
	0717000-4	¤	PANEL-BAGGAGE DOOR	1	W
	0717000-12	¤	PANEL-BAGGAGE DOOR	1	AH
			ATTACHING PARTS		
	XH99608F1099		STUD UC	8	
			---*---		
-19	S1273-1		HANDLE-BAGGAGE DOOR	1	
			ATTACHING PARTS		
	AN515-8R8		SCREW	2	
			---*---		
-20	0512166-3		PLACARD-BAGGAGE LOAD LIMIT	1	O
	0505007-1		PLACARD-BAGGAGE LOAD LIMIT	1	R
	0710032-2		PLATE	1	R
			ATTACHING PARTS		
-21	S1021Z4-6		SCREW	2	
			---*---		
-22	0500210-16		CARPET-AFT FLOORBOARD	1	AK
	0515016-4	#	CARPET-AFT FLOORBOARD	1	AN
	0514008-5	#	CARPET-AFT FLOORBOARD	1	N
-23	0500210-15		CARPET-FWD FLOORBOARD	1	C
-23A	0500210-75		CARPET ASSEMBLY-FLOORBOARD FORWARD	1	F
	0500210-83	#	CARPET ASSEMBLY-FLOORBOARD	1	K
	0500210-106	#	CARPET ASSEMBLY-FLOORBOARD SKYHAWK & F172	1	AL
	0515016-3	#	CARPET ASSEMBLY-FLOORBOARD 172	1	N
	0515016-3	#	CARPET ASSY-FLOORBOARD SKYHAWK & F172	1	AM
-23B	0515016-2	#	CARPET-FORWARD 172 ONLY	1	N
	0515016-2	#	CARPET-FORWARD SKYHAWK & F172	1	AM
	0500210-106	#	CARPET ASSEMBLY-FORWARD SKYHAWK	1	N

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
84 -24	0500103-101		CARPET ASSEMBLY-TUNNEL	1	C
			ATTACHING PARTS		
	S1023A4-6C		SCREW	AR	
	S1066C1		WASHER	AR	
			---*---		
-24A	0500210-76	#	CARPET ASSEMBLY-TUNNEL	1	D
-25	0411293		SHIELD-CONTROL TEE	1	A
	0512046-1		SHIELD ASSEMBLY-CONTROL U	1	B
-26	0411840		CLAMP-SHIELD ATTACHMENT	2	A
	0411840		CLAMP-SHIELD ATTACHMENT	1	B
			ATTACHING PARTS		
-27	AN515-6R36		SCREW	1	
-28	NAS679N06		NUT	1	
			---*---		
-29	0511475-1		KICK PLATE LH	1	L
-30	0511475-2		KICK PLATE RH DUAL CONTROLS	1	L
			ATTACHING PARTS		
-31	S1021Z6-8		SCREW	4	
			---*---		
-32	0513057-1		SHIELD-RUDDER BAR LH	1	
	0513057-2		SHIELD-RUDDER BAR LH FLOAT PLANE ONLY	1	
			ATTACHING PARTS		
-33	S1021Z6-8		SCREW	8	
	NAS446-4-3		NUT TIN	3	
			---*---		
-34	0713049-8		SHIELD-RUDDER BAR RH	1	
			ATTACHING PARTS		
	S1021Z6-8		SCREW	6	
			---*---		
-35	0513058-1		SHIELD-RUDDER BAR RH DUAL CONTROLS	1	
	0513058-2		SHIELD-RUDDER BAR RH FLOAT PLANE ONLY	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	8	
	NAS446-4-3		NUT	3	
			---*---		
-36	0713049-7		RETAINER-RUDDER BAR	1	L
			ATTACHING PARTS		
	S1021Z8-14		SCREW	3	
			---*---		
-37	0500236-1		NET-BAGGAGE	1	AD
	2015009-3		NET-BAGGAGE	1	AC
			ATTACHING PARTS		
	1200127-1		WASHER	4	
-38	1211203-1		EYEBOLT	4	
			---*---		
-39	0500210-47		RETAINER-UPHOLSTERY	1	H
	0500210-99		RETAINER-UPHOLSTERY	1	J
-40	0500233-1	¤	CONSOLE COVER	1	D
-41	S1878-1		STUD	14	D
-42	0500403-1	¤	COVER-CONTROL YOKE SKYHAWK ONLY	1	G
-43	S1021Z6-6		SCREW	2	G
-44	S1878-1		STUD	2	G

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.

A---172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17250573 THRU 17251822
F172 SERIAL F172-0019 THRU F172-0085
C---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
84 -		D---172 SERIAL 17251823 THRU 17261898 F172 SERIAL F172-0086 THRU F17201034 E---172 SERIAL 17249545 THRU 17253392 F172 SERIAL F172-0001 THRU F172-0179 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 F---172 SERIAL 17251823 THRU 17253392 F172 SERIAL F172-0086 THRU F172-0179 G---172 SERIAL 17253393 THRU 17261898 F172 SERIAL F172-0180 THRU F17201034 H---172 SERIAL 17249545 THRU 17253212 F172 SERIAL F172-0001 THRU F172-0251 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 J---172 SERIAL 17253213 THRU 17261898 F172 SERIAL F172-0252 THRU F17201034 K---172 SERIAL 17253393 THRU 17254892 F172 SERIAL F172-0180 THRU F172-0319 L---172 SERIAL 17249545 THRU 17254892 F172 SERIAL F172-0001 THRU F172-0319 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 M---172 SERIAL 17254893 THRU 17256512 F172 SERIAL F172-0320 THRU F17201034 N---172 SERIAL 17256513 THRU 17261898 O---172 SERIAL 17249545 THRU 17257161 F172 SERIAL F172-0001 THRU F172-0559 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 P---172 SERIAL 17254893 THRU 17256512 F172 SERIAL F172-0320 THRU F172-0559 Q---172 SERIAL 17256513 THRU 17257161 R---172 SERIAL 17257162 THRU 17261898 F172 SERIAL F172-0560 THRU F17201034 S---172 SERIAL 17253393 THRU 17257161 F172 SERIAL F172-0180 THRU F17200754 T---172 SERIAL 17257162 THRU 17259903 F172 SERIAL F17200755 THRU F17200804 U---172 SERIAL 17251823 THRU 17257161 F172 SERIAL F172-0086 THRU F17261898 V---172 SERIAL 17257162 THRU 17258486 F172 SERIAL F172-0560 THRU F172-0654 W---172 SERIAL 17258487 THRU 17259587 F172 SERIAL F172-0655 THRU F17200804 X---172 SERIAL 17249545 THRU 17258486 F172 SERIAL F172-0001 THRU F172-0654 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 Y---172 SERIAL 17258487 THRU 17259223 F172 SERIAL F17200680 THRU F17200754 Z---172 SERIAL 17259224 THRU 17261898 F172 SERIAL F17200755 THRU F17201034 AA---172 SERIAL 17253393 THRU 17259223 F172 SERIAL F172-0180 THRU F17200754 AB---172 SERIAL 17259224 THRU 17259903 F172 SERIAL F17200755 THRU F17200804 AC---172 SERIAL 17259904 THRU 17261898 F172 SERIAL F17200805 THRU F17201034 AD---172 SERIAL 17249545 THRU 17259903 F172 SERIAL F172-0001 THRU F17200804 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 AE---172 SERIAL 17249545 THRU 17259223 F172 SERIAL F172-0001 THRU F17200754 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 AF---172 SERIAL 17259904 THRU 17260758 F172 SERIAL F17200805 THRU F17200905 CONTINUED ON NEXT PAGE			

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
84 -		AG---172 SERIAL 17260759 THRU 17261898 F172 SERIAL F17200905 THRU F17201034 AH---172 SERIAL 17259588 THRU 17261898 F172 SERIAL F17200805 THRU F17201034 AJ---172 SERIAL 17249545 THRU 17261898 F172 SERIAL F172-0001 THRU F17201034 P172 SERIAL 17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 AK---172 SERIAL 17249545 THRU 17256512 F172 SERIAL F172-0001 THRU F172-0654 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 AL---172 SERIAL 17254893 THRU 17258486 F172 SERIAL F172-0320 THRU F172-0654 AM---172 SERIAL 17258487 THRU 17261898 F172 SERIAL F17200655 THRU F17201034 AN---172 SERIAL 17256513 THRU 17261898 F172 SERIAL F17200655 THRU F17201034		

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
85 -			UPHOLSTERY INSTALLATION-CABIN SIDE PANELS & FLOORBOARD	NP	A
- 1	0515005-1	#	SIDE PANEL ASSY-FWD LH	1	
- 2	0515005-2	#	SIDE PANEL ASSY-FWD RH	1	
- 3	0411030-6		ASH TRAY	2	
- 4	0411030-5		RETAINER-ASH TRAY	2	
			ATTACHING PARTS		
	S1021Z4-8		SCREW	2	
	NAS446-1		NUT	2	
			---*---		
- 5	0515020-1		RETAINER-UPHOLSTERY	2	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	2	
			---*---		
- 6	0514065-1	¤	COVER-AFT DOORPOST LH	1	
- 7	0514065-2	¤	COVER-AFT DOORPOST RH	1	
			ATTACHING PARTS		
- 8	S1021Z6-6		SCREW	6	
			---*---		
- 9	0515005-5	#	SIDE PANEL ASSY-LH	1	
-10	0515005-6	#	SIDE PANEL ASSY-RH	1	
-11	0715039-3	#	ARMREST ASSY-REAR LH	1	
-12	0715039-4	#	ARMREST ASSY-REAR RH	1	
			ATTACHING PARTS		
	AN520-10R12		SCREW	2	
			---*---		
-13	S1957-2		ASH TRAY	2	
-14	0500210-97	¤	PANEL-BAGGAGE COMPARTMENT RH	1	
-15	0515018-1	¤	COVER-BAGGAGE DOOR FRAME AFT	1	
	0500210-95	¤	COVER-BAGGAGE DOOR FRAME FWD	1	
-16	0500210-99		RETAINER-UPHOLSTERY	1	
-17	0717000-12	¤	PANEL-BAGGAGE COMPARTMENT	1	
			ATTACHING PARTS		
	XH99608F1099		STUD	8	
			---*---		
-18	S1273-1		HANDLE-BAGGAGE DOOR	1	
			ATTACHING PARTS		
	AN515-8R8		SCREW	2	
			---*---		
-19	0515012-1	¤	PANEL-BAGGAGE COMPARTMENT LWR FWD	1	
			ATTACHING PARTS		
-20	H553-3-1		GROMMET HLW	4	
	H323-3-1-1		PLUNGER HLW	4	
			---*---		
-21	S1441-1		SEAL 19.00 IN LG BKI REF S1441-1-19.00	1	

CONTINUED ON NEXT PAGE

Upholstery (Cont)

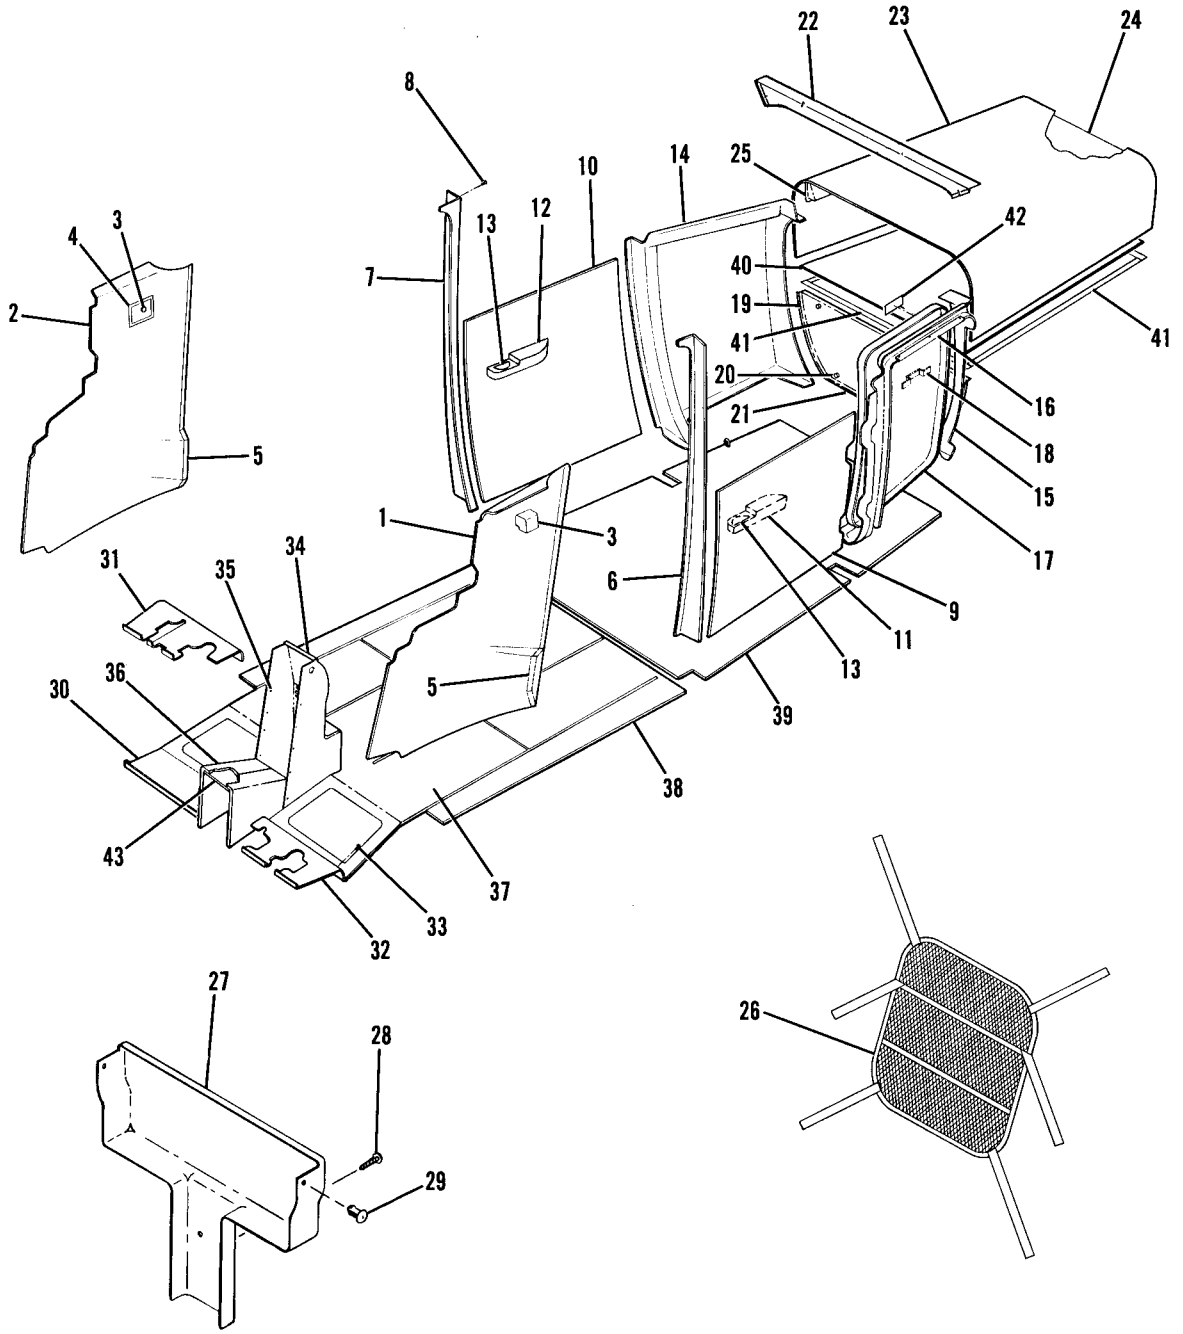

172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234

Figure 85. Cabin Side Panels & Floorboard Upholstery Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
85 -22	0515012-2	¤	MOULDING-BAGGAGE COMPARTMENT	1	
			ATTACHING PARTS		
	S1021Z6-6		SCREW	3	
			---*---		
-23	0515015-1	¤	PANEL-BAGGAGE COMPARTMENT UPPER	1	
			ATTACHING PARTS		
	S1022A4-6		SCREW	3	
			---*---		
-24	0515019-3	¤	PANEL ASSY-BAGGAGE COMPARTMENT UPPER AFT	1	
-25	0515009-1	¤	COVER ASSY-EMERGENCY LOCATOR TRANSMITTER	1	
	H559-3-1		GROMMET HLW	2	
	H323-3-1-1		PLUNGER HLW	2	
	1205085-2		PLACARD-EMERGENCY LOCATOR TRANSMITTER	1	
-26	2015009-5		NET-BAGGAGE	1	
			ATTACHING PARTS		
	1211203-1		EYEBOLT	6	
	1200127-1		WASHER	6	
			---*---		
-27	0500403-1	¤	COVER-CONTROL YOKE SKYHAWK & SKYHAWK II ONLY		
			ATTACHING PARTS		
-28	S1021Z6-6		SCREW	2	
-29	S1878-1		STUD	2	
			---*---		
-30	0713049-8		SHIELD-RUDDER BAR RH	1	
-31	0513058-1		SHIELD-RUDDER BAR RH DUAL CONTROLS	1	
	0513058-2		SHIELD-RUDDER BAR RH FLOATPLANE ONLY	1	
			ATTACHING PARTS		
	S1021Z6-8		SCREW	8	
	NAS446-4-3		NUT	4	
			---*---		
-32	0513057-1		SHIELD-RUDDER BAR LH	1	
	0513057-2		SHIELD-RUDDER BAR LH FLOAT PLANE ONLY	1	
			ATTACHING PARTS		
-33	S1021Z6-8		SCREW	8	
	NAS446-4-3		NUT	4	
			---*---		
-34	0500233-1	¤	COVER-CONSOLE WEU 0500233-4	1	
	0500233-4	¤	COVER-CONSOLE	1	
			ATTACHING PARTS		
-35	S1878-1		STUD	14	
			---*---		
-36	0500210-76	#	CARPET ASSY-TUNNEL	1	
-37	0515016-2	#	CARPET ASSY-FORWARD	1	
-38	0515016-3	#	CARPET ASSY-CENTER	1	
-39	0515016-4	#	CARPET ASSY-AFT	1	
			ATTACHING PARTS		
	S1021A4-6		SCREW	AR	
	S2092-1		HOOK-FABRIC FASTENER * IN LG BKI REF S2092-1-*	AR	
			---*---		
-40	0515016-5	#	CARPET ASSY-UPPER AFT BAGGAGE AREA	1	
			ATTACHING PARTS		
-41	S2092-31		HOOK-FABRIC FASTENER * IN LG BKI REF S2092-31-*	AR	
	S1022A4-6		SCREW	AR	
	S1066C1		WASHER	AR	
			---*---		
-42	0505043-1		PLACARD-BAGGAGE CAPACITY	1	
-43	0513380-2		PLATE	1	
			ATTACHING PARTS		
	S1021Z8-6		SCREW	4	
			---*---		


NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS - PAGE XVIII.

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS - PAGE XIX.

NOTE. *LENGTH TO BE DETERMINED LATER.

A---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234

Soundproofing

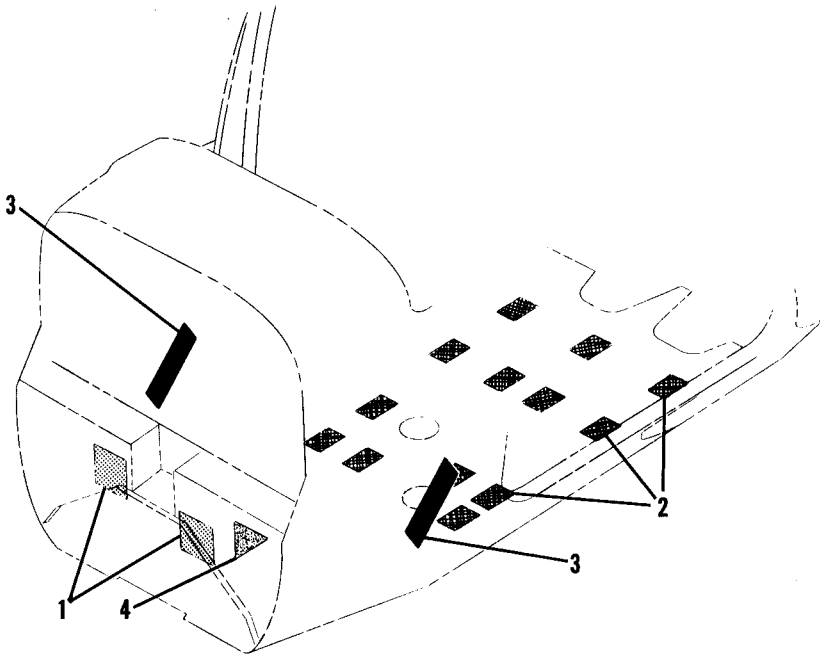

172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234


Figure 86. Soundproofing Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
86 -		SOUNDPROOFING INSTALLATION-FUSELAGE	NP	A
- 1	1700127-1	PANELS-SOUNDPROOFING	2	
- 2	1700127-3	PANELS-SOUNDPROOFING	13	
- 3	1700127-4	PANELS-SOUNDPROOFING	2	
- 4	1700127-6	PANEL-SOUNDPROOFING	1	
		A---172 SERIAL 17257162 THRU 17263458 F172 SERIAL F172-0560 THRU F17201234		

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
87 -			PILOT & CO-PILOT SEAT INSTALLATION	NP	G
	0500210-20	#	SEAT ASSEMBLY-PILOT & CO-PILOT	2	
			ATTACHING PARTS		
- 1	0511242-1		STOP-SEAT	2	
	AN500A8-4		SCREW	2	
			---*---		
	0500210-200	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	
			ATTACHING PARTS		
- 2	AN23-16		BOLT	2	
- 3	1414104-4		BUSHING	2	
- 4	0711668-1		BUSHING	2	
- 5	0711667-1		SPRING	2	
- 6	AN507-832R14		SCREW	2	
- 7	MS21044N08		NUT	2	
- 8	AN960-10L		WASHER	2	
- 9	S1914-8		NUT EN	2	
			---*---		
-10	0500210-26	#	COVER-SEAT BACK	1	
-11	1414100-9		CUSHION-SEAT BACK	1	
-11A	1414230-1		CAM ASSEMBLY	2	
-12	1414110-1	¤	TRIM-SEAT BACK	1	
			ATTACHING PARTS		
-13	S1021Z8-6C		SCREW	3	
			---*---		
-14	1414110-3	¤	POCKET ASSEMBLY-MAGAZINE	1	
	0500210-201	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT	1	
-15	0500210-24	#	COVER-SEAT BOTTOM	1	
-16	1414100-8		CUSHION-SEAT BOTTOM	1	
-17	1414217-7		RETAINER-SEAT BOTTOM	1	
-18	1414217-3		RETAINER-SEAT BOTTOM	1	
-19	S1021Z6-4		SCREW	14	
-20	AN23-15A		BOLT-SEAT BACK STOP LH ONLY	1	
	AN23-19A		BOLT-SEAT BACK STOP RH ONLY	1	
	NAS43HT3-16		SPACER RH ONLY	1	
	MS21044N3		NUT	2	
-21	1414103-2		LEG ASSEMBLY-FORWARD L H	1	
-22	1414103-12		LEG ASSEMBLY-FORWARD R H	1	
-23	1414103-6		LEG-SEAT AFT	2	
			ATTACHING PARTS		
-24	AN24-13		BOLT-FORWARD LEG	2	
-25	AN24-13		BOLT-AFT LEG	1	
-26	AN24-16		BOLT-AFT LEG	1	
-27	AN936A416		WASHER	2	
	AN936A616		WASHER	2	
-28	1414112-1		NUT	2	
			---*---		
-29	1414104-39		HOUSING-SEAT ROLLER FORWARD L H	1	
-30	1414104-40		HOUSING-SEAT ROLLER FORWARD R H	1	
-31	1414104-41		HOUSING-SEAT ROLLER AFT L H	1	
	1414104-42		HOUSING-SEAT ROLLER AFT R H	1	
-32	1414100-212		KIT-SEAT ROLLER	4	
			ATTACHING PARTS		
-33	AN23-19A		BOLT	1	
-34	AN960-10L		WASHER	1	
-35	S1914-8		NUT EN	1	
			---*---		
-36	0700113-1		KNOB-FORE & AFT SEAT ADJUSTMENT	1	
	S1021Z6-8		SCREW	1	
-37	1414104-45		ARM-SEAT ADJUSTMENT	1	
			ATTACHING PARTS		
-38	MS20392-2C47		PIN	1	
	MS24665-132		PIN-COTTER	1	
			---*---		
-39	1414104-46		PIN-SEAT ADJUSTMENT	1	
-40	1414104-2		CLAMP	1	
-41	MS20392-1C15		PIN	2	
	MS24665-132		PIN-COTTER	2	
-42	1414116-1		SPRING-SEAT ADJUSTMENT	1	
-43	AN960C416L		WASHER	1	
-44	NAS561-2-12		PIN	1	
-45	1414104-8		BRACKET-SEAT ADJUSTMENT	1	
-46	1A1002X		ASH RECEIVER-SEAT BACK GDR	1	
-47	0710312-2		HANDLE-RECLINING ADJUSTMENT	1	
-48	1414104-1		TUBE-SEAT ADJUSTMENT TORQUE	1	

CONTINUED ON NEXT PAGE

Front Seat

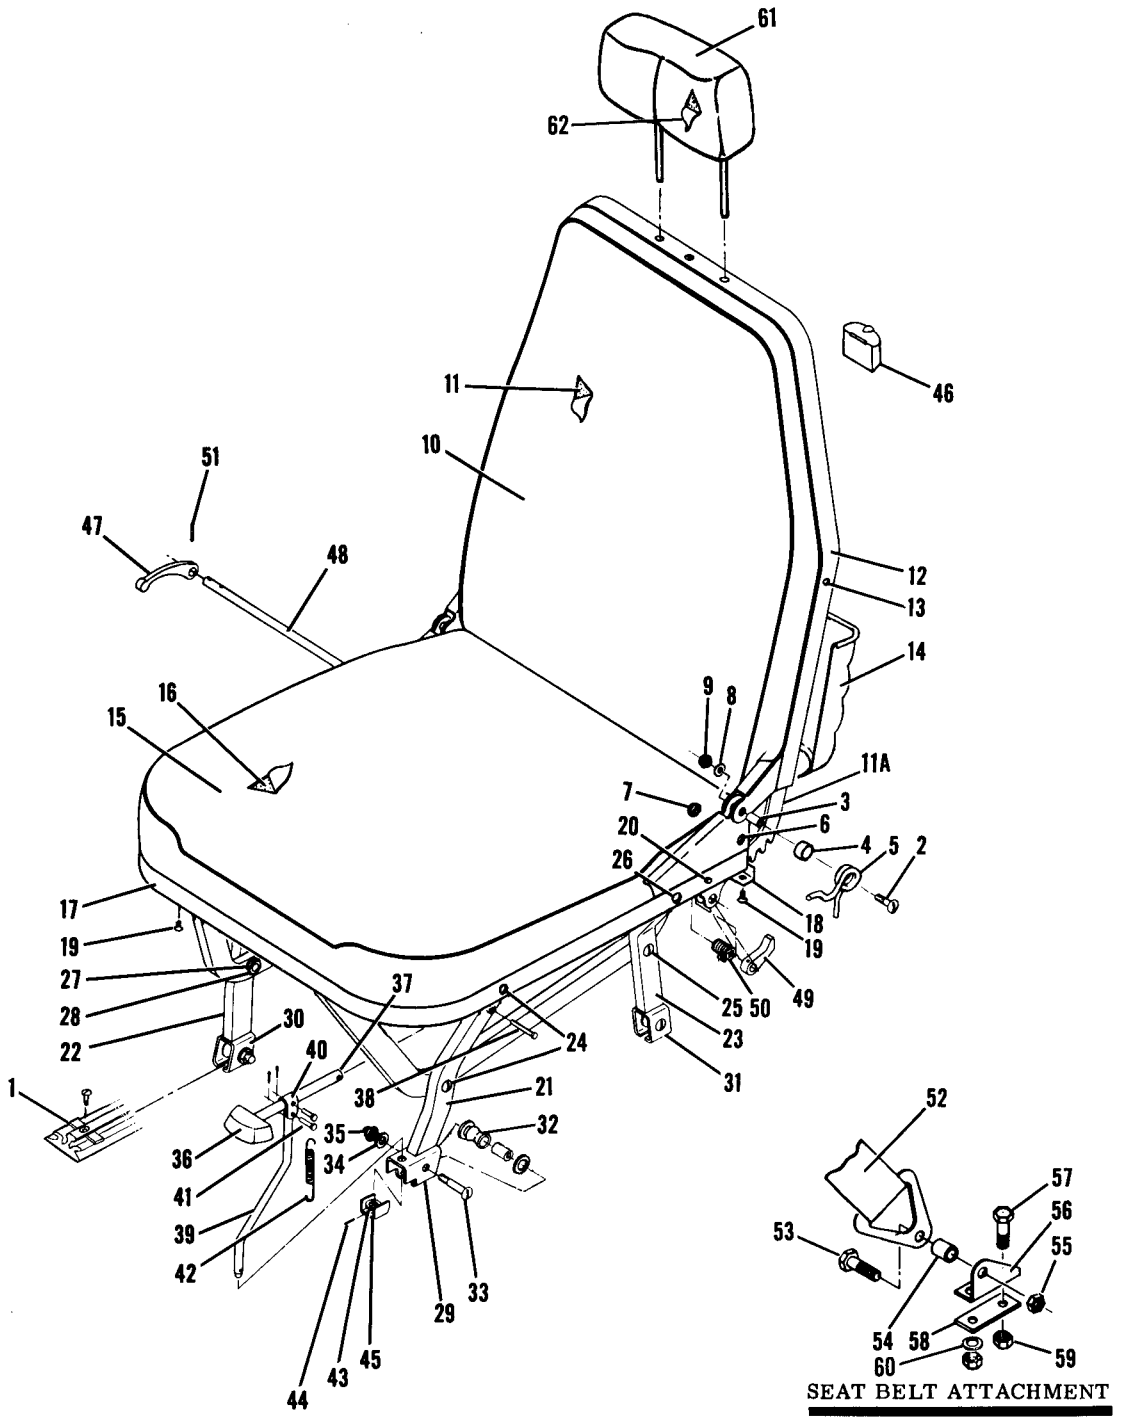

SEAT BELT ATTACHMENT

172 SERIAL 17249545 THRU 17256512
F172 SERIAL SEE CODE G
P172 SERIAL P17257120 THRU P17257188

Figure 87. Pilot & Co-Pilot Seat Installation


FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
87 -49	1414114-1		PAWL-SEAT ADJUSTMENT	2	
-50	1414107-1		SPRING-SEAT ADJUSTMENT	1	
-51	NAS561C3-10		PIN	3	
-52	S1060-15		BELT ASSEMBLY-FRONT SEAT	2	A
	S1060-3		BELT ASSEMBLY-FRONT SEAT	2	C
	S1618H3		BELT ASSEMBLY-FRONT SEAT CORAL	2	D
	S1618F3		BELT ASSEMBLY-FRONT SEAT OLIVE	2	D
	S1618C3		BELT ASSEMBLY-FRONT SEAT BLUE	2	D
	S1618D3		BELT ASSEMBLY-FRONT SEAT TAN	2	D
	S1539B4		BELT ASSEMBLY-FRONT SEAT BLACK	1	E
	S1618D3		BELT ASSEMBLY-FRONT SEAT TAN	2	F
	S1618J3		BELT ASSEMBLY-FRONT SEAT RED	2	F
	S1618K3		BELT ASSEMBLY-FRONT SEAT AVOCADO	2	F
	S1618M3		BELT ASSEMBLY-FRONT SEAT BLUE	2	F
	S1539D4		BELT ASSEMBLY-FRONT SEAT TAN	2	H
	S1539J4		BELT ASSEMBLY-FRONT SEAT RED	2	H
	S1539K4		BELT ASSEMBLY-FRONT SEAT AVOCADO	2	H
	S1539M4		BELT ASSEMBLY-FRONT SEAT BLUE	2	H
			ATTACHING PARTS		
-53	AN4-6A		BOLT	2	
-54	NAS43HT4-22		SPACER	2	
-55	MS21042L4		NUT	2	
			---*---		
-56	0510205-3		FITTING-SEAT BELT INBOARD LH & OUTBOARD RH	2	A
	0510205-3		FITTING-SEAT BELT OUTBOARD LH	1	B
	0510205-4		FITTING-SEAT BELT OUTBOARD LH & INBOARD RH	2	A
	0510205-4		FITTING-SEAT BELT OUTBOARD RH	1	B
	0510205-4		FITTING-SEAT BELT INBOARD LH	1	B
	0510205-3		FITTING-SEAT BELT INBOARD RH	1	B
			ATTACHING PARTS		
-57	AN3-4A		BOLT	2	
-58	0510202-1		PLATE	1	A
	0710632-1		PLATE	2	B
-59	MS21044N3		NUT	2	
-60	AN970-3		WASHER	1	A
			---*---		
-61	1414252-1	#	HEADREST ASSEMBLY	2	J
-62	1414252-6	#	COVER-HEADREST	1	J

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.

A---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17251823 THRU 17256512
F172 SERIAL F172-0086 THRU F172-0431, F172-0436 THRU F172-0442, F172-0444 THRU F172-0446
C---172 SERIAL 17251823 THRU 17253392
F172 SERIAL F172-0086 THRU F172-0179
D---172 SERIAL 17253393 THRU 17254892
F172 SERIAL F172-0180 THRU F172-0251
E---F172 SERIAL F172-0252 THRU F172-0319
F---172 SERIAL 17254893 THRU 17256512
G---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F172-0431, F172-0436 THRU F172-0442, F172-0444 THRU F172-0446
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
H---F172 SERIAL F172-0320 THRU F172-0431, F172-0436 THRU F172-0442, F172-0444 THRU F172-0446
J---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F172-0431, F172-0436 THRU F172-0442, F172-0444 THRU F172-0446
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Seat (Cont)

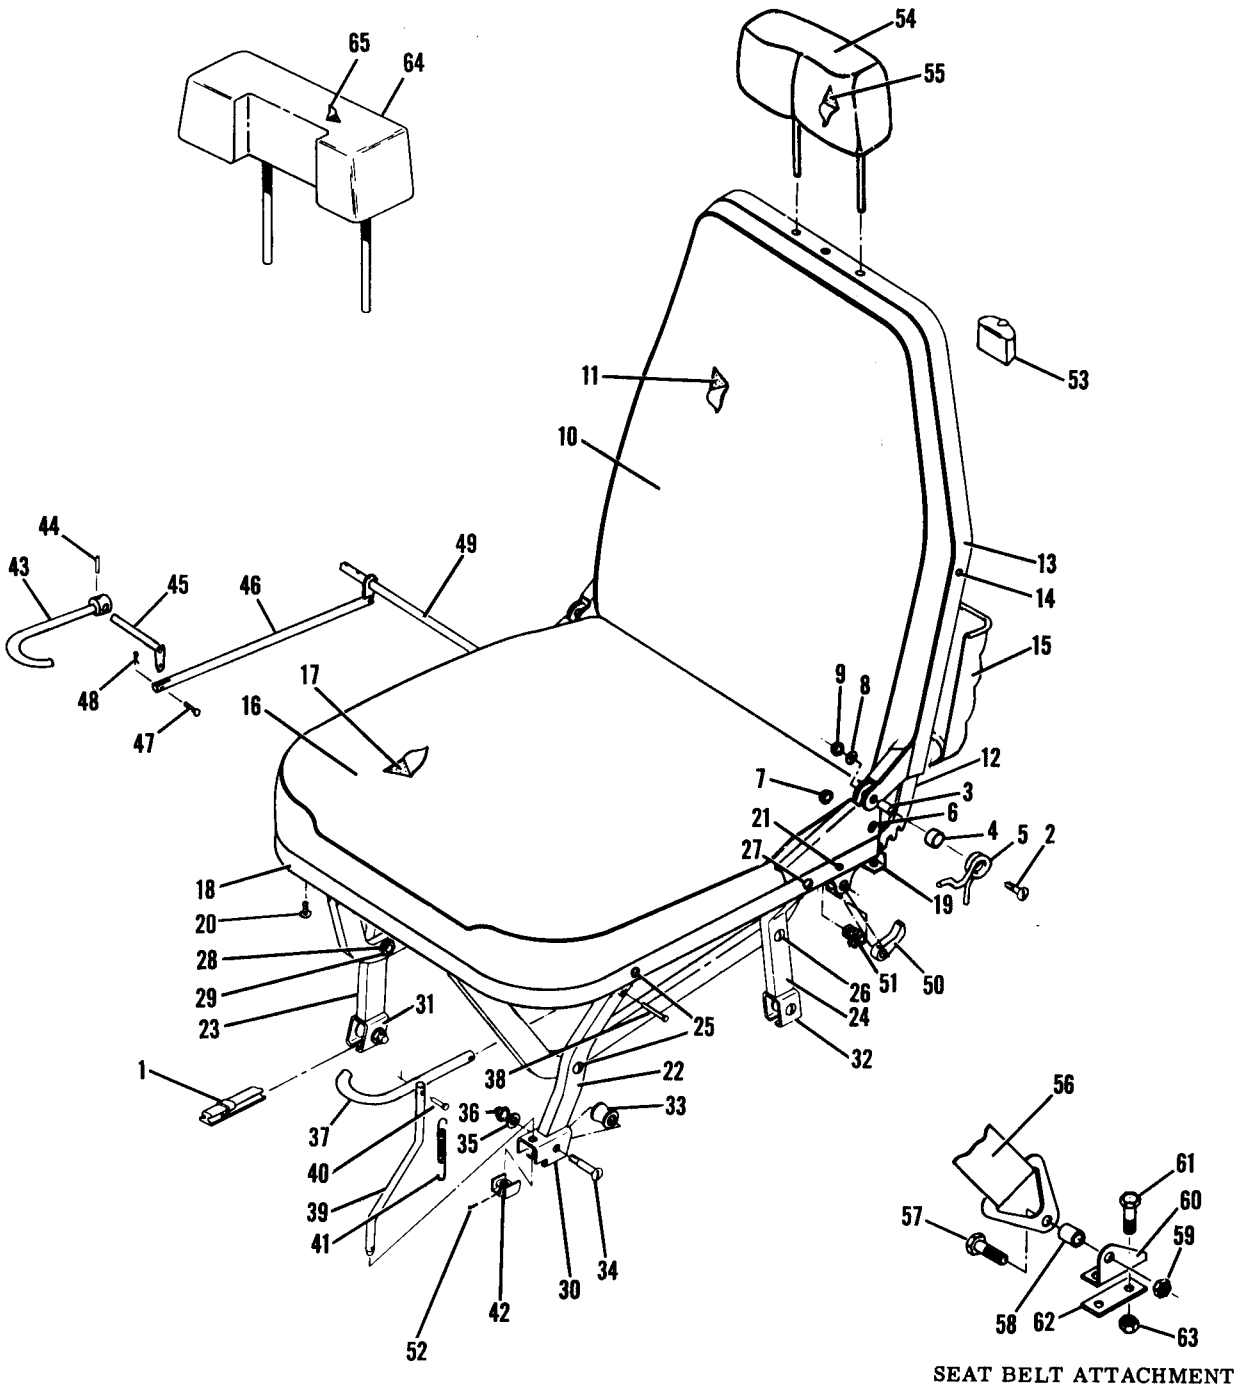

SEAT BELT ATTACHMENT

172 SERIAL 17256513 THRU 17260758

Figure 88. Pilot & Co-Pilot Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
88 -			PILOT & CO-PILOT SEAT INSTALLATION	NP	A
	0500210-129	#	SEAT ASSEMBLY-PILOT & CO-PILOT	2	B
	0500210-130	#	SEAT ASSEMBLY-PILOT & CO-PILOT SKYHAWK ONLY	2	B
	0500210-149	#	SEAT ASSEMBLY-PILOT & CO-PILOT	2	D
	0500210-173	#	SEAT ASSEMBLY-PILOT & CO-PILOT	2	J
	0514075-1	#	SEAT ASSEMBLY-PILOT & CO-PILOT	2	K
			ATTACHING PARTS		
- 1	0511242-1		STOP-SEAT	2	
	AN500A8-4		SCREW	2	
			---*---		
	0500210-209	#	BACK ASSEMBLY-UPHOLSTERED SEAT SKYHAWK ONLY	1	B
	0500210-202	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	B
	0500210-205	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	D
	0500210-207	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	J
			BACK ASSEMBLY-UPHOLSTERED SEAT	NP	K
			ATTACHING PARTS		
- 2	AN23-19A		BOLT	2	
- 3	1414104-4		BUSHING	2	
- 4	0711668-1		BUSHING	2	
- 5	0711667-1		SPRING	2	
- 6	AN507-832R14		SCREW	2	
- 7	MS21044N08		NUT	2	
- 8	AN960-10L		WASHER	2	
- 9	S1914-8		NUT EN	2	
			---*---		
-10	0500210-26	#	COVER-SEAT BACK SKYHAWK ONLY	1	B
	0500210-128	#	COVER ASSEMBLY-SEAT BACK	1	F
	0500210-178	#	COVER ASSEMBLY-SEAT BACK	1	J
	0514075-7	#	COVER ASSEMBLY-SEAT BACK	1	K
-11	1414100-9		CUSHION-SEAT BACK	1	B
	1214050-5		CUSHION-SEAT BACK	1	D
	0500210-155		CUSHION-SEAT BACK	1	E
-12	1414230-1		CAM ASSEMBLY	2	
-13	0715001-1	¤	TRIM-SEAT BACK SKYHAWK ONLY	1	B
	0514055-1	¤	TRIM-SEAT BACK	1	D
	0514055-11	¤	TRIM-SEAT BACK	1	J
	0514076-1	¤	TRIM-SEAT BACK	1	K
-14	S1021Z8-6C		SCREW	3	
-15	1715023-3	¤	POCKET ASSEMBLY-MAGAZINE	1	B
	0514055-3	¤	POCKET ASSEMBLY	1	L
	1214062-5	#	POCKET ASSY	1	K
	0500210-204	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT SKYHAWK ONLY	1	B
	0500210-203	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT	1	B
	0500210-206	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT	1	D
	0500210-208	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT	1	J
			BOTTOM ASSEMBLY-UPHOLSTERED SEAT	NP	K
-16	0500210-24	#	COVER-SEAT BOTTOM	1	F
	0500210-154	#	COVER ASSEMBLY-SEAT BOTTOM	1	J
	0514075-3	#	COVER ASSEMBLY-SEAT BOTTOM	1	K
-17	1414100-8		CUSHION-SEAT BOTTOM	1	B
	1214051-3		CUSHION-SEAT BOTTOM	1	D
	0500210-156		CUSHION-SEAT BOTTOM	1	J
	0514075-2		CUSHION-SEAT BOTTOM	1	K
-18	1414217-7		RETAINER-SEAT BOTTOM SKYHAWK ONLY	1	B
	0514058-1	¤	RETAINER-SEAT BOTTOM	1	C
-19	1414217-3		RETAINER-SEAT BOTTOM SKYHAWK ONLY	1	B
-20	S1021Z6-4		SCREW	14	B
	S1021A4-6		SCREW	5	D
-21	AN23-15A		BOLT-SEAT BACK STOP	2	
	MS21044N3		NUT	1	
-22	1414103-2		LEG ASSEMBLY-FORWARD LH	1	
-23	1414103-45		LEG ASSEMBLY-FORWARD RH	1	
-24	1414103-6		LEG-AFT	2	
			ATTACHING PARTS		
-25	AN24-13A		BOLT-FORWARD LEG	2	
-26	AN24-13A		BOLT-AFT LEG	1	
-27	AN24-16A		BOLT-AFT LEG	1	
	AN936A416		WASHER	2	
-28	AN936A616		WASHER	2	
-29	1414112-1		NUT	2	
			---*---		
-30	1414104-39		HOUSING-SEAT ROLLER FWD LH	1	
-31	1414104-40		HOUSING-SEAT ROLLER FWD RH	1	
-32	1414104-41		HOUSING-SEAT ROLLER AFT LH	1	
	1414104-42		HOUSING-SEAT ROLLER AFT RH	1	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
88 -33	1414100-212		KIT-SEAT ROLLER	4	
			ATTACHING PARTS		
-34	AN23-19A		BOLT	1	
-35	AN960-10L		WASHER	1	
-36	S1914-8		NUT EN	1	
			---*---		
-37	1200504-1		HANDLE-SEAT ADJUSTMENT	1	
			ATTACHING PARTS		
-38	MS20392-2C41		PIN	1	
	MS24665-132		PIN-COTTER	1	
			---*---		
-39	1200505-1		PIN-SEAT ADJUSTMENT	1	
			ATTACHING PARTS		
-40	MS20392-1C21		PIN	1	
			---*---		
-41	1414116-1		SPRING-SEAT ADJUSTMENT	1	
-42	1414104-8		BRACKET-SEAT ADJUSTMENT	1	
-43	1200504-3		HANDLE ASSEMBLY-RECLINING ADJUSTMENT	1	
			ATTACHING PARTS		
-44	NAS561-3-8		ROLL PIN	1	
			---*---		
-45	1200503-1		ARM ASSEMBLY-SEAT BACK ADJUST	1	
-46	1514223-28		LINK-SEAT BACK ADJUST	1	
			ATTACHING PARTS		
-47	MS20392-1C9		PIN	2	
-48	MS24665-132		PIN-COTTER	2	
			---*---		
-49	1414223-34		TUBE ASSEMBLY-TORQUE	1	
-50	1414231-4		PAWL-SEAT BACK ADJUST REPLACE IN PAIRS ONLY	2	B
	0514043-1		PAWL-SEAT BACK ADJUST REPLACE IN PAIRS ONLY	2	C
			ATTACHING PARTS		
	NAS561C3-10		ROLL PIN	1	
			---*---		
-51	1414107-1		SPRING	1	
-52	NAS561-2-12		PIN	1	
-53	1A1002X		ASH RECEIVER-SEAT BACK GDR SKYHAWK ONLY	1	
-54	1714040-1	#	HEADREST ASSEMBLY-SEAT BACK	2	B
	1714040-5	#	HEADREST ASSEMBLY SKYHAWK ONLY	1	B
-55	1714040-2	#	COVER-HEADREST	2	B
	1714040-6	#	COVER-HEADREST SKYHAWK ONLY	1	B
-56	S1746D2		BELT ASSEMBLY-SEAT TAN	2	B
	S1746J2		BELT ASSEMBLY-SEAT RED	2	G
	S1746K2		BELT ASSEMBLY-SEAT AVOCADO	2	G
	S1746M2		BELT ASSEMBLY-SEAT BLUE	2	G
	S1746P2		BELT ASSEMBLY-SEAT BLUE	2	H
	S1746R2		BELT ASSEMBLY-SEAT MAROON	2	H
	S1746S2		BELT ASSEMBLY-SEAT GOLD	2	H
	S1746W2		BELT ASSEMBLY-SEAT BROWN	2	D
	S1746Y2		BELT ASSEMBLY-SEAT BLUE	2	D
	S1746T2		BELT ASSEMBLY-SEAT MARIGOLD	2	D
	S1746V2		BELT ASSEMBLY-SEAT OLIVE	2	D
	SEE FIG 108		BELT ASSEMBLY-SEAT	2	E
			ATTACHING PARTS		
-57	AN4-6A		BOLT	2	
-58	NAS43HT4-22		SPACER	2	
-59	MS21042L4		NUT	2	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
88 -60	0510205-3	FITTING-SEAT BELT OUTBOARD LH	1	
	0510205-4	FITTING-SEAT BELT OUTBOARD RH	1	
	0510205-4	FITTING-SEAT BELT INBOARD LH	1	
	0510205-3	FITTING-SEAT BELT INBOARD RH	1	
		ATTACHING PARTS		
-61	AN3-4A	BOLT	2	
-62	0710632-1	PLATE	2	
-63	MS21044N3	NUT	2	
		---*---		
-64	0514048-1	HEADREST ASSEMBLY	2	C
-65	0514048-9	COVER-HEADREST	1	C
		NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.		
		NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.		
		A---172 SERIAL 17256513 THRU 17260758 F172 SERIAL F172-0432 THRU F172-0435, F172-0443 THRU F172-0447 THRU F17200904		
		B---172 SERIAL 17256513 THRU 17258486 F172 SERIAL F172-0432 THRU F172-0435, F172-0443, F172-0447 THRU F172-0654		
		C---172 SERIAL 17258487 THRU 17260758 F172 SERIAL F172-0655 THRU F17200904		
		D---172 SERIAL 17258487 THRU 17259223 F172 SERIAL F172-0655 THRU F17200754		
		E---172 SERIAL 17259224 THRU 17260758 F172 SERIAL F17200755 THRU F17200904		
		F---172 SERIAL 17256513 THRU 17259223 F172 SERIAL F172-0432 THRU F172-0435, F172-0443, F172-0447 THRU F17200754		
		G---172 SERIAL 17256513 THRU 17257161 F172 SERIAL F172-0432 THRU F172-0435, F172-0443, F172-0447 THRU F172-0559		
		H---172 SERIAL 17257162 THRU 17258486 F172 SERIAL F172-0560 THRU F172-0654		
		J---172 SERIAL 17259224 THRU 17259903 F172 SERIAL F17200755 THRU F17200804		
		K---172 SERIAL 17259904 THRU 17260758 F172 SERIAL F17200805 THRU F17200904		
		L---172 SERIAL 17258487 THRU 17259903 F172 SERIAL F172-0655 THRU F17200804		

Seat (Cont)

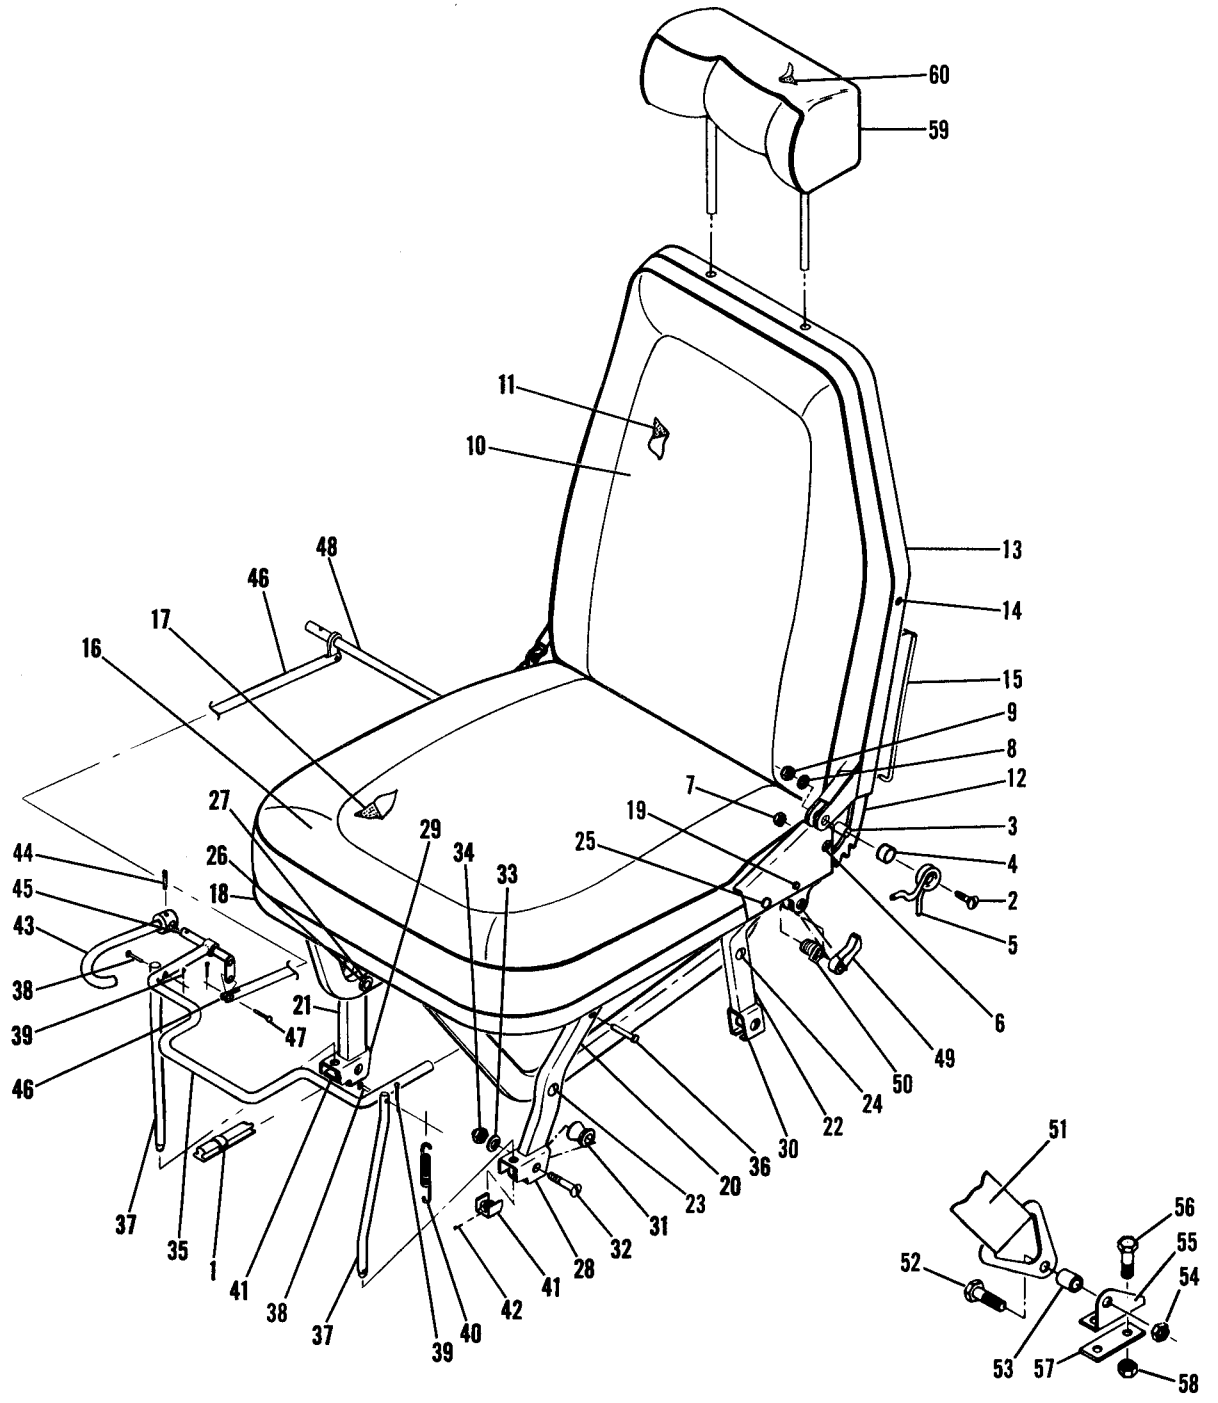

SEAT BELT ATTACHMENT

172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Figure 89. Pilot & Co-Pilot Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
89 -	0514075-15	#	SEAT ASSEMBLY-PILOT & CO-PILOT	1	A
	0514093-1	#	SEAT ASSEMBLY-PILOT & CO-PILOT	1	B
			ATTACHING PARTS		
- 1	0511242-1		STOP-SEAT	2	
	AN500A8-4		SCREW	2	
			---*---		
	0514093-201	#	BACK ASSY-UPHOLSTERED SEAT	NP	
			ATTACHING PARTS		
- 2	AN23-19A		BOLT	2	
- 3	1414104-4		BUSHING	2	
- 4	0711668-1		BUSHING	2	
- 5	0711667-1		SPRING	2	
- 6	AN507-832R14		SCREW	2	
- 7	MS21044N08		NUT	2	
- 8	AN960-10L		WASHER	2	
- 9	S1914-8		NUT	2	
			---*---		
-10	0514075-14	#	COVER-SEAT BACK	1	A
	0514093-3	#	COVER-SEAT BACK	1	B
-11	0500210-155		CUSHION ASSY-SEAT BACK	1	A
	0514093-2		CUSHION ASSY-SEAT BACK	1	B
-12	1414230-1		CAM ASSY	1	
-13	0514076-1	□	TRIM ASSY-SEAT BACK	1	
			ATTACHING PARTS		
-14	S1021A4-6		SCREW	5	
			---*---		
-15	1214062-5	#	POCKET ASSY	1	
	0514093-200	#	BOTTOM ASSY-UPHOLSTERED SEAT	NP	
-16	0514075-13	#	COVER-SEAT BOTTOM	1	A
	0514093-4	#	COVER-SEAT BOTTOM	1	B
-17	0514075-2		CUSHION ASSY-SEAT BOTTOM	1	
-18	0514058-1	□	RETAINER-SEAT BOTTOM	1	
			ATTACHING PARTS		
	S1021A4-6		SCREW	5	
			---*---		
-19	AN23-15A		BOLT SEAT BACK STOP	2	
	MS21044N3		NUT	2	
-20	1414103-2		LEG ASSY-FWD LH	1	
-21	1414103-45		LEG ASSY-FWD RH	1	
-22	1414103-6		LEG-AFT	2	
			ATTACHING PARTS		
-23	AN24-13A		BOLT FWD LEG	2	
-24	AN24-13A		BOLT AFT LEG	1	
-25	AN24-16A		BOLT AFT LEG	1	
	AN936A416		WASHER	2	
-26	AN936A616		WASHER	2	
-27	1414112-1		NUT	2	
			---*---		
-28	1414104-39		HOUSING-SEAT ROLLER FWD LH	1	
-29	1414104-61		HOUSING-SEAT ROLLER FWD RH	1	
-30	1414104-41		HOUSING-SEAT ROLLER AFT LH	1	
	1414104-42		HOUSING-SEAT ROLLER AFT RH	1	
-31	1414100-212		KIT-SEAT ROLLER	4	
			ATTACHING PARTS		
-32	AN23-19A		BOLT	1	
-33	AN960-10L		WASHER	1	
-34	S1914-8		NUT	1	
			---*---		
-35	0514052-1		HANDLE ASSY-SEAT ADJUST	1	
			ATTACHING PARTS		
-36	MS20392-2C43		PIN	1	
	MS24665-132		PIN-COTTER	1	
			---*---		
-37	0514066-1		PIN-SEAT ADJUST	2	
			ATTACHING PARTS		
-38	MS20392-1C23		PIN	1	
-39	MS24665-132		PIN-COTTER	1	
			---*---		
-40	1414116-1		SPRING-SEAT ADJUSTMENT	1	
-41	1414104-8		BRACKET-SEAT ADJUSTMENT	2	
-42	NAS561P3-8		ROLL PIN	2	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
89 -43	1200504-3		HANDLE ASSY-RECLINING ADJUSTMENT	1	
			ATTACHING PARTS		
-44	NAS561-3-8		ROLL PIN	1	
			---*---		
-45	1200503-1		ARM ASSY-SEAT BACK ADJUST	1	
-46	1514223-28		LINK-SEAT BACK ADJUST	1	
			ATTACHING PARTS		
-47	MS20392-1C9		PIN	2	
	MS24665-132		PIN-COTTER	2	
			---*---		
-48	1414223-34		TUBE ASSY-TORQUE	1	
-49	0514043-1		PAWL-SEAT BACK ADJUST REPLACE IN PAIRS ONLY	2	
			ATTACHING PARTS		
	NAS561C3-10		ROLL PIN	1	
			---*---		
-50	1414107-1		SPRING	1	
-51	SEE FIG 108		BELT ASSY-SEAT	1	
			ATTACHING PARTS		
-52	AN4-6A		BOLT	1	
-53	NAS43HT4-22		SPACER	1	
-54	MS21042L4		NUT	1	
			---*---		
-55	0510205-3		FITTING-SEAT BELT OUTBOARD LH & INBOARD RH	2	
	0510205-4		FITTING-SEAT BELT OUTBOARD RH & INBOARD LH	2	
			ATTACHING PARTS		
-56	AN3-4A		BOLT	2	
-57	0710632-1		PLATE	2	
-58	MS21044N3		NUT	2	
			---*---		
-59	0514048-1	#	HEADREST ASSY	2	
-60	0514048-9	#	COVER-HEADREST	1	

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

A---172 SERIAL 17260759 THRU 17261898
F172 SERIAL F17200905 THRU F17201034
B---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234

This page intentionally left blank.

Front Seat (Cont)

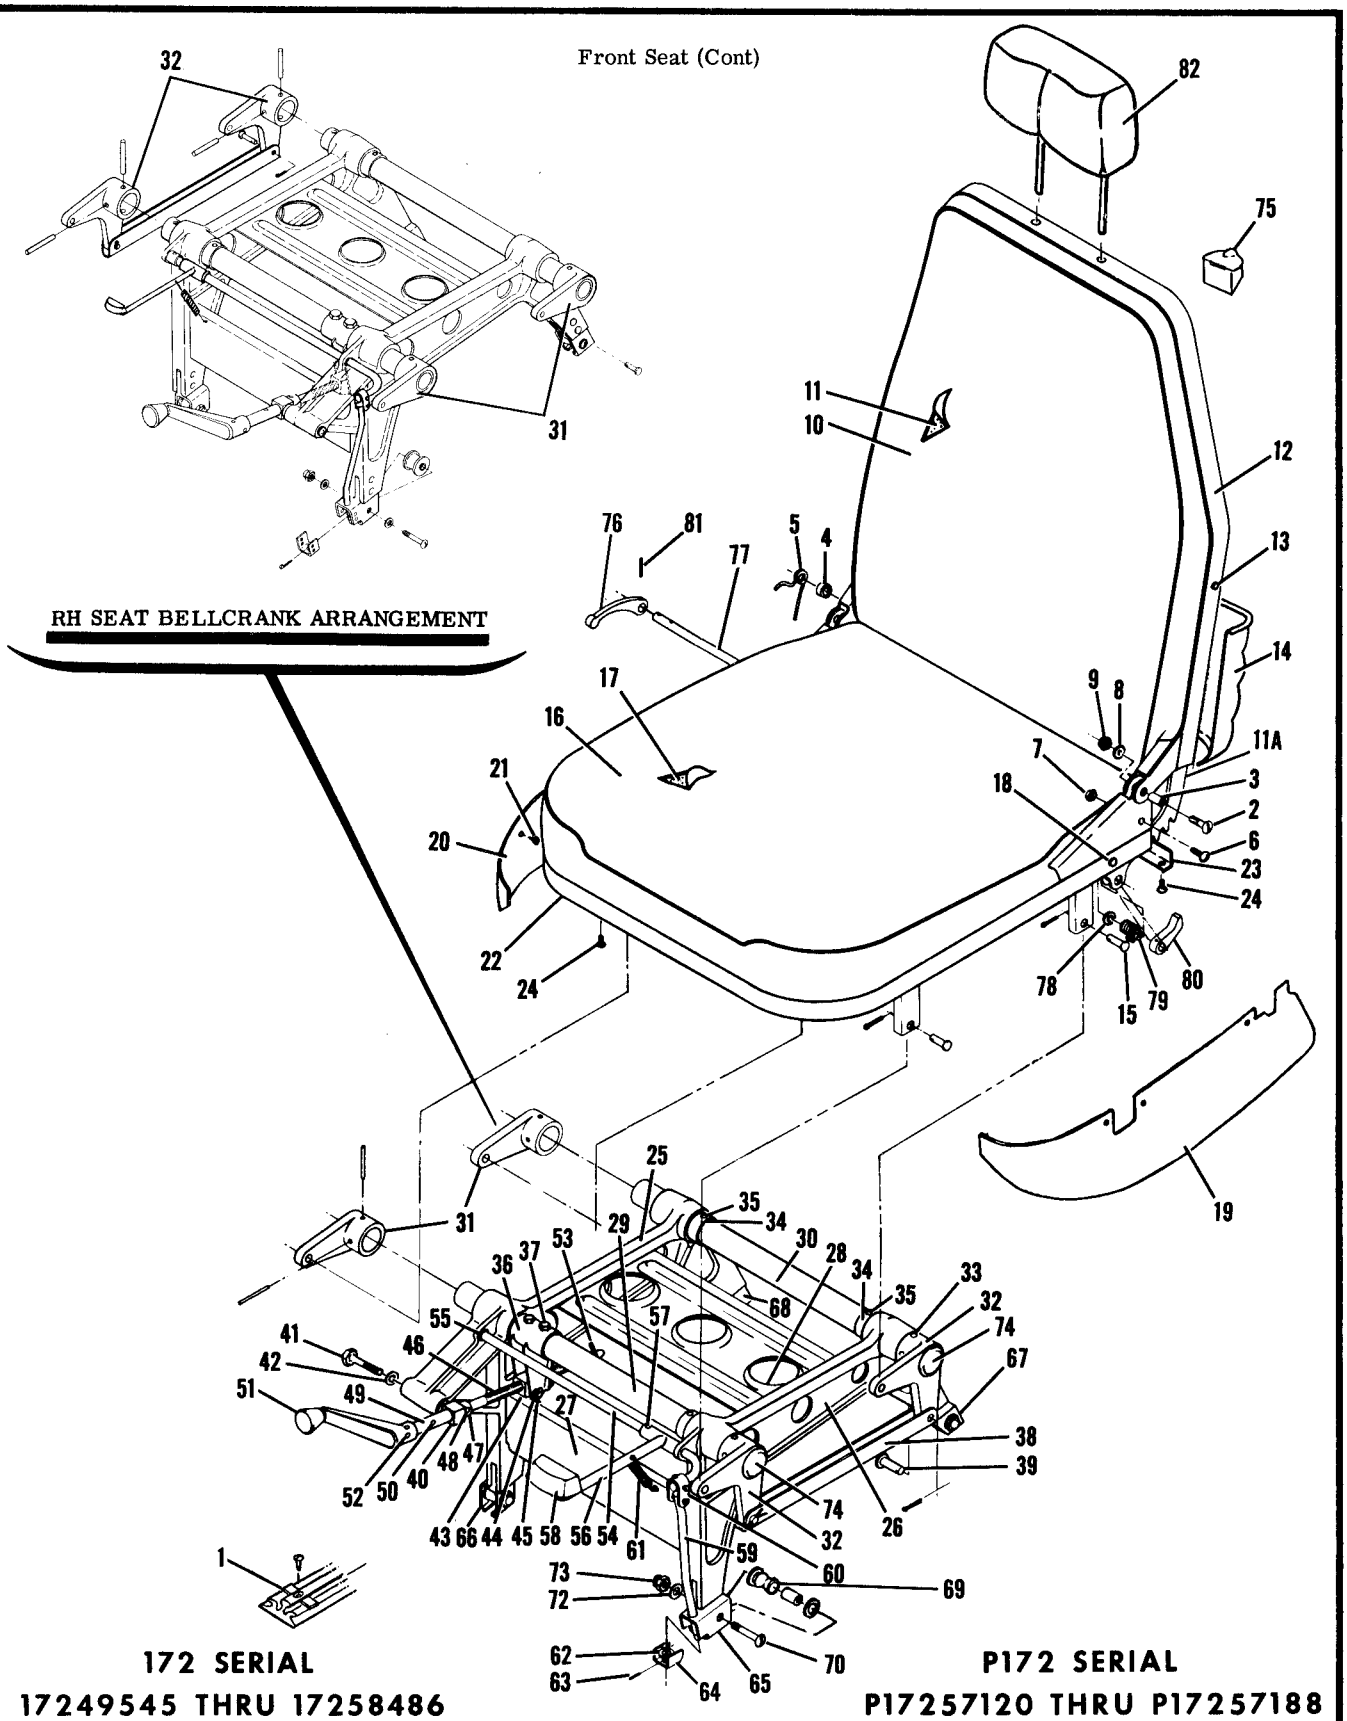


Figure 90. Vertically Adjustable Front Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
90 -			VERTICALLY ADJUSTABLE PILOT & CO-PILOT SEAT INSTALLATION	NP	E
	0700630-11	#	SEAT ASSEMBLY-VERTICALLY ADJUSTABLE L H	1	
	0700630-12	#	SEAT ASSEMBLY-VERTICALLY ADJUSTABLE RH	1	
			ATTACHING PARTS		
- 1	0511242-1		STOP-SEAT	2	
	AN500A8-4		SCREW	2	
			---*---		
	0700630-207	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	C
	0700630-225	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	D
			ATTACHING PARTS		
- 2	AN23-16A		BOLT	2	
- 3	1414104-4		BUSHING	2	
- 4	0711668-1		BUSHING	2	
- 5	0711667-1		SPRING	2	
- 6	AN507-832R14		SCREW	2	
- 7	MS21044N08		NUT	2	
- 8	AN960-10L		WASHER	2	
- 9	22K2-32		NUT EN	2	
			---*---		
-10	0500210-26	#	COVER-SEAT BACK	1	
-11	1414100-9		CUSHION-SEAT BACK	1	
-11A	1414111-5		CAM ASSEMBLY	2	
-12	1414110-1	¤	TRIM ASSEMBLY-SEAT BACK	1	C
	0715001-1	¤	TRIM ASSEMBLY-SEAT BACK	1	D
			ATTACHING PARTS		
-13	S1021Z8-6C		SCREW	3	
			---*---		
-14	1414110-3	¤	POCKET ASSEMBLY-MAGAZINE	1	C
	1715023-3	¤	POCKET ASSEMBLY-MAGAZINE	1	D
	1414045-2		SPRING	1	D
	0700630-202	#	CUSHION ASSEMBLY-UPHOLSTERED SEAT BOTTOM	1	
			ATTACHING PARTS		
-15	MS20392-2C17		PIN	4	
	MS24665-132		PIN-COTTER	4	
			---*---		
-16	0500210-24	#	COVER-SEAT BOTTOM	1	
-17	1414100-8		CUSHION-SEAT BOTTOM	1	
-18	AN23-15A		BOLT LH ONLY	1	
	AN23-19A		BOLT-SEAT BACK STOP RH ONLY	1	
	NAS43HT3-16		SPACER RH ONLY	1	
	MS21044N3		NUT	2	
-19	0700646-1	¤	SKIRT-SEAT BOTTOM L H	1	
-20	0700646-2	¤	SKIRT-SEAT BOTTOM R H	1	
			ATTACHING PARTS		
-21	S1021Z6-4		SCREW	AR	
			---*---		
-22	1414217-7		RETAINER	1	
-23	1414217-3		RETAINER	1	
-24	S1021Z6-4		SCREW	14	
	0700631-5		FRAME ASSEMBLY-SEAT BOTTOM L H	1	A
	0700631-5	¤	FRAME ASSEMBLY-SEAT BOTTOM LH	1	B
	0700631-6		FRAME ASSEMBLY-SEAT BOTTOM R H	1	A
	0700631-6	¤	FRAME ASSEMBLY-SEAT BOTTOM RH	1	B
-25	0700640-1		LEG-SEAT INBOARD L H	1	
	0700640-2		LEG-SEAT INBOARD R H	1	
-26	0700640-5		LEG-SEAT OUTBOARD L H	1	
	0700640-6		LEG-SEAT OUTBOARD R H	1	
-27	0700641-5		BRACE-FORWARD BULKHEAD	1	
-28	0700641-2		BRACE-UPPER BULKHEAD	1	
-29	0700639-1		TUBE-FORWARD TORQUE	1	
-30	0700639-2		TUBE-AFT TORQUE	1	
-31	0700633-2		BELLCRANK	2	
-32	0700633-4		BELLCRANK LH SEAT ONLY	2	
	0700633-1		BELLCRANK RH SEAT ONLY	2	
-33	NAS561P6-22		ROLL PIN	8	
-34	1200136-1		COLLAR	3	
-35	NAS561P6-18		ROLL PIN	3	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
90 -36	1200141-1	BELLCRANK	1	
	1200141-2	BELLCRANK-R H	1	
		ATTACHING PARTS		
-37	AN4-14A	BOLT	2	
	MS21042L4	NUT	2	
		---*---		
-38	0700634-1	CHANNEL-PUSH PULL	1	
		ATTACHING PARTS		
-39	MS20392-2C17	PIN	2	
	MS24665-132	PIN-COTTER	2	
		---*---		
-40	0700638-1	BLOCK-BEARING	1	
-41	AN520-10R8	SCREW	1	
-42	AN960-10L	WASHER	1	
-43	1200139-1	NUT	1	
-44	AN960-10	WASHER	1	
-45	MS20392-2C27	PIN	1	
	MS24665-132	PIN-COTTER	1	
-46	1200186-1	SCREW-SEAT ADJUSTMENT	1	
-47	1200138-1	COLLAR	1	
-48	NAS561P4-10	ROLL PIN	1	
-49	1200156-1	SPACER	1	
-50	NAS561P4-8	ROLL PIN	1	
-51	1200159-1	HANDLE ASSEMBLY-VERTICAL ADJUSTMENT	1	
-52	NAS561P4-12	ROLL PIN	2	
-53	NAS561O4-10	ROLL PIN	1	
-54	0700642-1	TUBE-SEAT ADJUSTMENT TORQUE	1	
-55	AN960-616L	WASHER	1	
	MS24665-5	PIN-COTTER	1	
-56	0700643-1	ARM-SEAT ADJUSTMENT	1	
-57	NAS561P3-8	ROLL PIN	2	
-58	1200164-1	KNOB-FORE & AFT ADJUSTMENT	1	
		ATTACHING PARTS		
	S1022Z6-10	SCREW	1	
		---*---		
-59	0700644-1	PIN-SEAT ADJUSTMENT	1	
-60	1414104-2	CLAMP	1	
	MS24665-134	PIN-COTTER	2	
-61	1414116-1	SPRING	1	
-62	AN960-416	WASHER	1	
-63	MS24665-132	PIN-COTTER	1	
-64	1414104-8	BRACKET-SEAT ADJUSTMENT	1	
-65	0700645-1	HOUSING-WHEEL	1	
-66	0700645-2	HOUSING-WHEEL	1	
-67	0700645-3	HOUSING-WHEEL	1	
-68	0700645-4	HOUSING-WHEEL	1	
-69	1414100-212	KIT-SEAT ROLLER	4	
		ATTACHING PARTS		
-70	AN23-19A	BOLT	1	
-71		DELETED, NOT AVAILABLE		
-72	AN960-10L	WASHER	1	
-73	S1914-8	NUT EN	1	
		---*---		
-74	51045	PLUG BUTTON UC	2	
-75	1A1002X	ASH RECEIVER-SEAT BACK GDR	1	
-76	0710312-2	HANDLE-RECLINING ADJUSTMENT	1	
-77	1414104-1	TUBE-SEAT ADJUSTMENT TORQUE	1	
-78	AN960D616	WASHER	2	
-79	1414107-1	SPRING-SEAT ADJUSTMENT	1	
-80	0700636-1	PAWL-SEAT ADJUSTMENT	2	
-81	NAS561C3-10	PIN	3	

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
90 -	SEE FIG 87		SAFETY BELT-FRONT SEAT	1	F
	SEE FIG 88		SAFETY BELT-FRONT SEAT	1	D
	1414252-1	#	HEADREST ASSEMBLY	2	C
	1714040-1	#	HEADREST ASSEMBLY-SEAT BACK 172 ONLY	2	D
	1714040-5	#	HEADREST ASSEMBLY-SKYHAWK & F172	2	D
-82	1414252-6	#	COVER-HEADREST	1	C
	1714040-2	#	COVER-HEADREST 172 ONLY	1	D
	1714040-6	#	COVER-HEADREST SKYHAWK & F172	1	D

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.

A---172 SERIAL 17249545 THRU 17253392
F172 SERIAL F172-0001 THRU F172-0179
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17253393 THRU 17258486
F172 SERIAL F172-180 THRU F172-0679
C---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F172-0431,
F172-0436 THRU F172-0442,
F172-0444 THRU F172-0446
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
D---172 SERIAL 17256513 THRU 17258486
F172 SERIAL F172-0432 THRU F172-0435,
F172-0443, F172-0447 THRU F172-0654
E---172 SERIAL 17249545 THRU 17258486
F172 SERIAL F172-0001 THRU F172-0654
F---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F172-0431,
F172-0436 THRU F172-0442,
F172-0444 THRU F172-0446
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Front Seat (Cont)

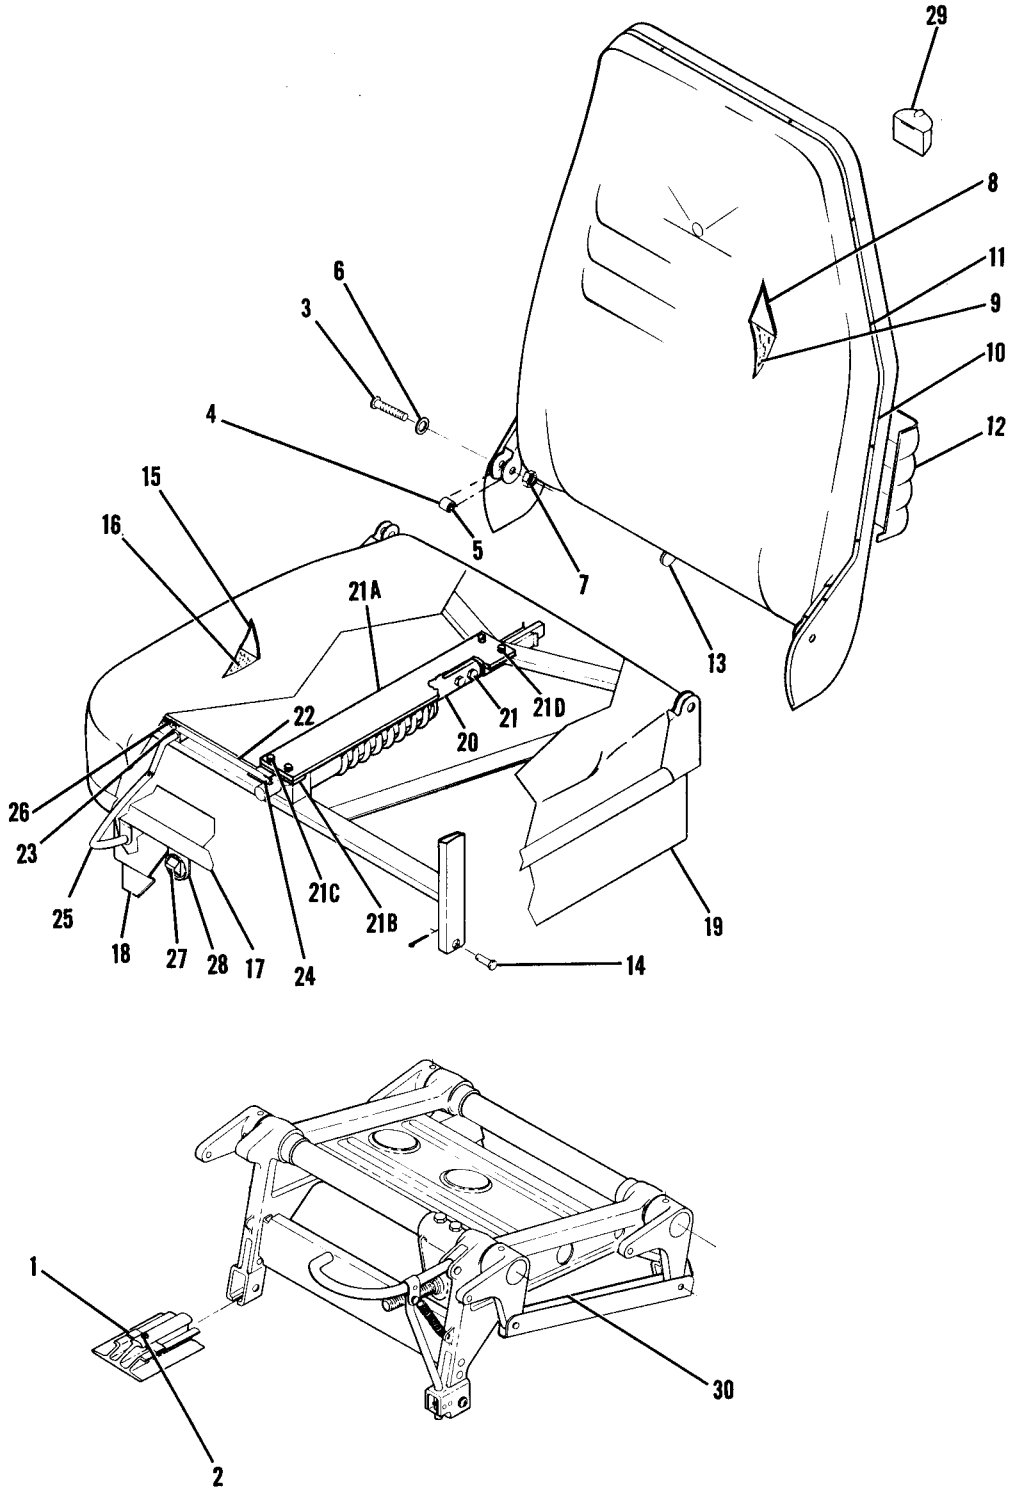

172 SERIAL 17251196 THRU 17254892

Figure 91. Pilot & Co-Pilot Power Adjustable Seat Installation


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
91 -			PILOT & CO-PILOT POWER ADJUSTABLE SEAT INSTL.	NP	A
	1414265-13	#	SEAT ASSEMBLY-PILOT POWER VERTICALLY ADJUSTABLE	1	
	1414265-14	#	SEAT ASSEMBLY-CO-PILOT POWER VERTICALLY ADJUSTABLE	1	
			ATTACHING PARTS		
- 1	0511242		STOP-SEAT	4	
- 2	AN500A8-4		SCREW	4	
			---*---		
	1414265-210	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	
			ATTACHING PARTS		
- 3	AN23-16A		BOLT	2	
- 4	NAS43HT4-18		SPACER	2	
- 5	1414104-4		BUSHING	2	
- 6	AN960-10L		WASHER	2	
- 7	S1914-8		NUT EN	2	
			---*---		
- 8	0500210-26	#	COVER-SEAT BACK	1	
- 9	1414100-9		CUSHION-SEAT BACK	1	
-10	1414264-13	◻	TRIM ASSEMBLY-SEAT BACK	1	
			ATTACHING PARTS		
-11	S1021Z8-6C		SCREW	AR	
			---*---		
-12	1414264-5	◻	POCKET ASSEMBLY MAGAZINE	1	
-13	1414262-1		CAM-SEAT BACK RECLINE	1	
			ATTACHING PARTS		
	AN3-10A		BOLT	3	
	AN960-10L		WASHER	3	
	MS21044N3		NUT	3	
			---*---		
	1414265-211	#	CUSHION ASSEMBLY-UPHOLSTERED SEAT BOTTOM	1	
			ATTACHING PARTS		
-14	MS20392-2C17		PIN	4	
	MS24665-132		COTTER PIN	4	
			---*---		
-15	0500210-24	#	COVER-SEAT BOTTOM	1	
-16	1414265-8		CUSHION-SEAT BOTTOM	1	
-17	1414217-7		RETAINER-SEAT BOTTOM	1	
	1414217-3		RETAINER-SEAT BOTTOM	1	
			ATTACHING PARTS		
	S1021Z6-4		SCREW	12	
			---*---		
-18	0700646-3	◻	SKIRT-SEAT LH	1	
-19	0700646-4	◻	SKIRT-SEAT RH	1	
			ATTACHING PARTS		
	S1021Z6-4		SCREW	AR	
			---*---		
-20	1414266-1		ACTUATOR-SEAT BACK	1	
-21	1414261-1		STOP-SEAT BACK	1	
			ATTACHING PARTS		
	AN3-10A		BOLT	2	
	AN960-10L		WASHER	2	
	MS21044N3		NUT	2	
			---*---		
-21A	1514059-1		STIFFENER	1	
			ATTACHING PARTS		
-21B	1414269-1		SEAT STOP	1	
-21C	AN3-17A		BOLT	2	
	NAS43DD3-12		SPACER UNDER STIFFENER	2	
	NAS43DD3-3		SPACER BETWEEN ACTUATOR & FRAME	2	
-21D	AN3-13A		BOLT	2	
	AN960-10L		WASHER	2	
	MS21044N3		NUT	4	
			---*---		
-22	1414258-1		LINK	1	
			ATTACHING PARTS		
-23	MS20392-1C9		PIN	2	
	MS24665-132		COTTER PIN	2	
			---*---		
-24	1414259-1		SCREW	1	
-25	1414257-5		HANDLE ASSEMBLY	1	
			ATTACHING PARTS		
	MS24665-283		COTTER PIN	2	
			---*---		
-26	1200478-2		SPRING-HANDLE RETURN	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
91 -27	1414268-1	SWITCH ASSEMBLY	1	
-28	1414267-1	BRACKET-SWITCH	1	
		ATTACHING PARTS		
	S1021Z6-6	SCREW	2	
		---*---		
	0700719-1	COVER-FLOORBOARD TERMINAL	1	
-29	1A1002X-1	ASH RECEIVER GDR	1	
-30	SEE FIG 92	POWER SEAT BOTTOM ASSEMBLY-PILOTS	1	
	SEE FIG 92	POWER SEAT BOTTOM ASSEMBLY-CO-PILOTS	1	
	SEE FIG 87	SAFETY BELT-FRONT SEAT	1	
		NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.		
		NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.		
		A---172 SERIAL 17251196 THRU 17254892 F172 SERIAL F172-0051 THRU F172-0319		

This page intentionally left blank.

Seat (Cont)

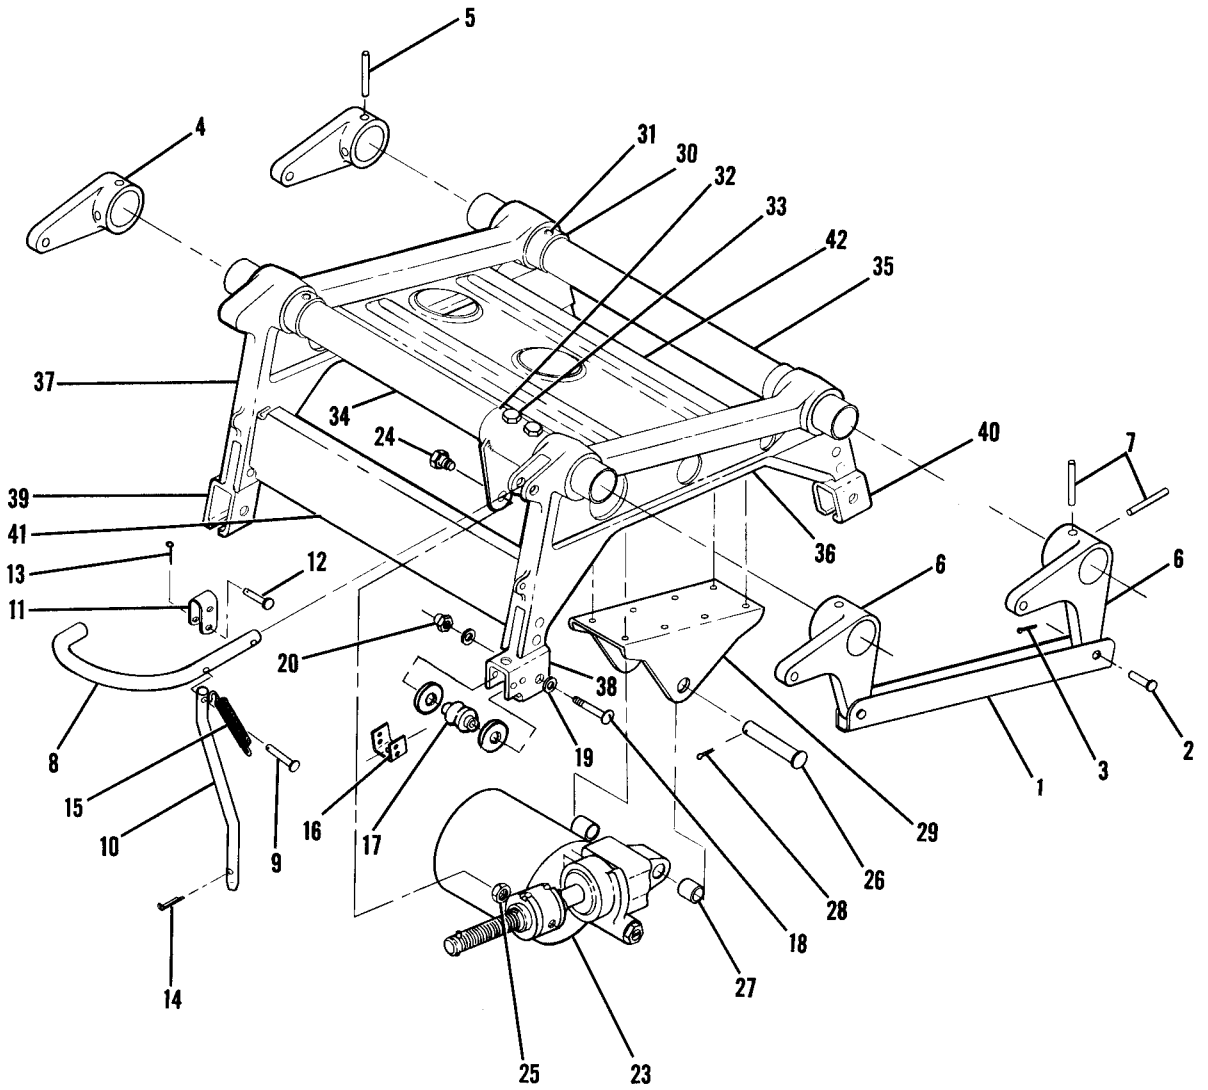

172 SERIAL 17251196 THRU 17254892


Figure 92. Power Seat Bottom Assembly - Pilot & Co-Pilot

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
92 -	1414240-3	POWER SEAT BOTTOM ASSEMBLY-PILOTS	1	A
	1414240-4	POWER SEAT BOTTOM ASSEMBLY-CO-PILOTS	1	A
	1414240-3 ¤	POWER SEAT BOTTOM ASSEMBLY-PILOTS	1	B
	1414240-4 ¤	POWER SEAT BOTTOM ASSEMBLY-CO-PILOTS	1	B
- 1	0700634-1	CHANNEL OUTBOARD SIDE ONLY	1	
		ATTACHING PARTS		
- 2	MS20392-2C17	PIN	2	
- 3	MS24665-132	COTTER PIN	2	
		---*---		
- 4	0700633-2	BELLCRANK-INBOARD	2	
		ATTACHING PARTS		
- 5	NAS561P6-22	ROLL PIN	4	
		---*---		
- 6	0700633-4	BELLCRANK-OUTBOARD PILOTS SEAT	2	
	0700633-1	BELLCRANK-OUTBOARD CO-PILOTS SEAT	2	
		ATTACHING PARTS		
- 7	NAS561P6-22	ROLL PIN	4	
		---*---		
- 8	1414248-1	HANDLE-SEAT ADJUSTMENT	1	
		ATTACHING PARTS		
- 9	MS20392-2C21	PIN	1	
	MS24665-132	COTTER PIN	1	
		---*---		
-10	1414245-2	ROD-SEAT ADJUSTMENT	1	
		ATTACHING PARTS		
-11	1414104-2	CLAMP	1	
-12	MS20392-1C15	PIN	2	
-13	MS24665-132	COTTER PIN	2	
-14	MS24665-132	COTTER PIN	1	
		---*---		
-15	1414116-1	SPRING	1	
-16	1414104-8	BRACKET-SEAT ADJUSTMENT ROD	1	
-17	1414100-212	KIT-SEAT ROLLER	4	
		ATTACHING PARTS		
-18	AN23-19A	BOLT	1	
-19	AN960-10L	WASHER	2	
-20	S1914-8	NUT EN	1	
-21		DELETED, NOT AVAILABLE		
-22		DELETED, NOT AVAILABLE		
		---*---		
-23	1414249-2	MOTOR ASSEMBLY		
		ATTACHING PARTS		
-24	1414247-1	BOLT	1	
-25	AN316C5R	NUT	1	
-26	MS20392-5C65	PIN	1	
-27	NAS43DD6-33	SPACER	2	
-28	MS24665-283	COTTER PIN	1	
		---*---		
-29	1414242-1	BRACKET-MOTOR ASSEMBLY	1	
-30	1200136-1	COLLAR-TORQUE TUBE	3	
		ATTACHING PARTS		
-31	NAS561P6-18	ROLL PIN	3	
		---*---		
-32	1414243-1	BELLCRANK	1	
		ATTACHING PARTS		
-33	AN4-14A	BOLT	2	
	MS21042L4	NUT	2	
		---*---		
-34	0700639-3	TORQUE TUBE-FORWARD	1	
-35	0700639-2	TORQUE TUBE-AFT	1	
-36	1414241-3	LEG-LH	1	
-37	1414241-4	LEG-RH	1	
-38	0700645-1	HOUSING-SEAT ROLLER FWD LH	1	
-39	0700645-2	HOUSING-SEAT ROLLER FWD RH	1	
-40	0700645-3	HOUSING-SEAT ROLLER AFT LH	1	
	0700645-4	HOUSING-SEAT ROLLER AFT RH	1	
-41	0700641-3	BRACE-SEAT	1	
-42	0700641-4	BRACE-SEAT	1	

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

A---172 SERIAL 17251196 THRU 17253392
F172 SERIAL F172-0051 THRU F172-0179
B---172 SERIAL 17253393 THRU 17254892
F172 SERIAL F172-0180 THRU F172-0319

Front Seat (Cont)

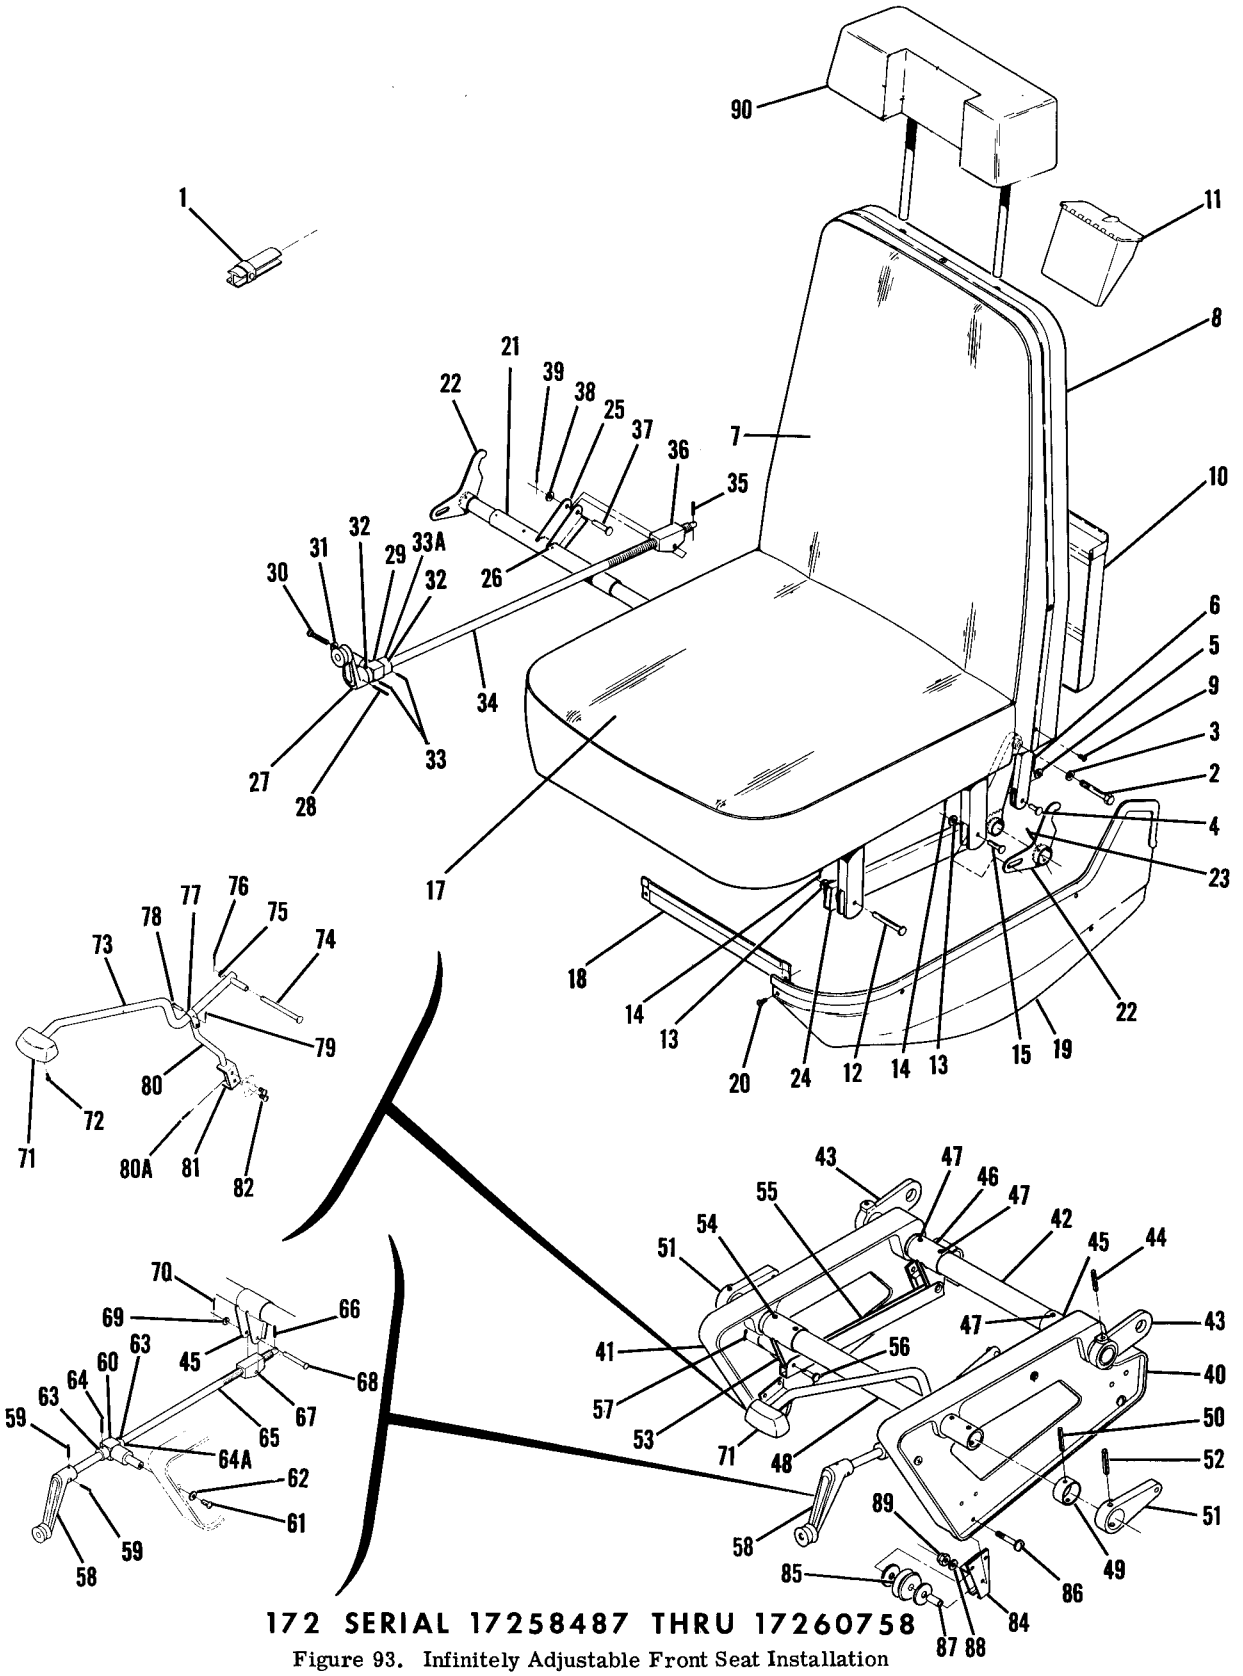

172 SERIAL 17258487 THRU 17260758

Figure 93. Infinitely Adjustable Front Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
93 -			FRONT SEAT INSTALLATION-INFINITE ADJUST	NP	A
	0515001-1	#	FRONT SEAT ASSEMBLY-INFINITE ADJUST CO-PILOT	1	D
	0515001-24	#	FRONT SEAT ASSEMBLY-INFINITE ADJUST CO-PILOT	1	F
	0514077-2	#	FRONT SEAT ASSEMBLY-INFINITE ADJUST CO-PILOT	1	G
	0515001-20	#	FRONT SEAT ASSEMBLY-INFINITE ADJUST PILOT	1	D
	0515001-23	#	FRONT SEAT ASSEMBLY-INFINITE ADJUST PILOT	1	F
	0514077-1	#	FRONT SEAT ASSEMBLY-INFINITE ADJUST PILOT	1	G
			ATTACHING PARTS		
- 1	0511242-1		STOP-SEAT	1	
	AN500A8-7		SCREW	1	
			---*---		
	0515001-200	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	D
	0515001-211	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	F
			BACK ASSEMBLY-UPHOLSTERED SEAT	NP	G
			ATTACHING PARTS		
- 2	AN3-17A		BOLT	2	
- 3	AN960-10L		WASHER	4	
	0514029-2		SPACER	2	
	MS21044N3		NUT	2	
- 4	MS20392-2C11		PIN	2	
- 5	AN960-10L		WASHER	2	
- 6	MS24665-132		PIN-COTTER	2	
			---*---		
- 7	0515001-7	#	COVER ASSEMBLY-SEAT BACK	1	D
	0515001-39	#	COVER ASSEMBLY-SEAT BACK	1	F
	0514077-6	#	COVER ASSEMBLY-SEAT BACK	1	G
- 8	0514018-1	□	TRIM ASSEMBLY-SEAT BACK	1	D
	0514018-15	□	TRIM ASSEMBLY-SEAT BACK	1	F
	0514076-2	□	TRIM ASSEMBLY-SEAT BACK	1	G
			ATTACHING PARTS		
- 9	S1021A4-6		SCREW	3	
			---*---		
-10	0514018-3	□	POCKET ASSEMBLY-MAGAZINE	1	H
	1214062-5	#	POCKET ASSEMBLY-MAGAZINE	1	G
-11	S1957-2		ASH RECEIVER ASSEMBLY GDR	1	
	0515001-201	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT CO-PILOT	1	D
	0515001-212	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT CO-PILOT	1	F
		#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT CO-PILOT	1	G
	0515001-210	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT PILOT	1	D
	0515001-213	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT PILOT	1	F
		#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT PILOT	1	G
			ATTACHING PARTS		
-12	MS20392-3C49		PIN	1	
	MS20392-3C25		PIN	1	
-13	AN960-416L		WASHER	4	
-14	MS24665-134		PIN-COTTER	4	
-15	MS20392-3C17		PIN	2	
-16			DELETED-NEVER USED		
			---*---		
-17	0515001-10	#	COVER ASSEMBLY-SEAT BOTTOM	1	D
	0515001-35	#	COVER ASSEMBLY-SEAT BOTTOM	1	F
	0514077-5	#	COVER ASSEMBLY-SEAT BOTTOM	1	G
-18	0514017-3	□	TRIM	1	
-19	0514017-1	□	TRIM-LH	1	H
	0714010-1	□	TRIM-LH	1	G
	0514017-2	□	TRIM-RH	1	H
	0714010-2	□	TRIM-RH	1	G
			ATTACHING PARTS		
-20	S1021A4-6		SCREW	4	
			---*---		
-21	0514026-11		TUBE-TORQUE	1	
-22	0514030-4		BELLCRANK ASSEMBLY-SEAT BACK ADJUST	2	
			ATTACHING PARTS		
-23	NAS561P4-12		PIN	2	
			---*---		
-24	0514023-1		BRACKET ASSEMBLY-PILOT SEAT WEU 0514060-5	2	B
	0514060-5		BRACKET-SEAT PIVOT	2	C
-25	0514028-10		BELLCRANK ASSEMBLY-SEAT ADJUST	1	H
	0514028-15		BELLCRANK ASSEMBLY-SEAT ADJUST	1	G
			ATTACHING PARTS		
-26	NAS561P6-12		PIN	5	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
93 -27	0514036-1		HANDLE ASSEMBLY-SEAT BACK ADJUST	1	
			ATTACHING PARTS		
-28	NAS561P4-12		PIN	1	
			---*---		
-29	0514033-1		BEARING BLOCK	1	
			ATTACHING PARTS		
-30	AN520-10R8		SCREW	1	
-31	AN960-10L		WASHER	1	
			---*---		
-32	1200138-2		COLLAR	2	
			ATTACHING PARTS		
-33	NAS561P4-12		PIN	1	
			---*---		
-33A	S2013L2		BEARING	1	
	S2014-2		RACE	2	
-34	0514027-6	*	SCREW ASSEMBLY	1	H
	0514027-9		SCREW ASSEMBLY	1	G
-35	NAS561P4-10		PIN	1	
-36	1200139-1		NUT-SEAT ADJUST	1	
			ATTACHING PARTS		
-37	MS20392-2C37		PIN	1	
-38	AN960-10		WASHER	1	
-39	MS24665-132		PIN-COTTER	1	
			---*---		
	0514024-1		PEDESTAL ASSEMBLY-CO-PILOT SEAT	1	
	0514024-2		PEDESTAL ASSEMBLY-PILOT SEAT	1	
-40	0514035-1		PEDESTAL-LH	1	
-41	0514035-2		PEDESTAL-RH	1	
-42	0514026-11		TORQUE TUBE-REAR	1	
-43	0514034-1		BELLCRANK-VERTICAL ADJUSTMENT REAR	2	
			ATTACHING PARTS		
-44	NAS561P8-22		PIN	1	
			---*---		
-45	0514028-6		BELLCRANK ASSEMBLY-REAR TORQUE TUBE LH	1	
-46	0514028-5		BELLCRANK ASSEMBLY-REAR TORQUE TUBE RH	1	
			ATTACHING PARTS		
-47	NAS561P8-18		PIN	2	
			---*---		
-48	0514026-4		TORQUE TUBE-FORWARD	1	
-49	1200136-1		COLLAR-FRONT TORQUE TUBE	3	
			ATTACHING PARTS		
-50	NAS561P6-18		PIN	1	
			---*---		
-51	0700633-5		BELLCRANK ASSEMBLY-VERTICAL ADJUSTMENT FRONT	2	
			ATTACHING PARTS		
-52	NAS561P8-22		PIN	1	
			---*---		
-53	0514028-5		BELLCRANK ASSEMBLY-FRONT TORQUE TUBE	1	
			ATTACHING PARTS		
-54	NAS561P8-18		PIN	2	
			---*---		
-55	0514032-1		CHANNEL-TORQUE TUBE INTERCONNECT	1	
			ATTACHING PARTS		
-56	MS20392-2C37		PIN	2	
-57	MS24665-132		PIN-COTTER	2	
			---*---		
-58	1200159-3		HANDLE ASSEMBLY-VERTICAL ADJUST	1	
			ATTACHING PARTS		
-59	NAS561P4-12		PIN	2	
			---*---		
-60	0514033-2		BEARING BLOCK	1	
			ATTACHING PARTS		
-61	AN520-10R8		SCREW	1	
-62	AN960-10L		WASHER	1	
			---*---		
-63	1200138-1		COLLAR	2	
			ATTACHING PARTS		
-64	NAS561P4-10		PIN	1	
			---*---		
-64A	S2013-2		BEARING	1	
	S2014-2		RACE	2	
-65	0514027-5	*	SCREW ASSEMBLY-VERTICAL ADJUSTMENT	1	
-66	NAS561P4-10		PIN	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
93 -67	0514037-1		NUT-SEAT ADJUST	1	
			ATTACHING PARTS		
-68	MS20392-2C37		PIN	1	
-69	AN960-10		WASHER	1	
-70	MS24665-132		PIN-COTTER	1	
			---*---		
-71	0700113-1		KNOB-SEAT ADJUST	1	
			ATTACHING PARTS		
-72	S1021Z6-8		SCREW	1	
			---*---		
-73	0514047-1		ARM ASSEMBLY-SEAT ADJUST RH	1	
	0514047-9		ARM-LH	1	
			ATTACHING PARTS		
-74	MS20392-2C83		PIN RH	1	
	MS20392-2C45		PIN LH	1	
-75	AN960-10L		WASHER	1	
-76	MS24665-132		PIN-COTTER	1	
			---*---		
-77	1414104-56		CLAMP	1	
			ATTACHING PARTS		
-78	MS20392-1C15		PIN	2	
-79	MS24665-132		PIN-COTTER RH ONLY	1	
			---*---		
-80	1714067-2		PIN-SEAT ADJUST RH	1	
	1714067-4		PIN-SEAT ADJUST LH	1	
-80A	NAS561-3-16		PIN	1	
-81	1714061-1		GUIDE	1	
			ATTACHING PARTS		
-82	AN515-8R6		SCREW	2	
	MS21044N08		NUT	2	
			---*---		
-83	1414116-1		SPRING	1	
-84	1714000-33		HOUSING ASSEMBLY-ROLLER	4	
			ATTACHING PARTS		
	NAS220-11		SCREW	2	
	AN960-8		WASHER	2	
	MS21044N08		NUT	2	
			---*---		
-85	1714000-K200		ROLLER KIT-SEAT	4	
			ATTACHING PARTS		
-86	AN23-20A		SCREW	1	
-87	1414104-54		BUSHING	1	
-88	AN960-10L		WASHER	1	
-89	S1914-8		NUT	1	
			---*---		
-90	0514048-1	#	HEADREST ASSEMBLY	AR	
	0514048-9	#	COVER ASSEMBLY-HEADREST	1	
	SEE FIG 88		SEAT BELT INSTALLATION-FRONT SEAT	NP	D
	SEE FIG 108		SEAT BELT INSTALLATION-FRONT SEAT	NP	E

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.

NOTE. *WHEN ORDERING THIS PART FOR AIRCRAFT PRIOR TO 17259697 OR F17200845 ALSO ORDER ONE S2013L2 BEARING & TWO S2014-2 RACES

A---172 SERIAL 17258487 THRU 17260758
F172 SERIAL F17200655 THRU F17200904

B---172 SERIAL 17258487 THRU 17259142
F172 SERIAL F17200655 THRU F17200754

C---172 SERIAL 17259143 THRU 17260758
F172 SERIAL F17200755 THRU F17200904

D---172 SERIAL 17258487 THRU 17259223
F172 SERIAL F17200655 THRU F17200754


E---172 SERIAL 17259224 THRU 17260758
F172 SERIAL F17200755 THRU F17200904

F---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F17200755 THRU F17200804

G---172 SERIAL 17259904 THRU 17260758
F172 SERIAL F17200805 THRU F17200904

H---172 SERIAL 17258487 THRU 17259903
F172 SERIAL F17200655 THRU F17200804

Seat (Cont)

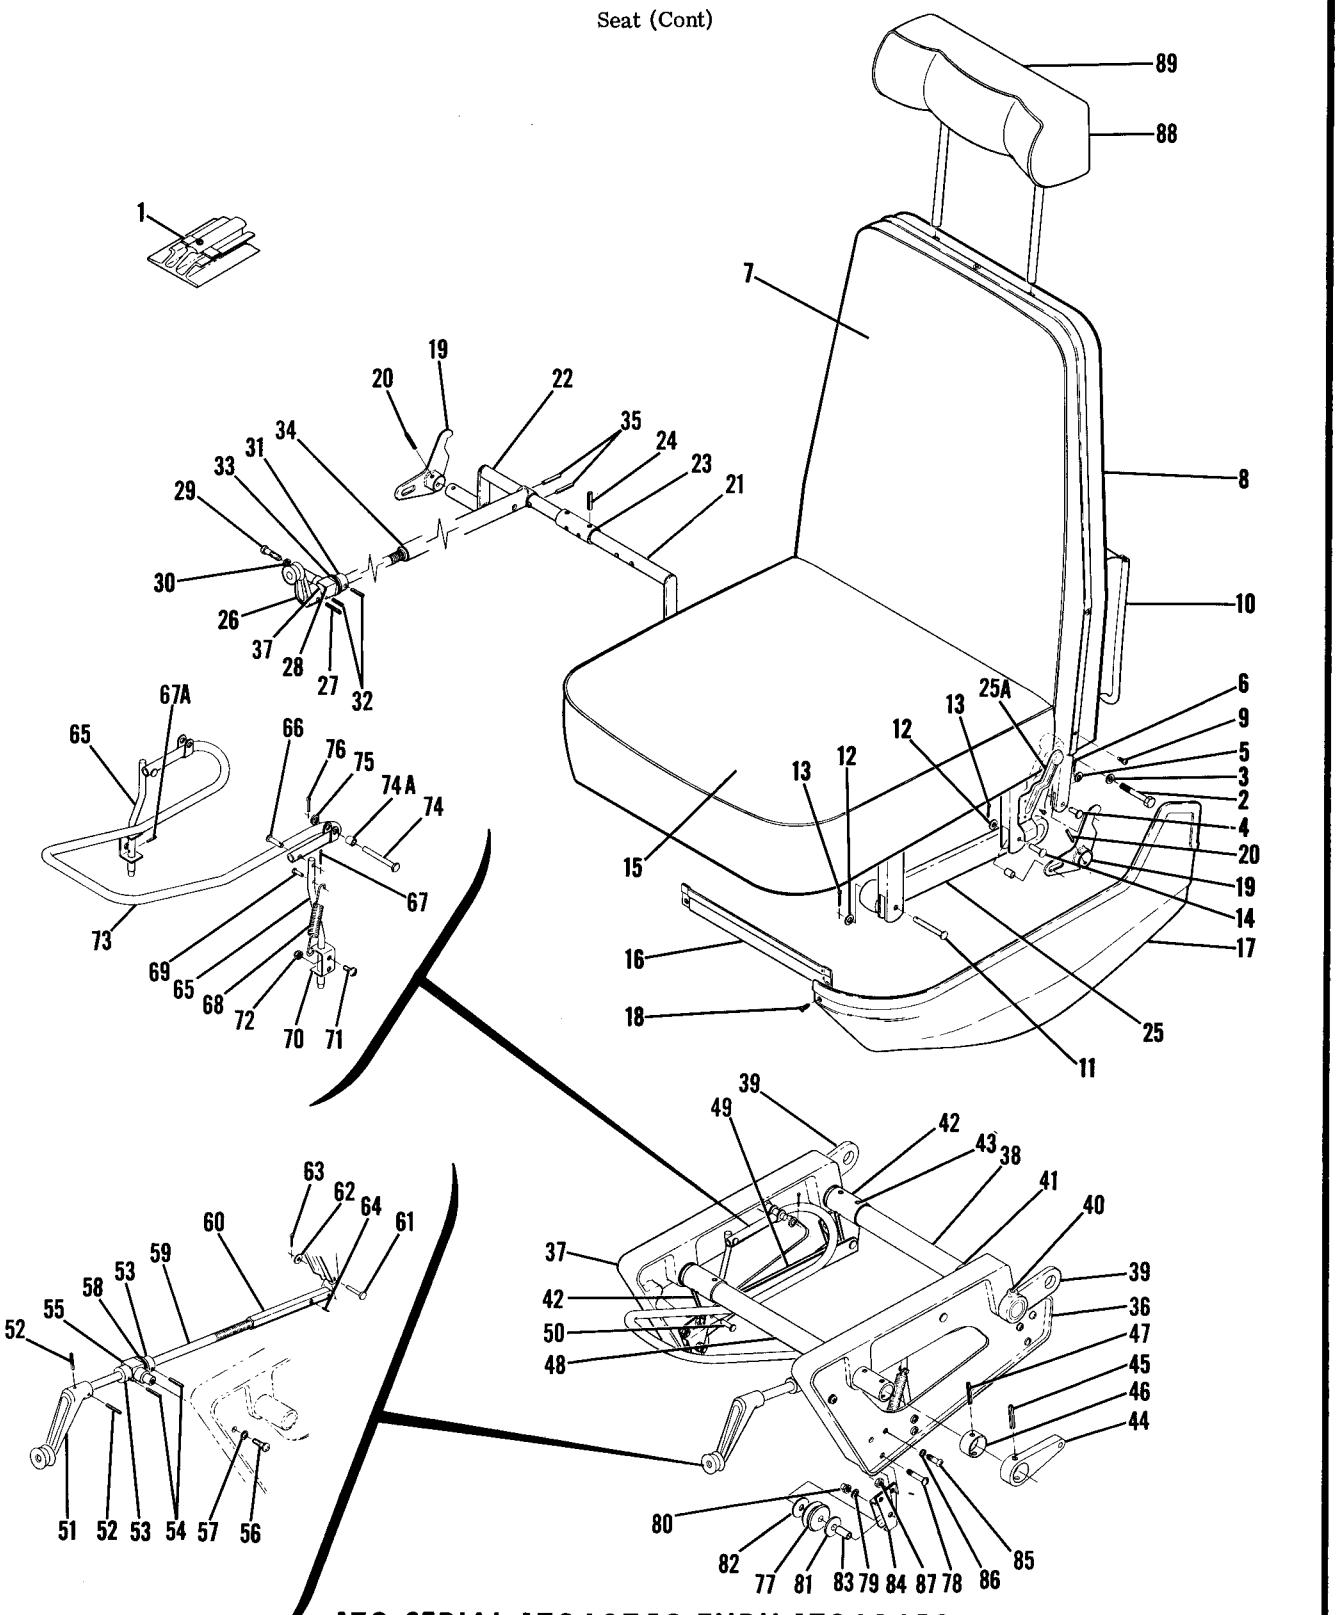

172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Figure 94. Infinitely Adjustable Front Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
94 -			FRONT SEAT INSTALLATION-INFINITE ADJUST	NP	A
	0514077-10	#	FRONT SEAT ASSY-INFINITE ADJUST CO-PILOT	1	B
	0514077-9	#	FRONT SEAT ASSY-INFINITE ADJUST PILOT	1	B
	0514094-2	#	FRONT SEAT ASSY-INFINITE ADJUST CO-PILOT	1	C
	0514094-1	#	FRONT SEAT ASSY-INFINITE ADJUST PILOT	1	C
			ATTACHING PARTS		
- 1	0511242-1		STOP-SEAT	1	
	AN500A8-7		SCREW	1	
			---*---		
			BACK ASSY-UPHOLSTERED SEAT	NP	
			ATTACHING PARTS		
- 2	AN3-17A		BOLT	2	
- 3	AN960-10L		WASHER	4	
	0514029-2		SPACER	2	
	MS21044N3		NUT	2	
- 4	MS20392-2C11		PIN	2	
- 5	AN960-10L		WASHER	2	
- 6	MS24665-132		COTTER PIN	2	
			---*---		
- 7	0514077-11	#	COVER ASSY-SEAT BACK	1	B
	0514094-7	#	COVER ASSY-SEAT BACK	1	C
- 8	0514083-1	□	TRIM ASSY-SEAT BACK	1	
			ATTACHING PARTS		
- 9	S1021A4-6		SCREW	5	
			---*---		
-10	1214062-5		POCKET ASSY	1	
			BOTTOM ASSY-UPHOLSTERED SEAT	NP	
			ATTACHING PARTS		
-11	MS20392-3C49		PIN	2	
-12	AN960-416L		WASHER	4	
-13	MS24665-134		COTTER PIN	4	
-14	MS20392-3C17		PIN	2	
			---*---		
-15	0514077-8	#	COVER ASSY-SEAT BOTTOM	1	B
	0514094-6	#	COVER ASSY-SEAT BOTTOM	1	C
-16	0514017-3	□	TRIM	1	
-17	0714010-1	□	TRIM-LH	1	
	0714010-2	□	TRIM-RH	1	
			ATTACHING PARTS		
-18	S1021A4-6		SCREW	4	
			---*---		
-19	0514030-4		BELLCRANK ASSY-SEAT BACK ADJUST	2	
			ATTACHING PARTS		
-20	NAS561P4-12		PIN	2	
			---*---		
-21	1714074-13		CRANK WELD ASSY-LH	1	
-22	1714074-14		CRANK WELD ASSY-RH	1	
-23	1714074-6		SPLICE	1	
			ATTACHING PARTS		
-24	NAS561P6-12		PIN	4	
			---*---		
-25	0514060-5		BRACKET-SEAT PIVOT	2	
-25A	0514101-1		STIFFENER-LH SEAT TRIM	1	
	0514101-2		STIFFENER-RH SEAT TRIM	1	
			ATTACHING PARTS		
	S1021A4-6		SCREW	2	
			---*---		
-26	0514036-1		HANDLE ASSY-SEAT BACK ADJUST	1	
			ATTACHING PARTS		
-27	NAS561P4-12		PIN	1	
			---*---		
-28	0514033-1		BEARING BLOCK	1	
			ATTACHING PARTS		
-29	AN520-10R8		SCREW	1	
-30	AN960-10L		WASHER	1	
			---*---		
-31	1200138-2		COLLAR	2	
			ATTACHING PARTS		
-32	NAS561P4-12		PIN	1	
			---*---		
-33	S2013-2		BEARING	1	
	S2014-2		RACE-BEARING	2	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
94 -34	0514089-1	JACK SCREW ASSY	1	
		ATTACHING PARTS		
-35	NAS561P4-15	PIN	2	
		---*---		
	0514051-2	PEDESTAL ASSY-CO-PILOT SEAT	1	
	0514051-1	PEDESTAL ASSY-PILOT SEAT	1	
-36	0514035-17	PEDESTAL-LH	1	
-37	0514035-18	PEDESTAL-RH	1	
-38	0514026-2	TORQUE TUBE-REAR	1	
-39	0514034-1	BELLCRANK-REAR TORQUE TUBE	2	
		ATTACHING PARTS		
-40	NAS561P6-28	PIN	1	
		---*---		
-41	0514028-6	BELLCRANK ASSY-REAR TORQUE TUBE INBD	1	
		ATTACHING PARTS		
	NAS561P8-18	PIN	2	
		---*---		
-42	0514028-5	BELLCRANK ASSY-TORQUE TUBE OUTBD	2	
		ATTACHING PARTS		
-43	NAS561P6-18	PIN	2	
		---*---		
-44	0700633-5	BELLCRANK-FWD TORQUE TUBE	2	
		ATTACHING PARTS		
-45	NAS561P6-22	PIN	2	
		---*---		
-46	1200136-1	COLLAR	3	
		ATTACHING PARTS		
-47	NAS561P6-18	PIN	1	
		---*---		
-48	0514026-4	TORQUE TUBE-FWD	1	
-49	0514032-1	CHANNEL-TORQUE TUBE INTERCONNECT	1	
		ATTACHING PARTS		
-50	MS20392-2C17	PIN	2	
	AN960-10L	WASHER	2	
	MS24665-132	COTTER PIN	2	
		---*---		
-51	1200159-3	HANDLE ASSY-VERTICAL ADJUST	1	
		ATTACHING PARTS		
-52	NAS561P4-12	PIN	2	
		---*---		
-53	1200138-2	COLLAR	2	
		ATTACHING PARTS		
-54	NAS561P4-12	PIN	1	
		---*---		
-55	0514033-2	BEARING BLOCK	1	
		ATTACHING PARTS		
-56	AN520-10R8	SCREW	1	
-57	AN960-10L	WASHER	1	
		---*---		
-58	S2013-2	BEARING	1	
	S2014-2	RACE	2	
-59	0514027-21	SCREW ASSY-VERTICAL ADJUST	1	
-60	1514119-3	NUT-VERTICAL ADJUST	1	
		ATTACHING PARTS		
-61	MS20392-2C37	PIN	1	
-62	AN960-10	WASHER	1	
-63	MS24665-132	COTTER PIN	1	
-64	NAS561P4-8	PIN	1	
		---*---		
-65	1714067-5	PIN-SEAT ADJUST	2	
		ATTACHING PARTS		
-66	MS20392-1C21	PIN	1	
-67	MS24665-132	COTTER PIN	1	
-67A	NAS561-3-16	PIN	1	
		---*---		
-68	1414116-1	SPRING LH SIDE ONLY	1	
		ATTACHING PARTS		
-69	MS20392-1C11	PIN	1	
		---*---		
-70	1714061-1	GUIDE-PIN	2	
		ATTACHING PARTS		
-71	AN515-8R6	SCREW	2	
-72	MS21042N08	NUT	2	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
94 -73	0514090-4		HANDLE-SEAT ADJUST	1	
			ATTACHING PARTS		
-74	MS20392-2C55		PIN	2	
-74A	NAS43DD3-18		SPACER	2	
-75	AN960-10L		WASHER	2	
-76	MS24665-132		COTTER PIN	2	
			---*---		
-77	S1704-1		ROLLER-SEAT	4	
			ATTACHING PARTS		
-78	AN23-20A		BOLT	1	
-79	AN960-10L		WASHER	1	
-80	S1914-8		NUT	1	
-81	1714000-22		WASHER	1	
-82	1714000-41		WASHER	1	
-83	1414104-54		BUSHING	1	
			---*---		
-84	1714000-33		HOUSING-SEAT ROLLER	4	
			ATTACHING PARTS		
-85	NAS220-11		SCREW	2	
-86	AN960-8		WASHER	2	
-87	MS21044N08		NUT	2	
			---*---		
-88	0514048-1	#	HEADREST ASSY	AR	
-89	0514048-9	#	COVER-HEADREST	1	
	SEE FIG 108		SEAT BELT INSTALLATION	NP	

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

A---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234
B---172 SERIAL 17260759 THRU 17261898
F172 SERIAL F17200905 THRU F17201034
C---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234

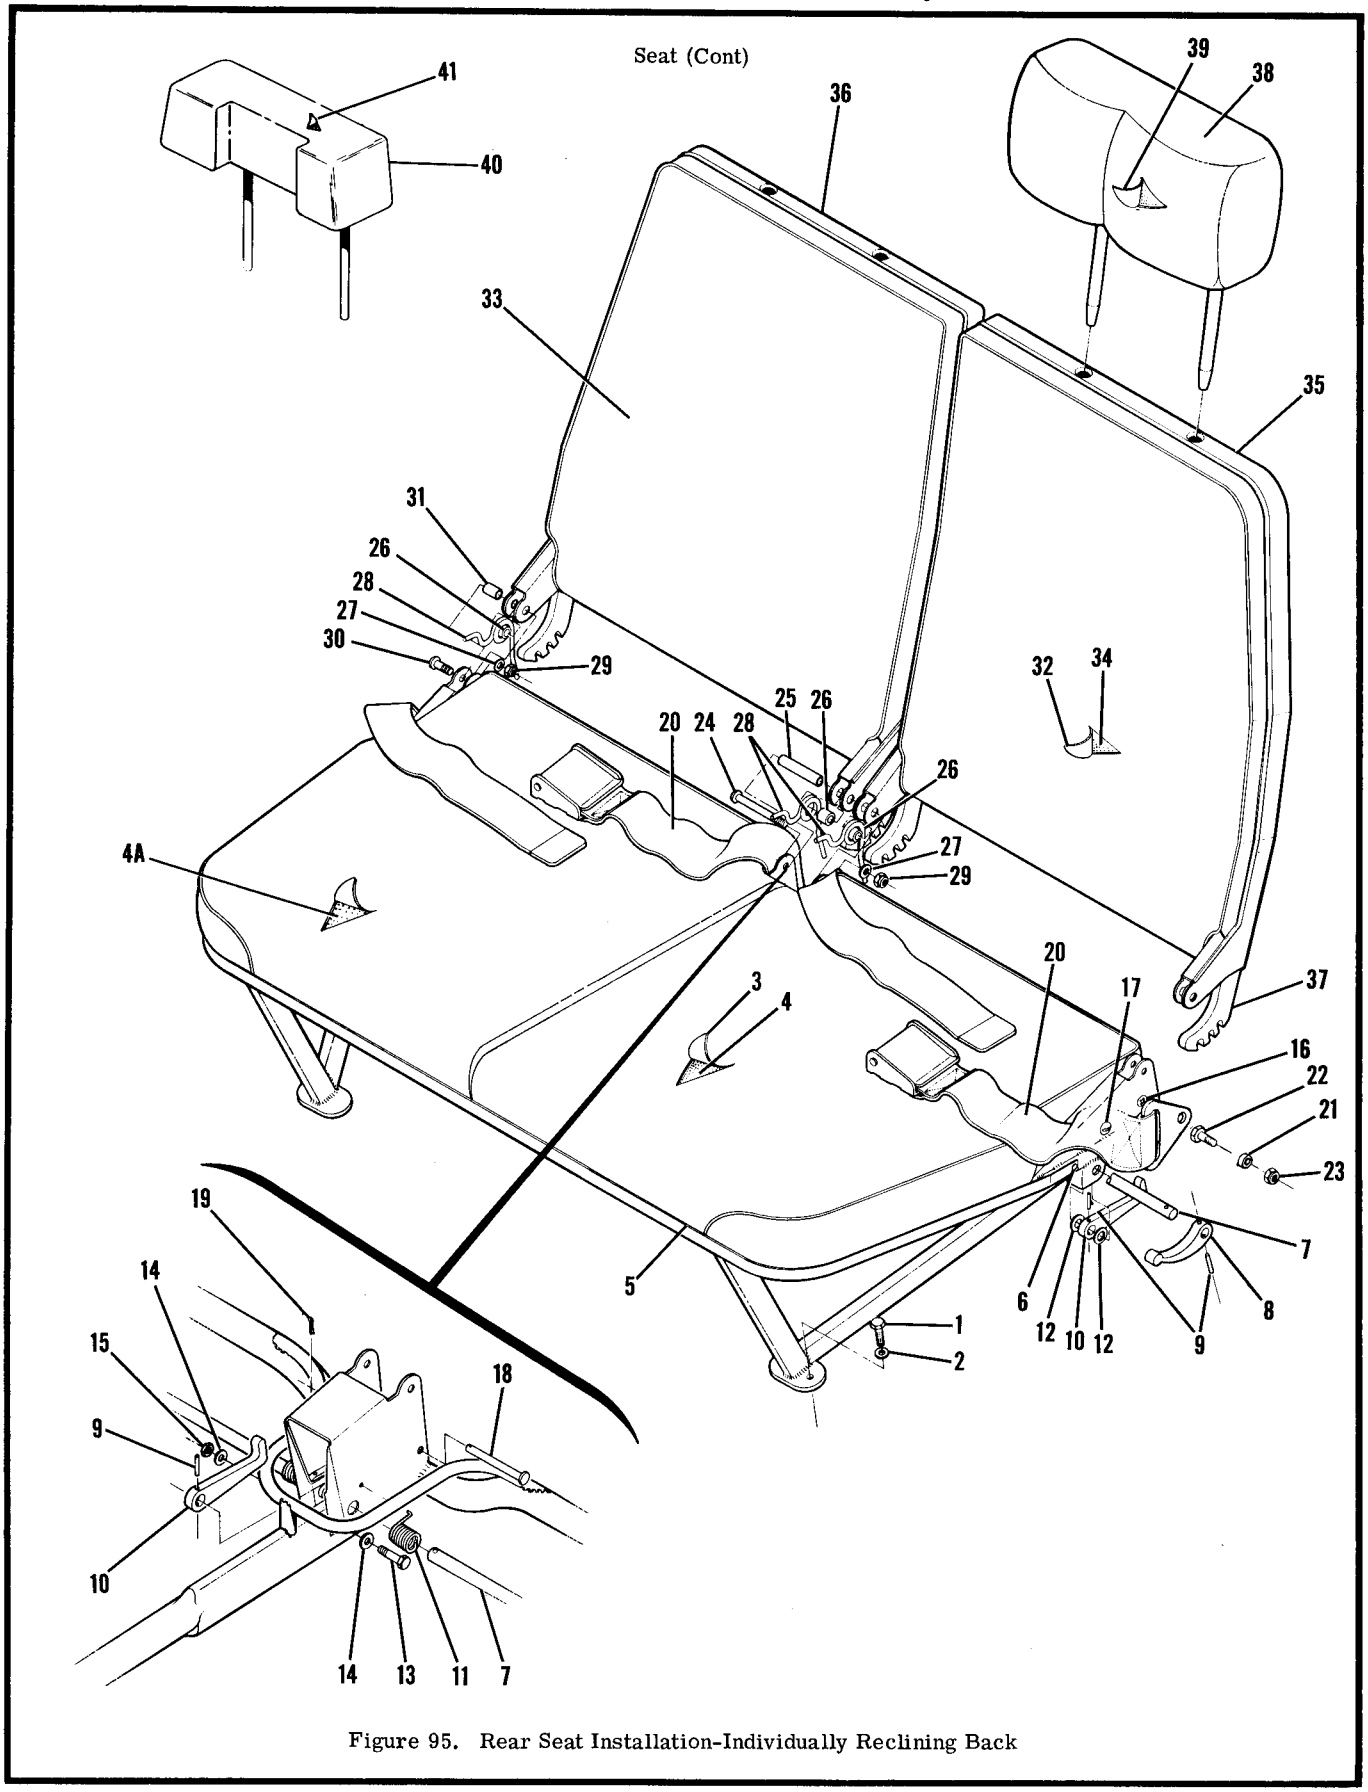


Figure 95. Rear Seat Installation-Individually Reclining Back

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
95 -			REAR SEAT INSTALLATION-INDIVIDUALLY RECLINING BACK	NP	
	0500210-28	#	BOTTOM ASSEMBLY-REAR SEAT	1	E
	0500210-125	#	BOTTOM ASSEMBLY-REAR SEAT FABRIC	1	F
	0500210-113	#	BOTTOM ASSEMBLY-REAR SEAT VINYL	1	M
	0500210-139	#	BOTTOM ASSEMBLY-REAR SEAT VINYL	1	P
	0500210-162	#	BOTTOM ASSEMBLY-REAR SEAT VINYL	1	T
	0514082-4	#	BOTTOM ASSEMBLY-REAR SEAT FABRIC	1	U
	0514082-19	#	BOTTOM ASSEMBLY-REAR SEAT FABRIC	1	W
	0514096-11	#	BOTTOM ASSEMBLY-REAR SEAT FABRIC	1	X
			ATTACHING PARTS		
- 1	AN4-7A		BOLT-FRONT LEGS ONLY	2	
	AN4-6A		BOLT-REAR LEGS ONLY	2	
- 2	AN960-416		WASHER	4	
			---*---		
- 3	0500210-31	#	COVER-REAR SEAT BOTTOM	1	E
	0500210-105	#	COVER ASSEMBLY-LH FABRIC	1	F
	0500210-123	#	COVER ASSEMBLY-LH VINYL	1	M
	0500210-145	#	COVER ASSEMBLY-LH VINYL	1	P
	0500210-165	#	COVER ASSEMBLY-LH VINYL	1	T
	0514082-17	#	COVER ASSEMBLY-BOTTOM LH FABRIC	1	U
	0514082-27	#	COVER ASSEMBLY-BOTTOM LH FABRIC	1	W
	0514096-5	#	COVER ASSEMBLY-BOTTOM LH FABRIC	1	X
	0500210-111	#	COVER ASSEMBLY-RH FABRIC	1	F
	0500210-122	#	COVER ASSEMBLY-RH VINYL	1	M
	0500210-146	#	COVER ASSEMBLY-RH VINYL	1	R
	0500210-166	#	COVER ASSEMBLY-RH VINYL	1	T
	0514082-16	#	COVER ASSEMBLY-BOTTOM RH FABRIC	1	U
	0514082-30	#	COVER ASSEMBLY-BOTTOM RH FABRIC	1	W
	0514096-4	#	COVER ASSEMBLY-BOTTOM RH FABRIC	1	X
- 4	0500210-32		CUSHION-REAR SEAT BOTTOM	1	E
	0500210-107		CUSHION-REAR SEAT BOTTOM	2	M
	0500210-151		CUSHION LH-REAR SEAT BOTTOM	1	P
	0500210-167		CUSHION LH-REAR SEAT BOTTOM	1	R
- 4A	0500210-150		CUSHION RH-REAR SEAT BOTTOM	1	P
	0500210-168		CUSHION RH-REAR SEAT BOTTOM	1	R
- 5	0500226-1		RETAINER-UPHOLSTERY	1	N
	0514044-1		RETAINER-UPHOLSTERY	1	N
			ATTACHING PARTS		
- 6	S1021Z6-4		SCREW	12	
			---*---		
- 7	0512031-9		SHAFT-CONTROL	2	
			ATTACHING PARTS		
- 8	0710312-2		HANDLE	1	
- 9	NAS561-P3-10		PIN	3	
-10	1414231-2		PAWL	1	
-11	1414107-2		SPRING-LH SHAFT ONLY	1	
	1414107-1		SPRING-RH SHAFT ONLY	1	
-12	AN960-416		WASHER	2	
			---*---		
-13	AN3-10A		BOLT	2	
-14	AN960-10L		WASHER	4	
-15	MS21044N3		NUT	2	
-16	AN507-832R14		SCREW	2	
	MS21044N08		NUT	2	
-17	AN23-15A		BOLT	2	
	MS21044N3		NUT	2	
-18	MS20392-2C71		PIN	1	
-19	MS24665-132		PIN-COTTER	1	
-20	S1418-1		SAFETY BELT	2	A
	S1418-3		SAFETY BELT	2	B
	S1622C3		BELT ASSEMBLY-REAR SEAT BLUE	2	C
	S1622D3		BELT ASSEMBLY-REAR SEAT TAN	2	C
	S1622F3		BELT ASSEMBLY-REAR SEAT OLIVE	2	C
	S1622H3		BELT ASSEMBLY-REAR SEAT CORAL	2	C
	S1651B1		BELT ASSEMBLY-REAR SEAT BLACK	2	D
	S1622D3		BELT ASSEMBLY-REAR SEAT TAN	2	G
	S1622J3		BELT ASSEMBLY-REAR SEAT RED	2	G
	S1622K3		BELT ASSEMBLY-REAR SEAT AVOCADO	2	G
	S1622M3		BELT ASSEMBLY-REAR SEAT BLUE	2	G
	S1746D13		BELT ASSEMBLY-REAR SEAT TAN	2	H
	S1651D1		BELT ASSEMBLY-REAR SEAT TAN	2	K
	S1746J13		BELT ASSEMBLY-REAR SEAT RED	2	H
	S1651J1		BELT ASSEMBLY-REAR SEAT RED	2	K
	S1746K13		BELT ASSEMBLY-REAR SEAT AVOCADO	2	H
	S1651K1		BELT ASSEMBLY-REAR SEAT AVOCADO	2	K

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
95 -	S1746M13		BELT ASSEMBLY-REAR SEAT BLUE	2	H
	S1651M1		BELT ASSEMBLY-REAR SEAT BLUE	2	K
	S1746P13		BELT ASSEMBLY-REAR SEAT BLUE	2	S
	S1746R13		BELT ASSEMBLY-REAR SEAT MAROON	2	S
	S1746D13		BELT ASSEMBLY-REAR SEAT TAN	2	S
	S1746S13		BELT ASSEMBLY-REAR SEAT GOLD	2	S
	S1746W13		BELT ASSEMBLY-REAR SEAT BROWN	2	P
	S1746Y13		BELT ASSEMBLY-REAR SEAT BLUE	2	P
	S1746T13		BELT ASSEMBLY-REAR SEAT MARIGOLD	2	P
	S1746V13		BELT ASSEMBLY-REAR SEAT OLIVE	2	P
	SEE FIG 55		BELT ASSEMBLY-REAR SEAT	2	R
-21	NAS43HT4-10		SPACER	3	
-22	AN4-6A		BOLT	3	
-23	MS21042L4		NUT	2	
	0500210-29	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED LH FABRIC	1	V
	0500210-115	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED LH VINYL	1	M
	0500210-143	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED LH VINYL	1	P
	0500210-163	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED LH VINYL	1	T
	0514082-3	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED LH FABRIC	1	U
	0514082-23	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED LH FABRIC	1	W
	0514096-3	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED LH FABRIC	1	X
	0500210-30	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED RH FABRIC	1	V
	0500210-114	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED RH VINYL	1	M
	0500210-144	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED RH VINYL	1	P
	0500210-164	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED RH VINYL	1	T
	0514082-2	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED RH FABRIC	1	U
	0514082-24	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED RH FABRIC	1	W
	0514096-2	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED RH FABRIC	1	X
			ATTACHING PARTS		
-24	AN23-40A		BOLT	1	
-25	1414211-22		BUSHING	1	
-26	0711668-1		BUSHING	4	
-27	AN960-10L		WASHER	6	
-28	0711667-1		SPRING	4	
-29	MS21044N3		NUT	3	
-30	AN23-16A		BOLT	2	
-31	1414104-4		SPACER	2	
			---*---		
-32	0500210-33	#	COVER-SEAT BACK LH FABRIC	1	V
	0500210-117	#	COVER-SEAT BACK LH VINYL	1	P
	0500210-177	#	COVER ASSY-SEAT BACK LH VINYL	1	T
	0514082-13	#	COVER ASSY-SEAT BACK LH FABRIC	1	U
	0514082-29	#	COVER ASSY-SEAT BACK LH FABRIC	1	W
	0514096-7	#	COVER ASSY-SEAT BACK LH FABRIC	1	X
-33	0500210-34	#	COVER-SEAT BACK RH FABRIC	1	V
	0500210-116	#	COVER-SEAT BACK RH VINYL	1	P
	0500210-172	#	COVER ASSY-SEAT BACK RH VINYL	1	T
	0514082-12	#	COVER ASSY-SEAT BACK RH FABRIC	1	U
	0514082-28	#	COVER ASSY-SEAT BACK RH FABRIC	1	W
	0514096-6	#	COVER ASSY-SEAT BACK RH FABRIC	1	X
-34	0500210-153		CUSHION ASSEMBLY-SEAT BACK-LH	1	Y
	0500210-152		CUSHION ASSEMBLY-SEAT BACK-RH	1	Y
	0514096-9		CUSHION ASSEMBLY-SEAT BACK LH	1	X
	0514096-10		CUSHION ASSEMBLY-SEAT BACK RH	1	X
-35	1414215-7	□	TRIM ASSEMBLY-SEAT BACK LH	1	O
	0514057-1	□	TRIM ASSEMBLY-SEAT BACK LH	1	N
-36	1414215-8	□	TRIM ASSEMBLY-SEAT BACK RH	1	O
	0514057-2	□	TRIM ASSEMBLY-SEAT BACK RH	1	N
			ATTACHING PARTS		
	S1021A6-6		SCREW	8	
			---*---		
-37	1414230-2		CAM-SEAT BACK RECLINE	2	
-38	1414252-1	#	HEADREST ASSEMBLY-SEAT BACK	2	J
	1714040-1	#	HEADREST ASSEMBLY-SEAT BACK 172 ONLY	2	L
	1714040-5	#	HEADREST ASSEMBLY-SEAT BACK SKYHAWK & F172	1	L
-39	1414252-6	#	COVER-HEADREST	1	J
	1714040-2	#	COVER ASSEMBLY-HEADREST 172 ONLY	1	L
	1714040-6	#	COVER ASSEMBLY-HEADREST SKYHAWK & F172	1	L
-40	0514048-1	#	HEADREST ASSEMBLY	2	N
-41	0514048-9	#	COVER ASSEMBLY-HEADREST	1	N

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
95 -		NOTE. □THIS PART NUMBER MUST HAVE A SECOND DASH ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX. A---172 SERIAL 17249545 THRU 17251822 F172 SERIAL F172-0001 THRU F172-0085 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 B---172 SERIAL 17251823 THRU 17253392 F172 SERIAL F172-0086 THRU F172-0179 C---172 SERIAL 17253393 THRU 17254892 F172 SERIAL F172-0180 THRU F172-0251 D---F172 SERIAL F172-0252 THRU F172-0319 E---172 SERIAL 17249545 THRU 17254892 F172 SERIAL F172-0001 THRU F172-0319 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 F---172 SERIAL 17254893 THRU 17256512 F172 SERIAL F172-0320 THRU F172-0431 G---172 SERIAL 17254893 THRU 17256512 H---172 SERIAL 17256513 THRU 17257161 J---172 SERIAL 17249545 THRU 17256512 F172 SERIAL F172-0001 THRU F172-0431, F172-0436 THRU F172-0442, F172-0444 THRU F172-0446 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 K---F172 SERIAL F172-0320 THRU F172-0559 L---172 SERIAL 17256513 THRU 17258486 F172 SERIAL F172-0432 THRU F172-0435, F172-0443, F172-0447 THRU F172-0654 M---172 SERIAL 17254893 THRU 17258486 F172 SERIAL F172-0320 THRU F172-0654 N---172 SERIAL 17258487 THRU 17263458 F172 SERIAL F17200655 THRU F17201234 O---172 SERIAL 17249545 THRU 17258486 F172 SERIAL F172-0001 THRU F172-0654 P---172 SERIAL 17258487 THRU 17259223 F172 SERIAL F17200655 THRU F17200754 R---172 SERIAL 17259224 THRU 17263458 F172 SERIAL F17200755 THRU F17201234 S---172 SERIAL 17257162 THRU 17258486 F172 SERIAL F172-0560 THRU F172-0654 T---172 SERIAL 17259224 THRU 17259903 F172 SERIAL F17200755 THRU F17200804 U---172 SERIAL 17259904 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 V---172 SERIAL 17249545 THRU 17256512 F172 SERIAL F172-0001 THRU F172-0431 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 W---172 SERIAL 17260759 THRU 17261898 F172 SERIAL F17200905 THRU F17201034 X---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234 Y---172 SERIAL 17249545 THRU 17261898 F172 SERIAL F172-0001 THRU F17201034 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		

Seat (Cont)

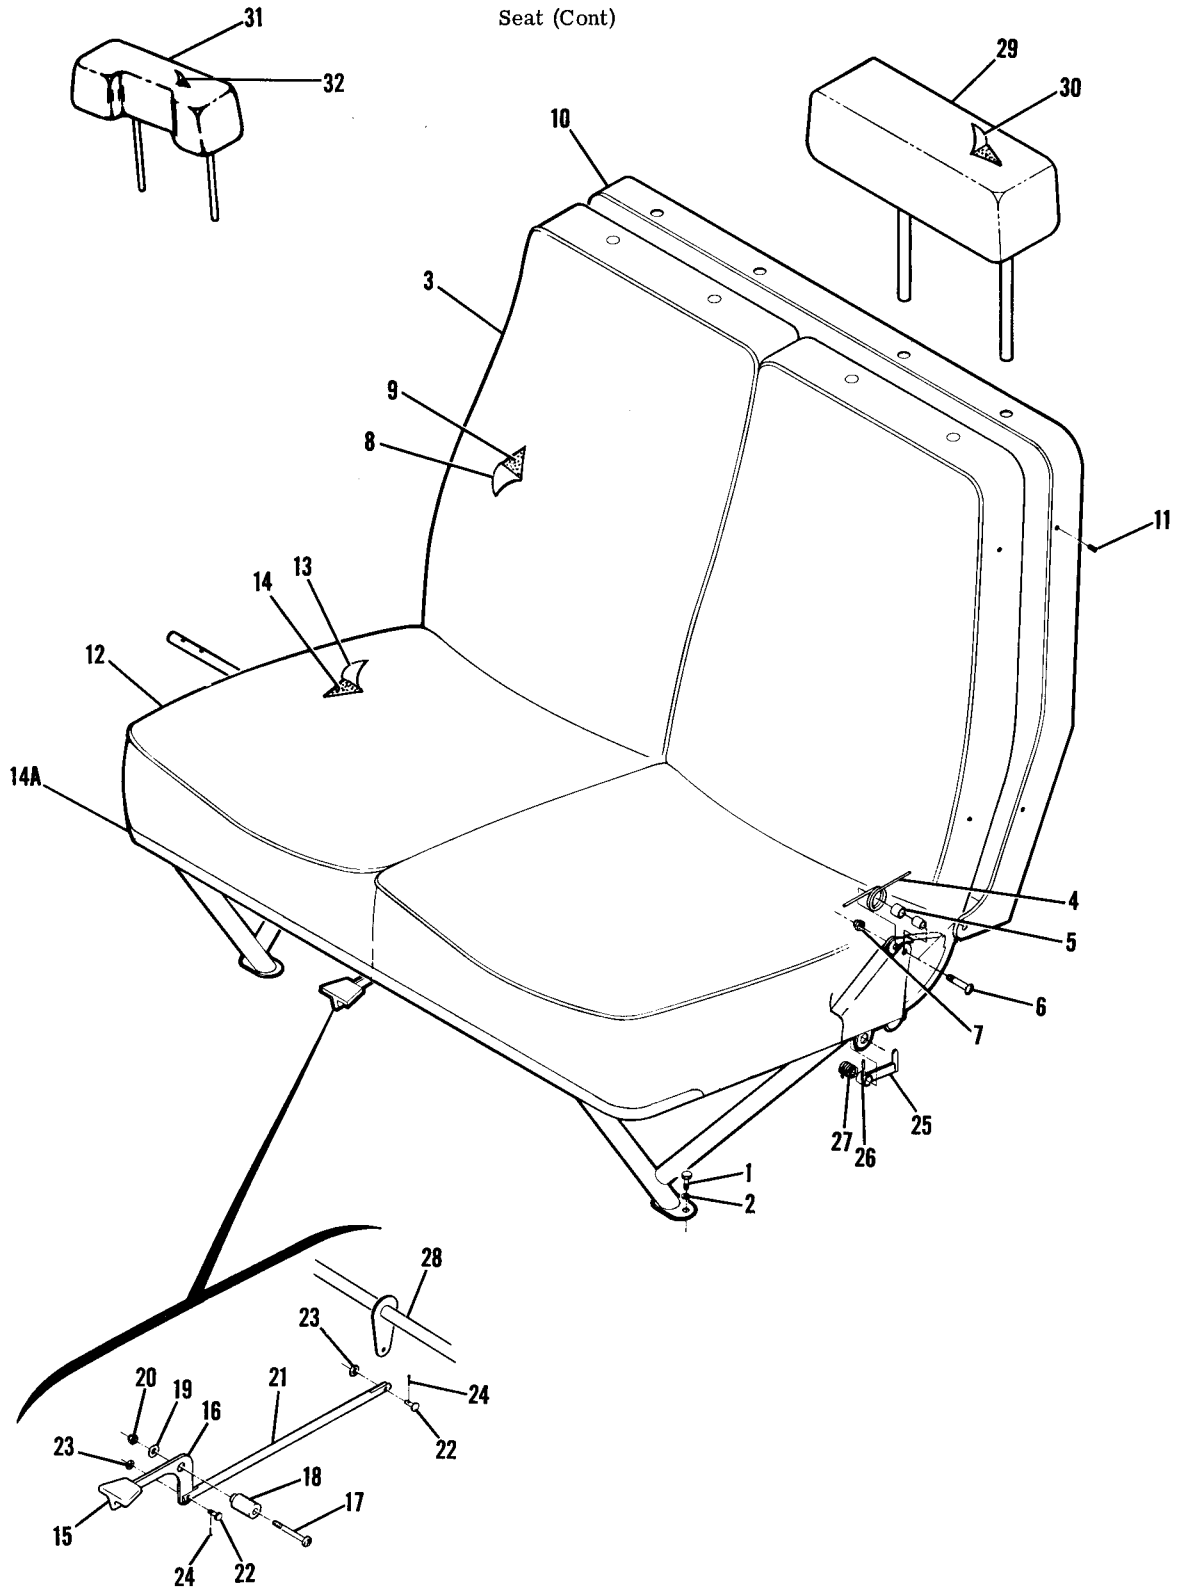

172 SERIAL 17256513 THRU 17263458

Figure 96. Rear Seat Installation - One Piece Reclining Back

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
96 -			REAR SEAT INSTALLATION-ONE PIECE RECLINING BACK	NP	A
	0514010-1	#	SEAT ASSEMBLY SKYHAWK ONLY	1	B
	0514010-2	#	SEAT ASSEMBLY	1	B
	0514010-15	#	SEAT ASSEMBLY-REAR	1	D
	0514010-19	#	SEAT ASSEMBLY-REAR	1	G
	0514081-1	#	SEAT ASSEMBLY-REAR	1	J
	0514081-12	#	SEAT ASSEMBLY-REAR	1	K
	0514095-1	#	SEAT ASSEMBLY-REAR	1	L
			ATTACHING PARTS		
- 1	AN4-7A		BOLT FRONT ATTACH	2	
	AN4-5A		BOLT REAR ATTACH	4	
- 2	AN960-416		WASHER	6	
			---*---		
- 3	0514010-202	#	BACK ASSEMBLY-UPHOLSTERED SEAT SKYHAWK ONLY	1	B
	0514010-203	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	B
	0514010-204	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	D
	0514010-206	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	G
			BACK ASSEMBLY-UPHOLSTERED	1	H
			ATTACHING PARTS		
- 4	1714002-1		SPRING	2	
- 5	1714001-20		BUSHING	2	
	1714001-22		BUSHING	2	
- 6	AN24-18A		BOLT	2	
- 7	S1914-11		NUT	2	
			---*---		
- 8	0514010-5	#	COVER ASSEMBLY-SEAT BACK SKYHAWK ONLY	1	E
	0514010-6	#	COVER ASSEMBLY-SEAT BACK	1	B
	0514010-20	#	COVER ASSEMBLY-SEAT BACK	1	G
	0514081-9	#	COVER ASSEMBLY-SEAT BACK	1	J
	0514081-14	#	COVER ASSEMBLY-SEAT BACK	1	K
	0514095-2	#	COVER ASSEMBLY-SEAT BACK	1	L
- 9	0514010-12		CUSHION-SEAT BACK	1	E
	0514010-13		CUSHION-LH BACK SKYHAWK ONLY	1	E
	0514010-14		CUSHION-RH BACK SKYHAWK ONLY	1	E
	0514010-22		CUSHION ASSEMBLY-SEAT BACK	2	G
	0514010-12		CUSHION-SEAT BACK	1	M
	0514095-3		CUSHION-SEAT BACK	1	L
-10	0514011-1	□	TRIM ASSEMBLY SKYHAWK ONLY	1	B
	0514056-1	□	TRIM ASSEMBLY	1	C
			ATTACHING PARTS		
-11	S1021A4-10		SCREW	AR	B
	S1021A4-6		SCREW	14	C
			---*---		
-12	0514010-200	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT SKYHAWK ONLY	1	B
	0514010-201	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT	1	B
	0514010-205	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT	1	D
	0514010-207	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT	1	G
			BOTTOM ASSEMBLY-UPHOLSTERED SEAT	NP	H
-13	0514010-3	#	COVER ASSEMBLY-SEAT BOTTOM SKYHAWK ONLY	1	E
	0514010-4	#	COVER ASSEMBLY-SEAT BOTTOM	1	B
	0514010-21	#	COVER ASSEMBLY-BOTTOM CUSHION	1	G
	0514081-6	#	COVER ASSEMBLY-SEAT BOTTOM	1	J
	0514081-13	#	COVER ASSEMBLY-SEAT BOTTOM	1	K
	0514095-4	#	COVER ASSEMBLY-SEAT BOTTOM	1	L
-14	0514010-9		CUSHION-SEAT BOTTOM	1	E
	0514010-10		CUSHION-RH SEAT BOTTOM SKYHAWK ONLY	1	E
	0514010-11		CUSHION-LH SEAT BOTTOM SKYHAWK ONLY	1	B
	0514010-23		CUSHION-BOTTOM	2	F
-14A	0514044-1		RETAINER	1	C
			ATTACHING PARTS		
	S1021Z6-4		SCREW	6	
			---*---		
-15	1714005-1		KNOB-SEAT ADJUSTMENT	1	
			ATTACHING PARTS		
	NAS561P3-6		PIN	1	
			---*---		
-16	1714033-1		BELLCRANK	1	
			ATTACHING PARTS		
-17	AN24-31A		BOLT	1	
-18	1714036-1		BUSHING	1	
-19	S1450-4-10-032		WASHER	1	
-20	MS21042L4		NUT	1	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
96 -21	1714095-1		LINK-SEAT BACK ADJUST	1	
			ATTACHING PARTS		
-22	MS20392-1C7		PIN	2	
-23	AN960-4L		WASHER	2	
-24	MS24665-132		PIN-COTTER	2	
			---*---		
-25	1714001-19		PAWL-SEAT BACK	2	
			ATTACHING PARTS		
-26	NAS561P3-8		PIN	1	
			---*---		
-27	1414107-1		SPRING-PAWL	2	
-28	0514007-11		TUBE ASSEMBLY-BACK ADJUST	1	
-29	1714040-1	#	HEADREST ASSEMBLY-SEAT BACK 172 ONLY	2	B
	1714040-5	#	HEADREST ASSEMBLY-SEAT BACK SKYHAWK & F172	2	B
-30	1714040-2	#	COVER ASSEMBLY-SEAT BACK 172 ONLY	1	B
	1714040-6	#	COVER ASSEMBLY-SEAT BACK SKYHAWK & F172	1	B
-31	0514048-1	#	HEADREST ASSEMBLY	1	C
-32	0514048-9	#	COVER ASSEMBLY-HEADREST	1	C
	SEE FIG 95		SAFETY BELT-REAR SEAT	2	E
	SEE FIG 108		SAFETY BELT-REAR SEAT	2	F


NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.

A---172 SERIAL 17256513 THRU 17263458
B---172 SERIAL 17256513 THRU 17258486
C---172 SERIAL 17258487 THRU 17263458
D---172 SERIAL 17258487 THRU 17259223
E---172 SERIAL 17256513 THRU 17259223
F---172 SERIAL 17259224 THRU 17263458
G---172 SERIAL 17259224 THRU 17259903
H---172 SERIAL 17259904 THRU 17263458
J---172 SERIAL 17259904 THRU 17260758
K---172 SERIAL 17260759 THRU 17261898
L---172 SERIAL 17261899 THRU 17263458
M---172 SERIAL 17259904 THRU 17261898

This page intentionally left blank.

Seat (Cont)

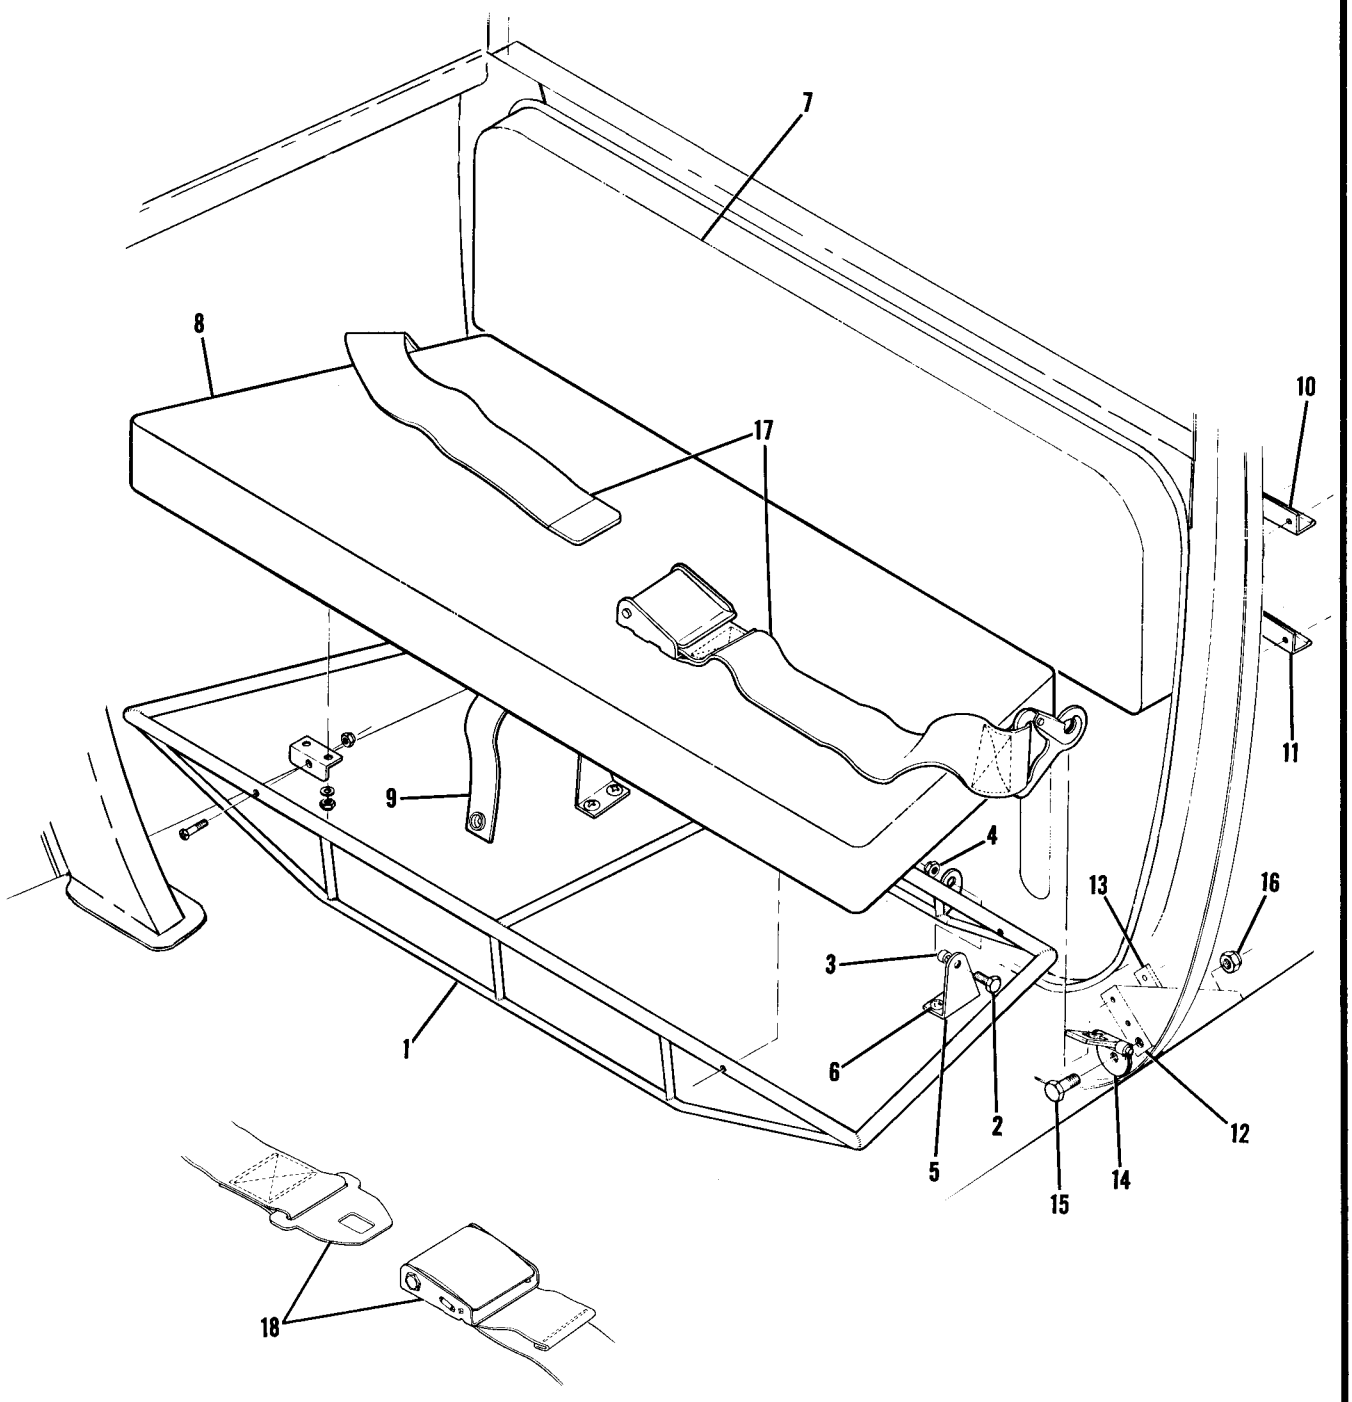

172 SERIAL 17249545 THRU 17258486
P172 SERIAL P17257120 THRU P17257188

Figure 97. Auxiliary Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
97 -			AUXILIARY SEAT INSTALLATION	NP	K
- 1	0711097-2		FRAME ASSEMBLY	1	D
	0711097-2	¤	FRAME ASSEMBLY	1	C
- 2	AN3-4A		BOLT	2	
- 3	NAS43HT3-6		SPACER	2	
- 4	MS21042L4		NUT	2	
			---*---		
- 5	0711098-3		HINGE-FLOOR FITTING LH	1	
	0711098-4		HINGE-FLOOR FITTING RH	1	
			ATTACHING PARTS		
- 6	AN515-8R8		SCREW	2	
	MS21044N08		NUT	2	
			---*---		
- 7	0711080-1	#	BACKREST ASSEMBLY	1	
	AN227-7		SOCKET	5	
	AN227-6		BUTTON	5	
- 8	0711097-4	#	CUSHION ASSEMBLY	1	H
	0711097-25	#	CUSHION ASSEMBLY	1	J
			ATTACHING PARTS		
	AN515-8R14		SCREW	4	
	MS21044N08		NUT	4	
			---*---		
- 9	0711097-21		STRAP ASSEMBLY	1	
-10	0511491-3		ANGLE ASSEMBLY	1	
-11	0511491-4		ANGLE ASSEMBLY	1	
-12	0512169-1		BRACKET LH	1	
	0512169-2		BRACKET RH	1	
-13	0712009-2		SPACER	2	
-14	0711083-1		LATCH ASSEMBLY	2	
			ATTACHING PARTS		
-15	AN4-6A		BOLT	1	
-16	MS21042L4		NUT	1	
	AN960-416		WASHER	1	
			---*---		
-17	S1243-6		BELT ASSEMBLY-SAFETY	1	A
	S1243-3		BELT ASSEMBLY-SAFETY	1	B
	S1746C5		BELT ASSEMBLY-SAFETY BLUE	1	E
	S1746D5		BELT ASSEMBLY-SAFETY TAN	1	E
	S1746F5		BELT ASSEMBLY-SAFETY OLIVE	1	E
	S1746H5		BELT ASSEMBLY-SAFETY CORAL	1	E
	S1746D5		BELT ASSEMBLY-SAFETY TAN	1	G
	S1746J5		BELT ASSEMBLY-SAFETY RED	1	G
	S1746K5		BELT ASSEMBLY-SAFETY AVOCADO	1	G
	S1746M5		BELT ASSEMBLY-SAFETY BLUE	1	G
-18	S1540-2		BELT ASSEMBLY-SAFETY BLACK	1	F

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

A---172 SERIAL 17249545 THRU 17251822
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0085
FP172 SERIAL FP172-0001 THRU FP172-0003

B---172 SERIAL 17251823 THRU 17253393
F172 SERIAL F172-0086 THRU F172-0179

C---172 SERIAL 17253393 THRU 17258486
F172 SERIAL F172-0180 THRU F172-0654

D---172 SERIAL 17249545 THRU 17253392
F172 SERIAL F172-0001 THRU F172-0179
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

E---172 SERIAL 17253393 THRU 17254892
F172 SERIAL F172-0180 THRU F172-0251

F---F172 SERIAL F172-0252 THRU F172-0654


G---172 SERIAL 17254893 THRU 17258486

H---172 SERIAL 17249545 THRU 17257161
F172 SERIAL F172-0001 THRU F172-0559

J---172 SERIAL 17257162 THRU 17258486
F172 SERIAL F172-0560 THRU F172-0679

K---172 SERIAL 17249545 THRU 17258486
F172 SERIAL F172-0001 THRU F172-0654
F172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Seat (Cont)

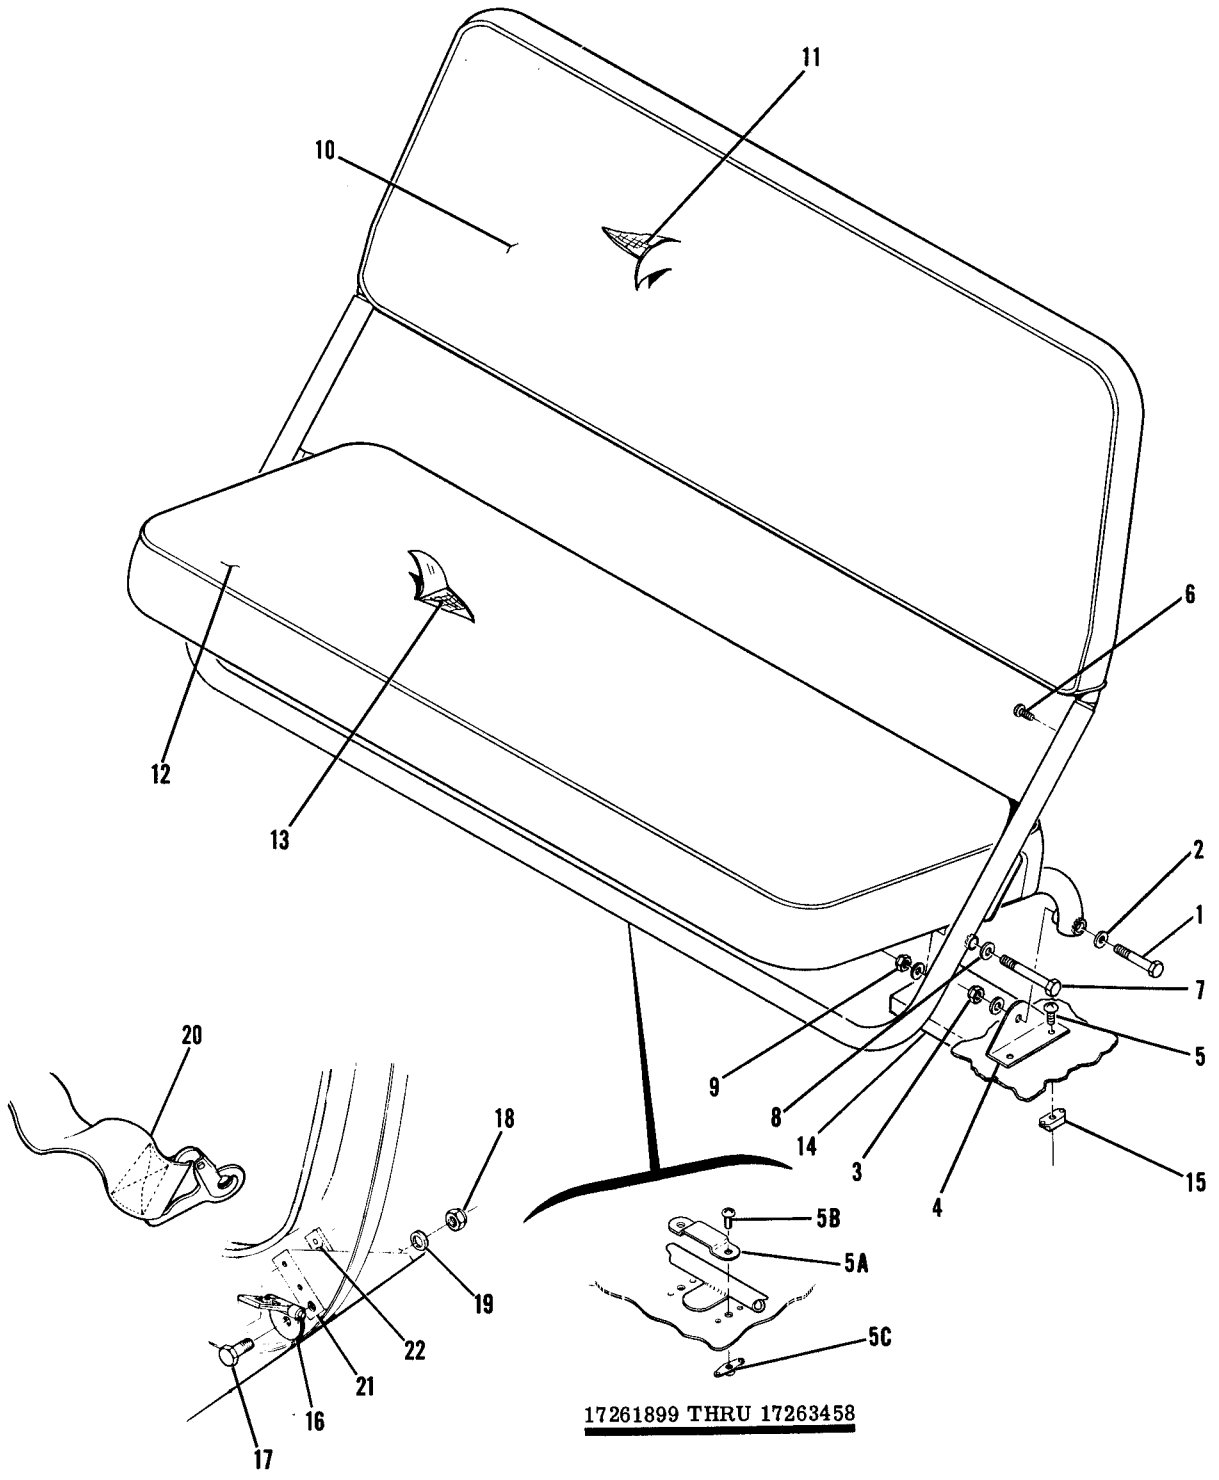

172 SERIAL 17258487 THRU 17263458
F172 SERIAL F17200655 THRU F17201234


Figure 98. Auxiliary Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
98 -			AUXILIARY SEAT INSTALLATION	NP	A
	0515002-1	#	SEAT ASSEMBLY-AUXILIARY	1	F
	0714005-2	#	SEAT ASSEMBLY-AUXILIARY	1	H
	0714005-1	#	SEAT ASSEMBLY-AUXILIARY	1	J
			ATTACHING PARTS		
- 1	AN4-13A		BOLT	2	
- 2	AN960-416		WASHER	4	
- 3	MS21042L4		NUT	2	
- 4	0514042-1		BRACKET-SEAT MOUNT	2	
- 5	AN515-8R8		SCREW	4	
- 5A	0715026-1		RETAINER	2	J
- 5B	AN515-8R8		SCREW	4	J
- 5C	NAS686A08		NUTPLATE	4	J
			---*---		
- 6	S1021Z8-6		SCREW	2	
- 7	AN4-17A		BOLT	2	
- 8	AN960-416		WASHER	4	
- 9	MS21042L4		NUT	2	
-10	0515002-4	#	COVER ASSEMBLY-SEAT BACK	1	F
	0714005-3	#	COVER ASSEMBLY-SEAT BACK	1	G
-11	0515002-9		CUSHION-SEAT BACK	1	
-12	0515002-6	#	COVER ASSEMBLY-SEAT BOTTOM	1	F
	0714005-4	#	COVER ASSEMBLY-SEAT BOTTOM	1	G
-13	0515002-10		CUSHION-SEAT BOTTOM	1	
-14	0513065-1		REINFORCEMENT ASSEMBLY	2	B
	0513065-2		REINFORCEMENT ASSEMBLY	2	B
	0513065-5		REINFORCEMENT ASSEMBLY	2	C
	0513065-6		REINFORCEMENT ASSEMBLY	2	C
-15	NAS686A08		NUTPLATE	2	
-16	0711083-1		LATCH ASSEMBLY	2	
			ATTACHING PARTS		
-17	AN4-6A		BOLT	1	
-18	MS21042L4		NUT	1	
-19	AN960-416		WASHER	1	
			---*---		
-20	S1746W5		BELT ASSEMBLY-SAFETY CLOVE BROWN	1	
	S1746Y5		BELT ASSEMBLY-SAFETY BLUE	1	D
	S1746T5		BELT ASSEMBLY-SAFETY MARIGOLD	1	D
	S1746V5		BELT ASSEMBLY-SAFETY LIGHT OLIVE	1	D
	S1746H5		BELT ASSEMBLY-SAFETY BLUE	1	E
	S1746G5		BELT ASSEMBLY-SAFETY GREEN	1	E
	S1746F5		BELT ASSEMBLY-SAFETY RED	1	E
	S1746B5		BELT ASSEMBLY-SAFETY BLACK	1	E
-21	0512169-1		BRACKET-LH	1	
	0512169-2		BRACKET-RH	1	
-22	0712009-2		SPACER	2	

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XVIII.

A---172 SERIAL 17258487 THRU 17263458
F172 SERIAL F17200655 THRU F17201234
B---172 SERIAL 17258487 THRU 17259214
F172 SERIAL F17200655 THRU F17200719
C---172 SERIAL 17259215 THRU 17263458
F172 SERIAL F17200720 THRU F17201234
D---172 SERIAL 17258487 THRU 17259223
F172 SERIAL F17200655 THRU F17200754
E---172 SERIAL 17259224 THRU 17201234
F172 SERIAL F17200755 THRU F17201234
F---172 SERIAL 17258487 THRU 17259903
F172 SERIAL F17200655 THRU F17200804
G---172 SERIAL 17259904 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
H---172 SERIAL 17259904 THRU 17261898
F172 SERIAL F17200805 THRU F17201034
J---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234

Instruments

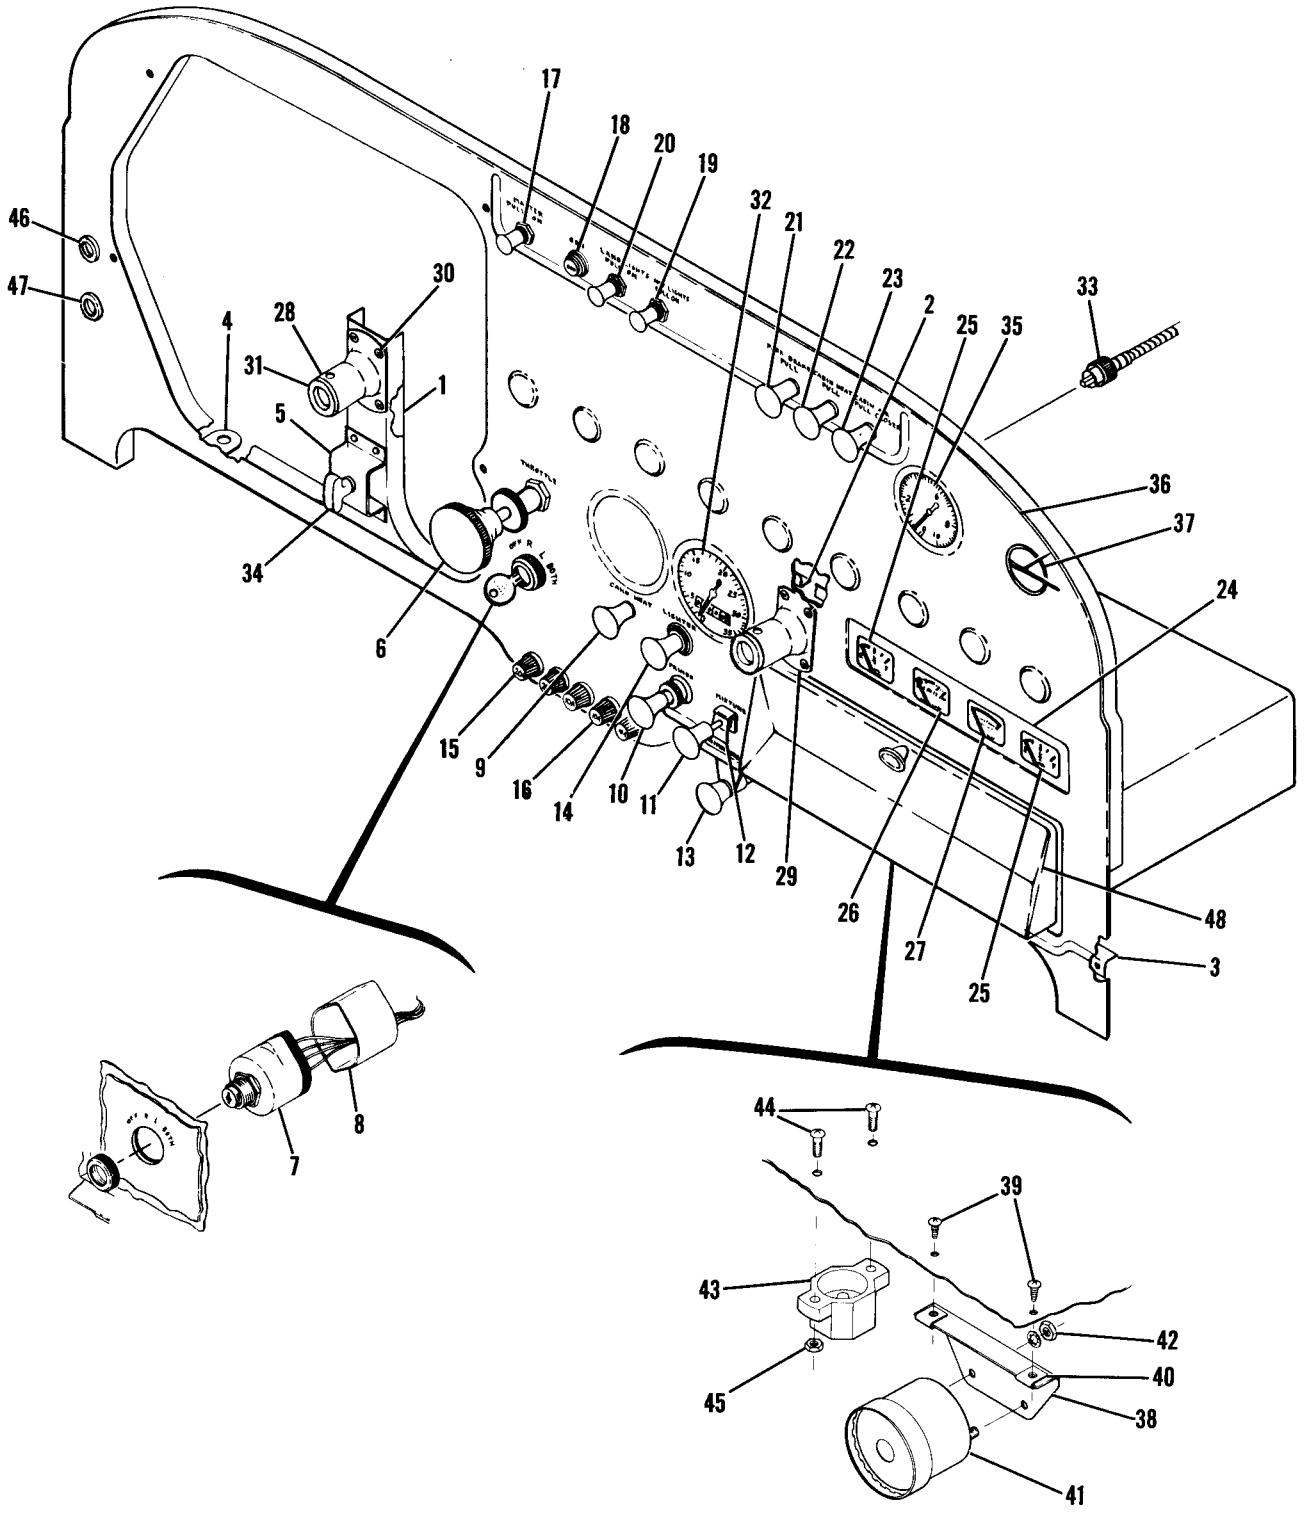

172 SERIAL 17249545 THRU 17250572

Figure 99. Stationary Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
99 -			STATIONARY INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
	0513133-82		PANEL ASSEMBLY-STATIONARY	1	
- 1	0513133-20		STIFFENER	1	
- 2	0513133-4		STIFFENER-UPPER	1	
- 3	0513133-5		STIFFENER-LOWER	1	
- 4	0513316-9		PLATE-MOUNTING	1	
- 5	0513133-23		BRACKET-STARTER CONTROL	1	
- 6	S1222-2		CONTROL-THROTTLE	1	
- 7	0311038-2		SWITCH-IGNITION WHEN EXHAUSTED USE C292501-0203	1	B
	C292501-0203	*	KIT-IGNITION SWITCH	1	B
- 8	0311777		SHIELD ASSEMBLY-SWITCH	1	B
	0713129-4	*	KIT-IGNITION SWITCH WHEN EXHAUSTED USE C292501-0102	1	C
	C292501-0102	*	KIT-IGNITION SWITCH	1	C
	0713221-1		COVER ASSEMBLY-SWITCH	1	C
- 9	S1224-1		CONTROL-CARBURETOR HEAT	1	
-10	0311538-10		PRIMER ASSEMBLY WHEN EXHAUSTED USE 0311538-12	1	
	0311538-12		PRIMER ASSEMBLY	1	
	S1240-5		KNOB-PRIMER	1	
-11	S1231-2		CONTROL-MIXTURE	1	
-12	0513173-1		CONTROL LOCK	1	
-13	S1239-14		CONTROL-STRAINER DRAIN	1	
	0756001-4		SUPPORT-STRAINER DRAIN CONTROL	1	
-14	0513039-7		LIGHTER ASSEMBLY-CIGAR CUNO	1	
	L4858-1		PLUG-HEATING CUNO	1	
	S1240-6		KNOB ASSEMBLY-LIGHTER	1	
-15	S1090-5		FUSEHOLDER	2	
	S1091-20		FUSE	2	
-16	S1090-3		FUSEHOLDER	3	
	S1091-16		FUSE	3	
-17	0713026-5		SWITCH-MASTER	1	
	S1416-1		KNOB-MASTER SWITCH	1	
-18	0513051-8		INDICATOR LIGHT-GENERATOR	1	
-19	0713026-4		SWITCH-NAVIGATION LIGHT	1	
	0713303-2		KNOB-NAVIGATION LIGHT SWITCH	1	
-20	0713035		SWITCH-LANDING LIGHT	1	
	0713303-2		KNOB-LANDING LIGHT SWITCH	1	
-21	S1239-1		CONTROL-PARKING BRAKE	1	
-22	S1239-7		CONTROL-CABIN HEAT	1	
-23	S1239-7		CONTROL-CABIN AIR	1	
-24	0513144-13		PANEL ASSEMBLY	1	
	0513144-15		PANEL ASSEMBLY USE WITH OIL COOLER ONLY	1	
			ATTACHING PARTS		
	AN515B6R10		SCREW	2	
	AN340B6		NUT	2	
	AN936A6B		WASHER	2	
			---*---		
-25	0513144-14		GAGE-FUEL	2	
-26	0513144-8		GAGE-OIL PRESSURE DIRECT PRESSURE	1	
-27	0513144-7		GAGE-OIL TEMPERATURE	1	
	0513144-2		GAGE-OIL TEMPERATURE USE WITH OIL COOLER ONLY	1	
	0500118-97		LINE-OIL PRESSURE GAGE TO FIREWALL	1	
-28	0513311-1		SUPPORT ASSEMBLY-CONTROL TUBE LH	1	
-29	0513311-2		SUPPORT ASSEMBLY-CONTROL TUBE RH	1	
			ATTACHING PARTS		
-30	AN515-6R8		SCREW	4	
	MS21044N06		NUT	4	
			---*---		
-31	0513056-3		GROMMET	2	
-32	S1305N6		TACHOMETER-RECORDING	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
	AN340B6		NUT	4	
	AN936A6B		WASHER	8	
			---*---		
-33	S1363-2		SHAFT-TACHOMETER DRIVE	1	
-34	0513187-3		CONTROL-STARTER REF 0513187-1	1	B

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
99 -35	S1414N1	SUCTION GAGE REMANUFACTURED WEU C668540-0101	1	
	C668540-0101	SUCTION GAGE	1	
		ATTACHING PARTS		
	AN936A6B	WASHER	4	
	AN340B6	NUT	4	
		---*---		
-36	0513133-87-418	PANEL ASSEMBLY-STATIONARY COVER	1	B
	0513133-86-418	PANEL ASSEMBLY-STATIONARY COVER	1	C
		ATTACHING PARTS		
	9960BK2215	STUD UC	4	
		---*---		
-37	0500052-1	EMBLEM	1	
-38	0713738-3	BRACKET-STALL WARNING HORN	1	
		ATTACHING PARTS		
-39	S1021Z8-6	SCREW	2	
		---*---		
-40	NAS395-12-3	NUT	2	
-41	S1407-6	HORN ASSEMBLY-STALL WARNING	1	
-42	AN340B6	NUT	4	
	AN936A6	WASHER	2	
-43	CA-2	CIRCUIT BREAKER SPT	1	
		ATTACHING PARTS		
-44	AN515B6R10	SCREW	2	
-45	MS20365B632C	NUT	2	
		---*---		
-46	MS35489-11	GROMMET	1	
-47	MS35489-19	GROMMET	1	
-48	SEE FIG 107	MAP COMPARTMENT INSTALLATION	1	


NOTE. *THIS KIT ALSO INCLUDES TWO DOOR LOCKS & KEYS

A---172 SERIAL 17249545 THRU 17250572
172 SKYHAWK SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
B---172 SERIAL 17249545 THRU 17250572
C---172 SKYHAWK SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0019

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
100 -			STATIONARY INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
	0513133-83		PANEL ASSEMBLY-STATIONARY	1	
- 1	0513133-20		STIFFENER	1	
- 2	0513133-4		STIFFENER-UPPER	1	
- 3	0513133-5		STIFFENER-LOWER	1	
- 4	0513316-9		PLATE-MOUNTING	1	
- 5	0513133-23		BRACKET	1	
- 6	S1222-4		CONTROL-THROTTLE	1	
- 7	0713129-4	*	KIT-IGNITION SWITCH WHEN EXHAUSTED USE C292501-0102	1	
	C292501-0102	*	KIT-IGNITION SWITCH	1	
- 8	0713221-1		COVER ASSEMBLY-SWITCH	1	
- 9	S1224-2		CONTROL-CARBURETOR HEAT	1	
-10	0311538-10		PRIMER ASSEMBLY WHEN EXHAUSTED USE 0311538-12	1	
	0311538-12		PRIMER ASSEMBLY	1	
	S1240-5		KNOB-PRIMER	1	
-11	S1231-3		CONTROL-MIXTURE	1	
-12	0513173-1		CONTROL LOCK	1	
-13	S1239-14		CONTROL-STRAINER DRAIN	1	
	0756001-4		SUPPORT-STRAINER DRAIN CONTROL	1	
-14	0513039-7		LIGHTER ASSEMBLY-CIGAR CUNO	1	
	L4858-1		PLUG-HEATING CUNO	1	
	S1240-6		KNOB-LIGHTER	1	
-15	S1090-5		FUSEHOLDER	2	
	S1090-20		FUSE	2	
-16	S1090-3		FUSEHOLDER	3	
	S1090-10		FUSE	3	
-17	0713026-5		SWITCH-MASTER	1	
	S1416-1		KNOB-MASTER SWITCH	1	
-18	0513051-8		INDICATOR LIGHT-GENERATOR	1	
-19	0713026-4		SWITCH-NAVIGATION LIGHT	1	
	0713303-2		KNOB-NAVIGATION LIGHT SWITCH	1	
-20	0713035		SWITCH-LANDING LIGHT	1	
	0713303-2		KNOB-LANDING LIGHT SWITCH	1	
-21	S1239-1		CONTROL-PARKING BRAKE	1	
-22	S1239-7		CONTROL-CABIN HEAT	1	
-23	S1239-7		CONTROL-CABIN AIR	1	
-24	0513144-15		PANEL ASSEMBLY	1	
			ATTACHING PARTS		
	AN515B6R10		SCREW	2	
	AN340B6		NUT	2	
	AN936A6B		WASHER	2	
			---*---		
-25	0513144-14		GAGE-FUEL	2	
-26	0513144-8		GAGE-OIL PRESSURE DIRECT PRESSURE	1	
-27	0513144-2		GAGE-OIL TEMPERATURE	1	
	AN123862		O RING OIL TEMP	1	
	0500118-12		LINE-OIL PRESS GAGE TO FIREWALL	1	
-28	0513311-1		SUPPORT ASSEMBLY-CONTROL TUBE LH	1	
-29	0513311-2		SUPPORT ASSEMBLY-CONTROL TUBE RH	1	
			ATTACHING PARTS		
-30	AN515B6R8		SCREW	4	
	AN340B6		NUT	4	
			---*---		
-31	0513056-3		GROMMET	2	
-32	S1410N1		TACHOMETER RECORDING	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
	AN340B6		NUT	4	
	AN936A6B		WASHER	8	
			---*---		
-33	S1363-1		SHAFT-TACHOMETER DRIVE	1	

CONTINUED ON NEXT PAGE

Instruments (Cont)

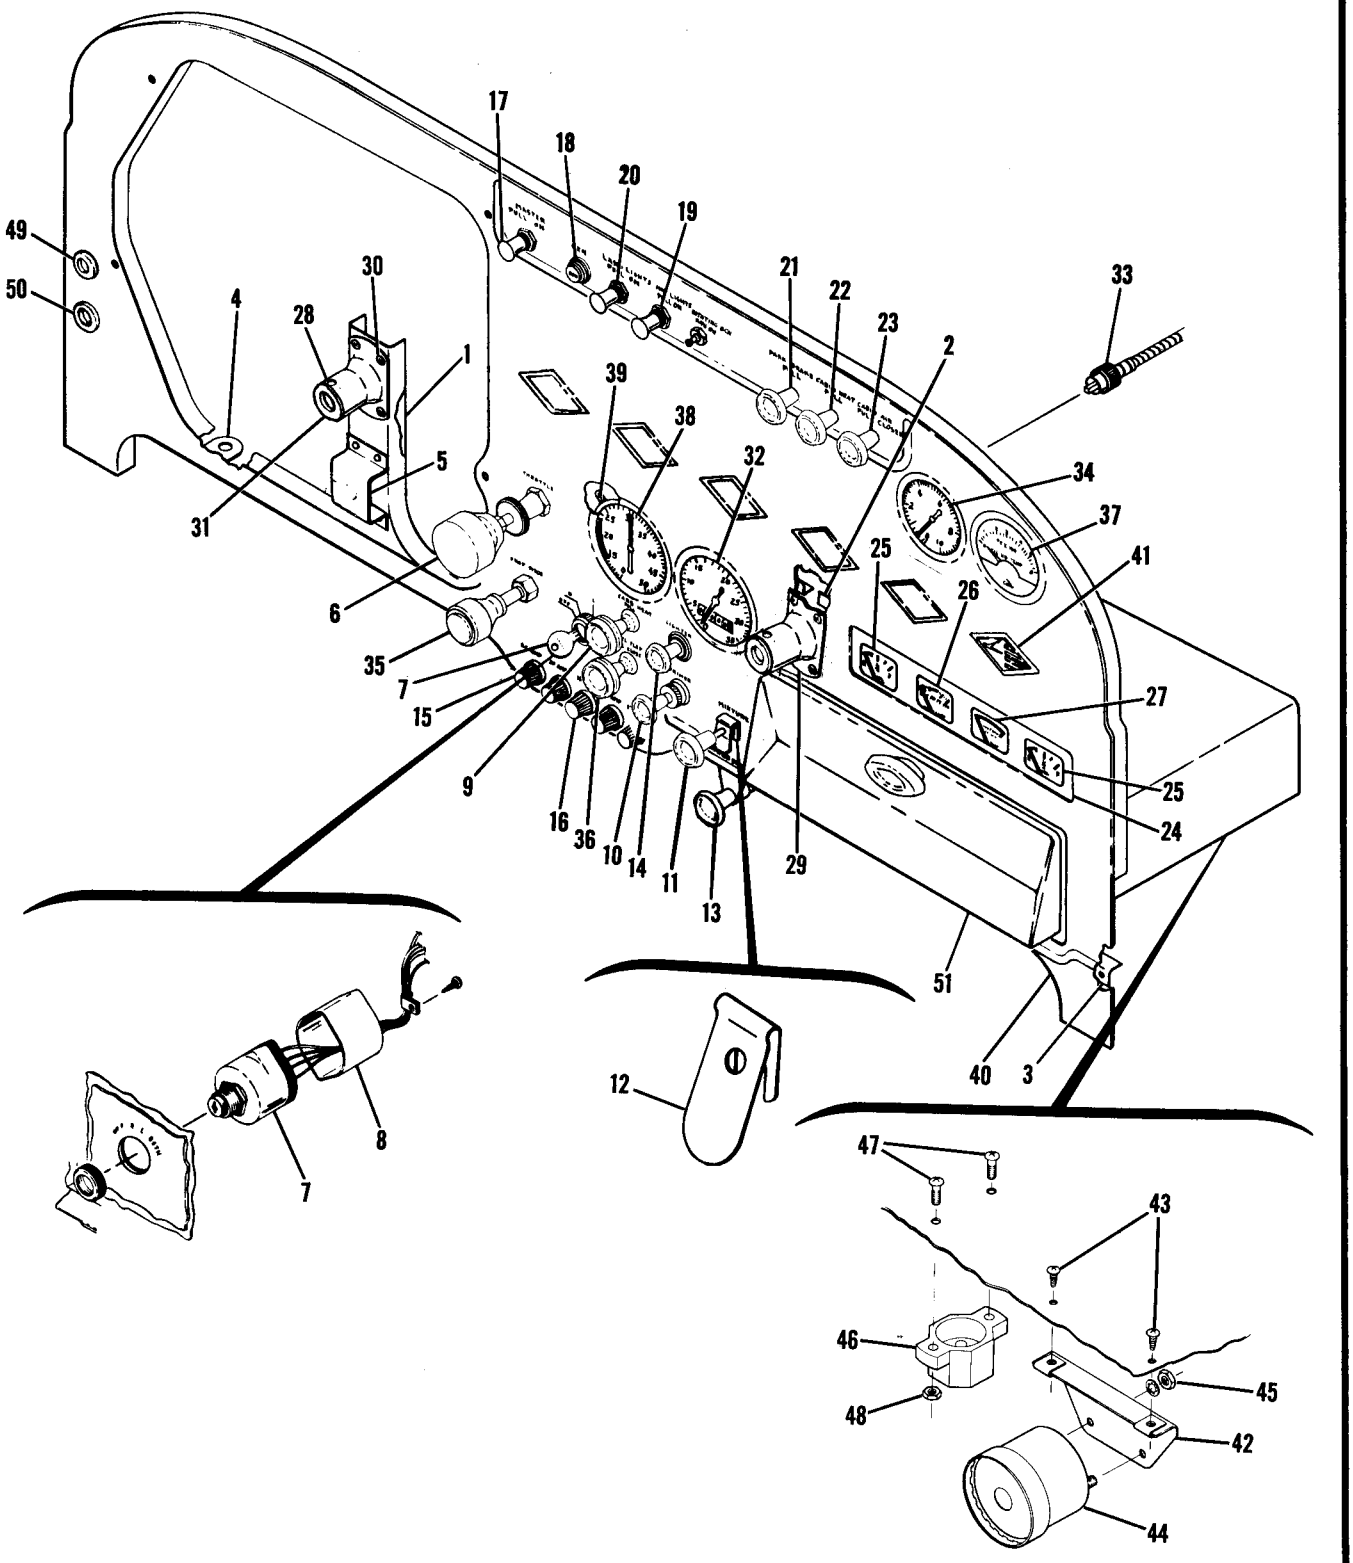

P172 SERIAL P17257120 THRU P17257188


Figure 100. Stationary Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
100 -34	S1414N1	SUCTION GAGE REMANUFACTURED WEU C668540-0101	1	
	C668540-0101	SUCTION GAGE	1	
		ATTACHING PARTS		
	AN936A6B	WASHER	4	
	AN34086	NUT	4	
		---*---		
-35	S1223-1	CONTROL-PROPELLER	1	
-36	S1298-1	CONTROL-COWL FLAPS	1	
-37	S1307N1	GAGE-CYLINDER HEAD TEMP	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
		---*---		
	0311018-12	LEAD-THERMOCOUPLE	1	
	0311018-11	THERMOCOUPLE-CYLINDER HEAD TEMPERATURE	1	
-38	S1301N1	GAGE-MANIFOLD PRESSURE	1	
		ATTACHING PARTS		
-39	AN515B6R12	SCREW	4	
	AN34086	NUT	4	
	AN936A6B	WASHER	4	
		---*---		
-40	0513133-92-418	PANEL ASSEMBLY-STATIONARY COVER	1	A
	0513133-89-418	PANEL ASSEMBLY-STATIONARY COVER	1	B
		ATTACHING PARTS		
	9960BK2215	STUD UC	4	
		---*---		
-41	0500053-1	EMBLEM	1	
-42	0713738-3	BRACKET-STALL WARNING HORN	1	
		ATTACHING PARTS		
-43	S1021Z8-6	SCREW	2	
		---*---		
	NAS395-12-3	NUT	2	
-44	S1407-6	HORN ASSEMBLY-STALL WARNING	1	
-45	AN34086	NUT	4	
	AN936-A6	WASHER	2	
-46	CA-2	CIRCUIT BREAKER SPT	1	
		ATTACHING PARTS		
-47	AN515B6R10	SCREW	2	
-48	MS20365B632C	NUT	2	
		---*---		
-49	MS35489-11	GROMMET	1	
-50	MS35489-19	GROMMET	1	
-51	SEE FIG 107	MAP COMPARTMENT INSTALLATION	NP	

NOTE. *THIS KIT ALSO INCLUDES TWO DOOR LOCKS AND KEYS

A---P172 SERIAL P17257120 THRU P17257188
B---P172 SKYHAWK SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Instruments (Cont)

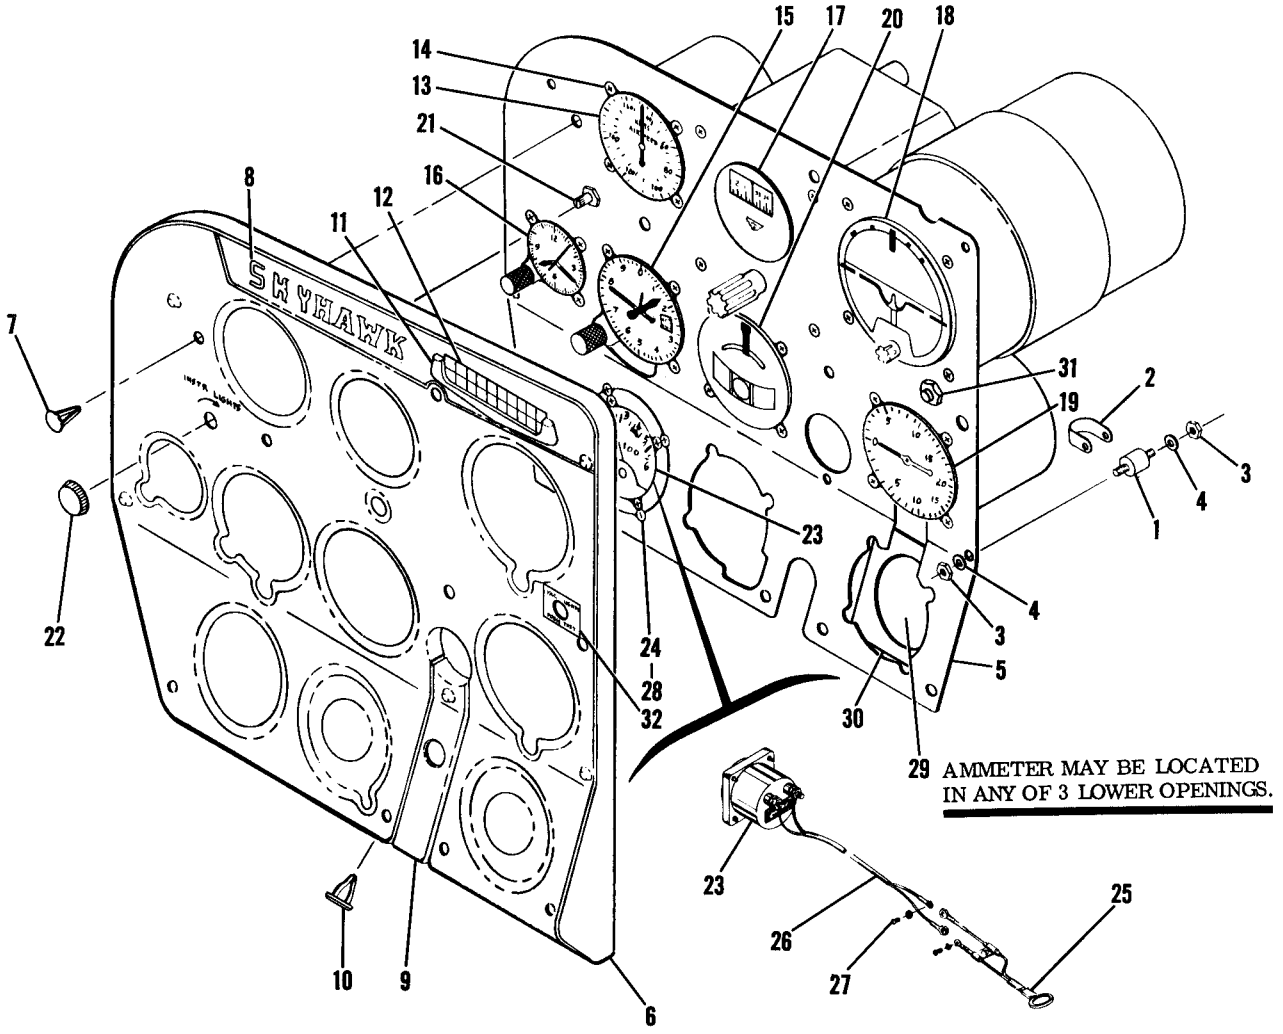

172 SERIAL 17249545 THRU 17250572

P172 SERIAL P17257120 THRU P17257188

Figure 101. Shock Mounted Instrument Panel Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
101 -		PANEL ASSEMBLY-SHOCK MOUNTED INSTRUMENT	NP	A
		ATTACHING PARTS		
- 1	0411059-1	MOUNT-SHOCK	5	
- 2	0413247	STRAP-GROUND	1	
- 3	AN340B8	NUT	10	
- 4	AN936A8	WASHER	10	
		---*---		
- 5	0513133-2	PANEL-SHOCK MOUNTED INSTRUMENT	1	
- 6	0513133-72-418 *	COVER ASSEMBLY-SHOCK MOUNTED PANEL	1	D
	0513133-74-418 *	COVER ASSEMBLY-SHOCK MOUNTED PANEL SKYHAWK	1	C
	0513133-78-418 *	COVER ASSEMBLY-SHOCK MOUNTED PANEL	1	B
	0513133-94-418	COVER ASSEMBLY-SHOCK MOUNTED PANEL	1	F
	0513133-96-418	COVER ASSEMBLY-SHOCK MOUNTED PANEL	1	G
		ATTACHING PARTS		
- 7	49265F-52	FASTENER UC	9	
		---*---		
- 8	0513220-10	LETTERING-SKYHAWK	1	C
	0513220-2	INITIAL-S	1	C
	0513220-3	INITIAL-K	2	C
	0513220-4	INITIAL-Y	1	C
	0513220-8	INITIAL-H	1	C
	0513220-6	INITIAL-A	1	C
	0513220-9	INITIAL-W	1	C
- 9	0513133-70	FILLER-COVER ASSEMBLY	1	D
	0513133-71	FILLER-COVER ASSEMBLY	1	E
		ATTACHING PARTS		
-10	49265F-52	FASTENER UC	2	
		---*---		
-11	0813569-2	RETAINER-COMPASS CARD	1	
		ATTACHING PARTS		
	S1021Z4-8	SCREW	2	
	NAS446-1-3	NUT	2	
		---*---		
-12	0713028-8	CARD-COMPASS	1	
	0713028-3	COVER-COMPASS CARD	1	
-13	S1323N3	INDICATOR-AIRSPEED	1	D
	S1470N9	INDICATOR-AIRSPEED ALTERNATE	1	D
	S1324N5	INDICATOR-AIRSPEED	1	B
	S1470N5	INDICATOR-AIRSPEED ALTERNATE	1	B
	S1386N1	INDICATOR-AIRSPEED KILOMETERS PER HOUR & MPH	1	D
	S1387N1	INDICATOR-AIRSPEED KILOMETERS PER HOUR & MPH	1	B
		ATTACHING PARTS		
-14	AN515B6R16	SCREW	4	
	AN340B6	NUT	4	
	MS20365B632C	NUT ALTERNATE	4	
	AN936A6B	WASHER	4	
		---*---		
-15	S1314N1	ALTIMETER 20000 FT FOR VFR APPLICATIONS ONLY WHEN EXHAUSTED USE C661011-0105	1	
	S1313N1	ALTIMETER 30000 FT FOR VFR APPLICATIONS ONLY WHEN EXHAUSTED USE C661011-0105	1	C
	C661011-0202	ALTIMETER 35000 FT FOR VFR APPLICATIONS ONLY WHEN EXHAUSTED USE C661011-0106	1	
	S1384N1	ALTIMETER METERS & MILIBARS	1	
	C661011-0105	ALTIMETER 20000 FT FEET & INCHES	1	
	C661011-0106	ALTIMETER 20000 FT FEET & MILLIBARS	1	
		ATTACHING PARTS		
	AN515B6R16	SCREW	4	
	AN340B6	NUT	4	
	AN936A6B	WASHER	4	
		---*---		
-16	CM2629N1	CLOCK 8 DAY	1	H
	S1317N1	CLOCK-ELECTRIC	1	J
		ATTACHING PARTS		
	AN515B6R12	SCREW	2	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
101 -17	S1316N1	GYRO-DIRECTIONAL REMFRD WHEN EXHAUSTED SEE FIG 87A	1	
	S1327N1	INDICATOR-DIRECTIONAL GYRO-AZIMUTH TYPE 34B USED WITH VACUUM WARNING LIGHTS WHEN EXHAUSTED SEE FIG 87A	1	
		ATTACHING PARTS		
	AN520B10R14	SCREW	4	
		---*---		
-18	S1309N1	GYRO-HORIZON REMFRD WHEN EXHAUSTED SEE FIG 87A	1	
	S1326N1	INDICATOR-GYRO HORIZON-TYPE 34B WITH VACUUM WARNING LIGHTS WHEN EXHAUSTED SEE FIG 87A	1	
		ATTACHING PARTS		
	AN520B10R14	SCREW	4	
		---*---		
	330R	BULB	2	
-19	S1304N1	INDICATOR-VERTICAL SPEED REMANUFACTURED	1	
	S1392N1	INDICATOR-VERTICAL SPEED ALTERNATE	1	
	S1385N1	INDICATOR-VERTICAL SPEED 10 METERS PER MIN	1	
		ATTACHING PARTS		
	AN515B6R16	SCREW	4	
	AN34086	NUT	4	
	AN936A6B	WASHER	4	
		---*---		
-20	S1302N1	INDICATOR-TURN & BANK 12V REMANUFACTURED	1	
	S1413N1	INDICATOR-TURN & BAMK ALTERNATE	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	AN34086	NUT	4	
	AN936A6B	WASHER	4	
		---*---		
-21	0413126-10	RHEOSTAT ASSEMBLY	1	
-22	0413126-3	KNOB	1	
		CYLINDER HEAD TEMPERATURE GAGE INSTALLATION	1	D
-23	S1307N1	GAGE-CYLINDER HEAD TEMPERATURE REMANUFACTURED	1	D
		ATTACHING PARTS		
-24	AN515B6R12	SCREW	4	D
	AN515B6R6	SCREW	4	D
	MS21044N06	NUT	8	D
	0411897-3	COVER	1	D
		---*---		
-25	0311018-11	THERMOCOUPLE	1	D
	0311018-9	THERMOCOUPLE ALTERNATE	1	D
-26	0311018-10	LEAD	1	D
		ATTACHING PARTS		
-27	AN515B6-5	SCREW	2	D
	0550222-2	LUG	1	D
	S1021Z8-8	SCREW	1	D
	S1485D2L	CLAMP TIN	1	D
		---*---		
-28	S1311N1	GAGE-CARBURETOR AIR TEMPERATURE	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	AN34086	NUT	4	
	0411897-3	ADAPTER PLATE	1	
	AN515B6R12	SCREW	4	
	AN936A6B	WASHER	4	
	AN34086	NUT	4	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
101 -29	S1320-1		AMMETER	1	
-30	0700036-2		PLATE-ADAPTER	1	
			ATTACHING PARTS		
	AN515-6R6		SCREW	4	
	MS21044N06		NUT	4	
			---*---		
-31	S1284-1		SWITCH-PUSH BUTTON VACUUM PRESS TO TEST	1	
-32	0713705-2	**	PLACARD-VACUUM LIGHTS PRESS TO TEST	1	

NOTE. *WHEN ORDERING THIS PART FOR AIRPLANES EQUIPPED WITH VACUUM SWITCH, ALSO ORDER PART MARKED **.


A---172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
C---172 SKYHAWK SERIAL 17249545 THRU 17250572
P172 SKYHAWK SERIAL P17257120 THRU P17257188
D---172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
E---P172 SERIAL P17257120 THRU P17257188
P172 SKYHAWK SERIAL P17257120 THRU P17257188
172 SKYHAWK SERIAL 17249545 THRU 17250572
F---P172 SERIAL P17257143 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
G---172 SKYHAWK SERIAL 17249722 THRU 17250572
P172 SKYHAWK SERIAL P17257143 THRU P17257188
H---172 SERIAL 17249545 THRU 17249945
P172 SERIAL P17257120 THRU P17257162
J---172 SERIAL 17249946 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
P172 SERIAL P17257163 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

This page intentionally left blank.

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
102 -			INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
- 1	0513316-200		PANEL ASSEMBLY-STATIONARY	1	D
	0513316-201		PANEL ASSEMBLY-STATIONARY	1	F
- 2	0513316-4		STIFFENER	1	
- 3	0513316-5		STIFFENER	1	
- 4	0513316-6		ANGLE	1	
- 5	0513316-7		SUPPORT-LH	1	
- 6	0513316-8		SUPPORT-RH	1	
- 7	0513316-9		MOUNT PLATE-JACK PHONE	1	
- 8	0513316-10		GUSSET	1	
- 9	0513316-11		CHANNEL	1	
-10	0513316-12		ANGLE	1	
-11	0513319-1-418		COVER-STATIONARY PANEL WHEN EXHAUSTED USE 0513319-8-418 & 0513319-11-418	1	B
	0513319-2-418		COVER-STATIONARY PANEL SKYHAWK ONLY WHEN EXHAUSTED USE 0513319-9-418 & 0513319-11-418	1	C
	0513319-8-418		COVER-STATIONARY PANEL LOWER	1	D
	0513319-9-418		COVER-STATIONARY PANEL LOWER	1	E
	0513319-12	¤	COVER-STATIONARY PANEL LOWER STANDARD 172	1	F
	0513319-13	¤	COVER-STATIONARY PANEL LOWER SKYHAWK	1	G
	0513319-18-418		COVER-STATIONARY PANEL UPPER	1	D
	0513319-18	¤	COVER-STATIONARY PANEL UPPER	1	F
-12	0513316-3		SHOCK PANEL	1	L
	0513316-25		SHOCK PANEL USE WITH C661001-0201 & C661002-0201 GYROS ONLY	1	M
			ATTACHING PARTS		
-13	0411059-1		MOUNT	4	
-14	AN936A8		WASHER	8	
-15	AN340B8		NUT	8	
-16	0413247		STRAP-GROUND	1	
	S1021Z4-6		SCREW LOWER COVER ONLY	3	
			---*---		
-17	0513319-21		COVER-SHOCK PANEL	1	L
	0513319-17	¤	COVER-SHOCK PANEL USE WITH C661001-0201 & C661002-0201 GYROS ONLY	1	M
			ATTACHING PARTS		
-18	0513351-1		SCREW POST	4	
	XH99608-F1099		STUD UC	1	
			---*---		
-19	0513319-5	¤	COVER-RADIO CUTOUT		
-20	0513319-4-418		COVER-ENGINE INSTRUMENTS	1	D
	0513319-4	¤	COVER-ENGINE INSTRUMENTS	1	F
			ATTACHING PARTS		
-21	0513351-1		SCREW POST	4	
	AN515-8R12		SCREW	4	
	NAS43DD3-22		SPACER	4	
	AN340B8		NUT	4	
			---*---		
-22	SEE FIG 107		MAP COMPARTMENT INSTALLATION	1	
-23	0513311-1		SUPPORT ASSEMBLY-LH	1	
-24	0513311-2		SUPPORT ASSEMBLY-RH	1	
			ATTACHING PARTS		
	AN515-6R8		SCREW RH ONLY	4	
	MS21044N06		NUT RH ONLY	4	
	AN515B6R8		SCREW LH ONLY	4	
	AN340B6		NUT LH ONLY	4	
			---*---		
	0513056-3		GROMMET	2	
-25	0713028-8		CARD-COMPASS	1	
	0713028-3		COVER-COMPASS CARD	1	
-26	0813569-2		RETAINER-COMPASS CARD	1	
			ATTACHING PARTS		
	S1021Z4-8		SCREW	2	
	NAS446-1-3		NUT	2	
			---*---		
-27	S1470N9		INDICATOR-AIRSPEED	1	
			ATTACHING PARTS		
	AN515B6R16		SCREW	4	
			---*---		

CONTINUED ON NEXT PAGE

Instruments (Cont)

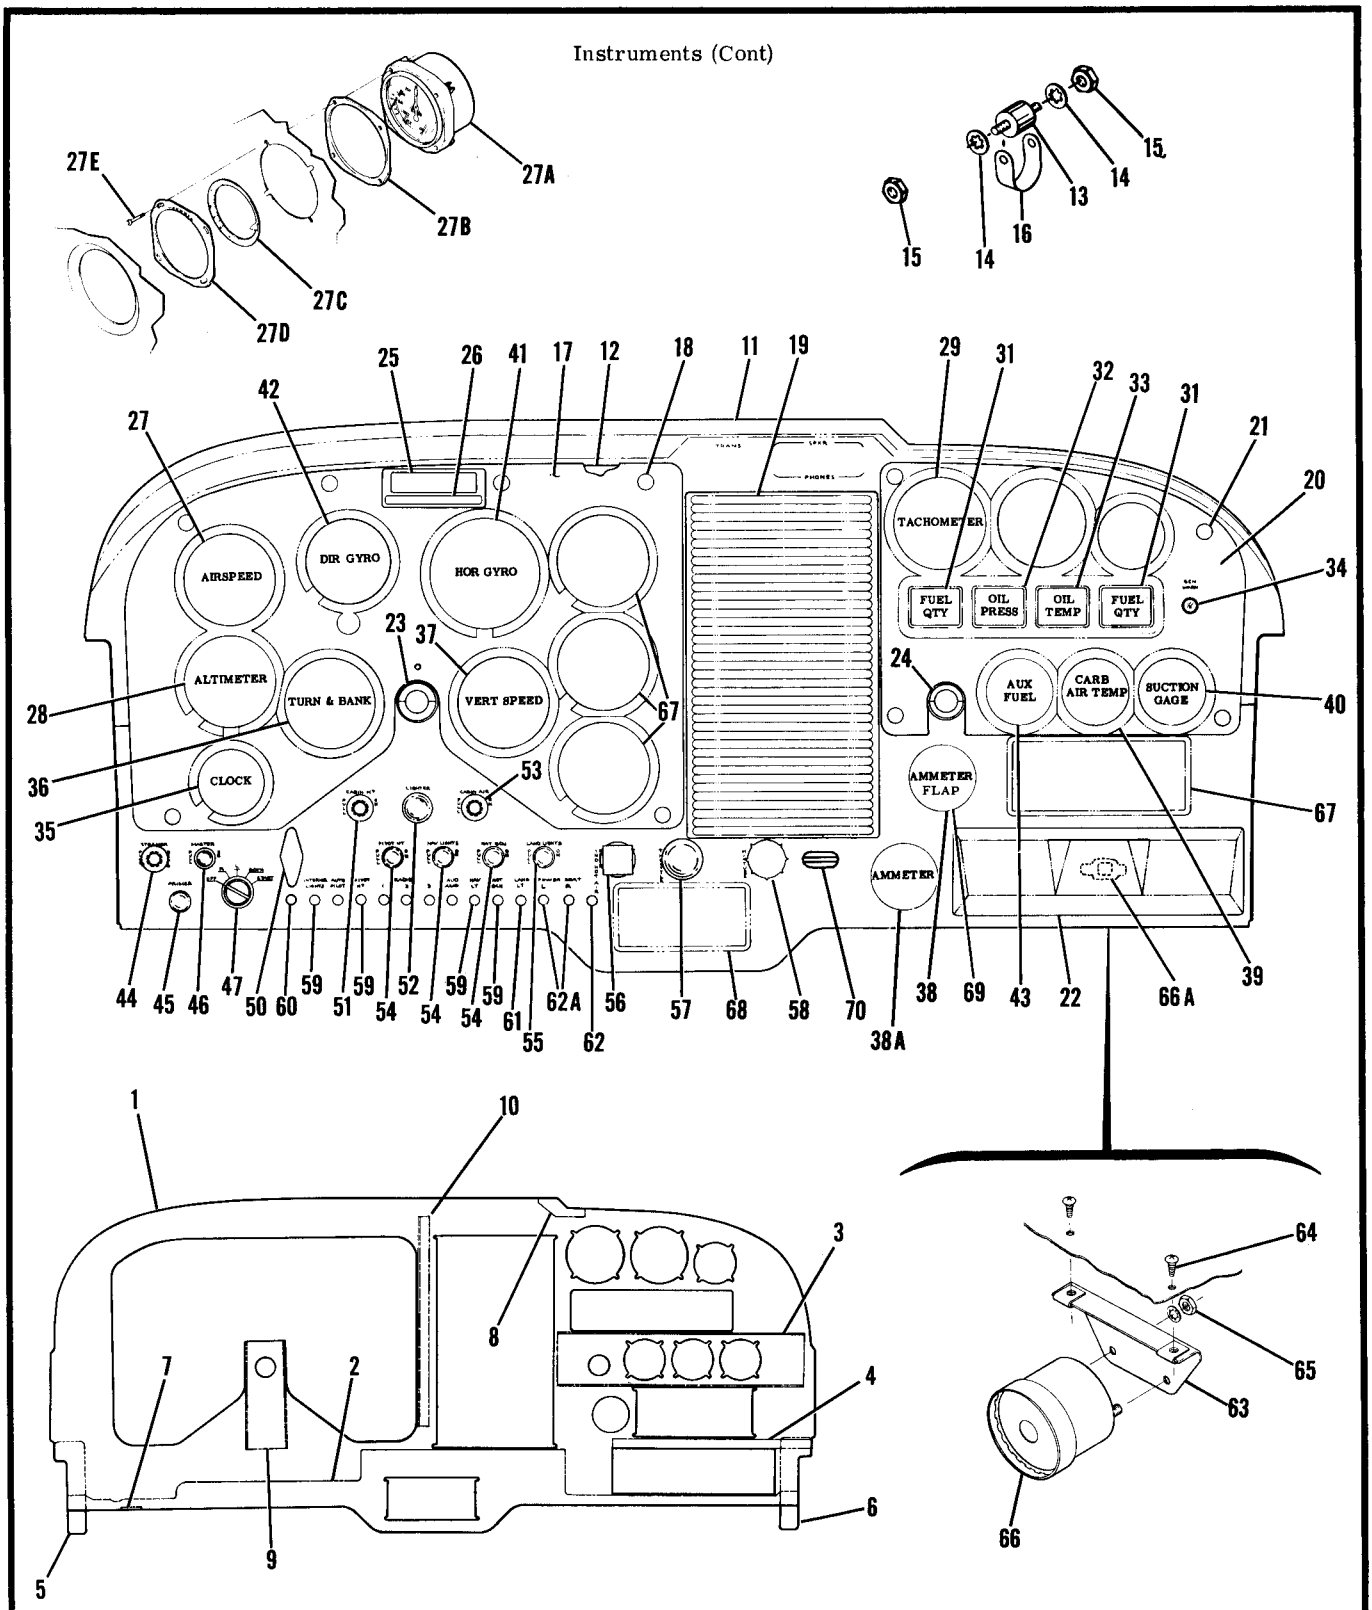

172 SERIAL 17250573 THRU 17254892

Figure 102. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
102 -		TRUE AIRSPEED INDICATOR INSTALLATION	NP	K
-27A	C661010-0102	INDICATOR-AIRSPEED	1	
-27B	0700162-6	SPACER	1	
-27C	0700189-4	RING ASSEMBLY-TRUE AIRSPEED WEU 0700189-6	1	
	0700189-6	RING ASSEMBLY-TRUE AIRSPEED	1	
-27D	0700162-1	RETAINER ASSEMBLY	1	
		ATTACHING PARTS		
-27E	AN515B6R16	SCREW	4	
		---*---		
-28	S1314N1	ALTIMETER 20000 FT FOR VFR APPLICATIONS ONLY	1	
		WHEN EXHAUSTED USE C661011-0105		
	S1313N1	ALTIMETER 35000 FT FOR VFR APPLICATIONS ONLY	1	
		WHEN EXHAUSTED USE C661011-0105		
	S1432N1	ALTIMETER 35000 FT FT & MILLIBARS FOR VFR	1	
		APPLICATIONS ONLY WHEN EXHAUSTED USE C661011-0106		
	C661011-0105	ALTIMETER 20000 FT FEET & INCHES	1	
	C661011-0106	ALTIMETER 20000 FT FEET & MILLIBARS	1	
		ATTACHING PARTS		
	AN515B6R16	SCREW	4	
		---*---		
-29	S1305-6	TACHOMETER	1	B
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	NAS43DD1-22	SPACER	4	
	AN936A6B	WASHER	8	
	AN340B6	NUT	4	
		---*---		
	S1605-3	SHAFT-TACHOMETER DRIVE	1	
-30		DELETED NEVER USED		
	0513144-13	PANEL ASSEMBLY-INSTRUMENT	1	J
	0513144-15	PANEL ASSEMBLY-INSTRUMENT USED WITH OIL COOLER	1	J
	0513144-18	PANEL ASSEMBLY-INSTRUMENT	1	K
		ATTACHING PARTS		
	AN515B6R8	SCREW	2	
	NAS43DD1-9	SPACER	2	
	AN936A6B	WASHER	2	
	AN340B6	NUT	2	
		---*---		
-31	0513144-14	GAGE-FUEL QUANTITY	2	
-32	0513144-8	GAGE-OIL PRESSURE	1	
-33	0513144-7	GAGE-OIL TEMPERATURE	1	J
	0513144-2	GAGE-OIL TEMPERATURE USED WITH OIL COOLER	1	J
	0513144-17	GAGE-OIL TEMP	1	K
	AN123862	O RING OIL TEMP	1	
-34	0513051-8	LIGHT-CHARGE INDICATOR	1	
-35	S1317N1	CLOCK-ELECTRIC	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
		---*---		
-36	S1302N1	INDICATOR-TURN & BANK	1	
	S1413N1	INDICATOR-TURN & BANK ALTERNATE	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	2	
		---*---		
-37	S1304N1	INDICATOR-VERTICAL SPEED	1	
	S1392N1	INDICATOR-VERTICAL SPEED ALTERNATE	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
		---*---		
-38	S1319-1	AMMETER	1	D
-38A	S1319-1	AMMETER	1	F
	S1320-1	AMMETER USED WITH ALTERNATOR ONLY	1	
-39	S1311-1	GAGE-CARBURETOR AIR TEMPERATURE	1	B
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	B
	AN936A6B	WASHER	4	B
	AN340B6	NUT	4	B
		---*---		
	0550209-1	PROBE	1	B
-40	S1414N1	SUCTION GAGE WEU C668540-0101	1	
	C668540-0101	SUCTION GAGE	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	NAS395-6-3	NUT	4	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
102 -41	S1309N1		GYRO-HORIZON REMANUFACTURED WHEN EXHAUSTED ---------- USE C661001-0101	1	D
	S1326N1		INDICATOR-GYRO HORIZON TYPE 348 USED WITH ---------- VACUUM WARNING LIGHTS WHEN EXHAUSTED SEE FIG 87A	1	D
	C661001-0101		GYRO-HORIZON REMFD WHEN EXHAUSTED SEE FIG 87A --------	1	N
	C661001-0201		GYRO-HORIZON NEW ----------	1	M
	30475-0000		GYRO-HORIZON ARC ----------	1	F
-42	S1316N1		GYRO-DIRECTIONAL REMANUFACTURED WHEN EXHAUSTED ------- USE C661002-0101	1	D
	S1327N1		INDICATOR-DIRECTIONAL GYRO TYPE 348 USED WITH -------- VACUUM WARNING LIGHTS WHEN EXHAUSTED SEE FIG 87A	1	D
	C661002-0101		GYRO-DIRECTIONAL REMFD WHEN EXHAUSTED SEE FIG 87A ----	1	N
	C661002-0201		GYRO-DIRECTIONAL NEW ----------	1	M
	30370-0100		GYRO-DIRECTIONAL ARC ---------- ATTACHING PARTS	1	F
	AN520B10R14		SCREW ----------	4	
	AN515B6R12		SCREW ---------- ---*---	4	M
-43	782-5		GAGE-AUXILIARY FUEL JAVE ----------	1	
-44	S1239-16		CONTROL ASSEMBLY-STRAINER ----------	1	R
	S1239-20		CONTROL ASSEMBLY-STRAINER ----------	1	S
-45	0311538-12		PRIMER ASSEMBLY ----------	1	
	S1240-5		KNOB-PRIMER ----------	1	
-46	0713026-5		SWITCH-MASTER ----------	1	
	S1416-1		KNOB-MASTER SWITCH ----------	1	
	0513357-1		INSULATOR ----------	1	
-47	0311038-2		SWITCH-IGNITION STD 172 ONLY WHEN EXHAUSTED ---------- USE C292501-0203	1	B
	C292501-0203	*	KIT-IGNITION SWITCH STANDARD 172 ----------	1	B
	0713129-4	*	KIT-IGNITION SWITCH WHEN EXHAUSTED USE C292501-0102 ------	1	C
	C292501-0102	*	KIT-IGNITION SWITCH WHEN EXHAUSTED USE C292501-0104 ------	1	C
	0713221-1		COVER ASSEMBLY-SWITCH ----------	1	
-48			DELETED-NEVER USED ----------		
-49			DELETED-NEVER USED ----------		
	0713303-2		KNOB-SWITCH ----------	1	
-50	0513187-5		CONTROL ASSEMBLY-STARTER STANDARD 172 ONLY ----------	1	B
-51	S1239-15		CONTROL ASSEMBLY-CABIN HEAT ----------	1	
-52	0513039-7		LIGHTER ASSEMBLY-CIGAR CUNO ----------	1	
	L4858-1		PLUG-HEATING CUNO ----------	1	
	S1240-6		KNOB-CIGAR LIGHTER ----------	1	
-53	S1239-15		CONTROL ASSEMBLY-CABIN AIR ----------	1	
-54	0713026-4		SWITCH ----------	3	
-55	0713035		SWITCH-LANDING LIGHT ----------	1	
	0713303-2		KNOB-SWITCH ----------	4	
-56	S1224-4		CONTROL ASSEMBLY-CARBURETOR HEAT ----------	1	J
	S1230-7		CONTROL ASSEMBLY-CARBURETOR HEAT ----------	1	K
-57	S1222-7		CONTROL ASSEMBLY-THROTTLE ----------	1	B
	L213646-2		WASHER BETWEEN ROYALITE & CONTROL ----------	1	
-58	S1231-2		CONTROL ASSEMBLY-MIXTURE ----------	1	B
	0513173-1		CONTROL LOCK ----------	1	B
-59	S1360-10		CIRCUIT BREAKER ----------	4	
-60	S1360-15		CIRCUIT BREAKER ----------	1	
-61	S1360-20		CIRCUIT BREAKER ----------	1	
-62	S1360-20		CIRCUIT BREAKER ----------	1	B
-62A	S1360-20		CIRCUIT BREAKER ----------	2	H
-63	0713738-3		BRACKET ASSEMBLY-STALL WARNING HORN ---------- ATTACHING PARTS	1	
-64	S1021Z8-6		SCREW ---------- ---*---	2	
-65	NAS395-12-3		NUT ----------	2	
-66	S1407-6		HORN ASSEMBLY-STALL WARNING ----------	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
102 -66A	CA-2	CIRCUIT BREAKER SPT	1	
-67		RADIO INSTALLATIONS-SEE ELECTRONICS MANUAL	AR	
-68		NAV-O-MATIC INSTALLATION-SEE ELECTRONICS MANUAL	AR	
-69	C668001-0103 **	INDICATOR-FLAP	1	
	S1558-1	BRACKET-FLAP INDICATOR	1	K
-70	0760632-1	SWITCH ASSEMBLY-FLAP	1	P
	S1661-1	SWITCH ASSEMBLY-FLAP	1	Q
	0813526-6	KNOB-FLAP SWITCH	1	F
	S1216-4	NUT-FLAP SWITCH	1	F


NOTE *THIS KIT ALSO INCLUDES TWO DOOR LOCK & KEYS

NOTE. □THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

NOTE. **WHEN C668001-0103 INDICATOR IS USED ON AIRPLANES PRIOR TO SERIAL 17253393 OR F172-0180 THE C590501-0101 TRANSMITTER MUST BE USED.

A---172 SERIAL 17250573 THRU 17254892
172 SKYHAWK SERIAL 17250573 THRU 17254892
F172 SERIAL F172-0019 THRU F172-0319
B---172 SERIAL 17250573 THRU 17254892
F172 SERIAL F172-0019 THRU F172-0319
C---172 SKYHAWK SERIAL 17250573 THRU 17254892
F172 SERIAL F172-0019 THRU F172-0319
D---172 SERIAL 17250573 THRU 17251822
F172 SERIAL F172-0019 THRU F172-0085
E---172 SKYHAWK SERIAL 17250573 THRU 17251822
F172 SERIAL F172-0019 THRU F172-0085
F---172 SERIAL 17251823 THRU 17254892
F172 SERIAL F172-0086 THRU F172-0319
G---172 SKYHAWK SERIAL 17251823 THRU 17254892
F172 SERIAL F172-0086 THRU F172-0319
H---172 SERIAL 17251196 THRU 17254892
F172 SERIAL F172-0051 THRU F172-0319
J---172 SERIAL 17250573 THRU 17253392
F172 SERIAL F172-0019 THRU F172-0179
K---172 SERIAL 17253393 THRU 17254892
F172 SERIAL F172-0180 THRU F172-0319
L---172 SERIAL 17250573 THRU 17252758
172 SERIAL 17252902 THRU 17254892
F172 SERIAL F172-0019 THRU F172-0319
M---172 SERIAL 17252759 THRU 17252901
N---172 SERIAL 17251823 THRU 17252758
172 SERIAL 17252902 THRU 17254892
F172 SERIAL F172-0086 THRU F172-0319
P---172 SERIAL 17251823 THRU 17254274
F172 SERIAL F172-0086 THRU F172-0319
Q---172 SERIAL 17254275 THRU 17254892
F172 SERIAL F172-0320 THRU F172-0319
R---172 SERIAL 17250573 THRU 17252533
F172 SERIAL F172-0019 THRU F172-0139
S---172 SERIAL 17252534 THRU 17254892
F172 SERIAL F172-0140 THRU F172-0319

Instruments (Cont)

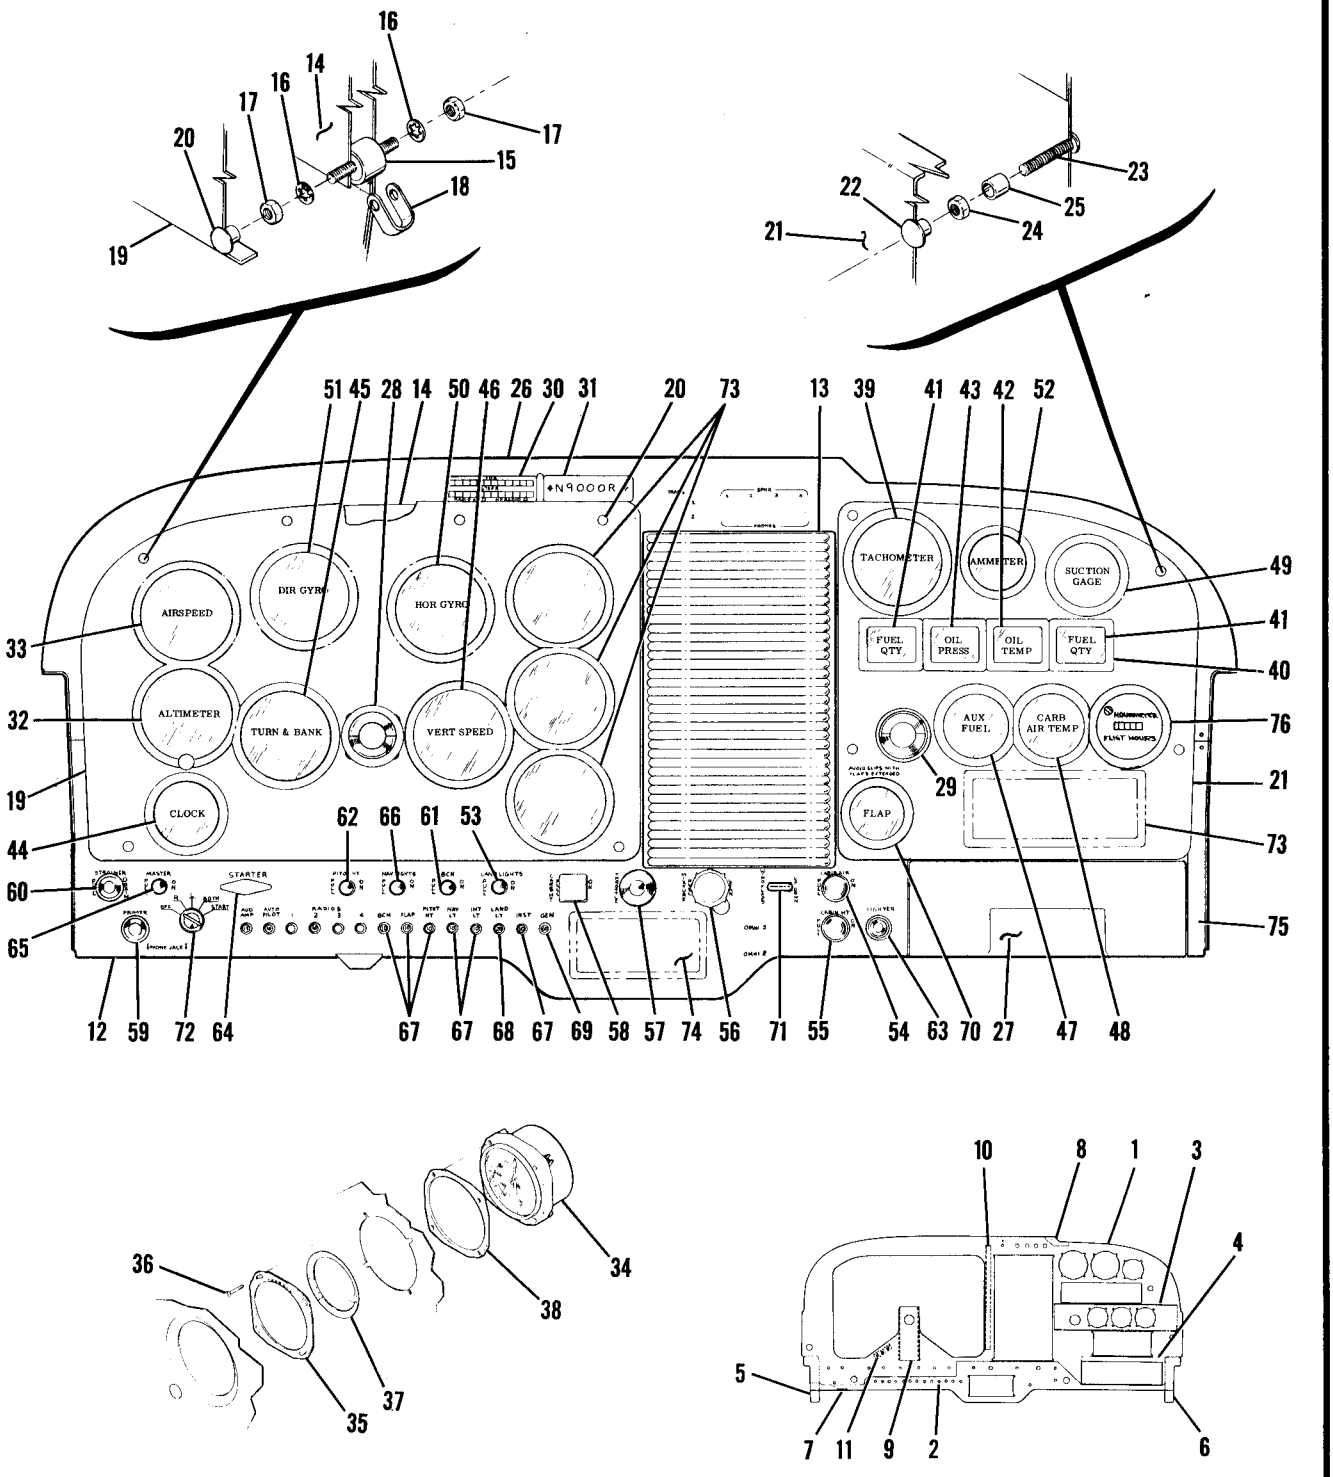

172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F172-0559

Figure 103. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
103 -			INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
- 1	0513316-202		PANEL ASSEMBLY-STATIONARY	1	
- 2	0513316-19		STIFFENER-INSTRUMENT PANEL	1	
- 3	0513316-5		STIFFENER-INSTRUMENT PANEL	1	
- 4	0513316-6		ANGLE-INSTRUMENT PANEL	1	
- 5	0513316-7		SUPPORT-LH	1	
- 6	0513316-8		SUPPORT-RH	1	
- 7	0513316-9		MOUNT PLATE	1	
- 8	0513316-10		GUSSET	1	
- 9	0513316-11		CHANNEL-CONTROL SUPPORT	1	
-10	0513316-12		ANGLE	1	
-11	0713856-2		SUPPORT ASSEMBLY-DIODE BOARD	1	
-12	0513390-1	¤	COVER ASSEMBLY-STATIONARY PANEL LWR SKYHAWK	1	
	0513390-6	¤	COVER ASSEMBLY-STATIONARY PANEL LWR STANDARD 172	1	
-13	0513319-5	¤	COVER-RADIO	1	
-14	0513316-16		SHOCK PANEL	1	
			ATTACHING PARTS		
-15	0411059-3		MOUNT-SHOCK MAXIMUM QUAN 6	4	
-16	AN936A8		WASHER	8	
-17	AN340B8		NUT	8	
-18	0413247		STRAP-GROUND	1	
			---*---		
-19	0513390-11		COVER-SHOCK PANEL	1	
			ATTACHING PARTS		
-20	0513351-1		SCREW POST	4	
			---*---		
-21	0513390-9	¤	COVER-ENGINE INSTRUMENT	1	
			ATTACHING PARTS		
-22	0513351-1		SCREW POST	4	
-23	AN515-8R10		SCREW	4	
-24	AN340B8		NUT	4	
-25	NAS430D3-24		SPACER	4	
			---*---		
-26	0513390-10	¤	COVER ASSEMBLY-STATIONARY PANEL UPPER	1	
			ATTACHING PARTS		
	0513393-1		RETAINER	1	
	S1023A6-10B		SCREW	6	
	S1067B1		WASHER	6	
			---*---		
-27	SEE FIG 107		MAP BOX & DOOR INSTALLATION	1	
-28	0513311-1		SUPPORT ASSEMBLY-CONTROL LH	1	
-29	0513311-2		SUPPORT ASSEMBLY-CONTROL RH	1	
			ATTACHING PARTS		
	AN515B6R8		SCREW LH	4	
	AN340B6		NUT LH	4	
	AN515B6R8		SCREW RH	4	
	MS21044N06		NUT RH	4	
			---*---		
	0513056-3		GROMMET	2	
-30	0400210-1		PLACARD-COMPASS CORRECTION	1	
-31			PLACARD-CALL NUMBERS	NP	
-32	C661011-0105		ALTIMETER-SENSITIVE 20000 FT FEET & INCHES	1	B
	C661011-0106		ALTIMETER-SENSITIVE 20000 FT FEET & MILLIBARS	1	C
	C661012-0101		ALTIMETER	1	B
	S1314N1		ALTIMETER ALTERNATE	1	B
			ATTACHING PARTS		
	AN515B6R16		SCREW	4	
			---*---		
-33	S1470N9		INDICATOR-AIR SPEED	1	
			ATTACHING PARTS		
	AN515B6R16		SCREW	4	
			---*---		
			TRUE AIRSPEED INDICATOR INSTALLATION	NP	
-34	C661010-0102		INDICATOR-AIRSPEED	1	
-35	0700162-1		RETAINER ASSEMBLY	1	
			ATTACHING PARTS		
-36	AN515B6R16		SCREW	4	
			---*---		
-37	0700189-4		RING ASSEMBLY-TRUE AIRSPEED WEU 0700189-6	1	
	0700189-6		RING ASSEMBLY-TRUE AIRSPEED	1	
-38	0700162-6		SPACER	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
103 -39	S1305-6	TACHOMETER	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	AN936A6B	WASHER	4	
	NAS43DD1-14	SPACER	4	
	NAS395-2-3	NUT	4	
		---*---		
	S1605-3	SHAFT-TACHOMETER DRIVE	1	
-40	0513144-18	PANEL ASSEMBLY-INSTRUMENT GAGES	1	
		ATTACHING PARTS		
	AN515B6R8	SCREW	2	
	NAS43DD1-9	SPACER	2	
	0513250-1	RETAINER	2	
	AN340B6	NUT	2	
	AN936A6B	WASHER	2	
		---*---		
-41	G441226	GAGE-FUEL	2	
-42	G442754P	GAGE-OIL TEMPERATURE	1	
-43	G444541	GAGE-OIL PRESSURE	1	
	0500118-96	TUBE ASSEMBLY-OIL PRESSURE GAGE TO FIREWALL	1	
-44	S1317N1	CLOCK-ELECTRIC	1	
		ATTACHING PARTS		
	AN515B6R	SCREW	3	
		---*---		
-45	S1413N1	INDICATOR-TURN & BANK	1	
	S1302N1	INDICATOR-TURN & BANK ALTERNATE	1	
	C661003-0201	TURN COORDINATOR	1	G
		ATTACHING PARTS		
	AN515B6R-12	SCREW	3	
		---*---		
-46	S1304N1	INDICATOR-VERTICAL SPEED	1	
	S1392N2	INDICATOR-VERTICAL SPEED ALTERNATE	1	
		ATTACHING PARTS		
	AN515B6R16	SCREW	4	
		---*---		
-47	782-5	GAGE-AUXILLARY FUEL JAV	1	
-48	S1311-1	GAGE-CARBURETOR AIR TEMPERATURE	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	A880-6Z3	NUT TIN	4	
		---*---		
-49	S1414-1	GAGE-SUCTION WEU C668540-0101	1	
	C668540-0101	GAGE-SUCTION	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	NAS395-6-3	NUT	4	
		---*---		
-50	C661001-0201	GYRO-HORIZON NEW	1	
-51	C661002-0201	GYRO-DIRECTIONAL NEW	1	
		ATTACHING PARTS		
	AN515B6R6	SCREW	4	
		---*---		
-52	S1320-1	AMMETER ASSEMBLY	1	
		ATTACHING PARTS		
	0513392	ADAPTER-AMMETER	1	
	AN515B8R4	SCREW	4	
	MS21044N08	NUT	4	
		---*---		
-53	0713035	SWITCH-LANDING LIGHT	1	
	0713303-2	KNOB-LANDING LIGHT SWITCH	1	
-54	S1239-37	CONTROL-CABIN AIR	1	
-55	S1239-36	CONTROL-CABIN HEAT	1	
-56	S1231-2	CONTROL-MIXTURE	1	
	0513173-1	LOCK-MIXTURE CONTROL	1	
-57	S1222-15	CONTROL-THROTTLE	1	
	1213646-2	WASHER THROTTLE CONTROL	1	
-58	S1230-7	CONTROL-CARBURETOR HEAT	1	
-59	C291502-0102	PRIMER ASSEMBLY	1	
	S1240-5	KNOB-PRIMER	1	
-60	S1239-20	CONTROL-STRAINER DRAIN	1	
-61	0713026-4	SWITCH-FLASHING BEACON	1	
	S1416-1	KNOB-BEACON SWITCH	1	

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
103 -62	0713026-4		SWITCH-PITOT HEAT	1	
	0713303-2		KNOB-PITOT HEAT SWITCH	1	
-63	0513039-7		LIGHTER ASSEMBLY-CIGAR	1	
	L4858-1		ELEMENT ASSEMBLY CUNO	1	
	S1752-2		KNOB-CIGAR LIGHTER	1	
	60232-1		CIRCUIT BREAKER-CIGAR LIGHTER CUNO	1	
-64	0513187-5		CONTROL-STARTER STANDARD 172 ONLY	1	
	0513142-11		KNOB-STARTER CONTROL STANDARD 172 ONLY	1	
-65	0713026-5		SWITCH-MASTER	1	
	0713303-2		KNOB-MASTER SWITCH	1	
-66	0713026-4		SWITCH-NAVIGATION LIGHT	1	
	S1760-1		KNOB-NAVIGATION LIGHT SWITCH	1	
-67	S1360-10		CIRCUIT BREAKER 10 AMP	6	
-68	S1360-20		CIRCUIT BREAKER 20 AMP	1	
-69	S1596-60		CIRCUIT BREAKER 60 AMP	1	D
	S1707-60		CIRCUIT BREAKER 60 AMP	1	E
	0470102-1		BUSHING	1	E
-70	C668001-0103		INDICATOR-FLAP	1	
	S1558-1		BRACKET-FLAP INDICATOR	1	
-71	S1661-1		SWITCH ASSEMBLY-FLAP	1	
	0813526-6		KNOB-FLAP SWITCH	1	
	S1216-4		NUT-FLAP SWITCH	1	
-72	C292501-0203	*	KIT-IGNITION SWITCH STD 172 WEU C292501-0104	1	
	C292501-0102	*	KIT-IGNITION SWITCH SKYHAWK	1	
	0713221-1		COVER ASSEMBLY-SWITCH	1	
-73			RADIO INSTALLATION SEE ELECTRONICS MANUAL	NP	
-74			NAV-O-MATIC INSTALLATION SEE ELECTRONICS MANUAL	NP	
-75	0513390-22		COVER-LOWER RH	1	
-76	C664501-0101		HOURMETER	1	F
			ATTACHING PARTS		
	AN960-6		WASHER	8	
	AN515-6R6		SCREW	4	
	MS21044N06		NUT	4	
			---*---		

NOTE. *THIS KIT ALSO INCLUDES TWO DOOR LOCKS & KEYS


NOTE □THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

A---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F172-0559
B---172 SERIAL 17254893 THRU 17256512
C---F172 SERIAL F172-0320 THRU F172-0559
D---172 SERIAL 17254893 THRU 17255270
F172 SERIAL F172-0320 THRU F172-0419
E---172 SERIAL 17255271 THRU 17256512
F172 SERIAL F172-0420 THRU F172-0559
F---172 SERIAL 17256335 THRU 17256512
F172 SERIAL F172-0480 THRU F172-0559
G---F172 SERIAL F172-0432 THRU F172-0435, F172-0443, F172-0447 THRU F172-0559

Instrument (Cont)

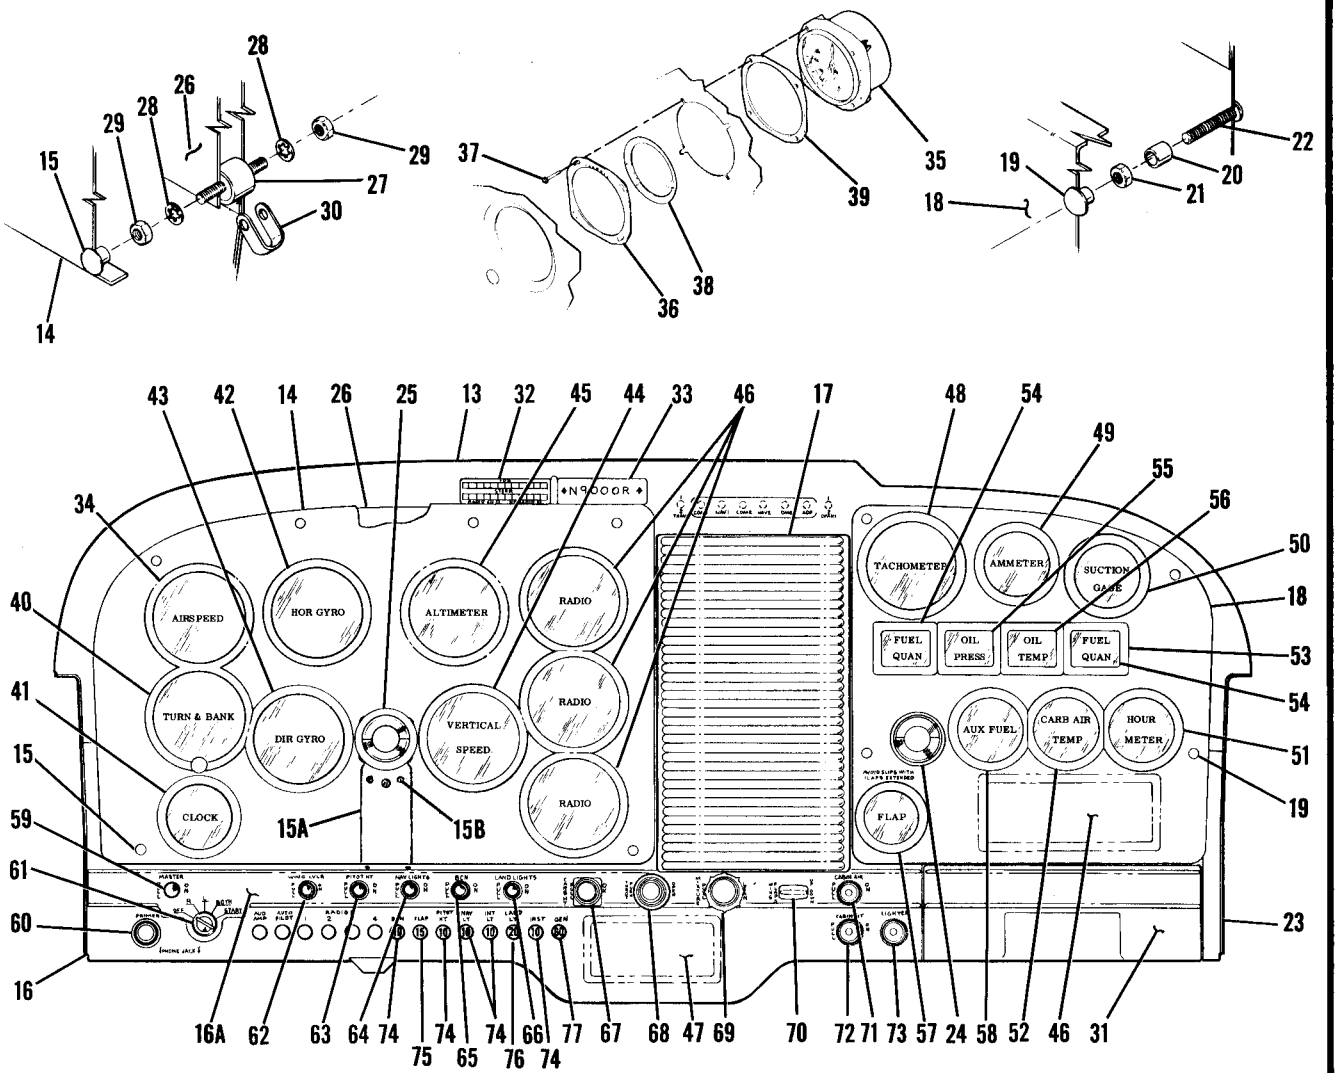

17256513 Thru 17258486
F172-0560 Thru F17200680

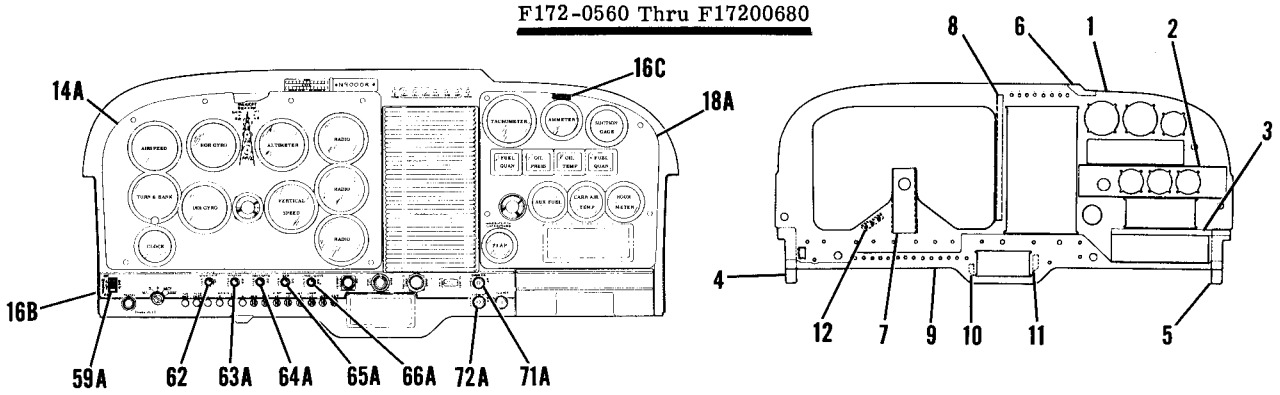

17258487 THRU 17263458
F17200680 THRU F17201234

172 SERIAL 17256513 THRU 17259223
F172 SERIAL F172-0560 THRU F17200754

Figure 104. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
104 -			INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
- 1	0513316-203		PANEL ASSEMBLY-STATIONARY WHEN EXHAUSTED USE 0513316-204	1	E
	0513316-204		PANEL ASSEMBLY-STATIONARY	1	F
- 2	0513316-5		STIFFENER	1	
- 3	0513316-6		ANGLE	1	
- 4	0513316-7		SUPPORT-LH	1	
- 5	0513316-8		SUPPORT-RH	1	
- 6	0513316-10		GUSSET	1	
- 7	0513316-11		CHANNEL-CONTROL SUPPORT	1	
- 8	0513316-12		ANGLE	1	
- 9	0513316-19		STIFFENER-LOWER PANEL	1	
-10	0513368-7		ANGLE-LH	1	
-11	0513368-8		ANGLE-RH	1	
-12	0713856-3		SUPPORT ASSEMBLY	1	
-13	0513242-10	□	COVER ASSEMBLY-STATIONARY PANEL UPPER	1	
			ATTACHING PARTS		
	0513393-1		RETAINER-UPPER PANEL COVER	1	
	S1023A6-10B		SCREW	6	
	S106781		WASHER	6	
			---*---		
-14	0513242-18	□	COVER ASSEMBLY-SHOCK PANEL	1	E
			ATTACHING PARTS		
-14A	0513242-26	□	COVER ASSEMBLY-SHOCK PANEL	1	F
	0513242-27		COVER-SHOCK PANEL USE WITH NARCO MK12B W/VOA-50M	1	F
-15	0513351-1		SCREW POST	4	
			---*---		
-15A	0513062-1	□	SPLICE PLATE	1	
	0513062-2	□	SPLICE PLATE USED WITH MAP LIGHT INSTALLATION	1	
			ATTACHING PARTS		
-15B	S1021Z6-8B		SCREW	4	
	NAS395-4-3		NUT	4	
			---*---		
-16	0513390-25	□	COVER ASSEMBLY-STATIONARY PANEL LOWER	1	B
	0513390-27	□	COVER ASSEMBLY-STATIONARY PANEL LOWER	1	G
	0513390-31	□	COVER ASSEMBLY-STATIONARY PANEL LOWER	1	F
-16A	0505002-1		PLACARD ASSEMBLY-LOWER PANEL	1	B
	0513061-3		PLACARD ASSEMBLY-LOWER PANEL	1	G
-16B	0513061-4		PLACARD-LOWER PANEL	1	F
-16C	0505020-2		PLACARD-MASTER SWITCH	1	
-17	0513319-5	□	COVER-RADIO	1	
-18	0513390-9	□	COVER-ENGINE INSTRUMENTS	1	
			ATTACHING PARTS		
-19	0513351-1		SCREW POST	4	G
	0513351-2		SCREW POST	4	F
-20	NAS430D3-24		SPACER	4	
-21	AN3408B		NUT	4	
-22	AN515-8R10		SCREW	4	
			---*---		
-23	0513390-22	□	COVER-LOWER RH	1	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	3	
			---*---		
-24	0513311-2		SUPPORT ASSEMBLY-CONTROL RH	1	
-25	0513311-1		SUPPORT ASSEMBLY-CONTROL LH	1	
			ATTACHING PARTS		
	AN515B6R8		SCREW	4	
	MS21044N06		NUT RH ONLY	4	
	AN340B6		NUT LH ONLY	4	
			---*---		
	0513056-3		GROMMET	2	
-26	0513241-9		SHOCK PANEL	1	
			ATTACHING PARTS		
-27	0411059-1		MOUNT-SHOCK	4	
-28	AN936A8		WASHER	8	
-29	AN340B8		NUT	8	
-30	0413247		STRAP-GROUND	1	
			---*---		
-31	SEE FIG 107		MAP BOX & DOOR INSTALLATION	1	
-32	0400210-1		PLACARD-COMPASS CORRECTION	1	
-33			PLACARD-CALL NUMBERS	NP	
-34	S1470N9		INDICATOR-AIR SPEED	1	
			ATTACHING PARTS		
	AN515B6R16		SCREW	4	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
104 -		TRUE AIRSPEED INDICATOR INSTALLATION	NP	
-35	C661010-0102	INDICATOR-AIRSPEED	1	
-36	0700162-1	RETAINER ASSEMBLY	1	
		ATTACHING PARTS		
-37	AN515B6R16	SCREW	4	
		---*---		
-38	0700189-4	RING ASSEMBLY-TRUE AIRSPEED	1	
-39	0700162-6	SPACER	1	
-40	S1302N1	INDICATOR-TURN & BANK	1	
	S1413N1	INDICATOR-TURN & BANK ALT	1	
	C661003-0501	TURN COORDINATOR	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	2	
		---*---		
	35060-0014	TURN COORDINATOR ARC NAV-O-MATIC	1	
		ATTACHING PARTS		
	AN515-6R14	SCREW	4	
	MS21044N06	NUT	4	
		---*---		
	2904-1	TURN COORDINATOR BTID WING LEVELER	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	3	
	AN340B6	NUT	3	
	AN936A6B	WASHER	3	
		---*---		
-41	S1317N2	CLOCK-ELECTRIC	1	
		ATTACHING PARTS		
	AN515B6R10	SCREW	3	
		---*---		
-42	C661001-0501	GYRO-HORIZON	1	
	C661001-0502	GYRO-HORIZON ALT	1	
	C661001-0503	GYRO-HORIZON ALT	1	
	C661001-0504	GYRO-HORIZON ALT	1	
		ATTACHING PARTS		
	AN515B6R6	SCREW	4	
		---*---		
	37570-0001	GYRO-HORIZON ARC NAV-O-MATIC	1	
		ATTACHING PARTS		
	AN5156R10	SCREW	3	
		---*---		
-43	C661002-0501	GYRO-DIRECTIONAL	1	
	C661002-0301	GYRO-DIRECTIONAL ALT	1	
	C661002-0503	GYRO-DIRECTIONAL ALT	1	
	C661002-0504	GYRO-DIRECTIONAL ALT	1	
		ATTACHING PARTS		
	AN515B6R6	SCREW	4	
		---*---		
	30370-0100	GYRO-DIRECTIONAL ARC NAV-O-MATIC	1	
		ATTACHING PARTS		
	AN515-6R10	SCREW	3	
		---*---		
-44	S1304N1	INDICATOR-VERTICAL SPEED	1	
	S1392N2	INDICATOR-VERTICAL SPEED ALT	1	
		ATTACHING PARTS		
	AN515B6R16	SCREW	4	
		---*---		
-45	C661012-0101	ALTIMETER	1	A
	S1314N1	ALTIMETER ALTERNATE	1	A
	C661011-0105	ALTIMETER-SENSITIVE FEET & INCHES	1	A
	C661011-0106	ALTIMETER-SENSITIVE FEET & MILLIBARS	1	D
		ATTACHING PARTS		
	AN515B6R16	SCREW	4	
		---*---		
-46		RADIO INSTALLATION SEE CESSNA ELECTRONICS MANUAL	NP	
-47		NAV-O-MATIC INSTALLATION SEE CESSNA ELECTRONICS MANUAL	NP	
-48	S1305N6	TACHOMETER	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	AN936A6B	WASHER	4	
	NAS43DD1-14	SPACER	4	
	MS21044N06	NUT	4	
		---*---		

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
104 -	S1605-8		SHAFT-TACHOMETER DRIVE	1	
-49	S1320-1		AMMETER	1	
			ATTACHING PARTS		
	0513392-1		ADAPTER-AMMETER GAGE	1	
	AN515B8R4		SCREW	4	
	MS21044N08		NUT	4	
			---*---		
-50	S1414-1		GAGE-SUCTION WEU C668540-0101	1	
	C668540-0101		GAGE-SUCTION	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
			---*---		
-51	C664501-0101		GAGE-HOURMETER	1	
			ATTACHING PARTS		
	AN515-6R6		SCREW	4	
	AN960-6		WASHER	8	
	MS21044N06		NUT	4	
			---*---		
-52	S1311N1		GAGE-CARBURETOR AIR TEMPERATURE	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
	AN340B6		NUT	4	
			---*---		
-53	C669507-0101		INSTRUMENT CLUSTER	1	H
	C669507-0102		INSTRUMENT CLUSTER	1	D
			ATTACHING PARTS		
	0513250-1		RETAINER	2	
	AN515B6R8		SCREW	2	
	NAS43DD1-9		SPACER	2	
	AN936A6B		WASHER	4	
	AN340B6		NUT	2	
			---*---		
-54	441361		GAGE-FUEL SW	2	
-55	444649		GAGE-OIL PRESS SW	1	
-56	442818		GAGE-OIL TEMPERATURE SW	1	
	426537		LENS-INSTRUMENT CLUSTER SW	1	
	0500118-96		TUBE ASSEMBLY-OIL PRESSURE GAGE TO FIREWALL	1	
-57	C668001-0103		INDICATOR-FLAP	1	
	0513392-3		SPACER	1	
	S1558-1		BRACKET ASSEMBLY	1	
-58	782-5		GAGE-AUXILIARY FUEL JAV	1	
-59	0713026-5		SWITCH-MASTER	1	
	S1760-3		KNOB-MASTER SWITCH	1	
	0770719-1		DIODE ASSEMBLY MASTER SWITCH	1	B
	0770719-2		DIODE ASSEMBLY MASTER SWITCH	1	C
-59A	S1994-1-1		SWITCH-MASTER	1	F
	0770719-2		DIODE MASTER SWITCH	1	F
-60	C291502-0102		PRIMER ASSEMBLY WHEN EXHAUSTED USE C291502-0101	1	G
	S1752-1		KNOB-PRIMER	1	
	C291502-0101		PRIMER ASSEMBLY	1	E
	S1752-1		KNOB-PRIMER	1	E
	C291502-0103		PRIMER ASSEMBLY	1	F
	S1974-1		KNOB-PRIMER	1	F
-61	C292501-0102	*	KIT-IGNITION SWITCH WEU C292501-0104	1	
-62	SEE FIG 151		WING LEVELER INSTALLATION	1	
-63	0713026-4		SWITCH-PITOT HEAT	1	
	S1760-1		KNOB-PITOT SWITCH	1	E
-63A	S1981-1		KNOB ASSEMBLY-PITOT SWITCH	1	F
-64	0713026-4		SWITCH-NAVIGATION LIGHT	1	
	S1760-1		KNOB-NAVIGATION SWITCH	1	E
-64A	S1981-1		KNOB ASSEMBLY-NAVIGATION SWITCH	1	F
-65	0713026-4		SWITCH-BEACON LIGHT	1	
	S1760-1		KNOB-BEACON SWITCH	1	E
-65A	S1981-1		KNOB ASSEMBLY-BEACON SWITCH	1	F
-66	0713035-1		SWITCH-LANDLIGHTS	1	
	S1760-1		KNOB-LANDLIGHTS SWITCH	1	E
-66A	S1981-1		KNOB ASSEMBLY-LANDING LIGHT SWITCH	1	F
-67	S1230-15		CONTROL-CARBURETOR HEAT	1	A
	S1230-17		CONTROL-CARBURETOR HEAT	1	D
-68	S1222-20		CONTROL-THROTTLE WEU S1222-20A	1	J
	S1222-20A		CONTROL-THROTTLE WEU C299505-0102	1	K
	C299505-0102		CONTROL-THROTTLE	1	K
	S1222-21		CONTROL-THROTTLE WEU C299505-0203	1	D
	C299505-0203		CONTROL-THROTTLE	1	D
	1213646-2		WASHER	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
104 -69	S1777-3	CONTROL-MIXTURE	1	A
	S1777-4	CONTROL-MIXTURE	1	D
-70	S1661-1	SWITCH-FLAP	1	
	S1771-1	KNOB-FLAP SWITCH	1	
	S1216-4	NUT-FLAP SWITCH	1	
-71	S1239-37	CONTROL ASSEMBLY-CABIN AIR	1	E
-71A	S1239-47	CONTROL ASSEMBLY-CABIN AIR	1	F
-72	S1239-36	CONTROL ASSEMBLY-CABIN HEAT	1	E
-72A	S1239-48	CONTROL ASSEMBLY-CABIN HEAT	1	F
-73	0513039-7	LIGHTER ASSEMBLY-CIGAR	1	
	L4858-1	ELEMENT ASSEMBLY CUNO	1	
	S1752-2	KNOB-CIGAR LIGHTER	1	E
	S1982-1	KNOB-CIGAR LIGHTER	1	F
	60232-1	CIRCUIT BREAKER-CIGAR LIGHTER	1	
-74	S1360-10	CIRCUIT BREAKER 10 AMP	5	
-75	S1360-15	CIRCUIT BREAKER 15 AMP	1	
-76	S1360-20	CIRCUIT BREAKER 20 AMP	1	
-77	S1596-60	CIRCUIT BREAKER 60 AMP	1	
		NOTE. □THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.		
		NOTE. *THIS KIT ALSO INCLUDES TWO DOOR LOCKS & KEYS		
		A---172 SERIAL 17256513 THRU 17259223 F172 SERIAL F172-0560 THRU F17200754 B---172 SERIAL 17256513 THRU 17257161 C---172 SERIAL 17257162 THRU 17259223 F172 SERIAL F172-0560 THRU F17200754 D---F172 SERIAL F172-0560 THRU F17200754 E---172 SERIAL 17256513 THRU 17258486 F172 SERIAL F172-0560 THRU F172-0654 F---172 SERIAL 17258487 THRU 17259223 F172 SERIAL F17200655 THRU F17200754 G---172 SERIAL 17257162 THRU 17258486 F172 SERIAL F172-0560 THRU F172-0654 H---172 SERIAL 17256513 THRU 17259223 J---172 SERIAL 17256513 THRU 17258534 K---172 SERIAL 17258535 THRU 17259223		

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
105 -			INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
- 1	0513070-200		PANEL ASSEMBLY-STATIONARY	1	D
			PANEL ASSEMBLY-STATIONARY	NP	E
- 2	0513068-1		SUPPORT-LH	1	
- 3	0513068-2		SUPPORT-RH	1	
- 4	0513069-1		STIFFENER ASSEMBLY	1	D
	0513069-3		STIFFENER ASSEMBLY	1	E
- 5	NAS680A3		NUTPLATE	1	
- 6	NAS680A08		NUTPLATE	7	
- 7	0513067-1		SUPPORT-COLUMN	1	D
	0513067-2		SUPPORT-COLUMN	1	E
- 8	0513316-12		ANGLE	1	
- 9	0513066-1		STIFFENER ASSEMBLY	1	
-10	NAS682A08		NUTPLATE	2	
-11	NAS680A08		NUTPLATE	1	
-12	NAS682A08		NUTPLATE	1	
-12A	0413522-2		BRACKET	4	E
-13	0513066-3		STIFFENER ASSEMBLY	1	
-14	NAS680A08		NUTPLATE	2	
-15	0513316-6		ANGLE	1	
-16	0513078-1		GUSSET	1	
-17	0515003-2		EYEBROW-INSTRUMENT PANEL	1	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	6	
			---*---		
-18	0513077-1	◻	COVER-SHOCK PANEL	1	D
	0513077-20	◻	COVER-SHOCK PANEL	1	N
	0513077-21	◻	COVER ASSY-SHOCK PANEL USE WITH NARCO MK12B W/VOA-50M	1	N
	0513445-5	◻	COVER ASSY-SHOCK PANEL	1	P
			ATTACHING PARTS		
-19	0513351-1		SCREW POST	4	D
			---*---		
-20	0513071-5		SHOCK PANEL	1	D
	0513071-7		SHOCK PANEL	1	E
			ATTACHING PARTS		
-21	0411059-3		MOUNT	4	D
	0413523-4		MOUNT	4	N
	0413523-4		MOUNT	4	P
-22	0413247		GROUND STRAP	1	
-23	AN936A8		WASHER	8	
-24	AN340B8		NUT	8	V
	MS2508282		NUT	8	P
			---*---		
-25	0513319-5	◻	COVER-RADIO	1	D
	0413527-4	◻	COVER-RADIO	1	N
	0413531-4	◻	COVER-RADIO	1	P
	0413532-2	◻	TRIM-RADIO COVER	AR	E
-26	0513423-2	◻	PANEL COVER-RADIO SWITCH	1	V
	0513446-1	◻	PANEL COVER-RADIO SWITCH	1	P
-27	0513072-3		ADAPTER PLATE-CLUSTER GAGE	1	D
	0513072-2		ADAPTER PLATE-CLUSTER GAGE	1	E
			ATTACHING PARTS		
-28	AN515-8R8		SCREW	6	
			---*---		
-28A	0413522-3		BRACKET	1	E
	0413522-2		SHOCK PANEL	2	E
-29	0513427-1		RETAINER	1	
			ATTACHING PARTS		
-30	AN515-6R8		SCREW	1	
	MS21044N06		NUT	1	
			---*---		
-31	0513077-4	◻	COVER-RH	1	D
	0513077-22	◻	COVER ASSY-STATIONARY PANEL	1	N
	0513445-1	◻	COVER ASSY-STATIONARY PANEL	1	P
			ATTACHING PARTS		
-32	0513351-1		SCREW POST	4	D
-33	AN515-8R10		SCREW	4	D
-34	NAS43DD3-24		SPACER	4	D
-35	AN340B8		NUT	4	D
			---*---		
-36	0513077-8	◻	COVER-LWR RH	1	
-37	SEE FIG 107		MAP BOX & DOOR INSTALLATION	1	
-38	0513077-10	◻	COVER-LOWER LH	1	D
	0513077-2	◻	COVER-LOWER LH	1	E

CONTINUED ON NEXT PAGE

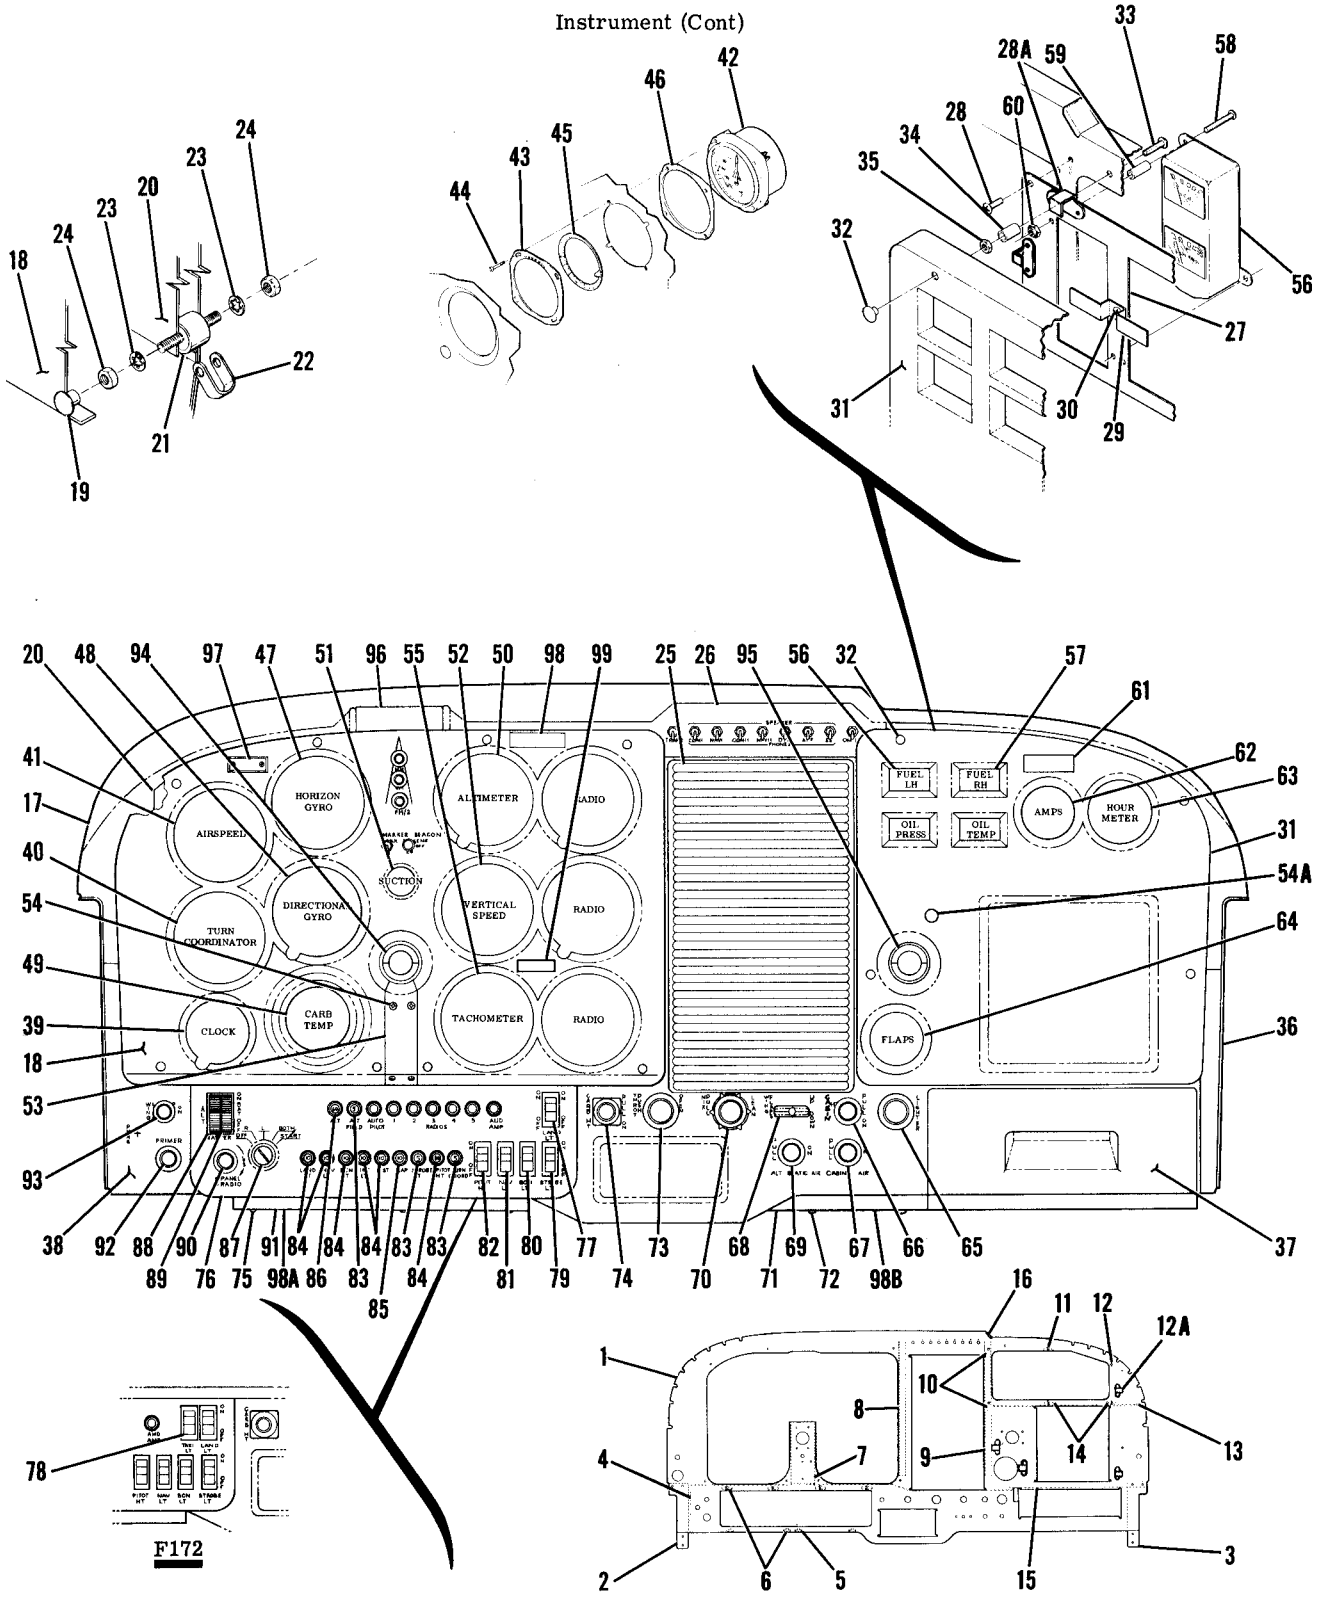

172 SERIAL 17259224 THRU 17261898
F172 SERIAL F17200755 THRU F17201034

Figure 105. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
105 -39	S1317N2	CLOCK-ELECTRIC WEU C664508-0101	1	K
	C664508-0101	CLOCK-ELECTRIC	1	H
		ATTACHING PARTS		
	AN515-6R10	SCREW	3	
		---*---		
-40	S1413N1	INDICATOR-TURN & BANK WEU S1413N2	1	K
	S1413N2	INDICATOR-TURN & BANK	1	H
	C661003-0501	TURN COORDINATOR WEU C661003-0504	1	K
	C661003-0504	TURN COORDINATOR	1	H
		ATTACHING PARTS		
	AN51586R12	SCREW	3	
		---*---		
	35060-0014	TURN COORDINATOR ARC NAV-O-MATIC	1	K
	35060-0114	TURN COORDINATOR ARC NAV-O-MATIC	1	H
		ATTACHING PARTS		
	AN515-6R14	SCREW	4	
	MS21044N06	NUT	4	
		---*---		
-41	S1470N9	INDICATOR-AIRSPEED WEU C661060-0103	1	S
	C661060-0103	INDICATOR-AIRSPEED	1	T
	C661060-0109	INDICATOR-AIRSPEED	1	P
		ATTACHING PARTS		
	AN51586R16	SCREW	4	
		---*---		
		TRUE AIRSPEED INDICATOR INSTALLATION	NP	
-42	C661010-0102	INDICATOR-AIRSPEED WEU C661061-0103	1	S
	C661061-0103	INDICATOR-AIRSPEED	1	T
	C661061-0106	INDICATOR-AIRSPEED	1	P
-43	0700162-1	RETAINER	1	
		ATTACHING PARTS		
-44	AN51586R16	SCREW	4	
		---*---		
-45	0700189-6	RING ASSEMBLY-TRUE AIRSPEED	1	
-46	0700162-6	SPACER	1	
-47	C661001-0505 **	GYRO-HORIZON WEU C661076-0104	1	K
	C661076-0104 **	GYRO-HORIZON	1	H
	C661001-0504 **	GYRO-HORIZON ALT WEU C661076-0103	1	K
	C661076-0103 **	GYRO-HORIZON ALT	1	H
	C661001-0503 **	GYRO-HORIZON ALT WEU C661076-0102	1	K
	C661076-0102 **	GYRO-HORIZON ALT	1	H
	C661001-0502 **	GYRO-HORIZON ALT WEU C661076-0101	1	K
	C661076-0101 **	GYRO-HORIZON	1	H
		ATTACHING PARTS		
	AN51586R6	SCREW	4	
		---*---		
	37570-0001	GYRO-HORIZON NAV-O-MATIC WEU 37570-0103	1	K
	37570-0105	GYRO-HORIZON ARC NAV-O-MATIC	1	H
		ATTACHING PARTS		
	AN515-6R10	SCREW	3	
		---*---		
-48	C661002-0505 ***	GYRO-DIRECTIONAL WEU C661075-0102	1	K
	C661075-0102 ***	GYRO-DIRECTIONAL	1	H
	C661002-0506 ***	GYRO-DIRECTIONAL ALT WEU C661075-0103	1	K
	C661075-0103 ***	GYRO-DIRECTIONAL ALT	1	H
	C661002-0504 ***	GYRO-DIRECTIONAL ALT WEU C661075-0101	1	K
	C661075-0101 ***	GYRO-DIRECTIONAL ALT	1	H
	C661002-0301 ***	GYRO-DIRECTIONAL ALT WEU C661075-0104	1	K
	C661075-0104 ***	GYRO-DIRECTIONAL	1	H
	C661075-0105 ***	GYRO-DIRECTIONAL A.I.M. 200H	1	W
		ATTACHING PARTS		
	AN51586R6	SCREW	3	
		---*---		
	30370-0100	GYRO-DIRECTIONAL WEU 30370-0102	1	K
	30370-0102	GYRO-DIRECTIONAL WEU 40760-0104	1	N
	40760-0104	GYRO-DIRECTIONAL	1	P
		ATTACHING PARTS		
	AN515-6R10	SCREW	3	
		---*---		
-49	S1311-1	GAGE-CARBURETOR AIR TEMPERATURE WEU S1311-3	1	K
	S1311-3	GAGE-CARBURETOR AIR TEMPERATURE	1	H
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	NAS395-2-3	NUT	4	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
105 -50	C661012-0101		ALTIMETER	1	
	S1314N1		ALTIMETER ALT	1	
	C661011-0105		ALTIMETER-SENSITIVE FEET & INCHES WEU C661071-0101	1	K
	C661071-0101		ALTIMETER-SENSITIVE FEET & INCHES	1	H
	C661011-0106		ALTIMETER-SENSITIVE FEET & MILLIBARS WEU C661071-0102	1	K
	C661071-0102		ALTIMETER-SENSITIVE FEET & MILLIBARS	1	H
			ATTACHING PARTS		
	AN515B6R16		SCREW	4	
			---*---		
-51	C668509-0101		GAGE-SUCTION ONE INCH	1	
-52	S1304N1		INDICATOR-VERTICAL SPEED WEU C661080-0101	1	K
	S1392N2		INDICATOR-VERTICAL SPEED ALT WEU C661080-0101	1	K
	C661080-0101		INDICATOR-VERTICAL SPEED	1	H
			ATTACHING PARTS		
	AN515B6R16		SCREW	4	
			---*---		
-53	0513077-7	◻	SPLICE PLATE	1	D
	0513077-9	◻	SPLICE PLATE USED WITH MAP LIGHT	1	D
	0513077-26	◻	SPLICE PLATE	1	N
	0513077-27	◻	SPLICE PLATE USED WITH MAP LIGHT	1	N
	0513445-9	◻	SPLICE PLATE	1	P
	0513445-10	◻	SPLICE PLATE USED WITH MAP LIGHT	1	P
			ATTACHING PARTS		
-54	S1021Z6-88		SCREW	4	
	NAS395-4-3		NUT	4	
			---*---		
-54A	S2135-1		LIGHT ASSY-OVERLOAD	1	E
-55	S1305-6		TACHOMETER WEU C668020-0102	1	K
	C668020-0102		TACHOMETER	1	H
			ATTACHING PARTS		
	AN515B6R8		SCREW	4	
	AN936A6B		WASHER	4	
	MS21044N06		NUT	4	D
			---*---		
	S1605-6		SHAFT-TACHOMETER DRIVE	1	B
	S1605-8		SHAFT-TACHOMETER DRIVE	1	C
-56	C669504-0103		INSTRUMENT CLUSTER	1	L
	C669504-0105		INSTRUMENT CLUSTER	1	G
	441347		L. FUEL GAGE SW	1	A
	444678		OIL PRESSURE SW	1	L
	444679		OIL PRESSURE SW	1	G
-57	C669505-0101		INSTRUMENT CLUSTER	1	L
	C669505-0104		INSTRUMENT CLUSTER	1	G
			ATTACHING PARTS		
-58	AN515-6R16		SCREW	5	
-59	NAS43DD1-42		SPACER	5	
	AN960D6L		WASHER	5	
-60	MS21044N06		NUT	5	
			---*---		
	441346		R. FUEL GAGE SW	1	A
	442792		OIL TEMP SW	1	L
	442876		OIL TEMP SW	1	G
	0500118-96		TUBE ASSEMBLY-OIL PRESSURE GAGE TO FIREWALL	1	
-61	0505020-2		PLACARD-MASTER SWITCH	1	D
-62	S1320-1		AMMETER WEU S1320-3	1	U
	S1320-3		AMMETER WEU S1320-5	1	Q
	S1320-5		AMMETER	1	R
			ATTACHING PARTS		
	S1558-1		BRACKET-AMMETER GAGE	1	
	0513392-4		SPACER	1	V
	0513392-5		SPACER	1	P
	AN515B8R4		SCREW	4	
	MS21044N08		NUT	4	
			---*---		
-63	C664501-0101		HOURMETER WEU C664501-0103	1	K
	C664501-0103		HOURMETER	1	H
			ATTACHING PARTS		
	AN960-6		WASHER	8	K
	AN515-6R6		SCREW	4	K
	NAS679A06		NUT	4	K
			---*---		
-64	C668001-0103		INDICATOR-FLAP WEU C668001-0105	1	K
	C668001-0105		INDICATOR-FLAP	1	H

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
105 -65	0513039-7		LIGHTER ASSEMBLY-CIGAR	1	
	L4858-1		ELEMENT ASSEMBLY	1	
	S1982-1		KNOB-CIGAR LIGHTER	1	
	60232-1		CIRCUIT BREAKER-CIGAR LIGHTER	1	
-66	S1239-48		CONTROL ASSEMBLY-CABIN HEAT	1	
-67	S1239-47		CONTROL ASSEMBLY-CABIN AIR	1	
-68	S1661-1		SWITCH-FLAP MOTOR	1	V
	S1661-2		SWITCH-FLAP MOTOR	1	P
	S1771-1		KNOB-FLAP CONTROL	1	
	S1216-4		NUT-DECORATIVE	1	
	AN960-816		WASHER	1	
-69	S1981-5		KNOB ASSEMBLY	1	
-70	S1777-3		CONTROL-MIXTURE	1	B
	S1777-4		CONTROL-MIXTURE	1	C
	1213646-3		WASHER	2	
	0513405-2		SPACER	2	
-71	0513424-3		PAD-PROTECTION	1	D
			ATTACHING PARTS		
-72	S1021Z6-12C		SCREW	2	
			---*---		
-73	C299505-0102		CONTROL ASSEMBLY-THROTTLE	1	B
	C299505-0203		CONTROL ASSEMBLY-THROTTLE	1	C
-74	S1230-15		CONTROL-CARBURETOR HEAT	1	B
	S1230-17		CONTROL-CARBURETOR HEAT	1	C
			PANEL ASSEMBLY-REMOVABLE SWITCH	NP	
			ATTACHING PARTS		
-75	AN515-8R16		SCREW	3	D
	NAS43DD3-22		SPACER	3	D
	AN960D8L		WASHER	3	D
	AN515-8R8		SCREW	4	D
			---*---		
-76	0513076-3	¤	COVER ASSEMBLY	1	F
	0513076-7	¤	COVER ASSEMBLY	1	G
	0513076-19	¤	COVER ASSEMBLY	1	E
-77	S2160-5		SWITCH-LANDING LIGHT	1	
-78	S2160-4		SWITCH-TAXI LIGHT F172 ONLY	1	
-79	S2160-1		SWITCH-STROBE LIGHT	1	
-80	S2160-1		SWITCH-FLASHING BEACON	1	
-81	S2160-1		SWITCH-NAV LIGHT	1	
-82	S2160-1		SWITCH-PITOT HEAT	1	
	S1865-1		COVER-DUMMY SWITCH USE FOR EMPTY SWITCH LOCATION	AR	
-83	S1360-5L		CIRCUIT BREAKER 5 AMP	2	
-84	S1360-10L		CIRCUIT BREAKER 10 AMP	7	
	S1360-20L		CIRCUIT BREAKER 20 AMP COWL LDG LIGHT	1	
-85	S1360-15L		CIRCUIT BREAKER 15 AMP	1	
-86	S1596-60		CIRCUIT BREAKER 60 AMP	1	
	S2122-1		NUT ATTACH CKT BREAKER BLACK	AR	
	S2122-2		NUT ATTACH CKT BREAKER BRIGHT	AR	
-87	C292501-0104	*	KIT-IGNITION SWITCH	1	
-88	S1843-1		MOUNTING BEZEL	1	
-89	S1994-1-1		SWITCH-MASTER	1	
	0770719-2		DIODE ASSEMBLY-MASTER SWITCH	1	
-90	S1995-4		KNOB ASSEMBLY-RESISTOR	1	
	AN565B2H3		SET SCREW	1	
	S2091-5		RESISTOR	1	
-91	0513424-1		PAD	1	D
-92	C291502-0103		PRIMER-ENGINE	1	
-93	SEE FIG 151		WING LEVELER INSTALLATION	1	
-94	0513311-1		SUPPORT ASSEMBLY-CONTROL LH	1	D
	0760131-6		SUPPORT & LOCK COLLAR LH	1	E
-95	0513311-2		SUPPORT ASSEMBLY-CONTROL RH	1	D
	0760131-5		SUPPORT-CONTROL RH	1	E
-96	0400210-2		PLACARD-COMPASS CORRECTION	1	
-97	1213004-1		RETAINER-AIRCRAFT IDENTIFICATION NUMBER	1	D
	1213004-2		RETAINER-AIRCRAFT IDENTIFICATION	1	E
			ATTACHING PARTS		
	S1022Z6-108		SCREW	2	
	NAS446-2-3		NUT	2	
			---*---		
-98	C622003-0103		PLACARD-STROBE LIGHT WARNING	1	D
	C622003-0105		PLACARD-STROBE LIGHT WARNING	1	E

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
105 -98A	0513434-5	KNEE-PAD LEFT OF PARKING BRAKE	1	E
	0513434-3	KNEE-PAD RIGHT OF PARKING BRAKE	1	E
		ATTACHING PARTS		
	AN515-8R13	SCREW	2	
	AN960D8L	WASHER	2	
		---*---		
-98B	0513434-4	KNEE-PAD LEFT OF MAP CASE	1	
		ATTACHING PARTS		
	S1021Z6-12C	SCREW	2	
	AN960D6L	WASHER	2	
		---*---		
-99	0505027-1	PLACARD-RPM LIMITATIONS	1	M

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-SEE PAGE XIX.

NOTE. *THIS KIT ALSO INCLUDES TWO DOOR LOCKS & KEYS.

NOTE. **THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.


NOTE. ***THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.


A---172 SERIAL 17259224 THRU 17261898
F172 SERIAL F17200755 THRU F17201034
B---172 SERIAL 17259224 THRU 17261898
C---F172 SERIAL F17200755 THRU F17201034
D---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F17200755 THRU F17200804
E---172 SERIAL 17259904 THRU 17261898
F172 SERIAL F17200805 THRU F17201034
F---172 SERIAL 17259224 THRU 17259903
G---F172 SERIAL F17200755 THRU F17200804
H---172 SERIAL 17259904 THRU 17261898
J---DELETED
K---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F17200755 THRU F17201034
L---172 SERIAL 17259224 THRU 17261898
F172 SERIAL F17200805 THRU F17201034
M---172 SERIAL 17259570 THRU 17259700
N---172 SERIAL 17259904 THRU 17260758
F172 SERIAL F17200805 THRU F17200904
P---172 SERIAL 17260759 THRU 17261898
F172 SERIAL F17200905 THRU F17201034
Q---172 SERIAL 17259904 THRU 17260592
R---172 SERIAL 17260593 THRU 17261898
F172 SERIAL F17200880 THRU F17201034
S---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F17200755 THRU F17200904
T---172 SERIAL 17259904 THRU 17260758
U---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F17200755 THRU F17200879
V---172 SERIAL 17259224 THRU 17260758
F172 SERIAL F17200755 THRU F17200904
W---172 SERIAL 17260353 THRU 17261898
F172 SERIAL F1720855 THRU F17201034

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
106 -			INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
- 1	0513070-9		PANEL ASSY-STATIONARY	1	
- 2	0513068-1		SUPPORT-LH	1	
- 3	0513068-2		SUPPORT-RH	1	
- 4	0513069-3		STIFFENER ASSY	1	
- 5	NAS680A3		NUTPLATE	1	
- 6	NAS680A08		NUTPLATE	7	
- 7	0513067-2		SUPPORT-COLUMN	1	
- 8	0513316-12		ANGLE	1	
- 9	0513066-1		STIFFENER ASSY	1	
-10	NAS682A08		NUTPLATE	2	
-11	NAS680A08		NUTPLATE	1	
-12	NAS682A08		NUTPLATE	1	
-13	0513066-3		STIFFENER ASSY	1	
-14	NAS680A08		NUTPLATE	2	
-15	0513316-6		ANGLE	1	
-16	0513078-1		GUSSET	1	
-17	MS35489-4		GROMMET-COVER ATTACH	5	
-18	SEE FIG 107		MAP CASE ASSY	1	
-18A	0413522-2		BRACKET-FASTENER	2	
	S2092-3		FASTENER-HOOK BULK ITEM	AR	
-19	0515003-2		EYEBROW-INSTRUMENT PANEL	1	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	6	
			---*---		
-20	0513445-13	□	COVER ASSY-SHOCK PANEL	1	
-21	1513839-4		GUIDE-COVER ATTACH	9	
-21A	1513839-5		GUIDE-COVER ATTACH	2	
-22	0513071-11		PANEL ASSY-SHOCK	1	
			ATTACHING PARTS		
	0413523-4		MOUNT ASSY	4	
	AN936A8		WASHER	8	
	MS2508282		NUT	8	
	0413247		STRAP-GROUND	1	
			---*---		
-23	MS35489-33		GROMMET	9	
	S2092-3		FASTENER-HOOK BULK ITEM	AR	
-24	0413531-31	□	COVER-RADIO	1	B
	0413531-59	□	COVER-RADIO	1	C
-25	0513446-2	□	PANEL COVER-RADIO SWITCH	1	
	0513446-4	□	PANEL COVER-RADIO SWITCH USED WITH CANTED RADIO INSTL	1	C
-26	0513072-3		PLATE-GAGE CLUSTER ADAPTER	1	
			ATTACHING PARTS		
-27	AN515-8R8		SCREW	6	
			---*---		
-28	0513427-1		RETAINER-INSTRUMENT		
			ATTACHING PARTS		
-29	AN515-6R8		SCREW	1	
	MS21044N06		NUT	1	
			---*---		
-30	0513445-22	□	COVER ASSY-RH	1	
	1513839-6		GUIDE-COVER ATTACH	5	
	S2092-4		FASTENER-PILE * IN LG BKI REF S2092-4-*	AR	
-31	0513077-8	□	COVER-LOWER RH	1	
-32	SEE FIG 107		MAP BOX & DOOR INSTALLATION	1	
-33	0513077-28	□	COVER-LOWER LH	1	
-34	0513445-23	□	PLATE-SPLICE	1	
	0513445-24	□	PLATE-SPLICE USED WITH MAPLIGHT	1	
			ATTACHING PARTS		
-35	S1021Z6-88		SCREW	2	
	NAS395-4-3		NUT	2	
			---*---		
-36	C664508-0101		CLOCK-ELECTRIC	1	
			ATTACHING PARTS		
	AN51586R10		SCREW	3	
			---*---		
-37	S1413N2		INDICATOR-TURN & BANK	1	
	C661003-0504		INDICATOR-TURN COORDINATOR	1	
			ATTACHING PARTS		
	AN51586R12		SCREW	3	
			---*---		
	35060-0114		INDICATOR-TURN COORDINATOR ARC NAV-O-MATIC	1	
			ATTACHING PARTS		
	AN515-6R14		SCREW	4	
	MS21045L06		NUT	4	
			---*---		


CONTINUED ON NEXT PAGE

Instruments (Cont)

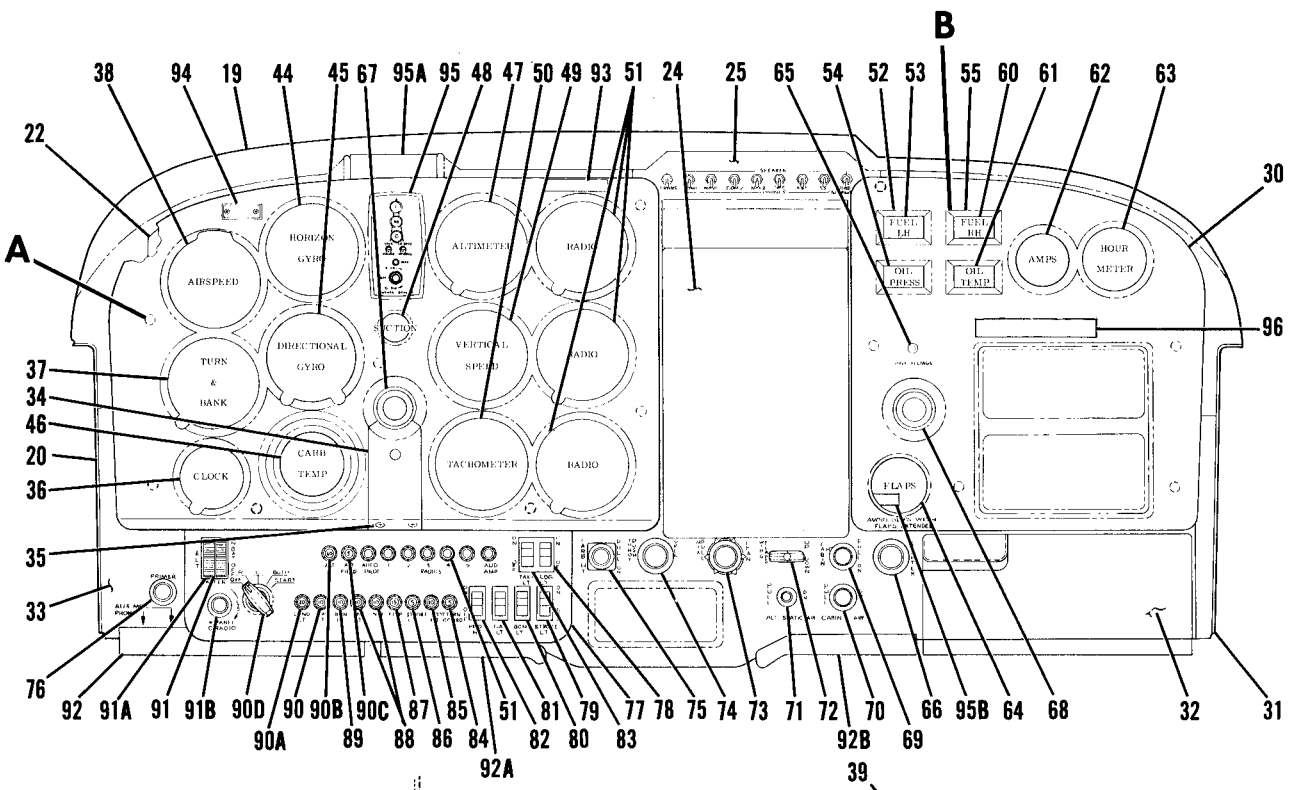


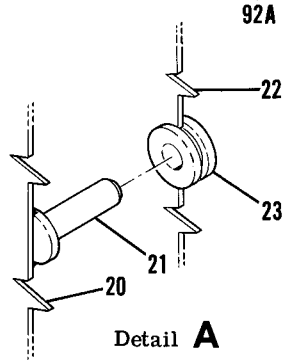


Detail A

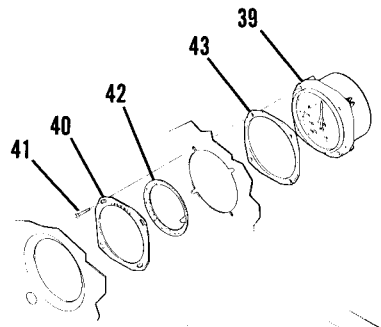

TRUE AIRSPEED

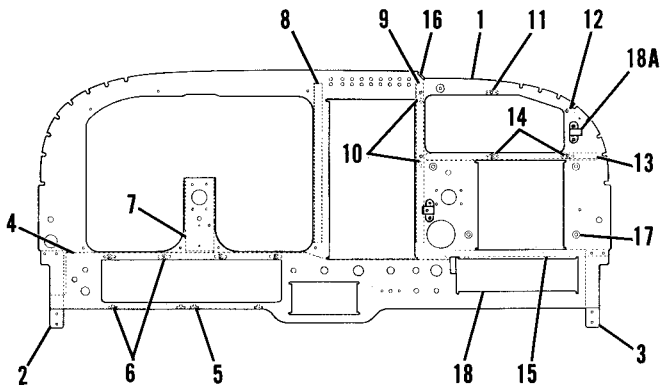

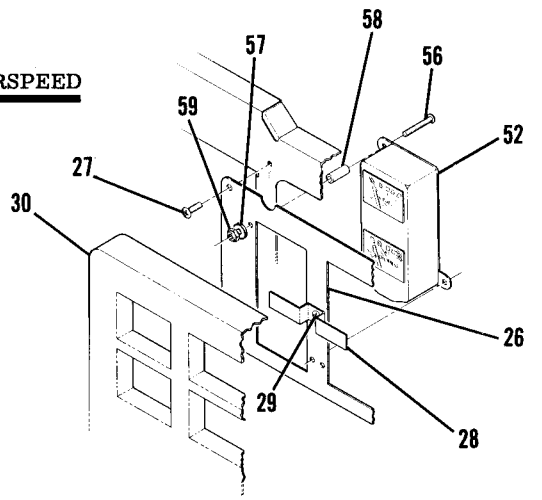

Detail B

172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234

Figure 106. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
106 -38	C661060-0109		INDICATOR-AIRSPEED	1	
			ATTACHING PARTS		
	AN515B6R16		SCREW	4	
			---*---		
			TRUE AIRSPEED INDICATOR INSTALLATION	NP	
-39	C661061-0106		INDICATOR-AIRSPEED	1	
-40	0700162-1		RETAINER	1	
			ATTACHING PARTS		
-41	AN515B6R16		SCREW	4	
			---*---		
-42	0700189-10		RING ASSY-TRUE AIRSPEED	1	
-43	0700162-6		SPACER	1	
-44	C661076-0104	*	GYRO-HORIZON	1	
	C661076-0103	*	GYRO-HORIZON	1	
	C661076-0102	*	GYRO-HORIZON	1	
	C661076-0101	*	GYRO-HORIZON	1	
			ATTACHING PARTS		
	AN515B6R6		SCREW	4	
			---*---		
	37570-0105		GYRO-HORIZON ARC NAV-O-MATIC	1	
			ATTACHING PARTS		
	AN515-6R10		SCREW	3	
			---*---		
-45	C661075-0102	**	GYRO-DIRECTIONAL	1	
	C661075-0103	**	GYRO-DIRECTIONAL	1	
	C661075-0101	**	GYRO-DIRECTIONAL	1	
	C661075-0104	**	GYRO-DIRECTIONAL	1	
	C661075-0105		GYRO-DIRECTIONAL A.I.M. 200H	1	
			ATTACHING PARTS		
	AN515B6R6		SCREW	3	
			---*---		
	40760-0104		GYRO-DIRECTIONAL ARC NAV-O-MATIC	1	
			ATTACHING PARTS		
	AN515-6R10		SCREW	3	
			---*---		
-46	S1311-3		GAGE-CARBURETOR AIR TEMPERATURE	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
	NAS395-2-3		NUT	4	
			---*---		
-47	C661012-0101		INDICATOR-ALTIMITER	1	
	C661071-0101		INDICATOR-ALTIMETER FEET & INCHES 20,000 FT	1	
	C661071-0102	%%	INDICATOR-ALTIMETER FEET & MILLIBARS 20,000 FT	1	
	C661025-0102	***	INDICATOR-ALTIMETER FEET & MILLIBARS 35,000 FT	1	
			ATTACHING PARTS		
	AN515B6R16		SCREW	3	
	AN936A6B		WASHER	3	
	AN340B6		NUT	3	
			---*---		
-48	C668509-0101		GAGE-SUCTION ONE INCH	1	
-49	C661080-0101		INDICATOR-VERTICAL SPEED	1	
			ATTACHING PARTS		
	AN515B6R16		SCREW	4	
			---*---		
-50	C668020-0102		TACHOMETER	1	
			ATTACHING PARTS		
	AN515B6R8		SCREW	4	
	AN936A6B		WASHER	4	
			---*---		
	S1605-8		SHAFT-TACHOMETER DRIVE	1	
-51			RADIO INSTALLATION SEE ELECTRONICS MANUAL	NP	
-52	C669504-0103		INSTRUMENT CLUSTER	1	
-53	441347		GAGE-LH FUEL SW	1	
-54	444678		GAGE-OIL PRESSURE SW	1	
-55	C669505-0101		INSTRUMENT CLUSTER	1	
			ATTACHING PARTS		
-56	AN515-6R5		SCREW	2	
-57	AN960D6L		WASHER	2	
-58	NAS43DD1-42		SPACER	2	
-59	MS21045L06		NUT	2	
			---*---		
-60	441346		GAGE-RH FUEL SW	1	
-61	442792		GAGE-OIL TEMP SW	1	
	0500118-96		TUBE ASSY-OIL PRESSURE GAGE TO FIREWALL	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
106 -62	S1320-5		AMMETER	1	
			ATTACHING PARTS		
	S1558-1		BRACKET-AMMETER GAGE	1	
	0513392-5		SPACER	1	
	AN515B8R4		SCREW	4	
	MS21044N08		NUT	4	
			---*---		
-63	C664501-0103		HOURMETER	1	
			ATTACHING PARTS		
	AN515-6R6		SCREW	4	
	AN960-6		WASHER	8	
	MS21045L06		NUT	4	
			---*---		
-64	C668001-0105		INDICATOR-FLAP	1	
			ATTACHING PARTS		
	S1558-1		BRACKET	1	
	0513392-5		SPACER	1	
			---*---		
-65	S2135-1		LIGHT ASSY-OVERVOLTAGE	1	
-66	0513039-7		LIGHTER ASSY-CIGAR	1	
	L4858		ELEMENT ASSY CUNO	1	
	S1982-1		KNOB-CIGAR LIGHTER	1	
	60232-1		CIRCUIT BREAKER-CIGAR LIGHTER	1	
-67	0760131-6		SUPPORT ASSY-CONTROL LH	1	
-68	0760131-1		SUPPORT ASSY-CONTROL RH	1	
-69	S1239-48		CONTROL ASSY-CABIN HEAT	1	
-70	S1239-47		CONTROL ASSY-CABIN AIR	1	
-71	S1981-5		KNOB ASSY-ALT STATIC AIR	1	
-72	S1661-2		SWITCH-FLAP MOTOR	1	
	S1771-1		KNOB-FLAP CONTROL	1	
	S1216-4		NUT-DECORATIVE	1	
-73	S1777-3		CONTROL ASSY-MIXTURE	1	
	1213646-3		WASHER	2	
	0513405-2		SPACER	1	
-74	C299505-0102		CONTROL ASSY-THROTTLE	1	
-75	S1230-15		CONTROL ASSY-CARBURETOR HEAT	1	
-76	C291502-0103		CONTROL ASSY-PRIMER	1	
			PANEL ASSY-REMOVABLE SWITCH	NP	
			ATTACHING PARTS		
	AN515-8R8		SCREW	4	
			---*---		
-77	0513076-34	◻	COVER ASSY-SWITCH PANEL	1	
-78	S2160-4		SWITCH LANDING & TAXI LIGHT	1	
	S2160-5		SWITCH LANDING & TAXI LIGHT	1	
-79	S2160-1		SWITCH STROBE LIGHT	1	
-80	S2160-1		SWITCH BEACON LIGHT	1	
-81	S2160-1		SWITCH NAVIGATION LIGHT	1	
-82	S2160-1		SWITCH PITOT HEAT	1	
	S1824-1		SWITCH PITOT HEAT FLOATPLANE ONLY	1	
	S2161-1		COVER-SWITCH USED WHEN SWITCHES ARE NOT INSTALLED	3	
-83	S2161-2		COVER-SWITCH USED WHEN SWITCH IS NOT INSTALLED	1	
-84	S1360-5L		CIRCUIT BREAKER 5 AMP TURN COORDINATOR	1	
-85	S1360-10L		CIRCUIT BREAKER 10 AMP PITOT HEAT	1	
-86	S1360-5L		CIRCUIT BREAKER 5 AMP STROBE LIGHT	1	
-87	S1360-15L		CIRCUIT BREAKER 15 AMP FLAP	1	
-88	S1360-10L		CIRCUIT BREAKER 10 AMP INSTRUMENT LIGHTS	2	
-89	S1360-10L		CIRCUIT BREAKER 10 AMP BEACON LIGHT	1	
-90	S1360-10L		CIRCUIT BREAKER 10 AMP NAVIGATION LIGHT	1	
-90A	S1360-20L		CIRCUIT BREAKER 20 AMP LANDING LIGHTS	1	
-90B	S1596-60		CIRCUIT BREAKER 60 AMP ALTERNATOR	1	
-90C	S1360-5L		CIRCUIT BREAKER 5 AMP ALT FIELD	1	
-90D	C292501-0104	⁂	KIT-IGNITION SWITCH	1	
-91	S1994-1-1		SWITCH-MASTER	1	
-91A	S1843-1		MOUNTING BEZEL-MASTER SWITCH	1	
-91B	S1995-4		KNOB ASSY-RESISTOR	1	
	S2091-5		RESISTOR-PANEL LIGHTS	1	
	AN565B2H3		SCREW-SET	1	
-92	0513434-5		PAD-KNEE	1	
			ATTACHING PARTS		
	AN515-8R13		SCREW	2	
	AN960D8L		WASHER	2	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
106 -92A	0513454-3	PAD-KNEE		
		ATTACHING PARTS		
	AN515-8R13	SCREW	2	
	AN960D8L	WASHER	2	
		---*---		
-92B	0513434-4	PAD-KNEE	1	
		ATTACHING PARTS		
	S1021Z6-12C	SCREW	2	
	AN960D6L	WASHER	2	
		---*---		
-93	C622003-0105	PLACARD-STROBE LIGHT WARNING	1	
-94	1213004-2	RETAINER-AIRCRAFT IDENTIFICATION	1	
		ATTACHING PARTS		
	S1022Z6-108	SCREW	2	
	NAS446-2-3	NUT	2	
		---*---		
-95	0505042-2	PLACARD-MARKER BEACON	1	
-95A	0400210-2	PLACARD-COMPASS CORRECTION FLOATPLANE ONLY	1	
-95B	1220112-4	PLACARD-FLOATPLANE FLAPS FLOATPLANE ONLY	1	
-96	0505009-3	PLACARD-WINTERIZATION	1	
		NOTE. *THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.		
		NOTE. **THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.		
		NOTE. %THIS KIT ALSO INCLUDES TWO DOOR LOCKS & KEYS.		
		NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS - SEE PAGE XIX.		
		NOTE. ***FOR DUAL ALTIMETER INSTALLATION-20 FT INCREMENTS, USE 2 C661025-0102 ALTIMETERS & 6 EACH AN515B6R16 SCREW, AN936A6B WASHER & AN340B6 NUT.		
		NOTE. %%FOR DUAL ALTIMETER INSTALLATION-50 FT INCREMENTS, USE 2 C661071-0102 ALTIMETERS & 6 EACH AN515B6R16 SCREW, AN936A6B WASHER & AN340B6 NUT.		
		A---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234 B---172 SERIAL 17261899 THRU 17262983 F172 SERIAL F17201035 THRU F17201234 C---172 SERIAL 17262984 THRU 17263458		

This page intentionally left blank.

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
107 -		MAP COMPARTMENT INSTALLATION	NP	A
- 1	0513225-4	BOX ASSEMBLY	1	
		ATTACHING PARTS		
- 2	S1021Z6-6	SCREW	4	
- 3	S1021Z4-5	SCREW	2	
- 4	NAS395-1-3	NUT	2	
		---*---		
- 5	NAS395-6-3	NUT	4	
- 6	S1213-1	CATCH	1	
	0513133-90	DOOR ASSEMBLY-MAP BOX	1	
		ATTACHING PARTS		
- 7	S1021Z6-6	SCREW	6	
		---*---		
- 8	0713303-7	KNOB-MAP BOX DOOR	1	
		ATTACHING PARTS		
	AN515-6R6	SCREW	2	
		---*---		
- 9	S1213-3	STRIKER	1	
		ATTACHING PARTS		
	AN340-8	NUT	1	
	AN936A8	WASHER	1	
		---*---		

CONTINUED ON NEXT PAGE

Map Compartment

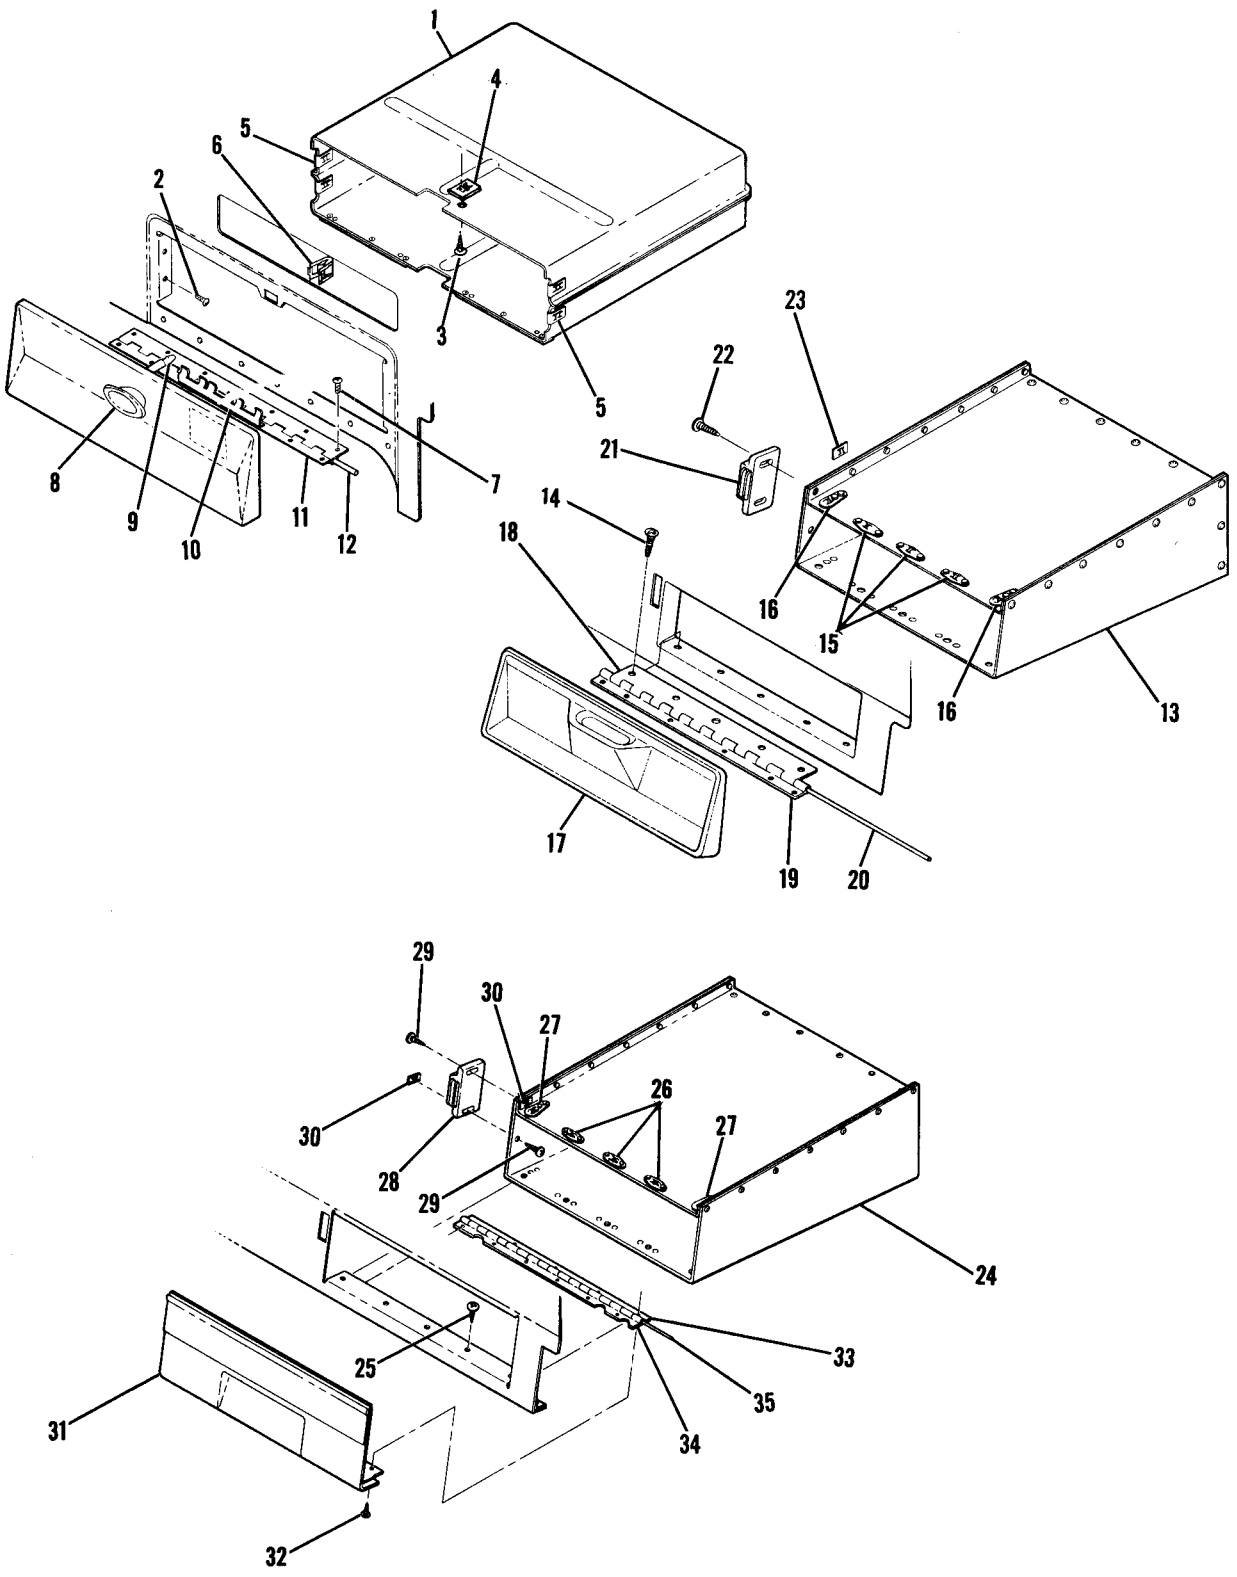


Figure 107. Map Compartment Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
107 -10	0411099-3		RETAINER-FUSE	1	
-11	0513133-9		HINGE ASSEMBLY-MAP BOX DOOR	1	
-12	MS20253-2		PIN-HINGE 9.96 IN LG BULK ITEM REF MS20253-2-996	1	
			MAP BOX & DOOR INSTALLATION	NP	B
-13	0513320-8		CASE ASSEMBLY-MAP	1	
			ATTACHING PARTS		
-14	S1021Z6-6		SCREW	10	
			---*---		
-15	S1863-2A		NUT-ANCHOR	6	
-16	S1862-1A		NUT-ANCHOR	4	
-17	0513321-1	¤	DOOR ASSEMBLY-MAP CASE	1	
-18	0513321-6		HINGE HALF	1	
-19	0513321-7		HINGE HALF	1	
-20	MS20253-2		PIN-HINGE 9.00 IN LG BULK ITEM REF MS20253-2-900	1	
-21	S1895-1		CATCH ASSEMBLY	1	
			ATTACHING PARTS		
-22	S1021Z6-8		SCREW	2	
-23	NAS446-2-3		NUT	2	
			---*---		
			MAP BOX & DOOR INSTALLATION	NP	C
-24	0513320-8		MAP CASE ASSEMBLY	1	
			ATTACHING PARTS		
-25	S1021Z6-6		SCREW	10	
			---*---		
-26	S1863-2A		NUT-ANCHOR	6	
-27	S1862-1A		NUT-ANCHOR	4	
-28	S1895-1		CATCH ASSEMBLY-MAGNETIC	1	
			ATTACHING PARTS		
-29	S1021Z6-8		SCREW	2	
-30	NAS446-2-3		NUT	2	
			---*---		
-31	0513390-12	¤	DOOR ASSEMBLY-MAP CASE	1	D
	0513390-29	¤	DOOR ASSEMBLY-MAP CASE	1	E
	0513422-1	¤	DOOR ASSEMBLY-MAP CASE	1	F
	0513438-1	¤	DOOR ASSEMBLY-MAP CASE	1	G
			ATTACHING PARTS		
-32	AN515-6R12		SCREW	5	F
	AN515-6R5		SCREW	5	G
	NAS43DD1-40		SPACER	5	F
	MS21044N06		NUT	5	
	NAS960D6L		WASHER	5	F
			---*---		
	0513424-2		PAD	1	F
	1514014-1		CAP	1	F
	0513438-8		PAD	1	G
-33	0513316-21		HINGE HALF	1	
-34	0513316-22		HINGE HALF	1	
-35	MS20253P1		PIN-HINGE 8.14 IN LG BULK ITEM REF MS20253P1-814	1	

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

A---172 SERIAL 17249545 THRU 17250572
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0018
FP172 SERIAL FP172-0001 THRU FP172-0003

B---172 SERIAL 17250573 THRU 17254892
F172 SERIAL F172-0019 THRU F172-0319

C---172 SERIAL 17254893 THRU 17263458
F172 SERIAL F172-0320 THRU F17201234

D---172 SERIAL 17254893 THRU 17257161
F172 SERIAL F172-0320 THRU F172-0559

E---172 SERIAL 17257162 THRU 17259223
F172 SERIAL F172-0560 THRU F17200754

F---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F17200755 THRU F17200804

G---172 SERIAL 17259904 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

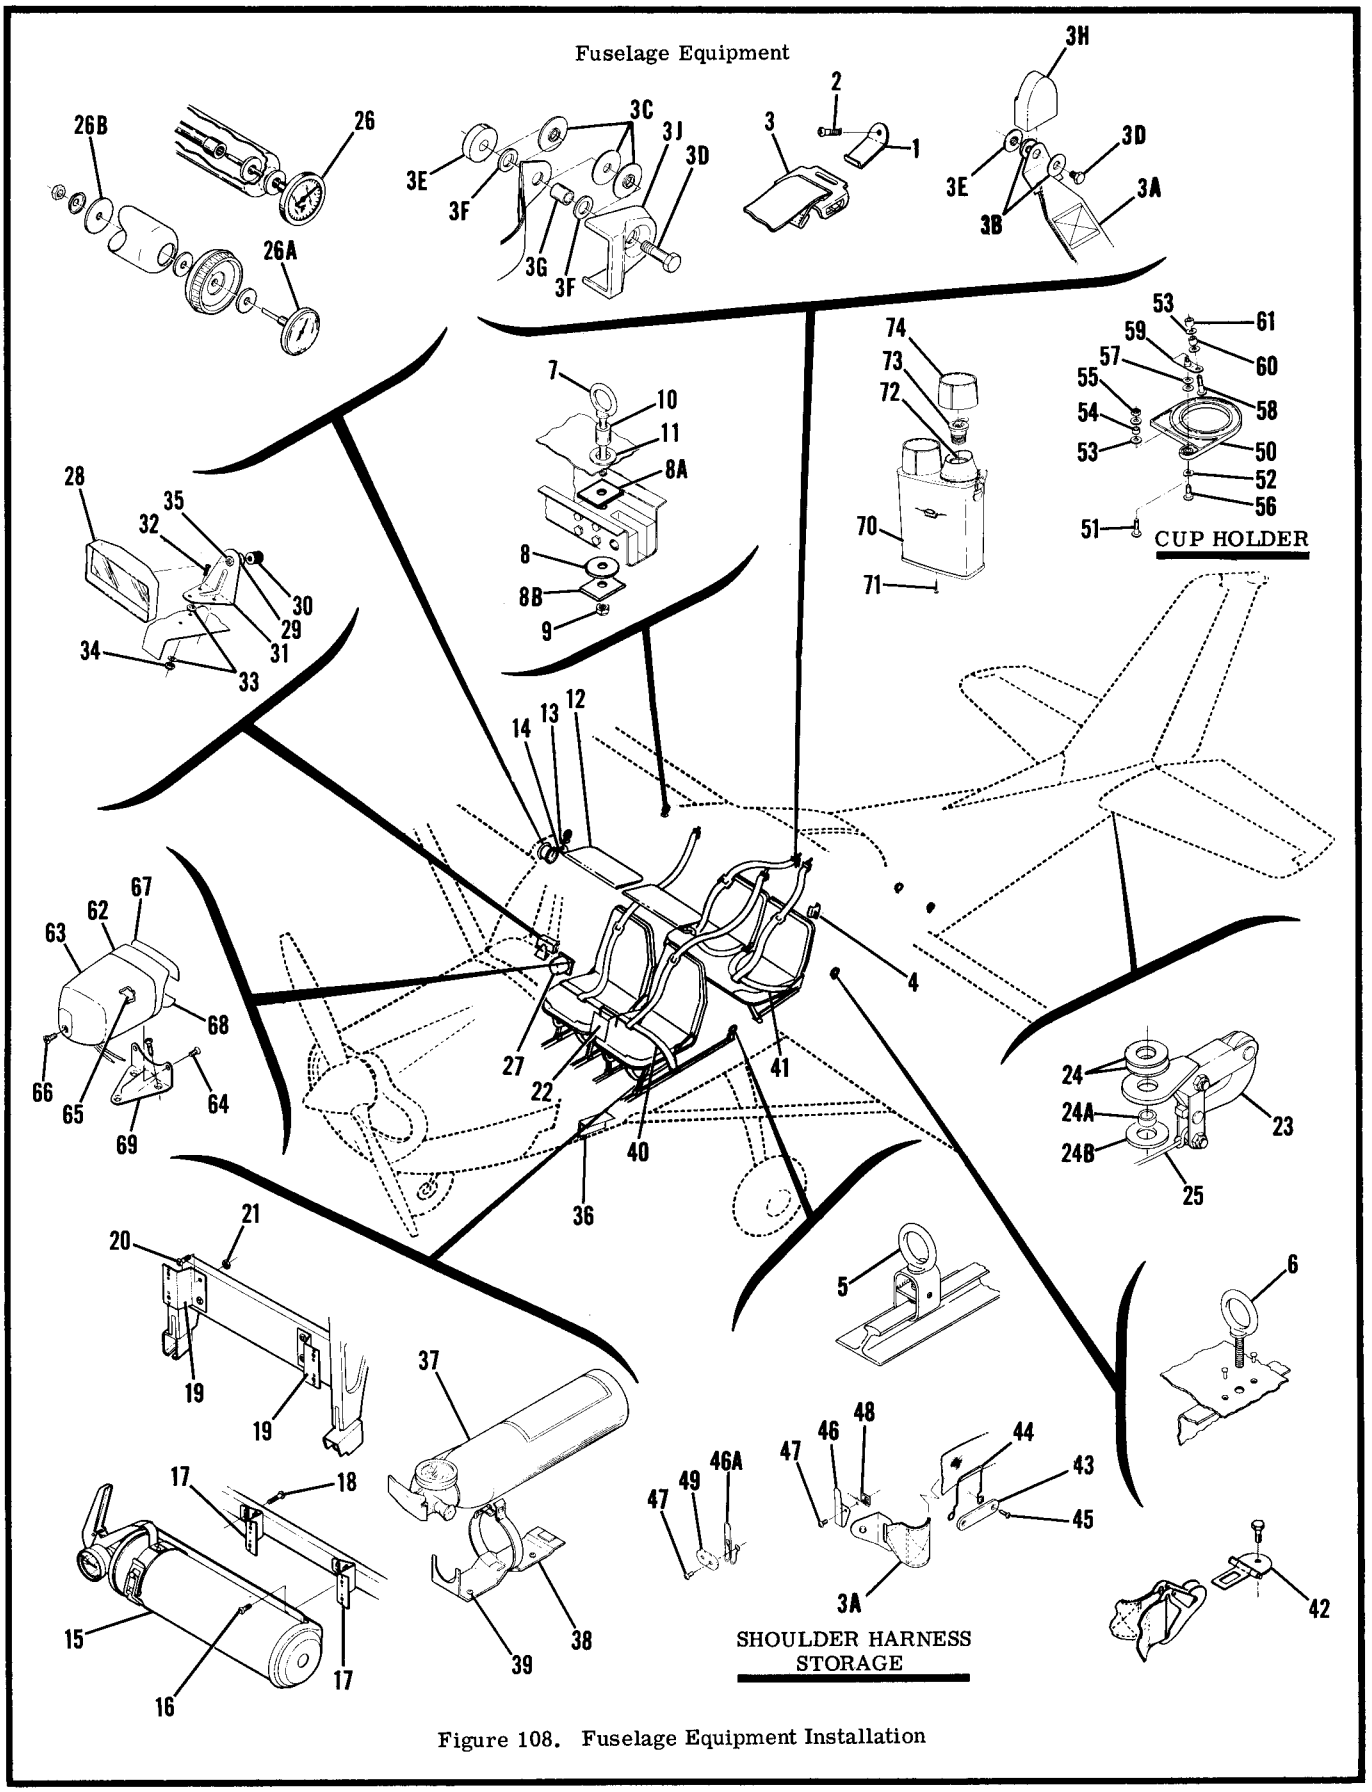


Figure 108. Fuselage Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
108 -		FUSELAGE EQUIPMENT INSTALLATION	NP	
- 1	0500223-3	HOOK-SHOULDER HARNESS REAR	2	N
	0511232-3	HOOK-SHOULDER HARNESS FRONT	2	N
		ATTACHING PARTS		
- 2	NAS221-10	SCREW	1	
		---*---		
- 3	S2029-1	SHOULDER HARNESS ASSEMBLY	4	N
- 3A	S2240W201	SHOULDER HARNESS ASSEMBLY BROWN	4	W
	S2240H201	SHOULDER HARNESS ASSEMBLY BLUE	4	W
	S2240G201	SHOULDER HARNESS ASSEMBLY GREEN	4	W
	S2240F201	SHOULDER HARNESS ASSEMBLY RED	4	W
	S2240B201	SHOULDER HARNESS ASSEMBLY BLACK	4	W
	S2240W201	SHOULDER HARNESS ASSEMBLY BROWN	4	X
	S2240L201	SHOULDER HARNESS ASSEMBLY BLUE	4	X
	S2240C201	SHOULDER HARNESS ASSEMBLY GREEN	4	X
	S2240A201	SHOULDER HARNESS ASSEMBLY RED	4	X
	S2240B201	SHOULDER HARNESS ASSEMBLY BLACK	4	X
	S2240W201	SHOULDER HARNESS ASSEMBLY GOLD	4	Y
	S2240U201	SHOULDER HARNESS ASSEMBLY BLUE	4	Y
	S2240AA201	SHOULDER HARNESS ASSEMBLY OLIVE	4	Y
	S2240Z201	SHOULDER HARNESS ASSEMBLY RED	4	Y
	S2240B201	SHOULDER HARNESS ASSEMBLY BLACK	4	Y
	S2240CC201	SHOULDER HARNESS ASSEMBLY BROWN	4	Z
	S2240BB201	SHOULDER HARNESS ASSEMBLY BLUE	4	Z
	S2240AA201	SHOULDER HARNESS ASSEMBLY GREEN	4	Z
	S2240T201	SHOULDER HARNESS ASSEMBLY RED	4	Z
	S2240DD201	SHOULDER HARNESS ASSEMBLY GOLD	4	Z
	S2240B201	SHOULDER HARNESS ASSEMBLY BLACK	4	Z
		ATTACHING PARTS		
- 3B	S2074-1	SPACER	2	AA
- 3C	S2074-1	SPACER	3	AB
- 3D	NAS464P4A8	BOLT FWD SHOULDER HARNESS	1	
	NAS464P4A6	BOLT REAR SHOULDER HARNESS	1	
- 3E	2013131-1	SPACER FWD SHOULDER HARNESS	1	P
- 3F	AN960-616	WASHER	2	AD
- 3G	NAS43HT4-22	SPACER	1	AD
- 3H	S2076-1	COVER	1	AA
- 3J	0415010-1	COVER	1	AC
		---*---		
- 4	10004-98	JACK POINT	1	N
	0541208-1	JACK PAD ASSEMBLY	1	AF
- 5	0711121-2	SLIDE ASSEMBLY-CARGO TIE-DOWN	2	
- 6	0511165	EYEBOLT-CARGO TIE-DOWN	6	
- 7	0541115-3	EYEBOLT-HOISTING	4	
		ATTACHING PARTS		
- 8	AN970-5	WASHER LWR	1	AE
- 8A	0541115-4	PLATE UPR	1	
- 8B	0541115-4	PLATE LWR	1	U
- 9	MS21042L5	NUT	1	
		---*---		
-10	0541115-2	SPACER	4	
-11	MS35489-17	GROMMET	4	
-12	0700122-1	SUN VISOR ASSEMBLY-LH	1	AG
	0700122-13	SUN VISOR ASSEMBLY-LH	1	D
	0700122-2	SUN VISOR ASSEMBLY-RH	1	AG
	0700122-12	SUN VISOR ASSEMBLY-RH	1	D
		ATTACHING PARTS		
-13	0713011-12	BRACKET-SUN VISOR	1	
-14	AN507-1032R14	SCREW	2	
		---*---		
-15	0800111-2	FIRE EXTINGUISHER	1	L
		ATTACHING PARTS		
-16	AN515-8R8	SCREW	4	L
	NAS680A08K	NUTPLATE	4	L
		---*---		
-17	1400054-2	BRACKET-FIRE EXTINGUISHER	2	C
		ATTACHING PARTS		
-18	AN515-8R12	SCREW	4	C
		---*---		
-19	0500120-2	SUPPORT ASSEMBLY-FIRE EXTINGUISHER ADJUSTABLE SEAT ONLY	2	C
		ATTACHING PARTS		
-20	AN515-8R16	SCREW	2	C
-21	MS21044N08	NUT	2	C
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
108 -22	0513165-1	CONTROL LOCK ASSEMBLY	1	A
	0513342-1	CONTROL LOCK ASSEMBLY	1	B
	0513385-2	CONTROL LOCK ASSEMBLY	1	E
	0513385-7	CONTROL LOCK ASSEMBLY	1	P
	SEE FIG 109	PORTABLE STRETCHER INSTALLATION	NP	
	0501019-1	TOW BAR	1	
	10004-101-1	TIRE EXPANDER	1	A
	SEE FIG 18	CUP-FUEL SAMPLER	1	
-23	0500228-2	TOW HOOK-GLIDER	1	
		ATTACHING PARTS		
-24	AN970-5	WASHER-TOW HOOK	2	
-24A	0500228-5	BUSHING	1	
-24B	S1450-5-14	WASHER	1	
		---*---		
-25	0500228-3	CORD-TOW HOOK	1	
-26	S1322-1	GAGE-OUTSIDE AIR TEMPERATURE WEU C668507-0101	1	J
-26A	C668507-0101	GAGE-OUTSIDE AIR TEMPERATURE	1	K
-26B	S1450-5A24-040	WASHER USED WITH C668507-0101	1	K
-27	0713068-1	COMPASS ASSEMBLY WHEN EXHAUSTED USE C660501-0201	1	G
	C660501-0201	COMPASS ASSEMBLY	1	H
		ATTACHING PARTS		
	AN515B6R12	SCREW	2	
		---*---		
		REAR VIEW MIRROR INSTALLATION	NP	D
-28	0500312-2	MIRROR & COVER ASSEMBLY	1	
		ATTACHING PARTS		
-29	S1450-4A11-.063	WASHER	1	
-30	0500313-1	NUT-REAR VIEW MIRROR	1	
		---*---		
-31	0500310-1	BRACKET ASSEMBLY	1	
		ATTACHING PARTS		
-32	AN5078832R8	SCREW	3	
-33	S1450-3A14-.050	WASHER	4	
-34	MS203658832C	NUT	3	
		---*---		
-35	MS35489-6	GROMMET-BRACKET ASSEMBLY	1	
-36	SEE FIG 110	STEP & HANDLE INSTALLATION	1	F
-37	C421001-0101	FIRE EXTINGUISHER	1	M
-38	C421001-0102	BRACKET ASSEMBLY-FIRE EXTINGUISHER	1	M
		ATTACHING PARTS		
-39	AN520-10R8	SCREW	4	M
	NAS680A3	NUTPLATE	4	M
		---*---		
-40	SEE FIG 87	SAFETY BELT ASSEMBLY-FRONT SEAT	2	Q
	SEE FIG 88	SAFETY BELT ASSEMBLY-FRONT SEAT	2	R
	S2240W103 *	SAFETY BELT ASSEMBLY-FRONT SEAT BROWN	2	W
	S2240H103 *	SAFETY BELT ASSEMBLY-FRONT SEAT BLUE	2	W
	S2240C103 *	SAFETY BELT ASSEMBLY-FRONT SEAT GREEN	2	W
	S2240F103 *	SAFETY BELT ASSEMBLY-FRONT SEAT RED	2	W
	S2240B103 *	SAFETY BELT ASSEMBLY-FRONT SEAT BLACK	2	W
	S2240W103 *	SAFETY BELT ASSEMBLY-FRONT SEAT BROWN	2	X
	S2240L103 *	SAFETY BELT ASSEMBLY-FRONT SEAT BLUE	2	X
	S2240C103 *	SAFETY BELT ASSEMBLY-FRONT SEAT GREEN	2	X
	S2240A103 *	SAFETY BELT ASSEMBLY-FRONT SEAT RED	2	X
	S2240B103 *	SAFETY BELT ASSEMBLY-FRONT SEAT BLACK	2	X
	S2240W103 *	SAFETY BELT ASSEMBLY-FRONT SEAT GOLD	2	Y
	S2240U103 *	SAFETY BELT ASSEMBLY-FRONT SEAT BLUE	2	Y
	S2240AA103 *	SAFETY BELT ASSEMBLY-FRONT SEAT OLIVE	2	Y
	S2240Z103 *	SAFETY BELT ASSEMBLY-FRONT SEAT RED	2	Y
	S2240B103 *	SAFETY BELT ASSEMBLY-FRONT SEAT BLACK	2	Y
	S2240CC103 *	SAFETY BELT ASSEMBLY-FRONT SEAT BROWN	2	Z
	S2240BB103 *	SAFETY BELT ASSEMBLY-FRONT SEAT BLUE	2	Z
	S2240AA103 *	SAFETY BELT ASSEMBLY-FRONT SEAT GREEN	2	Z
	S2240T103 *	SAFETY BELT ASSEMBLY-FRONT SEAT RED	2	Z
	S2240DD103 *	SAFETY BELT ASSEMBLY-FRONT SEAT GOLD	2	Z
	S2240B103 *	SAFETY BELT ASSEMBLY-FRONT SEAT BLACK	2	Z
		ATTACHING PARTS		
	AN4-6A	BOLT	2	
	NAS43HT4-22	SPACER	2	
	MS21042L4	NUT	2	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
108 -41	SEE FIG 95		SEAT BELT ASSY-REAR SEAT	2	S
	S1746W13		SEAT BELT ASSY-REAR SEAT BROWN	2	W
	S1746H13		SEAT BELT ASSY-REAR SEAT BLUE	2	W
	S1746G13		SEAT BELT ASSY-REAR SEAT GREEN	2	W
	S1746F13		SEAT BELT ASSY-REAR SEAT RED	2	W
	S1746B13		SEAT BELT ASSY-REAR SEAT BLACK	2	W
	S1746W13		SEAT BELT ASSY-REAR SEAT BROWN	2	X
	S1746L13		SEAT BELT ASSY-REAR SEAT BLUE	2	X
	S1746C13		SEAT BELT ASSY-REAR SEAT GREEN	2	X
	S1746A13		SEAT BELT ASSY-REAR SEAT RED	2	X
	S1746B13		SEAT BELT ASSY-REAR SEAT BLACK	2	X
	S1746W13		SEAT BELT ASSY-REAR SEAT GOLD	2	Y
	S1746U13		SEAT BELT ASSY-REAR SEAT BLUE	2	Y
	S1746AA13		SEAT BELT ASSY-REAR SEAT OLIVE	2	Y
	S1746Z13		SEAT BELT ASSY-REAR SEAT RED	2	Y
	S1746B13		SEAT BELT ASSY-REAR SEAT BLACK	2	Y
	S1746CC13		SEAT BELT ASSY-REAR SEAT BROWN	2	Z
	S1746BB13		SEAT BELT ASSY-REAR SEAT BLUE	2	Z
	S1746AA13		SEAT BELT ASSY-REAR SEAT GREEN	2	Z
	S1746T13		SEAT BELT ASSY-REAR SEAT RED	2	Z
	S1746DD13		SEAT BELT ASSY-REAR SEAT GOLD	2	Z
	S1746B13		SEAT BELT ASSY-REAR SEAT BLACK	2	Z
	S2240W108	%	SEAT BELT ASSY-REAR SEAT BROWN	2	W
	S2240H108	%	SEAT BELT ASSY-REAR SEAT BLUE	2	W
	S2240G108	%	SEAT BELT ASSY-REAR SEAT GREEN	2	W
	S2240F108	%	SEAT BELT ASSY-REAR SEAT RED	2	W
	S2240B108	%	SEAT BELT ASSY-REAR SEAT BLACK	2	W
	S2240W108	%	SEAT BELT ASSY-REAR SEAT BROWN	2	X
	S2240L108	%	SEAT BELT ASSY-REAR SEAT BLUE	2	X
	S2240C108	%	SEAT BELT ASSY-REAR SEAT GREEN	2	X
	S2240A108	%	SEAT BELT ASSY-REAR SEAT RED	2	X
	S2240B108	%	SEAT BELT ASSY-REAR SEAT BLACK	2	X
	S2240W108	%	SEAT BELT ASSY-REAR SEAT GOLD	2	Y
	S2240U108	%	SEAT BELT ASSY-REAR SEAT BLUE	2	Y
	S2240AA108	%	SEAT BELT ASSY-REAR SEAT OLIVE	2	Y
	S2240Z108	%	SEAT BELT ASSY-REAR SEAT RED	2	Y
	S2240B108	%	SEAT BELT ASSY-REAR SEAT BLACK	2	Y
	S2240CC108	%	SEAT BELT ASSY-REAR SEAT BROWN	2	Z
	S2240BB108	%	SEAT BELT ASSY-REAR SEAT BLUE	2	Z
	S2240AA108	%	SEAT BELT ASSY-REAR SEAT GREEN	2	Z
	S2240T108	%	SEAT BELT ASSY-REAR SEAT RED	2	Z
	S2240DD108	%	SEAT BELT ASSY-REAR SEAT GOLD	2	Z
	S2240B108	%	SEAT BELT ASSY-REAR SEAT BLACK	2	Z
			ATTACHING PARTS		
	AN4-6A		BOLT	2	
	NAS43HT4-10		SPACER	2	
	AN960-416		WASHER	2	Z
	MS21042L4		NUT	2	
			---*---		
-42	0711083-1		LATCH ASSEMBLY	2	
			ATTACHING PARTS		
	AN4-6A		BOLT	2	
			---*---		
-43	S2081-2		COVER-SHOULDER HARNESS CLIP	AR	
-44	S2081-1		CLIP-SHOULDER HARNESS STORAGE	AR	
			ATTACHING PARTS		
-45	S1023A6-8C		SCREW	2	
			---*---		
-46	S2080-1		HOOK-SHOULDER HARNESS STORAGE	2	V
-46A	S2081-5		HOOK-SHOULDER HARNESS STORAGE	2	Y
			ATTACHING PARTS		
-47	S1021Z4-6C		SCREW	2	
-48	NAS446-1-3		NUT	2	
			---*---		
-49	S2081-4		COVER-SHOULDER HARNESS CLIP	2	Y

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
108 -50	0501022-1	CUP HOLDER	2	T
		ATTACHING PARTS		
-51	AN525-10R14	SCREW RH	1	T
-52	S1357-3	WASHER	1	T
-53	AN960-10L	WASHER	2	T
-54	NAS43DD3-8	SPACER RH	1	T
-55	MS21044N3	NUT RH	1	T
-56	AN525-10R12	SCREW LH	1	T
-57	AN960-10	WASHER LH	2	T
-58	AN525-832R20	SCREW LH	1	T
-59	0513437-2	BRACKET ASSY LH	1	T
-60	NAS43DD3-26	SPACER LH	1	T
-61	NAS43DD3-19	SPACER LH	1	T
		---*---		
		COMPASS INSTALLATION	NP	U
-62	0413517-13	BEZEL-COMPASS	1	
-63	0413517-12	CUP-COMPASS	1	
		ATTACHING PARTS		
-64	AN510B4R8	SCREW	2	
		---*---		
-65	C660501-0101	COMPASS	1	
		ATTACHING PARTS		
-66	AN507B832R14	SCREW	1	
		---*---		
-67	0400213-5	PLACARD	1	
-68	0400213-4	PLACARD	1	
-69	SEE FIG 33	BRACKET	1	
-70	C733001-0101	TWIN PACK ASSY-BEVERAGE	1	U
-71	S1021A10-16	SCREW	2	
-72	01	FILLER LFC	2	
-73	C733001-0103	STOPPER	2	
-74	1195-0061	CAP LFC	2	

NOTE. *WHEN ORDERING SEAT BELTS FOR AUSTRALIAN USE, ADD VH TO PART NUMBER. EXAMPLE-S2240W103VH

NOTE. %THESE SEAT BELTS ARE TO BE USED ON AIRPLANES EQUIPPED WITH SHOULDER HARNESS.

A---172 SERIAL 17249545 THRU 17250572
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0018
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17250573 THRU 17253392
F172 SERIAL F172-0019 THRU F172-0179
C---172 SERIAL 17250573 THRU 17251822
F172 SERIAL F172-0019 THRU F172-0085
D---172 SERIAL 17251823 THRU 17263458
F172 SERIAL F172-0086 THRU F17201234
E---172 SERIAL 17253393 THRU 17259223
F172 SERIAL F172-0180 THRU F17200754
F---172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
G---172 SERIAL 17249545 THRU 17258170
F172 SERIAL F172-0001 THRU F17200739
H---172 SERIAL 17258171 THRU 17259903
F172 SERIAL F17200740 THRU F17200804
J---172 SERIAL 17249545 THRU 17257175
F172 SERIAL F172-0001 THRU F172-0619
K---172 SERIAL 17257176 THRU 17263458
F172 SERIAL F172-0620 THRU F17201234
L---172 SERIAL 17249545 THRU 17258890
F172 SERIAL F172-0001 THRU F17200754
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
M---172 SERIAL 17258891 THRU 17263458
F172 SERIAL F17200755 THRU F17201234

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
108 -		N---172 SERIAL 17249545 THRU 17259223 F172 SERIAL F172-0001 THRU F17200754 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 P---172 SERIAL 17259224 THRU 17263458 F172 SERIAL F17200755 THRU F17201234 Q---172 SERIAL 17249545 THRU 17256512 F172 SERIAL F172-0001 THRU F172-0431 F172-0436 THRU F172-0442 F172-0444 THRU F172-0446 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 R---172 SERIAL 17256513 THRU 17259223 F172 SERIAL F172-0432 THRU F172-0435 F172-0443, F172-0447, THRU F17200754 S---172 SERIAL 17249545 THRU 17259223 F172 SERIAL F172-0001 THRU F17200754 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 T---172 SERIAL 17259904 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 U---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200905 THRU F17201234 V---172 SERIAL 17259224 THRU 17260758 F172 SERIAL F17200755 THRU F17200905 W---172 SERIAL 17259224 THRU 17259903 F172 SERIAL F17200755 THRU F17200804 X---172 SERIAL 17259904 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 Y---172 SERIAL 17260759 THRU 17261898 F172 SERIAL F17200905 THRU F17201034 Z---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234 AA---172 SERIAL 17259224 THRU 17262310 F172 SERIAL F17200755 THRU F1721224 AB---172 SERIAL 17262311 THRU 17263049 F172 SERIAL F17201225 THRU F17201234 AC---172 SERIAL 17262311 THRU 17263458 F172 SERIAL F17201225 THRU F17201234 AD---172 SERIAL 17263050 THRU 17263458 AE---172 SERIAL 17249545 THRU 17260758 F172 SERIAL F172-0001 THRU F17200904 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 AF---172 SERIAL 17259224 THRU 17260554 F172 SERIAL F17200755 THRU F1720879 AG---172 SERIAL 17249545 THRU 17251822 F172 SERIAL F172-0001 THRU F172-0085		

Fuselage Equipment (Cont)


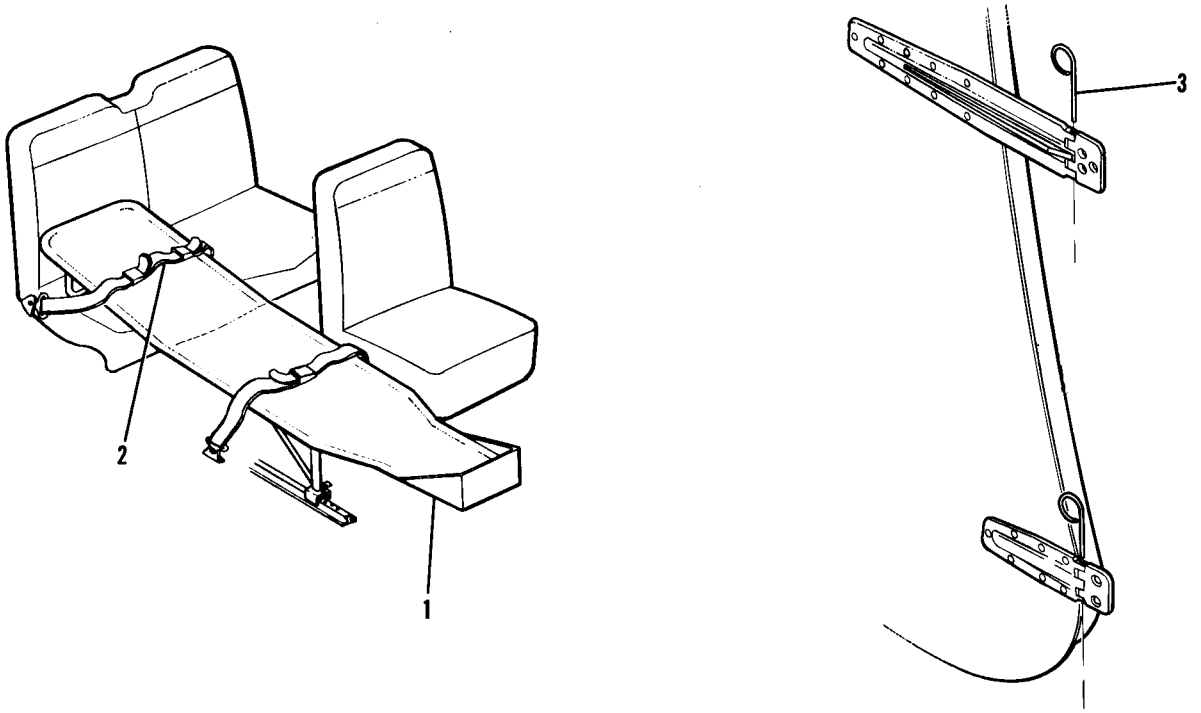


Figure 109. Portable Stretcher Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
109 -		STRETCHER INSTALLATION-PORTABLE	NP	
- 1	0700164-6	STRETCHER-PORTABLE	1	
- 2	FDC2475-50	BELT-EXTENSION DAPI	1	
	S1809-1	BELT-EXTENSION METAL TO METAL BUCKLE	1	
- 3	S1426-2	PIN-HINGE	2	

Fuselage Equipment (Cont)

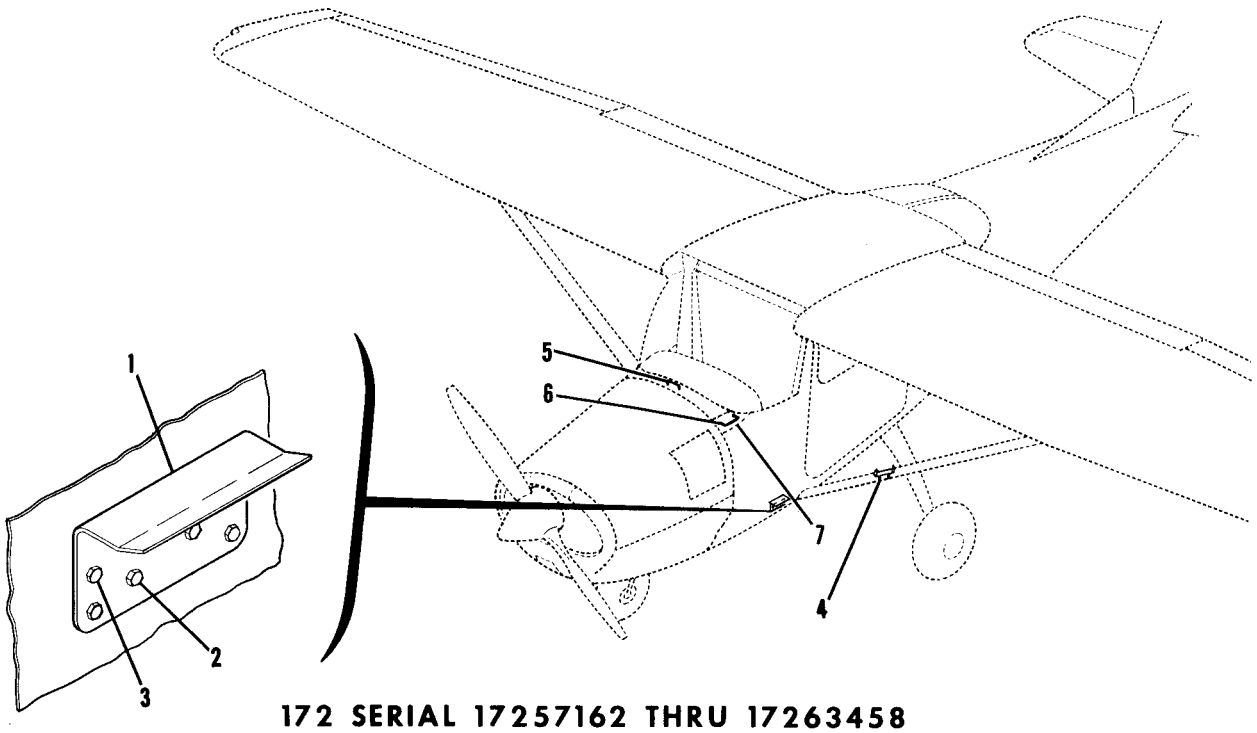

172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234


Figure 110. Step & Handle Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
110 -		STEP & HANDLE INSTALLATION-REFUELING	NP	A
- 1	0513395-1	STEP-LH	1	
	0513395-2	STEP-RH	1	
		ATTACHING PARTS		
- 2	AN3-4A	BOLT	6	
	MS21044N3	NUT	6	
	AN960D10L	WASHER	5	
- 3	AN970-3	WASHER	1	
		---*---		
- 4	0500276-1	STEP ASSEMBLY-STRUT LH	1	
	0500276-2	STEP ASSEMBLY-STRUT RH	1	
		ATTACHING PARTS		
	AN3-3A	BOLT	2	
	MS21044N3	NUT	2	
	AN960D10L	WASHER	2	
		---*---		
- 5	1613224-2	HANDLE-ASSIST	1	B
- 6	1613224-2	HANDLE-ASSIST	2	C
		ATTACHING PARYS		
	S1450-4H12-050	WASHER UPR	2	
	AN960-416L	WASHER LWR	2	
	MS21042L4	NUT	2	
		---*---		
- 7	0513429-1	DOUBLER-LH	1	
	0513429-2	DOUBLER-RH	1	

A---172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
B---172 SERIAL 17257162 THRU 17259713
F172 SERIAL F172-0560 THRU F17200804
C---172 SERIAL 17259714 THRU F17263458
F172 SERIAL F17200805 THRU F17201234

This page intentionally left blank.

Propeller

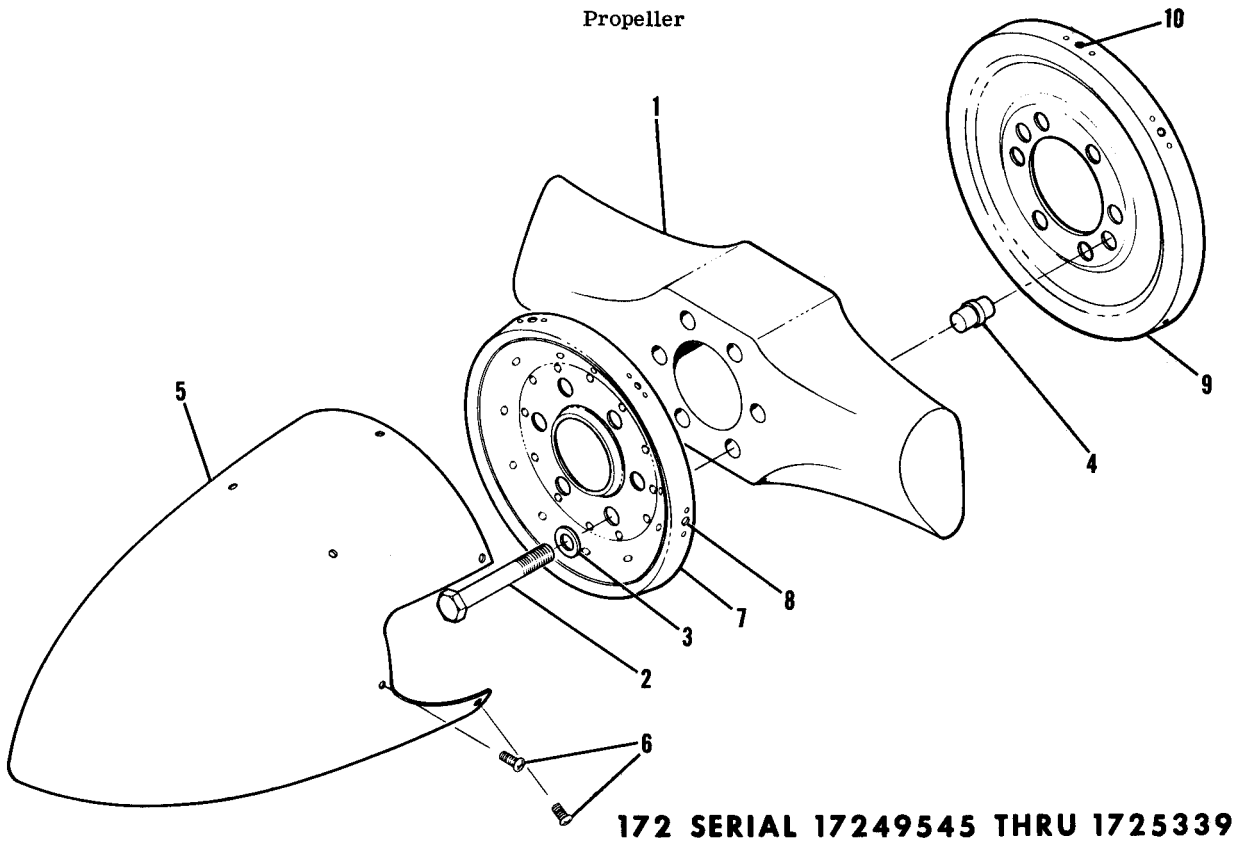


172 SERIAL 17249545 THRU 17253392

Figure 111. Propeller Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
111 -			PROPELLER INSTALLATION	NP	A
- 1	0550211-2		PROPELLER-CRUISE MCL 1C172/EM7653	1	
	0550211-3		PROPELLER-CLIMB MCL 1C172/EM7651	1	B
	0550292-1		PROPELLER FLOATPLANE ONLY MCL 1A175/SFC8040	1	
			ATTACHING PARTS		
- 2	A2513-16		BOLT MCL	6	
- 3	AN960-816L		WASHER	12	
	MS20365-820C		NUT	6	
- 4	A2371		DOWEL	2	
			---*---		
			SPINNER ASSEMBLY	NP	
- 5	0550228-28	*	DOME	1	
			ATTACHING PARTS		
- 6	AN525-832R7		SCREW	12	
			---*---		
- 7	0550228-3		BULKHEAD ASSEMBLY-FORWARD	1	
- 8	AN680A08		NUTPLATE	6	
- 9	0550228-26	*	BULKHEAD ASSEMBLY-AFT	1	
	0550228-35	*	BULKHEAD ASSEMBLY-AFT FLOATPLANE ONLY	1	
-10	NAS680A08		NUTPLATE	6	
			NOTE*.FOR AIRCRAFT PRIOR TO 17250380 THAT HAVE NOT BEEN EQUIPPED WITH THE SPINNER SHOWN ABOVE, ORDER SK172-17 OR FOR FLOATPLANES ORDER SK172-18.		
			A---172 SERIAL 17249545 THRU 17253392 F172 SERIAL F172-0001 THRU F172-0179 B---172 SERIAL 17251823 THRU 17253392		

Propeller (Cont)

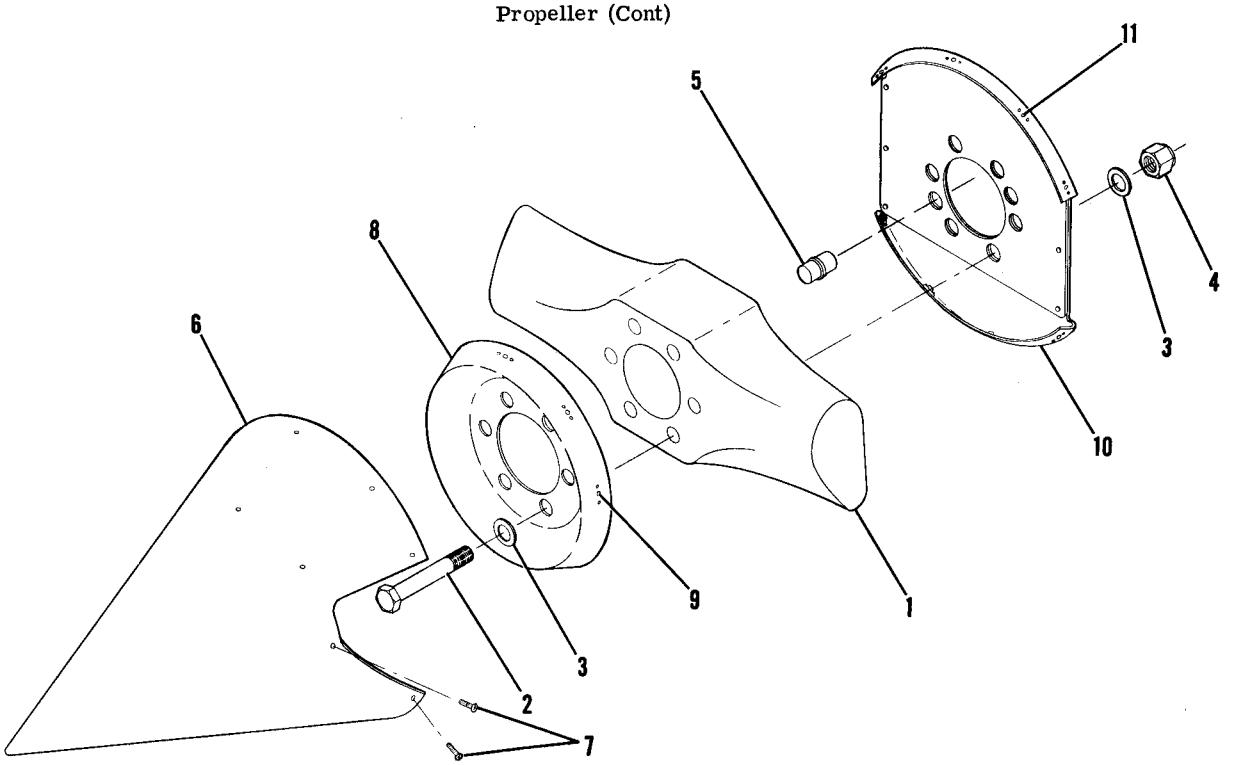


F172 SERIAL F172-0180 THRU 17259903
172 SERIAL 17253393 THRU 17256512

Figure 112. Propeller Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
112 -		PROPELLER INSTALLATION	NP	A
- 1	0550211-2	PROPELLER-CRUISE MCL 1C172/EM7653	1	
	0550211-3	PROPELLER-CLIMB MCL 1C172/EM7651	1	
	0550292-1	PROPELLER FLOATPLANE ONLY MCL 1A175SFC8040	1	
		ATTACHING PARTS		
- 2	A2513-16	BOLT MCL	6	
- 3	AN960-816L	WASHER	12	
- 4	MS20365-820C	NUT	6	
- 5	A2371	DOWEL	2	
		---*---		
		SPINNER ASSEMBLY	NP	
- 6	0550236-8	SPINNER DOME	1	
		ATTACHING PARTS		
- 7	AN525-832R7	SCREW	14	
		---*---		
- 8	0550236-6	BULKHEAD ASSEMBLY-FORWARD	1	
	0550236-10	BULKHEAD ASSEMBLY-FORWARD FLOATPLANE ONLY	1	
- 9	NAS680A08	NUTPLATE	6	
-10	0550236-3	BULKHEAD ASSEMBLY-AFT	1	
-11	NAS697A08	NUTPLATE	8	
		A---172 SERIAL 17253393 THRU 17256512 F172 SERIAL F172-0180 THRU F17200804		

Propeller (Cont)

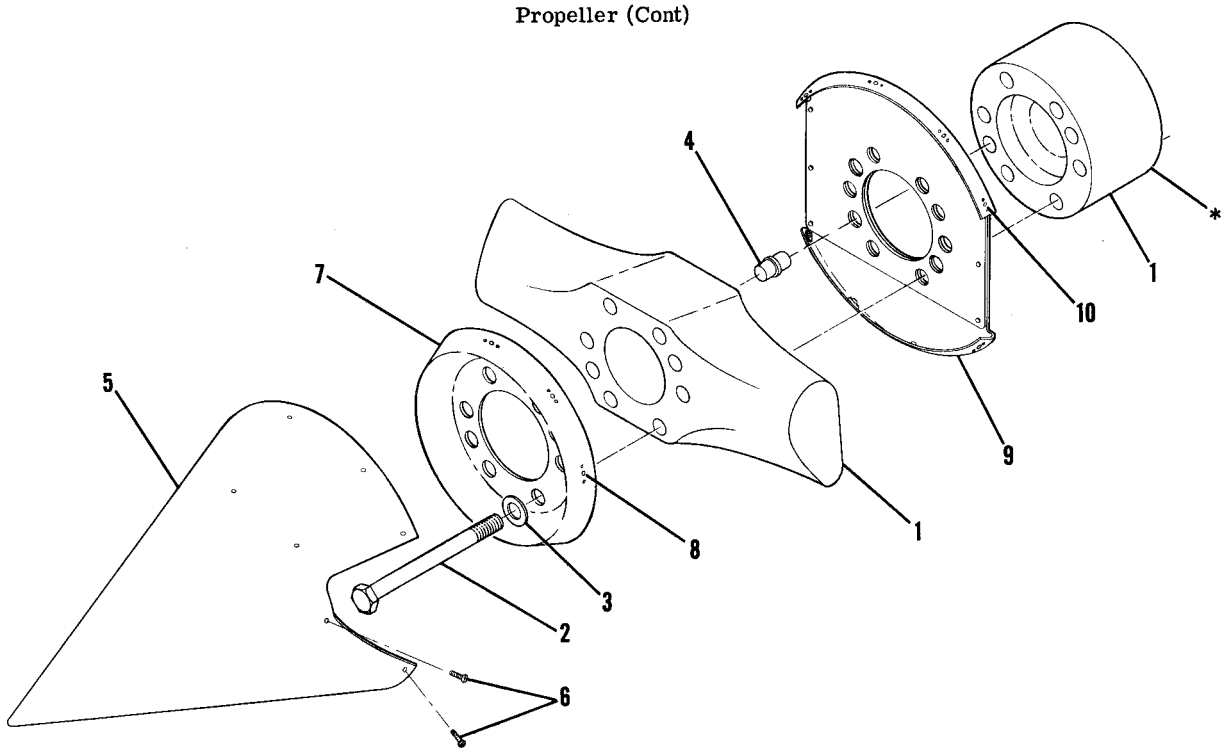


172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Figure 113. Propeller Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
113 -		PROPELLER INSTALLATION	NP	A
- 1	C161001-0305	PROPELLER ASSEMBLY	1	B
	C161001-0306	PROPELLER ASSEMBLY	1	C
	C161001-0309	PROPELLER ASSEMBLY ALT	1	C
	C161001-0304	PROPELLER ASSEMBLY FLOATPLANE ONLY	1	B
	C161001-0307	PROPELLER ASSEMBLY FLOATPLANE ONLY	1	C
	C161001-0308	PROPELLER ASSEMBLY FLOATPLANE ONLY ALT	1	C
		ATTACHING PARTS		
- 2	A2513-38	BOLT MCL	6	
- 3	A1638-11	WASHER MCL	6	
- 4	A2973-6	DOWEL	2	
		---*---		
- 5	0550236-8	SPINNER	1	
		ATTACHING PARTS		
- 6	AN525-832R7	SCREW	14	
		---*---		
- 7	0550321-4	BULKHEAD ASSEMBLY-FWD	1	
- 8	NAS680A3	NUTPLATE	6	
- 9	0550321-10	BULKHEAD ASSEMBLY-AFT	1	
-10	NAS697A08	NUTPLATE	8	
		NOTE. *USE ONLY THE SPACER PROVIDED WITH PROPELLER ASSY.		
		A---172 SERIAL 17256513 THRU 17263458 F172 SERIAL F17200805 THRU F17201234		
		B---172 SERIAL 17256513 THRU 17261898 F172 SERIAL F17200805 THRU F17201034		
		C---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234		

This page intentionally left blank.

Propeller (Cont)

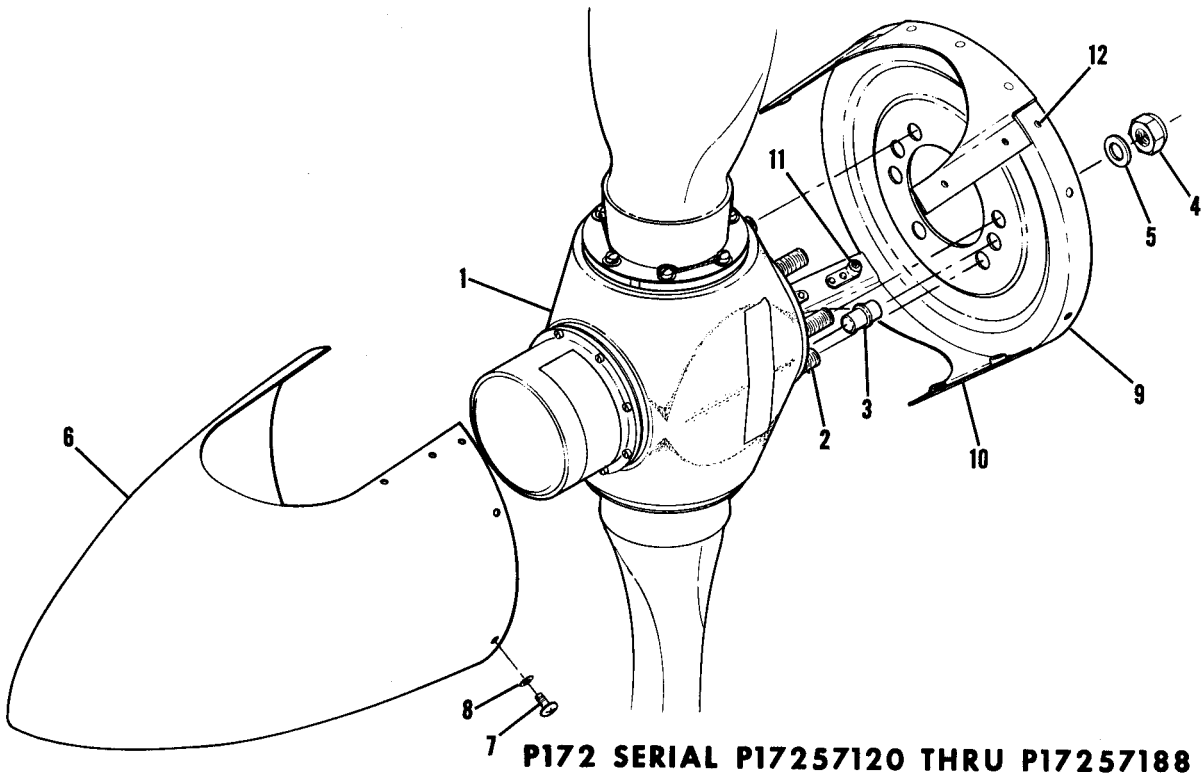

P172 SERIAL P17257120 THRU P17257188


Figure 114. Constant Speed Propeller Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
114 -		PROPELLER INSTALLATION-CONSTANT SPEED MCCAULEY	NP	A
- 1	0552012-5 *	PROPELLER ASSEMBLY MCCAULEY 2A31C21/84S	1	
		ATTACHING PARTS		
- 2	A2947-2	BOLT-HUB MOUNTING MCL	6	
- 3	A1562	DOWEL-HUB ALIGNMENT MCL	2	
- 4	A1639-2	NUT MCL	6	
- 5	A1638-2	WASHER MCL	6	
		---*---		
- 6	0552016-1	SPINNER ASSEMBLY	1	
		ATTACHING PARTS		
- 7	AN515-8R8	SCREW	16	
- 8	AN960-8L	WASHER	16	
		---*---		
- 9	0552016-3	BULKHEAD ASSEMBLY	1	
-10	0552016-4	FILLET	2	
-11	NAS680A08	NUTPLATE	12	
-12	NAS682A08	NUTPLATE	4	

NOTE. *REFER TO APPLICABLE MCCAULEY MANUAL FOR BREAKDOWN.

A---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Cowling

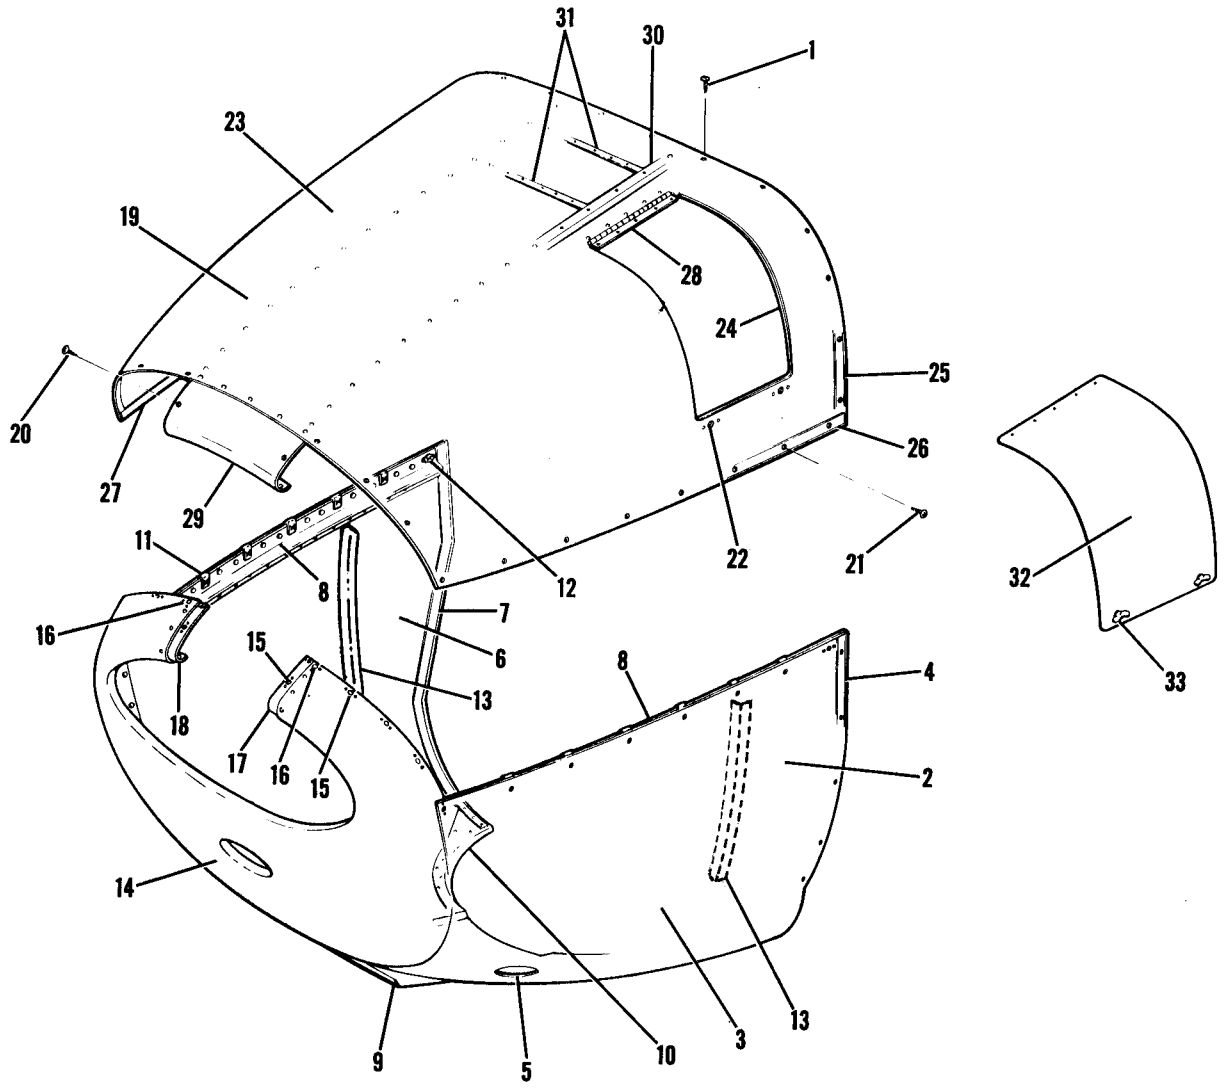


172 SERIAL 17249545 THRU 17253392

Figure 115. Engine Cowl Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
115 -		COWL ASSEMBLY-ENGINE	NP	A
		ATTACHING PARTS		
- 1	S1021Z8-8	SCREW	27	
		---*---		
- 2	0552010-2	COWL ASSEMBLY-LOWER	1	
- 3	0552010-7	SPOTWELD ASSEMBLY-LH	1	
- 4	0552010-21	DOUBLER	1	
- 5	0552003-39	DOUBLER	1	
- 6	0552010-8	SPOTWELD ASSEMBLY-RH	1	
- 7	0552010-22	DOUBLER	1	
	0552003-39	DOUBLER	1	
- 8	0552010-26	STIFFENER-RH	1	
	0552010-25	STIFFENER-LH	1	
- 9	0552010-43	AIR SCOOP WEU 0552010-82	1	
	0552010-82	AIR SCOOP	1	
-10	0552010-44	LIP-COWL	1	
-11	A1788-8Z-1	NUT TIN	12	
-12	A6191-8Z-1	NUT TIN	2	
-13	0552010-54	STIFFENER	2	
-14	0552010-4	NOSE CAP ASSEMBLY-LOWER	1	
-15	NAS697A08	NUTPLATE	12	
-16	NAS698A08	NUT-ANCHOR	2	
-17	0552010-45	DOUBLER-LH	1	
-18	0552010-46	DOUBLER-RH	1	
-19	0552010-53	COWL ASSEMBLY-UPPER LESS DOOR	1	
		ATTACHING PARTS		
-20	AN515-8R8	SCREW	16	
-21	S1021Z8-8	SCREW	14	
		---*---		
-22	99833-P.098	RECEPTACLE-STUD MKL	2	
-23	0552010-6	SPOTWELD ASSEMBLY	1	
-24	0552010-18	DOUBLER-DOOR OPENING	1	
-25	0552010-20	DOUBLER	1	
-26	0552010-27	DOUBLER-LH	1	
-27	0552010-28	DOUBLER-RH	1	
-28	0552010-14	HINGE ASSEMBLY	1	
	0552010-42	PIN-HINGE	1	
-29	0552010-17	SKIN-NOSE CAP	1	
-30	0552010-38	STIFFENER-LH	1	
	0552010-39	STIFFENER-RH	1	
-31	0552010-47	STIFFENER	2	
-32	0552010-49	DOOR ASSEMBLY	1	
-33	W98292-2-180	STUD MKL	2	
	99836	PIN MKL	2	
	99874-1	GROMMET MKL	2	
	121615	FILTER-CARBURETOR AIR INTAKE AMA	1	A

A---172 SERIAL 17249545 THRU 17253392
F172 SERIAL F172-0001 THRU F172-0179

Cowling (Cont)

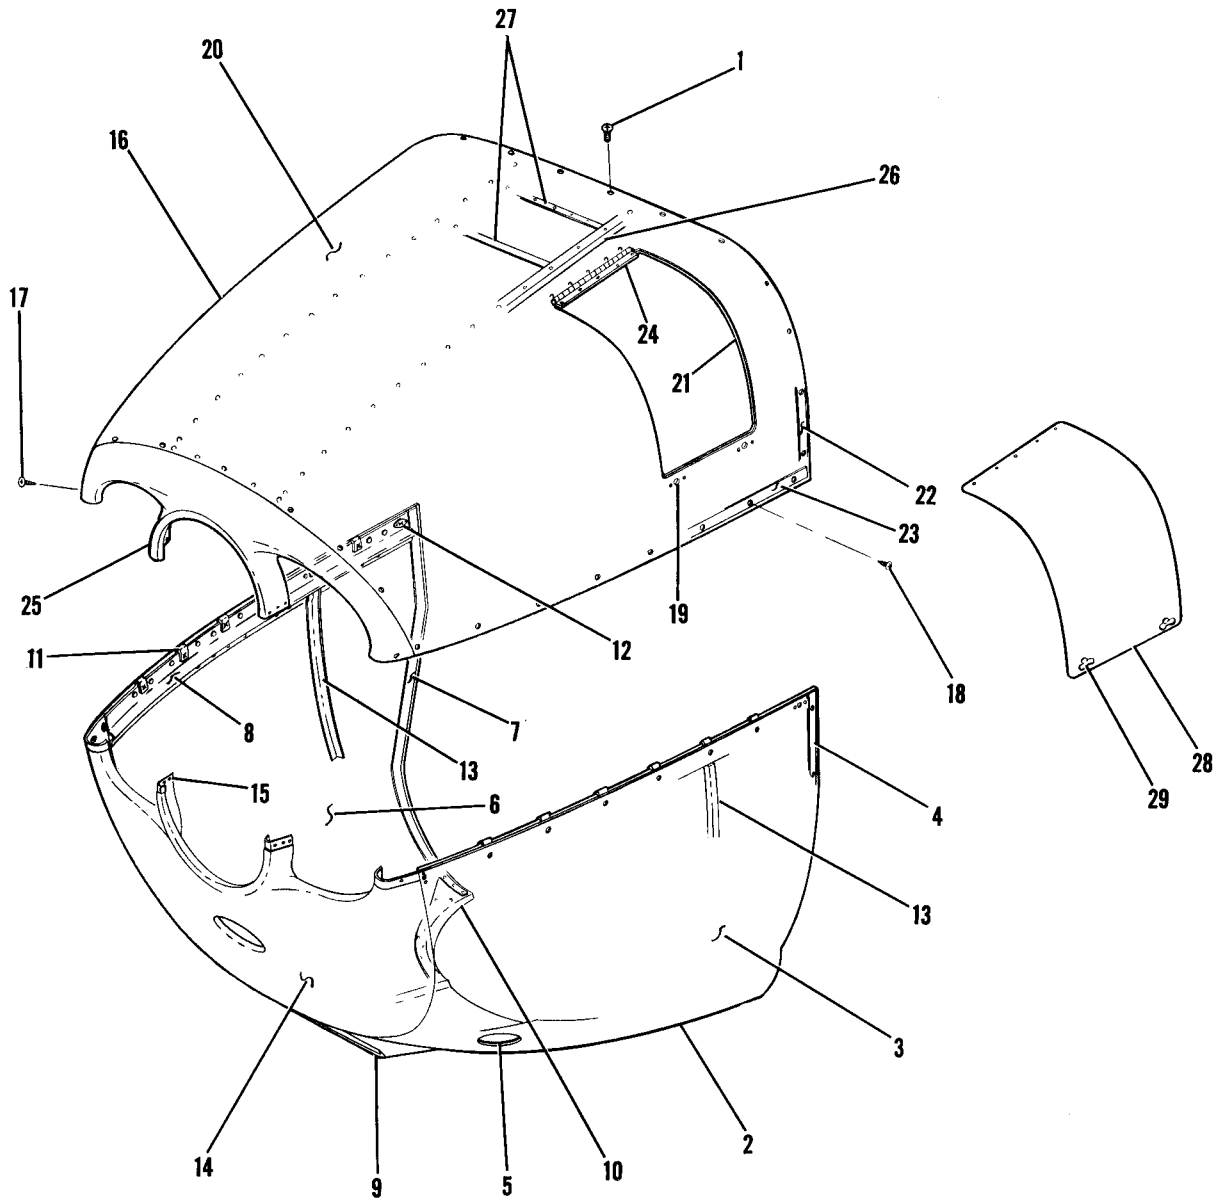


172 SERIAL 17253393 THRU 17254892

Figure 116. Engine Cowl Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
116 -		COWL ASSEMBLY-ENGINE	NP	A
		ATTACHING PARTS		
- 1	S1021Z8-8	SCREW	27	
		---*---		
- 2	0552010-56	COWL ASSEMBLY-LOWER	1	
- 3	0552010-7	SPOTWELD ASSEMBLY-LH	1	
- 4	0552010-21	DOUBLER	1	
- 5	0552003-39	DOUBLER	1	
- 6	0552010-8	SPOTWELD ASSEMBLY-RH	1	
- 7	0552010-22	DOUBLER	1	
	0552003-39	DOUBLER	1	
- 8	0552010-86	STIFFENER-RH	1	
	0552010-60	STIFFENER-LH	1	
- 9	0552010-43	AIR SCOOP WEU 0552010-82	1	
	0552010-82	AIR SCOOP	1	
-10	0552010-44	LIP-COWL	1	
-11	A1788-8Z-1	NUT TIN	12	
-12	A6191-8Z-1	NUT TIN	2	
-13	0552010-54	STIFFENER	2	
-14	0552019-1	NOSE CAP ASSEMBLY-LOWER	1	
-15	NAS697A08	NUTPLATE	12	
-16	0552010-200	COWL ASSEMBLY-UPPER LESS DOOR	1	
		ATTACHING PARTS		
-17	AN515-8R8	SCREW	12	
-18	S1021Z8-8	SCREW	14	
		---*---		
-19	99833-P.098	RECEPTACLE MKL	2	
-20	0552010-59	SPOTWELD ASSEMBLY	1	
-21	0552010-18	DOUBLER-DOOR OPENING	1	
-22	0552010-20	DOUBLER	1	
-23	0552010-27	DOUBLER-LH	1	
	0552010-28	DOUBLER-RH	1	
-24	0552010-14	HINGE ASSEMBLY	1	
	0552010-42	PIN-HINGE	1	
-25	0552019-6	NOSE CAP-UPPER	1	
-26	0552010-38	STIFFENER-LH	1	
	0552010-39	STIFFENER-RH	1	
-27	0552010-47	STIFFENER	2	
-28	0552010-49	DOOR ASSEMBLY	1	
-29	W98292-2-180	STUD MKL	2	
	99836	PIN MKL	2	
	99874-1	GROMMET MKL	2	
	C294510-0301	FILTER-CARBURETOR AIR INTAKE AMA	1	
		A---172 SERIAL 17253393 THRU 17254892 F172 SERIAL F172-0180 THRU F172-0319		

Cowling (Cont)

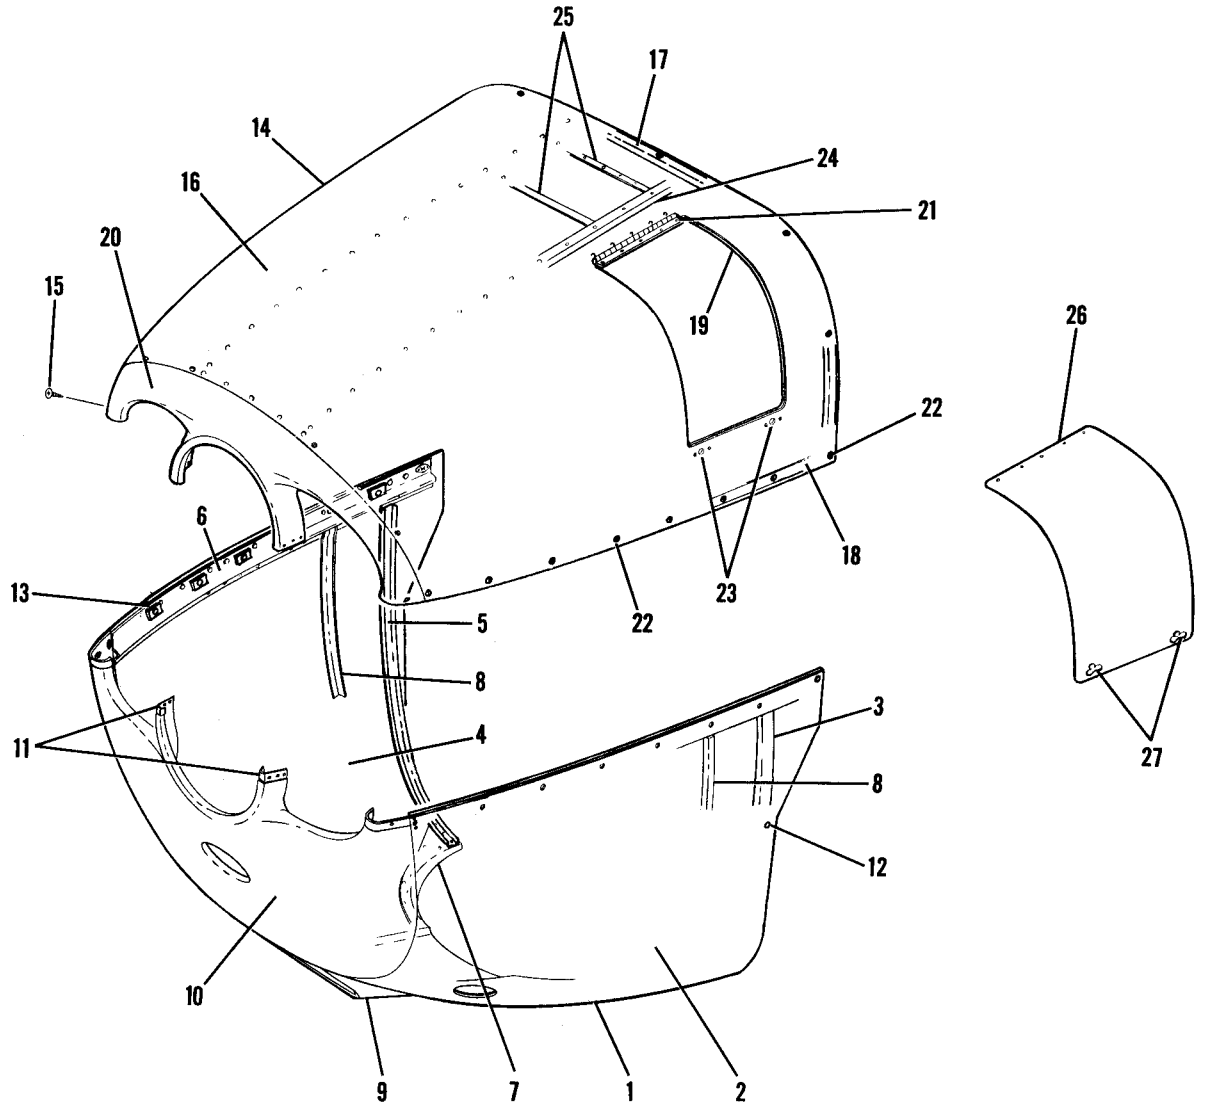


172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200804

Figure 117. Engine Cowl Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
117 -		COWL ASSEMBLY-ENGINE	NP	A
- 1	0552010-62	COWL ASSEMBLY-LOWER	1	
- 2	0552010-77	SPOTWELD ASSEMBLY-LOWER LH	1	
- 3	0552010-69	CHANNEL-LH LOWER	1	
- 4	0552010-72	SPOTWELD ASSEMBLY-LOWER RH	1	
- 5	0552010-70	CHANNEL-RH LOWER	1	
- 6	0552010-86	STIFFENER-RH	1	
	0552010-60	STIFFENER-LH	1	
- 7	0552010-68	LIP-COWL	1	
- 8	0552010-54	STIFFENER	2	
- 9	0552010-43	AIR SCOOP WEU 0552010-82	1	B
	0552010-82	AIR SCOOP	1	C
-10	0552019-1	NOSECAP ASSEMBLY-LOWER	1	
-11	NAS697A08	NUTPLATE	12	
-12	S1115-32	STUD	4	
	S1115-35	STUD	2	
	S1115-9	RING	6	
-13	S1115-19	NUTPLATE	14	
-14	0552010-78	COWL ASSEMBLY-UPPER	1	
		ATTACHING PARTS		
-15	AN515-8R8	SCREW	12	
		---*---		
-16	0552010-65	SKIN ASSEMBLY-UPPER COWL	1	
-17	0552010-89	CHANNEL-UPPER	1	
-18	0552010-87	DOUBLER-LH	1	
	0552010-88	DOUBLER-RH	1	
-19	0552010-18	DOUBLER-DOOR OPENING	1	
-20	0552019-6	NOSE CAP-UPPER	1	
-21	0552010-14	HINGE ASSEMBLY	1	
	0552010-42	PIN-HINGE	1	
-22	0552019-6	STUD	19	
	S1115-32	RING	19	
-23	99833P.098	RECEPTACLE MKL	2	
-24	0552010-74	STIFFENER-LH	1	
	0552010-73	STIFFENER-RH	1	
-25	0552010-47	STIFFENER	2	
-26	0552010-49	DOOR ASSEMBLY-COWL	1	
-27	W98292-180	STUD MKL	2	
	99836	PIN MKL	2	
	99874-1	GROMMET MKL	2	
	C294510-0301	FILTER-CARBURETOR AIR INTAKE	1	

A---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200804
B---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200784
C---F172 SERIAL F17200785 THRU F17200804

Cowling (Cont)

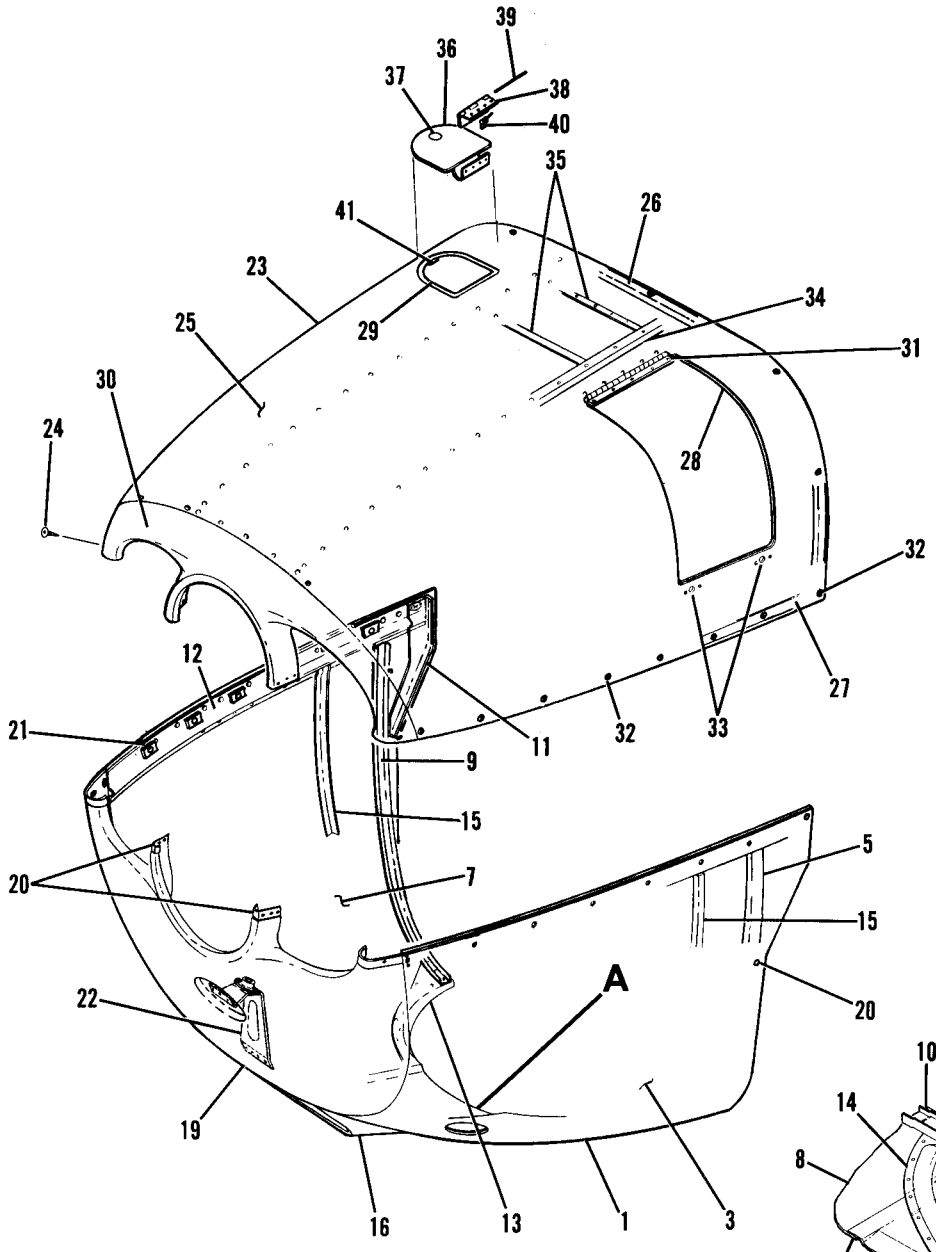

Detail A

17256513 THRU 17260758

17261899 THRU 17263458
EXCEPT FLOATPLANE

172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Figure 118. Engine Cowl Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
118 -		**	COWL ASSEMBLY-ENGINE	NA	A
- 1	0552112-32	*	COWL ASSY-LWR	1	B
	0552112-17		COWL ASSY-LWR	1	C
- 2	0552112-22		COWL ASSY-LWR	1	J
	0552112-30		COWL ASSY-LWR	1	K
- 3	0552112-9	*	SPOTWELD ASSY-LWR LH	1	B
	0552112-15		SPOTWELD ASSY-LWR LH	1	C
- 4	0552112-25		SPOTWELD ASSY-LWR LH	1	F
- 5	0552112-69	*	CHANNEL-LWR LH	1	G
- 6	0552112-93		CHANNEL-LWR LH	1	F
- 7	0552112-31	*	SPOTWELD ASSY-LWR RH	1	B
	0552112-16		SPOTWELD ASSY-LWR RH	1	C
- 8	0552112-26		SPOTWELD ASSY-LWR RH	1	J
	0552112-29		SPOTWELD ASSY-LWR RH	1	K
- 9	0552010-70	*	CHANNEL-LWR RH	1	G
-10	0552112-92		CHANNEL-LWR RH	1	F
-11	0552151-1	*	DOUBLER-LWR RH	1	K
-12	0552010-86		STIFFENER-RH	1	H
	0552010-94	*	STIFFENER-RH	1	K
	0552010-60		STIFFENER-LH	1	
-13	0552010-68	*	LIP-COWL	1	B
	0552131-1		STIFFENER-LWR COWL	1	C
-14	0552143-1		STIFFENER-LWR COWL	1	F
-15	0552010-54		STIFFENER	2	
-16	0552010-95	*	AIR SCOOP	1	C
-17	0552010-91		AIR SCOOP	1	F
-18	0552019-4		NOSE CAP ASSY-LWR	1	
-19	NAS697A08		NUTPLATE	12	
-20	S1115-32		STUD	4	
	S1115-35		STUD	2	
	S1115-9		RING	6	
-21	S1115-19		NUTPLATE	14	
-22	0552115-1		SUPPORT ASSY-COWL SNUBBER	1	
	S1115-29		SNUBBER	1	
-23	0552112-200		COWL ASSY-UPR	1	D
	0552112-18		COWL ASSY-UPR	1	E
			ATTACHING PARTS		
-24	AN515-8R8		SCREW	12	
			---*---		
-25	0552112-8		SPOTWELD ASSY-UPR COWL	1	D
	0552112-20		SPOTWELD ASSY-UPR COWL	1	E
-26	0552010-89		CHANNEL UPR	1	
-27	0552010-87		DOUBLER-LH	1	
	0552010-88		DOUBLER-RH	1	
-28	0552010-18		DOUBLER-DOOR OPENING	1	D
-29	1552004-32		DOUBLER-DOOR OPENING	1	
-30	0552019-6		NOSECAP-UPR	1	
-31	0552010-14		HINGE ASSY	1	D
	0552010-42		PIN-HINGE	1	
-32	S1115-32		STUD	19	
	S1115-9		RING	19	
-33	99833P-.098		RECEPTACLE MKL	2	D
-34	0552010-74		STIFFENER-LH	1	
	0552010-73		STIFFENER-RH	1	
-35	0552010-47		STIFFENER	2	
-36	1552004-28		DOOR ASSY-UPR COWL	1	
-37	KM610-.051		LATCH-DOOR CLC	1	
-38	1552004-22		HINGE HALF	1	
	1552004-23		HINGE HALF	1	
-39	1552004-17		PIN	1	
-40	0552010-1		SPRING	1	
-41	1552004-25		STRIKER	1	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
118 -42	0552010-49	DOOR ASSY-COWL	1	D
-43	W98292-180	STUD MKL	2	
	99836	PIN MKL	2	
	99874-1	GROMMET MKL	2	
	C294510-0301	FILTER-CARBURETOR AIR INTAKE	1	
		NOTE. *THESE PARTS ARE ALSO USED SERIAL 17259224 THRU 17263458 FOR FLOATPLANE ONLY, WITHOUT COWL MOUNTED LANDING LIGHT.		
		NOTE. **THIS FIGURE DOES NOT APPLY TO AIRPLANES WITH COWL MOUNTED LANDING LIGHT-SEE FIG 119.		
		A---172 SERIAL 17256513 THRU 17263458 F172 SERIAL F17200805 THRU F17201234		
		B---172 SERIAL 17256513 THRU 17259223		
		C---172 SERIAL 17259224 THRU 17261898 F172 SERIAL F17200805 THRU F17201034		
		D---172 SERIAL 17256513 THRU 17260758 F172 SERIAL F17200805 THRU F17200904		
		E---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200905 THRU F17201234		
		F---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234		
		G---172 SERIAL 17256513 THRU 17261898 F172 SERIAL F17200805 THRU F17201034		
		H---172 SERIAL 17256513 THRU 17262708 F172 SERIAL F17200805 THRU F17201224		
		J---172 SERIAL 17261899 THRU 17262708 F172 SERIAL F17201035 THRU F17201224		
		K---172 SERIAL 17262709 THRU 17263458 F172 SERIAL F17201225 THRU F17201234		

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
119 -		*	COWL ASSEMBLY-ENGINE WITH LANDING LIGHT PROVISIONS	NP	A
- 1	0552112-202		COWL ASSEMBLY-LOWER	1	F
	0552112-205		COWL ASSEMBLY-LOWER WEU 0552112-206	1	J
	0552112-206		COWL ASSEMBLY-LOWER	1	K
	0552112-207		COWL ASSEMBLY-LOWER FLOATPLANE ONLY	1	
- 2	0552112-15		SPOTWELD ASSEMBLY-LOWER LH	1	F
	0552112-25		SPOTWELD ASSEMBLY-LOWER LH	1	G
	0552112-9		SPOTWELD ASSEMBLY-LOWER LH FLOATPLANE ONLY	1	
- 3	0552010-69		CHANNEL-LOWER LH	1	F
- 3A	0552010-93		CHANNEL-LOWER LH	1	G
	0552010-69		CHANNEL-LOWER LH FLOATPLANE ONLY	1	
- 4	0552112-16		SPOTWELD ASSEMBLY-LOWER RH	1	F
- 4A	0552112-26		SPOTWELD ASSEMBLY-LOWER RH	1	J
	0552112-29		SPOTWELD ASSEMBLY-LOWER RH	1	K
	0552112-31		SPOTWELD ASSEMBLY-LOWER RH FLOATPLANE ONLY	1	
- 5	0552010-70		CHANNEL-LOWER RH	1	F
- 5A	0552010-92		CHANNEL-LOWER RH	1	G
	0552010-70		CHANNEL-LOWER RH FLOATPLANE ONLY	1	
- 5B	0552151-1		DOUBLER-LOWER COWL RH	1	K
- 6	0552010-86		STIFFENER-RH	1	H
	0552010-94		STIFFENER-RH	1	K
	0552010-94		STIFFENER-RH FLOATPLANE ONLY	1	
	0552010-60		STIFFENER-LH	1	
- 7	0552131-1		STIFFENER-LOWER COWL	1	F
	0552010-68		LIP-COWL FLOATPLANE ONLY	1	
- 7A	0552143-1		DOUBLER-LOWER COWL	1	G
- 8	0552010-54		STIFFENER	2	

CONTINUED ON NEXT PAGE

Cowling (Cont)

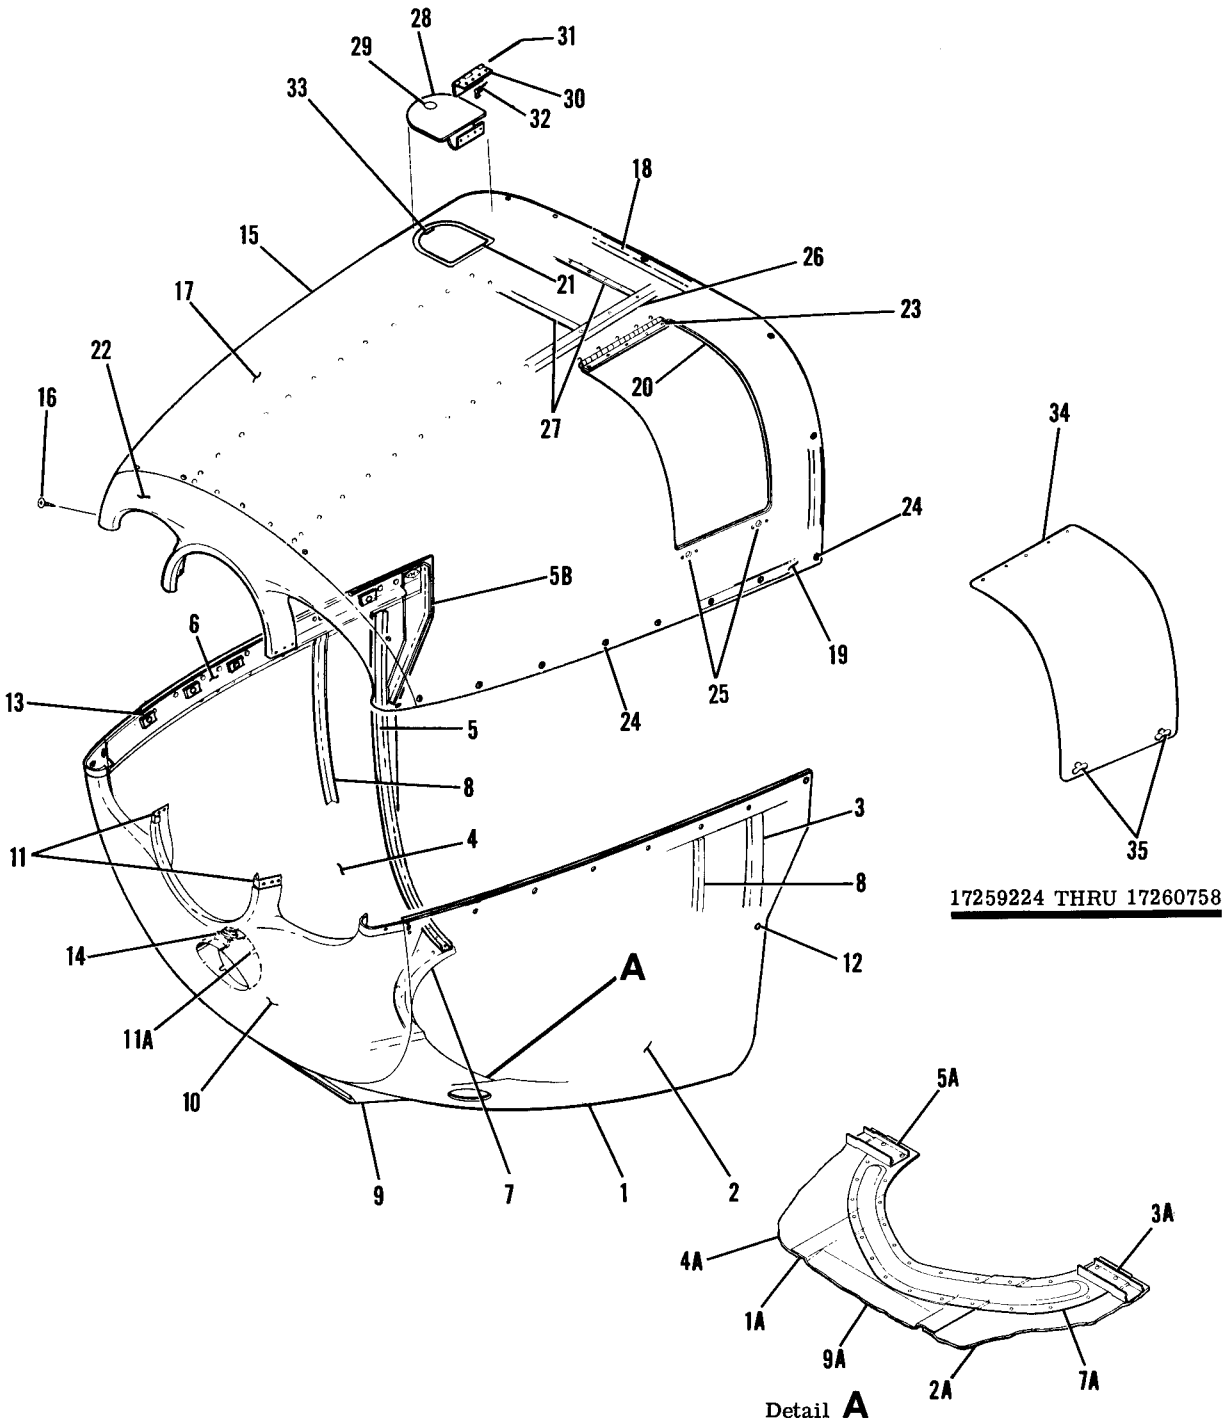

172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200805 THRU F17201234


Figure 119. Engine Cowl Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
119 - 9	0552010-83	AIR SCOOP WEU 0552010-84	1	D
	0552010-84	AIR SCOOP	1	F
	0552010-84	AIR SCOOP FLOATPLANE ONLY	1	
- 9A	0552010-91	AIR SCOOP	1	G
-10	0552019-8	NOSE CAP ASSEMBLY-LOWER WEU 0552019-12	1	D
	0552019-12	NOSE CAP ASSEMBLY-LOWER	1	E
-11	NAS697A08	NUTPLATE	12	D
-11A	AN256F8	ANGLE NUT LANDING LIGHT ATTACH	3	D
-12	S1115-32	STUD	4	
	S1115-35	STUD	2	
	S1115-9	RING	6	
-13	S1115-19	NUTPLATE	14	
-14	0552123-1	SUPPORT ASSEMBLY-COWL SNUBBER	1	D
	S1115-29	SHOCKMOUNT	1	
-15	0552112-203	COWL ASSEMBLY-UPPER	1	B
	0552112-204	COWL ASSEMBLY-UPPER	1	C
		ATTACHING PARTS		
-16	AN515-8R8	SCREW	12	
		---*---		
-17	0552112-8	SPOTWELD ASSEMBLY-UPPER COWL	1	B
	0552112-20	SPOTWELD ASSEMBLY-UPPER COWL	1	C
-18	0552010-89	CHANNEL-UPPER	1	
-19	0552010-87	DOUBLER-LH	1	
	0552010-88	DOUBLER-RH	1	
-20	0552010-18	DOUBLER-DOOR OPENING	1	B
-21	1552004-32	DOUBLER-DOOR OPENING	1	
-22	0552019-10	NOSE CAP-UPPER	1	
-23	0552010-14	HINGE ASSEMBLY	1	
	0552010-42	PIN-HINGE	1	
-24	S1115-32	STUD	19	
	S1115-9	RING	19	
-25	99833P.098	RECEPTACLE MKL	2	B
-26	0552010-74	STIFFENER-LH	1	
	0552010-73	STIFFENER-RH	1	
-27	0552010-47	STIFFENER	2	
-28	1552004-28	DOOR ASSEMBLY-UPPER COWL	1	
-29	KM610-.051	LATCH-DOOR CLC	1	
-30	1552004-22	HINGE HALF	1	
	1552004-23	HINGE HALF	1	
-31	1552004-17	PIN	1	
-32	1552010-1	SPRING	1	
-33	1552004-25	STRIKER	1	
-34	0552010-49	DOOR ASSEMBLY-COWL	1	B
-35	W98292-180	STUD MKL	2	
	99836	PIN MKL	2	
	99874-1	GROMMET MKL	2	
	C294510-0301	FILTER-CARBURETOR AIR INTAKE	1	

NOTE. *THIS FIGURE APPLIES TO AIRPLANES WITH COWL MOUNTED LANDING LIGHT ONLY. FOR AIRPLANES WITH STANDARD COWL SEE FIG 118.

A---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
B---172 SERIAL 17259224 THRU 17260758
F172 SERIAL F17200805 THRU F17200904
C---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234
D---172 SERIAL 17259224 THRU 17260758
F172 SERIAL F17200805 THRU F17200881
E---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200882 THRU F17201234
F---172 SERIAL 17259224 THRU 17261898
F172 SERIAL F17200805 THRU F17201034
G---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234
H---172 SERIAL 17259224 THRU 17262708
F172 SERIAL F17200805 THRU F17201224
J---172 SERIAL 17261899 THRU 17262708
F172 SERIAL F17201035 THRU F17201224
K---172 SERIAL 17262709 THRU 17263458
F172 SERIAL F17201225 THRU F17201234

Cowling (Cont)

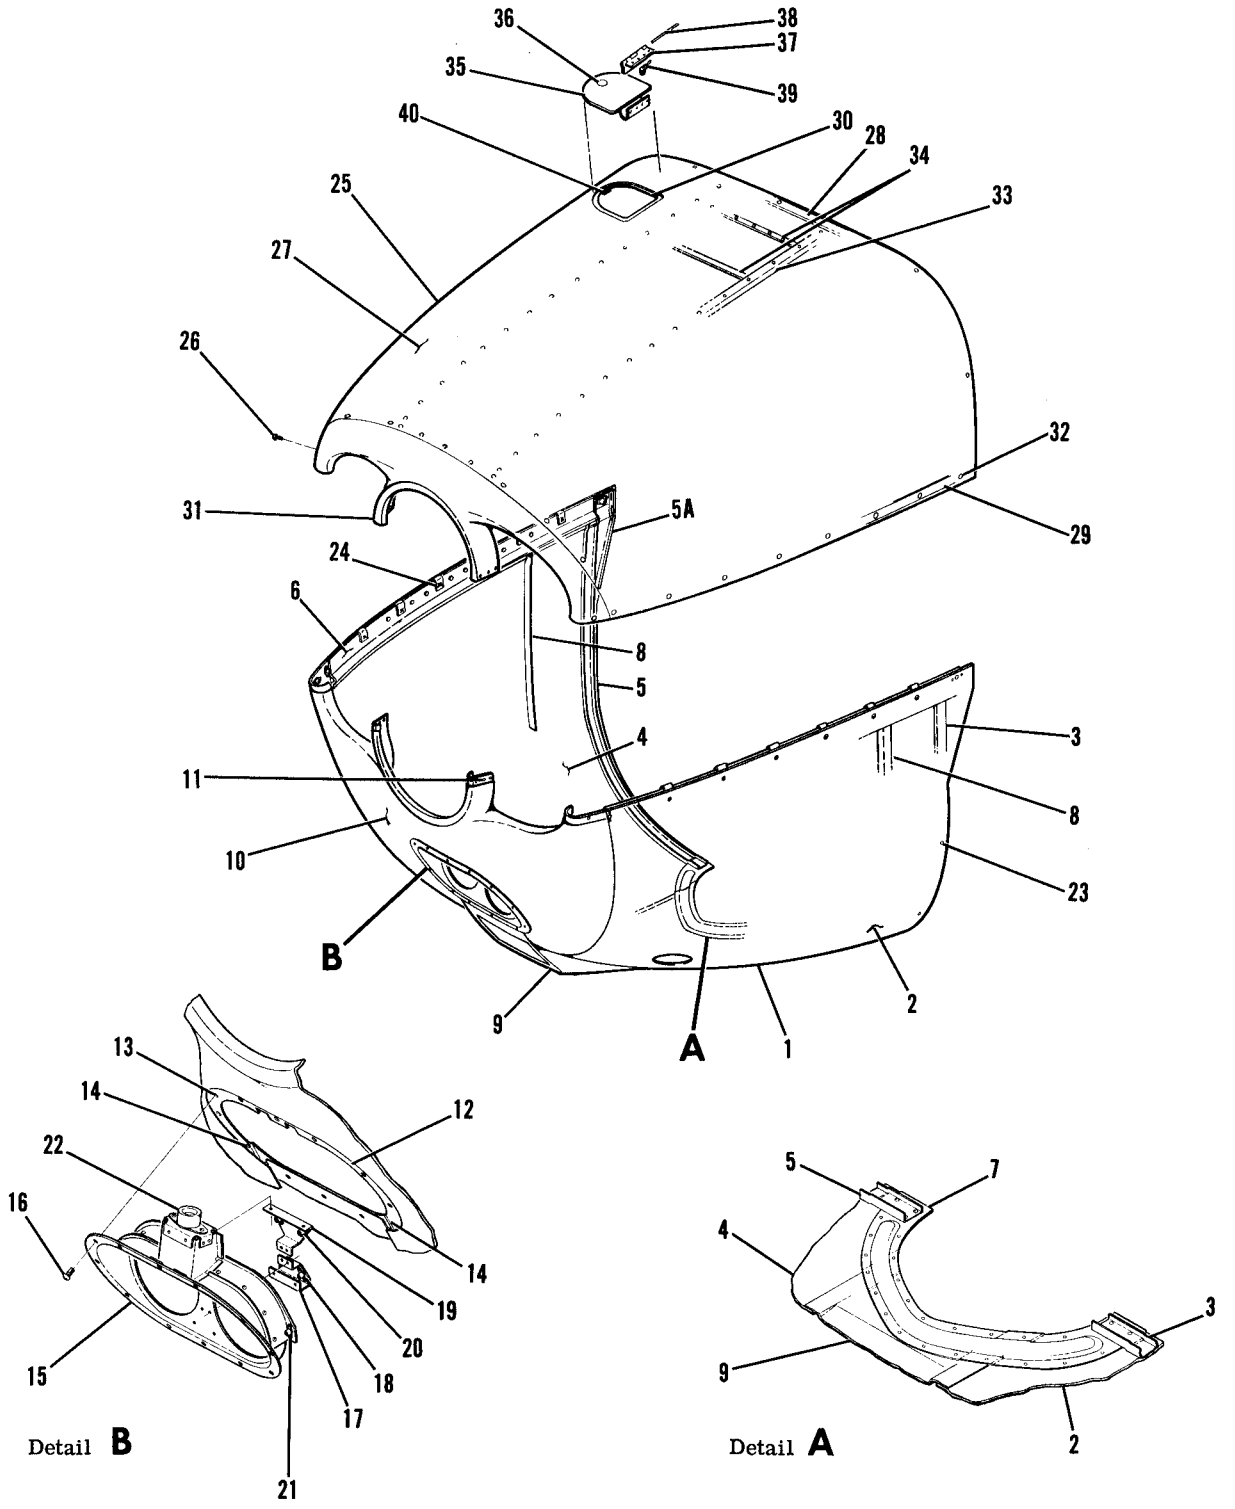

172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234


Figure 120. Engine Cowl Assembly - Dual Landing Light

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
120 -	*	COWL ASSEMBLY-ENGINE WITH DUAL LANDING LIGHT PROVISIONS	NP	A
- 1	0552112-27	COWL ASSEMBLY-LOWER WEU 0552112-28	1	B
	0552112-28	COWL ASSEMBLY-LOWER	1	C
- 2	0552112-25	SPOTWELD ASSEMBLY-LOWER LH	1	
- 3	0552010-93	CHANNEL-LOWER LH	1	
- 4	0552112-26	SPOTWELD ASSEMBLY-LOWER RH	1	B
	0552112-29	SPOTWELD ASSEMBLY-LOWER RH	1	C
- 5	0552010-92	CHANNEL-LOWER RH	1	
- 5A	0552151-1	DOUBLER-LOWER RH	1	C
- 6	0552010-60	STIFFENER-LH	1	
	0552010-86	STIFFENER-RH	1	B
	0552010-94	STIFFENER-RH	1	C
- 7	0552143-1	DOUBLER-LOWER COWL	1	
- 8	0552010-54	STIFFENER	2	
- 9	0552010-91	AIR SCOOP	1	
-10	0552019-15	NOSE CAP ASSEMBLY-LOWER	1	
-11	NAS697A08	NUTPLATE	10	
-12	0552019-13	MOUNTING PLATE	1	
-13	NAS681A08	NUTPLATE	10	
-14	NAS693A08	NUTPLATE	2	
-15	0552139-1	SUPPORT ASSEMBLY-DUAL LANDING LIGHT	1	
		ATTACHING PARTS		
-16	NAS514P832-8	SCREW	12	
		---*---		
-17	1752119-7	BRACKET ASSEMBLY-MOUNT	1	
-18	NAS697A08	NUTPLATE	2	
-19	1752119-4	BRACKET ASSEMBLY-MOUNT	1	
-20	NAS697A08	NUTPLATE	2	
-21	NAS697A08	NUTPLATE	2	
-22	S1115-29	SHOCKMOUNT	1	
		ATTACHING PARTS		
	AN515-8R8	SCREW	2	
		---*---		
-23	S1115-32	STUD	4	
	S1115-35	STUD	2	
	S1115-9	RING	6	
-24	S1115-19	NUTPLATE	14	
-25	0552112-204	COWL ASSEMBLY-UPPER	1	
		ATTACHING PARTS		
-26	AN515-8R8	SCREW	12	
		---*---		
-27	0552112-20	SPOTWELD ASSEMBLY-UPPER COWL	1	
-28	0552010-89	CHANNEL-UPPER	1	
-29	0552010-87	DOUBLER-LH	1	
	0552010-88	DOUBLER-RH	1	
-30	1552004-32	DOUBLER-DOOR OPENING	1	
-31	0552019-10	NOSE CAP-UPPER	1	
-32	S1115-32	STUD	19	
	S1115-9	RING	19	
-33	0552010-74	STIFFENER-LH	1	
	0552010-73	STIFFENER-RH	1	
-34	0552010-47	STIFFENER	2	
-35	1552004-28	DOOR ASSEMBLY-UPPER COWL	1	
-36	KM610-064	LATCH-DOOR CLC	1	
-37	1552004-22	HINGE HALF	1	
	1552004-23	HINGE HALF	1	
-38	1552004-17	PIN-HINGE	1	
-39	1552010-1	SPRING	1	
-40	1552004-25	STRIKER-DOOR	1	
	C294510-0301	FILTER-CARBURETOR AIR INTAKE	1	

NOTE. *THIS FIGURE APPLIES TO AIRPLANES WITH COWL MOUNTED DUAL LANDING LIGHTS ONLY. FOR AIRPLANES WITH STANDARD COWL SEE FIG 118. FOR AIRPLANES WITH COWL MOUNTED SINGLE LANDING LIGHT SEE FIG 119.

A---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234
B---172 SERIAL 17261899 THRU 17262708
F172 SERIAL F17201035 THRU F17201224
C---172 SERIAL 17262709 THRU 17263458
F172 SERIAL F17201225 THRU F17201234

Cowling (Cont)

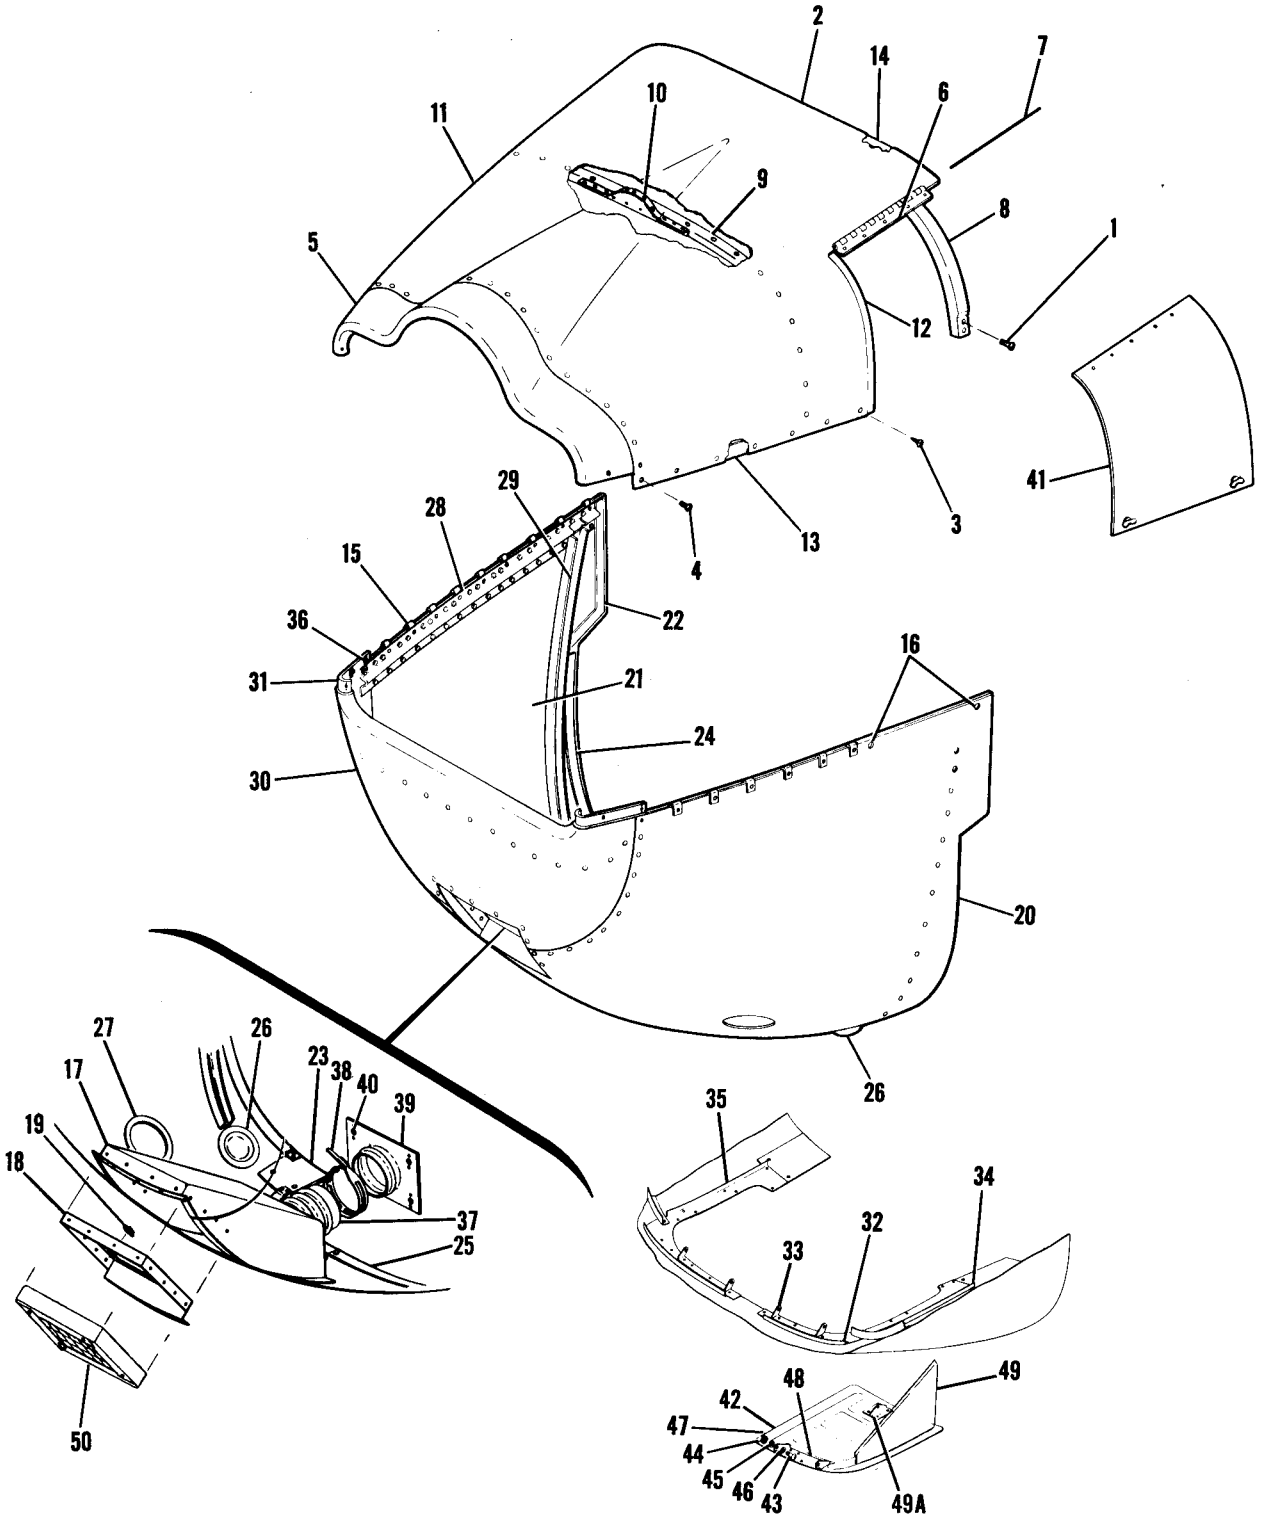


P172 SERIAL P17257120 THRU P17257188

Figure 121. Engine Cowl Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
121 -		COWL ASSEMBLY-ENGINE	1	A
		ATTACHING PARTS		
- 1	AN520-416R10	SCREW	14	
		---*---		
- 2	0552007-55	COWL ASSEMBLY-UPPER	1	
		ATTACHING PARTS		
- 3	S1021Z8-8	SCREW	15	
- 4	AN520-10R6	SCREW	8	
		---*---		
- 5	0552007-13	SKIN-NOSE CAP UPPER	1	
- 6	0552003-26	HINGE ASSEMBLY	1	
- 7	0552003-28	PIN-HINGE	1	
- 8	0552007-43	CHANNEL-UPPER	1	
- 9	0552007-48	ANGLE	1	
-10	0552007-35	STIFFENER	1	
-11	0552007-53	SPOTWELD ASSEMBLY	1	
-12	0552007-32	DOUBLER-HINGE	1	
-13	0552007-37	DOUBLER-SIDE LH	1	
	0552007-38	DOUBLER-SIDE RH	1	
-14	0552007-54	DOUBLER-UPPER AFT	1	
	0552007-200	COWL ASSEMBLY-LOWER LESS COWL FLAPS	1	
-15	A1788-8Z-3	NUT TIN	15	
-16	99833-C.098	RECEPTACLE-STUD MKL	2	
-17	0552007-17	SCOOP ASSEMBLY-AIR	1	
-18	0552007-18	PAN ASSEMBLY-AIR FILTER	1	
-19	S1853-2	RECEPTACLE-STUD MKL	4	
-20	0552007-77	SPOTWELD ASSEMBLY RH	1	
-21	0552007-78	SPOTWELD ASSEMBLY RH	1	
-22	0552007-24	DOUBLER	1	
-23	0552007-26	DOUBLER AFT RH	1	
	0552007-25	DOUBLER AFT LH	1	
-24	0552007-28	DOUBLER RH	1	
-25	0552007-27	DOUBLER LH	1	
-26	0552003-72	CUP	1	
-27	0552003-39	DOUBLER-EXHAUST OPENING	1	
-28	0552007-30	STIFFENER RH	1	
	0552007-29	STIFFENER LH	1	
-29	0552007-42	CHANNEL RH	1	
	0552007-41	CHANNEL LH	1	
-30	0552007-4	NOSE CAP ASSEMBLY-LOWER	1	
-31	0552007-15	DOUBLER-NOSE CAP	1	
-32	0552007-73	STIFFENER LH	1	
	0552007-74	STIFFENER RH	1	
-33	0552007-69	HINGE HALF LH	1	
	0552007-70	HINGE HALF RH	1	
-34	0552007-67	DOUBLER LH	1	
-35	0552007-68	DOUBLER RH	1	
-36	NAS697A3	NUT	8	
-37	S1053K28W	HOSE 4.3 IN. LG BULK ITEM REF S-1053K28W4.3	1	
		ATTACHING PARTS		
-38	NAS398-54	CLAMP	2	
		---*---		
-39	0552007-6	COUPLING PLATE	1	
-40	312-12	RECEPTACLE-STUD CLC	4	
-41	0552007-5	DOOR ASSEMBLY	1	
	W98292-2180	STUD MKL	2	
	99836	CROSS PIN MKL	2	
	99874-1	GROMMET MKL	2	
-42	0552007-83	COWL FLAP ASSEMBLY LH	1	
	0552007-84	COWL FLAP ASSEMBLY RH	1	
		ATTACHING PARTS		
-43	AN24-8	BOLT	2	
-44	AN320-4	NUT	2	
-45	AN960-416L	WASHER	2	
-46	0552007-66	WASHER	2	
-47	MS24665-134	COTTER PIN	2	
		---*---		
-48	0552007-71	HINGE HALF LH	1	
	0552007-72	HINGE HALF RH	1	
-49	0552007-81	BAFFLE-LH	1	
	0552007-82	BAFFLE-RH	1	
-49A	0552007-65	BRACKET-COWL FLAP CONTROL	1	
-50	120009	AIR FILTER AMA	1	
	120009-06	GASKET-AIR FILTER AMA	1	
		A---P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		

Engine

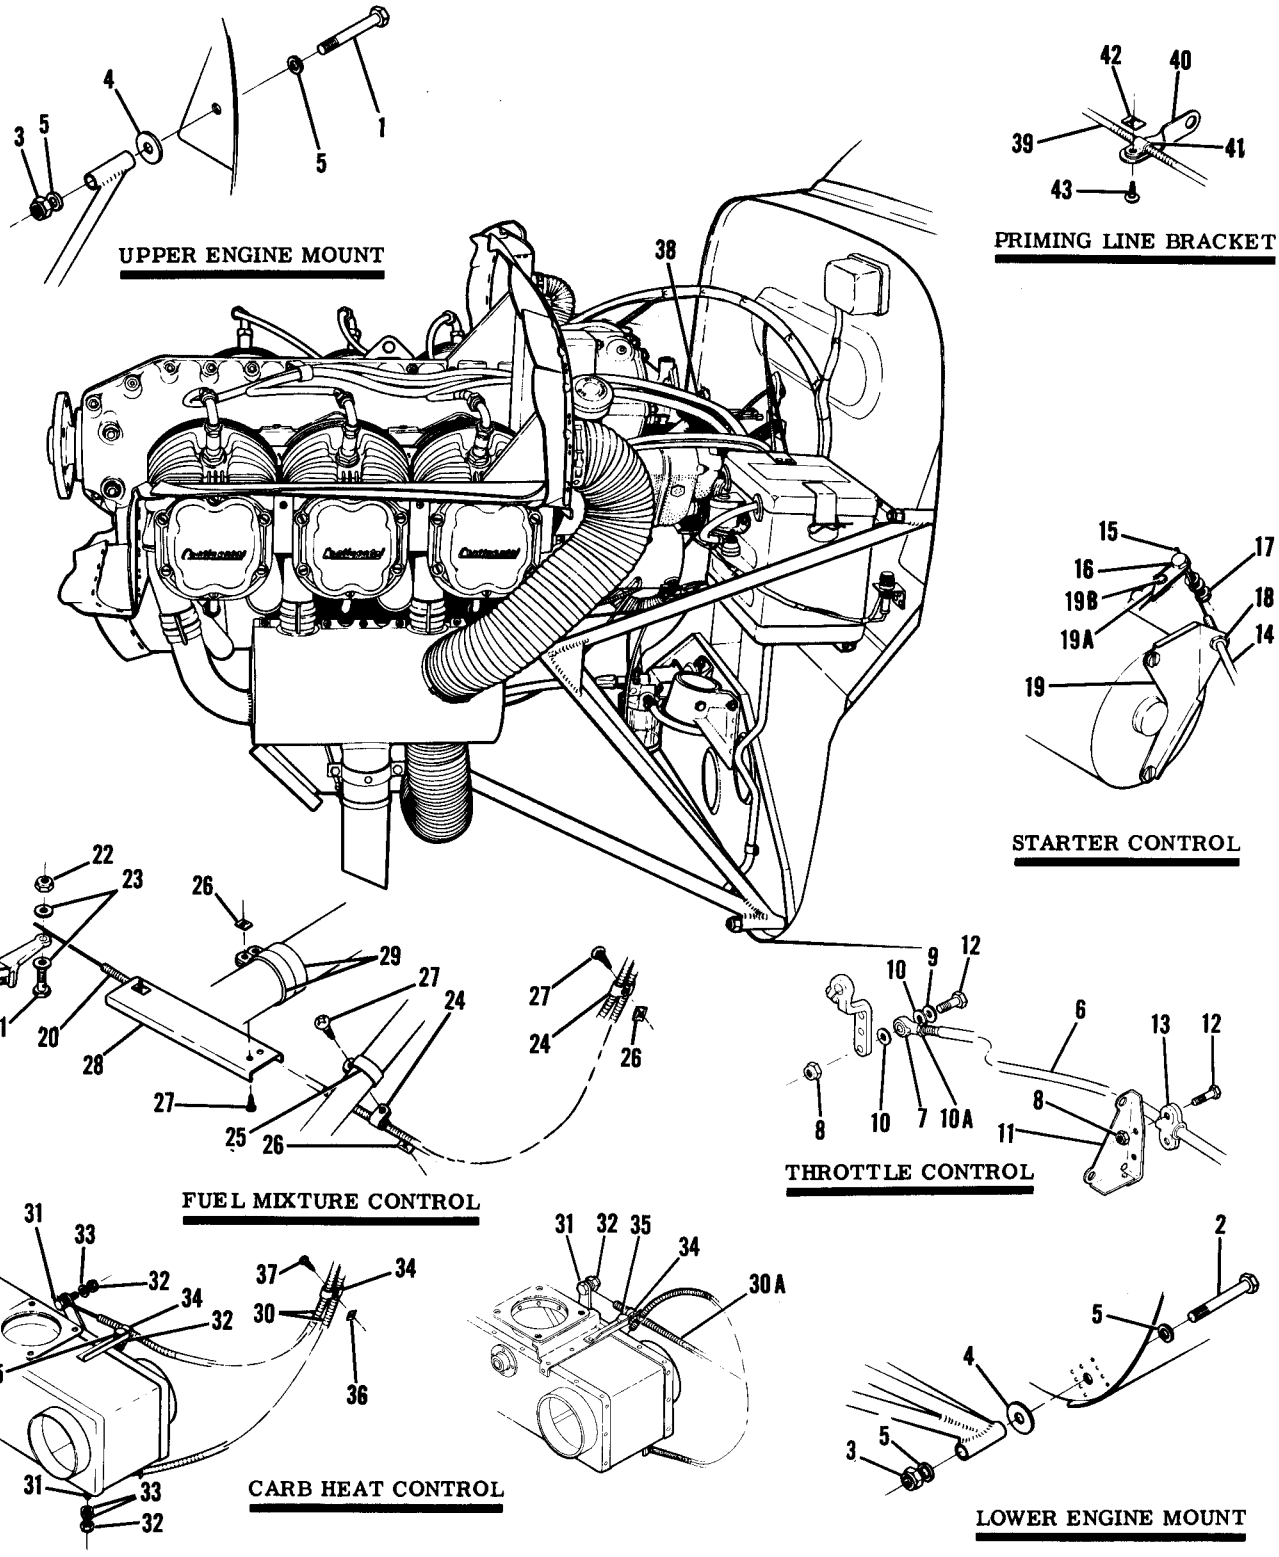

172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804

Figure 122. Engine Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
122 -		ENGINE INSTALLATION-CONTINENTAL	NP	A
	SEE FIG 125	ENGINE ASSEMBLY-CONTINENTAL	NP	
		ATTACHING PARTS		
- 1	AN6-25A	BOLT	2	
- 2	AN6-32A	BOLT	2	
- 3	MS20365-624C	NUT	4	
- 4	0550153-1	WASHER	4	
- 5	AN960-616	WASHER	8	
		---*---		
- 6	S1222-2	CONTROL-THROTTLE	1	B
	S1222-7	CONTROL-THROTTLE	1	C
		ATTACHING PARTS		
- 7	S1104-3	ROD END	1	
- 8	MS21044N3	NUT	3	
- 9	AN970-3	WASHER	1	
-10	AN960D10	WASHER	2	
-10A	MS21044N3	NUT	1	
-11	0550185-1	BRACKET	1	
-12	AN3-7A	BOLT	3	
-13	S351	CLAMP	2	
		---*---		
-14	0513188-1	TUBE-STARTER CONTROL	1	B
	0513188-3	TUBE-SRARTER CONTROL	1	C
-15	0513187-3	CONTROL ASSEMBLY-STARTER REF 0513187-1	1	
		ATTACHING PARTS		
-16	0450311-5	CLAMP	1	
-17	MS21044N3	NUT	1	
	AN960-10	WASHER	2	
-18	AN315-3R	NUT	4	
-19	0550184-1	BRACKET ASSEMBLY-STARTER WHEN EXHAUSTED USE 0550184-2	1	D
	0550184-2	BRACKET ASSEMBLY-STARTER	1	E
		---*---		
-19A	0450283	EXTENSION-STARTER	1	E
		ATTACHING PARTS		
-19B	AN3-4A	BOLT	1	
	MS21044N3	NUT	1	
		---*---		
-20	S1231-2	CONTROL ASSEMBLY-FUEL MIXTURE	1	
		ATTACHING PARTS		
-21	0450311-2	CLAMP	1	
-22	MS21042L4	NUT	1	
-23	AN960-416	WASHER	2	
-24	AN742D3	CLAMP	4	
-25	AN742D10	CLAMP	1	
-26	NAS446-4-3	NUT	5	
-27	S1021Z8-6	SCREW	5	
-28	0550100-4	BRACKET	1	
-29	AN735D20	CLAMP	2	
		---*---		
-30		CONTROL-CARBURETOR HEAT REFER TO INST PNL	1	B
-30A		CONTROL-CARBURETOR HEAT REFER TO INST PNL	1	C
		ATTACHING PARTS		
-31	0450311-5	CLAMP	2	
-32	MS21044N3	NUT	3	
-33	AN960-10	WASHER	3	
-34	AN742D3	CLAMP	3	
-35	AN3-3A	BOLT	1	
-36	NAS446-4-3	NUT	1	
-37	S1021Z8-6	SCREW	1	
		---*---		

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
122 -38	S1239-7	CONTROL-CABIN HEAT	1	B
	S1239-15	CONTROL-CABIN HEAT	1	H
	S1239-28	CONTROL-CABIN HEAT	1	J
		ATTACHING PARTS		
	0450311-5	CLAMP	1	
	MS21044N3	NUT	1	
	AN960-10	WASHER	2	
		---*---		
-39	0500118-105	LINE-PRIMER	1	
		ATTACHING PARTS		
	AN4022-1	NIPPLE-PRIMING JET	1	
-40	0550100-9	BRACKET	1	
-41	AN742D3	CLAMP	1	
-42	NAS446-4-3	NUT	1	
-43	S1021Z8-6	SCREW	1	
		---*---		

A---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804
B---172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
C---172 SERIAL 17250573 THRU 17256512
F172 SERIAL F172-0019 THRU F17200804
D---172 SERIAL 17249545 THRU 17251005
F172 SERIAL F172-0001 THRU F172-0047
E---172 SERIAL 17251006 THRU 17256512
F172 SERIAL F172-0048 THRU F17200804
F---DELETED
G---DELETED
H---172 SERIAL 17250573 THRU 17254892
F172 SERIAL F172-0019 THRU F172-0319
J---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200804

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
123 -		ENGINE INSTALLATION	NP	A
- 1	0320E2D-ENPL3107	ENGINE LY	1	T
	0320E2D-ENPL4090	ENGINE LY	1	U
		ATTACHING PARTS		
- 2	AN6-23A	BOLT LOWER	2	
	AN6-27A	BOLT UPPER	2	
- 3	0550153-1	WASHER	4	
- 4	AN960-616	WASHER	8	
- 5	MS20365-624C	NUT	4	
- 6	0551017-1	MOUNT ASSEMBLY-ENGINE	1	
- 7	C299501-0101	KIT-SHOCK MOUNT	4	
- 8	AN7-43A	BOLT UPPER	4	
- 8A	AN7-44A	BOLT LOWER	4	
- 9	AN960-716L	WASHER	4	
-10	MS20365-720C	NUT	4	
		---*---		
-10A	0412007-8	STRAP-ENGINE GROUND	1	
-10B	AN742-12	CLAMP	1	
	AN3-4A	BOLT	1	
	AN960-10	WASHER	2	
	MS20365-1032C	NUT	1	
-10C	AN4-11A	BOLT	1	
	AN960-416	WASHER	1	
	MS21042L4	NUT	1	
-11	SEE FIG 113	PROPELLER & SPINNER INSTALLATION	1	
-12	SEE FIG 141	HEATING & DEFROSTING SYSTEM	1	
-13	SEE FIG 167	FUEL SYSTEM	1	
-14	SEE FIG 134	BAFFLES INSTALLATION-ENGINE	1	X
	SEE FIG 135	BAFFLES INSTALLATION-ENGINE	1	W
-15	SEE FIG 184	VACUUM SYSTEM	1	
-16	SEE FIG 132	EXHAUST STACK ASSEMBLY	1	
-17	0500118-101	LINE ASSEMBLY-OIL PRESSURE	1	P
	S1236-3-0184	HOSE ASSEMBLY-OIL PRESSURE	1	Q
		ATTACHING PARTS		
	MS21919DG6	CLAMP ATTACH TO S1236-3-0184	1	Q
	AN742D12	CLAMP ATTACH TO ENGINE MOUNT	1	Q
	S1021Z10-8	SCREW	1	Q
	NAS446-5-1	NUT	1	Q
		---*---		
	MS20823-28	ELBOW	1	P
	0752037-3	ELBOW ASSEMBLY	1	Q
-17A	1450024-3	UNION	1	Q
-18	8406E	OIL COOLER SW	1	
	8526250	OIL COOLER ALTERNATE HR	1	
		ATTACHING PARTS		
-19	AN3-5A	BOLT	6	
	AN960-10	WASHER	6	
	MS20365-1032C	NUT	2	
		---*---		
-20	S1167-6-0260	HOSE ASSEMBLY ENGINE TO COOLER	1	
-21	MS20822-6-6	ELBOW	1	
	AN816-6-6	UNION UPR END	1	
-22	S1167-6-0290	HOSE ASSEMBLY COOLER TO ENGINE	1	T
	S1167-6-0210	HOSE ASSEMBLY COOLER TO ENGINE	1	U
-23	MS20825-6	TEE	1	
	AN815-6D	UNION UPR END	1	T
	MS20823-6B	ELBOW UPR END	1	U
	AN912-2	REDUCER UPR END	1	U
-24	0556018-1	CAP	1	
-25	AN912-2D	BUSHING-REDUCER	1	
-26	1700121-16	LINE-OIL COOLER	1	T
-27	1756001-1	DUCT ASSEMBLY-OIL COOLER	1	
	0505011-1	PLACARD	1	
-28	S1053E24T	HOSE * IN LG BULK ITEM REF S1053K24T*	1	
		ATTACHING PARTS		
-29	NAS398-50	CLAMP	2	
		---*---		
-30	S1605-6	TACHOMETER SHAFT WHEN EXHAUSTED USE S1605-8	1	G
	S1605-8	TACHOMETER SHAFT	1	H
-31	0500118-70	BREATHER TUBE	1	
		ATTACHING PARTS		
-32	MS21919DG12	CLAMP	2	
	AN3-5A	BOLT	1	
	AN960-10	WASHER	1	
	MS21044N3	NUT	1	

CONTINUED ON NEXT PAGE


Engine (Cont)

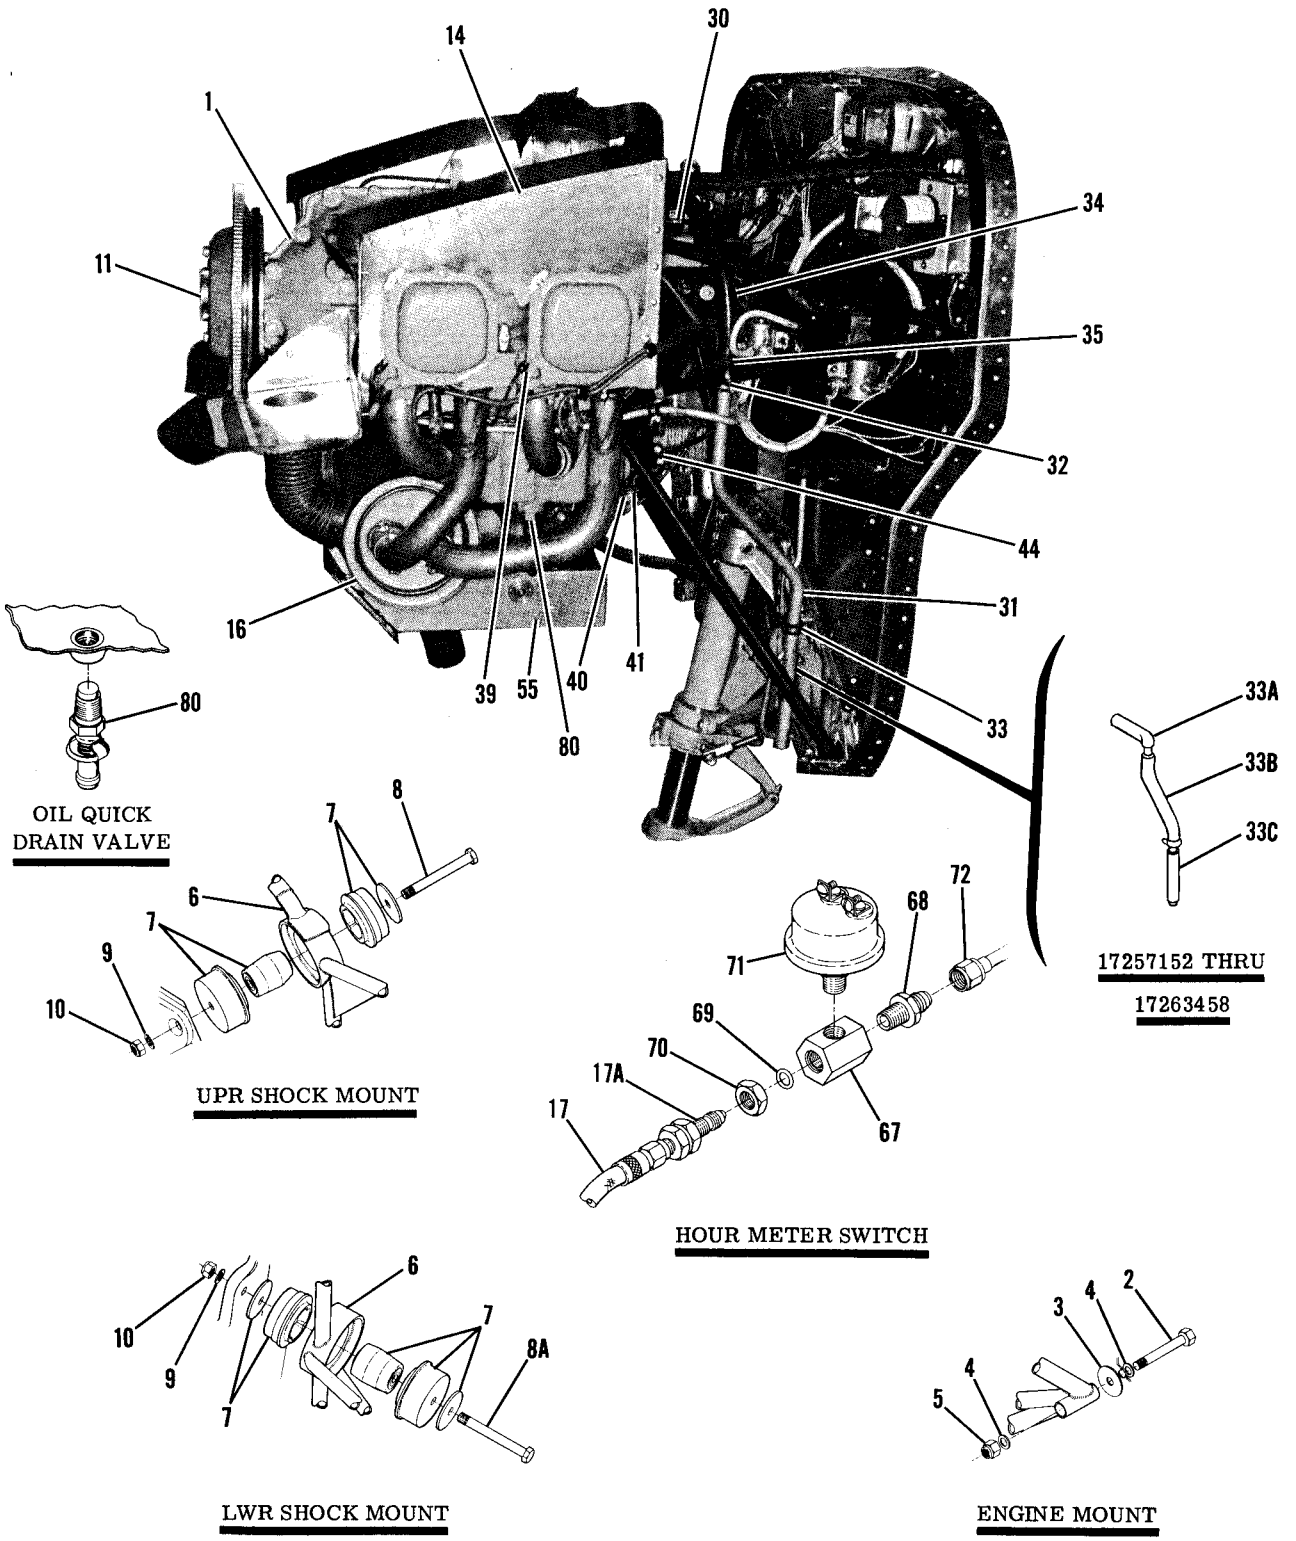


172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234


Figure 123. Engine Installation (Sheet 1 of 2)

Engine (Cont)

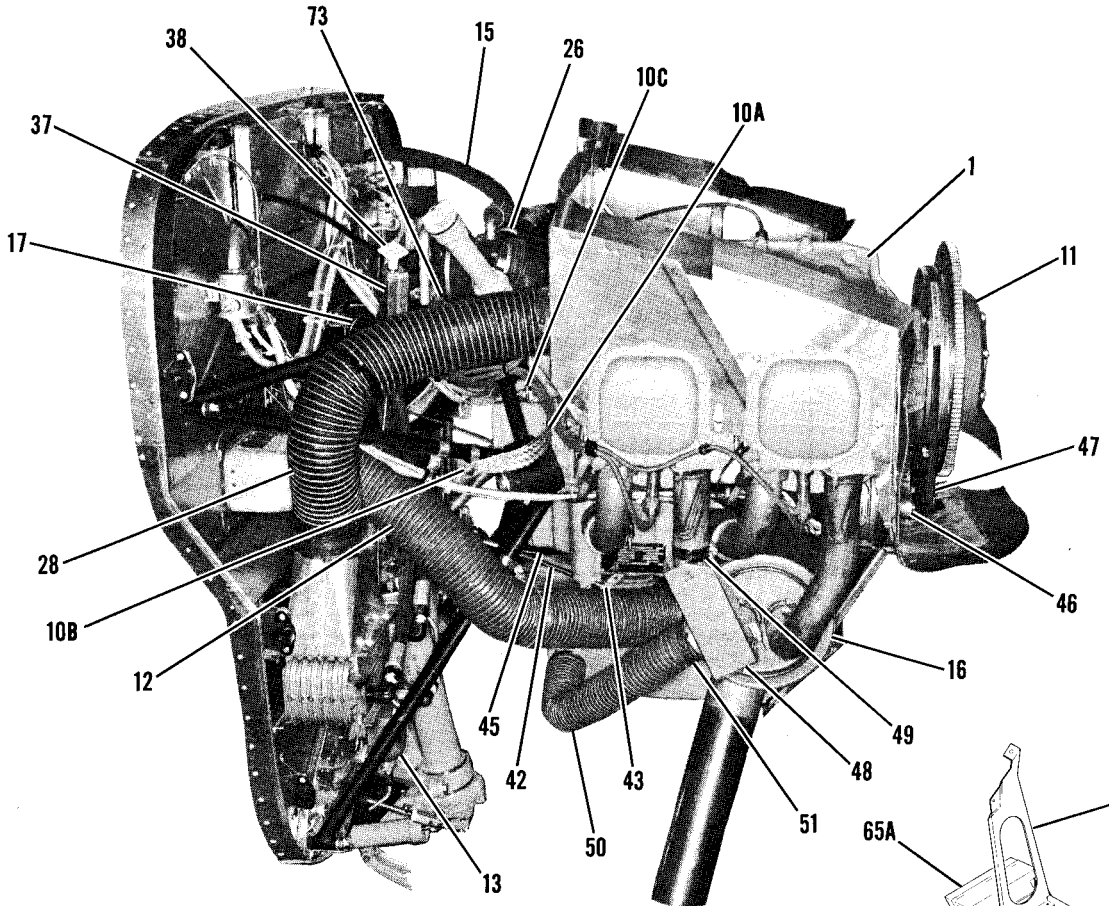


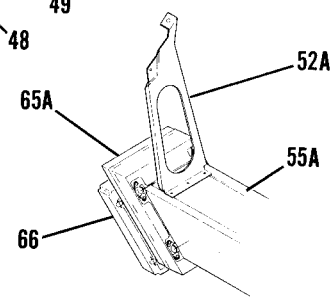


17259224 THRU 17261898

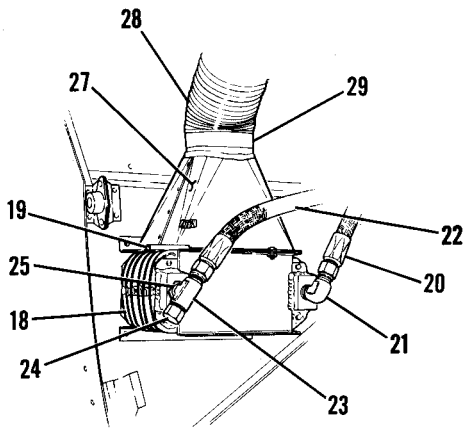

OIL COOLER

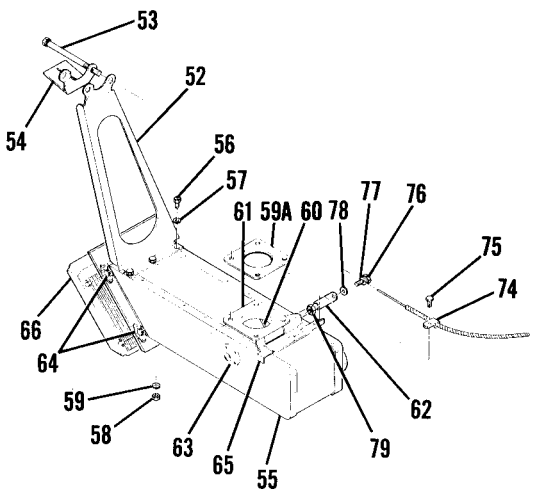

CARBURETOR AIR BOX

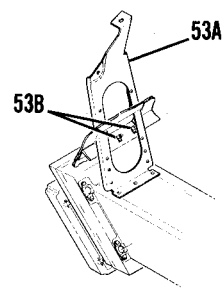

17261899 THRU 17263458

172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Figure 123. Engine Installation (Sheet 2 of 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
123 -33	MS21919DG12	CLAMP	1	
	S1021Z10-20	SCREW	1	
	NAS43HT3-32	SPACER	1	
	AN960-10	WASHER	1	
		---*---		
-33A	0552011-11	INSULATION-BREATHER TUBE	1	B
-33B	0552011-12	INSULATION-BREATHER TUBE	1	B
-33C	0552011-13	INSULATION-BREATHER TUBE	1	B
-34	S1495-12	HOSE 16.0 IN LG BULK ITEM REF S1495-12-16.0	1	
		ATTACHING PARTS		
-35	NAS397-18	CLAMP	2	
		---*---		
-36		DELETED-NOT USED		
-37	1716013-1	BRACKET	1	
		ATTACHING PARTS		
	AN741TD6	CLAMP	1	
	AN4-6A	BOLT	2	
	AN960-416	WASHER	2	
	MS21042L4	NUT	2	
		---*---		
-38	S1517-8	CONTROL ASSEMBLY-FUEL STRAINER	1	
-39	SEE FIG 173	PRIMING SYSTEM-3 CYLINDER	1	
-40	SEE FIG 104	CONTROL ASSEMBLY-MIXTURE	1	
		ATTACHING PARTS		
-41	AN742D3	CLAMP	1	R
	S1485D13U	CLAMP	1	R
	S1485D3U	CLAMP	1	S
	S1021Z10-8	SCREW	1	
	0450311-2	CLAMP	1	
	AN960-416	WASHER	2	
	MS21042L4	NUT	1	
		---*---		
-42	SEE FIG 104	CONTROL ASSEMBLY-THROTTLE	1	
		ATTACHING PARTS		
-43	AN3-7A	BOLT	1	
	AN970-3	WASHER	1	
	AN960-10	WASHER	2	
	MS21044N3	NUT	2	
	S1104-3	ROD END	1	
	AN315-3R	NUT	1	
-44	S351	CLAMP	1	
	AN3-7A	BOLT	2	
	MS21044N3	NUT	2	
	AN960-10	WASHER	2	
		---*---		
-45	0551019-1	SUPPORT ASSEMBLY-THROTTLE	1	R
	0551019-5	SUPPORT ASSEMBLY-THROTTLE	1	S
		ATTACHING PARTS		
	MS20074-04-21	BOLT	1	
	AN960-416L	WASHER	1	
		---*---		
-46	SEE FIG 191	ALTERNATOR INSTALLATION	1	
-47	S1597-1-37.5	BELT-ALTERNATOR	1	
-48	1750011-1	SHROUD ASSEMBLY WEU 1750011-4	1	K
	1750011-4	SHROUD ASSEMBLY	1	L
		ATTACHING PARTS		
-49	AN737TW56	CLAMP	2	
		---*---		
-50	S1053K16 *	DUCT-FLEXIBLE * IN LG BULK ITEM S-1053K16-*	1	
		ATTACHING PARTS		
-51	NAS397-32	CLAMP	2	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
123 -52	0552114-1	BRACKET-AIRBOX SUPPORT WHEN EXHAUSTED USE 0552114-2	1	E
	0552114-2	BRACKET-AIRBOX SUPPORT	1	F
-52A	0552120-1	BRACKET-AIRBOX SUPPORT	1	V
		ATTACHING PARTS		
-53	AN7-42A	BOLT	2	
		---*---		
-53A	0555216-10	BRACKET-AIRBOX SUPPORT	1	Y
	0555216-16	BRACKET-AIRBOX SUPPORT	1	Z
		ATTACHING PARTS		
	AN525-10R6	SCREW	3	
		---*---		
-53B	NAS1067A3	NUTPLATE	3	
-54	0552116-10	BRACKET ASSEMBLY-COWL SNUBBER	1	
-55	0552113-1	AIRBOX ASSEMBLY WHEN EXHAUSTED USE 0552113-11	1	C
	0552113-11	AIRBOX ASSEMBLY	1	D
-55A	0552113-13	AIRBOX ASSEMBLY	1	N
		ATTACHING PARTS		
-56	AN3-3A	BOLT	3	
-57	AN960-10	WASHER	3	
-58	AN315-4R	NUT	4	
-59	AN960-416	WASHER	4	
	0550198-1	STUD	4	
-59A	21323	GASKET-AIRBOX LY	1	
		---*---		
	NAS697A3	NUTPLATE	3	M
	NAS697A3	NUTPLATE	1	N
	NAS1067A3	NUTPLATE	2	N
-60	0550180-10	VALVE ASSEMBLY	1	
-61	0550180-13	COLLAR	1	
-62	0550180-16	ARM ASSEMBLY	1	
-63	0750113-1	BEARING HOUSING ASSEMBLY	1	
-64	S1853-1	RECEPTACLE	4	
-65	0552113-5	SUPPORT	1	
-65A	0552130-11	SEAL ASSEMBLY-CARBURETOR AIR FILTER	1	N
		ATTACHING PARTS		
	AN960-D2L	WASHER	10	N
		---*---		
-66	C294510-0301	FILTER-AIR	1	
-67	1213158-2	ADAPTER-OIL PRESSURE SWITCH	1	P
	1213158-3	ADAPTER-OIL PRESSURE SWITCH	1	Q
-68	AN816-2D	NIPPLE	1	
-69	MS28778-2	O-RING	1	
-70	AN924-2D	NUT	1	P
	AN924-3D	NUT	1	Q
-71	S1711-1	SWITCH-OIL PRESSURE	1	
-72	0500118-96	LINE-OIL PRESSURE TO INSTRUMENT PANEL	1	
-73	0750139	ADAPTOR-OIL TEMPERATURE GAGE	1	
	AN900-10	GASKET	1	
-74	AN742D3	CLAMP	1	
-75	AN3-3A	BOLT	1	
	MS21044N3	NUT	1	
-76	0450311-5	CLAMP	1	
-77	AN960-10	WASHER	2	
-78	AN960-10L	WASHER	1	
-79	MS21044N3	NUT	1	
-80	S1951-4T	VALVE ASSEMBLY-OIL QUICK DRAIN	1	J

NOTE. *LENGTH TO BE ADDED LATER


A---172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
B---172 SERIAL 17257195 THRU 17263458
F172 SERIAL F17200805 F17201234
C---172 SERIAL 17256513 THRU 17257132
D---172 SERIAL 17257133 THRU 17259223
E---172 SERIAL 17256513 THRU 17258020
F---172 SERIAL 17258021 THRU 17259223
G---172 SERIAL 17256513 THRU 17258384
H---172 SERIAL 17258385 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
J---172 SERIAL 17258487 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
123 -		K---172 SERIAL 17256513 THRU 17258708 L---172 SERIAL 17258709 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 M---172 SERIAL 17256513 THRU 17259224 N---172 SERIAL 17259224 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 P---172 SERIAL 17256513 THRU 17259043 Q---172 SERIAL 17259044 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 R---172 SERIAL 17256513 THRU 17259627 S---172 SERIAL 17259628 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 T---172 SERIAL 17256513 THRU 17260223, 17260225 & 17260241 F172 SERIAL F17200805 THRU F17200844 U---172 SERIAL 17260224, 17260226 THRU 17260240 17260242 THRU 17263458 F172 SERIAL F17200845 THRU F17201234 V---172 SERIAL 17259224 THRU 17261898 F172 SERIAL F17200805 THRU F17201034 W---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234 X---172 SERIAL 17256513 THRU 17261898 F172 SERIAL F17200805 THRU F17201034 Y---172 SERIAL 17261898 THRU 17262571 17262573 THRU 17262604 17262606 THRU 17262612 F172 SERIAL F17201035 THRU F17201224 Z---172 SERIAL 17262572, 17262605 17262613 THRU 17263458 F172 SERIAL F17201225 THRU F17201234		

This page intentionally left blank.


Engine (Cont)

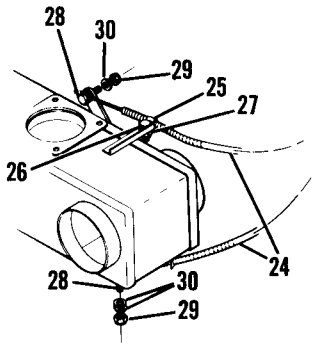


CARB HEAT CONTROL

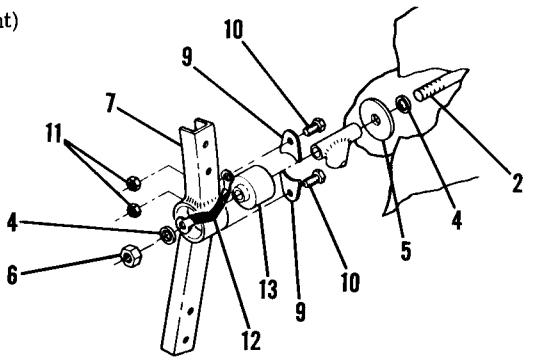



UPPER ENGINE MOUNT

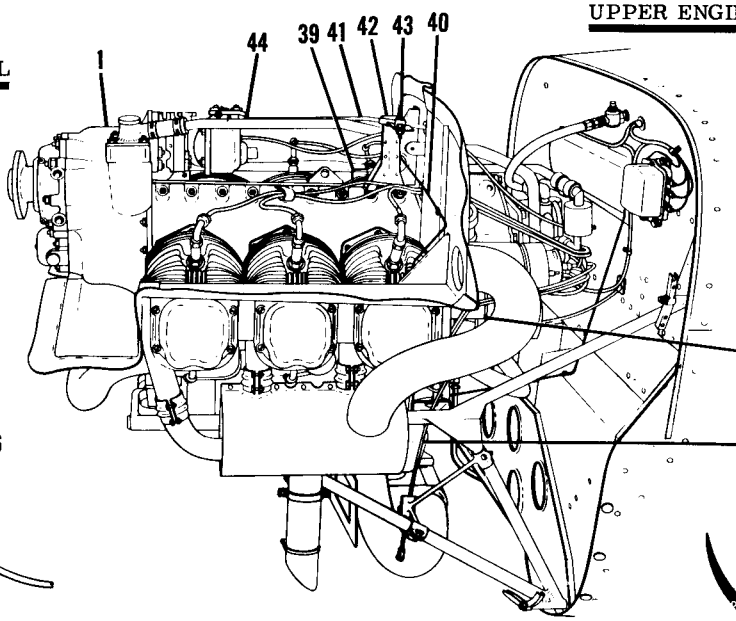

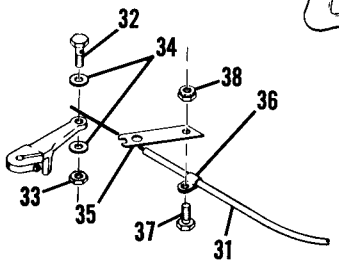


FUEL MIXTURE CONTROL

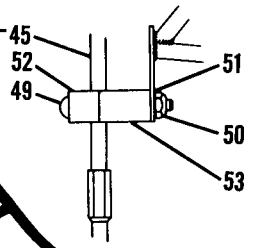


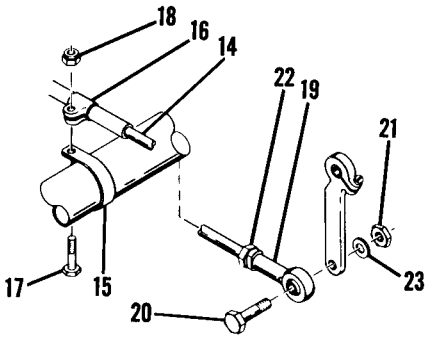

THROTTLE CONTROL

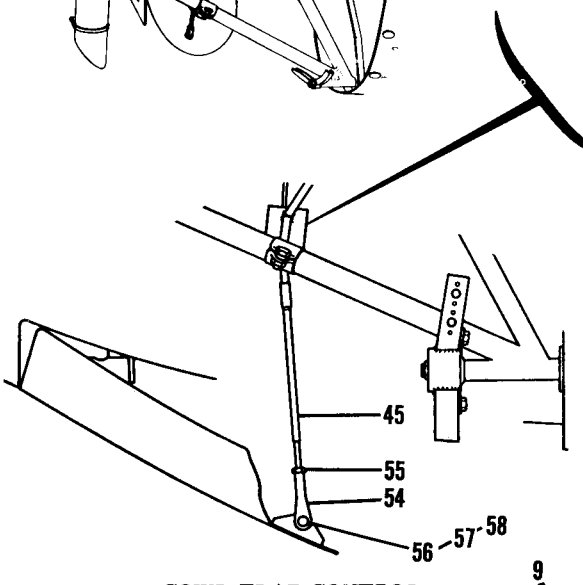

COWL FLAP CONTROL

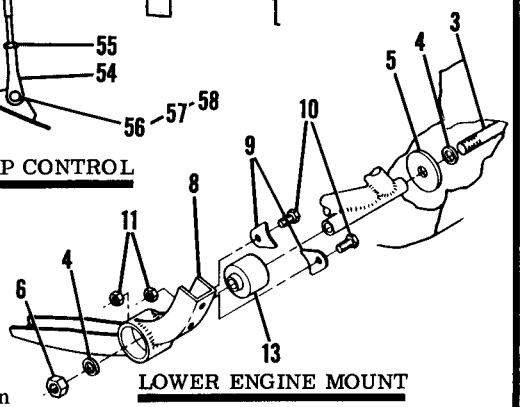

LOWER ENGINE MOUNT

P172 SERIAL P17257120 THRU P17257188

Figure 124. Engine Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
124 -		ENGINE INSTALLATION	NP	A
- 1	SEE FIG 126	ENGINE ASSEMBLY	NP	
		ATTACHING PARTS		
- 2	AN6-35A	BOLT	2	
- 3	AN6-50A	BOLT	2	
- 4	AN960-616	WASHER	8	
- 5	0550156	WASHER-ENGINE MOUNT	4	
- 6	MS21042L6	NUT	4	
		---*---		
- 7	0551013-1	MOUNT ASSEMBLY-UPPER LH	1	
	0551013-2	MOUNT ASSEMBLY-UPPER RH	1	
- 8	0551013-3	MOUNT ASSEMBLY-LOWER LH	1	
	0551013-4	MOUNT ASSEMBLY-LOWER RH	1	
- 9	0551009-1	LATCH PLATE-MOUNTING	2	
-10	AN3-3A	BOLT	2	
-11	MS21044N3	NUT	2	
-12	0551012-1	STRAP-GROUND	1	
	NAS1068A4	NUTPLATE KNM	4	
-13	0551011-1	RUBBER SHOCK MOUNT	1	
-14	S1222-4	CONTROL ASSEMBLY-THROTTLE	1	
		ATTACHING PARTS		
-15	S1601-26	CLAMP AP	1	
-16	0450191-1	CLAMP-3/8 TUBE	1	
-17	AN3-20A	BOLT	1	
-18	MS21044N3	NUT	1	
-19	S1106-4	ROD END	1	
-20	AN4-10A	BOLT	1	
-21	MS21042L4	NUT	1	
-22	AN315-4R	NUT	1	
-23	AN960C416L	WASHER	1	
-24	S1224-2	CONTROL-CARBURETOR HEAT	1	
		ATTACHING PARTS		
-25	AN742D3	CLAMP	1	
-26	AN3-4A	BOLT	1	
-27	MS21044N3	NUT	1	
-28	0450311-5	CLAMP-CONTROL WIRE	2	
-29	MS21044N3	NUT	2	
-30	AN960-10	WASHER	3	
		---*---		
-31	S1231-3	CONTROL-CARBURETOR MIXTURE	1	
		ATTACHING PARTS		
-32	0450311-4	CLAMP-CONTROL WIRE	2	
-33	MS21042L4	NUT	1	
-34	AN960-416L	WASHER	2	
-35	0750159-1	CLIP	1	
-36	AN742D3	CLAMP	1	
-37	AN3-4A	BOLT	1	
-38	MS21044N3	NUT	1	
		---*---		
	AN4022-1	NIPPLE-PRIMING JET	1	
-39	0500106-309	LINE ASSEMBLY-PRIMER BAFFLE TO NO. 1 CYLINDER	1	
-40	0500106-309	LINE ASSEMBLY-PRIMER BAFFLE TO NO. 2 CYLINDER	1	
-41	S1223-1	CONTROL-PROPELLER PITCH	1	
		ATTACHING PARTS		
-42	0550189-1	BRACKET	1	
-43	S351	CLAMP	1	
	AN3-6A	BOLT	2	
	MS21044N3	NUT	2	
	NAS43HT3-9	SPACER	2	
		---*---		

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
124 -44	S1104-3	ROD END	1	
		ATTACHING PARTS		
	AN3-7A	BOLT	1	
	AN970-3	WASHER UNDER NUT	1	
	AN960D10	WASHER EACH SIDE OF ROD END	2	
	MS21044N3	NUT	1	
	AN315-3R	NUT	1	
		---*---		
-45	S1298-1	CONTROL-COWL FLAPS	1	
		ATTACHING PARTS		
-46	0550100-9	BRACKET	2	
-47	S1485D3L	CLAMP	2	
-48	S1021Z8-8	SCREW	2	
-49	AN520-10R26	SCREW	4	
-50	MS21044N3	NUT	4	
-51	AN960-10L	WASHER	4	
-52	0713307-2	CLAMP	2	
-53	0713307-1	MOUNT	2	
		---*---		
-54	AN665-21R	TERMINAL-CLEVIS	2	
-55	AN315-3R	NUT TERMINAL LOCKING	2	
-56	MS24665-132	PIN-COTTER	2	
-57	AN960-10L	WASHER	2	
-58	MS20392-2C13	PIN-FLATHEAD	2	
	NAS43DD3-24	SPACER	2	

A---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
125 -		ENGINE ASSEMBLY-CONTINENTAL	NP	F
- 1	0300C	ENGINE CM	1	A
	0300D	ENGINE CM	1	B
	0300D	ENGINE RORY	1	E
		ATTACHING PARTS		
- 2	AN7-27A	BOLT	4	
	MS20365-720C	NUT	4	
	AN960-716	WASHER	4	
- 3	0550100-7	BONDING STRAP-ENGINE MOUNT	4	
		---*---		
- 4	SEE FIG 131	STACK ASSEMBLY-EXHAUST LH	1	
	SEE FIG 131	STACK ASSEMBLY-EXHAUST RH	1	
- 5	0550186-1	BRACE-EXHAUST STACK	1	
		ATTACHING PARTS		
- 6	S1601-36	CLAMP ADEL	2	
	MS21042L4	NUT	2	
	S1021Z10-8	SCREW	1	
	AN4-26A	BOLT	2	
		---*---		
- 7	SEE FIG 133	BAFFLE INSTALLATION-ENGINE	1	
- 8	0551014-1	MOUNT ASSEMBLY-ENGINE	1	
- 9	0500106-307	LINE ASSEMBLY-BREATHER	1	
		ATTACHING PARTS		
-10	S1495-10-	HOSE 3 IN LG BULK ITEM REF S1495-10-3.00	1	
-11	NAS397-16-1	CLAMP	2	
-12	AN742D16	CLAMP	1	
-13	S1485D10U	CLAMP	2	
	S1021Z8-12	SCREW	1	
-14	AN742D10	CLAMP	1	
	S1021Z8-8	SCREW	1	
		---*---		
-15	AN914-2D	ELBOW	1	
	AN816-7D	NIPPLE	1	
-16	S1167-8-0240	HOSE ASSEMBLY-CARBURETOR TO STRAINER	1	
-17	S1053E8T	HOSE 31.5 IN LG BULK ITEM REF S-1053E8T31.5	1	G
		ATTACHING PARTS		
	NAS397-16-1	CLAMP	2	G
		---*---		
-18	0550123	TUBE ASSEMBLY-BLAST LH	1	
	0550224-1	TUBE ASSEMBLY-BLAST RH	1	
		ATTACHING PARTS		
	0550224-4	TUBE ASSEMBLY-BLAST RH USED WITH OIL FILTER ONLY	1	
-19	AN515-8R6	SCREW	3	
	MS21044N08	NUT	3	
-20	S1485D16U	CLAMP LH ONLY	1	
-21	0550100-6	BRACKET LH ONLY	1	
	S1021Z10-8	SCREW-LH ONLY	1	
		---*---		
-22	0750139	ADAPTER-OIL TEMPERATURE GAGE	1	
-23	0500106-306	LINE-OIL PRESSURE	1	
		ATTACHING PARTS		
	AN742D2	CLAMP	1	
	S1485D10L	CLAMP	1	
	S1021Z8-8	SCREW	1	
	MS20823-2B	ELBOW	1	
		---*---		
-24	S1053K24T	HOSE 17.5 IN LG BULK ITEM REF S-1053K24T17.5	1	
-25	S1053E24T	HOSE-LH 22.25 IN LG BULK ITEM REF S-1053E24T22.25	1	
	S1053E24T	HOSE-RH 12.00 IN LG BULK ITEM REF S-1053E24T 12.00	1	
		ATTACHING PARTS		
-26	NAS398-50	CLAMP	2	
		---*---		

CONTINUED ON NEXT PAGE

Engine (Cont)

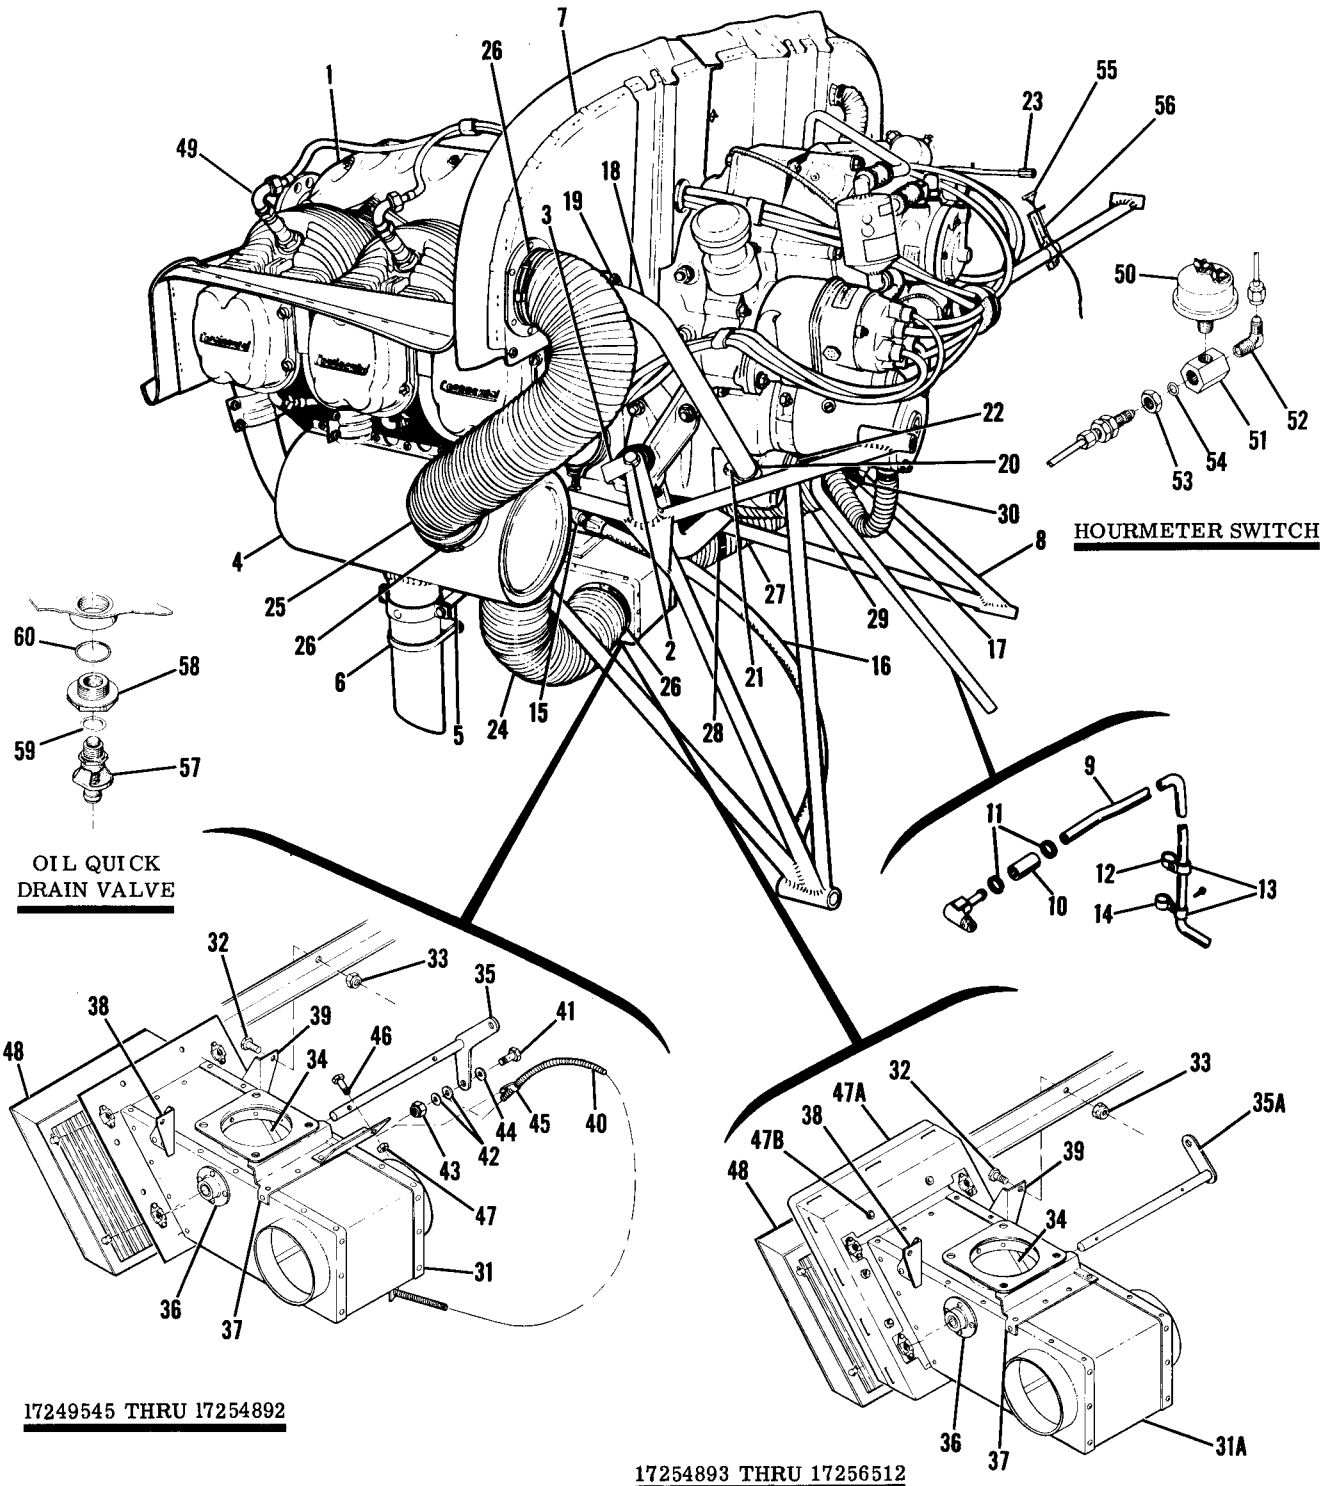

172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804

Figure 125. Engine Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
125 -27	S1053K24T		HOSE 31.00 IN LG BULK ITEM REF S-1053K24T31.00 --- ATTACHING PARTS	1	
	NAS398-50		CLAMP ----------	2	
-28	AN742D50		CLAMP ----------	2	
	AN742D10		CLAMP ----------	1	
	NAS446-4-3		NUT ----------	2	
	S1021Z8-8		SCREW ----------	2	
	AN742D2		SCREW ----------	1	
			---*---		
-29	S1053K24T		HOSE 26.00 IN LG BULK ITEM REF S-1053K24T 26.00 -- ATTACHING PARTS	1	
	NAS398-50		CLAMP ----------	2	
-30	AN742D50		CLAMP ----------	1	
	AN742D10		CLAMP ----------	1	
	NAS446-4-3		NUT ----------	1	
	S1021Z8-8		SCREW ----------	1	
			---*---		
-31	0550180-1		AIRBOX ASSEMBLY WHEN EXHAUSTED USE 0550180-27 ----------	1	C
	0550180-27		AIRBOX ASSEMBLY ----------	1	D
-31A	0550197-1		AIRBOX ASSEMBLY ----------	1	M
	0550197-5		AIRBOX ASSEMBLY ---------- ATTACHING PARTS	1	N
-32	AN3-3A		BOLT ----------	2	
-33	MS21044N3		NUT ----------	2	
			---*---		
-34	0550180-10		VALVE ASSEMBLY ----------	1	
-35	0550180-28		ARM ASSEMBLY ----------	1	G
-35A	0550180-16		ARM ASSEMBLY ----------	1	H
-36	0750113-1		HOUSING ----------	2	
-37	0550180-20		SUPPORT ----------	1	
-38	0550180-21		EAR-SUPPORT LH ----------	1	
-39	0550180-22		EAR-SUPPORT RH ----------	1	
-40	S1398-2		CASING-WIRE 17.5 IN LG BULK ITEM REF S1398-2-17.50 -	1	D
	S1398-1		WIRE-23.5 IN LG BULK ITEM REF S1398-1-23.50 -------- ATTACHING PARTS	1	D
-41	0450311-5		CLAMP ----------	2	D
-42	AN960-10		WASHER ----------	2	D
-43	MS21044N3		NUT ----------	2	D
-44	AN960-10L		WASHER ----------	1	D
-45	AN742D3		CLAMP ----------	1	D
-46	AN3-3A		BOLT ----------	1	D
-47	MS21044N3		NUT ---------- ---*---	1	D
-47A	0552130-5		SEAL ASSEMBLY-CARBURETOR AIR FILTER ---------- ATTACHING PARTS	1	N
-47B	AN960-D2L		WASHER ---------- ---*---	10	N
-48	C294510-0301		FILTER-AIRBOX ----------	1	F
-49	SH15	*	SPARK PLUG FOR USE IN SHIELDED SYSTEMS WITH 5-8 24-3A ---- THREADS	12	
	SH20A	*	SPARK PLUG FOR USE IN SHIELDED SYSTEMS WITH 5-8 24-3A ---- THREADS	12	
	SH200A	*	SPARK PLUG FOR USE IN SHIELDED SYSTEMS WITH 3-4 20-3A ---- THREADS	12	
-50	S1711-1		OIL PRESSURE SWITCH ----------	1	J
-51	1213158-2		ADAPTER ----------	1	J
-52	MS20822-2D		ELBOW ----------	1	J
-53	AN924-2D		NUT ----------	1	J
-54	MS28778-2		O RING ----------	1	J
-55	S1517-6		CONTROL-STRAINER ----------	1	K

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
125 -56	1716013-1	BRACKET-CONTROL	1	K
		ATTACHING PARTS		
	AN741TD5	CLAMP	1	K
	AN4-46	BOLT	1	K
	AN960-416	WASHER	1	K
	MS21042L2	NUT	1	K
	AN742D3	CLAMP	2	K
	S1021Z8-8	SCREW	2	K
	NAS446-4-3	NUT	2	K
		---*---		
-57	S1964-3	VALVE ASSEMBLY-OIL QUICK DRAIN	1	L
-58	0550323-1	FITTING-QUICK DRAIN VALVE	1	L
-59	AN900-10	GASKET-VALVE	1	L
-60	AN900-16	GASKET-FITTING	1	L


NOTE. *SPARK PLUGS ARE LISTED IN ORDER OF HEAT RANGE, PROGESSIVELY COLDER FROM TOP LISTING TO BOTTOM.


A---172 SERIAL 17249545 THRU 17256512
B---172 SKYHAWK SERIAL 17249545 THRU 17256512
C---172 SERIAL 17249545 THRU 17253392
F172 SERIAL F172-0001 THRU F172-0179
D---172 SERIAL 17253393 THRU 17254892
F172 SERIAL F172-0180 THRU F172-0319
E---F172 SERIAL F172-0001 THRU F17200804
F---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804
G---172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
H---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200804
J---172 SERIAL 17256355 THRU 17256512
K---F172 SERIAL F172-0560 THRU F17200804
L---F172 SERIAL F17200655 THRU F17200804
M---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200754
N---F172 SERIAL F17200755 THRU F17200804

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
126 -		ENGINE ASSEMBLY-CONTINENTAL	NP	A
- 1	GO300E	ENGINE CM	1	
		ATTACHING PARTS		
- 2	0750132-1	SHOCK MOUNT	4	
	0750137	STRAP-GROUND	4	
	MS20253-5	PIN 1.00 IN LG BULK ITEM REF MS20253-5-100	4	
	AN7-32A	BOLT	4	
		---*---		
- 3	SEE FIG 131	STACK ASSEMBLY-EXHAUST LH	1	
	SEE FIG 131	STACK ASSEMBLY-EXHAUST RH	1	
- 4	SEE FIG 136	BAFFLE INSTALLATION-ENGINE	NP	
- 5	0550215-8	MOUNT ASSEMBLY-ENGINE	1	
- 6	0550229-1	BRACE ASSEMBLY COWL FLAP CONTROL LH	1	
	0550229-2	BRACE ASSEMBLY COWL FLAP CONTROL RH	1	
		ATTACHING PARTS		
	AN4-7A	BOLT	2	
	MS21042L4	NUT	2	
	AN960C-416L	WASHER	AR	
		---*---		
- 7	0500106-352	LINE-BREATHER	1	
		ATTACHING PARTS		
- 8	S1495-12-	HOSE 2.5 IN LG BULK ITEM S1495-12-2.50	1	
- 9	NAS397-16	CLAMP	2	
	AN742D20	CLAMP	1	
	S1485D12L	CLAMP	1	
	S1021Z8-12	SCREW	1	
		---*---		
-10	S1167-6-0220	HOSE ASSEMBLY-CARBURETOR TO STRAINER	1	
		ATTACHING PARTS		
-11	AN914-2D	ELBOW	1	
	AN816-7D	NIPPLE	1	
	AN742D20	CLAMP	1	
	S1486DG12U	CLAMP	1	
		---*---		

CONTINUED ON NEXT PAGE

Engine (Cont)

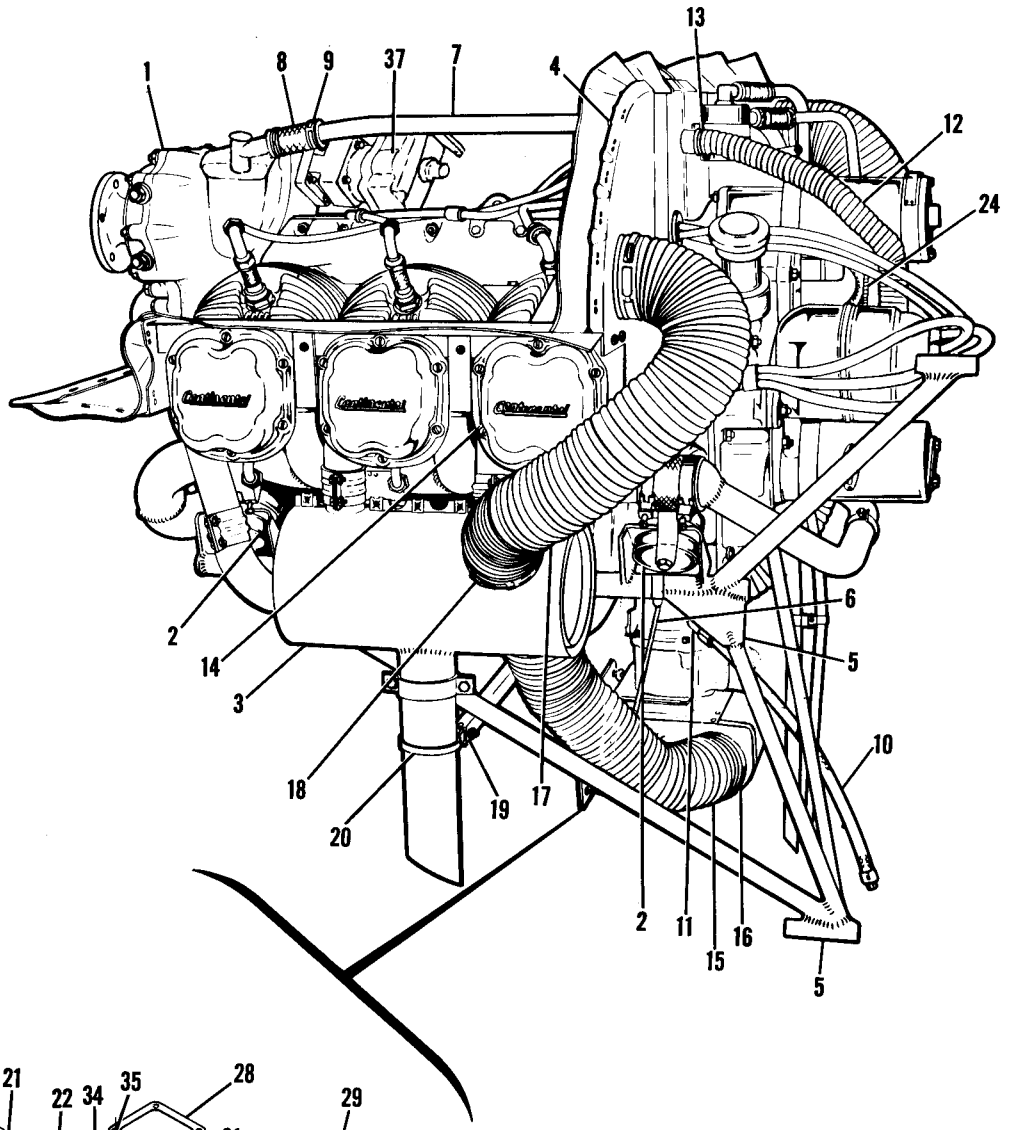

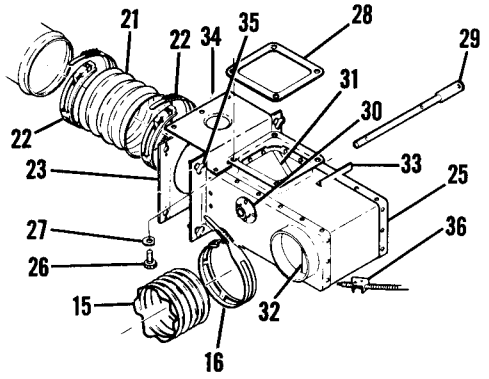

P172 SERIAL P17257120 THRU P17257188

Figure 126. Engine Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
126 -12	S1053E8T		HOSE 21.0 IN LG BULK ITEM REF S-1053E8T21.0	1	
			ATTACHING PARTS		
-13	NAS397-16		CLAMP	2	
			---*---		
	0513144-3		ADAPTER-OIL TEMPERATURE	1	
-14	0500106-294		LINE-OIL PRESSURE	1	
			ATTACHING PARTS		
	AN816-2B		NIPPLE	1	
	S1155-2		CLAMP	1	
			---*---		
-15	S1053K24T		HOSE 24.0 IN LG BULK ITEM REF S-1053K24T24.0	1	
			ATTACHING PARTS		
-16	NAS398-50		CLAMP	2	
-17	S1053E24T		HOSE 26.0 IN LG BULK ITEM REF S-1053E24T26.0	2	
			ATTACHING PARTS		
-18	NAS398-50		CLAMP	4	
			---*---		
-19	0550311-1		BRACE	1	
			ATTACHING PARTS		
-20	684-3-11-36P		CLAMP ADEL	2	
	Q901-36		CLAMP ADEL ALTERNATE FOR 684-3-11-36P	2	
	AN3-26A		BOLT	2	
	MS21044N3		NUT	2	
			---*---		
-21	S1053K28W		HOSE 4.3 IN LG BULK ITEM REF S-1053K28W4.3	1	
			ATTACHING PARTS		
-22	AN735056		CLAMP	2	
			---*---		
-23	0552007-6		PLATE ASSEMBLY-COUPLING	1	
	S1853-2		RECEPTACLE-STUD ALIC	4	
-24	0550218-1		DRIVE-90 DEGREES	1	
	0550218-2		PIN	1	
	120009		FILTER-CARBURETOR AIR AMA	1	
	120009-06		GASKET-AIR FILTER AMA	1	
-25	0550181-1		AIR BOX ASSEMBLY-CARBURETOR	1	
			ATTACHING PARTS		
-26	AN74A3		BOLT	4	
-27	0750131-1		WASHER	4	
-28	0750142-1		GASKET-CARBURETOR AIR BOX	1	
			---*---		
-29	0550188-1		ARM ASSEMBLY	1	
			ATTACHING PARTS		
-30	0750113-1		BEARING HOUSING	2	
			---*---		
-31	0550187-1		VALVE ASSEMBLY	1	
-32	0550181-7		VALVE ASSEMBLY	1	
-33	0550197-4		ANGLE	1	
-34	0550214-9		SUPPORT	1	
-35	28S7-4		STUD CLC	4	
-36	0450286-1		CLIP	1	
-37	0550227-1		PROPELLER GOVERNOR	1	
	S1053K24T	*	HOSE AIR BOX TO VALVE ON FIREWALL 24.5 IN LG	1	
			BULK ITEM REF S-1053K24T24.5		
	S1053K24T	*	HOSE FRONT BAFFLE TO RH HEATER MUFF 31.0 IN LG	1	
			BULK ITEM REF S-1053K24T31.0		
	S1053K24T	*	HOSE RH HEATER MUFF TO VALVE ON FIREWALL	1	
			23.0 IN LG BULK ITEM REF S-1053K24T23.0		
	SH20A	**	SPARK PLUG FOR USE IN SHIELDED SYSTEMS WITH 5-8 24-3A	8	
			THREADS		
	SH200A	**	SPARK PLUG FOR USE IN SHIELDED SYSTEMS WITH 3-4 20-3A	12	
			THREADS		
	SH26	**	SPARK PLUG FOR USE IN SHIELDED SYSTEMS WITH 5-8 24-3A	12	
			THREADS		
	SH260	**	SPARK PLUG FOR USE IN SHIELDED SYSTEMS WITH 3-4 20-3A	12	
			THREADS		

NOTE. *FOR INSTALLATION AND ATTACHING PARTS OF THESE ITEMS SEE FIGURE 124.

NOTE. **SPARK PLUGS ARE LISTED IN ORDER OF HEAT RANGE, PROGESSIVELY COLDER FROM TOP LISTING TO BOTTOM.

A---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
127 -		*	ENGINE COMPONENTS & ASSOCIATED ACCESSORIES	NP	K
- 1	626356		MAGNETO SLICK 664 CM	2	A
	626416		MAGNETO SLICK 667 CM	2	B
- 2	535324		GASKET-MAGNETO TO ENGINE CM	2	
- 3	530603		GEAR-MAGNETO DRIVE CM	2	
- 4	633029		CARBURETOR CM	1	A
	626789		CARBURETOR CM	1	B
- 5	21323		GASKET-CARBURETOR TO ENGINE CM	1	A
	AN123990		GASKET-CARBURETOR TO ENGINE	1	B
- 6	C294510-0301		FILTER-CARBURETOR AIR	1	A
- 7	12CC09		FILTER-CARBURETOR AIR AMA	1	B
- 8	50309		STARTER MANUALLY ENGAGED CM	1	C
	631261		STARTER CM	1	D
	MS9021-038		SEAL-STARTER	1	
- 9	628313		GENERATOR-20 AMP	1	E
	05CC037-4		GENERATOR-35 AMP	1	F
	C611501-0202		ALTERNATOR-60 AMP	1	G
	361CC		GASKET-GENERATOR-ALTERNATOR & TACHOMETER DRIVE CM	1	
-10	EQ5820		DRIVE ASSEMBLY-ALTERNATOR CM	1	G
-11	0413205-12		VOLTAGE REGULATOR-20 AMP	1	E
	0413205-10		VOLTAGE REGULATOR-35 AMP	1	F
	C611001-0101		VOLTAGE REGULATOR-60 AMP	1	G
-12	629150		IGNITION HARNESS-RIGHT MAGNETO 5/8-24 THDS CM	1	A
	629151		IGNITION HARNESS-LEFT MAGNETO 5/8-24 THDS CM	1	A
	630574		IGNITION HARNESS-RIGHT MAGNETO 5/8-24 THDS CM	1	B
	630575		IGNITION HARNESS-LEFT MAGNETO 5/8-24 THDS CM	1	B
-13	35342		TACHOMETER DRIVE ASSEMBLY CM	1	
-14	0550315-200		GOVERNOR	1	B
	MS1CC009		GASKET-GOVERNOR MOUNTING	1	
-15	SH15	**	SPARK PLUG SHIELDED SYSTEM WITH 5/8-24 THREADS	12	A
	SH20A	**	SPARK PLUG SHIELDED SYSTEM WITH 5/8-24 THREADS	12	
	SH20CA	**	SPARK PLUG SHIELDED SYSTEM WITH 3/4-20 THREADS	12	
	SH26	**	SPARK PLUG SHIELDED SYSTEM WITH 5/8-24 THREADS	12	B
	SH26C	**	SPARK PLUG SHIELDED SYSTEM WITH 3/4-20 THREADS	12	B
-16	1118823		CONTACTOR-STARTER CN STARTER CM	1	H
	SAW4206-1		CONTACTOR-STARTER CN FIREWALL ELAG	1	J
	SAW4204-1		CONTACTOR-STARTER CN FIREWALL ALT ELAG	1	J

172 SERIAL 17249545 THRU 17256512

THRU 17256512

F172 SERIAL

F172-0001 THRU

F17200804

P172 SERIAL

P17257120 THRU P17257188

NOTE. *THIS LISTING IS COMPILED TO PROVIDE PART NUMBERS OF COMMONLY USED ENGINE COMPONENTS AND ASSOCIATED ACCESSORIES. RELATIONSHIP OF THESE PART TO ENGINE OR AIRCRAFT ASSEMBLIES IS NOT INDICATE BY INDENTION. THIS FIGURE IS NOT ILLUSTRATED. INDEX NUMBERS ARE PROVIDED FCR LOCATION OF LINE ON WHICH THE PART NUMBER APPEARS.

NOTE. **SPARK PLUGS ARE LISTED IN ORDER OF HEAT RANGE, PROGESSIVELY CCLDER FROM TOP LISTING TO BOTTOM.


A---172 SERIAL 17249545 THRU 17256512
172 SKYHAWK SERIAL 17249545 THRU 17256512
B---P172 SERIAL P17257120 THRU P17257188
C---172 SERIAL 17249545 THRU 17256512
D---172 SKYHAWK SERIAL 17249545 THRU 17256512
P172 SERIAL P17257120 THRU P17257188
E---172 SERIAL 17249545 THRU 17254892
F---172 SKYHAWK SERIAL 17249545 THRU 17254892
P172 SERIAL P17257120 THRU P17257188
G---172 SERIAL 17254893 THRU 17256512
H---172 SERIAL 17249545 THRU 17255146
F172 SERIAL F172-0001 THRU F172-0479
J---172 SERIAL 17255147 THRU 17256512
F172 SERIAL F172-0480 THRU F17200804
K---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
128 -	*	ENGINE COMPONENTS & ASSOCIATED ACCESS 0-320-E2D ENGINE	NP	A
- 1	4050	MAGNETO RH SLICK	1	
	4051	MAGNETO LH IMPULSE COUPLING SLICK	1	
- 2	73820	GASKET-MAGNETO LY	2	
- 3	77743	HARNESS ASSEMBLY-RH LY 172 SERIAL 17256513	1	
	77745	HARNESS ASSEMBLY-LH LY THRU 17263458	1	
- 4	76211	STARTER 12V LY	1	
- 5	C611501-0101	ALTERNATOR	1	
- 6	75380	LINK-ALTERNATOR ADJUSTING LY	1	
- 7	C611001-0101	VOLTAGE REGULATOR	1	
- 8	78728-M/S	CARBURETOR MARVEL-SCHEBLER MODEL MA4SPA	1	
- 9	66224	GASKET-CARBURETOR LY F172 SERIAL F17200805	1	
-10	75148	FUEL PUMP LY	1	
-11	60096	GASKET-FUEL PUMP LY THRU F17201234	1	
-12	C431002-0101	VACUUM PUMP	1	
-13	8313	GASKET-VACUUM PUMP LY	1	
-14	61098	ADAPTER ASSEMBLY-VACUUM PUMP LY	1	
-15	75906	GASKET-ROCKER BOX COVER LY	4	
-16	68972	GASKET-OIL SUMP LY	1	
-17	69116	GAGE ASSEMBLY-OIL LEVEL LY	1	
	74068	SEAL RING-OIL GAGE LY	1	
-18	SH15	SPARK PLUG	8	

NOTE. *THIS LISTING IS COMPILED TO PROVIDE PART NUMBERS OF COMMONLY USED ENGINE COMPONENTS & ASSOCIATED ACCESSORIES. RELATIONSHIP OF THESE PARTS TO ENGINE OR AIRCRAFT ASSEMBLIES IS NOT INDICATED BY INDENTION THIS FIGURE IS NOT ILLUSTRATED. INDEX NUMBERS ARE PROVIDED FOR LOCATION OF LINE ON WHICH THE PART NUMBER APPEARS.

A---172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Propeller Governor

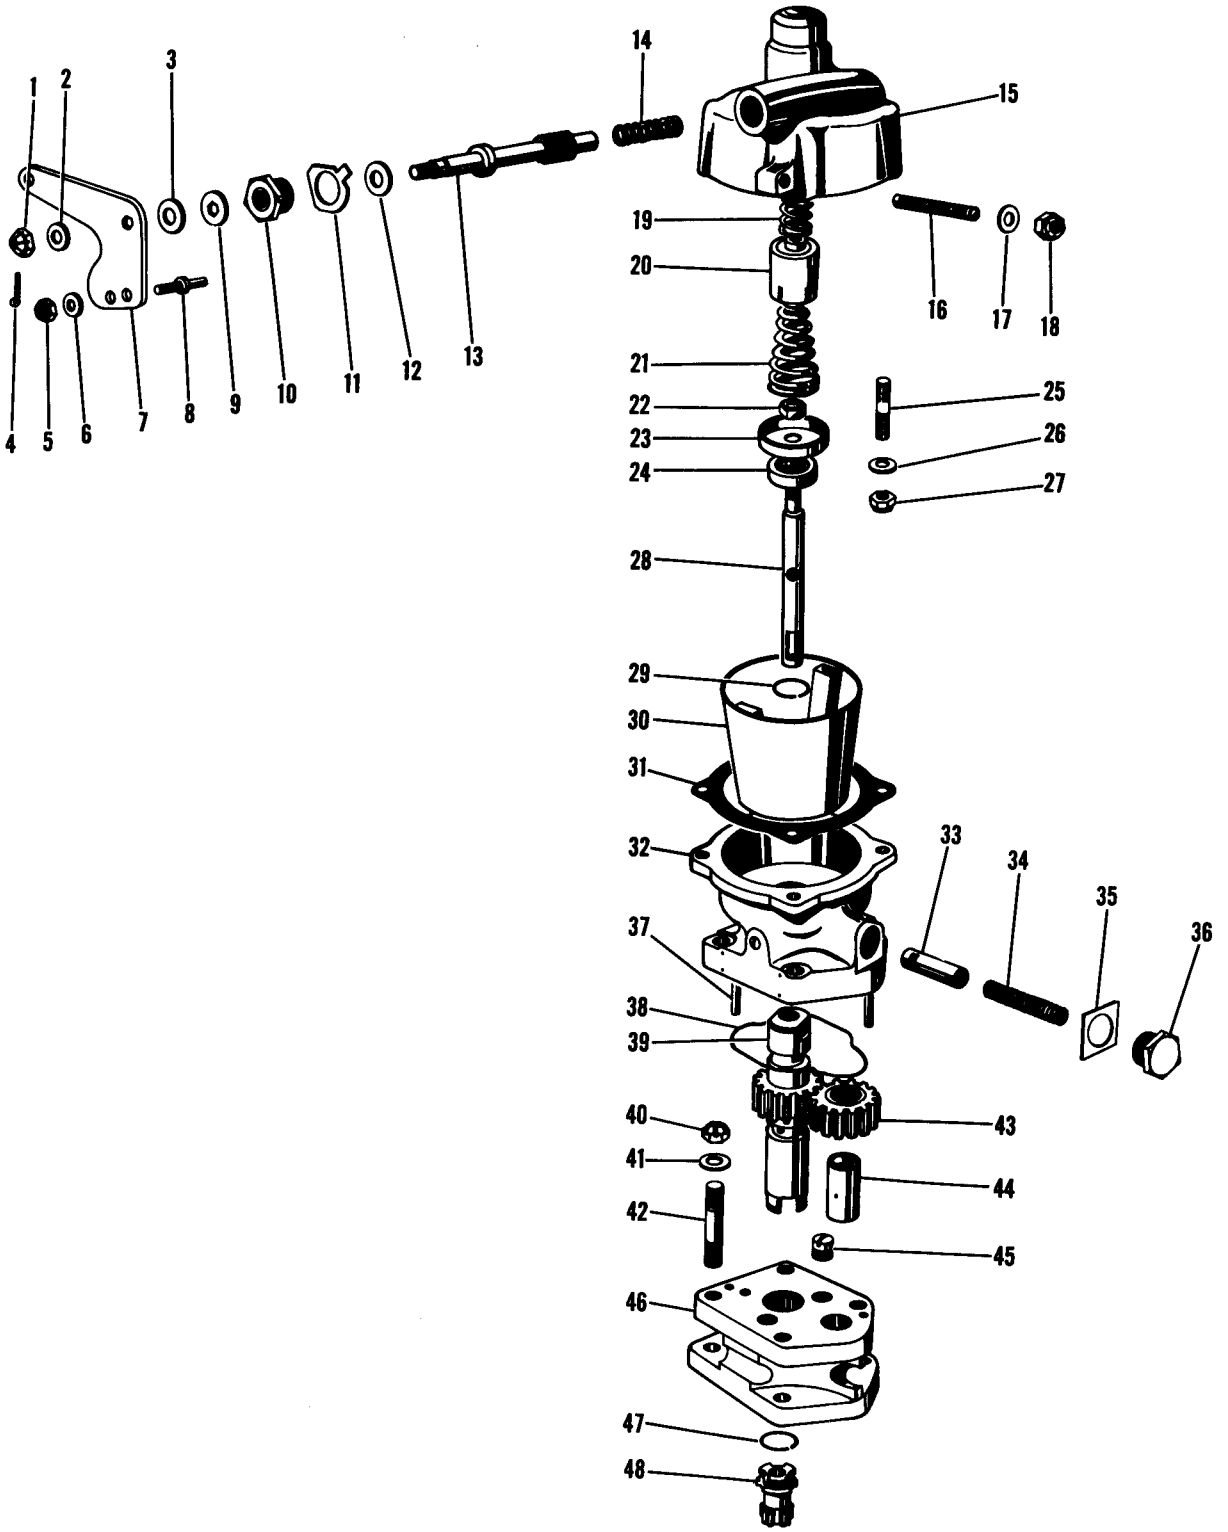

P172 SERIAL P17257120 THRU P17257188


Figure 129. Propeller Governor Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
129 -	0550227-1 *	GOVERNOR ASSEMBLY-PROPELLER WHEN EXHAUSTED USE 0550315-200	1	A
- 1	AN310-4	CONTROL ARM NUT	1	
- 2	AN960-10L	WASHER	1	
- 3	AN960-516	WASHER	1	
- 4	MS24665-132	COTTER PIN	1	
- 5	MS21044N3	NUT	1	
- 6	AN960-10L	WASHER	1	
- 7	34-827-1	OPERATING ARM GARW	1	
- 8	34-825-7	STOP PIN GARW	1	
- 9	50674	WASHER, HEXAGON HOLE GARW	1	
-10	55172	PACKING NUT GARW	1	
-11	55149	PACKING NUT LOCK GASKET GARW	1	
-12	53265	PACKING RING GARW	1	
-13	53345	CONTROL SHAFT GARW	1	
-14	50661	CONTROL SHAFT SPRING GARW	1	
-15	55774	HEAD GARW	1	
-16	53294	SCREW-RPM ADV. GARW	1	
-17	AN960-10L	WASHER	1	
-18	MS21044N3	NUT	1	
-19	34-827-2	BALANCING SPRING GARW	1	
-20	34-827-901	RACK ASSEMBLY GARW	1	
-21	34-827-7	SPEEDER SPRING GARW	1	
-22	MS20365D420C	PILOT VALVE NUT	1	
-23	34-827-6	SPEEDER SPRING SEAT GARW	1	
-24	50668	BALL BEARING GARW	1	
-25	51692	HEAD STUD GARW	4	
-26	AN960-416L	WASHER	4	
-27	MS21042L4	NUT	4	
-28	34-827-3	PILOT VALVE GARW	1	
-29	52121	LOCK RING GARW	1	
-30	52155	FLY WEIGHT ASSEMBLY GARW	1	
-31	50672	HEAD GASKET GARW	1	
-32	52203	BODY GARW	1	
-33	52204	RELIEF VALVE PLUNGER GARW	1	
-34	34-825-8	RELIEF VALVE SPRING GARW	1	
-35	52205	RELIEF PLUG GASKET GARW	1	
-36	52204	RELIEF VALVE PLUG GARW	1	
-37	53166	DOWEL PIN GARW	1	
-38	51471	BODY & BASE GASKET GARW	1	
-39	53940	DRIVE GEAR SHAFT GARW	1	
-40	AN310-5	NUT	4	
-41	AN960-516	WASHER	4	
-42	53914	BASE STUD GARW	4	
-43	50659	IDLER GEAR GARW	1	
-44	50692	IDLER GEAR SHAFT GARW	1	
-45	50658	PLUG GARW	2	
-46	34-825-6	BASE GARW	1	
-47	53942	LOCK RING GARW	1	
-48	53939	DRIVE COUPLING GARW	1	

NOTE. *REFER TO FIGURE 130 FOR BREAKDOWN OF 0550315-200 PROPELLER GOVERNOR ASSEMBLY.

A---P172 SERIAL P17257120 THRU P17257188

Propeller Governor (Cont)

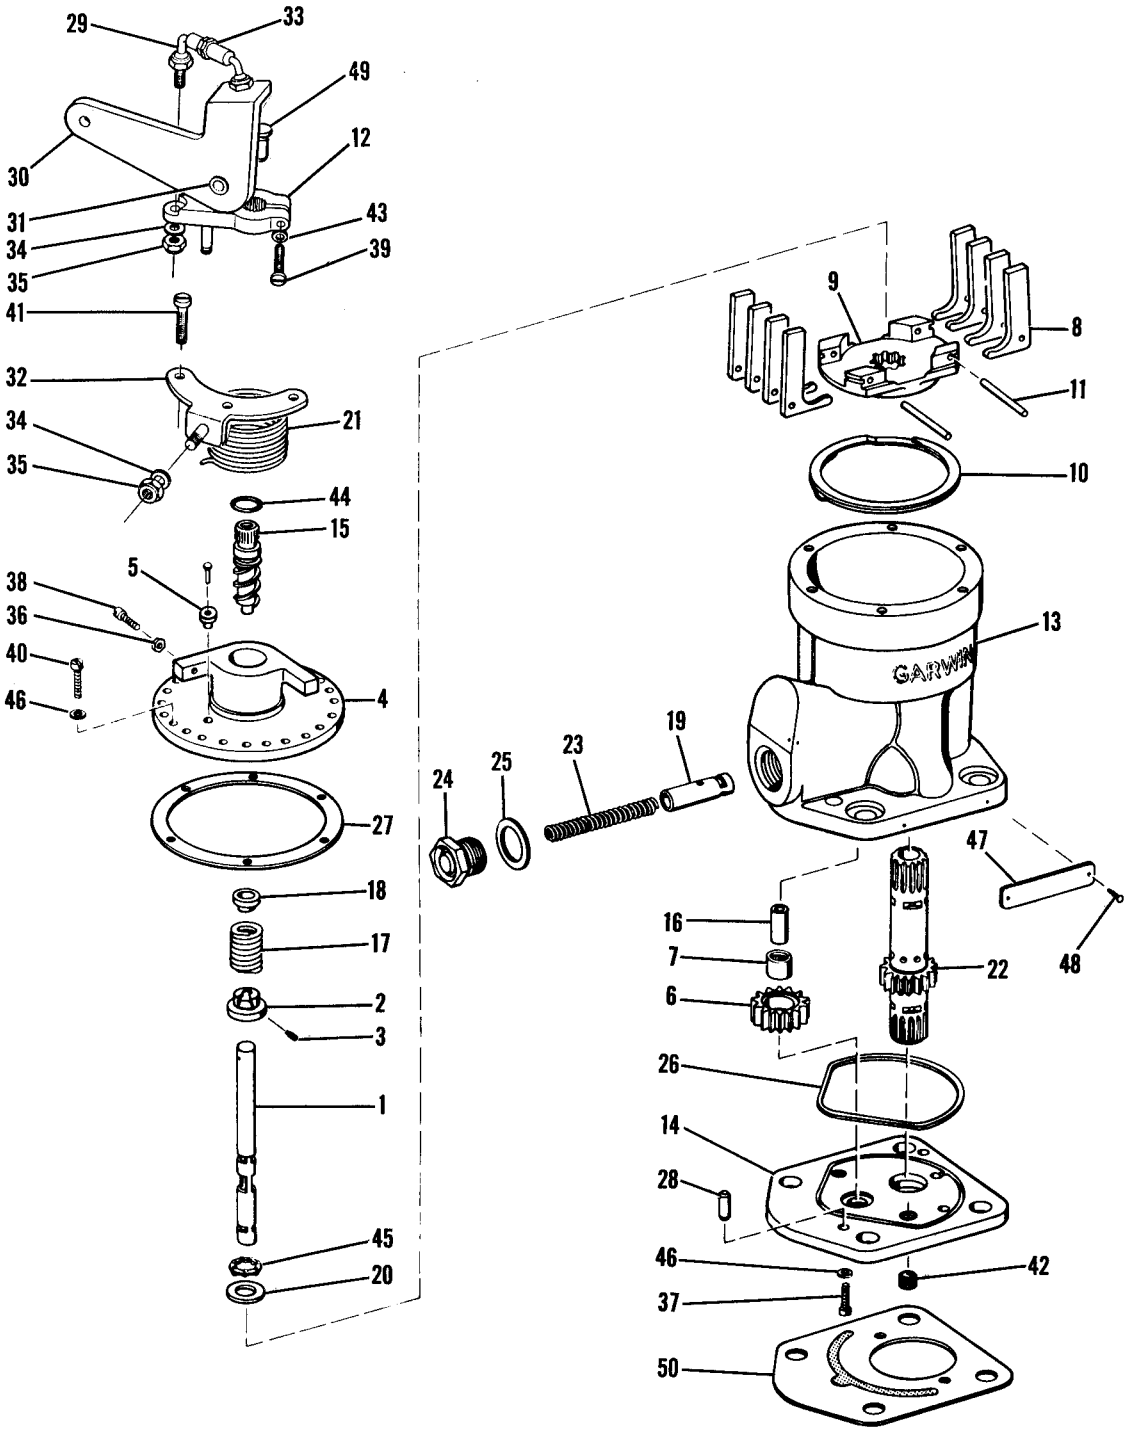


P172 SERIAL P17257120 THRU P17257188

Figure 130. Propeller Governor Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
130 -	0550315-200	GOVERNOR ASSEMBLY-PROPELLER	1	A
- 1	34828-901	PILOT VALVE ASSEMBLY	1	
	34-828-17	PILOT VALVE	1	
- 2	34-828-18	RACE-PILOT VALVE UPPER	1	
- 3	34-828-22	SCREW-ALLEN	1	
- 4	34-828-903	COVER ASSEMBLY	1	
- 5	34-828-21	STOP	1	
- 6	828-905	IDLER GEAR ASSEMBLY	1	
- 7	GB59	BEARING TOR	1	
	34-828-906	FLYWEIGHT ASSEMBLY	1	
- 8	34-828-9	FLYWEIGHT	8	
- 9	34-828-14	BASE-FLYWEIGHT HEAD	1	
-10	34828-26	RING-SNAP	1	
-11	B1316	PIN-DOWEL TOR	2	
-12	34-831-902	LEVER ASSEMBLY	1	
-13	34-828-1	BODY	1	
-14	34828-2	BASE	1	
-15	34-828-908	SPEED AJUSTMENT ASSEMBLY	1	
-16	34-828-7	STUD-IDLER GEAR	1	
-17	34-831-8	SPRING-SPEEDER	1	
-18	34-828-10	UPPER SEAT-SPEEDER SPRING	1	
-19	34-828-11	PLUNGER-RELIEF VALVE	1	
-20	34-828-12	RACE-BEARING	1	
-21	34-828-13	SPRING-CONTROL LEVER	1	
-22	34-828-15	GEAR-DRIVE	1	
-23	34-828-20	SPRING-RELIEF VALVE	1	
-24	34-828-24	PLUG	1	
-25	34-828-25	WASHER-FLAT	1	
-26	34-828-27	GASKET-BASE	1	
-27	34-828-28	SEAL-COVER	1	
-28	34-828-29	PIN	1	
-29	34-831-1	BALL LINKAGE	2	
-30	34-831-6	ARM	1	
-31	34-831-4	BUSHING-FLANGED	2	
-32	34-831-901	BRACKET ASSEMBLY	1	
-33	AN340-10	NUT	2	
-34	AN960-10L	WASHER	3	
-35	MS21044N3	NUT	3	
-36	AN340-8	NUT	1	
-37	AN500-8-8	SCREW	2	
-38	AN503-8-16	SCREW	1	
-39	AN502-10-14	SCREW	1	
-40	AN502-8-10	SCREW	3	
-41	AN503-8-12	SCREW	3	
-42	AN932-1	PIPE PLUG	2	
-43	AN935-10L	WASHER	1	
-44	AN6227-9	O RING	1	
-45	R5673	BEARING	1	
-46	AN935-8L	WASHER	9	
-47	21-831-1	NAMEPLATE	1	
-48	AN535-00-2	SCREW	1	
-49	34-828-31	PLUG	1	
	401814	STUD CMC	4	
-50	MS100009	GASKET-MOUNTING	1	

A---P172 SERIAL P17257120 THRU P17257188 WHEN
0550227-1 IS EXHAUSTED
FP172 SERIAL FP172-0001 THRU FP172-0003

Engine (Cont)

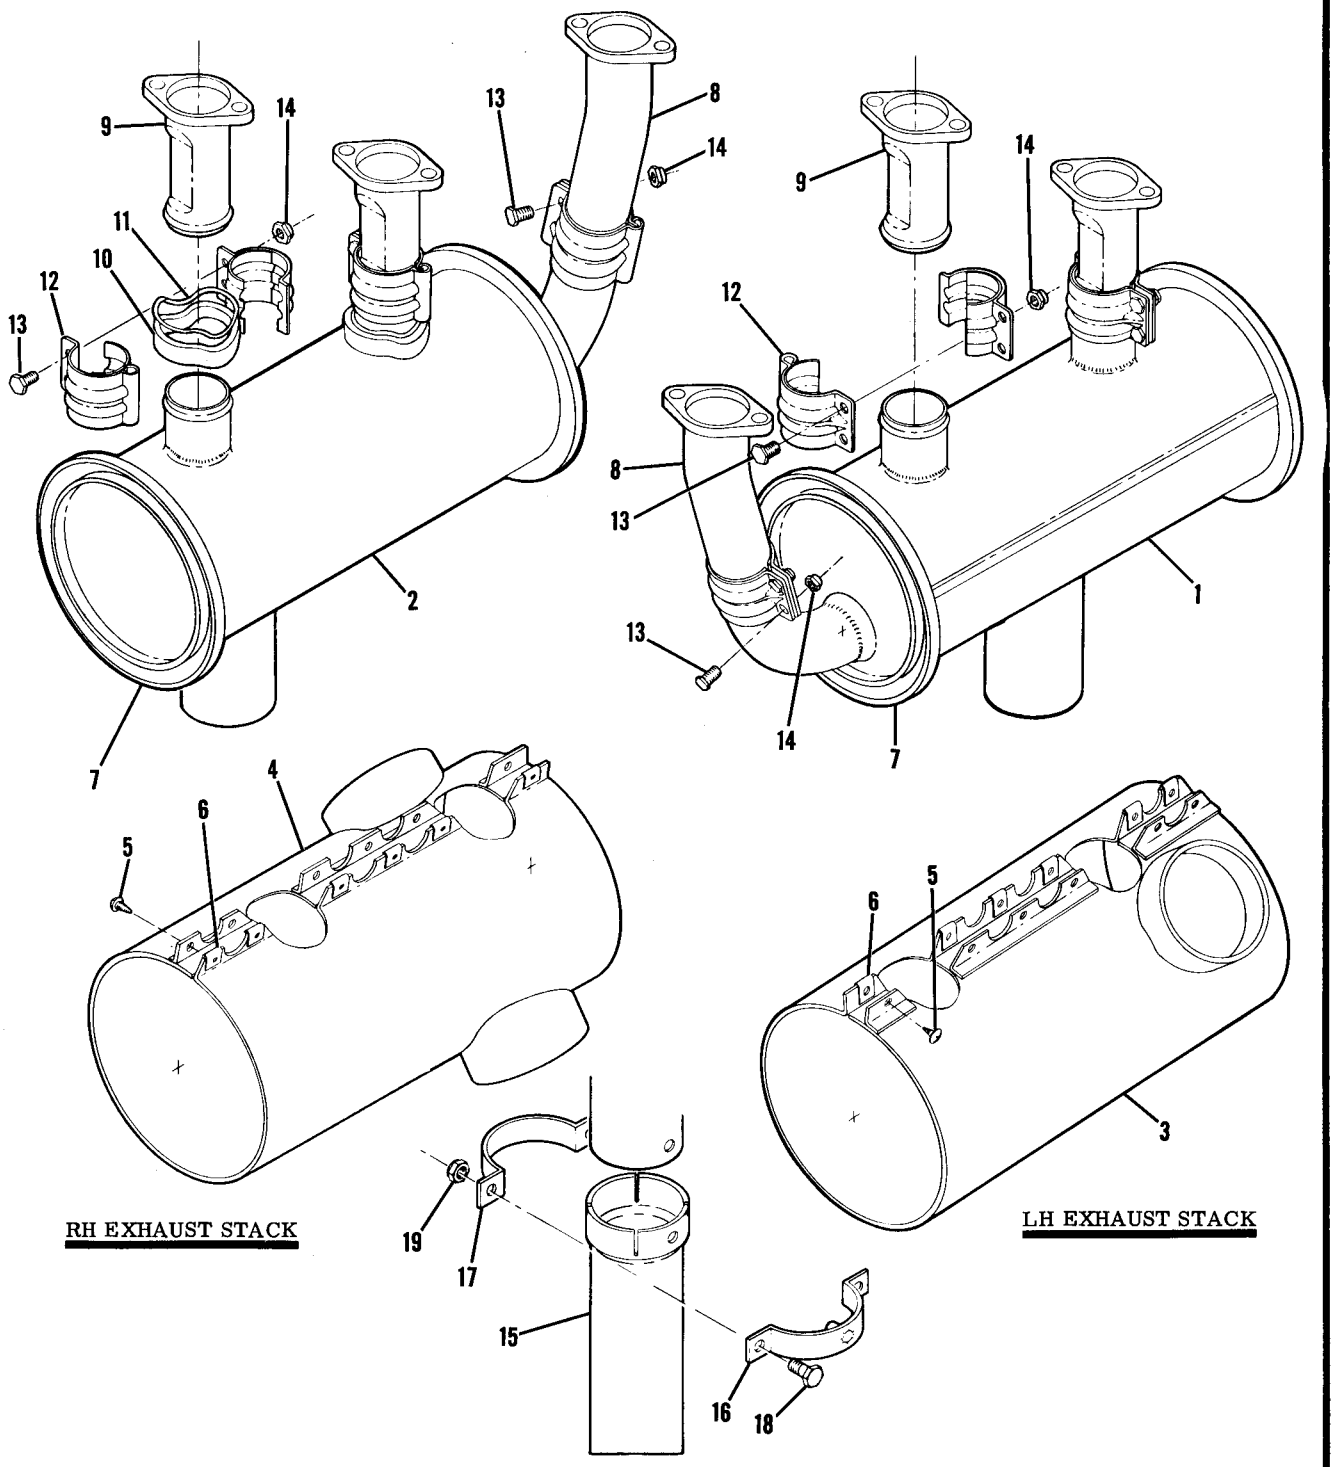


F172 SERIAL F172-0001 THRU F17200804
172 SERIAL 17249545 THRU 17256512
P172 SERIAL P17257120 THRU P17257188

Figure 131. Exhaust Stack Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
131 - 1	0550176-65	EXHAUST STACK ASSEMBLY-LH	1	B
	0550176-55	EXHAUST STACK ASSEMBLY-LH	1	A
- 2	0550176-66	EXHAUST STACK ASSEMBLY-RH	1	B
	0550176-56	EXHAUST STACK ASSEMBLY-RH	1	A
- 3	0550176-37	SHROUD ASSEMBLY-LH	1	
- 4	0550176-38	SHROUD ASSEMBLY-RH	1	
		ATTACHING PARTS		
- 5	S1021Z8-6	SCREW	6	
- 6	NAS395-14-3	NUT	6	
		---*---		
- 7	0550176-59	MUFFLER WELD ASSEMBLY	1	
- 8	0550176-57	RISER ASSEMBLY	1	
- 9	0450338-14	STACK-INLET	2	
-10	0550176-22	SEAL	2	
-11	0550176-45	PACKING	2	
-12	0550176-50	CLAMP ASSEMBLY	3	
		ATTACHING PARTS		
-13	AN3-4A	BOLT	2	
-14	MS21044N3	NUT	2	
		---*---		
-15	0550176-53	TAILPIPE	1	B
	0550176-54	TAILPIPE	1	A
		ATTACHING PARTS		
-16	0550176-31	CLAMP HALF ASSEMBLY	1	
-17	0550176-26	CLAMP HALF	1	
-18	AN4-4A	BOLT	2	
-19	MS21042L4	NUT	2	
		---*---		
	10172-013-2	EXTENSION-TAILPIPE	1	C

A---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804
B---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
C---172 SERIAL 17247747 THRU 17256512

Engine (Cont)

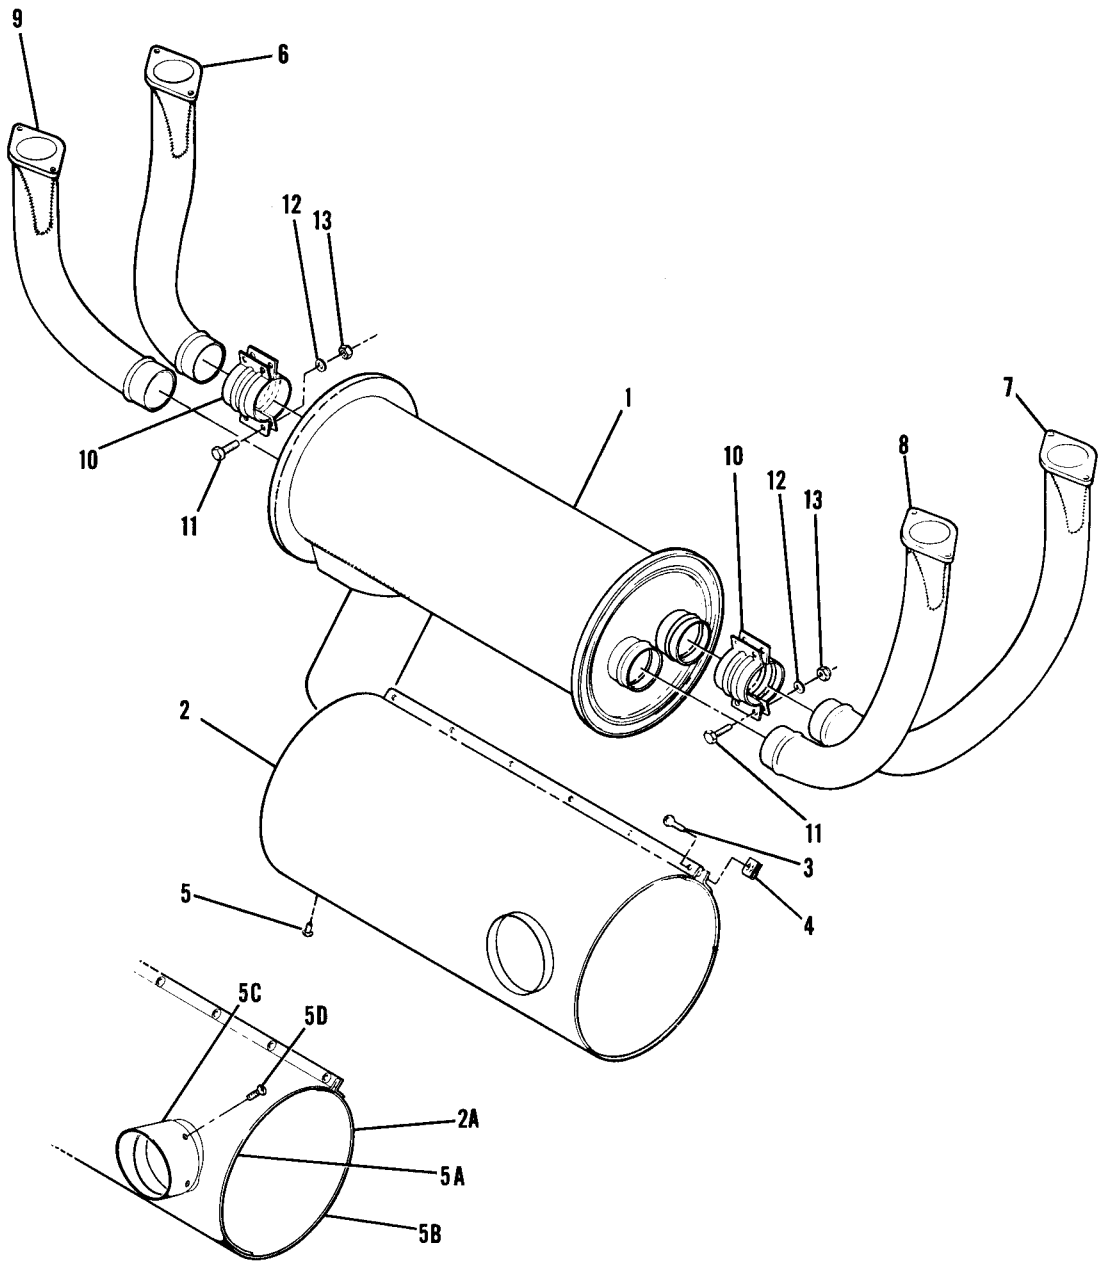

17261899 THRU 17263458


172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Figure 132. Exhaust System Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
132 -	1754001-4	EXHAUST SYSTEM ASSEMBLY	1	A
	1754001-12	EXHAUST SYSTEM ASSEMBLY	1	C
	1754001-16	EXHAUST SYSTEM ASSEMBLY	1	E
- 1	1754001-8	MUFFLER ASSEMBLY WEU 1754001-9	1	A
	1754001-14	MUFFLER ASSEMBLY	1	A
	1754001-15	MUFFLER ASSEMBLY	1	B
- 2	0554001-1	SHROUD ASSEMBLY	1	D
- 2A	0554001-3	SHROUD ASSEMBLY WEU 0554001-5	1	F
	0554001-5	SHROUD ASSEMBLY	1	G
		ATTACHING PARTS		
- 3	S1021Z8-8	SCREW	6	
- 4	NAS395-14-3	NUT	6	
- 5	S1021Z8-6	SCREW	2	
	NAS446-4-3	NUT	2	
		---*---		
- 5A	0554001-6	SHROUD-UPR FWD	1	G
- 5B	0554001-7	SHROUD-LWR AFT	1	G
- 5C	0554003-1	COVER-SHROUD INLET	1	G
		ATTACHING PARTS		
- 5D	S1021Z8-8	SCREW	4	
		---*---		
- 6	1754007-1	RISER ASSEMBLY-RH AFT	1	
- 7	1754008-1	RISER ASSEMBLY-LH AFT	1	
- 8	1754009-1	RISER ASSEMBLY-LH FWD	1	
- 9	1754010-1	RISER ASSEMBLY-RH FWD	1	
-10	0750161-25	CLAMP	8	
		ATTACHING PARTS		
-11	AN3-4A	BOLT	4	
-12	AN960-10	WASHER	4	
-13	MS21044N3	NUT	4	
		---*---		

A---172 SERIAL 17256513 THRU 17259223
B---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
C---172 SERIAL 17259224 THRU 17261898
F172 SERIAL F17200805 THRU F17201034
D---172 SERIAL 17256513 THRU 17261898
F172 SERIAL F17200805 THRU F17201034
E---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234
F---172 SERIAL 17261899 THRU 17263425
17263427 THRU 17263429, 17263431
F172 SERIAL F17201035 THRU F17201234
G---172 SERIAL 17263426, 17263430
17263432 THRU 17263458

Engine (Cont)

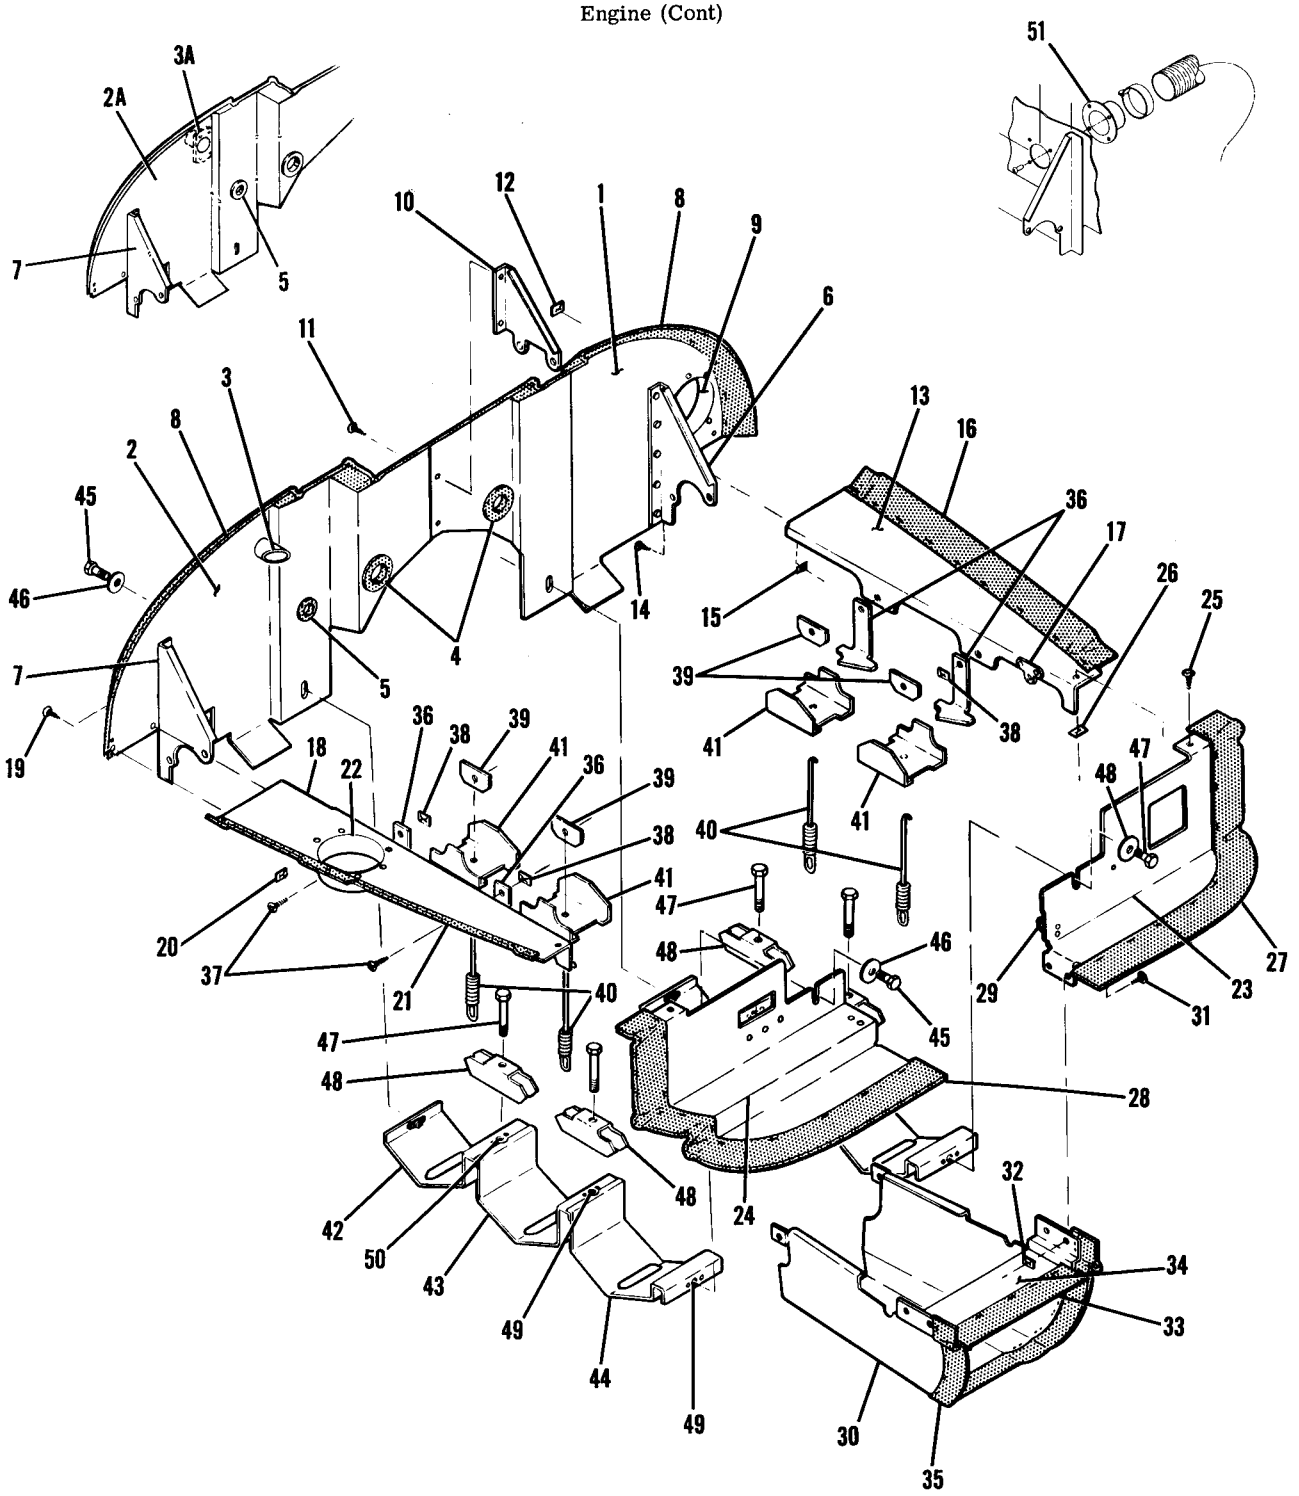

172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804

Figure 133. Engine Baffles Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
133 -		BAFFLE INSTALLATION-ENGINE	NP	A
- 1	0555181-1	BAFFLE ASSEMBLY-REAR VERTICAL LH	1	
- 2	0555181-13	BAFFLE ASSEMBLY-REAR VERTICAL RH	1	D
- 2A	0555181-14	BAFFLE ASSEMBLY-REAR VERTICAL RH	1	E
- 3	0555162-1	BLAST TUBE-RH	1	D
- 3A	0450262	UNION	1	E
- 4	MS35489-22	GROMMET	1	
- 5	MS35489-17	GROMMET RH ONLY	1	
- 6	0555181-5	SUPPORT-LH	1	
- 7	0555181-6	SUPPORT-RH	1	
- 8	0555181-7	SEAL	1	
- 9	0713019-33	UNION-LH	1	
-10	0555182-1	SUPPORT-REAR VERTICAL BAFFLE	1	
		ATTACHING PARTS		
-11	S1021Z8-8	SCREW	2	
-12	NAS446-4-3	NUT	2	
		---*---		
-13	0555180-1	BAFFLE ASSEMBLY-SIDE LH	1	
		ATTACHING PARTS		
-14	S1021Z8-12	SCREW	2	
-15	NAS446-4-3	NUT	2	
		---*---		
-16	0555180-5	SEAL	1	
-17	0851700-14	LUG	1	
-18	0555180-2	BAFFLE ASSEMBLY-SIDE RH	1	
		ATTACHING PARTS		
-19	S1021Z8-8	SCREW	2	
-20	NAS446-4-3	NUT		
		---*---		
-21	0555180-5	SEAL	1	
-22	0713019-33	UNION	1	
	0851700-14	LUG	1	
-23	0555179-1	BAFFLE ASSEMBLY-FORWARD LH	1	B
	0555179-9	BAFFLE ASSEMBLY-FORWARD LH	1	C
-24	0555179-2	BAFFLE ASSEMBLY-FORWARD RH	1	B
	0555179-12	BAFFLE ASSEMBLY-FORWARD RH	1	C
		ATTACHING PARTS		
-25	S1021Z8-8	SCREW	1	
-26	NAS446-4-3	NUT	1	
		---*---		
-27	0555179-5	SEAL-LH	1	B
	0555179-11	SEAL-LH HORIZONTAL	1	C
-28	0555179-6	SEAL-RH	1	B
	0555179-14	SEAL-RH	1	C
-29	0555179-8	BRACKET	1	
-30	0555189-1	BAFFLE ASSEMBLY-OIL SUMP	1	B
	0555189-6	BAFFLE ASSEMBLY-OIL SUMP	1	C
		ATTACHING PARTS		
-31	S1021Z8-8	SCREW	4	
-32	NAS446-4-3	NUT	4	
		---*---		
-33	0555189-5	SEAL	1	B
	0555189-10	SEAL	1	C
-34	0555189-3	BRACE	1	B
	0555189-9	BRACE	1	C
-35	0555189-4	SEAL	1	B
	0555189-8	SEAL	1	C
-36	0555175-3	BAFFLE-INTER CYLINDER HEADS	4	
		ATTACHING PARTS		
-37	S1021Z8-8	SCREW	1	
-38	NAS446-4-3	NUT	1	
		---*---		
-39	0450209	SUPPORT-INTER HEAD BAFFLE	4	
-40	0450277-3	FASTENER	4	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
133 -41	0555175-1	BAFFLE-INTER CYLINDER HEADS	4	
-42	0555174-7	BAFFLE ASSEMBLY-INTER CYLINDER BARRELS	2	
-43	0555174-8	BAFFLE ASSEMBLY-INTER CYLINDER BARRELS	2	
-44	0555174-9	BAFFLE ASSEMBLY-INTER CYLINDER BARRELS	2	
		ATTACHING PARTS-		
-45	AN3-3A	BOLT	2	
-46	AN970-3	WASHER	2	
-47	AN3-24A	BOLT	2	
-48	0750117-31	SUPPORT	2	
		---*---		
-49	NAS680A3	NUTPLATE FORWARD & MIDDLE BAFFLES	1	
-50	NAS680A3	NUTPLATE AFT BAFFLES	2	
-51	0509003-1	UNION ASSEMBLY USED WITH FUEL STRAINER BLAST TUBE	1	F
		A---172 SERIAL 17249545 THRU 17256512 F172 SERIAL F172-0001 THRU F17200804 B---172 SERIAL 17249545 THRU 17253392 F172 SERIAL F172-0001 THRU F172-0179 C---172 SERIAL 17253393 THRU 17256512 F172 SERIAL F172-0180 THRU F17200804 D---172 SERIAL 17249545 THRU 17254892 F172 SERIAL F172-0001 THRU F172-0319 E---172 SERIAL 17254893 THRU 17256512 F172 SERIAL F172-0320 THRU F17200804 F---172 SERIAL 17252534 THRU 17256512		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
134 -		BAFFLES INSTALLATION-ENGINE	NP	A
- 1	0555206-1	BAFFLE ASSEMBLY-REAR RH	1	
		ATTACHING PARTS		
- 2	AN500-416-10	SCREW	2	
- 3	AN936A416	WASHER-LOCK	2	
- 4	AN960-416	WASHER	2	
	S1021Z8-12	SCREW	1	
	NAS446-4-3	NUT	1	
		---*---		
- 5	0555206-4	SEAL-BAFFLE	1	
- 6	0713019-33	UNION	1	
- 7	1755016-1	BRACKET	1	
- 8	NAS463W416	SHIM-ANCHOR NUT	1	
- 9	MS35489-15	GROMMET	1	
-10	0555207-1	BAFFLE ASSEMBLY-REAR LH	1	
-11	0555207-3	SEAL-BAFFLE	1	
-12	NAS463W416	SHIM-ANCHOR NUT	1	
-13	MS35489-15	GROMMET	1	
-14	0555199-1	BAFFLE ASSEMBLY-FORWARD VERTICAL LH	1	
		ATTACHING PARTS		
-15	AN500-416-10	SCREW	2	
-16	AN936A416	WASHER-LOCK	2	
-17	AN960-416	WASHER	2	
		---*---		
-18	0555199-5	SEAL-BAFFLE	1	
-19	0555198-1	SUPPORT ASSEMBLY	1	
-20	NAS463416	SHIM-ANCHOR NUT	2	
-21	0713019-33	UNION	1	

CONTINUED ON NEXT PAGE

Engine (Cont)

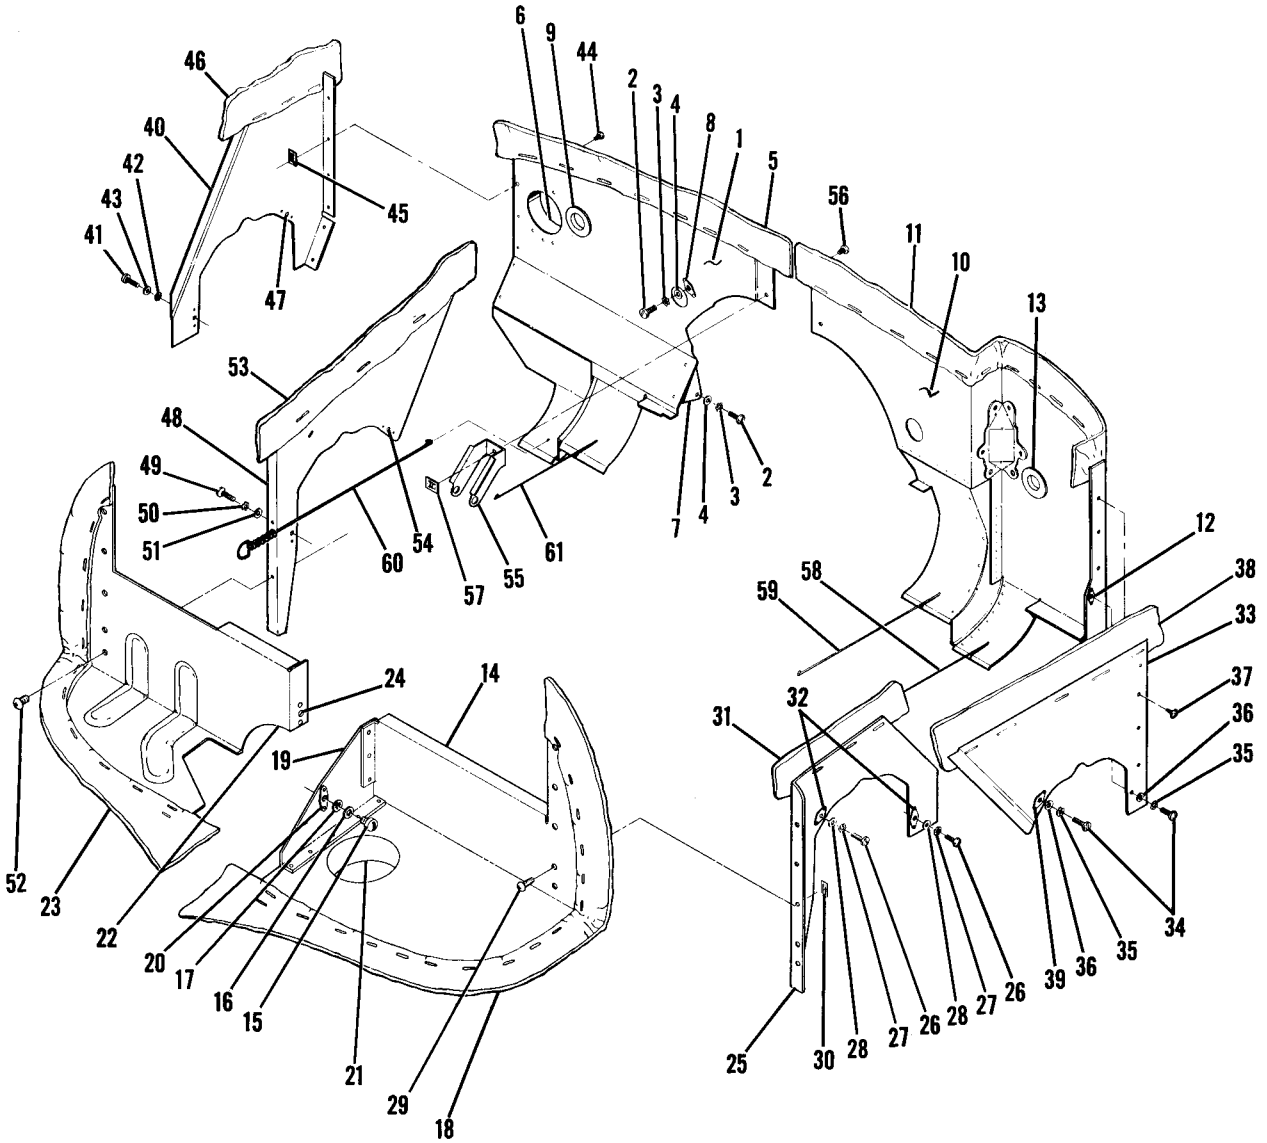


F172 SERIAL F17200805 THRU F17201034
172 SERIAL 17256513 THRU 17261898

Figure 134. Engine Baffles Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
134 -22	0555199-2	BAFFLE ASSEMBLY-FORWARD VERTICAL RH	1	
		ATTACHING PARTS		
	AN500-416-10	SCREW	1	
	AN936A416	WASHER-LOCK	1	
	AN960-416	WASHER	1	
		---*---		
-23	0555199-6	SEAL-BAFFLE	1	
-24	NAS463W416	SHIM-ANCHOR NUT	1	
-25	0555205-1	BAFFLE ASSEMBLY #2 CYLINDER	1	
		ATTACHING PARTS		
-26	AN500-416-10	SCREW	2	
-27	AN936A416	WASHER-LOCK	2	
-28	AN960-416	WASHER	2	
-29	S1021Z8-12	SCREW	9	
-30	NAS446-4-3	NUT	9	
		---*---		
-31	0555205-3	SEAL-BAFFLE	1	
-32	NAS463W416	SHIM-ANCHOR NUT	2	
-33	0555202-1	BAFFLE ASSEMBLY #4 CYLINDER	1	
		ATTACHING PARTS		
-34	AN500-416-10	SCREW	2	
-35	AN936A416	WASHER-LOCK	2	
-36	AN960-416	WASHER	2	
-37	S1021Z8-12	SCREW	4	
	NAS446-4-3	NUT	4	
		---*---		
-38	0555202-3	SEAL-BAFFLE	1	
-39	NAS463W416	SHIM-ANCHOR NUT	1	
-40	0555204-1	BAFFLE ASSEMBLY #3 CYLINDER WEU 0555204-5	1	
	0555204-5	BAFFLE ASSEMBLY #3 CYLINDER	1	
		ATTACHING PARTS		
-41	AN500-416-10	SCREW	2	
-42	AN936A416	WASHER-LOCK	2	
-43	AN960-416	WASHER	2	
-44	S1021Z8-12	SCREW	6	
-45	NAS446-4-3	NUT	6	
		---*---		
-46	0555204-3	SEAL-BAFFLE USED WITH 0555204-1	1	
	0555204-4	SEAL-BAFFLE USED WITH 0555204-5	1	
-47	NAS463W416	SHIM-ANCHOR NUT	2	
-48	0555203-1	BAFFLE ASSEMBLY #1 CYLINDER	1	
		ATTACHING PARTS		
-49	AN500-416-10	SCREW	2	
-50	AN936A416	WASHER-LOCK	2	
-51	AN960-416	WASHER	2	
-52	S1021Z8-12	SCREW	4	
	NAS446-4-3	NUT	4	
		---*---		
-53	0555203-3	SEAL-BAFFLE	1	
-54	NAS463W416	SHIM-ANCHOR NUT	2	
-55	1755014-1	BAFFLE SUPPORT-REAR VERTICAL	1	
		ATTACHING PARTS		
-56	S1021Z8-12	SCREW	1	
-57	NAS446-416	NUT	1	
		---*---		
-58	0450277-12	FASTENER	1	
-59	0450277-13	FASTENER	1	
-60	0450277-14	FASTENER	1	
-61	0450277-15	FASTENER	1	
		A---172 SERIAL 17256513 THRU 17261898 F172 SERIAL F17200805 THRU F17201034		

Engine (Cont)

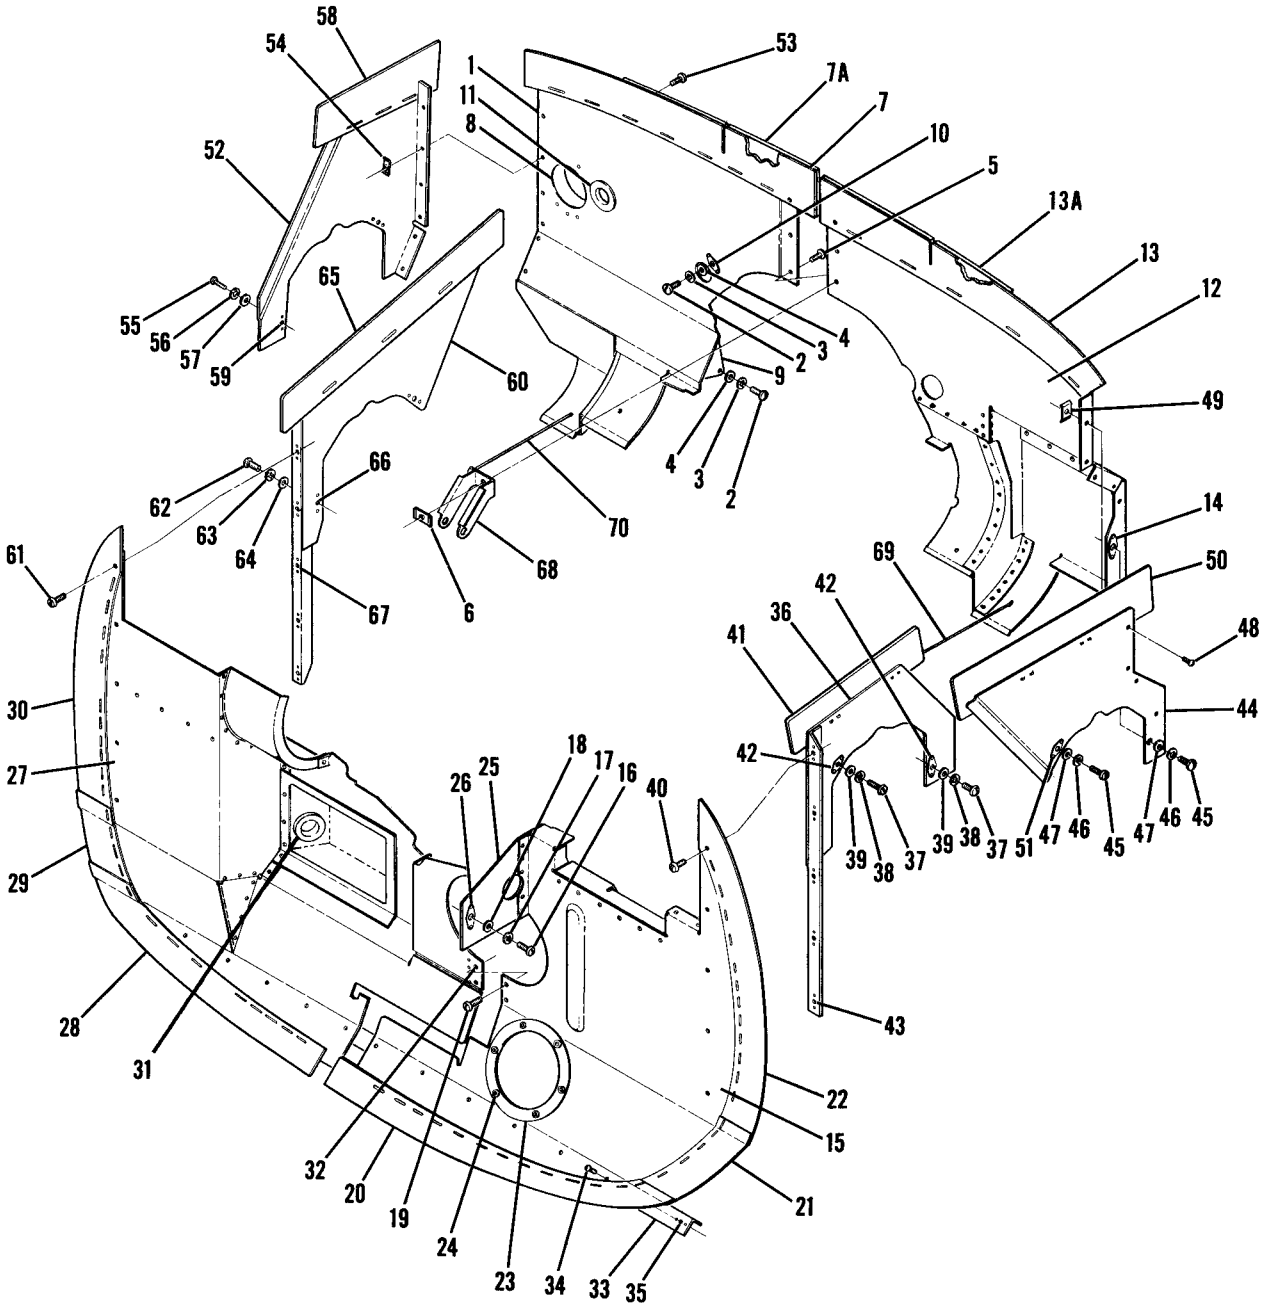

172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234

Figure 135. Engine Baffles Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
135 -		BAFFLES INSTALLATION-ENGINE	NP	A
- 1	0555206-8	BAFFLE ASSEMBLY-REAR RH WEU 0555206-12	1	B
	0555206-12	BAFFLE ASSEMBLY-REAR RH	1	C
		ATTACHING PARTS		
- 2	AN500-416-10	SCREW	2	
- 3	AN936A416	WASHER-LOCK	2	
- 4	AN960-416	WASHER	2	
- 5	S1021Z8-12	SCREW	3	
- 6	NAS446-4-3	NUT	3	
		---*---		
- 7	0555211-5	SEAL-BAFFLE	1	
- 7A	0555206-11	SEAL-BAFFLE	1	C
- 8	0713019-33	UNION	1	
- 9	1755016-1	BRACKET	1	
-10	NAS463W416	SHIM-ANCHOR NUT	1	
-11	MS35489-15	GROMMET	1	
-12	0555211-1	BAFFLE ASSEMBLY-REAR LH WEU 0555211-7	1	B
	0555211-7	BAFFLE ASSEMBLY-REAR LH	1	C
-13	0555211-5	SEAL-BAFFLE	1	
-13A	0555206-11	SEAL-BAFFLE	1	C
-14	NAS463W416	SHIM-ANCHOR NUT	1	
	MS35489-15	GROMMET	1	
-15	0555217-1	BAFFLE ASSEMBLY-FORWARD VERTICAL LH	1	
		ATTACHING PARTS		
-16	AN500-416-10	SCREW	2	
-17	AN936A416	WASHER-LOCK	2	
-18	AN960-416	WASHER	2	
-19	AN525-10R6	SCREW	2	
		---*---		
-20	0555217-3	SEAL-BAFFLE LWR	1	
-21	0555217-4	SEAL-BAFFLE LH	1	
-22	0555217-5	SEAL-BAFFLE UPR	1	
-23	0555217-6	SEAL-BAFFLE	1	
-24	AN960-2	WASHER	6	
-25	0555212-1	SUPPORT ASSEMBLY	1	
-26	NAS463W416	SHIM-ANCHOR NUT	2	
-27	0555216-1	BAFFLE ASSEMBLY-FORWARD VERTICAL RH	1	D
	0555216-13	BAFFLE ASSEMBLY-FOWARD VERTICAL RH	1	E
-28	0555216-7	SEAL-BAFFLE LWR	1	
-29	0555216-6	SEAL-BAFFLE RH	1	
-30	0555216-5	SEAL-BAFFLE UPR	1	
-31	MS35489-15	GROMMET	1	
-32	NAS1067A3	NUTPLATE	2	
-33	0555216-8	SUPPORT ASSEMBLY-FORWARD VERTICAL BAFFLES	1	
		ATTACHING PARTS		
-34	AN525-832R6	SCREW	10	
		---*---		
-35	NAS697A08	NUTPLATE	10	
-36	0555214-1	BAFFLE ASSEMBLY-LH #2 CYLINDER	1	
		ATTACHING PARTS		
-37	AN500-416-10	SCREW	2	
-38	AN936A416	WASHER-LOCK	2	
-39	AN960-416	WASHER	2	
-40	AN525-832R6	SCREW	5	
		---*---		
-41	0555214-4	SEAL-BAFFLE	1	
-42	NAS463W416	SHIM-ANCHOR NUT	2	
-43	NAS697A08	NUTPLATE	5	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
135 -44	0555215-1	BAFFLE ASSEMBLY-LH #4 CYLINDER	1	
		ATTACHING PARTS		
-45	AN500-416-10	SCREW	2	
-46	AN936A416	WASHER-LOCK	2	
-47	AN960-416	WASHER	2	
-48	S1021Z8-12	SCREW	4	
-49	NAS446-4-3	NUT	4	
		---*---		
-50	0555215-3	SEAL-BAFFLE	1	
-51	NAS463W416	SHIM-ANCHOR NUT	1	
-52	0555204-5	BAFFLE ASSEMBLY-RH #3 CYLINDER	1	
		ATTACHING PARTS		
-53	S1021Z8-12	SCREW	6	
-54	NAS446-4-3	NUT	6	
-55	AN500-416-10	SCREW	2	
-56	AN936A416	WASHER-LOCK	2	
-57	AN960-416	WASHER	2	
		---*---		
-58	0555204-4	SEAL-BAFFLE	1	
-59	NAS463W416	SHIM-ANCHOR NUT	2	
-60	0555213-1	BAFFLE ASSEMBLY-RH #1 CYLINDER	1	
		ATTACHING PARTS		
-61	AN525-832R6	SCREW	5	
-62	AN500-416-10	SCREW	2	
-63	AN936A416	WASHER-LOCK	2	
-64	AN960-416	WASHER	2	
		---*---		
-65	0555213-4	SEAL-BAFFLE	1	
-66	NAS463W416	SHIM-ANCHOR NUT	2	
-67	NAS697A08	NUTPLATE	5	
-68	2055008-1	BAFFLE SUPPORT-REAR VERTICAL	1	
-69	0450227-12	FASTENER-LH	1	
-70	0450227-15	FASTENER-RH	1	

A---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234
B---172 SERIAL 17261899 THRU 17261960
C---172 SERIAL 17261961 THRU 17263458
F172 SERIAL F17201035 THRU F17201234
D---172 SERIAL 17261899 THRU 17262571
17262573 THRU 17262604
17262606 THRU 17262612
F172 SERIAL F17201035 THRU F17201224
E---172 SERIAL 17262572, 17262605,
17262613 THRU 17263458
F172 SERIAL F17201224 THRU F17201234

This page intentionally left blank.

Engine (Cont)

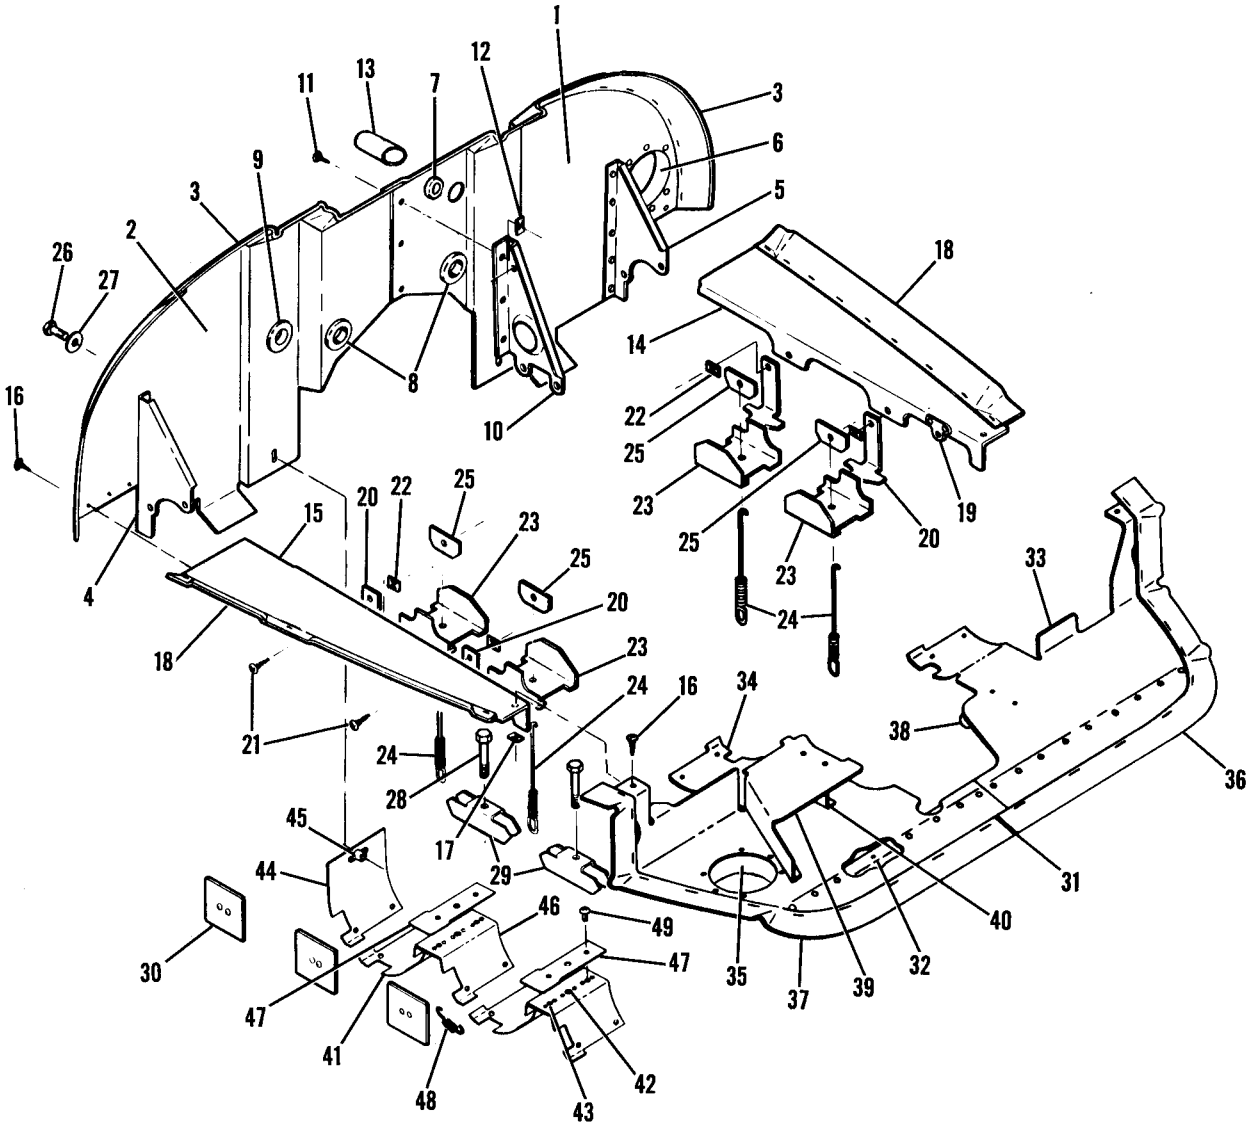


P172 SERIAL P17257120 THRU P17257188

Figure 136. Engine Baffles Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
136 -		BAFFLE INSTALLATION-ENGINE	NP	A
- 1	0555169-15	BAFFLE ASSEMBLY-REAR VERTICAL LH	1	
- 2	0555169-16	BAFFLE ASSEMBLY-REAR VERTICAL RH	1	
- 3	0555169-5	SEAL-OUTBOARD	2	
- 4	0555181-6	SUPPORT-RH	1	
- 5	0555181-5	SUPPORT-LH	1	
- 6	0713019-33	UNION-LH	1	
- 7	MS35489-11	GROMMET	1	
- 8	MS35489-22	GROMMET	1	
- 9	MS35489-20	GROMMET-RH	1	
-10	0555171-1	BRACKET-REAR VERTICAL BAFFLE	1	
		ATTACHING PARTS		
-11	S1021A8-6	SCREW	3	
-12	NAS446-4-3	NUT	3	
		---*---		
-13	0555162-1	BLAST TUBE-GENERATOR	1	
-14	0555180-1	BAFFLE ASSEMBLY-SIDE LH	1	
-15	0555180-6	BAFFLE ASSEMBLY-SIDE RH	1	
		ATTACHING PARTS		
-16	S1021Z8-6	SCREW	3	
-17	NAS446-4-3	NUT	3	
		---*---		
-18	0555180-5	SEAL	1	
-19	0851700-14	LUG	1	
-20	0555175-3	BAFFLE-INTER CYLINDER HEADS	4	
		ATTACHING PARTS		
-21	S1021A8-6	SCREW	1	
-22	NAS446-4-3	NUT	1	
		---*---		
-23	0555175-1	BAFFLE-INTER CYLINDER HEADS	4	
-24	0450277-3	FASTENER	4	
-25	0450209	SUPPORT-INTER HEAD BAFFLE	4	
-26	AN3-3A	BOLT	2	
-27	AN970-3	WASHER	2	
-28	AN3-26A	BOLT	4	
-29	0750117-31	SUPPORT	4	
-30	0750121	DEFLECTOR ASSEMBLY	6	
-31	0555167-10	BAFFLE ASSEMBLY-FORWARD	1	
-32	0555167-2	ANGLE	1	
-33	0555167-11	BAFFLE-LH	1	
-34	0555167-12	BAFFLE-RH	1	
-35	0713019-33	UNION	1	
-36	0555167-5	SEAL-LH	1	
-37	0555167-6	SEAL-RH	1	
-38	0555167-7	BRACKET	2	
-39	0555167-13	GUIDE	1	
-40	0555167-14	BRACKET	1	
	0555190-1	BAFFLE ASSEMBLY-INTER CYLINDER BARRELS LH	1	
	0555190-2	BAFFLE ASSEMBLY-INTER CYLINDER BARRELS RH	1	
-41	0555190-5	BAFFLE ASSEMBLY-LH	2	
	0555190-6	BAFFLE ASSEMBLY-RH	2	
-42	NAS680A3	NUTPLATE	1	
-43	NAS680A08	NUTPLATE	2	
-44	0555190-3	BAFFLE ASSEMBLY-LH	1	
	0555190-4	BAFFLE ASSEMBLY-RH	1	
-45	NAS697A3	NUTPLATE	1	
-46	0555190-11	BAFFLE-LH	2	
	0555190-12	BAFFLE-RH	2	
-47	0555190-13	BAFFLE	2	
-48	0555191-1	SPRING	6	
-49	AN515-8-8	SCREW	4	

A---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Winterization

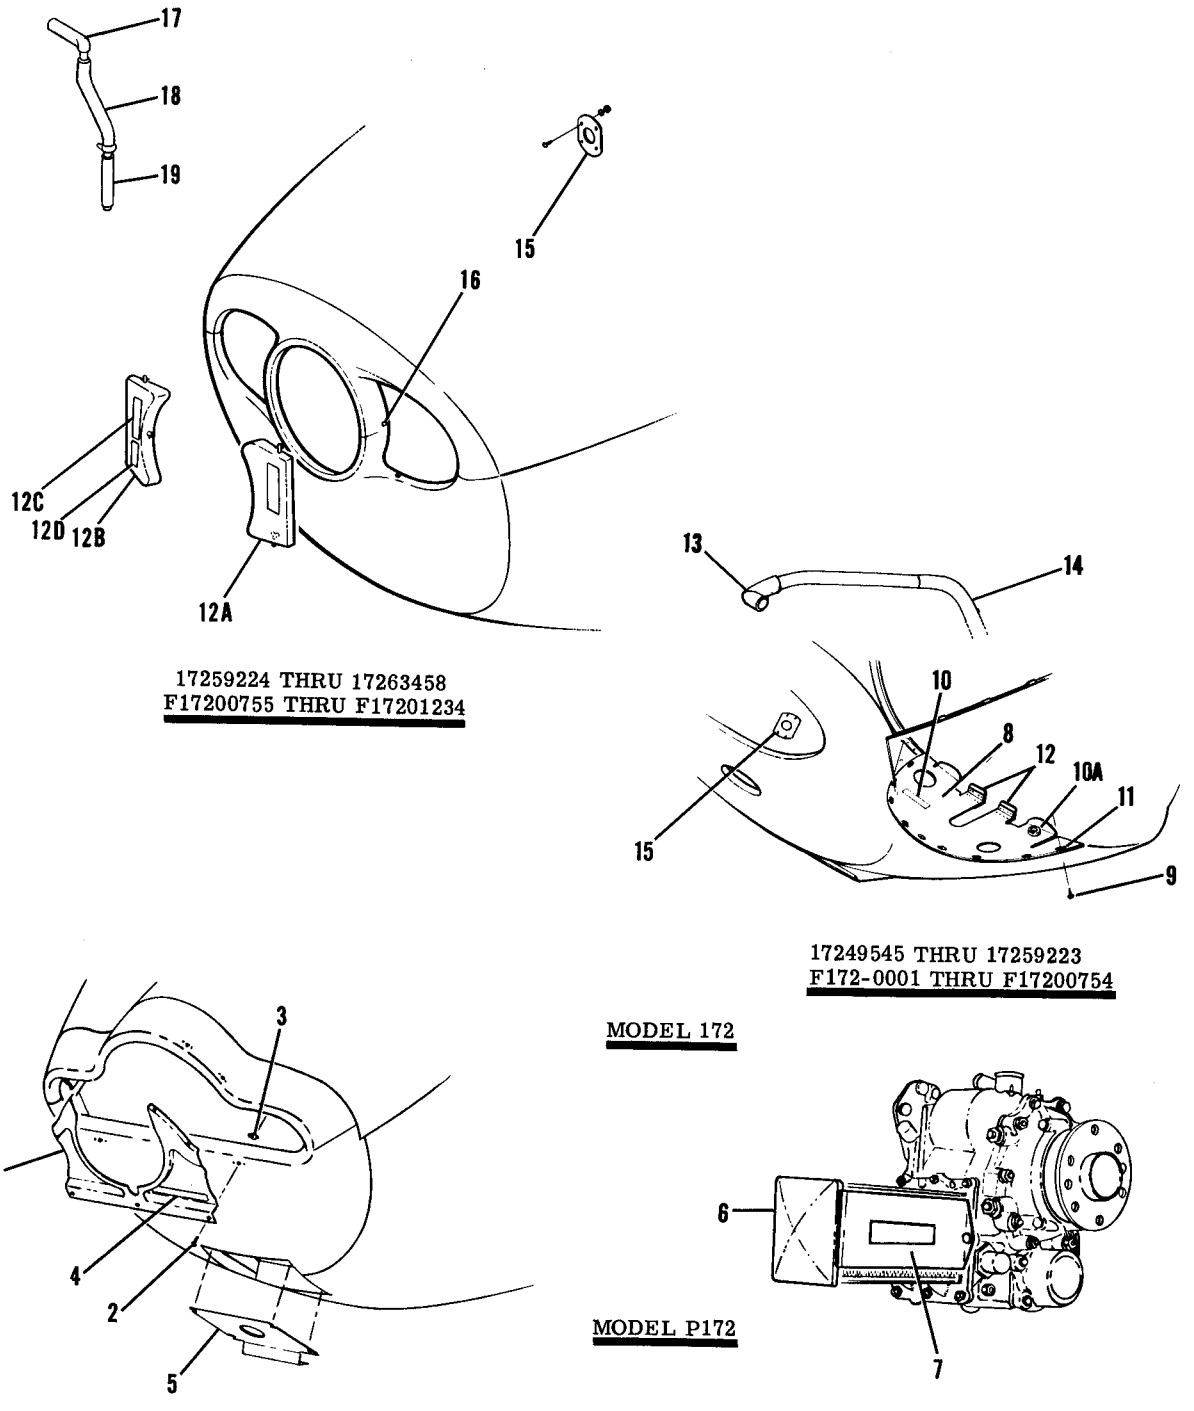

17259224 THRU 17263458
F17200755 THRU F17201234

17249545 THRU 17259223
F172-0001 THRU F17200754

MODEL 172


MODEL P172

Figure 137. Winterization Equipment

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
137 -		WINTERIZATION EQUIPMENT	NP	A
		EQUIPMENT INSTALLATION-WINTERIZATION	NP	B
- 1	0552009-6	COVER ASSEMBLY	1	
		ATTACHING PARTS		
- 2	S1021Z8-6	SCREW	7	
- 3	S1863-3	NUTPLATE TIN	7	
		---*---		
- 4	0552110-3	PLACARD	1	
- 5	0552009-2	PLATE ASSEMBLY-AIR FILTER COVER	1	
	0552110-3	PLACARD	1	
- 6	0552009-8	PLATE ASSEMBLY-OIL COOLER COVER	1	
- 7	0552110-3	PLACARD	1	
	0700319-13	PLACARD WHEN EXHAUSTED USE 0505009-2	1	H
	0505009-2	PLACARD-WINTERIZATION	1	J
		EQUIPMENT INSTALLATION-WINTERIZATION	1	C
- 8	0552011-2	PLATE ASSEMBLY-WINTERIZATION	1	D
	0552011-6	PLATE ASSEMBLY-WINTERIZATION	1	E
	0552117-1	PLATE ASSEMBLY-WINTERIZATION	1	G
		ATTACHING PARTS		
- 9	S1021Z8-6	SCREW	9	
		---*---		
-10	0552110-3	PLACARD-WINTERIZATION	1	
-10A	S1050-1	GROMMET 3.15 IN LG BKI REF S1050-1-3.15	1	G
-11	S1863-3	NUTPLATE	9	
-12	0552011-4	RUB STRIP	2	
-12A	0552132-1	COVER ASSEMBLY-LH	1	L
-12B	0552132-2	COVER ASSEMBLY-RH	1	L
-12C	0552110-3	PLACARD-WINTERIZATION	1	N
	0552110-3	PLACARD-WINTERIZATION	1	P
-12D	0552154-1	PLACARD-WINTERIZATION	1	Q
-13	0556014-2	TUBE ASSEMBLY-INSULATION	1	F
-14	0556014-6	TUBE-INSULATION	1	F
-15	0552118-1	COVER PLATE	1	M
		ATTACHING PARTS		
	AN525-10R6	SCREW	1	
	AN960-10L	WASHER	1	
	MS21045L3	NUT	1	
		---*---		
-16	212-12	RECEPTACLE CLC	6	L
	0505009-3	PLACARD-WINTERIZATION LOCATED ON INSTRUMENT PANEL	1	L
-17	0552011-11	INSULATION-BREATHER HOSE	1	K
-18	0552011-12	INSULATION-BREATHER TUBE	1	K
-19	0552011-13	INSULATION-BREATHER TUBE	1	K

A---172 SERIAL 17249545 THRU 17263458
F172 SERIAL F172-0001 THRU F17201234
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
C---172 SERIAL 17249545 THRU 17263458
F172 SERIAL F172-0001 THRU F17201234
D---172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
E---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200804
F---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804
G---172 SERIAL 17256513 THRU 17259904
F172 SERIAL F172-0001 THRU F17201234
H---172 SERIAL 17249545 THRU 17258037
F172 SERIAL F172-0001 THRU F172-0619
J---172 SERIAL 17258038 THRU 17259903
F172 SERIAL F172-0620 THRU F17200804
K---172 SERIAL 17257195 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
L---172 SERIAL 17259904 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
M---172 SERIAL 17256513 THRU 17263458
F172 SERIAL F172-0001 THRU F17201234
N---172 SERIAL 17259904 THRU 17261898
F172 SERIAL F17200805 THRU F17201034
P---172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234
Q---172 SERIAL 17262870 THRU 17263458


Ventilation System

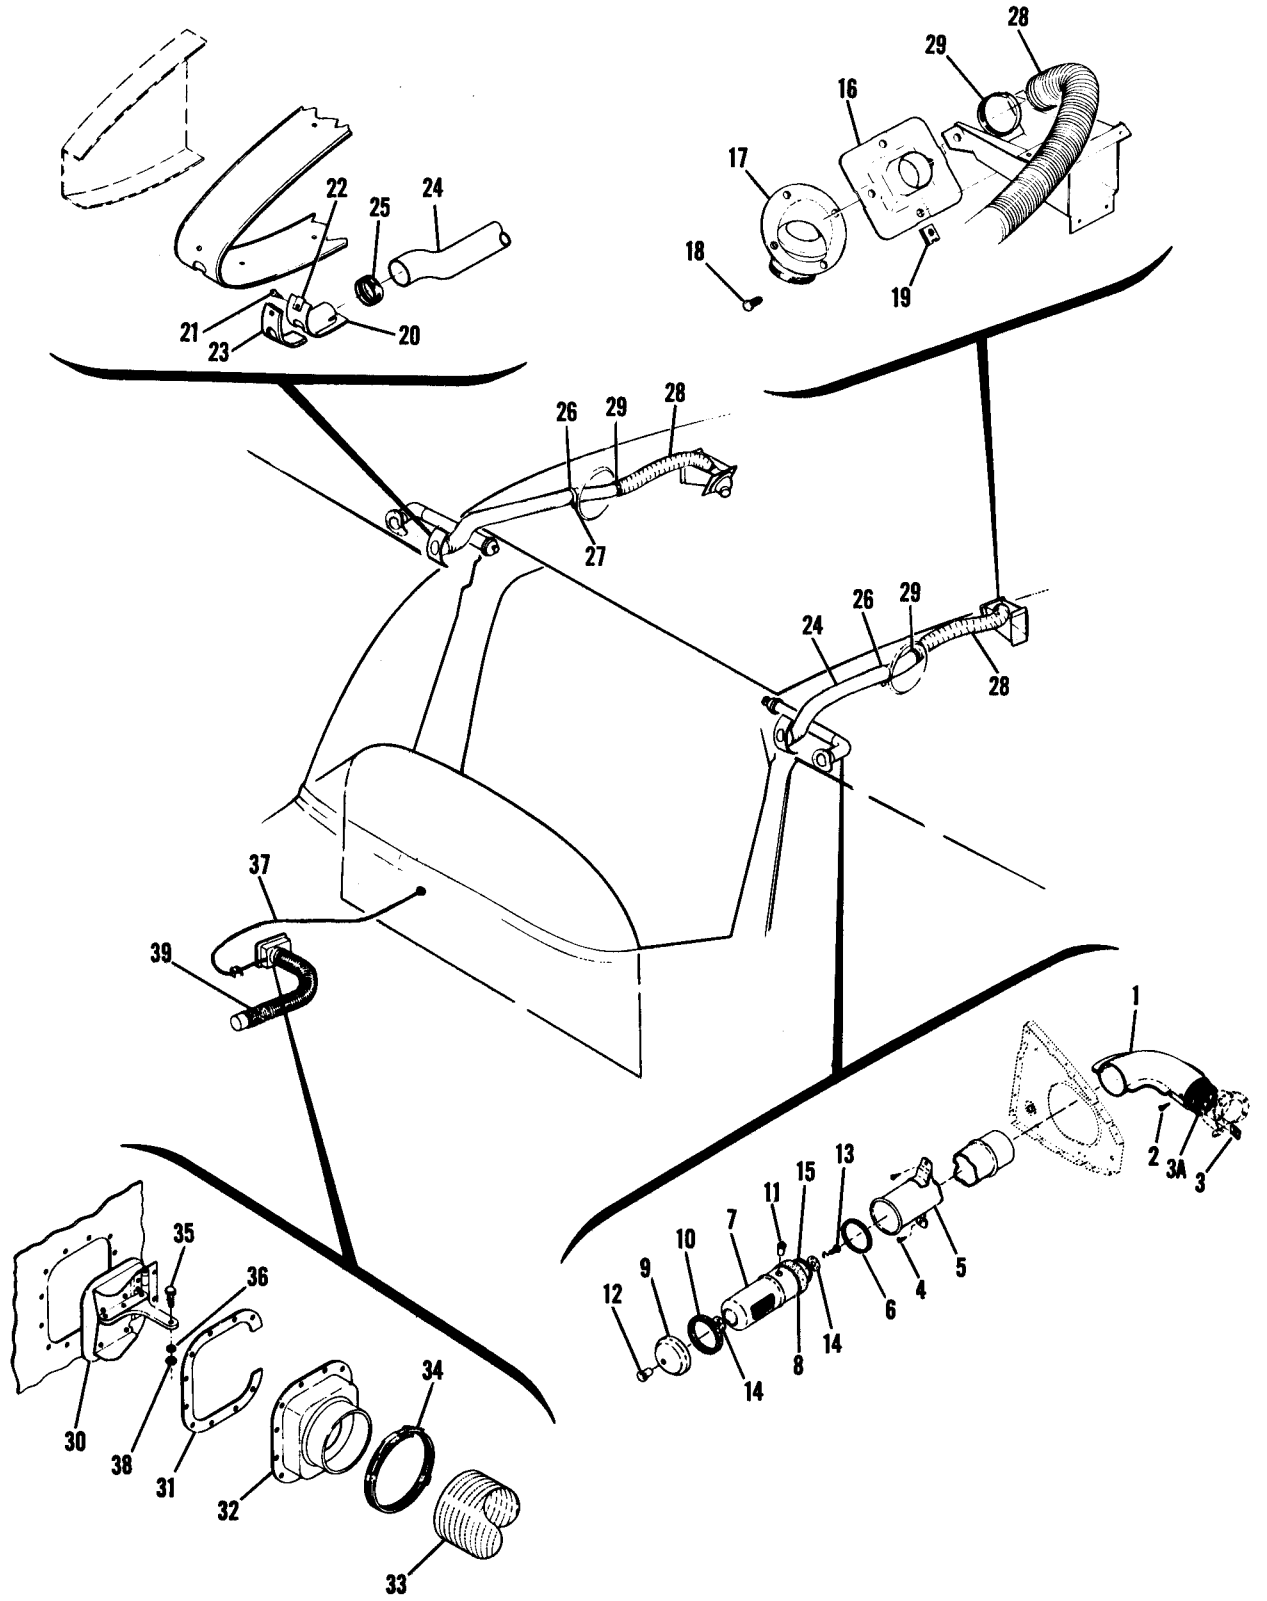

172 SERIAL 17249545 THRU 17254892

Figure 138. Cabin Ventilation System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
138 -		CABIN VENTILATION SYSTEM INSTALLATION	NP	B
- 1	0413233	ELBOW ASSEMBLY-CABIN AIR VENT	2	
		ATTACHING PARTS		
- 2	S1021Z8-6	SCREW	1	
- 3	NAS446-4-3	NUTPLATE	1	
		---*---		
- 3A	1200018-1	ELEMENT	2	
	0413163-23	OUTLET ASSEMBLY LH	1	
	0413163-24	OUTLET ASSEMBLY RH	1	
		ATTACHING PARTS		
- 4	S1021Z8-6	SCREW	2	
		---*---		
- 5	0413163-8	TUBE ASSEMBLY LH	1	
	0413163-9	TUBE ASSEMBLY RH	1	
- 6	0413163-7	SEAL	1	
- 7	0413163-18	OUTLET ASSEMBLY	1	
- 8	0413163-43	SEAL	1	
	0413163-11	CAP ASSEMBLY-AIR OUTLET	1	
- 9	0413257	CAP	1	
-10	S1441-2	SEAL-CAP 6.56 IN LG BULK ITEM REF S1441-2-6.56	1	
-11	0413203	CATCH-BULLET	2	
-12	0713303-2	KNOB-CAP	1	
		ATTACHING PARTS		
-13	AN515-8R8	SCREW	1	
-14	0413228	WASHER	2	
	AN936A8	WASHER	1	
	NAS43DD3-5	SPACER	1	
-15	0413347-1	WASHER	1	
		---*---		
		REAR SEAT VENTS INSTALLATION	NP	
-16	0700327-1	ADAPTER-AIR VENT	2	
-17	S1646-1	VALVE-VENT	2	
		ATTACHING PARTS		
-18	S1021Z6-10C	SCREW	8	
-19	A1793-6Z-3	NUT TIN	8	
		---*---		
-20	0700325-1	ADAPTER	2	
		ATTACHING PARTS		
-21	S1022Z8-8	SCREW	2	
-22	NAS396-6-3	NUT	2	
		---*---		
-23	0700322-4	SEAL-AIR VENT	2	
-24	0700324-1	TUBE-REAR AIR VENT	2	
		ATTACHING PARTS		
-25	NAS397-18	CLAMP	2	
-26	AN742D16	CLAMP	2	
-27	NAS395-19-3	NUT	2	
	S1021Z8-10	SCREW	2	
		---*---		
-28	S1053E8T	HOSE 18.0 IN LG BULK ITEM REF S-1053E8T-18.0	2	
		ATTACHING PARTS		
-29	NAS397-16	CLAMP	4	
		---*---		
		OUTSIDE AIR VENT INSTALLATION	NP	
-30	0713135-2	DOOR ASSEMBLY-SIDE AIR VENT	1	
-31	0713140-1	SEAL	1	
-32	0713139-1	INLET	1	
-33	S1053E24T	HOSE 15 IN LG BULK ITEM REF S-1053E24T15.0	1	
-34	NAS398-50	CLAMP	2	
-35	0450311-5	CLAMP	1	
-36	AN960-10L	WASHER	1	
-37	S1239-7	CONTROL-CABIN AIR	1	
-38	MS21044N3	NUT	1	
-39	AN742D48	CLAMP	1	A
		ATTACHING PARTS		
	S1021Z10-8	SCREW	1	A
	NAS446-5-3	NUT	1	A
		---*---		
		A---172 SERIAL 17249545 THRU 17250572 F172 SERIAL F172-0001 THRU F172-0018 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		
		B---172 SERIAL 17249545 THRU 17254892 F172 SERIAL F172-0001 THRU F172-0319 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		

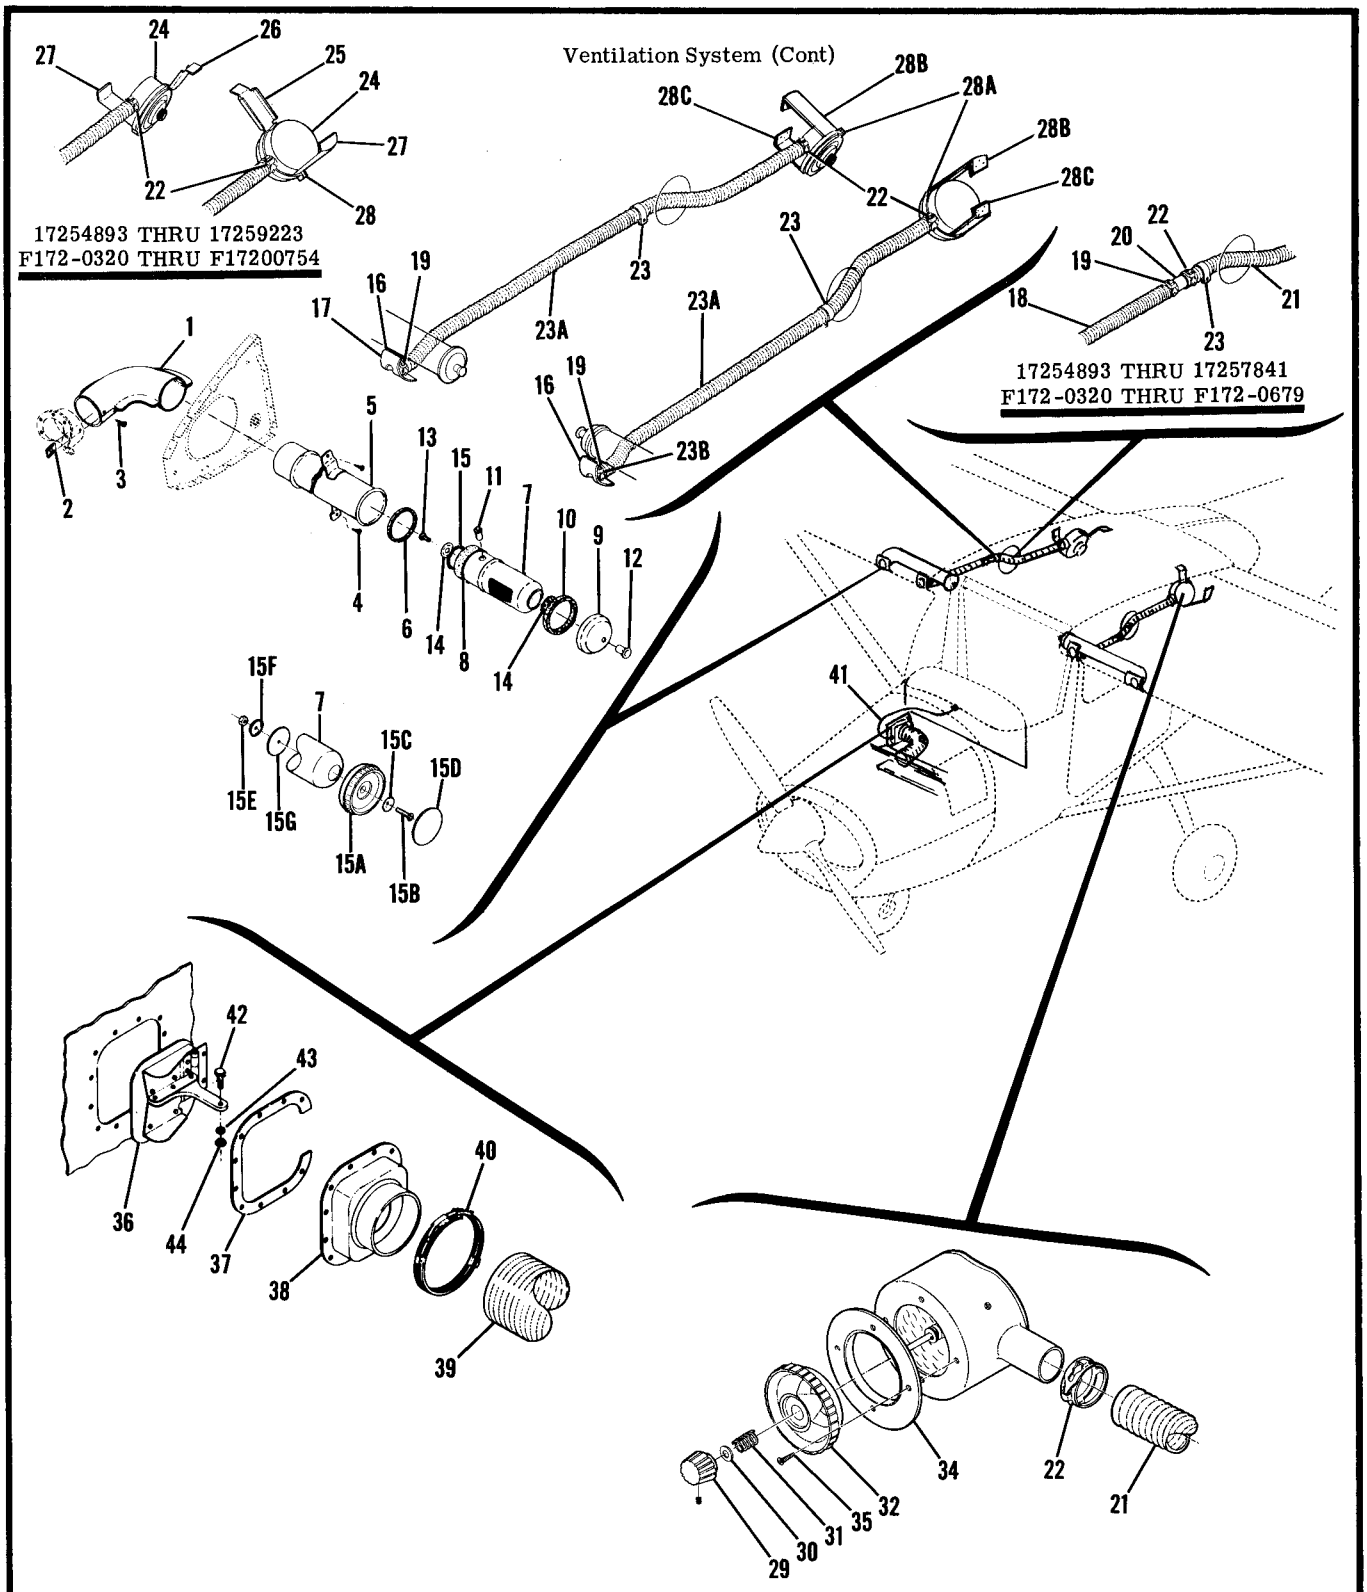

172 SERIAL 17254893 THRU 17263458
F172 SERIAL F172-0320 THRU F17201234

Figure 139. Cabin Ventilation System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
139 -		CABIN VENTILATION SYSTEM INSTALLATION	NP	A
- 1	0413233	ELBOW ASSEMBLY-CABIN AIR VENT	2	
		ATTACHING PARTS		
- 2	S1021Z8-6	SCREW	1	
- 3	NAS446-4-3	NUTPLATE	1	
		---*---		
	0413163-24	OUTLET ASSEMBLY-RH	1	D
	0413163-202	OUTLET ASSEMBLY-RH	1	N
	0413163-208	OUTLET ASSEMBLY-RH	1	P
	0413163-23	OUTLET ASSEMBLY-LH	1	D
	0413163-201	OUTLET ASSEMBLY-LH	1	N
	0413163-207	OUTLET ASSEMBLY-LH	1	P
		ATTACHING PARTS		
- 4	S1021Z8-6	SCREW	2	
		---*---		
- 5	0413163-9	TUBE ASSEMBLY-RH	1	Q
	0513263-4	TUBE ASSEMBLY-RH	1	P
	0413163-8	TUBE ASSEMBLY-LH	1	Q
	0513263-1	TUBE ASSEMBLY-LH	1	P
- 6	0413163-7	SEAL	1	
- 7	0413163-18	OUTLET ASSEMBLY	1	
- 8	0413163-43	SEAL	1	
	0413163-11	CAP ASSEMBLY-AIR OUTLET	1	D
- 9	0413257	CAP	1	D
-10	S1441-2	SEAL 6.56 IN LG BULK ITEM REF S1441-2-6.56	1	D
-11	0413203	CATCH-BULLET WEU S2024-1	2	H
	S2024-1	CATCH-BULLET	2	J
-12	0713303-2	KNOB-CAP	1	D
		ATTACHING PARTS		
-13	AN515-8R8	SCREW	1	D
-14	0413228	WASHER	2	D
	AN936A8	WASHER	1	D
	NAS43DD3-5	SPACER	1	D
-15	0413347-1	WASHER	1	D
		---*---		
-15A	S1834-1	KNOB	1	E
-15B	AN507-1032R12	SCREW	1	E
-15C	S290D1032	WASHER	1	E
-15D	S1834-2	INSERT	1	E
-15E	MS21045L3	NUT	1	E
-15F	0413228	WASHER	1	E
-15G	S1450-5A24-040	WASHER	1	E
		AIR VENT INSTALLATION-REAR SEAT	NP	
-16	0700325-2	ADAPTER ASSEMBLY	2	Q
	0501030-1	ADAPTER ASSEMBLY	2	P
		ATTACHING PARTS		
	S1022Z8-8	SCREW	2	
	NAS696-6-3	NUT	2	
		---*---		
-17	0700322-4	SEAL-AIR VENT ADAPTER	2	
-18	S1053E8T	HOSE 18.50 IN LG BULK ITEM REF S1053E8T18.50	2	F
		ATTACHING PARTS		
-19	NAS397-18	CLAMP	2	F
		---*---		
-20	0700626-1	TUBE	2	F
-21	S1053E8T	HOSE 13.00 IN LG BULK ITEM REF S1053E8T13.00	2	F
		ATTACHING PARTS		
-22	NAS397-18	CLAMP	2	
-23	AN742D16	CLAMP	2	
	NAS395-19-3	NUT	2	
	S1021Z8-10	SCREW	2	
		---*---		
-23A	S1053E8T	HOSE 40.50 IN LG BULK ITEM REF S10538T40.50	2	G
		ATTACHING PARTS		
-23B	NAS397-18	CLAMP	2	G
-23C	AN742D16	CLAMP	1	G
	NAS395-19-3	NUT	1	G
	S1021Z8-10	SCREW	1	G
		---*---		


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
139 -24	0710013-4	SILENCER ASSEMBLY-FRESH AIR VENT	2	
		ATTACHING PARTS		
-25	0710014-3	BRACKET ASSEMBLY-LH WEU 0710014-13	1	K
	0710014-13	BRACKET ASSEMBLY-LH	1	L
-26	0710014-4	BRACKET ASSEMBLY-RH WEU 0710014-14	1	K
	0710014-14	BRACKET ASSEMBLY-RH	1	L
-27	0700322-8	BRACKET	2	
-28	AN515-8R10	SCREW	1	
	AN960-8	WASHER	2	
	MS21044N08	NUT	1	
-28A	0710014-2	CLAMP	1	M
-28B	0513420-1	BRACKET	1	M
-28C	0513420-2	BRACKET	1	M
		---*---		
-29	S1390-8	KNOB-SILENCER	2	B
	S1728-1	KNOB-SILENCER	2	C
-30	AN960-10L	WASHER	1	
-31	0710015-10	SPRING-SILENCER	1	B
	0710015-13	SPRING-SILENCER	1	C
-32	0713250-1	KNOB-SILENCER	1	
-33		DELETED-NEVER USED		
-34	0710014-8	ESCUTCHEON-SILENCER	1	
		ATTACHING PARTS		
-35	S1023A6-6C	SCREW	4	
		---*---		
		OUTSIDE AIR VENT INSTALLATION-FORWARD	NP	
-36	0713135-2	DOOR ASSY-SIDE AIR VENT	1	
-37	0713140-1	SEAL	1	
-38	0713139-1	INLET	1	
-39	S1053E24T	HOSE 15.0 IN LG BKI REF S1053E24T15.0	1	
-40	NAS398-50	CLAMP	1	
-41		CONTROL SEE INSTRUMENT PANEL	1	
-42	0450311-5	CLAMP	1	
-43	AN960-10L	WASHER	1	
-44	MS21045L3	NUT	1	

A---172 SERIAL 17254893 THRU 17263458
F172 SERIAL F172-0320 THRU F17201234
B---172 SERIAL 17254893 THRU 17255786
F172 SERIAL F172-0320 THRU F172-0479
C---172 SERIAL 17255787 THRU 17263458
F172 SERIAL F172-0480 THRU F17201234
D---172 SERIAL 17254893 THRU 17257161
F172 SERIAL F172-0320 THRU F172-0559
E---172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
F---172 SERIAL 17254893 THRU 17257841
F172 SERIAL F172-0320 THRU F172-0654
G---172 SERIAL 17257842 THRU 17263458
F172 SERIAL F17200655 THRU F17201234
H---172 SERIAL 17254893 THRU 17259292
F172 SERIAL F172-0320 THRU F17200754
J---172 SERIAL 17259293 THRU 17263458
F172 SERIAL F17200755 THRU F17201234
K---172 SERIAL 17254893 THRU 17258855
F172 SERIAL F172-0320 THRU F17200779
L---172 SERIAL 17258856 THRU 17259223
F172 SERIAL F17200780 THRU F17200754
M---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234
N---172 SERIAL 17257162 THRU 17260758
F172 SERIAL F172-0560 THRU F17200904
P---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234
Q---172 SERIAL 17254893 THRU 17260758
F172 SERIAL F172-0320 THRU F17200904

This page intentionally left blank.

Heating System

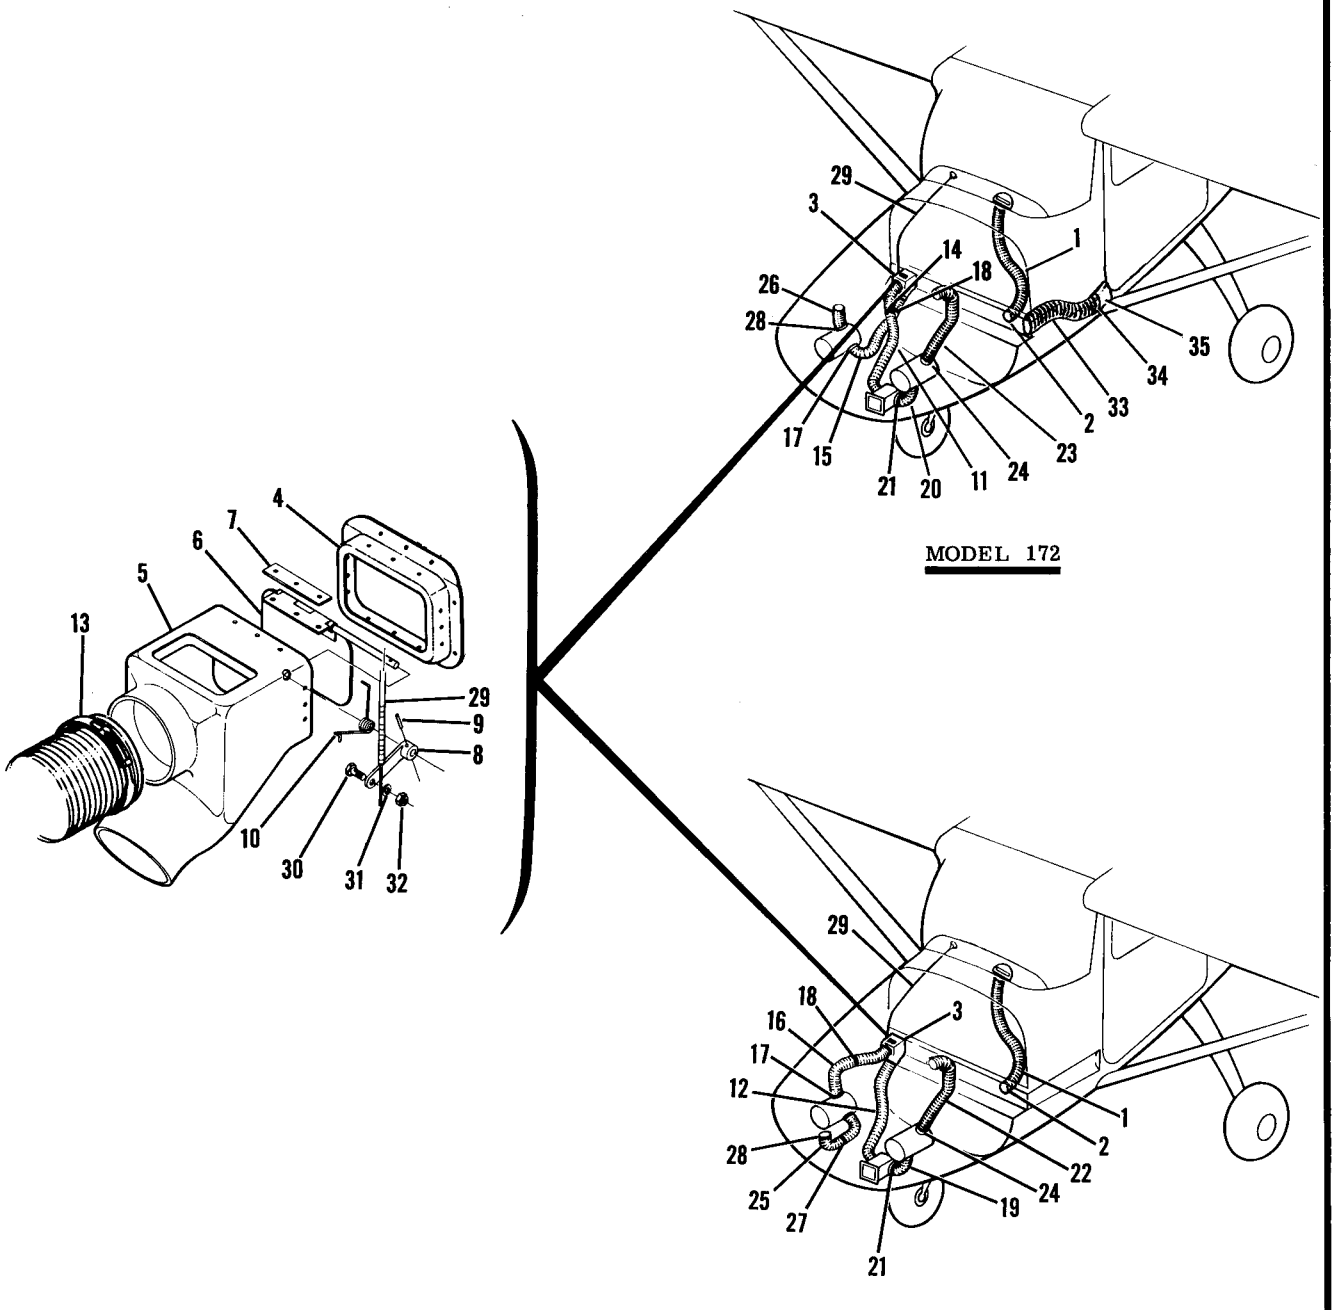


172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804
P172 SERIAL P17257120 THRU P17257188

Figure 140. Cabin Heating & Defrosting System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
140 -		CABIN HEATING & DEFROSTING SYSTEM INSTALLATION	NP	A
- 1	S1053E16T	HOSE 24.0 IN LG BULK ITEM REF S-1053E16T24.0	1	
		ATTACHING PARTS		
- 2	NAS397-32	CLAMP	1	
		---*---		
- 3	0753011-2	VALVE ASSEMBLY-WARM AIR	1	
- 4	0753010-1	SEAT-WARM AIR VALVE	1	
- 5	0553001-1	BODY ASSEMBLY VALVE	1	
- 6	1253034-1	PLATE ASSEMBLY-VALVE	1	
- 7	1253040-1	SHIM	1	
	1253033-2	REINFORCEMENT	1	
- 8	1253037-1	ARM-CONTROL	1	
		ATTACHING PARTS		
- 9	NAS561C2-8	ROLL PIN	1	
-10	1253041-1	SPRING-WARM AIR VALVE	1	
		---*---		
-11	S1053K24T	HOSE 31.0 IN LG BULK ITEM REF S-1053K24T31.0	1	B
-12	S1053K24T	HOSE 24.0 IN LG BULK ITEM REF S-1053K24T24.0	1	C
		ATTACHING PARTS		
-13	NAS398-50	CLAMP	2	
-14	AN742D50	CLAMP	2	B
	AN742D10	CLAMP	2	B
	S1021Z8-8	SCREW	1	B
		---*---		
-15	S1053K24T	HOSE 26.0 IN LG BULK ITEM REF S-1053K24T26.0	1	B
-16	S1053K24T	HOSE 19.3 IN LG BULK ITEM REF S-1053K24T19.3	1	C
		ATTACHING PARTS		
-17	NAS398-50	CLAMP	2	
-18	AN742D50	CLAMP	1	
		---*---		
-19	S53K24T	HOSE 24.0 IN LG BULK ITEM REF S-1053K24T24.0	1	C
-20	S1053K24T	HOSE 17.5 IN LG BULK ITEM REF S-1053E24T17.5	1	B
		ATTACHING PARTS		
-21	NAS398-50	CLAMP	2	
		---*---		
-22	S1053E24T	HOSE 24.0 IN LG BULK ITEM REF S-1053E24T24.0	1	C
-23	S1053E24T	HOSE 22.25 IN LG BULK ITEM REF S-1053E24T22.25	1	B
		ATTACHING PARTS		
-24	NAS398-50	CLAMP	2	
		---*---		
-25	S1053E24T	HOSE 32.0 IN LG BULK ITEM REF S-1053E24T32.0	1	C
-26	S1053E24T	HOSE 12.0 IN LG BULK ITEM REF S-1053E24T12.0	1	B
		ATTACHING PARTS		
-27	AN742D50	CLAMP	1	C
	S1485D12U	CLAMP	1	C
	S1021Z8-8	SCREW	1	C
-28	NAS398-50	CLAMP	2	
		---*---		
-29		CONTROL ASSEMBLY-CABIN HEAT SEE INSTRUMENT PANEL	1	
		ATTACHING PARTS		
-30	0450311-5	CLAMP	1	
-31	AN960-10L	WASHER	1	
-32	MS21044N3	NUT	1	
		---*---		
-33	S1110ET	DUCT 23 IN LG BULK ITEM REF S1110ET23.00	2	D
		ATTACHING PARTS		
-34	S1026BG	CLAMP 10.90 IN LG BULK ITEM REF S1026BG10.90X	2	D
		---*---		
-35	0513309-1	OUTLET ASSEMBLY-HEATER WEU 0513456-1	2	D
	0513456-1	OUTLET ASSEMBLY-HEATER	2	D
		ATTACHING PARTS		
	S1021Z6-6	SCREW	2	D
		---*---		

A---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804
C---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
D---172 SERIAL 17253393 THRU 17256512
F172 SERIAL F172-0180 THRU F17200804


Heating System (Cont)

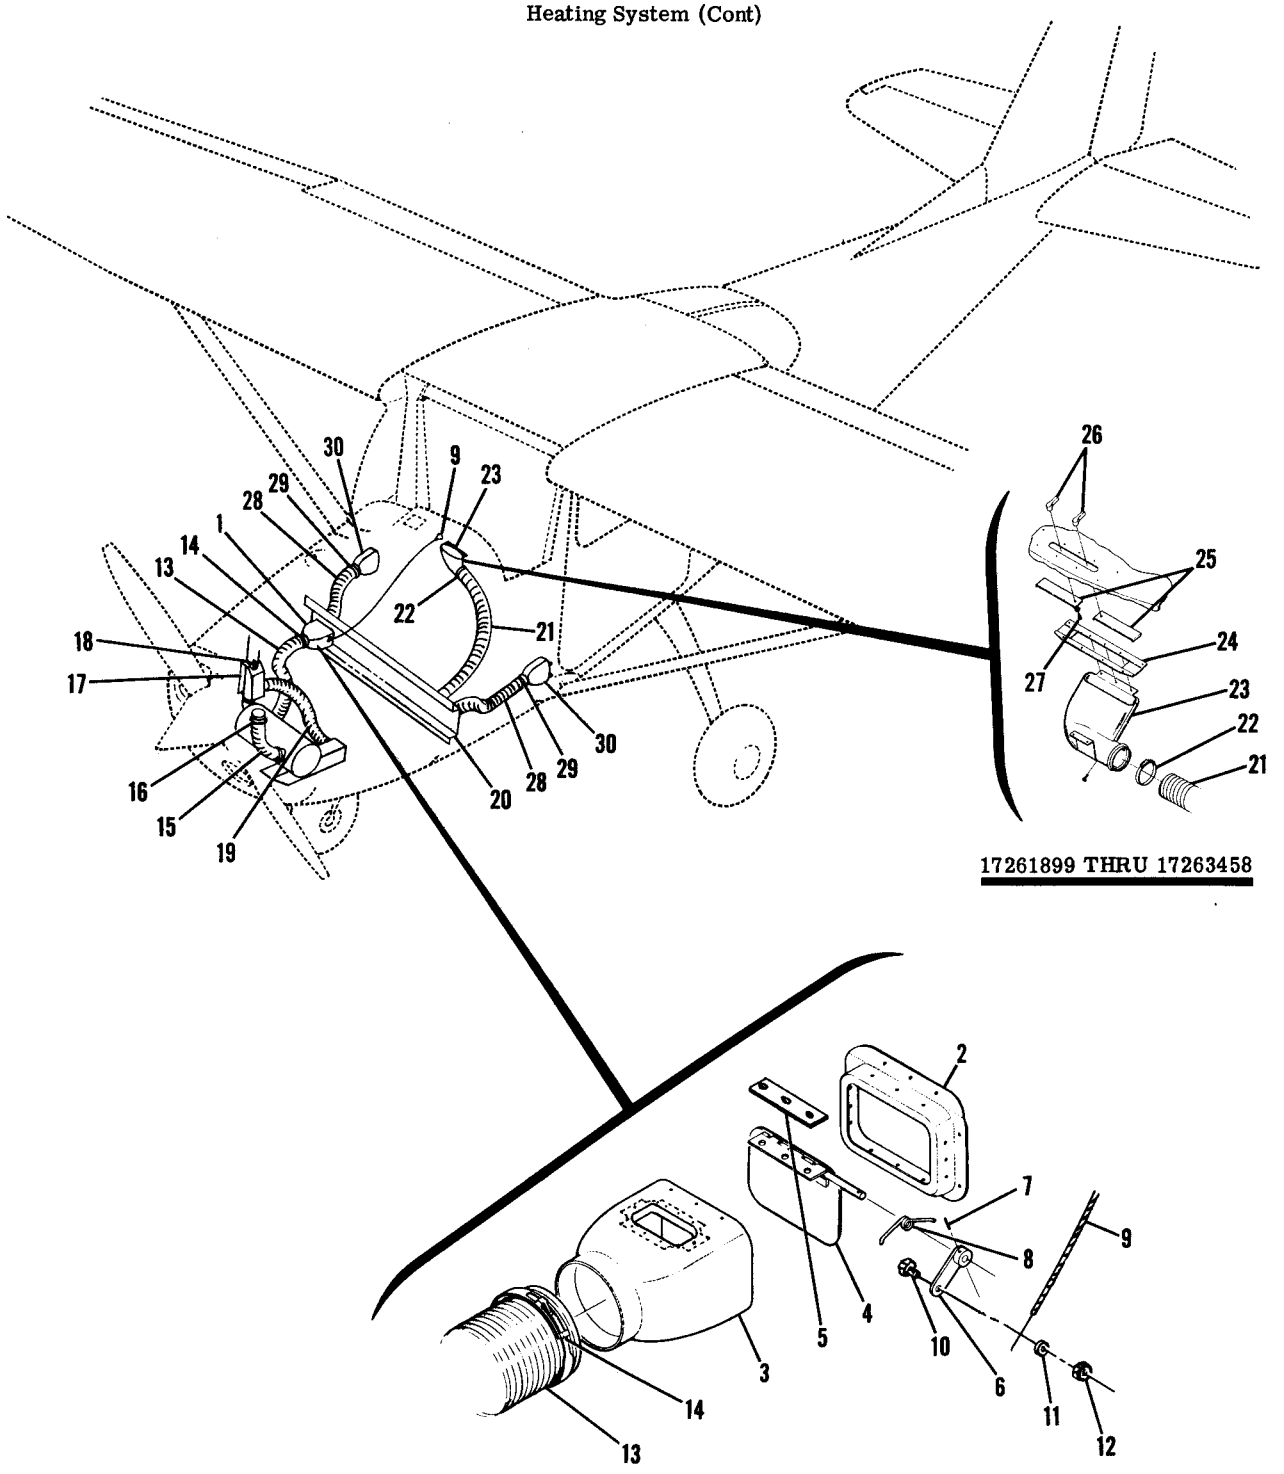

172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Figure 141. Cabin Heating & Defrosting System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
141 -		CABIN HEATING & DEFROSTING SYSTEM INSTALLATION	NP	A
- 1	0753011-1	VALVE ASSEMBLY-WARM AIR	1	
- 2	0753010-1	SEAT-WARM AIR VALVE	1	
- 3	1253032-1	BODY ASSEMBLY-VALVE	1	
- 4	1253034-1	PLATE ASSEMBLY-VALVE	1	
- 5	1253040-1	SHIM	1	
	1253033-1	REINFORCEMENT	1	
- 6	1253037-1	ARM-CONTROL	1	
		ATTACHING PARTS		
- 7	NAS561C2-8	ROLL PIN	1	
- 8	1253041-1	SPRING-WARM AIR VALVE	1	
		---*---		
- 9	S1239-37	CONTROL ASSEMBLY-CABIN HEAT	1	F
	S1239-48	CONTROL ASSEMBLY-CABIN HEAT	1	G
		ATTACHING PARTS		
-10	0450311-5	CLAMP	1	
-11	AN960-10L	WASHER	1	
-12	MS21044N3	NUT	1	
		---*---		
-13	S1053K24T	HOSE * IN LG BULK ITEM REF S1053K24T*	1	
		ATTACHING PARTS		
-14	NAS398-50	CLAMP	2	
		---*---		
-15	S1053K24T	HOSE * IN LG BULK ITEM REF S1053K24T*	1	E
		ATTACHING PARTS		
-16	NAS398-50	CLAMP	2	E
		---*---		
-17	1750011-1	SHROUD ASSEMBLY WEU 1750014-4	1	B
	1750011-4	SHROUD ASSEMBLY	1	C
		ATTACHING PARTS		
-18	AN737TW56	CLAMP	2	
		---*---		
-19	S1053K16T	HOSE * IN LG BULK ITEM REF S1053K16*	1	
		ATTACHING PARTS		
	NAS397-32	CLAMP	2	
		---*---		
-20	SEE FIG 41	DUCT ASSEMBLY-HEATER	1	
-21	S1053E16T	HOSE 24.00 INLG BKI REF S1053E16T24.00	1	
		ATTACHING PARTS		
-22	NAS397-32	CLAMP	2	
		---*---		
-23	0513386-1	NOZZLE ASSEMBLY-DEFROSTER	1	
	0513386-7	BRACKET DEFROSTER-NOZZLE	1	
		ATTACHING PARTS		
	S1021Z4-4C	SCREW	4	
		---*---		
-24	0513267-1	VALVE GUIDE	1	D
	0713019-112	VALVE ASSEMBLY-LH	1	D
	0713019-113	VALVE ASSEMBLY-RH	1	D
-25	0713019-111	VALVE	1	D
-26	S2198-3	KNOB	1	D
		ATTACHING PARTS		
-27	AN5158R4	SCREW	2	
	AN936A8	WASHER	2	
		---*---		
-28	S1110ET	DUCT 23.00 IN LG BKI REF S1110ET23.00	2	
		ATTACHING PARTS		
-29	S1026BG10.90X	CLAMP	2	
		---*---		
-30	0513309-1	OUTLET ASSY-HEATER WEU 0513456-1	2	
	0513456-1	OUTLET ASSY-HEATER	2	
		ATTACHING PARTS		
	S1021Z6-6	SCREW	2	
		---*---		
		A---172 SERIAL 17256513 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 B---172 SERIAL 17256513 THRU 17258708 C---172 SERIAL 17256709 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 D---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234 E---172 SERIAL 17256513 THRU 17261898 F172 SERIAL F17200805 THRU F17201034 F---172 SERIAL 17256513 THRU 17258486 G---172 SERIAL 17258487 THRU 17263458 F172 SERIAL F17200805 THRU F172001234		

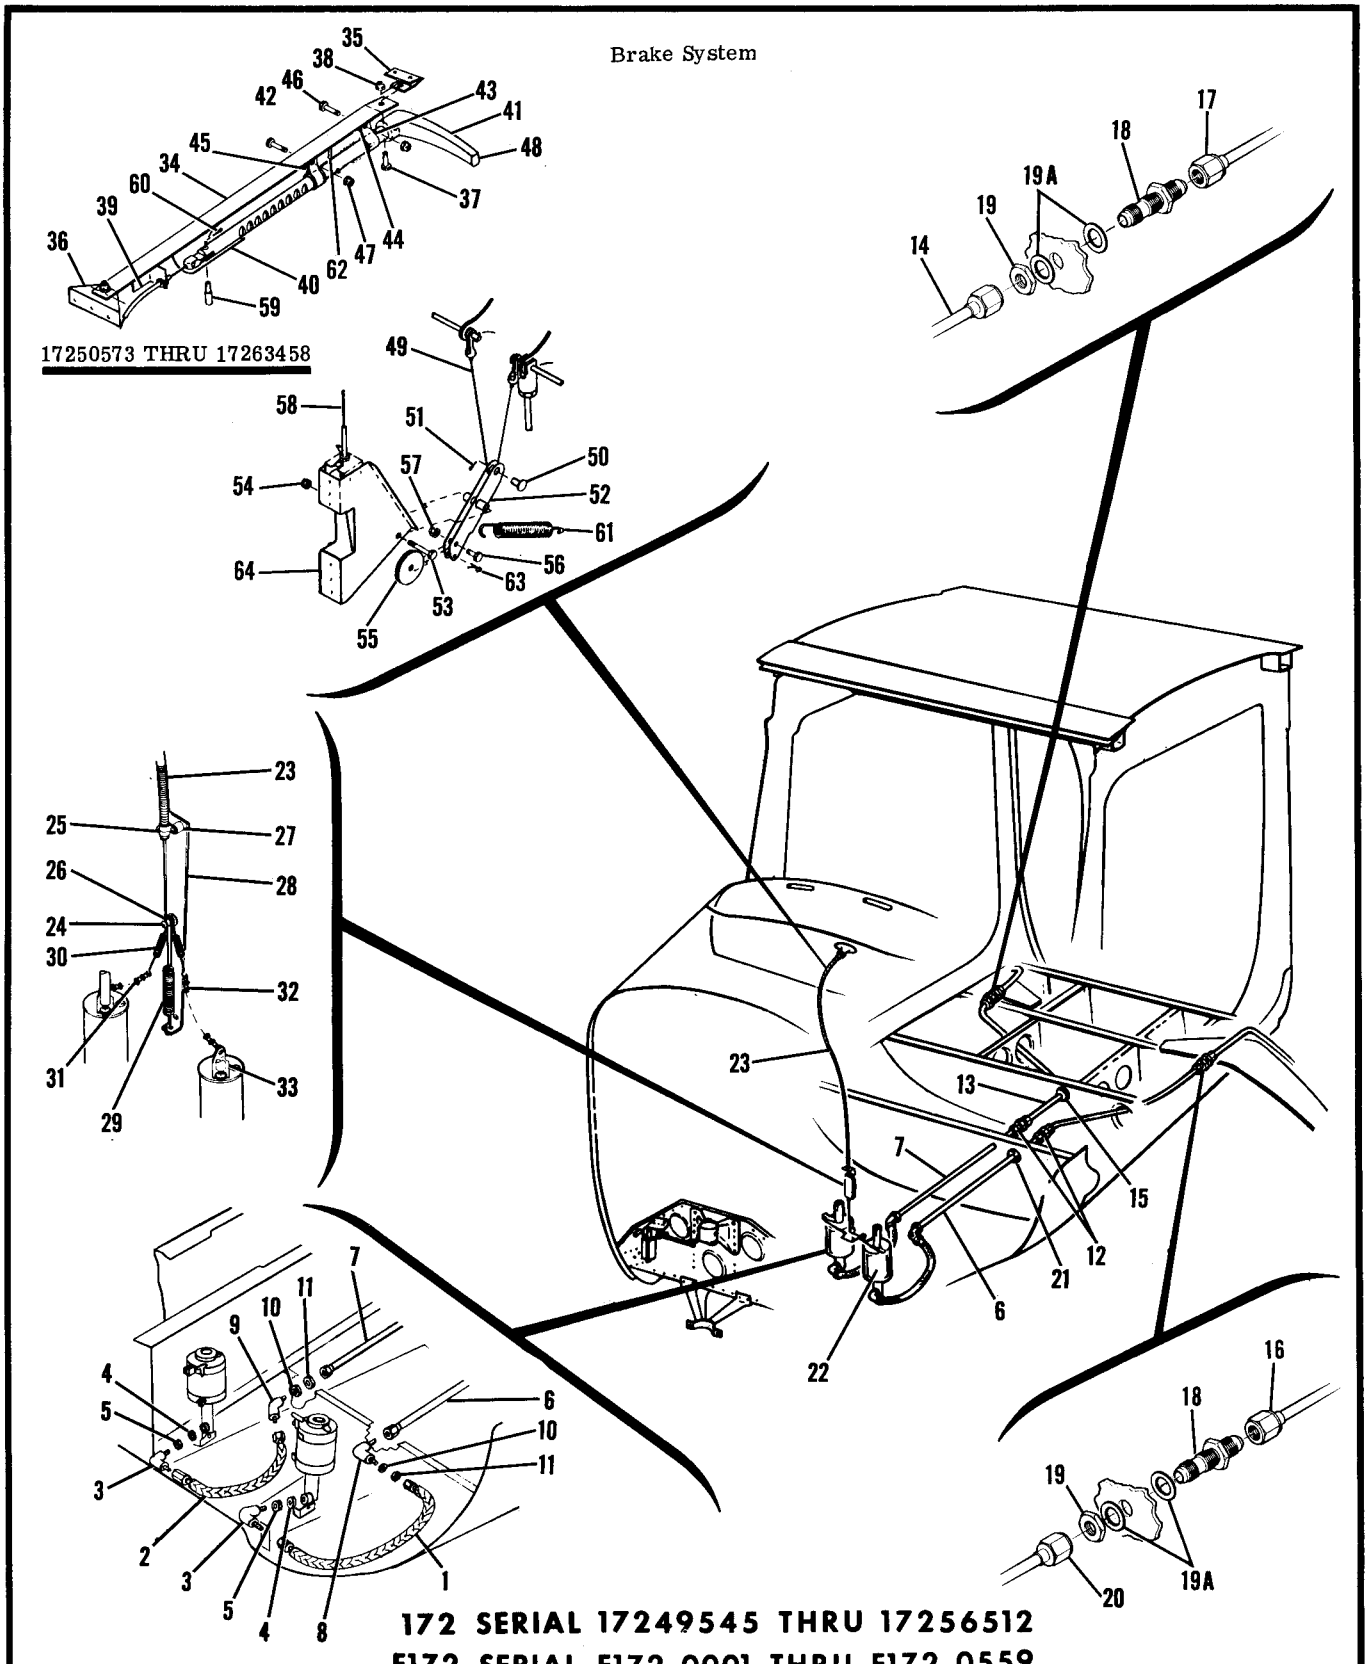

172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F172-0559
P172 SERIAL P17257120 THRU P17257188

Figure 142. Brake System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
142 -		BRAKE SYSTEM INSTALLATION	NP	
- 1	S1167-4-0100	HOSE ASSEMBLY-MASTER CYLINDER TO ELBOW LH	1	
- 2	S1167-4-0080	HOSE ASSEMBLY-MASTER CYLINDER TO ELBOW RH	1	
		ATTACHING PARTS		
- 3	AN921-4D	ELBOW	1	
- 4	AN924-4D	NUT	1	
- 5	MS28778-4	GASKET	1	
		---*---		
- 6	0500106-182	LINE ASSEMBLY-BRAKE LH	1	
- 7	0500106-183	LINE ASSEMBLY-BRAKE RH	1	
		ATTACHING PARTS		
- 8	AN921-4D	ELBOW-LH	1	
- 9	AN837-4D	ELBOW-RH	1	
-10	AN960-716	WASHER	2	
-11	AN924-4D	NUT	1	
-12	AN815-4D	UNION	1	
		---*---		
-13	0500106-194	LINE ASSEMBLY-BRAKE RH	1	
-14	0500105-278	LINE ASSEMBLY-BRAKE RH	1	
		ATTACHING PARTS		
-15	AN837-4D	ELBOW	1	
	AN960-716	WASHER	2	
	AN924-4D	NUT	1	
		---*---		
-16	0500106-281	LINE ASSEMBLY-BRAKE LH	1	C
	0500106-379	LINE ASSEMBLY-BRAKE-LH	1	D
	0500118-41	LINE ASSEMBLY-BRAKE LH	1	E
-17	0500106-282	LINE ASSEMBLY-BRAKE RH	1	C
	0500106-380	LINE ASSEMBLY-BRAKE RH	1	D
	0500118-40	LINE ASSEMBLY-BRAKE RH	1	E
		ATTACHING PARTS		
-18	AN832-4D	UNION	1	
-19	AN924-4D	NUT	1	
		---*---		
-19A	AN916-716	WASHER	2	
-20	0500106-285	LINE ASSEMBLY-BRAKE LH	1	
-21	MS35489-7	GROMMET	1	
-22	SEE FIG 146	MASTER BRAKE CYLINDER	2	
		PARKING BRAKE INSTALLATION	NP	A
-23	S1239-1	CONTROL-PARKING BRAKE	1	
		ATTACHING PARTS		
-24	AN500A8-5	SCREW	1	
-25	AN742D3	CLAMP	2	
	S1021Z8-14	SCREW	2	
	NAS446-4-3	NUT	2	
-26	0450258	CLAMP	1	
-27	NAS43DD3-23	SPACER	2	
		---*---		
-28	0541174-1	PLATE	1	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	2	
	NAS446-4-3	NUT	2	
		---*---		
-29	0541172-1	SPRING-RETURN	1	
-30	0541173-1	SPRING	2	
-31	S1099-1-4.00	CHAIN	1	
-32	S1099-1-3.30	CHAIN	1	
-33	0541178-1	LINK-PARKING BRAKE CHAIN	2	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
142 -		PARKING BRAKE INSTALLATION	NP	B
-34	0713070-37	ANGLE	1	
		ATTACHING PARTS		
-35	0513331-2	SUPPORT	1	
-36	0713070-36	ANGLE	1	
-37	AN3-3A	BOLT	2	
-38	MS21044N3	NUT	2	
		---*---		
-39	0713070-5	ANGLE	1	
-40	0713070-4	RACK-POSITIONING	1	
-41	0813150-55	HANDLE ASSEMBLY-PARKING BRAKE	1	
		ATTACHING PARTS		
-42	0813156-4	HOUSING ASSEMBLY-BRAKE	1	
-43	0713070-25	CLAMP	1	
-44	0713070-32	SPACER	1	
-45	0713070-15	SPACER	1	
-46	AN3-6A	BOLT	2	
-47	MS21044N3	NUT	2	
		---*---		
-48	0811490-6	HANDLE-PARKING BRAKE	1	
	0813150-54	TUBE-PARKING BRAKE	1	
	NAS561-5-12	ROLL PIN EN	1	
-49	0510105-70	CABLE	1	
-50	MS20392-4C13	PIN	1	
-51	MS24665-281	PIN-COTTER	1	
-52	0713070-9	BELLCRANK ASSEMBLY	1	
		ATTACHING PARTS		
-53	AN3-13A	BOLT	1	
	0713070-19	SPACER	1	
-54	MS21044N3	NUT	1	
		---*---		
-55	S378-1L	PULLEY	1	
		ATTACHING PARTS		
-56	AN3-5A	BOLT	1	
-57	MS21044N3	NUT	1	
		---*---		
-58	0713070-28	TUBE & CABLE ASSEMBLY	1	
		ATTACHING PARTS		
-59	0713070-6	POSITIONING ARM	1	
-60	MS24665-132	PIN-COTTER	1	
		---*---		
-61	0713063	SPRING	1	
-62	0713070-24	CATCH	1	
-63	MS24665-132	PIN-COTTER	1	
-64	0713070-20	BRACKET ASSEMBLY	1	

A---172 SERIAL 17249545 THRU 17250572
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0018
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17250573 THRU 17256512
F172 SERIAL F172-0019 THRU F172-0559
C---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0099
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
D---172 SERIAL 17251823 THRU 17253842
F172 SERIAL F172-0100 THRU F172-0303
E---172 SERIAL 17253843 THRU 17256512
F172 SERIAL F172-0304 THRU F172-0559

This page intentionally left blank.

Brake System

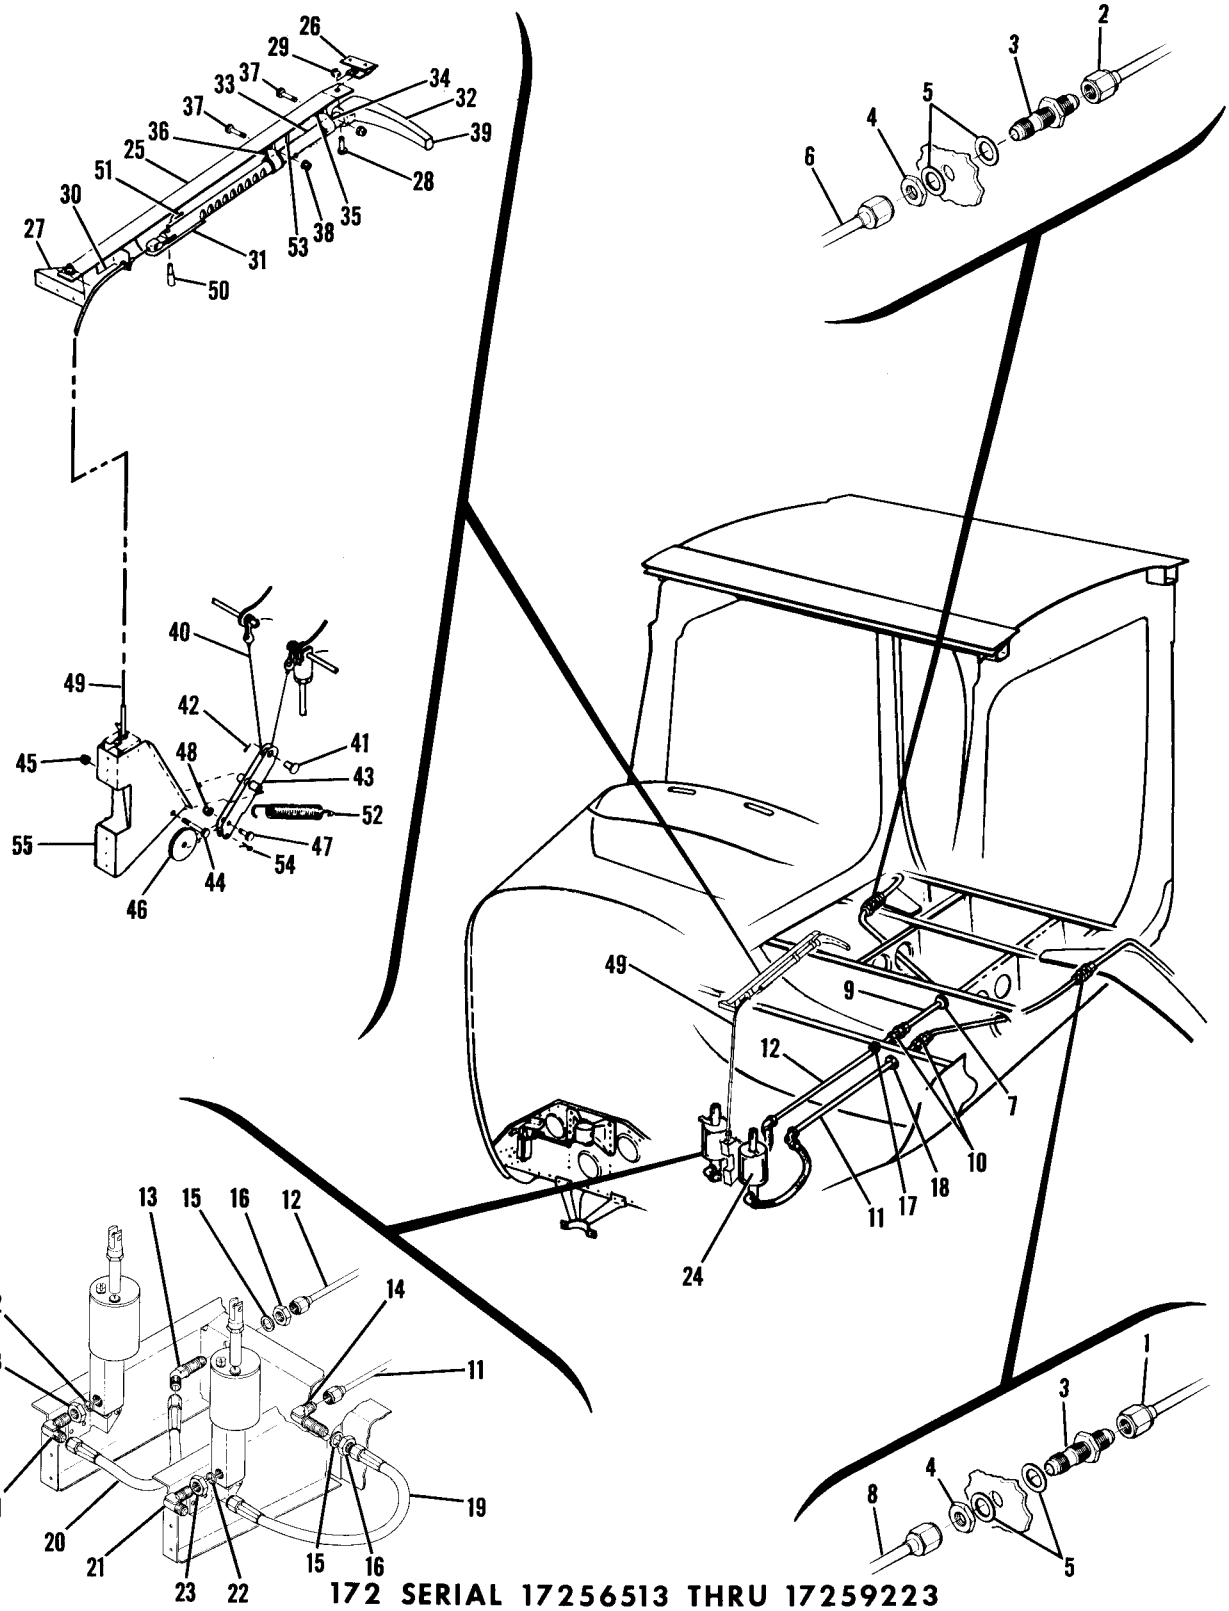

172 SERIAL 17256513 THRU 17259223
F172 SERIAL F172-0560 THRU F17200754

Figure 143. Brake System Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
143 -		BRAKE SYSTEM INSTALLATION	NP	A
- 1	0500118-61	LINE ASSEMBLY-BRAKE LH WHEN EXHAUSTED USE 0500118-84	1	B
	0500118-84	LINE ASSEMBLY-BRAKE LH	1	B
	0500118-77	LINE ASSEMBLY-BRAKE LH WHEN EXHAUSTED USE 0500118-91	1	C
	0500118-91	LINE ASSEMBLY-BRAKE LH	1	D
- 2	0500118-62	LINE ASSEMBLY-BRAKE RH WHEN EXHAUSTED USE 0500118-85	1	B
	0500118-85	LINE ASSEMBLY-BRAKE RH	1	B
	0500118-76	LINE ASSEMBLY-BRAKE RH WHEN EXHAUSTED USE 0500118-92	1	C
	0500118-92	LINE ASSEMBLY-BRAKE RH	1	D
		ATTACHING PARTS		
- 3	AN832-3D	UNION	1	
- 4	AN924-3D	NUT	1	
- 5	AN960-716	WASHER	2	
		---*---		
- 6	0500118-64	LINE ASSEMBLY-BRAKE RH WHEN EXHAUSTED USE 0500118-87	1	E
	0500118-87	LINE ASSEMBLY-BRAKE RH	1	D
		ATTACHING PARTS		
- 7	AN837-3D	ELBOW	1	
	AN924-3D	NUT	1	
	AN960-716	WASHER	2	
		---*---		
- 8	0500118-63	LINE ASSEMBLY-BRAKE LH WHEN EXHAUSTED USE 0500118-86	1	E
	0500118-86	LINE ASSEMBLY-BRAKE LH	1	D
- 9	0500118-65	LINE ASSEMBLY-BRAKE RH WHEN EXHAUSTED USE 0500118-88	1	E
	0500118-88	LINE ASSEMBLY-BRAKE RH	1	D
		ATTACHING PARTS		
-10	AN815-3D	UNION	1	
		---*---		
-11	0500118-67	LINE ASSEMBLY-BRAKE LH WHEN EXHAUSTED USE 0500118-90	1	E
	0500118-90	LINE ASSEMBLY-BRAKE LH	1	D
-12	0500118-66	LINE ASSEMBLY-BRAKE RH WHEN EXHAUSTED USE 0500118-89	1	E
	0500118-89	LINE ASSEMBLY-BRAKE RH	1	D
		ATTACHING PARTS		
-13	AN837-3D	ELBOW-RH ONLY	1	
-14	AN833-3D	ELBOW-LH ONLY	1	
-15	AN960-716	WASHER	2	
-16	AN924-3D	NUT	1	
-17	S1153-1	BRACKET-RH ONLY	1	
	MS21919DG3	CLAMP-RH ONLY	1	
	S1021Z8-8	SCREW-RH ONLY	2	
		---*---		
-18	MS35489-36S	GROMMET	1	
-19	S1167-3-0100	HOSE ASSEMBLY-MASTER CYLINDER TO ELBOW LH	1	
-20	S1167-3-0085	HOSE ASSEMBLY-MASTER CYLINDER TO ELBOW RH	1	
		ATTACHING PARTS		
-21	AN921-3D	ELBOW	1	
-22	MS28778-3	GASKET	1	
-23	AN924-3D	NUT	1	
		---*---		
-24	SEE FIG 146	MASTER BRAKE CYLINDER	2	
		PARKING BRAKE INSTALLATION	NP	
-25	0713070-37	ANGLE	1	
		ATTACHING PARTS		
-26	0513331-2	SUPPORT	1	
-27	0713070-36	ANGLE	1	
-28	AN3-3A	BOLT	2	
-29	MS21044N3	NUT	2	
		---*---		
-30	0713070-5	ANGLE	1	
-31	0713070-4	RACK-POSITIONING	1	
-32	0813150-55	HANDLE ASSEMBLY-PARKING BRAKE	1	
		ATTACHING PARTS		
-33	0813156-4	HOUSING ASSEMBLY-BRAKE	1	
-34	0713070-25	CLAMP	1	
-35	0713070-32	SPACER	1	
-36	0713070-15	SPACER	1	
-37	AN3-6A	BOLT	2	
-38	MS21044N3	NUT	2	
		---*---		
-39	0811490-6	HANDLE-PARKING BRAKE	1	
	0813150-54	TUBE-PARKING BRAKE	1	
	NAS561-5-12	ROLL PIN EN	1	
-40	0510105-70	CABLE	1	
-41	MS20392-4C13	PIN	1	
-42	MS24665-281	COTTER PIN	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
143 -43	0713070-9	BELLCRANK ASSEMBLY	1	
		ATTACHING PARTS		
-44	AN3-13A	BOLT	1	
	0713070-19	SPACER	1	
-45	MS21044N3	NUT	1	
		---*---		
-46	S378-1L	PULLEY	1	
		ATTACHING PARTS		
-47	AN3-5A	BOLT	1	
-48	MS21044N3	NUT	1	
		---*---		
-49	0713070-28	TUBE & CABLE ASSEMBLY	1	
		ATTACHING PARTS		
-50	0713070-6	POSITIONING ARM	1	
-51	MS24665-132	COTTER PIN	1	
		---*---		
-52	0713063	SPRING	1	
-53	0713070-24	CATCH	1	
	AN960-4	WASHER	1	
-54	MS24665-132	COTTER PIN	1	
-55	0713070-20	BRACKET ASSEMBLY	1	
		A---172 SERIAL 17256513 THRU 17259223 F172 SERIAL F172-0560 THRU F17200754 B---172 SERIAL 17256513 THRU 17257161 C---172 SERIAL 17257162 THRU 17258719 F172 SERIAL F172-0560 THRU F17200739 D---172 SERIAL 17258720 THRU 17259223 F172 SERIAL F17200740 THRU F17200754 E---172 SERIAL 17256513 THRU 17258519 F172 SERIAL F172-0560 THRU F17200739		

This page intentionally left blank.

Brake System (Cont)

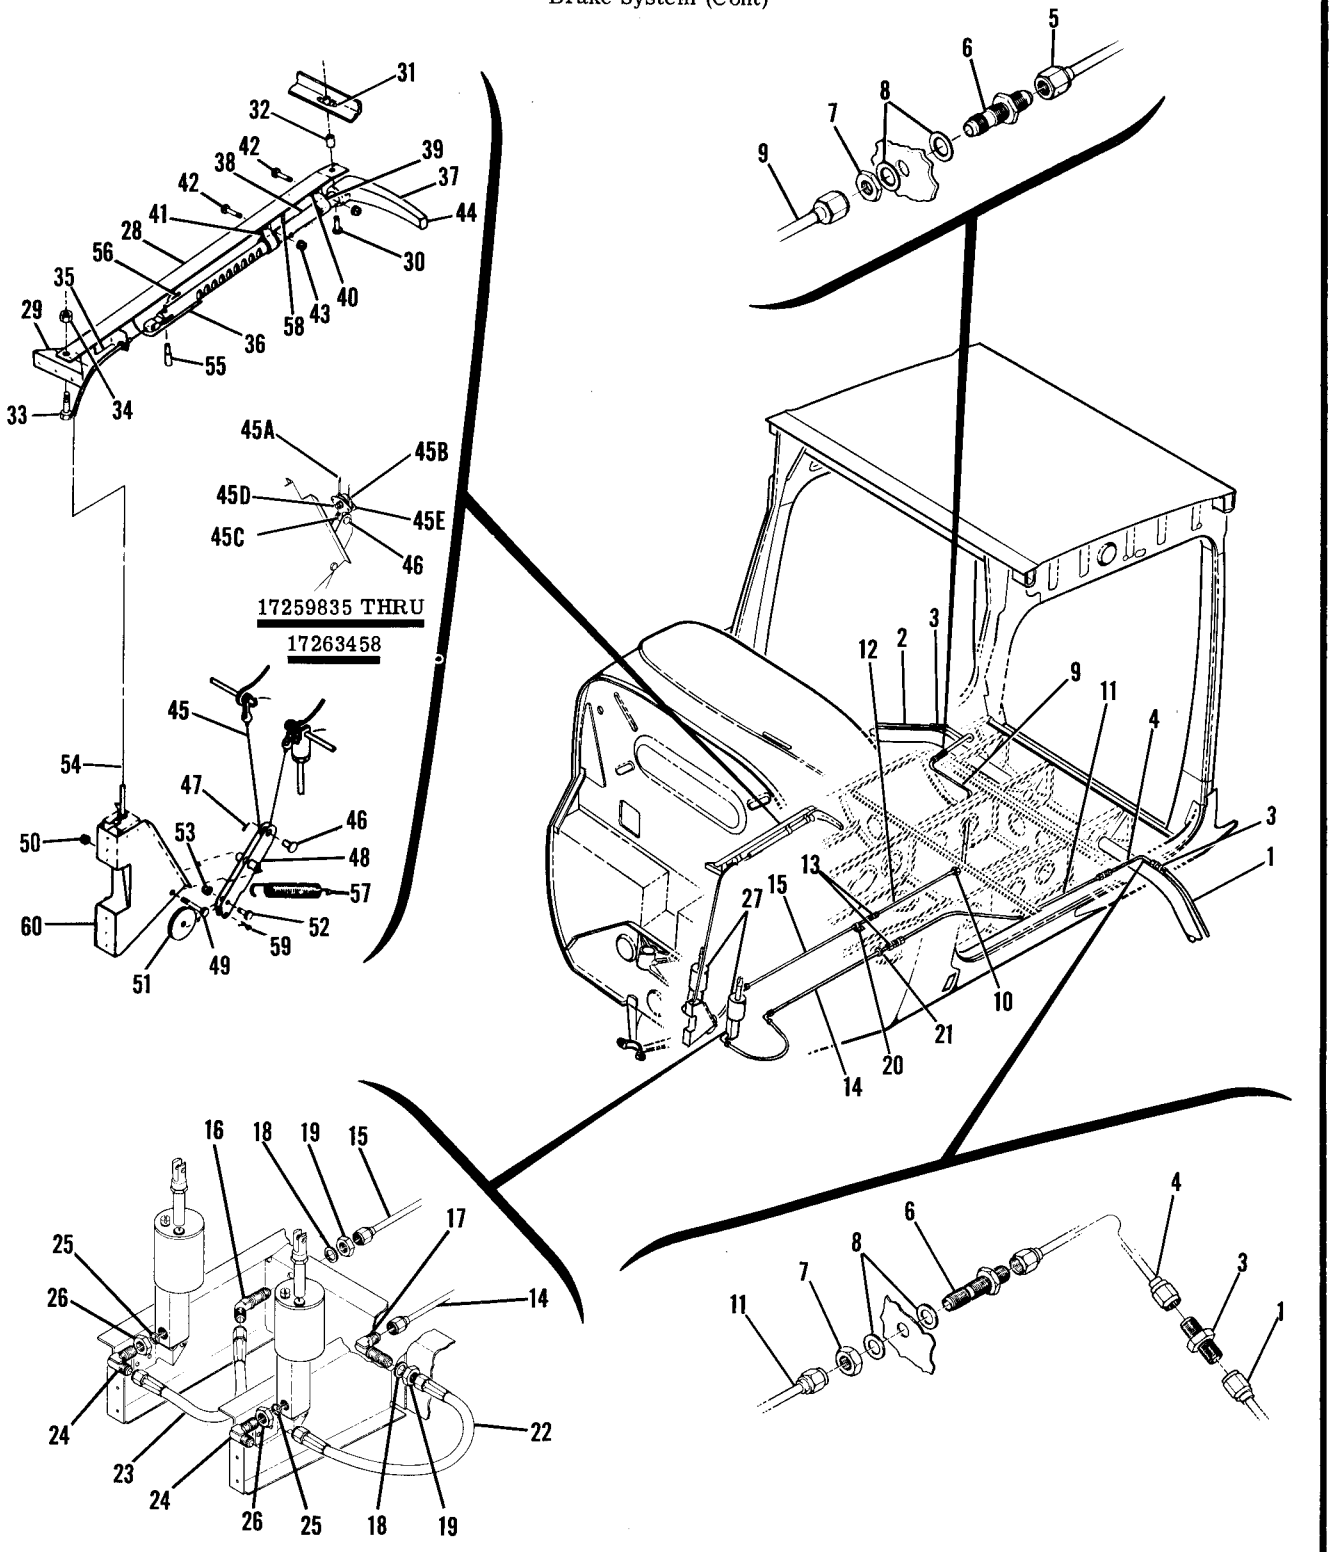

172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234

Figure 144. Brake System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
144 -		BRAKE SYSTEM	NP	A
- 1	0500118-126	LINE ASSEMBLY-BRAKE LH	1	
- 2	0500118-127	LINE ASSEMBLY-BRAKE RH	1	
		ATTACHING PARTS		
- 3	AN815-3D	UNION	1	
		---*---		
- 4	0500118-128	LINE ASSEMBLY-BRAKE LH	1	
- 5	0500118-129	LINE ASSEMBLY-BRAKE RH	1	
		ATTACHING PARTS		
- 6	AN832-3D	UNION	1	
- 7	AN924-3D	NUT	1	
- 8	AN960-716	WASHER	2	
		---*---		
- 9	0500118-87	LINE ASSEMBLY-BRAKE RH	1	
		ATTACHING PARTS		
-10	AN837-3D	ELBOW	1	
	AN924-3D	NUT	1	
	AN960-716	WASHER	2	
		---*---		
-11	0500118-86	LINE ASSEMBLY-BRAKE LH	1	
-12	0500118-88	LINE ASSEMBLY-BRAKE RH	1	
		ATTACHING PARTS		
-13	AN815-3D	UNION	1	
		---*---		
-14	0500118-90	LINE ASSEMBLY-BRAKE LH	1	
-15	0500118-89	LINE ASSEMBLY-BRAKE RH	1	
		ATTACHING PARTS		
-16	AN837-3D	ELBOW-RH ONLY	1	
-17	AN833-3D	ELBOW-LH ONLY	1	
-18	AN960-716	WASHER	2	
-19	AN924-3D	NUT	2	
-20	S1153-1	BRACKET-RH ONLY	1	
	MS21919DG3	CLAMP-RH ONLY	1	
	S1021Z8-8	SCREW-RH ONLY	2	
		---*---		
-21	MS35489-36S	GROMMET	1	
-22	S1167C3-0100	HOSE ASSEMBLY-MASTER CYLINDER TO ELBOW LH	1	
-23	S1167-3-0085	HOSE ASSEMBLY-MASTER CYLINDER TO ELBOW RH	1	
		ATTACHING PARTS		
-24	AN921-3D	ELBOW	1	
-25	MS28778-3	GASKET	1	
-26	AN924-3D	NUT	1	
		---*---		
-27	SEE FIG 146	MASTER BRAKE CYLINDER	2	
		PARKING BRAKE INSTALLATION	NP	
-28	0713070-37	ANGLE	1	
		ATTACHING PARTS		
-29	0713070-36	ANGLE	1	
-30	AN520-10R12	SCREW	1	
-31	MS20364-1032C	NUT	1	
-32	NAS43DD3-32	SPACER	1	
-33	AN3-3A	BOLT	1	
-34	MS21045L3	NUT	1	
		---*---		
-35	0713070-5	ANGLE	1	
-36	0713070-4	RACK-POSITIONING	1	
-37	0813150-55	HANDLE ASSEMBLY-PARKING BRAKE	1	
		ATTACHING PARTS		
-38	0813156-4	HOUSING ASSEMBLY-BRAKE	1	
-39	0713070-25	CLAMP	1	
-40	0713070-32	SPACER	1	
-41	0713070-15	SPACER	1	
-42	AN3-6A	BOLT	2	
-43	MS21045L3	NUT	2	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
144 -44	0811490-75	HANDLE-PARKING BRAKE	1	
	0813150-54	TUBE-PARKING BRAKE	1	
	NAS561-5-12	ROLL PIN EN	1	
-45	0510105-70	CABLE	1	B
-45A	0510105-232	CABLE ASSEMBLY-PARKING BRAKE	1	C
-45B	S1710-1	PULLEY	1	C
		ATTACHING PARTS		
-45C	0713959-1	BRACKET ASSEMBLY	1	C
-45D	AN3-6A	BOLT	1	C
	0411783	BUSHING	1	C
	AN960-10L	WASHER	1	C
	MS21044N3	NUT	1	C
		---*---		
-45E	MS24665-134	PIN-COTTER CABLE GUARD	3	C
-46	MS20392-4C13	PIN	1	
-47	MS24665-281	COTTER PIN	1	
-48	0713070-9	BELLCRANK ASSEMBLY	1	
		ATTACHING PARTS		
-49	AN3-13A	BOLT	1	
	0713070-19	SPACER	1	
-50	MS21045L3	NUT	1	
		---*---		
-51	S378-1L	PULLEY	1	
		ATTACHING PARTS		
-52	AN3-5A	BOLT	1	
-53	MS21045L3	NUT	1	
		---*---		
-54	0713070-28	TUBE ASSEMBLY	1	
		ATTACHING PARTS		
-55	0713070-6	POSITIONING ARM	1	
-56	MS24665-132	COTTER PIN	1	
		---*---		
-57	0713063	SPRING	1	
-58	0713070-24	CATCH	1	
	AN960-4	WASHER	1	
-59	MS24665-132	COTTER PIN	1	
-60	0713070-20	BRACKET ASSEMBLY	1	

A---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234
B---172 SERIAL 17259224 THRU 17259834
F172 SERIAL F17200755 THRU 17200820
C---172 SERIAL 17259835 THRU 17263458
F172 SERIAL F17200821 THRU F17201234

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
145 -		PEDAL INSTALLATION-RUDDER & BRAKE LH	NP	
- 1	1460320-1	PEDAL-BRAKE & RUDDER	2	
		ATTACHING PARTS		
- 2	1460501-21	SHAFT	1	
- 3	MS24665-285	PIN-COTTER	2	
- 4	0411778-3	SHAFT	1	
- 5	MS24665-132	PIN-COTTER	2	
		---*---		
- 6	0310196-12	SPRING-BRAKE & RUDDER RETURN RH	1	
- 7	0310196-5	SPRING-BRAKE & RUDDER RETURN LH	1	
- 8	0411307	ARM-RUDDER BAR	2	
		ATTACHING PARTS		
- 9	AN3-11A	BOLT	1	
-10	MS21045L3	NUT	1	
		---*---		
-11	0541138-20	CYLINDER ASSEMBLY-BRAKE	2	A
	0541138-16	CYLINDER ASSEMBLY-BRAKE	2	B
	0541138-22	CYLINDER ASSEMBLY-BRAKE	2	E
		ATTACHING PARTS		
-12	MS20392-2C15	PIN	1	
-13	MS24665-132	PIN-COTTER	1	
		---*---		

CONTINUED ON NEXT PAGE

Control Pedals

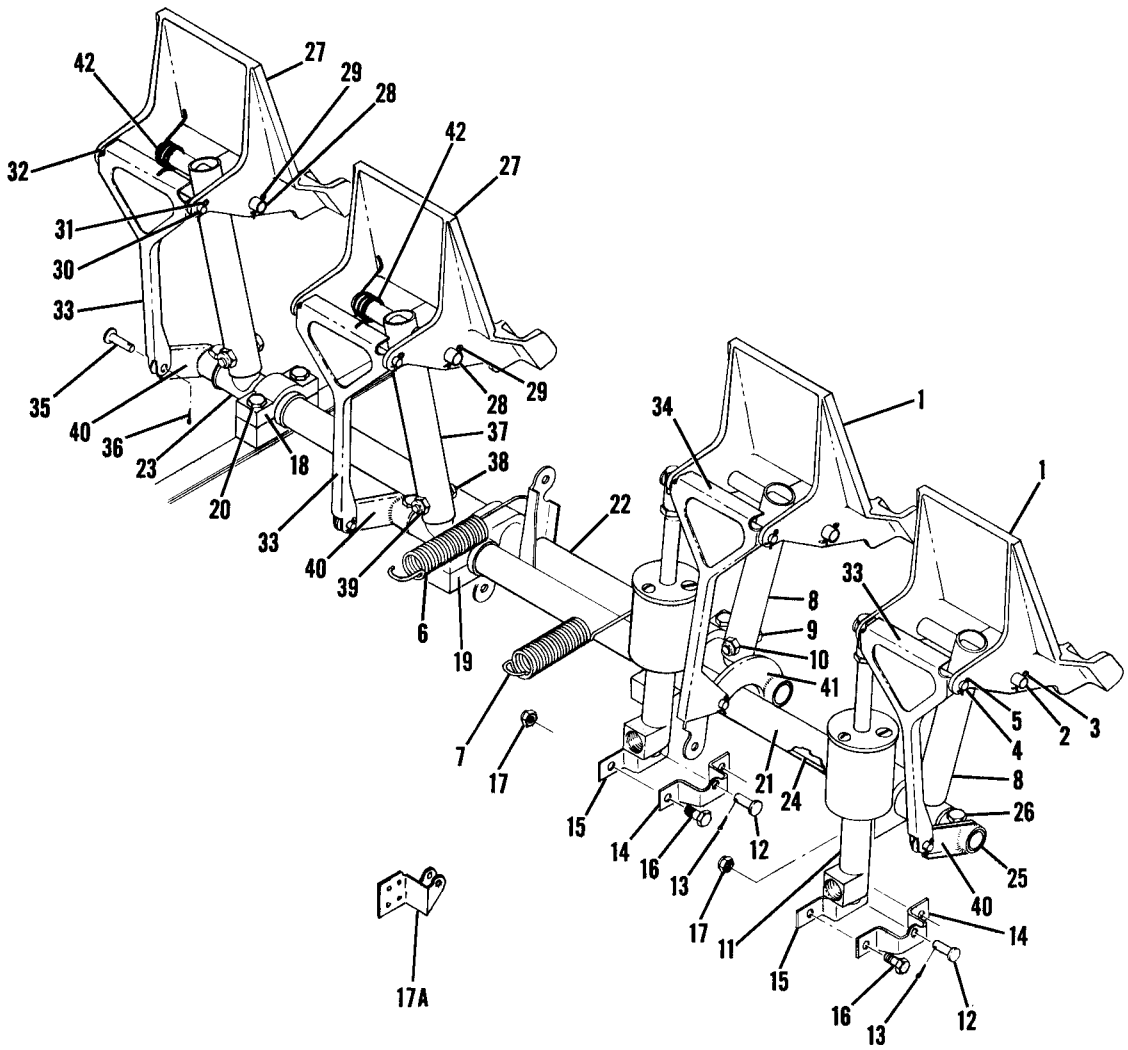


Figure 145. Brake & Rudder Pedals Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
145 -14	0411550	BRACKET-BRAKE CYLINDER OUTSIDE	2	C
-15	0411549	BRACKET-BRAKE CYLINDER INSIDE	2	C
		ATTACHING PARTS		
-16	AN3-4A	BOLT	2	C
-17	MS21045L3	NUT	2	C
		---*---		
-17A	0713624-2	ANCHOR-MASTER CYLINDER	2	D
-18	S1674-1	BEARING-TORQUE TUBE	4	
-19	S1675-1	BEARING-TORQUE TUBE	4	
		ATTACHING PARTS		
-20	AN3-16A	BOLT	2	
	AN960-10	WASHER	2	
	MS21045L3	NUT	2	
		---*---		
-21	0411306-14	WELD ASSEMBLY	1	
-22	0411306-13	WELD ASSEMBLY	1	
-23	S1003-43A	BEARING	4	
-24	0411565	TUBE-DUAL BRAKE	2	
-25	0411562	HUB-DUAL BRAKE	4	
		ATTACHING PARTS		
-26	AN3-10A	BOLT	1	
	MS21045L3	NUT	1	
		---*---		
		PEDAL INSTALLATION-BRAKE & RUDDER RH	NP	
-27	1460320-1	PEDAL-BRAKE & RUDDER	2	
		ATTACHING PARTS		
-28	1460501-21	SHAFT	1	
-29	MS24665-285	PIN-COTTER	2	
-30	0411778-2	SHAFT	1	
-31	MS24665-132	PIN-COTTER	2	
-32	NAS42HT6-8	SPACER	1	
	S1438-2	WASHER	AR	
		---*---		
-33	0411564	LINK-DUAL BRAKES	3	
-34	0411564-3	LINK-DUAL BRAKES	1	
		ATTACHING PARTS		
-35	MS20392-2C15	PIN	1	
-36	MS24665-132	PIN-COTTER	1	
	NAS43HT3-12	SPACER	1	
		---*---		
-37	0411307	ARM-RUDDER BAR	2	
		ATTACHING PARTS		
-38	AN3-11A	BOLT	1	
-39	MS21045L3	NUT	1	
		---*---		
-40	0411563	BELLCRANK ASSEMBLY	3	
-41	0411573-1	BELLCRANK ASSEMBLY	1	
-42	1460505-1	SPRING	2	

A---172 SERIAL 17249545 THRU 17250572
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0018
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17250573 THRU 17256512
F172 SERIAL F172-0019 THRU F172-0559
C---172 SERIAL 17249545 THRU 17252327
F172 SERIAL F172-0001 THRU F172-0159
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
D---172 SERIAL 17252328 THRU 17263458
F172 SERIAL F172-0160 THRU F17201234
E---172 SERIAL 17256513 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234

Brake Cylinder


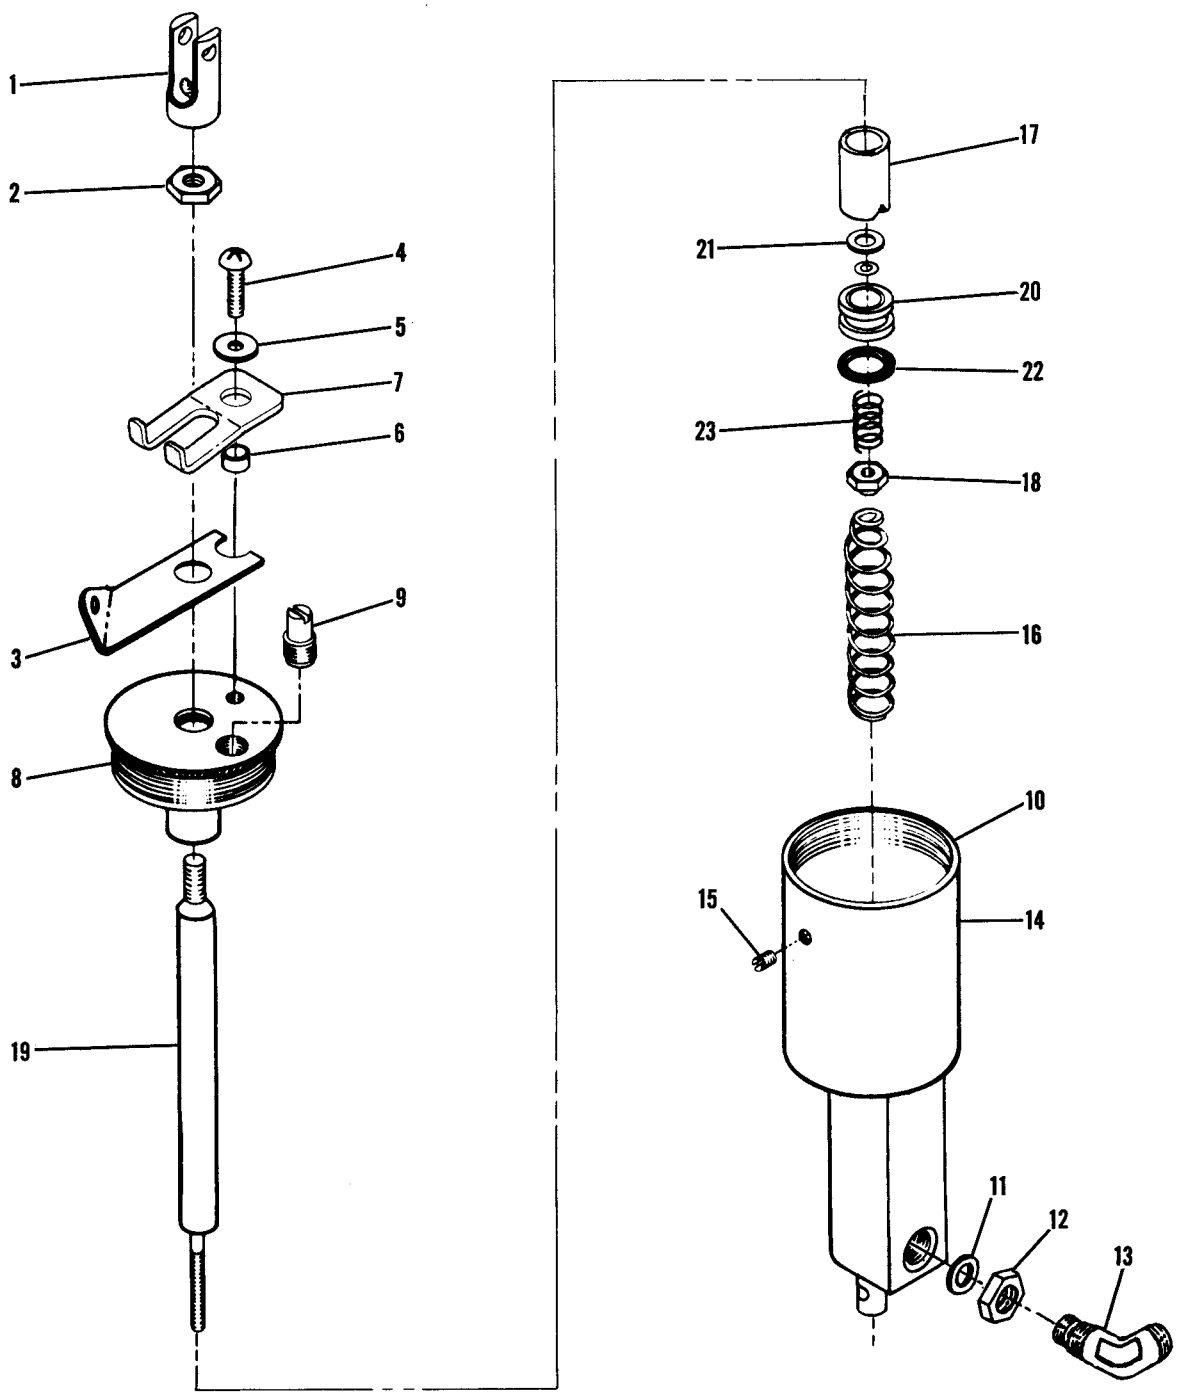


Figure 146. Master Brake Cylinder Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
146 -	0541138-20	CYLINDER ASSEMBLY-MASTER BRAKE	2	A
	0541138-16	CYLINDER ASSEMBLY-MASTER BRAKE	2	B
	0541138-22	CYLINDER ASSEMBLY-MASTER BRAKE	2	D
- 1	0541140	CLEVIS-ROD END	1	
- 2	AN316-4R	NUT-CHECK	1	
- 3	0541165-1	PLATE-LOCK	1	A
		ATTACHING PARTS		
- 4	AN515-10R8	SCREW-MACHINE	1	
- 5	AN960-10	WASHER	1	A
- 6	0541146-1	SPACER	1	A
		---*---		
- 7	0541167-1	SPRING-PARKING BRAKE	1	A
- 8	0541151	COVER-MASTER CYLINDER	1	
- 9	0541139	PLUG-FILLER	1	
-10	0541147-2	BODY-MASTER WHEN EXHAUSTED USE 0541184-200	1	A
	0541184-200	BODY-MASTER CYLINDER	1	C
-11	AN902-4	GASKET USE WITH 0541147-2	1	
	MS28778-4	GASKET USE WITH 0541184-200	1	
-12	AN924-4D	NUT	1	
-13	AN921-4D	ELBOW	1	
-14	0541184-2	BODY-MASTER CYLINDER	1	D
	0541184-1	BODY-MASTER CYLINDER	1	B
-15	AN565D6-3	SCREW	1	
-16	0541148	SPRING-PISTON RETURN	1	
-17	0541149	SLEEVE-PISTON ROD	1	
	0541138-5	PISTON ASSEMBLY-MASTER CYLINDER	1	
-18	22FH632	NUT SPS	1	
-19	0541144	ROD	1	
-20	0541143	PISTON	1	
-21	800-001-6	LOCK-O-SEAL WFRC	1	
-22	MS28775-110	O RING	1	
-23	0541148-1	SPRING	1	

A---172 SERIAL 17249545 THRU 17250572
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0018
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17250573 THRU 17256512
F172 SERIAL F172-0019 THRU F172-0559
C---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17201234
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
D---172 SERIAL 17256513 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234


Flight Controls

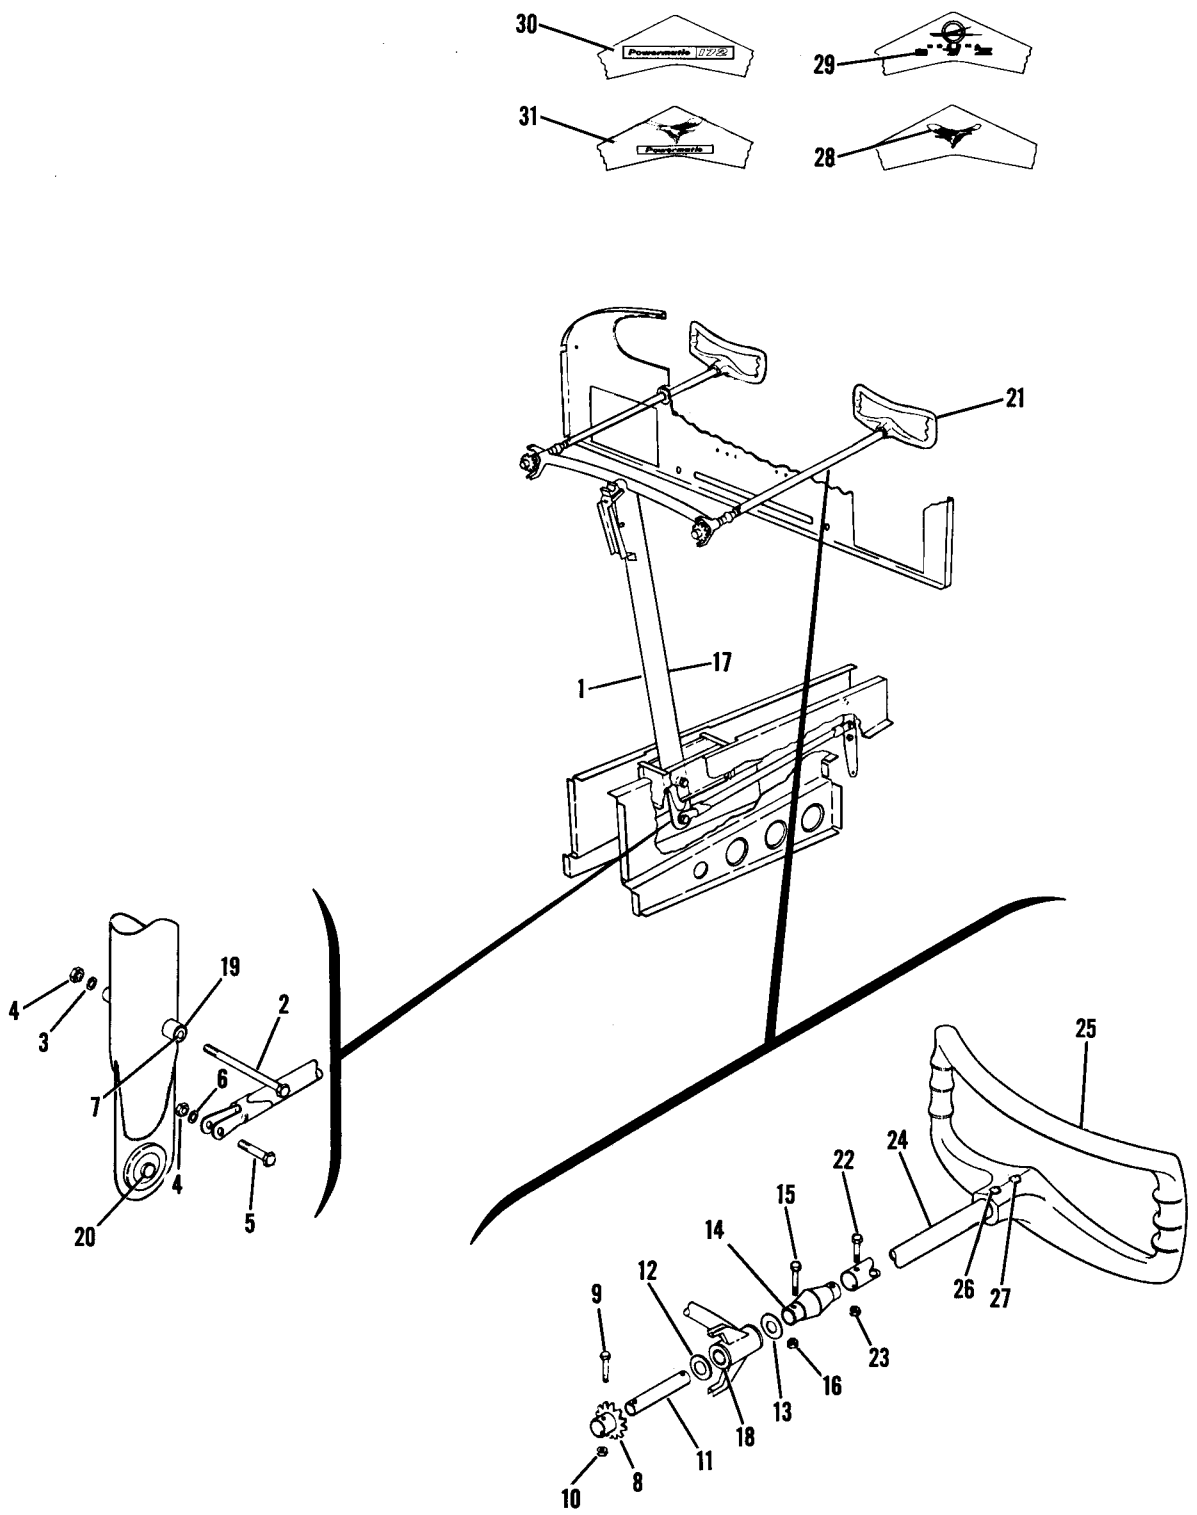


172 SERIAL 17249545 THRU 17250572
P172 SERIAL P17257120 THRU P17257188

Figure 147. Control Tee Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
147 -		CONTROL TEE INSTALLATION	NP	E
- 1	0411221-4	CONTROL TEE ASSEMBLY	1	
		ATTACHING PARTS		
- 2	AN4-31	BOLT	1	
- 3	AN960-416L	WASHER	2	
- 4	MS21042L4	NUT	2	
- 5	AN4-10A	BOLT	1	
- 6	AN960-416	WASHER	1	
- 7	S18-30	BUSHING	1	
		---*---		
- 8	0411047	SPROCKET-AILERON CHAIN	2	
		ATTACHING PARTS		
- 9	AN3-11A	BOLT	1	
-10	MS21044N3	NUT	1	
		---*---		
-11	0411255	SHAFT	2	
-12	AN960-816	WASHER	2	
-13	AN960A816L	WASHER	AR	
-14	0411257	UNIVERSAL JOINT	2	
		ATTACHING PARTS		
-15	AN3-10A	BOLT	1	
-16	MS21044N3	NUT	1	
		---*---		
-17	0411326-4	MACHINING ASSEMBLY-CONTROL TEE	1	
-18	F620	BUSHING AXD	4	
-19	B610	BEARING TOR	2	
	B610-P	BEARING TOR ALTERNATE	2	
	B610-0H	BEARING TOR ALTERNATE	2	
-20	MS20200KP4	BEARING	1	
-21	0513182-8	CONTROL WHEEL ASSEMBLY	2	C
	0513182-2	CONTROL WHEEL ASSEMBLY	2	A
	0513182-9	CONTROL WHEEL ASSEMBLY	2	D
	0513182-10	CONTROL WHEEL ASSEMBLY	2	B
		ATTACHING PARTS		
-22	AN3-10A	BOLT	1	
-23	MS21044N3	NUT	1	
		---*---		
-24	0413213-2	TUBE CONTROL	1	
-25	0513166-1	WHEEL	1	
		ATTACHING PARTS		
-26	0413216	RIVET	1	
-27	0413216-4	RIVET	1	
		---*---		
-28	0500109-3	PLACARD	1	C
-29	0500084-1	PLACARD	1	A
-30	0500124-2	PLACARD	1	B
-31	0500124-1	PLACARD	1	D
		A---172 SERIAL 17249545 THRU 17250572 F172 SERIAL F172-0001 THRU F172-0018 B---P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 C---172 SKYHAWK SERIAL 17249545 THRU 17250572 D---P172 SKYHAWK SERIAL P17257120 THRU P17257188 E---172 SERIAL 17249545 THRU 17250572 F172 SERIAL F172-0001 THRU F172-0018 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		

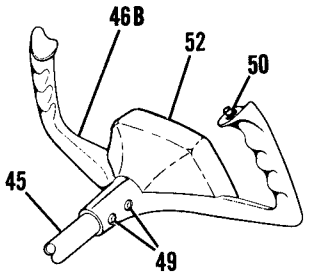


17259904 THRU 17263458
F17200805 THRU F17201234

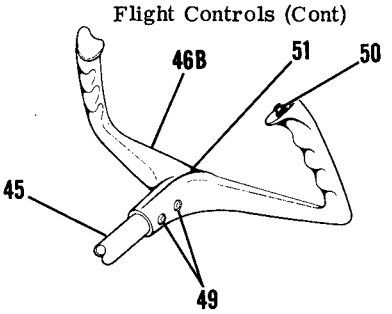

17259224 THRU 17259903
F17200755 THRU F17200804

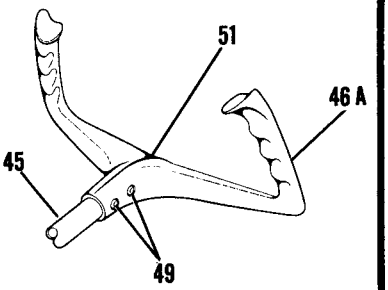

17254893 THRU 17259223
F172-0320 THRU F17200754

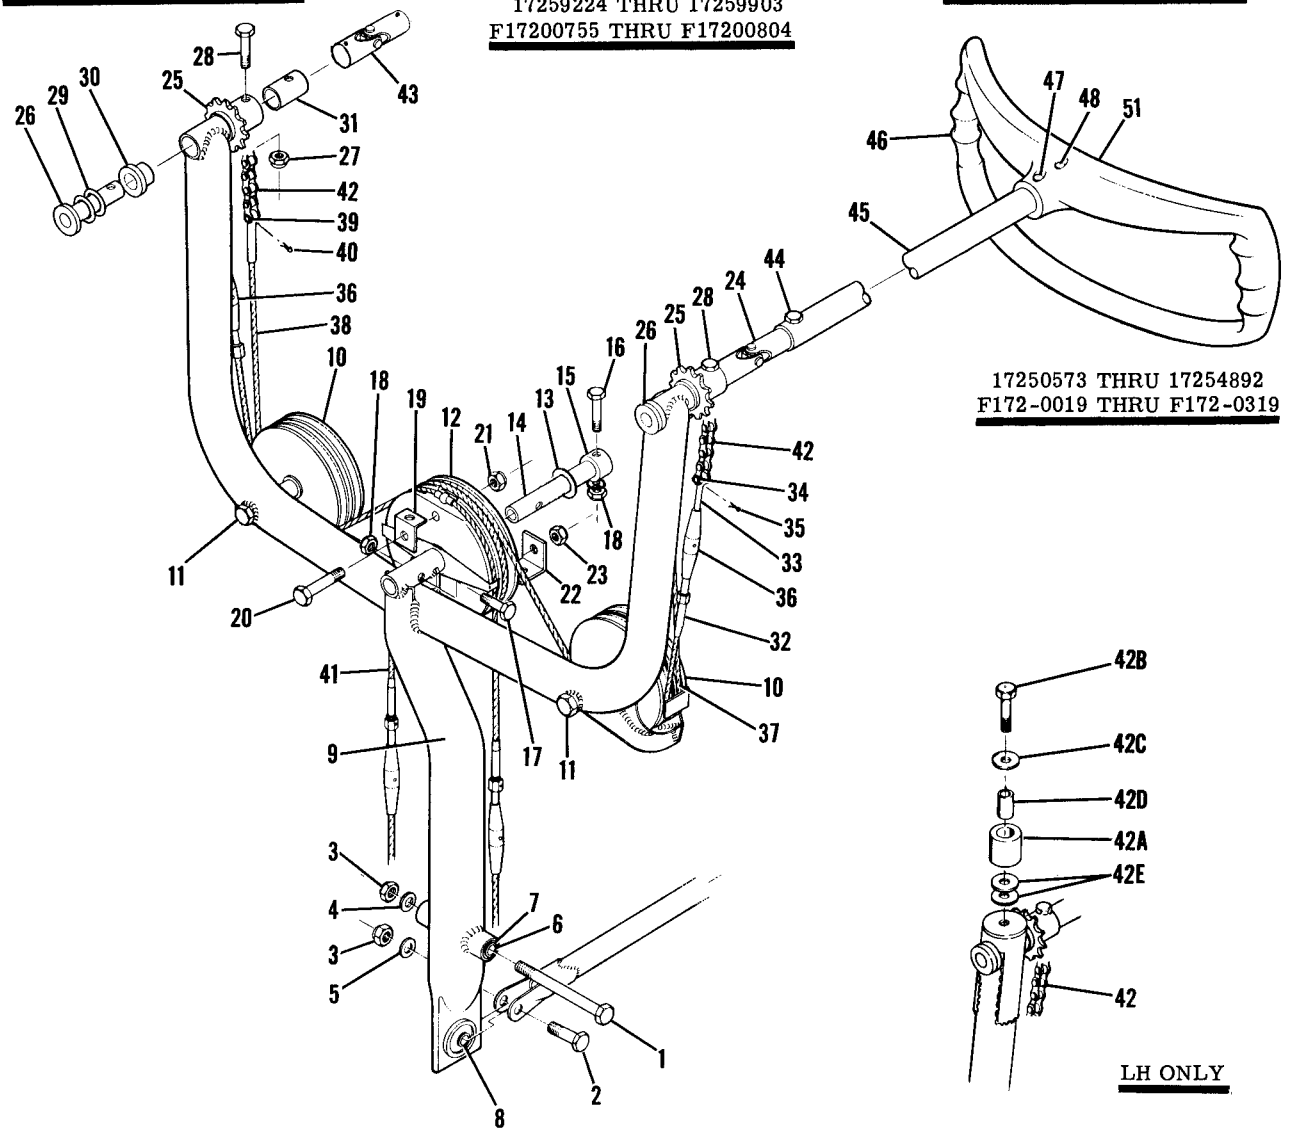

17250573 THRU 17254892
F172-0019 THRU F172-0319

LH ONLY

172 SERIAL 17256513 THRU 17256649
WITH NAV-O-MATIC SYSTEM
172 SERIAL 17256650 THRU 17263458
ALL AIRCRAFT

172 SERIAL 17250573 THRU 17263458
F172 SERIAL F172-0019 THRU F17201234

Figure 148. Control Yoke Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
148 -		CONTROL YOKE INSTALLATION	NP	A
	0560006-1	YOKE ASSEMBLY-CONTROL	1	B
	0560006-5	YOKE ASSEMBLY-CONTROL	1	C
	0560006-6	YOKE ASSEMBLY-CONTROL	1	N
		ATTACHING PARTS		
- 1	AN4-31A	BOLT	1	
- 2	AN4-10A	BOLT	1	
- 3	MS21042L4	NUT	2	
- 4	AN960-416L	WASHER	1	
- 5	AN960-416	WASHER	1	
- 6	0513251-1	BUSHING	1	
- 7	B610	BEARING TOR	1	
- 8	AN200KS4	BEARING	1	
		---*---		
- 9	0511782-1	WELD ASSY-YOKE	1	B
	0511782-16	WELD ASSEMBLY-YOKE	1	C
	0511782-17	WELD ASSEMBLY-YOKE	1	N
-10	S378-4	PULLEY	4	
-11	AN4-30A	BOLT	2	
	MS21042L4	NUT	2	
-12	0511783-1	DRUM ASSEMBLY	1	
		ATTACHING PARTS		
-13	AN960-816L	WASHER	2	
-14	0511784-1	SHAFT	1	
-15	0511787-1	RETAINER	1	
-16	AN3-11A	BOLT	1	
	AN960-10	WASHER	1	
-17	AN3-10A	BOLT	1	
-18	MS21044N3	NUT	2	
		---*---		
-19	0511786-1	CLAMP	1	
		ATTACHING PARTS		
-20	AN3-13A	BOLT	1	
-21	MS21044N3	NUT	1	
		---*---		
-22	0511786-2	CLAMP	1	
		ATTACHING PARTS		
	AN3-12A	BOLT	1	
-23	MS21044N3	NUT	1	
		---*---		
-24	0411257	JOINT-UNIVERSAL LH ONLY	1	
	S1495-10	HOSE 1.12 IN LG BULK ITEM REF S1495-10-1.12	1	
-25	0511785-1	SPROCKET	2	
		ATTACHING PARTS		
-26	0511788-1	SHAFT	1	
-27	MS21044N3	NUT	1	
-28	AN3-11A	BOLT	1	
-29	AN960-816L	WASHER	2	
-30	S1004-43A	BEARING	2	
		---*---		
-31	0511789-1	SPACER USE ONLY WHEN RH CONTROLS ARE NOT INSTALLED	1	
-32	0510105-213	CABLE ASSEMBLY	1	
	0510105-313	CABLE ASSEMBLY STAINLESS STEEL	1	
		ATTACHING PARTS		
-33	NAS288-35	TERMINAL	2	
-34	AN21-10	BOLT	2	
	AN960PD6L	WASHER	2	
	AN320-1	NUT	2	
-35	MS24665-5	PIN-COTTER	2	
-36	AN155B32S	BARREL	2	
		---*---		
-37	0510105-215	CABLE ASSEMBLY-LH	1	
	0510105-315	CABLE ASSEMBLY-LH STAINLESS STEEL	1	
-38	0510105-214	CABLE ASSEMBLY-RH	1	
	0510105-314	CABLE ASSEMBLY-RH STAINLESS STEEL	1	
		ATTACHING PARTS		
-39	AN21-10	BOLT	1	
	AN960PD6L	WASHER	1	
	AN320-1	NUT	1	
-40	MS24665-5	PIN-COTTER	1	
	AN155B32S	BARREL	1	
		---*---		


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
148 -41	0510105-216	CABLE ASSEMBLY	1	
	0510105-316	CABLE ASSEMBLY STAINLESS STEEL	1	
-42	0413372-5	CHAIN	2	
-42A	N6-2	BEARING NYLO LH ONLY	1	N
		ATTACHING PARTS		
-42B	AN4-11A	BOLT LH ONLY	1	N
-42C	AN960D416L	WASHER LH ONLY	1	N
-42D	0513414-1	BUSHING LH ONLY	1	N
-42E	AN960PD416	WASHER LH ONLY	1	N
	MS21042L4	NUT LH ONLY	1	N
		---*---		
-43	0411257	JOINT-UNIVERSAL	2	
	S1495-10	HOSE 1.12 IN LG BULK ITEM REF S1495-10-1.12		
	0513332-200	CONTROL WHEEL ASSEMBLY	2	B
	0513332-201	CONTROL WHEEL ASSEMBLY	2	G
	0513240-5	CONTROL WHEEL ASSEMBLY WHEN EXHAUSTED USE 0513240-8	2	H
	0513240-8	CONTROL WHEEL ASSEMBLY WHEN EXHAUSTED USE 0513240-14	2	K
	0513240-14	CONTROL WHEEL ASSEMBLY	2	L
	0513240-17	CONTROL WHEEL ASSY PILOT & CO-PILOT WITHOUT MIKE SWITCH	1	Q
	0513261-2	CONTROL WHEEL ASSY PILOT & CO-PILOT WITHOUT MIKE SWITCH	1	S
	0513261-13	CONTROL WHEEL ASSY PILOT & CO-PILOT WITHOUT MIKE SWITCH	1	T
	0513340-19	CONTROL WHEEL ASSY PILOT ONLY USED WITH MIKE SWITCH	1	Q
	0513261-3	CONTROL WHEEL ASSY PILOT ONLY USED WITH MIKE SWITCH	1	S
	0513261-14	CONTROL WHEEL ASSY PILOT ONLY USED WITH MIKE SWITCH	1	T
		ATTACHING PARTS		
-44	AN3-10A	BOLT	1	
	MS21044N3	NUT	1	
		---*---		
-45	0413213-10	TUBE-CONTROL	1	J
	0413213-12	TUBE-CONTROL WHEN EXHAUSTED USE 0413213-17	1	M
	0413213-17	TUBE-CONTROL WEU 0413213-20	1	L
	0413213-20	TUBE-CONTROL	1	U
	0413213-23	TUBE-CONTROL	1	T
-46	0513166-3	WHEEL-CONTROL	1	B
	0513166-7	WHEEL-CONTROL	1	G
-46A	0513239-1	WHEEL-CONTROL WHEN EXHAUSTED USE 0513239-5	1	H
	0513239-5	WHEEL-CONTROL WHEN EXHAUSTED USE 0513239-9	1	K
	0513239-9	WHEEL-CONTROL	1	L
	0513239-13	WHEEL-CONTROL PILOT & CO-PILOT WITHOUT MIKE SWITCH	1	Q
	0513260-4	WHEEL-CONTROL PILOT & CO-PILOT WITHOUT MIKE SWITCH	1	R
-46B	0513239-15	WHEEL-CONTROL PILOT ONLY USED WITH MIKE SWITCH	1	Q
	0513260-5	WHEEL-CONTROL PILOT ONLY USED WITH MIKE SWITCH	1	R
		ATTACHING PARTS		
-47	0413216	RIVET USED WITH 0513166-3 & -7	1	
-48	0413216-4	RIVET USED WITH 0513166-3 & -7	1	
-49	0413216-6	RIVET USED WITH 0513239-1 & 0513260-4 & -5	2	
	0413216-8	RIVET USED WITH 0513230-13 & -15	2	
		---*---		
-50	S1985-1	SWITCH-MIKE	1	P
-51	SEE FIG 2	PLACARDS-CONTROL WHEEL	AR	
-52	0514080-1	PAD-CONTROL WHEEL	1	S
	0514088-1	PAD-CONTROL WHEEL	1	V
	0414044-1	PAD-CONTROL WHEEL 172 & F172	1	W
	0514097-1	PAD-CONTROL WHEEL SKYHAWK	1	W

A---172 SERIAL 17250573 THRU 17263458
F172 SERIAL F172-0019 THRU F17201234
B---172 SERIAL 17250573 THRU 17251822
F172 SERIAL F172-0019 THRU F172-0085
C---172 SERIAL 17251823 THRU 17256512
F172 SERIAL F172-0086 THRU F172-0559
D---DELETED
E---DELETED
F---DELETED
G---172 SERIAL 17251823 THRU 17254892
F172 SERIAL F172-0086 THRU F172-0319
H---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F172-0431
F172-0436 THRU F172-0442
F172-0444 THRU F172-0446
J---172 SERIAL 17250573 THRU 17254892
F172 SERIAL F172-0019 THRU F172-0319

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
148 -		K---172 SERIAL 17256513 THRU 17256872 F172 SERIAL F172-0432 THRU F172-0435 F172-0443, F172-0447 THRU F172-0559 L---172 SERIAL 17256873 THRU 17259223 F172 SERIAL F172-0560 THRU F17200754 M---172 SERIAL 17254893 THRU 17256872 F172 SERIAL F172-0320 THRU F172-0559 N---172 SERIAL 17256513 THRU 17256649 WHEN EQUIPPED WITH NAV-O-MATIC SYSTEM 172 SERIAL 17256650 THRU 17263458 F172 SERIAL F172-0560 THRU F17201234 P---172 SERIAL 17259224 THRU 17263458 F172 SERIAL F17200755 THRU F17201234 Q---172 SERIAL 17259224 THRU 17259903 F172 SERIAL F17200755 THRU F17200804 R---172 SERIAL 17259904 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 S---172 SERIAL 17259904 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 T---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200905 THRU F17201234 U---172 SERIAL 17259224 THRU 17260758 F172 SERIAL F17200755 THRU F17200904 V---172 SERIAL 17260759 THRU 17261898 F172 SERIAL F17200905 THRU F17201034 W---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234		

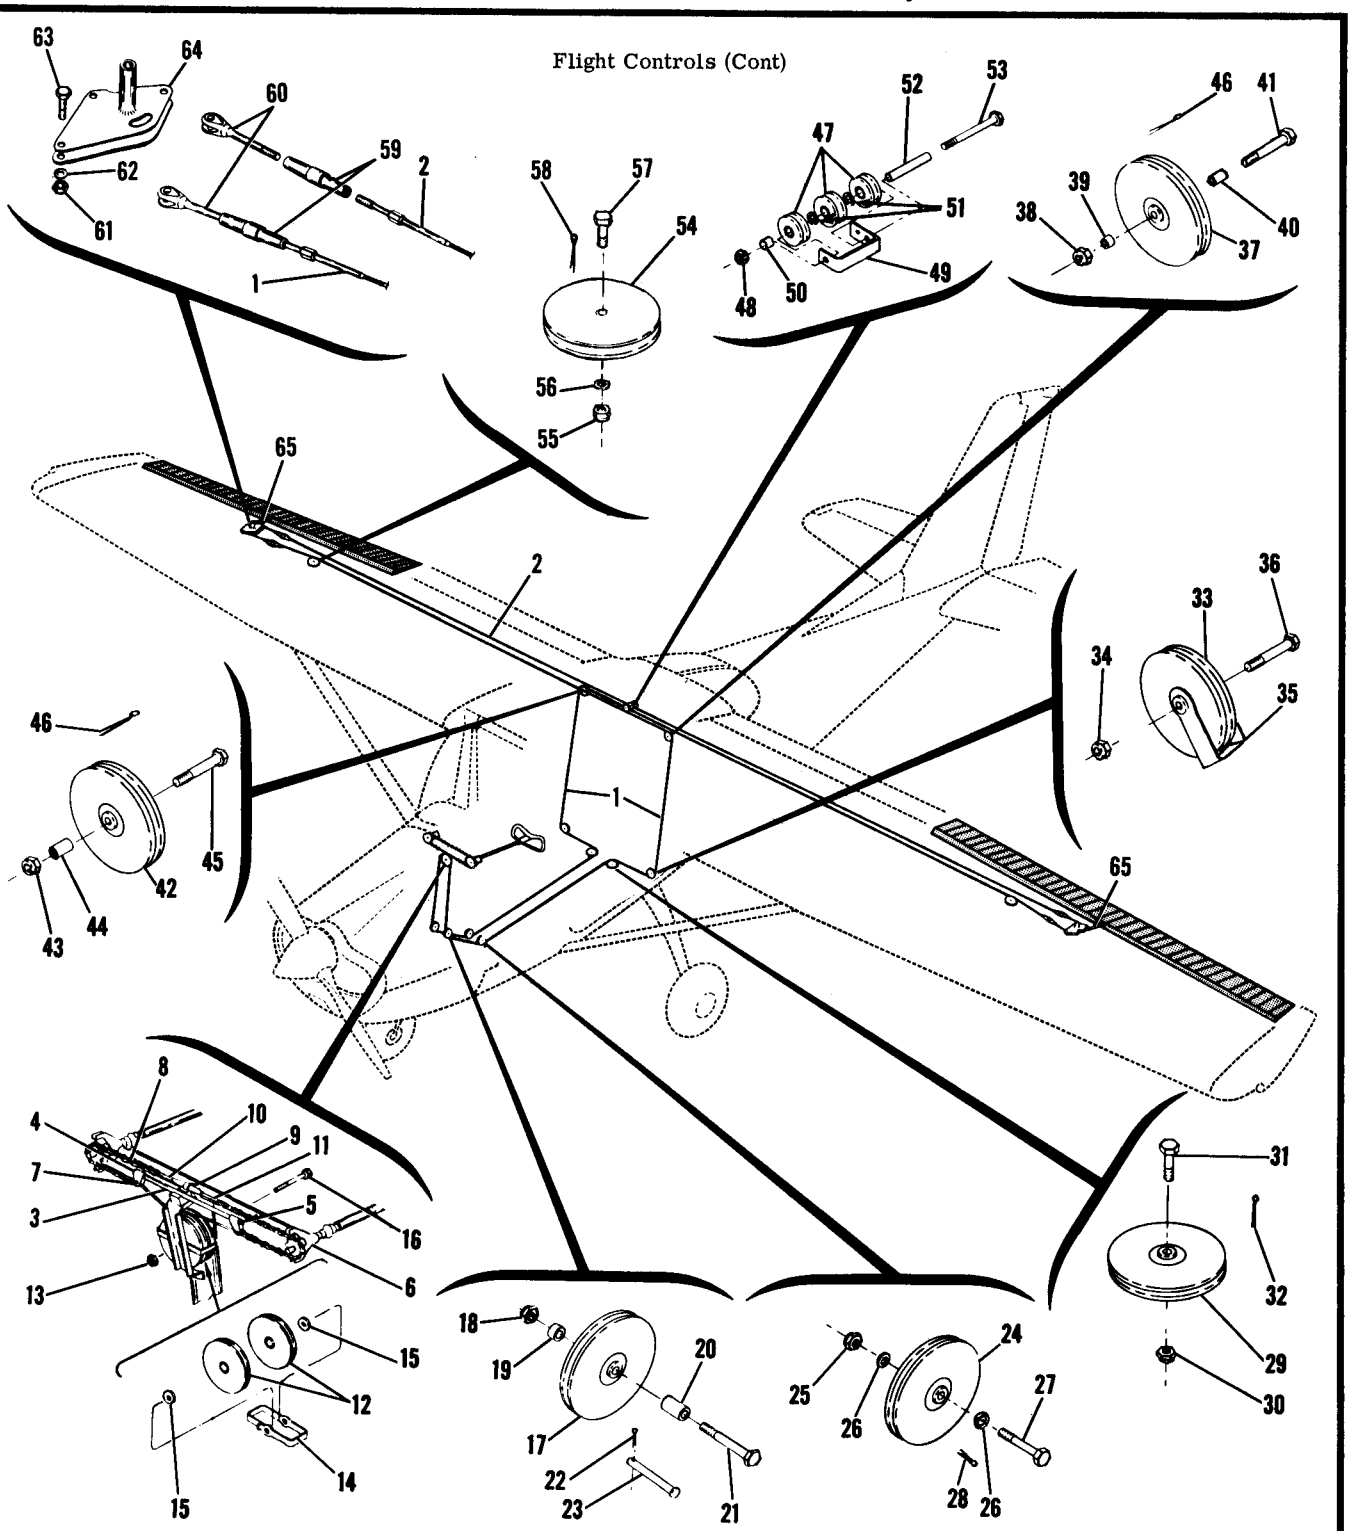

172 SERIAL 17249545 THRU 17250572
P172 SERIAL P17257120 THRU P17257188

Figure 149. Aileron Control System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
149 -		AILERON CONTROL SYSTEM INSTALLATION	NP	A
- 1	0510105-72	CABLE-AILERON CONTROL	2	
	0510105-172	CABLE-AILERON CONTROL STAINLESS STEEL	2	
- 2	0510105-13	CABLE-AILERON CARRY THRU	1	
	0510105-113	CABLE-AILERON CARRY THRU STAINLESS STEEL	1	
- 3	0411880	BAR ASSEMBLY-AILERON CARRY THRU	1	
- 4	0411881	TUBE ASSEMBLY-AILERON CARRY THRU	1	
		ATTACHING PARTS		
- 5	MS21042L4	NUT	2	
		---*---		
- 6	0411051	CHAIN ASSEMBLY	1	
		ATTACHING PARTS		
- 7	MS24665-5	PIN-COTTER	2	
	AN21-12	BOLT-CLEVIS	2	
	AN320-1	NUT	2	
		---*---		
- 8	0411051-4	CHAIN	2	
- 9	AN155B32S	BARREL-TURNBUCKLE	1	
-10	NAS288-35LH	TERMINAL	1	
-11	NAS288-35RH	TERMINAL	1	
-12	S378-4	PULLEY	2	
		ATTACHING PARTS		
-13	MS21042L4	NUT	1	
-14	0411232	GUARD-CABLE	1	
-15	AN960-416	WASHER	2	
-16	AN4-33A	BOLT	1	
		---*---		
-17	S378-4	PULLEY	2	
		ATTACHING PARTS		
-18	MS21042L4	NUT	1	
-19	0510136	SPACER	1	
-20	0510137	SPACER	1	
-21	AN4-21A	BOLT	1	
		---*---		
-22	MS24665-132	PIN-COTTER	2	
-23	MS20392-1C57	PIN	2	
-24	S378-4	PULLEY	2	
		ATTACHING PARTS		
-25	MS21042L4	NUT	1	
-26	AN960-416L	WASHER	2	
-27	AN4-14A	BOLT	1	
		---*---		
-28	MS24665-357	PIN-COTTER	2	
-29	S378-4	PULLEY	2	
		ATTACHING PARTS		
-30	MS21042L4	NUT	1	
-31	AN4-10A	BOLT	1	
		---*---		
-32	MS24665-136	PIN-COTTER	2	
-33	S378-4	PULLEY	2	
		ATTACHING PARTS		
-34	MS21042L4	NUT	1	
-35	0512135	GUARD-CABLE	1	
-36	AN4-21A	BOLT	1	
		---*---		
-37	S378-4	PULLEY	1	
		ATTACHING PARTS		
-38	MS21042L4	NUT	1	
-39	NAS43HT4-16	SPACER	1	
-40	NAS43HT4-28	SPACER	1	
-41	AN4-15A	BOLT	1	
		---*---		


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
149 -42	S378-4	PULLEY	1	
		ATTACHING PARTS		
-43	MS21042L4	NUT	1	
-44	NAS43HT4-42	SPACER	1	
-45	AN4-15A	BOLT	1	
		---*---		
-46	MS24665-140	PIN-COTTER	4	
-47	S394	PULLEY	3	
		ATTACHING PARTS		
-48	MS21044N3	NUT	1	
-49	0512136	GUARD-CABLE	1	
-50	NAS43HT4-16	SPACER	1	
-51	AN960-416	WASHER	2	
-52	0512138	BUSHING	1	
-53	AN3-21A	BOLT	1	
		---*---		
-54	S378-3L	PULLEY	2	
		ATTACHING PARTS		
-55	MS21042L4	NUT	1	
-56	AN960-416	WASHER	1	
-57	AN4-10A	BOLT	1	
		---*---		
-58	MS24665-134	PIN-COTTER	2	
-59	AN155B32L	BARREL-TURNBUCKLE	3	
-60	AN161-32LL	FORK	3	
-61	MS21044N3	NUT	4	
-62	AN960-10L	WASHER	4	
-63	AN3-7A	BOLT	4	
-64	0523223-1	BELLCRANK ASSEMBLY-AILERON RH	1	
	0523223	BELLCRANK ASSEMBLY-AILERON LH	1	
-65	0523218	ROD ASSEMBLY-AILERON PUSH-PULL	2	

A---172 SERIAL 17249545 THRU 17250572
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0018
FP172 SERIAL FP172-0001 THRU FP172-0003

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
150 -	0510105-217	AILERON CONTROL SYSTEM INSTALLATION ----------	NP	A
- 1	0510105-217	CABLE-AILERON CONTROL DIRECT ----------	2	
	0510105-224	CABLE-AILERON CONTROL DIRECT ----------	2	C
	0510105-317	CABLE-AILERON CONTROL DIRECT STAINLESS STEEL ----------	2	B
	0510105-324	CABLE-AILERON CONTROL DIRECT STAINLESS STEEL ----------	2	C
- 2	0510105-13	CABLE-AILERON CONTROL CARRY THRU ----------	1	
	0510105-113	CABLE-AILERON CONTROL CARRY THRU STAINLESS STEEL ---------	1	
- 3	S378-4	PULLEY ----------	2	
		ATTACHING PARTS		
- 4	MS21042L4	NUT ----------	1	
- 5	NAS43HT4-22	SPACER ----------	1	
- 6	NAS43HT4-43	SPACER ----------	1	
- 7	AN4-21A	BOLT ----------	1	
		---*---		
- 8	S378-4	PULLEY ----------	2	
		ATTACHING PARTS		
- 9	MS21042L4	NUT ----------	1	
-10	AN960-416L	WASHER ----------	2	
-11	AN4-14A	BOLT ----------	1	
		---*---		

CONTINUED ON NEXT PAGE

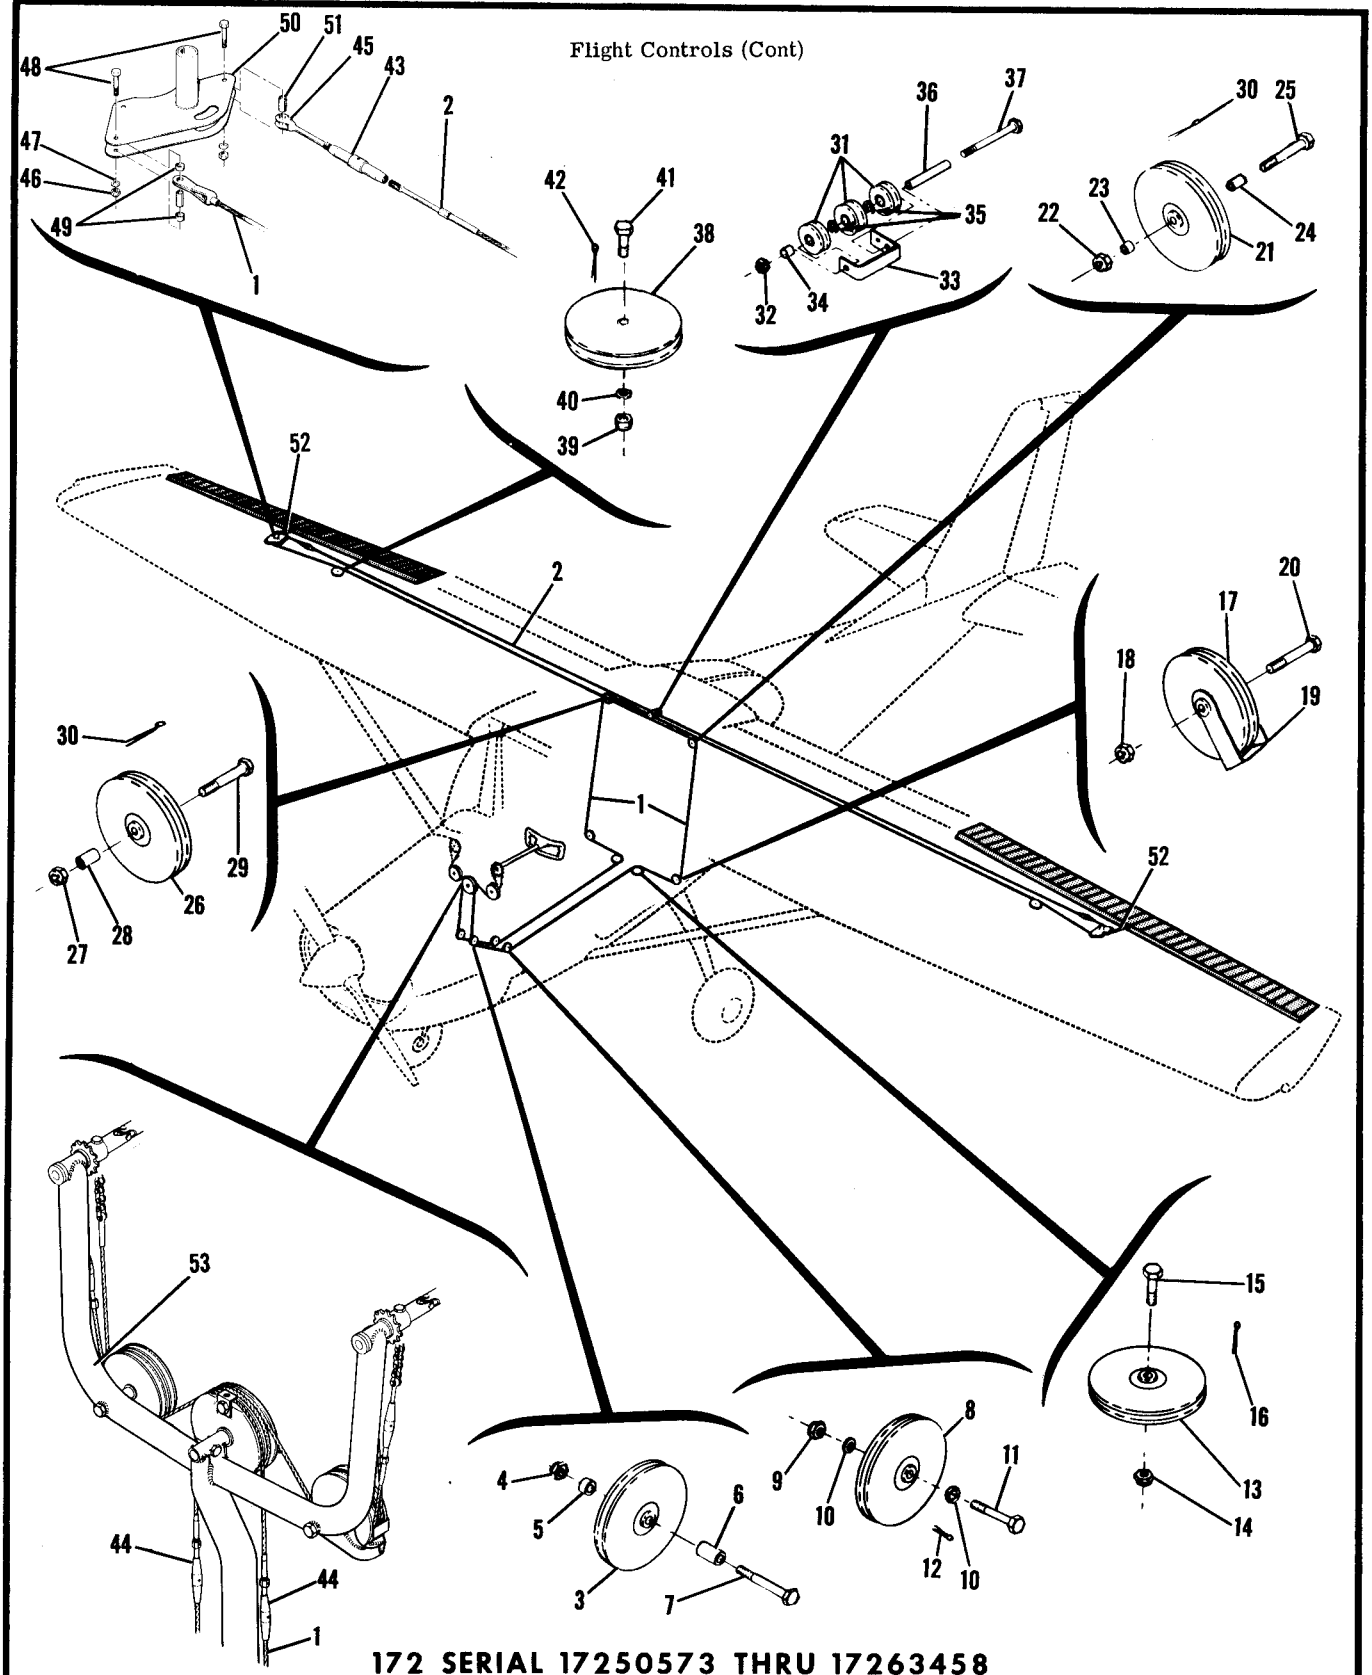


172 SERIAL 17250573 THRU 17263458
F172 SERIAL F172-0019 THRU F17201234

Figure 150. Aileron Control System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
150 -12	MS24665-357	PIN-COTTER	2	
-13	S378-4	PULLEY	2	
		ATTACHING PARTS		
-14	MS21042L4	NUT	1	
-15	AN4-10A	BOLT	1	
		---*---		
-16	MS24665-136	PIN-COTTER	2	
-17	S378-4	PULLEY	2	
		ATTACHING PARTS		
-18	MS21042L4	NUT	1	
-19	0512135	GUARD-CABLE	1	
-20	AN4-21A	BOLT	1	
		---*---		
-21	S378-4	PULLEY	1	
		ATTACHING PARTS		
-22	MS21042L4	NUT	1	
-23	NAS43HT4-16	SPACER	4	
-24	NAS43HT4-28	SPACER	1	
-25	AN4-15A	BOLT	1	
		---*---		
-26	S378-4	PULLEY	1	
		ATTACHING PARTS		
-27	MS21042L4	NUT	1	
-28	NAS43HT4-46	SPACER	1	
-29	AN4-15A	BOLT	1	
		---*---		
-30	MS24665-140	PIN-COTTER	4	
-31	S394	PULLEY	3	
		ATTACHING PARTS		
-32	MS21044N3	NUT	1	
-33	0512136	GUARD-CABLE	1	
-34	NAS43HT4-16	SPACER	1	
-35	AN960-416	WASHER	2	
-36	0512138	BUSHING	1	
-37	AN3-21A	BOLT	1	
		---*---		
-38	S378-3L	PULLEY	2	
		ATTACHING PARTS		
-39	MS21042L4	NUT	1	
-40	AN960-416	WASHER	1	
-41	AN4-10A	BOLT	1	
		---*---		
-42	MS24665-134	PIN-COTTER	2	
-43	AN155B32L	BARREL-TURNBUCKLE	1	
-44	AN155B32S	BARREL-TURN BUCKLE	2	
-45	AN161-32LL	FORK	1	
-46	MS21044N3	NUT	4	
-47	AN960-10L	WASHER	4	
-48	AN3-7A	BOLT	4	
-49	NAS43HT4-9	SPACER	6	C
-50	0523223-1	BELLCRANK ASSEMBLY-AILERON RH	1	
	0523223	BELLCRANK ASSEMBLY-AILERON PUSH-PULL	1	
-51	0422280	SPACER	2	
-52	0523218	ROD ASSEMBLY-AILERON PUSH-PULL	2	
-53	SEE FIG 148	CONTROL YOKE ASSEMBLY	1	
		A---172 SERIAL 17250573 THRU 17263458 F172 SERIAL F172-0019 THRU F17201234 B---172 SERIAL 17250573 THRU 17251822 F172 SERIAL F172-0019 THRU F172-0085 C---172 SERIAL 17251823 THRU 17263458 F172 SERIAL F172-0086 THRU F17201234		

Flight Controls (Cont)

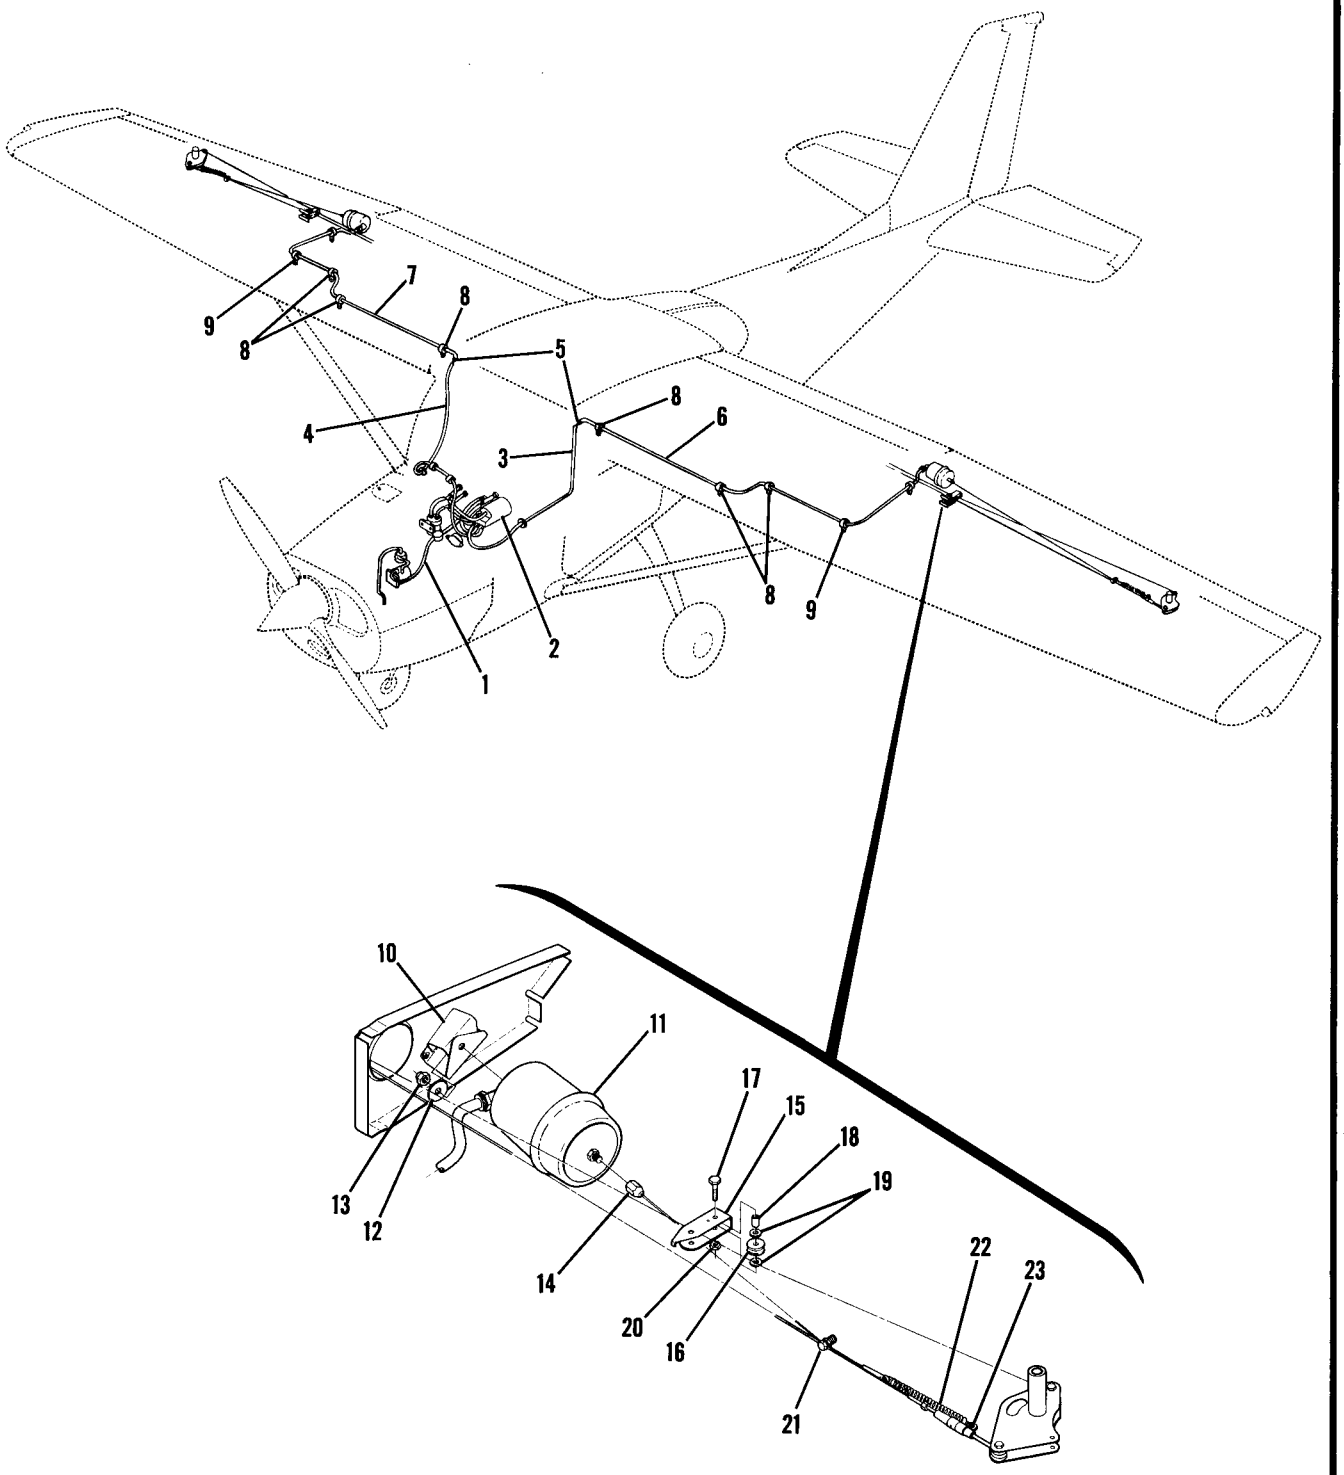


172 SERIAL 17256513 THRU 17261898
F172 SERIAL F172-0432 THRU F172-0435,
F172-0443, F172-0447 THRU F17201034


Figure 151. Wing Leveler Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
151 -		WING LEVELER INSTALLATION	NP	A
- 1	SEE FIG 184	VACUUM SYSTEM INSTALLATION	1	B
	SEE FIG 185	VACUUM SYSTEM INSTALLATION	1	C
- 2	SEE FIG 152	WING LEVELER COMPONENTS INSTALLATION	1	B
	SEE FIG 153	WING LEVELER COMPONENTS INSTALLATION	1	C
- 3	S1071G3	TUBE-GREEN * IN LG BULK ITEM REF S1071G3-*	1	
- 4	S1071G3	TUBE-GREEN * IN LG BULK ITEM REF S1071G3-*	1	
- 5	S1794-1	FITTING	2	
	S1494-6	CLAMP	4	
- 6	S1071R3	TUBE-RED * IN LG BULK ITEM REF S1071R3-*	1	
- 7	S1071R3	TUBE-RED * IN LG BULK ITEM REF S1071R3-*	1	
- 8	S1592-2A	CLAMP	6	
		ATTACHING PARTS		
	S1021Z6-8	SCREW	1	
		---*---		
- 9	49165-22	CLAMP-HARNESS UC	2	
		ATTACHING PARTS		
	S1021Z6-8	SCREW	1	
		---*---		
-10	0422356-1	MOUNTING BRACKET ASSEMBLY-SERVO LH	1	
	0422356-2	MOUNTING BRACKET ASSEMBLY-SERVO RH	1	
		ATTACHING PARTS		
	AN515-8R8	SCREW	3	
		---*---		
	NAS69808	NUTPLATE	3	
-11	1005-1-0	SERVO ASSEMBLY-AILERON BTID	2	
		ATTACHING PARTS		
-12	AN970-5	WASHER	1	
-13	MS21042L5	NUT	1	
		---*---		
-14	0422358-1	CABLE ASSEMBLY-AILERON SERVO	2	
-15	0422357-1	BRACKET-PULLEY	2	
-16	S1710-1	PULLEY	2	
		ATTACHING PARTS		
-17	AN3-10A	BOLT	1	
-18	0411783	BUSHING	1	
-19	AN960-10	WASHER	2	
-20	MS21044N3	NUT	1	
		---*---		
-21	S8S	CONNECTOR PEUN	2	
-22	0413416-4	SPRING	2	
-23	AN742D2	CLAMP	2	
		ATTACHING PARTS		
	AN515-8R6	SCREW	1	
	MS21044N08	NUT	1	
		---*---		
		NOTE. *LENGTH TO BE DETERMINED LATER		
		A---172 SERIAL 17256513 THRU 17261898 F172 SERIAL F172-0432 THRU F172-0435, F172-0443, F172-0437 THRU F17201034		
		B---172 SERIAL 17256513 THRU 17257140 F172 SERIAL F172-0432 THRU F172-0435, F172-0443, F172-0437 THRU F17201034		
		C---172 SERIAL 17257141 THRU 17261898		

Flight Controls (Cont)

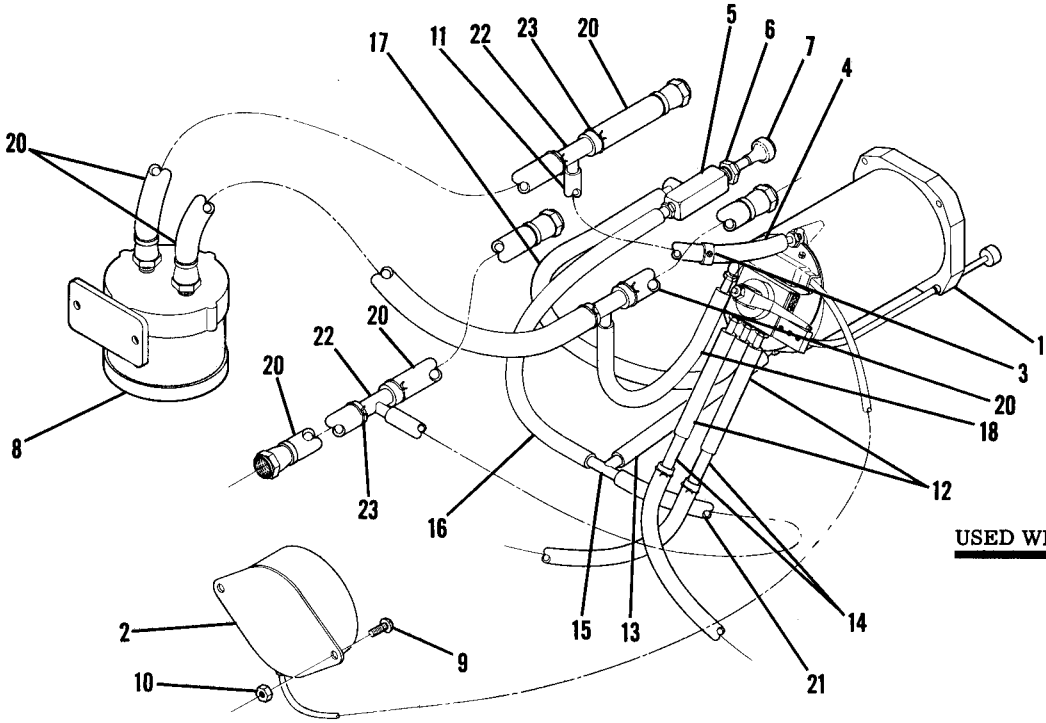

USED WITH GYROS

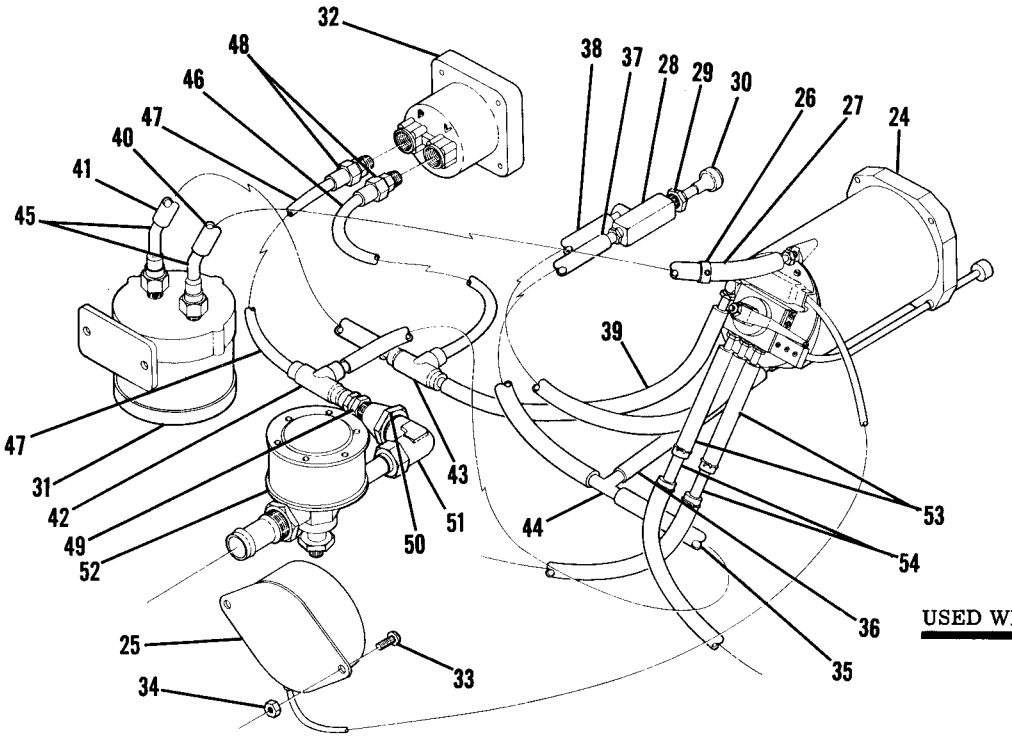

USED WITHOUT GYROS

172 SERIAL 17256513 THRU 17257164
F172 SERIAL F172-0432 THRU F172-0435,
F172-0443, F172-0447 THRU F17200804

Figure 152. Wing Leveler Components Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
152 -		WING LEVELER COMPONENTS INSTALLATION USED WITH GYROS	NP	B
- 1	2904-1	INDICATOR-TURN COORDINATOR BTID WEU 20351-4	1	E
	20351-4	INDICATOR-TURN COORDINATOR BTID	1	F
		ATTACHING PARTS		
	AN515B6R12	SCREW	3	
	AN936A6B	WASHER	3	
	AN340B6	NUT	3	
		---*---		
- 2		INVERTER	NP	
- 3	S1792	VALVE-RESTRICTOR	1	
- 4	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
- 5	S1791-1	VALVE-ON, OFF	1	
		ATTACHING PARTS		
- 6	0713026-6	NUT	1	
	AN960-616	WASHER	1	
		---*---		
- 7	S1760-1	KNOB	1	C
	S1981-1	KNOB ASSEMBLY	1	D
- 8	SEE FIG 184	FILTER ASSEMBLY	1	
- 9	AN515-8R8	SCREW	2	
-10	MS21044N08	NUT	2	
-11	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-12	S1800-1	HOSE 3.00 IN LG BULK ITEM REF S1800-1-3.00	2	
-13	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-14	S1794-1	FITTING	2	
-15	S1793-1	TEE	1	
-16	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-17	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-18	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-19		DELETED NEVER USED		
-20	SEE FIG 184	HOSE ASSEMBLY-VACUUM SYSTEM	3	
-21	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-22	S1793-2	TEE	3	
-23	S1494-9	CLAMP	6	
		WING LEVELER COMPONENTS INSTALLATION USED WITHOUT GYROS	NP	A
-24	2904-1	INDICATOR-TURN COORDINATOR BTID WEU 20351-4	1	E
	20351-4	INDICATOR-TURN COORDINATOR BTID	1	F
		ATTACHING PARTS		
	AN515B6R12	SCREW	3	
	AN936A6B	WASHER	3	
	AN340B6	NUT	3	
		---*---		
-25		INVERTER	NP	
-26	S1792	VALVE-RESTRICTOR	1	
-27	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-28	S1791-1	VALVE-ON, OFF	1	
		ATTACHING PARTS		
-29	0713026-6	NUT	1	
	AN960-616	WASHER	1	
		---*---		
-30	S1760-1	KNOB	1	C
	S1981-1	KNOB ASSEMBLY	1	D
-31	SEE FIG 184	FILTER ASSEMBLY	1	
-32	SEE FIG 184	GAGE SUCTION	1	
-33	AN515-8R8	SCREW	2	
-34	MS21044N08	NUT	2	
-35	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-36	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-37	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-38	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-39	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-40	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-41	S1800-1	HOSE * IN LG BULK ITEM REF S1800-1-*	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
152 -42	S1801-10	TEE	1	
-43	S1801-9	TEE	1	
-44	S1793-1	TEE	1	
-45	1713039-3	ELBOW ASSEMBLY	2	
-46	S1701-1	TUBE * IN LG BULK ITEM REF S1701-1-*	1	
-47	S1701-1	TUBE * IN LG BULK ITEM REF S1701-1-*	1	
-48	S1802-1	CONNECTOR	2	
	S1825-1	INSERT	2	
-49	S1802-2	CONNECTOR	1	
-50	AN912-2D	BUSHING	1	
-51	MS20822-8D	ELBOW	1	
-52	SEE FIG 184	VALVE-RELIEF	1	
-53	S1800-1	HOSE 3.00 IN LG BULK ITEM REF S1800-1-3.00	2	
-54	S1794-1	FITTING	2	


NOTE. *LENGTH TO BE ADDED LATER.

A---172 SERIAL 17256513 THRU 17257164
F172 SERIAL F172-0432 THRU F172-0435,
F172-0443, F172-0447 THRU F17200804
B---172 SERIAL 17256513 THRU 17257164
C---172 SERIAL 17256513 THRU 17257164
F172 SERIAL F172-0432 THRU F172-0435
F172-0443, F172-0447 THRU F172-0654
D---F172 SERIAL F17200655 THRU F17200804
E---172 SERIAL 17256513 THRU 17257164
F172 SERIAL F172-0432 THRU F172-0435
F172-0443, F172-0447 THRU F17200755
F---F172 SERIAL F17200755 THRU F17200804


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
153 -			WING LEVELER COMPONENTS INSTALLATION USED WITH GYROS.	NP	A
- 1	2904-1	**	INDICATOR-TURN COORDINATOR BTID WEU 20351-4	1	D
	20351-4	**	INDICATOR-TURN COORDINATOR BTID WEU 604-200-200	1	G
	604-200-200	**	INDICATOR-TURN COORDINATOR BTID	1	F
			ATTACHING PARTS		
	AN51586R12		SCREW	3	
	AN936A6B		WASHER	3	
	AN340B6		NUT	3	
			---*---		
- 2		**	INVERTER	NP	
- 3		**	VALVE-RESTRICTOR	1	
- 4	S1800-1		HOSE * IN LG BULK ITEM REF S1800-1-*	1	
- 5	S1791-1		VALVE-ON, OFF	1	
			ATTACHING PARTS		
- 6	0713026-6		NUT	1	
	AN960-616		WASHER	1	
			---*---		
- 7	S1760-1		KNOB	1	
- 8	SEE FIG 185		FILTER ASSEMBLY	1	
- 9	AN515-8R8		SCREW	2	
-10	MS21044N08		NUT	2	

CONTINUED ON NEXT PAGE

Flight Controls (Cont)

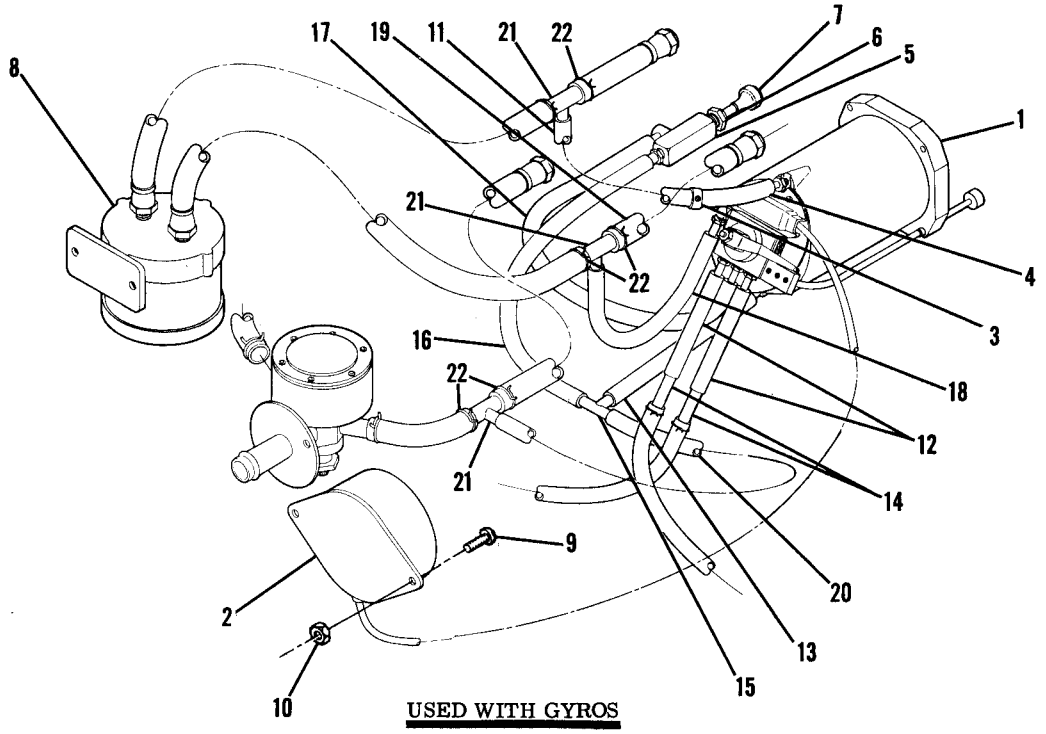

USED WITH GYROS

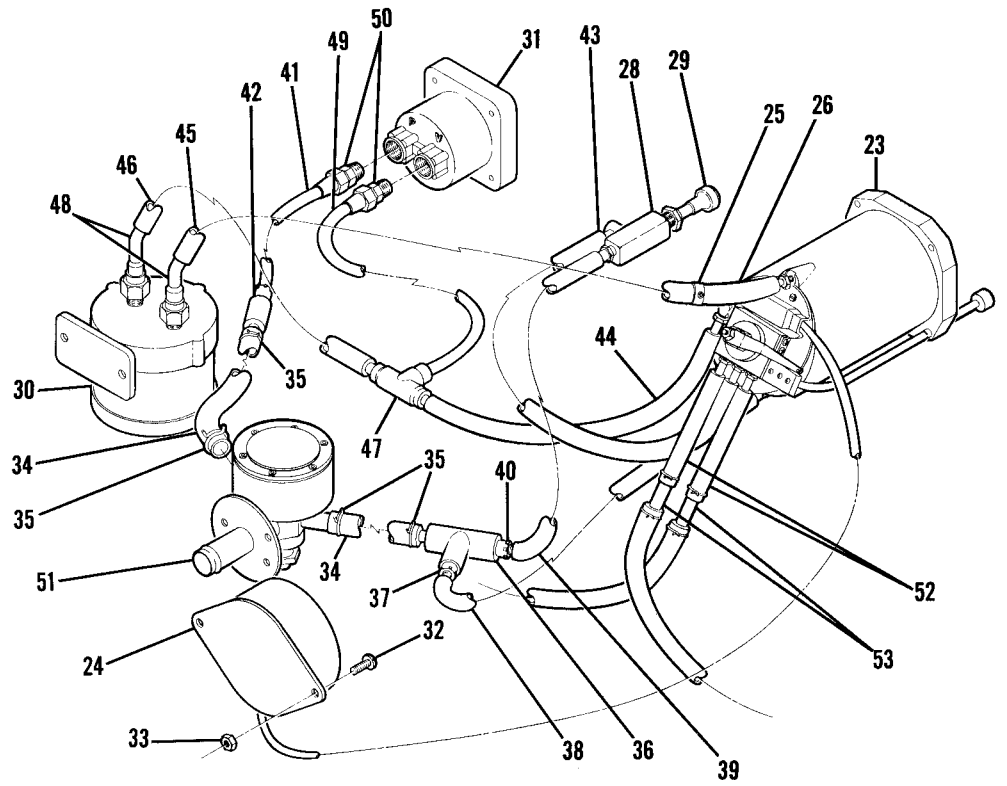

USED WITHOUT GYROS

F172 SERIAL F17200805 THRU F17201034
172 SERIAL 17257165 THRU 17261898

Figure 153. Wing Leveler Components Installation


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
153 -11	S1800-1		HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-12	S1800-1		HOSE 3.00 IN LG BULK ITEM REF S1800-1-3.00	2	
-13	S1800-1		HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-14	S1794-1		FITTING	2	
-15	S1793-1		TEE	1	
-16	S1800-1		HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-17	S1800-1		HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-18	S1800-1		HOSE * IN LG BULK ITEM	1	
-19	SEE FIG 185		HOSE ASSEMBLY-VACUUM SYSTEM	3	
-20	S1800-1		HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-21	S1793-2		TEE	3	
-22	S1494-9		CLAMP	6	
			WING LEVELER COMPONENTS INSTALLATION USED WITHOUT GYROS	NP	A
-23	2904-1	**	INDICATOR-TURN COORDINATOR BTID WEU 20351-4	1	D
	20351-4	**	INDICATOR-TURN COORDINATOR BTID WEU C661003-0601	1	G
	C661003-0601		INDICATOR-TURN COORDINATOR	1	F
			ATTACHING PARTS		
	AN515BGR12		SCREW	3	
	AN936A6B		WASHER	3	
	AN34086		NUT	3	
			---*---		
-24		**	INVERTER	1	
-25		**	VALVE-RESTRICTOR	1	
-26	S1800-1		HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-27	S1791-1		VALVE-ON, OFF	1	
			ATTACHING PARTS		
-28	0713026-6		NUT	1	
	AN960-616		WASHER	1	
			---*---		
-29	S1760-1		KNOB	1	B
	S1981-1		KNOB ASSEMBLY	1	C
-30	SEE FIG 185		FILTER ASSEMBLY	1	
-31	SEE FIG 185		GAGE-SUCTION	1	
-32	AN515-8R8		SCREW	2	
-33	MS21044N08		NUT	2	
-34	S1495-6		HOSE 4.00 IN LG BULK ITEM REF S1495-6-4.00	2	
-35	S1494-9		CLAMP	4	
-36	S1826-2		TEE	1	
-37	S1828-4		ADAPTER	1	
-38	S1800-1		HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-39	S1800-1		HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-40	S1805-1		REDUCER	1	
	S1828-3		ADAPTER	1	
-41	S1071-1		TUBE * IN LG BULK ITEM REF S1701-1-*	1	
-42	S1803-2		COUPLING	1	
	S1828-4		ADAPTER	1	
-43	S1800-1		HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-44	S1800-1		HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-45	S1800-1		HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-46	S1800-1		HOSE * IN LG BULK ITEM REF S1800-1-*	1	
-47	S1801-9		TEE	1	
-48	1713039-1		ELBOW ASSEMBLY	2	
-49	S1071-1		TUBE * IN LG BULK ITEM REF S1701-1-*	1	
-50	S1802-1		CONNECTOR	2	
	S1825-1		INSERT	2	
-51	SEE FIG 185		VALVE-RELIEF	1	
-52	S1800-1		HOSE 3.00 IN LG BULK ITEM REF S1800-1-3.00	2	
-53	S1794-1		FITTING	2	

NOTE. *LENGTH TO BE ADDED LATER.

NOTE. **MATCHED SET. ORDER TURN COORDINATOR ONLY.

A---172 SERIAL 17257165 THRU 17261898
F172 SERIAL F17200805 THRU F17201034
B---172 SERIAL 17257165 THRU 17258486
C---172 SERIAL 17258487 THRU 17261898
F172 SERIAL F17200805 THRU F17201034
D---172 SERIAL 17257165 THRU 17259927
E---DELETED
F---172 SERIAL 17259904 THRU 17261898
F172 SERIAL F17200805 THRU F17201034
G---172 SERIAL 17259928 THRU 17259903

Flight Controls (Cont)

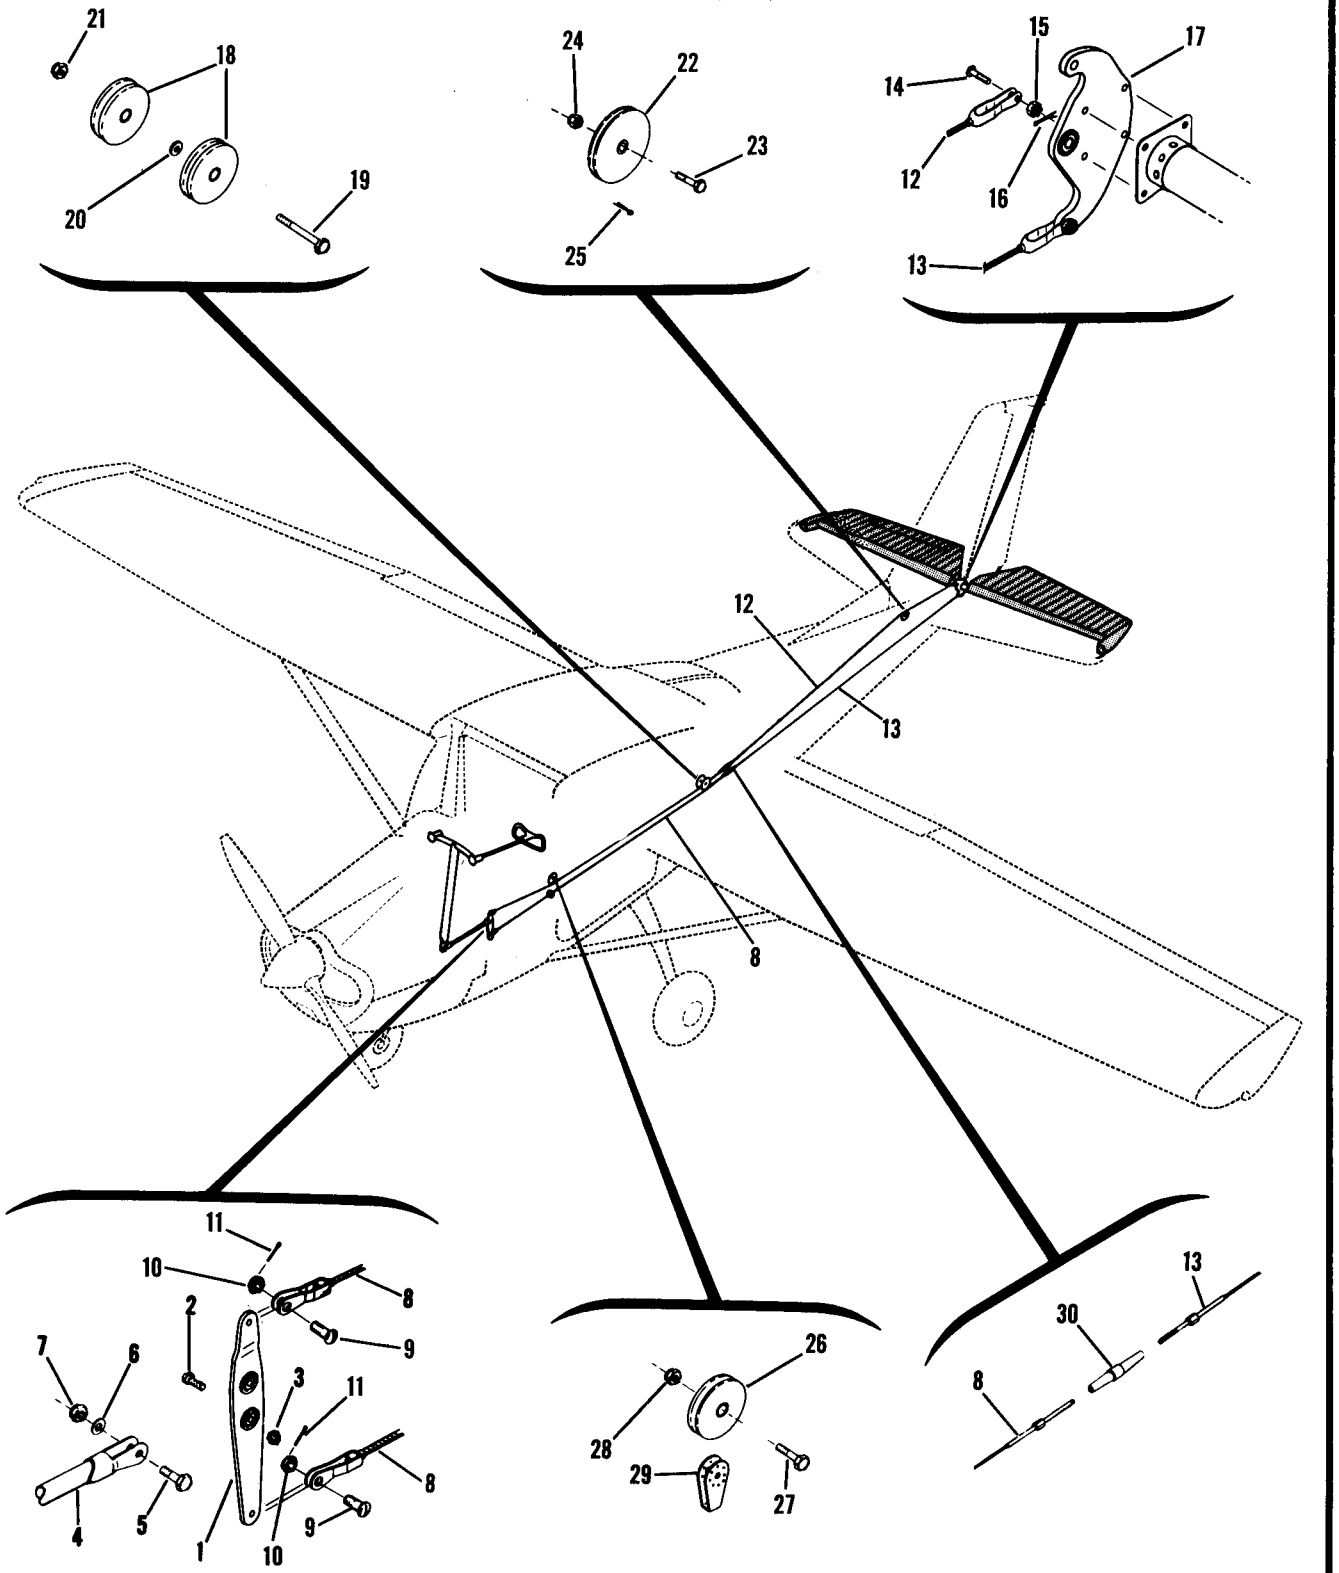


172 SERIAL 17249545 THRU 17251822
P172 SERIAL P17257120 THRU P17257188

Figure 154. Elevator Control System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
154 -		ELEVATOR CONTROL SYSTEM INSTALLATION	NP	C
- 1	0513200-1	BELLCRANK-ELEVATOR FORWARD	1	
		ATTACHING PARTS		
- 2	AN4-10A	BOLT	1	
- 3	MS21042L4	NUT	1	
		---*---		
- 4	0510161-9	TUBE-BELLCRANK TO CONTROL TEE	1	A
	0510161-10	TUBE-BELLCRANK TO CONTROL TEE	1	B
		ATTACHING PARTS		
- 5	AN4-11A	BOLT	2	
- 6	AN960-416	WASHER	2	
- 7	MS21042L4	NUT	2	
		---*---		
- 8	0510105-208	CABLE-ELEVATOR FORWARD LOWER	1	
	0510105-308	CABLE-STAINLESS STEEL ELEVATOR FWD LOWER	1	
		ATTACHING PARTS		
- 9	AN23-12	BOLT	1	
-10	AN310-3	NUT	1	
-11	MS24665-134	PIN-COTTER	1	
		---*---		
-12	0510105-209	CABLE-ELEVATOR AFT UPPER	1	
	0510105-309	CABLE-STAINLESS STEEL ELEVATOR AFT UPPER	1	
-13	0510105-210	CABLE-ELEVATOR AFT LOWER	1	
	0510105-310	CABLE-STAINLESS STEEL ELEVATOR AFT LOWER	1	
		ATTACHING PARTS		
-14	AN23-12	BOLT	1	
-15	AN310-3	NUT	1	
-16	MS24665-134	PIN-COTTER	1	
		---*---		
-17	0534122-1	BELLCRANK-ELEVATOR REAR	1	
-18	S378-3L	PULLEY	2	
		ATTACHING PARTS		
-19	AN4-14A	BOLT	1	
-20	AN960-416	WASHER	1	
-21	MS21042L4	NUT	1	
		---*---		
-22	S378-3L	PULLEY	1	
		ATTACHING PARTS		
-23	AN4-10A	BOLT	1	
-24	MS21042L4	NUT	1	
		---*---		
-25	MS24665-136	PIN-COTTER	1	
-26	S378-3L	PULLEY	1	
		ATTACHING PARTS		
-27	AN4-10A	BOLT	1	
-28	MS21042L4	NUT	1	
		---*---		
-29	0411421-2	GUARD	1	
-30	AN155832S	BARREL-TURNBUCKLE	2	

A---172 SERIAL 17249545 THRU 17250572
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0018
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17250573 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
C---172 SERIAL 17249545 THRU 17251822
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0085
FP172 SERIAL FP172-0001 THRU FP172-0003

Flight Controls (Cont)

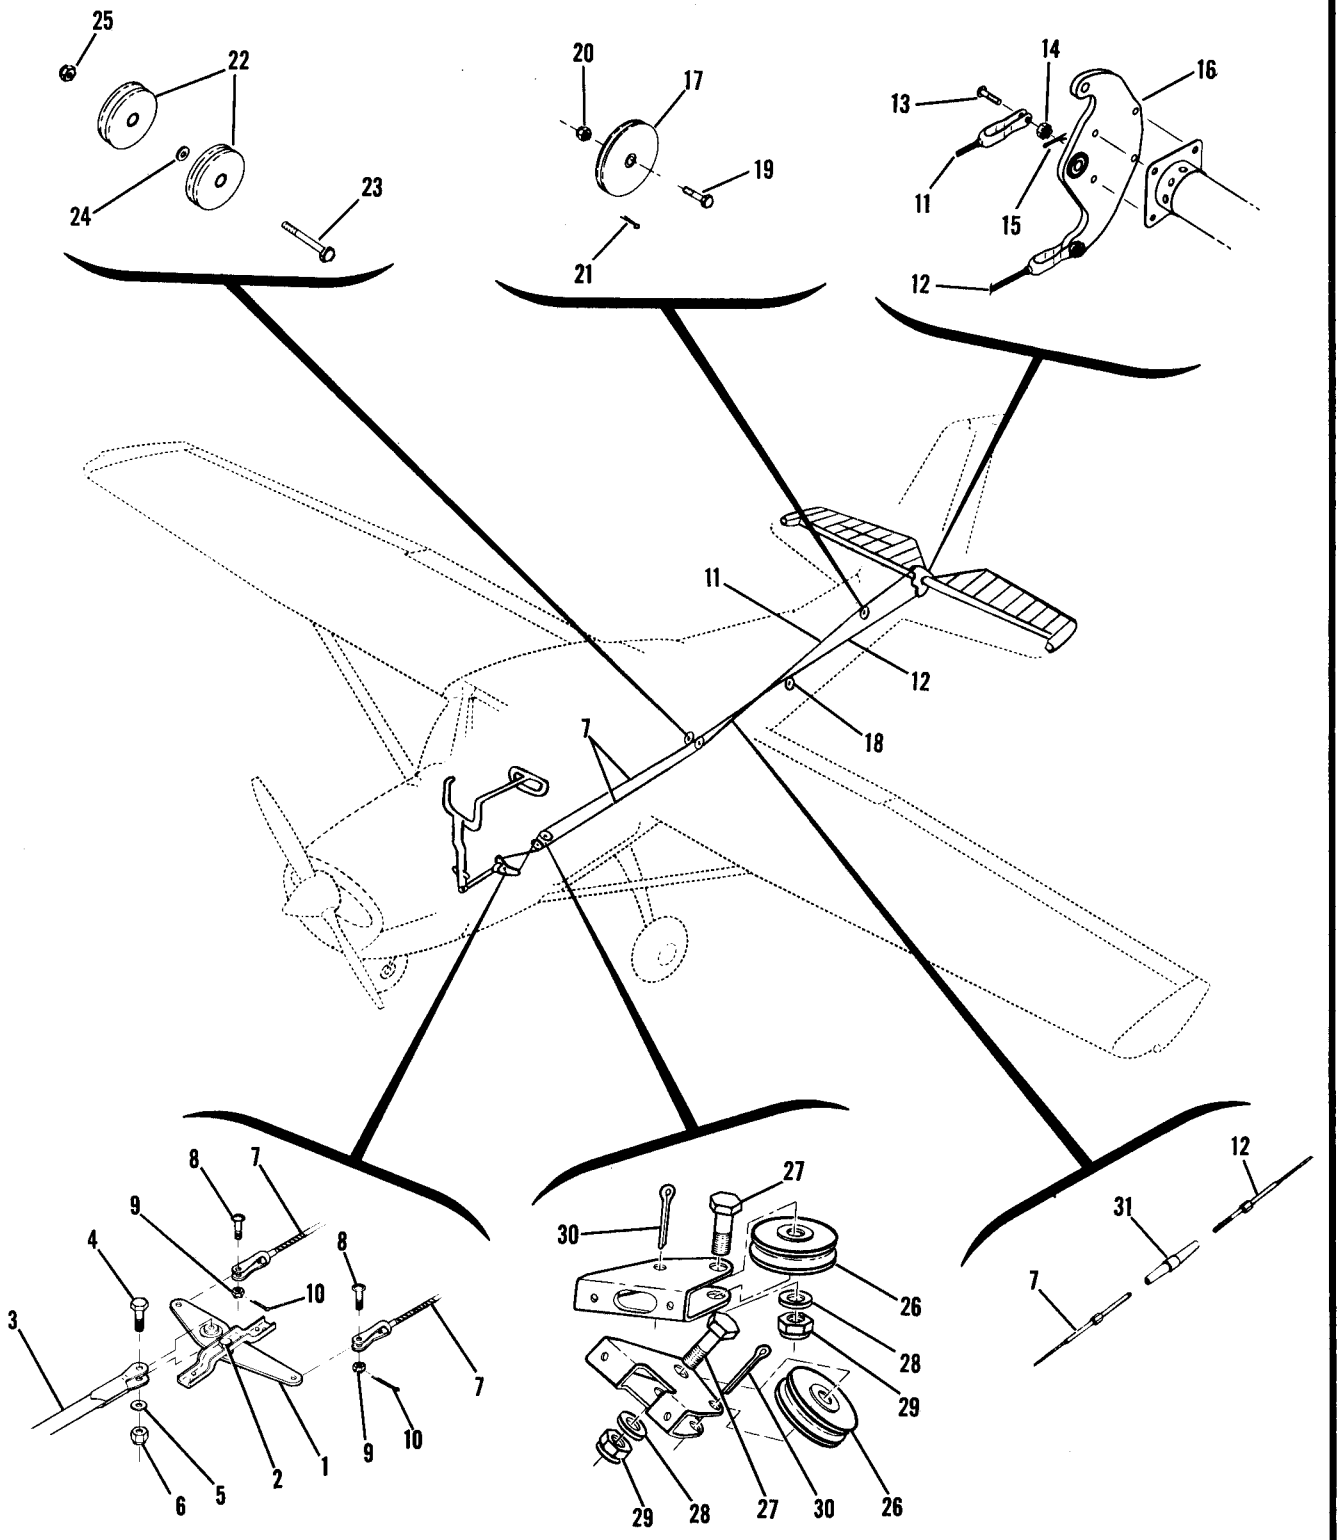


172 SERIAL 17251823 THRU 17263458
F172 SERIAL F172-0086 THRU F17201234

Figure 155. Elevator Control System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
155 -		ELEVATOR CONTROL SYSTEM INSTALLATION	NP	A
- 1	0513370-1	BELLCRANK-ELEVATOR FORWARD	1	
		ATTACHING PARTS		
- 2	AN4-10A	BOLT	1	
	MS21042L4	NUT	1	
		---*---		
- 3	0510161-12	TUBE-BELLCRANK TO CONTROL TEE	1	
		ATTACHING PARTS		
- 4	AN4-11A	BOLT	2	
- 5	AN960-416	WASHER	2	
- 6	MS21042L4	NUT	2	
		---*---		
- 7	0510105-208	CABLE-ELEVATOR FORWARD	2	
	0510105-308	CABLE-STAINLESS STEEL ELEVATOR FORWARD	2	
		ATTACHING PARTS		
- 8	AN23-10	BOLT	2	
- 9	AN310-3	NUT	2	
-10	MS24665-134	PIN-COTTER	2	
		---*---		
-11	0510105-209	CABLE-ELEVATOR AFT UPPER	1	
	0510105-309	CABLE-STAINLESS STEEL ELEVATOR AFT UPPER	1	
-12	0510105-210	CABLE-ELEVATOR AFT LOWER	1	
	0510105-310	CABLE-STAINLESS STEEL ELEVATOR AFT LOWER	1	
		ATTACHING PARTS		
-13	AN23-12	BOLT	2	
-14	AN310-3	NUT	2	
-15	MS24665-134	PIN-COTTER	2	
		---*---		
-16	0534122-1	BELLCRANK-ELEVATOR REAR	1	
-17	S378-3	PULLEY AFT UPPER	1	
-18	S378-3L	PULLEY AFT LOWER	1	
		ATTACHING PARTS		
-19	AN4-10A	BOLT	1	
-20	MS21042L4	NUT	1	
-21	MS24665-136	PIN-COTTER	1	
		---*---		
-22	S378-3L	PULLEY	2	
		ATTACHING PARTS		
-23	AN4-14A	BOLT	1	
-24	AN960-416	WASHER	1	
-25	MS21042L4	NUT	1	
		---*---		
-26	MS20220-1	PULLEY	2	
		ATTACHING PARTS		
-27	AN5-11A	BOLT	1	
-28	AN960-516	WASHER	1	
-29	MS21042L5	NUT	1	
-30	MS24665-285	PIN-COTTER	1	
		---*---		
-31	AN155B32S	BARREL	2	
		A---172 SERIAL 17251823 THRU 17263458 F172 SERIAL F172-0086 THRU F17201234		

Flight Controls (Cont)

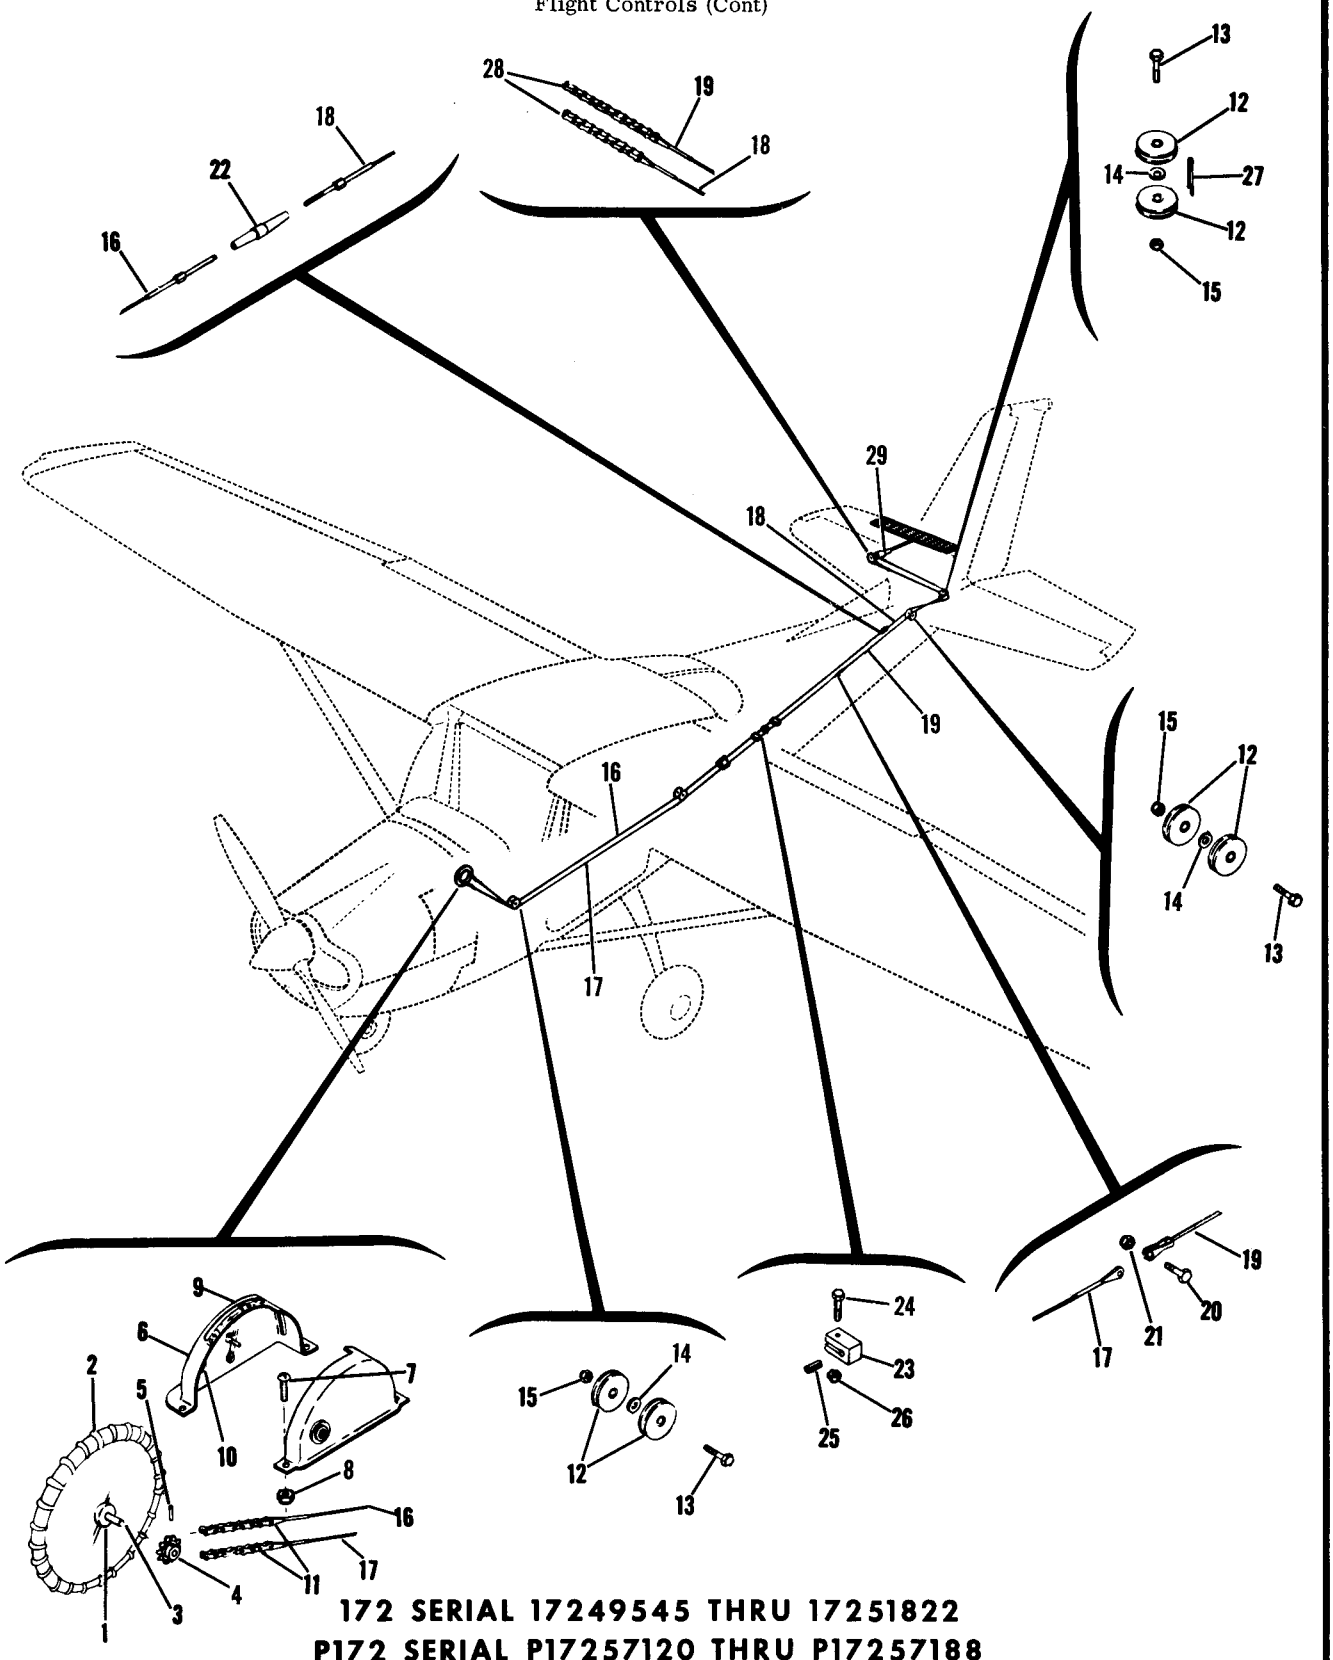


172 SERIAL 17249545 THRU 17251822
P172 SERIAL P17257120 THRU P17257188

Figure 156. Elevator Trim Control System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
156 -		ELEVATOR TRIM CONTROL SYSTEM INSTALLATION	NP	A
- 1	0510127	WHEEL ASSEMBLY-TAB CONTROL	1	
- 2	0510127-1	WHEEL-TAB CONTROL	1	
- 3	0510127-2	SHAFT-TAB CONTROL	1	
- 4	0432134-1	SPROCKET-TAB CONTROL	1	
		ATTACHING PARTS		
- 5	NAS561P3-4	ROLL PIN EN	2	
		---*---		
- 6	0411419	COVER-TAB CONTROL WHEEL	1	
		ATTACHING PARTS		
- 7	AN520-10R7	SCREW	4	
- 8	MS21044N3	NUT	4	
		---*---		
- 9	0411422	DECAL-TAB POSITION INDICATOR	1	
-10	0432138-16	BEARING TOR	1	
	C4189	CONNECTING LINK KIT DI FOR CHAIN REPAIR	AR	
-11	0432138-7	CHAIN-TAB CONTROL	1	
	C4189	CONNECTING LINK KIT DI FOR CHAIN REPAIR	AR	
-12	S378-1L	PULLEY	8	
		ATTACHING PARTS		
-13	AN3-10A	BOLT	1	
-14	AN960-416L	WASHER	1	
-15	MS21044N3	NUT	1	
		---*---		
-16	0510105-58	CABLE-TAB WHEEL TO TURNBUCKLE	1	
	0510105-158	CABLE-STAINLESS STEEL TAB WHEEL TO TURNBUCKLE	1	
-17	0510105-57	CABLE-TAB WHEEL TO DISCONNECT	1	
	0510105-157	CABLE-STAINLESS STEEL TAB WHEEL TO DISCONNECT	1	
-18	0510105-44	CABLE-TAB ACTUATOR TO TURNBUCKLE	1	
	0510105-144	CABLE-STAINLESS STEEL TAB ACTUATOR TO TURNBUCKLE	1	
-19	0510105-45	CABLE-TAB ACTUATOR TO DISCONNECT	1	
	0510105-145	CABLE-STAINLESS STEEL TAB ACTUATOR TO DISCONNECT	1	
		ATTACHING PARTS		
-20	AN3-5A	BOLT	1	
-21	MS21044N3	NUT	1	
		---*---		
-22	AN155B8L	BARREL	1	
-23	0411523	BLOCK-ELEVATOR TAB STOP	3	
		ATTACHING PARTS		
-24	AN3-6A	BOLT	3	
-25	0411524	BUSHING	3	
-26	MS21044N3	NUT	3	
		---*---		
-27	MS24665-355	PIN-COTTER	1	
-28	0432138-6	CHAIN-CABLE TO TAB ACTUATOR	1	
	C4189	CONNECTING LINK KIT DI FOR CHAIN REPAIR	AR	
-29	SEE FIG 24	ACTUATOR ASSEMBLY	1	
-30	C4189	CONNECTING LINK KIT DI FOR CHAIN REPAIR	AR	

A---172 SERIAL 17249545 THRU 17251822
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0085
FP172 SERIAL FP172-0001 THRU FP172-0003

Flight Control (Cont)

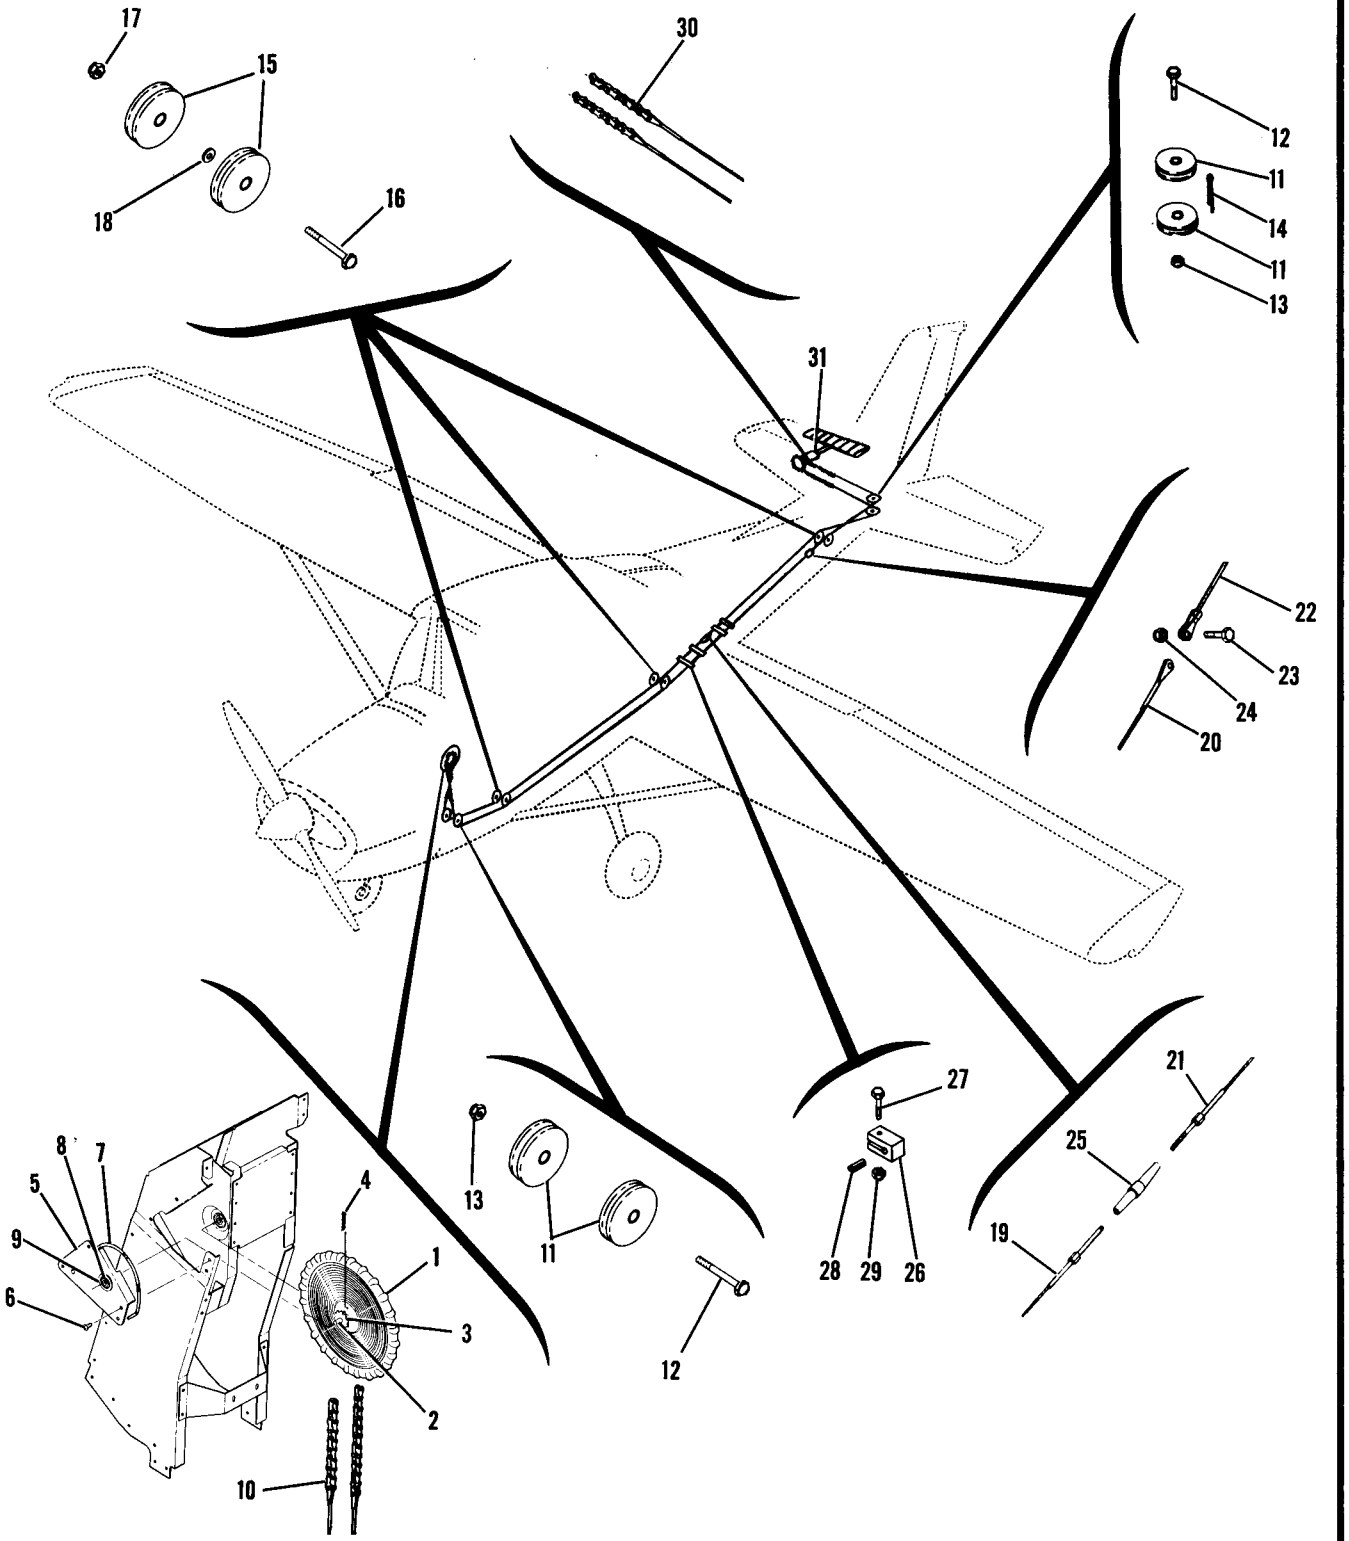


172 SERIAL 17251823 THRU 17263458
F172 SERIAL F172-0086 THRU F17201234

Figure 157. Elevator Trim Control System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
157 -		ELEVATOR TRIM CONTROL SYSTEM INSTALLATION	NP	A
- 1	0713656-1	WHEEL ASSEMBLY-TAB CONTROL	1	
- 2	0713656-3	SHAFT-TAB CONTROL	1	
- 3	0432134-1	SPROCKET	1	
		ATTACHING PARTS		
- 4	NAS561-3-8	PIN	2	
		---*---		
- 5	0713642-1	RETAINER ASSEMBLY-ELEVATOR TRIM	1	
		ATTACHING PARTS		
- 6	NAS220-5	SCREW	4	
		---*---		
- 7	0713642-3	INDICATOR-ELEVATOR TRIM	1	
		ATTACHING PARTS		
	0713032-1	BUSHING	1	
	0713032-2	COLLAR	1	
		---*---		
- 8	M451	BEARING TOR	1	
- 9	0411420	HOUSING	1	
-10	0432138-16	CHAIN-TAB CONTROL	1	
-11	S378-1	PULLEY	4	
		ATTACHING PARTS		
-12	AN3-10A	BOLT	1	
-13	MS21044N3	NUT	1	
-14	MS24665-355	COTTER PIN REAR PULLEYS ONLY	1	
		---*---		
-15	S378-1L	PULLEY	6	
		ATTACHING PARTS		
-16	AN3-10A	BOLT	1	
-17	MS21044N3	NUT	1	
-18	AN960-10L	WASHER TWO AFT PULLEYS ONLY	1	
	MS24665-285	COTTER PIN FORWARD PULLEY ONLY	1	
		---*---		
-19	0510105-220	CABLE-TAB WHEEL TO TURNBUCKLE	1	
	0510105-320	CABLE-STAINLESS STEEL TAB WHEEL TO TURNBUCKLE	1	
-20	0510105-221	CABLE-TAB WHEEL TO DISCONNECT	1	
	0510105-321	CABLE-STAINLESS STEEL TAB WHEEL TO DISCONNECT	1	
-21	0510105-44	CABLE-TAB ACTUATOR TO TURNBUCKLE	1	
	0510105-144	CABLE-STAINLESS STEEL TAB ACTUATOR TO TURNBUCKLE	1	
-22	0510105-45	CABLE-TAB ACTUATOR TO DISCONNECT	1	
	0510105-145	CABLE-STAINLESS STEEL TAB ACTUATOR TO DISCONNECT	1	
		ATTACHING PARTS		
-23	AN3-5A	BOLT	1	
-24	MS21044N3	NUT	1	
		---*---		
-25	AN155B8L	BARREL	1	
-26	0411523	BLOCK-ELEVATOR TAB STOP	1	
		ATTACHING PARTS		
-27	AN3-6A	BOLT	1	
-28	0411524	BUSHING	1	
-29	MS21044N3	NUT	1	
		---*---		
-30	0432138-6	CHAIN-CABLE TO TAB ACTUATOR	1	
-31	SEE FIG 24	ACTUATOR ASSEMBLY	1	

A---172 SERIAL 17251823 THRU 17263458
F172 SERIAL F172-0086 THRU F17201234

Flight Controls (Cont)

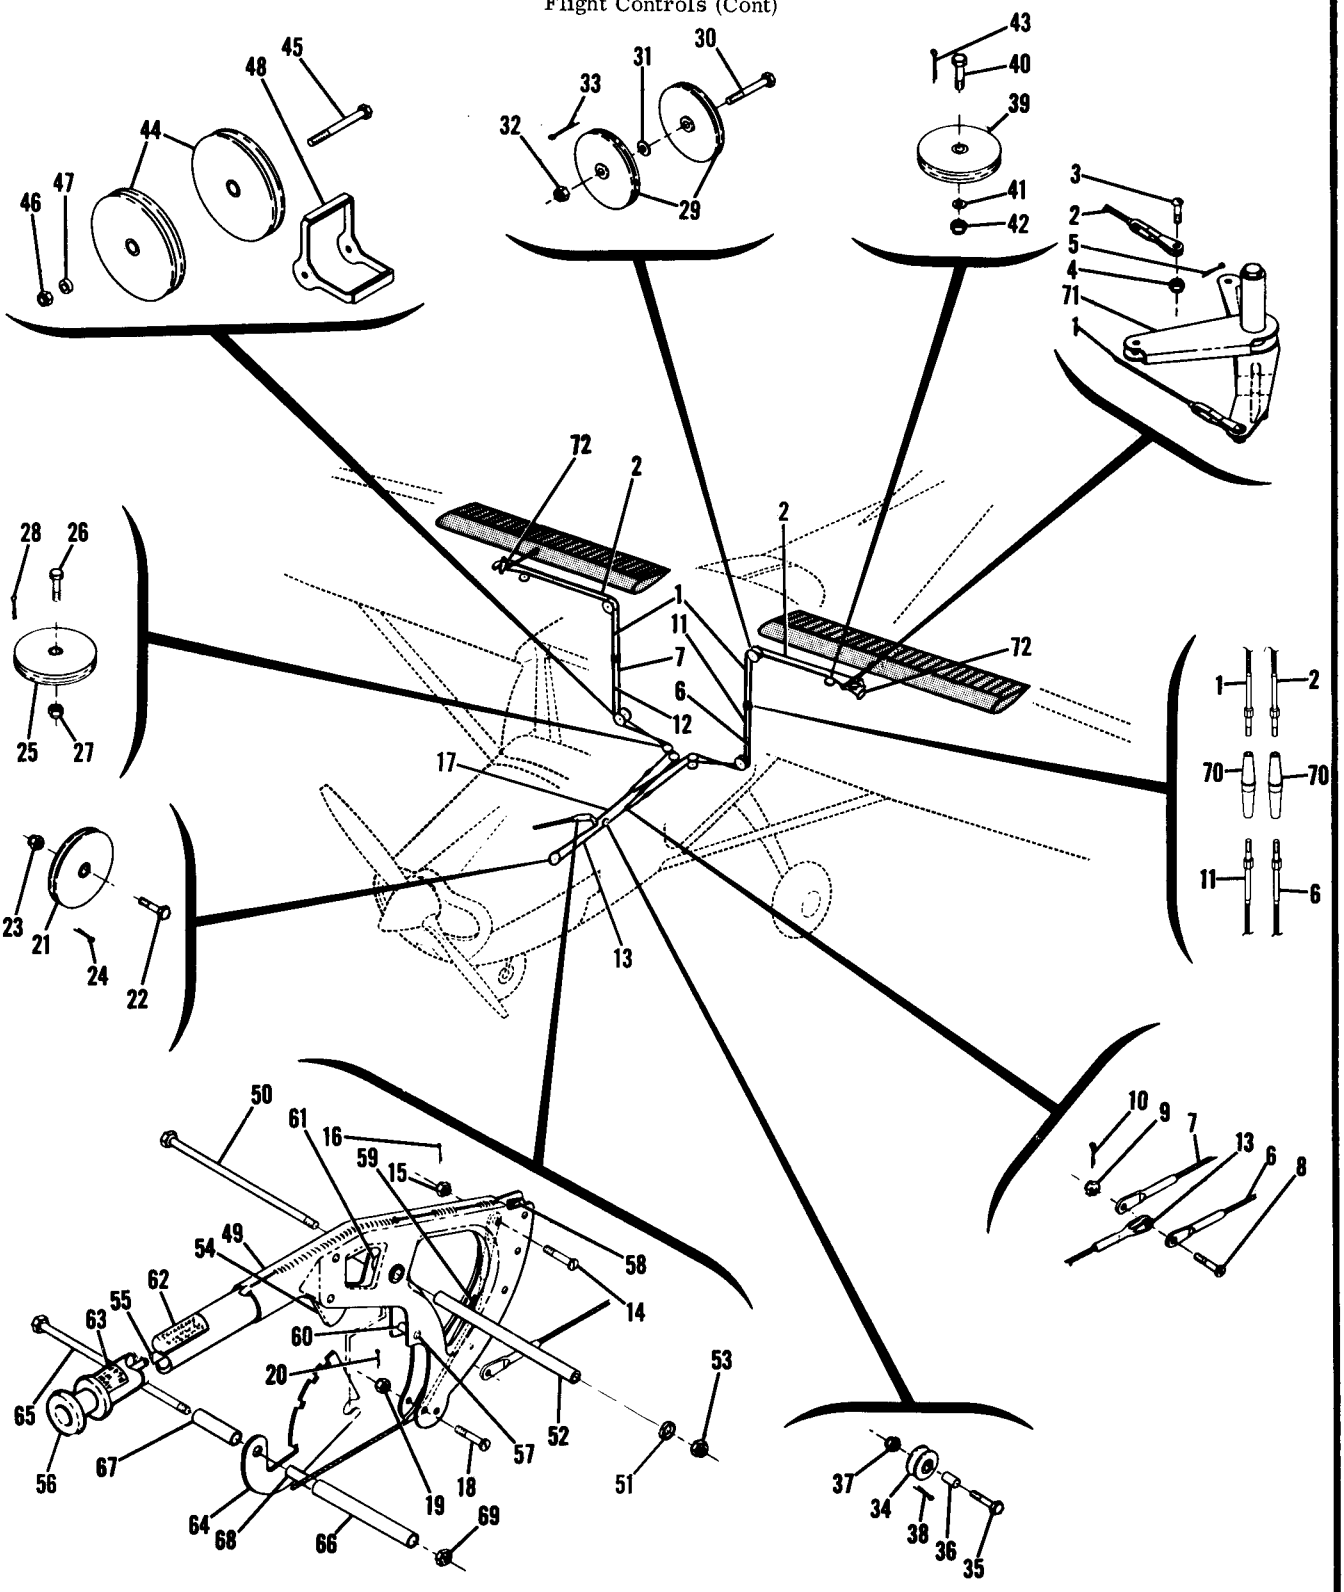

172 SERIAL 17249545 THRU 17251822
P172 SERIAL P17257120 THRU P17257188

Figure 158. Flap Control System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
158 -		FLAP CONTROL SYSTEM INSTALLATION	NP	C
- 1	0510105-59	CABLE-DIRECT UPPER	2	
	0510105-159	CABLE-STAINLESS STEEL DIRECT UPPER	2	
- 2	0510105-60	CABLE-RETURN UPPER	2	
	0510105-160	CABLE-STAINLESS STEEL RETURN UPPER	2	
		ATTACHING PARTS		
- 3	AN23-9	BOLT	4	
- 4	AN310-3	NUT	4	
- 5	MS24665-134	PIN-COTTER	4	
		---*---		
- 6	0510105-63	CABLE-RETURN LH LOWER	1	
	0510105-163	CABLE-STAINLESS STEEL RETURN LH LOWER	1	
- 7	0510105-64	CABLE-RETURN RH LOWER	1	
	0510105-164	CABLE-STAINLESS STEEL RETURN RH LOWER	1	
		ATTACHING PARTS		
- 8	AN23-12	BOLT	1	
- 9	AN310-3	NUT	1	
-10	MS24665-134	PIN-COTTER	1	
		---*---		
-11	0510105-61	CABLE-DIRECT LH LOWER	1	
	0510105-161	CABLE-STAINLESS STEEL DIRECT LH LOWER	1	
-12	0510105-62	CABLE-DIRECT RH LOWER	1	
	0510105-162	CABLE-STAINLESS STEEL DIRECT RH LOWER	1	
		ATTACHING PARTS		
	AN23-12	BOLT	1	
	AN310-3	NUT	1	
	MS24665-134	PIN-COTTER	1	
		---*---		
-13	0510105-21	CABLE-RETURN FORWARD	1	
	0510105-121	CABLE-STAINLESS STEEL RETURN FORWARD	1	
		ATTACHING PARTS		
-14	AN23-16	BOLT	1	
-15	AN310-3	NUT	1	
-16	MS24665-134	PIN-COTTER	1	
		---*---		
-17	0510105-22	CABLE-DIRECT FORWARD	1	
	0510105-122	CABLE-STAINLESS STEEL DIRECT FORWARD	1	
		ATTACHING PARTS		
-18	AN23-16	BOLT	1	
-19	AN310-3	NUT	1	
-20	MS24665-134	PIN-COTTER	1	
		---*---		
-21	S378-2	PULLEY	1	
		ATTACHING PARTS		
-22	AN3-6A	BOLT	1	
-23	MS21044N3	NUT	1	
		---*---		
-24	MS24665-134	PIN-COTTER	1	
-25	S378-2	PULLEY	4	
		ATTACHING PARTS		
-26	AN3-6A	BOLT	1	
-27	MS21044N3	NUT	1	
		---*---		
-28	MS24665-132	PIN-COTTER	4	
-29	S378-2	PULLEY	4	
		ATTACHING PARTS		
-30	AN3-10A	BOLT	1	
-31	AN960-416	WASHER	1	
-32	MS21044N3	NUT	1	
		---*---		
-33	MS24665-136	PIN-COTTER	2	
-34	S394	PULLEY	1	
		ATTACHING PARTS		
-35	AN3-6A	BOLT	1	
-36	0411783	BUSHING	1	
-37	MS21044N3	NUT	1	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
158 -38	MS24665-134		PIN-COTTER	1	
-39	S378-2		PULLEY	2	
			ATTACHING PARTS		
-40	AN3-7A		BOLT	1	
-41	AN960-10		WASHER	2	
-42	MS21044N3		NUT	1	
			---*---		
-43	MS24665-134		PIN-COTTER	2	
-44	S378-4		PULLEY	4	
			ATTACHING PARTS		
-45	AN4-21A		BOLT	1	
-46	MS21044N3		NUT	1	
-47	NAS43HT4-10		SPACER	1	
			---*---		
-48	0512135		GUARD	2	
-49	0510166-6		LEVER ASSEMBLY	1	
			ATTACHING PARTS		
-50	AN4-62A		BOLT	1	
-51	MS16624-43	**	SNAP RING	1	
-52	0510178-1	*	BUSHING	1	
-53	MS21042L4		NUT	1	
			---*---		
-54	0510167		LATCH ASSEMBLY-LEVER	1	
-55	0510169-3		ROD-LATCH	1	
-56	0510193-1		KNOB WHEN EXHAUSTED USE 0510203-1	1	A
	0510203-1		KNOB ASSEMBLY	1	B
	0510177		BUSHING-LATCH	1	
-57	AN960-4		WASHER	2	
	0510176		SPRING-LATCH RETURN	1	
-58	0510172-3		CAM	1	
-59	0510172-4		CAM	1	
	0510173		SPACER	2	
-60	NAS42HT5-36		SPACER	2	
-61	NAS42HT4-16		SPACER	4	
-62	0510194-1		PLACARD	1	
-63	0510188		PLACARD	1	
-64	0510171-1		RACHET	1	
			ATTACHING PARTS		
-65	AN4-62A		BOLT	1	
-66	0510181		SPACER-LH	1	
-67	0510181-1		SPACER-RH	1	
-68	0510184		BUSHING	1	
-69	MS21042L4		NUT	1	
			---*---		
-70	AN155B16S		BARREL	4	
-71	0523535		BELLCRANK-LH	1	
	0523535-1		BELLCRANK-RH	1	
-72	0523537		ROD ASSEMBLY	2	


NOTE.* WHEN ORDERING THIS PART FOR AIRPLANES PRIOR TO 172 SERIAL 17250573 OR P172 SERIAL P17257189, ALSO ORDER PART MARKED **.

A---172 SERIAL 17249545 THRU 17250572
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0018
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17250573 THRU 17251822
F172 SERIAL F172-0019 THRU F172-0085
C---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
159 -			FLAP SYSTEM INSTALLATION-ELECTRIC	NP	A
- 1	0510105-93		CABLE-FLAP RETRACT LH & DIRECT RH	1	
	0510105-193		CABLE-FLAP STAINLESS STEEL	1	
- 2	0510105-94		CABLE-FLAP RETRACT RH & DIRECT LH	1	
	0510105-194		CABLE-FLAP STAINLESS	1	
			ATTACHING PARTS		
- 3	MS20392-1C11		PIN	2	
	MS24665-134		PIN-COTTER	2	
- 4	AN155B16S		BARREL	1	
			---*---		
- 5	S378-2		PULLEY	2	
			ATTACHING PARTS		
- 6	AN3-7A		BOLT	1	
- 7	MS21044N3		NUT	1	
- 8	AN960-10		WASHER	1	
			---*---		
- 9	MS24665-134		PIN-COTTER	1	
-10	S378-1L		PULLEY	2	
			ATTACHING PARTS		
-11	AN3-10A		BOLT	1	
-12	MS21044N3		NUT	1	
-13	MS24665-285		PIN-COTTER	1	
-14	AN960-10		WASHER	1	
			---*---		
-15	0512172-1		BRACKET-UPPER MOUNTING	1	
-16	0512172-2		BRACKET-LOWER MOUNTING	1	
			ATTACHING PARTS		
-17	AN520-10R6		SCREW	2	
			---*---		
-18	0760612-7		DRIVE PULLEY ASSEMBLY-LH	1	
-19	0760612-1		DRIVE PULLEY ASSEMBLY-RH	1	
			ATTACHING PARTS		
-20	AN4-60A		BOLT	1	
	0523536		BUSHING	1	
	0522629-1		WASHER	2	
-21	MS21042L4		NUT	1	
			---*---		
	B610		BEARING TOR	1	
-22	0523537		ROD ASSEMBLY	1	
			ATTACHING PARTS		
-23	AN3-6A		BOLT	1	
-24	AN3-11A		BOLT	1	
-25	AN960-10		WASHER	2	
-26	MS21044N3		NUT	2	
			---*---		
-27	C590501-0101	*	POSITION TRANSMITTER-FLAP	1	
			ATTACHING PARTS		
-28	AN3-3A		BOLT	2	
			---*---		
-29	0760662-1		ARM ASSEMBLY-FLAP POSITION TRANSMITTER	1	E
	0510195-1		ARM ASSEMBLY-FLAP POSITION TRANSMITTER	1	F
			ATTACHING PARTS		
-30	MS20392-2C13		PIN	1	
-31	AN960-10L		WASHER	1	
-32	MS24665-132		PIN-COTTER	2	
-33	MS20392-2C9		PIN	1	
-34	NAS43DD3-12		SPACER	1	
			---*---		
-35	0760619-1		HINGE ASSEMBLY-FLAP MOTOR	1	
			ATTACHING PARTS		
-36	AN4-56A		BOLT	1	
	0523536		BUSHING	1	
	MS21042L4		NUT	1	
			---*---		
	B610		BEARING TOR		

CONTINUED ON NEXT PAGE

Flight Controls (Cont)

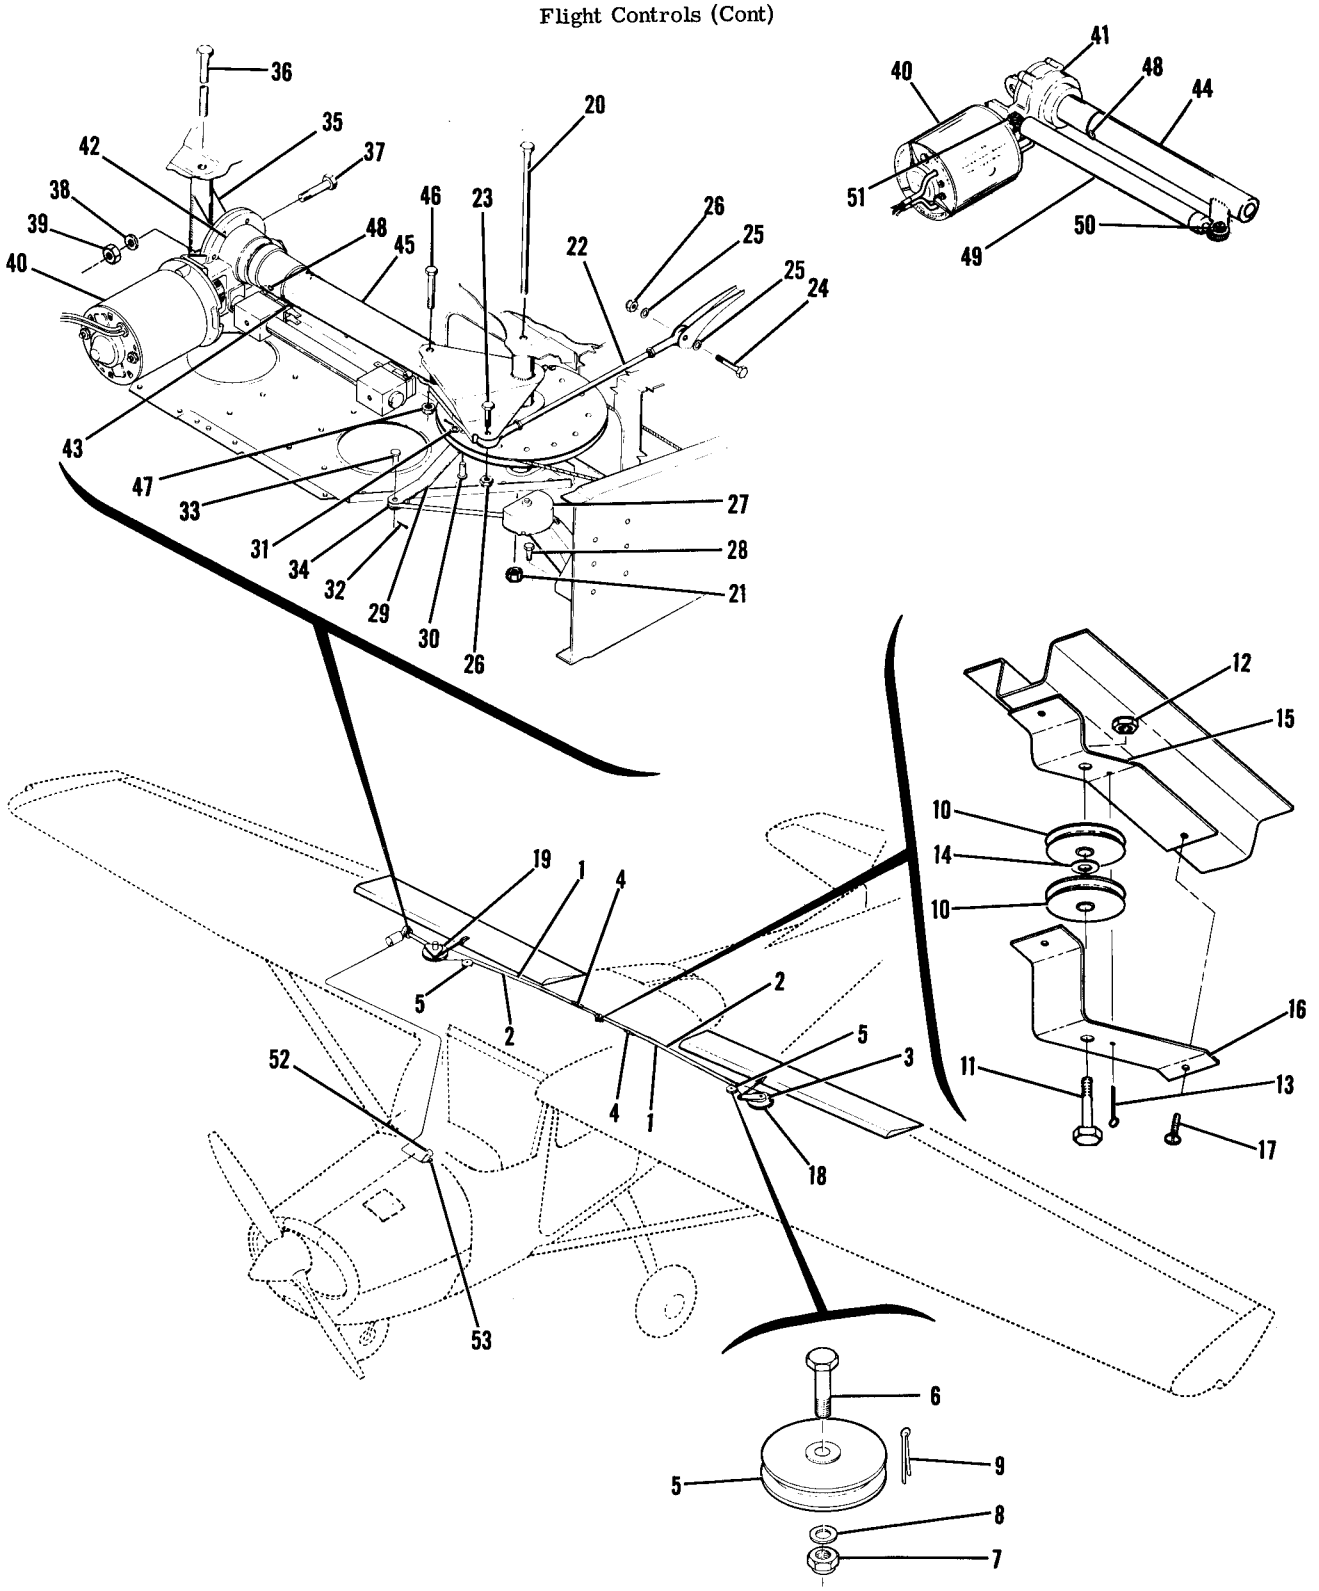

172 SERIAL 17251823 THRU 17263458
F172 SERIAL F172-0086 THRU F17201234

Figure 159. Flap System Installation - Electric

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
159 -			ACTUATOR & MOTOR ASSY FSO SK150-41 & C301002-0301	1	G
	C301002-0301		ACTUATOR & MOTOR ASSY INTERNALLY FILTERED	1	H
			ATTACHING PARTS		
-37	AN6-15A		BOLT	1	
-38	AN960-616		WASHER	1	
-39	MS21042L6		NUT	1	
			---*---		
-40	C301002-0103		MOTOR-FLAP ACTUATOR INTERNALLY FILTERED	1	
-41			ACTUATOR-FLAP FSO SK150-41 & C301002-0301	1	G
-42	C301002-0308		ACTUATOR & SWITCH BAR ASSY	1	H
-43	V3L-3-D9		SWITCH	2	
			ATTACHING PARTS		
	AN515-4-9		SCREW	2	
	AN936A4		WASHER	2	
			---*---		
	C301001-0211		COUPLING-ACTUATOR	1	
-44	0409007-4		TUBE ASSY-FLAP ACTUATOR	1	G
-45	0760620-1		TUBE ASSY-FLAP ACTUATOR FSO 0760620-9	1	K
	0760620-9	%	TUBE ASSY-FLAP ACTUATOR	1	L
			ATTACHING PARTS		
-46	AN4-15A		BOLT	1	
	0760614-1		BUSHING	1	
-47	MS21042L4		NUT	1	
-48	AN565D8H3		SET SCREW	1	J
	AN565B428H3		SET SCREW	1	L
			---*---		
	S1003-66A		BEARING	1	
-49	10650		CYLINDER	1	G
			ATTACHING PARTS		
-50	NAS221-10		SCREW	1	G
	AN960-10L		WASHER	1	G
-51	NAS221-14		SCREW	1	G
	AN960-10		WASHER	1	G
	NAS43HT3-4		SPACER	1	G
	0409007-2		BRACKET	1	G
	MS21044N3		NUT	2	G
			---*---		
-52	SEE FIG 102		INDICATOR-FLAP	1	
	S1558-1		MOUNTING BRACKET-INDICATOR	1	B
-53	0760632-1		SWITCH-FLAP	1	C
	S1661-1		SWITCH-FLAP	1	D

NOTE. *WHEN ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIAL 17253393 OR F172-0180 THE C668001-0103 INDICATOR MUST BE USED.

NOTE. %WHEN ORDERING THIS PART ALSO ORDER (1) AN565B428H3 SET SCREW.

A---172 SERIAL 17251823 THRU 17263458
F172 SERIAL F172-0086 THRU F17201234
B---172 SERIAL 17253393 THRU 17263458
F172 SERIAL F172-0180 THRU F17201234
C---172 SERIAL 17251823 THRU 17254274
F172 SERIAL F172-0086 THRU F172-0319
D---172 SERIAL 17254275 THRU 17263458
F172 SERIAL F172-0320 THRU 17201234
E---172 SERIAL 17251823 THRU 17255502
F172 SERIAL F172-0086 THRU F172-0479
F---172 SERIAL 17255503 THRU 17263458
F172 SERIAL F172-0480 THRU F17201234
G---172 SERIAL 17251823 THRU 17259903
F172 SERIAL F172-0086 THRU F17200804
H---172 SERIAL 17259904 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
J---172 SERIAL 17251823 THRU 17262444
F172 SERIAL F172-0086 THRU F17201224
K---172 SERIAL 17259904 THRU 17262444
F172 SERIAL F17200805 THRU F17201224
L---172 SERIAL 17262445 THRU 17263458
F172 SERIAL F17201225 THRU F17201234

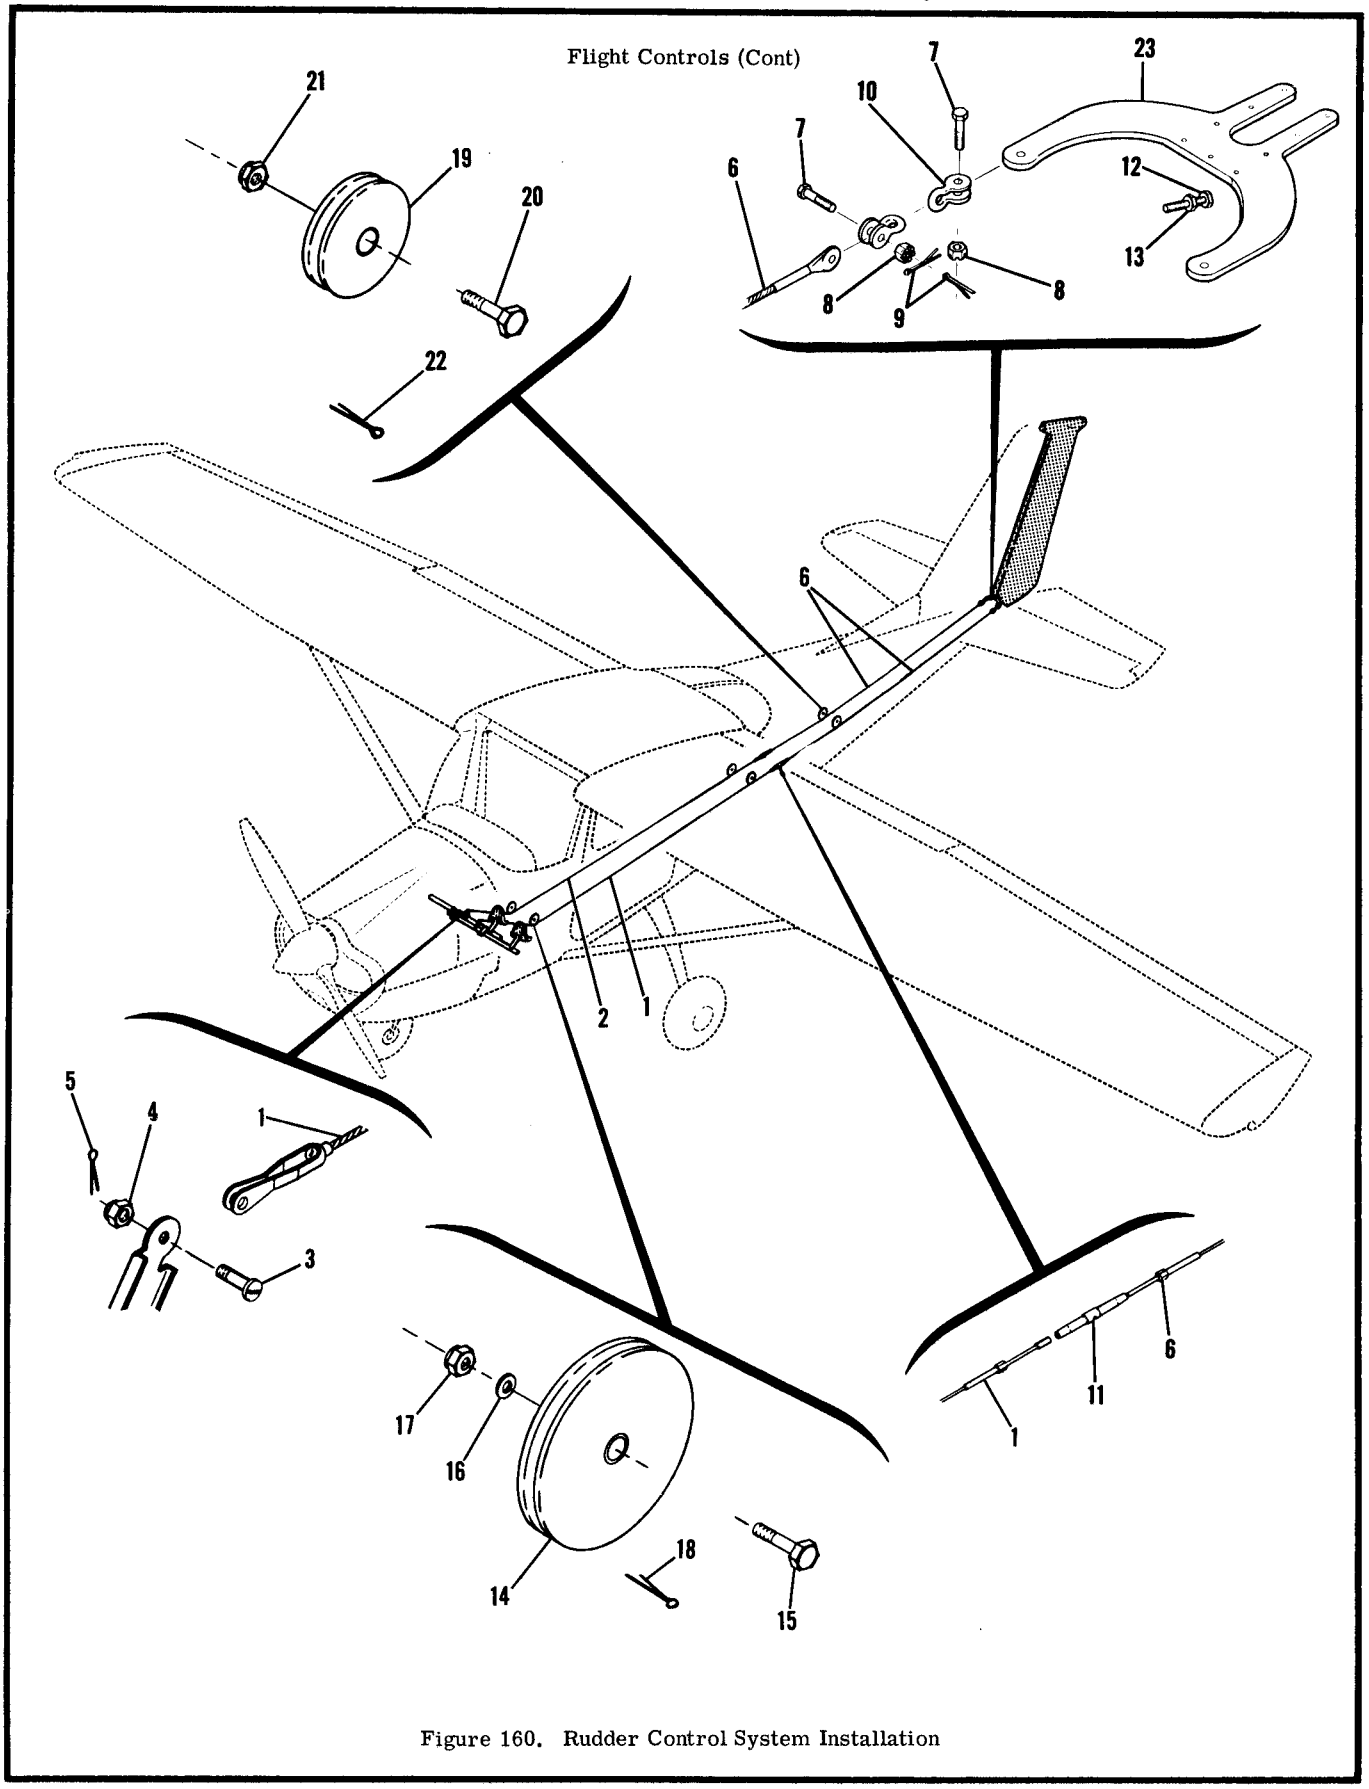


Figure 160. Rudder Control System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
160 -		RUDDER CONTROL SYSTEM INSTALLATION	NP	
- 1	0510105-205	CABLE-FORWARD LH	1	
	0510105-305	CABLE-FORWARD LH STAINLESS STEEL	1	
- 2	0510105-206	CABLE-FORWARD RH	1	
	0510105-306	CABLE-FORWARD RH STAINLESS STEEL	1	
		ATTACHING PARTS		
- 3	AN23-10	BOLT	1	
- 4	AN310-3	NUT	1	
- 5	MS24665-134	COTTER PIN	1	
		---*---		
- 6	0510105-207	CABLE-AFT	2	
	0510105-307	CABLE-AFT STAINLESS STEEL	2	
		ATTACHING PARTS		
- 7	AN23-11	BOLT	2	
- 8	AN310-3	NUT	2	
- 9	MS24665-134	COTTER PIN	2	
-10	0533010-1	SHACKLE	2	
		---*---		
-11	AN155832S	BARREL	2	
-12	NAS428H3-12	BOLT-RUDDER STOP	2	
-13	AN315-3R	NUT-RUDDER STOP	2	
-14	S378-4	PULLEY	2	
		ATTACHING PARTS		
-15	AN4-14A	BOLT	1	
-16	AN960-416L	WASHER	1	
-17	MS21042L4	NUT	1	
		---*---		
-18	MS24665-355	COTTER PIN	2	
-19	S378-3L	PULLEY	4	
		ATTACHING PARTS		
-20	AN4-10A	BOLT	1	
-21	MS21042L4	NUT	1	
		---*---		
-22	MS24665-136	PIN-COTTER	4	
-23	SEE FIG 23	HORN-RUDDER	1	

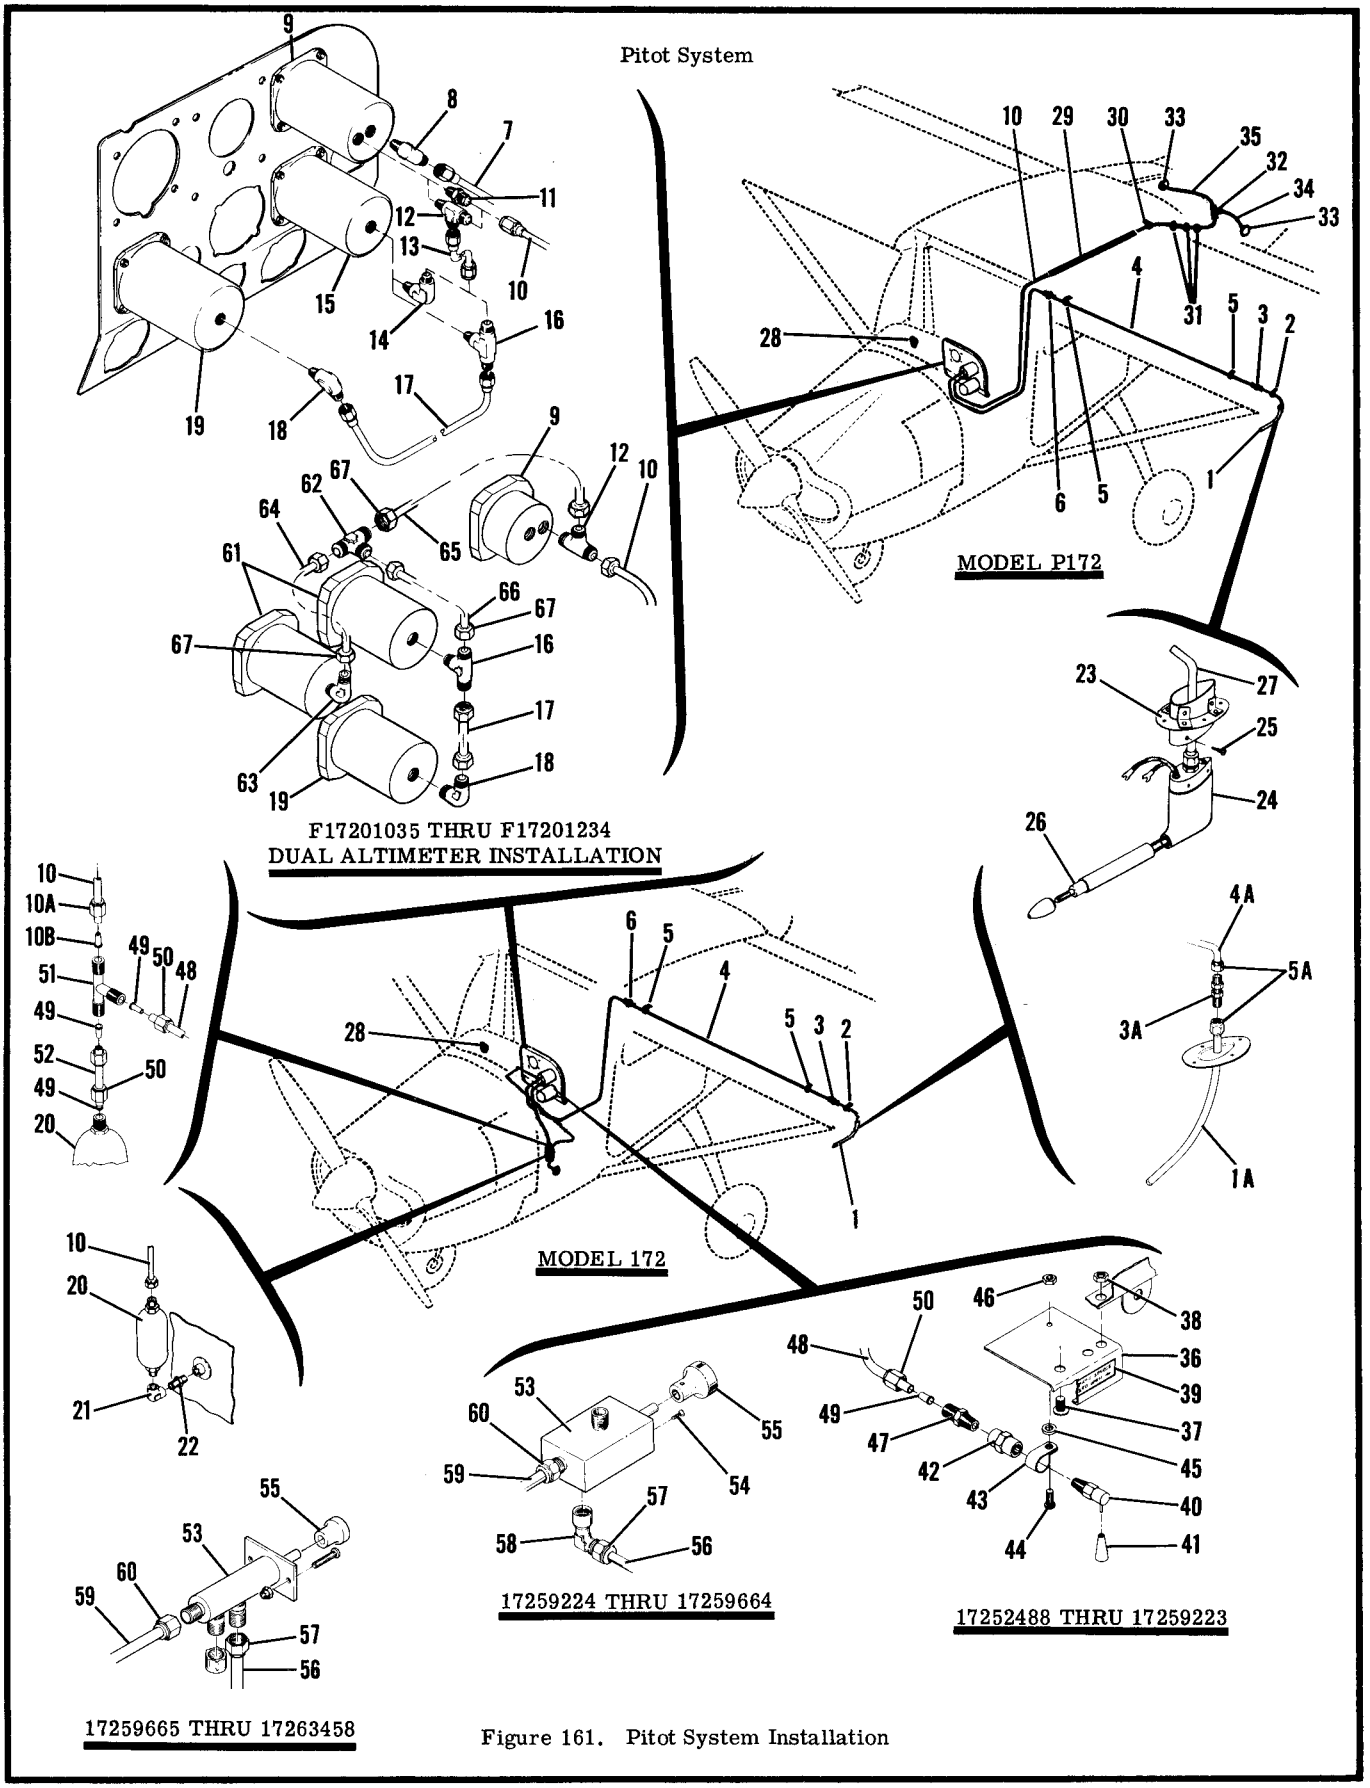


Figure 161. Pitot System Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
161 -			PITOT SYSTEM INSTALLATION	NP	
- 1	0500106-53		TUBE-PITOT	1	F
- 1A	0521103-1		TUBE ASSEMBLY-PITOT WEU 0521103-3	1	O
	0521103-3	%	TUBE ASSEMBLY-PITOT	1	P
	0521103-4		TUBE ASSEMBLY-PITOT	1	W
			ATTACHING PARTS		
- 2	AN742D4		CLAMP TIN	1	F
	NAS395-16-3		NUT	1	F
	S1021Z8-8		SCREW	1	F
			---*---		
- 3	AN815-4D		UNION	1	F
- 3A	S1132-1		UNION	1	G
- 4	0500106-54		LINE ASSEMBLY-PITOT TUBE TO WING ROOT	1	F
- 4A	S1071-1		TUBE-POLYETHYLENE 46.0 IN LG BULK ITEM	1	G
			REF S1071-1-46.0		
			ATTACHING PARTS		
- 5	AN742D4		CLAMP TIN	2	
	NAS395-16-3		NUT	1	
	MS21044N06		NUT	1	
	S1021Z8-8		SCREW	1	
	AN515-6R8		SCREW	1	
			---*---		
- 5A	S1130-1		NUT	2	G
	S1131-1		INSERT	2	G
	S1130-1		NUT	1	
- 6	S1132-1		UNION	1	
- 7	S1071-1		TUBE-POLYETHYLENE 55 IN LG BULK ITEM	1	
			REF S-1071-1-55.0		
	S1130-1		NUT	2	
	S1131-1		INSERT	2	
- 8	S1135-1		ELBOW	1	C
	S1133-1		CONNECTOR	1	D
- 9			INDICATOR-AIRSPEED SEE INSTRUMENT PANEL	1	
-10	S1071-1		TUBE-POLYETHYLENE 16 IN LG BULK ITEM	1	A
			REF S-1071-1-16.0		
	S1071-1		TUBE-POLYETHYLENE * IN LG BULK ITEM	1	B
			REF S1071-1-*		
-10A	S1130-1		NUT	2	
-10B	S1131-1		INSERT	2	
-11	S1133-1		CONNECTOR	1	
-12	S1139-1		TEE	1	
-13	S1071-1		TUBE-POLYETHYLENE 11 IN LG BULK ITEM	1	C
			REF S-1071-1-11.0		
	S1071-1		TUBE-POLYETHYLENE 9 IN LG BULK ITEM	1	D
			REF S-1071-1-9.00		
	S1130-1		NUT	2	
	S1131-1		INSERT	2	
-14	S1135-1		ELBOW	1	C
	S1133-1		CONNECTOR	1	D
-15			ALTIMETER SEE INSTRUMENT PANEL	1	
-16	S1139-1		TEE	1	
-17	S1071-1		TUBE POLYETHYLENE 11 IN LG BULK ITEM	1	C
			REF S-1071-1-11.0		
	S1071-1		TUBE-POLYETHYLENE 9 IN LG BULK ITEM	1	D
			REF S-1071-1-9.00		
	S1130-1		NUT	2	
	S1131-1		INSERT	2	
-18	S1135-1		ELBOW	1	
-19			INDICATOR-VERTICAL SPEED SEE INSTRUMENT PANEL	1	
-20	S1258-1		SUMP ASSEMBLY-PITOT STATIC LINE	1	A
-21	AN916-1D		ELBOW	1	A
-22	AN911-1D		NIPPLE	1	A
-23	0721101-8		CONNECTOR ASSEMBLY	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	4	
			---*---		
	NAS395-14-3		NUT	4	

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
161 -24	0721105-2	PITOT TUBE ASSEMBLY HEATED	1	C
	0721105-17	PITOT TUBE ASSEMBLY HEATED	1	R
	0721105-15	PITOT TUBE ASSEMBLY HEATED	1	S
	0721105-30	PITOT TUBE ASSEMBLY HEATED	1	T
	0721105-27	PITOT TUBE ASSEMBLY HEATED	1	U
	0721105-30	PITOT TUBE ASSEMBLY HEATED FLOATPLANE ONLY	1	U
		ATTACHING PARTS		
-25	AN507-640R4	SCREW	4	
		---*---		
-26	0721105-5	HEATER ASSEMBLY	1	
-27	0500106-261	LINE ASSEMBLY-PITOT TUBE TO UNION	1	F
-28	S1232-10	CIRCUIT BREAKER ASSEMBLY	1	C
	S1360-10	CIRCUIT BREAKER ASSEMBLY	1	D
	0513153-6	PLACARD-PITOT HEAT	1	C
	0713026-4	SWITCH-CIRCUIT BREAKER ASSEMBLY	1	K
	S1824-1	SWITCH	1	L
	0713303-2	KNOB ASSEMBLY-SWITCH	1	C
-29	S292-8	SLEEVE * IN LG BULK ITEM REF S292-8-*	1	B
-30	AN742D5	CLAMP	1	B
	S1021Z8-8	SCREW	1	B
	NAS446-4	NUT	1	B
-31	MS35489-9	GROMMET	3	B
-32	S1137-1	TEE-NYLON	1	B
-33	S1419-1	BUTTON-STATIC SOURCE	2	B
		ATTACHING PARTS		
	AN316-7R	NUT	1	B
	AN960-716L	WASHER	1	B
	S1278-2	CLIP	1	B
		---*---		
-34	S1071-1	TUBE-POLYETHYLENE * IN LG BULK ITEM REF S1071-1-*	1	B
	S1130-1	NUT-NYLON	2	B
	S1131-1	INSERT	2	B
-35	S1071-1	TUBE-POLYETHYLENE * IN LG BULK ITEM REF S1071-1-*	1	B
	S1130-1	NUT-NYLON	2	B
	S1131-1	INSERT	2	B
		STATIC SOURCE INSTALLATION-ALTERNATE	NP	E
-36	0713244-1	BRACKET	1	H
	0513417-1	BRACKET ASSEMBLY	1	J
		ATTACHING PARTS		
-37	AN515-8R6	SCREW	2	
-38	MS21044N08	NUT	2	
		---*---		
-39	1200678-2	PLACARD	1	
-40	0511199-20	VALVE	1	
-41	S430-1	KNOB	1	
-42	AN910-1D	COUPLING	1	
-43	MS21919DG9	CLAMP	1	
-44	AN520-10R8	SCREW	1	
-45	AN960D10	WASHER	1	
-46	MS21044N3	NUT	1	
-47	S1133-1	CONNECTOR	1	
-48	S1071-1	TUBE-POLYETHYLENE 18.00 IN LG BKI REF S1071-1-18.00 REF S1071-1-*	1	
-49	S1131-1	INSERT	4	
-50	S1130-1	NUT	4	
-51	S1137-1	TEE	1	
-52	S1071-1	TUBE-POLYETHYLENE 2.0 IN LG BULK ITEM REF S1071-1-2.0	1	
		STATIC SOURCE INSTALLATION-ALTERNATE	NP	L
-53	S2066-1	VALVE WEU 2013142-1	1	M
	S2116-1	VALVE WEU 2013142-1	1	N
	2013142-1	VALVE ASSY	1	Q
		ATTACHING PARTS		
-54	AN509-8R7	SCREW	2	L
	MS21044N08	NUT	2	
		---*---		
-55	S1981-5	KNOB ASSEMBLY	1	L
-56	S1071-1	TUBE-POLYETHYLENE * IN LG BULK ITEM REF S1071-1-*	1	L
		ATTACHING PARTS		
-57	S1130-1	NUT	2	L
	S1131-1	INSERT	2	L
-58	S2071-1	ELBOW	1	M
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
161 -59	S1071-1	TUBE-POLYETHYLENE * IN LG BULK ITEM REF S1071-1-* - ATTACHING PARTS	1	L
-60	S1130-1	NUT	1	L
	S1131-1	INSERT	1	L
		---*---		
		DUAL ALTIMETER INSTALLATION	NP	V
-61		ALTIMETER SEE INSTRUMENT PANEL	2	
-62	S1139-1	TEE	1	
-63	S1135-1	ELBOW	1	
-64	S1071-1	TUBE-POLYETHYLENE * IN LG BKI REF S1071-1-*	1	
-65	S1071-1	TUBE-POLYETHYLENE * IN LG BKI REF S1071-1-*	1	
-66	S1071-1	TUBE-POLYETHYLENE * IN LG BKI REF S1071-1-*	1	
-67	S1130-1	NUT	6	
	S1131-1	INSERT	6	
		NOTE. *LENGTHS TO BE ADDED LATER		
		NOTE. %WHEN ORDERING THIS PART ALSO ORDER S1130-1 NUT, INDEX 5A.		
		A---172 SERIAL 17249545 THRU 17263458 F172 SERIAL F172-0001 THRU F17201234 B---P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 C---172 SERIAL 17249545 THRU 17250572 F172 SERIAL F172-0001 THRU F172-0018 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 D---172 SERIAL 17250573 THRU 17263458 F172 SERIAL F172-0019 THRU F17201234 E---172 SERIAL 17252488 THRU 17259223 F172 SERIAL F172-0160 THRU F17200754 F---172 SERIAL 17249545 THRU 17254892 F172 SERIAL F172-0001 THRU F172-0319 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003 G---172 SERIAL 17254893 THRU 17263458 F172 SERIAL F172-0320 THRU F17201234 H---172 SERIAL 17252488 THRU 17258486 F172 SERIAL F172-0160 THRU F17200654 J---172 SERIAL 17258487 THRU 17259223 F172 SERIAL F17200655 THRU F17200754 K---172 SERIAL 17250573 THRU 17259223 F172 SERIAL F172-0019 THRU F17200754 L---172 SERIAL 17259224 THRU 17263458 F172 SERIAL F17200755 THRU F17201234 M---172 SERIAL 17259224 THRU 17259604 F172 SERIAL F17200755 THRU F17200764 N---172 SERIAL 17259605 THRU 17260024 F172 SERIAL F17200765 THRU F17200904 O---172 SERIAL 17254893 THRU 17259779 F172 SERIAL F172-0320 THRU F17200804 P---172 SERIAL 17259780 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 Q---172 SERIAL 17260025 THRU 17263458 F172 SERIAL F17200905 THRU F17201234 R---172 SERIAL 17250573 THRU 17254892 F172 SERIAL F172-0019 THRU F172-0319 S---172 SERIAL 17254893 THRU 17260758 F172 SERIAL F172-0320 THRU F17200904 T---172 SERIAL 17260759 THRU 17261898 F172 SERIAL F17200905 THRU F17201034 U---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234 V---F172 SERIAL F17201035 THRU F17201234 W---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200905 THRU F17201234		

This page intentionally left blank.

Stall Warning

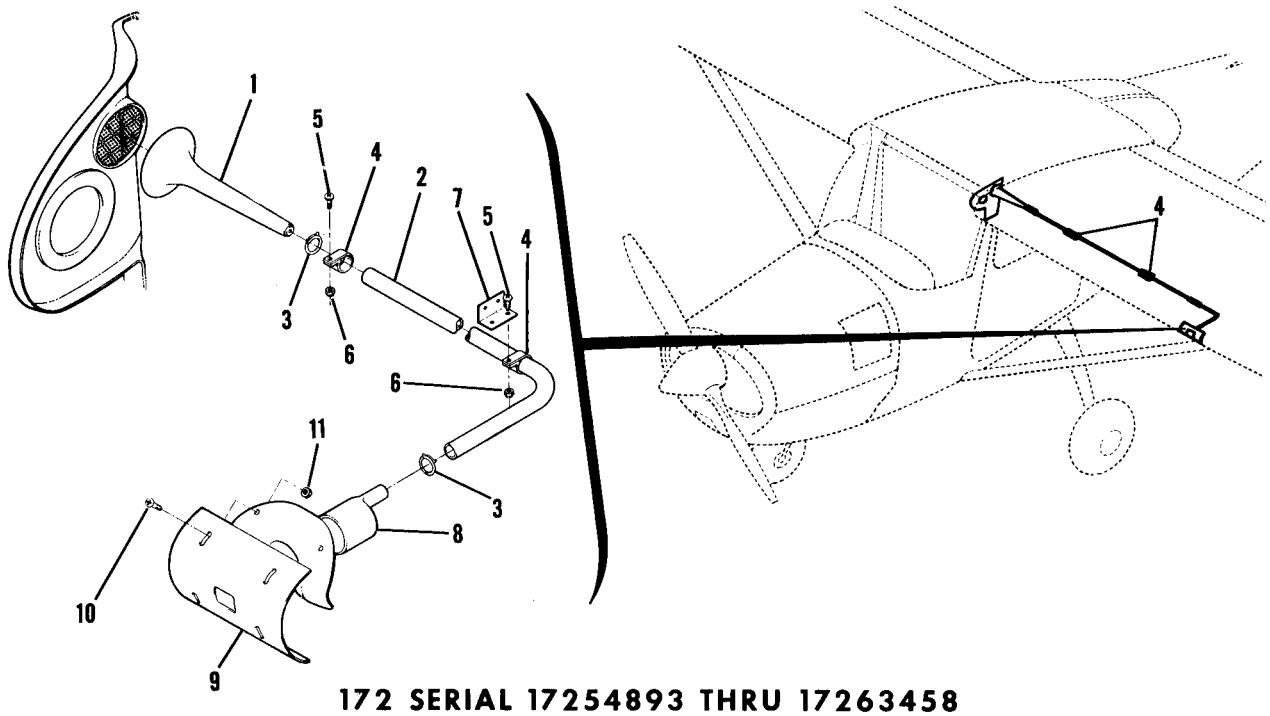


172 SERIAL 17254893 THRU 17263458
F172 SERIAL F172-0320 THRU F17201234

Figure 162. Stall Warning Horn Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
162 -		STALL WARNING HORN INSTALLATION	NP	A
- 1	0413483-1	HORN ASSEMBLY-STALL WARNING	1	
- 2	S1071-4	TUBE 72.0 IN LG BULK ITEM REF S1071-4-72.0	1	
		ATTACHING PARTS		
- 3	S1494-8	CLAMP	2	
- 4	AN742D8	CLAMP	4	
- 5	S1021Z6-6	SCREW	4	
- 6	NAS395-12-3	NUT	4	
- 7	0422292	BRACKET	1	
		---*---		
- 8	0413485-1	SCOOP ASSEMBLY	1	D
	0413028-10	SCOOP ASSEMBLY	1	E
	0413485-2	SCREEN INSIDE SCOOP	1	
- 9	0413028-4	SCOOP PLATE-STALL WARNING	1	B
	0413028-8	SCOOP PLATE-STALL WARNING	1	C
	0413028-9	SCOOP PLATE-STALL WARNING	1	E
		ATTACHING PARTS		
-10	S1021Z8-8	SCREW	4	
-11	NAS395-18-1	NUT	4	
		---*---		
		A---172 SERIAL 17254893 THRU 17263458 F172 SERIAL F172-0320 THRU F17201234 B---172 SERIAL 17254893 THRU 17259223 F172 SERIAL F172-0320 THRU F17200754 C---172 SERIAL 17259224 THRU 17260758 F172 SERIAL F17200755 THRU F17200904 D---172 SERIAL 17254893 THRU 17260758 F172 SERIAL F172-0320 THRU F17200904 E---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200905 THRU F17201234		

Oil Filter

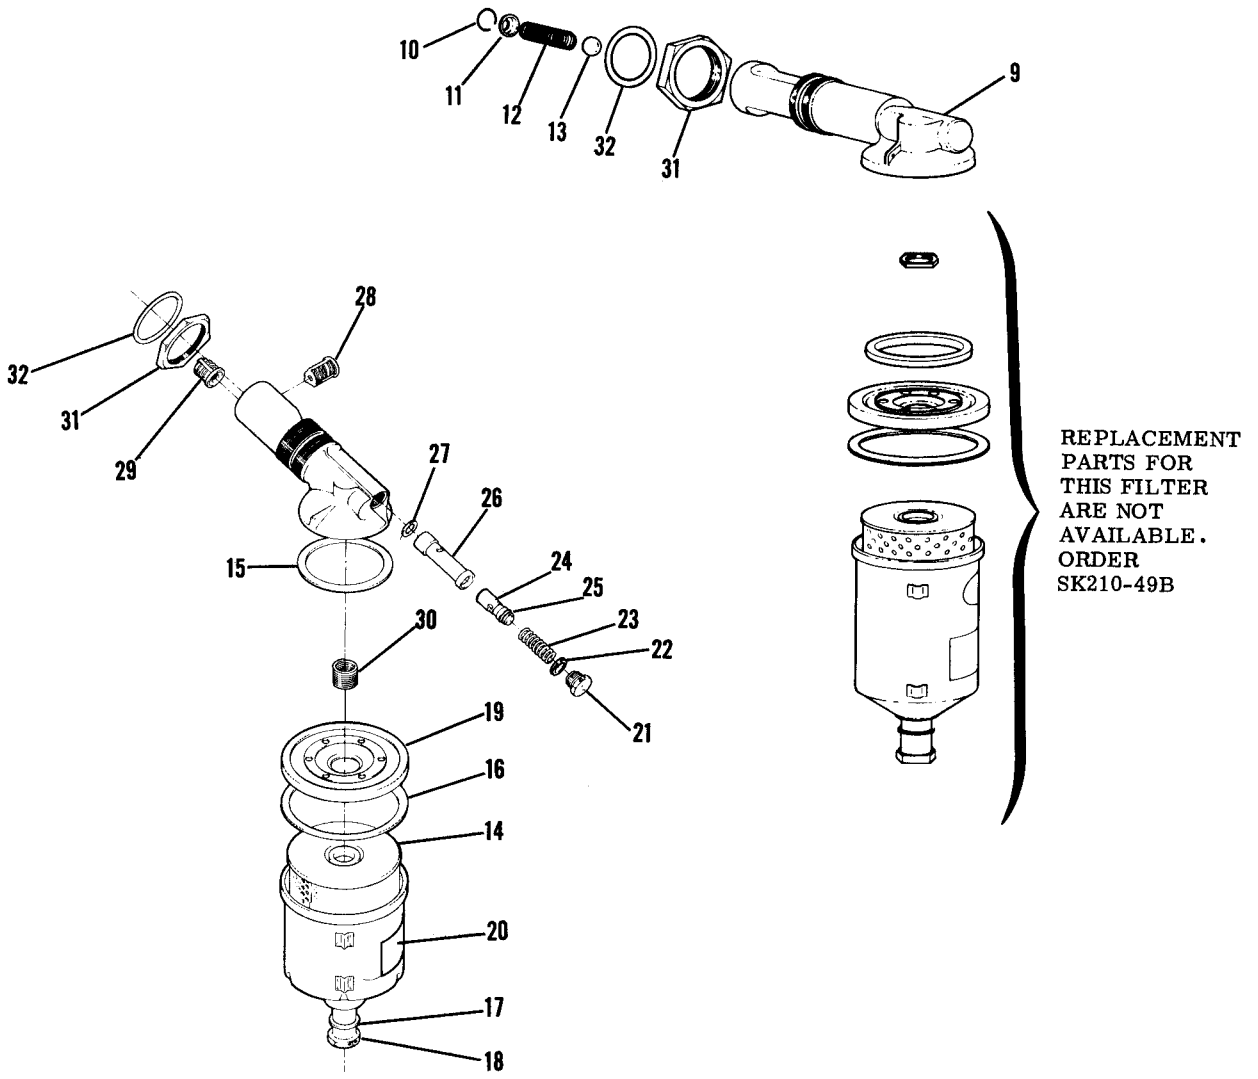

172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804


Figure 163. Oil Filter Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
163 -			OIL FILTER INSTALLATION	NP	C
			OIL FILTER ASSEMBLY ORDER SK210-49B	NP	A
- 1			DELETED-NOT AVAILABLE		
- 2			DELETED-NOT AVAILABLE		
- 3			DELETED-NOT AVAILABLE		
- 4			DELETED-NOT AVAILABLE		
- 5			DELETED-NOT AVAILABLE		
- 6			DELETED-NOT AVAILABLE		
- 7			DELETED-NOT AVAILABLE		
- 8			DELETED-NOT AVAILABLE		
- 9			ADAPTER ASSEMBLY-OIL FILTER ORDER AK172-112	NP	A
-10	1250407-1		SNAP RING	1	
-11	1250408-1		CAP-RETAINER	1	
-12	0556004-7		SPRING	1	
-13	S272-17		BALL	1	
	C294505-0101		OIL FILTER ASSEMBLY	1	B
-14	C294505-0102	*	FILTER ELEMENT KIT	1	
-15	6436635		GASKET AC	1	
-16	6436637		GASKET AC	1	
-17	5579654		METAL GASKET AC	1	
-18	6436916	*	STUD-CENTER AC	1	
-19	6436989	*	LID-OIL FILTER AC	1	
-20	1250410-3	*	PLACARD-OIL FILTER	1	
	0556010-1		ADAPTER ASSEMBLY-OIL FILTER LANDPLANE	1	B
	0450404-200		ADAPTER ASSEMBLY-OIL FILTER FLOATPLANE ONLY	1	B
-21	0756018-2		PLUG	1	
-22	AN6227B11		O RING	1	
-23	0756021-1		SPRING	1	
-24	0756020-1		PISTON	1	
-25	AN6227B6		O RING	1	
-26	0756019-1		SLEEVE	1	
-27	MS20002C6		WASHER	1	
-28	0756022-1		VALVE-BY PASS	1	
-29	0756022-2		VALVE-OUTLET	1	
-30	MS124663		INSERT	1	
-31	1250405-1		NUT-PACKING	1	
-32	AN123883		PACKING-ADAPTER	1	
	SE709		WRENCH ADAPTER-OIL FILTER	1	

NOTE. *THESE ARE ALSO REPLACEMENT PARTS FOR SK210-49B

A---172 SERIAL 17249545 THRU 17253392
F172 SERIAL F172-0001 THRU F172-0179
B---172 SERIAL 17253393 THRU 17256512
F172 SERIAL F172-0180 THRU F17200804
C---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804

Oil Filter (Cont)

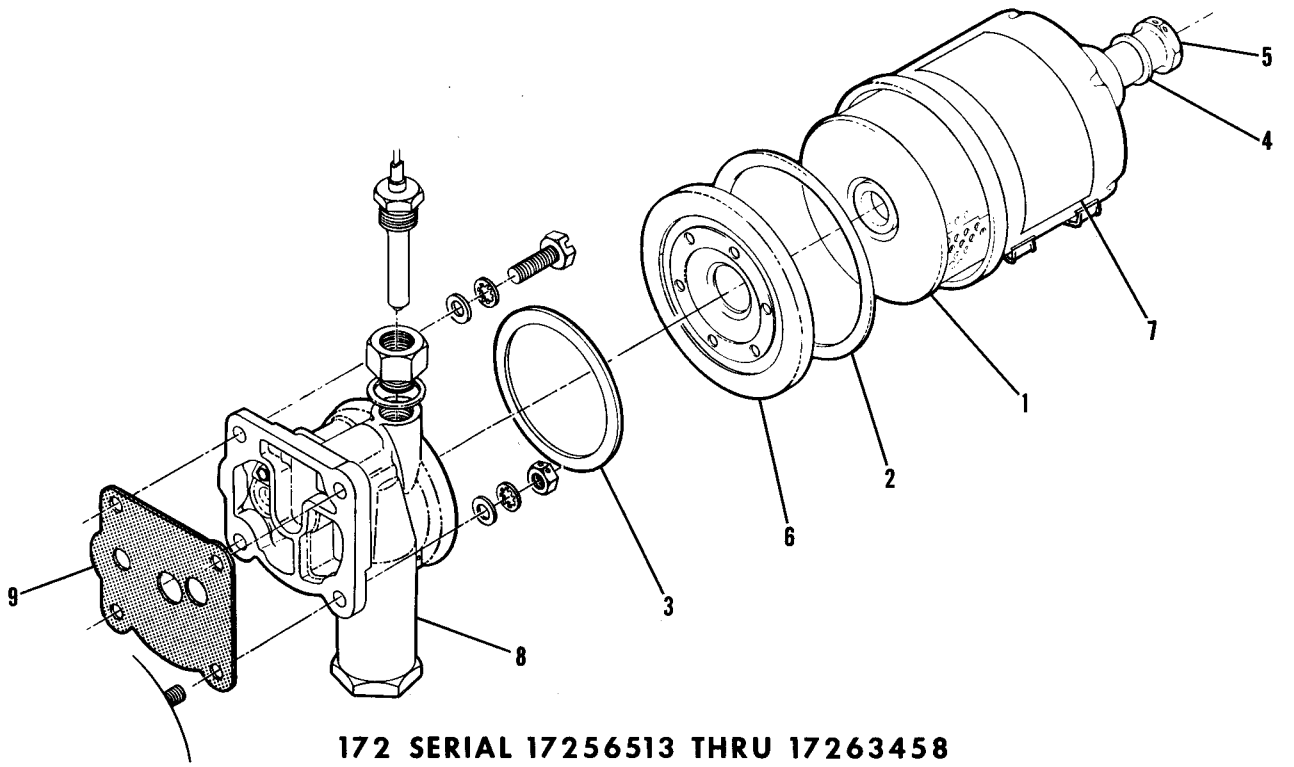


172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Figure 164. Oil Filter Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
164 -		OIL FILTER INSTALLATION	NP	A
	C294505-0101	OIL FILTER ASSEMBLY	1	
- 1	C294505-0102	FILTER ELEMENT KIT	1	
- 2	6436637	GASKET AC	1	
- 3	6436635	GASKET AC	1	
- 4	5579654	METAL GASKET AC	1	
- 5	6436916	STUD-CENTER AC	1	
- 6	6436989	LID-OIL FILTER AC	1	
- 7	1250410-3	PLACARD-OIL FILTER	1	
- 8	75528	ADAPTER ASSEMBLY-OIL FILTER LY	1	
- 9	74904	GASKET-ADAPTER LY	1	
		A---172 SERIAL 17256513 THRU 17263458 F172 SERIAL F17200805 THRU F17201234		

This page intentionally left blank.

Fuel System

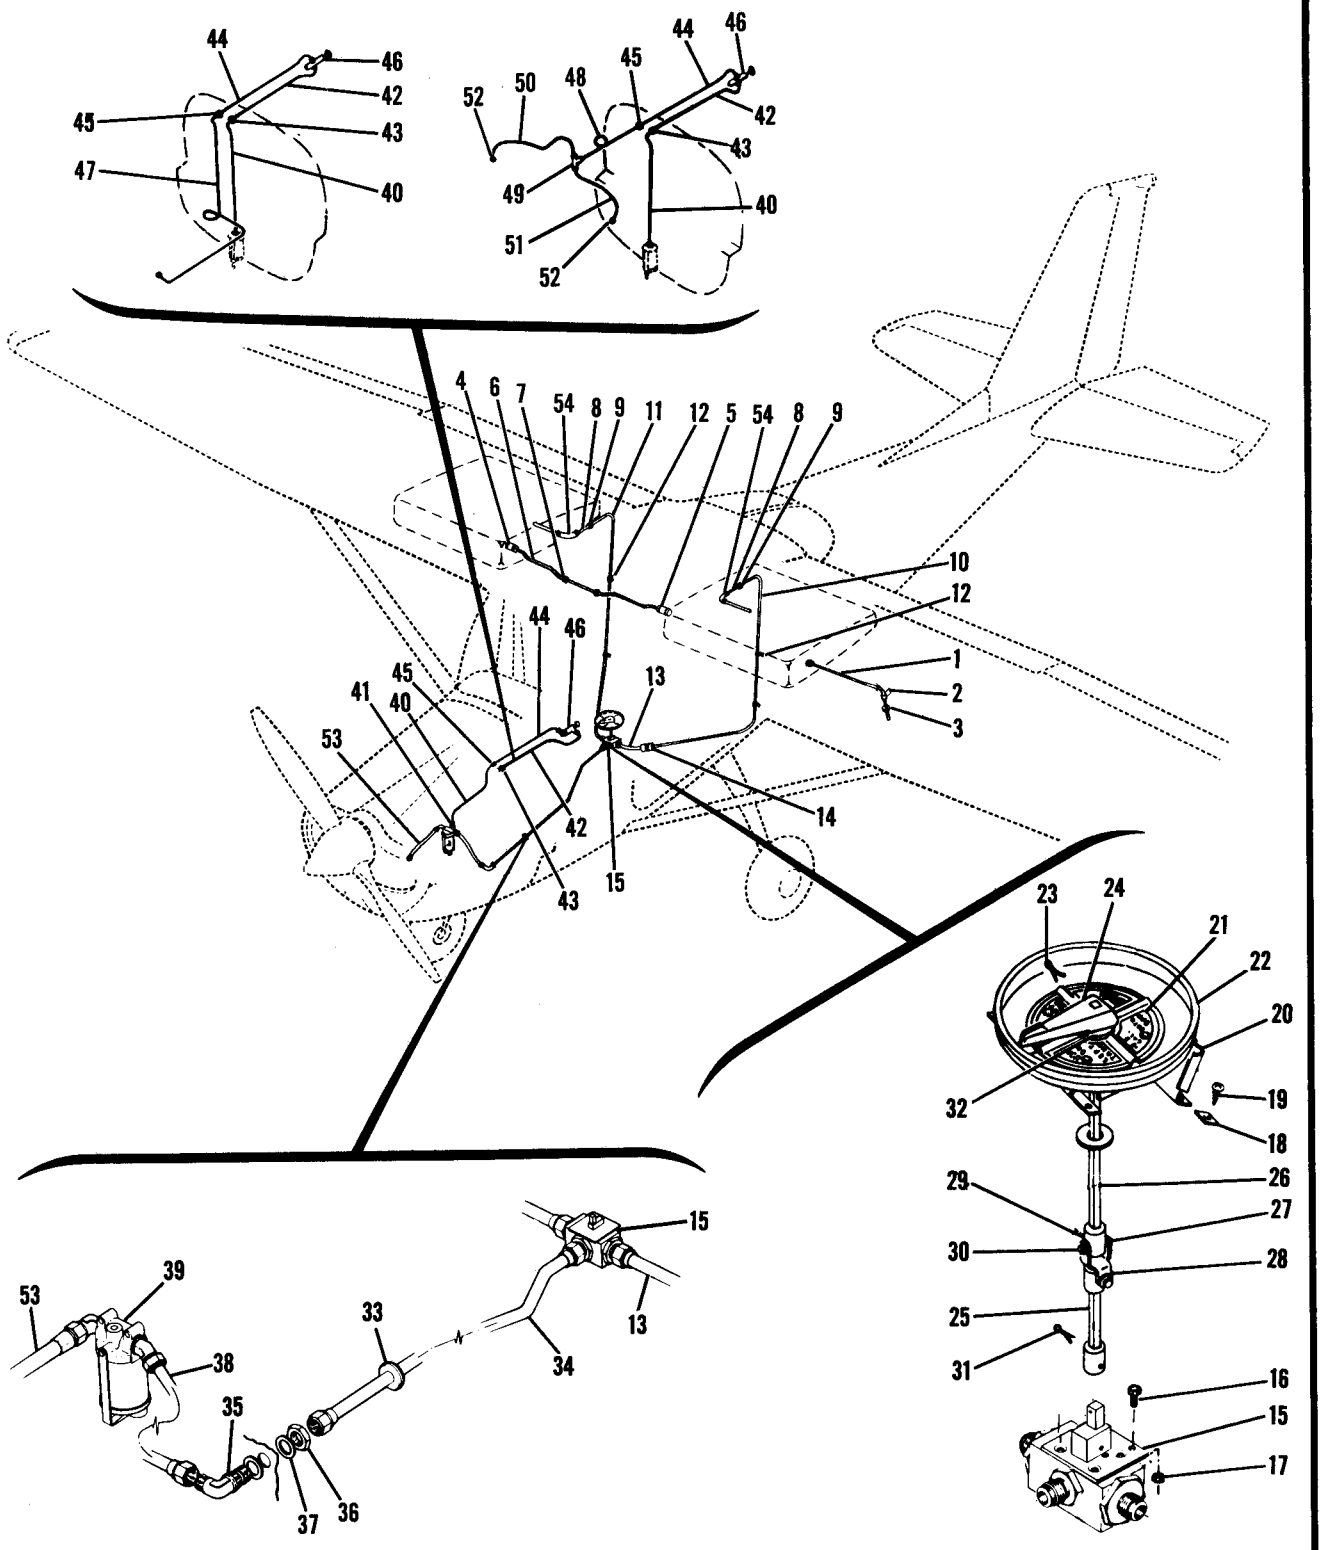

172 SERIAL 17249545 THRU 17251822
P172 SERIAL P17257120 THRU P17257188

Figure 165. Fuel System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
165 -		FUEL SYSTEM INSTALLATION	NP	C
- 1	0523559-8	LINE ASSEMBLY-VENT	1	A
	0523559-6	LINE ASSEMBLY-VENT	1	B
		ATTACHING PARTS		
- 2	0512006-1	ANGLE	1	
	S1486DG6L	CLAMP	1	
	S1021Z8-8	SCREW	1	
		---*---		
- 3	MS35489-11	GROMMET	1	
- 4	S1495-6-	HOSE 3.0 IN LG BULK ITEM REF S1495-6-3.00	2	
		ATTACHING PARTS		
- 5	S1891-10	CLAMP 8C	2	
		---*---		
- 6	0500106-118	LINE ASSEMBLY-VENT	1	
		ATTACHING PARTS		
- 7	S1591-2	HARNESS BAND UC	2	
		---*---		
- 8	0500106-83	LINE ASSEMBLY-FUEL TANK TO UNION	2	
- 9	AN815-6D	UNION	2	
-10	0500106-179	LINE ASSEMBLY-UNION TO UNION LH	1	
-11	0500106-178	LINE ASSEMBLY-UNION TO UNION RH	1	
		ATTACHING PARTS		
-12	S1485D6	CLAMP TIN	2	
	S1021Z8-8	SCREW	2	
		---*---		
-13	0500106-189	LINE ASSEMBLY-UNION TO SELECTOR VALVE LH	1	
	0500106-177	LINE ASSEMBLY-UNION TO SELECTOR VALVE RH	1	
-14	AN815-6D	UNION	1	
-15	SEE FIG 171	VALVE ASSEMBLY-FUEL SELECTOR	1	
		ATTACHING PARTS		
-16	AN3-4A	BOLT	2	
-17	MS21044N3	NUT	2	
		---*---		
	0511191-4	BRACKET ASSEMBLY-FUEL SELECTOR VALVE	1	A
	0511191-5	BRACKET ASSEMBLY-FUEL SELECTOR VALVE	1	B
		ATTACHING PARTS		
-18	NAS395-18-3	NUT	2	
-19	S1021Z8-6	SCREW	2	
		---*---		
-20	0511190	BRACKET	1	
-21	0511167-13	PLATE ASSEMBLY	1	A
	0511167-15	PLATE ASSEMBLY	1	B
		ATTACHING PARTS		
	S1021Z4-6	SCREW	4	
		---*---		
	0511167-12	PLACARD-FUEL SELECTION	1	A
	0511167-14	PLACARD-FUEL SELECTION	1	B
-22	0511198	CUP	1	
	0511157-19	HANDLE ASSEMBLY-FUEL SELECTOR VALVE	1	
		ATTACHING PARTS		
-23	MS24665-134	PIN-COTTER	1	
		---*---		
-24	0716612-202	HANDLE-FUEL SELECTOR VALVE	1	
	0511157-200	SHAFT ASSEMBLY-FUEL SELECTOR VALVE	1	
-25	0511157-11	SHAFT	1	
-26	0511157-18	SHAFT	1	
-27	0511194-4	PIVOT	2	
-28	0511127	SPACER	1	
-29	AN960-6	WASHER	4	
-30	0425134	PIN	2	
-31	MS24665-136	COTTER PIN	1	
-32	0511195	GUIDE-FUEL SELECTOR VALVE SHAFT	1	
-33	MS35489-15	GROMMET	1	
-34	0500106-344	LINE ASSEMBLY-FUEL SELECTOR VALVE TO FIREWALL	1	

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
165 -35	AN837-8D	ELBOW	1	
		ATTACHING PARTS		
-36	AN924-8D	NUT	1	
-37	AN960D1216	WASHER	2	
		---*---		
-38	0500106-345	LINE ASSEMBLY-ELBOW TO STRAINER	1	
		ATTACHING PARTS		
	MS20823-8D	ELBOW	1	
		---*---		
-39	SEE FIG 169	FUEL STRAINER & DRAIN CONTROL INSTL	NP	
-40	0500118-98	LINE ASSEMBLY-STRAINER TO FIREWALL	1	
		ATTACHING PARTS		
	AN742D2	CLAMP TIN	1	
	NAS446-4-3	NUT	1	
	S1021Z8-6	SCREW	1	
-41	AN816-2D	NIPPLE	1	
		---*---		
-42	0500106-242	LINE ASSEMBLY-FIREWALL TO PRIMER LH	1	
		ATTACHING PARTS		
-43	AN832-2D	UNION	1	
	AN924-2D	NUT	1	
	AN960-516	WASHER	1	
		---*---		
-44	0500106-243	LINE ASSEMBLY-FIREWALL TO PRIMER RH	1	
		ATTACHING PARTS		
-45	AN832-2D	UNION	1	
	AN924-2D	NUT	1	
	AN960-516	WASHER	1	
		---*---		
-46	0311538-12	PRIMER ASSEMBLY-ENGINE	1	
	S1240-5	KNOB-PRIMER	1	
-47	0500118-105	LINE ASSEMBLY-FIREWALL TO MANIFOLD	1	A
-48	0500106-308	LINE ASSEMBLY-FIREWALL TO BAFFLE	1	B
-49	AN384-2D	TEE	1	B
	AN924-2D	NUT	1	B
	AN960D516	WASHER	1	B
-50	0500106-309	LINE ASSEMBLY-TEE TO CYLINDER	1	B
-51	0500106-310	LINE ASSEMBLY-TEE TO CYLINDER	1	B
-52	AN4022-1	NIPPLE-PRIMING JET	2	B
-53	S1167-8-0240	HOSE ASSEMBLY-STRAINER TO CARBURETOR	1	A
	S1167-8-0220	HOSE ASSEMBLY-STRAINER TO CARBURETOR	1	B
		ATTACHING PARTS		
	MS20822-8D	ELBOW	2	
		---*---		
-54	0422130	STRAINER ASSEMBLY-FUEL TANK	2	

A---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
B---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
C---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
166 -		FUEL SYSTEM INSTALLATION	NP	A
- 1	0523559-8	LINE ASSEMBLY-VENT	1	
		ATTACHING PARTS		
- 2	0512006-1	ANGLE	1	
	S1486DG6L	CLAMP	1	
	S1021Z8-8	SCREW	1	
		---*---		
- 3	MS35489-11	GROMMET	1	
- 4	S1495-6	HOSE 3.00 IN LG BULK ITEM REF S-1431-6-3.00	2	
		ATTACHING PARTS		
- 5	S1891-10	CLAMP BC	4	
		---*---		
- 6	0500118-1	LINE ASSEMBLY-VENT	1	
		ATTACHING PARTS		
- 7	S1591-2	HARNESS BAND UC	2	
		---*---		
- 8	0500106-83	LINE ASSEMBLY-FUEL TANK TO UNION	2	
- 9	AN815-6D	UNION	2	
-10	0500106-178	LINE ASSEMBLY-UNION TO UNION LH	1	D
	0500118-42	LINE ASSEMBLY-UNION TO UNION LH	1	E
-11	0500106-179	LINE ASSEMBLY-UNION TO UNION RH	1	D
	0500118-43	LINE ASSEMBLY-UNION TO UNION RH	1	E
		ATTACHING PARTS		
-12	MS21919DG6	CLAMP TIN	2	
	S1021Z8-8	SCREW	2	
		---*---		
-13	0500118-29	LINE ASSEMBLY-UNION TO UNION LH	1	
-14	0500118-30	LINE ASSEMBLY-UNION TO UNION RH	1	
-15	0500118-33	LINE ASSEMBLY-UNION TO VALVE LH	1	
-16	0500118-34	LINE ASSEMBLY-UNION TO VALVE RH	1	
-17	AN815-6D	UNION	4	
-18	0513120-8	VALVE ASSEMBLY-FUEL SELECTOR SEE FIGURE 171	1	
		ATTACHING PARTS		
-19	AN515-8R8	SCREW	2	
		---*---		
-20	0511253-1	BRACKET ASSEMBLY-FUEL SELECTOR VALVE	1	
	NAS697A08	NUTPLATE	2	
	0513382-11	DRIVE ASSEMBLY-FUEL SELECTOR	1	G
	0513382-16	DRIVE ASSEMBLY-FUEL SELECTOR	1	H
		ATTACHING PARTS		
-21	NAS561P3-8	PIN-SPRING	1	
		---*---		
-22	0513124-3	HOUSING-POSITIONING BALL & SPRING	1	
-23	0513382-13	SHAFT-FUEL SELECTOR	1	
-24	0513382-12	SHAFT-FUEL SELECTOR	1	G
-24A	0516008-1	SHAFT-FUEL SELECTOR	1	H
-25	0513382-15	KNUCKLE	2	
-26	0716612-3	HANDLE-FUEL SELECTOR	1	G
		ATTACHING PARTS		
-27	NAS561C2-10	PIN-SPRING	1	G
		---*---		
-27A	0716623-2	HANDLE-FUEL SELECTOR	1	H
		ATTACHING PARTS		
-27B	AN525-832P6	SCREW	1	H
-27C	AN936A8	WASHER	1	H
		---*---		
-27D	0716624-1	CAP	1	H
-28	S272-207	BALL	1	
	0513120-1	SPRING	1	
-29	0500242-1	BRACKET-FUEL SELECTOR GUIDE	1	
		ATTACHING PARTS		
-30	AN520-10R7	SCREW	2	
-31	MS21044N3	NUT	2	
-32	AN960-10	WASHER	2	
		---*---		

CONTINUED ON NEXT PAGE

Fuel System (Cont)

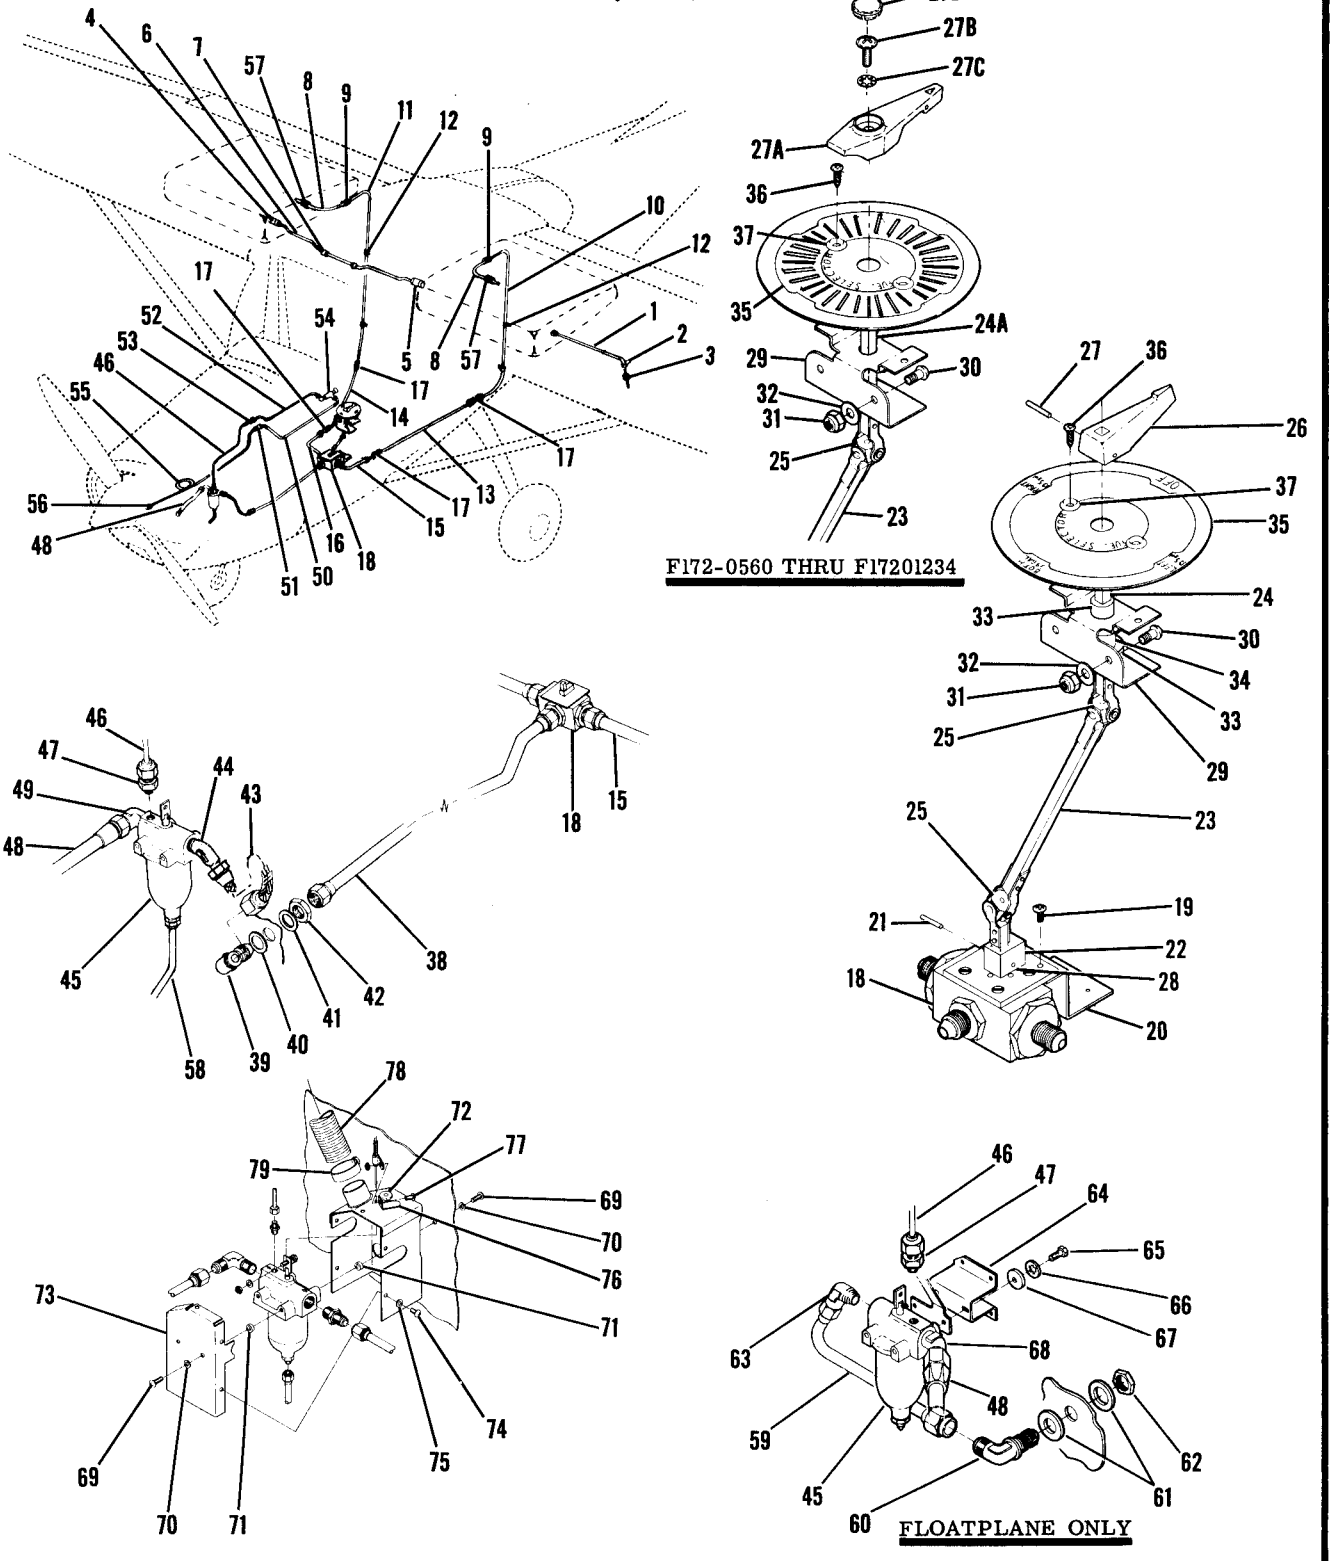

172 SERIAL 17251823 THRU 17256512

F172 SERIAL F172-0086 THRU F17200753

Figure 166. Fuel System Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
166 -33	0511195	GUIDE	2	G
-34	NAS43DD6-35	SPACER	1	G
-35	0500246-11	PLACARD ASSEMBLY-FUEL SELECTOR VALVE	1	G
-35A	0716615-7	PLACARD ASSEMBLY-FUEL SELECTOR VALVE	1	H
		ATTACHING PARTS		
-36	S1023A6-6C	SCREW	2	
-37	S1067C1	WASHER	2	
		---*---		
-38	0500118-31	LINE ASSEMBLY-FUEL SELECTOR VALVE TO FIREWALL	1	
-39	AN837-8D	ELBOW	1	
		ATTACHING PARTS		
-40	AN960D1216L	WASHER	1	
-41	AN960D1216L	WASHER	1	
-42	AN924-8D	NUT	1	
		---*---		
-43	S1236-8-0134	LINE ASSEMBLY-ELBOW TO FUEL STRAINER	1	
		ATTACHING PARTS		
-44	MS20823-8D	ELBOW	1	
		---*---		
-45	SEE FIG 169	FUEL STRAINER & DRAIN CONTROL INSTALLATION	NP	
-46	0500118-10	LINE ASSEMBLY-PRIMER	1	B
	0500118-39	LINE ASSEMBLY-PRIMER WEU 0500118-98	1	C
	0500118-98	LINE ASSEMBLY-PRIMER	1	
		ATTACHING PARTS		
	AN742D2	CLAMP	1	
	S1021Z8-6	SCREW	1	
	NAS446-4-3	NUT	1	
-47	AN816-2D	NIPPLE	1	
		---*---		
-48	S1167-8-0240	HOSE ASSEMBLY-STRAINER TO CARBURETOR	1	
		ATTACHING PARTS		
-49	MS20822-8D	ELBOW	1	
		---*---		
-50	0500106-365	LINE ASSEMBLY-FIREWALL TO PRIMER LH WEU 0500118-109	1	
	0500118-109	LINE ASSEMBLY-FIREWALL TO PRIMER LH	1	
		ATTACHING PARTS		
-51	AN832-2D	UNION	1	
	AN924-2D	NUT	1	
	AN960-516	WASHER	2	
		---*---		
-52	0500106-366	LINE ASSEMBLY-FIREWALL TO PRIMER RH WEU 0500118-110	1	
	0500118-110	LINE ASSEMBLY-FIREWALL TO PRIMER RH	1	
		ATTACHING PARTS		
-53	AN832-2D	UNION	1	
	AN924-2D	NUT	1	
	AN960-516	WASHER	2	
		---*---		
-54	0311538-12	PRIMER ASSEMBLY-ENGINE WHEN EXHAUSTED USE C291502-0101	1	G
	S1240-5	KNOB-PRIMER	1	G
	C291502-0101	PRIMER ASSEMBLY-ENGINE	1	J
	S1752-1	KNOB	1	H
	C291502-0103	PRIMER ASSEMBLY-ENGINE	1	K
	S1974-1	KNOB-PRIMER	1	K
-55	0500106-304	LINE ASSEMBLY-FIREWALL TO MANIFOLD WEU 0500118-105	1	
	0500118-105	LINE ASSEMBLY-FIREWALL TO MANIFOLD	1	
-56	AN4022-1	NIPPLE-PRIMING JET	1	
-57	0422130	STRAINER ASSEMBLY-FUEL TANK	2	
-58	0500118-93	LINE ASSEMBLY DRAIN	1	
-59	0500118-78	LINE ASSEMBLY-FIREWALL TO STRAINER FLOATPLANE ONLY	1	
-60	AN833-8D	ELBOW FLOATPLANE ONLY	1	
		ATTACHING PARTS		
-61	AN960D1216L	WASHER	2	
-62	AN924-8D	NUT	1	
		---*---		
-63	MS20823-8D	ELBOW FLOATPLANE ONLY	1	
-64	0513129	BRACKET-FUEL STRAINER FLOATPLANE ONLY	1	
-65	MS20074-03-04	BOLT FLOATPLANE ONLY	2	
-66	AN936A10	WASHER FLOATPLANE ONLY	2	
-67	AN970-3	WASHER FLOATPLANE ONLY	2	
-68	MS20823-8D	ELBOW FLOATPLANE ONLY	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
166 -		SHROUD INSTALLATION-FUEL STRAINER	NP	F
		ATTACHING PARTS		
-69	AN520-10R10	SCREW	4	
-70	AN960-PD10L	WASHER	4	
-71	NAS43DD3-12	SPACER	4	
		---*---		
	0509002-1	SUPPORT ASSEMBLY	1	
-72	MS35489-134	GROMMET	1	
-73	0509002-2	COVER ASSEMBLY	1	
		ATTACHING PARTS		
-74	AN520-8R6	SCREW	5	
-75	AN960-PD6L	WASHER	5	
		---*---		
	NAS696A08	NUTPLATE	2	
	NAS697A08	NUTPLATE	3	
-76	AN742D3	BRACKET	1	
		ATTACHING PARTS		
-77	AN520-10R8	SCREW	1	
	MS21044N3	NUT	1	
		---*---		
-78	S1053E12T	DUCT-FLEX 25.00 IN LG BULK ITEM REF S1053E12T25.00	1	
		ATTACHING PARTS		
-79	NAS397-28	CLAMP	2	
		---*---		
		A---172 SERIAL 17251823 THRU 17256512 F172 SERIAL F172-0086 THRU F17200753 B---172 SERIAL 17251823 THRU 17252667 F172 SERIAL F172-0086 THRU F172-0179 C---172 SERIAL 17252668 THRU 17256512 F172 SERIAL F172-0180 THRU F17200753 D---172 SERIAL 17251823 THRU 17253392 F172 SERIAL F172-0086 THRU F172-0179 E---172 SERIAL 17253393 THRU 17256512 F172 SERIAL F172-0180 THRU F17200753 F---172 SERIAL 17252534 THRU 17256512 G---172 SERIAL 17251823 THRU 17256512 F172 SERIAL F172-0086 THRU F172-0559 H---F172 SERIAL F172-0560 THRU F17200753 J---F172 SERIAL F172-0560 THRU F172-0654 K---F172 SERIAL F17200655 THRU F17200753		

This page intentionally left blank.

Fuel System (Cont)

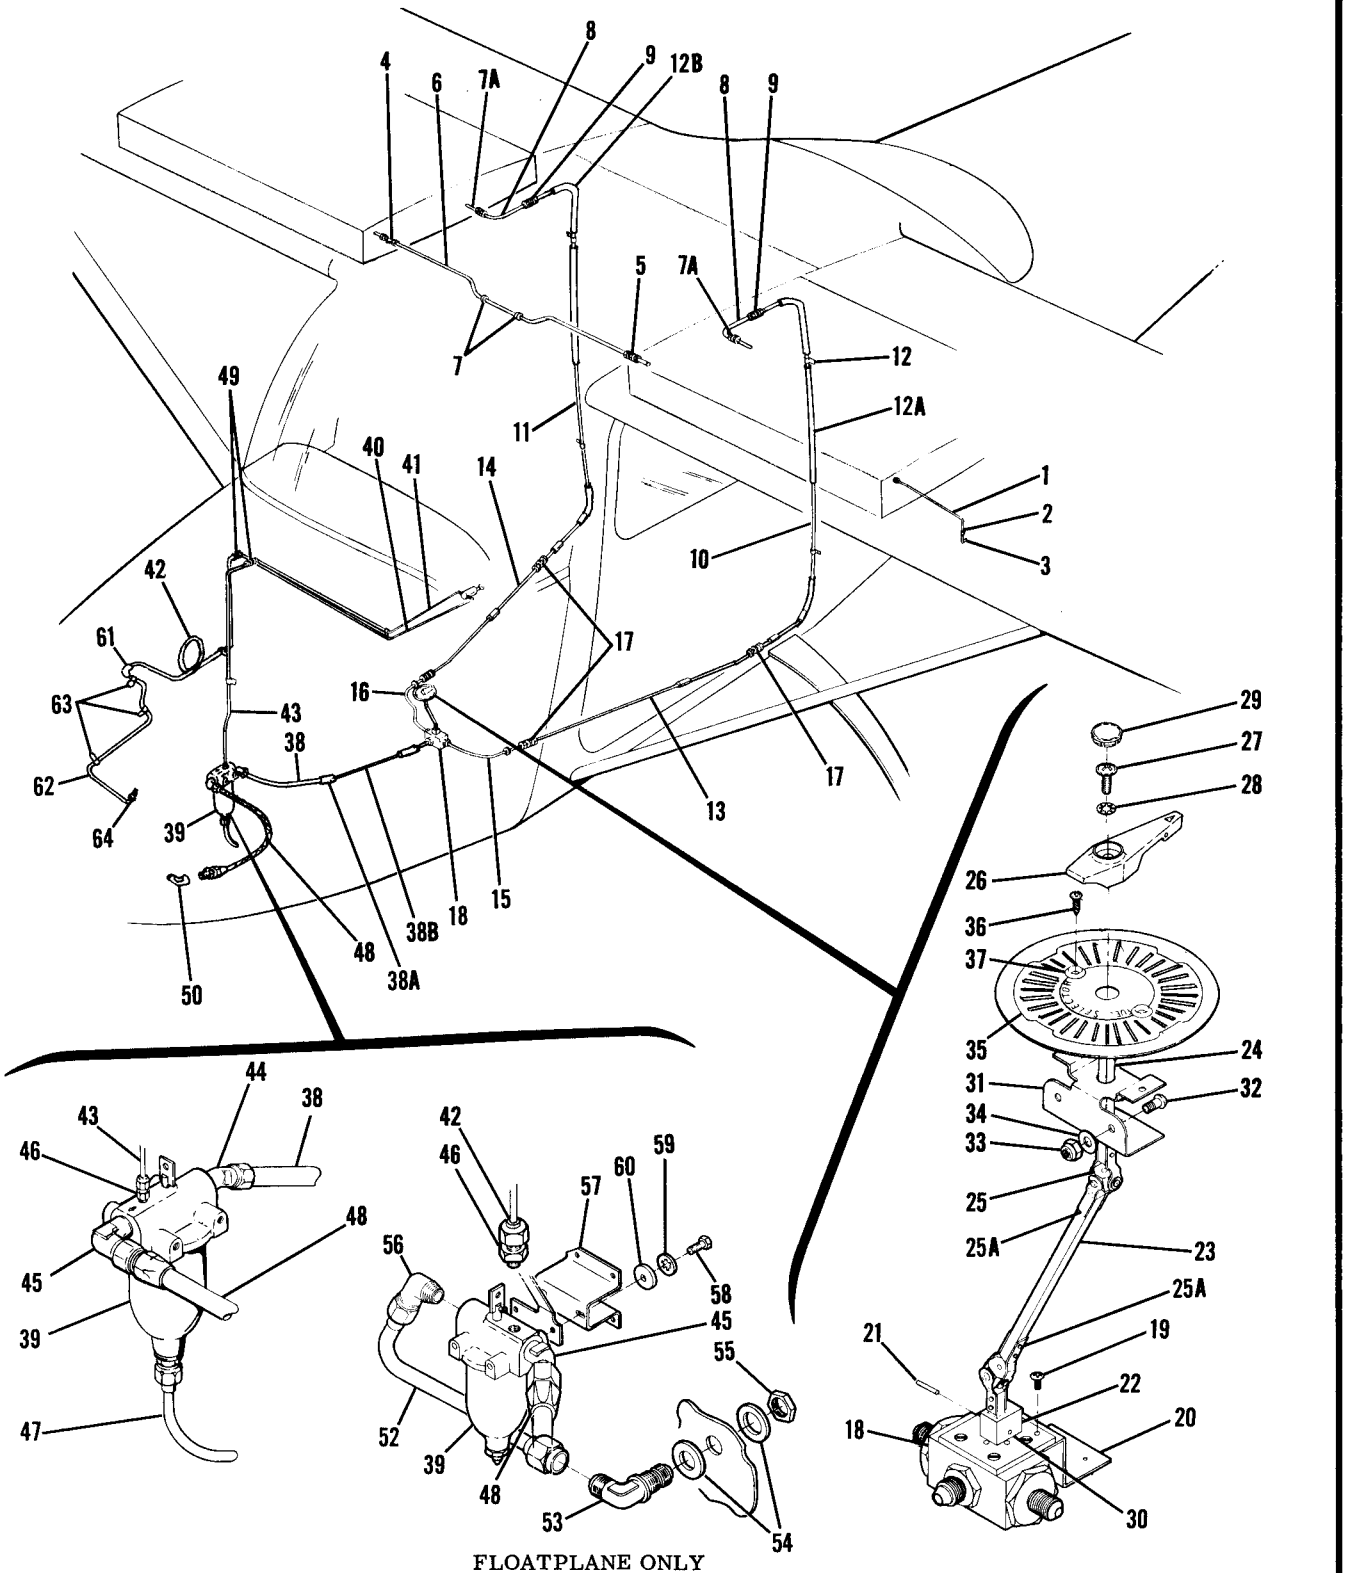

FLOATPLANE ONLY

172 SERIAL 17256513 THRU 17258855

Figure 167. Fuel System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
167 -		FUEL SYSTEM INSTALLATION	NP	A
- 1	0523559-8	LINE ASSEMBLY-VENT	1	
		ATTACHING PARTS		
- 2	0512006-1	ANGLE	1	
	S1486DG6L	CLAMP	1	
	S1021Z8-8	SCREW	1	
		---*---		
- 3	MS35489-11	GROMMET	1	
- 4	S1495-6	HOSE 3.00 IN LG BULK ITEM REF S-1495-6-3.00	2	
		ATTACHING PARTS		
- 5	S1891-6	CLAMP BC	4	
		---*---		
- 6	0500118-1	LINE ASSEMBLY-VENT	1	
	0500118-80	LINE ASSEMBLY-VENT USED WITH LONG RANGE TANKS	1	
		ATTACHING PARTS		
- 7	S1591-2	HARNESS BAND UC	2	
		---*---		
- 7A	0422130	STRAINER-FUEL TANK	2	
- 8	0500106-83	LINE ASSEMBLY-FUEL TANK	2	
- 9	AN815-6D	UNION	2	
-10	0500118-42	LINE ASSEMBLY-UNION TO UNION LH	1	
-11	0500118-43	LINE ASSEMBLY-UNION TO UNION RH	1	
		ATTACHING PARTS		
-12	S1486DG6U	CLAMP	1	
	S1486DG7U	CLAMP	1	
	S1021Z8-8	SCREW	2	
		---*---		
-12A	S292-12	SLEEVE 23.50 IN LG BULK ITEM REF S292-12-23.50	2	B
-12B	S292-12	SLEEVE 18.00 IN LG BULK ITEM REF S292-12-18.00	2	B
-13	0500118-29	LINE ASSEMBLY-UNION TO UNION LH	1	
-14	0500118-30	LINE ASSEMBLY-UNION TO UNION RH	1	
-15	0500118-33	LINE ASSEMBLY-UNION TO VALVE LH	1	
-16	0500118-34	LINE ASSEMBLY-UNION TO VALVE RH	1	
-17	AN815-6D	UNION	4	
-18	SEE FIG 171	VALVE ASSEMBLY-FUEL SELECTOR	1	
		ATTACHING PARTS		
-19	AN515-8R8	SCREW	2	
		---*---		
-20	0511253-1	BRACKET ASSEMBLY-FUEL SELECTOR VALVE	1	
	NAS697A08	NUTPLATE	2	
	0513382-16	DRIVE ASSEMBLY-FUEL SELECTOR	1	
		ATTACHING PARTS		
-21	NAS561P3-8	PIN-SPRING	1	
		---*---		
-22	0513124-3	HOUSING-POSITIONING BALL & SPRING	1	
-23	0513382-13	SHAFT-FUEL SELECTOR	1	
-24	0516008-1	SHAFT-FUEL SELECTOR	1	
-25	0513382-15	KNUCKLE	1	
-25A	0513382-14	PIVOT-SHAFT	8	
-26	0716623-2	HANDLE-FUEL SELECTOR	1	
		ATTACHING PARTS		
-27	AN525-832P6	SCREW	1	
-28	AN936A8	WASHER	1	
		---*---		
-29	0716624-1	CAP	1	
-30	S272-207	BALL	1	
	0513120-1	SPRING	1	
-31	0500242-2	BRACKET-FUEL SELECTOR GUIDE	1	
		ATTACHING PARTS		
-32	AN520-10R7	SCREW	2	
-33	MS21044N3	NUT	2	
-34	AN960-10	WASHER	2	
		---*---		
-35	0716615-7	PLACARD ASSEMBLY-FUEL SELECTOR VALVE	1	
	0716615-9	PLACARD ASSEMBLY-FUEL SELECTOR VALVE LONG RANGE WING	1	
		ATTACHING PARTS		
-36	S1023A6-6C	SCREW	2	
-37	S1067C1	WASHER	2	
		---*---		

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
167 -38	0500118-74	LINE ASSEMBLY-FUEL SELECTOR VALVE TO STRAINER	1	
-38A	AN815-8D	UNION	1	
-38B	0500118-75	LINE ASSEMBLY-FUEL SELECTOR VALVE TO STRAINER	1	
-39	SEE FIG 170	FUEL STRAINER & DRAIN CONTROL INSTALLATION	NP	
-40	0500106-365	LINE ASSEMBLY-PRIMER	1	
-41	0500106-366	LINE ASSEMBLY-PRIMER	1	
		ATTACHING PARTS		
	S1155-2	CLAMP	2	
	S1021Z8-8	SCREW	1	
	NAS446-4-3	NUT	1	
		---*---		
-42	0500118-102	LINE ASSEMBLY-PRIMER	1	
-43	0500118-99	LINE ASSEMBLY-PRIMER	1	
		ATTACHING PARTS		
	AN742D2	CLAMP	1	
	S1021Z8-6	SCREW	1	
	NAS446-4-3	NUT	1	
		---*---		
-44	MS20823-8D	ELBOW	1	
-45	MS20822-8D	ELBOW	1	
-46	AN816-2D	NIPPLE	1	
-47	0500118-95	LINE-STRAINER DRAIN	1	
-48	S1167-8-0240	LINE ASSEMBLY-STRAINER TO CARBURETOR	1	
-49	AN832-2D	UNION	2	
	AN924-2D	NUT	2	
	AN960-516	WASHER	4	
-50	8-4VTX-S	ELBOW	1	
-51		DELETED, NEVER USED		
-52	0500118-78	LINE ASSEMBLY-FIREWALL TO STRAINER FLOATPLANE ONLY	1	
-53	AN833-8D	ELBOW FLOATPLANE ONLY	1	
		ATTACHING PARTS		
-54	AN960-D1216L	WASHER	2	
-55	AN924-8D	NUT	1	
		---*---		
-56	MS20823-8D	ELBOW FLOATPLANE ONLY	2	
-57	0513129	BRACKET-FUEL STRAINER FLOATPLANE ONLY	1	
-58	AN73A4	BOLT FLOATPLANE ONLY	2	
-59	AN936A10	WASHER FLOATPLANE ONLY	2	
-60	AN970-3	WASHER FLOATPLANE ONLY	2	
-61	AN821-2D	ELBOW	1	
-62	1700121-48	LINE ASSEMBLY TO CYLINDER	1	
		ATTACHING PARTS		
-63	0550100-8	BRACKET	3	
	S1485D2L	CLAMP	3	
	S1021Z8-5C	SCREW	3	
		---*---		
-64	AN4022-1	JET	1	


A---172 SERIAL 17256513 THRU 17258855
B---172 SERIAL 17258045 THRU 17258855

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
168 -		FUEL SYSTEM	NP	A
- 1	0523559-8	LINE ASSEMBLY-VENT	1	
		ATTACHING PARTS		
- 2	0512006-1	ANGLE	1	
	S1846DG6L	CLAMP	1	
	S1021Z8-8	SCREW	1	
		---*---		
- 3	MS35489-11	GROMMET	1	
- 4	S1495-6	HOSE 3.0 IN LG BULK ITEM REF S1495-6-3.00	4	
	S1495-6	HOSE 3.0 IN LG BULK ITEM REF S1495-6-3.00	2	
		LONG RANGE TANK ONLY		
		ATTACHING PARTS		
- 5	S1891-6	CLAMP	2	
		---*---		
- 6	S1495-6	HOSE 3.0 IN LG BULK ITEM REF S1495-6-3.00	2	
		ATTACHING PARTS		
- 7	S1891-6	CLAMP	2	
		---*---		
- 8	0500118-118	LINE ASSEMBLY-VENT	1	B
	0500118-124	LINE ASSEMBLY-VENT	1	C
- 9	0500118-119	LINE ASSEMBLY-VENT LONG RANGE TANKS	1	B
	0500118-123	LINE ASSEMBLY-VENT LONG RANGE TANKS	1	C
		ATTACHING PARTS		
-10	S1591-2	HARNESS BAND	2	B
-11	0513399-1	BRACKET	2	C
	MS21919DG6	CLAMP	2	C
	AN520-10R8	SCREW	2	C
	AN960-10	WASHER	2	C
	MS21044N3	NUT	2	C
		---*---		
-11A	0422130	STRAINER-FUEL TANK	2	
-12	0500106-83	LINE ASSEMBLY-FUEL TANK	2	
-13	AN815-6D	UNION	2	
-14	0556020-1	LINE ASSEMBLY-FUEL LH UNION TO UNION	1	
-15	0556020-2	LINE ASSEMBLY-FUEL RH UNION TO UNION	1	
		ATTACHING PARTS		
-16	A3047A6-92	CLAMP-TIN	1	
	S1021Z8-8	SCREW	1	
		---*---		
-17	AN815-6D	UNION	2	
-18	0500118-116	LINE ASSEMBLY-FUEL LH UNION TO UNION	1	
-19	0500118-117	LINE ASSEMBLY-FUEL RH UNION TO UNION	1	
		ATTACHING PARTS		
-20	A3047A6-92	CLAMP TIN	1	
	S121Z8-8	SCREW	1	
		---*---		
-20A	MS35489-106S	GROMMET	2	
-21	S292-12-	SLEEVE * IN LG BULK ITEM REF S292-12-*	AR	
-22	0556020-3	LINE ASSEMBLY-FUEL	2	
-23	0556020-9	LINE ASSEMBLY-FUEL LONG RANGE TANK	2	
-24	AN824-6D	TEE LONG RANGE TANK	2	
-25	0500118-29	LINE ASSEMBLY-UNION TO UNION LH	1	
-26	0500118-30	LINE ASSEMBLY-UNION TO UNION RH	1	
-26A	S1486DG6U	CLAMP	2	
-27	0500118-33	LINE ASSEMBLY-UNION TO UNION LH	1	
-28	0500118-34	LINE ASSEMBLY-UNION TO UNION RH	1	
-29	AN815-6D	UNION	4	
-30	SEE FIG 171	VALVE ASSEMBLY-FUEL SELECTOR	1	
		ATTACHING PARTS		
-31	AN515-8R8	SCREW	2	
		---*---		
-32	0511253-1	BRACKET ASSEMBLY-FUEL SELECTOR VALVE	1	
	MS21044N08	NUTPLATE	2	
	0513382-16	DRIVE ASSEMBLY-FUEL SELECTOR	1	
		ATTACHING PARTS		
-33	NAS561P3-8	PIN-SPRING	1	
		---*---		
-34	0513124-3	HOUSING-POSITIONING BALL & SPRING	1	


CONTINUED ON NEXT PAGE

Fuel system (Cont)

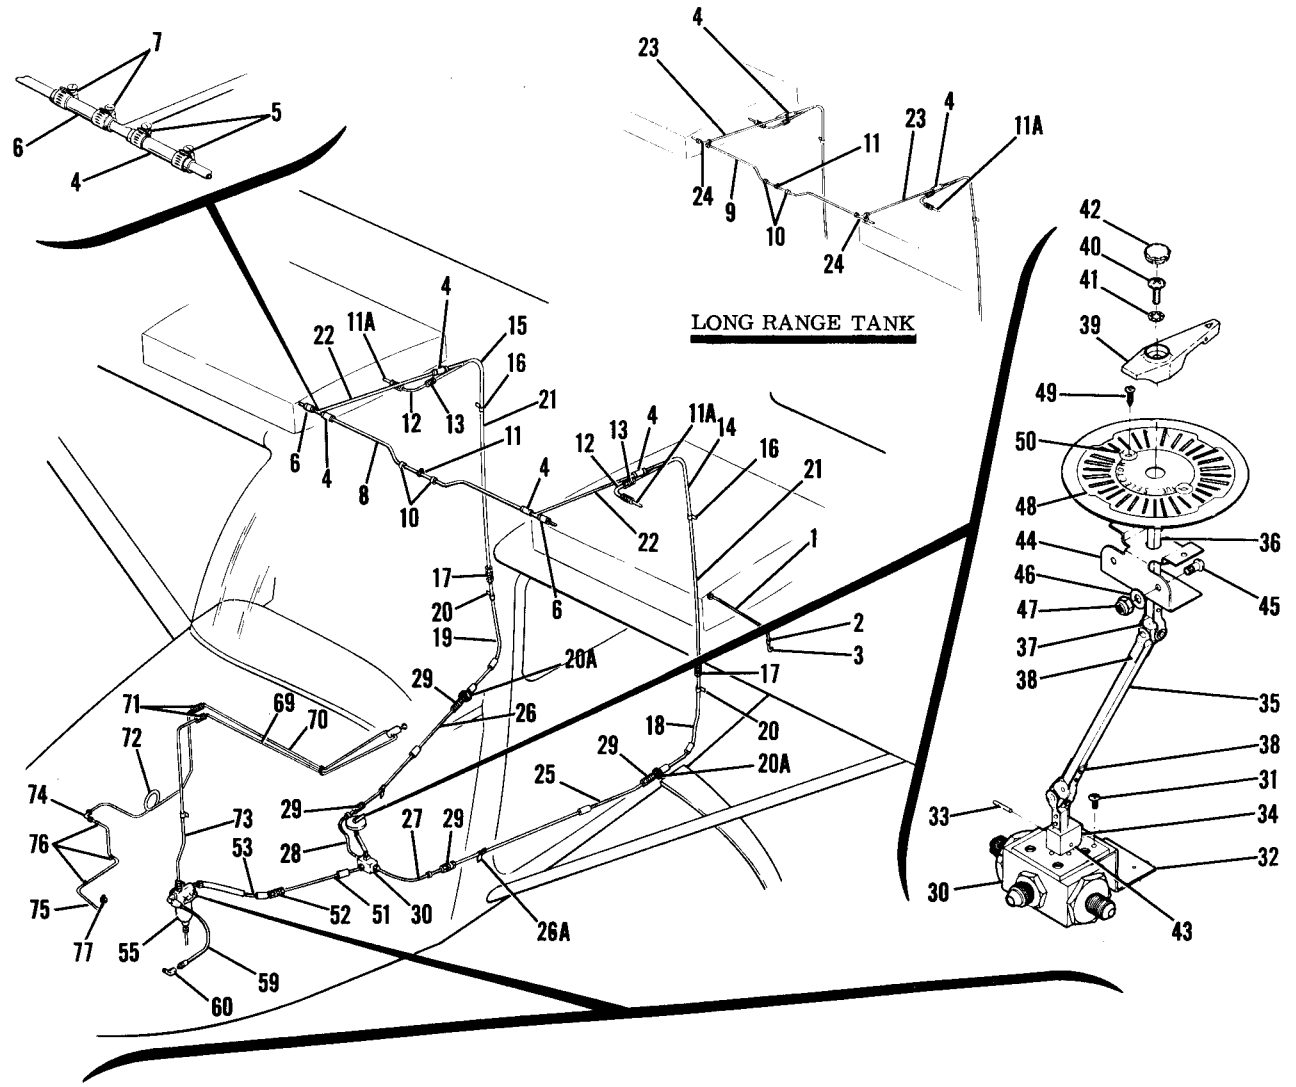


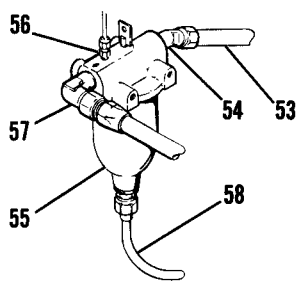

17259224 THRU 17263458
F1720805 THRU F17201234

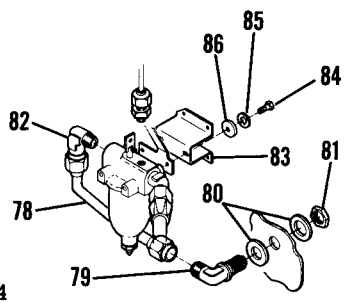

FLOATPLANE ONLY

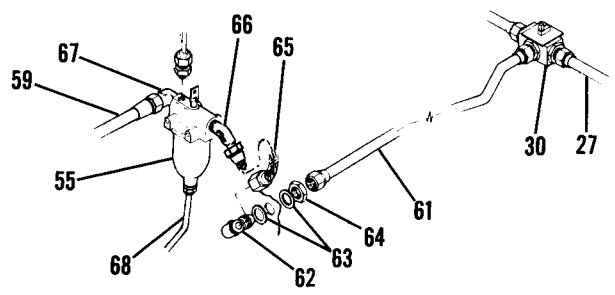

F17200754 THRU F17200804

172 SERIAL 17258856 THRU 17263458
F172 SERIAL F17200754 THRU F17201234

Figure 168. Fuel System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
168 -35	0513382-13	SHAFT-FUEL SELECTOR	1	
-36	0516008-1	SHAFT-FUEL SELECTOR	1	
-37	0513382-15	KNUCKLE	1	
-38	0513382-14	PIVOT-SHAFT	1	
-39	0716623-2	HANDLE-FUEL SELECTOR	1	
		ATTACHING PARTS		
-40	AN525-832P6	SCREW	1	
-41	AN936A8	WASHER	1	
		---*---		
-42	0716624-1	CAP	1	
-43	S272-207	BALL-DETENT	2	
	0513120-1	SPRING	1	
-44	0500242-2	BRACKET-FUEL SELECTOR GUIDE	1	
		ATTACHING PARTS		
-45	AN520-10R7	SCREW	2	
-46	AN960-10	WASHER	2	
-47	MS21044N3	NUT	2	
		---*---		
-48	0716615-7	PLACARD ASSEMBLY-FUEL SELECTOR VALVE	1	
	0716615-9	PLACARD ASSEMBLY-FUEL SELECTOR VALVE LONG RANGE TANKS	1	
		ATTACHING PARTS		
-49	S1023A6-6C	SCREW	2	
-50	S1067C1	WASHER	2	
		---*---		
-51	0500118-75	LINE ASSEMBLY-FUEL SELECTOR VALVE TO UNION	1	D
-52	AN515-8D	UNION	1	D
-53	0500118-74	LINE ASSEMBLY-UNION TO STRAINER	1	D
-54	MS20823-8D	ELBOW	1	D
-55	SEE FIG 170	FUEL STRAINER & DRAIN CONTROL INSTALLATION	1	
-56	AN816-2D	NIPPLE	1	D
-57	MS20822-8D	ELBOW	1	D
-58	0500118-95	LINE-STRAINER DRAIN	1	D
-59	S1167-8	HOSE ASSEMBLY 24 IN LG BULK ITEM REF S1167-8-0240	1	
-60	8-4VTX-S	ELBOW	1	
-61	0500118-31	LINE ASSEMBLY FUEL SELECTOR TO ELBOW	1	E
-62	AN837-8D	ELBOW	1	E
		ATTACHING PARTS		
-63	AN960D1216L	WASHER	2	
-64	AN924-8D	NUT	1	
		---*---		
-65	S1236-8	HOSE 13.4 IN LG BULK ITEM REF S1236-8-0134	1	E
		ATTACHING PARTS		
-66	MS20823-8D	ELBOW	1	
		---*---		
-67	MS20822-8D	ELBOW	1	E
-68	0500118-93	LINE ASSEMBLY-STRAINER DRAIN	1	E
-69	0500118-109	LINE ASSEMBLY-PRIMER	1	
-70	0500118-110	LINE ASSEMBLY-PRIMER	1	
		ATTACHING PARTS		
	S1155-2	CLAMP	2	
	S1021Z8-8	SCREW	1	
	NAS446-4-3	NUT	1	
		---*---		
-71	AN832-2D	UNION	2	
	AN924-2D	NUT	2	
	AN960-516	WASHER	4	
-72	0500118-102	LINE ASSEMBLY-PRIMER	1	D
	0500118-105	LINE ASSEMBLY-PRIMER	1	E
-73	0500118-99	LINE ASSEMBLY-PRIMER	1	D
	0500118-98	LINE ASSEMBLY-PRIMER	1	E
		ATTACHING PARTS		
	AN742D2	CLAMP	1	
	S1021Z8-6	SCREW	1	
	NAS446-4-3	NUT	1	
		---*---		

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
168 -74	AN821-2D	ELBOW	1	D
-75	1700121-96	LINE ASSEMBLY-PRIMER TO CYLINDER	1	D
		ATTACHING PARTS		
-76	0550100-8	BRACKET	3	
	S1485D2L	CLAMP	3	
	S1021Z8-5C	SCREW	3	
		---*---		
-77	AN4022-1	JET	1	D
-78	0500118-78	LINE ASSEMBLY-FIREWALL TO STRAINER FLOATPLANE ONLY	1	
-79	AN833-8D	ELBOW FLOATPLANE ONLY	1	
		ATTACHING PARTS		
-80	AN960D1216L	WASHER	2	
-81	AN924-8D	NUT	1	
		---*---		
-82	MS20823-8D	ELBOW FLOATPLANE ONLY	2	
-83	0513129	BRACKET-FUEL STRAINER FLOATPLANE ONLY	1	
-84	MS20074-03-04	BOLT FLOATPLANE ONLY	2	
-85	AN936A10	WASHER FLOATPLANE ONLY	2	
-86	AN970-3	WASHER FLOATPLANE ONLY	2	

A---172 SERIAL 17258830, 17258856 THRU 17263458
F172 SERIAL F17200754 THRU F17201234
B---172 SERIAL 17258830, 17258856 THRU 17259223
F172 SERIAL F17200754 ONLY
C---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234
D---172 SERIAL 17258830, 17258856 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
E---F172 SERIAL F17200754 THRU F17201234

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
169 -		FUEL STRAINER & DRAIN CONTROL INSTALLATION	NP	C
	0511199-48	STRAINER ASSEMBLY GARW 33-199R95B	1	A
		ATTACHING PARTS		
- 1	AN4-14A	BOLT	2	A
- 2	AN960-416L	WASHER	2	A
- 3	MS21042L4	NUT	2	A
		---*---		
- 4	33-199-902	CAP ASSEMBLY GARW	1	
- 5	33-199-909	SCREEN GARW	1	
- 6	33-199-5	GLASS BOWL GARW	1	
- 7	33-199-6	GASKET GARW	2	
- 8	33-199-1	BOTTOM GARW	1	
- 9	33-199-45	SET SCREW GARW	1	
-10	33-199-8	NUT GARW	1	
	0511199-41	VALVE ASSEMBLY-DRAIN	1	A
-11	MS24665-5	PIN-COTTER	1	
-12	MS29513-007	O RING	1	
-13	0851592-1	SHAFT	1	
-14	0851583-2	PLUNGER	1	
-15	0851583-3	SPRING	1	
-16	0756001-8	LEVER ASSEMBLY	1	

CONTINUED ON NEXT PAGE

Fuel System (Cont)

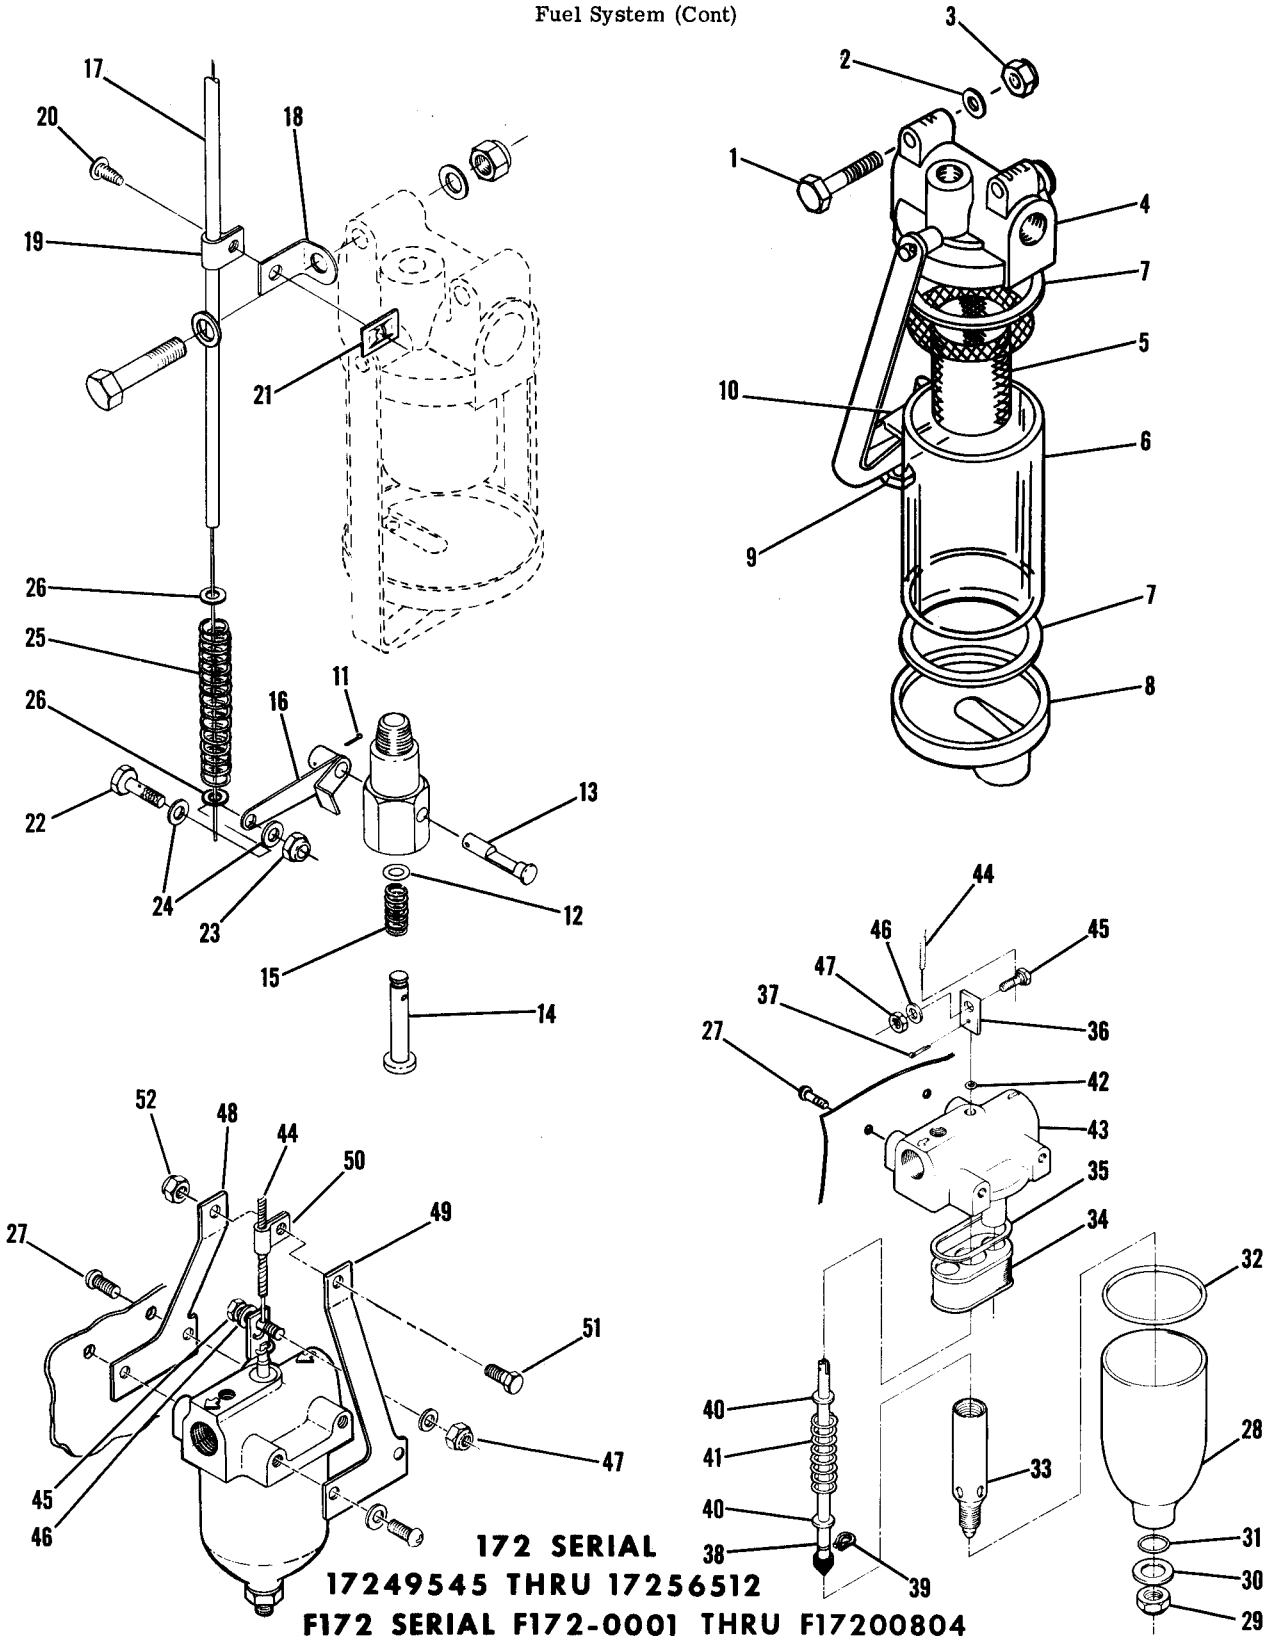


172 SERIAL
17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804
P172 SERIAL P17257120 THRU P17257188

Figure 169. Fuel Strainer & Drain Control Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
169 -17		CONTROL-STRAINER DRAIN SEE STATIONARY INST PANEL	1	A
		ATTACHING PARTS		
-18	0756001-3	SUPPORT	1	A
-19	AN742D3	CLAMP	1	A
-20	S1021Z8-6	SCREW	1	A
-21	NAS446-4-3	NUT	1	A
-22	0450311	CLAMP	1	A
-23	MS21044N3	NUT	1	A
-24	AN960-10	WASHER	2	A
-25	0756002	SPRING	1	A
-26	AN960-2	WASHER	2	A
		---*---		
	0756005-1	STRAINER ASSEMBLY-FUEL	1	B
		ATTACHING PARTS		
-27	AN515-10R10	SCREW	2	B
	AN936A10	WASHER	2	B
		---*---		
-28	0756008-1	BOWL-FUEL STRAINER	1	
		ATTACHING PARTS		
-29	S1573-3	NUT	1	
-30	0756015-1	WASHER	1	
-31	MS29513-111	O RING	1	
-32	MS29513-138	O RING	1	
		---*---		
-33	0756011-1	STANDPIPE	1	
-34	0756009-1	FILTER ASSEMBLY-FUEL STRAINER	1	
-35	0756009-5	GASKET	1	
-36	0756014-1	PLATE	1	
		ATTACHING PARTS		
-37	MS24665-132	COTTER PIN	1	
		---*---		
-38	0756010-1	PLUNGER ASSEMBLY-DRAIN	1	
-39	MS16624-25	SNAP RING	1	
-40	0756014-2	WASHER	2	
-41	0756012-1	SPRING	1	
-42	MS29513-10	O RING	1	
-43	0756005-2	TOP ASSEMBLY-FUEL STRAINER	1	
-44		CONTROL-STRAINER DRAIN SEE STATIONARY INST PANEL	1	B
		ATTACHING PARTS		
-45	0450311-3	CLAMP	1	B
-46	AN960-416	WASHER	AR	B
-47	MS21042L4	NUT	1	B
		---*---		
-48	0500315-1	BRACKET-CONTROL	1	B
-49	0500315-2	BRACKET-CONTROL	1	B
-50	AN742D3	CLAMP	1	B
		ATTACHING PARTS		
-51	AN520-10R8	SCREW	1	
-52	MS21044N3	NUT	1	
		---*---		

A---172 SERIAL 17249545 THRU 17252533
F172 SERIAL F172-0001 THRU F172-0139
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17252534 THRU 17256512
F172 SERIAL F172-0140 THRU F17200804
C---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Fuel System (Cont)

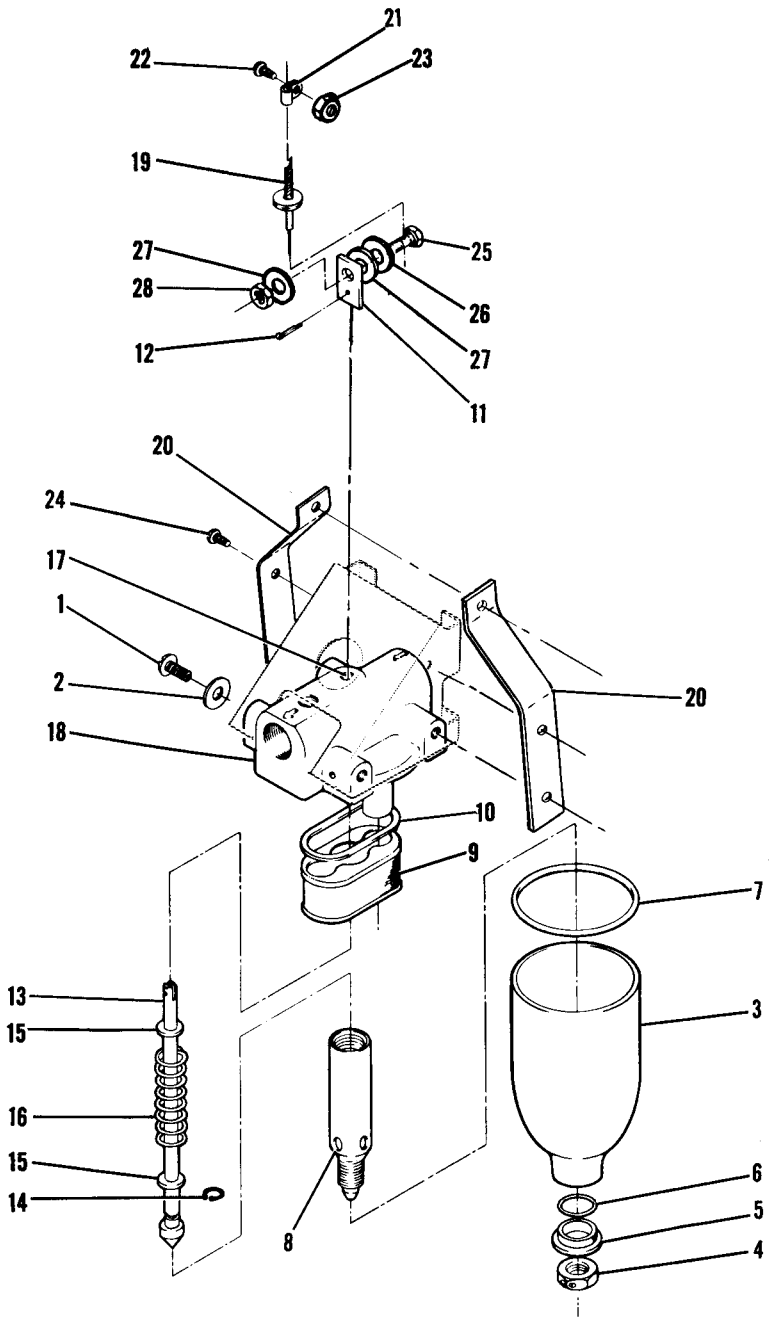

172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Figure 170. Fuel Strainer & Drain Control Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
170 -		FUEL STRAINER & DRAIN CONTROL INSTALLATION	NP	A
	0756005-1	STRAINER ASSEMBLY-FUEL	1	
		ATTACHING PARTS		
- 1	AN515-10R8	SCREW	4	
- 2	AN936A10	WASHER	4	
		---*---		
- 3	0756008-1	BOWL-FUEL STRAINER	1	
		ATTACHING PARTS		
- 4	S1573-3	NUT	1	
- 5	0756015-1	WASHER	1	
- 6	MS29513-111	O RING	1	
- 7	MS29513-138	O RING	1	
		---*---		
- 8	0756011-1	STANDPIPE	1	
- 9	0756009-1	FILTER ASSEMBLY-FUEL STRAINER	1	
-10	0756009-8	GASKET	1	
-11	0756014-1	PLATE	1	
		ATTACHING PARTS		
-12	MS24665-132	COTTER PIN	1	
		---*---		
-13	0756010-1	PLUNGER	1	
-14	MS16624-1025	SNAP-RING	1	
-15	0756014-2	WASHER	1	
-16	0756012-1	SPRING	1	
-17	MS29513-10	O RING	1	
-18	0756005-2	TOP ASSEMBLY-FUEL STRAINER	1	
-19		CONTROL-STRAINER DRAIN SEE INSTRUMENT PANEL	1	
		ATTACHING PARTS		
-20	0716136-1	BRACKET	1	
-21	MS9025-02	CLAMP	1	
-22	AN520-10R8	SCREW	1	
-23	MS21044N3	NUT	1	
-24	AN525-10R8	SCREW	2	
	MS21044N3	NUT	2	
-25	0450311-3	CLAMP	1	
-26	AN960-416	WASHER	1	
-27	AN960-416L	WASHER	2	
-28	MS21042L4	NUT	1	
		---*---		
		A---172 SERIAL 17256513 THRU 17263458 F172 SERIAL F17200805 THRU F17201234		

Fuel System (Cont)


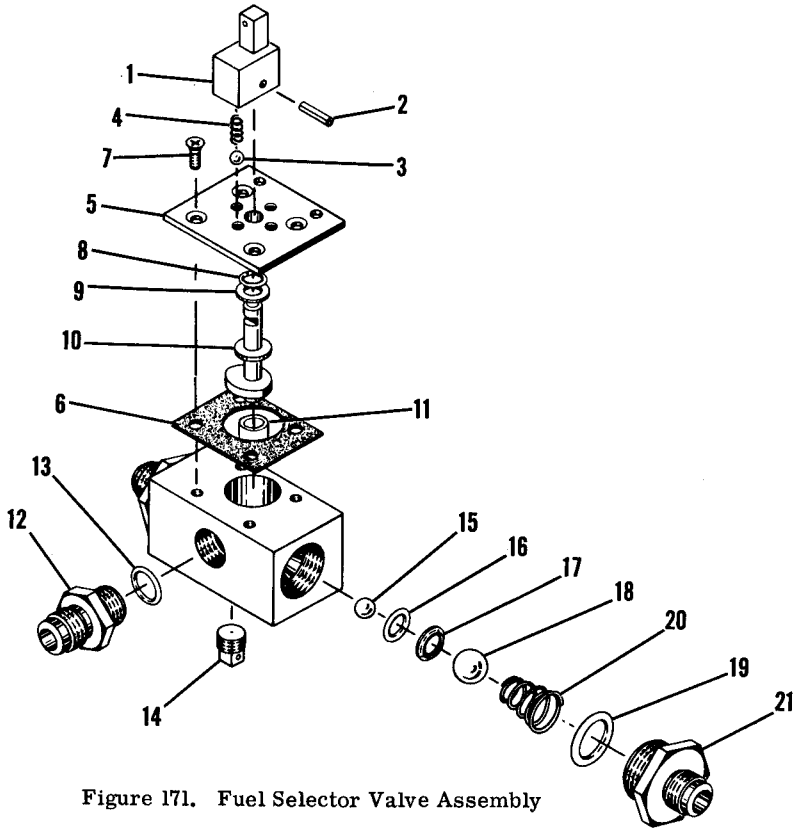


Figure 171. Fuel Selector Valve Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
171 -	0513120-6	VALVE ASSEMBLY-FUEL SELECTOR	1	A
	0513120-8	VALVE ASSEMBLY-FUEL SELECTOR	1	B
- 1	0513124-2	HOUSING-POSITIONING BALL & SPRING	1	A
		ATTACHING PARTS		
- 2	NAS561P3-8	ROLL PIN	1	A
		---*---		
- 3	S272-207	BALL-FUEL VALVE	1	A
- 4	0513120-1	SPRING-FUEL VALVE	1	A
- 5	0513122	COVER-FUEL VALVE	1	
- 6	0513125	GASKET-FUEL COVER	1	
		ATTACHING PARTS		
- 7	AN507-632R6	SCREW	4	
		---*---		
- 8	AF934-5	O RING	1	
- 9	AN960C416L	WASHER	1	
-10	0513123	CAM	1	
-11	S1003-9A	BEARING	1	
-12	0513126-1	NIPPLE	1	
-13	AF934-9	O RING	1	
-14	MS20913-10	PLUG	1	
-15	S272-209	BALL	2	
-16	AF934-7	O RING	2	
-17	0513120-4	RETAINER	2	
-18	S272-215	BALL	2	
-19	AF934-14	O RING	2	
-20	0513120-2	SPRING	2	
-21	0513120-3	NIPPLE	2	
		A---172 SERIAL 17249545 THRU 17251822		
		P172 SERIAL P17257120 THRU P17257188		
		F172 SERIAL F172-0001 THRU F172-0085		
		FP172 SERIAL FP172-0001 THRU FP172-0003		
		B---172 SERIAL 17251823 THRU 17263458		
		F172 SERIAL F172-0086 THRU F17201234		

This page intentionally left blank.

Fuel System (Cont)

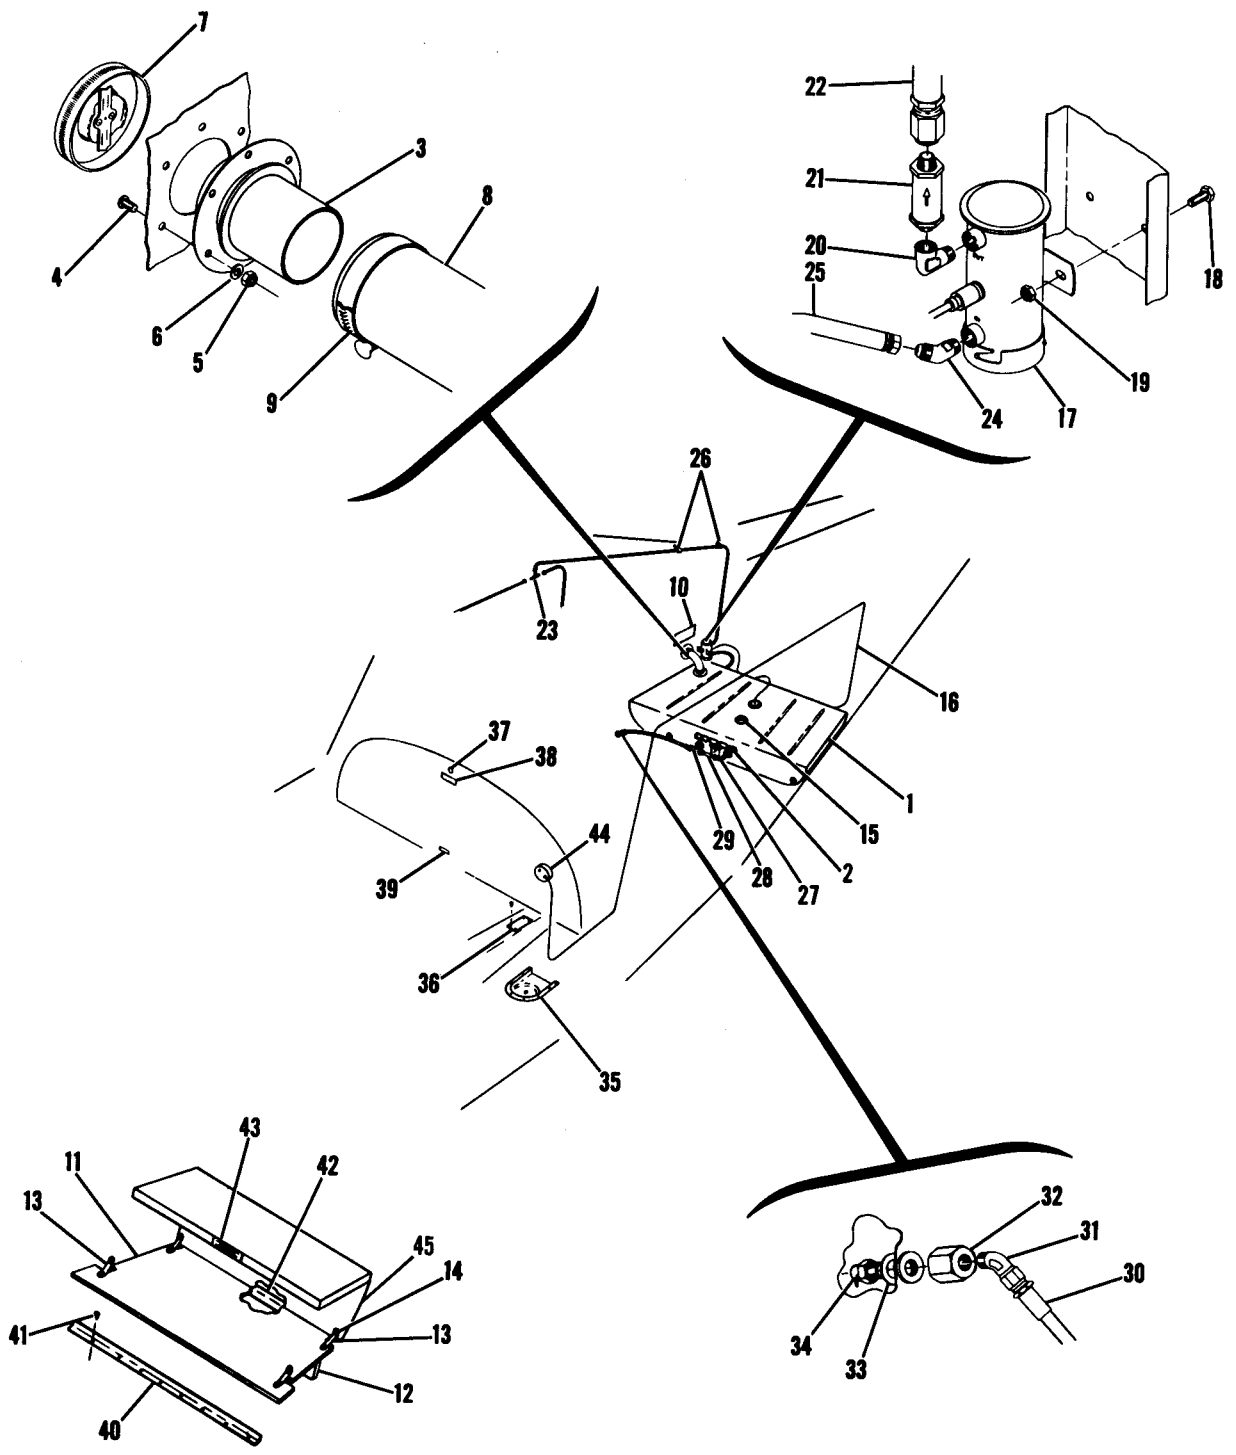

172 SERIAL 17249545 THRU 17257161
F172 SERIAL F172-0001 THRU F172-0559


Figure 172. Auxilary Fuel Tank Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
172 -		AUXILIARY FUEL TANK INSTALLATION	1	A
- 1	782	TANK ASSEMBLY-FUEL	1	
		ATTACHING PARTS		
- 2	784-11	RESTRAINER-FORWARD	1	
		---*---		
- 3	784-4	FILLER NECK	1	
		ATTACHING PARTS		
- 4	AN515-6R7	SCREW	6	
- 5	MS21044N06	NUT	6	
- 6	AN960D6	WASHER	6	
		---*---		
- 7	782-2	GAS CAP	1	
- 8	783	HOSE-FILLER NECK	1	
		ATTACHING PARTS		
- 9	AN737TW82	CLAMP	2	
		---*---		
-10	782-7	PLATE ASSEMBLY-FILL INSTRUCTIONS	1	
-11	785-1	FLOOR ASSEMBLY	1	
-12	785-4	SUPPORT-FLOOR	1	
		ATTACHING PARTS		
	AN545-6R8	SCREW	4	
		---*---		
-13	784-5	BRACKET-FLOOR	4	
		ATTACHING PARTS		
-14	AN3-3A	BOLT	1	
	AN970-3	WASHER	2	
	MS21044N3	NUT	2	
	AN3-6A	BOLT	1	
		---*---		
-15	785-3	PEG-FLOOR SUPPORT	1	
-16	782-9	WIRE BUNDLE	1	
-17	782-1	PUMP-TRANSFER	1	
		ATTACHING PARTS		
-18	AN3-3A	BOLT	2	
-19	MS21044N3	NUT	2	
		---*---		
-20	AN914-1D	ELBOW	1	
-21	1-656-2-75	CHECK VALVE	1	
-22	784-6	HOSE-PUMP TO TEE	1	
-23	AN824-6D	TEE	1	
-24	MS20823-4D	ELBOW-PUMP HOSE CONNECTION	1	
-25	784-9	HOSE-TANK TO PUMP	1	
	MS20822-4D	ELBOW-PUMP HOSE CONNECTION	1	
-26	TA3-716D9	CLAMP THAS	2	
		ATTACHING PARTS		
	AN3-3A	BOLT	2	
	MS21044N3	NUT	1	
		---*---		
	0716128-45	DOUBLER-STA 90.00 BULKHEAD	1	
-27	MS20822-4D	ELBOW	1	
-28	782-13	HOSE-CONNECTOR	1	
-29	MS20825-4D	TEE	1	
-30	784-9	HOSE-DRAIN	1	
-31	MS20823-4D	ELBOW	1	
-32	784-3	ADAPTER	1	
-33	AN960-716L	WASHER	1	
-34	782-4	DRAIN VALVE	1	
-35	787	VENT ASSEMBLY	1	
		ATTACHING PARTS		
	S1021Z2R4	SCREW	10	
		---*---		
-36	782-3	PLACARD-INSTRUCTION	1	
		ATTACHING PARTS		
	S1021Z6-8	SCREW	4	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
172 -37	782-6	SWITCH-FUEL TRANSFER	1	
-38	782-11	PLACARD-FUEL TRANSFER SWITCH	1	
-39	782-13	PLACARD-CIRCUIT BREAKER	1	
-40	782-10	RETAINER-TANK CLOSURE	1	
		ATTACHING PARTS		
-41	S1021Z8-8	SCREW	8	
		---*---		
-42	785-6	ANGLE-CURTAIN	1	
-43	782-8	PLACARD-BAGGAGE LOADING	1	
-44	782-5	GAGE-AUXILIARY FUEL	1	
		ATTACHING PARTS		
	0411897-3	COVER PLATE	1	
		---*---		
		A---172 SERIAL 17249545 THRU 17257161 F172 SERIAL F172-0001 THRU F172-0559		

Fuel System (Cont)

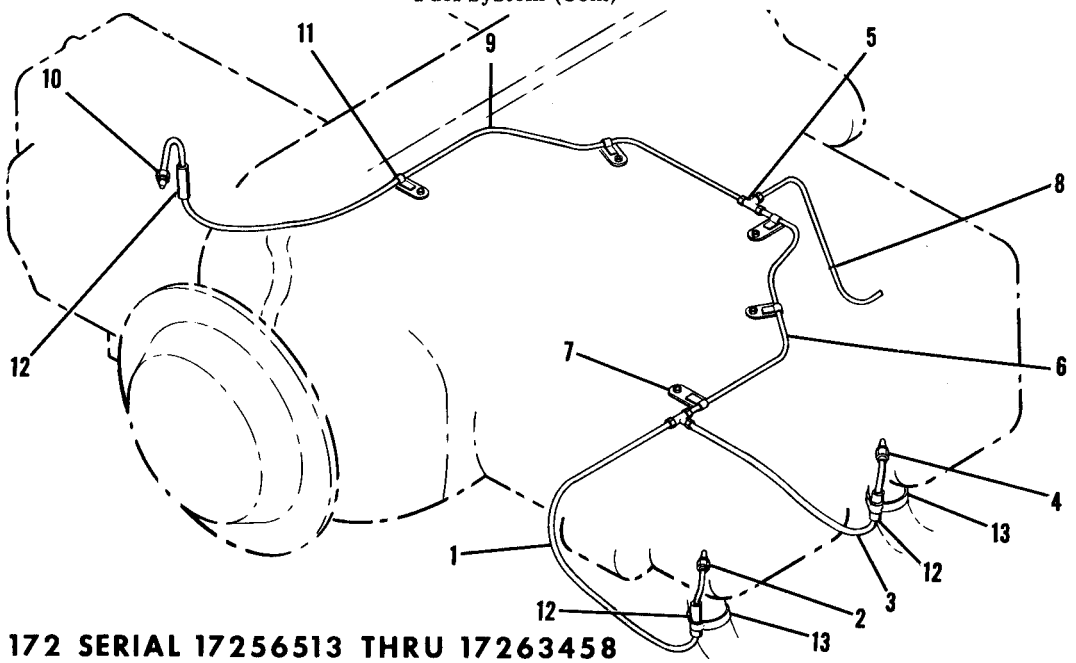


172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Figure 173. Three Cylinder Fuel Primer Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
173 -		FUEL PRIMER INSTALLATION-THREE CYLINDER	NP	A
- 1	1700121-100	LINE ASSEMBLY-CYLINDER 2 TO TEE	1	
		ATTACHING PARTS		
- 2	AN4022-1	JET-FUEL	1	
		---*---		
- 3	1700121-101	LINE ASSEMBLY-CYLINDER 4 TO TEE	1	
		ATTACHING PARTS		
- 4	AN4022-1	JET-FUEL	1	
		---*---		
- 5	AN824-2D	TEE	2	
- 6	1700121-95	LINE ASSEMBLY-TEE TO TEE	1	
		ATTACHING PARTS		
- 7	0550100-8	BRACKET	3	
	S1485D2	CLAMP	3	
	S1021Z8-8C	SCREW	3	
		---*---		
- 8	SEE FIG 167	LINE ASSEMBLY-TEE TO FIREWALL	1	
- 9	1700121-94	LINE ASSEMBLY-CYLINDER 1 TO TEE	1	
		ATTACHING PARTS		
-10	AN4022-1	JET-FUEL	1	
-11	0550100-8	BRACKET	2	
	S1485D2	CLAMP	2	
	S1021Z8-8C	SCREW	2	
		---*---		
-12	S1949-1	TUBING-RUBBER .75 IN LG BULK ITEM REF S1949-1-0012	3	B
-13	71910	CLAMP LYC	3	B
		ATTACHING PARTS		
	AN515-6-10	SCREW	1	B
	MS21045L06	NUT	1	B
		---*---		

A---172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
B---172 SERIAL 17257828 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Fuel System (Cont)

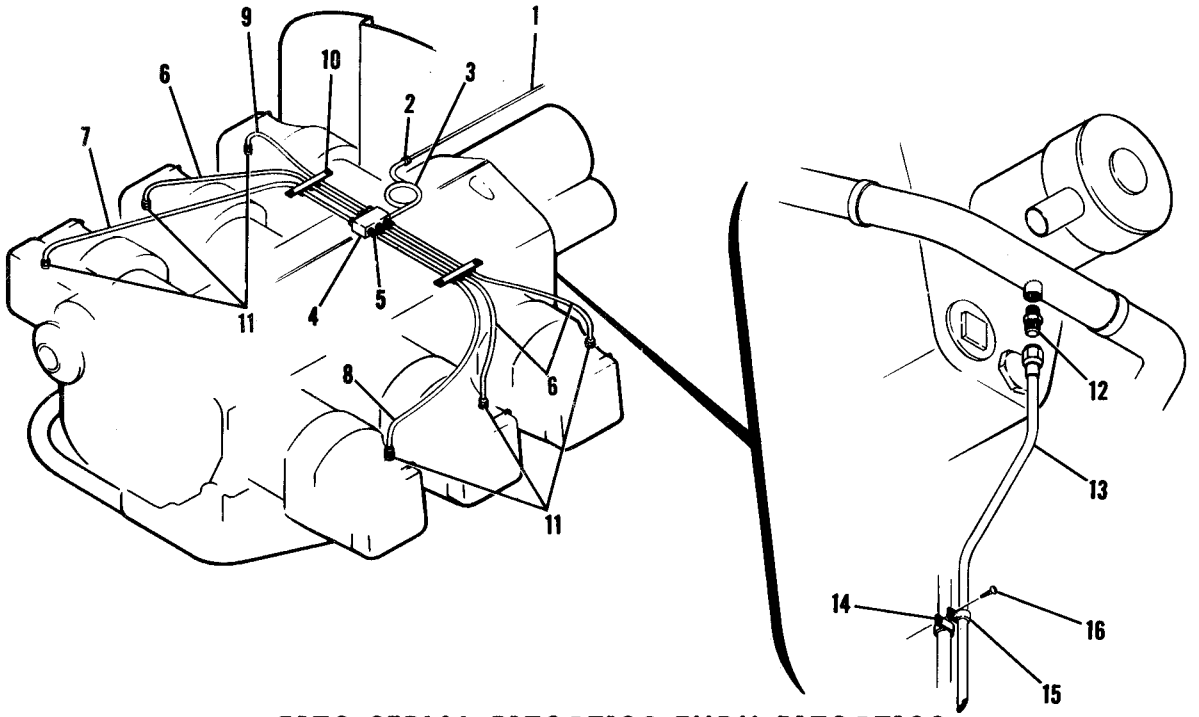

P172 SERIAL P17257120 THRU P17257188

Figure 174. Six Cylinder Priming System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
174 -		PRIMING SYSTEM INSTALLATION-SIX CYLINDER	NP	A
- 1	0500106-300	LINE ASSEMBLY-PRIMER FIREWALL TO BAFFLE	1	
- 2	MS20823-2D	UNION	1	
	AN960D516	WASHER	2	
	AN924-2D	NUT	1	
- 3	0500106-313	LINE ASSEMBLY-PRIMER BAFFLE TO DISTRIBUTOR	1	
	AN816-2D	NIPPLE	1	
- 4	0750125-10	DISTRIBUTOR-PRIMER	1	
		ATTACHING PARTS		
	0550202-9	BOLT	1	
		---*---		
- 5	AN780-2	NIPPLE	6	
- 6	0750125-4	LINE ASSEMBLY-PRIMER DISTRIBUTOR TO CYLINDERS 2,3&4	3	
- 7	0750125-1	LINE ASSEMBLY-PRIMER DISTRIBUTOR TO CYLINDER 5	1	
- 8	0750125-2	LINE ASSEMBLY-PRIMER DISTRIBUTOR TO CYLINDER 6	1	
- 9	0550202-3	LINE ASSEMBLY-PRIMER DISTRIBUTOR TO CYLINDER 1	1	
		ATTACHING PARTS		
-10	0550202-11	BRACKET	2	
	0750125-9	CLAMP	2	
	S1021Z10-8	SCREW	4	
	0750125-11	NUT	4	
		---*---		
-11	AN4022-1	NIPPLE-PRIMING JET	6	
-12	AN816-4D	NIPPLE	1	
-13	0500106-302	LINE ASSEMBLY-MANIFOLD DRAIN	1	
		ATTACHING PARTS		
-14	S1485D12L	CLAMP	1	
-15	AN742D4	CLAMP TIN	1	
-16	S1021Z10-8	SCREW	1	
		---*---		
	AN932C2	PLUG	1	

A---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

DIRECTIONAL & HORIZONTAL
GYRO USAGE


REFER TO FOLLOWING TABLE FOR REPLACEMENT GYROS WHEN ORIGINAL EQUIPMENT HAS BEEN EXHAUSTED

ORIGINAL GYRO	REPLACEMENT GYRO
HORIZONTAL GYROS	HORIZONTAL GYROS
S1309N1	C661001-0201 OR AK172-116
S1326N1	AK172-116*
S1472N1	C661001-0201 OR AK172-116*
S1473N1	C661001-0201 OR AK172-116*
C661001-0201	AK172-116*
DIRECTIONAL GYROS	DIRECTIONAL GYROS
S1316N1	C661002-0201 OR AK172-116
S1327N1	AK172-116*
S1476N1	C661002-0201 OR AK172-116
C661002-0201	AK172-116*

*AK172-116 IS A KIT INCLUDING BOTH HORIZONTAL & DIRECTIONAL GYROS, A CENTRAL FILTER, SUCTION GAGE AND NECESSARY HARDWARE FOR INSTALLATION OF THESE PARTS

Figure 175. Directional & Horizontal Gyro Usage

Vacuum System

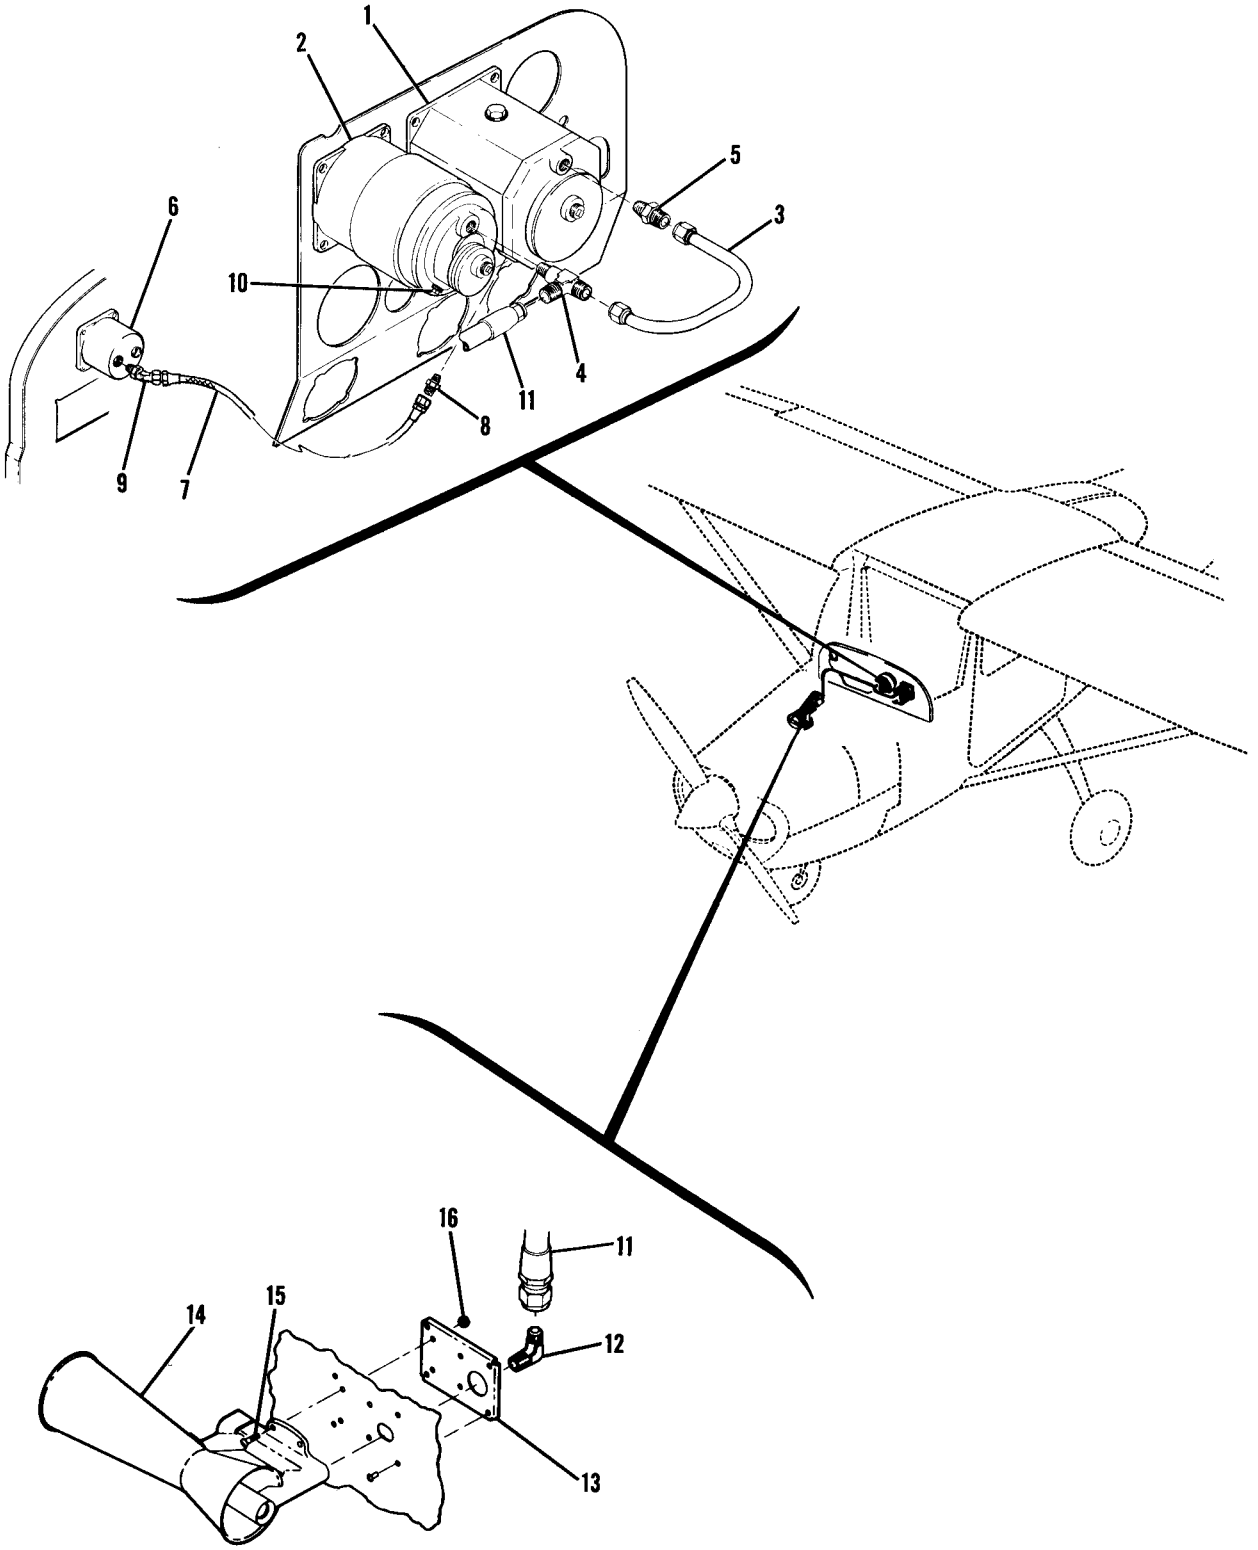


172 SERIAL 17249545 THRU 17250572

Figure 176. Venturi & Gyros System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
176 -		VENTURI & GYROS SYSTEM INSTALLATION	NP	A
- 1	S1316N1	GYRO-DIRECTIONAL REMFD WHEN EXHAUSTED SEE FIG 175	1	
- 2	S1309N1	GYRO-HORIZON REMFD WHEN EXHAUSTED SEE FIG 175	1	
- 3	0500106-229	LINE ASSEMBLY-HORIZONTAL GYRO TO DIRECTIONAL GYRO	1	
- 4	MS20826-6D	TEE	1	
- 5	AN816-6D	NIPPLE	1	
- 6	S1414N1	GAGE-SUCTION	1	
- 7	S1168-4-30	HOSE ASSEMBLY-DIRECTIONAL GYRO TO SUCTION GAGE	1	B
	S1495-4	HOSE 33 IN LG BULK ITEM REF S-1431-4-33.00	1	C
		ATTACHING PARTS		
- 8	MS20822-4-4D	NIPPLE	1	B
	AN912-1D	BUSHING	1	C
	IK-2-4	FITTING AIRB	1	C
- 9	MS20823-4D	ELBOW	1	B
	AN844-4D	ELBOW	1	C
		---*---		
-10	AN932D3	PLUG	2	
-11	S1168-6-40 1/2	HOSE ASSEMBLY	1	
-12	MS20822-6D	ELBOW	1	
-13	0511473-1	STIFFENER-VENTURI	1	
-14	0511318-1	SUPER VENTURI	1	
		ATTACHING PARTS		
-15	AN515-10R10	SCREW	4	
-16	MS21045L3	NUT	4	
		---*---		
		A---172 SERIAL 17249545 THRU 17250572		
		B---172 SERIAL 17249545 THRU 17250157		
		C---172 SERIAL 17250158 THRU 17250572		


Vacuum System (Cont)

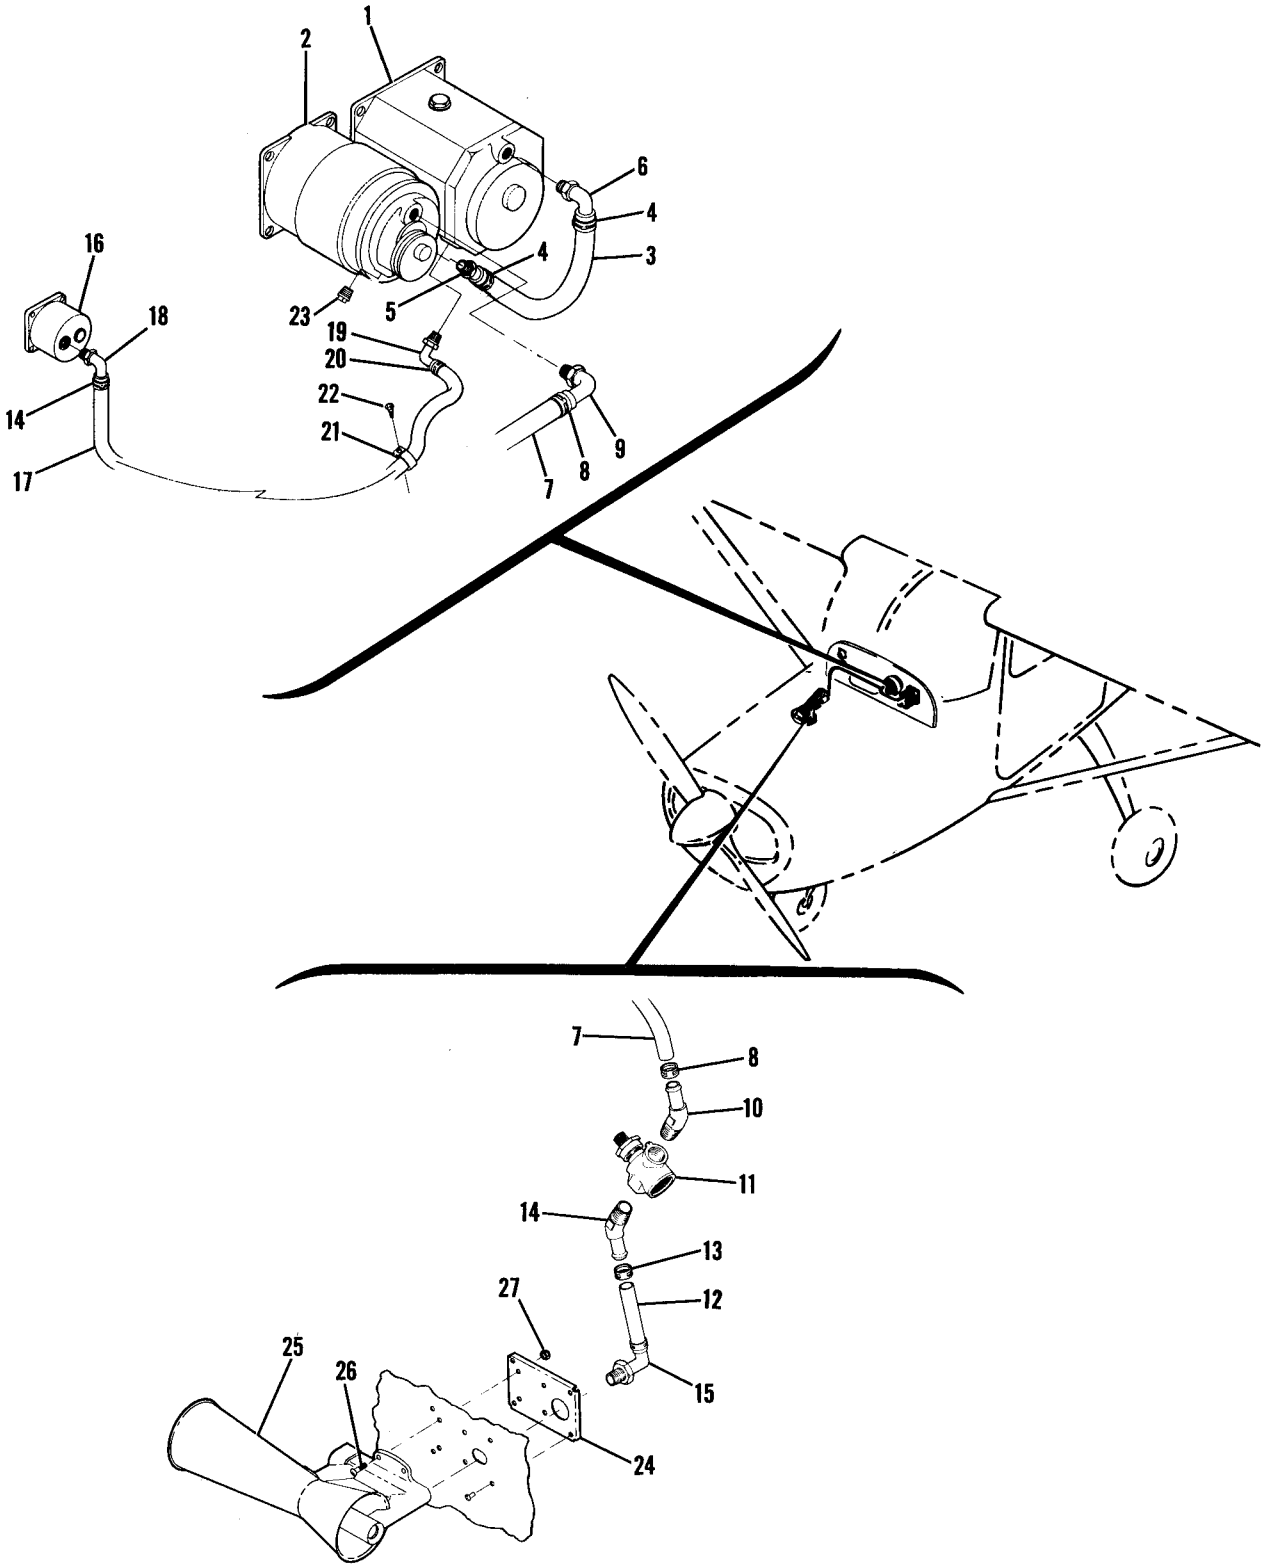

172 SERIAL 17250573 THRU 17251822

Figure 177. Venturi & Gyros System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
177 -		VENTURI & GYROS SYSTEM INSTALLATION	NP	A
- 1	S1316N1	GYRO-DIRECTIONAL REMFD WHEN EXHAUSTED SEE FIG 175	1	
- 2	S1309N1	GYRO-HORIZON REMFD WHEN EXHAUSTED SEE FIG 175	1	
	S1473N1	GYRO-HORIZON ALTERNATE WHEN EXHAUSTED SEE FIG 175	1	
- 3	S1495-6-	HOSE-9.0 IN LG BULK ITEM REF S1495-6-9.00	1	
		ATTACHING PARTS		
- 4	NAS397-12	CLAMP	2	
- 5	1K10-4-6	ADAPTER AIRB	1	
- 6	1K1-4-6	ELBOW AIRB	1	
		---*---		
- 7	S1495-8-	HOSE-40.50 IN LG BULK ITEM REF S1495-8-40.50	1	
		ATTACHING PARTS		
- 8	NAS397-14	CLAMP	2	
- 9	1K1-4-8	ELBOW AIRB	1	
-10	AN844-8	ELBOW	1	
		---*---		
-11	C482001-0101	VALVE-SUCTION RELIEF	1	
-12	S1495-8-	HOSE-2.30 IN LG BULK ITEM REF S1495-8-2.30	1	
		ATTACHING PARTS		
-13	NAS397-14	CLAMP	2	
-14	AN844-8	ELBOW	1	
-15	1K1-4-8	ELBOW AIRB	1	
		---*---		
-16	S1414N1	GAGE-SUCTION	1	
-17	S1495-4-	HOSE-40.00 IN LG BULK ITEM REF S1495-4-40.00	1	
		ATTACHING PARTS		
-18	1K1-2-4	ELBOW AIRB	1	
-19	1K1-4-4	ELBOW AIRB	1	
-20	NAS397-8	CLAMP	2	
-21	S1485D80	CLAMP	3	
-22	S1021Z8-6	SCREW	3	
		---*---		
-23	MS20913-20	PLUG	2	
-24	0511473-1	STIFFENER-VENTURI	1	
-25	0511318-1	SUPER VENTURI	1	
		ATTACHING PARTS		
-26	AN515-10R10	SCREW	4	
-27	MS21045L3	NUT	4	
		---*---		
		A---172 SERIAL 17250573 THRU 17251822		

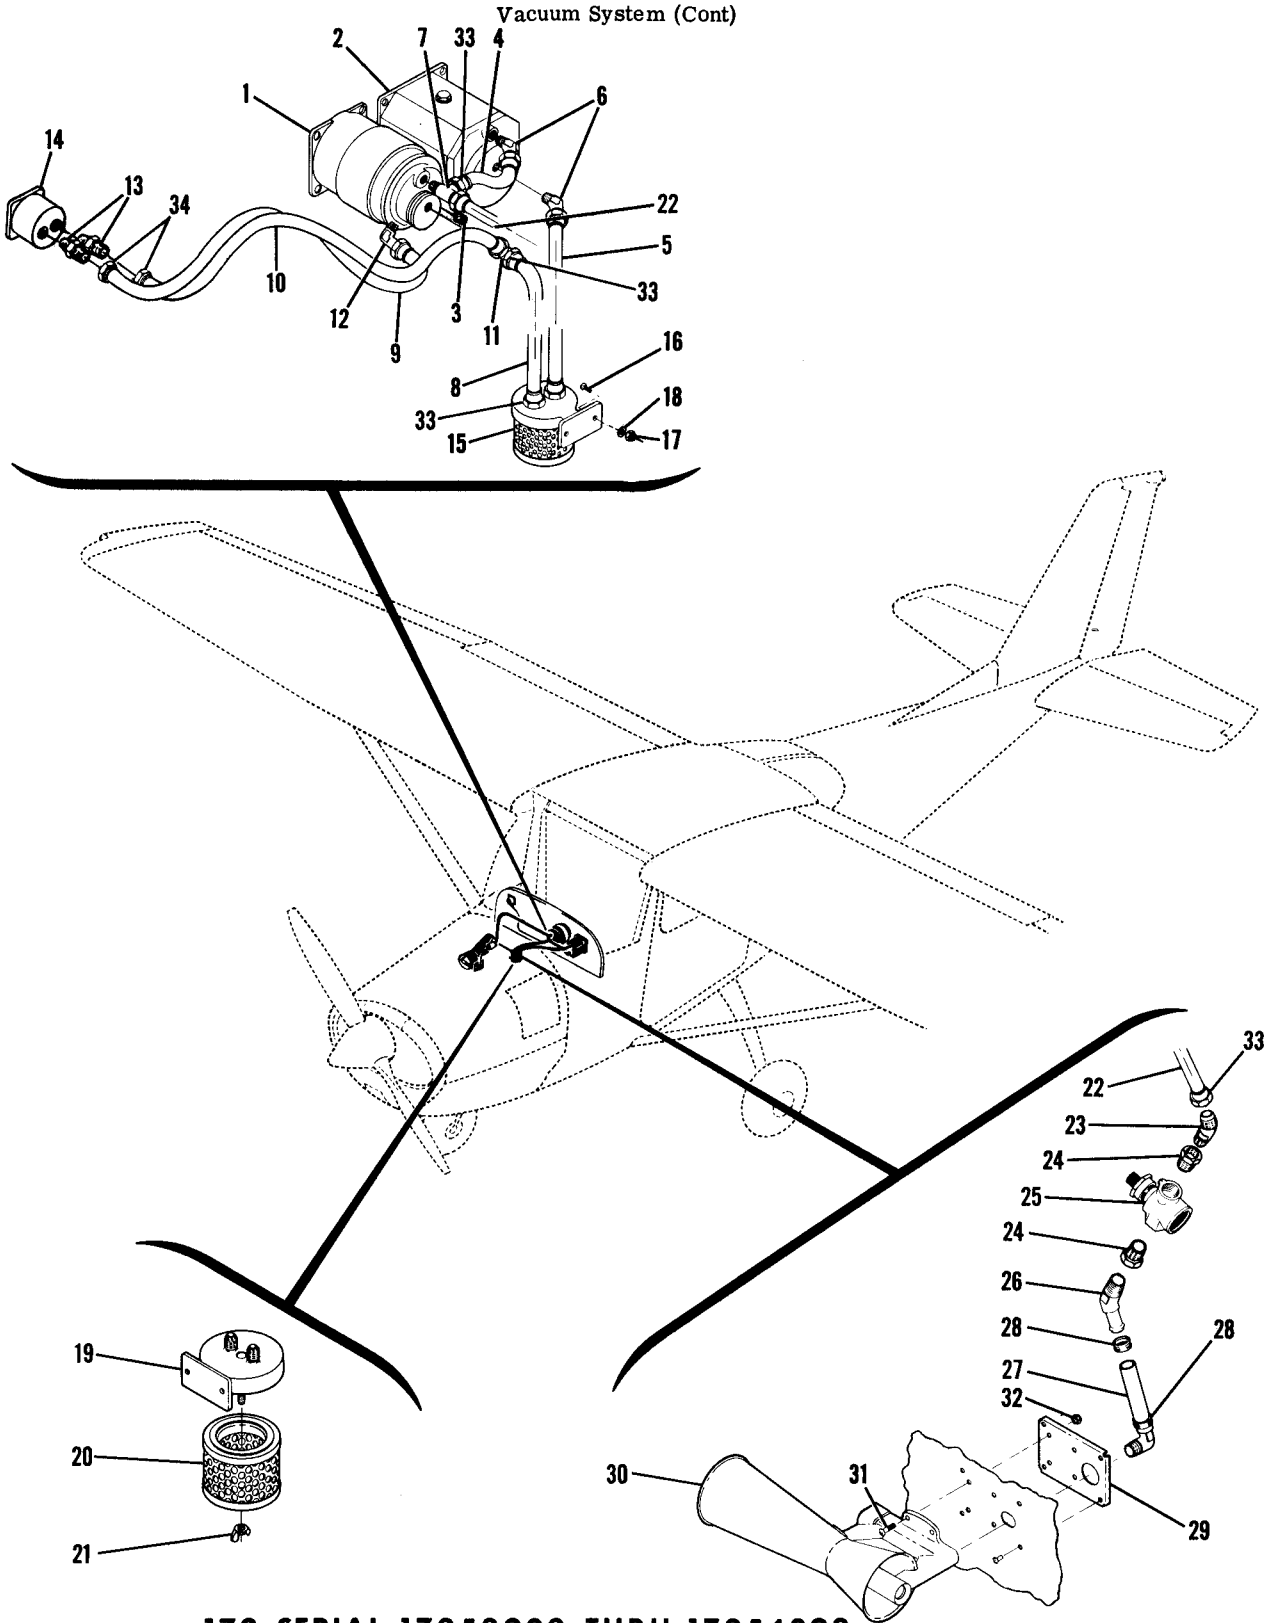


172 SERIAL 17252902 THRU 17254892
172 SERIAL 17251823 THRU 17252758

Figure 178. Venturi & Gyros System Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
178 -			VENTURI & GYROS SYSTEM INSTALLATION	NP	A
- 1	C661002-0201		GYRO-DIRECTIONAL REMFD WHEN EXHAUSTED SEE FIG 175	1	
- 2	C661001-0201		GYRO-HORIZON REMFD WHEN EXHAUSTED SEE FIG 175	1	
- 3	MS20913-2D		PLUG	1	
- 4	S1495-6		HOSE 3.75 IN LG BULK ITEM REF S1495-6-3.75	1	
- 5	S1495-6		HOSE 12.75 IN LG BULK ITEM REF S1495-6-12.75	1	
- 6	MS20823-6D		ELBOW	2	
- 7	MS20826-6D		TEE	1	
- 8	S1495-6		HOSE 10.00 IN LG BULK ITEM REF S1495-6-10.00	1	
- 9	S1495-4		HOSE 27.50 IN LG BULK ITEM REF S1495-4-27.50	1	
-10	S1495-4		HOSE 27.50 IN LG BULK ITEM REF S1495-4-27.50	1	
-11		**	TEE	1	
-12	MS20822-4-4D		ELBOW	1	
-13	AN816-4D		NIPPLE	2	
-14	S1414-1		GAGE	1	
-15	C294501-0101		AIR FILTER	1	
			ATTACHING PARTS		
-16	AN520-10R10		SCREW	2	
-17	MS21044N3		NUT	2	
-18	AN960PD10		WASHER	2	
			---*---		
-19	C294501-0102		BRACKET	1	
-20	C294501-0103		FILTER ELEMENT	1	
			ATTACHING PARTS		
-21	P2274		NUT-WING DCI	1	
			---*---		
-22	S1495-6		HOSE 41.0 IN LG BULK ITEM REF S1495-6-41.00	1	
-23	MS20823-6D		ELBOW	1	
-24	AN912-2		BUSHING	2	
-25	C482001-0101		VALVE	1	
-26	AN844-6D		ELBOW	1	
-27	S1495-6-		HOSE 2.50 IN LG BULK ITEM REF S1495-6-2.50	1	
-28	NAS397-10		CLAMP	2	
-29	0511473-1		STIFFENER	1	
-30	0511318-1		SUPER VENTURI	1	
			ATTACHING PARTS		
-31	AN515-10R10		SCREW	4	
-32	MS21044N3		NUT	4	
			---*---		
-33	S1497-6		FITTING-HOSE END	8	
-34	S1497-4		FITTING-HOSE END	4	

NOTE. **ORDER 1 EACH MS20826-6D TEE, 1713039-1 ELBOW ASSEMBLY & NAS397-8 CLAMP.

A---172 SERIAL 17251823 THRU 17252758
172 SERIAL 17252902 THRU 17254892

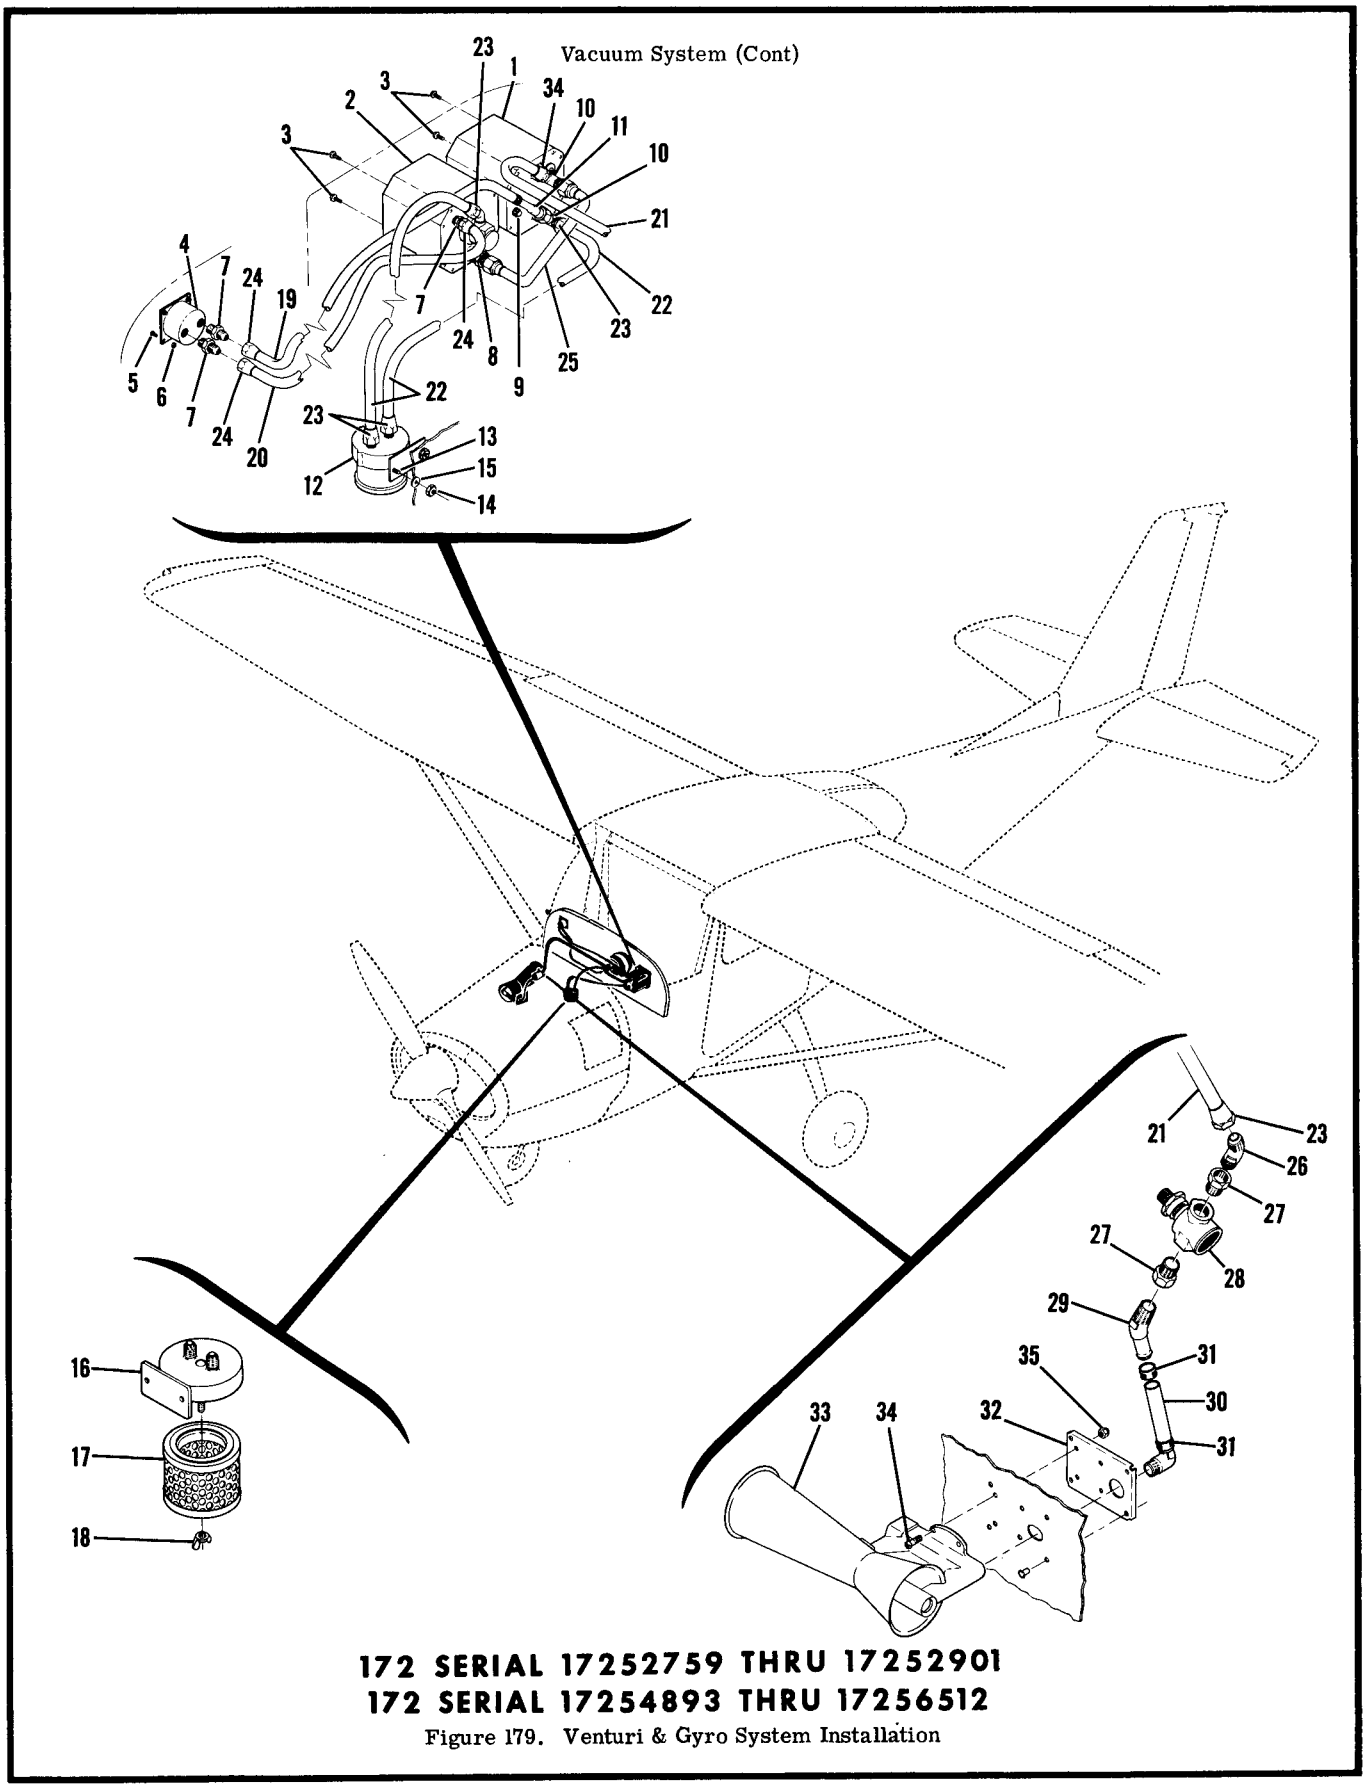

172 SERIAL 17252759 THRU 17252901
172 SERIAL 17254893 THRU 17256512


Figure 179. Venturi & Gyro System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
179 -		VENTURI & GYRO SYSTEM INSTALLATION	NP	A
- 1	C661002-0201	GYRO-DIRECTIONAL NEW	1	
- 2	C661001-0201	GYRO-HORIZON NEW	1	
		ATTACHING PARTS		
- 3	AN515B6R6	SCREW	4	
		---*---		
- 4	S1414-1	GAGE-SUCTION	1	
		ATTACHING PARTS		
- 5	AN515B6R12	SCREW	4	
- 6	NAS395-6-3	NUT	4	
		---*---		
- 7	AN816-4D	NIPPLE	3	
- 8	AN816-6D	NIPPLE	1	
- 9	MS20913-1D	PLUG	1	
-10	MS20826-6D	TEE	2	
-11	1713039-1	ELBOW	1	
	NAS397-8	CLAMP	1	
-12	C294501-0101	AIR FILTER	1	
		ATTACHING PARTS		
-13	AN520-10R10	SCREW	2	
-14	MS21044N3	NUT	2	
-15	AN960PD10	WASHER	2	
		---*---		
-16	C294501-0102	BRACKET	1	
-17	C294501-0103	FILTER ELEMENT	1	
		ATTACHING PARTS		
-18	P2274	NUT-WING DCI	1	
		---*---		
-19	S1495-4	HOSE * IN LG BULK ITEM REF S1495-4-*	1	
-20	S1495-4	HOSE 27.50 IN LG BULK ITEM REF S1495-4-27.50	1	
-21	S1495-6	HOSE 41.00 IN LG BULK ITEM REF S1495-6-41.00	1	
-22	S1495-6	HOSE 14.75 IN LG BULK ITEM REF S1495-6-14.95	2	
-23	S1497-6	FITTING-HOSE END	6	
-24	S1497-4	FITTING-HOSE END	3	
-25	0500118-38	LINE ASSEMBLY	1	
-26	MS20823-6D	ELBOW	1	
-27	AN912-2	BUSHING	2	
-28	C482001-0101	VALVE-RELIEF	1	
-29	AN844-6	ELBOW	1	
-30	S1495-6	HOSE 2.50 IN LG BULK ITEM REF S1495-6-2.50	1	
-31	NAS397-10	CLAMP	2	
-32	0511473-1	STIFFENER	1	
-33	0511318-1	SUPER VENTURI	1	
		ATTACHING PARTS		
-34	AN515-10R10	SCREW	4	
-35	MS21044N3	NUT	4	
		---*---		

NOTE. *LENGTHS TO BE ADDED LATER

A---172 SERIAL 17252759 THRU 17252901
172 SERIAL 17254893 THRU 17256512

Vacuum System (Cont)

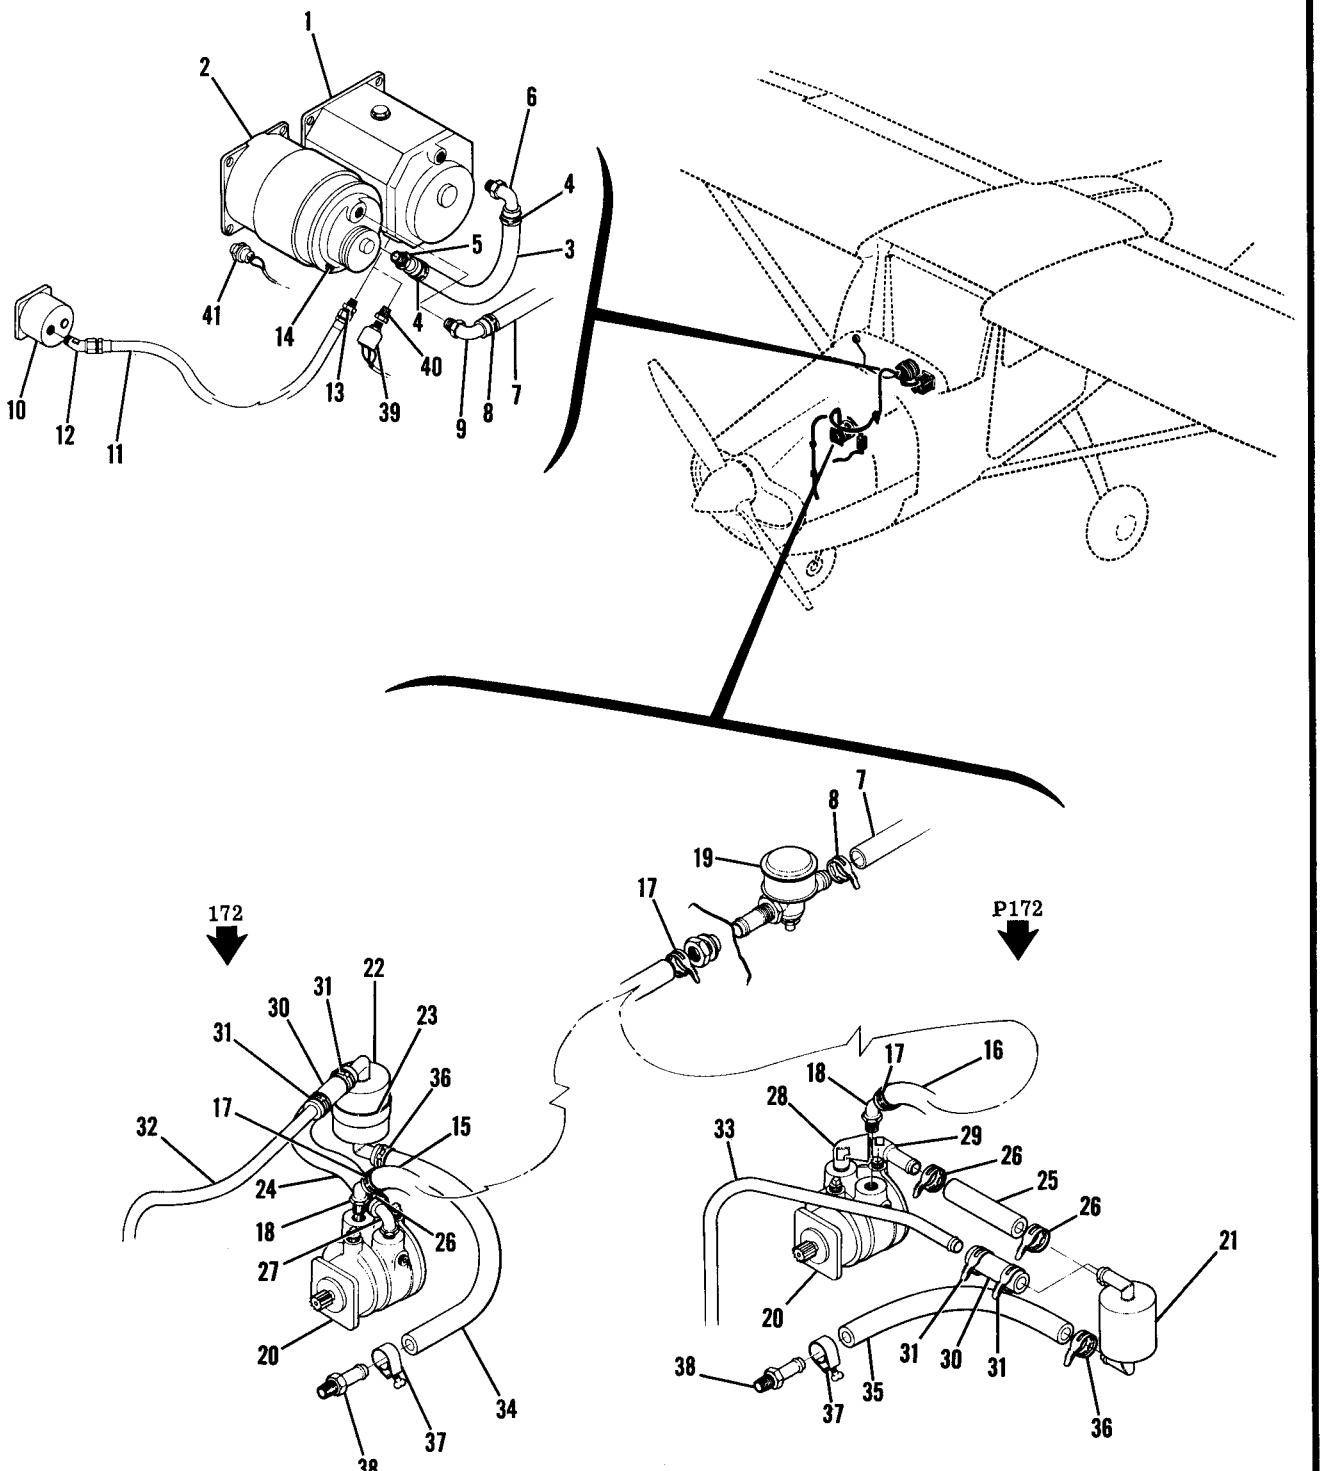

172 SERIAL 17249545 THRU 17250572

P172 SERIAL P17257120 THRU P17257188

Figure 180. Engine Driven Vacuum System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
180 -		VACUUM SYSTEM INSTALLATION-ENGINE DRIVEN	NP	A
- 1	S1316N1	GYRO-DIRECTIONAL REMFD WHEN EXHAUSTED SEE FIG 175	1	
	S1327N1	INDICATOR-DIRECTIONAL GYRO-AZIMUTH-TYPE 348 USED WITH VACUUM WARNING LIGHT WHEN EXHAUSTED SEE FIG 175	1	
- 2	S1309N1	GYRO-HORIZON REMFD WHEN EXHAUSTED SEE FIG 175	1	
	S1326N1	INDICATOR-GYRO HORIZON-TYPE 348 USED WITH VACUUM WARNING LIGHTS WHEN EXHAUSTED SEE FIG 175	1	
- 3	S1495-6	HOSE-7.50 IN LG BULK ITEM REF S-1431-6-7.50	1	
		ATTACHING PARTS		
- 4	NAS397-12	CLAMP	2	
- 5	IK10-4-8	FITTING-STRAIGHT AIRB	1	
- 6	IK1-4-8	FITTING AIRB	1	
		---*---		
- 7	S1495-8	HOSE-14.50 IN LG BULK ITEM REF S-1431-8-14.50	1	
		ATTACHING PARTS		
- 8	NAS397-12	CLAMP	2	
- 9	IK1-4-8	FITTING AIRB	1	
		---*---		
-10	S1414N1	GAGE-SUCTION WEU C668540-0101	1	
	C668540-0101	GAGE-SUCTION	1	
-11	S1168-4-30	HOSE ASSEMBLY WHEN EXHAUSTED USE S1495-4	1	D
	S1495-4	HOSE 33 IN LG BULK ITEM REF S-1495-4-33	1	
		ATTACHING PARTS		
-12	MS20823-4D	ELBOW	1	D
	AN844-4D	ELBOW	1	E
-13	MS20822-4-4D	ELBOW	1	D
	AN912-1D	BUSHING	1	E
	IK1-2-4	FITTING	1	E
	NAS397-8	CLAMP	2	E
		---*---		
-14	AN932D3	PLUG	2	
-15	S1495-10	HOSE 21.50 IN LG BULK ITEM REF S1495-10-21.50	1	
-16	S1495-10	HOSE 21.50 IN LG BULK ITEM REF S1495-10-21.50	1	
		ATTACHING PARTS		
-17	NAS397-16	CLAMP	2	
-18	IK9-6	FITTING AIRB	1	
		---*---		
-19	133A3	VALVE-RELIEF AIRB	1	
	B3005A1	FILTER-RELIEF VALVE AIRB	1	
-20	C431001-0101	PUMP-VACUUM	1	
-21	0850406-14	SEPARATOR-OIL	1	C
-22	0850406-6	SEPARATOR-OIL	1	B
		ATTACHING PARTS		
-23	AN742D36	CLAMP	1	B
	AN3-4A	BOLT	1	B
	AN960PD10L	WASHER	2	B
		---*---		
-24	S1495-8	HOSE 12.00 IN LG BULK ITEM REF S1495-8-12.00	1	
-25	S1495-8	HOSE 4.25 IN LG BULK ITEM REF S1495-8-4.25	1	
		ATTACHING PARTS		
-26	NAS397-14	CLAMP	2	
-27	IK1-6-8	FITTING AIRB	1	B
-28	AN914-3D	ELBOW	1	C
-29	AN844-8D	ELBOW	1	C
		---*---		
-30	S1495-8	HOSE-3.50 IN LG BULK ITEM REF S-1431-8-3.50	1	
		ATTACHING PARTS		
-31	NAS397-14	CLAMP	2	
		---*---		

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
180 -32	0500106-364	LINE-DRAIN	1	B
-33	0500106-315	LINE-DRAIN	1	C
-34	S1495-8	HOSE 10.00 IN LG BULK ITEM REF S1495-8-10.00	1	
-35	S1495-8	HOSE 15.00 IN LG BULK ITEM REF S1495-8-15.00 ATTACHING PARTS	1	
-36	NAS397-14	CLAMP	1	
-37	AN737RM30	CLAMP	1	
-38	AN840-8D	NIPPLE-HOSE ---*---	1	
-39	S1365-1	SWITCH-VACUUM USED WITH VACUUM WARNING LIGHTS ONLY	1	
-40	AN912-1D	BUSHING USED WITH VACUUM WARNING LIGHTS ONLY	1	
-41	S1284-1	SWITCH-PUSH BUTTON USED WITH VACUUM WARNING LIGHTS ONLY	1	

A---172 SKYHAWK SERIAL 17249545 THRU 17250572
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0018
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SKYHAWK SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
C---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
D---172 SKYHAWK SERIAL 17249545 THRU 17250157
F172 SERIAL F172-0001 THRU F172-0009
P172 SERIAL P17257120 THRU P17257173
E---172 SKYHAWK SERIAL 17250158 THRU 17250572
F172 SERIAL F172-0010 THRU F172-0018
P172 SERIAL P17257174 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
181 -		VACUUM SYSTEM INSTALLATION-ENGINE DRIVEN ----------	NP	A
- 1	S1316N1	GYRO-DIRECTIONAL REMFD WHEN EXHAUSTED SEE FIG 175 ---	1	
	S1476N1	GYRO-DIRECTIONAL ALTERNATE WHEN EXHAUSTED SEE FIG 175 --	1	
	S1327N1	GYRO-DIRECTIONAL-AZIMUTH-TYPE 348 USED WITH ----------	1	
		VACUUM WARNING LIGHTS WHEN EXHAUSTED SEE FIG 175		
- 2	S1309N1	GYRO-HORIZON REMFD WHEN EXHAUSTED SEE FIG 175 --------	1	
	S1472N1	GYRO-HORIZON ALTERNATE WHEN EXHAUSTED SEE FIG 175 ---	1	
	S1326N1	GYRO-HORIZON-TYPE 348 USED WITH VACUUM WARNING ------	1	
		LIGHTS WHEN EXHAUSTED SEE FIG 175		
- 3	S1495-8	HOSE 9.00 IN LG BULK ITEM REF S1495-8-9.00 -------	1	
		ATTACHING PARTS		
- 4	NAS397-12	CLAMP ----------	2	
- 5	1K1-4-6	FITTING-DIRECTIONAL GYRO AIRB ----------	2	
	1K10-4-6	ADAPTER-HORIZONTAL GYRO AIRB ----------	1	
		---*---		
- 6	S1495-8	HOSE 14.50 IN LG BULK ITEM REF S1495-8-14.50 -----	1	
		ATTACHING PARTS		
- 7	NAS397-14	CLAMP ----------	2	
- 8	1K1-4-8	FITTING AIRB ----------	1	
		---*---		

CONTINUED ON NEXT PAGE

Vacuum System (Cont)

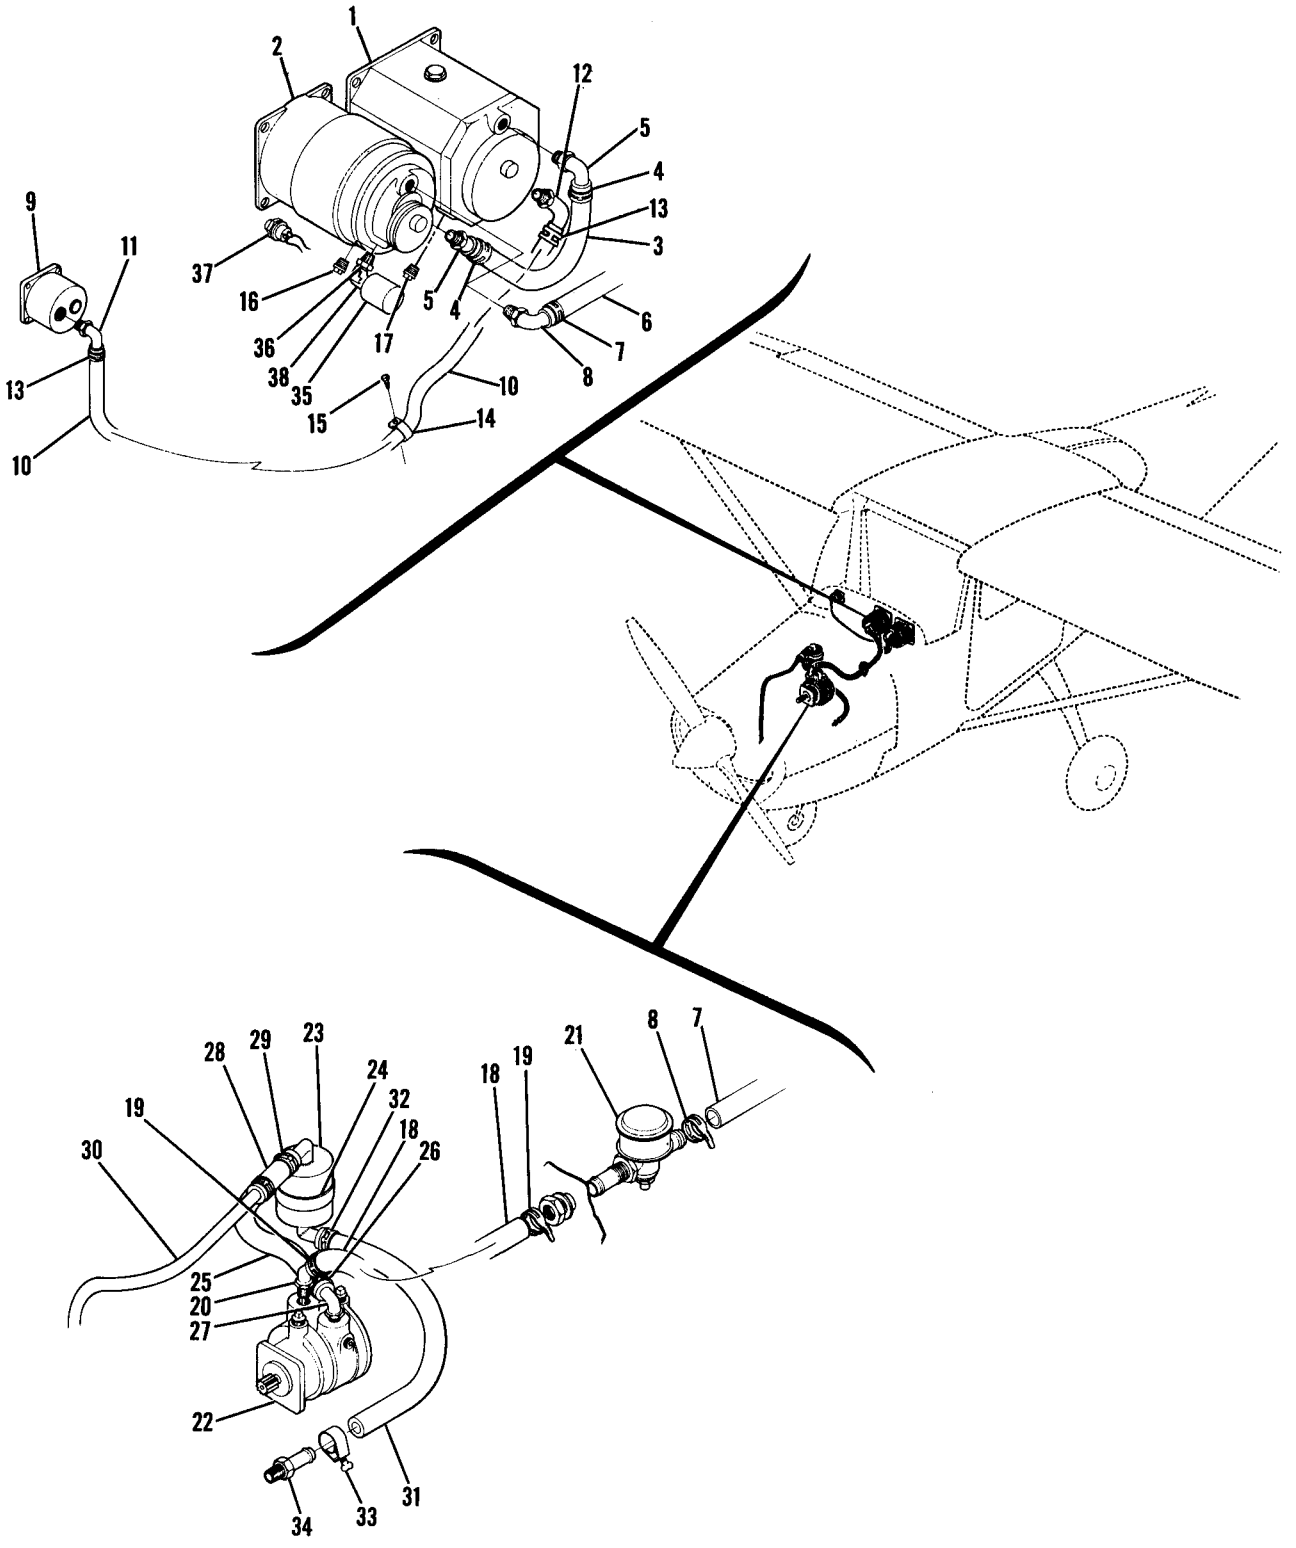

F172 SERIAL F172-0019 THRU F172-0085
172 SKYHAWK SERIAL 17250573 THRU 17251822


Figure 181. Engine Driven Vacuum System Installation

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
181 - 9	S1414N1 *	GAGE-SUCTION WEU C668540-0101	1	
	C668540-0101	GAGE-SUCTION	1	
-10	S1495-4	HOSE 40.00 IN LG BULK ITEM REF S1495-4-40.0	1	
		ATTACHING PARTS		
-11	IK-2-4 *	ELBOW	1	
-12	MS20913-2 *	PLUG	1	
-13	NAS397-8 *	CLAMP	2	
-14	S1485D8U	CLAMP	3	
-15	S1021Z8-6 *	SCREW	3	
		---*---		
-16	MS20913-2D *	PLUG	1	
-17	MS20913-2D	PLUG USED WITH VACUUM WARNING LIGHTS ONLY	1	
-18	S1495-10	HOSE 21.50 IN LG BULK ITEM REF S1495-10-21.50	1	
		ATTACHING PARTS		
-19	NAS397-16	CLAMP	2	
-20	1K9-6-10	FITTING AIRB	1	
		---*---		
-21	133A3	VALVE-RELIEF AIRB	1	
	B3005A1	FILTER-RELIEF VALVE AIRB	1	
-22	C431001-0101	PUMP-VACUUM	1	
-23	0850406-6	SEPARATOR-OIL	1	
		ATTACHING PARTS		
-24	AN742D34	CLAMP	1	
	AN3-6A	BOLT	1	
	AN960D10L	WASHER	2	
	NAS430D3-16	SPACER	1	
	MS21044N3	NUT	1	
		---*---		
-25	S1495-8	HOSE 12.00 IN LG BULK ITEM REF S1495-8-12.00	1	
		ATTACHING PARTS		
-26	NAS397-14	CLAMP	2	
-27	1K1-6-8	FITTING AIRB	1	
		---*---		
-28	S1495-8	HOSE 3.50 IN LG BULK ITEM REF S1495-8-3.50	1	
		ATTACHING PARTS		
-29	NAS397-14	CLAMP	2	
		---*---		
-30	0500106-364	LINE-DRAIN	1	
-31	S1495-8	HOSE 15.00 IN LG BULK ITEM REF S1495-8-15.00	1	
		ATTACHING PARTS		
-32	NAS397-14	CLAMP	1	
-33	AN737RM30	CLAMP	1	
-34	AN840-8D	NIPPLE-HOSE	1	
		---*---		
-35	S1365-1	SWITCH-VACUUM USED WITH VACUUM WARNING LIGHTS ONLY	1	
-36	AN912-1D	BUSHING USED WITH VACUUM WARNING LIGHTS ONLY	1	
-37	S1284-1	SWITCH-PUSH BUTTON USED WITH VACUUM WARNING LIGHTS ONLY	1	
-38	AN914-1D	ELBOW USED WITH VACUUM WARNING LIGHTS ONLY	1	

NOTE* THESE PARTS ARE NOT USED WITH PICTORIAL GYROS

A---172 SKYHAWK SERIAL 17250573 THRU 17251822
F172 SERIAL F172-0019 THRU F172-0085

Vacuum System (Cont)

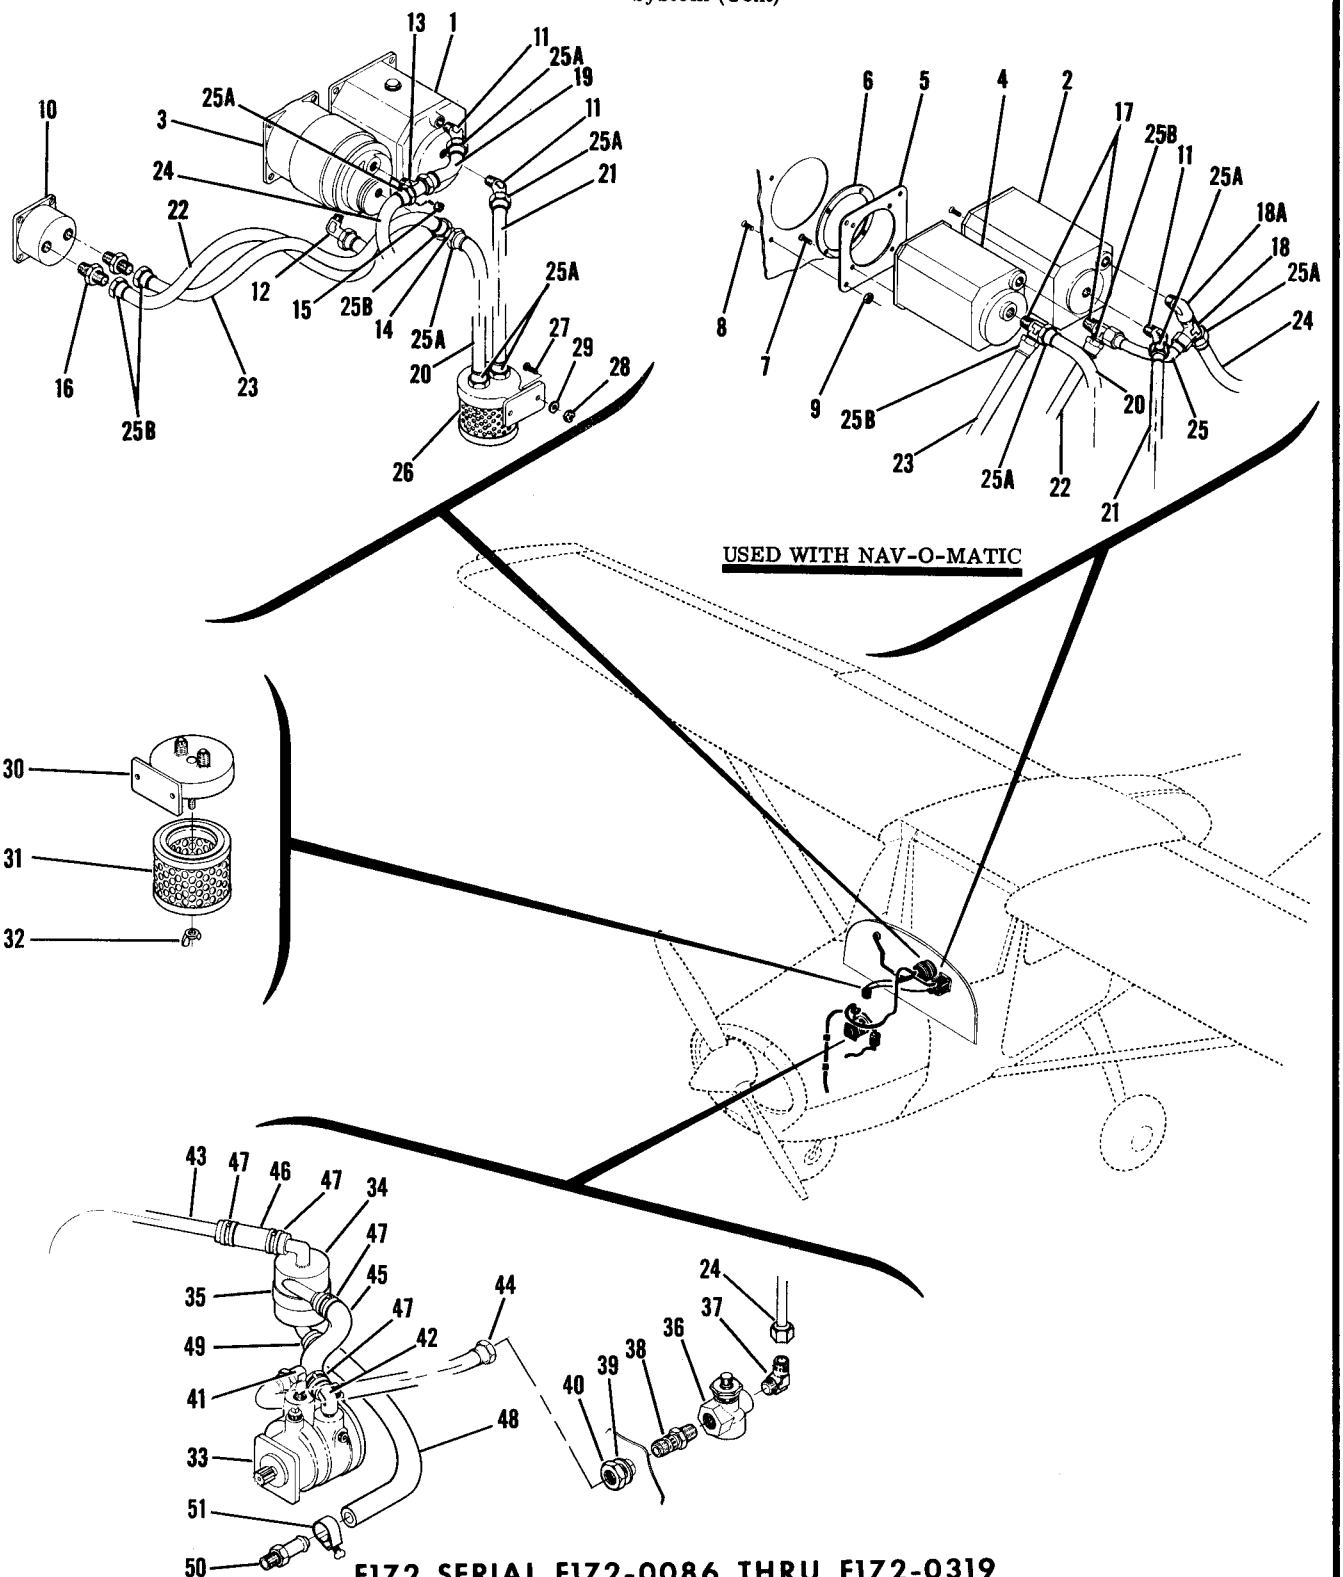


F172 SERIAL F172-0086 THRU F172-0319
172 SKYHAWK SERIAL 17251823 THRU 17252758
172 SKYHAWK SERIAL 17252902 THRU 17254892

Figure 182. Engine Driven Vacuum System Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
182 -			VACUUM SYSTEM INSTALLATION-ENGINE DRIVEN	NP	A
- 1	C661002-0201		GYRO-DIRECTIONAL REMFD WHEN EXHAUSTED SEE FIG 175	1	
- 2	30370-0100		GYRO-DIRECTIONAL ARC	1	
- 3	C661001-0201		GYRO-HORIZON REMFD WHEN EXHAUSTED SEE FIG 175	1	
- 4	30475-0000		GYRO-HORIZON ARC	1	
- 5	0713749-6		MOUNTING PLATE ASSEMBLY	1	
- 6	2104		RING ARC	1	
			ATTACHING PARTS		
- 7	AN515-6R14		SCREW	4	
- 8	AN507-1032R5		SCREW	4	
- 9	MS21044N3		NUT	4	
			---*---		
-10	S1414N1		GAGE WEU C668540-0101	1	
-11	MS20823-6D		ELBOW	2	
-12	MS20822-4-4D		ELBOW	1	
-13	MS20825-6D		TEE	1	
-14		**	TEE	1	
-15	MS20913-2D		PLUG	1	
-16	AN816-4D		NIPPLE	2	
-17		**	TEE	2	
-18	MS20826-6D		TEE	1	
-18A	AN914-2D		ELBOW	1	
-19	S1615-6		HOSE 3.75 IN LG BULK ITEM REF S1615-6-3.75	1	
-20	S1495-6		HOSE 10.50 IN LG BULK ITEM REF S1495-6-10.50	1	
-21	S1495-6		HOSE 12.75 IN LG BULK ITEM REF S1495-6-12.75	1	
-22	S1495-4		HOSE 27.50 IN LG BULK ITEM REF S1495-4-27.50	1	
-23	S1495-4		HOSE 33.00 IN LG BULK ITEM REF S1495-4-33.00	1	
-24	S1495-6		HOSE 16.50 IN LG BULK ITEM REF S1495-6-16.50	1	
-25	0500118-37		LINE ASSEMBLY	1	
-25A	S1497-6		FITTING-HOSE END	8	
-25B	S1497-4		FITTING-HOSE END	4	
-26	C294501-0101		AIR FILTER ASSEMBLY	1	
			ATTACHING PARTS		
-27	AN520-10R10		SCREW	2	
-28	MS21044N3		NUT	2	
-29	AN960PD10		WASHER	1	
			---*---		
-30	C294501-0102		BRACKET	1	
-31	C294501-0103		FILTER ELEMENT	1	
			ATTACHING PARTS		
-32	P2274		NUT-WING DCI	1	
			---*---		
-33	C431001-0101		PUMP	1	
-34	C165001-0102		OIL SEPARATOR	1	
			ATTACHING PARTS		
-35	AN742D36		CLAMP	2	
	AN960D10L		WASHER	4	
	AN3-4A		BOLT	1	
	MS21044N3		NUT	1	
			---*---		
-36	C482001-0101		VALVE-RELIEF	1	
-37	MS20822-6D		ELBOW	1	
-38	S1988-1		FITTING	1	
-39	AN960D916		WASHER	1	
-40	AN924-6D		NUT	1	
-41	MS20822-6-6B		ELBOW	1	
-42	AN842-8		ELBOW	1	
-43	0500106-378		TUBE	1	
-44	S1499-6LL-		HOSE ASSEMBLY	1	
-45	S1495-8-		HOSE-XX IN LG BULK ITEM REF S-1495-8-XX	1	
-46	S1495-8-		HOSE-XX IN LG BULK ITEM REF S-1495-8-XX	1	
			ATTACHING PARTS		
-47	NAS397-14		CLAMP	2	
			---*---		
-48	S1495-8		HOSE-XX IN LG BULK ITEM REF S-1495-8-XX	1	
			ATTACHING PARTS		
-49	NAS397-14		CLAMP	1	
-50	AN840-8D		ADAPTER	1	
-51	AN737RM30		CLAMP	1	
			---*---		
			NOTE. LENGTHS TO BE ADDED LATER		
			NOTE. **ORDER 1 EACH MS20826-6D TEE, 1713039-1 ELBOW ASSEMBLY, NAS397-8 CLAMP.		
			A---172 SKYHAWK SERIAL 17251823 THRU 17252758 172 SKYHAWK SERIAL 17252900 THRU 17254892 F172 SERIAL F172-0086 THRU F172-0319		

Vacuum System (Cont)

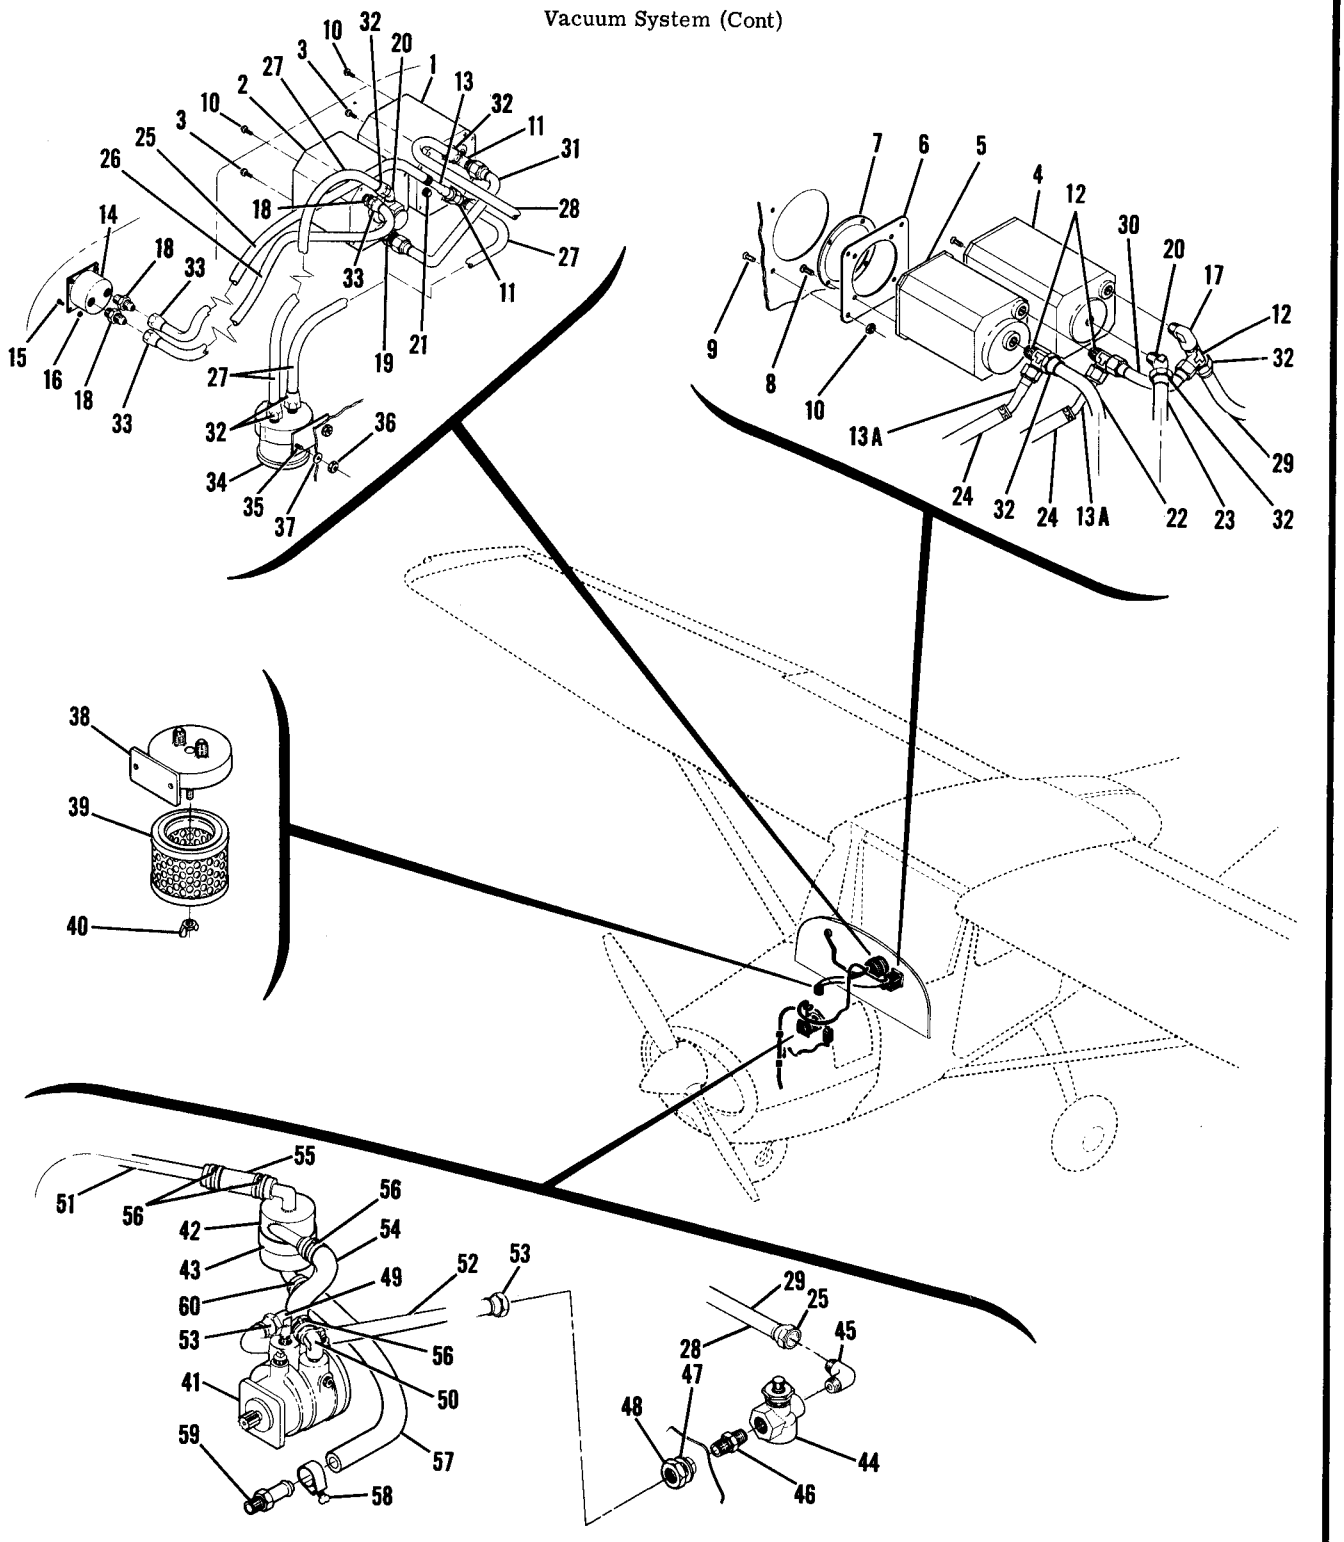

172 SKYHAWK SERIAL 17252759 THRU 17252901
172 SKYHAWK SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F172-0559

Figure 183. Engine Driven Vacuum System Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
183 -		VACUUM SYSTEM INSTALLATION-ENGINE DRIVEN	NP	A
- 1	C661002-0201	GYRO-DIRECTIONAL NEW	1	
- 2	C661001-0201	GYRO-HORIZON NEW	1	
		ATTACHING PARTS		
- 3	AN515B6-R6	SCREW	4	
		---*---		
- 4	30370-0100	GYRO-DIRECTIONAL NAV-O-MATIC ONLY ARC	1	
- 5	30475-0000	GYRO-HORIZON NAV-O-MATIC ONLY ARC	1	B
		WHEN EXHAUSTED USE 37570-0001		
	37570-0001	GYRO-ATTITUDE	1	C
- 6	0713749-6	MOUNTING PLATE ASSEMBLY	1	
- 7	2104	RING ARC	1	
		ATTACHING PARTS		
- 8	AN515-6R14	SCREW	4	
- 9	AN507-1032R5	SCREW	4	
-10	MS21044N3	NUT	4	
		---*---		
-11	MS20826-6D	TEE	2	
-12	MS20826-6D	TEE	3	
-13	1713039-1	ELBOW ASSEMBLY	1	
	NAS397-8	CLAMP	1	
-13A	1713039-1	ELBOW ASSEMBLY	2	
	NAS397-8	CLAMP	2	
-14	S1414-1	GAGE ASSEMBLY-SUCTION WEU C668540-0101	1	
	C668540-0101	GAGE-SUCTION	1	
		ATTACHING PARTS		
-15	AN515B6R12	SCREW	4	
-16	AN34086	NUT	4	
	AN936A6	WASHER	4	
		---*---		
-17	AN914-2D	ELBOW	1	
-18	AN816-4D	NIPPLE	3	
-19	AN816-6D	NIPPLE	1	
-20	MS20823-6D	ELBOW	1	
-21	MS20193-10	PLUG	1	
-22	S1495-6	HOSE 10.50 IN LG BULK ITEM REF S1495-6-10.50	1	
-23	S1495-6	HOSE 12.75 IN LG BULK ITEM REF S1495-6-12.75	1	
-24	S1495-4	HOSE 27.50 IN LG BULK ITEM REF S1495-4-27.50	2	
-25	S1495-4	HOSE * IN LG BULK ITEM REF S1495-4-*	1	
-26	S1495-4	HOSE 27.50 IN LG 32.00 IN LG BKI REF S1495-4-32.00	1	
-27	S1495-6	HOSE 14.75 IN LG BULK ITEM REF S1495-6-14.75	2	
-28	S1495-6	HOSE 19.25 IN LG BULK ITEM REF S1495-6-19.25	1	
-29	S1495-6	HOSE 16.50 IN LG BULK ITEM REF S1495-6-16.50	1	
-30	0500118-37	LINE ASSEMBLY	1	
-31	0500118-38	LINE ASSEMBLY	1	
-32	S1497-6	FITTING-HOSE END	6	
-33	S1497-4	FITTING-HOSE END	4	
-34	C294501-0101	AIR FILTER ASSEMBLY	1	
		ATTACHING PARTS		
-35	AN520-10R10	SCREW	2	
-36	MS21044N3	NUT	2	
-37	AN960PD10	WASHER	2	
		---*---		
-38	C294501-0102	BRACKET	1	
-39	C294501-0103	FILTER ELEMENT	1	
		ATTACHING PARTS		
-40	P2274	NUT-WING	1	
		---*---		
-41	C431001-0101	PUMP	1	
-42	C165001-0102	OIL SEPARATOR	1	
		ATTACHING PARTS		
-43	AN742D34	CLAMP	2	
	AN960D10L	WASHER	4	
	AN3-4A	BOLT	1	
	MS21044N3	NUT	1	
		---*---		
-44	C482001-0101	VALVE-RELIEF	1	
-45	MS20822-6-6D	ELBOW	1	
-46	S1988-1	FITTING	1	
-47	AN960D16	WASHER	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
183 -48	AN924-6D	NUT	1	
-49	MS20822-6-6S	ELBOW	1	
-50	AN842-8	ELBOW	1	
-51	0500106-378	TUBE	1	
-52	S1499-6LL	HOSE ASSEMBLY	1	
-53	S1497-6	FITTING-HOSE END	2	
-54	S1495-8	HOSE-* IN LG BULK ITEM REF S1495-8-*	1	
-55	S1495-8	HOSE-* IN LG BULK ITEM REF S1495-8-*	1	
		ATTACHING PARTS		
-56	NAS397-14	CLAMP	2	
		---*---		
-57	S1495-8	HOSE-* IN LG BULK ITEM REF S1495-8-*	1	
		ATTACHING PARTS		
-58	NAS397-14	CLAMP	1	
-59	AN840-8D	ADAPTER	1	
-60	AN737RM30	CLAMP	1	
		---*---		
		NOTE. *LENGTH TO BE ADDED LATER		
		A---172 SKYHAWK SERIAL 17252759 THRU 17252901		
		172 SKYHAWK SERIAL 17254893 THRU 17256512		
		F172 SERIAL F172-0320 THRU F172-0559		
		B---172 SKYHAWK SERIAL 17252759 THRU 17252901		
		172 SKYHAWK SERIAL 17254893 THRU 17256512		
		F172 SERIAL F172-0320 THRU F172-0431		
		F172-0436 THRU F172-0442		
		F172-0444 THRU F172-0446		
		C---F172 SERIAL F172-0432 THRU F172-0435,		
		F172-0443, F172-0447 THRU F172-0559		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
184 -		VACUUM SYSTEM INSTALLATION	NP	A
- 1	C661001-0501 **	GYRO-HORIZON WEU C661001-0505	1	D
	C661001-0505 **	GYRO-HORIZON	1	E
	C661001-0502 **	GYRO-HORIZON	1	
	C661001-0503 **	GYRO-HORIZON	1	
	C661001-0504 **	GYRO-HORIZON	1	
		ATTACHING PARTS		
- 2	AN515B6R6	SCREW	4	
		---*---		
- 3	C661002-0501 ***	GYRO-DIRECTIONAL WEU C661002-0505	1	D
	C661002-0505 ***	GYRO-DIRECTIONAL	1	E
	C661002-0301 ***	GYRO-DIRECTIONAL	1	
	C661002-0503 ***	GYRO-DIRECTIONAL WEU C661002-0506	1	D
	C661002-0506 ***	GYRO-DIRECTIONAL	1	E
	C661002-0504 ***	GYRO-DIRECTIONAL	1	
		ATTACHING PARTS		
- 4	AN515B6R6	SCREW	3	
		---*---		
- 5	37570-0001	GYRO-HORIZON ARC NAV-O-MATIC 400 WEU 37570-0105	1	H
	37570-0105	GYRO-HORIZON ARC NAV-O-MATIC 400	1	
		ATTACHING PARTS		
- 6	AN515B6R6	SCREW	4	
		---*---		
- 7	30370-0100	GYRO-DIRECTIONAL ARC NAV-O-MATIC 400 WEU 30370-0102	1	H
	30370-0102	GYRO-DIRECTIONAL ARC NAV-O-MATIC 400 WEU 40760-0104	1	
	30370-0100	GYRO-DIRECTIONAL ARC NAV-O-MATIC 300 WEU 30370-0102	1	
	30370-0102	GYRO-DIRECTIONAL ARC NAV-O-MATIC 300 WEU 40760-0104	1	
		ATTACHING PARTS		
- 8	AN515B6R6	SCREW	3	
		---*---		
- 9	MS20826-6D	TEE NAV-O-MATIC 400	3	H
-10	MS20826-6D	TEE	2	
-11	S1495-6	HOSE 15.00 IN LG BULK ITEM REF S1495-6-15.00 FROM HORIZON GYRO TO DIRECTIONAL GYRO NAV-O-MATIC 400	1	H
-12	S1495-6	HOSE 11.00 IN LG BULK ITEM REF S1495-6-11.00 FROM HORIZON GYRO TO DIRECTIONAL GYRO	1	
-13	S1495-6	HOSE 17.00 IN LG BULK ITEM REF S1495-6-17.00 FROM GYROS TO AIR FILTER NAV-O-MATIC 400	2	H
-14	S1495-6	HOSE 14.75 IN LG BULK ITEM REF S1495-6-14.75 FROM GYROS TO AIR FILTER	2	
-15	S1495-6	HOSE 18.50 IN LG BULK ITEM REF S1495-6-18.50 FROM TEE TO RELIEF VALVE NAV-O-MATIC 400	1	H
-16	S1495-6	HOSE 10.50 IN LG BULK ITEM REF S1495-6-10.50 FROM TEE TO RELIEF VALVE	1	
-17	S1495-4	HOSE 36.00 IN LG BULK ITEM REF S1495-4-36.00 FROM HORIZON GYRO TO SUCTION GAGE NAV-O-MATIC 400	1	H
-18	S1495-4	HOSE 32.00 IN LG BULK ITEM REF S1495-4-32.00 FROM HORIZON GYRO TO SUCTION GAGE	1	J
-19	S1495-4	HOSE 14.00 IN LG BULK ITEM REF S1495-4-14.00 FROM HORIZON GYRO TO SUCTION GAGE	1	G
-20	S1495-4	HOSE 36.00 IN LG BULK ITEM REF S1495-4-36.00 FROM HORIZON GYRO TO SUCTION GAGE NAV-O-MATIC 400	1	H
-21	S1495-4	HOSE 32.00 IN LG BULK ITEM REF S1495-4-32.00 FROM HORIZON GYRO TO SUCTION GAGE	1	J
-22	S1495-4	HOSE 10.00 IN LG BULK ITEM REF S1495-4-10.00 FROM HORIZON GYRO TO SUCTION GAGE	1	G
-23	AN816-4D	NIPPLE STANDARD & NAV-O-MATIC 300	3	J
-24	AN816-6D	NIPPLE STANDARD & NAV-O-MATIC 300	2	
-25	AN894D8-6	BUSHING	1	B
-26	AN821-8D	ELBOW	1	B
-27	AN816-4D	NIPPLE NAV-O-MATIC 400	2	H
-28	MS20822-6D	ELBOW NAV-O-MATIC 400	1	H
-29	NAS397-8	CLAMP	1	J
-30	NAS397-8	CLAMP	3	G
-31	NAS397-8	CLAMP NAV-O-MATIC 400	2	H
-32	1713039-1	ELBOW ASSEMBLY	1	J
	1713039-1	ELBOW ASSEMBLY NAV-O-MATIC 400	2	H

CONTINUED ON NEXT PAGE

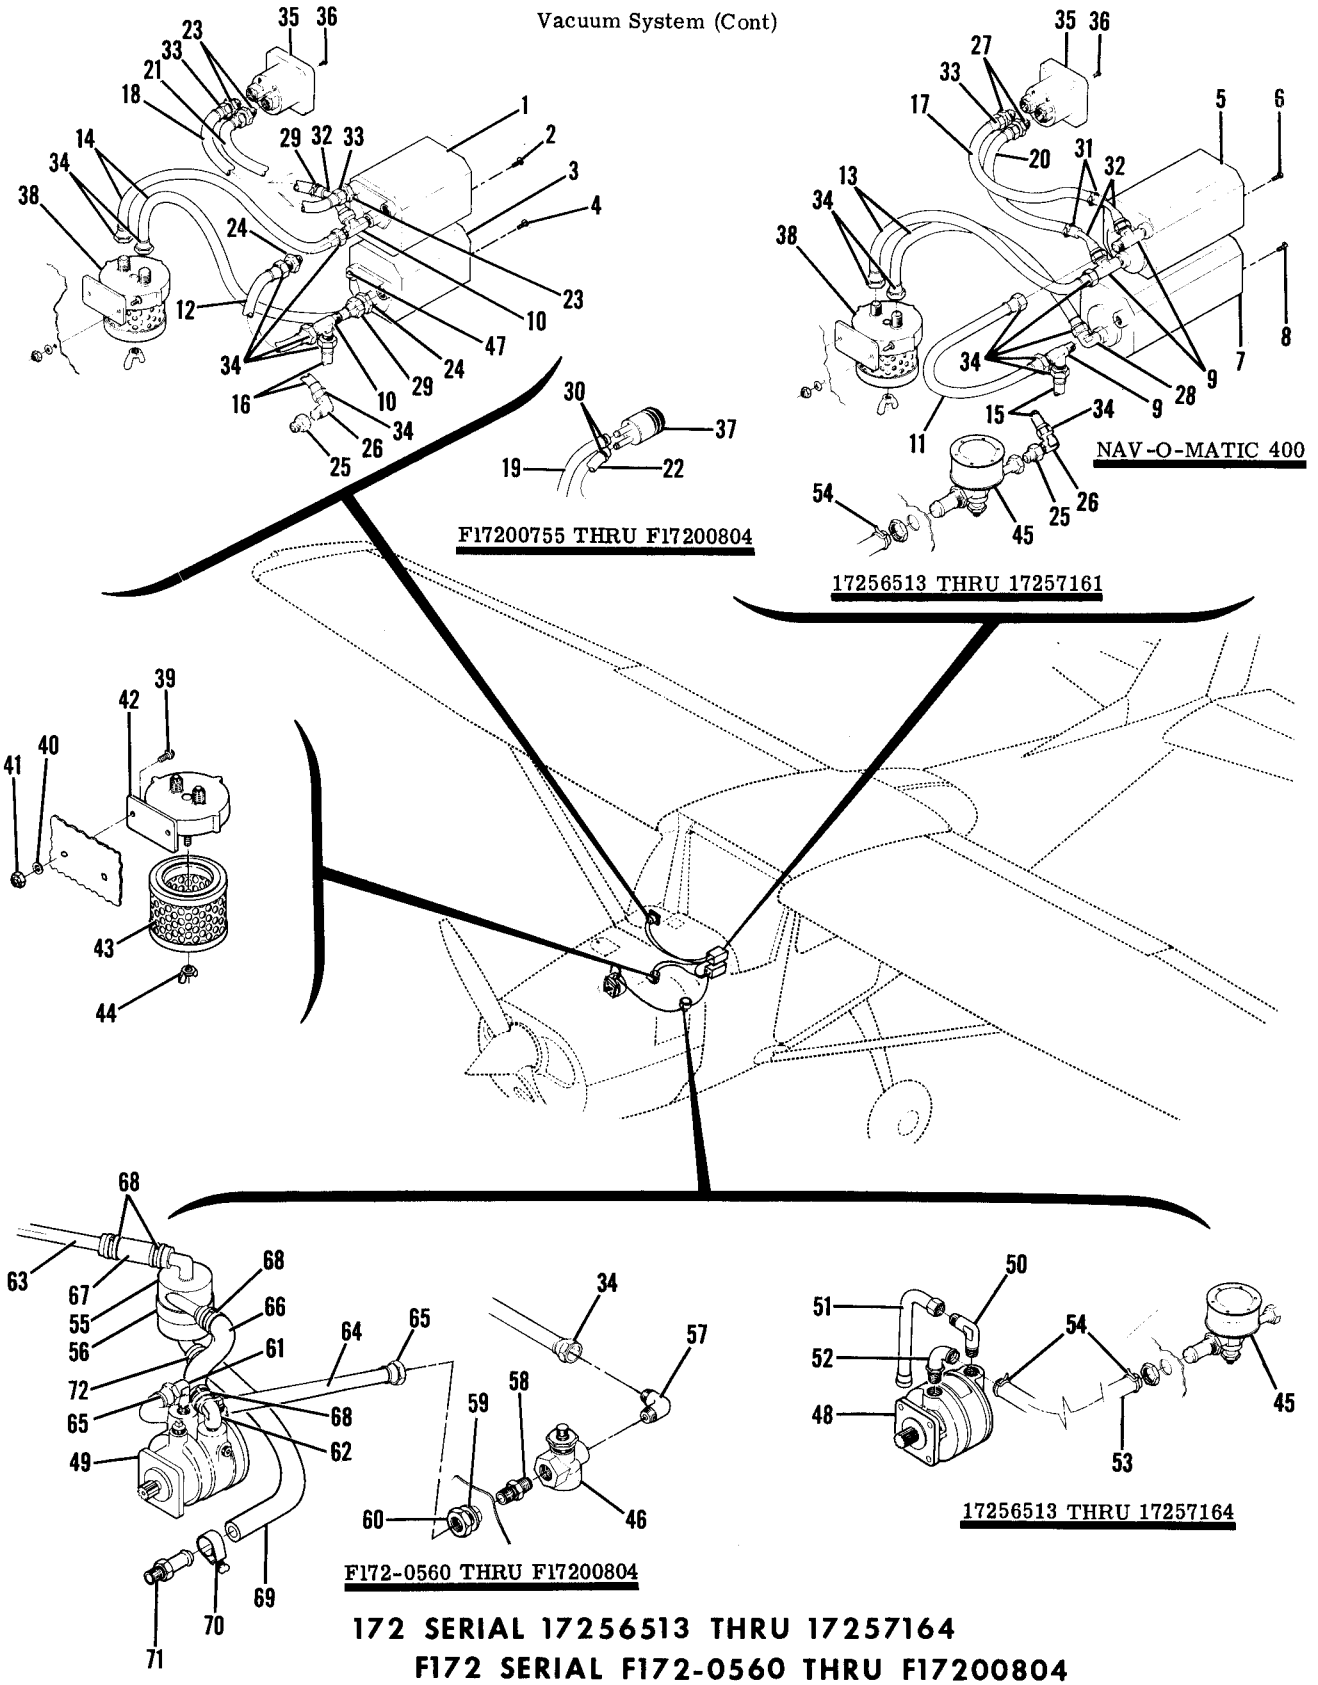

172 SERIAL 17256513 THRU 17257164
F172 SERIAL F172-0560 THRU F17200804

Figure 184. Vacuum System Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
184 -33	S1497-4	FITTING	3	J
	S1497-4	FITTING	1	G
	S1497-4	FITTING NAV-O-MATIC 400	2	H
-34	S1497-6	FITTING	8	
-35	S1414-1	SUCTION GAGE WEU C668540-0101	1	J
	C668540-0101	SUCTION GAGE	1	J
		ATTACHING PARTS		
-36	AN515B6R12	SCREW	4	J
	AN34086	NUT	4	J
	AN936A6	WASHER	4	J
		---*---		
-37	C668509-0101	SUCTION GAGE	1	G
-38	C294501-0101	AIR FILTER ASSEMBLY	1	
		ATTACHING PARTS		
-39	AN520-10R10	SCREW	2	
-40	AN960PD10	WASHER	2	
-41	MS20365-1032C	NUT	2	
		---*---		
-42	C294501-0102	BRACKET	1	
-43	C294501-0103	FILTER ELEMENT	1	
		ATTACHING PARTS		
-44	P2274	NUT-WING DCI	1	
		---*---		
-45	C482001-0201	VALVE-RELIEF	1	B
-46	C482001-0101	VALVE-RELIEF	1	C
-47	MS20913-1D	PLUG STANDARD & NAV-O-MATIC 300	1	
	MS20913-2D	PLUG STANDARD & NAV-O-MATIC 300	1	
-48	C431002-0102	PUMP-VACUUM WEU C431003-0101	1	B
	C431003-0101	PUMP-VACUUM	1	B
-49	C431001-0101	PUMP-VACUUM	1	C
-50	MS20822-8D	ELBOW	1	B
-51	1400106-81	EXHAUST TUBE	1	B
-52	1K1-6-10	FITTING AIRB	1	B
-53	S1495-10	HOSE 19.00 IN LG BKI REF S1495-10-19.00	1	B
		ATTACHING PARTS		
-54	S1494-16	CLAMP	2	B
		---*---		
-55	C165001-0102	OIL SEPARATOR	1	C
		ATTACHING PARTS		
-56	AN742D34	CLAMP	2	
	AN960D10L	WASHER	4	
	AN3-4A	BOLT	1	
	MS21044N3	NUT	1	
		---*---		
-57	MS20822-6-6D	ELBOW	1	C
-58	S1988-1	FITTING	1	C
-59	AN960D916	WASHER	1	C
-60	AN924-6D	NUT	1	C
-61	MS20822-6-6B	ELBOW	1	C
-62	AN842-8	ELBOW	1	C
-63	0500106-378	TUBE	1	F
	0500118-122	TUBE	1	G
		ATTACHING PARTS		
	MS21919DG8	CLAMP ATTACH TO ENGINE MOUNT	1	G
	MS21919DG12	CLAMP ATTACH TO 0500118-122 TUBE	1	G
	S1021Z8-8	SCREW	1	G
	NAS395-12-1	NUT	1	G
		---*---		
-64	S1495-6	HOSE * IN LG BULK ITEM REF S1495-6-*	1	C
-65	S1497-6	FITTING	1	C
-66	S1495-8	HOSE 14.50 IN LG BULK ITEM REF S1495-8-14.50	1	C
-67	S1495-8	HOSE 3.50 IN LG BULK ITEM REF S1495-8-3.50	1	C
		ATTACHING PARTS		
-68	NAS397-14	CLAMP	2	C
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
184 -69	S1495-8	HOSE 21.75 IN LG BULK ITEM REF S1495-8-21.75 -----	1	C
		ATTACHING PARTS		
-70	NAS397-14	CLAMP ----------	1	C
-71	AN840-8D	ADAPTER ----------	1	C
-72	AN737RM3D	CLAMP ----------	1	C
		---*---		
		NOTE. *LENGTH TO BE DETERMINED LATER		
		NOTE. **THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.		
		NOTE. ***THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE WITH THE EXCEPTION THAT -0301, -0503, -0506 & -0504 CANNOT BE USED ON AIRCRAFT WITHOUT CAM ROLLER ASSEMBLY.		
		A---172 SERIAL 17256513 THRU 17257164 F172 SERIAL F172-0560 THRU F17200804 B---172 SERIAL 17256513 THRU 17257164 C---F172 SERIAL F172-0560 THRU F17200804 D---172 SERIAL 17256513 THRU 17257164 F172 SERIAL F172-0560 THRU F17200754 E---F172 SERIAL F17200755 THRU F17200804 F---F172 SERIAL F172-0560 THRU F17200754 G---F172 SERIAL F17200755 THRU F17200804 H---172 SERIAL 17256513 THRU 17257161 J---172 SERIAL 17256513 THRU 17257164 F172 SERIAL F172-0560 THRU F17200754		

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
185 -		VACUUM SYSTEM INSTALLATION	NP	A
- 1	C661001-0501 **	GYRO-HORIZON WEU C661001-0505	1	
	C661001-0505 **	GYRO-HORIZON WEU C661076-0102	1	F
	C661076-0102 **	GYRO-HORIZON	1	G
	C661001-0502 **	GYRO-HORIZON ALT WEU C661076-0101	1	F
	C661076-0101 **	GYRO-HORIZON ALT	1	G
	C661001-0503 **	GYRO-HORIZON ALT WEU C661076-0105	1	F
	C661076-0105 **	GYRO-HORIZON ALT	1	G
	C661001-0504 **	GYRO-HORIZON ALT WEU C661076-0103	1	F
	C661076-0103 **	GYRO-HORIZON ALT	1	G
	C661076-0105 **	GYRO-HORIZON ALT	1	K
		ATTACHING PARTS		
- 2	AN515B6R6	SCREW	4	
		---*---		
- 3	C661002-0501 ***	GYRO-DIRECTIONAL WEU C661002-0505	1	
	C661002-0505 ***	GYRO-DIRECTIONAL WEU C651075-0104	1	F
	C661075-0104 ***	GYRO-DIRECTIONAL	1	G
	C661002-0301 ***	GYRO-DIRECTIONAL ALT WEU C661075-0106	1	F
	C661075-0106 ***	GYRO-DIRECTIONAL ALT	1	G
	C661002-0503 ***	GYRO-DIRECTIONAL ALT WEU C661002-0506	1	
	C661002-0506 ***	GYRO-DIRECTIONAL ALT WEU C661075-0103	1	F
	C661075-0103 ***	GYRO-DIRECTIONAL ALT	1	G
	C661002-0504 ***	GYRO-DIRECTIONAL ALT WEU C661075-0101	1	F
	C661075-0101 ***	GYRO-DIRECTIONAL ALT	1	G
	C661075-0106 ***	GYRO-DIRECTIONAL ALT	1	K
- 4	30370-0100	GYRO-DIRECTIONAL ARC NAV-O-MATIC 300 ONLY WEU 30370-0102	1	F
	30370-0102	GYRO-DIRECTIONAL ARC NAV-O-MATIC 300 ONLY WEU 40760-0104	1	H
	40760-104	GYRO-DIRECTIONAL ARC NAV-O-MATIC 300 ONLY	1	J
		ATTACHING PARTS		
- 5	AN515B6R6	SCREW	3	
		---*---		
- 6	MS20822-6D	ELBOW	2	
- 7	MS20825-6D	TEE	1	
- 8	AN816-4D	NIPPLE	3	
- 9	MS20822-6D	ELBOW	1	
-10	MS20913-1D	PLUG	1	
	MS20913-2D	PLUG	1	
-11	S1495-6	HOSE 12.00 IN LG BULK ITEM REF S1495-6-12.00 GYRO-HORIZON TO RELIEF VALVE	1	
-12	S1495-6	HOSE 12.00 IN LG BULK ITEM REF S1495-6-12.00 GYRO-DIRECTIONAL TO RELIEF VALVE	1	
-13	S1495-6	HOSE 14.75 IN LG BULK ITEM REF S1495-6-14.75 GYROS TO AIR FILTER	2	L
-13A	S1495-6	HOSE 17.00 IN LG BULK ITEM REF S1495-6-17.00 GYRO-HORIZON TO AIR FILTER	1	M
	S1495-6	HOSE 18.50 IN LG BULK ITEM REF S1495-6-18.50 GYRO-DIRECTIONAL TO AIR FILTER	1	M
-14	S1495-4	HOSE 36.00 IN LG BULK ITEM REF S1495-4-36.00 GYRO-HORIZON TO SUCTION GAGE	2	B
-14A	S1495-4	HOSE 14.00 IN LG BULK ITEM REF S1495-4-14.00 GYRO-HORIZON TO SUCTION GAGE	1	C
-14B	S1495-4	HOSE 16.00 IN LG BULK ITEM REF S1495-4-16.00 GYRO-HORIZON TO SUCTION GAGE	1	C
-15	S1497-6	FITTING	6	L
	S1497-6	FITTING	4	M
-15A	S2209-1	STA STRAP	2	M
-16	S1497-4	FITTING	3	B
	S1497-4	FITTING	1	C
-17	NAS397-8	CLAMP	1	B
-17A	NAS397-8	CLAMP	3	C
-18	1713039-1	ELBOW ASSEMBLY	1	
-19	S1494-9	CLAMP	2	
-20	S1414-1	GAGE-SUCTION	1	B
		ATTACHING PARTS		
-21	AN515B6R12	SCREW	4	B
		---*---		
-21A	C668509-0101	GAGE-SUCTION	1	C
-22	C294501-0101	AIR FILTER ASSEMBLY	1	L

CONTINUED ON NEXT PAGE

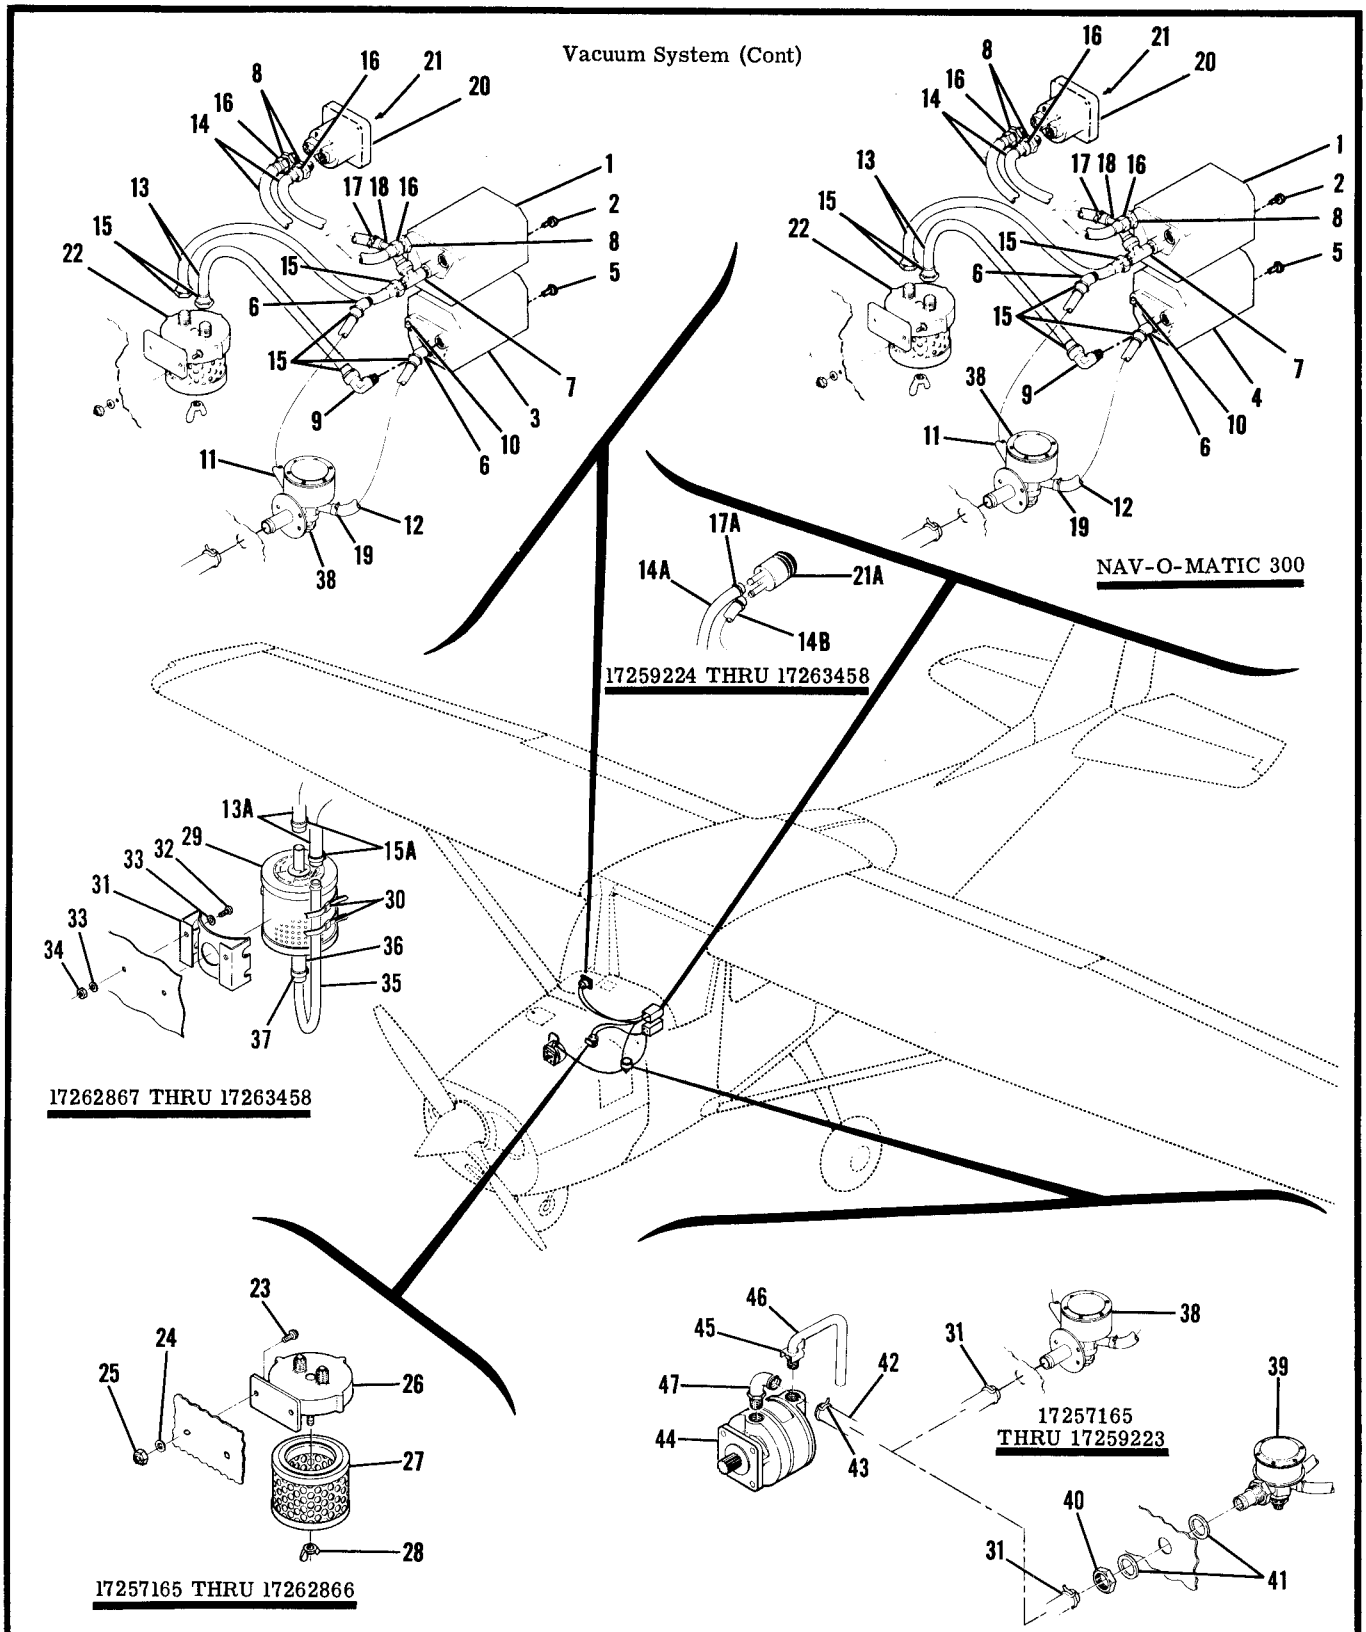

172 SERIAL 17257165 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Figure 185. Vacuum System Installation

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
185 -		ATTACHING PARTS		
-23	AN520-10R10	SCREW	2	L
-24	AN960PD10	WASHER	2	L
-25	MS20365-1032C	NUT	2	L
		---*---		
-26	C294501-0102	BRACKET	1	L
-27	C294501-0103	FILTER ELEMENT	1	L
		ATTACHING PARTS		
-28	P2274	NUT-WING DCI	1	L
		---*---		
185 -29	C294502-0101	AIR FILTER	1	M
		ATTACHING PARTS		
-30	S2209-3	STA STRAP	2	M
		---*---		
-31	0513448-1	BRACKET-FILTER	1	M
		ATTACHING PARTS		
-32	AN520-10R10	SCREW	2	M
-33	AN960PD10L	WASHER	4	M
-34	MS21045L3	NUT	2	M
		---*---		
-35	0713533-1	U TUBE-FILTER	1	M
-36	S1495-6	HOSE 2.00 IN LG BULK ITEM REF S1495-6-2.00	1	M
		AIR FILTER TO U TUBE		
-37	S2209-1	STA STRAP	2	M
-38	C482001-0301	VALVE-RELIEF WEU C482001-0401	1	D
		ATTACHING PARTS		
	AN515-8R8	SCREW	2	D
	MS21044N08	NUT	2	D
		---*---		
-39	C482001-0401 %	VALVE-RELIEF	1	E
		ATTACHING PARTS		
-40	AN924-10D	NUT	1	E
-41	S1450-14A20-016	WASHER USE WHEN REPLACING C482001-0301 WITH C482001-0401	2	E
	AN960PD1416L	WASHER	2	E
		---*---		
-42	S1495-10	HOSE 19.00 IN LG BULK ITEM REF S1495-10-19.00	1	
		RELIEF VALVE TO VACUUM PUMP		
		ATTACHING PARTS		
-43	S1495-16	CLAMP	2	
		---*---		
-44	C431002-0102	PUMP-VACUUM WEU C431003-0101	1	D
	C431003-0101	PUMP-VACUUM	1	E
	C431003-0301	PUMP-VACUUM ALT	1	E
-45	1250319-1	LOCATOR	1	
-46	IK66-1	TUBE-EXHAUST ABNE	1	
-47	IK1-6-10	FITTING ABNE	1	
		NOTE. **THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.		
		NOTE. ***THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE WITH THE EXCEPTION THAT -301, -503 & -504 CANNOT BE USED ON AIRCRAFT WITHOUT CAM ROLLER ASSEMBLY.		
		NOTE. %WHEN ORDERING THIS PART FOR AIRPLANES ORIGINALLY EQUIPPED WITH C482001-0301 VALVE ALSO ORDER TWO AN924-10D NUTS & TWO S1450-14A20-090 WASHERS		
		A---172 SERIAL 17257165 THRU 17263458 F172 SERIAL F1720085 THRU F17201234		
		B---172 SERIAL 17257165 THRU 17259223		
		C---172 SERIAL 17259224 THRU 17263458 F172 SERIAL F17200805 THRU F17201234		
		D---172 SERIAL 17257165 THRU 17259760 F172 SERIAL F17200805 THRU F17201234		
		E---172 SERIAL 17259761 THRU 17263458 F172 SERIAL F17200805 THRU F17201234		
		F---172 SERIAL 17257165 THRU 17259903 F172 SERIAL F17200805 THRU F17201234		
		G---172 SERIAL 17259904 THRU 17263458		
		H---172 SERIAL 17259904 THRU 17260758		
		J---172 SERIAL 17260759 THRU 17263458		
		K---172 SERIAL 17262000 THRU 17263458		
		L---172 SERIAL 17257165 THRU 17262866 F172 SERIAL F17200805 THRU F17201234		
		M---172 SERIAL 17262867 THRU 17263458		

Manifold Pressure & Carb Air Temp Installation


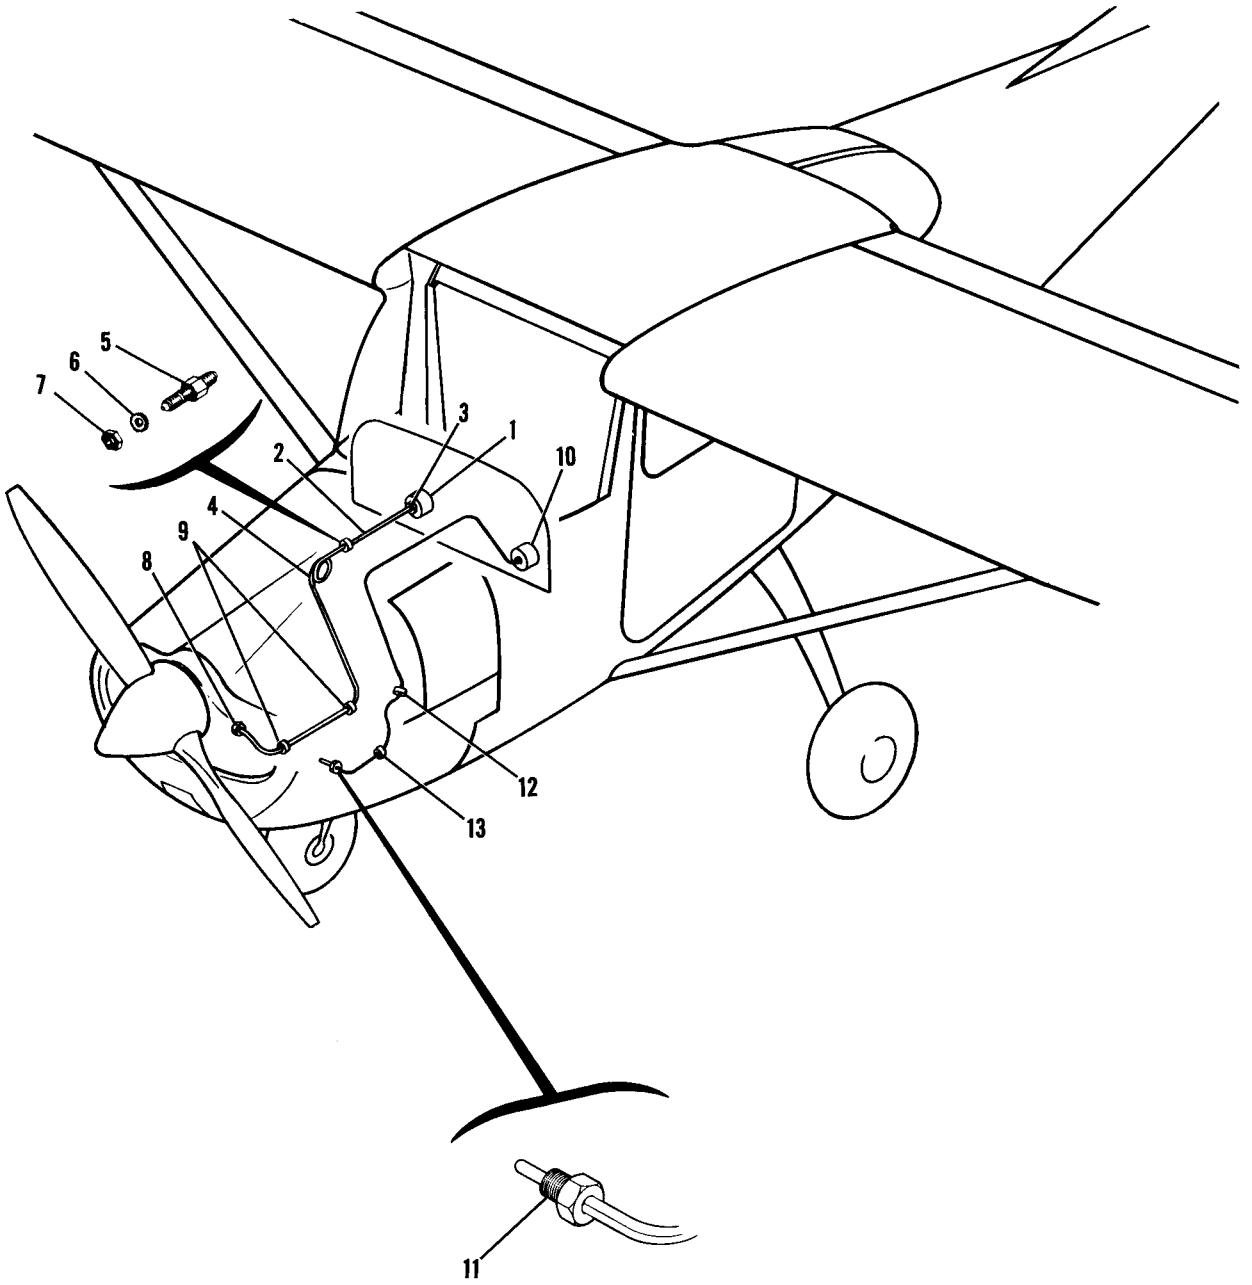


Figure 186. Manifold Pressure Gage and Carburetor Air Temp Gage Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
186 -		MANIFOLD PRESSURE GAGE AND CARB AIR TEMP INSTALLATIONS	NP	A
		MANIFOLD PRESSURE GAGE INSTALLATION	1	B
- 1	S1301N1	GAGE-MANIFOLD PRESSURE	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	AN936A6B	WASHER	4	
	AN340B6	NUT	4	
		---*---		
- 2	0500118-11	LINE ASSEMBLY GAGE TO FIREWALL WEU 0500118-97	1	
	0500118-97	LINE ASSEMBLY GAGE TO FIREWALL	1	
		ATTACHING PARTS		
- 3	AN816-2D	NIPPLE	1	
		---*---		
- 4	0500106-350	LINE ASSEMBLY FIREWALL TO MANIFOLD WEU 0500118-100	1	
	0500118-100	LINE ASSEMBLY FIREWALL TO MANIFOLD	1	
		ATTACHING PARTS		
- 5	AN832-2D	UNION	1	
- 6	AN960-516	WASHER	1	
- 7	AN924-2D	NUT	1	
- 8	AN816-2D	NIPPLE	1	
- 9	AN742D2	CLAMP TIN	2	
	S1021Z8-10	SCREW	2	
		---*---		
		CARBURETOR AIR TEMPERATURE GAGE INSTALLATION	1	A
	0713209-1	PLACARD INSTALLED ON GAGE FACE	1	C
-10	S1311N1	GAGE-CARBURETOR AIR TEMPERATURE	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	AN340B6	NUT	4	
		---*---		
	0411897-3	ADAPTER PLATE-GAGE	1	C
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	C
	AN936A6B	WASHER	4	C
	NAS395-2-3	NUT	4	C
		---*---		
	MS3106A14S7S	PLUG	1	
-11	0550209-1	PROBE	1	
-12	AN742D12	CLAMP	1	
	MS21919DG3	CLAMP	1	
		ATTACHING PARTS		
	S1021Z8-10	SCREW	1	
	NAS446-4	NUT	1	
		---*---		
-13	AN742D16	CLAMP	1	B
	MS21919DG3	CLAMP	1	B
		ATTACHING PARTS		
	S1021Z8-10	SCREW	1	B
	NAS446-4	NUT	1	B
		---*---		

A---172 SERIAL 17249545 THRU 17263458
F172 SERIAL F172-0001 THRU F17201234
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
B---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
C---172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

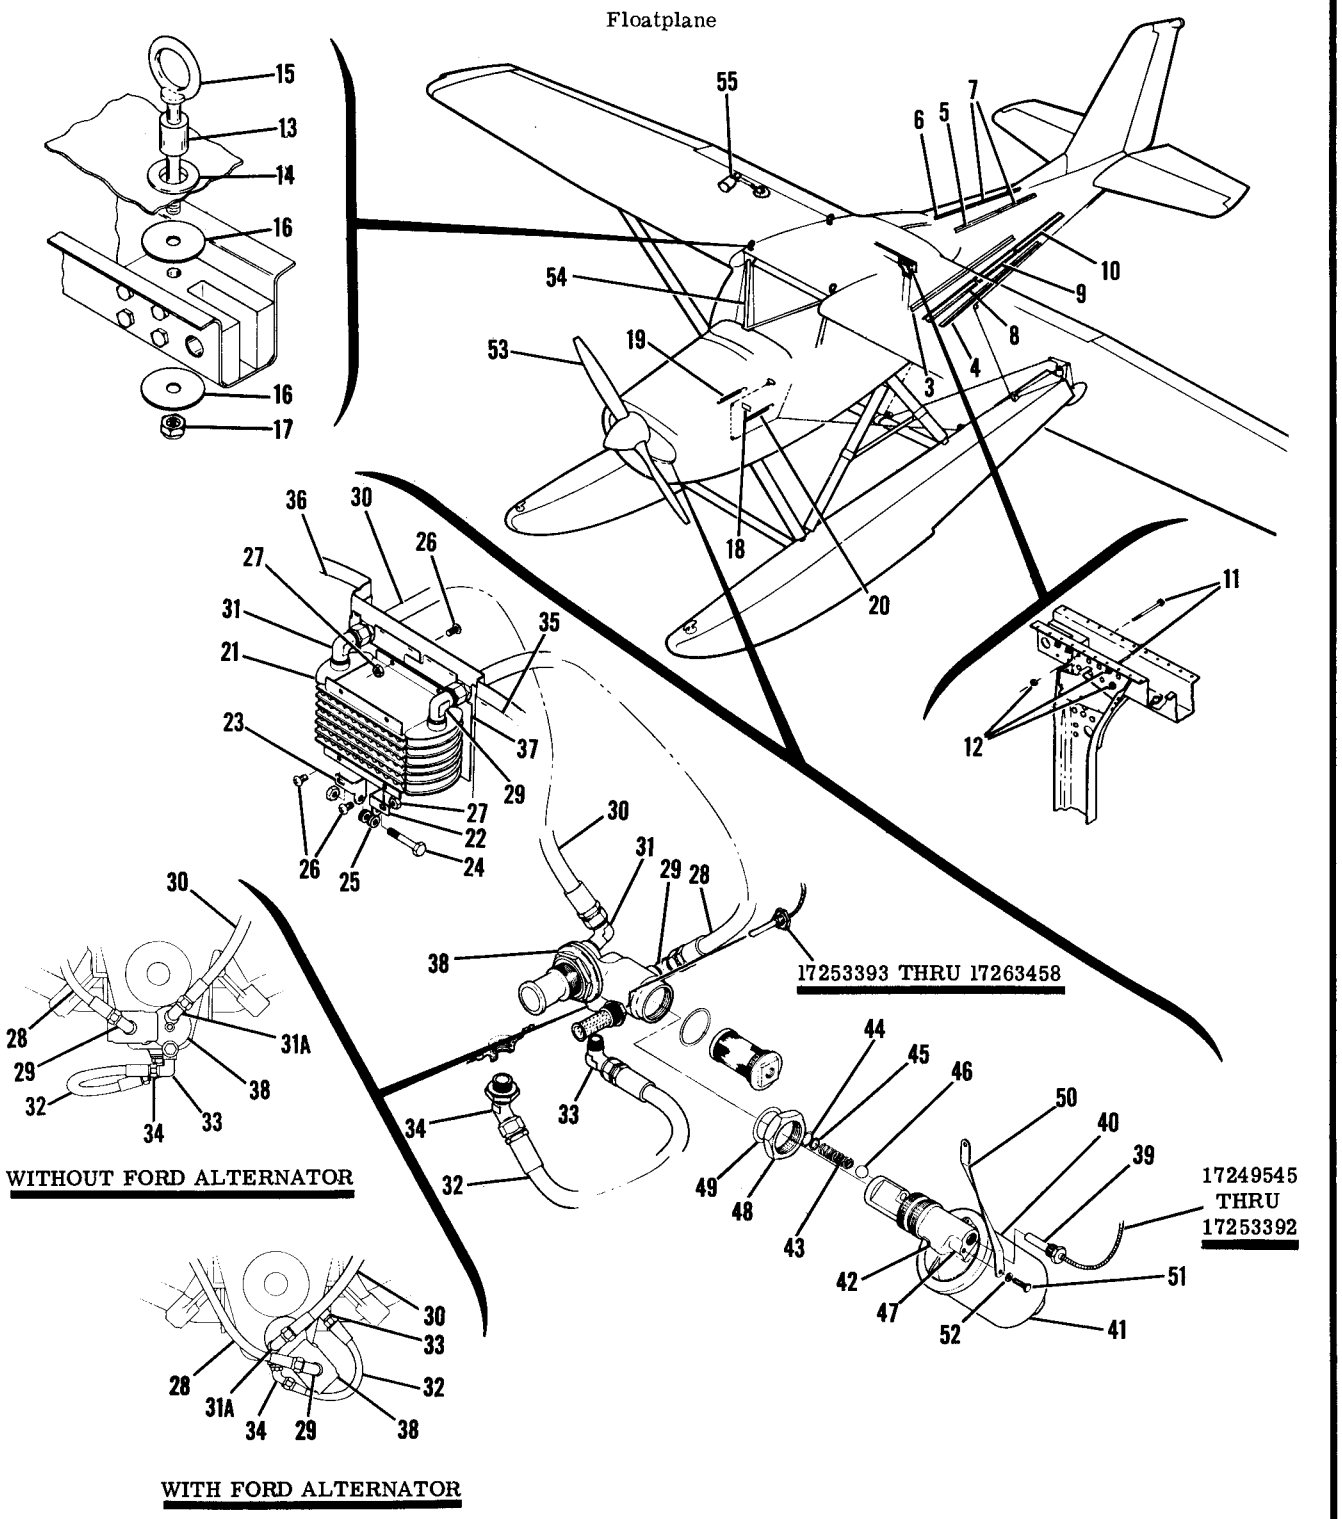

172 SERIAL 17249545 THRU 17263458

Figure 187. Floatplane Fittings Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
187 -		FLOATPLANE FITTINGS INSTALLATION	NP	A
- 1		DELETED, NEVER USED		
- 2		DELETED, NEVER USED		
- 3	0500044-27	STRINGER-LH	1	J
	0512041-5	STRINGER-LH	1	K
- 4	0500044-28	STRINGER-RH	1	J
	0512041-4	STRINGER-RH	1	K
- 5	0500044-29	STRINGER-LH	1	
- 6	0500044-30	STRINGER-RH	1	
- 7	0500044-31	STRINGER	2	
- 8	0500044-32	STRINGER	1	L
- 9	0500044-33	STRINGER	1	
-10	0500044-34	STRINGER	1	
-11	AN3-20A	BOLT	8	
-12	MS21044N3	NUT	8	
		HOISTING PROVISIONS INSTALLATION	NP	
-13	0541115-2	SPACER	4	
-14	MS35489-17	GROMMET	4	
-15	0541115-3	EYEBOLT	4	
		ATTACHING PARTS		
-16	AN970-5	WASHER	2	
-17	MS21042L5	NUT	1	
		---*---		
-18	0513219-13	PLACARD ASSEMBLY-FLOATPLANE	1	E
		ATTACHING PARTS		
	S1021Z6-8	SCREW	4	
		---*---		
	0513219-10	PLACARD-FLOATPLANE	1	
-19	0310196-12	SPRING-BRAKE & RUDDER RETRUN RH	1	
-20	0310196-5	SPRING-BRAKE & RUDDER RETURN LH	1	
		OIL COOLER INSTALLATION	NP	G
-21	UA526361-1	OIL COOLER UA	1	G
	8526250	OIL COOLER HR ALTERNATE	1	
		ATTACHING PARTS		
-22	0550230-7	SUPPORT-LH FRONT	1	
	0550230-9	SUPPORT-LH REAR	1	
-23	0550230-8	SUPPORT-RH FRONT	1	
	0550230-10	SUPPORT-RH REAR	1	
-24	AN4-16A	BOLT	2	
-25	AN960-416	WASHER	8	
-26	AN520-10R8	SCREW	6	
-27	MS21044N3	NUT	6	
		---*---		
-28	S1167-8-	HOSE 27 IN LG BULK ITEM REF S-1167-8-0270	1	E
	S1167-8-	HOSE 30 IN LG BULK ITEM REF S1167-8-0300	1	F
		ATTACHING PARTS		
-29	MS20822-8D	ELBOW	2	
	AN742D28	CLAMP AROUND OIL FILLER NECK	1	
	S1486DG12U	CLAMP AROUND RETURN HOSE	1	
	S1021Z10-8	SCREW	1	
		---*---		
-30	S1167-8-	HOSE 27 IN LG BULK ITEM REF S-1167-8-0270	1	E
	S1167-8-	HOSE 33 IN LG BULK ITEM REF S1167-8-0330	1	F
		ATTACHING PARTS		
-31	MS20822-8D	ELBOW	1	
	S1486DG12U	CLAMP AROUND HOSE TO COOLER	1	
	AN742D10	CLAMP AROUND ENGINE BREATHER TUBE	1	
	S1021Z10-8	SCREW	1	
		---*---		
-31A	MS20823-8D	ELBOW	1	
-32	S1167-8-	HOSE 16 IN LG BULK ITEM REF S-1167-8-0160	1	G
		ATTACHING PARTS		
-33	MS20822-8D	ELBOW	1	
-34	MS20823-8D	ELBOW	1	
		---*---		
-35	0550230-3	BAFFLE ASSEMBLY-LH	1	G


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
187 -36	0550230-4		BAFFLE ASSEMBLY-RH	1	G
	0555162-1	*	BLAST TUBE-RH	1	
	MS35489-22	*	GROMMET	1	
	MS35489-17	*	GROMMET RH ONLY	1	
	0555181-5	*	SUPPORT-LH	1	
	0555181-6	*	SUPPORT-RH	1	
	0555181-7	*	SEAL	1	
	0713019-33	*	UNION-LH	1	
-37	0550230-2		SEAL	1	G
-38	0556012-1		ADAPTER KIT CM	1	G
-39	SEE FIG 102		PANEL ASSEMBLY-INSTRUMENT	1	G
			OIL FILTER INSTALLATION-FULL FLOW	NP	
-40			OIL FILTER ASSEMBLY ORDER SK172-115	NP	C
	1250406-2		FILTER ELEMENT KIT	1	
	5574397		GASKET-UPPER AC	1	
	6436637		GASKET-LOWER AC	1	
	5579654		WASHER AC	1	
	5579535		BOLT-CENTER AC	1	
	5579539		LID-OIL FILTER AC	1	
	5579432		NUT-CENTER BOLT AC	1	
	1250410-1		PLACARD-OIL FILTER	1	
-41	C294505-0101		OIL FILTER ASSEMBLY SEE FIG 163 & 164 FOR BREAKDOWN	1	D
-42			ADAPTER ASSEMBLY ORDER AK172-115	NP	C
-43	0556004-7		SPRING	1	
-44	1250407-1		SNAP RING	1	
-45	1250408-1		CAP-RETAINER	1	
-46	S272-17		BALL	1	
-47	0450404-1		ADAPTER ASSEMBLY SEE FIG 163 FOR BREAKDOWN	1	H
	T55288		ADAPTER ASSEMBLY SEE FIG 164 FOR BREAKDOWN	1	I
-48	1250405-1		NUT-ADAPTER	1	G
-49	AN123883		PACKING	1	G
-50	0556005-2		STRAP	1	G
			ATTACHING PARTS		
-51	AN3H3A		BOLT	1	
-52	AN935-10L		WASHER	1	
			---*---		
-53	0550219-19		PROPELLER INSTALLATION SEE FIGURE 111	NP	
-54	SEE FIG 189		STRUCTURE DETAILS-FLOATPLANE FUSELAGE	NP	
-55	0500417-1		STOP-FLAP ON FLAP MOTOR SCREW SHAFT	1	B

NOTE. STAINLESS STEEL CABLES ARE REQUIRED ON FLOATPLANE

NOTE. FOR IDENTIFICATION & ILLUSTRATION OF ITEMS MARKED *, REFER TO FIGURE 133.

A---172 SERIAL 17249545 THRU 17263458
B---172 SERIAL 17252204 THRU 17263458
C---172 SERIAL 17249545 THRU 17253392
D---172 SERIAL 17253393 THRU 17263458
E---172 SERIAL 17249545 THRU 17254892
F---172 SERIAL 17254893 THRU 17256512
G---172 SERIAL 17249545 THRU 17256512
H---172 SERIAL 17253393 THRU 17256512
I---172 SERIAL 17256513 THRU 17263458
J---172 SERIAL 17249545 THRU 17259223
K---172 SERIAL 17259224 THRU 17260758
L---172 SERIAL 17249545 THRU 17260758

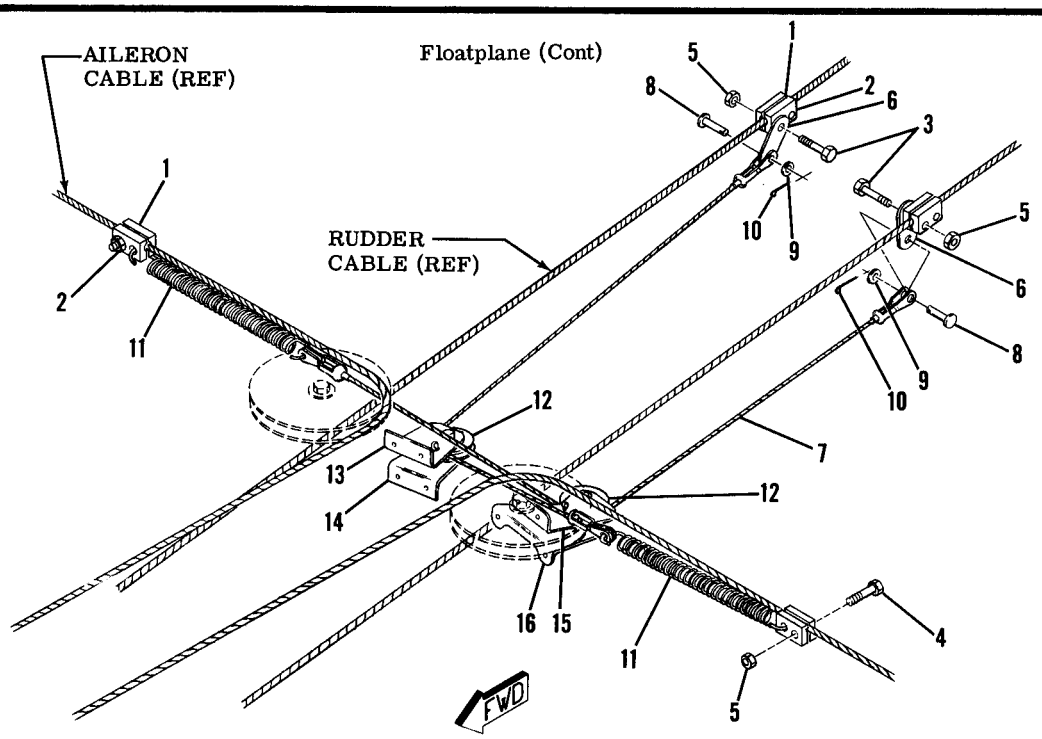


172 SERIAL 17260759 THRU 17263458

Figure 188. Rudder-Aileron Interconnect-Floatplane

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
188 -		RUDDER-AILERON INTERCONNECT INSTALLATION FLOATPLANE	NP	A
- 1	1760015-1	CLAMP HALF-CABLE	4	
- 2	1760015-2	CLAMP HALF-CABLE	4	
		ATTACHING PARTS		
- 3	AN3-6A	BOLT	1	
- 4	AN3-5A	BOLT	1	
- 5	NAS1022A3	NUT	1	
		---*---		
- 6	0861520-2	LINK	2	
- 7	0510105-334	CABLE ASSY	2	
		ATTACHING PARTS		
- 8	AN23-9	BOLT	1	
- 9	AN310-3	NUT	1	
-10	MS24665-132	COTTER PIN	1	
		---*---		
-11	0560013-1	SPRING	2	
-12	S378-1	PULLEY	2	
		ATTACHING PARTS		
	AN3-5A	BOLT	1	
	NAS1022A3	NUT	1	
	MS24665-136	COTTER PIN	2	
		---*---		
-13	0511806-2	BRACKET-PULLEY	1	
-14	0511806-4	BRACKET-PULLEY	1	
-15	0511806-1	BRACKET-PULLEY	1	
-16	0511806-3	BRACKET-PULLEY	1	
		A---172 SERIAL 17260759 THRU 17263458		

Floatplane (Cont)

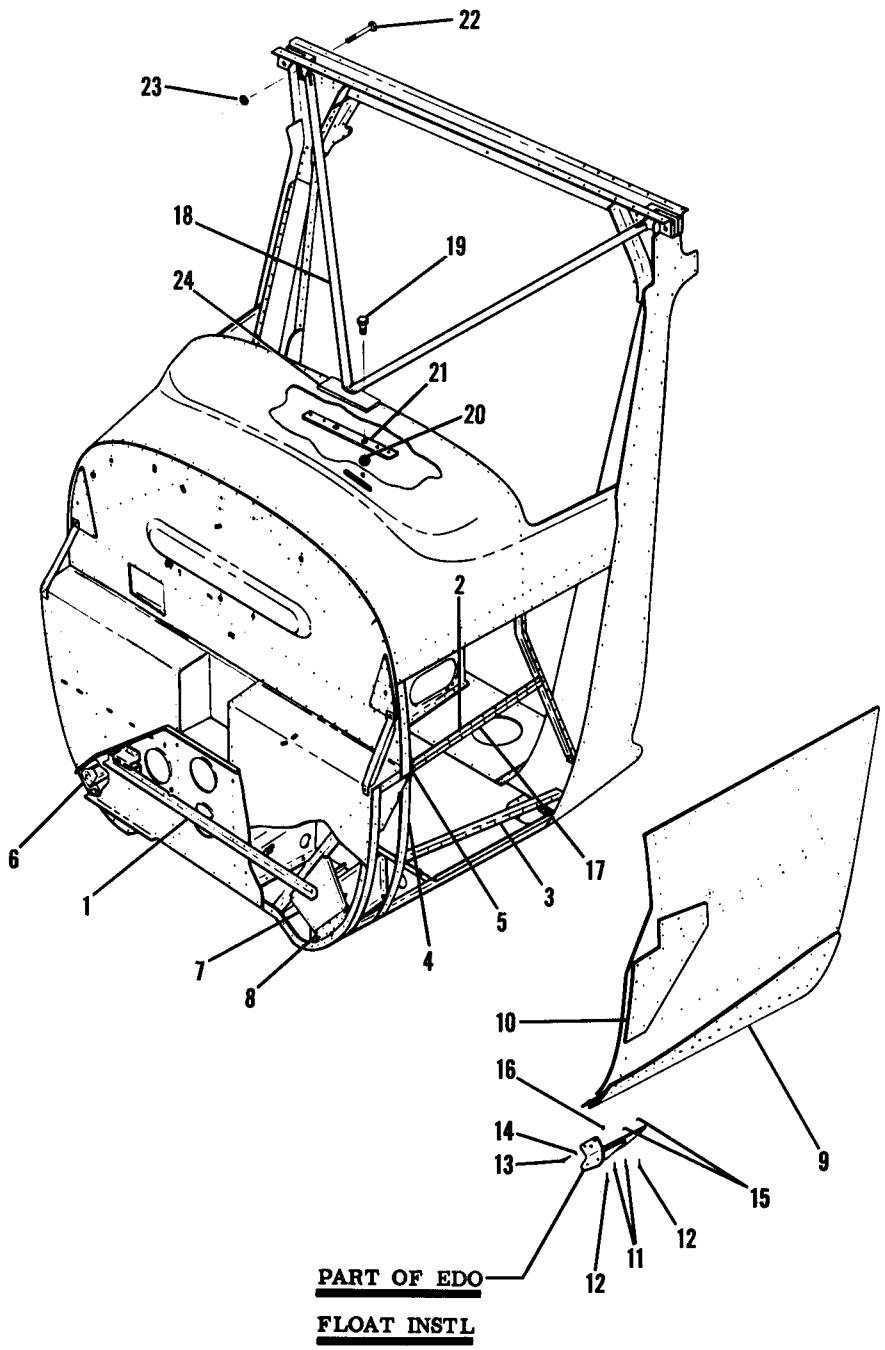


172 SERIAL 17249545 THRU 17263458

Figure 189. Floatplane Fuselage Structure Details

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
189 -		STRUCTURE DETAILS-FLOATPLANE FUSELAGE	NP	A
- 1	0500044-6	ANGLE-FIREWALL REINFORCEMENT	1	
- 2	0500044-13	ANGLE-LH	1	
	0500044-14	ANGLE-RH	1	
- 3	0500044-17	ANGLE-LH	1	
	0500044-18	ANGLE-RH	1	
- 4	0500044-15	ANGLE-LH	1	
	0500044-16	ANGLE-RH	1	
- 5	0500044-19	SHIM	2	
	0500044-21	BRACKET-ENGINE MOUNT ATTACHMENT LOWER LH	1	
- 6	0500044-20	BRACKET-ENGINE MOUNT ATTACHMENT LOWER RH	1	
- 7	0500044-7	DOUBLER-FIREWALL LH	1	
	0500044-8	DOUBLER-FIREWALL RH	1	
- 8	0500044-5	PLATE	2	
- 9	0500044-3	DOUBLER-SKIN LH	1	
	0500044-4	DOUBLER-SKIN RH	1	
-10	0500044-12	DOUBLER-SKIN	2	
-11	AN3-4A	BOLT	10	
-12	AN3-5A	BOLT	6	
-13	AN4-6A	BOLT	4	
-14	AN960-416	WASHER	4	
-15	MS21044N3	NUT	16	
-16	MS21042L4	NUT	4	
-17	0500044-24	ANGLE-LH	1	
	0500044-25	ANGLE-RH	1	
-18	0513003-5	BRACE ASSEMBLY	1	B
	0513003-24	BRACE ASSEMBLY	1	C
		ATTACHING PARTS		
-19	AN4-5A	BOLT	2	
-20	MS21042L4	NUT	2	
-21	0513193-1	DOUBLER	1	B
	0513193-3	DOUBLER ASSEMBLY	1	C
-22	AN3-20A	BOLT	4	
-23	MS21044N3	NUT	4	
		---*---		
-24	0514049-1	PLATE-BRACE TRIM	1	C

A---172 SERIAL 17249545 THRU 17263458
B---172 SERIAL 17249545 THRU 17250572
C---172 SERIAL 17250573 THRU 17263458

Electrical Equipment

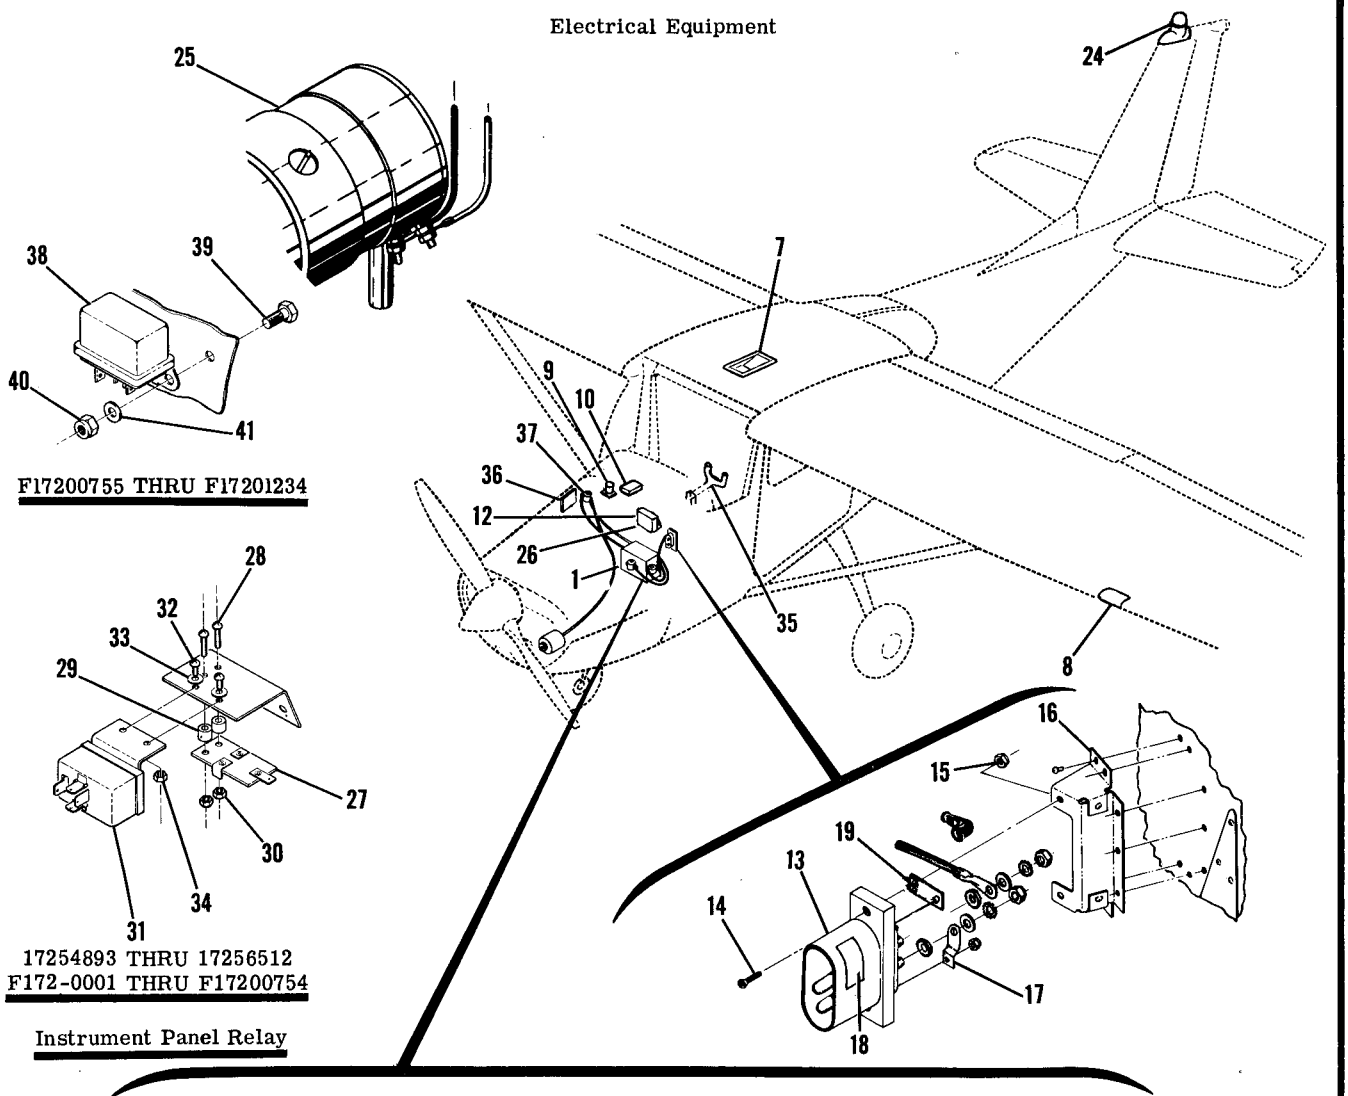

172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804

Figure 190. Electrical Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
190 -		ELECTRICAL EQUIPMENT INSTALLATION	NP	A
- 1	0511319-201 *	BATTERY KIT	1	
- 2	0712603-2	CONTACTOR ASSEMBLY	1	E
- 2A	S1579-1	CONTACTOR ASSEMBLY	1	F
		ATTACHING PARTS		
- 3	AN3-3A	BOLT	2	
- 4	MS21044N3	NUT	2	
	AN960-10L	WASHER	2	
		---*---		
- 4A	0770728-1	DIODE ASSEMBLY-CONTACTOR	1	F
- 5	0513196-1	SHIELD-MASTER SOLENOID WATER	1	E
- 6	S1090-22	FUSE HOLDER-CLOCK	1	
	S1090-23	CAP-FUSE	1	
	S1091-1	FUSE-CLOCK	1	
	0712031-1	BRACKET-MOUNTING	1	
- 6A	S1090-2	FUSEHOLDER-EXTERNAL POWER	1	H
	S1090-11	CAP-FUSE	1	
	S1091-5	FUSE-EXTERNAL POWER 5 AMP	1	H
- 6B	20H3P	DIODE SATA	1	H
- 7	SEE FIG 193	INSTRUMENT PANEL LIGHT INSTALLATION	1	
- 8	SEE FIG 196	LANDING LIGHT INSTALLATION	1	
- 9	S1407-6	HORN ASSEMBLY-STALL WARNING SEE FIGURES 99 & 100	1	
-10	0713511-1	FLASHER-NAVIGATION LIGHT	1	D
		ATTACHING PARTS		
	S1021Z6-6	SCREW	4	
	NAS446-2-3	NUT	4	
		---*---		
-11	0412007-9	STRAP-BATTERY GROUND	1	
		ATTACHING PARTS		
	AN4-5A	BOLT	1	
	AN970-4	WASHER	1	
	MS21042L4	NUT	1	
		---*---		
-11A	0500062-PA1	CABLE BATTERY CONTACTOR TO BATTERY	1	G
-11B	0500062-PA11	CABLE BATTERY CONTACTOR TO BATTERY	1	H
-11C	0500062-PA31	CABLE BATTERY CONTACTOR TO STARTER CONTACTOR	1	
-12	0413205-12	REGULATOR-VOLTAGE 25 AMP	1	
		ATTACHING PARTS		
	AN3-6A	BOLT	3	
		---*---		
		GROUND SERVICE PLUG INSTALLATION	1	
-13	AN2552-3A	RECEPTACLE-GROUND SERVICE PLUG	1	
		ATTACHING PARTS		
-14	AN510-10R14	SCREW	2	
-15	MS21044N3	NUT	2	
		---*---		
-16	0513229-3	BRACKET ASSEMBLY-MOUNTING	1	
-17	0312155-10	STRAP-GROUND	1	
-18	0500130-1	PLACARD	1	G
	1213535-1	PLACARD-POLARITY	1	H
-19	1570043-3	DIODE BOARD ASSEMBLY	1	H
-20	S1660-1	CONTACTOR ASSEMBLY	1	H
		ATTACHING PARTS		
-21	AN4-3A	BOLT	2	H
	AN960-10	WASHER	2	H
	MS21042L4	NUT	2	H
		---*---		
-22	0500062-PC7	CABLE RECEPTACLE TO CONTACTOR	1	H
-23	0500062-PC8	CABLE CONTACTOR TO BATTERY CONTACTOR	1	H
-24	SEE FIG 200	ROTATING BEACON INSTALLATION	1	G
	SEE FIG 201	FLASHING BEACON INSTALLATION	1	H
		GENERATOR INSTALLATION-35 AMP	1	J
-25	0500037-4	GENERATOR-35 AMP	1	
	S1091-35	FUSE-35 AMP	1	B
	S1360-35	CIRCUIT BREAKER	1	C

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
190 -26	0413205-10	REGULATOR-VOLTAGE 35 AMP	1	
		ATTACHING PARTS		
	AN4-6A	BOLT	1	
		---*---		
	SEE FIG 203	ALTERNATOR & VOLTAGE REGULATOR INSTALLATION	1	K
-27	1570043-1	DIODE BOARD	1	M
		ATTACHING PARTS		
-28	AN515-8R10	SCREW	2	M
-29	NAS43DD3-16	SPACER	2	M
-30	MS21045-08	NUT	2	M
		---*---		
-31	S1668-1	RELAY	1	M
		ATTACHING PARTS		
-32	AN515-8R6	SCREW	2	M
-33	AN960-8	WASHER	2	M
-34	MS21045-08	NUT	2	M
		---*---		
-35	SEE FIG 204	MAP LIGHT INSTALLATION-CONTROL WHEEL	1	
-36	1570166-1	DIMMING ASSEMBLY-TRANSISTORIZED LIGHTS	1	L
		ATTACHING PARTS		
	AN520-10R6	SCREW	4	
	AN960-10L	WASHER	4	
		---*---		
-37	SAW4206-1	CONTACTOR-STARTER RORY	1	N
	SAW4204-1	CONTACTOR-STARTER ALT RORY	1	N
	S1660-1	CONTACTOR-STARTER SKYHAWK ONLY	1	P
		ATTACHING PARTS		
	AN520-10R8	SCREW	2	
	AN960-10L	WASHER	2	
		---*---		
	0500062-DA12	CABLE STARTER CONTACTOR TO STARTER	1	
-38	S1917-1	RELAY-POWER	1	L
		ATTACHING PARTS		
-39	AN4-5A	BOLT	2	
-40	MS21042L4	NUT	2	
-41	AN960-416L	WASHER	2	
		---*---		

NOTE. *THIS KIT INCLUDES DRY BATTERY & ELECTROLYTE

A---172 SERIAL 17249545 THRU 17256512
F172 SERIAL F172-0001 THRU F17200804
B---172 SERIAL 17249545 THRU 17250572
F172 SERIAL F172-0001 THRU F172-0018
C---172 SERIAL 17250573 THRU 17256512
F172 SERIAL F172-0019 THRU F17200804
D---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
E---172 SERIAL 17249545 THRU 17253392
F172 SERIAL F172-0001 THRU F172-0179
F---172 SERIAL 17253393 THRU 17256512
F172 SERIAL F172-0180 THRU F17200804
G---172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
H---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200804
J---172 SERIAL 17250573 THRU 17253902
17253907, 17253921, 17253932
17253933, 17253934, 17253938
17253941 & 17253945 THRU 17254892
F172 SERIAL F172-0019 THRU F172-0319
K---172 SERIAL 17253903 THRU 17253944 EXCEPT
17253907, 17253921, 17253932, 17253933
17253934, 17253941
172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200804
L---F172 SERIAL F17200755 THRU F17200804
M---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200754
N---F172 SERIAL F172-0001 THRU F17200804
P---172 SERIAL 17249545 THRU 17256512

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
191 -			ELECTRICAL EQUIPMENT INSTALLATION	NP	A
- 1	0511319-201	*	BATTERY KIT 25 A.H.	1	
- 2	0412007-1		STRAP-BATTERY GROUND	1	
			ATTACHING PARTS		
	AN4-5A		BOLT	1	
	AN970-4		WASHER	1	
			---*---		
- 3	S1579-2		CONTACTOR-BATTERY	1	R
			ATTACHING PARTS		
- 4	AN3-3A		BOLT	2	
	AN960-10L		WASHER	2	
	MS21044N3		NUT	2	
			---*---		
	S1807-2		COVER-CONTACTOR TERMINAL	2	
- 5	0770728-1		DIODE ASSEMBLY-CONTACTOR	1	
- 6	S1090-22		FUSE HOLDER-CLOCK	1	
	S1090-23		CAP-FUSE	1	
	S1091-1		FUSE-CLOCK	1	
- 7	S1090-2		FUSE HOLDER-EXTERNAL POWER	1	
	S1090-11		CAP-FUSE	1	
	S1091-5		FUSE-EXTERNAL POWER 5 AMP	1	
- 8	20H3P		DIODE SATA	1	
			ATTACHING PARTS		
	LN1032X		NUT-NYLON	1	
	S1438-2		WASHER-NYLON	1	
			---*---		
	6F20D		DIODE AFE ALTERNATE	1	
	1N1344A		DIODE SPD ALTERNATE	1	
	43-1761		MOUNTING HARDWARE SPD USED WITH 6F20D & 1N1344A	1	
- 9	0712031-1		BRACKET-MOUNTING	1	
-10	0500062-PA11		CABLE-BATTERY CONTACTOR TO BATTERY	1	
-11	0500062-PA23		CABLE-BATTERY CONTACTOR TO STARTER CONTACTOR	1	
-12	0500062-DA10		CABLE-STARTER CONTACTOR TO STARTER	1	
	SEE FIG 205		GROUND SERVICE PLUG INSTALLATION	1	L
			GROUND SERVICE PLUG INSTALLATION	1	K
-13	AN2552-3A		RECEPTACLE-GROUND SERVICE PLUG	1	
			ATTACHING PARTS		
-14	AN510-10R14		SCREW	2	
-15	MS21044N3		NUT	2	
			---*---		
-16	0513229-3		BRACKET ASSEMBLY-MOUNTING	1	
-17	0312155-10		STRAP-GROUND	1	
-18	1213535-1		PLACARD-POLARITY	1	
-19	1570043-3		DIODE BOARD ASSEMBLY	1	
-20	S1660-1		CONTACTOR-EXTERNAL POWER	1	
			ATTACHING PARTS		
-21	AN4-3A		BOLT	2	
	AN960-10L		WASHER	2	
	MS21042L4		NUT	2	
			---*---		
-21A	S1807-1		COVER	2	
	S1693-2		STRAP	2	
-22	0500062-PC7		CABLE-RECEPTACLE TO CONTACTOR	1	
-23	0500062-PA18		CABLE CONTACTOR TO BATTERY CONTACTOR	1	
-24	S1660-1		CONTACTOR-STARTER	1	D
	S1991-1		CONTACTOR-STARTER	1	E
			ATTACHING PARTS		
-24A	AN4-3A		BOLT	2	
			---*---		
	S1807-1		COVER-CONTACTOR TERMINAL	2	
-25	C611001-0102		VOLTAGE REGULATOR	1	
			ATTACHING PARTS		
	AN520-416R8		SCREWS	2	
	C6A8-10A730A		HOUSING-PLUG ECWS	1	
			---*---		
-26	0770038-2		FILTER-NOISE	1	
			ATTACHING PARTS		
	AN520-10R8		SCREW	2	
			---*---		
-27	S1095-5		SHIELD HALF	2	
			ATTACHING PARTS		
	AN520-8R6		SCREW	2	
			---*---		
	NAS557-10A		GROMMET	1	

CONTINUED ON NEXT PAGE

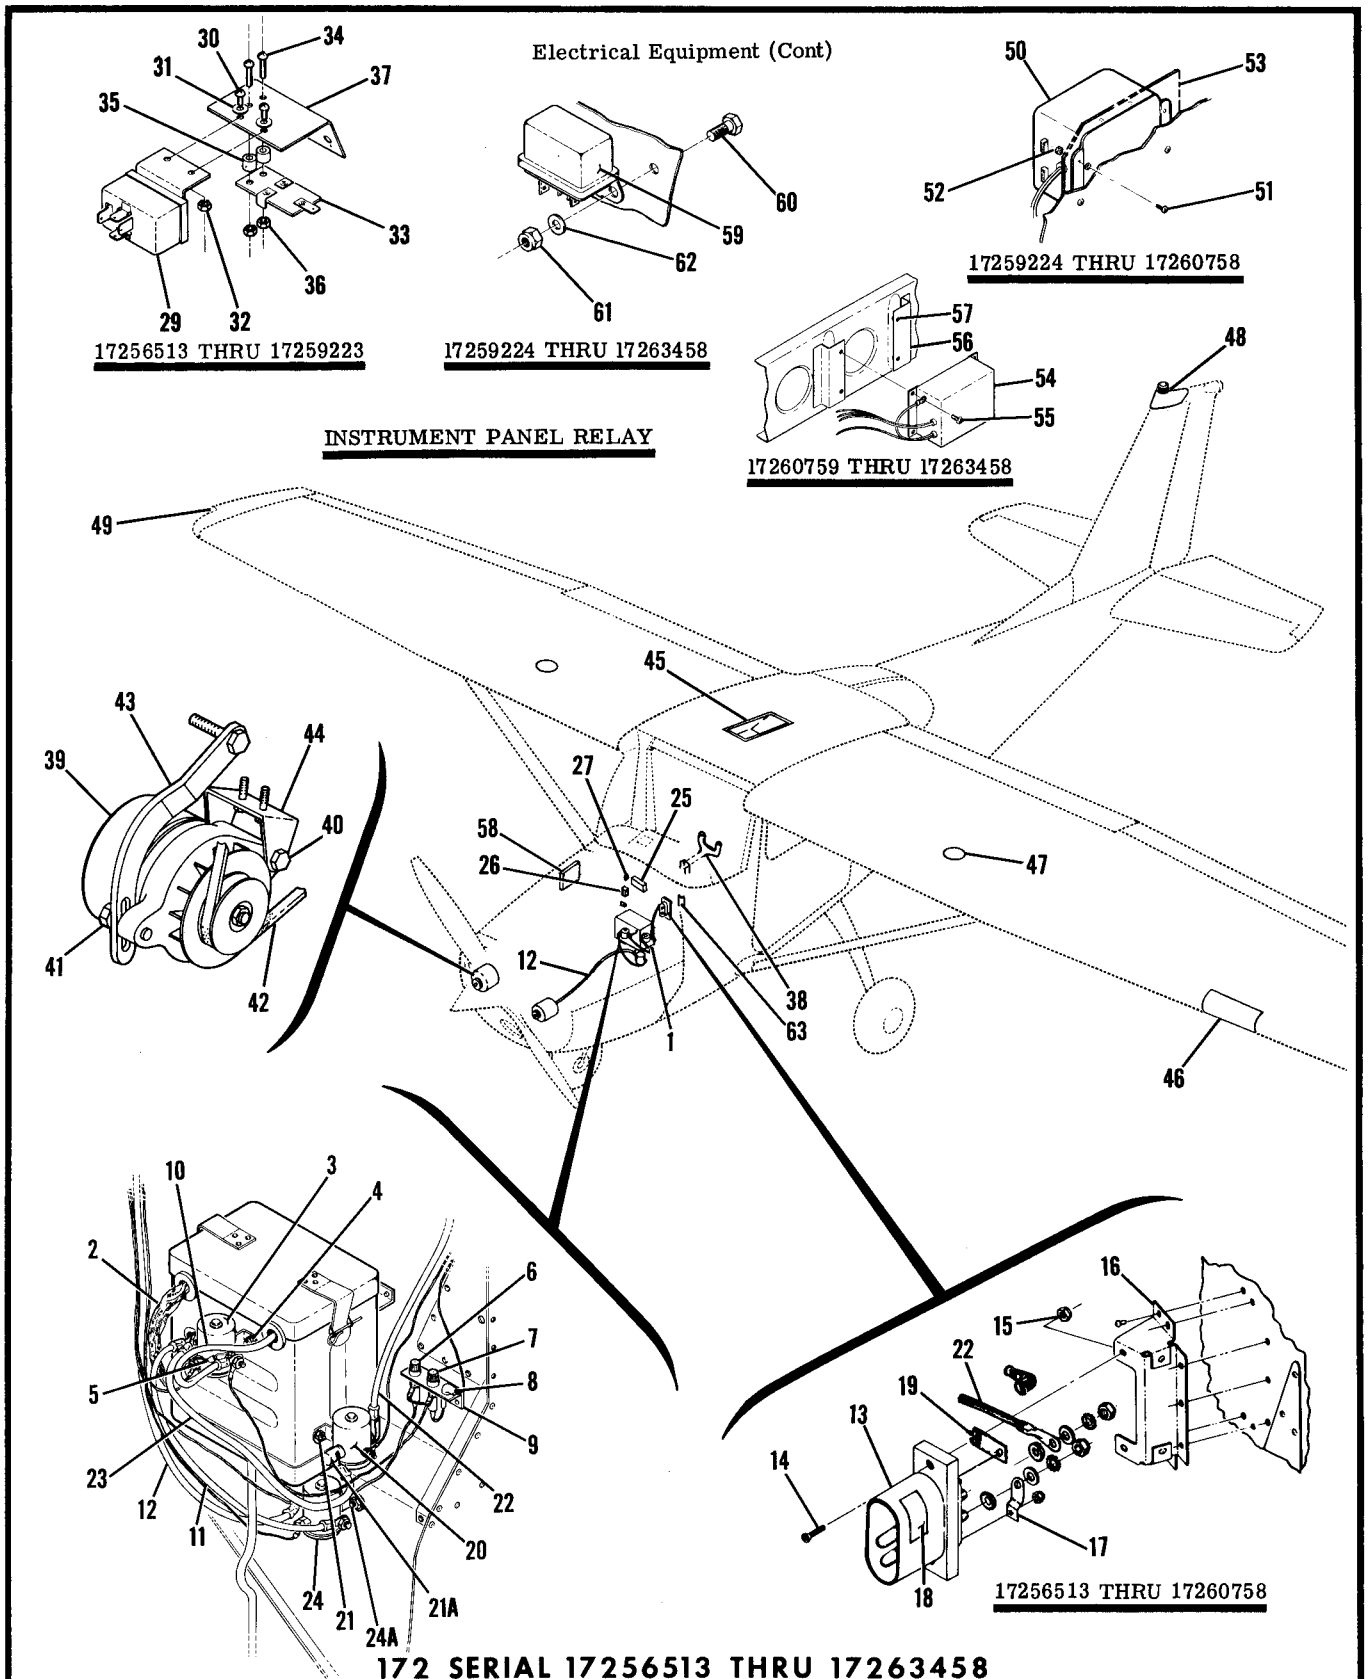


Figure 191. Electrical Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
191 -28		DELETED-NOT USED		
-29	S1668-1	RELAY-POWER	1	G
		ATTACHING PARTS		
-30	AN515-8R6	SCREW	2	
-31	AN960-8	WASHER	2	
-32	MS21045-08	NUT	2	
		---*---		
-33	1570043-1	DIODE BOARD ASSEMBLY	1	G
		ATTACHING PARTS		
-34	AN515-8R10	SCREW	2	
-35	NAS43DD3-16	SPACER	2	
-36	MS21045-08	NUT	2	
		---*---		
-37	0713856-4	BRACKET-RELAY MOUNTING	1	G
	SEE FIG 202	MAP LIGHT INSTALLATION-CONTROL WHEEL	1	
-38	SEE FIG 204	MAP LIGHT INSTALLATION-CONTROL WHEEL	1	
		ATTACHING PARTS		
-39	C611501-0101	ALTERNATOR WEU C611501-0102	1	B
	C611501-0102	ALTERNATOR	1	C
		ATTACHING PARTS		
-40	AN7-42A	BOLT	1	
	MS20365-720C	NUT	1	
-41	0750220-1	BOLT	1	
	S1450-6-14-080	WASHER	1	
		---*---		
	S2114-2	NIPPLE AT ALT BAT TERMINAL	1	
	S2093-2	COVER ALT BAT TERMINAL	1	
	S2114-2	NIPPLE ALT FIELD TERMINAL	1	
-42	S1597-1-37.5	BELT-ALTERNATOR	1	
-43	LW10729	LINK-ALTERNATOR BELT ADJUSTMENT LY	1	
-44	76906	BRACKET-ALTERNATOR MOUNTING LY	1	
-45	SEE FIG 193	INSTRUMENT PANEL LIGHT INSTALLATION	1	G
	SEE FIG 194	INSTRUMENT PANEL LIGHT INSTALLATION	1	F
-46	SEE FIG 196	LANDING LIGHT INSTALLATION	1	H
	SEE FIG 197	LANDING LIGHT INSTALLATION COWL MOUNTED	1	J
-47	SEE FIG 199	COURTESY LIGHT INSTALLATION	1	
-48	SEE FIG 201	FLASHING BEACON INSTALLATION	1	
-49	SEE FIG 4	NAVIGATION LIGHT INSTALLATION	1	
-50	C622004-0103	POWER SUPPLY-STROBE LIGHT	1	M
		ATTACHING PARTS		
-51	AN525-10R6	SCREW	4	
-52	MS21044N3	NUT	4	
		---*---		
-53	0512182-1	DOUBLER-POWER SUPPLY	1	M
-54	C622007-0101	POWER SUPPLY-STROBE LIGHT	2	L
		ATTACHING PARTS		
-55	AN520-10R7	SCREW	4	
		---*---		
-56	1620075-3	BRACKET ASSY	4	L
-57	NAS686A3K	NUTPLATE	2	
-58	1570166-1	DIMMING ASSY-TRANSISTORIZED LIGHT	1	F
		ATTACHING PARTS		
	AN520-10R6	SCREW	4	
	AN960-10L	WASHER	4	
	MS21044N3	NUT	4	N
		---*---		
-59	S1917-1	RELAY-SPLIT BUS BAR	1	
		ATTACHING PARTS		
-60	AN4-5A	BOLT	2	
-61	MS21042L4	NUT	2	
-62	AN960-416L	WASHER	2	
		---*---		
-63	C593001-0101	OVERVOLTAGE SENSOR	1	J

NOTE. *THIS KIT INCLUDES DRY BATTERY & ELECTROLYTE


A---172 SERIAL 17256513 THRU 17263458
F172 SERIAL F17200805 THRU F17201234
B---172 SERIAL 17256513 THRU 17259002

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
191 -		C---172 SERIAL 17259003 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 D---172 SERIAL 17256513 THRU 17258392 E---172 SERIAL 17258393 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 F---172 SERIAL 17259224 THRU 17263458 F172 SERIAL F17200755 THRU F17201234 G---172 SERIAL 17256513 THRU 17259223 H---172 SERIAL 17256513 THRU 17259903 J---172 SERIAL 17259904 THRU 17263458 F172 SERIAL F17200805 THRU F17201234 K---172 SERIAL 17256513 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 L---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200905 THRU F17201234 M---172 SERIAL 17259224 THRU 17260758 F172 SERIAL F17200805 THRU F17200904 N---172 SERIAL 17263056 THRU 17263458		

This page intentionally left blank.

Electrical Equipment (Cont)

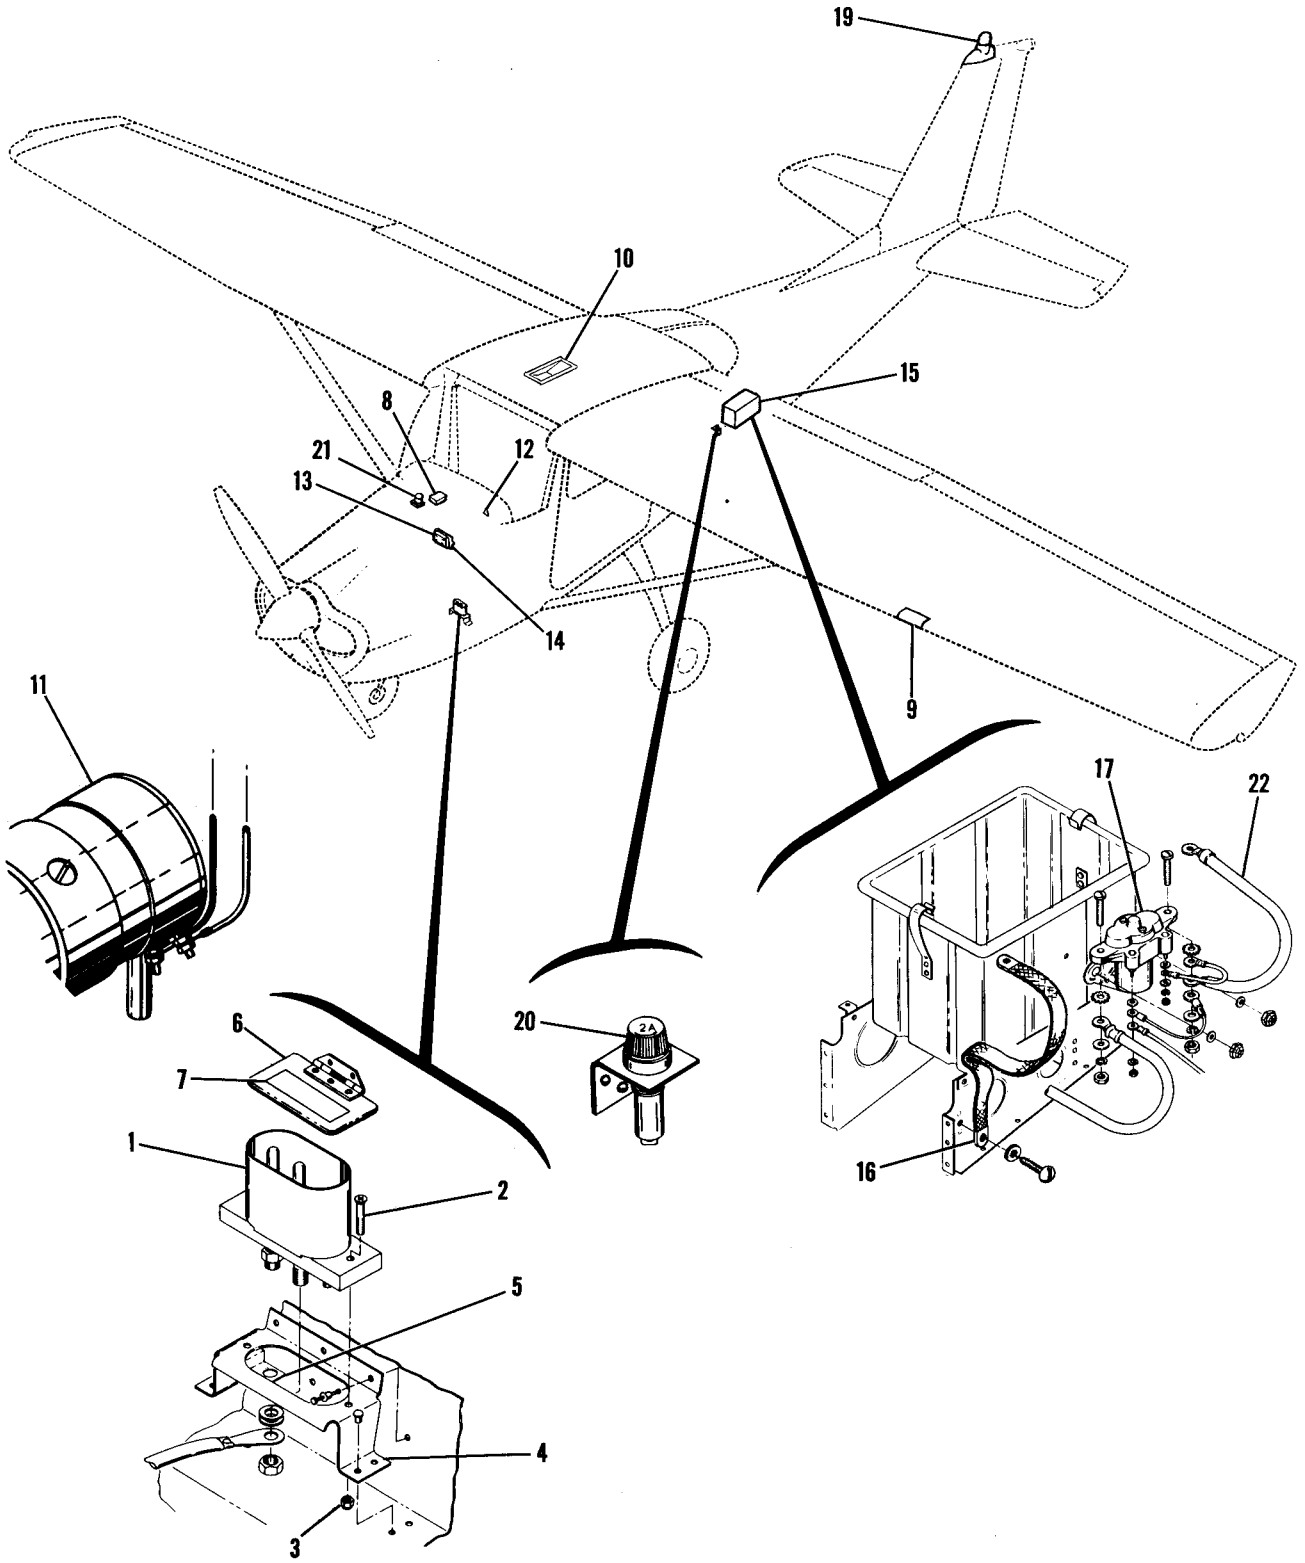

P172 SERIAL P17257120 THRU P17257188


Figure 192. Fuselage Electrical Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
192 -			FUSELAGE ELECTRICAL EQUIPMENT INSTALLATION	NP	A
			GROUND SERVICE PLUG INSTALLATION	1	
- 1	AN2552-3A		RECEPTACLE-GROUND SERVICE PLUG	1	
			ATTACHING PARTS		
- 2	AN510-10R16		SCREW	2	
- 3	MS21044N3		NUT	2	
			---*---		
- 4	0513156-2		BRACKET-GROUND SERVICE PLUG	1	
			ATTACHING PARTS		
	CR763-4-2		RIVET CR	3	
			---*---		
- 5	0312155-10		STRAP-GROUND	1	
- 6	0513156-3		LID ASSEMBLY-GROUND SERVICE PLUG	1	
	0850500-17		SPRING-GROUND SERVICE PLUG	1	
	MS20253-2		PIN-HINGE 2.25 IN LG BULK ITEM REF MS20253-2-225	1	
- 7	0500130-1		PLACARD	1	
- 8	0713511-1		FLASHER-NAVIGATION LIGHT	1	
			ATTACHING PARTS		
	S1021Z6-6		SCREW	4	
	NAS446-2-3		NUT	4	
			---*---		
- 9	SEE FIG 196		LANDING LIGHT INSTALLATION	1	
-10	SEE FIG 193		INSTRUMENT PANEL LIGHT	1	
			GENERATOR INSTALLATION-35 AMP	1	
-11	0500037-2		GENERATOR INSTALLATION	1	
-12	0500038-1		PLACARD-35 AMP GENERATOR FUSE	1	
	S1091-35		FUSE-35 AMP	2	
-13	0413205-10		REGULATOR-VOLTAGE 35 AMP	1	
			ATTACHING PARTS		
-14	AN4-6A		BOLT	3	
			---*---		
-15	0511319-201	*	BATTERY KIT	1	
	0511319-2		BATTERY	1	
	0511319-5		PLACARD	1	
-16	0412007-1		STRAP-BATTERY GROUND	1	
			ATTACHING PARTS		
	AN4-5A		BOLT	1	
	AN970-4		WASHER	1	
			---*---		
-17	0712603-2		CONTACTOR ASSEMBLY-MASTER SOLENOID	1	
			ATTACHING PARTS		
	AN3-3A		BOLT	2	
	AN960-10L		WASHER	2	
	MS21044N3		NUT	2	
			---*---		
-18			DELETED-NEVER USED		
-19	SEE FIG 98		ROTATING BEACON INSTALLATION	1	
-20	S1091-1		FUSE-ELECTRIC CLOCK 1 AMP	1	
	S1090-22		FUSEHOLDER-ELECTRIC CLOCK 1 AMP	1	
	S1090-23		CAP-FUSE 1 AMP	1	
-21	S1407-6		HORN ASSEMBLY-STALL WARNING	1	
-22	0500062-PA1		CABLE-BATTERY CONTACTOR	1	

NOTE. *THIS KIT INCLUDES DRY BATTERY & ELECTROLYTE

A---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Electrical Equipment (Cont)

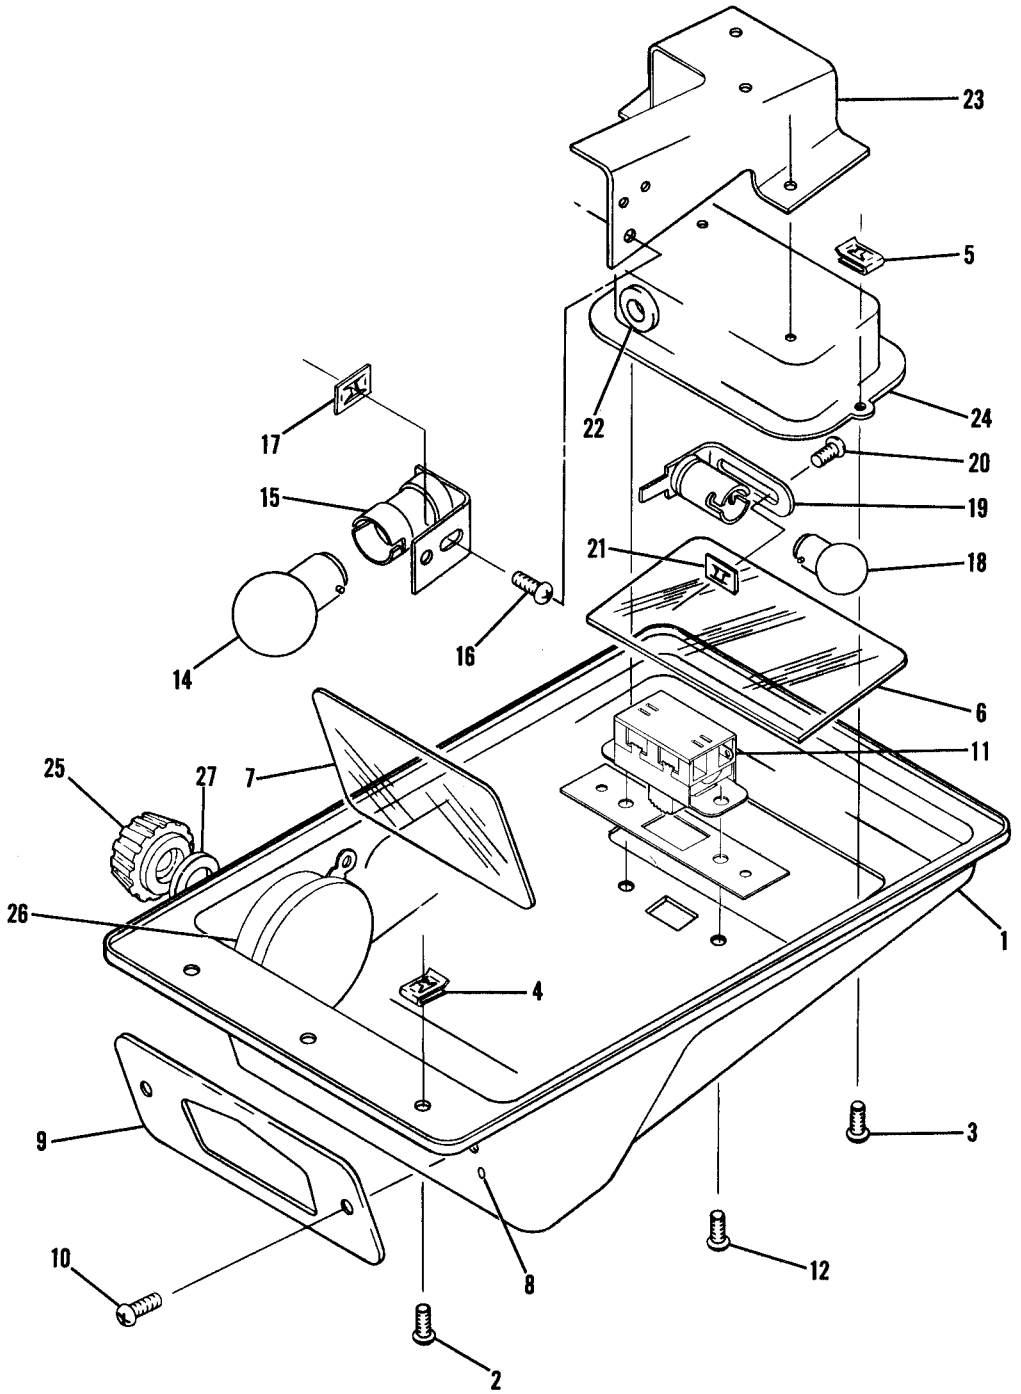

172 SERIAL 17249545 THRU 17259223
F172 SERIAL F172-0001 THRU F17200754
P172 SERIAL P17257120 THRU P17257188


Figure 193. Instrument Panel Lights Installation

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
193 -		INSTRUMENT PANEL LIGHT INSTALLATION	NP	G
- 1	0511482-1	COVER ASSEMBLY	1	A
	0511482-9 □	COVER ASSEMBLY	1	B
		ATTACHING PARTS		
- 2	S1021Z6-6	SCREW	2	
- 3	S1021Z4-8	SCREW	2	
- 4	NAS395-3-3	NUT	2	
- 5	NAS395-1-3	NUT	2	
		---*---		
- 6	0413141-1	LENS	1	
- 7	0511482-3	LENS	1	
- 8	NAS680A06K	NUTPLATE	1	
- 9	0511482-5 □	SHIELD	1	E
	0511482-20 □	SHIELD	1	F
		ATTACHING PARTS		
-10	AN515-6R10	SCREW	2	
	AN960-6L	WASHER	2	
		---*---		
-11	S1831-1	SWITCH	1	
		ATTACHING PARTS		
-12	AN515-4R4	SCREW	2	
-13		DELETED-NOT USED		
		---*---		
-14	MS15584-2	LAMP	1	
-15	0513208-1	SOCKET	1	
		ATTACHING PARTS		
-16	S1021Z6-6	SCREW	1	
-17	NAS446-2-3	NUT	1	
		---*---		
-18	S1876-1	LAMP GE	1	
-19	0413138	SOCKET	1	
		ATTACHING PARTS		
-20	S1021Z4-6	SCREW	1	
-21	NAS395-1-3	NUT	1	
		---*---		
-22	MS35489-4	GROMMET	1	
-23	0511483-2	BRACKET	1	
-24	0413140-5	REFLECTOR	1	
-25	S1390-5	KNOB ASSEMBLY	1	D
-26	0713247-200	RHEOSTAT ASSEMBLY	1	C
	S1880-2	RHEOSTAT TRTA	1	D
-27	S1450-4A14-032	WASHER	1	D

NOTE. □THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

A---172 SERIAL 17249545 THRU 17250573
P172 SERIAL P17257120 THRU P17257188
F172 SERIAL F172-0001 THRU F172-0018
FP172 SERIAL FP172-0001 THRU FP172-0003
B---172 SERIAL 17250573 THRU 17259223
F172 SERIAL F172-0019 THRU F17200774
C---172 SERIAL 17250573 THRU 17253786
F172 SERIAL F172-0019 THRU F172-0251
D---172 SERIAL 17253787 THRU 17259223
F172 SERIAL F172-0252 THRU F17200754
E---172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
F---172 SERIAL 17254893 THRU 17259223
F172 SERIAL F172-0320 THRU F17200754
G---172 SERIAL 17249545 THRU 17259223
F172 SERIAL F172-0001 THRU F17200754
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003

Electrical Equipment (Cont)

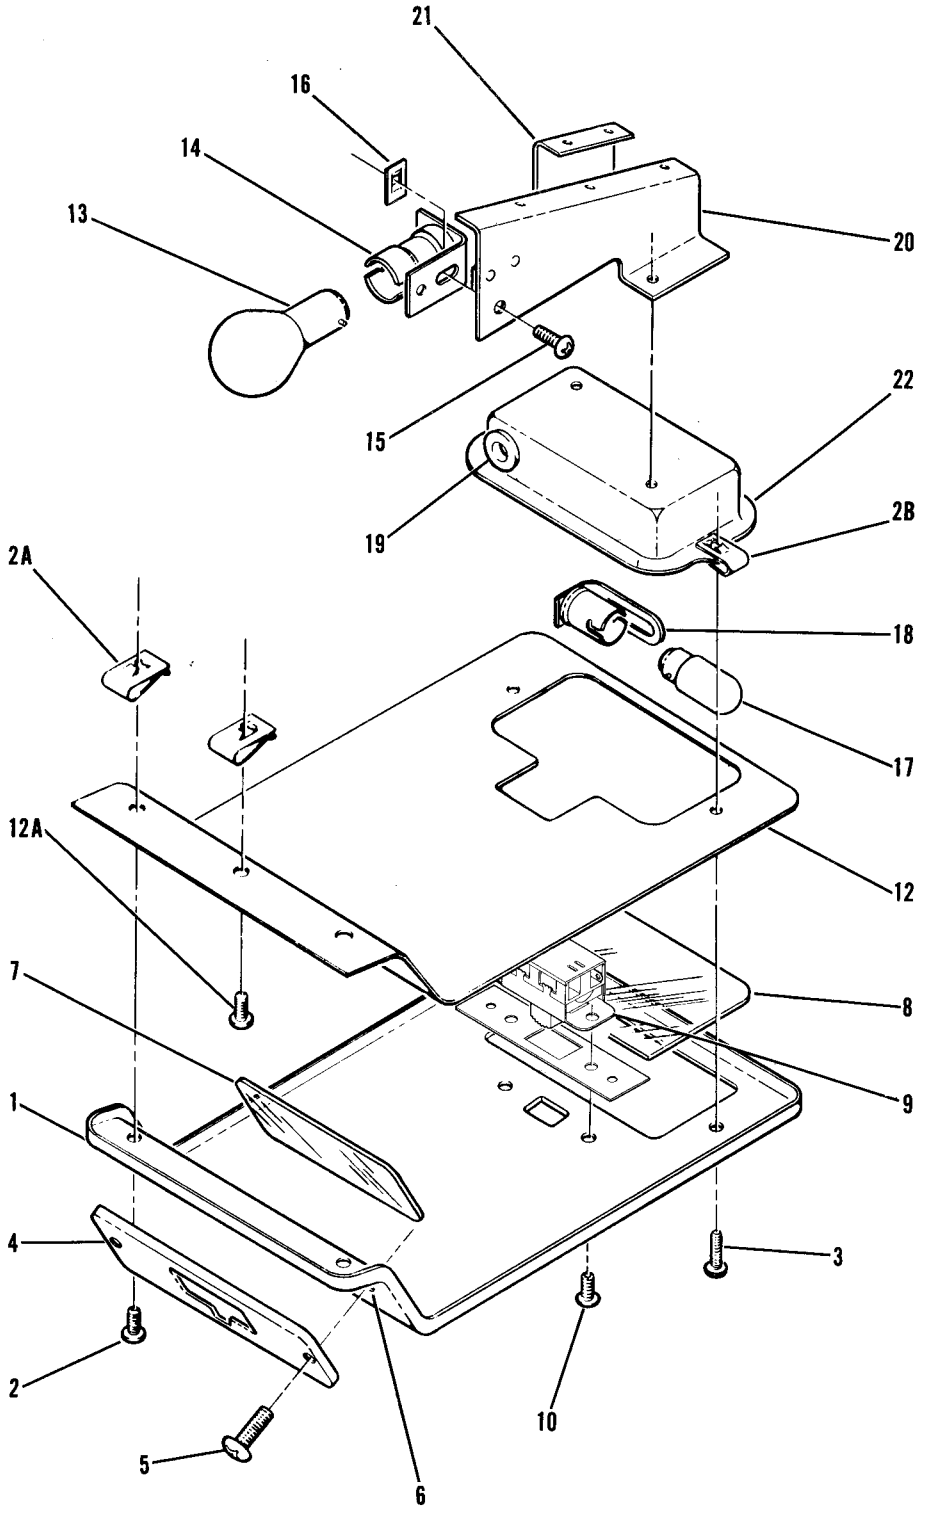

172 SERIAL 17259224 THRU 17259665
F172 SERIAL F17200755 THRU F17200804


Figure 194. Instrument Panel Lights Installation

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
194 -		INSTRUMENT PANEL LIGHT INSTALLATION	NP	A
- 1	0414013-6 ¤	COVER ASSEMBLY	1	
		ATTACHING PARTS		
- 2	S1021Z6-8	SCREW	3	
- 2A	NAS395-3-3	NUTPLATE	3	
- 2B	NAS395-1-3	NUTPLATE	2	
- 3	S1021Z4-8	SCREW	2	
		---*---		
- 4	0414013-7 ¤	SHIELD	1	
		ATTACHING PARTS		
- 5	AN515-6R10	SCREW	2	
		---*---		
- 6	NAS680A06K	NUTPLATE	2	
- 7	0414013-4	LENS	1	
- 8	0413141-1	LENS	1	
- 9	S1831-1	SWITCH-DOME LIGHT	1	
		ATTACHING PARTS		
-10	AN515-4R4	SCREW	2	
-11		DELETED-NOT USED		
		---*---		
-12	0413503-2	SUPPORT-OVERHEAD CONSOLE	1	
		ATTACHING PARTS		
-12A	S1021Z6-8	SCREW	1	
	NAS395-3-3	NUTPLATE	1	
		---*---		
-13	MS15584-2	LAMP	1	
-14	0513208-1	SOCKET	1	
		ATTACHING PARTS		
-15	S1021Z6-6	SCREW	1	
-16	NAS446-2-3	NUT	1	
		---*---		
-17	S1876-1	LAMP	1	
-18	0413138	SOCKET	1	
-19	MS35489-4	GROMMET	1	
	0413495-1	BRACKET ASSEMBLY	1	
-20	0413495-2	BRACKET-LH	1	
-21	0413495-3	BRACKET-RH	1	
-22	0413140-5	REFLECTOR	1	

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

A---172 SERIAL 17259224 THRU 17259665
F172 SERIAL F17200755 THRU F17200804

Electrical Equipment (Cont)

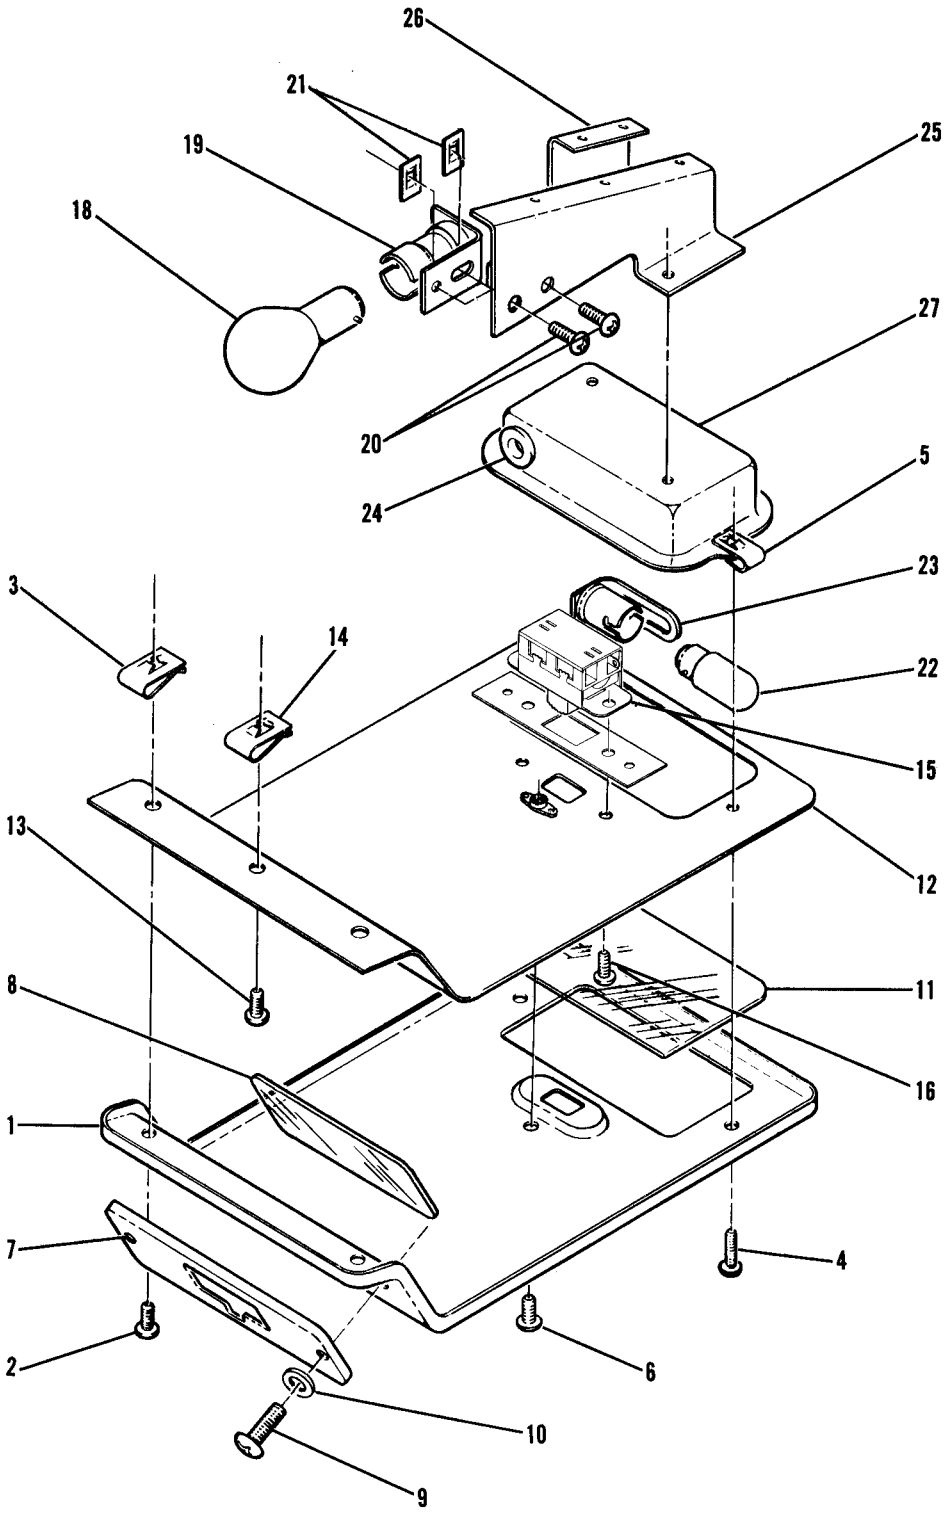

172 SERIAL 17259666 THRU 17263458
F172 SERIAL F17200805 THRU F17201234


Figure 195. Instrument Panel Lights Installation

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
195 -		INSTRUMENT PANEL LIGHT INSTALLATION	NP	A
- 1	0414013-9 ¤	COVER ASSEMBLY	1	
		ATTACHING PARTS		
- 2	S1021Z6-8	SCREW	2	
- 3	NAS395-3-3	NUT	2	
- 4	S1021Z4-8	SCREW	2	
- 5	NAS395-1-3	NUT	2	
- 6	S1021Z8-10	SCREW	1	
		---*---		
- 7	0414013-7 ¤	SHIELD	1	
- 8	0414013-4	LENS	1	
- 9	AN515-6R10	SCREW	2	
-10	AN960D8L	WASHER	2	
-11	0413141-1	LENS	1	
-12	0413503-8	SUPPORT ASSEMBLY-OVERHEAD CONSOLE	1	
		ATTACHING PARTS		
-13	S1021Z6-8	SCREW	1	
-14	NAS395-3-3	NUT	1	
		---*---		
-15	S1831-1	SWITCH-DOME LIGHT	1	
		ATTACHING PARTS		
-16	AN515-4R4	SCREW	2	
-17		DELETED-NOT USED		
		---*---		
-18	MS15584-2	LAMP	1	
-19	0513208-1	SOCKET	1	
		ATTACHING PARTS		
-20	S1021Z6-4	SCREW	2	
-21	NAS446-2-1	NUT	2	
		---*---		
-22	S1876-1	LAMP	1	
-23	0413138	SOCKET	1	
-24	MS35489-4	GROMMET	1	
	0413495-1	BRACKET ASSEMBLY	1	
-25	0413495-2	BRACKET LH	1	
-26	0413495-3	BRACKET RH	1	
-27	0413140-5	REFLECTOR	1	

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

A---172 SERIAL 17259666 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Electrical Equipment (Cont)

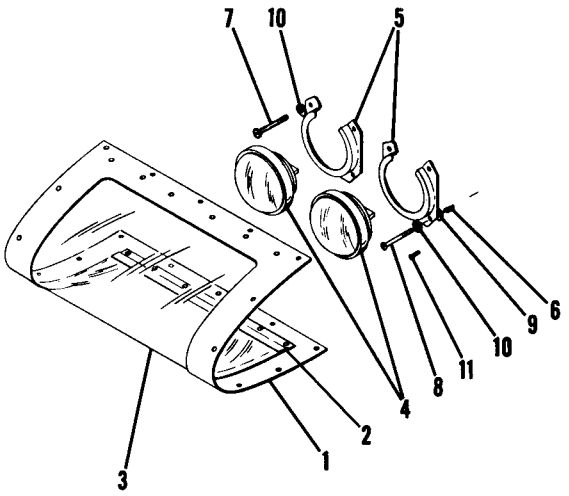


F172 SERIAL F172-0001 THRU F17200804
172 SERIAL 17249545 THRU 17259223
P172 SERIAL P17257120 THRU P17257188

Figure 196. Landing Light Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
196 -		LANDING LIGHTS INSTALLATION	NP	A
- 1	0523115	WINDOW ASSEMBLY-LANDING LIGHT	1	
- 2	0523115-3	RETAINER	2	
- 3	0523115-5	WINDOW-PLEXIGLASS	1	
- 4	0523118-1	LIGHT-LANDING	2	
		ATTACHING PARTS		
- 5	0423542-6	CHANNEL	1	
- 6	0713124-1	SPRING	8	
- 7	AN515-8R26	SCREW	1	
- 8	AN515-8R22	SCREW	7	
- 9	AN960-8L	WASHER	8	
-10	AN960-10	WASHER	AR	
		---*---		
-11	AN515-8R7	SCREW	1	
	MS21044N08	NUT	1	

A---P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
172 SERIAL 17249545 THRU 17259223
F172 SERIAL F172-0001 THRU F17200804

Electrical Equipment (Cont)

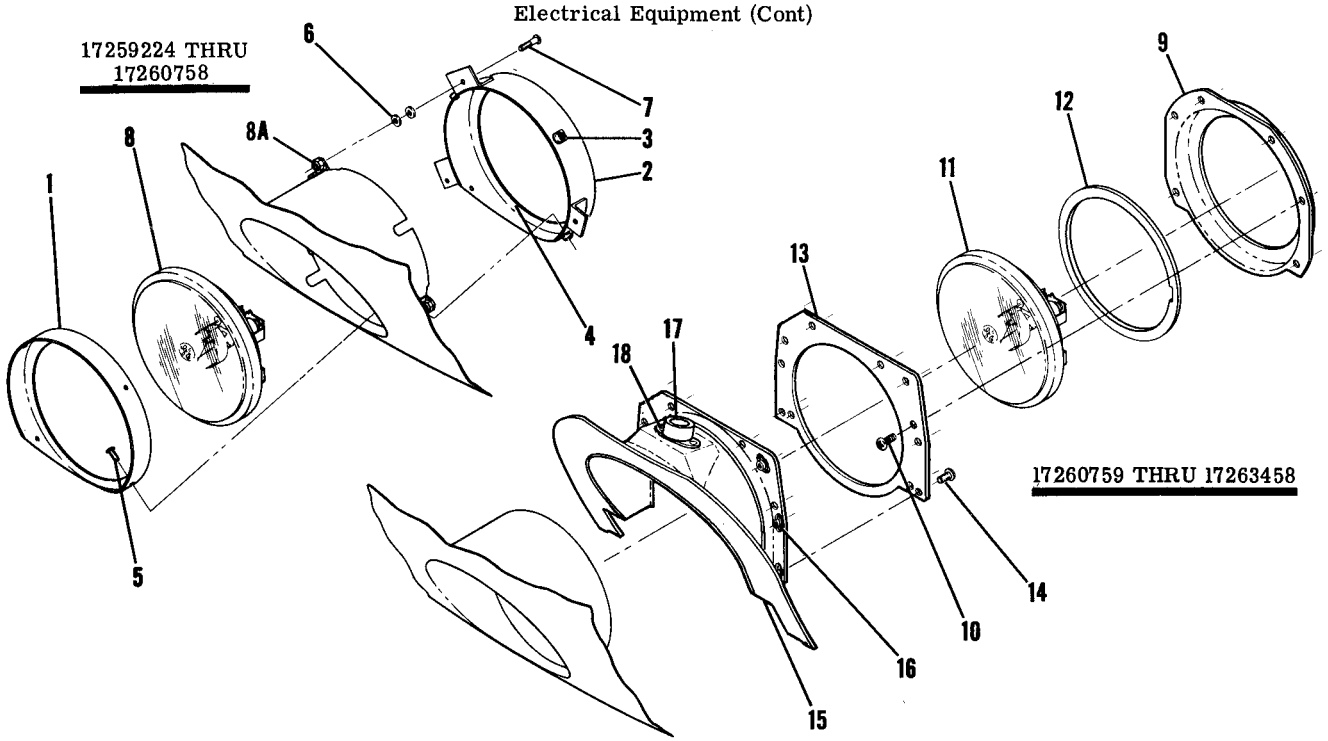


172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Figure 197. Landing Light Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
197 -		LANDING LIGHT INSTALLATION	NP	A
- 1	0552122-1	BRACKET	1	
- 2	0552119-6	BRACKET ASSEMBLY-SUPPORT	1	
- 3	NAS1067A3	NUT	4	
- 4	S2108-2-17.00	SEAL-VINYL FOAM	1	
- 5	AN520-10R6	SCREW	4	
- 6	NAS620-8L	WASHER MAX. OF 2	AR	
	NAS620-8	WASHER ALT	AR	
- 7	AN515-8R8	SCREW	4	
- 8	4522	LAMP	1	
- 8A	AN256F8	ANGLE NUT	3	
		LANDING LIGHT INSTALLATION	NP	B
- 9	1752111-3	BRACKET ASSY-LANDING LIGHT AFT	1	
		ATTACHING PARTS		
-10	AN520-10R8	SCREW	6	
		---*---		
-11	4522	LAMP	1	
-12	1752113-1	GASKET	1	
-13	1752110-3	BRACKET-LANDING LIGHT FWD	1	
		ATTACHING PARTS		
-14	AN520-10R8	SCREW	11	
		---*---		
-15	0552133-5	SUPPORT DOUBLER ASSY-LANDING LIGHT	1	
-16	NAS697A3	NUTPLATE	5	
-17	S1115-29	SHOCKMOUNT	1	
-18	AN515-8-6	SCREW	2	
		A---172 SERIAL 17259224 THRU 17260758 F172 SERIAL F17200805 THRU F17200881		
		B---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200882 THRU F17201234		

Electrical Equipment (Cont)

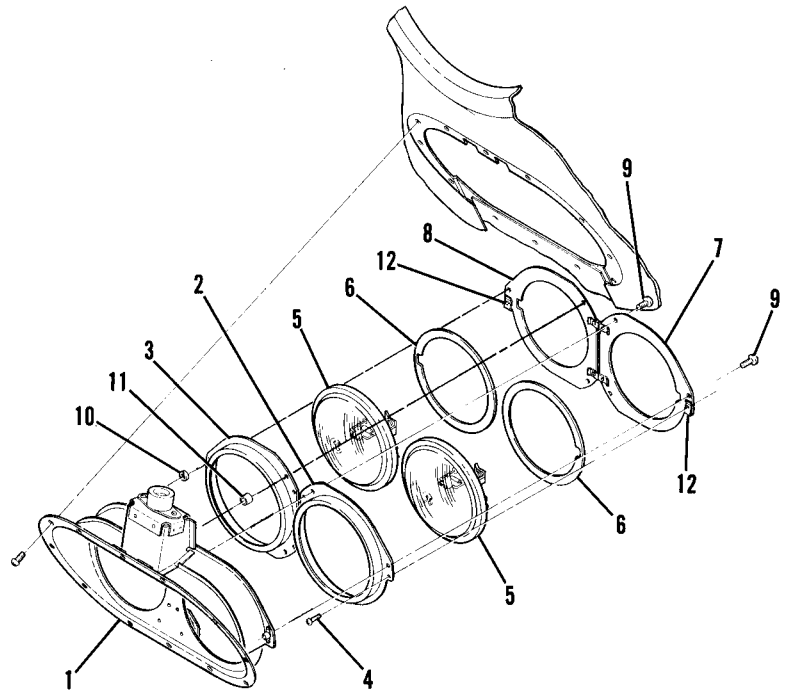

172 SERIAL 17261899 THRU 17263458
F172 SERIAL F17201035 THRU F17201234

Figure 198. Dual Landing Lights

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
198 -		LANDING LIGHT INSTALLATION	NP	A
- 1	SEE FIG 120	SUPPORT ASSEMBLY-LANDING LIGHT	1	
- 2	1752118-1	BRACKET-LH	1	
- 3	1752118-2	BRACKET-RH	1	
		ATTACHING PARTS		
- 4	S1021Z6-8	SCREW	3	
		---*---		
- 5	4509	LAMP GE	2	
- 6	0752646-1	GASKET	AR	
- 7	1752118-3	PLATE ASSEMBLY-LH	1	
- 8	1752118-4	PLATE ASSEMBLY-RH	1	
		ATTACHING PARTS		
- 9	AN515-8R8	SCREW	3	
-10	NAS43DD3-7	SPACER RH ONLY	1	
-11	NAS43DD3-16	SPACER RH ONLY	1	
		---*---		
-12	NAS448-1-3	NUT	3	
		A---172 SERIAL 17261899 THRU 17263458 F172 SERIAL F17201035 THRU F17201234		

Electrical Equipment (Cont)


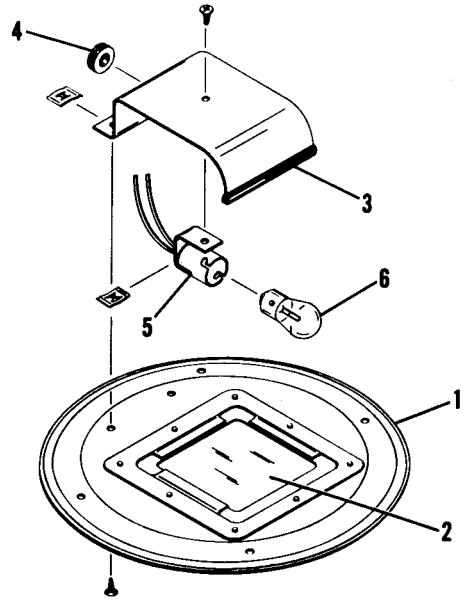


Figure 199. Courtesy Light Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
199 -		COURTESY LIGHT INSTALLATION	NP	
- 1	0521101-2	PLATE ASSEMBLY-COURTESY LIGHT	2	
		ATTACHING PARTS		
	S1021Z8-6	SCREW	4	
		---*---		
- 2	0521101-6	LENS	1	
	0700616-1	SHIELD ASSEMBLY-COURTESY LIGHT	2	
		ATTACHING PARTS		
	S1021Z6-8	SCREW	1	
	AN515-6R5	SCREW	1	
	NAS446-2-3	NUT	1	
	MS21044N06	NUT	1	
		---*---		
- 3	S1055-1	CHANNEL 2.25 IN LONG BULK ITEM REF S-1055-1-2.25	1	
- 4	MS35489-134	GROMMET	1	
- 5	0513208-1	SOCKET ASSEMBLY	1	
		ATTACHING PARTS		
	S1021Z6-6	SCREW	1	
	NAS446-2-3	NUT	1	
		---*---		
- 6	MS15584-2	LAMP	2	

Electrical Equipment (Cont)

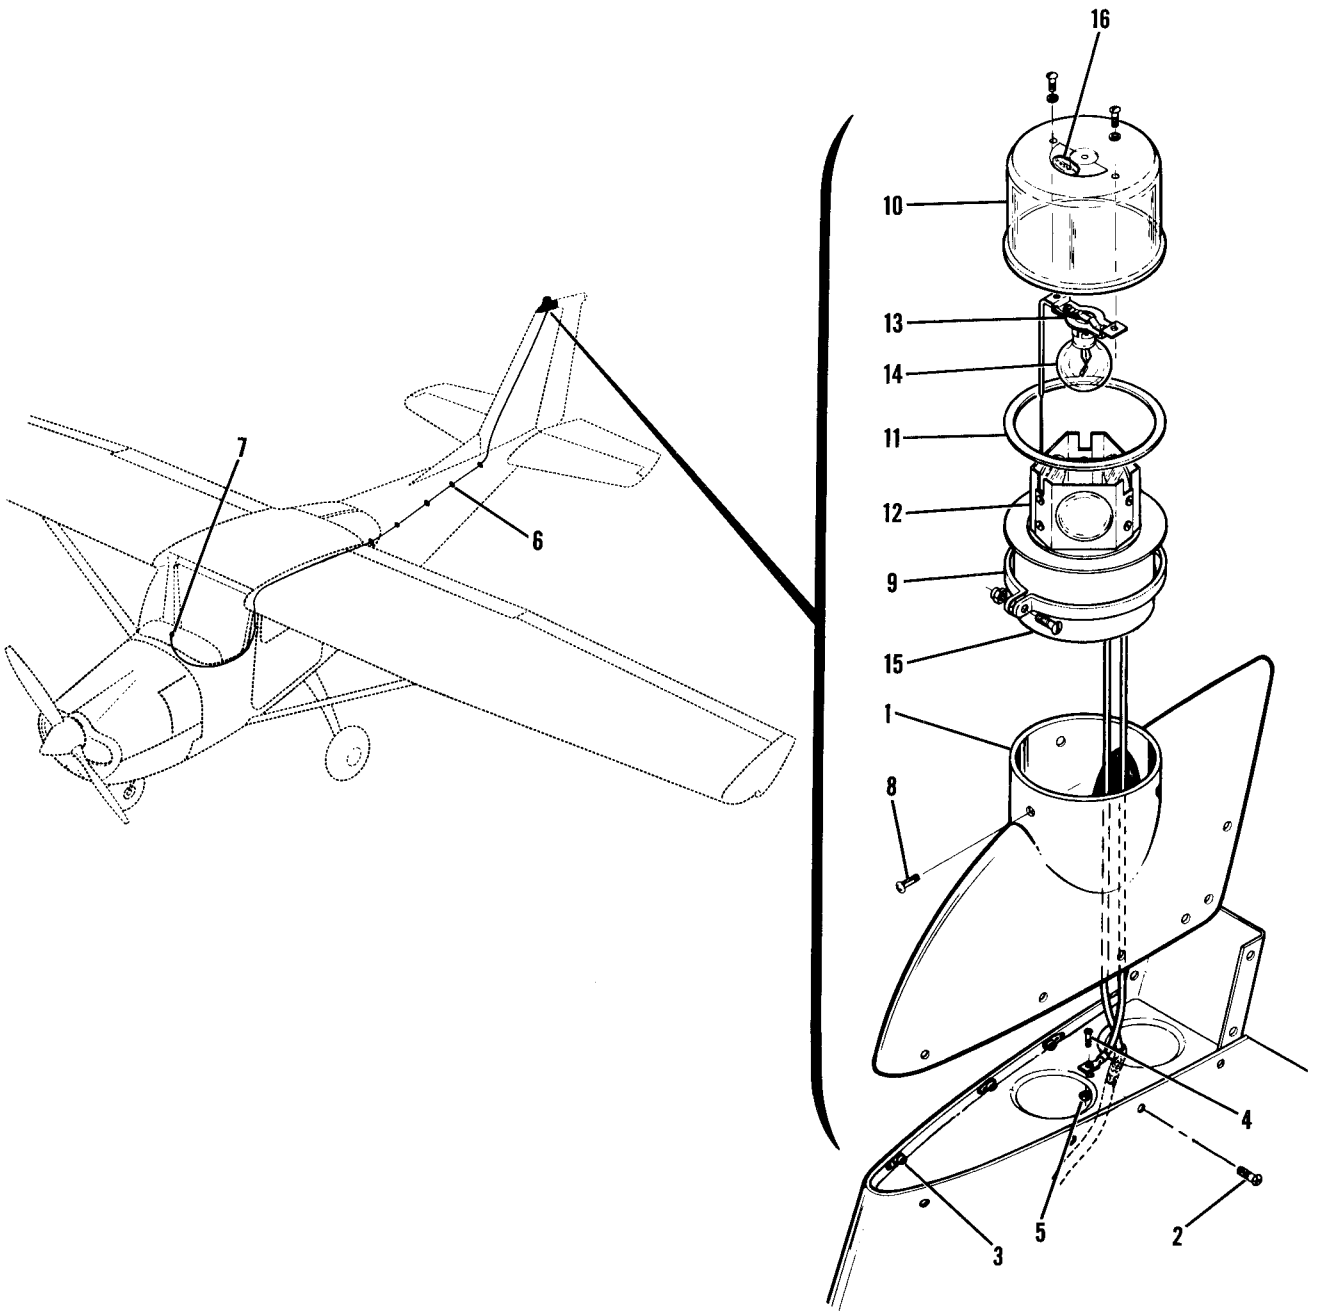


172 SERIAL 17249545 THRU 17254892
F172 SERIAL F172-0001 THRU F172-0319
P172 SERIAL P17257120 THRU P17257188

Figure 200. Rotating Beacon Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
200 -		ROTATING BEACON INSTALLATION	NP	C
- 1	0531007-3-791	TIP-ROTATING BEACON	1	
		ATTACHING PARTS		
- 2	S1021Z6-4	SCREW	12	
- 3	NAS445-2	NUT	8	
		---*---		
- 4	AN515-8R8	SCREW-GROUND	1	
- 5	MS21044N08	NUT-GROUND	1	
- 6	MS35489-6	GROMMET	5	
- 7	S1232-10	CIRCUIT BREAKER ASSEMBLY	1	A
	S1360-10	CIRCUIT BREAKER ASSEMBLY	1	B
	0713026-4	SWITCH-CIRCUIT BREAKER	1	B
	0700120-1	ROTATING BEACON ASSEMBLY	1	
		ATTACHING PARTS		
- 8	AN515-6R6	SCREW	3	
		---*---		
- 9	WRM25	CLAMP ASSEMBLY WHEL	1	
-10	WRM10	DOME ASSEMBLY WHEL	1	
-11	WRM30	GASKET-DOME WHEL	1	
-12	WRM20	LENS ASSEMBLY WHEL	1	
-13	WRM15	SOCKET ASSEMBLY WHEL	1	
-14	WRM44-12	BULB WHEL	1	
-15	WRM39	MOTOR ASSEMBLY 12 VOLT WHEL	1	
-16	S1433-1	PLACARD-CESSNA LABEL	1	
		A---172 SERIAL 17249545 THRU 17250572 P172 SERIAL P17257120 THRU P17257188 F172 SERIAL F172-0001 THRU F172-0018 FP172 SERIAL FP172-0001 THRU FP172-0003 B---172 SERIAL 17250573 THRU 17254892 F172 SERIAL F172-0019 THRU F172-0319 C---172 SERIAL 17249545 THRU 17254892 F172 SERIAL F172-0001 THRU F172-0319 P172 SERIAL P17257120 THRU P17257188 FP172 SERIAL FP172-0001 THRU FP172-0003		

Electrical Equipment (Cont)

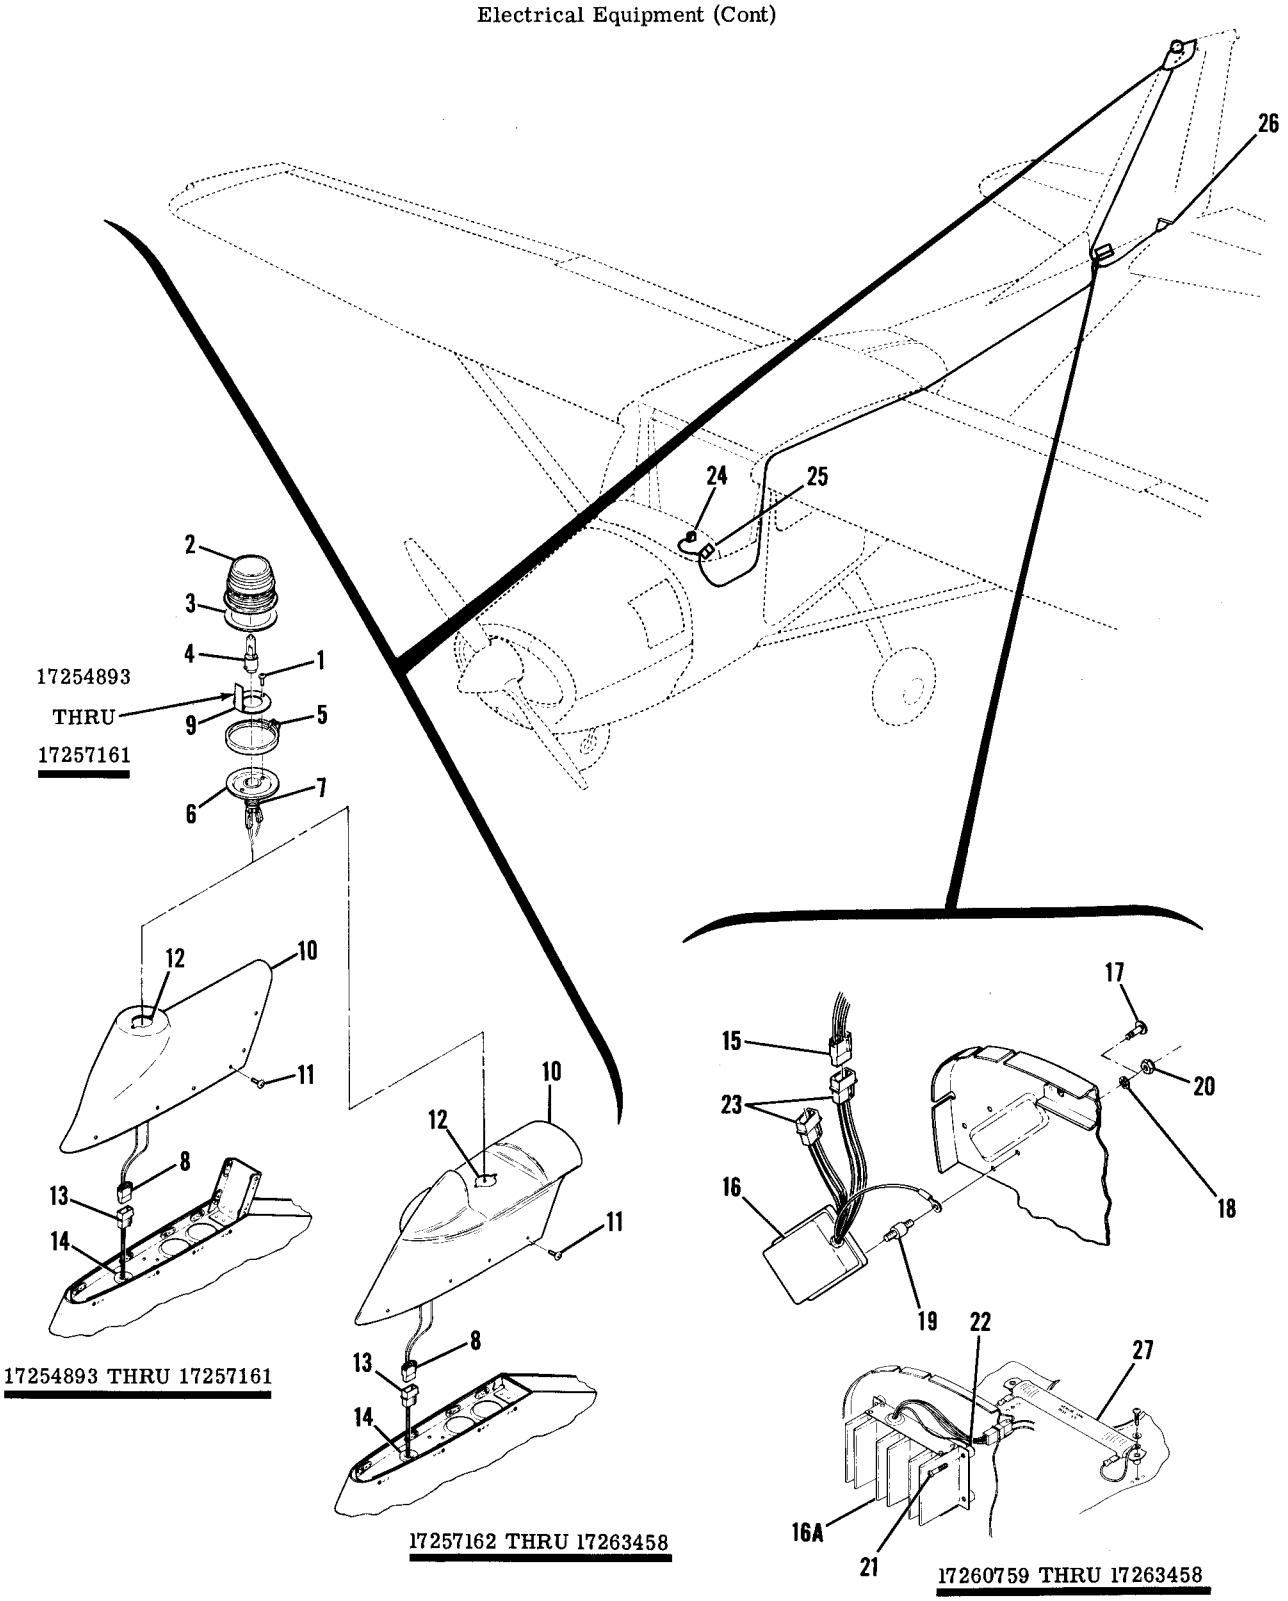


172 SERIAL 17254893 THRU 17263458
F172 SERIAL F172-0320 THRU F17201234

Figure 201. Flashing Beacon Light Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
201 -		FLASHING BEACON LIGHT INSTALLATION	NP	A
		LIGHT ASSEMBLY-FLASHING BEACON FSO C621001-0106	1	G
	C621001-0106	LIGHT ASSEMBLY-FLASHING BEACON	1	H
		ATTACHING PARTS		
- 1	AN515-8R8	SCREW	2	
		---*---		
- 2	C17325	DOME AESC	1	
- 3	C17330	GASKET AESC	1	
- 4	C17312-3	LAMP AESC	1	G
	40-14	LAMP AESC	1	H
- 5	C17326	CLAMP ASSEMBLY AESC	1	
- 6	C17331-3	PLATE-MOUNTING AESC	1	G
	C17331-6	PLATE-MOUNTING AESC	1	H
- 7	C17313	SOCKET ASSEMBLY AEFS	1	
- 8	S1638-1	HOUSING-PLUG	1	
- 9	0731607-2	BAFFLE-FLASHING BEACON	1	B
-10	0531009-1	TIP ASSEMBLY-FIN	1	B
	0531013-2	TIP ASSEMBLY-FIN	1	C
		ATTACHING PARTS		
-11	S1021Z6-4	SCREW	12	
		---*---		
-12	NAS680A08	NUTPLATE	2	
-13	S1638-2	HOUSING CAP	1	
-14	MS35489-13	GROMMET	1	
-15	S1638-1	HOUSING PLUG	1	
-16	C594501-0201	FLASHER ASSEMBLY-BEACON LIGHT WEU C594501-0203	1	D
	C594501-0203	FLASHER ASSEMBLY-BEACON LIGHT	1	E
-16A	C594502-0101	FLASHER ASSEMBLY-BEACON LIGHT	1	K
		ATTACHING PARTS		
-17	AN515-8R6	SCREW	3	B
-18	AN936A8	WASHER	3	
-19	0411059-4	MOUNT	3	J
-20	MS21044N08	NUT	3	C
-21	AN515-8R8	SCREW	4	K
-22	NAS43DD3-16	SPACER	4	K
		---*---		
-23	S1638-2	HOUSING	2	E
	S1638-2	HOUSING	2	K
-24		CIRCUIT BREAKER SEE INSTRUMENT PANEL	1	
-25		SWITCH SEE INSTRUMENT PANEL	1	
-26	ZR075-11.5	RESISTOR	1	F
-27	OR95-1.5	RESISTOR	1	K
		ATTACHING PARTS		
	AN515-8R11	SCREW	2	
		---*---		

A---172 SERIAL 17254893 THRU 17263458
F172 SERIAL F172-0320 THRU F17201234
B---172 SERIAL 17254893 THRU 17257161
F172 SERIAL F172-0320 THRU F172-0559
C---172 SERIAL 17257162 THRU 17263458
F172 SERIAL F172-0560 THRU F17201234
D---172 SERIAL 17254893 THRU 17258801
F172 SERIAL F172-0320 F172-0779
E---172 SERIAL 17258802 THRU 17260758
F172 SERIAL F17200755 THRU F17200904
F---172 SERIAL 17259140 THRU 17260758
F172 SERIAL F17200755 THRU F17200904
G---172 SERIAL 17254893 THRU 17261419
F172 SERIAL F172-0320 THRU F17201034
H---172 SERIAL 17261420 THRU 17263458
F172 SERIAL F17201035 THRU F17201234
J---172 SERIAL 17257162 THRU 17260758
F172 SERIAL F172-0560 THRU F17200904
K---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234


Electrical Equipment (Cont)

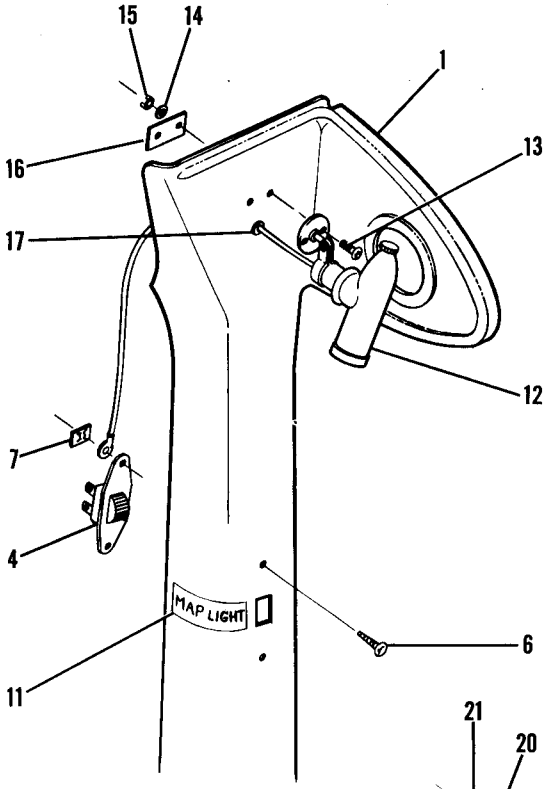

17249545 - 17250001
P17257120 - P17257169

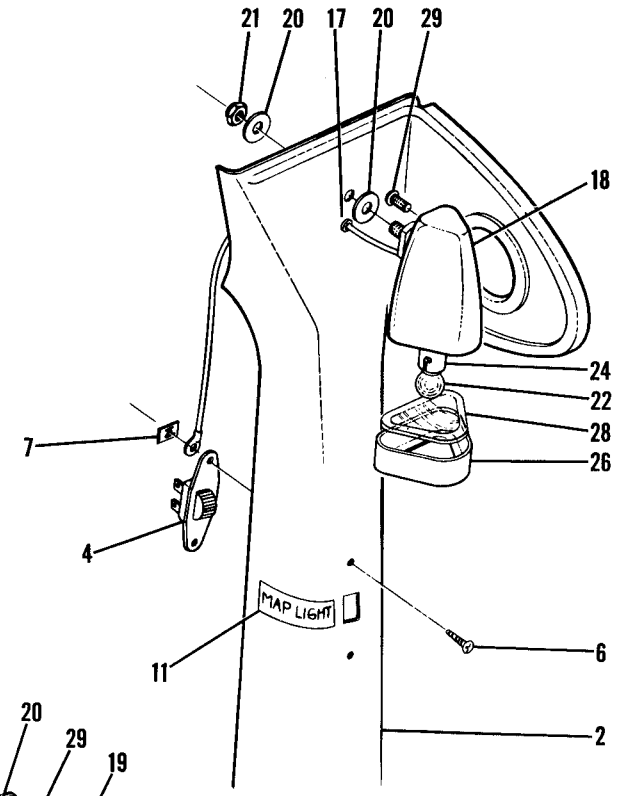

17250002 - 17251822
P17257170 - P17257188

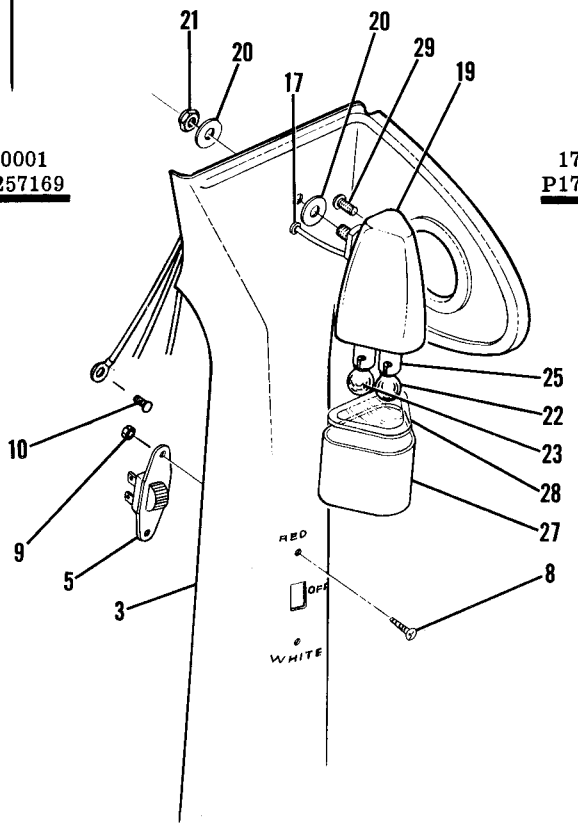

17251823 THRU 17263458


Figure 202. Map Light Installation

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
202 -		MAP LIGHT INSTALLATION	NP	
- 1	0711133-15	SHIELD-FRONT DOORPOST LH	1	A
- 2	0711133-17	SHIELD-FRONT DOORPOST LH	1	B
- 3	0711133-33 □	SHIELD-FRONT DOORPOST LH	1	F
	0711133-49 □	SHIELD-FRONT DOORPOST LH WHEN EXHAUSTED USE 0413484-4	1	G
	0413484-4 □	SHIELD ASSEMBLY-FRONT DOORPOST	1	H
	0413484-9 □	SHIELD ASSEMBLY-FRONT DOOR POST	1	J
	0413484-11 □	SHIELD ASSEMBLY-FRONT DOOR POST	1	K
	0413484-13 □	SHIELD ASSEMBLY-FRONT DOOR POST	1	L
- 4	0713029	SWITCH-MAP LIGHT	1	C
- 5	S1501-1	SWITCH-MAP LIGHT	1	D
		ATTACHING PARTS		
- 6	S1021Z4-6	SCREW	2	C
- 7	NAS446-1-3	NUT	2	C
- 8	AN515-3R6	SCREW	2	D
- 9	AN340-3	NUT	2	D
		---*---		
-10	S1021Z4-4	SCREW GROUND WIRE	1	D
-11	0713210-4	PLACARD-MAP LIGHT	1	C
-12	0713017-22	SPOTLIGHT ASSEMBLY	1	A
		ATTACHING PARTS		
-13	AN515-6R8	SCREW	2	A
-14	AN960-6	WASHER	2	A
-15	MS21044N06	NUT	2	A
-16	0511311-5	DOUBLER	1	A
		---*---		
-17	MS35489-4	GROMMET	1	
-18	1470089-10-532	MAPLIGHT ASSEMBLY	1	B
-19	1470089-14 □	MAPLIGHT ASSEMBLY	1	D
		ATTACHING PARTS		
-20	AN970-3	WASHER	2	E
-21	MS21044N3	NUT	1	E
		---*---		
-22	1816	LAMP GE	1	E
-23	1816TR	LAMP RED GE	1	D
-24	1924	SOCKET SHH1	1	B
-25	IDI-757	SOCKET ASSEMBLY ISES	1	D
-26	1470089-6	RETAINER	1	B
-27	0700148-1 □	HOOD	1	D
-28	1470089-18	LENS	1	E
-29	AN515-6R8	SCREW-ADJUSTMENT	1	E

NOTE. □THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIX.

A---172 SERIAL 17249545 THRU 17250001
F172 SERIAL F172-0001 THRU F172-0003
P172 SERIAL P17257120 THRU P17257169
B---172 SERIAL 17250002 THRU 17251822
F172 SERIAL F172-0004 THRU F172-0085
P172 SERIAL P17257170 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
C---172 SERIAL 17249545 THRU 17251822
F172 SERIAL F172-0001 THRU F172-0085
P172 SERIAL P17257120 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
D---172 SERIAL 17251823 THRU 17263458
F172 SERIAL F172-0086 THRU F17201234
E---172 SERIAL 17250002 THRU 17263458
F172 SERIAL F172-0004 THRU F17201234
P172 SERIAL P17257170 THRU P17257188
FP172 SERIAL FP172-0001 THRU FP172-0003
F---172 SERIAL 17251823 THRU 17254892
F172 SERIAL F172-0086 THRU F172-0319
G---172 SERIAL 17254893 THRU 17257161
F172 SERIAL F172-0320 THRU F172-0559
H---172 SERIAL 17257162 THRU 17259223
F172 SERIAL F172-0560 THRU 17200754
J---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F17200755 THRU F17200804
K---172 SERIAL 17259904 THRU 17260758
F172 SERIAL F17200805 THRU F17200904
L---172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Electrical Equipment (Cont)

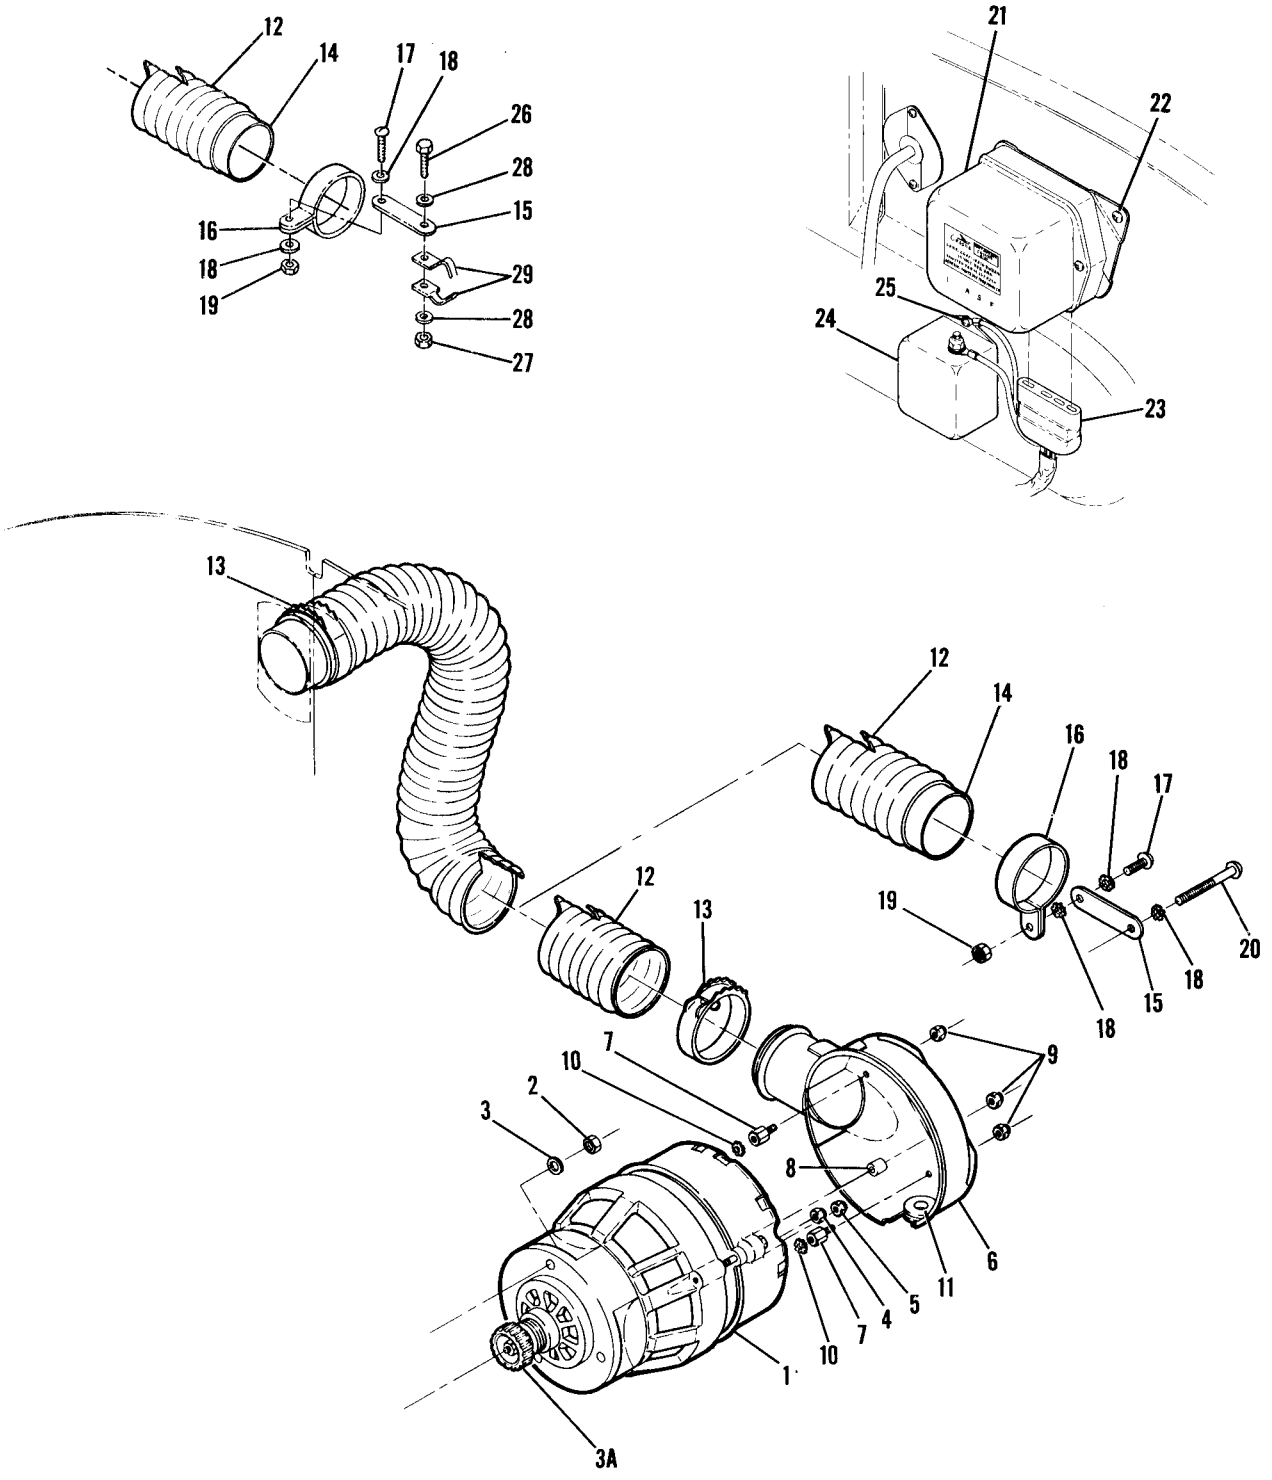

172 SERIAL - SEE CODE A

Figure 203. Alternator Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
203 -		ALTERNATOR INSTALLATION 60 AMP	NP	A
- 1	C611501-0202	ALTERNATOR ASSEMBLY WEU C611501-0204	1	
	C611501-0204	ALTERNATOR ASSEMBLY	1	
		ATTACHING PARTS		
- 2	MS21042L5	NUT	3	
- 3	AN960-516	WASHER	3	
		---*---		
- 3A	EQ5820	DRIVE ASSEMBLY-ALTERNATOR CM	1	
- 4	MS21042L4	NUT ON BATTERY TERMINAL	1	
	AN936A416	WASHER ON BATTERY TERMINAL	1	
	AN316C4R	NUT ON BATTERY TERMINAL USED ON C611501-0202	1	
	AN340-416	NUT ON BATTERY TERMINAL USED ON C611501-0204	1	
- 5	MS20365-1032	NUT ON FIELD TERMINAL	1	
	AN935-10	WASHER ON FIELD TERMINAL	1	
	S1505-3	NUT ON FIELD TERMINAL USED ON C611501-0202	1	
	AN340-10	NUT ON FIELD TERMINAL USED ON C611501-0204	1	
- 6	1550016-1	SHROUD ASSEMBLY	1	B
		ATTACHING PARTS		
- 7	0450030-1	SPACER-MOUNT	2	B
- 8	NAS43D3-24	SPACER	1	B
- 9	MS20365-1032	NUT	3	B
-10	AN936A-10	WASHER	2	B
		---*---		
-11	NAS557-10A	GROMMET	1	B
-12	S1053E16T24	HOSE 24 IN LG BULK ITEM REF S1053E16T24	1	
		ATTACHING PARTS		
-13	NAS397-34	CLAMP	2	B
	NAS397-34	CLAMP	1	C
-14	0450032-1	SUPPORT-BLAST TUBE	1	C
-15	0450033-1	STRAP-BLAST TUBE SUPPORT	1	C
-16	AN735-34	CLAMP	1	C
-17	AN520-10R12	SCREW	1	C
-18	AN936A10	WASHER	3	D
-19	MS21042L4	NUT	1	C
-20	AN515-10R36	SCREW	1	D
		---*---		
-21	C611001-0201	REGULATOR 60 AMP	1	
		ATTACHING PARTS		
-22	AN520-416R8	SCREW	2	
	0550238-1	ADAPTER PLATE-REGULATOR	1	B
	AN4-10A	BOLT	2	B
	MS21042L4	NUT	2	B
		---*---		
-23	1250211-5	PLUG ASSEMBLY	1	C
	1250211-4	PLUG ASSEMBLY	1	B
-24	0770038-2	NOISE FILTER	1	
		ATTACHING PARTS		
-25	AN520-10R8	SCREW	2	
		---*---		
-26	AN3-3	BOLT	1	E
-27	MS21044N3	NUT	1	E
-28	AN936A10	WASHER	2	E
-29	0450036-1	CLAMP HALF	2	E

A---172 SERIAL 17253903 THRU 17253906,
17253908 THRU 17253920,
17253922 THRU 17253931,
17253935, 17253937, 17253939,
17253940, 17253942, 17253943
17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200804


B---172 SERIAL 17253903 THRU 17253906,
17253908 THRU 17253920,
17253922 THRU 17253931,
17253935, 17253937, 17253939,
17253940, 17253942, 17253943,

C---172 SERIAL 17254893 THRU 17256512
F172 SERIAL F172-0320 THRU F17200804


D---172 SERIAL 17254893 THRU 17256490
F172 SERIAL F172-0320 THRU F172-0519

E---172 SERIAL 17256491 THRU 17256512
F172 SERIAL F172-0520 THRU F17200804

Electrical Equipment (Cont)

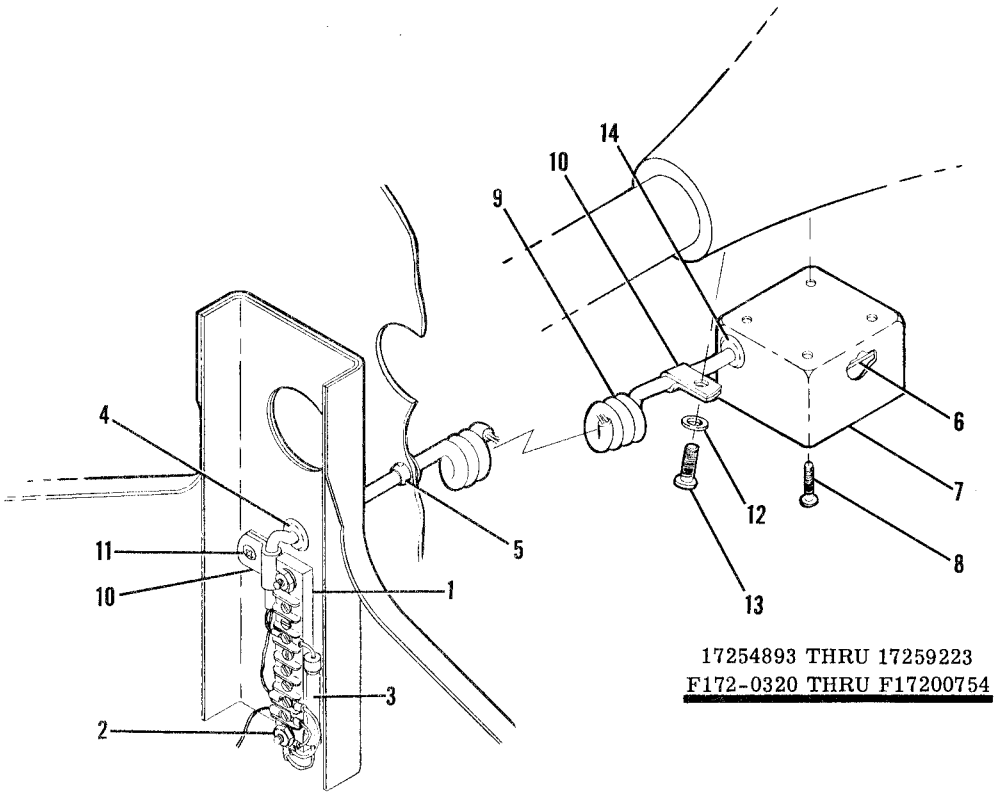

17254893 THRU 17259223
F172-0320 THRU F17200754

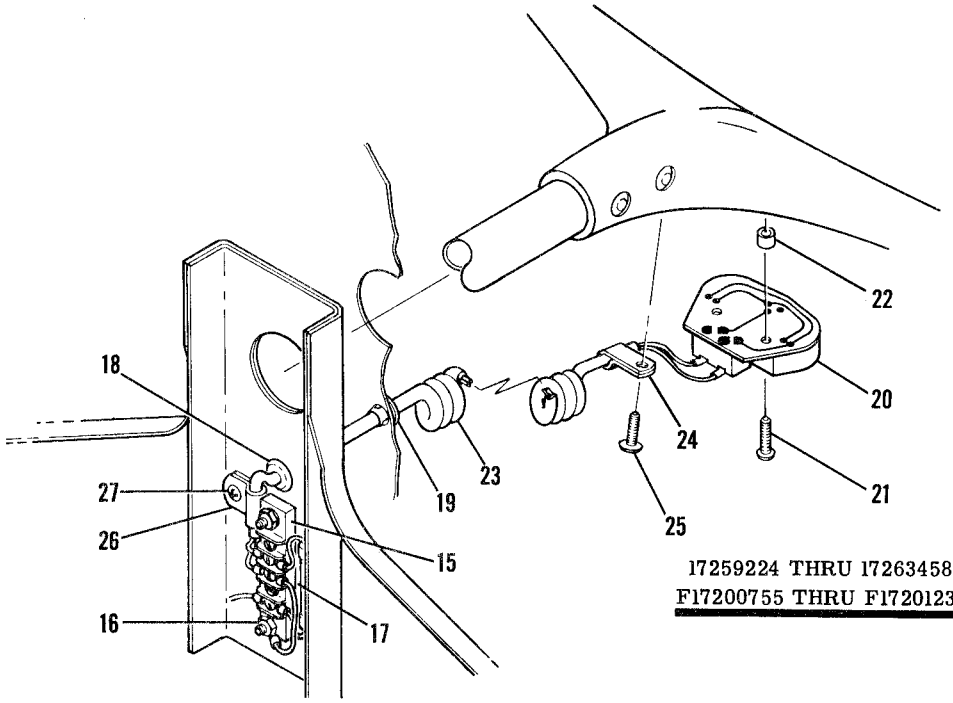

17259224 THRU 17263458
F17200755 THRU F17201234

172 SERIAL 17254893 THRU 17263458
F172 SERIAL F172-0320 THRU F17201234


Figure 204. Control Wheel Map Light Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
204 -			MAP LIGHT INSTALLATION-CONTROL WHEEL	NP	A
- 1	8-171		TERMINAL BLOCK CIN	1	
			ATTACHING PARTS		
- 2	AN507-440-10		SCREW	2	
	NAS43DD-6		SPACER	2	
	AN936A4		WASHER	2	
	AN340-4		NUT	2	
			---*---		
- 3	1570141-1		FUSE ASSEMBLY	1	
- 4	MS35489-33		GROMMET	1	
- 5	K375-125		BUSHING-SNUB HEMA	1	
- 6	1570142-3		CIRCUIT BOARD	1	
- 7	1770009-1		SHIELD	1	
			ATTACHING PARTS		
- 8	AN515-2R10		SCREW	4	
	S1959-1		INSERT	4	
			---*---		
- 9	8499	*	CABLE-RETRACTILE BDN	1	
			ATTACHING PARTS		
-10	S1155-3		CLAMP	2	
-11	AN507-832-5		SCREW	1	
	AN936A8		WASHER	1	
	AN340-8		NUT	1	
-12	AN960-8L		WASHER	1	
-13	AN515-8R5		SCREW	1	
	S1959-2		INSERT	1	
			---*---		
-14	MS35489-4		GROMMET	1	
			MAP LIGHT INSTALLATION-CONTROL WHEEL	NP	B
-15	351-11-05-001		TERMINAL BLOCK CIN	1	
			ATTACHING PARTS		
-16	AN515-4R10		SCREW	2	
	NAS43DD-6		SPACER	2	
	AN936A4		WASHER	2	
	AN340-4		NUT	2	
			---*---		
-17	1570141-1		FUSE ASSEMBLY	1	
-18	MS35489-33S		GROMMET	1	
-19	K375-125		BUSHING-SNUB HEMA	1	
-20	0570088-1		LIGHT ASSEMBLY-MAP	1	D
	0570088-3		LIGHT ASSEMBLY-MAP	1	E
			ATTACHING PARTS		
-21	AN515-2R12		SCREW	2	
	S1959-1		INSERT	2	
-22	NAS43DD-15		SPACER	2	
			---*---		
	1205004-1		PLACARD-MAP LIGHT DIM	1	
	0570095-1		COVER-TERMINAL BLOCK	1	
	0570094-1		SHIELD	1	C
			ATTACHING PARTS		
	MS51959-58		SCREW	2	
	0570094-2		SPACER	2	
			---*---		
-23	8409	*	CABLE-RETRACTILE BDN	1	
			ATTACHING PARTS		
-24	S1155-3		CLAMP	1	
-25	AN515-8R5		SCREW	1	
	S1959-2		INSERT	1	
	AN960-8L		WASHER	1	
-26	S1155-3		CLAMP	1	
-27	AN515-8R6		SCREW	1	
	AN936A8		WASHER	1	
	AN340-8		NUT	1	
			---*---		

NOTE. *THIS CABLE ALSO USED WITH MIKE SWITCH

A---172 SERIAL 17254893 THRU 17259223
F172 SERIAL F172-0320 THRU F17200754
B---172 SERIAL 17259224 THRU 17263458
F172 SERIAL F17200755 THRU F17201234
C---172 SERIAL 17259879 THRU 17259903
F172 SERIAL F172-CHECK INDIVIDUAL AIRPLANE FOR APPLICABILITY
D---172 SERIAL 17259224 THRU 17259903
F172 SERIAL F17200755 THRU F17200804
E---172 SERIAL 17259904 THRU 17263458
F172 SERIAL F17200805 THRU F17201234

Electrical Equipment (Cont)

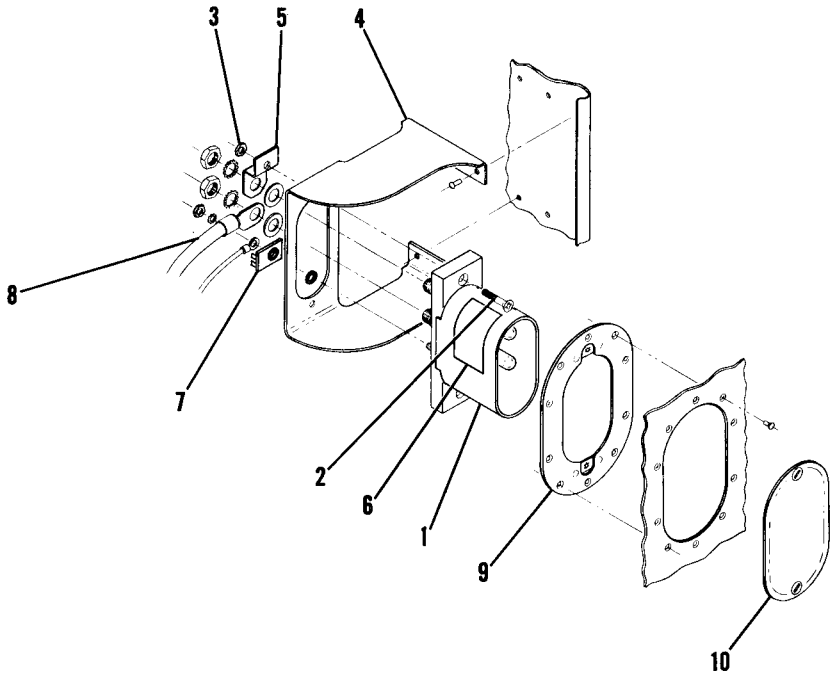

172 SERIAL 17260759 THRU 17263458
F172 SERIAL F17200905 THRU F17201234

Figure 205. Ground Service Plug Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
205 -		GROUND SERVICE PLUG INSTALLATION	NP	A
- 1	AN2552-3A	RECEPTACLE-GROUND SERVICE PLUG	1	
		ATTACHING PARTS		
- 2	AN510-10R14	SCREW	2	
- 3	MS21044N3	NUT	2	
		---*---		
- 4	0553005-3	BRACKET-MOUNTING	1	
- 5	0312155-10	STRAP-GROUND	1	
- 6	1205024-1	PLACARD-POLARITY	1	
- 7	1570043-3	DIODE BOARD ASSY	1	
- 8	0500062-PC7	CABLE-RECEPTACLE TO CONTACTOR	1	
- 9	0752610-1	DOUBLER ASSY	1	
	S1115-19	RECEPTACLE-STUD	2	
-10	0752611-1	DOOR ASSY-GROUND SERVICE PLUG	1	
	S1115-30	STUD	2	
	S1115-9	RING	2	
		A---172 SERIAL 17260759 THRU 17263458 F172 SERIAL F17200905 THRU F17201234		

NUMERICAL INDEX

PART NUMBER	FIGURE AND INDEX NO.
AF934-14	171 -19
AF934-5	171 - 8
AF934-7	171 -16
AF934-9	171 -13
AN123862	100 -27
AN123862	102 -33
AN123883	103 -32
AN123883	187 -49
AN123990	127 - 5
AN155B16S	158 -70
AN155B16S	159 - 4
AN155B32L	149 -59
AN155B32L	150 -43
AN155B32S	148 -36
AN155B32S	148 -40
AN155B32S	149 - 9
AN155B32S	150 -44
AN155B32S	154 -30
AN155B32S	155 -31
AN155B32S	160 -11
AN155B8L	156 -22
AN155B8L	157 -25
AN161-32LL	149 -60
AN161-32LL	150 -45
AN200KS4	148 - 8
AN21-10	148 -34
AN21-10	148 -39
AN21-12	149 - 7
AN227-6	97 - 7
AN227-7	97 - 7
AN23-10	155 - 8
AN23-10	160 - 3
AN23-11	55 - 5
AN23-11	160 - 7
AN23-12	56 - 5
AN23-12	154 - 9
AN23-12	154 -14
AN23-12	155 -13
AN23-12	158 - 8
AN23-12	158 -12
AN23-15A	87 -20
AN23-15A	88 -21
AN23-15A	89 -19
AN23-15A	90 -18
AN23-15A	95 -17
AN23-16	87 - 2
AN23-16	158 -14
AN23-16	158 -18
AN23-16A	90 - 2
AN23-16A	91 - 3
AN23-16A	95 -30
AN23-17	55 - 5
AN23-17	56 - 5
AN23-19A	87 -20
AN23-19A	87 -33
AN23-19A	88 - 2
AN23-19A	88 -34
AN23-19A	89 - 2
AN23-19A	89 -32
AN23-19A	90 -18
AN23-19A	90 -70
AN23-19A	92 -18
AN23-20A	93 -86
AN23-20A	94 -78
AN23-40A	95 -24
AN23-9	158 - 3
AN23-9	188 - 8
AN24-13	87 -24
AN24-13	87 -25
AN24-13A	88 -25
AN24-13A	88 -26
AN24-13A	89 -23
AN24-13A	89 -24
AN24-16	87 -26

PART NUMBER	FIGURE AND INDEX NO.
AN24-16A	88 -27
AN24-16A	89 -25
AN24-18A	96 - 6
AN24-31A	96 -17
AN24-8	121 -43
AN2552-3A	190 -13
AN2552-3A	191 -13
AN2552-3A	192 - 1
AN2552-3A	205 - 1
AN256F8	119 -11A
AN256F8	197 - 8A
AN3-10A	20 -18
AN3-10A	55 - 7
AN3-10A	56 - 7
AN3-10A	91 -13
AN3-10A	91 -21
AN3-10A	95 -13
AN3-10A	145 -26
AN3-10A	147 -15
AN3-10A	147 -22
AN3-10A	148 -17
AN3-10A	148 -44
AN3-10A	151 -17
AN3-10A	156 -13
AN3-10A	157 -12
AN3-10A	157 -16
AN3-10A	158 -30
AN3-10A	159 -11
AN3-11A	20 - 9
AN3-11A	33 -31B
AN3-11A	145 - 9
AN3-11A	145 -38
AN3-11A	147 - 9
AN3-11A	148 -16
AN3-11A	148 -28
AN3-11A	159 -24
AN3-12A	148 -22
AN3-13A	91 -21D
AN3-13A	142 -53
AN3-13A	143 -44
AN3-13A	144 -49
AN3-13A	148 -20
AN3-16A	145 -20
AN3-17A	91 -21C
AN3-17A	93 - 2
AN3-17A	94 - 2
AN3-20A	34 - 6
AN3-20A	35 - 6
AN3-20A	44 - 4
AN3-20A	44 - 8
AN3-20A	45 - 5
AN3-20A	45 - 9
AN3-20A	124 -17
AN3-20A	187 -11
AN3-20A	189 -22
AN3-21A	34 - 2
AN3-21A	35 - 2
AN3-21A	149 -53
AN3-21A	150 -37
AN3-24A	133 -47
AN3-26A	126 -20
AN3-26A	136 -28
AN3-3	203 -26
AN3-3A	49 -91
AN3-3A	58 -43C
AN3-3A	110 - 4
AN3-3A	122 -35
AN3-3A	123 -56
AN3-3A	123 -75
AN3-3A	124 -10
AN3-3A	125 -32
AN3-3A	125 -46
AN3-3A	133 -45
AN3-3A	136 -26

PART NUMBER	FIGURE AND INDEX NO.
AN3-3A	142 -37
AN3-3A	143 -28
AN3-3A	144 -33
AN3-3A	159 -28
AN3-3A	172 -14
AN3-3A	172 -18
AN3-3A	172 -26
AN3-3A	190 - 3
AN3-3A	191 - 4
AN3-3A	192 -17
AN3-4	68 -36
AN3-4A	20 -28
AN3-4A	31 -44
AN3-4A	34 -36
AN3-4A	35 -37
AN3-4A	87 -57
AN3-4A	88 -61
AN3-4A	89 -56
AN3-4A	97 - 2
AN3-4A	110 - 2
AN3-4A	122 -19B
AN3-4A	123 -10B
AN3-4A	124 -26
AN3-4A	124 -37
AN3-4A	131 -13
AN3-4A	132 -11
AN3-4A	145 -16
AN3-4A	165 -16
AN3-4A	180 -23
AN3-4A	182 -35
AN3-4A	183 -43
AN3-4A	184 -56
AN3-4A	189 -11
AN3-5A	31 -21
AN3-5A	32 -16
AN3-5A	33 -16
AN3-5A	34 -42
AN3-5A	35 -44
AN3-5A	123 -19
AN3-5A	123 -32
AN3-5A	142 -56
AN3-5A	143 -47
AN3-5A	144 -52
AN3-5A	156 -20
AN3-5A	157 -23
AN3-5A	188 - 4
AN3-5A	188 -12
AN3-5A	189 -12
AN3-6	26 - 6
AN3-6A	20 - 7
AN3-6A	124 -43
AN3-6A	142 -46
AN3-6A	143 -37
AN3-6A	144 -42
AN3-6A	144 -45D
AN3-6A	156 -24
AN3-6A	157 -27
AN3-6A	158 -22
AN3-6A	158 -26
AN3-6A	158 -35
AN3-6A	159 -23
AN3-6A	172 -14
AN3-6A	181 -24
AN3-6A	188 - 3
AN3-6A	190 -12
AN3-7A	19 -13
AN3-7A	122 -12
AN3-7A	123 -43
AN3-7A	123 -44
AN3-7A	124 -44
AN3-7A	149 -63
AN3-7A	150 -48
AN3-7A	158 -40
AN3-7A	159 - 6

PART NUMBER	FIGURE AND INDEX NO.
AN3H3A	57 -38C
AN3H3A	187 -51
AN310-3	57 -34
AN310-3	58 -39
AN310-3	154 -10
AN310-3	154 -15
AN310-3	155 - 9
AN310-3	155 -14
AN310-3	158 - 4
AN310-3	158 - 9
AN310-3	158 -12
AN310-3	158 -15
AN310-3	158 -19
AN310-3	160 - 4
AN310-3	160 - 8
AN310-3	188 - 9
AN310-4	55 -36C
AN310-4	57 -29
AN310-4	57 -41
AN310-4	58 -34
AN310-4	58 -46
AN310-4	129 - 1
AN310-5	55 -18
AN310-5	55 -29
AN310-5	56 -19
AN310-5	129 -40
AN315-3R	24 - 2
AN315-3R	122 -18
AN315-3R	123 -43
AN315-3R	124 -44
AN315-3R	124 -55
AN315-3R	160 -13
AN315-4R	123 -58
AN315-4R	124 -22
AN316-4R	19 -18
AN316-4R	20 -13
AN316-4R	146 - 2
AN316-6R	55 -10
AN316-6R	55 -14
AN316-6R	56 -10
AN316-6R	56 -14
AN316-7R	161 -33
AN316C4R	203 - 4
AN316C5R	92 -25
AN320-1	148 -34
AN320-1	148 -39
AN320-1	149 - 7
AN320-3	26 - 8
AN320-3	55 - 5
AN320-3	56 - 5
AN320-4	121 -44
AN340-10	130 -33
AN340-10	203 - 5
AN340-3	202 - 9
AN340-4	204 - 2
AN340-4	204 -16
AN340-416	203 - 4
AN340-8	78 -19
AN340-8	107 - 9
AN340-8	130 -36
AN340-8	204 -11
AN340-8	204 -27
AN340B6	99 -24
AN340B6	99 -32
AN340B6	99 -35
AN340B6	99 -42
AN340B6	100 -24
AN340B6	100 -30
AN340B6	100 -32
AN340B6	100 -34
AN340B6	100 -39
AN340B6	100 -45
AN340B6	101 -14
AN340B6	101 -15

PART NUMBER	FIGURE AND INDEX NO.
AN340B6	101 -19
AN340B6	101 -20
AN340B6	101 -28
AN340B6	101 -28
AN340B6	102 -24
AN340B6	102 -29
AN340B6	102 -30
AN340B6	102 -39
AN340B6	103 -29
AN340B6	103 -40
AN340B6	104 -25
AN340B6	104 -40
AN340B6	104 -52
AN340B6	104 -53
AN340B6	106 -47
AN340B6	152 - 1
AN340B6	152 -24
AN340B6	153 - 1
AN340B6	153 -23
AN340B6	183 -16
AN340B6	184 -36
AN340B6	186 - 1
AN340B6	186 -10
AN340B8	101 - 3
AN340B8	102 -15
AN340B8	102 -21
AN340B8	103 -17
AN340B8	103 -24
AN340B8	104 -21
AN340B8	104 -29
AN340B8	105 -24
AN340B8	105 -35
AN365-428	70 -14
AN384-2D	165 -49
AN4-10A	35 -60
AN4-10A	124 -20
AN4-10A	147 - 5
AN4-10A	148 - 2
AN4-10A	149 -31
AN4-10A	149 -57
AN4-10A	150 -15
AN4-10A	150 -41
AN4-10A	154 - 2
AN4-10A	154 -23
AN4-10A	154 -27
AN4-10A	155 - 2
AN4-10A	155 -19
AN4-10A	160 -20
AN4-10A	203 -22
AN4-11A	23 - 1
AN4-11A	26 -11
AN4-11A	123 -10C
AN4-11A	148 -42B
AN4-11A	154 - 5
AN4-11A	155 - 4
AN4-13A	69 - 4
AN4-13A	98 - 1
AN4-14A	26 - 2
AN4-14A	59 - 3
AN4-14A	90 -37
AN4-14A	92 -33
AN4-14A	149 -27
AN4-14A	150 -11
AN4-14A	154 -19
AN4-14A	155 -23
AN4-14A	160 -15
AN4-14A	169 - 1
AN4-15A	149 -41
AN4-15A	149 -45
AN4-15A	150 -25
AN4-15A	150 -29
AN4-15A	159 -46
AN4-16A	187 -24
AN4-17A	98 - 7

PART NUMBER	FIGURE AND INDEX NO.
AN4-21A	149 -21
AN4-21A	149 -36
AN4-21A	150 - 7
AN4-21A	150 -20
AN4-21A	158 -45
AN4-22A	60 - 9
AN4-24A	61 -11
AN4-26A	125 - 6
AN4-3A	190 -21
AN4-3A	191 -21
AN4-3A	191 -24A
AN4-30A	148 -11
AN4-31	55 -36C
AN4-31	57 -28
AN4-31	57 -40
AN4-31	58 -33
AN4-31	58 -45
AN4-31	147 - 2
AN4-31A	148 - 1
AN4-33A	149 -16
AN4-36A	70 -12
AN4-37A	62 -10
AN4-4A	131 -18
AN4-41A	71 -15
AN4-42A	19 - 3
AN4-42A	19 - 9
AN4-46	125 -56
AN4-5A	96 - 1
AN4-5A	189 -19
AN4-5A	190 -11
AN4-5A	190 -39
AN4-5A	191 - 2
AN4-5A	191 -60
AN4-5A	192 -16
AN4-56A	159 -36
AN4-6A	31 -23
AN4-6A	87 -53
AN4-6A	88 -57
AN4-6A	89 -52
AN4-6A	95 - 1
AN4-6A	95 -22
AN4-6A	97 -15
AN4-6A	98 -17
AN4-6A	108 -40
AN4-6A	108 -41
AN4-6A	108 -42
AN4-6A	123 -37
AN4-6A	189 -13
AN4-6A	190 -26
AN4-6A	192 -14
AN4-60A	20 - 2
AN4-60A	159 -20
AN4-62A	158 -50
AN4-62A	158 -65
AN4-7A	26 -12
AN4-7A	95 - 1
AN4-7A	96 - 1
AN4-7A	126 - 6
AN4H21A	71 -24
AN4022-1	122 -39
AN4022-1	124 -38
AN4022-1	165 -52
AN4022-1	166 -56
AN4022-1	167 -64
AN4022-1	168 -77
AN4022-1	173 - 2
AN4022-1	173 - 4
AN4022-1	173 -10
AN4022-1	174 -11
AN415-2	53 - 4
AN415-2	54 - 8
AN5-10A	22 - 1
AN5-10A	55 - 4
AN5-10A	56 - 4

PART NUMBER	FIGURE AND INDEX NO.
AN5-11A	155 -27
AN5-13A	68 -18
AN5-14A	68 -18
AN5-17A	58 -13
AN5-21A	67 -27
AN5-22A	67 -27
AN5-23A	24 - 6
AN5-23A	67 -27
AN5-23A	67 -27
AN5-31A	55 - 2
AN5-31A	56 - 2
AN5-33A	57 - 5
AN5-35A	63 - 3
AN5-35A	70 -12
AN5-4A	24 - 3
AN5-47	55 -17
AN5-47A	57 - 5
AN5-5A	22 - 5
AN5-51A	55 -24
AN5-51A	58 - 8
AN5-55	56 -17
AN5-6A	13 - 7
AN5-7A	12 - 7
AN500-416-10	134 - 2
AN500-416-10	134 -15
AN500-416-10	134 -22
AN500-416-10	134 -26
AN500-416-10	134 -34
AN500-416-10	134 -41
AN500-416-10	134 -49
AN500-416-10	135 - 2
AN500-416-10	135 -16
AN500-416-10	135 -37
AN500-416-10	135 -45
AN500-416-10	135 -55
AN500-416-10	135 -62
AN500-8-8	130 -37
AN500A8-4	87 - 1
AN500A8-4	88 - 1
AN500A8-4	89 - 1
AN500A8-4	90 - 1
AN500A8-4	91 - 2
AN500A8-5	142 -24
AN500A8-7	93 - 1
AN500A8-7	94 - 1
AN502-10-14	130 -39
AN502-10-6	69 -21
AN502-8-10	130 -40
AN503-8-12	130 -41
AN503-8-16	130 -38
AN504-8R8	69 - 7
AN507-1032R10	67 -13
AN507-1032R10	68 - 9
AN507-1032R12	139 -15B
AN507-1032R14	108 -14
AN507-1032R5	182 - 8
AN507-1032R5	183 - 9
AN507-440-10	204 - 2
AN507-632R12	4 -37
AN507-632R12	4 -48
AN507-632R14	4 -48
AN507-632R6	171 - 7
AN507-632R8	4 -42
AN507-632R8	4 -47
AN507-640R4	161 -25
AN507-832-5	204 -11
AN507-832R14	87 - 6
AN507-832R14	88 - 6
AN507-832R14	89 - 6
AN507-832R14	90 - 6
AN507-832R14	95 -16
AN507-832R8	4 -32
AN507B632R12	4 -30
AN507B832R14	108 -66

PART NUMBER	FIGURE AND INDEX NO.
AN507B832R8	108 -32
AN509-10R10	49 -65
AN509-10R10	82 -14
AN509-10R10	83 - 7
AN509-8R15	26 -24
AN509-8R7	161 -54
AN510-10R14	190 -14
AN510-10R14	191 -14
AN510-10R14	205 - 2
AN510-10R16	192 - 2
AN5108 4R8	108 -64
AN515-10R10	169 -27
AN515-10R10	176 -15
AN515-10R10	177 -26
AN515-10R10	178 -31
AN515-10R10	179 -34
AN515-10R36	203 -20
AN515-10R7	46 -15
AN515-10R8	146 - 4
AN515-10R8	170 - 1
AN515-2R10	204 - 8
AN515-2R12	204 -21
AN515-3R6	202 - 8
AN515-4-9	159 -43
AN515-4R10	204 -16
AN515-4R4	193 -12
AN515-4R4	194 -10
AN515-4R4	195 -16
AN515-4R6	23 -19
AN515-6-10	173 -13
AN515-6R10	104 -43
AN515-6R10	105 -39
AN515-6R10	105 -47
AN515-6R10	105 -48
AN515-6R10	106 -44
AN515-6R10	106 -45
AN515-6R10	193 -10
AN515-6R10	194 - 5
AN515-6R10	195 - 9
AN515-6R12	107 -32
AN515-6R14	104 -40
AN515-6R14	105 -40
AN515-6R14	106 -37
AN515-6R14	182 - 7
AN515-6R14	183 - 8
AN515-6R16	105 -58
AN515-6R36	84 -27
AN515-6R5	106 -56
AN515-6R5	107 -32
AN515-6R5	199 - 2
AN515-6R6	6 -44B
AN515-6R6	7 -44
AN515-6R6	8 -40B
AN515-6R6	9 -46
AN515-6R6	68 -35
AN515-6R6	68 -41
AN515-6R6	101 -30
AN515-6R6	103 -76
AN515-6R6	104 -51
AN515-6R6	105 -63
AN515-6R6	106 -63
AN515-6R6	107 - 8
AN515-6R6	200 - 8
AN515-6R7	172 - 4
AN515-6R8	99 -30
AN515-6R8	102 -24
AN515-6R8	105 -30
AN515-6R8	106 -29
AN515-6R8	161 - 5
AN515-6R8	202 -13
AN515-6R8	202 -29
AN515-8-6	197 -18
AN515-8-8	136 -49
AN515-8D	168 -52

PART NUMBER	FIGURE AND INDEX NO.
AN515-8R10	103 -23
AN515-8R10	104 -22
AN515-8R10	105 -33
AN515-8R10	139 -28
AN515-8R10	190 -28
AN515-8R10	191 -34
AN515-8R11	201 -27
AN515-8R12	79 - 6
AN515-8R12	102 -21
AN515-8R12	108 -18
AN515-8R13	105 -98A
AN515-8R13	106 -92
AN515-8R13	106 -92A
AN515-8R14	97 - 8
AN515-8R16	105 -75
AN515-8R16	108 -20
AN515-8R22	196 - 8
AN515-8R26	196 - 7
AN515-8R4	55 -38
AN515-8R4	67 -23
AN515-8R4	67 -67
AN515-8R4	68 -25
AN515-8R5	204 -13
AN515-8R5	204 -25
AN515-8R6	31 -29
AN515-8R6	37 -11
AN515-8R6	49 -61
AN515-8R6	68 -33
AN515-8R6	80 -13
AN515-8R6	81 -19
AN515-8R6	81 -20
AN515-8R6	93 -82
AN515-8R6	94 -71
AN515-8R6	125 -19
AN515-8R6	151 -23
AN515-8R6	161 -37
AN515-8R6	190 -32
AN515-8R6	191 -30
AN515-8R6	201 -17
AN515-8R6	204 -27
AN515-8R7	33 -58
AN515-8R7	196 -11
AN515-8R8	6 -51
AN515-8R8	7 -46
AN515-8R8	8 -45
AN515-8R8	8 -47
AN515-8R8	9 -48
AN515-8R8	21 -16
AN515-8R8	21 -19
AN515-8R8	21 -19
AN515-8R8	23 -17
AN515-8R8	25 -10
AN515-8R8	44 -19
AN515-8R8	80 -12
AN515-8R8	84 -19
AN515-8R8	85 -18
AN515-8R8	97 - 6
AN515-8R8	98 - 5
AN515-8R8	98 - 5B
AN515-8R8	105 -28
AN515-8R8	105 -75
AN515-8R8	106 -27
AN515-8R8	106 -76
AN515-8R8	108 -16
AN515-8R8	114 - 7
AN515-8R8	115 -20
AN515-8R8	116 -17
AN515-8R8	117 -15
AN515-8R8	118 -24
AN515-8R8	119 -16
AN515-8R8	120 -22
AN515-8R8	120 -26
AN515-8R8	138 -13
AN515-8R8	139 -13

PART NUMBER	FIGURE AND INDEX NO.
AN515-8R8	151 -10
AN515-8R8	152 - 9
AN515-8R8	152 -33
AN515-8R8	153 - 9
AN515-8R8	153 -32
AN515-8R8	166 -19
AN515-8R8	167 -19
AN515-8R8	168 -31
AN515-8R8	185 -38
AN515-8R8	197 - 7
AN515-8R8	198 - 9
AN515-8R8	200 - 4
AN515-8R8	201 - 1
AN515-8R8	201 -21
AN515BGR12	153 -23
AN515B6-R6	183 - 3
AN515B6-5	101 -27
AN515B6R	103 -44
AN515B6R-12	103 -45
AN515B6R10	99 -24
AN515B6R10	99 -44
AN515B6R10	100 -24
AN515B6R10	100 -47
AN515B6R10	104 -41
AN515B6R10	106 -36
AN515B6R12	99 -32
AN515B6R12	100 -32
AN515B6R12	100 -37
AN515B6R12	100 -39
AN515B6R12	101 -16
AN515B6R12	101 -20
AN515B6R12	101 -24
AN515B6R12	101 -28
AN515B6R12	101 -28
AN515B6R12	102 -29
AN515B6R12	102 -35
AN515B6R12	102 -36
AN515B6R12	102 -37
AN515B6R12	102 -39
AN515B6R12	102 -40
AN515B6R12	102 -42
AN515B6R12	103 -39
AN515B6R12	103 -48
AN515B6R12	103 -49
AN515B6R12	104 -40
AN515B6R12	104 -40
AN515B6R12	104 -48
AN515B6R12	104 -50
AN515B6R12	104 -52
AN515B6R12	105 -40
AN515B6R12	105 -49
AN515B6R12	106 -37
AN515B6R12	106 -46
AN515B6R12	108 -27
AN515B6R12	152 - 1
AN515B6R12	152 -24
AN515B6R12	153 - 1
AN515B6R12	179 - 5
AN515B6R12	183 -15
AN515B6R12	184 -36
AN515B6R12	185 -21
AN515B6R12	186 - 1
AN515B6R12	186 -10
AN515B6R12	186 -10
AN515B6R16	101 -14
AN515B6R16	101 -15
AN515B6R16	101 -19
AN515B6R16	102 -27
AN515B6R16	102 -27E
AN515B6R16	102 -28
AN515B6R16	103 -32
AN515B6R16	103 -33
AN515B6R16	103 -36
AN515B6R16	103 -46

PART NUMBER	FIGURE AND INDEX NO.
AN515B6R16	104 -34
AN515B6R16	104 -37
AN515B6R16	104 -44
AN515B6R16	104 -45
AN515B6R16	105 -41
AN515B6R16	105 -44
AN515B6R16	105 -50
AN515B6R16	105 -52
AN515B6R16	106 -38
AN515B6R16	106 -41
AN515B6R16	106 -47
AN515B6R16	106 -49
AN515B6R6	101 -24
AN515B6R6	103 -51
AN515B6R6	104 -42
AN515B6R6	104 -43
AN515B6R6	105 -47
AN515B6R6	105 -48
AN515B6R6	106 -44
AN515B6R6	106 -45
AN515B6R6	179 - 3
AN515B6R6	184 - 2
AN515B6R6	184 - 4
AN515B6R6	184 - 6
AN515B6R6	184 - 8
AN515B6R6	185 - 2
AN515B6R6	185 - 5
AN515B6R8	33 -34
AN515B6R8	100 -30
AN515B6R8	102 -24
AN515B6R8	102 -30
AN515B6R8	103 -29
AN515B6R8	103 -29
AN515B6R8	103 -40
AN515B6R8	104 -25
AN515B6R8	104 -53
AN515B6R8	105 -55
AN515B6R8	106 -50
AN515B8R4	103 -52
AN515B8R4	104 -49
AN515B8R4	105 -62
AN515B8R4	106 -62
AN5156R10	104 -42
AN5158R4	141 -27
AN520-10R10	6 -44
AN520-10R10	8 -40
AN520-10R10	16 -17
AN520-10R10	16 -20
AN520-10R10	17 -13
AN520-10R10	17 -18
AN520-10R10	55 -34A
AN520-10R10	67 -51
AN520-10R10	67 -56
AN520-10R10	67 -65
AN520-10R10	68 -48
AN520-10R10	80 - 5
AN520-10R10	81 - 5
AN520-10R10	166 -69
AN520-10R10	178 -16
AN520-10R10	179 -13
AN520-10R10	182 -27
AN520-10R10	183 -35
AN520-10R10	184 -39
AN520-10R10	185 -23
AN520-10R10	185 -32
AN520-10R12	16 -28
AN520-10R12	55 -34C
AN520-10R12	68 -40
AN520-10R12	68 -63
AN520-10R12	72 -23
AN520-10R12	73 -47
AN520-10R12	75 -26
AN520-10R12	76 -44A
AN520-10R12	84 -13

PART NUMBER	FIGURE AND INDEX NO.
AN520-10R12	85 -12
AN520-10R12	144 -30
AN520-10R12	203 -17
AN520-10R16	68 -46
AN520-10R20	73 -46
AN520-10R20	73 -47
AN520-10R20	75 -25
AN520-10R20	75 -26
AN520-10R20	76 -44A
AN520-10R26	124 -49
AN520-10R36	16 -25
AN520-10R36	17 - 2
AN520-10R5	67 -51
AN520-10R5	67 -56
AN520-10R5	67 -59
AN520-10R6	29 -23
AN520-10R6	30 -32
AN520-10R6	51 - 2
AN520-10R6	55 -34B
AN520-10R6	72 -37
AN520-10R6	74 -25
AN520-10R6	121 - 4
AN520-10R6	159 -17
AN520-10R6	190 -36
AN520-10R6	191 -58
AN520-10R6	197 - 5
AN520-10R7	6 -44
AN520-10R7	8 -40
AN520-10R7	28 -28
AN520-10R7	34 -56
AN520-10R7	49 -83
AN520-10R7	156 - 7
AN520-10R7	166 -30
AN520-10R7	167 -32
AN520-10R7	168 -45
AN520-10R7	191 -55
AN520-10R8	5 - 4
AN520-10R8	6 -44
AN520-10R8	8 -40
AN520-10R8	16 -26A
AN520-10R8	17 - 3A
AN520-10R8	24 -44
AN520-10R8	52 - 5
AN520-10R8	67 -51
AN520-10R8	67 -58
AN520-10R8	74 - 1
AN520-10R8	74 - 2
AN520-10R8	75 - 1
AN520-10R8	75 - 2
AN520-10R8	76 - 1
AN520-10R8	90 -41
AN520-10R8	93 -30
AN520-10R8	93 -61
AN520-10R8	94 -29
AN520-10R8	94 -56
AN520-10R8	108 -39
AN520-10R8	161 -44
AN520-10R8	166 -77
AN520-10R8	168 -11
AN520-10R8	169 -51
AN520-10R8	170 -22
AN520-10R8	187 -26
AN520-10R8	190 -37
AN520-10R8	191 -26
AN520-10R8	197 -10
AN520-10R8	197 -14
AN520-10R8	203 -25
AN520-10R9	72 - 1
AN520-10R9	73 - 1
AN520-416R10	121 - 1
AN520-416R8	191 -25
AN520-416R8	203 -22
AN520-8R6	166 -74
AN520-8R6	191 -27

PART NUMBER	FIGURE AND INDEX NO.
AN520B10R14	101 -17
AN520B10R14	101 -18
AN520B10R14	102 -42
AN525-10RR	83 -23
AN525-10R10	49 -65
AN525-10R10	68 -67
AN525-10R12	68 -48
AN525-10R12	108 -56
AN525-10R14	108 -51
AN525-10R6	51 - 9
AN525-10R6	123 -53A
AN525-10R6	135 -19
AN525-10R6	137 -15
AN525-10R6	191 -51
AN525-10R8	49 - 18
AN525-10R8	51 -14
AN525-10R8	72 -32
AN525-10R8	73 -24
AN525-10R8	76 -22
AN525-10R8	170 -24
AN525-832P6	166 -27B
AN525-832P6	167 -27
AN525-832P6	168 -40
AN525-832R10	68 -72
AN525-832R20	108 -58
AN525-832R6	73 -30
AN525-832R6	75 -20
AN525-832R6	76 -25
AN525-832R6	78 - 8
AN525-832R6	135 -34
AN525-832R6	135 -40
AN525-832R6	135 -61
AN525-832R7	28 -19B
AN525-832R7	78 -19A
AN525-832R7	111 - 6
AN525-832R7	112 - 7
AN525-832R7	113 - 6
AN525-832R8	80 -12
AN525-832R8	81 -19
AN525-832R9	30 -19
AN535-00-2	130 -48
AN535-2-3	27 -13
AN545-6R8	172 -12
AN565B2H3	105 -90
AN565B2H3	106 -91B
AN565B428H3	159 -48
AN565D6-3	146 -15
AN565D8H3	159 -48
AN6-15A	67 - 5
AN6-15A	159 -37
AN6-22A	67 -29
AN6-23A	67 -29
AN6-23A	67 -29
AN6-23A	123 - 2
AN6-24A	67 -29
AN6-25A	122 - 1
AN6-27A	123 - 2
AN6-32A	122 - 2
AN6-35A	124 - 2
AN6-50A	124 - 3
AN6-6A	34 -51
AN6-6A	35 -51
AN6-6A	67 -52
AN6-6A	67 -60
AN6-6A	68 -53
AN6227-5	25 -12
AN6227-9	130 -44
AN6227B10	66 - 5
AN6227B11	163 -22
AN6227B18	65 - 9
AN6227B20	64 - 7
AN6227B22	66 - 4
AN6227B26	57 - 8
AN6227B26	58 - 6

PART NUMBER	FIGURE AND INDEX NO.
AN6227B32	57 -22
AN6227B32	58 -27
AN6227B5	57 -11
AN6227B5	58 - 7
AN6227B6	64 - 3
AN6227B6	64 - 8
AN6227B6	65 - 3
AN6227B6	65 - 7
AN6227B6	163 -25
AN6230B2	69 -13
AN6230B2	70 -21
AN6230B2	71 -30
AN6230B3	57 -14
AN6230B3	58 -19
AN6230B3	69 -14
AN6230B6	57 -23
AN6230B6	58 -28
AN665-21R	124 -54
AN680A08	111 - 8
AN7-24A	4 - 4
AN7-27A	125 - 2
AN7-32A	126 - 2
AN7-42A	123 -53
AN7-42A	191 -40
AN7-43A	123 - 8
AN7-44A	123 - 8A
AN73A4	167 -58
AN735-34	203 -16
AN735D20	122 -29
AN735D56	126 -22
AN737RM30	180 -37
AN737RM30	181 -33
AN737RM30	182 -51
AN737RM30	183 -60
AN737RM30	184 -72
AN737TW56	123 -49
AN737TW56	141 -18
AN737TW82	172 - 9
AN74A3	126 -26
AN741TD5	125 -56
AN741TD6	123 -37
AN742-12	123 -10B
AN742D10	122 -25
AN742D10	125 -14
AN742D10	125 -28
AN742D10	125 -30
AN742D10	140 -14
AN742D10	187 -31
AN742D12	123 -17
AN742D12	186 -12
AN742D16	125 -12
AN742D16	138 -26
AN742D16	139 -23
AN742D16	139 -23C
AN742D16	186 -13
AN742D2	125 -23
AN742D2	125 -28
AN742D2	151 -23
AN742D2	165 -40
AN742D2	166 -46
AN742D2	167 -43
AN742D2	168 -73
AN742D2	186 - 9
AN742D20	126 - 9
AN742D20	126 -11
AN742D28	187 -29
AN742D3	6 - 4
AN742D3	8 - 4
AN742D3	122 -24
AN742D3	122 -34
AN742D3	122 -41
AN742D3	123 -41
AN742D3	123 -74
AN742D3	124 -25

PART NUMBER	FIGURE AND INDEX NO.
AN742D3	124 -36
AN742D3	125 -45
AN742D3	125 -56
AN742D3	142 -25
AN742D3	166 -76
AN742D3	169 -19
AN742D3	169 -50
AN742D34	181 -24
AN742D34	183 -43
AN742D34	184 -56
AN742D36	180 -23
AN742D36	182 -35
AN74204	161 - 2
AN74204	161 - 5
AN74204	174 -15
AN742048	138 -39
AN742D5	161 -30
AN742D50	125 -28
AN742D50	125 -30
AN742D50	140 -14
AN742D50	140 -18
AN742D50	140 -27
AN742D6-27	53 -15
AN742D8	162 - 4
AN780-2	174 - 5
AN8-17A	21 - 3
AN8-23A	4 - 1
AN8-25A	21 - 2
AN815-3D	67 -36B
AN815-3D	143 -10
AN815-3D	144 - 3
AN815-3D	144 -13
AN815-4D	67 -36B
AN815-4D	142 -12
AN815-4D	161 - 3
AN815-6D	123 -23
AN815-6D	165 - 9
AN815-6D	165 -14
AN815-6D	166 - 9
AN815-6D	166 -17
AN815-6D	167 - 9
AN815-6D	167 -17
AN815-6D	168 -13
AN815-6D	168 -17
AN815-6D	168 -29
AN815-8D	167 -38A
AN816-2D	165 -41
AN816-2B	126 -14
AN816-2D	123 -68
AN816-2D	166 -47
AN816-2D	167 -46
AN816-2D	168 -56
AN816-2D	174 - 3
AN816-2D	186 - 3
AN816-2D	186 - 8
AN816-4D	70 -30
AN816-4D	174 -12
AN816-4D	178 -13
AN816-4D	179 - 7
AN816-4D	182 -16
AN816-4D	183 -18
AN816-4D	184 -23
AN816-4D	184 -27
AN816-4D	185 - 8
AN816-6-6	123 -21
AN816-6D	176 - 5
AN816-6D	179 - 8
AN816-6D	183 -19
AN816-6D	184 -24
AN816-7D	125 -15
AN816-7D	126 -11
AN821-2D	167 -61
AN821-2D	168 -74
AN821-8D	184 -26

PART NUMBER	FIGURE AND INDEX NO.
AN824-2D	173 - 5
AN824-6D	168 -24
AN824-6D	172 -23
AN832-2D	41 -42
AN832-2D	165 -43
AN832-2D	165 -45
AN832-2D	166 -51
AN832-2D	166 -53
AN832-2D	167 -49
AN832-2D	168 -71
AN832-2D	186 - 5
AN832-3D	143 - 3
AN832-3D	144 - 6
AN832-4D	142 -18
AN833-3D	143 -14
AN833-3D	144 -17
AN833-8D	166 -60
AN833-8D	167 -53
AN833-8D	168 -79
AN837-3D	143 - 7
AN837-3D	143 -13
AN837-3D	144 -10
AN837-3D	144 -16
AN837-4D	142 - 9
AN837-4D	142 -15
AN837-8D	165 -35
AN837-8D	166 -39
AN837-8D	168 -62
AN840-8D	180 -38
AN840-8D	181 -34
AN840-8D	182 -50
AN840-8D	183 -59
AN840-8D	184 -71
AN842-8	182 -42
AN842-8	183 -50
AN842-8	184 -62
AN844-4D	176 - 9
AN844-4D	180 -12
AN844-6	179 -29
AN844-6D	178 -26
AN844-8	177 -10
AN844-8	177 -14
AN844-8D	180 -29
AN894D8-6	184 -25
AN900-10	123 -73
AN900-10	125 -59
AN900-16	125 -60
AN901-5A	57 -13
AN901-5A	58 -18
AN902-4	146 -11
AN910-1D	161 -42
AN911-1D	161 -22
AN912-1D	176 - 8
AN912-1D	180 -13
AN912-1D	180 -40
AN912-1D	181 -36
AN912-2	123 -23
AN912-2	178 -24
AN912-2	179 -27
AN912-2D	123 -25
AN912-2D	152 -50
AN914-1D	172 -20
AN914-1D	181 -38
AN914-2D	125 -15
AN914-2D	126 -11
AN914-2D	182 -18A
AN914-2D	183 -17
AN914-3D	180 -28
AN916-1D	161 -21
AN916-716	142 -19A
AN921-3D	143 -21
AN921-3D	144 -24
AN921-4D	142 - 3
AN921-4D	142 - 8

PART NUMBER	FIGURE AND INDEX NO.
AN921-4D	146 -13
AN924-10D	185 -40
AN924-2D	41 -33
AN924-2D	41 -42
AN924-2D	123 -70
AN924-2D	125 -53
AN924-2D	165 -43
AN924-2D	165 -45
AN924-2D	165 -49
AN924-2D	166 -51
AN924-2D	166 -53
AN924-2D	167 -49
AN924-2D	168 -71
AN924-2D	174 - 2
AN924-2D	186 - 7
AN924-3D	41 -43
AN924-3D	123 -70
AN924-3D	143 - 4
AN924-3D	143 - 7
AN924-3D	143 -16
AN924-3D	143 -23
AN924-3D	144 - 7
AN924-3D	144 -10
AN924-3D	144 -19
AN924-3D	144 -26
AN924-4D	67 -21
AN924-4D	142 - 4
AN924-4D	142 -11
AN924-4D	142 -15
AN924-4D	142 -19
AN924-4D	146 -12
AN924-6D	16 -15
AN924-6D	17 -25
AN924-6D	182 -40
AN924-6D	183 -48
AN924-6D	184 -60
AN924-8D	165 -36
AN924-8D	166 -42
AN924-8D	166 -62
AN924-8D	167 -55
AN924-8D	168 -64
AN924-8D	168 -81
AN932-1	130 -42
AN932C2	174 -16
AN932D3	176 -10
AN932D3	180 -14
AN935-10	203 - 5
AN935-10L	130 -43
AN935-10L	187 -52
AN935-8L	130 -46
AN936-A6	100 -45
AN936-A8	67 -23
AN936A-10	203 -10
AN936A10	166 -66
AN936A10	167 -59
AN936A10	168 -85
AN936A10	169 -27
AN936A10	170 - 2
AN936A10	203 -18
AN936A10	203 -28
AN936A4	159 -43
AN936A4	204 - 2
AN936A4	204 -16
AN936A416	87 -27
AN936A416	88 -27
AN936A416	89 -25
AN936A416	134 - 3
AN936A416	134 -16
AN936A416	134 -22
AN936A416	134 -27
AN936A416	134 -35
AN936A416	134 -42
AN936A416	134 -50
AN936A416	135 - 3

PART NUMBER	FIGURE AND INDEX NO.
AN936A416	135 -17
AN936A416	135 -38
AN936A416	135 -46
AN936A416	135 -56
AN936A416	135 -63
AN936A416	203 - 4
AN936A6	99 -42
AN936A6	183 -16
AN936A6	184 -36
AN936A6B	99 -24
AN936A6B	99 -32
AN936A6B	99 -35
AN936A6B	100 -24
AN936A6B	100 -32
AN936A6B	100 -34
AN936A6B	100 -39
AN936A6B	101 -14
AN936A6B	101 -15
AN936A6B	101 -19
AN936A6B	101 -20
AN936A6B	101 -28
AN936A6B	102 -29
AN936A6B	102 -30
AN936A6B	102 -39
AN936A6B	103 -39
AN936A6B	103 -40
AN936A6B	104 -40
AN936A6B	104 -48
AN936A6B	104 -53
AN936A6B	105 -55
AN936A6B	106 -47
AN936A6B	106 -50
AN936A6B	152 - 1
AN936A6B	152 -24
AN936A6B	153 - 1
AN936A6B	153 -23
AN936A6B	186 - 1
AN936A6B	186 -10
AN936A616	87 -27
AN936A616	88 -28
AN936A616	89 -26
AN936A8	55 -38
AN936A8	67 -67
AN936A8	68 -26
AN936A8	76 -26
AN936A8	101 - 4
AN936A8	102 -14
AN936A8	103 -16
AN936A8	104 -28
AN936A8	105 -23
AN936A8	106 -22
AN936A8	107 - 9
AN936A8	138 -14
AN936A8	139 -14
AN936A8	141 -27
AN936A8	166 -27C
AN936A8	167 -28
AN936A8	168 -41
AN936A8	201 -18
AN936A8	204 -11
AN936A8	204 -27
AN936B6	73 -31A
AN936B6	75 -21A
AN936B6	76 -28
AN936B616	67 -53
AN936B616	67 -61
AN936B616	68 -54
AN936B8	78 - 9
AN944-101A	57 -26
AN944-101A	57 -38
AN944-101A	58 -31
AN944-101A	58 -43
AN960-D1216L	167 -54
AN960-D2L	123 -65A

PART NUMBER	FIGURE AND INDEX NO.
AN960-D2L	125 -47B
AN960-PD10L	166 -70
AN960-PD6L	166 -75
AN960-10	19 -15
AN960-10	20 -10
AN960-10	33 -31D
AN960-10	34 - 3
AN960-10	34 - 7
AN960-10	34 -43
AN960-10	35 - 3
AN960-10	35 - 7
AN960-10	35 -45
AN960-10	44 - 5
AN960-10	44 - 9
AN960-10	45 - 6
AN960-10	49 - 1B
AN960-10	55 -34A
AN960-10	55 -34B
AN960-10	55 -34C
AN960-10	56 - 5
AN960-10	67 -65
AN960-10	68 -46
AN960-10	68 -64
AN960-10	90 -44
AN960-10	93 -38
AN960-10	93 -69
AN960-10	94 -62
AN960-10	108 -57
AN960-10	122 -17
AN960-10	122 -33
AN960-10	122 -38
AN960-10	123 -10B
AN960-10	123 -19
AN960-10	123 -32
AN960-10	123 -33
AN960-10	123 -43
AN960-10	123 -44
AN960-10	123 -57
AN960-10	123 -77
AN960-10	124 -30
AN960-10	125 -42
AN960-10	132 -12
AN960-10	145 -20
AN960-10	146 - 5
AN960-10	148 -16
AN960-10	151 -19
AN960-10	158 -41
AN960-10	159 - 8
AN960-10	159 -14
AN960-10	159 -25
AN960-10	159 -51
AN960-10	166 -32
AN960-10	167 -34
AN960-10	168 -11
AN960-10	168 -46
AN960-10	169 -24
AN960-10	190 -21
AN960-10	196 -10
AN960-10L	26 - 7
AN960-10L	45 -10
AN960-10L	52 - 5
AN960-10L	55 - 5
AN960-10L	57 -36
AN960-10L	58 -41
AN960-10L	87 - 8
AN960-10L	87 -34
AN960-10L	88 - 8
AN960-10L	88 -35
AN960-10L	89 - 8
AN960-10L	89 -33
AN960-10L	90 - 8
AN960-10L	90 -42
AN960-10L	90 -72
AN960-10L	91 - 6

PART NUMBER	FIGURE AND INDEX NO.
AN960-10L	91 -13
AN960-10L	91 -21
AN960-10L	91 -21D
AN960-10L	92 -19
AN960-10L	93 - 3
AN960-10L	93 - 5
AN960-10L	93 -31
AN960-10L	93 -62
AN960-10L	93 -75
AN960-10L	93 -88
AN960-10L	94 - 3
AN960-10L	94 - 5
AN960-10L	94 -30
AN960-10L	94 -50
AN960-10L	94 -57
AN960-10L	94 -75
AN960-10L	94 -79
AN960-10L	95 -14
AN960-10L	95 -27
AN960-10L	108 -53
AN960-10L	123 -78
AN960-10L	124 -51
AN960-10L	124 -57
AN960-10L	125 -44
AN960-10L	129 - 2
AN960-10L	129 - 6
AN960-10L	129 -17
AN960-10L	130 -34
AN960-10L	137 -15
AN960-10L	138 -36
AN960-10L	139 -30
AN960-10L	139 -43
AN960-10L	140 -31
AN960-10L	141 -11
AN960-10L	144 -45D
AN960-10L	149 -62
AN960-10L	150 -47
AN960-10L	157 -18
AN960-10L	159 -31
AN960-10L	159 -50
AN960-10L	190 - 4
AN960-10L	190 -36
AN960-10L	190 -37
AN960-10L	191 - 4
AN960-10L	191 -21
AN960-10L	191 -58
AN960-10L	192 -17
AN960-2	135 -24
AN960-2	169 -26
AN960-4	11 - 9
AN960-4	78 - 4
AN960-4	78 -15
AN960-4	143 -53
AN960-4	144 -58
AN960-4	158 -57
AN960-4L	54 - 4
AN960-4L	96 -23
AN960-416	19 - 6
AN960-416	19 -11
AN960-416	23 - 3
AN960-416	24 - 3
AN960-416	26 - 3
AN960-416	26 -13
AN960-416	59 - 4
AN960-416	60 -10
AN960-416	62 -11
AN960-416	69 - 5
AN960-416	70 -13
AN960-416	90 -62
AN960-416	95 - 2
AN960-416	95 -12
AN960-416	96 - 2
AN960-416	97 -16
AN960-416	98 - 2

PART NUMBER	FIGURE AND INDEX NO.
AN960-416	98 - 8
AN960-416	98 -19
AN960-416	108 -41
AN960-416	122 -23
AN960-416	123 -10C
AN960-416	123 -37
AN960-416	123 -41
AN960-416	123 -59
AN960-416	125 -56
AN960-416	134 - 4
AN960-416	134 -17
AN960-416	134 -22
AN960-416	134 -28
AN960-416	134 -36
AN960-416	134 -43
AN960-416	134 -51
AN960-416	135 - 4
AN960-416	135 -18
AN960-416	135 -39
AN960-416	135 -47
AN960-416	135 -57
AN960-416	135 -64
AN960-416	147 - 6
AN960-416	148 - 5
AN960-416	149 -15
AN960-416	149 -51
AN960-416	149 -56
AN960-416	150 -35
AN960-416	150 -40
AN960-416	154 - 6
AN960-416	154 -20
AN960-416	155 - 5
AN960-416	155 -24
AN960-416	158 -31
AN960-416	169 -46
AN960-416	170 -26
AN960-416	187 -25
AN960-416	189 -14
AN960-416L	55 -36C
AN960-416L	57 -32
AN960-416L	57 -44
AN960-416L	58 -37
AN960-416L	58 -49
AN960-416L	61 -12
AN960-416L	70 -23
AN960-416L	70 -26
AN960-416L	71 -16
AN960-416L	71 -20
AN960-416L	71 -25
AN960-416L	93 -13
AN960-416L	94 -12
AN960-416L	110 - 6
AN960-416L	121 -45
AN960-416L	123 -45
AN960-416L	124 -34
AN960-416L	129 -26
AN960-416L	147 - 3
AN960-416L	148 - 4
AN960-416L	149 -26
AN960-416L	150 -10
AN960-416L	156 -14
AN960-416L	160 -16
AN960-416L	169 - 2
AN960-416L	170 -27
AN960-416L	190 -41
AN960-416L	191 -62
AN960-516	12 - 9
AN960-516	13 - 9
AN960-516	21 -12
AN960-516	22 - 2
AN960-516	41 -42
AN960-516	55 - 4
AN960-516	56 - 4
AN960-516	63 - 4

PART NUMBER	FIGURE AND INDEX NO.
AN960-516	70 -13
AN960-516	129 - 3
AN960-516	129 -41
AN960-516	155 -28
AN960-516	165 -43
AN960-516	165 -45
AN960-516	166 -51
AN960-516	166 -53
AN960-516	167 -49
AN960-516	168 -71
AN960-516	186 - 6
AN960-516	203 - 3
AN960-516L	22 - 3
AN960-516L	55 -26A
AN960-516L	55 -30
AN960-516L	56 -18
AN960-516L	58 - 9
AN960-516L	58 -14
AN960-516L	67 -27A
AN960-516L	68 -19
AN960-6	103 -76
AN960-6	104 -51
AN960-6	105 -63
AN960-6	106 -63
AN960-6	165 -29
AN960-6	202 -14
AN960-6L	193 -10
AN960-616	68 -56
AN960-616	68 -71
AN960-616	108 - 3F
AN960-616	122 - 5
AN960-616	123 - 4
AN960-616	124 - 4
AN960-616	152 - 6
AN960-616	152 -29
AN960-616	153 - 6
AN960-616	153 -28
AN960-616	159 -38
AN960-616L	67 -31
AN960-616L	67 -53
AN960-616L	67 -62
AN960-616L	68 -55
AN960-616L	90 -55
AN960-716	4 - 6
AN960-716	68 -14
AN960-716	125 - 2
AN960-716	142 -10
AN960-716	142 -15
AN960-716	143 - 5
AN960-716	143 - 7
AN960-716	143 -15
AN960-716	144 - 8
AN960-716	144 -10
AN960-716	144 -18
AN960-716L	123 - 9
AN960-716L	161 -33
AN960-716L	172 -33
AN960-8	29 -24
AN960-8	30 -28
AN960-8	30 -33
AN960-8	93 -84
AN960-8	94 -86
AN960-8	139 -28
AN960-8	190 -33
AN960-8	191 -31
AN960-8L	30 -19
AN960-8L	114 - 8
AN960-8L	196 - 9
AN960-8L	204 -12
AN960-8L	204 -25
AN960-816	4 - 3
AN960-816	21 - 6
AN960-816	21 - 7
AN960-816	105 -68

PART NUMBER	FIGURE AND INDEX NO.
AN960-816	147 -12
AN960-816L	111 - 3
AN960-816L	112 - 3
AN960-816L	148 -13
AN960-816L	148 -29
AN960A816L	147 -13
AN960BD10L	181 -24
AN960C-416L	126 - 6
AN960C416L	87 -43
AN960C416L	124 -23
AN960C416L	171 - 9
AN960D10	122 -10
AN960D10	124 -44
AN960D10	161 -45
AN960D10L	16 -17
AN960D10L	110 - 2
AN960D10L	110 - 4
AN960D10L	182 -35
AN960D10L	183 -43
AN960D10L	184 -56
AN960D1216	165 -37
AN960D1216L	166 -40
AN960D1216L	166 -41
AN960D1216L	166 -61
AN960D1216L	168 -63
AN960D1216L	168 -80
AN960D16	183 -47
AN960D4L	24 -30
AN960D416L	148 -42C
AN960D516	165 -49
AN960D516	174 - 2
AN960D6	172 - 6
AN960D6L	105 -59
AN960D6L	105 -98B
AN960D6L	106 -57
AN960D6L	106 -92B
AN960D616	41 -43
AN960D616	67 - 7
AN960D616	90 -78
AN960D716	67 -10
AN960D8L	105 -75
AN960D8L	105 -98A
AN960D8L	106 -92
AN960D8L	106 -92A
AN960D8L	195 -10
AN960D916	182 -39
AN960D916	184 -59
AN960PD10	178 -18
AN960PD10	179 -15
AN960PD10	182 -29
AN960PD10	183 -37
AN960PD10	184 -40
AN960PD10	185 -24
AN960PD10L	180 -23
AN960PD10L	185 -33
AN960PD1416L	185 -41
AN960PD416	148 -42E
AN960PD6L	148 -34
AN960PD6L	148 -39
AN970-3	87 -60
AN970-3	110 - 3
AN970-3	122 - 9
AN970-3	123 -43
AN970-3	124 -44
AN970-3	133 -46
AN970-3	136 -27
AN970-3	166 -67
AN970-3	167 -60
AN970-3	168 -86
AN970-3	172 -14
AN970-3	202 -20
AN970-4	190 -11
AN970-4	191 - 2
AN970-4	192 -16

PART NUMBER	FIGURE AND INDEX NO.
AN970-5	108 - 8
AN970-5	108 -24
AN970-5	151 -12
AN970-5	187 -16
A1257A	4 -26
A1257A	4 -34
A1274-8Z-3	5 -11
A1280-2	4 -27
A1280-2	4 -35
A1280-3	4 -27
A1280-3	4 -35
A1562	114 - 3
A1635-73	71 -15A
A1636-23	61 - 3
A1636-24	71 -13
A1638-1	71 -168
A1638-11	113 - 3
A1638-2	114 - 5
A1638-29	61 -12
A1638-30	71 -16A
A1639-2	114 - 4
A1663-022-1	73 -21
A1663-022-1	75 -19
A1663-022-1	76 -19
A1663-028-1	72 -28
A1663-028-1	73 -21
A1663-028-1	74 -23
A1788-8Z-1	115 -11
A1788-8Z-1	116 -11
A1788-8Z-3	121 -15
A1793-6Z-3	138 -19
A2108A	23 -21
A2109-3	23 -22
A2371	111 - 4
A2371	112 - 5
A2513-16	111 - 2
A2513-16	112 - 2
A2513-38	113 - 2
A2513-66	61 -11
A2947-2	114 - 2
A30010	71 - 8
A30011	71 -11
A30013	71 -12
A30014	71 -10
A30015	71 - 9
A30021	71 -29
A30023	71 -19
A30030	71 -31
A30040	71 -33
A30047	61 - 5
A30048	61 - 4
A30078-1	61 -10
A30078-2	61 - 6
A30079-1	71 - 4
A30079-2	71 - 7
A30085	71 -32
A30087	71 -23
A30087	71 -27
A3047A6-92	168 -16
A3047A6-92	168 -20
A39070	62 - 4
A39070	63 -10
A39070	70 -10
A4513-1	23 -20
A6-75	78 -25
A6191-8Z-1	115 -12
A6191-8Z-1	116 -12
A6204-8Z3	11 -12
A7512-12	4 -25
A7512-12	4 -33
A880-6Z3	103 -48
A9028-4Z-3	82 -25
B1316	130 -11
B30007	71 -14

PART NUMBER	FIGURE AND INDEX NO.
B30024	71 -26
B30026	71 -23
B30026	71 -27
B30027	71 -22
B3005A1	180 -19
B3005A1	181 -21
B30076	71 - 5
B30077	61 - 8
B30089	71 -28
B30195	71 -14
B4416D	57 -26
B4416D	58 -31
B610	19 - 8
B610	20 - 6
B610	147 -19
B610	148 - 7
B610	159 -21
B610	159 -36
B610-OH	19 - 8
B610-P	19 - 8
B610-P	147 -19
B610-OH	147 -19
CA-2	99 -43
CA-2	100 -46
CA-2	102 -66A
CM2629N1	101 -16
CM2692-20-1S	20 -37
CM2692-28-1S	7 -37
CM2692-28-1S	9 -39
CM2692-28-1S	14 -11
CM2692-28-1S	15 -12
CR163-4-4	72 -40
CR163-4-4	73 -35
CR163-4-8	19 -28
CR763-4-2	192 - 4
CR763-4-4	76 -35
C1-C2	1 - 1
C109	55 -12
C109	56 -12
C156001-0104	5 - 6
C156001-0104	16 - 8A
C156001-0104	17 -16B
C161001-0304	113 - 1
C161001-0305	113 - 1
C161001-0306	113 - 1
C161001-0307	113 - 1
C161001-0308	113 - 1
C161001-0309	113 - 1
C163001-0103	70 -
C163001-0104	70 -
C163002-0101	71 - 2
C163002-0201	61 - 2
C163003-0101	71 - 2
C163003-0201	61 - 2
C163030-0103	70 -14
C163030-0105	70 -14
C163030-0107	70 -14
C163030-0111	70 -14
C163032-0105	71 -17
C165001-0102	182 -34
C165001-0102	183 -42
C165001-0102	184 -55
C17312-3	201 - 4
C17313	201 - 7
C17325	201 - 2
C17326	201 - 5
C17330	201 - 3
C17331-3	201 - 6
C17331-6	201 - 6
C253001-0101	72 -34
C253001-0101	73 -26
C253001-0101	80 - 8
C253001-0101	81 - 8
C262001-0101	70 -31

PART NUMBER	FIGURE AND INDEX NO.
C262001-0102	60 -12
C262001-0201	70 -31
C262001-0202	60 -12
C262003-0101	62 -13
C262003-0101	63 -12
C262003-0101	69 -24
C262003-0101	70 -31
C262003-0101	71 - 1
C262003-0102	59 - 8
C262003-0102	60 -12
C262003-0102	61 - 1
C262004-0101	61 - 1
C262004-0102	71 - 1
C262023-0101	59 - 9
C262023-0101	60 -13
C262023-0101	61 - 2
C262023-0102	62 -13
C262023-0102	63 -13
C262023-0102	69 -25
C262023-0102	70 -32
C262023-0102	71 - 2
C291502-0101	104 -60
C291502-0101	166 -54
C291502-0102	103 -59
C291502-0102	104 -60
C291502-0103	104 -60
C291502-0103	105 -92
C291502-0103	106 -76
C291502-0103	166 -54
C292501-0102	99 - 8
C292501-0102	100 - 7
C292501-0102	102 -47
C292501-0102	103 -72
C292501-0102	104 -61
C292501-0104	105 -87
C292501-0104	106 -90D
C292501-0203	99 - 7
C292501-0203	102 -47
C292501-0203	103 -72
C294501-0101	178 -15
C294501-0101	179 -12
C294501-0101	182 -26
C294501-0101	183 -34
C294501-0101	184 -38
C294501-0101	185 -22
C294501-0102	178 -19
C294501-0102	179 -16
C294501-0102	182 -30
C294501-0102	183 -38
C294501-0102	184 -42
C294501-0102	185 -26
C294501-0103	178 -20
C294501-0103	179 -17
C294501-0103	182 -31
C294501-0103	183 -39
C294501-0103	184 -43
C294501-0103	185 -27
C294502-0101	185 -29
C294505-0101	163 -13
C294505-0101	164 -
C294505-0101	187 -41
C294505-0102	164 - 1
C294505-0102	163 -14
C294510-0301	116 -29
C294510-0301	117 -27
C294510-0301	118 -43
C294510-0301	119 -35
C294510-0301	120 -40
C294510-0301	123 -66
C294510-0301	125 -48
C294510-0301	127 - 6
C299501-0101	123 - 7
C299505-0102	104 -68
C299505-0102	105 -73

PART NUMBER	FIGURE AND INDEX NO.
C299505-0102	106 -74
C299505-0203	104 -68
C299505-0203	105 -73
C30019	71 -17
C30041	71 -18
C30057	61 - 9
C301001-0211	159 -43
C301002-0103	159 -40
C301002-0301	159 -36
C301002-0308	159 -42
C30163	71 - 6B
C30163-1	71 - 6A
C30172	61 - 7B
C30172-1	61 - 7A
C4189	156 -10
C4189	156 -11
C4189	156 -28
C4189	156 -30
C421001-0101	108 -37
C421001-0102	108 -38
C431001-0101	180 -20
C431001-0101	181 -22
C431001-0101	182 -33
C431001-0101	183 -41
C431001-0101	184 -49
C431002-0101	128 -12
C431002-0102	184 -48
C431002-0102	185 -44
C431003-0101	184 -48
C431003-0101	185 -44
C431003-0301	185 -44
C482001-0101	177 -11
C482001-0101	178 -25
C482001-0101	179 -28
C482001-0101	182 -36
C482001-0101	183 -44
C482001-0101	184 -46
C482001-0201	184 -45
C482001-0301	185 -38
C482001-0401	185 -39
C590501-0101	159 -27
C593001-0101	191 -63
C594501-0201	201 -16
C594501-0203	201 -16
C594502-0101	201 -16A
C6AB-10A730A	191 -25
C611001-0101	127 -11
C611001-0101	128 - 7
C611001-0102	191 -25
C611001-0201	203 -21
C611501-0101	128 - 5
C611501-0101	191 -39
C611501-0102	191 -39
C611501-0202	127 - 9
C611501-0202	203 - 1
C611501-0204	203 - 1
C621001-0106	201 -
C622001-0102	23 -18
C622001-0104	23 -21
C622001-0201	4 -41
C622001-0202	4 -31
C622001-0401	23 -18
C622003-0101	4 -44
C622003-0103	3 - 6A
C622003-0103	105 -98
C622003-0104	4 -45
C622003-0105	3 - 6A
C622003-0105	105 -98
C622003-0105	106 -93
C622004-0103	191 -50
C622006-0102	4 -44
C622006-0103	4 -45
C622006-0105	4 -45A
C622007-0101	191 -54

PART NUMBER	FIGURE AND INDEX NO.
C660501-0101	108 -65
C660501-0201	108 -27
C661001-0101	102 -41
C661001-0201	102 -41
C661001-0201	103 -50
C661001-0201	178 - 2
C661001-0201	179 - 2
C661001-0201	182 - 3
C661001-0201	183 - 2
C661001-0501	104 -42
C661001-0501	184 - 1
C661001-0501	185 - 1
C661001-0502	104 -42
C661001-0502	105 -47
C661001-0502	184 - 1
C661001-0502	185 - 1
C661001-0503	104 -42
C661001-0503	105 -47
C661001-0503	184 - 1
C661001-0503	185 - 1
C661001-0504	104 -42
C661001-0504	105 -47
C661001-0504	184 - 1
C661001-0504	185 - 1
C661001-0505	105 -47
C661001-0505	184 - 1
C661001-0505	185 - 1
C661002-0101	102 -42
C661002-0201	102 -42
C661002-0201	103 -51
C661002-0201	178 - 1
C661002-0201	179 - 1
C661002-0201	182 - 1
C661002-0201	183 - 1
C661002-0301	104 -43
C661002-0301	105 -48
C661002-0301	184 - 3
C661002-0301	185 - 3
C661002-0501	104 -43
C661002-0501	184 - 3
C661002-0501	185 - 3
C661002-0503	104 -43
C661002-0503	184 - 3
C661002-0503	185 - 3
C661002-0504	104 -43
C661002-0504	105 -48
C661002-0504	184 - 3
C661002-0504	185 - 3
C661002-0505	105 -48
C661002-0505	184 - 3
C661002-0505	185 - 3
C661002-0506	105 -48
C661002-0506	184 - 3
C661002-0506	185 - 3
C661003-0201	103 -45
C661003-0501	104 -40
C661003-0501	105 -40
C661003-0504	105 -40
C661003-0504	106 -37
C661003-0601	153 -23
C661010-0102	102 -27A
C661010-0102	103 -34
C661010-0102	104 -35
C661010-0102	105 -42
C661011-0105	101 -15
C661011-0105	102 -28
C661011-0105	103 -32
C661011-0105	104 -45
C661011-0105	105 -50
C661011-0106	101 -15
C661011-0106	102 -28
C661011-0106	103 -32
C661011-0106	104 -45
C661011-0106	105 -50

PART NUMBER	FIGURE AND INDEX NO.
C661011-0202	101 -15
C661012-0101	103 -32
C661012-0101	104 -45
C661012-0101	105 -50
C661012-0101	106 -47
C661025-0102	106 -47
C661060-0103	105 -41
C661060-0109	105 -41
C661060-0109	106 -38
C661061-0103	105 -42
C661061-0106	105 -42
C661061-0106	106 -39
C661071-0101	105 -50
C661071-0101	106 -47
C661071-0102	105 -50
C661071-0102	106 -47
C661075-0101	106 -45
C661075-0101	105 -48
C661075-0101	185 - 3
C661075-0102	106 -45
C661075-0102	105 -48
C661075-0103	106 -45
C661075-0103	105 -48
C661075-0103	185 - 3
C661075-0104	106 -45
C661075-0104	105 -48
C661075-0104	185 - 3
C661075-0105	106 -45
C661075-0105	105 -48
C661075-0106	185 - 3
C661075-0106	185 - 3
C661076-0101	106 -44
C661076-0101	105 -47
C661076-0101	185 - 1
C661076-0102	106 -44
C661076-0102	105 -47
C661076-0102	185 - 1
C661076-0103	106 -44
C661076-0103	105 -47
C661076-0103	185 - 1
C661076-0104	106 -44
C661076-0104	105 -47
C661076-0105	185 - 1
C661076-0105	185 - 1
C661080-0101	105 -52
C661080-0101	106 -49
C664501-0101	103 -76
C664501-0101	104 -51
C664501-0101	105 -63
C664501-0103	105 -63
C664501-0103	106 -63
C664508-0101	105 -39
C664508-0101	106 -36
C668001-0103	103 -70
C668001-0103	104 -57
C668001-0103	105 -64
C668001-0103	102 -69
C668001-0105	105 -64
C668001-0105	106 -64
C668020-0102	105 -55
C668020-0102	106 -50
C668507-0101	108 -26A
C668509-0101	105 -51
C668509-0101	106 -48
C668509-0101	184 -37
C668509-0101	185 -21A
C668540-0101	99 -35
C668540-0101	100 -34
C668540-0101	102 -40
C668540-0101	103 -49
C668540-0101	104 -50
C668540-0101	180 -10
C668540-0101	181 - 9
C668540-0101	183 -14

PART NUMBER	FIGURE AND INDEX NO.
C668540-0101	184 -35
C669504-0103	105 -56
C669504-0103	106 -52
C669504-0105	105 -56
C669505-0101	105 -57
C669505-0101	106 -55
C669505-0104	105 -57
C669507-0101	104 -53
C669507-0102	104 -53
C733001-0101	108 -70
C733001-0103	108 -73
C9876-8-1	16 -21
C9876-8-1	16 -30
C9876-8-1	17 -14
D30058	61 - 7
D30062	71 - 6
D30065	71 - 3
D30256	71 - 3
EC1239A-8	1 -10
EC2216B/A	1 -14B
EC776	1 -12
EC880	1 - 2
EQ5820	127 -10
EQ5820	203 - 3A
FC6446	70 -27
FDC2475-50	109 - 2
FH428	59 - 5
FH428	69 - 6
F620	147 -18
GB59	130 - 7
G0300E	126 - 1
G441226	103 -41
G442754P	103 -42
G444541	103 -43
HE22-4-1	83 -25
HE22-4-1-1	83 -25
H322-4-1	82 -27
H322-4-1	84 -17
H322-4-1-1	82 -27
H323-3-1-1	84 -17A
H323-3-1-1	85 -20
H323-3-1-1	85 -25
H323-4-1-1	84 -17
H559-3-1	84 -17A
H559-3-1	85 -20
H559-3-1	85 -25
IDI-757	202 -25
IK-2-4	176 - 8
IK-2-4	181 -11
IKI-4-8	180 - 9
IKI-6-8	180 -27
IK1-4-6	181 - 5
IK1-4-8	180 - 6
IK10-4-8	180 - 5
IK66-1	185 -46
IK9-6	180 -18
KM610-.051	118 -37
KM610-.051	119 -29
KM610-064	120 -36
KM610-64	55 -35E
KM610-64	68 -59
K375-125	204 - 5
K375-125	204 -19
LM67010XL	59 - 6
LM67048XL	59 - 7
LN1032X	191 - 8
LOCTITE 5381	1 -14A
LOCTITE 8721	1 -14C
LP4-17AM	70 -22
LW10729	191 -43
L4858	106 -66
L4858-1	99 -14
L4858-1	100 -14
L4858-1	102 -52

PART NUMBER	FIGURE AND INDEX NO.
L4858-1	103 -63
L4858-1	104 -73
L4858-1	105 -65
MS100009	127 -14
MS100009	130 -50
MS124663	163 -30
MS15002-3	57 -46
MS15002-3	58 -51
MS15584-2	193 -14
MS15584-2	194 -13
MS15584-2	195 -18
MS15584-2	199 - 6
MS1628-112	66 - 58
MS16624-1025	170 -14
MS16624-1081	25 - 5
MS16624-1262	68 - 2
MS16624-1275	57 -47
MS16624-1275	58 -52
MS16624-25	169 -39
MS16624-43	158 -51
MS16625-118	65 - 2
MS16625-131	64 - 2
MS16625-143	66 - 2
MS16625-212	69 -19
MS20002C5	67 -32
MS20002C5	67 -45
MS20002C6	67 -32
MS20002C6	163 -27
MS20074-03-04	166 -65
MS20074-03-04	168 -84
MS20074-04-21	123 -45
MS20193-10	183 -21
MS20200KP4	147 -20
MS20220-1	155 -26
MS20230A2	10 - 4
MS20230A2	10 - 6
MS20230A2	10 - 7
MS20230A2	10 - 9
MS20230A2	10 -18
MS20230A2	10 -19
MS20230A2	10 -20
MS20230A2	10 -21
MS20230A2	10 -22
MS20230A2	10 -27
MS20230A2	10 -28
MS20253-2	77 -10
MS20253-2	107 -12
MS20253-2	107 -20
MS20253-2	192 - 6
MS20253-5	77 - 7
MS20253-5	126 - 2
MS20253P1	107 -35
MS20364-1032C	144 -31
MS20364-720C	68 -15
MS20365-1018C	68 - 5
MS20365-1032	203 - 5
MS20365-1032	203 - 9
MS20365-1032C	123 -10B
MS20365-1032C	123 -19
MS20365-1032C	184 -41
MS20365-1032C	185 -25
MS20365-428A	61 -13
MS20365-624C	122 - 3
MS20365-624C	123 - 5
MS20365-720C	4 - 5
MS20365-720C	67 - 9
MS20365-720C	123 -10
MS20365-720C	125 - 2
MS20365-720C	191 -40
MS20365-820C	4 - 2
MS20365-820C	21 - 5
MS20365-820C	111 - 3
MS20365-820C	112 - 4
MS20365B632C	99 -45
MS20365B632C	100 -48
MS20365B632C	101 -14
MS20365B832C	108 -34
MS20365D420C	129 -22
MS20392-1C11	94 -69
MS20392-1C11	159 - 3
MS20392-1C13	78 -13
MS20392-1C15	87 -41
MS20392-1C15	92 -12
MS20392-1C15	93 -78
MS20392-1C21	88 -40
MS20392-1C21	94 -66
MS20392-1C23	89 -38
MS20392-1C49	80 - 3
MS20392-1C49	81 - 3
MS20392-1C53	77 -13
MS20392-1C57	149 -23
MS20392-1C67	78 - 2
MS20392-1C7	72 -37A
MS20392-1C7	96 -22
MS20392-1C9	78 -12
MS20392-1C9	88 -47
MS20392-1C9	89 -47
MS20392-1C9	91 -23
MS20392-2C11	93 - 4
MS20392-2C11	94 - 4
MS20392-2C13	124 -58
MS20392-2C13	159 -30
MS20392-2C15	145 -12
MS20392-2C15	145 -35
MS20392-2C17	90 -15
MS20392-2C17	90 -39
MS20392-2C17	91 -14
MS20392-2C17	92 - 2
MS20392-2C17	94 -50
MS20392-2C21	92 - 9
MS20392-2C27	90 -45
MS20392-2C37	93 -37
MS20392-2C37	93 -56
MS20392-2C37	93 -68
MS20392-2C37	94 -61
MS20392-2C41	88 -38
MS20392-2C43	89 -36
MS20392-2C45	93 -74
MS20392-2C47	87 -38
MS20392-2C55	94 -74
MS20392-2C71	95 -18
MS20392-2C83	93 -74
MS20392-2C9	159 -33
MS20392-3C17	93 -15
MS20392-3C17	94 -14
MS20392-3C25	93 -12
MS20392-3C27	74 -23
MS20392-3C49	93 -12
MS20392-3C49	94 -11
MS20392-4C13	142 -50
MS20392-4C13	143 -41
MS20392-4C13	144 -46
MS20392-5C65	92 -26
MS20426AD10	21 -11
MS20435-4	55 -11
MS20435M4-14	56 -11
MS20470AD10-31	21 - 9
MS20470AD10-31	21 -11
MS20822-8D	165 -53
MS20822-2D	125 -52
MS20822-3D	68 -31
MS20822-4-4D	176 - 8
MS20822-4-4D	178 -12
MS20822-4-4D	180 -13
MS20822-4-4D	182 -12
MS20822-4D	172 -25
MS20822-4D	172 -27
MS20822-6-6	123 -21
MS20822-6-6B	182 -41
MS20822-6-6B	183 -49
MS20822-6-6B	184 -61
MS20822-6-6D	183 -45
MS20822-6-6D	184 -57
MS20822-6D	176 -12
MS20822-6D	182 -37
MS20822-6D	184 -28
MS20822-6D	185 - 6
MS20822-6D	185 - 9
MS20822-8D	152 -51
MS20822-8D	166 -49
MS20822-8D	167 -45
MS20822-8D	168 -57
MS20822-8D	168 -67
MS20822-8D	184 -50
MS20822-8D	187 -29
MS20822-8D	187 -31
MS20822-8D	187 -33
MS20823-2B	123 -17
MS20823-2B	125 -23
MS20823-2D	174 - 2
MS20823-3D	67 -20
MS20823-4D	67 -20
MS20823-4D	70 -30
MS20823-4D	172 -24
MS20823-4D	172 -31
MS20823-4D	176 - 9
MS20823-4D	180 -12
MS20823-6B	123 -23
MS20823-6D	178 - 6
MS20823-6D	178 -23
MS20823-6D	179 -26
MS20823-6D	182 -11
MS20823-6D	183 -20
MS20823-8D	165 -38
MS20823-8D	166 -44
MS20823-8D	166 -63
MS20823-8D	166 -68
MS20823-8D	167 -44
MS20823-8D	167 -56
MS20823-8D	168 -54
MS20823-8D	168 -66
MS20823-8D	168 -82
MS20823-8D	187 -31A
MS20823-8D	187 -34
MS20825-4D	172 -29
MS20825-6	123 -23
MS20825-6D	182 -13
MS20825-6D	185 - 7
MS20826-6D	176 - 4
MS20826-6D	178 - 7
MS20826-6D	179 -10
MS20826-6D	182 -18
MS20826-6D	183 -11
MS20826-6D	183 -12
MS20826-6D	184 - 9
MS20826-6D	184 -10
MS20913-1D	179 - 9
MS20913-1D	184 -47
MS20913-1D	185 -10
MS20913-1D	171 -14
MS20913-2	181 -12
MS20913-2D	177 -23
MS20913-2D	178 - 3
MS20913-2D	181 -17
MS20913-2D	182 -15
MS20913-2D	184 -47
MS20913-2D	185 -10
MS20913-2D	181 -16
MS21042L2	125 -56
MS21042L4	19 - 4
MS21042L4	19 -12
MS21042L4	20 - 3

PART NUMBER	FIGURE AND INDEX NO.
MS21042L4	23 - 4
MS21042L4	26 - 4
MS21042L4	26 -14
MS21042L4	31 -23
MS21042L4	32 -27
MS21042L4	33 -27
MS21042L4	57 -10
MS21042L4	58 - 5
MS21042L4	58 -10
MS21042L4	58 -15
MS21042L4	60 -11
MS21042L4	61 -13
MS21042L4	62 -12
MS21042L4	70 -25
MS21042L4	71 -17
MS21042L4	71 -21
MS21042L4	87 -55
MS21042L4	88 -59
MS21042L4	89 -54
MS21042L4	90 -37
MS21042L4	92 -33
MS21042L4	95 -23
MS21042L4	96 -20
MS21042L4	97 - 4
MS21042L4	97 -16
MS21042L4	98 - 3
MS21042L4	98 - 9
MS21042L4	98 -18
MS21042L4	108 -40
MS21042L4	108 -41
MS21042L4	110 - 6
MS21042L4	122 -22
MS21042L4	123 -10C
MS21042L4	123 -37
MS21042L4	123 -41
MS21042L4	124 -21
MS21042L4	124 -33
MS21042L4	125 - 6
MS21042L4	126 - 6
MS21042L4	129 -27
MS21042L4	131 -19
MS21042L4	147 - 4
MS21042L4	148 - 3
MS21042L4	148 -11
MS21042L4	148 -42E
MS21042L4	149 - 5
MS21042L4	149 -13
MS21042L4	149 -18
MS21042L4	149 -25
MS21042L4	149 -30
MS21042L4	149 -34
MS21042L4	149 -38
MS21042L4	149 -43
MS21042L4	149 -55
MS21042L4	150 - 4
MS21042L4	150 - 9
MS21042L4	150 -14
MS21042L4	150 -18
MS21042L4	150 -22
MS21042L4	150 -27
MS21042L4	150 -39
MS21042L4	154 - 3
MS21042L4	154 - 7
MS21042L4	154 -21
MS21042L4	154 -24
MS21042L4	154 -28
MS21042L4	155 - 2
MS21042L4	155 - 6
MS21042L4	155 -20
MS21042L4	155 -25
MS21042L4	158 -53
MS21042L4	158 -69
MS21042L4	159 -21
MS21042L4	159 -36

PART NUMBER	FIGURE AND INDEX NO.
MS21042L4	159 -47
MS21042L4	160 -17
MS21042L4	160 -21
MS21042L4	169 - 3
MS21042L4	169 -47
MS21042L4	170 -28
MS21042L4	189 -16
MS21042L4	189 -20
MS21042L4	190 -11
MS21042L4	190 -21
MS21042L4	190 -40
MS21042L4	191 -21
MS21042L4	191 -61
MS21042L4	203 - 4
MS21042L4	203 -19
MS21042L4	203 -22
MS21042L5	12 - 8
MS21042L5	13 - 8
MS21042L5	21 -12
MS21042L5	22 - 4
MS21042L5	24 - 4
MS21042L5	31 -57
MS21042L5	32 -47
MS21042L5	33 -51
MS21042L5	55 - 2
MS21042L5	55 -27
MS21042L5	56 - 2
MS21042L5	57 - 6
MS21042L5	63 - 5
MS21042L5	67 -28
MS21042L5	67 -32
MS21042L5	67 -44
MS21042L5	68 -20
MS21042L5	70 -14
MS21042L5	108 - 9
MS21042L5	151 -13
MS21042L5	155 -29
MS21042L5	187 -17
MS21042L5	203 - 2
MS21042L6	34 -52
MS21042L6	35 -52
MS21042L6	55 - 8
MS21042L6	56 - 8
MS21042L6	67 - 6
MS21042L6	67 -30
MS21042L6	67 -32
MS21042L6	67 -42
MS21042L6	124 - 6
MS21042L6	159 -39
MS21042N08	94 -72
MS21044N06	99 -30
MS21044N06	101 -24
MS21044N06	101 -30
MS21044N06	102 -24
MS21044N06	103 -29
MS21044N06	103 -76
MS21044N06	104 -25
MS21044N06	104 -40
MS21044N06	104 -48
MS21044N06	104 -51
MS21044N06	105 -30
MS21044N06	105 -40
MS21044N06	105 -55
MS21044N06	105 -60
MS21044N06	106 -29
MS21044N06	107 -32
MS21044N06	161 - 5
MS21044N06	172 - 5
MS21044N06	199 - 2
MS21044N06	202 -15
MS21044N08	25 -11
MS21044N08	30 -19
MS21044N08	30 -28
MS21044N08	37 -12

PART NUMBER	FIGURE AND INDEX NO.
MS21044N08	67 -19
MS21044N08	79 - 7
MS21044N08	87 - 7
MS21044N08	88 - 7
MS21044N08	89 - 7
MS21044N08	90 - 7
MS21044N08	93 -82
MS21044N08	93 -84
MS21044N08	94 -87
MS21044N08	95 -16
MS21044N08	97 - 6
MS21044N08	97 - 8
MS21044N08	103 -52
MS21044N08	104 -49
MS21044N08	105 -62
MS21044N08	106 -62
MS21044N08	108 -21
MS21044N08	125 -19
MS21044N08	139 -28
MS21044N08	151 -23
MS21044N08	152 -10
MS21044N08	152 -34
MS21044N08	153 -10
MS21044N08	153 -33
MS21044N08	161 -38
MS21044N08	161 -54
MS21044N08	168 -32
MS21044N08	185 -38
MS21044N08	196 -11
MS21044N08	200 - 5
MS21044N08	201 -20
MS21044N3	16 -26
MS21044N3	17 - 3
MS21044N3	19 -14
MS21044N3	19 -21
MS21044N3	20 - 8
MS21044N3	20 -19
MS21044N3	28 -29
MS21044N3	29 -25
MS21044N3	30 -34
MS21044N3	31 -21
MS21044N3	31 -44
MS21044N3	32 -16
MS21044N3	33 -16
MS21044N3	33 -31E
MS21044N3	34 - 4
MS21044N3	34 - 8
MS21044N3	34 -37
MS21044N3	34 -44
MS21044N3	35 - 4
MS21044N3	35 - 8
MS21044N3	35 -38
MS21044N3	35 -46
MS21044N3	40 -31
MS21044N3	44 - 6
MS21044N3	44 -10
MS21044N3	45 - 7
MS21044N3	45 -11
MS21044N3	49 - 1B
MS21044N3	49 -83
MS21044N3	49 -91
MS21044N3	49 -92
MS21044N3	51 - 9
MS21044N3	52 - 5
MS21044N3	55 - 7
MS21044N3	55 -34
MS21044N3	55 -34A
MS21044N3	55 -34B
MS21044N3	55 -34C
MS21044N3	56 - 7
MS21044N3	67 -56
MS21044N3	67 -65
MS21044N3	68 -10
MS21044N3	68 -11

PART NUMBER	FIGURE AND INDEX NO.
MS21044N3	68 -37
MS21044N3	68 -46
MS21044N3	68 -65
MS21044N3	72 - 2
MS21044N3	73 - 2
MS21044N3	74 - 3
MS21044N3	75 - 3
MS21044N3	76 - 2
MS21044N3	80 - 6
MS21044N3	81 - 6
MS21044N3	87 -20
MS21044N3	87 -59
MS21044N3	88 -21
MS21044N3	88 -63
MS21044N3	89 -19
MS21044N3	89 -58
MS21044N3	90 -18
MS21044N3	91 -13
MS21044N3	91 -21
MS21044N3	91 -21D
MS21044N3	93 - 3
MS21044N3	94 - 3
MS21044N3	95 -15
MS21044N3	95 -17
MS21044N3	95 -29
MS21044N3	108 -55
MS21044N3	110 - 2
MS21044N3	110 - 4
MS21044N3	122 - 8
MS21044N3	122 -10A
MS21044N3	122 -17
MS21044N3	122 -19B
MS21044N3	122 -32
MS21044N3	122 -38
MS21044N3	123 -32
MS21044N3	123 -43
MS21044N3	123 -44
MS21044N3	123 -75
MS21044N3	123 -79
MS21044N3	124 -11
MS21044N3	124 -18
MS21044N3	124 -27
MS21044N3	124 -29
MS21044N3	124 -38
MS21044N3	124 -43
MS21044N3	124 -44
MS21044N3	124 -50
MS21044N3	125 -33
MS21044N3	125 -43
MS21044N3	125 -47
MS21044N3	126 -20
MS21044N3	129 - 5
MS21044N3	129 -18
MS21044N3	130 -35
MS21044N3	131 -14
MS21044N3	132 -13
MS21044N3	138 -38
MS21044N3	140 -32
MS21044N3	141 -12
MS21044N3	142 -38
MS21044N3	142 -47
MS21044N3	142 -54
MS21044N3	142 -57
MS21044N3	143 -29
MS21044N3	143 -38
MS21044N3	143 -45
MS21044N3	143 -48
MS21044N3	144 -45D
MS21044N3	147 -10
MS21044N3	147 -16
MS21044N3	147 -23
MS21044N3	148 -18
MS21044N3	148 -21
MS21044N3	148 -23

PART NUMBER	FIGURE AND INDEX NO.
MS21044N3	148 -27
MS21044N3	148 -44
MS21044N3	149 -48
MS21044N3	149 -61
MS21044N3	150 -32
MS21044N3	150 -46
MS21044N3	151 -20
MS21044N3	156 - 8
MS21044N3	156 -15
MS21044N3	156 -21
MS21044N3	156 -26
MS21044N3	157 -13
MS21044N3	157 -17
MS21044N3	157 -24
MS21044N3	157 -29
MS21044N3	158 -23
MS21044N3	158 -27
MS21044N3	158 -32
MS21044N3	158 -37
MS21044N3	158 -42
MS21044N3	158 -46
MS21044N3	159 - 7
MS21044N3	159 -12
MS21044N3	159 -26
MS21044N3	159 -51
MS21044N3	161 -46
MS21044N3	165 -17
MS21044N3	166 -31
MS21044N3	166 -77
MS21044N3	167 -33
MS21044N3	168 -11
MS21044N3	168 -47
MS21044N3	169 -23
MS21044N3	169 -52
MS21044N3	170 -23
MS21044N3	170 -24
MS21044N3	172 -14
MS21044N3	172 -19
MS21044N3	172 -26
MS21044N3	178 -17
MS21044N3	178 -32
MS21044N3	179 -14
MS21044N3	179 -35
MS21044N3	181 -24
MS21044N3	182 - 9
MS21044N3	182 -28
MS21044N3	182 -35
MS21044N3	183 -10
MS21044N3	183 -36
MS21044N3	183 -43
MS21044N3	184 -56
MS21044N3	187 -12
MS21044N3	187 -27
MS21044N3	189 -15
MS21044N3	189 -23
MS21044N3	190 - 4
MS21044N3	190 -15
MS21044N3	191 - 4
MS21044N3	191 -15
MS21044N3	191 -52
MS21044N3	191 -58
MS21044N3	192 - 3
MS21044N3	192 -17
MS21044N3	202 -21
MS21044N3	203 -27
MS21044N3	205 - 3
MS21044N3	46 -16
MS21045-08	190 -30
MS21045-08	190 -34
MS21045-08	191 -32
MS21045-08	191 -36
MS21045L06	106 -37
MS21045L06	106 -59
MS21045L06	106 -63

PART NUMBER	FIGURE AND INDEX NO.
MS21045L06	173 -13
MS21045L3	137 -15
MS21045L3	139 -15E
MS21045L3	139 -44
MS21045L3	144 -34
MS21045L3	144 -43
MS21045L3	144 -50
MS21045L3	144 -53
MS21045L3	145 -10
MS21045L3	145 -17
MS21045L3	145 -20
MS21045L3	145 -26
MS21045L3	145 -39
MS21045L3	176 -16
MS21045L3	177 -27
MS21045L3	185 -34
MS21919DG12	123 -32
MS21919DG12	123 -33
MS21919DG12	184 -63
MS21919DG3	67 -17
MS21919DG3	68 -29
MS21919DG3	143 -17
MS21919DG3	144 -20
MS21919DG3	186 -12
MS21919DG3	186 -13
MS21919DG4	4 -39
MS21919DG4	6 - 4
MS21919DG4	8 - 4
MS21919DG6	123 -17
MS21919DG6	166 -12
MS21919DG6	168 -11
MS21919DG8	184 -63
MS21919DG9	161 -43
MS24665-132	26 - 8A
MS24665-132	55 - 5
MS24665-132	56 - 5
MS24665-132	57 -35
MS24665-132	58 -40
MS24665-132	72 -37A
MS24665-132	77 -15
MS24665-132	78 - 3
MS24665-132	78 -14
MS24665-132	80 - 4
MS24665-132	81 - 4
MS24665-132	87 -38
MS24665-132	87 -41
MS24665-132	88 -38
MS24665-132	88 -48
MS24665-132	89 -36
MS24665-132	89 -39
MS24665-132	89 -47
MS24665-132	90 -15
MS24665-132	90 -39
MS24665-132	90 -45
MS24665-132	90 -63
MS24665-132	91 -14
MS24665-132	91 -23
MS24665-132	92 - 3
MS24665-132	92 - 9
MS24665-132	92 -13
MS24665-132	92 -14
MS24665-132	93 - 6
MS24665-132	93 -39
MS24665-132	93 -57
MS24665-132	93 -70
MS24665-132	93 -76
MS24665-132	93 -79
MS24665-132	94 - 6
MS24665-132	94 -50
MS24665-132	94 -63
MS24665-132	94 -67
MS24665-132	94 -76
MS24665-132	95 -19
MS24665-132	96 -24

PART NUMBER	FIGURE AND INDEX NO.
MS24665-132	124 -56
MS24665-132	129 - 4
MS24665-132	142 -60
MS24665-132	142 -63
MS24665-132	143 -51
MS24665-132	143 -54
MS24665-132	144 -56
MS24665-132	144 -59
MS24665-132	145 - 5
MS24665-132	145 -13
MS24665-132	145 -31
MS24665-132	145 -36
MS24665-132	149 -22
MS24665-132	158 -28
MS24665-132	159 -32
MS24665-132	169 -37
MS24665-132	170 -12
MS24665-132	188 -10
MS24665-134	55 -19
MS24665-134	55 -36C
MS24665-134	57 -30
MS24665-134	57 -42
MS24665-134	58 -35
MS24665-134	58 -47
MS24665-134	90 -60
MS24665-134	93 -14
MS24665-134	94 -13
MS24665-134	121 -47
MS24665-134	144 -45E
MS24665-134	149 -58
MS24665-134	150 -42
MS24665-134	154 -11
MS24665-134	154 -16
MS24665-134	155 -10
MS24665-134	155 -15
MS24665-134	158 - 5
MS24665-134	158 -10
MS24665-134	158 -12
MS24665-134	158 -16
MS24665-134	158 -20
MS24665-134	158 -24
MS24665-134	158 -38
MS24665-134	158 -43
MS24665-134	159 - 3
MS24665-134	159 - 9
MS24665-134	160 - 5
MS24665-134	160 - 9
MS24665-134	165 -23
MS24665-136	55 -31
MS24665-136	56 -20
MS24665-136	149 -32
MS24665-136	150 -16
MS24665-136	154 -25
MS24665-136	155 -21
MS24665-136	158 -33
MS24665-136	160 -22
MS24665-136	165 -31
MS24665-136	188 -12
MS24665-140	149 -46
MS24665-140	150 -30
MS24665-281	142 -51
MS24665-281	143 -42
MS24665-281	144 -47
MS24665-283	91 -25
MS24665-283	92 -28
MS24665-285	145 - 3
MS24665-285	145 -29
MS24665-285	155 -30
MS24665-285	157 -18
MS24665-285	159 -13
MS24665-317	68 -16
MS24665-351	67 -24
MS24665-351	68 -23
MS24665-355	156 -27

PART NUMBER	FIGURE AND INDEX NO.
MS24665-355	157 -14
MS24665-355	160 -18
MS24665-357	149 -28
MS24665-357	150 -12
MS24665-362	67 -47A
MS24665-362	68 -52
MS24665-5	90 -55
MS24665-5	148 -35
MS24665-5	148 -40
MS24665-5	149 - 7
MS24665-5	169 -11
MS25082B2	105 -24
MS25082B2	106 -22
MS28775-027	66 - 4A
MS28775-110	146 -22
MS28775-112	66 - 5A
MS28778-2	123 -69
MS28778-2	125 -54
MS28778-3	143 -22
MS28778-3	144 -25
MS28778-4	16 - 6
MS28778-4	17 -10
MS28778-4	67 -22
MS28778-4	69 -22
MS28778-4	142 - 5
MS28778-4	146 -11
MS28782-22	66 - 6
MS29513-007	169 -12
MS29513-10	169 -42
MS29513-10	170 -17
MS29513-111	169 -31
MS29513-111	170 - 6
MS29513-138	169 -32
MS29513-138	170 - 7
MS3106A14S7S	186 -10
MS35489-106S	168 -20A
MS35489-11	99 -46
MS35489-11	100 -49
MS35489-11	136 - 7
MS35489-11	165 - 3
MS35489-11	166 - 3
MS35489-11	167 - 3
MS35489-11	168 - 3
MS35489-118	28 -46
MS35489-118	29 -40
MS35489-118	30 -47
MS35489-12	53 -10
MS35489-13	201 -14
MS35489-134	166 -72
MS35489-134	199 - 4
MS35489-15	134 - 9
MS35489-15	134 -13
MS35489-15	135 -11
MS35489-15	135 -14
MS35489-15	135 -31
MS35489-15	165 -33
MS35489-17	108 -11
MS35489-17	133 - 5
MS35489-17	187 -14
MS35489-17	187 -36
MS35489-19	99 -47
MS35489-19	100 -50
MS35489-20	31 -42
MS35489-20	31 -42
MS35489-20	136 - 9
MS35489-205	32 -39
MS35489-205	33 -40
MS35489-22	133 - 4
MS35489-22	136 - 8
MS35489-22	187 -36
MS35489-33	106 -23
MS35489-33	204 - 4
MS35489-33S	204 -18
MS35489-36S	143 -18

PART NUMBER	FIGURE AND INDEX NO.
MS35489-36S	144 -21
MS35489-4	106 -17
MS35489-4	193 -22
MS35489-4	194 -19
MS35489-4	195 -24
MS35489-4	202 -17
MS35489-4	204 -14
MS35489-6	10 -10
MS35489-6	108 -35
MS35489-6	200 - 6
MS35489-7	142 -21
MS35489-9	7 - 6
MS35489-9	9 - 6
MS35489-9	161 -31
MS51959-5B	204 -22
MS9021-038	127 - 8
MS9025-02	170 -21
MX25A	1 -14
M31AS832R6C	81 -14
M31AS832R8C	81 -14
M451	36 - 9
M451	157 - 8
NAS1022A3	188 - 5
NAS1022A3	188 -12
NAS1067A3	123 -53B
NAS1067A3	123 -59A
NAS1067A3	135 -32
NAS1067A3	197 - 3
NAS1068A4	124 -12
NAS1080C8	47 - 2
NAS1080C8	47 - 7
NAS1080C8	47 -10
NAS1080C8	47 -11
NAS1329A06K120	4 -42
NAS1329A06K120	4 -48
NAS1329A06K120	7 -47
NAS1329A06K120	7 -48
NAS1329A06K120	9 -50
NAS1329A08-75	21 -17
NAS1329A08-75	21 -20
NAS1329A08-75	21 -20
NAS1329A08K120	4 -32
NAS1428-8	47 - 7
NAS1428-8	47 -10
NAS1428-8	47 -11
NAS1428-9	47 - 2
NAS144-17	32 -27
NAS144-17	33 -27
NAS145-35	67 -43
NAS145-39	67 -32
NAS145-41	67 -32
NAS146-35	67 -41
NAS146-40	67 -32
NAS146-42	67 -32
NAS178-8-10	47 -11
NAS178-8-6	46 - 3
NAS178-8-6	46 - 6
NAS178-8-7	34 -31
NAS178-8-7	34 -53
NAS178-8-7	35 -32
NAS178-8-7	35 -53
NAS178-8-7	46 - 9
NAS178-8-8	47 - 7
NAS178-8-8	47 -10
NAS178-8-9	47 - 2
NAS179-8	34 -32
NAS179-8	34 -54
NAS179-8	35 -33
NAS179-8	35 -54
NAS179-8	46 - 3
NAS179-8	46 - 6
NAS179-8	46 - 9
NAS179-8	47 - 2
NAS179-8	47 - 7

PART NUMBER	FIGURE AND INDEX NO.
NAS179-8	47 -10
NAS179-8	47 -11
NAS220-10	30 -28
NAS220-11	93 -84
NAS220-11	94 -85
NAS220-12	4 -16
NAS220-12	4 -16
NAS220-12	5 - 3
NAS220-12	5 - 3
NAS220-12	30 -28
NAS220-4	67 -23
NAS220-5	157 - 6
NAS220-6	67 -18
NAS220-7	4 -16
NAS220-8	4 -16
NAS220-8	4 -16
NAS220-8	5 - 3
NAS220-8	5 - 3
NAS220-8	5 - 3
NAS220-9	4 -16
NAS220-9	30 -28
NAS221-10	108 - 2
NAS221-10	159 -50
NAS221-14	159 -51
NAS221-17	72 -50
NAS221-17	73 -46
NAS221-17	74 -32
NAS221-17	75 -25
NAS221-7	55 -34
NAS221-8	6 -44
NAS221-8	8 -40
NAS221-8	19 -20
NAS221-9	67 -15
NAS221-9	68 -11
NAS288-35	148 -33
NAS288-35LH	149 -10
NAS288-35RH	149 -11
NAS295M4	38 - 7
NAS395-1-3	107 - 4
NAS395-1-3	193 - 5
NAS395-1-3	193 -21
NAS395-1-3	194 - 2B
NAS395-1-3	195 - 5
NAS395-12	28 -23
NAS395-12-1	184 -63
NAS395-12-3	99 -40
NAS395-12-3	100 -43
NAS395-12-3	102 -65
NAS395-12-3	162 - 6
NAS395-14-3	7 -13
NAS395-14-3	9 -14
NAS395-14-3	10 -13
NAS395-14-3	11 -15
NAS395-14-3	11 -15A
NAS395-14-3	14 - 8
NAS395-14-3	14 -10
NAS395-14-3	15 - 9
NAS395-14-3	15 -11
NAS395-14-3	20 -34
NAS395-14-3	24 -25
NAS395-14-3	28 -32
NAS395-14-3	29 -28
NAS395-14-3	30 -37
NAS395-14-3	31 -37
NAS395-14-3	32 -21
NAS395-14-3	33 -21
NAS395-14-3	52 -13
NAS395-14-3	131 - 6
NAS395-14-3	132 - 4
NAS395-14-3	161 -23
NAS395-16-3	72 -22
NAS395-16-3	74 -23
NAS395-16-3	82 -18
NAS395-16-3	161 - 2

PART NUMBER	FIGURE AND INDEX NO.
NAS395-16-3	161 - 5
NAS395-17-3	4 -49
NAS395-17-3	67 - 3
NAS395-18-1	162 -11
NAS395-18-3	165 -18
NAS395-19-3	138 -27
NAS395-19-3	139 -23
NAS395-19-3	139 -23C
NAS395-2-3	103 -39
NAS395-2-3	105 -49
NAS395-2-3	106 -46
NAS395-2-3	186 -10
NAS395-3-3	31 -41
NAS395-3-3	31 -41
NAS395-3-3	32 -38
NAS395-3-3	33 -39
NAS395-3-3	193 - 4
NAS395-3-3	194 - 2A
NAS395-3-3	194 -12A
NAS395-3-3	195 - 3
NAS395-3-3	195 -14
NAS395-4-3	6 -22
NAS395-4-3	8 -18
NAS395-4-3	104 -15B
NAS395-4-3	105 -54
NAS395-4-3	106 -35
NAS395-5-3	73 -32
NAS395-5-3	76 -29
NAS395-6-3	44 -22
NAS395-6-3	102 -40
NAS395-6-3	103 -49
NAS395-6-3	107 - 5
NAS395-6-3	179 - 6
NAS396-6-3	138 -22
NAS396-7	73 -46
NAS396-7	75 -25
NAS396-7	76 -44A
NAS396-7	84 -13
NAS397-10	178 -28
NAS397-10	179 -31
NAS397-12	56 -15
NAS397-12	177 - 4
NAS397-12	180 - 4
NAS397-12	180 - 8
NAS397-12	181 - 4
NAS397-12-1	53 -13
NAS397-14	177 - 8
NAS397-14	177 -13
NAS397-14	180 -26
NAS397-14	180 -31
NAS397-14	180 -36
NAS397-14	181 - 7
NAS397-14	181 -26
NAS397-14	181 -29
NAS397-14	181 -32
NAS397-14	182 -47
NAS397-14	182 -49
NAS397-14	183 -56
NAS397-14	183 -58
NAS397-14	184 -68
NAS397-14	184 -70
NAS397-16	55 -15
NAS397-16	126 - 9
NAS397-16	126 -13
NAS397-16	138 -29
NAS397-16	180 -17
NAS397-16	181 -19
NAS397-16-1	125 -11
NAS397-16-1	125 -17
NAS397-18	123 -35
NAS397-18	138 -25
NAS397-18	139 -19
NAS397-18	139 -22
NAS397-18	139 -23B

PART NUMBER	FIGURE AND INDEX NO.
NAS397-28	166 -79
NAS397-32	123 -51
NAS397-32	140 - 2
NAS397-32	141 -19
NAS397-32	141 -22
NAS397-34	203 -13
NAS397-34	203 -13
NAS397-8	54 -10
NAS397-8	177 -20
NAS397-8	179 -11
NAS397-8	180 -13
NAS397-8	183 -13
NAS397-8	183 -13A
NAS397-8	184 -29
NAS397-8	184 -30
NAS397-8	184 -31
NAS397-8	185 -17
NAS397-8	185 -17A
NAS397-8	181 -13
NAS398-50	123 -29
NAS398-50	125 -26
NAS398-50	125 -27
NAS398-50	125 -29
NAS398-50	126 -16
NAS398-50	126 -18
NAS398-50	138 -34
NAS398-50	139 -40
NAS398-50	140 -13
NAS398-50	140 -17
NAS398-50	140 -21
NAS398-50	140 -24
NAS398-50	140 -28
NAS398-50	141 -14
NAS398-50	141 -16
NAS398-54	121 -38
NAS42HT4-16	158 -61
NAS42HT5-36	158 -60
NAS42HT6-8	145 -32
NAS428H3-12	160 -12
NAS428H3-16	24 - 1
NAS43DD0-15	204 -22
NAS43DD0-6	204 - 2
NAS43DD0-6	204 -16
NAS43DD1-14	103 -39
NAS43DD1-14	104 -48
NAS43DD1-22	102 -29
NAS43DD1-40	107 -32
NAS43DD1-42	105 -59
NAS43DD1-42	106 -58
NAS43DD1-9	102 -30
NAS43DD1-9	103 -40
NAS43DD1-9	104 -53
NAS43DD3-12	91 -21C
NAS43DD3-12	159 -34
NAS43DD3-12	166 -71
NAS43DD3-16	181 -24
NAS43DD3-16	190 -29
NAS43DD3-16	191 -35
NAS43DD3-16	198 -11
NAS43DD3-16	201 -22
NAS43DD3-18	94 -74A
NAS43DD3-19	108 -61
NAS43DD3-22	102 -21
NAS43DD3-22	105 -75
NAS43DD3-23	142 -27
NAS43DD3-24	103 -25
NAS43DD3-24	104 -20
NAS43DD3-24	105 -34
NAS43DD3-24	124 -58
NAS43DD3-24	203 - 8
NAS43DD3-26	108 -60
NAS43DD3-27	77 -18
NAS43DD3-3	91 -21C
NAS43DD3-32	144 -32

PART NUMBER	FIGURE AND INDEX NO.
NAS43DD3-5	138 -14
NAS43DD3-5	139 -14
NAS43DD3-7	198 -10
NAS43DD3-8	108 -54
NAS43DD6-33	92 -27
NAS43DD6-35	166 -34
NAS43HT3-12	145 -36
NAS43HT3-16	87 -20
NAS43HT3-16	90 -18
NAS43HT3-32	123 -33
NAS43HT3-34	72 -44
NAS43HT3-34	73 -39
NAS43HT3-34	76 -39
NAS43HT3-4	159 -51
NAS43HT3-42A	33 -31C
NAS43HT3-6	97 - 3
NAS43HT3-9	124 -43
NAS43HT4-10	95 -21
NAS43HT4-10	108 -41
NAS43HT4-10	158 -47
NAS43HT4-16	149 -39
NAS43HT4-16	149 -50
NAS43HT4-16	150 -23
NAS43HT4-16	150 -34
NAS43HT4-18	91 - 4
NAS43HT4-22	87 -54
NAS43HT4-22	88 -58
NAS43HT4-22	89 -53
NAS43HT4-22	108 - 3G
NAS43HT4-22	108 -40
NAS43HT4-22	150 - 5
NAS43HT4-28	149 -40
NAS43HT4-28	150 -24
NAS43HT4-42	149 -44
NAS43HT4-43	150 - 6
NAS43HT4-46	150 -28
NAS43HT4-9	150 -49
NAS444-1	10 -18
NAS444-4	6 - 7
NAS444-4	8 - 7
NAS444-4	28 -45
NAS444-4	79 - 2
NAS444-5	10 - 5
NAS444-5	10 -11
NAS444-5	10 -25
NAS445-2	200 - 3
NAS446-1	84 - 4
NAS446-1	84 - 4A
NAS446-1	85 - 4
NAS446-1-3	101 -11
NAS446-1-3	102 -26
NAS446-1-3	108 -48
NAS446-1-3	202 - 7
NAS446-2-1	195 -21
NAS446-2-3	82 -30
NAS446-2-3	83 -30
NAS446-2-3	105 -97
NAS446-2-3	106 -94
NAS446-2-3	107 -23
NAS446-2-3	107 -30
NAS446-2-3	190 -10
NAS446-2-3	192 - 8
NAS446-2-3	193 -17
NAS446-2-3	194 -16
NAS446-2-3	199 - 2
NAS446-2-3	199 - 5
NAS446-4	161 -30
NAS446-4	186 -12
NAS446-4	186 -13
NAS446-4-3	4 -32
NAS446-4-3	6 - 6
NAS446-4-3	8 - 6
NAS446-4-3	10 -15
NAS446-4-3	11 -11

PART NUMBER	FIGURE AND INDEX NO.
NAS446-4-3	43 - 3
NAS446-4-3	43 - 6
NAS446-4-3	43 - 9
NAS446-4-3	43 -12
NAS446-4-3	53 -17
NAS446-4-3	82 -18
NAS446-4-3	83 -13
NAS446-4-3	84 -33
NAS446-4-3	84 -35
NAS446-4-3	85 -31
NAS446-4-3	85 -33
NAS446-4-3	122 -26
NAS446-4-3	122 -36
NAS446-4-3	122 -42
NAS446-4-3	125 -28
NAS446-4-3	125 -30
NAS446-4-3	125 -56
NAS446-4-3	132 - 5
NAS446-4-3	133 -12
NAS446-4-3	133 -15
NAS446-4-3	133 -20
NAS446-4-3	133 -26
NAS446-4-3	133 -32
NAS446-4-3	133 -38
NAS446-4-3	134 - 4
NAS446-4-3	134 -30
NAS446-4-3	134 -37
NAS446-4-3	134 -45
NAS446-4-3	134 -52
NAS446-4-3	135 - 6
NAS446-4-3	135 -49
NAS446-4-3	135 -54
NAS446-4-3	136 -12
NAS446-4-3	136 -17
NAS446-4-3	136 -22
NAS446-4-3	138 - 3
NAS446-4-3	139 - 3
NAS446-4-3	142 -25
NAS446-4-3	142 -28
NAS446-4-3	165 -40
NAS446-4-3	166 -46
NAS446-4-3	167 -41
NAS446-4-3	167 -43
NAS446-4-3	168 -70
NAS446-4-3	168 -73
NAS446-4-3	169 -21
NAS446-416	134 -57
NAS446-5-1	123 -17
NAS446-5-3	82 -32
NAS446-5-3	83 -32
NAS446-5-3	138 -39
NAS448-1-3	198 -12
NAS463W416	134 - 8
NAS463W416	134 -12
NAS463W416	134 -24
NAS463W416	134 -32
NAS463W416	134 -39
NAS463W416	134 -47
NAS463W416	134 -54
NAS463W416	135 -10
NAS463W416	135 -14
NAS463W416	135 -26
NAS463W416	135 -42
NAS463W416	135 -51
NAS463W416	135 -59
NAS463W416	135 -66
NAS463416	134 -20
NAS464-3-22	57 -33
NAS464-3-22	58 -38
NAS464P4A6	108 - 3D
NAS464P4A8	108 - 3D
NAS464P7LA44	68 -13
NAS488-1-3	73 -32
NAS488-1-3	75 -21

PART NUMBER	FIGURE AND INDEX NO.
NAS488-1-3	76 -29
NAS514P1032-14	72 -44
NAS514P1032-14	73 -39
NAS514P1032-14	76 -39
NAS514P832-8	120 -16
NAS520-10R6	49 -81
NAS557-10A	43 -10
NAS557-10A	191 -27
NAS557-10A	203 -11
NAS557-12A	43 -10
NAS557-3A	43 - 1
NAS557-4A	43 - 4
NAS557-8A	43 -10
NAS561-P3-10	95 - 9
NAS561-2-12	87 -44
NAS561-2-12	88 -52
NAS561-3-14	78 -21
NAS561-3-16	93 -80A
NAS561-3-16	94 -67A
NAS561-3-8	88 -44
NAS561-3-8	89 -44
NAS561-3-8	157 - 4
NAS561-5-12	142 -48
NAS561-5-12	143 -39
NAS561-5-12	144 -44
NAS561C2-10	166 -27
NAS561C2-8	140 - 9
NAS561C2-8	141 - 7
NAS561C3-10	87 -51
NAS561C3-10	88 -50
NAS561C3-10	89 -49
NAS561C3-10	90 -81
NAS561C4-10	90 -53
NAS561P3-4	156 - 5
NAS561P3-6	96 -15
NAS561P3-8	72 -42
NAS561P3-8	73 -37
NAS561P3-8	76 -37
NAS561P3-8	89 -42
NAS561P3-8	90 -57
NAS561P3-8	96 -26
NAS561P3-8	166 -21
NAS561P3-8	167 -21
NAS561P3-8	168 -33
NAS561P3-8	171 - 2
NAS561P4-10	90 -48
NAS561P4-10	93 -35
NAS561P4-10	93 -64
NAS561P4-10	93 -66
NAS561P4-12	90 -52
NAS561P4-12	93 -23
NAS561P4-12	93 -28
NAS561P4-12	93 -33
NAS561P4-12	93 -59
NAS561P4-12	94 -20
NAS561P4-12	94 -27
NAS561P4-12	94 -32
NAS561P4-12	94 -52
NAS561P4-12	94 -54
NAS561P4-14	64 - 9
NAS561P4-14	65 - 8
NAS561P4-15	94 -35
NAS561P4-18	66 -13
NAS561P4-8	90 -50
NAS561P4-8	94 -64
NAS561P6-12	93 -26
NAS561P6-12	94 -24
NAS561P6-18	90 -35
NAS561P6-18	92 -31
NAS561P6-18	93 -50
NAS561P6-18	94 -43
NAS561P6-18	94 -47
NAS561P6-22	90 -33
NAS561P6-22	92 - 5

PART NUMBER	FIGURE AND INDEX NO.
NAS561P6-22	92 - 7
NAS561P6-22	94 -45
NAS561P6-28	94 -40
NAS561P8-18	93 -47
NAS561P8-18	93 -54
NAS561P8-18	94 -41
NAS561P8-22	93 -44
NAS561P8-22	93 -52
NAS563-11	66 - 7
NAS620-8	197 - 6
NAS620-8L	197 - 6
NAS679A06	105 -63
NAS679N06	34 -28
NAS680A06	33 -36
NAS680A06K	193 - 8
NAS680A06K	194 - 6
NAS680A08	6 - 7
NAS680A08	6 -10
NAS680A08	7 - 5
NAS680A08	7 -17
NAS680A08	8 - 7
NAS680A08	8 - 9
NAS680A08	8 -42
NAS680A08	9 - 5
NAS680A08	9 -17
NAS680A08	9 -18
NAS680A08	10 -24
NAS680A08	12 - 3
NAS680A08	12 -23
NAS680A08	13 - 3
NAS680A08	13 - 3
NAS680A08	13 -28
NAS680A08	14 -24
NAS680A08	15 -23
NAS680A08	15 -24
NAS680A08	15 -25
NAS680A08	31 -29
NAS680A08	33 -58
NAS680A08	40 -30
NAS680A08	41 -41
NAS680A08	68 -33
NAS680A08	68 -65
NAS680A08	105 - 6
NAS680A08	105 -11
NAS680A08	105 -14
NAS680A08	106 - 6
NAS680A08	106 -11
NAS680A08	106 -14
NAS680A08	111 -10
NAS680A08	112 - 9
NAS680A08	114 -11
NAS680A08	136 -43
NAS680A08	201 -12
NAS680A08K	28 -19B
NAS680A08K	29 -18
NAS680A08K	108 -16
NAS680A3	20 -29
NAS680A3	34 -10
NAS680A3	34 -19
NAS680A3	34 -29
NAS680A3	35 -10
NAS680A3	35 -19
NAS680A3	35 -29
NAS680A3	49 -66
NAS680A3	49 -76
NAS680A3	49 -78
NAS680A3	49 -79
NAS680A3	49 -88
NAS680A3	49 -93
NAS680A3	51 - 4
NAS680A3	51 - 8
NAS680A3	51 - 9
NAS680A3	51 -11
NAS680A3	51 -12

PART NUMBER	FIGURE AND INDEX NO.
NAS680A3	73 -43
NAS680A3	75 -24
NAS680A3	76 -11
NAS680A3	105 - 5
NAS680A3	106 - 5
NAS680A3	108 -39
NAS680A3	113 - 8
NAS680A3	133 -49
NAS680A3	133 -50
NAS680A3	136 -42
NAS680A3K	49 -25
NAS680A3K	67 -49C
NAS680A3K	68 -50
NAS680A3K	68 -69
NAS680A4	30 -19
NAS680A4	35 -58
NAS680A4	39 -16
NAS680A4	40 -27
NAS680A4	41 -36
NAS680A4	42 -16
NAS680A4	47 -17
NAS680A4	49 -22C
NAS680A4	49 -80
NAS680A5	52 -16
NAS681A08	120 -13
NAS682A08	31 -29
NAS682A08	44 -17
NAS682A08	44 -20
NAS682A08	45 -18
NAS682A08	105 -10
NAS682A08	105 -12
NAS682A08	106 -10
NAS682A08	106 -12
NAS682A08	114 -12
NAS684A08	12 -24
NAS684A08	13 -29
NAS684A08	49 -57
NAS686A08	7 -41
NAS686A08	9 -43
NAS686A08	98 - 5C
NAS686A08	98 -15
NAS686A08K	6 -21
NAS686A08K	8 -17
NAS686A3	67 -49
NAS686A3	67 -49B
NAS686A3	68 -49
NAS686A3	68 -68
NAS686A3K	191 -57
NAS693A08	120 -14
NAS696-6-3	139 -16
NAS696A06L	68 -33
NAS696A08	11 -23
NAS696A08	68 -33
NAS696A08	166 -75
NAS696A08K	10 -29
NAS696A3	67 -14
NAS697A08	38 - 2
NAS697A08	112 -11
NAS697A08	113 -10
NAS697A08	115 -15
NAS697A08	116 -15
NAS697A08	117 -11
NAS697A08	118 -19
NAS697A08	119 -11
NAS697A08	120 -11
NAS697A08	120 -18
NAS697A08	120 -20
NAS697A08	120 -21
NAS697A08	135 -35
NAS697A08	135 -43
NAS697A08	135 -67
NAS697A08	166 -20
NAS697A08	166 -75
NAS697A08	167 -20

PART NUMBER	FIGURE AND INDEX NO.
NAS697A08K	49 -28
NAS697A3	16 -26C
NAS697A3	17 - 3C
NAS697A3	41 -32
NAS697A3	51 - 3
NAS697A3	121 -36
NAS697A3	123 -59A
NAS697A3	123 -59A
NAS697A3	136 -45
NAS697A3	197 -16
NAS697A4	41 -37
NAS697A4	49 -42
NAS697A4	49 -42
NAS697A4K	41 -37A
NAS698A06L	33 -36
NAS698A08	78 -27
NAS698A08	115 -16
NAS698A3	24 -39
NAS698A4	23 - 8
NAS69808	151 -10
NAS70A-128-313	77 -14
NAS75-3-008	66 - 9
NAS75-3-009	55 - 5
NAS75-3-009	56 - 5
NAS75-5-231	57 - 6A
NAS75-5-231	58 -11A
NAS77-3-23	57 -38A
NAS77-3-23	58 -43A
NAS77-6-88	57 -37
NAS77-6-88	57 -45
NAS77-6-88	58 -42
NAS77-6-88	58 -50
NAS960D6L	107 -32
N6-2	148 -42A
OR95-1.5	201 -27
PN-3A	26 -54
PN3A	25 -14
P2274	178 -21
P2274	179 -18
P2274	182 -32
P2274	183 -40
P2274	184 -44
P2274	185 -28
Q901-36	126 -20
R561	71 -33
R5673	130 -45
S-1021A-10-10	13 -25
SAW4204-1	127 -16
SAW4204-1	190 -37
SAW4206-1	127 -16
SAW4206-1	190 -37
SE709	163 -32
SH15	128 -18
SH15	125 -49
SH15	127 -15
SH20A	125 -49
SH20A	126 -37
SH20A	127 -15
SH200A	125 -49
SH200A	126 -37
SH200A	127 -15
SH26	126 -37
SH26	127 -15
SH260	126 -37
SH260	127 -15
SK175-9	57 - 4
S10K75	77 - 2
S1003-29A	24 -27
S1003-29A	24 -29
S1003-43A	145 -23
S1003-66A	159 -48
S1003-9A	171 -11
S1004-43A	148 -30
S1021-6-4	31 -40

PART NUMBER	FIGURE AND INDEX NO.
S1021-6-4	31 -40
S1021A10-10	12 - 5
S1021A10-10	12 -21
S1021A10-10	13 - 5
S1021A10-16	108 -71
S1021A4-10	96 -11
S1021A4-6	24 -30
S1021A4-6	83 -37
S1021A4-6	85 -39
S1021A4-6	88 -20
S1021A4-6	89 -14
S1021A4-6	89 -18
S1021A4-6	93 - 9
S1021A4-6	93 -20
S1021A4-6	94 - 9
S1021A4-6	94 -18
S1021A4-6	94 -25A
S1021A4-6	96 -11
S1021A6-6	95 -36
S1021A8-6	136 -11
S1021A8-6	136 -21
S1021Z10-10	83 -32
S1021Z10-20	73 -46
S1021Z10-20	75 -25
S1021Z10-20	76 -44A
S1021Z10-20	84 -13
S1021Z10-20	123 -33
S1021Z10-8	68 -30
S1021Z10-8	123 -17
S1021Z10-8	123 -41
S1021Z10-8	125 - 6
S1021Z10-8	125 -21
S1021Z10-8	138 -39
S1021Z10-8	174 -10
S1021Z10-8	174 -16
S1021Z10-8	187 -29
S1021Z10-8	187 -31
S1021Z1010	82 -32
S1021Z2R4	172 -35
S1021Z4-4	72 -12
S1021Z4-4	73 -13
S1021Z4-4	74 -13
S1021Z4-4	75 -10
S1021Z4-4	76 -11
S1021Z4-4	80 -15
S1021Z4-4	81 -22
S1021Z4-4	83 -26
S1021Z4-4	202 -10
S1021Z4-4C	141 -23
S1021Z4-5	107 - 3
S1021Z4-6	82 -20
S1021Z4-6	83 - 1
S1021Z4-6	83 -15
S1021Z4-6	83 -27
S1021Z4-6	84 -21
S1021Z4-6	85 - 5
S1021Z4-6	102 -16
S1021Z4-6	104 -23
S1021Z4-6	105 -17
S1021Z4-6	106 -19
S1021Z4-6	165 -21
S1021Z4-6	193 -20
S1021Z4-6	202 - 6
S1021Z4-6C	82 -28
S1021Z4-6C	82 -29
S1021Z4-6C	82 -30
S1021Z4-6C	83 -21
S1021Z4-6C	83 -28
S1021Z4-6C	83 -29
S1021Z4-6C	83 -30
S1021Z4-6C	108 -47
S1021Z4-8	84 - 4
S1021Z4-8	84 - 4A
S1021Z4-8	85 - 4

PART NUMBER	FIGURE AND INDEX NO.
S1021Z4-8	101 -11
S1021Z4-8	102 -26
S1021Z4-8	193 - 3
S1021Z4-8	194 - 3
S1021Z4-8	195 - 4
S1021Z6-10	83 - 8
S1021Z6-10C	138 -18
S1021Z6-12C	105 -72
S1021Z6-12C	105 -98B
S1021Z6-12C	106 -92B
S1021Z6-4	22 -17
S1021Z6-4	23 -15
S1021Z6-4	32 -37
S1021Z6-4	33 -38
S1021Z6-4	87 -19
S1021Z6-4	88 -20
S1021Z6-4	90 -21
S1021Z6-4	90 -24
S1021Z6-4	91 -17
S1021Z6-4	91 -19
S1021Z6-4	95 - 6
S1021Z6-4	96 -14A
S1021Z6-4	195 -20
S1021Z6-4	200 - 2
S1021Z6-4	201 -11
S1021Z6-6	4 -24
S1021Z6-6	68 -72
S1021Z6-6	73 -31
S1021Z6-6	75 -21
S1021Z6-6	76 -27
S1021Z6-6	84 -10
S1021Z6-6	84 -43
S1021Z6-6	85 - 8
S1021Z6-6	85 -22
S1021Z6-6	85 -28
S1021Z6-6	91 -28
S1021Z6-6	107 - 2
S1021Z6-6	107 - 7
S1021Z6-6	107 -14
S1021Z6-6	107 -25
S1021Z6-6	140 -35
S1021Z6-6	141 -30
S1021Z6-6	162 - 5
S1021Z6-6	190 -10
S1021Z6-6	192 - 8
S1021Z6-6	193 - 2
S1021Z6-6	193 -16
S1021Z6-6	194 -15
S1021Z6-6	199 - 5
S1021Z6-8	84 -31
S1021Z6-8	84 -33
S1021Z6-8	84 -34
S1021Z6-8	85 -31
S1021Z6-8	85 -33
S1021Z6-8	87 -36
S1021Z6-8	93 -72
S1021Z6-8	107 -22
S1021Z6-8	107 -29
S1021Z6-8	151 - 8
S1021Z6-8	151 - 9
S1021Z6-8	172 -36
S1021Z6-8	187 -18
S1021Z6-8	194 - 2
S1021Z6-8	194 -12A
S1021Z6-8	195 - 2
S1021Z6-8	195 -13
S1021Z6-8	198 - 4
S1021Z6-8	199 - 2
S1021Z6-8B	104 -15B
S1021Z6-8B	105 -54
S1021Z6-8B	106 -35
S1021Z8-10	16 -10
S1021Z8-10	17 -20
S1021Z8-10	138 -27

PART NUMBER	FIGURE AND INDEX NO.
S1021Z8-10	139 -23
S1021Z8-10	139 -23C
S1021Z8-10	186 - 9
S1021Z8-10	186 -12
S1021Z8-10	186 -13
S1021Z8-10	195 - 6
S1021Z8-12	125 -13
S1021Z8-12	126 - 9
S1021Z8-12	133 -14
S1021Z8-12	134 - 4
S1021Z8-12	134 -29
S1021Z8-12	134 -37
S1021Z8-12	134 -44
S1021Z8-12	134 -52
S1021Z8-12	134 -56
S1021Z8-12	135 - 5
S1021Z8-12	135 -48
S1021Z8-12	135 -53
S1021Z8-14	84 -36
S1021Z8-14	142 -25
S1021Z8-5	53 - 7
S1021Z8-5C	167 -63
S1021Z8-5C	168 -76
S1021Z8-6	4 -19
S1021Z8-6	4 -21
S1021Z8-6	4 -32
S1021Z8-6	4 -38
S1021Z8-6	4 -49
S1021Z8-6	4 -58
S1021Z8-6	36 -11
S1021Z8-6	36 -11
S1021Z8-6	43 - 3
S1021Z8-6	43 - 6
S1021Z8-6	43 - 9
S1021Z8-6	43 -12
S1021Z8-6	53 -16
S1021Z8-6	85 -43
S1021Z8-6	98 - 6
S1021Z8-6	99 -39
S1021Z8-6	100 -43
S1021Z8-6	102 -64
S1021Z8-6	122 -27
S1021Z8-6	122 -37
S1021Z8-6	122 -43
S1021Z8-6	131 - 5
S1021Z8-6	132 - 5
S1021Z8-6	136 -16
S1021Z8-6	137 - 2
S1021Z8-6	137 - 9
S1021Z8-6	138 - 2
S1021Z8-6	138 - 4
S1021Z8-6	139 - 2
S1021Z8-6	139 - 4
S1021Z8-6	165 -19
S1021Z8-6	165 -40
S1021Z8-6	166 -46
S1021Z8-6	167 -43
S1021Z8-6	168 -73
S1021Z8-6	169 -20
S1021Z8-6	177 -22
S1021Z8-6	199 - 1
S1021Z8-6	181 -15
S1021Z8-6C	87 -13
S1021Z8-6C	88 -14
S1021Z8-6C	90 -13
S1021Z8-6C	91 -11
S1021Z8-8	4 -20
S1021Z8-8	4 -20A
S1021Z8-8	4 -61
S1021Z8-8	4 -65
S1021Z8-8	5 -11
S1021Z8-8	6 - 5
S1021Z8-8	6 -48
S1021Z8-8	6 -49

PART NUMBER	FIGURE AND INDEX NO.
S1021Z8-8	8 - 5
S1021Z8-8	11 -11
S1021Z8-8	20 -36
S1021Z8-8	24 -24
S1021Z8-8	24 -47
S1021Z8-8	27 -10
S1021Z8-8	67 - 2
S1021Z8-8	72 -48
S1021Z8-8	72 -49
S1021Z8-8	73 -45
S1021Z8-8	74 -28
S1021Z8-8	76 -43
S1021Z8-8	82 -18
S1021Z8-8	82 -16
S1021Z8-8	83 -13
S1021Z8-8	84 -35
S1021Z8-8	101 -27
S1021Z8-8	115 - 1
S1021Z8-8	115 -21
S1021Z8-8	116 - 1
S1021Z8-8	116 -18
S1021Z8-8	121 - 3
S1021Z8-8	124 -48
S1021Z8-8	125 -14
S1021Z8-8	125 -23
S1021Z8-8	125 -28
S1021Z8-8	125 -30
S1021Z8-8	125 -56
S1021Z8-8	132 - 3
S1021Z8-8	132 - 5D
S1021Z8-8	133 -11
S1021Z8-8	133 -19
S1021Z8-8	133 -25
S1021Z8-8	133 -31
S1021Z8-8	133 -37
S1021Z8-8	140 -14
S1021Z8-8	140 -27
S1021Z8-8	142 -28
S1021Z8-8	143 -17
S1021Z8-8	144 -20
S1021Z8-8	161 - 2
S1021Z8-8	161 - 5
S1021Z8-8	161 -23
S1021Z8-8	161 -30
S1021Z8-8	162 -10
S1021Z8-8	165 - 2
S1021Z8-8	165 -12
S1021Z8-8	166 - 2
S1021Z8-8	166 -12
S1021Z8-8	167 - 2
S1021Z8-8	167 -12
S1021Z8-8	167 -41
S1021Z8-8	168 - 2
S1021Z8-8	168 -16
S1021Z8-8	168 -70
S1021Z8-8	172 -41
S1021Z8-8	184 -63
S1021Z8-8C	173 - 7
S1021Z8-8C	173 -11
S1022A4-6	82 -33
S1022A4-6	85 -23
S1022A4-6	85 -41
S1022Z6-10	90 -58
S1022Z6-108	105 -97
S1022Z6-108	106 -94
S1022Z8-8	4 -52
S1022Z8-8	72 -21
S1022Z8-8	74 -23
S1022Z8-8	138 -21
S1022Z8-8	139 -16
S1023A4-10C	82 -25
S1023A4-6C	84 -24
S1023A6-10B	103 -26
S1023A6-10B	104 -13

PART NUMBER	FIGURE AND INDEX NO.
S1023A6-6C	139 -35
S1023A6-6C	166 -36
S1023A6-6C	167 -36
S1023A6-6C	168 -49
S1023A6-8C	108 -45
S1026BG	1 -18
S1026BG	140 -34
S1026BG10.90X	141 -29
S1047-1	1 -20
S1047-2	1 -20
S1050-1	1 -48
S1050-1	137 -10A
S1050-2	1 -48
S1050-3	1 -48
S1053E10T	1 -19
S1053E12T	1 -19
S1053E12T	166 -78
S1053E16T	140 - 1
S1053E16T	141 -21
S1053E16T24	203 -12
S1053E20T	1 -19
S1053E24T	1 -19
S1053E24T	123 -28
S1053E24T	125 -25
S1053E24T	125 -25
S1053E24T	126 -17
S1053E24T	138 -33
S1053E24T	139 -39
S1053E24T	140 -22
S1053E24T	140 -23
S1053E24T	140 -25
S1053E24T	140 -26
S1053E28T	1 -19
S1053E32T	1 -19
S1053E7T	1 -19
S1053E8T	1 -19
S1053E8T	125 -17
S1053E8T	126 -12
S1053E8T	138 -28
S1053E8T	139 -18
S1053E8T	139 -21
S1053E8T	139 -23A
S1053K10T	1 -19
S1053K12T	1 -19
S1053K16	123 -50
S1053K16T	141 -19
S1053K20T	1 -19
S1053K24T	1 -19
S1053K24T	125 -24
S1053K24T	125 -27
S1053K24T	125 -29
S1053K24T	126 -15
S1053K24T	140 -11
S1053K24T	140 -12
S1053K24T	140 -15
S1053K24T	140 -16
S1053K24T	140 -20
S1053K24T	141 -13
S1053K24T	141 -15
S1053K24T	126 -37
S1053K24T	126 -37
S1053K24T	126 -37
S1053K24W	1 -19
S1053K28W	1 -19
S1053K28W	121 -37
S1053K28W	126 -21
S1053K32T	1 -19
S1055-1	1 -21
S1055-1	30 -11
S1055-1	199 - 3
S1060-15	87 -52
S1060-3	87 -52
S1066-C1	82 -25
S1066C1	84 -24

PART NUMBER	FIGURE AND INDEX NO.
S1066C1	85 -41
S1067B1	103 -26
S1067B1	104 -13
S1067C1	166 -37
S1067C1	167 -37
S1067C1	168 -50
S1071-1	1 -22
S1071-1	153 -41
S1071-1	153 -49
S1071-1	161 - 4A
S1071-1	161 - 7
S1071-1	161 -10
S1071-1	161 -10
S1071-1	161 -13
S1071-1	161 -13
S1071-1	161 -17
S1071-1	161 -17
S1071-1	161 -34
S1071-1	161 -35
S1071-1	161 -48
S1071-1	161 -52
S1071-1	161 -56
S1071-1	161 -59
S1071-1	161 -64
S1071-1	161 -65
S1071-1	161 -66
S1071-3	1 -22
S1071-4	1 -22
S1071-4	53 -14
S1071-4	162 - 2
S1071-4-	54 - 9
S1071-5	1 -22
S1071G3	151 - 3
S1071G3	151 - 4
S1071R3	151 - 6
S1071R3	151 - 7
S1078-1	1 - 7
S1078-1	4 -63
S1078-2	1 - 8
S1078-3	1 - 9
S1081-1	76 -32
S1084-1	1 -23
S1084-1	80 -10
S1084-1	81 -16
S1090-10	100 -16
S1090-11	190 - 6A
S1090-11	191 - 7
S1090-2	190 - 6A
S1090-2	191 - 7
S1090-20	100 -15
S1090-22	190 - 6
S1090-22	191 - 6
S1090-22	192 -20
S1090-23	190 - 6
S1090-23	191 - 6
S1090-23	192 -20
S1090-3	99 -16
S1090-3	100 -16
S1090-5	99 -15
S1090-5	100 -15
S1091-1	190 - 6
S1091-1	191 - 6
S1091-1	192 -20
S1091-16	99 -16
S1091-20	99 -15
S1091-35	190 -25
S1091-35	192 -12
S1091-5	190 - 6A
S1091-5	191 - 7
S1093-1	20 -38
S1095-1	43 - 2
S1095-2	43 - 5
S1095-4	43 - 8
S1095-4	43 -11

PART NUMBER	FIGURE AND INDEX NO.
S1095-5	43 -11
S1095-5	191 -27
S1095-6	43 -11
S1099-1-3.30	142 -32
S1099-1-4.00	142 -31
S1104-3	122 - 7
S1104-3	123 -43
S1104-3	124 -44
S1106-3	19 -17
S1106-3	20 -12
S1106-4	124 -19
S11065-21	57 -19
S11065-21	58 -24
S1110ET	1 -24
S1110ET	140 -33
S1110ET	141 -28
S1115-19	117 -13
S1115-19	118 -21
S1115-19	119 -13
S1115-19	120 -24
S1115-19	205 - 9
S1115-29	118 -22
S1115-29	119 -14
S1115-29	120 -22
S1115-29	197 -17
S1115-30	205 -10
S1115-32	117 -12
S1115-32	117 -22
S1115-32	118 -20
S1115-32	118 -32
S1115-32	119 -12
S1115-32	119 -24
S1115-32	120 -23
S1115-32	120 -32
S1115-35	117 -12
S1115-35	118 -20
S1115-35	119 -12
S1115-35	120 -23
S1115-9	117 -12
S1115-9	118 -20
S1115-9	118 -32
S1115-9	119 -12
S1115-9	119 -24
S1115-9	120 -23
S1115-9	120 -32
S1115-9	205 -10
S1116-1	1 -43
S1117-24	67 -25
S1117-24	68 -22
S1130-1	161 - 5A
S1130-1	161 - 5A
S1130-1	161 - 7
S1130-1	161 -10A
S1130-1	161 -13
S1130-1	161 -17
S1130-1	161 -34
S1130-1	161 -35
S1130-1	161 -50
S1130-1	161 -57
S1130-1	161 -60
S1130-1	161 -67
S1131-1	161 - 5A
S1131-1	161 - 7
S1131-1	161 -10B
S1131-1	161 -13
S1131-1	161 -17
S1131-1	161 -34
S1131-1	161 -35
S1131-1	161 -49
S1131-1	161 -57
S1131-1	161 -60
S1131-1	161 -67
S1132-1	161 - 3A
S1132-1	161 - 6

PART NUMBER	FIGURE AND INDEX NO.
S1133-1	161 - 8
S1133-1	161 -11
S1133-1	161 -14
S1133-1	161 -47
S1135-1	161 - 8
S1135-1	161 -14
S1135-1	161 -18
S1135-1	161 -63
S1137-1	161 -32
S1137-1	161 -51
S1139-1	161 -12
S1139-1	161 -16
S1139-1	161 -62
S1141-1	31 -38
S1141-1	32 -46
S1141-2	31 -38
S1153-1	4 -39
S1153-1	143 -17
S1153-1	144 -20
S1155-2	126 -14
S1155-2	167 -41
S1155-2	168 -70
S1155-3	204 -10
S1155-3	204 -24
S1155-3	204 -26
S1161-1	50 - 7
S1166-1	49 -15
S1167-3-0080	67 -36A
S1167-3-0085	143 -20
S1167-3-0085	144 -23
S1167-3-0100	143 -19
S1167-4-0080	67 -36A
S1167-4-0080	142 - 2
S1167-4-0100	142 - 1
S1167-6-0210	123 -22
S1167-6-0220	126 -10
S1167-6-0260	123 -20
S1167-6-0290	123 -22
S1167-8	168 -59
S1167-8-	187 -28
S1167-8-	187 -28
S1167-8-	187 -30
S1167-8-	187 -30
S1167-8-	187 -32
S1167-8-0220	165 -53
S1167-8-0240	125 -16
S1167-8-0240	165 -53
S1167-8-0240	166 -48
S1167-8-0240	167 -48
S1167C3-0100	144 -22
S1168-4-30	176 - 7
S1168-4-30	180 -11
S1168-6-40 1/2	176 -11
S1189-2	80 - 7
S1209-1	49 -70A
S121Z8-8	168 -20
S1213-1	107 - 6
S1213-3	107 - 9
S1216-4	102 -70
S1216-4	103 -71
S1216-4	104 -70
S1216-4	105 -68
S1216-4	106 -72
S1222-15	103 -57
S1222-2	99 - 6
S1222-2	122 - 6
S1222-20	104 -68
S1222-20A	104 -68
S1222-21	104 -68
S1222-4	100 - 6
S1222-4	124 -14
S1222-7	102 -57
S1222-7	122 - 6
S1223-1	100 -35

PART NUMBER	FIGURE AND INDEX NO.
S1223-1	124 -41
S1224-1	99 - 9
S1224-2	100 - 9
S1224-2	124 -24
S1224-4	102 -56
S1230-15	104 -67
S1230-15	105 -74
S1230-15	106 -75
S1230-17	104 -67
S1230-17	105 -74
S1230-7	102 -56
S1230-7	103 -58
S1231-2	99 -11
S1231-2	102 -58
S1231-2	103 -56
S1231-2	122 -20
S1231-3	100 -11
S1231-3	124 -31
S1232-10	161 -28
S1232-10	200 - 7
S1236-3-0184	123 -17
S1236-8	168 -65
S1236-8-0134	166 -43
S1239-1	99 -21
S1239-1	100 -21
S1239-1	142 -23
S1239-14	99 -13
S1239-14	100 -13
S1239-15	102 -51
S1239-15	102 -53
S1239-15	122 -38
S1239-16	102 -44
S1239-20	102 -44
S1239-20	103 -60
S1239-28	122 -38
S1239-36	103 -55
S1239-36	104 -72
S1239-37	103 -54
S1239-37	104 -71
S1239-37	141 - 9
S1239-47	104 -71A
S1239-47	105 -67
S1239-47	106 -70
S1239-48	104 -72A
S1239-48	105 -66
S1239-48	106 -69
S1239-48	141 - 9
S1239-7	99 -22
S1239-7	99 -23
S1239-7	100 -22
S1239-7	100 -23
S1239-7	122 -38
S1239-7	138 -37
S1240-5	99 -10
S1240-5	100 -10
S1240-5	102 -45
S1240-5	103 -59
S1240-5	165 -46
S1240-5	166 -54
S1240-6	99 -14
S1240-6	100 -14
S1240-6	102 -52
S1243-3	97 -17
S1243-6	97 -17
S1247-1E	82 -31
S1258-1	161 -20
S1273-1	84 -19
S1273-1	85 -18
S1278-2	161 -33
S1284-1	101 -31
S1284-1	180 -41
S1284-1	181 -37
S1291-8	11 -13
S1291-8	11 -24

PART NUMBER	FIGURE AND INDEX NO.
S1298-1	100 -36
S1298-1	124 -45
S1301N1	100 -38
S1301N1	186 - 1
S1302N1	101 -20
S1302N1	102 -36
S1302N1	103 -45
S1302N1	104 -40
S1304N1	101 -19
S1304N1	102 -37
S1304N1	103 -46
S1304N1	104 -44
S1304N1	105 -52
S1305-6	102 -29
S1305-6	103 -39
S1305-6	105 -55
S1305N6	99 -32
S1305N6	104 -48
S1307N1	100 -37
S1307N1	101 -23
S1309N1	101 -18
S1309N1	102 -41
S1309N1	176 - 2
S1309N1	177 - 2
S1309N1	180 - 2
S1309N1	181 - 2
S1311-1	102 -39
S1311-1	103 -48
S1311-1	105 -49
S1311-3	105 -49
S1311-3	106 -46
S1311N1	101 -28
S1311N1	104 -52
S1311N1	186 -10
S1313N1	101 -15
S1313N1	102 -28
S1314N1	101 -15
S1314N1	102 -28
S1314N1	103 -32
S1314N1	104 -45
S1314N1	105 -50
S1316N1	101 -17
S1316N1	102 -42
S1316N1	176 - 1
S1316N1	177 - 1
S1316N1	180 - 1
S1316N1	181 - 1
S1317N1	101 -16
S1317N1	102 -35
S1317N1	103 -44
S1317N2	104 -41
S1317N2	105 -39
S1319-1	102 -38
S1319-1	102 -38A
S1320-1	101 -29
S1320-1	102 -38A
S1320-1	103 -52
S1320-1	104 -49
S1320-1	105 -62
S1320-3	105 -62
S1320-5	105 -62
S1320-5	106 -62
S1322-1	108 -26
S1323N3	101 -13
S1324N5	101 -13
S1326N1	101 -18
S1326N1	102 -41
S1326N1	180 - 2
S1326N1	181 - 2
S1327N1	101 -17
S1327N1	102 -42
S1327N1	180 - 1
S1327N1	181 - 1
S1346-1	1 -25

PART NUMBER	FIGURE AND INDEX NO.
S1346-1	72 -10
S1346-1	73 -11
S1346-1	74 -14
S1346-1	75 -11
S1346-1	76 - 9
S1356	1 -44
S1357-3	108 -52
S1359-7	81 - 7
S1360-10	102 -59
S1360-10	103 -67
S1360-10	104 -74
S1360-10	161 -28
S1360-10	200 - 7
S1360-10L	105 -84
S1360-10L	106 -85
S1360-10L	106 -88
S1360-10L	106 -89
S1360-10L	106 -90
S1360-15	102 -60
S1360-15	104 -75
S1360-15L	105 -85
S1360-15L	106 -87
S1360-20	102 -61
S1360-20	102 -62
S1360-20	102 -62A
S1360-20	103 -68
S1360-20	104 -76
S1360-20L	105 -84
S1360-20L	106 -90A
S1360-35	190 -25
S1360-5L	105 -83
S1360-5L	106 -84
S1360-5L	106 -86
S1360-5L	106 -90C
S1362-2	83 - 7
S1362-5	82 -14
S1362-6	82 -14
S1363-1	100 -33
S1363-2	99 -33
S1365-1	180 -39
S1365-1	181 -35
S1366-1	1 -26
S1366-1	49 -99
S1366-2	1 -26
S1366-3	1 -26
S1378-1	1 -27
S1378-2	1 -27
S1378-2	72 -47
S1378-2	73 -42
S1378-2	76 -31
S1384N1	101 -15
S1385N1	101 -19
S1386N1	101 -13
S1387N1	101 -13
S1389-1	1 -28
S1389-1	48 - 4
S1389-1	49 -19
S1389-2	1 -28
S1389-2	48 - 7
S1389-2	49 -17
S1389-3	1 -28
S1389-3	49 -18
S1389-4	1 -28
S1389-4	48 - 2
S1389-5	1 -28
S1389-6	1 -28
S1389-7	1 -28
S1390-5	193 -25
S1390-8	139 -29
S1392N1	101 -19
S1392N1	102 -37
S1392N2	103 -46
S1392N2	104 -44
S1392N2	105 -52

PART NUMBER	FIGURE AND INDEX NO.
S1397-2	2 -10
S1397-3	2 -10
S1397-4	2 -10
S1397-6	2 -10A
S1397-6	3 -31
S1398-1	1 -29
S1398-1	125 -40
S1398-2	1 -30
S1398-2	125 -40
S1407-6	99 -41
S1407-6	100 -44
S1407-6	102 -66
S1407-6	190 - 9
S1407-6	192 -21
S1410N1	100 -32
S1413N1	101 -20
S1413N1	102 -36
S1413N1	103 -45
S1413N1	104 -40
S1413N1	105 -40
S1413N2	105 -40
S1413N2	106 -37
S1414-1	103 -49
S1414-1	104 -50
S1414-1	178 -14
S1414-1	179 - 4
S1414-1	183 -14
S1414-1	184 -35
S1414-1	185 -20
S1414N1	99 -35
S1414N1	100 -34
S1414N1	102 -40
S1414N1	176 - 6
S1414N1	177 -16
S1414N1	180 -10
S1414N1	182 -10
S1414N1	181 - 9
S1415-1	1 -31
S1415-1	24 -30
S1416-1	99 -17
S1416-1	100 -17
S1416-1	102 -46
S1416-1	103 -61
S1418-1	95 -20
S1418-3	95 -20
S1419-1	161 -33
S1426-2	109 - 3
S1432N1	102 -28
S1433-1	2 -35
S1433-1	200 -16
S1438-2	145 -32
S1438-2	191 - 8
S1441-1	1 -32
S1441-1	53 - 5
S1441-1	53 - 6
S1441-1	84 -17B
S1441-1	85 -21
S1441-2	1 -32
S1441-2	138 -10
S1441-2	139 -10
S1441-3	1 -32
S1450-10-15-063	68 - 4
S1450-14A20-016	185 -41
S1450-3A14-.050	108 -33
S1450-3D9-032	68 -67
S1450-309-302	68 -48
S1450-4-10-032	96 -19
S1450-4A11-.063	108 -29
S1450-4A14-032	193 -27
S1450-4H12-050	110 - 6
S1450-5-12-035	55 -26
S1450-5-12-035	55 -30A
S1450-5-14	108 -24B
S1450-5A20-063	24 - 5

PART NUMBER	FIGURE AND INDEX NO.
S1450-5A20-080	24 - 5
S1450-5A20-100	24 - 5
S1450-5A24-040	108 -26B
S1450-5A24-040	139 -15G
S1450-6-14-080	191 -41
S1470N5	101 -13
S1470N9	101 -13
S1470N9	102 -27
S1470N9	103 -33
S1470N9	104 -34
S1470N9	105 -41
S1472N1	181 - 2
S1473N1	177 - 2
S1476N1	181 - 1
S1483-1	76 -36
S1483-2	72 -41
S1483-2	73 -36
S1485D10L	125 -23
S1485D10U	125 -13
S1485D12L	126 - 9
S1485D12L	174 -14
S1485D12U	140 -27
S1485D13U	123 -41
S1485D16U	125 -20
S1485D2	173 - 7
S1485D2	173 -11
S1485D2L	101 -27
S1485D2L	167 -63
S1485D2L	168 -76
S1485D3L	124 -47
S1485D3U	123 -41
S1485D6	165 -12
S1485D8U	181 -14
S1485D80	177 -21
S1486DG12U	126 -11
S1486DG12U	187 -29
S1486DG12U	187 -31
S1486DG6L	165 - 2
S1486DG6L	166 - 2
S1486DG6L	167 - 2
S1486DG6U	167 -12
S1486DG6U	168 -26A
S1486DG7U	167 -12
S1486D26L	68 -29A
S1494-16	184 -54
S1494-6	151 - 5
S1494-8	53 -18
S1494-8	162 - 3
S1494-9	152 -23
S1494-9	153 -22
S1494-9	153 -35
S1494-9	185 -19
S1495-10	1 -33
S1495-10	148 -24
S1495-10	148 -43
S1495-10	180 -15
S1495-10	180 -16
S1495-10	181 -18
S1495-10	184 -53
S1495-10	185 -42
S1495-10-	125 -10
S1495-12	123 -34
S1495-12-	126 - 8
S1495-16	185 -43
S1495-4	1 -33
S1495-4	176 - 7
S1495-4	178 - 9
S1495-4	178 -10
S1495-4	179 -19
S1495-4	179 -20
S1495-4	180 -11
S1495-4	181 -10
S1495-4	182 -22
S1495-4	182 -23

PART NUMBER	FIGURE AND INDEX NO.
S1495-4	183 -24
S1495-4	183 -25
S1495-4	183 -26
S1495-4	184 -17
S1495-4	184 -18
S1495-4	184 -19
S1495-4	184 -20
S1495-4	184 -21
S1495-4	184 -22
S1495-4	185 -14
S1495-4	185 -14A
S1495-4	185 -14B
S1495-4-	177 -17
S1495-6	1 -33
S1495-6	153 -34
S1495-6	166 - 4
S1495-6	167 - 4
S1495-6	168 - 4
S1495-6	168 - 4
S1495-6	168 - 6
S1495-6	178 - 4
S1495-6	178 - 5
S1495-6	178 - 8
S1495-6	178 -22
S1495-6	179 -21
S1495-6	179 -22
S1495-6	179 -30
S1495-6	180 - 3
S1495-6	182 -20
S1495-6	182 -21
S1495-6	182 -24
S1495-6	183 -22
S1495-6	183 -23
S1495-6	183 -27
S1495-6	183 -28
S1495-6	183 -29
S1495-6	184 -11
S1495-6	184 -12
S1495-6	184 -13
S1495-6	184 -14
S1495-6	184 -15
S1495-6	184 -16
S1495-6	184 -64
S1495-6	185 -11
S1495-6	185 -12
S1495-6	185 -13
S1495-6	185 -13A
S1495-6	185 -13A
S1495-6	185 -36
S1495-6-	165 - 4
S1495-6-	177 - 3
S1495-6-	178 -27
S1495-8	1 -33
S1495-8	180 - 7
S1495-8	180 -24
S1495-8	180 -25
S1495-8	180 -30
S1495-8	180 -34
S1495-8	180 -35
S1495-8	181 - 3
S1495-8	181 - 6
S1495-8	181 -25
S1495-8	181 -28
S1495-8	181 -31
S1495-8	182 -48
S1495-8	183 -54
S1495-8	183 -55
S1495-8	183 -57
S1495-8	184 -66
S1495-8	184 -67
S1495-8	184 -69
S1495-8-	177 - 7
S1495-8-	177 -12
S1495-8-	182 -45

PART NUMBER	FIGURE AND INDEX NO.
S1495-8-	182 -46
S1497-4	178 -34
S1497-4	179 -24
S1497-4	182 -25B
S1497-4	183 -33
S1497-4	184 -33
S1497-4	184 -33
S1497-4	184 -33
S1497-4	185 -16
S1497-4	185 -16
S1497-6	178 -33
S1497-6	179 -23
S1497-6	182 -25A
S1497-6	183 -32
S1497-6	183 -53
S1497-6	184 -34
S1497-6	184 -65
S1497-6	185 -15
S1497-6	185 -15
S1499-6LL	183 -52
S1499-6LL-	182 -44
S1500	2 -71
S1500	3 -64
S1501-1	202 - 5
S1505-3	203 - 5
S1517-6	125 -55
S1517-8	123 -38
S1539B4	87 -52
S1539D4	87 -52
S1539J4	87 -52
S1539K4	87 -52
S1539M4	87 -52
S1540-2	97 -18
S1558-1	102 -69
S1558-1	103 -70
S1558-1	104 -57
S1558-1	105 -62
S1558-1	106 -62
S1558-1	106 -64
S1558-1	159 -52
S1573-3	169 -29
S1573-3	170 - 4
S1579-1	190 - 2A
S1588-1	16 -18
S1588-1	17 -18
S1590-4A	33 -55
S1591-2	165 - 7
S1591-2	166 - 7
S1591-2	167 - 7
S1591-2	168 -10
S1592-2A	151 - 8
S1596-60	103 -69
S1596-60	104 -77
S1596-60	105 -86
S1596-60	106 -90B
S1597-1-37.5	123 -47
S1597-1-37.5	191 -42
S1600	2 -71
S1600	3 -64
S1601-26	124 -15
S1601-36	125 - 6
S1605-3	102 -29
S1605-3	103 -39
S1605-6	105 -55
S1605-6	123 -30
S1605-8	104 -48
S1605-8	105 -55
S1605-8	106 -50
S1605-8	123 -30
S1611-1	1 -34
S1611-1	49 -99
S1611-1	49 -99
S1613-3-75	68 -39
S1613-3-75	72 -45

PART NUMBER	FIGURE AND INDEX NO.
S1613-3-75	73 -40
S1613-3-75	76 -40
S1614	1 -45
S1615-6	182 -19
S1618C3	87 -52
S1618D3	87 -52
S1618D3	87 -52
S1618F3	87 -52
S1618H3	87 -52
S1618J3	87 -52
S1618K3	87 -52
S1618M3	87 -52
S1622C3	95 -20
S1622D3	95 -20
S1622D3	95 -20
S1622F3	95 -20
S1622H3	95 -20
S1622J3	95 -20
S1622K3	95 -20
S1622M3	95 -20
S1628-027	66 - 4B
S1628-329	57 -21
S1628-329	58 -26
S1631-8	78 -17
S1635-1	1 -35
S1635-2	1 -35
S1635-3	1 -35
S1636-1	1 -36
S1636-2	1 -36
S1636-3	1 -36
S1637-1	1 -37
S1637-2	1 -38
S1638-1	1 -39
S1638-1	201 - 8
S1638-1	201 -15
S1638-2	1 -40
S1638-2	201 -13
S1638-2	201 -23
S1638-2	201 -23
S1640-12	1 -41
S1640-15	1 -41
S1640-6	1 -41
S1640-9	1 -41
S1641-12	1 -42
S1641-15	1 -42
S1641-6	1 -42
S1641-9	1 -42
S1646-1	138 -17
S1651B1	95 -20
S1651D1	95 -20
S1651J1	95 -20
S1651K1	95 -20
S1651M1	95 -20
S1656-4	2 - 4A
S1660-1	190 -20
S1660-1	190 -37
S1660-1	191 - 3
S1660-1	191 -20
S1660-1	191 -24
S1661-1	102 -70
S1661-1	103 -71
S1661-1	104 -70
S1661-1	105 -68
S1661-1	159 -53
S1661-2	105 -68
S1661-2	106 -72
S1668-1	190 -31
S1668-1	191 -29
S1674-1	145 -18
S1675-1	145 -19
S1693-2	191 -21A
S1701-1	152 -46
S1701-1	152 -47
S1704-1	94 -77

PART NUMBER	FIGURE AND INDEX NO.
S1707-60	103 -69
S1710-1	144 -45B
S1710-1	151 -16
S1711-1	123 -71
S1711-1	125 -50
S1713-1	2 -42B
S1713-1	3 - 9
S1714-1	2 -42A
S1714-1	3 - 8
S1728-1	139 -29
S1746AA13	108 -41
S1746AA13	108 -41
S1746A13	108 -41
S1746BB13	108 -41
S1746B13	108 -41
S1746B13	108 -41
S1746B13	108 -41
S1746B13	108 -41
S174685	98 -20
S1746CC13	108 -41
S1746C13	108 -41
S1746C5	97 -17
S1746DD13	108 -41
S1746D13	95 -20
S1746D13	95 -20
S1746D2	88 -56
S1746D5	97 -17
S1746D5	97 -17
S1746F13	108 -41
S1746F5	97 -17
S1746F5	98 -20
S1746G13	108 -41
S1746G5	98 -20
S1746H13	108 -41
S1746H5	97 -17
S1746H5	98 -20
S1746J13	95 -20
S1746J2	88 -56
S1746J5	97 -17
S1746K13	95 -20
S1746K2	88 -56
S1746K5	97 -17
S1746L13	108 -41
S1746M13	95 -20
S1746M2	88 -56
S1746M5	97 -17
S1746P13	95 -20
S1746P2	88 -56
S1746R13	95 -20
S1746R2	88 -56
S1746S13	95 -20
S1746S2	88 -56
S1746T13	95 -20
S1746T13	108 -41
S1746T2	88 -56
S1746T5	98 -20
S1746U13	108 -41
S1746V13	95 -20
S1746V2	88 -56
S1746V5	98 -20
S1746W13	95 -20
S1746W13	108 -41
S1746W13	108 -41
S1746W13	108 -41
S1746W2	88 -56
S1746W5	98 -20
S1746Y13	95 -20
S1746Y2	88 -56
S1746Y5	98 -20
S1746Z13	108 -41
S1752-1	104 -60
S1752-1	104 -60
S1752-1	166 -54
S1752-2	103 -63

PART NUMBER	FIGURE AND INDEX NO.
S1752-2	104 -73
S1760-1	103 -66
S1760-1	104 -63
S1760-1	104 -64
S1760-1	104 -65
S1760-1	104 -66
S1760-1	152 - 7
S1760-1	152 -30
S1760-1	153 - 7
S1760-1	153 -29
S1760-3	104 -59
S1771-1	104 -70
S1771-1	105 -68
S1771-1	106 -72
S1776-1	33 -47
S1776-3	33 -47
S1777-3	104 -69
S1777-3	105 -70
S1777-3	106 -73
S1777-4	104 -69
S1777-4	105 -70
S1791-1	152 - 5
S1791-1	152 -28
S1791-1	153 - 5
S1791-1	153 -27
S1792	152 - 3
S1792	152 -26
S1793-1	152 -15
S1793-1	152 -44
S1793-1	153 -15
S1793-2	152 -22
S1793-2	153 -21
S1794-1	151 - 5
S1794-1	152 -14
S1794-1	152 -54
S1794-1	153 -14
S1794-1	153 -53
S18-30	147 - 7
S1800-1	152 - 4
S1800-1	152 -11
S1800-1	152 -12
S1800-1	152 -13
S1800-1	152 -16
S1800-1	152 -17
S1800-1	152 -18
S1800-1	152 -21
S1800-1	152 -27
S1800-1	152 -35
S1800-1	152 -36
S1800-1	152 -37
S1800-1	152 -38
S1800-1	152 -39
S1800-1	152 -40
S1800-1	152 -41
S1800-1	152 -53
S1800-1	153 - 4
S1800-1	153 -11
S1800-1	153 -12
S1800-1	153 -13
S1800-1	153 -16
S1800-1	153 -17
S1800-1	153 -18
S1800-1	153 -20
S1800-1	153 -26
S1800-1	153 -38
S1800-1	153 -39
S1800-1	153 -43
S1800-1	153 -44
S1800-1	153 -45
S1800-1	153 -46
S1800-1	153 -52
S1801-10	152 -42
S1801-9	152 -43
S1801-9	153 -47

PART NUMBER	FIGURE AND INDEX NO.
S1802-1	152 -48
S1802-1	153 -50
S1802-2	152 -49
S1803-2	153 -42
S1805-1	153 -40
S1807-1	191 -21A
S1807-1	191 -24A
S1807-2	191 - 4
S1809-1	109 - 2
S1819-3	20 -12
S1823-3	55 -13
S1823-3	56 -13
S1824-1	106 -82
S1824-1	161 -28
S1825-1	152 -48
S1825-1	153 -50
S1826-2	153 -36
S1828-3	153 -40
S1828-4	153 -37
S1828-4	153 -42
S1831-1	193 -11
S1831-1	194 - 9
S1831-1	195 -15
S1834-1	139 -15A
S1834-2	139 -15D
S1843-1	105 -88
S1843-1	106 -91A
S1846DG6L	168 - 2
S1853-1	123 -64
S1853-2	121 -19
S1853-2	126 -23
S1860-2A	11 -12
S1862-1A	22 -18
S1862-1A	22 -20
S1862-1A	22 -21C
S1862-1A	23 -16
S1862-1A	107 -16
S1862-1A	107 -27
S1862-2	6 -48
S1862-2	8 -45
S1862-2	9 -49
S1862-2	31 -46
S1862-2	33 -52
S1862-2A	49 -97A
S1863-2A	107 -15
S1863-2A	107 -26
S1863-3	7 - 5
S1863-3	9 - 5
S1863-3	11 - 4
S1863-3	22 - 6A
S1863-3	22 - 7A
S1863-3	29 -39
S1863-3	30 -46
S1863-3	31 -46
S1863-3	33 -53
S1863-3	34 -29A
S1863-3	35 -30
S1863-3	40 -24
S1863-3	137 - 3
S1863-3	137 -11
S1863-3A	6 -21
S1863-3A	8 -17
S1863-3A	31 -46
S1863-3A	33 -54
S1863-3A	39 -11
S1863-3A	41 -35
S1863-3A	42 -11
S1863-3A	49 -97
S1863-4	41 -34
S1865-1	105 -82
S1876-1	193 -18
S1876-1	194 -17
S1876-1	195 -22
S1878-1	51 -16

PART NUMBER	FIGURE AND INDEX NO.
S1878-1	84 -41
S1878-1	84 -44
S1878-1	85 -29
S1878-1	85 -35
S1880-2	193 -26
S1881-1	73 - 4
S1881-1	75 - 5
S1881-1	76 - 3
S1891-10	165 - 5
S1891-10	166 - 5
S1891-6	167 - 5
S1891-6	168 - 5
S1891-6	168 - 7
S1895-1	107 -21
S1895-1	107 -28
S1898-2	83 - 3
S1914-11	96 - 7
S1914-8	87 - 9
S1914-8	87 -35
S1914-8	88 - 9
S1914-8	88 -36
S1914-8	89 - 9
S1914-8	89 -34
S1914-8	90 -73
S1914-8	91 - 7
S1914-8	92 -20
S1914-8	93 -89
S1914-8	94 -80
S1917-1	190 -38
S1917-1	191 -59
S1933-1	73 - 4
S1933-1	75 - 5
S1933-1	76 - 3
S1938-1	24 -48
S1948-2	82 -31
S1948-2	83 -18
S1948-2	83 -19
S1948-2	83 -20
S1948-2	83 -31
S1948-2-1	1 -47
S1948-2-10	1 -47
S1948-2-11	1 -47
S1948-2-12	1 -47
S1948-2-13	1 -47
S1948-2-14	1 -47
S1948-2-15	1 -47
S1948-2-16	1 -47
S1948-2-17	1 -47
S1948-2-18	1 -47
S1948-2-19	1 -47
S1948-2-2	1 -47
S1948-2-20	1 -47
S1948-2-3	1 -47
S1948-2-4	1 -47
S1948-2-5	1 -47
S1948-2-6	1 -47
S1948-2-7	1 -47
S1948-2-8	1 -47
S1948-2-9	1 -47
S1949-1	173 -12
S1951-4T	123 -80
S1957-2	84 -13
S1957-2	85 -13
S1957-2	93 -11
S1959-1	204 - 8
S1959-1	204 -21
S1959-2	204 -13
S1959-2	204 -25
S1964-3	125 -57
S1974-1	104 -60
S1974-1	166 -54
S1981-1	104 -63A
S1981-1	104 -64A
S1981-1	104 -65A

PART NUMBER	FIGURE AND INDEX NO.
S1981-1	104 -66A
S1981-1	152 - 7
S1981-1	152 -30
S1981-1	153 -29
S1981-5	105 -69
S1981-5	106 -71
S1981-5	161 -55
S1982-1	104 -73
S1982-1	105 -65
S1982-1	106 -66
S1985-1	148 -50
S1988-1	182 -38
S1988-1	183 -46
S1988-1	184 -58
S1991-1	191 -24
S1994-1-1	104 -59A
S1994-1-1	105 -89
S1994-1-1	106 -91
S1995-4	105 -90
S1995-4	106 -91B
S2013-2	93 -64A
S2013-2	94 -33
S2013-2	94 -58
S2013L2	93 -33A
S2014-2	93 -33A
S2014-2	93 -64A
S2014-2	94 -33
S2014-2	94 -58
S202R	82 -39
S202RB	1 -16
S202RB	4 -59
S202RB	52 -12
S202VW	1 -16
S2024-1	139 -11
S2029-1	108 - 3
S2066-1	161 -53
S2071-1	161 -58
S2074-1	108 - 3B
S2074-1	108 - 3C
S2076-1	108 - 3H
S2080-1	108 -46
S2081-1	108 -44
S2081-2	108 -43
S2081-4	108 -49
S2081-5	108 -46A
S2091-5	105 -90
S2091-5	106 -91B
S2092-1	1 -49
S2092-1	85 -39
S2092-2	1 -50
S2092-3	1 -49
S2092-3	106 -18A
S2092-3	106 -23
S2092-30	1 -50
S2092-31	1 -49
S2092-31	85 -41
S2092-4	1 -50
S2092-4	106 -30
S2093-2	191 -41
S2106-2	18 - 2
S2107-1	18 - 1
S2108-1	73 -42B
S2108-1	76 -31B
S2108-2-17.00	197 - 4
S2114-2	191 -41
S2114-2	191 -41
S2116-1	161 -53
S2122-1	105 -86
S2122-2	105 -86
S2127-1-31.25	9 -12
S2127-1-46.94	9 -11
S2135-1	105 -54A
S2135-1	106 -65
S2138-1	68 - 3

PART NUMBER	FIGURE AND INDEX NO.
S2160-1	105 -79
S2160-1	105 -80
S2160-1	105 -81
S2160-1	105 -82
S2160-1	106 -79
S2160-1	106 -80
S2160-1	106 -81
S2160-1	106 -82
S2160-4	105 -78
S2160-4	106 -78
S2160-5	105 -77
S2160-5	106 -78
S2161-1	106 -82
S2161-2	106 -83
S2191-8-4	55 -38
S2191-8-4	68 -25
S2195-1	73 -42A
S2195-1	76 -31A
S2198-3	141 -26
S2209-1	185 -15A
S2209-1	185 -37
S2209-3	185 -30
S2240AA103	108 -40
S2240AA103	108 -40
S2240AA108	108 -41
S2240AA108	108 -41
S2240AA201	108 - 3A
S2240AA201	108 - 3A
S2240A103	108 -40
S2240A108	108 -41
S2240A201	108 - 3A
S2240BB103	108 -40
S2240BB108	108 -41
S2240BB201	108 - 3A
S2240B103	108 -40
S2240B103	108 -40
S2240B103	108 -40
S2240B103	108 -40
S2240B108	108 -41
S2240B108	108 -41
S2240B108	108 -41
S2240B108	108 -41
S2240B201	108 - 3A
S2240B201	108 - 3A
S2240B201	108 - 3A
S2240B201	108 - 3A
S2240CC103	108 -40
S2240CC108	108 -41
S2240CC201	108 - 3A
S2240C103	108 -40
S2240C103	108 -40
S2240C108	108 -41
S2240C201	108 - 3A
S2240DD103	108 -40
S2240DD108	108 -41
S2240DD201	108 - 3A
S2240F103	108 -40
S2240F108	108 -41
S2240F201	108 - 3A
S2240G108	108 -41
S2240G201	108 - 3A
S2240H103	108 -40
S2240H108	108 -41
S2240H201	108 - 3A
S2240L103	108 -40
S2240L108	108 -41
S2240L201	108 - 3A
S2240T103	108 -40
S2240T108	108 -41
S2240T201	108 - 3A
S2240U103	108 -40
S2240U108	108 -41
S2240U201	108 - 3A
S2240W103	108 -40

PART NUMBER	FIGURE AND INDEX NO.
S2240W103	108 -40
S2240W103	108 -40
S2240W108	108 -41
S2240W108	108 -41
S2240W108	108 -41
S2240W201	108 - 3A
S2240W201	108 - 3A
S2240W201	108 - 3A
S2240Z103	108 -40
S2240Z108	108 -41
S2240Z201	108 - 3A
S225-1	4 -20
S225-1	27 - 8
S225-3	20 -35
S226-3	28 -31
S226-3	29 -27
S226-3	30 -36
S237-2	10 -12
S237-2	11 -14
S237-2	11 -14
S237-2	14 - 7
S237-2	15 - 8
S237-2	31 -36
S237-2	32 -21
S237-2	49 -96
S237-4	20 -33
S272-17	163 -13
S272-17	187 -46
S272-207	166 -28
S272-207	167 -30
S272-207	168 -43
S272-207	171 - 3
S272-209	171 -15
S272-215	171 -18
S290D1032	139 -15C
S290D832	4 -51
S290D832	4 -61
S290D832	4 -66
S292-1	1 -17
S292-11	1 -17
S292-12	1 -17
S292-12	167 -12A
S292-12	167 -12B
S292-12-	168 -21
S292-14	1 -17
S292-16	1 -17
S292-2	1 -17
S292-28	1 -17
S292-3	1 -17
S292-4	1 -17
S292-5	1 -17
S292-6	1 -17
S292-8	1 -17
S292-8	161 -29
S327-2	33 -21
S329	4 -19
S330-2	14 - 9
S330-2	15 -10
S338-7	47 -14
S339-P2	47 -14
S347-1	31 -38
S347-1	32 -46
S347-1	33 -47
S350	16 -17
S350	17 -18
S351	122 -13
S351	123 -44
S351	124 -43
S354-3	43 -13
S372-2	35 -56
S378-1	157 -11
S378-1	188 -12
S378-1L	142 -55
S378-1L	143 -46

PART NUMBER	FIGURE AND INDEX NO.
S378-1L	144 -51
S378-1L	156 -12
S378-1L	157 -15
S378-1L	159 -10
S378-2	158 -21
S378-2	158 -25
S378-2	158 -29
S378-2	158 -39
S378-2	159 - 5
S378-3	155 -17
S378-3L	149 -54
S378-3L	150 -38
S378-3L	154 -18
S378-3L	154 -22
S378-3L	154 -26
S378-3L	155 -18
S378-3L	155 -22
S378-3L	160 -19
S378-4	148 -10
S378-4	149 -12
S378-4	149 -17
S378-4	149 -24
S378-4	149 -29
S378-4	149 -33
S378-4	149 -37
S378-4	149 -42
S378-4	150 - 3
S378-4	150 - 8
S378-4	150 -13
S378-4	150 -17
S378-4	150 -21
S378-4	150 -26
S378-4	158 -44
S378-4	160 -14
S394	149 -47
S394	150 -31
S394	158 -34
S430-1	161 -41
S51-10	1 -15
S51-12	1 -15
S51-16	1 -15
S51-32	1 -15
S51-4	1 -15
S51-6	1 -15
S51-6	53 -12
S51-8	1 -15
S53K24T	140 -19
S8S	151 -21
TA3-716D9	172 -26
T55288	187 -47
UA526361-1	187 -21
V3L-3-D9	159 -43
WRM10	200 -10
WRM15	200 -13
WRM20	200 -12
WRM25	200 - 9
WRM30	200 -11
WRM39	200 -15
WRM44-12	200 -14
W98292-180	117 -27
W98292-180	118 -43
W98292-180	119 -35
W98292-2-180	115 -33
W98292-2-180	116 -29
W98292-2180	121 -41
XH99608-F1099	102 -18
XH99608F1099	84 -18
XH99608F1099	85 -17
XS49306-K110	82 -10A
ZR075-11.5	201 -26
01	108 -72
0300C	125 - 1
0300D	125 - 1
0300D	125 - 1

PART NUMBER	FIGURE AND INDEX NO.
0310196-12	145 - 6
0310196-12	187 -19
0310196-5	145 - 7
0310196-5	187 -20
0310293-14	25 - 1
0310293-2	25 - 1
0310295	25 - 2
0310297-1	25 - 3
0310298-1	25 - 4
0310332	25 - 7
0310352	25 - 6
0310352-1	25 - 6
0310362-5	25 -13
0310422	25 - 9
0310422-1	25 - 9
0311018-10	101 -26
0311018-11	100 -37
0311018-11	101 -25
0311018-12	100 -37
0311018-9	101 -25
0311038-2	99 - 7
0311038-2	102 -47
0311240-17	16 -23
0311240-17	16 -31
0311240-17	17 - 4
0311319-1	49 -60
0311319-1	80 -13
0311319-1	81 -20
0311319-2	49 -61
0311319-2	80 -13
0311360-4	16 - 7
0311360-4	17 -15
0311360-5	16 - 7A
0311360-5	17 -16
0311538-10	99 -10
0311538-10	100 -10
0311538-12	99 -10
0311538-12	100 -10
0311538-12	102 -45
0311538-12	165 -46
0311538-12	166 -54
0311623-1	80 -14
0311623-1	81 -21
0311752-16	28 -33
0311777	99 - 8
0312155-10	190 -17
0312155-10	191 -17
0312155-10	192 - 5
0312155-10	205 - 5
0320E2D-ENPL3107	123 - 1
0320E2D-ENPL4090	123 - 1
0334128	26 -53
0334128-3	26 -53
0400123-1	82 -32
0400123-1	83 -32
0400135-1	2 -54
0400202-2	2 -57
0400202-3	2 -58
0400210-1	2 -68
0400210-1	3 -24
0400210-1	103 -30
0400210-1	104 -32
0400210-2	3 -24
0400210-2	105 -96
0400210-2	106 -95A
0400213-4	108 -68
0400213-5	108 -67
0404013-1	3 -41
0405002-3	2 -63
0405018-1	3 -45
0405018-2	3 -46
0405020-2	3 -50
0405022-2	3 -51
0405027-1	3 -54

PART NUMBER	FIGURE AND INDEX NO.
0405027-3	3 -55
0405027-5	3 -56
0405027-6	3 -57
0405028-1	3 -58
0405028-3	3 -58
0405029-1	3 -59
0405029-2	3 -59
0409007-2	159 -51
0409007-4	159 -44
0411030-5	84 - 4
0411030-5	85 - 4
0411030-6	84 - 3
0411030-6	85 - 3
0411047	147 - 8
0411051	149 - 6
0411051-4	149 - 8
0411059-1	101 - 1
0411059-1	102 -13
0411059-1	104 -27
0411059-3	103 -15
0411059-3	105 -21
0411059-4	201 -19
0411099-3	107 -10
0411129	34 - 5
0411129	35 - 5
0411174-3	30 -11
0411185-7	73 -41
0411185-9	72 -46
0411185-9	73 -41
0411221-4	147 - 1
0411232	149 -14
0411255	147 -11
0411257	147 -14
0411257	148 -24
0411257	148 -43
0411293	84 -25
0411306-13	145 -22
0411306-14	145 -21
0411307	145 - 8
0411307	145 -37
0411326-4	147 -17
0411419	156 - 6
0411420	38 - 7
0411420	157 - 9
0411421-2	154 -29
0411422	156 - 9
0411447	28 -27
0411523	156 -23
0411523	157 -26
0411524	156 -25
0411524	157 -28
0411549	145 -15
0411550	145 -14
0411552	77 - 6
0411552-2	77 - 6
0411557	77 -11
0411559	77 -17
0411562	145 -25
0411563	145 -40
0411564	145 -33
0411564-3	145 -34
0411565	145 -24
0411567-2	77 - 8
0411573-1	145 -41
0411575-11	77 -19
0411576	72 -26
0411576	74 -21
0411582	44 -18
0411590-1	79 -
0411590-3	79 - 4
0411591	79 - 3
0411592-1	79 - 5
0411665	79 - 1
0411680	28 - 4

PART NUMBER	FIGURE AND INDEX NO.
0411680	29 - 4
0411680	49 -33
0411778-2	145 -30
0411778-3	145 - 4
0411783	144 -45D
0411783	151 -18
0411783	158 -36
0411840	84 -26
0411840	84 -26
0411851	72 -36
0411851	73 -28
0411880	149 - 3
0411881	149 - 4
0411886	72 -27
0411886	74 -22
0411897-3	101 -24
0411897-3	101 -28
0411897-3	172 -44
0411897-3	186 -10
0412007-1	191 - 2
0412007-1	192 -16
0412007-8	123 -10A
0412007-9	190 -11
0412467	49 -90
0412467	52 - 6
0412496	34 - 9
0412496	35 - 9
0413028-10	162 - 8
0413028-4	162 - 9
0413028-8	162 - 9
0413028-9	162 - 9
0413126-10	101 -21
0413126-3	101 -22
0413138	193 -19
0413138	194 -18
0413138	195 -23
0413140-5	193 -24
0413140-5	194 -22
0413140-5	195 -27
0413141-1	193 - 6
0413141-1	194 - 8
0413141-1	195 -11
0413157	10 -14
0413163-11	138 - 8
0413163-11	139 - 8
0413163-18	138 - 7
0413163-18	139 - 7
0413163-201	139 - 3
0413163-202	139 - 3
0413163-207	139 - 3
0413163-208	139 - 3
0413163-23	138 - 3A
0413163-23	139 - 3
0413163-24	138 - 3A
0413163-24	139 - 3
0413163-43	138 - 8
0413163-43	139 - 8
0413163-7	138 - 6
0413163-7	139 - 6
0413163-8	138 - 5
0413163-8	139 - 5
0413163-9	138 - 5
0413163-9	139 - 5
0413179	2 - 1
0413195-3	72 -20
0413195-3	74 -23
0413195-5	78 -24
0413203	138 -11
0413203	139 -11
0413204-2	31 -52
0413204-3	31 -52
0413204-3	32 -34
0413204-3	33 -34
0413205-10	127 -11

PART NUMBER		FIGURE AND INDEX NO.
0413205-10		190 -26
0413205-10		192 -13
0413205-12		127 -11
0413205-12		190 -12
0413213-10		148 -45
0413213-12		148 -45
0413213-17		148 -45
0413213-2		147 -24
0413213-20		148 -45
0413213-23		148 -45
0413216		147 -26
0413216		148 -47
0413216-4		147 -27
0413216-4		148 -48
0413216-6		148 -49
0413216-8		148 -49
0413228		138 -14
0413228		139 -14
0413228		139 -15F
0413233		138 - 1
0413233		139 - 1
0413235		82 -13
0413247		16 -18
0413247		17 -18
0413247		101 - 2
0413247		102 -16
0413247		103 -16
0413247		104 -30
0413247		105 -22
0413247		106 -22
0413257		138 - 9
0413257		139 - 9
0413307-13		54 - 7
0413307-18		53 -11
0413307-21		53 - 3
0413307-5		53 - 7
0413307-6		53 - 8
0413307-7		53 - 9
0413322-3		72 -35
0413323-4		72 -34
0413323-7		80 - 8
0413323-9		73 -26
0413347-1		138 -15
0413347-1		139 -15
0413354-1		53 - 7
0413372-5		148 -42
0413416-4		151 -22
0413483-1		162 - 1
0413484-10	◻	83 - 4
0413484-11	◻	202 - 3
0413484-12	◻	83 - 4
0413484-13	◻	202 - 3
0413484-2	◻	82 -11
0413484-4	◻	202 - 3
0413484-8	◻	83 - 4
0413484-9	◻	202 - 3
0413485-1		162 - 8
0413485-2		162 - 8
0413495-1		30 - 5
0413495-1		194 -19
0413495-1		195 -24
0413495-2		194 -20
0413495-2		195 -25
0413495-3		194 -21
0413495-3		195 -26
0413503-2		194 -12
0413503-8		195 -12
0413517-12		108 -63
0413517-13		108 -62
0413522-2		105 -12A
0413522-2		105 -28A
0413522-2		106 -18A
0413522-3		105 -28A
0413523-4		105 -21

PART NUMBER		FIGURE AND INDEX NO.
0413523-4		105 -21
0413523-4		106 -22
0413527-4	◻	105 -25
0413530-1		48 - 9
0413531-31	◻	106 -24
0413531-4	◻	105 -25
0413531-59	◻	106 -24
0413532-2	◻	105 -25
0414013-4		194 - 7
0414013-4		195 - 8
0414013-6	◻	194 - 1
0414013-7	◻	194 - 4
0414013-7	◻	195 - 7
0414013-9	◻	195 - 1
0414014-1		30 -11
0414014-2		30 -11
0414044-1		148 -52
0415010-1		108 - 3J
0417010-2		78 - 1
0422130		165 -54
0422130		166 -57
0422130		167 - 7A
0422130		168 -11A
0422229-11		12 -20
0422229-16		13 -22
0422229-3		12 -20
0422280		19 - 7
0422280		150 -51
0422291		10 - 3
0422291		11 - 3
0422292		10 - 9
0422292		11 - 8
0422292		162 - 7
0422344		31 -56
0422344		32 -47
0422344		33 -51
0422344		52 -16
0422356-1		151 -10
0422356-2		151 -10
0422357-1		151 -15
0422358-1		151 -14
0422406-1		13 -19
0422406-2		13 -19
0422411-1		13 -18
0422411-2		13 -18
0422412-1		13 -15
0422412-2		13 -15
0422414-1		13 -17
0422414-2		13 -17
0423006-21		4 -23
0423006-22		4 -23
0423007-1		4 -29
0423007-1		4 -36
0423008-4		6 -52
0423008-4		8 -48
0423008-5		6 -52
0423008-5		8 -48
0423008-8		6 -49
0423008-9		6 -49
0423542-6		196 - 5
0423564-1		4 -36
0423564-2		4 -36
0425134		165 -30
0426011-4		5 - 7
0426011-4		16 - 8B
0426011-4		17 -16C
0426011-5		5 - 5
0426013-1		16 -26B
0426013-1		17 - 3B
0426013-2		5 - 5
0426015-1		5 - 8
0426015-1		16 - 8
0426015-1		17 -16A
0426209-3		6 -44A

PART NUMBER	FIGURE AND INDEX NO.
0426209-3	7 -43
0426209-3	8 -40A
0426209-3	9 -45
0432123	24 -31
0432126	24 -43
0432134-1	156 - 4
0432134-1	157 - 3
0432138-16	156 -10
0432138-16	157 -10
0432138-6	156 -28
0432138-6	157 -30
0432138-7	156 -11
0432155	24 -23
0433007	23 -18
0441130-2	67 -47
0441141-3	67 -33
0441141-4	67 -33
0441156-16	62 -
0442017-3	57 - 9
0442017-3	58 - 3
0442017-7	57 - 9
0442017-7	58 - 3
0442506-1	57 -27A
0442506-1	58 -32A
0442506-2	57 -39A
0442506-2	58 -44A
0442506-8	57 -38B
0442506-8	58 -43B
0442506-9	57 -38D
0442506-9	58 -43D
0442512-1	65 -
0450030-1	203 - 7
0450032-1	203 -14
0450033-1	203 -15
0450036-1	203 -29
0450191-1	124 -16
0450209	133 -39
0450209	136 -25
0450227-12	135 -69
0450227-15	135 -70
0450258	142 -26
0450262	133 - 3A
0450277-12	134 -58
0450277-13	134 -59
0450277-14	134 -60
0450277-15	134 -61
0450277-3	133 -40
0450277-3	136 -24
0450283	122 -19A
0450286	31 -50
0450286	32 -44
0450286	33 -45
0450286	39 -10
0450286	40 -17
0450286	41 - 8
0450286	42 -10
0450286-1	126 -36
0450311	169 -22
0450311-2	122 -21
0450311-2	123 -41
0450311-3	169 -45
0450311-3	170 -25
0450311-4	124 -32
0450311-5	122 -16
0450311-5	122 -31
0450311-5	122 -38
0450311-5	123 -76
0450311-5	124 -28
0450311-5	125 -41
0450311-5	138 -35
0450311-5	139 -42
0450311-5	140 -30
0450311-5	141 -10
0450314	11 -10

PART NUMBER	FIGURE AND INDEX NO.
0450338-14	131 - 9
0450404-1	187 -47
0450404-200	163 -20
0453003-1	40 -11
0453003-1	41 - 9
0453003-11	40 -11B
0453003-11	41 - 9A
0453003-12	41 - 9A
0453003-9	40 -11A
0453003-9	41 -10
0470102-1	103 -69
0500037-2	192 -11
0500037-4	127 - 9
0500037-4	190 -25
0500038-1	192 -12
0500044-10	39 -21
0500044-10	40 -10
0500044-10	41 -12
0500044-10	42 -22
0500044-11	39 -23
0500044-11	42 -20
0500044-12	189 -10
0500044-13	189 - 2
0500044-14	189 - 2
0500044-15	189 - 4
0500044-16	189 - 4
0500044-17	189 - 3
0500044-18	189 - 3
0500044-19	189 - 5
0500044-20	189 - 6
0500044-21	189 - 5
0500044-23	39 -22
0500044-23	40 - 7
0500044-23	41 -13
0500044-23	42 -19
0500044-24	189 -17
0500044-25	189 -17
0500044-27	187 - 3
0500044-28	187 - 4
0500044-29	187 - 5
0500044-3	189 - 9
0500044-30	187 - 6
0500044-31	187 - 7
0500044-32	187 - 8
0500044-33	187 - 9
0500044-34	187 -10
0500044-35	39 -23
0500044-35	40 - 8
0500044-35	41 -14
0500044-37	40 -11B
0500044-37	41 - 9A
0500044-38	40 -11B
0500044-38	41 - 9A
0500044-4	189 - 9
0500044-5	189 - 8
0500044-6	189 - 1
0500044-7	189 - 7
0500044-8	189 - 7
0500044-9	39 -20
0500044-9	40 - 9
0500044-9	41 -11
0500044-9	42 -21
0500051-3	2 -32
0500051-4	2 -32
0500052-1	99 -37
0500053-1	100 -41
0500062-DA10	191 -12
0500062-DA12	190 -37
0500062-PA1	190 -11A
0500062-PA1	192 -22
0500062-PA11	190 -11B
0500062-PA11	191 -10
0500062-PA18	191 -23
0500062-PA23	191 -11

PART NUMBER	FIGURE AND INDEX NO.
0500062-PA31	190 -11C
0500062-PC7	190 -22
0500062-PC7	191 -22
0500062-PC7	205 - 8
0500062-PC8	190 -23
0500084-1	2 -22
0500084-1	147 -29
0500085-1	2 -31
0500085-2	2 -30
0500091-4	2 -27
0500103-101	84 -24
0500105-278	142 -14
0500106-118	165 - 6
0500106-177	165 -13
0500106-178	165 -11
0500106-178	166 -10
0500106-179	165 -10
0500106-179	166 -11
0500106-182	142 - 6
0500106-183	142 - 7
0500106-189	165 -13
0500106-194	142 -13
0500106-229	176 - 3
0500106-242	165 -42
0500106-243	165 -44
0500106-261	161 -27
0500106-281	67 -36
0500106-281	142 -16
0500106-282	67 -36
0500106-282	142 -17
0500106-285	142 -20
0500106-294	126 -14
0500106-300	174 - 1
0500106-302	174 -13
0500106-303	53 -14
0500106-304	166 -55
0500106-306	125 -23
0500106-307	125 - 9
0500106-308	165 -48
0500106-309	124 -39
0500106-309	124 -40
0500106-309	165 -50
0500106-310	165 -51
0500106-313	174 - 3
0500106-315	180 -33
0500106-344	165 -34
0500106-345	165 -38
0500106-350	186 - 4
0500106-352	126 - 7
0500106-364	180 -32
0500106-364	181 -30
0500106-365	166 -50
0500106-365	167 -40
0500106-366	156 -52
0500106-366	167 -41
0500106-378	182 -43
0500106-378	183 -51
0500106-378	184 -63
0500106-379	67 -36
0500106-379	142 -16
0500106-380	67 -36
0500106-380	142 -17
0500106-53	161 - 1
0500106-54	161 - 4
0500106-83	165 - 8
0500106-83	166 - 8
0500106-83	167 - 8
0500106-83	168 -12
0500109-1	2 -20
0500109-2	2 -20
0500109-3	2 -21
0500109-3	147 -28
0500110-1	2 -33
0500118-1	166 - 6

PART NUMBER	FIGURE AND INDEX NO.
0500118-1	167 - 6
0500118-10	166 -46
0500118-100	186 - 4
0500118-101	123 -17
0500118-102	167 -42
0500118-102	168 -72
0500118-105	122 -39
0500118-105	165 -47
0500118-105	166 -55
0500118-105	168 -72
0500118-109	166 -50
0500118-109	168 -69
0500118-11	186 - 2
0500118-110	166 -52
0500118-110	168 -70
0500118-116	168 -18
0500118-117	168 -19
0500118-118	168 - 8
0500118-119	168 - 9
0500118-12	100 -27
0500118-122	184 -63
0500118-123	168 - 9
0500118-124	168 - 8
0500118-126	68 -28
0500118-126	144 - 1
0500118-127	68 -28
0500118-127	144 - 2
0500118-128	144 - 4
0500118-129	144 - 5
0500118-29	166 -13
0500118-29	167 -13
0500118-29	168 -25
0500118-30	166 -14
0500118-30	167 -14
0500118-30	168 -26
0500118-31	166 -38
0500118-31	168 -61
0500118-33	166 -15
0500118-33	167 -15
0500118-33	168 -27
0500118-34	166 -16
0500118-34	167 -16
0500118-34	168 -28
0500118-37	182 -25
0500118-37	183 -30
0500118-38	179 -25
0500118-38	183 -31
0500118-39	166 -46
0500118-40	67 -36
0500118-40	142 -17
0500118-41	67 -36
0500118-41	142 -16
0500118-42	166 -10
0500118-42	167 -10
0500118-43	166 -11
0500118-43	167 -11
0500118-61	67 -36
0500118-61	143 - 1
0500118-62	67 -36
0500118-62	143 - 2
0500118-63	143 - 8
0500118-64	143 - 6
0500118-65	143 - 9
0500118-66	143 -12
0500118-67	143 -11
0500118-70	123 -31
0500118-74	167 -38
0500118-74	168 -53
0500118-75	167 -38B
0500118-75	168 -51
0500118-76	67 -36
0500118-76	143 - 2
0500118-77	67 -36
0500118-77	143 - 1

PART NUMBER		FIGURE AND INDEX NO.
0500118-78		166 -59
0500118-78		167 -52
0500118-78		168 -78
0500118-80		167 - 6
0500118-84		143 - 1
0500118-85		143 - 2
0500118-86		143 - 8
0500118-86		144 -11
0500118-87		143 - 6
0500118-87		144 - 9
0500118-88		143 - 9
0500118-88		144 -12
0500118-89		143 -12
0500118-89		144 -15
0500118-90		143 -11
0500118-90		144 -14
0500118-91		143 - 1
0500118-92		143 - 2
0500118-93		166 -58
0500118-93		168 -68
0500118-95		167 -47
0500118-95		168 -58
0500118-96		103 -43
0500118-96		104 -56
0500118-96		105 -60
0500118-96		106 -61
0500118-96		123 -72
0500118-97		99 -27
0500118-97		186 - 2
0500118-98		165 -40
0500118-98		166 -46
0500118-98		168 -73
0500118-99		167 -43
0500118-99		168 -73
0500119-1		2 -25
0500119-2		2 -26
0500120-2		108 -19
0500124-1		2 -23
0500124-1		147 -31
0500124-2		2 -24
0500124-2		147 -30
0500125-1		2 -38
0500125-1		2 -48
0500125-29		2 -50
0500125-31		2 -51
0500125-4		2 -39
0500125-6		2 -41
0500127-1		2 -28
0500128-1		2 -34
0500130-1		2 -13
0500130-1		190 -18
0500130-1		192 - 7
0500210-105	#	95 - 3
0500210-106	#	84 -23A
0500210-106	#	84 -23B
0500210-107		95 - 4
0500210-108		82 -15
0500210-108	¤	82 -15
0500210-108	¤	83 - 9
0500210-11		82 - 6
0500210-111	#	95 - 3
0500210-113	#	95 -
0500210-114	#	95 -23
0500210-115	#	95 -23
0500210-116	#	95 -33
0500210-117	#	95 -32
0500210-12		82 - 7
0500210-122	#	95 - 3
0500210-123	#	95 - 3
0500210-125	#	95 -
0500210-128	#	88 -10
0500210-129	#	88 -
0500210-130	#	88 -
0500210-131		83 -11

PART NUMBER		FIGURE AND INDEX NO.
0500210-132	¤	82 -22
0500210-132	¤	83 -17
0500210-135	¤	82 -23
0500210-135	¤	83 -19
0500210-139	#	95 -
0500210-143	#	95 -23
0500210-144	#	95 -23
0500210-145	#	95 - 3
0500210-146	#	95 - 3
0500210-149	#	88 -
0500210-15		84 -23
0500210-150		95 - 4A
0500210-151		95 - 4
0500210-152		95 -34
0500210-153		95 -34
0500210-154	#	88 -16
0500210-155		88 -11
0500210-155		89 -11
0500210-156		88 -17
0500210-16		84 -22
0500210-162	#	95 -
0500210-163	#	95 -23
0500210-164	#	95 -23
0500210-165	#	95 - 3
0500210-166	#	95 - 3
0500210-167		95 - 4
0500210-168		95 - 4A
0500210-17		82 -38
0500210-172	#	95 -33
0500210-173	#	88 -
0500210-177	#	95 -32
0500210-178	#	88 -10
0500210-20	#	87 -
0500210-200	#	87 - 1
0500210-201	#	87 -14
0500210-202	#	88 - 1
0500210-203	#	88 -15
0500210-204	#	88 -15
0500210-205	#	88 - 1
0500210-206	#	88 -15
0500210-207	#	88 - 1
0500210-208	#	88 -15
0500210-209	#	88 - 1
0500210-23	¤	84 -14
0500210-24	#	87 -15
0500210-24	#	88 -16
0500210-24	#	90 -16
0500210-24	#	91 -15
0500210-25	¤	84 -15
0500210-26	#	87 -10
0500210-26	#	88 -10
0500210-26	#	90 -10
0500210-26	#	91 - 8
0500210-28	#	95 -
0500210-29	#	95 -23
0500210-30	#	95 -23
0500210-31	#	95 - 3
0500210-32		95 - 4
0500210-33	#	95 -32
0500210-34	#	95 -33
0500210-39	¤	82 -22
0500210-40	¤	82 -21
0500210-41	¤	82 -21
0500210-42	¤	84 -16
0500210-43	¤	82 -23
0500210-44	¤	82 -24
0500210-44	¤	83 -20
0500210-47		84 -39
0500210-48		82 -34
0500210-48		83 -33
0500210-49		82 -35
0500210-49		83 -34
0500210-5	#	82 - 1
0500210-50		80 -11

PART NUMBER		FIGURE AND INDEX NO.
0500210-50		81 -18
0500210-69		82 -16B
0500210-75		84 -23A
0500210-76	#	84 -24A
0500210-76	#	85 -36
0500210-81	¤	84 - 8
0500210-82	¤	84 - 9
0500210-83	#	84 -23A
0500210-94	¤	82 -21
0500210-95	¤	84 -15
0500210-95	¤	85 -15
0500210-96	¤	84 -15
0500210-97	¤	84 -14
0500210-97	¤	85 -14
0500210-98	¤	82 -21
0500210-99		84 -39
0500210-99		85 -16
0500211-1		84 - 1
0500211-2		84 - 2
0500211-3		84 - 1
0500211-4		84 - 2
0500212-1		72 - 3
0500212-2		74 - 4
0500212-3		72 - 3
0500212-4		74 - 4
0500213-1		84 -11
0500213-2		84 -12
0500213-3		84 -11
0500213-4		84 -12
0500217-1		84 - 1
0500217-2		84 - 2
0500217-3		72 - 3
0500217-4		74 - 4
0500217-5		84 -11
0500217-6		84 -12
0500223-3		108 - 1
0500226-1		95 - 5
0500228-2		108 -23
0500228-3		108 -25
0500228-5		108 -24A
0500229-2		49 -66
0500230-2		82 -26
0500230-2		83 -24
0500230-3		82 -37
0500230-3		83 -36
0500233-1	¤	84 -40
0500233-1	¤	85 -34
0500233-4	¤	85 -34
0500235-1		28 -44
0500235-1		29 -38
0500236-1		84 -37
0500240-1		84 - 1
0500240-10		84 -12
0500240-2		84 - 2
0500240-5		72 - 3
0500240-6		74 - 4
0500240-9		84 -11
0500242-1		166 -29
0500242-2		167 -31
0500242-2		168 -44
0500246-11		2 -19
0500246-11		166 -35
0500247-1		2 -29
0500248-1		2 -37
0500249-1		2 -40
0500250-1		2 -42
0500251-1	#	84 - 1
0500251-10	#	84 -12
0500251-2	#	84 - 2
0500251-5	#	73 - 3
0500251-6	#	75 - 4
0500251-9	#	84 -11
0500254-1		2 -16
0500255-1		2 -34

PART NUMBER		FIGURE AND INDEX NO.
0500258-1	#	84 - 1
0500258-1	#	84 - 1
0500258-10	#	84 -12
0500258-10	#	84 -12
0500258-2	#	84 - 2
0500258-2	#	84 - 2
0500258-27	#	84 - 1
0500258-28	#	84 - 2
0500258-29	#	73 - 3
0500258-30	#	75 - 4
0500258-31	#	84 -11
0500258-32	#	84 -12
0500258-40	#	76 - 3
0500258-41	#	76 - 3
0500258-5	#	73 - 3
0500258-5	#	73 - 3
0500258-6	#	75 - 4
0500258-6	#	75 - 4
0500258-9	#	84 -11
0500258-9	#	84 -11
0500262-1		2 -55
0500263-1		2 -56
0500266-2		2 -59
0500276-1		110 - 4
0500276-2		110 - 4
0500310-1		108 -31
0500312-2		108 -28
0500313-1		108 -30
0500315-1		169 -48
0500315-2		169 -49
0500401-1		2 -52
0500402-1		2 -53
0500403-1	¤	84 -42
0500403-1	¤	85 -27
0500404-1		2 -46
0500405-1		2 -47
0500417-1		187 -55
0501019-1		108 -22
0501022-1		108 -50
0501030-1		139 -16
0505002-1		104 -16A
0505005-1		3 -21
0505006-1		2 -16
0505006-1		3 -30
0505007-1		3 -29
0505007-1		84 -20
0505008-2		3 -18
0505008-7		3 -16
0505008-8		3 -17
0505009-2		2 -70
0505009-2		3 -26
0505009-2		137 - 7
0505009-3		3 -26A
0505009-3		106 -96
0505009-3		137 -16
0505011-1		3 - 6
0505011-1		123 -27
0505012-1		3 -19
0505012-2		3 -19
0505015-1		3 -11A
0505015-2		3 -11A
0505017-1		3 -15
0505020-2		3 - 5A
0505020-2		104 -16C
0505020-2		105 -61
0505021-3		3 -32
0505021-4		3 -33
0505021-5		3 -34
0505025-4		3 -32A
0505025-5		3 -33A
0505025-6		3 -34A
0505026-1		3 -44
0505026-2		3 -44
0505027-1		3 -42
0505027-1		105 -99
0505030-1		3 -36A
0505031-1		3 -38A
0505032-1		3 -37A
0505033-1		3 -39
0505034-1		3 -32B
0505034-2		3 -33B
0505034-3		3 -34B
0505036-1		3 -47
0505037-1		3 -48
0505038-1		3 -49
0505042-2		106 -95
0505043-1		3 -29A
0505043-1		85 -42
0505044-1		3 -61
0505044-2		3 -62
0505044-3		3 -60
0505044-4		3 -60
0505046-1		3 -63
0505046-2		3 -64
0509002-1		166 -71
0509002-2		166 -73
0509003-1		133 -51
0510105-113		149 - 2
0510105-113		150 - 2
0510105-121		158 -13
0510105-122		158 -17
0510105-13		149 - 2
0510105-13		150 - 2
0510105-144		156 -18
0510105-144		157 -21
0510105-145		156 -19
0510105-145		157 -22
0510105-157		156 -17
0510105-158		156 -16
0510105-159		158 - 1
0510105-160		158 - 2
0510105-161		158 -11
0510105-162		158 -12
0510105-163		158 - 6
0510105-164		158 - 7
0510105-172		149 - 1
0510105-193		159 - 1
0510105-194		159 - 2
0510105-205		160 - 1
0510105-206		160 - 2
0510105-207		160 - 6
0510105-208		154 - 8
0510105-208		155 - 7
0510105-209		154 -12
0510105-209		155 -11
0510105-21		158 -13
0510105-210		154 -13
0510105-210		155 -12
0510105-213		148 -32
0510105-214		148 -38
0510105-215		148 -37
0510105-216		148 -41
0510105-217		150 -
0510105-217		150 - 1
0510105-22		158 -17
0510105-220		157 -19
0510105-221		157 -20
0510105-224		150 - 1
0510105-232		144 -45A
0510105-305		160 - 1
0510105-306		160 - 2
0510105-307		160 - 6
0510105-308		154 - 8
0510105-308		155 - 7
0510105-309		154 -12
0510105-309		155 -11
0510105-310		154 -13
0510105-310		155 -12
0510105-313		148 -32
0510105-314		148 -38
0510105-315		148 -37
0510105-316		148 -41
0510105-317		150 - 1
0510105-320		157 -19
0510105-321		157 -20
0510105-324		150 - 1
0510105-334		188 - 7
0510105-44		156 -18
0510105-44		157 -21
0510105-45		156 -19
0510105-45		157 -22
0510105-57		156 -17
0510105-58		156 -16
0510105-59		158 - 1
0510105-60		158 - 2
0510105-61		158 -11
0510105-62		158 -12
0510105-63		158 - 6
0510105-64		158 - 7
0510105-70		142 -49
0510105-70		143 -40
0510105-70		144 -45
0510105-72		149 - 1
0510105-93		159 - 1
0510105-94		159 - 2
0510110		34 -35
0510110		35 -36
0510112		34 -45
0510112-1		34 -46
0510113-14		36 - 1
0510113-15		36 - 2
0510127		156 - 1
0510127-1		156 - 2
0510127-2		156 - 3
0510128		36 - 5
0510128		37 -13
0510129-3		28 -24
0510135		36 - 3
0510135-4		36 - 3
0510136		149 -19
0510137		149 -20
0510138		36 - 6
0510138-2		36 - 7
0510138-3		36 - 8
0510145-1		36 -10
0510161-10		154 - 4
0510161-12		155 - 3
0510161-9		154 - 4
0510163		34 -56
0510164		49 -89
0510166-6		158 -49
0510167		158 -54
0510169-3		158 -55
0510171-1		158 -64
0510172-3		158 -58
0510172-4		158 -59
0510173		158 -59
0510174		28 -34
0510176		158 -57
0510177		158 -56
0510178-1		158 -52
0510181		158 -66
0510181-1		158 -67
0510183		28 -21
0510183-1		28 -22
0510184		158 -68
0510188		2 -15
0510188		158 -63
0510193-1		158 -56
0510194-1		2 -14
0510194-1		158 -62
0510195-1		159 -29

PART NUMBER	FIGURE AND INDEX NO.
0510201-2	28 -30
0510201-4	29 -26
0510201-5	30 -35
0510202-1	87 -58
0510203-1	158 -56
0510205-3	87 -56
0510205-3	87 -56
0510205-3	87 -56
0510205-3	88 -60
0510205-3	88 -60
0510205-3	89 -55
0510205-4	87 -56
0510205-4	87 -56
0510205-4	87 -56
0510205-4	88 -60
0510205-4	88 -60
0510205-4	89 -55
0511000-22	28 -10
0511000-22	29 -10
0511000-22	30 -18
0511000-23	28 -10
0511000-23	29 -10
0511000-23	30 -18
0511000-24	28 - 5
0511000-24	29 - 5
0511000-43	28 - 6
0511000-43	29 - 6
0511000-43	30 -14
0511000-44	28 - 6
0511000-44	29 - 6
0511000-44	30 -14
0511000-6	28 - 9
0511000-6	29 - 9
0511000-6	30 -17
0511000-60	28 -35
0511000-7	28 - 9
0511000-7	29 - 9
0511000-7	30 -17
0511000-73	30 -19
0511000-74	30 -19
0511000-75	30 -13
0511000-8	28 -11
0511000-8	29 -11
0511000-9	28 -11
0511000-9	29 -11
0511001-150	82 - 8
0511033-30	82 -28
0511033-30	83 -28
0511033-7	82 -30
0511033-7	83 -30
0511062-4	4 -49
0511062-5	4 -49
0511071-3	67 - 1
0511071-4	67 - 1
0511072-1	67 - 4
0511112-13	77 - 1
0511112-14	77 - 5
0511112-15	77 - 3
0511112-18	72 -37
0511112-18	74 -24
0511112-18	77 -
0511112-4	77 - 4
0511114-9	28 - 3
0511114-9	29 - 3
0511116-12	28 -12
0511116-12	29 -12
0511116-12	30 -20
0511116-13	28 -13
0511116-13	29 -13
0511116-13	30 -21
0511119	77 -12
0511127	165 -28
0511130	82 - 9
0511150	28 -43

PART NUMBER	FIGURE AND INDEX NO.
0511150	29 -37
0511150	30 -45
0511150-1	28 -43
0511150-1	29 -37
0511150-1	30 -45
0511153	28 -42
0511153	29 -36
0511157-11	165 -25
0511157-18	165 -26
0511157-19	165 -22
0511157-200	165 -24
0511162-5	34 - 1
0511162-5	35 - 1
0511162-9	35 - 1
0511165	108 - 6
0511167-12	165 -21
0511167-13	165 -21
0511167-14	2 -18
0511167-14	165 -21
0511167-15	165 -21
0511167-21	2 -17
0511177-10	84 - 9
0511177-9	84 - 8
0511185	44 -21
0511185-7	76 -30
0511185-9	76 -30
0511189-1	72 - 7
0511189-1	73 - 6
0511189-1	74 - 9
0511189-1	75 - 6A
0511189-1	76 - 6
0511189-2	72 - 6
0511189-2	73 - 9
0511189-2	74 - 8
0511189-2	75 - 8
0511189-2	76 - 6B
0511190	165 -20
0511191-4	165 -17
0511191-5	165 -17
0511192	28 -26
0511194-4	165 -27
0511195	165 -32
0511195	166 -33
0511198	165 -22
0511199-20	161 -40
0511199-41	169 -10
0511199-48	169 -
0511227-6	74 -21
0511227-7	72 -25
0511232-3	108 - 1
0511237-1	72 -15
0511237-1	73 -16
0511237-2	74 -17
0511237-2	75 -14
0511237-2	76 -14
0511238-1	72 -16
0511238-1	73 -17
0511238-2	74 -18
0511238-2	75 -15
0511238-2	76 -15
0511240-1	28 -16
0511240-10	29 -18
0511240-11	30 -23
0511240-12	30 -24
0511240-14	30 -26
0511240-15	30 -25
0511240-2	28 -17
0511240-2	29 -15
0511240-3	28 -18
0511240-3	29 -16
0511240-4	28 -19
0511240-5	29 -17
0511240-6	29 -18
0511240-7	29 -15

PART NUMBER	FIGURE AND INDEX NO.
0511240-8	29 -16
0511240-9	29 -17
0511242	91 - 1
0511242-1	87 - 1
0511242-1	88 - 1
0511242-1	89 - 1
0511242-1	90 - 1
0511242-1	93 - 1
0511242-1	94 - 1
0511243-1	30 -26A
0511243-2	30 -24
0511243-3	30 -23
0511245-1	80 -16
0511246-3	80 -17
0511248-1	77 -20
0511249-1	28 -19A
0511252-1	38 - 9
0511253-1	166 -20
0511253-1	167 -20
0511253-1	168 -32
0511254-1	29 -29
0511254-1	30 -38
0511256-1	78 -
0511256-2	78 -
0511257-1	78 -26
0511258-1	78 - 7
0511259-1	78 - 1
0511259-2	78 - 1
0511260-1	78 -23
0511260-2	78 -23
0511261-2	78 -22
0511261-3	78 -20
0511261-4	78 - 6
0511261-5	78 - 5
0511262-1	49 - 1A
0511262-2	49 - 1A
0511263-1	73 -27
0511264-1	78 -10
0511265-1	78 -18
0511266-1	78 -18A
0511280-1	72 -14
0511280-1	73 -15
0511280-2	74 -16
0511280-2	75 -13
0511280-2	76 -13
0511280-3	72 -19
0511280-3	73 -20
0511280-4	74 -20
0511280-4	75 -17
0511280-4	76 -17
0511281	46 -23
0511287	46 -10
0511288-1	46 - 7
0511288-2	46 - 8
0511289-2	46 -11
0511289-3	46 -24
0511289-4	46 -
0511290-1	28 -25
0511291-1	28 -14
0511291-1	29 -14
0511291-1	30 -22
0511291-2	28 -14
0511291-2	29 -14
0511291-2	30 -22
0511292-3	29 -35
0511292-3	30 -44
0511295-2	28 -36
0511295-2	29 -30
0511295-3	30 -39
0511298-1	77 - 9
0511298-2	77 -16
0511311-5	202 -16
0511318-1	176 -14
0511318-1	177 -25

PART NUMBER		FIGURE AND INDEX NO.
0511318-1		178 -30
0511318-1		179 -33
0511319-2		192 -15
0511319-201		190 - 1
0511319-201		191 - 1
0511319-201		192 -15
0511319-5		192 -15
0511460-1		72 - 9
0511460-10		75 - 8
0511460-2		74 -10
0511460-200		76 - 8
0511460-201		76 - 8
0511460-202		76 - 8
0511460-203		76 - 8
0511460-23		73 -10
0511460-33		73 -10
0511460-34		75 - 8
0511460-49		73 -10
0511460-50		75 - 8
0511460-9		73 -10
0511461-1		72 -13
0511461-1		73 -14
0511461-1		74 -15
0511461-1		75 -12
0511461-1		76 -12
0511463-1		72 -11
0511463-1		73 -12
0511463-1		74 -12
0511463-1		75 - 9
0511463-1		76 -10
0511464-1		72 -14
0511464-1		73 -15
0511464-1		74 -16
0511464-1		75 -13
0511464-1		76 -13
0511465-1		72 -24
0511465-1		74 -23
0511466-1		74 -26
0511467-1		74 -21
0511467-1		75 -18
0511469-1		72 -18
0511469-1		73 -19
0511469-2		76 -18
0511470-4	□	84 -16
0511473-1		176 -13
0511473-1		177 -24
0511473-1		178 -29
0511473-1		179 -32
0511475-1		84 -29
0511475-2		84 -30
0511479-1		28 -20
0511479-1		29 -19A
0511479-2		30 -28
0511480-1		28 -15
0511480-10		30 -27
0511480-11		30 -22
0511480-2		28 -19
0511480-3		28 -15
0511480-4		28 -19
0511480-5		29 -14
0511480-6		29 -19
0511480-7		29 -14
0511480-8		29 -19
0511480-9		30 -22
0511482-1		193 - 1
0511482-20	□	193 - 9
0511482-3		193 - 7
0511482-5	□	193 - 9
0511482-9	□	193 - 1
0511483-1		28 -48
0511483-1		29 -42
0511483-2		193 -23
0511484-1		28 -49
0511484-1		29 -43

PART NUMBER	FIGURE AND INDEX NO.
0511484-2	30 - 6
0511485-1	28 -50
0511486-1	28 -38
0511486-1	29 -34
0511486-1	30 -43
0511486-2	28 -38
0511486-2	29 -34
0511486-2	30 -43
0511486-3	28 -39
0511486-3	29 -33
0511486-4	28 -40
0511486-4	29 -32
0511486-5	29 -31
0511486-5	30 -40
0511487-1	34 -55
0511488-1	28 -37
0511489-1	2 - 4
0511490-1	2 - 5
0511491-3	97 -10
0511491-4	97 -11
0511493-1	35 -55
0511496-1	35 -47
0511497-1	29 -20
0511497-3	30 -29
0511498-1	29 -21
0511498-1	30 -30
0511499-1	29 -22
0511499-1	30 -31
0511777-1	47 - 1
0511782-1	148 - 9
0511782-16	148 - 9
0511782-17	148 - 9
0511783-1	148 -12
0511784-1	148 -14
0511785-1	148 -25
0511786-1	148 -19
0511786-2	148 -22
0511787-1	148 -15
0511788-1	148 -26
0511789-1	148 -31
0511794-1	47 -
0511795-1	47 - 2
0511795-2	47 - 4
0511795-3	47 - 3
0511796-1	47 -11
0511796-2	47 -13
0511796-3	47 -12
0511796-7	47 -11
0511796-8	47 -13
0511796-9	47 -12
0511797-1	30 -11
0511797-2	30 -11
0511798-3	30 - 7
0511798-4	30 - 8
0511799-3	30 - 9
0511800-2	30 - 4
0511800-5	30 - 4
0511801-4	30 - 3
0511803-1	73 -10
0511803-14	75 - 8
0511803-2	76 - 8
0511804-1	73 -43
0511804-2	75 -24
0511804-2N	76 -11
0511806-1	188 -15
0511806-2	188 -13
0511806-3	188 -16
0511806-4	188 -14
0511807-1	47 -15
0511808-1	47 -16
0512001-10	52 -10
0512001-7	52 - 7
0512001-8	52 - 8
0512001-9	52 - 9

PART NUMBER	FIGURE AND INDEX NO.
0512006-1	165 - 2
0512006-1	166 - 2
0512006-1	167 - 2
0512006-1	168 - 2
0512008-2	52 -
0512008-4	52 -14
0512008-8	52 -
0512008-9	52 -
0512009-10	52 -15
0512010-19	49 -73A
0512010-21	49 -74
0512010-24	49 -71B
0512010-3	49 -71
0512010-4	49 -72
0512010-5	49 -73
0512010-8	49 -72
0512010-9	49 -71
0512011-1	49 -86
0512012-1	49 -85
0512012-2	49 -85A
0512013-1	49 -93
0512013-2	49 -93
0512014-1	49 -94
0512014-2	49 -94A
0512015-1	49 -88
0512015-11	49 -76
0512015-12	49 -80
0512015-2	49 -74
0512015-3	49 -78
0512015-4	49 -79
0512015-7	49 -75
0512015-8	49 -75
0512016-1	49 -82
0512016-3	49 -84
0512016-5	49 -82
0512016-7	49 -84
0512017-1	49 -81
0512018-1	49 -95
0512019-1	49 -87
0512020-1	49 -51
0512020-2	49 -52
0512020-3	49 -51
0512020-4	49 -52
0512021-1	49 -21
0512021-2	49 -22
0512021-3	49 -21
0512021-4	49 -22A
0512022-1	49 -23
0512022-3	49 -24
0512023-1	49 -26
0512023-2	49 -27
0512023-4	49 -29
0512023-5	49 -28
0512024-1	49 -50
0512024-3	49 -50
0512025-1	49 -42
0512026-1	49 -30
0512026-10	49 -30
0512026-6	49 -30
0512027-1	27 - 4
0512027-2	27 - 5
0512028-1	49 -31
0512028-2	49 -32
0512029-1	49 -32
0512029-10	49 -36
0512029-2	49 -33
0512029-3	49 -34
0512029-4	49 -35
0512029-5	49 -36
0512029-6	49 -36
0512029-7	49 -32
0512029-8	49 -33
0512029-9	49 -36
0512030-13	49 -13

PART NUMBER	FIGURE AND INDEX NO.
0512030-14	49 -14
0512030-200	49 -
0512030-201	49 -
0512030-202	49 -
0512030-23	49 -13
0512030-24	49 -14
0512030-25	49 -16
0512030-5	49 - 5
0512030-6	49 - 6
0512031-9	95 - 7
0512032-1	49 -37
0512032-4	49 -37
0512033	49 -70
0512033-2	49 -70
0512034-1	49 -67
0512034-42	49 -69
0512034-7	49 -67
0512034-9	49 -67
0512036-1	49 -20
0512036-3	49 -20
0512037-1	49 -38
0512037-1	49 -39
0512037-3	49 -40
0512037-4	49 -41
0512037-5	49 -38
0512037-6	49 -39
0512038-1	49 -43
0512038-2	49 -44
0512038-3	49 -45
0512038-4	49 -46
0512039-1	49 -61
0512039-2	49 -62
0512039-3	49 -63
0512039-4	49 -64
0512039-6	49 -63
0512039-7	49 -61
0512039-8	49 -62
0512040-1	49 -47
0512040-2	49 -48
0512040-3	49 -49
0512040-4	49 -49
0512041-4	49 -98
0512041-4	49 -98
0512041-4	187 - 4
0512041-5	49 -98
0512041-5	187 - 3
0512041-7	49 -98
0512045-3	49 -92
0512046-1	84 -25
0512058-1	30 -41
0512058-2	30 -42
0512059-1	49 -95A
0512060-1	49 -81A
0512066-1	49 -57
0512100-11	49 - 5A
0512100-12	49 - 6
0512100-13	49 -11
0512100-14	49 -12
0512100-19	49 - 7
0512100-20	49 - 8
0512100-200	49 -
0512100-205	49 -
0512100-21	49 - 4
0512100-26	49 - 4
0512100-3	49 - 3
0512100-4	49 - 4
0512100-5	49 - 7
0512100-6	49 - 8
0512100-7	49 - 9
0512100-8	49 -10
0512100-9	49 -16
0512107-12	49 -69
0512107-13	49 -68
0512122	44 - 7

PART NUMBER	FIGURE AND INDEX NO.
0512122	45 - 8
0512123	4 - 7
0512124-15	46 -20
0512124-15	47 - 7
0512124-35	44 - 1
0512124-36	44 - 2
0512124-43	44 - 3
0512124-44	44 -
0512124-47	44 -
0512124-60	44 - 2
0512124-61	44 - 1B
0512124-62	44 - 2
0512124-63	44 - 1A
0512124-78	45 - 4
0512124-79	45 -12
0512124-8	44 -11
0512124-80	45 -13
0512124-9	44 -12
0512128	46 -14
0512129	46 -17
0512132-10	47 -19
0512132-11	47 -18
0512132-15	46 -12
0512132-15	47 -18
0512132-17	46 -13
0512132-17	47 -19
0512132-4	47 -18
0512132-4	47 -20
0512132-5	47 -21
0512134	44 -14
0512134-1	44 -15
0512134-2	47 -24
0512134-3	47 -24
0512135	149 -35
0512135	150 -19
0512135	158 -48
0512136	149 -49
0512136	150 -33
0512137	44 -16
0512137	45 -15
0512138	149 -52
0512138	150 -36
0512139-2	44 -13
0512139-2	45 -14
0512139-3	44 -13
0512139-3	45 -14
0512143	52 - 3
0512143-1	52 - 4
0512146	27 - 6
0512146-1	27 - 6
0512149-1	27 - 7
0512149-2	27 - 7
0512150	44 -22
0512152	46 -19
0512156	52 -11
0512157	52 - 1
0512157-2	52 - 2
0512157-5	52 - 1
0512157-6	52 - 1
0512159-2	52 -13
0512159-3	52 -13
0512160-2	49 -91
0512160-3	49 -83
0512160-5	52 - 5
0512165-1	52 -13
0512166-3	2 -11
0512166-3	84 -20
0512167-10	54 - 2
0512167-16	54 - 6
0512167-17	54 - 3
0512167-18	54 -
0512167-24	54 - 1
0512167-26	54 - 5
0512169-1	97 -12

PART NUMBER	FIGURE AND INDEX NO.
0512169-1	98 -21
0512169-2	97 -12
0512169-2	98 -21
0512172-1	159 -15
0512172-2	159 -16
0512176-1	49 -45
0512176-2	49 -46
0512177-1	49 -43
0512177-2	49 -44
0512178-1	49 -45
0512178-2	49 -46
0512180-5	49 -13
0512180-6	49 -14
0512180-7	49 -13
0512180-8	49 -14
0512181-1	49 -21A
0512181-2	49 -21A
0512182-1	191 -53
0512183-1	45 -16
0512183-2	45 -17
0512184-1	27 -16
0512184-2	27 -16
0512185-1	27 -17
0512186-1	45 -
0512186-12	45 - 3
0512186-13	45 - 2
0512186-5	45 - 1
0512186-6	45 - 2
0512186-7	45 - 2
0512186-8	45 - 3
0512187-1	47 -22
0512187-2	47 -23
0512188-1	49 -22B
0512188-2	49 -22B
0512189-1	49 -42
0512190-1	49 -32A
0512192-1	49 - 1C
0512193-1	51 - 1
0512193-10	51 -12
0512193-3	51 - 9
0512193-5	51 -10
0512193-6	51 -11
0512194-1	51 - 6
0512194-2	51 - 7
0512194-4	51 - 8
0512194-6	51 - 5
0512195-1	51 -13
0512195-6	51 -13
0512195-8	51 -15
0513000-10	31 -32
0513000-10	32 -18
0513000-10	33 -18
0513000-9	31 -32
0513000-9	32 -19
0513000-9	33 -19
0513001-11	31 -51
0513002-11	39 -17
0513002-11	42 -17
0513002-12	39 -18
0513002-12	42 -18
0513002-16	31 -15
0513002-17	31 -14
0513002-18	31 -13
0513002-5	31 -12
0513002-6	31 -43
0513003-24	189 -18
0513003-5	189 -18
0513006-103	34 -39
0513006-110	34 -13
0513006-110	35 -13
0513006-111	34 -23
0513006-111	35 -23
0513006-145	35 -41
0513006-22	34 -26

PART NUMBER	FIGURE AND INDEX NO.
0513006-22	35 -26
0513006-24	34 -40
0513006-24	35 -41
0513006-25	34 -18
0513006-25	35 -18
0513006-26	34 -28
0513006-26	35 -28
0513006-42	34 -15
0513006-42	35 -15
0513006-43	34 -25
0513006-43	35 -25
0513006-44	34 -12
0513006-44	35 -12
0513006-45	34 -22
0513006-45	35 -22
0513006-8	34 -16
0513006-8	35 -16
0513006-9	34 -34
0513007-10	34 -38
0513007-25	34 -30
0513007-3	34 -20
0513007-3	35 -20
0513007-4	34 -30
0513007-4	35 -31
0513007-5	34 -11
0513007-5	35 -11
0513007-6	34 -21
0513007-6	35 -21
0513007-9	34 -33
0513011-11	53 -
0513038-7	31 -34
0513038-7	32 -24
0513038-7	33 -24
0513038-8	31 -34
0513038-8	32 -24
0513038-8	33 -24
0513039-7	99 -14
0513039-7	100 -14
0513039-7	102 -52
0513039-7	103 -63
0513039-7	104 -73
0513039-7	105 -65
0513039-7	106 -66
0513048-1	31 -33
0513048-2	31 -33
0513051-8	99 -18
0513051-8	100 -18
0513051-8	102 -34
0513053-1	31 - 9
0513053-1	32 -22
0513053-1	33 -22
0513053-4	31 - 9
0513053-4	32 -22
0513053-4	33 -22
0513054-4	31 -10
0513054-4	32 -23
0513054-4	33 -23
0513055-1	31 -25
0513055-2	31 -24
0513056-3	99 -31
0513056-3	100 -31
0513056-3	102 -24
0513056-3	103 -29
0513056-3	104 -25
0513057-1	84 -32
0513057-1	85 -32
0513057-2	84 -32
0513057-2	85 -32
0513058-1	84 -35
0513058-1	85 -31
0513058-2	84 -35
0513058-2	85 -31
0513061-3	104 -16A
0513061-4	104 -16B

PART NUMBER	FIGURE AND INDEX NO.
0513062-1 ¤	104 -15A
0513062-2 ¤	104 -15A
0513063-1	35 -58
0513065-1	98 -14
0513065-2	98 -14
0513065-5	98 -14
0513065-6	98 -14
0513066-1	105 - 9
0513066-1	106 - 9
0513066-3	105 -13
0513066-3	106 -13
0513067-1	105 - 7
0513067-2	105 - 7
0513067-2	106 - 7
0513068-1	105 - 2
0513068-1	106 - 2
0513068-2	105 - 3
0513068-2	106 - 3
0513069-1	105 - 4
0513069-3	105 - 4
0513069-3	106 - 4
0513070-200	105 - 1
0513070-9	106 - 1
0513071-11	106 -22
0513071-5	105 -20
0513071-7	105 -20
0513072-2	105 -27
0513072-3	105 -27
0513072-3	106 -26
0513076-19 ¤	105 -76
0513076-3 ¤	105 -76
0513076-34 ¤	106 -77
0513076-7 ¤	105 -76
0513077-1 ¤	105 -18
0513077-10 ¤	105 -38
0513077-2 ¤	105 -38
0513077-20 ¤	105 -18
0513077-21 ¤	105 -18
0513077-22 ¤	105 -31
0513077-26 ¤	105 -53
0513077-27 ¤	105 -53
0513077-28 ¤	106 -33
0513077-4 ¤	105 -31
0513077-7 ¤	105 -53
0513077-8 ¤	105 -36
0513077-8 ¤	106 -31
0513077-9 ¤	105 -53
0513078-1	105 -16
0513078-1	106 -16
0513109-10	39 -12
0513109-10	40 -22
0513109-10	41 -19
0513109-10	42 -12
0513109-11	39 - 6
0513109-11	40 -21
0513109-11	41 -15
0513109-11	42 - 6
0513109-12	39 - 9
0513109-12	40 -23
0513109-12	41 -16
0513109-12	42 - 9
0513109-15	39 - 7
0513109-15	40 -18
0513109-15	41 -20
0513109-15	42 - 7
0513109-200	39 - 1
0513109-200	40 - 1
0513109-21	82 -29
0513109-21	83 -29
0513109-23	39 - 8
0513109-23	40 -19
0513109-23	41 -21
0513109-23	42 - 8
0513109-24	39 - 7

PART NUMBER	FIGURE AND INDEX NO.
0513109-24	40 -18
0513109-24	41 -20
0513109-24	42 - 7
0513109-29	39 -13
0513109-29	40 -25
0513109-29	41 -22
0513109-29	42 -13
0513109-31	42 - 2
0513109-4	41 - 2
0513109-41	42 - 4
0513109-47	39 - 1
0513109-48	42 - 1
0513109-49	39 - 2
0513109-49	40 - 3
0513109-50	39 -19
0513109-50	40 -28
0513109-50	41 -24
0513109-50	39 -24
0513109-50	40 -29
0513109-54	42 - 1
0513109-55	42 - 2
0513109-56	39 -13
0513109-56	40 -26
0513109-56	41 -23
0513109-64	39 - 4
0513109-64	40 - 4
0513109-64	41 - 5
0513109-68	39 - 3
0513109-68	40 -16
0513109-69	40 -32
0513109-69	41 -26
0513109-7	39 - 6
0513109-7	40 -21
0513109-7	41 -15
0513109-7	42 - 6
0513109-70	40 -33
0513109-70	41 -27
0513109-72	39 - 3
0513109-72	40 -16
0513109-72	41 -25
0513109-72	42 - 3
0513109-8	39 - 9
0513109-8	40 -23
0513109-8	41 -17
0513109-8	42 - 9
0513109-9	39 - 5
0513109-9	40 -20
0513109-9	41 -18
0513109-9	42 - 5
0513120-1	166 -28
0513120-1	167 -30
0513120-1	168 -43
0513120-1	171 - 4
0513120-2	171 -20
0513120-3	171 -21
0513120-4	171 -17
0513120-6	171 -
0513120-8	166 -18
0513120-8	171 -
0513122	171 - 5
0513123	171 -10
0513124-2	171 - 1
0513124-3	166 -22
0513124-3	167 -22
0513124-3	168 -34
0513125	171 - 6
0513126-1	171 -12
0513129	39 -15
0513129	42 -15
0513129	166 -64
0513129	167 -57
0513129	168 -83
0513131-1	31 - 5
0513131-2	31 - 5

PART NUMBER	FIGURE AND INDEX NO.
0513131-5	31 - 5
0513132-1	31 - 8
0513132-1	32 -28
0513132-1	33 -28
0513132-10	31 - 8
0513132-11	31 - 7
0513132-2	31 - 8
0513132-2	32 -28
0513132-2	33 -28
0513132-3	31 - 7
0513132-3	32 -29
0513132-3	33 -29
0513132-4	31 - 6
0513132-4	32 -29
0513132-4	33 -29
0513132-9	31 - 8
0513133-2	101 - 5
0513133-20	99 - 1
0513133-20	100 - 1
0513133-23	99 - 5
0513133-23	100 - 5
0513133-4	99 - 2
0513133-4	100 - 2
0513133-5	99 - 3
0513133-5	100 - 3
0513133-70	101 - 9
0513133-71	101 - 9
0513133-72-418	101 - 6
0513133-74-418	101 - 6
0513133-78-418	101 - 6
0513133-82	99 -
0513133-83	100 -
0513133-86-418	99 -36
0513133-87-418	99 -36
0513133-89-418	100 -40
0513133-9	107 -11
0513133-90	107 - 6
0513133-92-418	100 -40
0513133-94-418	101 - 6
0513133-96-418	101 - 6
0513134-7	84 - 6
0513134-8	84 - 7
0513137-1	31 -45
0513137-1	32 -32
0513137-1	33 -32
0513137-2	31 -45
0513137-2	32 -32
0513137-2	33 -32
0513142-11	103 -64
0513144-13	99 -24
0513144-13	102 -30
0513144-14	99 -25
0513144-14	100 -25
0513144-14	102 -31
0513144-15	99 -24
0513144-15	100 -24
0513144-15	102 -30
0513144-17	102 -33
0513144-18	102 -30
0513144-18	103 -40
0513144-2	99 -27
0513144-2	100 -27
0513144-2	102 -33
0513144-3	126 -13
0513144-7	99 -27
0513144-7	102 -33
0513144-8	99 -26
0513144-8	100 -26
0513144-8	102 -32
0513152-1	31 -27
0513153-6	2 - 2
0513153-6	161 -28
0513156-2	192 - 4
0513156-3	192 - 6

PART NUMBER	FIGURE AND INDEX NO.
0513157-1	31 -55
0513165-1	108 -22
0513166-1	147 -25
0513166-3	148 -46
0513166-7	148 -46
0513172-1	82 -17
0513172-2	82 -16
0513173-1	99 -12
0513173-1	100 -12
0513173-1	102 -58
0513173-1	103 -56
0513182-10	147 -21
0513182-2	147 -21
0513182-8	147 -21
0513182-9	147 -21
0513185-1	31 -26
0513187-3	99 -34
0513187-3	122 -15
0513187-5	102 -50
0513187-5	103 -64
0513188-1	122 -14
0513188-3	122 -14
0513192-1	82 -33
0513193-1	189 -21
0513193-3	189 -21
0513196-1	190 - 5
0513200-1	154 - 1
0513208-1	193 -15
0513208-1	194 -14
0513208-1	195 -19
0513208-1	199 - 5
0513219-10	187 -18
0513219-13	2 - 6
0513219-13	187 -18
0513220-10	101 - 8
0513220-2	101 - 8
0513220-3	101 - 8
0513220-4	101 - 8
0513220-6	101 - 8
0513220-8	101 - 8
0513220-9	101 - 8
0513225-4	107 - 1
0513229-3	190 -16
0513229-3	191 -16
0513230-10	48 - 1
0513230-12	48 - 1
0513230-14	48 - 1
0513230-18	48 - 6A
0513230-3	48 - 5
0513230-4	48 - 6
0513230-5	48 - 8
0513230-6	48 - 8
0513235-1	31 -10
0513235-1	32 -23
0513235-1	33 -23
0513239-1	148 -46A
0513239-13	148 -46A
0513239-15	148 -46B
0513239-5	148 -46A
0513239-9	148 -46A
0513240-14	148 -43
0513240-17	148 -43
0513240-5	148 -43
0513240-8	148 -43
0513241-9	104 -26
0513242-10 □	104 -13
0513242-18 □	104 -14
0513242-26 □	104 -14A
0513242-27	104 -14A
0513250-1	103 -40
0513250-1	104 -53
0513251-1	148 - 6
0513253-1	53 - 1
0513260-4	148 -46A

PART NUMBER	FIGURE AND INDEX NO
0513260-5	148 -4
0513261-13	148 -43
0513261-14	148 -4
0513261-2	148 -43
0513261-3	148 -43
0513263-1	139 - 5
0513263-4	139 - 5
0513264-1	33 -34
0513267-1	141 -24
0513309-1	140 -35
0513309-1	141 -30
0513310-12	31 -13
0513310-13	31 -15
0513310-14	31 -53
0513310-2	31 -12
0513310-3	31 -14
0513310-9	31 -11
0513311-1	99 -28
0513311-1	100 -28
0513311-1	102 -23
0513311-1	103 -28
0513311-1	104 -25
0513311-1	105 -94
0513311-2	99 -29
0513311-2	100 -29
0513311-2	102 -24
0513311-2	103 -29
0513311-2	104 -24
0513311-2	105 -95
0513312-1	28 - 8
0513312-1	29 - 8
0513312-1	30 -16
0513312-1	48 - 3
0513314-1	36 - 2
0513314-2	36 - 1
0513315-1	36 - 4
0513316-10	102 - 8
0513316-10	103 - 8
0513316-10	104 - 6
0513316-11	102 - 9
0513316-11	103 - 9
0513316-11	104 - 7
0513316-12	102 -10
0513316-12	103 -10
0513316-12	104 - 8
0513316-12	105 - 8
0513316-12	106 - 8
0513316-16	103 -14
0513316-19	103 - 2
0513316-19	104 - 9
0513316-200	102 - 1
0513316-201	102 - 1
0513316-202	103 - 1
0513316-203	104 - 1
0513316-204	104 - 1
0513316-21	107 -33
0513316-22	107 -34
0513316-25	102 -12
0513316-3	102 -12
0513316-4	102 - 2
0513316-5	102 - 3
0513316-5	103 - 3
0513316-5	104 - 2
0513316-6	102 - 4
0513316-6	103 - 4
0513316-6	104 - 3
0513316-6	105 -15
0513316-6	106 -15
0513316-7	102 - 5
0513316-7	103 - 5
0513316-7	104 - 4
0513316-8	102 - 6
0513316-8	103 - 6
0513316-8	104 - 5

PART NUMBER	FIGURE AND INDEX NO.
0513316-9	99 - 4
0513316-9	100 - 4
0513316-9	102 - 7
0513316-9	103 - 7
0513317-1	36 -10
0513319-1-418	102 -11
0513319-12 □	102 -11
0513319-13 □	102 -11
0513319-17 □	102 -17
0513319-18 □	102 -11
0513319-18-418	102 -11
0513319-2-418	102 -11
0513319-21	102 -17
0513319-4 □	102 -20
0513319-4-418	102 -20
0513319-5 □	102 -19
0513319-5 □	103 -13
0513319-5 □	104 -17
0513319-5 □	105 -25
0513319-8-418	102 -11
0513319-9-418	102 -11
0513320-8	107 -13
0513320-8	107 -24
0513321-1 □	107 -17
0513321-6	107 -18
0513321-7	107 -19
0513322-1	31 -51
0513322-1	32 -20
0513322-1	33 -20
0513323-1	31 -26
0513323-1	32 -31
0513323-1	33 -31
0513323-2	31 -28
0513324-1	31 -30
0513324-2	31 -31
0513325-1	31 -25
0513325-1	32 -30
0513325-1	33 -30
0513325-2	31 -24
0513325-2	32 -30
0513325-2	33 -30
0513325-3	33 -30
0513325-4	33 -30
0513326-1	31 -53
0513326-1	32 -35
0513326-2	33 -35
0513327-1	39 -17
0513327-1	40 -12
0513327-1	41 -38
0513327-1	42 -17
0513327-2	39 -18
0513327-2	40 -13
0513327-2	41 -39
0513327-2	42 -18
0513328-2	53 - 2
0513330-11	31 -14
0513330-12	31 -13
0513330-13	31 -12
0513330-9	31 -11
0513331-2	142 -35
0513331-2	143 -26
0513332-200	148 -43
0513332-201	148 -43
0513340-19	148 -43
0513342-1	108 -22
0513345-1	31 -54
0513348-1	82 -17A
0513348-1	83 -12
0513351-1	102 -18
0513351-1	102 -21
0513351-1	103 -20
0513351-1	103 -22
0513351-1	104 -15
0513351-1	104 -19

PART NUMBER	FIGURE AND INDEX NO.
0513351-1	105 -19
0513351-1	105 -32
0513351-2	104 -19
0513352-1	41 - 4
0513352-3	39 - 1A
0513352-3	40 - 2
0513357-1	102 -46
0513358-1	37 - 4A
0513359-1	37 - 5
0513359-2	37 - 6
0513360-1	37 - 7
0513360-2	37 - 8
0513361-1	37 - 9
0513362-10	31 -12
0513362-10	32 -14
0513362-12	33 -12
0513362-13	33 - 7
0513362-14	33 - 8
0513362-15	33 -14
0513362-17	33 -50
0513362-18	33 -48
0513362-18	33 -48
0513362-19	33 -49
0513362-25	33 - 7
0513362-3	31 -17
0513362-3	32 - 9
0513362-3	33 - 9
0513362-30	33 -50
0513362-31	33 -48
0513362-32	33 -56
0513362-33	33 -57
0513362-38	33 -12A
0513362-4	31 -18
0513362-4	32 -10
0513362-4	33 -10
0513362-5	31 -16
0513362-5	32 -12
0513362-6	31 -19
0513362-6	32 -11
0513362-6	33 -11
0513362-7	31 -14
0513362-7	32 - 7
0513362-8	31 -13
0513362-8	32 - 8
0513362-9	32 -13
0513362-9	33 -13
0513363-1	37 - 1
0513363-2	37 - 2
0513364-1	37 - 3
0513364-2	37 - 3
0513365-1	38 - 4
0513366-1	38 - 6
0513366-4	38 -12
0513367-1	38 - 5
0513368-10	38 -10
0513368-2	38 - 1
0513368-200	38 -
0513368-201	38 -
0513368-4	38 - 3
0513368-7	38 -10
0513368-7	104 -10
0513368-8	38 -11
0513368-8	104 -11
0513369-1	32 -25
0513369-1	33 -25
0513369-2	32 -25
0513369-2	33 -25
0513370-1	35 -59
0513370-1	155 - 1
0513372-1	37 -14
0513372-2	37 -14
0513373-1	35 -
0513373-2	35 -34
0513373-3	35 -39

PART NUMBER	FIGURE AND INDEX NO.
0513373-4	35 -31
0513373-6	35 -39
0513373-7	35 -
0513373-8	35 -31
0513373-9	35 -
0513374-1	35 -35
0513374-2	35 -40
0513374-4	35 -40
0513375-1	32 - 5
0513375-1	33 - 5
0513375-2	32 - 5
0513375-2	33 - 5
0513376-1	37 -10
0513378-1	32 -40
0513378-1	33 -41
0513379-1	32 -33
0513379-1	33 -33
0513380-2	85 -43
0513382-11	166 -20
0513382-12	166 -24
0513382-13	166 -23
0513382-13	167 -23
0513382-13	168 -35
0513382-14	167 -25A
0513382-14	168 -38
0513382-15	166 -25
0513382-15	167 -25
0513382-15	168 -37
0513382-16	166 -20
0513382-16	167 -20
0513382-16	168 -32
0513385-2	108 -22
0513385-7	108 -22
0513386-1	32 -45
0513386-1	33 -46
0513386-1	141 -23
0513386-7	141 -23
0513387-1	39 - 4B
0513387-1	40 - 6
0513387-1	41 - 7
0513390-1 □	103 -12
0513390-10 □	103 -26
0513390-11	103 -19
0513390-12 □	107 -31
0513390-22	103 -75
0513390-22 □	104 -23
0513390-25 □	104 -16
0513390-27 □	104 -16
0513390-29 □	107 -31
0513390-31 □	104 -16
0513390-6 □	103 -12
0513390-9 □	103 -21
0513390-9 □	104 -18
0513392	103 -52
0513392-1	104 -49
0513392-3	104 -57
0513392-4	105 -62
0513392-5	105 -62
0513392-5	106 -62
0513392-5	106 -64
0513393-1	103 -26
0513393-1	104 -13
0513395-1	110 - 1
0513395-2	110 - 1
0513399-1	30 -11A
0513399-1	168 -11
0513405-2	105 -70
0513405-2	106 -73
0513411-1	33 -31A
0513414-1	148 -42D
0513417-1	161 -36
0513419-1	82 -16A
0513419-1	83 -10
0513420-1	139 -28B

PART NUMBER		FIGURE AND INDEX NO.
0513420-2		139 -28C
0513422-1	¤	107 -31
0513423-2	¤	105 -26
0513424-1		105 -91
0513424-2		107 -32
0513424-3		105 -71
0513425-1		83 - 6
0513426-1		30 -10
0513427-1		105 -29
0513427-1		106 -28
0513429-1		110 - 7
0513429-2		110 - 7
0513434-3		105 -98A
0513434-4		105 -98B
0513434-4		106 -92B
0513434-5		105 -98A
0513434-5		106 -92
0513437-2		108 -59
0513438-1	¤	107 -31
0513438-8		107 -32
0513445-1	¤	105 -31
0513445-10	¤	105 -53
0513445-13	¤	106 -20
0513445-22	¤	106 -30
0513445-23	¤	106 -34
0513445-24	¤	106 -34
0513445-5	¤	105 -18
0513445-9	¤	105 -53
0513446-1	¤	105 -26
0513446-2	¤	106 -25
0513446-4	¤	106 -25
0513448-1		185 -31
0513454-3		106 -92A
0513456-1		140 -35
0513456-1		141 -30
0514002-2	#	84 - 2
0514007-11		96 -28
0514008-5	#	84 -22
0514009-1	#	84 - 1
0514009-10	#	84 -12
0514009-16	#	76 - 3
0514009-2	#	84 - 2
0514009-5	#	73 - 3
0514009-6	#	75 - 4
0514009-9	#	84 -11
0514010-1	#	96 -
0514010-10		96 -14
0514010-11		96 -14
0514010-12		96 - 9
0514010-12		96 - 9
0514010-13		96 - 9
0514010-14		96 - 9
0514010-15	#	96 -
0514010-19	#	96 -
0514010-2	#	96 -
0514010-20	#	96 - 8
0514010-200	#	96 -12
0514010-201	#	96 -12
0514010-202	#	96 - 3
0514010-203	#	96 - 3
0514010-204	#	96 - 3
0514010-205	#	96 -12
0514010-206	#	96 - 3
0514010-207	#	96 -12
0514010-21	#	96 -13
0514010-22		96 - 9
0514010-23		96 -14
0514010-3	#	96 -13
0514010-4	#	96 -13
0514010-5	#	96 - 8
0514010-6	#	96 - 8
0514010-9		96 -14
0514011-1	¤	96 -10
0514012-1	¤	82 -21A
0514012-2	¤	82 -21
0514017-1	¤	93 -19
0514017-2	¤	93 -19
0514017-3	¤	93 -18
0514017-3	¤	94 -16
0514018-1	¤	93 - 8
0514018-15	¤	93 - 8
0514018-3	¤	93 -10
0514023-1		93 -24
0514024-1		93 -39
0514024-2		93 -39
0514026-11		93 -21
0514026-11		93 -42
0514026-2		94 -38
0514026-4		93 -48
0514026-4		94 -48
0514027-21		94 -59
0514027-5		93 -65
0514027-6		93 -34
0514027-9		93 -34
0514028-10		93 -25
0514028-15		93 -25
0514028-5		93 -46
0514028-5		93 -53
0514028-5		94 -42
0514028-6		93 -45
0514028-6		94 -41
0514029-2		93 - 3
0514029-2		94 - 3
0514030-4		93 -22
0514030-4		94 -19
0514032-1		93 -55
0514032-1		94 -49
0514033-1		93 -29
0514033-1		94 -28
0514033-2		93 -60
0514033-2		94 -55
0514034-1		93 -43
0514034-1		94 -39
0514035-1		93 -40
0514035-17		94 -36
0514035-18		94 -37
0514035-2		93 -41
0514036-1		93 -27
0514036-1		94 -26
0514037-1		93 -67
0514039-1	#	84 - 1
0514039-10	#	84 -12
0514039-16	#	76 - 3
0514039-2	#	84 - 2
0514039-5	#	73 - 3
0514039-6	#	75 - 4
0514039-9	#	84 -11
0514042-1		98 - 4
0514043-1		88 -50
0514043-1		89 -49
0514044-1		95 - 5
0514044-1		96 -14A
0514047-1		93 -73
0514047-9		93 -73
0514048-1		88 -64
0514048-1	#	89 -59
0514048-1	#	93 -90
0514048-1	#	94 -88
0514048-1	#	95 -40
0514048-1	#	96 -31
0514048-9		88 -65
0514048-9	#	89 -60
0514048-9	#	93 -90
0514048-9	#	94 -89
0514048-9	#	95 -41
0514048-9	#	96 -32
0514049-1		189 -24
0514051-1		94 -35
0514051-2		94 -35
0514052-1		89 -35
0514055-1	¤	88 -13
0514055-11	¤	88 -13
0514055-3	¤	88 -15
0514056-1	¤	96 -10
0514057-1	¤	95 -35
0514057-2	¤	95 -36
0514058-1	¤	88 -18
0514058-1	¤	89 -18
0514059-1	#	84 - 1
0514059-10	#	84 -12
0514059-17	#	76 - 3
0514059-2	#	84 - 2
0514059-5	#	73 - 3
0514059-6	#	75 - 4
0514059-9	#	84 -11
0514060-5		93 -24
0514060-5		94 -25
0514062-1		83 - 1
0514062-10		83 - 1
0514062-2		83 - 1
0514062-9		83 - 1
0514064-1	¤	83 -27
0514065-1	¤	84 - 8
0514065-1	¤	85 - 6
0514065-2	¤	84 - 9
0514065-2	¤	85 - 7
0514066-1		89 -37
0514067-1		83 - 2
0514068-2	¤	83 - 8
0514069-1	¤	83 -21
0514071-1	¤	83 -16
0514071-2	¤	83 -16
0514072-1		83 -26
0514072-2		83 -26
0514073-1	#	84 - 1
0514073-10	#	84 -12
0514073-17	#	76 - 3
0514073-2	#	84 - 2
0514073-5	#	73 - 3
0514073-6	#	75 - 4
0514073-9	#	84 -11
0514075-1	#	88 -
0514075-13	#	89 -16
0514075-14	#	89 -10
0514075-15	#	89 -
0514075-2		88 -17
0514075-2		89 -17
0514075-3	#	88 -16
0514075-7	#	88 -10
0514076-1	¤	88 -13
0514076-1	¤	89 -13
0514076-2	¤	93 - 8
0514077-1	#	93 -
0514077-10	#	94 -
0514077-11	#	94 - 7
0514077-2	#	93 -
0514077-5	#	93 -17
0514077-6	#	93 - 7
0514077-8	#	94 -15
0514077-9	#	94 -
0514078-5	#	73 -47
0514078-5	#	75 -26
0514078-5	#	76 -44A
0514079-1	#	84 -13
0514079-2	#	84 -13
0514080-1		148 -52
0514081-1	#	96 -
0514081-12	#	96 -
0514081-13	#	96 -13
0514081-14	#	96 - 8
0514081-6	#	96 -13
0514081-9	#	96 - 8

PART NUMBER		FIGURE AND INDEX NO.
0514082-12	#	95 -33
0514082-13	#	95 -32
0514082-16	#	95 - 3
0514082-17	#	95 - 3
0514082-19	#	95 -
0514082-2	#	95 -23
0514082-23	#	95 -23
0514082-24	#	95 -23
0514082-27	#	95 - 3
0514082-28	#	95 -33
0514082-29	#	95 -32
0514082-3	#	95 -23
0514082-30	#	95 - 3
0514082-4	#	95 -
0514083-1	¤	94 - 8
0514088-1		148 -52
0514089-1		94 -34
0514090-4		94 -73
0514093-1	#	89 -
0514093-2		89 -11
0514093-200	#	89 -15
0514093-201	#	89 - 1
0514093-3	#	89 -10
0514093-4	#	89 -16
0514094-1	#	94 -
0514094-2	#	94 -
0514094-6	#	94 -15
0514094-7	#	94 - 7
0514095-1	#	96 -
0514095-2	#	96 - 8
0514095-3		96 - 9
0514095-4	#	96 -13
0514096-10		95 -34
0514096-11	#	95 -
0514096-2	#	95 -23
0514096-3	#	95 -23
0514096-4	#	95 - 3
0514096-5	#	95 - 3
0514096-6	#	95 -33
0514096-7	#	95 -32
0514096-9		95 -34
0514097-1		148 -52
0514101-1		94 -25A
0514101-2		94 -25A
0515001-1	#	93 -
0515001-10	#	93 -17
0515001-20	#	93 -
0515001-200	#	93 - 1
0515001-201	#	93 -11
0515001-210	#	93 -11
0515001-211	#	93 - 1
0515001-212	#	93 -11
0515001-213	#	93 -11
0515001-23	#	93 -
0515001-24	#	93 -
0515001-35	#	93 -17
0515001-39	#	93 - 7
0515001-7	#	93 - 7
0515002-1	#	98 -
0515002-10		98 -13
0515002-4	#	98 -10
0515002-6	#	98 -12
0515002-9		98 -11
0515003-2		105 -17
0515003-2		106 -19
0515004-1	#	84 - 1
0515004-18	#	76 - 3
0515004-3	#	73 - 3
0515004-4	#	75 - 4
0515004-5	#	84 -11
0515004-6	#	84 -12
0515005-1	#	85 - 1
0515005-16	#	76 - 3
0515005-2	#	85 - 2

PART NUMBER		FIGURE AND INDEX NO.
0515005-3	#	73 - 3
0515005-4	#	75 - 4
0515005-5	#	85 - 9
0515005-6	#	85 -10
0515008-1		83 -22
0515009-1	¤	85 -25
0515010-10	¤	83 -37
0515012-1	¤	85 -19
0515012-2	¤	85 -22
0515014-1	¤	83 -18
0515015-1	¤	85 -23
0515016-2	#	84 -23B
0515016-2	#	84 -23B
0515016-2	#	85 -37
0515016-3	#	84 -23A
0515016-3	#	84 -23A
0515016-3	#	85 -38
0515016-4	#	84 -22
0515016-4	#	85 -39
0515016-5	#	85 -40
0515018-1	¤	85 -15
0515019-3	¤	85 -24
0515020-1		85 - 5
0516008-1		166 -24A
0516008-1		167 -24
0516008-1		168 -36
0517002-1		73 -45
0517002-1		76 -42
0517006-2		73 - 5B
0517006-2		75 - 6C
0517006-2		76 - 5B
0520005-10		4 -53
0520005-11		4 -53
0520005-12		4 -50
0520005-13		4 -50
0520005-3		4 -55
0520005-3		4 -62
0520005-6		4 -54
0520005-7		4 -56
0520008		4 -57
0520008-1		4 -57
0520009-1		14 -21
0520009-10		14 -18
0520009-11		14 -19
0520009-12		14 -19
0520009-2		14 -21
0520009-3		14 -22
0520009-4		14 -22
0520009-5		14 -23
0520009-6		14 -23
0520009-7		14 -17
0520009-8		14 -17
0520009-9		14 -18
0520015-1		4 -60
0520015-2		4 -60
0520016-1		4 -64
0520016-2		4 -64
0521101-2		199 - 1
0521101-6		199 - 2
0521102-1		14 -25
0521103-1		161 - 1A
0521103-3		161 - 1A
0521103-4		161 - 1A
0522101-1		4 -20A
0522150-1		21 -15
0522150-2		21 -15
0522150-3		21 -18
0522150-4		21 -18
0522617-1		4 -14
0522617-13		5 - 1
0522617-14		5 - 1
0522617-15		5 - 1
0522617-16		5 - 1
0522617-2		4 -14

PART NUMBER	FIGURE AND INDEX NO.
0522629-1	19 - 5
0522629-1	20 - 5
0522629-1	159 -20
0522630-1	6 -35A
0522630-1	8 -31A
0522630-2	6 -35A
0522630-2	8 -31B
0522630-3	7 -25
0522630-3	9 -26
0522630-4	7 -26
0522630-4	9 -27
0523003-10	10 -16
0523003-11	10 -16A
0523003-40	14 -20
0523003-48	6 - 9
0523003-48	8 - 9
0523003-52	14 - 4
0523003-56	10 -26
0523003-57	10 -26
0523003-62	14 - 4
0523003-62	15 - 7
0523003-63	10 -16A
0523003-74	14 - 5
0523003-79	14 - 4
0523003-80	14 -13
0523003-81	14 -16
0523003-83	14 - 6
0523005-100	6 -
0523005-200	6 -
0523005-201	6 -
0523005-202	8 -
0523005-203	8 -
0523005-204	10 -
0523005-205	6 -
0523005-206	8 -
0523005-209	8 -
0523005-21	10 - 1
0523005-214	6 -
0523005-215	6 -
0523005-216	6 -
0523005-217	8 -
0523005-218	8 -
0523005-219	8 -
0523005-22	10 - 1
0523005-220	8 -
0523005-222	6 -
0523005-224	8 -
0523005-229	10 -15
0523005-50	12 -26
0523005-51	12 -26
0523005-52	10 -25
0523005-53	10 -25
0523005-54	10 -
0523005-55	10 -
0523005-56	10 -15
0523005-57	10 -15
0523005-59	14 - 2
0523005-60	14 -14
0523005-61	14 - 1
0523005-68	10 - 1
0523005-83	6 -
0523005-85	8 -
0523005-87	14 - 1
0523005-88	14 - 2
0523005-91	6 -
0523005-92	8 -
0523005-96	8 -
0523007-10	14 - 3
0523007-42	14 -12
0523007-45	14 -15
0523007-9	14 - 3
0523008-10	6 -43
0523008-10	8 -39
0523008-10	8 -39

PART NUMBER	FIGURE AND INDEX NO.
0523008-3	6 -42
0523008-3	8 -38
0523008-4	6 -42
0523008-4	8 -38
0523008-7	6 -40
0523008-7	8 -36
0523008-9	6 -43
0523010-1	7 - 4
0523010-1	9 - 4
0523010-2	7 - 4
0523010-2	9 - 4
0523011-1	7 -
0523011-10	15 - 6
0523011-11	15 - 6
0523011-12	15 -16
0523011-13	9 -
0523011-14	9 -
0523011-17	15 - 2
0523011-18	15 - 2
0523011-19	15 -14
0523011-2	7 -
0523011-20	15 -14
0523011-3	15 -13
0523011-4	15 -13
0523011-5	15 - 1
0523011-6	15 - 1
0523011-7	15 -15
0523011-8	15 - 5
0523011-9	15 - 5
0523014-1	13 - 2
0523014-2	13 - 2
0523014-3	13 - 2
0523014-4	13 - 2
0523015-1	13 - 1
0523015-2	13 - 1
0523016-1	13 -10
0523017-1	13 -13
0523017-2	13 -13
0523018-1	13 -
0523018-2	13 -
0523018-3	13 -
0523018-4	13 -
0523019-1	13 -12
0523020-1	13 -11
0523020-2	13 -11
0523020-3	13 -11
0523020-4	13 -11
0523021-1	13 -14
0523021-2	13 -14
0523021-3	13 -14
0523021-4	13 -14
0523022-1	13 -16
0523022-2	13 -16
0523023-1	7 - 7
0523023-1	9 - 7
0523025-1	7 -12
0523026-1	11 - 2
0523026-2	11 - 2
0523027-1	11 - 6
0523027-2	11 - 7
0523027-3	11 - 5
0523028-1	11 -
0523028-2	11 -
0523028-3	11 -
0523028-4	11 -
0523028-5	11 - 1
0523028-6	11 - 1
0523028-7	11 - 1
0523028-8	11 - 1
0523029-1	11 -15
0523029-2	11 -15
0523029-3	11 -16
0523029-4	11 -16
0523030-1	11 -25

PART NUMBER	FIGURE AND INDEX NO.
0523030-2	11 -25
0523031-1	11 -17
0523031-2	11 -17
0523032-1	11 -18
0523032-2	11 -18
0523033-1	11 -19
0523033-2	11 -19
0523034-1	11 -20
0523034-2	11 -20
0523035-1	11 -21
0523035-2	11 -21
0523036-1	11 -22
0523036-2	11 -22
0523037-1	13 -36
0523037-2	13 -35
0523037-3	13 -33
0523037-4	13 -31
0523038-1	15 -22
0523038-10	15 -18
0523038-11	15 -19
0523038-12	15 -19
0523038-13	15 -22
0523038-14	15 -22
0523038-15	15 -24
0523038-16	15 -24
0523038-17	15 -25
0523038-18	15 -25
0523038-19	15 -17
0523038-2	15 -22
0523038-20	15 -17
0523038-21	15 -18
0523038-22	15 -18
0523038-23	15 -19
0523038-24	15 -19
0523038-3	15 -24
0523038-4	15 -24
0523038-5	15 -25
0523038-6	15 -25
0523038-7	15 -17
0523038-8	15 -17
0523038-9	15 -18
0523039-1	15 - 3
0523039-2	9 -13
0523039-2	15 - 4
0523040-1	13 -30
0523040-2	13 -30
0523041-1	13 -19
0523041-2	13 -19
0523041-3	13 -21
0523041-4	13 -21
0523042-1	13 -26
0523043-1	13 -32
0523043-2	13 -32
0523044-1	13 -34
0523044-2	13 -34
0523045-1	15 -21
0523045-2	15 -21
0523045-5	15 -20
0523045-6	15 -20
0523046-1	13 -23
0523046-2	13 -23
0523047-1	21 -18
0523047-2	21 -18
0523048-1	11 -15A
0523106	10 -23
0523107	10 - 6
0523107-2	10 - 2
0523107-3	10 - 2
0523108	10 - 7
0523110-1	10 -17
0523110-2	10 -17
0523111-1	10 - 8
0523111-2	10 - 8
0523115	196 - 1

PART NUMBER	FIGURE AND INDEX NO.
0523115-2	4 -21
0523115-3	196 - 2
0523115-5	196 - 3
0523118-1	196 - 4
0523215	12 -32
0523215-1	12 -32
0523216	12 -31
0523218	19 -12
0523218	149 -65
0523218	150 -52
0523218-2	19 -16
0523219-2	6 -36
0523219-2	7 -37
0523219-2	8 -32
0523219-2	9 -39
0523219-3	6 -36
0523219-3	7 -37
0523219-3	8 -32
0523219-3	9 -39
0523219-4	6 -36
0523219-4	7 -37
0523219-4	8 -32
0523219-4	9 -39
0523219-5	6 -36
0523219-5	7 -37
0523219-5	8 -32
0523219-5	9 -39
0523221	19 - 2
0523222	19 -10
0523223	19 - 1
0523223	149 -64
0523223	150 -50
0523223-1	19 - 1
0523223-1	149 -64
0523223-1	150 -50
0523230	6 -28
0523230	7 -31
0523230	8 -24
0523230	9 -33
0523230-1	6 -28
0523230-1	7 -31
0523230-1	8 -24
0523230-1	9 -33
0523230-4	6 -28
0523230-4	7 -31
0523230-4	8 -24
0523230-4	9 -33
0523230-5	6 -28
0523230-5	7 -31
0523230-5	8 -24
0523230-5	9 -33
0523231	6 -24
0523231	8 -20
0523231-13	7 -14
0523231-13	9 -15
0523231-5	6 -24
0523231-5	8 -20
0523232-2	6 -23
0523232-2	8 -19
0523232-6	7 -13
0523232-6	9 -14
0523233	6 -26
0523233	8 -22
0523233-11	7 -15
0523233-11	9 -16
0523233-2	6 -25
0523233-2	8 -21
0523233-22	7 -21
0523233-22	9 -22
0523233-3	6 -27
0523233-3	7 -22
0523233-3	8 -23
0523233-3	9 -23
0523301-1	12 -

PART NUMBER	FIGURE AND INDEX NO.
0523301-2	12 -
0523301-3	12 -
0523301-4	12 -
0523306	12 - 6
0523306	13 - 6
0523307-1	21 - 4
0523308	12 -10
0523309	12 -13
0523309-1	12 -13
0523311	12 -12
0523314	12 -11
0523314-1	12 -11
0523315	12 -14
0523315-1	12 -14
0523316	12 -18
0523316-1	12 -18
0523317	12 - 1
0523317-1	12 - 1
0523318	12 -17
0523318-1	12 -17
0523319-3	12 -15
0523319-4	12 -15
0523321-1	12 -16
0523321-2	12 -16
0523322-1	12 - 2
0523322-2	12 - 2
0523400-110	12 -18
0523400-14	12 -18
0523400-15	12 -18
0523400-20	12 -22
0523400-21	12 -22
0523400-50	12 -19
0523400-51	12 -19
0523406	12 -26
0523406-1	12 -26
0523406-4	13 -20
0523406-5	13 -20
0523407	6 -33
0523407	7 -27
0523407	8 -28
0523407	9 -28
0523407-1	6 -32
0523407-1	7 -28
0523407-1	8 -29
0523407-1	9 -29
0523408	6 -31
0523408	8 -27
0523409	12 -25
0523409	13 -27
0523505-1	8 -41
0523505-2	8 -41
0523505-5	9 -18
0523505-6	9 -18
0523507	6 - 7
0523507	8 - 7
0523507-1	6 - 7
0523507-1	8 - 7
0523508-12	8 -42
0523508-16	7 -16
0523508-25	8 -42
0523508-26	8 -42
0523508-28	9 -19
0523508-29	9 -19
0523508-35	6 -10
0523508-37	7 -16
0523508-5	6 -10
0523509-1	6 -12
0523509-1	6 -12
0523509-16	6 -12
0523509-18	7 -18
0523509-18	9 -31
0523510	8 -11
0523510-1	8 -11
0523510-19	7 -30

PART NUMBER	FIGURE AND INDEX NO.
0523510-19	9 -32
0523510-20	7 -30
0523510-20	9 -32
0523510-6	6 -15
0523510-6	8 -11
0523510-7	6 -15
0523510-7	8 -11
0523511-14	7 -32
0523511-14	9 -34
0523511-15	7 -33
0523511-15	9 -35
0523511-3	6 -16
0523511-3	8 -12
0523511-4	6 -29
0523511-4	8 -25
0523512-19	7 -34
0523512-19	9 -36
0523512-22	7 -35
0523512-22	9 -37
0523512-3	6 -17
0523512-3	8 -13
0523512-4	6 -30
0523512-4	8 -26
0523512-5	10 -20
0523513-13	7 -36
0523513-13	9 -38
0523513-14	7 -36
0523513-14	9 -38
0523513-3	6 -18
0523513-3	8 -14
0523513-4	10 -21
0523513-6	6 -18
0523513-6	8 -14
0523514-3	6 -19
0523514-3	8 -15
0523514-4	10 -22
0523514-7	7 -38
0523514-7	9 -40
0523515-3	6 -20
0523515-3	8 -16
0523515-4	10 -27
0523515-7	7 -39
0523515-7	9 -41
0523517-3	6 -14
0523517-3	7 -20
0523517-4	6 -13
0523517-4	7 -19
0523519	6 - 8
0523519	6 - 8
0523519-1	8 - 8
0523519-1	8 - 8
0523519-10	8 - 8A
0523519-14	7 -11
0523519-15	7 -10
0523519-16	7 -10
0523519-19	9 -11
0523519-2	8 - 8
0523519-20	9 -12
0523519-21	9 -10
0523519-22	9 -10
0523519-7	6 - 8A
0523519-8	6 - 8A
0523519-9	8 - 8A
0523520-9	16 - 5
0523520-9	17 - 9
0523521-18	4 -15
0523521-19	4 -15
0523521-24	5 - 2
0523521-25	5 - 2
0523521-26	5 - 2
0523521-27	5 - 2
0523521-6	4 -18
0523521-6	5 -10
0523522	6 -38

PART NUMBER	FIGURE AND INDEX NO.
0523522	7 - 8
0523522	16 - 1
0523522-1	6 -39
0523522-1	7 - 9
0523522-1	8 -35
0523522-1	9 - 9
0523522-1	16 - 3
0523522-1	17 - 7
0523522-10	8 -34
0523522-10	9 - 8
0523522-10	17 - 6
0523522-5	6 -38
0523522-5	7 - 8
0523522-5	16 - 2
0523522-7	6 -38
0523522-7	7 - 9
0523522-7	8 -35
0523522-7	9 - 9
0523522-7	16 - 4
0523522-7	17 - 8
0523522-8	8 -34
0523522-8	9 - 8
0523522-8	17 - 5
0523524	12 - 4
0523524	12 -20
0523524	13 - 4
0523524	13 -24
0523524	12 - 4
0523529-1	16 -19
0523529-1	16 -27
0523529-1	17 -12
0523531	16 - 9
0523531	17 -19
0523532	16 -22
0523532	16 -29
0523532	17 -11
0523535	20 - 1
0523535	158 -71
0523535-1	20 - 1
0523535-1	158 -71
0523536	20 - 4
0523536	159 -20
0523536	159 -36
0523537	20 - 6
0523537	158 -72
0523537	159 -22
0523537-2	20 -11
0523539-10	8 -31
0523539-2	6 -34
0523539-2	7 -23
0523539-3	6 -34
0523539-3	7 -23
0523539-3	9 -24
0523539-4	6 -35
0523539-4	7 -24
0523539-5	6 -35
0523539-5	7 -24
0523539-5	9 -25
0523539-7	8 -30
0523539-7	9 -24
0523539-8	8 -30
0523539-9	8 -31
0523539-9	9 -25
0523540	6 - 8A
0523540-1	8 - 8
0523540-2	4 -17
0523540-2	5 - 9
0523541-1	14 -21
0523541-10	14 -18
0523541-11	14 -19
0523541-12	14 -19
0523541-2	14 -21
0523541-3	14 -22
0523541-4	14 -22

PART NUMBER	FIGURE AND INDEX NO.
0523541-5	14 -23
0523541-6	14 -23
0523541-7	14 -17
0523541-8	14 -17
0523541-9	14 -18
0523542-1	10 -19
0523552-2	16 -11
0523552-2	17 -21
0523554-1	16 -12
0523554-1	17 -22
0523554-2	16 -13
0523554-2	17 -23
0523556-1	16 -14
0523556-1	17 -24
0523557-1	16 -17
0523557-1	17 -17
0523558-1	5 -11
0523559-11	17 -27
0523559-12	16 -32
0523559-6	17 -27
0523559-6	165 - 1
0523559-8	16 -32
0523559-8	165 - 1
0523559-8	166 - 1
0523559-8	167 - 1
0523559-8	168 - 1
0523560-1	9 -17
0523564-2	6 -12
0523565-200	6 -50
0523565-200	8 -46
0523565-201	6 -50
0523565-201	8 -46
0523565-21	6 -52
0523565-21	8 -48
0523565-22	6 -52
0523565-22	8 -48
0523565-29	6 -50A
0523565-29	8 -46A
0523565-30	6 -50A
0523565-30	8 -46A
0523566-1	4 -46
0523566-2	4 -46
0523566-5	4 -46
0523566-6	4 -46
0523606-14	21 - 1
0523606-15	21 - 1
0523606-17	21 - 1
0523606-18	21 - 1
0523606-4	21 -14
0523606-5	21 -13
0523608-2	21 -10
0523613-1	21 -12
0523614-1	21 - 8
0523619-1	5 -11
0523701-4	6 -47
0523701-4	8 -44
0523702-3	4 -38
0523702-4	4 -38
0523800	19 -19
0523800-1	19 -19
0523800-10	19 -33
0523800-11	19 -33
0523800-12	19 -34
0523800-13	19 -34
0523800-6	19 -31
0523800-7	19 -31
0523800-8	19 -32
0523800-9	19 -32
0523806	19 -22
0523806-1	19 -22
0523807	19 -39
0523808	19 -23
0523808-2	19 -23
0523809	19 -24
0523809-1	19 -24
0523810	19 -25
0523811	19 -26
0523811-1	19 -26
0523812-2	19 -27
0523813-1	19 -35
0523813-2	12 -28
0523813-3	12 -27
0523813-4	12 -29
0523813-5	12 -30
0523813-6	19 -37
0523813-7	19 -38
0523813-8	19 -36
0523814-6	19 -30
0523901-13	20 -25
0523901-14	20 -24
0523901-2	20 -30
0523901-3	20 -30
0523901-35	20 -13
0523901-36	20 -31
0523901-37	20 -26A
0523901-38	20 -13
0523901-39	20 -31
0523901-6	20 -32
0523901-7	20 -32
0523911	20 -20
0523911-1	20 -20
0523912	20 -21
0523912-1	20 -22
0523914	20 -26
0523918	20 -27
0523919	20 -16
0523920	20 -15
0523921	20 -14
0523922	20 -17
0523923	20 -23
0526000-18	17 - 1
0526000-19	17 - 1
0526007-201	16 -24
0526007-203	16 -24
0526007-4	16 -24
0526007-44	16 -24
0528812-3	19 -27
0530010-5	24 -45
0530010-6	24 -46
0530011-2	52 -15
0531006-1	49 -99
0531006-10	22 -27
0531006-101	22 -21A
0531006-13	22 -10
0531006-15	22 -11
0531006-16	22 - 9
0531006-17	22 -12
0531006-18	22 -13
0531006-19	22 -14
0531006-20	22 -15
0531006-203	22 -
0531006-21	22 -21
0531006-22	22 -19
0531006-24	23 -31
0531006-25	23 -32
0531006-28	23 -29
0531006-29	23 -28
0531006-3	23 -
0531006-30	23 -26
0531006-32	23 -27
0531006-33-791	22 -16
0531006-34-791	23 -14
0531006-35-791	23 -34
0531006-39	22 -23
0531006-40	23 - 7
0531006-44	22 -24
0531006-45	23 - 9
0531006-46	23 -10
0531006-49	22 -25
0531006-5	22 - 8
0531006-50	23 -11
0531006-51	23 -12
0531006-52	23 -36
0531006-54	22 -22
0531006-55	23 - 6
0531006-57	22 - 7
0531006-58	23 -37
0531006-6	23 - 5
0531006-62	23 -25
0531006-63	23 - 8
0531006-64	22 -
0531006-65	22 - 6
0531006-66	23 -
0531006-68	23 - 5
0531006-69	23 -13
0531006-7	23 -13
0531006-70	23 -35
0531006-71	23 -30
0531006-72	49 -99
0531006-76	49 -99
0531006-77	22 -
0531006-79	23 -36
0531006-8	23 -35
0531006-80-791	23 -34
0531006-81	23 -
0531006-82	22 - 7
0531006-84	22 - 6
0531006-85	23 -25A
0531006-87	22 -12
0531006-88	22 -
0531006-9	22 -26
0531006-95	22 - 7
0531006-96	22 - 6
0531007-3-791	200 - 1
0531008-1	23 -33
0531009-1	201 -10
0531012-1	49 -99A
0531012-2	50 - 6
0531013-1	22 -16A
0531013-1	22 -28
0531013-2	201 -10
0531014-1	22 -21B
0531015-5	50 - 5
0531018-1	23 -11
0531018-2	23 -12
0531018-3	23 -10
0531018-4	23 - 9
0531018-6	23 - 7
0531018-7	23 - 8
0531019-3	50 - 3
0531019-4	50 - 4
0531019-8	50 - 1
0531019-9	50 - 2
0531020-1	49 -99C
0531102-3	23 -24
0531102-5	23 -24
0531105-10	26 -31
0531105-11	26 -32
0532001-100-791	26 -26
0532001-101	26 -48
0532001-13	24 - 8
0532001-14	24 - 9
0532001-15	24 -10
0532001-16	24 -11
0532001-17	24 -12
0532001-20	24 -38
0532001-202	24 - 2
0532001-21	24 -14
0532001-22	24 -15
0532001-23	24 -16
0532001-28	26 -15
0532001-29	26 -16

PART NUMBER	FIGURE AND INDEX NO.
0532001-30	26 -36
0532001-31	26 -37
0532001-32	26 -38
0532001-33	26 -39
0532001-35	26 -40
0532001-4	26 -48
0532001-42	26 -49
0532001-43	26 -50
0532001-44	26 -51
0532001-45	26 -35
0532001-47	26 - 5
0532001-48	26 -52
0532001-50	24 -22
0532001-7	24 -33
0532001-73	26 -10
0532001-74	24 -17
0532001-75	24 -18
0532001-76	24 -19
0532001-77	24 -13
0532001-78	24 -21
0532001-8	24 -34
0532001-80	26 -47
0532001-81	24 -35
0532001-82	26 -18
0532001-83	26 -17
0532001-84	26 -46
0532001-85	26 -45
0532001-86	26 -27
0532001-87	26 -28
0532001-88	26 -19
0532001-89	26 -22
0532001-90	26 -20
0532001-91	26 -21
0532001-92	26 -43
0532001-93	24 -20
0532001-94-791	26 -25
0532001-95	26 -44
0532001-96	24 -32
0532001-97	24 -37
0532001-98	24 -36
0532001-99	24 - 7
0532006-1	24 -40
0532104	23 - 2
0532104	24 -27
0532104	24 -29
0532105-3	26 -29
0532105-4	26 -30
0532105-6	24 -26
0532105-9	24 -28
0532107-1	26 -23
0533001-3	23 -39
0533009-1-791	23 -14A
0533010-1	160 -10
0533011-1	23 -24A
0534122-1	26 - 1
0534122-1	154 -17
0534122-1	155 -16
0534126-1	26 -33
0534126-2	26 -34
0541115-2	108 -10
0541115-2	187 -13
0541115-3	108 - 7
0541115-3	187 -15
0541115-4	108 - 8A
0541115-4	108 - 8B
0541121-1	46 - 1
0541121-2	46 - 2
0541122-1	46 - 4
0541122-2	46 - 5
0541124	67 -26
0541124-1	67 -32
0541138-16	145 -11
0541138-16	146 -
0541138-20	145 -11

PART NUMBER	FIGURE AND INDEX NO.
0541138-20	146 -
0541138-22	145 -11
0541138-22	146 -
0541138-5	146 -17
0541139	146 - 9
0541140	146 - 1
0541143	146 -20
0541144	146 -19
0541146-1	146 - 6
0541147-2	146 -10
0541148	146 -16
0541148-1	146 -23
0541149	146 -17
0541151	146 - 8
0541153	67 - 8
0541154-1	67 -12
0541155-1	67 -11
0541155-2	67 -11
0541156-1	67 -16
0541156-2	67 -16
0541161-2	69 - 9
0541161-3	69 - 9
0541164-3	67 -11
0541164-4	67 -11
0541165-1	146 - 3
0541167-1	146 - 7
0541172-1	142 -29
0541173-1	142 -30
0541174-1	142 -28
0541178-1	142 -33
0541180-1	67 -54
0541183-9	69 -
0541184-1	146 -14
0541184-2	146 -14
0541184-200	146 -10
0541185-5	67 -50
0541185-6	67 -50
0541188-1	68 -47
0541188-2	68 -47
0541191-1	68 -34
0541191-2	68 -34
0541193-7	68 -32
0541193-8	68 -32
0541195-5	47 - 5
0541195-6	47 - 6
0541196-1	47 - 8
0541196-2	47 - 9
0541197-1	68 - 7
0541197-2	68 - 7
0541198-10	68 - 6
0541198-5	68 - 6
0541198-6	68 - 6
0541198-9	68 - 6
0541199-1	68 -12
0541202-4	68 - 1
0541203-1	68 -42
0541203-2	68 -42
0541205-1	68 -45
0541205-2	55 -33B
0541206-1	68 -43
0541207-1	68 -44
0541207-3	55 -35B
0541207-3	55 -35B
0541208-1	108 - 4
0541210-1	68 -46A
0541210-2	68 -46A
0541211-1	68 - 8
0541212-1	68 - 7
0541212-2	68 - 7
0541213-1	68 -37A
0541213-2	68 -37A
0541218-1	68 -70
0541218-2	68 -70
0541219-1	68 -60

PART NUMBER	FIGURE AND INDEX NO.
0541219-2	68 -60
0541220-1	68 -66
0541220-2	68 -66
0541221-1	68 -62
0541221-2	55 -33C
0541222-1	68 -61
0541222-5	55 -35C
0541223-13	55 -35D
0541223-13	68 -58
0541223-16	68 -57
0541223-17	68 -57
0541224-1	68 -72
0541224-2	68 -72
0541226-1	68 -37B
0542100-1	64 - 1
0542100-6	65 - 1
0542101-1	64 - 5
0542101-1	65 - 5
0542102-1	64 - 6
0542102-3	65 - 6
0542118-1	64 - 4
0542118-5	65 - 4
0543000-6	57 -12
0543000-6	58 -17
0543001	55 -20
0543003	55 -22
0543008-2	57 - 1
0543008-2	58 - 1
0543013-1	31 -22
0543013-1	32 -26
0543013-1	33 -26
0543015-6	31 -35
0543015-6	32 -17
0543015-6	33 -17
0543016-1	31 -20
0543016-1	32 -15
0543016-1	33 -15
0543018-1	55 - 3
0543018-1	56 - 3
0543022-1	55 - 6
0543022-1	56 - 6
0543022-2	55 - 6
0543022-2	56 - 6
0543023	55 - 9
0543023	56 - 9
0543026-1	31 -35
0543026-1	32 -17
0543026-1	33 -17
0543029	57 -24
0543029	58 -29
0543032	2 - 7
0543032	57 -25
0543032	58 -30
0543032-2	2 - 7
0543032-2	3 - 4
0543032-2	57 -25
0543032-2	58 -30
0543035-3	57 -39
0543035-3	58 -44
0543035-8	57 -27
0543035-8	58 -32
0543036-1	57 -13
0543036-1	58 -18
0543037-1	55 -21
0543039-200	57 -
0543039-201	57 - 2
0543042-1	55 - 4
0543042-1	56 - 4
0543042-2	55 - 4
0543042-2	56 - 4
0543045-200	58 - 2
0543046-1	57 - 9
0543046-1	58 - 3
0543047-1	57 -31

PART NUMBER	FIGURE AND INDEX NO.
0543047-1	57 -43
0543047-1	58 -36
0543047-1	58 -48
0543048-1	57 -31A
0543048-1	57 -43A
0543048-1	58 -36A
0543048-1	58 -48A
0543060-1	66 -10
0543060-2	66 -11
0543060-3	66 -12
0543061-1	66 -
0543062-200	57 -
0543062-201	57 - 2
0543062-202	58 -
0543062-203	58 - 2
0543063-1	55 -36A
0543063-7	55 -36C
0543065-1	55 -23B
0543079-3	55 -23C
0550100-4	122 -28
0550100-6	125 -21
0550100-7	125 - 3
0550100-8	167 -63
0550100-8	168 -76
0550100-8	173 - 7
0550100-8	173 -11
0550100-9	122 -40
0550100-9	124 -46
0550123	125 -18
0550153-1	122 - 4
0550153-1	123 - 3
0550156	124 - 5
0550176-22	131 -10
0550176-26	131 -17
0550176-31	131 -16
0550176-37	131 - 3
0550176-38	131 - 4
0550176-45	131 -11
0550176-50	131 -12
0550176-53	131 -15
0550176-54	131 -15
0550176-55	131 - 1
0550176-56	131 - 2
0550176-57	131 - 8
0550176-59	131 - 7
0550176-65	131 - 1
0550176-66	131 - 2
0550180-1	125 -31
0550180-10	123 -60
0550180-10	125 -34
0550180-13	123 -61
0550180-16	123 -62
0550180-16	125 -35A
0550180-20	125 -37
0550180-21	125 -38
0550180-22	125 -39
0550180-27	125 -31
0550180-28	125 -35
0550181-1	126 -25
0550181-1	126 -31
0550181-7	126 -32
0550184-1	122 -19
0550184-2	122 -19
0550185-1	122 -11
0550186-1	125 - 5
0550188-1	126 -29
0550189-1	124 -42
0550197-1	125 -31A
0550197-4	126 -33
0550197-5	125 -31A
0550198-1	123 -59
0550202-11	174 -10
0550202-3	174 - 9
0550202-9	174 - 4

PART NUMBER	FIGURE AND INDEX NO.
0550209-1	102 -39
0550209-1	186 -11
0550211-2	111 - 1
0550211-2	112 - 1
0550211-3	111 - 1
0550211-3	112 - 1
0550214-9	126 -34
0550215-8	126 - 5
0550218-1	126 -24
0550218-2	126 -24
0550219-19	187 -53
0550222-2	101 -27
0550224-1	125 -18
0550224-4	125 -18
0550227-1	126 -37
0550227-1	129 -
0550228-26	111 - 9
0550228-28	111 - 5
0550228-3	111 - 7
0550228-35	111 - 9
0550229-1	126 - 6
0550229-2	126 - 6
0550230-10	187 -23
0550230-2	187 -37
0550230-3	187 -35
0550230-4	187 -36
0550230-7	187 -22
0550230-8	187 -23
0550230-9	187 -22
0550236-10	112 - 8
0550236-3	112 -10
0550236-6	112 - 8
0550236-8	112 - 6
0550236-8	113 - 5
0550238-1	203 -22
0550292-1	111 - 1
0550292-1	112 - 1
0550311-1	126 -19
0550315-200	127 -14
0550315-200	130 -
0550321-10	113 - 9
0550321-4	113 - 7
0550323-1	125 -58
0551009-1	124 - 9
0551011-1	124 -13
0551012-1	124 -12
0551013-1	124 - 7
0551013-2	124 - 7
0551013-3	124 - 8
0551013-4	124 - 8
0551014-1	125 - 8
0551017-1	123 - 6
0551019-1	123 -45
0551019-5	123 -45
0552003-26	121 - 6
0552003-28	121 - 7
0552003-39	115 - 5
0552003-39	115 - 7
0552003-39	116 - 5
0552003-39	116 - 7
0552003-39	121 -27
0552003-72	121 -26
0552007-13	121 - 5
0552007-15	121 -31
0552007-17	121 -17
0552007-18	121 -18
0552007-200	121 -14
0552007-24	121 -22
0552007-25	121 -23
0552007-26	121 -23
0552007-27	121 -25
0552007-28	121 -24
0552007-29	121 -28
0552007-30	121 -28

PART NUMBER	FIGURE AND INDEX NO.
0552007-32	121 -12
0552007-35	121 -10
0552007-37	121 -13
0552007-38	121 -13
0552007-4	121 -30
0552007-41	121 -29
0552007-42	121 -29
0552007-43	121 - 8
0552007-48	121 - 9
0552007-5	121 -41
0552007-53	121 -11
0552007-54	121 -14
0552007-55	121 - 2
0552007-6	121 -39
0552007-6	126 -23
0552007-65	121 -49A
0552007-66	121 -46
0552007-67	121 -34
0552007-68	121 -35
0552007-69	121 -33
0552007-70	121 -33
0552007-71	121 -48
0552007-72	121 -48
0552007-73	121 -32
0552007-74	121 -32
0552007-77	121 -20
0552007-78	121 -21
0552007-81	121 -49
0552007-82	121 -49
0552007-83	121 -42
0552007-84	121 -42
0552009-2	137 - 5
0552009-6	137 - 1
0552009-8	137 - 6
0552010-1	118 -40
0552010-14	115 -28
0552010-14	116 -24
0552010-14	117 -21
0552010-14	118 -31
0552010-14	119 -23
0552010-17	115 -29
0552010-18	115 -24
0552010-18	116 -21
0552010-18	117 -19
0552010-18	118 -28
0552010-18	119 -20
0552010-2	115 - 2
0552010-20	115 -25
0552010-20	116 -22
0552010-200	116 -16
0552010-21	115 - 4
0552010-21	116 - 4
0552010-22	115 - 7
0552010-22	116 - 7
0552010-25	115 - 8
0552010-26	115 - 8
0552010-27	115 -26
0552010-27	116 -23
0552010-28	115 -27
0552010-28	116 -23
0552010-38	115 -30
0552010-38	116 -26
0552010-39	115 -30
0552010-39	116 -26
0552010-4	115 -14
0552010-42	115 -28
0552010-42	116 -24
0552010-42	117 -21
0552010-42	118 -31
0552010-42	119 -23
0552010-43	115 - 9
0552010-43	116 - 9
0552010-43	117 - 9
0552010-44	115 -10

PART NUMBER	FIGURE AND INDEX NO.
0552010-44	116 -10
0552010-45	115 -17
0552010-46	115 -18
0552010-47	115 -31
0552010-47	116 -27
0552010-47	117 -25
0552010-47	118 -35
0552010-47	119 -27
0552010-47	120 -34
0552010-49	115 -32
0552010-49	116 -28
0552010-49	117 -26
0552010-49	118 -42
0552010-49	119 -34
0552010-53	115 -19
0552010-54	115 -13
0552010-54	116 -13
0552010-54	117 - 8
0552010-54	118 -15
0552010-54	119 - 8
0552010-54	120 - 8
0552010-56	116 - 2
0552010-59	116 -20
0552010-6	115 -23
0552010-60	116 - 8
0552010-60	117 - 6
0552010-60	118 -12
0552010-60	119 - 6
0552010-60	120 - 6
0552010-62	117 - 1
0552010-65	117 -16
0552010-68	117 - 7
0552010-68	119 - 7
0552010-68	118 -13
0552010-69	117 - 3
0552010-69	119 - 3
0552010-69	119 - 3A
0552010-7	115 - 3
0552010-7	116 - 3
0552010-70	117 - 5
0552010-70	119 - 5
0552010-70	119 - 5A
0552010-70	118 - 9
0552010-72	117 - 4
0552010-73	117 -24
0552010-73	118 -34
0552010-73	119 -26
0552010-73	120 -33
0552010-74	117 -24
0552010-74	118 -34
0552010-74	119 -26
0552010-74	120 -33
0552010-77	117 - 2
0552010-78	117 -14
0552010-8	115 - 6
0552010-8	116 - 6
0552010-82	115 - 9
0552010-82	116 - 9
0552010-82	117 - 9
0552010-83	119 - 9
0552010-84	119 - 9
0552010-84	119 - 9
0552010-86	116 - 8
0552010-86	117 - 6
0552010-86	118 -12
0552010-86	119 - 6
0552010-86	120 - 6
0552010-87	117 -18
0552010-87	118 -27
0552010-87	119 -19
0552010-87	120 -29
0552010-88	117 -18
0552010-88	118 -27
0552010-88	119 -19

PART NUMBER	FIGURE AND INDEX NO.
0552010-88	120 -29
0552010-89	117 -17
0552010-89	118 -26
0552010-89	119 -18
0552010-89	120 -28
0552010-91	118 -17
0552010-91	119 - 9A
0552010-91	120 - 9
0552010-92	119 - 5A
0552010-92	120 - 5
0552010-93	119 - 3A
0552010-93	120 - 3
0552010-94	119 - 6
0552010-94	119 - 6
0552010-94	120 - 6
0552010-94	118 -12
0552010-95	118 -16
0552011-11	123 -33A
0552011-11	137 -17
0552011-12	123 -33B
0552011-12	137 -18
0552011-13	123 -33C
0552011-13	137 -19
0552011-2	137 - 8
0552011-4	137 -12
0552011-6	137 - 8
0552012-5	114 - 1
0552016-1	114 - 6
0552016-3	114 - 9
0552016-4	114 -10
0552019-1	116 -14
0552019-1	117 -10
0552019-10	119 -22
0552019-10	120 -31
0552019-12	119 -10
0552019-13	120 -12
0552019-15	120 -10
0552019-4	118 -18
0552019-6	116 -25
0552019-6	117 -20
0552019-6	117 -22
0552019-6	118 -30
0552019-8	119 -10
0552110-3	2 -71
0552110-3	3 -27
0552110-3	137 - 4
0552110-3	137 - 5
0552110-3	137 - 7
0552110-3	137 -10
0552110-3	137 -12C
0552110-3	137 -12C
0552112-15	118 - 3
0552112-15	119 - 2
0552112-16	118 - 7
0552112-16	119 - 4
0552112-17	118 - 1
0552112-18	118 -23
0552112-20	118 -25
0552112-20	119 -17
0552112-20	120 -27
0552112-200	118 -23
0552112-202	119 - 1
0552112-203	119 -15
0552112-204	119 -15
0552112-204	120 -25
0552112-205	119 - 1
0552112-206	119 - 1
0552112-207	119 - 1
0552112-22	118 - 2
0552112-25	118 - 4
0552112-25	119 - 2
0552112-25	120 - 2
0552112-26	118 - 8
0552112-26	119 - 4A

PART NUMBER	FIGURE AND INDEX NO.
0552112-26	120 - 4
0552112-27	120 - 1
0552112-28	120 - 1
0552112-29	118 - 8
0552112-29	119 - 4A
0552112-29	120 - 4
0552112-30	118 - 2
0552112-31	119 - 4A
0552112-31	118 - 7
0552112-32	118 - 1
0552112-69	118 - 5
0552112-8	118 -25
0552112-8	119 -17
0552112-9	119 - 2
0552112-9	118 - 3
0552112-92	118 -10
0552112-93	118 - 6
0552113-1	123 -55
0552113-11	123 -55
0552113-13	123 -55A
0552113-5	123 -65
0552114-1	123 -52
0552114-2	123 -52
0552115-1	118 -22
0552116-10	123 -54
0552117-1	137 - 8
0552118-1	137 -15
0552119-6	197 - 2
0552120-1	123 -52A
0552122-1	197 - 1
0552123-1	119 -14
0552130-11	123 -65A
0552130-5	125 -47A
0552131-1	118 -13
0552131-1	119 - 7
0552132-1	137 -12A
0552132-2	137 -12B
0552133-5	197 -15
0552139-1	120 -15
0552143-1	118 -14
0552143-1	119 - 7A
0552143-1	120 - 7
0552151-1	119 - 5B
0552151-1	120 - 5A
0552151-1	118 -11
0552154-1	3 -26B
0552154-1	137 -12D
0553001-1	140 - 5
0553005-3	205 - 4
0553006-200	41 -
0553006-201	41 - 3
0553006-202	41 - 1
0553006-203	41 -
0553006-4	41 -40
0553007-1	41 -33
0553007-2	41 -33
0554001-1	132 - 2
0554001-3	132 - 2A
0554001-5	132 - 2A
0554001-6	132 - 5A
0554001-7	132 - 5B
0554003-1	132 - 5C
0555162-1	133 - 3
0555162-1	136 -13
0555162-1	187 -36
0555167-10	136 -31
0555167-11	136 -33
0555167-12	136 -34
0555167-13	136 -39
0555167-14	136 -40
0555167-2	136 -32
0555167-5	136 -36
0555167-6	136 -37
0555167-7	136 -38

PART NUMBER	FIGURE AND INDEX NO.
0555169-15	136 - 1
0555169-16	136 - 2
0555169-5	136 - 3
0555171-1	136 -10
0555174-7	133 -42
0555174-8	133 -43
0555174-9	133 -44
0555175-1	133 -41
0555175-1	136 -23
0555175-3	133 -36
0555175-3	136 -20
0555179-1	133 -23
0555179-11	133 -27
0555179-12	133 -24
0555179-14	133 -28
0555179-2	133 -24
0555179-5	133 -27
0555179-6	133 -28
0555179-8	133 -29
0555179-9	133 -23
0555180-1	133 -13
0555180-1	136 -14
0555180-2	133 -18
0555180-5	133 -16
0555180-5	133 -21
0555180-5	136 -18
0555180-6	136 -15
0555181-1	133 - 1
0555181-13	133 - 2
0555181-14	133 - 2A
0555181-5	133 - 6
0555181-5	136 - 5
0555181-5	187 -36
0555181-6	133 - 7
0555181-6	136 - 4
0555181-6	187 -36
0555181-7	133 - 8
0555181-7	187 -36
0555182-1	133 -10
0555189-1	133 -30
0555189-10	133 -33
0555189-3	133 -34
0555189-4	133 -35
0555189-5	133 -33
0555189-6	133 -30
0555189-8	133 -35
0555189-9	133 -34
0555190-1	136 -40
0555190-11	136 -46
0555190-12	136 -46
0555190-13	136 -47
0555190-2	136 -40
0555190-3	136 -44
0555190-4	136 -44
0555190-5	136 -41
0555190-6	136 -41
0555191-1	136 -48
0555198-1	134 -19
0555199-1	134 -14
0555199-2	134 -22
0555199-5	134 -18
0555199-6	134 -23
0555202-1	134 -33
0555202-3	134 -38
0555203-1	134 -48
0555203-3	134 -53
0555204-1	134 -40
0555204-3	134 -46
0555204-4	134 -46
0555204-4	135 -58
0555204-5	134 -40
0555204-5	135 -52
0555205-1	134 -25
0555205-3	134 -31

PART NUMBER	FIGURE AND INDEX NO.
0555206-1	134 - 1
0555206-11	135 - 7A
0555206-11	135 -13A
0555206-12	135 - 1
0555206-4	134 - 5
0555206-8	135 - 1
0555207-1	134 -10
0555207-3	134 -11
0555211-1	135 -12
0555211-5	135 - 7
0555211-5	135 -13
0555211-7	135 -12
0555212-1	135 -25
0555213-1	135 -60
0555213-4	135 -65
0555214-1	135 -36
0555214-4	135 -41
0555215-1	135 -44
0555215-3	135 -50
0555216-1	135 -27
0555216-10	123 -53A
0555216-13	135 -27
0555216-16	123 -53A
0555216-5	135 -30
0555216-6	135 -29
0555216-7	135 -28
0555216-8	135 -33
0555217-1	135 -15
0555217-3	135 -20
0555217-4	135 -21
0555217-5	135 -22
0555217-6	135 -23
0556004-7	163 -12
0556004-7	187 -43
0556005-2	187 -50
0556010-1	163 -20
0556012-1	187 -38
0556014-2	137 -13
0556014-6	137 -14
0556018-1	123 -24
0556020-1	168 -14
0556020-2	168 -15
0556020-3	168 -22
0556020-9	168 -23
0560006-1	148 -
0560006-5	148 -
0560006-6	148 -
0560013-1	188 -11
0570088-1	204 -20
0570088-3	204 -20
0570094-1	204 -22
0570094-2	204 -22
0570095-1	204 -22
0591102-1	28 -
0591102-12	29 -
0591102-14	29 -
0591102-18	30 -
0591102-19	30 -
0591102-2	28 -
0591102-20	30 -
0591102-21	30 -
0591102-24	30 -
0591102-25	30 -
0591102-28	30 -
0591102-29	30 -
0591102-3	28 -
0591102-30	30 -
0591102-31	30 -
0591102-32	30 -
0591102-33	30 -
0591102-5	29 -
0591102-7	29 -
0591102-8	29 -
0591301-11	36 -

PART NUMBER		FIGURE AND INDEX NO.
0591301-17		34 -
0591302-10		39 -
0591302-11		42 -
0591302-12		39 -
0591302-14		40 -
0591302-7		31 -
0591302-8		42 -
0591302-9		31 -
0591303-2		31 -
0591303-3		36 -
0591304-1		32 -
0591304-11		33 -
0591304-12		33 -
0591304-13		33 -
0591304-14		33 -
0591304-15		33 -
0591304-16		33 -
0591304-3		33 -
0591304-5		33 -
0591304-6		33 -
0591304-8		33 -
0591304-9		33 -
0592300-2		17 - 1
0592300-4		17 - 1
0592300-8		17 - 1
0592300-9		17 - 1
0593000-4		26 - 9
061-03700		70 -15
0700036-2		101 -30
0700100-191		82 - 5
0700100-193		84 - 5
0700103-131		82 -36
0700103-131		83 -35
0700108-1		82 -25
0700108-2		82 -25
0700109-8		82 -25
0700113-1		87 -36
0700113-1		93 -71
0700114-35	□	84 -18
0700120-1		200 - 7
0700122-1		108 -12
0700122-12		108 -12
0700122-13		108 -12
0700122-2		108 -12
0700148-1	□	202 -27
0700162-1		102 -27D
0700162-1		103 -35
0700162-1		104 -36
0700162-1		105 -43
0700162-1		106 -40
0700162-6		102 -27B
0700162-6		103 -38
0700162-6		104 -39
0700162-6		105 -46
0700162-6		106 -43
0700164-6		109 - 1
0700166-1		2 - 8
0700166-1		3 -12
0700166-1		73 - 7
0700166-2		2 - 8A
0700166-2		3 -13
0700166-2		75 - 7
0700166-2		76 - 6A
0700189-10		106 -42
0700189-4		102 -27C
0700189-4		103 -37
0700189-4		104 -38
0700189-6		102 -27C
0700189-6		103 -37
0700189-6		105 -45
0700319-13		2 -70
0700319-13		137 - 7
0700322-4		138 -23
0700322-4		139 -17

PART NUMBER		FIGURE AND INDEX NO.
0700322-8		139 -27
0700324-1		138 -24
0700325-1		138 -20
0700325-2		139 -16
0700326-1		28 -41
0700326-1		28 -47
0700326-1		29 -41
0700327-1		138 -16
0700616-1		199 - 2
0700626-1		139 -20
0700630-11	#	90 -
0700630-12	#	90 -
0700630-202	#	90 -14
0700630-207	#	90 - 1
0700630-225	#	90 - 1
0700631-5		90 -24
0700631-5	¤	90 -24
0700631-6		90 -24
0700631-6	¤	90 -24
0700633-1		90 -32
0700633-1		92 - 6
0700633-2		90 -31
0700633-2		92 - 4
0700633-4		90 -32
0700633-4		92 - 6
0700633-5		93 -51
0700633-5		94 -44
0700634-1		90 -38
0700634-1		92 - 1
0700636-1		90 -80
0700638-1		90 -40
0700639-1		90 -29
0700639-2		90 -30
0700639-2		92 -35
0700639-3		92 -34
0700640-1		90 -25
0700640-2		90 -25
0700640-5		90 -26
0700640-6		90 -26
0700641-2		90 -28
0700641-3		92 -41
0700641-4		92 -42
0700641-5		90 -27
0700642-1		90 -54
0700643-1		90 -56
0700644-1		90 -59
0700645-1		90 -65
0700645-1		92 -38
0700645-2		90 -66
0700645-2		92 -39
0700645-3		90 -67
0700645-3		92 -40
0700645-4		90 -68
0700645-4		92 -40
0700646-1	¤	90 -19
0700646-2	¤	90 -20
0700646-3	¤	91 -18
0700646-4	¤	91 -19
0700719-1		91 -28
0700748-1		2 -49
0705048-2		3 - 7
0705048-3		3 - 7
0710013-4		139 -24
0710014-13		139 -25
0710014-14		139 -26
0710014-2		139 -28A
0710014-3		139 -25
0710014-4		139 -26
0710014-8		139 -34
0710015-10		139 -31
0710015-13		139 -31
0710032-2		3 -28
0710032-2		84 -20
0710312-2		87 -47

PART NUMBER		FIGURE AND INDEX NO.
0710312-2		90 -76
0710312-2		95 - 8
0710632-1		87 -58
0710632-1		88 -62
0710632-1		89 -57
0711001-59		72 -17
0711001-59		73 -18
0711001-59		74 -19
0711001-59		75 -16
0711001-59		76 -16
0711021-1		72 -30
0711021-1		73 -22
0711021-1		76 -20
0711021-11		73 -23
0711021-11		76 -21
0711021-12		73 -24
0711021-12		76 -22
0711021-4		72 -31
0711021-7		72 -49
0711021-7		73 -44
0711021-7		76 -41
0711021-9		72 -33
0711021-9		73 -25
0711021-9		76 -23
0711023-15		74 -11
0711027-1		72 - 5
0711027-1		73 - 5
0711027-1		74 - 7
0711027-1		75 - 6
0711027-1		76 - 5
0711050-19		72 -37A
0711050-19		73 -32
0711050-20		76 -32
0711050-23		73 -32
0711050-24		76 -32
0711050-5		72 -39
0711050-5		73 -34
0711050-6		76 -34
0711050-7		72 -40
0711050-7		73 -35
0711050-7		76 -35
0711051-1		72 -38
0711051-1		73 -33
0711051-1		76 -33
0711051-2		73 -33
0711051-2		76 -33
0711051-5		72 -38
0711051-5		73 -33
0711051-5		76 -33
0711080-1	#	97 - 7
0711083-1		97 -14
0711083-1		98 -16
0711083-1		108 -42
0711084-7		49 -52
0711084-8		49 -53
0711097-2		97 - 1
0711097-2	¤	97 - 1
0711097-21		97 - 9
0711097-25	#	97 - 8
0711097-4	#	97 - 8
0711098-3		97 - 5
0711098-4		97 - 5
0711101-10		49 -55
0711101-11		49 -55
0711101-33		80 - 1
0711101-34		49 -59
0711101-35		49 -58
0711101-36		49 -56
0711101-37		49 -57
0711101-43		49 -56
0711101-8		49 -54
0711102		80 - 2
0711102		81 - 2
0711111-1		81 - 9

PART NUMBER		FIGURE AND INDEX NO.
0711121-2		108 - 5
0711125-1		72 -48
0711125-1		73 -43
0711125-1		74 -31
0711125-1		75 -24
0711125-2		72 -48
0711125-2		73 -43
0711125-2		74 -31
0711125-2		75 -24
0711125-5		73 -43
0711125-5		75 -24
0711125-6		73 -43
0711125-6		75 -24
0711133-12	¤	83 - 5
0711133-13		82 -11
0711133-14		82 -12
0711133-15		202 - 1
0711133-17		202 - 2
0711133-18	¤	82 -12
0711133-27	¤	82 -11
0711133-33	¤	202 - 3
0711133-49	¤	202 - 3
0711133-50	¤	82 -12
0711133-62	¤	83 - 5
0711133-66	¤	83 - 5
0711134-1		80 - 9
0711667-1		87 - 5
0711667-1		88 - 5
0711667-1		89 - 5
0711667-1		90 - 5
0711667-1		95 -28
0711668-1		87 - 4
0711668-1		88 - 4
0711668-1		89 - 4
0711668-1		90 - 4
0711668-1		95 -26
0711705-1		81 -10
0711707-1		81 -17
0711707-4		81 -17
0711709-1		81 -12
0711709-2		81 -13
0712009-2		97 -13
0712009-2		98 -22
0712031-1		190 - 6
0712031-1		191 - 9
0712603-2		190 - 2
0712603-2		192 -17
0713002-3		31 -39
0713002-3		31 -39
0713002-3		32 -36
0713002-3		33 -37
0713003-51		43 - 7
0713011-12		108 -13
0713017-22		202 -12
0713019-111		141 -25
0713019-112		141 -24
0713019-113		141 -24
0713019-33		133 - 9
0713019-33		133 -22
0713019-33		134 - 6
0713019-33		134 -21
0713019-33		135 - 8
0713019-33		136 - 6
0713019-33		136 -35
0713019-33		187 -36
0713026-4		99 -19
0713026-4		100 -19
0713026-4		102 -54
0713026-4		103 -61
0713026-4		103 -62
0713026-4		103 -66
0713026-4		104 -63
0713026-4		104 -64
0713026-4		104 -65

PART NUMBER	FIGURE AND INDEX NO.
0713026-4	161 -28
0713026-4	200 - 7
0713026-5	99 -17
0713026-5	100 -17
0713026-5	102 -46
0713026-5	103 -65
0713026-5	104 -59
0713026-6	152 - 6
0713026-6	152 -29
0713026-6	153 - 6
0713026-6	153 -28
0713028-3	101 -12
0713028-3	102 -25
0713028-8	101 -12
0713028-8	102 -25
0713029	202 - 4
0713032-1	157 - 7
0713032-2	157 - 7
0713035	99 -20
0713035	100 -20
0713035	102 -55
0713035	103 -53
0713035-1	104 -66
0713046	82 -19
0713046	83 -14
0713047	2 - 9
0713047	3 - 5
0713047	27 -13
0713049-7	84 -36
0713049-8	84 -34
0713049-8	85 -30
0713052	36 - 4
0713054-1	34 -47
0713054-1	35 -48
0713054-2	34 -47
0713054-2	35 -48
0713063	142 -61
0713063	143 -52
0713063	144 -57
0713068-1	108 -27
0713070-15	142 -45
0713070-15	143 -36
0713070-15	144 -41
0713070-19	142 -53
0713070-19	143 -44
0713070-19	144 -49
0713070-20	142 -64
0713070-20	143 -55
0713070-20	144 -60
0713070-24	142 -62
0713070-24	143 -53
0713070-24	144 -58
0713070-25	142 -43
0713070-25	143 -34
0713070-25	144 -39
0713070-28	142 -58
0713070-28	143 -49
0713070-28	144 -54
0713070-32	142 -44
0713070-32	143 -35
0713070-32	144 -40
0713070-36	142 -36
0713070-36	143 -27
0713070-36	144 -29
0713070-37	142 -34
0713070-37	143 -25
0713070-37	144 -28
0713070-4	142 -40
0713070-4	143 -31
0713070-4	144 -36
0713070-5	142 -39
0713070-5	143 -30
0713070-5	144 -35
0713070-6	142 -59

PART NUMBER	FIGURE AND INDEX NO.
0713070-6	143 -50
0713070-6	144 -55
0713070-9	142 -52
0713070-9	143 -43
0713070-9	144 -48
0713102-1	37 - 4
0713124-1	196 - 6
0713129-4	99 - 8
0713129-4	100 - 7
0713129-4	102 -47
0713135-2	31 -47
0713135-2	32 -41
0713135-2	33 -42
0713135-2	138 -30
0713135-2	139 -36
0713139-1	31 -49
0713139-1	32 -43
0713139-1	33 -44
0713139-1	138 -32
0713139-1	139 -38
0713140-1	31 -48
0713140-1	32 -42
0713140-1	33 -43
0713140-1	138 -31
0713140-1	139 -37
0713209-1	2 -12
0713209-1	186 - 9
0713210-4	202 -11
0713221-1	99 - 8
0713221-1	100 - 8
0713221-1	102 -47
0713221-1	103 -72
0713244-1	161 -36
0713247-200	193 -26
0713248-3	34 -17
0713248-3	35 -17
0713248-4	34 -27
0713248-4	35 -27
0713250-1	139 -32
0713303-2	74 - 6
0713303-2	99 -19
0713303-2	99 -20
0713303-2	100 -19
0713303-2	100 -20
0713303-2	102 -49
0713303-2	102 -55
0713303-2	103 -53
0713303-2	103 -62
0713303-2	103 -65
0713303-2	138 -12
0713303-2	139 -12
0713303-2	161 -28
0713303-7	107 - 8
0713307-1	124 -53
0713307-2	124 -52
0713495-10	34 -48
0713495-10	35 -43
0713495-13	34 -41
0713495-13	35 -42
0713495-14	34 -41
0713495-14	35 -42
0713495-17	34 -50
0713495-17	35 -50
0713495-53	34 -57
0713495-53	35 -61
0713495-54	34 -58
0713495-54	35 -62
0713495-55	34 -49
0713495-55	35 -49
0713495-65	35 -43
0713495-66	35 -43
0713495-9	34 -48
0713495-9	35 -43
0713496-3	34 -14

PART NUMBER		FIGURE AND INDEX NO.
0713496-3		35 -14
0713496-4		34 -24
0713496-4		35 -24
0713511-1		190 -10
0713511-1		192 - 8
0713533-1		185 -35
0713624-2		37 - 4A
0713624-2		145 -17A
0713641-3		38 - 8
0713642-1		157 - 5
0713642-3		157 - 7
0713656-1		157 - 1
0713656-3		157 - 2
0713705-2		2 - 3
0713705-2		101 -32
0713738-3		99 -38
0713738-3		100 -42
0713738-3		102 -63
0713749-6		182 - 5
0713749-6		183 - 6
0713757-1		41 -28
0713856-2		103 -11
0713856-3		104 -12
0713856-4		191 -37
0713959-1		144 -45C
0714005-1	#	98 -
0714005-2	#	98 -
0714005-3	#	98 -10
0714005-4	#	98 -12
0714010-1	¤	93 -19
0714010-1	¤	94 -17
0714010-2	¤	93 -19
0714010-2	¤	94 -17
0715001-1	¤	88 -13
0715001-1	¤	90 -12
0715026-1		98 - 5A
0715039-1	#	73 -47
0715039-2	#	75 -26
0715039-2	#	76 -44A
0715039-3	#	85 -11
0715039-4	#	85 -12
0716124-6		16 -16
0716124-6		17 -26
0716124-9		16 -16
0716124-9		17 -26
0716128-45		172 -26
0716136-1		170 -20
0716612-202		165 -24
0716612-3		166 -26
0716615-7		2 -19A
0716615-7		3 - 7
0716615-7		166 -35A
0716615-7		167 -35
0716615-7		168 -48
0716615-9		3 - 7
0716615-9		167 -35
0716615-9		168 -48
0716623-2		166 -27A
0716623-2		167 -26
0716623-2		168 -39
0716624-1		166 -27D
0716624-1		167 -29
0716624-1		168 -42
0717000-1		81 - 1
0717000-11		81 - 1
0717000-12	¤	84 -18
0717000-12	¤	85 -17
0717000-13		81 - 1
0717000-4	¤	84 -18
0717000-8		81 - 1
0720005-1		6 -37
0720005-1		8 -33
0720005-3		7 -29
0720005-3		9 -30

PART NUMBER	FIGURE AND INDEX NO.
0720608-15	6 -21
0720608-15	8 -17
0720608-23	10 -28
0720608-7	6 -21
0720608-7	8 -17
0721100-5	9 -18
0721101-8	161 -23
0721105-15	161 -24
0721105-17	161 -24
0721105-2	161 -24
0721105-27	161 -24
0721105-30	161 -24
0721105-30	161 -24
0721105-5	161 -26
0721107-1	6 -46
0721107-1	7 -42
0721107-1	8 -43
0721107-1	9 -44
0721107-2	6 -46
0721107-2	7 -42
0721107-2	8 -43
0721107-2	9 -44
0721111-10	8 - 9
0721111-29	9 -17
0721111-30	9 -17
0721111-9	8 - 9
0722200-1	7 -40
0722200-1	9 -42
0722200-2	7 -40
0722200-2	9 -42
0722201-1	6 -12
0722201-1	8 -10
0722202-1	11 - 9
0723200-10	7 -49
0723200-10	9 -51
0723200-11	7 -49
0723200-11	9 -51
0723200-12	7 -49
0723200-12	9 -51
0723200-5	7 -45
0723200-5	9 -47
0723200-6	7 -45
0723200-6	9 -47
0723200-9	7 -49
0723200-9	9 -51
0723201-1	4 -46
0723201-2	4 -46
0723201-3	4 -46
0723201-4	4 -46
0723600-6	21 - 9
0723600-6	21 -11
0723615-200	6 -49
0723615-200	8 -44
0724115-2	19 -29
0731605-3	49 -99B
0731607-2	201 - 9
0734102-3	26 -41
0734102-4	26 -42
0741008-1	67 -46
0741008-2	67 -39
0741008-3	67 -37
0741008-4	67 -38
0741008-5	67 -36B
0741046-11	67 -63
0741046-14	67 -64
0741046-200	67 -57
0741046-201	67 -57
0741046-202	67 -57
0741046-203	67 -57
0741046-7	67 -49A
0741046-8	67 -49A
0741047-1	67 -47A
0741047-2	68 -52
0741048-1	67 -23

PART NUMBER	FIGURE AND INDEX NO.
0741048-2	67 -66
0741048-6	67 -23
0741048-7	67 -66
0741048-7	68 -51
0741048-8	68 -24
0741103	67 -40
0741610-11	67 -48
0741610-12	67 -48
0741610-13	67 -55
0741610-5	67 -50
0741610-6	67 -50
0742410-14	55 -35
0742410-27	55 -28
0742410-8	55 -32
0743009-1	55 -25
0743009-1	57 - 6B
0743009-1	58 -11
0743011-8	57 -26
0743011-8	58 -31
0743063-5	55 -36B
0743609-17	55 -23
0743609-6	55 -33
0743612-1	57 - 7
0743612-1	58 - 4
0743625-11	55 -33A
0743625-4	55 -23A
0743625-9	55 -35A
0743627-1	55 -37
0743627-2	55 -37
0743627-3	55 -37
0743627-4	55 -37
075-06700	70 -28
0750032-1	43 -13
0750113-1	123 -63
0750113-1	125 -36
0750113-1	126 -30
0750117-31	133 -48
0750117-31	136 -29
0750121	136 -30
0750125-1	174 - 7
0750125-10	174 - 4
0750125-11	174 -10
0750125-2	174 - 8
0750125-4	174 - 6
0750125-9	174 -10
0750131-1	126 -27
0750132-1	126 - 2
0750137	126 - 2
0750139	123 -73
0750139	125 -22
0750142-1	126 -28
0750159-1	124 -35
0750161-25	132 -10
0750220-1	191 -41
0752037-3	123 -17
0752610-1	205 - 9
0752611-1	205 -10
0752646-1	198 - 6
0753000-13	39 -14
0753000-13	40 -15
0753000-13	41 -30
0753000-13	42 -14
0753010-1	140 - 4
0753010-1	141 - 2
0753011-1	141 - 1
0753011-2	140 - 3
0756001-3	169 -18
0756001-4	99 -13
0756001-4	100 -13
0756001-8	169 -16
0756002	169 -25
0756005-1	169 -26
0756005-1	170 -
0756005-2	169 -43

PART NUMBER	FIGURE AND INDEX NO.
0756005-2	170 -18
0756008-1	169 -28
0756008-1	170 - 3
0756009-1	169 -34
0756009-1	170 - 9
0756009-5	169 -35
0756009-8	170 -10
0756010-1	169 -38
0756010-1	170 -13
0756011-1	169 -33
0756011-1	170 - 8
0756012-1	169 -41
0756012-1	170 -16
0756014-1	169 -36
0756014-1	170 -11
0756014-2	169 -40
0756014-2	170 -15
0756015-1	169 -30
0756015-1	170 - 5
0756018-2	163 -21
0756019-1	163 -26
0756020-1	163 -24
0756021-1	163 -23
0756022-1	163 -28
0756022-2	163 -29
0760011-1	19 -27
0760011-2	19 -27
0760131-1	106 -68
0760131-5	105 -95
0760131-6	105 -94
0760131-6	106 -67
0760612-1	159 -19
0760612-7	159 -18
0760614-1	159 -46
0760619-1	159 -35
0760620-1	159 -45
0760620-9	159 -45
0760632-1	102 -70
0760632-1	159 -53
0760662-1	159 -29
0770038-2	191 -26
0770038-2	203 -24
0770719-1	104 -59
0770719-2	104 -59
0770719-2	104 -59A
0770719-2	105 -89
0770728-1	190 - 4A
0770728-1	191 - 5
0800111-2	108 -15
0811490-6	142 -48
0811490-6	143 -39
0811490-75	144 -44
0811725-40	72 -41
08125	60 - 4
0813150-54	142 -48
0813150-54	143 -39
0813150-54	144 -44
0813150-55	142 -41
0813150-55	143 -32
0813150-55	144 -37
0813156-4	142 -42
0813156-4	143 -33
0813156-4	144 -38
0813526-6	81 -15
0813526-6	102 -70
0813526-6	103 -71
0813569-2	101 -11
0813569-2	102 -26
08231	60 - 7
0841200-15	57 -18
0841200-15	58 -23
0841200-19	57 -15
0841200-19	58 -20
0841200-25	57 -17

PART NUMBER	FIGURE AND INDEX NO.
0841200-25	58 -22
0841200-7	57 - 7
0841200-7	58 - 4
0842000-44	58 -16
0850406-14	180 -21
0850406-6	180 -22
0850406-6	181 -23
0850500-17	192 - 6
0851583-2	169 -14
0851583-3	169 -15
0851592-1	169 -13
0851700-14	133 -17
0851700-14	133 -22
0851700-14	136 -19
0861520-2	188 - 6
091-04400	70 -14
1-656-2-75	172 -21
1/16X.62TYPE3	25 -15
1A1001	84 - 4A
1A1002X	84 - 4A
1A1002X	87 -46
1A1002X	88 -53
1A1002X	90 -75
1A1002X-1	91 -29
1K1-2-4	177 -18
1K1-2-4	180 -13
1K1-4-4	177 -19
1K1-4-6	177 - 6
1K1-4-8	177 - 9
1K1-4-8	177 -15
1K1-4-8	181 - 8
1K1-6-10	184 -52
1K1-6-10	185 -47
1K1-6-8	181 -27
1K10-4-6	177 - 5
1K10-4-6	181 - 5
1K9-6-10	181 -20
1N1344A	191 - 8
10004-101-1	108 -22
10004-98	108 - 4
1005-1-0	151 -11
1007	1 - 4
10172-013-2	131 -19
1024A-8	1 - 3
10650	159 -49
1118823	127 -16
1195-0061	108 -74
1200018-1	138 - 3A
1200086-5	82 - 3
1200086-6	82 - 4
120009	121 -50
120009	126 -24
120009	127 - 7
120009-06	121 -50
120009-06	126 -24
1200127-1	84 -37
1200127-1	85 -26
1200136-1	90 -34
1200136-1	92 -30
1200136-1	93 -49
1200136-1	94 -46
1200138-1	90 -47
1200138-1	93 -63
1200138-2	93 -32
1200138-2	94 -31
1200138-2	94 -53
1200139-1	90 -43
1200139-1	93 -36
1200141-1	90 -36
1200141-2	90 -36
1200156-1	90 -49
1200159-1	90 -51
1200159-3	93 -58
1200159-3	94 -51

PART NUMBER	FIGURE AND INDEX NO.
1200164-1	90 -58
1200186-1	90 -46
1200478-2	91 -26
1200503-1	88 -45
1200503-1	89 -45
1200504-1	88 -37
1200504-3	88 -43
1200504-3	89 -43
1200505-1	88 -39
1200678-2	2 -44
1200678-2	161 -39
1205001-101	3 - 1A
1205001-102	3 - 1A
1205001-112	3 - 2B
1205001-113	3 - 2B
1205001-12	3 - 2
1205001-127	3 - 2C
1205001-128	3 - 2C
1205001-129	3 - 3B
1205001-130	3 - 3B
1205001-131	3 - 3B
1205001-132	3 - 3B
1205001-133	3 - 1A
1205001-134	3 - 1A
1205001-147	3 - 2C
1205001-148	3 - 3B
1205001-149	3 - 3B
1205001-156	3 - 1A
1205001-26	3 - 3
1205001-34	3 - 1
1205001-73	3 - 2A
1205001-74	3 - 2A
1205001-75	3 - 3A
1205001-76	3 - 3A
1205001-95	3 - 3A
1205001-96	3 - 3A
1205004-1	3 -40
1205004-1	204 -22
1205010-1	2 -61
1205010-2	2 -62
1205010-3	3 -10
1205010-4	3 -11
1205013-2	2 -66
1205013-5	2 -67
1205024-1	3 -23
1205024-1	205 - 6
1205085-1	3 -52
1205085-2	3 -53
1205085-2	85 -25
1208	62 - 3
1210032-1	29 -44
1210032-2	29 -44
1210040-10	74 -30
1210040-10	75 -22
1210040-23	74 -29
1210040-23	75 -23
1210040-8	75 -23
1211203-1	84 -38
1211203-1	85 -26
1211250-7	73 - 5A
1211250-7	75 - 6B
1211250-7	76 - 5A
1211251-1	73 - 5A
1211251-1	75 - 6B
1211251-1	76 - 5A
1211252-1	81 -11
1211836-1	73 - 9A
1211836-1	75 - 7B
1211836-1	76 - 7A
1213004-1	105 -97
1213004-2	105 -97
1213004-2	106 -94
1213158-2	123 -67
1213158-2	125 -51

PART NUMBER		FIGURE AND INDEX NO.
1213158-3		123 -67
1213535-1		2 -60
1213535-1		190 -18
1213535-1		191 -18
1213646-2		102 -57
1213646-2		103 -57
1213646-2		104 -68
1213646-3		105 -70
1213646-3		106 -73
1214050-5		88 -11
1214051-3		88 -17
1214062-5		94 -10
1214062-5	#	88 -15
1214062-5	#	89 -15
1214062-5	#	93 -10
121615		115 -33
1220112-4		2 -43
1220112-4		3 -20
1220112-4		106 -95B
1220114-2		20 -17A
1221201-3		4 -40
1221201-4		4 -40
1241063-2		67 -23
1241156-11		63 -
1241156-12		60 -
1243021-1		57 -16
1243021-1		58 -21
1243030-5		57 -48
1243030-5		58 -53
1243030-6		57 -48
1243030-6		58 -53
1243030-7		57 -48
1243030-7		58 -53
1243616-1		55 -36
1243623-2		58 -12
1243626-1		57 -20
1243626-1		58 -25
1250211-4		203 -23
1250211-5		203 -23
1250319-1		185 -45
1250405-1		163 -31
1250405-1		187 -48
1250406-2		187 -40
1250407-1		163 -10
1250407-1		187 -44
1250408-1		163 -11
1250408-1		187 -45
1250410-1		187 -40
1250410-3		2 -45
1250410-3		3 -22
1250410-3		164 - 7
1250410-3		163 -20
1253031-3		39 - 4A
1253031-3		40 - 5
1253031-3		41 - 6
1253032-1		141 - 3
1253033-1		141 - 5
1253033-2		140 - 7
1253034-1		140 - 6
1253034-1		141 - 4
1253037-1		140 - 8
1253037-1		141 - 6
1253040-1		140 - 7
1253040-1		141 - 5
1253041-1		140 -10
1253041-1		141 - 8
1260049-1		25 - 6
1260074-1		25 - 1
1260474-1		49 -71A
133A3		180 -19
133A3		181 -21
13830		69 - 7
13836		62 - 9
13836		63 - 6

PART NUMBER		FIGURE AND INDEX NO.
13836		70 - 3
13889		62 - 6
13889		63 -11
13889		69 - 8
13889		70 - 9
1400014-1		2 -36
1400054-2		108 -17
1400106-81		184 -51
1411202-201		72 -43
1411202-201		73 -38
1411202-201		76 -38
1414045-2		90 -14
1414082-1		72 -50
1414082-1		74 -32
1414082-1		84 -13
1414082-13		72 -50
1414082-13		73 -46
1414082-13		74 -32
1414082-13		75 -25
1414082-13	#	84 -13
1414082-14		72 -50
1414082-14		74 -32
1414082-14		84 -13
1414082-18		73 -46
1414082-18		75 -25
1414082-18		76 -44
1414082-18	#	84 -13
1414082-20		73 -46
1414082-20		75 -25
1414082-20		76 -44
1414082-20	#	84 -13
1414082-21		73 -46
1414082-21		75 -25
1414082-21	#	84 -13
1414082-6		72 -50
1414082-6		74 -32
1414082-6		84 -13
1414082-7		72 -50
1414082-7		74 -32
1414082-7		84 -13
1414100-212		87 -32
1414100-212		88 -33
1414100-212		89 -31
1414100-212		90 -69
1414100-212		92 -17
1414100-8		87 -16
1414100-8		88 -17
1414100-8		90 -17
1414100-9		87 -11
1414100-9		88 -11
1414100-9		90 -11
1414100-9		91 - 9
1414103-12		87 -22
1414103-2		87 -21
1414103-2		88 -22
1414103-2		89 -20
1414103-45		88 -23
1414103-45		89 -21
1414103-6		87 -23
1414103-6		88 -24
1414103-6		89 -22
1414104-1		87 -48
1414104-1		90 -77
1414104-2		87 -40
1414104-2		90 -60
1414104-2		92 -11
1414104-39		87 -29
1414104-39		88 -30
1414104-39		89 -28
1414104-4		87 - 3
1414104-4		88 - 3
1414104-4		89 - 3
1414104-4		90 - 3
1414104-4		91 - 5

PART NUMBER		FIGURE AND INDEX NO.
1414104-4		95 -31
1414104-40		87 -30
1414104-40		88 -31
1414104-41		87 -31
1414104-41		88 -32
1414104-41		89 -30
1414104-42		87 -31
1414104-42		88 -32
1414104-42		89 -30
1414104-45		87 -37
1414104-46		87 -39
1414104-54		93 -87
1414104-54		94 -83
1414104-56		93 -77
1414104-61		89 -29
1414104-8		87 -45
1414104-8		88 -42
1414104-8		89 -41
1414104-8		90 -64
1414104-8		92 -16
1414107-1		87 -50
1414107-1		88 -51
1414107-1		89 -50
1414107-1		90 -79
1414107-1		95 -11
1414107-1		96 -27
1414107-2		95 -11
1414110-1	¤	87 -12
1414110-1	¤	90 -12
1414110-3	¤	87 -14
1414110-3	¤	90 -14
1414111-5		90 -11A
1414112-1		87 -28
1414112-1		88 -29
1414112-1		89 -27
1414114-1		87 -49
1414116-1		87 -42
1414116-1		88 -41
1414116-1		89 -40
1414116-1		90 -61
1414116-1		92 -15
1414116-1		93 -83
1414116-1		94 -68
1414211-22		95 -25
1414215-7	¤	95 -35
1414215-8	¤	95 -36
1414217-3		87 -18
1414217-3		88 -19
1414217-3		90 -23
1414217-3		91 -17
1414217-7		87 -17
1414217-7		88 -18
1414217-7		90 -22
1414217-7		91 -17
1414223-34		88 -49
1414223-34		89 -48
1414230-1		87 -11A
1414230-1		88 -12
1414230-1		89 -12
1414230-2		95 -37
1414231-2		95 -10
1414231-4		88 -50
1414240-3		92 -
1414240-3	¤	92 -
1414240-4		92 -
1414240-4	¤	92 -
1414241-3		92 -36
1414241-4		92 -37
1414242-1		92 -29
1414243-1		92 -32
1414245-2		92 -10
1414247-1		92 -24
1414248-1		92 - 8
1414249-2		92 -23

PART NUMBER		FIGURE AND INDEX NO.
1414252-1	#	87 -61
1414252-1	#	90 -81
1414252-1	#	95 -38
1414252-6	#	87 -62
1414252-6	#	90 -82
1414252-6	#	95 -39
1414257-5		91 -25
1414258-1		91 -22
1414259-1		91 -24
1414261-1		91 -21
1414262-1		91 -13
1414264-13	¤	91 -10
1414264-5	¤	91 -12
1414265-13	#	91 -
1414265-14	#	91 -
1414265-210	#	91 - 2
1414265-211	#	91 -13
1414265-8		91 -16
1414266-1		91 -20
1414267-1		91 -28
1414268-1		91 -27
1414269-1		91 -21B
1441010-24		67 -48
1441010-27		67 -48
1442001-1		56 -23
1442001-2		56 -21
1442002-1		56 -22
1442112-1		66 - 1
1442113-9		66 - 3
145-10		70 -29
1450024-3		41 -43
1450024-3		123 -17A
1460320-1		145 - 1
1460320-1		145 -27
1460501-21		145 - 2
1460501-21		145 -28
1460505-1		145 -42
1470089-10-532		202 -18
1470089-14	¤	202 -19
1470089-18		202 -28
1470089-6		202 -26
1505014-1		3 -35
1505015-10		3 -36
1505015-39		3 -39
1505015-40		3 -37
1505015-7		3 -37
1505015-8		3 -38
1505015-9		3 -39
1505022-1		3 -35A
1505024-1		3 -36A
1511209-9		78 -11
1511212-5		78 -16
1511212-6		78 -16
1513839-4		106 -21
1513839-5		106 -21A
1513839-6		106 -30
1514014-1		107 -32
1514059-1		91 -21A
1514119-3		94 -60
1514223-28		88 -46
1514223-28		89 -46
1520006-1		4 -43
153-10		62 - 1
153-15		63 - 8
153-15		70 - 5
153-8		60 - 2
154-13		63 - 9
154-13		70 - 6
154-6		60 - 3
154-9		62 - 5
155-2		60 - 1
1550016-1		203 - 6
1552004-17		118 -39
1552004-17		119 -31

PART NUMBER	FIGURE AND INDEX NO.
1552004-17	120 -38
1552004-22	118 -38
1552004-22	119 -30
1552004-22	120 -37
1552004-23	118 -38
1552004-23	119 -30
1552004-23	120 -37
1552004-25	118 -41
1552004-25	119 -33
1552004-25	120 -40
1552004-28	118 -36
1552004-28	119 -28
1552004-28	120 -35
1552004-32	118 -29
1552004-32	119 -21
1552004-32	120 -30
1552010-1	119 -32
1552010-1	120 -39
1570043-1	190 -27
1570043-1	191 -33
1570043-3	190 -19
1570043-3	191 -19
1570043-3	205 - 7
1570141-1	204 - 3
1570141-1	204 -17
1570142-3	204 - 6
1570166-1	190 -36
1570166-1	191 -58
161-04900	70 - 1
161-23	62 - 8
161-24	62 - 7
161-30	63 - 2
161-30	70 - 1
161-31	60 - 5
1613224-2	110 - 5
1613224-2	110 - 6
162-04700	70 - 2
162-27	63 - 1
162-27	70 - 2
162-28	60 - 6
1620075-3	191 -56
164-26A	70 -11
164-40	70 -11
1700121-100	173 - 1
1700121-101	173 - 3
1700121-16	123 -26
1700121-48	167 -62
1700121-94	173 - 9
1700121-95	173 - 6
1700121-96	168 -75
1700127-1	86 - 1
1700127-3	86 - 2
1700127-4	86 - 3
1700127-6	86 - 4
1705003-1	2 -64
1705004-1	2 -65
1705015-1	3 -14
1705015-1	73 - 8
1705015-2	3 -14A
1705015-2	75 - 7A
1705015-2	76 - 7
1705022-1	3 -35B
1713039-1	153 -48
1713039-1	179 -11
1713039-1	183 -13
1713039-1	183 -13A
1713039-1	184 -32
1713039-1	184 -32
1713039-1	185 -18
1713039-3	152 -45
1713105-3	41 -29
1713110-1	41 -31
1714000-K200	93 -85
1714000-22	94 -81

PART NUMBER		FIGURE AND INDEX NO.
1714000-33		93 -84
1714000-33		94 -84
1714000-41		94 -82
1714001-19		96 -25
1714001-20		96 - 5
1714001-22		96 - 5
1714002-1		96 - 4
1714005-1		96 -15
1714033-1		96 -16
1714036-1		96 -18
1714040-1	#	88 -54
1714040-1	#	90 -81
1714040-1	#	95 -38
1714040-1	#	96 -29
1714040-2	#	88 -55
1714040-2	#	90 -82
1714040-2	#	95 -39
1714040-2	#	96 -30
1714040-5	#	88 -54
1714040-5	#	90 -81
1714040-5	#	95 -38
1714040-5	#	96 -29
1714040-6	#	88 -55
1714040-6	#	90 -82
1714040-6	#	95 -39
1714040-6	#	96 -30
1714061-1		93 -81
1714061-1		94 -70
1714067-2		93 -80
1714067-4		93 -80
1714067-5		94 -65
1714074-13		94 -21
1714074-14		94 -22
1714074-6		94 -23
1714095-1		96 -21
1715023-3	□	88 -15
1715023-3	□	90 -14
1716013-1		123 -37
1716013-1		125 -56
1717034-1		49 -66
1741005-239		68 -38
1741005-247		68 -38
1750011-1		123 -48
1750011-1		141 -17
1750011-4		123 -48
1750011-4		141 -17
1752110-3		197 -13
1752111-3		197 - 9
1752113-1		197 -12
1752118-1		198 - 2
1752118-2		198 - 3
1752118-3		198 - 7
1752118-4		198 - 8
1752119-4		120 -19
1752119-7		120 -17
1754001-12		132 -
1754001-14		132 - 1
1754001-15		132 - 1
1754001-16		132 -
1754001-4		132 -
1754001-8		132 - 1
1754007-1		132 - 6
1754008-1		132 - 7
1754009-1		132 - 8
1754010-1		132 - 9
1755014-1		134 -55
1755016-1		134 - 7
1755016-1		135 - 9
1756001-1		123 -27
1760015-1		188 - 1
1760015-2		188 - 2
1770009-1		204 - 7
1777		23 -23
1816		202 -22

PART NUMBER	FIGURE AND INDEX NO.
1816TR	202 -23
183-1	70 -27
1924	202 -24
20H3P	190 - 6B
20H3P	191 - 8
2013131-1	108 - 3E
2013142-1	161 -53
2015009-3	84 -37
2015009-5	85 -26
20351-4	152 - 1
20351-4	152 -24
20351-4	153 - 1
20351-4	153 -23
2055008-1	135 -68
21-831-1	130 -47
2104	182 - 6
2104	183 - 7
212-12	137 -16
21323	123 -59A
21323	127 - 5
217-1	60 - 8
22FH632	146 -18
22K2-32	90 - 9
22NA-3-054	52 -16
22NA1K-02	6 -41
22NA1K-02	8 -37
28S7-4	126 -35
2904-1	104 -40
2904-1	152 - 1
2904-1	152 -24
2904-1	153 - 1
2904-1	153 -23
3/32X.38TYPE3	25 - 8
30-0009-23	4 -28
3021	70 - 8
3022	70 - 7
3023	63 - 7
3023	70 - 4
30370-0100	102 -42
30370-0100	104 -43
30370-0100	105 -48
30370-0100	182 - 2
30370-0100	183 - 4
30370-0100	184 - 7
30370-0100	184 - 7
30370-0100	185 - 4
30370-0102	105 -48
30370-0102	184 - 7
30370-0102	184 - 7
30370-0102	185 - 4
30475-0000	102 -41
30475-0000	182 - 4
30475-0000	183 - 5
312-12	121 -40
33-199-1	169 - 8
33-199-45	169 - 9
33-199-5	169 - 6
33-199-6	169 - 7
33-199-8	169 -10
33-199-902	169 - 4
33-199-909	169 - 5
330R	101 -18
34-825-6	129 -46
34-825-7	129 - 8
34-825-8	129 -34
34-827-1	129 - 7
34-827-2	129 -19
34-827-3	129 -28
34-827-6	129 -23
34-827-7	129 -21
34-827-901	129 -20
34-828-1	130 -13
34-828-10	130 -18
34-828-11	130 -19

PART NUMBER	FIGURE AND INDEX NO.
34-828-12	130 -20
34-828-13	130 -21
34-828-14	130 - 9
34-828-15	130 -22
34-828-17	130 - 1
34-828-18	130 - 2
34-828-20	130 -23
34-828-21	130 - 5
34-828-22	130 - 3
34-828-24	130 -24
34-828-25	130 -25
34-828-27	130 -26
34-828-28	130 -27
34-828-29	130 -28
34-828-31	130 -49
34-828-7	130 -16
34-828-9	130 - 8
34-828-903	130 - 4
34-828-906	130 - 7
34-828-908	130 -15
34-831-1	130 -29
34-831-4	130 -31
34-831-6	130 -30
34-831-8	130 -17
34-831-901	130 -32
34-831-902	130 -12
34828-2	130 -14
34828-26	130 -10
34828-901	130 - 1
35060-0014	104 -40
35060-0014	105 -40
35060-0114	105 -40
35060-0114	106 -37
351-11-05-001	204 -15
35342	127 -13
36100	127 - 9
3680C	55 -38
3680C	67 -68
3680C	68 -27
3690-1/2	1 -46
3690-1/4	1 -46
3690-1/8	1 -46
37-206	70 -27
37570-0001	104 -42
37570-0001	105 -47
37570-0001	183 - 5
37570-0001	184 - 5
37570-0105	105 -47
37570-0105	106 -44
37570-0105	184 - 5
40-14	201 - 4
401814	130 -49
4050	128 - 1
4051	128 - 1
40760-0104	105 -48
40760-0104	106 -45
40760-104	185 - 4
41843	27 -11
426537	104 -56
43-1761	191 - 8
441346	105 -60
441346	106 -60
441347	105 -56
441347	106 -53
441361	104 -54
442792	105 -60
442792	106 -61
442818	104 -56
442876	105 -60
444649	104 -55
444678	105 -56
444678	106 -54
444679	105 -56
4509	198 - 5

PART NUMBER	FIGURE AND INDEX NO.
4522	197 - 8
4522	197 -11
49165-22	151 - 9
49265F-52	101 - 7
49265F-52	101 -10
49265K2215	82 -10
49330	27 - 9
50309	127 - 8
50658	129 -45
50659	129 -43
50661	129 -14
50668	129 -24
50672	129 -31
50674	129 - 9
50692	129 -44
51043	6 -45
51045	90 -74
511846-4	69 -20
51471	129 -38
51692	129 -25
52121	129 -29
52155	129 -30
52203	129 -32
52204	129 -33
52204	129 -36
52205	129 -35
530603	127 - 3
53166	129 -37
53265	129 -12
53294	129 -16
53345	129 -13
535324	127 - 2
53914	129 -42
53939	129 -48
53940	129 -39
53942	129 -47
550	1 -13
55149	129 -11
55172	129 -10
5574397	187 -40
55774	129 -15
5579432	187 -40
5579535	187 -40
5579539	187 -40
5579654	163 -17
5579654	164 - 4
5579654	187 -40
576.1	1 - 5
579.6	1 - 6
6F20D	191 - 8
600-015-100S	66 - 8
60096	128 -11
60232-1	103 -63
60232-1	104 -73
60232-1	105 -65
60232-1	106 -66
604-200-200	153 - 1
61-19	70 -15
61098	128 -14
6241M	55 -38
6241M	67 -68
6241M	68 -27
626356	127 - 1
626416	127 - 1
626789	127 - 4
628313	127 - 9
629150	127 -12
629151	127 -12
630574	127 -12
630575	127 -12
631261	127 - 8
633029	127 - 4
6436635	163 -15
6436635	164 - 3

PART NUMBER	FIGURE AND INDEX NO.
6436637	163 -16
6436637	164 - 2
6436637	187 -40
6436916	164 - 5
6436916	163 -18
6436989	164 - 6
6436989	163 -19
66-30	70 -17
66-30	70 -19
66224	128 - 9
684-3-11-36P	126 -20
68972	128 -16
69-4	70 -24
69116	128 -17
700	1 -11
71910	173 -13
73-11	70 -18
73820	128 - 2
74-10	70 -16
74068	128 -17
74904	164 - 9
75-31	70 -28
75-37	70 -28
75148	128 -10
75380	128 - 6
75528	164 - 8
75906	128 -15
76211	128 - 4
76906	191 -44
77743	128 - 3
77745	128 - 3
782	172 - 1
782-1	172 -17
782-10	172 -40
782-11	172 -38
782-13	172 -28
782-13	172 -39
782-2	172 - 7
782-3	172 -36
782-4	172 -34
782-5	102 -43
782-5	103 -47
782-5	104 -58
782-5	172 -44
782-6	172 -37
782-7	172 -10
782-8	172 -43
782-9	172 -16
783	172 - 8
784-11	172 - 2
784-3	172 -32
784-4	172 - 3
784-5	172 -13
784-6	172 -22
784-9	172 -25
784-9	172 -30
785-1	172 -11
785-3	172 -15
785-4	172 -12
785-6	172 -42
787	172 -35
78728-M/S	128 - 8
8-171	204 - 1
8-32X1/2	62 - 2
8-4VTX-S	167 -50
8-4VTX-S	168 -60
800-001-6	146 -21
807	72 - 4
807	73 - 4
807	74 - 5
807	75 - 5
807	76 - 4
828-905	130 - 6
8313	128 -13

PART NUMBER	FIGURE AND INDEX NO.
8406E	123 -18
8409	204 -23
8499	204 - 9
8526250	123 -18
8526250	187 -21
91-22	70 -14
92-17	70 -20
95-00184	69 -23
9511269	69 -15
9511271	69 -16
9520448	69 -22
9521184	69 -11
9524201	69 - 2
9524218	69 - 9
9524223	69 -12
9524318	69 - 3
9524343	69 -18
9524491	69 - 7
9525412	69 -15
9525413	69 -16
9532277	69 -17
9541458	69 -10
9541898	59 - 1
9541899	59 - 2
9960BK2215	99 -36
9960BK2215	100 -40
99833-C.098	121 -16
99833-P.098	115 -22
99833-P.098	116 -19
99833P.098	117 -23
99833P.098	119 -25
99833P-.098	118 -33
99836	115 -33
99836	116 -29
99836	117 -27
99836	118 -43
99836	119 -35
99836	121 -41
99874-1	115 -33
99874-1	116 -29
99874-1	117 -27
99874-1	118 -43
99874-1	119 -35
99874-1	121 -41

PART NUMBER	FIGURE AND INDEX NO.

PART NUMBER	FIGURE AND INDEX NO.