CHAPTER 4. PARTS CATALOG

CONTENTS

PowerShot A70/PowerShot A60
Casing Parts ---------- Pg1
Internal Parts-1 ---------- Pg2
Internal Parts-2 ---------- Pg3
OPTICAL UNIT ---------- Pg4

Accessories-1 ---------- Pg5

Accessories-2 ---------- Pg6

Accessories-3 ---------- Pg7

Service Tools ---------- Pg8

CLASS凡例

A: 使用頻度　高
B: 使用頻度　中
C: 使用頻度　低
D: 安全規格部品
E: 消耗部品
F: 標準ネジ、ワッシャー
S: 供給制限品
Y: サービス工具

Category of CLASS

A: Frequency of use: High
B: Frequency of use: Middle
C: Frequency of use: Low
D: Safety-related critical parts
E: Consumable parts
F: Standard screws and washers
S: Supply of the parts is limited
Y: Service Tools

Casing Parts

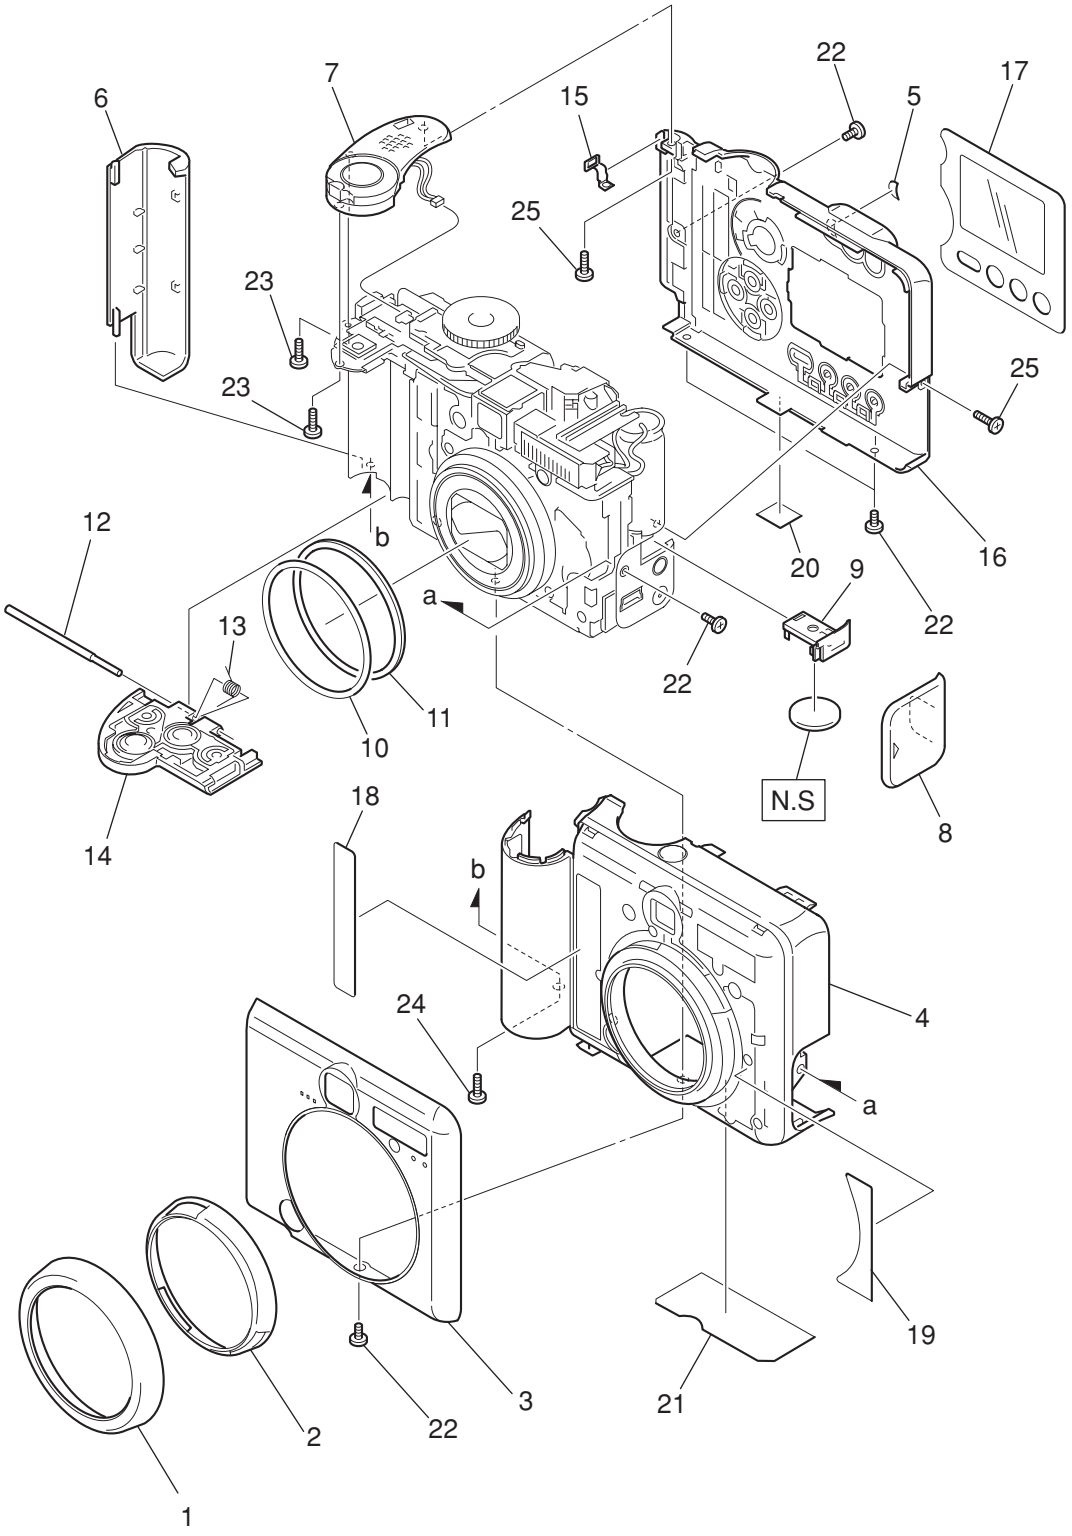

PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CD3-0323-000	C	1	CUP, BAYONET OUTER	A70/60
2	CD3-0322-000	C	1	CUP, BAYONET INNER	A70/60
3	CD3-0321-000	C	1	COVER, DECORATION	A70
	CD3-0909-000	B	1	COVER, DECORATION	A60
4	CM1-2044-000	B	1	FRONT COVER UNIT (GOLD)	A70
	CM1-2095-000	B	1	FRONT COVER UNIT (GRAY)	A70
	CM1-2104-000	B	1	FRONT COVER UNIT (YELLOW)	A70
	CM1-2127-000	B	1	FRONT COVER UNIT (BLUE)	A70
	CM1-2099-000	B	1	FRONT COVER UNIT	A60
5	CD3-0384-000	B	1	COVER, HOLE	A70/60
6	CD3-0389-000	B	1	COVER, CF (GOLD)	A70
	CD3-0871-000	B	1	COVER, CF (GRAY)	A70
	CD3-1025-000	B	1	COVER, CF (YELLOW)	A70
	CD3-1277-000	B	1	COVER, CF (BLUE)	A70
	CD3-0906-000	B	1	COVER, CF	A60
7	CM1-2040-000	B	1	GRIP CAP UNIT (GOLD)	A70
	CM1-2094-000	B	1	GRIP CAP UNIT (GRAY)	A70
	CM1-2103-000	B	1	GRIP CAP UNIT (YELLOW)	A70
	CM1-2126-000	B	1	GRIP CAP UNIT (BLUE)	A70
	CM1-2098-000	B	1	GRIP CAP UNIT	A60
8	CD3-0318-000	B	1	COVER, CONNECTER	A70/60
9	CD3-0333-000	C	1	HOLDER, DATE BATTERY	A70/60
10	CD3-0284-000	C	1	SHEET, LENS BARREL	A70/60
11	CD3-0288-000	C	1	SPACER, LENS BARREL	A70/60
12	CD3-0378-000	C	1	SHAFT, BATTERY COVER	A70/60
13	CD3-0473-000	C	1	SPRING, BATTERY COVER	A70/60
14	CM1-2045-000	B	1	BATTERY COVER UNIT (GOLD)	A70
	CM1-2096-000	B	1	BATTERY COVER UNIT (GRAY)	A70
	CM1-2105-000	B	1	BATTERY COVER UNIT (YELLOW)	A70
	CM1-2128-000	B	1	BATTERY COVER UNIT (BLUE)	A70
	CM1-2100-000	B	1	BATTERY COVER UNIT	A60
15	CD3-0385-000	B	1	PLATE, STRAP	A70/60
16	CM1-2043-000	C	1	REAR COVER UNIT	A70/60
17	CD3-0382-000	B	1	WINDOW, LCD	A70/60
18	CD3-0348-000	C	1	TAPE, FRONT COVER A	A70/60
19	CD3-0349-000	C	1	TAPE, FRONT COVER B	A70/60
20	CD3-1032-000	C	1	LABEL, BATTERY	A70/60
21	CY1-6262-000	B	1	PLATE, BODY NUMBER (J)	A70 #13121xxxxx
	CY1-6263-000	B	1	PLATE, BODY NUMBER (N)	A70 #13221xxxxx
	CY1-6264-000	B	1	PLATE, BODY NUMBER (E)	A70 #13321xxxxx
	CY1-6265-000	B	1	PLATE, BODY NUMBER (J)	A60 #13121xxxxx
	CY1-6266-000	B	1	PLATE, BODY NUMBER (N)	A60 #13221xxxxx
	CY1-6267-000	B	1	PLATE, BODY NUMBER (E)	A60 #13321xxxxx
22	XA1-7170-207	F	5	SCREW	A70/60
23	XA4-9170-357	F	2	SCREW	A70/60
24	XA4-9170-407	F	1	SCREW	A70/60
25	XA4-9170-557	F	2	SCREW	A70/60

Pg2

Internal Parts-1

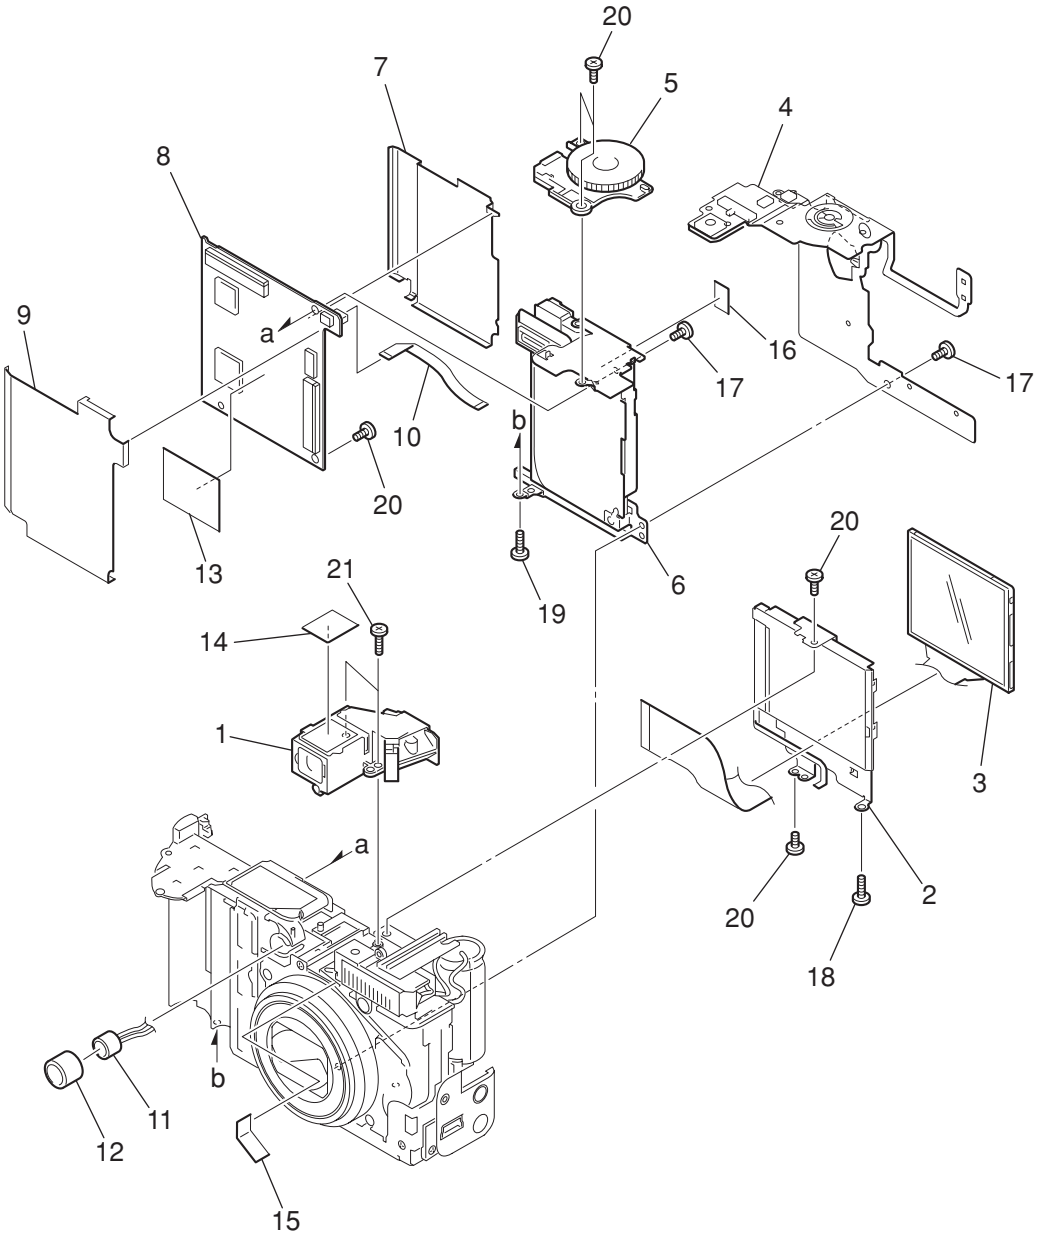

PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CM1-2035-000	C	1	FINDER UNIT	A70/60
2	CM1-2038-000	C	1	BACK LIGHT UNIT	A70/60
3	CK9-1022-000	B	1	PANEL, LCD	A70/60
	CK9-1022-001	B	1	PANEL, LCD (SELECTION)	A70/60
4	CM1-2031-000	C	1	OPRATION MODULE UNIT	A70/60
5	CM1-2041-000	C	1	DIAL UNIT	A70/60
6	CM1-2025-000	C	1	CF UNIT	A70/60
7	CD3-0368-000	C	1	SHIELD, MAIN B	A70/60
8	CM1-2029-000	C	1	PCB ASS'Y, MAIN	A70
	CM1-2056-000	C	1	PCB ASS'Y, MAIN	A60
9	CD3-0367-000	C	1	SHIELD, MAIN A	A70/60
10	CK2-2033-000	C	1	FPC, M-S	A70/60
11	CM1-2046-000	C	1	MICROPHONE UNIT	A70/60
12	CD3-0319-000	C	1	BUSH, MICROPHONE	A70/60
13	CD3-1030-000	C	1	SHEET, EMI	A70/60
14	CD3-0304-000	C	1	SHEET, FINDER	A70/60
15	CD3-0480-000	C	1	SHEET, SHADING	A70/60
16	CD3-1460-000	C	1	SHEET, ELECTROSTATIC PROTECTION	A70/60
17	XA1-7170-307	F	2	SCREW	A70/60
18	XA4-9170-457	F	1	SCREW	A70/60
19	XA4-9170-357	F	1	SCREW	A70/60
20	XA1-7170-257	F	5	SCREW	A70/60
21	XA4-9140-357	F	2	SCREW	A70/60

Internal Parts-2

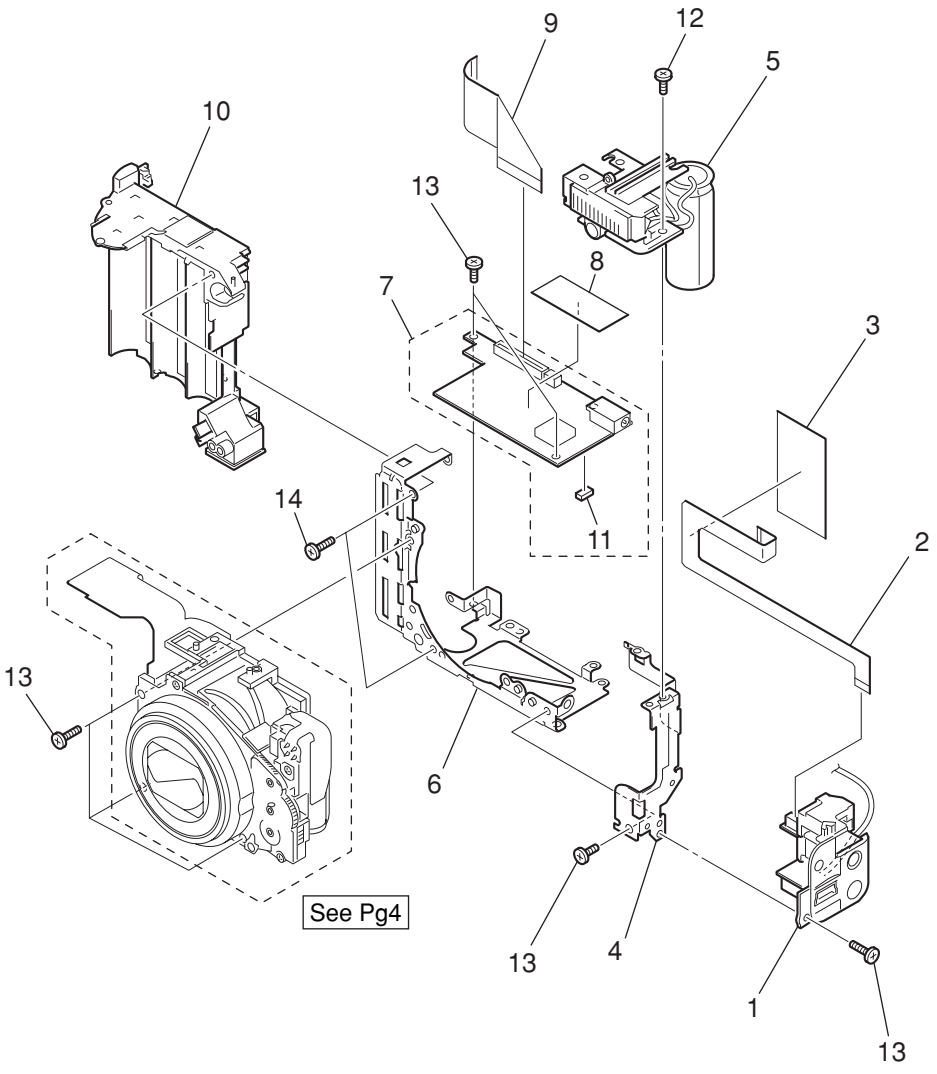

PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CM1-2030-000	C	1	CONNECTOR UNIT	A70/60
2	CK1-1037-000	C	1	FPC, M-J	A70/60
3	CD3-1031-000	C	1	SHEET, M-J FPC	A70/60
4	CD3-0347-000	C	1	PLATE, FLASH	A70/60
5	CM1-2042-000	B	1	FLASH UNIT	A70/60
6	CD3-0316-000	C	1	FRAME, MAIN	A70/60
7	CM1-2027-000	C	1	PCB ASS'Y, DC/DC CONVERTER	A70/60
8	CD3-1275-000	C	1	SHEET, SOUNDPROOFING	A70
9	CK2-2032-000	C	1	FPC, M-D	A70/60
10	CM1-2037-000	C	1	BATTERY BOX UNIT	A70/60
11	WD1-5063-000	C	1	FUSE, MATSU DENKI UNHH205	A70/60
12	XA1-7170-307	F	1	SCREW	A70/60
13	XA1-7170-257	F	5	SCREW	A70/60
14	XA4-9170-357	F	2	SCREW	A70/60

Pg4

OPTICAL UNIT

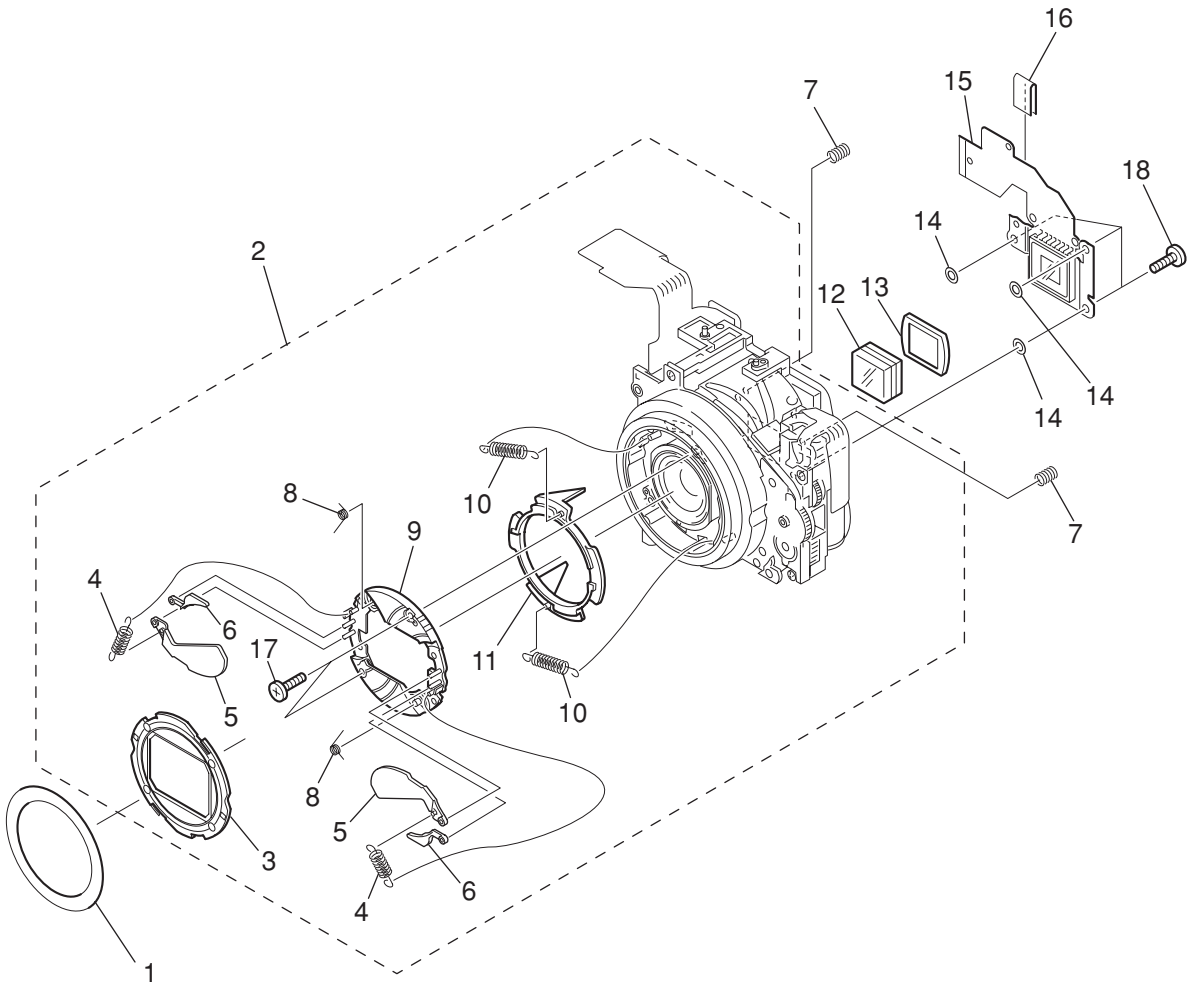

PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CD3-0267-000	C	1	CUP, BARREL	A70/60
2	CY1-6268-000	B	1	OPTICAL UNIT	A70/60
3	CD3-0266-000	C	1	CAP, LENS BARREL	A70/60
4	CD3-0530-000	C	2	SPRING, BARRIER CLOSE	A70/60
5	CD3-0281-000	C	2	PLATE, BARRIER 1	A70/60
6	CD3-0282-000	C	2	PLATE, BARRIER 2	A70/60
7	CD3-0277-000	C	2	SPRING, CCD	A70
8	CD3-0532-000	C	2	SPRING, BARRIER PLATE2	A70/60
9	CD3-0264-000	C	1	BASE, BARRIER	A70/60
10	CD3-0276-000	C	2	SPRING, BARRIER OPEN	A70/60
11	CD3-0265-000	C	1	RING, BARRIER DRIVE	A70/60
12	YN1-3054-000	C	1	FILTER, IR	A70
	YN1-3053-000	C	1	FILTER, IR	A60
13	CD3-0285-000	C	1	RUBBER, CCD	A70/60
14	XD1-1102-112	C	3	WASHER, CCD	A70/60
15	CY1-6269-000	B	1	CCD UNIT	A70
	CY1-6270-000	B	1	CCD UNIT	A60
16	CD1-4418-000	C	1	SHEET, EMI 1	A70/60
17	XA4-5140-357	C	2	SCREW	A70/60
18	FC3-0021-000	C	3	SCREW	A70/60

Accessories-1

Wrist Strap WS-200

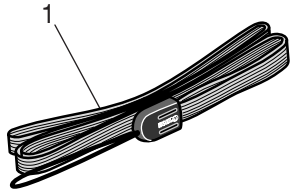

USB Interface Cable IFC-300PCU



N.S

Compact Power Adapter CA-PS500

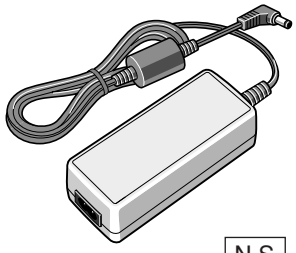

N.S

Canon Digital Camera Solution Disk, ArcSoft Camera Suite Disk

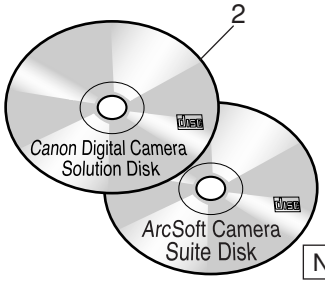

N.S

Direct Interface Cable DIF-100



N.S

AC Cable

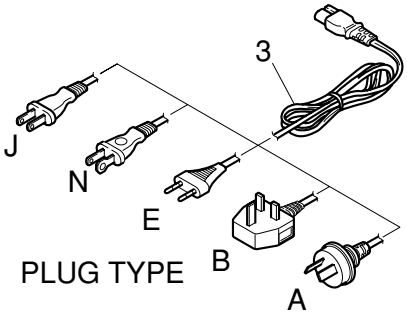

CF Card FC-16M

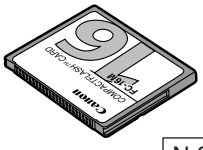

N.S

Battery Charger CB-3AH

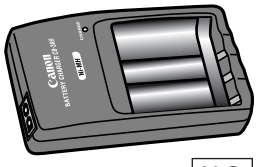

N.S

CF CASE

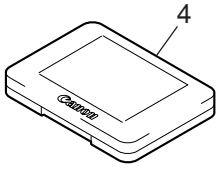

Video Cable AVC-100

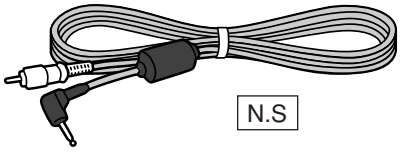

N.S

NiMH Battery NB4-100

N.S

N.S : N.S Stand for No Stock (Product available)

PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	C84-1060-000	B	1	WRIST STRAP WS-200	
2	C84-1173-000	S	1	CD-ROM, SOLUTION VER.12.0 (J/E)	FOR JAPAN
	C84-1175-000	S	1	CD-ROM, SOLUTION VER.12.0 (E/F/S)	FOR USA/CANADA
	C84-1177-000	S	1	CD-ROM, SOLUTION VER.12.1 (J/E/C)	FOR ASIA/AUSTRALIA
3	D82-0641-000	C	1	AC CABLE (J)	FOR JAPAN
	D82-0642-000	C	1	AC CABLE (N)	FOR USA/CANADA
	D82-0643-000	C	1	AC CABLE (E)	FOR EUROPE/ASIA
	D82-0644-000	C	1	AC CABLE (B)	FOR ASIA
	D82-0645-000	C	1	AC CABLE (A)	FOR AUSTRALIA
4	FC2-9610-000	B	1	CASE, CF	

Accessories-2

Waterproof Case WP-DC 700 N.S

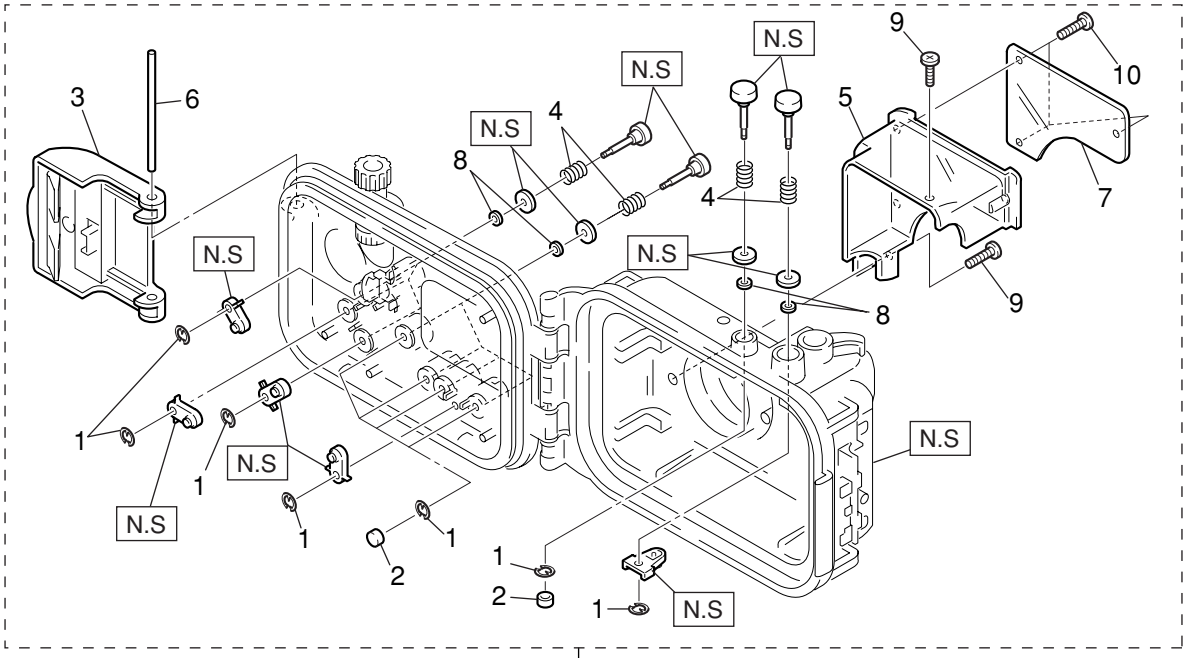

Waterproof Seal

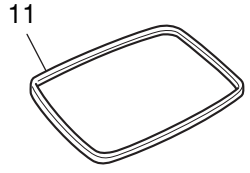

Neck Strap

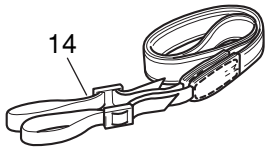

Silicone Grease

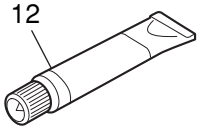

Wrist Strap

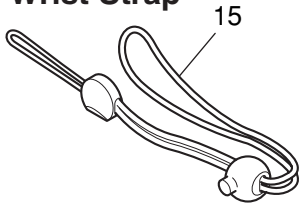

Sheet

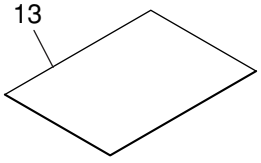

Diffusion Plate Unit

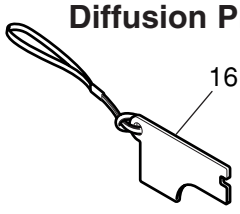

N.S : N.S Stand for No Stock (Product available)

PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CY1-6168-000	C	10	E RING	
2	CY1-6169-000	C	5	CAP, BUTTON	
3	CY1-6171-000	C	1	BUCKLE ASS'Y	
4	CY1-6167-000	C	10	SPRING, COIL	
5	CY1-6202-000	C	1	HOLDER, DIFFUSION PLATE	
6	CYI-6203-000	C	1	SHAFT, BUCKLE	
7	CYI-6201-000	C	1	PROTECTOR, DIFFUSION PLATE	
8	CYI-6252-000	C	10	O RING	
9	CY6-3211-000	C	2	SCREW	
10	CY6-3210-000	C	3	SCREW	
11	CY1-6177-000	B	1	PACKING, RUBBER	
12	DY9-3029-000	C	1	GREASE, PACKING	
13	CY1-6271-000	C	1	SHEET	FOR JAPAN
14	CY1-6099-000	B	1	STRAP, NECK	
15	CY1-6174-000	B	1	STRAP, WRIST	
16	CY1-6178-000	B	1	DIFFUSION PLATE UNIT	

Accessories-3

Camera User Guide

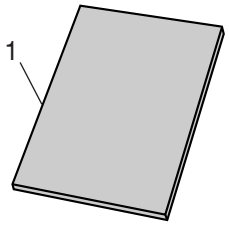

Software Starter Guide

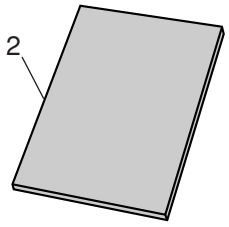

System Map

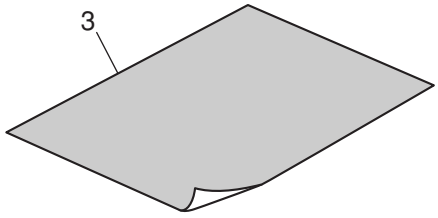

Quick Start Guide

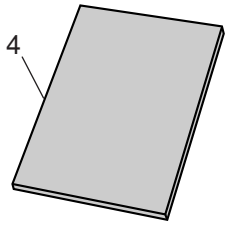

PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CDI-E093-000	S	1	I.BOOK (ENGLISH) PS A70, A60	FOR USA, CANADA, ASIA, AUSTRALIA
	CDI-S083-000	S	1	I.BOOK (SPANISH) PS A70, A60	FOR USA
	CDI-J084-000	S	1	I.BOOK (JAPANESE) PS A70, A60	FOR JAPAN
	CDI-F082-000	S	1	I.BOOK (FRENCH) PS A70, A60	FOR CANADA
2	CDI-E087-000	S	1	SOFTWARE GUIDE (ENGLISH) (FOR VER.12.0)	FOR USA, CANADA, ASIA, AUSTRALIA
	CDI-S079-000	S	1	SOFTWARE GUIDE (SPANISH) (FOR VER.12.0)	FOR USA
	CDI-J078-000	S	1	SOFTWARE GUIDE (JAPANESE) (FOR VER.12.0)	FOR JAPAN
	CDI-F076-000	S	1	SOFTWARE GUIDE (FRENCH) (FOR VER.12.0)	FOR CANADA
3	CDI-E094-000	S	1	SYSTEM MAP (ENGLISH) PS A70, A60	FOR USA, CANADA, ASIA, AUSTRALIA
	CDI-S084-000	S	1	SYSTEM MAP (SPANISH) PS A70, A60	FOR USA
	CDI-J085-000	S	1	SYSTEM MAP (JAPANESE) PS A70, A60	FOR JAPAN
	CDI-F083-000	S	1	SYSTEM MAP (FRENCH) PS A70, A60	FOR CANADA
4	CDI-E095-000	S	1	QUICK START GUIDE (ENGLISH) PS A70, A60	FOR USA, CANADA, ASIA, AUSTRALIA
	CDI-S085-000	S	1	QUICK START GUIDE (SPANISH) PS A70, A60	FOR USA
	CDI-J086-000	S	1	QUICK START GUIDE (JAPANESE) PS A70, A60	FOR JAPAN
	CDI-F084-000	S	1	QUICK START GUIDE (FRENCH) PS A70, A60	FOR CANADA

Service Tools-1

SERVICE MANUAL CD-ROM

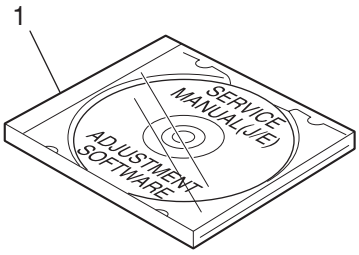

C-12 Filter

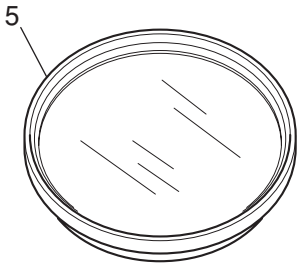

ND-2 Filter

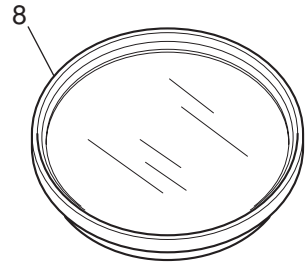

Color Viewer (5600° K)

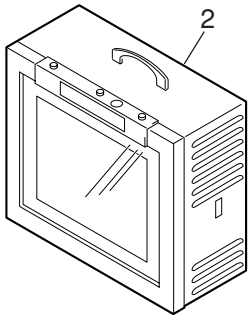

W-10 Filter

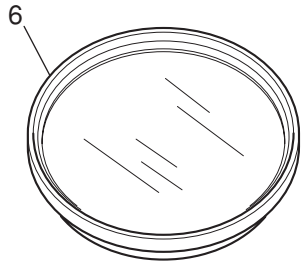

ND-4 Filter

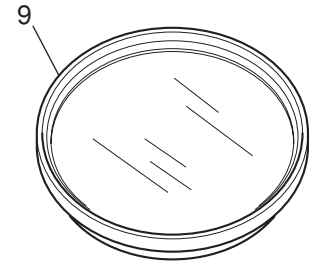

Standard Color Bar Chart

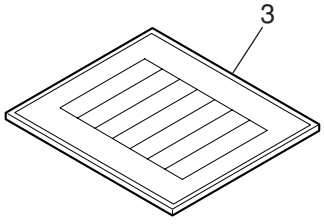

FL-W Filter

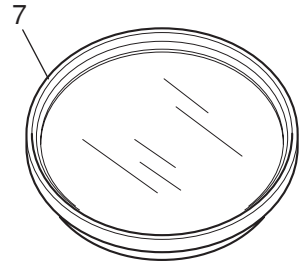

ND-8 Filter

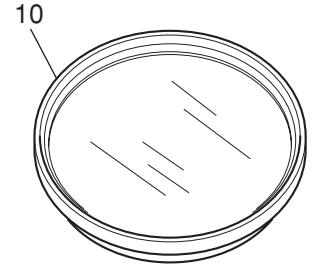

18% Gray Chart

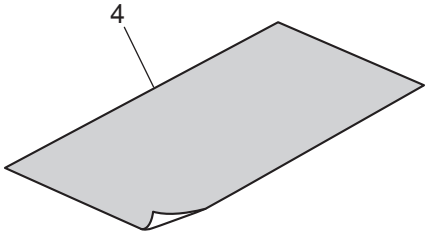

PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CY8-4383-031	Y	1	CD-ROM, SERVICE MANUAL (J/E)	
2	DY9-2039-100	Y	1	COLOR VIEWER 5600K	
3	DY9-2002-000	Y	1	COLOR BAR CHART	
4	CY4-6016-000	Y	1	CHART, 18% GRAY	
5	DY9-2029-000	Y	1	FILTER, C-12	
6	CY9-1543-000	Y	1	FILTER, W-10	
7	CY9-1550-000	Y	1	FILTER, FL-W	
8	CY9-1552-000	Y	1	FILTER, ND-2	
9	CY9-1553-000	Y	1	FILTER, ND-4	
10	CY9-1554-000	Y	1	FILTER, ND-8	

Service Tools-2

DIA BOND NO.1663G BLACK

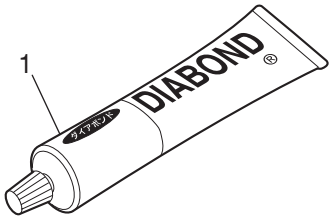

Adhesive Tape SONY T4000

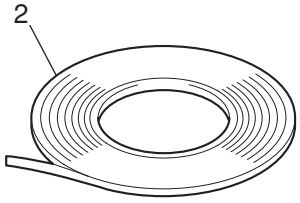

Adhesive Tape 3M NO.56

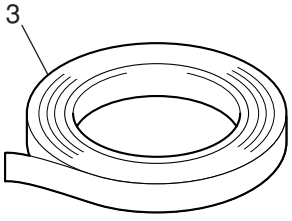

PARTS LIST

SYMBOL	PARTS NO.	CLASS	QTY	DESCRIPTION	REMARKS
1	CY9-8129-000	Y	1	BOND, DIA BOND NO.1663G BLACK	
2	CY4-6012-000	Y	1	ADHESIVE TAPE, SONY T4000	6mm × 50m roll
3	CY4-6018-000	Y	1	ADHESIVE TAPE, 3M NO.56	15mm × 66m roll