TEMPORARY REVISION NUMBER 1

DATED 3 APRIL 1995

MANUAL TITLE MODEL 182 SERIES PARTS CATALOG (1962 THRU 1973)

MANUAL NUMBER - PAPER COPY P515-12 **AEROFICHE** P515-12AF

TEMPORARY REVISION NUMBER - PAPER COPY P515TR1-12 **AEROFICHE** NA

MANUAL DATE 15 MARCH 1974 **REVISION NUMBER** NA **DATE** NA

This Temporary Revision consists of changes to the subject Parts Catalog and replaces all previously issued Revision Sheets. Pen and ink changes should be made to the paper copy of the manual and supersede the aerofiche information.

NOTE

The "R" located in the first column, of the revision sheet(s), indicates changes that have occurred since the issuance of the previous Revision Sheets and/or Temporary Revision text pages.

PAGE	FICHE/FRAME	PAGE	FICHE/FRAME
1	1A04	7	1A10
2	1A05	8	1A11
3	1A06	9	None
4	1A07	10	None
5	1A08	11	None
6	1A09	12	None

REASON FOR TEMPORARY REVISION

To incorporate later parts information changes to the Parts Catalog.

FILING INSTRUCTIONS FOR THIS TEMPORARY REVISION

For paper publications:

After making pen and ink changes to the Parts Catalog Pages as noted on the attached revision sheet(s) and/or Temporary Revision Text pages; file this cover sheet and the revision sheets behind the publications title page to identify the inclusion of the Temporary Revision into the manual.

For aerofiche publications:

Draw a line through any aerofiche frame (page) affected by the Temporary Revision with a permanent red ink marker. This will be a visual identifier that information in the frame (page) is no longer valid and the Temporary Revision should be referenced. Temporary Revisions should be collected and maintained in a notebook near the aerofiche library for quick reference.

COPYRIGHT © 1995
CESSNA AIRCRAFT COMPANY
WICHITA, KANSAS, USA

CESSNA AIRCRAFT COMPANY

MODEL 182 SERIES (1962 - 1973)

PARTS CATALOG REVISION SHEET

	Page No.	Fig. No.	Index No.	CHANGE		REMARKS
				FROM	TO	
R	5	1	28	S1389-12	S1389-2	Desc: Change 1/4 to 1.50
R	11	2	71	Not Listed	0890018-3	Refer To Notes, Page 7
R	11D	2A	46	0705023-1	No Change	Change: Code **E** to **V**
R	11D	2A	46A	Not Listed	0705023-8	Refer To Notes, Page 7
R	11D	2A	47A	0705023-2	No Change	Change: Code **E** to **V**
R	11D	2A	47A	Not Listed	0705023-9	Refer To Notes, Page 7
R	11H	2A	78	Not Listed	0890018-3	Refer To Notes, Page 7
R	11H	2A	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 7
R	14	3	40	1221201-3	1221201-3 *	
R	14	3	40	122120143	1221201-4 *	
R	14	3	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 7
R	17C	4A	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 7
R	19D	5A	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 7
R	19F	5B	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 7
R	27	8	7	0726603-14	0726603-16	
R	27	8	8	0726603-16	0726603-14	
R	27	8	15A	NAS737RM30	AN737RM30	
R	29	8A	2	S21021	S2107-1	
R	31	9	8	0523218	No Change	Add: Code **A**
R	31	9	8A	Not Listed	0760704-1	Refer To Notes, Page 7
	37D	12B	29	0713604-7	0731604-7	
	37D	12B	30	0713604-8	0731604-8	
R	47	15	9	0732100-4	0732100-10	
R	47	15	11	0732100-10	0732100-4	
	56	17	34	0713787-1	No Change	Change: Code **V** to **N**
R	57	17	46	0713334-4	073334-18	Refer To Notes, Page 7
R	59B	17A	49	0713334-4	073334-18	Refer To Notes, Page 7
R	67B	21A	-	0753100-200	No Change	In Desc, Delete: 2nd "Assy"
R	67B	21A	10	0753000-1	Delete Line	No Longer Used
R	67B	21A	11	0753000-13	No Change	Delete: Code **B**
R	73	23A	-	Omitted	0791160-20	Insert after 0791160-18
R	73	23A	5	0710630-2	0710630-6	
R	73	23A	5	0710630-1	0710630-7	
R	73	23A	21	0414014-1	No Change	Change: Qty (2) to Qty (4)
R	73	23A	23	0713951-3	Delete Line	No Longer Available
R	73	23A	23	0713951-4	Delete Line	No Longer Available
R	79	25	-	0791160-16	No Change	Change: Code **Z** to **AD**
R	79	25	-	Not Listed	0791160-19	Refer To Notes, Page 7
R	80	25	44	0791160-15	No Change	Change: Code **K** to **AD**
R	80	25	44	Not Listed	0791160-22	Refer To Notes, Page 7
R	80	25	45	0710658-2	0710618-8	

Please update your parts catalog as shown above.

CESSNA AIRCRAFT COMPANY

MODEL 182 SERIES (1962 - 1973)

PARTS CATALOG REVISION SHEET

	Page No.	Fig. No.	Index No.	CHANGE		REMARKS
				FROM	TO	
R	80	25	46	0710658-2	0710618-10	
R	80	25	47	0716658-2	0710618-7	
R	80	25	48	0710658-2	0710618-9	
R	81	25	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 8
R	84	27	11	0713609-1	0713609-5	
R	84	27	11	0713609-2	0713609-6	
R	85	27A	2	S1389-12	S1389-2	
R	85	27A	7	0713609-1	0713609-5	Refer To Notes, Page 8
R	85	27A	7	0713609-2	0713609-6	
R	95B	29B	-	0712504-201	No Change	Change: Code **B** to **F**
R	95B	29B	-	Not Listed	0712504-202	Refer To Notes, Page 8
R	95B	29B	-	Not Listed	0712504-203	Refer To Notes, Page 8
R	101	33	5	NAS75-4-10	NAS75-4-010	
R	105	33A	5	NAS75-4-10	NAS75-010	
R	113	35A	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 8
R	114	36	7	LM6708XL	LM67048XL	
R	116	36B	2	C163002-0201	C163002-0201 *	Add Note.* reference: (*)
R	116	36B	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 8
R	120	38	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 8
R	121	38A	7	600-015-1005	600-015-100S	
R	126	39	41	1441010-27 (LH)	1441010-27 (RH)	Desc: Plate Assy, LH to RH
R	126	39	43	1441010-24 (RH)	1441010-24 (LH)	Desc: Plate Assy, RH to LH
R	127F	39B	40	0741005-251	1741005-251	
R	127F	39B	64	0741634-2	Delete Line	
R	127F	39B	64	0741634-8	Delete Line	
R	129	40	23	9524463	95-24463	
R	131A	40A	31	Not Listed	C262003-0207	Refer To Notes, Page 8
R	131B	41	8A	0711033	0711033-1	
R	131B	41	14	0710620-213	0717010-203	
R	131B	41	14	0710620-211	0717010-201	
R	131B	41	14	Omitted	0717010-203	Insert on 182 only line
R	131B	41	14	Omitted	0717010-201	Refer To Notes, Page 8
R	131B	41	22	NAS679A06	MS21044N06	
R	133	41	26	S1116-1 Code AF	S2249-2 Code AF	Refer To Notes, Page 8
R	133	41	26	S1116-1 Code AD	S2249-2 Code AD	Refer To Notes, Page 8
R	133	41	26A	S1116-1 Code AF	S2249-2 Code AF	Refer To Notes, Page 8
R	134A	41A	17	Omitted	1217037-203	
R	134C	41A	38	S1116-1	S2249-2	Refer To Notes, Page 9
R	134C	41A	51	0711051-6	0717010-15	
R	137	42	22	S1346-1	S2249-2	Refer To Notes, Page9
R	137	42	22	S1116-1	S2249-2	Refer To Notes, Page 9

Please update your parts catalog as shown above.

CESSNA AIRCRAFT COMPANY

MODEL 182 SERIES (1962 - 1973)

PARTS CATALOG REVISION SHEET

	Page No.	Fig. No.	Index No.	CHANGE		REMARKS
				FROM	TO	
R	137	42	28A	Not Listed	MS20450C8-20	
R	137	42	32	S1264-1	S2249-2	Refer To Notes, Page 9
R	137	42	32	S1441-1-	S1441-1	Refer To Notes, Page 9
R	137B	42A	13	Omitted	1217037-202	Refer To Notes, Page 9
R	137B	42A	37	S1116-1	S2249-2	Refer To Notes, Page 9
	141	43A	28	1511208-12	No Change	In Desc, change LH to RH
	141	43A	28	1511208-13	No Change	In Desc, change RH to LH
R	147	45A	6	0700654-6	No Change	Change: Code F to Code H
R	147	45A	6A	0700694-12	No Change	Change: Code L to Code T
R	147	45A	7B	S1021Z8-8B	No Change	Change: Delete Code L
R	149	45A	24	S1247-1K	No Change	Refer To Notes, Page 9
R	149	45A	24	S1948-1	S1948-2	Refer To Notes, Page 9
R	149	45A	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 9
R	149D	46	4	0514078-5	0514078-5 #	
R	151	46	7	0715008-4 ☐	No Change	Change: Code N to Code V
R	151	46	7	0715008-3 ☐	No Change	Change: Code N to Code V
R	151	46	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 9
R	153	47	19	1200231-2	1200089-22	
R	153	47	19	1200231-1	1200089-21	
R	155	47A	12	1414082-18 #	0514078-5 #	
R	159	47B	12	1414082-18 #	0514078-5 #	
R	161D	47D	19	0715028-54 #	0715028-5 #	
R	161D	47D	20	0715028-64 #	0715028-6 #	
R	161D	47D	24A	0715028-30	0715052-2	
R	165	49	13	Not Listed	0715001-1	
R	179	51A	81	NAS561C0-10	NAS561C3-10	
R	185F	51E	17	0714004-4	0714004-4 #	
R	185M	51F	70	1414116-1	No Change	Refer To Notes, Page 9
R	185M	51F	89A	NAS561-1-16	NAS561-3-16	
R	193B	52D	17	S1746V5	S1746U 5	
R	200	53A	36	S1753-1	S1752-1	
R	206	53C	39	41163L14	41163C14	
R	215D	53G	44A	Not Listed	S2023-1	Refer To Notes, Page 10
	215N	53J	87A	C299506-0100	C299506-0102	
	215N	53J	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 10
	215R	53K	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 10
	216C	53N	76	C669502-0201	No Change	Refer To Notes, Page 10
	216C	53N	76	Not Listed	C669502-0202	Refer To Notes, Page 10
	216C	53N	80	442785	No Change	Refer To Notes, Page 10
	216C	53N	80	Not Listed	G442786-63	Refer To Notes, Page 10

Please update your parts catalog as shown above.

CESSNA AIRCRAFT COMPANY

MODEL 182 SERIES (1962 - 1973)

PARTS CATALOG REVISION SHEET

	Page No.	Fig. No.	Index No.	CHANGE		REMARKS
				FROM	TO	
	216D	53N	87	C7000-632-7	C7000-632-67	
	216L	53Q	86	040437	440437	
	216M	53Q	96D	Not Listed	S2023-1	
R	223	56	31	C668507-0102	Delete Line	No Longer Used
R	224	56	34	0760606-1	1260463	When Exhausted Use
R	224A	56	-	- - - - - - - -	- - - - - - - -	Refer To Notes, Page 10
R	237B	59B	1	C3910	C3910/C201	
R	229	58	17	0752620-1	0752620-3	
R	242	61	57	0752609-2	0752609-27	
R	245	61A	15	0752624-8	0552173-25	
R	245	61A	18	1552004-10	0552173-23	
R	245	61A	37	0752016-2	0752016-12	
R	246C	61B	8	0752624-8	0552173-25	
R	246C	61B	14	1552004-10	0552173-23	
R	246C	61B	15	KM610-.051	KM610-64	
R	246D	61B	51	4002H	No Change	In Desc, Add: "-LH"
R	246D	61B	51	CM2791-1	No Change	In Desc, Add: "-LH"
R	246D	61B	51	GA5-375	No Change	In Desc, Add: "-RH"
R	246G	61C	5	1552004-52	0552173-3	
R	246G	61C	11	1552004-53	0552173-4	
R	247	62	26	NAS435A5-92	S1486DG5U	In Desc, Delete "Tin"
R	251	63	1	0-470-R %	No Change	Add: Code **AC**
R	251	63	1	0-470-R *	No Change	Add: Code **AC**
	251	63	1	Not Listed	0-470-S %	Refer To Notes, Page 10
	251	63	1	Not Listed	0-470-S *	Refer To Notes, Page 10
	251	63	17	Not Listed	0311018-12	
	251	63	18	0750144-1	0750144-33	
R	252	63	45	0750283-1	No Change	
R	252	63	45	NAS434A14-27	S1485D14L	
R	252	63	48	0700309-2	0700309-11	
R	252	63	52	0550209-1	No Change	Desc: Add "-Carb Air Temp"
R	252	63	55	S1167-4-0460	No Change	Refer To Notes, Page 10
R	253	63	65	S1372-1	No Change	Refer To Notes, Page 10
R	253	63	65	Not Listed	S1372-2	Refer To Notes, Page 10
	253	63	83	0750157	539792	
	253	63	83	0750212-1	632062-29A1	
R	253A	63	-	- - - - - - -	- - - - - - -	Refer To Notes, Page 11
R	254	63A	30	S1597-1-30.8	539547-31.19	
R	265	65	8	MS21044N3	MS20365-1032C	
R	265	65	15	MS21044N3	MS20365-1032C	

Please update your parts catalog as shown above.

CESSNA AIRCRAFT COMPANY

MODEL 182 SERIES (1962 - 1973)

PARTS CATALOG REVISION SHEET

	Page No.	Fig. No.	Index No.	CHANGE		REMARKS
				FROM	TO	
R	267	65A	1	0750161-31	0750238-206	
R	267	65A	1	0750161-51	0750238-208	
R	267	65A	2	0750161-24	No Change	In Desc, Add:"-Upper"
R	267	65A	3	0750161-22	No Change	In Desc, Add:"Half-Lower"
R	267	65A	4	MS21044N3	MS20365-1032C	
R	267	65A	5	0750161-28	0750161-61	
R	267	65A	11	MS21044N3	MS20365-1032C	
R	277	69	9	S1441-2-6.56	S1441-2	
	294	73	-	0541138-16	0541138-3	
	294	73	-	0541138-3	0541138-22	
	294	73	10	0541147-2	Delete line	
	294	73	10	0541184-200	0541184-1	
	294	73	10	0541184-1	0541184-2	
	294	73	11	AN921-4D	No Change	Indent 3 to Indent 2
	294	73	12	MS28778-4	No Change	Indent 3 to Indent 2
	294	73	13	AN924-4D	No Change	Indent 3 to Indent 2
	294	73	-	- - - - - - - -	- - - - - - - -	Refer to Notes, Page 11
R	297	74	63	s1080-4	No Change	Desc: delete LH Control only
R	301	74A	46	MS24663-4	MS24463-4	
R	307	76	33	0760610-2	No Change	Change Qty (8) to (4)
R	307	76	33A	Not Listed	0760610-1	Desc: Guard Qty (4)
R	311	76A	32	0760610-2	No Change	Change Qty (8) to (4)
R	311	76A	32A	Not Listed	0760610-1	Desc: Guard Qty (4)
R	311	76A	40	0523321	0523221	
R	319	78	1	0510105-202	0510105-201	
R	319	78	1	0510105-302	0510105-301	
R	319	78	2	0510105-201	0510105-202	
R	319	78	2	0510105-301	0510105-302	
R	322	79	47	C301002-0301	C301002-0301 %	
R	322	79	52	C301002-0305	C301002-0308 %	Refer to Notes, Page 11
R	322	79	52	11918	Delte line	
R	322	79	52	C301001-0211	Delte line	
R	322	79	52A	C301002-0307	Delte line	
R	322	79	52B	V3L-3-D9	No Change	Change: Index 52B to 52A
R	322	79	52A	V3L-3-D9	No Change	Refer to Notes, Page 11
R	322	79	52A	Not Listed	C301001-0211	
R	322	79	52A	Not Listed	0409007-4	Refer to Notes, Page 11
R	322	79	53	0760620-1	0760620-9	Add: Code **C**
R	322	79	56	AN565D832H3	AN565B428H4	
R	322	79	-	- - - - - - - -	- - - - - - - -	Refer to Notes, Page 11
R	325	79B	4	1560033-12	1562033-12	

Please update your parts catalog as shown above.

CESSNA AIRCRAFT COMPANY

MODEL 182 SERIES (1962 - 1973)

PARTS CATALOG REVISION SHEET

	Page No.	Fig. No.	Index No.	CHANGE		REMARKS
				FROM	TO	
R	327	79B	27	S1244-20	No Change	Refer to Notes, Page 11
R	327	79B	27	S2095-1	9860058-7	
R	335	82	7	AN815-6D	No Change	Change: Index No. to 7A
R	335	82	8	0700099-20	0700099-19	
R	335	82	9	0700099-19	0700099-20	
R	336	82	41	S1167-8-0120	S1167-8-0150	
R	339	82A	47	S1167-8-0120	S1167-8-0150	
R	340	83	1	33-199-102	33-199-902	
R	340	83	6	33-199-5	60B95-002	
R	347	86	2	S1167-4-0388	S1167-4-0460	
R	347	86	3A	0700099-37	No Change	In Desc, Add: Firewall to Gage
R	347	86	28	- - - - - - - -	- - - - - - -	Refer to Notes, Page 11
R	347	86	41	- - - - - - - -	- - - - - - -	Refer to Notes, Page 12
R	348	86	52	1250922-3	1250922-2	
R	348	86	-	- - - - - - - -	- - - - - - - -	Refer to Notes, Page 12
R	351	87	11	0750036-1	0750037-1	
R	351	87	23	AN912-2	MS20822-6B	Refer to Notes, Page 12
R	365	89A	1	C166001-0104	No Change	Change: Code **F** to **M**
R	365	89A	1	Not Listed	C166001-0501	Refer to Notes, Page 12
R	365	89A	16	0800045-24	No Change	Change: Code **F** to **M**
R	366	89A	76	0713245-200	Delete line	
R	366	89A	-	- - - - - - - -	- - - - - - - -	Refer to Notes, Page 12
R	374	90	40	0750213-1	1650046-4	
R	375	90	51A	Not Listed	0770610PC1	Refer to Notes, Page 12
R	381	91A	1A	0711778-6	0711778-7	
R	381	91A	10	1211080-1	1211081-1	
R	381	91A	10	1211080-1	1211081-3	
	385	92A	-	- - - - - - - -	- - - - - - - -	Refer to Notes, Page 12
R	389	94	9A	Not Listed	1470089-16	Refer to Notes, Page 12
R	389	94	11	1816TR	S1876-3	
R	390	95	14	S1597-1-30.8	539547-31.19	
R	390	95	15	1250213-1	No Change	Refer to Notes, Page 12

Please update your parts catalog as shown above.

CESSNA AIRCRAFT COMPANY

MODEL 182 SERIES (1962 - 1973)

PARTS CATALOG REVISION SHEET

NOTES

PG	FIGURE	INDEX NO.	
11	2	71	**(0890018-2) Description:** Placard-Pitot Heat Warning Qty (1)
11D	2A	46A	**(0705023-8) Description:** Placard-Fuel Fill Standard Qty (2) Code W
11D	2A	46A	**(0705023-9) Description:** Placard-Fuel Fill Long Range Qty (2) Code W
11H	2A	78	**(00890018-2) Description:** Placard-Pitot Heat Warning Qty (1)
11H	2A	-	**Add to Serialization Series at the End of Figure 2A:** **V** - - - 182 Serial 18260446 thru 18262250 **W** - - -182 Serial 18262251 & on
14A	3	-	**Add 1st Note at end of Figure 3 :** **Note.***When ordering this part, specify 1/4-inch or 5/16-inch diameter.
17C	4A	-	**Change Serialization Series at the End of Figure 4A:** **From A** - - - 182 Serial 18260056 thru 18260445 A182 Serial A182-0117 thru A182-0136 **To:** A - - -182 Serial 18260056 thru 18260445 A182 Serial A182-0117& on.
19D	5A	-	**Change Serialization Series at the End of Figure 5A:** **From** A - - - 182 Serial 18260056 thru 18260825 A182 Serial A182-0117 thru A182-0136 **To:** A - - - 182 Serial 18260056 thru 18260825 A182 Serial A182-0117& on. **From** B - - - 182 Serial 18260056 thru 18260425 A182 Serial A182-0117 thru A182-0136 **To:** A - - - 182 Serial 18260056 thru 18260425 A182 Serial A182-0117& on **From** E - - - 182 Serial 18260056 thru 18260825 A182 Serial A182-0117 thru A182-0136 **To:** A - - - 182 Serial 18260056 thru 18260825 A182 Serial A182-0117& on
19F	5B	-	**Change Serialization Series at the End of Figure 5B:** **From: A**- - - 182 Serial 18260826 thru 18262465 A182 Serial A182-0137 & on. **To:** **A**- - - 182 Serial 18260826 thru 18262465
31	9	8	**(P/N 0760704-1) Description:** Rod Assembly-Aileron Push-Pull Qty (1) Code B
57	17	46	**(P/N 0713334-4)** **Change from:** P/N 0713334-4 **To:** P/N 07133318 - 18
59B	17A	49	**(P/N 0713334-4)** **Change from:** P/N 0713334-4 **To:** P/N 07133318 - 18

Please update your parts catalog as shown above.

CESSNA AIRCRAFT COMPANY

MODEL 182 SERIES (1962 - 1973)

PARTS CATALOG REVISION SHEET

NOTES

PG	FIGURE	INDEX NO.	
79	25	-	(0791160-19) **Description:** Lower Cabin Section Assembly Qty (1) Change Code **Z** to **AD**
79	25	-	**(No P/N) Description:** Lower Cabin Section Assembly Qty (1) Code **Z**
80	25	44	(0791160-19) **Description:** Floorboard Assembly-Center Qty (1) Code **Z**
81A	25	-	**Change Serialization Series at the End of Figure 25:** **From:** Z - - - Lower Cabin Section Assembly For 18260826 . . . **To:** Z Lower Cabin Section Assembly For 18261426 . . .
81A	25	-	**Add to Serialization Series at the End of Figure 25:** **AD - - -** 182 Serial 18260826 thru 18261425
85	27A	7	**(P/N 0713609-5) Change in Description: Delete:** "Seal-Window . . ." **Replace with:** "Retainer-Inner LH"
95B	29B	-	**(P/N 0712504-202) Description:** Tailcone Assembly-Fuselage Qty (1) **Change:** Code **C** to Code **G**
95B	29B	-	**(P/N 0712504-203) Description:** Tailcone Assembly-Fuselage Qty (1) Code **H**
81A	29B	-	**Add to 182 Serialization Series at the End of Figure 29B:** **F - - -** 182 Serial 18260826 thru 18261425 **G - - -** 182 Serial 18261426 thru 18261528 **H - - -** 182 Serial 18261529 thru 18262465
113	35B	-	**Change Serialization Series at the End of Figure 29B:** **From: C - - -** 182 Serial 18257626 thru 18259788 A182 Serial A182-0057 thru A182-0116 **To: C - - -** 182 Serial 18253599 thru 18259788 A182 Serial A182-0001 thru A182-0116
116	36B	-	**Add Note.* at end of Figure 36B:** Note.*When ordering spares for 182 Airplane Serial 18261299 thru 18261714, order C163003-201 wheel assembly, or McCauley Kit No. PL30421 for conversion.
120	38	-	**Change Note.* at end of Figure 38 to read:** **Note.***When these parts are exhausted, order 1442114-5 Shimmy Damper Assembly. See Figure 38A.
131A	40A	31	**(P/N C262003-0207) Description:** Tire - 8.00 X 6 6 PR Qty (1) Code **H** **(P/N C262023-0104) Description:** Tube - 8.00 X 6 Qty (1) Code **H**
131A	40A	-	**Add to 182 Serialization Series at the End of Figure 40A:** **H - - -** 182 Serial 18255845 thru 18260445
131B	41	14	**(P/N 0717010-201) In Description, Add:** Skylane
133	41	26	**(P/N S2249-2) In Description, Change:** "REF S1116-1" to "REF S2249-2- . . ." For Code AD line. "REF S1116-1- . . ." to "REF S2249-2-. . . " For Code AF line

Please update your parts catalog as shown above.

CESSNA AIRCRAFT COMPANY

MODEL 182 SERIES (1962 - 1973)

PARTS CATALOG REVISION SHEET

NOTES

PG	FIGURE	INDEX NO.	
133	41	26A	**(P/N S2249-2) In Description, Change:** "REF S1116-1" to "REF S2249-2-. . . "For Code AF line.
134A	41A	17	**(P/N 1217037-203) CHANGE Qty from (NP) to (1) for Line, Description:** Structure Assy- Cabin Door LH
134C	41A	38	**Change in Description:** (Ref P/N S111601) to (Ref P/N S2249-2)
137	42	22	**(P/NS2249-2) In Description, Change:** "REF S1346-1- . . " to "REF S2249-2-. . . " For Code **X** line. "REF S1116-1 . . ." to "REF S2249-2- . . ." For Code **Y** line
137	42	28	**Add:** "Attaching Parts" following Index No. 28
137	42	28A	**(MS20450C8-20)Add, Description:** Rivet Qty (AR)
137	42	28A	**Add:** "- - - * - - -" following Index No. 28A.
137	42	32	**(P/NS2249-2) In Description, Change:** "REF S1264-1- . . ." to "REF S2249-2-. . . " For Code **X** line. "REF S1441-1-. . ." to "REF S2249-2- . . ." For Code **X** line.
137	42	-	**Change Serialization Series at the End of Figure 42:** **From:** X - - - 182 Serial 18253599 thru 18260446 **To:** X - - - 182 Serial 18253599 thru 18260445
137	42	-	**Change Serialization Series at the End of Figure 42:** **From:** Y - - - 182 Serial 18260446 thru 18261425 **To:** Y - - - 182 Serial 18260447 thru 18261425
137B	42A	13	**(P/N 1217037-202) Description:** Structure Assy-Cabin Door RH Change: Qty (NP) to Qty (1)
137B	42A	37	**(P/NS2249-2) In Description, Change** **From:** "REF S1116-1- . . ." **To:** "REF S2249-2-. . . "
149	45A	24	**(P/N S1247-1K) In Description, Change** **From:** When Exhausted Use S1948-1 **To:** When Exhausted Use S1948-2
149	45A	24	**(P/N S1948-2) In Description, Change:** **From:** "Seal" **To:** "Extrusion"
149	45A	28A	**(P/N S1948-2) In Description, Change:** **From:** "Seal" **To:** "Extrusion"
149	45A	-	**Add to 182 Serialization Series at the End of Figure 45A:** T - - - 182 Serial 18257626 thru 18260055 A182 Serial A182-0057 thru A182-0116
151	45A	-	**Add to 182 Serialization Series at the End of Figure 45A:** V - - - 182 Serial 18258506 thru 18260055

Please update your parts catalog as shown above.

NOTES

PG	FIGURE	INDEX NO.	
185M	51F	70	**(P/N 1414116-1)) In Description, Change** **From:** "LH Side Only" Qty (1) **To:** 1-LH & 1-RH Qty (2)
215D	53G	44	**(P/N S2023-1) Description:** Adapter-Terminal Used For Converting 1-Tab to 2-Tab Qty (1)
215N	53J	-	**Change Serialization Series at the End of Figure 53J:** **From: A - - -** 182 Serial 18260056 thru 18260445 A182 Serial A182-0117 & on **To: A - - -** 182 Serial 18260056 thru 18260445 A182 Serial A182-0117 thru A182-0136
215R	53K	-	**Change Serialization Series at the End of Figure 53K:** **From: A - - -** 182 Serial 18260056 thru 18260445 A182 Serial A182-0117 & on **To: A - - -** 182 Serial 18260056 thru 18260445 A182 Serial A182-0117 thru A182-0136
216C	53N	76	**(P/N C669502-0201) Add To Description:** "Used With 0-420-R Engine Only". Add: Code **F.**
216C	53N	76	**(P/N C669502-0202) Description:** "Instrument Cluster-Lighted Used With 0-420-S Engine Only". Qty (1) Code **G.**
216C	53N	80	**(P/N 442785) Add To Description:** "Used With 0-420-R Engine Only". Add: Code **F.**
216C	53N	80	**(P/N G442786-63) Description:** "Instrument Cluster-Lighted Used With 0-420-S Engine Only". Qty (1) Code **G.**
216D	53N	-	**Add to 182 Serialization Series at the End of Figure 53N:** **A - - -** A182 Serial A182-0137 & on **F - - -** 182 Serial 18260826 thru 18215 A182 Serial A182-0137 thru A182-0146 **G - - -** A182 Serial A182-0147 & on
224	56	-	**Change Serialization Series at the End of Figure 56:** **From: M - - -** 182 Serial 18256685 thru 18260445 A182 Serial A182-0001 & on **To: A - - -** 182 Serial 18255685 thru 18260445 A182 Serial A182-0001 & on
251	63	1	**(P/N 0-470-S%) Description:** "Engine SPEC 1 CM Qty (1) Code **AD**
251	63	1	**(P/N 0-470-S*) Description:** "Engine SPEC 2 CM Qty (1) Code **AD**
251	63	45	**(P/N 0750283-1) Add To Description:** "1-RH Side & 1-LH Side" Change Qty: (1) To (2)
252	63	55	**(P/N S1167-4-0460) Add To Description:** "-Engine To Firewall"
253	63	65	**(P/N S1372-1) Add To Description:** "In No. 1 Cylinder Head" Add: Code **AC**

Please update your parts catalog as shown above.

CESSNA AIRCRAFT COMPANY

MODEL 182 SERIES (1962 - 1973)

PARTS CATALOG REVISION SHEET

NOTES

PG	FIGURE	INDEX NO.	
253	63	65	**(P/N S1372-2) Description:** "Sending Unit-Cylinder Head Temp In No. 3 Cylinder Head" Code **AD**
253A	63	-	**Change Serialization Series at the End of Figure 63:** **From: V** - - - 182 Serial 18253599 thru 18260574 **To: V** - - - 182 Serial 18260446 thru 18260574
253A	63	-	**Add to 182 Serialization Series at the End of Figure 63:** **AC** - - -182 Serial 18253599 thru 18262465 A182 Serial A182-0001 thru A182-0146 **AD** - - -A182 Serial A182-0147 & on
294	73	-	**Change Serialization Series at the End of Figure 73:** **From: A** - - - 182 Serial 18253599 thru 18258505 A182 Serial A182-0001 thru A182-0096 **To: A** - - - 182 Serial 18253599 thru 18261539 A182 Serial A182-0001 thru A182-0136
294	73	-	**Change Serialization Series at the End of Figure 73:** **From: B** - - - 182 Serial 18258506 thru 18262465 A182 Serial A182-0097 & on **To: B** - - - 182 Serial 18261540 thru 18262465 A182 Serial A182-0137 & on
322	79	52	**(P/N C301002-308 %) Change Description:** **From:** "Actuator-Flap" **To:** "Actuator & Switch Bar Assembly "
322	79	52A	**(P/N V3L-3-D9) Change:** Indent 3 to Indent 2
322	79	52A	**(P/N V3L-3-D9 Attaching Parts: AN515-4-9 Screw, AN936-A4 Washer) Change:** Indent 3 to Indent 2
322	79	52A	**(P/N 0409007-4) Description:** Tube Assy-Actuator Not Modified By SK150-41 Qty (1) Code **D**
322	79	-	**Add as Note.% at the End of Figure 79:** **Note.%** For aircraft not modified by SK150-41, order C301002-0301 & SK150-41.
327	79B	27	**(P/N S1244-20) In Description, Change WEU reference** **From:** S2095-1 **To:** 9860058-7
329	80	-	**Change Serialization Series at the End of Figure 80:** **From: B** - - - 182 Serial 18259390 thru 18261328 A182 Serial A182-0117 thru A182-0136 **To: B** - - - 182 Serial 18259390 thru 18261328 A182 Serial A182-0117 thru A182-0136
329	80	-	**Change Serialization Series at the End of Figure 80:** **From: C** - - - 182 Serial 18261277 thru 18262465 A182 Serial A182-0137 & on **To: C** - - - 182 Serial 18261329 thru 18262465 A182 Serial A182-0137 & on

Please update your parts catalog as shown above.

NOTES

PG	FIGURE	INDEX NO.	
347	86	28	**In Description, Change "Order" reference** **From:** 1250922-3 **To:** 1250922-2
347	86	41	**(P/N S1244-20) In Description, Change "Order" reference** **From:** 1250922-3 **To:** 1250922-2
348	86	-	**Change Serialization Series at the End of Figure 86:** **From:** **D - - -** 182 Serial 18256705 thru 18267628 A182 Serial A182-0001 thru A182-0056 **To:** **D - - -** 182 Serial 18256705 thru 18257628 A182 Serial A182-0001 thru A182-0056
351	87	23	**(P/N MS20822-6B) Change Description:** **From:** "Reducer Bushing" **To:** "Elbow"
365	89A	1	**(P/N C166001-0501) Description:** "Cylinder & Regulator Assembly-Oxygen 48 CU FT". Qty (1) Code **G.**
366	89A	-	**Add to 182 Serialization Series at the End of Figure 89A:** **M - - -**182 Serial 18255845 thru 18258036
375	90	51A	**(P/N 0770610PC1) Description:** "Cable Receptacle To Contactor". Qty (1) Code **H.**
381	91A	-	**Add to Note.* at the End of Figure 89A:** **From:** "Note.*These parts are required on 0711778-1 Cover Assembly only." **To:** "Note.*These parts are required on 0711778-1 and 0711778-5Cover Assemblies only."
385	92A	-	**Change Serialization Series at the End of Figure 92A:** **From: B - - -** 182 Serial 18258522 thru 18262465 A182 Serial A182-0097 and on **To:** **B - - -** 182 Serial 18258522 thru 18261426 A182 Serial A182-0097 and on
389	94	9A	**(P/N 1470089-16) Description:** "Ball Stud Assy".Qty (1)
390	95	15	**(P/N 1250213-1) In Description change WEU P/N:** **From:** "WEU 1250213-5" **To:** "WEU 1250213-15"

R 9 7 1 2 5 3
RECEIVED SEP 15 1997

Please update your parts catalog as shown above.

RECEIVED SEP 15 1997

Cessna

Cessna Aircraft Company
Wichita, Kansas

FINAL ISSUE

THIS PARTS CATALOG SUPERSEDES ALL PREVIOUS
182E,F&G AND 1962 THRU 1973 182 PARTS CATALOGS
DATED: 1 NOVEMBER 1961 THRU 1 NOVEMBER 1972

15 MARCH 1974

P515-12-RGI-150-3/97

INSERT LATEST CHANGED PAGES. DESTROY SUPERSEDED PAGES.

LIST OF EFFECTIVE PAGES

Dates of issue for original and changed pages are:

Original . . . 0 . . . 15 March 1974

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 700 CONSISTING OF THE FOLLOWING:

Page No.	Change No.	Page No.	Change No.	Page No.	Change No.
Title	0	37A thru 37D	0	131B	0
A	0	38 thru 39	0	132 thru 134	0
B	0	39A	0	134A thru 134C	0
C blank	0	39B blank	0	134D blank	0
i thru vi	0	44	0	135 thru 137	0
vii blank	0	45 blank	0	137A	0
viii thru x	0	46 thru 59	0	137B	0
xa thru xf	0	59A thru 59C	0	138 thru 143	0
xi thru xx	0	59D blank	0	143A	0
xxa thru xxc	0	60	0	143B blank	0
xxd blank	0	61	0	144 thru 149	0
xxi thru xxxvii	0	61A	0	150 thru 156	0
xxxviii	0	61B blank	0	157 blank	0
1 thru 5	0	62 thru 67	0	158 thru 161	0
5A	0	67A thru 67D	0	161A thru 161F	0
5B	0	68 thru 75	0	162 thru 169	0
6 thru 11	0	75A	0	169A thru 169F	0
11A thru 11H	0	75B	0	170 thru 174	0
12 thru 14	0	76 thru 81	0	175 blank	0
14A	0	81A	0	176 thru 182	0
14B	0	81B blank	0	183 blank	0
15 thru 17	0	82 thru 83	0	184	0
17A thru 17F	0	83A	0	185	0
18	0	83B	0	185A thru 185M	0
19	0	84	0	186 thru 191	0
19A thru 19F	0	85	0	191A thru 191C	0
20	0	86 blank	0	191D blank	0
21	0	87 thru 92	0	192	0
21A	0	93 blank	0	193	0
21B blank	0	94 thru 95	0	193A	0
21C	0	95A thru 95C	0	193B	0
21D	0	95D blank	0	194 thru 213	0
22 thru 24	0	96 thru 99	0	213A	0
25 blank	0	99A thru 99B	0	213B blank	0
25A	0	100 thru 122	0	214	0
25B	0	123 blank	0	215	0
26 thru 31	0	124 thru 127	0	215A thru 215E	0
31A	0	127A thru 127F	0	215F blank	0
31B blank	0	128 thru 131	0	215G thru 215N	0
32 thru 37	0	131A	0	215P blank	0

Upon receipt of the second and subsequent changes to this book, personnel responsible for maintaining this publication in current status should ascertain that all previous changes have been received and incorporated.

* The asterisk indicates pages changed, added, or deleted by the current change.

Cessna

PARTS CATALOG REVISIONS

REFERENCE CATALOG NUMBER: P515-12 DATE:

CATALOG TITLE: 182

TO:

FROM:

TO ELIMINATE SHIPMENTS OF INCORRECT PARTS, PLEASE CORRECT YOUR CATALOG IMMEDIATELY AS SHOWN BELOW.

CAT.	PAGE	FIG.	INDEX	CHANGE		REMARKS
				FROM	TO	
82	215N/ 215P	53J			CHANGE CODE A TO READ:	182 SERIAL 18260056 THRU 18260445 A182 SERIAL A182-0117 THRU A182-0136
	215R	53K			CHANGE CODE A TO READ:	182 SERIAL 18260056 THRU 18260445 A182 SERIAL A182-0117 THRU A182-0136
82	216C	53N	76	(REF) C669502-0201	ADD TO DESCRIPTION	USED WITH 0-470-R ENGINE ONLY & ADD: CODE F
				ADD NEW P/N	C669502-0202	INSTRUMENT CLUSTER-LIGHTED USED WITH 0-470-S ENGINE ONLY (1) CODE G
82	216C	53N	80	(REF) 442785	ADD TO DESCRIPTION	USED WITH 0-470-R ENGINE ONLY & ADD: CODE F
				ADD NEW P/N	G442786-63	GAGE-OIL TEMP SW USED WITH 0-470-S ENGINE ONLY (1) CODE G
82	216D/ 216E	53N			CHANGE CODE A TO READ:	182 SERIAL 18260826 THRU 18261425 A182 SERIAL A182-0137 & ON
					ADD NEW CODE F	182 SERIAL 18260826 THRU 18261425 A182 SERIAL A182-0137 THRU A182-0146
					ADD NEW CODE G	A182 SERIAL A182-0147 & ON

Cessna.

PARTS CATALOG REVISIONS

REFERENCE CATALOG NUMBER: P515-12 DATE:

CATALOG TITLE: 182

TO:

FROM:

TO ELIMINATE SHIPMENTS OF INCORRECT PARTS, PLEASE CORRECT YOUR CATALOG IMMEDIATELY AS SHOWN BELOW.

CAT.	PAGE	FIG.	INDEX	CHANGE		REMARKS
				FROM	TO	
182	251	63	1	(REF) 0-470-R%	ADD CODE: AC	
				(REF) 0-470-R*	ADD CODE: AC	
				ADD NEW P/N	0-470-S%	ENGINE SPEC 1 CM (1) CODE AD
				ADD NEW P/N	0-470-S*	ENGINE SPEC 2 CM (1) COD~
182	253	63	65	(REF) S1372-1	ADD TO DESCRIPTION	IN NO. 1 CYLINDER HEAD & ADD: CODE AC
				ADD NEW P/N	S1372-2	SENDING UNIT-CYLINDER HEAD TEMP IN NO. 3 CYLINDER HEAI ((1) & ADD: CODE AD
182	253A/ 253B	63			ADD NEW CODE AC	182 SERIAL 18253599 THRU 18262465 A182 SERIAL A182-0001 THRU A182-0146
					ADD NEW CODE AD	A182 SERIAL A182-0147 & ON

Cessna.

PARTS CATALOG REVISIONS

CS #75-27

REFERENCE CATALOG NUMBER: P515-12 DATE: 12-5-75

CATALOG TITLE: 182 and Skylane - 1962 thru 1973

TO: All Zones and Dealers

FROM: Customer Services Dept.

TO ELIMINATE SHIPMENTS OF INCORRECT PARTS, PLEASE CORRECT YOUR CATALOG IMMEDIATELY AS SHOWN BELOW.

r.	Page	Fig.	Index	CHANGE		REMARKS
				FROM	TO	
	56	17	34			Change usable on code V to N for 0713787-1 Bulkhead Sta. 17.00 LH

Cessna.

PARTS CATALOG REVISIONS

PCR #77-13
DATE: October 7, 1977

REFERENCE CATALOG NUMBER: P515-12

CATALOG TITLE: 182 and Skylane 1962 thru 1973

TO: ALL ZONES AND DEALERS

FROM: CUSTOMER SERVICE DEPARTMENT

TO ELIMINATE SHIPMENTS OF INCORRECT PARTS, PLEASE CORRECT YOUR CATALOG IMMEDIATELY AS SHOWN BELOW.

PAGE	FIG.	INDEX	CHANGE		REMARKS
			FROM	TO	
385	92A				Change usable on Code C to read: 182 SERIAL 18258522 THRU 18261426 A182 SERIAL A182-0097 AND ON

Cessna

PARTS CATALOG REVISIONS

PCR #78-9

REFERENCE CATALOG NUMBER: P515-12 DATE: April 17, 1978

CATALOG TITLE: 182

TO: ALL ZONES AND DEALERS

FROM: Customer Services Department

TO ELIMINATE SHIPMENTS OF INCORRECT PARTS, PLEASE CORRECT YOUR CATALOG IMMEDIATELY AS SHOWN BELOW.

CAT.	PAGE	FIG.	INDEX	CHANGE		REMARKS
				FROM	TO	
182	215N/ 215P	53J			CHANGE CODE A TO READ:	182 SERIAL 18260056 THRU 18260445 A182 SERIAL A182-0117 THRU A182-0136
	215R	53K			CHANGE CODE A TO READ:	182 SERIAL 18260056 THRU 18260445 A182 SERIAL A182-0117 THRU A182-0136
182	216C	53N	76	(REF) C669502-0201	ADD TO DESCRIPTION	USED WITH 0-470-R ENGINE ONLY & ADD: CODE F
				ADD NEW P/N	C669502-0202	INSTRUMENT CLUSTER-LIGHTED USED WITH 0-470-S ENGINE ONLY (1) CODE G
182	216C	53N	80	(REF) 442785	ADD TO DESCRIPTION	USED WITH 0-470-R ENGINE ONLY & ADD: CODE F
				ADD NEW P/N	G442786-63	GAGE-OIL TEMP SW USED WITH 0-470-S ENGINE ONLY (1) CODE G
182	216D/ 216E	53N			CHANGE CODE A TO READ:	182 SERIAL 18260826 THRU 18261425 A182 SERIAL A182-0137 & ON
					ADD NEW CODE F	182 SERIAL 18260826 THRU 18261425 A182 SERIAL A182-0137 THRU A182-0146
					ADD NEW CODE G	A182 SERIAL A182-0147 & ON

Cessna.

PARTS CATALOG REVISIONS

PCR #78-9

REFERENCE CATALOG NUMBER: P515-12

DATE: April 17, 1978

CATALOG TITLE: 182

TO: ALL ZONES AND DEALERS

FROM: Customer Services Department

TO ELIMINATE SHIPMENTS OF INCORRECT PARTS, PLEASE CORRECT YOUR CATALOG IMMEDIATELY AS SHOWN BELOW.

CAT.	PAGE	FIG.	INDEX	CHANGE		REMARKS
				FROM	TO	
182	251	63	1	(REF) 0-470-R%	ADD CODE:	AC
				(REF) 0-470-R*	ADD CODE:	AC
				ADD NEW P/N	0-470-S%	ENGINE SPEC 1 CM (1) CODE AD
				ADD NEW P/N	0-470-S*	ENGINE SPEC 2 CM (1) CODE
182	253	63	65	(REF) S1372-1	ADD TO DESCRIPTION	IN NO. 1 CYLINDER HEAD & ADD: CODE AC
				ADD NEW P/N	S1372-2	SENDING UNIT-CYLINDER HEAD TEMP IN NO. 3 CYLINDER HEAD ((1) & ADD: CODE AD
182	253A/ 253B	63			ADD NEW CODE AC	182 SERIAL 18253599 THRU 18262465 A182 SERIAL A182-0001 THRU A182-0146
					ADD NEW CODE AD	A182 SERIAL A182-0147 & ON

LIST OF EFFECTIVE PAGES

Dates of issue for original and changed pages are:

Original . . . 0 . . . 15 March 1974

Page No.	Change No.
215Q thru 215W	0
215X	0
215Y	0
215Z	0
216	0
216A thru 216D	0
216E blank	0
215F thru 216M	0
216N blank	0
216P thru 216R	0
217 thru 224	0
224A	0
224B blank	0
225 thru 227	0
227A	0
227B	0
228 thru 236	0
237 blank	0
237A	0
237B	0
238 thru 242	0
243 blank	0
244 thru 246	0
246A blank	0
246B thru 246D	0
246E blank	0
246F thru 246H	0
247 thru 253	0
253A	0
253B blank	0
254 thru 270	0
271 blank	0
272 thru 275	0
275A	0
275B blank	0
276 thru 284	0
285 blank	0
286 thru 291	0
291A	0
291B blank	0
292 thru 301	0
301A	0
301B blank	0
302	0
302A thru 302C	0
302D blank	0
303 thru 313	0
313A	0
313B blank	0
314 thru 316	0
317 Blank	0
318 thru 323	0
323A	0
323B blank	0
324 thru 327	0
327A thru 327C	0
327D blank	0
328 thru 332	0
333 blank	0
334 thru 361	0
361A thru 361C	0
361D blank	0
362 thru 371	0
371A thru 371C	0
371D blank	0
372 thru 375	0
375A	0
375B blank	0
376 thru 386	0
387 blank	0
388 thru 450	0
451	0
452 blank	0

Upon receipt of the second and subsequent changes to this book, personnel responsible for maintaining this publication in current status should ascertain that all previous changes have been received and incorporated.

* The asterisk indicates pages changed, added, or deleted by the current change.

INTRODUCTION.

This illustrated parts catalog has been prepared to aid you in easily and quickly identifying parts of the models covered herein.

This catalog features an index system consisting of:

1. An alphabetical index located in the front of the catalog.
2. A numerical index located in the back of the catalog, which lists all parts and figures in which they appear.

STANDARD PARTS.

Many parts having standard usage have been incorporated into the Cessna Standard System. Parts in this group are designated with the part number prefix "S".

For standard hardware items such as Tinnerman nuts, clamps, etc., "AN" and "NAS" numbers have been used.

USABLE ON CODES....Serial listings in this catalog are noted by a letter code located in the usable on code column which is the extreme right hand column of the parts list page. Usable on codes are applicable only to the figure on which they appear. The code letters and the serials to which they apply are listed at the end of the figure.

If no usable on code appears opposite a first column listing of the figure, the usage is applicable to all models and serials covered by this catalog. If no usable on code appears opposite any indented listing, the usage is applicable to all models and serials covered by the figure on which it appears.

Bold face type serials appearing on certain figures are for quick reference to large blocks of airplanes.

NON-INTERCHANGEABLE PARTS....When parts are not interchangeable with earlier models, all parts applicable to the particular usage are listed. The letter code for the individual part usage is listed in the usable on column opposite each part. Care should be exercised in determining proper serial when ordering to insure receipt of correct part.

INTERCHANGEABLE PARTS....When a later design part is completely interchangeable with the part it replaces, both parts will be serialized and the notation "when exhausted use ___", or the abbreviation, "WEU ___" will be entered following the listing of the earlier design part. This means that the earlier design part should be used on airplanes to which they apply until the supply of these parts is exhausted---after which time the later design part must be used. This is done to simplify stocking of parts by our distributors and dealers. The earlier part is as good, physically and functionally, as the later design part---the difference being the later design part can be used on more than one block of airplane serials.

SYMBOLS & PART NUMBER TERMS.

NP - The symbol "NP" appearing in the units per assembly column denotes that the item it appears opposite is not procurable.

AR - The symbol "AR" appearing in the units per assembly column denotes "As Required" and is used to indicate bulk quantity where an indefinite amount is used.

The following is a list of abbreviations that may appear in the description nomenclature:

ALT - Alternate part	INSTL - Installation
ASSY - Assembly	LH - Left hand
BKI - Bulk item	RH - Right hand
FSO - For spares order	WEU - When exhausted use

Other key letter symbols spaced apart from and following the part nomenclature are for cataloging and manufacturing purposes only and are not to be considered by the customer.

A blank entry in the part number column appears before an unprocurable part or installation which is also denoted in the "Units Per Assembly" column by the use of the symbol NP.

GROUP ASSEMBLY PARTS LIST ARRANGEMENT.

This section lists all replaceable items in the airplane and these items are detailed on illustrations throughout the section. The index numbers on the illustration are keyed to each accompanying parts list. The purpose of the index numbers is to provide complete and positive identification of the article, but should not be used for procurement purposes.

a. The figure and index number column of the parts list shows the figure number once at the beginning of the list. The figure number is followed by a dash and the indexed number. The remaining index numbers are preceded by dash only.

b. The part number column identifies the item by part number.

c. In the description column, relationship of items covered is shown by the degree of indention of each item, for example: The wing assembly (Figure 3) is listed in column (1) of the description column. The wing structure, is the next lower assembly and is therefore listed in column (2).

d. If two or more assemblies contain a majority of identical parts or the assemblies are left or right hand, the assemblies are listed together and the next lower assemblies or detail parts are listed as common for both assemblies, with the differing parts coded for usage on the correct major assembly.

e. Attaching parts are listed immediately beneath the item to be attached and preceding any detail parts of the item. They are listed in the same column as the item they attach and are preceded by the caption "Attaching Parts." The end of the attaching parts listing is followed by a separating symbol ---*---.

f. The quantity listed in the "Units Per Assembly" column for attaching parts denotes the quantity necessary to attach only one part. Total quantity necessary to attach more than one part is obtained by multiplying the attaching parts quantity by the number of parts attached.

g. Component parts of the complete airplane which are not included in any assembly, but which are used in conjunction with, or attach to certain assemblies, are listed either preceding the first detail or following the last detail of the assembly or installation, and in the same column as the major assembly or installation.

h. The quantities listed in the "Units Per Assembly" column are the quantity used per figure.

ACCESSORY KITS.

For accessory kit listings, refer to separate Accessory Kit Catalog.

BULK ITEMS.

Certain items such as flexible air hose, rubber mouldings and channels, windshield sealing strips etc., are noted in the catalog listings as bulk items. These listings also note the cut length of these materials for one installation. When an item is listed as a bulk item, it will be supplied to the dealer in the most convenient bulk length or quantity. Reference to the cut length or quantity per installation provides for the most satisfactory disbursement to the customer.

HOW TO ORDER.

USE YOUR CATALOG TO ORDER PARTS. Use parts and Accessories Order Form, which will be supplied by Cessna on request. Give complete information on addresses and make sure the part number and part name are as shown in the catalog. Be sure to specify quantities. Specify how the order is to be shipped, otherwise it will be sent out in the manner that seems best to the shipper.

SERIAL, COLOR, & CORROSION PROOFING.

Be sure to indicate model and serial number of the airplane. Serial number is very important to properly identify parts used on each airplane. When color is involved refer to "Upholstery & Interior Trim" section for example. If corrosion proofing is desired add the letters "CP" following the part number.

DISTRIBUTOR ORDERS.

Distributors will send all orders to the factory with instructions as to the shipping destination. The factory prefers not to make C.O.D. shipments for the distributor and all billing will be made to the distributor in the case of direct shipments.

DEALER ORDERS.

Dealers will place all of their parts order requirements with their distributor. The factory will not honor orders received directly from a dealer. It will be necessary for us to forward it to the distributor for his action. Therefore, dealer orders sent direct to the distributor will result in much faster delivery on any parts that are required.

RETAIL ORDERS.

Retail orders will not be honored by the factory. They are to be placed with the dealer or distributor in the owner's territory and when received directly by the factory will be forwarded to the distributor from whose territory it was received. Considerable saving in time will result to the owner if his orders are placed with his dealer or distributor.

Cessna

Cessna Aircraft Company reserves the right to cancel, add or change the parts and assemblies described in this catalog without notice.

Cessna

"All aircraft, regardless of manufacturer, are certificated under model number designations. However, popular names are often used for marketing purposes. To provide a consistent method of referring to the various aircraft, model numbers will be used in this publication unless names are required to differentiate between versions of the same basic model. The following table provides a cross reference listing of popular name vs. model numbers."


NAME	MODEL YEAR	MODEL	SERIALS	
			BEGINNING	ENDING
182 OR SKYLANE	1962	182E	18253589	18254423
	1963	182F	18254424	18255058
	1964	182G	18255059	18255844
	1965	182H	18255845	18256684
	1966	182J	18256685	18257625
	1967	182K	18257626	18258505
	1968	182L	18258506	18259305
	1969	182M	18259306	18260055
	1970	182N	18260056	18260445
	1971	182N	18260446	18260825
	1972	182P	18260826	18261425
	1973	182P	18261426	18262465
A182	1966	A182J	A182-0001	A182-0056
	1967	A182K	A182-0057	A182-0096
	1968	A182L	A182-0097	A182-0116
	1969	A182M	NONE	
	1970	A182N	A182-0117	A182-0136
	1971	A182N	NONE	
	1972	A182N	NONE	
AMC182	1973	A182N	A182-0137	

FINISH & TRIM PLATE

The "FINISH AND TRIM" plate is located on the left side of the airplane on the lower door jamb directly behind the M. A. A. name plate.

This plate indicates the model year, exterior paint color, upholstery scheme and interior trim colors.

The following diagram is an example showing the sequence and definition of each code symbol on the "FINISH AND TRIM" plate.

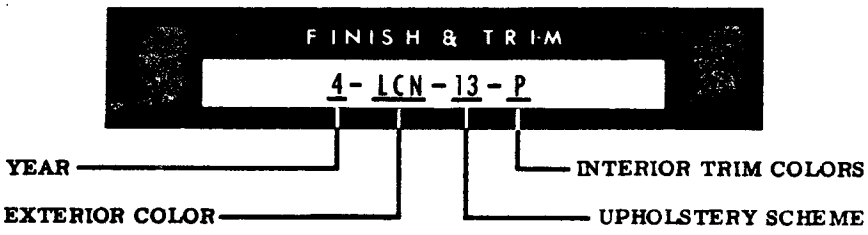

FINISH & TRIM NUMBER (4-LCN-13-P)
4 = 1964 Model
LCN = Sun Glow Red, Vestal White & Coffee Brown Met
13 = Cherry-O-Red
P = Black Semi-Gloss, Sand & Fawn

1962 THRU 1965

SEE PAGE VIII FOR 1966 & ON

CODE CHART
PAINT & UPHOLSTERY COMBINATIONS
Model 182 & 182 SKYLANE

YEAR		EXTERIOR PAINT		UPHOLSTERY		INTERIOR TRIM		Serial Listing
	CODE	CODE	COLOR	CODE	COLOR	CODE	COLOR	
1962	2	A	MUTED BEIGE CES 1054-439 or -399*	2	GALWAY GREEN	Q	BLACK (SEMI-GLOSS) CES 1054-156	18253599 THRU 18254423
		B	VESTAL WHITE CES 1054-398 or -170*					
		C	JONQUIL YELLOW CES 1054-402 or -416*					
		D	MINT GREEN CES 1054-238 or -412*					
		E	TURQUOISE TINGE CES 1054-406 or -393*				NATURAL CES 1054-259	
		F	VALOR RED CES 1054-409 or -417*					
		G	CHEVRON RED CES 1054-401					
		H	GINGER CES 1054-403	3	AUTUMN GLINT			
		J	REGAL GREEN MET. CES 1054-404					
		K	TAHOE BLUE MET. CES 1054-407					
		L	HERMOSA TURQUOISE CES 1054-408				TAN CES 1054-419	
		M	DEEP MAHOGANY CES 1054-413	4	FOAM TAN			
		N	EXECUTIVE GRAY MET. CES 1054-411					
		SP	SPECIAL COLORS	1	SPECIAL UPHOLSTERY	SP	SPECIAL COLORS	

NOTE: WHEN ORDERING PAINT SPECIFY CES 1054 DASH NUMBER. EXAMPLE: CES 1054-439

*On all over painted airplanes, base color will be vinyl. All other colors will be lacquer.

CODE CHART
PAINT & UPHOLSTERY COMBINATIONS
Model 182 & 182 SKYLANE

YEAR	EXTERIOR PAINT		UPHOLSTERY		INTERIOR TRIM		Serial Listing
CODE	CODE	COLOR	CODE	COLOR	CODE	COLOR	
1963	3	A — ADOBE BEIGE CES-1054-446 or -458*	2	SWEET MINT	Q	BLACK SEMI-GLOSS CES-1054-156	18254424 THRU 18255058
		B — VESTAL WHITE CES-1054-398 or -170*					
		C — GOLDENROD CES-1054-448					
		D — MINT GREEN CES-1054-238 or -412*					
		E — PLATINUM BLUE CES-1054-443 or -392*	3	BANNER RED		SAND CES-1054-435	
		F — VALOR RED CES-1054-409 or -417*					
		G — MATADOR RED CES-1054-465					
		H — CORK BROWN CES-1054-463	4	ARUBA BLUE			
		J — IVY GREEN METALLIC CES-1054-405 or -391*					
		K — TAHOE BLUE METALLIC CES-1054-407					
		L — HERMOSA TURQUOISE CES-1054-408 or -395*				FAWN CES-1054-419	
		N — EXEC. GREY METALLIC CES-1054-411	5	BLONDE TAUPE			
		R — COCOA BROWN CES-1054-459					
		U — EMERGREEN METALLIC CES-1054-350					
	SP	SPECIAL COLORS	1	SPECIAL UPHOLSTERY	SP	SPECIAL COLORS	

NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE: CES-1054-439

*On all over painted airplanes, base color will be vinyl. All other colors will be lacquer.

CODE CHART

PAINT & UPHOLSTERY COMBINATIONS

Model 182 & Skylane

YEAR	EXTERIOR PAINT		UPHOLSTERY		INTERIOR TRIM		Serial Listing
	CODE	CODE	COLOR	CODE	COLOR	CODE	COLOR	
1964	4	A	EMERALD GREEN MET CES-1054-350	11	CHOCOLATE TAN	P	BLACK SEMI-GLOSS CES-1054-156	18255059 THRU 18255844
		B	GOLDENROD CES-1054-448					
		C	VESTAL WHITE CES-1054-398 or -170*					
		D	MINT GREEN CES-1054-238 or -412*					
		E	CORK BROWN CES-1054-463	12	SHADOW BLUE		SAND CES-1054-435	
		F	JONQUIL YELLOW CES-1054-402 or -416*					
		G	MUTED BEIGE CES-1054-439 or -399*					
		H	REGAL GREEN MET CES-1054-404					
		J	ITALIAN GOLD CES-1054-265					
		K	VELVET BLACK CES-1054-151	13	CHERRY-O-RED			
		L	SUN GLOW RED CES-1054-493					
		M	TUXEDO BLUE CES-1054-495					
		N	COFFEE BROWN MET CES-1054-497					
		R	WINE METALLIC CES-1054-505	14	GALA GREEN		FAWN CES-1054-419	
		T	HAWAIIAN RED CES-1054-509					
		W	TWILIGHT BLUE CES-1054-511					
		X	SKY BLUE CES-1054-513 or -512*					
		Z	ARISTO BLUE MET CES-1054-487					
		SP	SPECIAL COLORS	1	SPECIAL UPHOLSTERY	SP	SPECIAL COLORS	

NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE CES-1054-350

*DENOTES VINYL PAINT
VINYL IS USED AS BASE COLOR ON OVER-ALL PAINTED AIRPLANES
ALL OTHER COLORS ARE LACQUER.

CODE CHART

PAINT & UPHOLSTERY COMBINATIONS

Model 182 & Skylane

YEAR		EXTERIOR PAINT		UPHOLSTERY		INTERIOR TRIM		Serial Listing
	CODE	CODE	COLOR	CODE	COLOR	CODE	COLOR	
1965	5	A	EMERALD GREEN CES-1054-350	10	FLAME RED	U	LIGHT GRAY CES-1054-586	18255845 THRU 18256684
		B	GOLDENROD CES-1054-448					
		C	VESTAL WHITE CES-1054-398 or -170*					
		D	ICE BLUE CES-1054-564 or -546*	11	ANTIQUE GOLD	W	CHESTNUT CES-1054-587	
		E	AVANTI RED CES-1054-556					
		F	YUMA YELLOW CES-1054-542					
		G	DESERT BEIGE CES-1054-545	12	PEACOCK BLUE	X	KHAKI CES-1054-588	
		H	PLATINUM CES-1054-550 or 565*					
		J	SUNSHINE YELLOW CES-1054-561 or 547*	13	SHADOW TAN			
		K	VELVET BLACK CES-1054-151					
		L	SUN GLOW RED CES-1054-493			Z	DARK TURQUOISE CES-1054-589	
		M	VENICA BLUE MF CES-1054-572	22	SABLE TAN			
		N	AUTUMN RUSSET MET CES-1054-571					
		R	ARISTO BLUE MET CES-1054-487	23	TAWNY MIST	P	BLACK SEMI GLOSS CES-1054-156 CLOUD GRAY CES-1054-531	
		S	TWILIGHT BLUE CES-1054-511					
		T	HAWAIIAN RED CES-1054-509					
		SP	SPECIAL COLORS	1	SPECIAL UPHOLSTERY	SP	SPECIAL COLORS	

NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE CES-1054-350

* DENOTES VINYL PAINT.
VINYL IS USED AS BASE COLOR ON OVER-ALL PAINTED AIRPLANES.
ALL OTHER COLORS ARE LACQUER.

FINISH & TRIM PLATE


The "FINISH AND TRIM" plate is located on the left side of the airplane on the lower door jamb directly below the M.A.A. nameplate.

This plate indicates model year, interior color scheme and the exterior color combination.

Interpretation of information stamped on the Finish and Trim Plate is obtained by use of the Color Code Chart for the respective year.

Color Code Charts for yearly models appear on pages immediately following this page.

The Finish and Trim Plate is explained below. Explanatory remarks are keyed to the illustrated example.

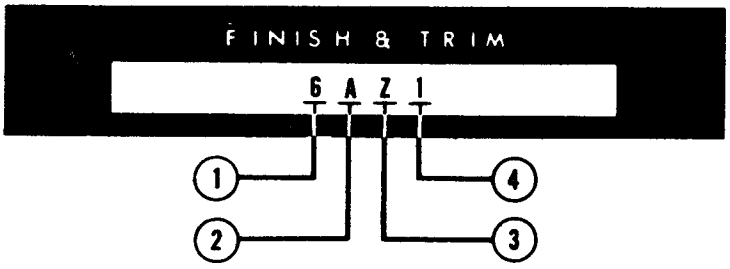

(1) First column number indicates year.

(2) Second column letter or letters indicate interior color code of aircraft. Refer to Color Code Chart for respective year to obtain color.

(3) Third column letter indicates optional carpet color.

(4) Fourth column number or numbers indicate exterior trim. The basic number is found on the Color Code Chart and indicates colors and type paint used on the aircraft.

Basic exterior trim number preceded by no. 2 denotes an optional overall paint scheme. Base paint is vinyl.

Basic exterior trim number preceded by no. 3 denotes paint scheme reversal for artic usage. All paint on these airplanes is acrylic.

Interpretation of the example Finish and Trim Code 6-A-Z-1 that is obtained from 1966 Color Code Chart is:

6 = 1966 model year
A = Coral Interior Scheme
Z = Black carpet (optional)
1 = Vestal white & goldenrod exterior.

1966 & ON

SEE PAGE III FOR 1962 THRU 1965

MODEL 182 PAINT CODE CHART MODEL 182

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR CODE	INTERIOR COLOR	INTERIOR PAINT (INTERIOR COLOR CODE) A	B	C	D	SERIAL LISTING
1 9 6 6	6	A	CORAL	BLACK (SEMI-GLOSS) CES-1054-156	BLACK (SEMI-GLOSS) CES-1054-156	BLACK (SEMI-GLOSS) CES-1054-156	BLACK (SEMI-GLOSS) CES-1054-156	18256685 THRU 18257625 A182-0001 THRU A182-0056
		B	GOLD	DULL BLACK (LACQUER) CES-1054-193	DULL BLACK (LACQUER) CES-1054-193	DULL BLACK (LACQUER) CES-1054-193	DULL BLACK (LACQUER) CES-1054-193	
				DULL BLACK (EPOXY) CES-1054-482	DULL BLACK (EPOXY) CES-1054-482	DULL BLACK (EPOXY) CES-1054-482	DULL BLACK (EPOXY) CES-1054-482	
		C	BLUE	LIGHT GRAY (LACQUER) CES-1054-531	LIGHT GRAY (LACQUER) CES-1054-531	LIGHT GRAY (LACQUER) CES-1054-531	LIGHT GRAY (LACQUER) CES-1054-531	
		D	BRONZE	CORAL (LACQUER) CES-1054-661	GOLD (LACQUER) CES-1054-663	BLUE (LACQUER) CES-1054-662	BRONZE (LACQUER) CES-1054-719	
				CORAL (VINYL) CES-1054-746	GOLD (VINYL) CES-1054-748	BLUE (VINYL) CES-1054-747	BRONZE (VINYL) CES-1054-751	
		Z	OPTIONAL CARPET (BLACK)					

CODE	EXTERIOR PAINT COLOR COMBINATIONS		
1	VESTAL WHITE CES-1054-398 or -170	GOLDENROD CES-1054-448	
2	VESTAL WHITE CES-1054-398 or -170	SAN REMO TURQUOISE CES-1054-705	
3	VESTAL WHITE CES-1054-398 or -170	RACING GREEN CES-1054-692	
4	VESTAL WHITE CES-1054-398 or -170	VALOR RED CES-1054-409	
5	VESTAL WHITE CES-1054-398 or -170	VELVET BLACK CES-1054-151	
6	VESTAL WHITE CES-1054-398 or -170	MIDNIGHT TURQUOISE METALLIC CES-1054-697	
7	VESTAL WHITE CES-1054-398 or -170	HAWAIIAN RED CES-1054-509	
8	VESTAL WHITE CES-1054-398 or -170	AUTUMN RUSSET METALLIC CES-1054-571	
40	VESTAL WHITE CES-1054-398 or -170	VELVET BLACK CES-1054-151	SAN REMO TURQUOISE CES-1054-705
41	VESTAL WHITE CES-1054-398 or -170	VELVET BLACK CES-1054-151	PINEHURST GREEN CES-1054-757
42	VESTAL WHITE CES-1054-398 or -170	BERKSHIRE BROWN CES-1054-608	GOLDENROD CES-1054-448
43	VESTAL WHITE CES-1054-398 or -170	BERKSHIRE BROWN CES-1054-608	VALOR RED CES-1054-409
44	VESTAL WHITE CES-1054-398 or -170	ASPEN YELLOW CES-1054-606	VELVET BLACK CES-1054-151
45	VESTAL WHITE CES-1054-398 or -170	GOLDENROD CES-1054-448	BERKSHIRE BROWN CES-1054-608
46	VESTAL WHITE CES-1054-398 or -170	SAN REMO TURQUOISE CES-1054-705	VELVET BLACK CES-1054-151
47	VESTAL WHITE CES-1054-398 or -170	MIDNIGHT TURQUOISE METALLIC CES-1054-697	VALOR RED CES-1054-409
48	VESTAL WHITE CES-1054-398 or -170	MIDNIGHT TURQUOISE METALLIC CES-1054-697	ASPEN YELLOW CES-1054-606
49	VESTAL WHITE CES-1054-398 or -170	VALOR RED CES-1054-409	VELVET BLACK CES-1054-151
50	VESTAL WHITE CES-1054-398 or -170	HAWAIIAN RED CES-1054-509	VELVET BLACK CES-1054-151
51	VESTAL WHITE CES-1054-398 or -170	PINEHURST GREEN CES-1054-757	RACING GREEN CES-1054-692
52	VESTAL WHITE CES-1054-398 or -170	VELVET BLACK CES-1054-151	VALOR RED CES-1054-409
53	VESTAL WHITE CES-1054-398 or -170	SIERRA BEIGE CES-1054-680	VELVET BLACK CES-1054-151
54	VESTAL WHITE CES-1054-398 or -170	AUTUMN RUSSET METALLIC CES-1054-571	VELVET BLACK CES-1054-151
55	VESTAL WHITE CES-1054-398 or -170	CHESTNUT METALLIC CES-1054-556	SIERRA BEIGE CES-1054-680
56	VESTAL WHITE CES-1054-398 or -170	EMERALD GREEN METALLIC CES-1054-350	VELVET BLACK CES-1054-151

NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE: CES-1054-439

*On all over painted airplanes, base color will be vinyl. All other colors will be lacquer.

MODEL 182 PAINT CODE CHART

MODEL 182

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR CODE	INTERIOR COLOR	INTERIOR PAINT AF	AV	BF	BV	SERIAL LISTING
1976	7	AF	Bronze Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	18257626 THRU 18258505
		AV	Bronze Vinyl	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	
		BF	Blue Fabric	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	
		BV	Blue Vinyl	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	
				BRONZE (LACQUER) CES1054-719 (VINYL) CES1054-751	BRONZE (LACQUER) CES1054-719 (VINYL) CES1054-751	BLUE (LACQUER) CES1054-798 (VINYL) CES1054-799	BLUE (LACQUER) CES1054-798 (VINYL) CES1054-799	A182-0057 THRU A182-0096
				CF	CV	DF	DV	
		CF	Avocado Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	
		CV	Avocado Vinyl	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	
		DF	Red Fabric	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	
		DV	Red Vinyl	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	
				AVOCADO (LACQUER) CES1054-796 (VINYL) CES1054-797	AVOCADO (LACQUER) CES1054-796 (VINYL) CES1054-797	RED (LACQUER) CES1054-718 (VINYL) CES1054-750	RED (LACQUER) CES1054-718 (VINYL) CES1054-750	

MODEL 182

EXTERIOR PAINT

CODE	COLOR COMBINATIONS		
1	VESTAL WHITE CES 1054-398 LACQUER	GOLDENROD CES 1054-448 LACQUER	
201	CES 1054-170 VINYL	CES 1054 448 LACQUER	
301	CES 1054-802 ACRYLIC	CES 1054 803 ACRYLIC	
2	VESTAL WHITE CES 1054 398 LACQUER	ALOE RED CES 1054-609 LACQUER	
202	CES 1054-170 VINYL	CES 1054-609 LACQUER	
302	CES 1054-802 ACRYLIC	CES 1054-806 ACRYLIC	
3	VESTAL WHITE CES 1054-398 LACQUER	IMPERIAL BURGUNDY METALLIC CES 1054-847 LACQUER	
203	CES 1054-170 VINYL	CES 1054-847 LACQUER	
303	CES 1054-802 ACRYLIC	CES 1054-767 ACRYLIC	
4	VESTAL WHITE CES 1054 398 LACQUER	VELVET BLACK CES 1054-151 LACQUER	
204	CES 1054-170 VINYL	CES 1054-151 LACQUER	
304	CES 1054-802 ACRYLIC	CES 1054-807 ACRYLIC	
5	VESTAL WHITE CES 1054-398 LACQUER	BELFAST BROWN CES 1054-848 LACQUER	
205	CES 1054-170 VINYL	CES 1054-848 LACQUER	
305	CES 1054-802 ACRYLIC	CES 1054-773 ACRYLIC	
6	VESTAL WHITE CES 1054 398 LACQUER	EMPRESS BLUE CES 1054-604 LACQUER	
206	CES 1054-170 VINYL	CES 1054-604 LACQUER	
306	CES 1054-802 ACRYLIC	CES 1054-832 ACRYLIC	
7	VESTAL WHITE CES 1054-398 LACQUER	VENICE BLUE METALLIC CES 1054 573 LACQUER	
207	CES 1054-170 VINYL	CES 1054-573 LACQUER	
307	CES 1054-802 ACRYLIC	CES 1054-833 ACRYLIC	
8	VESTAL WHITE CES 1054 398 LACQUER	RACING GREEN CES 1054-692 LACQUER	
208	CES 1054-170 VINYL	CES 1054-692 LACQUER	
308	CES 1054-802 ACRYLIC	CES 1054-803 ACRYLIC	
70	VESTAL WHITE CES 1054-170 VINYL	TROPICAL ORANGE CES 1054-609 LACQUER	ITALIAN GOLD CES 1054-285 LACQUER
370	CES 1054-802 ACRYLIC	CES 1054-776 ACRYLIC	CES 1054-834 ACRYLIC
71	VESTAL WHITE CES 1054-170 VINYL	TROPICAL ORANGE CES 1054-609 LACQUER	VALOR RED CES 1054-609 LACQUER
371	CES 1054-802 ACRYLIC	CES 1054-776 ACRYLIC	CES 1054-806 ACRYLIC
72	VESTAL WHITE CES 1054-170 VINYL	TROPICAL ORANGE CES 1054-609 LACQUER	AUTUMN RUSSET METALLIC CES 1054-571 LACQUER
372	CES 1054-802 ACRYLIC	CES 1054-776 ACRYLIC	CES 1054-835 ACRYLIC
73	VESTAL WHITE CES 1054-170 VINYL	EMPRESS BLUE CES 1054-604 LACQUER	ARISTO BLUE METALLIC CES 1054-687 LACQUER
373	CES 1054-802 ACRYLIC	CES 1054-832 ACRYLIC	CES 1054-837 ACRYLIC
74	VESTAL WHITE CES 1054-170 VINYL	EMPRESS BLUE CES 1054-604 LACQUER	VENICE BLUE METALLIC CES 1054-573 LACQUER
374	CES 1054-802 ACRYLIC	CES 1054-832 ACRYLIC	CES 1054-833 ACRYLIC
75	VESTAL WHITE CES 1054-170 VINYL	EMPRESS BLUE CES 1054-604 LACQUER	VELVET BLACK CES 1054-151 LACQUER
375	CES 1054-802 ACRYLIC	CES 1054-832 ACRYLIC	CES 1054-807 ACRYLIC
76	VESTAL WHITE CES 1054-170 VINYL	VENICE BLUE METALLIC CES 1054-573 LACQUER	VELVET BLACK CES 1054-151 LACQUER
376	CES 1054-802 ACRYLIC	CES 1054-833 ACRYLIC	CES 1054-807 ACRYLIC
77	VESTAL WHITE CES 1054-170 VINYL	VALOR RED CES 1054-609 LACQUER	IMPERIAL BURGUNDY METALLIC CES 1054-847 LACQUER
377	CES 1054-802 ACRYLIC	CES 1054-806 ACRYLIC	CES 1054-767 ACRYLIC
78	VESTAL WHITE CES 1054-170 VINYL	VALOR RED CES 1054-609 LACQUER	VELVET BLACK CES 1054-151 LACQUER
378	CES 1054-802 ACRYLIC	CES 1054-806 ACRYLIC	CES 1054-807 ACRYLIC
79	VESTAL WHITE CES 1054-170 VINYL	IMPERIAL BURGUNDY METALLIC CES 1054-847 LACQUER	VELVET BLACK CES 1054-151 LACQUER
379	CES 1054-802 ACRYLIC	CES 1054-767 ACRYLIC	CES 1054-807 ACRYLIC
80	VESTAL WHITE CES 1054-170 VINYL	GOLDENROD CES 1054 448 LACQUER	ITALIAN GOLD CES 1054-285 LACQUER
380	CES 1054-802 ACRYLIC	CES 1054-803 ACRYLIC	CES 1054-834 ACRYLIC
81	VESTAL WHITE CES 1054-170 VINYL	GOLDENROD CES 1054-448 LACQUER	BELFAST BROWN CES 1054-848 LACQUER
381	CES 1054-802 ACRYLIC	CES 1054-803 ACRYLIC	CES 1054-773 ACRYLIC
82	VESTAL WHITE CES 1054-170 VINYL	BARCELONA BRONZE METALLIC CES 1054-851 LACQUER	AUTUMN RUSSET METALLIC CES 1054-571 LACQUER
382	CES 1054-802 ACRYLIC	CES 1054-770 ACRYLIC	CES 1054-835 ACRYLIC
83	VESTAL WHITE CES 1054-170 VINYL	BARCELONA BRONZE METALLIC CES 1054-851 LACQUER	IMPERIAL BURGUNDY METALLIC CES 1054-847 LACQUER
383	*CES 1054-802 ACRYLIC	CES 1054-770 ACRYLIC	CES 1054-767 ACRYLIC
84	VESTAL WHITE CES 1054-170 VINYL	AUTUMN RUSSET METALLIC CES 1054-571 LACQUER	VELVET BLACK CES 1054-151 LACQUER
384	CES 1054-802 ACRYLIC	CES 1054-835 ACRYLIC	CES 1054-807 ACRYLIC
85	VESTAL WHITE CES 1054-170 VINYL	PINEHURST GREEN CES 1054 757 LACQUER	GLENWOOD GREEN METALLIC CES 1054 850 LACQUER
385	CES 1054-802 ACRYLIC	CES 1054-836 ACRYLIC	CES 1054 768 ACRYLIC
86	VESTAL WHITE CES 1054-170 VINYL	RACING GREEN CES 1054-692 ACQUER	VELVET BLACK CES 1054-151 LACQUER
386	CES 1054-802 ACRYLIC	CES 1054-805 ACRYLIC	CES 1054 807 ACRYLIC

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 DASH NUMBER EXAMPLE: CES1054-156

NOTE: BEGINNING WITH SERIAL 18257941 & ON, ACRYLIC PAINT WAS USED ON THE EXTERIOR PAINT CODE NUMBERS 1 THRU 86 AND 201 THRU 208. TO ORDER PAINT FOR THESE AIRPLANES USE THE EQUIVALENT 300 SERIES EXTERIOR PAINT CODE NUMBER FOR THE DESIRED COLOR AS CALLED OUT ON THIS PAINT CHART.

PAINT CODE CHART

MODEL 182 — MODEL 182

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR	INTERIOR PAINT (INTERIOR COLOR CODE) BF	BV	CF	CV
1968	8	BF Blue Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156
			DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193
		BV Blue Vinyl	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482
		CF Avocado Fabric	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531
		CV Avocado Vinyl	BLUE (LACQUER) CES1054-798 (VINYL) CES1054-799	BLUE (LACQUER) CES1054-798 (VINYL) CES1054-799	AVOCADO (LACQUER) CES1054-796 (VINYL) CES1054-797	AVOCADO (LACQUER) CES1054-796 (VINYL) CES1054-797
		DF Red Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156
			DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193
		DV Red Vinyl	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482	DULL BLACK (EPOXY) CES1054-482
		GF Tan Fabric	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531
		GV Tan Vinyl	RED (LACQUER) CES1054-718 (VINYL) CES1054-750	RED (LACQUER) CES1054-718 (VINYL) CES1054-750	TAN (LACQUER) CES1054-717 (VINYL) CES1054-749	TAN (LACQUER) CES1054-717 (VINYL) CES1054-749

SERIAL LISTING
18258506 THRU 18259305
A182-0097 THRU A182-0116

EXTERIOR PAINT CODE	COLOR COMBINATIONS		
10 210 310	VESTAL WHITE CES1054-802	TROPICAL ORANGE CES1054-774	
11 211 311	VESTAL WHITE CES1054-802	VALOR RED CES1054-806	
12 212 312	VESTAL WHITE CES1054-802	CRANBERRY RED CES1054-875	
13 213 313	VESTAL WHITE CES1054-802	EMPRESS BLUE CES1054-832	
14 214 314	VESTAL WHITE CES1054-802	VENICE BLUE MET. CES1054-833	
15 215 315	VESTAL WHITE CES1054-802	VELVET BLACK CES1054-807	
16 216 316	VESTAL WHITE CES1054-802	RACING GREEN CES1054-805	
17 217 317	VESTAL WHITE CES1054-802	GOLDENROD CES1054-803	
30 330	VESTAL WHITE CES1054-802	ITALIAN GOLD CES1054-834	ASCOT YELLOW CES1054-870
31 331	VESTAL WHITE CES1054-802	BELFAST BROWN CES1054-773	ASCOT YELLOW CES1054-870
32 332	VESTAL WHITE CES1054-802	TROPICAL ORANGE CES1054-774	ASCOT YELLOW CES1054-870
33 333	VESTAL WHITE CES1054-802	BELFAST BROWN CES1054-773	TROPICAL ORANGE CES1054-774
34 334	VESTAL WHITE CES1054-802	CRANBERRY RED CES1054-875	VALOR RED CES1054-806
35 335	VESTAL WHITE CES1054-802	VELVET BLACK CES1054-807	CRANBERRY RED CES1054-875
36 336	VESTAL WHITE CES1054-802	VELVET BLACK CES1054-807	VALOR RED CES1054-806
37 337	VESTAL WHITE CES1054-802	IMP. BURGUNDY MET. CES1054-767	CRANBERRY RED CES1054-875
38 338	VESTAL WHITE CES1054-802	VENICE BLUE MET. CES1054-833	EMPRESS BLUE CES1054-832
39 339	VESTAL WHITE CES1054-802	VELVET BLACK CES1054-807	EMPRESS BLUE CES1054-832
40 340	VESTAL WHITE CES1054-802	GLENWOOD GREEN MET. CES1054-768	PINEHURST GREEN CES1054-836
41 341	VESTAL WHITE CES1054-802	RACING GREEN CES1054-805	PINEHURST GREEN CES1054-836
42 342	VESTAL WHITE CES1054-802	VELVET BLACK CES1054-807	CHESNUT MET. CES1054-845
43 343	VESTAL WHITE CES1054-802	BELFAST BROWN CES1054-773	ITALIAN GOLD CES1054-834
44 344	VESTAL WHITE CES1054-802	BELFAST BROWN CES1054-773	CHESNUT MET CES1054-845

NOTE: ALL EXTERIOR COLORS SHOWN ARE ACRYLIC

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 DASH NUMBER. EXAMPLE: CES1054-156

MODEL 182

PAINT CODE CHART

MODEL 182

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR CODE	COLOR	INTERIOR PAINT — INTERIOR COLOR CODE BF	BV	DF	DV	SERIAL LISTING
1969	9	BF	Blue Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	18259306 THRU 18260055
		BV	Blue Vinyl	DULL BLACK (LACQUER) CES1054-193 DULL BLACK (EPOXY) CES1054-482	DULL BLACK (LACQUER) CES1054-193 DULL BLACK (EPOXY) CES1054-482	DULL BLACK (LACQUER) CES1054-193 DULL BLACK (EPOXY) CES1054-482	DULL BLACK (LACQUER) CES1054-193 DULL BLACK (EPOXY) CES1054-482	
		DF	Red Fabric	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	
		DV	Red Vinyl	BLUE (LACQUER) CES1054-906 (VINYL) CES1054-907	BLUE (LACQUER) CES1054-906 (VINYL) CES1054-907	RED (LACQUER) CES1054-904 (VINYL) CES1054-905	RED (LACQUER) CES1054-904 (VINYL) CES1054-905	
				GF	GV	HF	HV	
		GF	Tan Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	
		GV	Tan Vinyl	DULL BLACK (LACQUER) CES1054-193 DULL BLACK (EPOXY) CES1054-482	DULL BLACK (LACQUER) CES1054-193 DULL BLACK (EPOXY) CES1054-482	DULL BLACK (LACQUER) CES1054-193 DULL BLACK (EPOXY) CES1054-482	DULL BLACK (LACQUER) CES1054-193 DULL BLACK (EPOXY) CES1054-482	
		HF	Gold Fabric	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	LIGHT GRAY (LACQUER) CES1054-531	
		HV	Gold Vinyl	TAN (LACQUER) CES1054-717 (VINYL) CES1054-749	TAN (LACQUER) CES1054-717 (VINYL) CES1054-749	GOLD (LACQUER) CES1054-908 (VINYL) CES1054-909	GOLD (LACQUER) CES1054-908 (VINYL) CES1054-909	

MODEL 182

EXTERIOR PAINT

CODE	COLOR COMBINATIONS		
900 2900 3900	VESTAL WHITE CES1054-802	VALOR RED CES1054-808	IMP. BURGUNDY MET. CES1054-707
910 2910 3910	VESTAL WHITE CES1054-802	GLACIER BLUE MET. CES1054-815	CATALINA BLUE MET. CES1054-814
911 2911 3911	VESTAL WHITE CES1054-802	BAROQUE GOLD MET. CES1054-813	GOLDENROD CES1054-803
912 2912 3912	VESTAL WHITE CES1054-802	GOLDENROD CES1054-803	BELFAST BROWN CES1054-773
913 2913 3913	VESTAL WHITE CES1054-802	EMERALD GREEN MET. CES1054-846	VELVET BLACK CES1054-807
914 2914 3914	VESTAL WHITE CES1054-802	KINGSTON GREEN CES1054-819	VELVET BLACK CES1054-807
904 3904	VESTAL WHITE CES1054-802	VALOR RED CES1054-808	IMP. BURGUNDY MET. CES1054-707
905 3905	TANGIER BEIGE CES1054-916	VALOR RED CES1054-808	IMP. BURGUNDY MET. CES1054-707
908 3908	VESTAL WHITE CES1054-802	GLACIER BLUE MET. CES1054-815	CATALINA BLUE MET. CES1054-814
907 3907	POLARIS BLUE CES1054-817	GLACIER BLUE MET. CES1054-815	CATALINA BLUE MET. CES1054-814
908 3908	VESTAL WHITE CES1054-802	BAROQUE GOLD MET. CES1054-813	GOLDENROD CES1054-803
909 3909	SUN YELLOW CES1054-918	BAROQUE GOLD MET. CES1054-813	GOLDENROD CES1054-803
970 3970	VESTAL WHITE CES1054-802	GOLDENROD CES1054-803	BELFAST BROWN CES1054-773
971 3971	SUN YELLOW CES1054-924	GOLDENROD CES1054-803	BELFAST BROWN CES1054-773
972 3972	VESTAL WHITE CES1054-802	EMERALD GREEN MET. CES1054-846	VELVET BLACK CES1054-807
973 3973	VESTAL WHITE CES1054-802	KINGSTON GREEN MET. CES1054-819	VELVET BLACK CES1054-807

NOTE: ALL EXTERIOR COLORS SHOWN ARE ACRYLIC

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 DASH NUMBER. EXAMPLE: CES1054-156

PAINT CODE CHART

MODEL 182 — MODEL 182

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR	INTERIOR PAINT (INTERIOR COLOR CODE) AF	AV	BF	BV
1970	O	AF Clove Brown Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156
		AV Clove Brown Vinyl	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193
		BF Silver Teal Fabric	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531
		BV Silver Teal Vinyl	BROWN (LACQUER) CES1054-970	BROWN (LACQUER) CES1054-970	BLUE (LACQUER) CES1054-972	BLUE (LACQUER) CES1054-972
			MF	MV	CF	CV
		MF Marigold Fabric	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156	BLACK SEMI-GLOSS (LACQUER) CES1054-156
		MV Marigold Vinyl	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193	DULL BLACK (LACQUER) CES1054-193
		CF Light Olive Fabric	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531	CLOUD GRAY (LACQUER) CES1054-531
		CV Light Olive Vinyl	MARIGOLD (LACQUER) CES1054-973	MARIGOLD (LACQUER) CES1054-973	OLIVE (LACQUER) CES1054-971	OLIVE (LACQUER) CES1054-971

SERIAL LISTING	EXTERIOR PAINT CODE	COLOR COMBINATIONS		
18260056 THRU 18260445	701 2701 *4701	VESTAL WHITE CES1054-802 (ACRYLIC)	PROVINCIAL RED MET CES1054-963 (ACRYLIC)	
	702 2702 *4702	VESTAL WHITE CES1054-802 (ACRYLIC)	BLACK CHERRY MET CES1054-964 (ACRYLIC)	
	703 2703 *4703	VESTAL WHITE CES1054-802 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)	
	704 2704 *4704	VESTAL WHITE CES1054-802 (ACRYLIC)	ITALIAN GOLD CES1054-834 (ACRYLIC)	
	705 2705 *4705	VESTAL WHITE CES1054-802 (ACRYLIC)	OLIVE CES1054-944 (ACRYLIC)	
	706 2706 *4706	VESTAL WHITE CES1054-802 (ACRYLIC)	GLENWOOD GREEN MET CES1054-768 (ACRYLIC)	
	707 2707 *4707	VESTAL WHITE CES1054-802 (ACRYLIC)	BLUE WING MET CES1054-968 (ACRYLIC)	
	708 2708 *4708	VESTAL WHITE CES1054-802 (ACRYLIC)	VENICE BLUE MET CES1054-833 (ACRYLIC)	
	709 2709 *4709	VESTAL WHITE CES1054-802 (ACRYLIC)	VELVET BLACK CES1054-807 (ACRYLIC)	
	710 2710 *4710	VESTAL WHITE CES1054-802 (ACRYLIC)	TIGER YELLOW CES1054-966 (ACRYLIC)	
	740 *4740	VESTAL WHITE CES1054-802 (ACRYLIC)	PROVINCIAL RED MET CES1054-963 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)
	741 *4741	VESTAL WHITE CES1054-802 (ACRYLIC)	PROVINCIAL RED MET CES1054-963 (ACRYLIC)	BLACK CHERRY MET CES1054-964 (ACRYLIC)
A182-0117 THRU A182-0136	742 *4742	VESTAL WHITE CES1054-802 (ACRYLIC)	BLACK CHERRY MET CES1054-964 (ACRYLIC)	SILVER MIST MET CES1054-969 (ACRYLIC)
	744 *4744	VESTAL WHITE CES1054-802 (ACRYLIC)	ITALIAN GOLD CES1054-834 (ACRYLIC)	BUTTERSCOTCH CES1054-990 (ACRYLIC)
	749 *4749	VESTAL WHITE CES1054-802 (ACRYLIC)	GLENWOOD GREEN MET CES1054-768 (ACRYLIC)	BLUE WING MET CES1054-968 (ACRYLIC)
	751 *4751	VESTAL WHITE CES1054-802 (ACRYLIC)	GOLDFIN MET CES1054-965 (ACRYLIC)	ITALIAN GOLD CES1054-834 (ACRYLIC)
	753 *4753	VESTAL WHITE CES1054-802 (ACRYLIC)	OLIVE CES1054-944 (ACRYLIC)	GOLDFIN MET CES1054-965 (ACRYLIC)
	772 *4772	VESTAL WHITE CES1054-802 (ACRYLIC)	BLUE WING MET CES1054-968 (ACRYLIC)	VENICE BLUE MET CES1054-833 (ACRYLIC)
	774 *4774	VESTAL WHITE CES1054-802 (ACRYLIC)	VENICE BLUE MET CES1054-833 (ACRYLIC)	SILVER MIST MET CES1054-969 (ACRYLIC)
	778 *4778	VESTAL WHITE CES1054-802 (ACRYLIC)	GOLDFIN MET CES1054-965 (ACRYLIC)	VALOR RED CES1054-806 (ACRYLIC)

NOTE *. 4000 SERIES NUMBERS. USE CES1054-967 LUSTER WHITE IN PLACE OF CES1054-802 VESTAL WHITE.

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 DASH NUMBER. EXAMPLE: CES1054-156

MODEL 182 PAINT CODE CHART

MODEL 182

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR	INTERIOR PAINT — AF & AV	BF & BV	CF & CV	DF & DV
1971	1 AF	CLOVE BROWN FABRIC	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)
	BF	HOLIDAY BLUE FABRIC	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)
	CF	PICNIC GREEN FABRIC	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)
	DF	FIESTA RED FABRIC	CLOVE BROWN CES1054-970 (LACQUER)	HOLIDAY BLUE CES1054-A25 (LACQUER)	PICNIC GREEN CES1054-A31 (LACQUER)	FIESTA RED CES1054-A28 (LACQUER)
	EL	CLOUD GRAY LEATHER	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)
	FL	EBONY LEATHER				
	DL	FIESTA RED LEATHER				
	HL	PALOMINO TAN LEATHER				
	AV	CLOVE BROWN VINYL				
	BV	HOLIDAY BLUE VINYL				
	CV	PICNIC GREEN VINYL				
	DV	FIESTA RED VINYL				
	B	OPTIONAL BLACK CARPET				

INTERIOR PAINT (INTERIOR COLOR CODE)

HL	EL	FL	DL
BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)
CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)
DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)
CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)
			CLOUD GRAY CES1054-533 (VINYL)

SERIAL LISTING

18260446 THRU 18260825

MODEL 182

EXTERIOR PAINT

CODE	COLOR COMBINATIONS		
101 V101 *L101	VESTAL WHITE CES1054-802	VALOR RED CES1054-806	
102 V102 *L102	VESTAL WHITE CES1054-802	DUBONNET CES1054-A18	
103 V103 *L103	VESTAL WHITE CES1054-802	GOLDEN ROD CES1054-803	
104 V104 *L104	VESTAL WHITE CES1054-802	COLONIAL BLUE MET. CES1054-A21	
105 V105 *L105	VESTAL WHITE CES1054-802	OLIVE CES1054-944	
106 V106 *L106	VESTAL WHITE CES1054-802	VELVET BLACK CES1054-807	
171V *171L	VESTAL WHITE CES1054-802	BUTTERSCOTCH CES1054-990	ITALIAN GOLD CES1054-834
172V *172L	VESTAL WHITE CES1054-802	BLUE WING MET. CES1054-968	VENICE BLUE MET. CES1054-833
173V *173L	VESTAL WHITE CES1054-802	VALOR RED CES1054-806	VELVET BLACK CES1054-807
174V *174L	VESTAL WHITE CES1054-802	FLEET BLUE CES1054-A20	COLONIAL BLUE MET. CES1054-A21
175V *175L	VESTAL WHITE CES1054-802	DUBONNET CES1054-A18	GOLD FIN MET. CES1054-965
176V *176L	VESTAL WHITE CES1054-802	SILVER MIST MET. CES1054-969	OLIVE CES1054-944
177V *177L	VESTAL WHITE CES1054-802	GOLDEN ROD CES1054-803	SEAL BROWN MET. CES1054-A17
178V *178L	VESTAL WHITE CES1054-802	CAVALIER GREEN MET. CES1054-A22	SEAL BROWN MET. CES1054-A17

NOTE: * USE CES1054-967 LUSTER WHITE IN PLACE OF CES1054-802 VESTAL WHITE.

NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE: CES1054-802

MODEL 182 PAINT CODE CHART MODEL 182

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR CODE	COLOR	INTERIOR PAINT AF & AV	INTERIOR PAINT BF & BV	INTERIOR PAINT CF & CV	INTERIOR PAINT DF & DV	SERIAL LISTING
1972	2	AF	JAVA GOLD FABRIC	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	18260826 THRU 18261425
		BF	BOGOTA BLUE FABRIC	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)	
		CF	CYPRUS GREEN FABRIC	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)	
		DF	TAHITIAN RED FABRIC	CLOVE BROWN CES1054-970 (LACQUER)	BOGOTA BLUE CES1054-A41 (LACQUER)	CYPRUS GREEN CES1054-A45 (LACQUER)	TAHITIAN RED CES1054-A49 (LACQUER)	
		EL	CLOUD GRAY LEATHER	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)	
		FL	EBONY LEATHER					
		DL	TAHITIAN RED LEATHER					
		HL	PALOMINO TAN LEATHER	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	A182-0137 & ON
		AV *	JAVA GOLD VINYL	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)	
		BV *	BOGOTA BLUE •CORDOBA BLUE VINYL	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)	
		CV	CYPRUS GREEN VINYL	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)	
		DV *	TAHITIAN RED VINYL					
		B	OPTIONAL BLACK CARPET				CLOUD GRAY CES1054-533 (VINYL)	

CODE	COLOR COMBINATIONS		
201 A201V	VESTAL WHITE CES1054-802 (Acrylic)	VALOR RED CES1054-806 (Acrylic)	
202 A202V	VESTAL WHITE CES1054-802 (Acrylic)	PROVINCIAL RED MET CES1054-963 (Acrylic)	
203 A203V	VESTAL WHITE CES1054-802 (Acrylic)	EMPRESS BLUE CES1054-832 (Acrylic)	
204 A204V	VESTAL WHITE CES1054-802 (Acrylic)	CONTRALTO BLUE CES1054-A63 (Acrylic)	
205 A205V	VESTAL WHITE CES1054-802 (Acrylic)	TIGER YELLOW CES1054-966 (Acrylic)	
206 A206V	VESTAL WHITE CES1054-802 (Acrylic)	OLIVE CES1054-944 (Acrylic)	
214V	VESTAL WHITE CES1054-802 (Acrylic)	EMPRESS BLUE CES1054-832 (Acrylic)	VELVET BLACK CES1054-807 (Acrylic)
215V	VESTAL WHITE CES1054-802 (Acrylic)	EMPRESS BLUE CES1054-832 (Acrylic)	CONTRALTO BLUE CES1054-A63 (Acrylic)
216V	VESTAL WHITE CES1054-802 (Acrylic)	VALOR RED CES1054-806 (Acrylic)	VELVET BLACK CES1054-807 (Acrylic)
218V	VESTAL WHITE CES1054-802 (Acrylic)	CARNIVAL YELLOW CES1054-A15 (Acrylic)	GOLDENROD CES1054-803 (Acrylic)
221V	VESTAL WHITE CES1054-802 (Acrylic)	GOLDFIN METALLIC CES1054-965 (Acrylic)	OLIVE CES1054-944 (Acrylic)
234V	VESTAL WHITE CES1054-802 (Acrylic)	LIME CES1054-A62 (Acrylic)	OLIVE CES1054-944 (Acrylic)
235V	VESTAL WHITE CES1054-802 (Acrylic)	CARNIVAL YELLOW CES1054-A15 (Acrylic)	VELVET BLACK CES1054-807 (Acrylic)
236V	VESTAL WHITE CES1054-802 (Acrylic)	TROPICAL ORANGE CES1054-774 (Acrylic)	PROVINCIAL RED MET. CES1054-963 (Acrylic)

* A182

NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE: CES1054- 902

MODEL 182 PAINT CODE CHART MODEL 182

YEAR	INTERIOR COLOR CODE	INTERIOR COLOR CODE	INTERIOR COLOR	INTERIOR PAINT — INTERIOR COLOR CODE: AF & AV	BF & BV	CF & CV	DF & DV
1973	3	AF	JAVA GOLD FABRIC	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)
		BF	PEACOCK BLUE FABRIC	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)
		CF	GOLDEN OLIVE FABRIC	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)
		DF	POPPY RED FABRIC	CLOVE BROWN CES1054-A80 (LACQUER)	PEACOCK BLUE CES1054-A81 (LACQUER)	GOLDEN OLIVE CES1054-A89 (LACQUER)	POPPY RED CES1054-A85 (LACQUER)
		EL	CLOUD GRAY LEATHER	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)
		FL	EBONY LEATHER				
		HL	PALOMINO TAN LEATHER				
		AV	JAVA GOLD VINYL				
		BV	PEACOCK BLUE VINYL				
		CV	GOLDEN OLIVE VINYL				
		DV	POPPY RED VINYL				
		B	OPTIONAL BLACK CARPET				

INTERIOR PAINT — INTERIOR COLOR CODE

HL	EL	FL
BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)	BLACK SEMI-GLOSS CES1054-156 (LACQUER)
CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)	CLOUD GRAY CES1054-531 (LACQUER)
DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)	DULL BLACK CES1054-193 (LACQUER)
CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)	CLOUD GRAY CES1054-533 (VINYL)

SERIAL LISTING

18261426 THRU 18262465

EXTERIOR PAINT

CODE	COLOR COMBINATIONS		
301 301A	VESTAL WHITE CES1054-802 (Acrylic)	CRANBERRY CES1054-875 (Acrylic)	
302 302A	VESTAL WHITE CES1054-802 (Acrylic)	FLAG RED CES1054-A93 (Acrylic)	
303 303A	VESTAL WHITE CES1054-802 (Acrylic)	TROPICAL ORANGE CES1054-774 (Acrylic)	
304 304A	VESTAL WHITE CES1054-802 (Acrylic)	CONTRALTO BLUE CES1054-A63 (Acrylic)	
305 305A	VESTAL WHITE CES1054-802 (Acrylic)	EMPRESS BLUE CES1054-832 (Acrylic)	
306 306A	VESTAL WHITE CES1054-802 (Acrylic)	GRANADA GREEN CES1054-A97 (Acrylic)	
325	VESTAL WHITE CES1054-802 (Acrylic)	SHOAL TURQUOISE CES1054-804 (Acrylic)	VERMILLION CES1054-A94 (Acrylic)
329	VESTAL WHITE CES1054-802 (Acrylic)	CONTRALTO BLUE CES1054-A63 (Acrylic)	SERENA BLUE CES1054-A96 (Acrylic)
330	VESTAL WHITE CES1054-802 (Acrylic)	CRANBERRY CES1054-875 (Acrylic)	FLAG RED CES1054-A93 (Acrylic)
333	VESTAL WHITE CES1054-802 (Acrylic)	FLAG RED CES1054-A93 (Acrylic)	VELVET BLACK CES1054-807 (Acrylic)
334	VESTAL WHITE CES1054-802 (Acrylic)	GRANADA GREEN CES1054-A97 (Acrylic)	VERMILLION CES1054-A94 (Acrylic)
336	VESTAL WHITE CES1054-802 (Acrylic)	EMPRESS BLUE CES1054-832 (Acrylic)	VELVET BLACK CES1054-807 (Acrylic)
339	VESTAL WHITE CES1054-802 (Acrylic)	GRANADA GREEN CES1054-A97 (Acrylic)	CARNIVAL YELLOW CES1054-A15 (Acrylic)
340	VESTAL WHITE CES1054-802 (Acrylic)	NUTMEG CES1054-A85 (Acrylic)	TROPICAL ORANGE CES1054-774 (Acrylic)

NOTE: WHEN ORDERING PAINT SPECIFY CES-1054 DASH NUMBER. EXAMPLE: CES1054-802

UPHOLSTERY & INTERIOR TRIM



UPHOLSTERED PARTS - HOW TO ORDER

1962 thru 1965 MODELS


SERIAL NUMBER OF AIRCRAFT MUST BE GIVEN WITH PARTS ORDER

1966 MODEL & ON

PARTS MARKED WITH A # FOLLOWING PART NUMBER REQUIRE A SECOND DASH NUMBER FOR COLOR & MATERIAL ALSO BE SURE TO SPECIFY SERIAL NUMBER OF AIRCRAFT


HOW TO DETERMINE 2nd DASH NUMBER


1. Find part number of desired part in catalog.
2. Refer to "FINISH & TRIM" plate, in the airplane, for your "Year Code" and "Interior Color Code."

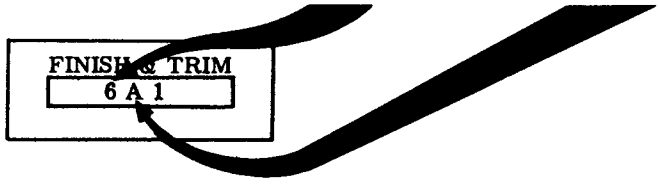

3. Add the "Year Code" and "Interior Color Code," to the part number from catalog.

EXAMPLE OF COMPLETE NUMBER

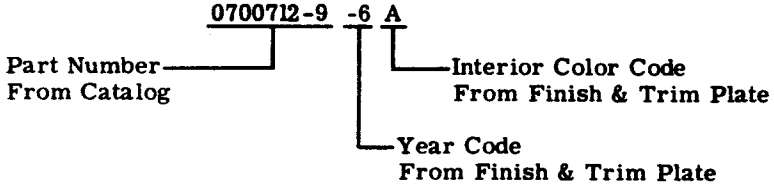

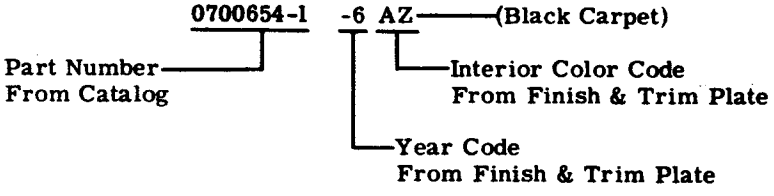

INTERIOR PAINTED OR PLASTIC PARTS HOW TO ORDER

1962 thru 1964 MODELS

No special handling is required when ordering parts for 1962 thru 1964 aircraft. In this group, the second dash number appears, when required, as a part of the part number.

1965 MODEL

PARTS MARKED WITH A ¤ FOLLOWING PART NUMBER REQUIRE A SECOND DASH NUMBER FOR PROPER COLOR

To obtain second dash number use table "1965 MODEL YEAR."

To use table, "1965 MODEL YEAR," first find number from catalog then find same number in table and add number of color required.

EXAMPLE OF COMPLETE NUMBER

0713791-2 -580

Part Number From Catalog

2nd Dash Number From Table (Dark Turquoise)


1966 MODEL & ON

PARTS MARKED WITH A ¤ FOLLOWING PART NUMBER REQUIRE A SECOND DASH NUMBER FOR PROPER COLOR.

To obtain second dash number use of correct table, for your model year, is required.

To use table,

1. Find part number of desired part in catalog.
2. Refer to the "Finish and Trim" plate, in the airplane, for your "Interior Color Code."

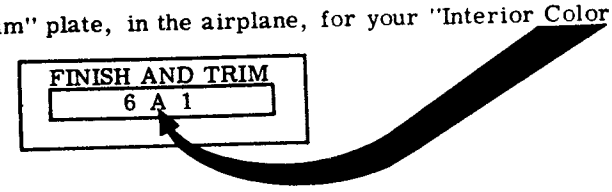

3. Locate part number from catalog in table.
4. Add dash number for color that appears under your "Interior Color Code."

INTERIOR PAINTED OR PLASTIC PARTS
1966 MODEL YEAR
18258705 & ON

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate) A	B	C	D
0700631-5	FRAME ASSEMBLY - SEAT BOTTOM LH	746	748	747	751
0700631-6	FRAME ASSEMBLY - SEAT BOTTOM RH	746	748	747	751
0700646-1	SEAT SKIRT	722	727	725	726
0700646-2	SEAT SKIRT	722	727	725	726
0700702-5	PANEL - BAGGAGE DOOR	722	727	725	726
0700702-8	PANEL - BAGGAGE COMPARTMENT	722	727	725	726
[illegible]	PANEL - BAGGAGE DOORPOST	722	727	725	726
0700702-10	PANEL - AFT WALL	722	727	725	726
[illegible]	PANEL - CANTED	722	727	725	726
0700702-12	MOULDING - AFT WINDOW	722	727	725	726
0700702-15	FRAME - AFT SIDE WINDOW	722	727	725	726
0700702-16	FRAME - AFT SIDE WINDOW	722	727	725	726

STEP "3" — STEP "4"

EXAMPLES OF COMPLETE NUMBER

0700702-10 -722

Part Number From Catalog

2nd Dash Number From Table (Interior Color Code A)

INTERIOR PAINTED OR PLASTIC PARTS
1965 MODEL YEAR ONLY

18255845 THRU 18256684

PART NUMBER	PART NAME	CLOUD GRAY	BLACK	BLACK—GRAINED	LIGHT GRAY	CHESTNUT	KHAKI	TURQUOISE
0700702-5	PANEL - BAGGAGE DOOR	532						
0700702-6	PANEL - BAGGAGE COMPARTMENT	532						
0700702-9	COVER - BAGGAGE DOORPOST	532						
0700702-10	PANEL - AFT WALL	532						
0700702-11	PANEL - CANTED	532						
0700702-12	AFT WINDOW MOULDING	532						
0700702-13	SHIELD - DOORPOST LH	532						
0700702-14	SHIELD - DOORPOST RH	532						
0700702-15	COVER - SIDE WINDOW FRAME LH	532						
0700702-16	COVER - SIDE WINDOW FRAME RH	532						
0711663-2	PANEL ASSEMBLY-AUXILIARY SEAT	532						
0713777-3	DOOR ASSEMBLY - GLOVE BOX				577	578	579	580
0713791-3	COVER - BROW			710				
0713791-2	COVER - STATIONARY PANEL - LOWER				577	578	579	580
0713792-1	COVER - SHOCK PANEL		279					
0713792-2	COVER - ENGINE INSTRUMENTS		279					
0713792-7	COVER - SHOCK PANEL - NAV-O-MATIC 300		279					
0713792-21	COVER - SHOCK PANEL - NAV-O-MATIC 400		279					
0713793-1	COVER - RADIO		279					
0713794-1	COVER - STATIONARY PANEL UPPER				577	578	579	580
0713811-1	COVER - CONSOLE				577	578	579	580
0713811-2	COVER - CONSOLE				577	578	579	580
0715017-1	RETAINER - UPHOLSTERY	532						
0770725-2	SHIELD - FRONT DOORPOST	532						
0770725-9	SHIELD - FRONT DOORPOST	532						
1200686-17	PANEL ASSEMBLY - POST LIGHTED INSTRUMENT		279					
1200686-18	PANEL ASSEMBLY - POST LIGHTED INSTRUMENT		279					
1200686-19	PANEL ASSEMBLY - POST LIGHTED INSTRUMENT		279					
1200686-20	PANEL ASSEMBLY - POST LIGHTED INSTRUMENT		279					
1200686-21	PANEL ASSEMBLY - POST LIGHTED INSTRUMENT		279					
1200686-23	PANEL ASSEMBLY - POST LIGHTED INSTRUMENT				577	578	579	580
1414110-1	TRIM ASSEMBLY - SEAT BACK	532						
1414110-3	POCKET - MAGAZINE	532						
1414263-5	SEAT SKIRT - LH	532						
1414263-6	SEAT SKIRT - RH	532						
1414263-7	SEAT SKIRT - LH	532						
1414263-8	SEAT SKIRT - RH	532						
1414264-5	POCKET ASSEMBLY - MAGAZINE	532						
1414264-13	TRIM ASSEMBLY - SEAT BACK	532						
1470089 -14	MAPLIGHT ASSEMBY	532						

INTERIOR PAINTED OR PLASTIC PARTS

1966 MODEL YEAR

18256685 THRU 18257625 — A182-0001 THRU A182-0056

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate) A	B	C	D
0700631-5	FRAME ASSEMBLY - SEAT BOTTOM LH	746	748	747	751
0700631-6	FRAME ASSEMBLY - SEAT BOTTOM RH	746	748	747	751
0700646-1	SEAT SKIRT	722	727	725	726
0700646-2	SEAT SKIRT	722	727	725	726
0700702-5	PANEL - BAGGAGE DOOR	722	727	725	726
0700702-6	PANEL - BAGGAGE COMPARTMENT	722	727	725	726
0700702-9	PANEL - BAGGAGE DOORPOST	722	727	725	726
0700702-10	PANEL - AFT WALL	722	727	725	726
0700702-11	PANEL - CANTED	722	727	725	726
0700702-12	MOULDING - AFT WINDOW	722	727	725	726
0700702-15	FRAME - AFT SIDE WINDOW	722	727	725	726
0700702-16	FRAME - AFT SIDE WINDOW	722	727	725	726
0700702-17	DOORPOST SHIELD - LH	722	727	725	726
0700702-18	DOORPOST SHIELD - RH	722	727	725	726
0711663-2	PANEL ASSEMBLY - AUXILIARY SEAT	722	727	725	726
0713777-3	GLOVE BOX DOOR	710	710	710	710
0713791-3	COVER - PANEL BROW	722	727	725	726
0713791-2	COVER - STATIONARY PANEL LOWER	279	279	279	279
0713792-1	COVER - INSTRUMENT SHOCK PANEL	279	279	279	279
0713792-2	COVER - ENGINE INSTRUMENTS	279	279	279	279
0713792-7	SHOCK PANEL COVER - NAV-O-MATIC 300	279	279	279	279
0713792-21	SHOCK PANEL COVER - NAV-O-MATIC 400	279	279	279	279
0713793-1	CENTER COVER INSTRUMENT PANEL	722	727	725	726
0713794-1	COVER - STATIONARY PANEL UPPER	722	727	725	726
0713811-2	COVER - CONSOLE	722	727	725	726
0770725-9	DOORPOST SHIELD	532	532	532	532
1200536-1	COVER - OXYGEN CONTROL	279	279	279	279
1200686-17	COVER - POST LIGHTED SHOCK PANEL	279	279	279	279
1200686-18	COVER - POST LIGHTED SHOCK PANEL	279	279	279	279
1200686-19	COVER - POST LIGHTED SHOCK PANEL	279	279	279	279
1200686-20	COVER - POST LIGHTED SHOCK PANEL	279	279	279	279
1200686-21	COVER - POST LIGHTED INSTRUMENT	722	727	725	726
1200686-23	COVER - POST LIGHTED INSTRUMENT	532	532	532	532
1213243-3	COVER ASSEMBLY - PANEL LIGHT	722	727	725	726
1213653-4	TRIM - INSTRUMENT	722	727	725	726
1414110-1	TRIM ASSEMBLY - SEAT BACK	722	727	725	726
1414110-3	POCKET ASSEMBLY - MAGAZINE	722	727	725	726
1414215-19	TRIM ASSEMBLY - SEAT BACK	722	727	725	726
1414215-20	TRIM ASSEMBLY - SEAT BACK	746	748	747	751
1414240-3	BOTTOM ASSEMBLY - POWER SEAT	746	748	747	751
1414240-4	BOTTOM ASSEMBLY - POWER SEAT	722	727	725	726
1414263-5	SEAT SKIRT - LH	722	727	725	726
1414263-6	SEAT SKIRT - RH	722	727	725	726
1414263-7	SEAT SKIRT - LH	722	727	725	726
1414263-8	SEAT SKIRT - RH	722	727	725	726
1414264-5	POCKET ASSEMBLY - MAGAZINE	722	727	725	726
1414264-13	TRIM ASSEMBLY - SEAT BACK	279	279	279	279
1470089-14	MAPLIGHT ASSEMBLY				

INTERIOR PAINTED OR PLASTIC PARTS

1967 MODEL YEAR

18257626 THRU 18258505 — A182–0057 THRU A182–0096

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)							
		AF	AV	BF	BV	CF	CV	DF	DV
0700148-1	MAPLIGHT HOOD	193	193	193	193	193	193	193	193
0700631-5	FRAME ASSEMBLY - SEAT BOTTOM LH	751	751	747	747	797	797	750	750
0700631-6	FRAME ASSEMBLY - SEAT BOTTOM RH	751	751	747	747	797	797	750	750
0700646-1	SEAT SKIRT	726	726	794	794	793	793	720	720
0700646-2	SEAT SKIRT	726	726	794	794	793	793	720	720
0700694-12	COWL DECK COVER	825	825	825	825	825	825	825	825
0700702-5	PANEL - BAGGAGE DOOR	726	726	794	794	793	793	720	720
0700702-6	PANEL - BAGGAGE COMPARTMENT	726	726	794	794	793	793	720	720
0700709-9	PANEL - BAGGAGE DOORPOST	726	726	794	794	793	793	720	720
0700702-10	PANEL - AFT WALL	726	726	794	794	793	793	720	720
0700702-11	PANEL - CANTED	726	726	794	794	793	793	720	720
0700702-12	MOULDING - AFT WINDOW	726	726	794	794	793	793	720	720
0700702-15	FRAME - AFT SIDE WINDOW	726	726	794	794	793	793	720	720
0700702-16	FRAME - AFT SIDE WINDOW	726	726	794	794	793	793	720	720
0700702-18	SHIELD - DOORPOST RH	726	726	794	794	793	793	720	720
0711663-2	PANEL ASSEMBLY - AUXILIARY SEAT	726	726	794	794	793	793	720	720
0713252-2	COVER - SWITCH MOUNTING BRACKET	279	279	279	279	279	279	279	279
0713793-1	CENTER COVER - INSTRUMENT PANEL	279	279	279	279	279	279	279	279
0713811-2	COVER - CONSOLE	726	726	794	794	793	793	720	720
0713863-2	TRIM PANEL - RH	726	726	794	794	793	793	720	720
0713863-4	BROW ASSEMBLY - INSTRUMENT PANEL	825	825	825	825	825	825	825	825
0713863-6	TRIM PANEL - LH	726	726	794	794	793	793	720	720
0713865-1	COVER - SHOCK PANEL	279	279	279	279	279	279	279	279
0713865-6	COVER - SHOCK PANEL - NAV-O-MATIC 300	279	279	279	279	279	279	279	279
0713865-18	COVER - SHOCK PANEL - NAV-O-MATIC 400	279	279	279	279	279	279	279	279
0713866-1	COVER - ENGINE INSTRUMENTS	279	279	279	279	279	279	279	279
0715017-1	RETAINER-UPHOLSTERY	532	532	532	532	532	532	532	532
0770725-9	SHIELD - DOORPOST LH	726	726	794	794	793	793	720	720
0770725-12	SHIELD - DOORPOST RH	726	726	794	794	793	793	720	720
1200536-1	COVER - OXYGEN CONTROL	532	532	532	532	532	532	532	532
1200727-17	COVER ASSEMBLY - POST LIGHTED PANEL	279	279	279	279	279	279	279	279
1200727-21	COVER ASSEMBLY - POST LIGHTED SHOCK	279	279	279	279	279	279	279	279
1200727-22	COVER ASSEMBLY - POST LIGHTED SHOCK	279	279	279	279	279	279	279	279
1200727-26	COVER ASSEMBLY - POST LIGHTED SHOCK	279	279	279	279	279	279	279	279
1200756-3	COVER ASSEMBLY - POST LIGHTED CONSOLE	726	726	794	794	793	793	720	720
1213146-1	DOOR ASSEMBLY-MAP COMPARTMENT	726	726	794	794	793	793	720	720
1213243-3	COVER ASSEMBLY - PANEL LIGHT	532	532	532	532	532	532	532	532
1414110-1	TRIM - SEAT BACK	726	726	794	794	793	793	720	720
1414110-3	POCKET ASSEMBLY - MAGAZINE	726	726	794	794	793	793	720	720
1414215-19	TRIM ASSEMBLY - SEAT BACK	726	726	794	794	793	793	720	720
1414215-20	TRIM ASSEMBLY - SEAT BACK	726	726	794	794	793	793	720	720
1414263-7	SEAT SKIRT	726	726	794	794	793	793	720	720
1414263-8	SEAT SKIRT	726	726	794	794	793	793	720	720
1470089-14	MAP LIGHT ASSEMBLY	279	279	279	279	279	279	279	279

INTERIOR PAINTED OR PLASTIC PARTS

1968 MODEL YEAR

18258506 THRU 18259305 — A182-0097 THRU A182-0116

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)							
		GF	GV	BF	BV	CF	CV	DF	DV
0700148-1	MAPLIGHT HOOD	193	193	193	193	193	193	193	193
0700631-5	FRAME ASSEMBLY - SEAT BOTTOM LH	751	751	747	747	797	797	750	750
0700631-6	FRAME ASSEMBLY - SEAT BOTTOM RH	751	751	747	747	797	797	750	750
0700646-1	SEAT SKIRT	721	721	794	794	793	793	720	720
0700646-2	SEAT SKIRT	721	721	794	794	793	793	720	720
0700694-12	COWL DECK COVER	825	825	825	825	825	825	825	825
0700702-5	PANEL - BAGGAGE DOOR	721	721	794	794	793	793	720	720
0700702-6	PANEL - BAGGAGE COMPARTMENT	721	721	794	794	793	793	720	720
0700702-9	PANEL - BAGGAGE DOORPOST	721	721	794	794	793	793	720	720
0700702-10	PANEL - AFT WALL	721	721	794	794	793	793	720	720
0700702-11	PANEL - CANTED	721	721	794	794	793	793	720	720
0700702-12	MOULDING - AFT WINDOW	721	721	794	794	793	793	720	720
0700702-15	FRAME - AFT SIDE WINDOW	721	721	794	794	793	793	720	720
0700702-16	FRAME - AFT SIDE WINDOW	721	721	794	794	793	793	720	720
0711663-2	PANEL ASSEMBLY - AUXILIARY SEAT	721	721	794	794	793	793	720	720
0713269-1	TRIM PANEL - LH	721	721	794	794	793	793	720	720
0713269-2	TRIM PANEL - RH	721	721	794	794	793	793	720	720
0713278-3	COVER - INSTRUMENT PANEL LH	279	279	279	279	279	279	279	279
0713282-1	COVER ASSEMBLY - POST LIGHT LH	279	279	279	279	279	279	279	279
0713811-3	COVER ASSEMBLY - CONSOLE	721	721	794	794	793	793	720	720
0713866-6	COVER - STATIONARY PANEL RH.	279	279	279	279	279	279	279	279
0713866-9	COVER ASSEMBLY - POST LIGHT RH	279	279	279	279	279	279	279	279
0713881-1	DOOR ASSEMBLY - MAP COMPARTMENT	721	721	794	794	793	793	720	720
0713007-1	SHIELD - DOOR POST LH	721	721	794	794	793	793	720	720
0715004-1	TRIM ASSEMBLY - SEAT BACK	721	721	794	794	793	793	720	720
0715004-2	TRIM ASSEMBLY - SEAT BACK	721	721	794	794	793	793	720	720
0715007-3	SHIELD - DOOR POST RH	721	721	794	794	793	793	720	720
0715007-4	SHIELD - DOOR POST RH	721	721	794	794	793	793	720	720
0715008-3	MOULDING - DOOR WINDOW LH.	721	721	794	794	793	793	720	720
0715008-4	MOULDING - DOOR WINDOW RH.	721	721	794	794	793	793	720	720
0715017-1	RETAINER - UPHOLSTERY	532	532	532	532	532	532	532	532
1200415-7	ESCUTCHEON - OXYGEN	532	532	532	532	532	532	532	532
1200536-1	COVER - OXYGEN CONTROL	532	532	532	532	532	532	532	532
1200756-7	PEDESTAL COVER ASSEMBLY - POST LIGHT	721	721	794	794	793	793	720	720
1213005-1	COVER - SWITCH MOUNTING BRACKET	279	279	279	279	279	279	279	279
1213088-1	BROW ASSEMBLY - INSTRUMENT PANEL	883	883	883	883	883	883	883	883
1213116-1	COVER - CENTER INSTRUMENT PANEL	279	279	279	279	279	279	279	279
1213243-3	COVER ASSEMBLY - PANEL LIGHT	532	532	532	532	532	532	532	532
1414110-1	TRIM - SEAT BACK	721	721	794	794	793	793	720	720
1414110-3	POCKET ASSEMBLY - MAGAZINE	721	721	794	794	793	793	720	720
1414263-7	SEAT SKIRT	721	721	794	794	793	793	720	720
1414263-8	SEAT SKIRT	279	279	279	279	279	279	279	279
1470089-14	MAPLIGHT ASSEMBLY								

INTERIOR PAINTED OR PLASTIC PARTS

1969 MODEL YEAR

18259306 THRU 18260055

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)							
		BF	BV	HF	HV	DF	DV	GF	GV
0700148-1	MAPLIGHT HOOD	193	193	193	193	193	193	193	193
0700631-5	FRAME ASSEMBLY - SEAT BOTTOM LH	907	907	909	909	905	905	749	749
0700631-6	FRAME ASSEMBLY - SEAT BOTTOM RH	907	907	909	909	905	905	749	749
0700646-1	SEAT SKIRT	902	902	903	903	901	901	721	727
0700646-2	SEAT SKIRT	902	902	903	903	901	901	721	721
0700694-12	COWL DECK COVER	825	825	825	825	825	825	825	825
0700702-5	PANEL - BAGGAGE DOOR	902	902	903	903	901	901	721	721
0700702-6	PANEL - BAGGAGE COMPARTMENT	902	902	903	903	901	901	721	721
0700702-9	PANEL - BAGGAGE DOORPOST	902	902	903	903	901	901	721	721
0700702-10	PANEL - AFT WALL	902	902	903	903	901	901	721	721
0700702-11	PANEL - CANTED	902	902	903	903	901	901	721	721
0711663-2	PANEL ASSEMBLY - AUXILIARY SEAT	902	902	903	903	901	901	721	721
0713278-3	COVER - INSTRUMENT PANEL LH	279	279	279	279	279	279	279	279
0713282-1	COVER ASSEMBLY - POST LIGHT LH	279	279	279	279	279	279	279	279
0713524-1	COVER - INSTRUMENT PANEL RH	902	902	903	903	901	901	721	721
0713525-1	COVER ASSEMBLY - INSTRUMENT PANEL LOWER	902	902	903	903	901	901	721	721
0713811-3	COVER ASSEMBLY - CONSOLE	902	902	903	903	901	901	721	721
0713866-6	COVER - STATIONARY PANEL RH.	279	279	279	279	279	279	279	279
0713866-9	COVER ASSEMBLY - POST LIGHT RH	279	279	279	279	279	279	279	279
0713881-2	DOOR ASSEMBLY - MAP COMPARTMENT	902	902	903	903	901	901	721	721
0715004-1	TRIM ASSEMBLY - SEAT BACK	902	902	903	903	901	901	721	721
0715004-2	TRIM ASSEMBLY - SEAT BACK	902	902	903	903	901	901	721	721
0715007-1	SHIELD - DOOR POST LH.	902	902	903	903	901	901	721	721
0715007-3	SHIELD - DOOR POST RH.	902	902	903	903	901	901	721	721
0715007-4	SHIELD - DOOR POST RH.	902	902	903	903	901	901	721	721
0715008-3	MOULDING - DOOR WINDOW LH	902	902	903	903	901	901	721	721
0715008-4	MOULDING - DOOR WINDOW RH	902	902	903	903	901	901	721	721
0715009-1	FRAME - AFT SIDE WINDOW	902	902	903	903	901	901	721	721
0715009-2	FRAME - AFT SIDE WINDOW	902	902	903	903	901	901	721	721
0715010-1	MOULDING - UPPER AFT WINDOW	902	902	903	903	901	901	721	721
0715017-1	RETAINER-UPHOLSTERY	532	532	532	532	532	532	532	532
1200415-7	ESCUTCHEON - OXYGEN	532	532	532	532	532	532	532	532
1200536-1	COVER - OXYGEN CONTROL	532	532	532	532	532	532	532	532
1200756-7	PEDESTAL COVER ASSEMBLY - POST LIGHT	902	902	903	903	901	901	721	721
1213005-1	COVER - SWITCH MOUNTING BRACKET	279	279	279	279	279	279	279	279
1213088-1	BROW ASSEMBLY - INSTRUMENT PANEL	883	883	883	883	883	883	883	883
1213116-1	COVER - CENTER INSTRUMENT PANEL.	279	279	279	279	279	279	279	279
1213190-1	COVER - CENTER INSTRUMENT PANEL LOWER	279	279	279	279	279	279	279	279
1213243-3	COVER ASSEMBLY - PANEL LIGHT	532	532	532	532	532	532	532	532
1414110-1	TRIM - SEAT BACK	902	902	903	903	901	901	721	721
1414110-3	POCKET ASSEMBLY - MAGAZINE	902	902	903	903	901	901	721	721
1414263-7	SEAT SKIRT	902	902	903	903	901	901	721	721
1414263-8	SEAT SKIRT	902	902	903	903	901	901	721	721
1470089-14	MAPLIGHT ASSEMBLY	279	279	279	279	279	279	279	279

INTERIOR PAINTED OR PLASTIC PARTS

1970 MODEL YEAR

18260056 THRU 18260445

A182-0117 THRU A182-0136

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)							
		AF	AV	BF	BV	CF	CV	MF	MV
0514017-1	TRIM - SEAT BOTTOM LH	532	532	532	532	532	532	532	532
0514017-2	TRIM - SEAT BOTTOM RH	532	532	532	532	532	532	532	532
0514017-3	TRIM - SEAT BOTTOM	532	532	532	532	532	532	532	532
0514018-1	TRIM ASSEMBLY - SEAT BACK	532	532	532	532	532	532	532	532
0514018-3	POCKET ASSEMBLY - MAGAZINE	532	532	532	532	532	532	532	532
0514055-1	TRIM ASSEMBLY - SEAT BACK	978	978	976	976	975	975	977	977
0700702-5	PANEL - BAGGAGE DOOR	978	978	976	976	975	975	977	977
0700702-6	PANEL - BAGGAGE COMPARTMENT	978	978	976	976	975	975	977	977
0700702-9	PANEL - BAGGAGE DOOR POST	978	978	976	976	975	975	977	977
0700702-10	PANEL - AFT WALL	532	532	532	532	532	532	532	532
0700702-11	PANEL - CANTED	532	532	532	532	532	532	532	532
0711778-1	COVER ASSEMBLY - OVERHEAD SPEAKER	532	532	532	532	532	532	532	532
0711778-3	COVER ASSEMBLY - OVERHEAD SPEAKER	989	989	989	989	989	989	989	989
0713278-7 *	COVER - INSTRUMENT PANEL LH	279	279	279	279	279	279	279	279
0713282-2	COVER ASSEMBLY - POST LIGHT LH	989	989	989	989	989	989	989	989
0713282-3	COVER ASSEMBLY - POST LIGHT LH	978	978	976	976	975	975	977	977
0713524-2	COVER - INSTRUMENT PANEL RH	978	978	976	976	975	975	977	977
0713525-8	COVER ASSEMBLY - INSTRUMENT PANEL LWR	989	989	989	989	989	989	989	989
0713866-6 *	COVER - STATIONARY PANEL RH	279	279	279	279	279	279	279	279
0713866-9	COVER ASSEMBLY - POST LIGHT RH	989	989	989	989	989	989	989	989
0713866-10	COVER ASSEMBLY - POST LIGHT RH	978	978	976	976	975	975	977	977
0713881-2	DOOR ASSEMBLY - MAP COMPARTMENT	279	279	279	279	279	279	279	279
0713934-1	COVER - RADIO SWITCH PANEL LIGHT	532	532	532	532	532	532	532	532
0715007-3	SHIELD - DOOR POST RH	532	532	532	532	532	532	532	532
0715007-5	SHIELD - DOOR POST LH	532	532	532	532	532	532	532	532
0715008-7	MOULDING - DOOR WINDOW LH	532	532	532	532	532	532	532	532
0715008-8	MOULDING - DOOR WINDOW RH	532	532	532	532	532	532	532	532
0715009-5	FRAME - AFT SIDE WINDOW LH	532	532	532	532	532	532	532	532
0515009-6	FRAME - AFT SIDE WINDOW RH	532	532	532	532	532	532	532	532
0715010-1	MOULDING - UPPER AFT WINDOW	532	532	532	532	532	532	532	532
0715016-1	TRIM ASSEMBLY - SEAT BACK	532	532	532	532	532	532	532	532
0715016-2	TRIM ASSEMBLY - SEAT BACK	532	532	532	532	532	532	532	532
0715017-1	RETAINER-UPHOLSTERY	532	532	532	532	532	532	532	532
1200415-7	ESCUTCHEON - OXYGEN CONTROL	978	978	976	976	975	975	977	977
1200756-7	COVER ASSEMBLY - CONSOLE	279	279	279	279	279	279	279	279
1213005-1	COVER - SWITCH MOUNTING BRACKET	279	279	279	279	279	279	279	279
1213116-1	COVER - CENTER INSTRUMENT PANEL	279	279	279	279	279	279	279	279
1213173-2	COVER - BROW	532	532	532	532	532	532	532	532
1414110-3	POCKET ASSEMBLY - SEAT BACK								

*PANEL COVERS ARE AVAILABLE IN OPTIONAL 279 MATERIAL.

INTERIOR PAINTED OR PLASTIC PARTS

1971 MODEL YEAR

18260446 THRU 18260825

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)											
		AF	AV	BF	BV	CF	CV	DF	DV	HL	EL	FL	DL
0514017-1	TRIM - SEAT BOTTOM LH	532	532	532	532	532	532	532	532	532	532	532	532
0514017-2	TRIM - SEAT BOTTOM RH	532	532	532	532	532	532	532	532	532	532	532	532
0514017-3	TRIM - SEAT BOTTOM	532	532	532	532	532	532	532	532	532	532	532	532
0514018-3	POCKET ASSEMBLY - MAGAZINE	532	532	532	532	532	532	532	532	532	532	532	532
0514018-15	TRIM ASSEMBLY - SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0514055-11	TRIM ASSEMBLY - SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0700702-5	PANEL - BAGGAGE DOOR	978	978	A24	A24	A30	A30	A27	A27	532	532	279	A27
0700702-6	PANEL - BAGGAGE COMPARTMENT	978	978	A24	A24	A30	A30	A27	A27	532	532	279	A27
0700702-21	PANEL - CANTED	532	532	532	532	532	532	532	532	532	532	532	532
0711778-1	COVER ASSEMBLY - OVERHEAD SPEAKER	532	532	532	532	532	532	532	532	532	532	532	532
0711778-3	COVER ASSEMBLY - OVERHEAD SPEAKER	532	532	532	532	532	532	532	532	532	532	532	532
0713278-13 *	COVER ASSEMBLY - INSTRUMENT PANEL LH	989	989	989	989	989	989	989	989	989	989	989	989
0713278-17 *	COVER ASSEMBLY - INSTRUMENT PANEL LH	989	989	989	989	989	989	989	989	989	989	989	989
0713282-6	COVER ASSEMBLY - POST LIGHT LH	279	279	279	279	279	279	279	279	279	279	279	279
0713282-7	COVER ASSEMBLY - POST LIGHT LH	989	989	989	989	989	989	989	989	989	989	989	989
0713524-3	COVER - INSTRUMENT PANEL RH	978	978	A24	A24	A30	A30	A27	A27	279	279	279	A27
0713525-9	COVER ASSEMBLY - INSTRUMENT PANEL LOWER	978	978	A24	A24	A30	A30	A27	A27	279	279	279	A27
0713866-6 *	COVER - STATIONARY PANEL RH	989	989	989	989	989	989	989	989	989	989	989	989
0713866-9	COVER ASSEMBLY - POST LIGHT RH	279	279	279	279	279	279	279	279	279	279	279	279
0713866-10	COVER ASSEMBLY - POST LIGHT RH	989	989	989	989	989	989	989	989	989	989	989	989
0713881-9	DOOR ASSEMBLY - MAP COMPARTMENT	978	978	A24	A24	A30	A30	A27	A27	279	279	279	A27
0713934-1	COVER - RADIO SWITCH PANEL LIGHT	279	279	279	279	279	279	279	279	279	279	279	279
0715008-7	MOULDING - DOOR WINDOW LH	532	532	532	532	532	532	532	532	532	532	532	532
0715008-8	MOULDING - DOOR WINDOW RH	532	532	532	532	532	532	532	532	532	532	532	532
0715010-1	MOULDING - UPPER AFT WINDOW	532	532	532	532	532	532	532	532	532	532	532	532
0715016-1	TRIM ASSEMBLY - SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0715016-2	TRIM ASSEMBLY - SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0715017-1	RETAINER - UPHOLSTERY	532	532	532	532	532	532	532	532	532	532	532	532
0715022-1	SHIELD - DOORPOST LH	532	532	532	532	532	532	532	532	532	532	532	532
0715022-2	SHIELD - DOORPOST RH	532	532	532	532	532	532	532	532	532	532	532	532
0715022-3	MOULDING - DOORPOST LH	532	532	532	532	532	532	532	532	532	532	532	532
0715002-4	MOULDING - DOORPOST RH	532	532	532	532	532	532	532	532	532	532	532	532
0715022-9	FRAME - AFT SIDE WINDOW LH	532	532	532	532	532	532	532	532	532	532	532	532
0715022-10	FRAME - AFT SIDE WINDOW RH	532	532	532	532	532	532	532	532	532	532	532	532
0715023-1	PANEL - AFT WALL	978	978	A24	A24	A30	A30	A27	A27	532	532	279	A27
0715023-3	PANEL ASSY - LH	978	978	A24	A24	A30	A30	A27	A27	532	532	279	279
0715023-4	PANEL ASSY - RH	978	978	A24	A24	A30	A30	A27	A27	532	532	279	279
0715023-5	PANEL ASSEMBLY - BAGGAGE COMPARTMENT	532	532	532	532	532	532	532	532	532	532	532	532
0715023-8	COVER - BAGGAGE COMPARTMENT PANEL	532	532	532	532	532	532	532	532	532	532	532	532
1200415-7	ESCUTCHEON - OXYGEN CONTROL	532	532	532	532	532	532	532	532	532	532	532	532
1200756-7	COVER ASSEMBLY - CONSOLE	978	978	A24	A24	A30	A30	A27	A27	279	279	279	A27
1213116-1	COVER - CENTER INSTRUMENT PANEL	279	279	279	279	279	279	279	279	279	279	279	279
1213005-2	COVER - SWITCH MOUNTING BRACKET	279	279	279	279	279	279	279	279	279	279	279	279
1414110-3	POCKET ASSEMBLY - MAGAZINE	532	532	532	532	532	532	532	532	532	532	532	532

*PANEL COVERS ARE AVAILABLE IN OPTIONAL 279 MATERIAL.

INTERIOR PAINTED OR PLASTIC PARTS

1972 MODEL YEAR

18260826 THRU 18261425 — A182-0137 & ON

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)											
		AF	AV	BF	BV	CF	CV	DF	DV	HL	EL	FL	DL
0514017-1	TRIM - SEAT BOTTOM LH	532	532	532	532	532	532	532	532	532	532	532	532
0514017-2	TRIM - SEAT BOTTOM RH	532	532	532	532	532	532	532	532	532	532	532	532
0514017-3	TRIM - SEAT BOTTOM	532	532	532	532	532	532	532	532	532	532	532	532
0514058-1	RETAINER - SEAT BOTTOM	531	531	531	531	531	531	531	531	531	531	531	531
0514067-2	RETAINER - HEADLINER FWD	532	532	532	532	532	532	532	532	532	532	532	532
0514076-3	TRIM - SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0514076-4	TRIM - SEAT BACK	532	532	532	532	532	532	532	532	532	532	532	532
0514077-4	TRIM - SEAT BOTTOM RH	532	532	532	532	532	532	532	532	532	532	532	532
0514077-7	TRIM - SEAT BOTTOM LH	978	978	A44	A44	A48	A48	A52	A52	532	532	279	A52
0700702-5	PANEL - BAGGAGE DOOR	978	978	A44	A44	A48	A48	A52	A52	532	532	279	A52
0700702-6	PANEL - BAGGAGE COMPARTMENT	532	532	532	532	532	532	532	532	532	532	532	532
0700702-21	PANEL - CANTED	532	532	532	532	532	532	532	532	532	532	532	532
0711778-5	COVER ASSEMBLY - OVERHEAD SPEAKER	532	532	532	532	532	532	532	532	532	532	532	532
0711778-7	COVER ASSEMBLY - OVERHEAD SPEAKER	532	532	532	532	532	532	532	532	532	532	532	532
0711779-1	ESCUTCHEON - DOME LIGHT	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0713318-1 *	COVER ASSEMBLY - INSTRUMENT PANEL LH	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0713318-2 *	COVER ASSEMBLY - POST LIGHTED LH	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0713319-1 *	COVER ASSEMBLY - INSTRUMENT PANEL RH	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0713319-2 *	COVER ASSEMBLY - POST LIGHTED RH	978	978	A44	A44	A48	A48	A52	A52	279	279	279	A52
0713524-3	COVER - LOWER INSTRUMENT PANEL RH	978	978	A44	A44	A48	A48	A52	A52	279	279	279	A52
0713525-11	COVER ASSEMBLY - LOWER INSTRUMENT PANEL LH	978	978	A44	A44	A48	A48	A52	A52	279	279	279	A52
0713881-12	DOOR ASSEMBLY - GLOVE COMPARTMENT	532	532	532	532	532	532	532	532	532	532	532	532
0715008-7	MOULDING - DOOR WINDOW LH	532	532	532	532	532	532	532	532	532	532	532	532
0715008-8	MOULDING - DOOR WINDOW RH	532	532	532	532	532	532	532	532	532	532	532	532
0715010-2	MOULDING - UPPER AFT WINDOW	532	532	532	532	532	532	532	532	532	532	532	532
0715017-1	RETAINER - UPHOLSTERY	532	532	532	532	532	532	532	532	532	532	532	532
0715022-1	DOOR SHIELD - FORWARD LH	532	532	532	532	532	532	532	532	532	532	532	532
0715022-2	DOOR SHIELD - FORWARD RH	532	532	532	532	532	532	532	532	532	532	532	532
0715022-3	MOULDING - LH	532	532	532	532	532	532	532	532	532	532	532	532
0715022-4	MOULDING - RH	532	532	532	532	532	532	532	532	532	532	532	532
0715022-7	TRIM STRIP - LH	532	532	532	532	532	532	532	532	532	532	532	532
0715022-8	TRIM STRIP - RH	532	532	532	532	532	532	532	532	532	532	532	532
0715022-9	WINDOW MOULDING - LH SIDE	532	532	532	532	532	532	532	532	532	532	532	532
0715022-10	WINDOW MOULDING - RH SIDE	978	978	A44	A44	A48	A48	A52	A52	532	532	279	A52
0715023-1	PANEL ASSEMBLY - AFT	978	978	A44	A44	A48	A48	A52	A52	532	532	279	A52
0715023-5	PANEL ASSEMBLY - BAGGAGE COMPARTMENT	978	978	A44	A44	A48	A48	A52	A52	532	532	279	A52
0715023-6	PANEL TOP	978	978	A44	A44	A48	A48	A52	A52	532	532	279	A52
0715023-8	COVER - BAGGAGE COMPARTMENT	978	978	A44	A44	A48	A48	A52	A52	279	279	279	A52
1200756-7	COVER ASSEMBLY - CONSOLE	978	978	A44	A44	A48	A48	A52	A52	279	279	279	A52
1213329-1	COVER - SELECTOR SWITCH BRACKET	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
1213338-1	COVER ASSEMBLY - LOWER RADIO CUTOUT	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
1213338-4	COVER - UPPER RADIO CUTOUT												

*PANEL COVERS ARE AVAILABLE IN OPTIONAL 279 MATERIAL

INTERIOR PAINTED OR PLASTIC PARTS

1973 MODEL YEAR

18261426 THRU 18262465

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)										
		AF	AV	BF	BV	CF	CV	DF	DV	EL	FL	HL
0514017-3	TRIM - SEAT BOTTOM FWD	532	532	532	532	532	532	532	532	532	532	532
0514058-1	RETAINER - SEAT BOTTOM	532	532	532	532	532	532	532	532	532	532	532
0514067-2	RETAINER - FRONT SPAR	531	531	531	531	531	531	531	531	531	531	531
0514076-1	TRIM ASSEMBLY - SEAT BACK	532	532	532	532	532	532	532	532	532	532	532
0514083-1	TRIM ASSEMBLY - SEAT BACK	532	532	532	532	532	532	532	532	532	532	532
0700702-5	PANEL - BAGGAGE DOOR	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0700702-21	PANEL - CANTED	532	532	532	532	532	532	532	532	532	532	532
0711778-5	COVER ASSEMBLY WITH OXYGEN CUTOUTS	532	532	532	532	532	532	532	532	532	532	532
0711778-7	COVER ASSEMBLY WITHOUT OXYGEN CUTOUTS	532	532	532	532	532	532	532	532	532	532	532
0711779-1	ESCUTCHEON - DOME LIGHT	532	532	532	532	532	532	532	532	532	532	532
0713323-1	COVER ASSEMBLY - INSTRUMENT PANEL LH	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0713323-2	COVER ASSEMBLY - POST LIGHTED LH	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0713324-1	COVER ASSEMBLY - INSTRUMENT PANEL UPPER RH	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0713324-2	COVER ASSEMBLY - POST LIGHTED RH	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
0713330-1	COVER - INSTRUMENT PANEL LOWER RH	978	978	A80	A80	A88	A88	A84	A84	279	279	279
0713525-13	COVER ASSEMBLY - INSTRUMENT PANEL LOWER	978	978	A80	A80	A88	A88	A84	A84	279	279	279
0713811-3	COVER ASSEMBLY - CONSOLE	978	978	A80	A80	A88	A88	A84	A84	279	279	279
0714006-1	TRIM STRIP - LH	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0714006-2	TRIM STRIP - RH	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0714010-1	TRIM - SEAT BOTTOM LH	532	532	532	532	532	532	532	532	532	532	532
0714010-2	TRIM - SEAT BOTTOM RH	532	532	532	532	532	532	532	532	532	532	532
0715010-2	MOLDING - AFT WINDOW	532	532	532	532	532	532	532	532	532	532	532
0715016-1	TRIM ASSEMBLY - SEAT BACK LH	532	532	532	532	532	532	532	532	532	532	532
0715016-2	TRIM ASSEMBLY - SEAT BACK RH	532	532	532	532	532	532	532	532	532	532	532
0715023-1	PANEL ASSEMBLY - AFT WALL	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0715023-3	AFT PANEL - LH	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0715023-4	AFT PANEL - RH	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0715023-5	PANEL ASSEMBLY	532	532	532	532	532	532	532	532	532	532	532
0715023-8	COVER - PANEL	532	532	532	532	532	532	532	532	532	532	532
0715028-5	AFT CABIN SIDE PANEL - LH	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0715028-6	AFT CABIN SIDE PANEL - RH	978	978	A80	A80	A88	A88	A84	A84	532	279	532
0715031-1	ESCUTCHEON - WINDOW STRIKER PLATE	532	532	532	532	532	532	532	532	532	532	532
0715032-1	MOLDING - LH	532	532	532	532	532	532	532	532	532	532	532
0715032-2	MOLDING - RH	532	532	532	532	532	532	532	532	532	532	532
0715032-3	MOLDING - LH	532	532	532	532	532	532	532	532	532	532	532
0715032-4	MOLDING - RH	532	532	532	532	532	532	532	532	532	532	532
0715032-5	MOLDING ASSEMBLY - DOOR WINDOW LH	532	532	532	532	532	532	532	532	532	532	532
0715032-6	MOLDING - DOOR WINDOW RH	532	532	532	532	532	532	532	532	532	532	532
0715032-7	TRIM STRIP - LH	532	532	532	532	532	532	532	532	532	532	532
0715032-8	TRIM STRIP - RH	532	532	532	532	532	532	532	532	532	532	532
0715032-9	MOLDING - LH WINDOW	532	532	532	532	532	532	532	532	532	532	532
0715032-10	MOLDING - RH WINDOW	532	532	532	532	532	532	532	532	532	532	532
1200231-1	RETAINER - LH	970	970	A81	A81	A89	A89	A85	A85	531	156	531
1200231-2	RETAINER - RH	970	970	A81	A81	A89	A89	A85	A85	531	156	531

INTERIOR PAINTED OR PLASTIC PARTS

1973 MODEL YEAR (Cont)

18261426 THRU 18262465

PART NUMBER	PART NAME	INTERIOR COLOR CODE (From Finish and Trim Plate)										
		AF	AV	BF	BV	CF	CV	DF	DV	EL	FL	HL
1200756-7	PEDESTAL COVER ASSEMBLY - POST LIGHTED	978	978	A80	A80	A88	A88	A84	A84	279	279	279
1213175-15	COVER - GLOVE BOX (TOP)	A58	A58	A58	A58	A58	A58	A58	A58	A58	A58	A58
	COVER - GLOVE BOX (MIDDLE)	156	156	156	156	156	156	156	156	156	156	156
	COVER - GLOVE BOX (BOTTOM)	978	978	A80	A80	A88	A88	A84	A84	279	279	279
1213366-1	COVER - SWITCH MOUNTING BRACKET	279	279	279	279	279	279	279	279	279	279	279
1213377-1	COVER - PANEL CENTER	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
1213381-1	COVER - RADIO CUTOUT	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59	A59
1215045-5	SHIELD - LH	532	532	532	532	532	532	532	532	532	532	532
1215045-6	SHIELD - RH	532	532	532	532	532	532	532	532	532	532	532

ALPHABETICAL INDEX

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
A	
ABRASION BOOT-STABILIZER,	14
ACCESS COVER-RADIO,	45
ACCESS DOOR-COWL,	61
ACCESSORY KITS-SEE KITS CATALOG.	
ACCESS DOOR-COWL,	61A
ACTUATOR BRACKET-TRIM TAB,	14
ACTUATOR-ELEVATOR TRIM,	78
ADAPTER-FUEL TANK DRAIN,	8
ADAPTER-OIL TEMPERATURE,	62
ADHESIVES-MISCELLANEOUS,	1
ADJUSTABLE FRONT SEAT INST	50
ADJUSTABLE FRONT SEAT INST	51A
ADJUSTABLE SEAT BOTTOM MECHANISM,	51
ADJUSTABLE SEAT BOTTOM MECHANISM,	51A
AFT CABIN SIDE PANEL,	47
AFT CABIN SIDE PANEL,	47A
AFT CABIN SIDE PANEL,	47B
AFT CARPET,	47
AFT CARPET,	47A
AFT FLOORBOARD,	25
AFT SPAR FITTING,	24
AFT TAILCONE-FUSELAGE,	31
AFT WINDOW MOULDING,	45
AFT WINDOW MOULDING,	45A
AILERON ASSEMBLY,	9
AILERON BALANCE WEIGHT,	9
AILERON BELLCRANK,	9
AILERON BELLCRANK,	76
AILERON BELLCRANK,	76A
AILERON CABLE,	76
AILERON CABLE,	76A
AILERON CARRY THRU CABLE,	76
AILERON CARRY THRU CABLE,	76A
AILERON CONTROL SYSTEM INST.	76
AILERON CONTROL SYSTEM INST.	76A
AILERON CONTROL CHAIN,	74
AILERON CONTROL CHAIN,	76
AILERON CONTROL QUADRANT,	74A
AILERON CONTROL PULLEY	74A
AILERON CONTROL PULLEY	76A
AILERON CONTROL SPROCKET,	74
AILERON CONTROL TUBE,	74
AILERON CONTROL TUBE,	74A
AILERON INSTALLATION,	9
AILERON PUSH-PULL ROD,	9
AIR CONTROL-CABIN,	53
AIR CONTROL-CABIN.	53A
AIR CONTROL-CABIN.	53C
AIR CONTROL-CABIN.	53E
AIR CONTROL-CABIN.	53G
AIR CONTROL-CABIN.	53J
AIR CONTROL-CABIN.	53L
AIR CONTROL-CABIN.	53N
AIR CONTROL-CABIN.	53Q
AIR DUCT DRAIN TUBE,	69
AIR INTAKE DUCT-CARBURETOR,	61
AIR INTAKE DUCT-CARBURETOR,	61A
AIR INTAKE HOSE,	63
AIR TEMPERATURE GAGE-CARBURETOR,	53
AIR TEMPERATURE GAGE-CARBURETOR.	53C
AIR TEMPERATURE GAGE-CARBURETOR.	53E
AIR TEMPERATURE GAGE-CARBURETOR.	53G
AIR TEMPERATURE GAGE-CARBURETOR.	53J
AIR TEMPERATURE GAGE-CARBURETOR.	53L
AIR VENT CONTROL-FORWARD,	69
AIR VENT CONTROL-FORWARD,	53A
AIR VENT CONTROL-FORWARD,	53C
AIR VENT CONTROL-FORWARD,	53E

NOMENCLATURE	FIGURE
A (cont)	
AIR VENT CONTROL-FORWARD	53G
AIR VENT CONTROL-FORWARD	53J
AIR VENT CONTROL-FORWARD	53L
AIR VENT CONTROL-FORWARD	53N
AIR VENT CONTROL-FORWARD	53Q
AIR VENT DOOR,	17
AIR VENT DOOR,	69
AIR VENT INLET,	17
AIR VENT INST-OUTSIDE FORWARD,	69
AIRBOX FILTER,	63
AIRBOX-CARBURETOR,	63
AIRBOX-CARBURETOR.	63B
AIRSPEED INDICATOR,	53
AIRSPEED INDICATOR,	53A
AIRSPEED INDICATOR,	53C
AIRSPEED INDICATOR,	53E
AIRSPEED INDICATOR	53G
AIRSPEED INDICATOR	53J
AIRSPEED INDICATOR	53L
AIRSPEED INDICATOR	53N
AIRSPEED INDICATOR	53Q
AIRSPEED INDICATOR,	81
ALIGNMENT SHIM-MAIN GEAR,	39
ALTERNATOR,	90
ALTERNATOR DRIVE BELT,	90
ALTERNATOR DRIVE BELT,	95
ALTIMETER-SENSITIVE,	53
ALTIMETER-SENSITIVE,	53A
ALTIMETER-SENSITIVE,	53C
ALTIMETER-SENSITIVE,	53E
ALTIMETER-SENSITIVE.	53G
ALTIMETER-SENSITIVE.	53J
ALTIMETER-SENSITIVE.	53L
ALTIMETER,	81
AMMETER,	53
AMMETER,	53A
AMMETER,	53C
AMMETER,	53E
AMMETER.	53G
AMMETER.	53J
AMMETER.	53L
ARM ASSEMBLY-ELEVATOR,	15
ARM REST SUPPORT,	25
ARM REST SUPPORT,	41
ARM REST,	47
ARM REST,	47A
ARM REST,	47B
ARM-DOOR STOP,	41
ARM-FLAP POSITION TRANSMITTER,	79
ARM-RUDDER BAR,	72
ASBESTOS GROMMET,	22
ASH TRAY,	47
ASH TRAY,	47A
ASH TRAY,	47B
ASH TRAY,	49
ASH TRAY,	49A
ASH TRAY,	51A
ASSIST STRAP,	47
ASSIST STRAP,	47A
ASSIST STRAP,	47B
AUTOMATIC OXYGEN SYSTEM,	89
AUXILIARY POWER RECEPTACLE,	90
AUXILIARY SPAR-OUTBOARD,	6
AUXILIARY SEAT INSTALLATION,	52B
AUXILIARY SEAT INSTALLATION.	52C
AXLE BOLT FERRULE,	33
AXLE SPACER,	33
AXLE-HEAVY DUTY,	39
AXLE-MAIN LANDING GEAR,	39

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
B	
BAFFLES INSTALLATION-ENGINE,	66
BAGGAGE COMPARTMENT PANEL,	47
BAGGAGE COMPARTMENT PANEL,	47A
BAGGAGE COMPARTMENT PANEL,	47B
BAGGAGE DOOR HINGE,	44
BAGGAGE DOOR INST-FUSELAGE,	44
BAGGAGE DOOR JAMB-FORWARD,	23
BAGGAGE DOOR JAMB-AFT,	44
BAGGAGE DOOR JAMB-FORWARD,	44
BAGGAGE DOOR LATCH,	44
BAGGAGE DOOR PANEL,	47
BAGGAGE DOOR PANEL,	47A
BAGGAGE DOOR PANEL,	47B
BAGGAGE DOOR SCUFF PLATE,	47
BAGGAGE DOOR SCUFF PLATE,	47A
BAGGAGE DOOR SCUFF PLATE,	47B
BAGGAGE DOOR SILL-UPPER,	44
BAGGAGE DOOR SILL-LOWER,	44
BAGGAGE DOOR SILL-UPPER,	23
BAGGAGE DOOR STRIKE PLATE,	44
BAGGAGE DOOR,	44
BAGGAGE DOOR POST COVER,	47
BAGGAGE DOOR POST COVER,	47A
BAGGAGE DOOR POST COVER,	47B
BAGGAGE LOAD LIMIT PLACARD,	2
BAGGAGE LOAD LIMIT PLACARD	2A
BAGGAGE LOAD LIMIT PLACARD,	47
BAGGAGE LOAD LIMIT PLACARD,	47A
BAGGAGE LOAD LIMIT PLACARD,	47B
BAGGAGE NET,	47A
BAGGAGE NET,	47B
BAGGAGE SHELF EDGE COVER,	45
BAGGAGE SHELF-REMOVABLE,	45A
BAGGAGE SHELF-REMOVABLE.	45B
BALANCE WEIGHT ELEVATOR,	15
BALANCE WEIGHT-AILERON,	9
BALANCE WEIGHT-PROPELLER,	59
BALANCE WEIGHT-RUDDER,	13
BALL JOINT-PROPELLER CONTROL,	62
BAR-RUDDER ARM,	72
BARREL & FORK ASSEMBLY-NOSE GEAR,	35
BARREL NUT-ENGINE MOUNTING,	63
BARREL-SHIMMY DAMPENER,	38
BASE-METERING PIN,	35
BATTERY BOX INSTALLATION,	30
BATTERY CABLE,	90
BATTERY DRAIN TUBE,	30
BATTERY GROUND STRAP,	90
BATTERY,	90
BEACON-FLASHING,	92A
BEACON-ROTATING,	92
BEARING CONE-WHEEL,	36
BEARING CONE-WHEEL,	40
BEARING CUP-WHEEL.	36
BEARING CUP-WHEEL.	37
BEARING CUP-WHEEL.	40
BEARING SEAL-MAIN WHEEL,	40
BEARING-RUDDER BAR,	72
BELLCRANK-ADJUSTABLE SEAT SCREW,	51
BELLCRANK-AILERON,	9
BELLCRANK-AILERON,	76
BELLCRANK-AILERON,	76A
BELLCRANK-ELEVATOR BAR,	77
BELLCRANK-NOSE GEAR STEERING,	34
BELLCRANK-PARKING BRAKE,	71
BELLCRANK-PARKING BRAKE,	71A

NOMENCLATURE	FIGURE
B (cont)	
BELLCRANK-RUDDER	13
BELLCRANK-WING LEVELER,	76B
BELT EXTENSION-PORTABLE STRETCHER,	57
BELT-ALTERNATOR DRIVE,	90
BELT-ALTERNATOR DRIVE,	95
BELT-SEAT,	48
BELT-SEAT,	49
BELT-SEAT,	49A
BELT-SEAT,	49B
BELT-SEAT,	49C
BELT-SEAT,	50
BELT-SEAT,	51A
BELT-SEAT,	52B
BLADE-PROPELLER,	59
BLADE-PROPELLER,	60
BLADE-PROPELLER,	59A
BLAST TUBE-GENERATOR,	63
BLEEDER SCREW SEAL,	40
BLEEDER SCREW-BRAKE,	40
BLOCK-ELEVATOR TAB STOP,	78
BLOCK-FRONT SPAR,	18
BLOCK-FRONT SPAR,	56
BLOCK-REAR SPAR,	56
BODY-FUEL STRAINER,	83
BODY-GOVERNOR,	64
BODY-MASTER CYLINDER,	73
BOLT-DOOR LATCH,	43
BOLT-RUDDER STOP,	80
BOOT-STEERING,	17
BOX-BATTERY,	30
BOX-GLOVE,	55
BOX-MAP,	55
BRAKE & RUDDER PEDALS INST	72
BRAKE & WHEEL-MAIN GEAR,	39
BRAKE & WHEEL-MAIN GEAR,	40
BRAKE ASSEMBLY,	40
BRAKE BELLCRANK-PARKING,	71
BRAKE BELLCRANK-PARKING,	71A
BRAKE CYLINDER,	72
BRAKE CYLINDER,	73
BRAKE DISC,	40
BRAKE HOUSING,	40
BRAKE INSTALLATION-PARKING,	71
BRAKE INSTALLATION-PARKING,	71A
BRAKE LINE,	39
BRAKE LINE,	71
BRAKE LINE,	71A
BRAKE LINING,	40
BRAKE PEDAL,	72
BRAKE SYSTEM INSTALLATION,	71
BRAKE SYSTEM INSTALLATION,	71A
BREATHER LINE,	63
BROW LIGHTS INSTL.	90A
BULB-DOME LIGHT,	90
BULB-INSTRUMENT PANEL LIGHT,	91
BULB-ROTATING BEACON,	92
BULB-TAIL LIGHT,	32
BULB-WING NAVIGATION LIGHT,	3
BULK ITEMS-LIST OF,	1
BULKHEAD-FRONT DOORPOST,	18
BULKHEAD-LANDING GEAR,	26
BULKHEAD-LANDING GEAR,	26A
BULKHEAD-REAR DOORPOST,	24
BULKHEAD-SPINNER,	58
BUNGEE-NOSE GEAR STEERING,	34

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
C	
CABIN AIR CONTROL,	53
CABIN AIR CONTROL,	53A
CABIN AIR CONTROL,	53C
CABIN AIR CONTROL,	53E
CABIN AIR CONTROL,	53G
CABIN AIR CONTROL,	53J
CABIN AIR CONTROL,	53L
CABIN AIR CONTROL,	53N
CABIN AIR CONTROL,	53Q
CABIN AIR SHIELD,	45
CABIN AIR SHIELD,	45A
CABIN AIR VENT SCOOP,	5
CABIN DOOR LATCH,	43
CABIN DOOR LATCH,	43A
CABIN DOOR SILL-LOWER,	25
CABIN DOOR SILL-UPPER,	23
CABIN DOOR STOP,	41
CABIN DOOR STOP,	42
CABIN DOOR UPHOLSTERY,	46
CABIN DOOR-LH,	41
CABIN DOOR-LH,	41A
CABIN DOOR-RH,	42
CABIN DOOR-RH,	42A
CABIN DOOR-STRUCTURE LH,	41
CABIN DOOR-STRUCTURE LH,	41A
CABIN DOOR STRUCTURE RH,	42
CABIN DOOR STRUCTURE RH,	42A
CABIN ENTRANCE STEP,	39
CABIN HEAT CONTROL,	53
CABIN HEAT CONTROL,	53A
CABIN HEAT CONTROL,	53C
CABIN HEAT CONTROL,	53E
CABIN HEAT CONTROL	53G
CABIN HEAT CONTROL	53J
CABIN HEAT CONTROL	53L
CABIN HEATING & DEFROSTING SYSTEM,	70
CABIN SECTION ASSEMBLY-LOWER,	25
CABIN SECTION-CENTER,	23
CABIN SECTION-CENTER,	23A
CABIN SIDE & FLOORBOARD UPHOL,	47
CABIN SIDE & FLOORBOARD UPHOL,	47A
CABIN SIDE & FLOORBOARD UPHOL,	47B
CABIN SIDE PANEL-AFT,	47
CABIN SIDE PANEL-AFT,	47A
CABIN SIDE PANEL-AFT,	47B
CABIN TOP & FIREWALL UPHOL INSTL,	45
CABIN TOP & FIREWALL UPHOL INSTL,	45A
CABIN TOP & FIREWALL UPHOL INSTL	45B
CABIN STEP TREAD,	39
CABIN STEP TREAD	39A
CABIN TOP ASSEMBLY-FORWARD,	23
CABIN VENTILATION SYSTEM,	69
CABIN VENTILATION SYSTEM,	69A
CABIN WINDOWS,	28A
CABLE ASSEMBLY-ELEV DOWN SPRING,	77
CABLE SHIELD-FIREWALL,	45
CABLE SHIELD-FIREWALL,	45A
CABLE-SEE INDIVIDUAL SYSTEM.	
CAP & ADAPTER-FUEL,	8
CAP-FIN TIP,	12
CAP-FIN TIP,	12A
CAP-FIN TIP,	12B
CAP-RUDDER TIP,	13
CARBURETOR AIR FILTER,	63
CARBURETOR AIR FILTER,	63B

NOMENCLATURE	FIGURE
C (cont)	
CARBURETOR AIR INTAKE DUCT,	61
CARBURETOR AIR INTAKE DUCT,	61A
CARBURETOR AIR TEMPERATURE GAGE,	53
CARBURETOR AIR TEMPERATURE GAGE,	53A
CARBURETOR AIR TEMPERATURE GAGE,	53C
CARBURETOR AIR TEMPERATURE GAGE,	53E
CARBURETOR AIR TEMPERATURE GAGE,	53G
CARBURETOR AIR TEMPERATURE GAGE,	53J
CARBURETOR AIR TEMPERATURE GAGE,	53L
CARBURETOR AIR TEMPERATURE PLACARD,	2
CARBURETOR AIR TEMPERATURE PLACARD	2A
CARBURETOR AIR TEMPERATURE PLACARD,	53
CARBURETOR AIRBOX ASSEMBLY,	63
CARBURETOR AIRBOX ASSEMBLY	63B
CARBURETOR HEAT CONTROL,	53
CARBURETOR HEAT CONTROL,	53A
CARBURETOR HEAT CONTROL,	53C
CARBURETOR HEAT CONTROL,	53E
CARBURETOR HEAT CONTROL,	53G
CARBURETOR HEAT CONTROL,	53J
CARBURETOR HEAT CONTROL,	53L
CARBURETOR HEAT CONTROL,	62
CARD-COMPASS CORRECTION,	53
CARGO TIE DOWN ASSEMBLY,	56
CARPET	47
CARPET	47A
CARPET	47B
CASE-OXYGEN MASK,	89
CASE-OXYGEN MASK,	89A
CATALOG-HOW TO USE	PAGE I
CATCH-GLOVE BOX DOOR,	55
CATCH-MAGNA-TITE,	55
CEMENT-MISCELLANEOUS,	1
CENTER CABIN SECTION,	23
CENTER CABIN SECTION,	23A
CENTER FLOORBOARD,	25
CHAIN-AILERON CONTROL,	74
CHAIN-AILERON CONTROL,	76
CHAIN-RUDDER TRIM,	80
CHANNEL ASSEMBLY-REAR DOORPOST,	24
CIGAR LIGHTER,	53
CIGAR LIGHTER,	53A
CIGAR LIGHTER,	53C
CIGAR LIGHTER,	53E
CIGAR LIGHTER,	53G
CIGAR LIGHTER,	53J
CIGAR LIGHTER,	53L
CIRCUIT BREAKER & SWITCH PANEL,	54
CIRCUIT BREAKER PANEL COVER,	54
CLEVELAND NOSE WHEEL,	37
CLIP-BRAKE DISC,	40
CLIP-DOOR HANDLE,	41
CLIP-DOOR HANDLE,	42
CLIP-UPHOLSTERY,	46
CLOCK-ELECTRIC,	54
CLUSTER-INSTRUMENT,	53
CLUSTER-INSTRUMENT	53A
CLUSTER-INSTRUMENT	53C
CLUSTER-INSTRUMENT	53E
CLUSTER-INSTRUMENT	53G
CLUSTER-INSTRUMENT	53J
CLUSTER-INSTRUMENT	53L
COLLAR-ADJUSTABLE FRONT SEAT SCREW,	51
COLLECTOR-EXHAUST,	65
COLUMN-CONTROL,	74

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
C (cont)	
COLUMN-CONTROL,	74A
COMPARTMENT INSTALLATION-MAP,	55
COMPASS CARD RETAINER,	53
COMPASS CORRECTION CARD,	53
COMPASS CORRECTION CARD,	57A
COMPASS,	56
COMPASS,	57A
COMPLETE WING ASSEMBLY,	3
COMPONENTS-FRONT SECTION TUNNEL,	20
CONE-WHEEL BEARING,	36
CONE-WHEEL BEARING,	40
CONLEY WELD,	1
CONSOLE COVER,	75
CONSOLE INSTALLATION,	75
CONSOLE STRUCTURE ASSEMBLY,	19
CONSOLE-OVERHEAD	91A
CONTACTOR-STARTER,	90
CONTROL COLUMN INSTALLATION,	74
CONTROL COLUMN INSTALLATION,	74A
CONTROL LOCK,	56
CONTROL PEDESTAL INSTALLATION,	75
CONTROL PEDESTAL STRUCTURE,	19
CONTROL PEDESTAL COVER,	75
CONTROL SYSTEM-AILERON,	76
CONTROL SYSTEM-AILERON,	76A
CONTROL SYSTEM-ELEVATOR,	77
CONTROL SYSTEM-ELEVATOR TRIM,	78
CONTROL SYSTEM-ELECTRIC FLAP,	79
CONTROL SYSTEM-RUDDER,	79
CONTROL TUBE-AILERON,	74
CONTROL TUBE-AILERON,	74A
CONTROL TUBE-ELEVATOR,	74
CONTROL TUBE-FLAP,	79
CONTROL WHEEL EMBLEM,	2
CONTROL WHEEL EMBLEM	2A
CONTROL WHEEL LOCK,	56
CONTROL WHEEL-PADDED	74C
CONTROL WHEEL,	74
CONTROL WHEEL,	74B
CONTROL WHEEL,	89A
CONTROL WHEEL,	74C
CONTROL WHEEL & SWITCHES INSTL	
CONTROL-SEE INSTRUMENT PANEL	
CONTROL-SEE ENGINE INSTL	
CONTROLS-DUAL,	72
CONTROLS-DUAL,	74
CONTROLS-DUAL,	74A
COOLER-OIL, LARGE,	63
COORDINATOR-TURN,	53E
COORDINATOR-TURN	53G
COORDINATOR-TURN	53J
COORDINATOR-TURN	53L
COORDINATOR-TURN,	76B
CORRECTION CARD COVER,	53
CORRECTION CARD-COMPASS,	53
CORRECTION CARD-COMPASS,	57A
CORROSION PROOF PRIMER,	1
COURTESY LIGHT INSTALLATION,	93
COURTESY LIGHT SWITCH,	90
COVER ASSY-REAR SEAT	52
COVER ASSY-REAR SEAT	52A
COVER ASSY-REAR SEAT,	52B
COVER ASSY-FRONT SEAT,	48
COVER ASSY-FRONT SEAT,	49
COVER ASSY-FRONT SEAT,	49A
COVER ASSY-FRONT SEAT,	50
COVER ASSY-FRONT SEAT,	51A
COVER ASSY-FRONT SEAT,	51B

NOMENCLATURE	FIGURE
C (cont)	
COVER-BAGGAGE DOOR POST,	47
COVER-BAGGAGE DOOR POST,	47A
COVER-BAGGAGE DOOR POST,	47B
COVER-BAGGAGE SHELF EDGE,	45
COVER-CONSOLE,	75
COVER-COWL DECK,	45
COVER-COWL DECK,	45A
COVER-COWL WINTERIZATION,	68
COVER-PANEL LIGHT,	91
COVER-RADIO ACCESS,	45
COVER-RADIO ACCESS,	45A
COVER-REAR WINDOW CENTER POST,	45
COVER-REAR WINDOW CENTER POST,	45A
COVER-SHOCK PANEL,	53
COVER-SHOCK PANEL,	53A
COVER-SHOCK PANEL,	53C
COVER-SHOCK PANEL,	53E
COVER-SHOCK PANEL,	53G
COVER-SHOCK PANEL,	53J
COVER-SHOCK PANEL,	53L
COVER-SIDE WINDOW FRAME,	45
COVER-SIDE WINDOW FRAME,	45A
COVER-STATIONARY PANEL	53
COVER-STATIONARY PANEL	53A
COVER-STATIONARY PANEL	53C
COVER-STATIONARY PANEL	53E
COVER-STATIONARY PANEL	53G
COVER-STATIONARY PANEL	53J
COVER-STATIONARY PANEL	53L
COVER-SWITCH PANEL,	54
COVER-WINDSHIELD CENTER STRIP,	45
COVER-WINDSHIELD CENTER STRIP,	45A
COWL ACCESS DOOR,	61
COWL ACCESS DOOR,	61A
COWL ASSEMBLY-ENGINE,	61
COWL ASSEMBLY-ENGINE,	61A
COWL ASSEMBLY-ENGINE	61B
COWL ASSEMBLY-ENGINE	61C
COWL DECK COVER,	45
COWL DECK COVER,	45A
COWL FLAP CONTROL,	67
COWL FLAP LEVER,	75
COWL FLAPS CONTROL SYSTEM INST	67
COWL FLAPS,	61
COWL FLAPS,	61A
CUP-FUEL SAMPLER	56
CUP-WHEEL BEARING,	36
CUP-WHEEL BEARING,	36A
CUP-WHEEL BEARING,	36B
CUP-WHEEL BEARING,	37
CUP-WHEEL BEARING,	37A
CUP-WHEEL BEARING,	37B
CUP-WHEEL BEARING,	40
CUP-WHEEL BEARING,	40A
CURTAIN TRACK,	45
CURTAIN TRACK,	45A
CURTAIN,	45
CURTAIN,	45A
CURTAIN STORAGE RECEPTACLE,	45
CYLINDER & VALVE-OXYGEN,	89
CYLINDER HEAD TEMPERATURE GAGE,	53
CYLINDER HEAD TEMP TRANSMITTER	63
CYLINDER-BRAKE,	72
CYLINDER-BRAKE,	73
CYLINDER-OXYGEN,	89
CYLINDER-OXYGEN,	89A
CYLINDER & VALVE-OXYGEN,	89A

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE

D (cont)

DAMPENER-SHIMMY,	33
DAMPENER-SHIMMY,	38
DECAL-PROP INST INSTRUCTIONS,	59
DECAL-SPRING KIT INSTALLATION,	59
DECALS & PLACARDS,	2
DECK COVER-COWL,	45
DECK COVER-COWL,	45A
DEFLECTOR-EXHAUST HEAT,	63
DEFROSTER NOZZLE,	17
DEFROSTER NOZZLE,	70
DEFROSTER VALVE KNOB,	70
DEFROSTER VALVE,	17
DEFROSTER VALVE,	70
DETECTOR-WING POSITION LIGHT,	3
DIODE,	90
DIRECTIONAL GYRO,	53
DIRECTIONAL GYRO,	87
DIRECTIONAL GYRO,	88
DIRECTIONAL GYRO,	88A
DIRECTIONAL GYRO,	88B
DIRECTIONAL GYRO	88C
DISC CLIP-BRAKE,	40
DISC-BRAKE,	40
DOME LIGHT,	90
DOME-SPINNER,	58
DOME-SPINNER,	58A
DOOR ASSEMBLY-CABIN,	41
DOOR ASSEMBLY-CABIN,	41A
DOOR ASSEMBLY-CABIN,	42
DOOR ASSEMBLY-CABIN,	42A
DOOR ASSEMBLY-MAP COMPARTMENT,	55
DOOR INSTALLATION-BAGGAGE,	44
DOOR JAMB-BAGGAGE,	44
DOOR JAMB-CABIN,	18
DOOR LATCH-BAGGAGE,	44
DOOR LATCH-CABIN,	43
DOOR LATCH-CABIN	43A
DOOR LOCK,	41
DOOR LOCK,	41A
DOOR LOCK,	42
DOOR LOCK,	42A
DOOR PANEL-BAGGAGE,	47
DOOR PANEL-BAGGAGE,	47A
DOOR PANEL-BAGGAGE,	47B
DOOR POST COVER-BAGGAGE,	47
DOOR POST COVER-BAGGAGE,	47A
DOOR POST COVER-BAGGAGE,	47B
DOOR POST SHIELD,	47
DOOR POST SHIELD,	47A
DOOR POST SHIELD,	47B
DOOR PULL,	46
DOOR SILL-BAGGAGE,	25
DOOR SILL-BAGGAGE,	44
DOOR STOP,	41
DOOR STOP,	41A
DOOR STOP,	42
DOOR STOP,	42A
DOOR WEDGE,	16
DOOR WEDGE,	41
DOOR WEDGE,	41A
DOOR WEDGE,	42
DOOR WEDGE,	42A
DOOR WINDOW,	41
DOOR WINDOW,	41A
DOOR-AIR VENT,	17
DOOR-AIR VENT,	69
DOOR-COWL ACCESS,	61

NOMENCLATURE	FIGURE

D (cont)

DOOR-MAP CASE,	55
DOOR-OIL,	61
DOOR-POWER RECEPTACLE,	90
DOORPOST BULKHEAD-FRONT,	18
DOORPOST BULKHEAD-REAR,	24
DOORPOST CHANNEL-REAR,	24
DOORPOST-FUSELAGE,	18
DOORPOST-REAR,	23
DORSAL FIN FAIRING,	12
DORSAL FIN FAIRING,	12A
DORSAL FIN FAIRING,	12B
DRAIN CONTROL INST-FUEL STRAINER	83
DRAIN PLUG FUEL,	8
DRAIN TUBE-BATTERY,	30
DRAIN VALVE INSTALLATION-FUEL TANK	8A
DRIVE BELT-ALTERNATOR,	90
DRIVE BELT-ALTERNATOR,	95
DUAL CONTROLS,	72
DUCT-CARBURETOR AIR INTAKE,	61
DUCT-HEATER,	17

E

ECONOMY POWER INDICATOR.	53A
ECONOMY POWER INDICATOR.	53C
ECONOMY POWER INDICATOR.	53E
ECONOMY POWER INDICATOR.	53G
ECONOMY POWER INDICATOR.	53J
ECONOMY POWER INDICATOR.	53L
ELECTRIC CLOCK,	54
ELECTRIC FLAP SYSTEM,	79
ELECTRIC FLAP SWITCH,	53
ELECTRIC FLAP SWITCH,	79
ELECTRICAL EQUIPMENT INSTALLATION,	90
ELECTRICAL TERMINALS,	1
ELECTRICAL WIRE,	1
ELECTROLUMINESCENT PWR SUPPLY.	90
ELEVATOR ASSEMBLY,	15
ELEVATOR CABLE,	77
ELEVATOR CONTROL SYSTEM,	77
ELEVATOR CONTROL TUBE,	74
ELEVATOR CONTROL TUBE,	74A
ELEVATOR HINGE-INBOARD,	14
ELEVATOR HINGE-INBOARD,	15
ELEVATOR HINGE-OUTBOARD,	14
ELEVATOR HINGE-OUTBOARD,	15
ELEVATOR HINGE,	14
ELEVATOR HINGE,	15
ELEVATOR PUSH-PULL TUBE,	77
ELEVATOR TAB STOP BLOCK,	78
ELEVATOR TRIM ACTUATOR,	78
ELEVATOR TRIM CONTROL SYSTEM,	78
ELEVATOR TRIM TAB,	15
EMBLEM CONTROL WHEEL,	74
EMBLEM CONTROL WHEEL,	74A
EMBLEMS,	2
EMBLEMS.	2A
ENGINE ASSEMBLY-CONTINENTAL,	63
ENGINE BAFFLES INSTALLATION,	66
ENGINE COMPONENTS & ACCESSORIES,	63A
ENGINE COWL ASSEMBLY,	61
ENGINE COWL ASSEMBLY,	61A
ENGINE DRIVEN VACUUM SYSTEM INST	87
ENGINE INSTALLATION,	62

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
E (cont)	
ENGINE MOUNT,	63
ENGINE PRIMER,	54
ENGINE SHOCK MOUNT,	63
ENGINE,	63
EQUIPMENT INST-ELECTRICAL,	90
EQUIPMENT INST-FUSELAGE,	56
EQUIPMENT INST-INSTRUMENT PANEL,	53
EQUIPMENT INST-INSTRUMENT PANEL,	53A
EQUIPMENT INST-INSTRUMENT PANEL,	53C
EQUIPMENT INST-INSTRUMENT PANEL,	53E
EQUIPMENT INST-INSTRUMENT PANEL,	53G
EQUIPMENT INST-INSTRUMENT PANEL,	53J
EQUIPMENT INST-INSTRUMENT PANEL,	53L
EQUIPMENT INST-INSTRUMENT PANEL,	53N
EQUIPMENT INST-INSTRUMENT PANEL,	53Q
ESCUTCHEON-DOOR HANDLE,	41
ESCUTCHEON-DOOR HANDLE,	42
ESCUTCHEON-INSTRUMENT PANEL,	65
EXHAUST COLLECTOR,	65
EXHAUST HEAT DEFLECTOR,	63
EXHAUST STACKS,	65
EXTENDED RANGE FUEL TANK,	8
EXTENDED RANGE WING-COMPLETE,	3
EXTERNAL POWER DOOR,	90
EXTERNAL POWER RECEPTACLE,	90
EXTINGUISHER-FIRE,	56
EYEBOLT-HOISTING,	56
EYEBOLT-MOORING,	31
EYEBOLT-TIE DOWN,	56
F	
FACEPLATE-NAVOMATIC FLIGHT CONT.	53
FAIRING-AFT-WING TO FUSELAGE,	3
FAIRING-DORSAL FIN,	12
FAIRING-DORSAL FIN,	12A
FAIRING-DORSAL FIN,	12B
FAIRING-FIN TO FUSELAGE AFT,	12
FAIRING-FIN TO FUSELAGE AFT,	12A
FAIRING-FIN TO FUSELAGE AFT,	12B
FAIRING-LANDING GEAR,	39
FAIRING-LOWER STRUT,	11
FAIRING-MAIN GEAR,	39
FAIRING-NOSE GEAR,	33
FAIRING-STABILIZER LEADING EDGE,	14
FAIRING-STABILIZER,	14
FAIRING-UPPER STRUT,	11
FAIRING-WING TO FUSELAGE,	3
FERRULE-AXLE BOLT,	33
FIBERGLASS SOUNDPROOFING,	47C
FILLER VALVE-OXYGEN,	89
FILLER VALVE-OXYGEN,	89A
FILLET-WING TO FUSELAGE.	3
FILLET-WING TO FUSELAGE,	16
FILTER-CARBURETOR AIR,	63
FILTER-CARBURETOR AIR,	63A
FILTER-OIL,	86
FIN TIP,	12
FIN TIP,	12A
FIN TIP,	12B
FIN TIP,	92
FIN,	12
FIN,	12A
FIN,	12B
FINISH & TRIM PLATE,	2
FINISH & TRIM PLATE.	2A
F (cont)	
FINISH & TRIM PLATE,	16
FIRE EXTINGUISHER,	56
FIREWALL,	21
FIREWALL	21A
FIREWALL	21B
FIREWALL COVER,	45
FIREWALL COVER,	45A
FIREWALL COVER	45B
FIREWALL GROMMETS INSTALLATION,	22
FIREWALL UPHOLSTERY,	45
FIREWALL UPHOLSTERY,	45A
FIREWALL UPHOLSTERY.	45B
FITTING-FRONT SPAR STRUT,	6
FITTING-LUBRICATOR,	35
FITTING-NOSE GEAR LOWER,	17
FITTING-NOSE GEAR UPPER,	17
FITTING-SAFETY BELT,	16
FITTING-SAFETY BELT,	51A
FITTING-SPAR AFT,	24
FITTING-WING STRUT,	11
FLAP ACTUATOR MOTOR,	79
FLAP ACTUATOR TRANSMISSION,	79
FLAP CABLE,	79
FLAP CONTROL TUBE,	79
FLAP CONTROLS DETAIL INST.	79A
FLAP CONTROLS DETAIL INST.	79B
FLAP INDICATOR,	53
FLAP INDICATOR,	79
FLAP INSTALLATION-WING,	10
FLAP MOTOR HINGE,	79
FLAP POSITION TRANSMITTER ARM,	79
FLAP POSITION TRANSMITTER,	79
FLAP PUSH-PULL ROD,	10
FLAP SWITCH,	53
FLAP SWITCH,	79
FLAP SWITCH.	79A
FLAP SWITCH.	79B
FLAP SYSTEM INSTALLATION-ELECTRIC,	79
FLAP TRANSMISSION & MOTOR,	79
FLAP-COWL,	61
FLAP-COWL,	61A
FLAP-WING,	10
FLASHER-NAVIGATION LIGHT,	55
FLASHER-NAVIGATION LIGHT,	90
FLASHING BEACON,	92A
FLOATING INSTRUMENT PANEL COVER,	53
FLOORBOARD-AFT CABIN,	25
FLOORBOARD-CENTER,	25
FLOORBOARD-FRONT,	17
FORK & BARREL ASSEMBLY-NOSE GEAR,	35
FORWARD CABIN SIDE PANEL,	47
FORWARD CABIN SIDE PANEL,	47A
FORWARD CABIN SIDE PANEL,	47B
FORWARD CABIN TOP,	23
FORWARD CARPET,	47
FORWARD CARPET,	47A
FORWARD FUSELAGE SPAR,	18
FRAME-WINDOW,	41
FRONT DOORPOST BULKHEAD,	18
FRONT FLOORBOARD,	17
FRONT SEAT INSTALLATION,	48
FRONT SEAT INSTALLATION,	49
FRONT SEAT INSTALLATION,	49A
FRONT SEAT INSTALLATION,	49B
FRONT SEAT INSTALLATION,	49C
FRONT SEAT INSTALLATION-ADJ.	50
FRONT SEAT INSTALLATION-ADJ.	51A
FRONT SEAT INSTALLATION-ADJ.	51D

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
F (cont)	
FRONT SEAT INSTALLATION-ADJ.	51E
FRONT SEAT INSTALLATION-ADJ.	51F
FRONT SEAT INSTALLATION-POWER,	51B
FRONT SECTION TUNNEL COMPONENTS,	20
FRONT SECTION-FUSELAGE,	17
FRONT SECTION-FUSELAGE	17A
FRONT SPAR BLOCK,	18
FRONT SPAR BLOCK,	56
FRONT SPAR STRUT FITTING,	6
FRONT SPAR-WING,	6
FUEL CAP & ADAPTER,	8
FUEL GAGE,	53
FUEL GAGE,	53A
FUEL GAGE,	53C
FUEL GAGE,	53E
FUEL GAGE.	53G
FUEL GAGE.	53J
FUEL GAGE.	53L
FUEL PRIMER SYSTEM INSTALLATION,	84
FUEL SELECTOR VALVE GEAR ASSEMBLY,	82
FUEL SELECTOR VALVE GEAR ASSEMBLY,	82A
FUEL SELECTOR VALVE HANDLE,	82
FUEL SELECTOR VALVE HANDLE,	82A
FUEL SELECTOR VALVE PLACARD,	2
FUEL SELECTOR VALVE PLACARD.	2A
FUEL SELECTOR VALVE PLACARD,	82
FUEL SELECTOR VALVE PLACARD,	82A
FUEL SELECTOR VALVE,	82
FUEL SELECTOR VALVE,	82A
FUEL STRAINER BODY,	82
FUEL STRAINER BODY,	84A
FUEL STRAINER DRAIN CONTROL,	53A
FUEL STRAINER DRAIN CONTROL,	54
FUEL STRAINER DRAIN CONTROL,	83
FUEL STRAINER,	82
FUEL STRAINER,	83
FUEL STRAINER,	84A
FUEL SYSTEM INSTALLATION,	82
FUEL SYSTEM INSTALLATION,	82A
FUEL TANK DRAIN ADAPTER,	8
FUEL TANK DRAIN PLUG,	8
FUEL TANK DRAIN VALVE INST.	8A
FUEL TANK STRAINER,	8
FUEL TANK VENT LINE,	82
FUEL TANK VENT LINE,	82A
FUEL TANK-EXTENDED RANGE,	8
FUEL TANK,	8
FUEL TRANSMITTER GASKET.	8
FUEL TRANSMITTER & FLOAT,	8
FUEL VENT CARRY THRU LINE,	82
FUEL VENT CARRY THRU LINE,	82A
FUEL VENT VALVE,	8
FULL FLOW OIL FILTER,	86
FUSE HOLDER,	90
FUSELAGE AFT TAILCONE,	31
FUSELAGE AFT TAILCONE,	31A
FUSELAGE ASSEMBLY,	16
FUSELAGE BAGGAGE DOOR INST,	44
FUSELAGE CENTER SECTION,	23
FUSELAGE CENTER SECTION,	23A
FUSELAGE EQUIPMENT INSTALLATION,	56
FUSELAGE FRONT SECTION,	17
FUSELAGE FRONT SECTION	17A
FUSELAGE INSIGNIA,	2
FUSELAGE TAILCONE,	29
FUSELAGE TAILCONE.	29A
FUSELAGE TAILCONE.	29B

NOMENCLATURE	FIGURE
G	
GAGE-CARBURETOR AIR TEMPERATURE,	53
GAGE-CARBURETOR AIR TEMPERATURE,	53A
GAGE-CARBURETOR AIR TEMPERATURE,	53C
GAGE-CARBURETOR AIR TEMPERATURE,	53E
GAGE-CARBURETOR AIR TEMPERATURE.	53G
GAGE-CARBURETOR AIR TEMPERATURE.	53J
GAGE-CARBURETOR AIR TEMPERATURE.	53L
GAGE-CYLINDER HEAD TEMPERATURE,	53
GAGE-CYLINDER HEAD TEMPERATURE,	53A
GAGE-CYLINDER HEAD TEMPERATURE,	53C
GAGE-CYLINDER HEAD TEMPERATURE,	53E
GAGE-CYLINDER HEAD TEMPERATURE	53G
GAGE-CYLINDER HEAD TEMPERATURE	53J
GAGE-CYLINDER HEAD TEMPERATURE	53L
GAGE-FUEL,	53
GAGE-FUEL,	53A
GAGE-FUEL,	53C
GAGE-FUEL,	53E
GAGE-FUEL.	53G
GAGE-FUEL.	53J
GAGE-FUEL.	53L
GAGE-MANIFOLD PRESSURE,	53
GAGE-MANIFOLD PRESSURE,	53A
GAGE-MANIFOLD PRESSURE	53C
GAGE-MANIFOLD PRESSURE	53E
GAGE-MANIFOLD PRESSURE	53G
GAGE-MANIFOLD PRESSURE	53J
GAGE-MANIFOLD PRESSURE	53L
GAGE-OIL PRESSURE,	53
GAGE-OIL PRESSURE,	53A
GAGE-OIL PRESSURE,	53C
GAGE-OIL PRESSURE,	53E
GAGE-OIL PRESSURE.	53G
GAGE-OIL PRESSURE.	53J
GAGE-OIL PRESSURE.	53L
GAGE-OIL PRESSURE,	86
GAGE-OIL TEMPERATURE,	53
GAGE-OIL TEMPERATURE,	53A
GAGE-OIL TEMPERATURE,	53C
GAGE-OIL TEMPERATURE,	53E
GAGE-OIL TEMPERATURE	53G
GAGE-OIL TEMPERATURE	53J
GAGE-OIL TEMPERATURE	53L
GAGE-OIL TEMPERATURE,	86
GAGE-OUTSIDE AIR TEMPERATURE,	56
GAGE-OXYGEN PRESSURE	89B
GAGE-OXYGEN PRESSURE	89C
GAGE-OXYGEN PRESSURE,	89A
GAGE-SUCTION,	53
GAGE-SUCTION,	53A
GAGE-SUCTION,	53C
GAGE-SUCTION,	53E
GAGE-SUCTION	53G
GAGE-SUCTION	53J
GAGE-SUCTION	53L
GAGE-SUCTION,	87
GAS CAP,	8
GAS GAGE,	53
GAS GAGE,	53A
GAS GAGE,	53C
GAS GAGE,	53E
GAS-GAGE	53G
GAS GAGE	53J
GAS GAGE	53L
GAS TANK,	8
GASKET-CARBURETOR AIR BOX,	63
GASKET-CARBURETOR AIR BOX.	63B

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
G (cont)	
GASKET-FUEL TRANSMITTER,	8
GEAR ASSEMBLY-SELECTOR VALVE,	82
GENERATOR BLAST TUBE,	63
GLASS-DOOR WINDOW,	41
GLASS-DOOR WINDOW,	42
GLASS-SIDE WINDOW,	23
GLASS-WINDOW REAR,	28
GLIDER TOW HOOK,	56
GLOVE BOX DOOR,	55
GLOVE BOX,	55
GOODYEAR NOSE WHEEL,	36
GOVERNOR ASSEMBLY-PROPELLER,	64
GOVERNOR ASSEMBLY-PROPELLER,	64A
GOVERNOR ASSEMBLY-PROPELLER,	64B
GOVERNOR ASSEMBLY-PROPELLER,	64C
GREASE SEAL-NOSE WHEEL,	37
GREASE SEAL-NOSE WHEEL,	37A
GREASE SEAL-NOSE WHEEL,	37B
GROMMET-ASBESTOS,	22
GROMMET-FIREWALL,	22
GYRO-DIRECTIONAL,	53
GYRO-DIRECTIONAL,	53A
GYRO-DIRECTIONAL,	53C
GYRO-DIRECTIONAL,	53E
GYRO-DIRECTIONAL	53G
GYRO-DIRECTIONAL	53J
GYRO-DIRECTIONAL	53L
GYRO-DIRECTIONAL,	87
GYRO-DIRECTIONAL,	88
GYRO-DIRECTIONAL,	88A
GYRO-DIRECTIONAL,	88B
GYRO-DIRECTIONAL	88C
GYRO-HORIZONTAL,	53
GYRO-HORIZONTAL,	53A
GYRO-HORIZONTAL,	53C
GYRO-HORIZONTAL,	53E
GYRO-HORIZONTAL	53G
GYRO-HORIZONTAL	53J
GYRO-HORIZONTAL	53L
GYRO-HORIZONTAL,	87
GYRO-HORIZONTAL,	88
GYRO-HORIZONTAL,	88A
GYRO-HORIZONTAL,	88B
GYRO-HORIZONTAL	88C
GYRO-PICTORIAL,	53
H	
HANDLE-FUEL SELECTOR VALVE,	82
HANDLE-FUEL SELECTOR VALVE,	82A
HANDLE-INSIDE DOOR,	41
HANDLE-INSIDE DOOR,	42
HANDLE-LATCH-CABIN DOOR,	43
HANDLE-PARKING BRAKE,	71
HANDLE-PARKING BRAKE,	71A
HANDLE-SEAT	48
HANDLE-SEAT	49
HANDLE-SEAT	49A
HANDLE-SEAT	50
HANDLE-SEAT	51
HANDLE-SEAT	51A
HANGER HOOK-COAT,	45
HANGER HOOK-COAT,	45A
HARNESS-SHOULDER,	56
HARTZELL PROPELLER,	60

NOMENCLATURE	FIGURE
H (cont)	
HEADLINER,	45
HEADLINER,	45A
HEADLINER	45B
HEADLINER RETAINER,	23
HEADLINER RETAINER,	28A
HEADREST,	49
HEADREST,	49A
HEADREST,	50
HEADREST,	52
HEADREST,	51A
HEADREST	51D
HEADREST,	52A
HEAT CONTROL-CABIN,	53
HEAT CONTROL-CABIN,	53A
HEAT CONTROL-CABIN,	53C
HEAT CONTROL-CABIN,	53E
HEAT CONTROL-CABIN	53G
HEAT CONTROL-CABIN	53J
HEAT CONTROL-CABIN	53L
HEAT CONTROL-CARBURETOR,	53
HEAT CONTROL-CARBURETOR,	53A
HEAT CONTROL-CARBURETOR,	53C
HEAT CONTROL-CARBURETOR,	53E
HEAT CONTROL-CARBURETOR	53G
HEAT CONTROL-CARBURETOR	53J
HEAT CONTROL-CARBURETOR	53L
HEAT CONTROL-CARBURETOR,	62
HEATED PITOT INSTALLATION,	81
HEATER DUCT,	17
HEATER HOSE,	63
HEATER-PITOT,	81
HEATING & DEFROSTING SYSTEM,	70
HINGE-AILERON,	9
HINGE-BAGGAGE DOOR,	44
HINGE-DOOR STOP,	41
HINGE-DOOR STOP,	42
HINGE-ELEVATOR,	14
HINGE-ELEVATOR,	15
HINGE-FLAP MOTOR,	79
HINGE-HALF-TRIM TAB,	15
HINGE-MAP CASE,	55
HINGE-OIL DOOR,	61
HINGE-WINDOW,	41
HOISTING EYEBOLT,	56
HOOK-COAT HANGER,	45
HOOK-COAT HANGER,	45A
HOOK-GLIDER TOW,	56
HORIZONTAL GYRO,	87
HORIZONTAL GYRO,	88
HORIZONTAL GYRO,	88A
HORIZONTAL GYRO,	88B
HORIZONTAL GYRO	88C
HORN-STALL WARNING,	55
HORN-STALL WARNING,	90
HORN-TRIM TAB,	15
HOUSING-BRAKE,	40
HOW TO USE CATALOG	PAGE I
HUB CAP,	39
HUB CAP	39A
I	
SPROCKET-IDLER	75
IGNITION SWITCH,	54
INDEX-NUMERICAL	PAGE 217

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
I (cont)	
IGNITION SWITCH KIT	54
INDICATOR LIGHT-VACUUM	53
INDICATOR-AIRSPEED	53
INDICATOR-AIRSPEED	53A
INDICATOR-AIRSPEED	53C
INDICATOR-AIRSPEED	53E
INDICATOR-AIR SPEED	53G
INDICATOR-AIRSPEED	53J
INDICATOR-AIRSPEED	53L
INDICATOR-AIRSPEED	53N
INDICATOR-AIRSPEED	53Q
INDICATOR-AIRSPEED	81
INDICATOR-DIRECTIONAL GYRO	53
INDICATOR-DIRECTIONAL GYRO	53A
INDICATOR-DIRECTIONAL GYRO	53C
INDICATOR-DIRECTIONAL GYRO	53E
INDICATOR-DIRECTIONAL GYRO	53G
INDICATOR-DIRECTIONAL GYRO	53J
INDICATOR-DIRECTIONAL GYRO	53L
INDICATOR-DIRECTIONAL GYRO	53N
INDICATOR-DIRECTIONAL GYRO	53Q
INDICATOR-DIRECTIONAL GYRO	88
INDICATOR-DIRECTIONAL GYRO	88A
INDICATOR-DIRECTIONAL GYRO	88B
INDICATOR-ECONOMY POWER	53A
INDICATOR-ECONOMY POWER	53C
INDICATOR-ECONOMY POWER	53E
INDICATOR-ECONOMY POWER	53G
INDICATOR-ECONOMY POWER	53J
INDICATOR-ECONOMY POWER	53L
INDICATOR-ECONOMY POWER	53N
INDICATOR-ECONOMY POWER	53Q
INDICATOR-FLAP	53
INDICATOR-FLAP	53A
INDICATOR-FLAP	53C
INDICATOR-FLAP	79
INDICATOR-GYRO HORIZON	53
INDICATOR-GYRO HORIZON	53A
INDICATOR-GYRO HORIZON	53C
INDICATOR-GYRO HORIZON	53E
INDICATOR-GYRO HORIZON	53G
INDICATOR-GYRO HORIZON	53J
INDICATOR-GYRO HORIZON	53L
INDICATOR-GYRO HORIZON	53N
INDICATOR-GYRO HORIZON	53Q
INDICATOR-GYRO HORIZON	53G
INDICATOR-GYRO HORIZON	53J
INDICATOR-GYRO HORIZON	53L
INDICATOR-GYRO HORIZON	53N
INDICATOR-GYRO HORIZON	53Q
INDICATOR-GYRO HORIZON	88
INDICATOR-GYRO HORIZON	88A
INDICATOR-GYRO HORIZON	88B
INDICATOR-STABILIZER TRIM	75
INDICATOR-TURN & BANK	53
INDICATOR-TURN & BANK	53A
INDICATOR-TURN & BANK	53C
INDICATOR-TURN & BANK	53E
INDICATOR-TURN & BANK	53G
INDICATOR-TURN & BANK	53J
INDICATOR-TURN & BANK	53L
INDICATOR-TURN & BANK	53N
INDICATOR-TURN & BANK	53Q
INDICATOR-VERTICAL SPEED	53
INDICATOR-VERTICAL SPEED	53A
INDICATOR-VERTICAL SPEED	53C
INDICATOR-VERTICAL SPEED	53E
INDICATOR-VERTICAL SPEED	53G
I (cont)	
INDICATOR-VERTICAL SPEED	53J
INDICATOR-VERTICAL SPEED	53L
INDICATOR-VERTICAL SPEED	53N
INDICATOR-VERTICAL SPEED	53Q
INDICATOR-VERTICAL SPEED	81
INFLATION VALVE-TUBELESS TIRE	56
INLET ASSEMBLY-AIR VENT	17
INSIGNIA-FUSELAGE	2
INSIGNIA-FUSELAGE	2A
INSIGNIAS	2
INSIGNIAS	2A
INSTRUMENT CLUSTER	53
INSTRUMENT CLUSTER	53A
INSTRUMENT CLUSTER	53C
INSTRUMENT CLUSTER	53E
INSTRUMENT CLUSTER	53G
INSTRUMENT CLUSTER	53J
INSTRUMENT CLUSTER	53L
INSTRUMENT CLUSTER	53N
INSTRUMENT CLUSTER	53Q
INSTRUMENT PANEL COVER	53
INSTRUMENT PANEL COVER	53A
INSTRUMENT PANEL COVER	53C
INSTRUMENT PANEL COVER	53E
INSTRUMENT PANEL COVER	53G
INSTRUMENT PANEL COVER	53J
INSTRUMENT PANEL COVER	53L
INSTRUMENT PANEL COVER	53N
INSTRUMENT PANEL COVER	53Q
INSTRUMENT PANEL EQUIPMENT INST	53
INSTRUMENT PANEL EQUIPMENT INST	53A
INSTRUMENT PANEL EQUIPMENT INST	53C
INSTRUMENT PANEL EQUIPMENT INST	53E
INSTRUMENT PANEL EQUIPMENT INST	53G
INSTRUMENT PANEL EQUIPMENT INST	53J
INSTRUMENT PANEL EQUIPMENT INST	53L
INSTRUMENT PANEL EQUIPMENT INST	53N
INSTRUMENT PANEL EQUIPMENT INST	53Q
INSTRUMENT PANEL LIGHT COVER	91
INSTRUMENT PANEL LIGHT INST	91
INSTRUMENT PANEL POST LIGHTS	53B
INSTRUMENT PANEL POST LIGHTS	53D
INSTRUMENT PANEL POST LIGHTS	53F
INSTRUMENT PANEL POST LIGHTS	53H
INSTRUMENT PANEL POST LIGHTS	53K
INSTRUMENT PANEL POST LIGHTS	53M
INSTRUMENT PANEL POST LIGHTS	53P
INSTRUMENT PANEL POST LIGHTS	53R
INVERTER-WING LEVELER	76B
J	
JACK POINT-MAIN GEAR	56
JACK-MICROPHONE	54
JAMB-BAGGAGE DOOR	23
JAMB-CABIN DOOR	18
K	
KITS-ACCESSORY-SEE KITS CATALOG	
KNOB-CABIN VENT	69
KNOB-CABIN VENT	69A
KNOB-CIGAR LIGHTER	53
KNOB-CIGAR LIGHTER	53A

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
K (cont)	
KNOB-CIGAR LIGHTER,	53C
KNOB-CIGAR LIGHTER,	53E
KNOB-CIGAR LIGHTER	53G
KNOB-CIGAR LIGHTER	53J
KNOB-CIGAR LIGHTER	53L
KNOB-COWL FLAP LEVER,	75
KNOB-DEFROSTER VALVE ASSEMBLY,	70
KNOB-FLAP SWITCH,	53
KNOB-FLAP SWITCH,	53A
KNOB-FLAP SWITCH,	53C
KNOB-FLAP SWITCH	53G
KNOB-FLAP SWITCH	53J
KNOB-FLAP SWITCH	53L
KNOB-FRONT SEAT LATCH,	50
KNOB-MAP CASE DOOR,	55
KNOB-PRIMER,	54
KNOB-RHEOSTAT,	54
KNOB-SCREW HANDLE ADJ FRONT SEAT,	51
KNOB-SCREW HANDLE ADJ FRONT SEAT,	51A
KNOB-SEAT LATCH HANDLE,	48
KNOB-SEAT LATCH HANDLE,	49
KNOBS-SEE INDIVIDUAL APPLICATIONS	
L	
LAMP-DOME,	90
LAMP-FLASHING BEACON,	92A
LAMP-INSTRUMENT PANEL LIGHT,	91
LAMP-NAVIGATION,	3
LAMP-ROTATING BEACON,	92
LAMP-TAIL LIGHT,	32
LANDING GEAR AXLE-MAIN,	39
LANDING GEAR BULKHEAD,	26
LANDING GEAR BULKHEAD,	26A
LANDING GEAR FAIRING,	39
LANDING GEAR FAIRING	39A
LANDING GEAR INSTALLATION-MAIN,	39
LANDING GEAR INSTALLATION-MAIN	39A
LANDING GEAR SPRING-MAIN,	39
LANDING GEAR SPRING	39A
LANDING LIGHT WINDOW,	3
LANDING LIGHT,	3
LARGE OIL COOLER INSTALLATION,	63
LATCH BOLT-DOOR,	43
LATCH BOLT-DOOR,	43A
LATCH HANDLE-CABIN DOOR,	43
LATCH HANDLE-CABIN DOOR,	43A
LATCH PIN-ADJUSTABLE FRONT SEAT,	51
LATCH PLATE-SKYLANE WINDOW,	41
LATCH PLATE-WINDOW,	41
LATCH-BAGGAGE DOOR,	44
LATCH-CABIN DOOR,	43
LATCH-CABIN DOOR,	43A
LATCH-REAR SEAT,	52
LATCH-WINDOW,	41
LEADING EDGE FAIRING-STABILIZER,	14
LEADING EDGE-WING	5
LEADING EDGE-WING	5A
LENS-TAIL LIGHT,	32
LEVELER-WING	76B
LEVER-COWL FLAP,	75
LIGHT-BROW	90A
LIGHT-DOME,	90
LIGHT INSTALLATION-COURTESY,	93
LIGHT INSTALLATION-INSTRUMENT,	53B
LIGHT INSTALLATION-INSTRUMENT,	53D
L (cont)	
LIGHT INSTALLATION-INSTRUMENT,	53F
LIGHT INSTALLATION-INSTRUMENT	53H
LIGHT INSTALLATION-INSTRUMENT	53K
LIGHT INSTALLATION-INSTRUMENT	53M
LIGHT INSTALLATION-INSTRUMENT,	91
LIGHT INSTRUMENT PANEL,	91
LIGHT-LANDING,	3
LIGHT-POST,	53B
LIGHT-POST,	53D
LIGHT-POST,	53F
LIGHT-POST	53H
LIGHT-POST	53K
LIGHT-POST	53M
LIGHT-TAIL,	32
LIGHT-WING NAVIGATION,	3
LIGHTER-CIGAR,	53
LIGHTER-CIGAR,	53A
LIGHTER-CIGAR,	53C
LIGHTER-CIGAR	53E
LIGHTER-CIGAR	53G
LIGHTER-CIGAR	53J
LIGHTER-CIGAR	53L
LIMITATIONS PLACARD-OPERATIONAL,	2
LIMITATIONS PLACARD-OPERATIONAL	2A
LIMITATIONS PLACARD-OPERATIONAL,	53
LIMITATIONS PLACARD-OPERATIONAL,	55
LINE-BRAKE,	39
LINE-BRAKE	39A
LINE-BRAKE,	71
LINE-BRAKE,	71A
LINE-CYLINDER PRIMER,	63
LINE-FUEL	82
LINE MANIFOLD PRESSURE,	62
LINE-PRIMER,	62
LINE-PRIMER,	82
LINE-VENT,	8
LINING-BRAKE,	40
LINK DUAL CONTROLS,	72
LINK-TORQUE LOWER,	35
LINK-TORQUE UPPER,	35
LIST OF BULK ITEMS,	1
LOAD LIMIT PLACARD-BAGGAGE,	2
LOAD LIMIT PLACARD-BAGGAGE	2A
LOAD LIMIT PLACARD-BAGGAGE,	47
LOAD LIMIT PLACARD-BAGGAGE,	47A
LOAD LIMIT PLACARD-BAGGAGE,	47B
LOCK-BAGGAGE DOOR,	44
LOCK-CONTROL,	56
LOCK-DOOR,	41
LOCK-DOOR,	42
LONG RANGE FUEL TANK,	8
LONG RANGE WING COMPLETE,	3
LOUVER-COWL,	61
LOUVER-COWL,	61A
LOWER CABIN SECTION,	25
LOWER COWL,	61
LOWER COWL,	61A
LOWER CUSHION,	50
LOWER NOSE CAP,	61
LOWER NOSE CAP,	61A
LUBRICATION-FITTING,	35
M	
MAG SWITCH,	54
M.A.A. NAMEPLATE	16

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
M (cont)	
MAIN GEAR STEP,	39
MAIN GEAR STEP	39A
MAIN GEAR WHEEL & BRAKE,	39
MAIN GEAR WHEEL & BRAKE,	39A
MAIN GEAR WHEEL & BRAKE,	40
MAIN LANDING GEAR AXLE,	39
MAIN LANDING GEAR AXLE	39A
MAIN LANDING GEAR INSTALLATION,	39
MAIN LANDING GEAR INSTALLATION	39A
MAIN LANDING GEAR INSTALLATION	39B
MAIN LANDING GEAR SPEED FAIRING,	39
MAIN LANDING GEAR SPEED FAIRING,	39A
MAIN LANDING GEAR SPRING,	39
MAIN LANDING GEAR SPRING	39A
MANIFOLD PRESSURE GAGE,	53
MANIFOLD PRESSURE GAGE,	53A
MANIFOLD PRESSURE GAGE,	53C
MANIFOLD PRESSURE GAGE,	53E
MANIFOLD PRESSURE-GAGE	53G
MANIFOLD PRESSURE LINE,	62
MANIFOLD TEMPERATURE-GAGE	53G
MANIFOLD PRESSURE GAGE	53J
MANIFOLD PRESSURE GAGE	53L
MAP COMPARTMENT INSTALLATION,	55
MAP COMPARTMENT INSTALLATION,	55A
MAP COMPARTMENT DOOR,	55
MASK-OXYGEN,	89
MASK-OXYGEN,	89A
MASK-OXYGEN,	89B
MASTER CYLINDER BODY,	73
MASTER CYLINDER HOSE,	71
MASTER CYLINDER HOSE	71A
MASTER CYLINDER PISTON,	73
MASTER SWITCH KIT,	54
MCCAULEY PROPELLER,	59
MCCAULEY PROPELLER,	59A
MEDALLION,	53
METERING PIN ASSEMBLY,	35
METERING PIN BASE,	35
MICROPHONE JACK,	54
MIRROR-REAR VIEW,	57A
MIRROR-REAR VIEW,	57B
MISCELLANEOUS BULK ITEMS,	1
MIXTURE CONTROL,	53
MIXTURE CONTROL,	53A
MIXTURE CONTROL,	53C
MIXTURE CONTROL,	53E
MIXTURE CONTROL,	62
MOORING EYEBOLT,	31
MOORING EYEBOLT,	31A
MOORING RING,	11
MOTOR & TRANSMISSION-FLAP,	79
MOTOR-FLAP ACTUATOR,	79
MOULDING-AFT WINDOW,	45
MOULDING-AFT WINDOW,	45A
MOULDING-AFT WINDOW	45B
MOUNT-ENGINE,	63
MUFFLER ASSEMBLY,	65
N	
NAMEPLATES,	2
NAMEPLATES	2A
NAMEPLATE-M.A.A.	16
NAVIGATION LIGHT BULB,	3
NAVIGATION LIGHT FLASHER,	55
N (cont)	
NAVIGATION LIGHT FLASHER,	90
NAVIGATION LIGHT-WING,	3
NAVOMATIC-SEE ELECTRONICS MANUAL	
NET-BAGGAGE,	47A
NET-BAGGAGE,	47B
NOSE CAP-LOWER,	61
NOSE CAP-LOWER,	61A
NOSE CAP-UPPER,	61
NOSE CAP-UPPER,	61A
NOSE GEAR FORK & BARREL ASSEMBLY,	35
NOSE GEAR INSTALLATION,	33
NOSE GEAR SHOCK STRUT,	35
NOSE GEAR SPEED FAIRING,	33
NOSE GEAR STEERING BELLCRANK,	34
NOSE GEAR STEERING BUNGEE,	34
NOSE GEAR STEERING SYSTEM,	34
NOSE GEAR-LOWER FITTING,	17
NOSE GEAR-UPPER FITTING,	17
NOSE WHEEL GREASE SEAL,	37
NOSE WHEEL GREASE SEAL,	37A
NOSE WHEEL GREASE SEAL,	37B
NOSE WHEEL GREASE SEAL RING,	37
NOSE WHEEL GREASE SEAL RING,	37A
NOSE WHEEL GREASE SEAL RING,	37B
NOSE WHEEL-CLEVELAND,	37
NOSE WHEEL-CLEVELAND,	37A
NOSE WHEEL-CLEVELAND,	37B
NOSE WHEEL-GOODYEAR,	36
NOZZLE-DEFROSTER,	17
NOZZLE-DEFROSTER,	70
NUMERICAL INDEX	PAGE 392
O	
OIL COOLER-LARGE,	63
OIL DILUTION INSTALLATION,	86
OIL DILUTION SWITCH,	86
OIL DOOR,	61
OIL DOOR,	61A
OIL FILTER,	86
OIL PLACARD,	2
OIL PLACARD,	2A
OIL PLACARD,	55
OIL PRESSURE GAGE,	53
OIL PRESSURE GAGE,	53A
OIL PRESSURE GAGE,	53C
OIL PRESSURE GAGE,	53E
OIL PRESSURE GAGE,	53G
OIL PRESSURE GAGE,	53J
OIL PRESSURE GAGE,	53L
OIL PRESSURE GAGE,	86
OIL PRESSURE HOSE,	63
OIL PRESSURE HOSE,	86
OIL RETURN HOSE,	87
OIL SEPARATOR,	87
OIL SYSTEM INSTALLATION,	86
OIL TEMPERATURE ADAPTER,	62
OIL TEMPERATURE GAGE,	53
OIL TEMPERATURE GAGE,	53A
OIL TEMPERATURE GAGE,	53C
OIL TEMPERATURE GAGE	53E
OIL TEMPERATURE GAGE	53G
OIL TEMPERATURE GAGE	53J
OIL TEMPERATURE GAGE	53L
OIL TEMPERATURE GAGE,	86
OPERATIONAL LIMITATIONS PLACARD,	2

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE

O (cont)

OPERATIONAL LIMITATIONS PLACARD	2A
OPERATIONAL LIMITATIONS PLACARD	53
OPERATIONAL LIMITATIONS PLACARD	53A
OPERATIONAL LIMITATIONS PLACARD	53C
ORFICE PISTON SUPPORT ASSEMBLY	35
OUTLET-CABIN VENTILATION	69
OUTSIDE AIR TEMPERATURE GAGE	56
OUTSIDE AIR VENT INSTALLATION-FWD	69
OVERHEAD LIGHT	91A
OXYGEN CYLINDER & VALVE	89
OXYGEN CYLINDER & VALVE	89A
OXYGEN CYLINDER & VALVE	89B
OXYGEN CYLINDER & VALVE	89C
OXYGEN MASK	89
OXYGEN MASK CASE	89
OXYGEN MASK CASE	89A
OXYGEN PRESSURE GAGE	89A
OXYGEN PRESSURE GAGE	89B
OXYGEN PRESSURE GAGE	89C
OXYGEN SYSTEM	89
OXYGEN SYSTEM	89A
OXYGEN SYSTEM	89B
OXYGEN SYSTEM	89C

P

PAD-WINDSHIELD	22
PAINT CHART	PAGE III
PANEL-UPHOLSTERY	45
PANEL-UPHOLSTERY	45A
PANEL-UPHOLSTERY	45B
PANEL-UPHOLSTERY	47
PANEL-UPHOLSTERY	47A
PANEL-UPHOLSTERY	47B
PANEL-DOOR UPHOLSTERY	46
PANEL-SHOCK	53
PANEL-STATIONARY INSTRUMENT	17
PANEL-SWITCH	54
PARKING BRAKE BELLCRANK	71
PARKING BRAKE BELLCRANK	71A
PARKING BRAKE HANDLE	71
PARKING BRAKE HANDLE	71A
PARKING BRAKE INSTALLATION	71
PARKING BRAKE INSTALLATION	71A
PEDAL-BRAKE & RUDDER	72
PEDESTAL COVER-CONTROL	75
PEDESTAL INSTALLATION-CONTROL	75
PEDESTAL STRUCTURE-CONTROL	19
PEDESTAL STRUCTURE-CONTROL	75
PICTORIAL GYROS	53
PICTORIAL GYROS	87
PISTON-MASTER CYLINDER	73
PISTON-SHIMMY DAMPENER	38
PITOT HEATER	81
PITOT SYSTEM	81
PITOT TUBE	81
PITOT-HEATED	81
PLACARDS & DECALS	2
PLACARDS & DECALS	2A
PLASTIC-HOW TO ORDER	PAGE XIII
PLATE-BRAKE DISC COVER	39
PLATE-BRAKE DISC COVER	39A
PLATE-FINISH & TRIM	2
PLATE-FINISH & TRIM	2A
PLATE-FINISH & TRIM	16
PLATE-SKYLANE WINDOW LATCH	41

P (cont)

PLATE-STRIKE, BAGGAGE DOOR	44
PLATE-WINDOW LATCH	41
PLUG BUTTON-ANTI-FRICTION	10
PLUG-FUEL TANK DRAIN	8
POINTER-TRIM CONTROL	75
POLYETHLENE TUBE	81
PORTABLE STRETCHER INSTALLATION	57
POSITION LIGHT DETECTOR-WING	3
POSITION LIGHT FLASHER-WING	55
POSITION LIGHT FLASHER-WING	90
POSITION LIGHT-WING	3
POSITION TRANSMITTER-FLAP	79
POST LIGHTING	53B
POST LIGHTING	53D
POST LIGHTING	53F
POST LIGHTING	53H
POST LIGHTING	53K
POST LIGHTING	53M
POST LIGHTING	53P
POST LIGHTING	53R
POST LIGHTING	53B
POWER SEAT INSTALLATION	1
PRIMER CORROSION PROOF	62
PRIMER LINE	63
PRIMER LINE	84
PRIMER SYSTEM-FUEL	54
PRIMER-ENGINE	59
PROPELLER ASSEMBLY	60
PROPELLER ASSEMBLY	59A
PROPELLER ASSEMBLY	59A
PROPELLER CONTROL	53
PROPELLER CONTROL	53A
PROPELLER CONTROL	53C
PROPELLER CONTROL	53E
PROPELLER CONTROL	53G
PROPELLER CONTROL	53J
PROPELLER CONTROL	53L
PROPELLER CONTROL	62
PROPELLER GOVERNOR ASSEMBLY	64
PROPELLER GOVERNOR ASSEMBLY	64A
PROPELLER GOVERNOR ASSEMBLY	64B
PROPELLER GOVERNOR ASSEMBLY	64C
PROPELLER INSTALLATION	58
PROPELLER INSTALLATION	58A
PROPELLER SPINNER BULKHEAD	58
PROPELLER SPINNER BULKHEAD	58A
PROPELLER SPINNER-HARTZELL	58
PROPELLER SPINNER-MCCAULEY	58
PROPELLER SPINNER DOME	58
PROPELLER SPINNER DOME	58A
PULL BAR-LATCH	43
PULL-DOOR	46
PULLEYS-SEE INDIVIDUAL INST.	
PUMP-VACUUM	87
PUSH-PULL ROD FLAP	10
PUSH-PULL ROD-AILERON	9
PUSH-PULL TUBE-ELEVATOR	77
PYLON-ELEVATOR	15

R

RADIO ACCESS COVER	45
RADIO ACCESS COVER	45A
RADIO INSTL SEE CESSNA ELEC MANUAL	
RADIO SHELF	29
RATE OF CLIMB INDICATOR	53

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
R (cont)	
RATE OF CLIMB INDICATOR,	53A
RATE OF CLIMB INDICATOR,	53C
RATE OF CLIMB INDICATOR,	53E
RATE OF CLIMB INDICATOR.	53G
RATE OF CLIMB INDICATOR.	53J
RATE OF CLIMB INDICATOR.	53L
RATE OF CLIMB INDICATOR,	81
REAR DOORPOST BULKHEAD,	24
REAR DOORPOST CHANNEL,	24
REAR DOORPOST,	23
REAR SEAT INSTALLATION,	52
REAR SEAT INSTALLATION,	52A
REAR SEAT INSTALLATION,	52B
REAR SEAT VENTS INSTALLATION,	69
REAR SEAT VENTS INSTALLATION,	69A
REAR SPAR BLOCK,	56
REAR SPAR-STABILIZER,	14
REAR SPAR-WING,	6
REAR SPAR FUSELAGE,	24
REAR VIEW MIRROR INSTALLATION.	57B
REAR WINDOW CENTER POST COVER,	45
REAR WINDOW CENTER POST COVER,	45A
REAR WINDOW INSTALLATION,	28
REAR WINDOW INSTALLATION,	28A
RECEPTACLE-ASH,	47
RECEPTACLE-ASH,	47A
RECEPTACLE-ASH,	47B
RECEPTACLE-ASH,	51A
RECEPTACLE-CURTAIN STORAGE,	45
RECEPTACLE-EXTERNAL POWER,	90
RECLINER CAM-SEAT BACK,	51
REGULATOR-VOLTAGE,	90
RELIEF VALVE-VACUUM,	87
RELIEF VALVE-VACUUM,	88
RELIEF VALVE-VACUUM,	88A
RELIEF VALVE-VACUUM,	88B
RELIEF VALVE-VACUUM.	88C
RETAINER ASSEMBLY-COMPASS CARD,	53
RETAINER-ASH RECEIVER,	47
RETAINER-ASH RECEIVER,	47A
RETAINER-ASH RECEIVER,	47B
RETAINER-CARPET,	47
RETAINER-CARPET,	47A
RETAINER-CARPET,	47B
RETAINER-DEFROST OUTLET,	45
RETAINER-DEFROST OUTLET,	45A
RETAINER-HEADLINER,	23
RETAINER-HEADLINER,	28A
RETAINER-HEADREST,	50
RETAINER-RADIO ACCESS COVER,	45
RETAINER-WINDOW,	28
RETAINER-WINDOW,	28A
RHEOSTAT,	54
RING-GREASE SEAL-NOSE WHEEL,	37
RING-HOISTING,	56
RING-MOORING,	11
RING-MOORING,	31
RING-MOORING,	31A
RING-TIE DOWN,	56
ROD END-THROTTLE CONTROL,	62
ROD-AILERON PUSH-PULL,	9
ROD-FLAP PUSH PULL,	10
ROLLER-SEAT,	48
ROLLER-SEAT,	49
ROLLER-SEAT,	49A
ROLLER-SEAT,	51A
ROLLER-SEAT,	51C
ROLLER-SEAT,	51A

NOMENCLATURE	FIGURE
R (cont)	
ROTATING BEACON,	92
ROTATING BEACON BULB,	92
ROTOR-FUEL SELECTOR VALVE,	84
RUDDER & BRAKE PEDALS,	72
RUDDER BALANCE WEIGHT,	13
RUDDER BAR ARM,	72
RUDDER BAR BEARING,	72
RUDDER BAR SHIELD,	47
RUDDER BELLCRANK,	13
RUDDER CABLE,	80
RUDDER CONTROL SYSTEM INSTALLATION,	80
RUDDER PEDAL,	72
RUDDER STOP,	80
RUDDER TRIM BUNGEE,	34
RUDDER TRIM CHAIN,	80
RUDDER TRIM SPROCKET,	75
RUDDER TRIM WHEEL,	75
RUDDER-SWEPT,	13
S	
SAFETY BELT,	48
SAFETY BELT,	49
SAFETY BELT,	49A
SAFETY BELT,	49B
SAFETY BELT,	49C
SAFETY BELT,	50
SAFETY BELT,	51A
SAFETY BELT,	51B
SAFETY BELT.	52
SAFETY BELT.	52A
SAFETY BELT,	52B
SAFETY BELT EXT-PORTABLE STRETCHER	57
SCOOP-CABIN AIR VENT,	5
SCRAPER-WHEEL FAIRING,	33
SCRAPER-WHEEL FAIRING,	39
SCRAPER-WHEEL FAIRING.	39A
SCREW-BLEEDER-BRAKE,	40
SCUFF PLATE-BAGGAGE DOOR,	47
SCUFF PLATE-BAGGAGE DOOR,	47A
SCUFF PLATE-BAGGAGE DOOR,	47B
SEAL-BAFFLE,	66
SEAL-BFARING-MAIN WHEEL,	40
SEAL-BLEEDER SCREW,	40
SEAL-WINDOW,	23
SEAL-WINDOW,	41
SEALANTS,	1
SEAT BELT,	48
SEAT BELT,	49
SEAT BELT,	49A
SEAT BELT,	49B
SEAT BELT,	49C
SEAT BELT,	50
SEAT BELT,	51A
SEAT BELT,	51B
SEAT BELT.	52
SEAT BELT,	52A
SEAT BELT,	52B
SEAT BOTTOM MECH INSTL-ADJUSTABLE,	51
SEAT BOTTOM MECH INSTL-ADJUSTABLE,	51A
SEAT INSTALLATION-ADJUSTABLE FRONT,	50
SEAT INSTALLATION-ADJUSTABLE FRONT,	51A
SEAT INSTALLATION-AUXILIARY,	52B
SEAT INSTALLATION-AUXILIARY,	52C
SEAT INSTALLATION-FRONT,	48
SEAT INSTALLATION-FRONT,	49
SEAT INSTALLATION-FRONT,	49A
SEAT INSTALLATION-FRONT,	49B

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
S (cont)	
SEAT INSTALLATION-FRONT,	49C
SEAT INSTALLATION-FRONT,	51D
SEAT INSTALLATION-FRONT,	51E
SEAT INSTALLATION-POWER,	51B
SEAT INSTALLATION-REAR,	52
SEAT INSTALLATION-REAR,	52A
SEAT INSTALLATION-REAR,	52B
SEAT RAIL,	25
SEAT ROLLER,	48
SEAT ROLLER,	49
SEAT ROLLER,	49A
SEAT ROLLER,	51A
SEAT ROLLER,	51C
SELECTOR VALVE ASSEMBLY-FUEL,	82
SELECTOR VALVE ASSEMBLY-FUEL,	82A
SENSITIVE ALTIMETER,	53
SEPARATOR-OIL,	87
SERVO ASSY-WING LEVELER,	76B
SHAFT-TACHOMETER,	53
SHAFT-TACHOMETER,	53A
SHAFT-TACHOMETER,	53C
SHAFT-TACHOMETER,	53E
SHAFT-TACHOMETER	53G
SHAFT-TACHOMETER	53J
SHAFT-TACHOMETER	53L
SHELF-RADIO EQUIPMENT,	29
SHIELD-CABIN AIR,	45
SHIELD-CABIN AIR,	45A
SHIELD-CABLE,	45
SHIELD-CABLE,	45A
SHIELD-FIREWALL GROMMET,	22
SHIELD-RUDDER BAR,	47
SHIELD-RUDDER BAR,	47A
SHIELD-RUDDER BAR,	47B
SHIM-MAIN LANDING GEAR,	39
SHIM-MAIN LANDING GEAR	39A
SHIMMY DAMPENER,	33
SHIMMY DAMPENER,	38
SHOCK MOUNT-ENGINE,	63
SHOCK MOUNT-INSTRUMENT PANEL,	53
SHOCK MOUNT-INSTRUMENT PANEL,	53A
SHOCK MOUNT-INSTRUMENT PANEL,	53C
SHOCK MOUNT-INSTRUMENT PANEL,	53E
SHOCK MOUNT-INSTRUMENT PANEL	53G
SHOCK MOUNT-INSTRUMENT PANEL	53J
SHOCK MOUNT-INSTRUMENT PANEL	53L
SHOCK STRUT PLACARD,	2
SHOCK STRUT PLACARD,	35
SHOCK STRUT-NOSE GEAR,	35
SHOULDER HARNESS,	56
SILL-LOWER CABIN DOOR,	25
SILL-UPPER BAGGAGE DOOR,	23
SILL-UPPER CABIN DOOR,	23
SKINS & STRINGERS INST-WING,	7
SKINS & STRINGERS INST-WING,	7A
SKYLANE WINDOW LATCH PLATE,	41
SOLENOID VALVE-OIL DILUTION,	86
SOUNDPROOFING INSTALLATION,	47C
SOUNDPROOFING INSTALLATION	47D
SOUNDPROOFING INSTALLATION	47E
SPACER-AXLE,	33
SPAR BLOCK-FRONT,	18
SPAR BLOCK-FRONT,	56
SPAR BLOCK-REAR,	56
SPAR-AILERON,	9
SPAR-ELEVATOR,	15
SPAR-FLAP,	10
SPAR-FORWARD FUSELAGE,	18

NOMENCLATURE	FIGURE
S (cont)	
SPAR-OUTBOARD AUXILIARY,	6
SPAR-REAR,	24
SPAR-STABILIZER REAR,	14
SPAR-TRIM TAB,	15
SPAR-WING FRONT,	6
SPAR-WING FRONT,	6A
SPAR-WING REAR,	6
SPAR-WING REAR,	6A
SPEAKER, SEE CESSNA ELEC MANUAL	
SPEED FAIRING INSTL-MAIN GEAR,	39
SPEED FAIRING INSTL-MAIN GEAR,	39A
SPEED FAIRING-H/D MAIN WHEEL,	39
SPEED FAIRING-H/D MAIN WHEEL	39A
SPEED FAIRING-NOSE GEAR,	33
SPINNER,	58
SPINNER,	58A
SPRING-DOOR HANDLE,	41
SPRING-DOOR HANDLE,	42
SPRING-DOOR LATCH,	43
SPRING-DOOR STOP,	41
SPRING-DOOR STOP,	42
SPRING-MAIN LANDING GEAR,	39
SPRING-MAIN LANDING GEAR	39A
SPROCKET-AILERON CONTROL,	74
SPROCKET-RUDDER TRIM,	75
STABILIZER ABRASION BOOT,	14
STABILIZER ABRASION BOOT,	14A
STABILIZER ASSEMBLY,	14
STABILIZER ASSEMBLY,	14A
STABILIZER FAIRING,	14
STABILIZER FAIRING,	14A
STABILIZER TRIM INDICATOR,	75
STABILIZER TRIM WHEEL,	75
STACKS-EXHAUST,	65
STAINLESS STEEL CABLES,	76
STAINLESS STEEL CABLES,	76A
STAINLESS STEEL CABLES,	77
STAINLESS STEEL CABLES,	79
STAINLESS STEEL CABLES,	80
STALL WARNING HORN BRACKET,	55
STALL WARNING HORN,	55
STALL WARNING HORN,	90
STALL WARNING WING UNIT,	3
STARTER CONTACTOR,	90
STARTER SWITCH KIT,	54
STARTING VIBRATOR,	90
STATIC SOURCE-ALTERNATE,	81
STATIC SOURCE SUMP,	81
STATIONARY INSTRUMENT PANEL,	17
STEERING BELLCRANK-NOSE GEAR,	34
STEERING BOOT,	17
STEERING SYSTEM-NOSE GEAR,	34
STEP TREAD,	39
STEP TREAD	39A
STEP-MAIN GEAR,	39
STEP-MAIN GEAR	39A
STINGER ASSEMBLY,	32
STOP-CABIN DOOR,	41
STOP-CABIN DOOR,	42
STOP-DOOR,	41
STOP-SEAT,	48
STOP-SEAT,	49
STOP-SEAT,	49A
STOP-SEAT,	49B
STOP-SEAT,	49C
STOP-SEAT,	50
STOP-SEAT,	51A
STOP-SEAT,	51B

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
S (cont)	
STRAINER BODY-FUEL,	83
STRAINER BODY-FUEL,	84A
STRAINER DRAIN CONTRCL,	53A
STRAINER DRAIN CONTRCL,	53C
STRAINER DRAIN CONTRCL,	54
STRAINER DRAIN CONTRCL,	83
STRAINER-FUEL,	83
STRAINER-FUEL,	84A
STRAINER-FUEL TANK FCRWARD,	8
STRAP-ASSIST,	47
STRAP-ASSIST,	47A
STRAP-ASSIST,	47B
STRAP-BATTERY GROUND,	90
STRETCHER INSTALLATICN-PORTABLE,	57
STRIKE PLATE-BAGGAGE DOOR,	44
STRINGERS & SKINS-WING,	7
STRIP-WINDSHIELD CENTER,	27
STROBE LIGHT	3
STRUCTURE ASSEMBLY-CONSOLE,	75
STRUCTURE ASSY-FUS FRONT SECT.	17
STRUCTURE-CABIN DOOR,	41
STRUCTURE-CABIN DOOR,	42
STRUCTURE-WING,	4
STRUCTURE-WING,	4A
STRUCTURE-WING,	4B
STRUT FAIRING,	11
STRUT FITTING-FRONT SPAR,	6
STRUT WING,	11
SUCTION GAGE,	53
SUCTION GAGE,	53A
SUCTION GAGE,	53C
SUCTION GAGE,	53E
SUCTION GAGE	53G
SUCTION GAGE	53J
SUCTION GAGE	53L
SUCTION GAGE,	87
SUCTION GAGE,	88
SUCTION GAGE,	88A
SUCTION GAGE,	88B
SUCTION GAGE	88C
SUMP-STATIC SOURCE,	81
SUN VISOR,	56
SUPPORT-ARM REST,	25
SUPPORT-ARM REST,	41
SWITCH PANEL INSTALLATION,	54
SWITCH-CONTROL WHEEL	74B
SWITCH-DOME LIGHT,	90
SWITCHES INSTL-CONTRCL WHEEL	74C
SWITCH-SEE INSTRUMENT PANEL.	53
SWITCH-UTILITY,	90
T	
TAB STOP BLOCK-ELEVATOR,	78
TACHOMETER,	53
TACHOMETER,	53A
TACHOMETER,	53C
TACHOMETER,	53E
TACHOMETER	53G
TACHOMETER	53J
TACHOMETER	53L
TACHOMETER SHAFT,	53
TACHOMETER SHAFT,	53A
TACHOMETER SHAFT,	53C
TACHOMETER SHAFT,	53E
TACHOMETER-SHAFT	53G

NOMENCLATURE	FIGURE
T (cont)	
TACHOMETER SHAFT	53J
TACHOMETER SHAFT	53L
TAG-100 OCTANE,	8
TAIL LIGHT,	32
TAILCONE ASSEMBLY-FUSELAGE,	29
TAILCONE ASSEMBLY-FUSELAGE,	29A
TAILCONE ASSEMBLY-FUSELAGE	29B
TAILCONE-FUSELAGE AFT,	31
TAILCONE-FUSELAGE AFT,	31A
TANK-FUEL,	8
TEMPERATURE GAGE-CYLINDER HEAD,	53
TEMPERATURE GAGE-CYLINDER HEAD,	53A
TEMPERATURE GAGE-CYLINDER HEAD,	53C
TEMPERATURE GAGE-CYLINDER HEAD,	53E
TEMPERATURE GAGE-CYLINDER HEAD	53G
TEMPERATURE GAGE-CYLINDER HEAD	53J
TEMPERATURE GAGE-CYLINDER HEAD	53L
TEMPERATURE GAGE-OIL,	53
TEMPERATURE GAGE-OIL,	53A
TEMPERATURE GAGE-OIL,	53C
TEMPERATURE GAGE-OIL,	53E
TEMPERATURE GAGE-OIL	53G
TEMPERATURE GAGE-OIL	53J
TEMPERATURE GAGE-OIL	53L
TEMPERATURE GAGE-OIL,	86
TEMPERATURE GAGE-OUTSIDE AIR,	56
TERMINALS-ELECTRICAL,	1
THERMOCOUPLE-ENGINE,	63
THROTTLE CONTROL,	53
THROTTLE CONTROL,	53A
THROTTLE CONTROL,	53C
THROTTLE CONTROL,	53E
THROTTLE CONTROL	53G
THROTTLE CONTROL	53J
THROTTLE CONTROL	53L
THROTTLE CONTROL,	62
TIARA ASSEMBLY,	45
TIARA ASSEMBLY,	45A
TIARA ASSEMBLY	45B
TIE DOWN ASSEMBLY-CARGO,	56
TIE DOWN ASSEMBLY-CARGO,	47A
TIE DOWN ASSEMBLY-CARGO,	47B
TIE DOWN EYEBOLT,	56
TIE DOWN EYEBOLT,	47A
TIE DOWN EYEBOLT,	47B
TIP-WING,	3
TIP-ELEVATOR,	15
TIP-FIN,	92
TIP-RUDDER,	13
TIP-STABILIZER,	14
TIRE PRESSURE PLACARD,	2
TIRE PRESSURE PLACARD.	2A
TIRE PRESSURE PLACARD,	55
TIRE-TUBELESS,	36
TIRE-TUBELESS,	37
TIRE-TUBELESS,	40
TIRE-TUBE TYPE,	40A
TORQUE ARM-NOSE GEAR STEERING,	33
TORQUE LINK,	35
TOW BAR,	56
TOW HOOK-GLIDER,	56
TRACK-CURTAIN,	45
TRACK-CURTAIN,	45A
TRANSMISSION & MOTOR ASSEMBLY-FLAP,	79
TRANSMITTER & FLOAT-FUEL,	8
TRANSMITTER ARM-FLAP POSITION,	79
TRANSMITTER-CYLINDER HEAD TEMP,	63
TRANSMITTER-FLAP,	79

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE

T (cont)

TRAY-ASH RECEIVER,	47
TRAY-ASH RECEIVER,	47A
TRAY-ASH RECEIVER,	47B
TRAY-ASH RECEIVER,	51A
TREAD-STEP,	39
TREAD-STEP	39A
TRIM BUNGEE-RUDDER,	34
TRIM CONTROL POINTER,	75
TRIM CONTROL SYSTEM-ELEVATOR,	70
TRIM PLATE-SEAT BACK HANDLE,	50
TRIM TAB ACTUATOR BRACKET,	14
TRIM TAB-ELEVATOR,	15
TRIM WHEEL RUDDER,	75
TRIM WHEEL-STABILIZER,	75
TUBE & BEARING ASSY-AIL CONTROL,	74
TUBE ASSEMBLY-AILERON CONTROL,	74
TUBE-AIR DUCT DRAIN,	69
TUBE-AXLE,	33
TUBE-BATTERY-DRAIN,	30
TUBE-BREATHER LINE FORWARD,	63
TUBE-ELEVATOR CONTROL,	74
TUBE-ELEVATOR CONTROL,	74A
TUBE-ELEVATOR PUSH-PULL,	77
TUBE-FLAP-CONTROL,	79
TUBE-GENERATOR BLAST,	63
TUBE-L SHAPED PITOT,	81
TUBE-POLYETHLENE,	81
TUBE-RUDDER BAR,	72
TUBE SHOCK STRUT,	35
TUBE TYPE TIRE,	43A
TUBELESS TIRE INFLATION VALVE,	56
TUBELESS TIRE,	36
TUBELESS TIRE,	37
TUBELESS TIRE,	40
TUNNEL COMPONENTS-FRONT SECTION,	20
TUNNEL-CARPET ASSEMBLY,	47
TUNNEL-CARPET ASSEMBLY,	47A
TURN & BANK INDICATOR,	53
TURN & BANK INDICATOR,	53A
TURN & BANK INDICATOR,	53C
TURN & BANK INDICATOR,	53E
TURN COORDINATOR,	53E
TURN COORDINATOR	53G
TURN COORDINATOR	53J
TURN COORDINATOR	53L
TURN COORDINATOR,	76B

U

UPHOLSTERY INSTALLATION-CABIN DOOR,	46
UPHOLSTERY INST-CABIN TOP.	45
UPHOLSTERY INST-CABIN TOP.	45A
UPHOLSTERY INSTALLATION-CABIN TOP.	45B
UPHOLSTERY INST-CABIN SIDE	47
UPHOLSTERY INST-CABIN SIDE	47A
UPHOLSTERY INST-CABIN SIDE	47B
UPHOLSTERY-HOW TO ORDER	PAGE XII
UTILITY SWITCH,	90

V

VACUUM INDICATOR LIGHT,	53
VACUUM LIGHTS TEST-PLACARD,	2
VACUUM LIGHTS TEST-PLACARD	2A
VACUUM LIGHTS TEST-PLACARD,	53
VACUUM SYSTEM INSTALLATION,	87
VACUUM SYSTEM INSTALLATION,	88
VACUUM SYSTEM INSTALLATION,	88A
VACUUM SYSTEM INSTALLATION,	88B
VACUUM SYSTEM INSTALLATION	88C
VACUUM TEST SWITCH,	53
VALVE ROTOR-FUEL SELECTOR,	84
VALVE-CARBURETOR AIRBOX,	63
VALVE-DEFROSTER,	17
VALVE-DEFROSTER,	70
VALVE-FUEL SELECTOR,	82
VALVE-FUEL SELECTOR,	82A
VALVE-OIL DILUTION SOLENOID,	86
VALVE-OXYGEN,	89
VALVE-OXYGEN,	89A
VALVE-RELIEF,	87
VALVE-RELIEF,	88
VALVE-RELIEF,	88A
VALVE-RELIEF,	88B
VALVE-RELIEF	88C
VALVE-SHOCK STRUT,	35
VALVE-TUBELESS TIRE INFLATION,	56
VALVE-VENT,	8
VALVE-WARM AIR,	70
VENT CONTROL-AIR,	69
VENT CONTROL-AIR,	69A
VENT LINE-FUEL,	8
VENT VALVE FUEL,	8
VENTILATION SYSTEM-CABIN,	69
VENTILATION SYSTEM-CABIN,	69A
VERTICAL SPEED INDICATOR,	53
VERTICAL SPEED INDICATOR,	53A
VERTICAL SPEED INDICATOR,	53C
VERTICAL SPEED INDICATOR,	53E
VERTICAL SPEED INDICATOR	53G
VERTICAL SPEED INDICATOR	53J
VERTICAL SPEED INDICATOR	53L
VERTICAL SPEED INDICATOR,	81
VERTICALLY ADJUSTABLE FRONT SEAT,	50
VERTICALLY ADJUSTABLE FRONT SEAT,	51A
VIBRATOR-STARTING,	56
VISOR-SUN,	56
VOLTAGE REGULATOR,	90

W

WARM AIR VALVE,	70
WARNING HORN-STALL,	55
WARNING HORN-STALL,	90
WEATHERSTRIP-DOOR,	41
WEATHERSTRIP-DOOR,	42
WEDGE-DOOR,	41
WEDGE-DOOR,	42
WEIGHT-AILERON BALANCE,	9
WEIGHT-ELEVATOR BALANCE,	15
WEIGHT-PROPELLER BALANCE,	59
WEIGHT-RUDDER BALANCE,	13
WHEEL & BRAKE-MAIN GEAR,	39
WHEEL & BRAKE-MAIN GEAR,	40
WHEEL BEARING CUP,	36
WHEEL BEARING CUP,	36A
WHEEL BEARING CUP,	36B
WHEEL BEARING CUP,	37
WHEEL BEARING CUP,	37A
WHEEL BEARING CUP,	37B

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE
W (cont)	
WHEEL BEARING CUP,	40
WHEEL-CONTROL,	74
WHEEL-CONTROL,	74A
WHEEL-CONTROL,	89A
WHEEL-NOSE GEAR GOODYEAR,	36
WHEEL-NOSE GEAR CLEVELAND.	36A
WHEEL-NOSE GEAR CLEVELAND,	37
WHEEL-NOSE GEAR CLEVELAND,	37A
WHEEL-NOSE GEAR CLEVELAND,	37B
WHEEL-RUDDER TRIM,	75
WHEEL-STABILIZER TRIM,	75
WINDLACE-DOOR,	47
WINDLACE-DOOR,	47A
WINDLACE-DOOR,	47B
WINDSHIELD CENTER STRIP COVER,	45
WINDSHIELD CENTER STRIP COVER,	45A
WINDOW FRAME COVER-SIDE,	45
WINDOW FRAME COVER-SIDE,	45A
WINDOW FRAME,	41
WINDOW HINGE,	41
WINDOW LATCH,	41
WINDOW SEAL,	23
WINDOW SEAL,	41
WINDOW-DOOR,	41
WINDOW-LANDING LIGHT,	3
WINDOW-REAR,	28
WINDOW-REAR,	28A
WINDOW-SIDE,	23
WINDOW-SIDE,	28A
WINDSHIELD CENTER STRIP COVER,	45
WINDSHIELD,	27
WINDSHIELD,	27A
WING FAIRING,	3
WING FILLET-WING TO FUSELAGE,	16
WING FLAP INSTALLATION,	10
WING FLAPS SYSTEM,	79
WING FRONT SPAR,	6
WING LANDING LIGHT,	3
WING LEADING EDGE,	5
WING LEADING EDGE,	5A
WING LEADING EDGE,	5B
WING LEVELER INSTALLATION.	76B
WING POSITION LIGHT DETECTOR,	3
WING POSITION LIGHT FLASHER,	55
WING POSITION LIGHT FLASHER,	90
WING REAR SPAR,	6
WING SKINS & STRINGERS,	7
WING SKINS & STRINGERS,	7A
WING SPAR ASSEMBLIES	6A
WING STRUCTURE,	4
WING STRUCTURE,	4A
WING STRUCTURE,	4B
WING STRUT,	11
WING TIP,	3
WING UNIT-STALL WARNING,	3
WING-COMPLETE,	3
WINTERIZATION EQUIPMENT INST,	68
WINTERIZATION EQUIPMENT INST,	68A
WINTERIZATION EQUIPMENT INST,	68B
WINTERIZATION PLACARD,	2
WINTERIZATION PLACARD,	2A
WINTERIZATION PLACARD,	68
WINTERIZATION PLACARD,	68A
WINTERIZATION PLACARD,	68B


PARTS LISTING

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7		UNITS PER ASSY	USABLE ON CODE
1 -		MISCELLANEOUS BULK ITEMS ----------		AR	
- 1	C1-C2	CONLEY-WELD EPOXY BASE ADHESIVE.	CEMENTING ---------- PLASTIC TO PLASTIC PLASTIC TO METAL FIBERGLASS TO FIBERGLASS FIBERGLASS TO METAL METAL TO METAL		
- 2	EC880	ADHESIVE-SYNTHETIC RUBBER BASE OIL RESISTANT	CEMENTING ---------- RUBBER TO METAL SOUNDPROOFING TO METAL UPHOLSTERY TO METAL		
- 3	1024A-B	CEMENT PARTS A & B	CEMENTING DE-ICER ---------- AND ABRASION BOOTS TO WING AND STAB- ILIZER LEADING EDGES.		
- 4	1007	PRIMER	USED ONLY FOR PRIMING ------- AREAS WHERE DE-ICER AND ABRASION BOOTS ARE TO BE INSTALLED WITH 1024A-B.		
- 5	576.1	SEALANT-EXTRUDED PERMAGUM	WEATHER SEALING ---------- OF WINDSHIELD OR CABIN.		
- 6	579.6	SEALANT-EXTRUDED ZINC CHROMATE	WEATHER SEALING ---------- OF WINDSHIELD OR CABIN.		
- 7	S1078-1	SEALANT-SYNTHETIC RUBBER-FABRIC REINFORCED .06 THICK .50 WIDE	WINDSHIELD SEALING ----------		
- 8	S1078-2	SEALANT-SYNTHETIC RUBBER-FABRIC REINFORCED .12 THICK .50 WIDE	WINDSHIELD SEALING ----------		
- 9	S1078-3	SEALANT-SYNTHETIC RUBBER-FABRIC REINFORCED 2 MIL MYLAR TAPE BACKING. .06 THICK 1.50 WIDE	WINDSHIELD SEALING ----------		
-10	EC1239A-B	SEALANT-CATALYTIC	GENERAL PURPOSE ---------- FOR FAYING SURFACES- FILLET & RIVET SEALS- FUEL SEALING AND AREAS WHERE SKYDROL IS PRESENT		
-11	700	SEALANT-FIREWALL	SEALING FIREWALL JOINTS ----- AND OPENINGS. WITHSTANDS 2000 DEGREE TEMP FOR 5 MINUTES.		
-12	EC776	ADHESIVE-GASKET FUEL RESISTANT SYNTHETIC RUBBER BASE.	CEMENTING GASKETS ----------		
-13	550	SOUND DEADENER- LIQUID VIBRATION DAMPENER	VIBRATION DAMPENING ---------- CAN BE BRUSHED OR SPRAYED.		
-14	MIL-P-8585	PRIMER-ZINC CHROMATE- GREEN	CORROSION PROOFING ----------		
-14A	EC1675A-B	SEALANT-CATALYTIC	HOPPER ADAPTER TO ---------- HOPPER CANTILEVER WING FUEL BAY	1	
-14B	PR0890	SEALANT-CATALYTIC ALTERNATE FOR EC1675A-B	HOPPER ADAPTER TO ---------- HOPPER CANTILEVER WING FUEL BAY	1	

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
1 -15	S51-4	HOSE-FUEL & OIL-1/4 ID AVAILABLE BY THE FOOT	AR	
	S51-6	HOSE-FUEL & OIL-3/8 ID AVAILABLE BY THE FOOT	AR	
	S51-8	HOSE-FUEL & OIL-1/2 ID AVAILABLE BY THE FOOT	AR	
	S51-10	HOSE-FUEL & OIL-5/8 ID AVAILABLE BY THE FOOT	AR	
	S51-12	HOSE-FUEL & OIL-3/4 ID AVAILABLE BY THE FOOT	AR	
	S51-16	HOSE-FUEL & OIL-1.00 ID AVAILABLE BY THE FOOT	AR	
	S51-32	HOSE-FUEL & OIL-2.00 ID AVAILABLE BY THE FOOT	AR	
-16	S202RB	CHANNEL-EXTRUDED BLACK AVAILABLE BY THE FOOT	AR	
	S202VW	CHANNEL-EXTRUDED WHITE AVAILABLE BY THE FOOT	AR	
-17	S292-1	INSULATION SLEEVING-ELEC-.118 ID AVAILABLE BY THE FOOT	AR	
	S292-2	INSULATION SLEEVING-ELEC-.133 ID AVAILABLE BY THE FOOT	AR	
	S292-3	INSULATION SLEEVING-ELEC-.148 ID AVAILABLE BY THE FOOT	AR	
	S292-4	INSULATION SLEEVING-ELEC-.166 ID AVAILABLE BY THE FOOT	AR	
	S292-5	INSULATION SLEEVING-ELEC-.186 ID AVAILABLE BY THE FOOT	AR	
	S292-6	INSULATION SLEEVING-ELEC-.208 ID AVAILABLE BY THE FOOT	AR	
	S292-8	INSULATION SLEEVING-ELEC-.263 ID AVAILABLE BY THE FOOT	AR	
	S292-11	INSULATION SLEEVING-ELEC-5/16 ID AVAILABLE BY THE FOOT	AR	
	S292-12	INSULATION SLEEVING-ELEC-3/8 ID AVAILABLE BY THE FOOT	AR	
	S292-14	INSULATION SLEEVING-ELEC-1/2 ID AVAILABLE BY THE FOOT	AR	
	S292-16	INSULATION SLEEVING-ELEC-3/4 ID AVAILABLE BY THE FOOT	AR	
	S292-28	INSULATION SLEEVING-ELEC-2-1/2 ID AVAILABLE BY THE FOOT	AR	
-18	S10268G	CLAMP-WRAP TYPE AVAILABLE IN 100 FOOT ROLL	AR	
-19	S1053E7T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 7/8 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E8T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 1.00 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E10T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 1-1/4 DIA	AR	
	S1053K10T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 1-1/4 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E12T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 1-1 1/2 DIA	AR	
	S1053K12T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 1-1/2 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E20T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 2-1/2 DIA	AR	
	S1053K20T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 2-1/2 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E24T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 3.00 DIA	AR	
	S1053K24T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 3.00 DIA	AR	
	S1053K24W	DUCT-FLEXIBLE-SILICONE IMPREGNATED 2 PLY 3.00 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E28T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 3-1/2 DIA	AR	
	S1053K28W	DUCT-FLEXIBLE-SILICONE IMPREGNATED 2 PLY 3-1/2 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
	S1053E32T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 4.00 DIA	AR	
	S1053K32T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 4.00 DIA AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
-20	S1047-1	SEAL-SPONGE RUBBER-1/4 THICK AVAILABLE BY THE FOOT	AR	
	S1047-2	SEAL-SPONGE RUBBER-5/16 THICK AVAILABLE BY THE FOOT	AR	
-21	S1055-1	CHANNEL-EXTRUDED RUBBER AVAILABLE BY THE FOOT	AR	
-22	S1071-1	TUBE-POLYETHYLENE-1/4 DIA AVAILABLE BY THE FOOT	AR	
	S1071-3	TUBE-POLYETHYLENE-3/8 DIA AVAILABLE BY THE FOOT	AR	
	S1071-4	TUBE-POLYETHYLENE-1/2 DIA AVAILABLE BY THE FOOT	AR	
	S1071-5	TUBE-POLYETHYLENE-5/8 DIA AVAILABLE BY THE FOOT	AR	

CONTINUED ON NEXT PAGE

Bulk Items (Cont)

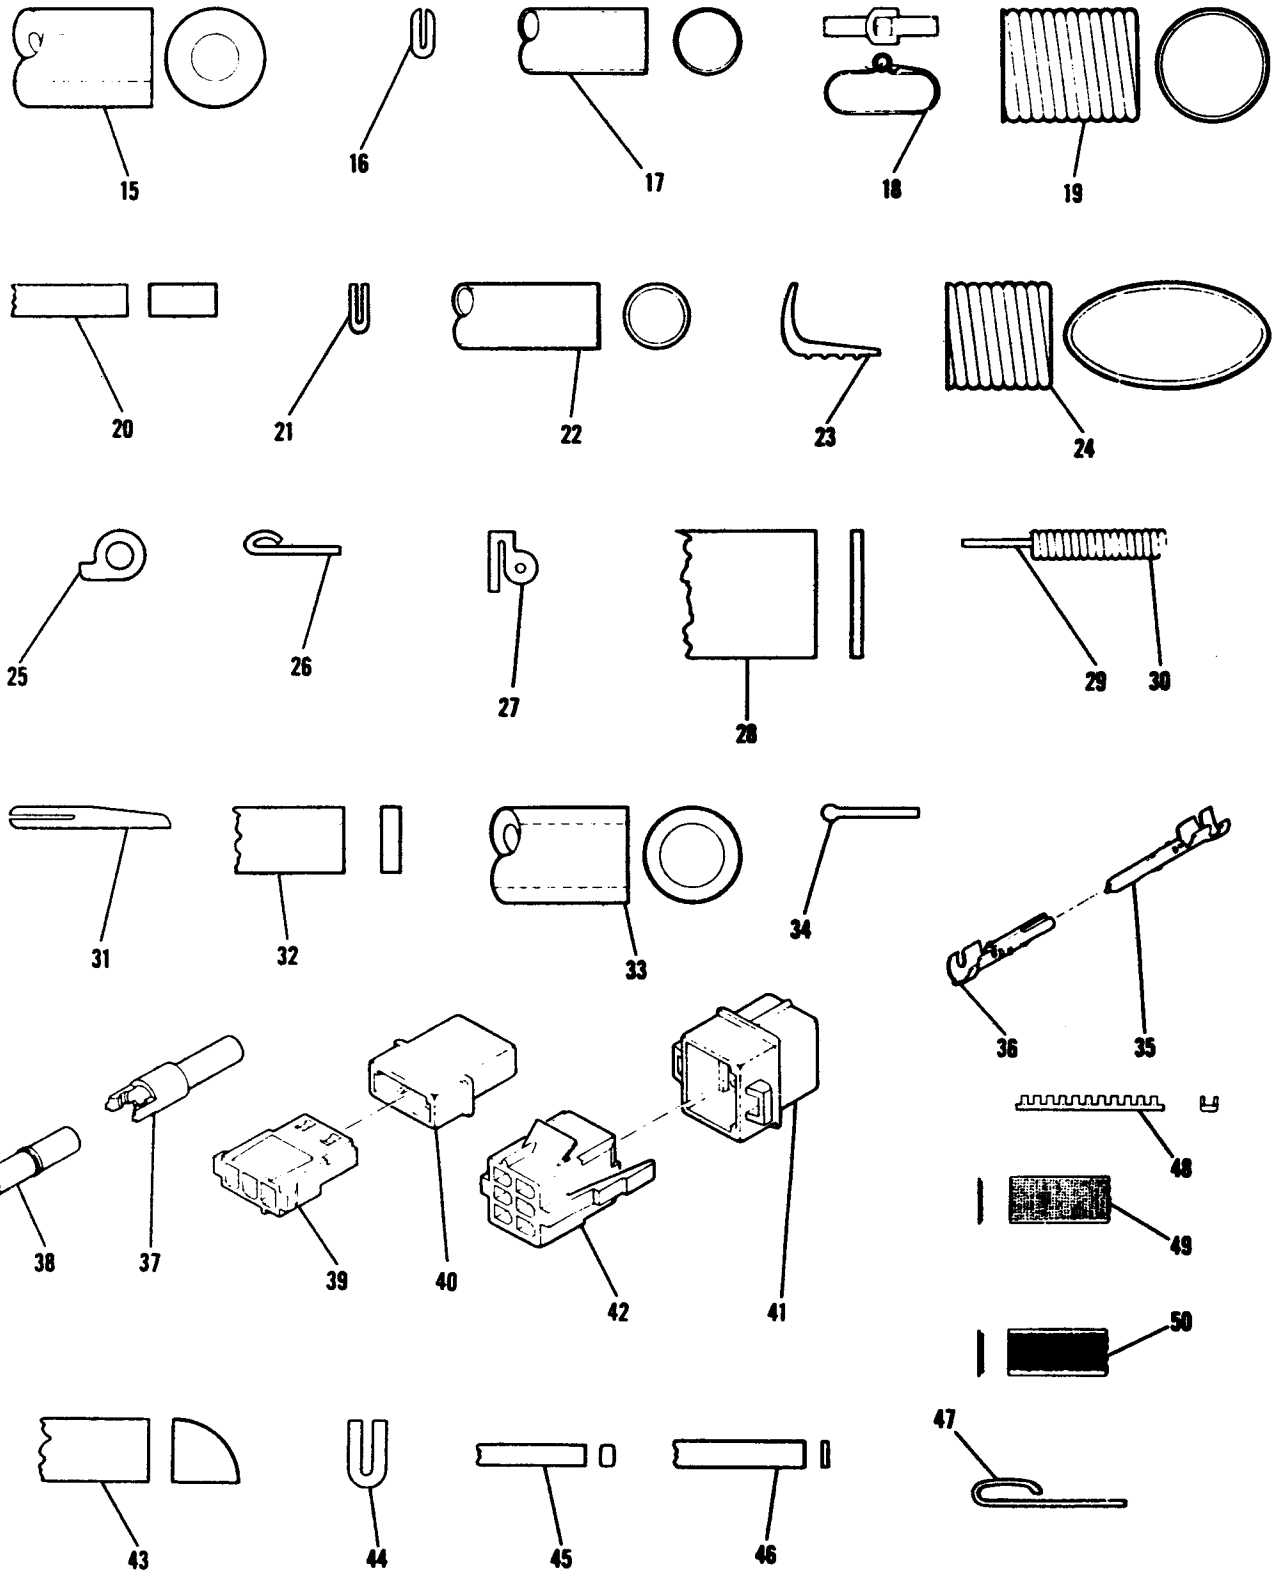


Figure 1. Miscellaneous Bulk Items

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
1 -23	S1084-1	SEAL-EXTRUDED RUBBER AVAILABLE BY THE FOOT	AR	
-24	S1110ET	DUCT-OVAL-FLEXIBLE-NEOPRENE IMPREGNATED AVAILABLE IN 10 FOOT LENGTHS ONLY	AR	
-25	S1346-1	SEAL-SPONGE RUBBER AVAILABLE IN 12 FT LENGTHS ONLY	AR	
-26	S1366-1	MOULDING-EXTRUDED PLASTIC-SAND AVAILABLE BY THE FOOT	AR	
	S1366-2	MOULDING-EXTRUDED PLASTIC-FAWN AVAILABLE BY THE FOOT	AR	
	S1366-3	MOULDING-EXTRUDED PLASTIC-BLACK AVAILABLE BY THE FOOT	AR	
-27	S1378-1	SEAL-SPONGE RUBBER-BEIGE AVAILABLE IN 7 FT LENGTHS ONLY	AR	
	S1378-2	SEAL-SPONGE RUBBER-CLOUD GRAY AVAILABLE IN 7 FT LENGTHS ONLY	AR	
-28	S1389-1	SEALER STRIP-FELT-1.00 WIDE AVAILABLE BY THE FOOT	AR	
	S1389-12	SEALER STRIP-FELT-1/4 WIDE AVAILABLE BY THE FOOT	AR	
	S1389-3	SEALER STRIP-FELT-2.00 WIDE AVAILABLE BY THE FOOT	AR	
	S1389-4	SEALER STRIP-FELT-1-3/4 WIDE AVAILABLE BY THE FOOT	AR	
	S1389-5	SEALER STRIP-FELT-1-1/4 WIDE AVAILABLE BY THE FOOT	AR	
	S1389-6	SEALER STRIP-FELT-2-1/4 WIDE AVAILABLE BY THE FOOT	AR	
	S1389-7	SEALER STRIP-FELT-1-3/8 WIDE AVAILABLE BY THE FOOT	AR	
-29	S1398-1	CONTROL-PUSH PULL-WIRE AVAILABLE BY THE FOOT	AR	
-30	S1398-2	CONTROL-PUSH PULL-CASING AVAILABLE BY THE FOOT	AR	
-31	S1415-1	MOULDING-EXTRUDED VINYL	AR	
-32	S1441-1	SEAL-SPONGE RUBBER-3/8 WIDE AVAILABLE BY THE FOOT	AR	
	S1441-2	SEAL-SPONGE RUBBER-1/4 WIDE AVAILABLE BY THE FOOT	AR	
	S1441-3	SEAL-SPONGE RUBBER-1/2 WIDE AVAILABLE BY THE FOOT	AR	
-33	S1495-3	HOSE-RUBBER-3/16 ID AVAILABLE BY THE FOOT	AR	
	S1495-4	HOSE-RUBBER-1/4 ID AVAILABLE BY THE FOOT	AR	
	S1495-6	HOSE-RUBBER-3/8 ID AVAILABLE BY THE FOOT	AR	
	S1495-8	HOSE-RUBBER-1/2 ID AVAILABLE BY THE FOOT	AR	
	S1495-10	HOSE-RUBBER-5/8 ID AVAILABLE BY THE FOOT	AR	
-34	S1611-1	SEAL-EXTRUDED VINYL AVAILABLE BY THE FOOT	AR	
-35	S1635-1	ELECTRICAL PIN WIRE SIZE 22-18	AR	
	S1635-2	ELECTRICAL PIN WIRE SIZE 18-14	AR	
	S1635-3	ELECTRICAL PIN WIRE SIZE 18 GA-2 WIRE	AR	
-36	S1636-1	ELECTRICAL SOCKET WIRE SIZE 22-18	AR	
	S1636-2	ELECTRICAL SOCKET WIRE SIZE 18-14	AR	
	S1636-3	ELECTRICAL SOCKET WIRE SIZE 18 GA-2 WIRE	AR	
-37	S1637-1	HOUSING-ELECTRICAL PIN	AR	
-38	S1637-2	HOUSING-ELECTRICAL SOCKET	AR	
-39	S1638-1	HOUSING-ELECTRICAL SOCKET-3 CIRCUIT	AR	
-40	S1638-2	HOUSING-ELECTRICAL PIN-3 CIRCUIT	AR	
-41	S1640-6	HOUSING-ELECTRICAL PIN-6 CAVITY	AR	
	S1640-9	HOUSING-ELECTRICAL PIN-9 CAVITY	AR	
	S1640-12	HOUSING-ELECTRICAL PIN-12 CAVITY	AR	
	S1640-15	HOUSING-ELECTRICAL PIN-15 CAVITY	AR	
-42	S1641-6	HOUSING-ELECTRICAL SOCKET-6 CAVITY	AR	
	S1641-9	HOUSING-ELECTRICAL SOCKET-9 CAVITY	AR	
	S1641-12	HOUSING-ELECTRICAL SOCKET-12 CAVITY	AR	
	S1641-15	HOUSING-ELECTRICAL SOCKET-15 CAVITY	AR	
-43	S1116	SEAL-NEOPRENE AVAILABLE IN 12 FOOT LENGTHS ONLY	AR	
-44	S1356	SEAL-EXTRUDED RUBBER AVAILABLE BY THE FOOT	AR	
-45	S1614	LACING-KOROSEAL AVAILABLE BY THE FOOT	AR	
-46	3690-1/8	FILM-BLACK VINYL-1/8 IN WIDE AVAILABLE BY THE ROLL	AR	
	3690-1/4	FILM-BLACK VINYL-1/4 IN WIDE AVAILABLE BY THE ROLL	AR	
	3690-1/2	FILM-BLACK VINYL-1/2 IN WIDE AVAILABLE BY THE ROLL	AR	
-47	S1948-2-1	TRIM-EXTRUDED CLOUD GRAY AVAILABLE BY THE FOOT	AR	
	S1948-2-2	TRIM-EXTRUDED EBONY AVAILABLE BY THE FOOT	AR	
	S1948-2-3	TRIM-EXTRUDED SILVER TEAL BLUE AVAILABLE BY THE FOOT	AR	
	S1948-2-4	TRIM-EXTRUDED MARIGOLD AVAILABLE BY THE FOOT	AR	
	S1948-2-5	TRIM-EXTRUDED SUN GOLD AVAILABLE BY THE FOOT	AR	
	S1948-2-6	TRIM-EXTRUDED LIGHT OLIVE AVAILABLE BY THE FOOT	AR	
	S1948-2-7	TRIM-EXTRUDED CLOVE BROWN AVAILABLE BY THE FOOT	AR	
	S1948-2-8	TRIM-EXTRUDED HOLIDAY BLUE AVAILABLE BY THE FOOT	AR	
	S1948-2-9	TRIM-EXTRUDED FIESTA RED AVAILABLE BY THE FOOT	AR	
	S1948-2-10	TRIM-EXTRUDED PICNIC GREEN AVAILABLE BY THE FOOT	AR	
	S1948-2-11	TRIM-EXTRUDED BOGOTA BLUE AVAILABLE BY THE FOOT	AR	
	S1948-2-12	TRIM-EXTRUDED TAHITIAN RED AVAILABLE BY THE FOOT	AR	
	S1948-2-13	TRIM-EXTRUDED CYPRUS GREEN AVAILABLE BY THE FOOT	AR	
-48	S1050-1	GROMMET-CATERPILLER .056 WIDE	AR	
	S1050-2	GROMMET-CATERPILLER .090 WIDE	AR	
	S1050-3	GROMMET-CATERPILLER .131 WIDE	AR	
-49	S2092-3	FABRIC FASTENER-HOOK AVAILABLE BY THE FOOT	AR	
-50	S2092-4	FABRIC FASTENER-PILE AVAILABLE BY THE FOOT	AR	

Placards

ABCDEFGHIJKLMN
OPQRSTUVWXYZ
-1234567890

ABCDEFGHIJKLMN
OPQRSTUVWXYZ
-1234567890

ABCDEFGHIJKLMN
OPQRSTUVWXYZ
-1234567890

Figure 2. (Sheet 1) Placards, Nameplates & Exterior Markings

Placards (Cont)

S1500 TYPE STENCILS *
FOR SLANT GOTHIC LETTERS & NUMERALS

LETTERS AND NUMERALS ARE AVAILABLE IN 10 INCH AND 12 INCH HEIGHTS IN EITHER LEFT HAND OR RIGHT HAND SLANT.

LETTERS AVAILABLE ARE A THRU Z.
NUMERALS AVAILABLE ARE 0 THRU 9.

TO ORDER:

EACH LETTER OR NUMERAL WANTED MUST BE ORDERED BY GIVING BASIC PART NUMBER, FOLLOWED BY HEIGHT DESIRED, FOLLOWED BY SPECIFIC LETTER OR NUMERAL AND THE DESIGNATOR L OR R TO INDICATE LEFT OR RIGHT HAND SLANT.

EXAMPLE: S1500 - 10 - M L

- S1500 — BASIC PART NO.
- 10 — HEIGHT WANTED
- M — LETTER WANTED
- L — DIRECTION OF SLANT

S1600 TYPE STENCILS *
FOR VERTICAL GOTHIC LETTERS & NUMERALS

LETTERS AND NUMERALS ARE AVAILABLE IN 6 INCH, 12 INCH AND 20 INCH HEIGHTS. LETTERS AVAILABLE ARE A THRU Z. NUMERALS AVAILABLE ARE 0 THRU 9.

TO ORDER:

EACH LETTER OR NUMERAL WANTED MUST BE ORDERED BY GIVING BASIC PART NUMBER, FOLLOWED BY HEIGHT DESIRED, FOLLOWED BY SPECIFIC LETTER OR NUMERAL WANTED.

EXAMPLE: S1600 - 20 - N

- S1600 — BASIC PART NO.
- 20 — HEIGHT WANTED
- N — LETTER WANTED

* EACH STENCIL PROVIDES FOR EITHER BACKGROUND OR CENTER MASK.


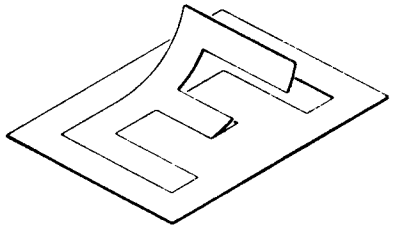


Figure 2. (Sheet 2) Placards, Nameplates & Exterior Markings

Placards (Cont)

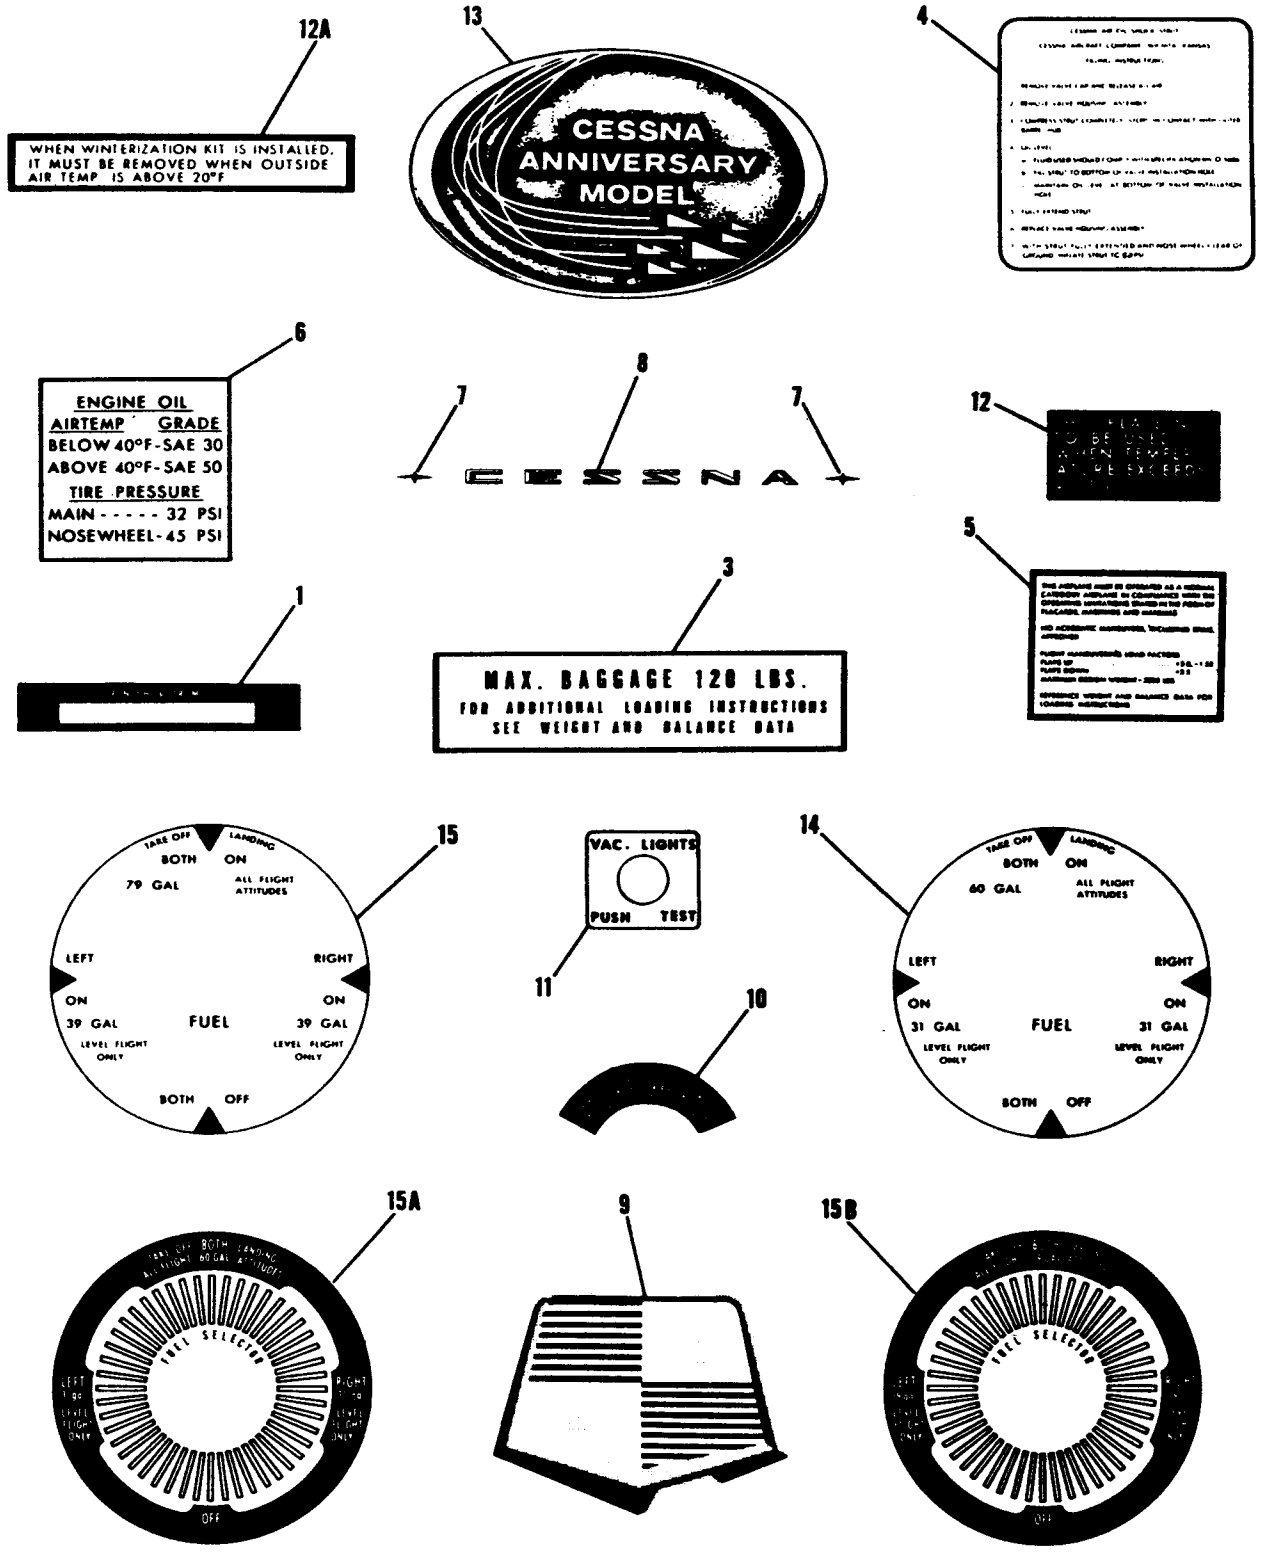


182 SERIAL 18253599 THRU 18259305

Figure 2. (Sheet 3) Placards, Nameplates and Exterior Markings

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
2 -		PLACARDS, NAMEPLATES & EXTERIOR MARKINGS	NP	D
- 1	0713047	PLACARD-FINISH & TRIM	1	
- 2		DELETED NOT AVAILABLE		
- 3	0710032-3	PLACARD-BAGGAGE LOAD LIMIT	1	A
	0512166-3	PLACARD-BAGGAGE LOAD LIMIT	1	B
- 4	0543032-1	PLACARD-NOSE GEAR SHOCK STRUT	1	R
	0543032-3	PLACARD-NOSE GEAR SHOCK STRUT	1	P
- 5	0713207-4	PLACARD-OPERATIONAL LIMITATIONS	1	R
- 6	0713704-1	PLACARD-TIRE & OIL	1	A
- 7	0500085-2	EMBLEM-STAR	1	C
- 8	0500085-1	INSIGNIA-CESSNA	1	C
- 9	0700029-1	INSIGNIA	1	
-10	0713209-1	PLACARD-CARBURETOR AIR TEMPERATURE INDICATOR	1	
-11	0713705-2	PLACARD-VACUUM LIGHTS TEST	1	
-12	0700319-12	PLACARD-WINTERIZATION	1	
-12A	0700319-13	PLACARD-WINTERIZATION	1	
-13	0713724	MEDALLION-ANNIVERSARY	1	A
-14	S1286-1	PLACARD-FUEL SELECTOR	1	J
-15	S1286-2	PLACARD-FUEL SELECTOR EXTENDED RANGE	1	J
-15A	0705048-4	PLACARD-FUEL SELECTOR	1	K
-15B	0705048-5	PLACARD-FUEL SELECTOR EXTENDED RANGE	1	K

CONTINUED ON NEXT PAGE

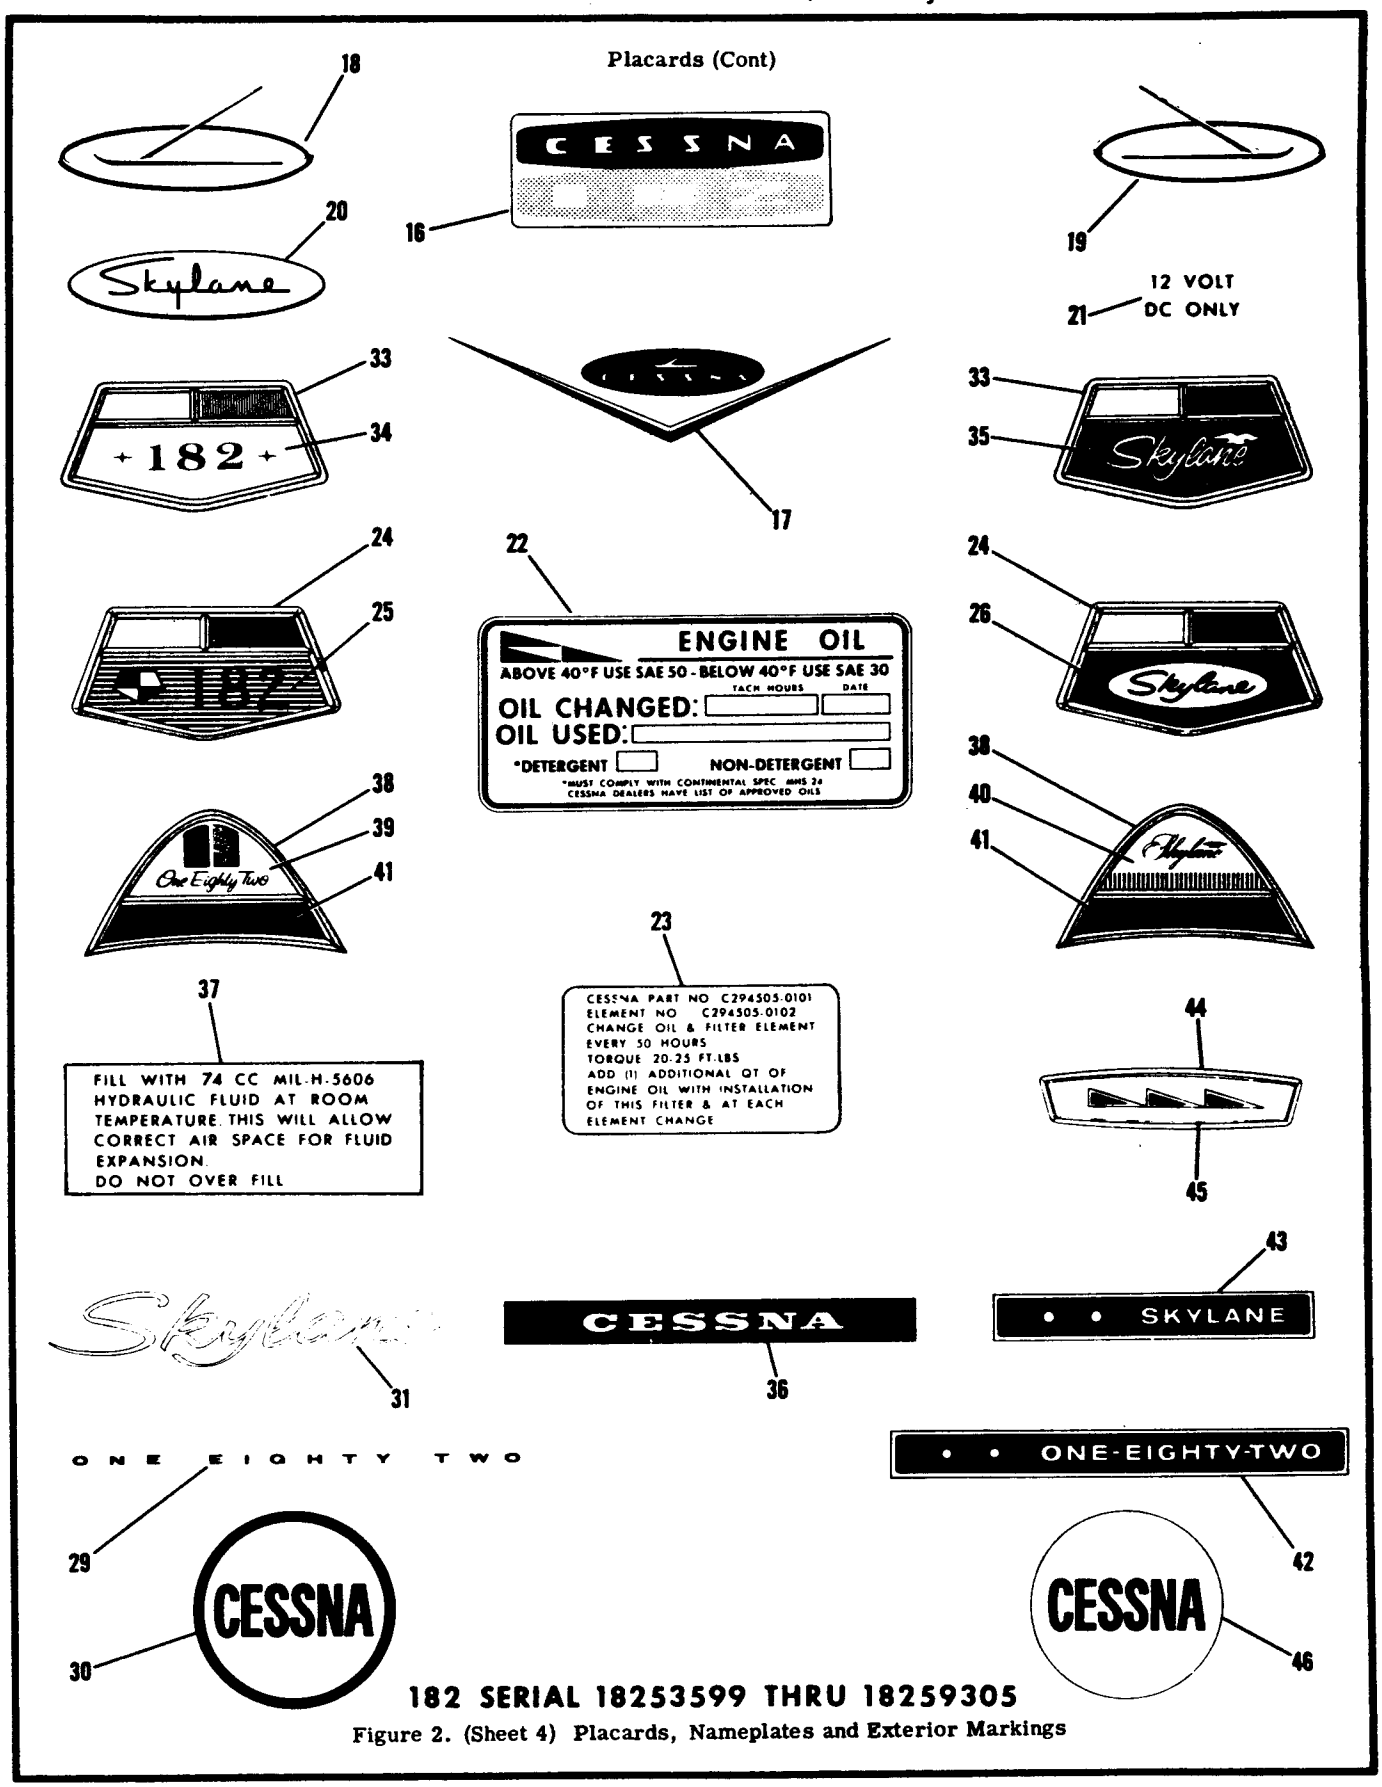


182 SERIAL 18253599 THRU 18259305

Figure 2. (Sheet 4) Placards, Nameplates and Exterior Markings

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
2 -16	0713216-2	EMBLEM-CONTROL WHEEL	1	C
-17	0713215-2	EMBLEM-CONTROL WHEEL SKYLANE	1	C
-18	0700054-1	INSIGNIA-TAIL LH SKYLANE	1	C
-19	0700054-2	INSIGNIA-TAIL RH SKYLANE	2	C
-20	0700020-2	INSIGNIA-SKYLANE	1	S
-21	0500130-1	PLACARD-GROUND SERVICE RECEPTACLE	1	S
-22	S1397-1	PLACARD-OIL CHANGE	1	L
-23	1250410-1	PLACARD-OIL FILTER	1	M
	1250410-3	PLACARD-OIL FILTER	1	E
-24	0500125-2	PLATE-INSIGNIA	1	G
-25	0500125-9	INSIGNIA-182	1	G
-26	0500125-10	INSIGNIA-SKYLANE		
-27		DELETED-NOT AVAILABLE		
-28		DELETED-NOT AVAILABLE		
-29	0700128-1	LETTERING	2	E
-30	1400014-1	NAMEPLATE-CESSNA	2	G
-31	0700717-1	LETTERING-SKYLANE	2	G
	0700724-1	LETTERING-SKYLANE	2	H
-32		DELETED-NOT AVAILABLE		
-33	0500125-29	PLATE-182 INSIGNIA	1	H
-34	0700722-1	INSIGNIA-182	1	H
-35	0700723-1	INSIGNIA-SKYLANE	1	H
-36	0500248-1	NAMEPLATE-CESSNA	1	D
-37	0743616-2	PLACARD-SHIMMY DAMPENER	1	F
-38	0700742-1	BASE PLATE-EMBLEM	1	P
-39	0700743-1	EMBLEM-182	1	P
-40	0700744-1	EMBLEM-SKYLANE	1	P
-41	0700745-1	EMBLEM-CONTROL WHEEL	2	P
-42	0700749-1	PLACARD-ONE EIGHTY TWO	2	P
-43	0700751-1	PLACARD-SKYLANE	2	N
-44	0500125-1	PLATE	2	N
-45	0700748-1	PLACARD	2	P
-46	0400135-1	NAMEPLATE-CESSNA		

CONTINUED ON NEXT PAGE

Placards (Cont)

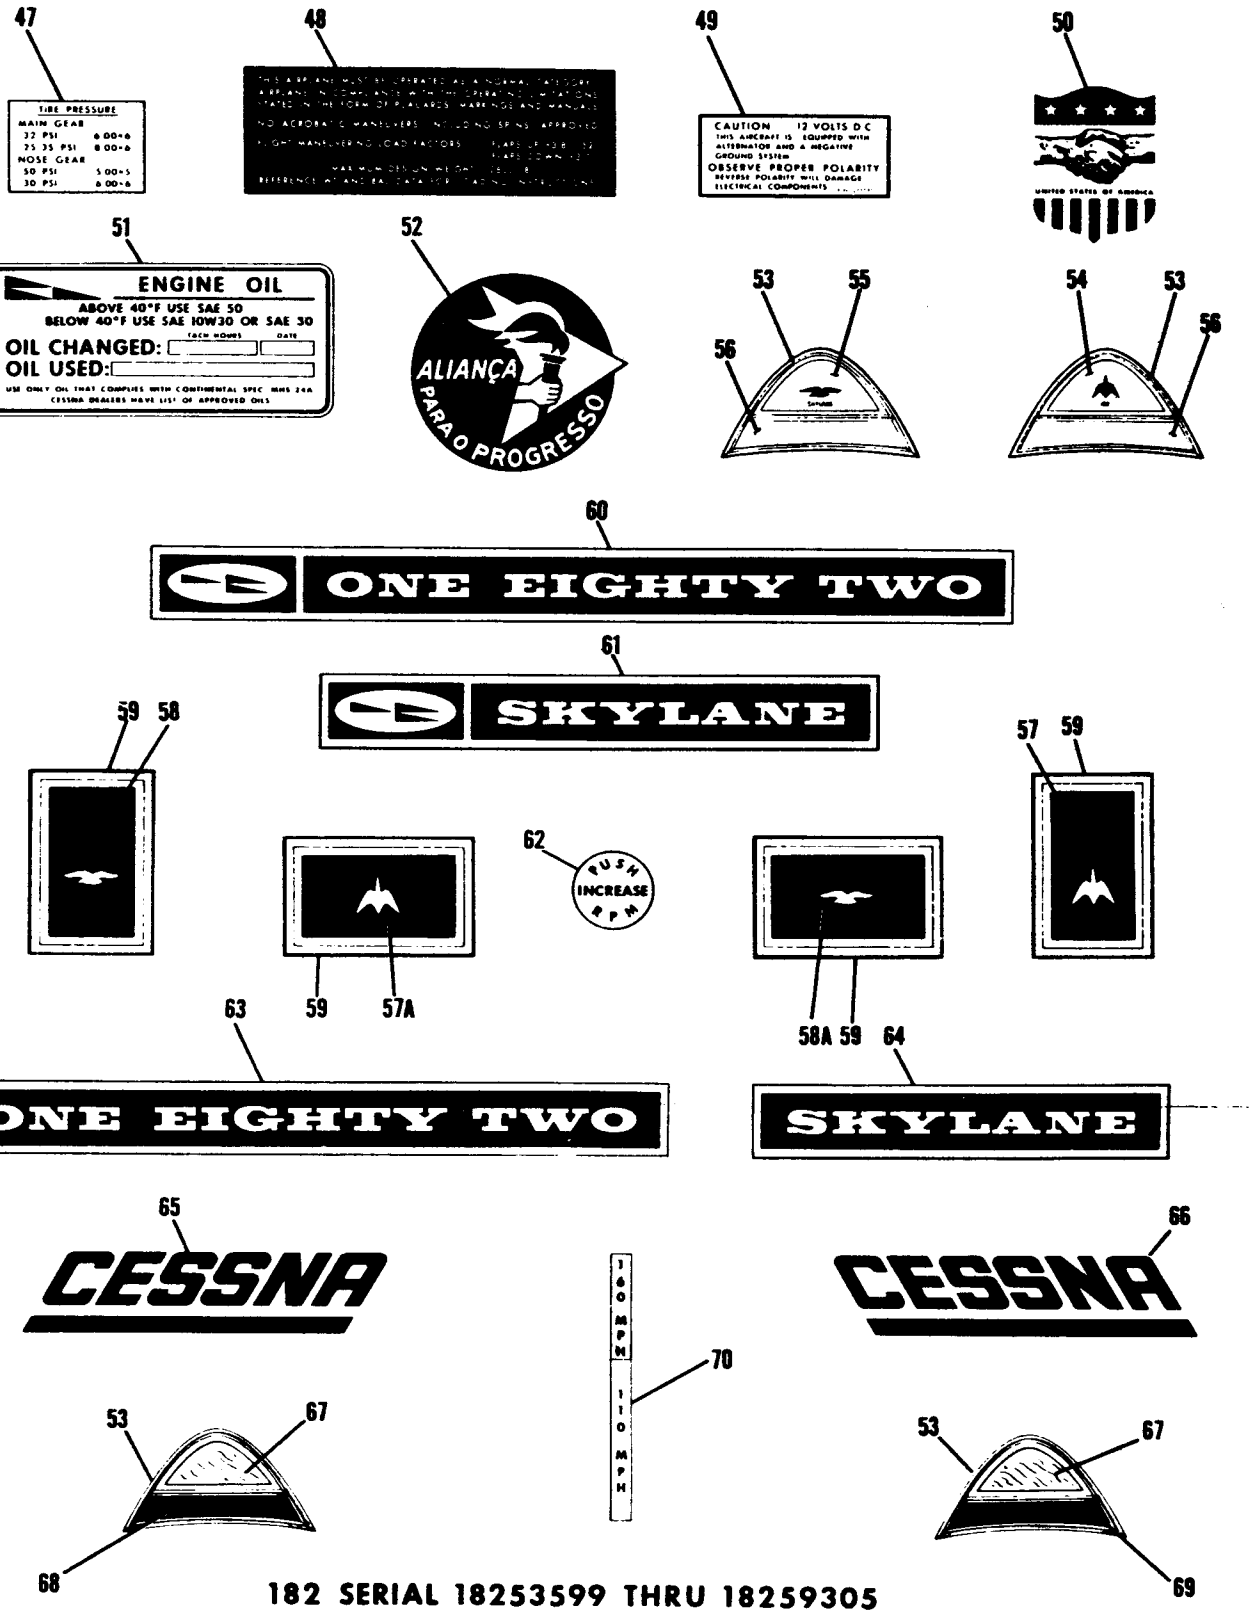


182 SERIAL 18253599 THRU 18259305

Figure 2. (Sheet 5) Placards, Nameplates and Exterior Markings

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
2 -47	0700182-1	PLACARD-TIRE PRESSURE	1	Q
-48	S1656-8	PLACARD-OPERATIONAL LIMITATIONS	1	Q
-49	1213535-1	PLACARD-BATTERY BOX POLARITY	1	K
-50	S1713-1	PLACARD-HANDS OF FRIENDSHIP	1	Q
-51	S1397-4	PLACARD-ENGINE OIL CHANGE	1	Q
-52	S1714-1	PLACARD-ALLIANCE FOR PROGRESS	1	Q
-53	0700742-1	BASE PLATE-EMBLEM	1	Q
-54	0700177-1	PLACARD-CONTROL WHEEL 182	1	T
-55	0700180-1	PLACARD-CONTROL WHEEL SKYLANE	1	T
-56	0700745-1	EMBLEM-CONTROL WHEEL	1	T
-57	0700178-1	PLACARD-GLOVE BOX 182	1	T
-57A	0713254-1	PLACARD-GLOVE BOX 182	1	U
-58	0700178-2	PLACARD-GLOVE BOX SKYLANE	1	T
-58A	0713254-2	PLACARD-GLOVE BOX SKYLANE	1	U
-59	0700756-1	BASE-GLOVE BOX PLACARD	1	Q
-60	0700176-1	PLACARD-EXTERIOR 182	2	T
-61	0700179-1	PLACARD-EXTERIOR SKYLANE	2	T
-62	0700184-1	DECAL-PROP CONTROL	1	T
-63	1205013-3	PLACARD-EXTERIOR 182	2	U
-64	1205013-7	PLACARD-EXTERIOR SKYLANE	2	U
-65	1205010-1	PLACARD-NAMEPLATE	1	U
-66	1205010-2	PLACARD-NAMEPLATE	1	U
-67	0713256-1	PLACARD-CONTROL WHEEL	1	U
-68	0713255-2	EMBLEM-CONTROL WHEEL 182	1	U
-69	0713255-7	EMBLEM-CONTROL WHEEL SKYLANE	1	U
-70	0705001-1	PLACARD-FLAP INDICATOR	1	U
	S1500	STENCILS-SLANT LETTERS & NUMERALS SEE SHEETS 1 & 2	AR	
	S1600	STENCILS-VERTICAL LETTERS & NUMERALS SEE SHEETS 1 & 2	AR	

A---182 SERIAL 18253599 THRU 18254423
B---182 SERIAL 18254424 THRU 18259305
A182 SERIAL A182-0001 THRU A182-0116
C---182 SERIAL 18253599 THRU 18255058
D---182 SERIAL 18253599 THRU 18259305
A182 SERIAL A182-0001 THRU A182-0116
E---182 SERIAL 18255059 THRU 18256684
F---182 SERIAL 18255183 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
G---182 SERIAL 18255059 THRU 18255844
H---182 SERIAL 18255845 THRU 18256684
J---182 SERIAL 18253599 THRU 18255844
K---182 SERIAL 18255845 THRU 18259305
A182 SERIAL A182-0001 THRU A182-0116
L---182 SERIAL 18253599 THRU 18256438
M---182 SERIAL 18256439 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
N---182 SERIAL 18256685 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
O---182 SERIAL 18255845 THRU 18256684
182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
P---182 SERIAL 18256685 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
Q---182 SERIAL 18257626 THRU 18259305
A182 SERIAL A182-0057 THRU A182-0116
R---182 SERIAL 18253599 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
S---182 SERIAL 18254424 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
T---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
U---182 SERIAL 18258506 THRU 18259305
A182 SERIAL A182-0097 THRU A182-0116

Placards (Cont)

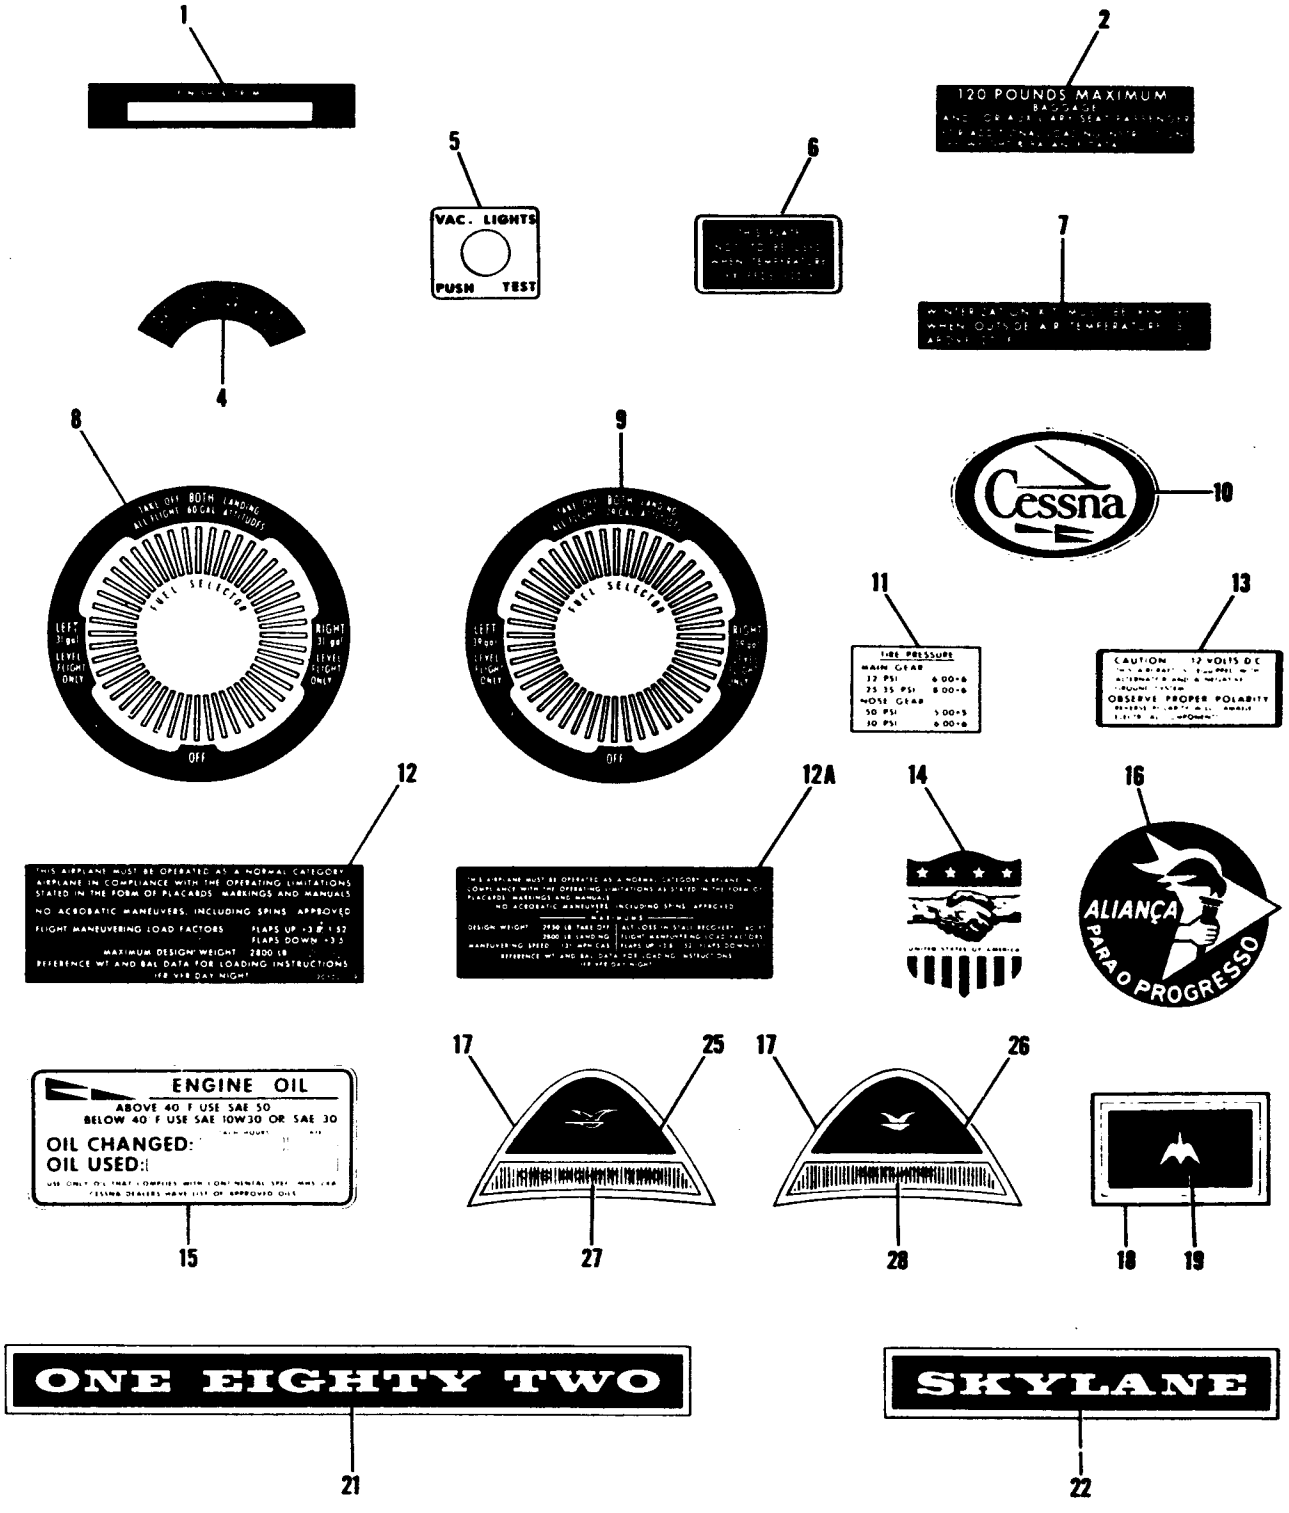


182 SERIAL 18259306 THRU 18262465

Figure 2A. (Sheet 1) Placards, Nameplates & Exterior Markings

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
2A-		PLACARDS, NAMEPLATES & EXTERIOR MARKINGS	NP	A
- 1	0713047	PLACARD-FINISH & TRIM	1	
- 2	0505007-1	PLACARD-BAGGAGE LOAD LIMIT	1	K
- 3		DELETED NEVER USED		
- 4	0713209-1	PLACARD-CARBURETOR AIR TEMPERATURE INDICATOR	1	
- 5	0713705-2	PLACARD-VACUUM LIGHTS TEST	1	
- 6	1205043-1	PLACARD-WINTERIZATION	3	L
- 7	0505009-2	PLACARD-WINTERIZATION	1	K
- 8	0705048-4	PLACARD-FUEL SELECTOR	1	
- 9	0705048-5	PLACARD-FUEL SELECTOR EXTENDED RANGE	1	
-10	S1433-1	PLACARD-CESSNA LABLE	1	
-11	0700182-1	PLACARD-TIRE PRESSURE	1	M
-12	1205001-29	PLACARD-OPERATIONAL LIMITATIONS	1	C
-12A	1205001-54	PLACARD-OPERATIONAL LIMITATIONS	1	N
-13	1205024-1	PLACARD-BATTERY BOX POLARITY	1	
-14	S1713-1	PLACARD-HANDS OF FRIENDSHIP	1	
-15	S1397-4	PLACARD-ENGINE OIL CHANGE	1	
-16	S1714-1	PLACARD-ALLIANCE FOR PROGRESS	1	C
-17	0700742-1	BASE PLATE-EMBLEM	1	
-18	0713254-2	PLACARD-GLOVE BOX	1	
-19	0700756-1	BASE-GLOVE BOX PLACARD		
-20		DELETED NEVER USED		
-21	1205013-3	PLACARD-EXTERIOR 182	2	C
-22	1205013-7	PLACARD-EXTERIOR SKYLANE	2	C

CONTINUED ON NEXT PAGE

Placards (Cont)

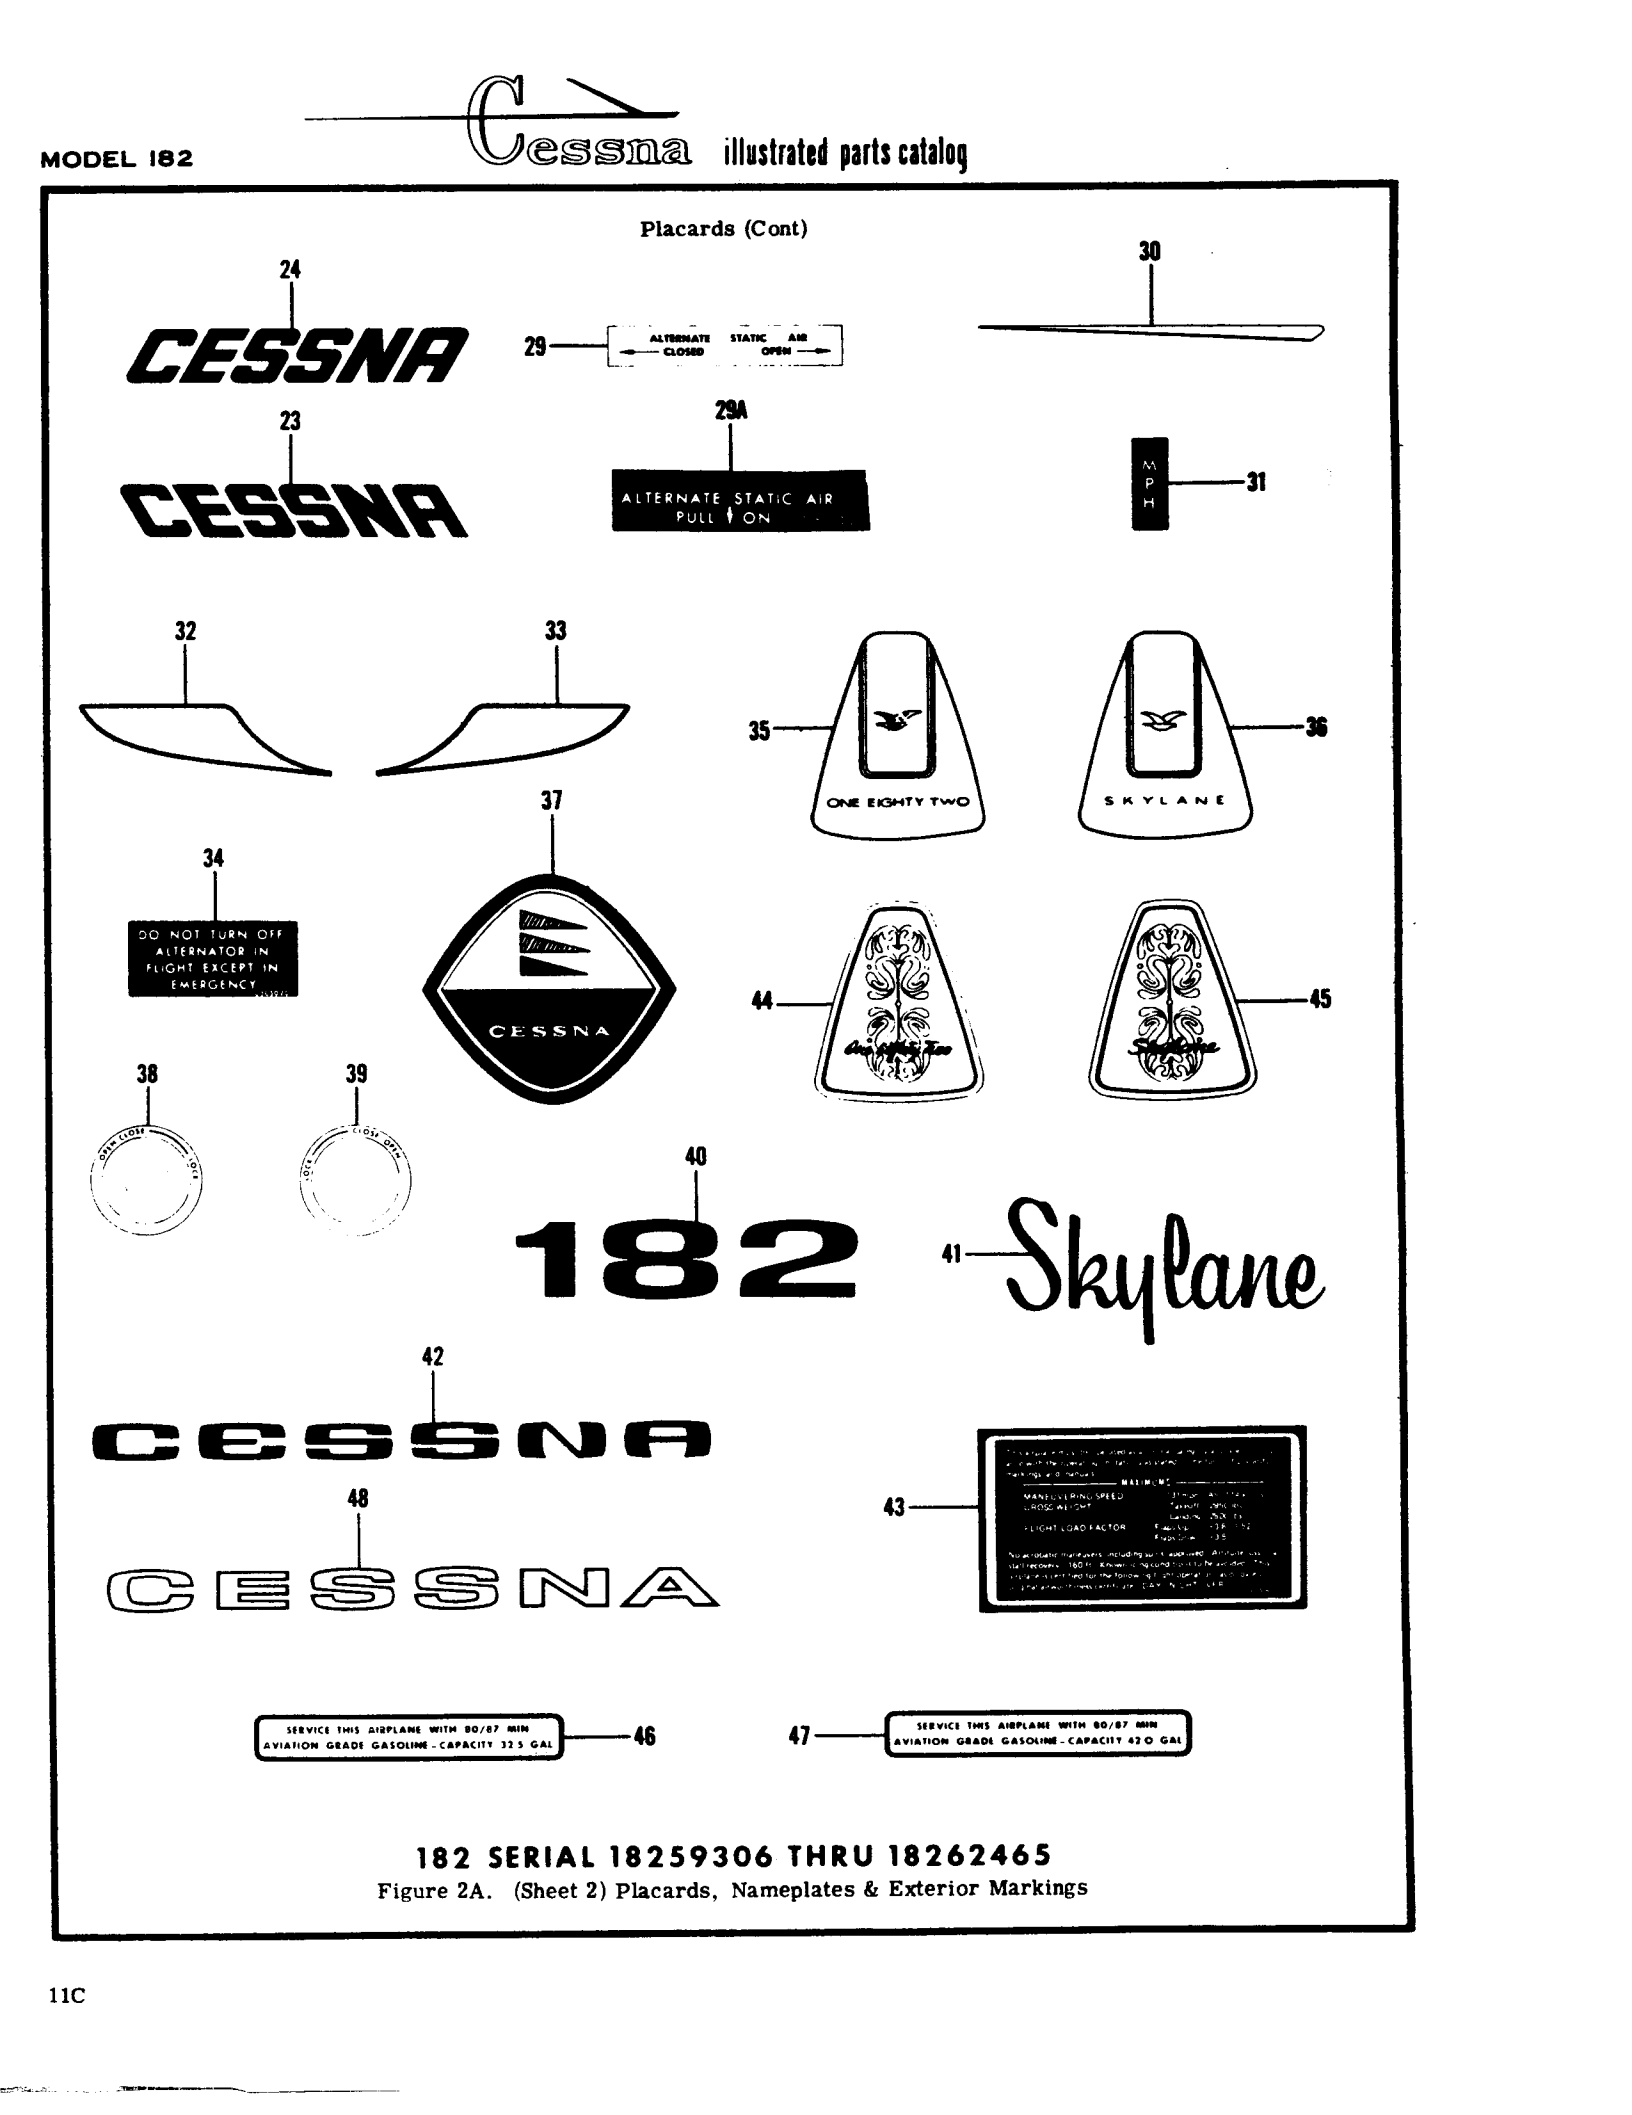


182 SERIAL 18259306 THRU 18262465

Figure 2A. (Sheet 2) Placards, Nameplates & Exterior Markings


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
2A-23	1205010-3	PLACARD-NAMEPLATE	1	C
-24	1205010-4	PLACARD-NAMEPLATE	1	C
-25	1205030-11	PLACARD-CONTROL WHEEL 182	1	C
-26	1205030-1	PLACARD-CONTROL WHEEL SKYLANE	1	C
-27	1205030-12	EMBLEM-CONTROL WHEEL 182	1	C
-28	1205030-2	EMBLEM-CONTROL WHEEL SKYLANE	1	C
-29	0505005-2	PLACARD-ALTERNATE STATIC AIR	1	F
-29A	0705021-2	PLACARD-ALTERNATE STATIC AIR	1	E
-30	0505015-1	PLACARD-WHEEL FAIRING RH	1	F
	0505015-2	PLACARD-WHEEL FAIRING LH	1	F
-31	0705001-1	PLACARD-FLAP INDICATOR	1	
-32	0705016-1	PLACARD-NOSE CAP	1	J
-33	0705016-2	PLACARD-NOSE CAP	1	J
-34	0505020-2	PLACARD-MASTER SWITCH	1	B
-35	1205052-1	PLACARD-CONTROL WHEEL	1	N
-36	1205052-2	PLACARD-CONTROL WHEEL	1	J
	1260477-2	BASE PLATE-CONTROL WHEEL EMBLEM	1	N
-37	1205035-1	PLACARD-EXTERIOR STYLING	2	D
	1205035-2	PLACARD-EXTERIOR STYLING	2	G
-38	1705015-1	PLACARD-DOOR HANDLE LH	1	
-39	1705015-2	PLACARD-DOOR HANDLE RH	1	
-40	1505015-12	PLACARD-182	1	B
	1505015-43	PLACARD-182 ALASKAN	1	B
-41	1505015-13	PLACARD-SKYLANE	2	B
	1505015-44	PLACARD-SKYLANE ALASKAN	2	B
-42	1505014-1	PLACARD-EXTERIOR STYLING	2	D
-43	1205001-79	PLACARD-OPERATIONAL LIMITATIONS VFR	1	P
	1205001-80	PLACARD-OPERATIONAL LIMITATIONS VFR-IFR	1	P
-44	1205061-1	PLACARD-CONTROL WHEEL	1	G
-45	1205061-2	PLACARD-CONTROL WHEEL	1	G
-46	0705023-1	PLACARD-FUEL FILL STANDARD	2	E
-47	0705023-2	PLACARD-FUEL FILL LONG RANGE	2	E
-48	1505022-1	PLACARD-EXTERIOR	2	G


CONTINUED ON NEXT PAGE


Placards (Cont)

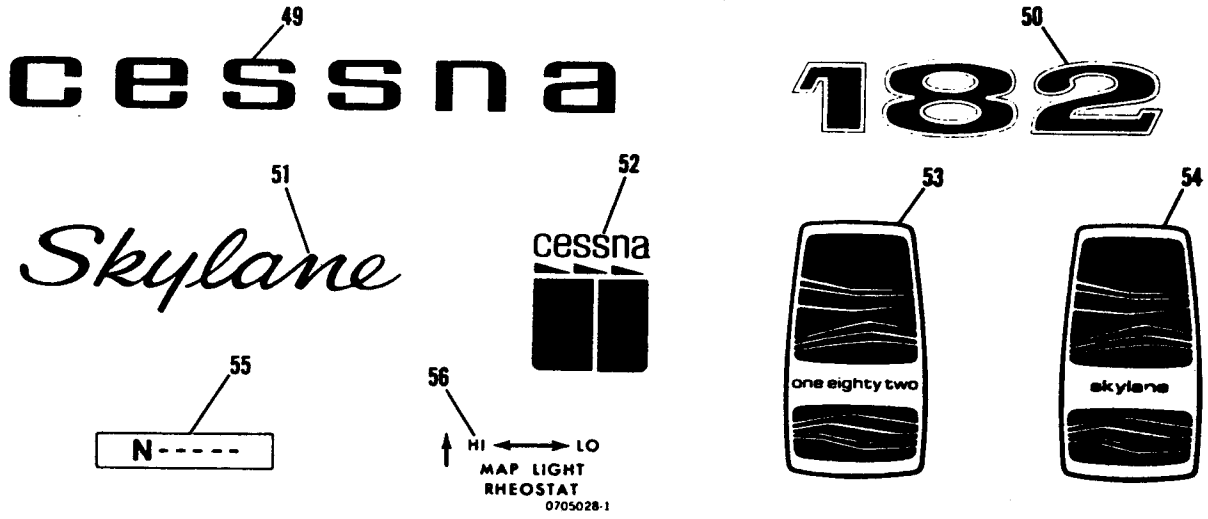





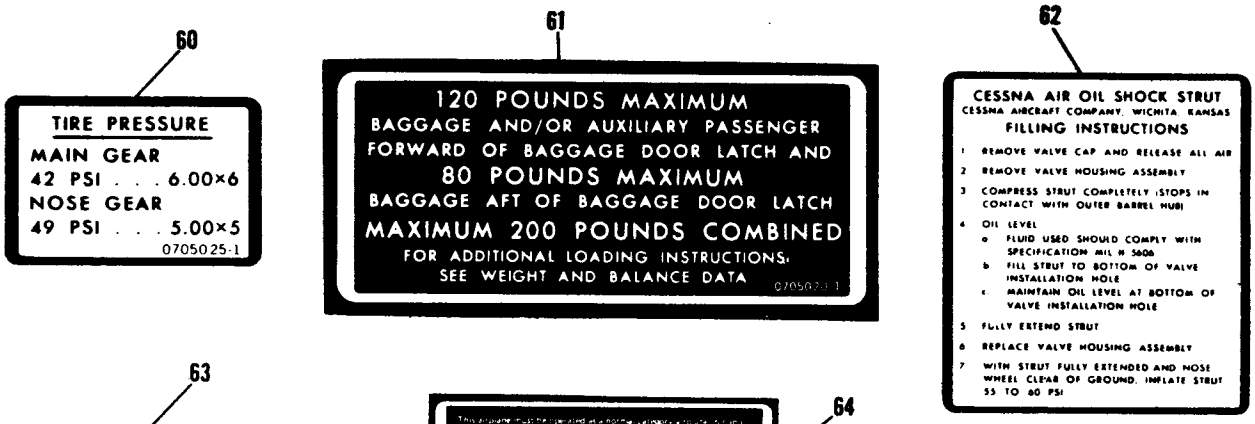


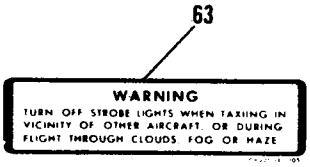

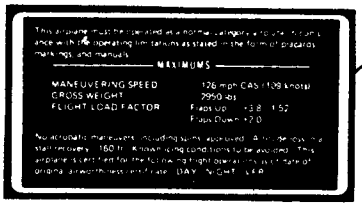

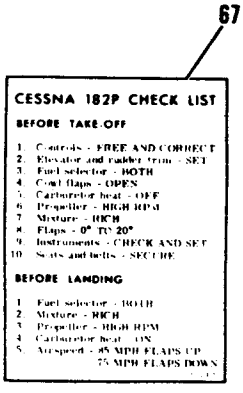

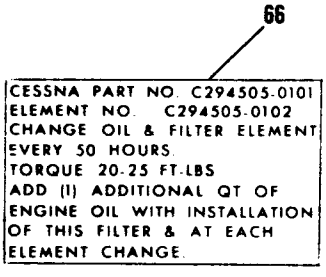

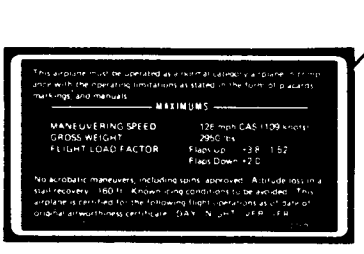

182 SERIAL 18259306 THRU 18262465

Figure 2A. (Sheet 3) Placards, Nameplates & Exterior Markings

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
2A-49	0405015-2	PLACARD-EXTERIOR WING TIP	2	T
-50	0705027-1	PLACARD-EXTERIOR 182	2	T
-51	0705027-2	PLACARD-EXTERIOR SKYLANE	2	T
-52	1205074-1	PLACARD-EXTERIOR	2	T
-53	1205076-6	PLACARD-CONTROL WHEEL	1	Q
-54	1205076-7	PLACARD-CONTROL WHEEL	1	T
-55	1205009-1	PLACARD-AIRCRAFT IDENTIFICATION	1	
-56	0705028-1	PLACARD-CONTROL WHEEL MAPLIGHT	1	H
-57	0505020-3	PLACARD-MASTER SWITCH	1	T
-58	0505009-3	PLACARD-WINTERIZATION	1	H
-59	0705022-1	PLACARD-OXYGEN REFILL	1	E
-60	0705025-1	PLACARD-TIRE PRESSURE	1	H
-61	0705020-1	PLACARD-BAGGAGE & AUXILIARY SEAT	1	R
-62	0543032-3	PLACARD-NOSE GEAR SHOCK STRUT	1	
-63	C622003-0105	PLACARD-STROBE LIGHT	1	H
	C622003-0103	PLACARD-STROBE LIGHT	1	S
-64	1205001-120	PLACARD-OPERATIONAL LIMITATIONS VFR	1	H
-65	1205001-121	PLACARD-OPERATIONAL LIMITATIONS VFR-IFR	1	H
-66	1250410-3	PLACARD-OIL FILTER	1	
-67	0705024-1	PLACARD-PILOT CHECK LIST	1	T

CONTINUED ON NEXT PAGE

Placards (Cont)



182 SERIAL 18259306 THRU 18262465

Figure 2A. (Sheet 4) Placards, Nameplates & Exterior Markings

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
2A-68	0405020-1	NAMEPLATE-EXTERIOR CESSNA	2	U
-69	0705041-2	PLACARD-EXTERIOR 182	2	U
-70	0705041-1	PLACARD-EXTERIOR SKYLANE	2	U
-71	0705041-3	PLACARD-EXTERIOR LH	1	U
	0705041-4	PLACARD-EXTERIOR RH	1	U
-72	1205088-5	NAMEPLATE-CONTROL WHEEL	1	U
-73	1205088-6	NAMEPLATE-CONTROL WHEEL	1	U
-74	0400213-6	PLACARD SET-COMPASS CORRECTION	1	U
-75	0705024-4	PLACARD-PILOTS CHECK LIST	1	R
-76	1205085-1	PLACARD-ELT	1	U
-77	1205001-139	PLACARD-OPERATIONAL LIMITATIONS DAY VFR	1	U
		A---182 SERIAL 18259306 THRU 18262465 A182 SERIAL A182-0117 & ON		
		B---182 SERIAL 18260056 THRU 18260825 A182 SERIAL A182-0117 THRU A182-0136		
		C---182 SERIAL 18259306 THRU 18260055		
		D---182 SERIAL 18260056 THRU 18260445 A182 SERIAL A182-0117 & ON		
		E---182 SERIAL 18260446 THRU 18262465		
		F---182 SERIAL 18259306 THRU 18260445 A182 SERIAL A182-0117 & ON		
		G---182 SERIAL 18260446 THRU 18260825		
		H---182 SERIAL 18260826 THRU 18262465		
		J---182 SERIAL 18260056 THRU 18260445		
		K---182 SERIAL 18259306 THRU 18260825 A182 SERIAL A182-0117 THRU A182-0136		
		L---182 SERIAL 18259306 THRU 18262465 A182 SERIAL A182-0117 THRU A182-0136		
		M---182 SERIAL 18259306 THRU 18260825 A182 SERIAL A182-0117 & ON		
		N---182 SERIAL 18260056 THRU 18260445 A182 SERIAL A182-0117 THRU A182-0136		
		P---182 SERIAL 18260446 THRU 18260825 A182 SERIAL A182-0137 & ON		
		Q---182 SERIAL 18260826 THRU 18261425 A182 SERIAL A182-0137 & ON		
		R---182 SERIAL 18260826 THRU 18262465 A182 SERIAL A182-0137 & ON		
		S---A182 SERIAL A182-0137 & ON		
		T---182 SERIAL 18260826 THRU 18261425		
		U---182 SERIAL 18261426 THRU 18262465		

Wing

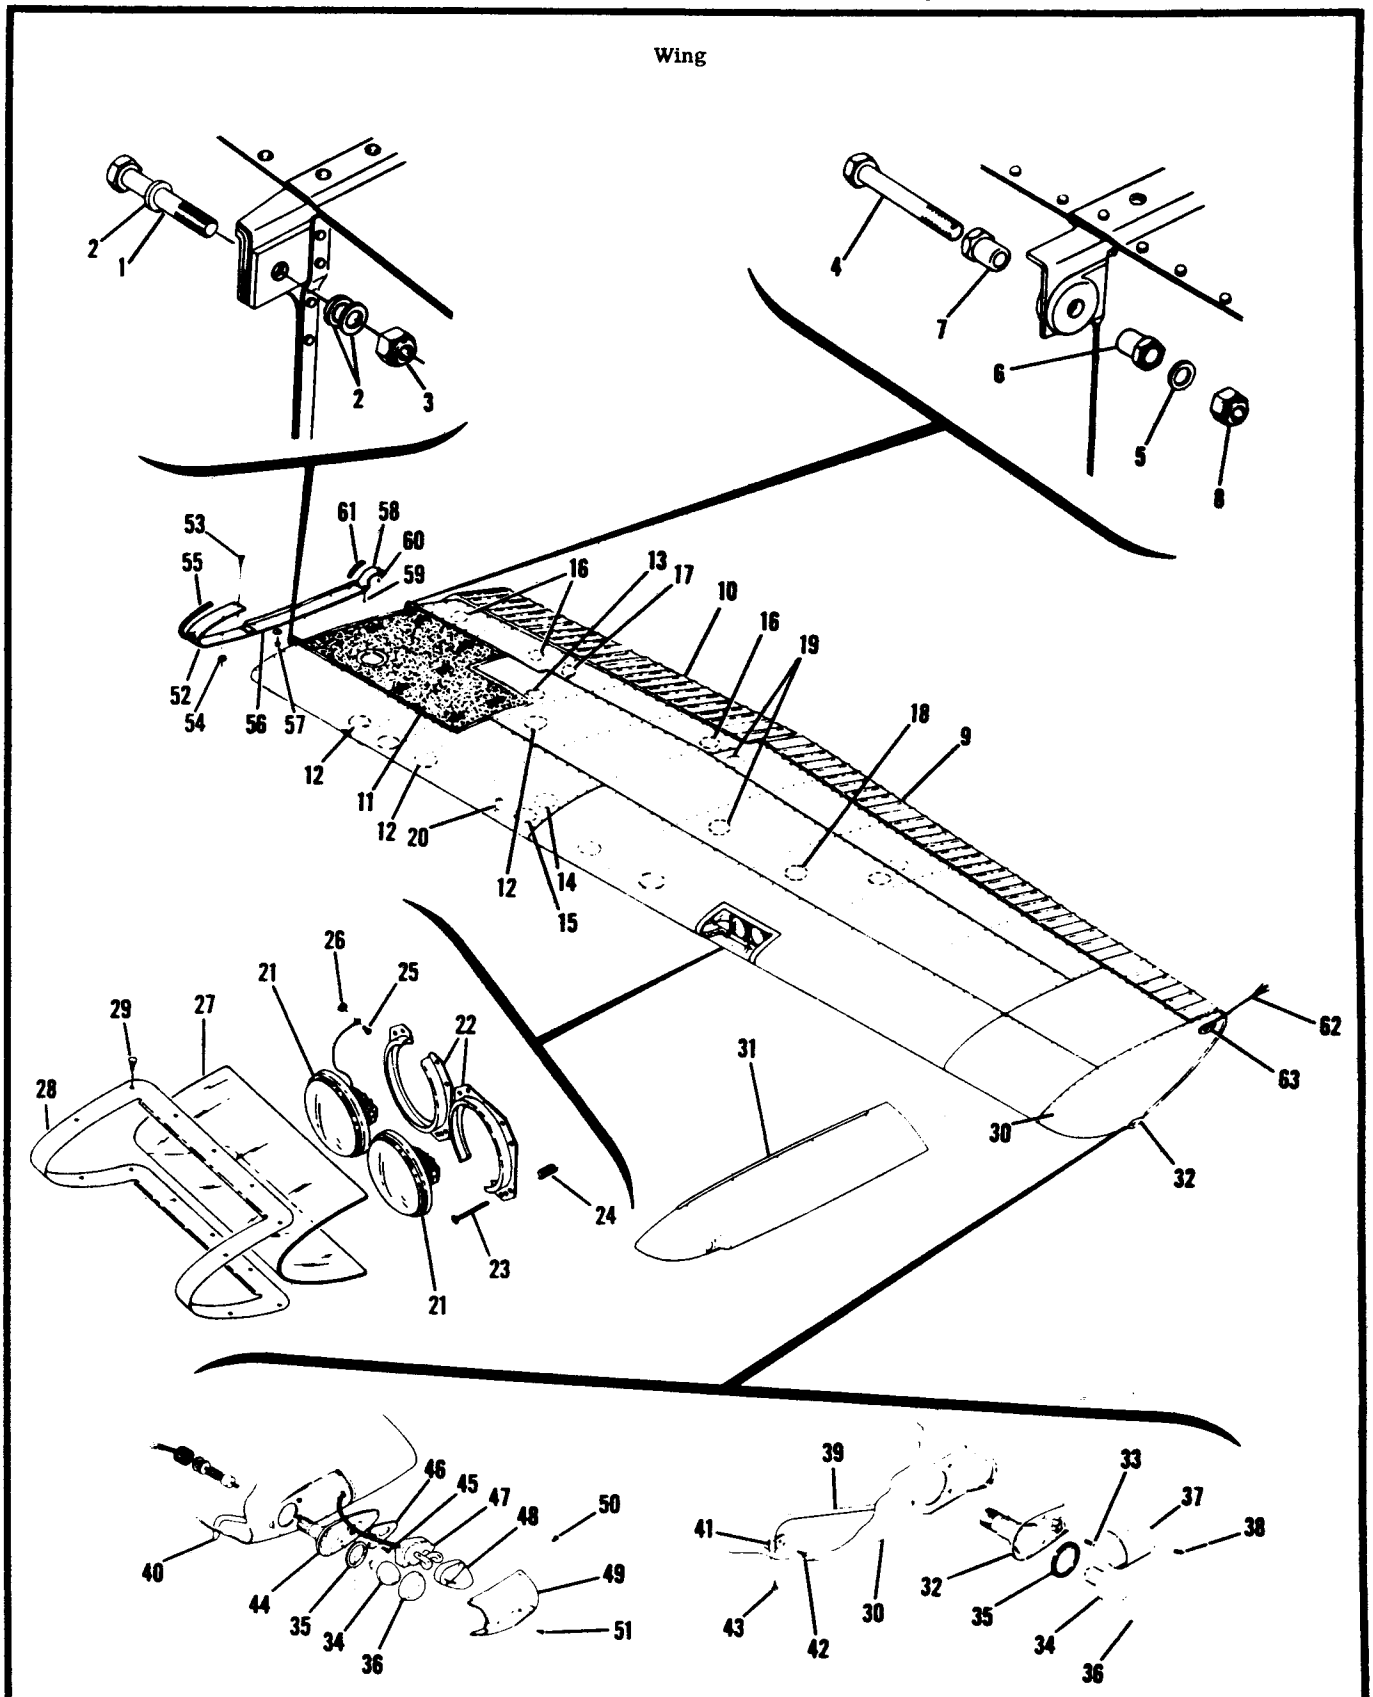


Figure 3. Wing Assembly Complete

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
3 -		WING ASSY COMPLETE-LH STANDARD RANGE	NP	
		WING ASSEMBLY COMPLETE-LH EXTENDED RANGE	NP	
		WING ASSEMBLY COMPLETE-RH STANDARD RANGE	NP	
		WING ASSEMBLY COMPLETE-RH EXTENDED RANGE	NP	
		ATTACHING PARTS		
- 1	AN8-23A	BOLT	1	
- 2	AN960-816	WASHER	3	
- 3	MS20365-820C	NUT	1	
- 4	AN7-20A	BOLT	1	
- 5	AN960-716	WASHER	1	
- 6	0512123-1	BUSHING FWD SIDE	1	
- 7	0512123	BUSHING AFT SIDE	1	
- 8	MS20365-720C	NUT	1	
		---*---		
- 9	SEE FIG 9	AILERON INSTALLATION	1	
-10	SEE FIG 10	FLAP INSTALLATION	1	
-11	SEE FIG 8	FUEL CELL INSTALLATION STANDARD RANGE	1	
	SEE FIG 8	FUEL CELL INSTALLATION EXTENDED RANGE	1	
-12	S225-2	PLATE-INSPECTION	AR	
-13	S225-2	PLATE-INSPECTION	1	A
	S225-4F	PLATE-INSPECTION	1	F
	1222012-1	PLATE-INSPECTION	1	G
-14	0723605-9	PLATE ASSEMBLY-AFT LH	1	
	0723605-7	PLATE ASSEMBLY-AFT RH	1	
-15	0723605-8	PLATE ASSEMBLY-FWD LH	1	
	0723605-6	PLATE ASSEMBLY-FWD RH	1	
		ATTACHING PARTS		
	S1022Z8-8	SCREW	3	
		---*---		
-16	S225-1	PLATE-INSPECTION	3	
-17	S225-1	PLATE-INSPECTION RH ONLY	1	D
		ATTACHING PARTS		
	S1021Z8-8	SCREWS	3	
		---*---		
-18	S225-4	PLATE-INSPECTION	1	V
	S225-4	PLATE-INSPECTION RH ONLY	1	X
	1220094-2	PLATE-INSPECTION LH ONLY	1	X
	1220094-2	PLATE-INSPECTION	1	U
-19	1222022-1	PLATE-INSPECTION	2	
		ATTACHING PARTS		
	S1022Z8-6	SCREW	6	
	S1022Z8-8	SCREW LH ONLY	8	
		---*---		
-20	0511062-4	WING UNIT-STALL WARNING LH WING ONLY	1	
	0511062-5	WING UNIT-STALL WARNING LH WING ONLY HEATED	1	
		ATTACHING PARTS		
	S1022Z8-6	SCREW	4	
	NAS395-14-3	NUT	1	
		---*---		
	SEE FIG 4	STRUCTURE ASSEMBLY-WING STANDARD & EXTENDED RANGE	1	L
	SEE FIG 4A	STRUCTURE ASSEMBLY-WING STANDARD & EXTENDED RANGE	1	Z
	SEE FIG 4B	STRUCTURE ASSEMBLY-WING STANDARD & EXTENDED RANGE	1	U
-21	0523118-1	LIGHT-LANDING LH WING ONLY	2	T
		ATTACHING PARTS		
-22	0423542-6	BRACKET ASSEMBLY	2	T
-23	AN515-8R24	SCREW LH ONLY	8	T
-24	0713124-1	SPRING	8	T
		---*---		
-25	AN515-8R6	SCREW-GROUNDING LH WING ONLY	1	T
-26	NAS679A08	NUT-GROUNDING LH WING ONLY	1	T
-27	0722100-4	WINDOW-LANDING LIGHT LH WING ONLY	1	T
		ATTACHING PARTS		
-28	0722100-3	RETAINER WINDOW	1	T
-29	S1022Z8-8	SCREW	14	T
		---*---		
-30	0723615-200	TIP ASSEMBLY-WING	1	L

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
3 -31	0523565-201	TIP ASSEMBLY-LH WING	1	P
	0523565-200	TIP ASSEMBLY-RH WING	1	P
	0523565-29	TIP ASSEMBLY-LH WING	1	X
	0523565-30	TIP ASSEMBLY-RH WING	1	X
	0723200-5	TIP ASSEMBLY-LH WING	1	U
	0723200-6	TIP ASSEMBLY-RH WING	1	U
		ATTACHING PARTS		
	S1021Z8-8	SCREW	10	C
	AN515-8R8	SCREW	10	R
	AN515-8R8	SCREW	12	S
	S1021Z8-8	SCREW	12	Q
	AN525-832R8	SCREW	12	AA
	1570102-10	STRAP ASSY	A	AD
	0423008-8	STIFFENER USED ON LOWER LH & UPPER RH TIP	1	B
	0423008-9	STIFFENER USED ON UPPER LH & LOWER RH TIP	1	B
	0423008-5	STIFFENER USED ON UPPER LH & LOWER RH TIP	1	M
	0423008-4	STIFFENER USED ON LOWER LH & UPPER RH TIP	1	M
	0523565-21	STIFFENER USED ON UPPER LH & LOWER RH TIP	1	N
	0523565-22	STIFFENER USED ON UPPER RH & LOWER LH TIP	1	N
	0723200-9	STIFFENER USED ON UPPER LH TIP	1	U
	0723200-10	STIFFENER USED ON UPPER RH TIP	1	U
	0723200-11	STIFFENER USED ON LOWER LH TIP	1	U
	0723200-12	STIFFENER USED ON LOWER RH TIP	1	U
		---•---		
	0721107-1	FAIRING-WING TIP LH	1	
	0721107-2	FAIRING-WING TIP RH	1	
-32	C622001-0202	LIGHT BASE ASSEMBLY-WING POSITION	1	W
		ATTACHING PARTS		
-33	AN5078R8	SCREW	2	
	NAS1329A08K120	RIVNUT	2	
		---•---		
-34	A7512-12	BULB-WING NAVIGATION LIGHT 12 VOLT	1	
-35	A1257A	GASKET-WING NAVIGATION LIGHT GMC	1	
-36	A1280-2	LENS-WING NAVIGATION LIGHT LH RED GMC	1	
	A1280-3	LENS-WING NAVIGATION LIGHT RH GREEN GMC	1	
-37	0423007-1	FAIRING-WING NAVIGATION LIGHT	1	L
	0423564-1	SHIELD WING POSITION LIGHT LH	1	Y
	0423564-2	SHIELD WING POSITION LIGHT RH	1	Y
		ATTACHING PARTS		
-38	AN507-632R12	SCREW	1	
		---•---		
-39	0523702-3	DETECTOR-WING POSITION LIGHT LH	1	L
	0523702-4	DETECTOR-WING POSITION LIGHT RH	1	L
-40	1221201-3	DETECTOR-WING POSITION LIGHT LH	1	K
	1221201-4	DETECTOR-WING POSITION LIGHT RH	1	K
		ATTACHING PARTS		
	S1153-1	BRACKET	1	L
-41	MS21919DG4	CLAMP TIN	1	L
-42	S1021Z8-8	SCREW	1	L
-43	S1021Z8-6	SCREW	1	L
		---•---		
-44	C622001-0201	LIGHT BASE ASSEMBLY-WING POSITION	1	Q
		ATTACHING PARTS		
-45	S1021Z8-6	SCREW	3	AB
	S1860-2	NUTPLATE	3	AB
	AN507-632R8	SCREW	3	AA
	NAS1329A06K120	NUTPLATE	3	AA
		---•---		
-46	1520006-1	SPACER-STROBE LIGHT	1	AC
-47	C622003-0101	LIGHT-STROBE	1	AC
	C622006-0102	STROBE TUBE ASSY	1	AD
-48	C622003-0104	LENS-STROBE	1	AC
	C622006-0103	LENS-STROBE	1	AD
	C622006-0105	GASKET-LENS	1	AD

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
3 -49	0523566-5	SHIELD-WING POSITION LIGHT LH WITH STROBE LIGHT	1	X
	0523566-6	SHIELD-WING POSITION LIGHT RH WITH STROBE LIGHT	1	X
	0523566-1	SHIELD-WING POSITION LIGHT LH LESS STROBE LIGHT	1	X
	0523566-2	SHIELD-WING POSITION LIGHT RH LESS STROBE LIGHT	1	X
	0723201-3	SHIELD-WING POSITION LIGHT LH WITH STROBE LIGHT	1	U
	0723201-4	SHIELD-WING POSITION LIGHT RH WITH STROBE LIGHT	1	U
	0723201-1	SHIELD-WING POSITION LIGHT LH LESS STROBE LIGHT	1	U
	0723201-2	SHIELD-WING POSITION LIGHT RH LESS STROBE LIGHT	1	U
		ATTACHING PARTS		
-50	AN507-632R8	SCREW	2	X
	S1022Z8-8	SCREW	2	U
-51	AN507-632R14	SCREW	1	X
	AN507-632R12	SCREW	1	U
	NAS696A06L	NUTPLATE	1	X
	NAS1329A06K120	NUTPLATE	1	U
		---*---		
-52	0720615-1	FILLET ASSEMBLY-WING TO FUSELAGE LEADING EDGE LH	1	T
	0720615-2	FILLET ASSEMBLY-WING TO FUSELAGE LEADING EDGE RH	1	T
	0720618-1	FILLET ASSEMBLY-WING TO FUSELAGE LEADING EDGE LH	1	U
	0720618-2	FILLET ASSEMBLY-WING TO FUSELAGE LEADING EDGE RH	1	U
		ATTACHING PARTS		
-53	S1022Z8-8	SCREW	4	H
	S1022Z8-8	SCREW	2	J
	AN507-832R6	SCREW	2	J
-54	S290D832	WASHER	1	
		---*---		
-55	0520005-3	RUB STRIP	1	
-56	0720614-1	FAIRING-WING TO FUSELAGE LH	1	
	0720614-2	FAIRING-WING TO FUSELAGE RH	1	
		ATTACHING PARTS		
-57	S1022Z8-8	SCREW	5	
	S290D832	WASHER	5	
		---*---		
-58	0720613-1	FAIRING ASSEMBLY-AFT-WING TO FUSELAGE LH	1	
	0720613-2	FAIRING ASSEMBLY-AFT-WING TO FUSELAGE RH	1	
		ATTACHING PARTS		
-59	S1021Z8-6	SCREW	3	
-60	S1022Z8-8	SCREW	1	
		---*---		
-61	S202RB	MOULDING 9.12 IN LONG BULK ITEM REF S202RB9.12 --	1	
-62	C592001-0101	STATIC DISCHARGER WEU C592001-0103	2	E
	C592001-0103	STATIC DISCHARGER	2	AD
		ATTACHING PARTS		
	A06K75	RIVNUT	2	E
-63	AN515-6R6	SCREW	2	E
	AN936A6	WASHER	2	E
		---*---		


A---182 SERIAL 18253599 THRU 18255870
B---182 SERIAL 18257626 THRU 18260055
A182 SERIAL A182-0057 THRU A182-0116
C---182 SERIAL 18253599 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
D---182 SERIAL 18258506 THRU 18262465
A182 SERIAL A182-0097 & ON
E---182 SERIAL 18253599 THRU 18261425
A182 SERIAL A182-0001 THRU A182-0136
F---182 SERIAL 18255871 THRU 18259991
A182 SERIAL A182-0001 THRU A182-0116
G---182 SERIAL 18259992 THRU 18262465
A182 SERIAL A182-0117 & ON
H---182 SERIAL 18253599 THRU 18260021
A182 SERIAL A182-0001 THRU A182-0116
J---182 SERIAL 18260022 THRU 18262465
A182 SERIAL A182-0117 & ON
K---182 SERIAL 18260056 THRU 18262465
A182 SERIAL A182-0117 & ON

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
3 -		L---182 SERIAL 18253599 THRU 18260055 A182 SERIAL A182-0001 THRU A182-0116 M---182 SERIAL 18260056 THRU 18260179 A182 SERIAL A182-0117 THRU A182-0136 N---182 SERIAL 18260180 THRU 18260825 A182 SERIAL A182-0137 & ON P---182 SERIAL 18260056 THRU 18260445 A182 SERIAL A182-0117 THRU A182-0136 Q---182 SERIAL 18260446 THRU 18262465 A182 SERIAL A182-0137 & ON R---182 SERIAL 18258506 THRU 18260179 A182 SERIAL A182-0097 THRU A182-0116 S---182 SERIAL 18260180 THRU 18260445 A182 SERIAL A182-0117 & ON T---182 SERIAL 18253599 THRU 18260825 A182 SERIAL A182-0001 & ON U---182 SERIAL 18260826 THRU 18262465 V---182 SERIAL 18258506 THRU 18260445 A182 SERIAL A182-0097 & ON W---182 SERIAL 18253599 THRU 18260445 A182 SERIAL A182-0001 THRU A182-0116 X---182 SERIAL 18260446 THRU 18260825 A182 SERIAL A182-0137 & ON Y---182 SERIAL 18258506 THRU 18260455 Z---182 SERIAL 18260056 THRU 18260445 A182 SERIAL A182-0117 & ON AA---182 SERIAL 18260826 THRU 18262465 A182 SERIAL A182-0137 & ON AB---182 SERIAL 18260446 THRU 18260825 A182 SERIAL A182-0116 THRU A182-0136 AC---182 SERIAL 18260446 THRU 18261425 A182 SERIAL A182-0117 THRU A182-0136 AD---182 SERIAL 18261426 THRU 18262465 A182 SERIAL A182-0137 & ON		

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
4 -	0720601-201		STRUCTURE ASSEMBLY-WING LH WHEN EXHAUSTED USE 0720601-209 ---	1	A
	0720601-209		STRUCTURE ASSEMBLY-WING LH ----------	1	C
	0720601-211		STRUCTURE ASSEMBLY-WING LH ----------	1	D
	0720601-203	*	STRUCTURE ASSEMBLY-WING LH EXTENDED RANGE WHEN -------- EXHAUSTED USE 0720601-210	1	A
	0720601-210		STRUCTURE ASSEMBLY-WING LH EXTENDED RANGE ----------	1	C
	0720601-213	*	STRUCTURE ASSEMBLY-WING LH EXTENDED RANGE ----------	1	D
	0720601-202		STRUCTURE ASSEMBLY-WING RH ----------	1	A
	0720601-204	*	STRUCTURE ASSEMBLY-WING RH EXTENDED RANGE ----------	1	A
	0720601-208		STRUCTURE ASSEMBLY-WING RH ----------	1	C
	0720601-212		STRUCTURE ASSEMBLY-WING RH ----------	1	D
	0720601-207	*	STRUCTURE ASSEMBLY-WING RH EXTENDED RANGE ----------	1	C
	0720601-214	*	STRUCTURE ASSEMBLY-WING RH EXTENDED RANGE ----------	1	D
- 1	SEE FIG 5		LEADING EDGE ASSEMBLIES-WING ----------	1	
	SEE FIG 7		SKINS & STRINGERS INSTALLATION ----------	1	
- 2	SEE FIG 6		SPARS ASSEMBLIES ----------	2	
	S1131-1		INSERT ----------	1	
- 3	S1071-1		TUBE 63.7 IN LONG BULK ITEM REF S1071-1-63.7 ---- ATTACHING PARTS	1	
- 4	AN742D4		CLAMP TIN ----------	1	
	S1021Z8-8		SCREW ----------	1	
	NAS395-16-3		NUT ----------		
			---*---	1	
- 5	0760607-3		BRACKET-PULLEY AILERON LH ----------	1	
	0760607-4		BRACKET-PULLEY AILERON RH ----------	1	
- 5A	1220092-1		STIFFENER-LH ----------	1	
	1220092-2		STIFFENER-RH ----------	1	
- 6	0721100-23		RIB ASSEMBLY-WING ROOT LH ----------	1	
	0721100-24		RIB ASSEMBLY-WING ROOT RH ----------	1	
- 7	1221101-1		REINFORCEMENT-WING ROOT RIB LH ----------	1	
	1221101-2		REINFORCEMENT-WING ROOT RIB RH ----------	1	
- 8	0721100-6		ANGLE-STIFFENER ----------	2	
- 9	0721100-7		ANGLE-STIFFENER ----------	1	
-10	1220019-18	*	RIB-LH ----------	1	
	0720617-5	*	RIB-RH ----------	1	
-11	0721111-21		RIB ASSEMBLY-WING FUEL BAY LH ----------	1	
	0721111-25		RIB ASSEMBLY-WING FUEL BAY RH ----------	1	
-12	1220019-19	*	RIB ASSEMBLY-LH STA 85.625 ----------	1	
	1220019-20	*	RIB ASSEMBLY-RH STA 85.625 ----------	1	
	NAS697A08		NUTPLATE ----------	2	
-13	0721111-23		RIB-WING FUEL BAY LH ----------	1	
	0721111-24		RIB-WING FUEL BAY RH ----------	1	
-14	1220019-21	*	RIB-LH STA 85.625 ----------	1	
	1220019-22	*	RIB-RH STA 85.625 ----------	1	
-15	0721100-7		ANGLE-STIFFENER ----------	2	
-16	0721100-6		ANGLE-STIFFENER ----------	1	
-17	0722201-1		RIB-CENTER STA 85.625 ----------	1	
-18	0523510-7		RIB-CENTER WING LH STA 100.0 ----------	1	
	0523510-6		RIB-CENTER WING RH STA 100.0 ----------	1	
-19	0523511-7		RIB-CENTER STA 118.0 ----------	1	
-20	0523511-6		SPACER ----------	1	A
-21	0523512-8		RIB ASSEMBLY-CENTER STA 136.0 ----------	1	B
	0523512-14		RIB-CENTER STA 136.0 ----------	1	
	0724108-1		BRACKET ----------	1	
-22	0523513-9		RIB-CENTER WING LH STA 154.0 ----------	1	
	0523513-10		RIB-CENTER WING RH STA 154.0 ----------	1	
	0724108-1		BRACKET-SERVO CABLE SPRING SUPPORT ----------	2	G
-23	0720607-1		RIB-CENTER STA 172.0 WEU 0722198-1 ----------	1	
	0722198-1		RIB-CENTER STA 172.0 ----------	1	
-24	0720607-2		RIB-CENTER STA 190.0 WEU 0722199-1 ----------	1	
	0722199-1		RIB-CENTER STA 190.0 ----------	1	
-25	0720608-7		RIB-WING CENTER SECTION STA 208.0 WHEN EXHAUSTED ---- USE 0720608-15	1	A
	S1863-3A		NUTPLATE ----------	10	
	0720608-15		RIB-WING CENTER SECTION STA 208.0 ----------	1	B
	NAS686A08K		NUTPLATE ----------	10	
-26	NAS395-14-3		NUT ----------	2	
-27	0523232-2		RIB-TRAILING EDGE ROOT STA 23.625 ----------	1	
-28	1221010-7		RIB ASSEMBLY-FLAP TRACK STA 39.0 & 85.875 WHEN ------ EXHAUSTED USE 1221010-15	2	
	1221010-13		BRACKET ----------	1	
	1221010-14		BRACKET ----------	1	
	1221010-15		RIB ASSEMBLY-FLAP TRACK STA 39.0 & 85.875 ----------	2	
	MS35489-38S		GROMMET ----------	1	
-29	0523233-6		RIB-TRAILING EDGE STA 56.531 ----------	1	A
	0523233-6		RIB-TRAILING EDGE LH STA 56.531 ----------	1	B

CONTINUED ON NEXT PAGE

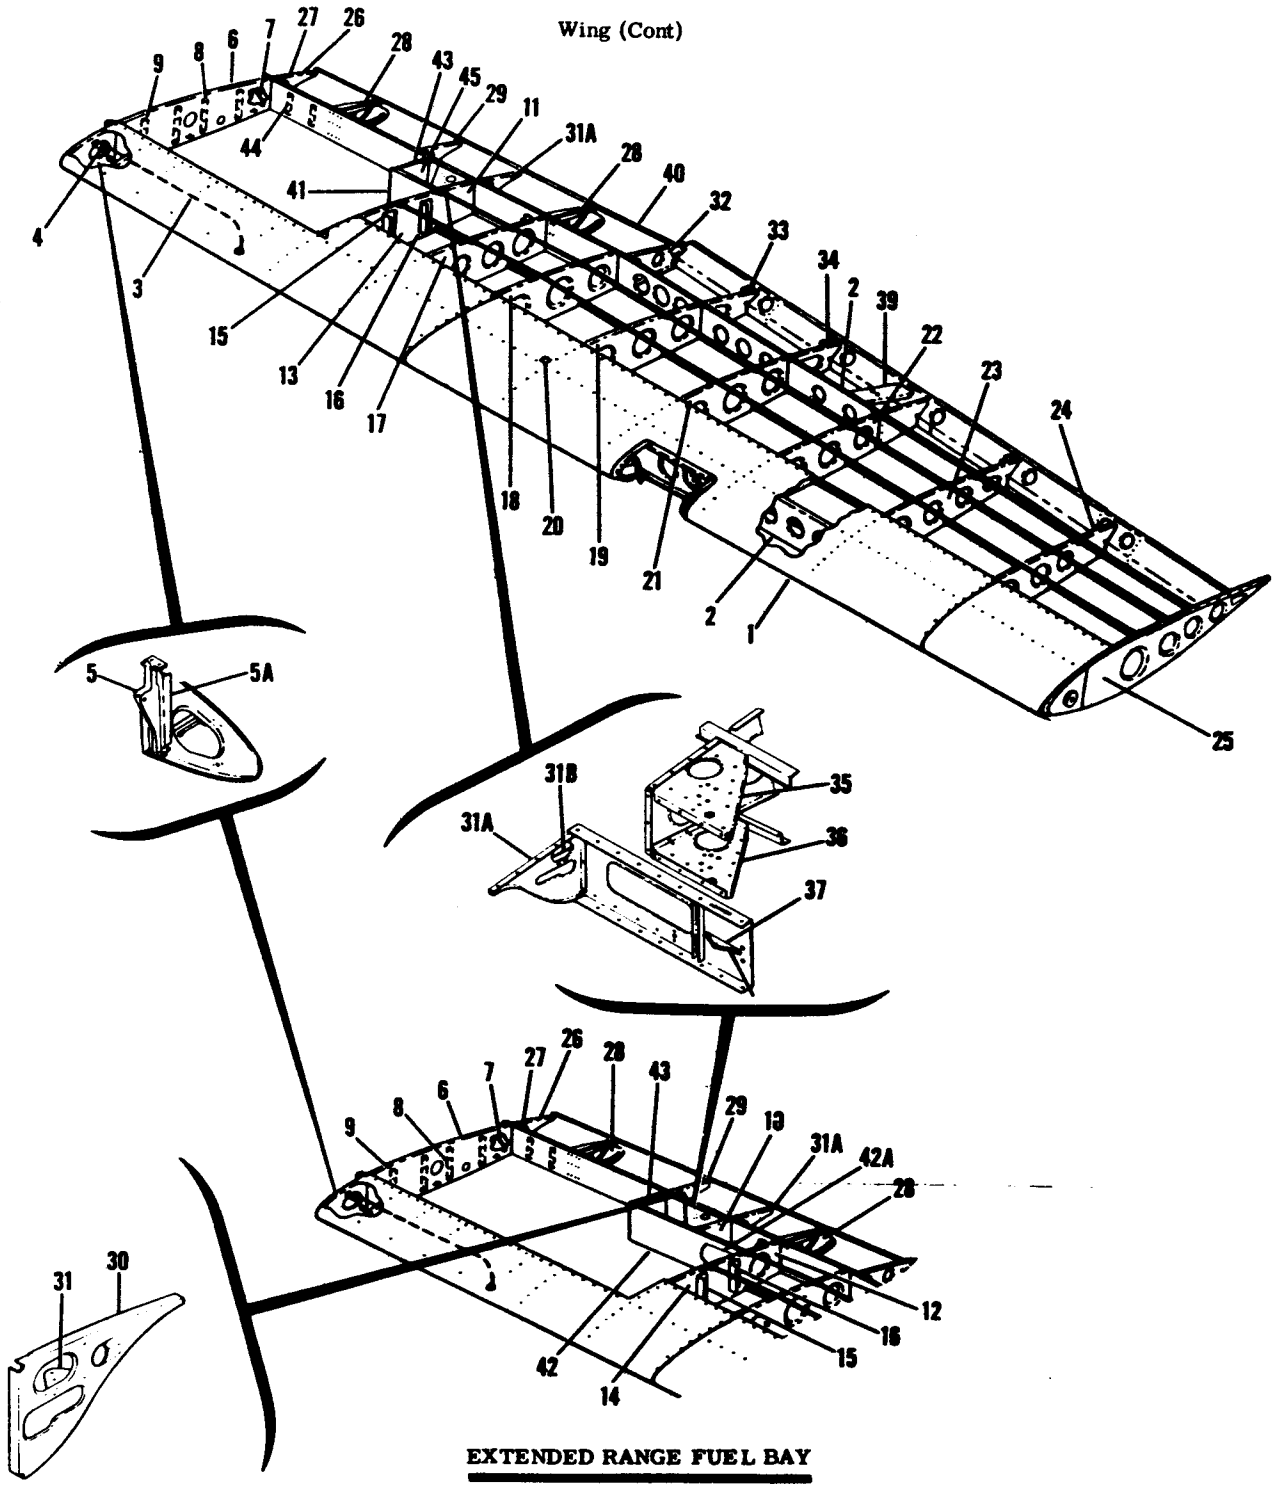

182 SERIAL 18253599 THRU 18260055

Figure 4. Wing Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
4 -30	0523233-10		RIB-TRAILING EDGE RH STA 56.531	1	E
	0523233-14		RIB-TRAILING EDGE RH STA 56.531	1	F
-31	1262020-1		BRACKET-FLAP CONTROL CLAMP	1	E
	0723627-1		BRACKET-FLAP CONTROL CLAMP	1	F
-31A	0523233-7		RIB-TRAILING EDGE STA 76.602	1	
-31B	0523233-3		RUB STRIP	1	
-32	0523230		RIB ASSEMBLY-TRAILING EDGE WING LH STA 100.5	1	
	0523230-1		RIB ASSEMBLY-TRAILING EDGE WING RH STA 100.5	1	
	0523230-4		ANGLE-WING LH	1	
	0523230-5		ANGLE-WING RH	1	
-33	0523511-4		RIB-TRAILING EDGE STA 118.0	1	
-34	0523512-4		RIB-TRAILING EDGE STA 136.0	1	
-35	0721112-3		BRACKET-FLAP BELLCRANK UPPER LH	1	
	0720606-1		BRACKET-FLAP BELLCRANK UPPER RH	1	
-36	0721112-1		BRACKET-FLAP BELLCRANK LOWER LH	1	
	0720606-2		BRACKET-FLAP ACTUATOR LWR RH WHEN EXHAUSTED USE 0720606-12-	1	C
	0720606-12		BRACKET-FLAP ACTUATOR LWR RH	1	D
-37	0760618-1		BRACKET-FLAP PULLEY UPPER LH	1	
			ATTACHING PARTS		
	AN520-10R8		SCREW	2	
	MS21044N3		NUT	2	
			---*---		
	0523407-1		BRACKET-FLAP PULLEY UPPER RH	1	
	0720606-3	*	DOUBLER-FLAP ACTUATOR UPPER RH	1	
-38	0760618-2		BRACKET-FLAP PULLEY LOWER LH	1	
			ATTACHING PARTS		
	AN520-10R8		SCREW	2	
	MS21044N3		NUT	2	
			---*---		
	0523407		BRACKET-FLAP PULLEY LOWER RH	1	
	0720606-4	*	DOUBLER-FLAP ACTUATOR LWR RH WHEN EXHAUSTED USE 0720606-10-	1	C
	0720606-10	*	DOUBLER-FLAP ACTUATOR LWR RH	1	D
-39	0523219-2		CHANNEL-AILERON BELLCRANK SUPPORT UPPER LH	1	
	0523219-3		CHANNEL-AILERON BELLCRANK SUPPORT UPPER RH	1	
	0523219-4		CHANNEL-AILERON BELLCRANK SUPPORT LOWER LH	1	
	0523219-5		CHANNEL-AILERON BELLCRANK SUPPORT LOWER RH	1	
-40	0720005-1		STIFFENER-TRAILING EDGE INBOARD	1	
-41	0721111-5		BULKHEAD ASSEMBLY WHEN EXHAUSTED USE 0721111-28	1	C
	0721111-28		BULKHEAD ASSEMBLY	1	D
-42	1220019-13	*	BULKHEAD ASSEMBLY-LH	1	C
	1220019-25	*	BULKHEAD ASSEMBLY-RH	1	D
	1220019-27	*	BULKHEAD ASSY-RH	1	
-42A	1220019-17		CUP LH WING ONLY	1	
-43	0721111-3		RIB-LH STA 56.531	1	C
	0721111-4		RIB-RH STA 56.531	1	D
	0721111-26		RIB-RH STA. 56.531	1	
-44	0760617-1		BRACKET ASSEMBLY-IDLER LH WING ONLY	1	
	0720616-1		SUPPORT ASSEMBLY-TRANSMITTER RH SIDE ONLY	1	A
-45	1262011-1		SUPPORT-LEVER ARM FLAP CONTROL UPR RH SIDE ONLY	1	B
	1262011-2		SUPPORT-LEVER ARM FLAP CONTROL LWR RH SIDE ONLY	1	B

NOTE. *DENOTED PARTS USED ON WING WITH EXTENDED RANGE FUEL TANK.

NOTE. WING STRUCTURE ASSEMBLIES INCLUDE ALL WIRING NECESSARY FOR INSTALLATION.

A---182 SERIAL 18253599 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096

B---182 SERIAL 18258506 THRU 18260055
A182 SERIAL A182-0097 THRU A182-0116

C---182 SERIAL 18258506 THRU 18259170 EXCEPT-
18258606, 18258609, 18258618, 18258625,
18258632, 18258639, 18258646, 18258653,
18258660, 18258667, 18258674, 18258681,
18258689, 18258695, 18258702, 18258709,
18258716, 18258723, 18258730, 18258737
A182 SERIAL A182-0001 THRU A182-0116


D---182 SERIAL 18258606, 18258609, 18258618, 18258625,
18258632, 18258639, 18258646, 18258653,
18258660, 18258667, 18258674, 18258681,
18258689, 18258695, 18258702, 18258709,
18258716, 18258723, 18258730, 18258737,
18259171 THRU 18260055


E---182 SERIAL 18258506 THRU 18260009
A182 SERIAL A182-0097 THRU A182-0116


F---182 SERIAL 18260010 THRU 18260055


G---182 SERIAL 18258866 THRU 18260055

Wing (Cont)

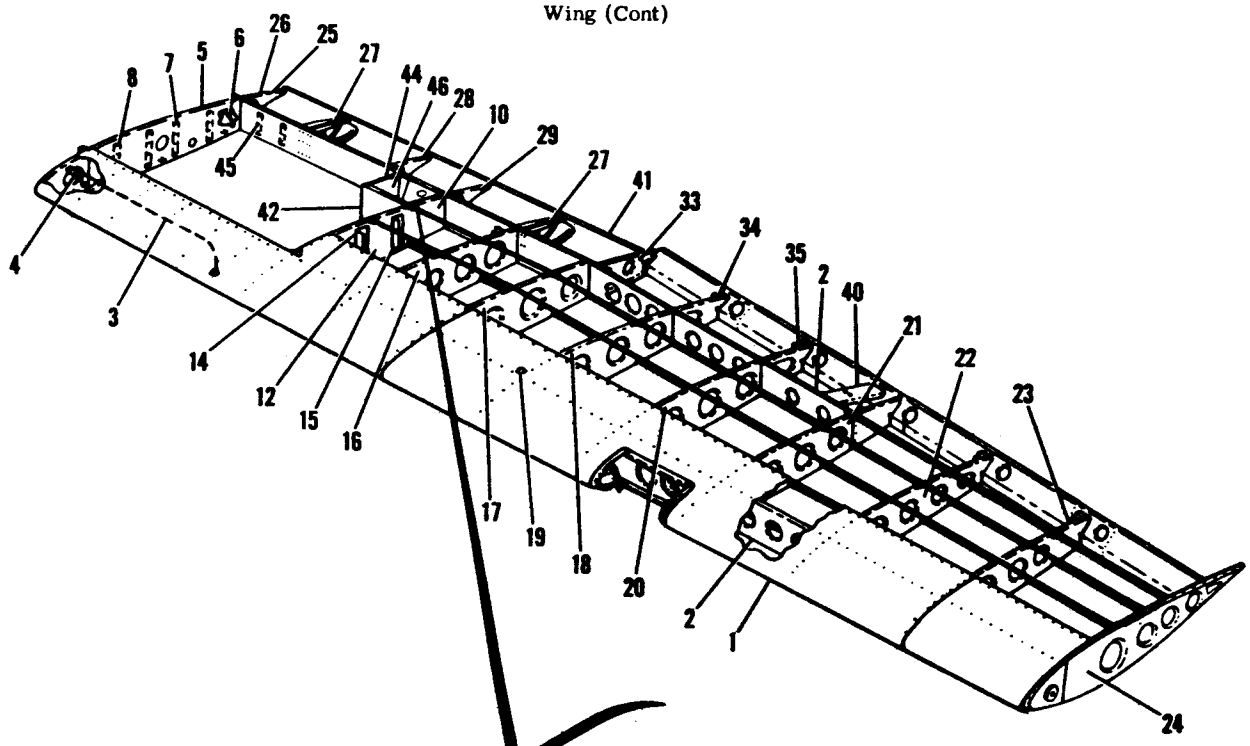

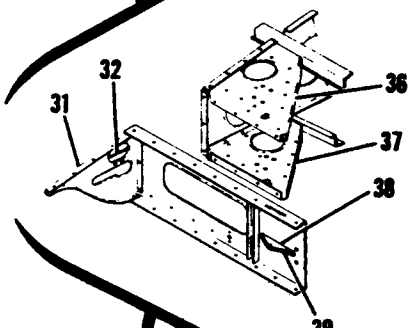

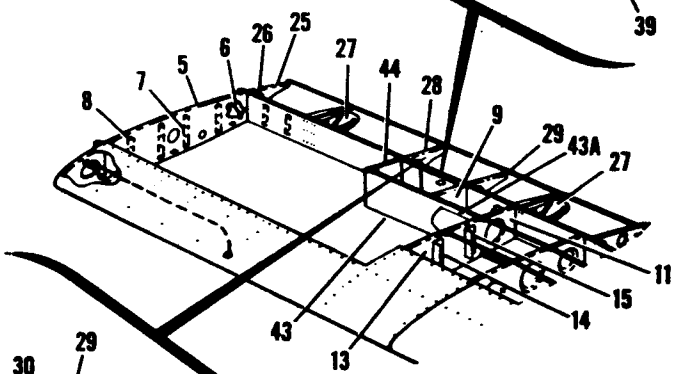

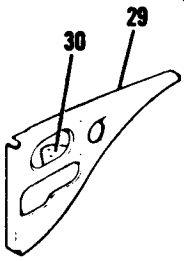

EXTENDED RANGE FUEL BAY

182 SERIAL 18260056 THRU 18260825

Figure 4A. Wing Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
4A-	0721182-200		STRUCTURE ASSY-LH WING WEU 0721182-205	1	A
	0721182-205		STRUCTURE ASSY-LH WING	1	B
	0721182-202	*	STRUCTURE ASSY-LH EXTENDED RANGE WEU 0721182-207	1	A
	0721182-207	*	STRUCTURE ASSY-LH WING EXTENDED RANGE	1	B
	0721182-201		STRUCTURE ASSEMBLY-RH WING	1	A
	0721182-204		STRUCTURE ASSY-RH WING	1	B
	0721182-203	*	STRUCTURE ASSEMBLY-RH WING EXTENDED RANGE	1	A
	0721182-206	*	STRUCTURE ASSY-RH WING EXTENDED RANGE	1	B
			LEADING EDGE ASSEMBLIES-WING	1	
- 1	SEE FIG 5A		SKINS & STRINGERS INSTALLATION	1	
	SEE FIG 7		SPARS ASSEMBLIES	1	
- 2	SEE FIG 6		INSERT	2	
	S1131-1		TUBE 63.7 IN LG BULK ITEM REF S1071-1-63.7	1	
- 3	S1071-1		ATTACHING PARTS		
			CLAMP TIN	1	
- 4	AN74204		SCREW	1	
	S1021Z8-8		NUT	1	
	NAS395-16-3		---*---		
			RIB ASSEMBLY-WING ROOT LH	1	
- 5	0721100-23		RIB ASSEMBLY-WING ROOT RH	1	
	0721100-24		REINFORCEMENT-WING ROOT RIB LH	1	
- 6	1221101-1		REINFORCEMENT-WING ROOT RIB RH	1	
	1221101-2		ANGLE-STIFFENER	1	
- 7	0721100-6		ANGLE-STIFFENER	2	
- 8	0721100-7		RIB-LH	1	
- 9	1220019-18		RIB-RH	1	
	0720617-5	*	RIB ASSEMBLY-WING FUEL BAY LH	1	
-10	0721111-21		RIB ASSEMBLY-WING FUEL BAY RH	1	
	0721111-25		RIB ASSEMBLY-LH STA 85.625	1	
-11	1220019-19	*	RIB ASSEMBLY-RH STA 85.625	1	
	1220019-20	*	NUTPLATE	2	
	NAS697A08		RIB-WING FUEL BAY LH	1	
-12	0721111-23		RIB-WING FUEL BAY RH	1	
	0721111-24		RIB-LH STA 85.625	1	
-13	1220019-21	*	RIB-RH STA 85.625	1	
	1220019-22	*	ANGLE-STIFFENER	2	
-14	0721100-7		ANGLE-STIFFENER	1	
-15	0721100-6		RIB-CENTER LH STA 85.625 WEU 0722201-1	1	
-16	0523509-2		RIB-CENTER RH STA 85.625 WEU 0722201-1	1	
	0523509-5		RIB-CENTER STA 85.625	1	
	0722201-1		NUTPLATE	2	
	NAS697A08		RIB-CENTER WING LH STA 100.00	1	
-17	0523510-7		RIB-CENTER WING RH STA 100.00	1	
	0523510-6		RIB-CENTER STA 118.00 WEU 0722195-1	1	
-18	0523511-16		RIB-CENTER STA 118.00	1	
	0722195-1		SPACER	1	
-19	0523511-6		RIB ASSY-CENTER STA 136.0 WEU 0722196-2	1	B
-20	0523512-25		NUT	4	B
	NAS686A3		RIB-CENTER RH STA 136.0	1	B
	0722196-2		RIB ASSY-CENTER LH WEU 0722196-1	1	B
	0523512-24		RIB ASSY-CENTER LH STA 136.0	1	B
	0722196-1		BRACKET ASSY-AFT	1	
	0722016-1		BRACKET ASSY-FWD	1	
	0722016-2		NUTPLATE	2	
	NAS686A08		BRACKET	1	
	0724108-1		RIB-CENTER WING LH STA 154.00 WEU 0722197-3	1	
-21	0523513-15		RIB-CENTER LH STA 154.00	1	B
	0722197-3		RIB-CENTER WING RH STA 154.00 WEU 0722197-4	1	
	0523513-16		RIB-CENTER RH STA 154.00	1	B
	0722197-4		BRACKET	1	
	0724108-1		GROMMET-LH WING ONLY 2.25 IN LG BKI REF S1050-3-2.25	AR	
	S1050-3		RIB-CENTER STA 172.00 WEU 0722198-1	1	
-22	0720607-1		RIB-CENTER STA 172.00	1	B
	0722198-1		RIB-CENTER STA 190.00 WEU 0722199-1	1	
-23	0720607-2		RIB-CENTER STA 190.00	1	B
	0722199-1		RIB-WING CENTER SECTION STA 208.00	1	
-24	0720608-15		NUTPLATE	10	
	NAS686A08K		NUT	4	
-25	NAS395-14-3		RIB-TRAILING EDGE ROOT STA 23.625	1	
-26	0523232-2				

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
4A-27	1221010-15		RIB ASSEMBLY-FLAP TRACK STA 39.00 & 85.875	2	
			ATTACHING PARTS		
	NAS221-8		SCREW	2	
	AN960-10		WASHER	2	
	MS21044N3		NUT	2	
			---*---		
	MS35489-38		GROMMET	1	
-28	0523233-6		RIB-TRAILING EDGE LH STA 56.531	1	
-29	0523233-14		RIB ASSY-TRAILING EDGE STA 56.531	1	A
-30	0723627-1		BRACKET-FLAP CONTROL CLAMP	1	A
	0523233-20		RIB-TRAILING EDGE RH STA 56.531	1	B
-31	0523233-7		RIB-TRAILING EDGE STA 72.602	1	
-32	0523233-3		RUB STRIP	1	
-33	0523230		RIB ASSEMBLY-TRAILING EDGE WING LH STA 100.5	1	
	0523230-1		RIB ASSEMBLY-TRAILING EDGE WING RH STA 100.5	1	
	0523230-4		ANGLE-WING LH	1	
	0523230-5		ANGLE-WING RH	1	
-34	0523511-4		RIB-TRAILING EDGE STA 118.00	1	
-35	0523512-4		RIB-TRAILING EDGE STA 136.00	1	
-36	0721117-3		BRACKET-FLAP BELLCRANK UPPER LH	1	
	0720606-5		BRACKET-FLAP BELLCRANK UPPER RH	1	
-37	0721117-1		BRACKET-FLAP ACTUATOR LOWER LH	1	
	0720606-8		BRACKET-FLAP ACTUATOR LOWER RH	1	
-38	0760618-1		BRACKET-FLAP PULLEY UPPER LH	1	
			ATTACHING PARTS		
	AN520-10R8		SCREW	2	
	MS21044N3		NUT	2	
			---*---		
	0523407-1		BRACKET-FLAP PULLEY UPPER RH	1	
	0720606-3	*	DOUBLER-FLAP ACTUATOR UPPER RH	1	
-39	0760618-2		BRACKET-FLAP PULLEY LOWER	1	
			ATTACHING PARTS		
	AN520-10R8		SCREW	2	
	MS21044N3		NUT	2	
			---*---		
	0523407		BRACKET-FLAP PULLEY LOWER RH	1	
	0720606-10	*	DOUBLER-FLAP ACTUATOR LOWER RH	1	
-40	0523219-2		CHANNEL-AILERON BELLCRANK SUPPORT UPPER LH	1	
	0523219-3		CHANNEL-AILERON BELLCRANK SUPPORT UPPER RH	1	
	0523219-6		CHANNEL-AILERON BELLCRANK SUPPORT LOWER RH	1	
	0523219-7		CHANNEL-AILERON BELLCRANK SUPPORT LOWER LH	1	
-41	0720005-1		STIFFENER-TRAILING EDGE INBOARD	1	
-42	0722012-11		BULKHEAD ASSEMBLY-LH	1	
	0722012-12		BULKHEAD ASSEMBLY-RH	1	A
	0722012-16		BULKHEAD ASSEMBLY-RH	1	
-43	1220019-13	*	BULKHEAD ASSEMBLY-LH	1	
	1220019-27	*	BULKHEAD ASSEMBLY-RH	1	A
	1220019-35	*	BULKHEAD ASSEMBLY-RH	1	B
-43A	1220019-17		CUP	1	
-44	0721111-3		RIB-LH STA 56.531	1	
	0721111-26		RIB-RH STA 56.531	1	A
	0721111-33		RIB-RH STA 56.531	1	B
-45	0760617-1		BRACKET ASSEMBLY-IDLER LH WING ONLY	1	
-46	1262011-1		SUPPORT-LEVER ARM FLAP CONTROL UPR RH SIDE ONLY	1	A
	1262011-2		SUPPORT-LEVER ARM FLAP CONTROL LWR RH SIDE ONLY	1	A

NOTE. *DENOTES PARTS USED ON WING WITH EXTENDED RANGE FUEL TANK.


NOTE. WING STRUCTURE ASSEMBLIES INCLUDE ALL WIRING NECESSARY FOR INSTALLATION.

A---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
B---182 SERIAL 18260446 THRU 18260825

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
48-	0722182-1		STRUCTURE ASSY-LH WING	1	A
	0722182-3	*	STRUCTURE ASSY-LH WING EXTENDED RANGE	1	A
	0722182-2		STRUCTURE ASSY-RH WING	1	A
	0722182-4	*	STRUCTURE ASSY-RH WING EXTENDED RANGE	1	A
- 1	SEE FIG 5B		LEADING EDGE ASSEMBLIES-WING	1	
	SEE FIG 7A		SKINS & STRINGERS INSTALLATION	1	
- 2	SEE FIG 6A		SPARS ASSEMBLIES	2	
	S1131-1		INSERT	1	
- 3	S1071-1		TUBE 63.7 IN LG BULK ITEM REF S1071-1-63.7		
			ATTACHING PARTS		
- 4	AN742D4		CLAMP TIN	1	
	S1021Z8-8		SCREW	1	
	NAS395-16-3		NUT	1	
			---*---		
- 5	0722017-1		RIB ASSEMBLY-WING ROOT LH	1	
	0722017-2		RIB ASSEMBLY-WING ROOT RH	1	
- 6	1221101-3		REINFORCEMENT-WING ROOT RIB LH	1	
	1221101-4		REINFORCEMENT-WING ROOT RIB RH	1	
- 7	0721100-6		ANGLE-STIFFENER	2	
- 8	0721100-7		ANGLE-STIFFENER	1	
- 9	1220019-18	*	RIB-LH	1	
	0720617-5	*	RIB-RH	1	
-10	0721111-21		RIB ASSEMBLY-WING FUEL BAY LH	1	
	0721111-25		RIB ASSEMBLY-WING FUEL BAY RH	1	
-11	1220019-19	*	RIB ASSEMBLY-LH STA 85.625	1	
	1220019-20	*	RIB ASSEMBLY-RH STA 85.625	1	
	NAS697A08		NUTPLATE	2	
-12	0721111-23		RIB-WING FUEL BAY LH	1	
	0721111-24		RIB-WING FUEL BAY RH	1	
-13	1220019-21	*	RIB-LH STA 85.625	1	
	1220019-22	*	RIB-RH STA 85.625	1	
-14	0721100-7		ANGLE-STIFFENER	2	
-15	0721100-6		ANGLE-STIFFENER	1	
-16	0722201-1		RIB-CENTER STA 85.375	1	
-17	0722194-1		RIB ASSEMBLY-CENTER WING LH STA 100.00	1	
	0722194-2		RIB ASSEMBLY-CENTER WING RH STA 100.00	1	
-18	0722195-1		RIB-CENTER STA 118.00	1	
-19	0523511-6		SPACER	1	D
-20	0722196-1		RIB ASSEMBLY-CENTER STA 136.00	1	D
	0722016-1		BRACKET ASSEMBLY-AFT	1	D
	0722016-2		BRACKET ASSEMBLY-FWD	2	
	NAS686A3		NUTPLATE	1	E
	0722196-2		RIB-CENTER STA 136.00	1	
-21	0722197-1		RIB ASSEMBLY-CENTER WING LH STA 154.00	1	
	0722197-2		RIB ASSEMBLY-CENTER WING RH STA 154.00	1	
	0724108-1		BRACKET	1	
-22	0722198-1		RIB-CENTER STA 172.00	1	
-23	0722199-1		RIB-CENTER STA 190.00	1	
-24	0722200-1		RIB ASSEMBLY-CENTER LH WING STA 208.00	1	
	0722200-2		RIB ASSEMBLY-CENTER RH WING STA 208.00	1	
	NAS686A08		NUTPLATE	10	
-25	0721107-1		FAIRING-TRAILING EDGE LH STA 208.00	1	
	0721107-2		FAIRING-TRAILING EDGE RH STA 208.00	1	
-26	0523232-2		RIB-TRAILING EDGE ROOT STA 23.625	1	
-27	NAS395-14-3		NUT	2	
-28	1221010-15		RIB ASSEMBLY-FLAP TRACK STA 39.00 & 85.88	2	
			ATTACHING PARTS		
	NAS221-8		SCREW	2	
	AN960-10		WASHER	2	
	MS21044N3		NUT	2	
			---*---		
-29	0523233-6		RIB-TRAILING EDGE LH STA 56.53	1	
	0523233-20		RIB-TRAILING EDGE RH STA 56.53	1	
-30	0523233-7		RIB ASSEMBLY-TRAILING EDGE STA 72.602	1	
-31	0523233-3		RUB STRIP	1	

CONTINUED ON NEXT PAGE

Wing (Cont)

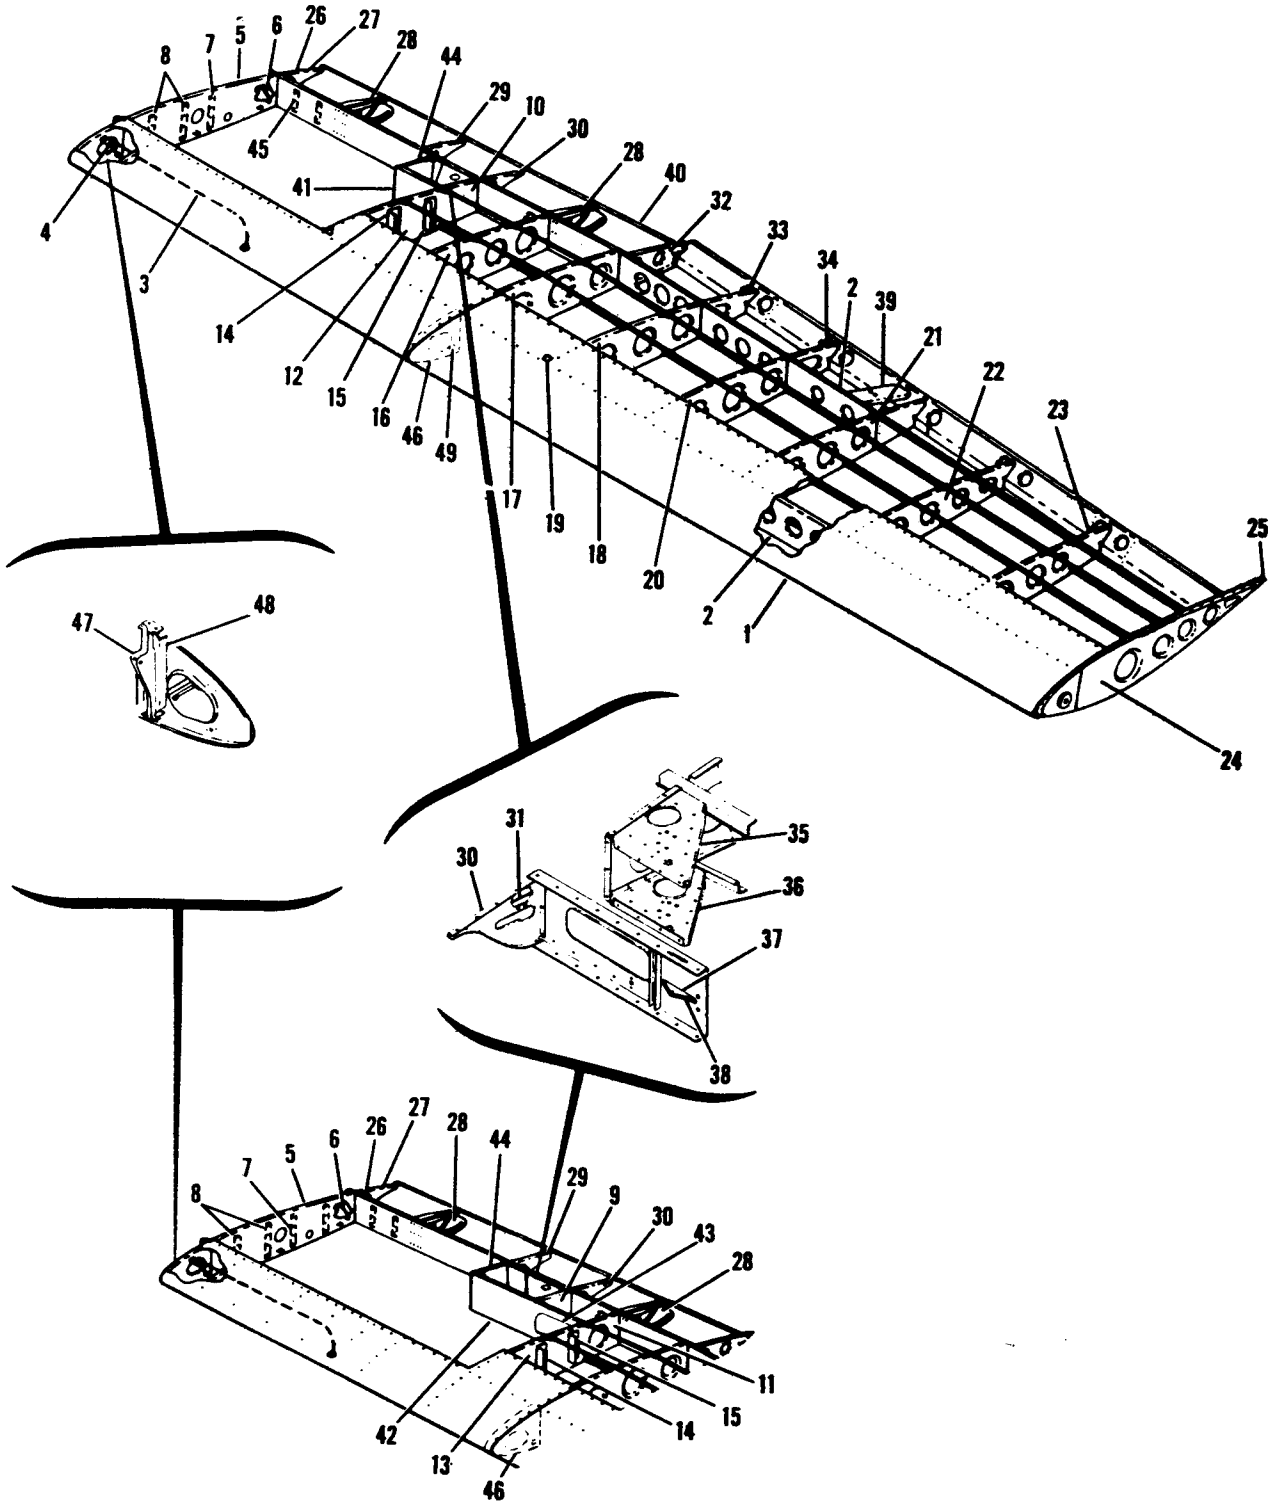

EXTENDED RANGE FUEL BAY

182 SERIAL 18260826 THRU 18262465

Figure 4B. Wing Structure Assembly


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
48-32	0523230		RIB ASSEMBLY-TRAILING EDGE WING LH STA 100.50	1	
	0523230-1		RIB ASSEMBLY-TRAILING EDGE WING RH STA 100.50	1	
	0523230-4		ANGLE-WING LH	1	
	0523230-5		ANGLE-WING RH	1	
-33	0523511-4		RIB-TRAILING EDGE STA 118.00	1	
-34	0523512-4		RIB-TRAILING EDGE STA 136.00	1	
-35	0721117-3		BRACKET-FLAP BELLCRANK UPPER LH	1	
	0720606-5		DOUBLER-FLAP ACTUATOR UPPER RH	1	
	0720606-3	*	DOUBLER-FLAP ACTUATOR UPPER RH	1	
-36	0721117-1		BRACKET-FLAP BELLCRANK LOWER LH	1	
	0720606-8		DOUBLER-FLAP ACTUATOR LOWER RH	1	
	0720606-10	*	DOUBLER-FLAP ACTUATOR LOWER RH	1	
-37	0760618-1		BRACKET-FLAP PULLEY UPPER LH	1	
			ATTACHING PARTS		
	AN520-10R8		SCREW	2	
	MS21044N3		NUT	2	
			---*---		
	0523407-1		BRACKET-FLAP PULLEY UPPER RH	1	
-38	0760618-2		BRACKET-FLAP PULLEY LOWER LH	1	
			ATTACHING PARTS		
	AN520-10R8		SCREW	2	
	MS21044N3		NUT	2	
			---*---		
	0523407		BRACKET-FLAP PULLEY LOWER RH	1	
-39	0523219-2		CHANNEL-AILERON BELLCRANK SUPPORT UPPER LH	1	
	0523219-3		CHANNEL-AILERON BELLCRANK SUPPORT UPPER RH	1	
	0523219-6		CHANNEL-AILERON BELLCRANK SUPPORT LOWER RH	1	
	0523219-7		CHANNEL-AILERON BELLCRANK SUPPORT LOWER LH	1	
-40	0720005-1		STIFFENER-TRAILING EDGE INBOARD	1	
-41	0722012-11		BULKHEAD ASSEMBLY-LH	1	
	0722012-16		BULKHEAD ASSEMBLY-RH	1	
-42	1220019-13	*	BULKHEAD ASSEMBLY-LH	1	
	1220019-35	*	BULKHEAD ASSEMBLY-RH	1	
-43	1220019-17		CUP	1	
-44	0721111-3		RIB-LH STA 56.531	1	
	0721111-33		RIB-RH STA 56.531	1	
-45	0760617-1		BRACKET ASSEMBLY-IDLER LH WING ONLY	1	
-46	0722187-7		RIB-LEADING EDGE LH STA 100.00	1	
	0722187-8		RIB-LEADING EDGE RH STA 100.00	1	
-47	0760607-3		BRACKET ASSEMBLY-AILERON PULLEY LH	1	
	0760607-4		BRACKET ASSEMBLY-AILERON PULLEY RH	1	
-48	1220092-1		STIFFENER-LH	1	
	1220092-2		STIFFENER-RH	1	
-49	NAS557-8A		GROMMET 1LH & 1RH	2	B
	S1291-8		GROMMET 1LH & 1RH	2	C

NOTE. *DENOTED PARTS USED ON WING WITH EXTENDED RANGE FUEL TANK.

NOTE. WING STRUCTURE ASSEMBLIES INCLUDE ALL WIRING NECESSARY FOR INSTALLATION.

A---182 SERIAL 18260826 THRU 18262465
B---182 SERIAL 18260826 THRU 18261040
C---182 SERIAL 18261041 THRU 18262465
D---182 SERIAL 18260826 THRU 18261425
E---182 SERIAL 18261426 THRU 18262465

Wing (Cont)

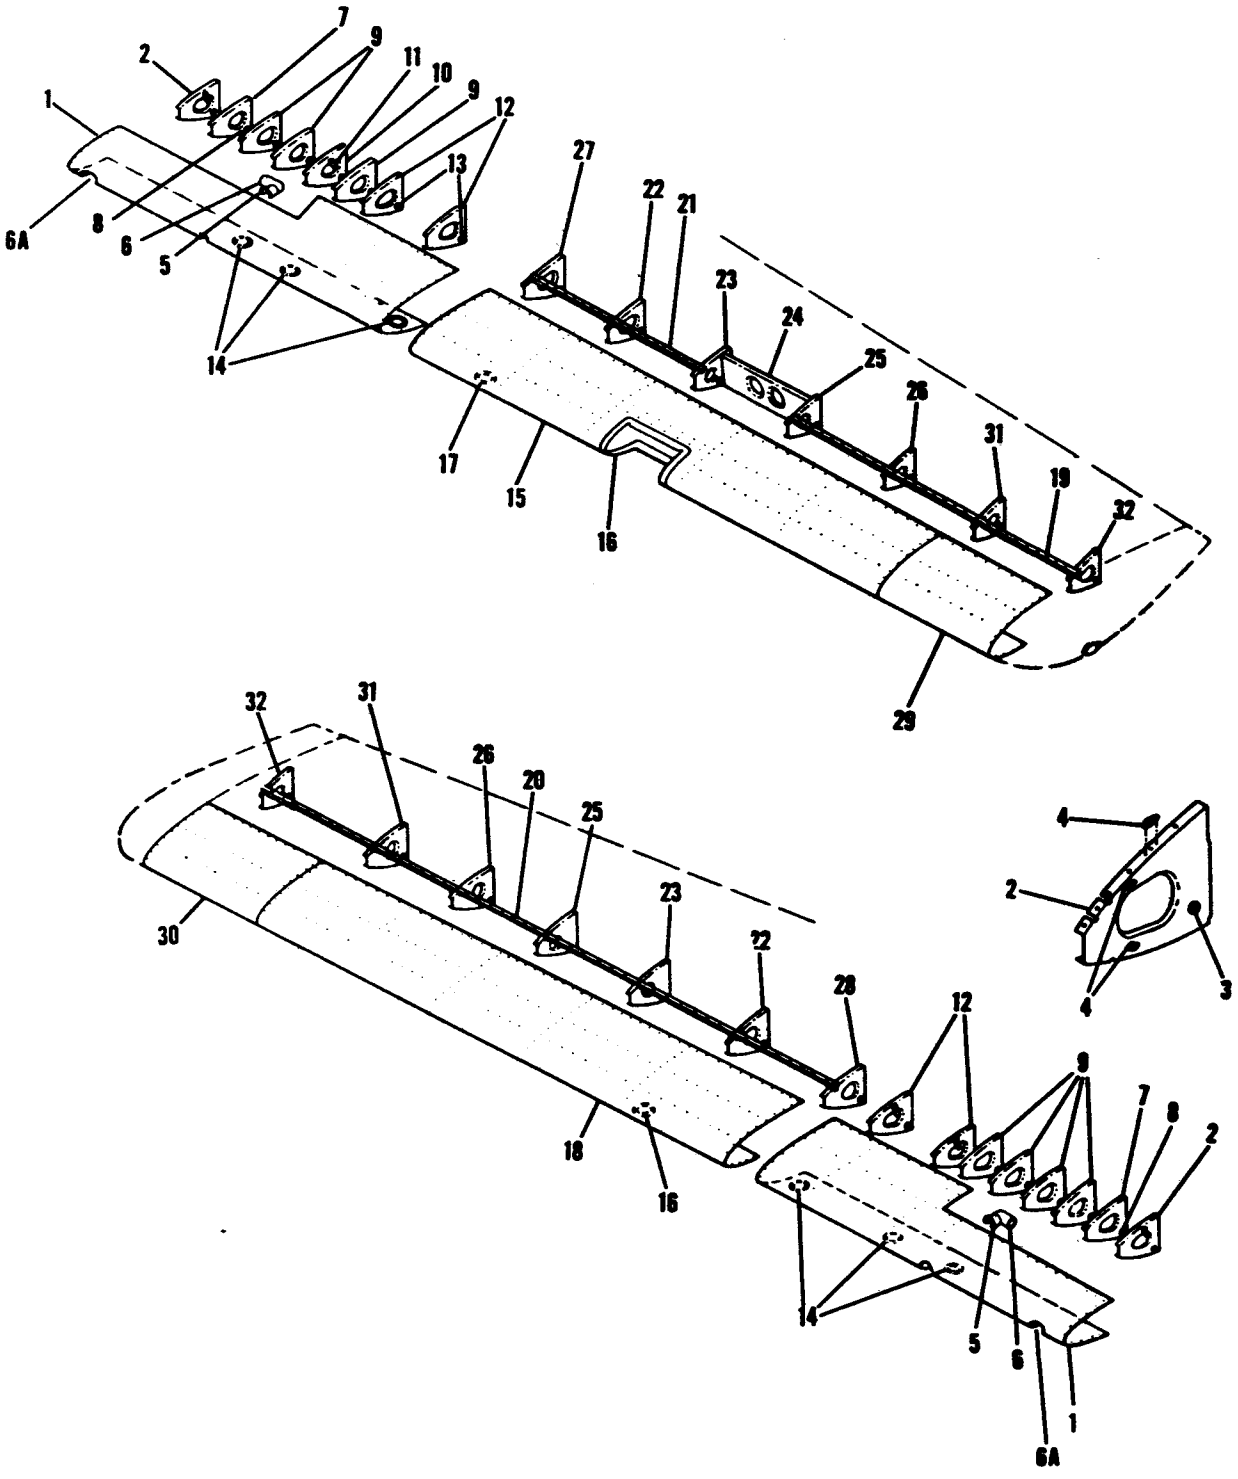

182 SERIAL 18253599 THRU 18260055

Figure 5. Wing Leading Edge Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
5 -	0720601-3		LEADING EDGE ASSEMBLY-WING INBOARD LH STA 23.625 TO 100.00-	1	A
	0720601-59		LEADING EDGE ASSEMBLY-WING INBOARD LH STA 23.625 TO 100.00-	1	B
	0720601-29	*	LEADING EDGE ASSEMBLY-WING INBOARD LH STA 23.625 TO 100.00-	1	A
	0720601-61	*	LEADING EDGE ASSEMBLY-WING INBOARD LH STA 23.625 TO 100.00-	1	B
	0720601-4		LEADING EDGE ASSEMBLY-WING INBOARD RH STA 23.625 TO 100.00-	1	A
	0720601-60		LEADING EDGE ASSEMBLY-WING INBOARD RH STA 23.625 TO 100.00-	1	B
	0720601-30	*	LEADING EDGE ASSEMBLY-WING INBOARD RH STA 23.625 TO 100.00-	1	A
	0720601-62	*	LEADING EDGE ASSEMBLY-WING INBOARD RH STA 23.625 TO 100.00-	1	B
- 1	0720601-11		SKIN-LEADING EDGE INBOARD LH	1	A
	0720601-57		SKIN-LEADING EDGE INBOARD LH	1	B
	1220003-5	*	SKIN-LEADING EDGE INBOARD LH	1	A
	1220003-26	*	SKIN-LEADING EDGE INBOARD LH WEU 1220003-25	1	B
	1220003-25	*	SKIN-LEADING EDGE INBOARD LH	1	B
	0720601-12		SKIN-LEADING EDGE INBOARD RH	1	A
	0720601-58		SKIN-LEADING EDGE INBOARD RH	1	B
	1220004-4	*	SKIN-LEADING EDGE INBOARD RH	1	A
	1220004-25	*	SKIN-LEADING EDGE INBOARD RH WEU 1220004-24	1	B
	1220004-24		SKIN-LEADING EDGE INBOARD RH	1	B
- 2	0720603-1		RIB ASSEMBLY-LEADING EDGE NOSE LH STA 23.625	1	
	0720603-2		RIB ASSEMBLY-LEADING EDGE NOSE RH STA 23.625	1	
- 3	MS20230A2		GROMMET	2	
- 4	S1863-3A		NUTPLATE	1	
- 5	0413157		SCOOP-CABIN AIR VENT	1	
- 6	0450314		FITTING-CABIN AIR VENT		
			ATTACHING PARTS	1	
	S1021Z8-8		SCREW	1	
	NAS446-4-3		NUT		
			---*---	1	B
- 6A	1200637-2		SCOOP-AIR	1	B
	0700692-1		CAP-AIR INLET		
			ATTACHING PARTS	1	B
	NAS397-22		CLAMP		
			---*---	1	
- 7	0523107		RIB ASSEMBLY-NOSE STA 34.5	1	
- 8	MS20230A2		GROMMET	3	
- 9	0720611-4		RIB ASSEMBLY-LH STA 40.375,48.75 & 64.5	4	
	0720611-4		RIB ASSEMBLY-RH STA 40.375,48.75,57.125 & 64.5	1	
-10	0720611-5		RIB ASSEMBLY-WING LEADING EDGE LH STA 57.125	1	
-11	0422292		BRACKET-LH WING ONLY	1	
	MS20230A2		GROMMET	2	
-12	0720604-1		RIB ASSEMBLY-NOSE STA 71.977 & 85.625	1	
-13	MS20230A2		GROMMET	3	
-14	S226-2		DOUBLER-INSPECTION OPENING	3	
	NAS444-14-3		NUT	1	
	0720601-5		LEADING EDGE ASSEMBLY-WING OUTBOARD LH STA 100.00 TO 190 --	1	
	0720601-6		LEADING EDGE ASSEMBLY-WING OUTBOARD RH STA 100.00 TO 190 --	1	
-15	0720601-205		SKIN ASSEMBLY-LEADING EDGE LH	1	
-16	0722100-1		DOUBLER ASSEMBLY-LANDING LIGHT	1	
-17	S226-2		DOUBLER-INSPECTION OPENING	3	
	NAS444-14-3		NUT	1	
-18	0720601-14		SKIN-LEADING EDGE RH	1	
-19	0523541-61		STRINGER-LH	1	
-20	0523541-62		STRINGER-RH	1	
-21	0523541-63		STRINGER-LH	1	
	MS20230A2		GROMMET	1	
-22	0720602-1		RIB ASSEMBLY-NOSE STA 118.0	1	
	MS20230A2		GROMMET	1	
-23	0720609-1		RIB ASSEMBLY-NOSE STA 136.0	1	
	MS20230A2		GROMMET	1	
-24	0523106-4		BRACKET ASSEMBLY-LANDING LIGHT LH ONLY	6	
	NAS680A08		NUTPLATE	1	
-25	0720608-3		RIB ASSEMBLY STA 154.0	1	
	MS20230A2		GROMMET	1	
-26	0720607-3		RIB ASSEMBLY STA 172.0	1	
	MS20230A2		GROMMET	1	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
5 -27	0720610-1	RIB ASSEMBLY-NOSE LH STA 100.00	1	
-28	0720610-2	RIB ASSEMBLY-NOSE RH STA 100.00	1	
	MS20230AZ	GROMMET	1	
-29	0720601-15	SKIN-LEADING EDGE LH	1	
-30	0720601-16	SKIN-LEADING EDGE RH	1	
-31	0720607-4	RIB ASSEMBLY STA 190.00	1	
-32	0720608-2	RIB ASSEMBLY STA 208.0	1	
		NOTE. *DENOTED PARTS USED ON WING WITH EXTENDED RANGE FUEL TANK.		
		A---182 SERIAL 18253599 THRU 18254526		
		B---182 SERIAL 18254527 THRU 18260055 A182 SERIAL A182-0001 THRU A182-0116		

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
5A-	0721182-5		LEADING EDGE ASSEMBLY-WING INBOARD LH STA 23.62 TO 100.00 -	1	A
	0721182-7	*	LEADING EDGE ASSEMBLY-WING INBOARD LH STA 23.62 TO 100.00 -	1	A
	0721182-6		LEADING EDGE ASSEMBLY-WING INBOARD RH STA 23.62 TO 100.00 -	1	A
	0721182-8	*	LEADING EDGE ASSEMBLY-WING INBOARD RH STA 23.62 TO 100.00 -	1	A
- 1	0720601-57		SKIN-LEADING EDGE INBOARD LH -	1	
	1220003-26	*	SKIN-LEADING EDGE INBOARD LH WEU 1220003-25 -	1	B
	1220003-25	*	SKIN-LEADING EDGE INBOARD LH -	1	C
	0720601-58		SKIN-LEADING EDGE INBOARD RH -	1	
	1220004-25	*	SKIN-LEADING EDGE INBOARD RH WEU 1220004-24 -	1	B
	1220004-24	*	SKIN-LEADING EDGE INBOARD RH -	1	C
- 2	0720603-1		RIB ASSEMBLY-LEADING EDGE NOSE LH STA 23.62 -	1	
	0720603-2		RIB ASSEMBLY-LEADING EDGE NOSE RH STA 23.62 -	1	
- 3	MS20230A2		GROMMET -	1	
- 4	S1863-3A		NUTPLATE -	2	
- 5	0422291		BRACKET-PITOT LH ONLY -	1	
- 6	S1860-2A		NUTPLATE UPPER -	1	
	A6204-8Z3		NUTPLATE LOWER -	1	
- 7	0413157		SCOOP-CABIN AIR VENT -	1	
- 8	0450314		FITTING-CABIN AIR VENT -	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW -	1	
	NAS446-4-3		NUT -	1	
			---*---		

CONTINUED ON NEXT PAGE

Wing (Cont)

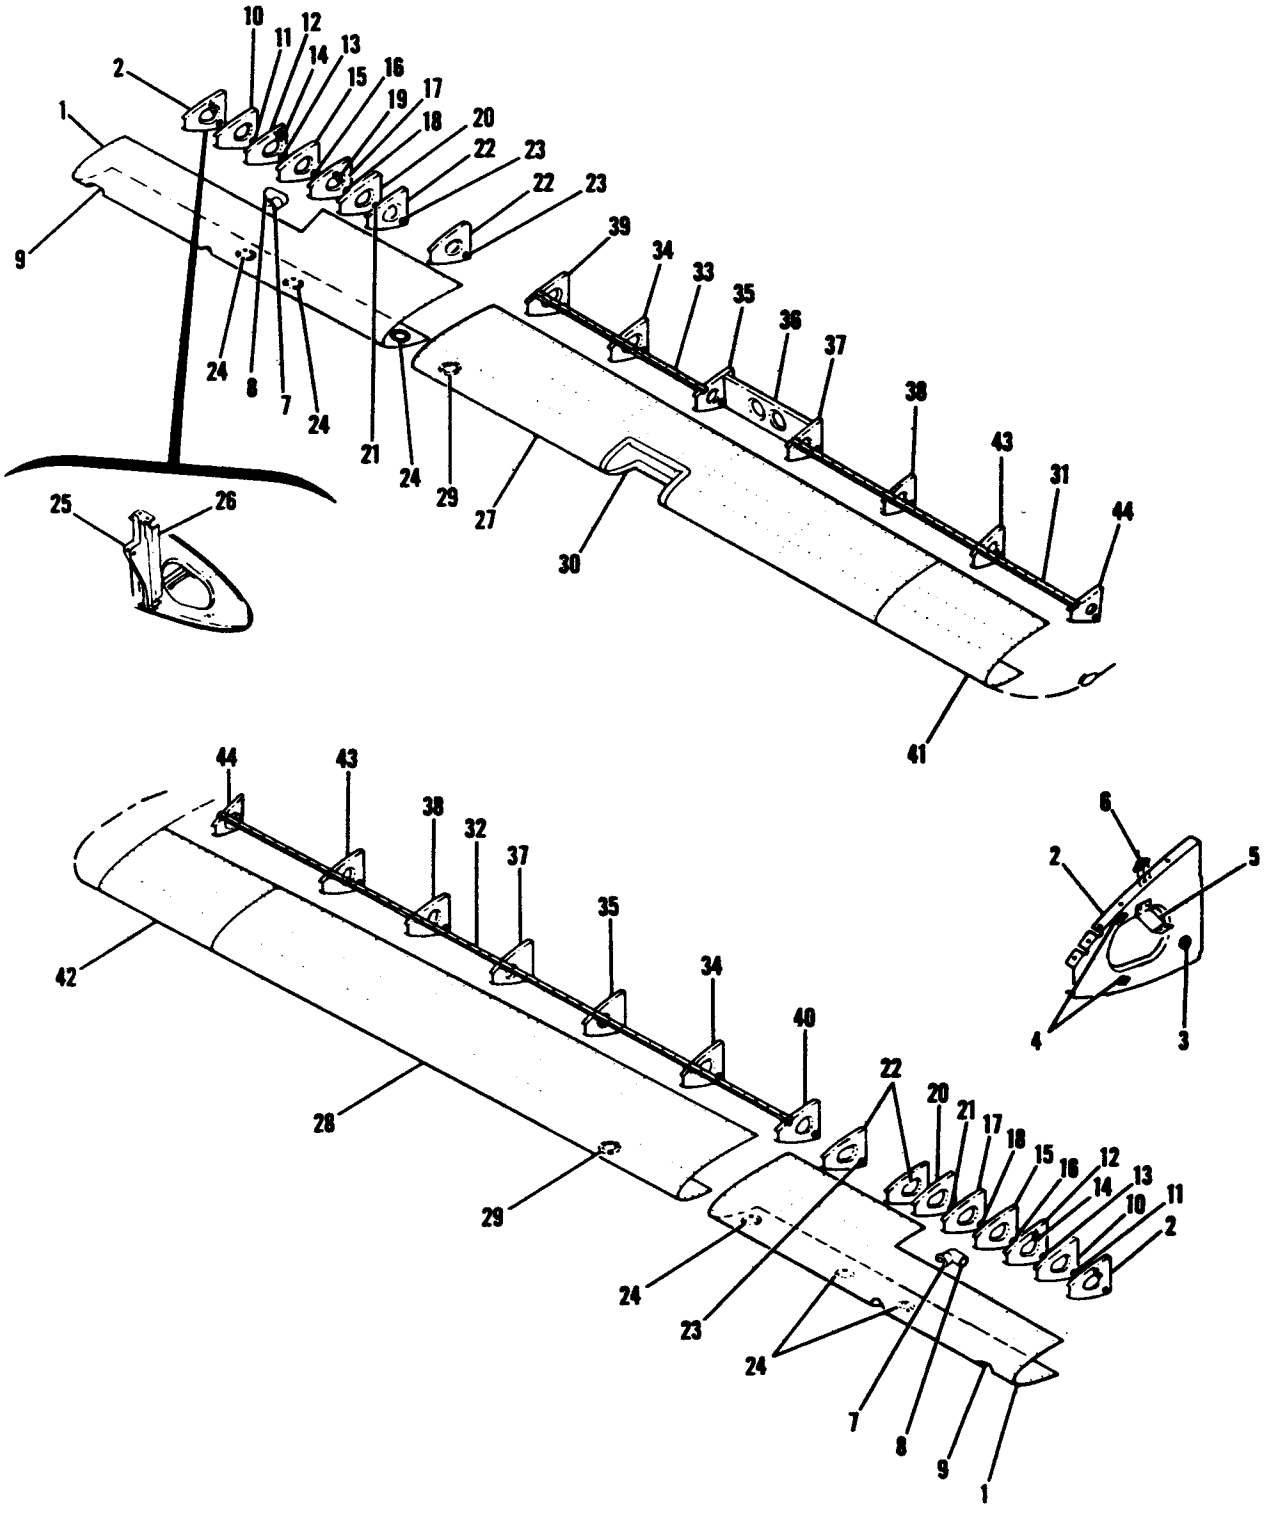

182 SERIAL 18260056 THRU 18260825


Figure 5A. Wing Leading Edge Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
5A- 9	1200637-2	SCOOP-AIR	1	
	0700692-1	CAP-AIR INLET	1	
		ATTACHING PARTS		
	NAS397-22	CLAMP	4	
	AN960-4	WASHER		
		---*---		
-10	0523107	RIB ASSEMBLY-NOSE STA 32.50	1	
-11	MS20230A2	GROMMET	1	
-12	0720611-2	RIB ASSEMBLY-NOSE STA 40.38	1	
-13	MS20230A2	GROMMET	1	
-14	0422292	BRACKET-PITOT	1	
-15	0720611-4	RIB ASSEMBLY-NOSE STA 48.75	1	
-16	MS20230A2	GROMMET	1	
-17	0720611-5	RIB ASSEMBLY-NOSE LH WING STA 57.12	1	
	0720611-4	RIB ASSEMBLY-NOSE RH WING STA 57.12	1	
-18	MS20230A2	GROMMET	1	
-19	0422292	BRACKET-PITOT	1	
-20	0720611-7	RIB ASSEMBLY-NOSE STA 64.50	1	
-21	MS20230A2	GROMMET	2	
-22	0720604-1	RIB ASSEMBLY-NOSE STA 71.98 & STA 85.62	1	
-23	MS20230A2	GROMMET	3	
-24	S226-2	DOUBLER-INSPECTION OPENING	3	
	NAS444-14-3	NUT	1	
-25	0760607-3	BRACKET-PULLEY AILERON LH	1	
	0760607-4	BRACKET-PULLEY AILERON RH	1	
-26	1220092-1	STIFFENER-LH	1	
	1220092-2	STIFFENER-RH	1	A
	0720601-5	LEADING EDGE ASSEMBLY-WING OUTBOARD LH STA 100.00 TO 190.00 -	1	A
	0720601-6	LEADING EDGE ASSEMBLY-WING OUTBOARD RH STA 100.00 TO 190.00 -	1	
-27	0720601-205	SKIN ASSEMBLY-LEADING EDGE LH	1	
-28	0720601-14	SKIN ASSEMBLY-LEADING EDGE RH	1	
-29	S226-2	DOUBLER-INSPECTION OPENING	3	
	NAS444-14-3	NUT	1	
-30	0722100-1	DOUBLER ASSEMBLY-LANDING LIGHT	1	
-31	0523541-61	STRINGER-LH	1	
-32	0523541-62	STRINGER-RH	1	
-33	0523541-63	STRINGER-LH	1	
	MS20230A2	GROMMET	1	
-34	0720602-1	RIB ASSEMBLY-NOSE STA 118.00	1	
	MS20230A2	GROMMET	1	
-35	0720609-1	RIB ASSEMBLY-NOSE STA 136.00	1	
	MS20230A2	GROMMET	1	
-36	0523106-4	BRACKET ASSEMBLY-LANDING LIGHT LH ONLY	6	
	NAS680A08	NUTPLATE	1	
-37	0720608-3	RIB ASSEMBLY STA 154.00	1	
	MS20230A2	GROMMET	1	
-38	0720607-3	RIB ASSEMBLY STA 172.00	1	
	MS20230A2	GROMMET	1	
-39	0720610-1	RIB ASSEMBLY-NOSE LH STA 100.00	1	
-40	0720610-2	RIB ASSEMBLY-NOSE RH STA 100.00	1	
	MS20230A2	GROMMET	1	
-41	0720601-15	SKIN-LEADING EDGE LH	1	
-42	0720601-16	SKIN-LEADING EDGE RH	1	
-43	0720607-4	RIB ASSEMBLY STA 190.00	1	D
-44	0720608-2	RIB ASSEMBLY-STA 208.0 WEU 0720608-26	1	E
	0720608-26	RIB ASSEMBLY-STA 208.0		

NOTE. *DENOTED PARTS USED ON WING WITH EXTENDED RANGE FUEL TANK.

A---182 SERIAL 18260056 THRU 18260825
A182 SERIAL A182-0117 THRU A182-0136
B---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
C---182 SERIAL 18260446 THRU 18260825
D---182 SERIAL 18260056 THRU 18260179
E---182 SERIAL 18260180 THRU 18260825
A182 SERIAL A182-0117 THRU A182-0136

Wing (Cont)

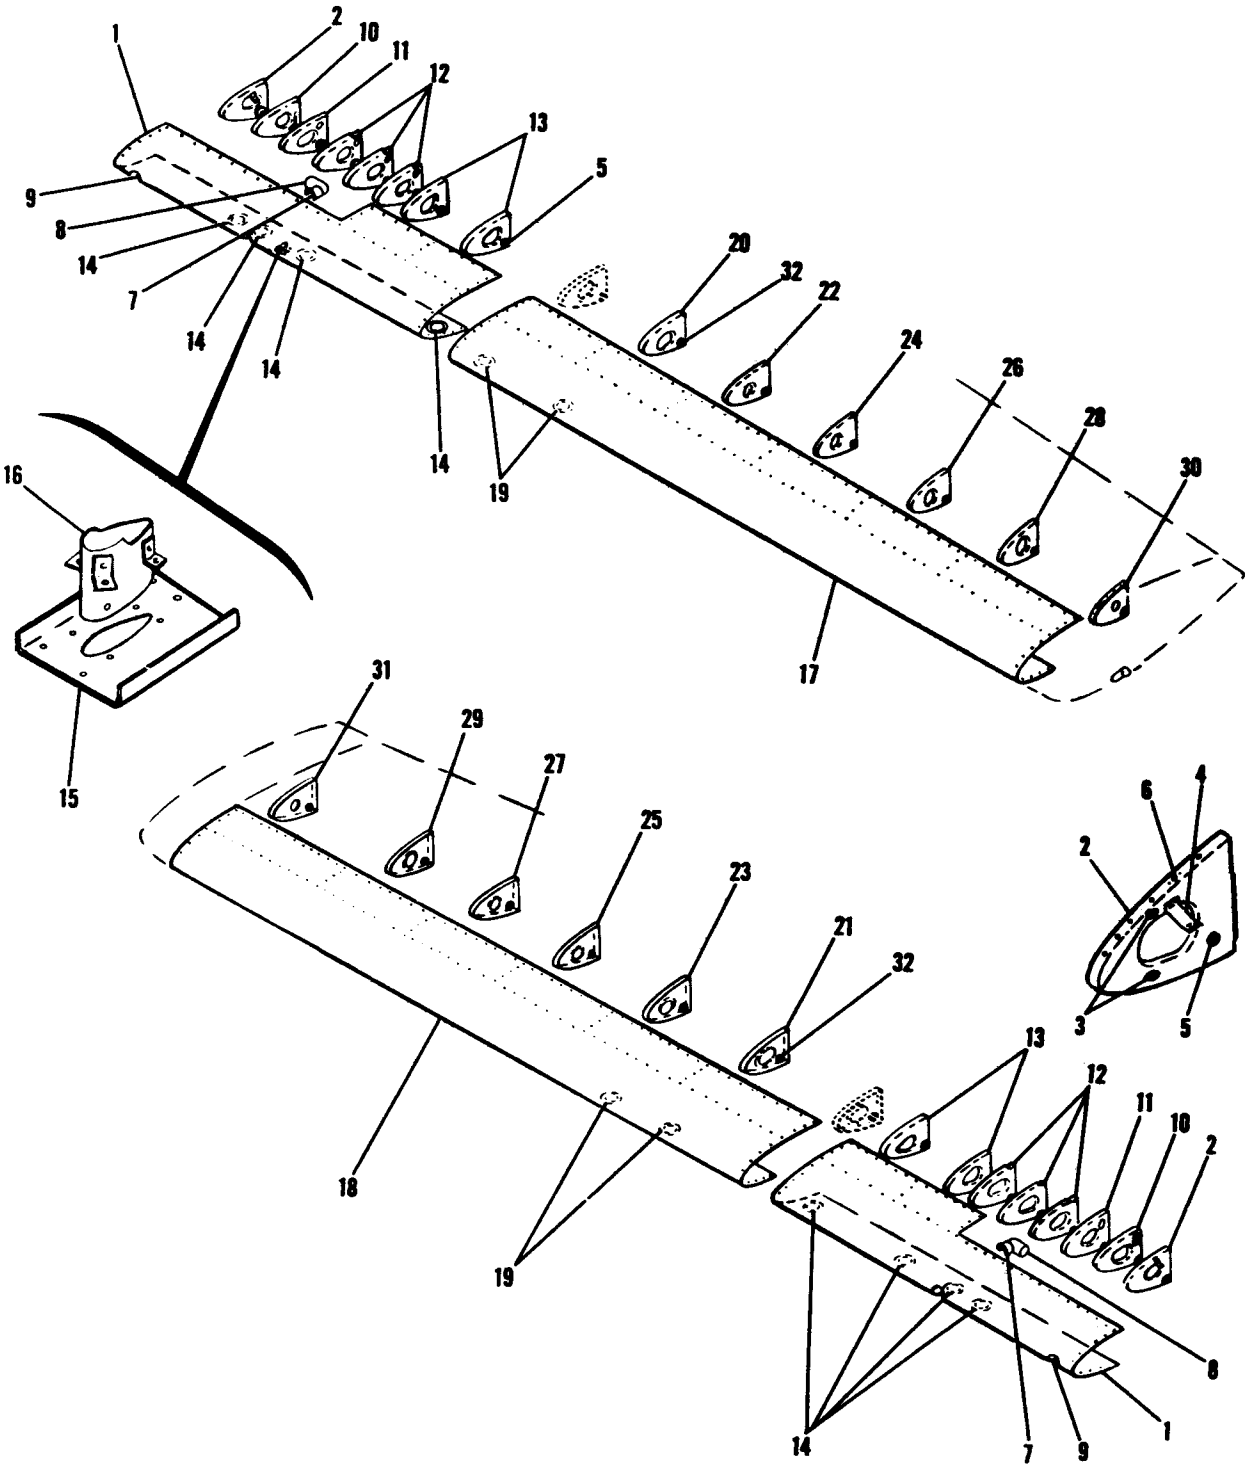


182 SERIAL 18260826 THRU 18262465

Figure 5B. Wing Leading Edge Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
58-	0722180-1		LEADING EDGE ASSY-WING INBOARD LH STA 23.625 TO 100.00	1	A
	0722180-2		LEADING EDGE ASSY-WING INBOARD RH STA 23.625 TO 100.00	1	A
	0722180-9	*	LEADING EDGE ASSY-WING INBOARD LH STA 23.625 TO 100.00	1	A
	0722180-10	*	LEADING EDGE ASSY-WING INBOARD RH STA 23.625 TO 100.00	1	A
- 1	0722180-19		SKIN-LEADING EDGE INBOARD LH	1	
	0722180-20		SKIN-LEADING EDGE INBOARD RH	1	
	0722180-13	*	SKIN-LEADING EDGE INBOARD LH	1	
	0722180-14	*	SKIN-LEADING EDGE INBOARD RH	1	
- 2	0722183-1		RIB ASSEMBLY-LEADING EDGE LH STA 24.375	1	
	0722183-2		RIB ASSEMBLY-LEADING EDGE RH STA 24.375	1	
- 3	S1863-3		NUTPLATE	2	
- 4	0422291		BRACKET-PITOT LH ONLY	1	
- 5	NAS557-8A		GROMMET	8	B
	S1291-8		GROMMET	8	C
- 6	S1860-2A		NUTPLATE UPPER	1	
	A6204-8Z3		NUTPLATE LOWER	1	
- 7	0722202-1		SCOOP-CABIN AIR VENT	1	
- 8	0450314		FITTING ASSEMBLY-CABIN AIR VENT	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	1	
	NAS446-4-3		NUT	1	
	AN960-4		WASHER	4	
			---*---		
- 9	1200637-5		SCOOP ASSEMBLY-AIR	1	
	0700692-1		CAP-AIR INLET	1	
			ATTACHING PARTS		
	NAS397-22		CLAMP	1	
	AN960-4		WASHER	4	
			---*---		
-10	0722184-1		RIB-NOSE STA 32.75	1	
-11	0722185-1		RIB-NOSE STA 40.125	1	
-12	0722185-2		RIB-NOSE STA 49.00, STA 57.37 & STA 64.25	3	
-13	0722186-1		RIB-NOSE STA 72.352 & STA 85.375	2	
-14	S226-2		DOUBLER-INSPECTION OPENING	4	
	NAS444-14-3		NUT	3	
-15	0721114-2		DOUBLER-PITOT REINFORCEMENT	1	
-16	0721115-1		CONNECTOR ASSEMBLY-PITOT TUBE	1	
	0722180-51		LEADING EDGE ASSY-WING OUTBOARD LH STA 100.00 TO STA 208.00-	1	
	0722180-52		LEADING EDGE ASSY-WING OUTBOARD RH STA 100.00 TO STA 208.00-	1	
-17	0722180-49		SKIN-LEADING EDGE LH	1	
-18	0722180-50		SKIN-LEADING EDGE RH	1	
-19	S226-2		DOUBLER-INSPECTION OPENING	2	
-20	0722188-1		RIB-NOSE LH STA 118.00	1	
-21	0722188-2		RIB-NOSE RH STA 118.00	1	
-22	0722189-1		RIB-NOSE LH STA 136.00	1	
-23	0722189-2		RIB-NOSE RH STA 136.00	1	
-24	0722190-1		RIB-NOSE LH STA 154.00	1	
-25	0722190-2		RIB-NOSE RH STA 154.00	1	
-26	0722191-1		RIB-NOSE LH STA 172.00	1	
-27	0722191-2		RIB-NOSE RH STA 172.00	1	
-28	0722192-1		RIB-NOSE LH STA 190.00	1	
-29	0722192-2		RIB-NOSE RH STA 190.00	1	
-30	0722193-1		RIB ASSEMBLY-NOSE LH STA 208.00	1	
-31	0722193-2		RIB ASSEMBLY-NOSE RH STA 208.00	1	
	NAS696A08		NUTPLATE	2	
-32	NAS557-8A		GROMMET	6	B
	S1291-8		GROMMET	6	C

NOTE. *DENOTES PARTS USED ON WING WITH EXTENDED RANGE FUEL TANK

A---182 SERIAL 18260826 THRU 18262465
A182 SERIAL A182-0137 & ON
B---182 SERIAL 18260826 THRU 18261040
C---182 SERIAL 18261041 THRU 18262465
A182 SERIAL A182-0137 & ON

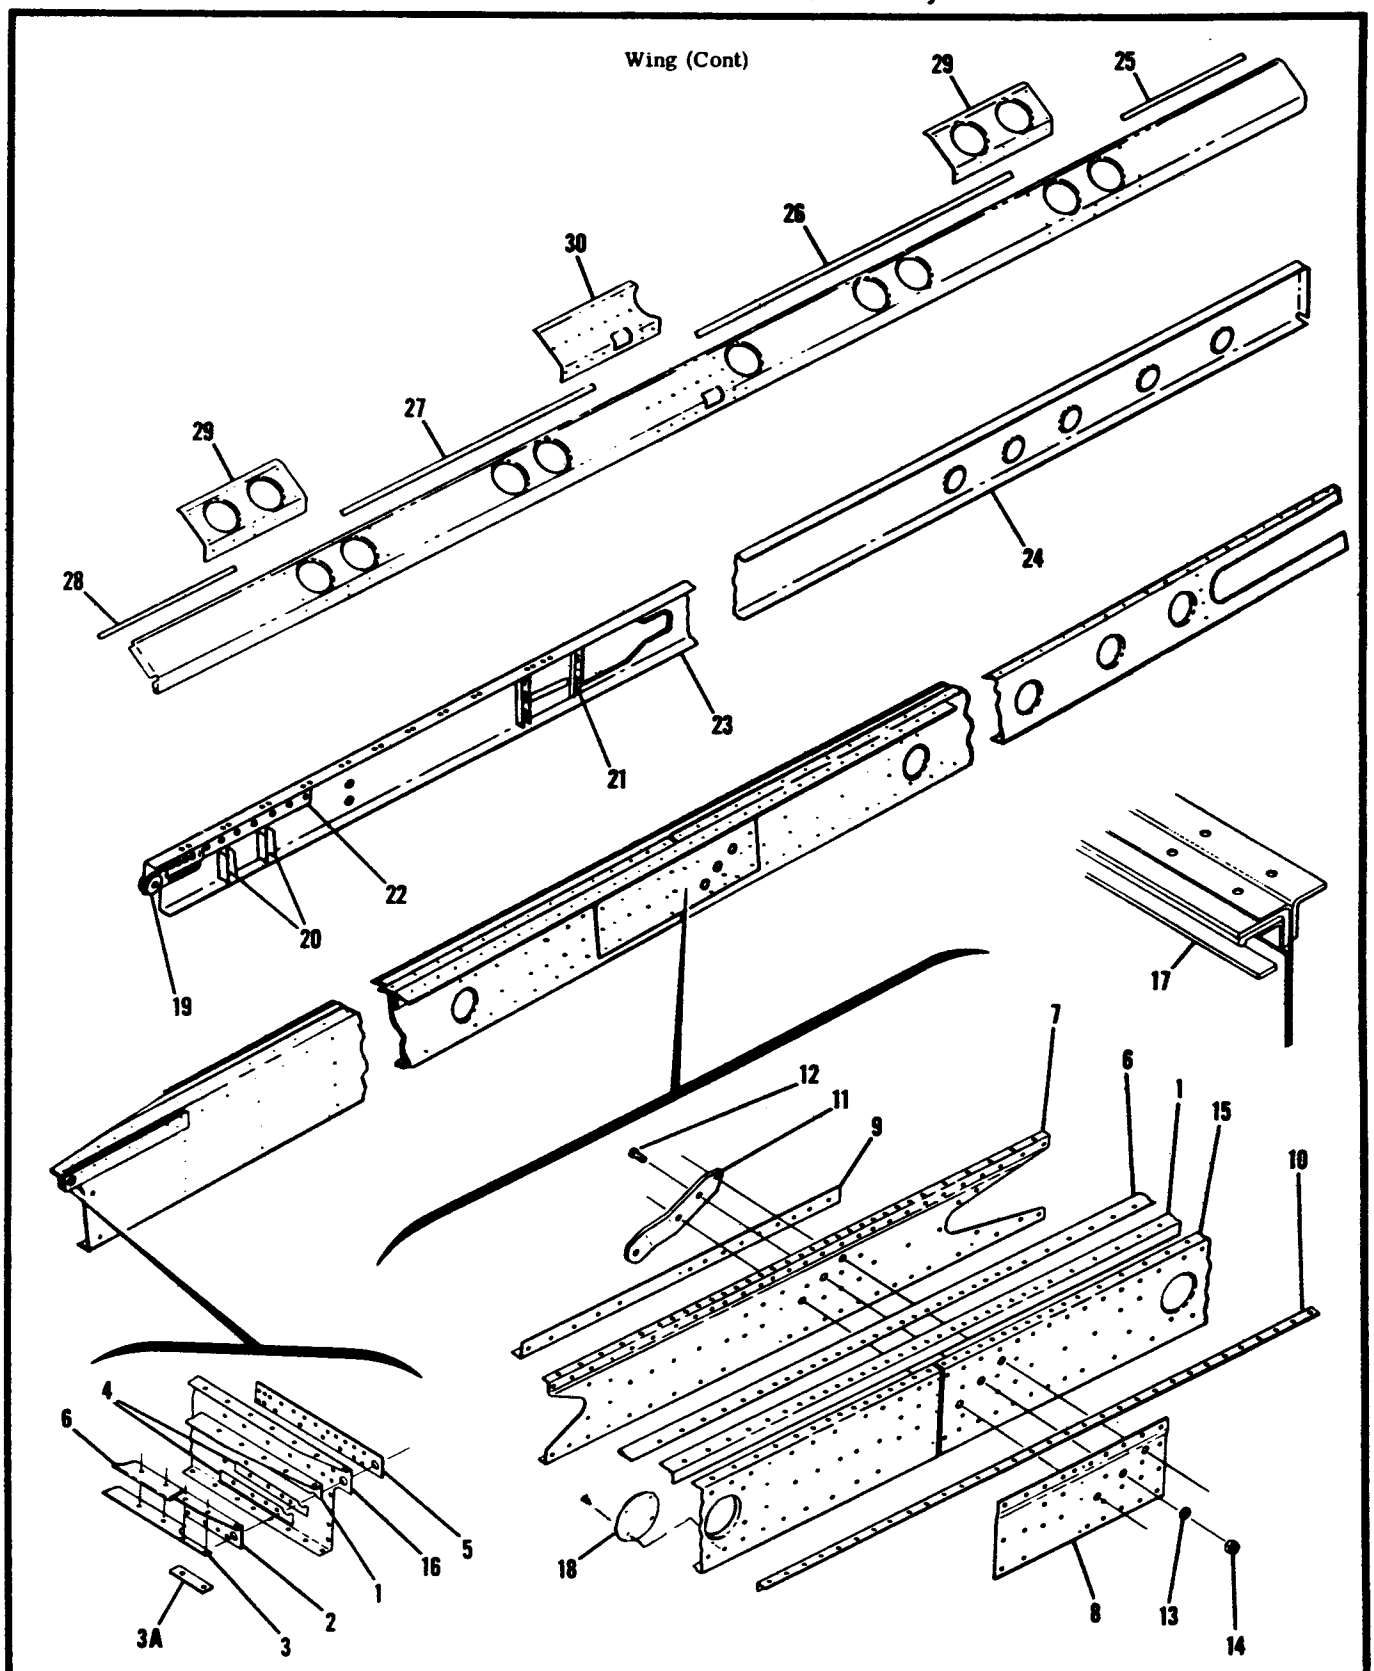

182 SERIAL 18253599 THRU 18260825

Figure 6. Wing Spar Assemblies


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
6 -	0721400-25		SPAR ASSEMBLY-WING FRONT LH	1	E
	0721400-37		SPAR ASSEMBLY-WING FRONT LH	1	F
	0721400-29	*	SPAR ASSEMBLY-WING FRONT LH	1	E
	0721400-39	*	SPAR ASSEMBLY-WING FRONT LH	1	F
	0721400-26		SPAR ASSEMBLY-WING FRONT RH	1	E
	0721400-36		SPAR ASSEMBLY-WING FRONT RH	1	F
	0721400-30	*	SPAR ASSEMBLY-WING FRONT RH	1	E
	0721400-38	*	SPAR ASSEMBLY-WING FRONT RH	1	F
- 1	0721400-3		ANGLE-FRONT SPAR CAP LH	1	
	0721400-4		ANGLE-FRONT SPAR CAP RH	1	
- 2	0523309		ANGLE-FRONT SPAR LH	1	
	0523309-1		ANGLE-FRONT SPAR RH	1	
- 3	0721400-34		SPACER-FRONT SPAR	1	
	0721400-32	*	SPACER-FRONT SPAR STA 25.625 TO 79.750	1	
- 3A	1221024-1		SPACER-FRONT SPAR	1	
- 4	0721400-35		SPACER-FRONT SPAR	1	
- 5	0523308		PLATE-FRONT SPAR ROOT REINFORCEMENT	1	
- 6	0523315		PLATE-FRONT SPAR CAP LH	1	
	0523315-1		PLATE-FRONT SPAR CAP RH	1	
- 7	0721400-13		CHANNEL-FRONT SPAR SPLICE LH	1	
	0721400-14		CHANNEL-FRONT SPAR SPLICE RH	1	
- 8	0721400-17		PLATE-FRONT SPAR SPLICE CHANNEL LH	1	
	0721400-18		PLATE-FRONT SPAR SPLICE CHANNEL RH	1	
- 9	0523316		ANGLE-FRONT SPAR SPLICE LH	1	E
	0721402-3		ANGLE-FRONT SPAR SPLICE LH	1	F
	0523316-1		ANGLE-FRONT SPAR SPLICE RH	1	E
	0721402-4		ANGLE-FRONT SPAR SPLICE RH	1	F
-10	0523321-3		ANGLE-FRONT SPAR FORWARD CAP STRIP LH	1	E
	0721402-1		ANGLE-FRONT SPAR FORWARD CAP STRIP LH	1	F
	0523321-4		ANGLE-FRONT SPAR FORWARD CAP STRIP RH	1	E
	0721402-2		ANGLE-FRONT SPAR FORWARD CAP STRIP RH	1	F
-11	0523306		FITTING-FRONT SPAR STRUT	1	
			ATTACHING PARTS		
-12	AN5-7A		BOLT	3	
-13	AN960-516		WASHER	3	
-14	NAS679A5		NUT	3	
			---*---		
-15	0721400-19		CHANNEL-FRONT SPAR OUTBOARD LH	1	
	0721400-20		CHANNEL-FRONT SPAR OUTBOARD RH	1	
-16	0721400-23		CHANNEL-FRONT SPAR INBOARD LH WHEN EXHAUSTED USE -27	1	
	0721400-27		CHANNEL-FRONT SPAR INBOARD LH	1	
	0721400-24		CHANNEL-FRONT SPAR INBOARD RH WHEN EXHAUSTED USE -28	1	
	0721400-28		CHANNEL-FRONT SPAR INBOARD RH	1	
-17	0721400-33	*	SPACER	1	
-18	0721400-31		COVER	1	
			ATTACHING PARTS		
	CR163-4-4		RIVET CY	13	
			---*---		
	0523400-201		SPAR ASSEMBLY-WING REAR LH WHEN EXHAUSTED USE 0523400-75	1	A
	0523400-75		CHANNEL ASSEMBLY-WING REAR LH WHEN EXHAUSTED USE 0523400-83	1	C
	0523400-83		CHANNEL ASSEMBLY-WING REAR LH WEU 0523400-93	1	D
	0523400-93		CHANNEL ASSEMBLY-WING REAR LH	1	J
	0523400-200		SPAR ASSEMBLY-WING REAR RH WHEN EXHAUSTED USE 0523400-74	1	A
	0523400-74		CHANNEL ASSEMBLY-WING REAR RH WHEN EXHAUSTED USE 0523400-82	1	C
	0523400-82		CHANNEL ASSEMBLY-WING REAR RH WEU 0523400-92	1	D
	0523400-92		CHANNEL ASSEMBLY-WING REAR RH	1	J
-19	0422229-3		FITTING-WING SPAR REINFORCEMENT	2	G
	0422229-11		FITTING-WING SPAR REINFORCEMENT	2	H
-20	0523409-1		CHANNEL-REINFORCEMENT	2	
-21	0523409-2		CHANNEL-REINFORCEMENT LH ONLY	3	
	0523409		CHANNEL-REINFORCEMENT RH ONLY	3	
-22	0523400-20		ANGLE-REAR SPAR REINFORCEMENT LH	1	
	0523400-21		ANGLE-REAR SPAR REINFORCEMENT RH	1	
-23	0523400-87		DOUBLER LH	1	
	0523400-86		DOUBLER RH	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
6 -24	0523406	SEGMENT-REAR SPAR OUTBOARD LH STA 100.0 TO 154.0 ----------	1	A
		WHEN EXHAUSTED USE 0523406-3		
	0523406-3	SEGMENT-REAR SPAR OUTBOARD LH STA 100.0 TO 154.0 ----------	1	B
	0523406-1	SEGMENT-REAR SPAR OUTBOARD RH STA 100.0 TO 154.0 ----------	1	A
		WHEN EXHAUSTED USE 0523406-2		
	0523406-2	SEGMENT-REAR SPAR OUTBOARD RH STA 100.0 TO 154.0 --------	1	B
	0523005-50	SPAR ASSEMBLY-OUTBOARD AUXILIARY LH ----------	1	
	0523005-51	SPAR ASSEMBLY-OUTBOARD AUXILIARY RH ----------	1	
-25	0523813-3	SPACER-TRAILING EDGE ----------	1	
-26	0523813-2	SPACER-TRAILING EDGE ----------	1	
-27	0523813-4	SPACER-TRAILING EDGE ----------	1	
-28	0523813-5	SPACER-TRAILING EDGE ----------	1	
-29	0523216	REINFORCEMENT ----------	2	
-30	0523215	REINFORCEMENT-WING LH ----------	1	
	0523215-1	REINFORCEMENT-WING RH ----------	1	

NOTE. *DENOTES PARTS USED ON WING WITH EXTENDED RANGE FUEL TANK.

A---182 SERIAL 18253599 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
B---182 SERIAL 18258506 THRU 18260825
A182 SERIAL A182-0097 THRU A182-0136
C---182 SERIAL 18258506 THRU 18259170 EXCEPT-
18258606, 18258609, 18258618, 18258625,
18258632, 18258639, 18258646, 18258653,
18258660, 18258667, 18258674, 18258681,
18258689, 18258695, 18258702, 18258709,
18258716, 18258723, 18258730, 18258737,
A182 SERIAL A182-0097 THRU A182-0116
D---182 SERIAL 18258606, 18258609, 18258618, 18258625,
18258632, 18258639, 18258646, 18258653,
18258660, 18258667, 18258674, 18258681,
18258689, 18258695, 18258702, 18258709,
18259171 THRU 18259991
18259171 THRU 18260825
E---182 SERIAL 18253599 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
F---182 SERIAL 18260056 THRU 18260825
A182 SERIAL A182-0117 THRU A182-0136
G---182 SERIAL 18253599 THRU 18259759
A182 SERIAL A182-0001 THRU A182-0116
H---182 SERIAL 18259760 THRU 18260825
A182 SERIAL A182-0117 THRU A182-0136
J---182 SERIAL 18259992 THRU 18260825
A182 SERIAL A182-0117 THRU A182-0136

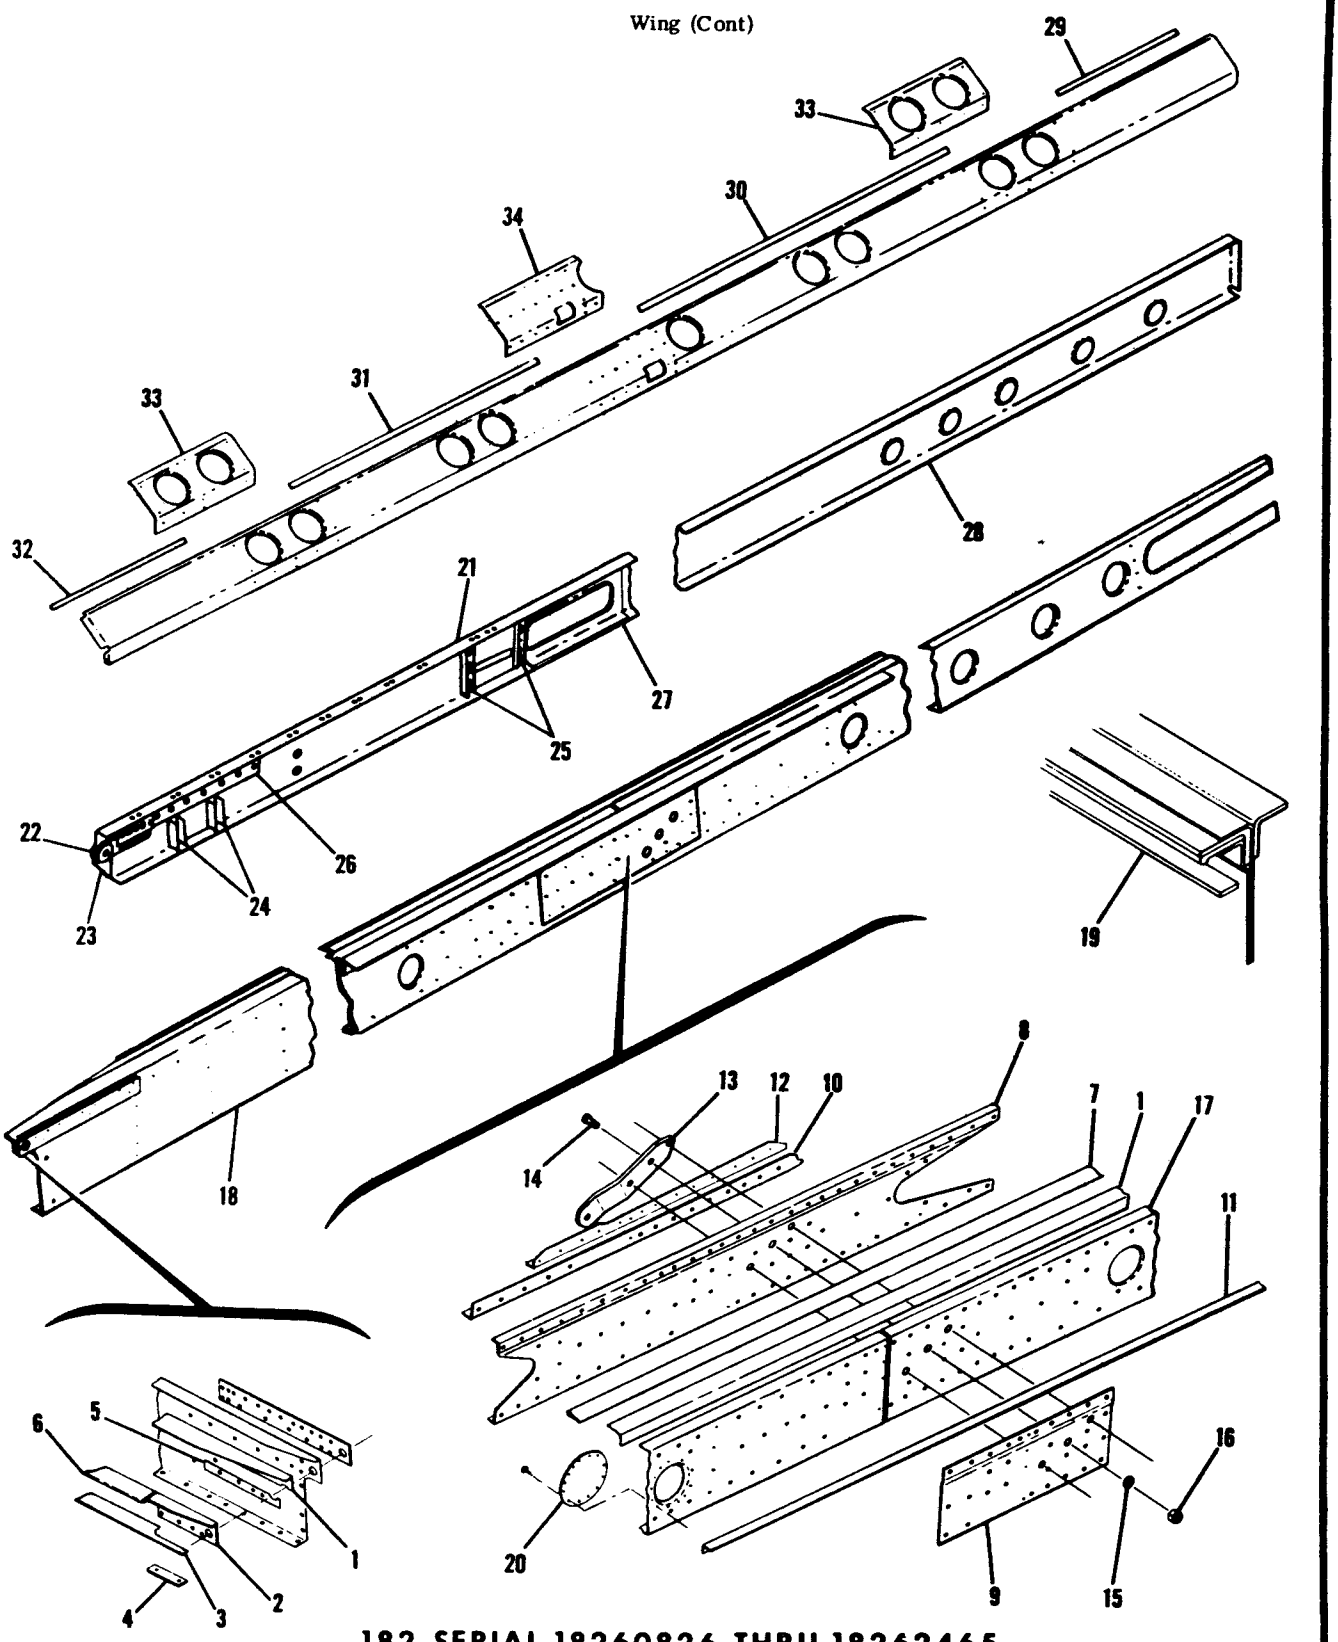

182 SERIAL 18260826 THRU 18262465

Figure 6A. Wing Spar Assemblies

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
6A-	0721401-11	SPAR ASSEMBLY-WING FRONT LH STANDARD & LONG RANGE	1	A
	0721401-12	SPAR ASSEMBLY-WING FRONT RH STANDARD & LONG RANGE	1	A
- 1	0721400-3	ANGLE-FRONT SPAR CAP LH	1	
	0721400-4	ANGLE-FRONT SPAR CAP RH	1	
- 2	0523309	ANGLE-FRONT SPAR LH	1	
	0523309-1	ANGLE-FRONT SPAR RH	1	
- 3	0721400-32	SPACER	1	
- 4	1221024-1	SPACER-UPPER FUEL PANEL	1	
- 5	0721400-35	SPACER-FRONT SPAR .125 THICK	1	
- 6	0523308	PLATE-FRONT SPAR ROOT REINFORCEMENT	1	
- 7	0523315	PLATE-FRONT SPAR CAP LH	1	
	0523315-1	PLATE-FRONT SPAR CAP RH	1	
- 8	0721400-13	CHANNEL-FRONT SPAR SPLICE LH	1	
	0721400-14	CHANNEL-FRONT SPAR SPLICE RH	1	
- 9	0721400-17	PLATE-FRONT SPAR SPLICE CHANNEL LH	1	
	0721400-18	PLATE-FRONT SPAR SPLICE CHANNEL RH	1	
-10	0721402-3	ANGLE-FRONT SPAR SPLICE LH	1	
	0721402-4	ANGLE-FRONT SPAR SPLICE RH	1	
-11	0721402-1	ANGLE-FRONT SPAR FORWARD CAP STRIP LH	1	
	0721402-2	ANGLE-FRONT SPAR FORWARD CAP STRIP RH	1	
-12	0721401-13	ANGLE-STIFFENER LH	1	
	0721401-14	ANGLE-STIFFENER RH	1	
-13	0523306	FITTING-FRONT SPAR STRUT		
		ATTACHING PARTS		
-14	AN5-7A	BOLT	3	
-15	AN960-516	WASHER	3	
-16	NAS679A5	NUT	3	
		---*---		
-17	0721401-15	CHANNEL-FRONT SPAR OUTBOARD LH	1	
	0721401-16	CHANNEL-FRONT SPAR OUTBOARD RH	1	
-18	0721401-5	CHANNEL-FRONT SPAR INBOARD LH	1	
	0721401-6	CHANNEL-FRONT SPAR INBOARD RH	2	
-19	0721400-33	SPACER	1	
-20	0721400-31	COVER	1	
		ATTACHING PARTS		
	CR163-4-4	RIVET CY	13	
		---*---		
-21	0523400-111	SPAR ASSEMBLY-WING REAR LH	1	
	0523400-112	SPAR ASSEMBLY-WING REAR RH	1	
-22	0422229-11	FITTING-WING SPAR REINFORCEMENT	2	
-23	1620058-1	DOUBLER	1	
-24	0523409-1	CHANNEL-REINFORCEMENT	2	
-25	0523409-2	CHANNEL-REINFORCEMENT	2	
-26	0523400-20	ANGLE-REAR SPAR REINFORCEMENT LH	1	
	0523400-21	ANGLE-REAR SPAR REINFORCEMENT RH	1	
-27	0523400-97	DOUBLER-LH	1	
	0523400-96	DOUBLER-RH	1	
-28	0523406-3	SEGMENT-REAR SPAR OUTBOARD LH STA 100.0 TO 154.0	1	
	0523406-2	SEGMENT-REAR SPAR OUTBOARD RH STA 100.0 TO 154.0	1	
	0523005-50	SPAR ASSEMBLY-OUTBOARD AUXILIARY LH	1	
	0523005-51	SPAR ASSEMBLY-OUTBOARD AUXILIARY RH	1	
-29	0523813-3	FILLER-TRAILING EDGE	1	
-30	0523813-2	FILLER-TRAILING EDGE	1	
-31	0523813-4	FILLER-TRAILING EDGE	1	
-32	0523813-5	FILLER-TRAILING EDGE	2	
-33	0523216	REINFORCEMENT	1	
-34	0523215	REINFORCEMENT-WING LH	1	
	0523215-1	REINFORCEMENT-WING RH	1	

A---182 SERIAL 18260826 THRU 18262465

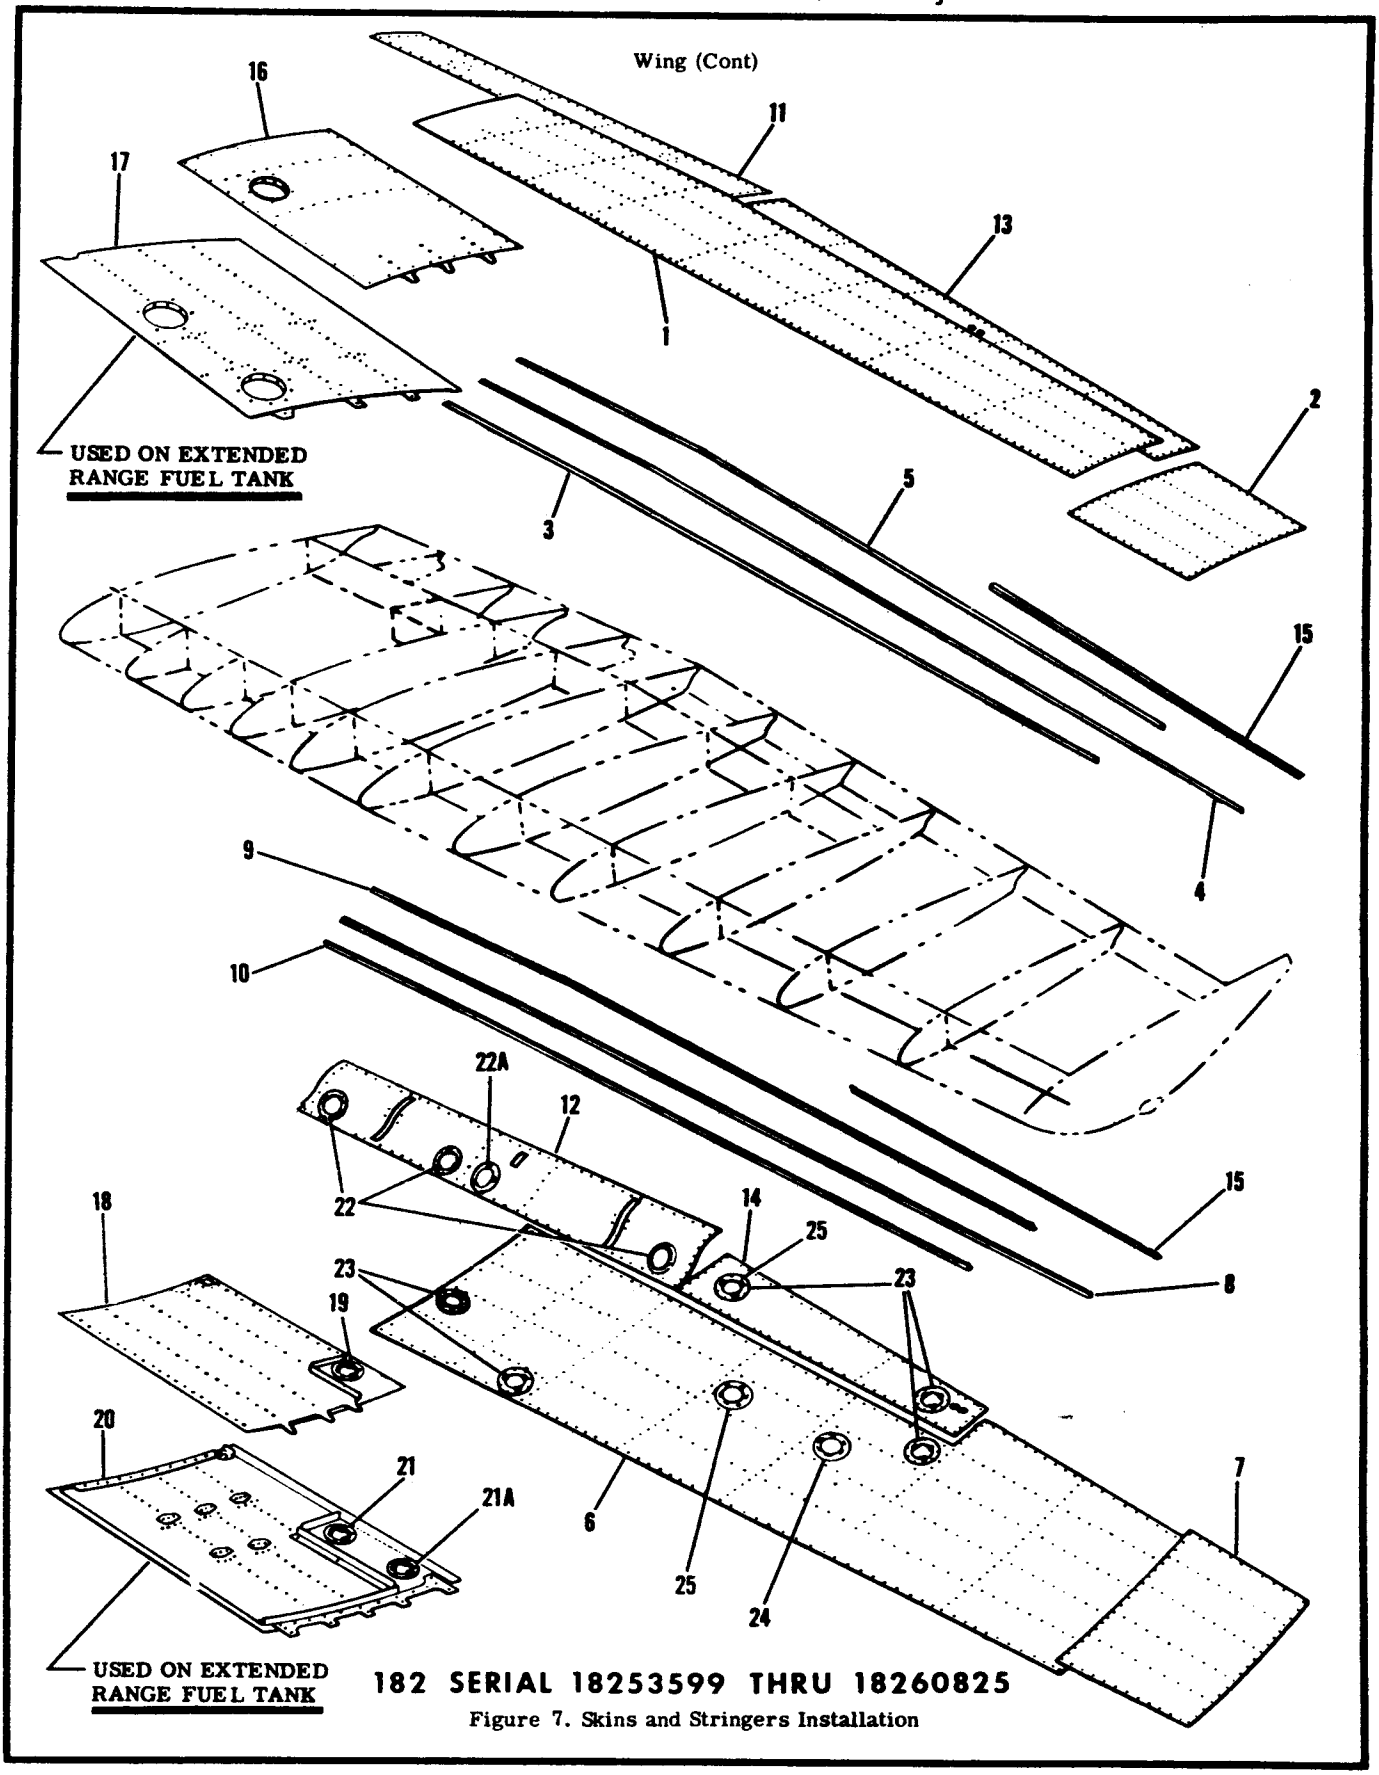


Figure 7. Skins and Stringers Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
7 -			SKINS & STRINGERS INSTALLATION-WING	NP	
- 1	0720601-19		SKIN-UPPER STA 71.977 TO 190.0 WHEN EXHAUSTED	1	
			USE 1220002-46		
	1220002-46		SKIN-UPPER STA 71.977 TO 190.00	1	
	1220003-6	*	SKIN-UPPER LH STA 85.625 TO 190.0 WHEN EXHAUSTED	1	
			USE 1220003-15		
	1220003-15	*	SKIN-UPPER STA 85.625 TO 190.0	1	
- 2	0720601-17		SKIN-UPPER STA 190.0 TO 208.0	1	
	1220002-21	*	SKIN-UPPER STA 190.0 TO 208.0	1	F
	0720601-17	*	SKIN-UPPER STA 190.0 TO 208.0	1	G
- 3	0523541-43		STRINGER-WING UPPER LH	1	
	0523541-51	*	STRINGER-WING UPPER LH	1	
	0523541-44		STRINGER-WING UPPER RH	1	
	0523541-52	*	STRINGER-WING UPPER RH	1	
- 4	0523541-45		STRINGER-WING UPPER LH	1	
	0523541-53	*	STRINGER-WING UPPER LH	1	
	0523541-46		STRINGER-WING UPPER RH	1	
	0523541-54	*	STRINGER-WING UPPER RH	1	
- 5	0523541-47		STRINGER-WING UPPER LH	1	
	0523541-59	*	STRINGER-WING UPPER LH	1	
	0720612-2		STRINGER-WING UPPER RH	1	
	0523541-56	*	STRINGER-WING UPPER RH	1	
- 6	0720601-23		SKIN-LOWER LH STA 71.997 TO 190.0 WHEN EXHAUSTED	1	A
			USE 0720601-67		
	0720601-67		SKIN-LOWER LH STA 71.997 TO 190.0 WEU 0720601-91	1	K
	0720601-91	‡	SKIN-LOWER LH STA 71.997 TO 190.0	1	L
	0720601-22		SKIN-LOWER RH STA 71.997 TO 190.0 WHEN EXHAUSTED	1	A
			USE 0720601-68		
	0720601-68		SKIN-LOWER RH STA 71.997 TO 190.0	1	B
	0720601-31	*	SKIN-LOWER LH STA 85.625 TO 100.0 WHEN EXHAUSTED	1	A
			USE 0720601-71		
	0720601-71		SKIN-LOWER RH STA 85.625 TO 100.0 WEU 0720601-93	1	K
	0720601-93	‡	SKIN-LOWER RH STA 85.625 TO 100.0	1	L
	0720601-32	*	SKIN-LOWER RH STA 85.625 TO 100.0 WHEN EXHAUSTED	1	A
			USE 0720601-72		
	0720601-72		SKIN-LOWER RH STA 85.625 TO 100.0	1	B
- 7	0720601-18		SKIN-LOWER STA 190.0 TO 208.00	1	
- 8	0523541-46		STRINGER-WING LOWER LH	1	
	0523541-54	*	STRINGER-WING LOWER LH	1	
	0523541-45		STRINGER-WING LOWER RH	1	
	0523541-53	*	STRINGER-WING LOWER RH	1	
- 9	0523541-48		STRINGER-WING LOWER LH	1	
	0523541-60	*	STRINGER-WING LOWER LH	1	
	0720612-1		STRINGER-WING LOWER RH	1	
	0523541-55	*	STRINGER-WING LOWER RH	1	
-10	0523541-50		STRINGER-WING LOWER LH	1	
	0523541-58	*	STRINGER-WING LOWER LH	1	
	0523541-49		STRINGER-WING LOWER RH	1	
	0523541-57	*	STRINGER-WING LOWER RH	1	
-11	0720601-21		SKIN-UPPER TRAILING EDGE STA 23.625 TO 100.5	1	
-12	0720601-25		SKIN-LOWER TRAILING EDGE LH STA 23.625 TO 100.5	1	
	0720601-26		SKIN-LOWER TRAILING EDGE RH STA 23.625 TO 100.5	1	A
			WHEN EXHAUSTED USE 0720601-64		
	0720601-64	*	SKIN-LOWER TRAILING EDGE RH STA 23.625 TO 100.5	1	B
-13	0720601-20		SKIN-UPPER TRAILING EDGE STA 100.5 TO 190.0	1	
-14	0720601-24		SKIN-LOWER TRAILING EDGE STA 100.5 TO 154.0 WHEN	1	A
			EXHAUSTED USE 1220002-80		
	1220002-80		SKIN-LOWER TRAILING EDGE STA 100.5 TO 154.0	1	H
	0722182-24		SKIN LOWER TRAILING EDGE STA 100.5 TO 154.0	1	G
	1222021-1		DOUBLER ASSEMBLY	1	
-15	0523003-40		STRINGER-WING	2	
-16	0721201-51		PANEL ASSEMBLY-WING FUEL WELL UPPER LH	1	F
	0721201-64		PANEL ASSEMBLY-WING FUEL WELL UPPER RH	1	F
	0722014-1		PANEL ASSEMBLY-WING FUEL WELL UPPER LH	1	G
	0722014-2		PANEL ASSEMBLY-WING FUEL WELL UPPER RH	1	G
-17	1220006-21	*	PANEL ASSEMBLY-WING FUEL WELL UPPER LH	1	
	1220006-22	*	PANEL ASSEMBLY-WING FUEL WELL UPPER RH	1	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
7 -18	1221200-15		PANEL ASSEMBLY-WING FUEL WELL LOWER LH WHEN ---------- EXHAUSTED USE 1221200-23	1	A
	1221200-23		PANEL ASSEMBLY-WING FUEL WELL LOWER LH WHEN ---------- EXHAUSTED USE 1221200-27	1	C
	1221200-27		PANEL ASSEMBLY-WING FUEL WELL LOWER LH ----------	1	J
	0722015-55		PANEL ASSEMBLY-WING FUEL WELL LOWER LH ----------	1	G
	1221200-16		PANEL ASSEMBLY-WING FUEL WELL LOWER RH WHEN EXHAUSTED --- USE 1221200-22	1	A
	1221200-22		PANEL ASSEMBLY-WING FUEL WELL LOWER RH WHEN ---------- EXHAUSTED USE 1221200-28	1	C
	1221200-28		PANEL ASSEMBLY-WING FUEL WELL LOWER RH ----------	1	J
	0722015-68		PANEL ASSEMBLY-WING FUEL WELL LOWER RH ----------	1	G
-19	S1443-3		DOUBLER-INSPECTION OPENING ----------	1	E
	1222013-3		DOUBLER ASSY-ACCESS HOLE LH ----------	1	D
	1222013-6		DOUBLER ASSY-ACCESS HOLE RH ----------	1	D
	S1860-2A		NUTPLATE TIN ----------	6	E
	S1860-2A		NUTPLATE ----------	6	D
-20	1220007-19	*	PANEL ASSEMBLY-WING FUEL WELL LOWER LH WHEN ---------- EXHAUSTED USE 1220007-37	1	A
	1220007-37	*	PANEL ASSEMBLY-WING FUEL WELL LOWER LH WHEN ---------- EXHAUSTED USE 1220007-61	1	C
	1220007-61	*	PANEL ASSEMBLY-WING FUEL WELL LOWER LH ----------	1	D
	1220007-28	*	PANEL ASSEMBLY-WING FUEL WELL LOWER RH WHEN ---------- EXHAUSTED USE 1220007-36	1	A
	1220007-36	*	PANEL ASSEMBLY-WING FUEL WELL LOWER RH WHEN ---------- EXHAUSTED USE 1220007-60	1	C
	1220007-60	*	PANEL ASSEMBLY-WING FUEL WELL LOWER RH ----------	1	D
-21	S1443-3		DOUBLER-INSPECTION OPENING ----------	1	E
	1222013-3		DOUBLER ASSY-ACCESS HOLE LH ----------	1	D
	1222013-6		DOUBLER ASSY-ACCESS HOLE RH ----------	1	D
	S1860-2A		NUTPLATE ----------	6	E
	S1860-2A		NUTPLATE ----------	6	D
-21A	1220007-30		DOUBLER ASSEMBLY ----------	1	
-22	S237-2		DOUBLER-INSPECTION OPENING ----------	2	A
	S237-2		DOUBLER-INSPECTION OPENING ----------	3	B
-22A	S237-2		DOUBLER-INSPECTION OPENING RH ONLY ----------	1	B
-23	S226-2		DOUBLER-INSPECTION OPENING ----------	5	F
	S226-2		DOUBLER-INSPECTION OPENING ----------	4	G
	NAS444-4-3		NUTPLATE ----------	3	
-24	S226-5		DOUBLER ASSEMBLY ----------	1	K
	1220095-2		DOUBLER ASSY ----------	1	L
-25	1222021-1		DOUBLER ASSEMBLY ----------	1	F
	1222021-1		DOUBLER ASSEMBLY ----------	2	G

NOTE. *DENOTES PARTS USED ON WING WITH EXTENDED RANGE FUEL TANK.

NOTE. ΣWHEN INITIALLY ORDERING THIS PART FOR AIRPLANES PRIOR TO 18260446, ALSO ORDER 1220095-2 DOUBLER.

A---182 SERIAL 18253599 THRU 18258506
A182 SERIAL A182-0001 THRU A182-0096
B---182 SERIAL 18258506 THRU 18260825
A182 SERIAL A182-0097 THRU A182-0136
C---182 SERIAL 18258506 THRU 18259991
A182 SERIAL A182-0097 THRU A182-0116
D---182 SERIAL 18259992 THRU 18260825
A182 SERIAL A182-0117 THRU A182-0136
E---182 SERIAL 18253599 THRU 18259991
A182 SERIAL A182-0001 THRU A182-0116
F---182 SERIAL 18253599 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
G---182 SERIAL 18260056 THRU 18260825
A182 SERIAL A182-0117 THRU A182-0136
H---182 SERIAL 18258506 THRU 18260055
A182 SERIAL A182-0097 THRU A182-0116
J---182 SERIAL 18259992 THRU 18260055
K---182 SERIAL 18253599 THRU 18260445
A182 SERIAL A182-0001 THRU A182-0136
L---182 SERIAL 18260446 THRU 18260825

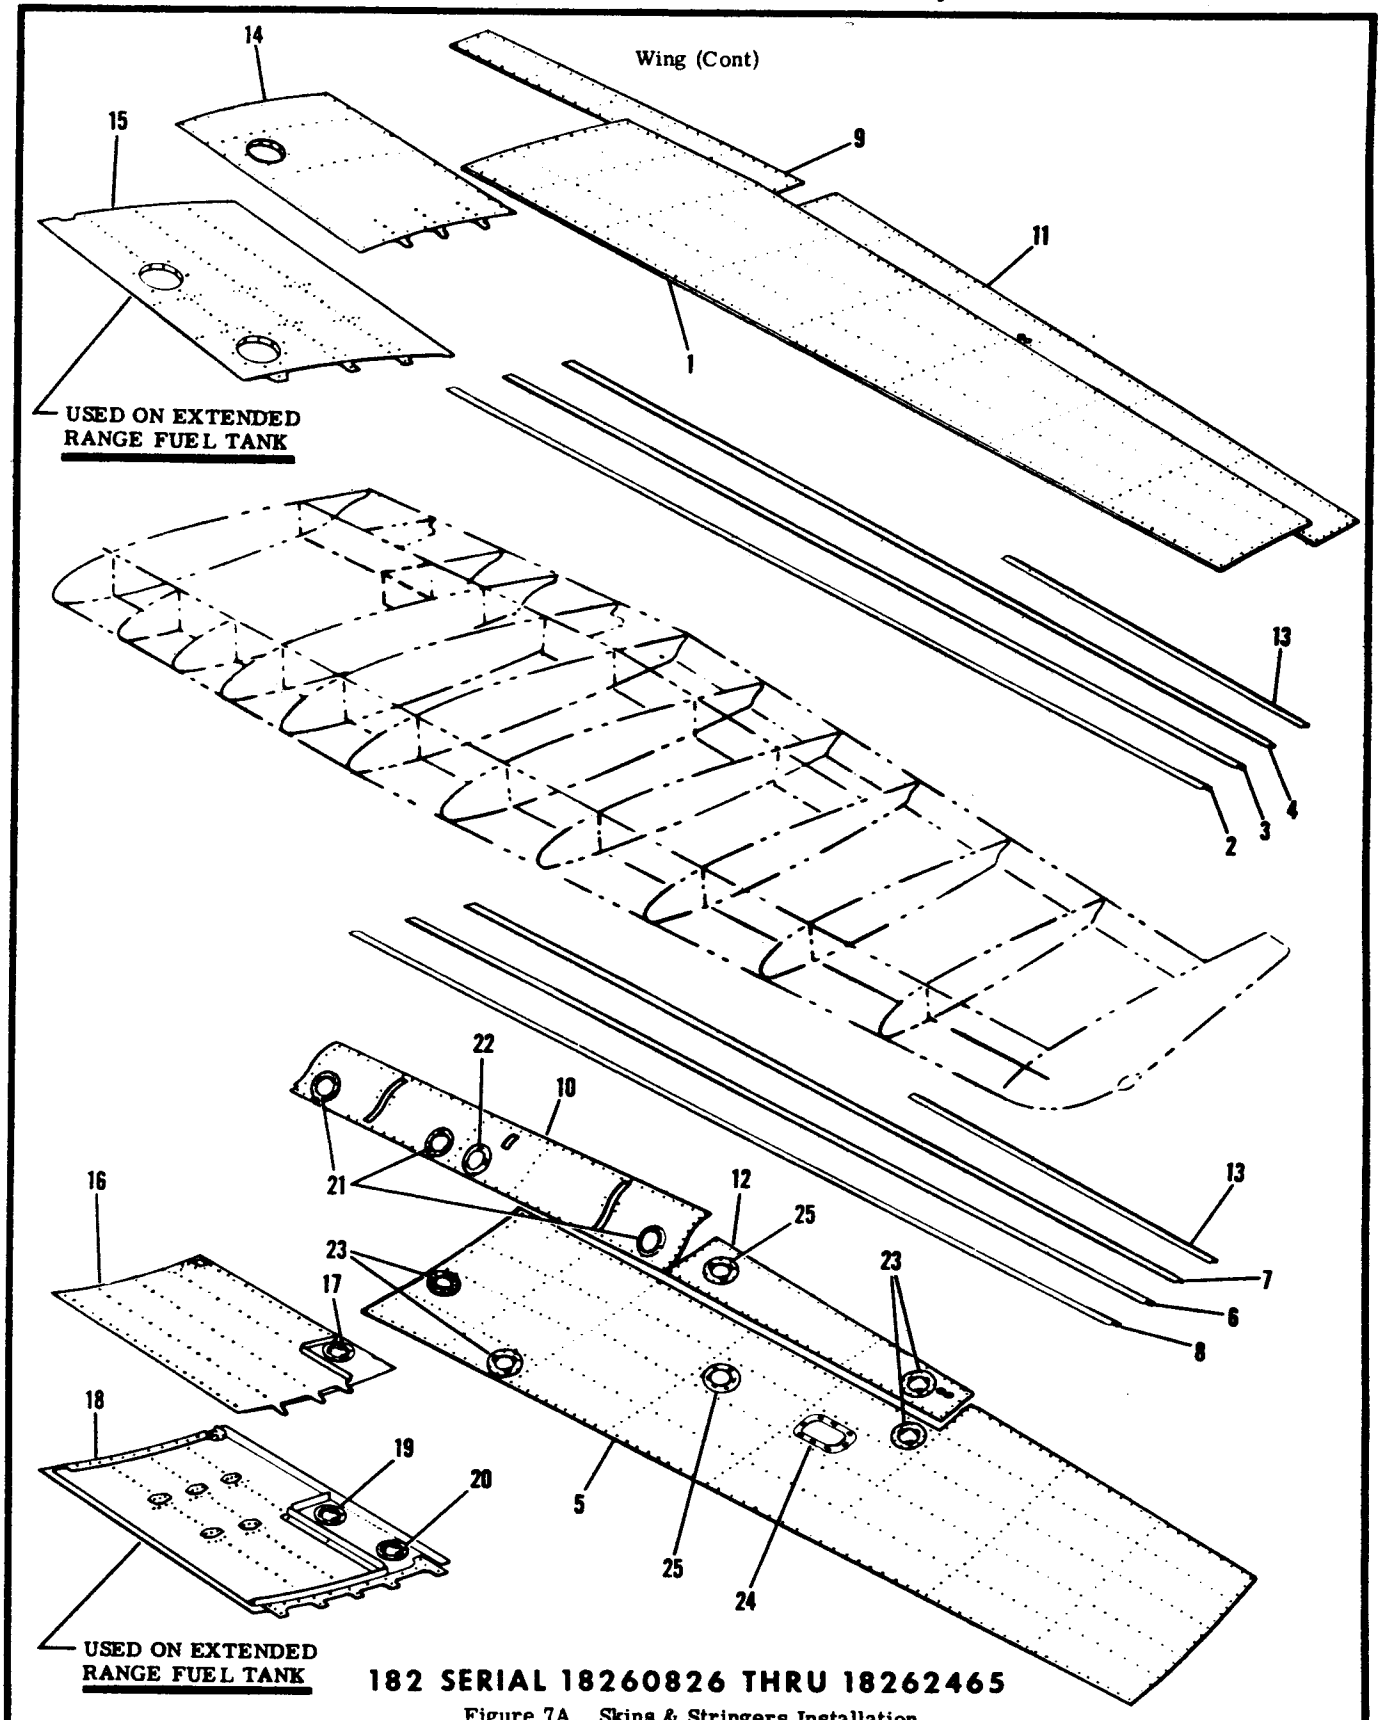

182 SERIAL 18260826 THRU 18262465

Figure 7A. Skins & Stringers Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
7A-			SKINS & STRINGERS INSTALLATION-WING	NP	A
- 1	0722182-13		SKIN-UPPER STA 71.98 TO STA 208.00	1	
	0722182-16	*	SKIN-UPPER STA 85.625 TO STA 208.00	1	
- 2	0523541-43		STRINGER-WING UPPER LH	1	
	0523541-51	*	STRINGER-WING UPPER LH	1	
	0523541-44		STRINGER-WING UPPER RH	1	
	0523541-52	*	STRINGER-WING UPPER RH	1	
- 3	0523541-45		STRINGER-WING UPPER LH	1	
	0523541-53	*	STRINGER-WING UPPER LH	1	
	0523541-46		STRINGER-WING UPPER RH	1	
	0523541-54	*	STRINGER-WING UPPER RH	1	
- 4	0523541-47		STRINGER-WING UPPER LH	1	
	0523541-59	*	STRINGER-WING UPPER LH	1	
	0720612-2		STRINGER-WING UPPER RH	1	
	0523541-56	*	STRINGER-WING UPPER RH	1	
- 5	0722182-15		SKIN-LOWER LH STA 71.98 TO STA 208.00	1	
	0722182-17	*	SKIN-LOWER LH STA 85.625 TO STA 208.00	1	
	0722182-14		SKIN-LOWER RH STA 71.98 TO STA 208.00	1	
	0722182-17		SKIN-LOWER RH STA 85.625 TO STA 208.00	1	
- 6	0523541-46		STRINGER-WING LOWER LH	1	
	0523541-54	*	STRINGER-WING LOWER LH	1	
	0523541-45		STRINGER-WING LOWER RH	1	
	0523541-53	*	STRINGER-WING LOWER RH	1	
- 7	0523541-48		STRINGER-WING LOWER LH	1	
	0523541-60	*	STRINGER-WING LOWER LH	1	
	0720612-1		STRINGER-WING LOWER RH	1	
	0523541-55	*	STRINGER-WING LOWER RH	1	
- 8	0523541-50		STRINGER-WING LOWER LH	1	
	0523541-58	*	STRINGER-WING LOWER LH	1	
	0523541-49		STRINGER-WING LOWER RH	1	
	0523541-57	*	STRINGER-WING LOWER RH	1	
- 9	0720601-21		SKIN-UPPER TRAILING EDGE STA 23.625 TO 100.50	1	
-10	0720601-25		SKIN-LOWER TRAILING EDGE LH STA 23.625 TO 100.50	1	
	0720601-64		SKIN-LOWER TRAILING EDGE RH STA 23.625 TO 100.50	1	
-11	0722182-19		SKIN-UPPER OUTBOARD TRAILING EDGE STA 100.50 TO STA 208.00-	1	
-12	0722182-24		SKIN-LOWER OUTBOARD TRAILING EDGE STA 100.50 TO STA 154.00-	1	
-13	0523003-40		STRINGER-WING	2	
-14	0722014-1		PANEL ASSEMBLY-WING FUEL WELL UPPER LH	1	
	0722014-21		PANEL ASSEMBLY-WING FUEL WELL UPPER RH	1	
-15	1220006-21	*	PANEL ASSEMBLY-WING FUEL WELL UPPER LH	1	
	1220006-22	*	PANEL ASSEMBLY-WING FUEL WELL UPPER RH	1	
-16	0722015-61		PANEL ASSEMBLY-WING FUEL WELL LOWER LH	1	
	0722015-60		PANEL ASSEMBLY-WING FUEL WELL LOWER RH	1	
-17	1222013-3		DOUBLER ASSY-ACCESS HOLE LH	1	
	1222013-6		DOUBLER ASSY-ACCESS HOLE RH	1	
	S1860-2A		NUTPLATE	6	
-18	1220007-63	*	PANEL ASSEMBLY-WING FUEL WELL LOWER LH	1	
	1220007-62	*	PANEL ASSEMBLY-WING FUEL WELL LOWER RH	1	
-19	1222013-3		DOUBLER ASSY-ACCESS HOLE LH	1	
	1222013-6		DOUBLER ASSY-ACCESS HOLE RH	1	
	S1860-2A		NUTPLATE	6	
-20	1220007-30		DOUBLER ASSEMBLY	1	
-21	S237-2		DOUBLER-INSPECTION OPENING	3	
-22	S237-2		DOUBLER-INSPECTION OPENING RH ONLY	1	
-23	S226-2		DOUBLER ASSEMBLY-INSPECTION OPENING	4	
	NAS444-4-3		NUTPLATE	3	
-24	1220095-3		DOUBLER ASSEMBLY	1	
-25	1222021-1		DOUBLER ASSEMBLY	2	

NOTE. *DENOTES PARTS USED ON WING WITH EXTENDED RANGE FUEL TANK.

A---182 SERIAL 18260826 THRU 18262465

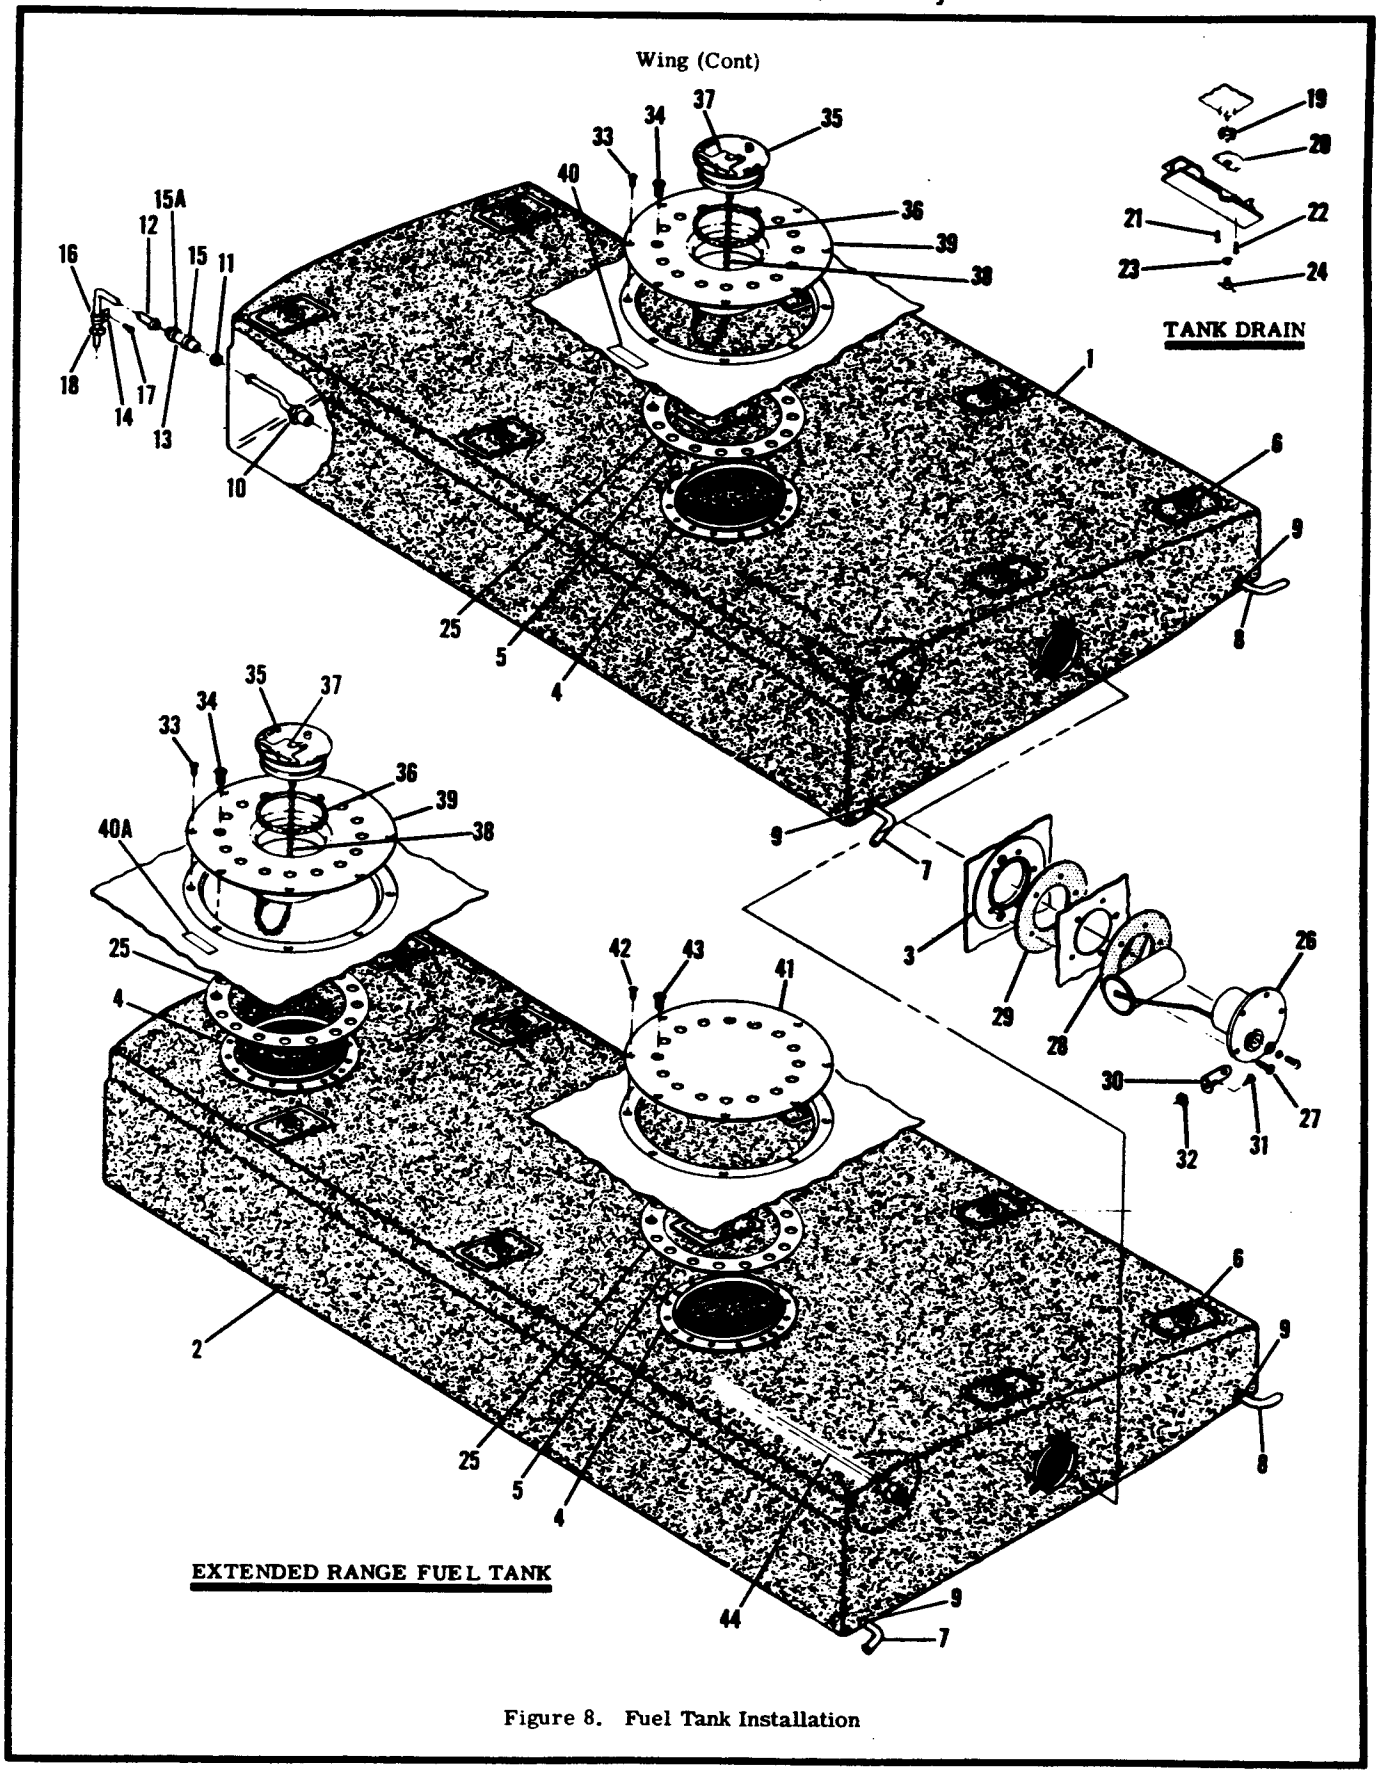


Figure 8. Fuel Tank Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
8 -			TANK INSTALLATION-FUEL LH	NP	
			TANK INSTALLATION-FUEL RH	NP	
- 1	0726001-18		TANK ASSEMBLY-FUEL RH	1	
	0726001-17		TANK ASSEMBLY-FUEL LH	1	
- 2	1200065-6	*	TANK ASSEMBLY-EXTENDED RANGE FUEL RH	1	A
	1200065-24	*	TANK ASSEMBLY-EXTENDED RANGE FUEL RH	1	B
	1200065-5	*	TANK ASSEMBLY-EXTENDED RANGE FUEL LH	1	A
	1200065-23	*	TANK ASSEMBLY-EXTENDED RANGE FUEL LH	1	B
- 3	0726001-3		RING ASSEMBLY-FUEL GAGE ADAPTER	1	
- 4	FCC-20068		FITTING USED IN U.S. RUBBER FUEL CELLS ONLY	1	
	FCC-20068	*	FITTING USED IN U.S. RUBBER FUEL CELLS ONLY	2	
			ATTACHING PARTS		
- 5	AN509-10R4		SCREW	2	
			---*---		
- 6	295055		FASTENER UC	8	
	295055	*	FASTENER UC	10	
- 7	0726603-14		STRAINER ASSEMBLY-FUEL TANK FORWARD	1	
- 8	0726603-16		STRAINER ASSEMBLY-FUEL TANK AFT	1	
- 9	S1891-10		CLAMP	4	
-10	0716125-2		VALVE ASSEMBLY-VENT LH ONLY	1	
			ATTACHING PARTS		
-11	NAS397-14		CLAMP	1	
			---*---		
-12	0716127-1		LINE ASSEMBLY-VENT LH	1	
			ATTACHING PARTS		
-13	S1495-8		HOSE 2.0 IN LG BULK ITEM REF S1495-8-2.00	1	
-14	0512006-1		ANGLE	1	
-15	NAS397-14		CLAMP	1	
-15A	NAS737RM30		CLAMP	2	
-16	S1486DG8U		CLAMP	1	
	S1486DG8U		CLAMP	2	
-17	S1021Z8-8		SCREW	1	
-18	MS35489-14		GROMMET		
			---*---	1	
-19	NAS397-14		CLAMP	1	F
-20	0322526-6		ADAPTER ASSEMBLY-FUEL TANK DRAIN	1	G
	0322526-7		ADAPTER ASSEMBLY-FUEL TANK DRAIN		
			ATTACHING PARTS		
-21	AN515-8R8		SCREW	1	
-22	AN500A8-7		SCREW	1	
			---*---		
-23	MS28778-3		GASKET-DRAIN PLUG	1	
-24	0320105		PLUG-FUEL TANK DRAIN	1	
	SEE FIG 8A		VALVE-FUEL DRAIN USED WITH SAMPLER CUP	1	
-25	0726002-1		GASKET	2	
	0726002-1	*	GASKET	1	
-26	0726110-1		TRANSMITTER & FLOAT-FUEL		
			ATTACHING PARTS		
-27	AN520-10R10		SCREW	5	
			---*---		
-28	S1588-1		GASKET-FUEL TRANSMITTER	1	
-29	0726001-7		GASKET-FUEL TRANSMITTER	1	
-30	0413247		GROUND STRAP	1	
			ATTACHING PARTS		
-31	AN515-8R6		SCREW	1	
-32	NAS679A08		NUT	1	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
8 -	0720600-200		CAP & ADAPTER ASSY-FUEL	1	
			ATTACHING PARTS		
-33	AN509-10R6		SCREW	8	
-34	AN507-428R7		SCREW	16	
			---*---		
-35	C156001-0102	%	CAP ASSY-FUEL WEU C156001-0106	1	E
-36	4196-1		O RING WISO	1	
-37	4189		HANDLE WISO	1	
	4199		PIN-HANDLE WISO	1	
	MS29513-12		O RING	1	
-38	C156001-0104	%	CHAIN ASSY	1	
-39	0721306-1	%	ADAPTER ASSY	1	
-40	0705023-1	%	PLACARD STD RANGE	1	
-40A	0705023-2	%	PLACARD EXTENDED RANGE	1	
-41	1220022-3	*	PLATE-COVER	1	
			ATTACHING PARTS		
-42	AN509-10R6		SCREW	8	
-43	AN507-428R7		SCREW	16	
			---*---		
-44	0716614-3	*	TUBE-VENT 0716614-4	1	A
	0716614-4	*	TUBE-VENT 0716614-6	1	D
	0716614-6	*	TUBE-VENT	1	C

NOTE. *DENOTES PARTS USED ON WING WITH EXTENDED RANGE FUEL TANK

NOTE. %FOR AIRCRAFT PRIOR TO SERIAL 18260657 INITIALLY ORDER 0720600-200 & APPROPRIATE PLACARD.

A---182 SERIAL 18253599 THRU 18256143 EXCEPT FOR AIRPLANES MODIFIED BY SK182-41.
B---182 SERIAL 18256144 & ON & AIRPLANES MODIFIED BY SK182-41
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18260663 THRU 18262465
D---182 SERIAL 18256144 THRU 18260662
A182 SERIAL A182-0001 & ON
E---182 SERIAL 18253599 THRU 18261111
A182 SERIAL A182-0001 THRU A182-0136
F---182 SERIAL 18253599 THRU 18257917
A182 SERIAL A182-0001 THRU A182-0096
G---182 SERIAL 18257918 THRU 18262465
A182 SERIAL A182-0097 & ON
H---182 SERIAL 18261112 THRU 18262465
A182 SERIAL A182-0137 & ON

Wing (Cont)

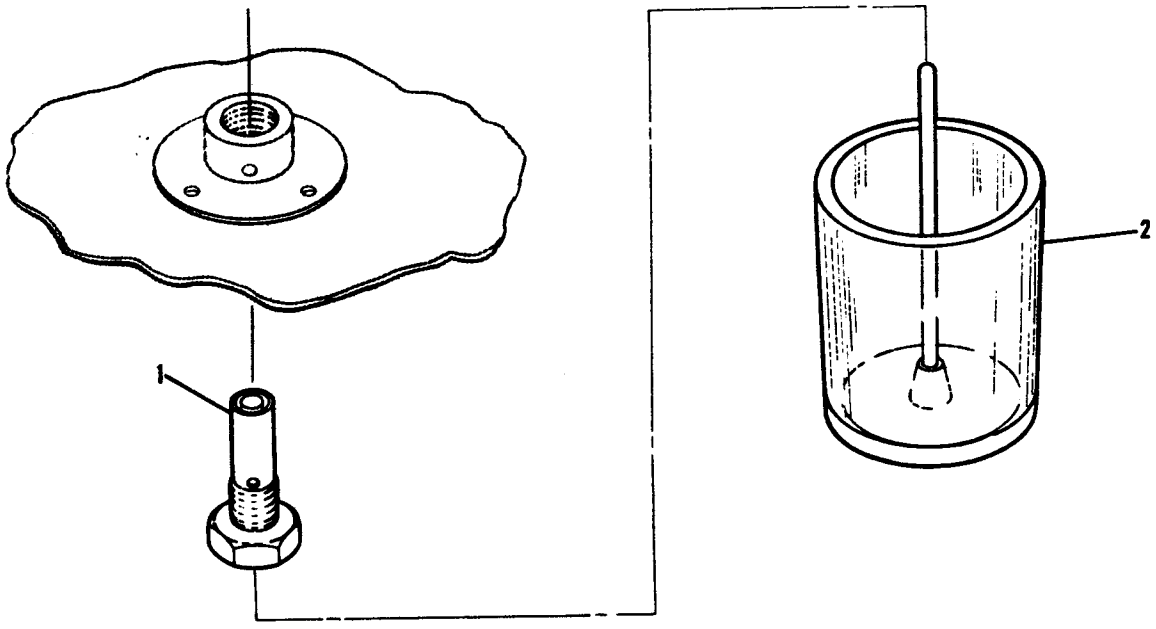


Figure 8A. Fuel Tank Drain Valve Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
8A-			FUEL TANK DRAIN VALVE INSTALLATION ----------	1	
- 1	S2106-1	*	DRAIN VALVE ----------	2	
- 2	S21021	*	CUP-FUEL SAMPLER ----------	1	
			NOTE. *THESE PARTS AND INSTALLAION INSTRUCTIONS ARE AVAILABLE AS A KIT & MAY BE ORDERED UNDER P/N AK180-77A		

Wing (Cont)

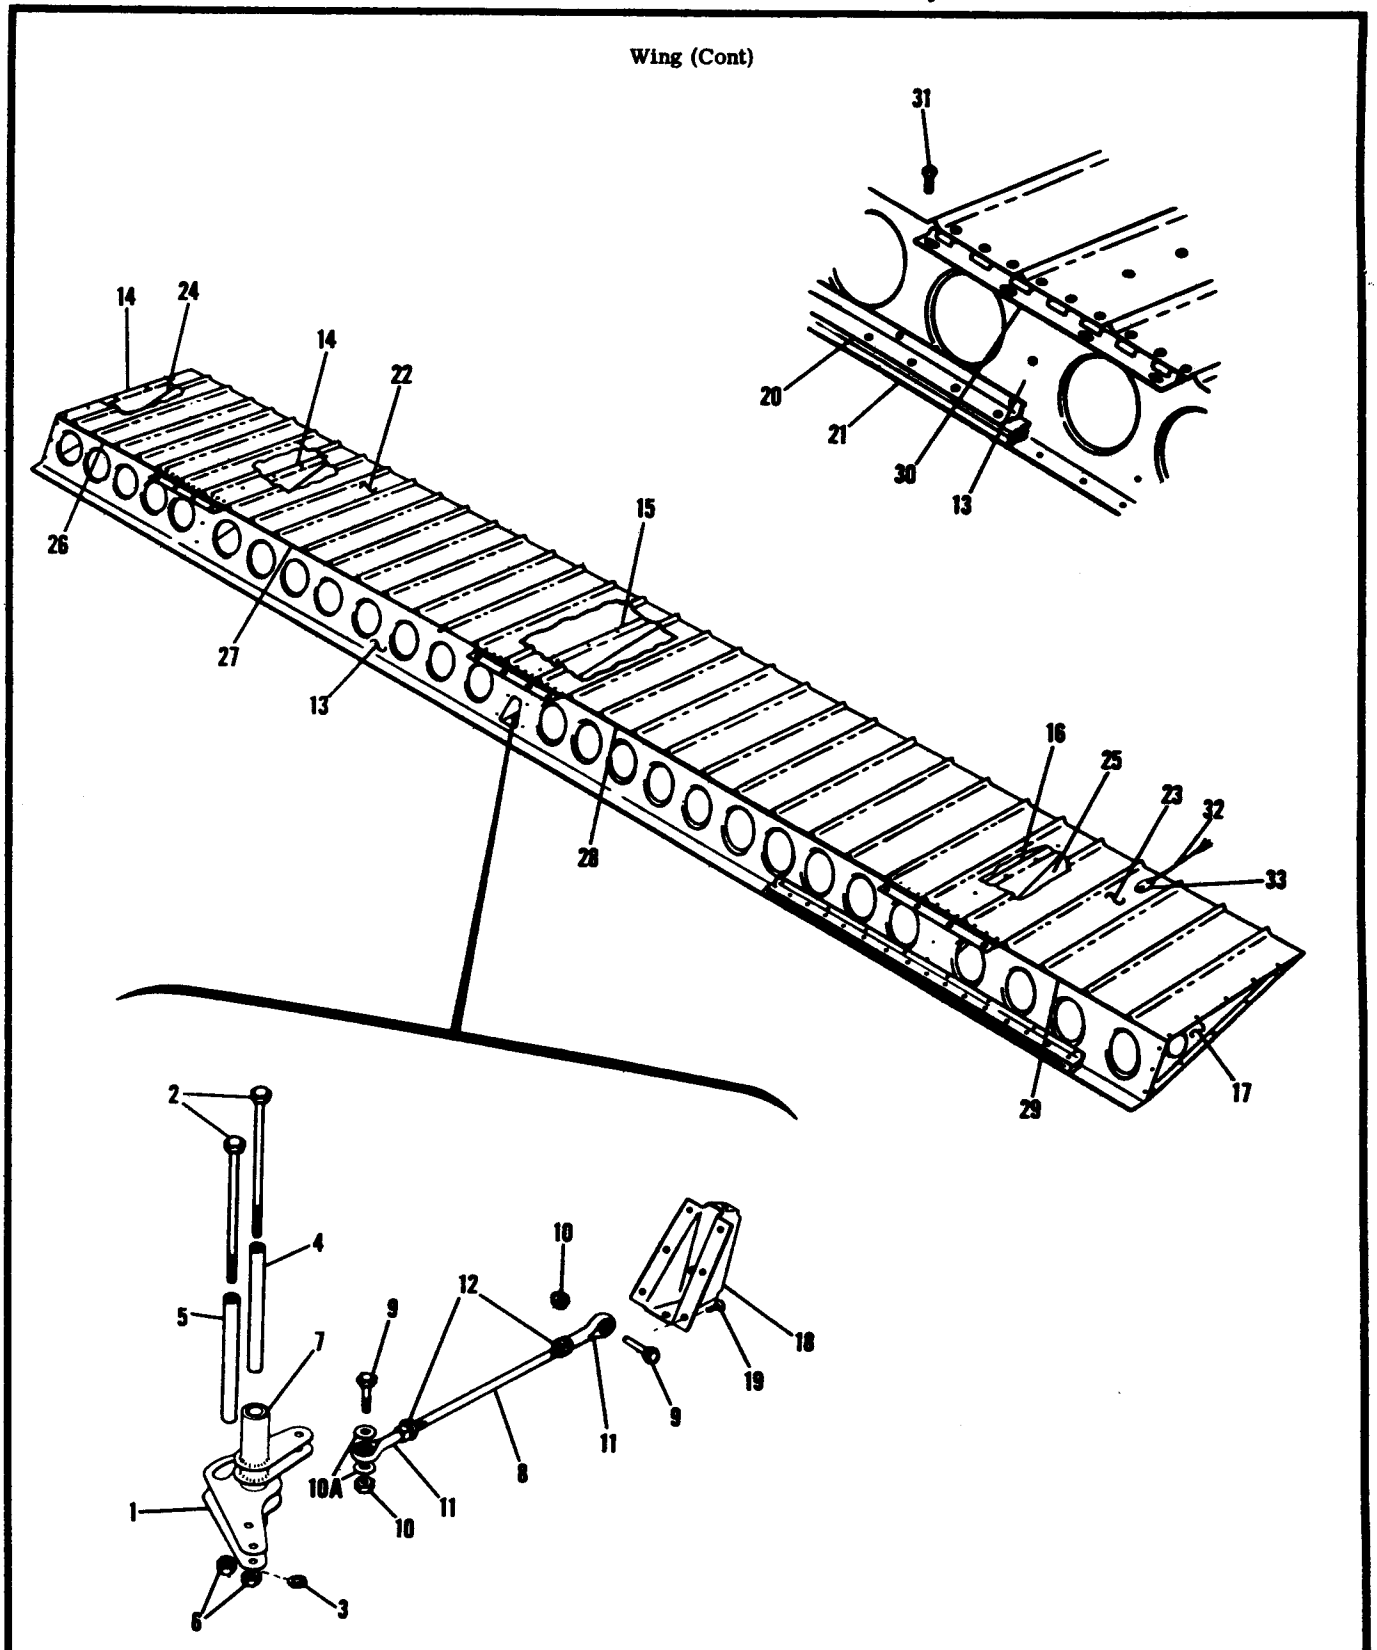


Figure 9. Aileron Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
9 -		AILERON INSTALLAION LH	NP	
		AILERON INSTALLATION RH	NP	
- 1	0760611-1	BELLCRANK-AILERON LH	1	A
	0760611-2	BELLCRANK-AILERON RH	1	A
	0760703-1	BELLCRANK-AILERON LH	1	B
	0760703-2	BELLCRANK-AILERON RH	1	B
	0760705-1	BELLCRANK-AILERON LH USED ON NAV-O-MATIC ONLY	1	B
	0760705-2	BELLCRANK-AILERON RH USED ON NAV-O-MATIC ONLY	1	B
		ATTACHING PARTS		
- 2	AN4-42A	BOLT	2	
- 3	0522629	WASHER	2	
- 4	0523221	BUSHING	1	
- 5	0523222	BUSHING	1	
- 6	NAS679A4	NUT	2	
		---*---		
- 7	B610	BEARING TOR	2	
- 8	0523218	ROD ASSEMBLY-AILERON PUSH-PULL	1	
		ATTACHING PARTS		
- 9	AN3-7A	BOLT	2	
-10	MS21044N3	NUT	2	
-10A	AN960-10L	WASHER	2	
		---*---		
-11	S1819-3	ROD END	2	
-12	AN316-4R	NUT-CHECK	2	
	0523800-16	AILERON ASSY-LH WEU 0523800-25	1	E
	0523800-25	AILERON ASSY-LH	1	F
	0523800-17	AILERON ASSY-RH WEU 0523800-24	1	E
	0523800-24	AILERON ASSY-RH	1	F
-13	0523806	SPAR-AILERON LH	1	
	0523806-1	SPAR-AILERON RH	1	
-14	0523808	RIB NO 1-AILERON LH	2	
	0523808-2	RIB NO 1-AILERON RH	2	
-15	0523809	RIB NO 2-AILERON LH	1	
	0523809-1	RIB NO 2-AILERON RH	1	
-16	0523810	RIB NO 3-AILERON	1	
-17	0523811	RIB NO 4-AILERON RH	1	
	0523811-1	RIB NO 4-AILERON LH	1	
-18	0760011-2	BRACKET-AILERON CONTROL	1	
		ATTACHING PARTS		
-19	NAS455-163C4-8	RIVET	6	
		---*---		
-20	0523814-5	BRACKET-AILERON WEIGHT WEU 0523814-8	1	E
	0523814-8	BRACKET-AILERON WEIGHT	1	F
-21	0724115-1	WEIGHT-AILERON BALANCE	3	E
	0724115-1	WEIGHT-AILERON BALANCE	2	F
	0724115-3	WEIGHT-AILERON BALANCE	1	F
	0724115-4	WEIGHT-AILERON BALANCE	1	F
-22	0523800-6	SKIN-AILERON UPPER INBOARD LH	1	
	0523800-7	SKIN-AILERON UPPER INBOARD RH	1	
-23	0523800-8	SKIN-AILERON UPPER OUTBOARD LH	1	
	0523800-9	SKIN-AILERON UPPER OUTBOARD RH	1	
-24	0523800-10	SKIN-AILERON LOWER INBOARD LH	1	
	0523800-11	SKIN-AILERON LOWER INBOARD RH	1	
-25	0523800-12	SKIN-AILERON LOWER OUTBOARD LH	1	
	0523800-13	SKIN-AILERON LOWER OUTBOARD RH	1	
-26	0523813-1	SPACER	1	
-27	0523813-8	SPACER	1	
-28	0523813-6	SPACER	1	
-29	0523813-7	SPACER	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
9 -30	0523807	HINGE-AILERON	3	
		ATTACHING PARTS		
-31	NAS221-8	SCREW	12	
		---•---		
-32	C592001-0101	STATIC DISCHARGER WEU C592001-0103	2	C
	C592001-0103	STATIC DISCHARGER	3	D
		ATTACHING PARTS		
	S1648-06K75	NUT	6	D
	A06K75	RIVNUT GD	2	C
-33	AN515-6R6	SCREW	2	C
	AN515-6R10	SCREW	6	D
	AN936A6	WASHER	2	C
	AN936A6	WASHER	6	D
		---•---		
		A---182 SERIAL 18253599 THRU 18258505 A182 SERIAL A182-0001 THRU A182-0096		
		B---182 SERIAL 18258506 THRU 18262465 A182 SERIAL A182-0097 & ON		
		C---182 SERIAL 18253599 THRU 18261425		
		D---182 SERIAL 18261426 THRU 18262465		
		E---182 SERIAL 18253599 THRU 18260499 A182 SERIAL A182-0001 & ON		
		F---182 SERIAL 18260500 THRU 18262465		

Wing (Cont)

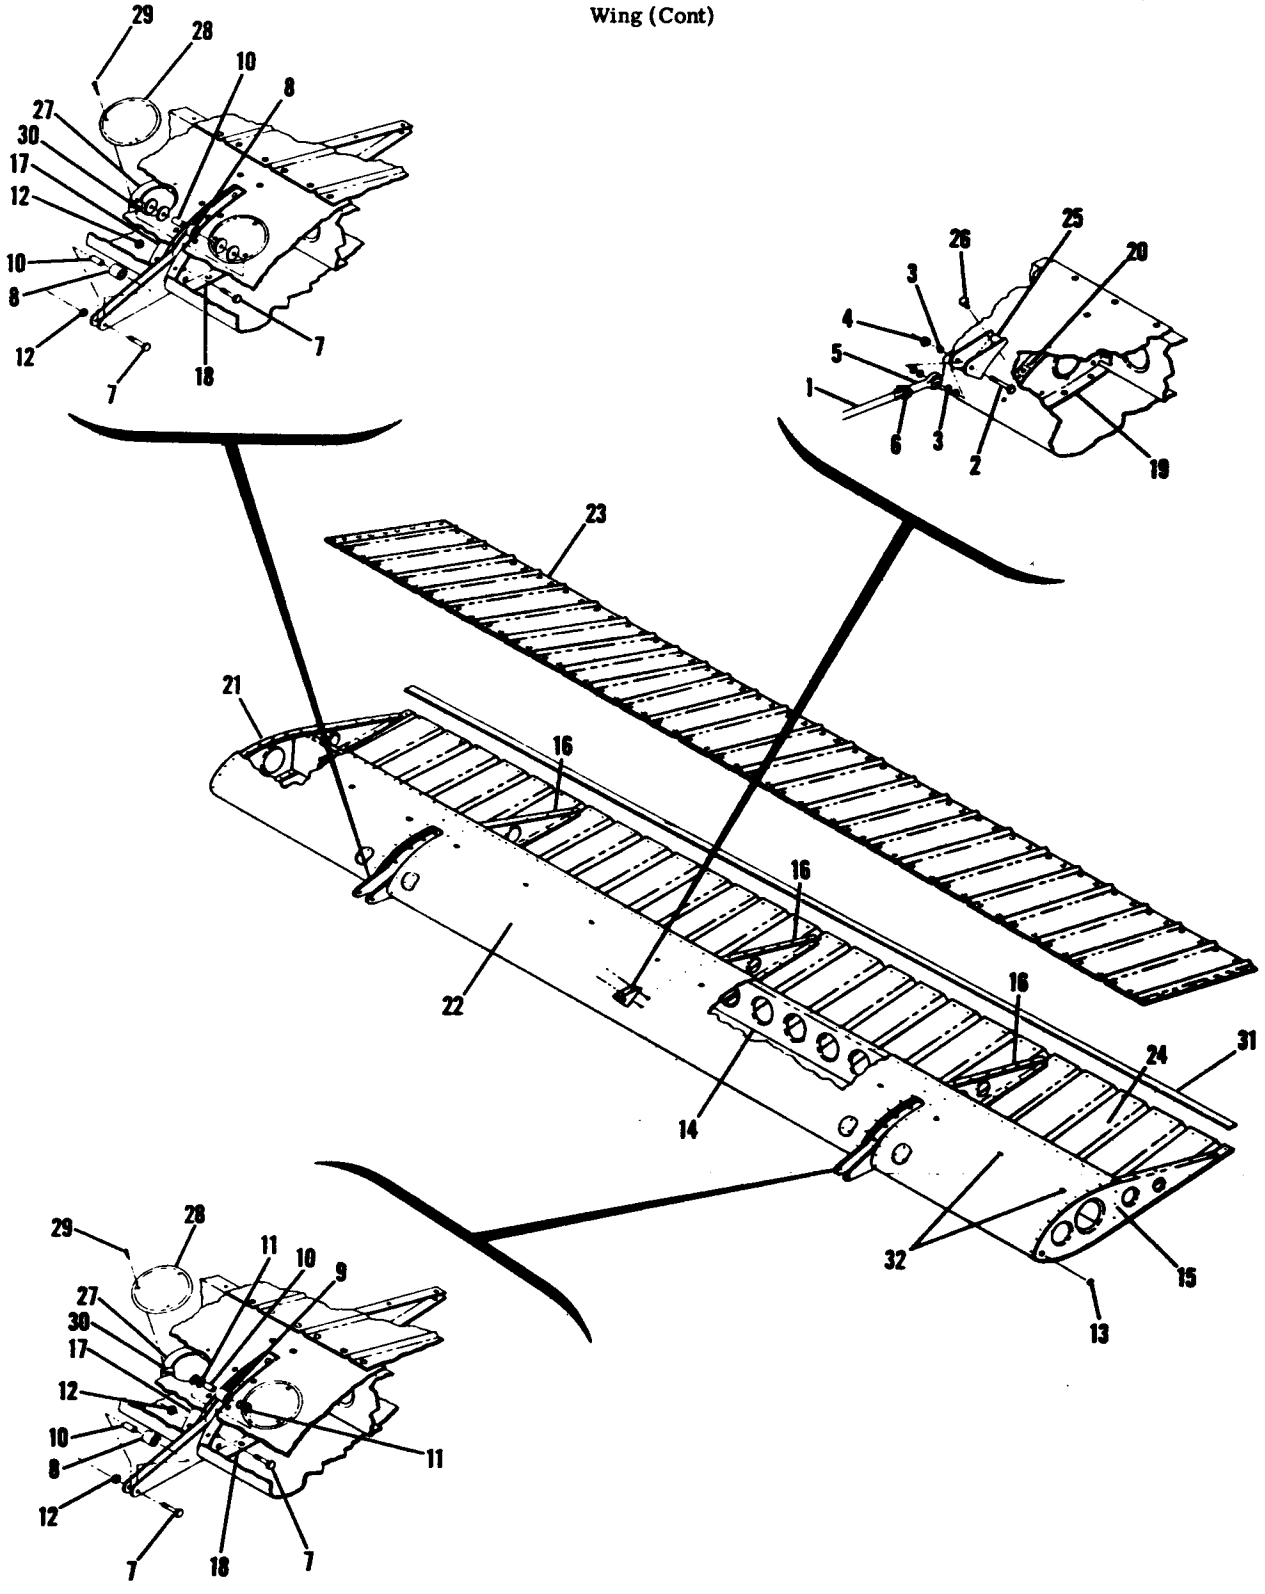


Figure 10. Flap Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10 -			FLAP INSTALLATION LH	NP	
			FLAP INSTALLATION RH	NP	
- 1	0523537		ROD ASSEMBLY-FLAP PUSH PULL	1	
			ATTACHING PARTS		
- 2	AN3-11A		BOLT	1	
- 3	AN960-10		WASHER	5	
- 4	MS21044N3		NUT	1	
			---*---		
- 5	S1106-3		ROD END	2	
- 6	AN316-4R		NUT-CHECK	2	
	0523901-15	*	FLAP ASSEMBLY-WING LH WHEN EXHAUSTED USE 0523901-33	1	A
	0523901-16	*	FLAP ASSEMBLY-WING RH WHEN EXHAUSTED USE 0523901-34	1	A
	0523901-33	*	FLAP ASSEMBLY-LH	1	B
	0523901-34	*	FLAP ASSEMBLY-RH	1	B
			ATTACHING PARTS		
- 7	AN3-10A		BOLT	4	
- 8	0523921		ROLLER ASSEMBLY	3	
- 9	0523920		ROLLER ASSEMBLY	1	
-10	0523919		BUSHING	4	
-11	1220114-1		SPACER-FLAP OUTBOARD ROLLER ONLY	2	
-12	MS21044N3		NUT	4	
			---*---		
-13	CM2692-20-1S		PLUG BUTTON UC	1	
-14	0523911-2		SPAR-FLAP LH	1	
	0523911-3		SPAR-FLAP RH	1	
-15	0523912-1		RIB-FLAP RH END	1	
-16	0523923		RIB-FLAP TRAILING EDGE	3	
-17	0523901-13		RIB ASSEMBLY-FLAP SUPPORT ARM LH	2	
-18	0523901-14		RIB ASSEMBLY-FLAP SUPPORT ARM RH	2	
-19	0523914-2		RIB ASSEMBLY-FLAP LEADING EDGE CENTER	1	
-20	NAS680A3		NUTPLATE	2	
-21	0523912		RIB-FLAP LH END	1	
-22	0523901-17		SKIN-FLAP LEADING EDGE LH	1	
	0523901-18		SKIN-FLAP LEADING EDGE RH	1	
-23	0523901-21		SKIN-FLAP UPPER LH	1	
	0523901-22		SKIN-FLAP UPPER RH	1	
-24	0523901-19		SKIN-FLAP LOWER LH	1	
	0523901-20		SKIN-FLAP LOWER RH	1	
-25	0523918		BRACKET-FLAP CONTROL ATTACHMENT	1	
			ATTACHING PARTS		
-26	AN3-4A		BOLT	2	
			---*---		
-27	S237-4		DOUBLER-ACCESS OPENING	4	
-28	S225-3		PLATE-COVER	4	
			ATTACHING PARTS		
-29	S1021Z8-8		SCREW	12	
-30	NAS395-13-3		NUT	12	
			---*---		
-31	0523901-10		REINFORCEMENT	1	B
-32	S1093-1	**	PLUG BUTTON-ANTI FRICTION	14	

NOTE. *WHEN ORDERING THESE ASSEMBLIES ALSO ORDER PARTS MARKED **.

A---182 SERIAL 18253599 THRU 18257695
A182 SERIAL A182-0001 THRU A182-0056
B---182 SERIAL 18257696 THRU 18262465
A182 SERIAL A182-0057 & ON

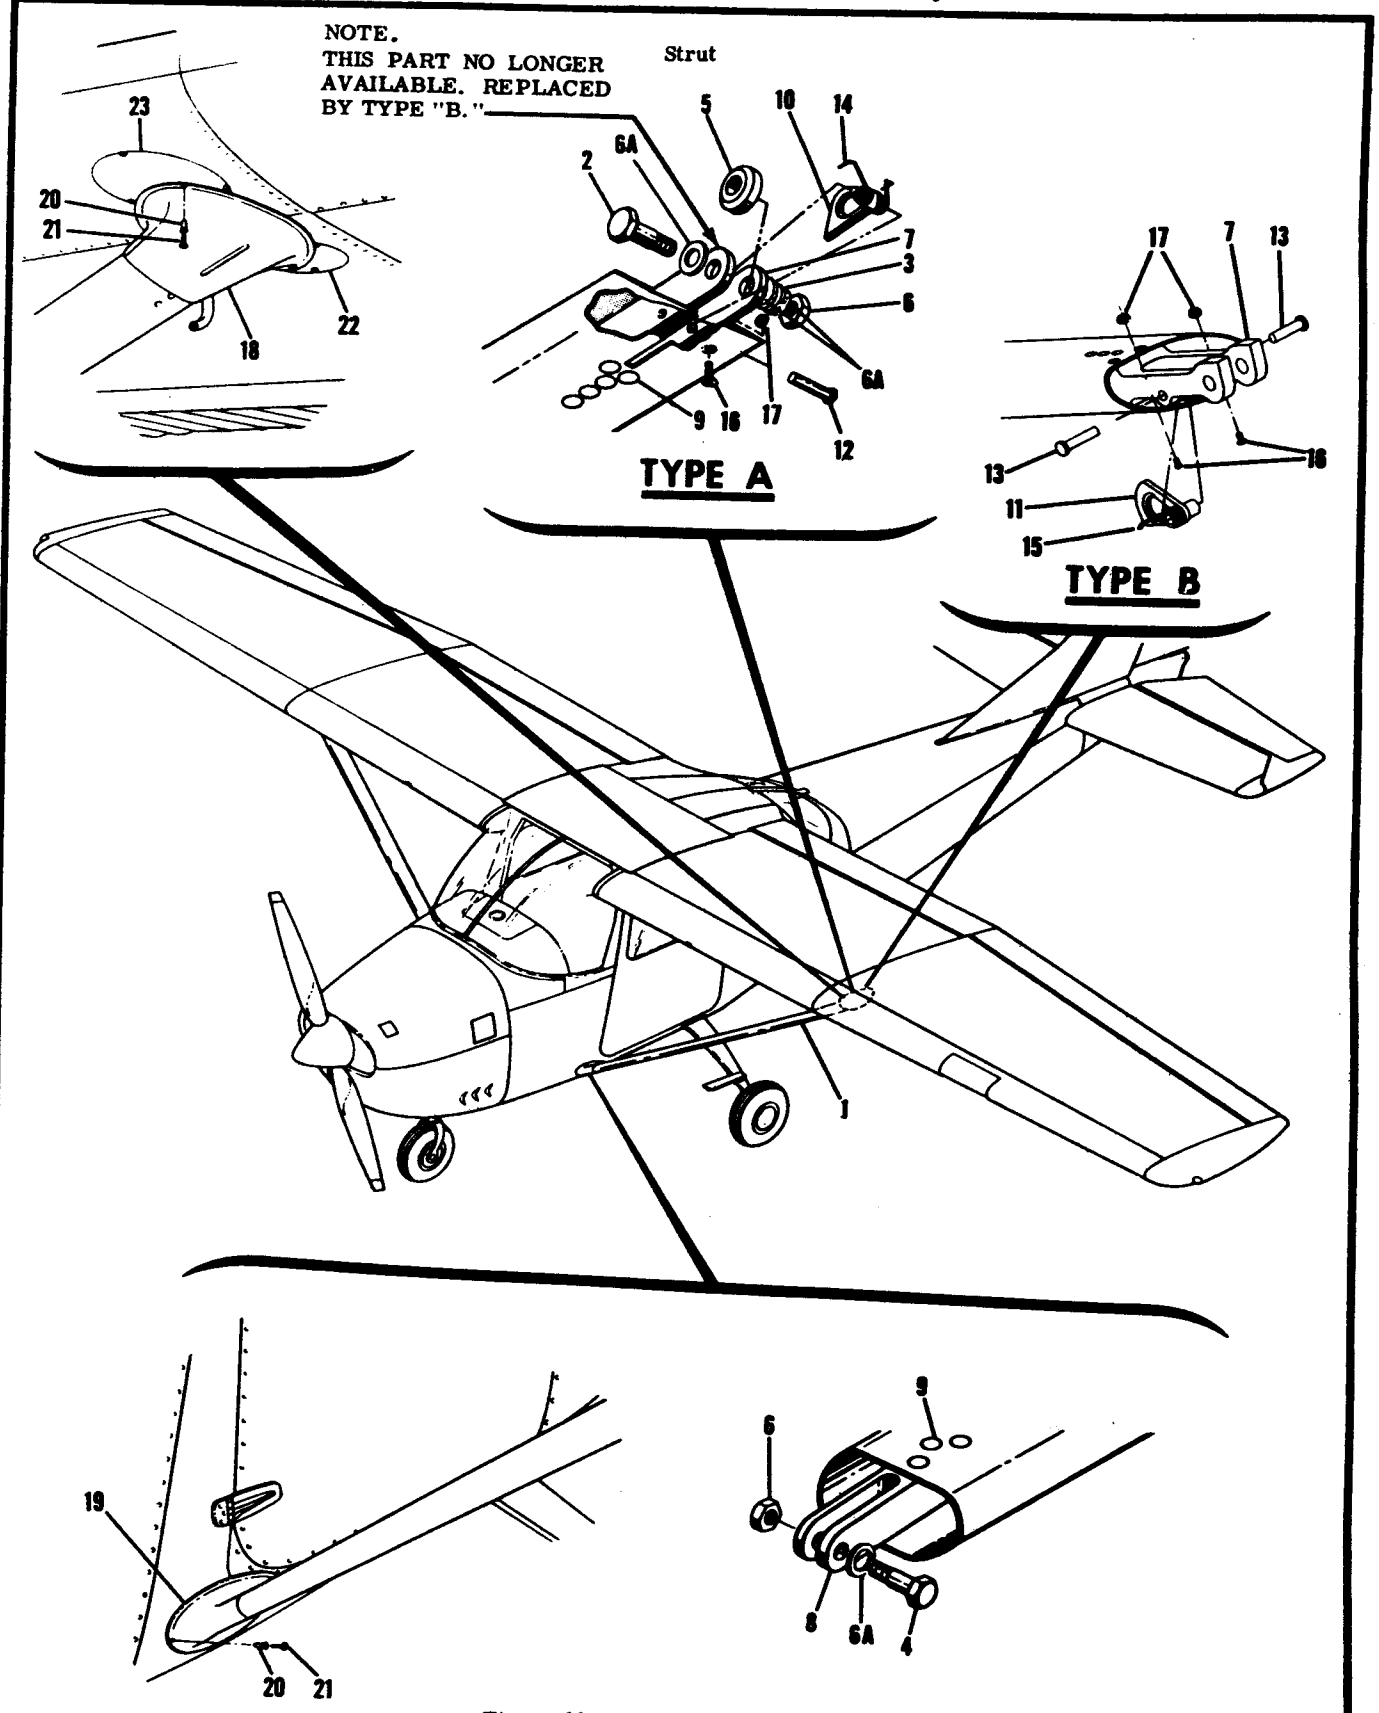



Figure 11. Wing Strut Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
11 -			STRUT INSTALLATION-WING	NP	
- 1	0723610-5		STRUT ASSEMBLY-LH	1	
	0723610-6		STRUT ASSEMBLY-RH	1	
			ATTACHING PARTS		
- 2	AN8-25A		BOLT	1	
- 3	AN960-816L		WASHER	1	
- 4	AN8-20A		BOLT	1	
- 5	0523307		SPACER	2	
- 6	MS20365-820C		NUT	4	
- 6A	AN960-816		WASHER		
			---*---		
- 7	0523614-1	*	FITTING-WING STRUT UPPER	1	
- 8	0723614-1		FITTING-WING STRUT LOWER	1	
			ATTACHING PARTS		
- 9	MS20426AD10		RIVET	5	
	0723600-6		RIVET ALTERNATE	5	
			---*---		
-10	0723604-1		RING-MOORING	1	C
-11	0523615-1		RING-MOORING	1	D
			ATTACHING PARTS		
-12	MS20392-2C41		PIN	1	C
-13	MS20392-2C63		PIN	2	D
-14	0723601-2		SPRING	1	C
-15	0523616-1		SPRING	1	D
-16	AN507-832R6		SCREW	1	C
	AN507-832R6		SCREW	2	D
-17	NAS679A08		NUT	1	C
	NAS679A08		NUT	2	D
			---*---		
-18	0723605-3		FAIRING-UPPER LH	1	
	0723605-4		FAIRING-UPPER RH	1	
-19	0723612-3		FAIRING-LOWER LH	1	
	0723612-4		FAIRING-LOWER RH	1	
			ATTACHING PARTS		
-20	A08-75		RIVNUT GD	1	
-21	AN515-8R8		SCREW	3	
			---*---		
-22	0723605-9		PLATE ASSEMBLY-AFT LH	1	
	0723605-7		PLATE ASSEMBLY-AFT RH	1	
	A08-75		RIVNUT GD	1	
-23	0723605-8		PLATE ASSEMBLY-FWD LH	1	
	0723605-6		PLATE ASSEMBLY-FWD RH	1	
	A08-75		RIVNUT GD	1	

NOTE. *WHEN INITIALLY ORDERING THIS PART FOR AIRCRAFT WITH TYPE A TIE DOWN PROVISIONS ALSO ORDER PARTS CODED D.

C---USED ON TYPE A. SEE DETAIL
D---USED ON TYPE B. SEE DETAIL

Empennage

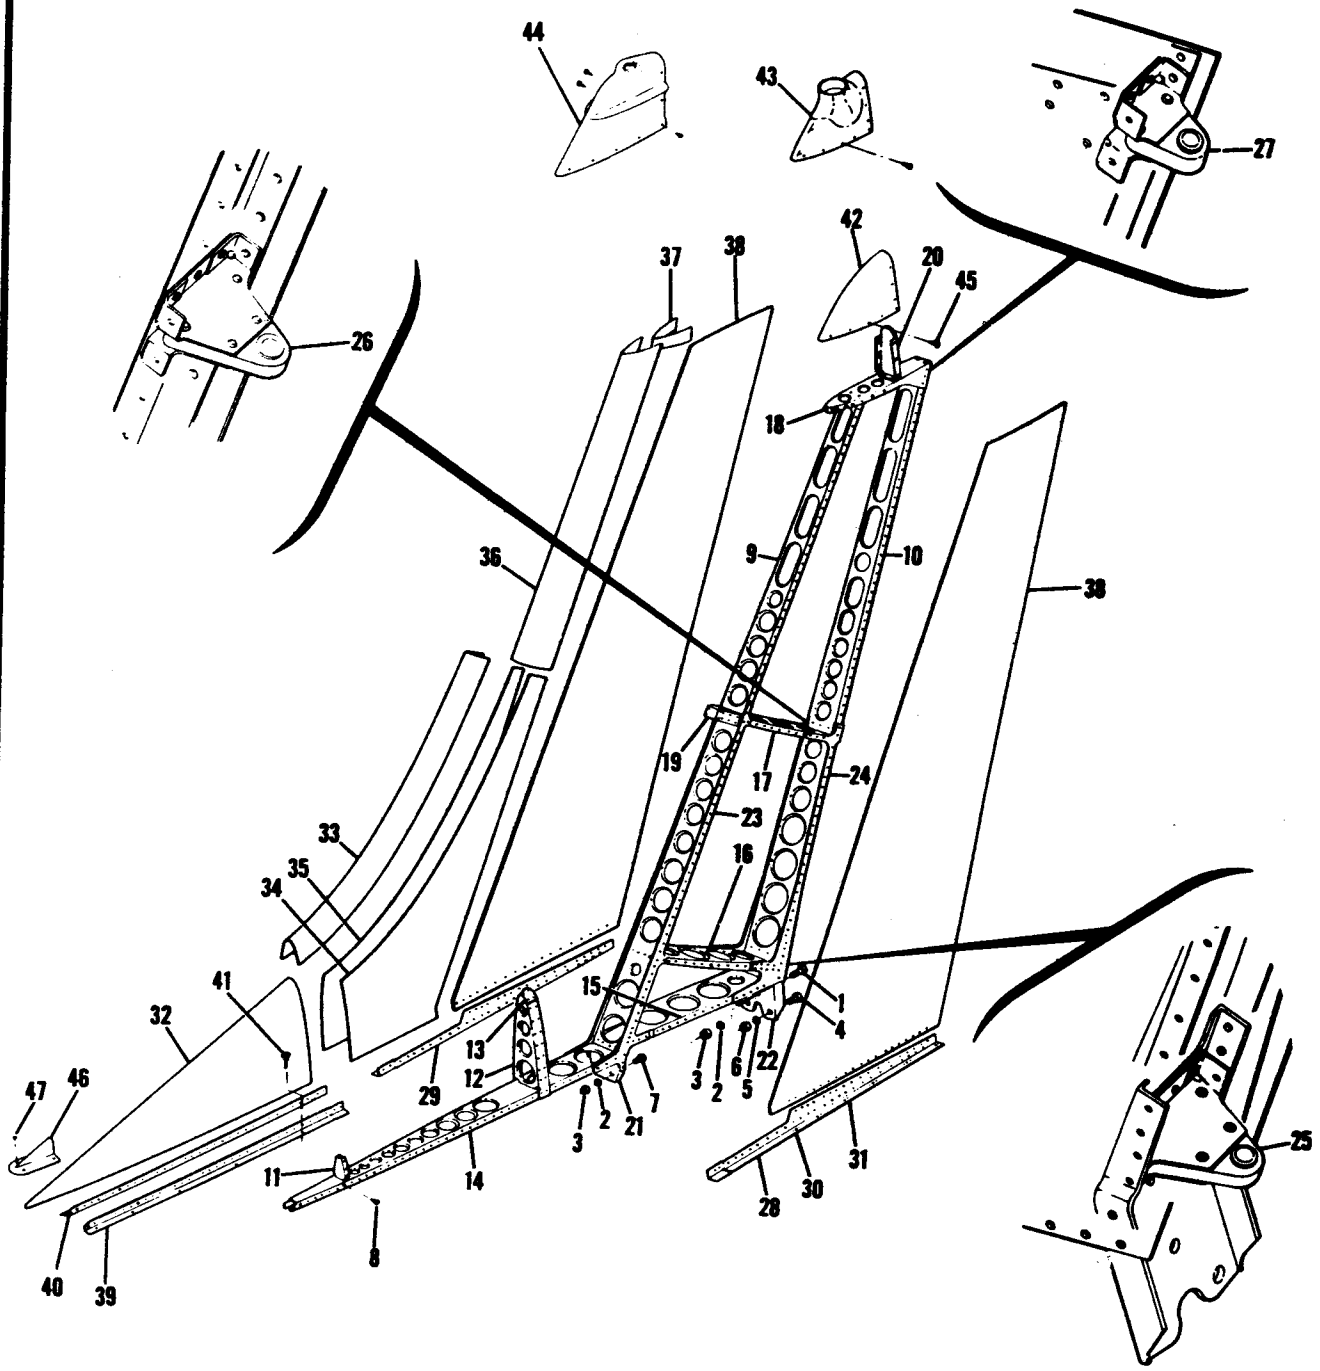


182 SERIAL 18253599 THRU 18261425

Figure 12. Fin & Dorsal Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
12 -		FIN & DORSAL INSTALLATION	NP	
	1231000-20	FIN ASSEMBLY	1	A
	1231000-23	FIN ASSEMBLY	1	D
	1231000-26	FIN ASSEMBLY	1	E
		ATTACHING PARTS		
- 1	AN5-6A	BOLT	1	C
	AN6-7A	BOLT	1	E
- 2	AN960-516	WASHER	3	C
	AN960-616	WASHER	3	E
- 3	NAS679A5	NUT	2	C
	NAS679A5	NUT	1	E
	NAS679A6	NUT	6	
- 4	AN6-7A	BOLT	4	
- 5	AN960-616	WASHER	2	
- 6	NAS679A6	NUT	2	
- 7	AN5-6A	BOLT	2	
- 8	AN515-8R8	SCREW	2	
	AN525-832R7	SCREW		
		---*---		
- 9	1231002-1	SPAR-FORWARD	1	
-10	1231002-2	SPAR-AFT	1	
-11	0731603-1	RIB-DORSAL FORWARD	1	
-12	0731602-1	RIB-DORSAL AFT	1	
-13	0731602-2	STRIP-LEADING EDGE	1	
-14	0731601-1	RIB-FIN BASE FORWARD	1	
-15	1231005-2	RIB-FIN BASE AFT	1	
-16	1231006-1	RIB-FIN LOWER	1	
-17	1231007-1	RIB-FIN CENTER	1	
-18	1231008-1	RIB ASSEMBLY-FIN UPPER	10	
	NAS698A08K	NUTPLATE	1	
-19	1231009-1	RIB ASSEMBLY-FIN LEADING EDGE CENTER	1	A
-20	1231010-1	RIB ASSEMBLY-FIN TIP	1	B
	1231010-3	RIB ASSEMBLY-FIN TIP	2	
	NAS697A08K	NUTPLATE	4	A
	NAS696A08K	NUTPLATE	2	B
	NAS696A08K	NUTPLATE	1	
-21	1231012-1	FITTING-FORWARD FIN SPAR ATTACH	1	C
-22	1231013-1	FITTING-AFT FIN SPAR ATTACH	1	E
	1231013-2	FITTING-AFT FIN SPAR ATTACH	1	
-23	1231014-3	DOUBLER PLATE-FIN SPAR FORWARD	1	
-24	1231014-2	DOUBLER PLATE-FIN SPAR AFT	1	
-25	1231023-1	BRACKET ASSEMBLY-LOWER FIN HINGE	1	
-26	1231023-2	BRACKET ASSEMBLY-CENTER FIN HINGE	1	
-27	1231023-3	BRACKET ASSEMBLY-UPPER FIN HINGE	1	
-28	0731604-5	FAIRING ASSEMBLY-FIN TO FUSELAGE AFT LH	1	
-29	0731604-6	FAIRING ASSEMBLY-FIN TO FUSELAGE AFT RH	1	
-30	NAS445-5	NUTPLATE	5	
-31	NAS444-5	NUTPLATE	1	
-32	1231000-14	SKIN-DORSAL	1	
-33	1231000-17	SKIN-LEADING EDGE LOWER	1	
-34	1231000-15	SKIN-FIN LH	1	
-35	1231000-16	SKIN-FIN RH	1	
-36	1231000-4	SKIN-FIN LEADING EDGE	1	
-37	1231000-7	DOUBLER	2	
-38	1231000-18	SKIN-FIN	1	
-39	0731604-3	FAIRING-FORWARD LH	1	
-40	0731604-4	FAIRING-FORWARD RH		
		ATTACHING PARTS	5	
-41	AN525-832R7	SCREW		
		---*---	1	A
-42	1231000-19	TIP-FIN	1	B
	0731606-1-791	TIP-FIN	1	A
-43	1200039-2	TIP-FIN USED WITH ROTATING BEACON	1	B
-44	0731606-3-791	TIP-FIN USED WITH FLASHING BEACON		
		ATTACHING PARTS	16	
-45	NAS220-6	SCREW		
		---*---	1	
-46	0731605-1	FAIRING-DORSAL FIN	3	
-47	AN515-8R6	SCREW		

A---182 SERIAL 18253599 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0057
B---182 SERIAL 18257626 THRU 18261425
A182 SERIAL A182-0057 THRU A182-0136
C---182 SERIAL 18253599 THRU 18260445
A182 SERIAL A182-0001 THRU A182-0136
D---182 SERIAL 18257626 THRU 18260445
A182 SERIAL A182-0057 THRU A182-0136
E---182 SERIAL 18260446 THRU 18261425

Empennage (Cont)

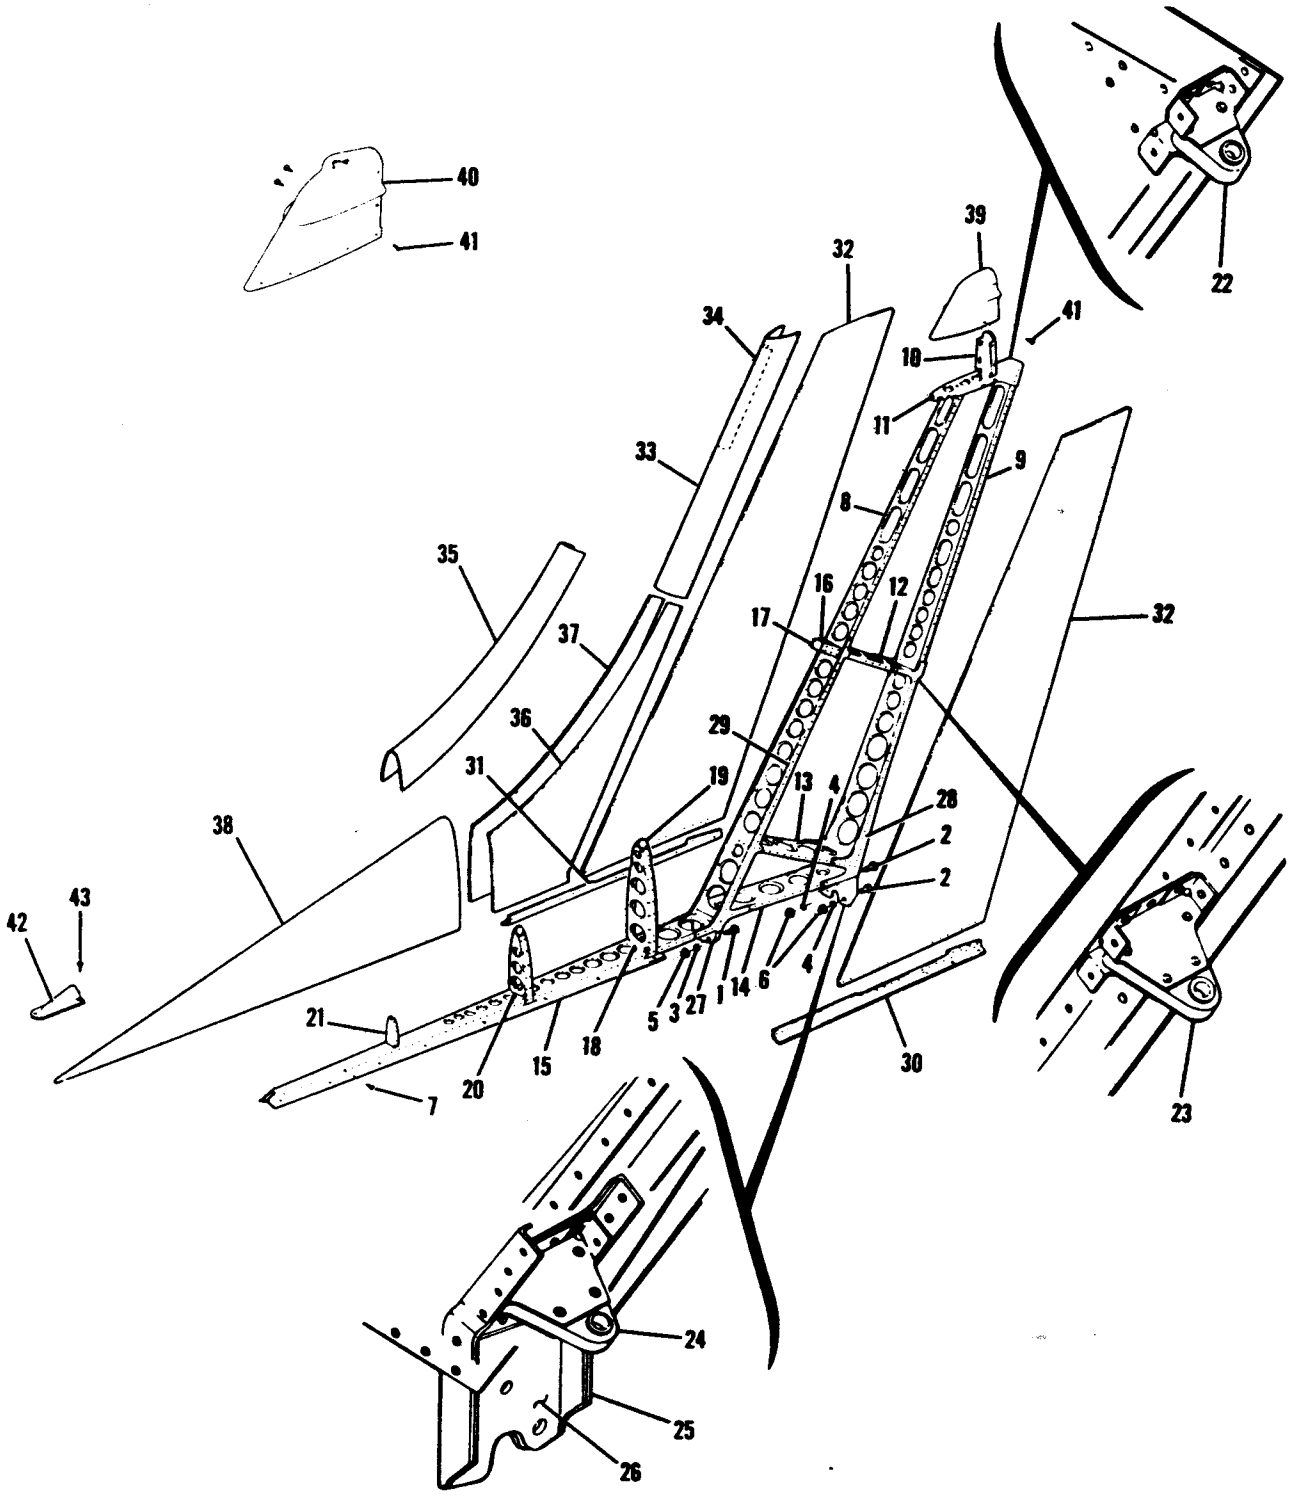


182 SERIAL 18261426 THRU 18261528

Figure 12A. Fin & Dorsal Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
12A-		FIN & DORSAL INSTALLATION	NP	A
	1231048-3	FIN ASSEMBLY	1	
		ATTACHING PARTS		
- 1	AN5-6A	BOLT	2	
- 2	AN6-7A	BOLT	3	
- 3	AN960-516	WASHER	4	
- 4	AN960-616	WASHER	3	
- 5	NAS679A5	NUT	2	
- 6	NAS679A6	NUT	3	
- 7	NAS220 8	SCREW	2	
		---*---		
- 8	1231002-1	SPAR-FIN FORWARD	1	
- 9	1231002-2	SPAR-FIN AFT	1	
-10	1231010-3	RIB ASSEMBLY-FIN TIP-CAP	1	
	NAS696A08K	NUTPLATE	2	
	NAS697A08K	NUTPLATE	2	
-11	1231008-1	RIB ASSEMBLY-FIN UPPER	1	
	NAS698A08K	NUTPLATE	10	
	NAS680A06	NUTPLATE	1	
-12	1231007-1	RIB-FIN CENTER	1	
-13	1231006-1	RIB-FIN LOWER	1	
-14	1231005-2	RIB-FIN BASE AFT	1	
-15	1231049-1	RIB-FIN BASE FORWARD	1	
-16	1231009-1	RIB ASSEMBLY-LEADING EDGE CENTER	1	
-17	1231009-3	STRIP-LEADING EDGE	1	
-18	0731602-1	RIB-DORSAL STA 200.45	1	
-19	0731602-2	STRIP-LEADING EDGE	1	
-20	1231049-2	RIB-DORSAL STA 180.00	1	
-21	1231049-3	RIB-DORSAL STA 150.00	1	
-22	1231023-3	BRACKET ASSEMBLY-HINGE UPPER	1	
-23	1231023-2	BRACKET ASSEMBLY-HINGE CENTER	1	
-24	1231023-1	BRACKET ASSEMBLY-HINGE LOWER	1	
-25	1231013-2	FITTING-FIN ATTACH AFT	1	
-26	1231054-1	SPAR DOUBLER-VERTICAL FIN ATTACH AFT	1	
-27	1231012-2	FITTING-FIN ATTACH FORWARD	1	
	1231054-2	SPAR DOUBLER-VERTICAL FIN ATTACH FORWARD	1	
-28	1231014-2	PLATE-SPAR DOUBLER AFT	2	
-29	1231014-3	PLATE-SPAR DOUBLER FORWARD	2	
-30	0731604-5	FAIRING ASSEMBLY-DORSAL TO FUSELAGE AFT LH	1	
-31	0731604-6	FAIRING ASSEMBLY-DORSAL TO FUSELAGE AFT RH	1	
	A6196-8Z3	NUT TIN	1	
	A6195-8Z3	NUT TIN	4	
-32	1231000-18	SKIN-FIN	2	
-33	1231000-4	SKIN-FIN LEADING EDGE UPPER	1	
-34	1231000-7	DOUBLER-LEADING EDGE SKIN	1	
-35	1231000-17	SKIN-FIN LEADING EDGE LOWER	1	
-36	1231000-15	SKIN-FIN LH	1	
-37	1231000-16	SKIN-FIN RH	1	
-38	1231048-2	SKIN-DORSAL	1	
-39	0731606-1-791	CAP-FIN TIP	1	
-40	0731606-3-791	CAP-FIN TIP USED WITH FLASHING BEACON	1	
-41	NAS220-6	SCREW	14	
-42	1231050-1	FAIRING-DORSAL FIN	1	
		ATTACHING PARTS		
-43	AN525-832R7	SCREW	3	
		---*---		

A---182 SERIAL 18261425 THRU 18261528
A182 SERIAL A182-0137 THRU A182-0146

Empennage (Cont)

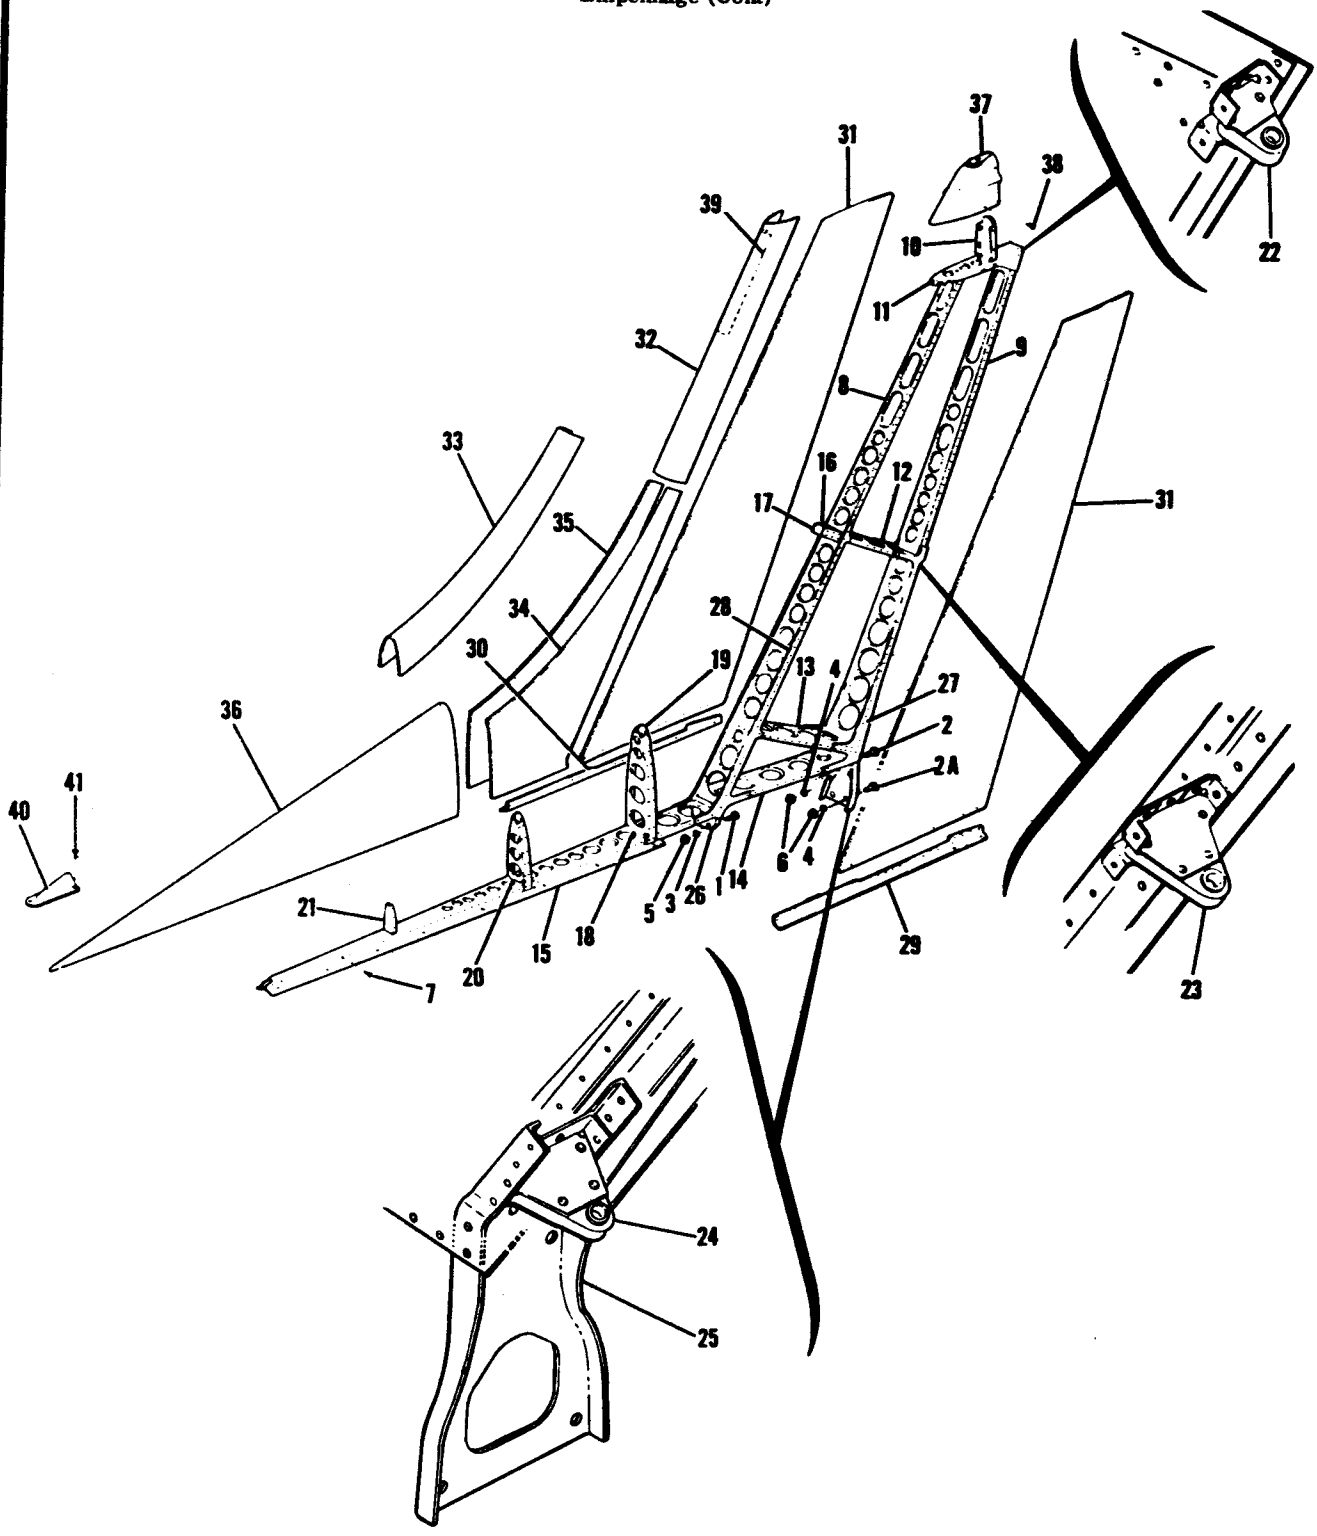

182 SERIAL 18261529 THRU 18262465

Figure 12B. Fin & Dorsal Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
128-		FIN & DORSAL INSTALLATION	NP	A
	1231057-1	FIN ASSEMBLY	1	
		ATTACHING PARTS		
- 1	AN4-6A	BOLT	4	
- 2	AN5-7A	BOLT	2	
- 2A	AN5-6A	BOLT	2	
- 3	AN960-416	WASHER	8	
- 4	AN960-516	WASHER	8	
- 5	NAS679A4	NUT	4	
- 6	NAS679A5	NUT	4	
- 7	AN525-832R7	SCREW	2	
		---*---		
- 8	1231002-3	SPAR-FIN FORWARD	1	
- 9	1231002-2	SPAR-FIN AFT	1	
-10	1231010-3	RIB ASSY-FIN TIP CAP	1	
	NAS696A08K	NUTPLATE	2	
	NAS697A08K	NUTPLATE	2	
-11	1231008-1	RIB ASSY-FIN UPPER	1	
	NAS698A08K	NUTPLATE	10	
	NAS680A06	NUTPLATE	1	
-12	1231007-1	RIB-FIN CENTER	1	
-13	1231006-1	RIB-FIN LOWER	1	
-14	1231005-3	RIB-FIN BASE AFT	1	
-15	1231049-1	RIB-FIN BASE FORWARD	1	
-16	1231009-1	RIB ASSY-LEADING EDGE CENTER	1	
-17	1231009-3	STRIP-LEADING EDGE	1	
-18	0731602-1	RIB-DORSAL STA 200.45	1	
-19	0731602-2	STRIP-LEADING EDGE	1	
-20	1231049-2	RIB-DORSAL STA 180.00	1	
-21	1231049-3	RIB-DORSAL STA 160.00	1	
-22	1231023-3	BRACKET ASSY-HINGE UPPER	1	
-23	1231023-2	BRACKET ASSY-HINGE CENTER	1	
-24	1231023-1	BRACKET ASSY-HINGE LOWER	1	
-25	1231058-1	FITTING-FIN ATTACH AFT	1	
-26	1231056-1	FITTING-FIN ATTACH FWD	1	
-27	1231014-2	PLATE-SPAR DOUBLER AFT	2	
-28	1231014-4	PLATE-SPAR DOUBLER FORWARD	2	
-29	0713604-7	FAIRING ASSY-DORSAL TO FUSELAGE AFT LH	1	
-30	0713604-8	FAIRING ASSY-DORSAL TO FUSELAGE AFT RH	1	
	A6196-823	NUT TIN	1	
	A6195-823	NUT TIN	4	
-31	1231000-18	SKIN-FIN	2	
-32	1231000-4	SKIN-FIN LEADING EDGE UPPER	1	
-33	1231000-17	SKIN-FIN LEADING EDGE LOWER	1	
-34	1231057-3	SKIN-FIN LH	1	
-35	1231057-4	SKIN-FIN RH	1	
-36	1231048-2	SKIN-DORSAL	1	
-37	1231059-1	FIN TIP ASSEMBLY	1	
		ATTACHING PARTS		
-38	NAS220-6	SCREW	14	
		---*---		
-39	1231000-7	DOUBLER-LEADING EDGE SKIN	1	
-40	1231050-2	FAIRING-DORSAL FIN	1	
		ATTACHING PARTS		
-41	AN525-832R7	SCREW	4	
		---*---		

A---182 SERIAL 18261529 THRU 18262465
A182 SERIAL A182-0147 & ON

Empennage (Cont)


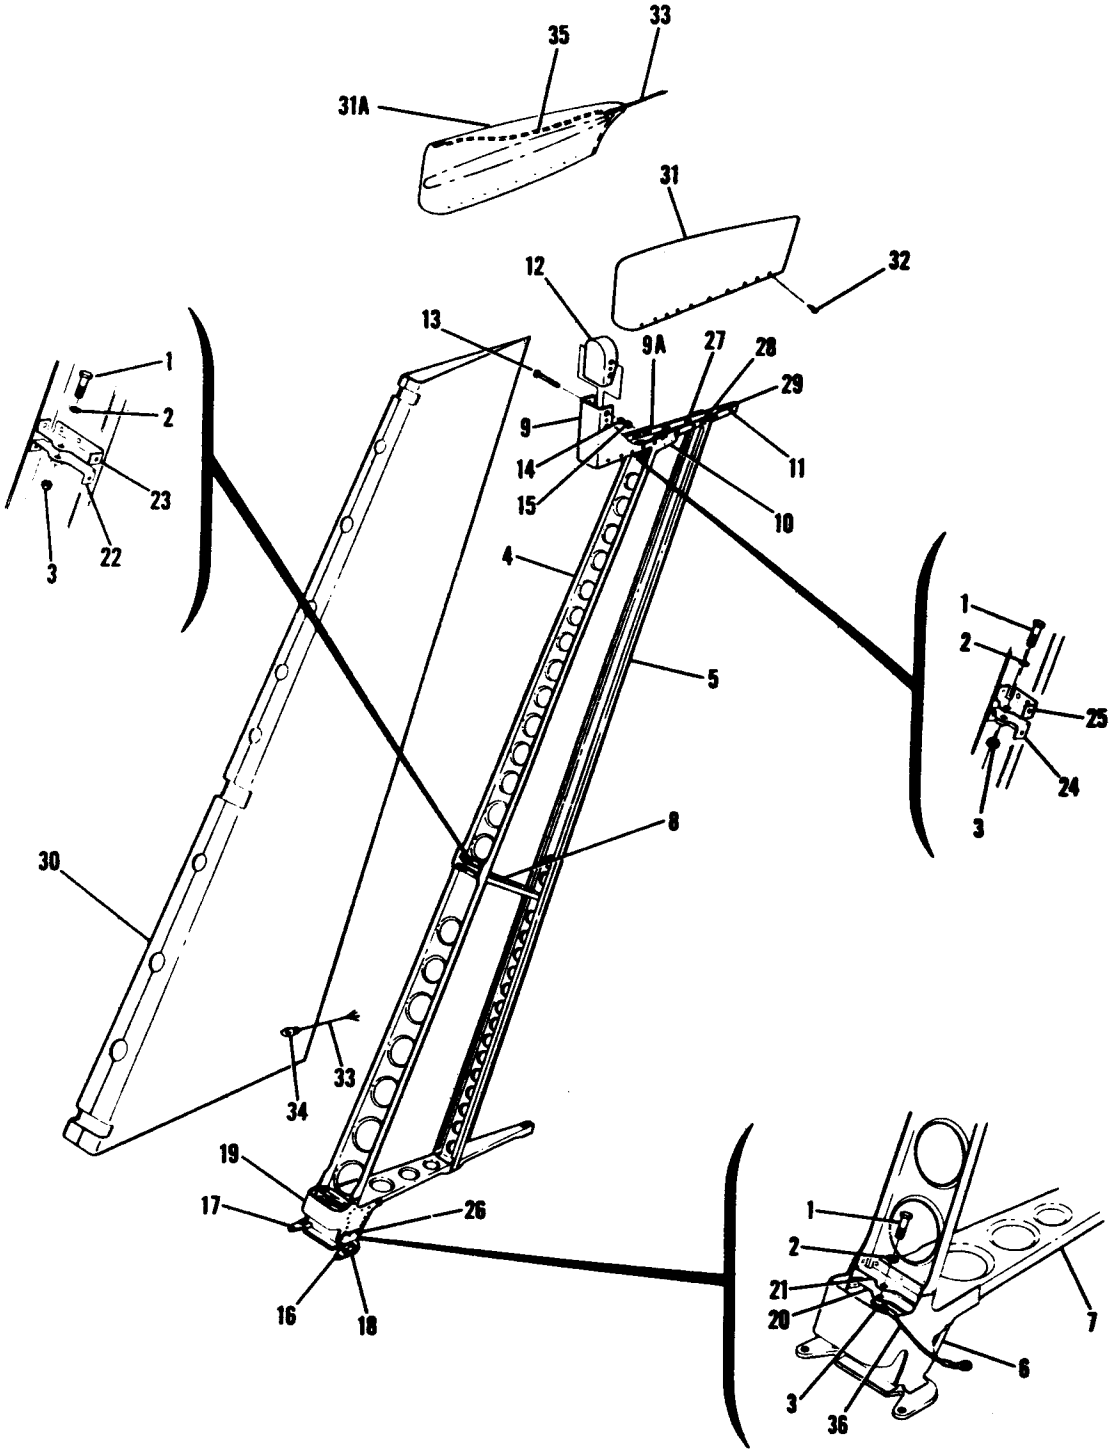


Figure 13. Rudder Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
13 -	1231001-5	RUDDER ASSEMBLY-SWEPT	1	A
	1231001-9	RUDDER ASSEMBLY-SWEPT	1	B
	1231001-11	RUDDER ASSEMBLY-SWEPT	1	E
		ATTACHING PARTS		
- 1	AN4-11A	BOLT	3	
- 2	AN960-416	WASHER	3	
- 3	NAS679A4	NUT	3	
		---*---		
- 4	1231015-1	SPAR-FORWARD	1	
- 5	1231015-2	SPAR-REAR	1	
- 6	1231015-3	SPAR-BELLCRANK	1	
- 7	1231016-1	RIB-LOWER	1	
- 8	1231017-1	RIB-CENTER	1	
- 9	1231033-1	RIB ASSEMBLY-RUDDER TIP	1	
	NAS697A08	NUTPLATE	2	
	NAS680A08	NUTPLATE	4	
- 9A	1231031-1	RIB TIP ASSY-FWD	1	
	NAS680A08K	NUTPLATE	8	
-10	1231029-1	BRACKET-AFT LH	1	
	1231029-2	BRACKET-AFT RH	1	
-11	1231032-1	RIB-TIP AFT	1	
-12	0733104-2	WEIGHT-RUDDER BALANCE	1	
		ATTACHING PARTS		
-13	AN509-10R31	SCREW	3	
-14	AN960-10	WASHER	3	
-15	MS21044N3	NUT	3	
		---*---		
-16	1231021-1	BELLCRANK ASSEMBLY-RUDDER WEU 1231021-9	1	B
	1231021-9	BELLCRANK ASSEMBLY-RUDDER	1	E
-17	1231021-2	CLIP-STOP RH	1	B
	1231021-8	SUPPORT-RH	1	E
	0733113-1	TEE CLIP	1	E
-18	1231021-3	CLIP-STOP LH	1	B
	1231021-7	SUPPORT-LH	1	E
	0733113-1	TEE CLIP	1	E
	0733103	BUSHING-BELLCRANK	2	B
	0733103-1	BUSHING-BELLCRANK	2	E
-19	1231022-1	GUSSET-BELLCRANK	1	
-20	1231023-16	BRACKET-LOWER RUDDER HINGE	1	
-21	1231023-19	BRACKET-LOWER RUDDER HINGE	1	
-22	1231023-17	BRACKET-CENTER RUDDER HINGE	1	
-23	1231023-20	BRACKET-CENTER RUDDER HINGE	1	
-24	1231023-18	BRACKET-UPPER RUDDER HINGE	1	
-25	1231023-21	BRACKET-UPPER RUDDER HINGE	1	
-26	1231026-1	CLIP-BELLCRANK LH	1	
	1231026-2	CLIP-BELLCRANK RH	1	
-27	NAS696A08K	NUTPLATE	4	
-28	NAS697A08K	NUTPLATE	2	
-29	NAS698A08K	NUTPLATE	1	
-30	1231001-3	SKIN-RUDDER	1	
-31	1231001-2	CAP-RUDDER TIP	1	A
-31A	0731606-6-791	CAP-RUDDER TIP	1	F
		ATTACHING PARTS		
-32	NAS220-6	SCREW	12	
	NAS220-8	SCREW	8	
		---*---		
-33	C592001-0101	STATIC DISCHARGER WEU C592001-0103	1	C
	C592001-0101	STATIC DISCHARGER	4	D
		ATTACHING PARTS		
	A06K75	RIVNUT GD	2	C
	NAS679A06	NUT ATTACH TO RUDDER CAP	2	D
	S1648-06K75	NUT ATTACH TO RUDDER ASSY	6	D
-34	AN515-6R6	SCREW	2	C
	AN515-6R6	SCREW ATTACH TO RUDDER CAP	2	D
	AN515-6R10	SCREW ATTACH TO RUDDER ASSY	6	D
	AN936A6	WASHER	2	C
	AN960A6	WASHER ATTACH TO RUDDER CAP	2	D
	AN936D6	WASHER ATTACH TO RUDDER ASSY	6	D
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
13 -35	1570102-8	STRAP ASSY	1	D
	AN960A3	WASHER	2	D
-36	1570102-8	STRAP ASSY	1	D
		A---182 SERIAL 18253599 THRU 18257625 A182 SERIAL A182-0001 THRU A182-0056 B---182 SERIAL 18257626 THRU 18261530 A182 SERIAL A182-0057 THRU A182-0146 C---182 SERIAL 18253599 THRU 18261425 A182 SERIAL A182-0001 THRU A182-0136 D---182 SERIAL 18261426 THRU 18262465 A182 SERIAL A182-0137 & ON E---182 SERIAL 18261531 THRU 18262465 A182 SERIAL A182-0147 & ON F---182 SERIAL 18257626 THRU 18262465 A182 SERIAL A182-0057 & ON		

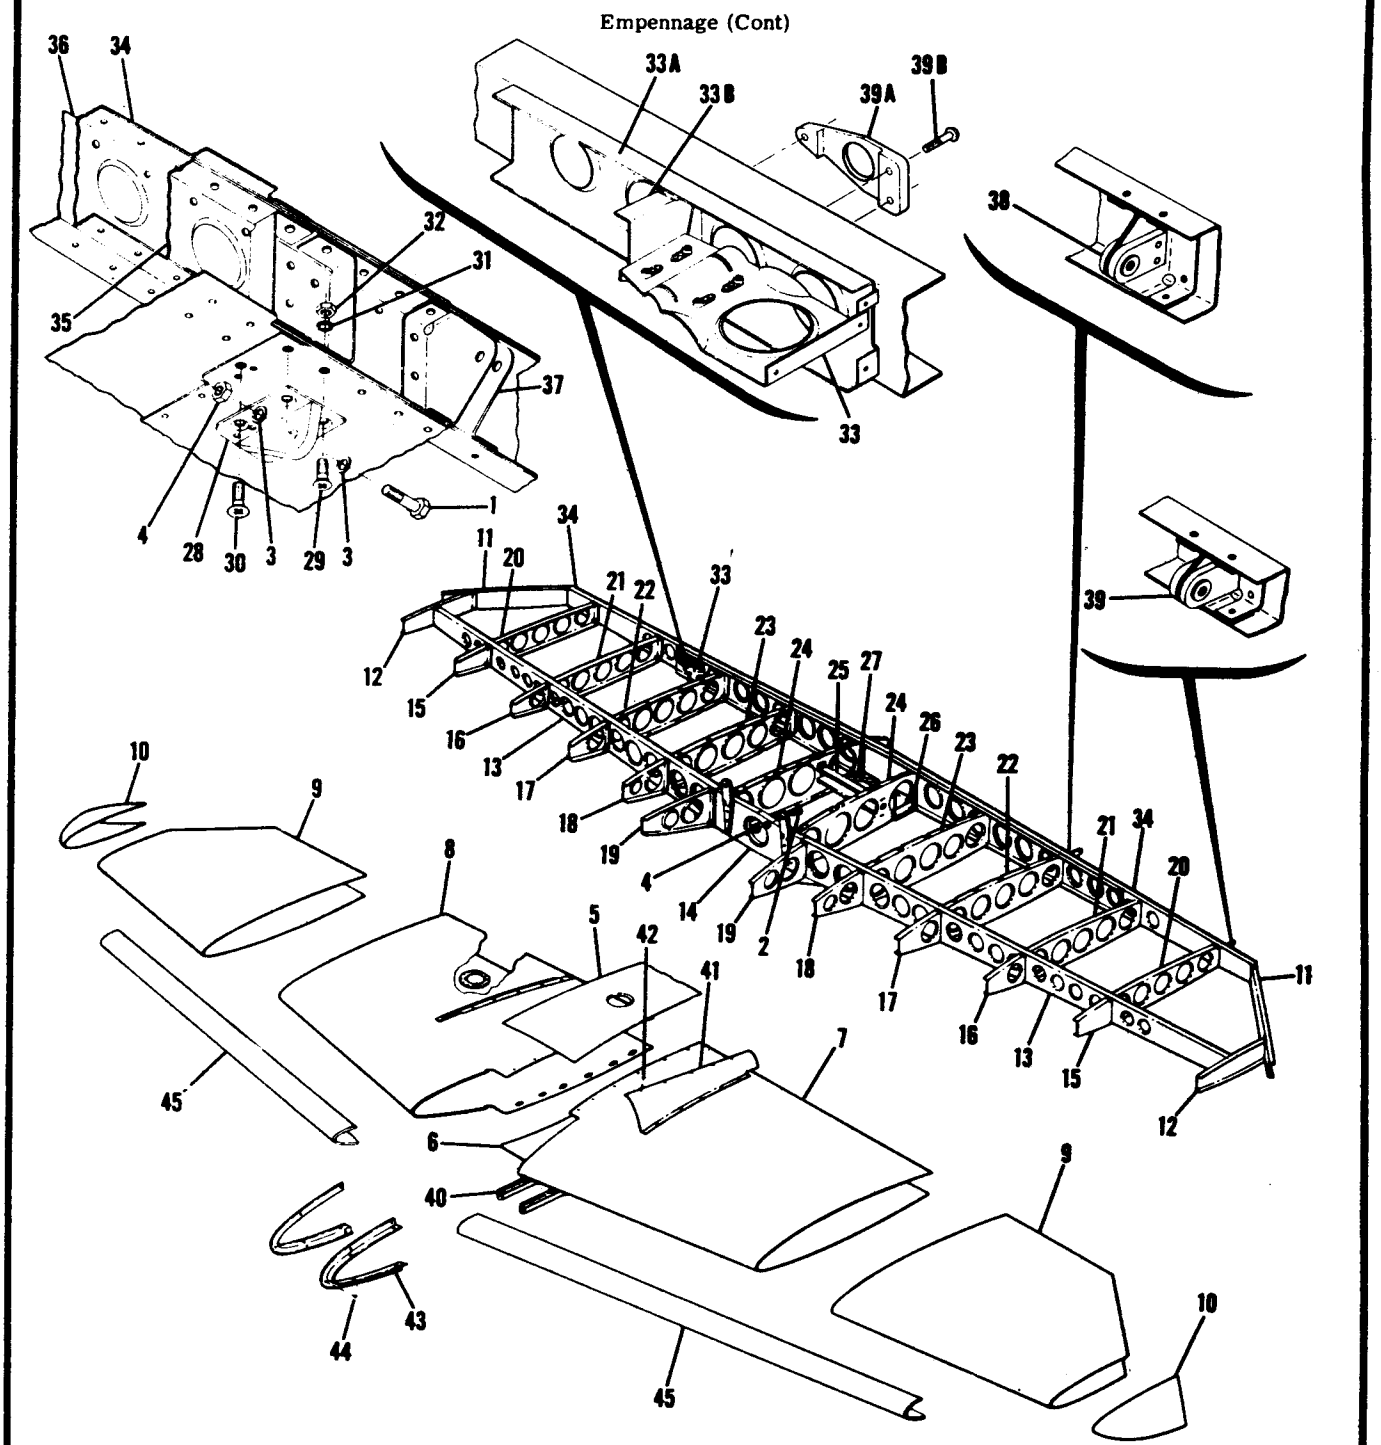


182 SERIAL 18253599 THRU 18255844

Figure 14. Stabilizer Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
14 -		STABILIZER INSTALLATION	NP	A
	0732600-1	STABILIZER ASSEMBLY	1	
		ATTACHING PARTS		
- 1	AN4-11A	BOLT	2	
- 2	AN4-12A	BOLT	2	
- 3	AN960-416	WASHER	4	
- 4	NAS679A4	NUT	2	
		---*---		
- 5	1232600-5	SKIN-UPPER CENTER	1	
- 6	0732600-3	SKIN-LOWER CENTER	1	
- 7	0732600-8	SKIN-INBOARD LH	1	
- 8	0732600-9	SKIN-INBOARD RH	1	
- 9	0732600-2	SKIN-OUTBOARD	2	
-10	0732613-1	TIP-STABILIZER	2	
-11	0732608-1	RIB-CANTED	2	
-12	0732609-1	RIB-STA 61.063	2	
	0732605-1	SPAR ASSEMBLY-FRONT	1	
-13	0732607-1	SPAR-STABILIZER FRONT	2	
-14	0732606-1	SPLICE ASSEMBLY-CENTER	1	
-15	0732611-1	RIB-NOSE STA 50.375	2	
-16	0732611-2	RIB-NOSE STA 38.875	2	
-17	0732611-3	RIB-NOSE STA 27.375	2	
-18	0732611-4	RIB-NOSE STA 16.00	2	
-19	0732611-6	RIB-CANTED NOSE	2	
-20	0732610-5	RIB-STABILIZER STA 50.375	2	
-21	0732610-4	RIB-STABILIZER STA 38.875	2	
-22	0732610-3	RIB-STABILIZER STA 27.375	2	
-23	0732610-2	RIB-STABILIZER STA 16.00	2	
-24	0732610-1	RIB-CANTED STABILIZER	2	
-25	1232140-1	BRACKET-TRIM TAB PULLEY	1	
-26	0732103-1	DOUBLER-STABILIZER LH	1	
	0732103-2	DOUBLER-STABILIZER RH	1	
-27	0732106-1	REINFORCEMENT-STABILIZER RH	1	
	0732106	REINFORCEMENT-STABILIZER LH	1	
-28	0732612-1	HINGE ASSEMBLY-LH	1	
	0732612-2	HINGE ASSEMBLY-RH	1	
		ATTACHING PARTS		
-29	AN509-416R13	SCREW	2	
-30	AN509-416R12	SCREW	1	
-31	AN960-416	WASHER	4	
-32	NAS679A4	NUT	3	
		---*---		
-33	1232139-3	BRACKET ASSEMBLY-TRIM TAB ACTUATOR	1	
-33A	0732618-1	DOUBLER-STABILIZER REAR SPAR	1	
-33B	0732617-1	BRACKET ASSEMBLY-TAB ACTUATOR MOUNTING	1	
	0732602-1	SPAR ASSEMBLY-STABILIZER REAR	1	
-34	0732602-2	SPAR-STABILIZER REAR	2	
-35	0732603-1	CHANNEL-REAR SPAR	1	
-36	0732604-1	CHANNEL-REAR SPAR	1	
-37	0732100-6	HINGE BRACKET-CENTER	2	
-38	0732100-7	HINGE ASSEMBLY-INBOARD	2	
-39	0732100-8	HINGE ASSEMBLY-OUTBOARD	2	
-39A	1234023-1	BRACE	1	
		ATTACHING PARTS		
-39B	NAS221-13	SCREW	3	
	AN960-10	WASHER	2	
	MS21044N3	NUT	2	
		---*---		
-40	S202R8	MOULDING-17.50 IN LG BULK ITEM REF S202R17.50B	2	
-41	0732615-1	FAIRING-STABILIZER LH	1	
	0732615-2	FAIRING-STABILIZER RH	1	
		ATTACHING PARTS		
-42	S1021Z8-8	SCREW	13	
	AN525-832R7	SCREW	2	
	NAS395-10-3	NUT	2	
		---*---		
-43	0732614-1	FAIRING-STABILIZER LEADING EDGE LH	1	
	0732614-2	FAIRING-STABILIZER LEADING EDGE RH	1	
		ATTACHING PARTS		
-44	S1021Z8-8	SCREW	3	
		---*---		
-45	0332136-6	BOOT-STABILIZER ABRASION	2	
		A---182 SERIAL 18253599 THRU 18255844		

Empennage (Cont)

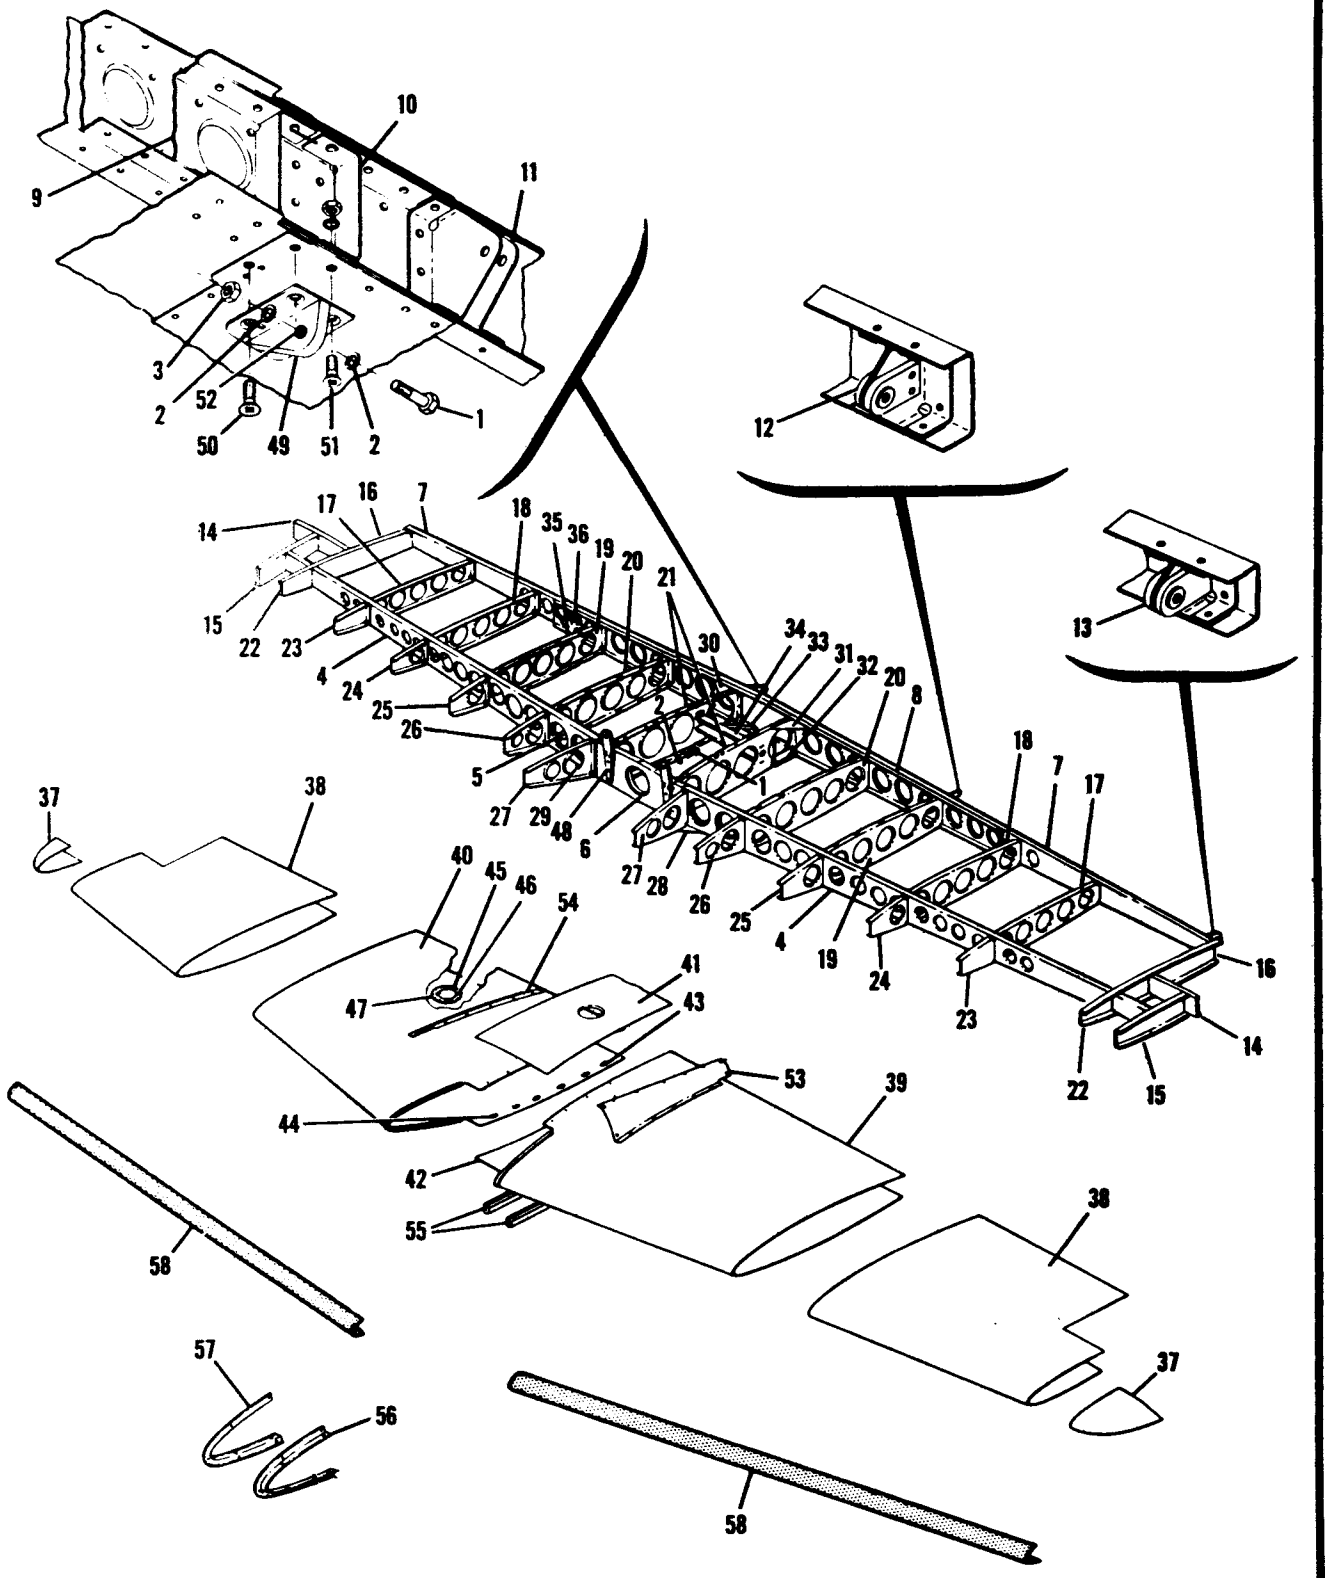

182 SERIAL 18255845 THRU 18262465

Figure 14A. Stabilizer Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
14A-		STABILIZER INSTALLATION	NP	A
	1232600-7	STABILIZER ASSEMBLY	1	
		ATTACHING PARTS		
- 1	AN4-11A	BOLT	4	
- 2	AN960-416	WASHER	6	
- 3	NAS679A4	NUT	2	
		---*---		
	1232610-2	SPAR ASSEMBLY-STABILIZER FRONT	1	
- 4	1232610-4	SPAR-FRONT	2	
- 5	1232605-1	SPLICE	1	
- 6	1232116	CHANNEL	1	
	1232610-1	SPAR ASSEMBLY-STABILIZER REAR	1	
- 7	1232610-3	SPAR-REAR	2	
- 8	1232114-1	CHANNEL	1	
- 9	0732603-2	CHANNEL	1	
-10	0732101-4	REINFORCEMENT	2	
-11	0732100-6	BRACKET-HINGE INBOARD	2	
-12	0732100-7	BRACKET ASSEMBLY-HINGE CENTER	2	
-13	1234626-1	BRACKET ASSEMBLY HINGE OUTBOARD	1	
-14	1232602-1	RIB-STABILIZER LATERAL	2	
-15	1232601-1	RIB-STABILIZER TIP STA. 66.193	2	
-16	1232603-1	RIB-STABILIZER STA. 61.063	2	
-17	0732610-5	RIB-STABILIZER STA. 50.375	2	
-18	0732610-6	RIB-STABILIZER STA. 38.875	2	
-19	1232104	RIB-STABILIZER STA. 27.375	2	
-20	1232105	RIB-STABILIZER STA. 16.000	2	
-21	1232106	RIB-STABILIZER CANTED	2	
-22	1232603-2	RIB-STABILIZER NOSE STA. 61.063	2	
-23	0732611-1	RIB-STABILIZER NOSE STA. 50.375	2	
-24	0732611-2	RIB-STABILIZER NOSE STA. 38.875	2	
-25	0732611-3	RIB-STABILIZER NOSE STA. 27.375	2	
-26	0732611-4	RIB-STABILIZER NOSE STA. 16.000	2	
-27	0732611-6	RIB-STABILIZER NOSE CANTED	2	
-28	1232118-1	DOUBLER-STABILIZER LOWER LH & UPPER RH FORWARD	2	
-29	1232118-2	DOUBLER-STABILIZER UPPER LH & LOWER RH FORWARD	2	
-30	1232606-1	DOUBLER-STABILIZER LOWER LH & UPPER RH AFT	2	
-31	1232606-2	DOUBLER-STABILIZER UPPER LH & LOWER RH AFT	2	
-32	0732106-1	REINFORCEMENT-STABILIZER LH AFT	1	
-33	0732106	REINFORCEMENT-STABILIZER RH AFT	1	
-34	1232140-1	BRACKET-TRIM TAB PULLEY	1	
-35	1232139-1	BRACKET ASSEMBLY-TRIM TAB ACTUATOR	1	
	NAS696A3	NUTPLATE	4	
	NAS697A3	NUTPLATE	1	
-36	1234023-1	BRACE-TRIM TAB ACTUATOR	1	
		ATTACHING PARTS		
	NAS221-13	SCREW	3	
	AN960-10	WASHER	2	
		---*---		
-37	1232604-1	TIP-STABILIZER	2	
-38	1232600-2	SKIN-STABILIZER OUTBOARD	2	
-39	1232600-3	SKIN-STABILIZER INBOARD LH	1	
-40	1232600-4	SKIN-STABILIZER INBOARD RH	1	
-41	1232600-19	SKIN ASSY-STABILIZER CENTER UPPER	1	
	NAS679A08	NUTPLATE	2	
-42	0732600-3	SKIN-STABILIZER CENTER LOWER	1	
-43	S1863-3A	NUT TIN	2	
-44	S1862-2A	NUT TIN	1	
-45	1232142-1	DOUBLER-INSPECTION HOLE	1	
-46	NAS395-14-3	NUT	4	
-47	1232141-1	PLATE-INSPECTION HOLE	1	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	4	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
14A-48	0732601-3	FITTING-STABILIZER ATTACH FORWARD	2	
-49	1232400-1	HINGE ASSEMBLY-STABILIZER ATTACH AFT LH	1	
	1232400-2	HINGE ASSEMBLY-STABILIZER ATTACH AFT RH	1	
		ATTACHING PARTS		
-50	AN509-416R12	SCREW	2	
-51	AN509-416R13	SCREW	4	
	AN960-416	WASHER	6	
	NAS679A4	NUT	6	
		---*---		
-52	1232143-1	BUSHING	1	
-53	0732615-1	FAIRING-STABILIZER UPPER LH	1	B
	0732615-5	FAIRING-STABILIZER UPPER LH	1	C
-54	0732615-2	FAIRING-STABILIZER UPPER RH	1	B
	0732615-6	FAIRING-STABILIZER UPPER RH	1	C
		ATTACHING PARTS		
	S1021Z8-8	SCREW	13	
	NAS395-10-3	NUT	2	
	AN525-832R7	SCREW	2	
		---*---		
-55	S202R1750B	CHANNEL	2	
-56	0732614-1	FAIRING-STABILIZER FORWARD LH	1	
-57	0732614-2	FAIRING-STABILIZER FORWARD RH	1	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	3	
		---*---		
-58	0332136-6	BOOT-ABRASION	2	

A---182 SERIAL 18255845 THRU 18262465
A182 SERIAL A182-0001 & ON
B---182 SERIAL 18255845 THRU 18261530
A182 SERIAL A182-0001 THRU A182-0146
C---182 SERIAL 18261531 THRU 18262465
A182 SERIAL A182-0147 & ON

Empennage (Cont)

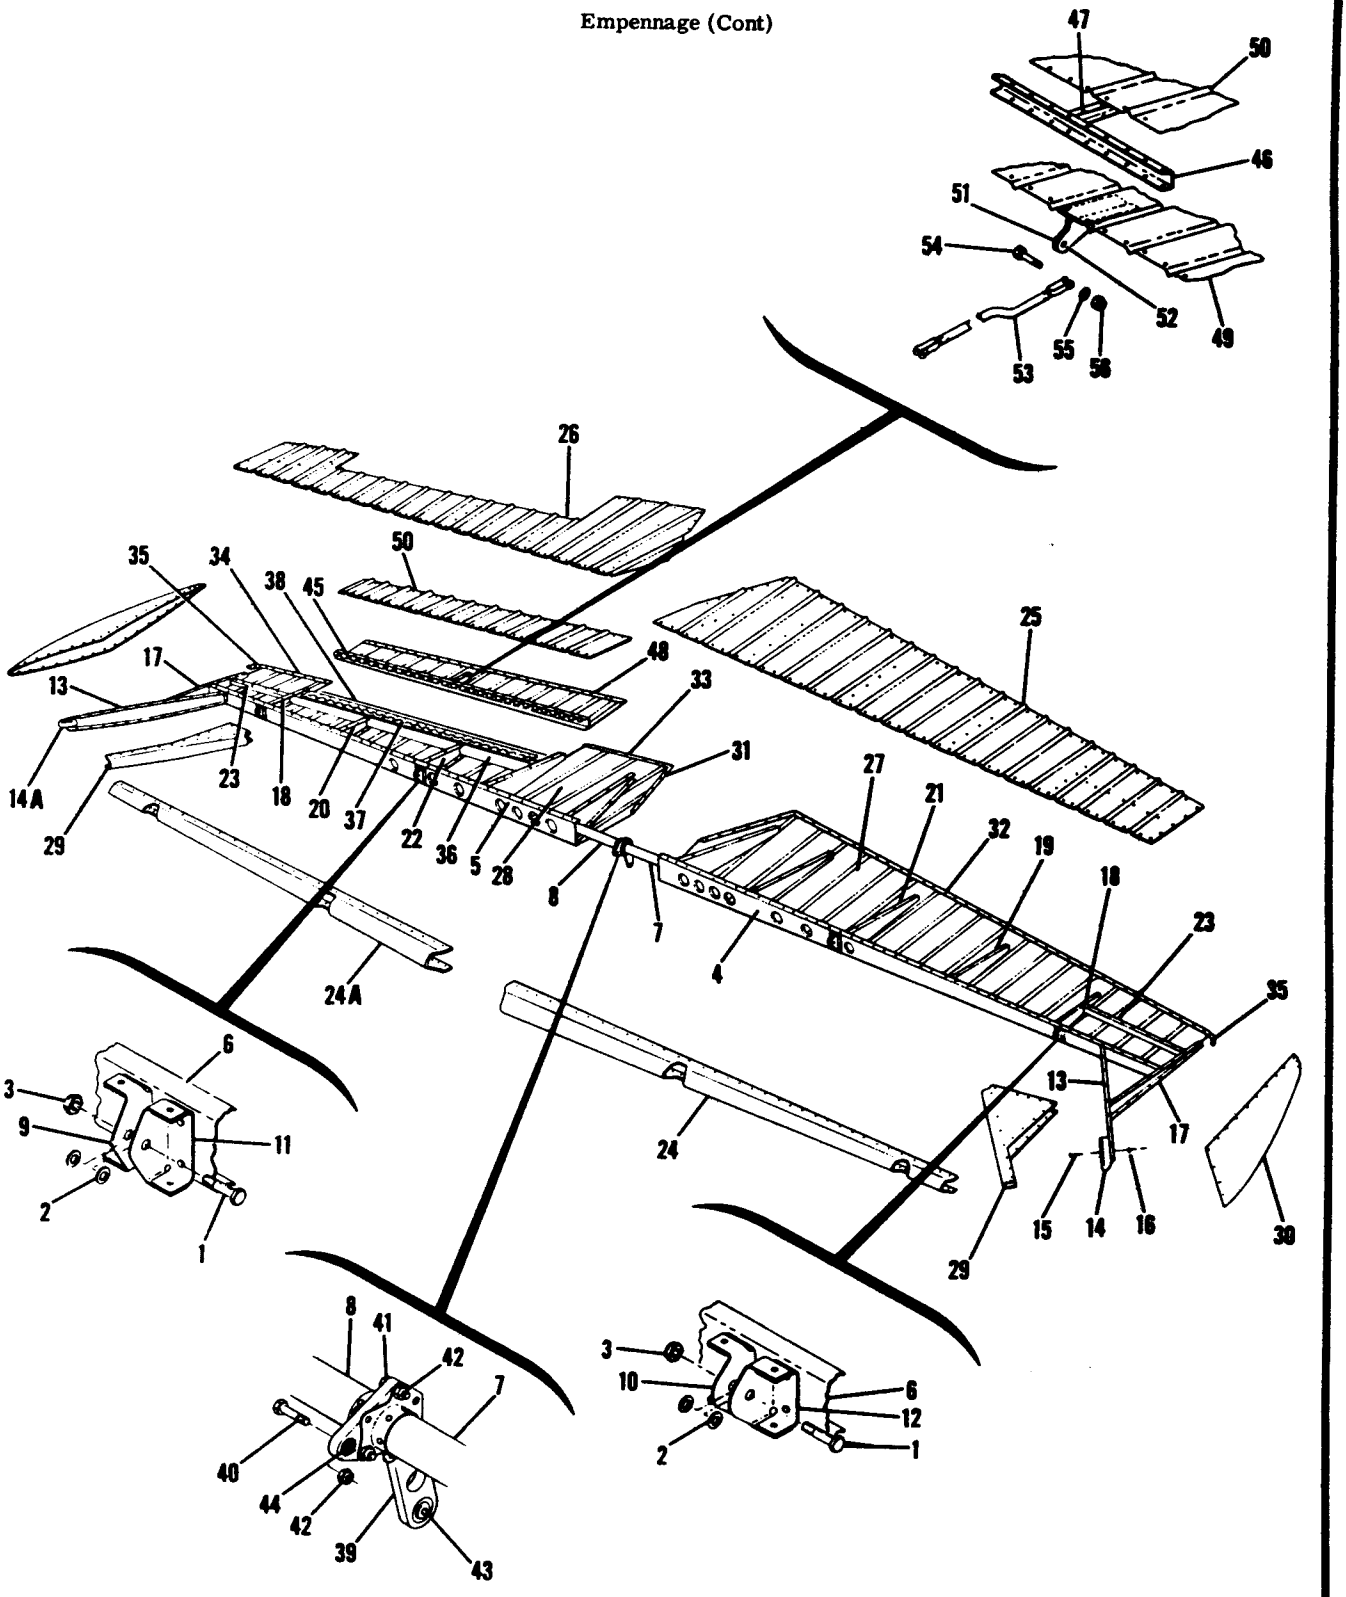

182 SERIAL 18253599 THRU 18255844

Figure 15. Elevator Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
15 -		ELEVATOR INSTALLATION	NP	F
	0734600-1	ELEVATOR ASSEMBLY-LH	1	A
	0734600-27	ELEVATOR ASSEMBLY-LH	1	G
	0734600-24	ELEVATOR ASSEMBLY-RH LESS TRIM TAB	1	A
	0734600-200	ELEVATOR ASSEMBLY-RH LESS TRIM TAB	1	D
	0734600-201	ELEVATOR ASSEMBLY-RH LESS TRIM TAB	1	E
		ATTACHING PARTS		
- 1	AN4-11A	BOLT	2	
- 2	AN960-416L	WASHER	4	
- 3	NAS679A4	NUT	2	
		---*---		
- 4	0734601-1	SPAR ASSEMBLY-ELEVATOR LH	1	
- 5	0734601-2	SPAR ASSEMBLY-ELEVATOR RH	1	
- 6	0734601-3	SPAR-ELEVATOR	1	
- 7	0734110-1	TUBE ASSEMBLY-TORQUE LH	1	
- 8	0734110-2	TUBE ASSEMBLY-TORQUE RH	1	
- 9	0732100-4	HINGE-ELEVATOR INBOARD	1	
-10	0732100-11	HINGE-ELEVATOR OUTBOARD	1	
-11	0732100-10	HINGE-ELEVATOR INBOARD	1	
-12	0732100-3	HINGE-ELEVATOR OUTBOARD	1	
-13	0734604-1	RIB-ELEVATOR CANTED OUTBOARD	1	C
	0734604-2	RIB-ELEVATOR CANTED OUTBOARD RH	1	E
	0734604-3	RIB-ELEVATOR CANTED OUTBOARD LH	1	E
-14	0733101-3	WEIGHT-ELEVATOR BALANCE LH	1	A
	0734610-2	WEIGHT-ELEVATOR BALANCE LH	1	B
-14A	0733101-2	WEIGHT-ELEVATOR BALANCE RH	1	A
	0734610-3	WEIGHT-ELEVATOR BALANCE RH	1	B
		ATTACHING PARTS		
-15	AN509-10R29	SCREW	1	
-16	NAS686A3	NUTPLATE	1	
		---*---		
-17	0734602-1	RIB-ELEVATOR TIP	1	C
	0734602-7	RIB-ELEVATOR TIP LH	1	E
	0734602-8	RIB-ELEVATOR TIP RH	1	E
-18	0734602-4	RIB-ELEVATOR	1	
-19	0734602-3	RIB-ELEVATOR LH	1	
-20	0734602-6	RIB-ELEVATOR RH	1	
-21	0734602-2	RIB-ELEVATOR LH	1	
-22	0734602-5	RIB-ELEVATOR RH	1	
-23	0734605-1	STIFFENER	1	
-24	0734600-5	SKIN-ELEVATOR NOSE LH	1	
-24A	0734600-20	SKIN-ELEVATOR NOSE RH	1	
-25	0734600-4	SKIN-ELEVATOR UPPER LH	1	
-26	0734600-15	SKIN-ELEVATOR UPPER RH	1	
-27	0734600-9	SKIN-ELEVATOR LOWER LH	1	
-28	0734600-14	SKIN-ELEVATOR LOWER RH	1	
-29	0734600-7	SKIN-ELEVATOR HORN	1	C
	0734600-28	SKIN-ELEVATOR HORN RH	1	E
	0734600-29	SKIN-ELEVATOR HORN LH	1	E
-30	0734608-1	TIP-ELEVATOR	1	A
	0734609-1	TIP-ELEVATOR	1	C
	0734609-9	TIP-ELEVATOR LH	1	E
	0734609-10	TIP-ELEVATOR RH	1	E
-31	0734600-8	SPACER	1	
-32	0734600-3	SPACER-LH	1	
-33	0734600-17	SPACER-RH	1	
-34	0734600-18	SPACER-RH	1	
-35	0734606-1	SPACER	1	
-36	0734607-1	CHANNEL-ELEVATOR RH	1	
-37	0734600-10	HINGE-HALF-TRIM TAB RH ONLY	2	
-38	MS20253-2-29.46	PIN-HINGE HALF RH	1	
-39	0760676-1	ARM ASSEMBLY-ELEVATOR	1	
		ATTACHING PARTS		
-40	AN4-11A	BOLT	1	
-41	AN4-7A	BOLT	3	
-42	NAS679A4	NUT	4	
		---*---		
-43	MS20200KP4	BEARING	1	
-44	MS24462-4	BEARING TOR	1	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
15 -45	0734600-25	TRIM TAB ASSEMBLY-ELEVATOR	1	
-46	0734607-2	SPAR-TRIM TAB	1	
-47	0532001-42	RIB-TRIM TAB	1	
-48	0734600-11	SPACER	1	
-49	0734600-12	SKIN-TRIM TAB LOWER	1	
-50	0734600-13	SKIN-TRIM TAB UPPER	1	
-51	0734603-1	HORN ASSEMBLY-TRIM TAB	1	
-52	PN-3A	BEARING-HORN ASSEMBLY TOR	1	
-53	0760658-1	CHANNEL-TAB ACTUATOR PUSH-PULL	1	
		ATTACHING PARTS		
-54	NAS464P3-7	BOLT	2	
-55	AN960-10	WASHER	2	
-56	AN320C3	NUT	2	
	MS24665-134	COTTER PIN	2	
		---*---		
		A---182 SERIAL 18253599 THRU 18253858		
		B---182 SERIAL 18253859 THRU 18255844		
		C---182 SERIAL 18253599 THRU 18254423		
		D---182 SERIAL 18253859 THRU 18254423		
		E---182 SERIAL 18254424 THRU 18255844		
		F---182 SERIAL 18253599 THRU 18255844		
		G---182 SERIAL 18253859 THRU 18255844		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
15A-		ELEVATOR INSTALLATION	NP	A
	1234600-1	ELEVATOR ASSEMBLY-LH	1	
	1234600-2	ELEVATOR ASSEMBLY-RH	1	
		ATTACHING PARTS		
- 1	AN4-11A	BOLT	2	
- 2	AN960-416	WASHER	2	
- 3	NAS679A4	NUT	2	
		---*---		
	1234602-1	SPAR ASSEMBLY-ELEVATOR LH	1	
	1234602-2	SPAR ASSEMBLY-ELEVATOR RH	1	
- 4	1234602-3	CHANNEL-LH	1	
- 5	1234602-4	CHANNEL-RH	1	
	0734110-1	TORQUE TUBE ASSEMBLY-LH	1	
	0734110-2	TORQUE TUBE ASSEMBLY-RH	1	
- 6	0734102-2	PLATE-TORQUE TUBE END	1	
- 7	0734110-5	RIB-INBOARD LH	1	
- 8	0734110-6	RIB-INBOARD RH	1	
- 9	0734110-3	ADAPTER-RIB INBOARD LH	1	
-10	0734110-4	ADAPTER-RIB INBOARD RH	1	
-11	0734102-7	RIB-OUTBOARD	1	
-12	0734102-8	ADAPTER-RIB OUTBOARD	1	
-13	0734110-7	TUBE-TORQUE	1	
-14	0734602-2	RIB-ELEVATOR LH STA. 27.563	1	
-15	0734602-5	RIB-ELEVATOR RH STA. 27.563	1	
-16	0734602-3	RIB-ELEVATOR LH STA. 39.171	1	
-17	0734602-6	RIB-ELEVATOR RH STA. 39.171	1	
-18	0734602-4	RIB-ELEVATOR LH STA. 50.090	1	
-19	1234612-1	RIB-ELEVATOR RH STA. 50.090	1	
-20	1234604-1	RIB-ELEVATOR LH STA. 61.063	1	
-21		DELETED		
-22	1234603-1	RIB-ELEVATOR LH STA. 61.983	1	
-23	1234603-2	RIB-ELEVATOR RH STA. 61.983	1	
-24	1234601-1	RIB-ELEVATOR LH STA. 66.193	1	
-25	1234601-2	RIB-ELEVATOR RH STA. 66.193	1	

CONTINUED ON NEXT PAGE

Empennage (Cont)

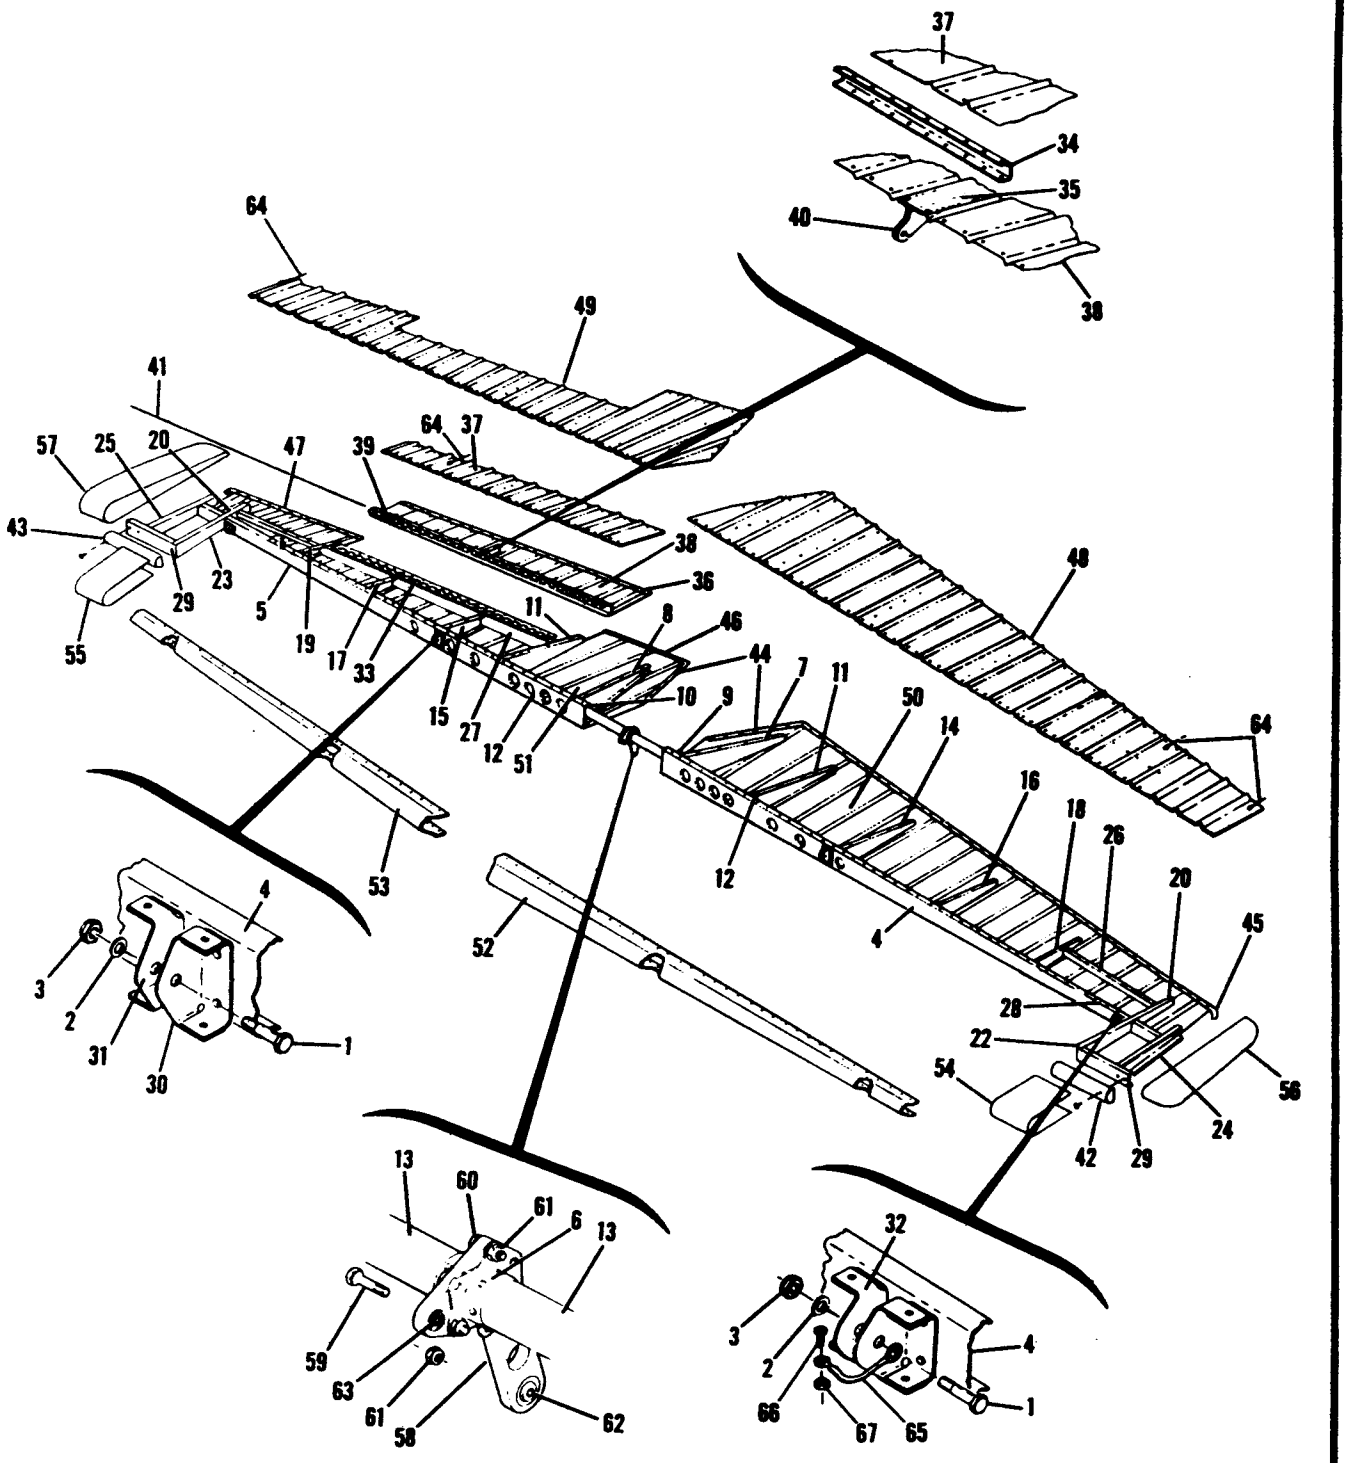


182 SERIAL 18255845 THRU 18262465

Figure 15A. Elevator Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
15A-26	0734605-1	STIFFENER	2	
-27	1234614-1	CHANNEL-ELEVATOR TRIM TAB RH	1	
-28	1234607-1	CHANNEL-ELEVATOR SPAR REINFORCEMENT	1	
-29	1234606-1	CHANNEL ASSEMBLY-ELEVATOR WEIGHT SUPPORT	1	
	NAS680A3	NUT PLATE	2	
-30	0732100-4	BRACKET-ELEVATOR HINGE INBOARD STA. 26.625	1	
-31	0732100-10	BRACKET-ELEVATOR HINGE OUTBOARD STA. 26.625	1	
-32	1234630-1	BRACKET ASSEMBLY-ELEVATOR HINGE STA. 60.810	1	
-33	1234600-12	HINGE HALF-ELEVATOR TRIM TAB RH ONLY	1	
	1234613-1	TRIM TAB ASSEMBLY-ELEVATOR RH ONLY	1	
-34	1234610-1	SPAR-TRIM TAB	1	
-35	1234611-1	SPACER-TRIM TAB	1	
-36	1234613-4	SPACER-TRIM TAB	1	
-37	1234613-2	SKIN-TRIM TAB UPPER	1	
-38	1234613-3	SKIN-TRIM TAB LOWER	1	
-39	1234613-5	HINGE HALF-TRIM TAB	1	
-40	0734603-1	HORN ASSEMBLY-TRIM TAB	1	
-41	MS20253-2-4046	PIN-TRIM TAB HINGE RH ONLY	1	
-42	1234605-5	BALANCE WEIGHT-ELEVATOR LH	1	
-43	1234605-6	BALANCE WEIGHT-ELEVATOR RH	1	
		ATTACHING PARTS		
	AN3-10A	BOLT	1	
	AN509-10R23	SCREW	1	
	AN960-10L	WASHER	1	
		---*---		
-44	0734600-8	SPACER-ELEVATOR INBOARD	1	
-45	1234600-13	SPACER-ELEVATOR TRAILING EDGE LH	1	
-46	0734600-17	SPACER-ELEVATOR TRAILING EDGE INBOARD RH	1	
-47	1234600-14	SPACER-ELEVATOR TRAILING EDGE OUTBOARD RH	1	
-48	1234600-5	SKIN-ELEVATOR UPPER LH	1	
-49	1234600-6	SKIN-ELEVATOR UPPER RH	1	
-50	1234600-7	SKIN-ELEVATOR LOWER LH	1	
-51	1234600-8	SKIN-ELEVATOR LOWER RH	1	
-52	1234600-15	SKIN-ELEVATOR NOSE LH	1	
-53	1234600-16	SKIN-ELEVATOR NOSE RH	1	
-54	1234600-3	SKIN-ELEVATOR BALANCE TAB LH	1	
-55	1234600-4	SKIN-ELEVATOR BALANCE TAB RH	1	
-56	1234608-3	TIP-ELEVATOR LH	1	
-57	1234608-4	TIP-ELEVATOR RH	1	
-58	0760676-1	ARM ASSEMBLY-ELEVATOR	1	
		ATTACHING PARTS		
-59	AN4-11A	BOLT	1	
-60	AN4-7A	BOLT	3	
-61	NAS679A4	NUT	4	
		---*---		
-62	MS20200KP4	BEARING-LOWER	1	
-63	MS24462-4	BEARING-UPPER	1	
-64	C592001-0103	STATIC DISCHARGER	4	B
-65	1570102-1	STRAP ASSEMBLY	2	B
		ATTACHING PARTS		
-66	AN515-8R6	SCREW	2	B
-67	NAS679A08	NUT	2	B
		---*---		
		A---182 SERIAL 18255845 THRU 18262465 A182 SERIAL A182-0001 & ON B---182 SERIAL 18261426 THRU 18262465		

Fuselage

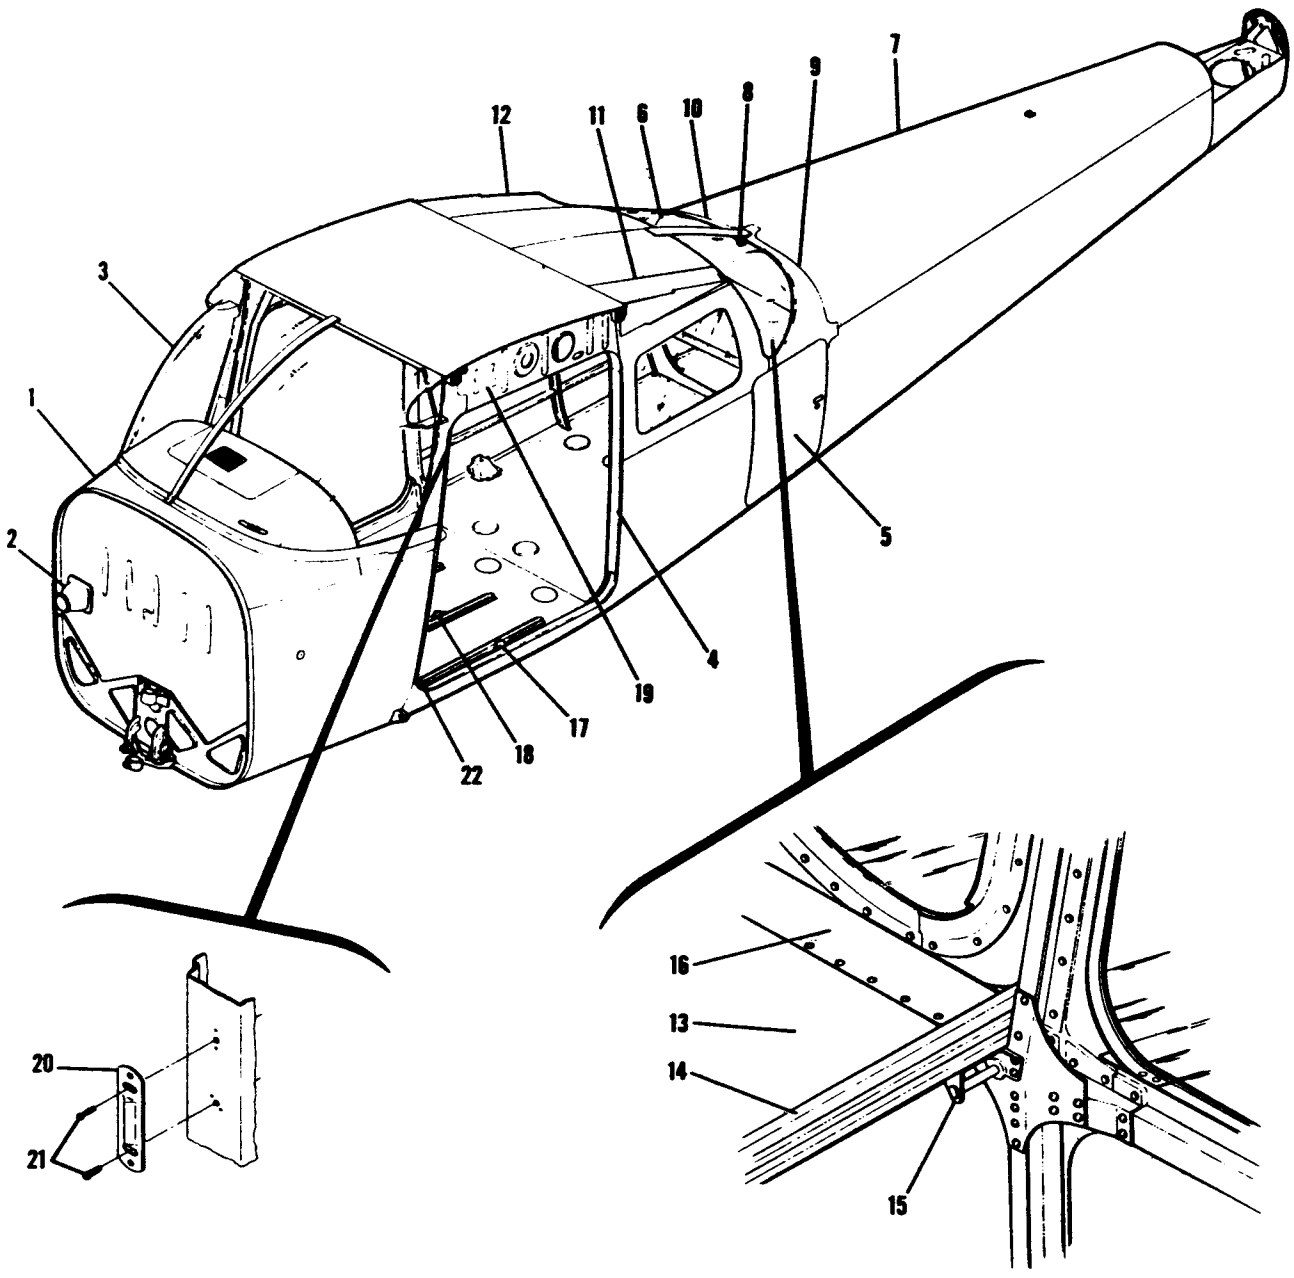


SERIAL 18253599 THRU 18254423

Figure 16. Fuselage Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
16 -		FUSELAGE ASSEMBLY	NP	K
- 1	SEE FIG 17	FRONT SECTION STRUCTURE ASSEMBLY-FUSELAGE	1	H
	SEE FIG 17A	FRONT SECTION STRUCTURE ASSEMBLY	1	J
- 2	SEE FIG 70	VALVE ASSEMBLY-WARM AIR	1	F
- 3	SEE FIG 27	WINDSHIELD INSTALLATION	1	G
	SEE FIG 27A	WINDSHIELD INSTALLATION	1	B
- 4	SEE FIG 23	CABIN CENTER SECTION SPARES ASSEMBLY	1	C
	SEE FIG 23A	CABIN CENTER SECTION SPARES ASSEMBLY	1	
- 5	SEE FIG 44	BAGGAGE DOOR INSTALLATION	1	B
- 6	SEE FIG 28	WINDOW INSTALLATION-REAR	1	C
	SEE FIG 28A	WINDOW INSTALLATION-REAR	1	B
- 7	SEE FIG 29	TAILCONE ASSEMBLY-FUSELAGE	1	C
	SEE FIG 29A	TAILCONE ASSEMBLY-FUSELAGE		
		ATTACHING PARTS	1	B
- 8	AN3-3A	BOLT	2	B
	AN5-3A	BOLT	3	B
	MS21044N3	NUT	6	B
	AN960-10L	WASHER		
		---•---	1	B
- 9	0711600-7	SKIN-UPPER AFT LH	1	C
	0711800-7	SKIN-UPPER AFT LH	1	B
-10	0711600-6	SKIN-UPPER AFT RH	1	C
	0711800-8	SKIN-UPPER AFT RH	1	B
-11	0711616-1	FILLET ASSEMBLY-WING TO FUSELAGE LH	1	C
	0711685-1	FILLET ASSEMBLY-WING TO FUSELAGE LH	1	B
-12	0711616-2	FILLET ASSEMBLY-WING TO FUSELAGE RH	1	C
	0711685-2	FILLET ASSEMBLY-WING TO FUSELAGE RH	1	A
-13	0711621-1	SHELF ASSEMBLY-BAGGAGE	1	A
-14	0711621-3	SHELF EDGE	1	A
-15	0711640-1	CATCH ASSEMBLY-REAR SEAT LH	1	A
	0711640-2	CATCH ASSEMBLY-REAR SEAT RH	1	A
-16	0711623-1	COVER STRIP-SHELF	2	
-17	0510205-6	FITTING-SEAT BELT INBD RH & OUTBD LH	2	
-18	0510205-5	FITTING-SEAT BELT INBD LH & OUTBD RH		
		ATTACHING PARTS	2	
	AN3-4A	BOLT	2	
	MS21044N3	NUT		
		---•---	1	
	0713047	PLATE-FINISH & TRIM	2	D
-19	0710636-1	PLATE ASSEMBLY	2	E
	0710636-2	PLATE ASSEMBLY	2	
-20	0710638-1	WEDGE-CABIN DOOR		
		ATTACHING PARTS	2	
-21	AN515-6R6	SCREW		
		---•---		

A---182 SERIAL 18253599 THRU 18254423
B---182 SERIAL 18253599 THRU 18255058
C---182 SERIAL 18255059 THRU 18262465
A182 SERIAL A182-0001 & ON
D---182 SERIAL 18253599 THRU 18255599
E---182 SERIAL 18255600 THRU 18256699
F---182 SERIAL 18253599 THRU 18255844
G---182 SERIAL 18255845 THRU 18262465
A182 SERIAL A182-0001 & ON
H---182 SERIAL 18253599 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
J---182 SERIAL 18260056 THRU 18262465
A182 SERIAL A182-0117 & ON
K---182 SERIAL 18253599 THRU 18262465
A182 SERIAL A182-0001 & ON

Fuselage (Cont)

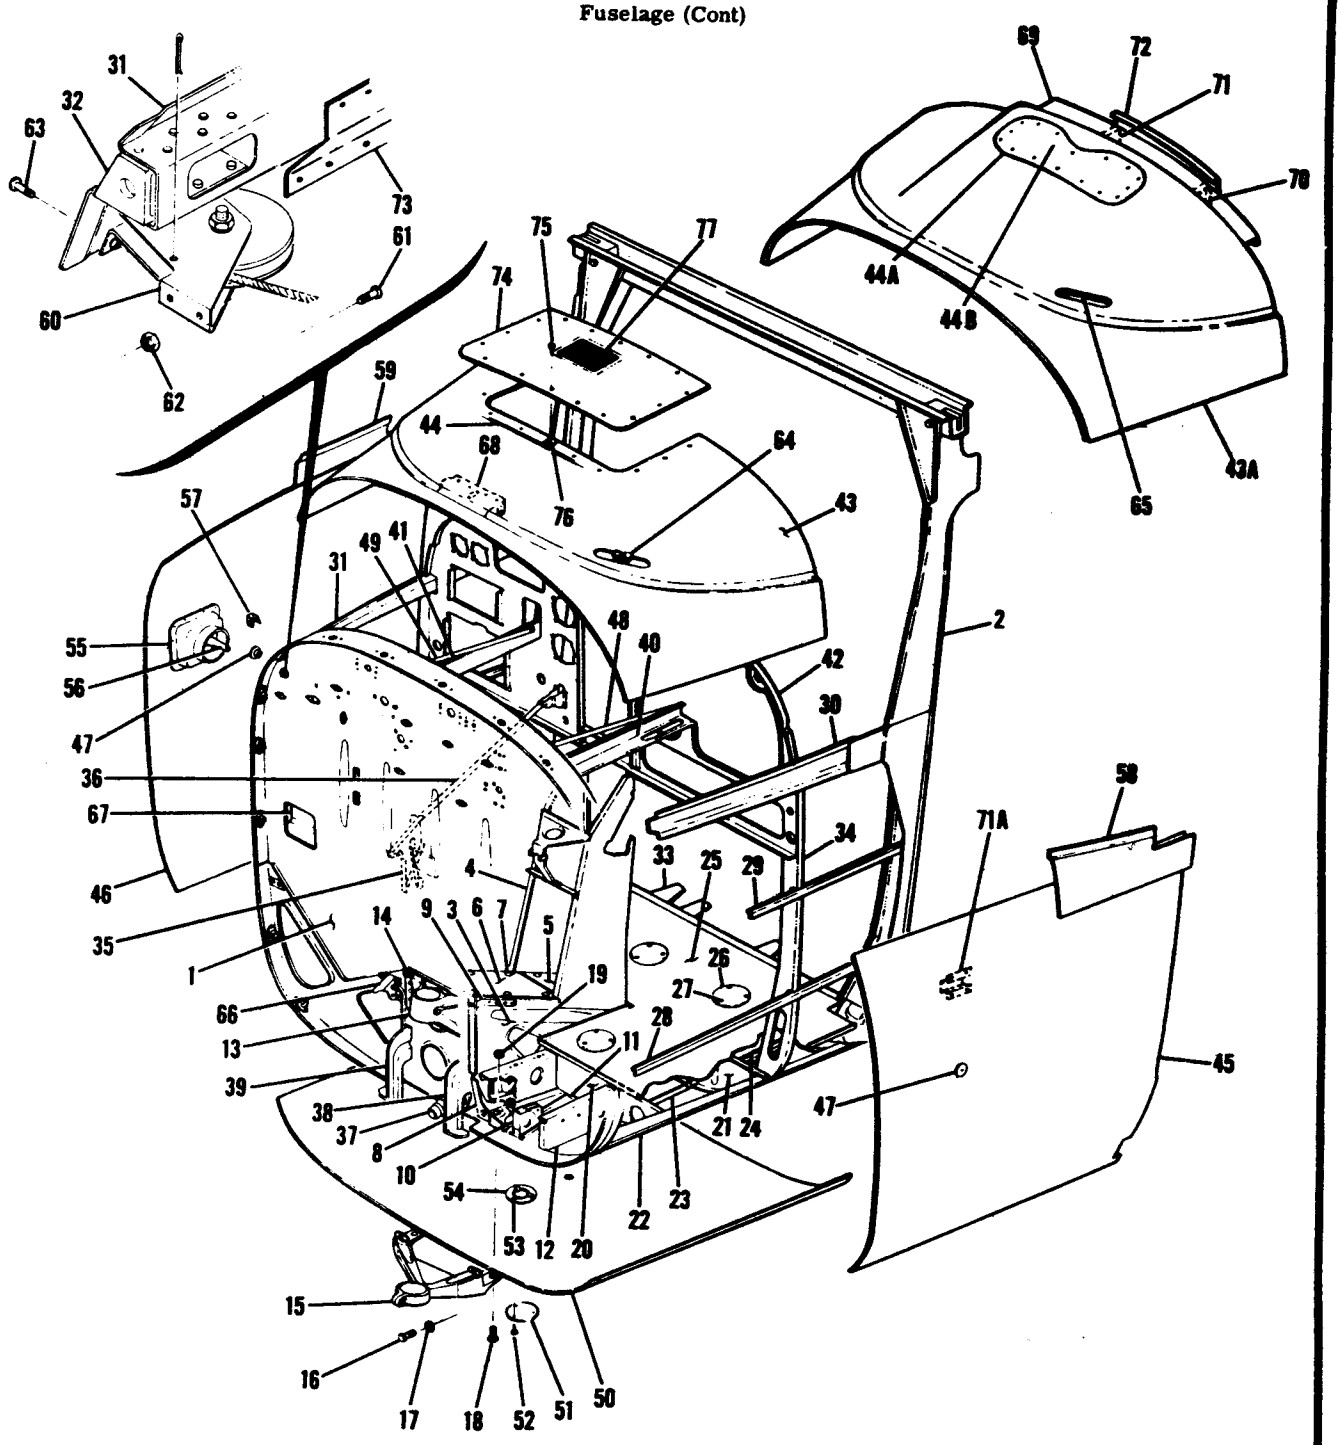

182 SERIAL 18253599 THRU 18260055

Figure 17. Fuselage Front Section Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
17 -	0791360-1		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	E
	0791360-2		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	J
	0791360-3		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	L
	0791360-4	X	STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	V
	0791360-5		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	X
	0791360-6		STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	Y
- 1	SEE FIG 21		FIREWALL ASSEMBLY	1	R
	SEE FIG 21A		FIREWALL ASSEMBLY	1	S
- 2	SEE FIG 18		BULKHEAD ASSEMBLY-FRONT DOOR POST	1	
- 3	SEE FIG 20		TUNNEL COMPONENTS-FRONT SECTION	1	
- 4	SEE FIG 19		STRUCTURE ASSEMBLY-CONSOLE	1	
- 5	0713676-2		COVER PLATE-TUNNEL AFT	1	
- 6	0713676-1		COVER PLATE-TUNNEL FORWARD	10	
- 7	S1021Z8-8		SCREW	10	
	NAS395-13-3		NUT	1	
- 8	0713632-5		FITTING-FIREWALL TO TUNNEL LH	1	
	0713632-6		FITTING-FIREWALL TO TUNNEL RH	1	
- 9	0713638-1		FITTING-UPPER NOSE GEAR REINFORCEMENT LH	1	
	0713638-2		FITTING-UPPER NOSE GEAR REINFORCEMENT RH	1	
-10	0713663-1		PULLEY BRACKET-ELEVATOR LH	1	
	0713663-2		PULLEY BRACKET-ELEVATOR RH		
			ATTACHING PARTS		
	NAS220-6		SCREW	1	
	NAS679A08		NUT	1	
	AN507-832R6		SCREW	2	
	NAS680A3		NUT	2	
			---*---		
-11	0713682-1		CHANNEL-REINFORCEMENT LH	1	
	0713682-2		CHANNEL-REINFORCEMENT RH	1	
-12	0713603-1		BULKHEAD ASSEMBLY-LH	1	
	0713603-2		BULKHEAD ASSEMBLY-RH	1	
-13	0543013-1		FITTING-NOSE GEAR UPPER		
			ATTACHING PARTS		
-14	NAS144-16		BOLT	2	
	NAS679A4		NUT	2	
			---*---		
-15	0743606-1		FITTING-NOSE GEAR LOWER	1	M
	0743606-2		FITTING-NOSE GEAR LOWER	1	O
			ATTACHING PARTS		
-16	AN175-6A		BOLT	2	
-17	AN960-516		WASHER	2	
-18	AN175-7A		BOLT	2	
-19	NAS679A5		NUT	4	
			---*---		
-20	0713614-1		BULKHEAD-STA 8.125 LH	1	
	0713614-2		BULKHEAD-STA 8.125 RH	1	
-21	0713617-1		BULKHEAD-STA 17.00	1	
-22	0713615-1		STRINGER ASSEMBLY-ENGINE MOUNT LOWER LH	1	
	1213008-5		BRACKET	1	
	0713615-2		STRINGER ASSEMBLY-ENGINE MOUNT LOWER RH	1	
	1213008-5		BRACKET	1	
-23	0713685-1		STIFFENER-LH	1	
	0713685-2		STIFFENER-RH	1	
-24	0713619-1		STRINGER-BELLY LH	1	
	0713619-2		STRINGER-BELLY RH	1	
-25	0713668-1		FLOORBOARD ASSEMBLY	6	
	NAS395-14-3		NUT	5	
-26	S225-1		COVER		
			ATTACHING PARTS		
-27	49330		STUD UC	3	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
17 -28	0713670-1	STRINGER-LOWER LH	1	
	0713670-2	STRINGER-LOWER RH WHEN EXHAUSTED USE 0762007-1	1	R
	0762007-1	STRINGER ASSEMBLY-LOWER RH WHEN EXHAUSTED USE 0762007-2	1	S
	0762007-2	STRINGER-LOWER RH	1	S
	NAS680C08M	NUTPLATE	1	
-29	0713639-1	STRINGER-UPPER LH	1	
	0713639-2	STRINGER-UPPER RH	1	
-30	0713616-1	STRINGER ASSEMBLY-ENGINE MOUNT UPPER LH WHEN EXHAUSTED USE 0713263-1	1	R
	0713263-1	STRINGER ASSEMBLY-ENGINE MOUNT UPPER LH	1	S
	0713263-5	BRACKET	1	
-31	0713616-2	STRINGER ASSEMBLY-ENGINE MOUNT UPPER RH WHEN EXHAUSTED USE 0713263-2	1	R
	0713263-2	STRINGER ASSEMBLY-ENGINE MOUNT UPPER RH	1	S
-32	0713263-6	BRACKET	1	
-33	0713684-1	DOUBLER-BELLY	1	
-34	0713618-1	CHANNEL-STA 17.00 LH	1	
	0713787-1	BULKHEAD-STA 17.00 LH	1	E
	0713787-4	BULKHEAD-STA 17.00 LH	1	V
	0713618-2	CHANNEL-STA 17.00 RH	1	S
	0713787-2	BULKHEAD-STA 17.00 RH	1	E
	0713787-3	BULKHEAD-STA 17.00 RH	1	N
-35	0762003-1	BRACKET ASSEMBLY-FLAP CONTROL	1	D
-36	0713293-1	STIFFENER-FLAP CONTROL	1	S
-37	0713666-1	BOOT ASSEMBLY-STEERING	1	W
-38	0713665-1	BRACKET ASSEMBLY-COWL ATTACHMENT LH	1	
-39	0713665-2	BRACKET ASSEMBLY-COWL ATTACHMENT RH	1	
	4002-244-16	RECEPTACLE CLC	1	
-40	0713667-1	SUPPORT ASSEMBLY-CONTROL WHEEL LH	1	
	0760691-1	SUPPORT ASSEMBLY-CONTROL WHEEL LH	1	R
-41	0713667-2	SUPPORT ASSEMBLY-CONTROL WHEEL RH	1	S
	0713790-1	SUPPORT ASSEMBLY-CONTROL WHEEL RH	1	E
	0713790-4	SUPPORT ASSEMBLY-CONTROL WHEEL RH	1	N
	0760691-2	SUPPORT ASSEMBLY-CONTROL WHEEL RH	1	V
		ATTACHING PARTS	1	S
	NAS220-6	SCREW LH ONLY	2	
	NAS679A08	NUT LH ONLY	2	
	NAS220-6	SCREW RH ONLY	4	
	NAS679A08	NUT RH ONLY	4	
		---*---		
-42	0713620-1	PANEL ASSEMBLY-STATIONARY	1	
	0713770-1	PANEL ASSEMBLY-STATIONARY	1	E
	0713770-200	PANEL ASSEMBLY-STATIONARY	1	N
	0713273-200	PANEL ASSEMBLY-STATIONARY	1	V
	0713273-201	PANEL ASSEMBLY-STATIONARY	1	X
-43	0713600-7	SKIN-DECK	1	Y
-43A	0713600-14	SKIN-DECK	1	E
	0713600-20	SKIN-DECK	1	J
	0713600-23	SKIN-DECK	1	L
	0713287-8	SKIN-DECK	1	V
-44	0713658-1	DOUBLER-INSPECTION OPENING	1	S
-44A	0713846-1	DOUBLER	1	E
				K

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
17 -448	0713847-1		COVER	1	L
			ATTACHING PARTS		
	S1021Z8-8		SCREW	8	L
	NAS395-16-3		NUT	8	L
			---*---		
-45	0713334-3	*	SKIN-FORWARD LH	1	
-46	0713334-4	*	SKIN-FORWARD RH	1	
-47	S347-1		FLANGE	2	P
	S1776-3		BUTTON-STATIC LINE	1	Q
	S1141-2		WASHER	2	C
	S1141-1		WASHER	2	D
-48	0713716-1		BRACE-LH	1	A
	0713733-1		BRACE ASSEMBLY-LH	1	B
-49	0713717-1		BRACE-RH	1	
			ATTACHING PARTS		
	NAS220-5		SCREW RH ONLY	1	
	NAS679A08		NUT RH ONLY	1	
	0713718-1		SPACER LH ONLY	1	
	0713718-2		SPACER RH ONLY	1	
			---*---		
-50	0713334-5		SKIN-FORWARD BELLY	1	
-51	S225-3		PLATE-ACCESS	1	
			ATTACHING PARTS		
-52	S1021Z8-6		SCREW	3	
-53	NAS395-14-3		NUT	3	
			---*---		
-54	0713661-1		DOUBLER-ACCESS OPENING	1	
	CM2692-32-1S		PLUG BUTTON UC	1	
-55	0713139-1		INLET ASSEMBLY-AIR VENT	1	
-56	0713135-2		DOOR ASSEMBLY-AIR VENT	1	
	0713140-1		SEAL-AIR VENT INLET	1	
-57	0450286-1		CLIP	1	
-58	0713334-7		SKIN-RETAINER LH	1	
-59	0713334-8		SKIN-RETAINER RH	1	
-60	SEE FIG 21		BRACKET ASSEMBLY-AILERON PULLEY LH	1	R
	0760105-1		BRACKET ASSEMBLY-AILERON PULLEY LH	1	S
	SEE FIG 21		BRACKET ASSEMBLY-AILERON PULLEY RH	1	R
	0760105-2		BRACKET ASSEMBLY-AILERON PULLEY RH	1	S
			ATTACHING PARTS		
-61	NAS221-6		SCREW	2	S
-62	MS21044N3		NUT	2	S
-63	AN507-832R6		SCREW	4	S
			---*---		
	NAS696A08		NUTPLATE	4	S
-64	0713019-94		VALVE ASSEMBLY-DEFROST	1	E
	0713019-7		VALVE GUIDE-DEFROST	1	E
	0713003-45		NOZZLE ASSEMBLY	1	E
-65	0713952-1		NOZZLE ASSEMBLY	1	
	1250116-1		VALVE ASSEMBLY	1	F
	1250115-3		LEVER ASSEMBLY	1	F
-66	0713623-1		BRACKET-FUEL STRAINER	1	E
	0713757-1		BRACKET-FUEL STRAINER	1	F
-67	0753601-1		DUCT ASSEMBLY-HEATER	1	
-68	1213508-1		SUPPORT BRACKET-RADIO	1	
-69	0713789-1		BRACKET-ROYALITE SUPPORT	1	N
-70	0713804-1		BRACKET-SWITCH PLATE	1	N
-71	0713804-2		BRACKET-SWITCH PLATE	1	N
-71A	1213718-1		BRACKET ASSEMBLY	2	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
17 -72	0713805-1	BRACKET-SWITCH MOUNTING	1	N
	0713859-1	BRACKET-SWITCH MOUNTING	1	T
	0713859-6	BRACKET-SWITCH MOUNTING	1	U
	1213064-1	BRACKET-SWITCH MOUNTING	1	S
-73	0713748-1	GUARD-CABLE	2	Z
		ATTACHING PARTS		
	S1021A4-6	SCREW	3	Z
		---*---		
-74	0713659-1	COVER ASSEMBLY	1	G
	0713659-5	COVER ASSEMBLY	1	H
		ATTACHING PARTS		
-75	S1021Z8-8	SCREW	15	
-76	NAS395-16-3	NUT	15	
		---*---		
-77	0700668-7	GRILLE-VENT	1	G

NOTE. *WHEN ORDERING THIS PART FOR AIRPLANES PRIOR TO SERIAL 18258147 & A182-0117 ALSO ORDER S1776-3.


NOTE. %WHEN ORDERING THIS PART FOR AIRPLANES PRIOR TO SERIAL 18257910 & A182-0089 ALSO ORDER 1 0713252-2 COVER.

A---182 SERIAL 18253599 THRU 18254019
B---182 SERIAL 18254020 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
C---182 SERIAL 18253599 THRU 18255058
D---182 SERIAL 18255059 THRU 18258146
A182 SERIAL A182-0001 THRU A182-0116
E---182 SERIAL 18253599 THRU 18255844
F---182 SERIAL 18255845 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
G---182 SERIAL 18253599 THRU 18255444
H---182 SERIAL 18255445 THRU 18255844
J---182 SERIAL 18255845 THRU 18256684
K---182 SERIAL 18256685 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
L---182 SERIAL 18256685 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
M---182 SERIAL 18253599 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
N---182 SERIAL 18255845 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
O---182 SERIAL 18257626 THRU 18260055
A182 SERIAL A182-0057 THRU A182-0116
P---182 SERIAL 18253599 THRU 18258146
A182 SERIAL A182-0001 THRU A182-0116
Q---182 SERIAL 18258147 THRU 18260055
R---182 SERIAL 18253599 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
S---182 SERIAL 18258506 THRU 18260055
A182 SERIAL A182-0097 THRU A182-0116
T---182 SERIAL 18257626 THRU 18257909
A182 SERIAL A182-0057 THRU A182-0088
U---182 SERIAL 18257910 THRU 18258505
A182 SERIAL A182-0089 THRU A182-0096
V---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
W---182 SERIAL 18259195 THRU 18260055
X---182 SERIAL 18258506 THRU 18259305
A182 SERIAL A182-0097 THRU A182-0116
Y---182 SERIAL 18259306 THRU 18260055
Z---182 SERIAL 18254424 THRU 18259305
A182 SERIAL A182-0001 THRU A182-0116

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
17A-	0791360-7	STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	A
	0791360-8	STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	G H
	0713334-1	STRUCTURE ASSEMBLY-FUSELAGE FRONT SECTION	1	
- 1	SEE FIG 21A	FIREWALL ASSEMBLY	1	
- 2	SEE FIG 18	BULKHEAD ASSEMBLY-FRONT DOOR POST	1	
- 3	SEE FIG 20	TUNNEL COMPONENTS-FRONT SECTION	1	
- 4	SEE FIG 19	STRUCTURE ASSEMBLY-CONSOLE	1	
- 5	0713676-2	COVER PLATE-TUNNEL AFT	1	
- 6	0713676-1	COVER PLATE-TUNNEL FWD	10	
- 7	S1021Z8-8	SCREW	10	
	NAS395-13-3	NUT	1	
- 8	0713632-5	FITTING-FIREWALL TO TUNNEL LH	1	
	0713632-6	FITTING-FIREWALL TO TUNNEL RH	1	
- 9	0713638-1	FITTING-UPPER NOSE GEAR REINFORCEMENT LH	1	
	0713638-2	FITTING-UPPER NOSE GEAR REINFORCEMENT RH	1	
-10	0713663-1	PULLEY-BRACKET-ELEVATOR LH	1	
	0713663-2	PULLEY-BRACKET-ELEVATOR RH		
		ATTACHING PARTS	3	
	NAS220-6	SCREW	1	
	NAS679A08	NUT		
		---*---	2	
	NAS682A08	NUTPLATE	1	
-11	0713682-1	CHANNEL-REINFORCEMENT LH	1	
	0713682-2	CHANNEL-REINFORCEMENT RH	1	
-12	0713603-1	BULKHEAD ASSEMBLY-LH	1	
	0713603-2	BULKHEAD ASSEMBLY-RH	1	
-13	0543013-1	FITTING-NOSE GEAR UPPER		
		ATTACHING PARTS	2	C
-14	NAS144-16	BOLT	2	D
	NAS144-20	BOLT	2	C
	NAS679A4	NUT		
		---*---	1	
-15	0743606-2	FITTING-NOSE GEAR LOWER		
		ATTACHING PARTS	2	
-16	AN5-6A	BOLT	2	
-17	AN960-516	WASHER	2	
-18	AN175-7A	BOLT	4	
-19	NAS679A5	NUT		
		---*---	1	
-20	0713614-1	BULKHEAD-STA 8.125 LH	1	
	0713614-2	BULKHEAD STA 8.125 RH	1	
-21	0713617-1	BULKHEAD STA 17.00	1	
-22	0713615-1	STRINGER ASSEMBLY-ENGINE MOUNT LOWER LH	1	
	1213008-5	BRACKET	1	
	0713615-2	STRINGER ASSEMBLY-ENGINE MOUNT LOWER RH	1	
	1213008-5	BRACKET	1	
-23	0713685-1	STIFFENER-LH	1	
	0713685-2	STIFFENER-RH	1	
-24	0713619-1	STRINGER-BELLY LH	1	
	0713619-2	STRINGER-BELLY RH	1	A
-25	0713668-1	FLOORBOARD ASSEMBLY	1	B
	0713668-4	FLOORBOARD ASSEMBLY	6	
	NAS395-14-3	NUT	1	B
-25A	0762042-1	BRACKET-PULLEY	5	
-26	S225-1	COVER		
		ATTACHING PARTS	3	
-27	4°330	STUD UC		
		---*---	1	
-28	0713670-1	STRINGER-LOWER LH	1	
	0762007-2	STRINGER-LOWER RH	1	
	NAS680C08M	NUTPLATE	1	
-29	0713639-1	STRINGER-UPPER LH	1	
	0713639-2	STRINGER-UPPER RH	1	
-30	0713263-1	STRINGER ASSEMBLY-ENGINE MOUNT UPPER LH	1	
	0713263-5	BRACKET	1	
-31	0713263-2	STRINGER ASSEMBLY-ENGINE MOUNT UPPER RH	1	
-32	0713263-6	BRACKET	1	J
-33	0713684-1	DOUBLER-BELLY	1	H
	0713684-2	DOUBLER-BELLY		

CONTINUED ON NEXT PAGE

Fuselage (Cont)

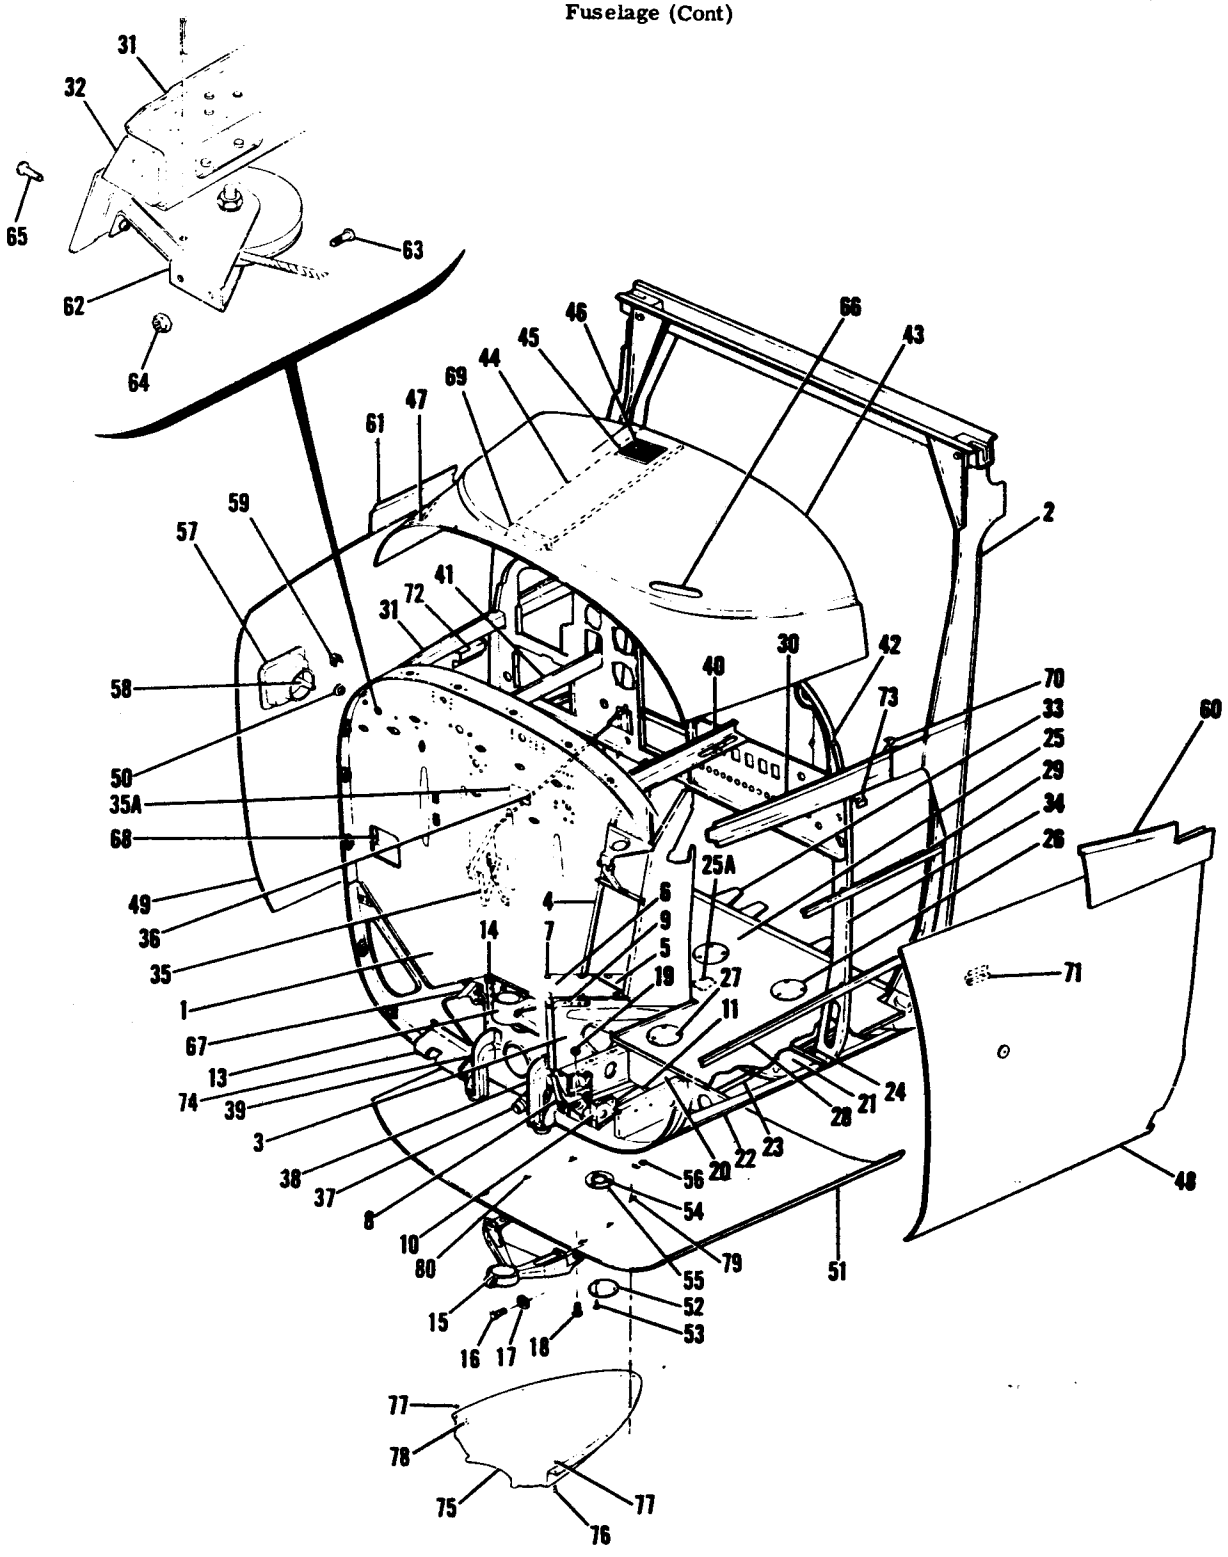

182 SERIAL 18260056 THRU 18262465

Figure 17A. Fuselage Front Section Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
17A-34	0713787-4	BULKHEAD-STA 17.00 LH	1	
	0713787-5	BULKHEAD-STA 17.00 RH	1	
	1213412-11	SUPPORT	2	H
-35	0762003-1	BRACKET ASSEMBLY-FLAP CONTROL	1	A
-35A	0762046-1	BRACKET-FLAP FOLLOW UP SPRING	1	G
-36	0713293-1	STIFFENER-FLAP CONTROL	1	J
-37	0713666-1	BOOT ASSEMBLY-STEERING	1	
-38	0713665-1	BRACKET ASSEMBLY-COWL ATTACHMENT LH	1	J
	0753027-1	SHOCKMOUNT ASSEMBLY-LH	1	JH
-39	0713665-2	BRACKET ASSEMBLY-COWL ATTACHMENT RH	1	JH
	0753027-2	SHOCKMOUNT ASSEMBLY-RH	1	
-40	0760691-1	SUPPORT ASSEMBLY-CONTROL WHEEL LH	1	
-41	0760691-2	SUPPORT ASSEMBLY-CONTROL WHEEL RH	1	
		ATTACHING PARTS		
	NAS220-6	SCREW LH ONLY	2	
	NAS679A08	NUT LH ONLY	2	
	NAS220-6	SCREW RH ONLY	4	
	NAS679A08	NUT RH ONLY	4	
		---*---		
-42	0713940-200	PANEL ASSEMBLY-STATIONARY	1	K
	0713940-201	PANEL ASSEMBLY-STATIONARY	1	LM
	0713940-3	PANEL ASSEMBLY-STATIONARY	1	HJ
	0713329-1	PANEL ASSEMBLY-STATIONARY	1	HJ
-43	0713287-20	SKIN-DECK	1	H
	0713334-6	SKIN-DECK	1	
-44	0713935-1	DOUBLER WEU 0713935-2	1	H
	0713935-2	DOUBLER ASSEMBLY	1	
	S1741-1	ANCHOR	3	
	NAS680A08	NUTPLATE	1	
-45	1213929-1	LOUVER	1	
-46	0713847-11	GRILL	1	
-47	0713296-1	SUPPORT ASSEMBLY-HEAT SINK	1	
-48	0713334-3	SKIN-FORWARD LH	1	
-49	0713334-4	SKIN-FORWARD RH	1	J
-50	S1776-3	BUTTON-STATIC LINE	1	H
	S1776-5	PLATE-ACCESS	1	
-51	0713334-5	SKIN-FORWARD BELLY	1	H
	0713626-1	BRACKET	1	
-52	S225-3	PLATE-ACCESS	1	
		ATTACHING PARTS		
-53	S1021Z8-6	SCREW	3	
-54	NAS395-14-3	NUT	3	
		---*---		
-55	0713661-1	DOUBLER-ACCESS OPENING	1	
-56	S1702-1	PLUG BUTTON	1	
-57	0713139-1	INLET ASSEMBLY-AIR VENT	1	
-58	0713135-2	DOOR ASSEMBLY-AIR VENT	1	
	0713140-1	SEAL-AIR VENT INLET	1	
-59	0450286-1	CLIP	1	
-60	0713334-7	SKIN-RETAINER LH	1	
-61	0713334-8	SKIN-RETAINER RH	1	
-62	0760105-5	BRACKET ASSEMBLY-AILERON PULLEY LH	1	
	0760105-6	BRACKET ASSEMBLY-AILERON PULLEY RH	1	
		ATTACHING PARTS		
-63	NAS221-6	SCREW	2	
-64	MS21044N3	NUT	2	
-65	AN507-832R6	SCREW	4	
		---*---		
	NAS696A08	NUTPLATE	4	
-66	0713952-1	NOZZLE ASSEMBLY	1	
	1250116-1	VALVE ASSEMBLY	1	
	1250115-3	LEVER ASSEMBLY	1	
-67	0713757-1	BRACKET-FUEL STRAINER	1	J
-68	0753601-1	DUCT ASSEMBLY-HEATER	1	A
	0753601-16	DUCT ASSEMBLY-HEATER	1	B
-69	1213508-1	SUPPORT BRACKET-RADIO	1	J
	A8566-8Z	ANGLE BRACKET	1	H

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
17A-70	0713288-1	BRACKET-DOORPOST SHIELD LH WEU 0713288-3	1	
	0713288-3	BRACKET-DOORPOST SHIELD LH	1	
	0713288-2	BRACKET-DOORPOST SHIELD RH WEU 0713288-4	1	
	0713288-4	BRACKET-DOORPOST SHIELD RH	1	
-71	1213718-1	BRACKET ASSEMBLY-FILTER	1	
-72	0713943-1	GUARD-WIRE BUNDLE	1	E
-73	0713944-1	CABLE GUARD	2	F
-74	0753028-2	BAFFLE-COWL FLAP EXIT RH	1	H
	0753028-1	BAFFLE-COWL FLAP EXIT LH	1	H
-75	0713335-1	FAIRING ASSEMBLY-NOSE GEAR AFT	1	H
		ATTACHING PARTS		
-76	AN525-832R8	SCREW	9	H
-77	AN960-10L	WASHER	2	H
		---•---		
-78	MS35489-6S	GROMMET	1	H
-79	NAS696A08	NUTPLATE	1	H
-80	NAS697A08	NUTPLATE	6	H

A---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
B---182 SERIAL 18260446 THRU 18262465
C---182 SERIAL 18260056 THRU 18260290
D---182 SERIAL 18260291 THRU 18262465
A182 SERIAL A182-0117 & ON
E---182 SERIAL 18260077 THRU 18262465
A182 SERIAL A182-0117 & ON
F---182 SERIAL 18260147 THRU 18262465
A182 SERIAL A182-0117 & ON
G---182 SERIAL 18260446 THRU 18261425
A182 SERIAL A182-0137 & ON
H---182 SERIAL 18261426 THRU 18262465
J---182 SERIAL 18260056 THRU 18261425
K---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
L---182 SERIAL 18260446 THRU 18260825
A182 SERIAL A182-0137 & ON
M---182 SERIAL 18260826 THRU 18261425

Fuselage (Cont)

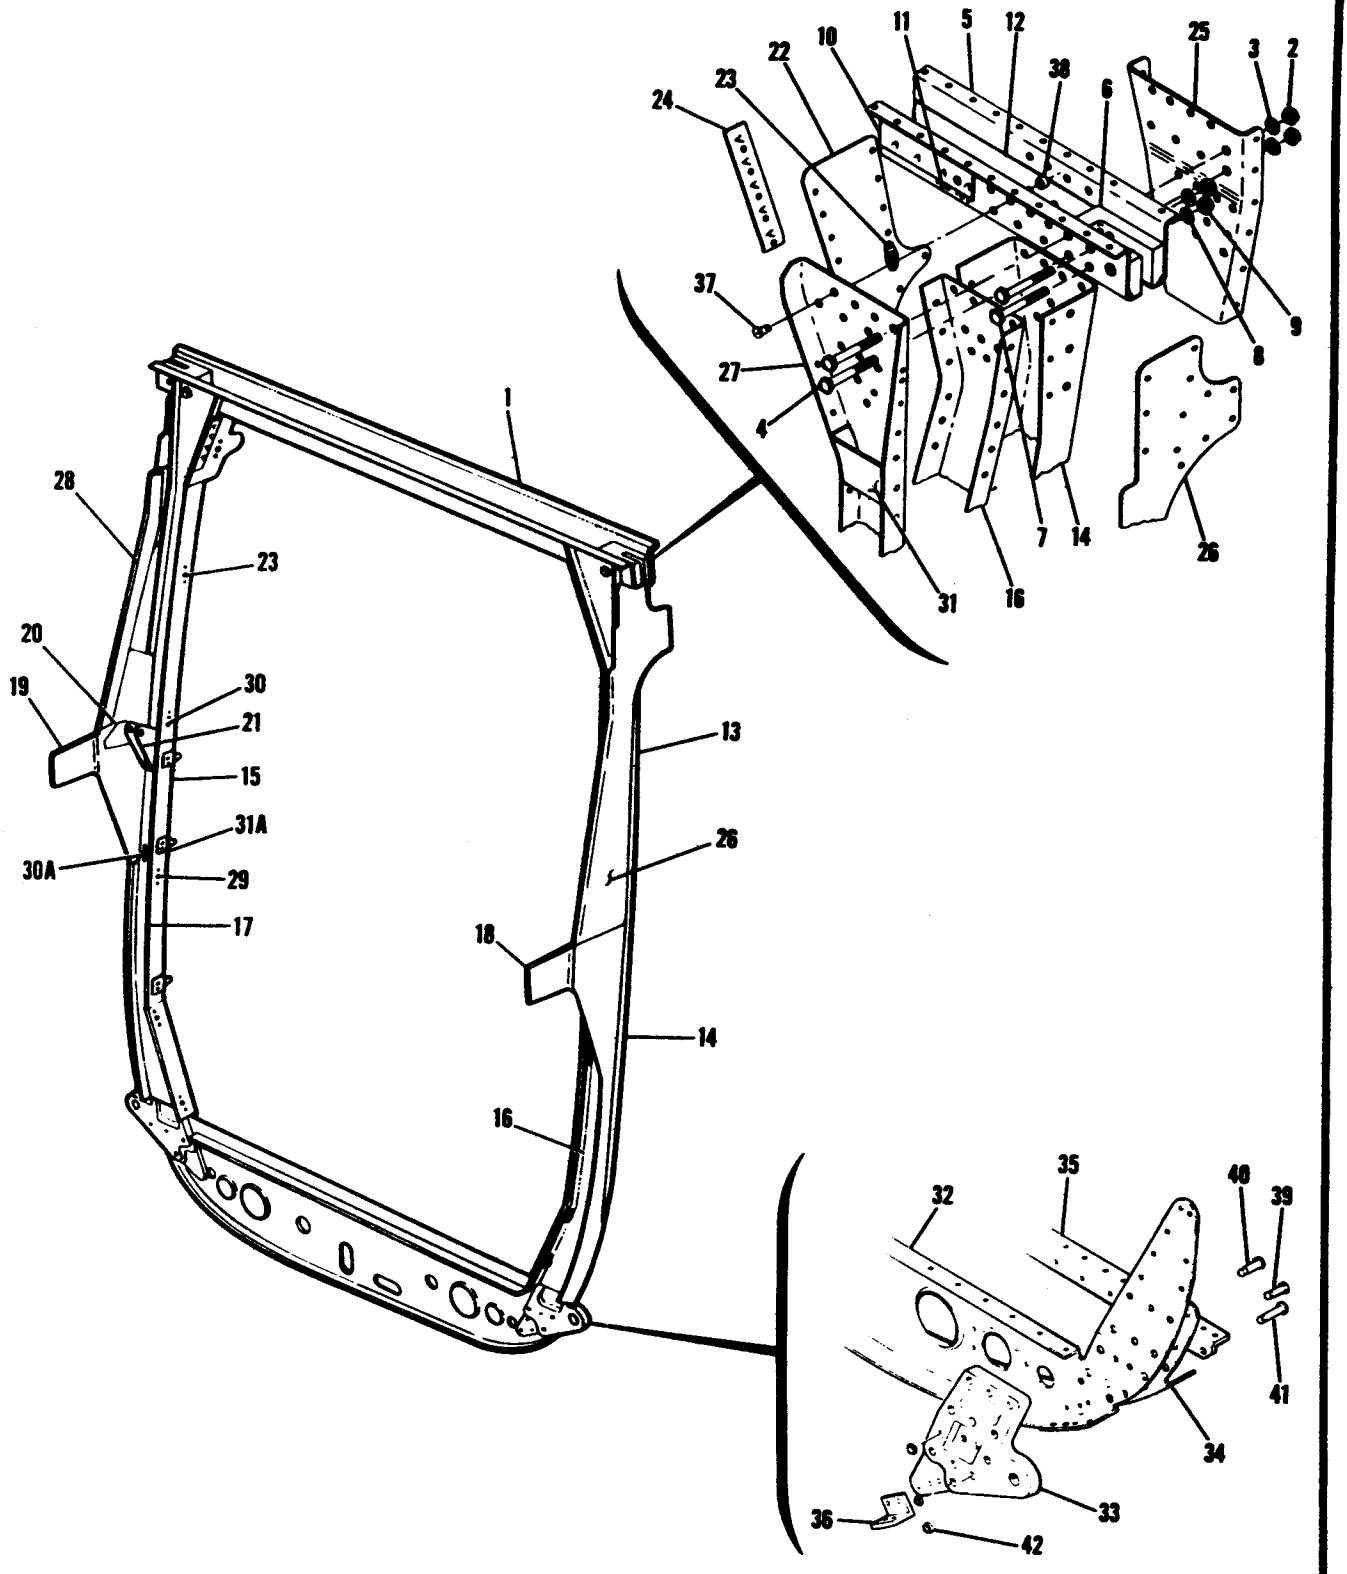



Figure 18. Front Doorpost Bulkhead Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
18 -	0713604-1	BULKHEAD ASSEMBLY-FRONT DOORPOST	1	C
	0713604-14	BULKHEAD ASSEMBLY-FRONT DOORPOST WEU 0713604-15	1	E
	0713604-15	BULKHEAD ASSEMBLY-FRONT DOORPOST	1	G
- 1	0711066-3	SPAR ASSEMBLY-FORWARD FUSELAGE	1	F
	0711066-6	SPAR ASSEMBLY-FORWARD FUSELAGE	1	G
		ATTACHING PARTS		
- 2	MS21044N3	NUT	4	
- 3	AN960D10	WASHER	4	
- 4	AN3-21A	BOLT	4	
		---*---	1	
- 5	1213127-4	SPAR-FORWARD FUSELAGE	2	
- 6	0411129	BLOCK-SPAR	1	
		ATTACHING PARTS		
- 7	AN3-20A	BOLT	2	
- 8	AN960-10	WASHER	2	
- 9	MS21044N3	NUT	2	
		---*---	1	F
-10	0412496	RETAINER-UPHOLSTERY	4	
-11	NAS686A3	NUTPLATE	1	
-12	0711066-2	REINFORCEMENT-SPAR	1	A
-13	0713604-3	DOORPOST ASSEMBLY-FUSELAGE LH	1	B
	0713604-11	DOORPOST ASSEMBLY-FUSELAGE LH	1	A
	0713604-4	DOORPOST ASSEMBLY-FUSELAGE RH	1	B
	0713604-12	DOORPOST ASSEMBLY-FUSELAGE RH	1	
-14	0713604-5	DOOR JAMB ASSEMBLY-LH	1	
-15	0713604-6	DOOR JAMB ASSEMBLY-RH	1	
-16	0713604-7	CHANNEL-DOORPOST ASSEMBLY LH	1	
-17	0713604-8	CHANNEL-DOORPOST ASSEMBLY RH	1	
-18	0713612-1	DOUBLER-FORWARD DOORPOST LH	1	
-19	0713612-2	DOUBLER-FORWARD DOORPOST RH	1	
-20	1210051-2	SPACER-UPPER DOOR HINGE RH	1	
	1210051-1	SPACER-UPPER DOOR HINGE LH	1	
-21	0760602-2	BRACKET-PULLEY RH	1	
	0760602-1	BRACKET-PULLEY LH	1	
		ATTACHING PARTS		
	AN525-10R8	SCREW	2	
	NAS680A3	NUTPLATE	2	
		---*---	1	
-22	0713633-1	UPPER PLATE-FORWARD DOORPOST LH	1	
	0713633-2	UPPER PLATE-FORWARD DOORPOST RH	1	
-23	NAS680A3	NUTPLATE	4	
-24	1213115-1	HOOK STRIP-UPHOLSTERY LH	1	
	1213115-2	HOOK STRIP-UPHOLSTERY RH	1	
-25	0713607-1	FLANGE PLATE-AFT LH	1	
	0713607-2	FLANGE PLATE-AFT RH	1	
-26	0713611-1	RETAINER-OUTER LH	1	
	0713611-2	RETAINER-OUTER RH	1	
-27	0713606-1	PLATE-FORWARD FLANGE LH	1	
	0713606-2	PLATE-FORWARD FLANGE RH	1	
-28	0713609-6	RETAINER-INNER FORWARD DOORPOST RH	1	
	0713609-5	RETAINER-INNER FORWARD DOORPOST LH	1	
-29	S1863-2	NUTPLATE TIN	3	
-30	S1862-1	NUTPLATE TIN	1	
-30A	NAS680A3	NUTPLATE ATTACH DOOR STOP HINGE	3	
-31	0713732-5	SHIELD ASSEMBLY-CABLE LH	1	
	0713732-6	SHIELD ASSEMBLY-CABLE RH	1	
-31A	0700704-1	CLIP-UPHOSTERY	1	B
-32	0713608-1	BULKHEAD-FORWARD DOORPOST LOWER	1	C
	0713608-2	BULKHEAD-FORWARD DOORPOST LOWER	1	E
	0713608-3	BULKHEAD-FORWARD DOORPOST LOWER	1	G
-33	0713610-9	FITTING-FORWARD DOORPOST BULKHEAD LH	1	
	0713610-10	FITTING-FORWARD DOORPOST BULKHEAD RH	1	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
18 -34	0713613-1	BULKHEAD REINFORCEMENT-FORWARD DOORPOST LH	1	C
	0713613-5	BULKHEAD REINFORCEMENT-FORWARD DOORPOST LH	1	D
	0713613-2	BULKHEAD REINFORCEMENT-FORWARD DOORPOST RH	1	C
	0713613-6	BULKHEAD REINFORCEMENT-FORWARD DOORPOST RH	1	D
-35	0713605-1	REINFORCEMENT-FORWARD DOORPOST	1	
-36	0713683-1	ANGLE-LOWER ENGINE MOUNT	2	
-37	NAS1054-6-3	RIVET-HI SHEAR	20	
-38	NAS179-6	COLLAR-HI SHEAR RIVET	20	
-39	NAS1054-8-11	RIVET-HI SHEAR	2	
-40	NAS1054-8-12	RIVET-HI SHEAR	4	
-41	NAS1054-8-13	RIVET-HI SHEAR	12	
-42	NAS179-8	COLLAR-HI SHEAR RIVET	16	
		A---182 SERIAL 18253599 THRU 18254423		
		B---182 SERIAL 18254424 THRU 18262465		
		A182 SERIAL A182-0001 & ON		
		C---182 SERIAL 18253599 THRU 18260055		
		A182 SERIAL A182-0001 THRU A182-0116		
		D---182 SERIAL 18260056 THRU 18262465		
		A182 SERIAL A182-0117 & ON		
		E---182 SERIAL 18260056 THRU 18260445		
		A182 SERIAL A182-0117 & ON		
		F---182 SERIAL 18253599 THRU 18260445		
		A182 SERIAL A182-0001 & ON		
		G---182 SERIAL 18260446 THRU 18262465		

Fuselage (Cont)

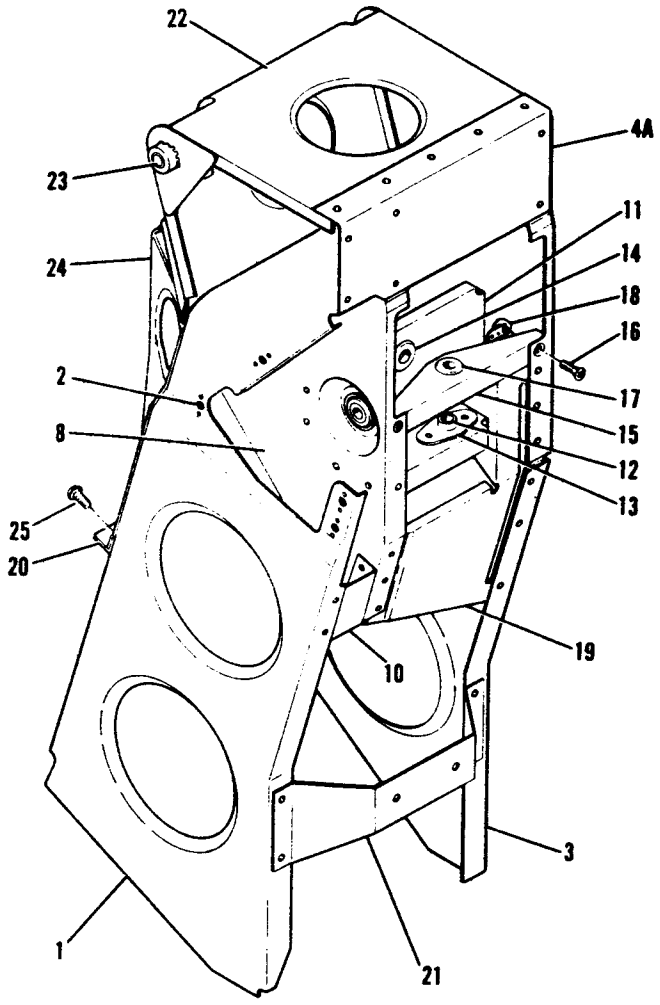

18260446 THRU 18262465

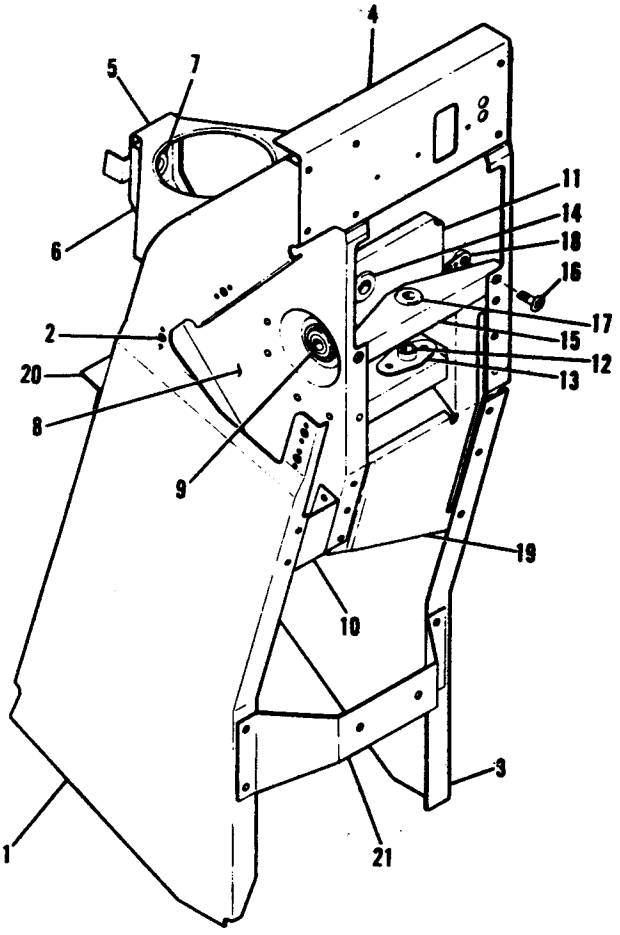

18253599 THRU 18260445

Figure 19. Console Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
19 -	0713640-200	CONSOLE STRUCTURE ASSEMBLY	1	A
	0713640-201	CONSOLE STRUCTURE ASSEMBLY	1	B
	0713640-202	CONSOLE STRUCTURE ASSEMBLY	1	C
- 1	0713640-3	SIDE PANEL ASSEMBLY-LH	1	
- 2	NAS697A08	NUTPLATE	4	
- 3	0713640-4	SIDE PANEL-RH	1	A
- 4	0713648-1	SUPPORT-AUTO PILOT	1	E
- 4A	0713784-2	BRACKET-PEDESTAL TO PANEL	1	D
- 5	0713650-1	SUPPORT-TRIM SPROCKET	1	D
- 6	0713652-2	SUPPORT-TRIM SPROCKET	1	D
- 7	0713652-4	BEARING ASSEMBLY	1	
- 8	0713641-1	SUPPORT ASSEMBLY-ELEVATOR TRIM	1	
- 9	M451	BEARING TOR	1	
	0411320	HOUSING	1	
-10	0713641-3	CLIP	1	
-11	0713647-1	SUPPORT ASSEMBLY-RUDDER TRIM LOWER	1	
-12	S1004-1A	BEARING	1	
-13	0713647-3	MOUNT-BEARING	1	
-14	S1080-1	GROMMET	1	
-15	0713657-1	SUPPORT ASSEMBLY-RUDDER TRIM UPPER		
		ATTACHING PARTS	2	
-16	AN507-632R4	SCREW	1	
		---*---		
-17	S1004-1A	BEARING	1	
	0713647-3	MOUNT-BEARING	1	
	0713657-2	SUPPORT-BEARING	2	
-18	NAS696A06LK	NUTPLATE	1	
-19	0713645-2	SUPPORT ASSY-COWL FLAP PLATE	1	
-20	0713651-1	ANGLE		
		ATTACHING PARTS	2	
	AN515-6R6	SCREW	2	
	NAS679A06	NUT	AR	
	AN960-6	WASHER		
		---*---	1	
-21	0713644-1	BRACKET-FUEL SELECTOR SUPPORT	1	C
-22	0762037-7	BRACKET ASSY-FLAP FOLLOW UP	2	
-23	0762037-3	BEARING ASSY	1	F
-24	0713734-1	BRACKET ASSY-RUDDER		
		ATTACHING PARTS	2	
-25	AN515-6R6	SCREW	2	
	NAS679A06	NUT		
		---*---	1	F
	0713647-3	MOUNT-BEARING	1	F
	S1004-1A	BEARING		

A---182 SERIAL 18253599 THRU 18255844
B---182 SERIAL 18255845 THRU 18260445
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18260446 THRU 18262465
D---182 SERIAL 18253599 THRU 18260445
E---182 SERIAL 18255845 THRU 18262465
F---182 SERIAL 18261329 THRU 18262465
A182 SERIAL A182-0137 & ON

Fuselage (Cont)


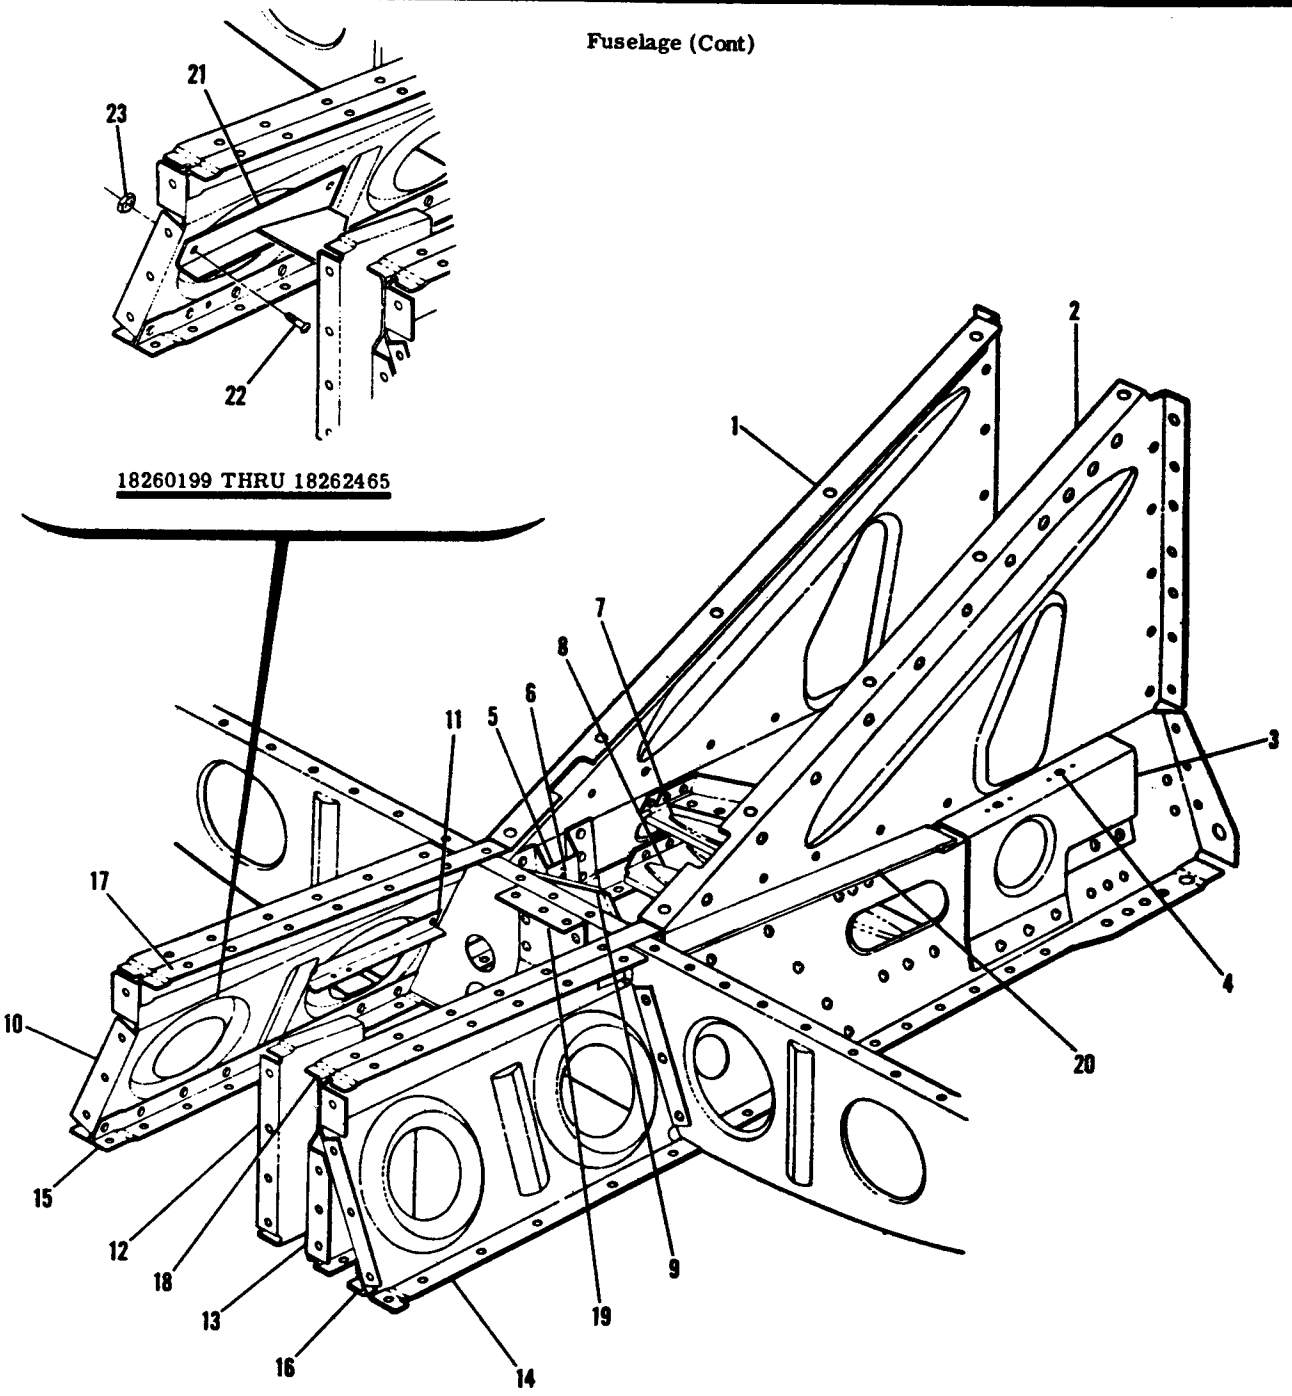


Figure 20. Front Section Tunnel Components

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20 -		TUNNEL COMPONENTS-FRONT SECTION	NP	
- 1	0713631-1	BULKHEAD ASSEMBLY-TUNNEL LH	1	
- 2	0713631-2	BULKHEAD ASSEMBLY-TUNNEL RH	1	
- 3	0713628-2	BRACKET ASSEMBLY-INBOARD PEDAL SUPPORT RH	1	
	0713628-1	BRACKET ASSEMBLY-INBOARD PEDAL SUPPORT LH	1	
- 4	NAS686A3	NUTPLATE	2	
	0713624-2	ANCHOR-BRAKE CYLINDER LH ONLY	1	A
- 5	0713677-1	BRACKET ASSEMBLY-LOWER SPROCKET LH	1	B
	0713677-3	BRACKET ASSEMBLY	2	A
- 6	NAS680A3	NUTPLATE	1	B
	NAS686A3	NUTPLATE	1	
- 7	0713637-1	SUPPORT ASSEMBLY-NOSE STEERING BELLCRANK UPPER	1	
- 8	0713636-1	BRACKET-NOSE STEERING BELLCRANK LOWER	1	
- 9	0713678-1	BRACKET-TRIM SPROCKET	1	
-10	0713634-2	BULKHEAD ASSEMBLY-AFT TUNNEL LH	1	A
-11	0713730-1	RUB BLOCK ASSEMBLY	1	
-12	0713669-1	BRACKET-RUDDER PULLEY	1	
-13	0713669-2	BRACKET-RUDDER PULLEY	1	
-14	0713634-3	BULKHEAD-AFT TUNNEL RH	1	
-15	0713694-1	ANGLE-TUNNEL LH	1	
-16	0713694-2	ANGLE-TUNNEL RH	1	
-17	0713671-3	ANGLE-TUNNEL LH	1	
-18	0713671-4	ANGLE-TUNNEL RH	1	
-19	0713681-1	BRACKET-FUEL SELECTOR VALVE	1	
-20	0713290-2	REINFORCEMENT-RH	1	
	0713290-1	REINFORCEMENT-LH	1	C
-21	0760014-1	GUARD ASSY		
		ATTACHING PARTS	2	
-22	AN515-8R6	SCREW	2	
-23	NAS679A08	NUT		
		---•---		

A---182 SERIAL 18253599 THRU 18253929
B---182 SERIAL 18253930 THRU 18262465
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18260199 THRU 18262465
A182 SERIAL A182-0117 & ON

Fuselage (Cont)

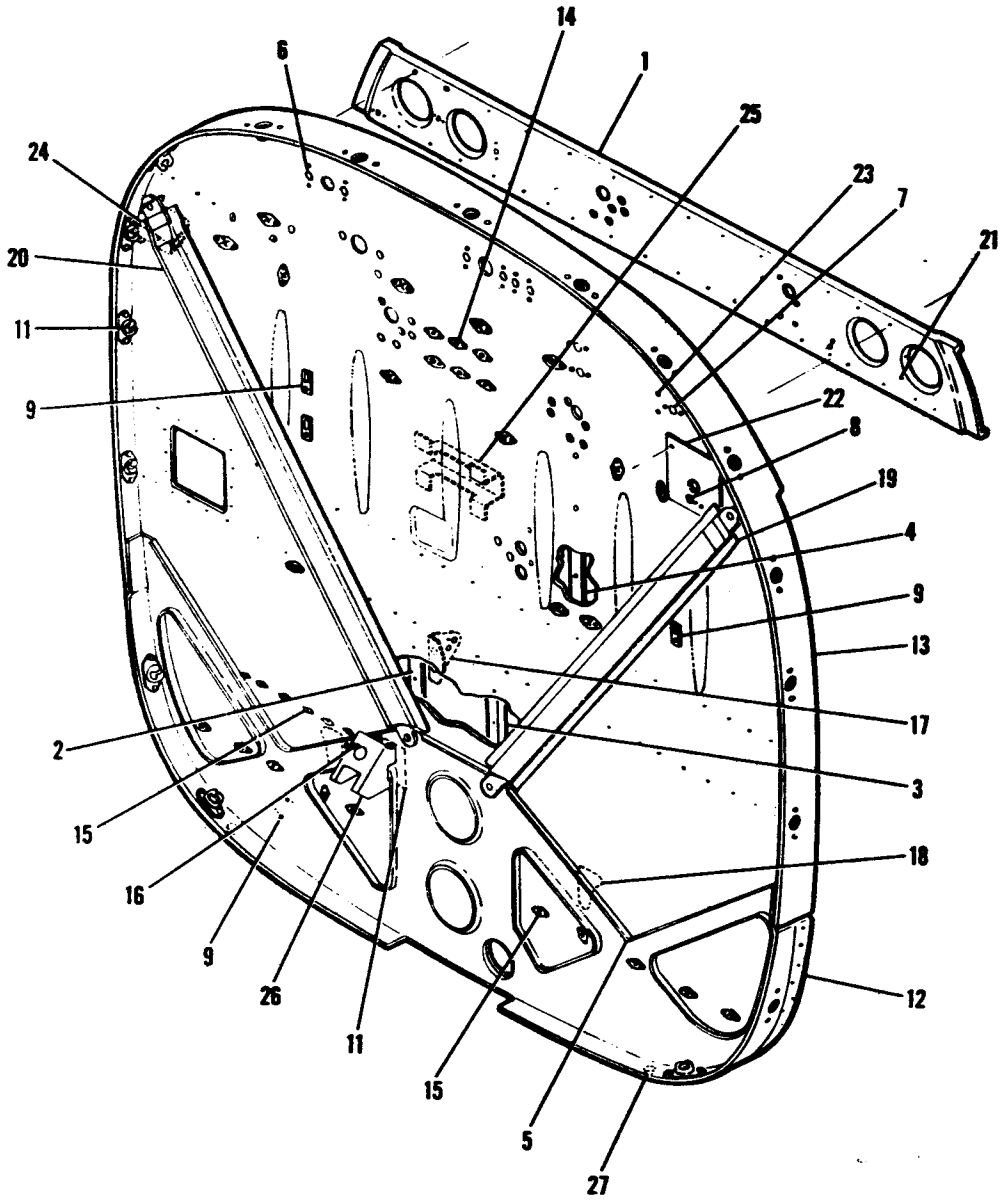


182 SERIAL 18253599 THRU 18258505

Figure 21. Firewall Assembly


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
21 -	0753600-13	FIREWALL ASSEMBLY	1	A
- 1	0753600-3	DOUBLER-FIREWALL	1	
- 2	0753600-11	ANGLE-SUPPORT-RH	1	
- 3	0753600-12	ANGLE-SUPPORT-LH	1	
- 4	0760673-1	BRACKET	1	
- 5	0753600-7	DOUBLER-FORWARD	1	
- 6	S1863-3A	NUT TIN	17	
- 7	NAS697A4K	NUTPLATE	6	
- 8	S1862-2A	NUT TIN	1	
- 9	0753000-13	DOUBLER	3	
-10	244-16	RECEPTACLE CLC	18	
-11	0753600-14	DOUBLER-FUEL STRAINER	1	
-12	0753600-4	DOUBLER-AFT RH	1	
	0753600-5	DOUBLER-AFT LH	1	
-13	0753600-20	RETAINER-UPPER COWL	1	
-14	NAS680A08	NUTPLATE	6	
-15	S1863-3	NUT TIN	17	
-16	S1862-2	NUT TIN	3	
-17	0713700-1	BRACKET-COWL FLAP CONTROL	1	
-18	0753602-1	DOUBLER	2	
-19	0753102-5	STIFFENER ASSEMBLY-LH	1	
-20	0753102-6	STIFFENER ASSEMBLY-RH	1	
	0753102-9	STIFFENER PLATE-UPPER	1	
	0753102-11	STIFFENER PLATE	2	
-21	NAS680A08K	NUTPLATE	2	
-22	0753600-21	PATCH	1	
-23	AN4-3A	BOLT	2	
-24	0713664-2	BRACKET ASSEMBLY-AILERON PULLEY RH	1	
	0713664-1	BRACKET ASSEMBLY-AILERON PULLEY LH	1	
		ATTACHING PARTS		
	NAS221-6	SCREW	1	
	MS20365-1032C	NUT	1	
	AN507-832R6	SCREW	2	
		---*---		
	NAS696A08	NUTPLATE	2	
-25	0753603-1	BRACKET ASSEMBLY-FILTER MOUNTING	1	
	NAS1068A3	NUTPLATE	2	
-26	0713797-1	BRACKET-FUEL STRAINER	1	
-27	S1929-1	BUMPER	2	

A---182 SERIAL 18253599 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096

Fuselage (Cont)

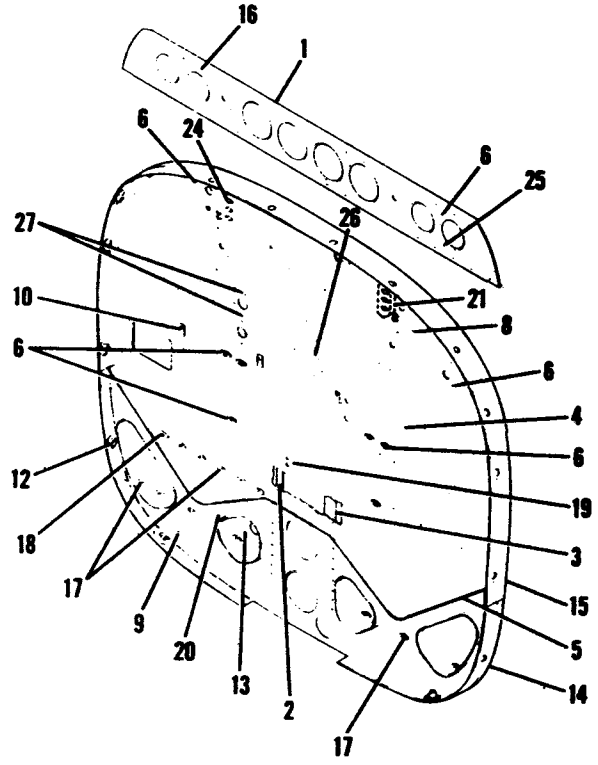

18258506 THRU 18260290

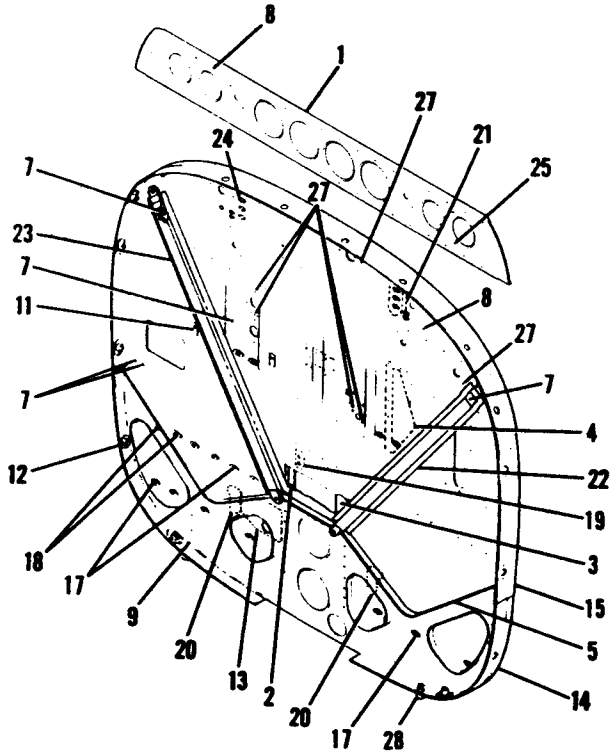

18260291 THRU 18261425


182 SERIAL 18258506 THRU 18261425

Figure 21A. Firewall Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
21A-	0753600-200	FIREWALL ASSEMBLY WEU 0753100-200	1	A
	0753100-200	FIREWALL ASSY ASSY	1	B
- 1	0753600-19	DOUBLER-FIREWALL	1	
- 2	0753600-11	ANGLE-SUPPORT RH	1	
- 3	0753600-12	ANGLE-SUPPORT LH	2	
- 4	0760673-1	BRACKET-ELEVATOR PULLEY	1	
- 5	0753600-7	DOUBLER-FORWARD	16	A
- 6	S1863-3A	NUT TIN	5	B
- 7	NAS680A3	NUTPLATE	2	A
- 8	NAS697A4K	NUTPLATE	4	B
	NAS697A4K	NUTPLATE	1	
- 9	S1862-2A	NUT TIN	3	A
-10	0753000-1	DOUBLER	3	B
-11	0753000-13	DOUBLER	18	
-12	244-16D	RECEPTACLE	1	
-13	0753600-14	DOUBLER-FUEL STRAINER	1	
-14	0753600-17	DOUBLER-AFT LH	1	
	0753600-18	DOUBLER-AFT RH	1	
-15	0753600-20	RETAINER-UPPER COWL	2	A
-16	NAS697A4	NUTPLATE	14	A
-17	S1863-3	NUT TIN	15	B
	S1863-3	NUT TIN	3	A
-18	S1862-2	NUT TIN	2	B
	S1862-2	NUT TIN	1	
-19	0713700-1	BRACKET-COWL FLAP CONTROL	1	A
-20	0753602-1	DOUBLER	2	B
	0753602-1	DOUBLER	1	
-21	0753004-1	DOUBLER-LH	1	
	0753004-2	DOUBLER-RH	1	B
-22	0753102-1	STIFFENER ASSEMBLY-LH	1	B
-23	0753102-2	STIFFENER ASSEMBLY-RH	1	
	0753102-9	STIFFENER PLATE-UPPER	1	
	0753102-11	STIFFENER PLATE-LOWER	10	
-24	NAS680A06	NUTPLATE	1	A
-25	NAS696A08K	NUTPLATE	2	B
	NAS696A08K	NUTPLATE	1	A
-26	0753603-1	BRACKET ASSEMBLY-FILTER MOUNTING	2	
	NAS1068A3	NUTPLATE	14	B
-27	S1863-3A	NUT TIN	2	
-28	S1929-1	BUMPER-COWL FLAP		

A---182 SERIAL 18258506 THRU 18260290
A182 SERIAL A182-0097 THRU A182-0116
B---182 SERIAL 18260291 THRU 18261425
A182 SERIAL A182-0117 & ON

Fuselage (Cont)

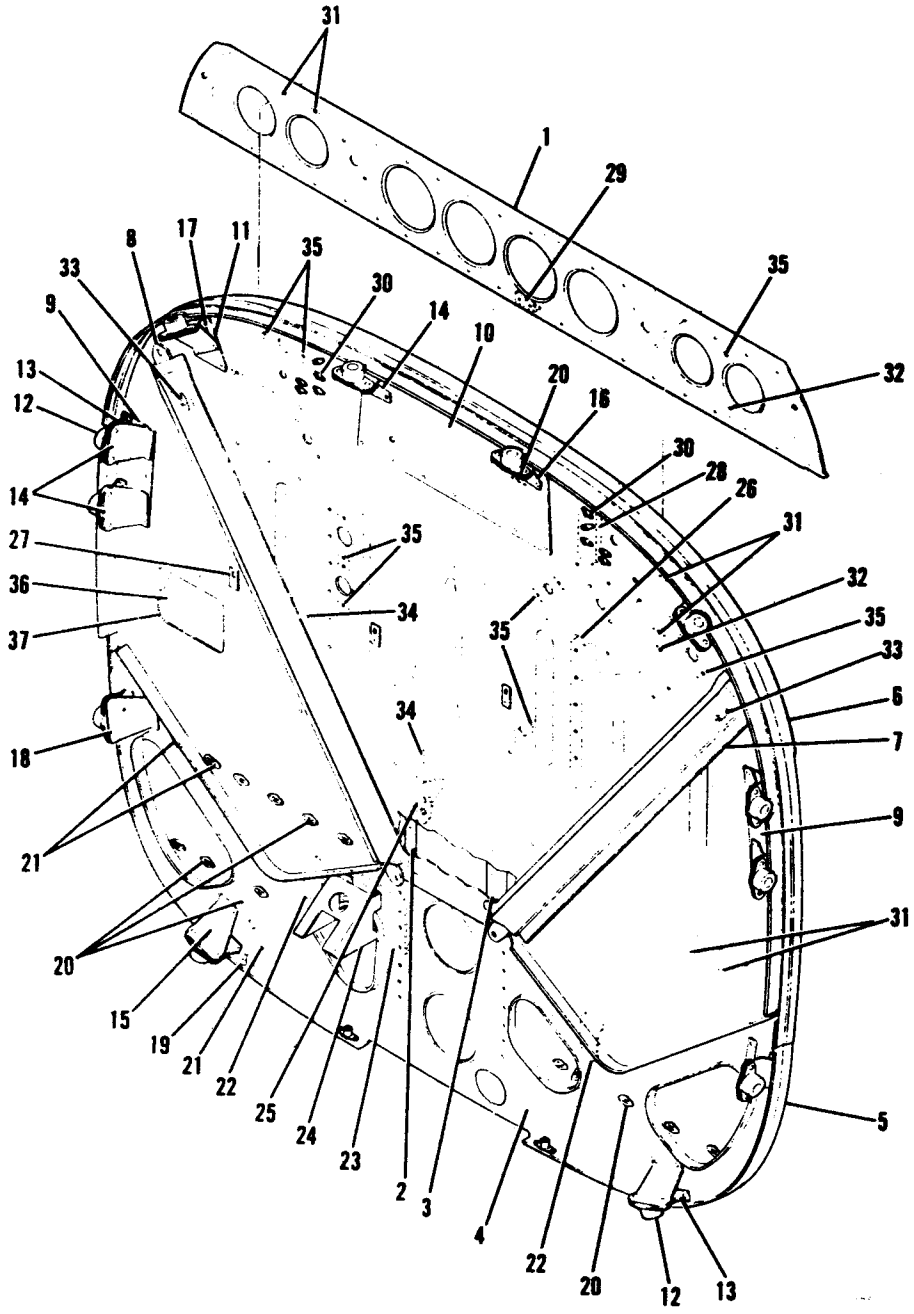

182 SERIAL 18261426 THRU 18262465

Figure 21B. Firewall Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
218-	0753103-2	FIREWALL ASSEMBLY	1	A
- 1	0753600-19	DOUBLER-FIREWALL	1	
- 2	0753600-11	ANGLE-SUPPORT RH	1	
- 3	0753600-12	ANGLE-SUPPORT LH	1	
- 4	0753105-3	DOUBLER ASSEMBLY-FORWARD	2	
	NAS680A08	NUTPLATE	1	
- 5	0753108-3	DOUBLER-AFT LH	1	
	0753108-4	DOUBLER-AFT RH	1	
- 6	0753106-8	SEAL ASSEMBLY-UPPER	1	
- 7	0753102-1	STIFFENER ASSEMBLY-LH	1	
- 8	0753102-2	STIFFENER ASSEMBLY-RH	1	
	0753102-9	STIFFENER PLATE-UPPER	1	
	0753102-10	STIFFENER PLATE-LOWER	2	
- 9	0753107-4	DOUBLER-SHOCKMOUNT	1	
-10	0753107-7	DOUBLER-SHOCKMOUNT	2	
-11	0753107-8	DOUBLER-SHOCKMOUNT	12	
-12	S2155-1	SHOCKMOUNT	12	
-13	0753029-1	BRACKET-SHOCKMOUNT	7	
-14	0753030-1	GUSSET-SHOCKMOUNT	1	
-15	0753030-2	GUSSET-SHOCKMOUNT	1	
-16	0753030-3	GUSSET-SHOCKMOUNT	1	
-17	0753030-6	GUSSET-SHOCKMOUNT RH	1	
	0753030-7	GUSSET-SHOCKMOUNT LH	1	
-18	0753030-8	GUSSET ASSEMBLY-SHOCKMOUNT	1	
	NAS680A08	NUTPLATE	2	
-19	S1929-1	BUMPER	17	
-20	S1863-3	NUT TIN	3	
-21	S1862-2	NUT TIN	2	
-22	0753602-1	DOUBLER	1	
-23	0753600-14	DOUBLER-FUEL STRAINER	1	
-24	0713757-1	BRACKET-FUEL STRAINER	1	
-25	0713700-1	BRACKET-COWL FLAP CONTROL	2	
-26	0760673-1	BRACKET-ELEVATOR PULLEY	3	
-27	0753000-13	DOUBLER	1	
-28	0753004-1	DOUBLER-LH	1	
	0753004-2	DOUBLER-RH	1	
-29	0762046-1	BRACKET-SPRING	10	
-30	NAS697A06L	NUTPLATE	6	
-31	NAS697A4K	NUTPLATE	2	
-32	NAS696A08K	NUTPLATE	2	
-33	NAS680A3	NUTPLATE	2	
-34	NAS697A08K	NUTPLATE	12	
-35	S1863-3A	NUT TIN	1	
-36	0753601-16	DUCT ASSEMBLY-HEATER	1	
-37	SEE FIG 70	VALVE ASSEMBLY-WARM AIR		
		A---182 SERIAL 18261426 THRU 18262465		

Fuselage (Cont)


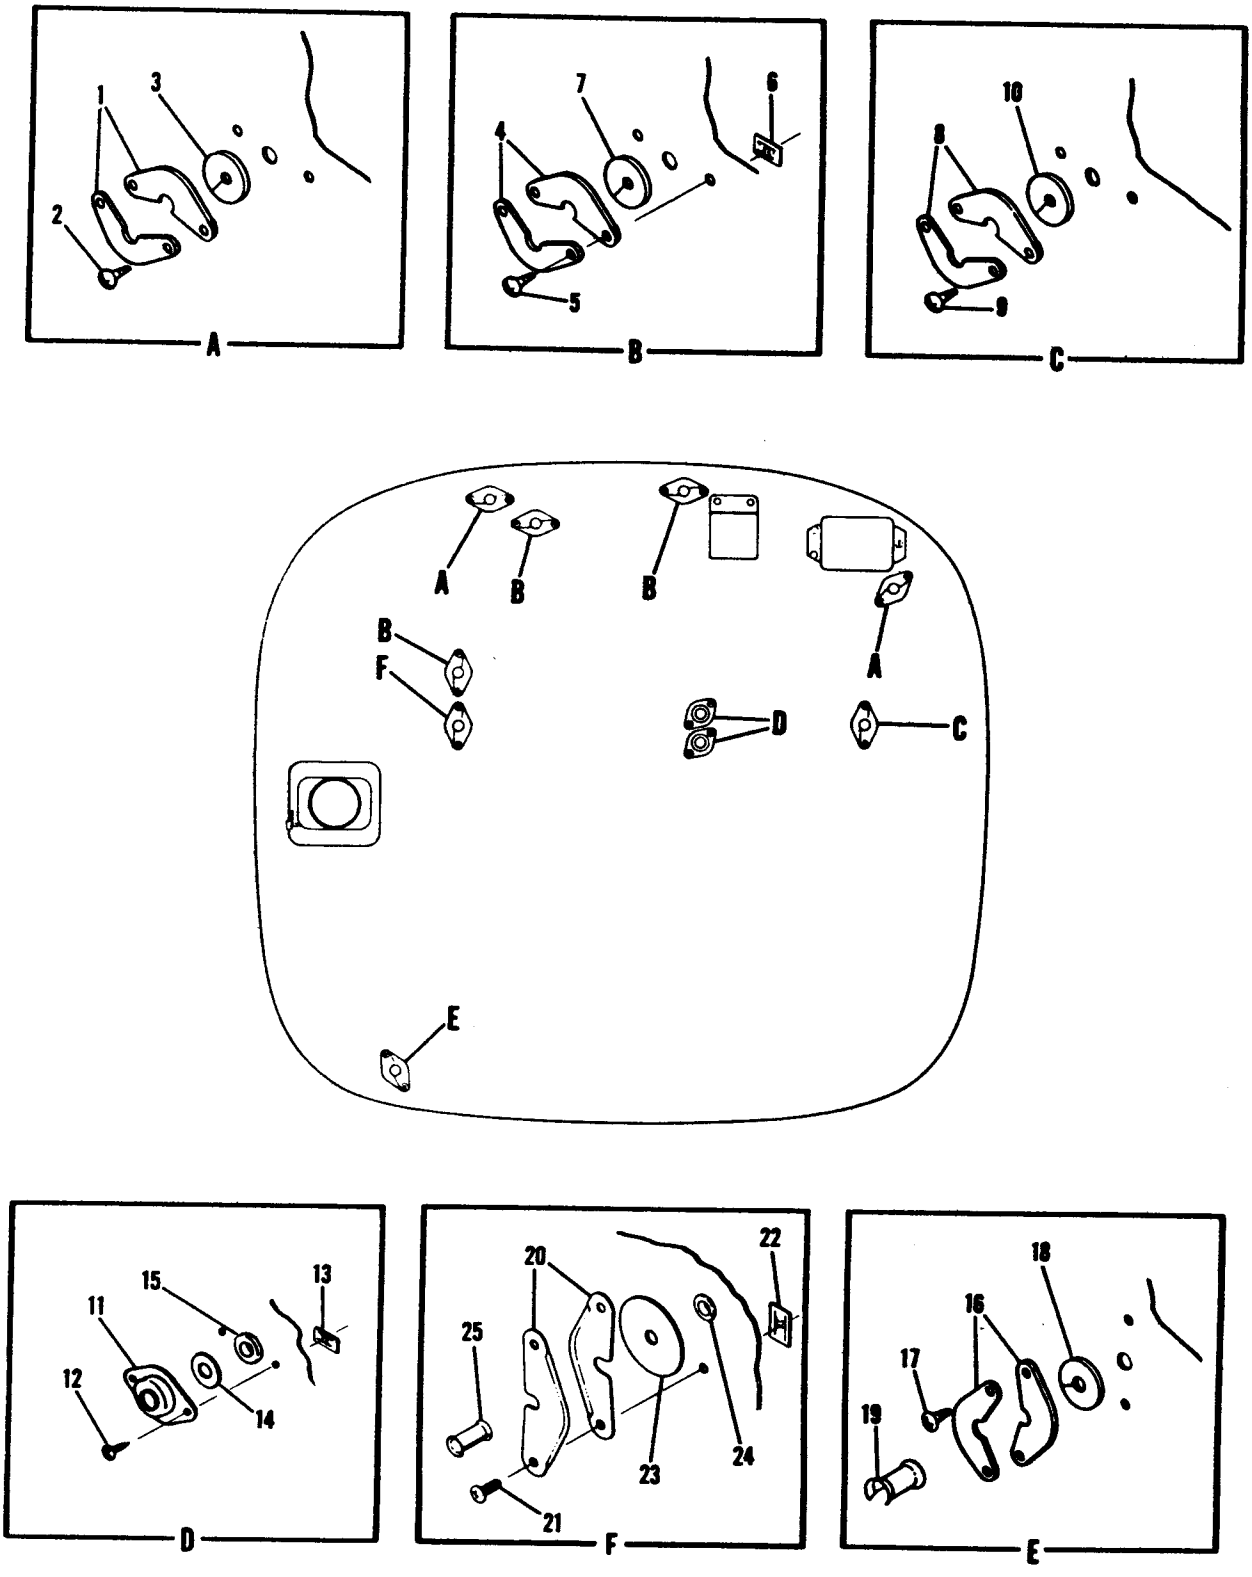


Figure 22. Firewall Grommets Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
22 -		FIREWALL GROMMETS INSTALLATION	NP	
- 1	S1095-3	SHIELD-FIREWALL GROMMET	4	
		ATTACHING PARTS		
- 2	S1021Z8-6	SCREW	1	
		---•---		
- 3	NAS557-6A	GROMMET-FIREWALL	2	
- 4	S1095-2	SHIELD-FIREWALL GROMMET	4	
		ATTACHING PARTS		
- 5	S1021Z8-6	SCREW	1	
- 6	NAS446-4-3	NUT	1	
		---•---		
- 7	NAS557-4A	GROMMET-FIREWALL	2	
- 8	S1095-1	SHIELD-FIREWALL GROMMET	2	
		ATTACHING PARTS		
- 9	S1021Z8-6	SCREW	1	
		---•---		
-10	NAS557-3A	GROMMET-FIREWALL	1	
-11	S352	SHIELD-FIREWALL GROMMET	2	
		ATTACHING PARTS		
-12	S1021Z8-6	SCREW	2	
-13	NAS446-4-3	NUT	2	
		---•---		
-14	S354-1	GROMMET-ASBESTOS	2	
-15	MS35489-11	GROMMET-FIREWALL	2	
-16	S1095-4	SHIELD-FIREWALL GROMMET	2	
		ATTACHING PARTS		
-17	S1021Z8-8	SCREW	2	
		---•---		
-18	NAS557-8A	GROMMET-FIREWALL	1	
-19	0713003-74	FAIRLEAD	1	
-20	S1095-1	SHIELD-FIREWALL	2	
		ATTACHING PARTS		
-21	S1021Z8-6	SCREW	2	
-22	NAS446-4-3	NUT	2	
		---•---		
-23	S354-5	GROMMET-ASBESTOS	1	
-24	NAS557-4A	GROMMET	1	
-25	0753003-1	BUSHING	1	

Fuselage (Cont)

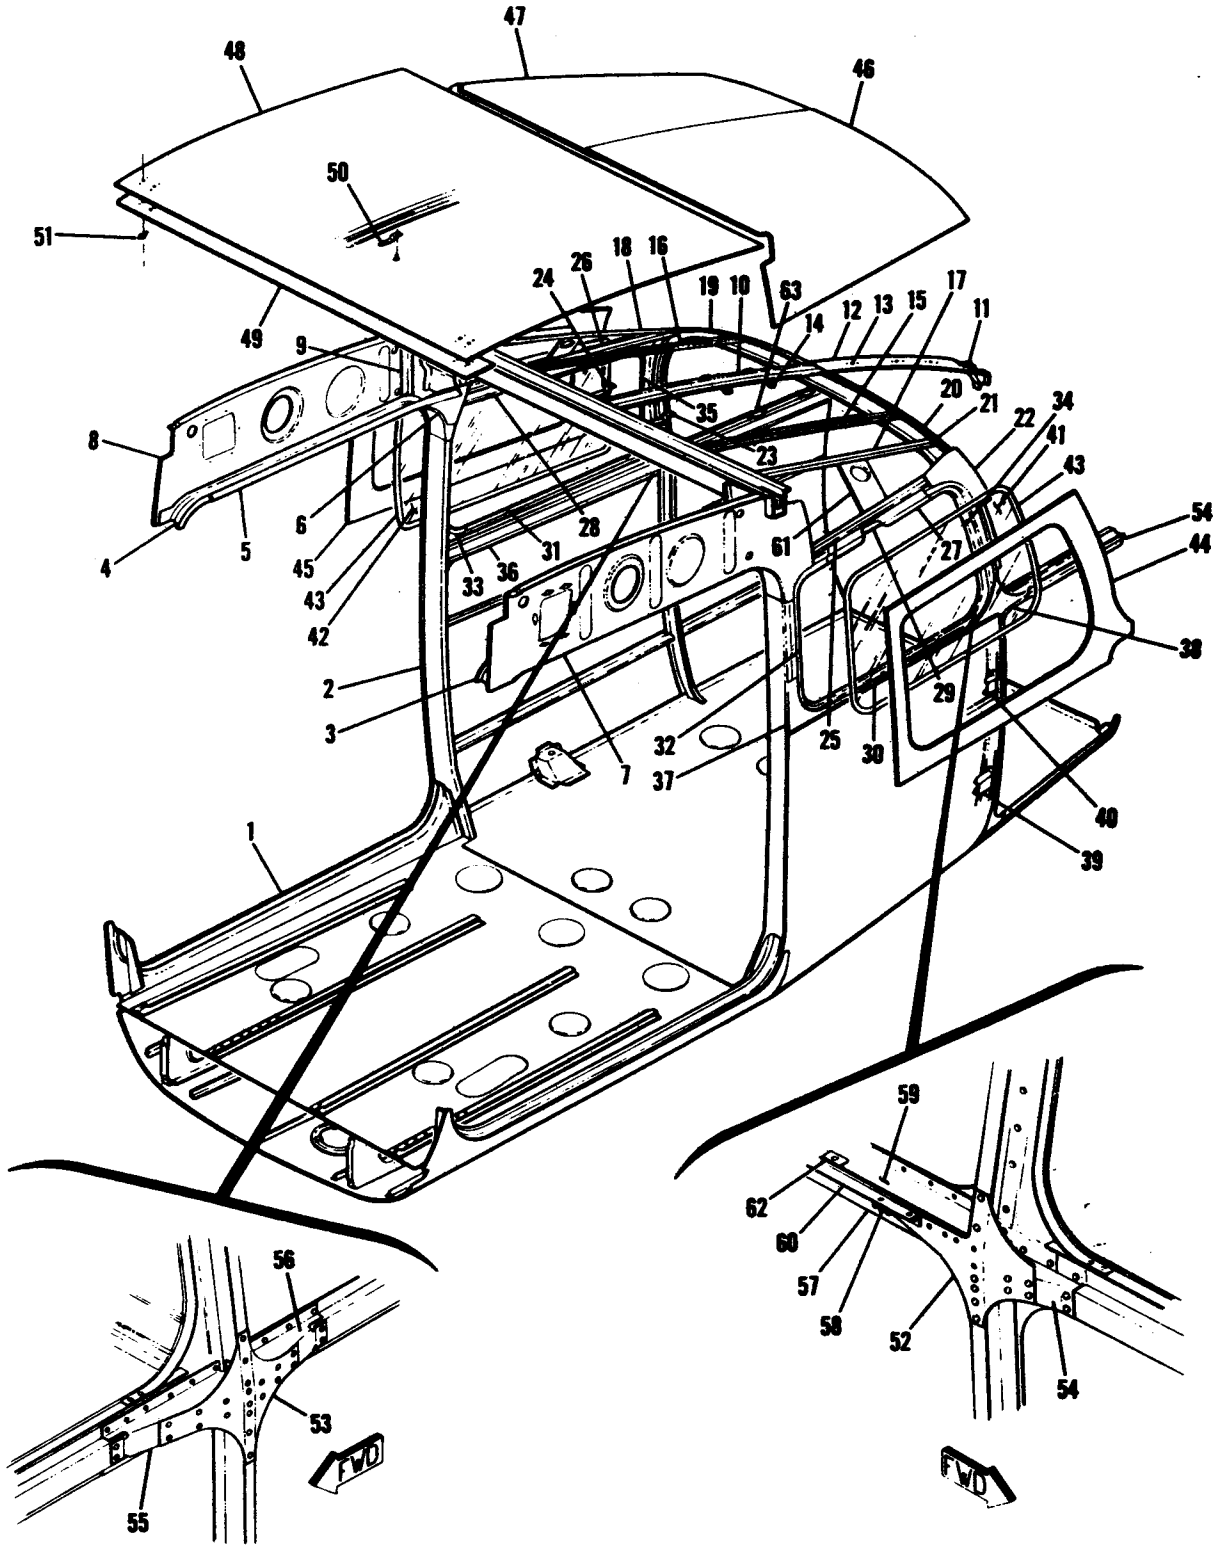

SERIAL 18254424 THRU 18255058

182 SERIAL 18253599 THRU 18255058

Figure 23. Center Cabin Section Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
23 -	0791160-1		CENTER CABIN SECTION ASSEMBLY	1	C
	0791160-2		CENTER CABIN SECTION ASSEMBLY	1	D
	0791160-5		CENTER CABIN SECTION ASSEMBLY	1	E
	0791160-6		CENTER CABIN SECTION ASSEMBLY	1	F
- 1	SEE FIG 25		LOWER CABIN SECTION ASSEMBLY	1	
- 2	SEE FIG 24		DOORPOST ASSEMBLY-REAR		
			ATTACHING PARTS		
	NAS178-8-8		RIVET-HI SHEAR	4	
	NAS178-8-7		RIVET-HI SHEAR	10	
			---*---		
- 3	0710602-1		SILL ASSEMBLY-UPPER CABIN DOOR LH	1	
- 4	0710602-2		SILL ASSEMBLY-UPPER CABIN DOOR RH	1	
- 5	0710630-2		RETAINER-HEADLINER RH	1	
	0710630-1		RETAINER-HEADLINER LH	1	
- 6	0710603-4		GUSSET-RETAINER RH	1	
	0710603-3		GUSSET-RETAINER LH	1	
- 7	0710601-1	*	BULKHEAD ASSEMBLY-UPPER CABIN LH	1	
- 8	0710601-2	*	BULKHEAD ASSEMBLY-UPPER CABIN RH	1	
- 8A	NAS680A08		NUTPLATE	6	
	0710629-1		STIFFENER-LH	1	
- 9	0710629-2		STIFFENER-RH	1	
-10	0711609-1		STRINGER ASSEMBLY-MAIN FORWARD	1	
-11	0711609-2		BRACKET ASSEMBLY	1	
-12	0711609-7		PLATE-STRINGER	1	
-13	NAS697A3		NUTPLATE	7	
-14	0711639-1		ANGLE	4	
-15	0711601-1		STIFFENER ASSEMBLY-LH	1	
-16	0711601-2		STIFFENER ASSEMBLY-RH	1	
	0411680		HANGER-HEADLINER	2	
-17	0711602-1		STIFFENER-TOP LH	1	
-18	0711602-2		STIFFENER-TOP RH	1	
-19	0712624-4		BULKHEAD-RH STA 92.00	1	C
	0712624-10		BULKHEAD-RH STA 92.00	1	E
-20	0712624-5		BULKHEAD-LH STA 92.00	1	
-21	0712623-1		BULKHEAD-REINFORCEMENT STA 92.00	1	
-22	0711630-1		PLATE-WINDOW REINFORCING LH	1	
	0711630-2		PLATE-WINDOW REINFORCING RH	1	
-23	0700108-1		BRACKET-TIARA MOUNTING LH	1	
-24	0700108-2		BRACKET-TIARA MOUNTING RH	1	
-25	0711603-1		STIFFENER-SIDE WINDOW UPPER LH	1	
-26	0711603-2		STIFFENER-SIDE WINDOW UPPER RH	1	
-27	0711633-1		RETAINER-SIDE WINDOW UPPER LH	1	
-28	0711633-2		RETAINER-SIDE WINDOW UPPER RH	1	
-29	0711634-1		HEADLINER RETAINER-SIDE WINDOW UPPER LH	1	
	0711634-2		HEADLINER RETAINER-SIDE WINDOW UPPER RH	1	
-30	0711626-1		RETAINER-SIDE WINDOW LOWER LH	1	
-31	0711626-2		RETAINER-SIDE WINDOW LOWER RH	1	
-32	0711615-1		RETAINER-SIDE WINDOW FORWARD LH	1	
-33	0711615-2		RETAINER-SIDE WINDOW FORWARD RH	1	
-34	0711615-3		RETAINER-SIDE WINDOW REAR LH	1	
-35	0711615-4		RETAINER-SIDE WINDOW REAR RH	1	
-36	0711617-2		CHANNEL STIFFENER-FUSELAGE SIDE RH	1	
	0711617-1		CHANNEL STIFFENER-FUSELAGE SIDE LH	1	
-37	0711610-1		PLATE-WINDOW GUSSET LH	1	
	0711610-2		PLATE-WINDOW GUSSET RH	1	
-38	0711618-1		BAGGAGE DOOR JAMB-FORWARD	1	
-39	0711628-1		HINGE BRACKET-BAGGAGE DOOR LOWER	1	
-40	0711628-2		HINGE BRACKET-BAGGAGE DOOR UPPER	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
23 -41	0711600-19	WINDOW-SIDE LH	1	A
	0711600-27	WINDOW-SIDE LH TINTED	1	B
-42	0711600-20	WINDOW-SIDE RH	1	A
	0711600-28	WINDOW-SIDE RH TINTED	1	B
-43	0711600-26	SEAL-WINDOW	2	
-44	0711600-9	SKIN-CABIN SIDE LH	1	
-45	0711600-8	SKIN-CABIN SIDE RH	1	
-46	0711600-5	SKIN-AFT CABIN TOP LH	1	
-47	0711600-4	SKIN-AFT CABIN TOP RH	1	
-48	0710605-1	CABIN TOP ASSEMBLY-FORWARD	1	
-49	1210020-3	CAP-SPAR	1	
-50	0411680	HANGER-HEADLINER	4	
-51	S1860-2A	NUTPLATE TIN	4	
-52	0711624-1	PLATE-REINFORCEMENT	1	C
	0711661-1	PLATE-REINFORCEMENT LH	1	E
-53	0711660-1	PLATE-REINFORCEMENT RH	1	E
-54	0711625-1	BRACKET-REINFORCEMENT LH SIDE	1	
-55	0711658-1	BRACKET-REINFORCEMENT FWD RH SIDE	1	E
-56	0711659-1	BRACKET-REINFORCEMENT AFT RH SIDE	1	E
-57	0711619-1	SILL ASSEMBLY-UPPER BAGGAGE DOOR	1	
-58	NAS680A08	NUTPLATE	1	
-59	0711641-1	STIFFENER-UPPER BAGGAGE DOOR SILL	1	
-60	0711622-1	ANGLE-BAGGAGE SHELF	1	C
-61	0700619-1	SUPPORT-DOME LIGHT LH	1	
	0700619-2	SUPPORT-DOME LIGHT RH	1	
-62	0711670-1	SUPPORT BRACKET-BAGGAGE SHELF FWD LH	1	E
-63	0700689-1	CLIP-BAGGAGE SHELF FWD RH	1	E
	0700689-2	CLIP-BAGGAGE SHELF AFT RH	1	E


NOTE. *WHEN ORDERING THIS PART PRIOR TO SERIAL 18253809 ALSO ORDER 0710636-1 PLATE & SIX AN515-8R8 SCREWS

A---182 SERIAL 18253599 THRU 18255058
B---182 SKYLANE SERIAL 18253599 THRU 18255058
C---182 SERIAL 18253599 THRU 18254423
D---182 SKYLANE SERIAL 18253599 THRU 18254423
E---182 SERIAL 18254424 THRU 18255058
F---182 SKYLANE SERIAL 18254424 THRU 18255058

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
23A-	0791160-8		CENTER CABIN SECTION ASSEMBLY	1	A
	0791160-10		CENTER CABIN SECTION ASSEMBLY	1	C
	0791160-12		CENTER CABIN SECTION ASSEMBLY	1	D
	0791160-13	*	CENTER CABIN SECTION ASSEMBLY	1	H
	0791160-14		CENTER CABIN SECTION ASSEMBLY	1	S
	0791160-17		CENTER CABIN SECTION ASSEMBLY	1	T
	0791160-18		CENTER CABIN SECTION ASSEMBLY WITH SKYLIGHT	1	T
			CENTER CABIN SECTION ASSEMBLY	1	U
			CENTER CABIN SECTION ASSEMBLY WITH SKYLIGHT	1	U
			CENTER CABIN SECTION ASSEMBLY	1	
- 1	SEE FIG 25		LOWER CABIN SECTION ASSEMBLY	1	
- 2	SEE FIG 24		DOORPOST ASSEMBLY-REAR	1	
			ATTACHING PARTS	4	V
	NAS178-8-8		RIVET-HI SHEAR	10	V
	NAS178-8-7		RIVET-HI SHEAR	16	U
	NAS1054-8-10		RIVET-HI SHEAR	16	U
	NAS179-8		COLLAR	1	
			---*---	1	
- 3	0710602-1		SILL ASSEMBLY-UPPER CABIN DOOR LH	1	M
- 4	0710602-2		SILL ASSEMBLY-UPPER CABIN DOOR RH	1	M
- 5	0710630-2		RETAINER-HEADLINER RH	1	
	0710630-1		RETAINER-HEADLINER LH	1	
- 6	0710603-4		GUSSET-RETAINER RH	1	E
	0710603-3		GUSSET-RETAINER LH	1	E
- 7	0710601-11		BULKHEAD ASSEMBLY-UPPER CABIN LH WHEN EXHAUSTED USE 0710601-15	1	F
	0710601-15		BULKHEAD ASSEMBLY-UPPER CABIN LH	1	U
	0710601-29		BULKHEAD ASSEMBLY-UPPER CABIN LH	1	E
- 8	0710601-12		BULKHEAD ASSEMBLY-UPPER CABIN RH WHEN EXHAUSTED USE 0710601-16	1	F
	0710601-16		BULKHEAD ASSEMBLY-UPPER CABIN RH	1	U
	0710601-30		BULKHEAD ASSEMBLY-UPPER CABIN RH	6	E
- 9	NAS680A08		NUTPLATE	1	
-10	0710629-2		STIFFENER-RH	1	
	0710629-1		STIFFENER-LH	1	E
-11	0710636-3		PLATE-SPEAKER MOUNTING	1	
-12	S1050-1		GROMMET 5.64 IN LG BULK ITEM REF S1050-1-5.64	1	G
-13	0710605-1		CABIN TOP ASSEMBLY-FORWARD	1	H
	0710605-10	*	CABIN TOP ASSEMBLY-FORWARD	1	L
-14	0710605-200		CABIN TOP ASSEMBLY-FORWARD	1	N
-15	0701017-200		CABIN TOP ASSEMBLY SKYLIGHT-FORWARD	1	J
-16	1210020-3		CAP-SPAR	1	K
-17	1210020-10		CAP-SPAR	4	P
-18	0411680		HANGER-HEADLINER	4	G
-19	S1860-2A		NUTPLATE TIN	4	R
	NAS680A08		NUTPLATE	2	N
-20	0411174-3		FRAME USED ON SKYLIGHT ASSEMBLY ONLY	2	N
-21	0414014-1		BRACKET USED ON SKYLIGHT ASSEMBLY ONLY	12	N
-22	0414014-2		BRACKET USED ON SKYLIGHT ASSEMBLY ONLY	1	N
-23	0713951-3		BRACKET-LH USED ON SKYLIGHT ASSEMBLY ONLY	1	N
	0713951-4		BRACKET-RH USED ON SKYLIGHT ASSEMBLY ONLY	2	W
-24	0511797-1		WINDOW USED ON SKYLIGHT ASSEMBLY ONLY	2	X
	0511797-2		WINDOW USED ON SKYLIGHT ASSEMBLY ONLY	2	N
-25	S1055-1		CHANNEL USED ON SKYLIGHT ASSEMBLY ONLY 45.65 IN LG BULK ITEM REF S1055-1-45.65	1	L
-26	0711781-1		BRACKET-OVERHEAD CONSOLE	1	L
	0711781-2		BRACKET-OVERHEAD CONSOLE	1	
			ATTACHING PARTS	2	
	AN507-832R8		SCREW	1	L
			---*---	4	
-27	1211077-5		SUPPORT ASSEMBLY-SPEAKER	2	
	1211083-1		SPACER	1	U
	NAS697A08		NUTPLATE	1	L
-27A	0711683-1		BRACKET ASSEMBLY-DOMELIGHT	2	
-28	1211076-1		BRACKET ASSEMBLY-SUPPORT	2	
	1211089-1		BRACKET	3	L
	NAS696A08		NUTPLATE	1	L
	NAS697A08		NUTPLATE	1	L
-29	1215012-3		SUPPORT-LH	1	
	1215012-2		SUPPORT-RH	1	
-30	0710653-1		CLAMP-BRACKET	1	
-31	0711800-9		SKIN-CABIN TOP AFT	1	
-32	0711677-1		STIFFENER-CABIN TOP LH	1	
-33	0711677-2		STIFFENER-CABIN TOP RH	1	
-34	0711678-3		STIFFENER-CABIN TOP LH	1	
-35	0711678-4		STIFFENER-CABIN TOP RH	1	

CONTINUED ON NEXT PAGE

Fuselage (Cont)

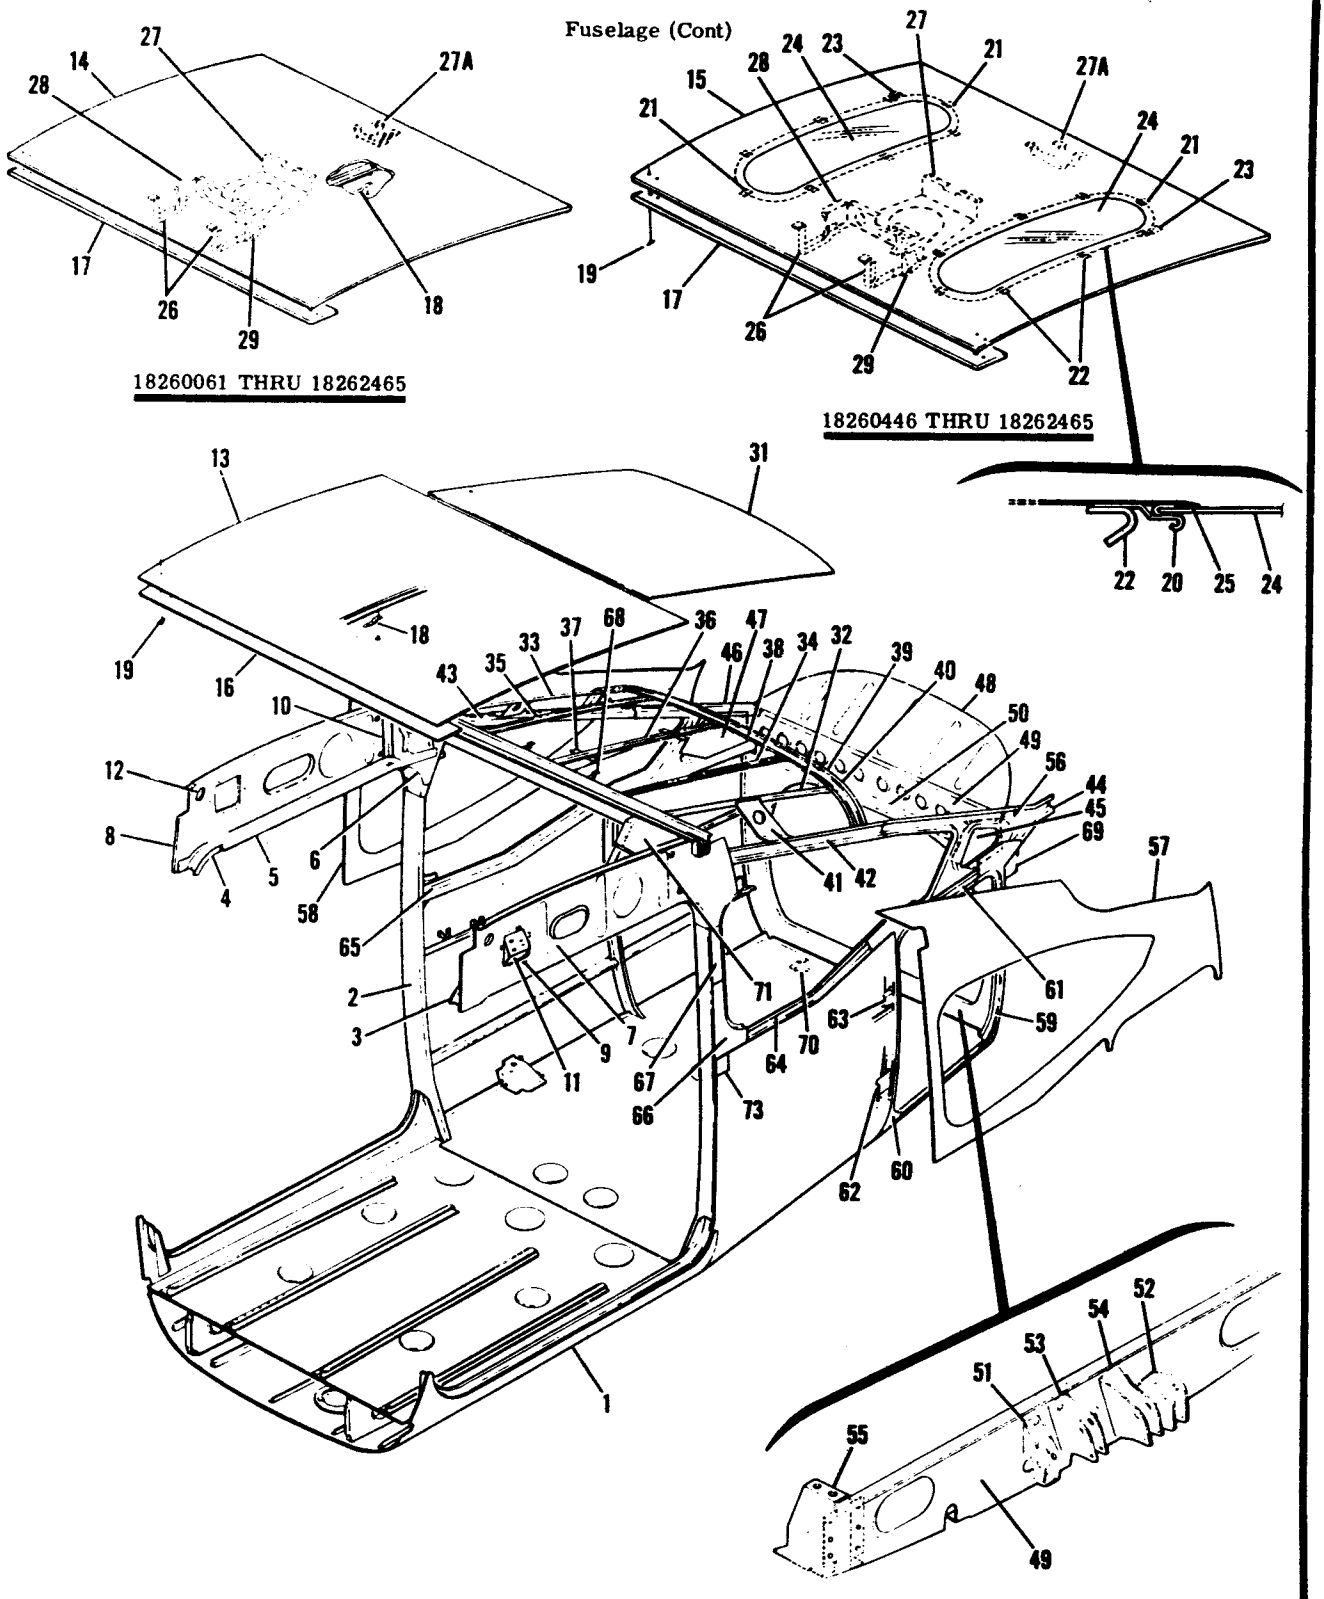

182 SERIAL 18255059 THRU 18262465

Figure 23A. Center Cabin Section Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
23A-36	0711684-2	STIFFENER ASSY-CABIN TOP CENTER	1	M
	0711684-1	STIFFENER-CABIN TOP CENTER	1	N
-37	0411680	HANGER	2	
-38	0711679-3	STIFFENER	1	
-39	0711681-1	RETAINER-REAR WINDOW	1	
-40	0700703-1	RETAINER-HEADLINER	1	M
-41	0711686-1	SUPPORT-LIGHT ASSEMBLY-LH	1	V
	0711686-2	SUPPORT-LIGHT ASSEMBLY-RH	1	V
-42	0712648-1	STRINGER-LH	1	
-43	0712648-2	STRINGER-RH	1	
-44	0711676-5	STIFFENER-LH WHEN EXHAUSTED USE 0711676-7	1	M
	0711676-7	STIFFENER ASSEMBLY-LH	1	N
	NAS697A3K	NUTPLATE	1	
	0711676-3	ANCHOR ASSEMBLY-CHAIN	1	
	NAS697A08	NUTPLATE	1	N
-45	0711793-1	PLATE ASSEMBLY	1	
	0711793-5	PAD	1	
	NAS680A4	NUTPLATE	1	M
-46	0711676-2	STIFFENER-RH WHEN EXHAUSTED USE 0711676-6	1	N
	0711676-6	STIFFENER-RH	1	
	NAS697A3K	NUTPLATE	1	N
-47	0711793-2	PLATE ASSEMBLY	1	
	0711793-6	PAD	1	
	NAS680A4	NUTPLATE	1	
-48	0712625-4	BULKHEAD-CANTED	1	M
-49	0712625-5	BULKHEAD ASSEMBLY-STA. 110.00	1	T
	0712505-1	BULKHEAD ASSEMBLY-STA. 110.00	1	U
	0712505-3	BULKHEAD ASSEMBLY-STA. 110.00	1	M
-50	0712625-3	ANGLE-BAGGAGE SHELF STIFFENER	1	
-51	0412467	BRACKET-PULLEY	1	
-52	0512160-2	BRACKET-PULLEY		
		ATTACHING PARTS		
	AN3-3A	BOLT	1	
	MS21044N3	NUT	1	
		---*---		
-53	0712638-3	BRACKET-PULLEY	1	
		ATTACHING PARTS		
	AN3-3A	BOLT	1	
	MS21044D3	NUT	1	
		---*---		
-54	0712637-2	BRACKET	1	
		ATTACHING PARTS		
	AN3-3A	BOLT	1	
	MS21044D3	NUT	1	
		---*---		
	0712639-1	BRACKET-PULLEY	1	
		ATTACHING PARTS		
	AN3-3A	BOLT	1	
	MS21044N3	NUT	1	
		---*---		
-55	0712757-2	BRACKET ASSEMBLY-BAGGAGE NET RH	1	N
	0712757-1	BRACKET ASSEMBLY-BAGGAGE NET LH	1	N
	0712757-5	SPACER	1	
	NAS696A3K	NUTPLATE USED ON 0712757-2 ONLY	1	
	NAS697A4K	NUTPLATE USED ON 0712757-1 ONLY	1	
-56	0712654-1	CLIP-LH	1	
	0712654-2	CLIP-RH	1	
-57	0711800-5	SKIN-CABIN SIDE LH	1	
-58	0711800-6	SKIN-CABIN SIDE RH	1	
-59	0711618-4	BAGGAGE DOOR JAMB-AFT	1	
-60	0711618-3	BAGGAGE DOOR JAMB-FORWARD	1	
-61	0711673-1	BAGGAGE DOOR SILL-UPPER	1	
-62	0711628-1	HINGE BRACKET-LOWER	1	
-63	0711628-2	HINGE BRACKET-UPPER	1	A
-64	0711671-1	STRINGER-LH	1	B
	0711671-3	STRINGER-LH	1	A
-65	0711671-2	STRINGER-RH	1	B
	0711671-4	STRINGER-RH		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
23A-66	0711610-1	GUSSET PLATE-LH	1	
	0711610-2	GUSSET PLATE-RH	1	
-67	0711615-1	WINDOW RETAINER-FORWARD LH	1	
	0711615-2	WINDOW RETAINER-FORWARD RH	1	
-68	0700108-1	BRACKET-TIARA MOUNTING LH	1	
	0700108-2	BRACKET-TIARA MOUNTING RH	1	
-69	0700708-1	BRACKET-BAGGAGE NET LH	1	M
	0700708-2	BRACKET-BAGGAGE NET RH	1	M
-70	0700710-1	BRACKET-TIE DOWN RH	1	M
	0700710-2	BRACKET-TIE DOWN LH	1	M
		ATTACHING PARTS		
	AN515-8R5	SCREW	3	
	NAS679A08	NUT	3	
		---*---		
-71	1210032-1	VIBRATION DAMPNER-LH	1	V
	1210032-2	VIBRATION DAMPNER-RH	1	V
	1210032-9	VIBRATION DAMPENER ASSY-LH	1	U
	1210032-8	VIBRATION DAMPENER ASSY-RH	1	U
	NAS696A08	NUTPLATE	1	U
	NAS697A08	NUTPLATE	3	U
-72	0711776-1	STIFFENER-ANTENNA	1	D
	0711776-2	STIFFENER-ANTENNA	1	D
-73	0711701-1	BUMPER-LATCH BOLT	2	B

NOTE. *WHEN ORDERING THIS PART FOR AIRCRAFT SERIALS 18259306 THRU 18260040 ALSO ORDER 0720615-1 LH & 0720615-2 RH FILLET.

A---182 SERIAL 18255059 THRU 18256684
B---182 SERIAL 18256685 THRU 18262465
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18256685 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
D---182 SERIAL 18257626 THRU 18259305
A182 SERIAL A182-0057 THRU A182-0116
E---182 SERIAL 18255059 THRU 18258215
A182 SERIAL A182-0001 THRU A182-0096
F---182 SERIAL 18258216 THRU 18260825
A182 SERIAL A182-0097 THRU A182-0136
G---182 SERIAL 18255059 THRU 18259305
A182 SERIAL A182-0001 THRU A182-0116
H---182 SERIAL 18259306 THRU 18260055
J---182 SERIAL 18255059 THRU 18260039
A182 SERIAL A182-0001 THRU A182-0116
K---182 SERIAL 18260040 THRU 18262465
A182 SERIAL A182-0117 & ON
L---182 SERIAL 18260056 THRU 18262465
A182 SERIAL A182-0117 & ON
M---182 SERIAL 18255059 THRU 18260445
N---182 SERIAL 18260446 THRU 18262465
O---182 SERIAL 18260351 THRU 18262465
P---182 SERIAL 18255059 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
R---182 SERIAL 18259306 THRU 18262465
S---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
T---182 SERIAL 18260446 THRU 18260825
U---182 SERIAL 18260826 THRU 18262465
A182 SERIAL A182-0137 & ON
V---182 SERIAL 18255059 THRU 18260825
A182 SERIAL A182-0001 THRU A182-0136
W---182 SERIAL 18260446 THRU 18260549
X---182 SERIAL 18260550 THRU 18262465

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
24 -	0711604-205	BULKHEAD ASSEMBLY-REAR DOORPOST	1	A
	0711604-206	BULKHEAD ASSEMBLY-REAR DOORPOST	1	C
	0711604-209	BULKHEAD ASSEMBLY-REAR DOORPOST WEU 0711604-210	1	D
	0711604-210	BULKHEAD ASSEMBLY-REAR DOORPOST	1	K
	0711604-215	BULKHEAD ASSEMBLY-REAR DOORPOST	1	L
		ATTACHING PARTS	4	
- 1	NAS178-8-8	RIVET-HI SHEAR	10	
- 2	NAS178-8-7	RIVET-HI SHEAR		
		---•---	1	A
- 3	0711604-201	CHANNEL ASSEMBLY-REAR DOORPOST LH	1	C
	0711604-203	CHANNEL ASSEMBLY-REAR DOORPOST LH	1	F
	0711604-207	CHANNEL ASSEMBLY-REAR DOORPOST LH WEU 0711604-211	1	K
	0711604-211	CHANNEL ASSEMBLY-REAR DOORPOST LH	1	L
	0711604-213	CHANNEL ASSEMBLY-REAR DOORPOST LH	1	A
- 4	0711604-202	CHANNEL ASSEMBLY-REAR DOORPOST RH	1	C
	0711604-204	CHANNEL ASSEMBLY-REAR DOORPOST RH	1	F
	0711604-208	CHANNEL ASSEMBLY-REAR DOORPOST RH WEU 0711604-212	1	K
	0711604-212	CHANNEL ASSEMBLY-REAR DOORPOST RH	1	L
	0711604-214	CHANNEL ASSEMBLY-REAR DOORPOST RH	2	
- 5	S1863-3	NUT TIN	2	C
- 6	NAS687A3	NUTPLATE	3	
- 7	S1863-2	NUTPLATE TIN	1	A
- 8	0711654-2	BRACKET-SEAT SUPPORT RH	1	B
	0711665-2	BRACKET-SEAT SUPPORT RH	1	A
	0711654-1	BRACKET-SEAT SUPPORT LH	1	B
	0711665-1	BRACKET-SEAT SUPPORT LH	1	
- 9	0711604-11	GUSSET-LH	1	
	0711604-12	GUSSET-RH		

CONTINUED ON NEXT PAGE

Fuselage (Cont)


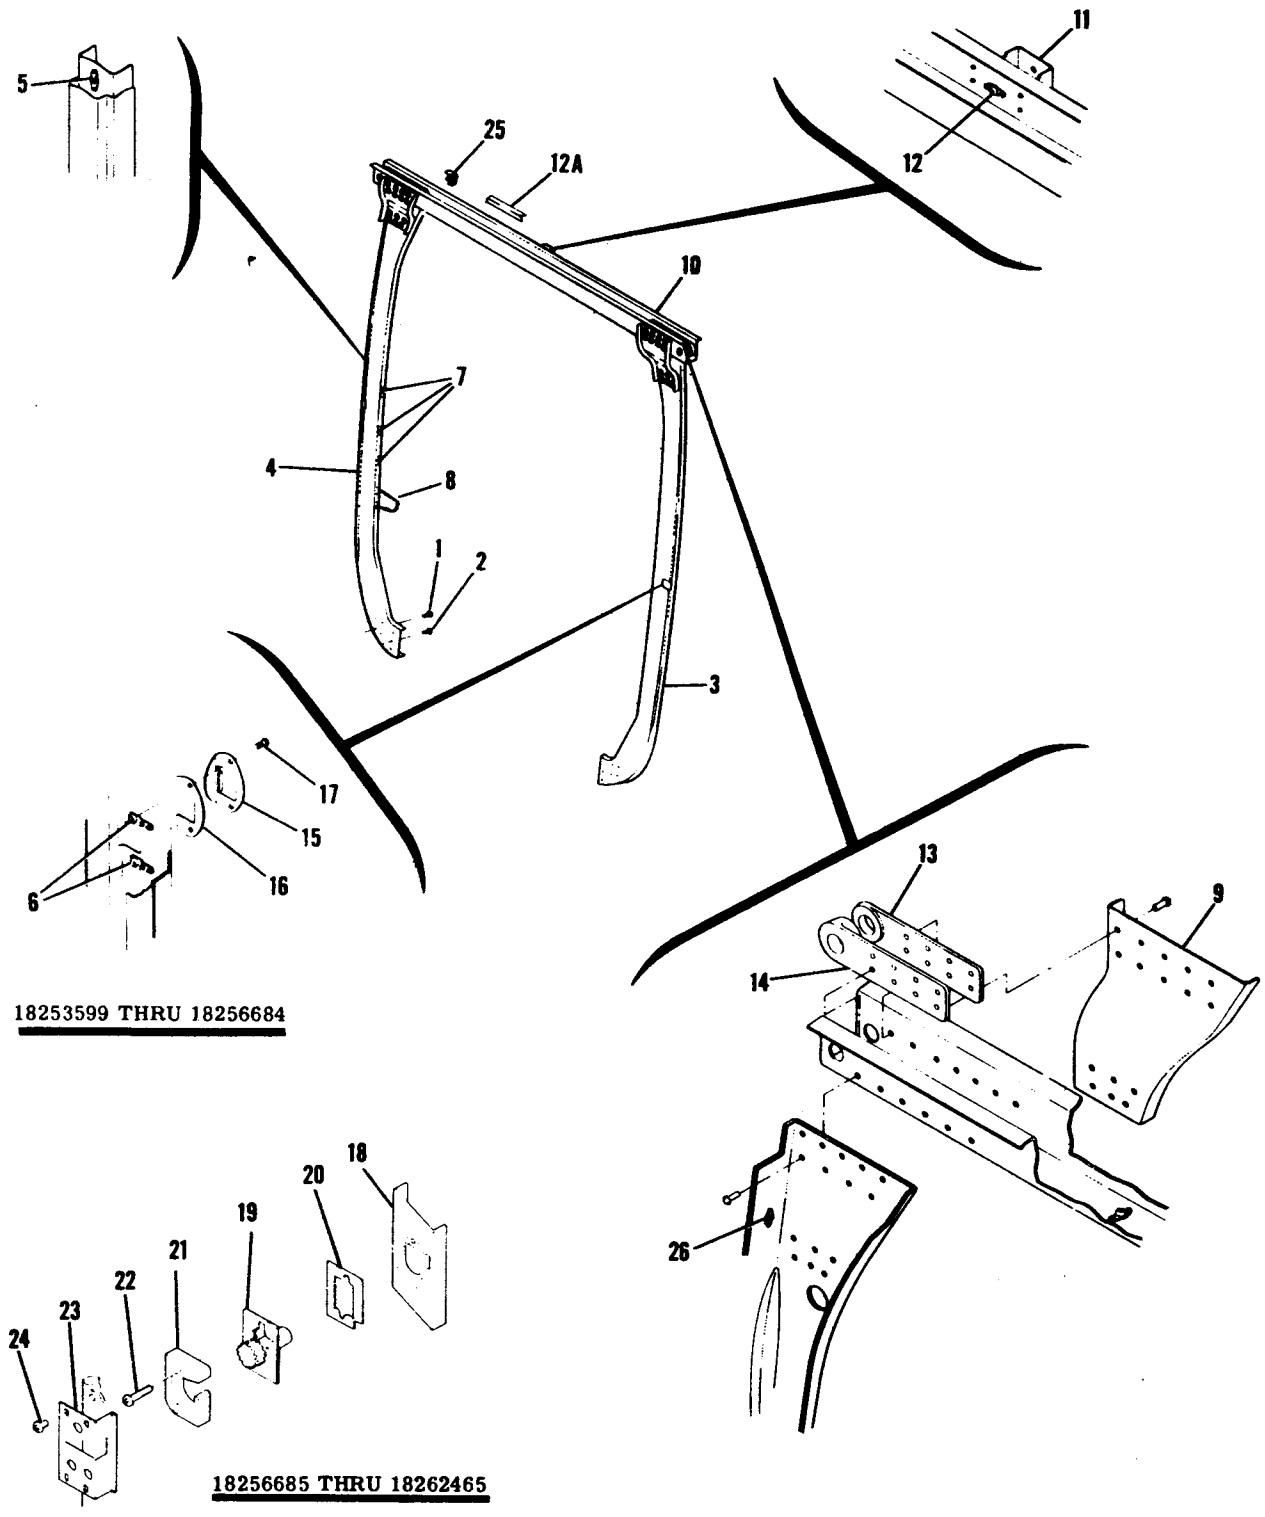



Figure 24. Rear Doorpost Bulkhead Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
24 -10	0711605-3	SPAR ASSEMBLY-REAR	1	F
	0711605-200	SPAR ASSEMBLY-REAR WEU 0711605-201	1	K L
	0711605-201	SPAR ASSEMBLY-REAR	1	
-11	0512137	BRACKET-PULLEY	2	
-12	NAS680A3	NUTPLATE	1	
	NAS680A08	NUTPLATE	1	G
-12A	0762047-2	GUIDE	1	H
-13	0711606-1	FITTING-SPAR AFT LH WEU 0711606-5	1	/ J
	0711606-5	FITTING-SPAR AFT LH	1	H
	0711606-2	FITTING-SPAR AFT RH WEU 0711606-6	1	J
	0711606-6	FITTING-SPAR AFT RH	1	
-14	0422229-12	FITTING-SPAR FORWARD LH	1	
	0422229-13	FITTING-SPAR FORWARD RH	2	E
-15	0711024-4	STRIKER PLATE		
		ATTACHING PARTS	1	E
-16	0711024-2	SHIM	1	E
-17	AN525-10R8	SCREW		
		---*---	1	M
-18	0711604-25	DOUBLER ASSEMBLY-LH DOORPOST WEU 0711604-48	1	L
	0711604-48	DOUBLER ASSEMBLY-LH DOORPOST	1	M
	0711604-26	DOUBLER ASSEMBLY-RH DOORPOST WEU 0711604-49	1	L
	0711604-49	DOUBLER ASSEMBLY-RH DOORPOST	3	D
	NAS686A3	NUTPLATE	1	D
-19	0711694-15	CLUTCH ASSEMBLY-LH DOORPOST	1	D
	0711694-16	CLUTCH ASSEMBLY-RH DOORPOST	1	D
-20	0711695-10	SHIM	1	D
-21	0711695-9	GUIDE		
		ATTACHING PARTS	3	D
-22	NAS221-15	SCREW		
		---*---	1	M
-23	0711695-7	COVER-LH CLUTCH ASSEMBLY	1	L
	0711695-11	COVER-LH CLUTCH ASSEMBLY	1	M
	0711695-8	COVER-RH CLUTCH ASSEMBLY	1	L
	0711695-12	COVER-RH CLUTCH ASSEMBLY		
		ATTACHING PARTS	4	D
-24	NAS221-5	SCREW		
		---*---	1	G
-25	0762044-1	BRACKET	1	G
-26	NAS680A4	NUTPLATE		


A---182 SERIAL 18253599 THRU 18254423
B---182 SERIAL 18254424 THRU 18262465
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18254424 THRU 18256684
D---182 SERIAL 18256685 THRU 18262465
A182 SERIAL A182-0001 & ON
E---182 SERIAL 18253599 THRU 18256684
F---182 SERIAL 18256685 THRU 18260445
A182 SERIAL A182-0001 & ON
G---182 SERIAL 18260446 THRU 18262465
H---182 SERIAL 18253599 THRU 18260271
A182 SERIAL A182-0001 THRU A182-0116
J---182 SERIAL 18260272 THRU 18262465
A182 SERIAL A182-0117 & ON
K---182 SERIAL 18260446 THRU 18260825
L---182 SERIAL 18260826 THRU 18262465
M---182 SERIAL 18256685 THRU 18260825
A182 SERIAL A182-0001 THRU A182-0136

Fuselage (Cont)

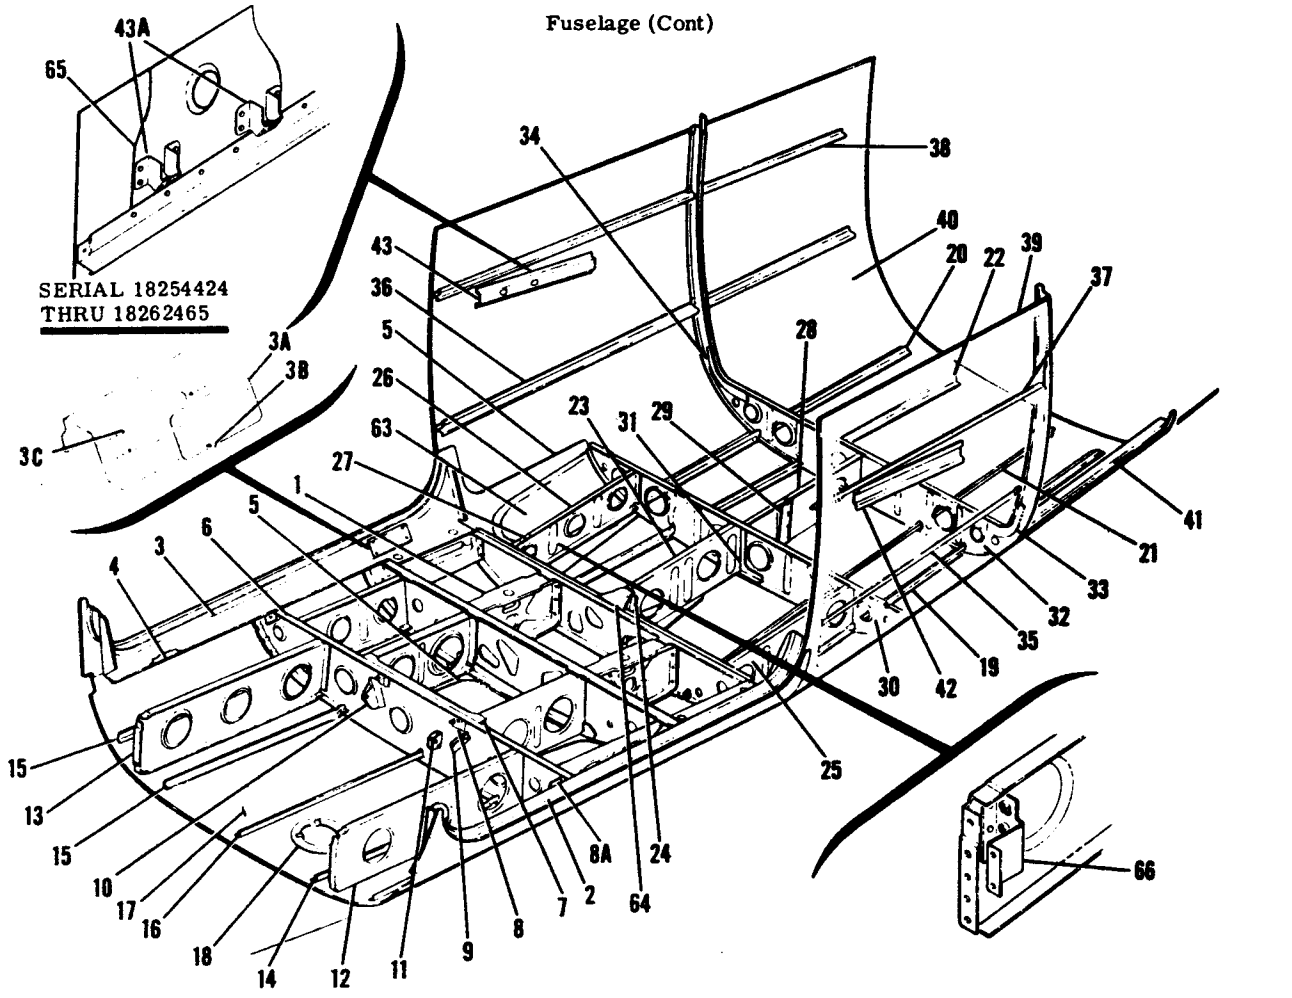

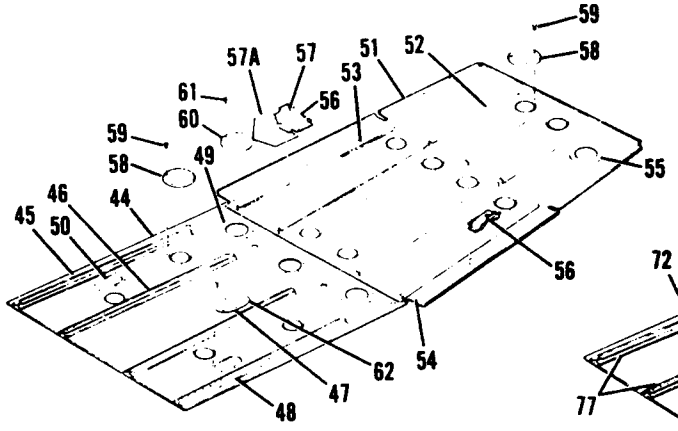

SERIAL 18253599 THRU 18261425

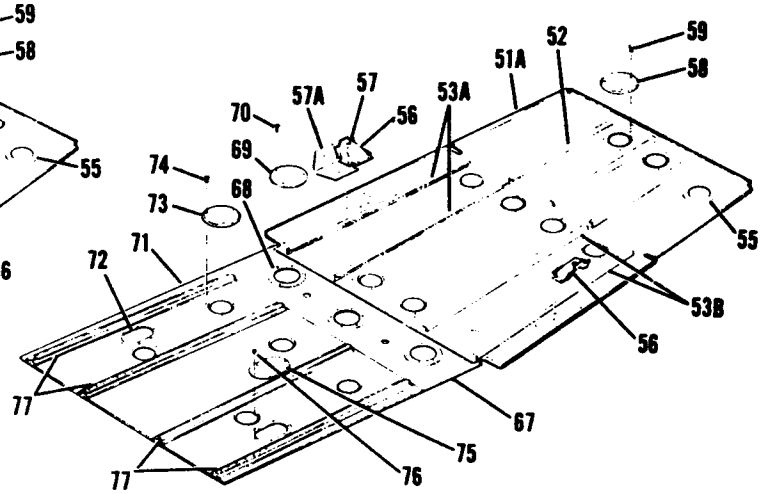

18261426 THRU 18262465

182 SERIAL 18253599 THRU 18262465

Figure 25. Lower Cabin Section Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
25 -	0791160-3	LOWER CABIN SECTION ASSEMBLY	1	A
	0791160-7	LOWER CABIN SECTION ASSEMBLY	1	C
	0791160-9	LOWER CABIN SECTION ASSEMBLY	1	G
	0791160-11	LOWER CABIN SECTION ASSEMBLY	1	J
	0791160-16	LOWER CA3IN SECTION ASSEMBLY	1	AA
		LOWER CABIN SECTION ASSEMBLY	1	Z
- 1	SEE FIG 26	BULKHEAD ASSEMBLY-LANDING GEAR STA 45.00 TO STA 65.33	1	N
	SEE FIG 26A	BULKHEAD ASSEMBLY-LANDING GEAR STA 45.00 TO STA 65.33	1	P
	0710705-1	SHIM-DOUBLER TO SKIN STA 65.33 1 LH & 1 RH	2	S
- 2	0710606-1	SILL ASSEMBLY-LOWER CABIN DOOR LH	1	AB
	0710606-9	SILL ASSEMBLY-LOWER CABIN DOOR LH	1	W
- 3	0710606-2	SILL ASSEMBLY-LOWER CABIN DOOR RH	1	AB
	0710606-10	SILL ASSEMBLY-LOWER CABIN DOOR RH	1	W
- 3A	0710606-7	COVER	1	AB
		ATTACHING PARTS		
- 3B	AN515-8R5	SCREW	4	AB
- 3C	NAS682A08	NUTPLATE	4	AB
		---*---		
- 4	0710612-4	SUPPORT-LOWER DOOR SILL RH	1	AB
	0710612-6	SUPPORT-LOWER DOOR SILL RH	1	W
	0710612-3	SUPPORT-LOWER DOOR SILL LH	1	AB
	0710612-5	SUPPORT-LOWER DOOR SILL LH	1	W
- 5	0710600-3	DOUBLER-FUSELAGE CENTER SECTION	1	AB
	0710700-5	DOUBLER-FUSELAGE CENTER SECTION	1	W
- 6	0710610-1	BULKHEAD ASSY-STA 45.0 WEU 0710610-4	1	L
	0710610-4	BULKHEAD ASSY-STA 45.0	1	R
	0710610-7	BULKHEAD ASSY-STA 45.0	1	P
- 7	0710610-3	REINFORCEMENT-STA 45.00 BULKHEAD	1	L
	0710610-6	REINFORCEMENT-STA 45.0	1	K
- 8	0710613-1	SUPPORT-SAFETY BELT FITTING	2	
- 8A	0710656-1	SUPPORT ASSY-LH	1	K
	0710656-2	SUPPORT ASSY-RH	1	K
	NAS698A3	NUTPLATE	1	
	NAS697A3	NUTPLATE	4	K
	NAS680A3	NUTPLATE	2	R
	0710657-1	SUPPORT	1	K
	0710657-2	BRACE	1	K
	0713702-1	CLIP-BRAKE LINE SUPPORT LH SIDE ONLY	1	P
- 9	0712638-2	BRACKET-UP ELEVATOR PULLEY LH	1	
-10	0712639-3	BRACKET-DOWN ELEVATOR PULLEY RH	1	
		ATTACHING PARTS		
	AN3-3A	BOLT	1	
	MS21044N3	NUT	1	
		---*---		
-11	0412467	BRACKET-ELEVATOR TAB CONTROL PULLEY	1	
-12	0710617-1	LONGITUDINAL BULKHEAD-LH	1	AB
	0710702-1	LONGITUDINAL BULKHEAD-LH	1	W
-13	0710617-2	LONGITUDINAL BULKHEAD-RH	1	AB
	0710702-2	LONGITUDINAL BULKHEAD-RH	1	W
-14	0710614-1	STRINGER-LH	2	AB
	0710703-1	STRINGER-INBOARD LH	1	W
	0710703-3	STRINGER-OUTBOARD LH	1	W
-15	0710614-2	STRINGER-RH	2	AB
	0710703-2	STRINGER-INBOARD RH	1	W
	0710703-4	STRINGER-OUTBOARD RH	1	W
-16	0710614-5	STRINGER-CENTER LOWER	1	
-17	0710600-2	SKIN-CENTER SECTION	1	AB
	0710700-2	SKIN-CENTER SECTION	1	W
-18	S226-3	DOUBLER-INSPECTION PLATE	1	
	S225-1	PLATE-INSPECTION	1	
		ATTACHING PARTS		
	S1021Z8-6	SCREW	3	
	NAS395-14-3	NUT	3	
		---*---		
-19	0711600-15	STIFFENER-BELLY SKIN LH WHEN EXHAUSTED USE 0711688-3	1	E
	0711688-3	STIFFENER-BELLY SKIN LH	1	Y
	0711688-11	STIFFENER-BELLY SKIN LH	1	W
-20	0711600-16	STIFFENER-BELLY SKIN RH WHEN EXHAUSTED USE 0711688-4	1	E
	0711688-4	STIFFENER-BELLY SKIN RH	1	AC
	0711688-12	STIFFENER BELLY SKIN RH	1	W

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
25 -21	0711600-13	STRINGER-BELLY LH WHEN EXHAUSTED USE 0711688-1	1	E
	0711688-1	STRINGER-BELLY LH	1	Y
	0711688-17	STRINGER ASSY-BELLY LH	1	W
-22	0711600-14	STRINGER-BELLY RH WHEN EXHAUSTED USE 0711688-2	1	E
	0711688-2	STRINGER-BELLY RH	1	Y
	0711688-18	STRINGER ASSY-BELLY RH	1	W
-23	0711614-1	BULKHEAD ASSY STA 65.33 TO 79.0 WEU 0711614-4	1	L
	0711614-4	BULKHEAD ASSY STA 65.33 TO 79.0	1	AC
	0711614-7	BULKHEAD ASSY STA 65.33 TO 79.0	1	W
-24	0711614-3	BRACKET	1	L
	0711614-6	BRACKET	1	AC
	0711614-9	BRACKET	1	W
	NAS687A3K	NUTPLATE	1	AB
-25	0711613-1	BULKHEAD-OUTBOARD LH STA 65.33 TO STA 79.00	1	AB
	0711613-5	BULKHEAD-OUTBOARD LH STA 65.33 TO STA 79.00	1	W
-26	0711613-2	BULKHEAD-OUTBOARD RH STA 65.33 TO 79.0 WEU 0711613-4-	1	L
	0711613-4	BULKHEAD-OUTBOARD RH STA 65.33 TO 79.0	1	AC
	0711613-6	BULKHEAD-OUTBOARD RH STA 65.33 TO 79.0	1	W
-27	NAS680A4	NUTPLATE	2	
-28	0711635-1	BULKHEAD ASSY-SEAT SUPPORT WEU 0712759-5	1	L
	0712759-5	BULKHEAD ASSY-SEAT SUPPORT	1	K
-29	0711646-1	BRACKET ASSEMBLY	1	L
	NAS1068A4	NUTPLATE	1	
	0712758-1	BRACKET ASSY	1	K
	NAS1068A4	NUTPLATE	2	
-30	0711611-2	BULKHEAD ASSEMBLY-STA 79.00	1	
-31	0711647-1	DOUBLER	1	
-32	0712624-6	BULKHEAD-LOWER STA 92.00	1	A
	0712624-11	BULKHEAD-LOWER STA 92.00	1	C
	0711674-3	BULKHEAD-STA 92.0	1	D
-33	0712640-3	STIFFENER ASSY	1	
-34	0712640-4	STIFFENER ASSY	1	
	MS21044N3	NUTPLATE	1	
-35	0711600-21	STRINGER-LOWER LH WHEN EXHAUSTED USE 0711688-5	1	E
	0711688-5	STRINGER-LOWER LH	1	Y
	0711688-13	STRINGER-LOWER LH	1	W
-36	0711600-22	STRINGER-LOWER RH WHEN EXHAUSTED USE 0711688-6	1	E
	0711688-6	STRINGER-LOWER RH	1	Y
	0711688-14	STRINGER-LOWER RH	1	W
-37	0711600-17	STRINGER-LH WHEN EXHAUSTED USE 0711688-7	1	E
	0711688-7	STRINGER-LH	1	D
-38	0711600-18	STRINGER-RH WHEN EXHAUSTED USE 0711688-8	1	E
	0711688-8	STRINGER-RH	1	D
-39	0711600-3	SKIN-LOWER STA 65.33 TO 92.00	1	E
	0711675-4	SKIN-LOWER STA 65.33 TO 92.0	1	D
-40	0711600-2	SKIN-LOWER STA 92.00 TO 110.00	1	E
	0711800-3	SKIN-LOWER STA 92.0 TO 110.0	1	D
-41	0711620-1	DOOR SILL-LOWER BAGGAGE	1	
-42	0711631-1	SUPPORT-ARM REST LH	1	A
-43	0711631-2	SUPPORT-ARM REST RH	1	A
-43A	0700688-1	SUPOORT ASSEMBLY-ARM REST	4	B
-44	0791160-4	FLOORBOARD ASSEMBLY-CENTER	1	L
	0791160-15	FLOORBOARD ASSEMBLY-CENTER	1	X
-45	0710618-4	SEAT RAIL-OUTBOARD RH	1	L
	0710658-2	SEAT RAIL-OUTBOARD RH	1	X
-46	0710618-6	SEAT RAIL-INBOARD RH	1	L
	0710658-2	SEAT RAIL-INBOARD RH	1	X
-47	0710618-1	SEAT RAIL-INBOARD LH	1	L
	0716658-2	SEAT RAIL-INBOARD LH	1	X
-48	0710618-5	SEAT RAIL-OUTBOARD LH	1	L
	0710658-2	SEAT RAIL-OUTBOARD LH	1	X
-49	S1209-1	DOUBLER ASSEMBLY-INSPECTION HOLE	3	
	NAS680A08K	NUTPLATE	6	
-50	0710634-1	DOUBLER ASSEMBLY-INSPECTION OPENING	2	
	NAS680A08K	NUTPLATE	6	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
25 -51	0711608-1	FLOORBOARD ASSEMBLY-AFT CABIN	1	E
	0711608-6	FLOORBOARD ASSEMBLY-AFT CABIN	1	M
	0711608-8	FLOORBOARD ASSY-AFT CABIN	1	T
-51A	0711608-14	FLOORBOARD ASSY-AFT CABIN	1	U
-52	0711608-4	STRINGER	3	
-53	0711608-5	STRINGER --	4	V
-53A	0711608-11	STRINGER-LH	2	W
-53B	0711608-12	STRINGER-RH	2	W
-54	S1862-1	NUTPLATE TIN	4	V
-55	S1209-1	DOUBLER ASSEMBLY	1	
-56	0711632-1	SUPPORT ASSY-REAR SEAT WEU 0711632-7	2	L
	0711632-7	SUPPORT ASSY-REAR SEAT	2	K
-57	NAS1068A4	NUTPLATE-FLOATING	1	
-57A	0712665-2	DOUBLER-RH	1	K
	0712665-1	DOUBLER-LH	1	K
-58	S225-1	PLATE-INSPECTION COVER	12	
		ATTACHING PARTS		
-59	49330	STUD UC	3	
		---*---	3	
-60	S225-7	PLATE-INSPECTION COVER		
		ATTACHING PARTS	6	
-61	AN515-8R7	SCREW		
		---*---	2	
-62	0710633-1	COVER-INSPECTION OPENING		
		ATTACHING PARTS	6	
	AN515-8R7	SCREW		
		---*---	1	
-63	0710600-6	DOUBLER-BELLY RH	1	
	0710600-7	DOUBLER-BELLY LH	1	Y
-64	0711642-1	DOUBLER-SEAT ATTACHMENT	1	W
	0711642-2	DOUBLER-SEAT ATTACHMENT	1	F
-65	0711690-2	REINFORCEMENT PLATE-RH	1	G
	0711690-4	REINFORCEMENT PLATE-RH	1	H
	0711690-6	REINFORCEMENT PLATE-RH	1	F
	0711690-1	REINFORCEMENT PLATE-LH	1	G
	0711690-3	REINFORCEMENT PLATE-LH	1	H
	0711690-5	REINFORCEMENT PLATE-LH	1	Y
-66	0762045-1	BRACKET ASSY	1	W
	0762045-3	BRACKET ASSY	2	
	NAS1067N3	NUTPLATE	1	U
-67	0710609-9	FLOORBOARD ASSY	3	
-68	S1209-1	DOUBLER ASSY	6	
	NAS680A08K	NUTPLATE	3	U
-69	S225-7	PLATE-COVER		
		ATTACHING PARTS	6	U
-70	AN515-8R6	SCREW		
		---*---	1	U
-71	0710609-7	FLOORBOARD ASSY	2	
-72	0710634-1	DOUBLER ASSY	6	
	NAS680A08K	NUTPLATE	5	U
-73	S225-1	PLATE-COVER		
		ATTACHING PARTS	3	U
-74	S1878-1	STUD		
		---*---	2	U
-75	0710633-1	PLATE-COVER		
		ATTACHING PARTS	6	U
-76	AN515-8R7	SCREW		
		---*---	4	U
-77	0710658-2	SEAT RAIL		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
25 -		A---182 SERIAL 18253599 THRU 18254423 B---182 SERIAL 18254424 THRU 18262465 A182 SERIAL A182-0001 & ON C---182 SERIAL 18254424 THRU 18255058 D---182 SERIAL 18255059 THRU 18262465 A182 SERIAL A182-0001 & ON E---182 SERIAL 18253599 THRU 18255058 F---182 SERIAL 18254946 THRU 18255058 G---182 SERIAL 18255059 THRU 18257625 A182 SERIAL A182-0001 THRU A182-0056 H---182 SERIAL 18257626 THRU 18262465 A182 SERIAL A182-0057 & ON J---182 SERIAL 18257626 THRU 18260445 A182 SERIAL A182-0057 THRU A182-0136 K---182 SERIAL 18260446 THRU 18262465 L---182 SERIAL 18253599 THRU 18260445 A182 SERIAL A182-0001 & ON M---182 SERIAL 18255059 THRU 18260445 A182 SERIAL A182-0001 & ON N---182 SERIAL 18253599 THRU 18260825 A182 SERIAL A182-0001 & ON P---182 SERIAL 18260826 THRU 18262465 R---182 SERIAL 18260446 THRU 18260825 A182 SERIAL A182-0137 & ON S---182 SERIAL 18261145 THRU 18262465 T---182 SERIAL 18260445 THRU 18261425 A182 SERIAL A182-0001 THRU A182-0136 U---182 SERIAL 18261426 THRU 18262465 A182 SERIAL A182-0137 & ON V---182 SERIAL 18253599 THRU 18260825 A182 SERIAL A182-0001 THRU A182-0136 W---182 SERIAL 18260826 THRU 18262465 A182 SERIAL A182-0137 & ON X---182 SERIAL 18260446 THRU 18261425 Y---182 SERIAL 18255059 THRU 18260825 A182 SERIAL A182-0001 THRU A182-0136 Z---LOWER CABIN SECTION ASSEMBLY FOR 18260826 THRU 18262465 ARE NOT AVAILABLE. ORDER DETAIL PARTS FROM INDIVIDUALLY CODED ITEMS. AA---182 SERIAL 18260446 THRU 18260825 A182 SERIAL A182-0137 & ON AB---182 SERIAL 18253599 THRU 18260825 A182 SERIAL A182-0001 THRU A182-0136 AC---182 SERIAL 18260446 THRU 18260825 A182 SERIAL A182-0001 THRU A182-0136		

Fuselage (Cont)

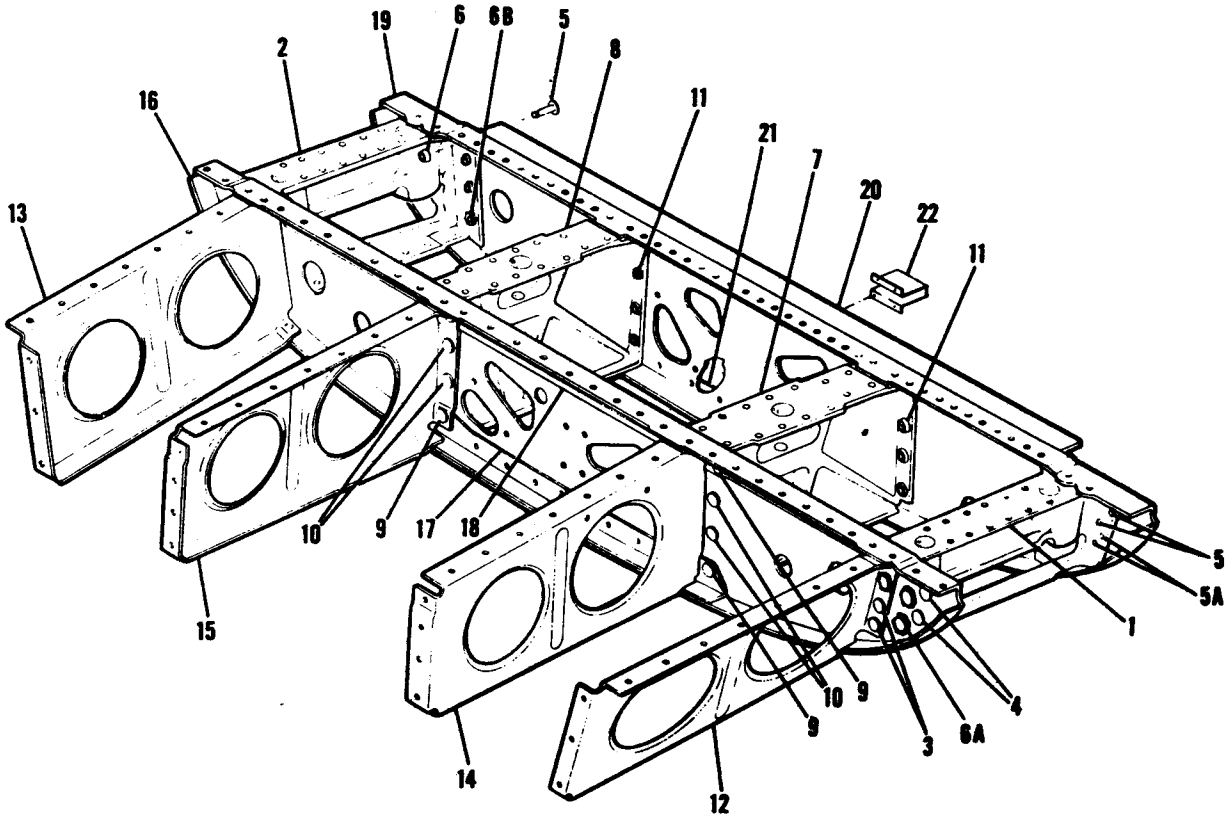


182 SERIAL 18253599 THRU 18260825

Figure 26. Landing Gear Bulkhead Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
26 -	0710600-8	BULKHEAD ASSEMBLY-LANDING GEAR STA 45.00 TO STA 65.33	1	C
- 1	0741603-1	SUPPORT-OUTBOARD LANDING GEAR LH	1	
- 2	0741603-2	SUPPORT-OUTBOARD LANDING GEAR RH	1	
		ATTACHING PARTS		
- 3	NAS178-8-6	RIVET-HI SHEAR	2	
- 4	NAS178-8-5	RIVET-HI SHEAR	2	
- 5	NAS178-8-7	RIVET-HI SHEAR	5	
- 5A	NAS178-8-8	RIVET-HI SHEAR	2	
- 6	NAS179-8	COLLAR	11	
- 6A	AN4-6A	BOLT	4	
- 6B	AN4-7A	BOLT	1	
	MS21042-4	NUT	5	
	NAS620-416	WASHER	5	
		---*---		
- 7	0741602-1	SUPPORT-INBOARD LANDING GEAR-LH	1	
- 8	0741602-2	SUPPORT-INBOARD LANDING GEAR-RH	1	
		ATTACHING PARTS		
- 9	NAS178-8-6	RIVET-HI SHEAR	8	
-10	NAS178-8-5	RIVET-HI SHEAR	8	
-11	NAS179-8	COLLAR	16	
		---*---		
-12	0710616-1	BULKHEAD-OUTBOARD LH	1	
-13	0710616-2	BULKHEAD-OUTBOARD RH	1	
-14	0710615-1	BULKHEAD-INBOARD LH	1	
-15	0710615-2	BULKHEAD-INBOARD RH	1	
-16	0710611-1	BULKHEAD ASSY-STA 56.70 WEU 0710611-4	1	A
	0710611-4	BULKHEAD ASSY-STA 56.70	1	B
-17	0710608-1	REINFORCEMENT	1	
-18	0710611-3	ANGLE	1	
-19	0710607-1	BULKHEAD ASSY-STA 65.33 WEU 0710607-4	1	A
	0710607-4	BULKHEAD ASSY-STA 65.33	1	B
-20	0710607-3	ANGLE	1	
-21	0710608-2	ANGLE-REINFORCEMENT	1	
-22	0762043-1	BRACKET ASSEMBLY	1	B

A---182 SERIAL 18253599 THRU 18260445
A182 SERIAL A182-0001 THRU A182-0136
B---182 SERIAL 18260446 THRU 18260825
A182 SERIAL A182-0137 & ON
C---182 SERIAL 18253599 THRU 18260825
A182 SERIAL A182-0001 & ON

Fuselage (Cont)

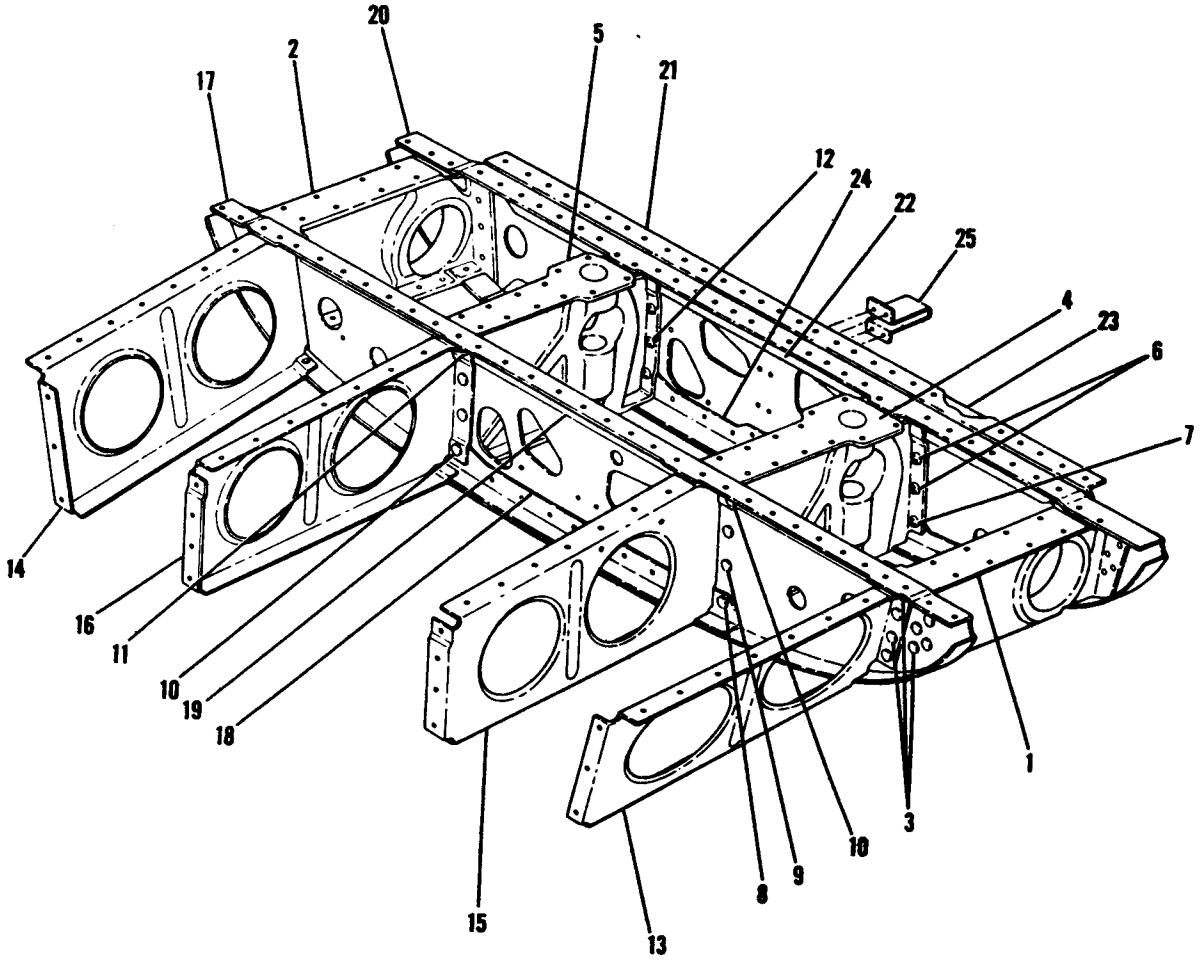


182 SERIAL 18260826 THRU 18262465

Figure 26A. Landing Gear Bulkhead Assembly

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
26A-	0710700-200	BULKHEAD ASSEMBLY-LANDING GEAR STA.45.00 TO STA.65.33	1	A
- 1	0741627-1	SUPPORT-OUTBOARD LANDING GEAR LH	1	
- 2	0741627-2	SUPPORT-OUTBOARD LANDING GEAR RH	1	
		ATTACHING PARTS		
- 3	NAS1054-8-6	RIVET-HI SHEAR 4 FWD & 4 AFT	8	
	NAS1054-8-10	RIVET-HI SHEAR 4 FWD & 4 AFT	8	
	NAS179-8	COLLAR	16	
		---*---	1	
- 4	0741626-1	SUPPORT-INBOARD LANDING GEAR LH	1	
- 5	0741626-2	SUPPORT-INBOARD LANDING GEAR RH	1	
		ATTACHING PARTS		
- 6	NAS1054-8-8	RIVET-HI SHEAR MIDDLE AFT	4	
- 7	NAS1054-8-12	RIVET-HI SHEAR 2 UPPER & 2 LOWER AFT	4	
- 8	NAS1054-8-8	RIVET-HI SHEAR OUTBOARD FORWARD	1	
- 9	NAS1054-8-6	RIVET-HI SHEAR MIDDLE FORWARD	4	
-10	NAS1054-8-9	RIVET-HI SHEAR UPPER OUTBOAD & LOWER INBOARD FORWARD-	2	
-11	NAS1054-8-10	RIVET-HI SHEAR UPPER INBOARD FORWARD	1	
-12	NAS179-8	COLLAR	16	
		---*---	1	
-13	0710616-1	BULKHEAD-OUTBOARD LH	1	
-14	0710616-2	BULKHEAD-OUTBOARD RH	1	
-15	0710615-1	BULKHEAD-INBOARD LH	1	
-16	0710615-2	BULKHEAD-INBOARD RH	1	
-17	0710611-4	BULKHEAD ASSEMBLY-STA 56.70	1	
-18	0710608-1	REINFORCEMENT	1	
-19	0710611-3	ANGLE	1	
	0710701-1	BULKHEAD ASSEMBLY-STA 65.33	1	
-20	0710701-2	BULKHEAD-FORWARD	1	
-21	0710701-3	BULKHEAD-AFT	1	
-22	0710701-4	REINFORCEMENT-UPPER FORWARD	1	
-23	0710701-5	REINFORCEMENT-UPPER AFT	1	
-24	0710701-6	REINFORCEMENT-LOWER FORWARD	1	
	0710701-7	REINFORCEMENT-LOWER AFT	1	
-25	0762043-2	BRACKET-PULLEY		

A---182 SERIAL 18260826 THRU 18262465

Fuselage (Cont)

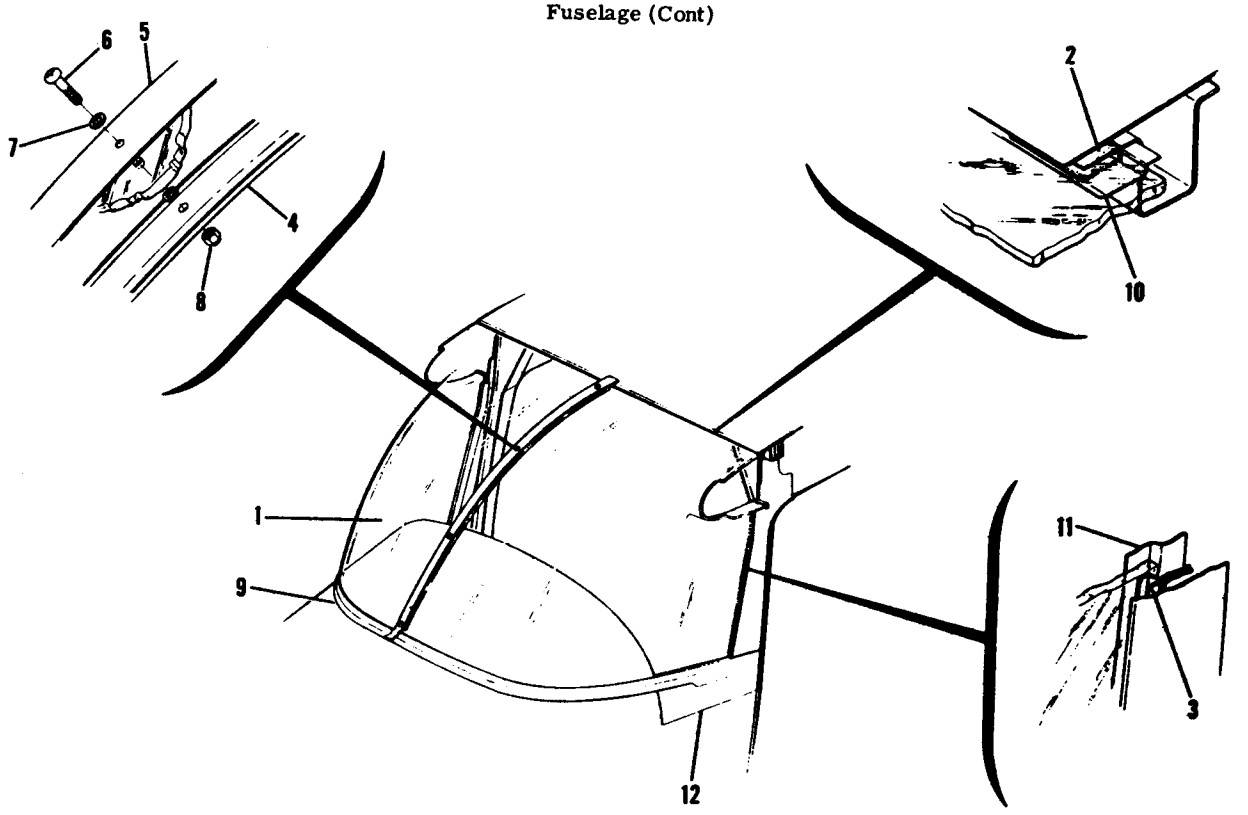


182 SERIAL 18253599 THRU 18255844

Figure 27. Windshield Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
27 -		WINDSHIELD INSTALLATION	NP	A
- 1	0713600-8	WINDSHIELD	1	
	0713600-10	WINDSHIELD-TINTED	1	
- 2	S1389-3	PAD-WINDSHIELD UPPER	1	
- 3	S1389-12	PAD-WINDSHIELD SIDE	2	
- 4	0713673-1	STIFFENER-WINDSHIELD CENTER	1	
- 5	0713674-1	STRIP ASSEMBLY-WINDSHIELD CENTER	1	
		ATTACHING PARTS		
- 6	AN520-10R8	SCREW	4	
- 7	S350	WASHER	12	
- 8	MS21044N3	NUT	4	
		---*---		
- 9	0713660-1	RETAINER-WINDSHIELD OUTER	1	
-10	0511000-63	RETAINER-WINDSHIELD UPPER	1	
-11	0713609-1	RETAINER-INNER LH	1	
	0713609-2	RETAINER-INNER RH	1	
-12	0713334-7	SKIN-RETAINER LH	1	
	0713334-8	SKIN-RETAINER RH	1	
	S1078-1	TAPE-SEALER 80 IN LG BULK ITEM REF S1078-1-80.0 -	AR	
		A---182 SERIAL 18253599 THRU 18255844		

Fuselage (Cont)

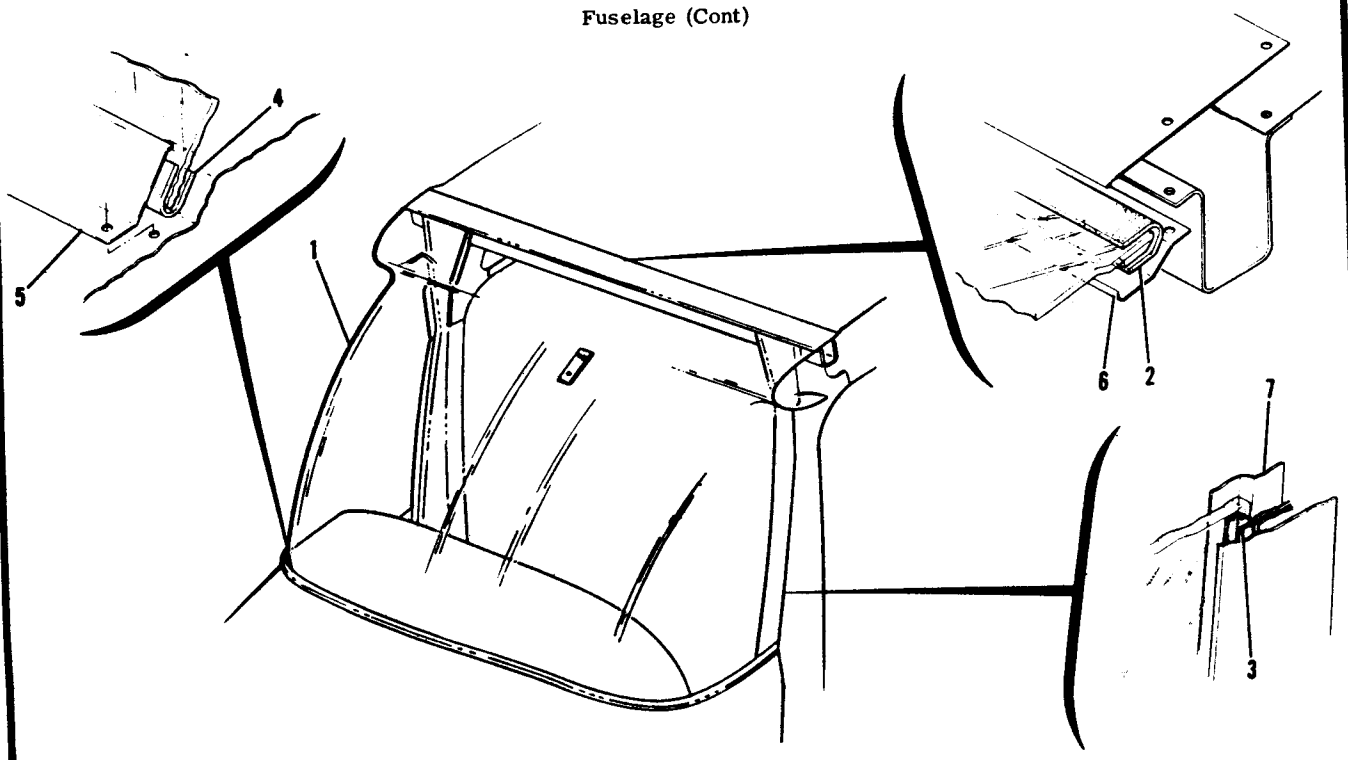


182 SERIAL 18255845 THRU 18262465

Figure 27A. Windshield Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
27A-		WINDSHIELD INSTALLATION	NP	A
- 1	0713334-2	WINDSHIELD ASSEMBLY-TINTED	1	
	0713287-11	WINDSHIELD ASSEMBLY-CLEAR	1	
- 2	S1389-12	SEAL-UPPER 46.50 IN LG BULK ITEM REF S1389-2-46.50-	1	
- 3	S1389-7	SEAL-SIDE 18.50 IN LG BULK ITEM REF S1389-7-18.50 -	2	
- 4	S1389-2	SEAL-LOWER 77.50 IN LG BULK ITEM REF S1389-2-77.50-	1	
- 5	0713788-3	RETAINER-WINDSHIELD	1	
- 6	0713822-1	RETAINER-WINDSHIELD	1	
- 7	0713609-1	SEAL-WINDOW 118.0 IN LG BULK ITEM REF S1389-1-118.0 -	1	
	0713609-2	RETAINER-INNER RH	1	

A---182 SERIAL 18255845 THRU 18262465
A182 SERIAL A182-0001 & ON

Fuselage (Cont)

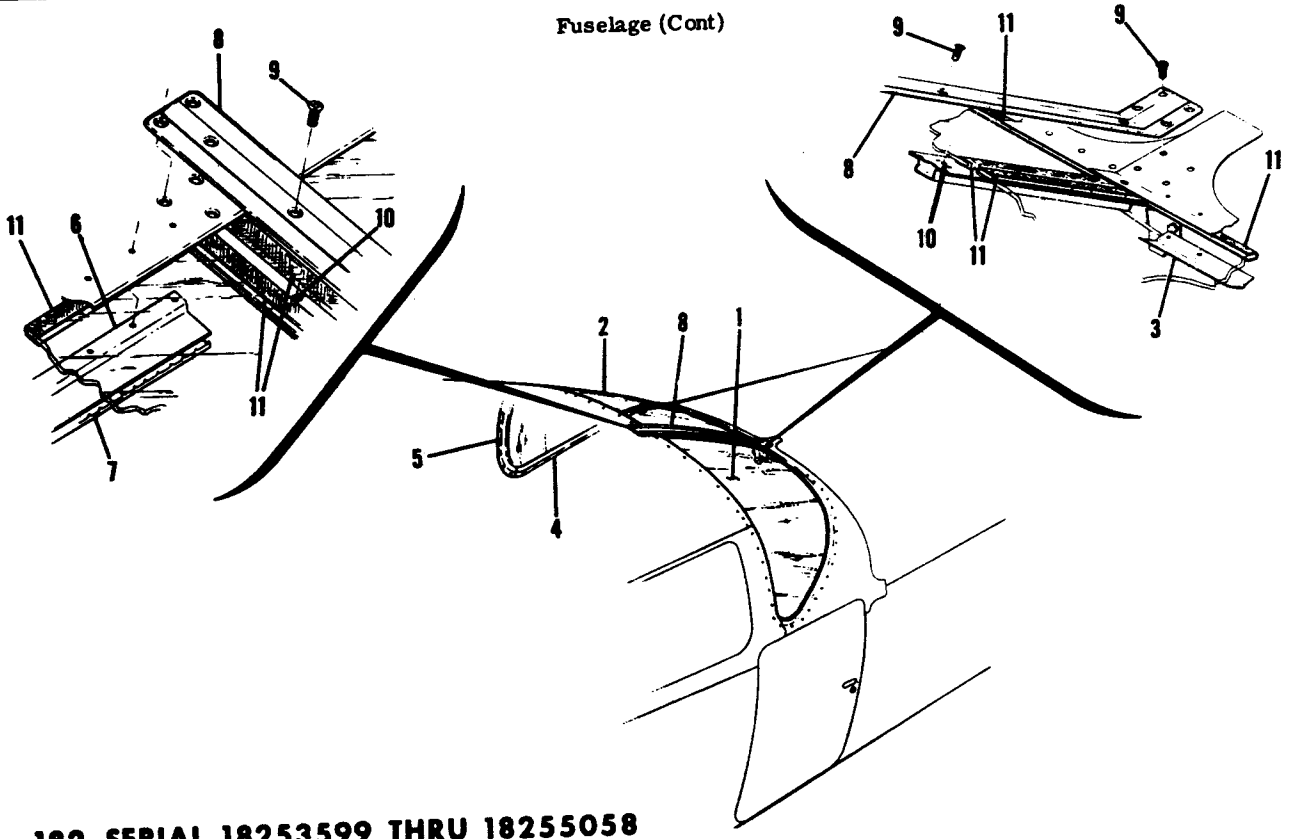


182 SERIAL 18253599 THRU 18255058

Figure 28. Rear Window Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
28 -		WINDOW INSTALLATION-REAR	NP	A
- 1	0711600-11	WINDOW-REAR LH	1	
	0711600-29	WINDOW-REAR LH TINTED SKYLANE ONLY	1	
- 2	0711600-10	WINDOW-REAR RH	1	
	0711600-30	WINDOW-REAR RH TINTED SKYLANE ONLY	1	
		ATTACHING PARTS		
- 3	0711627-1	RETAINER-WINDOW REAR LH	1	
- 4	0711627-2	RETAINER-WINDOW REAR RH	1	
- 5	0711636-2	RETAINER-WINDOW RH	1	
	0711636-1	RETAINER-WINDOW LH	1	
- 6	0711637-1	RETAINER-WINDOW UPPER LH	1	
	0711637-2	RETAINER-WINDOW UPPER RH	1	
- 7	0711638-1	RETAINER-UPHOLSTERY UPPER LH	1	
	0711638-2	RETAINER-UPHOLSTERY UPPER RH	1	
- 8	0711612-1	RETAINER ASSEMBLY-CENTER	11	
- 9	AN509-10R12	SCREW	11	
-10	NAS697A3	NUTPLATE	6	
-11	S1389-1	PAD-WINDOW REAR		
		A---182 SERIAL 18253599 THRU 18255058		

Fuselage(Cont)

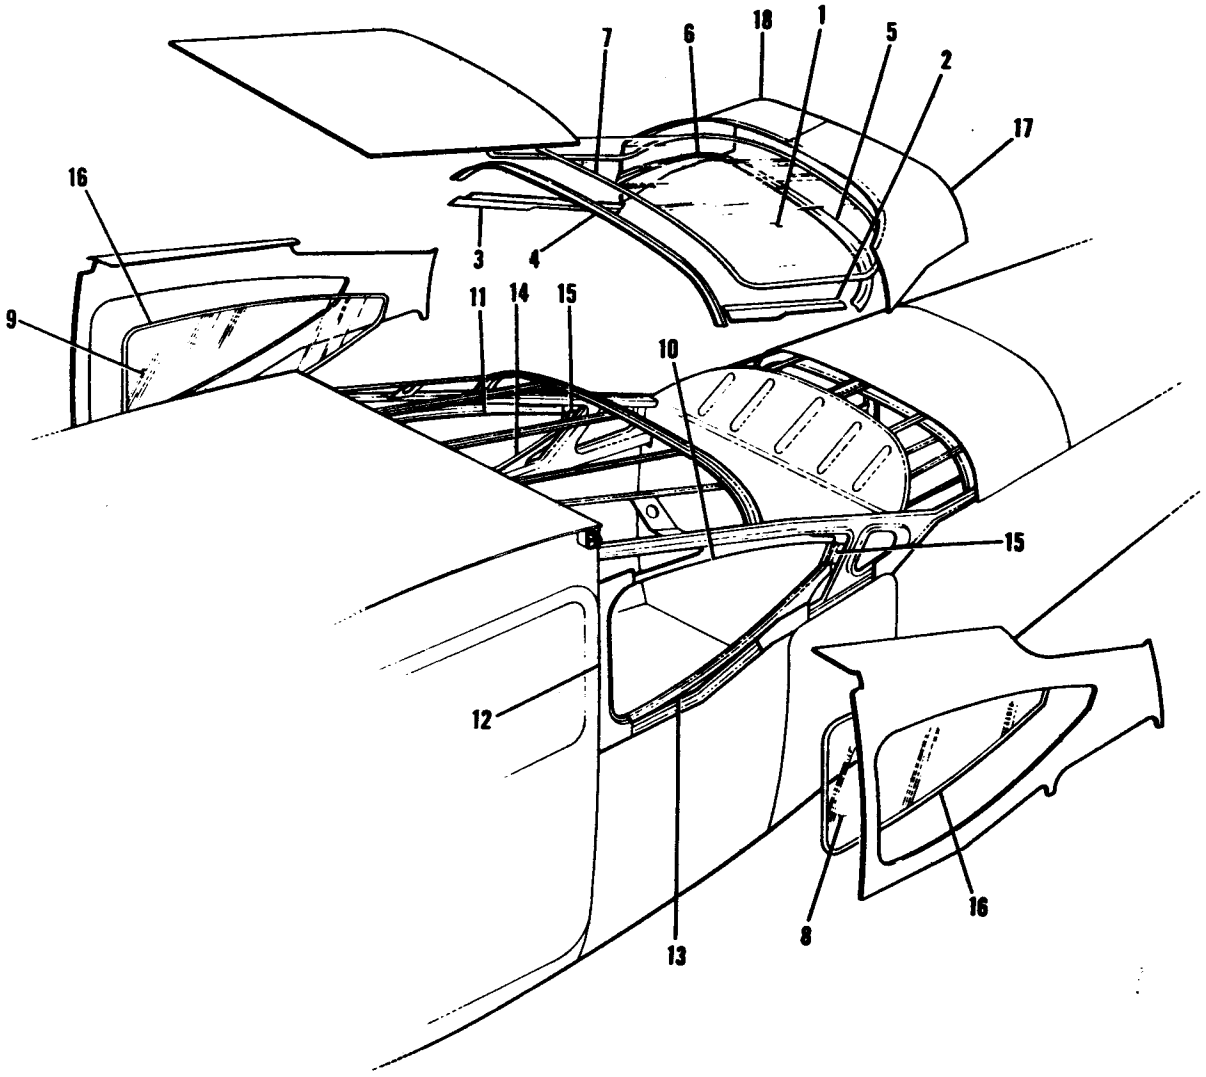


182 SERIAL 18255059 THRU 18262465

Figure 28A. Aft Cabin Windows Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
28A-		AFT CABIN WINDOWS INSTALLATION	NP	A
- 1	0711675-10	WINDOW-REAR	1	
	0711675-15	WINDOW-REAR TINTED SKYLANE ONLY	1	
		ATTACHING PARTS		
- 2	0711681-3	RETAINER-LH	1	
- 3	0711681-4	RETAINER-RH	1	
- 4	0711681-1	RETAINER-UPPER FWD	1	
- 5	0712651-1	RETAINER-REAR LH	1	
- 6	0712651-2	RETAINER-REAR RH	1	
		---*---		
- 7	S1389-1	SEAL-WINDOW	1	
- 8	0711675-11	WINDOW-LH SIDE	1	
	0711675-13	WINDOW-LH SIDE TINTED SKYLANE ONLY	1	
- 9	0711675-12	WINDOW-RH SIDE	1	
	0711675-14	WINDOW-RH SIDE TINTED SKYLANE ONLY	1	
		ATTACHING PARTS		
-10	0711680-3	RETAINER-LH UPPER	1	
	0700705-1	RETAINER-HEADLINER LH	1	
-11	0711680-4	RETAINER-RH UPPER	1	
	0700705-2	RETAINER-HEADLINER RH	1	
-12	0711615-1	RETAINER-LH FORWARD	1	
	0711615-2	RETAINER-RH FORWARD	1	
-13	0711680-1	RETAINER-LH LOWER	1	
-14	0711680-2	RETAINER-RH LOWER	2	
-15	0711680-5	RETAINER-AFT	2	
		---*---		
-16	S1166-1	SEAL-WINDOW 79.0 IN LG BULK ITEM REF S1166-1-79.0	1	
-17	0711675-7	SKIN-LH	1	
-18	0711675-8	SKIN-RH	1	

A---182 SERIAL 18255059 THRU 18262465
A182 SERIAL A182-0001 & ON

Fuselage (Cont)

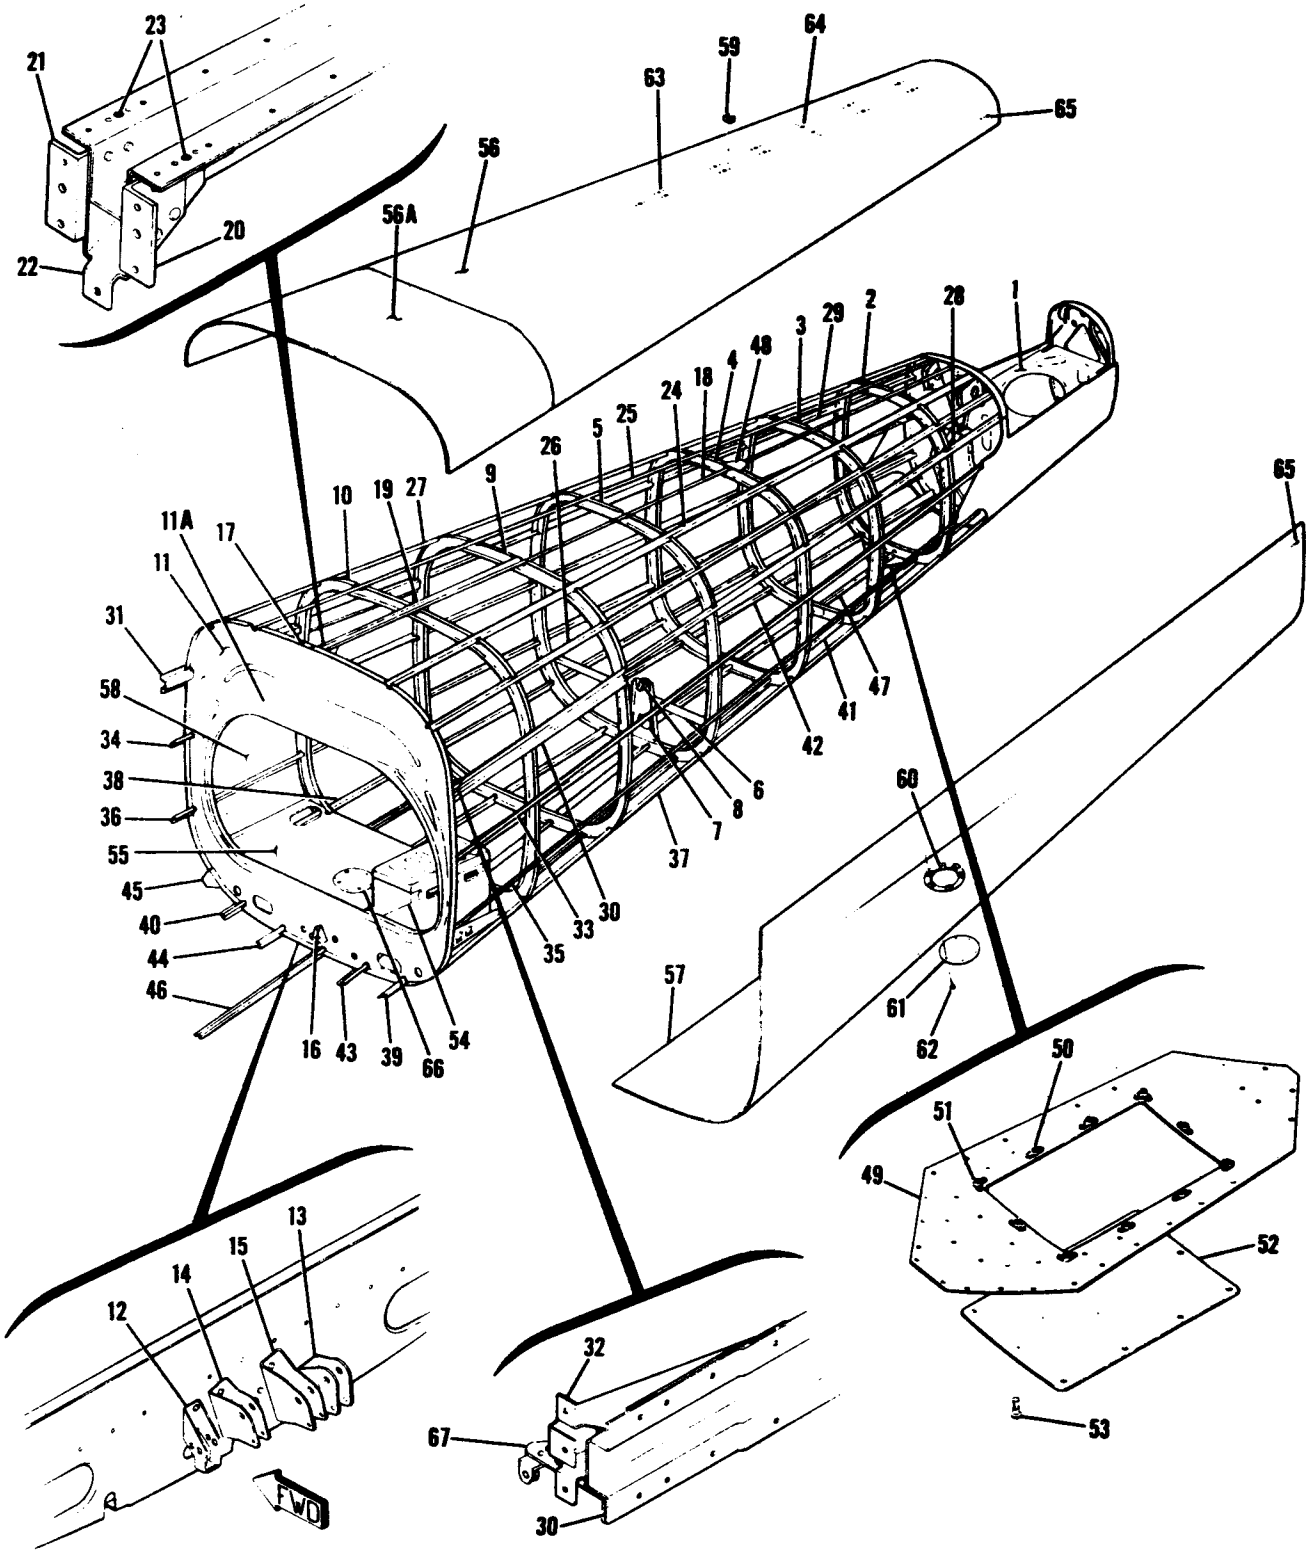

182 SERIAL 18253599 THRU 18255058

Figure 29. Tailcone Assembly Sta. 110.00 to 230.187


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
29 -	0712607-1	TAILCONE ASSEMBLY-FUSELAGE STA 110.00 TO 230.187	1	A
	0712607-10	TAILCONE ASSEMBLY-FUSELAGE STA 110.00 TO 230.187	1	B
		AFT TAILCONE ASSEMBLY-FUSELAGE STA 209.00 TO 230.187	1	
- 1	0712628-2	BULKHEAD-UPPER STA 199.00	1	
- 2	0712612-2	BULKHEAD-LOWER LH STA 199.00	1	
	0712612-3	BULKHEAD-LOWER RH STA 199.00	1	
	0712612-4	BULKHEAD-UPPER STA 185.50	1	
- 3	0712612-6	BULKHEAD-LOWER LH STA 185.50	1	
	0712612-7	BULKHEAD-LOWER RH STA 185.50	1	
	0712612-8	BULKHEAD-UPPER STA 172.00	1	
- 4	0712611-2	BULKHEAD-LOWER LH STA 172.00	1	
	0712611-3	BULKHEAD-LOWER RH STA 172.00	1	
	0712611-4	BULKHEAD-UPPER STA 156.00	1	
- 5	0712610-2	BULKHEAD-LOWER LH STA 156.00	1	
	0712610-3	BULKHEAD-LOWER RH STA 156.00	1	
	0712610-4	STIFFENER-PULLEY BRACKET	1	
- 6	0712610-5	BRACKET-STABILIZER TRIM	1	
- 7	0712613-2	BRACKET-TRIM TAB PULLEY	1	
- 8	0712613-3	BULKHEAD-UPPER STA 140.00	1	
- 9	0712609-2	BULKHEAD-LOWER LH STA 140.00	1	
	0712609-3	BULKHEAD-LOWER RH STA 140.00	1	
	0712609-4	BULKHEAD-UPPER STA 124.00	1	
-10	0712608-4	BULKHEAD ASSEMBLY-LOWER LH STA 124.00	1	
	0712608-7	BULKHEAD ASSEMBLY-LOWER RH STA 124.00	1	
	0712608-8	BULKHEAD-STA 110.00	1	
-11	0712625-2	BRACKET-CARGO TIE DOWN RING LH	1	
	0712641-1	BRACKET-CARGO TIE DOWN RING RH	1	8
	0712641-2	ANGLE-BAGGAGE SHELF STIFFENER	1	
-11A	0712625-3	BRACKET-PULLEY	1	
-12	0412467	BRACKET-PULLEY		
-13	0512160-2	ATTACHING PARTS	1	
	AN3-3A	BOLT	1	
	MS21044N3	NUT		
		---*---	1	
-14	0712638-3	BRACKET-PULLEY		
		ATTACHING PARTS	1	
	AN3-3A	BOLT	1	
	MS21044N3	NUT		
		---*---	1	
-15	0712637-2	BRACKET		
		ATTACHING PARTS	1	
	AN3-3A	BOLT	1	
	MS21044N3	NUT		
		---*---	1	
-16	0712639-1	BRACKET-PULLEY		
		ATTACHING PARTS	1	
	AN3-3A	BOLT	1	
	MS21044N3	NUT		
		---*---	2	
-17	NAS697A3	NUTPLATE	1	
-18	0712627-23	STRINGER-UPPER TAILCONE AFT	1	
-19	0712634-1	STRINGER ASSEMBLY-UPPER TAILCONE FORWARD	1	
-20	0712634-3	ANGLE-LH	1	
-21	0712634-4	ANGLE-RH	1	
-22	0712634-5	BRACKET	2	
-23	NAS697A3	NUTPLATE	1	
-24	0712627-19	STRINGER-LH	1	
-25	0712627-20	STRINGER-RH	1	
-26	0712627-17	STRINGER-LH	1	
-27	0712627-18	STRINGER-RH	1	
-28	0712627-13	STRINGER-LH AFT	1	
-29	0712627-14	STRINGER-RH AFT	1	
-30	0712627-15	STRINGER-LH FORWARD	1	
-31	0712627-16	STRINGER-RH FORWARD	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
29 -32	0712633-1	BRACKET-BAGGAGE DOOR SILL	1	
-33	0712627-11	STRINGER-LH	1	
-34	0712627-12	STRINGER-RH	1	
-35	0712627-9	STRINGER-LH	1	
-36	0712627-10	STRINGER-RH	1	
-37	0712627-7	STRINGER-LH	1	
-38	0712627-8	STRINGER-RH	1	
-39	0712627-3	STRINGER-LH FORWARD	1	
-40	0712627-4	STRINGER-RH FORWARD	1	
-41	0712627-5	STRINGER-LH AFT	1	
-42	0712627-6	STRINGER-RH AFT	1	
-43	0712627-1	STRINGER-LH	1	
-44	0712627-2	STRINGER-RH	1	
-45	0712607-6	GUSSET	1	
-46	0712627-21	STRINGER-LOWER FORWARD	1	
-47	0712627-22	STRINGER-LOWER AFT	1	
-48	0712607-7	DOUBLER	1	
	0712630-1	BRACKET ASSEMBLY-ELEVATOR DOWN SPRING	1	
-49	0712607-8	DOUBLER-ACCESS DOOR	1	
-50	NAS697A08	NUTPLATE	6	
-51	NAS698A08	NUTPLATE	4	
-52	0712607-9	DOOR-ACCESS	1	
		ATTACHING PARTS		
-53	AN520-8R6	SCREW	10	
		---*---		
-54	SEE FIG 30	BATTERY BOX INSTALLATION	1	
-55	0712626-1	SHELF ASSEMBLY-RADIO EQUIPMENT	1	
-56	0712607-12	SKIN-UPPER AFT	1	
-56A	0712607-3	SKIN-UPPER FORWARD	1	
-57	0712607-5	SKIN-LOWER LH	1	A
	0712607-11	SKIN-LOWER LH	1	B
-58	0712607-4	SKIN-LOWER RH	1	
-59	1212002-1	CHANNEL ASSEMBLY-DORSAL FIN	1	
	F5000-832	NUTPLATE KNM	2	
-60	S1048-2	DOUBLER ASSEMBLY	1	
	NAS395-14-3	NUTPLATE	6	
-61	S225-5	PLATE-INSPECTION	1	
		ATTACHING PARTS		
-62	S1021Z8-6	SCREW	6	
		---*---		
-63	NAS697A08K	NUTPLATE	11	
-64	NAS696A08K	NUTPLATE	2	
-65	S1862-1	NUT TIN	6	
-66	S225-1	PLATE-INSPECTION	1	
		ATTACHING PARTS		
	XE49330	STUD UC	3	
		---*---		
-67	0700690-1	SUPPORT ASSEMBLY-BAGGAGE NET LH	1	B
	0700690-2	SUPPORT ASSEMBLY-BAGGAGE NET RH	1	B

A---182 SERIAL 18253599 THRU 18254423
B---182 SERIAL 18254424 THRU 18255058

Fuselage(Cont)

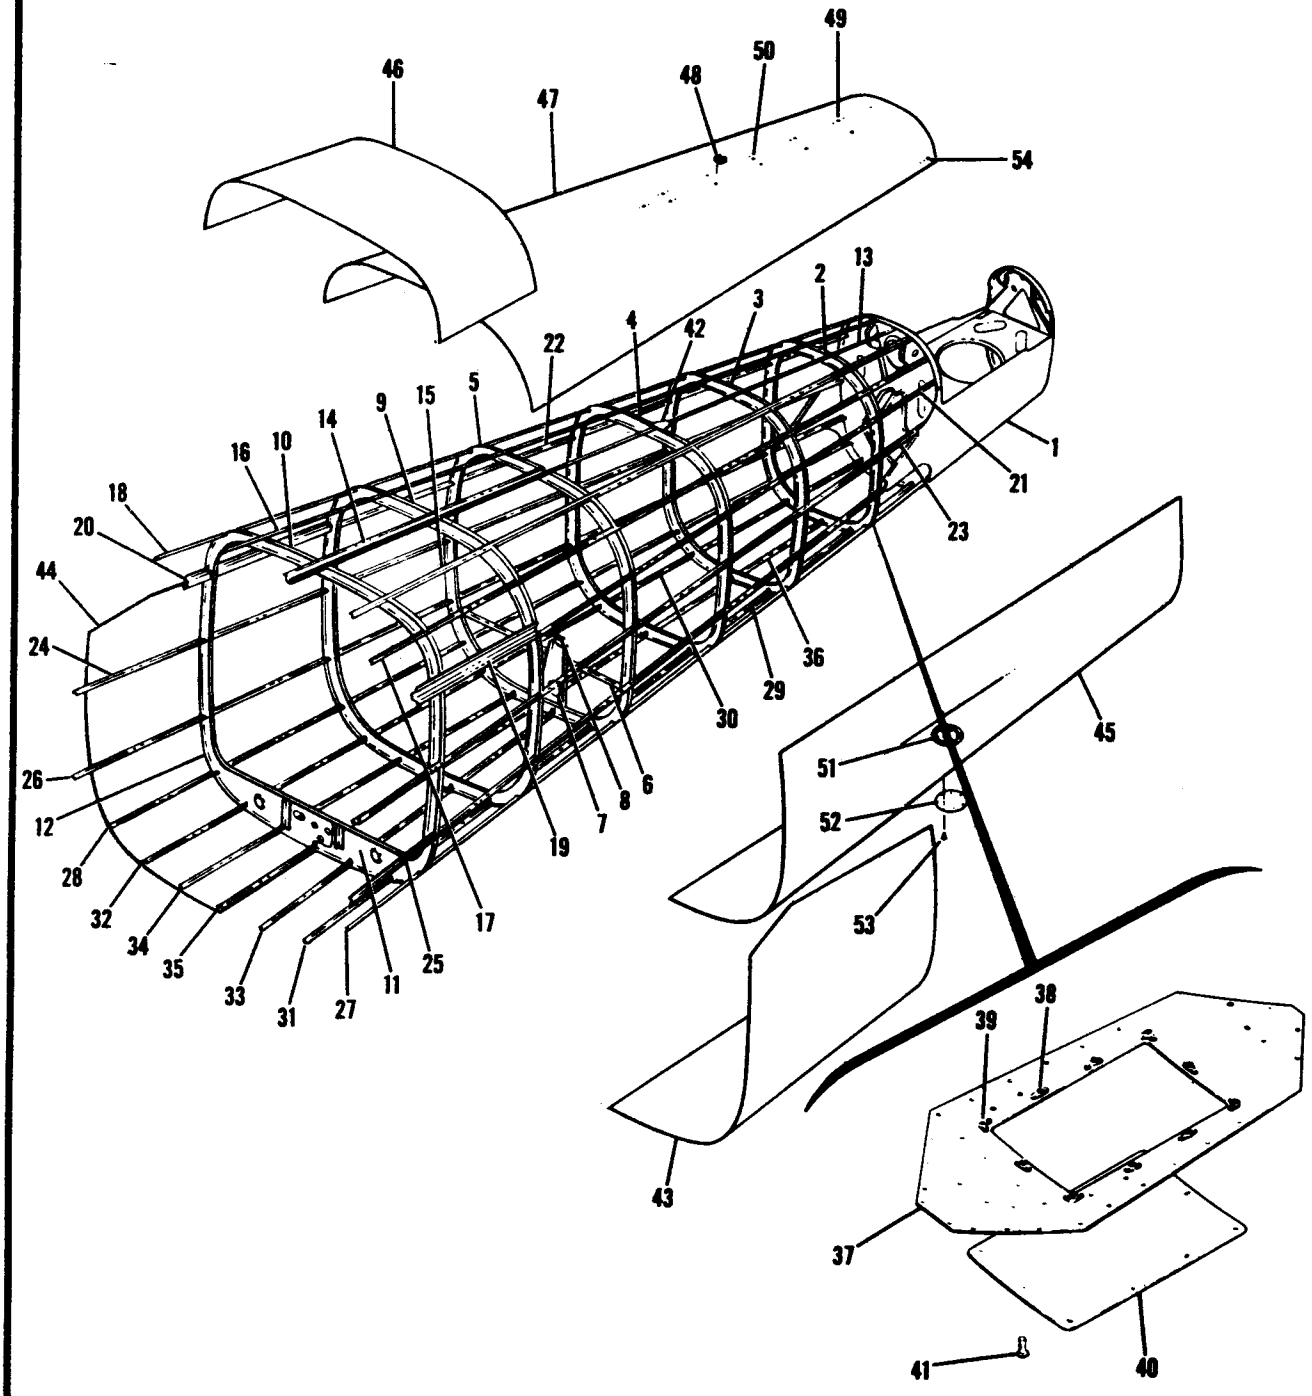


A182 SERIAL A182-0001 THRU A182-0136
182 SERIAL 18255059 THRU 18260445

Figure 29A. Fuselage Tailcone Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
29A-	0712652-200	TAILCONE ASSEMBLY-FUSELAGE	1	A
		AFT TAILCONE ASSEMBLY-FUSELAGE STA 209.0 TO 230.187	1	
- 1	0712628-2	BULKHEAD-UPPER STA 199.0	1	
- 2	0712612-2	BULKHEAD-LOWER LH STA 199.0	1	
	0712612-3	BULKHEAD LOWER RH STA 199.0	1	
	0712612-4	BULKHEAD-UPPER STA 185.0	1	
- 3	0712612-6	BULKHEAD-LOWER LH STA 185.0	1	
	0712612-7	BULKHEAD-LOWER RH STA 185.0	1	
	0712612-8	BULKHEAD-UPPER STA 172.00	1	
- 4	0712611-2	BULKHEAD-LOWER LH STA 172.00	1	
	0712611-3	BULKHEAD-LOWER RH STA 172.0	1	
	0712611-4	BULKHEAD-UPPER STA 156.0	1	
- 5	0712610-2	BULKHEAD-LOWER LH STA 156.0	1	
	0712610-3	BULKHEAD-LOWER RH STA 156.0	1	
	0712610-4	STIFFENER-PULLEY BRACKET	1	
- 6	0712610-5	BRACKET-STABILIZER TRIM	1	
- 7	0712613-2	BRACKET-TRIM TAB PULLEY	1	
- 8	0712613-3	BULKHEAD-UPPER STA 140.0	1	
- 9	0712609-2	BULKHEAD-LOWER LH STA 140.0	1	
	0712609-3	BULKHEAD-LOWER RH STA 140.0	1	
	0712609-4	BULKHEAD-UPPER STA 124.0	1	
-10	0712645-2	BULKHEAD ASSEMBLY-LOWER LH STA 124.0	1	
-11	0712645-5	BULKHEAD ASSEMBLY-LOWER RH STA 124.0	1	
-12	0712645-6	STRINGER-UPPER TAILCONE AFT	1	
-13	0712627-23	STRINGER-UPPER TAILCONE FWD	1	
-14	0712646-1	STRINGER-LH	1	
-15	0712653-1	STRINGER-RH	1	
-16	0712653-2	STRINGER-LH	1	
-17	0712653-3	STRINGER-RH	1	
-18	0712653-4	STRINGER-LH	1	
-19	0712647-3	STRINGER-RH	1	
-20	0712647-4	STRINGER-LH	1	
-21	0712627-13	STRINGER-RH	1	
-22	0712627-14	STRINGER-LH	1	
-23	0712627-11	STRINGER-RH	1	
-24	0712627-12	STRINGER-LH	1	
-25	0712627-9	STRINGER-RH	1	
-26	0712627-10	STRINGER-LH	1	
-27	0712627-7	STRINGER-RH	1	
-28	0712627-8	STRINGER-LH AFT	1	
-29	0712627-5	STRINGER-RH AFT	1	
-30	0712627-6	STRINGER-LH FWD	1	
-31	0712627-3	STRINGER-RH FWD	1	
-32	0712627-4	STRINGER-LH	1	
-33	0712627-1	STRINGER-RH	1	
-34	0712627-2	STRINGER-BOTTOM FORWARD	1	
-35	0712627-21	STRINGER-BOTTOM AFT	1	
-36	0712627-22	DOUBLER-ACCESS DOOR	6	
-37	0712607-8	NUTPLATE	4	
-38	NAS697A08	NUTPLATE	1	
-39	NAS698A08	DOOR-ACCESS		
-40	0712607-9	ATTACHING PARTS	10	
-41	AN520-8R6	SCREW	1	
		---*---		
-42	0712607-7	DOUBLER	1	
	0712630-1	BRACKET ASSEMBLY-ELEVATOR DOWN SPRING	1	
-43	0712652-7	SKIN-LOWER FORWARD LH	1	
-44	0712652-4	SKIN-LOWER FORWARD RH	1	
-45	0712652-5	SKIN-LOWER AFT LH	1	
	0712652-6	SKIN-LOWER AFT RH	1	
-46	0712652-3	SKIN-UPPER FORWARD	1	
-47	0712652-2	SKIN-UPPER AFT	1	
-48	1212002-1	CHANNEL ASSEMBLY-DORSAL FIN	11	
-49	NAS697A08K	NUTPLATE	2	
-50	NAS696A08K	NUTPLATE	1	
-51	S1048-2	DOUBLER ASSEMBLY	6	
	NAS395-14-3	NUTPLATE	1	
-52	S225-5	PLATE-INSPECTION		
-53	S1021Z8-6	ATTACHING PARTS	6	
-54	S1862-1	SCREW		
		---*---	6	
		NUTPLATE TIN		

A---182 SERIAL 18255059 THRU 18260445
A182 SERIAL A182-0001 THRU A182-0136

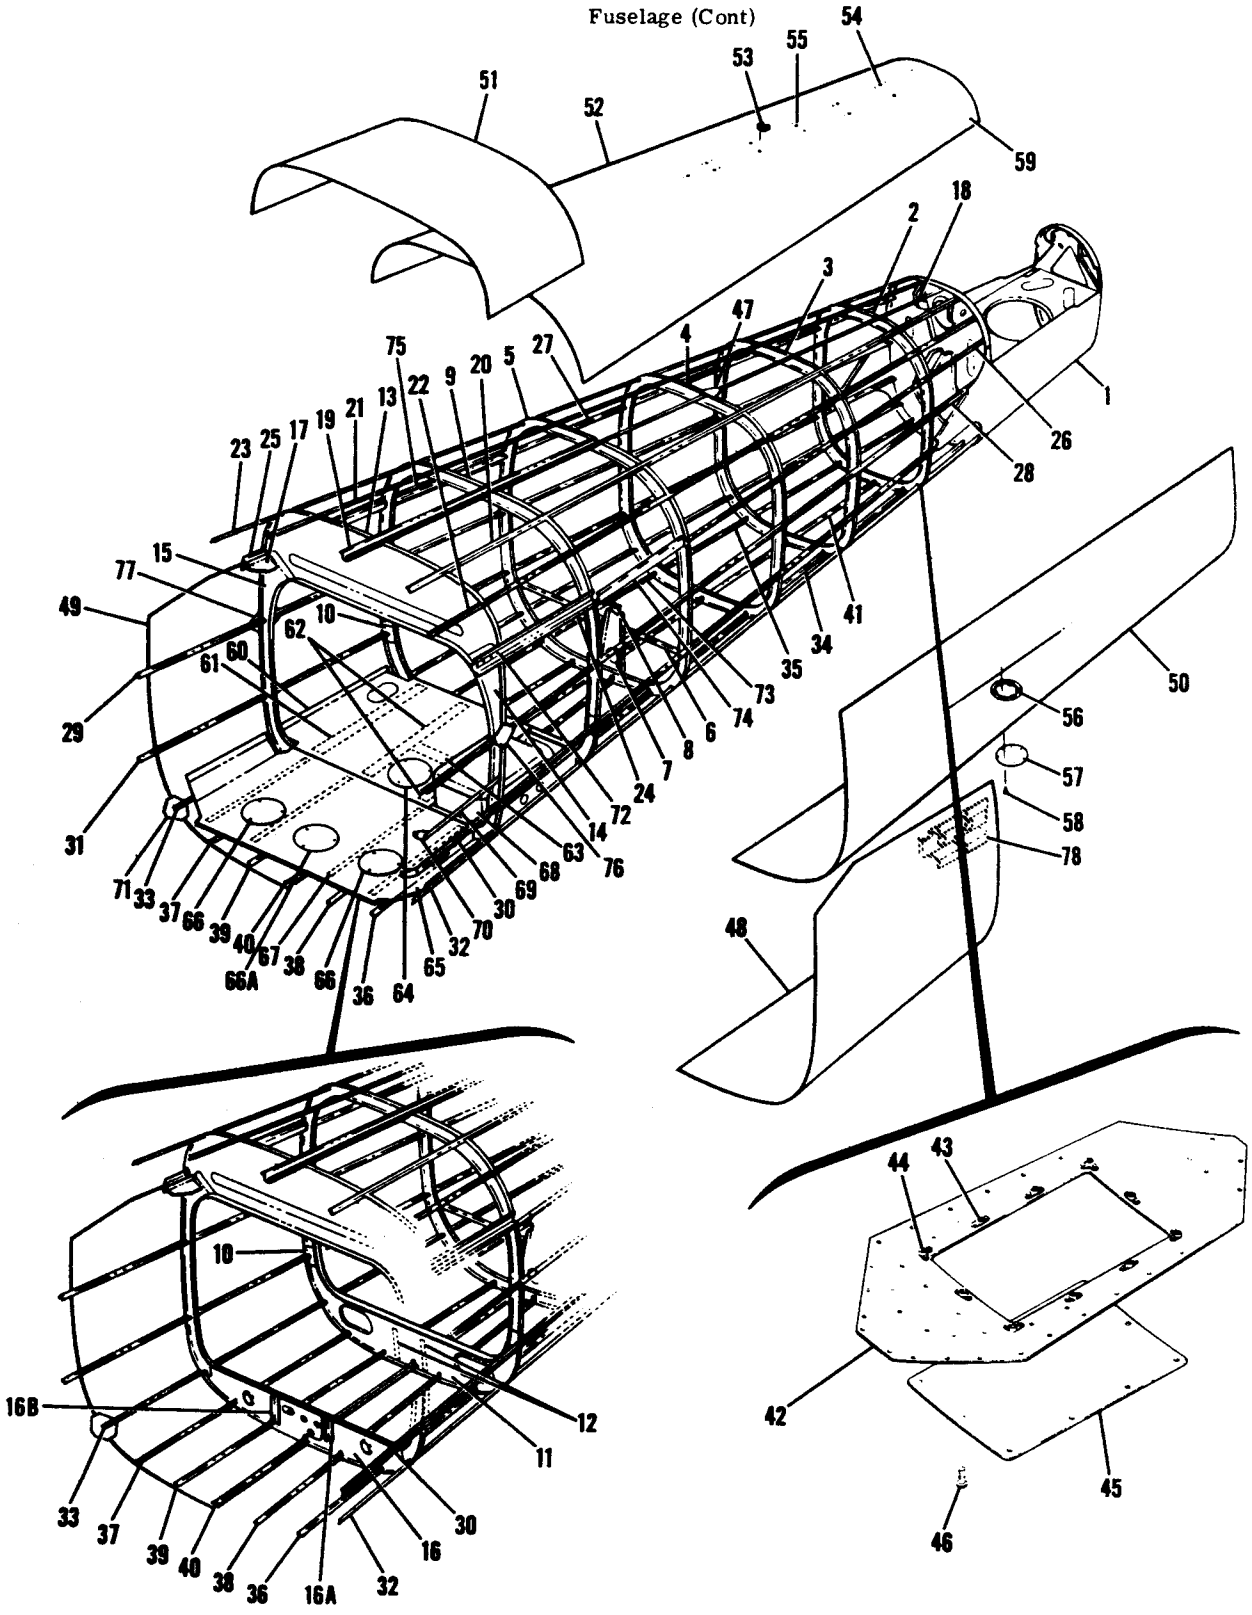

182 SERIAL 18260446 THRU 18262465

Figure 29B. Tailcone Assembly - Extended Baggage Compartment


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
298-	0712504-200	TAILCONE ASSEMBLY-FUSELAGE WEU 0712504-201	1	A
	0712504-201	TAILCONE ASSEMBLY-FUSELAGE	1	B
		TAILCONE ASSEMBLY-FUSELAGE	1	C
- 1	0712628-4	AFT TAILCONE ASSEMBLY-FUSELAGE STA. 209.00 TO 230.187	1	B
	0712525-1	AFT TAILCONE ASSEMBLY-FUSELAGE STA. 209.00 TO 230.187	1	C
- 2	0712612-2	BULKHEAD-UPPER STA. 199.00	1	
	0712612-3	BULKHEAD-LOWER LH STA. 199.00	1	
	0712612-4	BULKHEAD-LOWER RH STA. 199.00	1	
- 3	0712612-6	BULKHEAD-UPPER STA 185.50	1	
	0712612-7	BULKHEAD-LOWER LH STA. 185.50	1	
	0712612-8	BULKHEAD-LOWER RH STA. 185.50	1	
- 4	0712611-2	BULKHEAD-UPPER STA. 172.00	1	
	0712611-3	BULKHEAD-LOWER LH STA. 172.00	1	
	0712611-4	BULKHEAD-LOWER RH STA. 172.00	1	
- 5	0712610-2	BULKHEAD-UPPER STA. 156.00	1	
	0712610-3	BULKHEAD-LOWER LH STA. 156.00	1	
	0712610-4	BULKHEAD-LOWER RH STA. 156.00	1	
- 6	0712610-5	STIFFENER-PULLEY BRACKET	1	
- 7	0712613-2	BRACKET-STABILIZER TRIM	1	
- 8	0712613-3	BRACKET-TRIM TAB PULLEY	1	
- 9	0712609-7	BULKHEAD ASSEMBLY-UPPER STA. 140.00	1	
-10	0712753-1	BRACKET-LH	1	
	0712753-2	BRACKET-RH	1	
-11	0712511-2	BULKHEAD-LWR STA. 140.00 WEU 0712511-4	1	
	0712511-4	BULKHEAD-LWR STA. 140.00	2	
-12	0712516-1	STIFFENER	1	
	0712511-5	ANGLE-STIFFENER USED ON 0712511-4 ONLY	1	A
-13	0712503-2	BULKHEAD-UPPER STA. 124.00 WEU 0712503-6	1	B
	0712503-6	BULKHEAD-UPPER STA. 124.00	1	
-14	0712503-3	BULKHEAD-LWR LH STA. 124.00	1	
-15	0712503-4	BULKHEAD-LWR RH STA. 124.00	1	
-16	0712503-5	BULKHEAD-LWR STA. 124.00	1	
-16A	0712512-1	STIFFENER LH	1	
-16B	0712512-2	STIFFENER RH	1	
-17	0712517-2	BRACKET ASSEMBLY-RH	1	
	0712517-1	BRACKET ASSEMBLY-LH	1	
	NAS682A3	NUTPLATE	1	E
-18	0712627-23	STRINGER-UPPER TAILCONE AFT	1	C
	0712627-24	STRINGER-UPPER TAILCONE AFT	1	E
-19	0712646-1	STRINGER-UPPER TAILCONE FWD	1	C
	0712646-2	STRINGER-UPPER TAILCONE FWD	1	
-20	0712653-1	STRINGER-LH	1	
-21	0712653-2	STRINGER-RH	1	
-22	0712653-3	STRINGER-LH	1	
-23	0712653-4	STRINGER-RH	1	
-24	0712647-3	STRINGER-LH	1	
-25	0712647-4	STRINGER-RH	1	
-26	0712627-13	STRINGER-LH	1	
-27	0712627-14	STRINGER-RH	1	
-28	0712627-11	STRINGER-LH	1	
-29	0712627-12	STRINGER-RH	1	
-30	0712627-9	STRINGER-LH	1	
-31	0712627-10	STRINGER-RH	1	E
-32	0712627-7	STRINGER-LH	1	C
	0712627-25	STRINGER-LH	1	E
-33	0712627-8	STRINGER-RH	1	C
	0712627-26	STRINGER-RH	1	
-34	0712627-5	STRINGER-LH AFT	1	
-35	0712627-6	STRINGER-RH AFT	1	
-36	0712627-3	STRINGER-LH FWD	1	
-37	0712627-4	STRINGER-RH FWD	1	
-38	0712627-1	STRINGER-LH	1	
-39	0712627-2	STRINGER-RH	1	
-40	0712627-21	STRINGER-BOTTOM FORWARD	1	
-41	0712627-22	STRINGER-BOTTOM AFT	1	
-42	0712607-8	DOUBLER-ACCESS DOOR	6	
-43	NAS697A08	NUTPLATE	4	
-44	NAS698A08	NUTPLATE	1	
-45	0712607-9	DOOR-ACCESS		
		ATTACHING PARTS		
-46	AN520-8R6	SCREW	10	
		---*---		
-47	0712607-7	DOUBLER	1	E
	0712527-1	DOUBLER	1	C

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
298-48	0712504-7	SKIN-LOWER FORWARD LH	1	
-49	0712504-4	SKIN-LOWER FORWARD R.H.	1	
-50	0712504-5	SKIN-LOWER AFT LH	1	
	0712504-6	SKIN-LOWER AFT RH	1	
-51	0712504-3	SKIN-UPPER FORWARD	1	
-52	0712504-2	SKIN-UPPER AFT	1	E
	0712504-10	SKIN-UPPER AFT	1	C
-53	1212002-1	CHANNEL ASSEMBLY-DORSAL FIN	1	E
	1231052-1	BRACKET ASSY-DORSAL FIN	1	C
	NAS686A08	NUTPLATE	2	C
-54	NAS697A08K	NUTPLATE	11	E
	NAS697A08K	NUTPLATE	14	C
-55	NAS696A08K	NUTPLATE	2	E
	NAS696A08K	NUTPLATE	1	C
	NAS698A08K	NUTPLATE	1	C
-56	S1048-2	DOUBLER ASSEMBLY	1	
	NAS395-14-3	NUTPLATE	6	
-57	S225-5	PLATE INSPECTION	1	
		ATTACHING PARTS		
-58	S1021Z8-6	SCREW	6	
		---•---		
-59	S1862-1	NUTPLATE TIN	6	
-60	0712506-1	SHIELF ASSEMBLY-RADIO	1	
-61	0712507-1	STIFFENER	1	
-62	0712507-2	STIFFENER	2	
-63	0712626-4	STIFFENER	1	
	S1741-1	ANCHOR	3	
-64	S225-1	PLATE	1	
		ATTACHING PARTS		
	S1878-1	STUD UC	3	
		---•---		
-65	0712514-1	FLOORBOARD ASSEMBLY	1	
-66	S225-1	PLATE	2	
		ATTACHING PARTS		
	S1878-1	STUD UC	3	
		---•---		
-66A	S225-7	PLATE	1	
		ATTACHING PARTS		
	S1878-1	STUD	3	
		---•---		
-67	0712510-1	STIFFENER	4	
-68	SEE FIG 30	BATTERY BOX INSTALLATION	1	
-69	0712509-1	STIFFENER-LH	1	
-70	0712515-1	GUSSET-LH	1	
-71	0712607-6	GUSSET-RH	1	
-72	CR163-4-4	RIVET-CHERRY	4	
-73	CR163-4-2	RIVET-CHERRY	9	
-74	0712520-1	STIFFENER-LH	1	B
-75	0712520-2	STIFFENER-RH	1	B
-76	0712519-1	GUSSET-LH	1	B
-77	0712519-2	GUSSET-RH	1	B
-78	1260474-1	BRACKET-ELT MOUNTING	1	D

A---182 SERIAL 18260446 THRU 18260825
B---182 SERIAL 18260826 THRU 18261530
A182 SERIAL A182-0137 & ON
C---182 SERIAL 18261531 THRU 18262465
D---182 SERIAL 18260826 THRU 18262465
E---182 SERIAL 18260446 THRU 18261530

Fuselage (Cont)

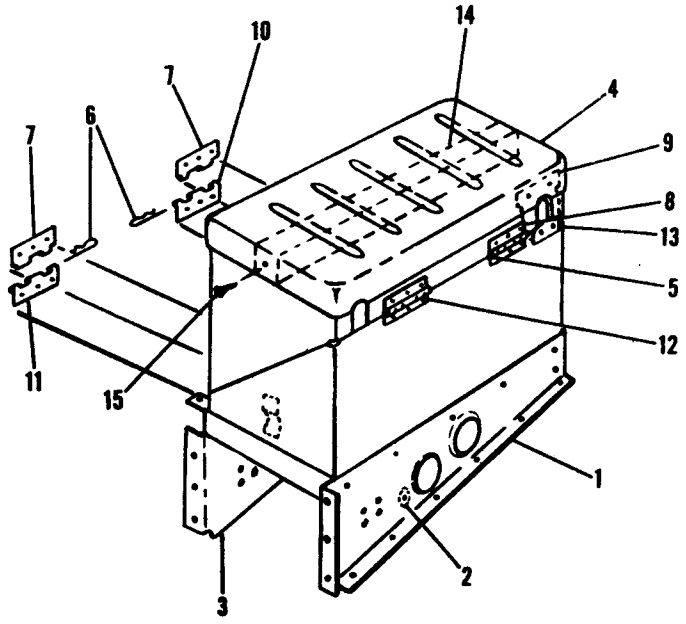


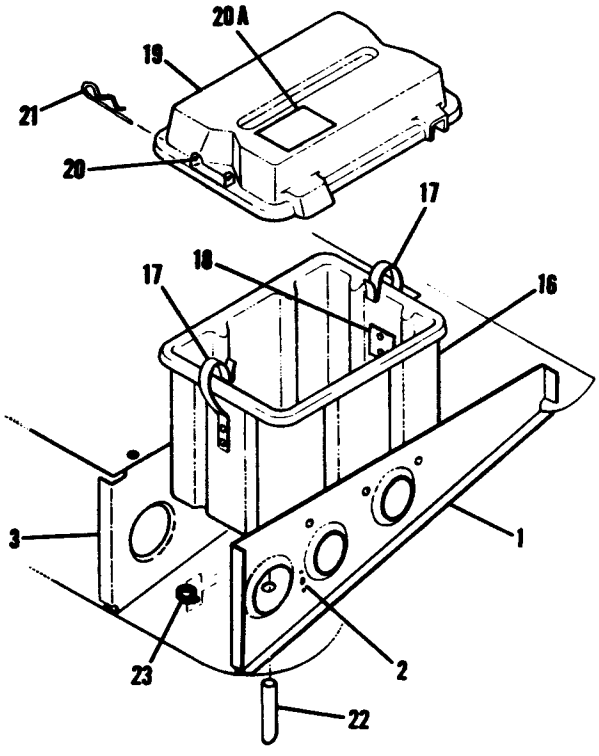


Figure 30. Battery Box Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30 -		BATTERY BOX INSTALLATION	NP	
	0712513-1	BULKHEAD ASSEMBLY-BATTERY	1	E
- 1	0712631-1	BULKHEAD ASSEMBLY-BATTERY BOX	1	C
	0712631-7	BULKHEAD ASSEMBLY-BATTERY BOX	1	D
- 2	NAS680A4	NUTPLATE	1	E
	MS35489-9S	GROMMET	1	F
- 3	0712631-6	BULKHEAD-BATTERY BOX	1	E
	0712513-4	BULKHEAD ASSY RH-BATTERY BOX	1	
	S2034-1	MOUNT		
		ATTACHING PARTS	1	
	S10228-8	SCREW		
		---*---		
- 4	0712632-1	BOX ASSEMBLY-BATTERY	1	A
- 5	0412151-5	PIN-HINGE	2	
- 6	AN415-2	PIN-LOCK	2	
	0412147	BOX ASSEMBLY-UPPER	1	
- 7	0412151-1	HINGE HALF-LOWER	2	
- 8	0412151-4	HINGE HALF-UPPER	2	
- 9	0412470	INSULATOR	1	
	0712632-2	BOX ASSEMBLY-LOWER	1	
-10	0412151-2	HINGE HALF-LOWER AFT	1	
-11	0412151-3	HINGE HALF-LOWER FORWARD	1	
-12	0412151-1	HINGE HALF-UPPER	2	
-13	0412471-3	INSULATOR	1	
	S1495-6	TUBE-BATTERY DRAIN 3.0 IN LG BULK ITEM REF S307-10-0030 WHEN EXHAUSTED USE S1495-10	1	
	S1495-10	HOSE-3 IN LG BULK ITEM REF S1495-10-3.00	1	
	NAS397-8	CLAMP	1	
-14	0413279	SPACER	2	
		ATTACHING PARTS		
-15	AN545-6R4	SCREW	1	B
		---*---	1	
	0512167-30	BOX ASSEMBLY-BATTERY	2	
-16	0512167-29	BASE ASSEMBLY-BATTERY BOX	2	
-17	0512167-10	LATCH-SPRING	1	
-18	0512167-17	PLATE-BACKING	2	
-19	0512167-27	COVER ASSEMBLY-BATTERY BOX	1	
-20	0413307-13	CATCH	2	
-20A	1213535-1	PLACARD	1	
-21	AN415-2	PIN-LATCH	1	B
-22	S1495-6	HOSE-DRAIN 2.75 IN LG BULK ITEM REF S1495-6-2.75 S-1071-4-2.75		
		ATTACHING PARTS	1	B
-23	NAS397-10	CLAMP		
		---*---	1	F
-24	0712626-1	SHELF-RADIO		

A---182 SERIAL 18253599 THRU 18254423
B---182 SERIAL 18254424 THRU 18262465
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18253599 THRU 18255058
D---182 SERIAL 18255059 THRU 18260445
A182 SERIAL A182-0001 & ON
E---182 SERIAL 18260446 THRU 18262465
F---182 SERIAL 18253599 THRU 18260445
A182 SERIAL A182-0001 & ON

Fuselage (Cont)

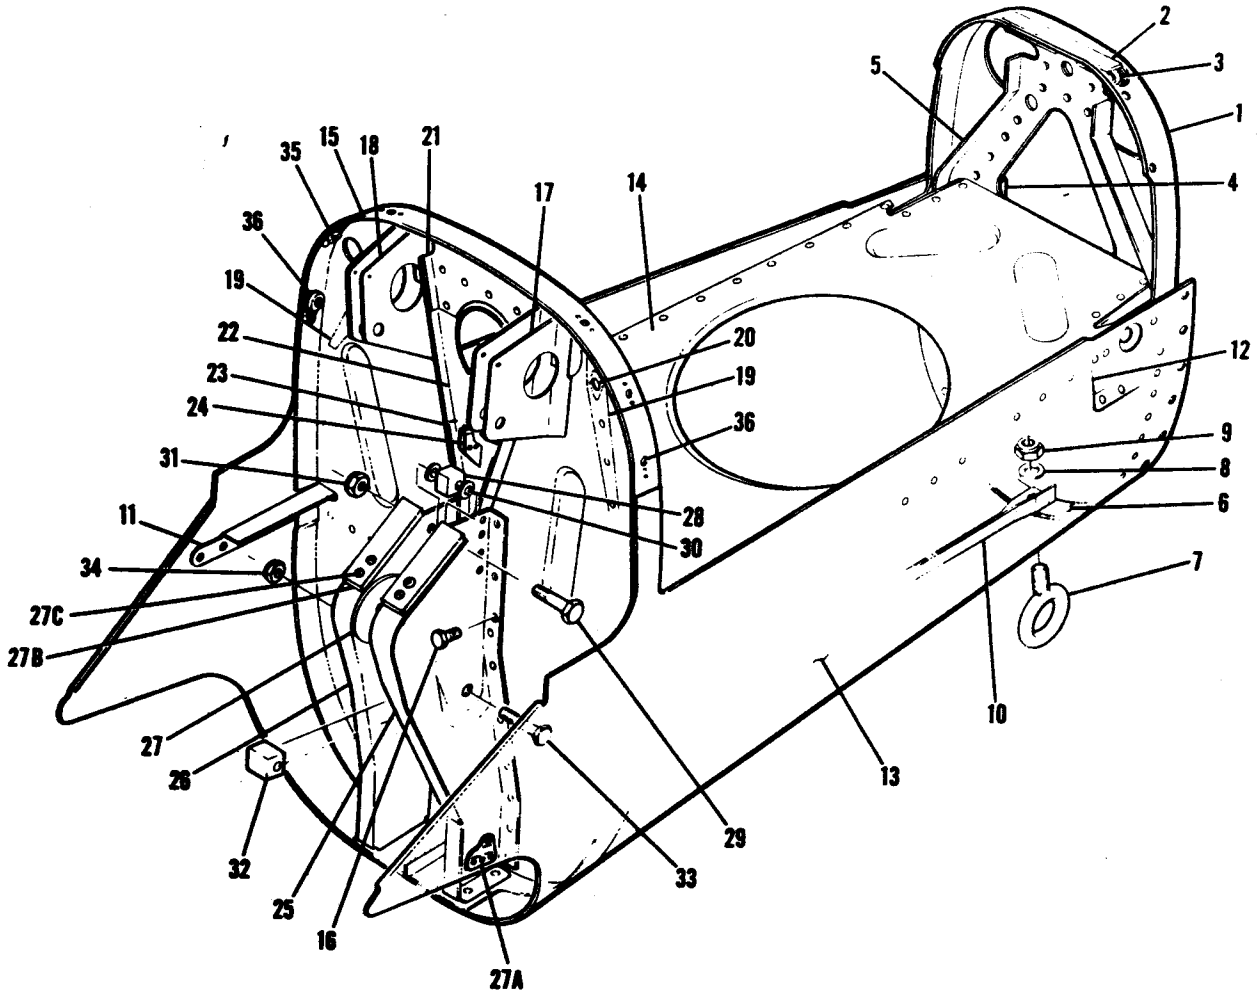


182 SERIAL 18253599 THRU 18261528

Figure 31. Aft Tailcone Assembly Sta. 209.00 to 230.187

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
31 -	0712628-2	AFT TAILCONE ASSEMBLY-FUSELAGE STA 209.00 TO 230.187	1	C
	0712628-4	AFT TAILCONE ASSEMBLY-FUSELAGE STA 209.00 TO 230.187	1	D
- 1	0712616-1	BULKHEAD ASSEMBLY-FUSELAGE STA 230.187	1	C
	0712616-7	BULKHEAD ASSEMBLY-FUSELAGE STA 230.187	1	D
- 2	0712616-5	STIFFENER	2	
- 3	NAS696A3	NUT	1	
- 4	0712616-6	DOUBLER	1	C
- 5	0712616-4	STIFFENER	1	D
	0712616-9	STIFFENER	1	
- 6	0712616-3	REINFORCEMENT	1	
- 7	0422344	EYEBOLT-MOORING		
		ATTACHING PARTS		
- 8	AN960-516L	WASHER	1	
- 9	NAS679A5	NUT	1	
		---*---		
-10	0712619-1	STRINGER-AFT TAILCONE	1	
-11	0712618-2	ANGLE-BULKHEAD SUPPORT RH	1	
	0712618-1	ANGLE-BULKHEAD SUPPORT LH	1	
-12	0712629-1	BRACKET-LH	1	
	0712629-2	BRACKET-RH	1	
-13	0712628-3	SKIN-AFT TAILCONE	1	
-14	0712617-2	BULKHEAD-HORIZONTAL	1	
	0712642-1	SUPPORT ASSEMBLY	1	
-15	0712615-1	BULKHEAD ASSEMBLY-FUSELAGE STA 209.00		
		ATTACHING PARTS		
-16	AN3-5A	BOLT	2	
	AN960-10	WASHER	2	
	MS21044N3	NUT	2	
		---*---		
-17	0760621-1	BRACKET-PULLEY LH	1	
-18	0760621-2	BRACKET-PULLEY RH	1	
		ATTACHING PARTS		
	AN3-3A	BOLT	1	
	MS21044N3	NUT	1	
		---*---		
-19	1212003-1	DOUBLER	2	
-20	NAS697A4	NUTPLATE	2	
-21	0712622-2	REINFORCEMENT-BULKHEAD	1	
-22	0712620-1	DOUBLER-FIN SUPPORT	1	
-23	0712636-1	SUPPORT-PULLEY BRACKET	1	
-24	0412467	BRACKET-ELEVATOR TAB CONTROL PULLEY	1	
-25	0712621-5	BRACKET ASSEMBLY-ELEVATOR BELLCRANK LH	1	A
	0712621-7	BRACKET ASSEMBLY-ELEVATOR BELLCRANK LH	1	B
-26	0712621-6	BRACKET ASSEMBLY-ELEVATOR BELLCRANK RH	1	A
	0712621-8	BRACKET ASSEMBLY-ELEVATOR BELLCRANK RH	1	B
-27	0712306-5	DOUBLER	1	
-27A	0712650-1	BRACKET-ELEVATOR SPRING	2	B
-27B	0760129-1	STRIP		
		ATTACHING PARTS	2	B
-27C	AN515-6R6	SCREW	2	B
	NAS679A06	NUT		
		---*---	1	
-28	0510146-8	SPACER-RUDDER BELLCRANK STOP		
		ATTACHING PARTS	1	
-29	AN4-12A	BOLT	2	
-30	AN960-416	WASHER	1	
-31	NAS679A4	NUT		
		---*---	1	
-32	0510146-3	SPACER-RUDDER BELLCRANK STOP		
		ATTACHING PARTS	1	
-33	AN4-14A	BOLT	1	
-34	NAS679A4	NUT		
		---*---	4	
-35	NAS697A08	NUTPLATE	2	
-36	NAS696A08	NUTPLATE		

A---182 SERIAL 18253599 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
B---182 SERIAL 18260056 THRU 18261528
A182 SERIAL A182-0117 THRU A182-0146
C---182 SERIAL 19253599 THRU 18260445
A182 SERIAL A182-0001 THRU A182-0116
D---182 SERIAL 18260446 THRU 18261528
A182-0117 THRU A182-0146

Fuselage (Cont)

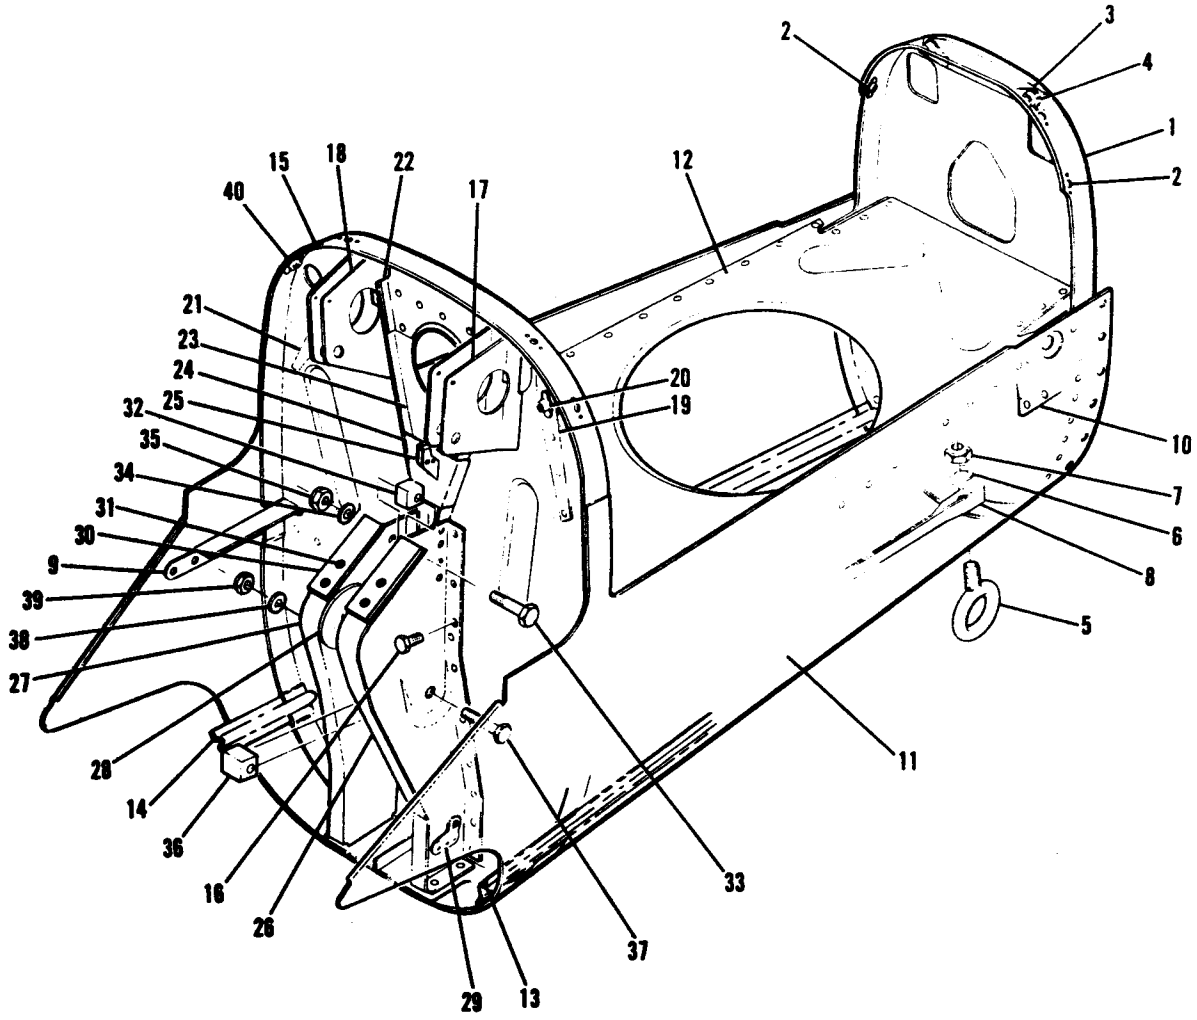

182 SERIAL 18261529 THRU 18262465

Figure 31A. Aft Tailcone Assembly Sta. 209.00 to 230.187

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
31A-	0712525-2	AFT TAILCONE ASSY-FUSELAGE STA 209.00 TO STA 230.187	1	A
- 1	0712523-1	BULKHEAD ASSY-FUSELAGE STA 230.187	1	
- 2	NAS697A08	NUTPLATE	4	
- 3	0712528-1	DOUBLER ASSY	1	
- 4	NAS696A3	NUTPLATE	2	
- 5	0422344	EYEBOLT-MOORING	1	
		ATTACHING PARTS		
- 6	AN960-516L	WASHER	1	
- 7	NAS679A5	NUT	1	
		---*---		
- 8	0712619-2	STRINGER-AFT TAILCONE	1	
- 9	0712618-4	ANGLE-BULKHEAD SUPPORT RH	1	
	0712618-3	ANGLE-BULKHEAD SUPPORT LH	1	
-10	0712524-1	BRACKET LH-STABILIZER ATTACH	1	
	0712524-2	BRACKET RH-STABILIZER ATTACH	1	
-11	0712525-3	SKIN-AFT TAILCONE	1	
-12	0712522-1	BULKHEAD ASSY-HORIZONTAL	1	
	0712522-3	SUPPORT ASSEMBLY	1	
	NAS680A3	NUTPLATE	2	
-13	0712526-1	STRINGER-AFT TAILCONE LH	1	
-14	0712526-2	STRINGER-AFT TAILCONE RH	1	
-15	0712615-3	BULKHEAD ASSY-FUSELAGE STA 209.00	1	
		ATTACHING PARTS		
-16	AN3-5A	BOLT	2	
	AN960-10	WASHER	2	
		---*---		
-17	0760621-1	BRACKET-PULLEY LH	1	
-18	0760621-2	BRACKET-PULLEY RH	1	
		ATTACHING PARTS		
	AN3-3A	BOLT	1	
	MS21044N3	NUT	1	
		---*---		
-19	1212127-1	DOUBLER ASSY-FWD 1 RH & 1 LH	2	
-20	NAS697A4	NUTPLATE	1	
-21	1212127-3	DOUBLER-AFT 1 RH & 1 LH	2	
-22	1212126-1	DOUBLER-BULKHEAD	1	
-23	0712521-1	DOUBLER-FIN SUPPORT	1	
-24	0712636-1	SUPPORT-PULLEY BRACKET	1	
-25	0412467	BRACKET-ELEVATOR TAB CONTROL PULLEY	1	
-26	0712621-7	BRACKET ASSY-ELEVATOR BELLCRANK LH	1	
-27	0712621-8	BRACKET ASSY-ELEVATOR BELLCRANK RH	1	
-28	0712306-5	DOUBLER	1	
-29	0712650-1	BRACKET-ELEVATOR SPRING	1	
-30	0760129-1	STRIP	2	
		ATTACHING PARTS		
-31	AN515-6R6	SCREW	2	
	NAS679A06	NUT	2	
		---*---		
-32	0510146-8	SPACER-RUDDER BELLCRANK STOP	1	
		ATTACHING PARTS		
-33	AN4-12A	BOLT	1	
-34	AN960-416	WASHER	1	
-35	NAS679A4	NUT	1	
		---*---		
-36	0510146-3	SPACER-RUDDER BELLCRANK STOP	1	
		ATTACHING PARTS		
-37	AN4-14A	BOLT	1	
-38	AN960-416	WASHER	1	
-39	NAS679A4	NUT	1	
		---*---		
-40	NAS697A08	NUTPLATE	4	
		A---182 SERIAL 18261529 THRU 18262465 A182 SERIAL A182-0147 & ON		

Fuselage (Cont)

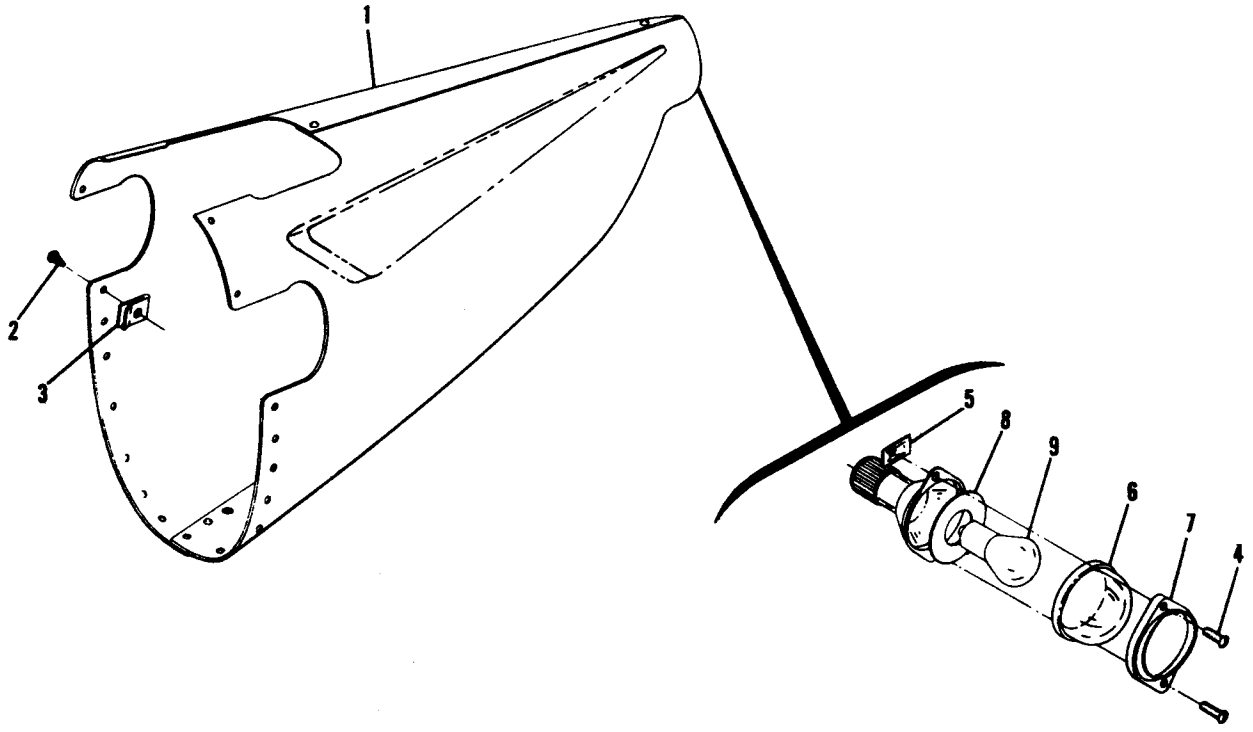


Figure 32. Stinger Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
32 -		STINGER INSTALLATION ----------	NP	
- 1	0712635-1	STINGER ASSEMBLY WHEN EXHAUSTED USE 1212010-1-791 -------	1	A
	1212010-1-791	STINGER ASSEMBLY WHEN EXHAUSTED USE 1212010-5-791 -------	1	C
	1212010-5-791	STINGER ASSEMBLY ----------	1	D
	1212010-11-791	STINGER ASSEMBLY ----------	1	E
		ATTACHING PARTS		
- 2	S1021Z8-8	SCREW ----------	15	
- 3	NAS395-14-3	NUT ----------	15	
		---*---		
	0433006-7	LIGHT ASSEMBLY-TAIL WHEN EXHAUSTED USE C622001-0102 ---	1	A
	C622001-0102	LIGHT ASSEMBLY-TAIL ----------	1	B
		ATTACHING PARTS		
- 4	S1021Z6R8	SCREW ----------	2	A
	AN530-6R10	SCREW ----------	2	B
- 5	NAS488-1-3	NUT ----------	2	A
	NAS488-5-3	NUT ----------	2	B
		---*---		
- 6	A4513-1	LENS-CLEAR GMC ----------	1	
- 7	C622001-0104	RETAINER-LENS GMC ----------	1	
- 8	A2109-3	GASKET GMC ----------	1	
- 9	1777	LAMP ----------	1	A
	1777	LAMP ----------	1	B
		A---182 SERIAL 18253599 THRU 18258685 A182 SERIAL A182-0001 THRU A182-0096		
		B---182 SERIAL 18258686 THRU 18262465 A182 SERIAL A182-0097 & ON		
		C---182 SERIAL 18258686 THRU 18259744 A182 SERIAL A182-0097 THRU A182-0116		
		D---182 SERIAL 18259745 THRU 18261530 A182 SERIAL A182-0117 THRU A182-0146		
		E---182 SERIAL 18261531 THRU 18262465 A182 SERIAL A182-0147 & ON		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
33 -		NOSE GEAR INSTALLATION	NP	
- 1	0743600-200 **	SHOCK STRUT ASSEMBLY-NOSE GEAR SEE FIGURE 35	1	C
	0743621-200	SHOCK STRUT ASSEMBLY-NOSE GEAR SEE FIGURE 35	1	D
		ATTACHING PARTS		
- 2	AN5-31A	BOLT	1	
	NAS679A5	NUT	2	
	AN960-516	WASHER	2	
- 3	AN5-10A	BOLT	1	
		---*---		
- 4	SEE FIG 38	DAMPENER ASSEMBLY-SHIMMY	1	
		ATTACHING PARTS		
- 5	AN23-19	BOLT	1	C
	AN960-10	WASHER	1	C
	AN960D416L	WASHER	AR	D
	AN320-3	NUT	1	C
	AN4-7	BOLT	2	D
	NAS75-4-10	BUSHING	2	D
	MS24665-132	PIN-COTTER	1	
	MS20392-2C23	PIN	1	C
	MS20392-2C31	PIN	1	D
		---*---		
- 6	SEE FIG 34	STEERING SYSTEM INSTALLATION-NOSE GEAR	NP	
- 7	0743604-1	TORQUE ARM ASSEMBLY-NOSE GEAR STEERING	1	C
	0743604-4	TORQUE ARM ASSEMBLY-NOSE GEAR STEERING WEU 0743604-6	1	K
	0743604-6	TORQUE ARM ASSEMBLY-NOSE GEAR STEERING	1	L
		ATTACHING PARTS		
- 8	NAS221-13	SCREW	4	
	AN960-10	WASHER	4	
	MS21044N3	NUT	4	
		---*---		
	GNB4012	BEARING TOR	1	
	GNB40120H	BEARING ALTERNATE TOR	1	
- 8A	0743628-1	CLOSURE ASSY-NOSE GEAR	1	L
- 9	SEE FIG 36	WHEEL ASSEMBLY-NOSE GEAR	NP	
	SEE FIG 37	WHEEL ASSEMBLY-NOSE GEAR ALTERNATE	NP	
		ATTACHING PARTS		
-10	AN5-47	BOLT	1	
-11	AN310-5	NUT	1	
-12	MS24665-134	PIN-COTTER	1	
-13	AN960-516L	WASHER	1	
-14	0543001	FERRULE-AXLE BOLT	2	
-15	0543037-1	SPACER-AXLE	2	
-16	0543003	TUBE-AXLE	1	
		---*---		
-17	0743609-201 ##	SPEED FAIRING ASSEMBLY-NOSE GEAR	1	A
	0743609-8 *	SPEED FAIRING ASSEMBLY-NOSE GEAR	1	B
-17A	0743625-14	SPEED FAIRING ASSEMBLY-NOSE GEAR	1	G
-17B	0543065-1	SPEED FAIRING ASSEMBLY-NOSE GEAR	1	H
		ATTACHING PARTS		
-18	AN5-47A	BOLT FOR FAIRING WITH 2.90 BETWEEN MOUNTING FLANGES	1	A
	AN5-51A *	BOLT FOR FAIRING WITH 3.24 BETWEEN MOUNTING FLANGES	1	B
-18A	AN5-51A	BOLT	1	D
-19	AN960-516	WASHER	AR	J
-19A	S1450-5-12-035	WASHER	2	H
-20	0743009-1	SPACER	2	
-21	NAS679A5	NUT	1	
-22	0742410-15	STUD WEU 0742410-27	1	J
	0742410-27	STUD	1	H
-23	AN310-5	NUT	2	
-24	MS24665-136	PIN-COTTER	2	
-25	0742410-8	FERRULE	2	
		---*---		
	0743609-202	SPACER	2	
-26	0742410-14	DOUBLER	2	C
-26A	0743625-9	DOUBLER	2	G
-26B	0541207-2	DOUBLER	2	H
-27	0743609-6	SCRAPER	1	C

CONTINUED ON NEXT PAGE

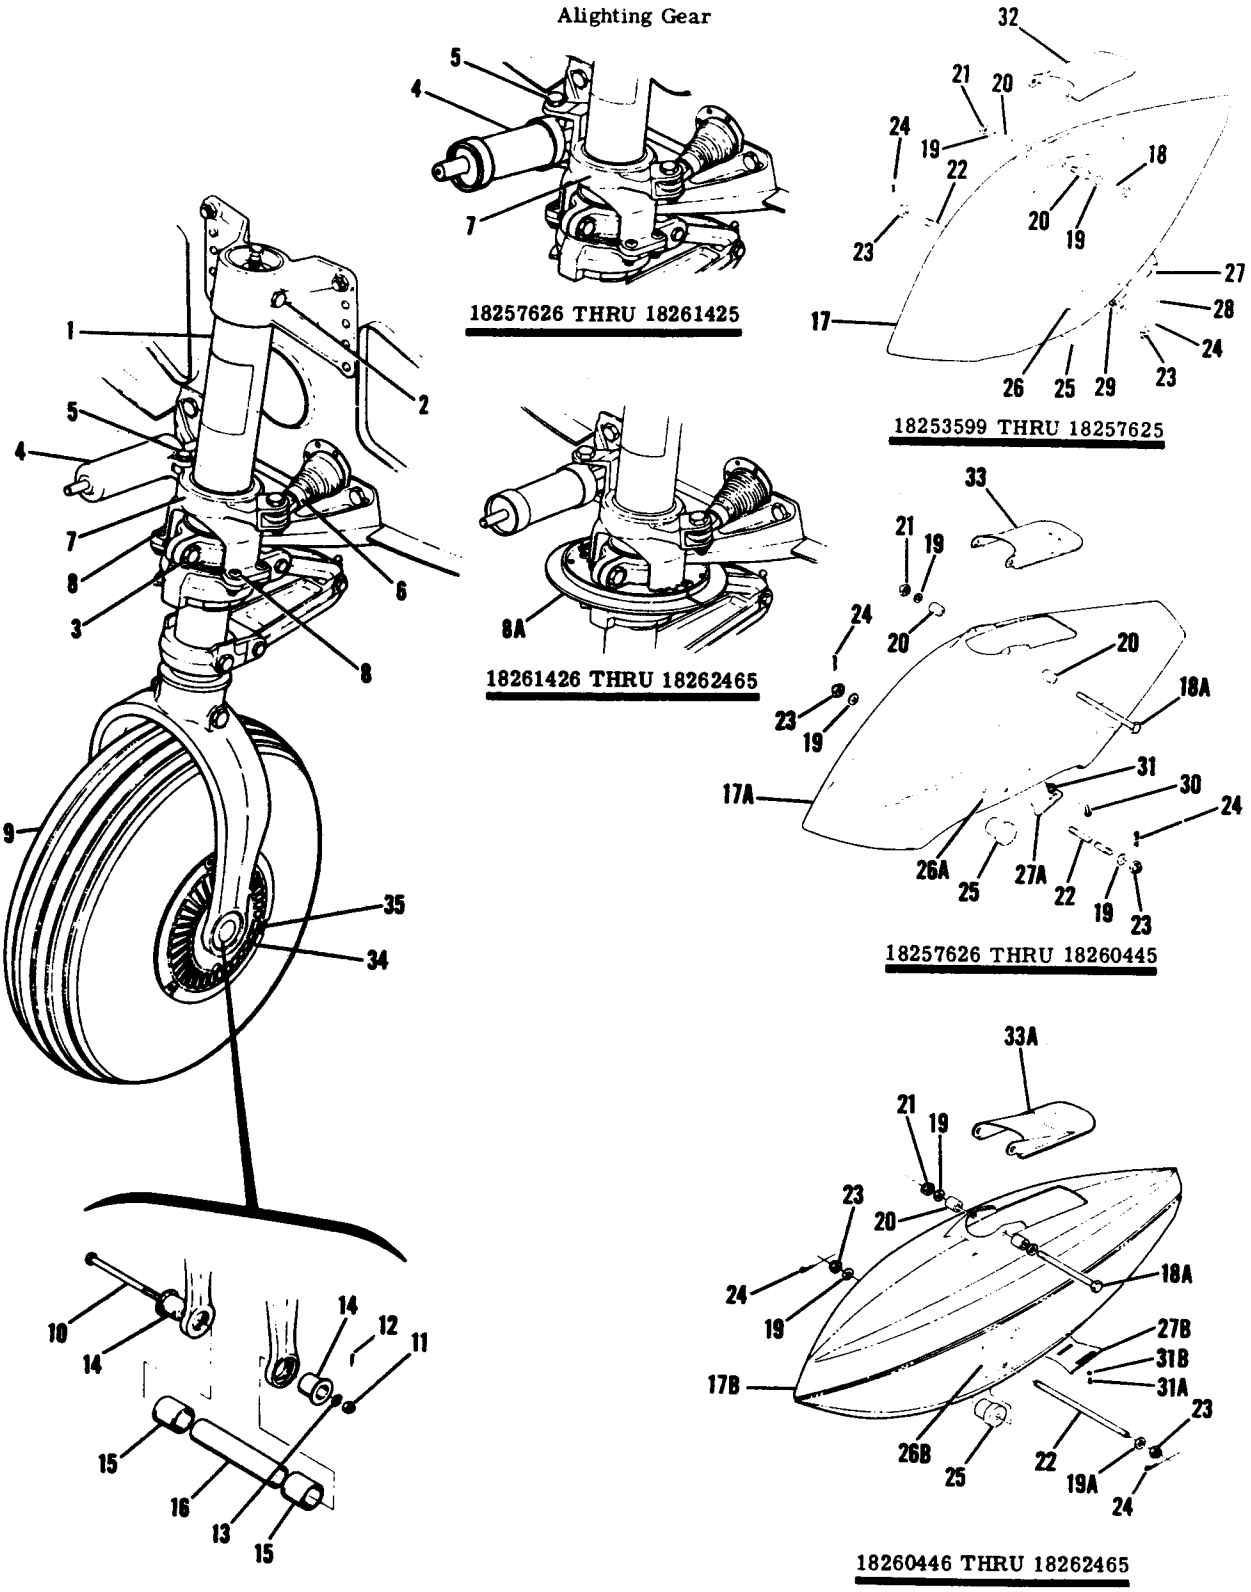


Figure 33. Nose Gear Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
33 -27A	0743625-11	SCRAPER	1	G
-27B	0541205-2	SCRAPER	1	H
		ATTACHING PARTS		
-28	NAS221-7	SCREW	4	C
-29	MS21044N3	NUT	4	C
-30	AN520-10R10	SCREW	3	G
-31	AN960-10	WASHER	3	G
	MS21044N3	NUT	3	G
-31A	AN520-10R6	SCREW	3	H
-31B	AN960-10	WASHER	3	H
	MS21044N3	NUT	3	H
		---*---		
-32	0743609-5	COVER PLATE ASSEMBLY FOR FAIRING WITH 2.90 BETWEEN MOUNTING FLANGES	1	A
	0743609-10 *	COVER PLATE ASSEMBLY FOR FAIRING WITH 3.24 BETWEEN MOUNTING FLANGES	1	B
-33	0743625-7	COVER PLATE ASSEMBLY	1	G
-33A	0743625-15	COVER PLATE ASSEMBLY	1	H
-34	0743627-1	HUB CAP-NOSE GEAR VALVE STEM SIDE	1	E
	0743627-3	HUB CAP-NOSE GEAR VALVE STEM SIDE	1	F
	0743627-5	HUB CAP-NOSE GEAR VALVE STEM SIDE	1	N
	0743627-2	HUB CAP-NOSE GEAR	1	E
	0743627-4	HUB CAP-NOSE GEAR	1	F
	0743627-6	HUB CAP-NOSE GEAR	1	N
		ATTACHING PARTS		
-35	AN515-8R4	SCREW	3	M
	S2191-8-4	SCREW	3	N
	AN936A8	WASHER	3	D
		---*---		
	6241M	EXTENSION VALVE DL	1	M
	6241B	EXTENSION VALVE DL	1	N
	3680C	EXTENSION VALVE ALTERNATE SV	1	D

NOTE. **IF AIRCRAFT IS EQUIPPED WITH NOSE GEAR FAIRING ALSO ORDER PARTS MARKED *. IF OLD FAIRING HAS 2.90 IN DIM BETWEEN MOUNTING FLANGES.

NOTE. ##0743609-201 FAIRING IS FOR USE ON AIRPLANES THAT HAVE THE ORIGINAL NOSE GEAR FORGING NO. 0543012-497. WHEN ORDERING THIS PART ALSO ORDER 0743609-10 COVER PLATE & ONE AN5-51A BOLT. 0743609-8 FAIRING IS FOR USE ON AIRPLANES THAT HAVE THE REDESIGNED NOSE GEAR FORK FORGING NO. 0442503-497.

A---182 SERIAL 18253599 THRU 18254335 THAT HAVE NOT BEEN EQUIPPED WITH 0442503-497 FORK FORGING

B---182 SERIAL 18254336 THRU 18257625 & ALL PRIOR AIRPLANES THAT HAVE BEEN EQUIPPED WITH 0442503-497 FORK FORGING
A182 SERIAL A182-0001 THRU A182-0056

C---182 SERIAL 18253599 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056

D---182 SERIAL 18257626 THRU 18262465
A182 SERIAL A182-0057 & ON

E---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096

F---182 SERIAL 18258506 THRU 18261714
A182 SERIAL A182-0097 & ON

G---182 SERIAL 18257626 THRU 18260445
A182 SERIAL A182-0057 & ON

H---182 SERIAL 18260446 THRU 18262465

J---182 SERIAL 18253599 THRU 18260445
A182 SERIAL A182-0001 & ON


K---182 SERIAL 18257626 THRU 18261425
A182 SERIAL A182-0057 THRU A182-0136

L---182 SERIAL 18261426 THRU 18262465
A182 SERIAL A182-0137 & ON

M---182 SERIAL 18257626 THRU 18261714
A182 SERIAL A182-0057 & ON

N---182 SERIAL 18261714 THRU 18262465

Alighting Gear(Cont)

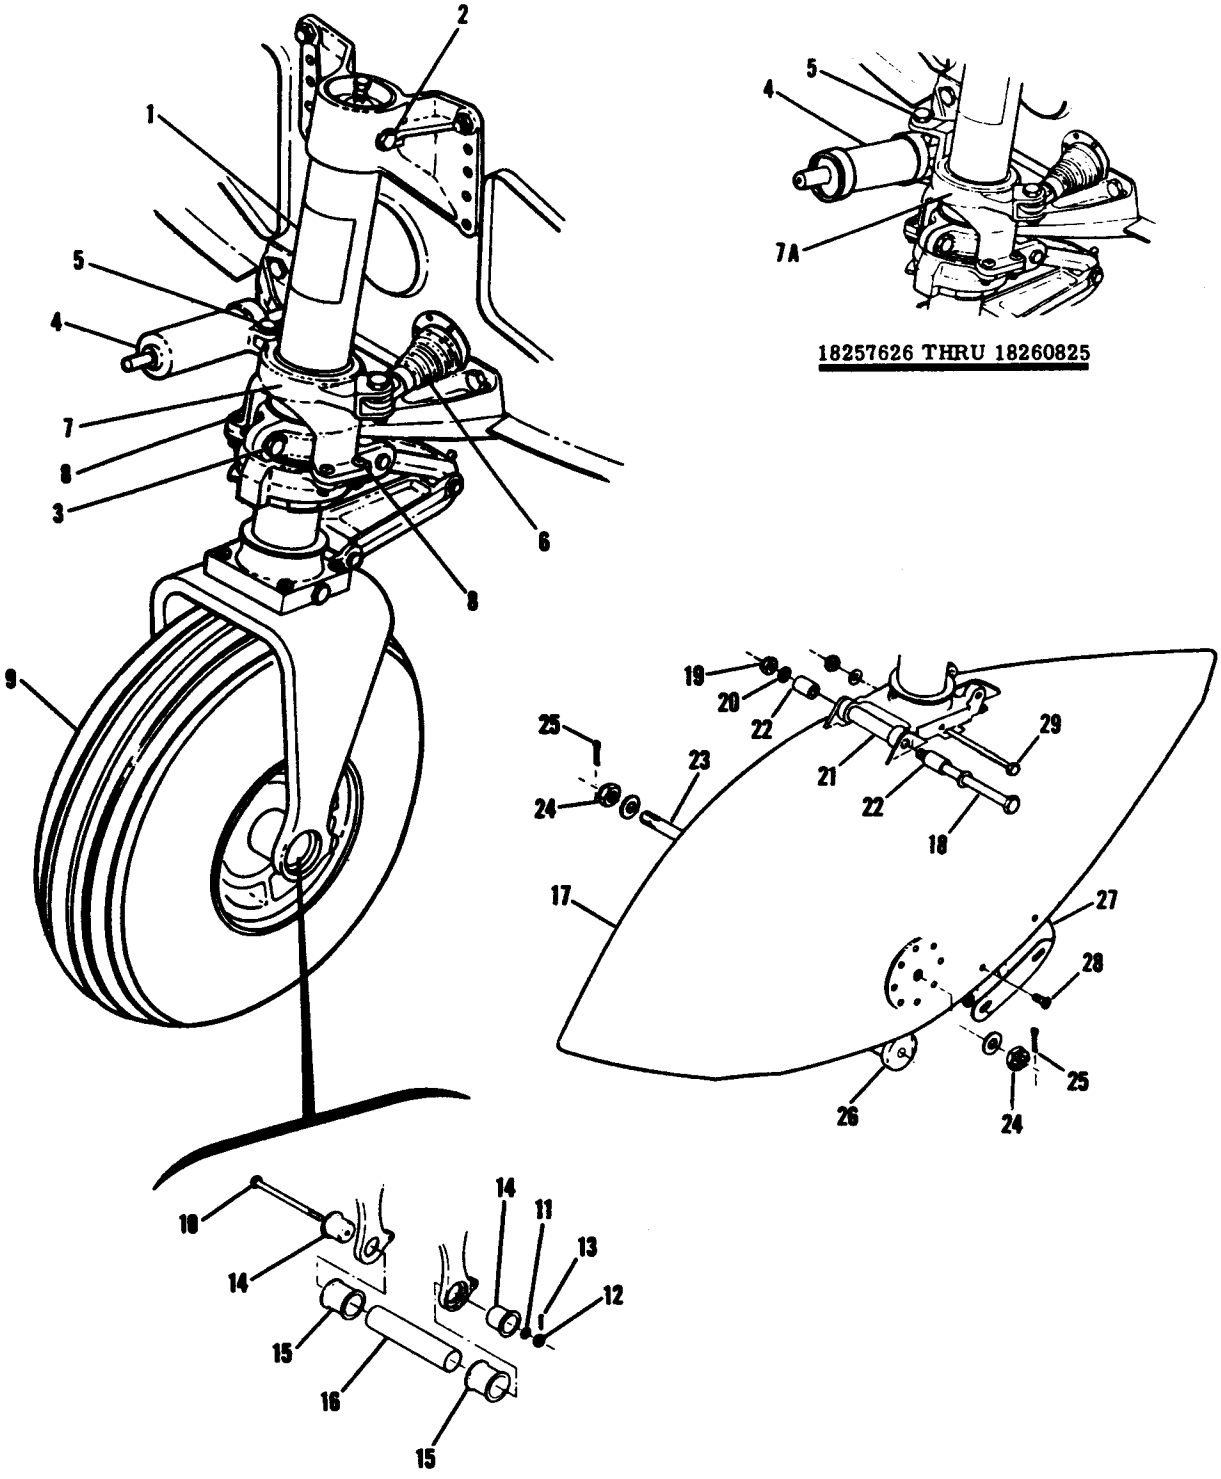

182 SERIAL 18253599 THRU 18260825

Figure 33A. Heavy Duty Nose Gear Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
33A-		NOSE GEAR INSTALLATION-HEAVY DUTY	NP	A
- 1	SEE FIG 35A	SHOCK STRUT ASSEMBLY-HEAVY DUTY	1	
		ATTACHING PARTS		
- 2	AN5-31A	BOLT	1	
	NAS679A5	NUT	2	
	AN960-516	WASHER	2	
- 3	AN5-10A	BOLT	1	
		---*---		
- 4	SEE FIG 38	DAMPENER ASSEMBLY-SHIMMY	1	
		ATTACHING PARTS		
- 5	AN23-19	BOLT	1	B
	AN960-10	WASHER	1	B
	AN960D416L	WASHER	AR	C
	AN320-3	NUT	1	B
	AN4-7	BOLT	2	C
	NAS75-4-10	BUSHING	2	C
	MS24665-132	COTTER PIN	1	
	MS20392-2C23	PIN	1	B
	MS20392-2C31	PIN	1	C
		---*---		
- 6	SEE FIG 34	STEERING SYSTEM INSTALLATION-NOSE GEAR	NP	
- 7	0743604-1	TORQUE ARM ASSEMBLY-NOSE GEAR STEERING	1	B
- 7A	0743604-4	TORQUE ARM ASSEMBLY-NOSE GEAR STEERING	1	C
		ATTACHING PARTS		
- 8	NAS221-13	SCREW	4	
	AN960-10	WASHER	4	
	MS21044N3	NUT	4	
		---*---		
	GNB4012	BEARING TOR	1	
	GNB40120H	BEARING ALTERNATE TOR	1	
- 9	SEE FIG 37A	WHEEL ASSEMBLY - 6.00 X 6 HEAVY DUTY	1	
		ATTACHING PARTS		
-10	AN5-55	BOLT	1	
-11	AN960-516L	WASHER	1	
-12	AN310-5	NUT	1	
-13	MS24665-134	COTTER PIN	1	
-14	1442001-2	BUCKET-AXLE BOLT	2	
-15	1442002-1	SPACER-AXLE	2	
-16	1442001-1	TUBE-AXLE	1	
		---*---		
-17	0743618-2	FAIRING ASSEMBLY-NOSE GEAR HEAVY DUTY	1	
		ATTACHING PARTS		
-18	AN5-56A	BOLT	1	
-19	NAS679A5	NUT	1	
-20	AN960-516L	WASHER	1	
-21	NAS75-5-225	SPACER	1	
-22	0743009-1	SPACER TOW BAR	2	
-23	1442013-1	STUD	1	
-24	AN310-5	NUT	2	
-25	MS24665-134	COTTER PIN	2	
-26	0743619-1	FERRULE	2	
		---*---		
-27	0743618-4	SCRAPER	1	
		ATTACHING PARTS		
-28	NAS221-7	SCREW	4	
	MS21044N3	NUT	4	
		---*---		
-29	AN5-34A	BOLT USE WITH FAIRING INSTL ONLY	1	

A---182 SERIAL 18253599 THRU 18260825
A182 SERIAL A182-0001 & ON
B---182 SERIAL 18253599 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
C---182 SERIAL 18257626 THRU 18260825
A182 SERIAL A182-0057 & ON

Alighting Gear (Cont)

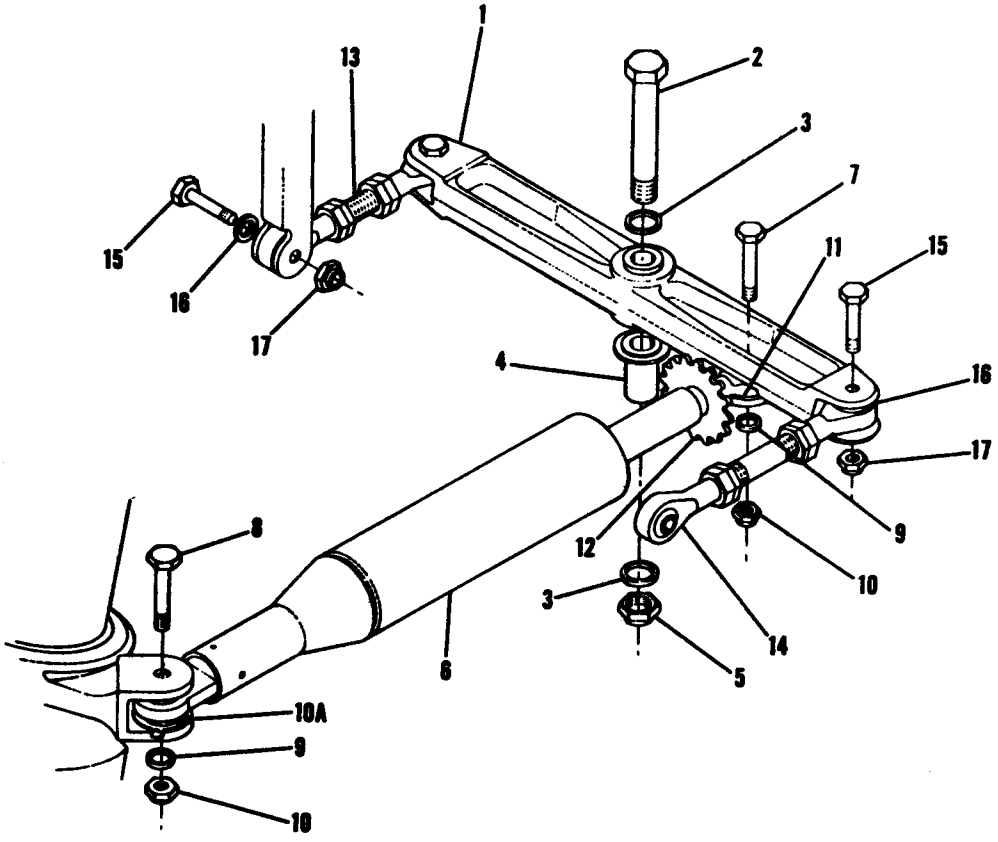


Figure 34. Nose Gear Steering System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
34 -		STEERING SYSTEM INSTALLATION-NOSE GEAR	NP	
- 1	0743602-1	BELLCRANK ASSEMBLY	1	
		ATTACHING PARTS		
- 2	NAS464P6LA32	BOLT	1	
- 3	AN960-616	WASHER	2	
- 4	0743610-1	BUSHING	1	
- 5	NAS679A6	NUT	1	
		---*---		
- 6	0760622-1	BUNGEE ASSEMBLY	1	
		ATTACHING PARTS		
- 7	AN173-12A	BOLT	1	
- 8	AN173-12A	BOLT	1	
- 9	AN960-10	WASHER	2	
-10	MS21044N3	NUT	2	
-10A	0760660-1	POSITIONER	1	
		---*---		
-11	M34-14	BEARING HEC	1	
-12	0760630-1	SPROCKET	1	
		ATTACHING PARTS		
	NAS561-4-6	PIN	1	
		---*---		
-13	0743608-1	ROD ASSEMBLY-PUSH-PULL RH	1	
-14	0743608-2	ROD ASSEMBLY-PUSH-PULL LH	1	
		ATTACHING PARTS		
-15	AN173-12A	BOLT	2	
-16	AN960-10L	WASHER	2	
-17	MS21044N3	NUT	2	
		---*---		

Alighting Gear (Cont)

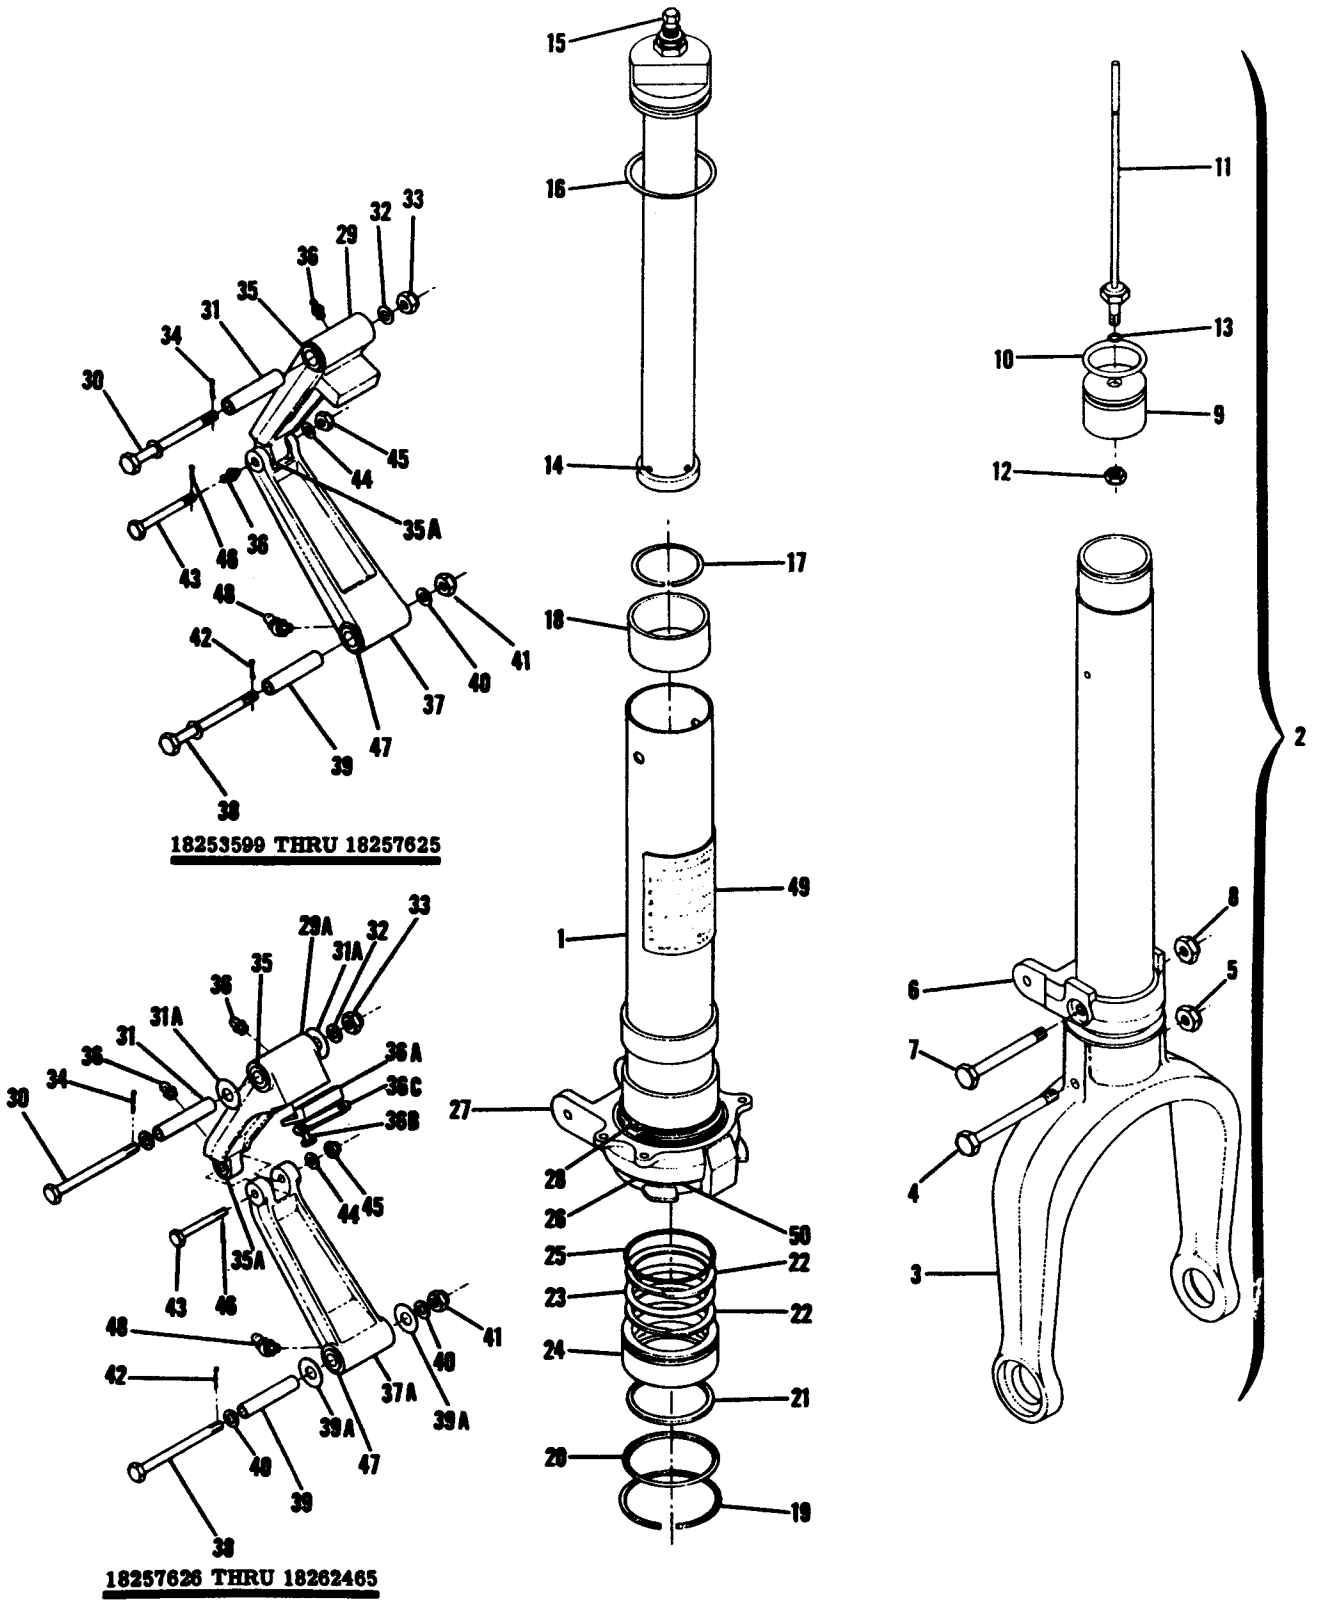


Figure 35. Nose Gear Shock Strut Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
35 -	0743600-200 *	SHOCK STRUT ASSEMBLY-NOSE GEAR	1	A
	0743621-200	SHOCK STRUT ASSEMBLY-NOSE GEAR	1	B
- 1	0743607-1	TUBE ASSEMBLY-SHOCK STRUT	1	A
- 2	0743600-4 *	SHOCK STRUT ASSEMBLY-LOWER	1	B
	0743621-4	SHOCK STRUT ASSEMBLY-LOWER	NP	
- 3		FORK & BARREL ASSEMBLY	1	
	SK182-34 *	FORK-NOSE GEAR REPLACEMENT KIT		
		ATTACHING PARTS		
- 4	AN5-33A	BOLT	1	
- 5	NAS679A5	NUT	1	
		---*---		
- 6		FITTING-TORQUE LINK	NP	
		ATTACHING PARTS		
- 7	AN5-27A	BOLT	1	
- 8	NAS679A5	NUT	1	
		---*---		
- 9	0743612-1	BASE-METERING PIN	1	
-10	AN6227B26	O RING	1	
-11	0743613-1	METERING PIN ASSEMBLY	1	A
	0743626-5	METERING PIN ASSEMBLY	1	B
		ATTACHING PARTS		
-12	NAS679A4	NUT	1	
-13	AN6227B5	O RING	1	
		---*---		
-14		ORIFICE PISTON SUPPORT ASSEMBLY ORDER 0743621-9	1	C
	0743621-9	ORIFICE PISTON SUPPORT ASSEMBLY	1	D
-15	0543036-1	VALVE ASSEMBLY	1	C
	AN901-5A	O RING	1	C
	S1827-1	VALVE ASSEMBLY PIPE THREADS	1	D
-16	AN623083	O RING	1	
-17	0841200-19	LOCK RING	1	
-18	1243021-1	BEARING	1	
-19	0841200-25	LOCK RING	1	
-20	0841200-15	RING-PACK RETAINER	1	
-21	S11065-21	RING-SCRAPER SHWS	2	
-22	S1628-329	RING-BACK UP	1	
-23	AN6227B32	O RING	1	
-24	1243626-1	RING-PACK SUPPORT	1	
-25	AN623086	O RING	1	
-26	0543029	WASHER	1	
-27	0743601-1	COLLAR ASSEMBLY	1	
-28	MS16624-1275	RETAINING RING	1	A
-29	0743605-1	LINK ASSEMBLY-TORQUE UPPER	1	E
-29A	0442506-7	LINK ASSEMBLY-TORQUE UPPER WEU 0442506-12	1	F
	0442506-12	LINK ASSEMBLY-TORQUE UPPER		
		ATTACHING PARTS		
-30	AN4-31	BOLT	1	
-31	0543047-1	SPACER	1	
-31A	0543048-1	SHIM	AR	
-32	AN960-416L	WASHER	AR	
-33	AN310-4	NUT	1	
-34	MS24665-134	PIN-COTTER	1	
		---*---		
-35	NAS77-6-88	BUSHING	2	
-35A	NAS77-3-23	BUSHING	2	
-36	AN944-101A	FITTING-LUBRICATOR	2	
-36A	0442506-6	STOP LUG	1	B
-36B	AN3H3A	BOLT	2	B
-36C	0442506-9	SAFETY LUG	1	B

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
35 -37	0543035-3	LINK ASSEMBLY-TORQUE LOWER	1	A
-37A	0442506-2	LINK ASSEMBLY-TORQUE LOWER	1	B
		ATTACHING PARTS		
-38	AN4-31	BOLT	1	
-39	0543047-1	SPACER	1	
-39A	0543048-1	SHIM	AR	
-40	AN960-416L	WASHER	AR	
-41	AN310-4	NUT	1	
-42	MS24665-134	PIN-COTTER	1	
-43	NAS464-3-22	BOLT	1	
-44	AN960-10L	WASHER	1	
-45	AN310-3	NUT	1	
-46	MS24665-132	PIN-COTTER	1	
		---*---		
-47	NAS77-6-88	BUSHING	2	
-48	MS15002-3	FITTING-LUBRICATOR	1	
-49	0543032-1	PLACARD	1	A
	0543032-3	PLACARD	1	B
-50	1243030-5	SHIM .006 THICK	AR	
	1243030-6	SHIM .012 THICK	AR	
	1243030-7	SHIM .020 THICK	AR	


NOTE. *FOR AIRPLANES PRIOR TO SERIAL 18254336 THAT ARE EQUIPPED WITH SPEED FAIRINGS, ALSO ORDER 0743609-8 SPEED FAIRING, ONE AN5-51A BOLT & ONE 0743609-10 COVER PLATE IF OLD FAIRING HAS 2.90 IN. DIM BETWEEN MOUNTING FLANGES.

A---182 SERIAL 18253599 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
B---182 SERIAL 18257626 THRU 18262465
A182 SERIAL A182-0057 & ON
C---182 SERIAL 18257626 THRU 18259788
A182 SERIAL A182-0057 THRU A182-0116
D---182 SERIAL 18259789 THRU 18262465
A182 SERIAL A182-0117 & ON
E---182 SERIAL 18257626 THRU 18261425
A182 SERIAL A182-0057 THRU A182-0136
F---182 SERIAL 18261426 THRU 18262465
A182 SERIAL A182-0137 & ON


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
35A-	0743600-202		SHOCK STRUT ASSEMBLY-HEAVY DUTY NOSE GEAR	1	A
	0743621-202		SHOCK STRUT ASSEMBLY-HEAVY DUTY NOSE GEAR	1	B
- 1	0743607-1		TUBE ASSEMBLY-SHOCK STRUT	1	
- 2	0743600-201	*	HUB & BARREL ASSEMBLY-HEAVY DUTY	1	A
	0743621-201		HUB & BARREL ASSEMBLY-HEAVY DUTY	1	B
- 3	0743613-1		METERING PIN ASSEMBLY	1	A
	0743626-5		METERING PIN ASSEMBLY	1	B
- 4	0743612-1		METERING PIN BASE	1	
- 5	NAS679A4		NUT	1	
- 6	AN6227B26		O RING	1	
- 7	AN6227B5		O RING	1	
- 8	AN5-51A		BOLT	1	
- 9	AN960-516L		WASHER	1	
-10	NAS679A5		NUT	2	
-11	0743009-1		SPACER-TOW BAR	1	
-12	1243623-2	*	YOKE-NOSE GEAR FORK		
			ATTACHING PARTS		
-13	AN5-16A		BOLT FWD	2	
	AN5-17A		BOLT AFT	2	
-14	AN960-516L		WASHER	4	
-15	NAS679A5		NUT	4	
			---*---		

CONTINUED ON NEXT PAGE


Alighting Gear (Cont)

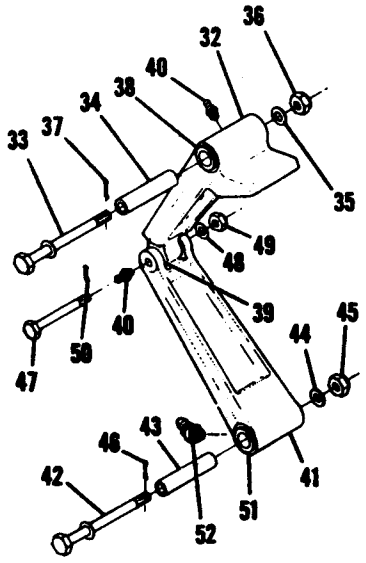

18253599 THRU 18257625

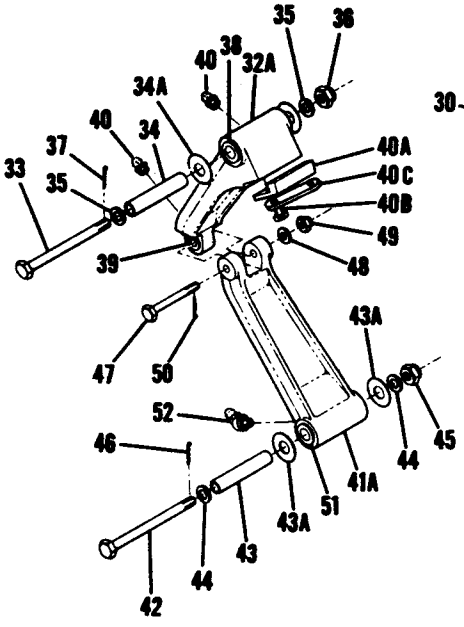

18257626 THRU 18260825

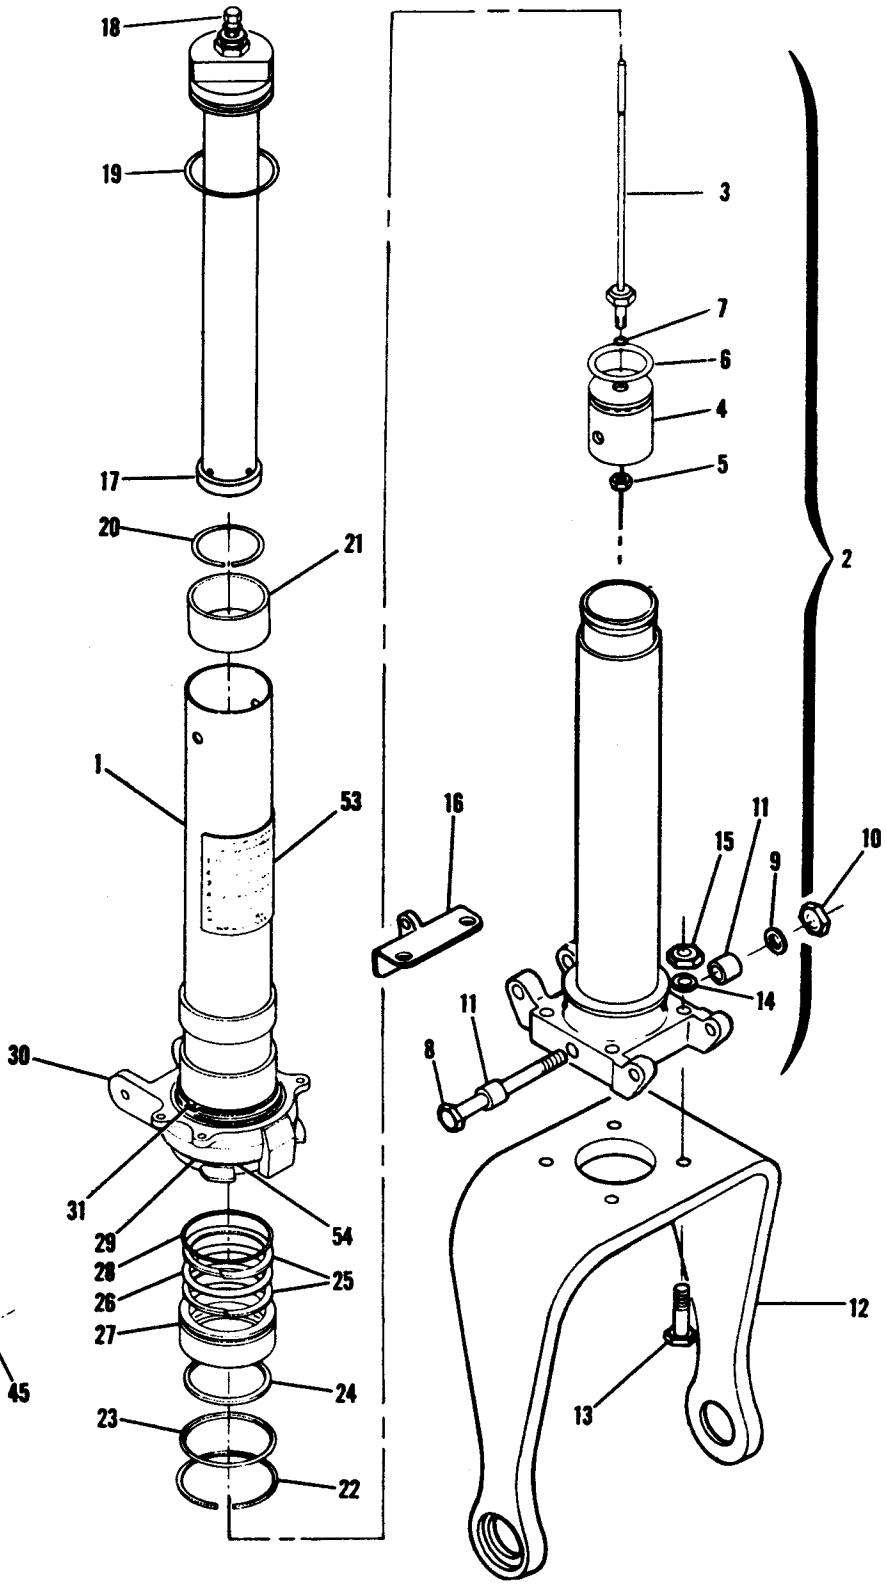

182 SERIAL 18253599 THRU 18260825


Figure 35A. Nose Gear Shock Strut Assembly - Heavy Duty

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
35A-16	0842000-44	SCRAPER	1	A
-17		ORIFICE PISTON SUPPORT ASSEMBLY ORDER 0743621-9	1	C
	0743621-9	ORIFICE PISTON SUPPORT ASSEMBLY	1	D
-18	0543036-1	VALVE ASSEMBLY	1	C
	AN901-5A	O RING	1	C
	S1827-1	VALVE ASSEMBLY PIPE THREADS	1	D
-19	AN623083	O RING	1	
-20	0841200-19	LOCK RING	1	
-21	1243021-1	BEARING	1	
-22	0841200-25	LOCK RING	1	
-23	0841200-15	RING-PACK RETAINER	1	
-24	S11065-21	RING-SCRAPER SHWS	2	
-25	S1628-329	RING-BACK UP	1	
-26	AN6227832	O RING	1	
-27	1243626-1	RING-PACK SUPPORT	1	
-28	AN623086	O RING	1	
-29	0543029	WASHER	1	
-30	0743601-1	COLLAR ASSEMBLY	1	
-31	MS16624-1275	RETAINING RING	1	A
-32	0743605-1	LINK ASSEMBLY-TORQUE UPPER	1	B
-32A	0442506-1	LINK ASSEMBLY-TORQUE UPPER		
		ATTACHING PARTS		
-33	AN4-31	BOLT	1	
-34	0543047-1	SPACER	1	
	0543048-1	SHIM	AR	
-35	AN960-416L	WASHER	AR	
-36	AN310-4	NUT	1	
-37	MS24665-134	PIN-COTTER	1	
		---*---		
-38	NAS77-6-88	BUSHING	2	
-39	NAS77-3-23	BUSHING	2	
-40	AN944-101A	FITTING-LUBRICATOR	2	
-40A	0442506-8	STOP LUG	1	B
-40B	AN3H3A	BOLT	2	B
-40C	0442506-9	SAFETY LUG	1	B
-41	0543035-3	LINK ASSEMBLY-TORQUE LOWER	1	A
-41A	0442506-2	LINK ASSEMBLY-TORQUE LOWER	1	B
		ATTACHING PARTS		
-42	AN4-31	BOLT	1	
-43	0543047-1	SPACER	1	
	0543048-1	SHIM	AR	
-44	AN960-416L	WASHER	AR	
-45	AN310-4	NUT	1	
-46	MS24665-134	PIN-COTTER	1	
-47	NAS464-3-22	BOLT	1	
-48	AN960-10L	WASHER	1	
-49	AN310-3	NUT	1	
-50	MS24665-132	PIN-COTTER	1	
		---*---		
-51	NAS77-6-88	BUSHING	2	
-52	MS15002-3	FITTING-LUBRICATOR	1	
-53	0543032-1	PLACARD	1	A
	0543032-3	PLACARD	1	B
-54	1243030-5	SHIM .006 THICK	AR	
	1243030-6	SHIM .012 THICK	AR	
	1243030-7	SHIM .020 THICK	AR	

NOTE. *WHEN REPLACING THIS PART ON AIRCRAFT PRIOR TO SERIAL 18255447, IT IS NECESSARY TO CONVERT TO 5/16 INCH DIAMETER BOLTS TO ATTACH THE NOSE WHEEL YOKE TO THE HUB. ENLARGE BOLT HOLES IN MATING PART AS NECESSARY FOR CONVERSION

A---182 SERIAL 18253599 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
B---182 SERIAL 18257626 THRU 18260825
A182 SERIAL A182-0057 & ON
C---182 SERIAL 18257626 THRU 18259788
A182 SERIAL A182-0057 THRU A182-0116
D---182 SERIAL 18259789 THRU 18260825
A182 SERIAL A182-0117 & ON

Alighting Gear (Cont)

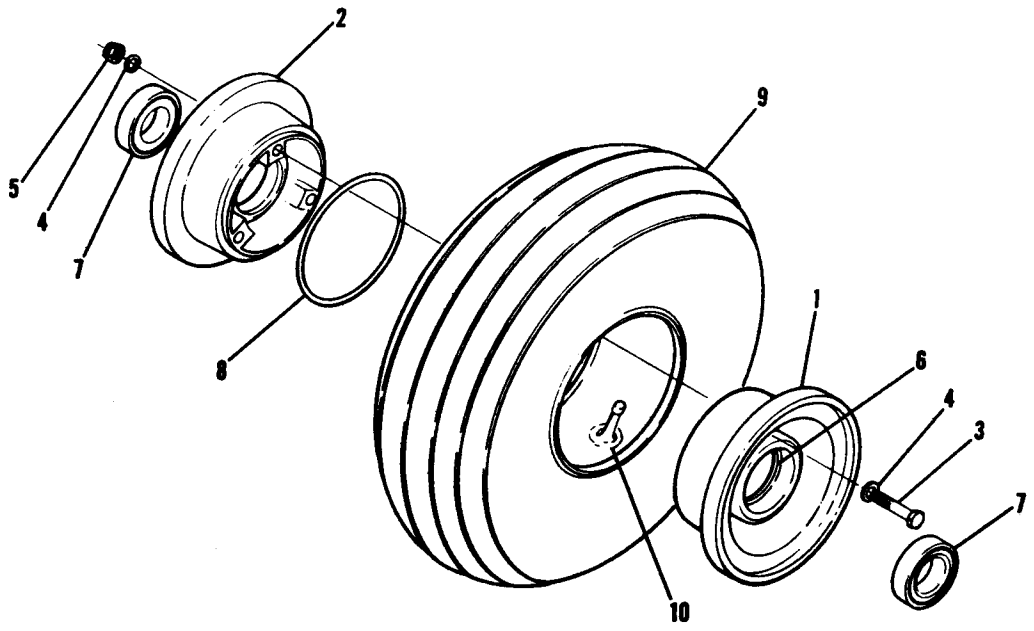


182 SERIAL 18253599 THRU 18255844

Figure 36. Goodyear Nose Wheel Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
36 -		WHEEL ASSEMBLY-NOSE GEAR GOODYEAR	NP	C
	0743001-2	WHEEL ASSEMBLY GY 9532669	1	A
	0541183-8	WHEEL ASSEMBLY GY 9532926	1	B
- 1	9532671	WHEEL SUBASSEMBLY-FEMALE GY	1	A
	9541898	WHEEL SUBASSEMBLY-FEMALE GY	1	B
- 2	9532672	WHEEL SUBASSEMBLY-MALE GY	1	A
	9541899	WHEEL SUBASSEMBLY-MALE GY	1	B
		ATTACHING PARTS		
- 3	AN4-14A	BOLT	3	
- 4	AN960-416	WASHER	6	
- 5	22FH-428	NUT SPS	3	
		---*---		
- 6	LM67010XL	CUP-BEARING TYR	1	
- 7	LM6708XL	CONE-BEARING TYR	2	
- 8	AN6230B20	O RING	1	A
- 9	C262003-0302	TIRE-TUBELESS 6 PLY RATED	1	A
	C262003-0202	TIRE-TUBE TYPE 6 PLY RATED	1	B
-10	C262023-0101	TUBE	1	B
		A---182 SERIAL 18253599 THRU 18254423		
		B---182 SERIAL 18254424 THRU 18255844		
		C---182 SERIAL 18253599 THRU 18255844		

Alighting Gear (Cont)

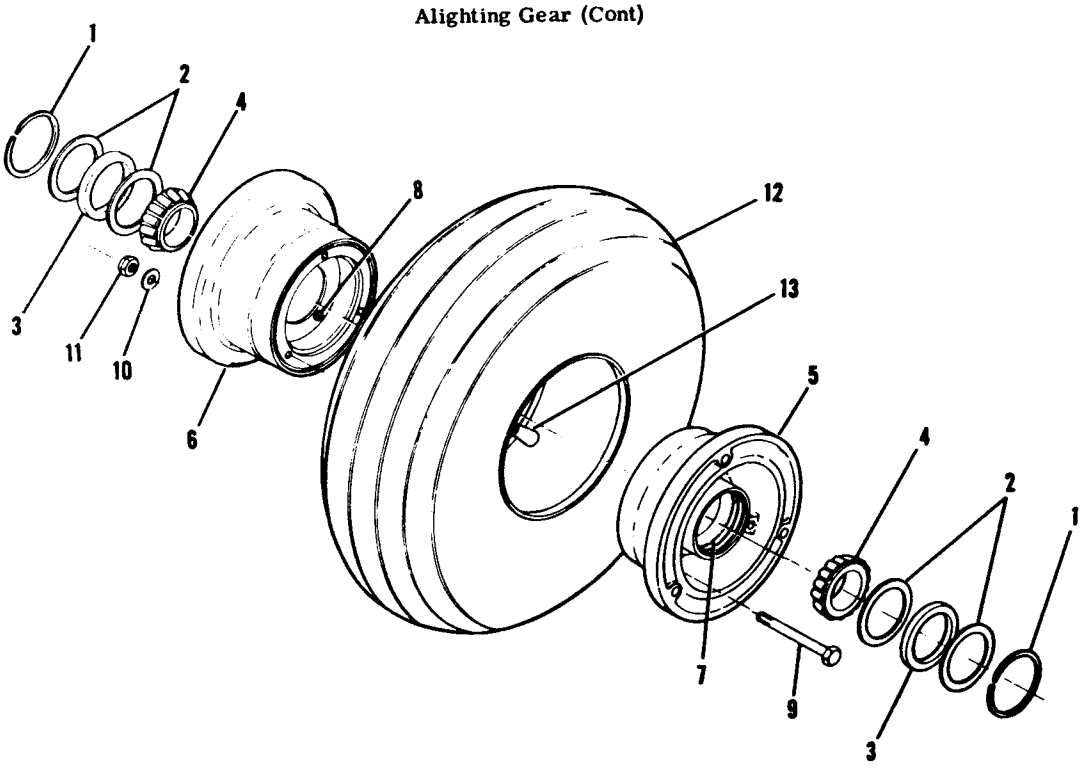

182 SERIAL 18255845 THRU 18262465

Figure 36A. Cleveland Nose Wheel Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
36A-		WHEEL ASSEMBLY-NOSE GEAR CLEVELAND	NP	A
	1241156-12	WHEEL ASSEMBLY CFP 40-77	1	
- 1	155-2	RING CFP	2	
- 2	153-8	RING-GREASE SEAL CFP	4	
- 3	154-6	GREASE SEAL-FELT CFP	2	
- 4	08125	BEARING CFP	2	
- 5	161-31	WHEEL HALF-MALE CFP	1	
- 6	162-28	WHEEL HALF-FEMALE CFP	1	
- 7	08231	CUP-BEARING CFP	1	
- 8	217-1	GROMMET CFP FEMALE HALF ONLY	1	
- 9	AN4-22A	BOLT	3	
-10	AN960-416	WASHER	3	
-11	NAS679A4	NUT	3	
-12	C262003-0202	TIRE 5.00 X 5 6 PLY RATED	1	
	C262001-0202	TIRE 5.00X5 6 PLY RATED WHITEWALL	1	
-13	C262023-0101	TUBE 5.00 X 5	1	
		A---182 SERIAL 18255845 THRU 18262465 A182 SERIAL A182-0001 & ON		

Alighting Gear (Cont)


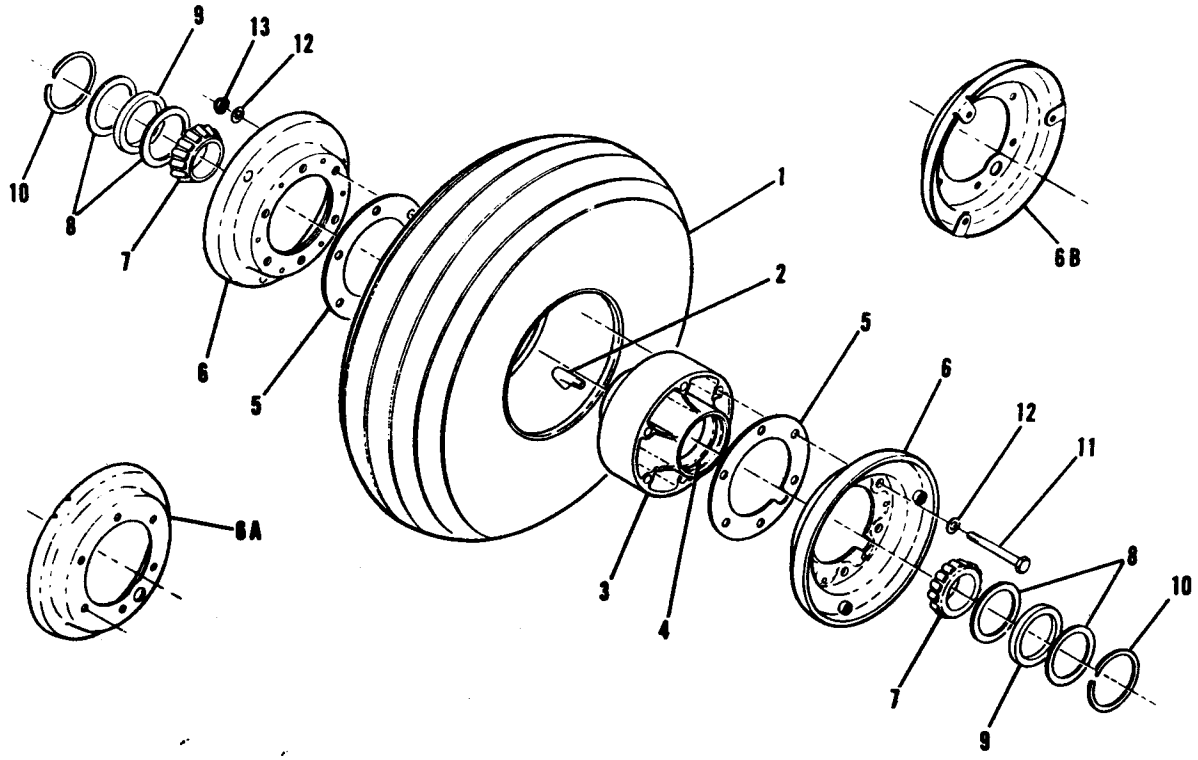


Figure 36B. Nose Gear Wheel Assembly - Alternate

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
368-		WHEEL ASSEMBLY-NOSE GEAR ALTERNATE	NP	A
- 1	C262003-0202	TIRE-BLACKWALL 5.00X5 6 PLY RATED	1	
	C262001-0202	TIRE-WHITEWALL 5.00X5 6 PLY RATED	1	
- 2	C262023-0101	TUBE-5.00X5	1	
	C163002-0201	WHEEL ASSY MCL WEU C163003-0201	1	B
	C163003-0201	WHEEL ASSY MCL	1	C
- 3	C30057	HUB ASSY MCL	1	
- 4	A30078-1	CUP-BEARING MCL	2	
- 5	B30077	SPACER MCL	2	
- 6	D30058	FLANGE-WHEEL MCL	2	B
- 6A	C30172-1	FLANGE-WHEEL RH MCL	1	C
- 6B	C30172	FLANGE-WHEEL LH MCL	1	C
- 7	A30078-2	CONE-BEARING MCL	2	
- 8	A30048	RETAINER-GREASE SEAL MCL	4	
- 9	A30047	GREASE SEAL-FELT MCL	2	
-10	A1636-23	RING-RETAINER MCL	2	
-11	A2513-34	BOLT MCL	6	B
	A2513-66	BOLT MCL	6	C
-12	A1638-15	WASHER MCL	12	B
	A1638-29	WASHER MCL	12	C
-13	A1639-26	NUT MCL	6	B
	A1639-14	NUT MCL	6	C
		A---182 SERIAL 18261299 THRU 18262465		
		B---182 SERIAL 18261299 THRU 18261714		
		C---182 SERIAL 18261715 THRU 18262465		

Alighting Gear (Cont)

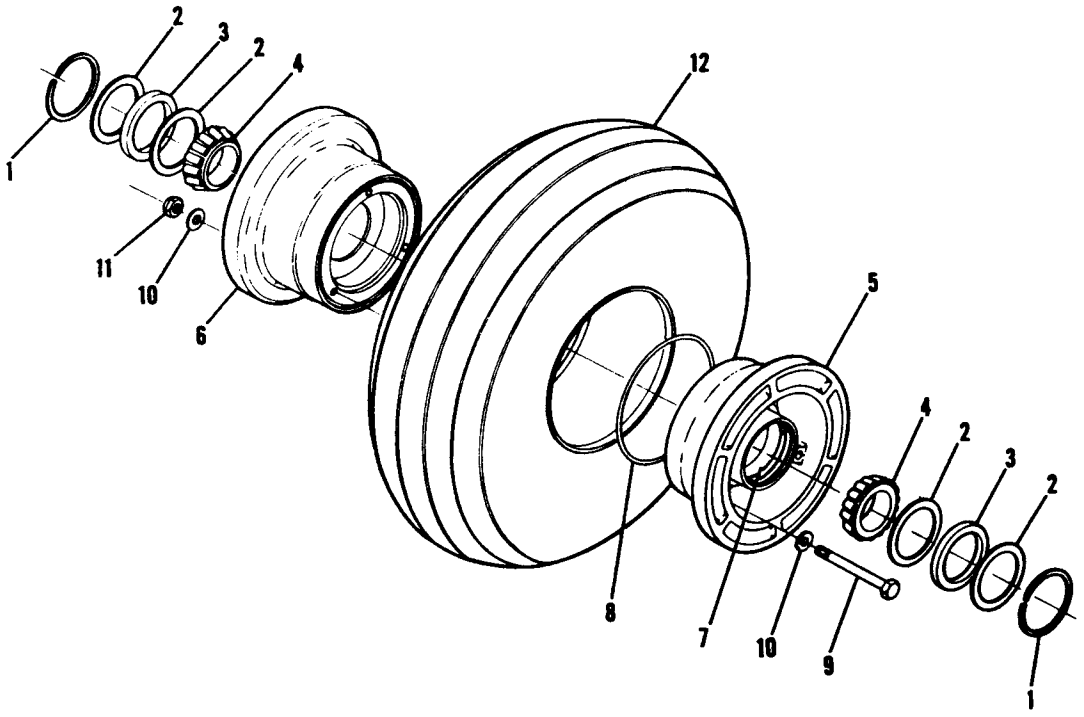


182 SERIAL 18253599 THRU 18254423

Figure 37. Cleveland Nose Wheel Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
37 -	0743001-4	WHEEL ASSEMBLY-NOSE GEAR ALTERNATE CLEVELAND	NP	A
- 1	155-2	WHEEL ASSEMBLY CFP 40-35	1	
- 2	153-8	RING-SNAP CFP	2	
- 3	154-6	RING-GREASE SEAL CFP	4	
- 4	08125	GREASE SEAL-FELT CFP	2	
- 5	161-18	BEARING CFP	2	
- 6	162-16	WHEEL HALF ASSEMBLY-MALE CFP	1	
- 7	08231	WHEEL HALF ASSEMBLY-FEMALE CFP	1	
- 8	1866-22	CUP-BEARING CFP	1	
- 9	AN3-31A	O RING CFP	1	
-10	AN960-416	BOLT	3	
-11	NAS679A4	WASHER	6	
-12	C262003-0302	NUT	3	
		TIRE-TUBELESS 6 PLY RATED	1	
		A---182 SERIAL 18253599 THRU 18254423		

Alighting Gear (Cont)

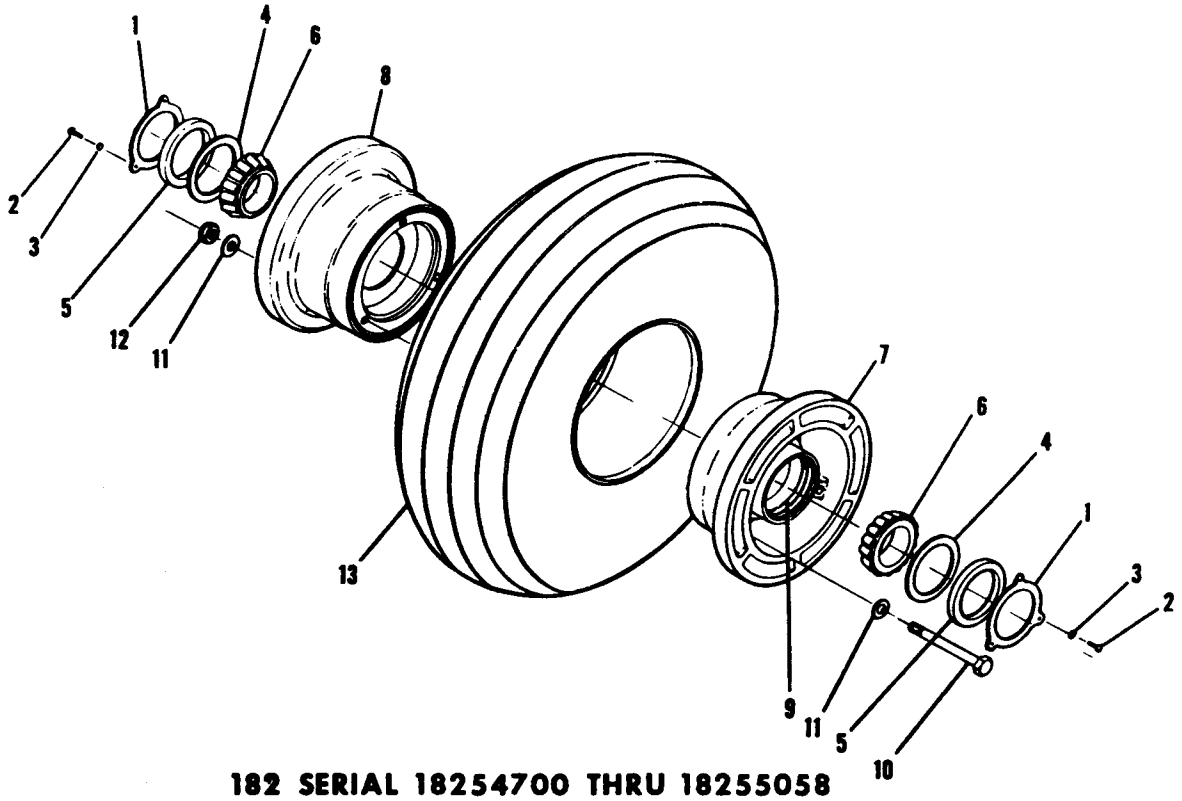


182 SERIAL 18254700 THRU 18255058

Figure 37A. Nose Wheel Assembly - Heavy Duty (Cleveland)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
37A-		WHEEL ASSEMBLY-HEAVY DUTY NOSE GEAR CLEVELAND	NP	A
	0441156-16	WHEEL ASSEMBLY CFP 40-55 WHEN EXHAUSTED USE 1241156-11	1	
- 1	153-10	RING-GREASE SEAL CFP	2	
		ATTACHING PARTS		
- 2	8-32X1/2	SCREW CFP	3	
- 3	1208	WASHER CFP	3	
		—*—		
- 4	A39070	RING-GREASE SEAL CFP	2	
- 5	154-9	GREASE SEAL-FELT CFP	2	
- 6	13889	BEARING CFP	2	
- 7	161-24	WHEEL HALF ASSEMBLY-INNER CFP	1	
- 8	161-23	WHEEL HALF ASSEMBLY-OUTER CFP	1	
- 9	13836	CUP-BEARING CFP	1	
-10	AN4-37A	BOLT	3	
-11	AN960-416	WASHER	3	
-12	NAS679A4	NUT	3	
-13	C262003-0101	TIRE-TUBE TYPE 6.00X6 4 PLY RATED	1	
	C262023-0102	TUBE 6.00X6	1	
		A—182 SERIAL 18254700 THRU 18255058		

Alighting Gear (Cont)

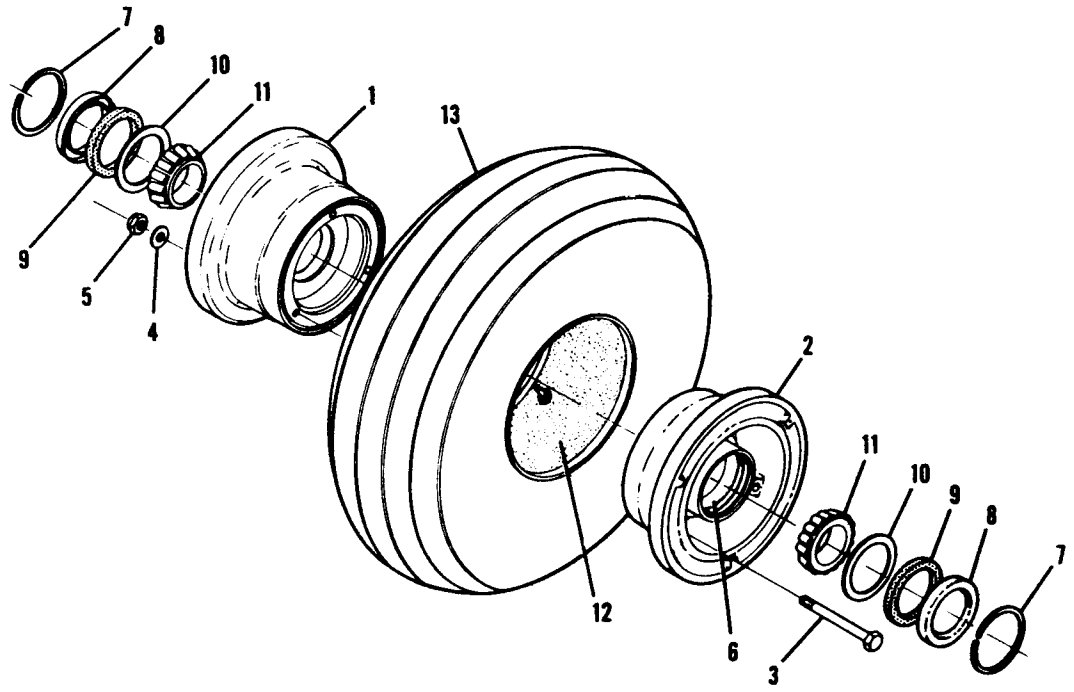


182 SERIAL 18253599 THRU 18254699
182 SERIAL 18255059 THRU 18260825

Figure 37B. Nose Wheel Assembly - Heavy Duty (Cleveland)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
37B-		WHEEL ASSEMBLY-HEAVY DUTY NOSE GEAR CLEVELAND	NP	A
	1241156-11	WHEEL ASSEMBLY CFP 40-76A	1	
- 1	162-27	WHEEL HALF ASSEMBLY-FEMALE CFP	1	
- 2	161-30	WHEEL HALF ASSEMBLY-MALE CFP	1	
		ATTACHING PARTS		
- 3	AN5-35A	BOLT	3	
- 4	AN960-516	WASHER	6	
- 5	NAS679A5	NUT	3	
		---*---		
- 6	13836	CUP-BEARING CFP	1	
- 7	3023	RING-SNAP CFP	2	
- 8	153-15	RING-GREASE SEAL CFP	2	
- 9	154-13	GREASE SEAL-FELT CFP	2	
-10	A39070	RING-GREASE SEAL	2	
-11	13889	CONE-BEARING	2	
-12	C262023-0102	TUBE-6.00 X 6	1	
-13	C262003-0101	TIRE-6.00 X 6 4 PLY RATED	1	
		A---182 SERIAL 18253599 THRU 18254699 182 SERIAL 18255059 THRU 18260825 A182 SERIAL A182-0001 & ON		

Alighting Gear (Cont)

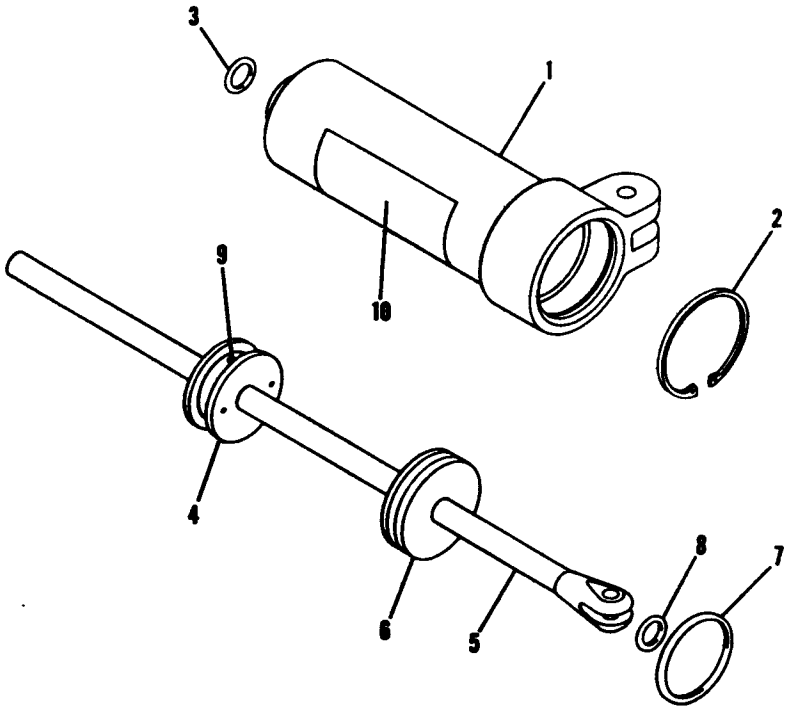

182 SERIAL 18253599 THRU 18255194


Figure 38. Shimmy Dampener Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
38 -	0542119-3		DAMPENER ASSEMBLY-SHIMMY USE 0542119-4	NP	A
	0542119-4		DAMPENER ASSEMBLY-SHIMMY WHEN EXHAUSTED USE 1442114-5	1	B
			SEE FIGURE 38A FOR BREAKDOWN		
- 1	0542100-2		BARREL-SHIMMY DAMPENER ORDER 0542119-4	NP	A
	0542100-4	*	BARREL-SHIMMY DAMPENER USE WITH 3/8 DIA SHAFT	1	B
- 2	MS16625-131		RING-INTERNAL RETAINING	1	
- 3	AN622786		O RING USE WITH 5/16 DIA SHAFT	1	A
	AN622787		O RING USE WITH 3/8 DIA SHAFT	1	B
- 4	0542118-3		PISTON ASSEMBLY-SHIMMY DAMPENER ORDER 0542119-4	NP	A
	0542118-4	*	PISTON ASSEMBLY-SHIMMY DAMPENER 3/8 DIA	1	B
- 5	0743603-1		SHAFT ORDER 0542119-4	NP	A
	0743603-8	*	SHAFT 3/8 DIA	1	B
- 6	0542102-1		HEAD BEARING ORDER 0542119-4	NP	A
	0542102-2	*	HEAD BEARING USE WITH 3/8 DIA SHAFT	1	B
- 7	AN6227B20		O RING	1	
	AN6227-18		O RING-HEAD BEARING	1	B
- 8	AN622786		O RING USE WITH 5/16 DIA SHAFT	1	A
	AN622787		O RING USE WITH 3/8 DIA SHAFT	1	B
- 9	NAS561P4-14		ROLL PIN	1	
-10	0743616-1		PLACARD	1	

NOTE. *WHEN THESE PARTS ARE EXHAUSTED, ORDER 1442114-5, SEE FIGURE 38A.

A---182 SERIAL 18253599 THRU 18254143
B---182 SERIAL 18254144 THRU 18255194


Alighting Gear (Cont)

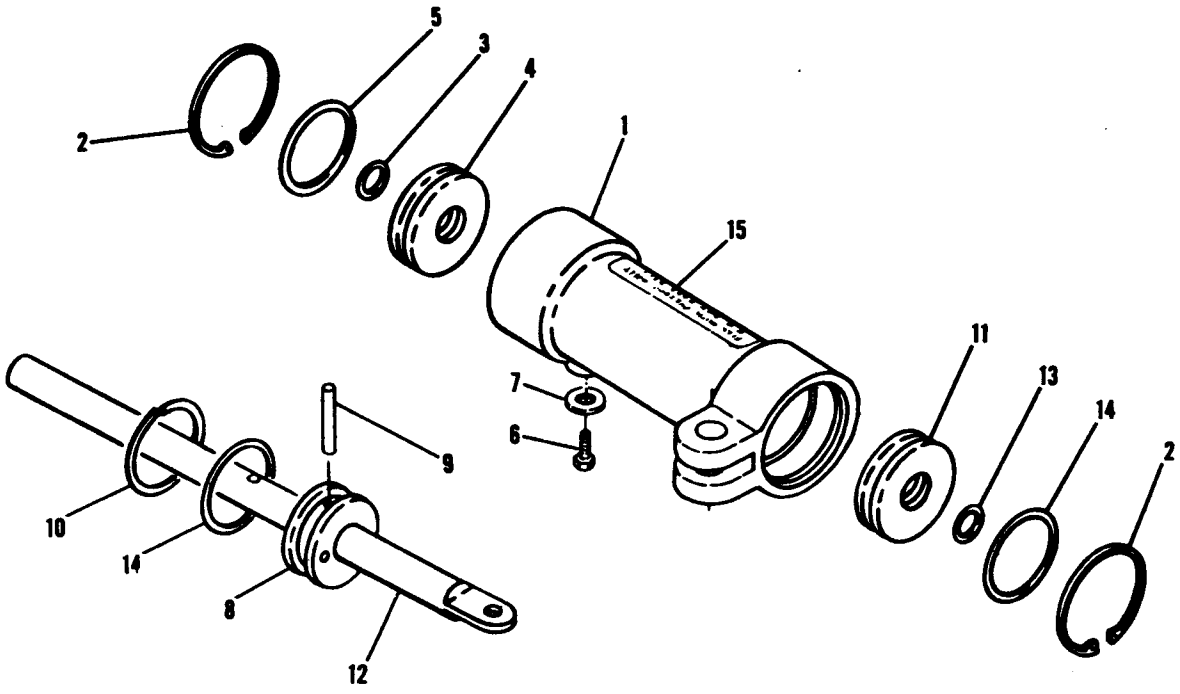

182 SERIAL 18255195 THRU 18257625

Figure 38A. Shimmy Dampener Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
38A-	1442114-5	SHIMMY DAMPENER ASSEMBLY	1	A
- 1	1442112-2	BARREL-SHIMMY DAMPENER	1	
- 2	MS16625-143	RING-INTERNAL RETAINING	4	
- 3	AN6227810	O RING	1	
- 4	1442113-2	BEARING-HEAD	1	
- 5	AN6227822	O RING	1	
- 6	NAS563-11	BOLT	1	
- 7	600-015-1005	LOCK-O-SEAL	1	
	1442114-6	PISTON ASSEMBLY-SHIMMY DAMPENER	1	
- 8	1442113-1	PISTON	1	
		ATTACHING PARTS		
- 9	NAS561P4-18	PIN-ROLL	1	
		---*---		
-10	MS28782-22	RETAINER	1	
-11	1442113-2	BEARING-HEAD	1	
-12	1442113-5	ROD-PISTON	1	
-13	AN6227810	O RING	1	
-14	AN6227822	O RING	2	
-15	0743616-2	PLACARD	1	
		A---182 SERIAL 18255195 THRU 18257625 A182 SERIAL A182-0001 THRU A182-0056		

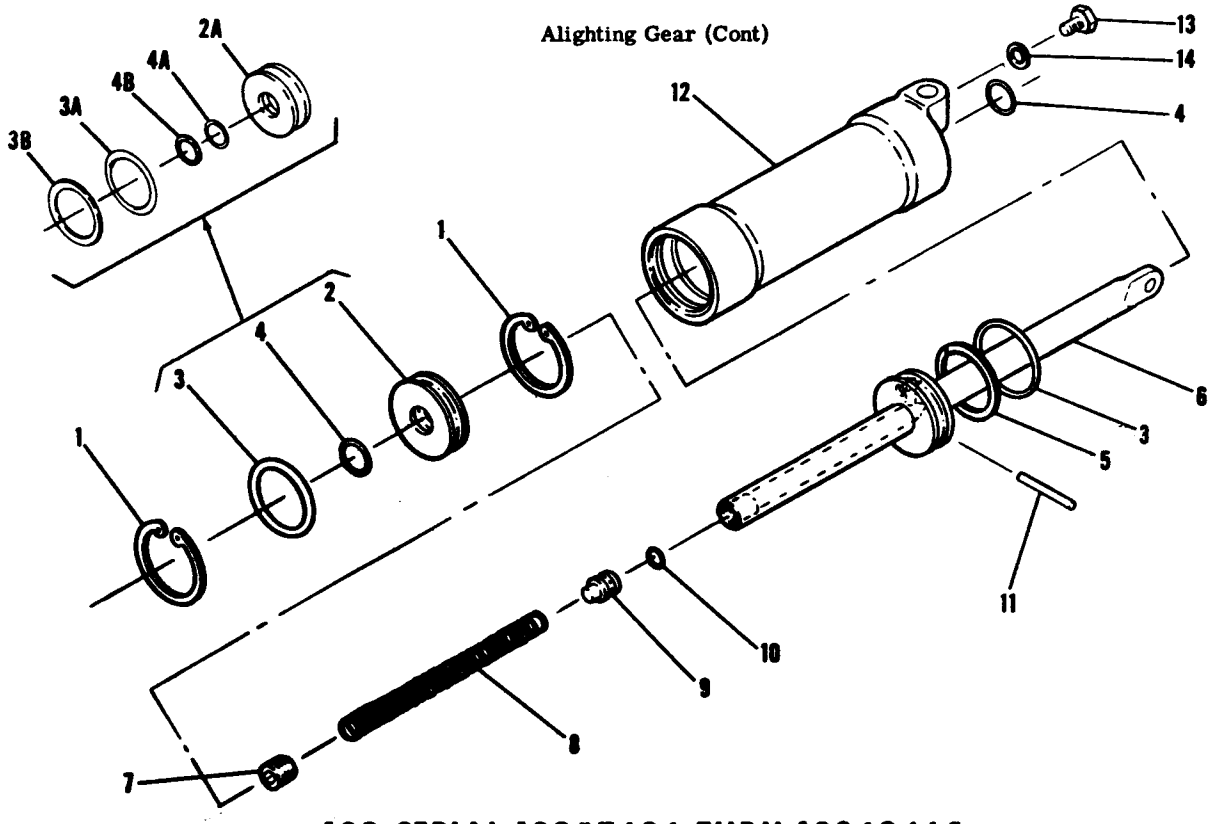

182 SERIAL 18257626 THRU 18262465


Figure 38B. Shimmy Dampener Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
38B-	0743624-1		SHIMMY DAMPENER ASSEMBLY	1	A
- 1	MS16625-143		LOCK RING	2	
- 2	1442113-2		HEAD WEU 1442113-9	1	B
- 2A	1442113-9	*	HEAD	1	C
- 3	AN6227B22		O RING	2	B
- 3A	MS28775-027	%	PACKING RING USED WITH 1442113-9 ONLY	1	C
- 3B	S1628-027	%	BACKUP RING USED WITH 1442113-9 ONLY	1	C
- 4	AN6227B10		O RING	2	B
- 4A	MS28775-112	%	PACKING RING USED WITH 1442113-9 ONLY	1	C
- 4B	S1628-112	%	BACKUP RING USED WITH 1442113-9 ONLY	1	C
- 5	MS28782-22		RETAINER	1	
- 6	0743623-1		ROD ASSEMBLY-SHIMMY DAMPENER	1	
- 7	0743623-6		SET SCREW	1	
- 8	0743623-3		SPRING	1	
- 9	0743623-4		PISTON-FLOATING	1	
-10	AN6227B3		O RING	1	
-11	NAS561P4-18		ROLL PIN	1	
-12	0743622-1		BARREL ASSEMBLY-SHIMMY DAMPENER	1	
	MS21209F4-20		HELI-COIL HELI	2	
-13	NAS563-11		BOLT	1	
-14	500-015-10-0S		STAT-O-SEAL PKSC	1	

NOTE. *WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES PRIOR TO SERIAL 18260711 & A182-0137 ALSO ORDER PARTS MARKED %.

A---182 SERIAL 18257626 THRU 18262465
A182 SERIAL A182-0057 & ON
B---182 SERIAL 18257626 THRU 18260710
A182 SERIAL A182-0057 THRU A182-0136
C---182 SERIAL 18260711 THRU 18262465

Alighting Gear (Cont)

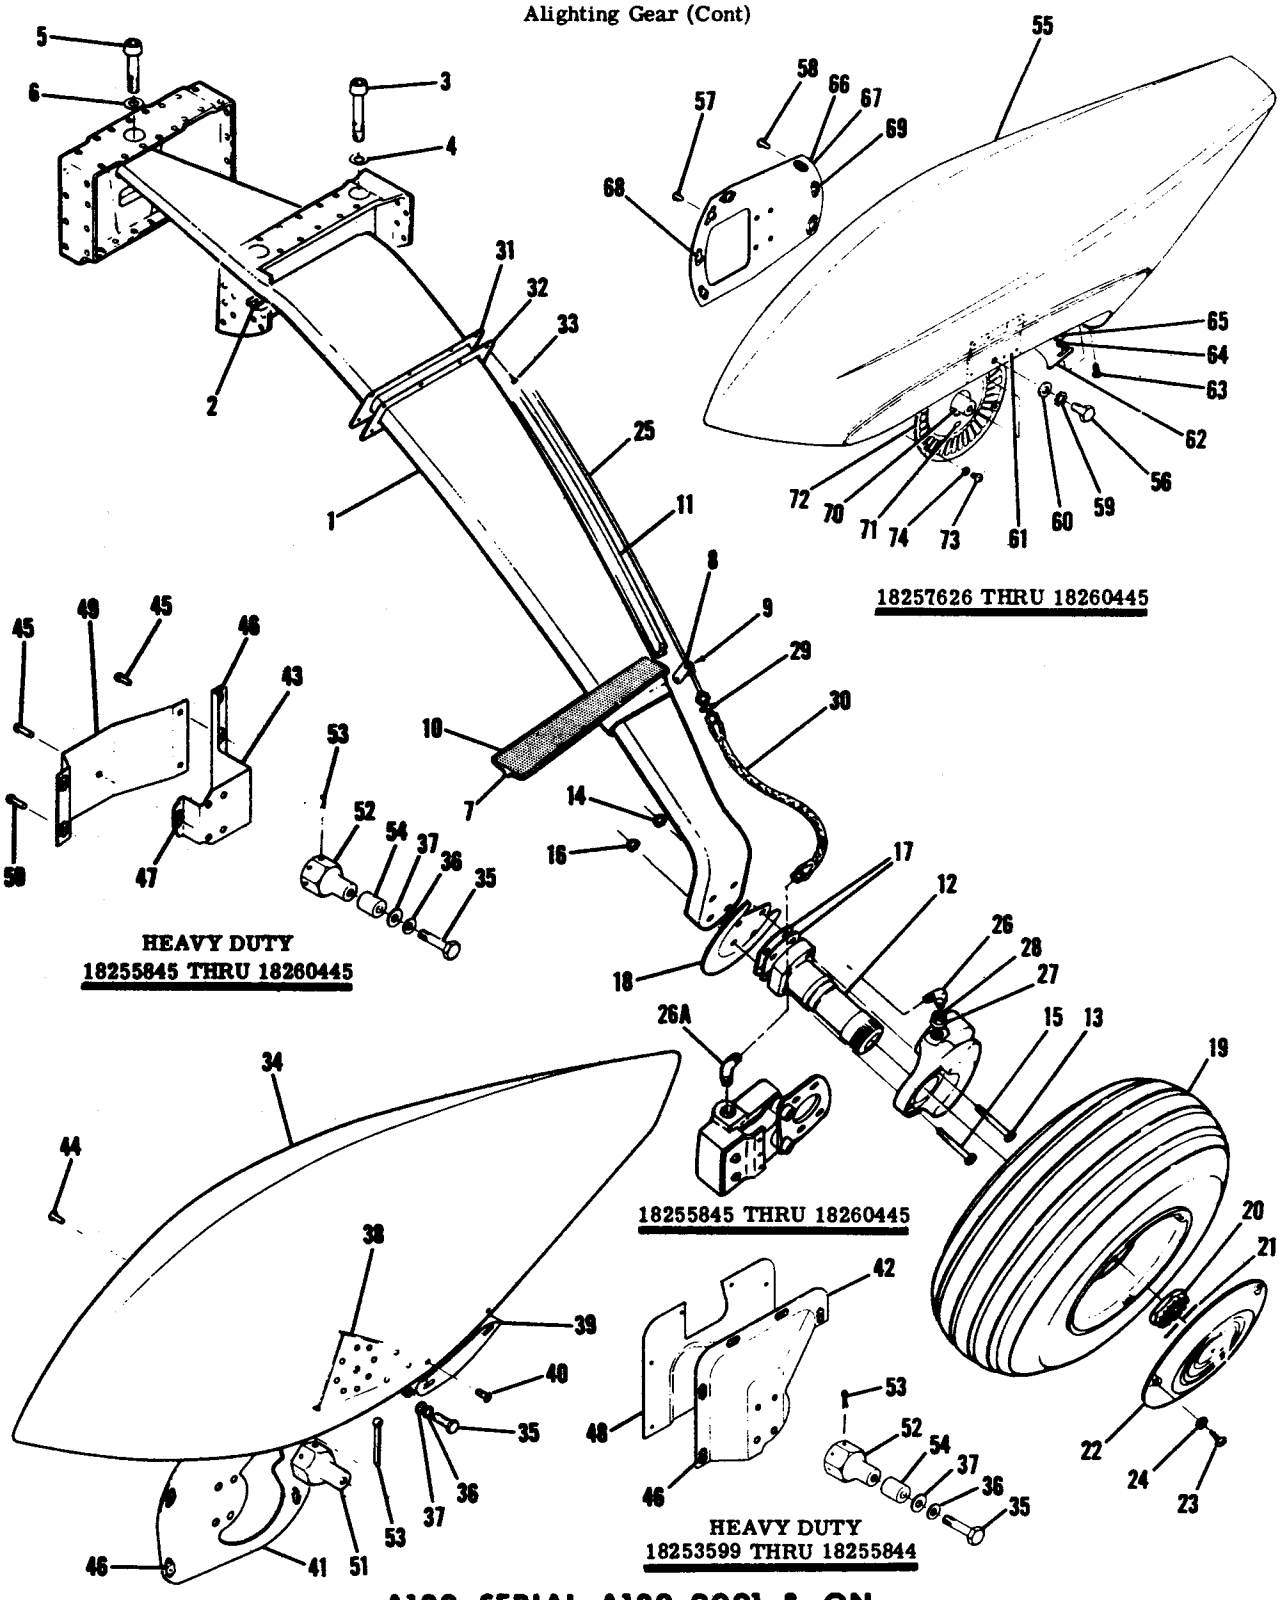

A182 SERIAL A182-0001 & ON
182 SERIAL 18253599 THRU 18260445

Figure 39. Main Landing Gear Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
39 -		LANDING GEAR INSTALLATION-MAIN	NP	L
- 1	0741601-1	SPRING ASSEMBLY-MAIN LANDING GEAR LH	1	
	0741601-2	SPRING ASSEMBLY-MAIN LANDING GEAR RH	1	
		ATTACHING PARTS		
- 2	0741604-1	CHANNEL	1	
- 3	NAS147-34	BOLT	2	
- 4	MS20002-7C	WASHER	2	
	52NEE070	NUT-WASHER FACED ESNA	2	
- 5	NAS146-34	BOLT	1	
- 6	MS20002-6C	WASHER	1	
	AN960-616	WASHER	1	
	NAS679A6	NUT	1	
	0541105	SHIM MAX 1	AR	
		---*---		
- 7	0741605-1	STEP-MAIN GEAR LH	1	
	0741605-2	STEP-MAIN GEAR RH	1	
		ATTACHING PARTS		
- 8	0741016-1	CLIP	1	
- 9	AN515-8R6	SCREW	2	
		---*---		
-10	0741015-1	TREAD-STEP	1	
-11	S1511-1-13.00	STRIP-LANDING GEAR ANTI-NOISE	1	
-12	0541124-1	AXLE-MAIN LANDING GEAR	1	
	1441003-1	AXLE-HEAVY DUTY MAIN LANDING GEAR USE WITH 8.00X6 WHEEL	1	
		ATTACHING PARTS		
-13	AN5-25A	BOLT	2	A
	AN5-22A	BOLT	2	B
	NAS145-39	BOLT USED WITH HEAVY DUTY AXLE	2	
	AN960-516L	WASHER USED WITH HEAVY DUTY AXLE	2	
-14	NAS679A5	NUT	2	
-15	AN6-24A	BOLT	2	A
	AN6-23A	BOLT	2	B
	NAS146-40	BOLT USED WITH HEAVY DUTY AXLE	2	
	AN960-616L	WASHER USED WITH HEAVY DUTY AXLE	2	
-16	NAS679A6	NUT	2	
		---*---		
-17	0541157-2	SHIM	AR	
	0541157-1	SHIM	AR	
	0441139-6	SHIM	AR	
	0441139-5	SHIM	AR	
	0541111-2	SHIM	AR	
-18	0441141-3	PLATE-BRAKE DISK COVER LH	1	A
	0441141-4	PLATE-BRAKE DISK COVER RH	1	A
-19		WHEEL & BRAKE ASSEMBLY-MAIN GEAR SEE FIGURE 40	1	A
		WHEEL & BRAKE ASSEMBLY-MAIN GEAR SEE FIGURE 40	1	B
		ATTACHING PARTS		
-20	S1117-24	NUT	1	
-21	MS24665-351	PIN-COTTER	2	
		---*---		
-22	1241063-2	CAP-HUB	2	E
	0741048-1	CAP-HUB	2	G
	0741048-8	CAP-HUB	2	H
		ATTACHING PARTS		
-23	AN515-8R4	SCREW	3	
-24	AN936A8	WASHER	3	
		---*---		
-25	0700099-13	LINE ASSEMBLY-BRAKE LH	1	A
	0700099-43	LINE ASSEMBLY-BRAKE LH	1	C
	0700099-55	LINE ASSEMBLY-BRAKE LH	1	D
	0700099-59	LINE ASSEMBLY-BRAKE LH	1	K
	0700099-14	LINE ASSEMBLY-BRAKE RH	1	A
	0700099-44	LINE ASSEMBLY-BRAKE RH	1	C
	0700099-54	LINE ASSEMBLY-BRAKE RH	1	D
	0700099-58	LINE ASSEMBLY-BRAKE RH	1	K
		ATTACHING PARTS		
-26	AN833-4D	ELBOW	1	A
	MS20823-4D	ELBOW	1	C
	AN816-4D	NIPPLE USE WITH FAIRING	1	D
-26A	AN914-1D	ELBOW	1	K
-27	MS28778-4	GASKET	1	A
-28	AN924-4D	NUT	1	A
-29	AN815-4D	UNION	1	D

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
39 -30	S1167-4-0090	HOSE ASSEMBLY	1	D
	S1167-4-0100	HOSE ASSEMBLY USE WITH FAIRING	1	J
	S1810-0800	HOSE ASSEMBLY	1	K
-31	0741612-1	SEAL	2	
-32	0741611-1	FILLET-LH	1	
	0741611-2	FILLET-RH	1	
		ATTACHING PARTS		
-33	S1022Z8-8	SCREW	8	
		SPEED FAIRING INSTALLATION-MAIN LANDING GEAR	NP	
-34	0741610-5	FAIRING ASSEMBLY-LH	1	A
	0541185-5	FAIRING ASSEMBLY-LH	1	E
	0741615-3	FAIRING ASSEMBLY-LH USED WITH 8.00X6 WHEEL	1	A
	0741615-9	FAIRING ASSEMBLY-LH USED WITH 8.00X6 WHEEL	1	B
	0741610-6	FAIRING ASSEMBLY-RH	1	A
	0541185-6	FAIRING ASSEMBLY-RH	1	E
	0741615-4	FAIRING ASSEMBLY-RH USED WITH 8.00X6 WHEEL	1	A
	0741615-10	FAIRING ASSEMBLY-RH USED WITH 8.00X6 WHEEL	1	B
		ATTACHING PARTS		
-35	AN6-6A	BOLT	1	E
	AN6-17A	BOLT HEAVY DUTY FAIRING	1	
-36	AN960-616L	WASHER	1	
-37	AN936B616	WASHER	1	
-38	0541180-1	DOUBLER	1	E
	0541180-2	DOUBLER HEAVY DUTY FAIRING	1	
-39	0741610-13	SCRAPER STANDARD SIZE FAIRINGS ONLY	1	E
		ATTACHING PARTS		
-40	AN520-10R10	SCREW	3	A
	AN520-10R5	SCREW	4	E
	MS21044N3	NUT	3	A
	MS21044N3	NUT	4	E
	1441013-1	SCRAPER HEAVY DUTY FAIRING	1	
		ATTACHING PARTS		
	AN520-10R10	SCREW	4	
	MS21044N3	NUT	4	
-41	0741610-11	SUPPORT ASSEMBLY-LH	1	A
	1441010-27	PLATE ASSEMBLY-LH	1	E
-42	0741613-1	SUPPORT ASSEMBLY-LH HEAVY DUTY FAIRING	1	A
-43	0741618-1	SUPPORT ASSEMBLY-LH HEAVY DUTY FAIRING	1	B
	0741610-12	SUPPORT ASSEMBLY-RH	1	A
	1441010-24	PLATE ASSEMBLY-RH	1	E
	0741613-2	SUPPORT ASSEMBLY-RH HEAVY DUTY FAIRING	1	A
	0741618-2	SUPPORT ASSEMBLY-RH HEAVY DUTY FAIRING	1	B
		ATTACHING PARTS		
-44	AN520-10R10	SCREW	7	A
	AN520-10R5	SCREW FWD	3	E
	AN520-10R8	SCREW AFT	4	E
	AN520-10R10	SCREW HEAVY DUTY FAIRING	6	A
-45	AN520-10R10	SCREW HEAVY DUTY FAIRING	4	B
-46	NAS686A3	NUTPLATE	7	E
	NAS686A3	NUTPLATE HEAVY DUTY FAIRING	6	A
	NAS686A3	NUTPLATE HEAVY DUTY FAIRING	3	B
-47	NAS680A3	NUTPLATE HEAVY DUTY FAIRING	1	B
-48	0741614-1	COVER ASSEMBLY-LH HEAVY DUTY FAIRING	1	A
	0741614-2	COVER ASSEMBLY-RH HEAVY DUTY FAIRING	1	A
-49	0741619-1	PLATE ASSEMBLY HEAVY DUTY FAIRING	2	B
		ATTACHING PARTS		
-50	AN520-10R10	SCREW	2	B

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
39 -51	0441130-3	NUT WHEN EXHAUSTED USE 0441130-4	1	E
	0441130-4	NUT	1	E
-52	0441130-2	NUT HEAVY DUTY FAIRING	1	
-53	MS24665-362	COTTER PIN	1	E
-54	0741616-1	SPACER HEAVY DUTY FAIRING	1	
-55	0741046-201	FAIRING ASSEMBLY-LH	1	G
	0741046-200	FAIRING ASSEMBLY-RH	1	G
	0741046-203	FAIRING ASSEMBLY-LH	1	H
	0741046-202	FAIRING ASSEMBLY-RH	1	H
		ATTACHING PARTS		
-56	AN6-6A	BOLT	1	F
-57	AN520-10R5	SCREW	3	F
-58	AN520-10R8	SCREW	4	F
-59	AN9368616	WASHER	1	F
-60	AN960-616L	WASHER	1	F
		---*---		
-61	0741046-11	DOUBLER-FAIRING	1	F
	0741046-15	DOUBLER-FAIRING	1	F
-62	0741046-14	SCRAPER-FAIRING	1	F
		ATTACHING PARTS		
-63	AN520-10R10	SCREW	3	F
-64	AN960-10	WASHER	3	F
-65	MS21044N3	NUT	3	F
		---*---		
-66	0741046-7	PLATE ASSEMBLY-MOUNTING LH	1	F
-67	0741046-8	PLATE ASSEMBLY-MOUNTING RH	1	F
-68	NAS680A3K	NUTPLATE	3	F
-69	NAS686A3	NUTPLATE	4	F
-70	0741047-2	NUT ASSY-WHEEL FAIRING SUPPORT	2	M
	MS24665-362	PIN	2	F
-71	624 1M	VALVE-EXTENSION DL	1	F
	3680C	VALVE-EXTENSION SV ALTERNATE	1	F
-72	0741048-2	CAP-HUB	2	G
	0741048-7	CAP-WHEEL	2	H
		ATTACHING PARTS		
-73	AN515-8R4	SCREW	3	F
-74	AN936A8	WASHER	3	F
		---*---		

A---182 SERIAL 18253599 THRU 18255844
B---182 SERIAL 18255845 THRU 18260445
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18255845 THRU 18257007
A182 SERIAL A182-0001 THRU A182-0003
D---182 SERIAL 18257008 THRU 18258399
A182 SERIAL A182-0004 THRU A182-0096
E---182 SERIAL 18255845 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
F---182 SERIAL 18257626 THRU 18260445
A182 SERIAL A182-0057 & ON
G---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
H---182 SERIAL 18258506 THRU 18260445
A182 SERIAL A182-0097 & ON
J---182 SERIAL 18257008 THRU 18257625
A182 SERIAL A182-0004 THRU A182-0056
K---182 SERIAL 18258400 THRU 18260445
A182 SERIAL A182-0097 & ON
L---182 SERIAL 18253599 THRU 18260445
A182 SERIAL A182-0001 & ON
M---182 SERIAL 18257626 THRU 1826445
A182 SERIAL A182-0057 THRU A182-0116

Alighting Gear (Cont)

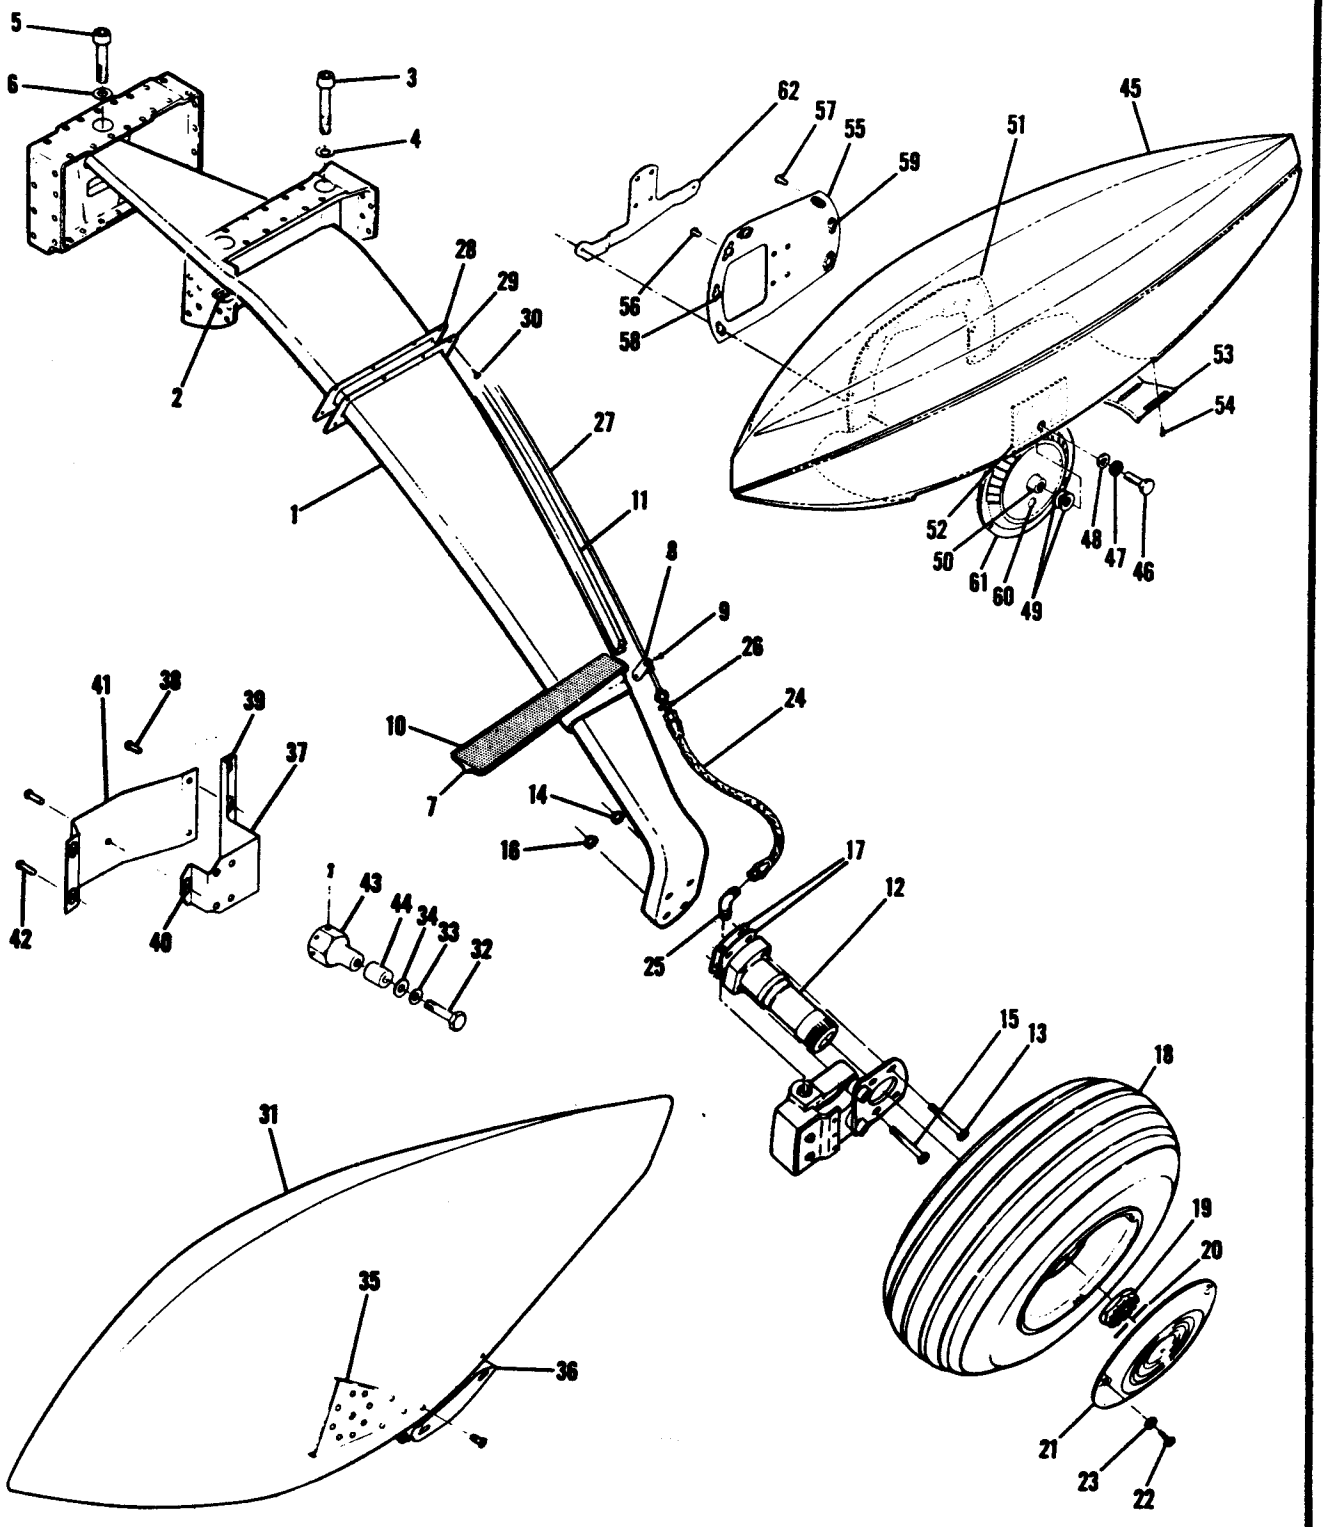

182 SERIAL 18260446 THRU 18260825

Figure 39A. Main Landing Gear Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
39A-		LANDING GEAR INSTALLATION	NP	A
- 1	0741601-1	SPRING ASSEMBLY-MAIN LANDING GEAR LH	1	
	0741601-2	SPRING ASSEMBLY-MAIN LANDING GEAR RH	1	
		ATTACHING PARTS		
- 2	0741604-1	CHANNEL	1	
- 3	NAS147-34	BOLT	2	
- 4	MS20002C7	WASHER	2	
	52NEE070	NUT-WASHER FACED	2	
- 5	NAS146-34	BOLT	1	
- 6	MS20002C6	WASHER	1	
	AN960-616	WASHER	1	
	NAS679A6	NUT	1	
	0541105	SHIM MAX 1	AR	
		---*---		
- 7	0741605-1	STEP-MAIN GEAR LH	1	
	0741605-2	STEP-MAIN GEAR RH	1	
		ATTACHING PARTS		
- 8	0741016-1	CLIP	1	
- 9	AN515-8R6	SCREW	2	
		---*---		
-10	0741015-1	TREAD-STEP	1	
-11	S1511-1-13.00	STRIP-LANDING GEAR ANTI-NOISE	1	
-12	0541124-1	AXLE-MAIN LANDING GEAR	1	
	1441003-1	AXLE-HEAVY DUTY MAIN LANDING GEAR USE WITH 8.00X6 WHEEL	1	
		ATTACHING PARTS		
-13	AN5-22A	BOLT	2	
	NAS145-39	BOLT USED WITH HEAVY DUTY AXLE	2	
	AN960-516L	WASHER USED WITH HEAVY DUTY AXLE	2	
-14	NAS679A5	NUT	2	
-15	AN6-23A	BOLT	2	
	NAS146-40	BOLT USED WITH HEAVY DUTY AXLE	2	
	AN960-616L	WASHER USED WITH HEAVY DUTY AXLE	2	
-16	NAS679A6	NUT	2	
		---*---		
-17	0541157-2	SHIM	AR	
	0541157-1	SHIM	AR	
	0441139-6	SHIM	AR	
	0441139-5	SHIM	AR	
	0541111-2	SHIM	AR	
-18	SEE FIG 40A	WHEEL & BRAKE ASSEMBLY-MAIN GEAR	1	
		ATTACHING PARTS		
-19	S1117-24	NUT	1	
-20	MS24665-351	PIN-COTTER	2	
		---*---		
-21	0741048-8	CAP-HUB	2	
		ATTACHING PARTS		
-22	AN515-8R4	SCREW	3	
-23	AN936A8	WASHER	3	
		---*---		
-24	S1810-0800	HOSE ASSEMBLY	1	
		ATTACHING PARTS		
-25	AN914-1D	ELBOW	1	
-26	AN919-2D	REDUCER	1	
		---*---		
-27	0700099-72	LINE ASSEMBLY-BRAKE LH	1	
	0700099-73	LINE ASSEMBLY-BRAKE RH	1	
-28	0741612-1	SEAL	2	
-29	0741611-1	FILLET-LH	1	
	0741611-2	FILLET-RH	1	
		ATTACHING PARTS		
-30	S1022Z8-8	SCREW	8	
		---*---		
		SPEED FAIRING INSTALLATION-MAIN LANDING GEAR	NP	
-31	0741615-9	FAIRING ASSEMBLY-LH USED WITH 8.00X6 WHEEL	1	
	0741615-10	FAIRING ASSEMBLY-RH USED WITH 8.00X6 WHEEL	1	
		ATTACHING PARTS		
-32	AN6-17A	BOLT HEAVY DUTY FAIRING	1	
-33	AN960-616L	WASHER	1	
-34	AN9368616	WASHER	1	
		---*---		

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
39A-35	0541180-2	DOUBLER HEAVY DUTY FAIRING	1	
-36	1441013-1	SCRAPER HEAVY DUTY FAIRING	1	
		ATTACHING PARTS		
	AN520-10R10	SCREW	4	
	MS21044N3	NUT	4	
		---*---		
-37	0741618-1	SUPPORT ASSEMBLY-LH HEAVY DUTY FAIRING	1	
	0741618-2	SUPPORT ASSEMBLY-RH HEAVY DUTY FAIRING	1	
		ATTACHING PARTS		
-38	AN520-10R10	SCREW HEAVY DUTY FAIRING	4	
		---*---		
-39	NAS686A3	NUTPLATE HEAVY DUTY FAIRING	3	
-40	NAS680A3	NUTPLATE HEAVY DUTY FAIRING	1	
-41	0741619-1	PLATE ASSEMBLY HEAVY DUTY FAIRING	2	
		ATTACHING PARTS		
-42	AN520-10R10	SCREW	2	
		---*---		
-43	0441130-2	NUT HEAVY DUTY FAIRING	1	
-44	0741616-1	SPACER HEAVY DUTY FAIRING	1	
-45	0541203-1	FAIRING ASSEMBLY-WHEEL MAIN LANDING GEAR LH	1	
	0541203-2	FAIRING ASSEMBLY-WHEEL MAIN LANDING GEAR RH	1	
		ATTACHING PARTS		
-46	AN6-6A	BOLT	1	
-47	AN936B616	WASHER	1	B
-48	AN960-616L	WASHER	1	
-49	AN960-616	WASHER	2	
-50	0741047-2	NUT ASSEMBLY	1	
	MS24665-362	PIN-COTTER	1	
		---*---		
-51	0541206-1	DOUBLER-WHEEL FAIRING	1	
-52	0541207-1	DOUBLER-WHEEL FAIRING	1	
-53	0541205-1	SCRAPER-WHEEL FAIRING	1	
		ATTACHING PARTS		
-54	AN520-10R16	SCREW	3	
	AN960-10	WASHER	4	
	MS21044N3	NUT	3	
		---*---		
-55	0741046-7	PLATE ASSEMBLY-MOUNTING LH	1	
	0741046-8	PLATE ASSEMBLY-MOUNTING RH	1	
		ATTACHING PARTS		
-56	AN525-10R10	SCREW	3	
-57	AN525-10R12	SCREW	4	
	S1450-3D9-032	WASHER	7	
		---*---		
-58	NAS686A3	NUTPLATE	4	
-59	NAS680A3K	NUTPLATE	3	
-60	624 1M	VALVE-EXTENSION DL	1	
	3680C	VALVE-EXTENSION SV ALTERNATE	1	
-61	0741048-7	CAP-WHEEL	2	
		ATTACHING PARTS		
	AN515-8R4	SCREW	3	
	AN936A8	WASHER	3	
		---*---		
-62	1741022-1	STIFFENER-LH WHEEL FAIRING	1	
	1741022-2	STIFFENER-RH WHEEL FAIRING	1	

A---182 SERIAL 18260446 THRU 18260825
A182 SERIAL A182-0117 & ON
B---182 SERIAL 18260446 THRU 18260825
A182 SERIAL A182-0117 THRU A182-0136

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
398-		LANDING GEAR INSTALLATION	NP	A
- 1	0741630-1	SPRING ASSEMBLY-MAIN LANDING GEAR LH	1	
	0741630-2	SPRING ASSEMBLY-MAIN LANDING GEAR RH	1	
		ATTACHING PARTS		
- 2	1241214-2	PIN	1	
- 3	MS16625-1075	RING-RETAINING	1	
		---*---		
- 4	0741629-1	SUPPORT ASSEMBLY LH-STEP	1	
	0741629-2	SUPPORT ASSEMBLY RH-STEP	1	
- 5	CM2692-12P5S	PLUG BUTTON	1	
- 6	0741632-1	BUSHING ASSEMBLY-MAIN LANDING GEAR	1	
- 7	0741633-1	SPACER-MAIN LANDING GEAR BUSHING	1	
- 8	MS16624-1262	RING-RETAINER	2	
- 9	0741623-1	STEP ASSEMBLY	1	
		ATTACHING PARTS		
-10	AN509-10R8	SCREW	1	
-11	NAS221-9	SCREW	2	
-12	AN960-10L	WASHER	2	
-13	MS20364-1032C	NUT	2	
		---*---		
-14	0741623-4	TREAD-STEP	1	
-15	1741003-3	FITTING-MAIN GEAR AXLE LH	1	
	1741003-4	FITTING-MAIN GEAR AXLE RH	1	
		ATTACHING PARTS		
-16	NAS464P5LA30	BOLT	2	
-17	AN960-516L	WASHER	2	
-18	NAS679A5	NUT	2	
		---*---		
-19	0541124-1	AXLE-MAIN LANDING GEAR	1	
		ATTACHING PARTS		
-20	AN5-17A	BOLT	2	
	AN5-21A	BOLT USED WITH WHEEL FAIRINGS	2	
-21	AN960-516L	WASHER	2	
-22	NAS679A5	NUT	2	
-23	AN6-17A	BOLT	2	
	AN6-21A	BOLT USED WITH WHEE FAIRINGS	2	
-24	AN960-616L	WASHER	2	
-25	NAS679A6	NUT	2	
		---*---		
-26	0441139-5	SHIM	AR	
	0441139-6	SHIM	AR	
	0541157-1	SHIM	AR	
	0541157-2	SHIM	AR	
	0541157-3	SHIM	AR	
	1241061-1	SHIM	AR	
-27	SEE FIG 40A	WHEEL & BRAKE ASSEMBLY-MAIN GEAR	1	
		ATTACHING PARTS		
-28	S1117-24	NUT	1	
-29	MS24665-351	COTTER PIN	1	
		---*---		
-30	0741048-8	CAP-HUB	2	
		ATTACHING PARTS		
-31	AN515-8R4	SCREW	3	
-32	AN936A8	WASHER	3	
		---*---		
-33	0700099-93	LINE ASSEMBLY-BRAKE LH	1	
	0700099-92	LINE ASSEMBLY-BRAKE RH	1	
		ATTACHING PARTS		
-34	AN833-3D	ELBOW	1	
	AN960PD616	WASHER	2	
	AN924-3D	NUT	1	
-35	MS20822-3D	ELBOW	1	
-36	0550100-6	BRACKET	1	
-37	MS21919DG3	CLAMP	1	
	AN520-10R6	SCREW	1	
	MS21044N3	NUT	1	
-38	S1495-3	HOSE 1.30 IN LG BULK ITEM REF S1495-3-1.30	1	
-39	S1693-6	STA-STRAP	1	
		---*---		

CONTINUED ON NEXT PAGE

Alighting Gear (Cont)

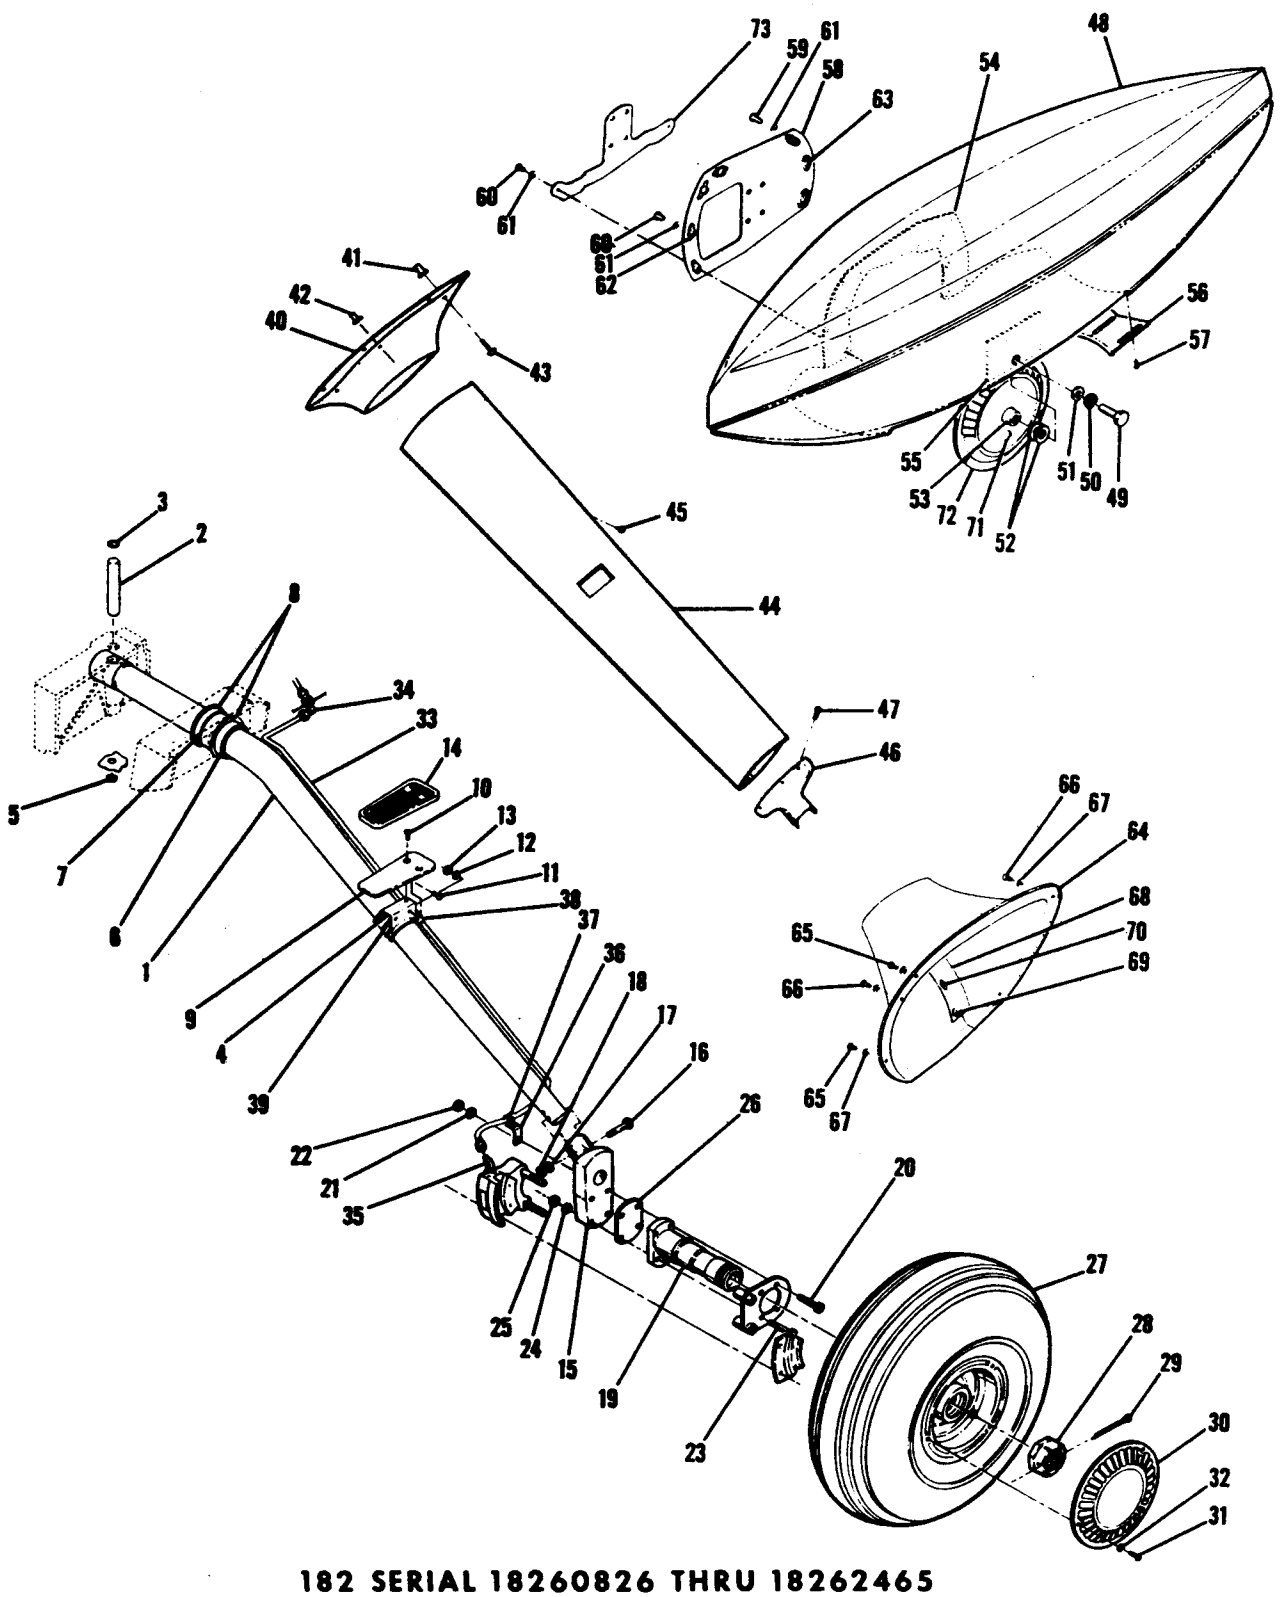


182 SERIAL 18260826 THRU 18262465

Figure 39B. Main Landing Gear Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
39B-40	1741005-201	FAIRING ASSEMBLY-LH VESTAL WHITE	1	
	0741005-251	FAIRING ASSEMBLY-LH PAINT TO MATCH A/C COLOR	1	
	1741005-200	FAIRING ASSEMBLY-RH VESTAL WHITE	1	
	1741005-252	FAIRING ASSEMBLY-RH PAINT TO MATCH A/C COLOR	1	
		ATTACHING PARTS		
-41	NAS1329S3K.080	NUT	4	
-42	NAS1329S3K.130	NUT	2	
-43	AN520-10R12	SCREW	6	
		---*---		
	1741005-21	SPLICE PLATE ASSY-LH	1	
	1741005-22	SPLICE PLATE ASSY-RH	1	
	NAS680A06K	NUTPLATE	3	
-44	0741624-17	FAIRING ASSEMBLY-LH	1	
	0741624-18	FAIRING ASSEMBLY-RH	1	
-45	S1021Z8-6	SCREW	9	
	NAS395-16-3	NUTPLATE	9	
	NAS697A08K	NUTPLATE	3	
-46	0741622-1	COVER PLATE-LH	1	
	0741622-2	COVER PLATE-RH	1	
		ATTACHING PARTS		
-47	AN525-832R6	SCREW	3	
	NAS446-4-3	NUT	3	
		---*---		
-48	0541203-15	FAIRING ASSEMBLY-WHEEL MAIN LANDING GEAR LH	1	
	0541203-14	FAIRING ASSEMBLY-WHEEL MAIN LANDING GEAR RH	1	
		ATTACHING PARTS		
-49	AN6-6A	BOLT	1	B
-50	AN9368616	WASHER	1	
-51	AN960-616L	WASHER	2	
-52	AN960-616	WASHER	1	
-53	0741047-2	NUT	1	
	MS24665-362	PIN-COTTER	1	
		---*---		
-54	0541206-1	DOUBLER-WHEEL FAIRING	1	
-55	0541207-1	DOUBLER-WHEEL FAIRING	1	
	NAS680A3	NUTPLATE	3	
-56	0541205-1	SCRAPER-WHEEL FAIRING	1	
		ATTACHING PARTS		
-57	AN520-10R16	SCREW	3	
	AN960-10	WASHER	6	
	MS21044N3	NUT	3	
		---*---		
-58	0741046-7	PLATE ASSEMBLY-MOUNTING LH	1	
	0741046-8	PLATE ASSEMBLY-MOUNTING RH	1	
		ATTACHING PARTS		
-59	AN525-10R12	SCREW	2	
-60	AN525-10R10	SCREW	2	
-61	S1450-3D9-032	WASHER	4	
		---*---		
-62	NAS686A3	NUTPLATE	4	
-63	NAS680A3K	NUTPLATE	3	
-64	0741634-17	FAIRING ASSEMBLY LH-BRAKE	1	
	0741634-18	FAIRING ASSEMBLY RH-BRAKE	1	
	0741634-2	FAIRING ASSEMBLY RH-BRAKE	1	
	0741634-8	FAIRING ASSEMBLY RH-BRAKE	1	
		ATTACHING PARTS		
-65	AN525-10R16	SCREW	3	
-66	AN525-10R14	SCREW	3	
-67	AN960PD10	WASHER	5	
		---*---		
-68	0741634-5	STIFFENER ASSEMBLY	1	
-69	S1862-1	NUTPLATE	2	
-70	S1863-2	NUTPLATE	2	
-71	6241M	VALVE-EXTENSION DL	1	
-72	0741048-7	CAP-WHEEL	2	
	AN515-8R4	SCREW	3	
	AN936A8	WASHER	3	
-73	1741022-1	STIFFENER-LH WHEEL FAIRING	1	
	1741022-2	STIFFENER-RH WHEEL FAIRING	1	

A---182 SERIAL 18260826 THRU 18262465
B---182 SERIAL 18260826 THRU 18260953

Alighting Gear (Cont)

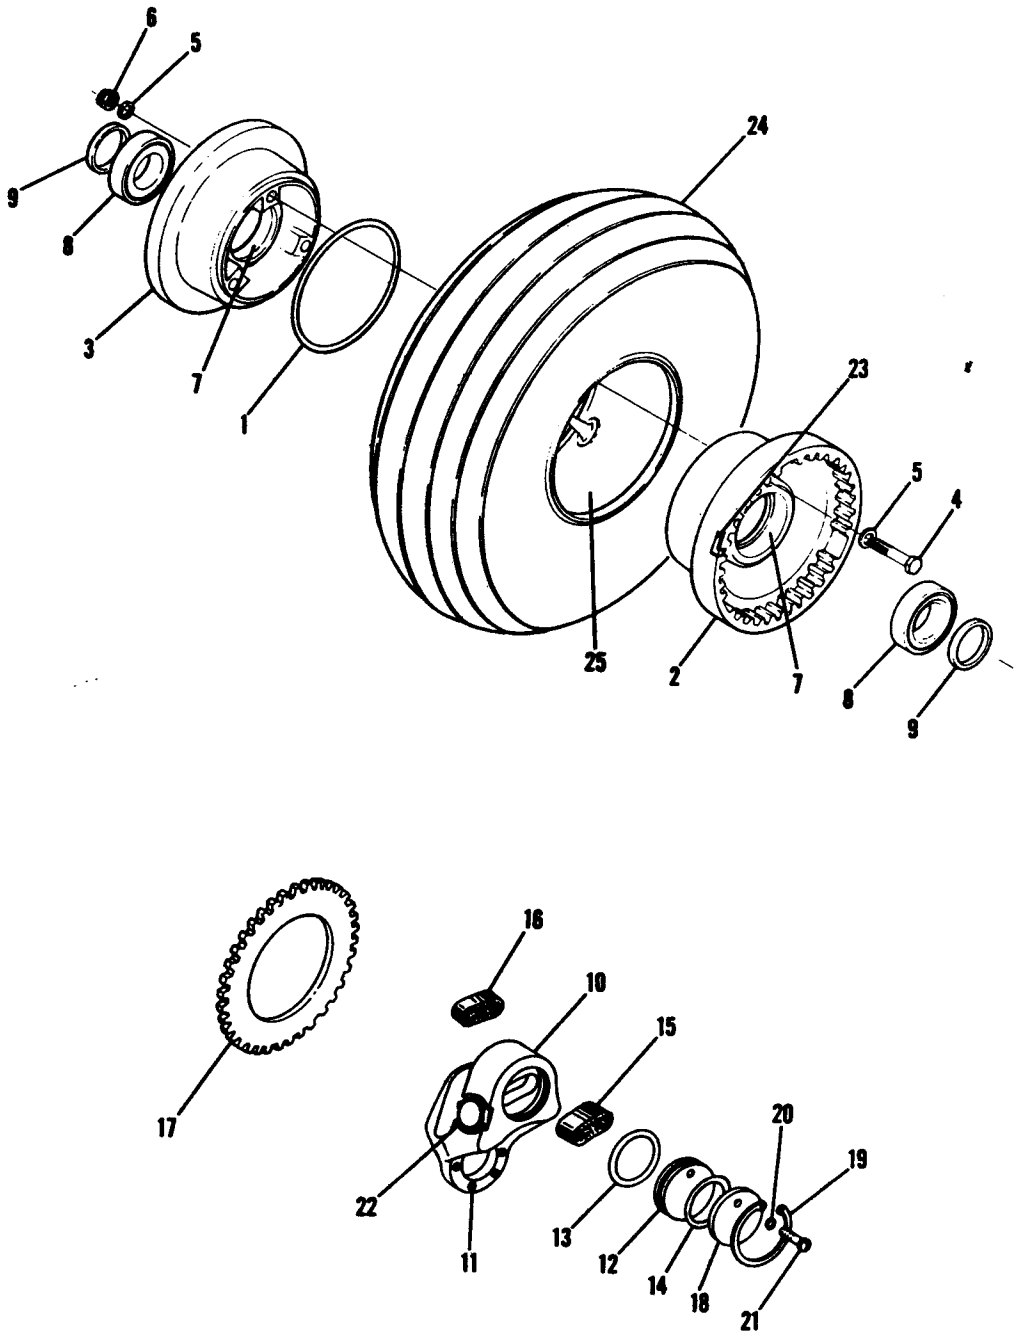


182 SERIAL 18253599 THRU 18255844

Figure 40. Main Wheel & Brake Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40 -		WHEEL & BRAKE ASSEMBLY-MAIN LANDING GEAR	NP	C
	0541160-13	WHEEL ASSEMBLY-MAIN LANDING GEAR GY9532673	1	A
	0541183-9	WHEEL ASSEMBLY-MAIN LANDING GEAR GY 9532522	1	B
- 1	AN6230828	O RING	1	A
- 2	9524201	WHEEL SUBASSEMBLY-INBOARD HALF GY	1	
- 3	9524202	WHEEL SUBASSEMBLY-OUTBOARD HALF GY	1	A
	9524318	WHEEL SUBASSEMBLY-OUTBOARD HALF GY	1	B
		ATTACHING PARTS		
- 4	AN4-13A	BOLT	3	
- 5	AN960-416	WASHER	6	
- 6	22FH-428	NUT SPS	3	
		---*---		
- 7	13830	CUP-BEARING T1	1	
- 8	13889	CONE-BEARING T1	2	
- 9	9524218	SEAL-BEARING GY	2	
	9524491	CLIP-VALVE GY	1	B
		ATTACHING PARTS		
	AN504-8R8	SCREW	1	B
		---*---		
	0541161-2	BRAKE ASSEMBLY GY9532181	1	
-10	9541458	HOUSING-BRAKE GY	1	
-11	9521184	BUSHING GY	1	
-12	9524223	PISTON GY	1	
-13	AN6230B2	O RING	1	
-14	AN6230B3	O RING	1	
-15	9511269	LINING-BRAKE GY	1	
-16	9511271	LINING-BRAKE GY	1	
-17	9532277	DISC-BRAKE GY	1	
-18	9524343	CYLINDER HEAD GY	1	
		ATTACHING PARTS		
-19	MS16625-212	SNAP RING	1	
		---*---		
-20	511846-4	SEAL-BLEEDER GY	1	
-21	AN502-10-6	SCREW-BLEEDER	1	
-22	9520448	PLUG-DRAIN GY	1	
	MS28778-4	GASKET-DRAIN	1	
-23	9524463	CLIP-BRAKE DISC GY	3	
-24	C262003-0304	TIRE-TUBELESS 6.00 X 6 6 PLY RATED	1	A
	C262003-0204	TIRE-TUBE TYPE 6.00X6 6 PLY RATED	1	B
	C262003-0207	TIRE-TUBE TYPE 8.00X6 6 PLY RATED	1	
-25	C262023-0102	TUBE 6.00X6	1	B
	C262023-0104	TUBE 8.00X6	1	

A---182 SERIAL 18253599 THRU 18254423
B---182 SERIAL 18254424 THRU 18255844
C---182 SERIAL 18253599 THRU 18255844

Alighting Gear (Cont)

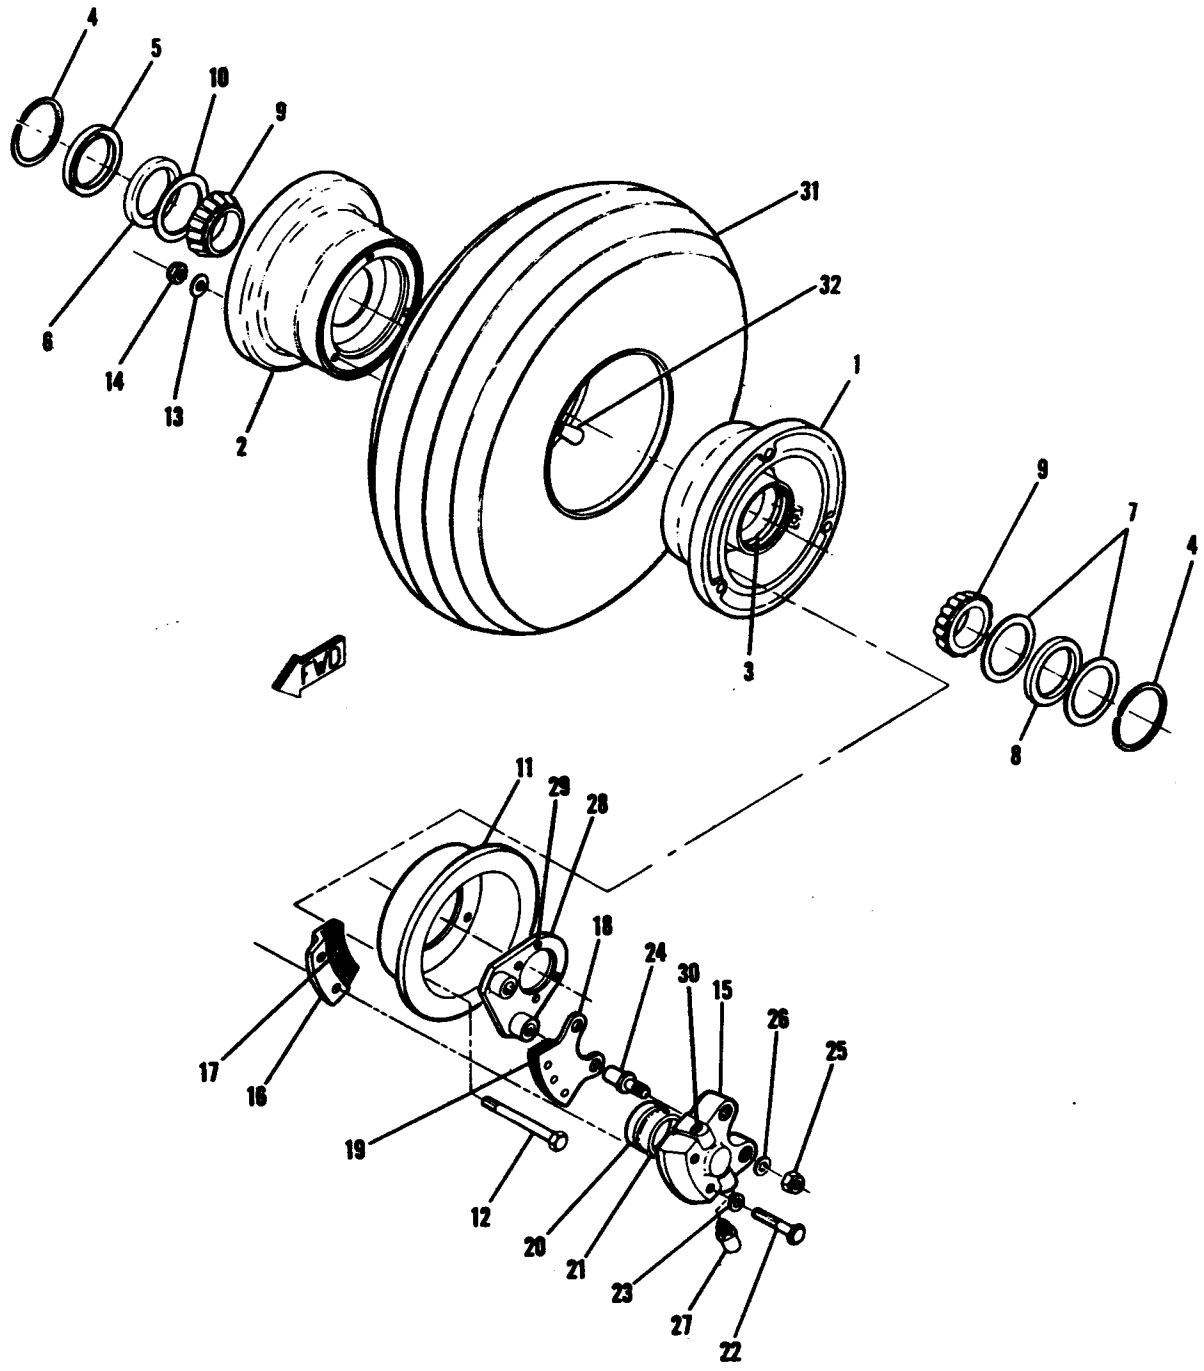

182 SERIAL 18255845 THRU 18262465

Figure 40A. Main Wheel & Brake Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40A-			WHEEL & BRAKE ASSEMBLY-MAIN LANDING GEAR	NP	A
	C163001-0103		WHEEL ASSEMBLY-MAIN GEAR CFP 40-97A	1	F
	C163001-0104		WHEEL ASSEMBLY-MAIN GEAR CFP 40-113	1	G
- 1	161-30		WHEEL HALF ASSEMBLY-MALE CFP	1	F
	161-49		WHEEL HALF ASSEMBLY-MALE CFP	1	G
- 2	162-27		WHEEL HALF ASSEMBLY-FEMALE CFP	1	F
	162-47		WHEEL HALF ASSEMBLY-FEMALE CFP	1	G
- 3	13836		CUP-BEARING	1	
- 4	3023		SNAP RING CFP	1	
- 5	153-15		RING-GREASE SEAL CFP	1	
- 6	154-13		FELT-GREASE SEAL CFP	1	
- 7	3022		RING-GREASE SEAL CFP	2	
- 8	3021		FELT-GREASE SEAL CFP	1	
- 9	13889		CONE-BEARING CFP	2	
-10	A39070		RING-GREASE SEAL CFP	1	
-11	164-26A		DISC ASSEMBLY-BRAKE CFP	1	F
	164-40		DISC ASSEMBLY-BRAKE CFP	1	G
-12	AN5-35A		BOLT	3	F
	AN4-36A		BOLT	3	G
-13	AN960-516		WASHER	3	F
	AN960-416		WASHER	3	G
-14	NAS679A5		NUT	3	F
	AN365-428		NUT	3	G
	C163030-0101	*	BRAKE ASSEMBLY CFP 30-56 WHEN EXHAUSTED USE C163030-0103 OR C163030-0105	1	B
	C163030-0103	**	BRAKE ASSEMBLY INCLUDES NIPPLE CFP 30-63	1	D
	C163030-0105	**	BRAKE ASSEMBLY INCLUDES ELBOW 30-63	1	D
	C163030-0107	**	BRAKE ASSEMBLY	1	E
	C163030-113	**	BRAKE ASSEMBLY	1	G
	91-22		CYLINDER ASSEMBLY CFP	1	F
	91-44		CYLINDER ASSEMBLY CFP	1	G
-15	61-19		CYLINDER CFP	1	F
	61-37		CYLINDER CFP	1	G
-16	74-10		BACK PLATE ASSEMBLY CFP	1	
-17	66-30		LINING	1	
	561		RIVET CFP	AR	
-18	73-11		PRESSURE PLATE ASSEMBLY CFP	1	
-19	66-30		LINING CFP	1	
	561		RIVET CFP	AR	
-20	92-17		PISTON ASSEMBLY CFP	1	
-21	AN6230B2		O RING	1	
-22	LP4-17AM		BOLT CFP	2	
-23	AN960-416L		WASHER	2	
-24	69-4		BOLT-ANCHOR CFP	2	
-25	NAS679A4		NUT	2	
-26	AN960-416L		WASHER	2	
-27	FC6446		SCREW-BLEEDER CFP	1	
	183-1		CAP-BLEEDER SCREW CFP	1	
	37-206		SEAT-BLEEDER SCREW CFP	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40A-28	75-31	TORQUE PLATE ASSEMBLY CFP	1	B
	75-37	TORQUE PLATE ASSEMBLY CFP	1	C
-29	145-10	BUSHING-TORQUE PLATE	2	
-30	AN816-4D	NIPPLE USED ON C163030-0103 ASSY	1	D
	MS20823-4D	ELBOW USED ON C163030-0105 ASSY	1	D
	AN914-1D	ELBOW USED WITH C163030-0107 & -0113 ASSY	1	
-31	C262003-0204	TIRE-6.00X6 6 PR	1	
	C262001-0201	TIRE 6.00X6 WHITEWALL 6 PR	1	
-32	C262023-0102	TUBE-6.00 X 6	1	


NOTE. *WHEN INITIALLY ORDERING C163030-0103 OR C163030-0105 FOR AIRPLANES DESCRIBED IN CODE B ALSO ORDER 164-26 BRAKE DISC.

NOTE. **BRAKE ASSEMBLIES DESCRIBED ARE NORMALLY LH - REVERSE FITTINGS & TORQUE PLATE BUSHINGS FOR RH INSTALLATION.

A---182 SERIAL 18255845 THRU 18262465
B---182 SERIAL 18255845 THRU 18256228
182 SERIAL 18256230 THRU 18256232
C---182 SERIAL 18256229 & 18256233 THRU 18262465
D---182 SERIAL 18256299 & 18256233 THRU 18258399
A182 SERIAL A182-0001 THRU A182-0096
E---182 SERIAL 18258400 THRU 18260445
A182 SERIAL A182-0097 THRU A182-0136
F---182 SERIAL 18255845 THRU 18260445
A182 SERIAL A182-0001 THRU A182-0136
G---182 SERIAL 18260446 THRU 18262465
A182 SERIAL A182-0137 & ON

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
41 -			CABIN DOOR ASSEMBLY-LH	NP	AH
			ATTACHING PARTS		
- 1	AN509-10R14		SCREW	3	
	AN507-1032R12		SCREW	2	
- 2	MS21044N3		NUT	5	
- 3	AN507-832R8		SCREW	2	P
	AN507-1032R8		SCREW	2	Q
			---*---		
- 4	0711027-1		HANDLE-INSIDE DOOR	1	R
- 4A	0700166-1		PLACARD-CABIN DOOR HANDLE	1	U
- 4B	1211250-6		HANDLE-INSIDE DOOR	1	AC
	1211250-7		HANDLE-INSIDE DOOR	1	AD
- 4C	1211251-2		INSERT-HANDLE	1	AC
	1211251-1		INSERT-HANDLE	1	AD
- 5	0511189-2		ESCUTCHEON-DOOR HANDLE	1	AB
- 5A	1705015-1		PLACARD-DOOR LH	1	V
- 5B	1211836-1		WASHER	1	W
- 6	0511189-1		CLIP-DOOR HANDLE	1	
- 7	0413317-1		SPRING-DOOR HANDLE	1	G
	0413317		SPRING-DOOR HANDLE	1	H
- 8	0413323-5		LOCK ASSEMBLY-DOOR WHEN EXHAUSTED USE C253001-0101	1	J
	C253001-0101		LOCK ASSEMBLY-DOOR	1	L
- 8A	0711033		CAM-DOOR LOCK		
- 9	0411851		WASHER	1	
-10	SEE FIG 43		LATCH ASSEMBLY-REMOVABLE	1	K
	SEE FIG 43A		LATCH ASSEMBLY-REMOVABLE	1	O
			ATTACHING PARTS		
	NAS220-5		SCREW	12	
	NAS696A08		NUTPLATE	1	
	NAS697A08		NUTPLATE	4	
			---*---		
-11	0710625-1		HINGE-DOOR STOP	1	P
	0710625-5		HINGE-DOOR STOP	1	Q
-12			DELETED-NEVER USED		
-13	0700663-1		PLATE-WINDOW LATCH	1	B
	0700685-1		PLATE-WINDOW LATCH	1	C
			ATTACHING PARTS		
-14	S1021Z8		SCREW	2	
			---*---		
	0710620-201		STRUCTURE ASSEMBLY-CABIN DOOR LH	1	D
	0710620-207	#	STRUCTURE ASSEMBLY-CABIN DOOR LH	1	F
	0710620-213		STRUCTURE ASSEMBLY-CABIN DOOR LH	1	S
	0710620-219		STRUCTURE ASSEMBLY-CABIN DOOR LH	1	X
	0710620-223		STRUCTURE ASSEMBLY-CABIN DOOR LH	1	Y
			STRUCTURE ASSEMBLY-CABIN DOOR LH 182 ONLY	1	AE
	0710620-203		STRUCTURE ASSEMBLY-CABIN DOOR LH SKYLANE	1	D
	0710620-205	#	STRUCTURE ASSEMBLY-CABIN DOOR LH SKYLANE	1	F
	0710620-211		STRUCTURE ASSEMBLY-CABIN DOOR LH SKYLANE	1	S
	0710620-217		STRUCTURE ASSEMBLY-CABIN DOOR LH SKYLANE	1	X
	0710620-225		STRUCTURE ASSEMBLY-CABIN DOOR LH SKYLANE	1	Y
			STRUCTURE ASSEMBLY-CABIN DOOR LH	1	AD
-15	0710620-9		SKIN-CABIN DOOR	1	R
	0717010-11		SKIN-CABIN DOOR	1	T
-16	0717010-21		JAMB-WINDOW	1	
-17	0710619-1		SUPPORT ASSEMBLY-ARM REST	2	D
	0700684-1		SUPPORT ASSEMBLY-ARM REST	2	E
	NAS696A3		NUTPLATE	1	
-18	0710622-1		REINFORCEMENT-DOOR STOP	1	
-19	0710623-1		PLATE-STOP	1	
-20	0710624-1		CATCH ASSEMBLY-DOOR STOP	1	
			ATTACHING PARTS		
-21	AN515-6R6		SCREW	4	AF
	AN515-6R10		SCREW	4	AD
-22	NAS679A06		NUT	4	
	0710637-1		SPACER-WEDGE	1	Z
	0717009-1		SPACER-FLAT	1	AA
			---*---		
	0710624-4		PLUNGER-DOOR STOP	1	
	0710624-3		SPRING-DOOR STOP	1	
-23	0711034-1		STOP-CABIN DOOR	1	
-24	0711064-1		SUPPORT ASSEMBLY-DOOR LATCH FORWARD	1	D
	0711064-5		SUPPORT ASSEMBLY-DOOR LATCH FORWARD	1	E
	NAS696A08		NUTPLATE	2	

CONTINUED ON NEXT PAGE

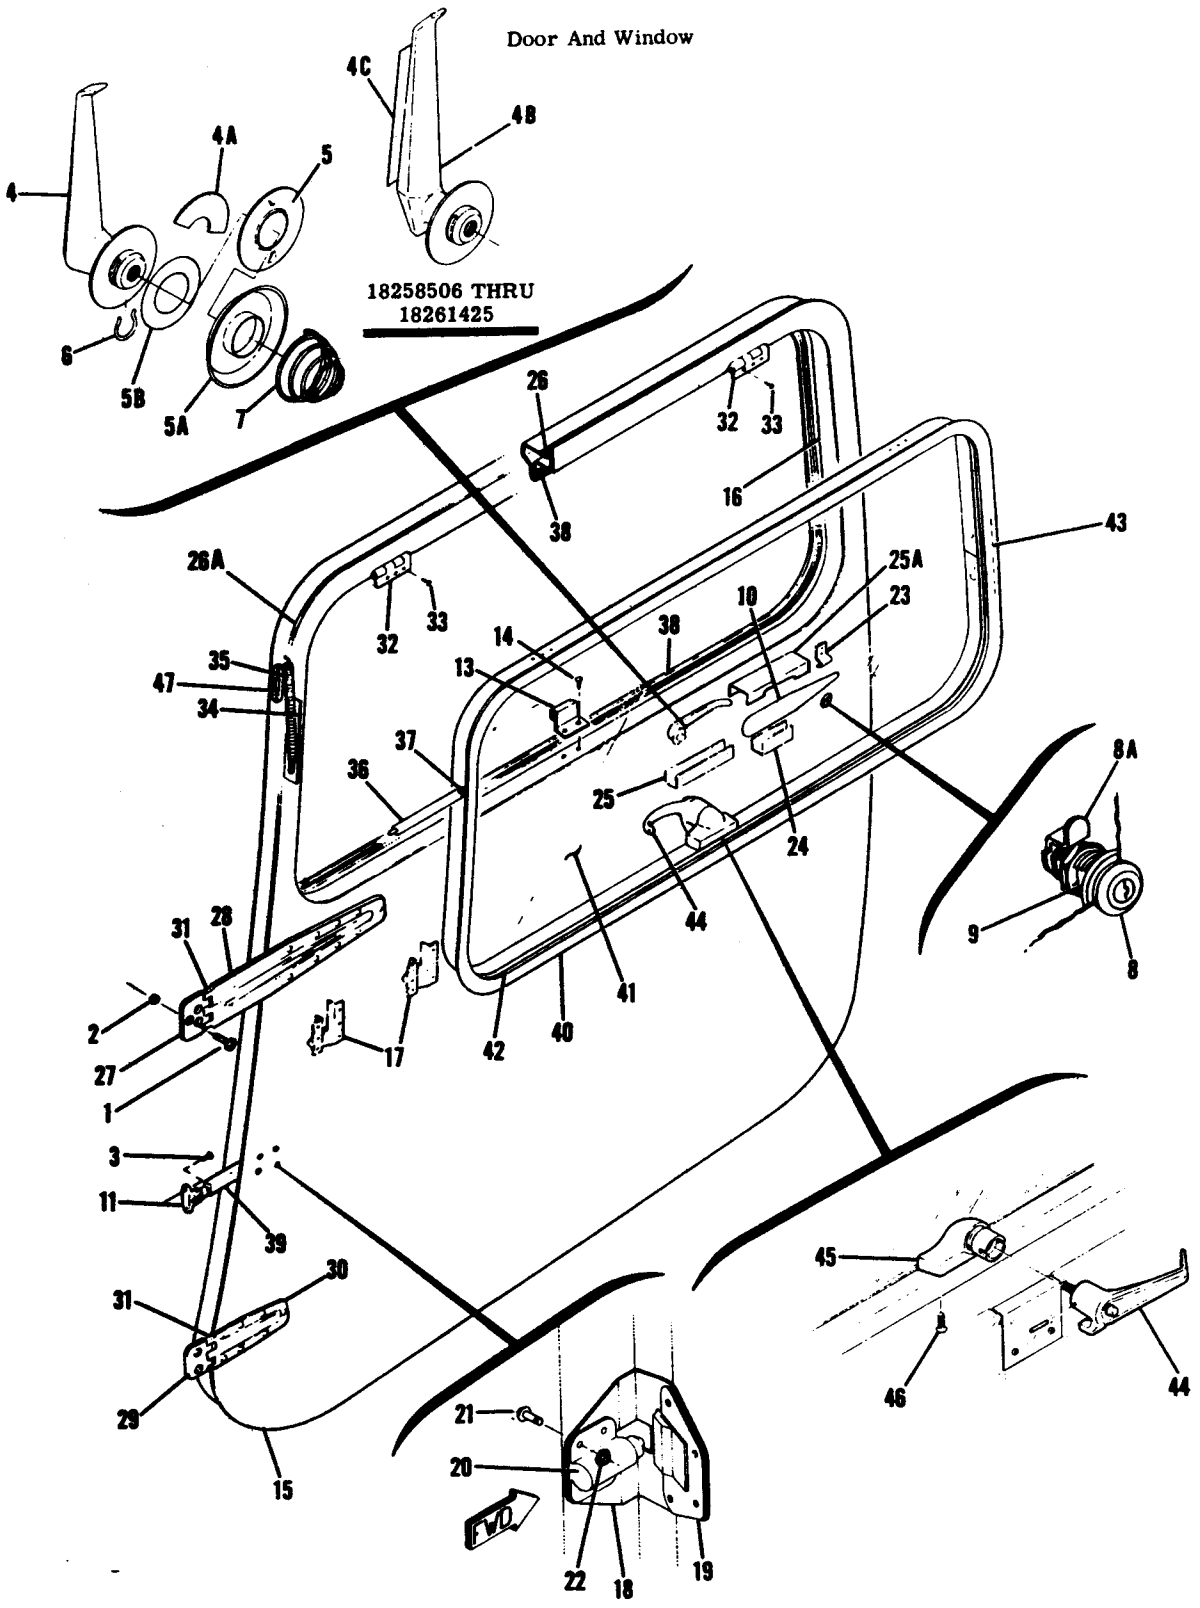

182 SERIAL 18253599 THRU 18261425

Figure 41. Left Cabin Door Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
41 -25	0711065-1	SUPPORT ASSEMBLY-DOOR LATCH	1	
	NAS696A08	NUTPLATE	1	
	NAS697A08	NUTPLATE	2	
-25A	0710631-3	STIFFENER ASSEMBLY	1	F
	NAS697A08	NUTPLATE	2	F
	0717010-23	STIFFENER	1	D
	NAS682A08	NUTPLATE	1	D
-26	S1116-1	SEAL 116.0 IN LG BKI REF S1116-1-116.0	1	AF
	S1116-1	SEAL 144.0 IN LG BKI REF S1116-1-144.0	1	AD
-26A	S1116-1	SEAL 28.0 IN LG BKI REF S1116-1-28.0	1	AF
	S1441-1- *	SEAL 12.0 IN LG BULK ITEM REF S1441-1-12.0	1	AF
-27	0711037-15	HINGE-UPPER STATIONARY	1	
-28	0711037-17	HINGE-UPPER	1	
-29	0711037-19	HINGE-LOWER STATIONARY	1	
-30	0711037-21	HINGE-LOWER	1	
-31	0711038-1	PIN-HINGE	2	
-32	0411185-7	HINGE-WINDOW	2	
		ATTACHING PARTS		
-33	CR163-4-4	RIVET CR	4	
		---*---		
-34	0711021-1	PLATE	1	
-35	0711021-9	SPRING	1	
-36	0711021-4	ARM ASSEMBLY	1	
		ATTACHING PARTS		
-37	AN525-10R8	SCREW	1	
		---*---		
-38	S1378-1	SEAL-WINDOW 84.0 IN LG BULK ITEM	1	M
		REF S1378-1-84.00W		
	S1378-2	SEAL-WINDOW 84.0 IN LG BULK ITEM	1	N
	S2108-1	SEAL-WINDOW 84.0 IN LG BULK ITEM	1	AD
		REF S1378-1-84.00		
-39	0710626-11	ARM-DOOR STOP	1	
	0711050-16	WINDOW ASSEMBLY-DOOR LH	1	AG
	0711050-17	WINDOW ASSEMBLY-DOOR LH SKYLANE	1	A
-40	0711050-18	FRAME-WINDOW	1	
-41	0711051-7	WINDOW-DOOR CLEAR	1	AG
	0711051-6	WINDOW-DOOR TINTED SKYLANE	1	A
-42	0711051-5	SEAL	1	
-43	0711050-15	TUBE-SPLICE	1	
		ATTACHING PARTS		
	CR163-4-4	RIVET CR	6	
		---*---		
-44	S1483-2	HANDLE ASSEMBLY-WINDOW	1	
		ATTACHING PARTS		
	NAS561P3-8	ROLL PIN	1	
		---*---		
-45	1411202-201	BRACKET ASSEMBLY	1	
		ATTACHING PARTS		
-46	NAS514-1032-14	SCREW	2	
	NAS43HT3-34	SPACER	2	
		---*---		
	S1613-3-75	RIVNUT GD	1	
-47	0710638-1	WEDGE-DOOR	1	

NOTE. *THIS SEAL IS INSTALLED UNDER S1264-1-28

NOTE. #WHEN ORDERING THIS PART PRIOR TO SERIAL 18255121, ALSO ORDER ONE 0711653-2 HANDLE SHOWN ON FIGURE 43.


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
41 -		A---182 SERIAL 18253599 THRU 18261425 A182 SERIAL A182-0001 & ON B---182 SERIAL 18253599 THRU 18253794 C---182 SERIAL 18253795 THRU 18261425 A182 SERIAL A182-0001 & ON D---182 SERIAL 18253599 THRU 18254423 E---182 SERIAL 18254424 THRU 18261425 A182 SERIAL A182-0001 & ON F---182 SERIAL 18254424 THRU 18256684 G---182 SERIAL 18253599 THRU 18255029 H---182 SERIAL 18255030 THRU 18261425 A182 SERIAL A182-0001 & ON J---182 SERIAL 18253599 THRU 18257625 A182 SERIAL A182-0001 THRU A182-0056 K---182 SERIAL 18253599 THRU 18256684 L---182 SERIAL 18257626 THRU 18261425 A182 SERIAL A182-0057 & ON M---182 SERIAL 18253599 THRU 18255844 N---182 SERIAL 18255845 THRU 18260445 A182 SERIAL A182-0001 THRU A182-0116 O---182 SERIAL 18256685 THRU 18261425 A182 SERIAL A182-0001 & ON P---182 SERIAL 18253599 THRU 18257934 A182 SERIAL A182-0001 THRU A182-0096 Q---182 SERIAL 18257935 THRU 18261425 A182 SERIAL A182-0097 & ON R---182 SERIAL 18253599 THRU 18258505 A182 SERIAL A182-0001 THRU A182-0096 S---182 SERIAL 18256685 THRU 18258505 A182 SERIAL A182-0001 THRU A182-0096 T---182 SERIAL 18258506 THRU 18261425 A182 SERIAL A182-0097 & ON U---182 SERIAL 18256685 THRU 18259899 A182 SERIAL A182-0001 THRU A182-0116 V---182 SERIAL 18259900 THRU 18261425 A182 SERIAL A182-0117 & ON W---182 SERIAL 18260111 THRU 18261425 A182 SERIAL A182-0117 & ON X---182 SERIAL 18258506 THRU 18260055 A182 SERIAL A182-0097 THRU A182-0116 Y---182 SERIAL 18260056 THRU 18260445 A182 SERIAL A182-0117 THRU A182-0136 Z---182 SERIAL 18254348 THRU 18261425 A182 SERIAL A182-0001 & ON AA---182 SERIAL 18260174 THRU 18261425 A182 SERIAL A182-0117 & ON AB---182 SERIAL 18253599 THRU 18259899 A182 SERIAL A182-0001 THRU A182-0116 AC---182 SERIAL 18258506 THRU 18260445 A182 SERIAL A182-0097 THRU A182-0116 AD---182 SERIAL 18260446 THRU 18261425 A182 SERIAL A182-0117 & ON AE---182 SERIAL 18260446 THRU 18260825 A182 SERIAL A182-0116 THRU A182-0136 AF---182 SERIAL 18253599 THRU 18260445 A182 SERIAL A182-0001 THRU A182-0116 AG---182 SERIAL 18253599 THRU 18260825 A182 SERIAL A182-0001 THRU A182-0136 AH---182 SERIAL 18253599 THRU 18261425 A182 SERIAL A182-0001 & ON		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
41A-		CABIN DOOR ASSEMBLY-LH	N	A
		ATTACHING PARTS		
- 1	AN509-10R14	SCREW	3	
- 2	AN507-1032R12	SCREW	2	
- 3	AN960-10L	WASHER	5	
- 4	MS21044N3	NUT	5	
		---*---		
- 5	0517006-2	HANDLE-INSIDE DOOR	1	
- 6	1211836-1	WASHER	1	
- 7	1705015-1	PLACARD	1	
- 8	0511189-1	CLIP	1	
- 9	0413317	SPRING	1	
-10	C253001-0101	LOCK ASSY-DOOR	1	
-11	0411851	WASHER	1	
-12	0711033-1	CAM-DOOR LOCK	1	
-13	SEE FIG 43A	LATCH ASSY-REMOVABLE	1	
		ATTACHING PARTS		
	NAS220-5	SCREW	14	
	NAS696A08	NUTPLATE	1	
	NAS697A08	NUTPLATE	4	
		---*---		
-14	1213942-1	HINGE ASSY-DOOR STOP	1	
		ATTACHING PARTS		
-15	AN509-10R8	SCREW	3	
		---*---		
-16	0700685-1	STRIKER PLATE-WINDOW LATCH	1	
		ATTACHING PARTS		
-17	S1022Z8-8	SCREW	2	
		---*---		
		STRUCTURE ASSY-CABIN DOOR LH	NP	
-18	1217037-9	SKIN-CABIN DOOR	1	
-19	0717010-28	JAMB ASSEMBLY-WINDOW	1	
-20	0711021-1	PLATE	1	
-21	0700684-1	SUPPORT ASSY-ARM REST	2	
	NAS696A3	NUTPLATE	1	
-22	1217038-1	BRACKET-CABIN DOOR STOP	1	
-23	1217038-2	BRACKET-CABIN DOOR STOP	1	

CONTINUED ON NEXT PAGE

Door & Window (Cont)

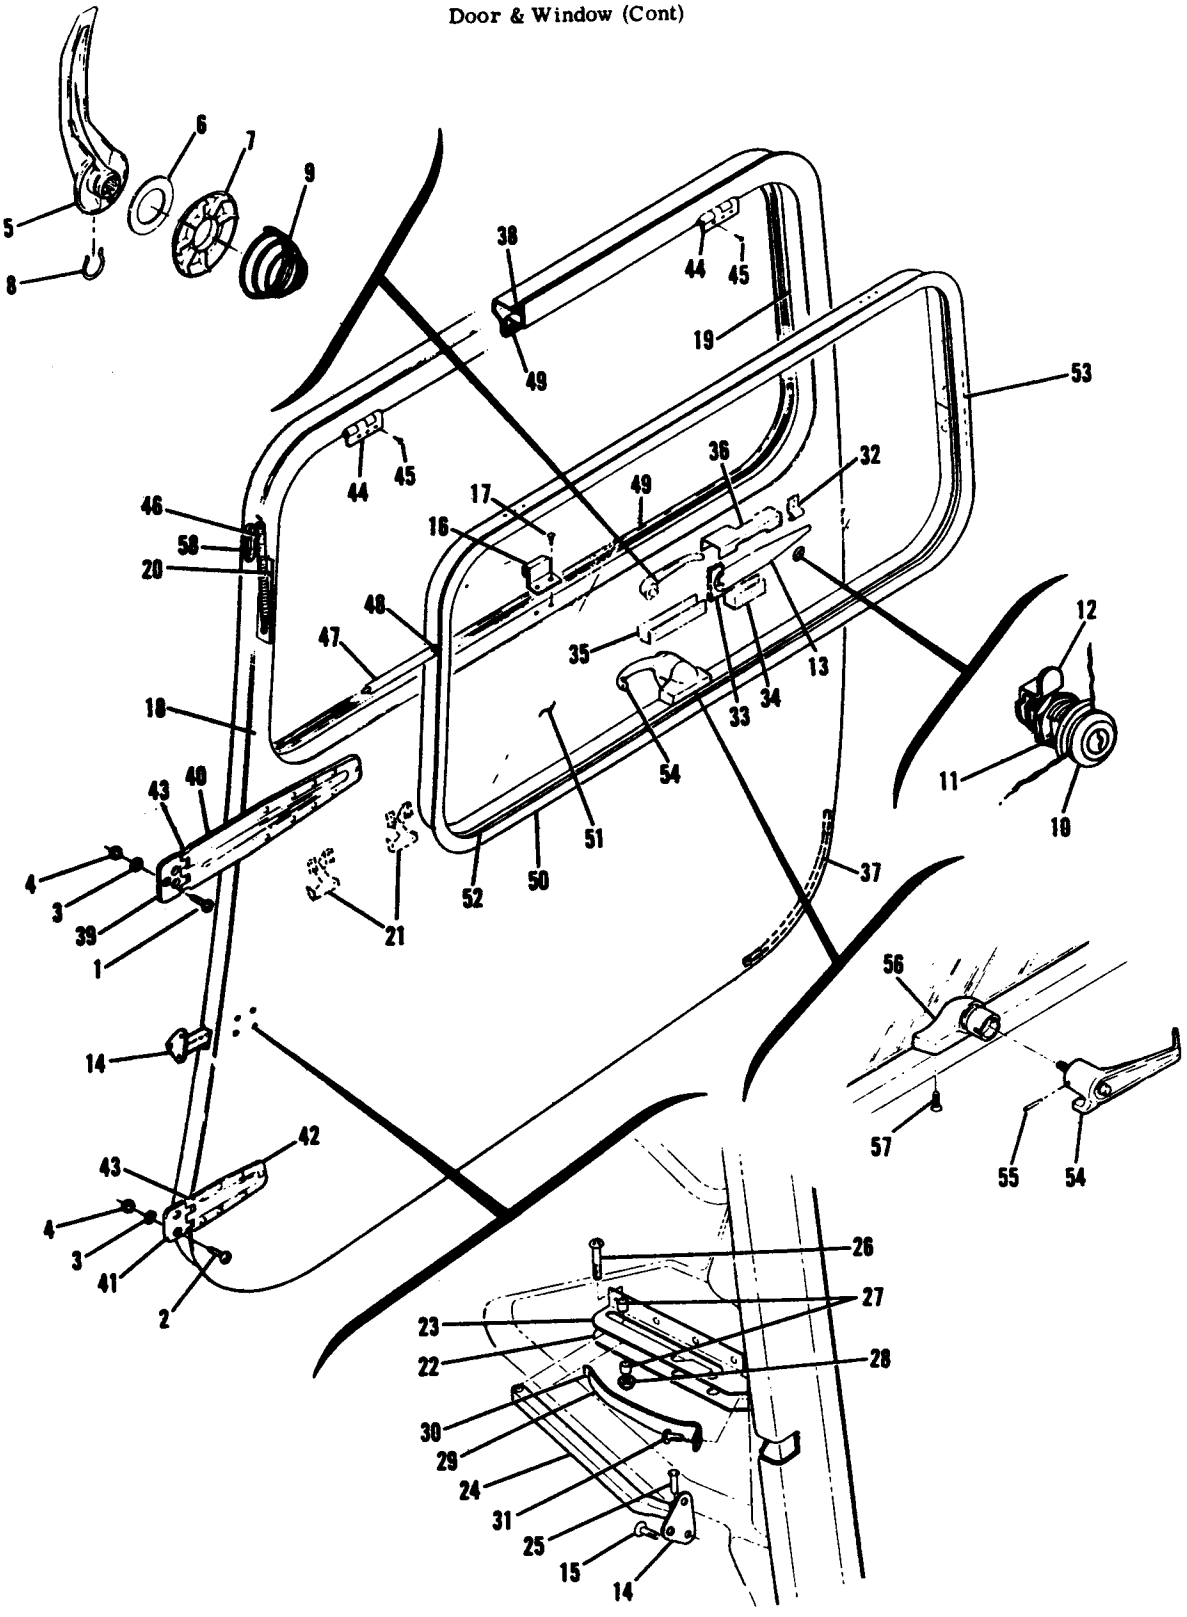

182 SERIAL 18261426 THRU 18262465


Figure 41A. Left Cabin Door Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
41A-24	1411206-7	ARM-CABIN DOOR STOP	1	
		ATTACHING PARTS		
-25	MS20615-4M10	RIVET	1	
		---*---		
-26	NAS220-16	SCREW	1	
-27	1411206-1	SPACER	2	
-28	NAS679A08	NUT	1	
-29	1411207-1	SPRING	1	
-30	1411207-2	SPRING	1	
		ATTACHING PARTS		
-31	AN525-832R7	SCREW	1	
		---*---		
-32	0711034-1	STOP-CABIN DOOR HANDLE	1	
-33	1217035-1	RUB BLOCK	1	
-34	0711064-5	SUPPORT ASSY-DOOR LATCH	1	
	NAS696A08	NUTPLATE	2	
-35	0711065-1	SUPPORT ASSY-DOOR LATCH	1	
	NAS696A08	NUTPLATE	2	
	NAS697A08	NUTPLATE	1	
-36	0717010-23	BRACKET ASSY	1	
	NAS682A08	NUTPLATE	1	
-37	S1441-2	SEAL 15.0 IN LG BK1 REF S1441-2-15.0	1	
-38	S1116-1	SEAL 160.0 IN LG BK1 REF S1116-1-160.0	1	
-39	0711037-15	HINGE-UPPER STATIONARY	1	
-40	0711037-17	HINGE-UPPER	1	
-41	0711037-19	HINGE-LOWER STATIONARY	1	
-42	0711037-21	HINGE-LOWER	1	
-43	0711038-1	PIN-HINGE	2	
-44	0411185-9	HINGE ASSY-WINDOW	2	
		ATTACHING PARTS		
-45	CR163-4-4	RIVET-CHERRY CY	4	
		---*---		
-46	0711021-9	SPRING	1	
-47	0711021-4	ARM ASSY	1	
		ATTACHING PARTS		
-48	AN525-10R8	SCREW	1	
		---*---		
-49	S2108-1	SEAL-WINDOW 84.0 IN LG BK1 REF S2108-1-84.0	1	
	0711050-27	WINDOW ASSY-DOOR LH	1	
-50	0711050-18	FRAME-WINDOW	1	
-51	0711051-6	GLASS ASSY-WINDOW TINTED	1	
-52	0711051-5	SEAL	1	
-53	0711050-15	TUBE-SPLICE	1	
		ATTACHING PARTS		
	S1726-1	RIVET	6	
		---*---		
-54	S1483-2	HANDLE ASSY-WINDOW	1	
		ATTACHING PARTS		
-55	NAS561P3-8	ROLL PIN	1	
		---*---		
-56	1411202-201	BRACKET ASSY-WINDOW LATCH	1	
		ATTACHING PARTS		
-57	NAS514-1032-14	SCREW	2	
	NAS43HT3-34	SPACER	2	
		---*---		
	S1613-3-75	RIVNUT	1	
-58	0710638-1	WEDGE-DOOR	1	
		A---182 SERIAL 18261426 THRU 18262465		

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
42 -			CABIN DOOR ASSEMBLY-RH	NP	AB
			ATTACHING PARTS		
- 1	AN509-10R14		SCREW	3	
	AN507-1032R12		SCREW	2	
- 2	MS21044N3		NUT	5	
- 3	AN507-832R8		SCREW	2	J
	AN507-1032R8		SCREW	2	K
			---*---		
- 4	0711027-1		HANDLE-INSIDE DOOR	1	L
- 4A	0700166-2		PLACARD-DOOR HANDLE	1	D
- 4B	1211250-6		HANDLE-INSIDE DOOR	1	W
	1211250-7		HANDLE-INSIDE DOOR	1	Y
- 4C	1211251-2		INSERT-HANDLE	1	W
	1211251-1		INSERT-HANDLE	1	Y
- 5	0511189-2		ESCUTCHEON-DOOR HANDLE	1	V
- 5A	1705015-2		PLACARD-DOOR RH	1	P
- 5B	1211836-1		WASHER	1	Q
- 6	0511189-1		CLIP-DOOR HANDLE	1	
- 7	0413317-1		SPRING-DOOR HANDLE	1	E
	0413317		SPRING-DOOR HANDLE	1	F
	0411851		WASHER	1	
- 8	SEE FIG 43		LATCH ASSEMBLY-REMOVABLE	1	G
	SEE FIG 43A		LATCH ASSEMBLY-REMOVABLE	1	H
			ATTACHING PARTS		
- 9	NAS220-5		SCREW	12	
	NAS696A08		NUTPLATE	1	
	NAS697A08		NUTPLATE	4	
			---*---		
			DELETE, NEVER USED		
-11	0710625-1		HINGE-DOOR STOP	1	J
	0710625-5		HINGE-DOOR STOP	1	K
	0710620-200		STRUCTURE ASSEMBLY-CABIN DOOR	1	B
	0710620-206	#	STRUCTURE ASSEMBLY-CABIN DOOR	1	C
	0710620-212		STRUCTURE ASSEMBLY-CABIN DOOR RH	1	M
	0710620-218		STRUCTURE ASSEMBLY-CABIN DOOR RH	1	T
	0710620-222		STRUCTURE ASSEMBLY-CABIN DOOR RH	1	J
			STRUCTURE ASSEMBLY-CABIN DOOR RH 182 ONLY	NP	Z
	0710620-202		STRUCTURE ASSEMBLY-CABIN DOOR RH SKYLANE	1	B
	0710620-204	#	STRUCTURE ASSEMBLY-CABIN DOOR RH SKYLANE	1	C
	0710620-210		STRUCTURE ASSEMBLY-CABIN DOOR RH SKYLANE	1	M
	0710620-216		STRUCTURE ASSEMBLY-CABIN DOOR RH SKYLANE	1	T
	0710620-224		STRUCTURE ASSEMBLY-CABIN DOOR RH SKYLANE	1	U
			STRUCTURE ASSEMBLY-CABIN DOOR RH	NP	Y
-12	0710620-10		SKIN-CABIN DOOR	1	L
	0717010-12		SKIN-CABIN DOOR	1	N
-13	0711034-1		STOP-CABIN DOOR	1	
-14	0711064-1		SUPPORT ASSEMBLY-DOOR LATCH FORWARD	1	B
	0711064-5		SUPPORT ASSEMBLY-DOOR LATCH FORWARD	1	C
	NAS696A08		NUTPLATE	2	
-15	0711065-1		SUPPORT ASSEMBLY-DOOR LATCH	1	
	NAS696A08		NUTPLATE	1	
	NAS697A08		NUTPLATE	2	
-15A	0710631-3		STIFFENER ASSEMBLY	1	C
	NAS697A08		NUTPLATE	2	C
	0717010-24		STIFFENER ASSEMBLY	1	H
	NAS682A08		NUTPLATE	1	H
-16	0710619-1		SUPPORT ASSEMBLY-ARM REST	2	B
	0700684-1		SUPPORT ASSEMBLY-ARM REST	2	C
	NAS696A3		NUTPLATE	1	
-17	0710622-2		REINFORCEMENT-DOOR STOP	1	
-18	0710623-2		PLATE-STOP	1	
-19	0710624-1		CATCH ASSEMBLY-DOOR STOP	1	
			ATTACHING PARTS		
-20	AN515-6R6		SCREW	4	X
	AN515-6R10		SCREW	4	Y
-21	NAS679A06		NUT	4	
	0710637-1		SPACER-WEDGE	1	R
	0717009-1		SPACER-FLAT	1	S
			---*---		
	0710624-4		PLUNGER-DOOR STOP	1	
	0710624-3		SPRING-DOOR STOP	1	

CONTINUED ON NEXT PAGE

Door And Window (Cont)

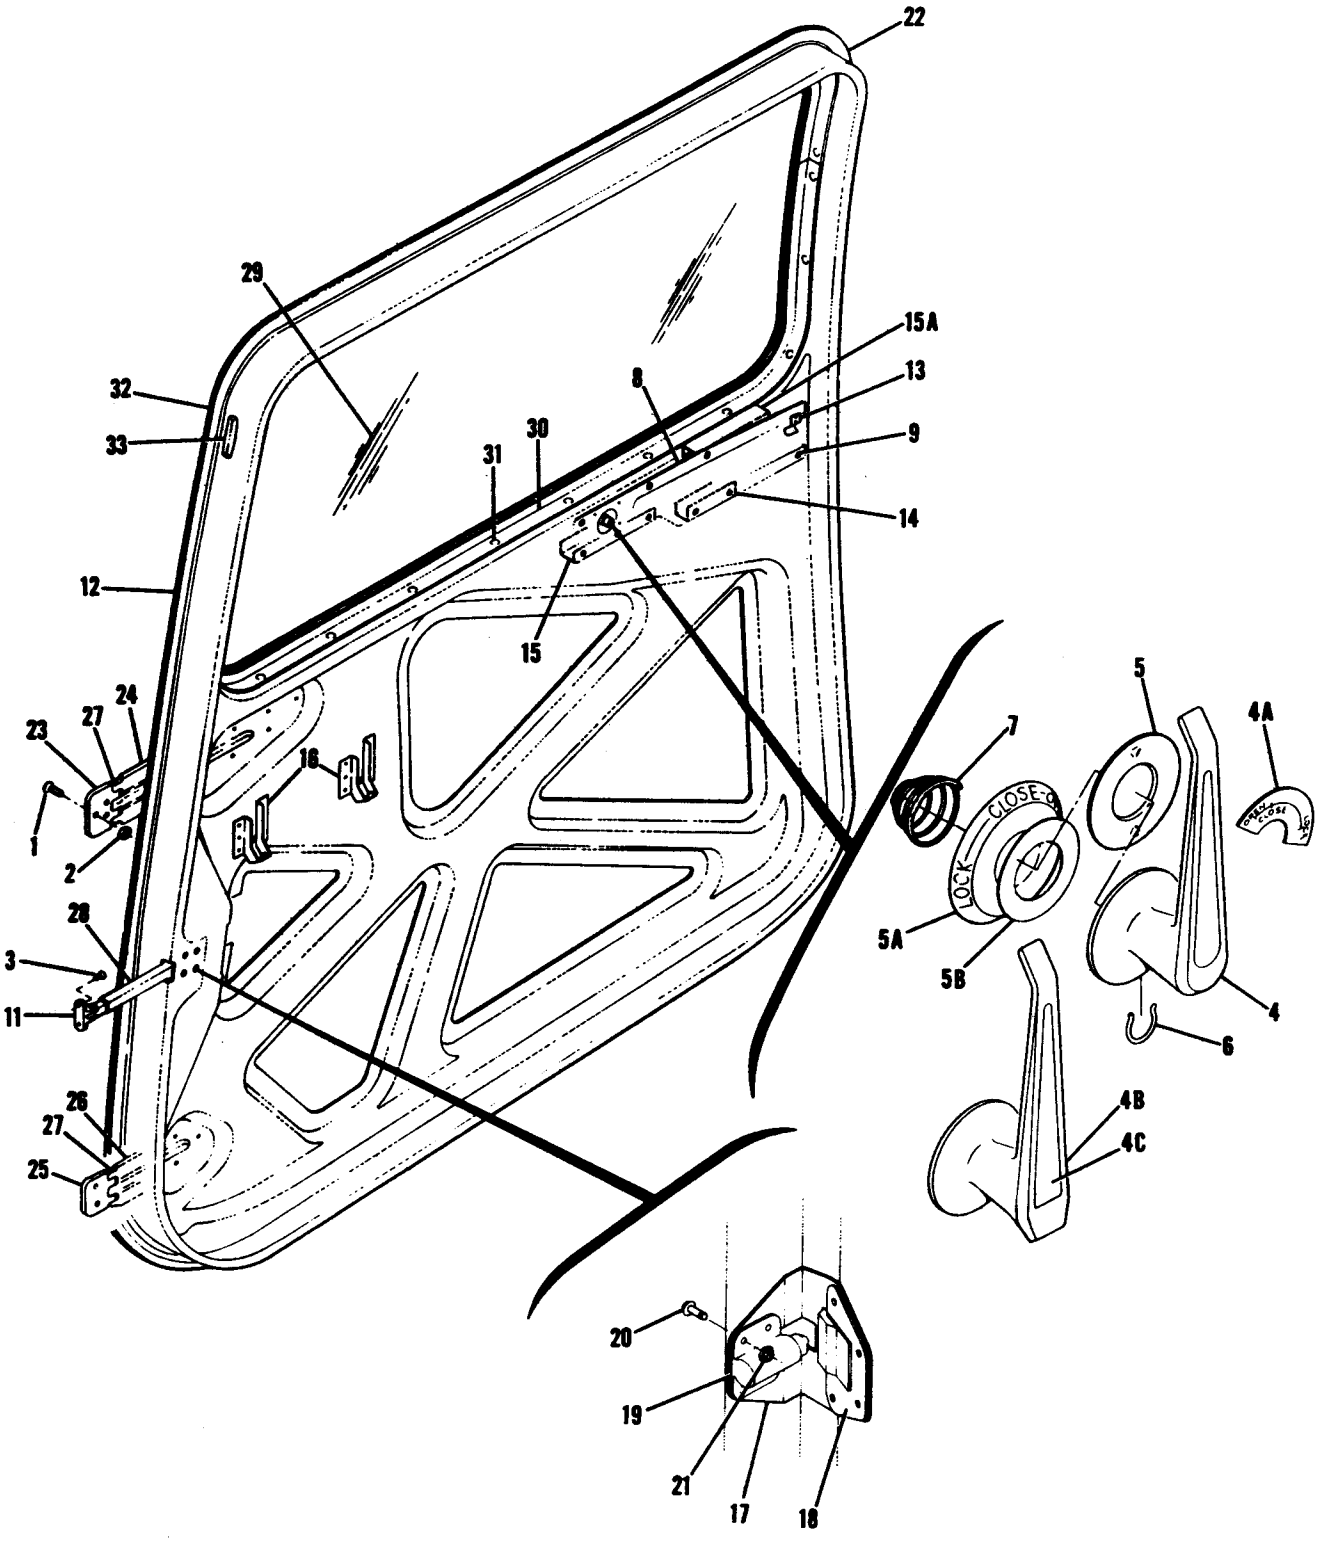

182 SERIAL 18253599 THRU 18261425

Figure 42. Right Cabin Door Assembly


FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
42 -22	S1346-1		SEAL 116.0 IN LG BULK ITEM REF S1346-1-116.0 --	1	X
	S1116-1		SEAL 144.0 IN LG BULK ITEM REF S1116-1-144.0 --	1	Y
-23	0711037-14		HINGE-UPPER STATIONARY ----------	1	
-24	0711037-16		HINGE-UPPER ----------	1	
-25	0711037-18		HINGE-LOWER STATIONARY ----------	1	
-26	0711037-20		HINGE-LOWER ----------	1	
-27	0711038-1		HINGE PIN ----------	2	
-28	0710626-12		ARM ASSEMBLY-DOOR STOP ----------	1	
-29	0717010-18		WINDOW-DOOR CLEAR ----------	1	AA
	0717010-16		WINDOW-DOOR TINTED SKYLANE ----------	1	A
-30	0717010-27		RETAINER-WINDOW ----------	1	
			ATTACHING PARTS		
-31	CR163-4-2		RIVET CR ----------	42	
			---*---		
-32	S1264-1-		SEAL 28.0 IN LG BULK ITEM REF S1264-1-28.0 ----	1	X
	S1441-1-	*	SEAL 12.0 IN LG BULK ITEM REF S1441-1-12.0 ----	1	X
-33	0710638-1		WEDGE-DOOR ----------	1	

NOTE. *THIS SEAL IS INSTALLED UNDER S1264-1-28

NOTE. #WHEN INITIALLY ORDERING THIS PART PRIOR TO SERIAL 18255121 ALSO ORDER ONE 0711653-2 HANDLE SHOWN ON FIG 43.

A---182 SERIAL 18253599 THRU 18261425
B---182 SERIAL 18253599 THRU 18254423
C---182 SERIAL 18254424 THRU 18256684
D---DELETED NEVER USED
E---182 SERIAL 18253599 THRU 18255029
F---182 SERIAL 18255030 THRU 18261425
G---182 SERIAL 18253599 THRU 18256684
H---182 SERIAL 18256685 THRU 18261425
J---182 SERIAL 18253599 THRU 18257934
A182 SERIAL A182-0001 THRU A182-0096
K---182 SERIAL 18257935 THRU 18261425
A182 SERIAL A182-0097 & ON
L---182 SERIAL 18253599 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
M---182 SERIAL 18256685 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
N---182 SERIAL 18258506 THRU 18261425
A182 SERIAL A182-0097 & ON
O---182 SERIAL 18256685 THRU 18259899
A182 SERIAL A182-0001 THRU A182-0116
P---182 SERIAL 18259900 THRU 18261425
A182 SERIAL A182-0117 & ON
Q---182 SERIAL 18260111 THRU 18261425
A182 SERIAL A182-0117 & ON
R---182 SERIAL 18254348 THRU 18261425
A182 SERIAL A182-0001 & ON
S---182 SERIAL 18260174 THRU 18261425
A182 SERIAL A182-0117 & ON
T---182 SERIAL 18258506 THRU 18260055
A182 SERIAL A182-0097 THRU A182-0116
U---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
V---182 SERIAL 18253599 THRU 18259899
A182 SERIAL A182-0001 THRU A182-0116
W---182 SERIAL 18258506 THRU 18260445
A182 SERIAL A182-0097 THRU A182-0116
X---182 SERIAL 18253599 THRU 18260446
A182 SERIAL A182-0001 THRU A182-0116
Y---182 SERIAL 18260446 THRU 18261425
A182 SERIAL A182-0117 & ON
Z---182 SERIAL 18260446 THRU 18260825
A182 SERIAL A182-0117 THRU A182-0136
AA---182 SERIAL 18253599 THRU 18260825
A182 SERIAL A182-0001 THRU A182-0136
AB---182 SERIAL 18253599 THRU 18261425
A182 SERIAL A182-0001 & ON

Door & Window (Cont)

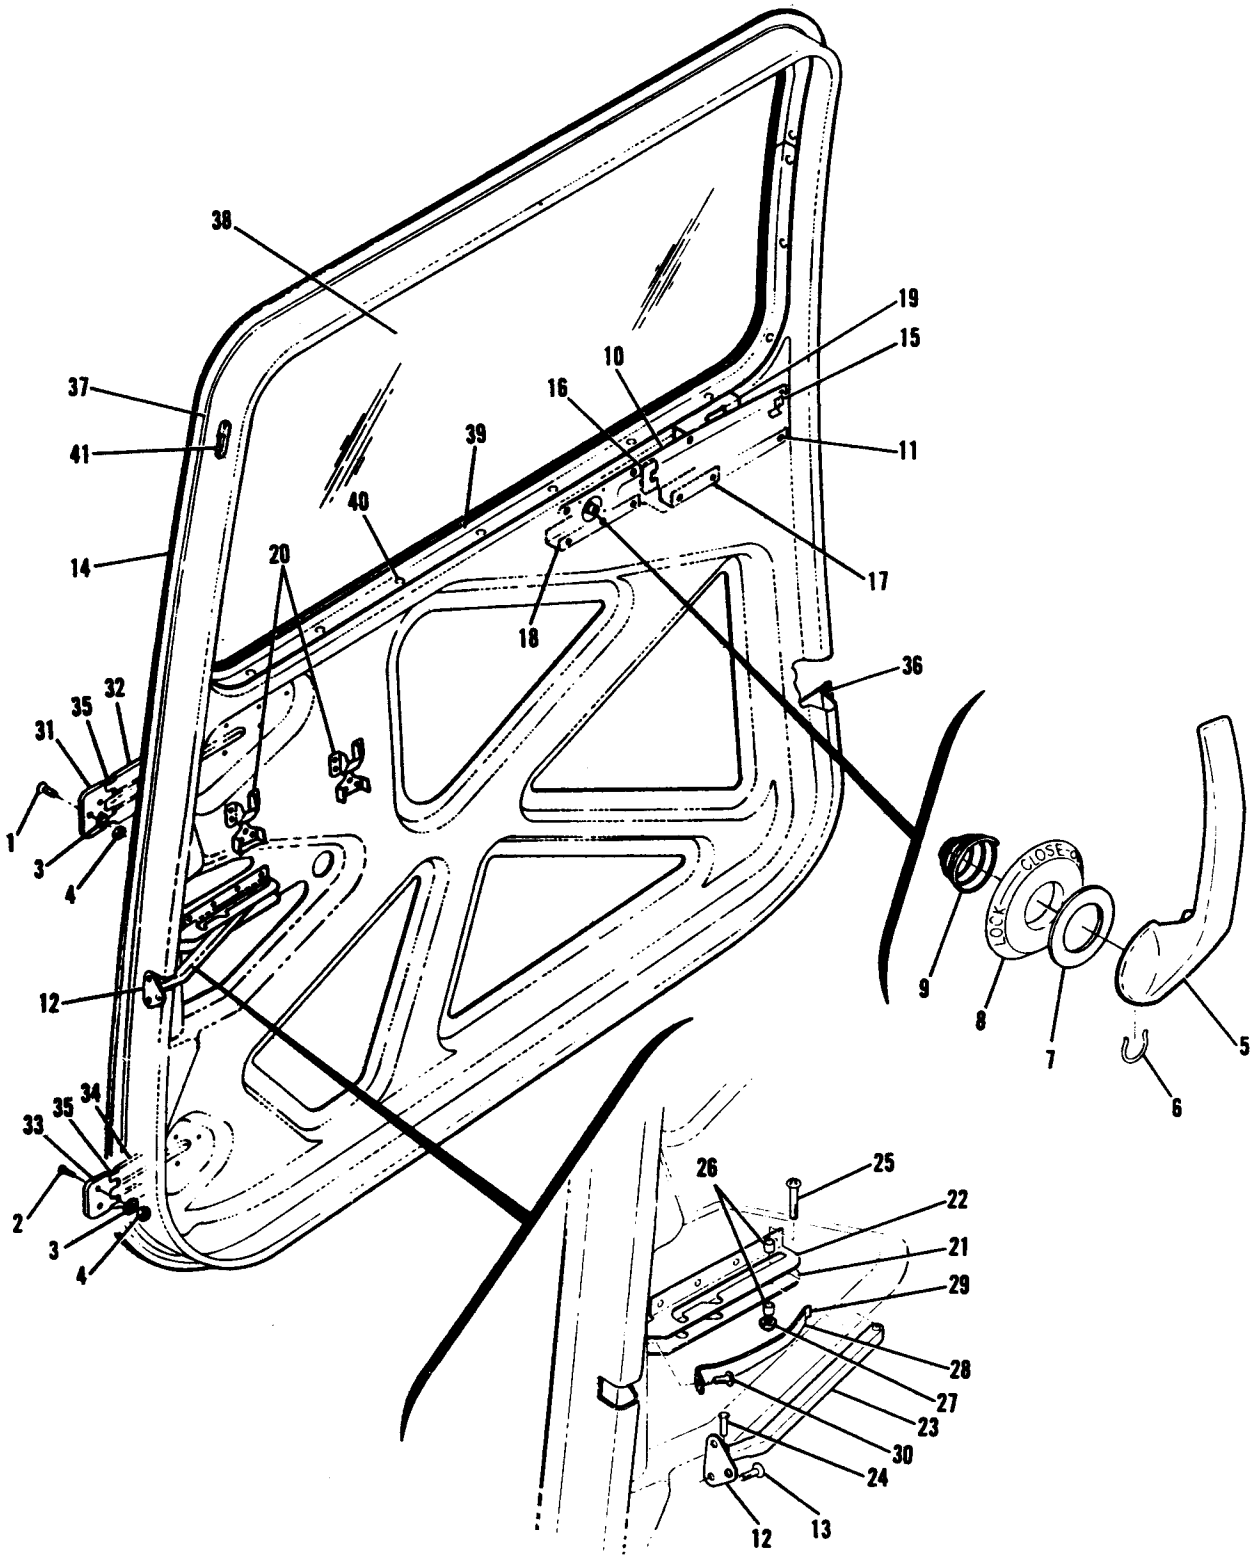

182 SERIAL 18261426 THRU 18262465


Figure 42A. Right Cabin Door Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
42A-		CABIN DOOR ASSEMBLY-RH	NP	A
		ATTACHING PARTS		
- 1	AN509-10R14	SCREW	3	
- 2	AN507-1032R12	SCREW	2	
- 3	AN960-10L	WASHER	5	
- 4	MS21044N3	NUT	5	
		---*---		
- 5	0517006-2	HANDLE-INSIDE DOOR	1	
- 6	0511189-1	CLIP	1	
- 7	1211836-1	WASHER	1	
- 8	1705015-2	PLACARD	1	
- 9	0413317-	SPRING	1	
-10	SEE FIG 43A	LATCH ASSY-REMOVABLE	1	
		ATTACHING PARTS		
-11	NAS220-5	SCREW	14	
	NAS696A08	NUTPLATE	1	
	NAS697A08	NUTPLATE	2	
		---*---		
-12	1213942-2	HINGE ASSY-DOOR STOP	1	
		ATTACHING PARTS		
-13	AN509-10R8	SCREW	3	
		---*---		
		STRUCTURE ASSY-CABIN DOOR RH	NP	
-14	1217037-9	SKIN-CABIN DOOR	1	
-15	0711034-1	STOP-CABIN DOOR HANDLE	1	
-16	1217035-1	RUB BLOCK	1	
-17	0711064-5	SUPPORT ASSY-DOOR LATCH	1	
	NAS696A08	NUTPLATE	2	
-18	0711065-1	SUPPORT ASSY-DOOR LATCH	1	
	NAS696A08	NUTPLATE	2	
	NAS697A08	NUTPLATE	1	
-19	0717010-24	BRACKET ASSY	1	
-20	0700684-1	SUPPORT ASSY-ARM REST	2	
	NAS696A3	NUTPLATE	1	
-21	1217038-1	BRACKET-CABIN DOOR STOP	1	
-22	1217038-2	BRACKET-CABIN DOOR STOP	1	
-23	1411206-7	ARM-CABIN DOOR STOP	1	
		ATTACHING PARTS		
-24	MS20615-4M10	RIVET	1	
		---*---		
-25	NAS220-16	SCREW	1	
-26	1411206-1	SPACER	2	
-27	NAS679A08	NUT	1	
-28	1411207-1	SPRING	1	
-29	1411207-2	SPRING	1	
		ATTACHING PARTS		
-30	AN525-832R7	SCREW	1	
		---*---		
-31	0711037-14	HINGE-UPPER STATIONARY	1	
-32	0711037-16	HINGE-UPPER	1	
-33	0711037-18	HINGE-LOWER STATIONARY	1	
-34	0711037-20	HINGE-LOWER	1	
-35	0711038-1	PIN-HINGE	2	
-36	S1441-2 *	SEAL 15.0 IN LG BK1 REF S1441-2-15.0	1	
-37	S1116-1	SEAL 160.0 IN LG BK1 REF S1116-1-160.0	1	
-38	0717010-16	WINDOW-DOOR TINTED	1	
-39	0717010-27	RETAINER-WINDOW	1	
		ATTACHING PARTS		
-40	CR163-4-2	RIVET CHERRY CY	21	
		---*---		
-41	0710638-1	WEDGE-DOOR	1	

NOTE. *THIS PART IS INSTALLED UNDER S1116-1-160

A---182 SERIAL 18261426 THRU 18262465

Door & Window (Cont)

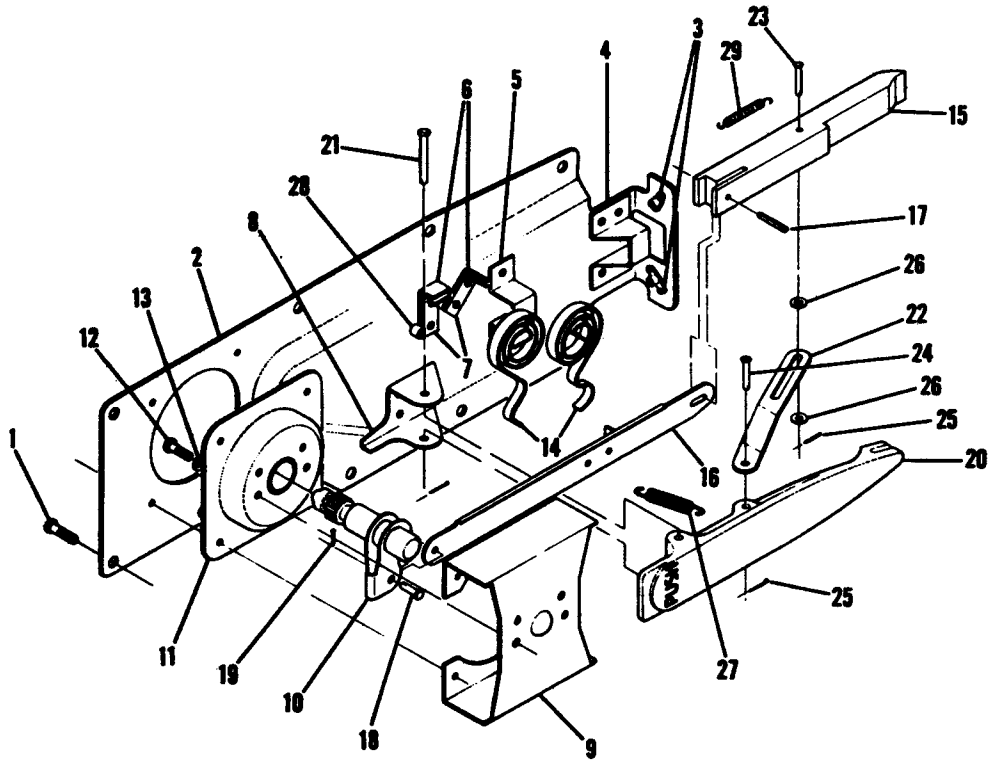


182 SERIAL 18253599 THRU 18256684

Figure 43. Cabin Door Latch Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
43 -	0711061-3	LATCH ASSEMBLY-CABIN DOOR LH	1	A
	0711061-4	LATCH ASSEMBLY-CABIN DOOR RH	1	A
	0711061-6	LATCH ASSEMBLY-CABIN DOOR LH	1	B
	0711061-5	LATCH ASSEMBLY-CABIN DOOR RH	1	B
		ATTACHING PARTS		
- 1	NAS220-5	SCREW	12	
		---*---		
- 2	0711062-1	BASE PLATE-LATCH LH	1	
	0711062-2	BASE PLATE-LATCH RH	1	
- 3	NAS697A08K	NUTPLATE	2	
- 4	0711018-27	BRACKET	1	
- 5	0711132-1	BRACKET LH	1	
	0711132-2	BRACKET RH	1	
- 6	0711018-19	BRACKET-SPRING	2	
- 7	0711018-20	BRACKET-SPRING	2	
- 8	0711018-25	BRACKET-HANDLE	1	
- 9	0711063-1	BRACKET ASSEMBLY-DOOR LATCH LH	1	
	0711063-2	BRACKET ASSEMBLY-DOOR LATCH RH	1	
-10	0711029-1	SHAFT ASSEMBLY-DOOR LATCH LH	1	
	0711029-2	SHAFT ASSEMBLY-DOOR LATCH RH	1	
-11	0413195-5	PLATE ASSEMBLY-BEARING	1	
		ATTACHING PARTS		
-12	AN520-10R9	SCREW	2	
-13	AN936810	WASHER	2	
		---*---		
-14	0711019-1	SPRING-DOOR LATCH	2	
-15	0711017-1	BOLT-DOOR LATCH	1	
-16	0711018-36	STRAP ASSEMBLY-LATCH LH	1	
	0711018-24	STRAP ASSEMBLY-LATCH RH	1	
		ATTACHING PARTS		
-17	NAS561-4-9	ROLL PIN EN	1	
-18	MS20392-1C7	PIN	1	
-19	MS24665-132	PIN-COTTER	1	
		---*---		
-20	0711653-1	HANDLE-LATCH	1	A
	0711653-2	HANDLE-LATCH	1	B
		ATTACHING PARTS		
-21	MS20392-1C33	PIN	3	
		---*---		
-22	0711018-32	PULL BAR-LATCH LH	1	
	0711018-33	PULL BAR-LATCH RH	1	
		ATTACHING PARTS		
-23	MS20392-1C23	PIN	1	
-24	AN507-632R12	SCREW	1	
-25	MS24665-132	PIN-COTTER	2	
-26	NAS70A-128-313	WASHER	3	
		---*---		
-27	0711016-1	SPRING-HANDLE	1	
-28	0711018-22	STOP	1	
-29	0711126-1	SPRING	1	
		A---182 SERIAL 18253599 THRU 18255120		
		B---182 SERIAL 18255121 THRU 18256684		

Door & Window (Cont)

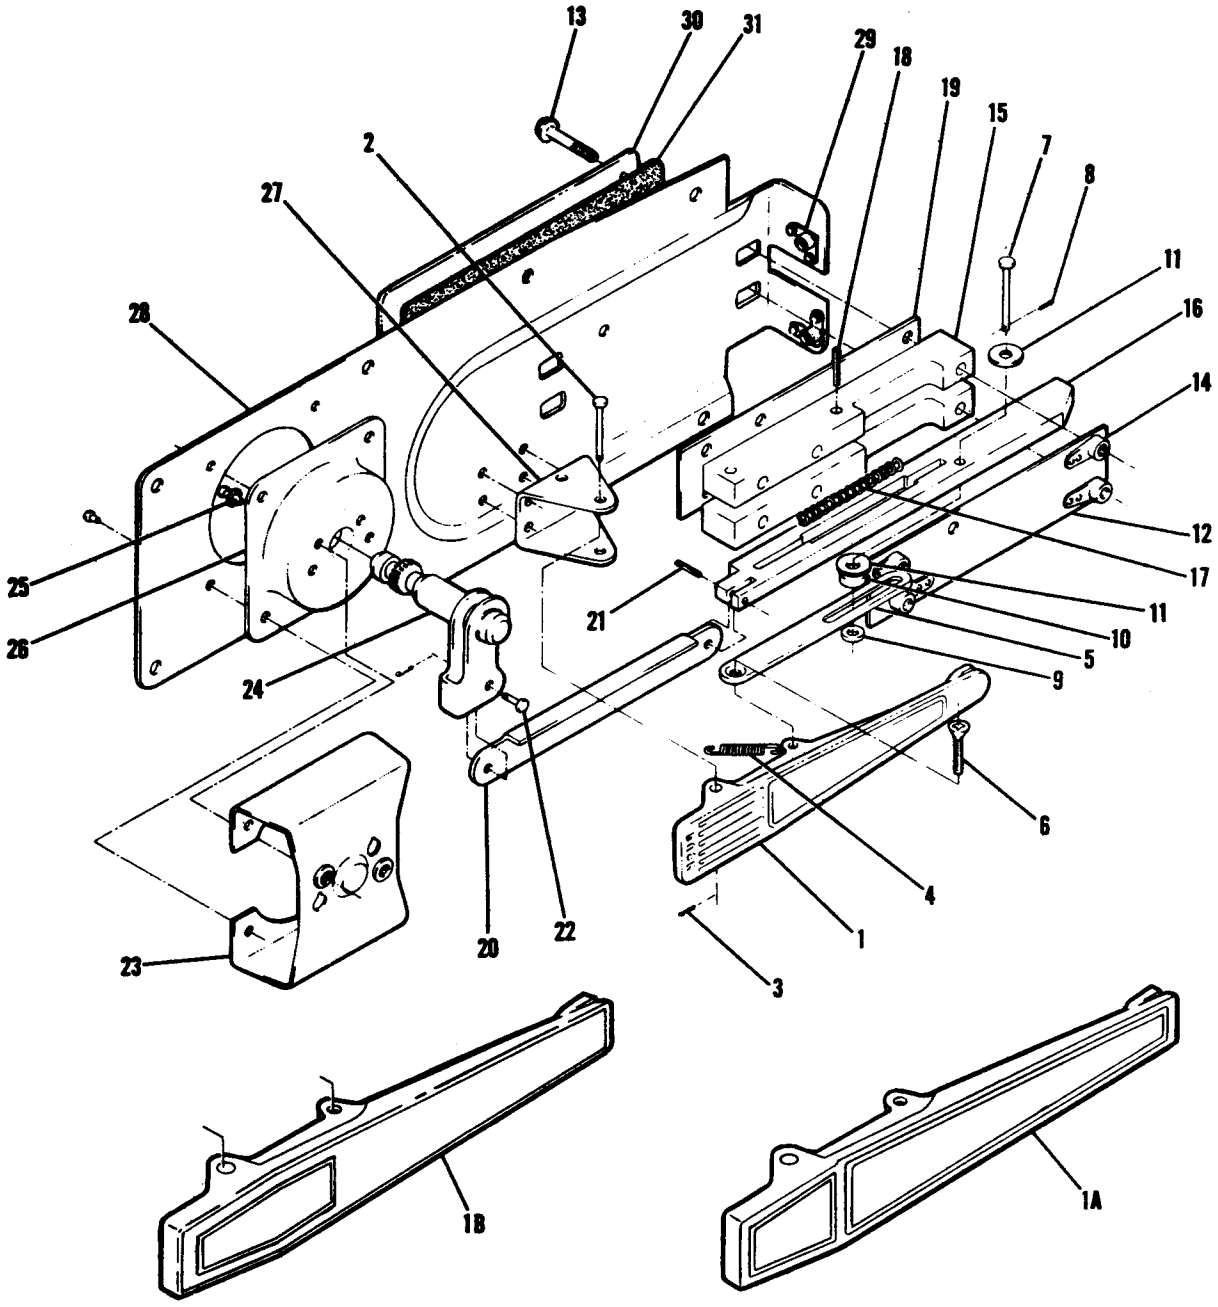

182 SERIAL 18256685 THRU 18262465

Figure 43A. Cabin Door Latch Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
43A-	1511205-6	LATCH ASSEMBLY-CABIN DOOR RH WHEN EXHAUSTED USE 1511205-12-	1	A
	1511205-12	LATCH ASSEMBLY-CABIN DOOR RH	1	C
	1511205-14	LATCH ASSEMBLY-CABIN DOOR RH	1	D
	1511205-17	LATCH ASSEMBLY-CABIN DOOR RH	1	F
	1511205-7	LATCH ASSEMBLY-CABIN DOOR LH WHEN EXHAUSTED USE 1511205-11-	1	A
	1511205-11	LATCH ASSEMBLY-CABIN DOOR LH	1	C
	1511205-13	LATCH ASSEMBLY-CABIN DOOR LH	1	D
	1511205-16	LATCH ASSEMBLY-CABIN DOOR LH	1	F
- 1	0711653-3	HANDLE-DOOR OUTSIDE	1	E
- 1A	1217005-2	HANDLE-DOOR OUTSIDE	1	D
- 1B	0517003-2	HANDLE-DOOR OUTSIDE	1	F
		ATTACHING PARTS		
- 2	MS20392-1C33	PIN	1	
- 3	MS24665-132	COTTER PIN	1	
		---*---		
- 4	0711788-1	SPRING-DOOR HANDLE	1	
- 5	1511209-12	PULL BAR-DOOR HANDLE	1	
		ATTACHING PARTS		
- 6	AN507-632R12	SCREW	1	
- 7	MS20392-2C45	PIN	1	
- 8	MS24665-132	COTTER PIN	1	
- 9	AN960D10L	WASHER	1	
-10	NAS43DD3-12	SPACER	1	
-11	1511209-8	WASHER	2	
		---*---		
-12	1511206-20	BOLT GUIDE-TOP	1	
		ATTACHING PARTS		
-13	AN525-10R18	SCREW	4	
		---*---		
-14	NAS682A3	NUTPLATE	3	
	NAS698A3	NUTPLATE	1	
-15	1511206-11	BOLT GUIDE-SIDE	2	
-16	1511206-13	BOLT ASSEMBLY-LH	1	
	1511206-14	BOLT ASSEMBLY-RH	1	
		ATTACHING PARTS		
-17	1511207-1	SPRING	1	
-18	NAS561P4-15	ROLL PIN	2	
		---*---		
-19	1511206-4	BOLT GUIDE-BASE	1	
-20	1511209-10	PUSH ROD-LH	1	
	1511209-11	PUSH ROD-RH	1	
		ATTACHING PARTS		
-21	NAS561P4-6	ROLL PIN	1	
-22	MS20392-1C7	PIN	1	
	MS24665-132	COTTER PIN	1	
		---*---		
-23	0711063-6	BRACKET ASSEMBLY	1	
-24	1511212-6	SHAFT ASSEMBLY-LH	1	
	1511212-5	SHAFT ASSEMBLY-RH	1	
-25	AN520-10R9	SCREW	2	
-26	0413195-5	PLATE ASSEMBLY	1	
-27	1511209-1	BRACKET	1	
-28	1511208-12	PLATE ASSEMBLY-LH	1	
	1511208-13	PLATE ASSEMBLY-RH	1	
-29	NAS698A08K	NUTPLATE	2	
-30	1511208-16	SHIM	1	B
-31	1511208-17	BACKING-SHIM	1	B

A---182 SERIAL 18256685 THRU 18257173
A182 SERIAL A182-0001 THRU A182-0012
B---182 SERIAL 18257174 THRU 18262465
A182 SERIAL A182-0013 & ON
C---182 SERIAL 18257174 THRU 18258505
A182 SERIAL A182-0013 THRU A182-0096
D---182 SERIAL 18258506 THRU 18260055
A182 SERIAL A182-0097 THRU A182-0116
E---182 SERIAL 18256685 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
F---182 SERIAL 18260056 THRU 18262465
A182 SERIAL A182-0117 & ON

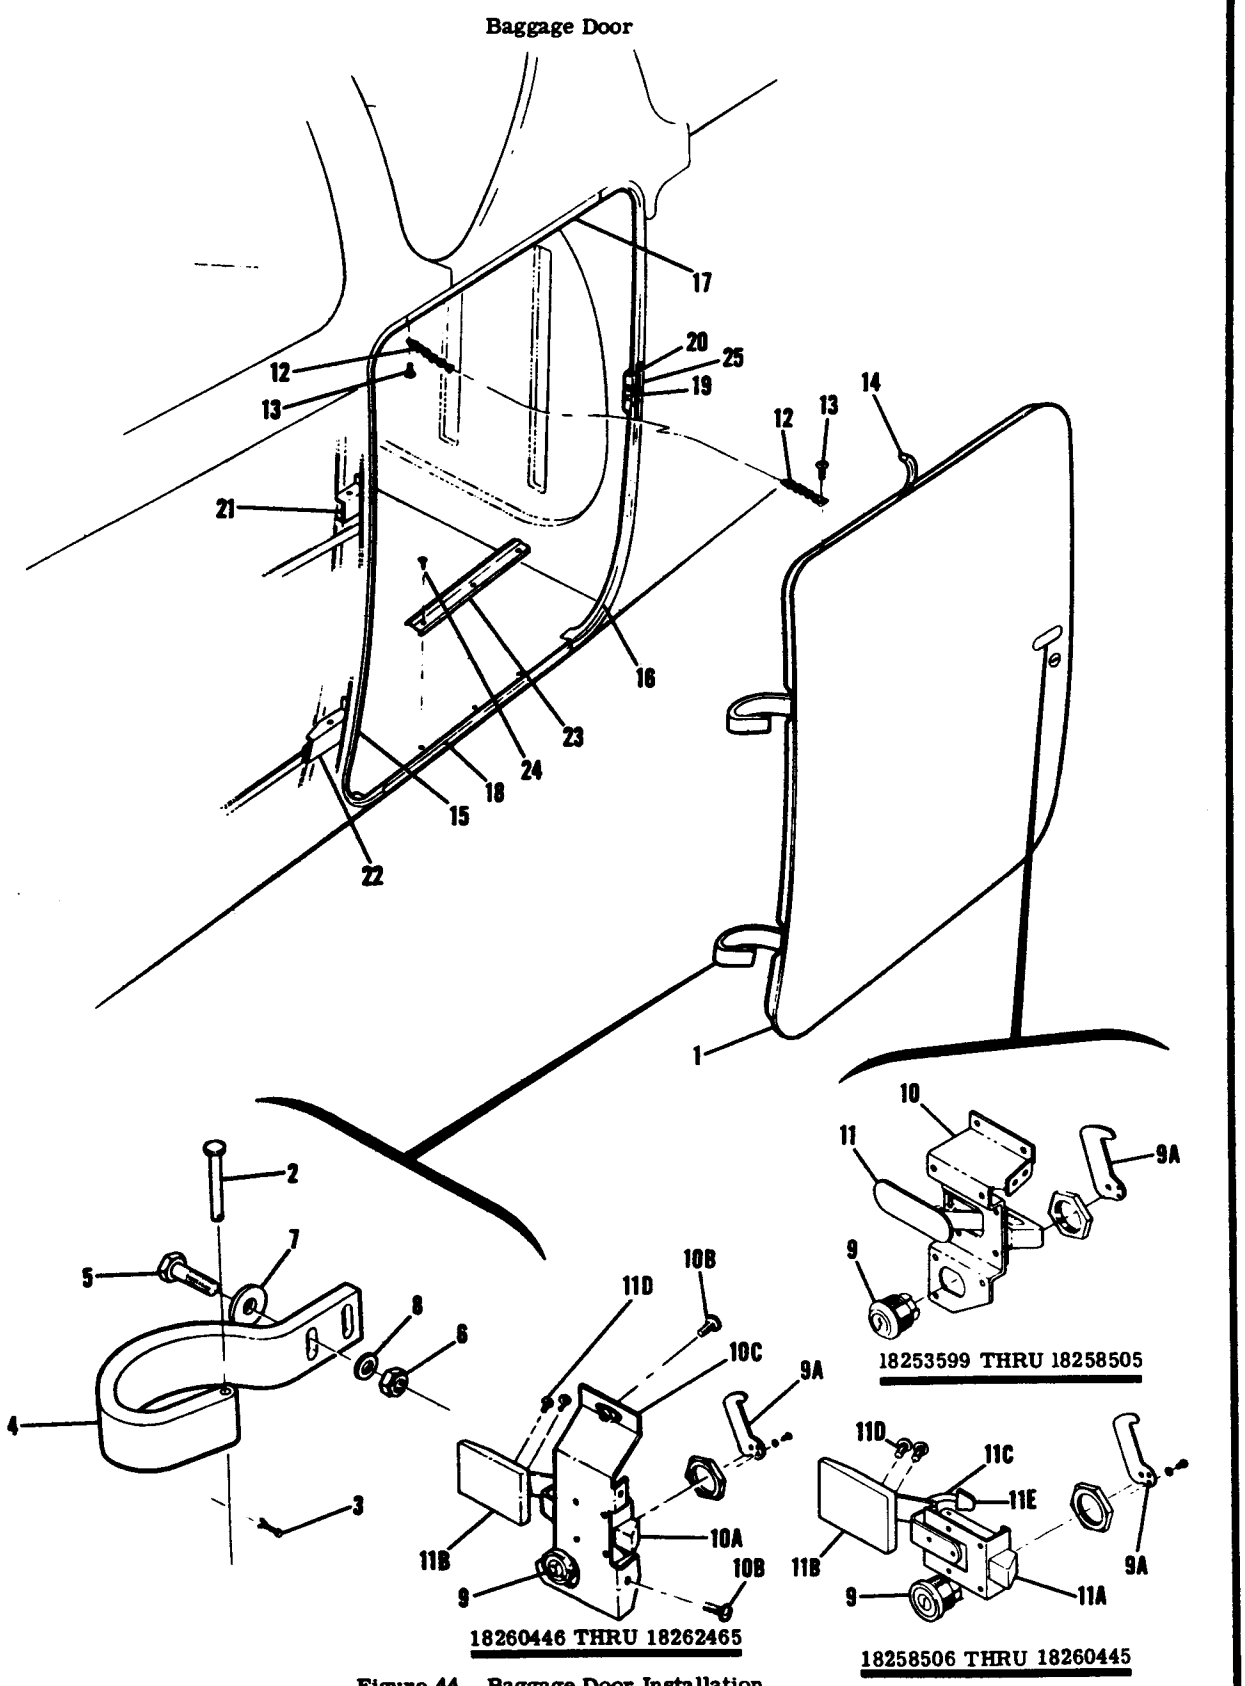



Figure 44. Baggage Door Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
44 -		BAGGAGE DOOR INSTALLATION-FUSELAGE	NP	
- 1	0711629-1	DOOR ASSEMBLY-BAGGAGE	1	D
	0711629-5	DOOR ASSEMBLY-BAGGAGE WEU 0711791-1	1	F
	0711791-1	DOOR ASSEMBLY-BAGGAGE	1	G
		ATTACHING PARTS		
- 2	MS20392-1C37	PIN-CLEVIS	2	
- 3	MS24665-151	PIN-COTTER	2	
		---*---		
- 4	0711643-1	HINGE	2	
		ATTACHING PARTS		
- 5	AN3-6A	BOLT	2	
- 6	MS21044N3	NUT	2	
- 7	AN970-3	WASHER	2	
- 8	AN960-10	WASHER	2	
		---*---		
- 9	0413323-7	LOCK ASSEMBLY-BAGGAGE DOOR WHEN EXHAUSTED USE C253001-0101	1	B
	C253001-0101	LOCK ASSEMBLY-BAGGAGE DOOR	1	C
- 9A	0711111-1	CAM-DOOR LOCK	1	
-10	0711101-21	BRACKET-BAGGAGE DOOR LATCH	1	D
	0711708-1	BRACKET-BAGGAGE DOOR LATCH	1	F
-10A	0711790-1	SUPPORT & LATCH ASSY	1	G
		ATTACHING PARTS		
-10B	AN525-832R7	SCREW	3	G
		---*---		
-10C	0711790-2	SUPPORT ASSY-LATCH	1	G
	NAS697A08	NUTPLATE	3	G
-11	S1359-1	LATCH ASSEMBLY	1	D
-11A	S1359-6	LATCH ASSEMBLY	1	H
	S1359-7	LATCH ASSEMBLY	1	J
-11B	0711705-1	HANDLE-LATCH	1	E
-11C	1211252-1	HANDLE-LATCH INSIDE	1	F
		ATTACHING PARTS		
-11D	S1931-8	SCREW	1	E
	0711709-1	SPACER	1	E
		---*---		
-11E	0813526-6	KNOB	1	F
-12	S1194-1-17	CHAIN	1	
		ATTACHING PARTS		
-13	AN507-832R6	SCREW	2	
	NAS680A08	NUTPLATE	1	
		---*---		
-14	S1116-1-	SEAL XX IN LG BULK ITEM REF S-1116-1	1	
-15	0711618-1	DOOR JAMB-FORWARD	1	K
	0711618-3	DOOR JAMB-FORWARD	1	J
-16	0711618-2	DOOR JAMB-AFT	1	K
	0711618-4	DOOR JAMB-AFT	1	J
-17	0711619-1	DOOR SILL ASSEMBLY-UPPER	1	L
	0711673-1	DOOR SILL ASSEMBLY-UPPER	1	M
	NAS680A08	NUTPLATE	1	
-18	0711620-1	DOOR SILL-LOWER	1	
-19	0311319-1	PLATE-STRIKE	1	
		ATTACHING PARTS		
	0311319-2	SHIM	AR	
	AN515-8R8	SCREW	2	
		---*---		
-20	0711651-1	BRACKET ASSEMBLY-STRIKE PLATE	1	
	NAS696A08	NUTPLATE	2	
-21	0711628-1	HINGE BRACKET ASSEMBLY-UPPER	1	
-22	0711628-2	HINGE BRACKET-LOWER	1	
-23	0311623-1	STRIP-UPHOLSTERY	1	
		ATTACHING PARTS		
-24	S1021Z4-6	SCREW	3	
		---*---		
-25	S1441-1-	SEAL 3 IN LG BULK ITEM REF S-1441-1-3.0	1	A

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
44 -		A---182 SERIAL 18253960 THRU 18262465 A182 SERIAL A182-0001 & ON B---182 SERIAL 18253599 THRU 18257625 A182 SERIAL A182-0001 THRU A182-0056 C---182 SERIAL 18257626 THRU 18262465 A182 SERIAL A182-0057 & ON D---182 SERIAL 18253599 THRU 18258505 A182 SERIAL A182-0001 THRU A182-0096 E---182 SERIAL 18258506 THRU 18262465 A182 SERIAL A182-0097 & ON F---182 SERIAL 18258506 THRU 18260445 A182 SERIAL A182-0097 & ON G---182 SERIAL 18260446 THRU 18262465 H---182 SERIAL 18258506 THRU 18260445 A182 SERIAL A182-0097 THRU A182-0116 J---182 SERIAL 18260446 THRU 18262465 A182 SERIAL A182-0117 & ON K---182 SERIAL 18253599 THRU 18260445 A182 SERIAL A182-0001 THRU A182-0116 L---182 SERIAL 18253599 THRU 18255058 M---182 SERIAL 18255059 THRU 18262465 A182 SERIAL A182-0001 & ON		

Upholstery

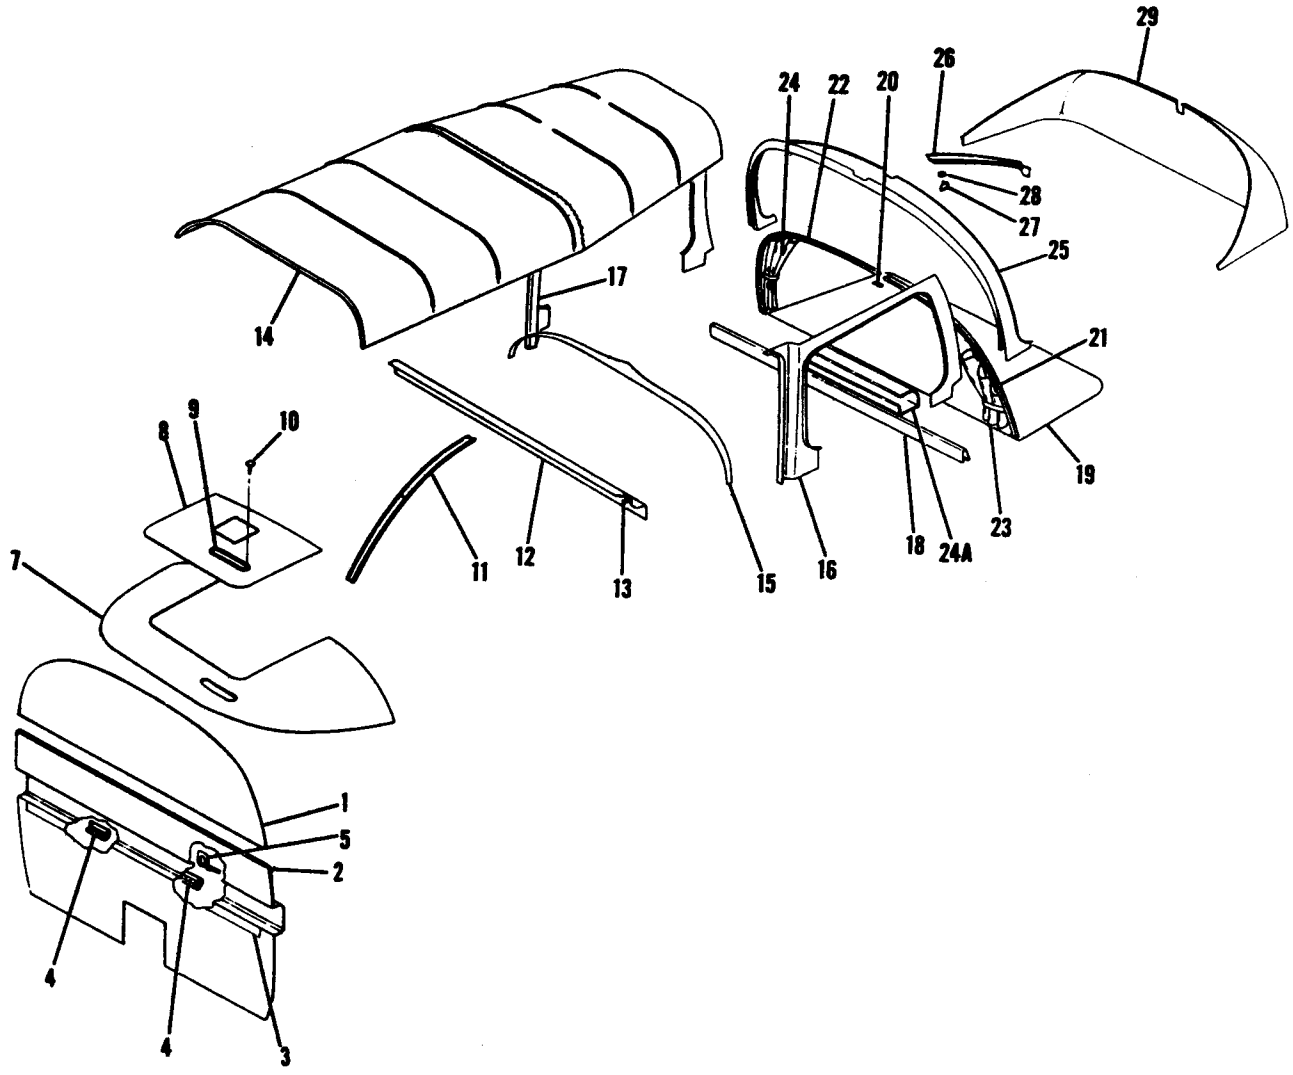

182 SERIAL 18253599 THRU 18254423

Figure 45. Cabin Top & Firewall Upholstery Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
45 -		CABIN TOP & FIREWALL UPHOLSTERY INSTALLATION	NP	C
- 1	0700762-27	SOUND PROOFING ASSY-UPPER	1	
- 2	0700762-26	SOUNDPROOFING ASSY-LOWER	1	
		ATTACHING PARTS		
	S1023A8-8	SCREW	10	
	S1067C1	WASHER	10	
		---*---		
- 3	0700103-131	STRIP	2	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	2	
		---*---		
- 4	0713019-86	CABIN AIR SHIELD	2	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	4	
		---*---		
- 5	0700653-1	CABLE SHIELD	1	
		ATTACHING PARTS		
	S1021Z6-8	SCREW	2	
		---*---		
- 6		DELETED, NEVER USED		
- 7	0700654-6	COVER-COWL DECK	1	
- 8	0700654-7	ACCESS COVER-RADIO	1	
- 9	0713253-1	DEFLECTOR PLATE-DEFROST	1	
		ATTACHING PARTS		
-10	S1021Z4-6B	SCREW	4	
		---*---		
-11	0700664-1	COVER-WINDSHIELD CENTER STRIP	1	A
	0700664-3	COVER-WINDSHIELD CENTER STRIP	1	B
-12	0511130-1	SHIELD-FRONT SPAR	1	
		ATTACHING PARTS		
-13	49265-F-938	STUD UC	3	
		---*---		
-14	0700657-1	HEADLINER ASSEMBLY	1	
		ATTACHING PARTS		
	S1021Z4-6	SCREW	8	
		---*---		
-15	0700667-1	TIARA ASSEMBLY	1	
		ATTACHING PARTS		
	S1023Z4-8C	SCREW	4	
		---*---		
-16	0700655-9-273	COVER-SIDE WINDOW FRAME LH	1	
-17	0700655-10	COVER-SIDE WINDOW FRAME RH	1	
		ATTACHING PARTS		
	S1247-1E	SEAL	AR	
		---*---		
-18	0700666-1	COVER-BAGGAGE SHELF EDGE	1	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	2	
		---*---		
-19	0700654-5	COVER-BAGGAGE SHELF	1	
	0700677-1	COVER-BAGGAGE SHELF ALTERNATE	1	
-20	0700665-3	TRACK RETAINER-CURTAIN	1	
-21	0700665-1	TRACK ASSEMBLY-CURTAIN LH	1	
-22	0700665-2	TRACK ASSEMBLY-CURTAIN RH	1	
-23	0700668-3	CURTAIN ASSEMBLY-LH	1	
-24	0700668-4	CURTAIN ASSEMBLY-RH	1	
-24A	0700671-1	RECEPTACLE-CURTAIN STORAGE	1	
-25	0700655-11	AFT WINDOW MOULDING	1	
	0700655-12	AFT WINDOW MOULDING USED WITH CURTAIN	1	
		ATTACHING PARTS		
	S1247-1W	SEAL	AR	
		---*---		


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
45 -26	0700655-13	COVER-REAR WINDOW CENTER POST	1	
-27	S1430-1	HANGER HOOK	1	
-28	0500010-4	WASHER	1	
-29	0700655-14	WALL PANEL-BAGGAGE SHELF	1	
		ATTACHING PARTS		
	S1247-1E	SEAL	AR	
		---*---		
		A---182 SERIAL 18253599 THRU 18253834		
		B---182 SERIAL 18253835 THRU 18254423		
		C---182 SERIAL 18253599 THRU 18254423		

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
45A-			CABIN TOP & FIREWALL UPHOLSTERY INSTALLATION	NP	A
- 1	0700762-27		SOUNDPROOFING ASSY-UPPER	1	
- 2	0700762-26		SOUNDPROOFING ASSY-LOWER	1	
			ATTACHING PARTS		
	S1023A8-8		SCREW	10	
	S1067C1		WASHER	10	
			---*---		
- 3	0700103-131		STRIP	2	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	2	
			---*---		
- 4	0713019-86		CABIN AIR SHIELD	2	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	4	
			---*---		
- 5	0700653-1		CABLE SHIELD	1	
			ATTACHING PARTS		
	S1021Z6-8		SCREW	2	
			---*---		
- 6	0700654-6		COWL DECK COVER	1	F
	0700654-20		COWL DECK COVER	1	J
- 6A	0700654-21	#	COWL DECK COVER ASSEMBLY	1	K
	0700694-12	¤	COWL DECK COVER ASSEMBLY	1	L
- 7	0700654-7		ACCESS COVER-RADIO	1	D
	0700654-18		ACCESS COVER-RADIO	1	E
- 7A	0713847-4		COVER ASSEMBLY-INSPECTION OPENING	1	L
	0713847-12		COVER ASSEMBLY-INSPECTION OPENING	1	Q
			ATTACHING PARTS		
- 7B	S1021Z8-8B		SCREW	16	L
			---*---		
- 8	0713253-1		DEFLECTOR PLATE-DEFROST	1	
			ATTACHING PARTS		
- 9	S1021Z4-6B		SCREW	4	
			---*---		
-10	0700664-3		COVER-WINDSHIELD CENTER STRIP	1	
-11	0511130-1		SHIELD-FRONT SPAR	1	F
	0511130-2		SHIELD-FRONT SPAR	1	G
			ATTACHING PARTS		
-12	49265-F-938		STUD UC	3	
			---*---		
-13	0700657-1		HEADLINER ASSEMBLY	1	B
	0700657-9		HEADLINER ASSEMBLY	1	C
			ATTACHING PARTS		
	S1021Z4-6		SCREW	8	
			---*---		
-14	0700667-1		TIARA ASSEMBLY	1	
			ATTACHING PARTS		
	S1023Z4-8C		SCREW	4	
			---*---		
-15	0700655-15-434		COVER-SIDE WINDOW FRAME LH	1	B
-15A	0700702-15-434		COVER-SIDE WINDOW FRAME LH	1	H
	0700702-15	¤	COVER-SIDE WINDOW FRAME LH	1	M
	0715009-1	¤	COVER-SIDE WINDOW FRAME LH	1	R
	0715009-5	¤	COVER-SIDE WINDOW FRAME LH	1	S
-16	0700655-16		COVER-SIDE WINDOW FRAME RH	1	B
	0700702-16		COVER-SIDE WINDOW FRAME RH	1	H
	0700702-16	¤	COVER-SIDE WINDOW FRAME RH	1	M
	0715009-2	¤	COVER-SIDE WINDOW FRAME RH	1	R
	0715009-6	¤	COVER-SIDE WINDOW FRAME RH	1	S
			ATTACHING PARTS		
	S1247-1K		SEAL WHEN EXHAUSTED USE S1948-2	AR	O
	S1948-2		SEAL	AR	P
			---*---		
-17	0711669-1		BAGGAGE SHELF-REMOVABLE	1	B
	0711682-1		BAGGAGE SHELF	1	C
			ATTACHING PARTS		
-18	H323-3-1-1		PLUNGER	6	
	H559-3-1		GROMMET	6	
			---*---		
-19	0700665-3		TRACK RETAINER-CURTAIN	1	B
-20	0700665-7		TRACK ASSEMBLY-CURTAIN LH	1	B
-21	0700665-8		TRACK ASSEMBLY-CURTAIN RH	1	B
-22	0700668-11		CURTAIN ASSEMBLY-LH	1	B
-23	0700668-10		CURTAIN ASSEMBLY-RH	1	B
	0700650-5		RETAINER-CURTAIN	2	B

CONTINUED ON NEXT PAGE

Upholstery (Cont)

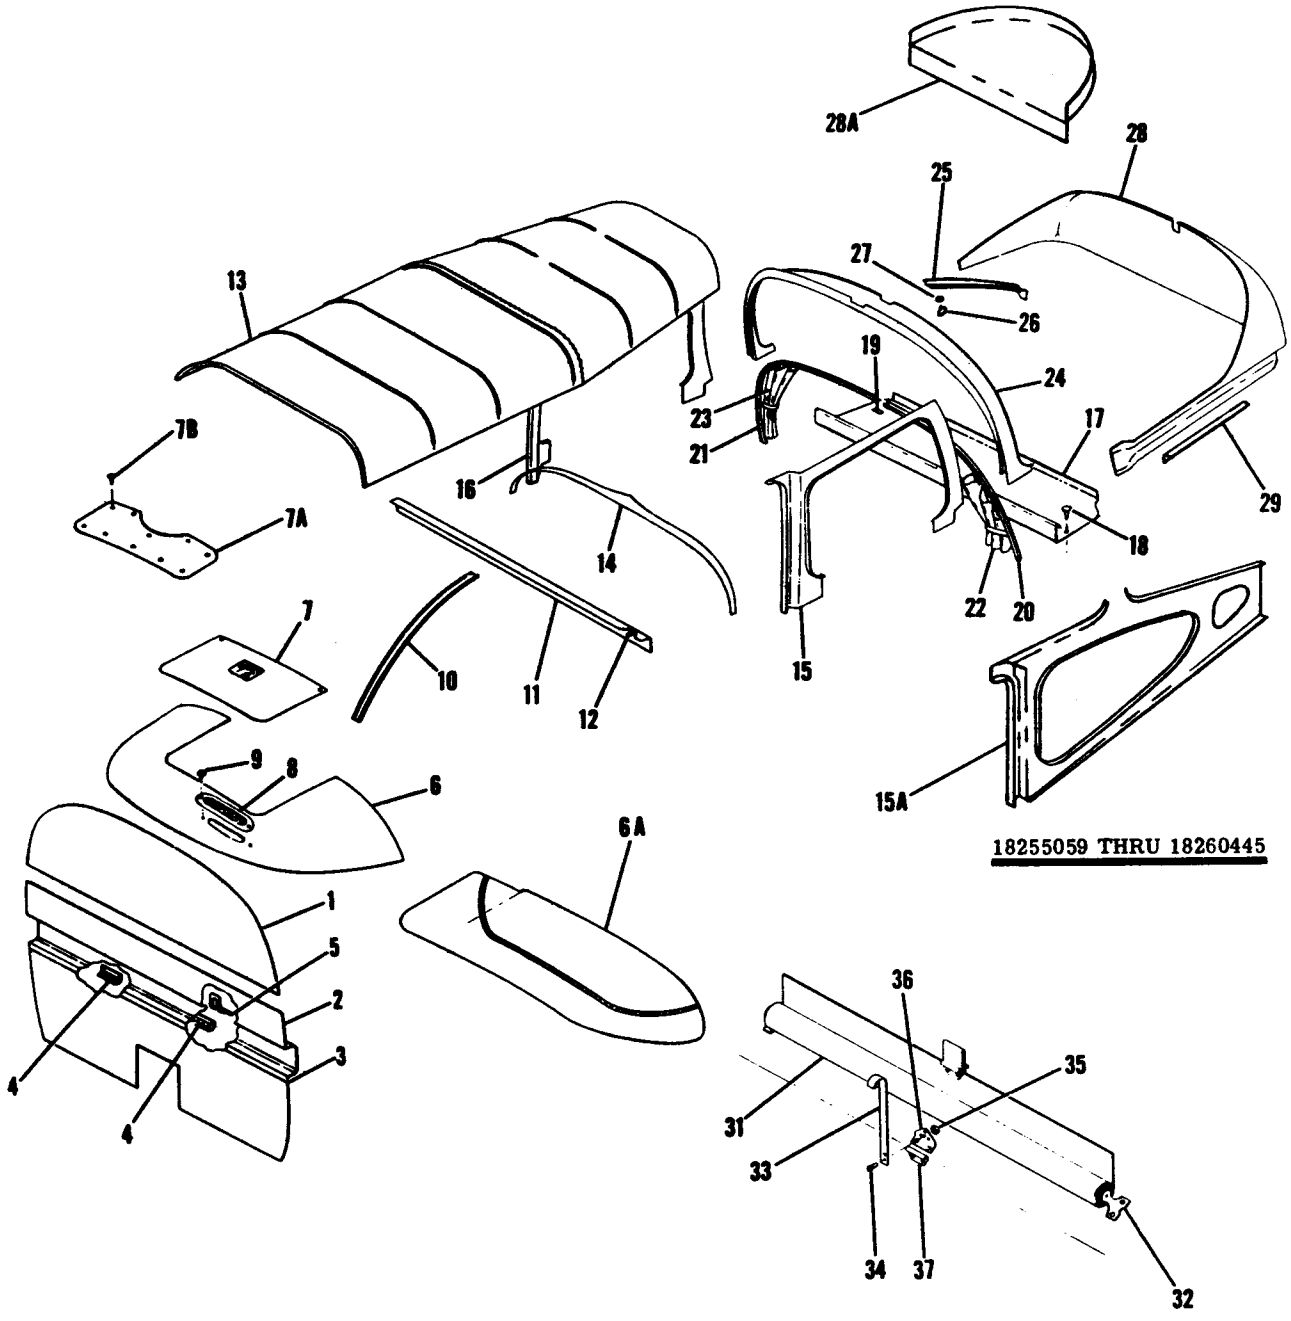

18255059 THRU 18260445

A182 SERIAL A182-0001 THRU A182-0136
182 SERIAL 18254424 THRU 18260445

Figure 45A. Cabin Top & Firewall Upholstery Installation


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
45A-24	0700655-26		AFT WINDOW MOULDING USED WITH CURTAIN	1	B
	0700702-12		AFT WINDOW MOULDING	1	H
	0700702-12	¤	AFT WINDOW MOULDING	1	M
	0715010-1	¤	AFT WINDOW MOULDING	1	N
			ATTACHING PARTS		
	S1247-1K		SEAL WHEN EXHAUSTED USE S1948-1	AR	O
	S1948-1		SEAL	AR	P
			---*---		
-25	0700655-21		COVER-REAR WINDOW CENTER POST	1	B
-26	S1430-1		HANGER HOOK	1	B
	S1430-2		HANGER-COAT HOOK	1	C
-27	0500010-4		WASHER	1	
-28	0700655-20		WALL PANEL-BAGGAGE SHELF	1	B
-28A	0700702-11		PANEL-CANTED	1	H
	0700702-11	¤	PANEL-CANTED	1	G
			ATTACHING PARTS		
	S1247-1K		SEAL WHEN EXHAUSTED USE S1948-2	AR	O
	S1948-1		SEAL	AR	P
-29	0500210-47		RETAINER-WALL PANEL	1	B
			---*---		
-30			DELETED-NOT AVAILABLE		
-31	0700707-2		ROLLER CURTAIN ASSEMBLY	1	H
	0700707-11		ROLLER CURTAIN ASSEMBLY	1	G
-32	1200612-5		BRACKET KIT-CURTAIN	1	C
	AN515-4R5		SCREW	4	C
	NAS679A04		NUT	4	C
			---*---		
-33	0700707-6		SUPPORT ASSEMBLY CURTAIN	1	C
			ATTACHING PARTS		
-34	AN515-4R10		SCREW	1	C
-35	NAS679A04		NUT	1	C
-35A	0700707-8		SPRING	1	C
			---*---		
-36	0700707-5		BRACKET-CURTAIN SUPPORT	1	C
			ATTACHING PARTS		
	S1021A4-6C		SCREW	2	C
			---*---		
-37	1200612-6		BRACKET-CURTAIN HOOK	2	C
			ATTACHING PARTS		
	S1021Z4-6C		SCREW	2	C
	NAS446-1-3		NUT	2	C
			---*---		

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XII.

A---182 SERIAL 18254424 THRU 18260445
A182 SERIAL A182-0001 THRU A182-0136
B---182SERIAL 18254424 THRU 18255058
C---182 SERIAL 18255059 THRU 18260445
D---182 SERIAL 18254424 THRU 18255444
E---182 SERIAL 18255445 THRU 18255844
F---182 SERIAL 18255424 THRU 18255844
G---182 SERIAL 18255845 THRU 18260445
H---182 SERIAL 18255059 THRU 18255844
J---182 SERIAL 18255845 THRU 18256684
K---182 SERIAL 18256685 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
L---182 SERIAL 18257626 THRU 18259647, 18259650
A182 SERIAL A182-0057 THRU A182-0116
M---182 SERIAL 18255845 THRU 18259305
A182 SERIAL A182-0001 THRU A182-0116
N---182 SERIAL 18259306 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
O---182 SERIAL 18254424 THRU 18260180
A182 SERIAL A182-0001 THRU A182-0116
P---182 SERIAL 18260181 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
Q---182 SERIAL 18259648, 18259649 & 18259651 THRU 18260055
R---182 SERIAL 18259306 THRU 18260055
S---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136

Upholstery (Cont)

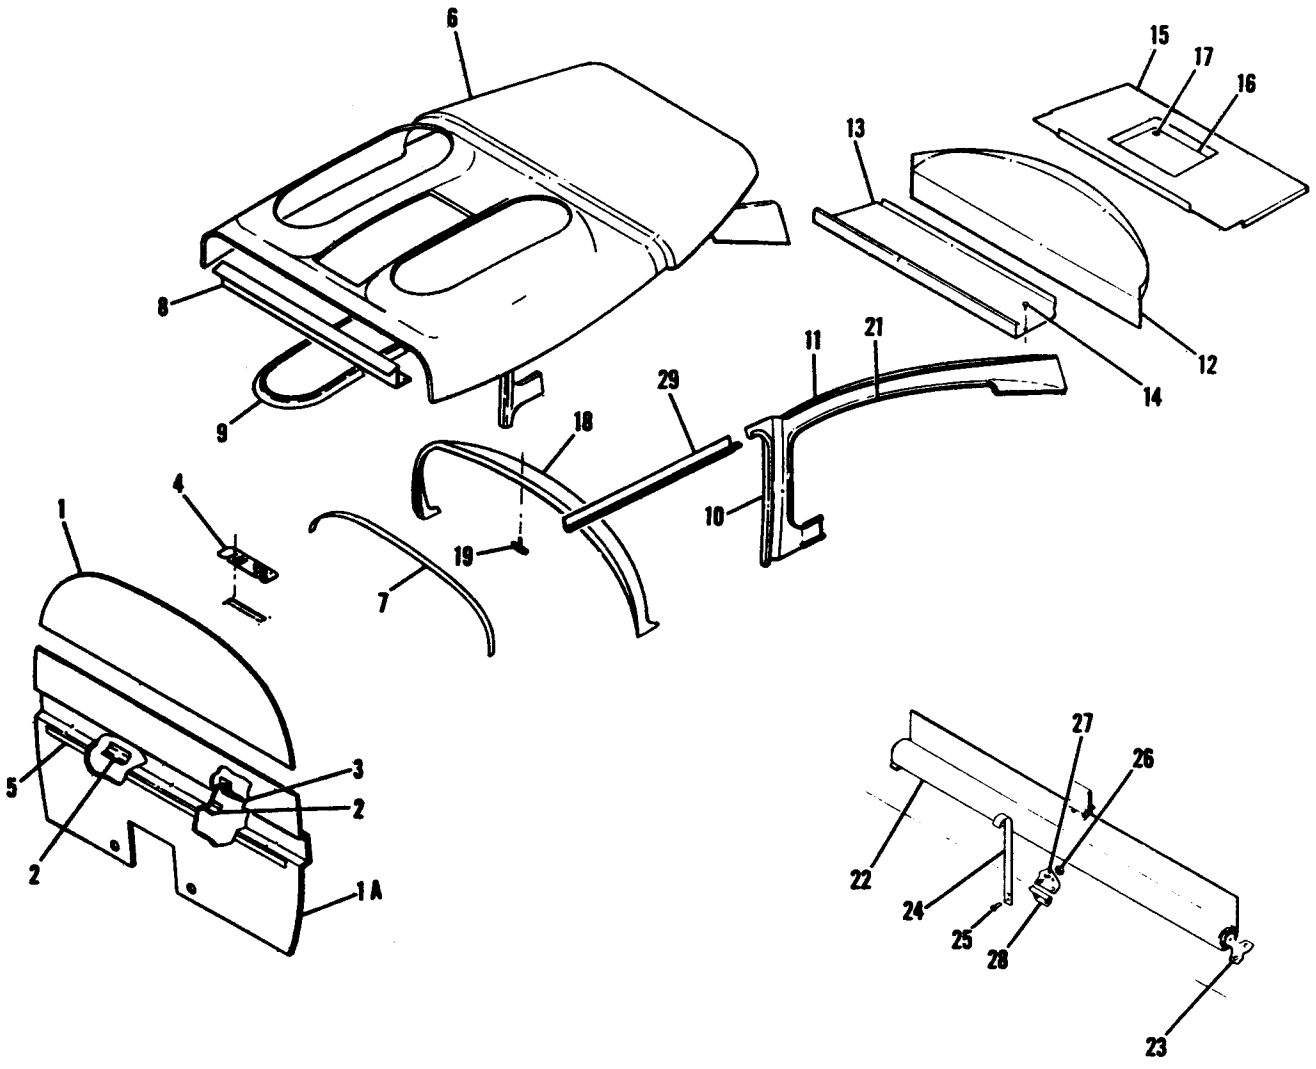

182 SERIAL 18260446 THRU 18262465

Figure 45B. Cabin Top & Firewall Upholstery Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
458-			CABIN TOP & FIREWALL UPHOLSTERY INSTALLATION	NP	A
- 1	0700762-27		SOUNDPROOFING ASSY-UPPER	1	
- 1A	0700762-26		SOUNDPROOFING ASSY-LOWER	1	
			ATTACHING PARTS		
	S1023A8-8		SCREW	10	
	S1067C1		WASHER	10	
			---*---		
- 2	0713019-86		SHIELD-CABIN AIR	2	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	2	
			---*---		
- 3	0700653-1		CABLE SHIELD	1	E
			ATTACHING PARTS		
	S1021Z6-8		SCREW	2	E
			---*---		
- 4	0713253-1		DEFLECTOR PLATE-DEFROSTER	1	
			ATTACHING PARTS		
	S1021Z4-6B		SCREW	4	
			---*---		
- 5	0700103-131		STRIP	2	
			ATTACHING PARTS		
	S1021Z6-8		SCREW	8	
			---*---		
- 6	0714002-1		HEADLINER-MOLDED	1	B
	0714002-7		HEADLINER-MOLDED	1	C
	0714002-8		HEADLINER-MOLDED USED WITH SKYLIGHT	1	B
	0714002-4		HEADLINER-MOLDED USED WITH SKYLIGHT	1	C
			ATTACHING PARTS		
	S1021Z4-6		SCREW	3	
	S1066C1		WASHER	3	
			---*---		
- 7	0714003-1		TIARA ASSEMBLY	1	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	4	
			---*---		
- 8	0514067-2		RETAINER-FRONT SPAR	1	
			ATTACHING PARTS		
	S1898-2		FASTENER-PANEL	3	
			---*---		
- 9	0514064-1		MOLDING-SKYLIGHT WINDOW	2	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	8	
			---*---		
-10	0715022-7	¤	TRIM STRIP-LH	1	E
	0715032-7	¤	TRIM STRIP-LH	1	D
	0715022-8	¤	TRIM STRIP-RH	1	E
	0715032-8	¤	TRIM STRIP-RH	1	D
-11	0715022-9	¤	MOLDING-LH WINDOW	1	E
	0715032-9	¤	MOLDING-LH WINDOW	1	D
	0715022-10	¤	MOLDING-RH WINDOW	1	E
	0715032-10	¤	MOLDING-RH WINDOW	1	D
-12	0700702-21	¤	PANEL-CANTED	1	
-13	0711682-1		BAGGAGE SHELF-REMOVABLE	1	
			ATTACHING PARTS		
-14	H323-3-1-1		PLUNGER	4	
	4559-3-1		GROMMET	4	
	H323-4-1-1		PLUNGER CENTER HOLES	2	
	H322-4-1		GROMMET CENTER HOLES	2	
			---*---		
-15	0715023-5	¤	PANEL ASSEMBLY	1	
-16	0715023-8	¤	COVER-PANEL	1	
			ATTACHING PARTS		
-17	S2092-1		FASTENER-HOOK	AR	E
	S2092-2		FASTENER-PILE	AR	E
	S2092-3		FASTENER-HOOK	AR	D
	S2092-4		FASTENER-PILE	AR	D
			---*---		
-18	0715010-2	¤	MOLDING-AFT WINDOW	1	
			ATTACHING PARTS		
	S1021A4-6		SCREW	6	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
458-			---*---		
-19	S1430-1		HANGER-COAT HOOK	1	
-20			DELETED-NEVER USED		
-21	S1948-2	%	TRIM	AR	
-22	0700707-11		ROLLER CURTAIN ASSEMBLY	1	
-23	1200612-5		BRACKET KIT-CURTAIN	1	
			ATTACHING PARTS		
	AN515-4R5		SCREW	4	
	NAS679A04		NUT	4	
			---*---		
-24	0700707-6		SUPPORT ASSEMBLY CURTAIN	1	
			ATTACHING PARTS		
-25	AN515-4R10		SCREW	1	
-26	NAS679A04		NUT	1	
	0700707-8		SPRING	1	
			---*---		
-27	0700707-5		BRACKET-CURTAIN SUPPORT	1	
			ATTACHING PARTS		
	S1021A4-6C		SCREW	2	
			---*---		
-28	1200612-6		BRACKET-CURTAIN HOOK	2	
			ATTACHING PARTS		
	S1021Z4-6C		SCREW	2	
	NAS446-1-3		NUT	2	
			---*---		
-29	1215045-5	¤	SHIELD-LH	1	
	1215045-6	¤	SHIELD-RH	1	

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.


NOTE. %REFER TO FIGURE 1 FOR SECOND DASH NUMBER TO DENOTE COLOR REQUIRED.

A---182 SERIAL 18260446 THRU 18262465
A182 SERIAL A182-0137 & ON
B---182 SERIAL 18260446 THRU 18260825
C---182 SERIAL 18260826 THRU 18262465
D---182 SERIAL 18261426 THRU 18262465
E---182 SERIAL 18260446 THRU 18261425


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
46 -			CABIN DOOR UPHOLSTERY INSTALLATION	NP	
- 1	0700656-10		UPHOLSTERY PANEL-CABIN DOOR RH	1	A
	0700681-2		UPHOLSTERY PANEL-CABIN DOOR RH	1	C
	0700693-4		UPHOLSTERY PANEL-CABIN DOOR RH	1	D
	0700699-6		UPHOLSTERY PANEL-CABIN DOOR RH	1	G
	0700712-6	#	UPHOLSTERY PANEL-CABIN DOOR RH	1	J
	0700753-4	#	UPHOLSTERY PANEL-CABIN DOOR RH	1	K
	0700656-9		UPHOLSTERY PANEL-CABIN DOOR LH	1	A
	0700681-1		UPHOLSTERY PANEL-CABIN DOOR LH	1	C
	0700693-3		UPHOLSTERY PANEL-CABIN DOOR LH	1	D
	0700699-5		UPHOLSTERY PANEL-CABIN DOOR LH	1	G
	0700712-5	#	UPHOLSTERY PANEL-CABIN DOOR LH	1	J
	0700753-3	#	UPHOLSTERY PANEL-CABIN DOOR LH	1	K
- 1A	0700757-4	#	UPHOLSTERY PANEL-CABIN DOOR RH	1	M
	0715011-4	#	UPHOLSTERY PANEL-CABIN DOOR RH	1	N
	0715013-4	#	TRIM PANEL ASSEMBLY-RH	1	P
	0715021-4	#	TRIM PANEL ASSEMBLY-RH	1	R
	0715027-4	#	TRIM PANEL ASSEMBLY-RH	1	S
	0700757-3	#	UPHOLSTERY PANEL-CABIN DOOR LH	1	M
	0715011-3	#	UPHOLSTERY PANEL-CABIN DOOR LH	1	N
	0715013-3	#	TRIM PANEL ASSEMBLY-LH	1	P
	0715021-3	#	TRIM PANEL ASSEMBLY-LH	1	R
	0715027-3	#	TRIM PANEL ASSEMBLY-LH	1	S
- 2	S1023A4-6		SCREW	2	
- 3	S1066C1		WASHER	2	
- 4	1200089-4		DOOR PULL ASSEMBLY	2	A
	1414082-1		DOOR PULL ASSEMBLY WHEN EXHAUSTED USE 1414082-7	2	C
	1414082-7		DOOR PULL ASSEMBLY	2	D
	1414082-14		DOOR PULL ASSEMBLY	2	G
	1414082-18	#	DOOR PULL ASSEMBLY	2	H
	0514078-5		ARMREST ASSEMBLY-FRONT	2	U
			ATTACHING PARTS		
	AN520-10R12		SCREW	2	A
	AN520-10R20		SCREW	2	B
	AN960-10L		WASHER	2	
			---•---		
	1414082-6		PAD ASSEMBLY	1	E
	1414082-13		PAD ASSEMBLY	1	F

CONTINUED ON NEXT PAGE


Upholstery (Cont)

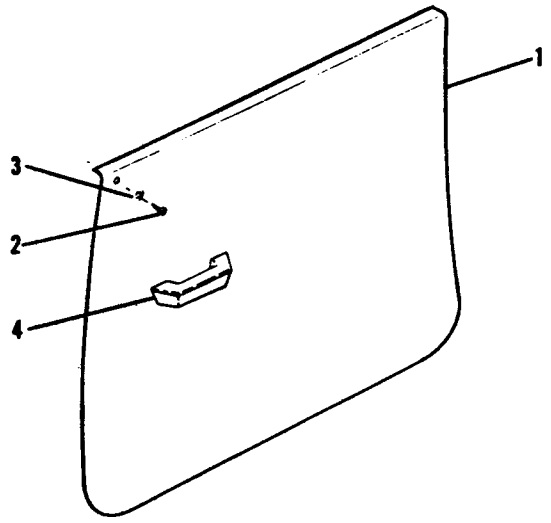

18257626 THRU 18258505

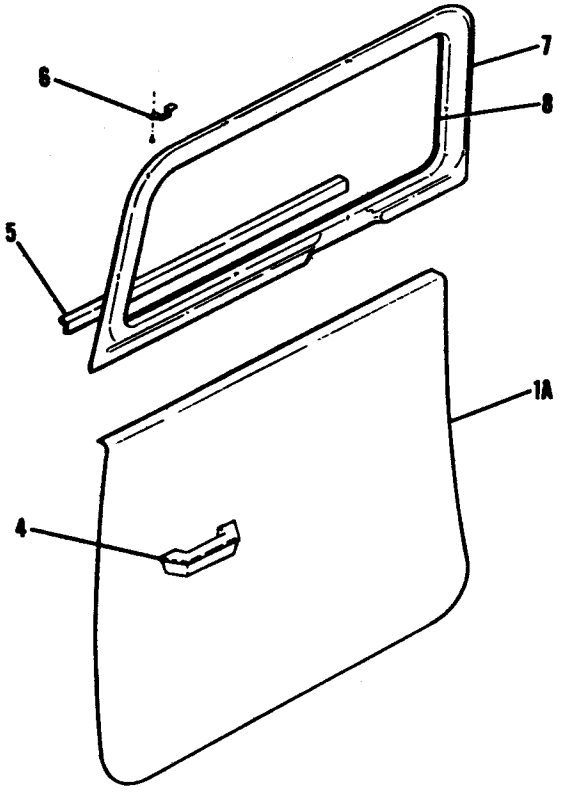

18258506 THRU 18261425

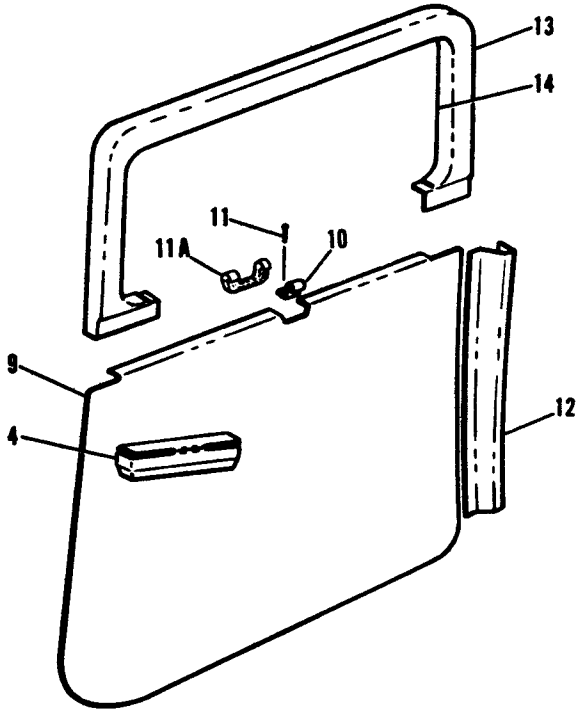

18261426 THRU 18262465

Figure 46. Cabin Door Upholstery Installation


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
46 - 5	1200655-5		RETAINER	1	L
	S1021A4-6		SCREW	5	L
- 6	1211061-61		CLIP-HAT	5	L
	S1021A4-6		SCREW	2	L
- 7	0715008-4	¤	MOLDING ASSEMBLY-DOOR WINDOW RH	1	N
	0715008-3	¤	MOLDING ASSEMBLY-DOOR WINDOW LH	1	N
	0715008-8	¤	MOLDING ASSEMBLY-DOOR WINDOW RH	1	O
	0715008-7	¤	MOLDING ASSEMBLY-DOOR WINDOW LH	1	O
			ATTACHING PARTS		
	S1021Z8-6		SCREW	AR	
			---*---		
- 8	1200535-27		EDGING-WINDOW MOULDING	1	L
- 9	0715028-4	#	TRIM PANEL ASSEMBLY-RH	1	T
	0715028-3	#	TRIM PANEL ASSEMBLY-LH	1	T
-10	0700685-1		STRIKER PLATE LH DOOR ONLY	1	T
			ATTACHING PARTS		
-11	S1021Z8-8		SCREW	1	T
			---*---		
-11A	0715031-1	¤	ESCUTCHEON-WINDOW STRIKER PLATE LH DOOR ONLY	1	T
-12	0714006-2	¤	TRIM STRIP-RH	1	T
	0714006-1	¤	TRIM STRIP-LH	1	T
			ATTACHING PARTS		
	S1021Z4-6		SCREW	4	T
			---*---		
-13	0715032-16	¤	MOLDING-DOOR WINDOW RH	1	T
	0715032-15	¤	MOLDING ASSY-DOOR WINDOW LH	1	T
-14	S1948-2-1		TRIM RH ONLY	AR	T

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18253599 THRU 18254423
B---182 SERIAL 18254424 THRU 18262465
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18254424 THRU 18255058
D---182 SERIAL 18255059 THRU 18255844
E---182 SERIAL 18253599 THRU 18255844
F---182 SERIAL 18255845 THRU 18260825
A182 SERIAL A182-0001 THRU A182-0136
G---182 SERIAL 18255845 THRU 18256684
H---182 SERIAL 18256685 THRU 18260825
J---182 SERIAL 18256685 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
K---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
L---182 SERIAL 18258506 THRU 18262465
A182 SERIAL A182-0097 & ON
M---182 SERIAL 18258506 THRU 18259305
A182 SERIAL A182-0097 THRU A182-0116
N---182 SERIAL 18259306 THRU 18260055
O---182 SERIAL 18260056 THRU 18262465
A182 SERIAL A182-0117 & ON
P---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 & ON
R---182 SERIAL 18260446 THRU 18260825
S---182 SERIAL 18260826 THRU 18261425
T---182 SERIAL 18261426 THRU 18262465
U---182 SERIAL 18260826 THRU 18262465

Upholstery (Cont)

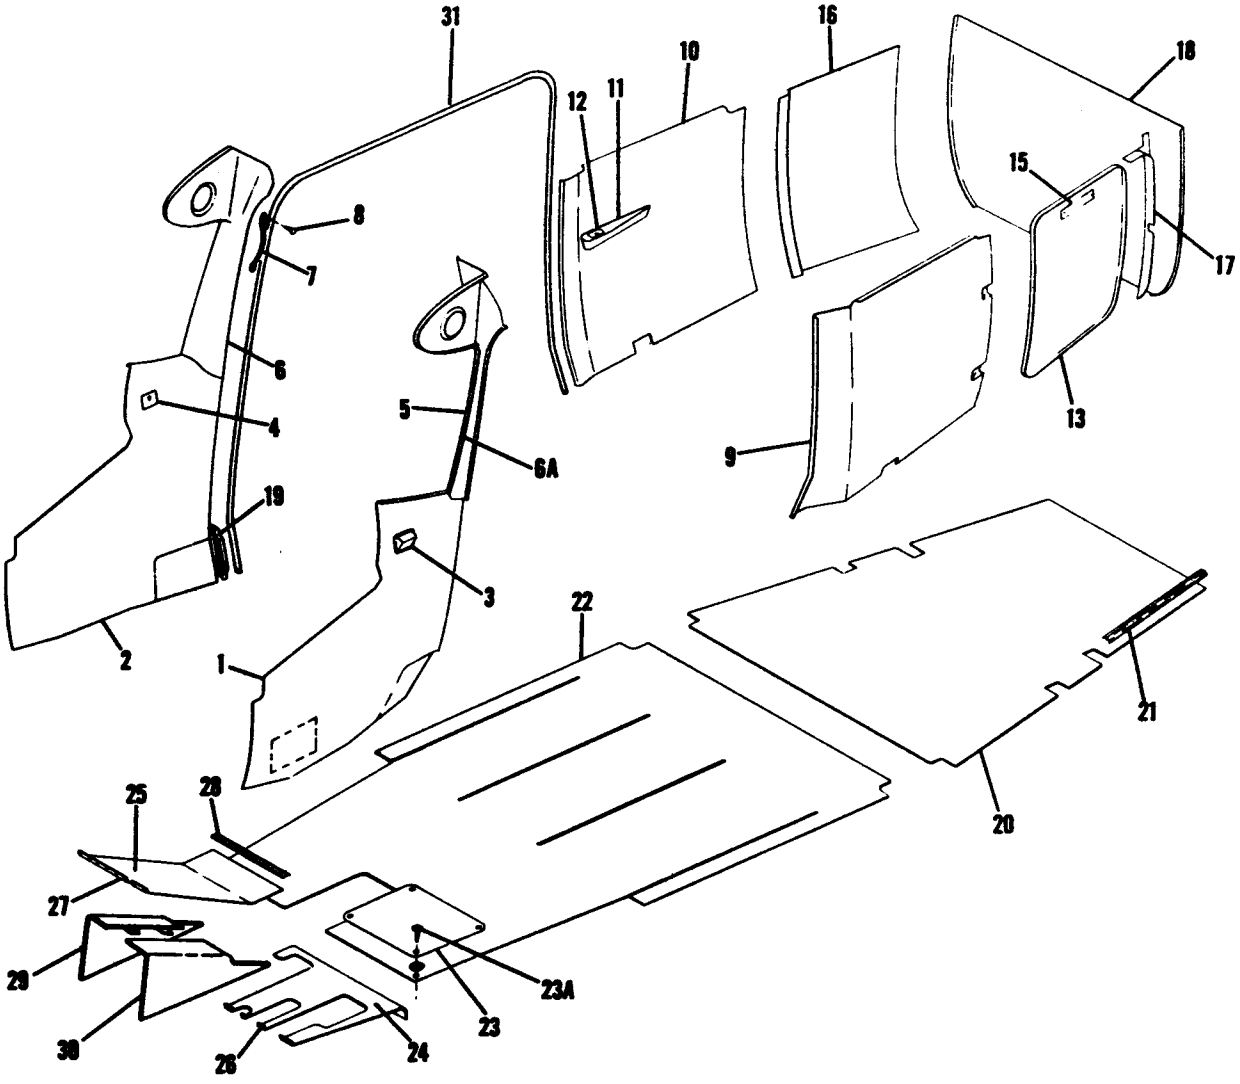


182 SERIAL 18253599 THRU 18254423

Figure 47. Cabin Side & Floorboard Upholstery Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
47 -		UPHOLSTERY INSTALLATION-CABIN SIDE & FLOORBOARD	NP	A
- 1	0700656-7	FORWARD CABIN SIDE PANEL-LH	1	
- 2	0700656-8	FORWARD CABIN SIDE PANEL-RH	1	
- 3	0411030-5	RETAINER-ASH RECEIVER	2	
		ATTACHING PARTS		
	S1021Z4-8	SCREW	2	
	NAS446-1-3	NUT	2	
		---*---		
- 4	0411030-6	TRAY-ASH RECEIVER	2	
- 5	0700702-1	SHIELD-DOORPOST LH	1	
- 6	0700702-2	SHIELD-DOORPOST RH	1	
- 6A	S1247-1W	SEAL 30.80 IN LG BULK ITEM REF S-1247-1W30.80	2	
- 7	0511229-2	STRAP-ASSIST	2	
		ATTACHING PARTS		
- 8	T-5/8	SCREW AUV	2	
		---*---		
- 9	0700656-11	AFT CABIN SIDE PANEL-LH	1	
-10	0700656-12	AFT CABIN SIDE PANEL-RH	1	
-11	0700668-2	ARM REST ASSEMBLY-RH	1	
	0700668-1	ARM REST ASSEMBLY-LH	1	
		ATTACHING PARTS		
	AN960-10	WASHER	1	
	MS21044N3	NUT	1	
		---*---		
-12	S1957-2	ASH RECEIVER	1	
-13	0700702-5	PANEL-BAGGAGE DOOR	1	
		ATTACHING PARTS		
-14	S1021Z4-6	SCREW	5	
	99608-K2215	STUD UC FWD EDGE	2	
		---*---		
-15	0710032-3	PLACARD-BAGGAGE LOAD LIMIT	1	
		ATTACHING PARTS		
	S1021Z4-6	SCREW	2	
		---*---		
-16	0700655-6	PANEL-BAGGAGE COMPARTMENT	1	
-17	0700655-25	COVER-BAGGAGE DOORPOST	1	
-18	0700655-8	PANEL-AFT WALL	1	
-19	1200231-2	RETAINER-CABIN AIR VENT RH	1	
	1200231-1	RETAINER-CABIN AIR VENT LH	1	
		ATTACHING PARTS		
	S1021Z4-4	SCREW	2	
	S1021Z6-6	SCREW	1	
	NAS446-3-3	NUT	1	
		---*---		
-20	0700654-2	CARPET ASSEMBLY-AFT	1	
-21	0311623-1	SCUFF PLATE-BAGGAGE DOOR	1	
		ATTACHING PARTS		
	S1021Z4-4	SCREW	3	
		---*---		
-22	0700654-1	CARPET ASSEMBLY-FORWARD	1	
-23	0700669-1	SCUFF PLATE	1	
		ATTACHING PARTS		
-23A	S1021Z6-6	SCREW	4	
	AN970-3	WASHER	4	
		---*---		
	0700669-1	SCUFF PLATE DUAL CONTROLS	1	
-24	0700654-3	CARPET ASSEMBLY-RUDDER PEDAL SHIELD LH	1	B
	0700654-17	CARPET ASSEMBLY-RUDDER PEDAL SHIELD LH	1	C
-25	0700654-10	CARPET ASSEMBLY-RUDDER BAR SHIELD RH	1	
	0700654-4	CARPET ASSEMBLY-RUDDER PEDAL SHIELD DUAL CONTROLS ONLY	1	
-26	0713715-1	SHIELD-RUDDER PEDAL LH	1	
-27	0713703-1	SHIELD-RUDDER BAR RH	1	
	0713715-2	SHIELD-RUDDER PEDAL DUAL CONTROLS ONLY	1	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	8	
		---*---		
-28	0713703-2	RETAINER-CARPET RH	1	
		ATTACHING PARTS		
	S1023Z8-8B	SCREW	3	
		---*---		
-29	0700654-14	CARPET ASSEMBLY-TUNNEL RH	1	D
-30	0700654-15	CARPET ASSEMBLY-TUNNEL LH	1	D
-31	0700668-5	WINDLACE ASSEMBLY-DOOR	2	

A---182 SERIAL 18253599 THRU 18254423
B---182 SERIAL 18253599 THRU 18254386
C---182 SERIAL 18254387 THRU 18254423
D---182 SERIAL 18253960 THRU 18254423

Upholstery (Cont)

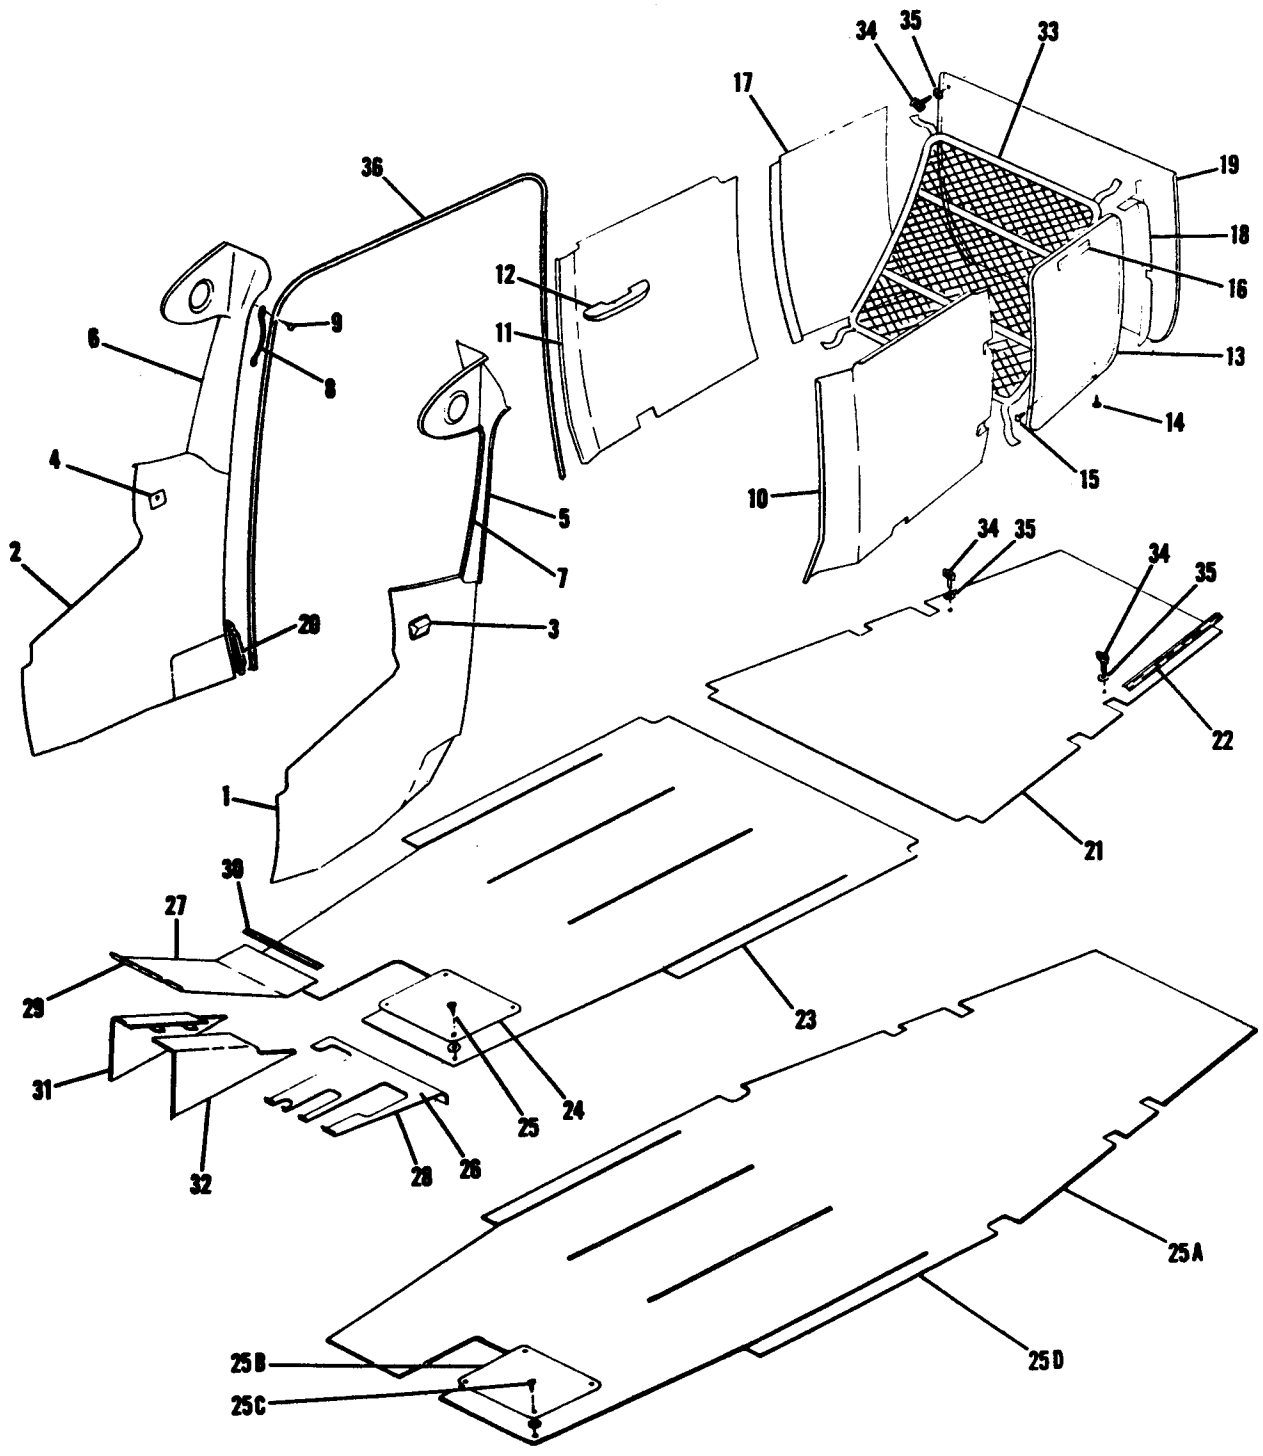

182 SERIAL 18254424 THRU 18258505

Figure 47A. Cabin Side & Floorboard Upholstery Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
47A-			UPHOLSTERY INSTALLATION-CABIN SIDE & FLOORBOARD	NP	A
- 1	0700699-1		FORWARD CABIN SIDE PANEL-LH	1	G
	0700693-1		FORWARD CABIN SIDE PANEL LH	1	D
	0700699-1		FORWARD CABIN SIDE PANEL LH	1	E
	0700712-1	#	FORWARD CABIN SIDE PANEL LH	1	K
	0700757-1	#	FORWARD CABIN SIDE PANEL-LH	1	L
- 2	0700682-2		FORWARD CABIN SIDE PANEL-RH	1	B
	0700693-2		FORWARD CABIN SIDE PANEL RH	1	D
	0700699-2		FORWARD CABIN SIDE PANEL RH	1	G
	0700712-3	#	FORWARD CABIN SIDE PANEL-RH	1	K
	0700757-2	#	FORWARD CABIN SIDE PANEL-RH	1	L
- 3	0411030-5		RETAINER-ASH RECEIVER	2	
			ATTACHING PARTS		
	S1021Z4-8		SCREW	2	
	NAS446-1-3		NUT	2	
			---*---		
- 4	0411030-6		TRAY-ASH RECEIVER	2	
- 5	0700702-1		SHIELD-DOORPOST LH	1	F
	0700702-13	¤	SHIELD-DOORPOST LH WHEN EXHAUSTED USE 0700702-17	1	J
	0700702-17	¤	SHIELD-DOORPOST LH	1	K
	0770725-9	¤	SHIELD-DOORPOST LH	1	L
- 6	0700702-2		SHIELD-DOORPOST RH	1	F
	0700702-14	¤	SHIELD-DOORPOST RH WHEN EXHAUSTED USE 0700702-18	1	J
	0700702-18	¤	SHIELD-DOORPOST RH	1	H
- 7	S1247-1K		SEAL 30.80 IN LG BULK ITEM REF S1247-1K30.80	2	
- 8	S1362-5		STRAP-ASSIST	2	F
	S1362-6		STRAP-ASSIST	2	E
			ATTACHING PARTS		
- 9	AN509-10R17		SCREW	2	
			---*---		
-10	0700683-1		AFT CABIN SIDE PANEL-LH	1	B
	0700693-9		AFT CABIN SIDE PANEL-LH	1	D
	0700699-9		AFT CABIN SIDE PANEL-LH	1	G
	0700712-9	#	AFT CABIN SIDE PANEL-LH	1	K
	0700757-5	#	AFT CABIN SIDE PANEL-LH	1	L
-11	0700712-10	#	AFT CABIN SIDE PANEL-RH	1	K
	0700693-10		AFT CABIN SIDE PANEL RH	1	D
	0700699-10		AFT CABIN SIDE PANEL-RH	1	G
	0700712-10	#	AFT CABIN SIDE PANEL-RH	1	H
	0700757-6	#	AFT CABIN SIDE PANEL-RH	1	L
-12	1414082-1		ARMREST ASSEMBLY WHEN EXHAUSTED USE 1414082-7	2	B
	1414082-7		ARMREST ASSEMBLY	2	D
	1414082-14		ARMREST ASSEMBLY	2	G
	1414082-18	#	ARMREST ASSEMBLY	2	H
			ATTACHING PARTS		
	AN520-10R10		SCREW	2	
			---*---		
	1414082-6		PAD ASSEMBLY-ARMREST	1	F
	1414082-13	#	PAD ASSEMBLY-ARMREST	1	E
-13	0700702-5		PANEL-BAGGAGE DOOR	1	F
	0700702-5	¤	PANEL-BAGGAGE DOOR	1	E
			ATTACHING PARTS		
-14	S1021Z4-6		SCREW	5	
-15	XH99608F1099		STUD UC	2	
			---*---		
-16	0512166-3		PLACARD-BAGGAGE LOAD LIMIT	1	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	2	
			---*---		
-17	0700655-19		PANEL-BAGGAGE COMPARTMENT	1	B
	0700702-6		PANEL-BAGGAGE COMPARTMENT	1	D
	0700702-6	¤	PANEL-BAGGAGE COMPARTMENT	1	E
-18	0700655-25		COVER-BAGGAGE DOORPOST	1	B
	0700702-9		COVER-BAGGAGE DOORPOST	1	D
	0700702-9	¤	COVER-BAGGAGE DOORPOST	1	E
-19	0700655-27		PANEL-AFT WALL	1	B
	0700702-10		PANEL-AFT WALL	1	D
	0700702-10	¤	PANEL-AFT WALL	1	E
			ATTACHING PARTS		
	XX49265K2215		STUD	8	C
			---*---		

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
47A-20	1200231-2		RETAINER-CABIN AIR VENT RH	1	
	1200231-1		RETAINER-CABIN AIR VENT LH	1	
			ATTACHING PARTS		
	S1021Z4-4		SCREW	2	
	S1021Z6-6		SCREW	1	
	NAS446-3-3		NUT	1	
			---*---		
-21	0700654-2	#	CARPET ASSEMBLY-AFT	1	M
-22	0311623-1		SCUFF PLATE-BAGGAGE DOOR	1	
			ATTACHING PARTS		
	S1021Z4-4		SCREW	3	
			---*---		
-23	0700654-1	#	CARPET ASSEMBLY-FWD	1	M
-24	0700709-1		SCUFF PLATE LH	1	
			ATTACHING PARTS		
-25	S1021Z6-6		SCREW	4	
	AN970-3		WASHER	4	
			---*---		
-25A	0700694-7	#	CARPET ASSEMBLY	1	K
-25B	0700709-1		SCUFF PLATE	1	
			ATTACHING PARTS		
-25C	S1021Z6-6		SCREW	4	
	AN970-3		WASHER	4	
			---*---		
-25D	0700694-11	#	CARPET ASSEMBLY	1	L
	0700709-2		SCUFF PLATE-RH	1	N
-26	0700654-17	#	CARPET ASSEMBLY-RUDDER PEDAL SHIELD	1	
-27	0700654-10	#	CARPET ASSEMBLY-RUDDER BAR SHIELD RH	1	
	0700654-16	#	CARPET ASSEMBLY-RUDDER PEDAL SHIELD DUAL CONTROLS ONLY	1	
-28	0713715-1		SHIELD-RUDDER PEDAL LH	1	
-29	0713703-1		SHIELD-RUDDER BAR RH	1	
	0713715-2		SHIELD-RUDDER PEDAL DUAL CONTROLS	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	8	
			---*---		
-30	0713703-2		RETAINER-CARPET RH	1	
			ATTACHING PARTS		
	S1023Z8-88		SCREW	3	
			---*---		
-31	0700654-14	#	CARPET ASSEMBLY-TUNNEL RH	1	
-32	0700654-15	#	CARPET ASSEMBLY-TUNNEL LH	1	
-33	0500236-1		NET-BAGGAGE	1	
			ATTACHING PARTS		
-34	1211203-1		EYEBOLT	4	
-35	1200127-1		WASHER	4	
			---*---		
-36	0700668-5		WINDLACE ASSEMBLY-DOOR	2	

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.

NOTE. *THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18254424 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
B---182 SERIAL 18254424 THRU 18255058
C---182 SERIAL 18255059 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
D---182 SERIAL 18255059 THRU 18255844
E---182 SERIAL 18255845 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
F---182 SERIAL 18254424 THRU 18255844
G---182 SERIAL 18255845 THRU 18256684
H---182 SERIAL 18256685 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
J---182 SERIAL 18255059 THRU 18256684
K---182 SERIAL 18256685 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
L---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU AU82-0096
M---182 SERIAL 18254424 THRU 18256684
N---182 SERIAL 18254424 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056

Upholstery (Cont)

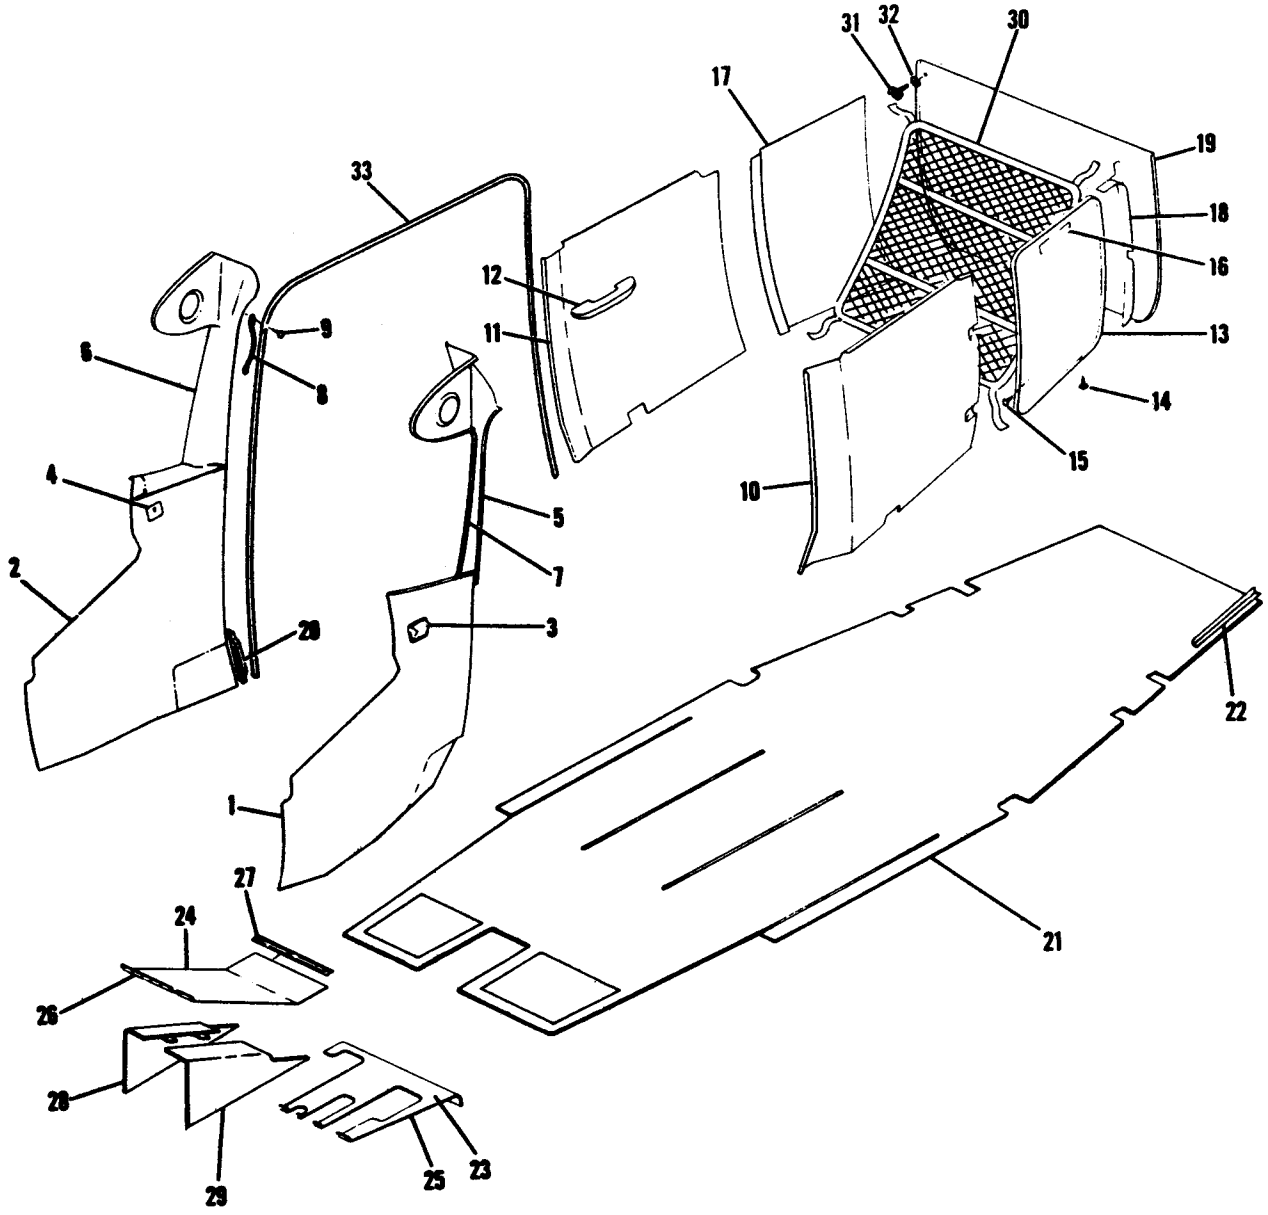

A182 SERIAL A182-0097 THRU A182-0136
182 SERIAL 18258506 THRU 18260445

Figure 47B. Upholstery Cabin Side & Floorboard Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
478-			UPHOLSTERY INSTALLATION-CABIN SIDE & FLOORBOARD	NP	A
- 1	0700757-1	#	FORWARD CABIN SIDE PANEL-LH	1	B
	0715011-1	#	FORWARD CABIN SIDE PANEL-LH	1	D
	0715013-1	#	FORWARD CABIN SIDE PANEL-LH	1	E
- 2	0700757-2	#	FORWARD CABIN SIDE PANEL-RH	1	B
	0715011-2	#	FORWARD CABIN SIDE PANEL-RH	1	D
	0715013-2	#	FORWARD CABIN SIDE PANEL RH	1	E
- 3	0411030-5		RETAINER-ASH RECEIVER	2	
			ATTACHING PARTS		
	S1021Z4-8		SCREW	2	
	NAS446-1-3		NUT	2	
			---*---		
- 4	0411030-6		TRAY-ASH RECEIVER	2	
- 5	0715007-1	¤	SHIELD-DOORPOST LH	1	H
	0715007-5	¤	SHIELD-DOORPOST LH	1	E
- 6	0715007-3	¤	SHIELD-DOORPOST RH	1	
- 7	S1247-1K		SEAL 30.80 IN LG BULK ITEM REF S1247-1K30.80	2	F
			WHEN EXHAUSTED USE S1948-2		
	S1948-2		SEAL 30.80 IN LG BULK ITEM REF S1948-2-30.80	2	G
- 8	S1362-6		STRAP-ASSIST	2	
			ATTACHING PARTS		
- 9	AN509-10R17		SCREW	2	
			---*---		
-10	0700757-5	#	AFT CABIN SIDE PANEL-LH	1	B
	0715011-5	#	AFT CABIN SIDE PANEL-LH	1	D
	0715013-5	#	AFT CABIN SIDE PANEL-LH	1	E
-11	0700757-6	#	AFT CABIN SIDE PANEL-RH	1	B
	0715011-6	#	AFT CABIN SIDE PANEL-RH	1	D
	0715013-6	#	AFT CABIN SIDE PANEL RH	1	E
-12	1414082-18	#	ARMREST ASSEMBLY	2	
			ATTACHING PARTS		
	AN520-10R10		SCREW	2	
			---*---		
	1414082-13	#	PAD ASSEMBLY-ARMREST	1	
-13	0700702-5	¤	PANEL-BAGGAGE DOOR	1	
			ATTACHING PARTS		
-14	S1021A4-6		SCREW	6	
-15	KX49265K2215		STUD UC	2	
			---*---		
-16	0512166-3		PLACARD-BAGGAGE LOAD LIMIT	1	B
			ATTACHING PARTS		
	S1021Z4-6		SCREW	2	B
			---*---		
	0505007-1		PLACARD-BAGGAGE LOAD LIMIT	1	C
-17	0700702-6	¤	PANEL-BAGGAGE COMPARTMENT	1	
-18	0700702-9	¤	COVER-BAGGAGE DOORPOST	1	
-19	0700702-10	¤	PANEL-AFT WALL	1	
			ATTACHING PARTS		
	XX49265K2215		STUD	8	
			---*---		
-20	1200231-2		RETAINER-CABIN AIR VENT RH	1	
	1200231-1		RETAINER-CABIN AIR VENT LH	1	
			ATTACHING PARTS		
	S1021Z4-4		SCREW	2	
	S1021Z6-6		SCREW	1	
	NAS446-3-3		NUT	1	
			---*---		
-21	0700694-11	#	CARPET ASSEMBLY	1	
-22	0311623-1		SCUFF PLATE-BAGGAGE DOOR	1	
			ATTACHING PARTS		
	S1021Z4-4		SCREW	3	
			---*---		
-23	0700654-17	#	CARPET ASSEMBLY-RUDDER PEDAL SHIELD	1	
-24	0700654-10	#	CARPET ASSEMBLY-RUDDER BAR SHIELD	1	
	0700654-16	#	CARPET ASSEMBLY-RUDDER PEDAL SHIELD DUAL CONTROLS ONLY	1	
-25	0713715-1		SHIELD-RUDDER PEDAL LH	1	
-26	0713703-1		SHIELD-RUDDER BAR RH	1	
	0713715-2		SHIELD-RUDDER PEDAL DUAL CONTROLS ONLY	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	8	J
	S1021Z8-8		SCREW	6	K
	AN515-8R6		SCREW	1	K
	NAS1022A08		NUT	1	K
	NAS620-8		WASHER	1	K
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
478-27	0713703-2		RETAINER-CARPET RH	1	
			ATTACHING PARTS		
	S1023Z8-8B		SCREW	3	
			---•---		
-28	0700654-14	#	CARPET ASSEMBLY-TUNNEL RH	1	
-29	0700654-15	#	CARPET ASSEMBLY-TUNNEL LH	1	
-30	0500236-1		NET-BAGGAGE	1	
			ATTACHING PARTS		
-31	1211203-1		EYEBOLT	4	
-32	1200127-1		WASHER	4	
			---•---		
-33	0700668-5		WINDLACE ASSEMBLY-DOOR	2	E
	0700668-13	#	WINDLACE-LOWER FWD	1	H
	0700668-14	#	WINDLACE-LOWER AFT	1	H
	0700668-15	#	WINDLACE-UPPER	1	H

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.


NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18258506 THRU 18260445
A182 SERIAL A182-0097 THRU A182-0136
B---182 SERIAL 18258506 THRU 18259305
A182 SERIAL A182-0097 THRU A182-0116
C---182 SERIAL 18259306 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
D---182 SERIAL 18259306 THRU 18260055
E---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
F---182 SERIAL 18259306 THRU 18260180
G---182 SERIAL 18260181 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
H---182 SERIAL 18258506 THRU 18260055
A182 SERIAL A182-0097 THRU A182-0116
J---182 SERIAL 18258506 THRU 18260291
A182 SERIAL A182-0097 THRU A182-0116
K---182 SERIAL 18260291 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
47C-			UPHOLSTERY INSTALLATION-CABIN SIDE & FLOORBOARD	NP	A
- 1	0715021-1	#	FORWARD CABIN SIDE PANEL-LH	1	D
	0715027-1	#	FORWARD CABIN SIDE PANEL-LH	1	E
- 2	0715021-2	#	FORWARD CABIN SIDE PANEL-RH	1	D
	0715027-2	#	FORWARD CABIN SIDE PANEL-RH	1	E
			ATTACHING PARTS		
	AN515-6R8		SCREW	AR	
	S1021A6-12		SCREW	2	
			---*---		
- 3	0411030-5		RETAINER-ASH RECEIVER	2	
			ATTACHING PARTS		
	S1021Z4-8		SCREW	2	
	NAS395-1-3		NUT	2	
			---*---		
- 4	0411030-6		TRAY-ASH RECEIVER	2	
- 5	0715022-1	¤	SHIELD-DOORPOST LH	1	
- 6	0715022-2	¤	SHIELD-DOORPOST RH	1	
- 7	0715022-3	¤	MOULDING-DOORPOST LH	1	D
	0715022-13	¤	MOULDING-DOORPOST LH	1	E
- 8	0715022-4	¤	MOULDING-DOORPOST RH	1	D
	0715022-12	¤	MOULDING-DOORPOST-RH	1	E
- 9	0513425-1		PAD-DOORPOST COVER	2	
-10	S1362-6		STRAP-ASSIST	2	D
			ATTACHING PARTS		
-11	AN509-10R17		SCREW	2	D
			---*---		
-12	0715021-5	#	AFT CABIN SIDE PANEL-LH	1	D
	0715027-5	#	AFT CABIN SIDE PANEL-LH	1	E
-13	0715021-6	#	AFT CABIN SIDE PANEL-RH	1	D
	0715027-6	#	AFT CABIN SIDE PANEL-RH	1	E
			ATTACHING PARTS		
	AN515-6R8		SCREW	AR	
			---*---		
-14	1414082-18	#	ARMREST ASSEMBLY	2	D
	0514079-2		ARMREST ASSEMBLY-RH REAR	1	E
	0514079-1		ARMREST ASSEMBLY-LH REAR	1	E
			ATTACHING PARTS		
	AN520-10P20		SCREW	2	
			---*---		
	S1957-2		ASH RECEIVER	1	E
	S1957-1		RETAINER-ASH RECEIVER	1	E
	1414082-13	#	PAD ASSEMBLY-ARMREST	1	D
-15	0700702-5	¤	PANEL-BAGGAGE DOOR	1	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	6	
			---*---		
-16	0705020-1		PLACARD-BAGGAGE LOAD LIMIT	1	
-17	0700702-6	¤	PANEL-BAGGAGE COMPARTMENT	1	
-18			DELETED NEVER USED		

CONTINUED ON NEXT PAGE

Upholstery (Cont)

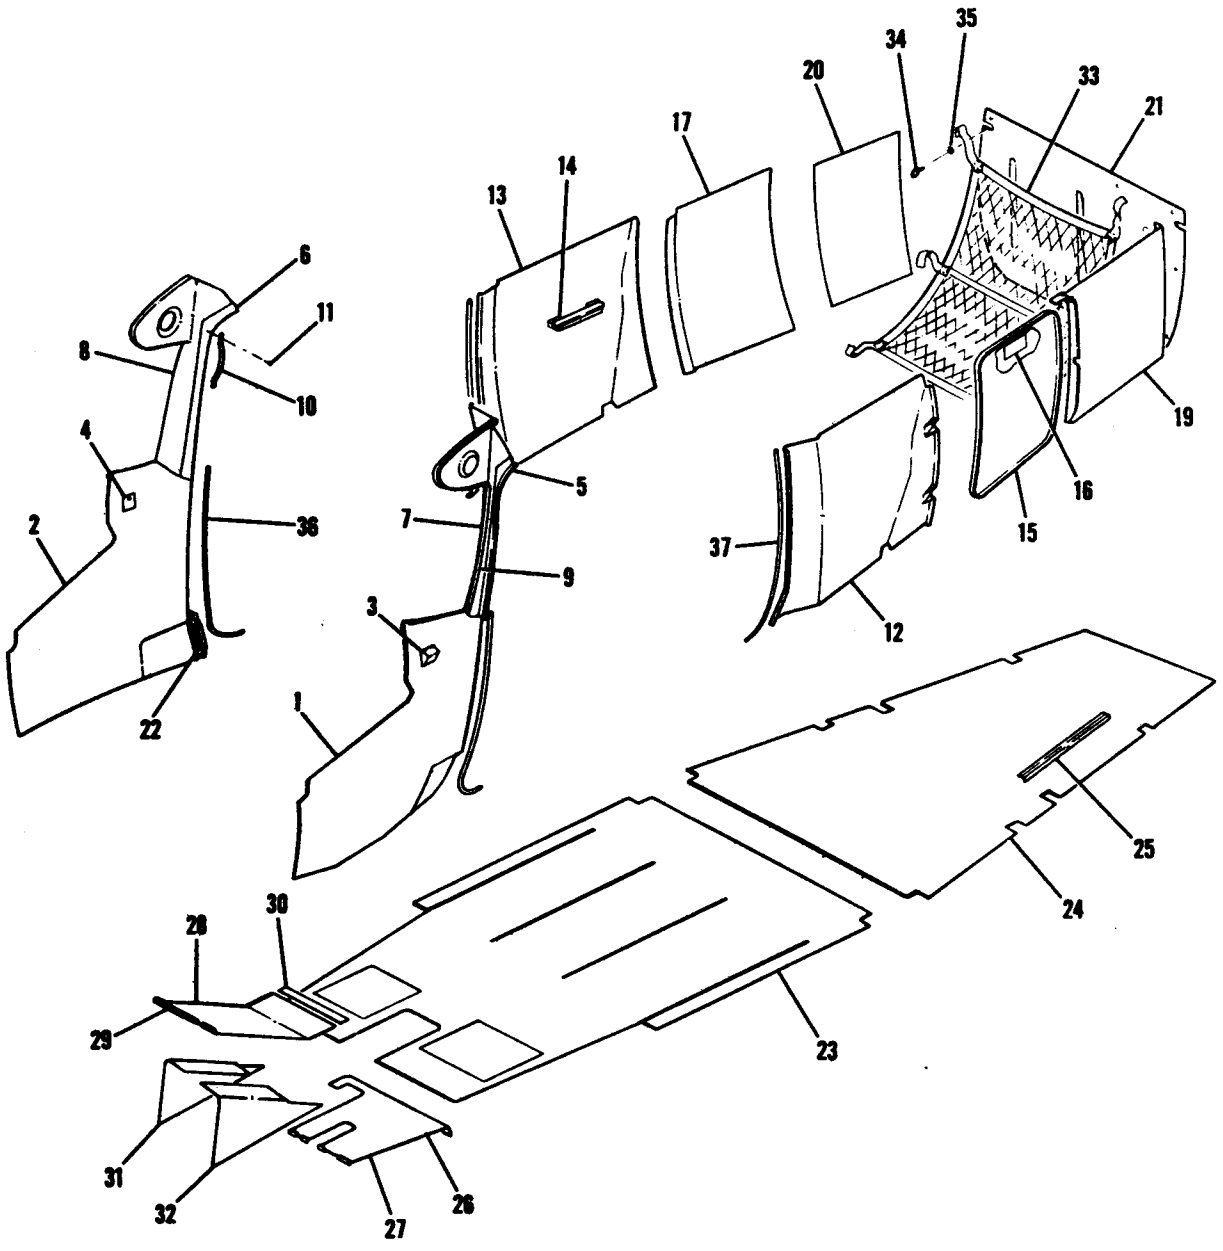

182 SERIAL 18260446 THRU 18261425

Figure 47C. Upholstery Cabin Side & Floorboard Installation


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
47C-19	0715023-3	¤	PANEL-AFT BAGGAGE COMPARTMENT LH	1	
-20	0715023-4	¤	PANEL-AFT BAGGAGE COMPARTMENT RH	1	
-21	0715023-1	¤	PANEL ASSEMBLY-AFT WALL	1	
-22	1200084-22		RETAINER-CABIN AIR VENT RH WEU 1200231-1	1	8
	1200231-1		RETAINER-CABIN AIR VENT RH	1	C
	1200084-21		RETAINER-CABIN AIR VENT LH WEU 1200231-2	1	8
	1200231-2		RETAINER-CABIN AIR VENT LH	1	C
			ATTACHING PARTS		
	S1021Z4-4		SCREW	2	
			---*---		
-23	0700694-22	#	CARPET ASSEMBLY-FWD	1	
-24	0700654-23	#	CARPET ASSEMBLY-AFT	1	
-25	0311623-1		SCUFF PLATE-BAGGAGE DOOR	1	
			ATTACHING PARTS		
	S1021Z4-4		SCREW	3	
			---*---		
-26	0700654-17	#	CARPET ASSEMBLY-RUDDER PEDAL SHIELD LH	1	
-27	0713715-1		SHIELD-RUDDER PEDAL LH	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	8	
			---*---		
-28	0700654-10	#	CARPET ASSEMBLY-RUDDER BAR SHIELD RH	1	
	0700654-16	#	CARPET ASSEMBLY-RUDDER PEDAL SHIELD DUAL CONTROLS ONLY	1	
-29	0713703-1		SHIELD-RUDDER BAR RH	1	
	0713715-2		SHIELD-RUDDER PEDAL DUAL CONTROLS ONLY	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	7	
			---*---		
-30	0713703-2		RETAINER-CARPET RH	1	
			ATTACHING PARTS		
	S1023Z8-88		SCREW	3	
			---*---		
-31	0700654-14	#	CARPET ASSEMBLY-TUNNEL RH	1	
-32	0700654-15	#	CARPET ASSEMBLY-TUNNEL LH	1	
			ATTACHING PARTS		
	AN515-8R6		SCREW	1	
	NAS1022A08		NUT	1	
	NAS620-8		WASHER	1	
			---*---		
-33	1215042-1		NET-BAGGAGE	1	
			ATTACHING PARTS		
-34	1211203-1		EYE BOLT	6	
-35	1200127-1		WASHER	6	
			---*---		
-36	0700668-13	¤	WINDLACE-FWD	2	
-37	0700668-14	¤	WINDLACE-AFT	2	

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII

A---182 SERIAL 18260446 THRU 18262465
A182 SERIAL A182-0137 & ON
B---182 SERIAL 18260446 THRU 18260611
C---182 SERIAL 18260612 THRU 18262465
D---182 SERIAL 18260446 THRU 18260825
E---182 SERIAL 18260826 THRU 18261425

Upholstery (Cont)

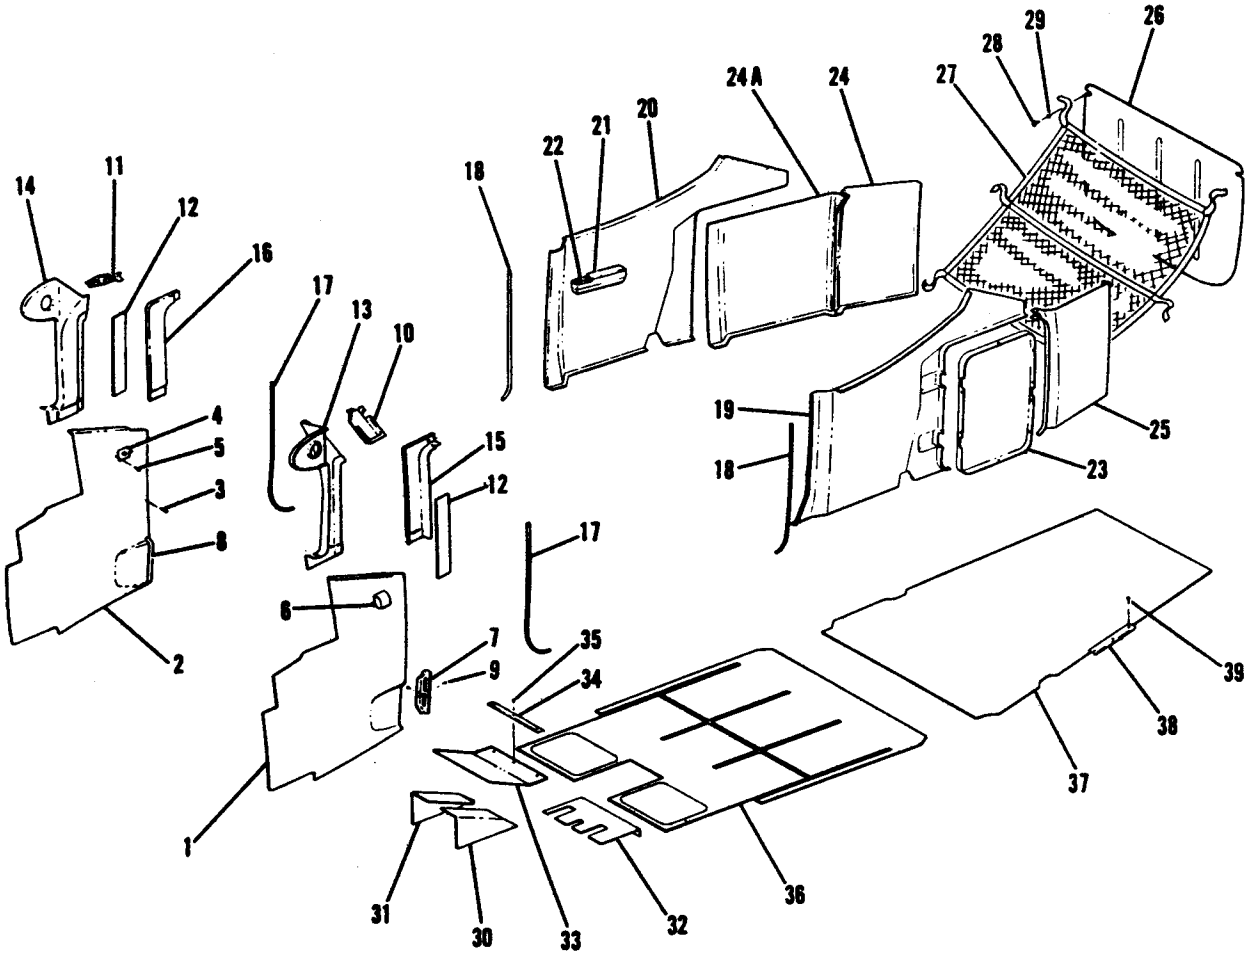

182 SERIAL 18261426 THRU 18262465

Figure 47D. Upholstery Cabin Side & Floorboard Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
470-			UPHOLSTERY INSTALLATION-CABIN SIDE & FLOORBOARD	NP	A
- 1	0715028-1	#	FORWARD CABIN SIDE PANEL-LH	1	
- 2	0715028-2	#	FORWARD CABIN SIDE PANEL-RH	1	
			ATTACHING PARTS		
- 3	S1021Z4-6		SCREW	AR	
			---•---		
- 4	S1762-1		ASH RECEIVER ASSEMBLY	2	
			ATTACHING PARTS		
- 5	S1021Z4-8		SCREW	4	
- 6	NAS395-1-3		NUT	4	
			---•---		
- 7	1200231-1	¤	RETAINER-LH	1	
- 8	1200231-2	¤	RETAINER-RH	1	
			ATTACHING PARTS		
- 9	S1021Z4-6		SCREW	4	
			---•---		
-10	0715024-1		COVER-LH	1	
-11	0715024-2		COVER-RH	1	
-12	0513425-1		PAD	2	
-13	0715032-1	¤	MOLDING-LH	1	
-14	0715032-2	¤	MOLDING-RH	1	
			ATTACHING PARTS		
	S1950-1-E		SCREW	AR	
			---•---		
-15	0715032-3	¤	MOLDING-LH	1	
-16	0715032-4	¤	MOLDING-RH	1	
			ATTACHING PARTS		
	S1950-1-E		SCREW	AR	
			---•---		
-17	0700668-13	#	WINDLACE-FWD	2	
-18	0700668-14	#	WINDLACE-AFT	2	
-19	0715028-54	#	AFT CABIN SIDE PANEL-LH	1	
-20	0715028-64	#	AFT CABIN SIDE PANEL-RH	1	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	AR	
			---•---		
	0514079-1	#	ARMREST ASSEMBLY-LH	1	
-21	0514079-2	#	ARMREST ASSEMBLY-RH	1	
			ATTACHING PARTS		
	AN520-10R20		SCREW	2	
			---•---		
-22	S1957-2		ASH RECEIVER	1	
-23	0700702-5	¤	PANEL-BAGGAGE DOOR	1	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	8	
			---•---		
-24	0715023-16	¤	AFT PANEL ASSY-RH	1	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	AR	
			---•---		
-24A	0715028-30	¤	PANEL-RH	1	
-25	0715023-3	¤	AFT PANEL-LH	1	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	AR	
			---•---		
-26	0715023-1	¤	PANEL ASSEMBLY-AFT WALL	1	
-27	1215042-1		RETAINING NET	1	
			ATTACHING PARTS		
-28	1211203-1		EYEBOLT	6	
-29	1200127-1		WASHER	6	
			---•---		
-30	0700654-15	#	CARPET ASSEMBLY-TUNNEL LH	1	
-31	0700654-14	#	CARPET ASSEMBLY-TUNNEL LH	1	
-32	0700654-17	#	CARPET ASSEMBLY-RUDDER PEDAL SHIELD LH	1	
	0713715-1		SHIELD-RUDDER PEDAL LH	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	8	
			---•---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
470-33	0700654-10	#	CARPET ASSEMBLY-RUDDER BAR SHIELD RH	1	
	0700654-16	#	CARPET ASSEMBLY-RUDDER PEDAL SHIELD DUAL CONTROLS ONLY	1	
	0713703-1		SHIELD-RUDDER BAR RH	1	
	0713715-2		SHIELD-RUDDER PEDAL DUAL CONTROLS ONLY	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	6	
	AN515-8R6		SCREW	1	
	NAS620-8		WASHER	1	
	NAS1022A08		NUT	1	
			---*---		
-34	0713703-2		RETAINER-CARPET RH	1	
			ATTACHING PARTS		
-35	S1023Z8-88		SCREW	3	
			---*---		
-36	0700694-22	#	CARPET ASSEMBLY-FWD	1	
-37	0700654-23	#	CARPET ASSEMBLY-AFT	1	
-38	0311623-1		SCUFF PLATE-BAGGAGE DOOR	1	
			ATTACHING PARTS		
-39	S1021Z4-4		SCREW	3	
			---*---		
			NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.		
			NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.		
			A---182 SERIAL 18261426 THRU 18262465		

Soundproofing (Cont)

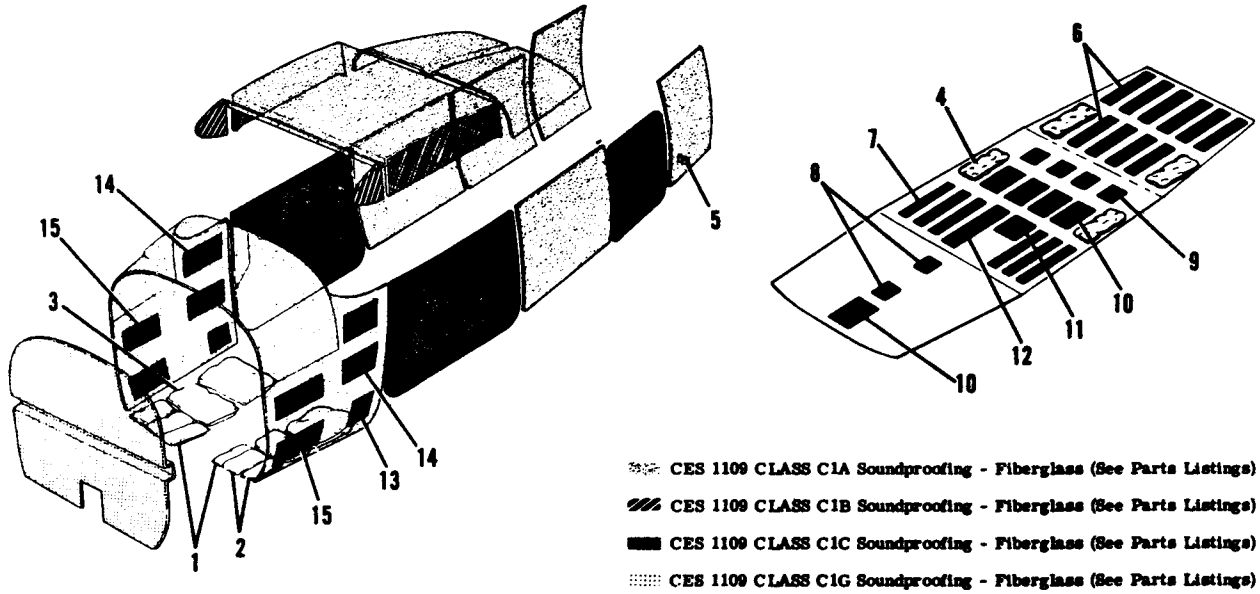



Figure 47E. Fuselage Soundproofing Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
47E-		SOUNDPROOFING INSTALLATION-FUSELAGE	NP	A
- 1	0700762-6	BAG-SOUNDPROOFING	2	
- 2	0700762-5	BAG-SOUNDPROOFING	4	
- 3	0700762-4	BAG-SOUNDPROOFING	4	
- 4	0700762-21	BAG-SOUNDPROOFING	4	
- 5	0700762-9	SEAL-BAGGAGE DOOR	1	
- 6	0700762-22	PANEL-SOUNDPROOFING	10	
- 7	0700762-23	PANEL-SOUNDPROOFING	6	
- 8	1200217-4	PANEL-SOUNDPROOFING	2	
- 9	1200217-5	PANEL-SOUNDPROOFING	4	
-10	1200217-26	PANEL-SOUNDPROOFING	5	
-11	1700127-1	PANEL-SOUNDPROOFING	1	
-12	1700127-4	PANEL-SOUNDPROOFING	1	
-13	1200127-7	PANEL-SOUNDPROOFING	2	
-14	1200127-8	PANEL-SOUNDPROOFING	4	
-15	1200127-9	PANEL-SOUNDPROOFING	4	
	CES1109CLASSC1A*	SOUNDPROOFING-FIBERGLASS MAT 1 IN. THICK BKI	AR	
	CES1109CLASSC1B*	SOUNDPROOFING-FIBERGLASS MAT 1 IN. THICK BKI	AR	
	CES1109CLASSC1C*	SOUNDPROOFING-FIBERGLASS MAT 1/2 IN. THICK BKI	AR	
	CES1109CLASSC1G*	SOUNDPROOFING-FIBERGLASS MAT 1 IN. THICK BKI	AR	
	CES1109CLASSC1H*	SOUNDPROOFING-FIBERGLASS MAT 1 IN. THICK BKI	AR	
	CES1109CLASSC4 *	SOUNDPROOFING-POLYMERIC SHEET .035 IN. THICK BKI	AR	

NOTE. *GIVE DIMENSIONS WHEN ORDERING.

A---182 SERIAL 18253599 THRU 18262465
A182 SERIAL A182-0001 & ON

Front Seat

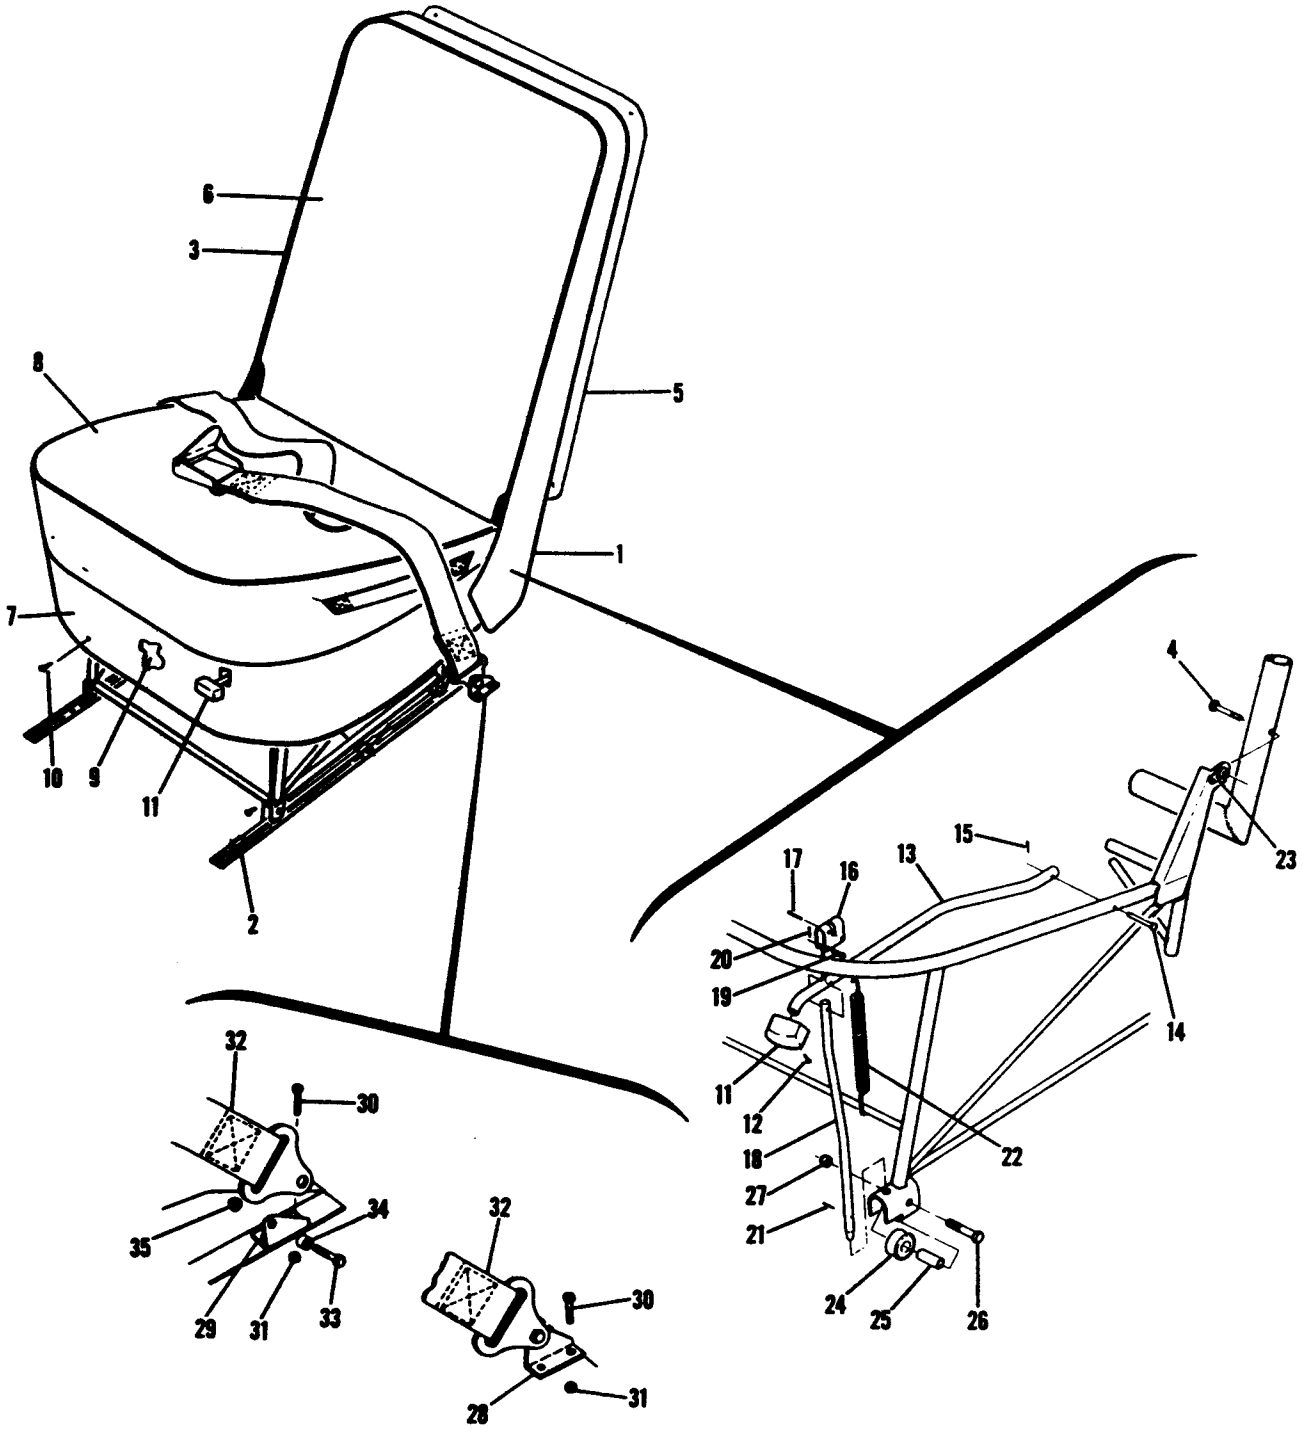


182 SERIAL 18253599 THRU 18254423

Figure 48. Front Seat Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
48 -		SEAT INSTALLATION-FRONT	NP	A
- 1	0700659-1	SEAT ASSEMBLY-FRONT	2	
		ATTACHING PARTS		
- 2	0713074-1	STOP-SEAT	2	
	MS24665-151	PIN-COTTER	2	
	MS20392-1C21	PIN-CLEVIS	2	
		---*---		
- 3	0700659-5	BACK ASSEMBLY-FRONT SEAT UPHOLSTERED	1	
		ATTACHING PARTS		
- 4	AN4-13A	BOLT	2	
		---*---		
- 5	0700105-425	PANEL ASSEMBLY-SEAT BACK	1	
- 6	0700659-9	COVER ASSEMBLY-SEAT BACK	1	
- 7	0700659-3	BOTTOM ASSEMBLY-FRONT SEAT UPHOLSTERED	1	
- 8	0700659-7	COVER ASSEMBLY-SEAT BOTTOM	1	
- 9	0500104-89	SKIRT	1	
		ATTACHING PARTS		
-10	S1021Z4-6	SCREW	11	
		---*---		
-11	0700113-1	KNOB-SEAT LATCH HANDLE	1	
		ATTACHING PARTS		
-12	S1021Z6-8	SCREW	1	
		---*---		
-13	0710316-2	HANDLE-SEAT LATCH	1	
		ATTACHING PARTS		
-14	MS20392-2C31	PIN-FLAT HEAD	1	
-15	MS24665-134	PIN-COTTER	1	
		---*---		
-16	0311644	CLEVIS	1	
		ATTACHING PARTS		
-17	MS24665-285	PIN-COTTER	1	
		---*---		
-18	0710304-3	PIN-SEAT LATCH	1	
		ATTACHING PARTS		
-19	MS20392-1C15	PIN-FLAT HEAD	1	
-20	MS24665-134	PIN-COTTER	1	
-21	MS24665-132	PIN-COTTER	1	
		---*---		
-22	0310196-16	SPRING	1	
-23	NAS682-A4	NUT PLATE ATTACH SEAT BACK	2	
-24	0311310	ROLLER	4	
		ATTACHING PARTS		
-25	0311586	BUSHING	1	
-26	AN3-11A	BOLT	1	
-27	MS21044N3	NUT	1	
		---*---		
-28	0510205-2	BRACKET-SAFETY BELT ATTACHMENT LH OUTBD & RH INBD	2	
-29	0510205-1	BRACKET-SAFETY BELT ATTACHMENT RH OUTBD & LH INBD	2	
		ATTACHING PARTS		
-30	AN3-4A	BOLT	2	
-31	MS21044N3	NUT	2	
	0710632-1	PLATE-SEAT BELT BRACKET	1	
		---*---		
-32	S1060-15	BELT ASSEMBLY-SEAT	2	
		ATTACHING PARTS		
-33	AN4-5A	BOLT	2	
-34	NAS43HT4-20	SPACER	2	
-35	NAS679A4	NUT	2	
		---*---		
		A---182 SERIAL 18253599 THRU 18254423		

Front Seat (Cont)

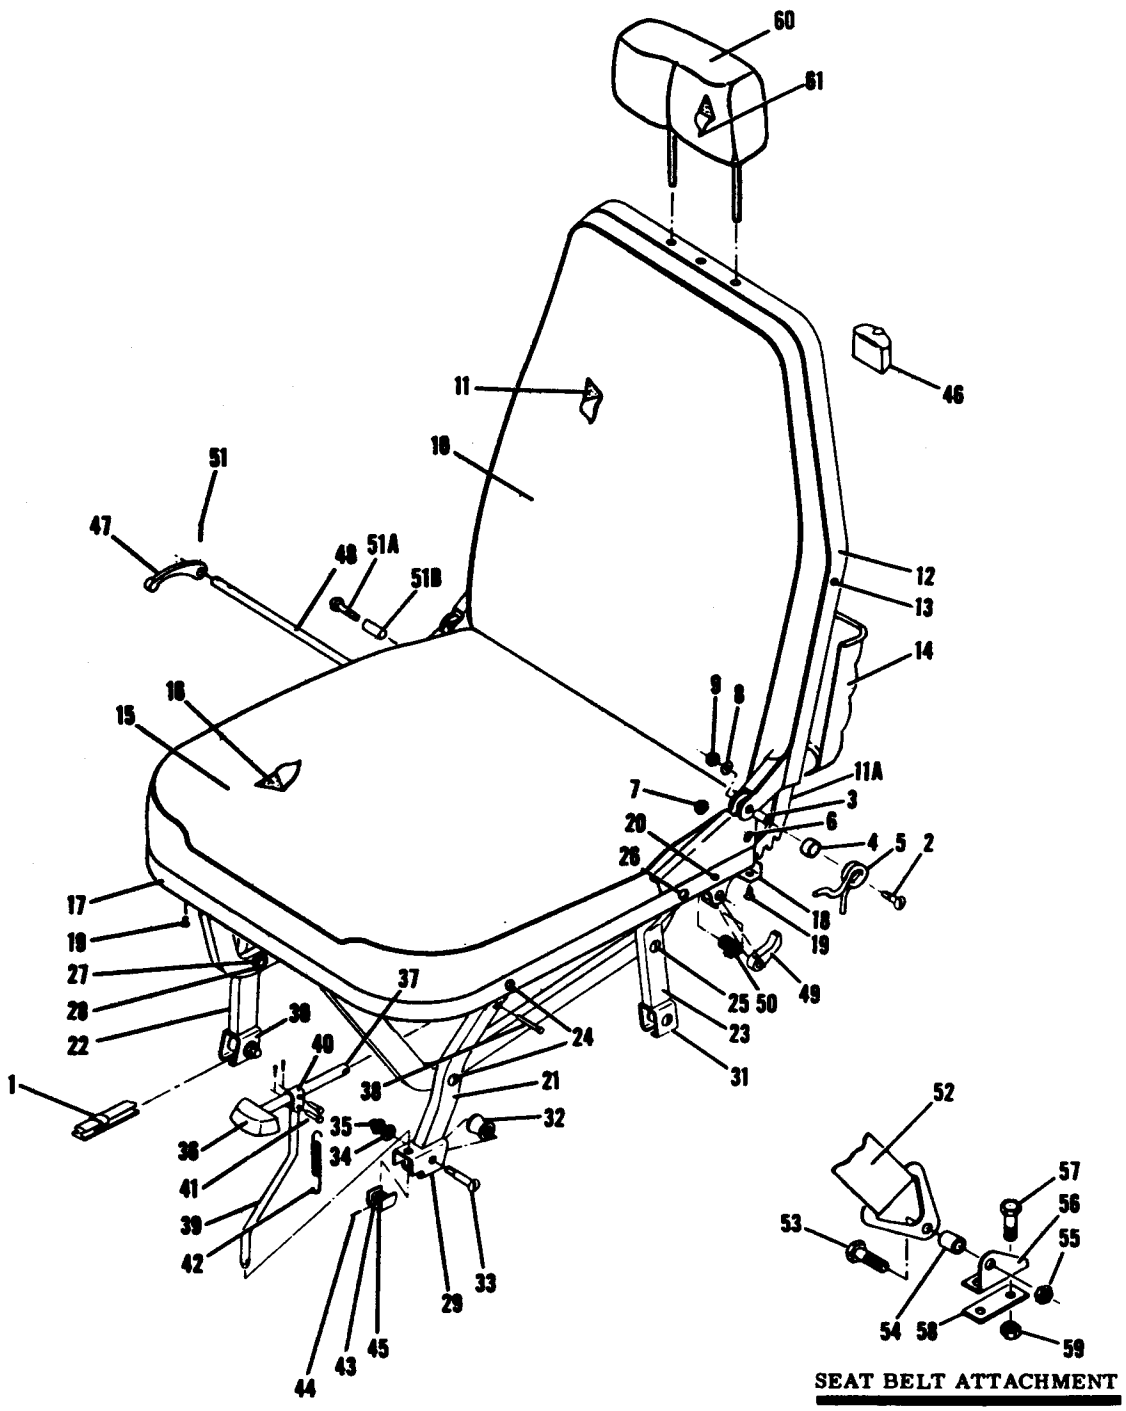

SEAT BELT ATTACHMENT

182 SERIAL 18254424 THRU 18258505

Figure 49. Pilot & Co-pilot Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
49 -			PILOT & CO-PILOT SEAT INSTALLATION	NP	A
	0700678-2	#	SEAT ASSEMBLY-PILOT & CO-PILOT	2	
			ATTACHING PARTS		
- 1	0713074-1		STOP-SEAT	2	
	MS20392-1C21		PIN	2	
	MS24665-151		PIN-COTTER	2	
			---*---		
	0700678-203	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	
			ATTACHING PARTS		
- 2	AN23-16		BOLT	2	
- 3	1414104-4		BUSHING	2	
- 4	0711668-1		BUSHING	2	
- 5	0711667-1		SPRING	2	
- 6	AN507-832R14		SCREW	2	
- 7	NAS679A08		NUT	2	
- 8	AN960-10L		WASHER	2	
- 9	S1914-8		NUT EN	2	
			---*---		
-10	0700678-9	#	COVER-SEAT BACK	1	
-11	1414100-9		CUSHION-SEAT BACK	1	
-11A	1414230-1		CAM-SEAT BACK RECLINE	2	C
	1414212-11		CAM-SEAT BACK RECLINE	2	B
-12	0715001-1	¤	TRIM-SEAT BACK	1	
			ATTACHING PARTS		
-13	S1021Z8-6C		SCREW	3	
			---*---		
-14	1715023-3	¤	POCKET ASSEMBLY-MAGAZINE	1	
	1414045-2		SPRING	1	B
	0700678-201	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT	1	
-15	0700678-10	#	COVER-SEAT BOTTOM	1	
-16	1414100-8		CUSHION-SEAT BOTTOM	1	
-17	1414217-2		RETAINER-SEAT BOTTOM	1	
-18	1414217-3		RETAINER-SEAT BOTTOM	1	
-19	S1021Z6-4		SCREW	14	
-20	AN23-15A		BOLT-SEAT BACK STOP	2	
	MS21044N3		NUT	2	
-21	1414103-2		LEG ASSEMBLY-FORWARD L.H.	1	
-22	1414103-12		LEG ASSEMBLY-FORWARD R.H.	1	
-23	1414103-6		LEG-SEAT AFT	2	
			ATTACHING PARTS		
-24	AN24-13		BOLT-FORWARD LEG	2	
-25	AN24-13		BOLT-AFT LEG	1	
-26	AN24-16		BOLT-AFT LEG	1	
-27	AN936A416		WASHER	2	
	AN936A616		WASHER	2	
-28	1414112-1		NUT	2	
			---*---		
-29	1414104-39		HOUSING-SEAT ROLLER FORWARD L.H.	1	
-30	1414104-40		HOUSING-SEAT ROLLER FORWARD R.H.	1	
-31	1414104-41		HOUSING-SEAT ROLLER AFT L.H.	1	
	1414104-42		HOUSING-SEAT ROLLER AFT R.H.	1	
-32	1414100-212		KIT-SEAT ROLLER	4	
			ATTACHING PARTS		
-33	AN23-19A		BOLT	1	
-34	AN960-10L		WASHER	1	
-35	S1914-8		NUT EN	1	
			---*---		
-36	0700113-1		KNOB-FORE & AFT SEAT ADJUSTMENT	1	
	S1021Z6-8		SCREW	1	
-37	1414104-45		ARM-SEAT ADJUSTMENT	1	
			ATTACHING PARTS		
-38	MS20392-2C47		PIN	1	
	MS24665-132		PIN-COTTER	1	
			---*---		
-39	1414104-46		PIN-SEAT ADJUSTMENT	1	
-40	1414104-2		CLAMP	1	
-41	MS20392-1C15		PIN	2	
	MS24665-132		PIN-COTTER	2	
-42	1414116-1		SPRING-SEAT ADJUSTMENT	1	
-43	AN960C416L		WASHER	1	
-44	NAS561-2-12		PIN	1	
-45	1414104-8		BRACKET-SEAT ADJUSTMENT	1	
-46	S1957-2		ASH RECEIVER-SEAT BACK	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
49 -47	0710312-2	HANDLE-RECLINING ADJUSTMENT	1	
-48	1414104-1	TUBE-SEAT ADJUSTMENT TORQUE	1	
-49	1414231-1	PAWL-SEAT ADJUSTMENT	2	B
	1414231-3	PAWL-SEAT ADJUSTMENT	2	E
	1414231-4	PAWL-SEAT ADJUSTMENT	2	F
-50	1414107-1	SPRING-SEAT ADJUSTMENT	1	
-51	NAS561C3-10	PIN	3	
-51A	AN23-19A	BOLT HANDLE STOP	1	
-51B	NAS43HT3-16	SPACER HANDLE STOP	1	
	MS21044N3	NUT HANDLE STOP	1	
-52	S1746B2	BELT ASSEMBLY-FRONT SEAT BLACK	2	D
	S1746D2	BELT ASSEMBLY-FRONT SEAT TAN	2	G
	S1746J2	BELT ASSEMBLY-FRONT SEAT RED	2	G
	S1746K2	BELT ASSEMBLY-FRONT SEAT AVACADO	2	G
	S1746M2	BELT ASSEMBLY-FRONT SEAT BLUE	2	G
		ATTACHING PARTS		
-53	AN4-6A	BOLT	2	
-54	NAS43HT4-22	SPACER	2	
-55	NAS679A4	NUT	2	
		---*---		
-56	0510205-1	FITTING-SEAT BELT INBOARD LH & OUTBOARD RH	2	
	0510205-2	FITTING-SEAT BELT OUTBOARD LH & INBOARD RH	2	
		ATTACHING PARTS		
-57	AN3-4A	BOLT	2	
-58	0710632-1	PLATE	1	
-59	MS21044N3	NUT	2	
		---*---		
	1414252-1	HEADREST ASSEMBLY	2	
-60	1414252-7	CUSHION-HEADREST	1	
-61	1414252-6	COVER-HEADREST	1	

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.


NOTE. *THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18254424 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
B---182 SERIAL 18254424 THRU 18254747
C---182 SERIAL 18254748 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
D---182 SERIAL 18254424 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
E---182 SERIAL 18254748 THRU 18256738
F---182 SERIAL 18256739 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
G---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
49A-			PILOT & CO-PILOT SEAT INSTALLATION	NP	A
	0700678-22	#	SEAT ASSEMBLY-PILOT & CO-PILOT	2	B
	1214051-1	#	SEAT ASSEMBLY-PILOT & CO-PILOT	2	D
	1214051-5	#	SEAT ASSEMBLY-PILOT & CO-PILOT	2	E
			ATTACHING PARTS		
- 1	0713074-1		STOP-SEAT	2	
	MS20392-1C21		PIN-CLEVIS	2	
	MS24665-151		PIN-COTTER	2	
			---*---		
	0700678-200	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	B
	1214051-200	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	D
	1214051-202	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	E
			ATTACHING PARTS		
- 2	AN23-19A		BOLT	2	
- 3	1414104-4		BUSHING	2	
- 4	0711668-1		BUSHING	2	
- 5	0711667-1		SPRING	2	
	NAS43HT3-12		SPACER	2	
- 6	AN960-10L		WASHER	2	
- 7	S1914-8		NUT EN	2	
- 8	AN507-832R14		SCREW	2	
- 9	NAS679A08		NUT	2	
			---*---		
-10	0700678-9	#	COVER-SEAT BACK	1	B
	1214050-3	#	COVER-SEAT BACK	1	D
	1514051-6	#	COVER-SEAT BACK	1	E
-11	1414100-9		CUSHION-SEAT BACK	1	B
	1214050-5		CUSHION-SEAT BACK	1	D
-12	1414230-1		CAM-SEAT BACK RECLINE	2	
-13	1414110-1	¤	TRIM-SEAT BACK	1	B
	0514055-1	¤	TRIM-SEAT BACK	1	D
	0514055-11	¤	TRIM-SEAT BACK	1	E
			ATTACHING PARTS		
-14	S1021Z8-6C		SCREW	3	
			---*---		
-15	1414110-3	¤	POCKET ASSEMBLY-MAGAZINE	1	
	0700678-202	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT	1	B
	1214051-201	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT	1	D
	1214051-203	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT	1	E
-16	0700678-10	#	COVER-SEAT BOTTOM	1	B
	1214051-2	#	COVER-SEAT BOTTOM	1	D
	1214051-7	#	COVER-SEAT BOTTOM	1	E
-17	1414100-8		CUSHION-SEAT BOTTOM	1	B
	1214051-3		CUSHION-SEAT BOTTOM	1	C
-18	1414217-2		RETAINER-SEAT BOTTOM	1	B
	0514058-1		RETAINER-SEAT BOTTOM	1	C
-19	1414217-3		RETAINER-SEAT BOTTOM	1	
-20	AN23-15A		BOLT-SEAT BACK STOP	2	
	MS21044N3		NUT	2	
-21	1414103-2		LEG ASSEMBLY-FORWARD LH	1	
-22	1414103-45		LEG ASSEMBLY-FORWARD RH	1	
-23	1414103-6		LEG-SEAT AFT	2	
			ATTACHING PARTS		
-24	AN24-13A		BOLT-FORWARD LEG	2	
-25	AN24-13A		BOLT-AFT LEG	1	
-26	AN24-16A		BOLT-AFT LEG	1	
-27	AN936A416		WASHER	2	
	AN936A616		WASHER	2	
-28	1414112-1		NUT	2	
			---*---		
-29	1414104-39		HOUSING-SEAT ROLLER FORWARD LH	1	
-30	1414104-40		HOUSING-SEAT ROLLER FORWARD RH	1	
-31	1414104-41		HOUSING-SEAT ROLLER AFT LH	1	
	1414104-42		HOUSING-SEAT ROLLER AFT RH	1	
-32	1414100-212		KIT-SEAT ROLLER	4	
			ATTACHING PARTS		
-33	AN23-19A		BOLT	1	
-34	AN960-10L		WASHER	1	
-35	S1914-8		NUT	1	
			---*---		
-36	1200504-1		HANDLE-FORE & AFT SEAT ADJUSTMENT	1	
			ATTACHING PARTS		
-37	MS20392-2C43		PIN	1	
	MS24665-132		PIN-COTTER	1	
			---*---		

CONTINUED ON NEXT PAGE

Seat (Cont)

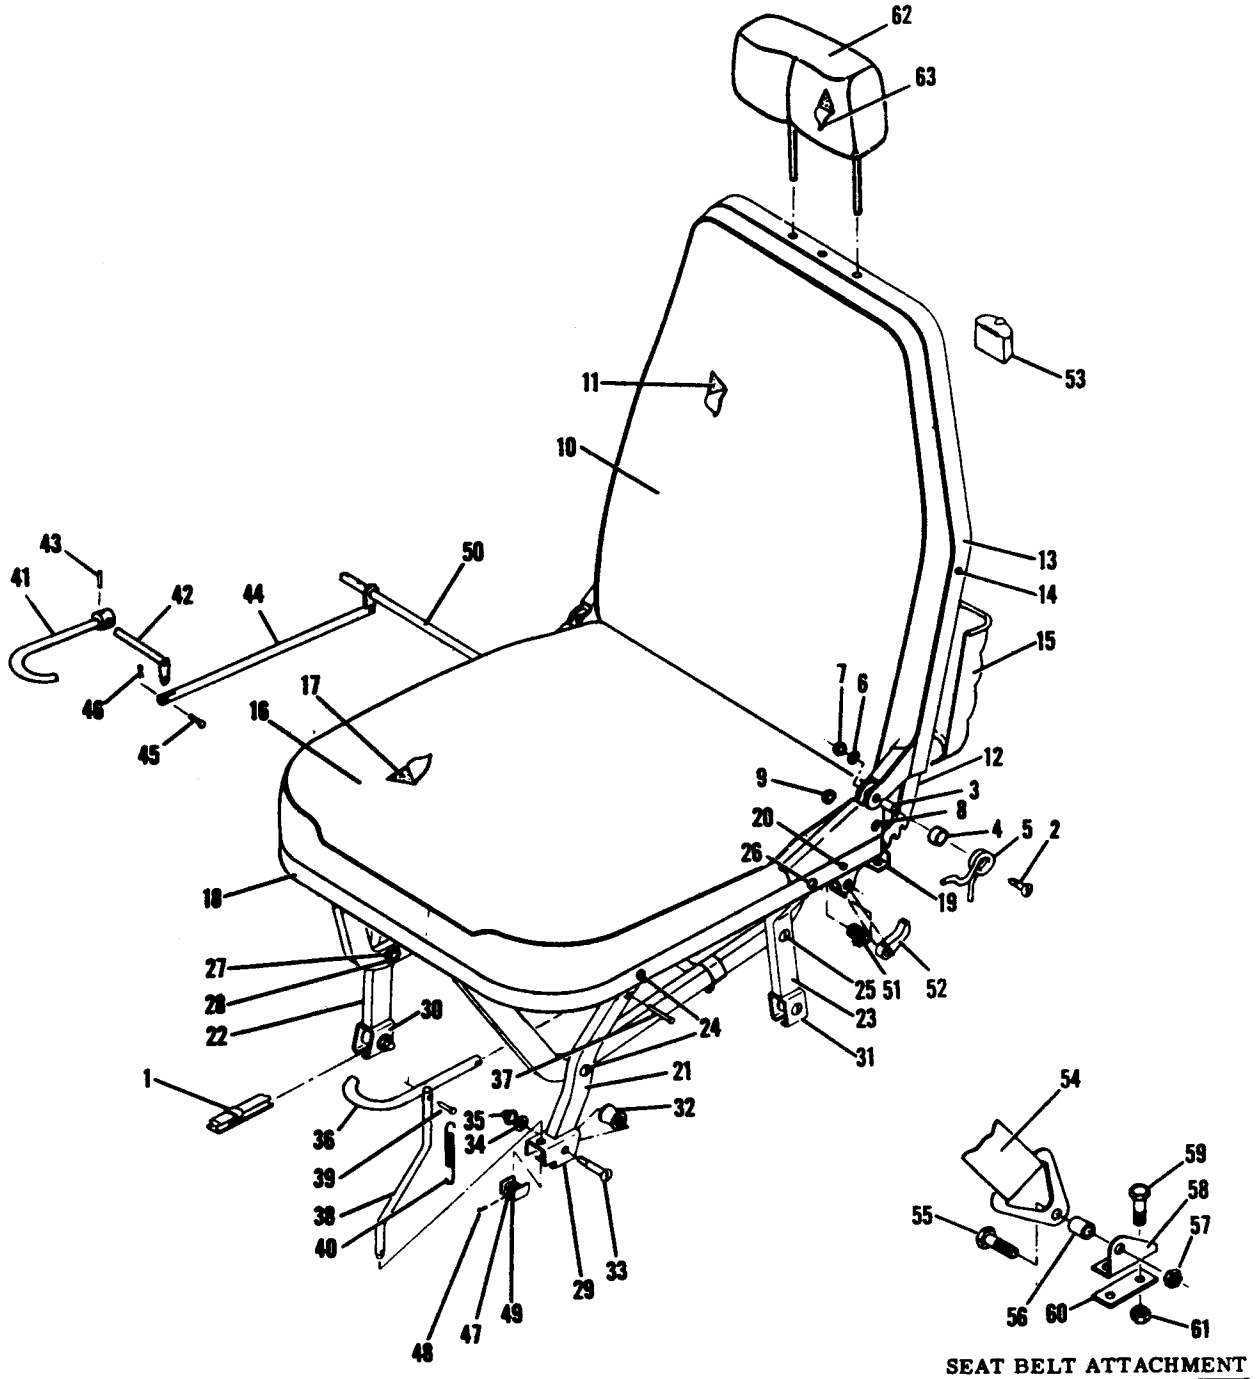

SEAT BELT ATTACHMENT

182 SERIAL 18258506 THRU 18260825

Figure 49A. Pilot & Co-Pilot Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
49A-38	1200505-1		PIN-SEAT ADJUSTMENT	1	
			ATTACHING PARTS		
-39	MS20392-1C21		PIN	1	
	MS24665-132		PIN-COTTER	1	
-40	1414116-1		SPRING-SEAT ADJUSTMENT	1	
			---*---		
-41	1200504-3		HANDLE ASSY-RECLINING ADJUSTMENT	1	
-42	1200503-1		ARM ASSY-SEAT BACK ADJUSTMENT	1	
			ATTACHING PARTS		
-43	NAS561-3-8		PIN	1	
			---*---		
-44	1514223-28		LINK-SEAT BACK ADJUSTMENT	1	
-45	MS20392-1C9		PIN	2	
-46	MS24665-132		PIN-COTTER	2	
-47	AN960C416L		WASHER	1	
-48	NAS561-2-12		PIN	1	
-49	1414104-8		BRACKET-SEAT ADJUSTMENT	1	
-50	1414223-34		TUBE ASSY-SEAT ADJUSTMENT TORQUE	1	
-51	1414107-1		SPRING-SEAT ADJUSTMENT	1	
-52	1414231-4		PAWL	2	B
	0514043-1		PAWL	2	C
	NAS561C3-10		PIN	2	
-53	S1957-2		ASH RECEIVER-SEAT BACK	1	
-54	S1746D2		BELT ASSEMBLY-FRONT SEAT TAN	2	B
	S1746J2		BELT ASSEMBLY-FRONT SEAT APPLE RED	2	B
	S1746M2		BELT ASSEMBLY-FRONT SEAT BLUE	2	B
	S1746K2		BELT ASSEMBLY-FRONT SEAT AVACADO	2	B
	S1746T2		BELT ASSEMBLY-FRONT SEAT MARIGOLD	2	D
	S1746V2		BELT ASSEMBLY-FRONT SEAT OLIVE	2	D
	S1746W2		BELT ASSEMBLY-FRONT SEAT BROWN	2	D
	S1746Y2		BELT ASSEMBLY-FRONT SEAT BLUE	2	D
	S2070W103	%*	BELT ASSEMBLY-FRONT SEAT BROWN	2	E
	S2070H103	%*	BELT ASSEMBLY-FRONT SEAT BLUE	2	E
	S2070F103	%*	BELT ASSEMBLY-FRONT SEAT RED	2	E
	S2070G103	%*	BELT ASSEMBLY-FRONT SEAT GREEN	2	E
	S20708103	%*	BELT ASSEMBLY-FRONT SEAT BLACK	2	E
			ATTACHING PARTS		
-55	AN4-5A		BOLT	2	
-56	NAS43HT4-20		SPACER	2	
-57	NAS679A4		NUT	2	
			---*---		
-58	0510205-1		FITTING-SEAT BELT INBOARD LH & OUTBOARD RH	2	
	0510205-2		FITTING-SEAT BELT OUTBOARD LH & INBOARD RH	2	
			ATTACHING PARTS		
-59	AN3-4A		BOLT	2	
-60	0710632-1		PLATE	1	
-61	MS21044N3		NUT	2	
			---*---		
-62	1714040-1		HEADREST ASSEMBLY	2	B
	1714040-5	#	HEADREST ASSEMBLY SKYLANE ONLY	2	B
	0514048-2	#	HEADREST ASSEMBLY	2	C
-63	1714040-2		COVER-HEADREST	1	B
	1714040-6	#	COVER-HEADREST SKYLANE	1	B
	0514048-10	#	COVER-HEADREST	1	C

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.


NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.


NOTE. *SEE FIGURE 56 FOR SHOULDER HARNESS INSTL.

NOTE. %WHEN ORDERING SEAT BELTS FOR AUSTRALIAN USE ADD VH TO PART NUMBER. EXAMPLE-S2070W103VH.

A---182 SERIAL 18258506 THRU 18260825
A182 SERIAL A182-0097 & ON
B---182 SERIAL 18258506 THRU 18260055
A182 SERIAL A182-0097 THRU A182-0116
C---182 SERIAL 18260056 THRU 18260825
A182 SERIAL A182-0117 & ON
D---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 & ON
E---182 SERIAL 18260446 THRU 18260825

Front Seat (Cont)

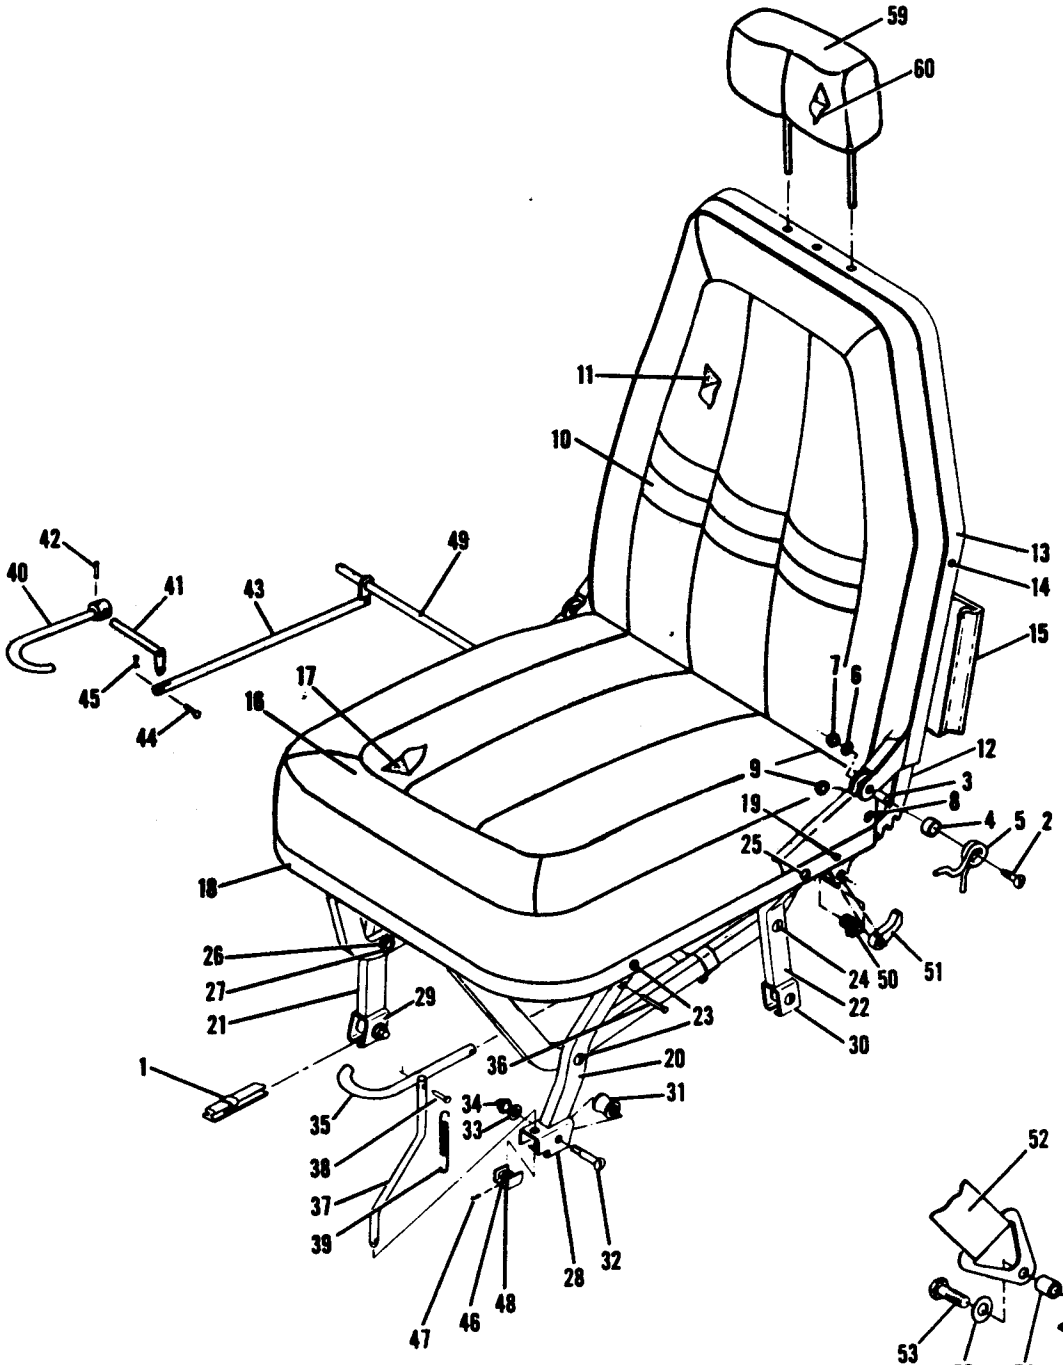

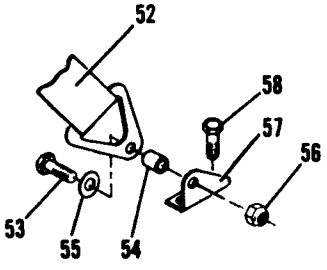

SEAT BELT ATTACHMENT

182 SERIAL 18260826 THRU 18261425

Figure 49B. Pilot & Co-Pilot Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
498-			PILOT & CO-PILOT SEAT INSTALLATION	NP	A
	0714004-3	#	SEAT ASSEMBLY-PILOT & CO-PILOT	2	
			ATTACHING PARTS		
- 1	0713074-1		STOP-SEAT	1	
	MS20392-1C21		PIN-CLEVIS	1	
	MS24665-151		PIN-COTTER	1	
			---*---		
			BACK ASSEMBLY-UPHOLSTERED SEAT	NP	
			ATTACHING PARTS		
- 2	AN23-19A		BOLT	2	
- 3	1414104-4		BUSHING	2	
- 4	0711668-1		BUSHING	2	
- 5	0711667-1		SPRING	2	
	NAS43HT3-12		SPACER	2	
- 6	AN960-10L		WASHER	2	
- 7	S1914-8		NUT EN	2	
- 8	AN507-832R14		SCREW	2	
- 9	NAS679A08		NUT	2	
			---*---		
-10	0714004-7	#	COVER ASSEMBLY-SEAT BACK	1	
-11	0500210-155		CUSHION-SEAT BACK	1	
-12	1414230-1		CAM-SEAT BACK RECLINE	1	
-13	0514076-1	¤	TRIM ASSEMBLY-SEAT BACK	1	
			ATTACHING PARTS		
-14	S1021A4-6		SCREW	5	
			---*---		
-15	1214062-5	#	POCKET ASSEMBLY-MAGAZINE	1	
			ATTACHING PARTS		
	S1021A4-6		SCREW	2	
			---*---		
			BOTTOM ASSEMBLY-UPHOLSTERED SEAT	NP	
-16	0714004-6	#	COVER ASSEMBLY-SEAT BOTTOM	1	
-17	0514075-2		CUSHION ASSEMBLY-SEAT BOTTOM	1	
-18	0514058-1	¤	RETAINER-SEAT BOTTOM	1	
-19	AN23-15A		BOLT-SEAT BACK STOP	2	
	MS20364-1032		NUT	2	
-20	1414103-2		LEG ASSEMBLY-FWD LH SEAT	1	
-21	1414103-45		LEG ASSEMBLY-FWD RH SEAT	1	
-22	1414103-6		LEG-AFT SEAT	2	
			ATTACHING PARTS		
-23	AN24-13A		BOLT-FORWARD LEG	2	
-24	AN24-13A		BOLT-AFT LEG	1	
-25	AN24-16A		BOLT-AFT LEG	1	
-26	AN936A416		WASHER UNDER BOLT HEAD	2	
	AN936A616		WASHER UNDER NUT	2	
-27	1414112-1		NUT	2	
			---*---		
-28	1414104-39		HOUSING-SEAT ROLLER FORWARD LH	1	
-29	1414104-40		HOUSING-SEAT ROLLER FORWARD RH	1	
-30	1414104-41		HOUSING-SEAT ROLLER AFT LH	1	
	1414104-42		HOUSING-SEAT ROLLER AFT RH	1	
-31	1414100-212		KIT-SEAT ROLLER	4	
			ATTACHING PARTS		
-32	AN23-19A		BOLT	1	
-33	AN960-10L		WASHER	1	
-34	S1914-8		NUT	1	
			---*---		
-35	1200504-1		HANDLE-FORE & AFT SEAT ADJUSTMENT	1	
			ATTACHING PARTS		
-36	MS20392-2C43		PIN	1	
	MS24665-132		PIN-COTTER	1	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
498-37	1200505-1		PIN-SEAT ADJUSTMENT	1	
			ATTACHING PARTS		
-38	MS20392-1C21		PIN	1	
	MS24665-132		PIN-COTTER	1	
			---•---		
-39	1414116-1		SPRING-SEAT ADJUSTMENT	1	
-40	1200504-3		HANDLE ASSY-RECLINING ADJUSTMENT	1	
-41	1200503-1		ARM ASSY-SEAT BACK ADJUSTMENT	1	
			ATTACHING PARTS		
-42	NAS561-3-8		PIN	1	
			---•---		
-43	1514223-28		LINK-SEAT BACK ADJUSTMENT	1	
			ATTACHING PARTS		
-44	MS20392-1C9		PIN	2	
-45	MS24665-132		PIN-COTTER	2	
			---•---		
-46	AN960C416L		WASHER	1	
-47	NAS561-2-12		PIN	1	
-48	1414104-8		BRACKET-SEAT ADJUSTMENT	1	
-49	1414223-34		TUBE ASSY-SEAT ADJUSTMENT TORQUE	1	
-50	1414107-1		SPRING-SEAT ADJUSTMENT	1	
-51	0514043-1		PAWL	2	
			ATTACHING PARTS		
	NAS561C3-10		PIN	1	
			---•---		
-52	S2070W103	%*	BELT ASSEMBLY-FRONT SEAT JAVA GOLD	2	
	S2070L103	%*	BELT ASSEMBLY-FRONT SEAT BOGOTA BLUE	2	
	S2070C103	%*	BELT ASSEMBLY-FRONT SEAT CYPRUS GREEN	2	
	S2070A103	%*	BELT ASSEMBLY-FRONT SEAT TAHITIAN RED	2	
	S2070B103	%*	BELT ASSEMBLY-FRONT SEAT BLACK	2	
			ATTACHING PARTS		
-53	AN4-5A		BOLT	2	
-54	NAS43HT4-12		SPACER	2	
-55	AN960-416L		WASHER	2	
-56	NAS679A4		NUT	2	
			---•---		
-57	0510205-5		FITTING-SEAT BELT INBD LH & OUTBD RH	2	
	0510205-6		FITTING-SEAT BELT OUTBD LH & INBD RH	2	
			ATTACHING PARTS		
-58	AN3-4A		BOLT	2	
			---•---		
-59	0514048-2	#	HEADREST ASSY	2	
-60	0514048-10	#	COVER-HEADREST	1	

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.

NOTE. %THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

NOTE. *SEE FIGURE 56 FOR SHOULDER HARNESS INSTL.


NOTE. ZWHEN ORDERING SEAT BELTS FOR AUSTRALIAN USE, ADD VH TO PART NUMBER. EXAMPLE-S2070W103VH.

A---182 SERIAL 18260826 THRU 18261425

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
49C-			PILOT & CO-PILOT SEAT INSTL STANDARD	NP	A
	0714008-3	#	SEAT ASSEMBLY-PILOT & CO-PILOT	1	
			ATTACHING PARTS		
- 1	0713074-1		STOP-SEAT	2	
	MS20392-1C21		PIN-CLEVIS	2	
	MS24665-151		PIN-COTTER	2	
			---*---		
			BACK ASSEMBLY-UPHOLSTERED SEAT	NP	
			ATTACHING PARTS		
- 2	AN23-19A		BOLT	2	
- 3	1414104-4		BUSHING	2	
- 4	0711668-1		BUSHING	2	
- 5	0711667-1		SPRING	2	
	NAS43HT3-12		SPACER	2	
- 6	AN960-10L		WASHER	2	
- 7	S1914-8		NUT EN	2	
- 8	AN507-832R14		SCREW	2	
- 9	NAS679A08		NUT	2	
			---*---		
-10	0714008-7	#	COVER ASSEMBLY-SEAT BACK	1	
-11	0714008-10		CUSHION ASSY-SEAT BACK	1	
-12	1414230-1		CAM-SEAT BACK RECLINE	1	
-13	0514076-1	¤	TRIM ASSY-SEAT BACK	1	
			ATTACHING PARTS		
-14	S1021A4-6		SCREW	5	
			---*---		
-15	1214062-5	#	POCKET ASSY-MAGAZINE	1	
			ATTACHING PARTS		
	S1021A4-6		SCREW	2	
			---*---		
			BOTTOM ASSEMBLY-UPHOLSTERED SEAT	NP	
-16	0714008-6	#	COVER ASSY-SEAT BOTTOM	1	
-17	0514075-2		CUSHION ASSY-SEAT BOTTOM	1	
-18	0514058-1	¤	RETAINER-SEAT BOTTOM	1	
			ATTACHING PARTS		
	S1021A4-6		SCREW	5	
			---*---		
-19	AN23-15A		BOLT	2	
	MS20364-1032		NUT	2	
-20	1414103-2		LEG ASSY-FWD LH	1	
-21	1414103-45		LEG ASSY-FWD RH	1	
-22	1414103-6		LEG-AFT SEAT	2	
			ATTACHING PARTS		
-23	AN24-13A		BOLT-FORWARD LEG	2	
-24	AN24-13A		BOLT-AFT LEG LOWER	1	
-25	AN24-16A		BOLT-AFT LEG UPPER	1	
-26	AN936A416		WASHER UNDER BOLT HEAD	2	
	AN936A616		WASHER UNDER NUT	2	
-27	1414112-1		NUT	2	
			---*---		
-28	1414104-39		HOUSING-SEAT ROLLER FWD LH	1	
-29	1414104-61		HOUSING-SEAT ROLLER FWD RH	1	
-30	1414104-41		HOUSING-SEAT ROLLER AFT LH	1	
	1414104-42		HOUSING-SEAT ROLLER AFT RH	1	
-31	1414100-212		KIT-SEAT ROLLER	4	
			ATTACHING PARTS		
-32	AN23-19A		BOLT	1	
-33	AN960-10L		WASHER	1	
-34	S1914-8		NUT	1	
			---*---		
-35	0514052-1		HANDLE ASSY-SEAT ADJUST	1	
			ATTACHING PARTS		
-36	MS20392-2C43		PIN	1	
	MS24665-132		PIN-COTTER	1	
			---*---		

CONTINUED ON NEXT PAGE

Front Seat (Cont)

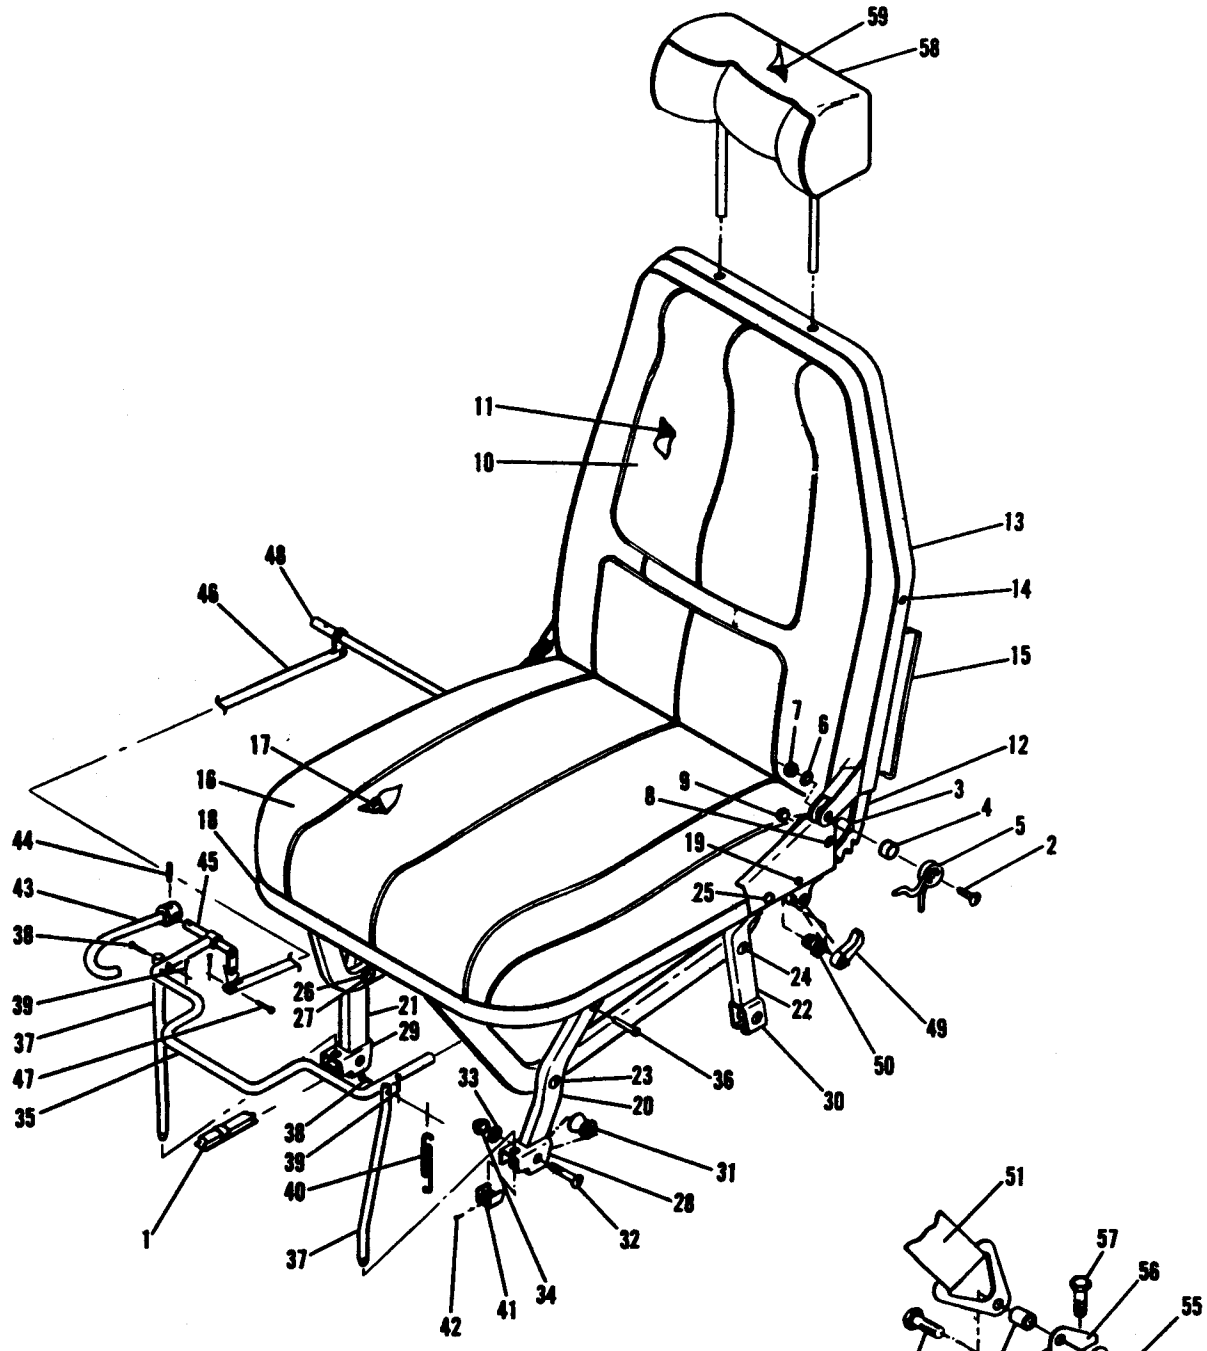

SEAT BELT ATTACHMENT

182 SERIAL 18261426 THRU 18262465

Figure 49C. Pilot & Co-Pilot Seat Installation - Standard

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
49C-37	0514066-1		PIN-SEAT ADJUST	2	
			ATTACHING PARTS		
-38	MS20392-1C23		PIN	1	
-39	MS24665-132		PIN-COTTER	1	
			---*---		
-40	1414116-1		SPRING-SEAT ADJUST	1	
-41	1414104-8		BRACKET	2	
-42	NAS561-2-12		ROLL PIN	2	
-43	1200504-3		HANDLE ASSY-RECLINING ADJUSTMENT	1	
			ATTACHING PARTS		
-44	NAS561-3-8		ROLL PIN	1	
			---*---		
-45	1200503-1		ARM ASSY-SEAT BACK ADJUST	1	
-46	1514223-28		LINK-SEAT BACK ADJUST	1	
			ATTACHING PARTS		
-47	MS20392-1C9		PIN	2	
	MS24665-132		PIN-COTTER	2	
			---*---		
-48	1414223-34		TUBE ASSY-TORQUE	1	
-49	0514043-1		PAWL-SEAT BACK ADJUST REPLACE IN PAIRS ONLY	2	
			ATTACHING PARTS		
	NAS561C3-10		ROLL PIN	1	
			---*---		
-50	1414107-1		SPRING	1	
-51	S2070W103	Z*	BELT ASSY-FRONT SEAT GOLD	2	
	S2070U103	Z*	BELT ASSY-FRONT SEAT BLUE	2	
	S2070AA103	Z*	BELT ASSY-FRONT SEAT OLIVE	2	
	S2070Z103	Z*	BELT ASSY-FRONT SEAT RED	2	
	S2070B103	Z*	BELT ASSY-FRONT SEAT BLACK	2	
			ATTACHING PARTS		
-52	AN4-5A		BOLT	2	
-53	NAS43HT4-12		SPACER	2	
-54	AN960-416L		WASHER	2	
-55	NAS679A4		NUT	2	
			---*---		
-56	0510205-5		FITTING-SEAT BELT INBD LH & OUTBD RH	2	
	0510205-6		FITTING-SEAT BELT OUTBD LH & INBD RH	2	
			ATTACHING PARTS		
-57	AN3-4A		BOLT	2	
			---*---		
-58	0514048-2	#	HEADREST ASSY	2	
-59	0514048-10	#	COVER-HEADREST	1	

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.


NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

NOTE. *SEE FIGURE 56 FOR SHOULDER HARNESS INSTL.

NOTE. ZWHEN ORDERING SEAT BELTS FOR AUSTRALIAN USE, ADD VH TO PART NUMBER. EXAMBLE S2070W103VH

A---182 SERIAL 18261426 THRU 18262465

Front Seat (Cont)

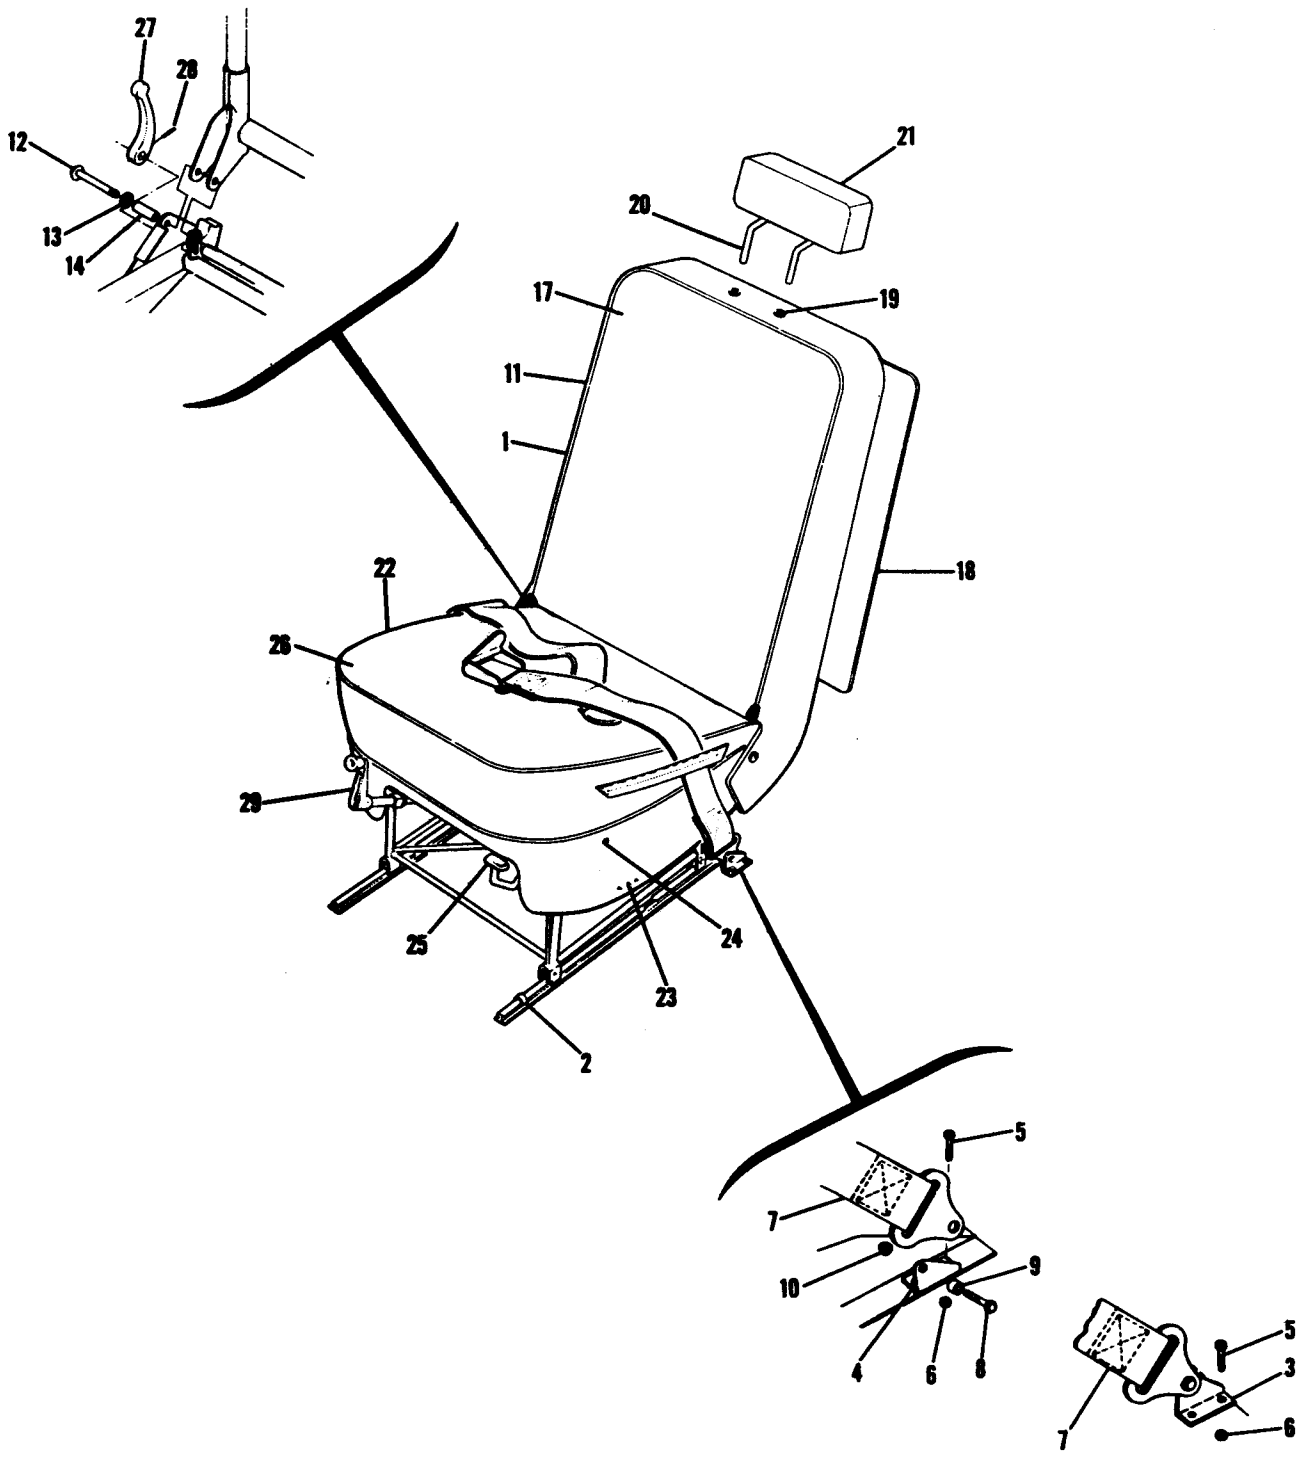


182 SERIAL 18253599 THRU 18254423

Figure 50. Adjustable Front Seat Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50 -		SEAT INSTALLATION-ADJUSTABLE FRONT	NP	A
- 1	1200162-13	SEAT ASSEMBLY-LH FRONT ADJUSTABLE	1	
	1200162-14	SEAT ASSEMBLY-RH FRONT ADJUSTABLE	1	
		ATTACHING PARTS		
- 2	0713074-1	STOP-SEAT	2	
	MS20392-1C21	PIN-CLEVIS	2	
	MS24665-151	PIN-COTTER	2	
		---•---		
- 3	0510205-1	BRACKET-SAFETY BELT ATTACHMENT LH OUTBD & RH INBD	2	
- 4	0510205-2	BRACKET-SAFETY BELT ATTACHMENT RH OUTBD & LH INBD	2	
		ATTACHING PARTS		
- 5	AN3-4A	BOLT	2	
- 6	MS21044N3	NUT	2	
	0710632-1	PLATE-SEAT BELT BRACKET	1	
		---•---		
- 7	S1060-15	BELT ASSEMBLY-SEAT	2	
		ATTACHING PARTS		
- 8	AN4-5A	BOLT	2	
- 9	NAS43HT4-20	SPACER	2	
-10	NAS679A4	NUT	2	
		---•---		
-11	1200162-17	SEAT BACK ASSEMBLY-LH UPHOLSTERED	1	
	1200162-18	SEAT BACK ASSEMBLY-RH UPHOLSTERED	1	
		ATTACHING PARTS		
-12	AN24-29A	BOLT	2	
-13	AN960-416L	WASHER	2	
-14	0710313-2	BUSHING	2	
-15		DELETED, NEVER USED		
-16		DELETED, NEVER USED		
		---•---		
-17	1200162-20	COVER ASSEMBLY-SEAT BACK	1	
-18	0700105-425	PANEL ASSEMBLY-REAR	1	
	0700105-397	TRIM PLATE ASSEMBLY-SEAT BACK ACTUATOR HANDLE	1	
-19	0700320-1	RETAINER-HEADREST	2	
	0900023-5	HEADREST ASSEMBLY-SEAT	1	
-20	1200108-1	FRAME-HEADREST	1	
-21	1200134-1	CUSHION-HEADREST	1	
-22	1200162-15	LOWER CUSHION ASSEMBLY-LH	1	
	1200162-16	LOWER CUSHION ASSEMBLY-RH	1	
-23	1200161-1	SKIRT-FRONT SEAT	1	
		ATTACHING PARTS		
-24	S1021Z4-6	SCREW	11	
		---•---		
-25	1200164-1	KNOB-FRONT SEAT LATCH	1	
		ATTACHING PARTS		
	S1022Z6-10	SCREW	1	
		---•---		
-26	1200162-19	COVER-SEAT BOTTOM	1	
-27	0710312-2	HANDLE-SEAT BACK ACTUATOR	1	
		ATTACHING PARTS		
-28	NAS561C3-10	ROLL PIN	1	
		---•---		
-29	SEE FIG 51	SEAT BOTTOM MECHANISM INSTALLATION-ADJUSTABLE	1	
		A---182 SERIAL 18253599 THRU 18254423		

Front Seat (Cont)

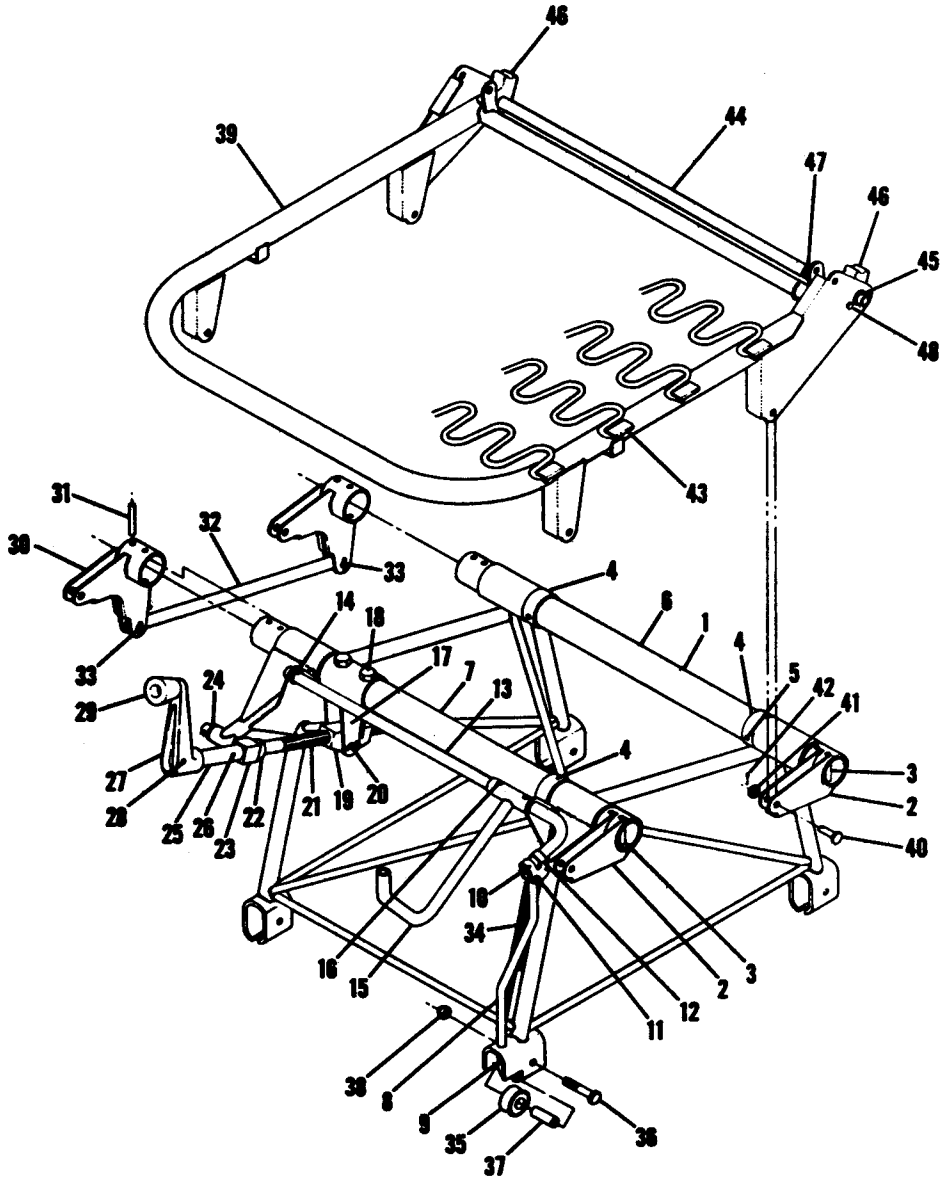

182 SERIAL 18253599 THRU 18254423

Figure 51. Adjustable Seat Bottom Mechanism Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51 -		SEAT BOTTOM MECHANISM INSTALLATION-ADJUSTABLE	NP	A
- 1	1200163-1	BOTTOM ASSEMBLY-LH SEAT	1	
	1200163-2	BOTTOM ASSEMBLY-RH SEAT	1	
- 2	1200142-1	ARM ASSEMBLY-LH SEAT	2	
	1200142-2	ARM ASSEMBLY-RH SEAT	2	
		ATTACHING PARTS		
- 3	NAS561-6-18	ROLL PIN	2	
		---*---		
- 4	1200136-1	COLLAR-TORQUE TUBE	3	
		ATTACHING PARTS		
- 5	NAS561-6-18	ROLL PIN	1	
		---*---		
- 6	1200147-1	TORQUE TUBE-AFT	1	
- 7	1200147-2	TORQUE TUBE-FORWARD	1	
- 8	1200152-1	LATCH PIN-ADJUSTABLE FRONT SEAT	1	
		ATTACHING PARTS		
- 9	MS24665-132	COTTER PIN	1	
-10	0311644	CLEVIS-SEAT LATCH PIN	1	
-11	MS20392-1C15	PIN	1	
	MS24665-134	COTTER PIN	1	
-12	MS24665-285	COTTER PIN	1	
		---*---		
-13	1200146-1	TORQUE TUBE-LATCH PIN	1	
		ATTACHING PARTS		
-14	AN960C616L	WASHER	1	
	MS24665-134	COTTER PIN	1	
		---*---		
-15	1200157-1	ARM ASSEMBLY-SEAT LATCH PIN	1	
		ATTACHING PARTS		
-16	NAS561P3-8	ROLL PIN	2	
		---*---		
-17	1200141-1	BELLCRANK ASSEMBLY-LH SEAT SCREW	1	
	1200141-2	BELLCRANK ASSEMBLY-RH SEAT SCREW	1	
		ATTACHING PARTS		
-18	AN4-14A	BOLT	2	
	NAS679A4	NUT	2	
		---*---		
-19	1200139-1	NUT-SEAT ADJUST SCREW	1	
		ATTACHING PARTS		
-20	MS20392-2C20	PIN	1	
	AN960-10	WASHER	1	
	MS24665-132	COTTER PIN	1	
		---*---		
-21	1200155-1	SCREW-ADJUSTABLE FRONT SEAT	1	
-22	1200138-1	COLLAR-ADJUSTABLE FRONT SEAT SCREW	1	
		ATTACHING PARTS		
	NAS561P4-10	ROLL PIN	1	
		---*---		
-23	1200154-1	BEARING BLOCK-SCREW	1	
		ATTACHING PARTS		
-24	AN960-716	WASHER	1	
	MS24665-351	PIN	1	
		---*---		
-25	1200156-1	SPACER-SCREW HANDLE	1	
		ATTACHING PARTS		
-26	NAS561P4-8	ROLL PIN	1	
		---*---		
-27	1200159-1	HANDLE ASSEMBLY-ADJUSTABLE FRONT SEAT	1	
		ATTACHING PARTS		
-28	NAS561P4-12	ROLL PIN	1	
		---*---		
-29	1200092-1	KNOB-SCREW HANDLE	1	
-30	1200143-1	ARM ASSEMBLY-LH SEAT	2	
	1200143-2	ARM ASSEMBLY-RH SEAT	2	
		ATTACHING PARTS		
-31	NAS561-6-18	ROLL PIN	2	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51 -32	1200137-1	ROD-SEAT ACTUATOR	1	
		ATTACHING PARTS		
-33	MS20392-2C17	PIN	2	
	AN960-10	WASHER	2	
	MS24665-132	COTTER PIN	2	
		---*---		
-34	0310196-15	SPRING-SEAT LATCH PIN	1	
-35	0311310	ROLLER-SEAT	4	
		ATTACHING PARTS		
-36	AN3-11A	BOLT	1	
-37	0311586	BUSHING-ROLLER	1	
-38	MS21044N3	NUT	1	
		---*---		
-39	1200158-1	FRAME ASSEMBLY-LH SEAT	1	
	1200158-5	FRAME ASSEMBLY-RH SEAT	1	
		ATTACHING PARTS		
-40	MS20392-2C17	PIN	4	
-41	AN960-10	WASHER	4	
-42	MS24665-132	COTTER PIN	4	
		---*---		
-43	S1146-1	CLIP-UPHOLSTERY SPRING	8	
-44	0710302-1	TUBE-SEAT BACK RECLINER	1	
		ATTACHING PARTS		
-45	AN960C616L	WASHER	2	
	NAS561C3-10	ROLL PIN	2	
		---*---		
-46	0710317-1	RECLINER CAM-SEAT BACK	2	
		ATTACHING PARTS		
	NAS561C3-12	ROLL PIN	1	
		---*---		
-47	0710308-1	SPRING-CAM RETURN	1	
-48	MS20392-1C39	PIN	2	
		ATTACHING PARTS		
	MS24665-132	COTTER PIN	1	
		---*---		
		A---182 SERIAL 18253599 THRU 18254423		

Front Seat (Cont)

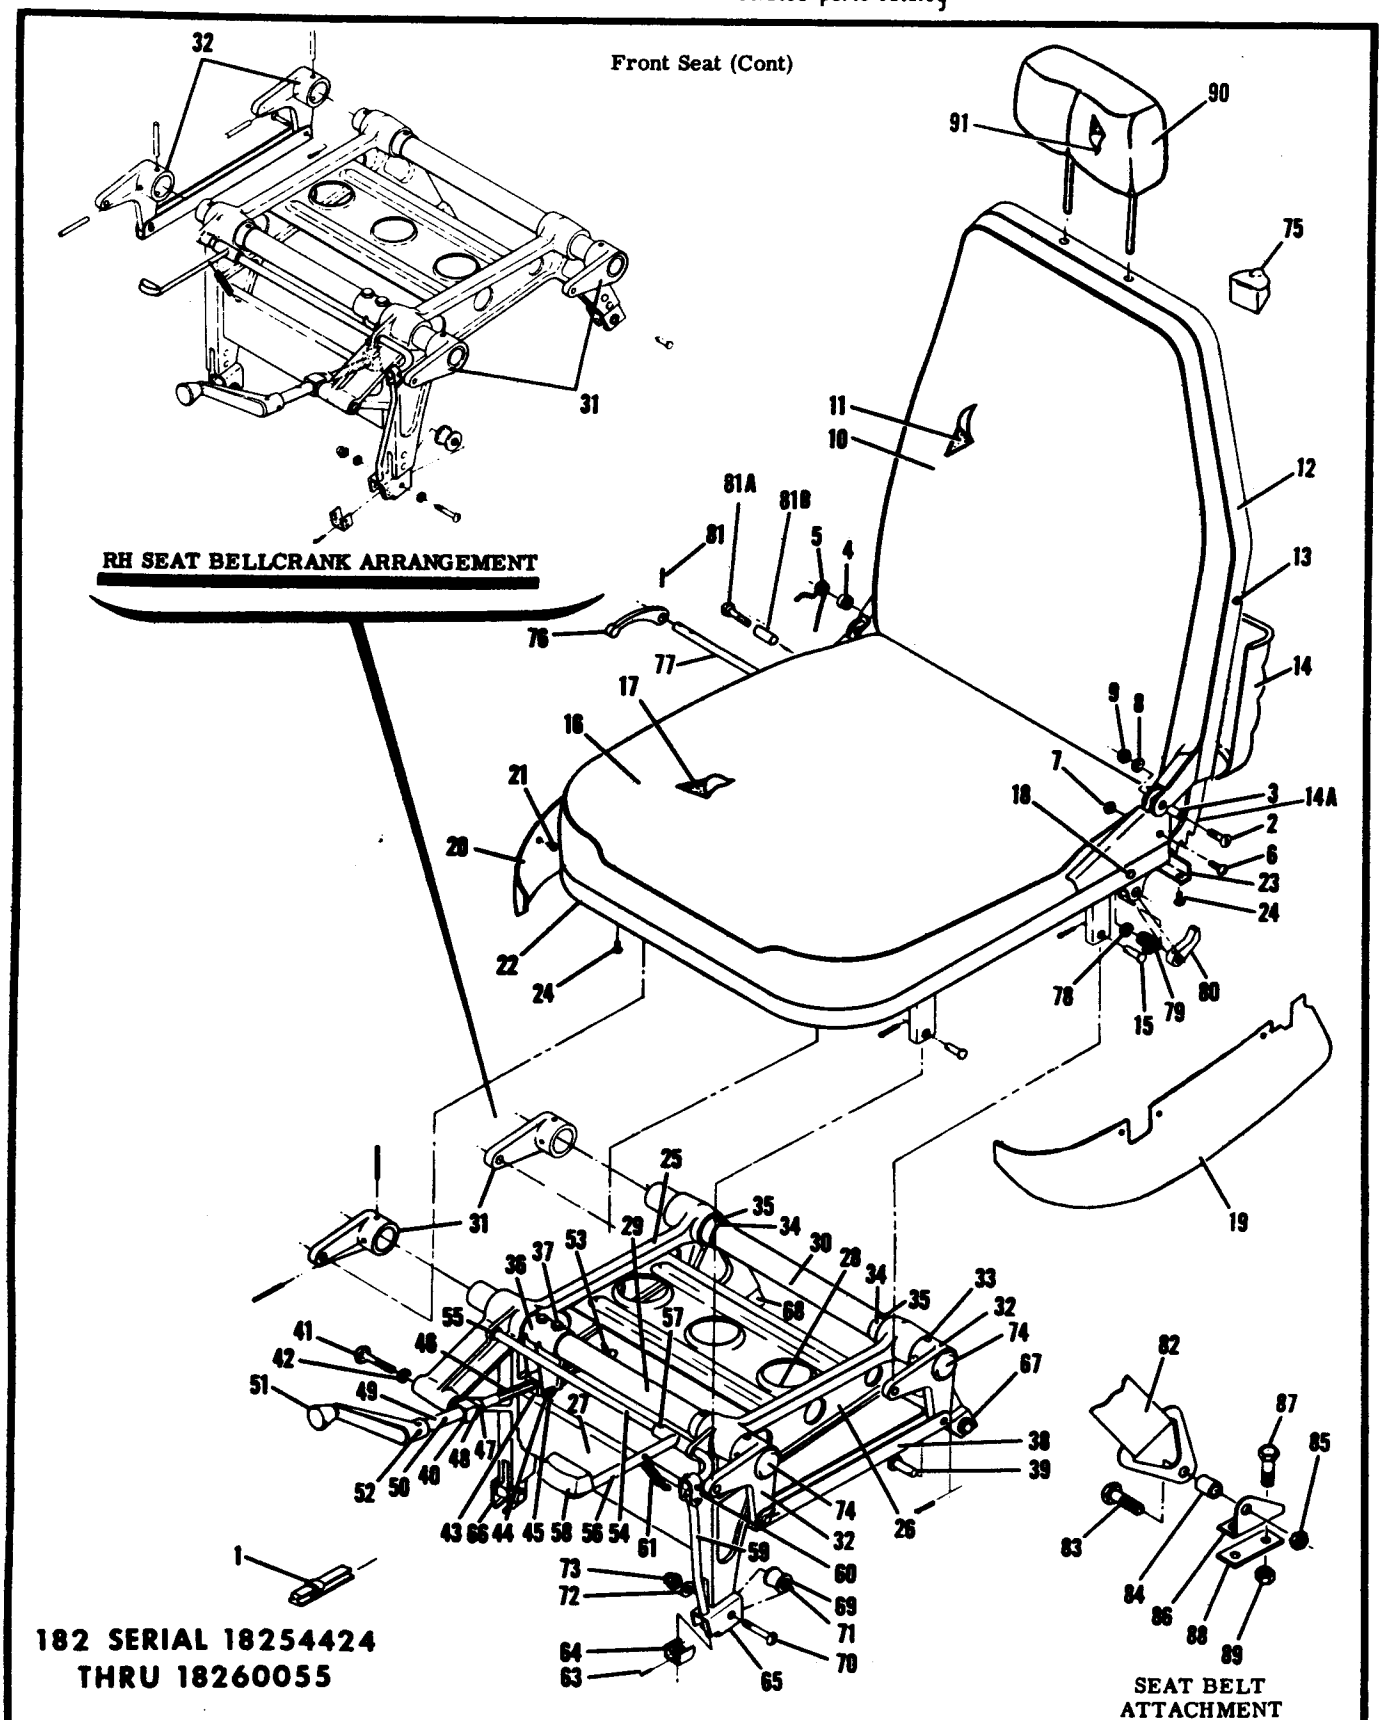


Figure 51A. Vertically Adjustable Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51A-			VERTICALLY ADJUSTABLE PILOT & CO-PILOT SEAT INSTALLATION ------	NP	A
	0700630-1	#	SEAT ASSEMBLY-VERTICALLY ADJUSTABLE L.H. ----------	1	
	0700630-2	*#	SEAT ASSEMBLY-VERTICALLY ADJUSTABLE R.H. ----------	1	B
	0700630-19	#	SEAT ASSEMBLY-VERTICALLY ADJUSTABLE RH ----------	1	
- 1	0713074-1		STOP-SEAT ----------	2	
	MS20392-1C21		PIN ----------	2	
	MS24665-151		PIN-COTTER ----------	2	
			---*---		
	0700630-206	#	BACK ASSEMBLY-UPHOLSTERED SEAT ----------	1	J
	0700630-227	#	BACK ASSEMBLY-UPHOLSTERED SEAT ----------	1	K
			ATTACHING PARTS		
- 2	AN23-16A		BOLT ----------	2	
- 3	1414104-4		BUSHING ----------	2	
- 4	0711668-1		BUSHING ----------	2	
- 5	0711667-1		SPRING ----------	2	
- 6	AN507-832R14		SCREW ----------	2	
- 7	NAS679A08		NUT ----------	2	
- 8	AN960-10L		WASHER ----------	2	
- 9	S1914-8		NUT EN ----------		
			---*---		
-10	0700678-9	#	COVER-SEAT BACK ----------	1	
-11	1414100-9		CUSHION-SEAT BACK ----------	1	J
-12	1414110-1	#	TRIM ASSEMBLY-SEAT BACK ----------	1	K
	0715001-1	#	TRIM ASSEMBLY-SEAT BACK ----------		
			ATTACHING PARTS		
-13	S1021Z8-6C		SCREW ----------	3	
			---*---		
-14	1414110-3	#	POCKET ASSEMBLY-MAGAZINE ----------	1	J
	1715023-3	#	POCKET ASSEMBLY-MAGAZINE ----------	1	K
	1414045-2		SPRING ----------	1	K
-14A	1414111-5		CAM-SEAT BACK RECLINE ----------	2	
	0700630-201	#	CUSHION ASSEMBLY-UPHOLSTERED SEAT BOTTOM ----------	1	
	0700630-218	#	CUSHION ASSEMBLY-UPHOLSTERED SEAT BOTTOM ----------	1	B
			ATTACHING PARTS		
-15	MS20392-2C17		PIN ----------	4	
	MS24665-132		PIN-COTTER ----------	4	
			---*---		
-16	0700678-10	#	COVER-SEAT BOTTOM ----------	1	
-17	1414100-8		CUSHION-SEAT BOTTOM ----------	1	
-18	AN23-15A		BOLT ----------	2	
	MS21044N3		NUT ----------	2	
-19	0700646-1	#	SKIRT-SEAT BOTTOM LH USED ON -1 & -19 SEAT ASSEMBLY -	1	
	1414263-7	#	SKIRT-SEAT BOTTOM LH USED ON -2 SEAT ASSEMBLY -------	1	B
-20	0700646-2	#	SKIRT-SEAT BOTTOM RH USED ON -1 & -19 SEAT ASSEMBLY -	1	
	1414263-8	#	SKIRT-SEAT BOTTOM RH USED ON -2 SEAT ASSEMBLY -------	1	B
			ATTACHING PARTS		
-21	S1021Z6-4		SCREW ----------	4	
			---*---		
-22	1414217-3		RETAINER ----------	1	
-23	1414217-4		RETAINER ----------	1	
-24	S1021Z6-4		SCREW ----------	14	
	0700631-5		FRAME ASSEMBLY-SEAT BOTTOM L.H. ----------	1	
	0700631-5	#	FRAME ASSEMBLY-SEAT BOTTOM LH ----------	1	E
	0700631-6		FRAME ASSEMBLY-SEAT BOTTOM R.H. ----------	1	F
	0700631-6	#	FRAME ASSEMBLY-SEAT BOTTOM RH ----------	1	E
-25	0700640-1		LEG-SEAT INBOARD L.H. ----------	1	
	0700640-2		LEG-SEAT INBOARD R.H. ----------	1	
-26	0700640-5		LEG-SEAT OUTBOARD L.H. ----------	1	
	0700640-6		LEG-SEAT OUTBOARD R.H. ----------	1	
-27	0700641-1		BRACE-FORWARD BULKHEAD WHEN EXHAUSTED USE 0700641-5 -	1	
	0700641-5		BRACE-FORWARD BULKHEAD ----------	1	
-28	0700641-2		BRACE-UPPER BULKHEAD ----------	1	
-29	0700639-1		TUBE-FORWARD TORQUE ----------	1	
-30	0700639-2		TUBE-AFT TORQUE ----------	2	
-31	0700633-2		BELLCRANK ----------	2	
-32	0700633-4		BELLCRANK L.H. SEAT ONLY ----------	2	
	0700633-1		BELLCRANK R.H. SEAT ONLY ----------	8	
-33	NAS561P6-22		ROLL PIN ----------	3	
-34	1200136-1		COLLAR ----------	3	
-35	NAS561P6-18		ROLL PIN ----------		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51A-36	1200141-1	BELLCRANK-L.H.	1	
	1200141-2	BELLCRANK-R.H.	1	
		ATTACHING PARTS		
-37	AN4-14A	BOLT	2	
	NAS679A4	NUT	2	
		---•---		
-38	0700634-1	CHANNEL-PUSH PULL	1	
		ATTACHING PARTS		
-39	MS20392-2C17	PIN	2	
	MS24665-132	PIN-COTTER	2	
		---•---		
-40	0700638-1	BLOCK-BEARING	1	
-41	AN520-10R8	SCREW	1	
-42	AN960-10L	WASHER	1	
-43	1200139-1	NUT	1	
-44	AN960-10	WASHER	1	
-45	MS20392-2C27	PIN	1	
	MS24665-132	PIN-COTTER	1	
-46	1200155-1	SCREW-SEAT ADJUSTMENT	1	
-47	1200138-1	COLLAR	1	
-48	NAS561P4-10	ROLL PIN	1	
-49	1200156-1	SPACER	1	
-50	NAS561P4-8	ROLL PIN	1	
-51	1200159-1	HANDLE ASSEMBLY-VERTICAL ADJUSTMENT	1	
-52	NAS561P4-12	ROLL PIN	2	
-53	NAS561P4-10	ROLL PIN	1	
-54	0700642-1	TUBE-SEAT ADJUSTMENT TORQUE	1	
-55	AN960-616L	WASHER	1	
	MS24665-5	PIN-COTTER	1	
-56	0700643-1	ARM-SEAT ADJUSTMENT	1	
-57	NAS561P3-8	ROLL PIN	2	
-58	1200164-1	KNOB-FORE & AFT ADJUSTMENT	1	
		ATTACHING PARTS		
	S1022Z6-10	SCREW	1	
		---•---		
-59	0700644-1	PIN-SEAT ADJUSTMENT	1	
-60	1414104-2	CLAMP	1	
	MS24665-134	PIN-COTTER	2	
-61	1414116-1	SPRING	1	
-62	AN960-416	WASHER	1	
-63	MS24665-132	PIN-COTTER	1	
-64	1414104-8	BRACKET-SEAT ADJUSTMENT	1	
-65	0700645-1	HOUSING-WHEEL	1	
-66	0700645-2	HOUSING-WHEEL	1	
-67	0700645-3	HOUSING-WHEEL	1	
-68	0700645-4	HOUSING-WHEEL	1	
-69	1414100-212	KIT-SEAT ROLLER	4	
		ATTACHING PARTS		
-70	AN23-19A	BOLT	1	
-71	1414104-10	BUSHING	1	
-72	AN960-10L	WASHER	1	
-73	S1914-8	NUT EN	1	
		---•---		
-74	51045	PLUG BUTTON UC	2	
-75	S1957-2	ASH RECEIVER-SEAT BACK	1	
-76	0710312-2	HANDLE-RECLINING ADJUSTMENT	1	
-77	1414104-1	TUBE-SEAT ADJUSTMENT TORQUE	1	
-78	AN960D616	WASHER	2	
-79	1414107-1	SPRING-SEAT ADJUSTMENT	1	
-80	0700636-1	PAWL-SEAT ADJUSTMENT	2	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51A-81	NAS561C0-10		PIN	3	
-81A	AN23-19A		BOLT HANDLE STOP	1	
-81B	NAS43HT3-16		SPACER HANDLE STOP	1	
	MS21044N3		NUT HANDLE STOP	1	
-82	S1060-15		BELT ASSEMBLY-FRONT SEAT	2	C
	S1060-3		BELT ASSEMBLY-FRONT SEAT	2	D
	S1618C3		BELT ASSEMBLY-FRONT SEAT BLUE	2	G
	S1618D3		BELT ASSEMBLY-FRONT SEAT TAN	2	G
	S1618F3		BELT ASSEMBLY-FRONT SEAT OLIVE	2	G
	S1618H3		BELT ASSEMBLY-FRONT SEAT CORAL	2	G
	S1618D3		BELT ASSEMBLY-FRONT SEAT TAN	2	H
	S1618J3		BELT ASSEMBLY-FRONT SEAT RED	2	H
	S1618K3		BELT ASSEMBLY-FRONT SEAT AVACADO	2	H
	S1618M3		BELT ASSEMBLY-FRONT SEAT BLUE	2	H
	S1746D2		BELT ASSEMBLY-FRONT SEAT TAN	2	L
	S1746J2		BELT ASSEMBLY-FRONT SEAT RED	2	L
	S1746M2		BELT ASSEMBLY-FRONT SEAT BLUE	2	L
	S1746K2		BELT ASSEMBLY-FRONT SEAT AVACADO	2	L
			ATTACHING PARTS		
-83	AN3-4A		BOLT	2	
-84	NAS43HT4-22		SPACER	2	
-85	NAS679A4		NUT	2	
			---*---		
-86	0510205-1		FITTING-SEAT BELT INBOARD L.H. & OUTBOARD R.H.	2	
	0510205-2		FITTING-SEAT BELT OUTBOARD L.H. & INBOARD R.H.	2	
			ATTACHING PARTS		
-87	AN3-4A		BOLT	2	
-88	0710632-1		PLATE	2	
-89	MS21044N3		NUT	2	
			---*---		
	1414252-1	#	HEADREST ASSEMBLY	2	J
	1714040-1	#	HEADREST ASSEMBLY	2	K
	1714040-5	#	HEADREST ASSEMBLY SKYLANE ONLY	2	K
-90	1414252-7		CUSHION-HEADREST	1	J
	1714035-1		CUSHION-HEADREST	1	K
-91	1414252-6	#	COVER-HEADREST	1	J
	1714040-2	#	COVER-HEADREST	1	K
	1714040-6	#	COVER HEADREST SKYLANE ONLY	1	


NOTE. *THIS SEAT ASSEMBLY IS USED ONLY IN CONJUNCTION WITH POWER OPERATED PILOTS SEAT.

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18254424 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
B---182 SERIAL 18255238 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
C---182 SERIAL 18254424 THRU 18255844
D---182 SERIAL 18255845 THRU 18256684
E---182 SERIAL 18256685 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
F---182 SERIAL 18254424 THRU 18256684
G---182 SERIAL 18256685 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
H---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
J---182 SERIAL 18254424 THRU 18258505
K---182 SERIAL 18258506 THRU 18260055
L---182 SERIAL 18258506 THRU 18260055
A182 SERIAL A182-0097 THRU A182-0116

Front Seat (Cont)

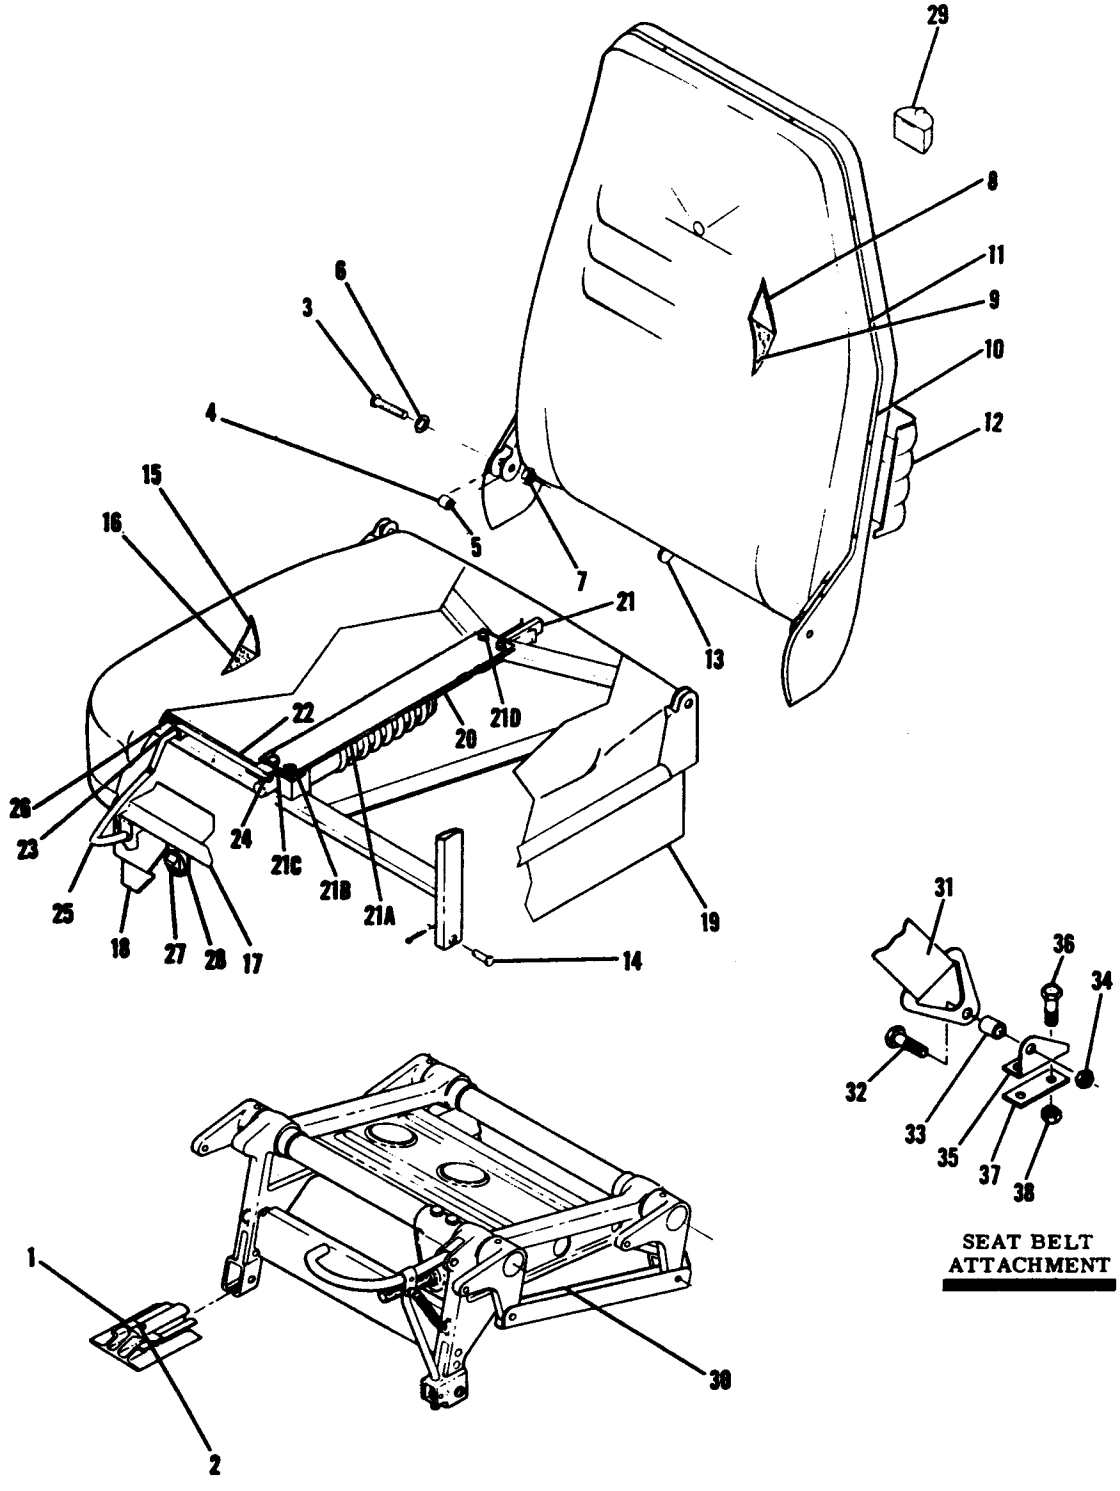

182 SERIAL 18255238 THRU 18257625

Figure 51B. Pilot & Co-Pilot Power Adjustable Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
518-			PILOT & CO-PILOT POWER ADJUSTABLE SEAT INSTL.	NP	A
	1414265-9	#	SEAT ASSEMBLY-PILOT POWER VERTICALLY ADJUSTABLE	1	
	1414265-10	#	SEAT ASSEMBLY-CO-PILOT POWER VERTICALLY ADJUSTABLE	1	
			ATTACHING PARTS		
- 1	0511242		STOP-SEAT	4	
- 2	AN500A8-4		SCREW	4	
			---*---		
	1414265-207	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	
			ATTACHING PARTS		
- 3	AN23-16A		BOLT	2	
- 4	NAS43HT4-18		SPACER	2	
- 5	1414104-4		BUSHING	2	
- 6	AN960-10L		WASHER	2	
- 7	S1914-8		NUT EN	2	
			---*---		
- 8	0700114-44	#	COVER-SEAT BACK	1	
- 9	1414100-9		CUSHION-SEAT BACK	1	
-10	1414264-13	¤	TRIM ASSEMBLY-SEAT BACK	1	
			ATTACHING PARTS		
-11	S1021Z8-6C		SCREW	AR	
			---*---		
-12	1414264-5	¤	POCKET ASSEMBLY MAGAZINE	1	
-13	1414262-1		CAM-SEAT BACK RECLINE	1	
			ATTACHING PARTS		
	AN3-10A		BOLT	3	
	AN960-10L		WASHER	3	
	MS21044N3		NUT	3	
			---*---		
	1414265-209	#	CUSHION ASSEMBLY-UPHOLSTERED SEAT BOTTOM	1	
			ATTACHING PARTS		
-14	MS20392-2C17		PIN	4	
	MS24665-132		COTTER PIN	4	
			---*---		
-15	0700114-42	#	COVER-SEAT BOTTOM	1	
-16	1414265-8		CUSHION-SEAT BOTTOM	1	
-17	1414217-7		RETAINER-SEAT BOTTOM	1	
	1414217-3		RETAINER-SEAT BOTTOM	1	
			ATTACHING PARTS		
	S1021Z6-4		SCREW	12	
			---*---		
-18	1414263-5	¤	SKIRT-SEAT LH	1	
-19	1414263-6	¤	SKIRT-SEAT RH	1	
			ATTACHING PARTS		
	S1021Z6-4		SCREW	AR	
			---*---		
-20	1414266-1		ACTUATOR-SEAT BACK	2	
-21	1414261-1		STOP-SEAT BACK		
			ATTACHING PARTS		
	AN3-10A		BOLT	2	
	AN960-10L		WASHER	2	
	MS21044N3		NUT	2	
			---*---		
-21A	1514059-1		STIFFENER	1	
			ATTACHING PARTS		
-21B	1414269-1		SEAT STOP	1	
-21C	AN3-17A		BOLT	2	
	NAS43DD3-12		SPACER UNDER STIFFENER	2	
	NAS43DD3-3		SPACER BETWEEN ACTUATOR & FRAME	2	
-21D	AN3-13A		BOLT	2	
	AN960-10L		WASHER	2	
	MS21044N3		NUT	4	
			---*---		
-22	1414258-1		LINK	1	
			ATTACHING PARTS		
-23	MS20392-1C9		PIN	2	
	MS24665-132		COTTER PIN	2	
			---*---		
-24	1414259-1		SCREW	1	
-25	1414257-5		HANDLE ASSEMBLY	1	
			ATTACHING PARTS		
	MS24665-283		COTTER PIN	2	
			---*---		
-26	1200478-2		SPRING-HANDLE RETURN	1	

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
518-27	1414268-1	SWITCH ASSEMBLY	1	
-28	1414267-1	BRACKET-SWITCH	1	
		ATTACHING PARTS		
	S1021Z6-6	SCREW	2	
		---*---		
	0700719-1	COVER-FLOORBOARD TERMINAL	1	
-29	S1957-2	ASH RECEIVER	1	
-30	SEE FIG 51C	POWER SEAT BOTTOM ASSEMBLY-PILOT	1	
	SEE FIG 51C	POWER SEAT BOTTOM ASSEMBLY-CO-PILOT	1	
-31	S1524-2	BELT ASSEMBLY-SAFETY	1	B
	S1618D3	BELT ASSEMBLY-SAFETY TAN	1	C
	S1618J3	BELT ASSEMBLY-SAFETY RED	1	C
	S1618K3	BELT ASSEMBLY-SAFETY AVACADO	1	C
	S1618M3	BELT ASSEMBLY-SAFETY BLUE	1	C
		ATTACHING PARTS		
-32	AN3-4A	BOLT	2	
-33	NAS43HT4-22	SPACER	2	
-34	NAS679A4	NUT	2	
		---*---		
-35	0510205-1	FITTING-SEAT BELT INBOARD LH & OUTBOARD RH	2	
	0510205-2	FITTING-SEAT BELT OUTBOARD LH & INBOARD RH	2	
		ATTACHING PARTS		
-36	AN3-4A	BOLT	2	
-37	0710632-1	PLATE	2	
-38	MS21044N3	NUT	2	
		---*---		

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18255238 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
B---182 SERIAL 18255238 THRU 18256684
C---182 SERIAL 18256685 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056

Seat (Cont)

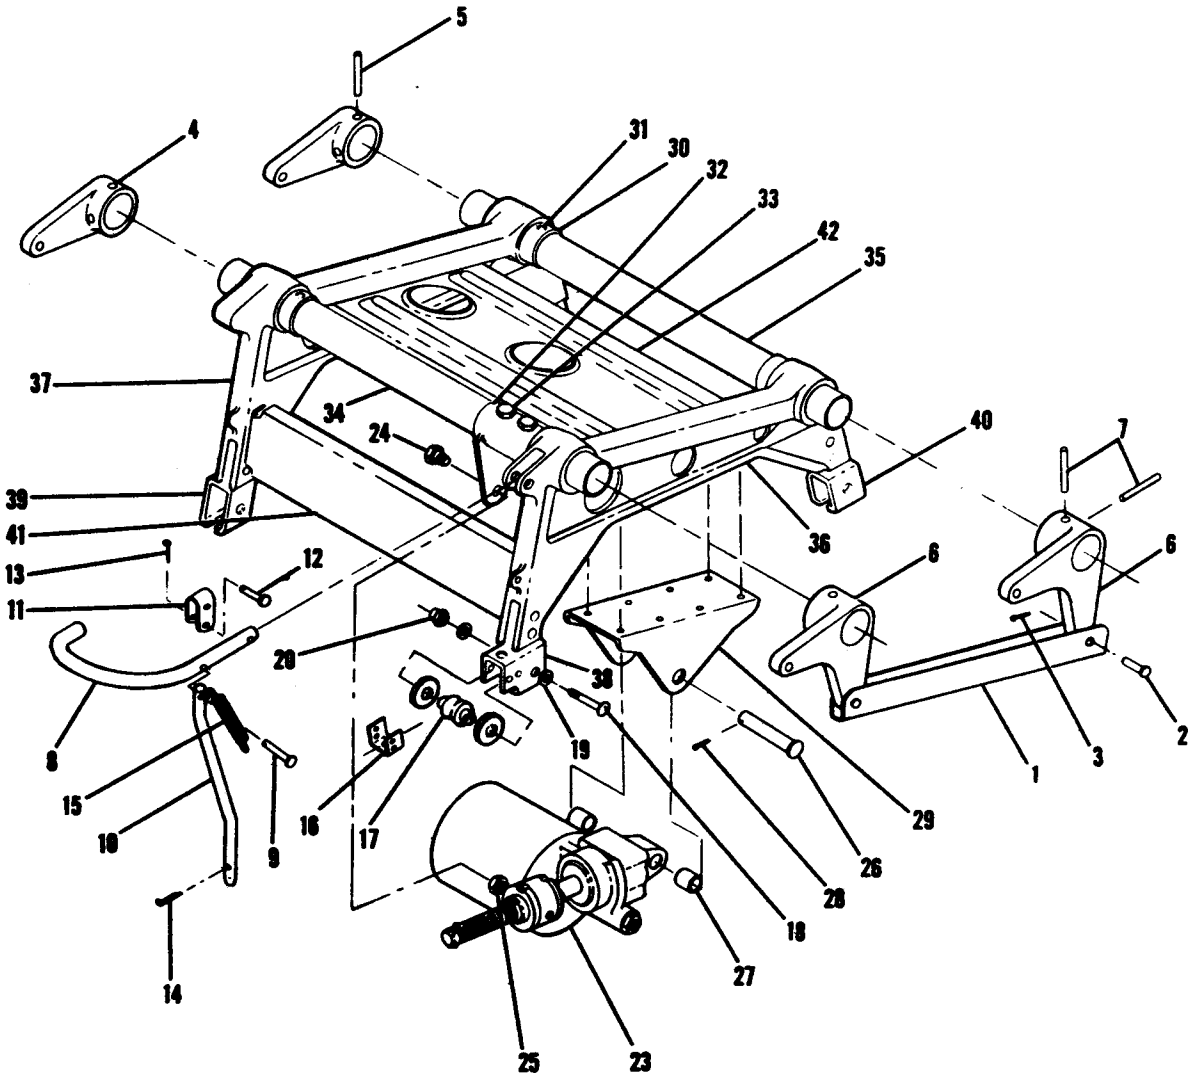

182 SERIAL 18255238 THRU 18257625


Figure 51C. Power Seat Bottom Assembly - Pilot & Co-Pilot

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51C-	1414240-3		POWER SEAT BOTTOM ASSEMBLY-PILOTS	1	A
	1414240-4		POWER SEAT BOTTOM ASSEMBLY-CO-PILOTS	1	A
	1414240-3	¤	POWER SEAT BOTTOM ASSEMBLY-PILOTS	1	B
	1414240-4	¤	POWER SEAT BOTTOM ASSEMBLY-CO-PILOTS	1	B
- 1	0700634-1		CHANNEL OUTBOARD SIDE ONLY	1	
			ATTACHING PARTS		
- 2	MS20392-2C17		PIN	2	
- 3	MS24665-132		COTTER PIN	2	
			---•---		
- 4	0700633-2		BELLCRANK-INBOARD	2	
			ATTACHING PARTS		
- 5	NAS561P6-22		ROLL PIN	4	
			---•---		
- 6	0700633-4		BELLCRANK-OUTBOARD PILOTS SEAT	2	
	0700633-1		BELLCRANK-OUTBOARD CO-PILOTS SEAT	2	
			ATTACHING PARTS		
- 7	NAS561P6-22		ROLLPIN	4	
			---•---		
- 8	1414248-1		HANDLE-SEAT ADJUSTMENT	1	
			ATTACHING PARTS		
- 9	MS20392-2C21		PIN	1	
	MS24665-132		COTTER PIN	1	
			---•---		
-10	1414245-2		ROD-SEAT ADJUSTMENT	1	
			ATTACHING PARTS		
-11	1414104-56		CLAMP	1	
-12	MS20392-1C15		PIN	2	
-13	MS24665-132		COTTER PIN	2	
-14	MS24665-132		COTTER PIN	1	
			---•---		
-15	1414116-1		SPRING	1	
-16	1414104-8		BRACKET-SEAT ADJUSTMENT ROD	1	
-17	1414100-212		KIT-SEAT ROLLER	4	
			ATTACHING PARTS		
-18	AN23-19A		BOLT	1	
-19	AN960-10L		WASHER	2	
-20	S1914-8		NUT EN	1	
			---•---		
-21			DELETED, NOT AVAILABLE		
-22			DELETED, NOT AVAILABLE		
-23	1414249-2		MOTOR ASSEMBLY	1	
			ATTACHING PARTS		
-24	1414247-1		BOLT	1	
-25	AN316C5R		NUT	1	
-26	MS20392-5C65		PIN	1	
-27	NAS430D6-33		SPACER	2	
-28	MS24665-283		COTTER PIN	1	
			---•---		
-29	1414242-1		BRACKET-MOTOR ASSEMBLY	1	
-30	1200136-1		COLLAR-TORQUE TUBE	3	
			ATTACHING PARTS		
-31	NAS561P6-18		ROLLPIN	3	
			---•---		
-32	1414243-1		BELLCRANK	1	
			ATTACHING PARTS		
-33	AN4-14A		BOLT	2	
	NAS679A4		NUT	2	
			---•---		
-34	0700639-3		TORQUE TUBE-FORWARD	1	
-35	0700639-2		TORQUE TUBE-AFT	1	
-36	1414241-3		LEG-LH	1	
-37	1414241-4		LEG-RH	1	
-38	0700645-1		HOUSING-SEAT ROLLER FWD LH	1	
-39	0700645-2		HOUSING-SEAT ROLLER FWD RH	1	
-40	0700645-3		HOUSING-SEAT ROLLER AFT LH	1	
	0700645-4		HOUSING-SEAT ROLLER AFT RH	1	
-41	0700641-3		BRACE-SEAT	1	
-42	0700641-4		BRACE-SEAT	1	

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18255238 THRU 18256684
B---182 SERIAL 18256685 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056

Front Seat (Cont)

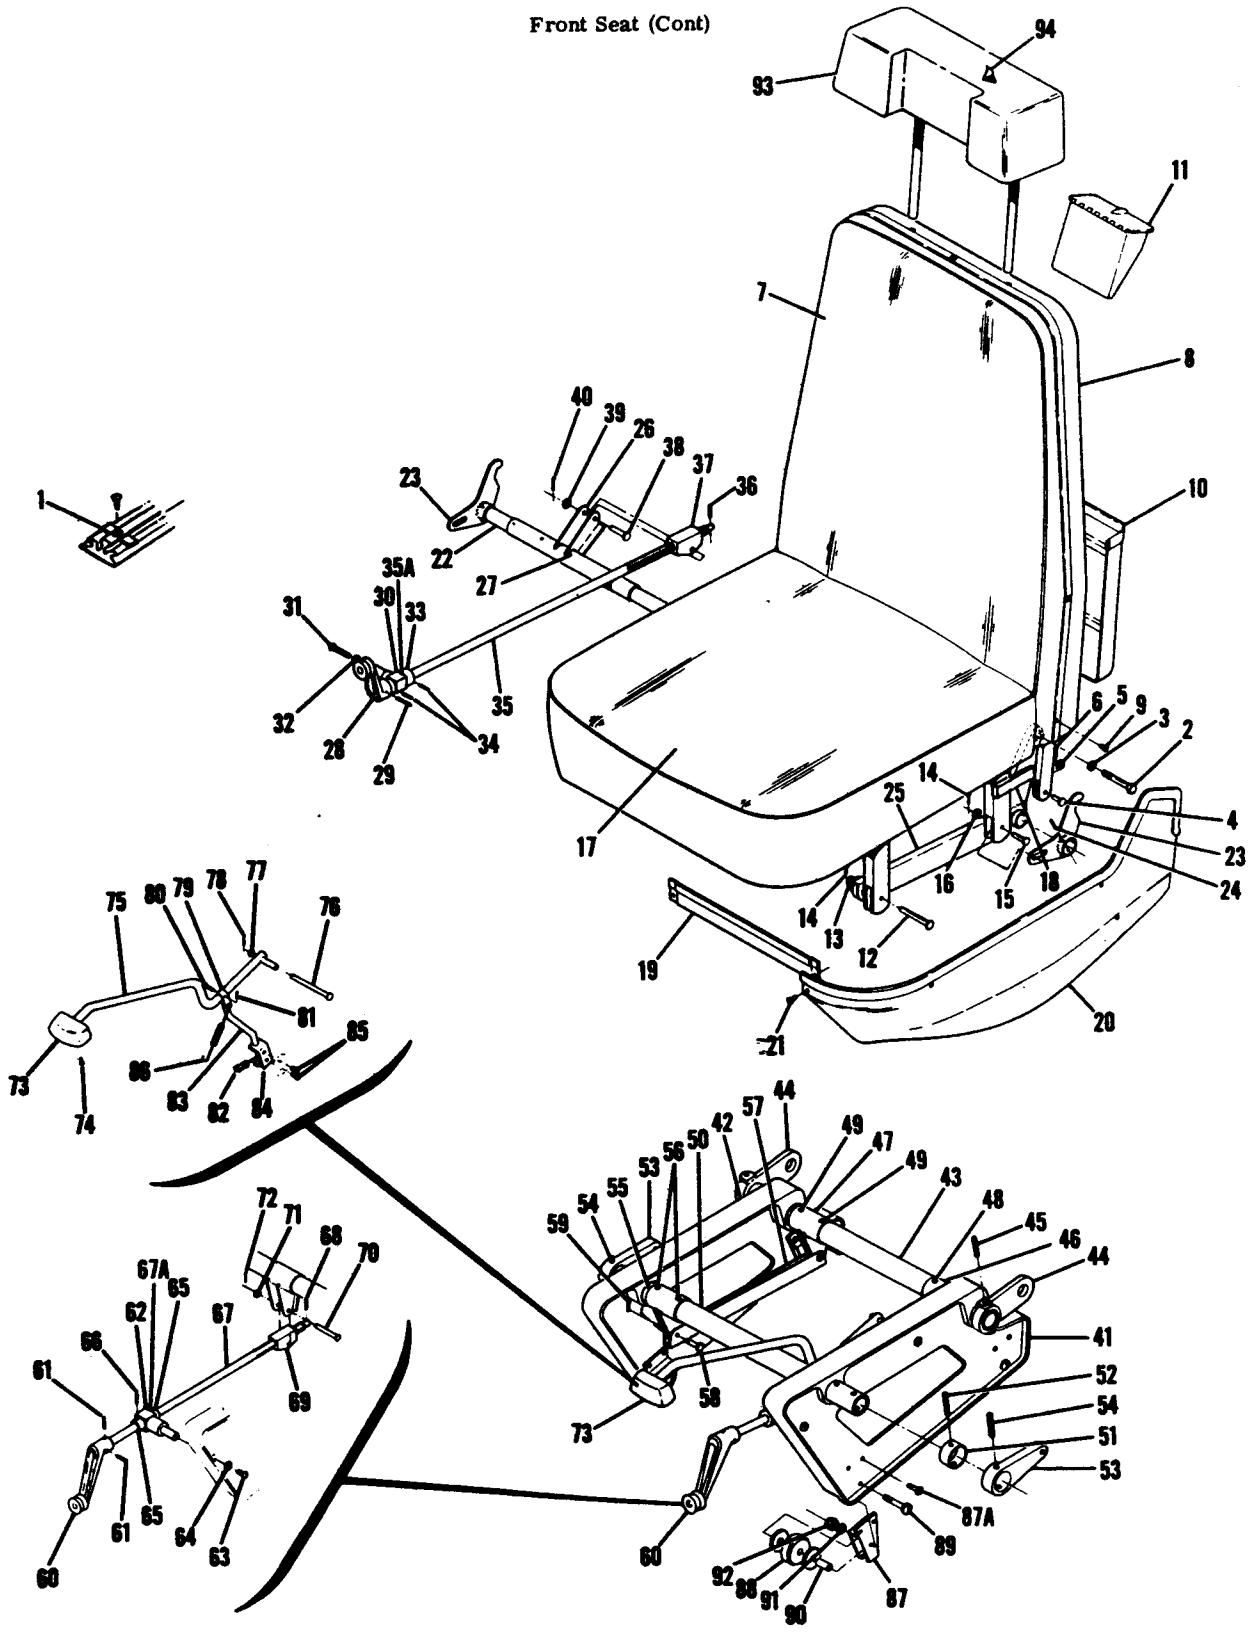

182 SERIAL 18260056 THRU 18260825

Figure 51D. Infinite Adjust Front Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
510-			FRONT SEAT INSTALLATION-INFINITE ADJUST	NP	A
	0515001-2	#	FRONT SEAT ASSEMBLY-INFINITE ADJUST COPILOT	1	B
	0515001-24	#	FRONT SEAT ASSEMBLY-INFINITE ADJUST CO-PILOT	1	C
	0515001-21	#	FRONT SEAT ASSEMBLY-INFINITE ADJUST PILOT	1	B
	0515001-23	#	FRONT SEAT ASSEMBLY-INFINITE ADJUST PILOT	1	C
			ATTACHING PARTS	2	
- 1	0511242-1		STOP-SEAT	2	
	AN500A8-4		SCREW		
			---*---	1	B
	0515001-202	#	BACK ASSEMBLY-UPHOLSTERED SEAT	1	C
	0515001-211	#	BACK ASSEMBLY-UPHOLSTERED SEAT		
			ATTACHING PARTS	2	
- 2	AN3-17A		BOLT	4	
- 3	AN960-10L		WASHER	2	
	0514029-2		SPACER	2	
	MS21044N3		NUT	2	
- 4	MS20392-2C11		PIN	2	
- 5	AN960-10L		WASHER	2	
- 6	MS24655-132		COTTER PIN		
			---*---	1	B
- 7	0515001-8	#	COVER ASSEMBLY-SEAT BACK	1	C
	0515001-39	#	COVER ASSEMBLY-SEAT BACK	1	B
- 8	0514018-1	¤	TRIM ASSEMBLY-SEAT BACK	1	C
	0514018-15	¤	TRIM ASSEMBLY-SEAT		
			ATTACHING PARTS	3	
- 9	S1021A4-6		SCREW		
			---*---	1	
-10	0514018-3	¤	POCKET ASSEMBLY-MAGAZINE	1	
-11	S1957-2		ASH RECEIVER ASSEMBLY GDR	1	B
	0515001-203	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT CO-PILOT	1	C
	0515001-210	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT CO-PILOT	1	B
	0515001-209	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT PILOT	1	C
	0515001-213	#	BOTTOM ASSEMBLY-UPHOLSTERED SEAT PILOT		
			ATTACHING PARTS	2	
-12	MS20392-3C49		PIN	2	
-13	AN960-416L		WASHER	4	
-14	MS24655-134		COTTER PIN	2	
-15	MS20392-3C17		PIN	2	
-16	AN960-416L		WASHER		
			---*---	1	B
-17	0515001-11	#	COVER ASSEMBLY-SEAT BOTTOM	1	C
	0515001-35	#	COVER ASSEMBLY-SEAT BOTTOM	1	
-18	0514101-1		STIFFENER-LH	1	
	0514101-2		STIFFENER-RH		
			ATTACHING PARTS	2	
	S1021A4-6		SCREW		
			---*---	1	
-19	0514017-3	¤	TRIM	1	
-20	0514017-1	¤	TRIM-LH	1	
	0514017-2	¤	TRIM-RH		
			ATTACHING PARTS	4	
-21	S1021A4-6		SCREW		
			---*---	1	
-22	0514026-11		TUBE-TORQUE	2	
-23	0514030-4		BELLCRANK ASSEMBLY-SEAT BACK ADJUST		
			ATTACHING PARTS	2	
-24	NAS561P4-12		PIN		
			---*---	2	
-25	0514060-5		BRACKET ASSEMBLY	1	
-26	0514028-10		BELLCRANK ASSEMBLY-SEAT ADJUST		
			ATTACHING PARTS	4	
-27	NAS561P4-12		PIN		
			---*---	1	
-28	0514036-1		HANDLE ASSEMBLY-SEAT BACK ADJUST		
			ATTACHING PARTS	1	
-29	NAS561P4-12		PIN		
			---*---	1	
-30	0514033-1		BEARING BLOCK		
			ATTACHING PARTS	1	
-31	AN520-10R8		SCREW	1	
-32	AN960-10L		WASHER		
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
510-33	1200138-2		COLLAR	2	
			ATTACHING PARTS		
-34	NAS561P4-12		PIN	1	
			---•---		
-35	0514027-2		SCREW ASSEMBLY WEU 0514027-6	1	D
	0514027-6	%	SCREW ASSEMBLY	1	E
-35A	S2013-2		BEARING	1	E
	S2014-2		RACE-BEARING	2	E
-36	NAS561P4-10		PIN	1	
-37	1200139-1		NUT-SEAT ADJUST	1	
			ATTACHING PARTS		
-38	MS20392-2C37		PIN	1	
-39	AN960-10		WASHER	1	
-40	MS24665-132		COTTER PIN	1	
			---•---		
	0514024-1		PEDESTAL ASSEMBLY-CO-PILOT SEAT	1	
	0514024-2		PEDESTAL ASSEMBLY-PILOT SEAT	1	
-41	0514035-1		PEDESTAL-LH	1	
-42	0514035-2		PEDESTAL-RH	1	
-43	0514026-2		TORQUE TUBE-REAR	1	
-44	0514034-1		BELLCRANK-VERTICAL ADJUSTMENT REAR	2	
			ATTACHING PARTS		
-45	NAS561P6-28		PIN	1	
			---•---		
-46	0514028-6		BELLCRANK ASSEMBLY-REAR TORQUE TUBE	1	
-47	0514028-5		BELLCRANK ASSEMBLY-REAR TORQUE TUBE	1	
			ATTACHING PARTS		
-48	NAS561P8-18		PIN LH BELLCRANK	2	
-49	NAS561P6-18		PIN RH BELLCRANK	2	
			---•---		
-50	0514026-4		TORQUE TUBE-FORWARD	1	
-51	1200136-1		COLLAR-FRONT TORQUE TUBE	3	
			ATTACHING PARTS		
-52	NAS561P6-18		PIN	1	
			---•---		
-53	0700633-5		BELLCRANK ASSEMBLY-VERTICAL ADJUSTMENT FRONT	2	
			ATTACHING PARTS		
-54	NAS561P6-22		PIN	1	
			---•---		
-55	0514028-5		BELLCRANK ASSEMBLY-FRONT TORQUE TUBE	1	
			ATTACHING PARTS		
-56	NAS561P8-18		PIN	2	
			---•---		
-57	0514032-1		CHANNEL-TORQUE TUBE INTERCONNECT	1	
			ATTACHING PARTS		
-58	MS20392-2C37		PIN	2	
-59	MS24665-132		COTTER PIN	2	
			---•---		
-60	1200159-3		HANDLE ASSEMBLY-VERTICAL ADJUST	1	
			ATTACHING PARTS		
-61	NAS561P4-12		PIN	2	
			---•---		
-62	0514033-1		BEARING BLOCK	1	
			ATTACHING PARTS		
-63	AN520-10R8		SCREW	1	
-64	AN960-10L		WASHER	1	
			---•---		
-65	1200138-1		COLLAR	2	
			ATTACHING PARTS		
-66	NAS561P4-10		PIN	1	
			---•---		
-67	0514027-1		SCREW ASSEMBLY-VERTICAL ADJUST WEU 0514027-5	1	D
	0514027-5	%	SCREW ASSEMBLY-VERTICAL ADJUST	1	E
-67A	S2013-2		BEARING	1	E
	S2014-2		RACE-BEARING	2	E
-68	NAS561P4-10		PIN	1	
-69	0514037-1		NUT-SEAT ADJUST	1	
			ATTACHING PARTS		
-70	MS20392-2C37		PIN	1	
-71	AN960-10		WASHER	1	
-72	MS24665-132		COTTER PIN	1	
			---•---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51D-73	0700113-1		KNOB-SEAT ADJUST	1	
			ATTACHING PARTS		
-74	S1021Z6-8		SCREW	1	
			---*---		
-75	0514047-1		ARM ASSEMBLY-CO-PILOT SEAT ADJUST	1	
	0514047-9		ARM ASSEMBLY-PILOT SEAT ADJUST	1	
			ATTACHING PARTS		
-76	MS20392-2C83		PIN ATTACH 0514047-1	1	
	MS20392-2C45		PIN ATTACH 0514047-9	1	
-77	AN960-10L		WASHER	1	
-78	MS24665-132		COTTER PIN	1	
			---*---		
-79	1414104-56		CLAMP	2	
			ATTACHING PARTS		
-80	MS20392-1C15		PIN	1	
-81	MS24665-132		COTTER PIN		
			---*---		
-82	NAS561-3-16		PIN	1	
-83	1714067-2		PIN-CO-PILOT SEAT ADJUST	1	
	1714067-4		PIN-PILOT SEAT ADJUST	1	
-84	1714061-1		GUIDE	1	
			ATTACHING PARTS		
-85	AN515-8R6		SCREW	2	
	NAS679A08		NUT	2	
			---*---		
-86	1414116-1		SPRING	1	
-87	1714000-33		HOUSING ASSEMBLY-ROLLER	4	
			ATTACHING PARTS		
-87A	NAS220-11		SCREW	2	
	AN960-8		WASHER	2	
	NAS679A08		NUT	2	
			---*---		
-88	1714000-K200		ROLLER KIT-SEAT	4	
			ATTACHING PARTS		
-89	AN23-20A		SCREW	1	
-90	1414104-54		BUSHING	1	
-91	AN960-10L		WASHER	1	
-92	S1914-8		NUT	1	
			---*---		
-93	0514048-2	#	HEADREST ASSEMBLY	2	
-94	0514048-10	#	COVER-ASSEMBLY	1	
	S1746T2		BELT ASSEMBLY-FRONT SEAT MARIGOLD	2	B
	S1746V2		BELT ASSEMBLY-FRONT SEAT OLIVE	2	B
	S1746W2		BELT ASSEMBLY-FRONT SEAT BROWN	2	B
	S1746Y2		BELT ASSEMBLY-FRONT SEAT BLUE	2	B
	S2070W103	Z*	BELT ASSEMBLY-FRONT SEAT BROWN	2	C
	S2070H103	Z*	BELT ASSEMBLY-FRONT SEAT BLUE	2	C
	S2070F103	Z*	BELT ASSEMBLY-FRONT SEAT RED	2	C
	S2070G103	Z*	BELT ASSEMBLY-FRONT SEAT GREEN	2	C
	S2070B103	Z*	BELT ASSEMBLY-FRONT SEAT BLACK	2	C

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.


NOTE. *SEE FIGURE 56 FOR SHOULDER HARNESS INSTL

NOTE. ZWHEN ORDERING THIS PART FOR AIRPLANES PRIOR TO SERIAL 18260586 & A182-0136, ALSO ORDER S2013L2 BEARING & (2) S2014-2 RACE.

NOTE. ZWHEN ORDERING SEAT BELTS FOR AUSTRALIAN USE, ADD VH TO PART NUMBER. EXAMPLE-S2070W103VH.

A---182 SERIAL 18260056 THRU 18260825
A182 SERIAL A182-0117 THRU A182-0136
B---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
C---182 SERIAL 18260446 THRU 18260825
D---182 SERIAL 18260446 THRU 18260585
A182 SERIAL A182-117 THRU A182-0136
E---182 SERIAL 18260586 THRU 18260825

Front Seat (Cont)

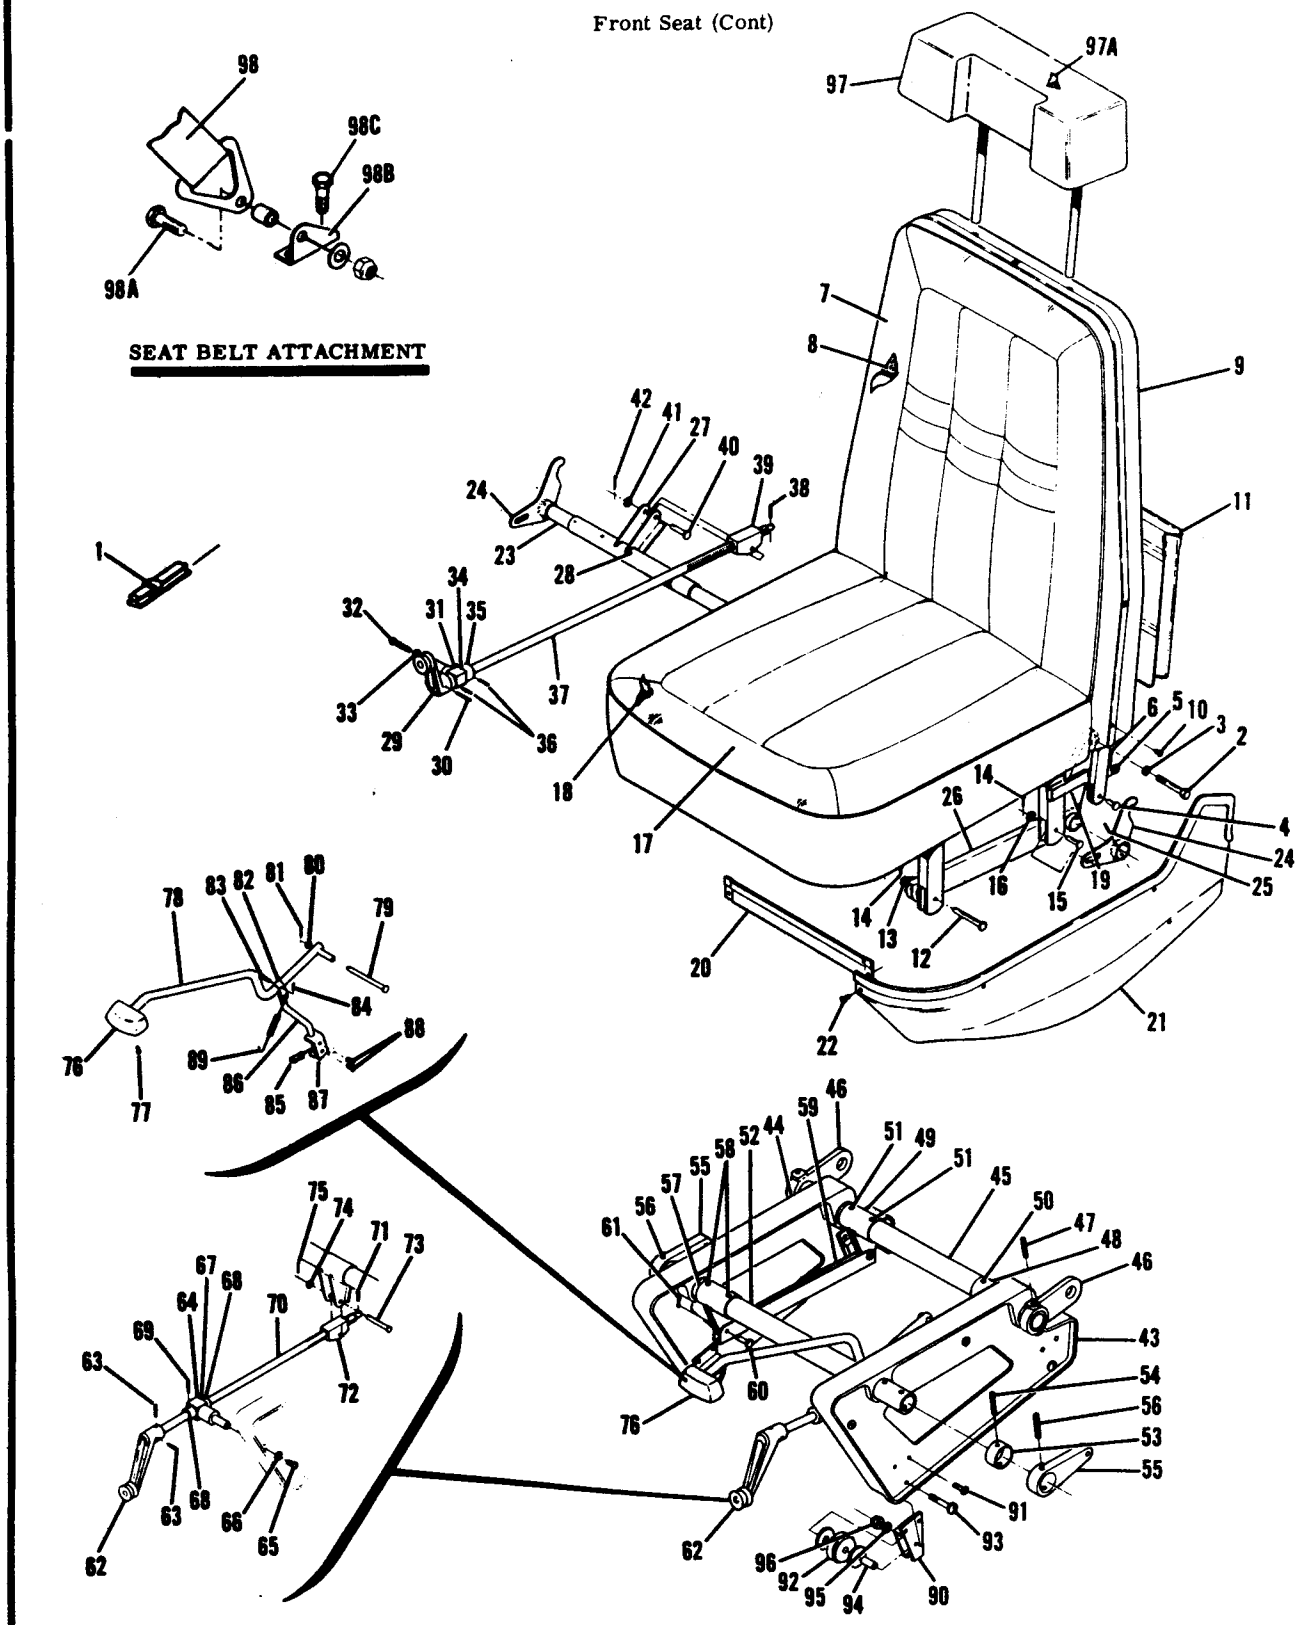

182 SERIAL 18260826 THRU 18261425

Figure 51E. Infinite Adjust Front Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51E-			FRONT SEAT INSTALLATION-INFINITE ADJUST	NP	A
	0714004-1	#	FRONT SEAT ASSY-INFINITE ADJUST-PILOT	1	
	0714004-2	#	FRONT SEAT ASSY-INFINITE ADJUST CO-PILOT	1	
			ATTACHING PARTS		
- 1	0713074-1		STOP-SEAT	1	
	MS20392-1C21		PIN-CLEVIS	1	
	MS24665-151		PIN-COTTER	1	
			---•---		
	0714004-200		BACK ASSEMBLY-UPHOLSTERED SEAT	1	
			ATTACHING PARTS		
- 2	AN3-17A		BOLT	2	
- 3	AN960-10L		WASHER	4	
	0514029-2		SPACER	2	
	MS21044N3		NUT	2	
- 4	MS20392-2C11		PIN	2	
- 5	AN960-10L		WASHER	2	
- 6	MS24665-132		COTTER PIN	2	
			---•---		
- 7	0714004-5	#	COVER ASSEMBLY-SEAT BACK	1	
- 8	0514019-1		CUSHION ASSEMBLY-SEAT BACK	1	
- 9	0514076-2	#	TRIM ASSEMBLY-SEAT BACK	1	
			ATTACHING PARTS		
-10	S1021A4-6		SCREW	5	
			---•---		
-11	1214062-5	#	POCKET ASSY-MAGAZINE	1	
			ATTACHING PARTS		
	S1021A4-6		SCREW	2	
			---•---		
	0714004-201		BOTTOM ASSEMBLY-UPHOLSTERED SEAT	1	
			ATTACHING PARTS		
-12	MS20392-3C49		PIN	2	
-13	AN960-416L		WASHER	2	
-14	MS24665-134		COTTER PIN	4	
-15	MS20392-3C17		PIN	2	
-16	AN960-416L		WASHER	2	
			---•---		
-17	0714004-4		COVER ASSEMBLY-SEAT BOTTOM	1	
-18	0514077-3		CUSHION ASSEMBLY-SEAT BOTTOM	1	
-19	0514101-1		STIFFENER-LH	1	
	0514101-2		STIFFENER-RH	1	
			ATTACHING PARTS		
	S1021A4-6		SCREW	2	
			---•---		
-20	0514017-3	#	TRIM-SEAT BOTTOM	1	
-21	0514077-7	#	TRIM-LH SEAT BOTTOM	1	
	0514077-4	#	TRIM-RH SEAT BOTTOM	1	
			ATTACHING PARTS		
-22	S1021A4-6		SCREW	4	
			---•---		
-23	0514026-11		TORQUE TUBE	1	
-24	0514030-4		BELLCRANK ASSY-SEAT BACK ADJUST	2	
			ATTACHING PARTS		
-25	NAS561P4-12		PIN	2	
			---•---		
-26	0514060-5		BRACKET ASSEMBLY	2	
-27	0514028-15		BELLCRANK ASSEMBLY-SEAT ADJUST PILOT	1	
	0514028-16		BELLCRANK ASSEMBLY-SEAT ADJUST CO-PILOT	1	
			ATTACHING PARTS		
-28	NAS561P4-12		PIN	4	
			---•---		
-29	0514036-1		HANDLE ASSEMBLY-SEAT BACK ADJUST	1	
			ATTACHING PARTS		
-30	NAS561P4-12		PIN	1	
			---•---		
-31	0514033-1		BEARING BLOCK	1	
			ATTACHING PARTS		
-32	AN520-10R8		SCREW	1	
-33	AN960-10L		WASHER	1	
			---•---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51E-34	S2013-2	BEARING	1	
	S2014-2	RACE-BEARING	2	
-35	1200138-2	COLLAR	2	
		ATTACHING PARTS		
-36	NAS561P4-12	PIN	1	
		---*---		
-37	0514027-9	SCREW ASSEMBLY	1	
-38	NAS561P4-10	PIN	1	
-39	1200139-1	NUT-SEAT ADJUST	1	
		ATTACHING PARTS		
-40	MS20392-2C37	PIN	1	
-41	AN960-10	WASHER	1	
-42	MS24665-132	COTTER-PIN	1	
		---*---		
	0514024-1	PEDESTAL ASSEMBLY-CO-PILOT SEAT	1	
	0514024-2	PEDESTAL ASSEMBLY-PILOT SEAT	1	
-43	0514035-1	PEDESTAL-LH	1	
-44	0514035-2	PEDESTAL-RH	1	
-45	0514026-2	TORQUE TUBE-REAR	1	
-46	0514034-1	BELLCRANK-VERTICAL ADJUST REAR	2	
		ATTACHING PARTS		
-47	NAS561P6-28	PIN	1	
		---*---		
-48	0514028-6	BELLCRANK ASSEMBLY-REAR TORQUE TUBE	1	
-49	0514028-5	BELLCRANK ASSEMBLY-REAR TORQUE TUBE	1	
		ATTACHING PARTS		
-50	NAS561P8-18	PIN LH BELLCRANK	2	
-51	NAS561P6-18	PIN RH BELLCRANK	2	
		---*---		
-52	0514026-4	TORQUE TUBE-FORWARD	1	
-53	1200136-1	COLLAR-FRONT TORQUE TUBE	3	
		ATTACHING PARTS		
-54	NAS561P6-18	PIN	1	
		---*---		
-55	0700633-5	BELLCRANK ASSY-VERTICAL ADJUST FRONT	2	
		ATTACHING PARTS		
-56	NAS561P6-22	PIN	1	
		---*---		
-57	0514028-5	BELLCRANK ASSY-FRONT TORQUE TUBE	1	
		ATTACHING PARTS		
-58	NAS561P8-18	PIN	2	
		---*---		
-59	0514032-1	CHANNEL-TORQUE TUBE INTERCONNECT	1	
		ATTACHING PARTS		
-60	MS20392-2C37	PIN	2	
	AN960-10	WASHER	2	
-61	MS24665-132	COTTER PIN	2	
		---*---		
-62	1200159-3	HANDLE ASSY-VERTICAL ADJUST	1	
		ATTACHING PARTS		
-63	NAS561P4-12	PIN	2	
		---*---		
-64	0514033-1	BEARING BLOCK	1	
		ATTACHING PARTS		
-65	AN520-10R8	SCREW	1	
-66	AN960-10L	WASHER	1	
		---*---		
-67	S2013-2	BEARING	1	
	S2014-2	RACE-BEARING	2	
-68	1200138-1	COLLAR	2	
		ATTACHING PARTS		
-69	NAS561P4-10	PIN	1	
		---*---		
-70	0514027-5	SCREW ASSY-VERTICAL ADJUST	1	
-71	NAS561P4-10	PIN	1	
-72	0514037-1	NUT-SEAT ADJUST	1	
		ATTACHING PARTS		
-73	MS20392-2C37	PIN	1	
-74	AN960-10	WASHER	1	
-75	MS24665-132	COTTER PIN	1	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51E-76	0700113-1		KNOB-SEAT ADJUST	1	
			ATTACHING PARTS		
-77	S1021Z6-8		SCREW	1	
			---*---		
-78	0514047-1		ARM ASSY-CO-PILOT SEAT ADJUST	1	
	0514047-9		ARM ASSY-PILOT SEAT ADJUST	1	
			ATTACHING PARTS		
-79	MS20392-2C83		PIN ATTACH 0514047-1	1	
	MS20392-2C45		PIN ATTACH 0514047-9	1	
-80	AN960-10L		WASHER	1	
-81	MS24665-132		COTTER PIN	1	
			---*---		
-82	1414104-56		CLAMP	1	
			ATTACHING PARTS		
-83	MS20392-1C15		PIN	1	
-84	MS24665-132		COTTER PIN	1	
			---*---		
-85	NAS561-3-16		PIN	1	
-86	171467-2		PIN-CO-PILOT SEAT ADJUST	1	
	1714067-4		PIN-PILOT SEAT ADJUST	1	
-87	1714061-1		GUIDE	1	
			ATTACHING PARTS		
-88	AN515-8R6		SCREW	2	
	NAS679A08		NUT	2	
			---*---		
-89	1414116-1		SPRING	1	
-90	1714000-33		HOUSING ASSY-ROLLER	4	
			ATTACHING PARTS		
-91	NAS220-11		SCREW	2	
	AN960-8		WASHER	2	
	NAS679A08		NUT	2	
			---*---		
-92	1714000-K200		ROLLER KIT	4	
			ATTACHING PARTS		
-93	AN23-20A		SCREW	1	
-94	1414104-54		BUSHING	1	
-95	AN960-10L		WSHER	1	
-96	S1914-8		NUT	1	
			---*---		
-97	0514048-2	#	HEADREST ASSEMBLY	2	
-97A	0514048-10	#	COVER ASSEMBLY	1	
-98	S2070W103	%*	BELT ASSEMBLY-FRONT SEAT CLOVE BROWN	2	
	S2070L103	%*	BELT ASSEMBLY-FRONT SEAT BOGOTA BLUE	2	
	S2070C103	%*	BELT ASSEMBLY-FRONT SEAT CYPRUS GREEN	2	
	S2070A103	%*	BELT ASSEMBLY-FRONT SEAT TAHITIAN RED	2	
	S2070B103	%*	BELT ASSEMBLY-FRONT SEAT BLACK	2	
			ATTACHING PARTS		
-98A	AN4-5A		BOLT	2	
	NAS43HT4-12		SPACER	2	
	AN960-416L		WASHER	2	
	NAS679A4		NUT	2	
			---*---		
-98B	0510205-5		FITTING-SEAT BELT INBD LH & OUTBD RH	2	
	0510205-6		FITTING-SEAT BELT OUTBD LH & INBD RH	2	
			ATTACHING PARTS		
-98C	AN3-4A		BOLT	2	
			---*---		

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.


NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

NOTE. *SEE FIGURE 56 FOR SHOULDER HARNESS INSTL.


NOTE. %WHEN ORDERING SEAT BELTS FOR AUSTRALIAN USE, ADD VH TO PART NUMBER. EXAMPLE-S2070W103VH.

A---182 SERIAL 18260826 THRU 18261425
A182 SERIAL A182-0137 & ON


Front Seat (Cont)

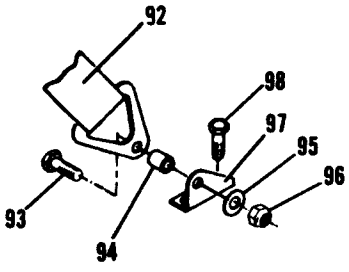


SEAT BELT ATTACHMENT

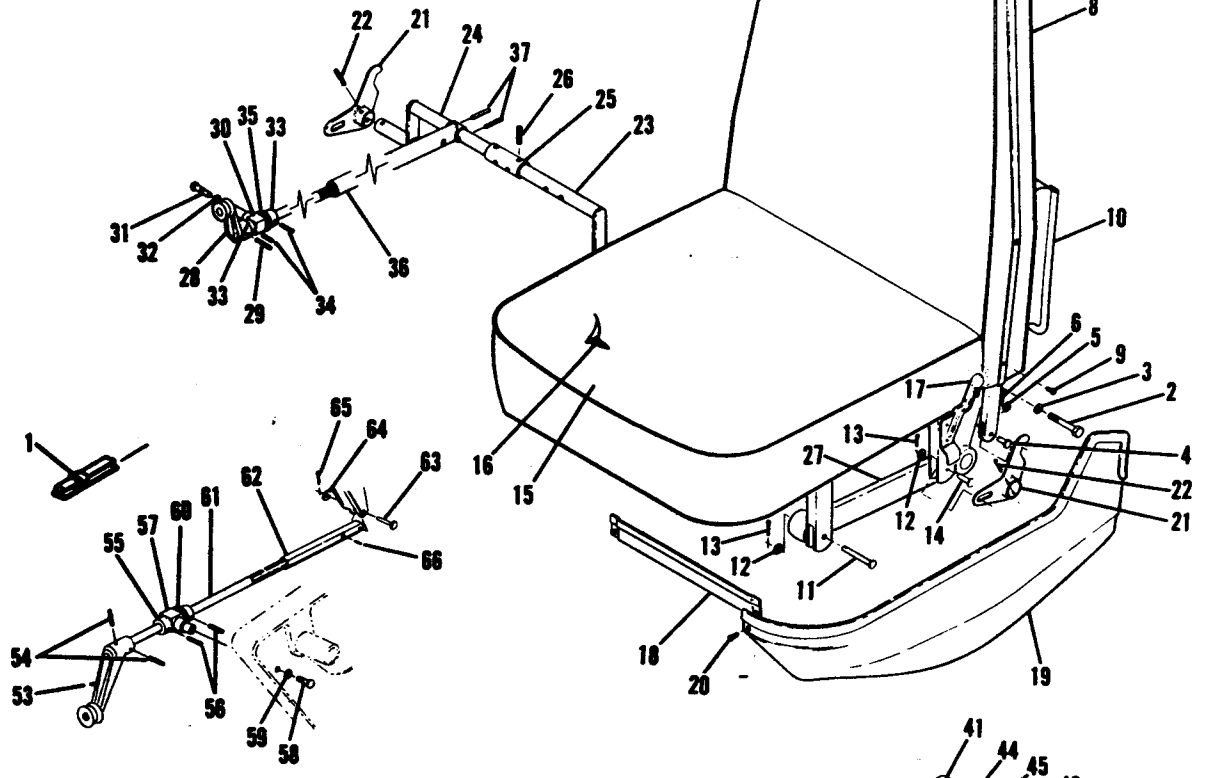

Detail A

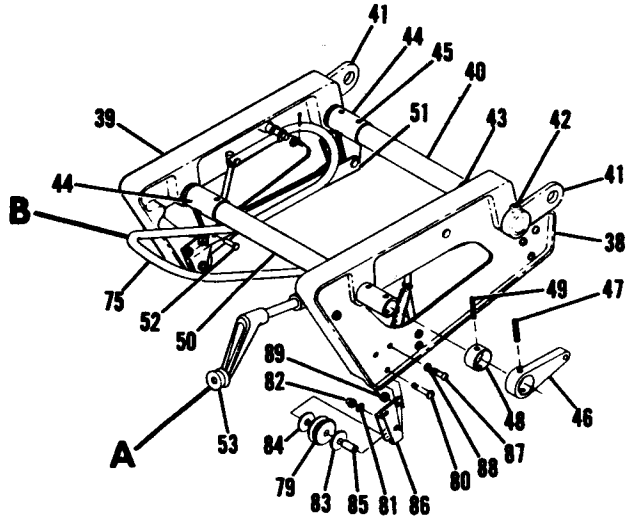

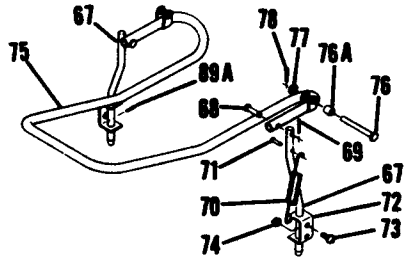

Detail B

182 SERIAL 18261426 THRU 18262465

Figure 51F. Infinite Adjust Front Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51F-			FRONT SEAT INSTALLATION-INFINITE ADJUST	NP	A
	0714008-2	#	FRONT SEAT ASSY-INFINITE ADJUST COPILOT	1	
	0714008-1	#	FRONT SEAT ASSY-INFINITE ADJUST PILOT	1	
			ATTACHING PARTS		
- 1	0713074-1		STOP-SEAT	1	
	MS20392-1C21		PIN	1	
	MS24665-151		PIN-COTTER	1	
			---*---		
			BACK ASSY-UPHOLSTERED SEAT	NP	
			ATTACHING PARTS		
- 2	AN3-17A		BOLT	2	
- 3	AN960-10L		WASHER	4	
	0514029-2		SPACER	2	
	MS21044N3		NUT	2	
- 4	MS20392-2C11		PIN	2	
- 5	AN960-10L		WASHER	2	
- 6	MS24665-132		COTTER PIN	2	
			---*---		
- 7	0714008-5	#	COVER ASSY-SEAT BACK	1	
- 7A	0714008-10		CUSHION ASSY-SEAT BACK	1	
- 8	0514083-1	¤	TRIM ASSY-SEAT BACK	1	
			ATTACHING PARTS		
- 9	S1021A4-6		SCREW	5	
			---*---		
-10	1214062-5	#	POCKET ASSY-MAGAZINE	1	
			BOTTOM ASSY-UPHOLSTERED SEAT	NP	
			ATTACHING PARTS		
-11	MS20392-3C49		PIN	2	
-12	AN960-416L		WASHER	4	
-13	MS24665-134		PIN-COTTER	4	
-14	MS20392-3C17		PIN	2	
			---*---		
-15	0714008-4	#	COVER ASSY-SEAT BOTTOM	1	
-16	0514075-2		CUSHION ASSY-SEAT BOTTOM	1	
-17	0514010-1		STIFFENER-LH	1	
	0514010-2		STIFFENER-RH	1	
			ATTACHING PARTS		
	S1021A4-6		SCREW	2	
			---*---		
-18	0514017-3	¤	TRIM-SEAT BOTTOM FWD	1	
-19	0714010-1	¤	TRIM-SEAT BOTTOM LH	1	
	0714010-2	¤	TRIM-SEAT BOTTOM RH	1	
			ATTACHING PARTS		
-20	S1021A4-6		SCREW	6	
			---*---		
-21	0514030-4		BELLCRANK ASSY-SEAT BACK ADJUST	2	
			ATTACHING PARTS		
-22	NAS561P4-12		PIN	2	
			---*---		
-23	1714074-13		CRANK-WELD ASSY-LH	1	
-24	1714074-14		CRANK-WELD ASSY-RH	1	
-25	1714074-6		SPLICE	1	
			ATTACHING PARTS		
-26	NAS561P6-12		PIN	4	
			---*---		
-27	0514060-5		BRACKET-SEAT PIVOT	2	
-28	0514036-1		HANDLE ASSY-SEAT BACK ADJUST	1	
			ATTACHING PARTS		
-29	NAS561P4-12		PIN	1	
			---*---		
-30	0514033-1		BEARING BLOCK	1	
			ATTACHING PARTS		
-31	AN520-10R8		SCREW	1	
-32	AN960-10L		WASHER	1	
			---*---		
-33	1200138-2		COLLAR	2	
			ATTACHING PARTS		
-34	NAS561P4-12		PIN	1	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51F-35	S2013-2	BEARING	1	
	S2014-2	RACE-BEARING	2	
-36	0514089-1	JACK SCREW ASSY	1	
		ATTACHING PARTS		
-37	NAS561P4-15	PIN	2	
		---*---		
	0514051-2	PEDESTAL ASSY-CO-PILOT SEAT	1	
	0514051-1	PEDESTAL ASSY-PILOT SEAT	1	
-38	0514035-17	PEDESTAL-LH	1	
-39	0514035-18	PEDESTAL-RH	1	
-40	0514026-2	TORQUE TUBE-REAR	1	
-41	0514034-1	BELLCRANK-REAR TORQUE TUBE	2	
		ATTACHING PARTS		
-42	NAS561P6-28	PIN	1	
		---*---		
-43	0514028-6	BELLCRANK ASSY-REAR TORQUE TUBE INBD	1	
		ATTACHING PARTS		
	NAS561P8-18	PIN	2	
		---*---		
-44	0514028-5	BELLCRANK ASSY-FRONT & REAR TORQUE TUBE OUTBD	2	
		ATTACHING PARTS		
-45	NAS561P8-18	PIN	2	
		---*---		
-46	0700633-5	BELLCRANK-FWD TORQUE TUBE	2	
		ATTACHING PARTS		
-47	NAS561P6-22	PIN	2	
		---*---		
-48	1200136-1	COLLAR	3	
		ATTACHING PARTS		
-49	NAS561P6-18	PIN	1	
		---*---		
-50	0514026-4	TORQUE TUBE-FWD	1	
-51	0514032-1	CHANNEL-TORQUE TUBE INTERCONNECT	1	
		ATTACHING PARTS		
-52	MS20392Z-2C17	PIN	2	
	AN960-10L	WASHER	2	
	MS24665-132	COTTER PIN	2	
		---*---		
-53	1200159-3	HANDLE ASSY-VERTICAL ADJUST	1	
		ATTACHING PARTS		
-54	NAS561P4-12	PIN	2	
		---*---		
-55	1200138-2	COLLAR	2	
		ATTACHING PARTS		
-56	NAS561P4-12	PIN	1	
		---*---		
-57	0514033-2	BEARING BLOCK	1	
		ATTACHING PARTS		
-58	AN520-10R8	SCREW	1	
-59	AN960-10L	WASHER	1	
		---*---		
-60	S2013-2	BEARING	1	
	S2014-2	RACE-BEARING	2	
-61	0514027-21	SCREW ASSY-VERTICAL ADJUST	1	
-62	1514119-3	NUT-VERTICAL ADJUST	1	
		ATTACHING PARTS		
-63	MS20392-2C37	PIN	1	
-64	AN960-10	WASHER	1	
-65	MS24665-132	COTTER	1	
-66	NAS561P4-8	PIN	1	
		---*---		
-67	1714067-5	PIN-SEAT ADJUST	2	
		ATTACHING PARTS		
-68	MS20392-1C21	PIN	1	
-69	MS24665-132	COTTER PIN	1	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51F-70	1414116-1		SPRING LH SIDE ONLY	1	
			ATTACHING PARTS		
-71	MS20392-1C11		PIN	1	
			---*---		
-72	1714061-1		GUIDE-PIN	2	
			ATTACHING PARTS		
-73	AN515-8R6		SCREW	2	
-74	NAS679A08		NUT	2	
			---*---		
-75	0514090-4		HANDLE-SEAT ADJUST	1	
			ATTACHING PARTS		
-76	MS20392-2C59		PIN	2	
-76A	NAS43DD3-18		SPACER	2	
-77	AN960-10L		WASHER	2	
-78	MS24665-132		COTTER PIN	2	
			---*---		
-79	S1704-1		ROLLER-SEAT	4	
			ATTACHING PARTS		
-80	AN23-20A		BOLT	1	
-81	AN960-10L		WASHER	1	
-82	S1914-8		NUT	1	
-83	1714000-22		WASHER	1	
-84	1714000-41		WASHER	1	
-85	1414104-54		BUSHING	1	
			---*---		
-86	1714000-33		HOUSING-SEAT ROLLER	4	
			ATTACHING PARTS		
-87	NAS220-11		SCREW	2	
-88	AN960-8		WASHER	2	
-89	NAS679A08		NUT	2	
			---*---		
-89A	NAS561-1-16		PIN	2	
-90	0514048-2	#	HEADREST ASSEMBLY	2	
-91	0514048-10	#	COVER ASSEMBLY	1	
-92	S2070W103	%*	BELT ASSY-FRONT SEAT GOLD	2	
	S2070V103	%*	BELT ASSY-FRONT SEAT BLUE	2	
	S2070AA103	%*	BELT ASSY-FRONT SEAT OLIVE	2	
	S2070Z103	%*	BELT ASSY-FRONT SEAT RED	2	
	S2070B103	%*	BELT ASSY-FRONT SEAT BLACK	2	
			ATTACHING PARTS		
-93	AN4-5A		BOLT	2	
-94	NAS43HT4-12		SPACER	2	
-95	AN960-416L		WASHER	2	
-96	NAS679A4		NUT	2	
			---*---		
-97	0510205-5		FITTING-SEAT BELT INBD LH & OUTBD RH	2	
	0510205-6		FITTING-SEAT BELT OUTBD LH & INBD RH	1	
			ATTACHING PARTS	2	
-98	AN3-4A		BOLT		
			---*---		

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.


NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

NOTE. *SEE FIGURE 56 FOR SHOULDER HARNESS INSTL.

NOTE. %WHEN ORDERING SEAT BELTS FOR AUSTRALIAN USE, ADD VH TO PART NUMBER. EXAMPLE-S2070W103VH.

A---182 SERIAL 18261426 THRU 18262465

Rear Seat

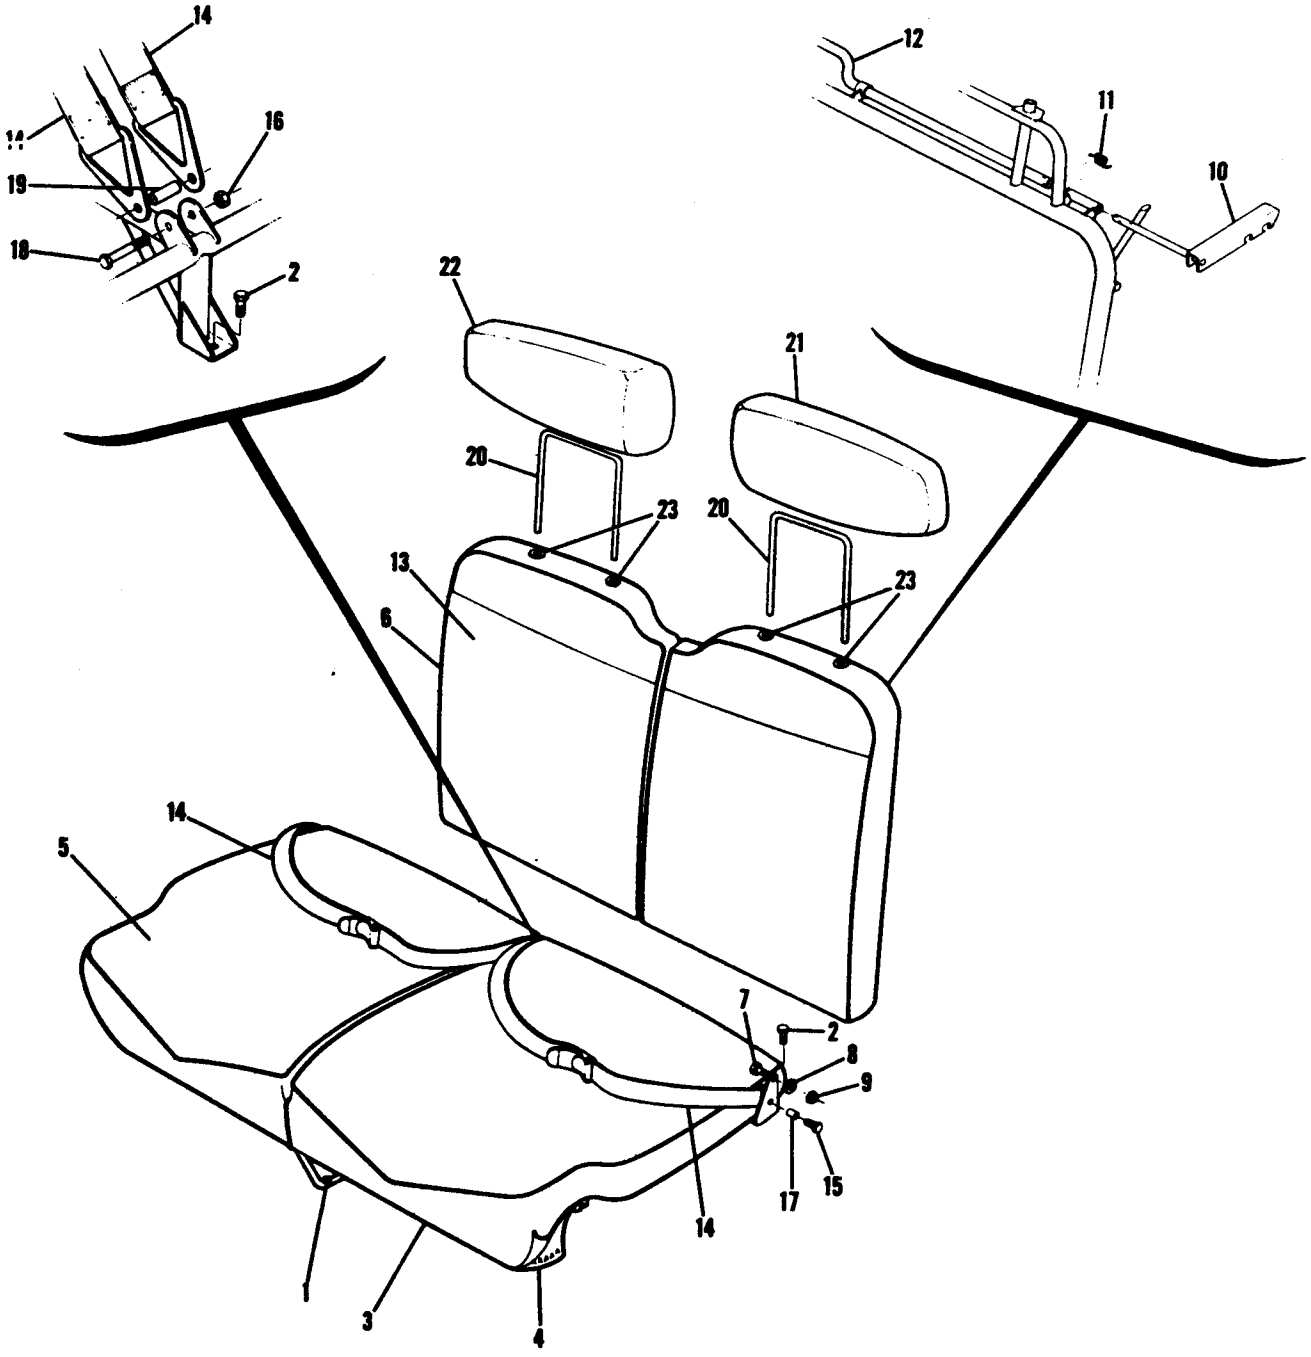


182 SERIAL 18253599 THRU 18254423

Figure 52. Rear Seat Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
52 -		SEAT INSTALLATION-REAR	NP	A
	0700659-2	SEAT ASSEMBLY-REAR	1	
		ATTACHING PARTS		
- 1	AN3-11A	BOLT	1	
- 2	AN4-4A	BOLT	3	
		---*---		
- 3	0700659-4	BOTTOM ASSEMBLY-REAR SEAT	1	
- 4	0700660-1	SKIRT	1	
		ATTACHING PARTS		
	S1021Z4-6	SCREW	11	
		---*---		
- 5	0700659-8	COVER ASSEMBLY BOTTOM	1	
- 6	0700659-6	BACK ASSEMBLY-REAR SEAT	1	
		ATTACHING PARTS		
- 7	AN4-13A	BOLT	2	
- 8	AN960D416L	WASHER	2	
- 9	NAS679A4	NUT	2	
		---*---		
-10	0711644-2	LATCH ASSEMBLY-REAR SEAT LH	1	
	0711644-3	LATCH ASSEMBLY-REAR SEAT RH	1	
-11	0511049	SPRING-LH	1	
	0511049-1	SPRING-RH	1	
-12	0711644-7	LATCH-TUBE	1	
-13	0700659-10	COVER ASSEMBLY-REAR SEAT BACK	1	
-14	S1060-14	SEAT BELT-REAR	2	
		ATTACHING PARTS		
-15	AN4-5A	BOLT	2	
-16	NAS679A4	NUT	3	
-17	NAS43HT4-20	SPACER	2	
-18	AN4-11A	BOLT	1	
-19	NAS43HT4-47	SPACER	1	
		---*---		
-20	1200103-5	SUPPORT-HEADREST	2	
-21	1200103-3	HEADREST-REAR LH	1	
-22	1200103-4	HEADREST-REAR RH	1	
-23	0700320-1	RETAINER-UPHOLSTERY	4	
		A---182 SERIAL 18253599 THRU 18254423		

Rear Seat (Cont)

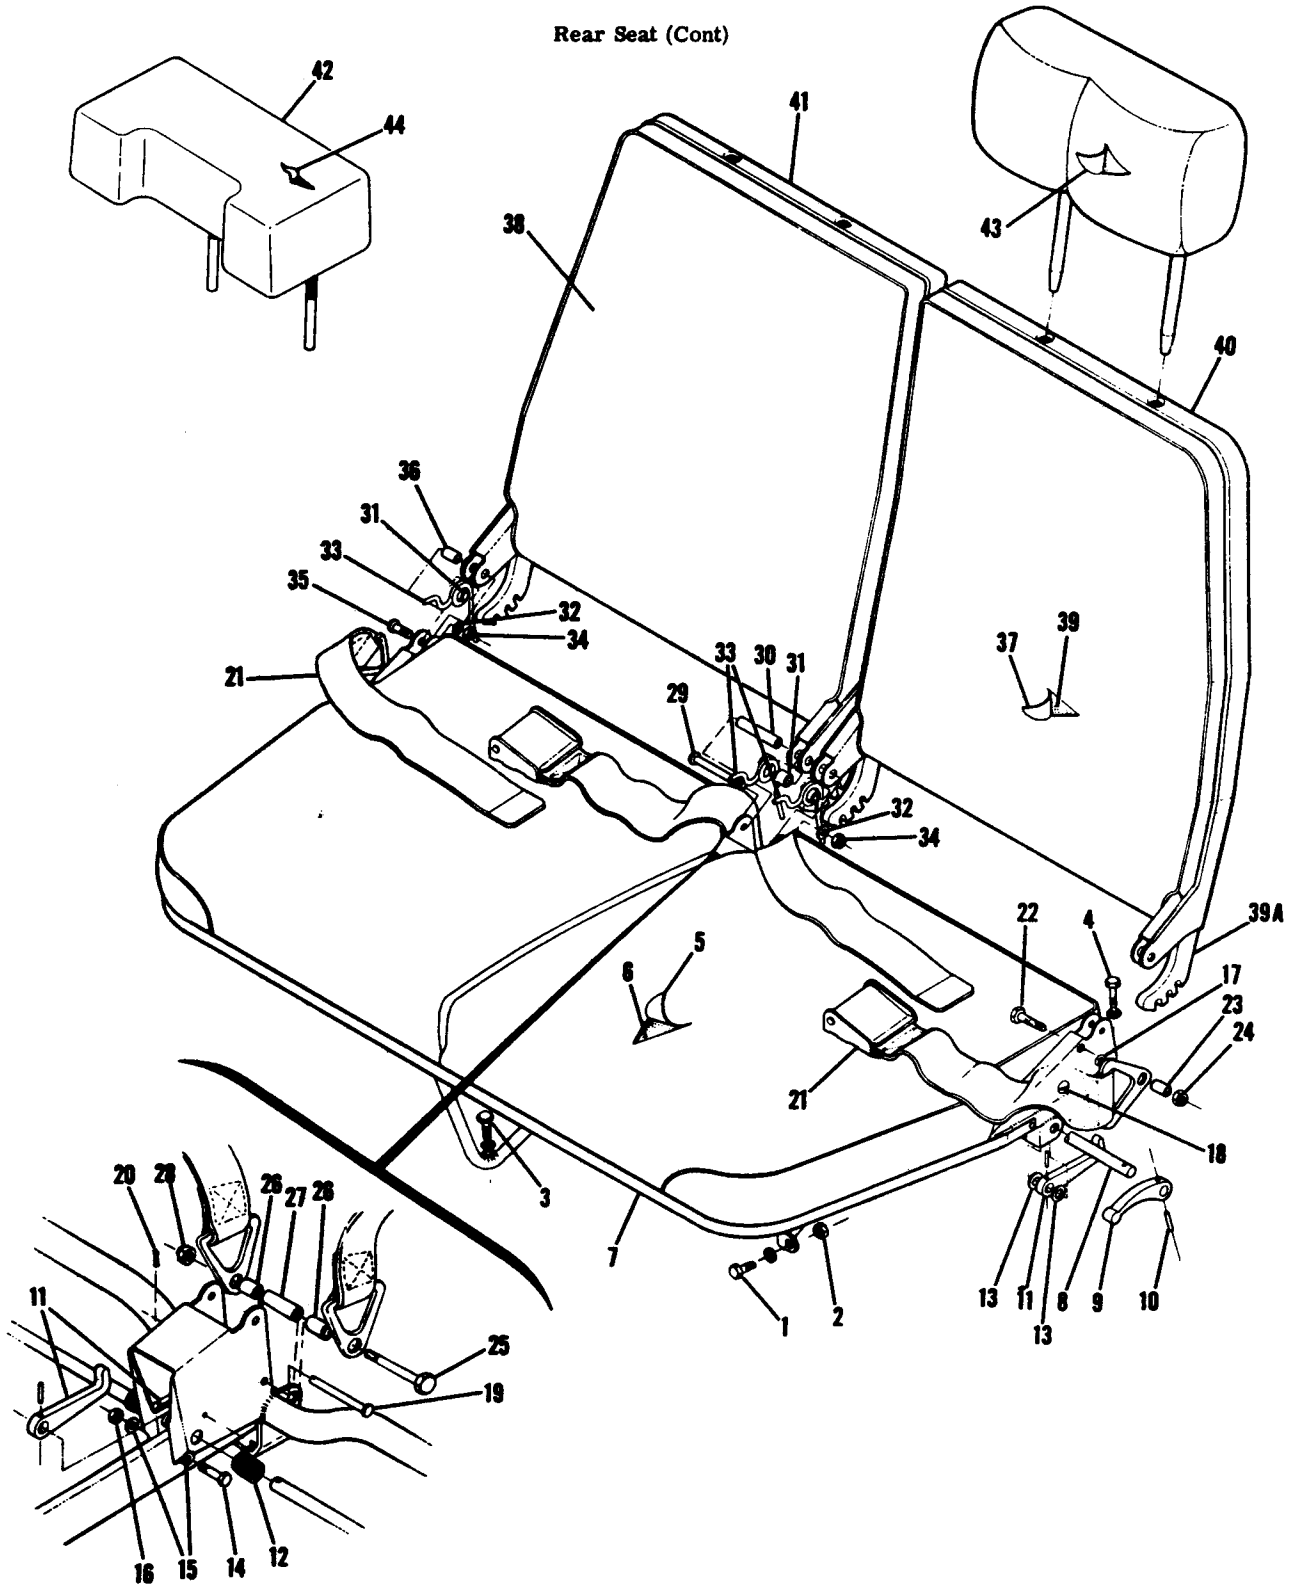

182 SERIAL 18254424 THRU 18260825

Figure 52A. Rear Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
52A-			SEAT INSTALLATION-REAR	NP	A
	0700678-7	#	BOTTOM ASSEMBLY-REAR SEAT	1	M
	0700678-27	#	BOTTOM ASSEMBLY-REAR SEAT	1	N
	0700678-30	#	BOTTOM ASSEMBLY-REAR SEAT	1	B
			ATTACHING PARTS		
- 1	AN4-5A		BOLT FRONT SIDE ATTACHMENTS	2	
- 2	NAS679A4		NUT FRONT SIDE ATTACHMENTS	2	
- 3	AN3-11		BOLT	1	
- 4	AN4-5		BOLT REAR SIDES & CENTER ATTACHMENTS	4	
			---*---		
- 5	0700678-8	#	COVER-REAR SEAT BOTTOM LH	1	P
	0700678-11	#	COVER-REAR SEAT BOTTOM RH	1	P
	0700678-37	#	COVER-REAR SEAT BOTTOM	1	B
- 6	1414200-10		CUSHION-REAR SEAT BOTTOM LH	1	M
	1414200-39		CUSHION-REAR SEAT BOTTOM LH	1	N
	0700678-33		CUSHION-REAR SEAT BOTTOM LH	1	B
	1414200-23		CUSHION-REAR SEAT BOTTOM RH	1	M
	1414200-40		CUSHION-REAR SEAT BOTTOM RH	1	N
	0700678-34		CUSHION-REAR SEAT BOTTOM RH	1	B
- 7	1414217-1		RETAINER-UPHOLSTERY	1	M
	0715017-1	¤	RETAINER-UPHOLSTERY	1	L
			ATTACHING PARTS		
	S1021Z4-6		SCREW	12	
			---*---		
- 8	1414211-24		TUBE-CONTROL	2	
			ATTACHING PARTS		
- 9	0710312-2		HANDLE	1	
-10	NAS561-P3-10		PIN	3	
-11	1414231-2		PAWL	2	
-12	1414107-1		SPRING-LH SHAFT ONLY	1	
	1414107-2		SPRING-RH SHAFT ONLY	1	
-13	AN960-416		WASHER	2	
			---*---		
-14	AN3-10A		BOLT	2	
-15	AN960-10L		WASHER	4	
-16	MS21044N3		NUT	2	
-17	AN507-832R14		SCREW	2	
	NAS679A08		NUT	2	
-18	AN23-15A		BOLT	2	
	MS21044N3		NUT	2	
-19	MS20392-2C71		PIN	1	
-20	MS24665-132		PIN-COTTER	1	
-21	S1060-14		SAFETY BELT-REAR SEAT	2	D
	S1060-1		SAFETY BELT-REAR SEAT	2	E
	S1618C1		SAFETY BELT-REAR SEAT BLUE	2	F
	S1618D1		SAFETY BELT-REAR SEAT TAN	2	F
	S1618F1		SAFETY BELT-REAR SEAT OLIVE	2	F
	S1618H1		SAFETY BELT-REAR SEAT CORAL	2	F
	S1618D1		SAFETY BELT-REAR SEAT TAN	2	G
	S1618J1		SAFETY BELT-REAR SEAT RED	2	G
	S1618K1		SAFETY BELT-REAR SEAT AVACADO	2	G
	S1618M1		SAFETY BELT-REAR SEAT BLUE	2	G
	S1746D1		SAFETY BELT-REAR SEAT TAN	2	H
	S1746J1		SAFETY BELT-REAR SEAT RED	2	H
	S1746M1		SAFETY BELT-REAR SEAT BLUE	2	H
	S1746K1		SAFETY BELT-REAR SEAT AVACADO	2	H
	S1746T1		SAFETY BELT-REAR SEAT MARIGOLD	2	N
	S1746V1		SAFETY BELT-REAR SEAT OLIVE	2	N
	S1746W1		SAFETY BELT-REAR SEAT BROWN	2	N
	S1746Y1		SAFETY BELT-REAR SEAT BLUE	2	N
	S1746W1	*	SAFETY BELT-REAR SEAT BROWN	2	B
	S1746H1	*	SAFETY BELT-REAR SEAT BLUE	2	B
	S1746F1	*	SAFETY BELT-REAR SEAT RED	2	B
	S1746G1	*	SAFETY BELT-REAR SEAT GREEN	2	B
	S1746B1	*	SAFETY BELT-REAR SEAT BLACK	2	B

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
52A-	S2070W107	%**	SAFETY BELT-REAR SEAT BROWN	2	B
	S2070H107	%**	SAFETY BELT-REAR SEAT BLUE	2	B
	S2070F107	%**	SAFETY BELT-REAR SEAT RED	2	B
	S2070G107	%**	SAFETY BELT-REAR SEAT GREEN	2	B
	S2070B107	%**	SAFETY BELT-REAR SEAT BLACK	2	B
			ATTACHING PARTS		
-22	AN4-12A		BOLT ATTACH OUTBOARD BELT ENDS	2	
	NAS43HT4-32		SPACER INSTALLED IN FRAME RECESS OUTBOARD	2	
-23	NAS43HT4-12		SPACER THROUGH BELT STIRRUP	2	
-24	NAS679A4		NUT INSTALLED ON OUTBOARD ATTACH POINT	2	
-25	AN4-23A		BOLT ATTACH BOTH BELTS INBOARD	1	
-26	NAS43HT4-12		SPACER THROUGH BELT STIRRUP	2	
-27	NAS43HT-80		SPACER INSTALLED IN FRAME RECESS CENTER	1	
-28	NAS679A4		NUT INSTALLED AT INBOARD ATTACH POINT	1	
			---*---		
	0700678-3	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED LH	1	M
	1414200-49	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED LH	1	N
	0700678-31	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED LH	1	B
	0700678-4	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED RH	1	M
	1414200-50	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED RH	1	N
	0700678-32	#	BACK ASSEMBLY-REAR SEAT UPHOLSTERED RH	1	B
			ATTACHING PARTS		
-29	AN3-24A		BOLT	1	
-30	1414211-22		BUSHING	1	
-31	0711668-1		BUSHING	4	
-32	AN960-10L		WASHER	3	
-33	0711667-1		SPRING	4	
-34	MS21044N3		NUT	3	
-35	AN3-10A		BOLT	2	
-36	1414104-4		SPACER	2	
			---*---		
-37	0700678-5	#	COVER-SEAT BACK LH	1	M
	1414200-21	#	COVER-SEAT BACK LH	1	N
	0700678-39	#	COVER-SEAT BACK LH	1	B
-38	0700678-6	#	COVER-SEAT BACK RH	1	M
	1414200-22	#	COVER-SEAT BACK RH	1	N
	0700678-44	#	COVER-SEAT BACK RH	1	B
-39	1414200-19		CUSHION-SEAT BACK LH	1	P
	0700678-43		CUSHION-SEAT BACK LH	1	B
	1414200-20		CUSHION-SEAT BACK RH	1	P
	0700678-38		CUSHION-SEAT BACK RH	1	B
-39A	1414230-2		CAM-SEAT BACK RECLINE	2	
-40	1414215-19	=	TRIM ASSEMBLY-SEAT BACK LH	1	K
	0715004-1	=	TRIM ASSEMBLY-SEAT BACK LH	1	H
	0715016-1	=	TRIM ASSEMBLY-SEAT BACK LH	1	L
-41	1414215-20	=	TRIM ASSEMBLY-SEAT BACK RH	1	K
	0715004-2	=	TRIM ASSEMBLY-SEAT BACK RH	1	H
	0715016-2	=	TRIM ASSEMBLY-SEAT BACK RH	1	L
			ATTACHING PARTS		
	S1021A6-8C		SCREW	8	M
	S1021A4-6		SCREW	5	L
			---*---		
	1414251-1	#	HEADREST ASSEMBLY-SEAT BACK	2	K
	1714040-1	#	HEADREST ASSEMBLY	2	H
	1714040-5	#	HEADREST ASSEMBLY SKYLANE ONLY	2	H
-42	0514048-2	#	HEADREST ASSEMBLY	2	L
-43	1414252-6	#	COVER-HEADREST	1	K
	1714040-2	#	COVER-HEADREST	1	H
	1714040-6	#	COVER HEADREST SKYLANE ONLY	1	H
-44	0514048-10	#	COVER-HEADREST	1	L

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.

NOTE. =THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.


NOTE. *USED ON AIRCRAFT WITHOUT SHOULDER HARNESS

NOTE. **USED ON AIRCRAFT EQUIPPED WITH SHOULDER HARNESS. SEE FIG 56 FOR SHOULDER HARNESS.

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
52A-		NOTE. %WHEN ORDERING SEAT BELTS FOR AUSTRALIAN USE, ADD VH TO PART NUMBER. EXAMPLE-S2070W107VH.		
		A---182 SERIAL 18254424 THRU 18260825 A182 SERIAL A182-0001 & ON B---182 SERIAL 18260446 THRU 18260825 C---DELETED D---182 SERIAL 18254424 THRU 18255844 E---182 SERIAL 18255845 THRU 18256684 F---182 SERIAL 18256685 THRU 18257625 A182 SERIAL A182-0001 THRU A182-0056 G---182 SERIAL 18257626 THRU 18258505 A182 SERIAL A182-0057 THRU A182-0096 H---182 SERIAL 18258506 THRU 18260055 A182 SERIAL A182-0097 THRU A182-0116 J---DELETED K---182 SERIAL 18254424 THRU 18258505 A182 SERIAL A182-0001 THRU A182-0096 L---182 SERIAL 18260056 THRU 18260825 A182 SERIAL A182-0117 & ON M---182 SERIAL 18254424 THRU 18260055 A182 SERIAL A182-0001 THRU A182-0116 N---182 SERIAL 18260056 THRU 18260445 A182 SERIAL A182-0117 & ON P---182 SERIAL 18254424 THRU 18260445 A182 SERIAL A182-0007 & ON		

Rear Seat (Cont)

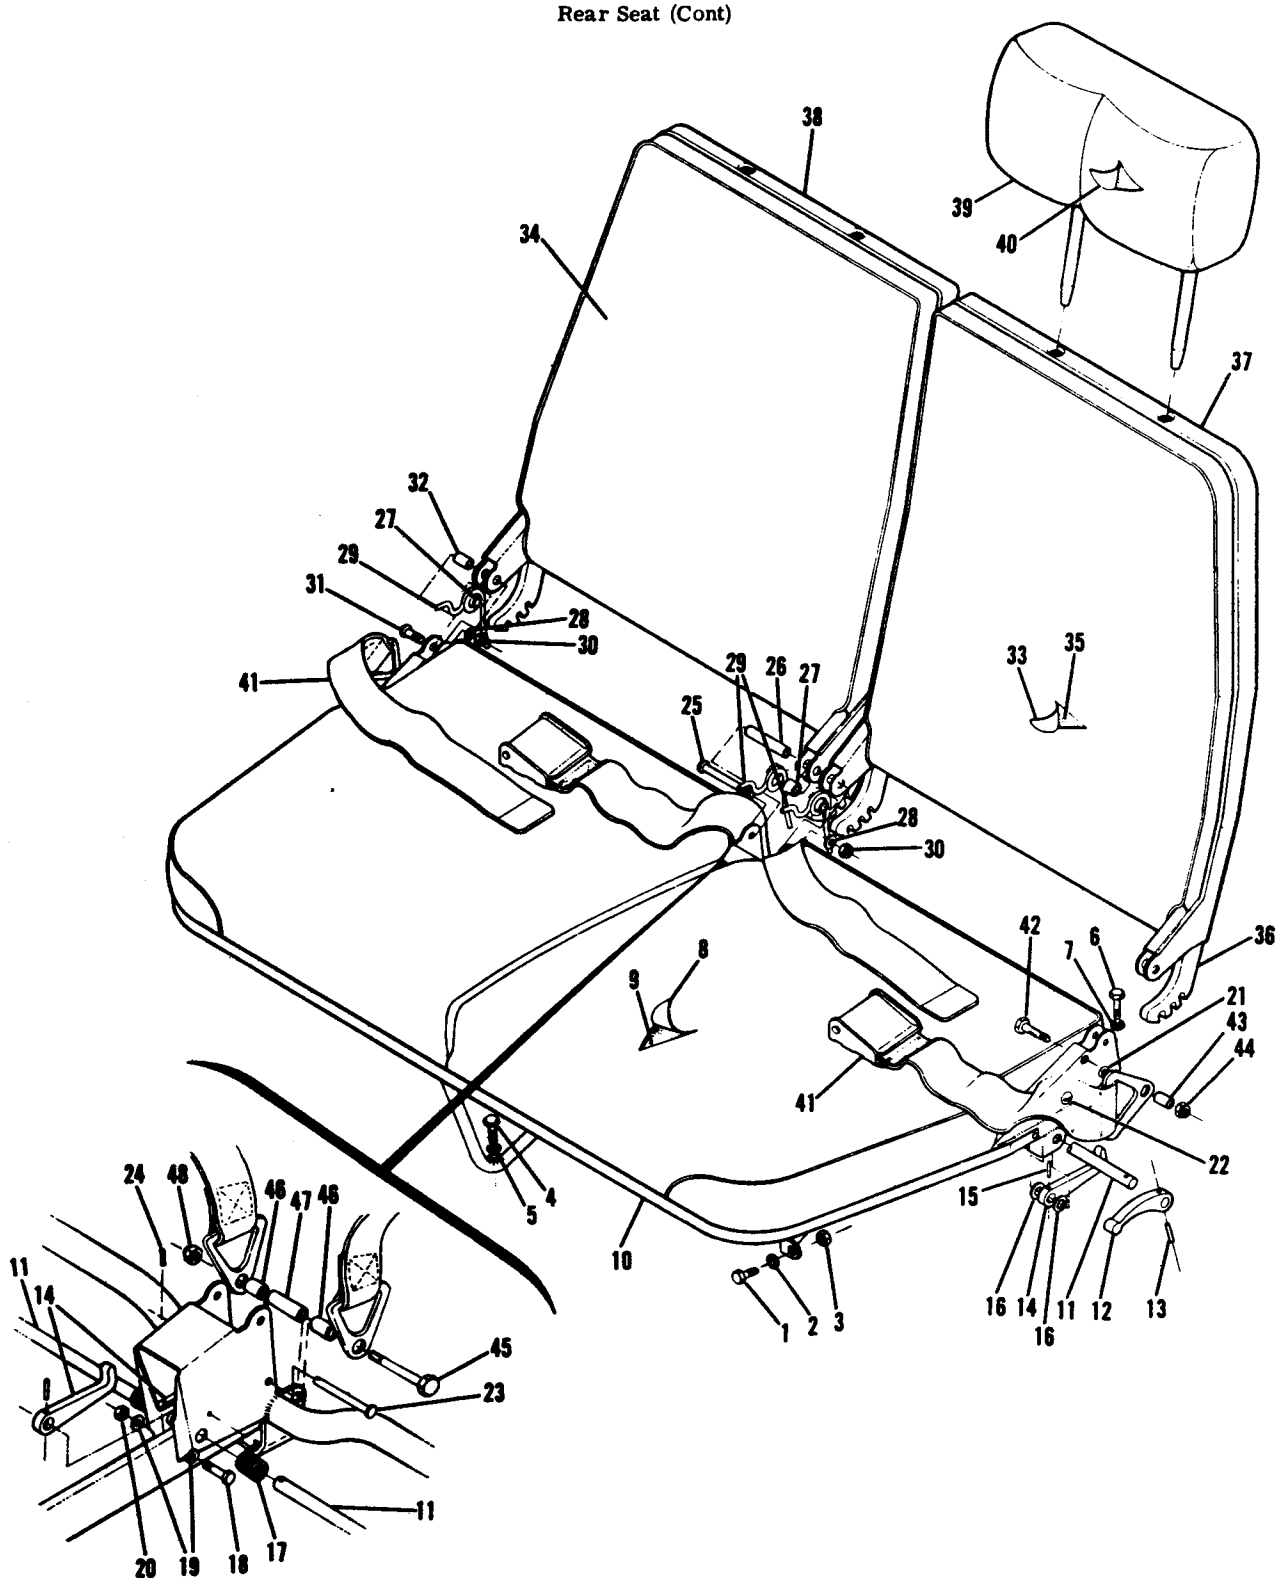

182 SERIAL 18260826 THRU 18262465

Figure 52B. Rear Seat Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
528-	0700678-46		SEAT ASSY-REAR	1	A
	0714009-1		SEAT ASSY-REAR	1	B
	0700678-49	#	BOTTOM ASSEMBLY-REAR SEAT	1	A
	0714009-2	#	BOTTOM ASSEMBLY-REAR SEAT	1	B
			ATTACHING PARTS		
- 1	AN4-5A		BOLT	2	
- 2	AN960-416L		WASHER	2	
- 3	NAS679A4		NUT	2	
- 4	AN3-11A		BOLT	1	
- 5	AN960-10L		WASHER	1	
- 6	AN4-5A		BOLT AFTSIDES & CENTER ATTACH	4	
- 7	S1450-4-10-064		WASHER AFT SIDES & CENTER ATTACH	4	
			---*---		
- 8	0700678-50	#	COVER ASSEMBLY-REAR SEAT BOTTOM	1	A
	0714009-5	#	COVER ASSEMBLY-REAR SEAT BOTTOM-LH	1	B
	0714009-6	#	COVER ASSEMBLY-REAR SEAT BOTTOM-RH	1	B
- 9	0700678-33		CUSHION-REAR SEAT BOTTOM LH	1	
	0700678-34		CUSHION-REAR SEAT BOTTOM RH	1	
-10	0715017-1		RETAINER	1	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	7	
			---*---		
-11	1414211-24		TUBE-CONTROL	2	
-12	0710312-2		HANDLE	2	
			ATTACHING PARTS		
-13	NAS561C3-10		PIN	1	
			---*---		
-14	1414231-2		PAWL	4	
			ATTACHING PARTS		
-15	NAS561C3-10		PIN	1	
			---*---		
-16	AN960-416		WASHER	4	
-17	1414107-1		SPRING-LH	1	
	1414107-2		SPRING-RH	1	
-18	AN3-10A		BOLT	2	
-19	AN960-10L		WASHER	4	
-20	MS21044N3		NUT	2	
-21	AN507-832R14		SCREW	2	
	NAS679A08		NUT	2	
-22	AN23-15A		BOLT	2	
-23	MS20392-2C71		PIN	1	
-24	MS24665-132		PIN-COTTER	1	
	0700678-47	#	BACK ASSY-REAR SEAT UPHOLSTERED LH	1	A
	0714009-3	#	BACK ASSY-REAR SEAT UPHOLSTERED LH	1	B
	0700678-48	#	BACK ASSY-REAR SEAT UPHOLSTERED RH	1	A
	0714009-4	#	BACK ASSY-REAR SEAT UPHOLSTERED RH	1	B
			ATTACHING PARTS		
-25	AN3-24A		BOLT	1	
-26	1414211-22		BUSHING	1	
-27	0711668-1		BUSHING	4	
-28	AN960-10L		WASHER	3	
-29	0711667-1		SPRING	4	
-30	MS21044N3		NUT	3	
-31	AN3-10A		BOLT	2	
-32	1414104-4		BUSHING	2	
			---*---		
-33	0700678-51	#	COVER ASSEMBLY-SEAT BACK LH	1	A
	0714009-7	#	COVER ASSEMBLY-SEAT BACK LH	1	B
-34	0700678-52	#	COVER ASSEMBLY-SEAT BACK RH	1	A
	0714009-8	#	COVER ASSEMBLY-SEAT BACK RH	1	B
-35	0700678-43		CUSHION-SEAT BACK LH	1	
	0700678-38		CUSHION-SEAT BACK RH	1	
-36	1414230-2		CAM-SEAT BACK RECLINE	2	
-37	0715016-1	¤	TRIM ASSEMBLY-SEAT BACK LH	1	
-38	0715016-2	¤	TRIM ASSEMBLY-SEAT BACK RH	1	
			ATTACHING PARTS		
	S1021A4-6		SCREW	5	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
52B-39	0514048-2	#	HEADREST ASSEMBLY	2	C
-40	0514048-10	#	COVER-HEADREST	1	C
-41	S1746W1	*	SAFETY BELT-REAR SEAT BROWN	2	A
	S1746L1	*	SAFETY BELT-REAR SEAT BLUE	2	A
	S1746C1	*	SAFETY BELT-REAR SEAT RED	2	A
	S1746A1	*	SAFETY BELT-REAR SEAT GREEN	2	A
	S1746B1	*	SAFETY BELT-REAR SEAT BLACK	2	A
	S2070W107	%**	SAFETY BELT-REAR SEAT BROWN	2	A
	S2070L107	%**	SAFETY BELT-REAR SEAT BLUE	2	A
	S2070C107	%**	SAFETY BELT-REAR SEAT RED	2	A
	S2070A107	%**	SAFETY BELT-REAR SEAT GREEN	2	A
	S2070B107	%**	SAFETY BELT-REAR SEAT BLACK	2	A
	S1746W1	*	SAFETY BELT-REAR SEAT BROWN	2	B
	S1746U1	*	SAFETY BELT-REAR SEAT BLUE	2	B
	S1746Z1	*	SAFETY BELT-REAR SEAT RED	2	B
	S1746AA1	*	SAFETY BELT-REAR SEAT OLIVE	2	B
	S1746B1	*	SAFETY BELT-REAR SEAT BLACK	2	B
	S2070W107	%**	SAFETY BELT-REAR SEAT BROWN	2	B
	S2070U107	%**	SAFETY BELT-REAR SEAT BLUE	2	B
	S2070Z107	%**	SAFETY BELT-REAR SEAT RED	2	B
	S2070AA107	%**	SAFETY BELT-REAR SEAT OLIVE	2	B
	S2070B107	%**	SAFETY BELT-REAR SEAT BLACK	2	B
			ATTACHING PARTS		
-42	AN4-12A		BOLT ATTACH OUTBD BELT ENDS	2	
	NAS43HT4-32		SPACER INSTALLED IN FRAME RECESS OUTBD	2	
-43	NAS43HT4-12		SPACER THROUGH BELT STIRRUP	2	
	AN960-416L		WASHER	2	B
-44	NAS679A4		NUT INSTALLED ON OUTBD ATTACH POINT	2	
-45	AN4-23A		BOLT ATTACH BOTH BELTS INBD	1	
-46	NAS43HT4-12		SPACER THROUGH BELT STIRRUP	2	
-47	NAS43HT4-88		SPACER INSTALLED IN FRAME RECESS CENTER	1	A
	NAS43HT4-80		SPACER INSTALLED IN FRAME RECESS CENTER	1	B
-48	NAS679A4		NUT INSTALLED AT INBD ATTACH POINT	1	

---*---

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.


NOTE. *USED ON AIRCRAFT WITHOUT SHOULDER HARNESS.

NOTE. **USED ON AIRCRAFT EQUIPPED WITH SHOULDER HARNESS. SEE FIG 56 FOR SHOULDER HARNESS.

NOTE. %WHEN ORDERING SEAT BELTS FOR AUSTRALIAN USE, ADD VH TO PART NUMBER. EXAMPLE-S2070W107VH.

A---182 SERIAL 18260826 THRU 18261425
B---182 SERIAL 18261426 THRU 18262465
C---182 SERIAL 18260825 THRU 18262465

Seat (Cont)

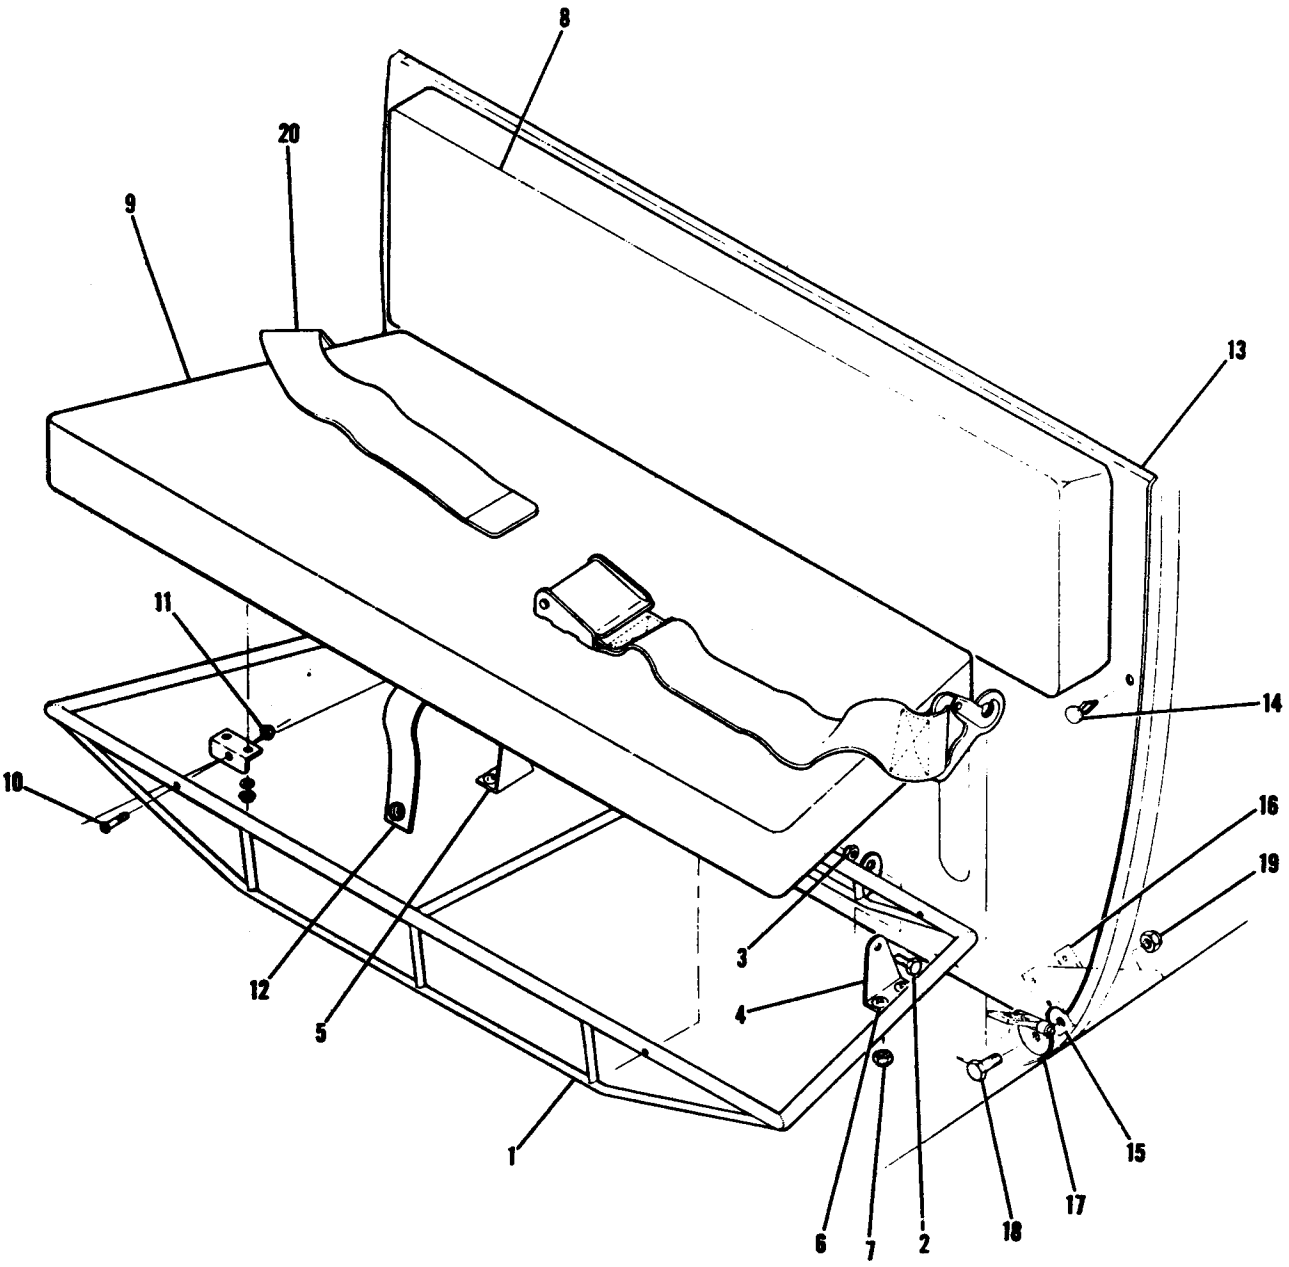

182 SERIAL 18254424 THRU 18260055

Figure 52C. Auxiliary Seat Installation


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
52C-			AUXILIARY SEAT INSTALLATION	NP	A
- 1	0711097-2		FRAME ASSEMBLY	1	
			ATTACHING PARTS		
- 2	AN3-4A		BOLT	2	
- 3	MS21044N3		NUT	2	
			---*---		
- 4	0711663-5		HINGE-FLOOR FITTING LH	1	
- 5	0711663-6		HINGE-FLOOR FITTING RH	1	
			ATTACHING PARTS		
- 6	AN515-8R7		SCREW	2	
- 7	NAS679A08		NUT	2	
			---*---		
- 8	0711080-1	#	BACKREST ASSEMBLY	1	
	AN227-7		SOCKET	5	
	AN227-6		BUTTON	5	
- 9	0711097-4	#	CUSHION ASSEMBLY	1	
			ATTACHING PARTS		
-10	AN515-8R14		SCREW	4	
-11	NAS679A08		NUT	4	
			---*---		
-12	0711097-21		STRAP ASSEMBLY	1	
-13	0711663-2	¤	PANEL ASSEMBLY-STA. 110.00	1	
			ATTACHING PARTS		
-14	49265-F-938		STUD	9	
			---*---		
-15	0711663-7		SUPPORT-SEAT BELT	2	
-16	0711663-8		SPACER-SUPPORT	2	
-17	0711083-1		LATCH ASSEMBLY	2	
			ATTACHING PARTS		
-18	AN4-6A		BOLT	1	
-19	NAS679A4		NUT	1	
			---*---		
-20	S1243-6		BELT ASSEMBLY-SAFETY	1	B
	S1243-3		BELT ASSEMBLY-SAFETY	1	C
	S1620C1		BELT ASSEMBLY-SAFETY BLUE	1	D
	S1620D1		BELT ASSEMBLY-SAFETY TAN	1	D
	S1620F1		BELT ASSEMBLY-SAFETY OLIVE	1	D
	S1620H1		BELT ASSEMBLY-SAFETY CORAL	1	D
	S1620D1		BELT ASSEMBLY-SAFETY TAN	1	E
	S1620J1		BELT ASSEMBLY-SAFETY RED	1	E
	S1620K1		BELT ASSEMBLY-SAFETY AVACADO	1	E
	S1620M1		BELT ASSEMBLY-SAFETY BLUE	1	E
	S1746D5		BELT ASSEMBLY-SAFETY TAN	1	F
	S1746J5		BELT ASSEMBLY-SAFETY RED	1	F
	S1746K5		BELT ASSEMBLY-SAFETY AVACADO	1	F
	S1746M5		BELT ASSEMBLY-SAFETY BLUE	1	F

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE XII.

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18254424 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
B---182 SERIAL 18254424 THRU 18255844
C---182 SERIAL 18255845 THRU 18256684
D---182 SERIAL 18256685 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
E---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
F---182 SERIAL 18258506 THRU 18260055
A182 SERIAL A182-0097 THRU A182-0116

Seat (Cont)

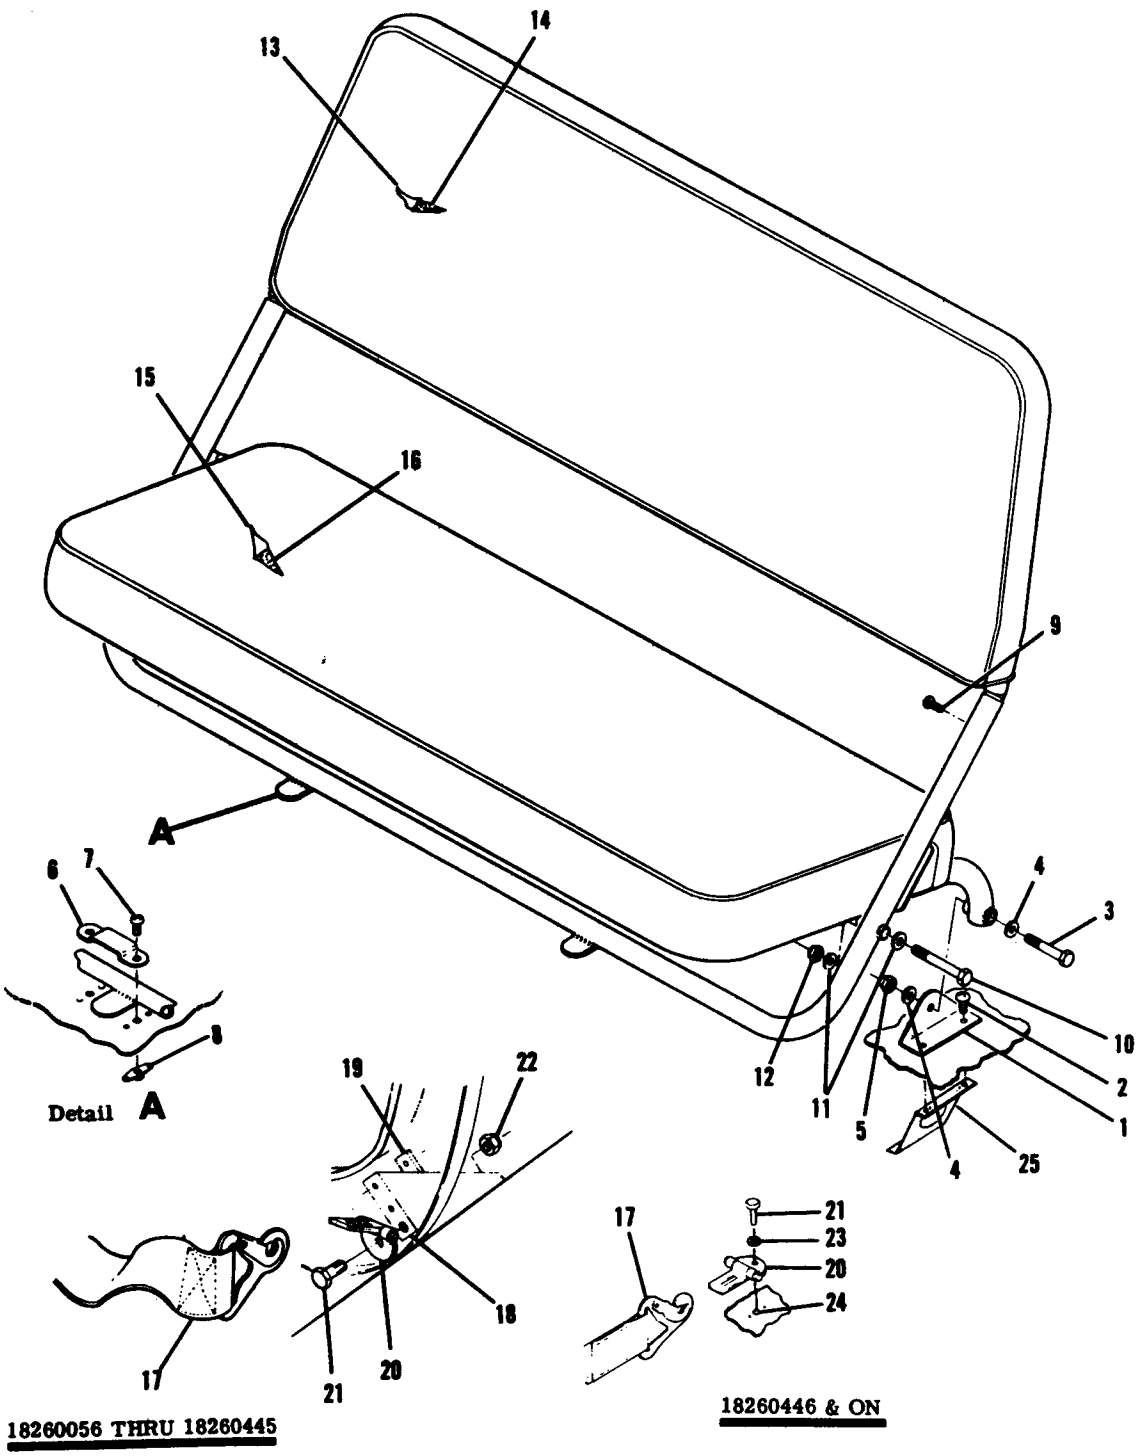

182 SERIAL 18261426 THRU 18262465


Figure 52D. Auxiliary Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
520-			AUXILIARY SEAT INSTALLATION	NP	A
	0515002-1		SEAT ASSY-AUXILIARY	1	B
	0515002-11		SEAT ASSY-AUXILIARY	1	C
	0714005-1		SEAT ASSY-AUXILIARY	1	D
			ATTACHING PARTS		
- 1	0514042-1		BRACKET-SEAT MOUNTING	2	
- 2	AN515-8R8		SCREW	4	
- 3	AN4-13A		BOLT	2	
- 4	AN960-416		WASHER	4	
- 5	NAS679A4		NUT	2	
			---*---		
- 6	0715026-1		RETAINER	2	G
			ATTACHING PARTS		
- 7	AN515-8R8		SCREW	2	G
- 8	NAS686A08		NUT	2	G
			---*---		
- 9	S1021Z8-8C		SCREW	2	
-10	AN4-17A		BOLT	2	
-11	AN960-416		WASHER	4	
-12	NAS679A4		NUT	2	
-13	0515002-4	#	COVER ASSY-SEAT BACK	1	C
	0714005-3	#	COVER ASSY-SEAT BACK	1	D
-14	0515002-9		CUSHION-SEAT BACK	1	
-15	0515002-6	#	COVER ASSY-SEAT BOTTOM	1	C
	0714005-4	#	COVER ASSY-SEAT BOTTOM	1	D
-16	0515002-10		CUSHION-SEAT BOTTOM	1	
-17	S1746T5		SAFETY BELT-AUXILIARY SEAT MARIGOLD	1	B
	S1746V5		SAFETY BELT-AUXILIARY SEAT OLIVE	1	B
	S1746W5		SAFETY BELT-AUXILIARY SEAT BROWN	1	B
	S1746Y5		SAFETY BELT-AUXILIARY SEAT BLUE	1	B
	S1746H5		SAFETY BELT-AUXILIARY SEAT BLUE	1	C
	S1746F5		SAFETY BELT-AUXILIARY SEAT RED	1	C
	S1746G5		SAFETY BELT-AUXILIARY SEAT GREEN	1	C
	S1746B5		SAFETY BELT-AUXILIARY SEAT BLACK	1	C
	S1746W5		SAFETY BELT-AUXILIARY SEAT BROWN	1	E
	S1746L5		SAFETY BELT-AUXILIARY SEAT BLUE	1	E
	S1746A5		SAFETY BELT ASSY-AUXILIARY SEAT RED	1	E
	S1746C5		SAFETY BELT ASSY-AUXILIARY SEAT GREEN	1	E
	S1746B5		SAFETY BELT ASSY-AUXILIARY SEAT BLACK	1	E
	S1746W5		SAFETY BELT ASSY-AUXILIARY SEAT GOLD	1	F
	S1746V5		SAFETY BELT ASSY-AUXILIARY SEAT BLUE	1	F
	S1746AA5		SAFETY BELT ASSY-AUXILIARY SEAT OLIVE	1	F
	S1746Z5		SAFETY BELT ASSY-AUXILIARY SEAT RED	1	F
	S1746B5		SAFETY BELT ASSY-AUXILIARY SEAT BLACK	1	F
-18	0711663-7		SUPPORT-SEAT BELT	2	B
-19	0711663-8		SPACER-SUPPORT	2	B
-20	0711083-1		LATCH ASSY-BELT ATTACH	2	
			ATTACHING PARTS		
-21	AN4-6A		BOLT	1	
-22	NAS679A4		NUT	1	B
-23	AN960-416		WASHER	1	G
			---*---		
-24	NAS679A4		NUTPLATE	1	G
-25	0711775-1		REINFORCEMENT ASSY	2	
	NAS679A08K		NUTPLATE	2	

NOTE. #THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERY PARTS-PAGE XII.

A---182 SERIAL 18260056 THRU 18262465
A182 SERIAL A182-0117 & ON
B---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
C---182 SERIAL 18260446 THRU 18260825
A182 SERIAL A182-0137 & ON
D---182 SERIAL 18260826 THRU 18262465
E---182 SERIAL 18260826 THRU 18261425
F---182 SERIAL 18261426 THRU 18262465
G---182 SERIAL 18260446 THRU 18262465

Instruments

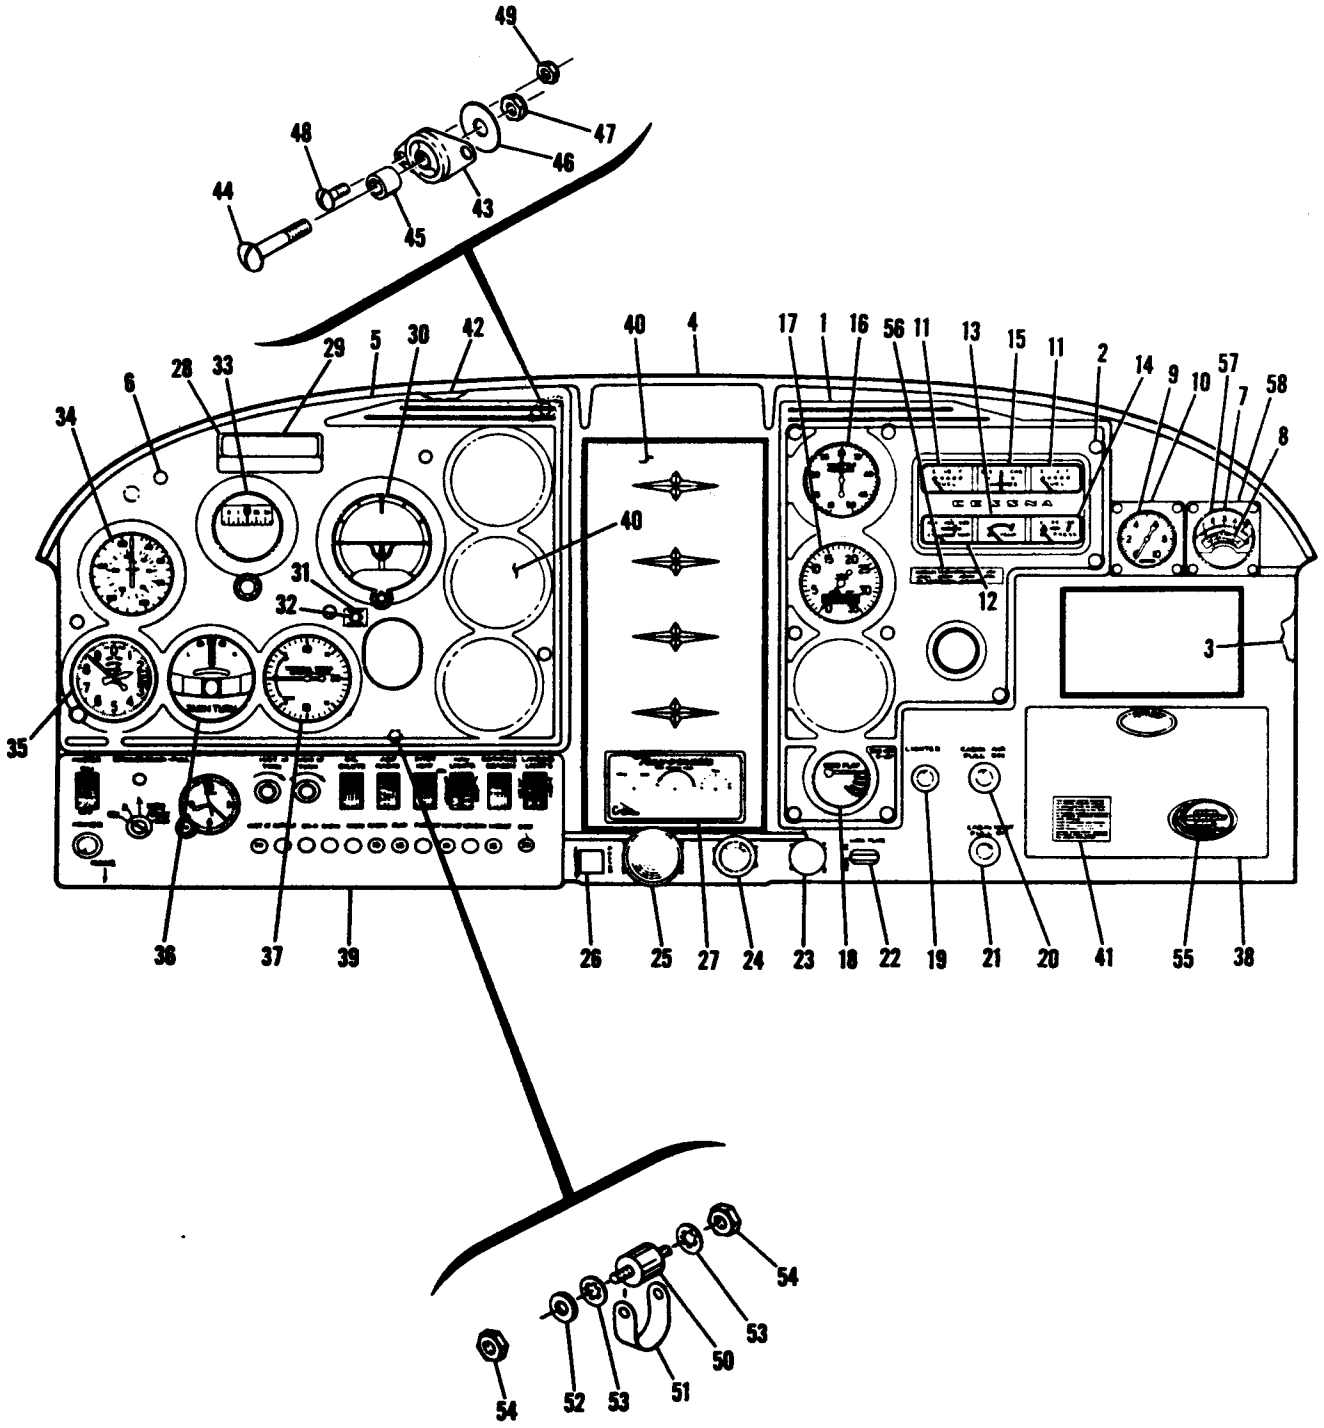

182 SERIAL 18253599 THRU 18255844

Figure 53. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
			1 2 3 4 5 6 7		
53 -			INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	H
- 1	0713698-1-418		ESCUTCHEON-INSTRUMENT PANEL	1	
			ATTACHING PARTS		
- 2	XX49319K1110		STUD TMT	9	
			---*---		
- 3	0713695-1-418		COVER-STATIONARY PANEL LOWER	1	
- 4	0713695-2		COVER-STATIONARY PANEL UPPER	1	C
	0713695-3		COVER-STATIONARY PANEL UPPER	1	D
- 5	0713696-2	*	COVER-SHOCK PANEL	1	E
	0713696-6	*	COVER-SHOCK PANEL	1	F
			ATTACHING PARTS		
- 6	XX49804K2215		STUD TMT	4	
			---*---		
- 7	S1311N1		GAGE-CARBURETOR AIR TEMPERATURE	1	
			ATTACHING PARTS		
	AN5078632R12		SCREW	4	
	MS20365B632C		NUT	4	
			---*---		
- 8	0713209-1		PLACARD-CARBURETOR AIR TEMPERATURE INDICATOR	1	
- 9	S1414N1		GAGE-SUCTION	1	
			ATTACHING PARTS		
	AN5078632R12		SCREW	4	
	MS20365B632C		NUT	4	
			---*---		
-10	0713208-1		ESCUTCHEON	2	
	0713602-2		INSTRUMENT CLUSTER WHEN EXHAUSTED USE 1213505-1	1	E
	1213505-1		INSTRUMENT CLUSTER WHEN EXHAUSTED USE C669502-0101	1	F
			ATTACHING PARTS		
	NAS43HT3-64		SPACER USED WITH 1213505-1	2	
	NAS430D3-64		SPACER USED WITH C669502-0101	2	
	AN5078832R24		SCREW	2	
	AN34088		NUT	2	
			---*---		
-11	0713602-5		GAGE-FUEL	2	E
	G441304		GAGE-FUEL SW	2	F
-12	0713602-6		GAGE-CYLINDER HEAD TEMPERATURE	1	C
	0713602-200	#	GAGE-MATCHED SET CYL HEAD TEMP.	1	G
	1213505-200		GAGE-MATCHED SET CYL HEAD TEMP. WHEN EXHAUSTED USE G442702	1	F
	G442702		GAGE-CYLINDER HEAD TEMP SW	1	F
-13	0713602-7		GAGE-OIL TEMP WHEN EXHAUSTED USE G442697	1	E
	G442697		GAGE-OIL TEMP SW	1	F
-14	0713602-8		GAGE-OIL PRESSURE	1	E
	G444627		GAGE-OIL PRESSURE SW	1	F
-15	0713602-9		AMMETER	1	E
	G440404		AMMETER	1	F
	S1372-1		SENDING UNIT-CYLINDER HEAD TEMP USED WITH G442702	1	F
	811542		POTENTIOMETER SW	1	F
-16	S1301N1		GAGE-MANIFOLD PRESSURE	1	
			ATTACHING PARTS		
	AN5078632R12		SCREW	4	
	AN936B6B		WASHER	AR	
	AN340B6		NUT	4	
			---*---		
-17	S1305N8		TACHOMETER	1	
			ATTACHING PARTS		
	AN5078632R12		SCREW	4	
	AN936B6B		WASHER	AR	
	AN340B6		NUT	4	
			---*---		
	S1363-2		SHAFT-TACHOMETER	1	
-18	C668001-0101	**	INDICATOR-FLAP	1	
	S1318-2		MOUNTING STRAP-INDICATOR	1	
			ATTACHING PARTS		
	AN5078632R12		SCREW	4	
	AN936B6B		WASHER	AR	
	AN340B6		NUT	4	
			---*---		
-19	0513039-7		LIGHTER ASSEMBLY-CIGAR CUNO	1	
	L4858-1		PLUG-HEATING CUNO	1	
	S1240-6		KNOB ASSEMBLY-CIGAR LIGHTER	1	
	60232-1		CIRCUIT BREAKER-CIGAR LIGHTER CUNO	1	
-20	S1241-4		CONTROL ASSEMBLY-CABIN AIR	1	
-21	S1241-3		CONTROL ASSEMBLY-CABIN HEAT	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
53 -22	0760632-1	SWITCH-ELECTRIC FLAP	1	
	0813526-6	KNOB-FLAP SWITCH	1	
-23	S1234-2	CONTROL ASSEMBLY-MIXTURE	1	
-24	S1223-3	CONTROL ASSEMBLY-PROPELLER	1	
-25	S1222-6	CONTROL ASSEMBLY-THROTTLE	1	
-26	S1230-3	CONTROL ASSEMBLY-CARBURETOR HEAT	1	
-27	0713721-1	FACEPLATE & BRACKET ASSEMBLY	1	A
		ATTACHING PARTS		
	S1021Z6-8	SCREW	2	
	NAS446-2-3	NUT	2	
		---•---		
	0770648-1	FACEPLATE-NAVOMATIC FLIGHT CONTROLLER	1	A
	0713720-1	AMPLIFIER BRACKET	1	B
	0770648-2	FACEPLATE-NAVOMATIC	1	B
-28	0813569-2	RETAINER ASSEMBLY-COMPASS CARD	1	
		ATTACHING PARTS		
	S1021Z4-12	SCREW	2	
	NAS43DD1-18	SPACER	2	
		---•---		
-29	0713028-8	CORRECTION CARD-COMPASS	1	
	0713028-3	CARD COVER-CORRECTION	1	
-30	S1309N1	INDICATOR-GYRO HORIZON REMFD WHEN EXHAUSTED	1	
		SEE FIG 86A		
	S1473N1	INDICATOR-GYRO HORIZON ALT WHEN EXHAUSTED	1	
		SEE FIG 86A		
		GYRO HORIZON INSTALLATION	NP	
	S1326N1	INDICATOR-GYRO HORIZON-PICTORIAL TYPE 348	1	
		WITH VACUUM WARNING LIGHTS WHEN EXHAUSTED		
		SEE FIG 86A		
	S1429N1	INDICATOR-GYRO HORIZON-PICTORIAL TYPE 348	1	
		WITHOUT VACUUM WARNING LIGHTS-USE WITH SUCTION GAGE		
		WHEN EXHAUSTED SEE FIG 86A		
		ATTACHING PARTS		
	AN507B1032R16	SCREW	4	
		---•---		
	330R	BULB	1	
-31	S1284-1	SWITCH	1	
-32	0713705-2 **	PLACARD-VACUUM LIGHTS TEST	1	
-33	S1316N1	INDICATOR-DIRECTIONAL GYRO REMFD WHEN EXHAUSTED	1	
		SEE FIG 86A		
	S1476N1	INDICATOR-DIRECTIONAL GYRO ALT WHEN EXHAUSTED	1	
		SEE FIG 86A		
	S1327N1	INDICATOR-DIRECTIONAL GYRO-PICTORIAL TYPE 348 USED	1	
		WITH VACUUM WARNING LIGHTS WHEN EXHAUSTED SEE FIG 86A		
		ATTACHING PARTS		
	AN5078632R16	SCREW	4	
	NAS43HT1-23	SPACER	4	
		---•---		
-34	S1324N4	INDICATOR-AIRSPEED	1	
	S1470N4	INDICATOR-AIRSPEED ALTERNATE	1	
	S1387N	AIRSPEED INDICATOR-KILOMETERS & MPH	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	AN936B6B	WASHER	AR	
	AN34086	NUT	4	
		---•---		
-35	S1314N1	ALTIMETER-20,000 FT FOR VFR APPLICATIONS ONLY	1	
		WHEN EXHAUSTED USE C661011-0105		
	S1313N1	ALTIMETER-FEET & INCHES FOR VFR APPLICATIONS ONLY	1	
		WHEN EXHAUSTED USE C661011-0105		
	C661011-0101	ALTIMETER-FEET & INCHES	1	
	S1384N1	ALTIMETER-METERS & MILIBARS	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	AN936B6B	WASHER	AR	
	AN34086	NUT	4	
		---•---		
-36	S1302N1	INDICATOR-TURN & BANK	1	
	S1413N1	INDICATOR-TURN & BANK ALTERNATE	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	AN936B6B	WASHER	AR	
	AN34086	NUT	4	
		---•---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53 -37	S1392N1	INDICATOR-VERTICAL SPEED	1	
	CM2647N1	INDICATOR-VERTICAL SPEED 10 METERS PER MIN.	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	AN960-10L	WASHER	AR	
	AN34086	NUT	4	
		---*---		
-38	SEE FIG 55	MAP COMPARTMENT INSTALLATION	1	
-39	SEE FIG 54	SWITCH PANEL INSTALLATION	1	
-40		RADIO INSTALLATIONS SEE CESSNA ELECTRONICS MANUAL	NP	
-41	0713207-4	PLACARD-OPERATIONAL LIMITATIONS	1	
-42	0713621-2	PANEL-SHOCK	1	E
	0713621-3	PANEL-SHOCK	1	F
		ATTACHING PARTS		
-43	102PDLN-4	SHOCK MOUNT LO	2	
-44	AN515B8R20	SCREW	2	
-45	NAS430D3-14	SPACER	2	
-46	J2049-1D	WASHER LO	2	
-47	MS20365B832C	NUT	2	
-48	AN515B6R6	SCREW	4	
-49	MS20365B632C	NUT	4	
-50	0411059-3	SHOCK MOUNT	3	
-51	0413247	GROUND STRAP	3	
-52	S355	SPACER	3	
-53	AN936A8	WASHER	6	
-54	AN34088	NUT	6	
		---*---		
-55	0713724-1	MEDALLION	1	C
-56	0700319-13	PLACARD-WINTERIZATION	1	
		ECONOMY POWER INDICATOR INSTALLATION	NP	
-57	C668501-0101	INDICATOR-ECONOMY POWER	1	
-58	0713208-1	PROBE WHEN EXHAUSTED USE C668501-0110	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	MS20365B632C	NUT	4	
		---*---		
	C668501-0102	PROBE WHEN EXHAUSTED USE C668501-0110	1	
	C668501-0110	PROBE	1	
	AN515-4R4	SCREW	2	
	C668501-0103	LEAD-THERMOCOUPLE WHEN EXHAUSTED USE C668501-0104	1	
	C668501-0104	LEAD-THERMOCOUPLE	1	


NOTE. *WHEN ORDERING COVER PANEL FOR AIRCRAFT EQUIPPED WITH VACUUM TEST SWITCH, ALSO ORDER PART MARKED **.

NOTE. #1213505-200 CONSISTS OF GAGE SENDING UNIT & POTENTIOMETER

NOTE. **WHEN INITIALLY ORDERING THIS PART ALSO ORDER C590501-0101 TRANSMITTER.

A---182 SERIAL 18253599 THRU 18253790
B---182 SERIAL 18253791 THRU 18254423
C---182 SERIAL 18253599 THRU 18254423
D---182 SERIAL 18254424 THRU 18255844
E---182 SERIAL 18253599 THRU 18255058
F---182 SERIAL 18255059 THRU 18255844
G---182 SERIAL 18254424 THRU 18255058
H---182 SERIAL 18253599 THRU 18255844

Instruments (Cont)

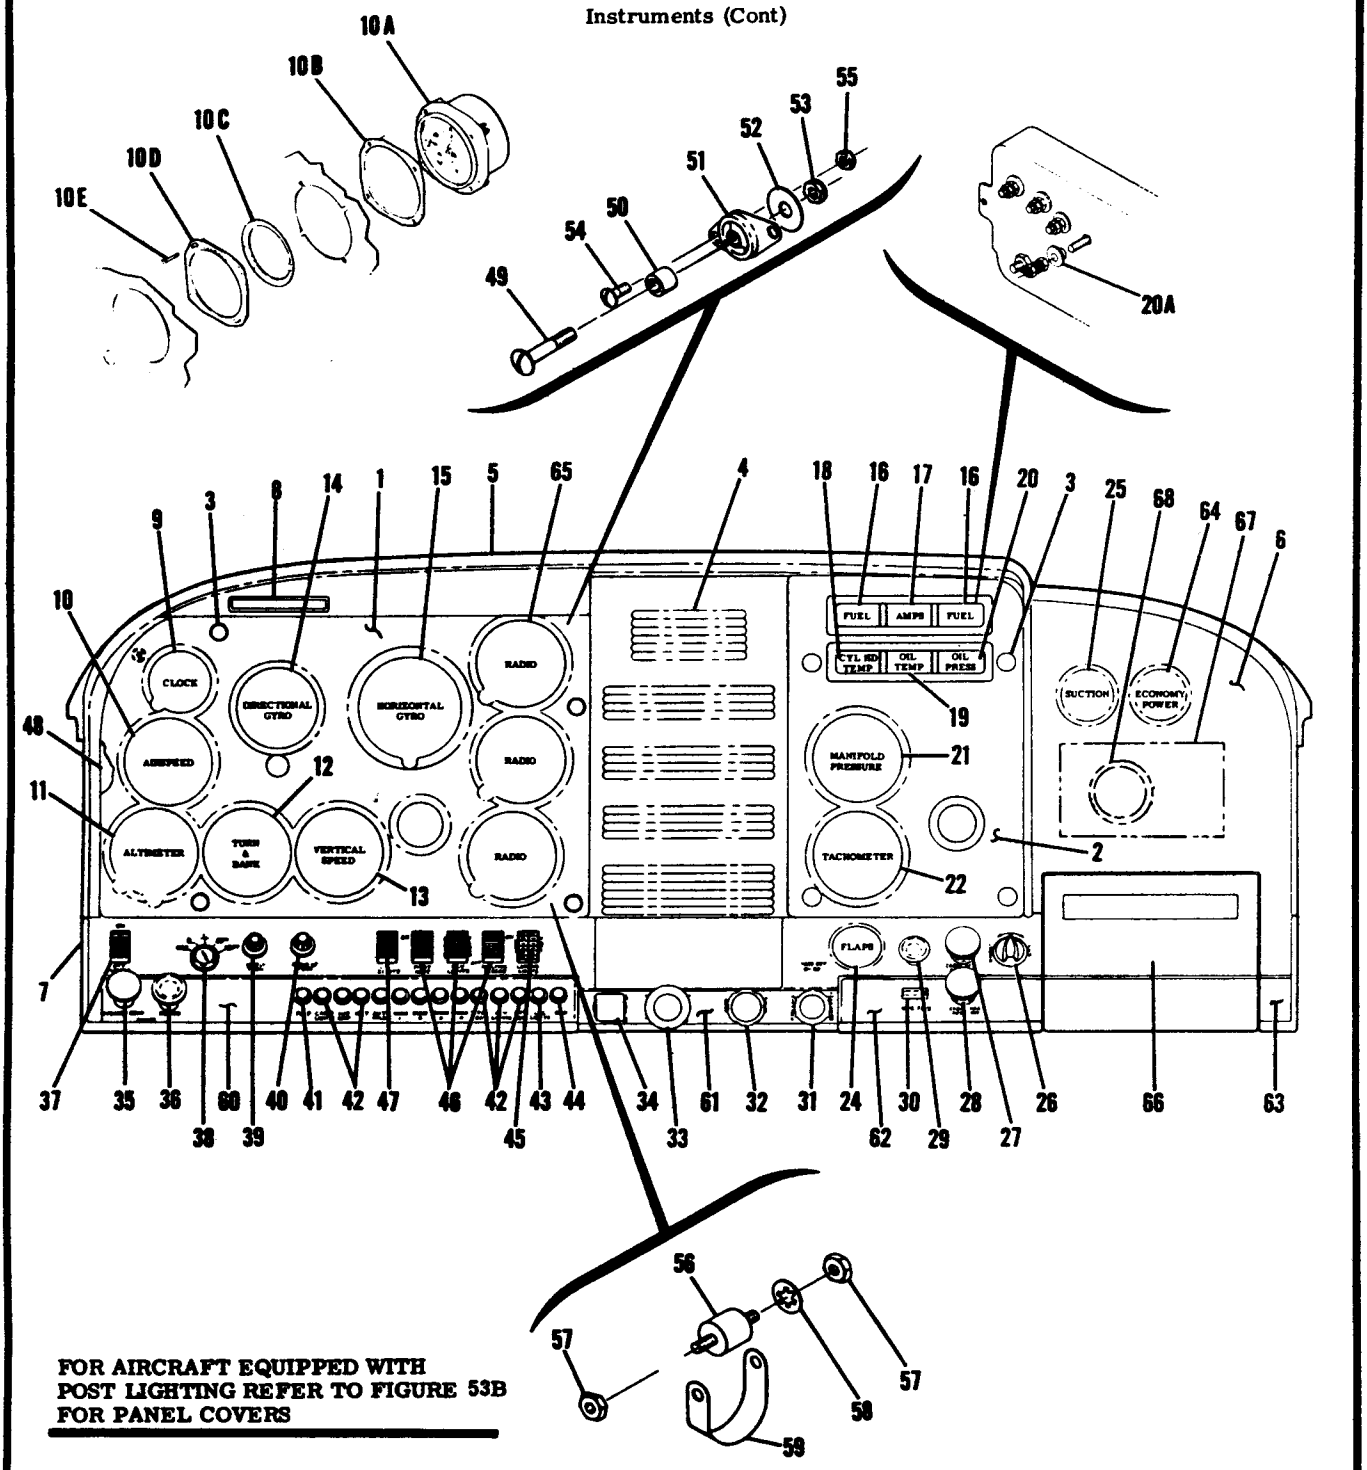

182 SERIAL 18255845 THRU 18257625

Figure 53A. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
53A-			INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
- 1	0713792-1	¤	COVER-SHOCK PANEL	1	
	0713792-3	¤	COVER-SHOCK PANEL USED WITH NAV-O-MATIC 400	1	
	0713792-7	¤	COVER-SHOCK PANEL USED WITH NAV-O-MATIC 300	1	
- 2	0713792-2	¤	COVER-ENGINE INSTRUMENTS	1	
			ATTACHING PARTS		
- 3	S1898-1		FASTENER	4	
	NAS43DD4-16		SPACER	4	
			---*---		
- 4	0713793-1	¤	COVER-RADIO	1	
			ATTACHING PARTS		
	S1021Z6-8B		SCREW	4	
			---*---		
- 5	0713791-3	¤	COVER-BROW	1	
			ATTACHING PARTS		
	0713815-1		RETAINER	1	
	S1067B1		WASHER	11	
	S1023A6-12B		SCREW	11	
	NAS43DD1-12		SPACER	AR	
			---*---		
- 6	0713794-1	¤	COVER-STATIONARY PANEL UPPER	1	
- 7	0713791-2	¤	COVER-STATIONARY PANEL LOWER	1	
			ATTACHING PARTS		
	S1021A6-68		SCREW	8	
			---*---		
- 8	0713820-1		RETAINER-CALL LETTERS	1	
			ATTACHING PARTS		
	S1022Z6-10B		SCREW	2	
	NAS446-2-1		NUT	2	
			---*---		
- 9	S1317N1		CLOCK-ELECTRIC	1	
-10	S1470N4		INDICATOR-AIRSPEED	1	
			TRUE AIRSPEED INDICATOR INSTALLATION	NP	E
-10A	C661010-0202		INDICATOR-AIRSPEED	1	
-10B	0700162-6		SPACER	1	
-10C	0700163-3		RING ASSEMBLY-TRUE AIRSPEED	1	
-10D	0700162-1		RETAINER ASSEMBLY	1	
			ATTACHING PARTS		
-10E	AN515B6R16		SCREW	4	
			---*---		
-11	S1314N1		ALTIMETER FOR VFR APPLICATIONS ONLY	1	F
			WHEN EXHAUSTED USE C661011-0105		
	S1313N1		ALTIMETER-FEET & INCHES FOR VFR APPLICATIONS ONLY	1	F
			WHEN EXHAUSTED USE C661011-0105		
	C661011-0105		ALTIMETER-FEET & INCHES	1	G
	C661011-0106		ALTIMETER-FEET & MILIBARS	1	G
-12	S1302N1		INDICATOR-TURN & BANK	1	
	S1413N1		INDICATOR-TURN & BANK ALTERNATE	1	
-13	S1392N2		INDICATOR-VERTICAL SPEED	1	
	S1392N1		INDICATOR-VERTICAL SPEED ALTERNATE	1	
-14	C661002-0101		GYRO-DIRECTIONAL WHEN EXHAUSTED SEE FIG 86A	1	
-15	C661001-0101		GYRO-HORIZON WHEN EXHAUSTED SEE FIG 86A	1	
	C669502-0201		INSTRUMENT CLUSTER-LIGHTED	1	
			ATTACHING PARTS		
	AN5078832R24		SCREW	2	
	NAS43HT3-64		SPACER USE WITH C669502-0103	2	
	NAS430D3-64		SPACER USE WITH C669502-0101	1	
	AN3408B		NUT	2	
			---*---		
-16	G441304		GAGE-FUEL SW	2	
-17	G440404		AMMETER SW	1	
-18	1213505-200	*	GAGE-CYLINDER HEAD TEMP MATCHED SET WHEN EXHAUSTED-	1	
			USE G442702		
	G442702		GAGE-CYLINDER HEAD TEMP SW	1	
-19	442785		GAGE-OIL TEMP SW	1	
-20	G444627		GAGE-OIL PRESSURE	1	
	2182D-R		BULB GE	6	
-20A	401627		WASHER-INSULATOR SW	2	
	S1372-1		SENDING UNIT-CYLINDER HEAD TEMP USED WITH G442702	1	
	811542		POTENTIOMETER SW	1	
-21	S1301N1		GAGE-MANIFOLD PRESSURE	1	
	0700099-7		LINE ASSEMBLY-MANIFOLD PRESSURE WHEN EXHAUSTED	1	
			USE 0700099-84		
	0700099-84		LINE ASSEMBLY-MANIFOLD PRESSURE	1	
	AN816-2D		NIPPLE	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53A-22	S1305N8	TACHOMETER	1	
	S1605-2	SHAFT-TACHOMETER	1	
-23	AN51586R12	SCREW	AR	
	AN936B68	WASHER	AR	
-24	C668001-0101 **	INDICATOR-FLAP	1	
		ATTACHING PARTS		
	0713816-2	RING ASSEMBLY	1	
	0713823-1	SPACER	1	
	AN507-632R12	SCREW	4	
	AN340-6	NUT	4	
		---•---		
-25	S1414-1	GAGE-SUCTION		
		ATTACHING PARTS		
	AN507B632R12	SCREW	4	
	MS20365B632C	NUT	4	
	C7000-632-67	NUT TIN	4	
		---•---		
-26	S1268-2	CONTROL ASSEMBLY-DEFROST	1	
-27	S1241-4	CONTROL ASSEMBLY-CABIN AIR	1	
-28	S1241-3	CONTROL ASSEMBLY-CABIN HEAT	1	
-29	0513039-7	LIGHTER ASSEMBLY-CIGAR CUNO	1	
	L4858-1	PLUG-HEATING CUNO	1	
	60232-1	CIRCUIT BREAKER-CIGAR LIGHTER CUE	1	
	S1240-6	KNOB-CIGAR LIGHTER	1	
-30	0760632-1	SWITCH-FLAP	1	K
	S1661-1	SWITCH-FLAP	1	L
	0813526-6	KNOB-FLAP SWITCH	1	
	S1216-1	NUT-FLAP SWITCH	1	
-31	S1234-3	CONTROL ASSEMBLY-MIXTURE	1	
-32	S1223-6	CONTROL ASSEMBLY-PROPELLER	1	
		ATTACHING PARTS		
	1213646-1	WASHER AFT	1	
	NAS43DD12-64	SPACER	1	
		---•---		
-33	S1222-13	CONTROL ASSEMBLY-THROTTLE	1	
-34	S1230-3	CONTROL ASSEMBLY-CARBURETOR HEAT	1	
-35	S1290-1	CONTROL ASSEMBLY-STRAINER DRAIN	1	B
	S1533-1	CONTROL ASSEMBLY-STRAINER DRAIN	1	C
-36	C291502-0101	PRIMER ASSEMBLY	1	
	S1753-1	KNOB	1	
-37	S1159-1-1	SWITCH-MASTER	1	
	0770719-1	DIODE-MASTER SWITCH	1	
-38	0713129-4	SWITCH-IGNITION WHEN EXHAUSTED USE C292501-0102	1	
	C292501-0102	SWITCH-IGNITION	1	
-39	R-12 1/2-8RS34	RHEOSTAT-INSTRUMENT LIGHTS	1	
	S1163-2	KNOB ASSEMBLY-RHEOSTAT INSTRUMENT LIGHTS	1	
-40	R-12 1/2-75RS34	RHEOSTAT-RADIO LIGHTS	1	
	S1163-2	KNOB-RHEOSTAT	1	
-41	S1360-15	CIRCUIT BREAKER	1	
-42	S1360-10	CIRCUIT BREAKER	5	
-43	S1360-20	CIRCUIT BREAKER	1	
-44	S1360-50	CIRCUIT BREAKER	1	
-45	S1160-1-1	SWITCH-LANDING LIGHTS	1	
-46	S1158-2-1	SWITCH-ROTATING BEACON	3	
-47	S1158-1-1	SWITCH-OIL DILUTION	1	
-48	0713781-1	PANEL-SHOCK	1	
		ATTACHING PARTS		
-49	AN51586R16	SCREW	2	
-50	NAS43DD3-18	SPACER	2	
-51	102PDLN-4	SHOCK MOUNT LO	2	
-52	J2049-1D	WASHER LO	2	
-53	NAS679A08	NUT	2	
-54	AN51586R6	SCREW	4	
-55	MS20365B632C	NUT	4	
-56	1213645-1	SHOCK MOUNT	3	
-57	AN34088	NUT	6	
-58	AN936A8	WASHER	3	
-59	0413247	STRAP-GROUND	1	
		---•---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53A-60	0713799-1	PLACARD-INSTRUMENT PANEL TRIM	1	
-61	0713798-1	PLACARD-INSTRUMENT PANEL TRIM	1	
-62	0713797-1	PLACARD-INSTRUMENT PANEL TRIM	1	
-63	0713796-2	STRIP-TRIM	1	
-64	C668501-0101	INDICATOR-ECONOMY POWER	1	H
	C668501-0201	INDICATOR-ECONOMY POWER	1	J
	C668501-0103	LEAD-THERMOCOUPLE WHEN EXHAUSTED USE C668501-0104	1	
	C668501-0104	LEAD-THERMOCOUPLE	1	H
	C668501-0206	LEAD-THERMOCOUPLE	1	J
	C668501-0110	PROBE	1	H
	C668501-0204	PROBE	1	J
-65		RADIO INSTALLATIONS SEE CESSNA ELECTRONICS MANUAL	NP	
-66	SEE FIG 55A	MAP COMPARTMENT INSTALLATION	NP	
	SEE FIG 53B	POST LIGHTED INSTRUMENT PANEL INSTALLATION	NP	
-67	0713840-1	PLATE-OPTIONAL INSTRUMENT	1	
		ATTACHING PARTS		
	AN515-6R5	SCREW	4	
	AN936B6	WASHER	4	
	AN936B6	NUT	4	
		---*---		
-68	S1311-1	GAGE-CARBURETOR AIR TEMPERATURE	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	MS20365B632C	NUT	4	
		---*---		


NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

NOTE. *1213505-200 CONSISTS OF GAGE SENDING UNIT & POTENTIOMETER

NOTE. **WHEN INITIALLY ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIAL 18256685 ALSO ORDER C590501-0101 TRANSMITTER.

A---182 SERIAL 18255845 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
B---182 SERIAL 18255845 THRU 18256039
C---182 SERIAL 18256040 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
D---DELETED
E---182 SERIAL 18256685 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
F---182 SERIAL 18255845 THRU 18257277
A182 SERIAL A182-0001 THRU A182-0015
G---182 SERIAL 18257278 THRU 18257625
A182 SERIAL A182-0016 THRU A182-0056
H---182 SERIAL 18255845 THRU 18257502
A182 SERIAL A182-0001 THRU A182-0034
J---182 SERIAL 18257503 THRU 18257625
A182 SERIAL A182-0035 THRU A182-0056
K---182 SERIAL 18255845 THRU 18257066
18257069 AND 18257072
A182 SERIAL A182-0001 THRU A182-0006
L---182 SERIAL 18257067-18257068-18257070
18257071-18257073 THRU 18257625
A182 SERIAL A182-0007 THRU A182-0056

Equipment (Cont)

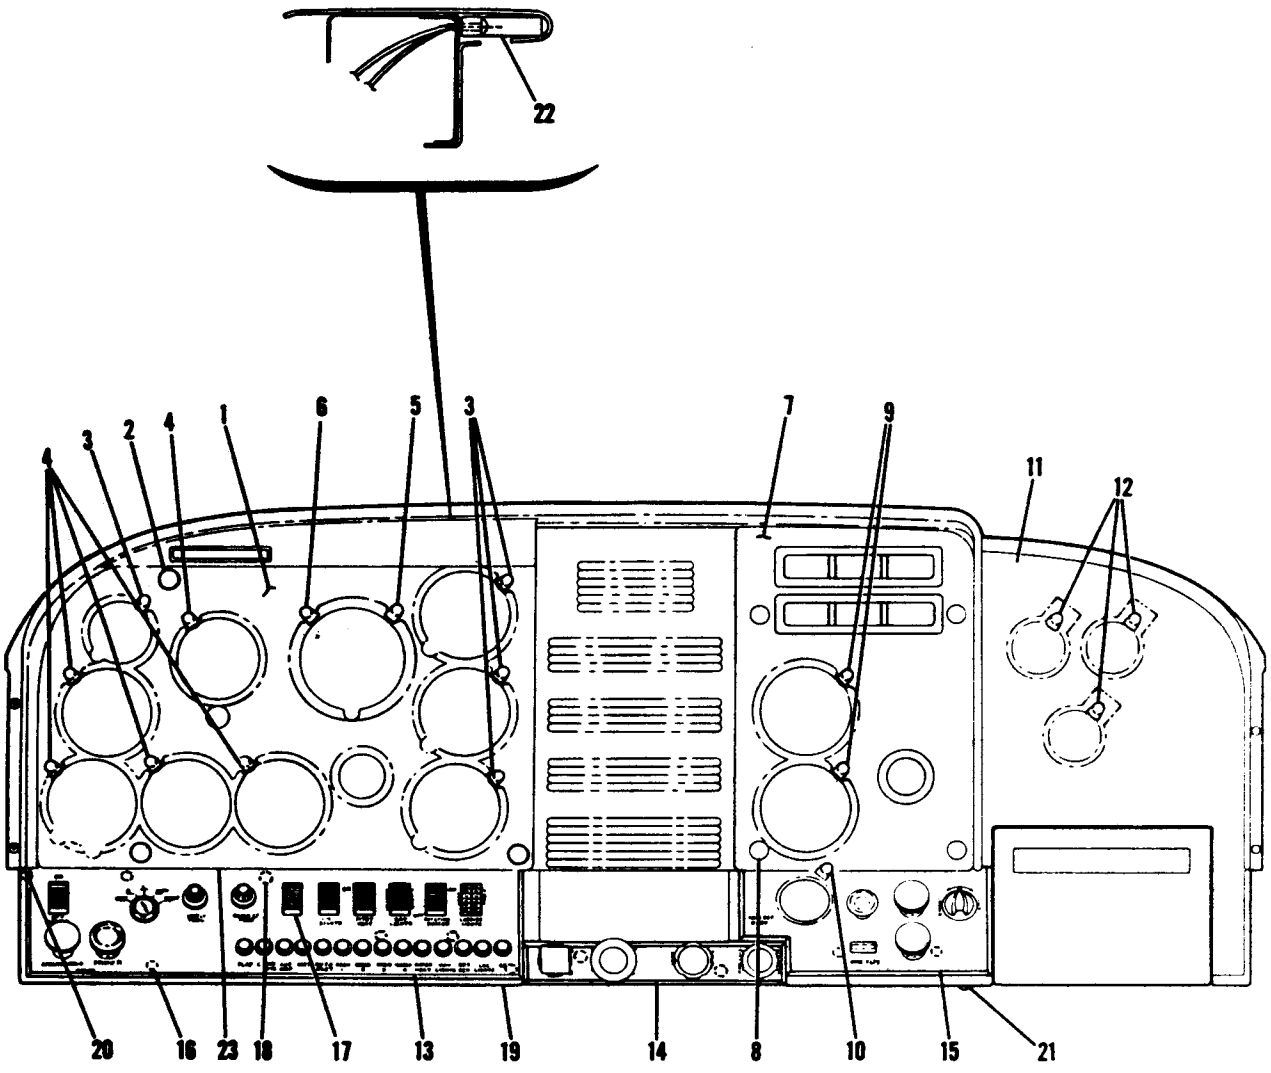

182 SERIAL 18255845 THRU 18257625


Figure 53B. Post Lighted Instrument Panel Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
538-		POST LIGHTED INSTRUMENT PANEL-INSTALLATION	NP	A
- 1	1200686-17 ¤	PANEL ASSEMBLY-POST LIGHTED INSTRUMENT SHOCK	1	B
	1200686-18 ¤	PANEL ASSEMBLY-POST LIGHTED INSTRUMENT SHOCK	1	C
	1200686-19 ¤	PANEL ASSEMBLY-POST LIGHTED INSTRUMENT SHOCK	1	D
	1200686-20 ¤	PANEL ASSEMBLY-POST LIGHTED INSTRUMENT SHOCK	1	E
		ATTACHING PARTS		
- 2	S1898-1	FASTENER	4	
	NAS43DD4-16	SPACER	4	
		---*---		
- 3	S1899-5	PANEL LIGHT-TAB MOUNT	4	
- 4	S1899-6	PANEL LIGHT-TAB MOUNT	5	
	MS25237-330	BULB	1	
- 5	5602M-3RH-R-14	PANEL LIGHT-TAB MOUNT GBN	1	
- 6	5602M-3LH-R-14	PANEL LIGHT-TAB MOUNT GBN	1	
	C65-3R-12	CAP & LAMP ASSEMBLY GBN	1	
	330	LAMP	1	
- 7	1200686-21 ¤	PANEL ASSEMBLY-POST LIGHTED INSTRUMENT STATIONARY	1	
		ATTACHING PARTS		
- 8	S1898-1	FASTENER	4	
	NAS43DD4-16	SPACER	4	
		---*---		
- 9	S1899-5	PANEL LIGHT-TAB MOUNTED	2	
	MS25237-330	BULB	1	
-10	5602M-3RH-R-14	PANEL LIGHT-TAB MOUNTED GBN	1	
	C65-3R-12	CAP & LAMP ASSEMBLY GBN	1	
	330	LAMP	1	
-11	1200686-23 ¤	PANEL ASSEMBLY-POST LIGHTED INSTRUMENT STATIONARY	1	
-12	S1899-5	PANEL LIGHT-TAB MOUNTED	3	
	MS25237-330	BULB	1	
-13	1200686-26	COVER ASSEMBLY-SWITCH PANEL-EDGE LIGHTED	1	
-14	1200686-28	COVER ASSEMBLY-ENGINE CONTROLS-EDGE LIGHTED	1	
-15	1200686-30	COVER ASSEMBLY-VENT CONTROLS-EDGE LIGHTED	1	
-16	41163-C-14	LIGHT ASSEMBLY-PANEL EDGE LIGHTING GBN	9	
	S1894-1	LAMP GE	1	
-17	S1238-2-1	SWITCH	1	
		ATTACHING PARTS		
	AN507-632R3	SCREW	2	
		---*---		
-18	18-1	INSULATOR GRAY	1	
		ATTACHING PARTS		
	AN507-440R4	SCREW	1	
		---*---		
-19	1213653-4 ¤	TRIM-INSTRUMENT	1	
		ATTACHING PARTS		
-20	S1022A4-6	SCREW	2	
-21	S1021A6-68	SCREW	7	
		---*---		
-22	0700737-1	RADIO PANEL LIGHT	1	
		ATTACHING PARTS		
	S1021Z6-8	SCREW	2	
		---*---		
	S1894-1	LAMP	3	
-23	1213654-11	TRIM STRIP	1	

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18255845 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
B---182 SERIAL 18255845 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
EQUIPPED WITH STANDARD EQUIPMENT
C---182 SERIAL 18255845 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
EQUIPPED WITH NAV-O-MATIC 300
D---182 SERIAL 18255845 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
EQUIPPED WITH NAV-O-MATIC 400
E---182 SERIAL 18255845 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
EQUIPPED WITH FULL GYRO PANEL

Instruments (Cont)

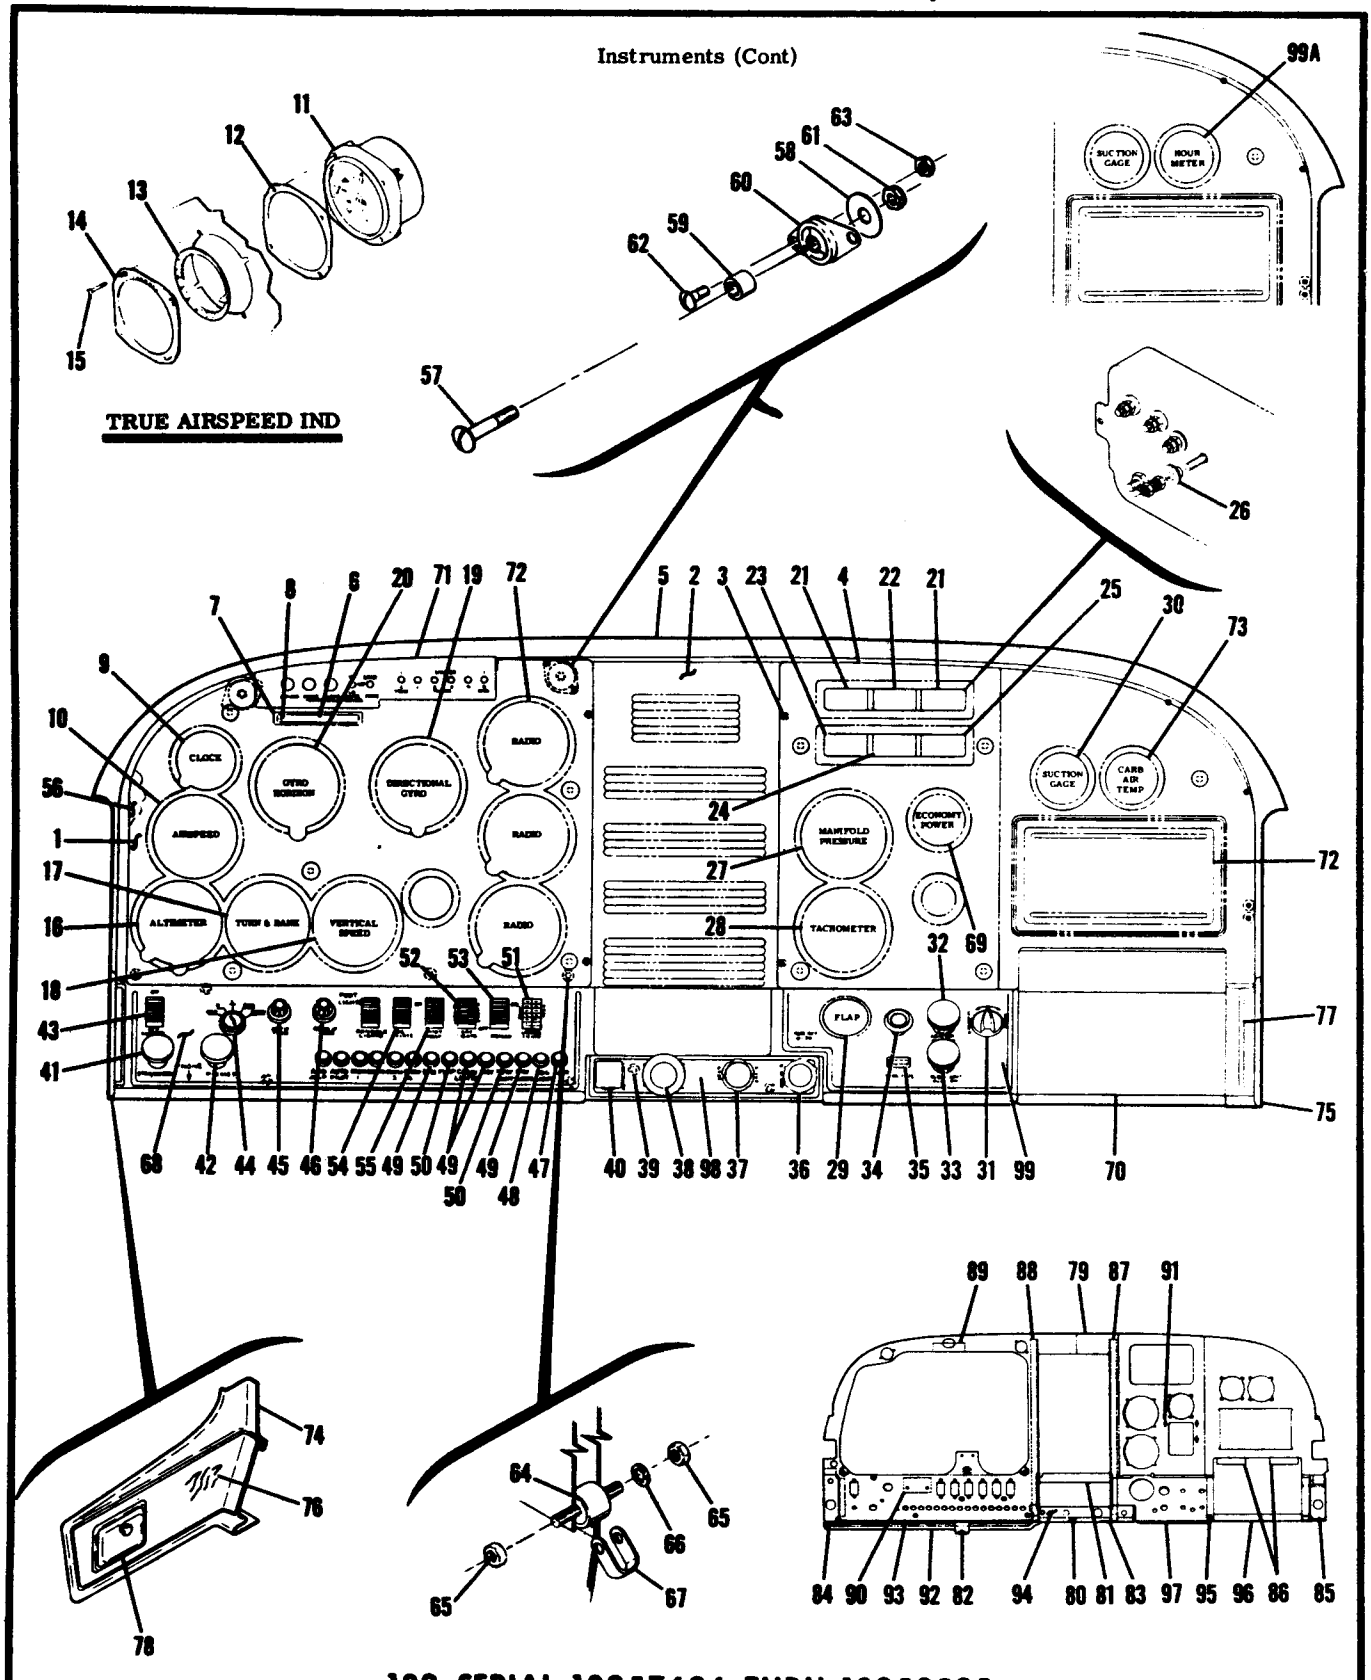

182 SERIAL 18257626 THRU 18258505

Figure 53C. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53C-			INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
- 1	0713865-1	¤	COVER-SHOCK PANEL	1	
	0713865-18	¤	COVER-SHOCK PANEL USED WITH NAV-O-MATIC 400	1	
	0713865-6	¤	COVER-SHOCK PANEL USED WITH NAV-O-MATIC 300	1	
- 2	0713793-1	¤	COVER-CENTER PANEL	1	
			ATTACHING PARTS		
- 3	S1021Z6-8B		SCREW	4	
			---*---		
- 4	0713866-1	¤	COVER-ENGINE INSTRUMENT	1	
- 5	0713863-4	¤	BROW ASSEMBLY-INSTRUMENT PANEL	1	
			ATTACHING PARTS		
	0713800-5		RETAINER	1	
	S1067-1		WASHER	7	
	S1023A6-12B		SCREW	7	
			---*---		
- 6	0813569-3		PLATE-CALL LETTERS	1	
- 7	0713820-1		RETAINER-CALL LETTERS	1	
			ATTACHING PARTS		
- 8	S1022Z6-108		SCREW	2	
	NAS446-2-1		NUT	2	
			---*---		
- 9	S1317N1		CLOCK-ELECTRIC	1	
-10	S1470N4		INDICATOR-AIRSPEED	1	
-11	C661010-0202		INDICATOR-AIRSPEED	1	
-12	0700162-6		SPACER	1	
-13	0700189-2		RING ASSEMBLY-TRUE AIRSPEED	1	
-14	0700162-1		RETAINER ASSEMBLY	1	
			ATTACHING PARTS		
-15	AN51586R16		SCREW	4	
			---*---		
-16	C661011-0105		ALTIMETER 20,000 FT FEET & INCHES	1	
	C661011-0106		ALTIMETER 20,000 FT FEET & MILLIBARS	1	
-17	S1413N1		INDICATOR-TURN & BANK	1	
-18	S1392N2		INDICATOR-RATE OF CLIMB	1	
-19	C661002-0201		GYRO-DIRECTIONAL	1	
	C661002-0201R		GYRO-DIRECTIONAL RECONDITIONED	1	
-20	C661001-0201		GYRO-HORIZONTAL	1	
	C661001-0201R		GYRO-HORIZONTAL RECONDITIONED	1	
			ATTACHING PARTS		
	AN5-586R12		SCREW	AR	
	AN936B6B		WASHER	AR	
			---*---		
	C669502-0203		INSTRUMENT CLUSTER KIT-LIGHTED WHEN EXHAUSTED USE C669502-0201	1	
	C669502-0201		INSTRUMENT CLUSTER-LIGHTED	1	
			ATTACHING PARTS		
	NAS43DD3-64		SPACER	2	
	AN507B832R24		SCREW	2	
	AN340B8		NUT	2	
			---*---		
-21	441344		GAGE-FUEL SW	2	
-22	440437		AMMETER SW	1	
-23	1213505-200	*	GAGE-CYLINDER HEAD TEMP MATCHED SET WHEN EXHAUSTED-USE G442702	1	
	G442702		GAGE-CYLINDER HEAD TEMP SW	1	
-24	442785		GAGE-OIL TEMP SW	1	
-25	G444627		GAGE-OIL PRESSURE SW	1	
-26	401627		WASHER-INSULATOR SW	1	
	S1372-1		SENDING UNIT-CYLINDER HEAD TEMP USE WITH G442702	1	
	110691		WIRE-CYLINDER HEAD TEMP GAGE TO SENDING UNIT 106 IN LG BULK ITEM	AR	E
	811542		POTENTIOMETER SW	1	
	S1894-3		BULB-RED INSTRUMENT CLUSTER	4	
	S1894-1		BULB-CLEAR USED WITH POST LIGHTING GE	4	
	S1941-1		FILTER INSTRUMENT CLUSTER	4	
-27	S1301N1		GAGE-MANIFOLD PRESSURE	1	
	0700099-7		LINE ASSEMBLY-MANIFOLD PRESSURE WHEN EXHAUSTED USE 0700099-84	1	
	0700099-84		LINE ASSEMBLY-MANIFOLD PRESSURE	1	
	AN816-2D		NIPPLE	1	
-28	S1305N8		TACHOMETER	1	
	S1605-2		SHAFT-TACHOMETER	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53C-29	C668001-0101	INDICATOR-FLAP	1	
		ATTACHING PARTS		
	AN340-6	NUT	4	
	AN936D6	WASHER	4	
	AN936A6	WASHER	4	
	AN507-632R12	SCREW	4	
	0713823-1	SPACER	1	
	0713816-2	RING	1	
		---*---		
-30	S1414N1	GAGE-SUCTION	1	
		ATTACHING PARTS		
	AN507B632R12	SCREW	4	
	MS20365B632C	NUT	4	
		---*---		
-31	S1268-2	CONTROL ASSEMBLY-DEFROST	1	
-32	S1241-4	CONTROL ASSEMBLY-CABIN AIR	1	
-33	S1241-3	CONTROL ASSEMBLY-CABIN HEAT	1	
-34	0513039-7	LIGHTER ASSEMBLY	1	
	L4858-1	PLUG-HEATING CUE	1	
	S1240-6	KNOB ASSEMBLY-LIGHTER	1	
	60232-1	CIRCUIT BREAKER-LIGHTER ASSEMBLY CUE	1	
-35	S1661-1	SWITCH-FLAP	1	
	0813526-6	KNOB-FLAP SWITCH	1	
	S1216-1	NUT-FLAP SWITCH	1	
-36	S1234-3	CONTROL ASSEMBLY-MIXTURE	1	
-37	S1223-6	CONTROL ASSEMBLY-PROPELLER	1	
	1213646-1	WASHER PROPELLER CONTROL	1	
-38	S1222-13	CONTROL ASSEMBLY-THROTTLE	1	
	1213646-2	WASHER THROTTLE CONTROL	1	
-39	41163L14	LIGHT ASSEMBLY GBN	9	
	S1894-1	BULB GE	1	
-40	S1230-3	CONTROL ASSEMBLY-CARBURETOR HEAT	1	
-41	S1533-1	CONTROL ASSEMBLY-STRAINER DRAIN	1	
-42	0311538-12	PRIMER ASSEMBLY	1	
	0713303-5	KNOB PRIMER	1	
-43	S1159-1-1	SWITCH-MASTER	1	
		ATTACHING PARTS		
	AN507B632R4	SCREW	2	
		---*---		
	0770719-1	DIODE ASSEMBLY LOCATED ON BACK OF MASTER SWITCH	1	
-44	C292501-0102	KIT-IGNITION SWITCH	1	
-45	R12 1/2-8RS34	RHEOSTAT-INSTRUMENT LIGHTS TRTA	1	
	S1163-2	KNOB ASSEMBLY-RHEOSTAT-INSTRUMENT LIGHTS	1	
-46	R12 1/2-75RS34	RHEOSTAT-RADIO LIGHTS TRTA	1	
	S1163-2	KNOB ASSEMBLY-RADIO LIGHTS RHEOSTAT	1	
-47	S1596-60	CIRCUIT BREAKER 60 AMP	1	
-48	S1360-20	CIRCUIT BREAKER 20 AMP	1	
-49	S1360-10	CIRCUIT BREAKER 10 AMP	4	
-50	S1360-15	CIRCUIT BREAKER 15 AMP	2	
-51	S1160-1-1	SWITCH-LANDING LIGHTS	1	
-52	S1158-2-1	SWITCH-NAVIGATION LIGHTS	1	
-53	S1158-2-1	SWITCH-FLASHING BEACON	1	
-54	S1158-1-1	SWITCH-OIL DILUTE	1	
-55	S1158-2-1	SWITCH-PITOT HEAT	1	
-56	0713781-2	PANEL-SHOCK	1	
		ATTACHING PARTS		
-57	AN515B6R16	SCREW	2	
-58	J2049-1D	WASHER LD	2	
-59	NAS43DD4-16	SPACER	2	
-60	102PDLN-4	SHOCK MOUNT LD	2	
-61	NAS679A08	NUT	2	
-62	AN515B6R6	SCREW	4	
-63	MS20365B632C	NUT	4	
-64	1213645-1	MOUNT-SHOCK	3	
-65	AN340B8	NUT	6	
-66	AN936A8	WASHER	3	
-67	0413247	GROUND STRAP	1	
		---*---		

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53C-68	0713874-6		COVER ASSEMBLY-INSTRUMENT PANEL SWITCHES	1	
-69	C668501-0201		INDICATOR ECONOMY POWER	1	
			ATTACHING PARTS		
	AN507863RR12		SCREW	4	
	MS20365B632C		NUT	4	
			---*---		
	C668501-0206		LEAD-THERMOCOUPLE	1	
-70	SEE FIG 55A		MAP COMPARTMENT INSTALLATION	1	
-71	0713252-1	¤	COVER-SWITCH MOUNTING BRACKET	1	B
	0713252-2	¤	COVER-SWITCH MOUNTING BRACKET	1	C
-72			RADIO INSTALLATIONS SEE CESSNA ELECTRONICS MANUAL	AR	
-73	S1311-1		GAGE-CARBURETOR AIR TEMPERATURE	1	
			ATTACHING PARTS		
	AN5078632R12		SCREW	4	
	MS20365B632C		NUT	4	
	C7000-632-67		NUT	4	
			---*---		
-74	0713863-6	¤	TRIM PANEL-LH SIDE	1	
-75	0713863-2	¤	TRIM PANEL-RH SIDE	1	
-76	0713861-1		TRIM PANEL-LH SIDE WOODGRAIN	1	
-77	0713861-2		TRIM PANEL-RH SIDE WOODGRAIN	1	
-78	0411030-4		RECEIVER-ASH	2	
			ATTACHING PARTS		
	S1021Z4-8		SCREW	4	
			---*---		
-79	0713770-200		PANEL ASSEMBLY-STATIONARY	1	
-80	0713775-1		REINFORCEMENT-CENTER STATIONARY PANEL	1	
-81	1213650-1		SUPPORT-STATIONARY PANEL COVER	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	2	
	NAS446-4-3		NUT	2	
			---*---		
-82	0713786-1		CLIP-PARKING BRAKE ATTACH	1	
-83	0713809-1		CLIP-WIRE CONTAINER	2	
-84	0713783-1		BRACKET-BULKHEAD ADAPTER	1	
-85	0713864-1		BRACKET-BULKHEAD ADAPTER	1	
-86	0713776-1		STOP-GLOVE BOX DOOR	2	
-87	1213151-1		SUPPORT	1	
-88	0713772-1		SUPPORT	1	
-89	1213630-4		DOUBLER	1	
-90	0713856-2		MOUNTING BRACKET	1	
-91	NAS697A08		NUTPLATE	3	
-92	0713771-1		SUPPORT ASSEMBLY-PARKING BRAKE	1	
	NAS697A3		NUTPLATE	1	
-93	0713801-1		SUPPORT-LOWER INSTRUMENT COVER	1	
-94	0713774-1		CENTER PANEL-LOWER	1	
	NAS697A08		NUTPLATE	3	
-95	1213145-1		BRACKET	1	
-96	0713779-1		ANGLE	1	
-97	0713801-2		SUPPORT-LOWER INSTRUMENT COVER	1	
-98	0713874-3		PANEL ASSEMBLY-CENTER WOODGRAIN	1	
-99	0713874-4		PANEL ASSEMBLY-RH WOODGRAIN	1	
-99A	C664501-0101		HOURMETER	1	B
			ATTACHING PARTS		
	AN5078632-6		SCREW	4	B
			---*---		

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XI

NOTE. *1213505-200 CONSISTS OF GAGE SENDING UNIT & POTENTIOMETER

A---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
B---182 SERIAL 18258334 THRU 18258505
C---182 SERIAL 18257626 THRU 18257909
A182 SERIAL A182-0057 THRU A182-0088
D---DELETED
DELETED
E---182 SERIAL 18257718 THRU 18258505

Equipment (Cont)

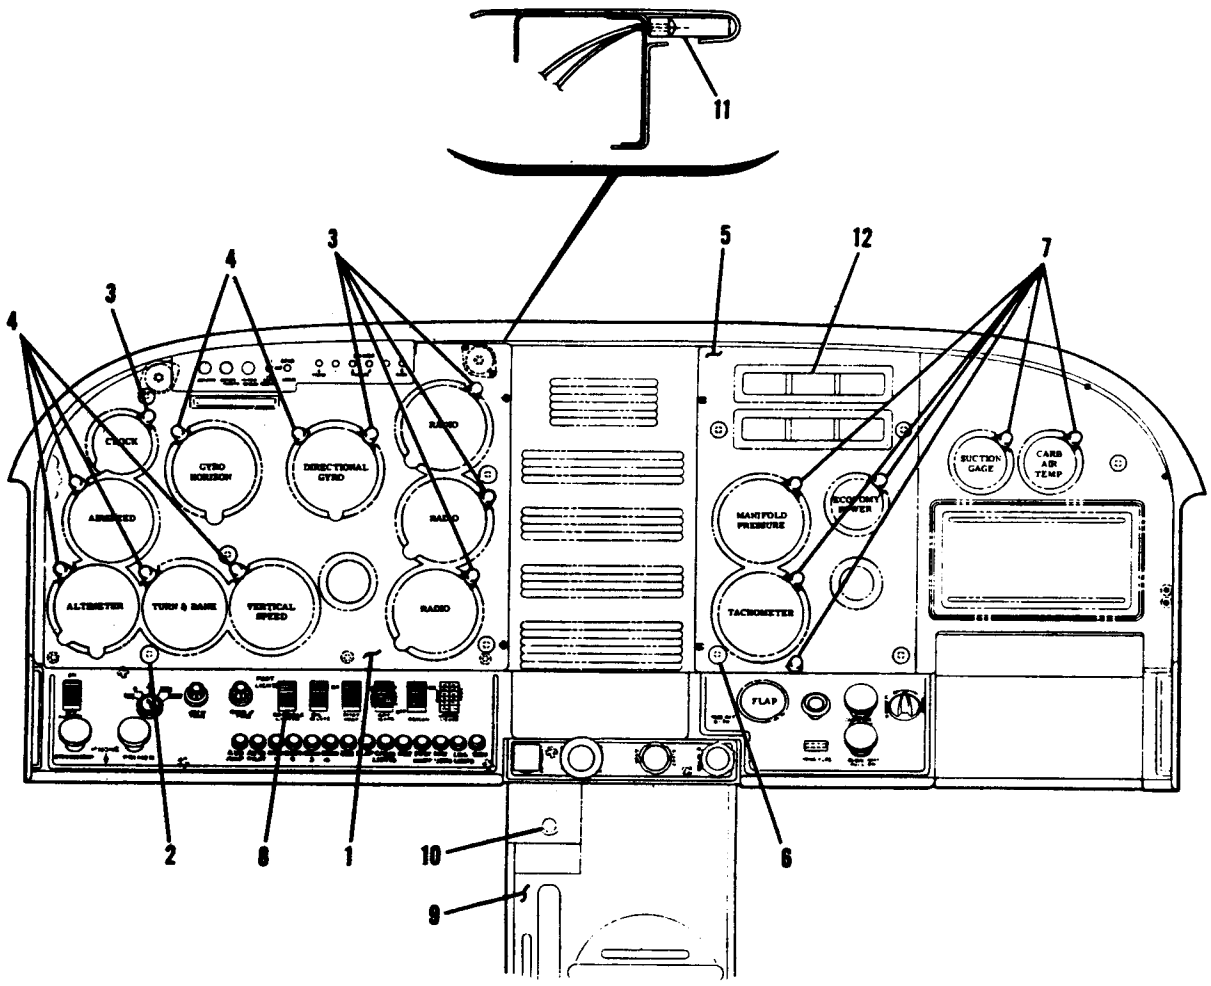

182 SERIAL 18257626 THRU 18258505


Figure 53D. Post Lighted Instrument Panel Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
530-		POST LIGHTED INSTRUMENT PANEL-INSTALLATION	NP	A
- 1	1200727-21 ¤	COVER ASSEMBLY-POST LIGHTED INSTRUMENT SHOCK	1	B
	1200727-22 ¤	COVER ASSEMBLY-POST LIGHTED INSTRUMENT SHOCK	1	D
	1200727-26 ¤	COVER ASSEMBLY-POST LIGHTED INSTRUMENT SHOCK	1	C
		ATTACHING PARTS		
- 2	NAS43DD4-16	SPACER	4	
	S1898-1	FASTENER	4	
		---*---		
- 3	S1899-1	PANEL LIGHT-TAB MOUNT	5	
- 4	S1899-2	PANEL LIGHT-TAB MOUNT	6	
	MS25237-330	BULB	1	
- 5	1200727-17 ¤	PANEL ASSEMBLY-POST LIGHTED INSTRUMENT STATIONARY	1	
		ATTACHING PARTS		
- 6	NAS43DD4-16	SPACER	5	
	S1898-1	FASTENER	5	
		---*---		
- 7	S1899-1	PANEL LIGHT-TAB MOUNT	6	
	MS25237-330	BULB	1	
- 8	S1238-2-1	SWITCH	1	
		ATTACHING PARTS		
	AN507-632R3	SCREW	1	
		---*---		
	FRL5	RESISTOR LOCATED BEHIND SWITCH TRTA	1	
- 9	1200756-3 ¤	PEDESTAL COVER ASSEMBLY-POST LIGHTED WHEN EXHAUSTED	1	
		USE 1200756-7		
	1200756-7 ¤	PEDESTAL COVER ASSEMBLY-POST LIGHTED	1	
-10	S1899-2	PANEL LIGHT-TAB MOUNT	1	
	MS25237-330	BULB	1	
-11	0700737-10	LIGHT ASSEMBLY-RADIO SWITCH PANEL WHITE	1	
	0700737-3	LIGHT ASSEMBLY-RADIO SWITCH PANEL RED	1	
	0700737-7	COVER ASSEMBLY RED	1	
	0700737-12	COVER ASSEMBLY WHITE	1	
		ATTACHING PARTS		
	S1021Z2-5	SCREW	2	
		---*---		
	S1894-1	BULB	3	
-12	S1894-1	BULB INSTRUMENT CLUSTER	4	
	S1941-1	JACKET-BULB BLUE APMH	4	
	SEE FIG 94	MAP LIGHT INSTALLATION-RH	1	

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII

A---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
B---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
EQUIPPED WITH STANDARD EQUIPMENT
OR FULL GYRO INSTALLATION
C---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
EQUIPPED WITH NAV-O-MATIC 300
D---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
EQUIPPED WITH NAV-O-MATIC 400

Instruments (Cont)

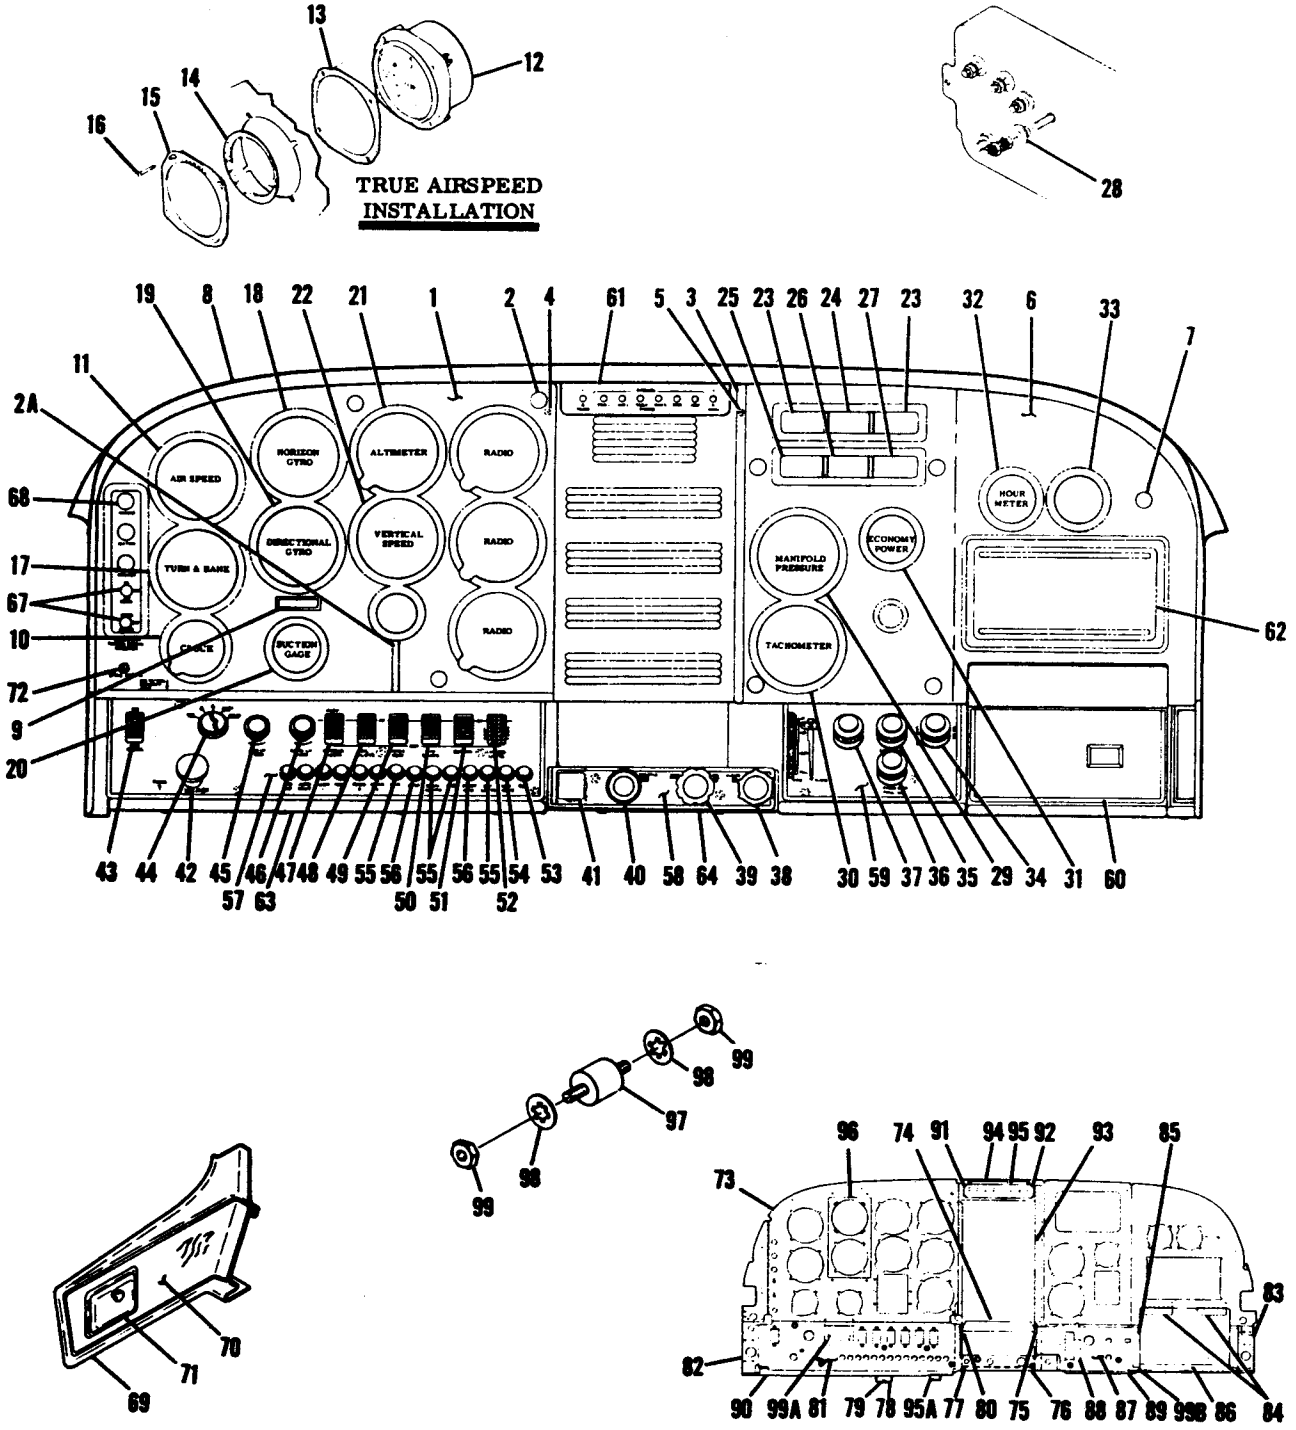

182 SERIAL 18258506 THRU 18259305

Figure 53E. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53E-		INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
- 1	0713278-3 ¤	COVER-INSTRUMENT PANEL LH	1	
		ATTACHING PARTS		
- 2	S1898-1	FASTENER	3	
	NAS43DD4-16	SPACER	3	
		---*---		
- 2A	1213163-1	LAP SEAL	1	
- 3	1213116-1 ¤	COVER-CENTER INSTRUMENT PANEL	1	
		ATTACHING PARTS		
- 4	S1021A6-6	SCREW	1	
- 5	S1022A6-6	SCREW	3	
		---*---		
- 6	0713866-6 ¤	COVER-STATIONARY PANEL	1	
		ATTACHING PARTS		
- 7	S1898-1	FASTENER	5	
	NAS43DD4-16	SPACER	5	
		---*---		
- 8	1213088-1 ¤	BROW ASSEMBLY-INSTRUMENT PANEL	1	
		ATTACHING PARTS		
	0713285-1	RETAINER	1	
	S1021A4-68	SCREW	7	
		---*---		
- 9	1213004-1	RETAINER-AIRCRAFT IDENTIFICATION NUMBER	1	
		ATTACHING PARTS		
	S1022Z6-88	SCREW	2	
	NAS446-2-1	NUT	2	
		---*---		
	1205009-1	PLACARD-IDENTIFICATION NUMBER	1	
-10	S1317N2	CLOCK-ELECTRIC	1	
-11	S1470N4	INDICATOR-AIRSPEED	1	
		TRUE AIRSPEED INDICATOR INSTALLATION	NP	
-12	C661010-0202	INDICATOR-AIRSPEED	1	
-13	0700162-6	SPACER	1	
-14	0700189-2	RING ASSEMBLY-TRUE AIRSPEED	1	
-15	0700162-1	RETAINER ASSEMBLY	1	
		ATTACHING PARTS		
-16	AN515B6R16	SCREW	4	
		---*---		
-17	S1413N1	INDICATOR-TURN & BANK	1	
	C661003-0201	INDICATOR-TURN COORDINATOR SKYLANE WHEN EXHAUSTED USE C661003-0501	1	
	C661003-0501	INDICATOR-TURN COORDINATOR SKYLANE	1	
-18	C661001-0501	GYRO-HORIZONTAL	1	
		ATTACHING PARTS		
	AN520-6R6	SCREW	4	
		---*---		
-19	C661002-0501	GYRO-DIRECTIONAL	1	
		ATTACHING PARTS		
	AN520-6R6	SCREW	3	
		---*---		
	SEE FIG 88B	GYRO-HORIZONTAL FOR NAV-400	1	
	SEE FIG 88B	GYRO-DIRECTIONAL FOR NAV-400	1	
-20	S1414N1	GAGE-SUCTION	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
		---*---		
-21	S1314N1	ALTIMETER 20,000 FT RECONDITIONED	1	
	C661011-0105	ALTIMETER 20,000 FT FEET & INCHES SKYLANE	1	
	C661011-0106	ALTIMETER 20,000 FT FEET & MILLIBARS	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53E-22	S1392N2		INDICATOR RATE OF CLIMB	1	
	S1392N1		INDICATOR RATE OF CLIMB	1	
	C669502-0203		INSTRUMENT CLUSTER KIT-LIGHTED WHEN EXHAUSTED USE C669502-0201	1	
	C669502-0201		INSTRUMENT CLUSTER-LIGHTED	1	
			ATTACHING PARTS		
	NAS43DD3-64		SPACER	2	
	AN5078832R24		SCREW	2	
	AN34088		NUT	2	
			---*---		
-23	441344		GAGE-FUEL SW	2	
-24	440437		AMMETER SW	1	
-25	1213505-200	*	GAGE-CYLINDER HEAD TEMP MATCHED SET WHEN EXHAUSTED-USE G442702	1	
	G442702		GAGE-CYLINDER HEAD TEMP SW	1	
-26	442785		GAGE-OIL TEMP SW	1	
-27	G444627		GAGE-OIL PRESSURE SW	1	
-28	401627		WASHER-INSULATOR SW	1	
	S1372-1		SENDING UNIT-CYLINDER HEAD TEMP USED WITH G442702	1	
	110691		WIRE-CYLINDER HEAD TEMP GAGE TO SENDING UNIT 106 IN LG BULK ITEM	AR	
	811542		POTENTIOMETER SW	1	
	S1894-3		BULB-RED INSTRUMENT CLUSTER	4	
	S1894-1		BULB-CLEAR USED WITH POST LIGHTING GE	4	
	S1941-1		FILTER INSTRUMENT CLUSTER	4	
-29	S1301N1		GAGE-MANIFOLD PRESSURE	1	
	0700099-7		LINE ASSEMBLY-MANIFOLD PRESSURE WHEN EXHAUSTED USE 0700099-84	1	
	0700099-84		LINE ASSEMBLY-MANIFOLD PRESSURE	1	
	AN816-2D		NIPPLE	1	
-30	S1305N8		TACHOMETER	1	
	S1605-2		SHAFT-TACHOMETER	1	
-31	C668501-0201		INDICATOR-ECONOMY POWER	1	
			ATTACHING PARTS		
	AN507863RR12		SCREW	4	
	MS20365B632C		NUT	4	
			---*---		
-32	C664501-0101		HOURMETER	1	
			ATTACHING PARTS		
	AN515-6R6		SCREW	4	
	NAS679A06		NUT	4	
			---*---		
-33	S1311-1		GAGE-CARBURETOR AIR TEMPERATURE	1	
			ATTACHING PARTS		
	AN507B632R12		SCREW	4	
	MS20365B632C		NUT	4	
	C7000-632-67		NUT TIN	4	
			---*---		
-34	S1268-9		CONTROL ASSEMBLY-DEFROST	1	
-35	S1241-16		CONTROL ASSEMBLY-CABIN AIR	1	
-36	S1241-15		CONTROL ASSEMBLY-CABIN HEAT	1	
-37	0513039-7		LIGHTER ASSEMBLY-CIGAR	1	
	L4858-1		PLUG-HEATING CUE	1	
	S1752-2		KNOB ASSEMBLY-LIGHTER	1	
	60232-1		CIRCUIT BREAKER-LIGHTER ASSEMBLY CUE	1	
	SEE FIG 79B		FLAP CONTROLS DETAIL INSTALLATION	1	
-38	S1234-5		CONTROL ASSEMBLY-MIXTURE	1	
-39	S1223-7		CONTROL ASSEMBLY-PROPELLER	1	
	1213646-1		WASHER PROPELLER CONTROL	1	
-40	S1222-16		CONTROL ASSEMBLY-THROTTLE	1	
	1213646-2		WASHER THROTTLE CONTROL	1	
-41	S1230-10		CONTROL ASSEMBLY-CARBURETOR HEAT	1	
-42	C291502-0101		CONTROL ASSEMBLY-ENGINE PRIMER	1	
	S1752-1		KNOB-PRIMER CONTROL	1	
-43	S1159-1-1		SWITCH-MASTER	1	
			ATTACHING PARTS		
	AN507B632R4		SCREW	2	
			---*---		
	0770719-1		DIODE ASSEMBLY	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53E-44	C292501-0102		KIT-IGNITION SWITCH	1	
-45	R121/28RS34		RHEOSTAT-INSTRUMENT LIGHTS MECOR	1	C
	S1880-4		RHEOSTAT-INSTRUMENT LIGHTS	1	D
	S1163-2		KNOB ASSEMBLY-RHEOSTAT INSTRUMENT LIGHTS	1	
-46	R121/275RS34		RHEOSTAT-RADIO LIGHTS MEMCOR	1	C
	S1880-3		RHEOSTAT-RADIO LIGHTS	1	D
	S1163-2		KNOB ASSEMBLY-RHEOSTAT RADIO LIGHTS	1	
-47	S1238-2-1		SWITCH-CONSOLE	1	
-48	S1158-1-1		SWITCH-OIL DILUTE	1	
-49	S1158-2-1		SWITCH-PITOT HEAT	1	
-50	S1158-2-1		SWITCH-NAVIGATION LIGHTS	1	
-51	S1158-2-1		SWITCH-FLASHING BEACON	1	
-52	S1160-1-1		SWITCH-LANDING LIGHTS	1	
-53	S1596-60		CIRCUIT BREAKER 60 AMP	1	
-54	S1360-20		CIRCUIT BREAKER 20 AMP	1	
-55	S1360-10		CIRCUIT BREAKER 10 AMP	4	
-56	S1360-15		CIRCUIT BREAKER 15 AMP	2	
-57	0713260-1		COVER ASSEMBLY-INSTRUMENT PANEL SWITCHES	1	
-58	0713260-2		COVER ASSEMBLY-INSTRUMENT PANEL	1	
-59	1260094-2		COVER ASSEMBLY-INSTRUMENT PANEL	1	
-60	SEE FIG 55A		MAP COMPARTMENT INSTALLATION	1	
-61	1213005-1	#	COVER-SWITCH MOUNTING BRACKET	1	
	0700737-3		LIGHT ASSEMBLY-RADIO SWITCH PANEL	1	
	0700737-9		BASE	1	
	0700737-7		COVER ASSEMBLY	1	
			ATTACHING PARTS		
	S1021Z2-5		SCREW	2	
			---*---		
	1215014-1		TRIM-RADIO SWITCH PANEL LIGHT	1	B
-62			RADIO INSTALLATIONS SEE CESSNA ELECTRONICS MANUAL	NP	
-63	0713271-1		COVER-TRIM	1	
-64	1213006-2		COVER-TRIM	1	
-65			DELETED NEVER USED		
-66			DELETED NEVER USED		
-67	CM2692-8H18		PLUG BUTTON	2	
-68	CM2692-15.51H8		PLUG BUTTON	3	
-69	0713269-1	#	TRIM PANEL-LH SIDE	1	
	0713269-2	#	TRIM PANEL-RH SIDE	1	
-70	0713861-1		TRIM PANEL-LH SIDE WOODGRAIN	1	
	0713861-2		TRIM PANEL-RH SIDE WOODGRAIN	1	
-71	0411030-4		RECEIVER ASSEMBLY-ASH	2	
			ATTACHING PARTS		
	S1021Z4-8		SCREW	2	
	NAS446-1-3		NUT	2	
			---*---		
-72	SEE FIG 76B		BRITTAIN WING LEVELER INSTALLATION	1	
-73	0713273-200		PANEL ASSEMBLY-STATIONARY	1	
-74	1213650-1		SUPPORT-STATIONARY PANEL COVER	1	
			ATTACHING PARTS		
-75	S1021Z8-8		SCREW	2	
	NAS446-4-3		NUT	2	
			---*---		
-76	0713266-2		CONTROL PANEL-LWR CENTER WHEN EXHAUSTED USE 0713266-4	1	
	0713266-4		CONTROL PANEL-LWR CENTER	1	
-77	0713775-1		REINFORCEMENT-CENTER STATIONARY PANEL	1	
-78	0713267-1		ATTACH ASSEMBLY-PARKING BRAKE	1	
-79	MS21044N3		NUTPLATE	1	
-80	0713277-1		SUPPORT-RADIO LOWER	1	
-81	0713275-1		SWITCH PANEL	1	
-82	0713783-3		BRACKET-BULKHEAD ADAPTER	1	
-83	0713864-1		BRACKET-BULKHEAD ADAPTER	1	
-84	0713776-1		STOP-GLOVE BOX DOOR	2	
-85	1213145-1		MOUNTING BRACKET-GLOVE BOX	1	
-86	0713779-1		ANGLE ASSEMBLY-DOOR MOUNT	1	
	NAS697A08		NUTPLATE	3	

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53E-87	0713770-9	BULKHEAD PANEL	1	
-88	1262001-1	MOUNTING BRACKET-FLAP CONTROL	1	
-89	0713801-2	SUPPORT-LOWER INSTRUMENT COVER	1	
-90	1213062-4	SUPPORT	1	
-91	1213065-1	SUPPORT BRACKET ASSEMBLY RH	1	
	NAS697A06L	NUTPLATE	2	
-92	1213065-2	SUPPORT BRACKET ASSEMBLY LH	1	
	NAS697A06L	NUTPLATE	2	
-93	1213151-1	SUPPORT-BULKHEAD	1	
-94	1213064-1	BRACKET ASSEMBLY-SWITCH MOUNTING	1	
		ATTACHING PARTS		
-95	AN507B632R7	SCREW	4	
		---*---		
	1270638-1	BRACKET-MIKE JACK	1	
-96	0713276-1	PANEL-SHOCK	1	
		ATTACHING PARTS		
-97	1213645-1	SHOCK MOUNT	4	
-98	AN936A8	WASHER	8	
-99	AN34088	NUT	8	
		---*---		
-99A	0713856-2	MOUNTING BRACKET	1	
-99B	0713809-1	CLIP-WIRE CONTAINER	2	

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XI

NOTE. *1213505-200 CONSISTS OF GAGE SENDING UNIT & POTENTIOMETER

A---182 SERIAL 18258506 THRU 18259305
A182 SERIAL A182-0097 THRU A182-0116
B---182 SERIAL 18259209 THRU 18259305
C---182 SERIAL 18258506 THRU 18259135, EXCEPT
18258606, 18258609, 18258618, 18258625,
18258632, 18258639, 18258646, 18258653,
18258660, 18258667, 18258674, 18258681,
18258689, 18258695, 18258702, 18258709,
18258716, 18258723, 18258730 & 18258737
A182 SERIAL A182-0097 THRU A182-0116
D---182 SERIAL 18258606, 18258609, 18258618,
18258625, 18258632, 18258639, 18258646,
18258653, 18258660, 18258667, 18258674,
18258681, 18258689, 18258695, 18258702,
18258709, 18258716, 18258723, 18258730,
18258737, 18259136 THRU 18259305

Equipment (Cont)

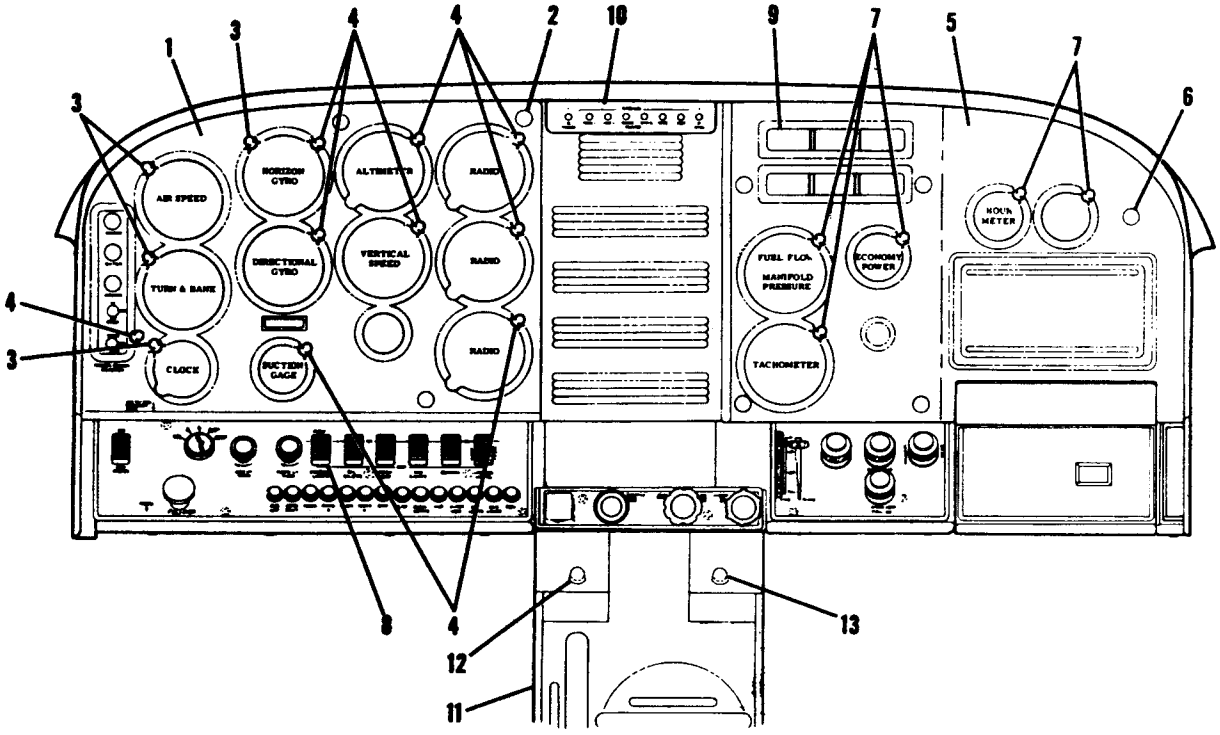

182 SERIAL 18258506 THRU 18259305


Figure 53F. Post Lighted Instrument Panel Installation

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
53F-		POST LIGHTED INSTRUMENT PANEL INSTALLATION	NP	A
- 1	0713282-1 ¤	COVER ASSEMBLY-POST LIGHT LH	1	
		ATTACHING PARTS		
- 2	NAS43DD4-16	SPACER	3	
	S1898-1	FASTENER	3	
		---*---		
- 3	S1899-2	LIGHT ASSEMBLY	4	
- 4	S1899-1	LIGHT ASSEMBLY	9	
	MS25237-330	BULB	1	
- 5	0713866-9 ¤	COVER ASSEMBLY-POST LIGHT RH	1	
		ATTACHING PARTS		
- 6	NAS43DD4-16	SPACER	5	
	S1898-1	FASTENER	5	
		---*---		
- 7	S1899-1	LIGHT ASSEMBLY	5	
	MS25237-330	BULB	1	
- 8	S1238-2-1	SWITCH	1	
		ATTACHING PARTS		
	AN507-632R3	SCREW	2	
		---*---		
	FRL5	RESISTOR LOCATED BEHIND SWITCH TRTA	1	
- 9	S1894-1	BULB INSTRUMENT CLUSTER GE	4	
	S1941-1	JACKET-BULB BLUE APMH	4	
-10	0700737-10	LIGHT ASSEMBLY-RADIO SWITCH PANEL	1	
	0700737-9	BASE	1	
	0700737-12	COVER ASSEMBLY	1	
		ATTACHING PARTS		
	S1021Z2-5	SCREW	2	
		---*---		
	S1894-1	BULB	3	
-11	1200756-7 ¤	PEDESTAL COVER ASSEMBLY-POST LIGHTED	1	
-12	S1899-2	PANEL LIGHT-TAB MOUNT	1	
	MS25237-330	BULB	1	
-13	S1899-1	PANEL LIGHT-TAB MOUNT	1	
	MS25237-330	BULB	1	
	SEE FIG 94	MAP LIGHT INSTALLATION	1	

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18258506 THRU 18259305
A182 SERIAL A182-0097 THRU A182-0116

Instruments (Cont)

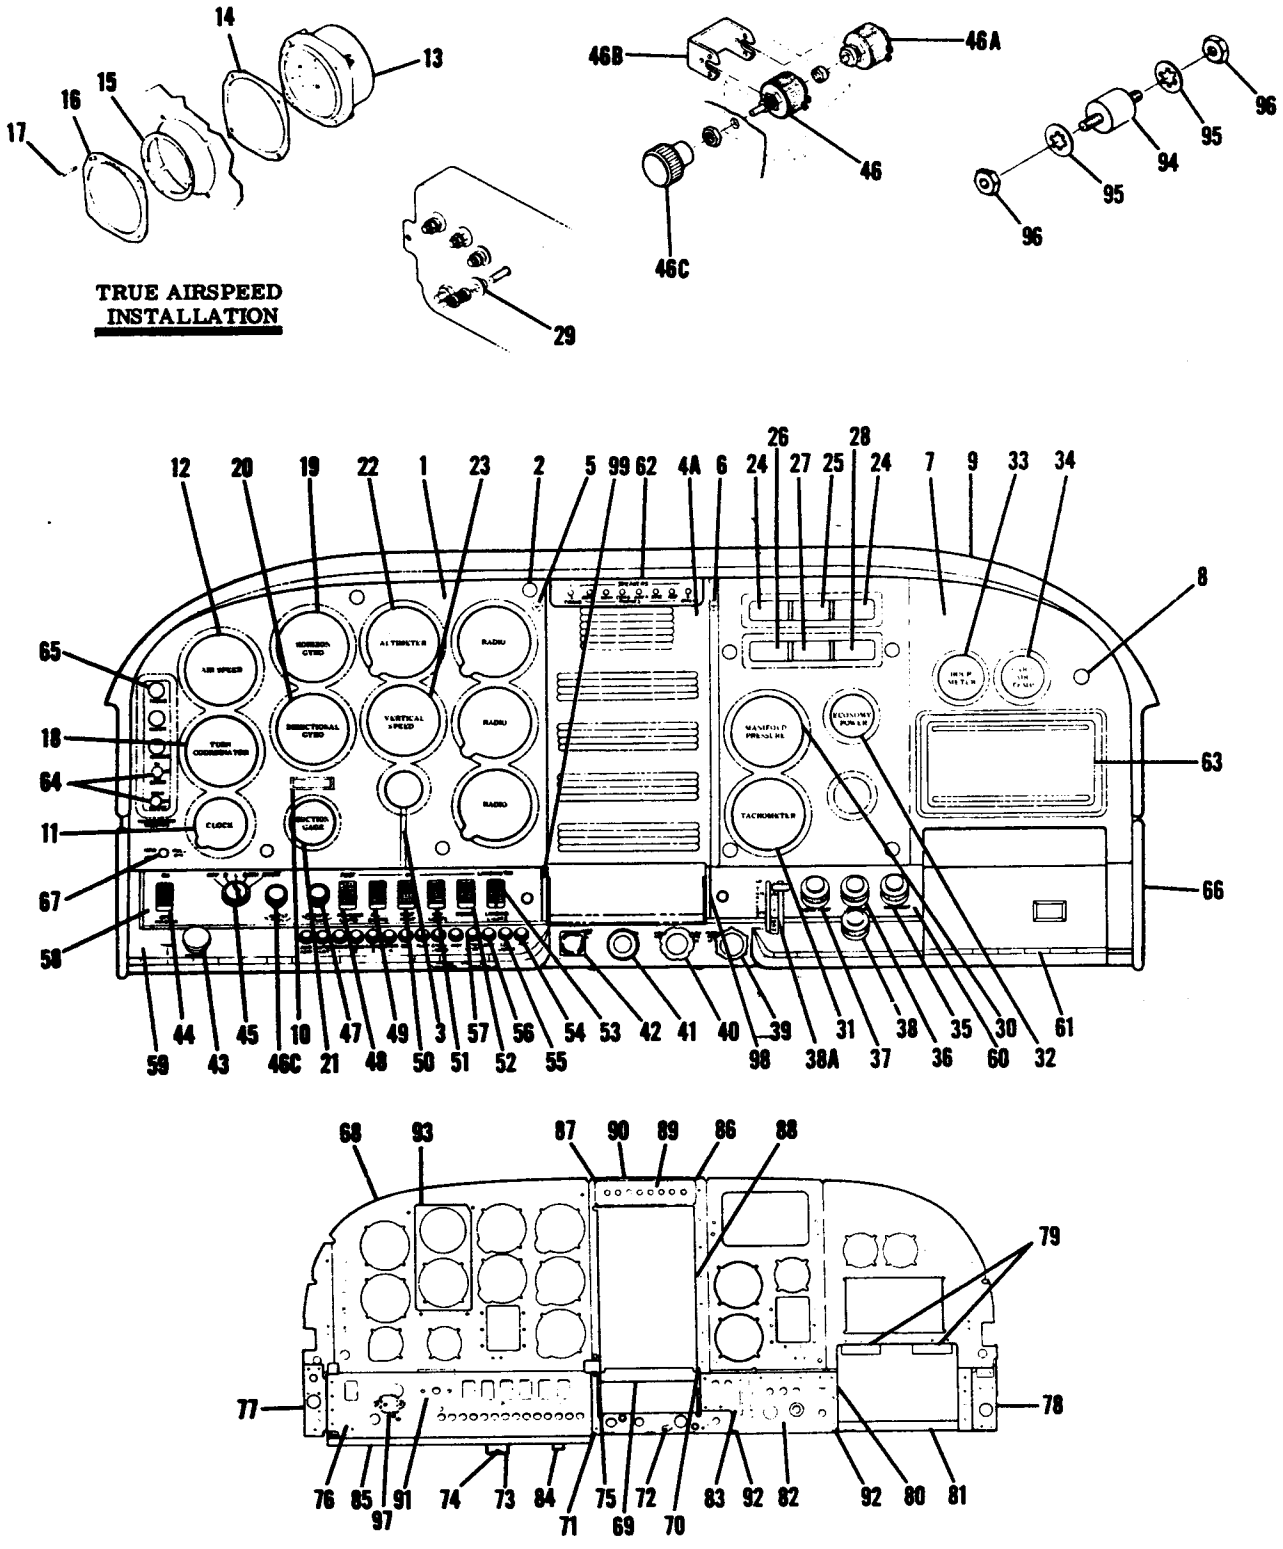

182 SERIAL 18259306 THRU 18260055

Figure 53G. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53G-			INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
- 1	0713278-3	¤	COVER-INSTRUMENT PANEL LH	1	
			ATTACHING PARTS		
- 2	S1898-1		FASTENER	3	
	NAS43DD4-16		SPACER	3	
			---*---		
- 3	1213163-1		LAP SEAL	1	
- 4A	1213116-1	¤	COVER-CENTER INSTRUMENT PANEL	1	
			ATTACHING PARTS		
- 5	S1021A6-6		SCREW	1	
- 6	S1022A6-6		SCREW	3	
			---*---		
- 7	0713866-6	¤	COVER-STATIONARY PANEL RH	1	
			ATTACHING PARTS		
- 8	S1898-1		FASTENER	5	
	NAS43DD4-16		SPACER	5	
			---*---		
- 9	1213088-1	¤	BROW ASSEMBLY-INSTRUMENT PANEL	1	G
	1213088-3	¤	BROW ASSEMBLY-INSTRUMENT PANEL	1	H
			ATTACHING PARTS		
	0713285-1		RETAINER-BROW	1	
	S1021A4-6B		SCREW	7	
			---*---		
-10	1213004-1		RETAINER-AIRCRAFT IDENTIFICATION NUMBER	1	
			ATTACHING PARTS		
	S1022Z6-88		SCREW	2	
	NAS446-2-1		NUT	2	
			---*---		
	1205009-1		PLACARD-IDENTIFICATION NUMBER	1	
-11	S1317N2		CLOCK-ELECTRIC	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	2	
	AN936B6B		WASHER	2	
			---*---		
-12	S1470N4		INDICATOR-AIRSPEED	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
	AN936B6B		WASHER	4	
			---*---		
			TRUE AIRSPEED INDICATOR INSTALLATION	NP	
-13	C661010-0202		INDICATOR-AIRSPEED	1	
-14	0700162-6		SPACER-TRUE AIRSPEED RING	1	
-15	0700189-2		RING ASSEMBLY-TRUE AIRSPEED	1	
-16	0700162-1		RETAINER ASSEMBLY-TRUE AIRSPEED	1	
			ATTACHING PARTS		
-17	AN515B6R16		SCREW	4	
			---*---		
-18	S1413N1		INDICATOR-TURN & BANK	1	
	C661003-0501		INDICATOR-TURN COORDINATOR SKYLANE	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
	AN936B6B		WASHER	4	
			---*---		
	TVA-1315		CAPACITOR LOCATED ON BACK OF INSTRUMENT	1	
-19	C661001-0501		GYRO-HORIZONTAL	1	
	C661001-0502		GYRO-HORIZONTAL ALT	1	
	C661001-0503		GYRO-HORIZONTAL ALT	1	
			ATTACHING PARTS		
	AN520-6R6		SCREW	4	
			---*---		
-20	C661002-0501		GYRO-DIRECTIONAL	1	
	C661002-0301		GYRO-DIRECTIONAL ALT	1	
	C661002-0503		GYRO-DIRECTIONAL ALT	1	
			ATTACHING PARTS		
	AN520-6R6		SCREW	3	
			---*---		
	SEE FIG 88B		GYRO-HORIZONTAL FOR NAV-O-MATIC	1	
	SEE FIG 88B		GYRO-DIRECTIONAL FOR NAV-O-MATIC	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53G-21	S1414N1	GAGE-SUCTION	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
		---•---		
-22	S1314N1	ALTIMETER 20,000 FT RECONDITIONED	1	
	C661011-0105	ALTIMETER 20,000 FT FEET & INCHES SKYLANE	1	
	C661011-0106	ALTIMETER 20,000 FT FEET & MILLIBARS	1	
-23	S1392N2	INDICATOR-RATE OF CLIMB	1	
		ATTACHING PARTS		
	AN507B632R12	SCREW	4	
	AN960-10L	WASHER	4	
	AN34086	NUT	4	
		---•---		
	C669502-0201	INSTRUMENT CLUSTER-LIGHTED	1	
		ATTACHING PARTS		
	NAS43DD3-64	SPACER	2	
	AN507B832R24	SCREW	2	
	AN34088	NUT	2	
		---•---		
-24	441344	GAGE-FUEL SW	2	
-25	440437	AMMETER SW	1	
-26	G442702	GAGE-CYLINDER HEAD TEMP SW	1	
-27	442785	GAGE-OIL TEMP SW	1	
-28	G444627	GAGE-OIL PRESSURE SW	1	
-29	401627	WASHER-INSULATOR SW	1	
	S1372-1	SENDING UNIT-CYLINDER HEAD TEMP	1	
	110691	WIRE-CYLINDER HEAD TEMP GAGE TO SENDING UNIT 106 IN LG BULK ITEM	AR	
	811542	POTENTIOMETER	1	
	S1894-3	BULB-RED INSTRUMENT CLUSTER	4	
	S1894-1	BULB-CLEAR USE WITH POST LIGHTING	4	
	S1941-1	FILTER INSTRUMENT CLUSTER	4	
-30	S1301N1	GAGE-MANIFOLD PRESSURE	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	AN936B6B	WASHER	4	
		---•---		
	0700099-7	LINE ASSEMBLY-MANIFOLD PRESSURE WHEN EXHAUSTED	1	
		USE 0700099-84		
	0700099-84	LINE ASSEMBLY-MANIFOLD PRESSURE	1	
	AN816-2D	NIPPLE	1	
-31	S1305N8	TACHOMETER	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	AN936B6B	WASHER	4	
		---•---		
	S1605-2	SHAFT-TACHOMETER	1	
-32	C668501-0201	INDICATOR-ECONOMY POWER	1	
		ATTACHING PARTS		
	AN507B632R12	SCREW	4	
	MS20365B632C	NUT	4	
		---•---		
-33	C664501-0101	HOURMETER	1	
		ATTACHING PARTS		
	AN515-6R6	SCREW	4	
	NAS679AD6	NUT	4	
		---•---		
-34	S1311-1	GAGE-CARBURETOR AIR TEMPERATURE	1	
		ATTACHING PARTS		
	AN507B632R12	SCREW	4	
	MS20365B632C	NUT	4	
	C7000-632-67	NUT TIN	4	
		---•---		
-35	S1268-13	CONTROL ASSEMBLY-DEFROST	1	
-36	S1241-16	CONTROL ASSEMBLY-CABIN AIR	1	
-37	S1241-15	CONTROL ASSEMBLY-CABIN HEAT	1	
-38	0513039-7	LIGHTER ASSEMBLY-CIGAR	1	
	L4858-1	PLUG-HEATING CUE	1	
	S1752-2	KNOB ASSEMBLY-LIGHTER	1	
*	60232-1	CIRCUIT BREAKER-LIGHTER ASSEMBLY CUE	1	
-38A	SEE FIG 79B	FLAP CONTROLS DETAIL INSTALLATION	1	
-39	S1234-5	CONTROL ASSEMBLY-MIXTURE	1	
-40	S1223-7	CONTROL ASSEMBLY-PROPELLER	1	
	1213646-1	WASHER PROPELLER CONTROL	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53G-41	S1222-16		CONTROL ASSEMBLY-THROTTLE	1	
	1213646-2		WASHER THROTTLE CONTROL	1	
-42	S1230-10		CONTROL ASSEMBLY-CARBURETOR HEAT	1	
-43	C291502-0101		CONTROL ASSEMBLY-ENGINE PRIMER	1	
	S1752-1		KNOB-PRIMER CONTROL	1	
-44	S1844-1-1		SWITCH-MASTER	1	
			ATTACHING PARTS		
	AN5078632R4		SCREW	2	
			---*---		
	0770719-1		DIODE ASSEMBLY MASTER SWITCH	1	
-45	C292501-0102		KIT-IGNITION SWITCH	1	
-46	S1880-4		RHEOSTAT-INSTRUMENT LIGHTS	1	
-46A	S1880-6		RHEOSTAT-INSTRUMENT LIGHTS	1	
-46B	S1935-3		BRACKET KIT INCLUDES COUPLING	1	
-46C	S1753-7		KNOB ASSEMBLY-INSTRUMENT LIGHTS RHEOSTAT	1	
-47	S1880-3		RHEOSTAT-RADIO LIGHTS	1	
	S1753-7		KNOB ASSEMBLY-RADIO LIGHTS RHEOSTAT	1	
-48	S1847-2-1		SWITCH-CONSOLE	1	
	1913035-1		COVER ASSEMBLY-SWITCH CUTOUT USE WHEN OPTIONAL SWITCH IS NOT INSTALLED	1	
-49	S1845-2-1		SWITCH-OIL DILUTE	1	
	1913035-1		COVER ASSEMBLY-SWITCH CUTOUT USE WHEN OPTIONAL SWITCH IS NOT INSTALLED	1	
-50	S1845-1-1		SWITCH-PITOT HEAT	1	
-51	S1845-1-1		SWITCH-NAVIGATION LIGHTS	1	
-52	S1845-1-1		SWITCH-FLASHING BEACON	1	
	1913035-1		COVER ASSEMBLY-SWITCH CUTOUT USE WHEN OPTIONAL SWITCH IS NOT INSTALLED	1	
-53	S1846-1-1		SWITCH-LANDING LIGHTS	1	
-54	S1596-60		CIRCUIT BREAKER 60 AMP	1	
-55	S1360-20		CIRCUIT BREAKER 20 AMP	1	
-56	S1360-10		CIRCUIT BREAKER 10 AMP	1	
-57	S1360-15		CIRCUIT BREAKER 15 AMP	1	
-58	1213191-3		COVER ASSEMBLY-INSTRUMENT PANEL SWITCHES ELECTROLUMINESCENT	1	
-59	0713525-1	¤	COVER ASSEMBLY-INSTRUMENT PANEL LOWER	1	D
	0713525-3	¤	COVER ASSEMBLY-INSTRUMENT PANEL LOWER WHEN EXHAUSTED USE 0713525-5	1	E
	0713525-5	¤	COVER ASSEMBLY-INSTRUMENT PANEL LOWER	1	F
	S1022Z4-8		SCREW	2	J
-60	1213192-9		COVER ASSEMBLY-INSTRUMENT PANEL ELECTROLUMINESCENT	1	
-61	SEE FIG 55A		MAP COMPARTMENT INSTALLATION	1	
-62	1213005-1	¤	COVER-SWITCH MOUNTING BRACKET	1	
	0700737-3		LIGHT ASSEMBLY-RADIO SWITCH PANEL	1	
	0700737-9		BASE	1	
	0700737-7		COVER ASSEMBLY	1	
			ATTACHING PARTS		
	S1021Z2-5		SCREW	2	
			---*---		
	1215014-1	¤	TRIM-RADIO SWITCH PANEL LIGHT	1	G
	0713934-1	¤	COVER-RADIO SWITCH PANEL LIGHT	1	H
-64	CM2692-8H1B		PLUG BUTTON	2	
-65	CM2692-15.51HB		PLUG BUTTON	3	
-66	0713524-1	¤	TRIM PANEL-RH SIDE	1	
-67	SEE FIG 76B		WING LEVELER INSTALLATION	1	
-68	0713273-201		PANEL ASSEMBLY-STATIONARY	1	
-69	1213650-1		SUPPORT-STATIONARY PANEL COVER	1	
			ATTACHING PARTS		
-70	S1021Z8-8		SCREW	2	
	NAS446-4-3		NUT	2	
			---*---		
-71	0713266-2		CONTROL PANEL-LOWER CENTER WHEN EXHAUSTED USE 0713266-4	1	B
	0713266-4		CONTROL PANEL-LOWER CENTER	1	C
-72	0713775-1		REINFORCEMENT-CENTER STATIONARY PANEL	1	
-73	0713267-1		ATTACH ASSEMBLY-PARKING BRAKE	1	
-74	MS21044N3		NUTPLATE	1	
-75	0713277-1		SUPPORT-RADIO LOWER	1	
-76	0713275-2		SWITCH PANEL	1	
-77	0713783-3		BRACKET-BULKHEAD ADAPTER	1	
-78	0713864-1		BRACKET-BULKHEAD ADAPTER	1	
-79	0713776-1		STOP-GLOVE BOX DOOR	2	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53G-80	1213145-1	MOUNTING BRACKET-GLOVE BOX	1	
-81	0713779-1	ANGLE ASSEMBLY-DOOR MOUNT	1	
	NAS697A08	NUTPLATE	3	
-82	0713770-10	BULKHEAD PANEL	1	
-83	1262001-2	MOUNTING BRACKET-FLAP CONTROL	1	
-84	1270638-1	BRACKET-MIKE JACK	1	
-85	1213062-4	SUPPORT	1	
-86	1213065-1	SUPPORT BRACKET ASSEMBLY RH SIDE	1	
	NAS697A06L	NUTPLATE	2	
-87	1213065-2	SUPPORT BRACKET ASSEMBLY LH SIDE	1	
	NAS697A06L	NUTPLATE	2	
-88	1213151-1	SUPPORT-BULKHEAD	1	
-89	1213064-1	BRACKET ASSEMBLY-SWITCH MOUNTING	1	
		ATTACHING PARTS		
-90	AN5078632R7	SCREW	4	
-91	0713856-2	MOUNTING BRACKET	1	
-92	0713809-1	CLIP-WIRE RETAINER	2	
-93	0713276-1	PANEL-SHOCK	1	
		ATTACHING PARTS		
-94	1213645-1	SHOCK PANEL	4	
-95	AN936A8	WASHER	8	
-96	AN34088	NUT	8	
-97	CA-2	CIRCUIT BREAKER MTCC	2	
-98	1213301-1	RETAINER-INSTRUMENT PANEL COVER RH	1	D
-99	1213301-2	RETAINER-INSTRUMENT PANEL COVER LH	1	D
		ATTACHING PARTS		
	S1021A4-6	SCREW	1	
	NAS446-1	NUT	1	

NOTE. *THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XI.

A---182 SERIAL 18259306 THRU 18260055
B---182 SERIAL 18259306 THRU 18259765
C---182 SERIAL 18259766 THRU 18260055
D---182 SERIAL 18259306 THRU 18259969
E---182 SERIAL 18259970 THRU 18260004
F---182 SERIAL 18260005 THRU 18260055
G---182 SERIAL 18259306 THRU 18259658
H---182 SERIAL 18259659 THRU 18260055
J---182 SERIAL 18259970 THRU 18260055

Equipment (Cont)

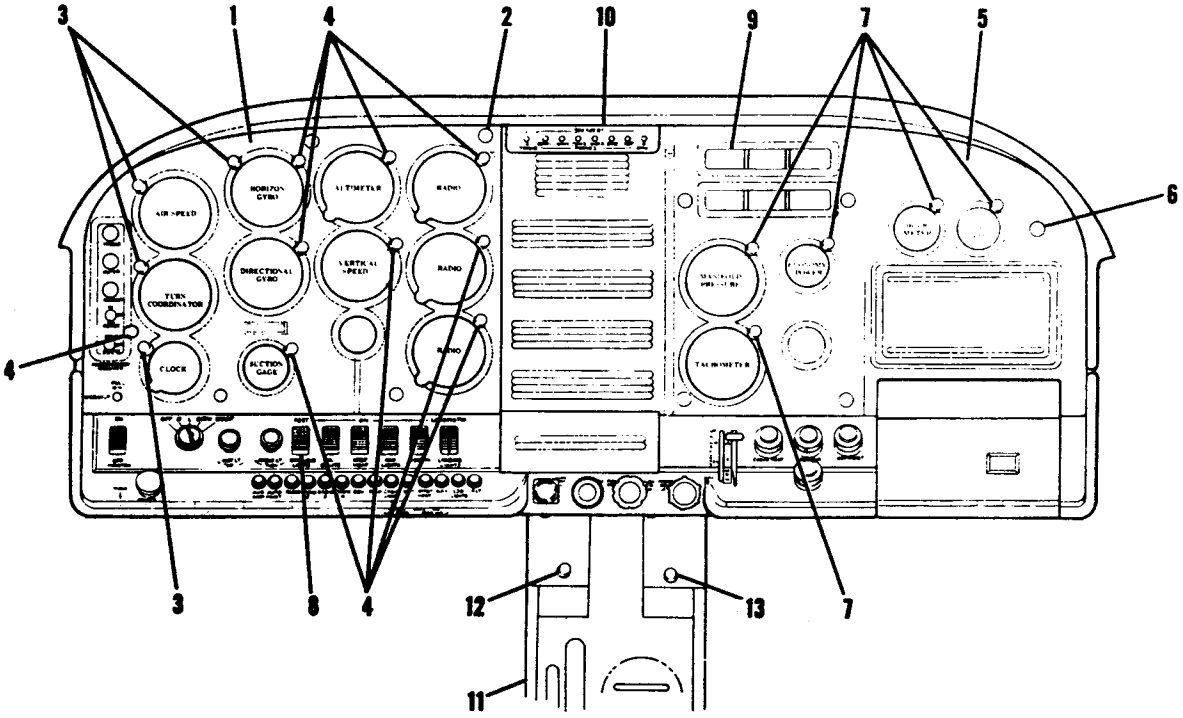

182 SERIAL 18259306 THRU 18260055


Figure 53H. Post Lighted Instrument Panel Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53H-		POST LIGHTED INSTRUMENT PANEL INSTALLATION ----------	NP	A
- 1	0713282-1 ¤	COVER ASSEMBLY-POST LIGHT LH ----------	1	
		ATTACHING PARTS		
- 2	NAS43DD4-16	SPACER ----------	3	
	S1898-1	FASTENER ----------	3	
		---*---		
- 3	S1899-2	LIGHT ASSEMBLY ----------	4	
- 4	S1899-1	LIGHT ASSEMBLY ----------	9	
	MS25237-330	BULB ----------	1	
- 5	0713866-9 ¤	COVER ASSEMBLY-POST LIGHT RH ----------	1	
		ATTACHING PARTS		
- 6	S1898-1	SPACER ----------	5	
	S1898-1	FASTENER ----------	5	
		---*---		
- 7	S1899-1	LIGHT ASSEMBLY ----------	5	
	MS25237-330	BULB ----------	1	
- 8	S1847-2-1	SWITCH ----------	1	
		ATTACHING PARTS		
	AN507-632R3	SCREW ----------	2	
		---*---		
	FRL5-2	RESISTOR LOCATED BEHIND SWITCH TRTA ----------	1	
- 9	S1894-1	BULB INSTRUMENT CLUSTER GE ----------	4	
	S1941-1	JACKET-BULB BLUE APMH ----------	4	
-10	0700737-10	LIGHT ASSEMBLY-RADIO SWITCH PANEL ----------	1	
	0700737-9	BASE ----------	1	
	0700737-12	COVER ASSEMBLY ----------	1	
		ATTACHING PARTS		
	S1021Z2-5	SCREW ----------	2	
		---*---		
	S1894-1	BULB GE ----------	3	
-11	1200756-7 ¤	PEDESTAL COVER ASSEMBLY-POST LIGHTED ----------	1	
-12	S1899-2	PANEL LIGHT-TAB MOUNT ----------	1	
	MS25237-330	BULB ----------	1	
-13	S1899-1	PANEL LIGHT-TAB MOUNT ----------	1	
	MS25237-330	BULB ----------	1	
	SEE FIG 94	MAP LIGHT INSTALLATION ----------	1	

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18259306 THRU 18260055

Instruments (Cont)

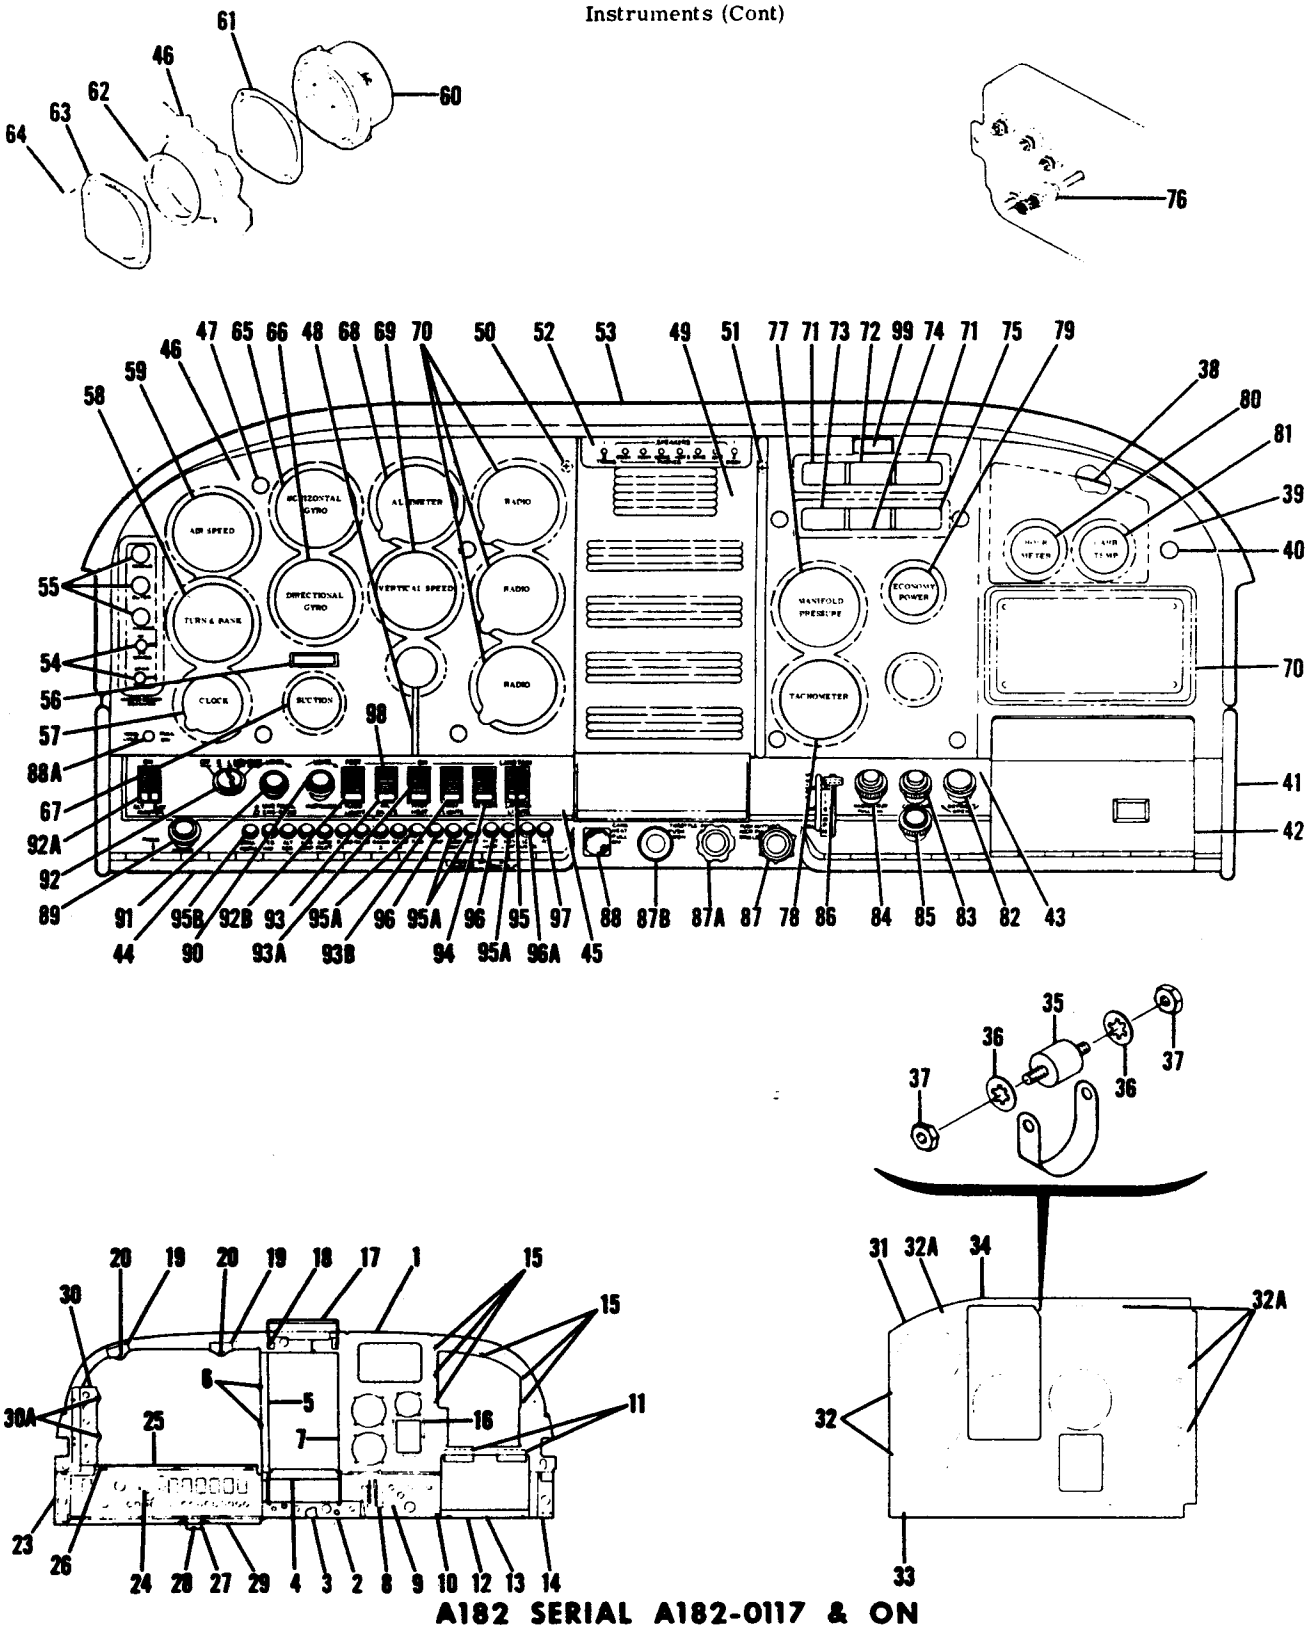

A182 SERIAL A182-0117 & ON
182 SERIAL 18260056 THRU 18260445

Figure 53J. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53J-			INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
- 1	0713940-200		PANEL ASSEMBLY-STATIONARY	1	
- 2	0713266-4		PANEL-LOWER CENTER	1	
- 3	0713775-1		REINFORCEMENT	1	
- 4	1213650-1		SUPPORT-INSTRUMENT PANEL	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	2	
	NAS446-4-3		NUT	2	
			---•---		
- 5	1213169-11		SUPPORT ASSEMBLY-INSTRUMENT PANEL	1	
- 6	MS21044N3		NUTPLATE	2	
- 7	1213151-1		SUPPORT-RADIO MOUNTING	1	
- 8	1262001-2		BRACKET-FLAP CONTROL MOUNTING	1	
- 9	0713770-10		PANEL-INSTRUMENT LOWER RH	1	
-10	1213145-1		BRACKET-MOUNTING	1	
-11	0713776-1		STOP	2	
-12	0713779-1		ANGLE ASSEMBLY-DOOR MOUNTING	1	
-13	NAS697A08		NUTPLATE	3	
	0713809-2		CLIP-WIRE RETAINER	2	
-14	0713864-1		BRACKET-BULKHEAD ADAPTER	1	
-15	NAS697A06L		NUTPLATE	6	
-16	NAS697A08		NUTPLATE	3	
-17	1213295-1		STIFFENER ASSEMBLY-EYE BROW	1	
-18	NAS697A06L		NUTPLATE	4	
-19	1213169-12		SUPPORT ASSEMBLY-INSTRUMENT PANEL	2	
-20	NAS698A3		NUTPLATE	1	
-21			DELETED, NOT PROCURABLE		
-22			DELETED, NOT PROCURABLE		
-23	0713783-3		BRACKET-BULKHEAD ADAPTER	1	
-24	0713856-6		BRACKET-RELAY MOUNTING	1	
-25	0713275-4		SWITCH PANEL ASSEMBLY-INSTRUMENT PANEL	1	
-26	MS21044N3		NUTPLATE	3	
-27	0713267-1		ATTACH ASSEMBLY-PARKING BRAKE	1	
-28	MS21044N3		NUTPLATE	1	
-29	1213062-4		SUPPORT-INSTRUMENT PANEL LWR LH	1	
-30	0713941-1		SUPPORT ASSEMBLY-INSTRUMENT PANEL LH	1	
	0713941-3	%	SUPPORT ASSEMBLY-INSTRUMENT PANEL LH	1	
-30A	NAS697A3		NUTPLATE	2	
-31	0713938-2		PANEL-LH REMOVABLE	1	
			ATTACHING PARTS		
-32	NAS221-6		SCREW	2	
-32A	NAS221-12		SCREW	4	
	NAS42HT6-19		SPACER	4	
-33	AN509-8R7		SCREW	3	
			---•---		
-34	1213170-1		PANEL-SHOCK MOUNTED	1	
			ATTACHING PARTS		
-35	1213645-1		SHOCK MOUNT	4	
-36	AN936A8		WASHER	8	
-37	AN34088		NUT	9	
			---•---		
-38	1213294-1		PANEL-REMOVABLE RH	1	
			ATTACHING PARTS		
	NAS601-5		SCREW	6	
			---•---		
-39	0713866-6	#	COVER-STATIONARY PANEL RH UPPER	1	
			ATTACHING PARTS		
-40	NAS43DD4-16		SPACER	5	
	S1898-3		FASTENER	5	
			---•---		
-41	0713524-2	#	COVER-LOWER INSTRUMENT PANEL RH	1	
-42	SEE FIG 55A		MAP COMPARTMENT INSTALLATION	1	
-43	1213192-18		PANEL ASSEMBLY-INSTRUMENT PANEL ELECTROLUMINESCENT	1	
-44	0713525-8	#	COVER ASSEMBLY-INSTRUMENT PANEL LOWER	1	
-45	1213307-9		PANEL ASSEMBLY-INSTRUMENT PANEL SWITCHES	1	
			ELECTROLUMINESCENT		
	SEE FIG 90		ELECTROLUMINESCENT POWER SUPPLY & DIMMING	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53J-46	0713278-7	¤	COVER ASSEMBLY-INSTRUMENT PANEL LH	1	
	0713278-11	¤	COVER ASSEMBLY-INSTRUMENT PANEL LH	1	
			ATTACHING PARTS		
-47	NAS430D4-16		SPACER	4	
	S1898-3		FASTENER	4	
			---*---		
-48	1213163-1		LAP SEAL BLACK	1	
	1213163-2		LAP SEAL GRAY	1	
-49	1213116-1	¤	COVER-RADIO CUTOUT	1	
			ATTACHING PARTS		
-50	S1021A6-6		SCREW	1	
-51	S1022A6-6		SCREW	3	
			---*---		
-52	1213005-2	¤	COVER-SWITCH MOUNTING BRACKET	1	
	0713934-1	¤	COVER-RADIO SWITCH PANEL LIGHT	1	
-53	1213173-2	¤	COVER-BROW	1	
			ATTACHING PARTS		
	1206003-9		RETAINER-BROW	1	
	S1021A4-68		SCREW	7	
			---*---		
	SEE FIG 90A		BROW LIGHTS INSTALLATION	1	
-54	CM2692-8H18		PLUG BUTTON	2	
-55	CM2692-15.5H18		PLUG BUTTON	3	
-56	1213004-1		RETAINER-AIRCRAFT IDENTIFICATION NUMBER	1	
			ATTACHING PARTS		
	S1022Z6-88		SCREW	2	
	NAS446-2-1		NUT	2	
			---*---		
	1205009-1		PLACARD-IDENTIFICATION NUMBER	1	
-57	S1317N2		CLOCK-ELECTRIC	1	
			ATTACHING PARTS		
	AN51586R12		SCREW	2	
	AN936B6B		WASHER	2	
			---*---		
-58	S1413N1		INDICATOR-TURN & BANK	1	
	C661003-0501		INDICATOR-TURN COORDINATOR	1	
			ATTACHING PARTS		
	AN51586R12		SCREW	4	
	AN936B6B		WASHER	4	
			---*---		
	TVA1315		CAPACITOR LOCATED ON BACK OF INSTRUMENT	1	
-59	C661010-0606		INDICATOR-AIRSPEED	1	
			ATTACHING PARTS		
	AN51586R12		SCREW	4	
	AN936B6B		WASHER	4	
			---*---		
			TRUE AIRSPEED INDICATOR INSTALLATION	NP	
-60	C661010-0213		INDICATOR-AIRSPEED	1	
-61	0700162-6		SPACER-TRUE AIR SPEED RING	1	
-62	0700189-2		RING ASSEMBLY-TRUE AIRSPEED	1	
-63	0700162-1		RETAINER ASSEMBLY-TRUE AIRSPEED	1	
			ATTACHING PARTS		
-64	AN51586R16		SCREW	4	
			---*---		
-65	C661001-0501	*	GYRO-HORIZONTAL	1	
	C661001-0502	*	GYRO-HORIZONTAL	1	
	C661001-0503	*	GYRO-HORIZONTAL	1	
	C661001-0504	*	GYRO-HORIZONTAL	1	
			ATTACHING PARTS		
	AN520-6R6		SCREW	4	
			---*---		
-66	C661002-0501	**	GYRO-DIRECTIONAL	1	
	C661002-0301	**	GYRO-DIRECTIONAL	1	
	C661002-0503	**	GYRO-DIRECTIONAL	1	
	C661002-0504	**	GYRO-DIRECTIONAL	1	
			ATTACHING PARTS		
	AN520-6R6		SCREW	3	
			---*---		
	SEE FIG 88B		GYRO-HORIZONTAL NAV-O-MATIC	1	
	SEE FIG 88B		GYRO-DIRECTIONAL NAV-O-MATIC	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53J-67	S1414N1	GAGE-SUCTION	1	
		ATTACHING PARTS		
	AN51586R12	SCREW	4	
		---*---		
-68	S1314N1	ALTIMETER 20,000 FT RECONDITIONED	1	
	C661011-0105	ALTIMETER 20,000 FT FEET & INCHES SKYLANE	1	
	C661011-0106	ALTIMETER 20,000 FT FEET & MILLIBARS	1	
-69	S1392N2	INDICATOR-RATE OF CLIMB	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	AN960-10L	WASHER	4	
	AN34086	NUT	4	
		---*---		
-70		RADIO INSTALLATIONS SEE CESSNA ELECTRONICS MANUAL	NP	
	C669502-0201	INSTRUMENT CLUSTER-LIGHTED	1	
		ATTACHING PARTS		
	NAS430D3-64	SPACER	2	
	AN5078832R24	SCREW	2	
	AN34088	NUT	2	
		---*---		
-71	441344	GAGE-FUEL SW	2	
-72	440437	AMMETER SW	1	
-73	G442702	GAGE-CYLINDER HEAD TEMP SW	1	
-74	442785	GAGE-OIL TEMP SW	1	
-75	G444627	GAGE-OIL PRESSURE SW	1	
-76	401627	WASHER-INSULATOR SW	1	
	S1372-1	SENDING UNIT-CYLINDER HEAD TEMP	1	
	110691	WIRE-CYLINDER HEAD TEMP GAGE TO SENDING UNIT 106 IN LG BULK ITEM	AR	
	811542	POTENTIOMETER SW	1	
	S1894-3	BULB-RED INSTRUMENT CLUSTER	4	
	S1894-1	BULB-CLEAR GE USED WITH POST LIGHTING	4	
	S1941-1	FILTER INSTRUMENT CLUSTER	4	
-77	S1301N1	GAGE-MANIFOLD PRESSURE	1	
		ATTACHING PARTS		
	AN51586R12	SCREW	4	
	AN936868	WASHER	4	
		---*---		
	0700099-84	LINE ASSEMBLY-MANIFOLD PRESSURE	1	
	AN816-2D	NIPPLE	1	
-78	S1305N8	TACHOMETER	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	AN936868	WASHER	4	
		---*---		
	S1605-2	SHAFT-TACHOMETER	1	
-79	C668501-0201	INDICATOR-ECONOMY POWER	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	MS20365B632C	NUT	4	
		---*---		
-80	C664501-0101	GAGE-HOURMETER	1	
		ATTACHING PARTS		
	AN515-6R6	SCREW	4	
	NAS679A06	NUT	4	
		---*---		
-81	S1311-1	GAGE-CARBURETOR AIR TEMPERATURE	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	MS20365B632C	NUT	4	
	C7000-632-7	NUT TIN	4	
		---*---		
-82	S1268-13	CONTROL ASSEMBLY-DEFROST	1	
-83	S1241-16	CONTROL ASSEMBLY-CABIN AIR	1	
-84	S1241-15	CONTROL ASSEMBLY-CABIN HEAT	1	
-85	0513039-7	LIGHTER ASSEMBLY-CIGAR	1	
	L4858-1	PLUG-HEATING CUE	1	
	S1982-1	KNOB ASSEMBLY-LIGHTER	1	
	60232-1	CIRCUIT BREAKER-LIGHTER ASSEMBLY CUE	1	
-86	SEE FIG 79B	FLAP CONTROL DETAIL INSTALLATION	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53J-87	S1234-5	CONTROL ASSEMBLY-MIXTURE	1	
-87A	S1223-7	CONTROL ASSEMBLY-PROPELLER	1	D
	C299506-0100	CONTROL ASSEMBLY-PROPELLER	1	E
	1213646-1	WASHER-PROPELLER CONTROL	1	
-87B	S1222-16	CONTROL ASSEMBLY-THROTTLE	1	B
	C299505-0201	CONTROL ASSEMBLY-THROTTLE	1	C
-88	S1230-10	CONTROL ASSEMBLY-CARBURETOR HEAT	1	
-88A	SEE FIG 76B	WING LEVELER INSTALLATION	1	
-89	C291502-0101	CONTROL ASSEMBLY-ENGINE PRIMER	1	
	S1752-1	KNOB-PRIMER CONTROL	1	
-90	S1980-1	KNOB ASSEMBLY-INSTRUMENT LIGHTS	1	
	S1904-3	VARIABLE RESISTOR	1	
	47 OHM,1/2W,10%	RESISTOR	1	
-91	S1995-1	KNOB ASSEMBLY-RADIO LIGHTS	1	
		ATTACHING PARTS		
	AN565B2H3	SCREW	1	
	AN565B2-3	SCREW ALT	1	
		---*---		
	S2008-1	VARIABLE RESISTOR-TANDEM	1	
-92	C292501-0102	KIT-IGNITION SWITCH	1	
-92A	S1994-1-1	SWITCH-MASTER	1	
		ATTACHING PARTS		
	AN5078632R4	SCREW	2	
		---*---		
	0770719-1	DIODE ASSEMBLY-MASTER SWITCH	1	
-92B	S1847-2-2	SWITCH-CONSOLE LIGHTS	1	
	1913035-1 ¤	COVER ASSEMBLY-SWITCH CUTOUT USE WHEN OPTIONAL SWITCH IS NOT INSTALLED	1	
-93	S1845-2-2	SWITCH-OIL DILUTE	1	
	1913035-1 ¤	COVER ASSEMBLY-SWITCH CUTOUT USE WHEN OPTIONAL SWITCH IS NOT INSTALLED	1	
-93A	S1845-1-2	SWITCH-PITOT HEAT	1	
-93B	S1845-1-2	SWITCH-NAVIGATION LIGHTS	1	
-94	S1845-1-2	SWITCH-FLASHING BEACON	1	
	1913035-1 ¤	COVER ASSEMBLY-SWITCH CUTOUT USE WHEN OPTIONAL SWITCH IS NOT INSTALLED	1	
-95	S1846-1-3	SWITCH-LANDING LIGHTS	1	
-95A	S1360-10	CIRCUIT BREAKER 10 AMP	4	
-95B	S1360-5	CIRCUIT BREAKER 5 AMP	3	
-96	S1360-15	CIRCUIT BREAKER 15 AMP	2	
-96A	S1360-20	CIRCUIT BREAKER 20 AMP	1	
-97	S1596-60	CIRCUIT BREAKER 60 AMP	1	
	0713854-1	BUS BAR-CENTER	1	
	0713854-2	BUS BAR-RH	1	
	0713854-3	BUS BAR-LH	1	
-98	S1843-1	BEZEL-SWITCH MOUNTING	7	
-99	0505020-2	PLACARD-MASTER SWITCH	1	

NOTE. *THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.


NOTE. **THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.

NOTE. %THIS PART IS USED WHEN NARCO MARK 12B IS INSTALLED WITH VOA-50M INDICATOR.

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XI.

A---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 & ON
B---182 SERIAL 18260056 THRU 18260301
C---182 SERIAL 18260302 THRU 18260445
A182 SERIAL A182-0117 & ON
D---182 SERIAL 18260056 THRU 18260417
E---182 SERIAL 18260418 THRU 18260445
A182 SERIAL A182-0117 & ON

Equipment (Cont)

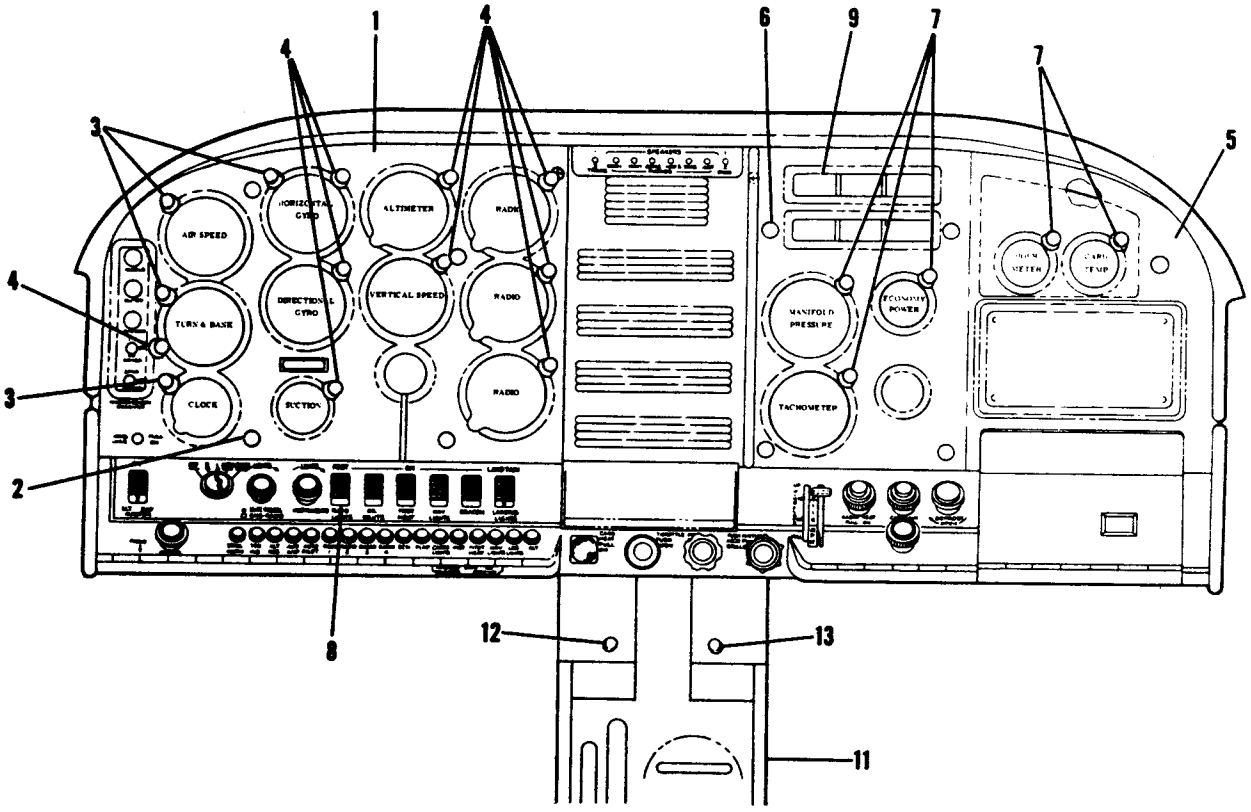

A182 SERIAL A182-0117 & ON
182 SERIAL 13260056 THRU 18260445

Figure 53K. Post Lighted Instrument Panel Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53K-		POST LIGHTED INSTRUMENT PANEL INSTALLATION	NP	A
- 1	0713282-2 ¤	COVER ASSEMBLY-POST LIGHT LH BLACK	1	
	0713282-3 ¤	COVER ASSEMBLY-POST LIGHT LH GREY	1	
	0713282-4 %¤	COVER ASSEMBLY-POST LIGHT LH BLACK	1	
	0713282-5 %¤	COVER ASSEMBLY-POST LIGHT LH GRAY	1	
		ATTACHING PARTS		
- 2	S1898-1	FASTENER BLACK	4	
	S1898-3	FASTENER GREY	4	
	NAS43DD4-16	SPACER	4	
		---*---		
- 3	S1899-2	LIGHT ASSEMBLY BLACK	4	
	S1899-2G	LIGHT ASSEMBLY GREY	4	
- 4	S1899-1	LIGHT ASSEMBLY BLACK	9	
	S1899-1G	LIGHT ASSEMBLY GREY	9	
	MS25237-330	BULB	1	
- 5	0713866-9 ¤	COVER ASSEMBLY-POST LIGHT RH BLACK	1	
	0713866-10 ¤	COVER ASSEMBLY-POST LIGHT RH GREY	1	
		ATTACHING PARTS		
- 6	S1898-1	FASTENER BLACK	5	
	S1898-3	FASTENER GREY	5	
	NAS43DD4-16	SPACER	5	
		---*---		
- 7	S1899-1	LIGHT ASSEMBLY BLACK	5	
	S1899-1G	LIGHT ASSEMBLY GREY	5	
- 8	S1847-2-2	SWITCH-POST LIGHTS	1	
	FRL5-2	RESISTOR LOCATED BEHIND SWITCH TRTA	1	
- 9	S1894-1	BULB INSTRUMENT CLUSTER GE	4	
	S1941-1	JACKET-BULB BLUE APMH	4	
-10	1200756-7 ¤	PEDESTAL COVER ASSEMBLY-POST LIGHTED	1	
	S1894-1	BULB GE	3	
-11	S1899-1	LIGHT ASSEMBLY	1	
-12	S1899-2	LIGHT ASSEMBLY	1	
	SEE FIG 74B	MAPLIGHT ASSEMBLY	1	

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

NOTE. %THIS PART IS USED WHEN NARCO MARK 12B IS INSTALLED WITH VOA-50M INDICATOR.

A---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 & ON

Instruments (Cont)

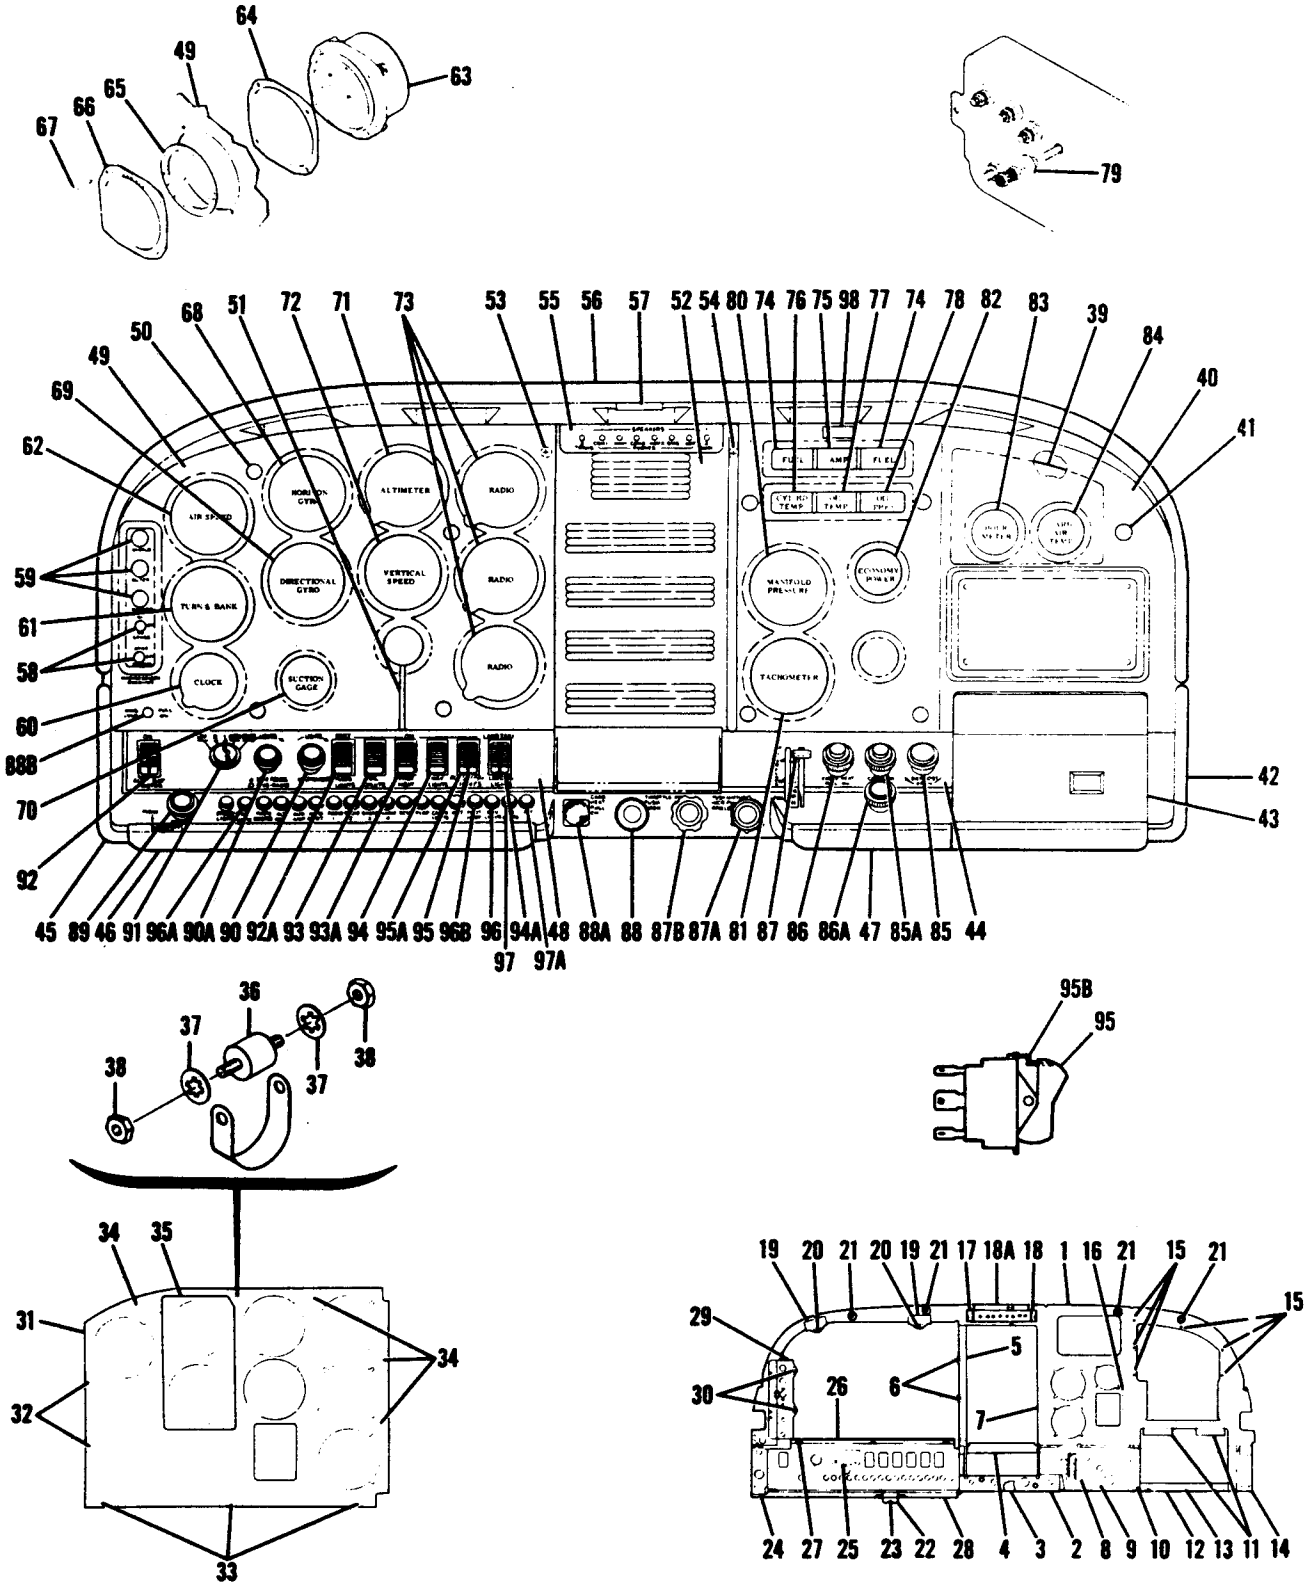

182 SERIAL 18260446 THRU 18260825

Figure 53L. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53L-			INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
- 1	0713940-201		PANEL ASSEMBLY-STATIONARY	1	
- 2	0713266-4		PANEL-LOWER CENTER	1	
- 3	0713775-1		REINFORCEMENT	1	
- 4	1213650-1		SUPPORT-INSTRUMENT PANEL	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	2	
	NAS446-4-3		NUT	2	
			---*---		
- 5	1213169-11		SUPPORT ASSEMBLY-INSTRUMENT PANEL	1	
- 6	MS21044N3		NUTPLATE	2	
- 7	1213151-1		SUPPORT-RADIO MOUNTING	1	
- 8	1262001-2		BRACKET-FLAP CONTROL MOUNTING	1	
- 9	0713770-11		PANEL-INSTRUMENT LOWER RH	1	
-10	1213145-1		BRACKET-MOUNTING	1	
-11	0713776-1		STOP	2	
-12	0713779-1		ANGLE ASSEMBLY-DOOR MOUNTING	1	
-13	NAS697A08		NUTPLATE	3	
	0713809-2		CLIP-WIRE RETAINER	2	
-14	0713864-1		BRACKET-BULKHEAD ADAPTOR	1	
-15	NAS697A06L		NUTPLATE	6	
-16	NAS697A08		NUTPLATE	3	
-17	1213065-1		BRACKET ASSEMBLY-RADIO SWITCH LH	1	
-18	1213065-2		BRACKET ASSEMBLY-RADIO SWITCH RH	1	
	NAS697A06L		NUTPLATE	2	
-18A	1213064-1		BRACKET ASSEMBLY-SWITCH MOUNTING	1	
-19	1213169-12		SUPPORT ASSEMBLY-INSTRUMENT PANEL	2	
-20	NAS698A3		NUTPLATE	1	
-21	NAS557-3A		GROMMET	4	
-22	0713267-1		ATTACH ASSEMBLY-PARKING BRAKE	1	
-23	MS21044N3		NUTPLATE	1	
-24	0713783-3		BRACKET-BULKHEAD ADAPTER	1	
-25	1270707-2		BRACKET	1	
-26	0713275-4		SWITCH PANEL ASSEMBLY	1	
-27	MS21044N3		NUTPLATE	3	
-28	1213062-4		SUPPORT-INSTRUMENT PANEL LOWER LH	1	
-29	0713941-5		SUPPORT ASSEMBLY-INSTRUMENT PANEL LH	1	
	0713931-7	%	SUPPORT ASSEMBLY-INSTRUMENT PANEL LH	1	
-30	NAS697A3		NUTPLATE	2	
-31	0713938-2		PANEL-LH REMOVABLE	1	
			ATTACHING PARTS		
-32	NAS221-6		SCREW	2	
-33	AN509-8R7		SCREW	3	
-34	NAS221-12		SCREW	4	
	NAS42HT6-19		SPACER	4	
			---*---		
-35	1213170-1		PANEL-SHOCK MOUNTED	1	
			ATTACHING PARTS		
-36	1213645-1		SHOCK MOUNT	4	
-37	AN936A8		WASHER	8	
-38	AN340B8		NUT	8	
			---*---		
-39	1213294-1		PANEL-REMOVABLE RH	1	
			ATTACHING PARTS		
	NAS601-5		SCREW	6	
			---*---		
-40	0713866-6	#	COVER-STATIONARY PANEL RH UPPER	1	
			ATTACHING PARTS		
-41	S1898-3		FASTENER GRAY	5	
	S1898-1		FASTENER BLACK	5	
	NAS43DD4-16		SPACER	5	
			---*---		
-42	0713524-3	#	COVER-LOWER INSTRUMENT PANEL RH	1	
-43	SEE FIG 55A		MAP COMPARTMENT INSTALLATION	1	
-44	0713954-1		PANEL ASSEMBLY ELECTROLUMINESCENT MEU 1213363-6	1	
	1213363-6		PANEL ASSEMBLY ELECTROLUMINESCENT	1	
-45	0713525-11	#	COVER ASSEMBLY-INSTRUMENT PANEL LOWER	1	
-46	0713955-1		KNEE BUMPER-LH	1	
-47	0713955-2		KNEE BUMPER-INBD RH	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
53L-48	1213314-9	PANEL ASSEMBLY-SWITCH ELECTROLUMINESCENT	1	
	SEE FIG 90	POWER SUPPLY & DIMMING-ELECTROLUMINESCENT	1	
-49	0713278-13 ¤	COVER ASSEMBLY-INSTRUMENT PANEL LH	1	
	0713278-17 %¤	COVER ASSEMBLY-INSTRUMENT PANEL LH	1	
		ATTACHING PARTS		
-50	NAS43DD4-16	SPACER	4	
	S1898-3	FASTENER GRAY	4	
	S1898-1	FASTENER BLACK	4	
		---*---		
-51	1213163-2	LAP SEAL GRAY	1	
	1213163-1	LAP SEAL BLACK	1	
-52	1213116-1 ¤	COVER-RADIO CUTOUT	1	
		ATTACHING PARTS		
-53	S1021A6-6	SCREW	1	
-54	S1022A6-6	SCREW	3	
		---*---		
-55	1213005-5 ¤	COVER-SWITCH MOUNTING BRACKET	1	
-56	1213320-1	GLARE SHIELD ASSEMBLY	1	
-57	SEE FIG 2	PLACARD-IDENTIFICATION NUMBER	1	
	SEE FIG 90A	BROW LIGHTS INSTALLATION	1	
-58	CM2692-8H18	PLUG BUTTON	2	
-59	CM2692-15.5H18	PLUG BUTTON	3	
-60	S1317N2	CLOCK-ELECTRIC	1	
		ATTACHING PARTS		
	AN51586R12	SCREW	2	
	AN936B6B	WASHER	2	
		---*---		
-61	S1413N1	INDICATOR-TURN & BANK	1	
	C661003-0501	INDICATOR-TURN COORDINATOR	1	
		ATTACHING PARTS		
	AN51586R12	SCREW	2	
	AN936B6B	WASHER	2	
		---*---		
	TVA1315	CAPACITOR LOCATED ON BACK OF INSTRUMENT	1	
-62	C661010-0606	INDICATOR-AIRSPEED	1	
		ATTACHING PARTS		
	AN51586R12	SCREW	4	
	AN936B6B	WASHER	4	
		---*---		
		TRUE AIRSPEED INDICATOR INSTALLATION	NP	
-63	C661010-0213	INDICATOR-AIRSPEED	1	
-64	0700162-6	SPACER .071 THICKNESS	1	
	0700162-4	SPACER .063 THICKNESS	AR	
	0700162-3	SPACER .051 THICKNESS	AR	
	0700162-7	SPACER .040 THICKNESS	AR	
-65	0700189-2	RING ASSEMBLY TRUE AIRSPEED	1	
-66	0700162-1	RETAINER ASSEMBLY TRUE AIRSPEED	1	
		ATTACHING PARTS		
-67	AN51586R16	SCREW	4	
		---*---		
-68	C661001-0505 *	GYRO-HORIZONTAL	1	
	C661001-0502 *	GYRO-HORIZONTAL ALTERNATE	1	
	C661001-0503 *	GYRO-HORIZONTAL ALTERNATE	1	
	C661001-0504 *	GYRO-HORIZONTAL ALTERNATE	1	
		ATTACHING PARTS		
	AN520-6R6	SCREW	4	
		---*---		
-69	C661002-0505 **	GYRO-DIRECTIONAL	1	
	C661002-0301 **	GYRO-DIRECTIONAL ALTERNATE	1	
	C661002-0506 **	GYRO-DIRECTIONAL ALTERNATE	1	
	C661002-0504 **	GYRO-DIRECTIONAL ALTERNATE	1	
		ATTACHING PARTS		
	AN520-6R6	SCREW	3	
		---*---		
	SEE FIG 88C	GYRO-DIRECTIONAL NAV-O-MATIC	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53L-70	S1414N1	GAGE-SUCTION	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
		---*---		
-71	S1314N1	ALTIMETER 20,000 FT RECONDITIONED	1	
	C661011-0105	ALTIMETER 20,000 FT FEET & INCHES	1	
	C661011-0106	ALTIMETER 20,000 FT FEET & MILLIBARS	1	
-72	S1392N1	INDICATOR-RATE OF CLIMB	1	
	S1392N2	INDICATOR-RATE OF CLIMB ALTERNATE	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	AN960-10L	WASHER	4	
	AN340B6	NUT	4	
		---*---		
-73		RADIO INSTALLATIONS SEE ELECTRONICS MANUAL	NP	
	C669502-0201	INSTRUMENT CLUSTER-LIGHTED	1	
		ATTACHING PARTS		
	NAS43DD3-64	SPACER	2	
	AN5078832R24	SCREW	2	
	AN34088	NUT	2	
		---*---		
-74	441344	GAGE-FUEL SW	2	
-75	440437	AMMETER SW	1	
-76	G442702	GAGE-CYLINDER HEAD TEMP SW	1	
-77	442785	GAGE-OIL TEMP SW	1	
-78	G444627	GAGE-OIL PRESSURE SW	1	
-79	401627	WASHER-INSULATOR SW	1	
	S1372-1	SENDING UNIT-CYLINDER HEAD TEMP	1	
	110691	WIRE-CYLINDER HEAD TEMP GAGE TO SENDING UNIT 106.0 IN LG BULK ITEM	AR	
	811542	POTENTIOMETER SW	1	
	S1894-3	BULB-RED INSTRUMENT CLUSTER	4	
	S1894-1	BULB-CLEAR GE USED WITH POST LIGHTING	4	
	S1941-1	FILTER INSTRUMENT CLUSTER	4	
-80	S1301N1	GAGE-MANIFOLD PRESSURE	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	AN936B6B	WASHER	4	
		---*---		
	0700099-84	LINE ASSEMBLY-MANIFOLD PRESSURE	1	
	AN816-2D	NIPPLE	1	
-81	S1305N8	TACHOMETER	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
	AN936B6B	WASHER	4	
		---*---		
	S1605-2	SHAFT-TACHOMETER	1	
-82	C668501-0201	INDICATOR-ECONOMY POWER	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	MS20365B632C	NUT	4	
		---*---		
-83	C664501-0101	GAGE-HOURMETER	1	
		ATTACHING PARTS		
	AN5078632-6	SCREW	4	
	NAS679A06	NUT	4	
		---*---		
-84	S1311-1	GAGE-CARBURETOR AIR TEMP	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	MS20365B632C	NUT	4	
	C7000-632-7	NUT TIN	4	
		---*---		
-85	S1268-14	CONTROL ASSEMBLY-DEFROST	1	
-85A	S1241-36	CONTROL ASSEMBLY-CABIN AIR	1	
-86	S1241-37	CONTROL ASSEMBLY-CABIN HEAT	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53L-86A	0513039-7	LIGHTER ASSEMBLY-CIGAR	1	
	L4858-1	PLUG-HEATING CUE	1	
	S1982-1	KNOB ASSEMBLY-LIGHTER	1	
	60232-1	CIRCUIT BREAKER-LIGHTER ASSEMBLY CUE	1	
-87	SEE FIG 79B	FLAP CONTROL DETAIL INSTALLATION	1	
-87A	S1234-5	CONTROL ASSEMBLY-MIXTURE	1	
-87B	C299506-0102	CONTROL ASSEMBLY-PROPELLER	1	
	1213646-1	WASHER-PROPELLER CONTROL	1	
-88	C299505-0201	CONTROL ASSEMBLY-THROTTLE	1	
-88A	S1230-10	CONTROL ASSEMBLY-CARBURETOR HEAT	1	
-88B	SEE FIG 76B	WING LEVELER INSTALLAION	1	
-89	C291502-0103	PRIMER ASSEMBLY-ENGINE	1	
	S1974-1	KNOB ASSEMBLY-PRIMER	1	
-90	S1980-1	KNOB ASSEMBLY-INSTRUMENT PANEL	1	
	S1904-3	RESISTOR-VARIABLE	1	
	47 OHM,1/2W,10%	RESISTOR	1	
-90A	S1995-4	KNOB ASSEMBLY-RADIO LIGHTS	1	
		ATTACHING PARTS		
	AN565B2H3	SCREW	1	
	AN565B2-3	SCREW ALT	1	
		---*---		
	S2091-1	RESISTOR-VARIABLE TANDEM	1	
-91	C292501-0102	KIT-IGNITION SWITCH	1	
-92	S1994-1-1	SWITCH-MASTER	1	
	0770719-2	DIODE ASSEMBLY-MASTER SWITCH	1	
-92A	S1847-2-2	SWITCH-CONSOLE LIGHTS	1	
-93	S1845-2-2	SWITCH-OIL DILUTE	1	
-93A	S1845-1-2	SWITCH-PITOT HEAT	1	
-94	S1845-1-2	SWITCH-NAVIGATION LIGHTS	1	
-94A	S1846-2-3	SWITCH-LANDING LIGHTS	1	
-95	S1846-1-3	SWITCH-BEACON & STROBE LIGHT	1	
-95A	S1843-1	BEZEL-SWITCH MOUNTING	7	
	1913035-1	COVER ASSEMBLY-SWITCH CUTOUT USED WHEN OPTIONAL SWITCHES ARE NOT INSTALLED	3	
-95B	1270695-1	CLIP RH-LOCKING	1	
	1270695-2	CLIP LH-LOCKING	1	
-96	S1360-10	CIRCUIT BREAKER 10 AMP	5	
-96A	S1360-5	CIRCUIT BREAKER 5 AMP	3	
-96B	S1360-15	CIRCUIT BREAKER 15 AMP	2	
-97	S1360-20	CIRCUIT BREAKER 20 AMP	1	
-97A	S1596-60	CIRCUIT BREAKER 60 AMP	1	
	0713854-1	BUS BAR-CENTER	1	
	0713854-2	BUS BAR-RH	1	
	0713854-4	BUS BAR-LH	1	
-98	0505020-2	PLACARD-MASTER SWITCH	1	

NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XI.


NOTE. *THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.

NOTE. **THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.

NOTE. %THESE PARTS USED ONLY ON AIRPLANES EQUIPPED WITH NARCO MK 12B WITH VOA-50M RADIO INSTALLATION.

A---182 SERIAL 18260446 THRU 18260825

Equipment (Cont)

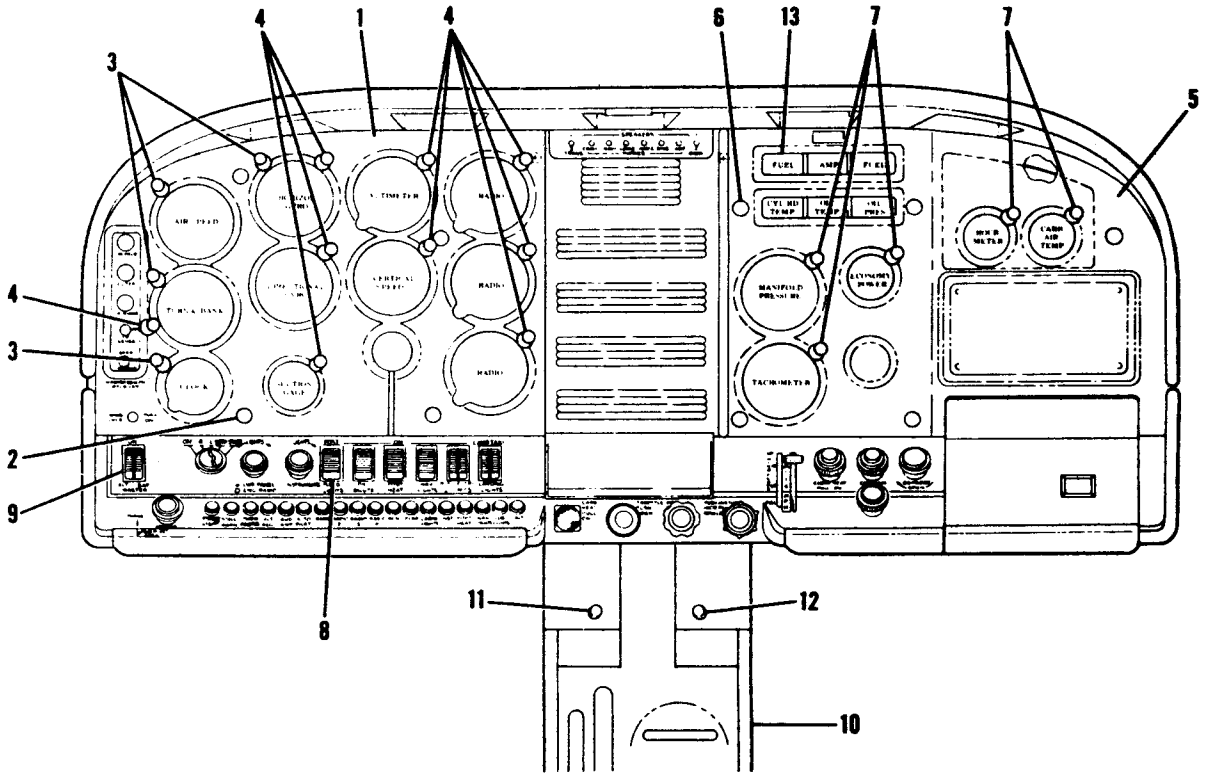

182 SERIAL 18260446 THRU 18260825

Figure 53M. Post Lighted Instrument Panel Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53M-		POST LIGHTED INSTRUMENT PANEL INSTALLATION	NP	A
- 1	0713282-6 ¤	COVER ASSEMBLY-POST LIGHT LH BLACK	1	
	0713282-7 ¤	COVER ASSEMBLY-POST LIGHT LH GRAY	1	
	0713282-8 %¤	COVER ASSEMBLY-POST LIGHT LH BLACK	1	
	0713282-9 %¤	COVER ASSEMBLY-POST LIGHT LH GRAY	1	
		ATTACHING PARTS		
- 2	S1898-1	FASTENER BLACK	4	
	S1898-3	FASTENER GRAY	4	
	NAS43DD4-16	SPACER	4	
		---*---		
- 3	S1899-2	LIGHT ASSEMBLY BLACK	4	
	S1899-2G	LIGHT ASSEMBLY GRAY	4	
- 4	S1899-1	LIGHT ASSEMBLY BLACK	9	
	S1899-1G	LIGHT ASSEMBLY GRAY	9	
	MS25237-330	BULB	1	
- 5	0713866-9 ¤	COVER ASSEMBLY-POST LIGHT RH BLACK	1	
	0713866-10 ¤	COVER ASSEMBLY-POST LIGHT RH GRAY	1	
		ATTACHING PARTS		
- 6	S1898-1	FASTENER BLACK	5	
	S1898-3	FASTENER GRAY	5	
	NAS43DD4-16	SPACER	5	
		---*---		
- 7	S1899-1	LIGHT ASSEMBLY BLACK	5	
	S1899-1G	LIGHT ASSEMBLY GRAY	5	
- 8	S1847-2-2	SWITCH-POST LIGHTS	1	
- 9	S1843-1	BEZEL-SWITCH MOUNTING	1	
	FRL5-2	RESISTOR LOCATED BEHIND SWITCH TRTA	1	
-10	1200756-7 ¤	PEDESTAL COVER ASSEMBLY-POST LIGHTED	1	
-11	S1899-1	LIGHT ASSEMBLY	1	
-12	S1899-2	LIGHT ASSEMBLY	1	
	SEE FIG 74B	MAPLIGHT INSTALLATION	1	
-13	S1894-1	BULB INSTRUMENT CLUSTER GE	4	
	S1941-1	JACKET-BULB BLUE APMH	4	

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

NOTE. %THESE PARTS USED ONLY ON AIRPLANES EQUIPPED WITH NARCO MK12B WITH VOA-50M RADIO INSTALLATION.

A---182 SERIAL 18260446 THRU 18260825

Instruments (Cont)

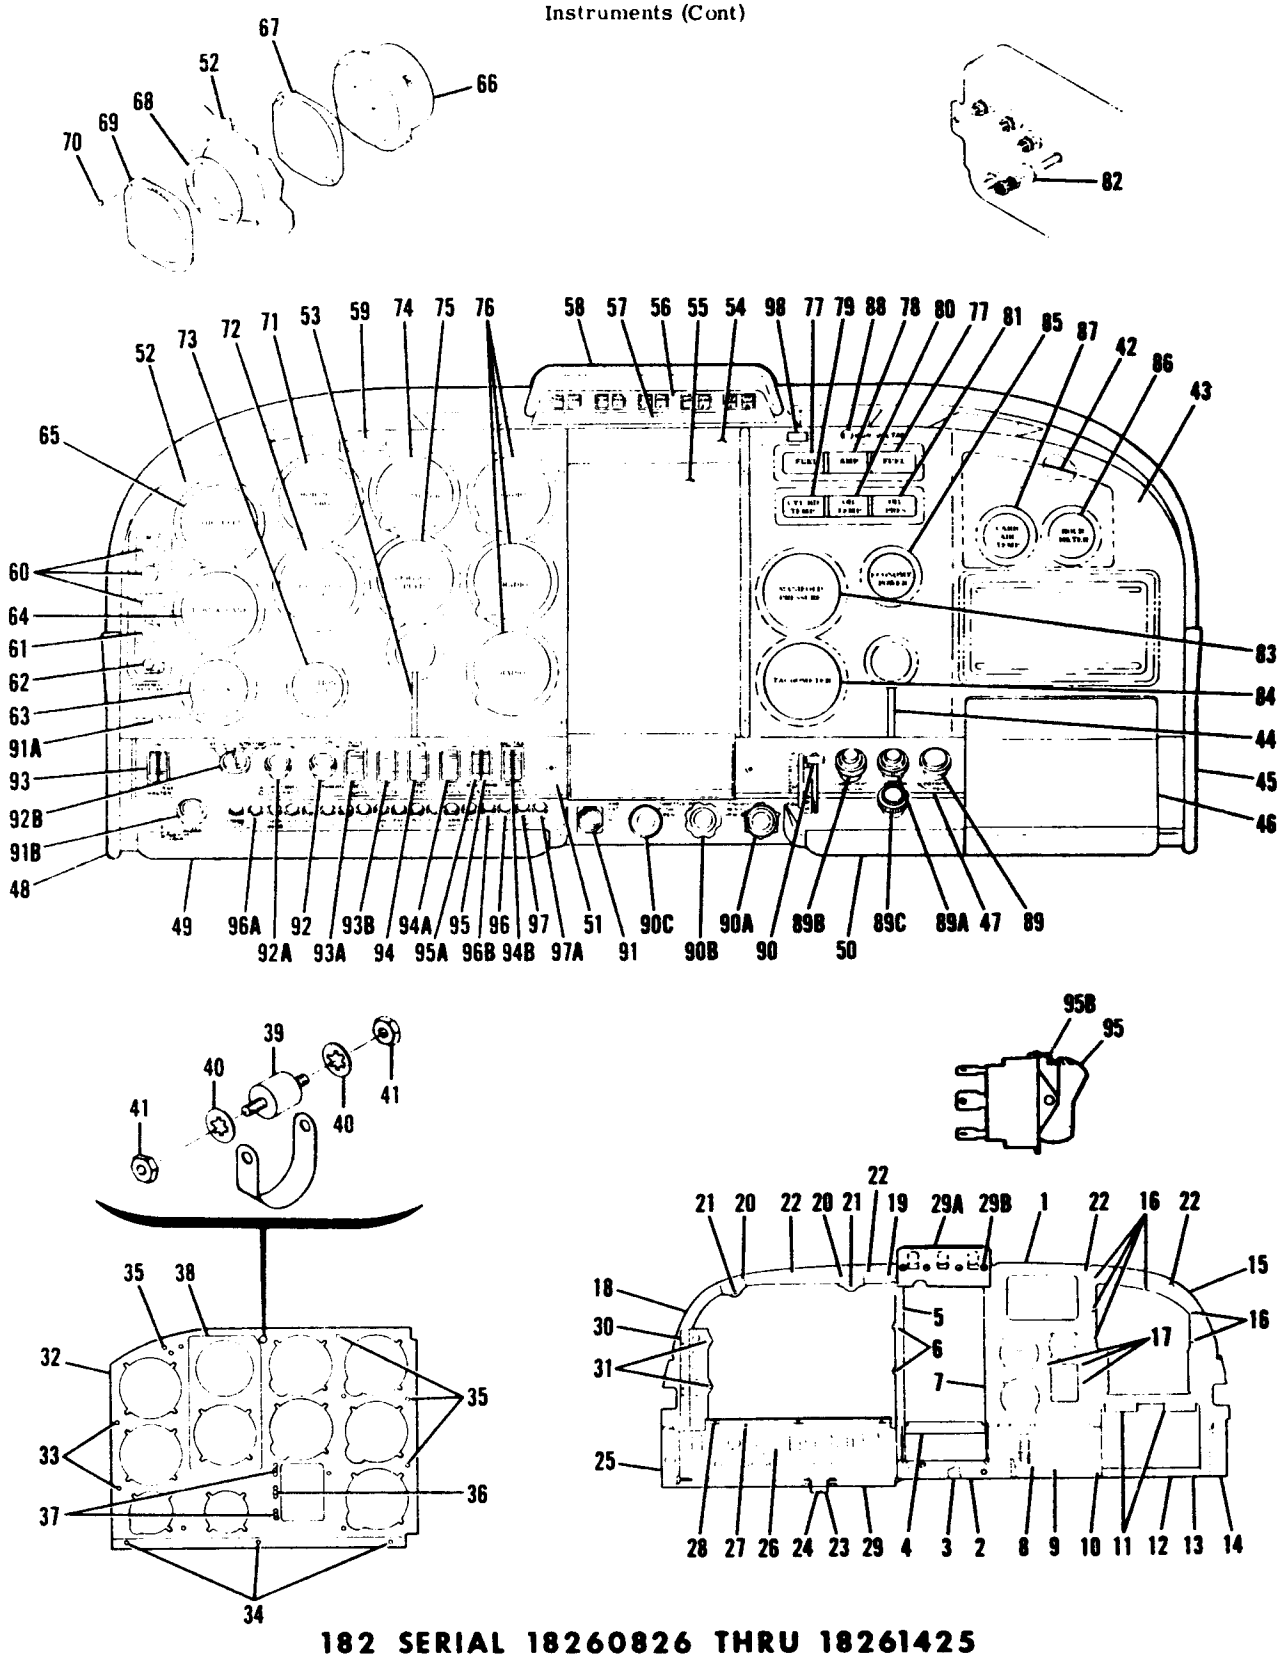

182 SERIAL 18260826 THRU 18261425

Figure 53N. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
			1 2 3 4 5 6 7		
53N-			INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
- 1	0713940-3		PANEL ASSEMBLY-STATIONARY	1	
- 2	0713266-4		PANEL-LOWER CENTER	1	
- 3	0713775-1		REINFORCEMENT	1	
- 4	1213650-1		SUPPORT-INSTRUMENT PANEL	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	2	
	NAS446-4-3		NUT	2	
			---•---		
- 5	1213169-11		SUPPORT ASSEMBLY-INSTRUMENT PANEL	1	
- 6	MS21044N3		NUTPLATE	2	
- 7	1213151-1		SUPPORT-RADIO MOUNTING	1	
- 8	1262001-3		BRACKET-FLAP CONTROL MOUNTING	1	
- 9	0713770-11		PANEL-INSTRUMENT LOWER RH	1	
-10	1213145-1		BRACKET-MOUNTING	1	
-11	0713776-1		STOP	2	
-12	0713779-1		ANGLE ASSEMBLY-DOOR MOUNTING	1	
-13	NAS697A08		NUTPLATE	3	
	0713809-1		CLIP-WIRE RETAINER	2	
-14	0713864-1		BRACKET-BULKHEAD ADAPTOR	1	
-15	0713939-3		PANEL ASSEMBLY RH-BULKHEAD	1	
-16	NAS697A06L		NUTPLATE	6	
-17	NAS697A08		NUTPLATE	3	
-18	0713937-3		BULKHEAD ASSEMBLY LH	1	
-19	1213212-1		BRACKET-SUPPORT	1	
-20	1213169-12		SUPPORT ASSEMBLY-REMOVABLE PANEL	2	
-21	NAS698A3		NUTPLATE	1	
-22	NAS557-4A		GROMMET	4	
-23	0713267-1		ATTACH ASSEMBLY-PARKING BRAKE	1	
-24	NAS697A3		NUTPLATE	1	
-25	0713783-3		BRACKET-BULKHEAD ADAPTOR	1	
-26	1270707-2		BRACKET	1	
-27	0713275-4		SWITCH PANEL ASSEMBLY	1	
-28	NAS697A08		NUTPLATE	3	
-29	1213062-7		SUPPORT ASSEMBLY-LOWER LH INSTRUMENT PANEL	1	
	NAS696A3K		NUTPLATE	1	
-29A	1213677-1		SUPPORT-EYEBROW CENTER	1	
			ATTACHING PARTS		
-29B	S1021Z8-6		SCREW	4	
			---•---		
-30	0713941-5		SUPPORT ASSEMBLY-INSTRUMENT PANEL LH	1	
-31	NAS697A3		NUTPLATE	2	
-32	0713938-3		PANEL ASSEMBLY-LH REMOVABLE	1	
			ATTACHING PARTS		
-33	NAS221-6		SCREW	2	
-34	AN509-8R7		SCREW	3	
-35	NAS221-12		SCREW	4	
	NAS42HT6-19		SPACER	4	
			---•---		
-36	NAS697A08		NUTPLATE	1	
-37	NAS696A08		NUTPLATE	2	
-38	1213170-1		PANEL-SHOCK MOUNTED	1	
			ATTACHING PARTS		
-39	1213645-1		SHOCK MOUNT	4	
-40	AN936A8		WASHER	8	
-41	AN340B8		NUT	8	
			---•---		
-42	1213294-2		PANEL-REMOVABLE RH	1	
			ATTACHING PARTS		
	NAS601-5		SCREW	6	
			---•---		
-43	0713319-1	H	COVER ASSEMBLY-STATIONARY PANEL RH UPPER	1	
-44	1213163-2		LAP SEAL GRAY	1	
	1213163-1		LAP SEAL BLACK	1	
-45	0713524-3	H	COVER-LOWER INSTRUMENT PANEL RH	1	
-46	SEE FIG 55A		MAP COMPARTMENT INSTALLATION	1	
-47	0713954-1		PANEL ASSEMBLY ELECTROLUMINESCENT WEU 1213363-6	1	B
	1213363-6		PANEL ASSEMBLY ELECTROLUMINESCENT	1	C
-48	0713525-11	H	COVER ASSEMBLY-INSTRUMENT PANEL LOWER	1	
-49	0713955-1		KNEE BUMPER-LH	1	
-50	0713955-2		KNEE BUMPER-INBD RH	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
53N-51	1213314-9		PANEL ASSEMBLY-SWITCH ELECTROLUMINESCENT WEU 1213364-3-	1	B
	1213364-3		PANEL ASSEMBLY-SWITCH ELECTROLUMINESCENT	1	C
	SEE FIG 90		POWER SUPPLY & DIMMING-ELECTROLUMINESCENT	1	
-52	0713318-1	¤	COVER ASSEMBLY INSTRUMENT PANEL LH	1	
-53	1213335-1		LAP SEAL GRAY	1	
	1213335-2		LAP SEAL BLACK	1	
-54	1213338-4	¤	COVER-RADIO CUTOUT UPPER WEU 1213338-5	1	D
	1213338-5	¤	COVER-RADIO CUTOUT UPPER	1	E
-55	1213338-1	¤	COVER ASSEMBLY-RADIO CUTOUT LOWER	1	
			ATTACHING PARTS		
	S1021A4-6		SCREW	6	
			---*---		
	1213328-1		BRACKET-SELECTOR SWITCH MOUNTING	1	
			ATTACHING PARTS		
	S1021Z8-8		SCREW	4	
			---*---		
-56	1213329-1	¤	COVER-SELECTOR SWITCH BRACKET	1	
			ATTACHING PARTS		
-57	S1021A6-6		SCREW	1	
			---*---		
-58	1213330-3		GLARE SHIELD ASSEMBLY	1	
			ATTACHING PARTS		
	S1023A6-12B		SCREW	2	
	S1023A6-16B		SCREW	8	
	S1067B1		WASHER	10	
	NAS43DD1-10		SPACER	2	
	NAS43DD1-16		SPACER	2	
	NAS43DD1-21		SPACER	6	
			---*---		
	SEE FIG 90A		LIGHT INSTALLATION-GLARE SHIELD	1	
-59	1213004-2		RETAINER-AIRCRAFT IDENTIFICATION NUMBER	1	
			ATTACHING PARTS		
	S1022Z6-8		SCREW	2	
	NAS446-2-1		NUT	2	
			---*---		
	SEE FIG 2		PLACARD-IDENTIFICATION NUMBER	1	
-60	CM2692-15.5H1B		PLUG BUTTON	3	
-61	CM2692-12H4B		PLUG BUTTON	1	
-62	CM2692-8H1B		PLUG BUTTON	1	
-63	C664508-0101		CLOCK-ELECTRIC	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	3	
			---*---		
-64	S1413N2		INDICATOR-TURN & BANK	1	
	C661003-0504		INDICATOR-TURN COORDINATOR	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
	AN936B6B		WASHER	4	
			---*---		
-65	C661060-0201		INDICATOR-AIRSPEED	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
			---*---		
-66	C661061-0201		INDICATOR-AIRSPEED	1	
-67	0700162-6		SPACER .071 THICKNESS	AR	
	0700162-4		SPACER .063 THICKNESS	AR	
	0700162-3		SPACER .051 THICKNESS	AR	
	0700162-7		SPACER .040 THICKNESS	AR	
-68	0700189-9		RING ASSEMBLY TRUE AIRSPEED	1	
-69	0700162-1		RETAINER ASSEMBLY TRUE AIRSPEED	1	
			ATTACHING PARTS		
-70	AN515B6R16		SCREW	4	
			---*---		
-71	C661076-0102	*	GYRO-HORIZONTAL	1	
	C661076-0103	*	GYRO-HORIZONTAL ALTERNATE	1	
	C661076-0104	*	GYRO-HORIZONTAL ALTERNATE	1	
			ATTACHING PARTS		
	AN515-6R6		SCREW	4	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
53N-72	C661075-0102	**	GYRO-DIRECTIONAL	1	
	C661075-0101	**	GYRO-DIRECTIONAL ALTERNATE	1	
	C661075-0103	**	GYRO-DIRECTIONAL ALTERNATE	1	
			ATTACHING PARTS		
	AN515-6R6		SCREW	3	
			---*---		
	SEE FIG 88C		GYRO-DIRECTIONAL NAV-O-MATIC	1	
-73	C668540-0101		GAGE-SUCTION	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
			---*---		
-74	C661012-0101		ALTIMETER 18,000 FT 182 ONLY	1	
	C661071-0101		ALTIMETER 20,000 FT FEET & INCHES SENSITIVE	1	
	C661071-0102		ALTIMETER 20,000 FT FEET & MILLIBARS SENSITIVE	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
			---*---		
-75	S1392N1		INDICATOR-VERTICAL SPEED 182 ONLY	1	
	C661080-0101		INDICATOR-VERTICAL SPEED SKYLANE ONLY	1	
			ATTACHING PARTS		
	AN5078632R12		SCREW 182 ONLY	4	
	AN960-10L		WASHER 182 ONLY	4	
	AN34086		NUT 182 ONLY	4	
	AN515B6R12		SCREW SKYLANE ONLY	3	
			---*---		
-76			RADIO INSTALLATION SEE ELECTRONIC MANUAL	NP	
	C669502-0201		INSTRUMENT CLUSTER-LIGHTED	1	
			ATTACHING PARTS		
	NAS43DD3-64		SPACER	2	
	AN5078832R24		SCREW	2	
	AN34088		NUT	2	
			---*---		
-77	441344		GAGE FUEL SW	2	
-78	440437		AMMETER SW	1	
-79	G442702		GAGE-CYLINDER HEAD TEMP SW	1	
-80	442785		GAGE-OIL TEMP SW	1	
-81	G444627		GAGE-OIL PRESSURE SW	1	
-82	401627		WASHER-INSULATOR SW	1	
	S1372-1		SENDING UNIT-CYLINDER HEAD TEMP	1	
	110691		WIRE-CYLINDER HEAD TEMP GAGE TO SENDING UNIT 106.0 IN LG BULK ITEM	AR	
	811542		POTENTIOMETER SW	1	
	S1894-3		BULB-RED INSTRUMENT CLUSTER	4	
	S1894-1		BULB-CLEAR GE USED WITH POST LIGHTING	4	
	S1941-1		FILTER INSTRUMENT CLUSTER	4	
-83	C662035-0101		GAGE-MANIFOLD PRESSURE	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
			---*---		
	0700099-84		LINE ASSEMBLY-MANIFOLD PRESSURE	1	
	AN816-2D		NIPPLE	1	
-84	C668020-0104		TACHOMETER	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
			---*---		
	S1605-2		SHAFT-TACHOMETER	1	
-85	C668501-0201		INDICATOR-ECONOMY POWER	1	
			ATTACHING PARTS		
	AN5078632R12		SCREW	4	
	MS20365B632C		NUT	4	
			---*---		
-86	C664501-0103		GAGE-HOURMETER	1	
			ATTACHING PARTS		
	AN5078632-6		SCREW	4	
	NAS679A06		NUT	4	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53N-87	S1311-3	GAGE-CARBURETOR AIR TEMP	1	
		ATTACHING PARTS		
	AN507B632R12	SCREW	4	
	MS20365B632C	NUT	4	
	C7000-632-7	NUT TIN	4	
		---*---		
-88	S2135-1	LIGHT ASSEMBLY-HIGH VOLTAGE	1	
-89	S1268-14	CONTROL ASSEMBLY-DEFROST	1	
-89A	S1241-36	CONTROL ASSEMBLY-CABIN AIR	1	
-89B	S1241-37	CONTROL ASSEMBLY-CABIN HEAT	1	
-89C	0513052-17	LIGHTER ASSEMBLY-CIGAR	1	
	L4858-1	PLUG-HEATING CUE	1	
	S1982-1	KNOB ASSEMBLY-LIGHTER	1	
	60232-1	CIRCUIT BREAKER-LIGHTER ASSEMBLY CUE	1	
-90	SEE FIG 79B	FLAP CONTROL DETAIL INSTALLATION	1	
-90A	S1234-5	CONTROL ASSEMBLY-MIXTURE	1	
-90B	C299506-0102	CONTROL ASSEMBLY-PROPELLER	1	
	1213646-1	WASHER-PROPELLER CONTROL	1	
-90C	C299505-0201	CONTROL ASSEMBLY-THROTTLE	1	
-91	S1230-10	CONTROL ASSEMBLY-CARBURETOR HEAT	1	
-91A	SEE FIG 76B	WING LEVELER INSTALLATION	1	
-91B	C291502-0103	PRIMER ASSEMBLY-ENGINE	1	
	S1974-1	KNOB ASSEMBLY-PRIMER	1	
-92	S1980-1	KNOB ASSEMBLY-INSTRUMENT PANEL	1	
	S1904-3	RESISTOR-VARIABLE	1	
	47 OHM,1/2W,10%	RESISTOR	1	
-92A	S1995-4	KNOB ASSEMBLY-RADIO LIGHTS	1	
		ATTACHING PARTS		
	AN565B2H3	SCREW	1	
	AN565B2-3	SCREW ALT	1	
		---*---		
	S2091-1	RESISTOR-VARIABLE TANDEM	1	
-92B	C292501-0102	KIT-IGNITION SWITCH WEU C292501-0104	1	
	C292501-0104	KIT-IGNITION SWITCH	1	
-93	S1994-1-1	SWITCH-MASTER	1	
	0770719-2	DIODE ASSEMBLY-MASTER SWITCH	1	
-93A	S1847-2-2	SWITCH-CONSOLE LIGHTS	1	
-93B	S1845-2-2	SWITCH-OIL DILUTE	1	
-94	S1845-1-2	SWITCH-PITOT HEAT	1	
-94A	S1845-1-2	SWITCH-NAVIGATION LIGHTS	1	
-94B	S1846-2-3	SWITCH-LANDING LIGHTS	1	
-95	S1846-1-3	SWITCH-BEACON & STROBE LIGHT	1	
-95A	S1843-1	BEZEL-SWITCH MOUNTING	7	
	1913035-1	COVER ASSEMBLY-SWITCH CUTOUT USED WHEN OPTIONAL SWITCHES ARE NOT INSTALLED	3	
-95B	1270695-1	CLIP RH-LOCKING	1	
	1270695-2	CLIP LH-LOCKING	1	
-96	S1360-10	CIRCUIT BREAKER 10 AMP	5	
-96A	S1360-5	CIRCUIT BREAKER 5 AMP	3	
-96B	S1360-15	CIRCUIT BREAKER 15 AMP	2	
-97	S1360-20	CIRCUIT BREAKER 20 AMP	1	
-97A	S1360-60	CIRCUIT BREAKER 60 AMP	1	
	0713854-1	BUS BAR-CENTER	1	
	0713854-2	BUS BAR-RH	1	
	0713854-4	BUS BAR-LH	1	
-98	0505020-3	PLACARD-MASTER SWITCH	1	


NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XI.

NOTE. *THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.

NOTE. **THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.

A---182 SERIAL 18260826 THRU 18261425
B---182 SERIAL 18260826 THRU 18260970
C---182 SERIAL 18260971 THRU 18261425
D---182 SERIAL 18260826 THRU 18260956
E---182 SERIAL 18260957 THRU 18261425

Equipment (Cont)

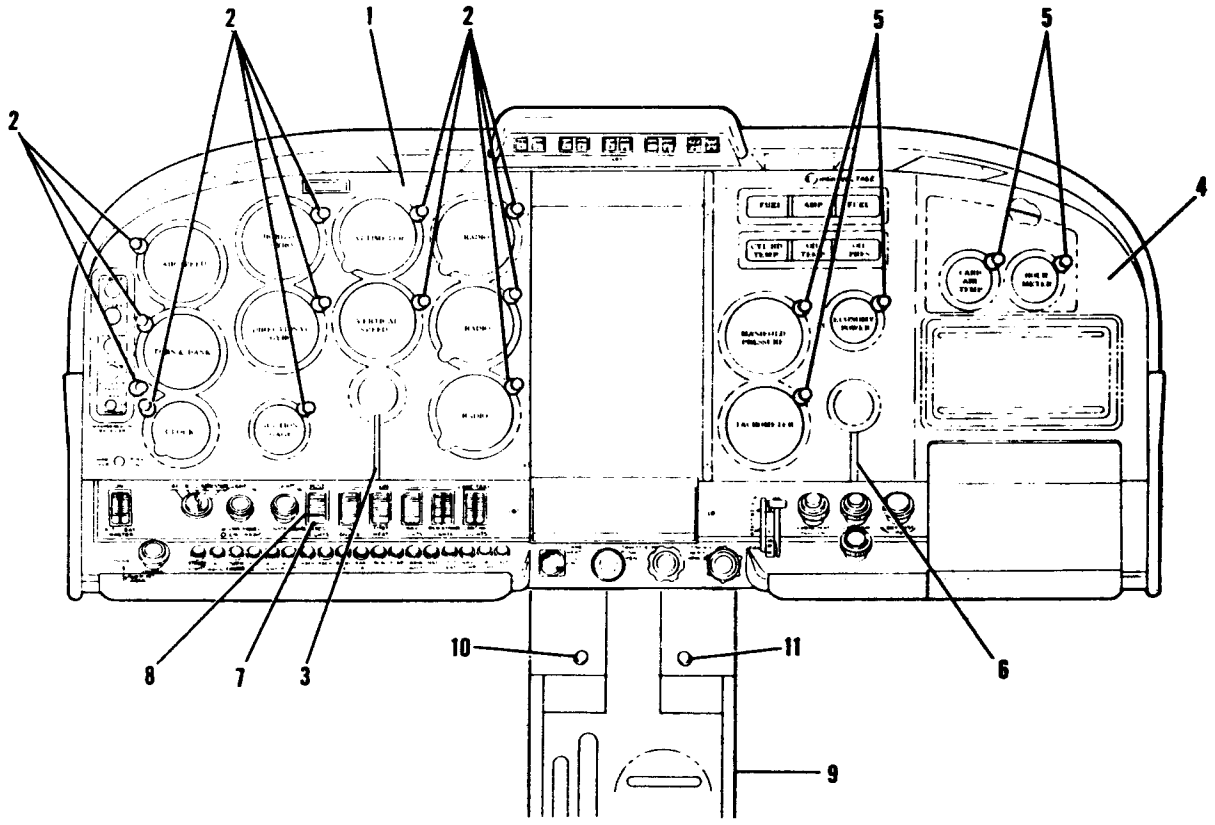

182 SERIAL 18260826 THRU 18261425


Figure 53P. Post Lighted Instrument Panel Installation


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53P-			POST LIGHTED INSTRUMENT PANEL INSTALLATION	NP	A
- 1	0713318-2	¤	COVER ASSEMBLY-POST LIGHTED LH	1	
- 2	S1899-1G		LIGHT ASSEMBLY GRAY	12	
	S1899-1		LIGHT ASSEMBLY BLACK	12	
	MS25237-330		BULB	1	
- 3	1213335-1		LAP SEAL GRAY	1	
	1213335-2		LAP SEAL BLACK	1	
- 4	0713319-2	¤	COVER ASSEMBLY-POST LIGHTED RH	1	
- 5	S1899-1G		LIGHT ASSEMBLY GRAY	5	
	S1899-1		LIGHT ASSEMBLY BLACK	5	
	MS25237-330		BULB	1	
- 6	1213163-2		LAP SEAL GRAY	1	
	1213163-1		LAP SEAL BLACK	1	
- 7	S1847-2-2		SWITCH-POST LIGHTS	1	
- 8	S1843-1		BEZEL-SWITCH MOUNTING	1	
	FRL5-2		RESISTOR LOCATED BEHIND SWITCH TRTA	1	
- 9	1200756-7	¤	PEDESTAL COVER ASSEMBLY-POST LIGHTED	1	
-10	S1899-1		LIGHT ASSEMBLY	1	
-11	S1899-2		LIGHT ASSEMBLY	1	
	SEE FIG 74C		MAPLIGHT INSTALLATION	1	
-12	S1894-1		BULB INSTRUMENT CLUSTER GE	4	
	S1941-1		FILTER-BULB BLUE GE	4	

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18260826 THRU 18261425

Instruments (Cont)

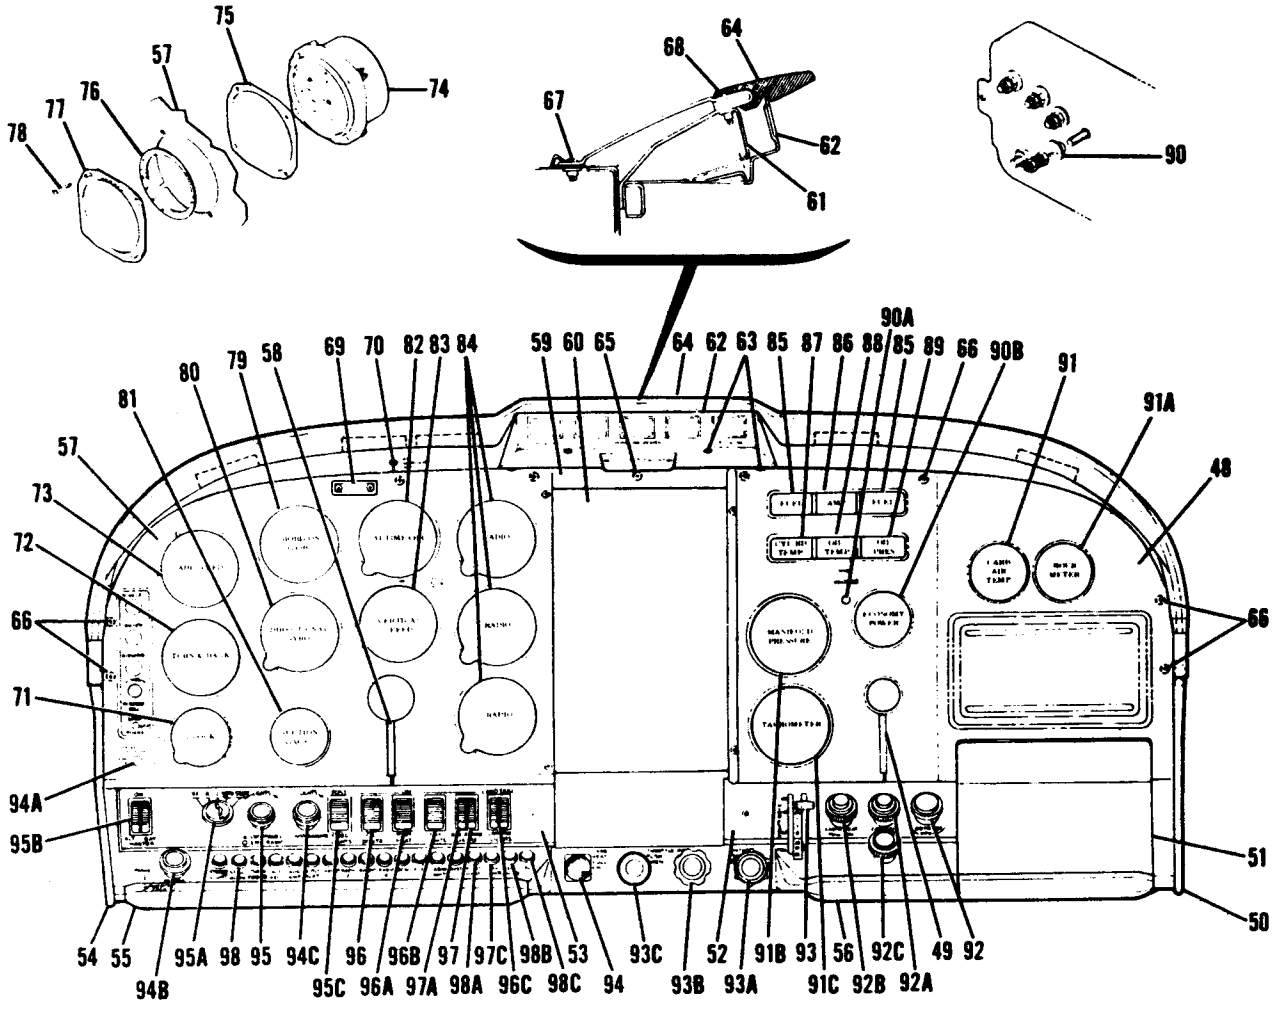

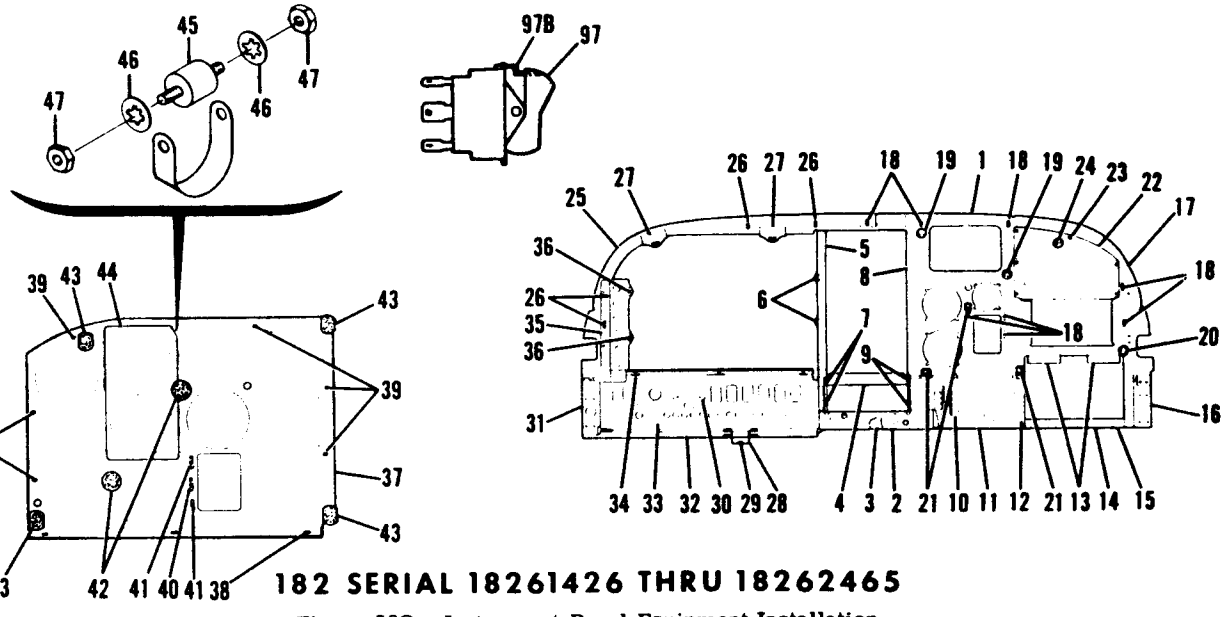

182 SERIAL 18261426 THRU 18262465

Figure 53Q. Instrument Panel Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
530-			INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
- 1	0713329-1		PANEL ASSEMBLY-STATIONARY	1	
- 2	0713266-3		PANEL-LOWER CENTER	1	
- 3	0713775-1		REINFORCEMENT	1	
- 4	1213650-1		SUPPORT-INSTRUMENT PANEL	1	
			ATTACHING PARTS		
	AN515-6R8		SCREW	2	
			---*---		
- 5	1213374-5		SUPPORT ASSEMBLY-INSTRUMENT PANEL LH	1	
- 6	NAS684A3		NUTPLATE	2	
- 7	NAS697A06L		NUTPLATE	2	
- 8	1213374-6		SUPPORT ASSEMBLY-INSTRUMENT PANEL RH	1	
- 9	NAS697A06L		NUTPLATE	2	
-10	1262001-3		BRACKET-FLAP CONTROL MOUNTING	1	
-11	0713770-11		PANEL-INSTRUMENT LOWER RH	1	
-12	1213145-1		BRACKET-MOUNTING	1	
-13	0713776-1		STOP-DOOR	2	
-14	0713779-1		ANGLE ASSEMBLY-DOOR MOUNTING	1	
-15	NAS697A08		NUTPLATE	3	
	0713809-1		CLIP-WIRE RETAINER	2	
-16	0713864-1		BRACKET-BULKHEAD ADAPTOR	1	
-17	0713328-1		PANEL ASSEMBLY RH-INSTRUMENT	1	
	NAS697A06L		NUTPLATE	6	
-18	NAS697A08		NUTPLATE	8	
-19	S2163-1		FASTENER	2	
-20	S2163-2		FASTENER	1	
-21	S2163-3		FASTENER	3	
-22	0713294-4		COVER ASSEMBLY-REMOVABLE	1	
			ATTACHING PARTS		
-23	NAS601-5		SCREW	6	
			---*---		
-24	S2163-1		FASTENER	1	
-25	0713326-1		BULKHEAD ASSEMBLY LH-INSTRUMENT PANEL	1	
-26	NAS697A08		NUTPLATE	4	
-27	1213169-12		SUPPORT ASSEMBLY-REMOVABLE PANEL	2	
	NAS698A3		NUTPLATE	1	
-28	0713267-1		ATTACH ASSEMBLY-PARKING BRAKE	1	
-29	NAS697A3		NUTPLATE	1	
-30	1270707-1		BRACKET ASSEMBLY-RELAY	1	
	1270707-2		BRACKET	1	
	SEE FIG 90		RELAY	1	
-31	0713783-3		BRACKET-BULKHEAD ADAPTOR	1	
-32	1213062-11		SUPPORT ASSEMBLY-LOWER LH INSTRUMENT PANEL	1	
	NAS682A3		NUTPLATE	1	
-33	0713275-5		SWITCH PANEL ASSEMBLY	1	
-34	NAS697A08		NUTPLATE	3	
-35	0713941-5		SUPPORT ASSEMBLY-INSTRUMENT PANEL LH	1	
-36	NAS697A3		NUTPLATE	2	
-37	0713327-1		PANEL ASSEMBLY-REMOVABLE LH	1	
			ATTACHING PARTS		
-38	NAS221-6		SCREW	5	
-39	NAS221-12		SCREW	4	
	NAS42HT6-19		SPACER	4	
			---*---		
-40	NAS697A08		NUTPLATE	1	
-41	NAS696A08		NUTPLATE	2	
-42	S2163-1		FASTENER	2	
-43	S2163-3		FASTENER	4	
-44	1213170-1		PANEL-SHOCK MOUNTED	1	
			ATTACHING PARTS		
-45	1213645-1		SHOCK MOUNT	4	
-46	AN936A8		WASHER	8	
-47	AN340B8		NUT	8	
			---*---		
-48	0713324-1	#	COVER ASSEMBLY-INSTRUMENT PANEL UPPER RH	1	
-49	1213163-2		FLAP SEAL	1	
-50	0713330-1	#	COVER-INSTRUMENT PANEL LOWER RH	1	
-51	SEE FIG 55A		MAP COMPARTMENT INSTALLATION	1	
-52	1213363-1		PANEL ASSEMBLY-LOWER RH ELECTROLUMINESCENT	1	
-53	1213364-3		PANEL ASSEMBLY-SWITCH LOWER LH ELECTROLUMINESCENT	1	
			ATTACHING PARTS		
	S1022Z4-8		SCREW	1	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
530-	SEE FIG 30		POWER SUPPLY & DIMMING-ELECTROLUMINESCENT	1	
-54	0713525-13	□	COVER ASSEMBLY-INSTRUMENT PANEL LOWER	1	
			ATTACHING PARTS		
	S1021A6-6		SCREW	8	
			---*---		
-55	0713955-1		KNEE BUMPER-LH	1	
-56	0713955-2		KNEE BUMPER-INBD RH	1	
-57	0713323-1	□	COVER ASSEMBLY-INSTRUMENT PANEL LH	1	
-58	1213335-1		LAP SEAL	1	
	1213383-1		PIN-LOCATING	2	
-59	1213377-1	□	COVER-PANEL CENTER	1	
			ATTACHING PARTS		
	AN525-832R10		SCREW	2	
			---*---		
-60	1213381-1	□	COVER-RADIO CUTOUT	1	
			ATTACHING PARTS		
	S1021A4-6		SCREW	4	
			---*---		
-61	1213365-1		BRACKET ASSEMBLY-SWITCH MOUNTING	1	
	NAS697A08		NUTPLATE	2	
-62	1213366-1	□	COVER-SWITCH MOUNTING BRACKET	1	
			ATTACHING PARTS		
-63	S1021Z6-6		SCREW	4	
			---*---		
-64	0713325-1		GLARE SHIELD ASSEMBLY	1	
			ATTACHING PARTS		
-65	AN525-832R10		SCREW	1	
-66	AN525-832R8		SCREW	6	
-67	AN515R8R8		SCREW	6	
-68	AN515R8R12		SCREW	2	
			---*---		
	SEE FIG 30A		LIGHT INSTALLATION-GLARE SHIELD	1	
-69	1213004-2		RETAINER-AIRCRAFT IDENTIFICATION NUMBER	1	
			ATTACHING PARTS		
	S1022Z6-8		SCREW	2	
	NAS446-2-1		NUT	2	
			---*---		
	SEE FIG 2A		PLACARD-IDENTIFICATION NUMBER	1	
-70	S1695-2		SWITCH-MAP LIGHT	1	
-71	C664508-0101		CLOCK-ELECTRIC	1	
			ATTACHING PARTS		
	AN515R6R12		SCREW	3	
			---*---		
-72	S1413N2		INDICATOR-TURN & BANK	1	
	C661003-0504		INDICATOR-TURN COORDINATOR	1	
			ATTACHING PARTS		
	AN515R6R12		SCREW	4	
	AN936B6R		WASHER	4	
			---*---		
	42320-1014		INDICATOR-TURN COORDINATOR NAV-O-MATIC 200 & 300	1	B
	42320-0014		INDICATOR-TURN COORDINATOR NAV-O-MATIC 200 & 300 ALT-	1	B
-73	C661060-0201		INDICATOR-AIRSPEED	1	
			ATTACHING PARTS		
	AN515B6R12		SCREW	4	
			---*---		
			TRUE AIRSPEED INDICATOR INSTALLATION	NP	
-74	C661061-0201		INDICATOR-AIRSPEED	1	
-75	0700162-6		SPACER .071 THICKNESS	AR	
	0700162-4		SPACER .063 THICKNESS	AR	
	0700162-3		SPACER .051 THICKNESS	AR	
	0700162-7		SPACER .040 THICKNESS	AR	
-76	0700189-9		RING ASSEMBLY TRUE AIRSPEED	1	
-77	0700162-1		RETAINER ASSEMBLY TRUE AIRSPEED	1	
			ATTACHING PARTS		
-78	AN515B6R16		SCREW	4	
			---*---		
-79	C661076-0102	*	GYRO-HORIZONAL	1	
	C661076-0103	*	GYRO-HORIZONAL ALT	1	
	C661076-0104	*	GYRO-HORIZONAL ALT	1	
			ATTACHING PARTS		
	AN515-6R6		SCREW	3	
			---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
530-80	C661075-0102 **	GYRO-DIRECTIONAL	1	
	C661075-0101 **	GYRO-DIRECTIONAL ALT	1	
	C661075-0103 **	GYRO-DIRECTIONAL ALT	1	
	C661075-0104 **	GYRO-DIRECTIONAL ALT	1	
	C661075-0105 **	GYRO-DIRECTIONAL WITH HEADING REFERENCE	1	
		ATTACHING PARTS		
	AN515-6R6	SCREW	3	
		---*---		
	SEE FIG 88C	GYRO-DIRECTIONAL NAV-O-MATIC	1	
-81	C668540-0101	GAGE-SUCTION	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
		---*---		
-82	C661012-0101	ALTIMETER 18,000 FT 182 ONLY	1	
	C661071-0101	ALTIMETER 20,000 FT FEET & INCHES SENSITIVE	1	
	C661071-0102	ALTIMETER 20,000 FT FEET & MILLIBARS SENSITIVE	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
		---*---		
-83	S1392N1	INDICATOR-VERTICAL SPEED 182 ONLY	1	
	C661080-0101	INDICATOR-VERTICAL SPEED SKYLANE ONLY	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW 182 ONLY	4	
	AN960-10L	WASHER 182 ONLY	4	
	AN34086	NUT 182 ONLY	4	
	AN515B6R12	SCREW SKYLANE ONLY	3	
		---*---		
-84		RADIO INSTALLATION SEE ELECTRONIC MANUAL	NP	
	C669502-0201	INSTRUMENT CLUSTER-LIGHTED	1	
		ATTACHING PARTS		
	NAS43DD3-64	SPACER	2	
	AN5078832R24	SCREW	2	
	AN34088	NUT	2	
		---*---		
-85	441344	GAGE-FUEL SW	2	
-86	040437	AMMETER SW	1	
-87	G442702	GAGE-CYLINDER HEAD TEMP SW	1	
-88	442785	GAGE-OIL TEMP SW	1	
-89	G444627	GAGE-OIL PRESSURE SW	1	
-90	401627	WASHER-INSULATOR SW	1	
	S1372-1	SENDING UNIT-CYLINDER HEAD TEMP	1	
	110691	WIRE-CYLINDER HEAD TEMP GAGE TO SENDING UNIT 106.0 IN LG BK1	AR	
	811542	POTENTIOMETER SW	1	
	S1894-3	BULB-RED INSTRUMENT CLUSTER	4	
	S1894-1	BULB-CW GE USED WITH POST LIGHTING	4	
	S1941-1	FILTER USED WITH POST LIGHTING	4	
-90A	S2135-1	LIGHT ASSEMBLY-HIGH VOLTAGE	1	
-90B	C668501-0211	INDICATOR-ECONOMY POWER	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	MS20365B632C	NUT	4	
		---*---		
-91	S1311-3	GAGE-CARBURETOR AIR TEMP	1	
		ATTACHING PARTS		
	AN5078632R12	SCREW	4	
	MS20365B632C	NUT	4	
	C7000-632-67	NUT TIN	4	
		---*---		
-91A	C664501-0103	GAGE-HOURMETER	1	
		ATTACHING PARTS		
	AN5078632R6	SCREW	4	
	NAS679A06	NUT	4	
		---*---		
-91B	C662035-0101	GAGE-MANIFOLD PRESSURE	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
		---*---		
	0700099-84	LINE ASSEMBLY-MANIFOLD PRESSURE	1	
	AN818-2D	NIPPLE	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53Q-91C	C668020-0104	TACHOMETER	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW	4	
		---*---		
	S1605-2	SHAFT-TACHOMETER	1	
-92	S1268-14	CONTROL ASSEMBLY-DEFROST	1	
-92A	S1241-36	CONTROL ASSEMBLY-CABIN AIR	1	
-92B	S1241-37	CONTROL ASSEMBLY-CABIN HEAT	1	
-92C	0513052-17	LIGHTER ASSEMBLY-CIGAR	1	
	L4858-1	PLUG-HEATING CUE	1	
	S1982-1	KNOB ASSEMBLY-LIGHTER	1	
	60232-1	CIRCUIT BREAKER-LIGHTER ASSEMBLY CUE	1	
-93	SEE FIG 79C	FLAP CONTROL DETAIL INSTALLATION	1	
-93A	S1234-5	CONTROL ASSEMBLY-MIXTURE	1	
-93B	C299506-0102	CONTROL ASSEMBLY-PROPELLER	1	
	1213646-1	WASHER-PROPELLER CONTROL	1	
	NAS43DD12-64	SPACER	1	
-93C	C299505-0205	CONTROL ASSEMBLY-THROTTLE	1	
-94	S1230-10	CONTROL ASSEMBLY-CARBURETOR HEAT	1	
-94A	SEE FIG 76B	WING LEVELER INSTALLATION	1	
-94B	C291502-0103	PRIMER ASSEMBLY-ENGINE	1	
	S1974-1	KNOB ASSEMBLY-PRIMER	1	
-94C	S1980-1	KNOB ASSEMBLY-INSTRUMENT PANEL	1	
	S1904-3	RESISTOR-VARIABLE	1	
	27 OHM 1/2 W 10%	RESISTOR	1	
-95	S1995-4	KNOB ASSEMBLY-RADIO LIGHTS	1	
		ATTACHING PARTS		
	AN565B2H3	SCREW	1	
	AN565B2-3	SCREW ALT	1	
		---*---		
	S2091-1	RESISTOR-VARIABLE TANDEM	1	
	27 OHM 1/2 W %	RESISTOR	1	
-95A	C292501-0104	KIT-IGNITION SWITCH	1	
-95B	S1994-1-1	SWITCH-MASTER	1	
	0770719-2	DIODE ASSEMBLY-MASTER SWITCH	1	
-95C	S1847-2-2	SWITCH-CONSOLE LIGHTS	1	
-96	S1845-2-2	SWITCH-OIL DILUTE	1	
-96A	S1845-1-2	SWITCH-PITOT HEAT	1	
-96B	S1844-1-2	SWITCH-NAVIGATION LIGHTS	1	
-96C	S1846-1-3	SWITCH LANDING LIGHTS	1	
-97	S1846-2-3	SWITCH-BEACON & STROBE LIGHT	1	
-97A	S1843-1	BEZEL-SWITCH MOUNTING	1	
	1913035-1	COVER ASSEMBLY-SWITCH CUTOUT USED WHEN OPTIONAL SWITCHES ARE NOT INSTALLED	1	
-97B	1270695-1	CLIP RH-LOCKING	1	
	1270695-2	CLIP LH-LOCKING	1	
-97C	S1360-10	CIRCUIT BREAKER 10 AMP	5	
-98	S1360-5	CIRCUIT BREAKER 5 AMP	3	
-98A	S1360-15	CIRCUIT BREAKER 15 AMP	2	
-98B	S1360-20	CIRCUIT BREAKER 20 AMP	1	
-98C	S1360-60	CIRCUIT BREAKER 60 AMP	1	
	0713854-1	BUS BAR-CENTER	1	
	0713854-2	BUS BAR-RH	1	
	0713854-4	BUS BAR-LH	1	


NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

NOTE. *THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.

NOTE. **THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.

A---182 SERIAL 18261426 THRU 18262465
B---182 SERIAL 18261957 THRU 18262465

Equipment (Cont)

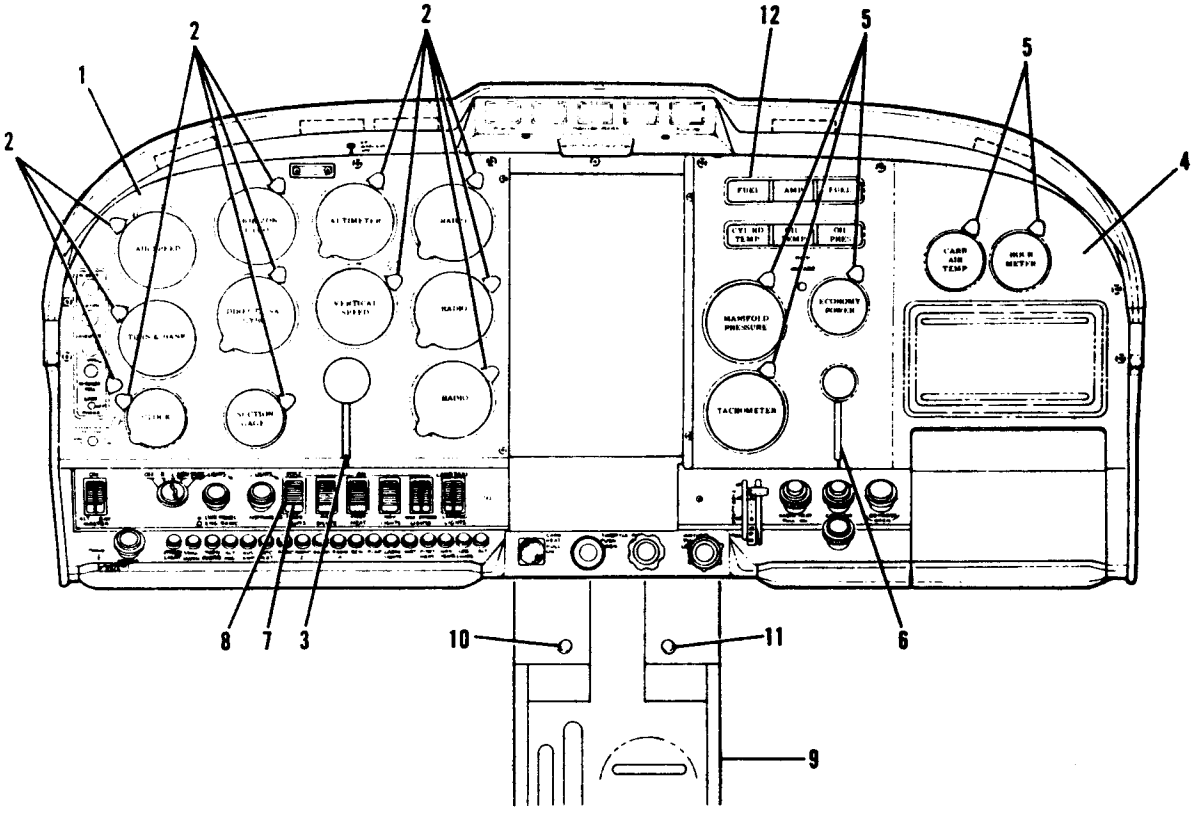

182 SERIAL 18261426 THRU 18262465


Figure 53R. Post Lighted Instrument Panel Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53R-		POST LIGHTED INSTRUMENT PANEL INSTALLATION	NP	A
- 1	0713323-2 ¤	COVER ASSY-POST LIGHTED LH	1	
- 2	S1899-1G	LIGHT ASSY GRAY	12	
	MS25237-330	BULB	1	
- 3	1213335-1	LAP SEAL	1	
- 4	0713324-2 ¤	COVER ASSY-POST LIGHTED RH	1	
- 5	S1899-1G	LIGHT ASSY GRAY	5	
	MS25237-330	BULB	1	
- 6	1213163-2	LAP SEAL	1	
- 7	S1847-2-2	SWITCH-POST LIGHTS	1	
- 8	S1843-1	BEZEL-SWITCH MOUNTING	1	
	S2023-1	ADAPTER-TERMINAL	1	
- 9	1200756-7 ¤	PEDESTAL COVER ASSY-POST LIGHTED	1	
-10	S1899-2	LIGHT ASSY-LH	1	
-11	S1899-1	LIGHT ASSY-RH	1	
	SEE FIG 74C	MAPLIGHT INSTALLATION	1	
-12	S1894-1	BULB-INSTRUMENT CLUSTER GE	4	
	S1941-1	FILTER-LIGHT APMH	4	


NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18261426 THRU 18262465


Instruments (Cont)

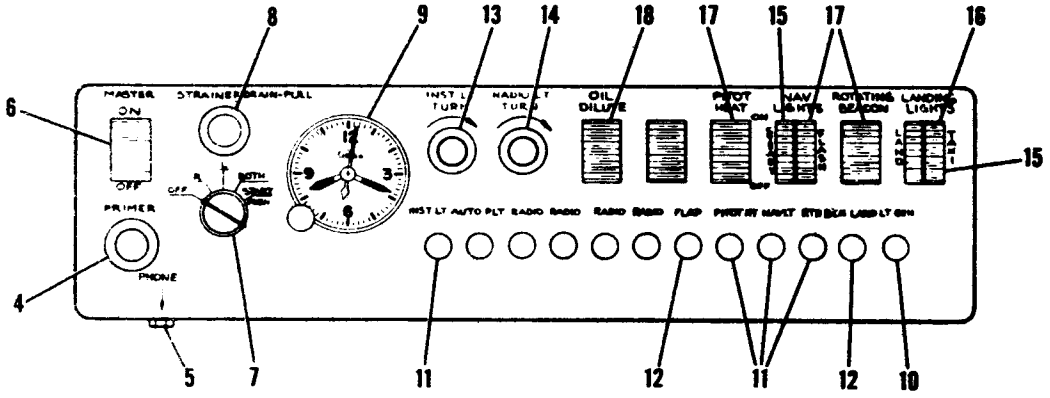

SERIAL 18253599 THRU 18254423

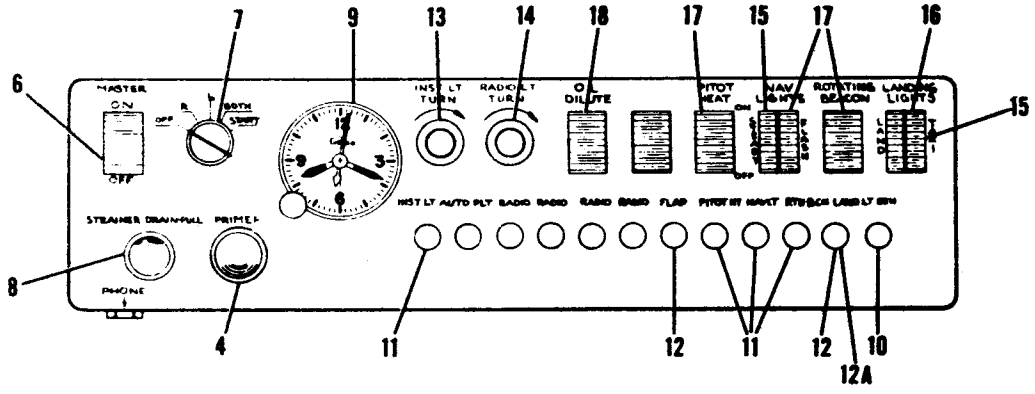

SERIAL 18254424 THRU 18255844

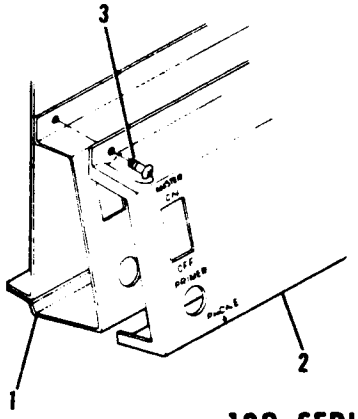

182 SERIAL 18253599 THRU 18255844


Figure 54. Switch Panel Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
54 -			SWITCH PANEL INSTALLATION	NP	H
- 1	0713622-2		PANEL-SWITCH	1	A
	0713622-4		PANEL-SWITCH	1	E
	0713744-1		PANEL-SWITCH	1	F
- 2	0713699-1		COVER-SWITCH PANEL SKYLANE	1	A
	0713699-5		COVER-SWITCH PANEL SKYLANE	1	E
	0713699-2		COVER-SWITCH PANEL	1	A
	0713699-6		COVER-SWITCH PANEL	1	E
	0713745-1		COVER-SWITCH PANEL	1	F
			ATTACHING PARTS		
- 3	AN515-8R10		SCREW	5	
	AN515-8R12		SCREW	3	
			---*---		
- 4	0311538-10		PRIMER ASSEMBLY-ENGINE WHEN EXHAUSTED USE C291502-0101	1	
	C291502-0101		PRIMER ASSEMBLY-ENGINE	1	
	S1752-1		KNOB	1	
- 5	S1103-1		JACK-MICROPHONE	1	
- 6	S1159-1-1		SWITCH-MASTER	1	
- 7	S1255-6		SWITCH, STARTER & LOCK KIT	1	A
	0713129-4	*	SWITCH, STARTER & LOCK KIT WHEN EXHAUSTED USE C292501-0102-	1	B
	C292501-0102	*	SWITCH-IGNITION	1	B
- 8	S1290-1		CONTROL ASSEMBLY-STRAINER DRAIN	1	
	S1503-1		KNOB-STRAINER DRAIN CONTROL	1	
- 9	S1317N1		CLOCK-ELECTRIC	1	A
	CM2629N1		CLOCK-8 DAY	1	C
	S1317N1		CLOCK-ELECTRIC	1	D
			ATTACHING PARTS		
	AN5078032R12		SCREW	3	
			---*---		
-10	S1232-50		CIRCUIT BREAKER	1	G
	S1360-50		CIRCUIT BREAKER	1	F
-11	S1232-10		CIRCUIT BREAKER	4	G
	S1360-10		CIRCUIT BREAKER	5	F
-12	S1232-15		CIRCUIT BREAKER	2	G
	S1360-15		CIRCUIT BREAKER	1	F
-12A	S1360-20		CIRCUIT BREAKER	1	F
-13	0105-351		RHEOSTAT OM	1	
-14	E0107		RHEOSTAT OM	1	
	S1163-2		KNOB-RHEOSTAT	2	
-15	S1160-1-1		SWITCH SKYLANE ONLY	2	
-16	S1160-1-1		SWITCH	1	
-17	S1158-2-1		SWITCH	3	
-18	S1158-1-1		SWITCH	1	
			ATTACHING PARTS		
	AN507-632R3		SCREW	2	
			---*---		

NOTE. *THIS KIT ALSO INCLUDES 2 DOOR LOCKS & KEYS

A---182 SERIAL 18253599 THRU 18254423
B---182 SERIAL 18254424 THRU 18255844
C---182 SERIAL 18254424 THRU 18254549
D---182 SERIAL 18254550 THRU 18255844
E---182 SERIAL 18254424 THRU 18255058
F---182 SERIAL 18255059 THRU 18255844
G---182 SERIAL 18253599 THRU 18255058
H---182 SERIAL 18253599 THRU 18255844

Map Compartment

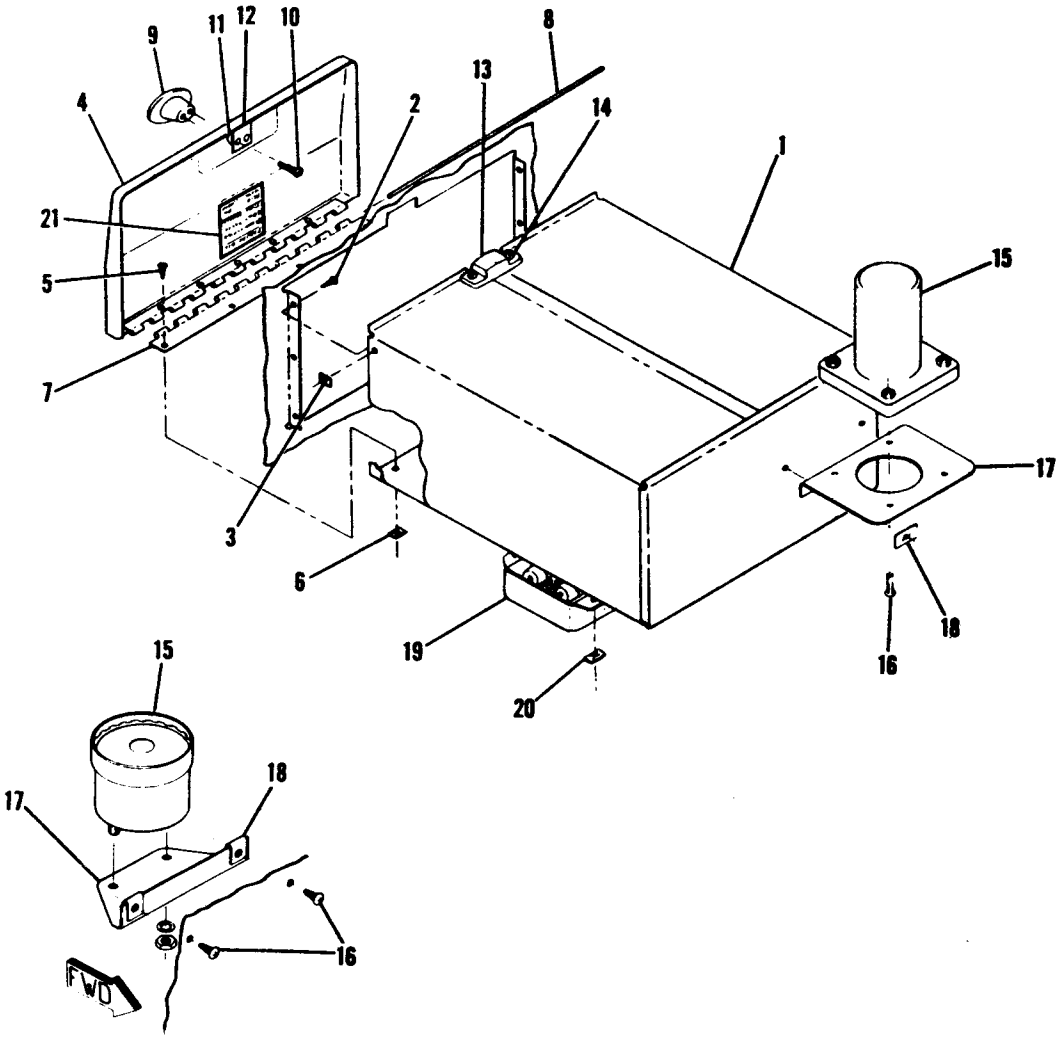


SERIAL 18254513 THRU 18255844

182 SERIAL 18253599 THRU 18255844

Figure 55. Map Compartment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
55 -		COMPARTMENT INSTALLATION-MAP	NP	D
- 1	0713708-1	COMPARTMENT ASSEMBLY-MAP	1	
		ATTACHING PARTS		
- 2	S1021Z6-6	SCREW	6	
- 3	NAS446-2-3	NUT	6	
		---*---		
- 4	0713697-1	DOOR ASSEMBLY-MAP COMPARTMENT	1	
		ATTACHING PARTS		
- 5	S1021Z6-6	SCREW	4	
- 6	NAS446-2-3	NUT	4	
		---*---		
- 7	0713697-6	HINGE ASSEMBLY	1	
- 8	0713697-9	PIN-HINGE	1	
- 9	0713303-7	KNOB	1	
		ATTACHING PARTS		
-10	AN507-632R10	SCREW	2	
-11	0713697-4	SPACER	1	
-12	0713697-5	STRIKER PLATE	1	
		---*---		
-13	S1895-1	CATCH-MAGNA-TITE EDNP	1	
		ATTACHING PARTS		
-14	S1021Z6-6	SCREW	2	
	NAS446-2-3	NUT	2	
		---*---		
-15	0511062-10	HORN ASSEMBLY-STALL WARNING	1	A
	S1407-3	HORN ASSEMBLY-STALL WARNING	1	B
		ATTACHING PARTS		
-16	AN507B632R12	SCREW	4	A
		---*---		
-17	0313313-3	BRACKET-STALL WARNING HORN	1	A
	0713738-3	BRACKET-STALL WARNING HORN	1	B
		ATTACHING PARTS		
-18	NAS446-4-3	NUT	2	A
	NAS395-12-3	NUT	2	B
	S1021Z8-6	SCREW	2	
		---*---		
-19	0713511-1	FLASHER-POSITION LIGHT	1	
		ATTACHING PARTS		
	S1021Z6-6	SCREW	4	
-20	NAS446-2-3	NUT	4	
		---*---		
-21	0713704-1	PLACARD-TIRE & OIL	1	C
		A---182 SERIAL 18253599 THRU 18254512		
		B---182 SERIAL 18254513 THRU 18255844		
		C---182 SERIAL 18253599 THRU 18254423		
		D---182 SERIAL 18253599 THRU 18255844		

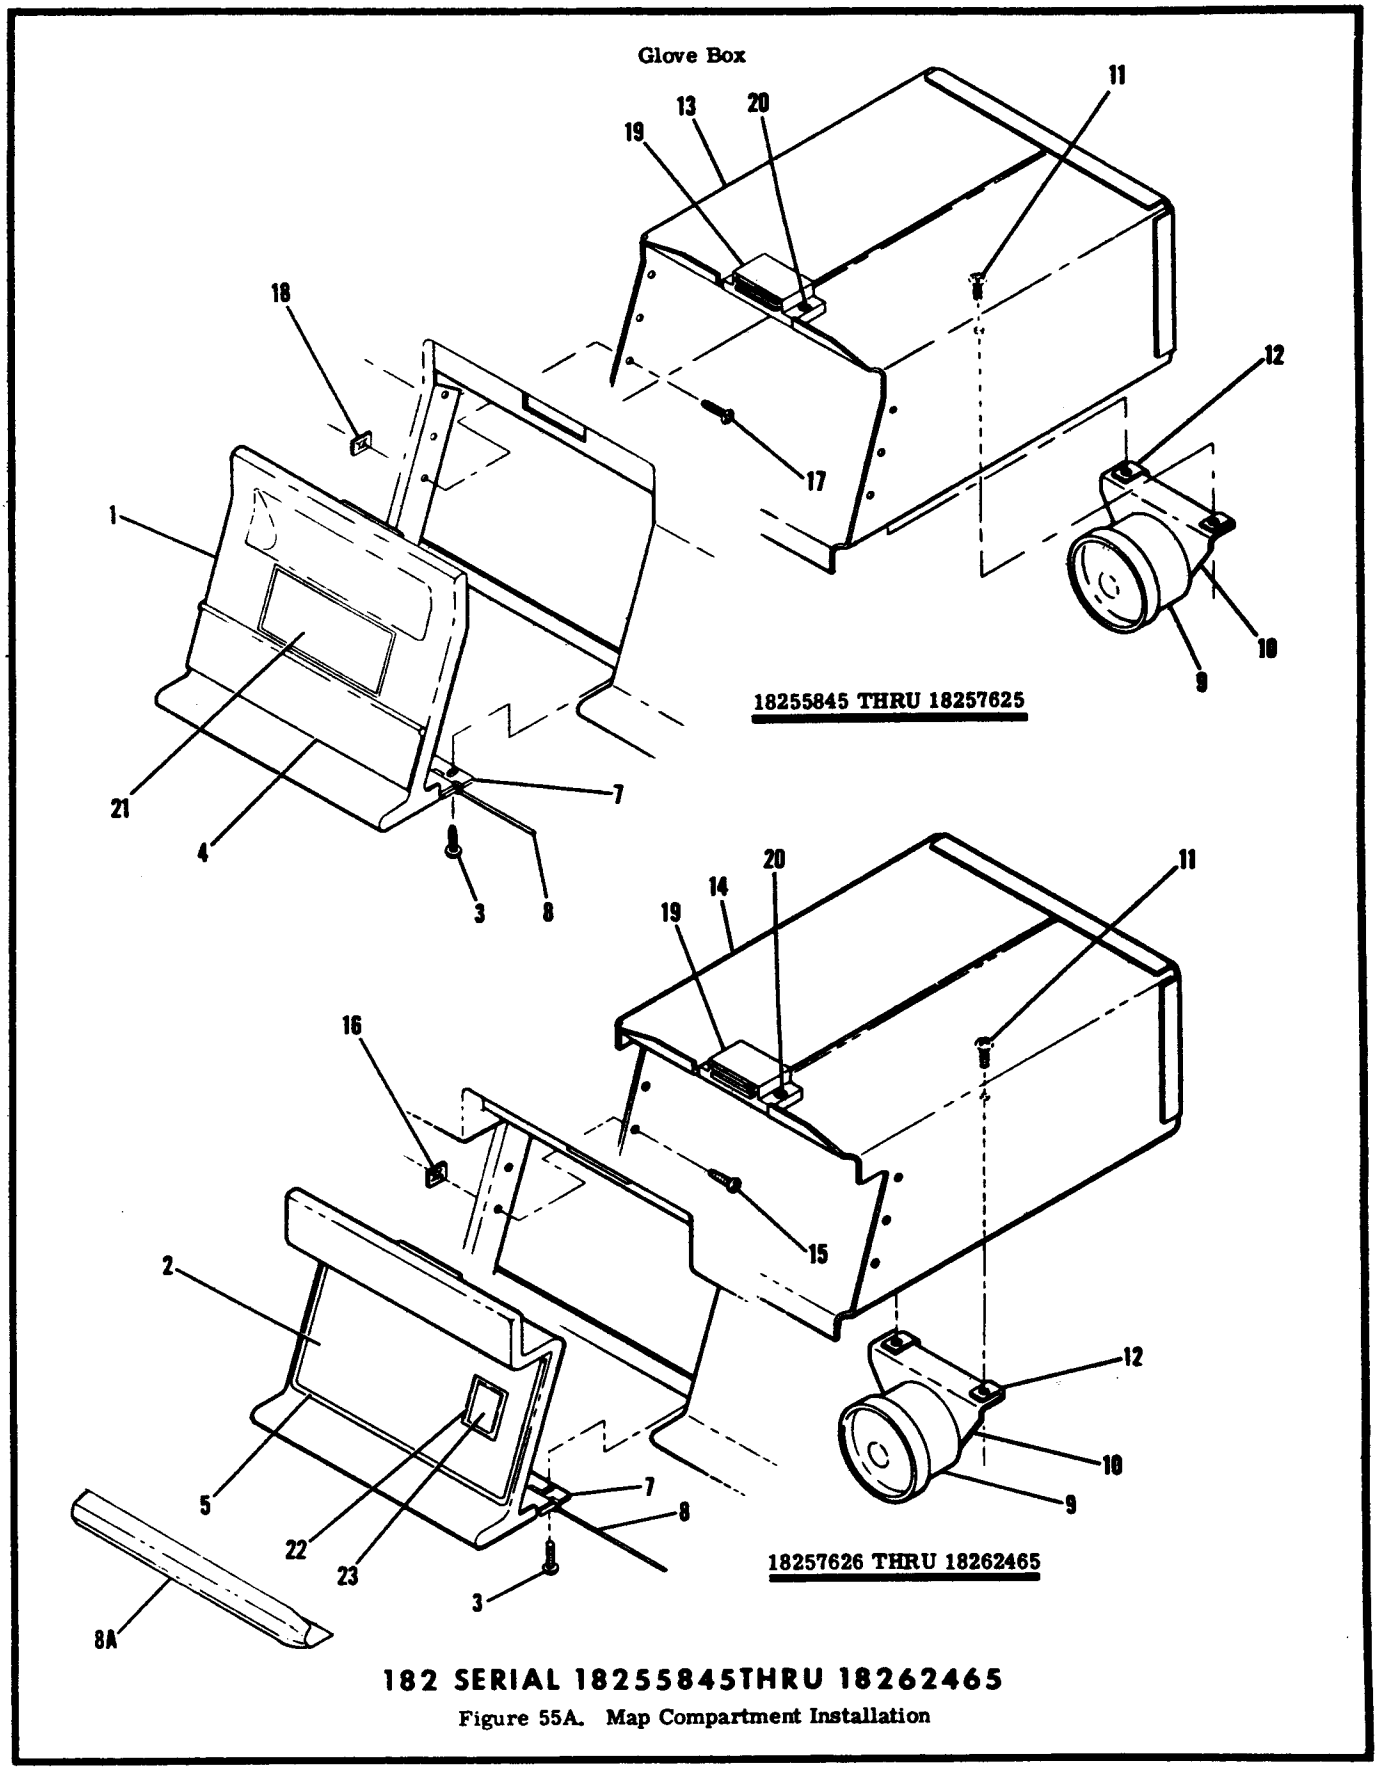

182 SERIAL 18255845THRU 18262465

Figure 55A. Map Compartment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
55A-		MAP COMPARTMENT INSTALLATION	NP	
- 1	0713777-3 ¤	DOOR ASSEMBLY-MAP COMPARTMENT	1	A
- 2	1213146-1 ¤	DOOR ASSEMBLY-MAP COMPARTMENT	1	C
	0713881-1 ¤	DOOR ASSEMBLY-MAP COMPARTMENT	1	D
	0713881-2 ¤	DOOR ASSEMBLY-MAP COMPARTMENT	1	F
	0713881-10 ¤	DOOR ASSEMBLY-MAP COMPARTMENT	1	H
	0713881-11 ¤	DOOR ASSEMBLY-MAP COMPARTMENT	1	J
	0713881-13 ¤	DOOR ASSEMBLY-MAP COMPARTMENT	1	L
		ATTACHING PARTS		
- 3	AN515-8R7	SCREW	3	
		---*---		
- 4	0713796-1	PLATE-TRIM	1	A
- 5	0713860-1	TRIM PLATE-MAP COMPARTMENT DOOR WOOD GRAIN	1	C
	0713883-1	TRIM PANEL ASSEMBLY-MAP COMPARTMENT	1	D
- 6		DELETE NEVER USED		
- 7	0713785-1	HINGE ASSEMBLY	1	
- 8	MS20253-2-646	HINGE PIN	1	
- 8A	0713955-3	BUMPER-KNEE	1	G
- 9	S2077-5	HORN-STALL WARNING	1	
-10	0713738-3	BRACKET ASSEMBLY-STALL WARNING	1	
		ATTACHING PARTS		
-11	S1021Z8-8	SCREW	2	
		---*---		
-12	NAS395-12-3	NUT	2	
-13	0713778-1	COMPARTMENT ASSEMBLY-MAP	1	A
-14	0713778-4	COMPARTMENT ASSEMBLY-MAP	1	K
	0713778-7	COMPARTMENT ASSEMBLY-MAP	1	J
	0713778-9	COMPARTMENT ASSEMBLY-MAP	1	L
		ATTACHING PARTS		
-15	S1021Z6-6	SCREW	5	B
-16	NAS446-2-3	NUT	5	B
-17	S1021Z6-6	SCREW	6	A
-18	NAS446-2-3	NUT	6	A
		---*---		
	NAS697A3K	NUTPLATE	1	M
		GROMMET	4	L
-19	S1895-1	CATCH EDNP	1	
		ATTACHING PARTS		
-20	S1021Z6-6	SCREW	2	
	NAS446-2-3	NUT	2	
		---*---		
-21	0713207-4	PLACARD-OPERATIONAL LIMITATIONS	1	A
-22	0700756-1	BASE-MAP COMPARTMENT PLACARD	1	B
-23	0700178-1	PLACARD-MAP COMPARTMENT DOOR	1	C
	0700178-2	PLACARD-MAP COMPARTMENT DOOR SKYLANE	1	C
	0713254-1	PLACARD-MAP COMPARTMENT DOOR	1	D
	0713254-2	PLACARD-MAP COMPARTMENT DOOR SKYLANE	1	D
	0713254-2	PLACARD-MAP COMPARTMENT DOOR	1	E

NOTE. ¤THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII

A---182 SERIAL 18255845 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
B---182 SERIAL 18257626 THRU 18262465
A182 SERIAL A182-0057 & ON
C---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
D---182 SERIAL 18258506 THRU 18259305
A182 SERIAL A182-0097 THRU A182-0116
E---182 SERIAL 18259306 THRU 18260825
A182 SERIAL A182-0117 & ON
F---182 SERIAL 18259306 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136
G---182 SERIAL 18260446 THRU 18262465
H---182 SERIAL 18260446 THRU 18260825
A182 SERIAL A182-0137 & ON
J---182 SERIAL 18260826 THRU 18261425
K---182 SERIAL 18257626 THRU 18260825
A182 SERIAL A182-0057 & ON
L---182 SERIAL 18261426 THRU 18262465
M---182 SERIAL 18260826 THRU 18262465

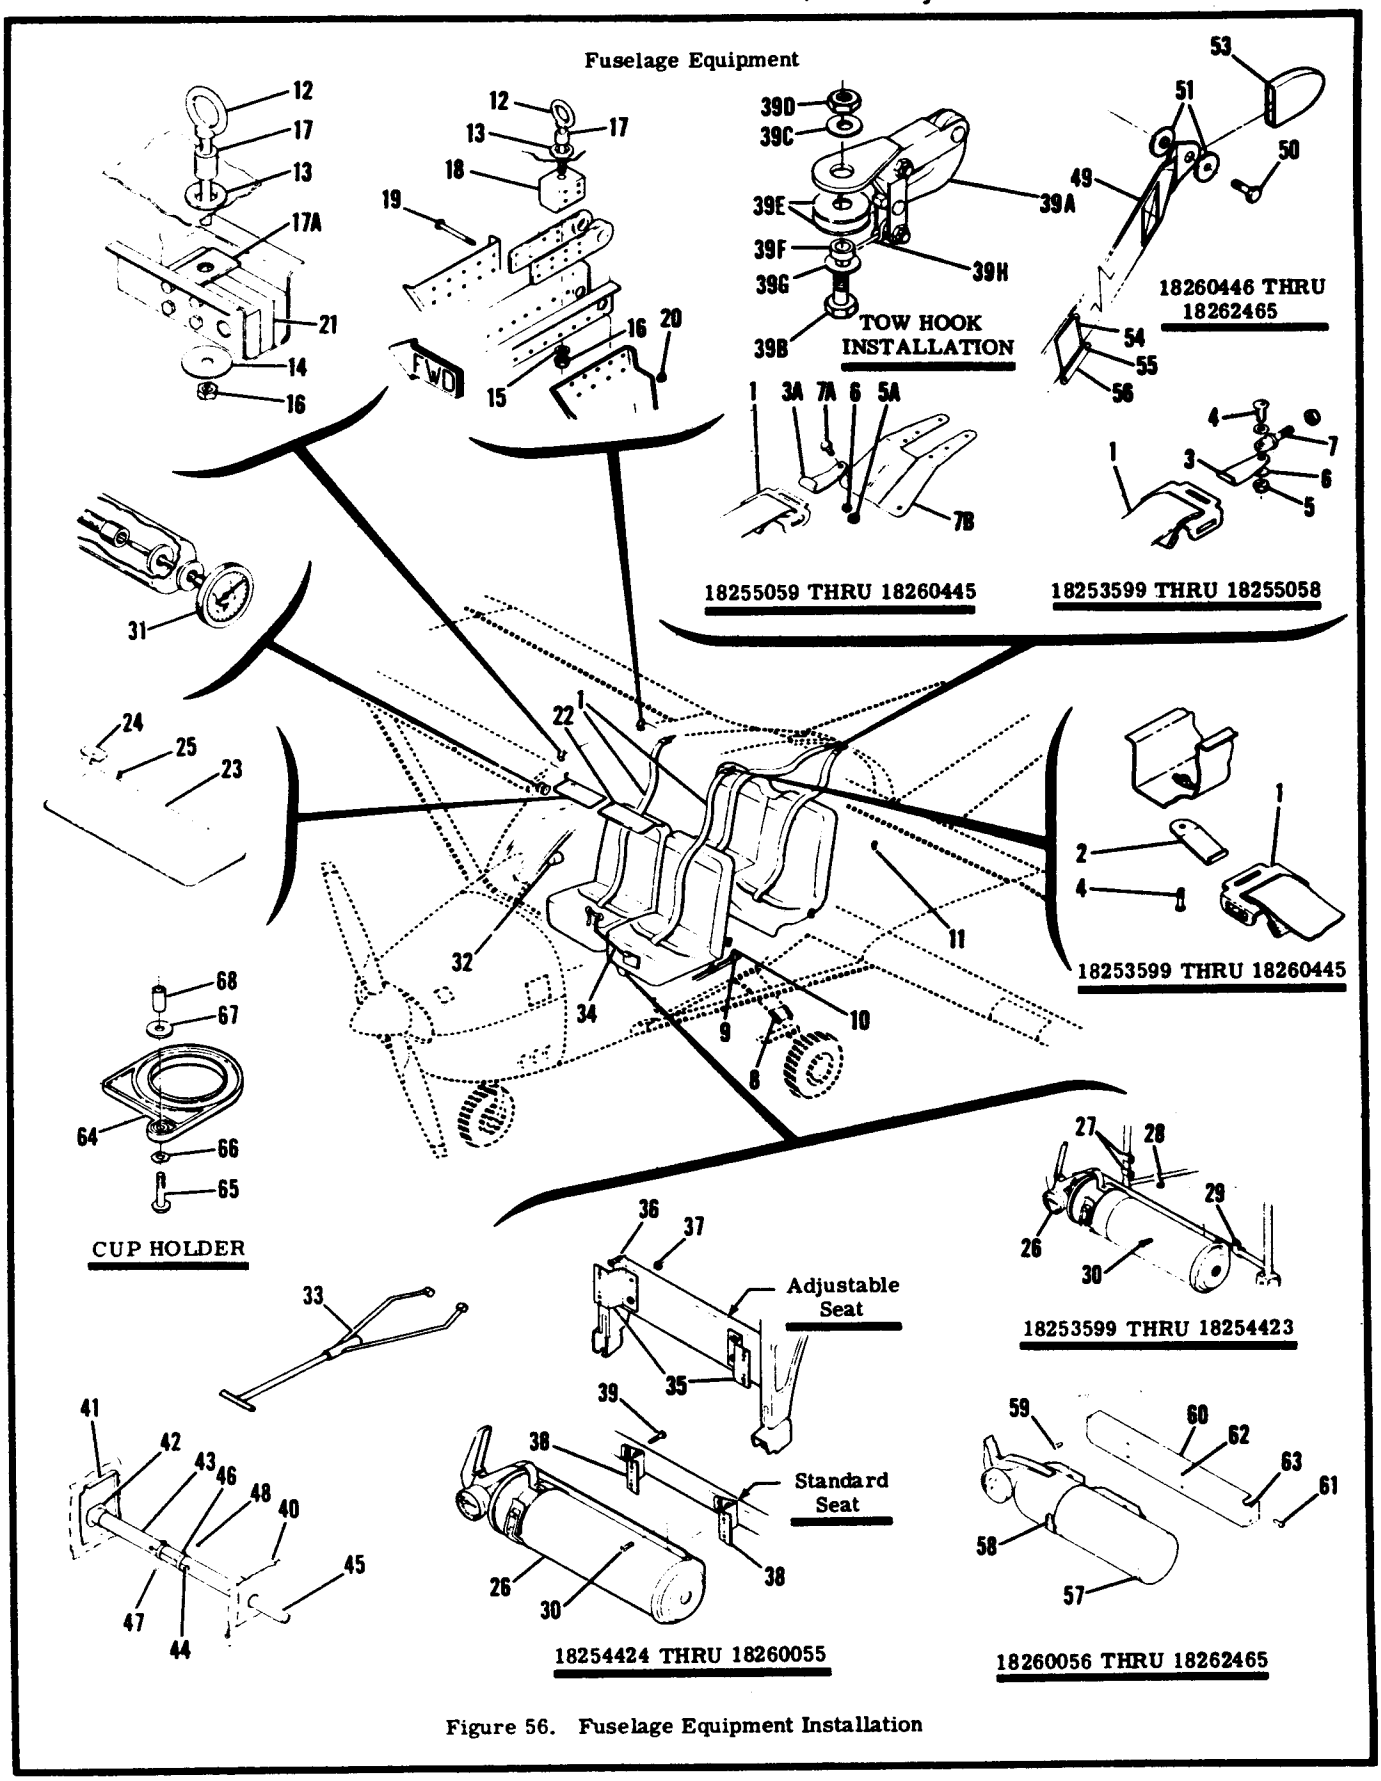


Figure 56. Fuselage Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
56 -		FUSELAGE EQUIPMENT INSTALLATION	NP	
- 1	S2029-1	HARNESS ASSEMBLY-SHOULDER	4	T
- 2	0511232-3	HOOK FRONT ONLY	2	T
- 3	0710628-4	HOOK REAR ONLY	2	G
- 3A	0711689-2	HOOK REAR ONLY	2	S
		ATTACHING PARTS		
- 4	NAS221-10	SCREW	1	T
- 5	MS21044N3	NUT REAR ONLY	1	G
- 5A	MS21044N3	NUT REAR ONLY	1	S
- 6	AN960-10L	WASHER REAR ONLY	2	T
- 7	AN4284A	BOLT REAR ONLY	1	G
- 7A	AN3-4A	BOLT REAR ONLY	1	S
		---*---		
- 7B	0711689-3	REINFORCEMENT BRACKET-SHOULDER HARNESS REAR	1	S
- 8	10182-006-1	JACK POINT	1	
	0711121-2	TIE DOWN ASSEMBLY-CARGO WEU 1201039-1	2	W
	1201039-1	TIE DOWN ASSEMBLY-CARGO	2	Y
		ATTACHING PARTS		
- 9	AN4-7A	BOLT	1	Y
	AN960-416	WASHER	1	Y
		---*---		
-10	0711121-3	WELD ASSEMBLY	1	W
	0711121-5	EYEBOLT	1	W
-11	0511165	EYEBOLT	6	G
	0711083-1	LATCH ASSEMBLY-TIE DOWN	6	X
	0711083-1	LATCH ASSEMBLY-TIE DOWN	7	Y
		ATTACHING PARTS		
	AN4-6A	BOLT	1	H
	S1074-1	WASHER	1	H
		---*---		
-12	0541115-3	EYEBOLT-HOISTING	4	
-13	MS35489-17	GROMMET	4	
-14	AN970-5	WASHER	2	
-15	AN960-516	WASHER	2	
-16	NAS679A5	NUT	4	
-17	0541115-2	SPACER	4	
-17A	0541115-4	PLATE	2	
-18	0700612-2	BLOCK-REAR SPAR	2	
		ATTACHING PARTS		
-19	AN3-15A	BOLT	4	
-20	MS21044N3	NUT	4	
		---*---		
-21	0700612-3	BLOCK-FRONT SPAR	2	
-22	1200116-1	VISOR ASSEMBLY-SUN LH	1	C
	0700122-1	VISOR ASSEMBLY-SUN LH	1	J
	0700122-13	VISOR ASSEMBLY-SUN LH	1	K
-23	1200116-2	VISOR ASSEMBLY-SUN RH	1	C
	0700122-2	VISOR ASSEMBLY-SUN RH	1	J
	0700122-12	VISOR ASSEMBLY-SUN RH	1	K
		ATTACHING PARTS		
-24	0713011-12	BRACKET	1	
-25	AN507-1032R14	SCREW	2	
		---*---		
-26	0800111-2	FIRE EXTINGUISHER	1	U
		ATTACHING PARTS		
-27	S1486DG8U	CLAMP	2	C
-28	S1486DG6U	CLAMP	1	C
-29	S1485D4U	CLAMP	1	C
-30	S1021Z8-8	SCREW	4	C
	AN515-8R8	SCREW	4	D
		---*---		
	SEE FIG 57	STRETCHER INSTALLATION	1	
-31	S1322-1	GAGE-OUTSIDE AIR TEMP WHEN EXHAUSTED USE C668507-0101	1	N
	C668507-0101	GAGE-OUTSIDE AIR TEMPERATURE	1	O
	C668507-0102	GAGE-OUTSIDE AIR TEMPERATURE ALTERNATE	1	O
-32	0713068-1	COMPASS ASSEMBLY	1	E
	0713068-5	COMPASS ASSEMBLY	1	F
	SEE FIG 57A	COMPASS & MIRROR INSTALLATION	1	K
		ATTACHING PARTS		
	0713723-1	SUPPORT ASSEMBLY-COMPASS	1	A

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
56 -	0713723-5	SUPPORT ASSEMBLY-COMPASS	1	B
	0713723-7	BRACKET	1	F
	AN515B632R12	SCREW	4	
		---*---		
-33	0501019-1	TOW BAR ASSEMBLY	1	
	0541162-1	VALVE-TUBELESS TIRE INFLATION	1	C
-34	0760606-1	LOCK ASSEMBLY-CONTROL	1	L
	1260463-1	LOCK ASSEMBLY-CONTROL	1	M
	1260144-3	LOCK ASSEMBLY-CONTROL	1	R
-35	0500120-2	SUPPORT ASSY-FIRE EXTINGUISHER VERT ADJUST SEAT ONLY	2	D
		ATTACHING PARTS		
-36	AN515-8R16	SCREW	2	D
-37	NAS679A08	NUT	2	D
		---*---		
-38	1400054-2	BRACKET-FIRE EXTINGUISHER	2	D
	0713946-1	BRACKET ASSY-FIRE EXTINGUISHER STANDARD SEAT	2	V
		ATTACHING PARTS		
-39	AN515-8R12	SCREW	2	D
	AN520-10R14	SCREW	4	V
		---*---		
	NAS697A3	NUTPLATE	4	V
-39A	0500228-2	TOW HOOK-GLIDER	1	
		ATTACHING PARTS		
-39B	AN5-7A	BOLT	1	
-39C	AN960-516L	WASHER	1	
-39D	NAS679A5	NUT	1	
-39E	AN970-5	WASHER	2	
-39F	0500228-5	BUSHING	1	
-39G	S1450-5-14-063	WASHER	1	
		---*---		
-39H	0500228-3	CORD-GLIDER TOW HOOK	1	
	0526001-1	CUP-FUEL SAMPLER	1	
		LIFT HANDLE INSTALLATION	NP	P
-40	0712748-1	REINFORCEMENT-LH	1	
-41	0712748-2	REINFORCEMENT-RH	1	
-42	0712750-2	BRACKET ASSEMBLY-RH	1	
	0712750-1	BRACKET ASSEMBLY-LH	1	
-43	0712749-1	TUBE-LIFT BAR	1	
-44	0712751-1	SPRING	1	
	0712752-1	STOP	1	
-45	1612030-1	HANDLE ASSEMBLY	2	
-46	AN735D20	CLAMP	2	
		ATTACHING PARTS		
-47	AN515-8R10	SCREW	1	
-48	AN340-8	NUT	1	
		---*---		
-49	S20708201	HARNESS ASSEMBLY-SHOULDER BLACK	AR	R
	S2070F201	HARNESS ASSEMBLY-SHOULDER RED	AR	AB
	S2070G201	HARNESS ASSEMBLY-SHOULDER GREEN	AR	AB
	S2070H201	HARNESS ASSEMBLY-SHOULDER BLUE	AR	AB
	S2070W201	HARNESS ASSEMBLY-SHOULDER BROWN	AR	AB
	S2070A201	HARNESS ASSY-SHOULDER RED	AR	AC
	S2070C201	HARNESS ASSY-SHOULDER GREEN	AR	AC
	S2070L201	HARNESS ASSY-SHOULDER BLUE	AR	AC
	S2070Z201	HARNESS ASSY-SHOULDER RED	AR	AD
	S2070AA201	HARNESS ASSY-SHOULDER OLIVE	AR	AD
	S2070U201	HARNESS ASSY-SHOULDER BLUE	AR	AD
	S2070W201	HARNESS ASSY-SHOULDER GOLD	AR	AD
		ATTACHING PARTS		
-50	NAS464P4A8	BOLT	1	R
-51	S2074-1	SPACER	2	R
-52		DELETED NEVER USED		
		---*---		
-53	S2076-1	COVER	1	R
-54	S2081-1	CLIP-HARNESS STOWAGE	2	R
		ATTACHING PARTS		
-55	S1023A6-86	SCREW	2	R
		---*---		
-56	S2081-2	COVER	2	R

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
56 -57	C421001-0101	FIRE EXTINGUISHER	1	V
-58	C421001-0102	BRACKET ASSY-FIRE EXTINGUISHER	1	V
		ATTACHING PARTS		
-59	AN520-10R7	SCREW	4	V
		---*---		
-60	0713945-3	BRACKET ASSY INFINITE ADJUST SEAT ONLY WEU 0713945-11-	1	Z
	0713945-11	BRACKET ASSY INFINITE ADJUST SEAT ONLY	1	AA
		ATTACHING PARTS		
-61	AN520-10R8	SCREW	4	V
		---*---		
-62	NAS680A3	NUTPLATE	4	V
-63	NAS696A3	NUTPLATE	4	V
-64	0501022-1	CUPHOLDER	2	Y
		ATTACHING PARTS		
-65	AN525-10R20	SCREW USED ON LH SIDE	1	Y
	AN525-10R12	SCREW USED ON RH SIDE	1	Y
-66	S1357-3	WASHER	1	Y
-67	AN960-10	WASHER USED ON LH SIDE	1	Y
	AN960-10	WASHER USED ON RH SIDE	2	Y
-68	NAS430D3-32	SPACER USED ON LH SIDE ONLY	1	Y
		---*---		
		A---182 SERIAL 18253599 THRU 18253834		
		B---182 SERIAL 18253835 THRU 18254150		
		C---182 SERIAL 18253599 THRU 18254423		
		D---182 SERIAL 18254424 THRU 18260183		
		A182 SERIAL A182-0001 THRU A182-0117		
		E---182 SERIAL 18253599 THRU 18254150		
		F---182 SERIAL 18254151 THRU 18262465		
		A182 SERIAL A182-0001 & ON		
		G---182 SERIAL 18253599 THRU 18255058		
		H---182 SERIAL 18255059 THRU 18262465		
		A182 SERIAL A182-0001 & ON		
		J---182 SERIAL 18254424 THRU 18255844		
		K---182 SERIAL 18255845 THRU 18262465		
		A182 SERIAL A182-0001 & ON		
		L---182 SERIAL 18253599 THRU 18255684		
		M---182 SERIAL 18256685 THRU 18260445		
		A182 SERIAL A182-0001 & ON		
		N---182 SERIAL 18253599 THRU 18259208		
		A182 SERIAL A182-0001 THRU A182-0116		
		O---182 SERIAL 18259209 THRU 18262465		
		A182 SERIAL A182-0117 & ON		
		P---182 SERIAL 18260056 THRU 18262465		
		A182 SERIAL A182-0117 & ON		
		R---182 SERIAL 18260446 THRU 18262465		
		S---182 SERIAL 18255059 THRU 18260445		
		A182 SERIAL A182-0001 & ON		
		T---182 SERIAL 18253599 THRU 18260445		
		A182 SERIAL A182-0001 & ON		
		U---182 SERIAL 18253599 THRU 18260183		
		A182 SERIAL A182-0001 THRU A182-0117		
		V---182 SERIAL 18260184 THRU 18262465		
		A182 SERIAL A182-0117 & ON		
		W---182 SERIAL 18253599 THRU 18260825		
		A182 SERIAL A182-0001 THRU A182-0136		
		X---182 SERIAL 18255059 THRU 18260825		
		A182 SERIAL A182-0001 THRU A182-0136		
		Y---182 SERIAL 18260826 THRU 18262465		
		Z---182 SERIAL 18260184 THRU 18261425		
		A182 SERIAL A182-0117 THRU A182-0136		
		AA---182 SERIAL 18261426 & ON		
		A182 SERIAL A182-0137 & ON		
		AB---182 SERIAL 18260446 THRU 18260825		
		A182 SERIAL A182-0137 & ON		
		AC---182 SERIAL 18260826 THRU 18261425		
		AD---182 SERIAL 18261426 THRU 18262465		

Fuselage Equipment (Cont)


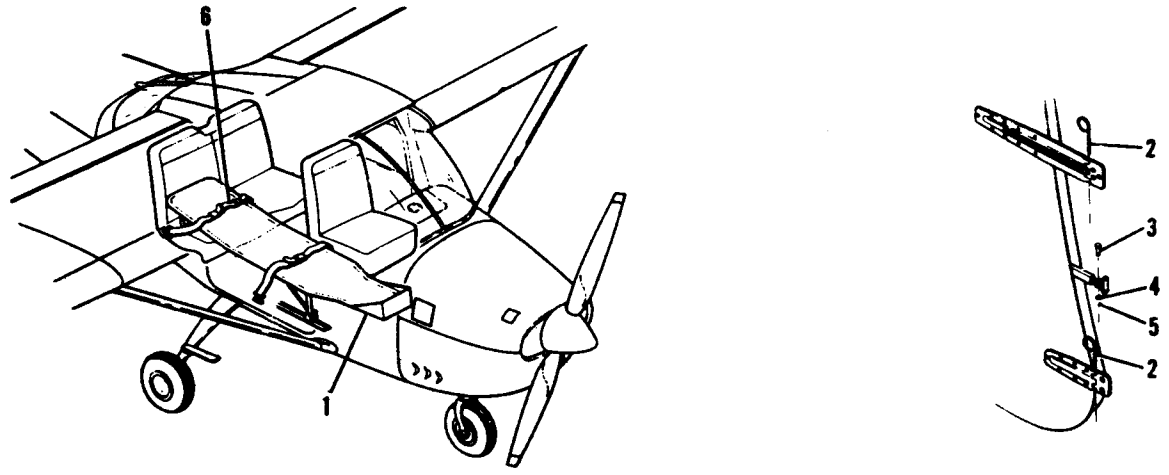


Figure 57. Portable Stretcher Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
57 -		STRETCHER INSTALLATION-PORTABLE	NP	
- 1	0700164-6	STRETCHER-PORTABLE	1	
- 2	S1426-1	PIN-HINGE	2	
- 3	MS20392-1C17	PIN-FLATHEAD	1	
- 4	AN960-10L	WASHER	1	
- 5	MS24665-151	PIN-COTTER	1	
- 6	FDC-2475-50	BELT EXTENSION DAP1	1	
	S1809-1	BELT EXTENSION METAL TO METAL BUCKLE	1	

Fuselage Equipment (Cont)

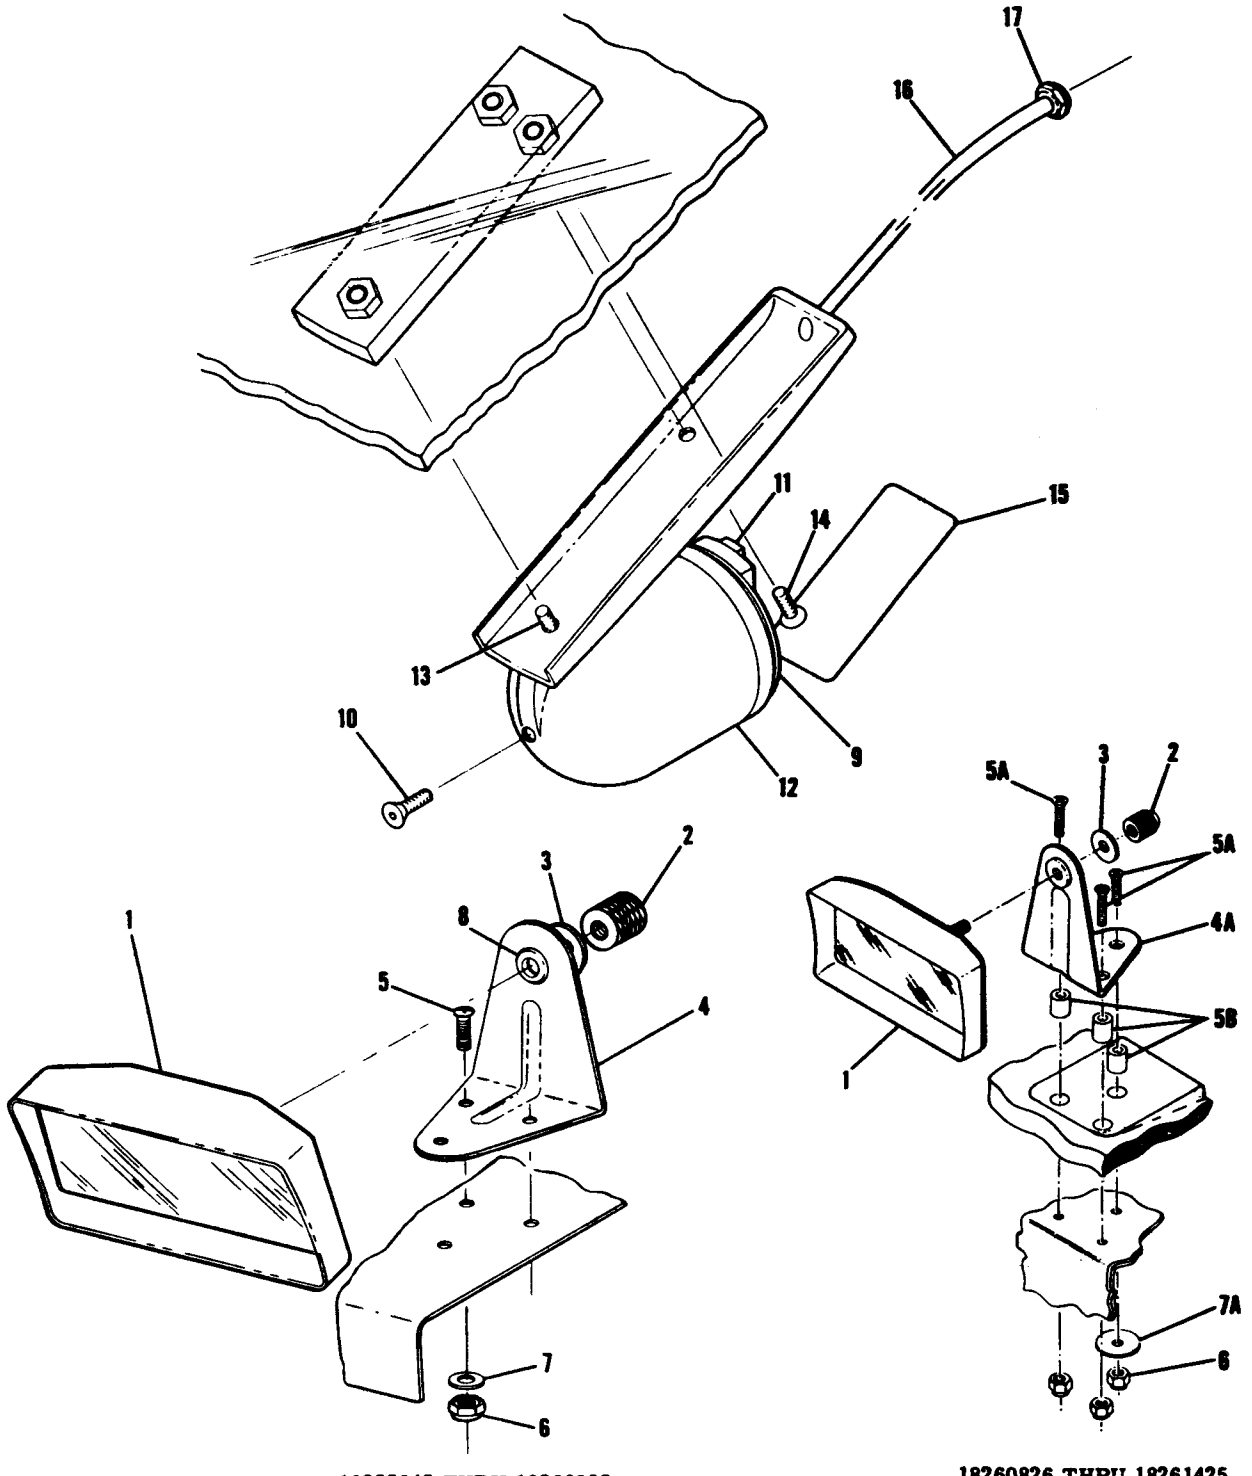

18255845 THRU 18260825


18260826 THRU 18261425


182 SERIAL 18255845 THRU 18261425

Figure 57A. Rear View Mirror & Compass Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
57A-		REAR VIEW MIRROR INSTALLATION	NP	A
- 1	0500312-2	MIRROR & COVER ASSY	1	
		ATTACHING PARTS		
- 2	0500313-1	NUT	1	
- 3	S1450-4A11-063	WASHER	2	
		---*---		
- 4	0500310-1	BRACKET ASSEMBLY	1	B
- 4A	1213293-1	BRACKET ASSEMBLY	1	C
		ATTACHING PARTS		
- 5	AN5078832R8	SCREW	3	B
- 5A	AN5078832R24	SCREW	3	C
- 5B	NAS43DD3-64	SPACER	3	C
- 6	MS20365B832C	NUT	3	
- 7	S1450-3A14-.050	WASHER	2	B
- 7A	S1450-3A14-.050	WASHER	1	C
		---*---		
- 8	MS35489-6	GROMMET	1	
		COMPASS INSTALLATION	NP	A
- 9	C660501-0101	COMPASS	1	
		ATTACHING PARTS		
-10	S1571-8-10	SCREW	1	
		---*---		
-11	330	BULB	1	
-12	0713813-1	MOUNT-COMPASS	1	
		ATTACHING PARTS		
-13	S1570-8-12	SCREW	1	
	AN960D8	WASHER	2	
-14	S1571-8-6	SCREW	2	
		---*---		
-15	0713819-1	CARD-COMPASS DEVIATION	1	
-16	0713817-1	TUBE ASSEMBLY	1	
		ATTACHING PARTS		
-17	S1216-3	NUT	1	
	AN936A416	WASHER	1	
	NAS620A416L	WASHER	1	
		---*---		
		A---182 SERIAL 18255845 THRU 18261425 A182 SERIAL A182-0001 THRU A182-0136 B---182 SERIAL 18255845 THRU 18260825 A182 SERIAL A182-0001 THRU A182-0136 C---182 SERIAL 18260826 THRU 18261425		

Fuselage Equipment (Cont)

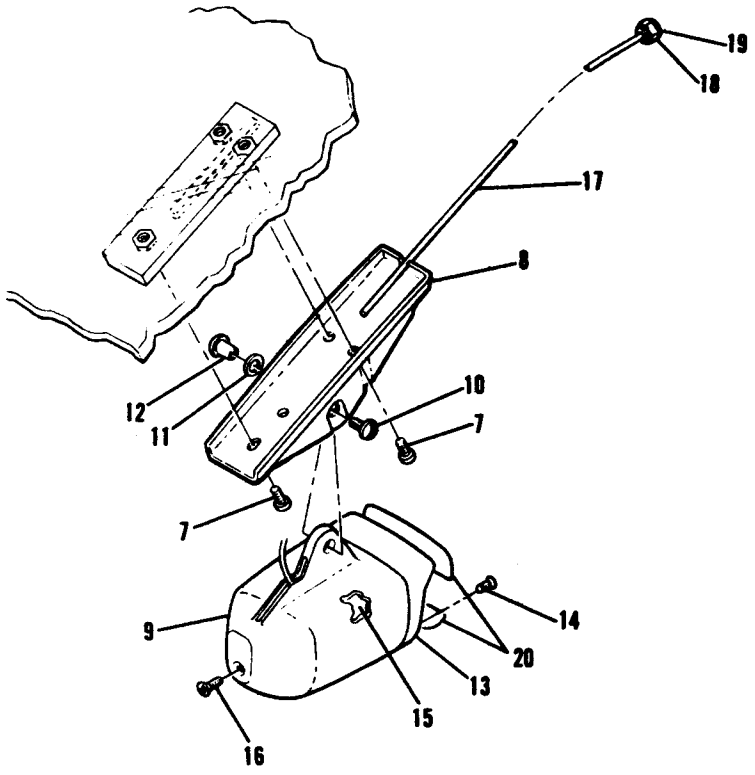

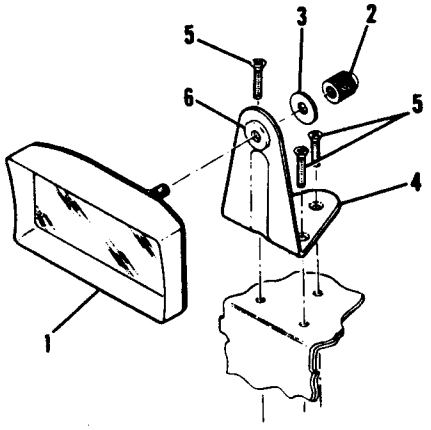


182 SERIAL 18261426 THRU 18262465

Figure 57B. Rear View Mirror & Compass Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
578-		REAR VIEW MIRROR INSTALLATION	NP	A
- 1	0500312-2	MIRROR & COVER ASSEMBLY	1	
		ATTACHING PARTS		
- 2	0500313-1	NUT	1	
- 3	S1450-4A11-063	WASHER	1	
		---*---		
- 4	1213293-1	BRACKET ASSY	1	
		ATTACHING PARTS		
- 5	AN5078832R8	SCREW	3	
		---*---		
- 6	MS35489-6	GROMMET	1	
		COMPASS INSTALLATION	NP	
	0413517-1	COMPASS ASSY	1	
		ATTACHING PARTS		
- 7	AN50088-6	SCREW	3	
		---*---		
- 8	0413517-3	BASE-COMPASS	1	
- 9	0413517-5	CUP-COMPASS	1	
		ATTACHING PARTS		
-10	D366	SCREW	1	
-11	AN960-D10L	WASHER	1	
-12	D4023X.375	POST	1	
		---*---		
-13	0413517-15	BEZEL-COMPASS	1	
		ATTACHING PARTS		
-14	AN51084R8	SCREW	2	
		---*---		
-15	C660501-0101	COMPASS	1	
		ATTACHING PARTS		
-16	AN5078832R14	SCREW	1	
		---*---		
-17	0713817-4	TUBE ASSEMBLY	1	
		ATTACHING PARTS		
-18	S1216-3	NUT	1	
-19	AN936A416	WASHER	1	
	NAS620A416L	WASHER	1	
		---*---		
-20	SEE FIG 2A	PLACARD-COMPASS CORRECTION	2	
		A---182 SERIAL 18261426 THRU 18262465 A182 SERIAL A182-137 & ON		

Propeller

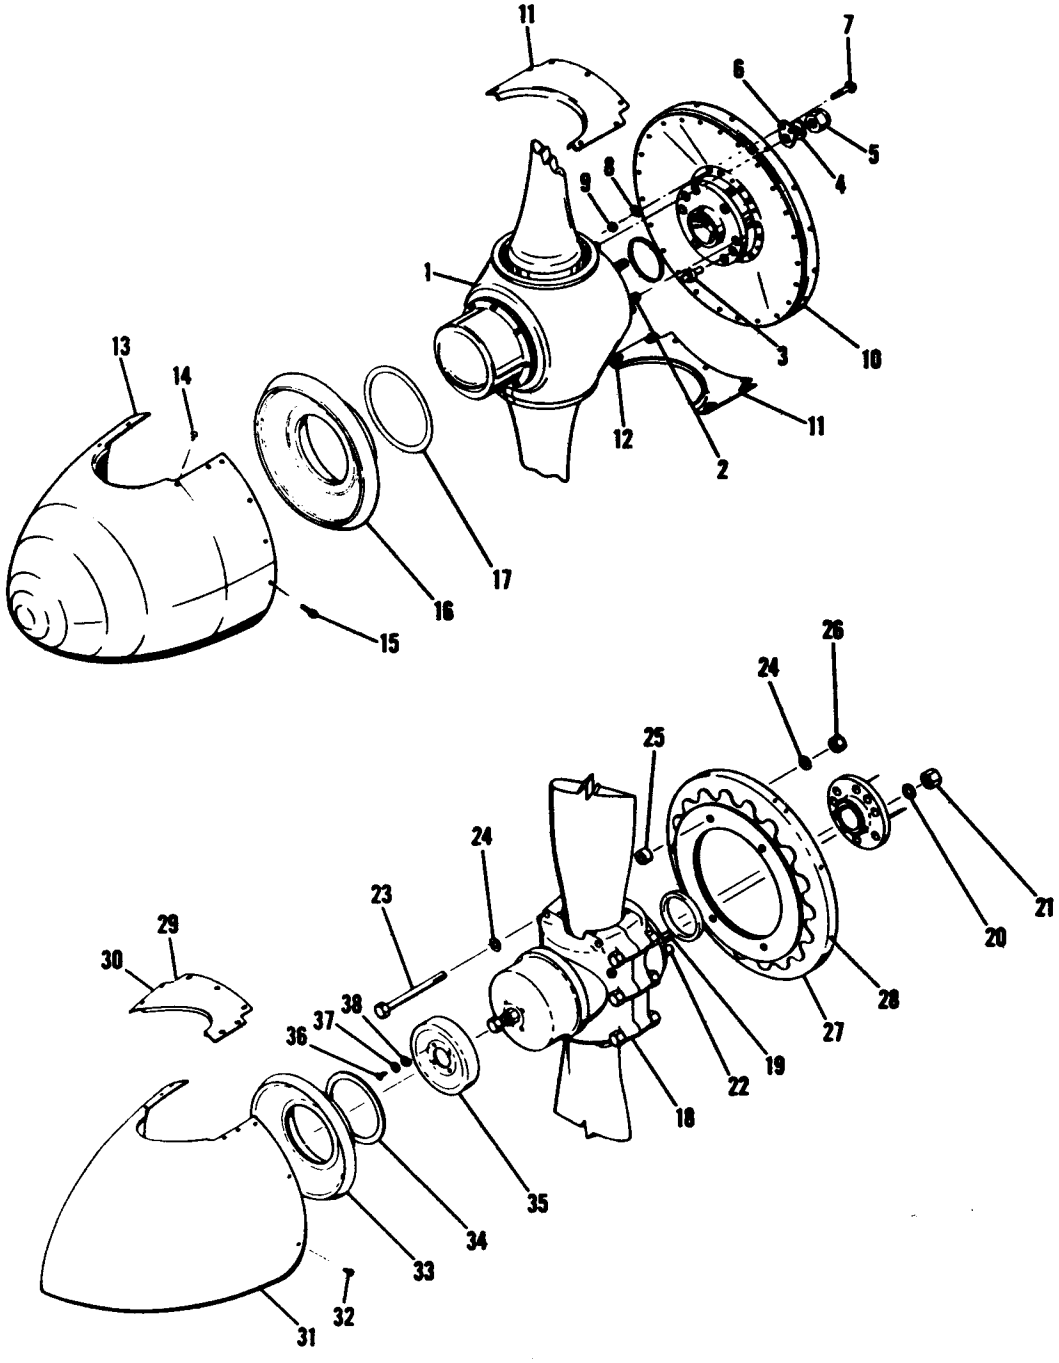


182 SERIAL 18253599 THRU 18255844

Figure 58. Propeller Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
58 -		PROPELLER INSTALLATION	NP	C
- 1	0752024-3	PROPELLER ASSEMBLY-MODEL 2A36C29/90M8 80IN DIA MCL	1	A
		WHEN EXHAUSTED USE C161002-0201		
	C161002-0201	PROPELLER ASSEMBLY-MODEL 2A34C50/90A-8 82IN DIA MCL	1	B
		SEE FIGURE 59A		
		ATTACHING PARTS		
- 2	A1561-2	BOLT MCL	6	
- 3	A1562	DOWEL MCL	6	
- 4	A1638-2	WASHER MCL USED WITH 0752024-3 ONLY	6	
- 5	A1639-2	NUT MCL	6	
		---*---		
		SPINNER ASSEMBLY-MC CAULEY PROPELLER	NP	
		ATTACHING PARTS		
- 6	0752005-4	LUG	6	
- 7	AN525-10R14	SCREW	12	
- 8	S1164-1	WASHER	12	
- 9	MS21044N3	NUT	12	
		---*---		
-10	0752004-6	BULKHEAD ASSEMBLY	1	
-11	0752004-1	FILLET ASSEMBLY	2	
-12	NAS680A3	NUTPLATE	4	
-13	0752614-1	DOME-SPINNER	1	
		ATTACHING PARTS		
-14	AN520-10R7	SCREW	8	
-15	NAS221-8	SCREW	14	
		---*---		
-16	0752615-2	SUPPORT-SPINNER	1	
-17	0752620-1	SPACER	AR	
-18	0752619-3	PROPELLER ASSEMBLY-MODEL BHC-C2YF-1/8468-2	1	
		82 IN DIA HTP SEE FIGURE 60		
		ATTACHING PARTS		
-19	A2429	STUD	6	
-20	AN960-816	WASHER	6	
-21	AN355-8	NUT	6	
-22	.5002X1 1/8	PIN-DOWEL	2	
		---*---		
		SPINNER ASSEMBLY-HARTZELL PROPELLER	NP	
		ATTACHING PARTS		
-23	A2433	BOLT	4	
-24	AN960-616	WASHER	8	
-25	A2246-1	SPACER	4	
-26	AN363-624	NUT	4	
		---*---		
-27	0752618-1	BULKHEAD ASSEMBLY-SPINNER	1	
-28	NAS680A3	NUTPLATE	12	
-29	0752617-1	FILLET ASSEMBLY-SPINNER	2	
		ATTACHING PARTS		
	NAS221-8	SCREW	4	
		---*---		
-30	NAS680A3	NUTPLATE	4	
-31	0752616-1	DOME-SPINNER	1	
		ATTACHING PARTS		
-32	NAS221-8	SCREW	12	
		---*---		
-33	0752615-1	SUPPORT-SPINNER	1	
-34	0752620-1	SPACER	AR	
-35	0752621-1	SUPPORT BULKHEAD-SPINNER	1	
		ATTACHING PARTS		
-36	AN520-416R6	SCREW	4	
-37	AN960D416	WASHER	4	
-38	AN935-416	LOCKWASHER	4	
		---*---		
		A---182 SERIAL 18253599 THRU 18254275		
		B---182 SERIAL 18254276 THRU 18255844		
		C---182 SERIAL 18253599 THRU 18255844		

Propeller (Cont)

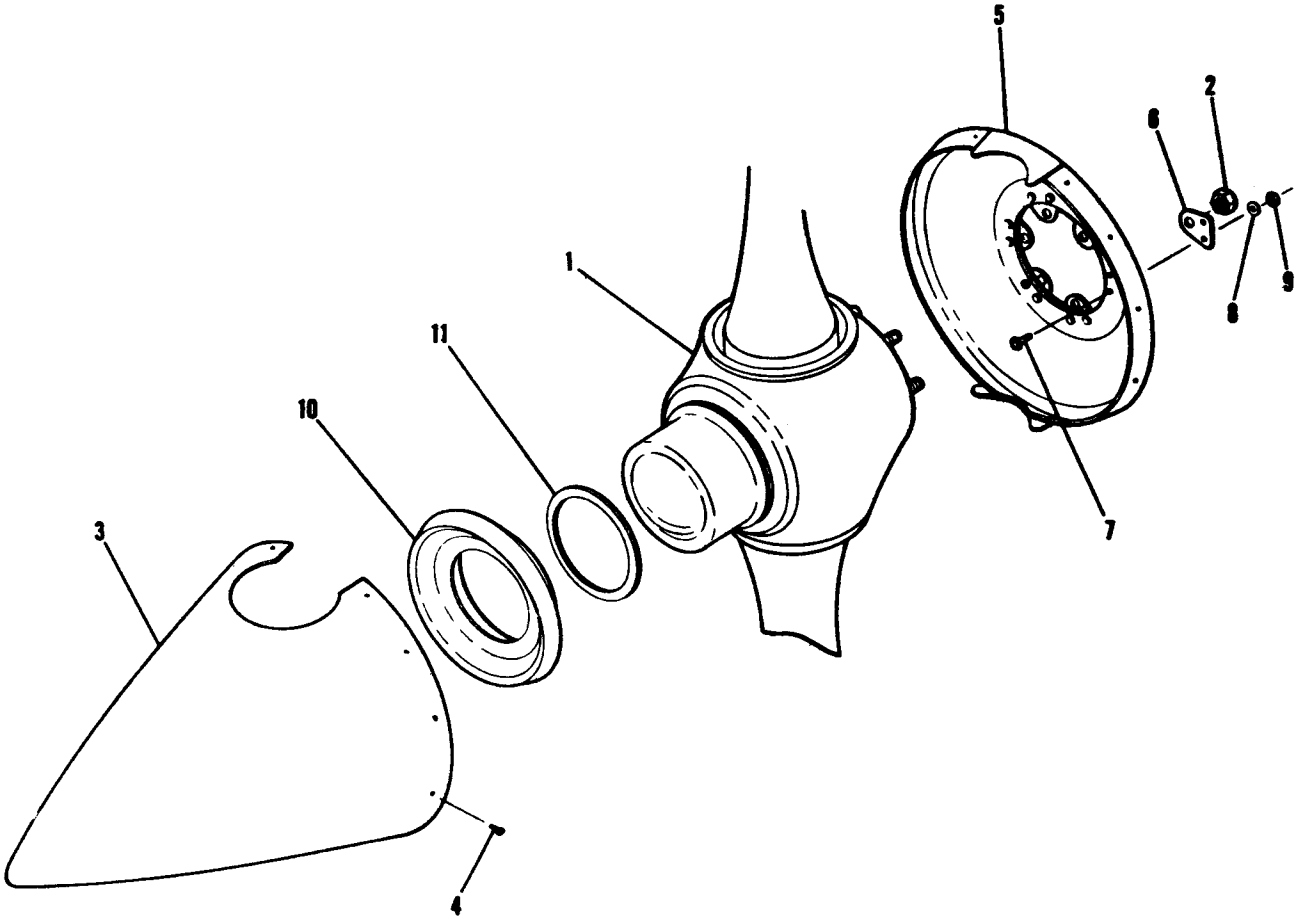


182 SERIAL 18255845 THRU 18262465

Figure 58A. Propeller Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
58A-		PROPELLER INSTALLATION	NP	A
- 1	SEE FIG 59A	PROPELLER ASSEMBLY	1	B
	SEE FIG 59B	PROPELLER ASSEMBLY	1	C
		ATTACHING PARTS		
- 2	A1639-2	NUT MCL	6	
		---*---		
- 3	0752637-5	DOME ASSEMBLY-SPINNER	1	B
	0752637-11	DOME ASSEMBLY-SPINNER	1	C
		ATTACHING PARTS		
- 4	NAS221-8	SCREW	14	
		---*---		
- 5	0752637-1	BULKHEAD ASSEMBLY	1	
		ATTACHING PARTS		
- 6	0752005-4	LUG	6	
- 7	AN3-4A	BOLT	12	
- 8	AN960-10	WASHER	12	
- 9	MS21044N3	NUT	12	
		---*---		
-10	1250412-1	SUPPORT-SPINNER	1	
-11	0752620-1	SPACER-SPINNER SUPPORT	AR	
		A---182 SERIAL 18255845 THRU 18262465 18259615 THRU 18262465 B---182 SERIAL 18255845 THRU 18259421 18259430 THRU 18259614 A182 SERIAL A182-0001 THRU A182-0116 C---182 SERIAL 18259422 18259429 18259615 THRU 18262465 A182 SERIAL A182-0117 & ON		

Propeller (Cont)

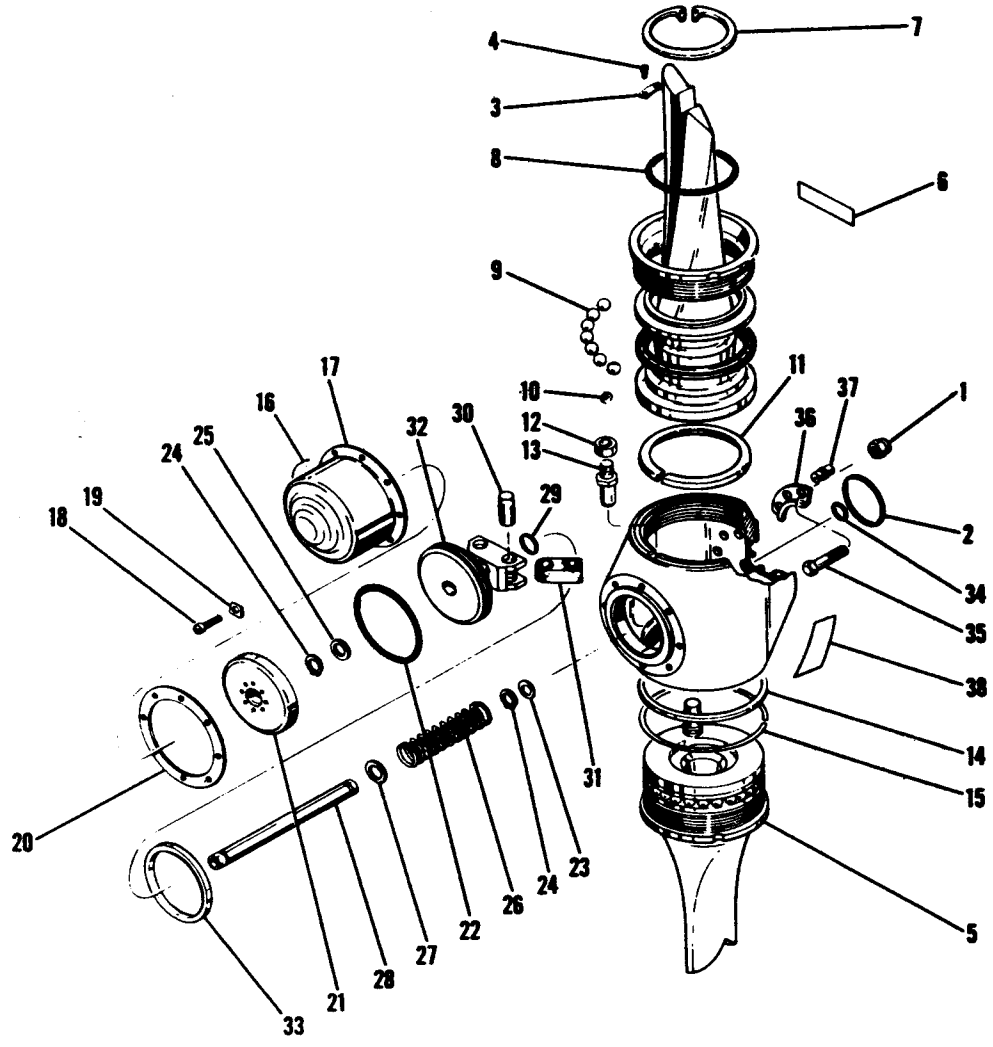


182 SERIAL 18253599 THRU 18254275

Figure 59. McCauley Propeller Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
59 -	0752024-3	PROPELLER ASSEMBLY-MODEL 2A36C29/90M8 82IN DIA MCL WHEN EXHAUSTED USE 0752024-12 SEE FIGURE 59A ATTACHING PARTS	1	A
- 1	A1639-2	NUT MCL	6	
- 2	A1633-3	PACKING-O RING MCL ---*---	1	
- 3	A2104	WEIGHT-BALANCE MCL ATTACHING PARTS	AR	
- 4	A1635-16	SCREW-ATTACH ONE WEIGHT MCL	AR	
	A1635-17	SCREW-ATTACH TWO WEIGHTS MCL	AR	
	A1635-18	SCREW-ATTACH THREE WEIGHTS MCL	AR	
	A1635-19	SCREW-ATTACH FOUR WEIGHTS MCL	AR	
	A1635-21	SCREW-ATTACH FIVE WEIGHTS MCL	AR	
	A1635-22	SCREW-ATTACH SIX WEIGHTS MCL ---*---	AR	
- 5	D2341/90M-8	BLADE ASSEMBLY-82 INCH DIA MCL	2	
- 6	A1958	DECAL MCL	1	
- 7	A1636-6	RING-EXTERNAL RETAINING MCL	1	
- 8	A1633-13	PACKING-O RING MCL	1	
- 9	A1634-4	BALL BEARING MCL	22	
-10	A1742	SEPARATOR-BALL MCL	22	
-11	B2289-1	SHIM-FERRULE 0.005 IN MCL	AR	
	B2289-2	SHIM-FERRULE 0.010 IN MCL	AR	
	B2289-3	SHIM-FERRULE 0.015 IN MCL	AR	
-12	A1883	WASHER-ACTUATING PIN MCL	1	
-13	A1882	PIN-BLADE ACTUATING MCL	1	
-14	B1564	RING-RETENTION NUT LOCK MCL	2	
-15	A1563-1	SHIM-BALANCING MCL	2	
-16	A2356	DECAL-SPRING KIT INSTALLATION MCL	1	
-17	C1904	CYLINDER MCL ATTACHING PARTS	1	
-18	A1635-65	SCREW MCL	8	
-19	B2192	WASHER MCL	8	
-20	A1938	GASKET-CYLINDER MCL ---*---	1	
-21	B1965	SUPPORT-SPACER MCL	1	
-22	A1633-12	PACKING-O RING MCL	1	
-23	A2351	WASHER-FIBER MCL	1	
-24	A1636-7	RING-EXTERNAL RETAINING MCL	2	
-25	A2108-278	SPACER-LOW PITCH STOP MCL	1	
-26	A2357	SPRING-LOW PITCH RETURN BOOST MCL	1	
-27	A1552	WASHER-SPRING MCL	1	
-28	B2345	TUBE-PISTON ROD MCL	1	
-29	A1633-9	PACKING-O RING MCL	1	
	A1934	PISTON ASSEMBLY MCL	1	
-30	A1936	PIN-PISTON MCL	2	
-31	A1935	LINK-BLADE ACTUATING MCL	2	
-32	C1939	PISTON-BLADE ACTUATING MCL	1	
-33	A1937	SPACER-HIGH PITCH STOP MCL	1	
-34	A1633-9	PACKING-O RING MCL	1	
	C2343	HUB ASSEMBLY MCL	1	
-35	A1561-2	BOLT-HUB MOUNTING MCL	6	
	A1561-4	BOLT-HUB MOUNTING 0.002 IN. OVERSIZE MCL	AR	
	A1561-6	BOLT-HUB MOUNTING 0.004 IN. OVERSIZE MCL	AR	
-36	A2185	WASHER-FLANGE MCL	3	
-37	A1562	DOWEL-HUB ALIGNMENT MCL	2	
-38	A2230	DECAL-PROP INSTALLATION INSTRUCTIONS MCL	1	
		A---182 SERIAL 18253599 THRU 18254275		

Propeller (Cont)

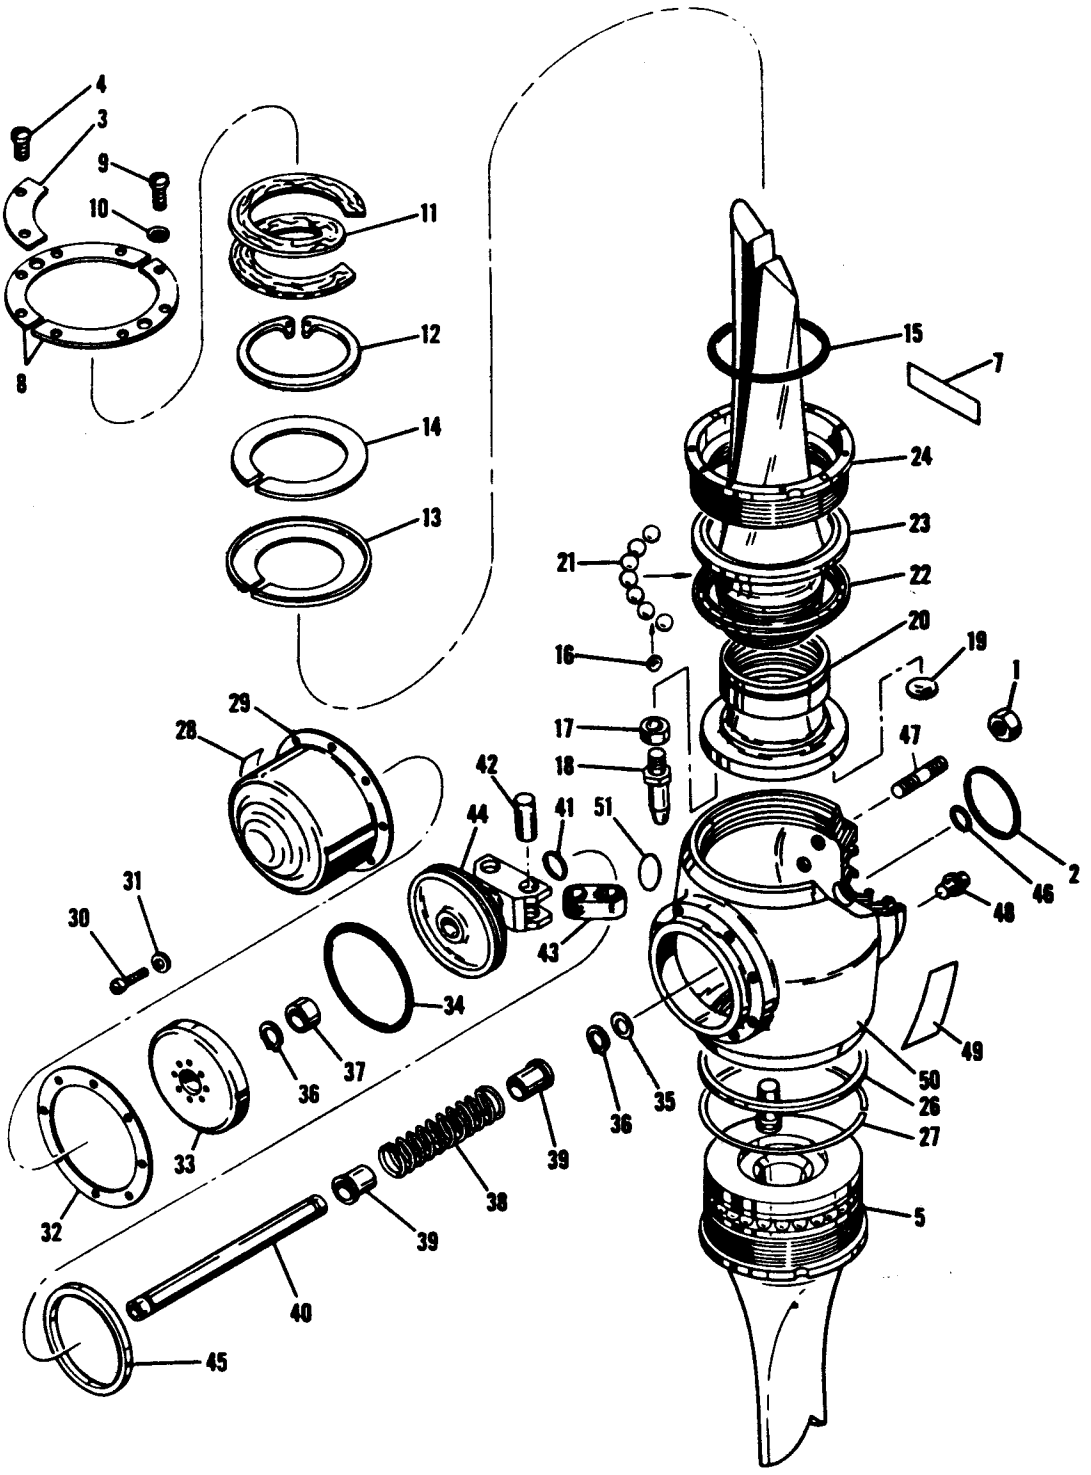

182 SERIAL 18254276 THRU 18259421


Figure 59A. Mc Cauley Propeller Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
59A-	C161002-0202	PROPELLER ASSEMBLY-MC CAULEY 2A34C50/90A-8 82 IN. DIA. ----	1	A
		WHEN EXHAUSTED USE C161002-0201		
	C161002-0201	PROPELLER ASSEMBLY-MC CAULEY 2A34C66/90AT-8 82 IN DIA -----	1	B
- 1	A1639-2	NUT MCL ----------	6	
- 2	A1633-3	PACKING-O RING MCL ----------	1	
		---*---		
- 3	A2423	WEIGHT-BALANCE MCL ----------	AR	
		ATTACHING PARTS		
- 4	A1635-16	SCREW-ATTACH ONE WEIGHT MCL ----------	2	
	A1635-17	SCREW-ATTACH TWO WEIGHTS MCL ----------	2	
	A1635-18	SCREW-ATTACH THREE WEIGHTS MCL ----------	2	
	A1635-19	SCREW-ATTACH FOUR WEIGHTS MCL ----------	2	
	A1635-21	SCREW-ATTACH FIVE WEIGHTS MCL ----------	2	
	A1635-22	SCREW-ATTACH SIX WEIGHTS MCL ----------	2	
		---*---		
- 5	D3108/90A-8	BLADE ASSEMBLY MCL ----------	2	A
	D3223/90AT-8	BLADE ASSEMBLY MCL ----------	2	B
- 6		DELETED-NON PROCURABLE ----------	1	
- 7	A1958	DECAL MCL ----------	1	
- 8	B2417	PLATE-SPLIT COVER MCL ----------	1	
		ATTACHING PARTS		
- 9	A1635-27	SCREW MCL ----------	AR	
-10	A1638-5	WASHER-FIBER MCL ----------	AR	
		---*---		
-11	B2422-1	PACKING-FELT MCL ----------	1	
-12	A1636-6	RING-EXTERNAL RETAINING MCL ----------	1	
-13	B2420-4	SHIM-0.004 IN. MCL ----------	AR	
	B2420-6	SHIM-0.006 IN. MCL ----------	AR	
-14	B2421-8	SHIM-0.008 IN. MCL ----------	AR	
	B2421-10	SHIM-0.010 IN. MCL ----------	AR	
	B2421-12	SHIM-0.012 IN. MCL ----------	AR	
	B2421-14	SHIM-0.014 IN. MCL ----------	AR	
	B2421-16	SHIM-0.016 IN. MCL ----------	AR	
	B2421-18	SHIM-0.018 IN. MCL ----------	AR	
	B2421-20	SHIM-0.020 IN. MCL ----------	AR	
-15	A1633-13	PACKING-O RING MCL ----------	1	
-16	A3110	SEPARATOR-BALL MCL ----------	30	
-17	A3100	WASHER-ACTUATING PIN MCL ----------	1	
-18	A3149	PIN-BLADE ACTUATING MCL ----------	1	
-19	A1580	PLUG-FERRULE STAKING MCL ----------	1	
-20	C3054	FERRULE-BLADE RETENTION MCL ----------	1	
	C2987	BEARING-BLADE RETENTION MCL ----------	1	
-21	A1634-5	BALL-BEARING MCL ----------	30	
-22	C2987-1	RACE-INNER MCL ----------	1	
-23	C2987-2	RACE-OUTER MCL ----------	1	
-24	C3092	NUT-BLADE RETENTION MCL ----------	1	
-25		DELETED, NOT PROCURABLE ----------		
-26	B3216	RING-RETENTION NUT LOCK MCL ----------	2	
-27	A3217	SHIM-BALANCING MCL ----------	2	
-28	A2356	DECAL MCL ----------	1	
-29	C1904	CYLINDER MCL ----------	1	
		ATTACHING PARTS		
-30	A1635-65	SCREW MCL ----------	8	
-31	A1638-9	WASHER-BRASS MCL ----------	8	
-32	A1938	GASKET-CYLINDER MCL ----------	1	
		---*---		
-33	B1965	SUPPORT-SPACER MCL ----------	1	
-34	A1633-12	PACKING-O RING MCL ----------	1	
-35	A2351	WASHER-FIBER MCL ----------	1	
-36	A1636-7	RING-EXTERNAL RETAINING MCL ----------	2	
-37	A2108 *	SPACER STOCK-LOW PITCH STOP MCL ----------	AR	
-38	A3125	SPRING-LOW PITCH RETURN BOOST MCL ----------	1	
-39	A3124	GUIDE-SPRING MCL ----------	2	
-40	B2345	TUBE-PISTON ROD MCL ----------	1	
-41	A1633-9	PACKING-O RING MCL ----------	1	
	A1934	PISTON ASSEMBLY MCL ----------	1	
-42	A1936	PIN-PISTON MCL ----------	2	
-43	A1935	LINK-BLADE ACTUATING MCL ----------	2	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
59A-44	C1939	PISTON-BLADE ACTUATING MCL	1	
-45	A1937 *	SPACER STOCK-HIGH PITCH STOP MCL	AR	
-46	A1633-9	PACKING-O RING MCL	1	
	C3105	HUB ASSEMBLY MCL	1	
-47	B3099	STUD-HUB MOUNTING MCL	6	
-48	A3047	DOWEL-HUB ALIGNMENT MCL	2	
	A3047-30	DOWEL-HUB ALIGNMENT 0.0015 IN. OVERSIZE MCL	AR	
	A3047-45	DOWEL-HUB ALIGNMENT 0.0030 IN. OVERSIZE MCL	AR	
-49	A2230	DECAL-PROP INSTALLATION INSTRUCTIONS MCL	1	
-50	D3102	HUB-PROPELLER MCL	1	
-51	S1433-2	LABEL-CESSNA	1	
		NOTE. *FURNISHED IN 3-1/2 IN. STOCK LENGTHS. PROPER THICKNESS TO BE DETERMINED AND CUT AT REASSEMBLY		
		A---182 SERIAL 18254276 THRU 18255844		
		B---182 SERIAL 18255845 THRU 18259421		
		18259430 THRU 18259614		
		A182 SERIAL A182-0001 THRU A182-0116		

Propeller (Cont)

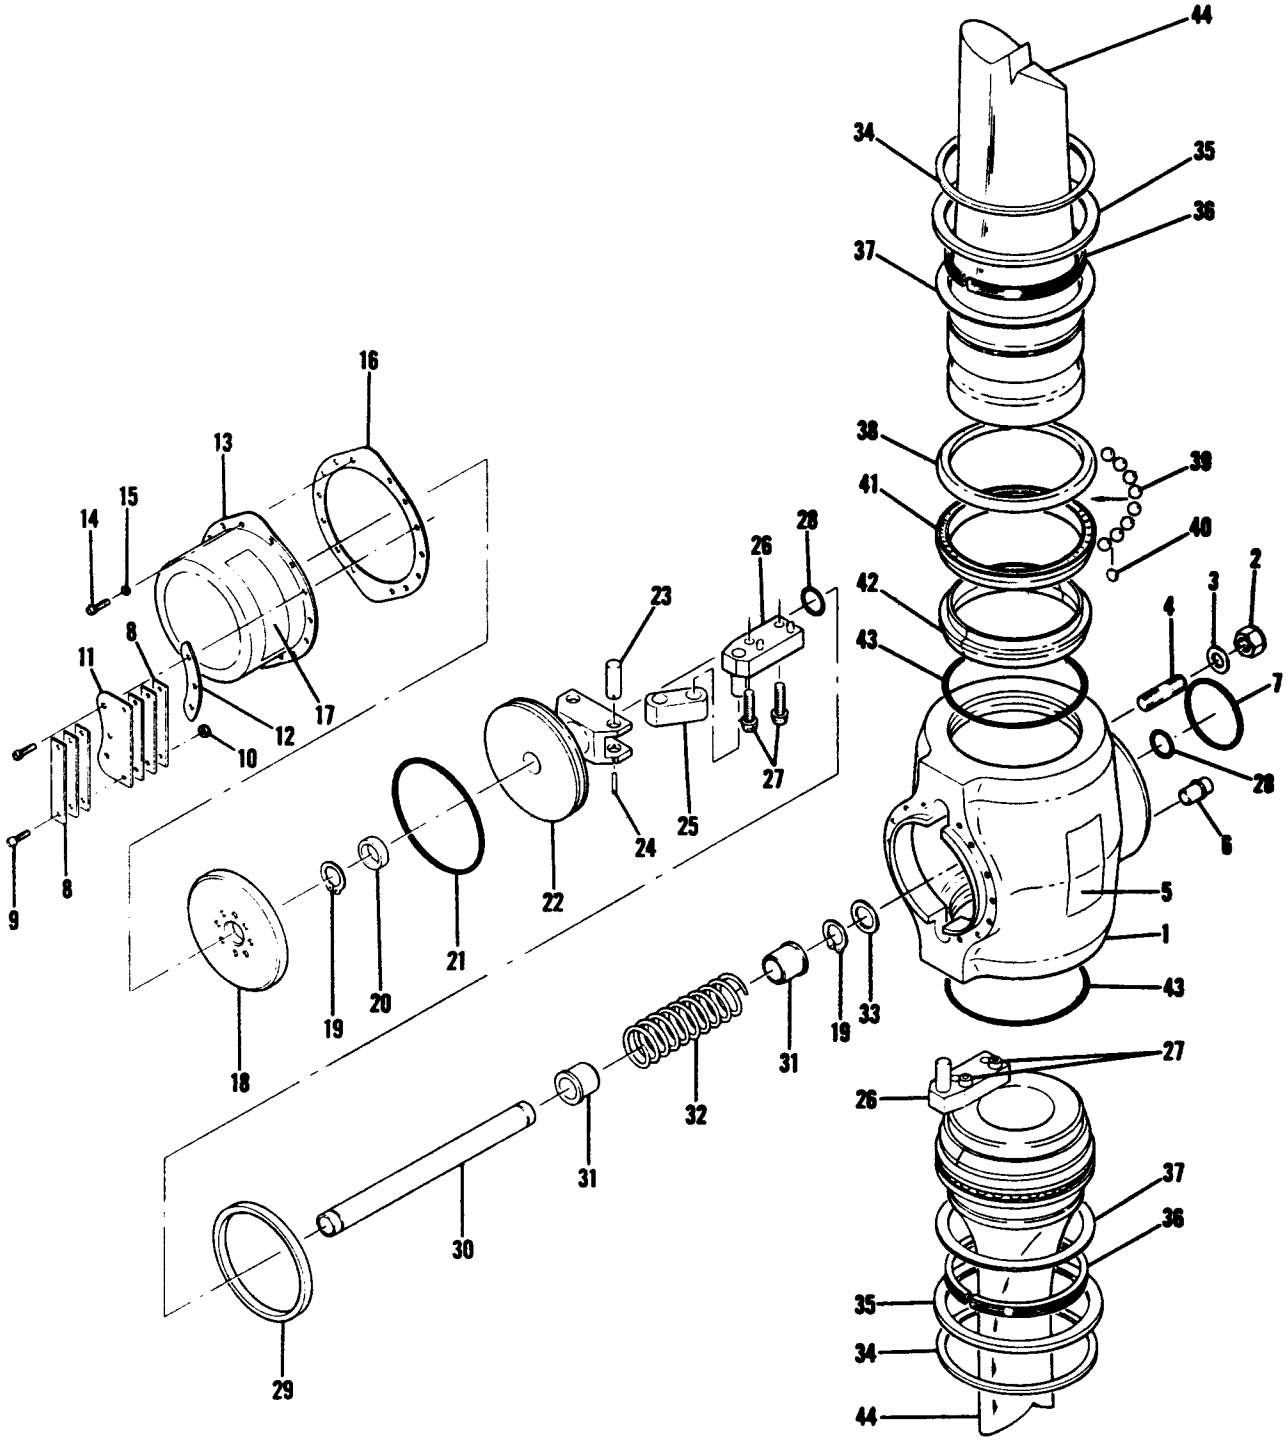


182 SERIAL 18259422 THRU 18262465

Figure 59B. McCauley Propeller Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
598-	C161009-0101	PROPELLER ASSEMBLY-MCCAULEY 2A34C201/90A-8 82 IN DIA	1	A
- 1	C3910	HUB ASSEMBLY MCL	1	
		ATTACHING PARTS		
- 2	A1639-2	NUT-HUB MOUNTING MCL	6	
- 3	A1638-2	WASHER MCL	6	
		---*---		
- 4	B3920	STUD MCL	6	
- 5	A2230	PLACARD MCL	1	
- 6	A4001	DOWEL-HUB ALIGNMENT MCL	2	
- 7	A1633-3	O-RING MCL	1	
- 8	A3906	WEIGHT-BALANCE MCL	AR	
- 9	A1635-36	SCREW ATTACH ONE WEIGHT MCL	2	
	A1635-37	SCREW ATTACH TWO WEIGHTS MCL	2	
	A1635-40	SCREW ATTACH THREE WEIGHTS MCL	2	
	A1635-67	SCREW ATTACH FOUR WEIGHTS MCL	2	
	A1635-56	SCREW ATTACH FIVE WEIGHTS MCL	2	
	A1635-68	SCREW ATTACH SIX WEIGHTS MCL	2	
-10	A1639-23	NUT MCL	2	
-11	B3908	BRACKET-BALANCE WEIGHT USE WITH A3906 ONLY MCL	AR	
-12	B4016	GASKET MCL	AR	
-13	C4129	CYLINDER MCL	1	
		ATTACHING PARTS		
-14	A1635-65	SCREW MCL	14	
-15	A1638-9	WASHER NOT USED WITH WEIGHT BRACKETS MCL	AR	
-16	B4138	GASKET-CYLINDER MCL	1	
		---*---		
-17	A2356	PLACARD MCL	1	
-18	B3526	SUPPORT-SPACER MCL	1	
-19	A1636-7	RING-RETAINING MCL	2	
-20	A2108	SPACER-LOW PITCH STOP MCL	1	
-21	A1633-12	O-RING MCL	1	
-22	C3418	PISTON-BLADE ACTUATING MCL	1	
-23	B3414	PIN-PISTON ROD MCL	2	
-24	A3150-5	ROLL PIN MCL	2	
-25	A3902	LINK-BLADE ACTUATOR MCL	2	
-26	B3905	ACTUATING PIN & BASE ASSEMBLY MCL	2	
		ATTACHING PARTS		
-27	A1635-66	CAP SCREW MCL	2	
		---*---		
-28	A1633-9	O-RING MCL	2	
-29	A1937	SPACER-HIGH PITCH STOP MCL	1	
-30	B2345	TUBE-PISTON ROD MCL	1	
-31	A3124	GUIDE-SPRING MCL	2	
-32	A3125	SPRING-PITCH RETURN MCL	1	
-33	A2351	WASHER-FIBER MCL	1	
-34	B4024	NUT-LOCK MCL	2	
-35	B4023	NUT-BLADE MCL	2	
-36	B4022	RING-BLADE MCL	2	
-37	B4017	SHIM MCL	2	
-38	C3411-2	RACE-OUTER MCL	2	
-39	A1634-6	BALL BEARING MCL	80	
-40	B4014	SEPERATOR-BALL MCL	80	
-41	C3411-1	RACE-INNER MCL	1	
-42	C3903	RETAINER-SPLIT MATCHED SET MCL	2	
-43	A1633-37	O-RING MCL	2	
-44	90DA-8	BLADE MCL	2	

A---182 SERIAL 18259422 THRU 18259429
18259615 THRU 18262465
A182 SERIAL A182-0117 & ON

Propeller (Cont)

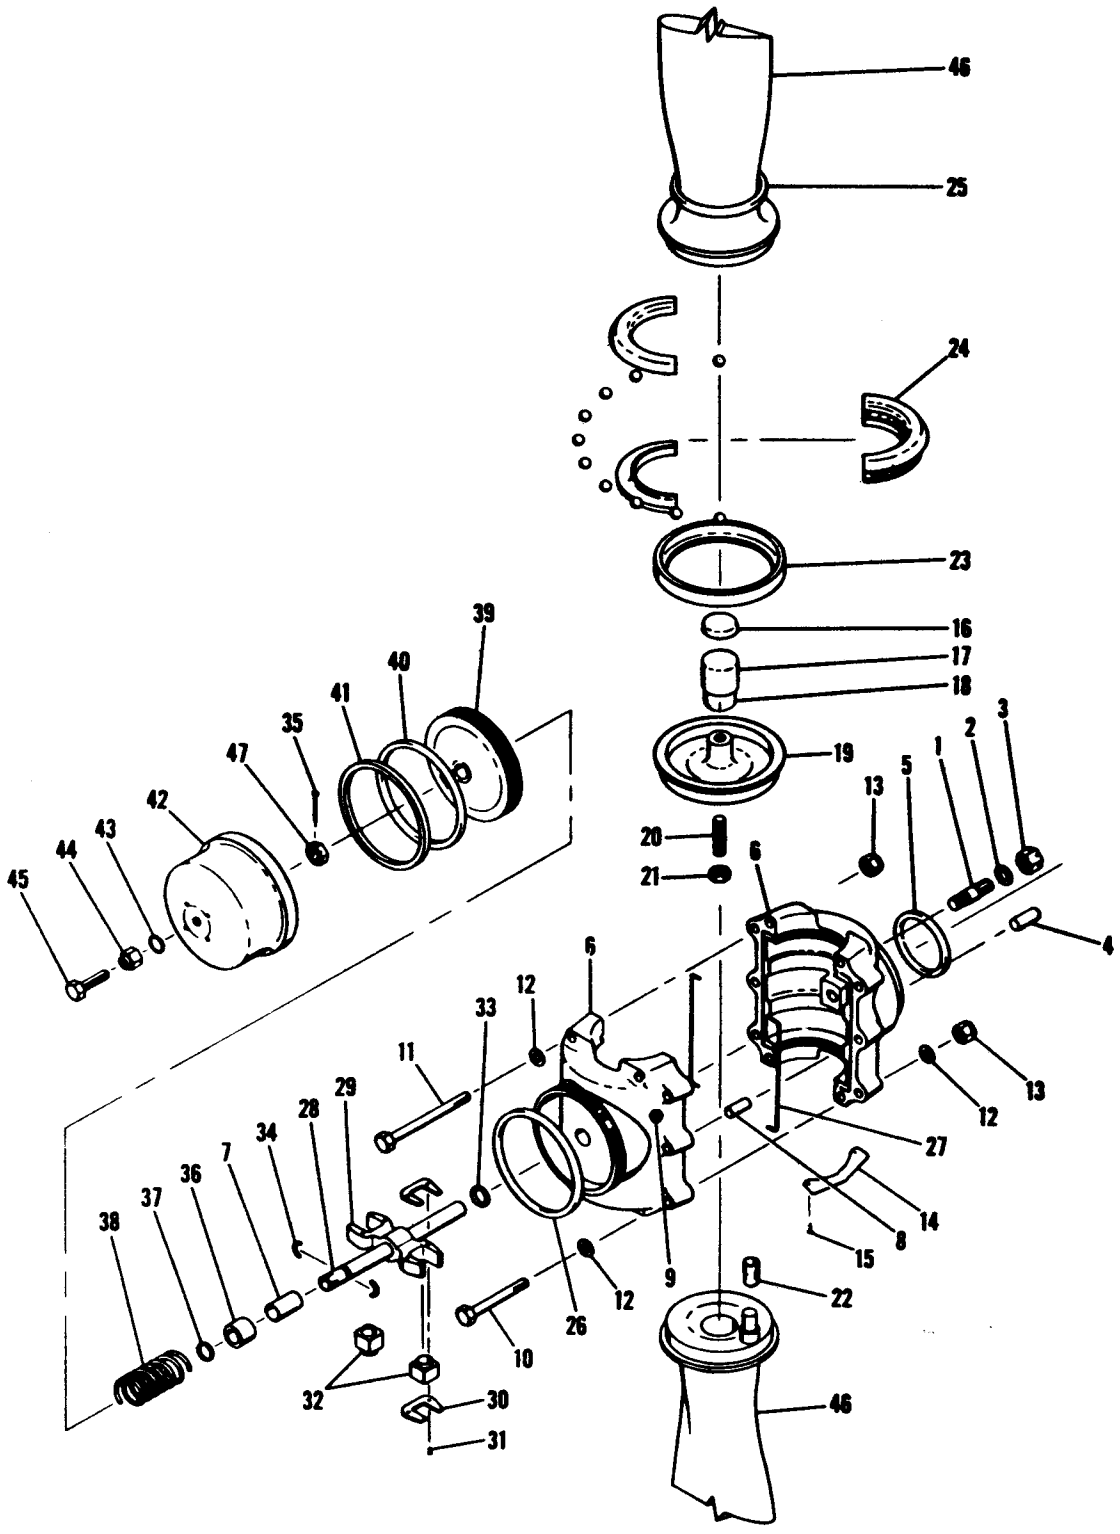


182 SERIAL 18253599 THRU 18255058

Figure 60. Hartzell Propeller Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
60 -	0752619-3	PROPELLER ASSEMBLY BHC-C2YF-1 8469-2 82 IN. DIA. HTP	1	A
		ATTACHING PARTS		
- 1	A2429	STUD HTP	6	
- 2	AN960-816	WASHER	6	
- 3	AN355-8	NUT	6	
- 4	.5002DIA X1 1/8	PIN-DOWEL	2	
- 5	AN6230B6	O RING-HUB MOUNTING	1	
		---*---		
	D2201	HUB UNIT HTP	1	
- 6	D2201-1DET1	HUB HTP	1	
- 7	A2245	BUSHING-PLASTIC HTP	1	
- 8	A2249	BUSHING-GUIDE HTP	1	
- 9	MS15001-1	FITTING-LUBRICATION	4	
-10	A2431	BOLT HTP	6	
-11	AN6DD51A	BOLT HTP	4	
-12	AN960-616	WASHER	6	
-13	NAS679A6	NUT	10	
-14	A2424	WEIGHT-BALANCE HTP	AR	
		ATTACHING PARTS		
-15	AN501A10-10	SCREW	2	
		---*---		
-16	A2414	PLUG-BLADE HTP	2	
-17	M20201	BEARING TOR	2	
-18	I.R.1616	BEARING TOR	2	
-19	B2222	PLATE-BLADE PRELOAD HTP	2	
-20	5/16-24X1 3/4	SCREW-SOCKET HEAD SET	2	
-21	AN316-5R	NUT-JAMB	2	
-22	A2413	BUSHING-PITCH CHANGE HTP	2	
-23	A2204	RING-BEARING GUIDE HTP	2	
-24	A2202	BEARING HTP	2	
-25	AN6227B42	O RING	2	
-26	AN6230B25	O RING	1	
-27	A2436	SEAL-HUB HTP	2	
-28	A2418	ROD-PISTON HTP	1	
-29	B2410	FORK-PITCH CHANGE HTP	1	
-30	A2412	PLATE-FORK HTP	4	
-31	3/32X1 1/8	RIVET-BRASS	4	
-32	A2217	BLOCK-PITCH CHANGE HTP	2	
-33	AN6227B13	O RING	1	
-34	A2430	RETAINER-SPLIT HTP	1	
-35	MS24665-355	PIN-COTTER	1	
-36	A2420	SPACER-HIGH STOP HTP	1	
-37	MS28775-018	O RING	1	
-38	A2213	SPRING HTP	1	
-39	B2419	PISTON HTP	1	
-40	AN6227B51	O RING	1	
-41	B1843	SEAL-FELT HTP	1	
-42	B2428	CYLINDER HTP	1	
-43	7000-3/8	SEAL	1	
-44	NAS679A6	NUT	1	
-45	A2421	BOLT-LOW STOP HTP	1	
-46	B468-2	BLADE-PROPELLER HTP	2	
-47	A2211	NUT-PISTON HTP	1	
		A---182 SERIAL 18253599 THRU 18255058		

Cowling

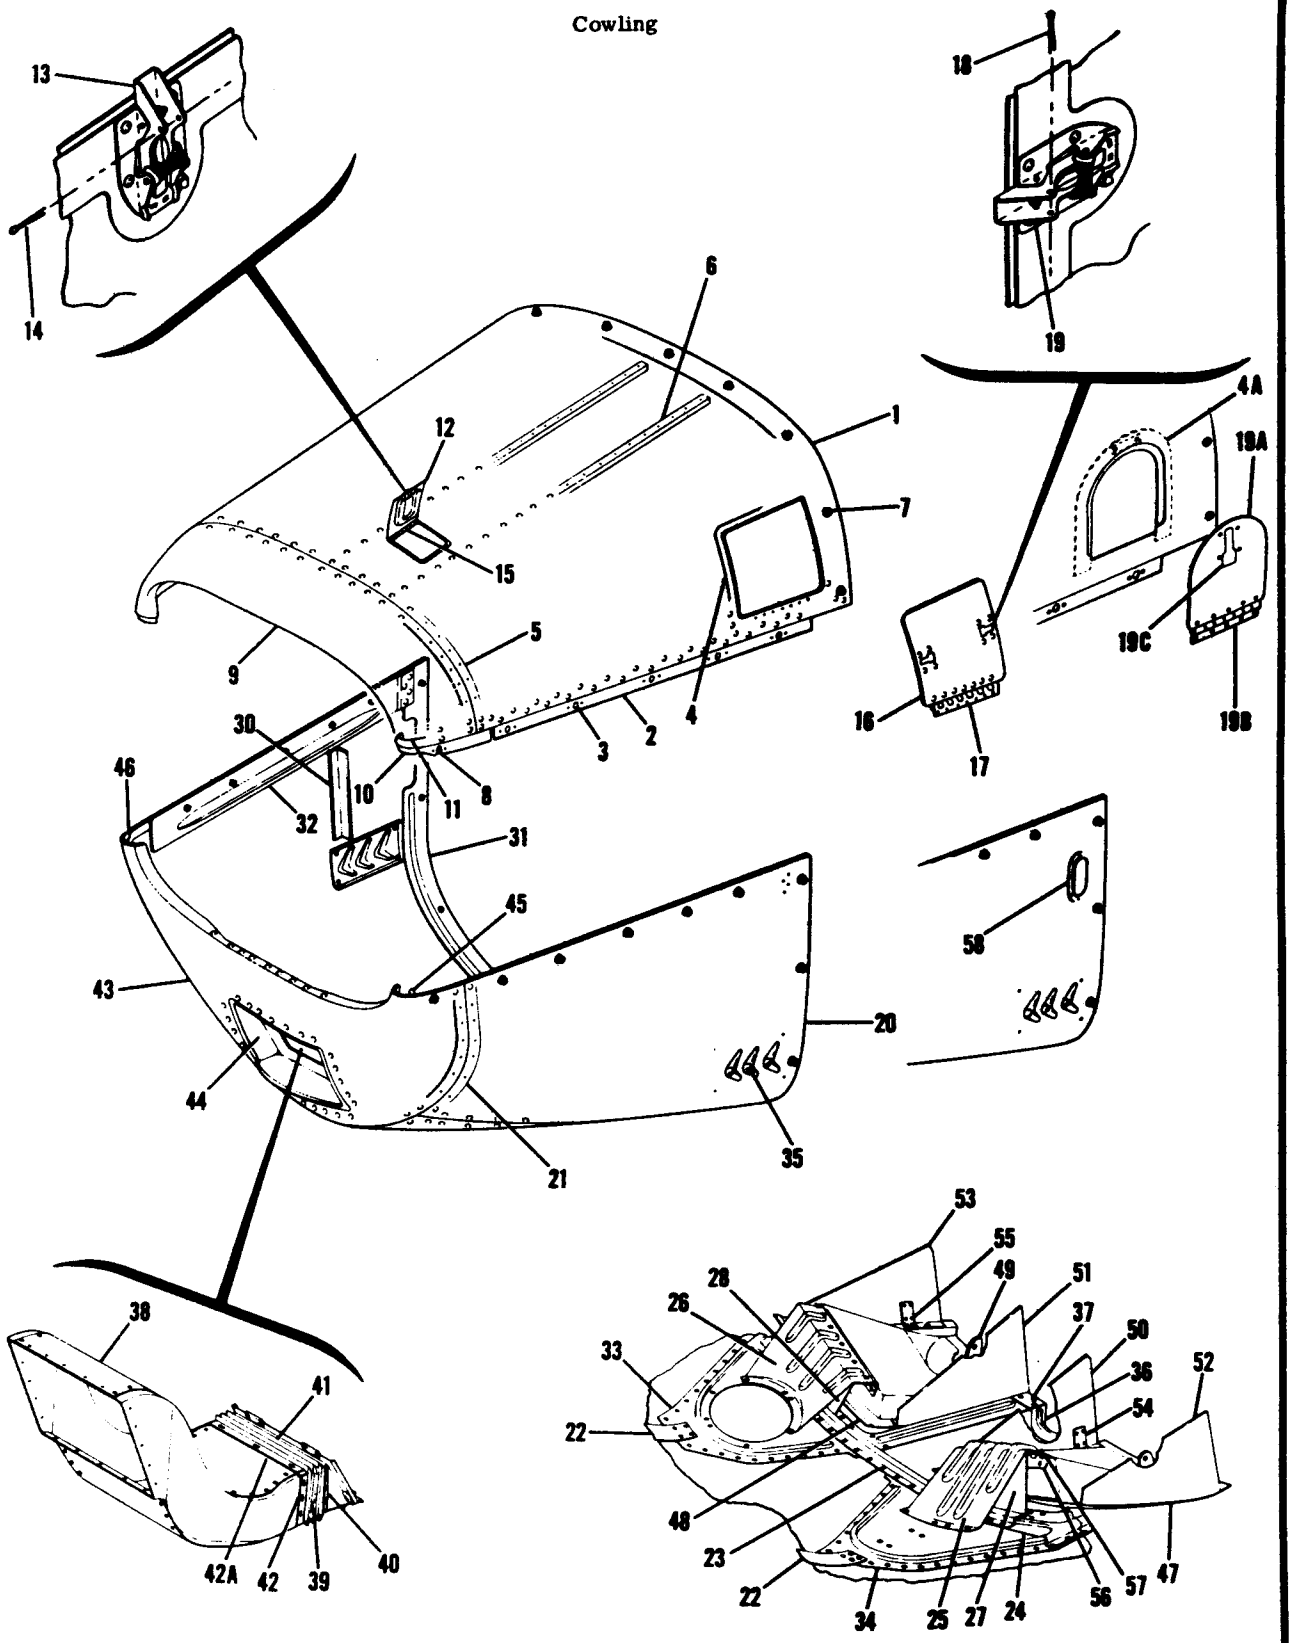

182 SERIAL 18253599 THRU 18255844


Figure 61. Engine Cowl Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
61 -		COWL ASSEMBLY-ENGINE	NP	C
- 1	0752600-3	COWL ASSEMBLY-UPPER LESS ACCESS DOOR	1	A
	0752600-25	COWL ASSEMBLY-UPPER LESS ACCESS DOOR	1	B
- 2	0752600-17	STRIP-PARTING LH	1	
	0752600-18	STRIP-PARTING RH	1	
- 3	4002-244-16	RECEPTACLE CLC	10	
	0752600-7	SKIN ASSEMBLY-UPPER	1	A
	0752600-26	SKIN ASSEMBLY-UPPER	1	B
- 4	0752000-64	SPACER-LATCH	3	A
- 4A	0752000-64	SPACER-LATCH	1	B
- 5	0752031-22	STRIP-SPLICE	1	
- 6	0752031-26	ANGLE-UPPER COWL	2	
- 7	CM2791	SNAP RING	10	
	4002-M	GROMMET CLC	10	
	4002-4	STUD CLC	10	
- 8	0752032-1	RECEPTACLE	2	
- 9	0752030-7	NOSE CAP ASSEMBLY-UPPER	1	
-10	0752030-5	DOUBLER-NOSE CAP SPLICE LH	1	
	0752030-6	DOUBLER-NOSE CAP SPLICE RH	1	
	0752019-11	STRAP-REINFORCING	1	
-11	0752019-10	STRAP-REINFORCING	1	
-12	0752000-56	DOOR ASSEMBLY-OIL	1	
-13	S1188-1	LATCH-DOOR HWL	1	
-14	MS24665-134	PIN-COTTER	1	
-15	0752000-117	HINGE ASSEMBLY-OIL DOOR	1	
-16	0752605-1	DOOR ASSEMBLY-COWL ACCESS	1	A
-17	0752605-7	HINGE ASSEMBLY	1	A
-18	MS20253-2-596	PIN-COTTER	1	A
-19	S1188-1	LATCH-DOOR HWL	2	A
-19A	0752624-1	DOOR ASSEMBLY-COWL ACCESS	1	B
-19B	1452225-5	HINGE ASSEMBLY	1	B
	MS20253-2-4.04	HINGE PIN	1	
-19C	S1188-1	LATCH-DOOR	1	B
-20	0752600-200	COWL ASSEMBLY-LOWER LESS FLAPS	1	A
	0752600-201	COWL ASSEMBLY-LOWER LESS FLAPS	1	B
-21	0752015-10	DOUBLER-LOWER NOSE CAP	1	
-22	0752600-21	DOUBLER-COWL SPLICE LOWER	2	A
	0752600-21	DOUBLER-COWL SPLICE LOWER LH	1	B
	0752600-31	DOUBLER-COWL SPLICE LOWER RH	1	B
-23	0752606-1	STIFFENER-LOWER COWL	1	
-24	0752612-1	REINFORCEMENT-COWL DOUBLER LH	1	
	0752612-2	REINFORCEMENT-COWL DOUBLER RH	1	
-25	0752609-13	BRACKET-HINGE LH	1	
-26	0752609-14	BRACKET-HINGE RH	1	
-27	0752609-15	BRACKET-HINGE LH	1	
-28	0752609-16	BRACKET-HINGE RH	1	
-29		DELETED, NOT PROCURABLE		
-30	0752600-23	REINFORCEMENT-COWL	2	
	0752600-5	SKIN ASSEMBLY-LOWER COWL SIDE LH	1	
	0752600-6	SKIN ASSEMBLY-LOWER COWL SIDE RH	1	A
	0752600-32	SKIN ASSEMBLY-LOWER COWL SIDE RH	1	B
-31	0752600-20	DOUBLER-AFT RH	1	
	0752600-19	DOUBLER-AFT LH	1	
-32	0752600-14	DOUBLER-LOWER PARTING RH	1	
	0752600-13	DOUBLER-LOWER PARTING LH	1	
-33	0752604-4	DOUBLER-LOWER AFT RH	1	A
	0752604-3	DOUBLER-LOWER AFT RH WHEN EXHAUSTED USE 0752604-6	1	B
	0752604-6	DOUBLER-LOWER AFT RH	1	B
-34	0752604-1	DOUBLER-LOWER AFT LH WHEN EXHAUSTED USE 0752604-5	1	
	0752604-5	DOUBLER-LOWER AFT LH	1	
-35	0752608-1	LOUVER-LH	1	
	0752608-2	LOUVER-RH	1	
	0752600-4	SKIN ASSEMBLY-LOWER CENTER	1	A
	0752600-33	SKIN ASSEMBLY-LOWER CENTER	1	B
-36	0752607-1	DOUBLER-NOSE GEAR STRUT OPENING	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
61 -37	CM2791	SNAP RING	20	
	4002-H	GROMMET CLC	20	
	4002-4	STUD CLC	20	
-38	0752602-1	DUCT ASSEMBLY-CARBURETOR AIR INTAKE	1	
-39	0752016-8	EXPANDER ASSEMBLY WEU 0752016-12	1	
	0752016-12	EXPANDER ASSEMBLY	1	
	0752016-7	BOOT-EXPANDER	1	
	0752016-10	SEAL TOP & BOTTOM	2	
	0752016-11	SEAL SIDES	2	
	S1853-3	RECEPTACLE ALIC	2	
	0752021-1	CLIP	1	
-40	0752023-1	STRIP-SIDE	2	
-41	0752023-2	STRIP-TOP & BOTTOM	2	
-42	0752023-1	STRIP-SIDE	2	
-42A	0752023-2	STRIP-TOP & BOTTOM	2	
-43	0752601-1	NOSE CAP ASSEMBLY-LOWER	1	
-44	0752603-1	MOUNT-FILTER	1	
-45	0752013-1	CLIP-LH	1	
-46	0752013-2	CLIP-RH	1	
-47	0752609-200	FLAP ASSEMBLY-COWL LH	1	
-48	0752609-201	FLAP ASSEMBLY-COWL RH	1	
-49	0752623-1	BRACKET-COWL FLAP CONTROL	2	
	100PDLT44-6	SHOCKMOUNT LO	1	
-50	0752609-9	BAFFLE-INBOARD LH	1	
-51	0752609-10	BAFFLE-INBOARD RH	1	
-52	0752609-11	BAFFLE-OUTBOARD LH	1	
-53	0752609-12	BAFFLE-OUTBOARD RH	1	
-54	0752609-19	ANGLE-INBOARD	1	
-55	0752609-20	ANGLE-OUTBOARD	1	
	0752609-5	PAN ASSEMBLY-LH	1	
	0752609-6	PAN ASSEMBLY-RH	1	
-56	0752625-200	HINGE ASSEMBLY	1	
-57	0752609-2	PIN-HINGE	1	
-58	0752610-1	DOUBLER ASSEMBLY-RECEPTACLE	1	
		A---182 SERIAL 18253599 THRU 18255058		
		B---182 SERIAL 18255059 THRU 18255844		
		C---182 SERIAL 18253599 THRU 18255844		

Cowling (Cont)

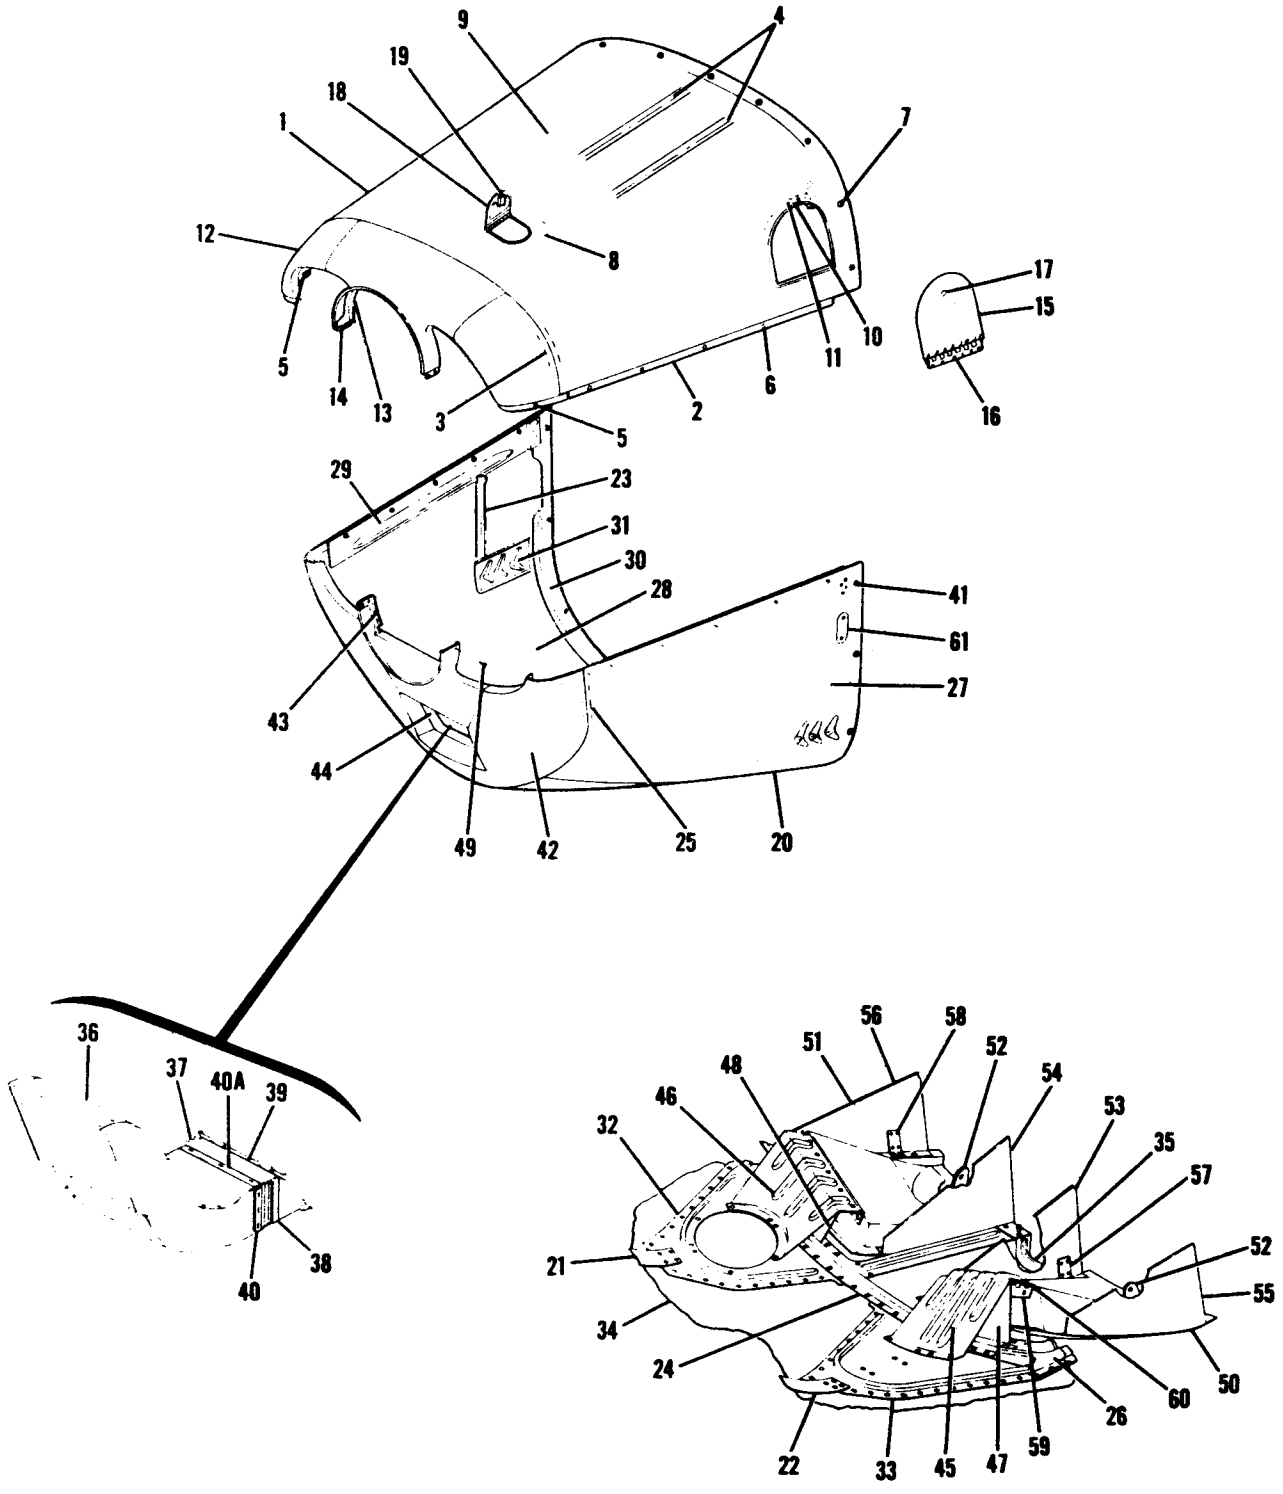

182 SERIAL 18255845 THRU 18260055


Figure 61A. Engine Cowl Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
61A-		COWL ASSEMBLY-ENGINE	NP	A
- 1	0752600-202	COWL ASSEMBLY-UPPER LESS ACCESS DOORS	1	
- 2	0752600-17	PARTING STRIP-LH	1	
	0752600-18	PARTING STRIP-RH	1	
- 3	0752031-22	STRIP	1	
- 4	0752031-26	ANGLE	2	
- 5	0752032-1	RECEPTACLE	2	
- 6	4002-244-16	RECEPTACLE CLC	10	
- 7	4002-4	STUD CLC	10	
	4002-H	GROMMET CLC	10	
	CM2791	SNAP RING	10	
- 8	0752600-37	DOUBLER-OIL DOOR	1	
- 9	0752600-38	SKIN-COWL UPPER	1	
-10	0752635-1	STRIKER-DOOR LATCH	1	
		ATTACHING PARTS		
	0752635-2	SPACER	1	
-11	AN507-632R6	SCREW	2	
	NAS679A06	NUT	2	
		---*---		
-12	0752639-2	NOSE CAP ASSEMBLY-UPPER	1	
-13	0752639-18	DOUBLER-UPPER RH	1	
	0752639-17	DOUBLER-UPPER LH	1	
-14	NAS687A3	NUTPLATE	4	
-15	0752624-8	DOOR ASSEMBLY-ACCESS	1	
-16	1452225-5	HINGE ASSEMBLY	1	
-17	KM610-051	LATCH CLC	1	
-18	1552004-10	DOOR ASSEMBLY-OIL	1	
-19	KM610-.051	LATCH CLC	1	
-20	0752600-203	COWL ASSEMBLY-LOWER LESS FLAPS	1	
-21	0752600-31	DOUBLER-SKIN SPLICE RH	1	
-22	0752600-21	DOUBLER-SKIN SPLICE LH	1	
-23	0752600-23	REINFORCEMENT-COWL	2	
-24	0752606-1	STIFFENER-LOWER COWL	1	
-25	0752015-10	DOUBLER	1	
-26	0752612-1	REINFORCEMENT-COWL STIFFENER LH	1	
	0752612-2	REINFORCEMENT-COWL STIFFENER RH	1	
-27	0752600-42	SKIN ASSEMBLY-LOWER LH	1	
-28	0752600-44	SKIN ASSEMBLY-LOWER RH	1	
-29	0752600-14	DOUBLER-LOWER PARTING RH	1	
	0752600-13	DOUBLER-LOWER PARTING LH	1	
-30	0752600-20	DOUBLER-AFT RH	1	
	0752600-19	DOUBLER-AFT LH	1	
-31	0752608-2	LOUVER-RH	1	
	0752608-1	LOUVER-LH	1	
-32	0752604-6	DOUBLER-LOWER AFT RH	1	
-33	0752604-5	DOUBLER-LOWER AFT LH	1	
-34	0752600-43	SKIN ASSEMBLY-LOWER CENTER	1	
-35	0752636-1	DOUBLER	1	
-36	0752602-1	DUCT ASSEMBLY-CARBURETOR AIR INTAKE	1	
-37	0752016-8	EXPANDER ASSEMBLY WEU 0752016-12	1	
	0752016-2	EXPANDER ASSEMBLY	1	
	0752016-7	BOOT-EXPANDER	1	
	S1853-3	RECEPTACLE AL IC	2	
	0752021-1	CLIP	1	
	0752016-10	SEAL TOP & BOTTOM	2	
	0752016-11	SEAL SIDES	2	
-38	0752023-1	STRIP-SIDE	2	
-39	0752023-2	STRIP-TOP & BOTTOM	2	B
	0752023-3	STRIP-TOP & BOTTOM	2	C
-40	0752023-1	STRIP-SIDE	2	
-40A	0752023-2	STRIP-TOP & BOTTOM	2	B
	0752023-3	STRIP-TOP & BOTTOM	2	C
-41	4002-4	STUD CLC	20	
	4002-H	GROMMET	20	
	CM2791	SNAP RING	20	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
61A-42	0752639-1	NOSE CAP ASSEMBLY-LOWER	1	
-43	0752639-16	DOUBLER-RH	1	
	0752639-15	DOUBLER-LH	1	
-44	0752603-1	MOUNT-AIR FILTER	1	
-45	0752609-13	BRACKET-HINGE LH	1	
-46	0752609-14	BRACKET-HINGE RH	1	
-47	0752609-15	BRACKET-HINGE LH	1	
-48	0752609-16	BRACKET-HINGE RH	1	
-49	AN520-10R8	SCREW	4	
-50	0752609-200	FLAP ASSEMBLY-COWL LH	1	
-51	0752609-201	FLAP ASSEMBLY-COWL RH	1	
-52	0752623-1	BRACKET-COWL FLAP CONTROL	2	
	100PDLT44-6	SHOCK MOUNT LD	1	
-53	0752609-9	BAFFLE-INBOARD LH	1	
-54	0752609-10	BAFFLE-INBOARD RH	1	
-55	0752609-11	BAFFLE-OUTBOARD LH	1	
-56	0752609-12	BAFFLE-OUTBOARD RH	1	
-57	0752609-19	ANGLE-INBOARD	1	
-58	0752609-20	ANGLE-OUTBOARD	1	
	0752609-5	PAN ASSEMBLY-LH	1	
	0752609-6	PAN ASSEMBLY-RH	1	
-59	0752625-200	HINGE ASSEMBLY	1	
-60	0752609-2	PIN-HINGE	1	
-61	0752610-1	DOUBLER ASSEMBLY-RECEPTACLE	1	
		A---182 SERIAL 18255845 THRU 18260055 A182 SERIAL A182-0001 THRU A182-0116 B---182 SERIAL 18253599 THRU 18259697 A182 SERIAL A182-0001 THRU A182-0116 C---182 SERIAL 18259698 THRU 18260055		

Cowling (Cont)

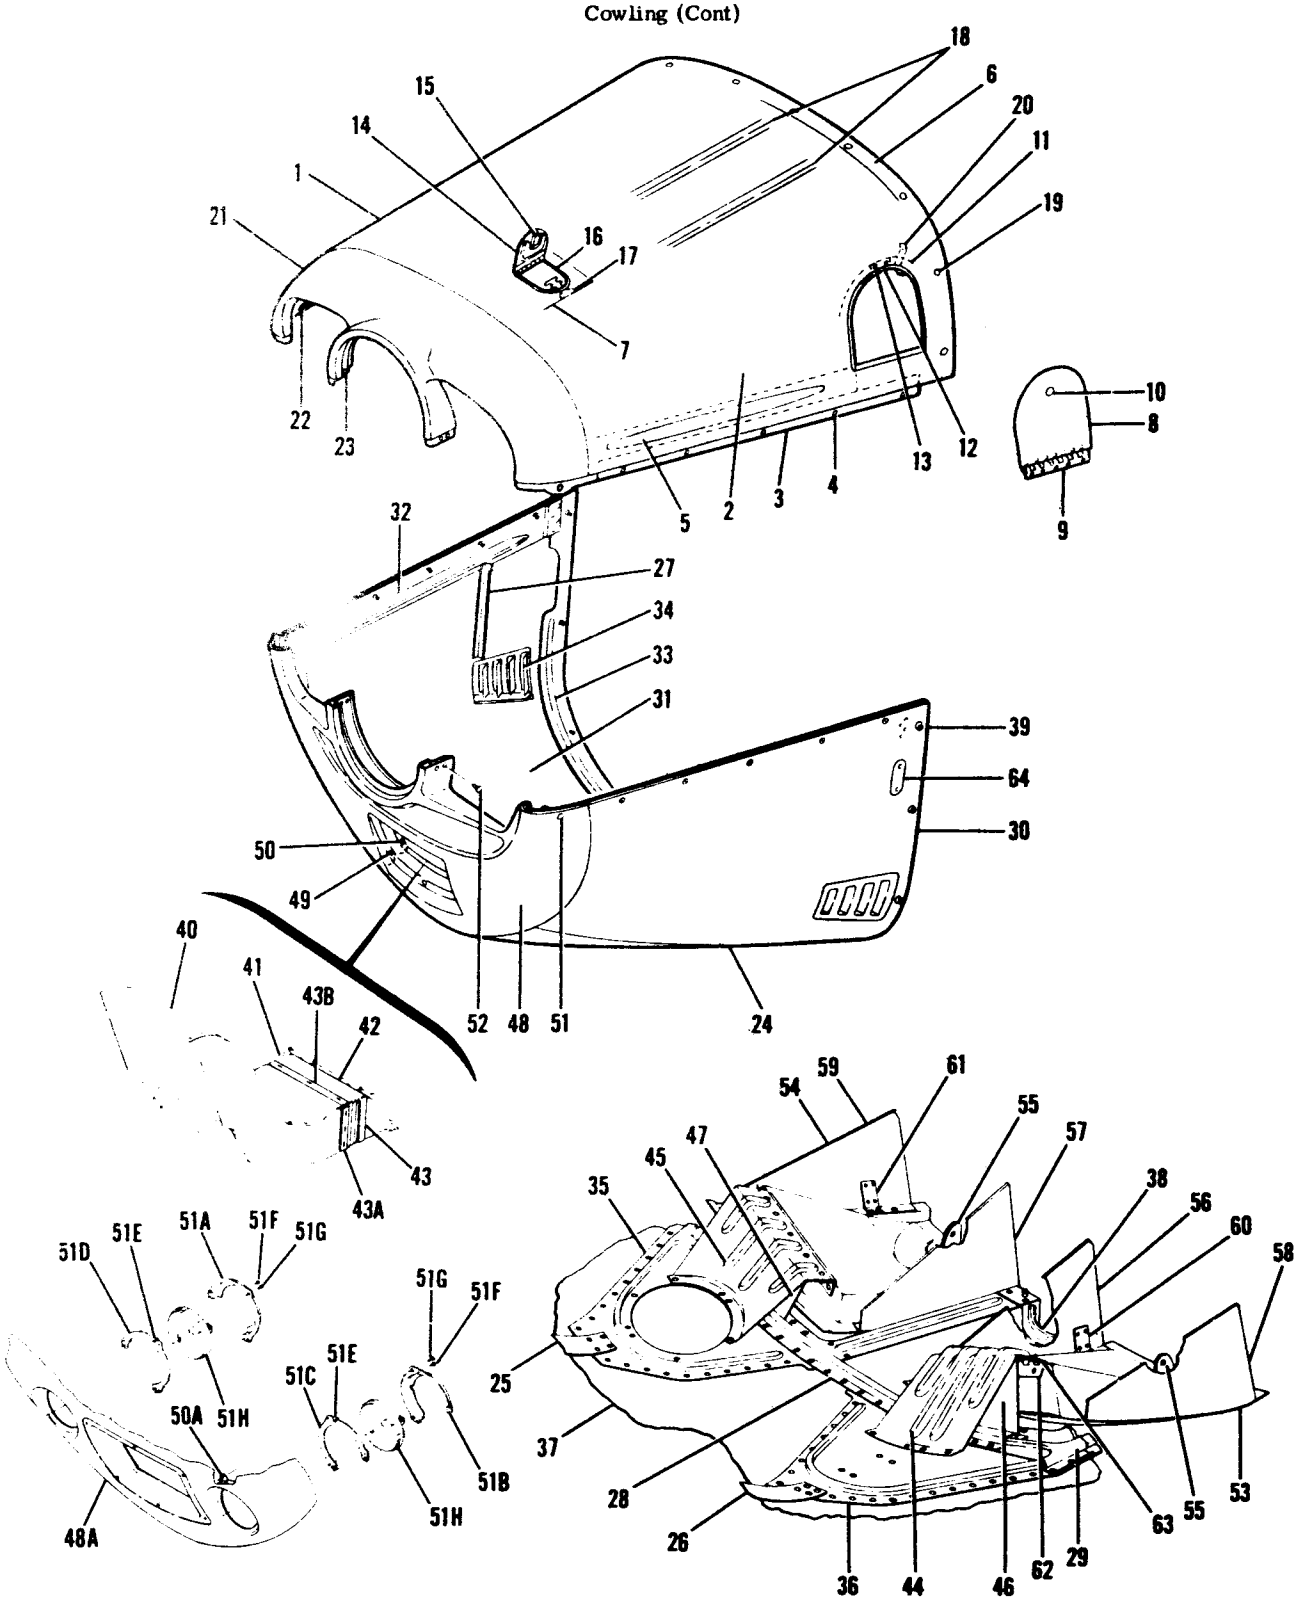

182 SERIAL 18260056 THRU 18261425


Figure 61B. Engine Cowl Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
618-		COWL ASSEMBLY-ENGINE	NP	A
- 1	0752700-3	COWL ASSEMBLY-UPPER	1	
- 2	0752700-15	SKIN ASSEMBLY-UPPER	1	
- 3	0752700-23	PARTING STRIP ASSEMBLY-LH	1	
	0752700-24	PARTING STRIP ASSEMBLY-RH	1	
		RECEPTACLE CLC	10	
- 4	4002-244-16	DOUBLER UPPER-LH	1	
- 5	0752700-13	DOUBLER UPPER-RH	1	
	0752700-12	DOUBLER-UPPER AFT	1	
- 6	0752700-21	DOUBLER-DOOR	1	
- 7	0752700-22	DOOR ASSEMBLY-ACCESS	1	
- 8	0752624-8	HINGE ASSEMBLY	1	
- 9	1452225-5	LATCH CLC	1	
-10	KM610-051	DOUBLER-DOOR	1	
-11	1252400-15	STRIKER-DOOR LATCH	1	
-12	0752635-1	ATTACHING PARTS		
	0752635-2	SPACER	1	
-13	AN507-632R6	SCREW	2	
	NAS679A06	NUT	2	
		---*---		
-14	1552004-10	DOOR ASSEMBLY-OIL	1	
-15	KM610-.051	LATCH	1	
-16	1552004-12	DOUBLER	1	
-17	1552004-25	STRIKER	1	
-18	0752701-1	STIFFENER	2	
-19	40S5-4	STUD	10	
	4002-H	GROMMET	10	
	CM2791-1	SNAP RING	10	
-20	0752627-1	SPRING	1	
-21	0752050-6	NOSECAP ASSEMBLY-UPPER	1	
-22	0752032-1	RECEPTACLE	1	
-23	NAS696A3	NUTPLATE	4	
	S5A200	SPRING	1	
	0752700-200	COWL ASSEMBLY-LOWER LESS FLAPS	1	B
	0752700-201	COWL ASSEMBLY-LOWER LESS FLAPS	1	C
-24	0752700-20	SKIN ASSEMBLY-LOWER	1	
-25	0752700-8	DOUBLER-SKIN SPLICE RH	1	
-26	0752700-9	DOUBLER-SKIN SPLICE LH	1	
-27	0752700-16	REINFORCEMENT-COWL	2	
-28	0752606-1	STIFFENER-LOWER COWL	1	
-29	0752612-1	REINFORCEMENT-COWL STIFFENER LH	1	
	0752612-2	REINFORCEMENT-COWL STIFFENER RH	1	
-30	0752700-5	SKIN-LOWER LH	1	
-31	0752700-4	SKIN-LOWER RH	1	
-32	0752700-7	DOUBLER-LH	1	
	0752700-6	DOUBLER-RH	1	
-33	0752700-18	DOUBLER-AFT RH	1	
	0752700-17	DOUBLER-AFT LH	1	
-34	1213309-6	LOUVER-RH	1	
	1213309-5	LOUVER-LH	1	
	1213310-5	SUPPORT-LOUVER LH	1	
	1213310-6	SUPPORT-LOUVER RH	1	
-35	0752604-6	DOUBLER-LOWER AFT RH	1	
-36	0752604-5	DOUBLER-LOWER AFT LH	1	
-37	0752700-19	SKIN-LOWER CENTER	1	
-38	0752636-1	DOUBLER	1	
-39	40S5-4	STUD CLC	18	
	4002-H	GROMMET CLC	18	
	CM2791-1	SNAP RING CLC	18	
-40	0752602-13	DUCT ASSEMBLY-CARBURETOR AIR INTAKE	1	
-41	0752016-12	EXPANDER BOOT ASSY WEU 0752016-14	1	
	0752016-14	EXPANDER BOOT ASSY	1	
	0752016-7	BOOT EXPANDER	1	
	0752021-1	CLIP	2	
	0752016-10	SEAL TOP & BOTTOM	2	
	0752016-11	SEAL SIDES	2	
	S1853-3	RECEPTACLE ALIC	2	
-42	0752023-5	RETAINER STRIP TOP & BOTTOM	2	
-43	0752023-1	RETAINER STRIP SIDE	2	
-43A	0752023-1	RETAINER STRIP SIDE	2	
-43B	0752023-4	RETAINER STRIP TOP & BOTTOM	2	
-44	0752609-13	BRACKET-HINGE LH	1	
-45	0752609-14	BRACKET-HINGE RH	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
61B-46	0752609-15	BRACKET-HINGE LH	1	
-47	0752609-16	BRACKET-HINGE RH	1	
-48	0752050-5	NOSE CAP ASSEMBLY-LOWER	1	B
-48A	0752050-200	NOSE CAP ASSEMBLY-LOWER	1	C
-49	NAS680A3	NUTPLATE	6	
-50	S1853-1	RECEPACLE	4	
-50A	NAS697A08	NUTPLATE	6	C
-51	4055-4	STUD-LH CLC	1	
	4002H	GROMMET	1	
	CM2791-1	SNAP RING CLC	1	
	A5-35	STUD-RH CLC	1	
	GA5-375	GROMMET	1	
-51A	1252015-1	BRACKET LH-LANDING LIGHT	1	C
-51B	1252015-2	BRACKET RH-LANDING LIGHT	1	C
-51C	1252015-4	PLATE ASSY LH-LANDING LIGHT	1	C
-51D	1252015-5	PLATE ASSY RH-LANDING LIGHT	1	C
-51E	NAS448-1-3	NUTPLATE	3	C
-51F	S1021Z6-8	SCREW	6	C
-51G	AN515-8R8	SCREW	6	C
-51H	4509	LAMP	2	C
-52	AN520-10R8	SCREW	4	
-53	0752609-200	FLAP ASSEMBLY-COWL LH	1	
-54	0752609-201	FLAP ASSEMBLY-COWL RH	1	
-55	0752623-1	BRACKET-COWL FLAP CONTROL	2	
	100PDLT44-6	SHOCK MOUNT LO	1	
-56	0752609-9	BAFFLE-INBOARD LH	1	
-57	0752609-10	BAFFLE-INBOARD RH	1	
-58	0752609-11	BAFFLE-OUTBOARD LH	1	
-59	0752609-12	BAFFLE-OUTBOARD RH	1	
-60	0752609-19	ANGLE-INBOARD	1	
-61	0752609-20	ANGLE-OUTBOARD	1	
	0752609-5	PAN ASSEMBLY-LH	1	
	0752609-6	PAN ASSEMBLY-RH	1	
-62	0752625-200	HINGE ASSEMBLY	1	
-63	0752609-27	PIN HINGE	1	
-64	0752610-1	DOUBLER ASSEMBLY-RECEPTACLE	1	
-65	0752055-1	FRAME-AIR FILTER	1	
		ATTACHING PARTS		
-66	AN507-10R8	SCREW	6	
		---*---		
		A---182 SERIAL 18260056 THRU 18261425 A182 SERIAL A182-0117 & ON		
		B---182 SERIAL 18260056 THRU 18260825 A182 SERIAL A182-0117 THRU A182-0136		
		C---182 SERIAL 18260826 THRU 18261425		

Cowling (Cont)

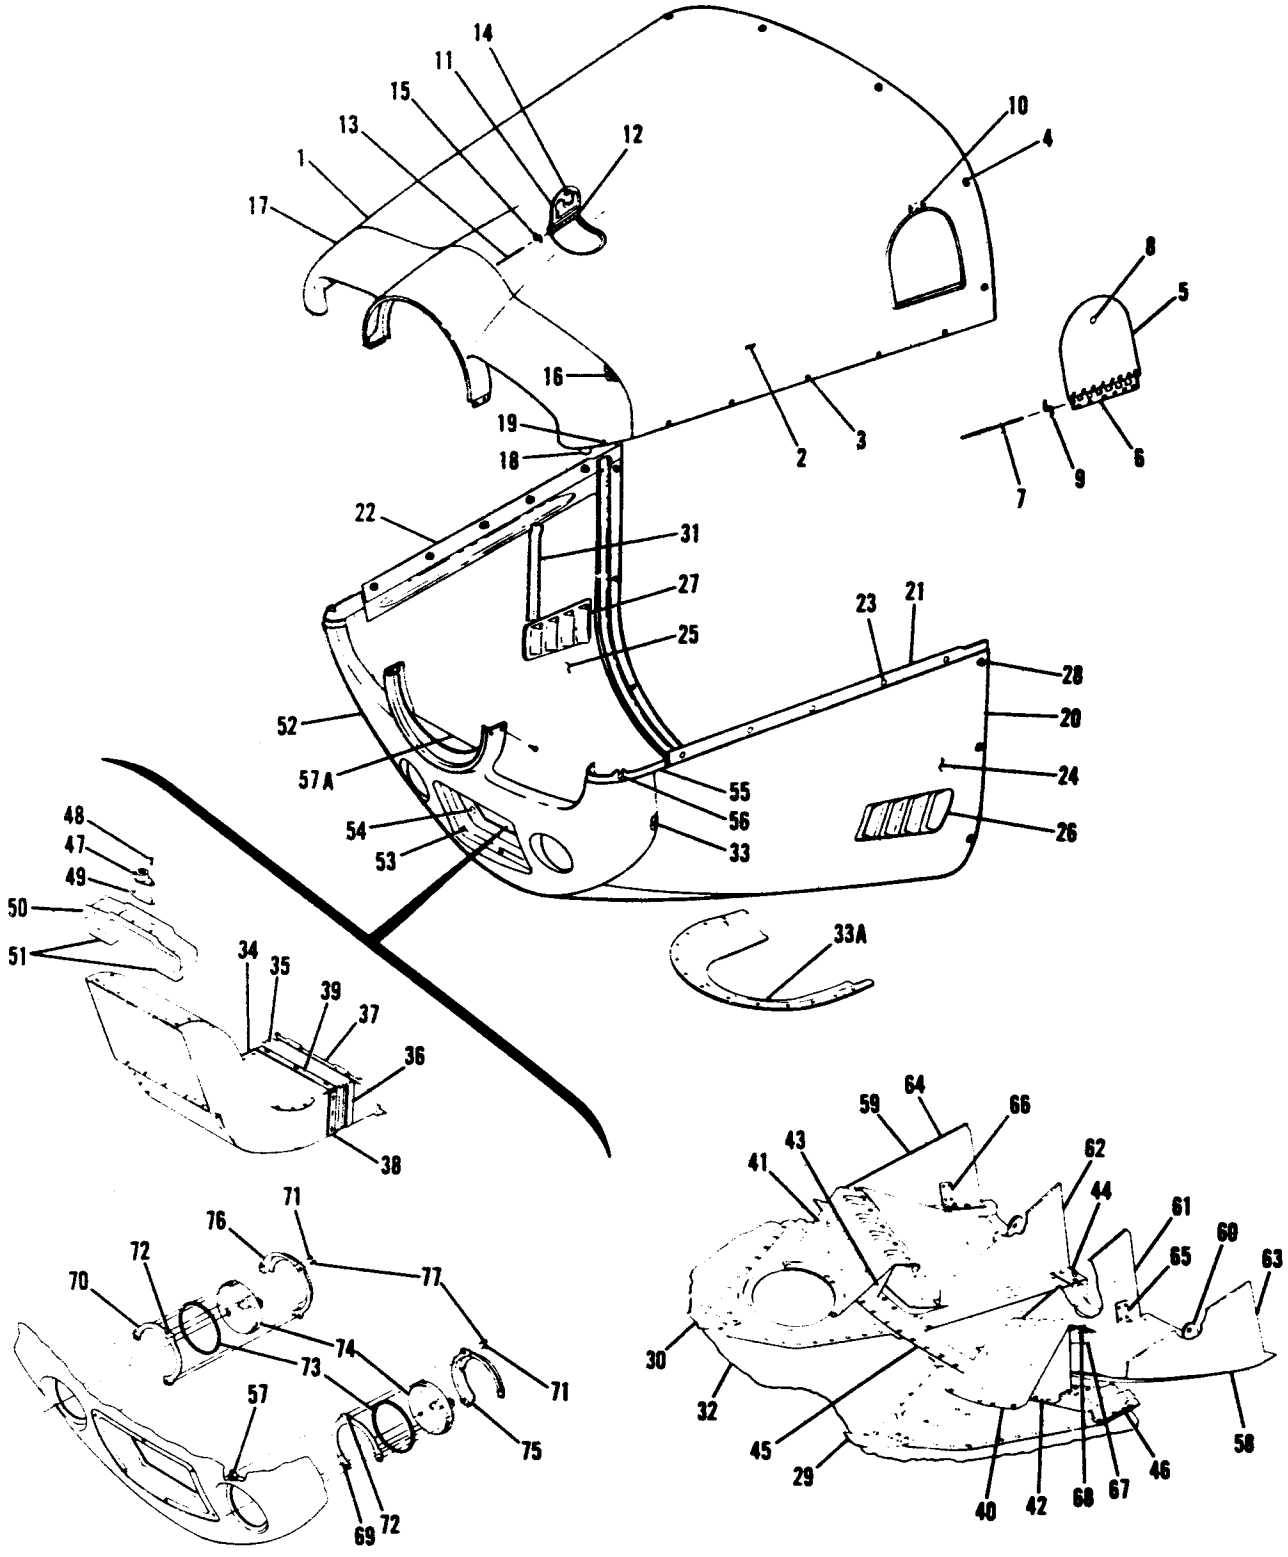

182 SERIAL 18261426 THRU 18262465

Figure 61C. Engine Cowl Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
61C-		COWL ASSEMBLY-ENGINE	NP	A
- 1	0752706-3	COWL ASSEMBLY-UPPER	1	
- 2	0752706-35	SKIN ASSEMBLY-UPPER	1	
- 3	4055-4	STUD CLC	10	
	4002-H	GROMMET CLC	10	
	CM2791-1	SNAP RING	10	
- 4	275-3-2	STUD CLC	6	
	2600SW2	WASHER CLC	6	
- 5	1552004-52	DOOR ASSEMBLY-ACCESS	1	
- 6	1552004-22	HINGE HALF	1	
- 7	1552004-17	PIN	1	
- 8	KM610-051	LATCH	1	
- 9	1552010-1	SPRING	1	
-10	1552004-25	STRIKER	2	
-11	1552004-53	DOOR ASSEMBLY-OIL	1	
-12	1552004-22	HINGE HALF	1	
-13	1552004-17	PIN	1	
-14	KM610-051	LATCH	1	
-15	1552010-1	SPRING	1	
-16	S1550-1	WASHER	26	
-17	0752056-1	NOSE CAP ASSEMBLY-UPPER	1	
-18	0752013-1	CLIP-LH	1	
	0752013-2	CLIP-RH	1	
-19	4055-4	STUD CLC	2	
	4002-H	GROMMET CLC	2	
	CM2791-1	SNAP RING	2	
-20	0752706-200	COWL ASSEMBLY-LOWER LESS FLAPS	1	
-21	0752706-7	PARTING STRIP-LH	1	
-22	0752706-8	PARTING STRIP-RH	1	
-23	244-16	RECEPTACLE CLC	10	
-24	0752706-39	SKIN ASSEMBLY-LH	1	
-25	0752706-40	SKIN ASSEMBLY-RH	1	
-26	1213309-5	LOUVER-LH	1	
-27	1213309-6	LOUVER-RH	1	
-28	275-3-2	STUD CLC	6	
	275-3-3	STUD CLC	2	
	2600SW2	WASHER CLC	8	
-29	0752700-9	DOUBLER-LH	1	
-30	0752700-8	DOUBLER-RH	1	
-31	0752700-16	REINFORCEMENT	2	
-32	0752706-38	SKIN ASSEMBLY	1	
-33	S-1550-1	WASHER	36	
-33A	0752707-1	FAIRING-COWL & NOSE GEAR	1	
-34	0752602-13	DUCT ASSEMBLY-CARBURETOR AIR INTAKE	1	
-35	0752016-14	EXPANDER BOOT ASSEMBLY	1	
	0752016-7	BOOT EXPANDER	1	
	0752021-1	CLIP	2	
	0752016-10	SEAL TOP & BOTTOM	2	
	0752016-11	SEAL SIDES	2	
	0752047-1	STIFFENER	1	
	0752026-6	ADAPTER ASSEMBLY	1	
	0752048-1	DOUBLER	1	
-36	0752023-1	RETAINER SIDE	2	
-37	0752023-5	RETAINER TOP & BOTTOM	2	
-38	0752023-1	RETAINER SIDE	2	
-39	0752023-4	RETAINER TOP & BOTTOM	2	
-40	0752609-13	BRACKET-HINGE LH	1	
-41	0752609-14	BRACKET-HINGE RH	1	
-42	0752609-15	BRACKET-HINGE LH	1	
-43	0752609-16	BRACKET-HINGE RH	1	
	0752706-29	CHANNEL-LH	1	
-44	0752706-30	CHANNEL-RH	1	
-45	0752606-1	STIFFENER	1	
-46	0752612-1	REINFORCEMENT-LH	1	
	0752612-2	REINFORCEMENT-RH	1	
-47	S1115-29	SHOCKMOUNT	1	
		ATTACHING PARTS		
-48	AN520-8R6	SCREW	2	
-49	0752058-3	SPACER	A/R	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
61C-50	0752058-1	SUPPORT ASSEMBLY	1	
	NAS697A08	NUTPLATE	2	
-51	0752058-4	SPACER	2	
-52	0752056-2	NOSE CAP ASSEMBLY-LOWER	1	
-53	NAS680A3	NUTPLATE	6	
-54	S1853-1	RECEPTACLE	4	
-55	0752059-17	REINFORCEMENT ASSEMBLY-LH	1	
	0752059-18	REINFORCEMENT ASSEMBLY-RH	1	
-56	0752032-1	RECEPTACLE	1	
-57	0752645-1	ATTACH RING ASSEMBLY-LH	1	
	0752645-2	ATTACH RING ASSEMBLY-RH	1	
	NAS697A08	NUTPLATE	3	
-57A	0750236-1	BAFFLE ASSY-SPIN FAIRING	1	
	0750239-3	SEAL	1	
-58	0752609-202	FLAP ASSEMBLY-COWL L.H.	1	
-59	0752609-203	FLAP ASSEMBLY-COWL R.H.	1	
-60	0752623-1	BRACKET-COWL FLAP CONTROL	2	
	100PDLT44-6	SHOCK MOUNT LO	1	
-61	0752609-35	BAFFLE-INBOARD LH	1	
-62	0752609-28	BAFFLE-INBOARD RH	1	
-63	0752609-29	BAFFLE-OUTBOARD LH	1	
-64	0752609-30	BAFFLE-OUTBOARD RH	1	
-65	0752609-31	ANGLE-INBOARD	1	
-66	0752609-20	ANGLE-OUTBOARD	1	
	0752609-5	PAN ASSEMBLY-LH	1	
	0752609-6	PAN ASSEMBLY-RH	1	
-67	0752625-200	HINGE ASSEMBLY	1	
-68	0752609-27	PIN HINGE	1	
		LANDING LIGHT INSTALLATION	NP	
-69	0752644-5	PLATE ASSEMBLY-LH	1	
-70	0752644-6	PLATE ASSEMBLY-RH	1	
		ATTACHING PARTS		
-71	S1021Z6-8	SCREW	2	
		---*---		
-72	NAS488-1-3	NUTPLATE	2	
-73	0752646-1	GASKET	A/R	
-74	4509	LAMP	1	
-75	0752644-1	BRACKET-LH	1	
-76	0752644-2	BRACKET-RH	1	
		ATTACHING PARTS		
-77	AN515-8R8	SCREW	3	
		---*---		
-78	0752055-1	FRAME-AIR FILTER	1	
		ATTACHING PARTS		
-79	AN509-10R8	SCREW	6	
		---*---		
		A---182 SERIAL 18261426 THRU 18262465		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
62 -		ENGINE INSTALLATION	NP	
- 1	SEE FIG 63	ENGINE ASSEMBLY	1	
		ATTACHING PARTS		
- 2	AN6-34A	BOLT	2	
- 3	AN6-25A	BOLT	2	
- 4	MS20365-624C	NUT	4	
- 5	AN960-616	WASHER-ENGINE MOUNT	8	
- 6	0550153-1	WASHER-ENGINE MOUNT	4	H
	0550153-1	WASHER-ENGINE MOUNT	2	J
		---*---		
- 7	0700099-4	LINE ASSEMBLY-PRIMER	1	A
		ATTACHING PARTS		
- 8	AN832-2D	UNION	1	A
	AN924-2D	NUT	2	A
	AN960D516	WASHER	2	A
- 9	AN833-2D	ELBOW AT FIREWALL	1	A
	AN960D516	WASHER	1	A
	AN924-2D	NUT	1	A
		---*---		
-10	SEE NOTE %	CONTROL ASSEMBLY-CARBURETOR HEAT	1	
		ATTACHING PARTS		
-11	AN742D3	CLAMP	1	
	NAS446-4-3	NUT	1	
	S1021Z8-6	SCREW	1	
-12	AN742D3	CLAMP	1	
-13	AN3-3A	BOLT	1	
	MS20364-1032C	NUT	1	
-14	0450311-5	CLAMP-CARBURETOR HEAT	1	
-15	AN960-10L	WASHER	1	
-16	MS20364-1032C	NUT	1	
		---*---		
-17	SEE NOTE %	CONTROL ASSEMBLY-PROPELLER	1	
		ATTACHING PARTS		
-18	S1104-3	ROD END-CONTROL	1	
-19	AN3-7A	BOLT	1	
-20	S1450-3-10-032	WASHER	1	
-20A	AN960D10	WASHER	2	
-21	MS20364-1032C	NUT	3	
-21A	AN315-3R	NUT	1	
-22	0750138	ARM	1	
-22A	AN3-5A	BOLT	1	
-23	0450191-1	CLAMP-PROPELLER CONTROL	1	
-24	AN741-18P	CLAMP	1	
	AN3-11A	BOLT	1	
	AN936B10	WASHER	2	
-25	0550100-9	BRACKET-PROPELLER CONTROL	1	L
	S1486DG52	CLAMP	1	L
	S1021Z8-8	SCREW	1	L
-25A	MS21919DG34	CLAMP	1	M
	MS21919DG6	CLAMP	1	M
	NAS563-21	BOLT	1	M
	AN960-10	WASHER	1	M
	MS20364-1032C	NUT	1	M
-26	NAS435A5-92	CLAMP TIN	1	
	S1021Z8-8	SCREW	1	
		---*---		
-27	SEE NOTE %	CONTROL ASSEMBLY-THROTTLE	1	
		ATTACHING PARTS		
-28	0750223-1	BRACKET-THROTTLE CONTROL	1	F
	0750233-1	BRACKET-THROTTLE CONTROL	1	G
	0750612-1	BRACKET-THROTTLE CONTROL	1	K
-29	S351	CLAMP-THROTTLE CONTROL	1	
-30	AN3-6A	BOLT	2	
-31	NAS43HT3-9	SPACER	2	
-32	MS21044N3	NUT	2	
-33	S1106-4	ROD END-THROTTLE CONTROL	1	
-34	AN4-11A	BOLT	1	
-35	AN970-4	WASHER	1	
-36	NAS679A4	NUT	1	
-37	AN960-416L	WASHER	1	
		---*---		

CONTINUED ON NEXT PAGE

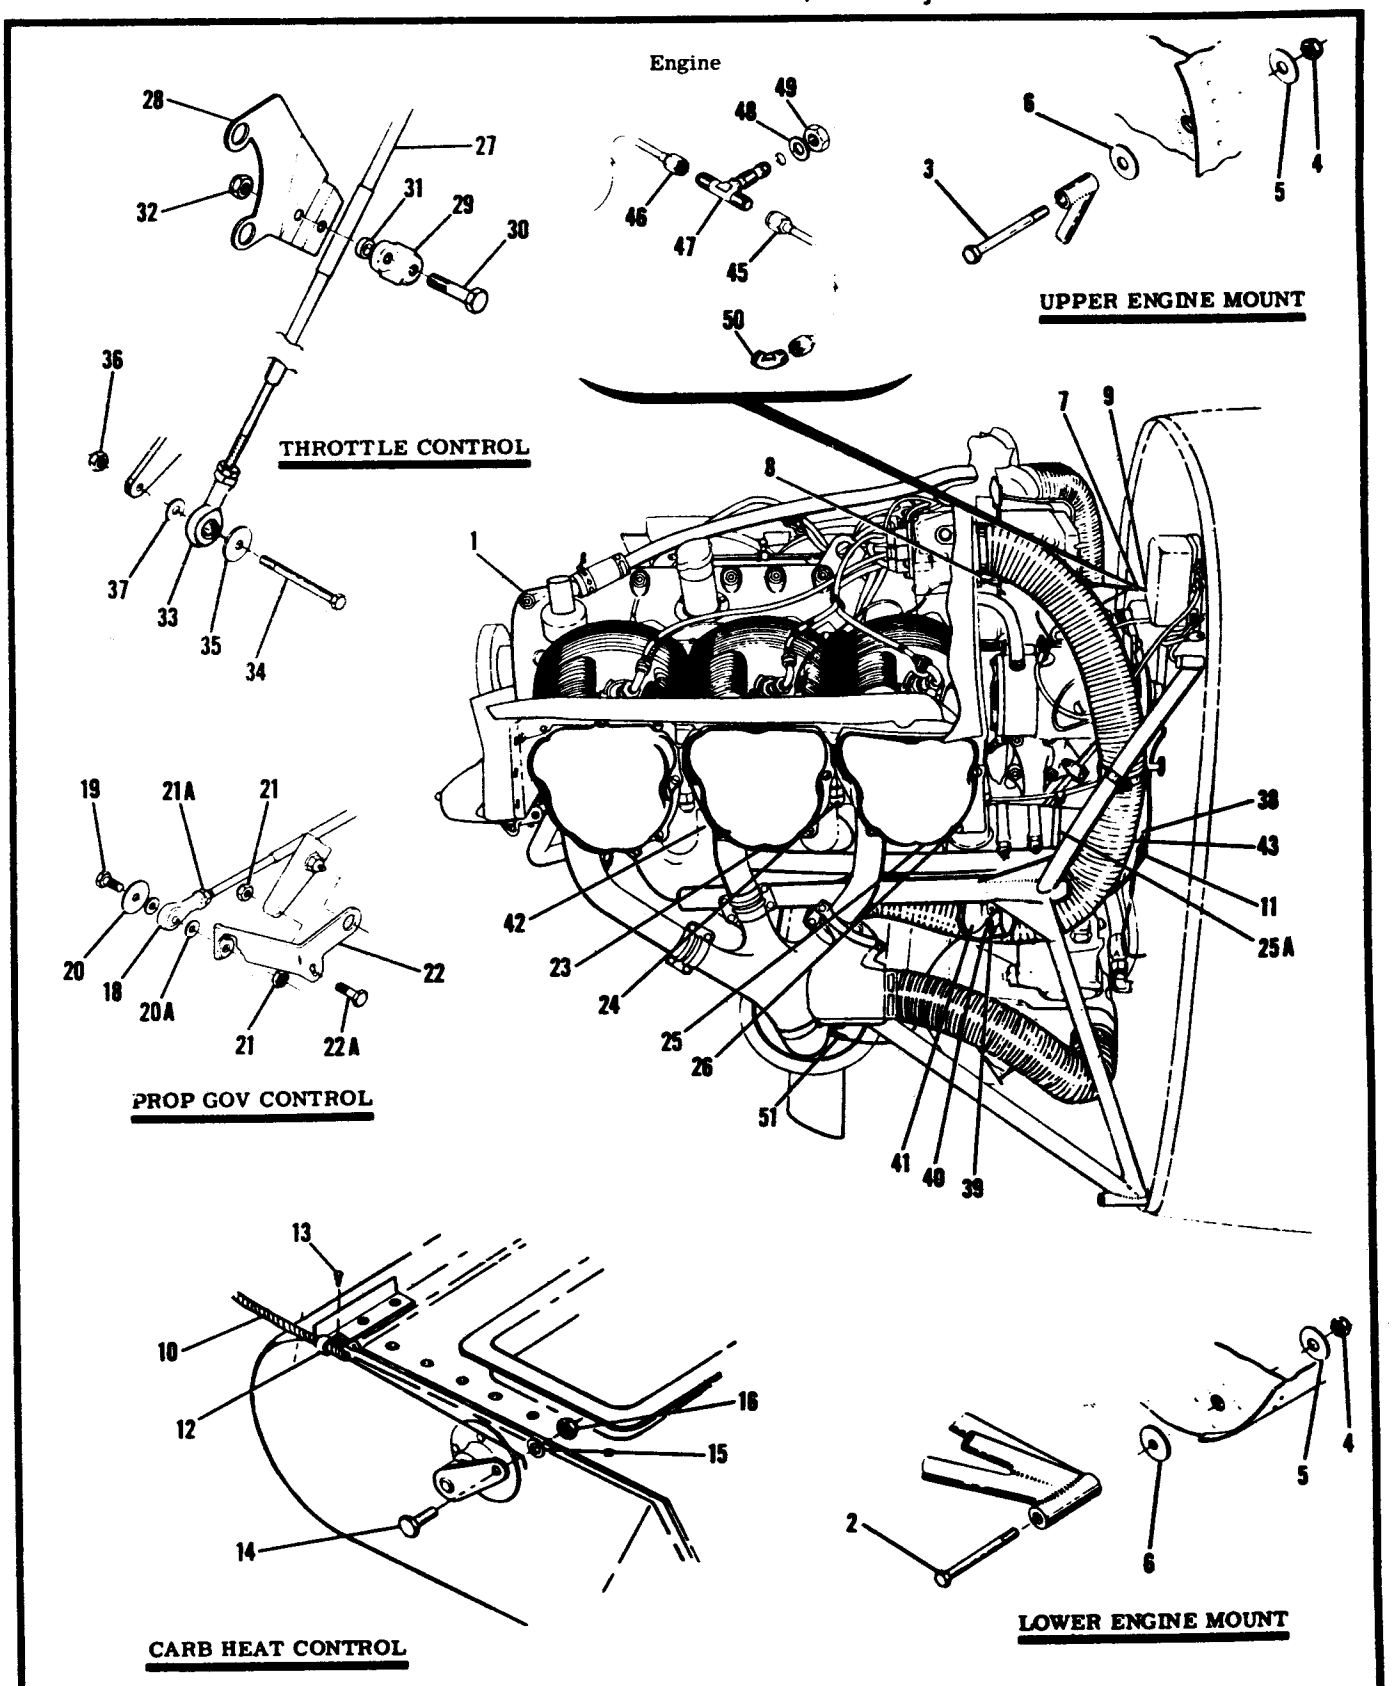


Figure 62. Engine Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
62 -38	SEE NOTE %	CONTROL ASSEMBLY-MIXTURE	1	
		ATTACHING PARTS		
-39	0450311-4	CLAMP-MIXTURE CONTROL	1	
	NAS679A4	NUT	1	
	AN960-416L	WASHER	2	
-40	AN742D4	CLAMP	1	
-41	0750159-1	CLIP-MIXTURE CONTROL	1	
	AN3-3A	BOLT	1	
	MS21044N3	NUT	1	
	S1486DG3U	CLAMP TIN	1	
	MS21919D6-11	CLAMP	1	
	S1021Z8-6	SCREW	1	
		---*---		
-42	0750139	ADAPTER-OIL TEMPERATURE	2	
		ATTACHING PARTS		
	AN900-10	GASKET	1	
	NAS435A4-92	CLAMP	2	
	AN742D34	CLAMP	2	
	S1021Z8-8	SCREW	2	
	MS21919DG4	CLAMP	1	
	S1021Z8-6	SCREW	1	
	NAS446-4-3	NUT	1	
		---*---		
-43	0700099-6	LINE ASSEMBLY-MANIFOLD PRESSURE FIREWALL TO ENGINE	1	
		WHEN EXHAUSTED USE 0700099-78		
	0700099-78	LINE ASSEMBLY-MANIFOLD PRESSURE FIREWALL TO ENGINE	1	
		ATTACHING PARTS		
	MS21919DG2	CLAMP	1	
	S1021Z8-6	SCREW	1	
	NAS446-4-3	NUT	1	
	0750282-1	ADAPTER ASSEMBLY ATTACH LINE TO ENGINE	1	
	AN833-2D	ELBOW ATTACH LINE TO FIREWALL	1	
	AN960D516	WASHER ATTACH LINE TO FIREWALL	1	
	AN924-2D	NUT ATTACH LINE TO FIREWALL	1	
		---*---		
-44	NAS398-50	CLAMP TIN	1	
-45	0700099-39	PRIMER LINE-TEE TO MANIFOLD LH WHEN EXHAUSTED	1	B
		USE 0700099-79		
	0700099-79	PRIMER LINE-TEE TO MANIFOLD LH	1	
-46	0700099-40	PRIMER LINE-TEE TO MANIFOLD RH WHEN EXHAUSTED	1	B
		USE 0700099-80		
	0700099-80	PRIMER LINE-TEE TO MANIFOLD RH	1	
		ATTACHING PARTS		
-47	AN834-2D	TEE	1	B
-48	AN960D516	WASHER	1	B
-49	AN924-2D	NUT	1	B
		---*---		
-50	AN4023-1	ELBOW-PRIMING JET	2	B
-51	C668501-0102	PROBE-ECONOMY POWER WHEN EXHAUSTED USE C668501-0110	1	C
	C668501-0110	PROBE-ECONOMY POWER	1	D
	C668501-0204	PROBE-ECONOMY POWER	1	E
	AN515-4R4	SCREW	2	

NOTE. %REFER TO APPLICABLE INSTRUMENT PANEL FIGURE.

A---182 SERIAL 18253599 THRU 18255058
B---182 SERIAL 18255059 THRU 18262465
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18255059 THRU 18256830
D---182 SERIAL 18256831 THRU 18257502
A182 SERIAL A182-0001 THRU A182-0035
E---182 SERIAL 18257503 THRU 18262465
A182 SERIAL A182-0035 & ON
F---182 SERIAL 18253599 THRU 18257324
A182 SERIAL A182-0001 THRU A182-0015
G---182 SERIAL 18257325 THRU 18261425
A182 SERIAL A182-0016 & ON
H---182 SERIAL 18253599 THRU 18260290
A182 SERIAL A182-0001 THRU A182-0116
J---182 SERIAL 18260291 THRU 18262465
A182 SERIAL A182-0117 & ON
K---182 SERIAL 18261426 THRU 18262465
L---182 SERIAL 18253599 THRU 18261693 & 18261972
M---182 SERIAL 18261694 THRU 18261971
&18261973 THRU 18262465

Engine (Cont)

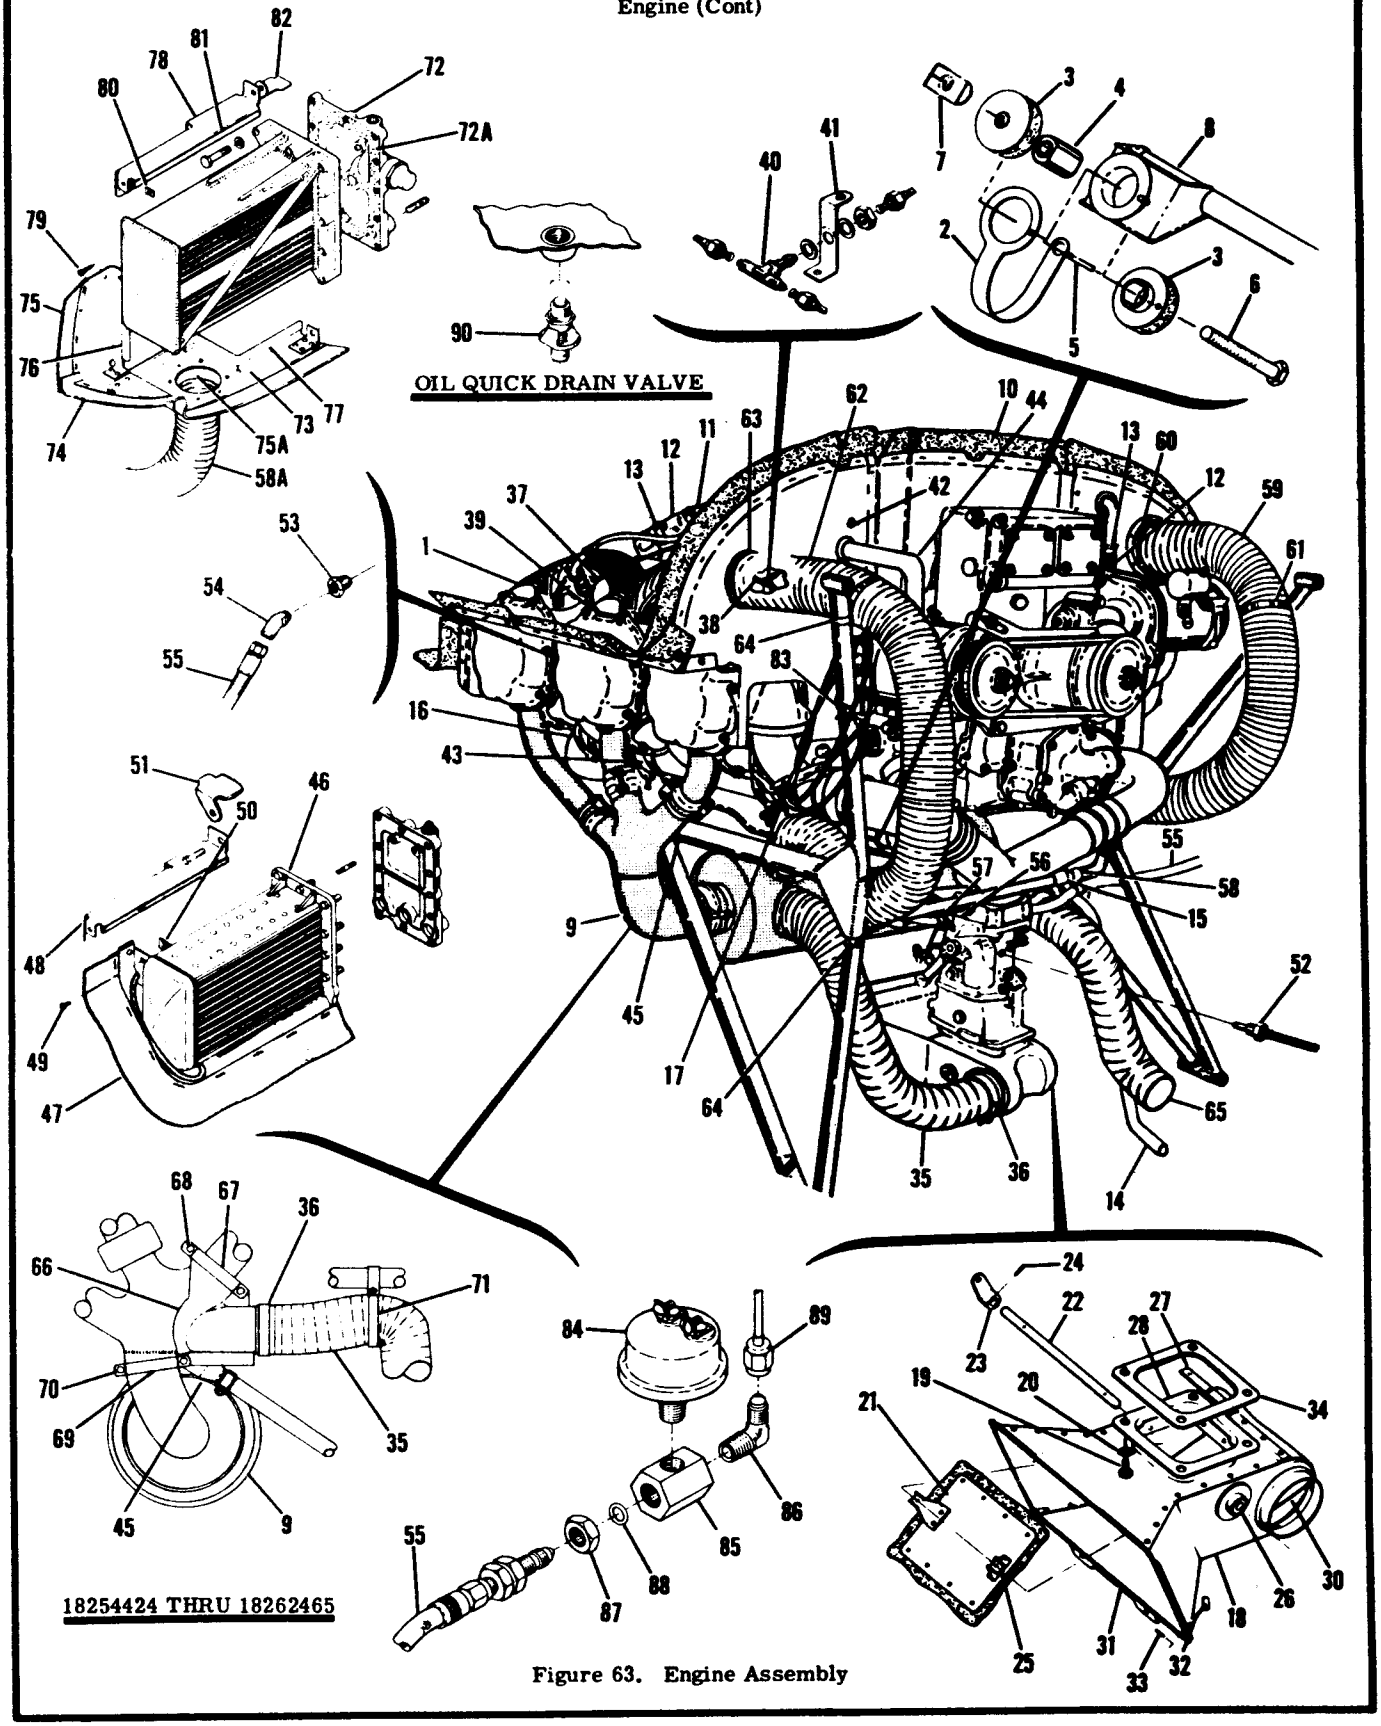


Figure 63. Engine Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
63 -		ENGINE ASSEMBLY-CONTINENTAL	NP	
- 1	0-470-R %	ENGINE SPEC 25 CM	1	
	0-470-R *	ENGINE SPEC 35 CM	1	
		ATTACHING PARTS		
- 2	0750137	BONDING STRAP-ENGINE MOUNT	4	
- 3	0750132-1	SHOCK MOUNT ASSEMBLY-ENGINE	4	
- 4	0750132-2	SPACER-BONDED	1	
- 5	MS20253-5-100	PIN	4	
- 6	AN7-33A	BOLT	4	
- 7	539911	NUT-BARREL CM	4	
	AN960-716L	WASHER	4	
		---•---		
- 8	0751600-1	MOUNT-ENGINE	1	
- 9	SEE FIG 65	STACK ASSEMBLY-EXHAUST	1	C
	SEE FIG 65A	STACK ASSEMBLY-EXHAUST	1	D
-10	SEE FIG 66	BAFFLES INSTALLATION-ENGINE	1	
-11	0500106-164	TUBE-BREATHER LINE FORWARD	1	J
	1200106-108	TUBE-BREATHER LINE FORWARD	1	K
		ATTACHING PARTS		
-12	S51-12	HOSE 3.0 IN LG BULK ITEM REF S-51-12-12	2	
-13	NAS397-18-1	CLAMP	4	
		---•---		
-14	0700099-32	TUBE-BREATHER LINE REAR	1	AA
	0700099-45	TUBE-BREATHER LINE REAR	1	AB
		ATTACHING PARTS		
-15	AN742D34	CLAMP	1	
	AN742D12	CLAMP	1	
	S1021Z8-8	SCREW	1	
		---•---		
-16	SEE FIG 64	GOVERNOR-PROPELLER	1	
-17	0311018-11	THERMOCOUPLE-ENGINE	1	
		ATTACHING PARTS		
	AN515B6-5	SCREW	2	
	AN936A6B	WASHER	2	
		---•---		
-18	0750144-1	AIRBOX ASSEMBLY-CARBURETOR WHEN EXHAUSTED USE 0750144-21-	1	G
	0750144-21	AIRBOX ASSEMBLY-CARBURETOR	1	H
		ATTACHING PARTS		
-19	MS20074-04-3	BOLT	4	
-20	0750131-1	WASHER	4	
		---•---		
-21	0750133-7	VALVE ASSEMBLY	1	
-22	0750133-8	SHAFT-VALVE	1	
	0750133-21	SHAFT-VALVE WHEN EXHAUSTED USE 0750133-8	1	
-23	0750111-19	ARM ASSEMBLY	1	
-24	MS16562-16	ROLL PIN EN	1	
-25	0750133-9	BRACKET ASSEMBLY	2	
-26	0750113-1	HOUSING ASSEMBLY	2	
-27	0750156-1	STRAP	1	
-28	0750126-4	COLLAR	1	
-29		DELETED, NEVER USED		
-30	0750133-22	DUST BAFFLE	1	
-31	0750144-6	SEAL	1	G
	0750144-20	SEAL	1	H
-32	WL98293-3-.360	STUD ALIC	2	
-33	S1853-4	PIN ALIC	2	
	AN960-10L	WASHER	2	
-34	0750142-1	GASKET-CARBURETOR AIR BOX	1	
-35	S1053K20T	HOSE-CARBURETOR HEAT 17.5 IN LG BKI	1	A
		REF S1053K20T17.50		
	S1053K20T	HOSE-CARBURETOR HEAT 26.0 IN LG BKI	1	B
		REF S1053K20T26.0		
		ATTACHING PARTS		
-36	NAS398-42	CLAMP	2	
		---•---		
-37	0500106-196	PRIMER LINE-CYLINDER #6 TO TEE	1	F
-38	0500106-197	PRIMER LINE-CYLINDER #4 TO TEE	1	F
		ATTACHING PARTS		
-39	AN4022-1	NIPPLE	2	F
-40	AN834-2D	TEE	1	F
	AN924-2D	NUT	1	F
	AN960D516	WASHER	2	F
-41	0750150-1	BRACKET-PRIMER LINE	2	F
		---•---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
63 -	MS21919DG8	CLAMP-IGNITION HARNESS FORWARD	1	
	MS21919DG10	CLAMP-IGNITION HARNESS REAR	1	
		ATTACHING PARTS		
	S1021Z10-8	SCREW	1	
	NAS446-5-3	NUT	1	
		---*---		
-42	0500106-170	PRIMER LINE-TEE TO BAFFLE	1	F
-43	0750121	DEFLECTOR ASSEMBLY	6	
-44	0750140-6	BLAST TUBE-GENERATOR	1	J
		ATTACHING PARTS		
	NAS397-16-1	CLAMP	1	
		---*---		
-45	0750283-1	DEFLECTOR-EXHAUST HEAT	1	F
		ATTACHING PARTS		
	NAS434A14-27	CLAMP TIN	2	F
	S1021Z10-10	SCREW	2	F
		---*---		
		LARGE OIL COOLER INSTALLATION	NP	F
-46	E05491S	OIL COOLER CM	1	
-47	0700309-7	BAFFLE ASSEMBLY	1	
-48	0700309-2	BAFFLE ASSEMBLY	1	
-49	S1021Z6-6	SCREW	2	
-50	NAS446-2-3	NUT	2	
-51	0750152-2	BAFFLE	1	
-52	0550209-1	PROBE	1	
-53	AN912-3	BUSHING	1	
-54	0752037-1	ELBOW	1	
-55	S1167-4-0460	HOSE-OIL PRESSURE	1	
		ATTACHING PARTS		
-56	0752038-1	BRACKET	1	
-57	MS21919DG9	CLAMP	2	
-58	NAS434A12-27	CLAMP TIN	1	
	MS21919DG4	CLAMP	1	P
	S1021Z10-10	SCREW	2	
	S1021Z8-6	SCREW	1	P
	NAS446-4-3	NUT	1	
	NAS446-4-3	NUT	1	P
		---*---		
-58A	S1053K24T	HOSE-16.0 IN LG BKI REF S1053K24T16.0	1	U
		ATTACHING PARTS		
	NAS398-50	CLAMP	2	U
		---*---		
-59	S1053K24T	HOSE-AIR INTAKE 38.0 IN LG BULK ITEM REF S1053K24T38.0	1	R
	S1053E24T	HOSE-AIR INTAKE 46.0 IN LG BULK ITEM REF S1053E24T46.0 USED WITH OIL FILTER	1	M
	S1053K24T	HOSE-AIR INTAKE 50.0 IN LG BULK ITEM REF S1053K24T50.0 USED WITH OIL FILTER	1	N
		ATTACHING PARTS		
-60	NAS398-50	CLAMP	2	R
	NAS398-50	CLAMP USED WITH OIL FILTER	2	M
	S1891-48	CLAMP USED WITH OIL FILTER	2	N
-61	AN742D50	CLAMP	2	R
	S1485D14U	CLAMP	1	R
	S1485D16U	CLAMP	1	R
	S1021Z10-8	SCREW	2	R
		---*---		
-62	S1053K20T	HOSE-AIR INTAKE 50 IN LG BULK ITEM REF S-1053K20T50.0	1	A
		ATTACHING PARTS		
-63	NAS398-42	CLAMP	2	A
-64	TA732D42	CLAMP THAS	2	A
	NAS434A14-27	CLAMP TIN	1	A
	NAS434-16-27	CLAMP TIN	1	A
	S1021Z10-12	SCREW	2	A
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
63 -65	S1053E24T	HOSE-HEATER 25.5 IN LG BKI REF S1053E24T25.50 ---	1	
		ATTACHING PARTS		
	NAS398-50	CLAMP ---	2	
		---*---		
	S1372-1	SENDING UNIT-CYLINDER HEAD TEMP ---	1	
		ATTACHING PARTS		
	AN900-6	GASKET ---	1	
	NAS679A04	NUT ---	1	
		---*---		
	0750038-4	FILTER-CARBURETOR AIR ---	1	
	0752055-1	FRAME-AIR FILTER ---	1	O
-66	0750607-4	SHROUD ASSEMBLY-OUTBOARD ---	1	B
	0750607-5	SHROUD ASSEMBLY-INBOARD ---	1	B
		ATTACHING PARTS		
-67	0750225-1	CLAMP ---	2	
-68	AN3-5A	BOLT ---	2	
	AN960-10L	WASHER ---	2	
	MS21044N3	NUT ---	2	
-69	0750225-2	CLAMP ---	2	
-70	AN3-4A	BOLT ---	2	
	AN960-10L	WASHER ---	2	
	MS21044N3	NUT ---	2	
-71	MS21919DG40	CLAMP ---	1	
	S1485D20U	CLAMP ---	1	
	S1021Z10-8	SCREW ---	1	
		---*---		
		LARGE OIL COOLER INSTALLATION-NON CONGEALING ---	NP	E
-72	626332	PLATE-OIL COOLER CM ---	1	
-72A	626342	GASKET-OIL COOLER TO PLATE CM ---	1	
	626341	GASKET-PLATE TO CRANKCASE CM ---	1	
	639151	COOLER-ENGINE OIL CM 9 INCH ---	1	Y
	639171	COOLER-ENGINE OIL CM 8 INCH ---	1	Z
	625966	GASKET-PLUG ---	1	
-73	1200614-2	BAFFLE ASSEMBLY-OIL COOLER ---	1	S
	1200614-6	BAFFLE ASSEMBLY-OIL COOLER ---	1	T
	0700123-6	BAFFLE ASSEMBLY-OIL COOLER ---	1	V
	0700123-10	BAFFLE ASSEMBLY-OIL COOLER ---	1	W
	0700123-12	BAFFLE ASSEMBLY-OIL COOLER ---	1	X
-74	0700318-8	SEAL ---	1	S
-75	0700318-7	SEAL ---	1	S
	0700318-12	SEAL ---	1	O
-75A	0713019-33	UNION ---	1	U
-76	S202	MOULDING 5.0 IN LG BULK ITEM REF S-202R5008 -	1	
-77	S202	MOULDING 11.50 IN LG BULK ITEM REF S-202R11508 --	1	
-78	1200614-4	BAFFLE ASSEMBLY ---	1	V
	0700123-8	BAFFLE ASSEMBLY ---	1	W
	0755002-1	BAFFLE ASSEMBLY-OIL COOLER ---	1	X
		ATTACHING PARTS		
-79	S1021Z6-6	SCREW ---	1	
-80	NAS446-2-3	NUT ---	1	
		---*---		
-81	S202	MOULDING 8.50 IN LG BULK ITEM REF S-202R8508-	1	
-82	0750152-3	BAFFLE ---	1	
-83	0750157	DIP STICK-OIL ---	1	F
	0750212-1	DIP STICK-OIL ---	1	D

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
63 -84	S1711-1	SWITCH-OIL PRESSURE	1	L
-85	1213158-1	ADAPTER	1	L
-86	MS20822-4D	ELBOW	1	L
-87	AN924-4	NUT	1	L
-88	MS28778-4	O RING	1	L
-89	1200106-138	LINE ASSEMBLY-OIL PRESS	1	
-90	S1964-3	VALVE ASSEMBLY-OIL QUICK DRAIN	1	D
		NOTE. *THIS ENGINE IS EQUIPPED WITH NON CONGEALING OIL COOLER. WHEN ORDERING IT IS NECESSARY TO INCLUDE SPEC NO.		
		NOTE. %THIS ENGINE IS EQUIPPED WITH STANDARD OIL COOLER. WHEN ORDERING IT IS NECESSARY TO INCLUDE SPEC NO.		
		A---182 SERIAL 18253599 THRU 18254423		
		B---182 SERIAL 18254424 THRU 18262465		
		A182 SERIAL A182-0001 & ON		
		C---182 SERIAL 18253559 THRU 18255058		
		D---182 SERIAL 18255059 THRU 18262465		
		A182 SERIAL A182-0001 & ON		
		E---182 SERIAL 18254310 THRU 18262465		
		A182 SERIAL A182-0001 & ON		
		F---182 SERIAL 18253599 THRU 18255058		
		G---182 SERIAL 18253599 THRU 18255196		
		H---182 SERIAL 18255197 THRU 18262465		
		A182 SERIAL A182-0001 & ON		
		J---182 SERIAL 18253599 THRU 18255844		
		K---182 SERIAL 18255845 THRU 18262465		
		A182 SERIAL A182-0001 & ON		
		L---182 SERIAL 18258334 THRU 18262465		
		A182 SERIAL 182-0097 & ON		
		M---182 SERIAL 18253599 THRU 18259620		
		A182 SERIAL A182-0001 THRU A182-0116		
		N---182 SERIAL 18259621 THRU 18260445		
		A182 SERIAL A182-0117 & ON		
		O---182 SERIAL 18260056 THRU 18262465		
		A182 SERIAL A182-0117 & ON		
		P---182 SERIAL 18260078 THRU 18262465		
		A182 SERIAL A182-0117 & ON		
		R---182 SERIAL 18253599 THRU 18260445		
		A182 SERIAL A182-0001 & ON		
		S---182 SERIAL 18254310 THRU 18260055		
		A182 SERIAL A182-0001 THRU A182-0116		
		T---182 SERIAL 18260056 THRU 18260445		
		A182 SERIAL A182-0117 & ON		
		U---182 SERIAL 18260446 THRU 18262465		
		V---182 SERIAL 18253599 THRU 18260574		
		W---182 SERIAL 18260575 THRU 18260717		
		18260720 THRU 18260756		
		A182 SERIAL A182-0117 THRU A182-0136		
		X---182 SERIAL 18260718, 18260719 & 18260757 & ON		
		A182 SERIAL A182-0137 & ON		
		Y---182 SERIAL 18254310 THRU 18260574		
		A182 SERIAL A182-0001 THRU A182-0136		
		Z---182 SERIAL 18260575 THRU 18262465		
		A182 SERIAL A182-0137 & ON		
		AA---182 SERIAL 18253599 THRU 18255819		
		AB---182 SERIAL 18255820 THRU 18262465		
		A182 SERIAL A182-0001 & ON		


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
63A-			ENGINE COMPONENTS & ASSOCIATED ACCESSORIES O-470R ENGINE --	NP	
- 1	628472		MAGNETO LH CM SCINTILLA S6RN201 ----------	1	A
- 2	628473		MAGNETO RH CM SCINTILLA S6RN205 ----------	1	A
- 3	631237		MAGNETO CM SCINTILLA S6RN25 ----------	2	B
- 4	625765		MAGNETO CM SLICK 662 ----------	2	C
- 5	534750		GASKET-MAGNETO TO CRANKCASE CM ----------	2	
- 6	629076		MAGNETO DRIVE GEAR CM ----------	1	
- 7	625298		IGNITION HARNESS RH CM RAY WHYTE ----------	1	A
- 8	625299		IGNITION HARNESS LH CM RAY WHYTE ----------	1	A
- 9	633005		IGNITION HARNESS-BENDIX LIGHTWEIGHT COMPLETE ASSEMBLY CM-	1	B
-10	633006		IGNITION HARNESS-RH BENDIX LIGHTWEIGHT CM ----------	1	B
-11	633007		IGNITION HARNESS-LH BENDIX LIGHTWEIGHT CM ----------	1	B
-12	633311		IGNITION HARNESS COMPLETE CM SLICK ----------	1	C
-13	625093		OIL COOLER CM HARRISON REPLACED BY 627392 -------	1	
-14	627392		OIL COOLER CM HARRISON ----------	1	
-15	631095		OIL COOLER CM MODINE ----------	1	
-16	630050		OIL COOLER-LARGE NON CONGEALING CM ----------	1	E
-17	626332		PLATE-OIL COOLER CM USED WITH NON CONGEALING COOLER -	1	E
-18	626342		GASKET-OIL COOLER TO PLATE CM FOR NON CONGEALING COOLER -	1	E
-19	626341		GASKET-PLATE TO CRANKCASE CM FOR NON CONGEALING COOLER --	1	E
-20	626189		OIL COOLER-LARGE CM HARRISON P/N 62272A ----------	1	L
-21	537282		GASKET-OIL COOLER TO OIL COOLER ADAPTER USE WITH 626189 -	1	L
-22	537312		PLATE-OIL COOLER END USE WITH 626189 ----------	1	L
-23	625017		GASKET-COOLER TO PLATE CM STANDARD OIL COOLER -------	1	
-24	625303		GASKET-CRANKCASE TO COOLER CM STANDARD COOLER -------	1	
-25	0750140-5		GENERATOR 50 AMP 627272 CM DELCO REMY 1101895, ------ 1101909 OR 1101912	1	F
-26	539547		GENERATOR DRIVE BELT CM ----------	1	F
-27			ALTERNATOR-52 AMP 14 VOLT REFER TO SERVICE LETTER 66-1 --	1	G
-28	C611501-0102		ALTERNATOR-60 AMP 14 VOLT SEE FIGURES 90 & 95 ----------	1	H
-29	S1597-1-31.2		ALTERNATOR DRIVE BELT ----------	1	G
-30	S1597-1-30.8		ALTERNATOR DRIVE BELT ----------	1	H
-31	0413205-11		VOLTAGE REGULATOR-USED WITH 50 AMP GENERATOR ----------	1	F
-32	0750216-1		VOLTAGE REGULATOR-USED WITH ALTERNATOR WHEN ---------- EXHAUSTED USE C611001-0101	1	J
-33	C611001-0101		VOLTAGE REGULATOR-USED WITH ALTERNATOR ----------	1	K
-34	538076		BEVEL GEAR-GOVERNOR DRIVE CM ----------	1	
-35	629176		STARTER-12 VOLT HEAVY DUTY CM DELCO ----------	1	
	634592		STARTER-12 VOLT HEAVY DUTY CM PRESTOLITE ----------	1	
-36	MS9021-038		O RING-STARTER TO ENGINE ----------	1	
-37	0750142-1		GASKET-CARBURETOR AIR BOX TO CARBURETOR ----------	1	
-38	633027		CARBURETOR CM MARVEL SCHEBLER TYPE MA4-5 ----------	1	
-39	35985		GASKET-CARBURETOR TO ENGINE CM ----------	1	
-40	0750038-4		AIR FILTER-CARBURETOR DONALDSON P10-6150 ----------	1	
-41	0750038-3		GASKET-AIR FILTER DONALDSON P-100232 ----------	1	
-42	SH15	**	SPARK PLUG FOR USE IN SHIELDED SYSTEMS WITH 5-8 24-3A --- THREADS	12	
-43	SH20A	**	SPARK PLUG FOR USE IN SHIELDED SYSTEMS WITH 5-8 24-3A --- THREADS	12	
-44	SH200A	**	SPARK PLUG FOR USE IN SHIELDED SYSTEMS WITH 3-4 20-3A --- THREADS	12	

NOTE. *THIS LISTING IS COMPILED TO PROVIDE PART NUMBERS OF COMMONLY USED ENGINE COMPONENTS AND ASSOCIATED ACCESSORIES. RELATIONSHIP OF THESE PARTS TO ENGINE OR AIRCRAFT ASSEMBLIES IS NOT INDICATED BY INDENTION. THIS FIGURE IS NOT ILLUSTRATED. INDEX NUMBERS ARE PROVIDED FOR LOCATION OF LINE ON WHICH PART NUMBER APPEARS.

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
63A-		NOTE. **SPARK PLUGS ARE LISTED IN ORDER OF HEAT RANGE, PROGRESSIVELY COLDER FROM TOP LISTING TO BOTTOM. A---182 SERIAL 18253599 THRU 18254423 B---182 SERIAL 18254424 THRU 18256684 C---182 SERIAL 18256685 THRU 18262465 A182 SERIAL A182-0001 & ON D---DELETED NEVER USED E---182 SERIAL 18254310 THRU 18262465 A182 SERIAL A182-0001 & ON F---182 SERIAL 18253599 THRU 18255100 & 18255126 THRU 18255844 G---182 SERIAL 18255101 THRU 18255125 & 18255845 THRU 18256684 H---182 SERIAL 18256685 THRU 18262465 A182 SERIAL A182-0001 & ON J---182 SERIAL 18255101 THRU 18255125 & 18255845 THRU 18257379 A182-0001 THRU A182-0024 K---182 SERIAL 18257380 THRU 18262465 A182 SERIAL A182-0025 & ON L---182 SERIAL 18253599 THRU 18255058		

Engine (Cont)

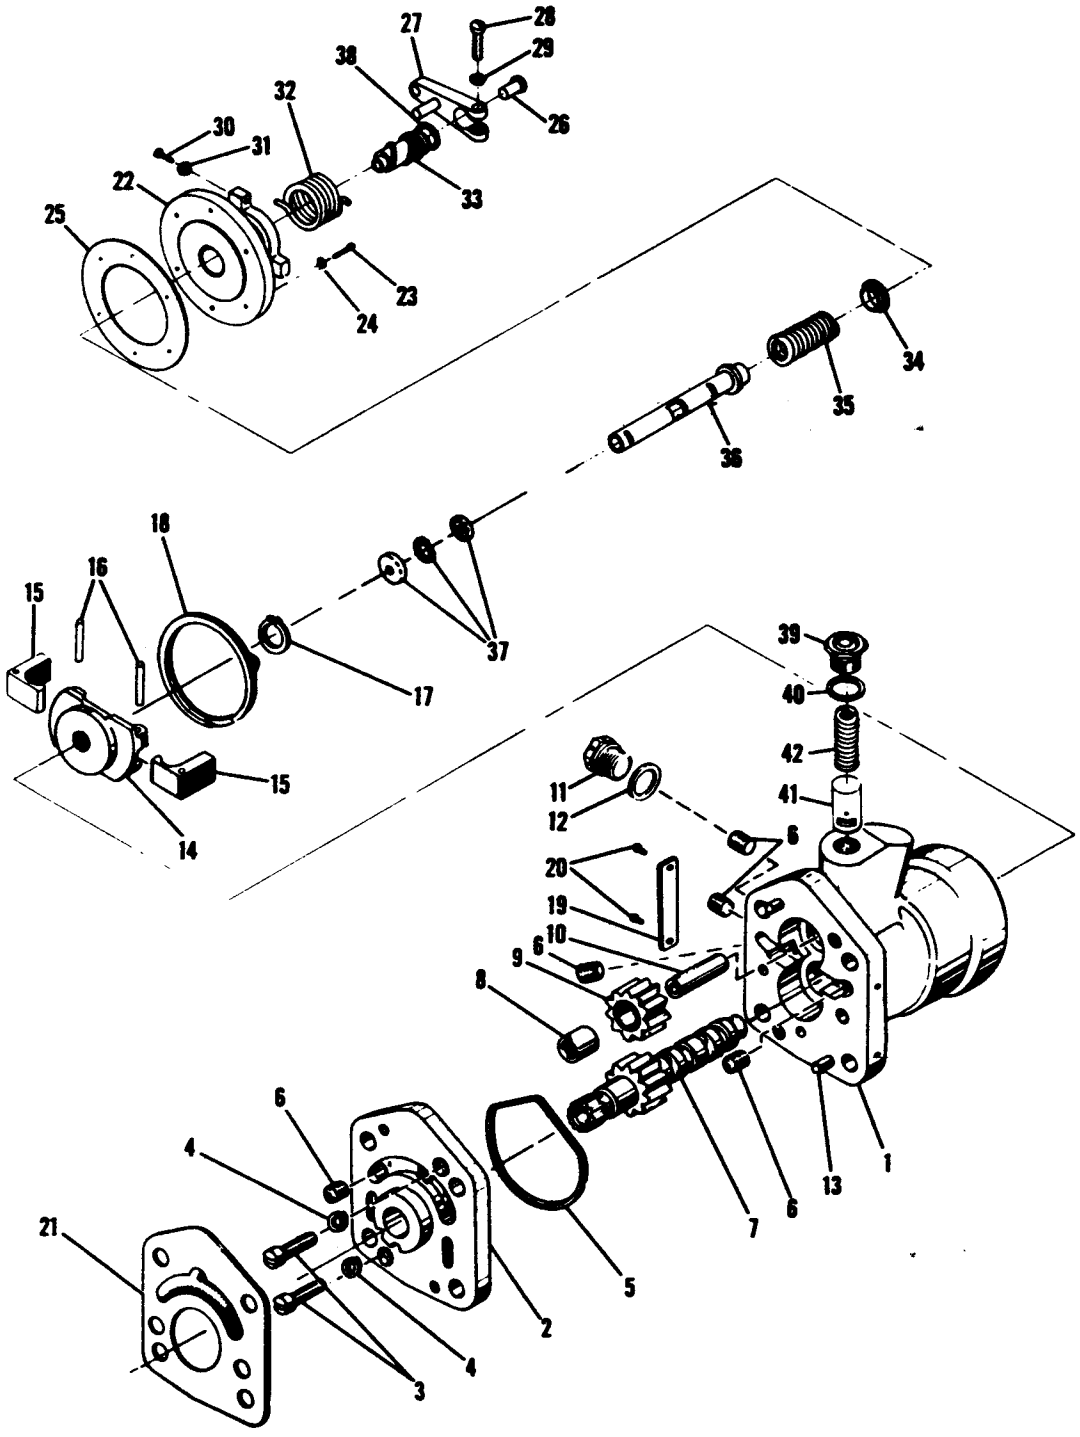


182 SERIAL 18253599 THRU 18254760

Figure 64. Propeller Governor Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
64 -	0750101-61	GOVERNOR ASSEMBLY-PROPELLER ORDER C161040-0103	NP	A
		SEE FIG 64A. FOR BREAKDOWN		
- 1	210253	BODY-GOVERNOR WGV	1	
- 2	210259	BASE-GOVERNOR WGV	1	
		ATTACHING PARTS		
- 3	218036	SCREW WGV	2	
- 4	AN935-10	WASHER	2	
- 5	206336	O RING WGV	1	
		---*---		
- 6	190734	PLUG-PIPE WGV	4	
- 7	210206	GEAR-PUMP DRIVE WGV	1	
- 8	210036	BEARING-NEEDLE WGV	1	
- 9	204864	GEAR-PUMP IDLER WGV	1	
-10	210031	STUD-IDLER GEAR WGV	1	
-11	210095	PLUG-SCREW THREAD WGV	1	
-12	190733	WASHER WGV	1	
-13	184793	PIN-DOWEL WGV	2	
-14	210207	HEAD-FLYWEIGHT WGV	1	
-15	210289	FLYWEIGHT WGV	1	
-16	210112	PIN-FLYWEIGHT WGV	2	
-17	190094	RING-RETAINING WGV	1	
-18	192103	RING-SPIROLOX RETAINING WGV	1	
-19	193385	NAMEPLATE WGV	1	
		ATTACHING PARTS		
-20	AN535-0-2	SCREW	2	
		---*---		
-21	MS100009	GASKET-MOUNTING	1	
-22	210272	COVER-GOVERNOR WGV	1	
		ATTACHING PARTS		
-23	AN503-8-10	SCREW	4	
-24	AN935-8L	WASHER	4	
-25	206337	GASKET COVER WGV	1	
		---*---		
-26	210293	PLUG-SPEED ADJUSTMENT WGV	1	
-27	210039	LEVER ASSEMBLY-SPEED ADJUSTMENT WGV	1	
-28	188434	SCREW WGV	1	
-29	AN935-10	WASHER	1	
-30	190576	SCREW WGV	1	
-31	188302	NUT WGV	1	
-32	191869	SPRING-LEVER CONTROL WGV	1	
-33	210100	SHAFT & WORM ASSEMBLY-SPEED ADJUSTMENT WGV	1	
-34	210214	SEAT-SPEEDER SPRING WGV	1	
-35	192709	SPRING-SPEEDER WGV	1	
-36	210269	PLUNGER ASSEMBLY-PILOT VALVE WGV	1	
-37	180231	BEARING-PILOT VALVE WGV	1	
-38	182684	O RING WGV	1	
-39	218446	PLUG-RELIEF VALVE WGV	1	
-40	186320	GASKET WGV	1	
-41	210257	PLUNGER-RELIEF VALVE WGV	1	
-42	192558	SPRING-RELIEF VALVE WGV	1	

A---182 SERIAL 18253599 THRU 18254760

Engine (Cont)

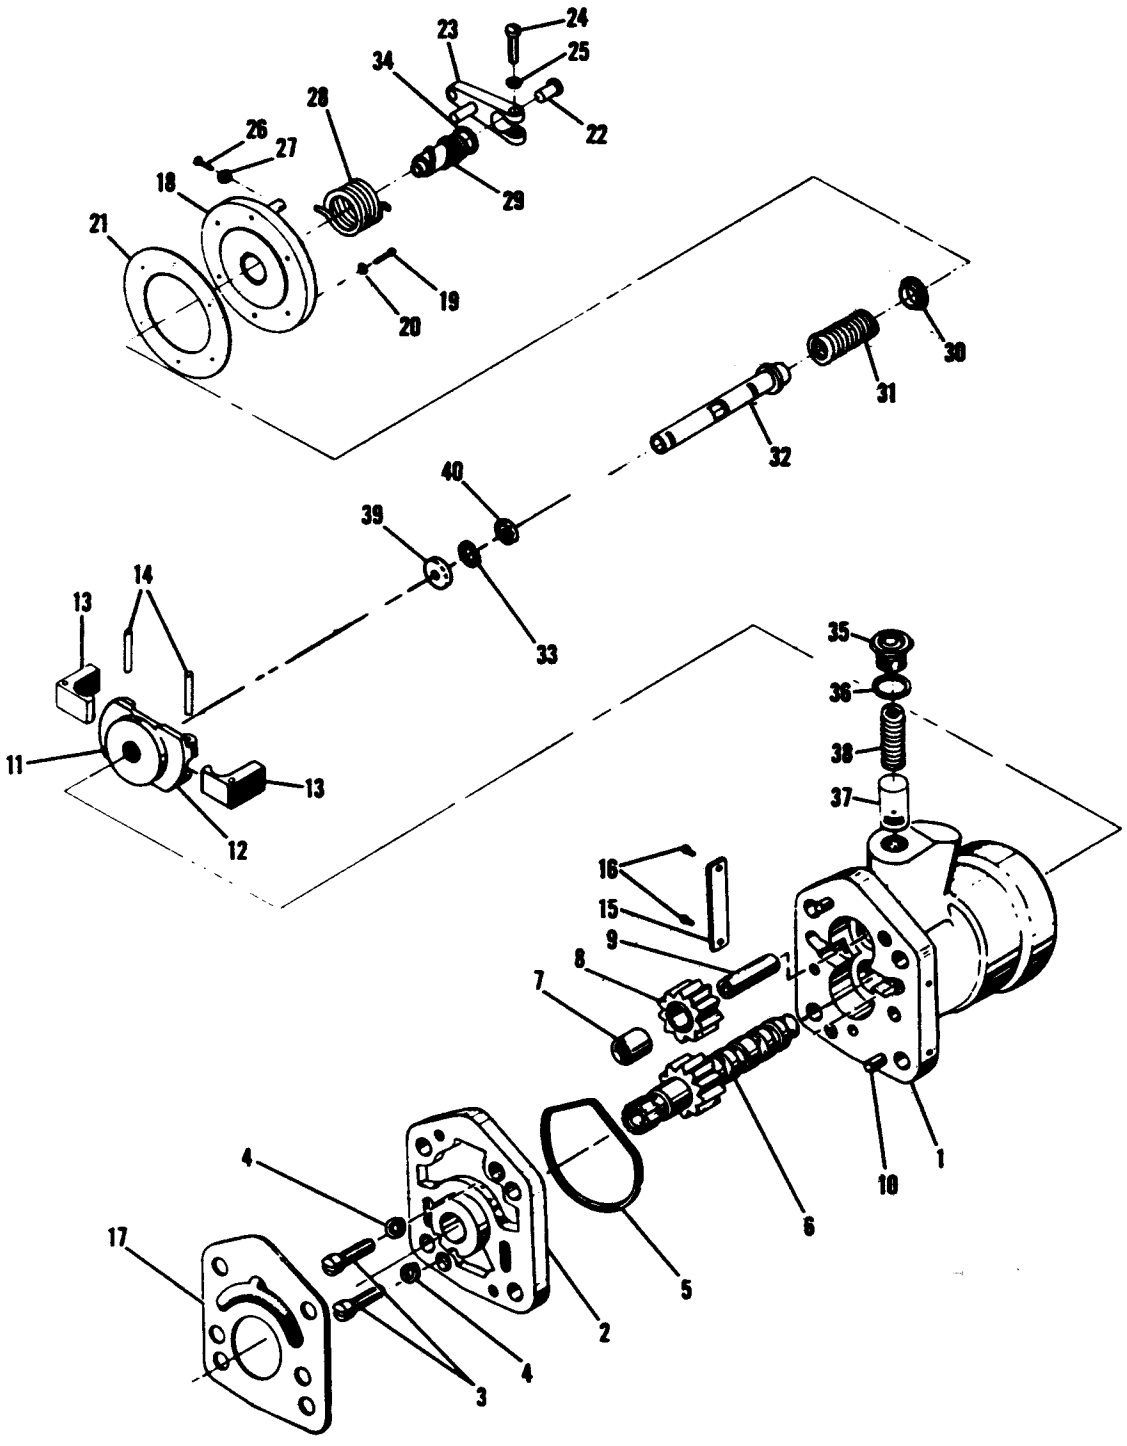


182 SERIAL 18254761 THRU 18255058

Figure 64A. Propeller Governor Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
64A-	0750101-66	GOVERNOR ASSEMBLY-PROPELLER ORDER C161040-0103	NP	A
	C161040-0103	GOVERNOR ASSEMBLY-PROPELLER	1	A
- 1	210253	BODY-GOVERNOR WGV	1	
- 2	213214	BASE-GOVERNOR WGV	1	
		ATTACHING PARTS		
- 3	189744	SCREW WGV	2	
- 4	218547	WASHER WGV	2	
- 5	206336	O RING WGV	1	
		---*---		
- 6	210396	GEAR-PUMP DRIVE WGV	1	
- 7	210036	BEARING-NEEDLE WGV	1	
- 8	204864	GEAR-PUMP IDLER WGV	1	
- 9	210031	STUD-IDLER GEAR WGV	1	
-10	210261	PIN-DOWELL WGV	2	
-11	210382	HEAD ASSEMBLY-FLY WEIGHT WGV	1	
-12	210393	HEAD-FLYWEIGHT WGV	1	
-13	196195	FLYWEIGHT WGV	1	
-14	214202	PIN-FLYWEIGHT WGV	1	
	210394	KEEPER WGV	1	
-15	193385	NAMEPLATE WGV	1	
		ATTACHING PARTS		
-16	189574	PIN-DRIVE WGV	2	
		---*---		
-17	MS100009	GASKET-MOUNTING	1	
-18	210399	COVER-GOVERNOR WGV	1	
		ATTACHING PARTS		
-19	189482	SCREW WGV	4	
-20	189739	WASHER WGV	4	
-21	206337	GASKET COVER WGV	1	
		---*---		
-22	210293	PLUG-SPEED ADJUSTMENT WGV	1	
-23	210039	LEVER ASSEMBLY-SPEED ADJUSTMENT WGV	1	
-24	188434	SCREW WGV	1	
-25	188141	WASHER WGV	1	
-26	218537	SCREW WGV	1	
-27	188302	NUT WGV	1	
-28	191869	SPRING-LEVER CONTROL WGV	1	
-29	213201	SHAFT AND WORM ASSEMBLY-SPEED ADJUSTMENT WGV	1	
-30	210326	SEAT-SPEEDER SPRING WGV	1	
-31	192709	SPRING-SPEEDER WGV	1	
-32	210398	PLUNGER ASSEMBLY-PILOT VALVE WGV	1	
-33	180231	BEARING-PILOT VALVE WGV	1	
-34	182747	O RING WGV	1	
-35	218446	PLUG-RELIEF VALVE WGV	1	
-36	186320	GASKET WGV	1	
-37	210257	PLUNGER-RELIEF VALVE WGV	1	
-38	192558	SPRING-RELIEF VALVE WGV	1	
-39	213200	RACE-PILOT VALVE BEARING LOWER WGV	1	
-40	210216	RACE-PILOT VALVE BEARING UPPER WGV	1	

A---182 SERIAL 18254761 THRU 18255058

Engine(Cont)

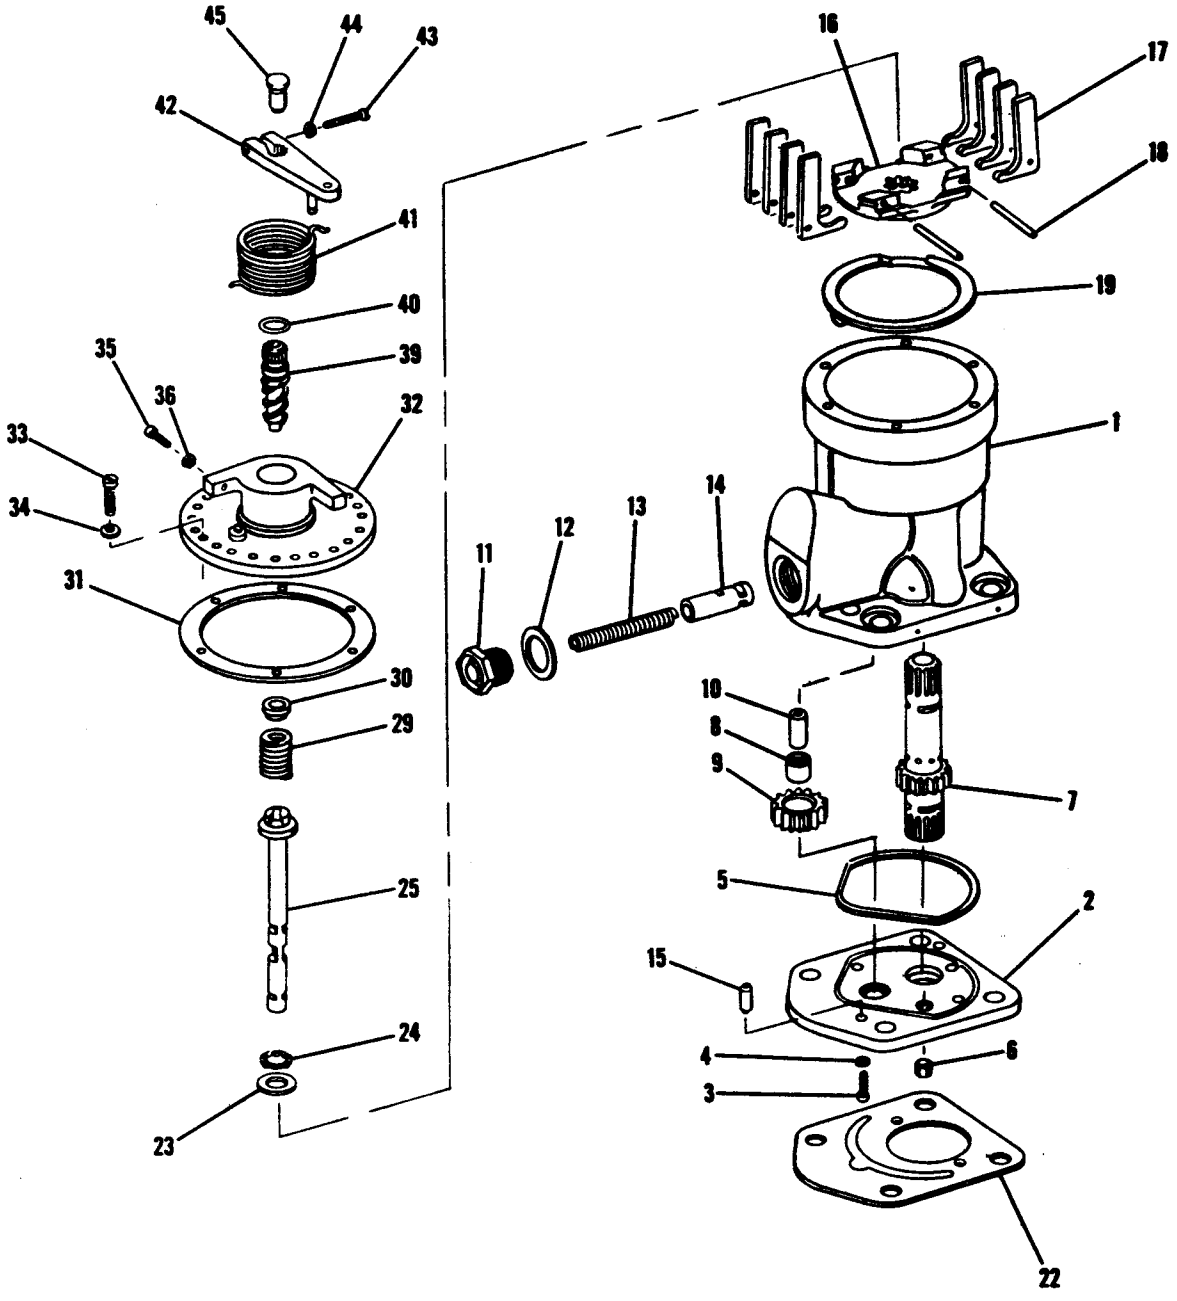


182 SERIAL 18255059 THRU 18262465

Figure 64B. Propeller Governor Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
648-	0550227-2	GOVERNOR ASSEMBLY-PROPELLER GARW 34-828-01	1	A
	SEE FIG 64C	GOVERNOR ASSEMBLY-PROPELLER ALTERNATE	1	A
- 1	34-828-1	BODY GARW	1	
- 2	34-828-2	BASE GARW	1	
		ATTACHING PARTS		
- 3	AN500-8-8	SCREW	2	
- 4	AN936A8	WASHER	2	
- 5	34-828-27	GASKET-BASE GARW	1	
		---*---		
- 6	AN932-1	PLUG-PIPE	2	
- 7	34-828-15	GEAR-DRIVE GARW	1	
- 8	GB-59	BEARING TOR	1	
- 9	34-828-19	GEAR-PUMP IDLER GARW	1	
-10	34-828-7	STUD-IDLER GEAR GARW	1	
-11	34-828-24	PLUG GARW	1	
-12	34-828-25	WASHER-FLAT GARW	1	
-13	34-828-20	SPRING-RELIEF VALVE GARW	1	
-14	34-828-11	PLUNGER-RELIEF VALVE GARW	1	
-15	34-828-29	PIN-DOWEL GARW	1	
-16	34-828-14	BASE-FLYWEIGHT HEAD GARW	1	
-17	34-828-9	FLYWEIGHT	3	
		ATTACHING PARTS		
-18	B1316	PIN-DOWEL TOR	2	
		---*---		
-19	34-828-26	RING-SNAP GARW	1	
-20		DELETED-NOT AVAILABLE		
-21		DELETED-NOT AVAILABLE		
-22	MS100009	GASKET	1	
-23	34-828-12	RACE-BEARING GARW	1	
-24	R5673	BEARING NICE	1	
-25	34-831-905	VALVE-PILOT PRESS.TO INCREASE GARW	1	
-27		DELETED-NOT AVAILABLE		
-28		DELETED-NOT AVAILABLE		
-29	34-828-8	SPRING-SPEEDER GARW	1	
-30	34-828-10	SEAT-SPEEDER SPRING UPPER GARW	1	
-31	34-828-28	SEAL-COVER GARW	1	
-32	34-828-903	COVER ASSEMBLY GARW	1	
		ATTACHING PARTS		
-33	AN503-8-10	SCREW	6	
-34	AN935-8L	WASHER-LOCK	6	
		---*---		
-35	AN503-8-16	SCREW	1	
-36	AN340-8	NUT	1	
-37		DELETED-NOT AVAILABLE		
-38		DELETED-NOT AVAILABLE		
-39	34-828-907	SHAFT AND GEAR ASSEMBLY GARW	1	
-40	AN6227-89	O RING	1	
-41	34-828-13	SPRING-CONTROL LEVER GARW	1	
-42	34-828-902	LEVER ASSEMBLY GARW	1	
-43	AN502-10-14	SCREW	1	
-44	AN935-10L	WASHER	1	
-45	34-828-31	PLUG GARW	1	

A---182 SERIAL 18255059 THRU 18262465
A182 SERIAL A182-0001 & ON

Engine (Cont)

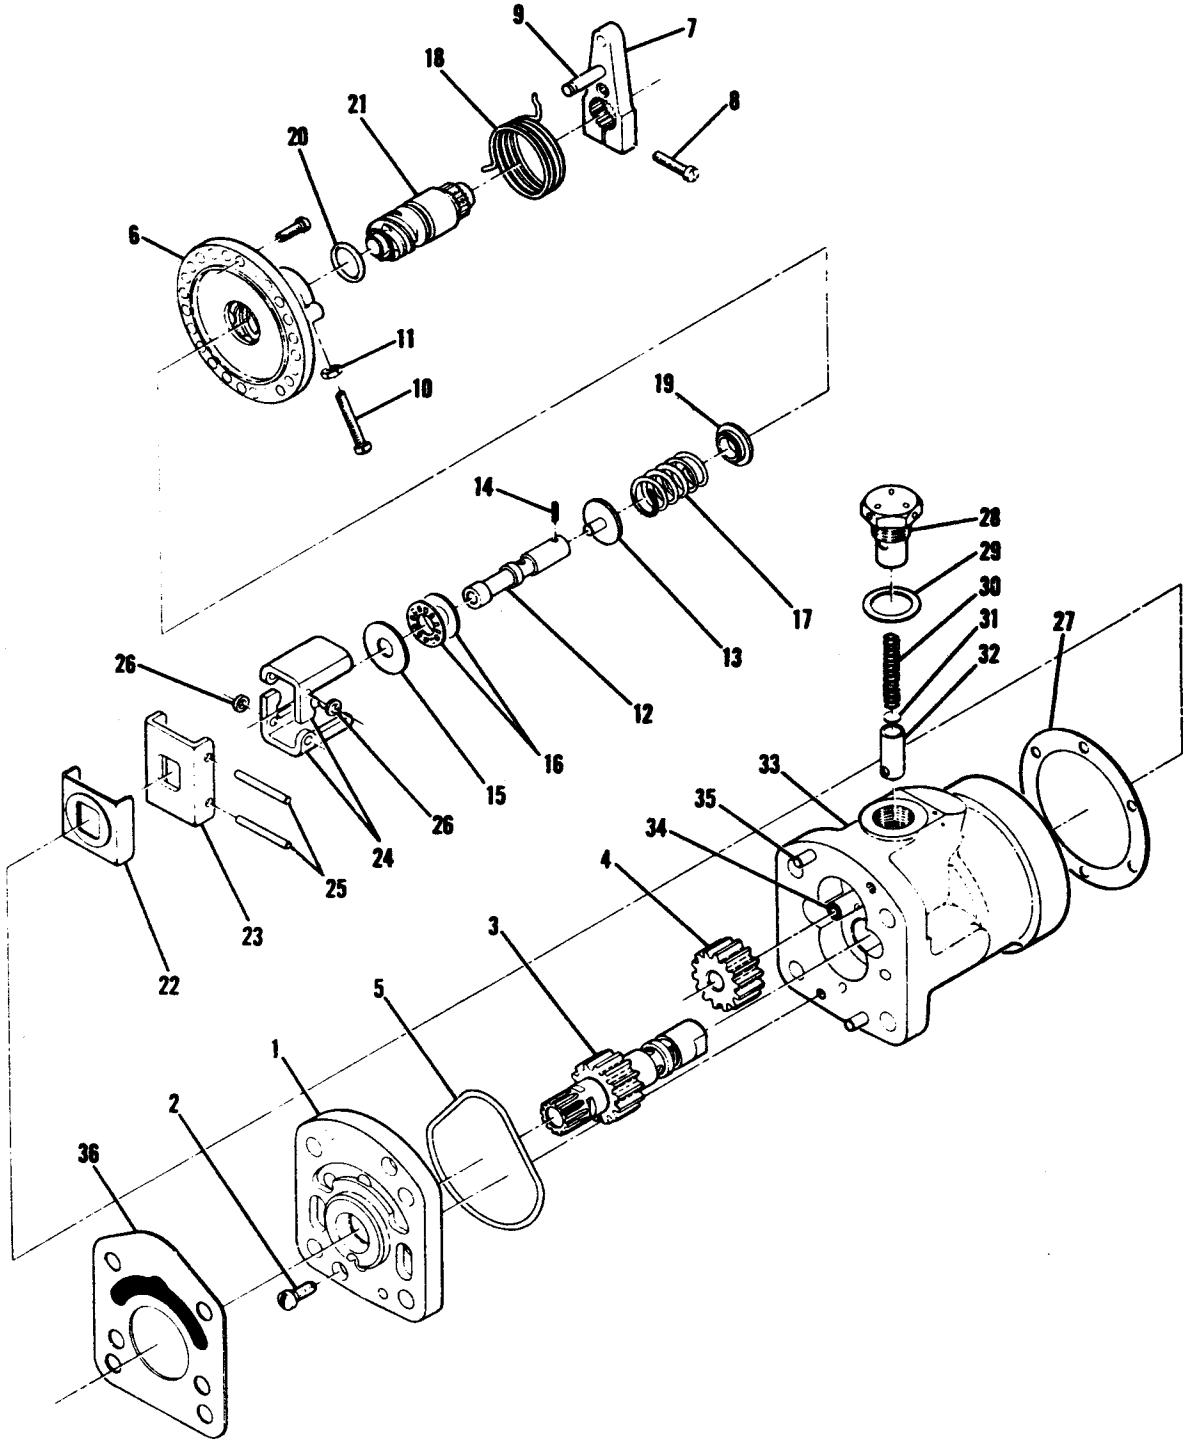


182 SERIAL 18255059 THRU 18262465

Figure 64C. Governor Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
64C-	C161030-0102	GOVERNOR ASSEMBLY ALTERNATE WEU C161031-0101 ----------	1	A
	C161031-0101	GOVERNOR ASSEMBLY ALTERNATE ----------	1	
- 1	C20057	COVER-PUMP HOUSING MCL ----------	1	
		ATTACHING PARTS		
- 2	AN500A10-8	SCREW ----------	2	
		---*---		
- 3	C20073	GEAR-DRIVE MCL ----------	1	
- 4	B20074	GEAR-IDLER MCL ----------	1	
- 5	A1633-36	O RING MCL ----------	1	
	B20085-2	HEAD ASSEMBLY-CONTROL MCL ----------	1	
		ATTACHING PARTS		
	AN503-8-8	SCREW ----------	6	
		---*---		
- 6	B20055	HOUSING ASSEMBLY-COVER MCL ----------	1	
- 7	A20039	LEVER ASSEMBLY-CONTROL MCL ----------	1	
		ATTACHING PARTS		
- 8	AN503-8-12	SCREW ----------	1	
		---*---		
- 9	A20034	PIN-TORSION SPRING MCL ----------	1	
-10	AN503-8-16	SCREW ----------	2	
-11	AN340-8	NUT ----------	2	
	A20083	PILOT SPOOL & END FITTING ASSEMBLY MCL ----------	1	
-12	B20066	SPOOL-PILOT MCL ----------	1	
-13	A20067	END FITTING-SPOOL MCL ----------	1	
		ATTACHING PARTS		
-14	A20037	ROLL PIN MCL ----------	1	
		---*---		
-15	A20071	RACE-BEARING MCL ----------	1	
-16	A20086	BEARING-THRUST MCL ----------	1	
-17	A20069-1	SPRING-SPEEDER MCL ----------	1	
-18	B20040	SPRING-TORSIONAL MCL ----------	1	
-19	A20068	SEAT-SPRING ----------	1	
-20	MS28775-113	O RING MCL ----------	1	
-21	C20075	SHAFT-CONTROL MCL ----------	1	
	A20084	DRIVE DISC & FLYWEIGHT ASSEMBLY MCL ----------	1	
-22	B20060	CAP-DRIVE DISC MCL ----------	1	
-23	A20063	DISC-DRIVE MCL ----------	1	
-24	A20064	FLYWEIGHT MCL ----------	2	
		ATTACHING PARTS		
-25	A20070	PIN-FLYWEIGHT MCL ----------	2	
-26	A20072	SPACER-FLYWEIGHT MCL ----------	2	
		---*---		
-27	A20022	GASKET-COVER MCL ----------	1	
-28	A20076	PLUG-RELIEF VALVE MCL ----------	1	
-29	A20078	WASHER MCL ----------	1	
-30	A20079	SPRING-PRESSURE RELIEF MCL ----------	1	
-31	A20081	SHIM-PRESSURE RELIEF MCL ----------	AR	
-32	B20077	PISTON MCL ----------	1	
-33	B20082	BODY ASSEMBLY-GOVERNOR MCL ----------	1	
-34	A20026	STUD-IDLER GEAR MCL ----------	1	
-35	A20027	PIN-DOWEL MCL ----------	2	
-36	MS100009	GASKET-MOUNTING ----------	1	
		A---182 SERIAL 18255059 THRU 18262465 A182 SERIAL A182-0001 & ON		

Engine (Cont)

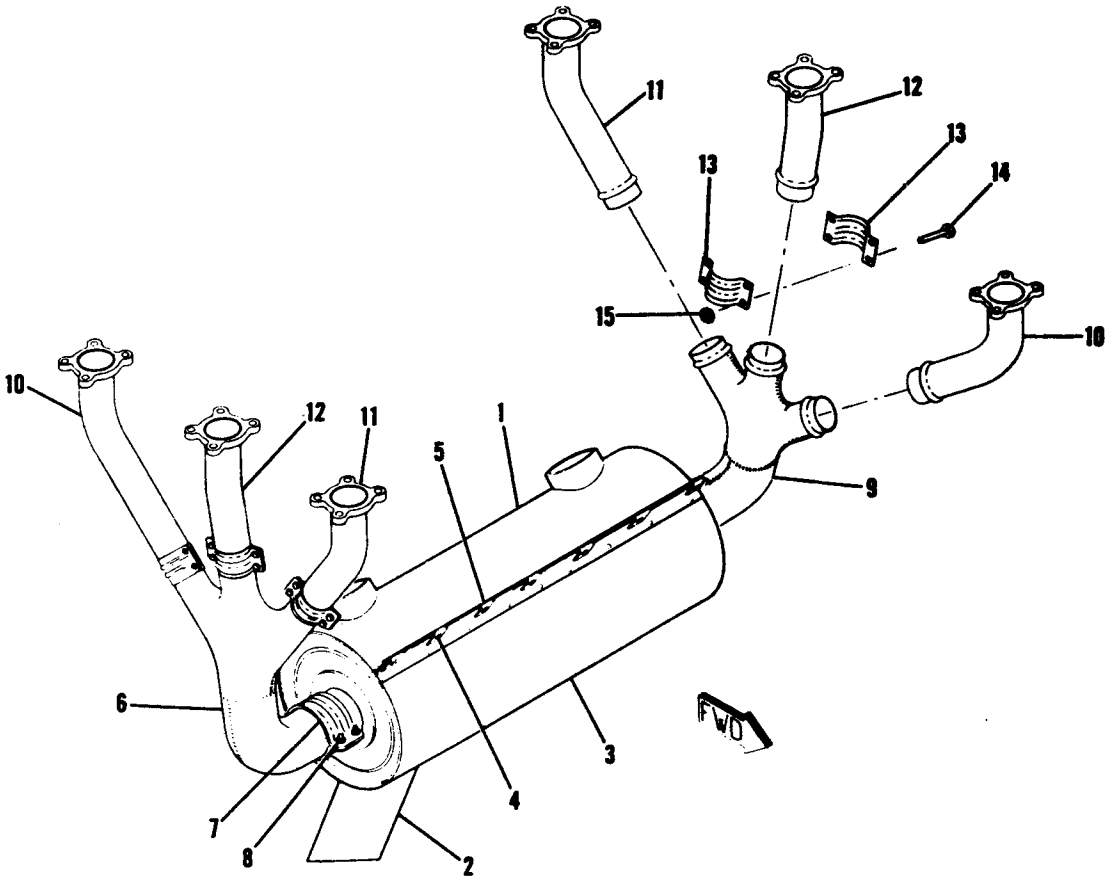


182 SERIAL 18253599 THRU 18255058

Figure 65. Exhaust Stack Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
65 - 1	0750130-53	STACK ASSEMBLY-EXHAUST	1	A
	0750130-59	STACK ASSEMBLY-EXHAUST	1	B
- 2	0750130-54	MUFFLER ASSEMBLY	1	A
	0750130-60	MUFFLER ASSEMBLY	1	B
- 3	0750130-51	SHROUD ASSEMBLY	1	A
	0750130-61	SHROUD ASSEMBLY	1	B
		ATTACHING PARTS		
- 4	S1021Z8-8	SCREW	7	
- 5	NAS446-4-3	NUTPLATE	7	
		---*---		
- 6	0750130-6	COLLECTOR ASSEMBLY	2	
		ATTACHING PARTS		
- 7	0750130-42	CLAMP	2	
- 8	AN3-4A	BOLT	4	
	MS21044N3	NUT	4	
		---*---		
- 9	0750130-48	COLLECTOR-EXHAUST	1	
-10	0750130-3	TUBE ASSEMBLY	1	
-11	0750130-4	TUBE ASSEMBLY	1	
-12	0750130-5	TUBE ASSEMBLY	1	
		ATTACHING PARTS		
-13	0750130-31	CLAMP-TUBE	2	
-14	AN3-4A	BOLT	4	
-15	MS21044N3	NUT	4	
		---*---		
		A---182 SERIAL 18253599 THRU 18254423		
		B---182 SERIAL 18254424 THRU 18255058		

Engine(Cont)

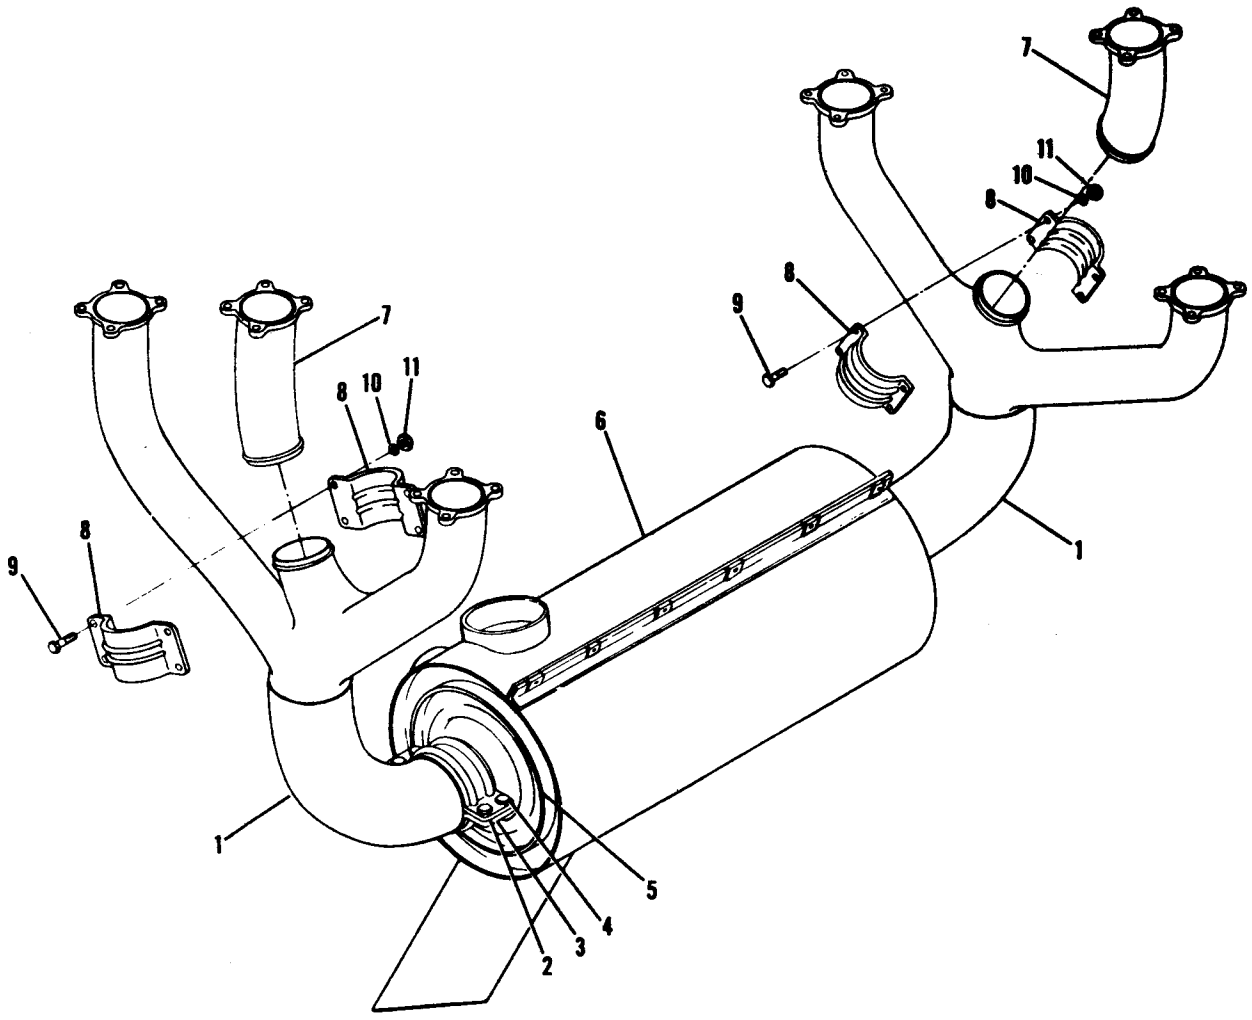

182 SERIAL 18255059 THRU 18262465

Figure 65A. Engine Exhaust Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
65A-	0750161-49 *	EXHAUST ASSEMBLY-ENGINE	1	A
	0750161-50	EXHAUST ASSEMBLY-ENGINE	1	C
	0750161-57	EXHAUST ASSEMBLY-ENGINE WEU 0750161-63	1	F
	0750161-63	EXHAUST ASSEMBLY-ENGINE	1	G
	0750161-200	EXHAUST ASSEMBLY-ENGINE	1	D
- 1	0750161-31 *	STACK ASSEMBLY-EXHAUST	2	A
	0750161-51	STACK ASSEMBLY-EXHAUST	2	B
	0750161-64	STACK ASSEMBLY-EXHAUST WEU 0750161-67	2	G
	0750161-67	STACK ASSEMBLY-EXHAUST	2	G
		ATTACHING PARTS		
- 2	0750161-24	CLAMP ASSEMBLY	1	
- 3	0750161-22	CLAMP	1	
- 4	AN3-4A	BOLT	4	
	MS21044N3	NUT	4	
		---*---		
- 5	0750161-28	MUFFLER WELD ASSEMBLY-EXHAUST	1	
- 6	0750161-40	SHROUD ASSEMBLY-EXHAUST MUFFLER	1	D
	0750161-58	SHROUD ASSEMBLY-EXHAUST MUFFLER	1	E
		ATTACHING PARTS		
	S1021Z8-8	SCREW	6	
	NAS395-14-3	NUT	6	
		---*---		
- 7	0750161-36	PIPE ASSEMBLY-EXHAUST	2	
		ATTACHING PARTS		
- 8	0750161-25	CLAMP-HALF	2	
- 9	AN3-4A	BOLT	4	
-10	AN960-10	WASHER	4	
-11	MS21044N3	NUT	4	
		---*---		

NOTE. *WHEN INITIALLY ORDERING THIS PART OR SERIAL 18255059 THRU 18256329, ALSO ORDER ITEMS -67 & -69 ON FIGURE 63.

A---182 SERIAL 18255059 THRU 18257598
A182 SERIAL A182-0001 THRU A182-0054
B---182 SERIAL 18257599 THRU 18261258
A182 SERIAL A182-0055 THRU A182-0136
C---182 SERIAL 18257599 THRU 18260445
A182 SERIAL A182-0055 THRU A182-0136
D---182 SERIAL 18255059 THRU 18260445
A182 SERIAL A182-0001 THRU A182-0136
E---182 SERIAL 18260446 THRU 18262465
A182 SERIAL A182-0137 & ON
F---182 SERIAL 18260446 THRU 18261258
G---182 SERIAL 18261259 THRU 18262465
A182 SERIAL A182-0137 & ON

Engine (Cont)

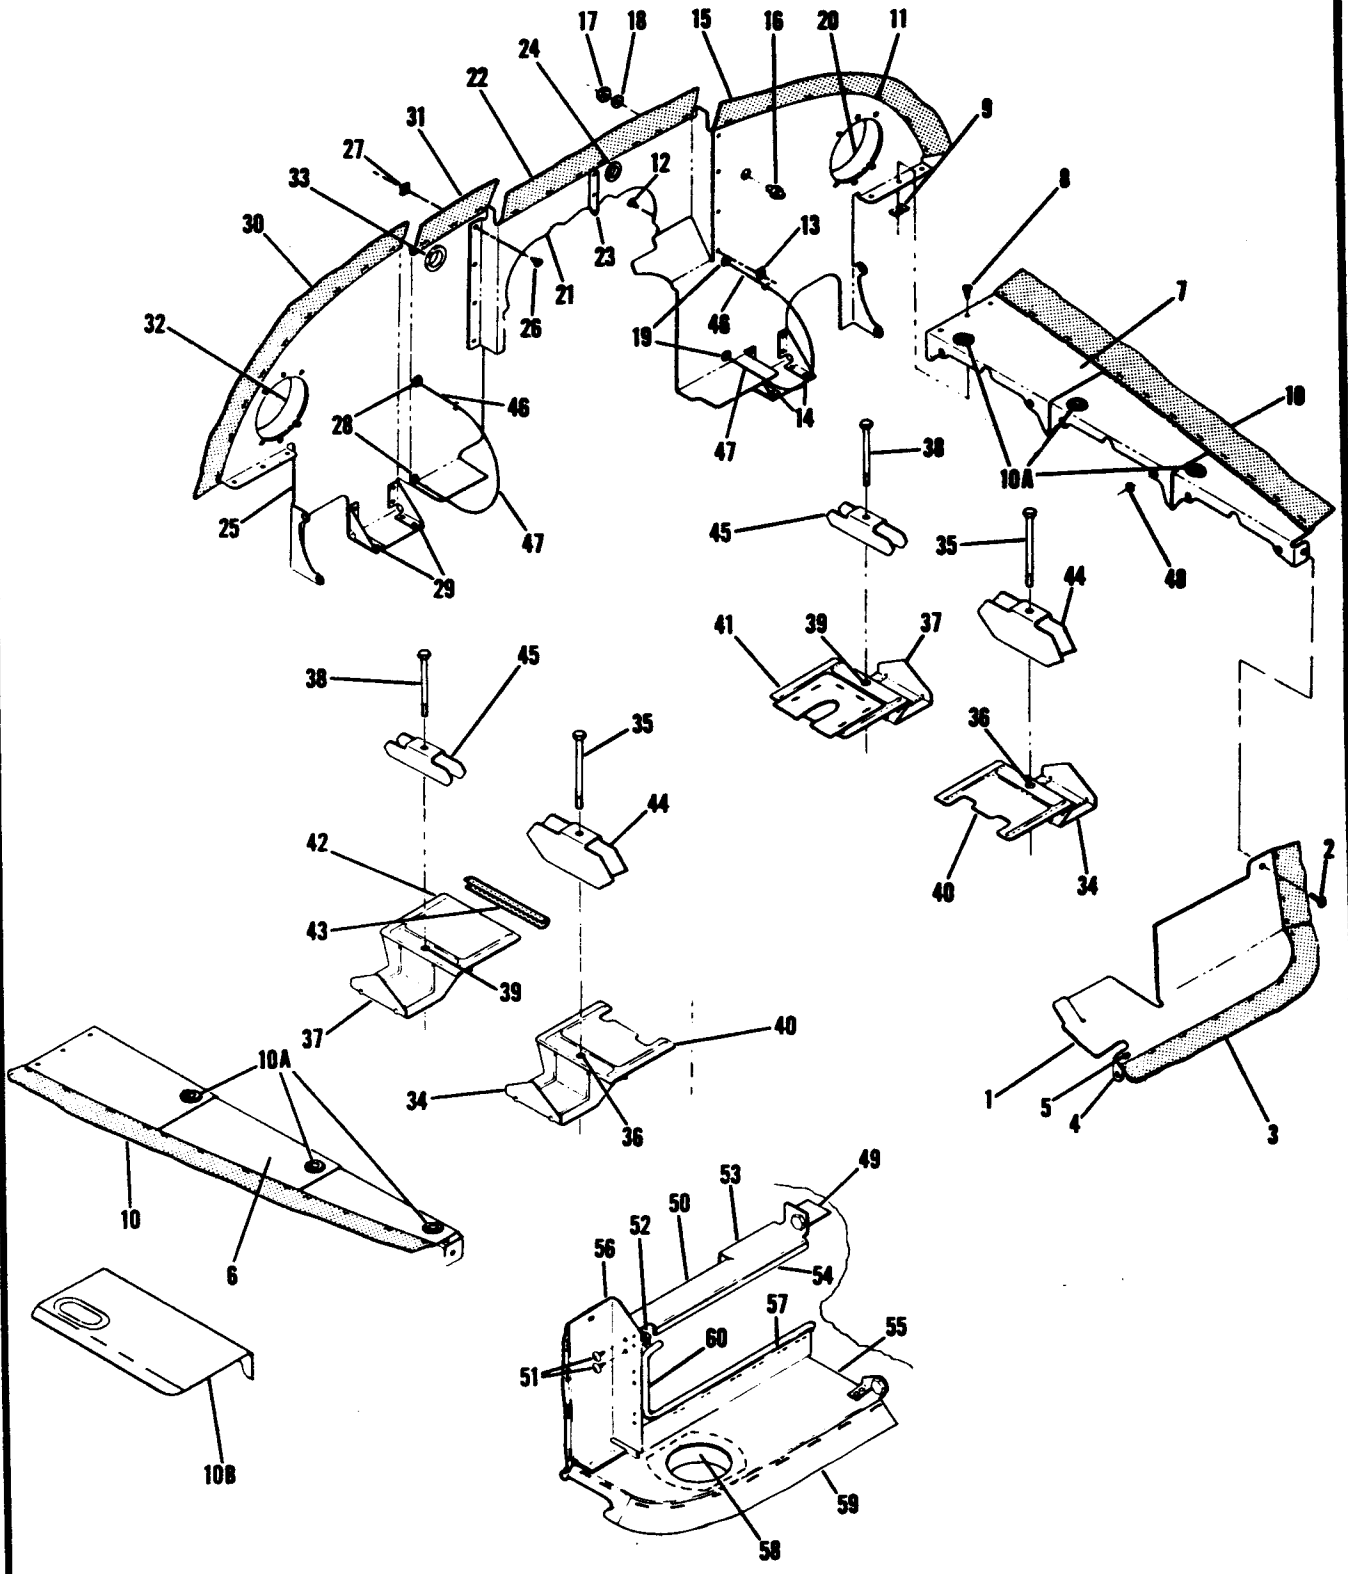


Figure 66. Engine Baffles Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
66 -		BAFFLES INSTALLATION-ENGINE	NP	
- 1	0750128-76	BAFFLES ASSEMBLY-FRONT LH	1	G
	0750184-1	BAFFLE ASSEMBLY-FRONT LH	1	M
	0750196-1	BAFFLE ASSEMBLY-FRONT LH	1	R
		ATTACHING PARTS		
- 2	S1021Z6-6	SCREW	1	
	NAS446-2-3	NUT	1	
		---*---		
- 3	0750128-37	SEAL-BAFFLE	1	G
	0750184-2	SEAL-BAFFLE	1	M
	0750196-3	SEAL-BAFFLE	1	R
- 4	0750128-42	BRACKET	1	
		ATTACHING PARTS		
- 5	S1021Z6-6	SCREW	1	
	NAS446-2-3	NUT	1	
		---*---		
- 6	0750128-74	BAFFLE ASSEMBLY-HORIZONTAL RH	1	A
	0750128-94	BAFFLE ASSEMBLY-HORIZONTAL RH	1	B
- 7	0750128-73	BAFFLE ASSEMBLY-HORIZONTAL LH	1	A
	0750128-93	BAFFLE ASSEMBLY-HORIZONTAL LH	1	B
		ATTACHING PARTS		
- 8	S1021Z6-6	SCREW	3	
- 9	NAS446-2-3	NUT	3	
		---*---		
-10	0750128-13	SEAL-BAFFLE	2	
-10A	MS35489-12S	GROMMET	3	B
-10B	0750606-3	BAFFLE ASSEMBLY USED WITH OIL FILTER	1	E
	0750128-82	BAFFLE ASSEMBLY USED WITH OIL FILTER	1	F
-11	0750128-50	BAFFLE ASSEMBLY-VERTICAL LH	1	A
	0750128-44	BAFFLE ASSEMBLY-VERTICAL LH	1	C
	0750128-100	BAFFLE ASSEMBLY-VERTICAL LH	1	D
-12	S1021Z6-6	SCREW	4	
-13	NAS446-2-3	NUT	4	
-14	0750128-11	GUSSET-BAFFLE	2	
-15	0750128-17	SEAL-BAFFLE	1	
-16	AN832-2D	UNION-BAFFLE	1	A
		ATTACHING PARTS		
-17	AN924-2D	NUT	1	A
-18	AN960D516	WASHER	1	A
		---*---		
-19	MS20230B20	GROMMET	2	
	SS51058K2215	PLUG BUTTON	1	B
-20	0750111-8	UNION-BAFFLE	1	A
-21	0750128-21	BAFFLE ASSEMBLY-REAR	1	
-22	0750128-16	SEAL-BAFFLE	1	
-23	0750117-21	BRACKET-BAFFLE	1	
-24	MS35489-118	GROMMET	1	
-25	0750128-68	BAFFLE ASSEMBLY-VERTICAL RH	1	G
	0750128-108	BAFFLE ASSEMBLY-VERTICAL RH	1	K
	0750128-110	BAFFLE ASSEMBLY-VERTICAL RH	1	L
	0750128-53	BAFFLE ASSEMBLY-VERTICAL RH USED WITH OIL FILTER	1	E
		ATTACHING PARTS		
-26	S1021Z6-6	SCREW	4	
-27	NAS446-2-3	NUT	4	
-28	MS20230B20	GROMMET	2	
		---*---		
-29	0750128-11	GUSSET-BAFFLE	2	
-30	0750128-14	SEAL-BAFFLE	1	
-31	0750128-15	SEAL-BAFFLE	1	
-32	0713019-33	UNION-BAFFLE REQD ON 0750123-68 & -108 ONLY	1	J
-33	MS35489-20	GROMMET	1	
-34	0750135-1	BAFFLE ASSEMBLY-INNER CYLINDER FORWARD	2	
		ATTACHING PARTS		
-35	AN3-67A	BOLT	1	
		---*---		
-36	NAS680A3	NUTPLATE	1	
-37	0750135-1	BAFFLE ASSEMBLY-INNER CYLINDER REAR	2	
		ATTACHING PARTS		
-38	AN3-60A	BOLT	1	
		---*---		
-39	NAS680A3	NUTPLATE	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
66 -40	0750135-3	BAFFLE-INTER CYLINDER FRONT	2	A
-41	0750135-10	BAFFLE ASSEMBLY-INTER CYLINDER LH REAR	1	A
	0750135-11	SEAL-BAFFLE	1	A
	0750135-3	BAFFLE-INTER CYLINDER LH REAR	1	B
-42	0750135-8	BAFFLE ASSEMBLY-INTER CYLINDER RH REAR	1	A
-43	0411875-9	MOULDING	1	A
	0750135-4	BAFFLE-INTER CYLINDER RH REAR	1	B
-44	0851700-96	SUPPORT-BAFFLE FRONT	2	
-45	0750117-31	SUPPORT-BAFFLE REAR	2	
-46	0450277-3	FASTENER-REAR BAFFLE TO CYLINDER UPPER	2	
-47	0450277-2	FASTENER-REAR BAFFLE TO CYLINDER LOWER	2	
-48	AN9600416	WASHER	32	
-49	0750152-1	BAFFLE-OIL COOLER INBOARD	1	
	0750152-3	BAFFLE-OIL COOLER NON-CONGEALING INBD	1	N
-50	0750148-2	BAFFLE ASSEMBLY-OIL COOLER	1	M
	0755002-1	BAFFLE ASSEMBLY-OIL COOLER NON-CONGEALING	1	N
	0750148-1	BAFFLE ASSEMBLY-OIL COOLER	1	R
		ATTACHING PARTS		
-51	S1021Z6-6	SCREW	2	
-52	NAS446-2-3	NUT	2	
		---*---		
-53	0750148-1	BAFFLE-OIL COOLER	1	M
	0750148-3	BAFFLE-OIL COOLER	1	R
-54	S202RB	CHANNEL-BAFFLE	AR	
-55	0750149-7	BAFFLE ASSEMBLY-OIL COOLER	1	G
	0750187-1	BAFFLE ASSEMBLY-OIL COOLER	1	K
	0750187-3	BAFFLE ASSEMBLY-OIL COOLER	1	P
	0700123-12	BAFFLE ASSEMBLY-OIL COOLER NON-CONGEALING	1	Q
	0750197-1	BAFFLE ASSEMBLY-OIL COOLER NON-CONGEALING	1	R
	0750198-10	BAFFLE ASSEMBLY-OIL COOLER	1	R
-56	0750149-2	BAFFLE-VERTICAL	1	
-57	0750149-10	BAFFLE ASSEMBLY-HORIZONTAL	1	G
	0750188-1	BAFFLE ASSEMBLY-HORIZONTAL	1	K
	0750188-4	BAFFLE ASSEMBLY-HORIZONTAL	1	L
-58	0713019-33	UNION	1	L
-59	0750149-4	SEAL-HORIZONTAL BAFFLE	1	G
	0750187-2	SEAL-HORIZONTAL BAFFLE	1	H
-60	0450234-24	RUB STRIP ASSEMBLY	1	S

A---182 SERIAL 18253599 THRU 18254423
B---182 SERIAL 18254424 THRU 18262465
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18253599 THRU 18255844
D---182 SERIAL 18255845 THRU 18262465
A182 SERIAL A182-0001 & ON
E---182 SERIAL 18253599 THRU 18259620
A182 SERIAL A182-0001 THRU A182-0116
F---182 SERIAL 18259621 THRU 18262465
A182 SERIAL A182-0117 & ON
G---182 SERIAL 18253599 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
H---182 SERIAL 18260056 THRU 18262465
A182 SERIAL A182-0117 & ON
J---182 SERIAL 18253599 THRU 18260445
A182 SERIAL A182-0001 & ON
K---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 & ON
L---182 SERIAL 18260446 THRU 18262465
M---182 SERIAL 18260056 THRU 18261425
A182 SERIAL A182-0117 THRU A182-0136
N---182 SERIAL 18260840 THRU 18262465
A182 SERIAL A182-0137 & ON
P---182 SERIAL 18260446 THRU 18261425
A182 SERIAL A182-0117 THRU A182-0136
Q---182 SERIAL 18260840 THRU 18261425
A182 SERIAL A182-0117 THRU A182-0136
R---182 SERIAL 18261426 THRU 18262465
A182 SERIAL A182-0137 & ON
S---182 SERIAL 18253599 THRU 18260445
A182 SERIAL A182-0001 & ON

Cowl Flaps Control System


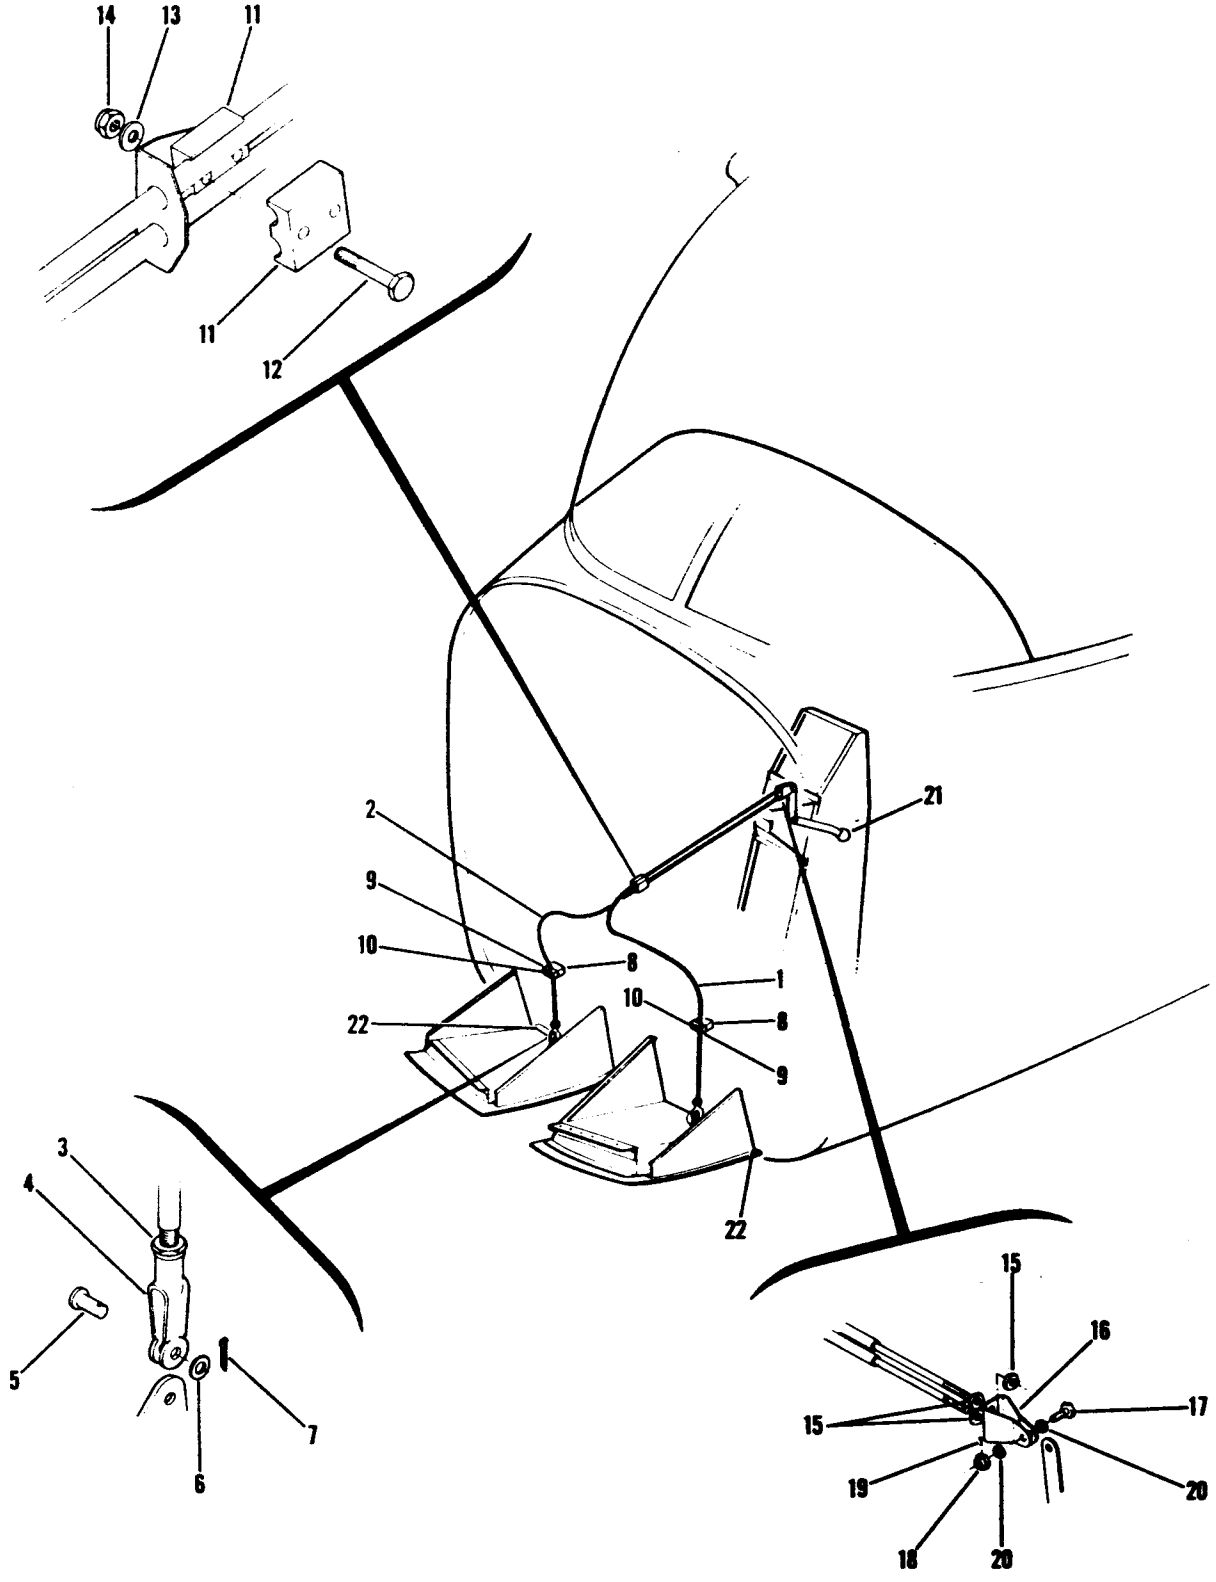


Figure 67. Cowl Flaps Control System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
67 -		COWL FLAPS CONTROL SYSTEM INSTALLATION	NP	
- 1	S1244-3	CONTROL-COWL FLAP LH	1	
- 2	S1244-4	CONTROL-COWL FLAP RH	1	
- 3	AN316-4	NUT	2	
- 4	AN486-4	CLEVIS	2	A
	1213079-1	CLEVIS	2	B
		ATTACHING PARTS		
- 5	MS20392-2C13	PIN	1	A
	AN3-10A	BOLT	1	B
- 6	AN960D10	WASHER	1	A
	AN960-10L	WASHER	2	B
- 7	CM2791	SNAP RING	10	
	MS21044N3	NUT	1	B
		---*---		
- 8	0713307-1	MOUNT	2	
- 9	0713307-2	CLAMP	2	
		ATTACHING PARTS		
-10	AN520-10R26	SCREW	2	
	AN960-10L	WASHER	2	
	MS21044N3	NUT	2	
		---*---		
-11	1213037-1	CLAMP	2	
		ATTACHING PARTS		
-12	AN3-11A	BOLT	1	
-13	AN960-10L	WASHER	1	
-14	MS21044N3	NUT	1	
		---*---		
-15	AN316-4R	NUT	4	
-16	0713701-2	CLEVIS	1	
		ATTACHING PARTS		
-17	AN4-5	BOLT	1	
-18	AN310-4	NUT	1	
-19	MS24665-134	PIN-COTTER	1	
-20	AN960-416L	WASHER	2	
		---*---		
-21	SEE FIG 75	CONSOLE INSTALLATION	1	
-22	S1929-1	BUMPER AUV	2	

A---182 SERIAL 18253599 THRU 18254386
B---182 SERIAL 18254387 THRU 18262465
A182 SERIAL A182-0001 & ON

Winterization

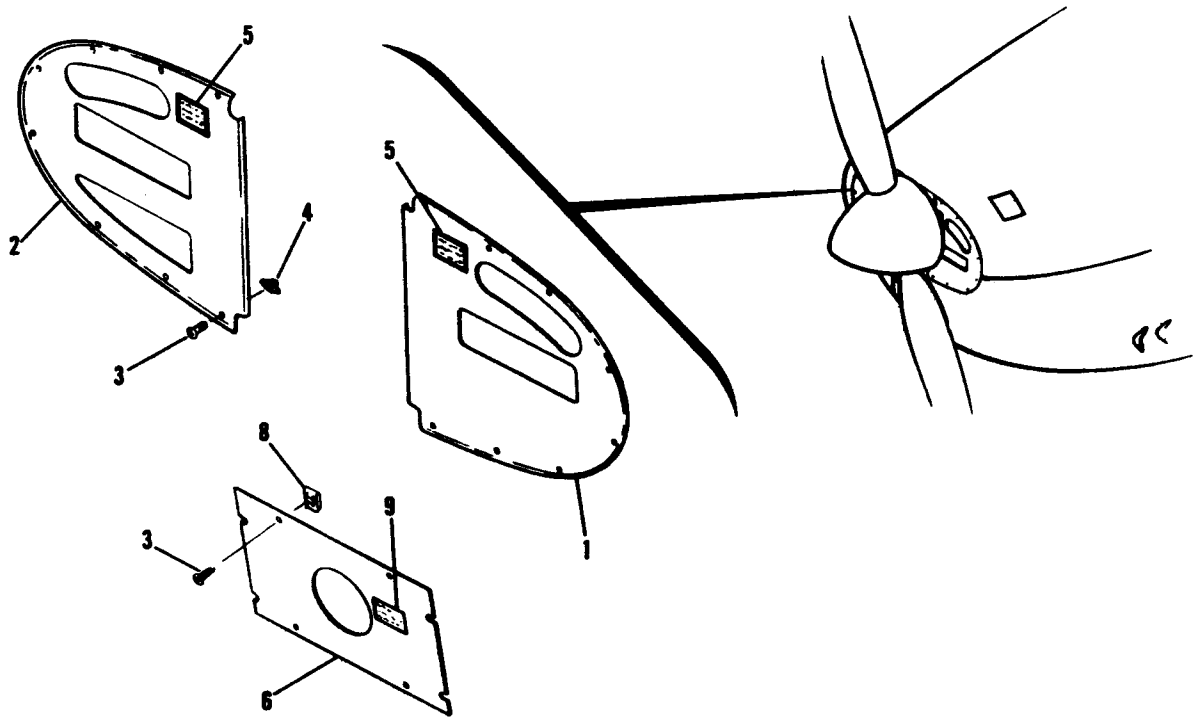


182 SERIAL 18253599 THRU 18255844

Figure 68. Winterization Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
68 -		WINTERIZATION EQUIPMENT INSTALLATION	NP	A
- 1	0700319-10	COVER ASSEMBLY-COWL LH	1	
- 2	0700319-11	COVER ASSEMBLY-COWL RH	1	
		ATTACHING PARTS		
- 3	AN515-8R8	SCREW	8	
- 4	A08K75	RIVNUT GD	8	
		---*---		
- 5	0700319-12	PLACARD-WINTERIZATION	1	
- 6	0700313-64	COVER ASSEMBLY	1	
		ATTACHING PARTS		
- 7	S1021Z8-6	SCREW	4	
- 8	NAS395-12-3	NUT	4	
		---*---		
- 9	0700319-13	PLACARD-WINTERIZATION	1	
	0700313-25	COVER ASSEMBLY-MANIFOLD TUBE	1	
		A---182 SERIAL 18253599 THRU 18255844		

Winterization (Cont)

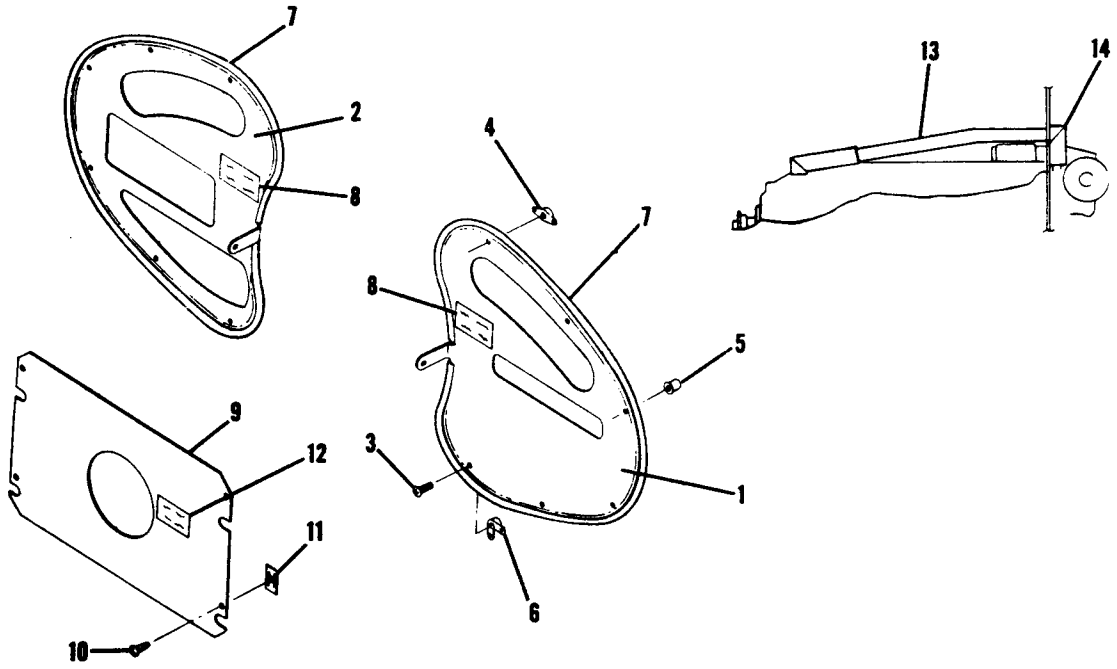


182 SERIAL 18255845 THRU 18260055

Figure 68A. Winterization Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
68A-		WINTERIZATION EQUIPMENT INSTALLATION	NP	A
- 1	0700734-3	COVER ASSEMBLY-COWL LH	1	
- 2	0700734-4	COVER ASSEMBLY-COWL RH	1	
		ATTACHING PARTS		
- 3	AN515-8R8	SCREW	6	
- 4	NAS680A08	NUT	1	
- 5	A08K75	RIVNUT GD	2	
	A08K120	RIVNUT GD	2	
- 6	NAS698A08	NUT GD	1	
		---*---		
- 7	S202VW	SEAL 33 IN LG BULK ITEM REF S202V3300W	1	
- 8	0700319-12	PLACARD	1	B
	1205043-1	PLACARD	1	C
- 9	0700313-64	COVER	1	
		ATTACHING PARTS		
-10	S1021Z8-6	SCREW	4	
-11	A1049-8Z-3	NUT TIN	4	
		---*---		
-12	0700319-13	PLACARD	1	B
	0505009-2	PLACARD	1	C
-13	1200191-200	TUBE-WINTERIZATION	1	
-14	1200191-201	TUBE-WINTERIZATION	1	
		A---182 SERIAL 18255845 THRU 18260055 A182 SERIAL A182-0001 THRU A182-0116 B---182 SERIAL 18255845 THRU 18259305 A182 SERIAL A182-0001 THRU A182-0116 C---182 SERIAL 18259306 THRU 18260055		

Winterization (Cont)

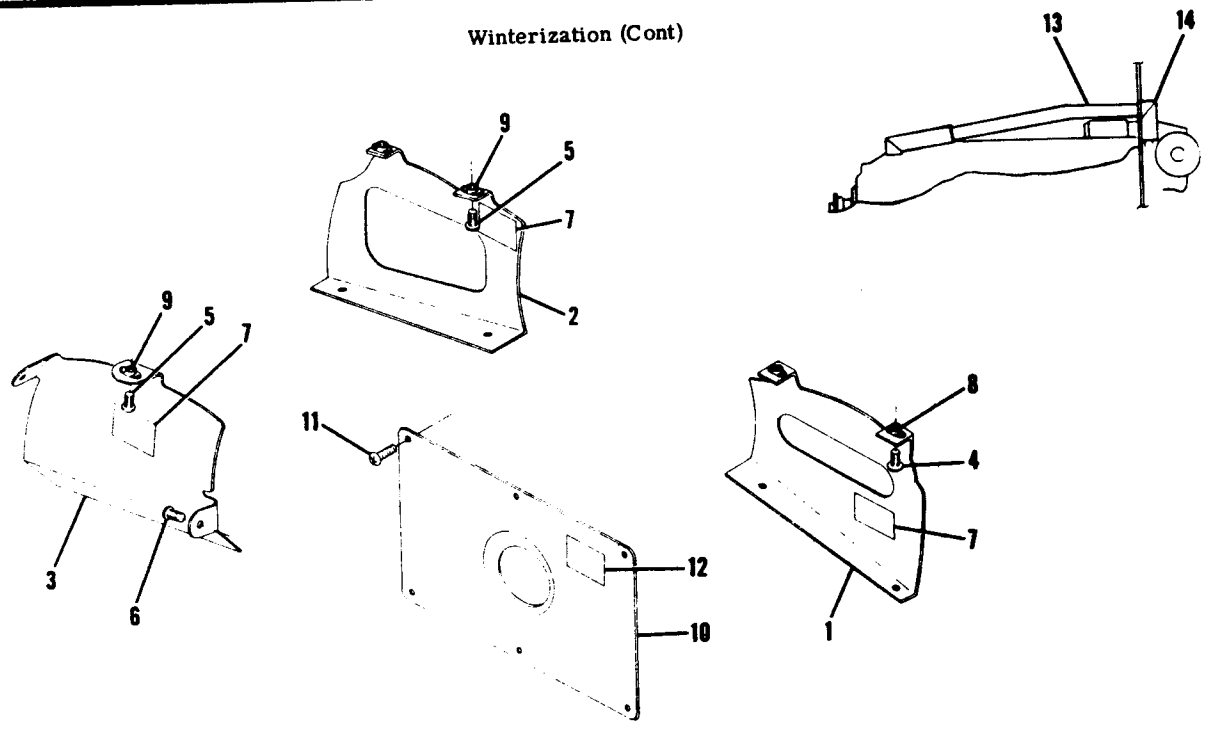


182 SERIAL 18260056 THRU 18262465

Figure 68B. Winterization Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
68B-		WINTERIZATION EQUIPMENT INSTALLATION	NP	A
- 1	0752641-1	COVER ASSEMBLY-WINTERIZATION KIT LH	1	B
- 2	0752641-2	COVER ASSEMBLY-WINTERIZATION KIT RH	1	C
- 3	0752643-1	COVER ASSEMBLY-WINTERIZATION KIT RH	1	
		ATTACHING PARTS		
- 4	AN520-10R6	SCREW LH	4	
	AN960D10L	WASHER LH	4	
- 5	AN520-10R6	SCREW RH	4	B
	AN960D10L	WASHER RH	4	B
	AN520-10R6	SCREW RH	2	C
	AN960D10L	WASHER RH	2	C
- 6	AN520-10R8	SCREW RH	1	C
		---*---	1	
- 7	1205043-1	PLACARD-WINTERIZATION	4	
- 8	NAS680A3	NUTPLATE LH	4	B
- 9	NAS680A3	NUTPLATE RH	2	C
	NAS680A3	NUTPLATE	1	
-10	0752641-7	COVER ASSEMBLY-FILTER	1	
		ATTACHING PARTS	6	
-11	AN509-10R8	SCREW	6	
		---*---	1	
-12	1205043-1	PLACARD-WINTERIZATION	1	
-13	1200191-200	TUBE-WINTERIZATION	1	
-14	1200191-201	TUBE-WINTERIZATION	1	

A---182 SERIAL 18260056 THRU 18262465
A182 SERIAL A182-0117 & ON
B---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 & ON
C---182 SERIAL 18260446 THRU 18262465

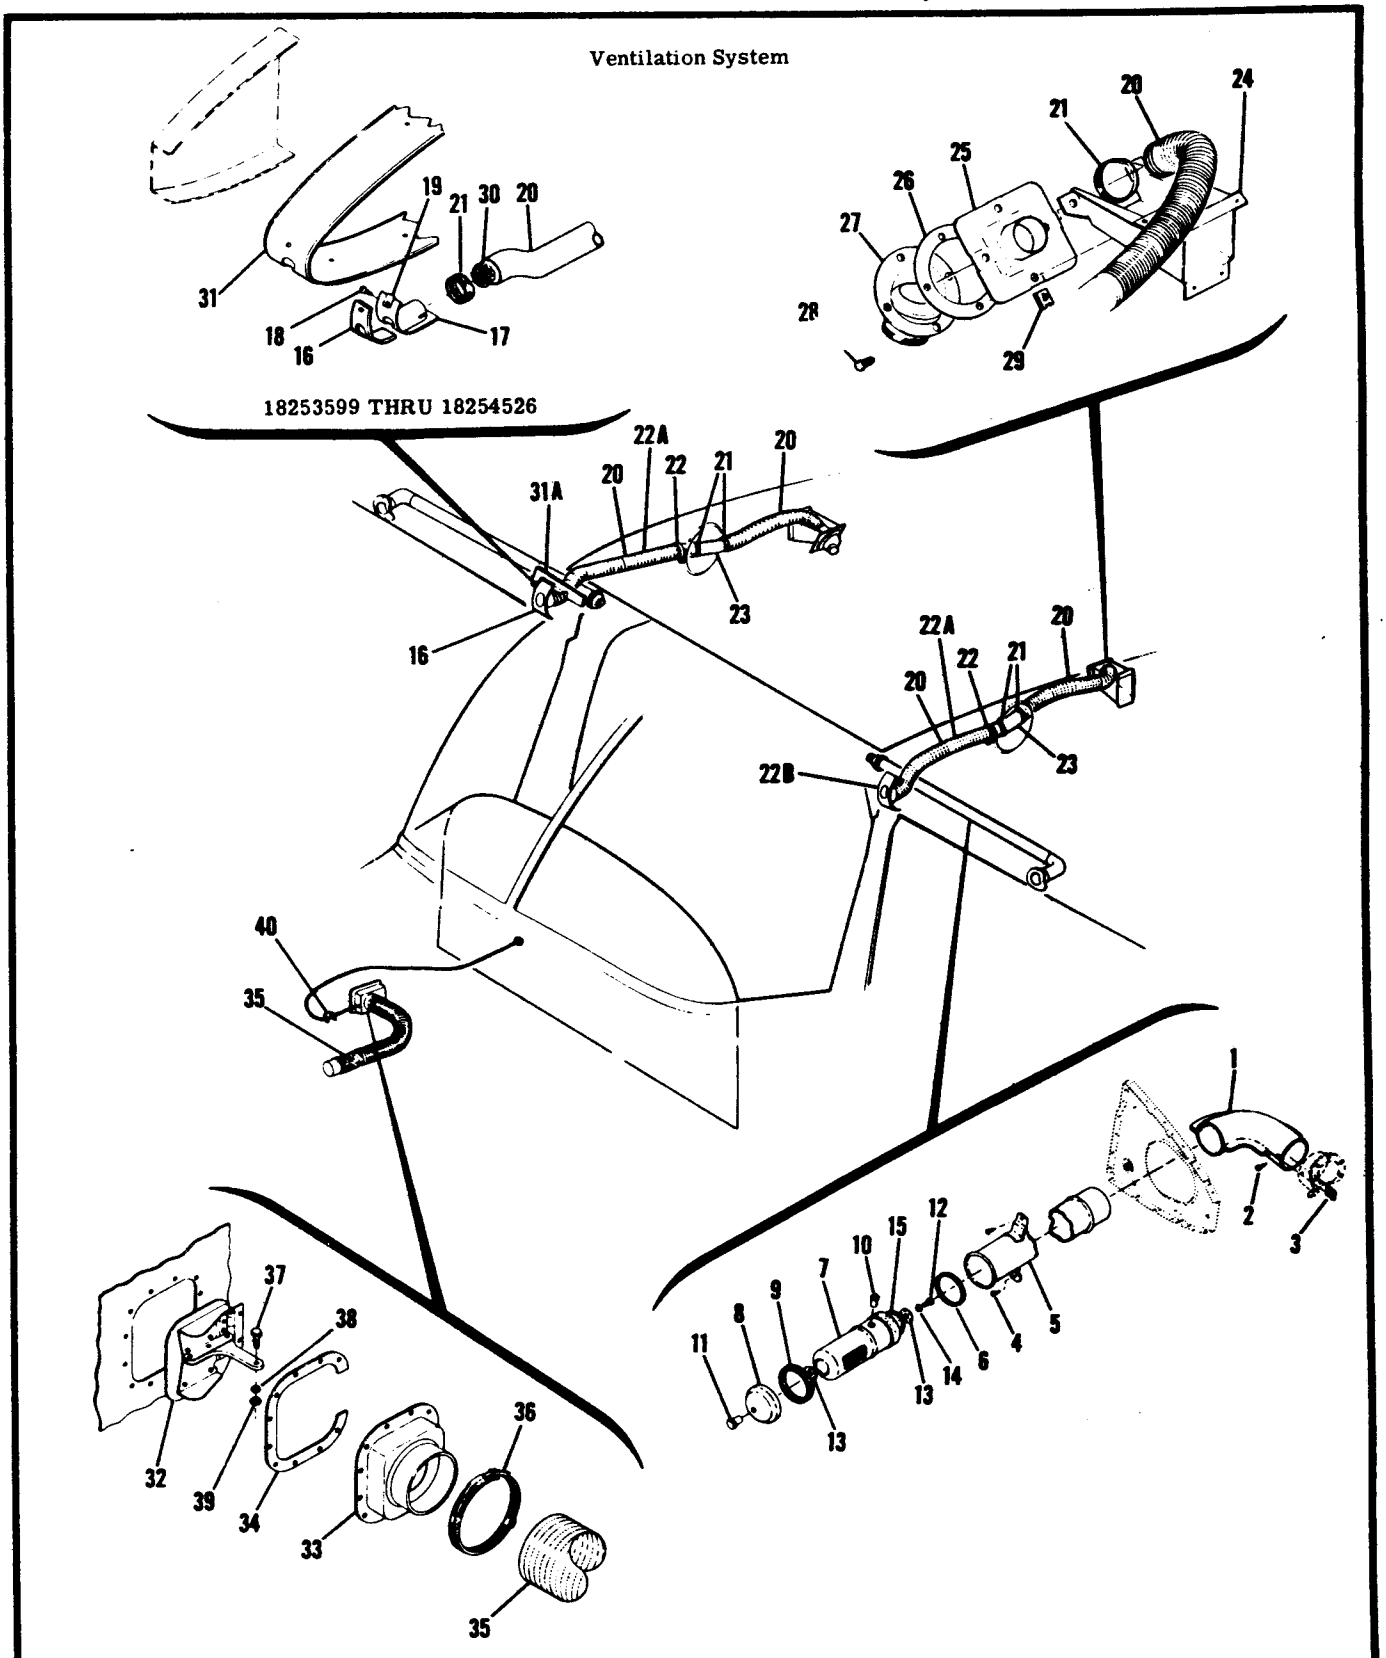

182 SERIAL 18253599 THRU 18257625

Figure 69. Cabin Ventilation System


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
.69 -		CABIN VENTILATION SYSTEM	NP	
- 1	0450314	FITTING-CABIN VENTILATION	2	
		ATTACHING PARTS		
- 2	S1021Z8-8	SCREW	1	
- 3	NAS446-4-3	NUT	1	
		---*---		
	0413163-31	OUTLET ASSEMBLY-RH	1	
	0413163-200	OUTLET ASSEMBLY-LH	1	
		ATTACHING PARTS		
- 4	S1021Z8-6	SCREW	2	
		---*---		
- 5	0413163-28	TUBE ASSEMBLY-RH	1	
	0413163-27	TUBE ASSEMBLY-LH	1	
- 6	0413163-7	SEAL-FELT	1	
- 7	0413163-18	OUTLET-CABIN VENTILATION	1	
- 8	0413163-11	CAP ASSEMBLY-OUTLET	1	
- 9	S1441-2-6.56	SEAL-CAP	1	
-10	S2024-1	CATCH-BULLET	2	
-11	0713303-2	KNOB-CAP	1	
		ATTACHING PARTS		
-12	AN515-8R8	SCREW	1	
-13	0413228	WASHER	2	
-14	AN936A8	WASHER	1	
-15	0413347-1	WASHER	1	
		---*---		
		REAR SEAT VENTS INSTALLATION	NP	
-16	0700322-4	SEAL-ADAPTER	2	D
-17	0700325-2	ADAPTER	2	D
		ATTACHING PARTS		
-18	S1022Z8-8	SCREW	2	D
-19	NAS396-6-3	NUT	2	D
		---*---		
-20	S1053E8T	HOSE 18.5 IN LG BULK ITEM REF S-1053E8T18.50	4	D
	S1053E8T	HOSE 22.0 IN LG BULK ITEM REF S1053E8T22.0	2	E
		ATTACHING PARTS		
-21	NAS397-18	CLAMP	2	
-22	S1485D17U	CLAMP	1	
	S1021Z8-10	SCREW		
		---*---		
-22A	S1053E10T	HOSE 32.0 IN LG BULK ITEM REF S1053E10T32.0	2	E
		ATTACHING PARTS		
-22B	AN737TW46	CLAMP	1	E
	NAS397-22	CLAMP	1	E
		---*---		
-23	0700626-1	TUBE-AIR DUCT DRAIN	1	D
	1200691-1	TUBE-AIR DUCT DRAIN	1	F
-24	0710604-1	SUPPORT ASSEMBLY	2	
-25	0700327-1	ADAPTOR	2	
-26	1213043-1	GASKET	2	
-27	0813610-3	VALVE	1	B
	S1646-1	VALVE	1	C
		ATTACHING PARTS		
-28	S1021Z6-10C	SCREW	4	
-29	A1793-6Z3	NUT	4	
		---*---		
-30	1200018-1	ELEMENT	1	A
	1200018-2	ELEMENT-FILTER ALT	2	A
-31	0720615-7	FILLET ASSEMBLY-LH	1	D
	0720615-8	FILLET ASSEMBLY-RH	1	D
-31A	1213618-1	RETAINER-HOSE LH	1	
	1213618-2	RETAINER-HOSE RH	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
69 -		OUTSIDE AIR VENT INSTALLATION-FORWARD	NP	
-32	0713135-1	DOOR ASSEMBLY-AIR VENT	1	
-33	0713139-1	INLET ASSEMBLY-AIR VENT	1	
-34	0713140-1	SEAL	1	
-35	S1053E24T	HOSE 14.00 IN LG BULK ITEM REF S-1053E24T14.00-	1	
		ATTACHING PARTS		
-36	NAS398-50	CLAMP	2	
		---*---		
	S1241-4	CONTROL ASSEMBLY-FORWARD AIR VENT	1	
		ATTACHING PARTS		
-37	0450311-5	CLAMP	1	
-38	AN960-10L	WASHER	1	
-39	MS21044N3	NUT	1	
		---*---		
-40	0450286	CLIP	1	
		A---182 SERIAL 18253599 THRU 18253961		
		B---182 SERIAL 18253599 THRU 18254404		
		C---182 SERIAL 18254405 THRU 18257625 A182 SERIAL A182-0001 THRU A182-0056		
		D---182 SERIAL 18253599 THRU 18254526		
		E---182 SERIAL 18254527 THRU 18257625 A182 SERIAL A182-0001 THRU A182-0056		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
69A-		CABIN VENTILATION SYSTEM	NP	A
- 1	0450314	FITTING-CABIN VENTILATION	2	
		ATTACHING PARTS		
- 2	S1021Z8-8	SCREW	1	
- 3	NAS446-4-3	NUT	1	
		---*---		
	0413163-31	OUTLET ASSEMBLY-RH	1	B
	0413163-200	OUTLET ASSEMBLY-LH	1	B
	0413163-204	OUTLET ASSEMBLY-RH	1	C
	0413163-203	OUTLET ASSEMBLY-LH	1	C
		ATTACHING PARTS		
- 4	S1021Z8-6	SCREW	2	
		---*---		
- 5	0413163-28	TUBE ASSEMBLY-RH	1	
	0413163-27	TUBE ASSEMBLY-LH	1	
- 6	0413163-7	SEAL-FELT	1	
- 7	0413163-18	OUTLET-CABIN VENTILATION	1	
- 8	0413163-11	CAP ASSEMBLY-OUTLET	1	B
- 9	S1441-2-6.56	SEAL-CAP	1	B
-10	S2024-1	CATCH-BULLET	2	
-11	0713303-2	KNOB-CAP	1	B
		ATTACHING PARTS		
-12	AN515-8R8	SCREW	1	B
-13	0413228	WASHER	2	B
-14	AN936A8	WASHER	1	B
-15	0413347-1	WASHER	1	B
		---*---		

CONTINUED ON NEXT PAGE

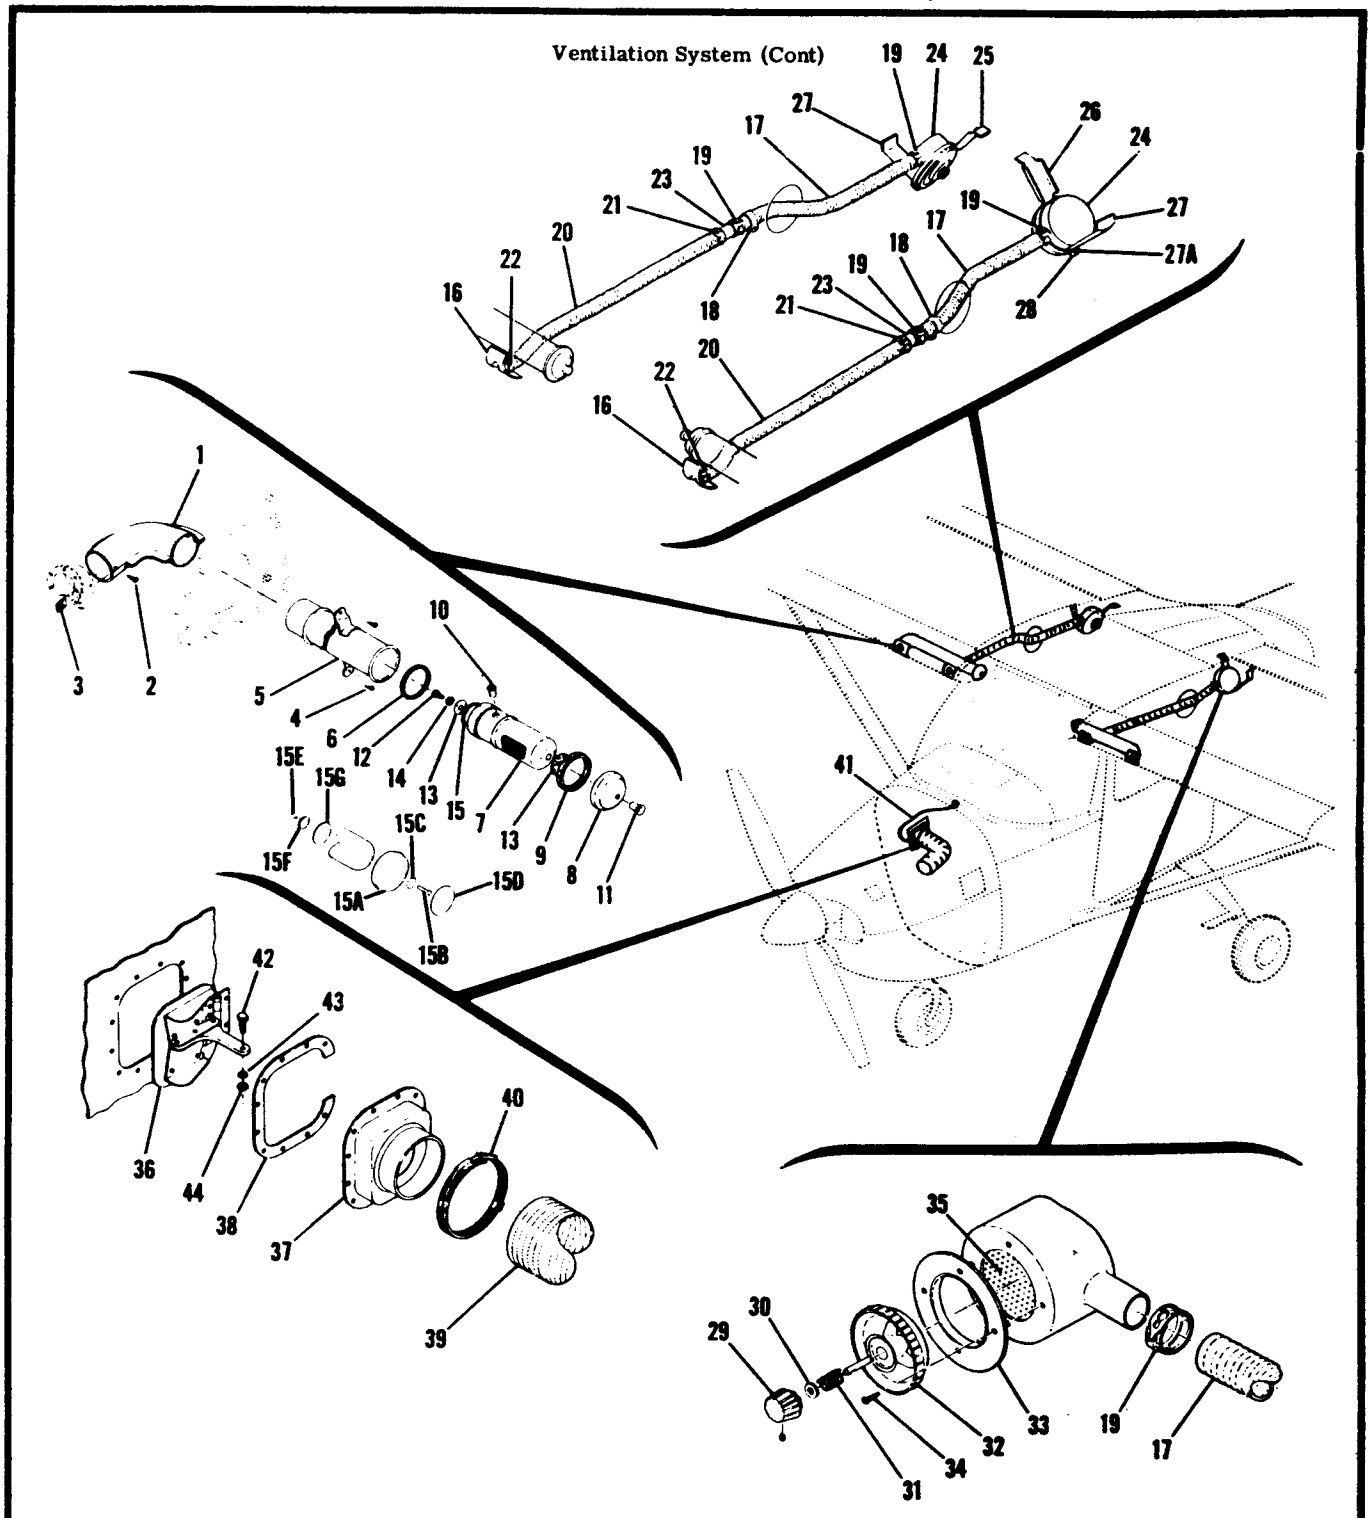

182 SERIAL 18257626 THRU 18262465

Figure 69A. Cabin Ventilation System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
69A-15A	S1834-1	KNOB	1	C
-15B	AN507-1032R12	SCREW	1	C
-15C	S290D1032	WASHER	1	C
-15D	S1780-8	INSERT	1	C
-15E	MS21044N3	NUT	1	C
-15F	0413228	WASHER	1	C
-15G	S1450-5A24-040	WASHER	NP	
		REAR SEAT VENTS INSTALLATION	2	
-16	1200637-2	SCOOP-AIR	2	
-17	S1053E8T	HOSE 12.00 IN LG BULK ITEM REF S1053E8T12.00		
		ATTACHING PARTS		
-18	S1485D17U	CLAMP	1	
	S1021Z8-10	SCREW	1	
-19	S1693-2	CLAMP	2	
		---*---		
-20	S1053E10T	HOSE 31.00 IN LG BULK ITEM REF S1053E10T31.00	2	
		ATTACHING PARTS		
-21	S1693-2	CLAMP	1	
-22	S1693-2	CLAMP	1	
		---*---		
-23	1200691-1	TUBE-AIR DUCT DRAIN	2	
-24	0710013-4	SILENCER ASSEMBLY-AIR VENT	2	
		ATTACHING PARTS		
-25	0710014-4	BRACKET ASSEMBLY-RH	1	F
-26	0710014-3	BRACKET ASSEMBLY-LH	1	F
	0513420-3	BRACKET	2	G
-27	0710014-1	BRACKET	2	F
	0710014-15	BRACKET	2	G
-27A	0710014-12	CLAMP	2	G
-28	AN515-8-10	SCREW	1	
	AN960-8	WASHER	1	
	NAS679A08	NUT	1	
		---*---		
-29	S1728-1	KNOB-SILENCER	1	
-30	AN960-10L	WASHER	1	
-31	0710015-13	SPRING-SILENCER	1	
-32	0713250-1	KNOB-SILENCER	1	
-33	0710014-8	ESCUTCHEON-SILENCER	1	
		ATTACHING PARTS		
-34	S1023A6-6C	SCREW	4	
		---*---		
-35	0710015-6	INSULATOR	1	
		OUTSIDE AIR VENT INSTALLATION	NP	
-36	0713135	DOOR ASSEMBLY-AIR VENT	1	
-37	0713139	INLET ASSEMBLY-AIR VENT	1	
-38	0713140-1	SEAL-AIR VENT	1	
-39	S1053E24T	HOSE-14.00 IN LG BKI REF S1053E24T14.00	1	
		ATTACHING PARTS		
-40	NAS398-50	CLAMP	2	
		---*---		
-41	SEE NOTE *	CONTROL ASSEMBLY-FORWARD AIR VENT	1	
		ATTACHING PARTS		
-42	0450311-5	CLAMP	1	
-43	AN960-10L	WASHER	1	
-44	MS21044N3	NUT	1	
		---*---		

NOTE. *REFER TO APPLICABLE INSTRUMENT PANEL FIGURE.

A---182 SERIAL 18257626 THRJ 18262465
A182 SERIAL A182-0057 & ON
B---182 SERIAL 18257626 THRU 18259305
A182 SERIAL A182-0057 THRU A182-0116
C---182 SERIAL 18259306 THRU 18262465
A182 SERIAL A182-0117 & ON
D---DELETED NEVER USED
DELETED NEVER USED
E---DELETED NEVER USED
DELETED NEVER USED
F---182 SERIAL 18257626 THRU 18260445
A182 SERIAL A182-0057 & ON
G---182 SERIAL 18260446 THRU 18262465

Heating System

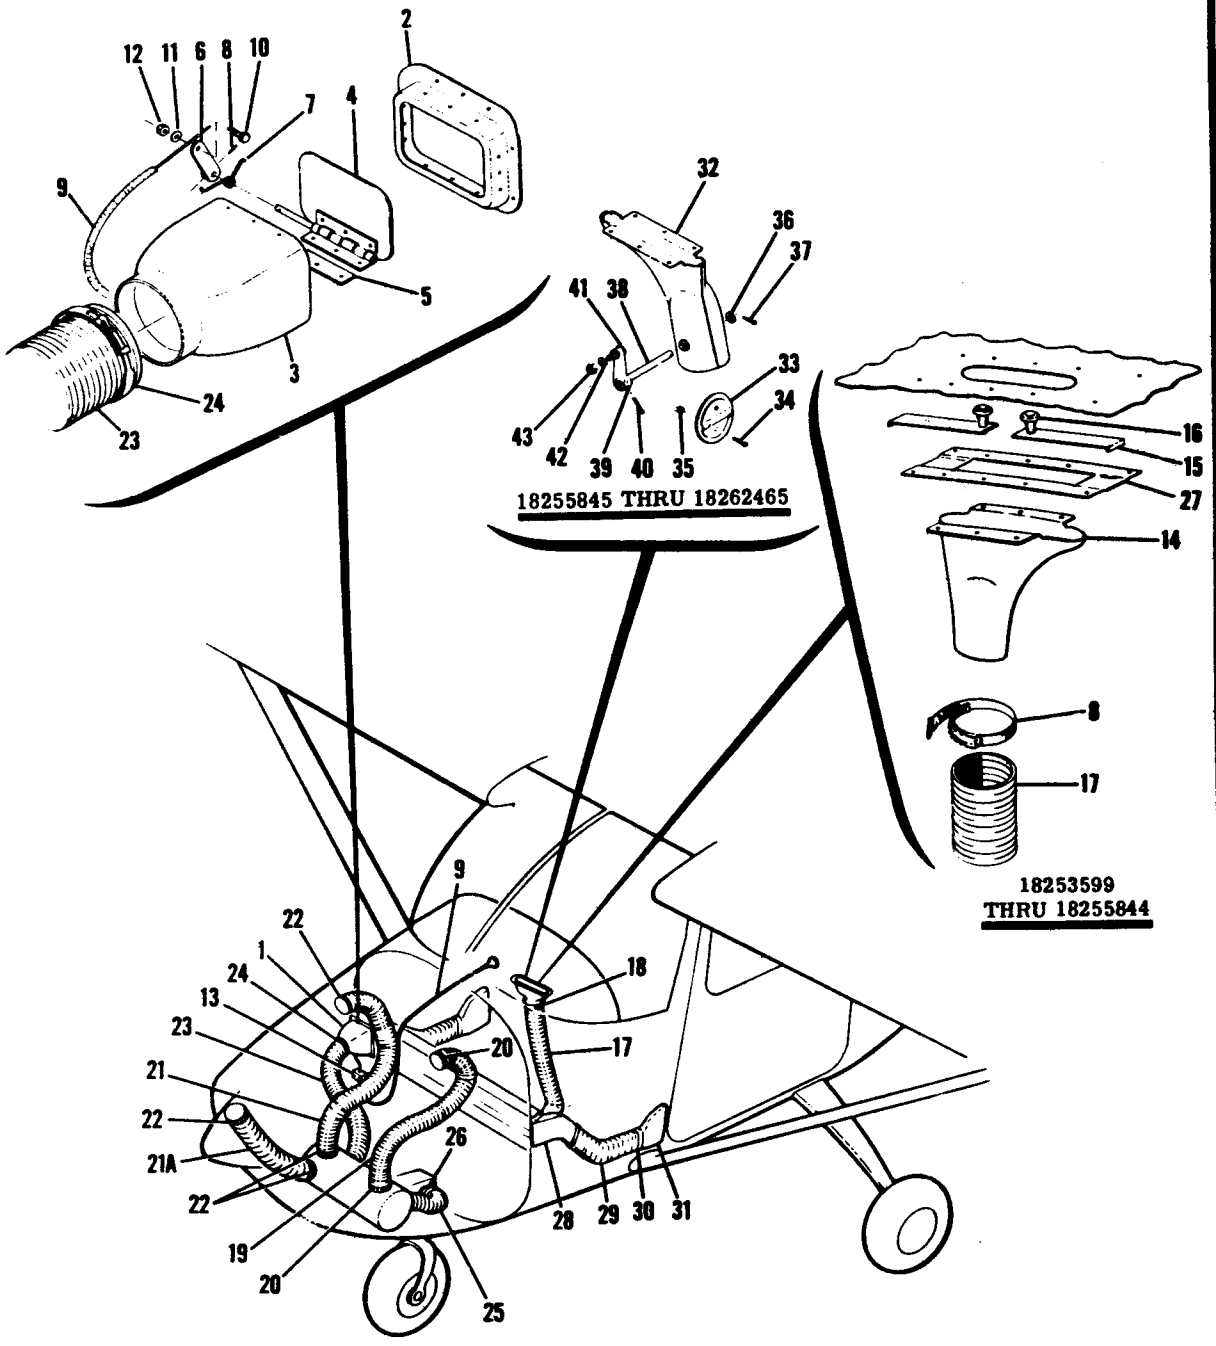



Figure 70. Cabin Heating & Defrosting System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
70 -		CABIN HEATING & DEFROSTING SYSTEM	NP	
- 1	0753011-1	VALVE ASSEMBLY-WARM AIR	1	
- 2	0753010-1	SEAT-WARM AIR VALVE	1	
- 3	1253032-1	BODY ASSEMBLY-VALVE	1	
- 4	1253034-1	VALVE PLATE ASSEMBLY	1	
- 5	1253040-1	SHIM	1	
	1253033-2	REINFORCEMENT	1	
- 6	1253037-1	ARM-CONTROL		
		ATTACHING PARTS		
- 7	1253041-1	SPRING	1	
- 8	NAS561C2-8	ROLL PIN	1	
		---*---		
- 9	S1241-3	CONTROL-CABIN HEAT	1	
		ATTACHING PARTS		
-10	0450311-5	CLAMP	1	
-11	AN960-10L	WASHER	1	
-12	MS21044N3	NUT	1	
		---*---		
-13	0713307-2	CLAMP	1	
	0713307-1	MOUNT	1	
		ATTACHING PARTS		
	AN520-10R28	SCREW	2	
	AN960-10L	WASHER	2	
	MS21044N3	NUT	2	
		---*---		
-14	0713003-45	NOZZLE ASSEMBLY-DEFROSTER	1	C
-15	0713019-94	VALVE ASSEMBLY-DEFROSTER	1	C
-16	0713303-2	KNOB-DEFROSTER VALVE ASSEMBLY	1	
		ATTACHING PARTS		
	AN515-8R4	SCREW	1	
	AN936A8	WASHER	1	
		---*---		
-17	S1053E16T	HOSE 24.00 IN LG BKI REF S1053E16T24.00	1	
		ATTACHING PARTS		
-18	NAS397-32-1	CLAMP TIN	2	
		---*---		
-19	S1053K20T	HOSE 50.0 IN LG BKI REF S1053K20T50.0	1	A
		ATTACHING PARTS		
-20	NAS398-42	CLAMP	2	
		---*---		
-21	S1053K24T	HOSE 38.0 IN LG BKI REF S1053K24T38.0	1	E
	S1053K24T *	HOSE 50.0 IN LG BKI REF S1053K24T50.0	1	E
-21A	S1053K24T	HOSE 16.0 IN LG BKI REF S1053K24T16.0	1	F
		ATTACHING PARTS		
-22	NAS398-50	CLAMP	2	
	AN742D36	CLAMP	1	G
	AN742D50	CLAMP	1	G
	S1021Z10-8	SCREW	1	G
	NAS488-10	NUT	1	G
		---*---		
-23	S1053E24T	HOSE 25.50 IN LG BKI REF S1053E24T25.50	1	
		ATTACHING PARTS		
-24	NAS398-50	CLAMP	2	
		---*---		
-25	S1053K20T	HOSE 17.50 IN LG BKI REF S1053K20T17.50	1	A
	S1053K20T	HOSE 26.0 IN LG BKI REF S1053K20T26.0	1	B
		ATTACHING PARTS		
-26	NAS398-42	CLAMP	2	
		---*---		
-27	0713019-7	VALVE GUIDE-DEFROST	1	C
-28	0713719-1	ADAPTER-HEATER DUCT LH	1	
	0713719-2	ADAPTER-HEATER DUCT RH	1	
-29	S1110ET	DUCT 19.5 IN LG BKI REF S1110ET19.50	2	
		ATTACHING PARTS		
-30	S1026BG10.90X	CLAMP	2	
		---*---		
-31	1250503-1	DUCT-HOT AIR OUTLET LH	1	
	1250503-2	DUCT-HOT AIR OUTLET RH	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
70 -32	0713952-1	NOZZLE ASSEMBLY-DEFROST	1	D
-33	1250116-1	VALVE ASSEMBLY-DEFROST	1	D
		ATTACHING PARTS		
-34	AN515-6R10	SCREW	2	D
-35	NAS696A06LK	NUT	2	D
		---*---		
	1250115-3	LEVER ASSEMBLY-VALVE	1	D
		ATTACHING PARTS		
-36	AN960-416L	WASHER	1	
-37	MS24665-132	COTTER PIN	1	
		---*---		
-38	1250115-2	SHAFT	1	
-39	0713019-24	ARM ASSEMBLY	1	
-40	MS16562-16	ROLL PIN	1	
-41	0450311	CLAMP	1	
-42	AN960-10L	WASHER	1	
-43	MS21044N3	NUT	1	
		NOTE. *THIS HOSE REPLACES S1053K24T38.0 WHEN OIL FILTER IS INSTALLED		
		A---182 SERIAL 18253599 THRU 18254423		
		B---182 SERIAL 18254424 THRU 18262465 A182 SERIAL A182-0001 & ON		
		C---182 SERIAL 18253599 THRU 18255844		
		D---182 SERIAL 18255845 THRU 18262465 A182 SERIAL A182-0001 & ON		
		E---182 SERIAL 18253599 THRU 18260445 A182 SERIAL A182-0001 & ON		
		F---182 SERIAL 18260446 THRU 18262465		
		G---182 SERIAL 18260826 THRU 18262465 A182 SERIAL A182-0137 & ON		

Brake System

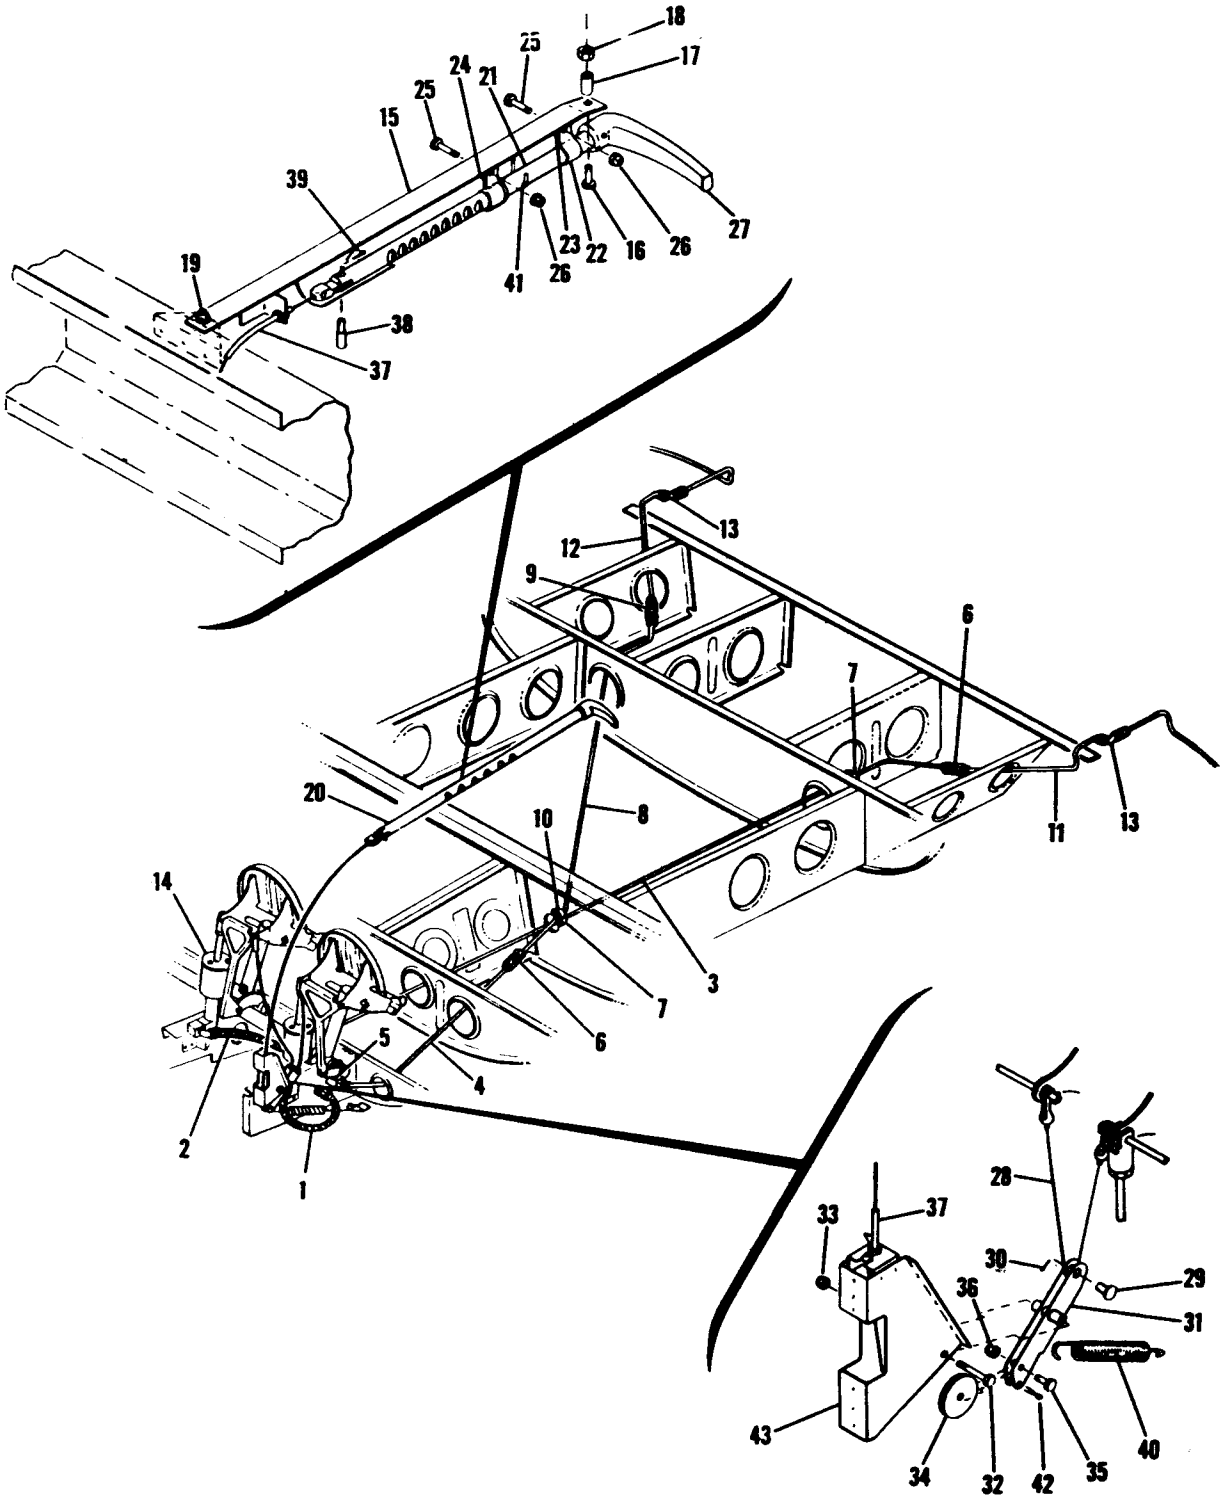

182 SERIAL 18253599 THRU 18258399

Figure 71. Brake System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
71 -		BRAKE SYSTEM INSTALLATION	NP	
- 1	S1167-4-0100	HOSE ASSEMBLY-MASTER CYLINDER TO ELBOW LH	1	
		ATTACHING PARTS		
	AN921-4D	ELBOW	1	
	MS28778-4	GASKET	1	
	AN924-4D	NUT	1	
		---*---		
- 2	S1167-4-0090	HOSE ASSEMBLY-MASTER CYLINDER TO ELBOW RH	1	
		ATTACHING PARTS		
	1400104-1	FITTING	1	
	AN921-4D	ELBOW	1	
	MS28778-4	GASKET	2	
	AN924-4D	NUT	2	
		---*---		
- 3	0700099-8	LINE ASSEMBLY-BRAKE LH	1	
- 4	0700099-9	LINE ASSEMBLY-BRAKE RH	1	
		ATTACHING PARTS		
- 5	AN837-4D	ELBOW	1	
	AN960-716	WASHER	1	
	AN924-4D	NUT	1	
- 6	AN815-4D	UNION	2	
- 7	S1486DG3U	CLAMP LH ONLY	2	
	S1021Z8-10	SCREW LH ONLY		
		---*---		
- 8	0700099-10	LINE ASSEMBLY-BRAKE RH	1	
		ATTACHING PARTS		
- 9	AN815-4D	UNION	1	
-10	MS21919DG4	CLAMP	1	
		---*---		
-11	0700099-11	LINE ASSEMBLY-BRAKE LH	1	A
	0700099-57	LINE ASSEMBLY-BRAKE LH	1	B
-12	0700099-12	LINE ASSEMBLY-BRAKE RH	1	A
	0700099-56	LINE ASSEMBLY-BRAKE RH	1	B
		ATTACHING PARTS		
-13	AN837-4D	ELBOW	1	A
	AN924-4D	NUT	1	A
	AN960-716	WASHER	1	A
	AN815-4D	UNION	1	B
		---*---		
-14	SEE FIG 73	MASTER CYLINDER INSTALLATION	1	
		PARKING BRAKE INSTALLATION	NP	
-15	0713693-2	SUPPORT ASSEMBLY-PARK BRAKE	1	
		ATTACHING PARTS		
-16	AN3-10A	BOLT	1	
-17	NAS43DD3-32	SPACER	1	
-18	MS21044N3	NUT	2	
-19	AN3-3A	BOLT	1	
		---*---		
-20	0813150-55	HANDLE ASSEMBLY-PARKING BRAKE	1	
		ATTACHING PARTS		
-21	0813156-4	HOUSING ASSEMBLY-BRAKE	1	
-22	0713070-25	CLAMP	1	
-23	0713070-32	SPACER	1	
-24	0713070-15	SPACER	1	
-25	AN3-5A	BOLT	2	
-26	MS21044N3	NUT	2	
		---*---		
-27	0811490-6	HANDLE-PARKING BRAKE	1	
	0813150-54	TUBE-PARKING BRAKE	1	
	NAS561-5-12	ROLL PIN EN	1	
-28	0510105-65	CABLE	1	
-29	MS20392-4C13	PIN	1	
-30	MS24665-281	PIN-COTTER	1	


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
71 -31	0713070-9	BELLCRANK ASSEMBLY	1	
		ATTACHING PARTS		
-32	AN3-13A	BOLT	1	
	0713070-19	SPACER	1	
-33	MS21044N3	NUT	1	
		---•---		
-34	S378-1L	PULLEY	1	
		ATTACHING PARTS		
-35	AN3-5A	BOLT	1	
-36	MS21044N3	NUT	1	
		---•---		
-37	0713693-3	CABLE ASSEMBLY	1	
	0713693-4	CABLE ASSEMBLY STAINLESS STEEL	1	
		ATTACHING PARTS		
-38	0713070-6	POSITIONING ARM	1	
-39	MS24665-132	PIN-COTTER	1	
		---•---		
-40	0713625-1	SPRING	1	
-41	0713070-24	CATCH	1	
-42	MS24665-132	PIN-COTTER	1	
-43	0713070-20	BRACKET-PARKING BRAKE CONTROL	1	
		A---182 SERIAL 18253599 THRU 18257007 A182 SERIAL A182-0001 THRU A182-0003 B---182 SERIAL 18257008 THRU 18258399 A182 SERIAL A182-0004 THRU 182-0096		


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
71A-		BRAKE SYSTEM INSTALLATION	NP	A
- 1	S1810-1000	HOSE ASSEMBLY-BRAKE LINE	2	L
		ATTACHING PARTS		
- 2	AN914-1D	ELBOW	2	P
	AN916-1D	ELBOW	2	Q
	S1743-2	CONNECTOR-FEMALE	2	P
	1782001-1	NIPPLE	2	Q
	MS28778-4	PACKING	2	
		---•---		
- 3	0700099-64	LINE ASSEMBLY-BRAKE WHEN EXHAUSTED USE 0700099-68	1	B
	0700099-68	LINE ASSEMBLY-BRAKE WHEN EXHAUSTED USE 0700099-75	1	C
	0700099-75	LINE ASSEMBLY-BRAKE	1	D
		ATTACHING PARTS		
- 4	AN815-3D	UNION	1	
	0713272-1	BRACKET	1	
	MS21919DG3	CLAMP	1	
	S1021Z8-6	SCREW	1	
•	NAS446-4-3	NUTPLATE	1	
		---•---		
- 5	0700099-62	LINE ASSEMBLY-BRAKE WHEN EXHAUSTED USE 0700099-67	1	B
	0700099-67	LINE ASSEMBLY-BRAKE WHEN EXHAUSTED USE 0700099-74	1	C
	0700099-74	LINE ASSEMBLY-BRAKE	1	D
		ATTACHING PARTS		
- 6	AN815-3D	UNION	1	
- 7	0713272-1	BRACKET	1	
	MS21919DG3	CLAMP	1	
	S1021Z8-6	SCREW	1	
	NAS446-4-3	NUTPLATE	1	
		---•---		
- 8	0700099-63	LINE ASSEMBLY-BRAKE WHEN EXHAUSTED USE 0700099-71	1	E
	0700099-71	LINE ASSEMBLY-BRAKE	1	J
		ATTACHING PARTS		
- 9	AN815-3D	UNION	1	
		---•---		
-10	0700099-60	LINE ASSEMBLY-BRAKE WHEN EXHAUSTED USE 0700099-69	1	E
	0700099-69	LINE ASSEMBLY-BRAKE	1	J
		ATTACHING PARTS		
-11	AN815-3D	UNION	1	
		---•---		
-12	0700099-61	LINE ASSEMBLY-BRAKE WHEN EXHAUSTED USE 0700099-70	1	E
	0700099-70	LINE ASSEMBLY-BRAKE	1	J
		ATTACHING PARTS		
-13	AN815-3D	UNION	1	
		---•---		
-14	S292-5-5	SLEEVE	4	H
-15	SEE FIG 73	MASTER CYLINDER INSTALLATION	1	
		PARKING BRAKE INSTALLATION	NP	
-16	0713693-2	SUPPORT ASSEMBLY-PARK BRAKE	1	
		ATTACHING PARTS		
-17	AN3-4A	BOLT	1	
-18	NAS43DD3-32	SPACER	1	
-19	MS21044N3	NUT	2	
-20	AN3-3A	BOLT	1	
		---•---		
-21	0813150-55	HANDLE ASSEMBLY-PARKING BRAKE	1	
		ATTACHING PARTS		
-22	0813156-4	HOUSING ASSEMBLY-BRAKE	1	
-23	0713070-25	CLAMP	2	
-24	0713070-32	SPACER	1	
-25	0713070-15	SPACER	1	
-26	AN3-6A	BOLT	2	
-27	MS21044N3	NUT	2	
		---•---		
-28	0811490-6	HANDLE-PARKING BRAKE	1	
	0813150-54	TUBE-PARKING BRAKE	1	
	NAS561-5-12	ROLL PIN EN	1	

CONTINUED ON NEXT PAGE


Brake System (Cont)

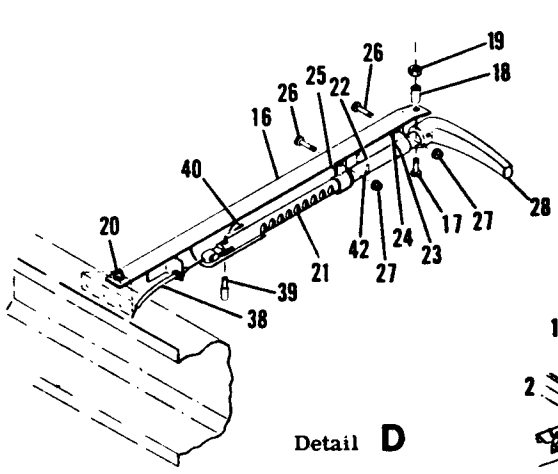


Detail D

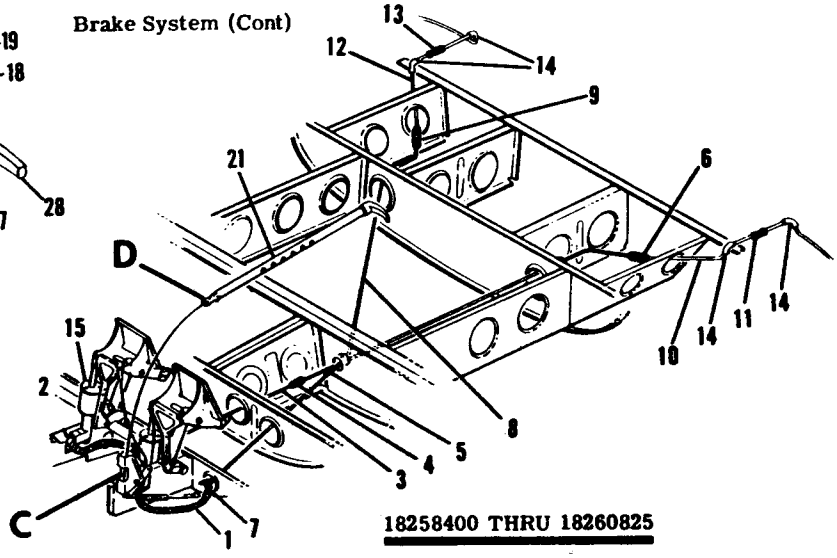


18258400 THRU 18260825

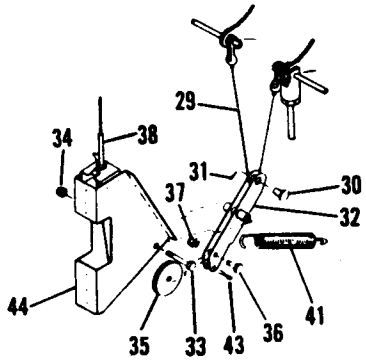


Detail C

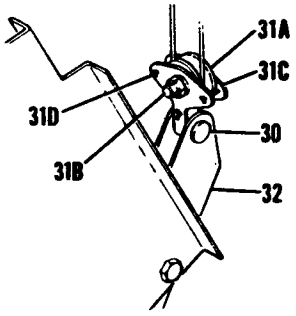


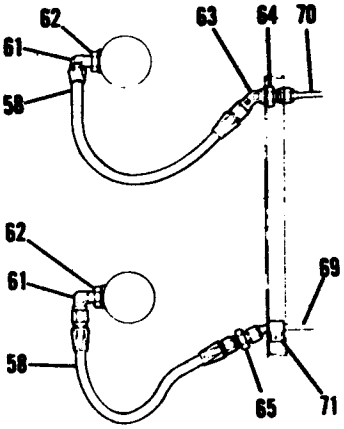

Detail A

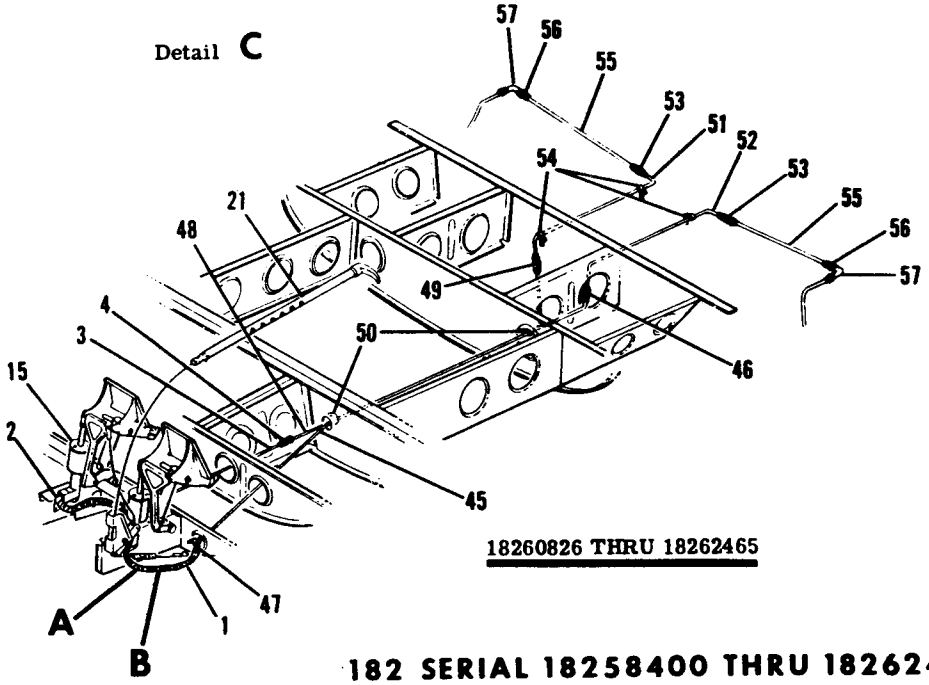

18260826 THRU 18262465

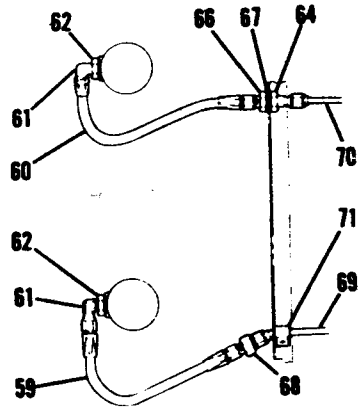

Detail B

182 SERIAL 18258400 THRU 18262465

Figure 71A. Brake System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
71A-29	0510105-85	CABLE	1	F
	0510105-233	CABLE	1	G
-30	MS20392-4C13	PIN	1	
-31	MS24665-281	PIN-COTTER	1	G
-31A	S1710-1	PULLEY	1	G
-31B	AN3-6A	BOLT	1	G
	MS21044N3	NUT	1	G
	AN960-10L	WASHER	1	G
	0411783	BUSHING	1	G
-31C	0713959-1	BRACKET ASSY	1	G
-31D	MS24665-134	COTTER PIN	1	
-32	0713070-9	BELLCRANK ASSEMBLY	1	
-33	AN3-13A	BOLT	1	
	0713070-19	SPACER	1	
-34	MS21044N3	NUT	1	
-35	S378-1L	PULLEY	1	
		ATTACHING PARTS		
-36	AN3-5A	BOLT	1	
-37	MS21044N3	NUT	1	
-38	0713693-3	CABLE ASSEMBLY	1	
	0713693-4	CABLE ASSEMBLY STAINLESS STEEL		
		ATTACHING PARTS	1	
-39	0713070-6	POSITIONING ARM	1	
-40	MS24665-132	PIN COTTER	1	
-41	0713625-1	SPRING	1	
-42	0713070-24	CATCH	1	
-43	MS24665-132	PIN-COTTER	1	
-44	0713070-20	BRACKET-PARKING BRAKE CONTROL	1	S
-45	0700099-87	LINE ASSEMBLY-BRAKE		
		ATTACHING PARTS	1	
-46	AN815-3D	UNION	1	
-47	0713272-1	BRACKET	1	
	MS21919DG3	CLAMP	1	
	S1021Z8-6	SCREW	1	
	NAS446-4-3	NUTPLATE		
-48	0700099-86	LINE ASSEMBLY-BRAKE	1	K
		ATTACHING PARTS		
-49	AN815-3D	UNION	1	
-50	S1486DG4U	CLAMP	2	K
	MS21919DG4	CLAMP	2	K
	S1021Z8-10	SCREW	2	K
-51	0700099-88	LINE ASSY-BRAKE	1	K
-52	0700099-89	LINE ASSY-BRAKE	1	K
		ATTACHING PARTS		
-53	AN815-3D	UNION	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
71A-54	S1486DG4L	CLAMP	3	K
	S1021ZB-10	SCREW	3	K
	AN743-12	BRACKET-SUPPORT CLAMP	3	K
		ATTACHING PARTS		
	AN515-6R8	SCREW	1	
	AN960-6L	WASHER	1	
	NAS679A06	NUT	1	
		---•---		
-55	0700099-90	LINE ASSEMBLY-BRAKE	2	K
		ATTACHING PARTS		
-56	AN924-3D	NUT	1	
	AN960PP616	WASHER	2	
-57	AN833-3D	ELBOW	1	
		---•---		
-58	S1167C3-0100	HOSE ASSY-BRAKE LINE	2	M
-59	S2178C3-0083	HOSE ASSY-BRAKE LINE LH	1	N
-60	S2178-3-0074	HOSE ASSY-BRAKE LINE RH	1	N
		ATTACHING PARTS		
-61	AN921-3D	ELBOW	1	R
-62	AN924-3D	NUT	1	R
	MS28778-3	PACKING	1	R
		---•---		
-63	AN833-3D	ELBOW	1	M
-64	AN924-3D	NUT	1	R
-65	AN815-3D	UNION	1	L
-66	AN832-3D	UNION	1	N
-67	AN960PD616	WASHER	2	N
-68	0782001-1	ADAPTER	1	R
-69	0700099-99	LINE ASSY-LH BRAKE	1	R
-70	0700099-98	LINE ASSY-RH BRAKE	1	R
-71	MS21919DG3	CLAMP	1	R
	S1021ZB-6	SCREW	1	R
	NAS446-4-3	NUTPLATE	1	R
	0713272-1	BRACKET	1	R

A---182 SERIAL 18258400 THRU 18262465
A182 SERIAL A182-0097 & ON
B---182 SERIAL 18258400 THRU 18259574
A182 SERIAL A182-0097 THRU A182-0116
C---182 SERIAL 18259575 THRU 18260101
D---182 SERIAL 18260102 THRU 18262465
A182 SERIAL A182-0117 & ON
F---182 SERIAL 18258400 THRU 18260101
A182 SERIAL A182-0097 THRU A182-0116
F---182 SERIAL 18258400 THRU 18260669
A182 SERIAL A182-0097 THRU A182-0136
G---182 SERIAL 18260670 THRU 18262465
A182 SERIAL A182-0137 & ON
H---182 SERIAL 18258400 THRU 18260825
A182 SERIAL A182-0097 & ON
J---182 SERIAL 18260102 THRU 18260825
A182 SERIAL A182-0117 & ON
K---182 SERIAL 18260826 THRU 18262465
L---182 SERIAL 18258400 THRU 18261539
M---182 SERIAL 18261540 THRU 18261901 & 18261972
N---182 SERIAL 18261902 THRU 18261971
18261973 THRU 18262465
P---182 SERIAL 18258400 THRU 18261455
Q---182 SERIAL 18261456 THRU 18261539
R---182 SERIAL 18261540 THRU 18262465
S---182 SERIAL 18260826 THRU 18261539
T---182 SERIAL 18260102 THRU 18261539
A182 SERIAL A182-0117 & ON

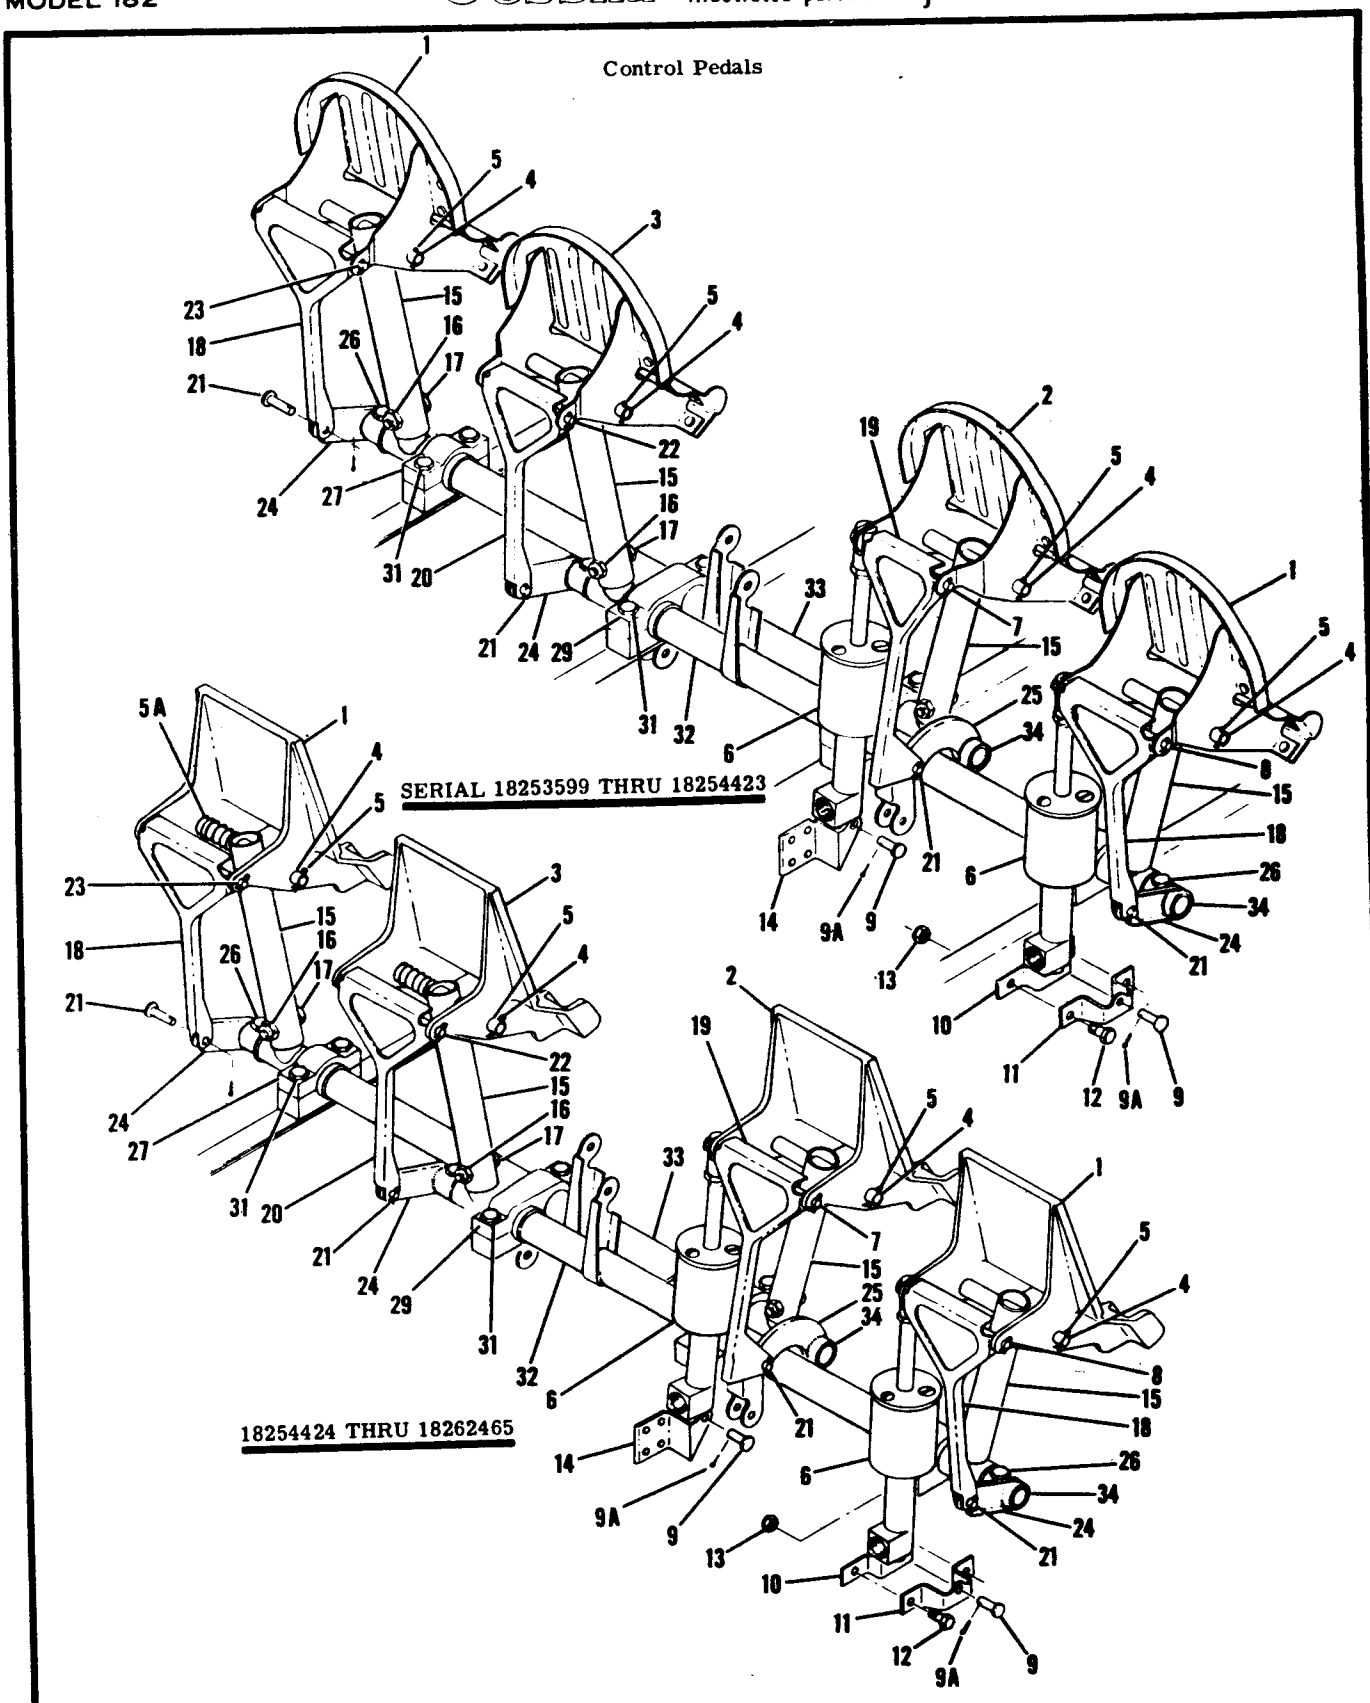


Figure 72. Brake & Rudder Pedals Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
72 -		BRAKE & RUDDER PEDALS INSTALLATION	NP	
- 1	0310453-0-270	PEDAL ASSEMBLY-BRAKE & RUDDER	2	A
	1460320-1	PEDAL ASSEMBLY-BRAKE & RUDDER	2	B
- 2	0310453-5	PEDAL ASSEMBLY-BRAKE & RUDDER LH	1	A
	0760678-1	PEDAL ASSEMBLY-BRAKE & RUDDER LH	1	B
- 3	0310453-6	PEDAL ASSEMBLY-BRAKE & RUDDER RH	1	A
	0760678-2	PEDAL ASSEMBLY-BRAKE & RUDDER RH	1	B
		ATTACHING PARTS		
- 4	0411369-2	SHAFT	1	A
	1460501-21	SHAFT	1	B
- 5	MS24665-285	COTTER PIN	2	
- 5A	0760682-1	SPRING-ANTI RATTLE	1	B
		---*---		
- 6	SEE FIG 73	CYLINDER ASSEMBLY-BRAKE	2	
		ATTACHING PARTS		
- 7	0760669-1	PIN	1	
	S1438-2	WASHER	AR	
- 8	0411778-2	SHAFT	1	
	MS24665-132	COTTER PIN UPPER	1	
- 9	MS20392-2C15	PIN-CLEVIS	1	
- 9A	MS24665-132	COTTER PIN LOWER	1	
		---*---		
-10	0411549	BRACKET-BRAKE CYLINDER INSIDE	1	
-11	0411550	BRACKET-BRAKE CYLINDER OUTSIDE	1	
		ATTACHING PARTS		
-12	AN3-4A	BOLT	2	
-13	MS21044N3	NUT	2	
		---*---		
-14	0713624-2	ANCHOR-BRAKE CYLINDER	1	
-15	0411307	ARM-RUDDER BAR	4	
		ATTACHING PARTS		
-16	MS21044N3	NUT	1	
-17	AN3-11A	BOLT	1	
		---*---		
-18	0411564	LINK DUAL CONTROLS	2	
-19	0713629-2	LINK-LH DUAL CONTROLS	1	
-20	0713629-1	LINK-RH DUAL CONTROLS	1	
		ATTACHING PARTS		
-21	MS20392-2C15	CLEVIS PIN	1	
-22	0760669-3	CLEVIS PIN	1	
-23	0411778-2	SHAFT	1	
	NAS43HT3-12	SPACER	1	
	MS24665-132	COTTER PIN	1	
	S1438-2	WASHER	AR	
		---*---		
-24	0411563	BELLCRANK ASSEMBLY DUAL CONTROLS	3	
-25	0411573-1	BELLCRANK ASSEMBLY DUAL CONTROLS	1	
	0411562	HUB SINGLE CONTROLS	4	
		ATTACHING PARTS		
-26	AN3-10A	BOLT	1	
	MS21044N3	NUT	1	
		---*---		
-27	S1674-1	BEARING HALF-OUTBOARD ORDER PAIR	4	
-28		DELETED-NOT AVAILABLE		
-29	S1675-1	BEARING HALF-INBOARD ORDER PAIR	4	
-30		DELETED-NOT AVAILABLE		
		ATTACHING PARTS		
-31	AN3-14A	BOLT	2	
	AN960-10	WASHER	2	
	MS21044N3	NUT OUTBOARD BEARINGS ONLY	2	
		---*---		
-32	0760604-1	ARM-RUDDER BAR	1	
-33	0760604-2	ARM-RUDDER BAR	1	
-34	0760605-1	TUBE-RUDDER BAR	2	
	S1003-43A	BEARING	4	

A---182 SERIAL 18253599 THRU 18254423
B---182 SERIAL 18254424 THRU 18262465
A182 SERIAL A182-0001 & ON

Master Cylinder

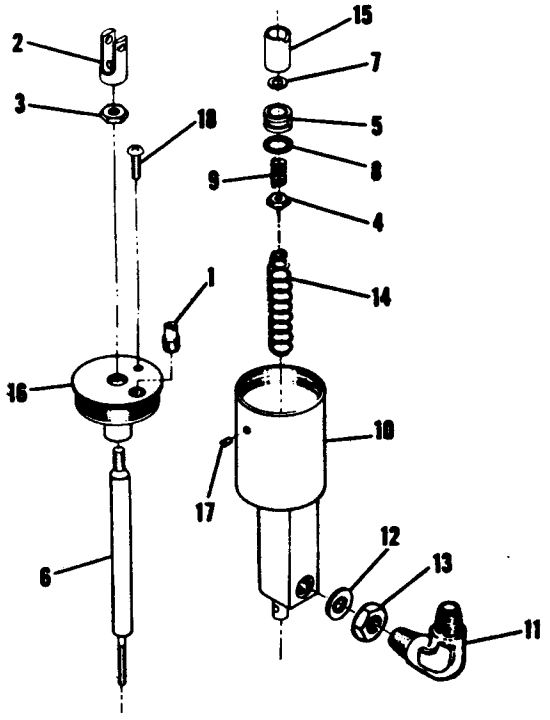


Figure 73. Master Brake Cylinder Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
73 -	0541138-16	CYLINDER ASSEMBLY-BRAKE MASTER	2	A
	0541138-3	CYLINDER ASSEMBLY-BRAKE MASTER	1	B
- 1	0541139	PLUG	1	
- 2	0541140	CLEVIS	1	
- 3	AN316-4R	NUT-CHECK	1	
	0541138-5	PISTON ASSEMBLY-MASTER CYLINDER	1	
		ATTACHING PARTS		
- 4	22FH632	NUT SPS	1	
		---*---		
- 5	0541143	PISTON-MASTER CYLINDER	1	
- 6	0541144	ROD-PISTON	1	
- 7	800-001-6	LOCK-O-SEAL PKSC	1	
- 8	AN6227B8	O RING	1	
- 9	0541148-1	SPRING-PISTON	1	
-10	0541147-2	BODY-MASTER CYLINDER WHEN EXHAUSTED USE 0541184-200	1	
	0541184-200	BODY ASSEMBLY-MASTER CYLINDER	1	A
	0541184-1	BODY ASSEMBLY-MASTER CYLINDER	1	B
-11	AN921-4D	ELBOW	1	A
-12	MS28778-4	GASKET	1	A
-13	AN924-4D	NUT	1	A
-14	0541148	SPRING	1	
-15	0541149	SLEEVE	1	
-16	0541151	COVER	1	
-17	AN565D6H3	SET SCREW	1	
-18	AN515-10R8	SCREW	1	
		A---182 SERIAL 18253599 THRU 18258505 A182 SERIAL A182-0001 THRU A182-0096		
		B---182 SERIAL 18258506 THRU 18262465 A182 SERIAL A182-0097 & ON		

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
			1 2 3 4 5 6 7		
74 -			CONTROL COLUMN INSTALLATION	NP	
- 1	0760663-1		SUPPORT-IDLER SPROCKET	1	
			ATTACHING PARTS	6	
- 2	NAS220-6		SCREW		
			---*---	1	
- 3	0760664-1		SPROCKET ASSEMBLY-IDLER		
			ATTACHING PARTS	1	
- 4	AN5-16A		BOLT	2	
- 5	NAS43HT5-17		SPACER	1	
- 6	AN960-516		WASHER	1	
- 7	NAS679A5		NUT		
			---*---	1	
- 8	MS24462-5		BEARING	1	
	0760668-1		CHAIN ASSEMBLY-AILERON	1	
- 9	0760668-3		CHAIN-AILERON LH	1	
-10	0760668-2		CHAIN-AILERON LH LOWER	1	
-11	0760668-4		CHAIN-AILERON RH		
			ATTACHING PARTS	1	
-12	AN155832S		BARREL	2	
-13	NAS288-35LH		TERMINAL-LH	2	
-14	NAS288-35RH		TERMINAL-RH		
			---*---		
-15			DELETED, NEVER USED	1	
-16	0760654-1		TUBE-CONTROL	2	
-17	0760655-1		SLEEVE-CONTROL		
			ATTACHING PARTS	4	
-18	NAS220-24		SCREW	4	
-19	NAS679A08		NUT		
			---*---	1	
-20	0760686-1		ARM ASSEMBLY-LH	1	
-21	0760686-2		ARM ASSEMBLY-RH		
			ATTACHING PARTS	1	
-22	NAS222-14		SCREW	1	
-23	AN21-10		SCREW	1	
-24	NAS679A4		NUT	1	
-25	AN320-1		NUT	AR	
-25A	AN960D6		WASHER	1	
-26	MS24665-24		PIN		
			---*---	1	
-27	MS24463-4		BEARING	1	
-28	0411047-2		SPROCKET-IDLER SINGLE CONTROLS ONLY		
			ATTACHING PARTS	1	
-29	0760649-1		SHAFT-IDLER SINGLE CONTROLS ONLY	1	
-30	NAS561-6-14		PIN-SPRING	1	
-31	AN310-5		NUT	1	
-32	AN960C516L		WASHER	1	
-33	MS24665-134		PIN		
			---*---	2	
-34	0760633-1		BEARING BLOCK ASSEMBLY-IDLER SINGLE CONTROLS ONLY		
			ATTACHING PARTS	2	
-35	NAS220-11		SCREW	2	
-36	NAS679A08		NUT		
			---*---	1	
-37	B55		BEARING TOR	1	
-38	0760648-1		SUPPORT-BEARING BLOCK SINGLE CONTROLS ONLY		
			ATTACHING PARTS	4	
-39	AN515-6R5		SCREW	4	
-40	NAS679A08		NUT		
			---*---	1	
-41	0760641-1		TUBE ASSEMBLY-AILERON CONTROL WHEN EXHAUSTED USE 1290001-8-	1	
	1290001-8	**	TUBE ASSEMBLY-AILERON CONTROL		
			ATTACHING PARTS	1	
-42	AN960-516L		WASHER	1	
-43	AN310-5		NUT	1	
-44	MS24665-134		PIN-COTTER		
			---*---		

CONTINUED ON NEXT PAGE

Flight Controls

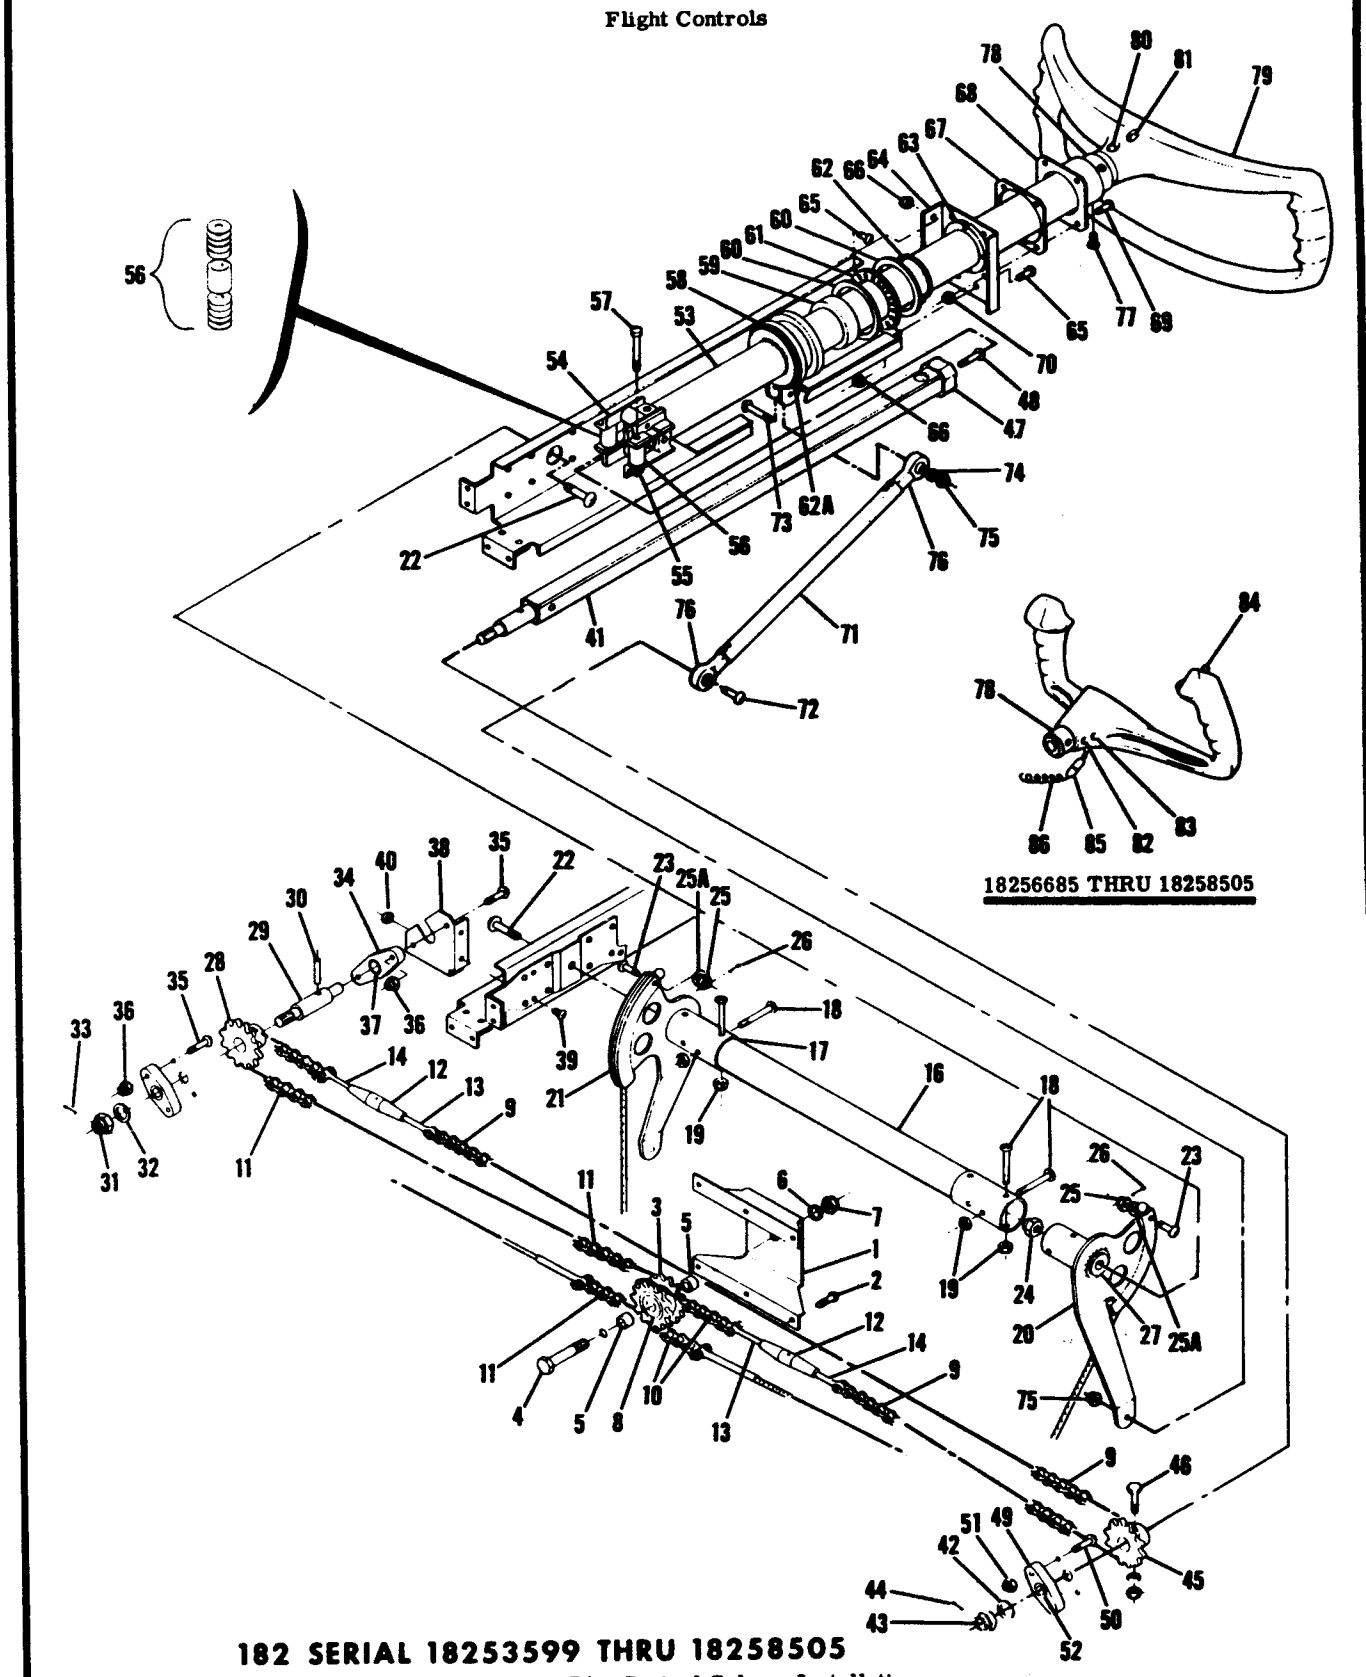


Figure 74. Control Column Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
			1 2 3 4 5 6 7		
74 -45	0411047-2		SPROCKET-AILERON CONTROL	1	
			ATTACHING PARTS		
-46	AN3-11A		BOLT	1	
	AN960-10L		WASHER	1	
	MS21044N3		NUT	1	
			---*---		
-47	0760651-2	*	GLIDE-AILERON CONTROL	1	
	0760681-1		PLUG	1	
			ATTACHING PARTS		
-48	NAS220-13		SCREW	1	
	AN256-8		NUT	1	
			---*---		
-49	0760633-1		BEARING BLOCK ASSEMBLY-CONTROL	2	
			ATTACHING PARTS		
-50	NAS220-11		SCREW	2	
-51	NAS679A08		NUT	2	
			---*---		
-52	B55		BEARING TOR	1	
-53	0760640-1		TUBE & BEARING ASSEMBLY-AILERON & ELEVATOR CONTROL	1	E
			WHEN EXHAUSTED USE 1290001K12		
	1290001K12	%	TUBE & BEARING ASSEMBLY KIT	1	E
	0760640-6		TUBE & BEARING ASSEMBLY-AILERON & ELEVATOR CONTROL	1	F
			WHEN EXHAUSTED USE 1290001K13		
	1290001K13	%	TUBE & BEARING ASSEMBLY KIT	1	F
-54	0760646-2		RETAINER-CONTROLS	1	
-55	MK7200-3		NUT-STAKE	4	
-56	1260664-1		BEARING KIT	4	
-57	0760644-1		SCREW-MACHINE	4	
-58	0760643-1		SLEEVE WELD ASSEMBLY	1	
-59	B228		BEARING TOR	1	
-60	TRA2233		RACE-BEARING TOR	4	
-61	NTA-2233		BEARING TOR	2	
-62	MS16624-137		RING-RETAINER	1	
-62A	S1358-1		WASHER	AR	
-63	S1080-4		GROMMET LH CONTROL ONLY	1	
-64	1261454-1		PLATE ASSEMBLY-LH	1	J
	1213147-1		PLATE ASSEMBLY-RH	1	K
	0760635-2		PLATE ASSEMBLY-RH	1	D
	1261454-1		PLATE ASSEMBLY-RH	1	
			ATTACHING PARTS		
-65	NAS220-6		SCREW LH PLATE	4	
	AN507-832R6		SCREW RH PLATE	7	
-66	NAS679A08		NUT	4	
			---*---		
-67	0760642-2		SPACER-LH	1	
-68	0760642-1		COLLAR-LH	1	
			ATTACHING PARTS		
-69	AN515-6R8		SCREW	4	
-70	NAS679A08		NUT	4	
			---*---		
	0760634-1		TUBE ASSEMBLY-ELEVATOR CONTROL SINGLE CONTROLS	1	
-71	0760634-1		TUBE ASSEMBLY-ELEVATOR CONTROL DUAL CONTROLS	2	
			ATTACHING PARTS		
-72	NAS222-16		SCREW	1	
-73	0760674-1		SCREW	1	
-74	AN960-416		WASHER	5	
-75	NAS679A4		NUT	2	
			---*---		
-76	F3M14		ROD END HEC	2	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
74 -	0513167-14	CONTROL WHEEL ASSEMBLY	1	A
	0513167-15	CONTROL WHEEL ASSEMBLY SKYLANE	1	A
	0713747-200	WHEEL & ADAPTER ASSEMBLY-CONTROL	1	B
	0713747-201	WHEEL & ADAPTER ASSEMBLY-CONTROL	1	C
	1560001-10	WHEEL ASSEMBLY-CONTROL	1	F
	0713245-200	WHEEL ASSEMBLY-CONTROL WITH MIKE SWITCH	1	F
		ATTACHING PARTS		
-77	AN507-1032R6	SCREW	3	
		---*---		
-78	0760636-1	ADAPTER ASSEMBLY-CONTROL	1	G
	MS21209F1-15	INSERT	1	
-79	0513166-1	WHEEL-CONTROL FSO WHEEL & ADAPTER ASSY	NP	
-80	0413216	RIVET	1	E
-81	0413216-4	RIVET	1	E
-82	0413216-2	RIVET	1	H
-83	0413216-5	RIVET	1	H
-84	A8002	SWITCH-MICROPHONE	1	F
-85	SM3P	PLUG WIQ	1	F
	SM2H	HOOD WIQ	1	F
	0713216-2	EMBLEM-CONTROL WHEEL	1	A
	0713215-2	EMBLEM-CONTROL WHEEL SKYLANE	1	A
	SEE FIG 2	EMBLEM-CONTROL WHEEL	1	
-86	8409	CABLE-RETRACTABLE BDN	1	F
	SM3S	RECEPTACLE WIQ	1	F
	SM2H	HOOD WIQ	1	F

NOTE. *WHEN ORDERING THIS PART PRIOR TO SERIAL 18254348 ALSO ORDER 0760681-1 PLUG.


NOTE. **WHEN INITIALLY ORDERING THIS PART ALSO ORDER FOUR 1260664-1 BEARING KITS.

NOTE. ΣTHIS TUBE & BEARING KIT CONTAINS BOTH SIZE ROLLERS FOR CONTACT WITH 0760641-1 OR 1290001-8 TUBE ASSEMBLY.

A---182 SERIAL 18253599 THRU 18255058
B---182 SERIAL 18255059 THRU 18255844
C---182 SERIAL 18255845 THRU 18256684
D---182 SERIAL 18253599 THRU 18255844
E---182 SERIAL 18253599 THRU 18256684
F---182 SERIAL 18256685 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
G---182 SERIAL 18253599 THRU 18256684
H---182 SERIAL 18256685 THRU 18257426
A182 SERIAL A182-0001 THRU A182-0028
J---182 SERIAL 18255845 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
K---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
74A-		CONTROL COLUMN INSTALLATION	NP	A
- 1	0760102-2	TUBE ASSEMBLY-RH	1	E
	1260143-4	TUBE & BEARING ASSEMBLY-RH	1	G
	1260143-12	TUBE & BEARING ASSEMBLY-RH	1	H
	0760102-3	TUBE ASSEMBLY-LH	1	B
	121050-202	TUBE ASSEMBLY-LH	1	C
	1260098-4	TUBE ASSEMBLY-LH	1	D
	1260140-7	TUBE & BEARING ASSEMBLY-LH	1	G
	1260140-9	TUBE & BEARING ASSEMBLY-LH	1	H
- 2	0760646-2	RETAINER ASSEMBLY	4	
- 3	0760644-1	MACHINE SCREW	4	
- 4	1260664-1	ROLLER KIT	1	
- 5	0760699-1	SLEEVE WELD ASSEMBLY	1	
- 6	B228	BEARING TOR	4	
- 7	TRA-2233	RACE-BEARING	2	
- 8	NTA-2233	BEARING TOR	AR	
- 9	S1358-1	SPACER	1	
- 9A	MS16624-1137	RING	1	F
- 9B	1560312-1	COLLAR	2	F
- 9C	1260148-1	STUD	1	F
- 9D	1260665-1	CONNECTOR	1	
-10	S1080-4	GROMMET	1	
-11	0713262-2	ATTACH BRACKET ASSEMBLY-LH	1	
	NAS696A08	NUTPLATE	2	
	NAS697A08	NUTPLATE	1	J
-11A	0713261-1	ATTACH PLATE-LH	1	H
	0713960-1	ATTACH PLATE	10	
-12	NAS220-6	SCREW	2	
-13	NAS679A08	NUT	1	
-14	0760642-2	SPACER	1	J
-15	0760118-4	COLLAR	1	H
	1260668-3	COLLAR		
		ATTACHING PARTS		
-16	AN515-6R8	SCREW	4	J
	NAS514-632R10	SCREW	4	H
-17	NAS679A06	NUT	4	
		---*---		
-17A	1213147-1	COVER PLATE DUAL CONTROLS ONLY	1	
		ATTACHING PARTS		
-17B	AN507832R7	SCREW	4	
	AN507832R6	SCREW	3	
-17C	NAS679A08	NUT	4	
		---*---		
-17D	0760101-3	RETAINER DUAL CONTROLS ONLY	1	
		ATTACHING PARTS		
-17E	S1021A8-6	SCREW	2	
		---*---		
-18	0760103-1	TUBE ASSEMBLY	1	
		ATTACHING PARTS		
-19	NAS222-16	SCREW	1	
-20	0760674-1	SCREW	1	
-21	AN960-416	WASHER	4	
-22	NAS679A4	NUT	2	
	AN960-416L	WASHER	1	
		---*---		
-22A	0760691-1	SUPPORT ASSEMBLY-LH	1	
	0760695-1	RUB STRIP-CONTROL TUBE OUTBD	1	
	0760695-3	RUB STRIP-CONTROL TUBE INBD	1	
	0760691-2	SUPPORT ASSEMBLY-RH USE WITH DUAL CONTROLS ONLY	1	
	0760695-2	RUB STRIP-CONTROL TUBE INBD	1	
	0760695-3	RUB STRIP-CONTROL TUBE OUTBD	1	
	NAS684A08	NUTPLATE	2	
-23	0760702-200	TUBE ASSEMBLY-AILERON CONTROL	1	E
		ATTACHING PARTS		
-24	AN960-516L	WASHER	1	
-25	AN310-5	NUT	1	
-26	MS24665-134	PIN	1	
		---*---		

CONTINUED ON NEXT PAGE

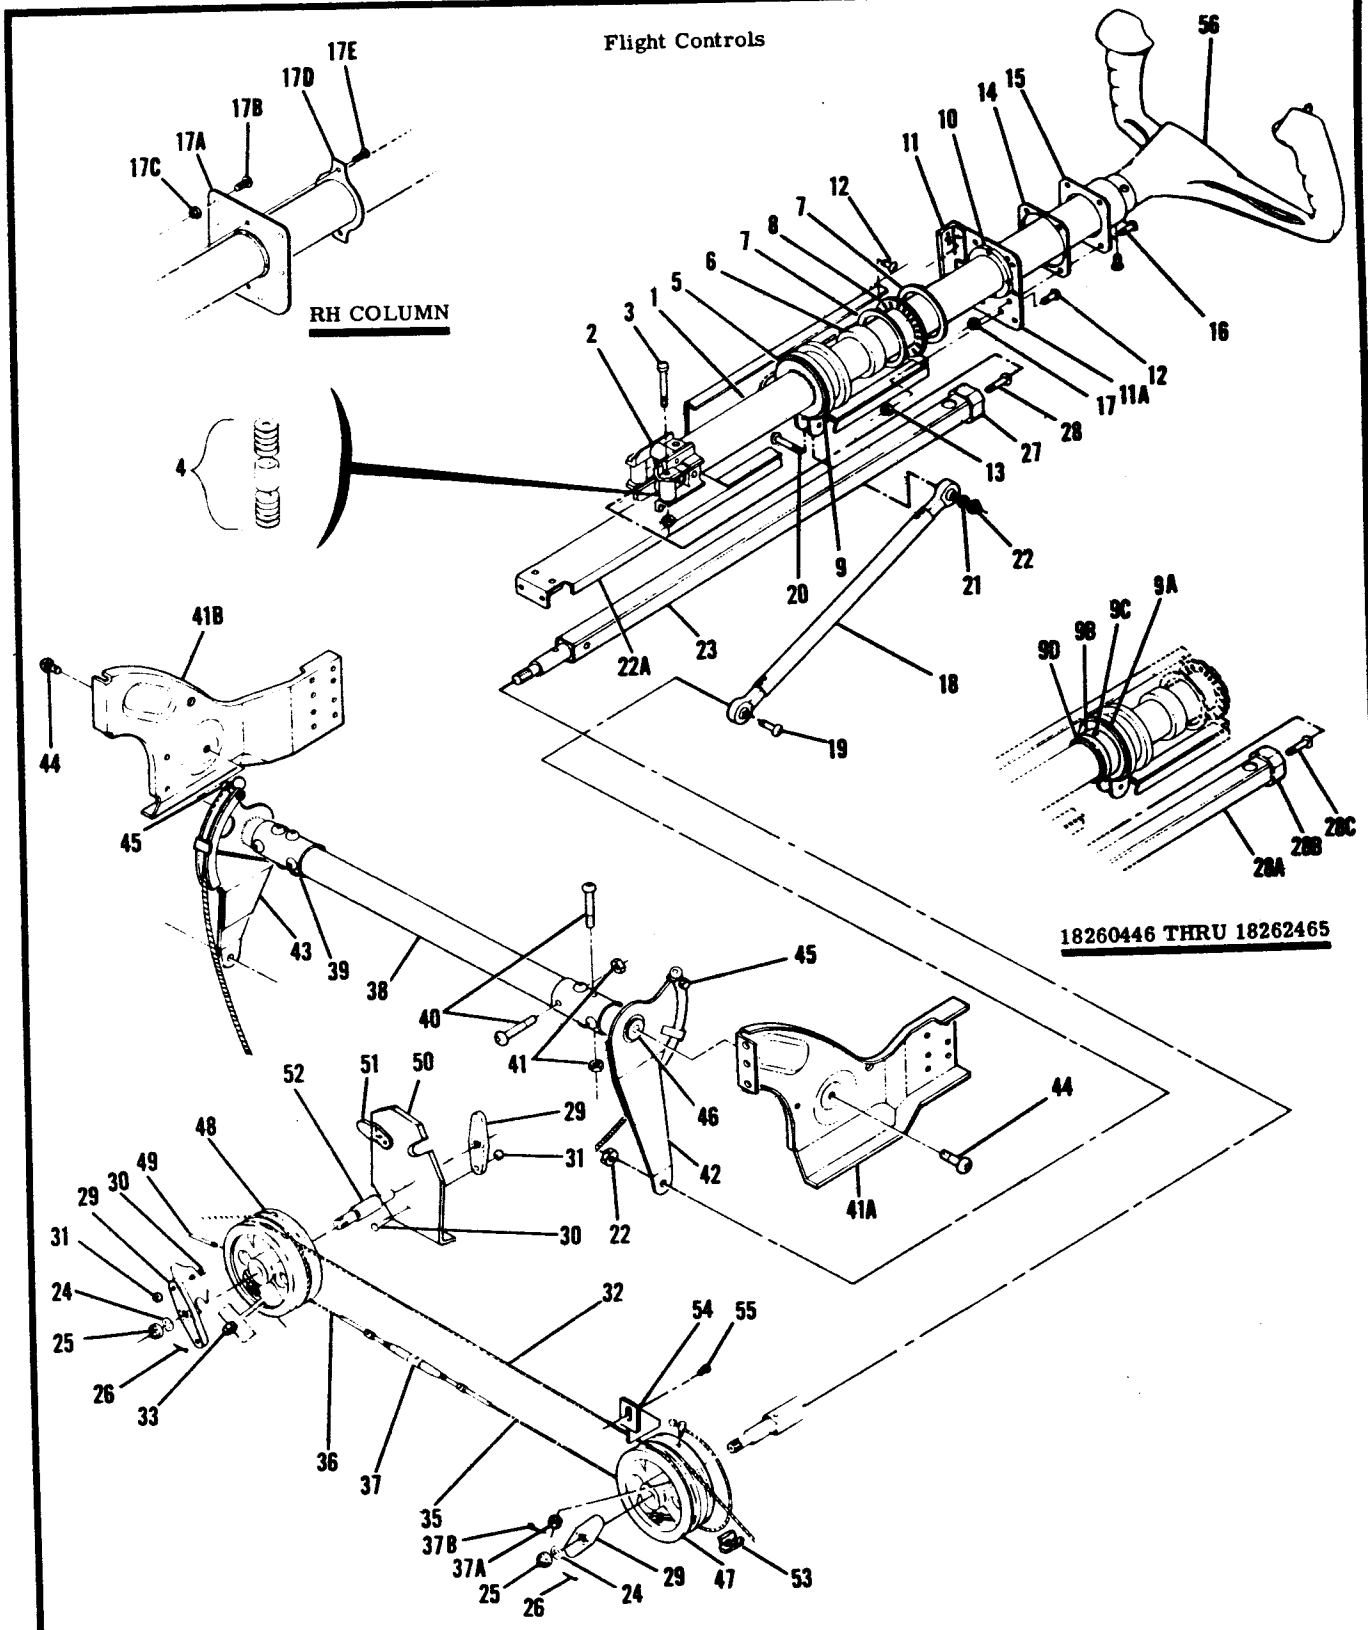

182 SERIAL 18258506 THRU 18262465


Figure 74A. Control Column Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
74A-27	0760104-1	GLIDE RH	1	E
	0760104-1	GLIDE LH	1	B
	075000-1	GLIDE LH	1	C
	0760121-1	GLIDE LH	1	D
	0760104-2	PLUG RH	1	E
	0760104-2	PLUG LH	1	B
	0760681-2	PLUG LH	1	C
	0760104-2	PLUG LH	1	D
		ATTACHING PARTS		
-28	NAS220-14	SCREW	1	E
		---*---		
-28A	1260141-6	TUBE ASSEMBLY-AILERON CONTROL LH	1	F
	1260141-10	TUBE ASSEMBLY-AILERON CONTROL RH	1	F
-28B	0760121-1	GLIDE-LH TUBE ONLY	1	F
	0760651-2	GLIDE-RH TUBE ONLY	1	F
	0760104-2	PLUG-LH TUBE ONLY	1	F
	0760681-1	PLUG-RH TUBE ONLY	1	F
		ATTACHING PARTS		
-28C	NAS220-14	SCREW	1	F
		---*---		
-29	0760633-1	BEARING BLOCK	2	
		ATTACHING PARTS		
-30	NAS220-11	SCREW	2	
-31	NAS679A08	NUT	2	
		---*---		
-32	1260078-5	CABLE ASSEMBLY	1	
		ATTACHING PARTS		
-33	MS21042-3	NUT	2	
		---*---		
-35	1260078-2	CABLE ASSEMBLY-LH	1	
-36	1260078-3	CABLE ASSEMBLY-RH	1	
		ATTACHING PARTS		
-37	AN155B32S	BARREL	1	
-37A	AN310-3	NUT	2	
-37B	MS24665-71	COTTER PIN	2	
		---*---		
-38	0760654-1	TUBE-CONTROL	1	
-39	0760655-1	SLEEVE-CONTROL	2	
		ATTACHING PARTS		
-40	NAS220-24	SCREW	4	
-41	NAS679A08	NUT	4	
		---*---		
-41A	0760693-1	SUPPORT-BELLCRANK CONTROL TUBE LH	1	
-41B	0760693-2	SUPPORT-BELLCRANK CONTROL TUBE RH	1	
-42	0760686-1	ARM ASSEMBLY-LH	1	
-43	0760686-2	ARM ASSEMBLY-RH	1	
		ATTACHING PARTS		
-44	NAS222-14	SCREW	1	
	NAS679A4	NUT	1	
-45	AN21-10	BOLT	1	
	AN320-1	NUT	1	
	AN960D6	WASHER	AR	
	MS24665-24	PIN	1	
		---*---		
-46	MS24663-4	BEARING	1	
-47	1260033-3	QUADRANT-LH WEU 1260112-1	1	
	1260112-1	QUADRANT-LH	1	
-48	1260033-4	QUADRANT-RH WEU 1260112-2	1	
	1260112-2	QUADRANT-RH	1	
		ATTACHING PARTS		
-49	NAS561-6-32	PIN	1	
		---*---		
-50	0760700-1	SUPPORT-BEARING BLOCK SINGLE CONTROLS ONLY	1	
		ATTACHING PARTS		
	AN515-8R8	SCREW	4	
	NAS679A08	NUT	4	
		---*---		
-51	0760106-1	GUARD	1	
-52	0760649-2	SHAFT SINGLE CONTROLS ONLY	1	
-53	0760107-1	CABLE GUARD-LH	1	
	0760107-2	CABLE GUARD-RH	1	
		ATTACHING PARTS		
	S1021Z8-5	SCREW	2	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
74A-54	0760701-1	CABLE GUARD	1	
		ATTACHING PARTS		
-55	AN515-6R6	SCREW	2	
-56	SEE FIG 74B	CONTROL WHEEL & SWITCHES INSTALLATION	1	
		A---182 SERIAL 18258506 THRU 18262465 A182 SERIAL A182-0097 & ON B---182 SERIAL 18258506 THRU 18258638 A182 SERIAL A182-0097 THRU A182-0116 C---182 SERIAL 18258639 THRU 18259086 D---182 SERIAL 18259087 THRU 18260445 A182 SERIAL A182-0117 & ON E---182 SERIAL 18258506 THRU 18260445 A182 SERIAL A182-0097 & ON F---182 SERIAL 18260446 THRU 18262465 G---182 SERIAL 18260446 THRU 18260825 H---182 SERIAL 18260826 THRU 18262465 J---182 SERIAL 18258506 THRU 18260825 A182 SERIAL A182-0097 THRU A182-0136		

Controls (Cont)

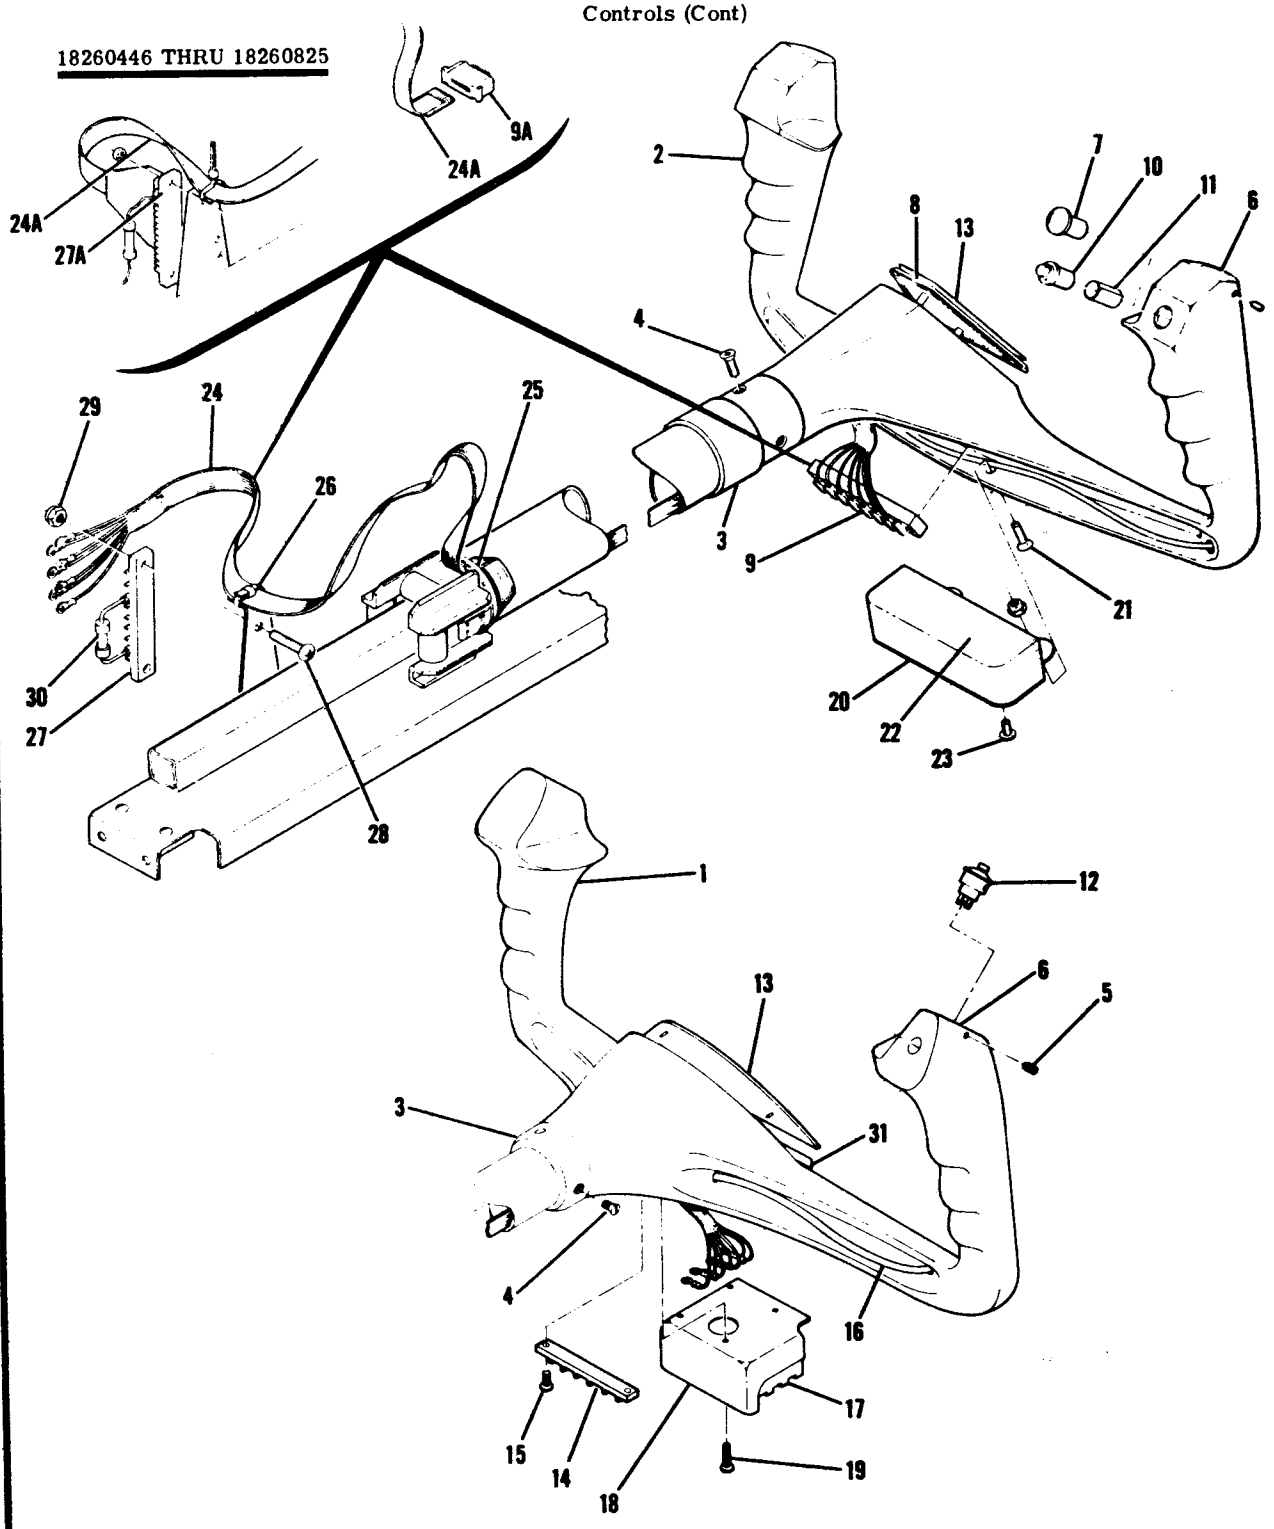


182 SERIAL 18258506 THRU 18260825

Figure 74B. Control Wheel & Switches Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
748-		CONTROL WHEEL & SWITCHES INSTALLATION	NP	A
- 1	1560010-4	CONTROL WHEEL ASSEMBLY PILOT	1	B
- 2	1270681-4	CONTROL WHEEL ASSEMBLY PILOT	1	C
	1560001-10	CONTROL WHEEL ASSEMBLY CO-PILOT	1	B
	1260476-3	CONTROL WHEEL ASSEMBLY CO-PILOT	1	C
		ATTACHING PARTS		
- 3	1560319-1	COLLAR	1	D
	1560319-2	COLLAR	1	E
- 4	AN507-1032R6	SCREW	3	
		---*---		
	MS21209-F1-10	INSERT	3	
- 5	AN565B4-2	SCREW ATTACH PLUG OR ADAPTER	1	
- 6	1560110-3	PLUG-SWITCH HOLE	1	
- 7	1270682-1	PLUG-MIKE SWITCH HOLE	1	C
- 8	1260477-2	BASE PLATE-PLACARD	1	C
- 9	1270658-1	TERMINAL BLOCK PILOT ONLY	1	D
- 9A	255-10-30-190	CONNECTOR	1	E
-10	S1985-1	SWITCH-MICROPHONE	1	C
-11		INSULATION USE MYLAR ELECTRICAL TAPE	NP	C
-12	A8002	SWITCH-MICROPHONE CSDC	1	B
	1560110-1	ADAPTER-MIKE SWITCH	1	B
-13	SEE FIG 2	EMBLEM-CONTROL WHEEL	1	
-14	5-171	TERMINAL BLOCK CIN	1	B
		ATTACHING PARTS		
-15	AN515-2R8	SCREW	2	B
	S1868-3	INSERT	2	B
		---*---		
-16	8445	CABLE-MIKE SWITCH BDN	1	
-17	1570142-2	CIRCUIT BOARD ASSEMBLY-MAP LIGHT	1	B
-18	1570150-1	SHIELD-CIRCUIT BOARD	1	B
		ATTACHING PARTS		
-19	AN515-2R10	SCREW	4	B
	S1959-1	INSERT	4	B
		---*---		
-20	1270686-1	MAPLIGHT ASSEMBLY	1	
		ATTACHING PARTS		
-21	AN507-832R7	SCREW	2	
	MAS679A06	NUT	2	
		---*---		
-22	1270687-2	COVER-MAPLIGHT	1	
		ATTACHING PARTS		
-23	AN515-6R6	SCREW	2	
	1270693-1	GASKET	1	
		---*---		
	S1894-1	LAMP-MAPLIGHT	2	
-24	SF1030-26BX	SPECTASTRIP CABLE BDN	1	D
-24A	1270060-1	CABLE ASSEMBLY	1	E
-25	S1693-2	STA-STRAP	1	
-26	S1693-1	STA-STRAP	1	
-27	8-171	TERMINAL STRIP CIN	1	D
		ATTACHING PARTS		
-27A	582384-9	SOCKET ARP	1	E
-28	AN515-4R8	SCREW	2	D
	AN515-6R8	SCREW	2	E
-29	MAS679A04	NUT	2	D
	MAS679A06	NUT	2	E
		---*---		
-30	1570141-1	FUSE ASSEMBLY	1	
-31	1205004-1	PLACARD-MAP LIGHT	1	B

A---182 SERIAL 18258506 THRU 18260825
A182 SERIAL A182-0097 THRU A182-0136
B---182 SERIAL 18258506 THRU 18260055
A182 SERIAL A182-0097 THRU A182-0116
C---182 SERIAL 18260056 THRU 18260825
A182 SERIAL A182-0117 THRU A182-0136
D---182 SERIAL 18258506 THRU 18260445
A182 SERIAL A182-0097 THRU A182-0136
E---182 SERIAL 18260446 THRU 18260825

Controls (Cont)

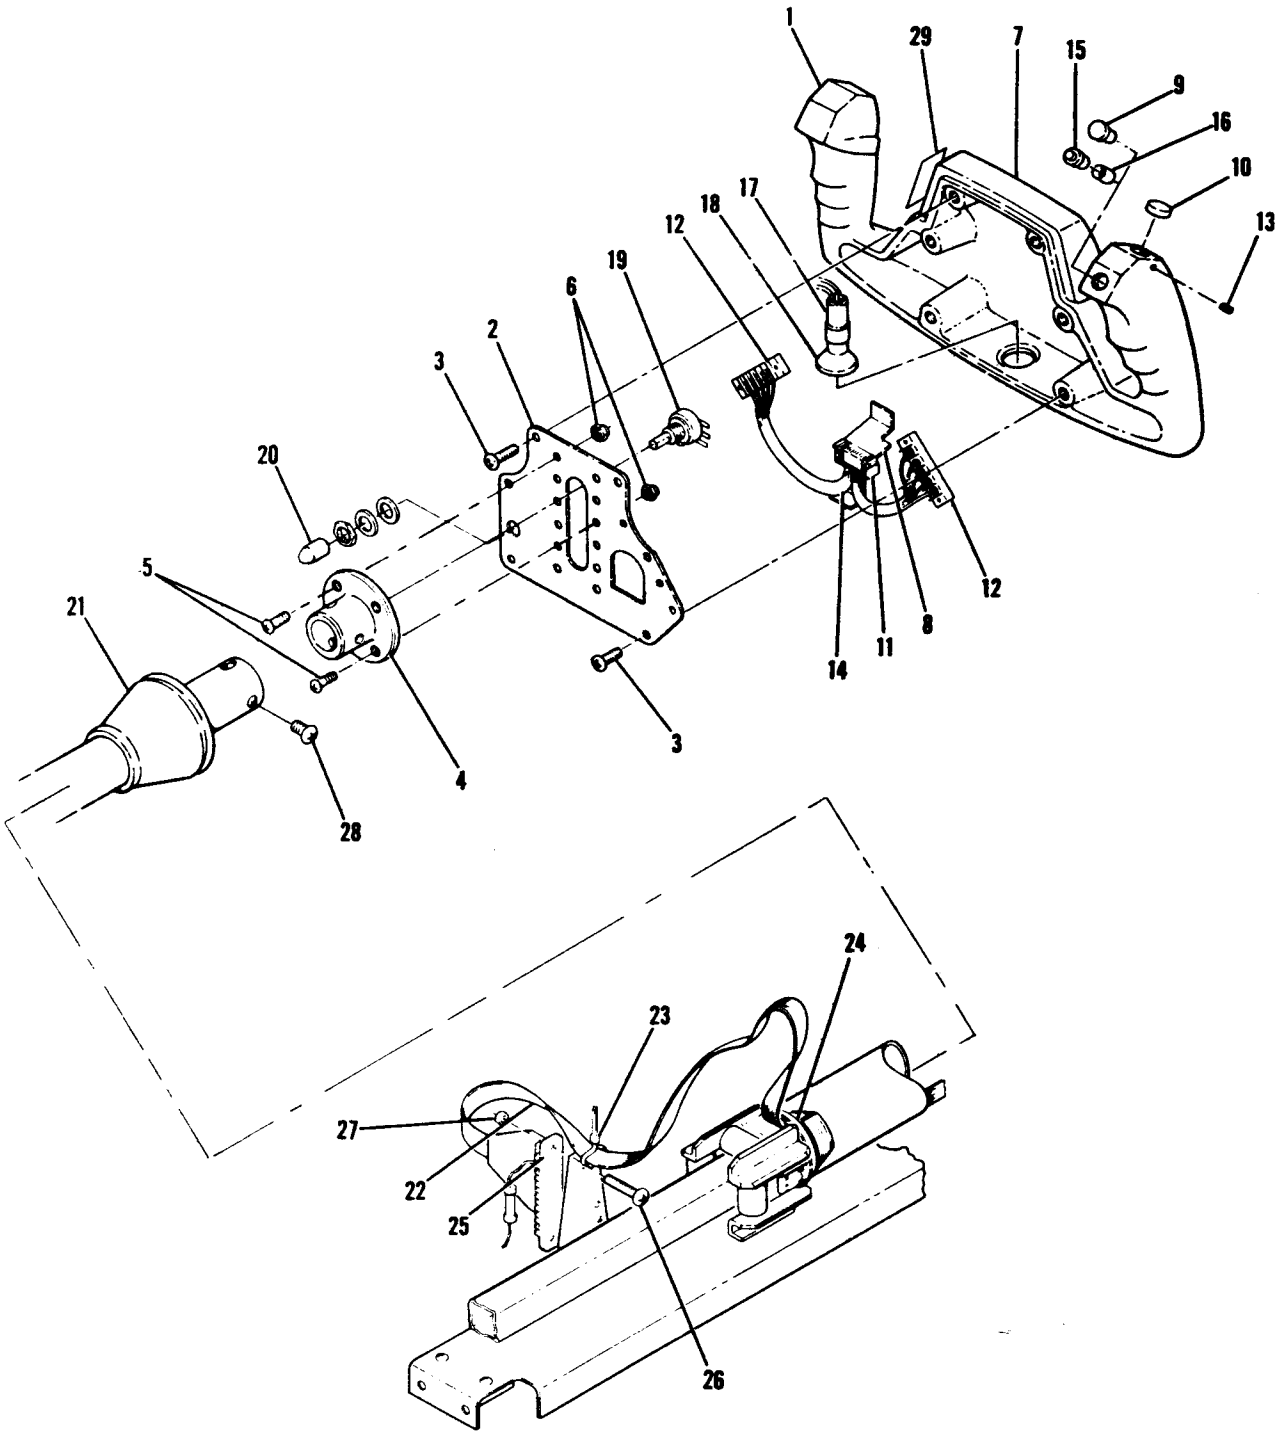

182 SERIAL 18260826 THRU 18262465

Figure 74C. Control Wheel & Switches Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
740-		CONTROL WHEEL & SWITCHES INSTALLATION	NP	A
- 1	0760019-3	CONTROL WHEEL ASSEMBLY-PADDED HAS MAPLIGHT & MIKE SWITCH PROVISIONS	1	
	0760019-1	CONTROL WHEEL ASSEMBLY-PADDED UNDRILLED	1	
- 2	0760016-1	PLATE	1	
		ATTACHING PARTS		
- 3	NAS221-9	SCREW	5	
		---*---		
	MS21209F1-20	INSERT	5	
- 4	0760017-2	ADAPTOR ASSEMBLY	1	
		ATTACHING PARTS		
- 5	NAS221-11	SCREW	4	
- 6	MS21044N3	NUT	4	
		---*---		
- 7	0760018-1	PAD-CONTROL WHEEL	1	
- 8	0760022-1	BRACKET USED ON 0760019-3 ONLY	1	
- 9	1270682-1	PLUG-MIKE SWITCH HOLE USED ON 0760019-3 ONLY	1	
-10	1560110-3	PLUG-SWITCH HOLE USED ON 0760019-3 ONLY	1	
-11	255-10-30-190	CONNECTOR USED ON 0760019-3 ONLY	1	
-12	351-11-05-001	TERMINAL BLOCK USED ON 0760019-3 ONLY	2	
-13	AN56584-2	SCREW LEFT HAND ONLY ATTACH PLUG	1	
-14	SF10308X	CABLE	1	
-15	S1985-1	SWITCH-MIKE	1	
-16		INSULATION USE MYLAR ELECTRICAL TAPE	NP	
-17	4157-001	SOCKET-MAP LIGHT	1	
-18	12R8	LAMP-MAP LIGHT	1	
-19	3859A-281-251A	RHEOSTAT-MAP LIGHT 250 OHM	1	B
	3859A-282-251A	RHEOSTAT-MAP LIGHT 250 OHM	1	C
-20	S2093-1	COVER	1	
-21	0760021-1	COVER-CONTROL WHEEL ADAPTOR	1	
-22	1270060-1	CABLE ASSEMBLY	1	
-23	S1693-1	STA-STRAP	1	
-24	S1693-2	STA-STRAP	1	
-25	582384-9	SOCKET ARP	1	
		ATTACHING PARTS		
-26	AN515-6R8	SCREW	2	
-27	NAS679A06	NUT	2	
		---*---		
-28	NAS221-6	SCREW ATTACH CONTROL WHEEL ASSEMBLY	3	
-29	0705028-1	PLACARD-MAP LIGHT	1	

A---182 SERIAL 18260826 THRU 18262465
B---182 SERIAL 18260826 THRU 18261425
C---182 SERIAL 18261426 THRU 18262465

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7	NP	
75 -		CONSOLE INSTALLATION	1	
- 1	SEE FIG 19	STRUCTURE ASSEMBLY-CONSOLE	1	
- 2	0713642-1	RETAINER ASSEMBLY-ELEVATOR TRIM		
		ATTACHING PARTS	4	
- 3	NAS220-5	SCREW	1	
		---*---		
- 4	0713642-3	INDICATOR-STABILIZER TRIM	1	
		ATTACHING PARTS	1	
	0713032-1	BUSHING	1	
	0713032-2	COLLAR	1	
		---*---		
- 5	NAS295M4	BEARING TOR	1	
- 6	0411420	HOUSING	1	
- 7	0713643-1	SUPPORT ASSEMBLY-RUDDER TRIM INDICATOR		
		ATTACHING PARTS	4	
	AN515-8R6	SCREW	4	
- 8	NAS679A08	NUT		
		---*---		
	0713643-3	INDICATOR-RUDDER TRIM	1	
	0713653-1	SPROCKET ASSEMBLY-RUDDER TRIM	1	
- 9	0761210-1	SPROCKET	2	
		ATTACHING PARTS	1	
	NAS561-3-8	PIN-AFT SPROCKET	1	
	0761205-3	PIN-FORWARD SPROCKET	1	
		---*---		
- 9A	0761210-5	SPROCKET	1	L
		ATTACHING PARTS		
	AN3-6A	BOLT	1	L
	0713640-12	SPACER	1	L
	AN960-10L	WASHER	3	L
	MS21044N3	NUT	1	L
		---*---		

CONTINUED ON NEXT PAGE

Flight Controls (Cont)

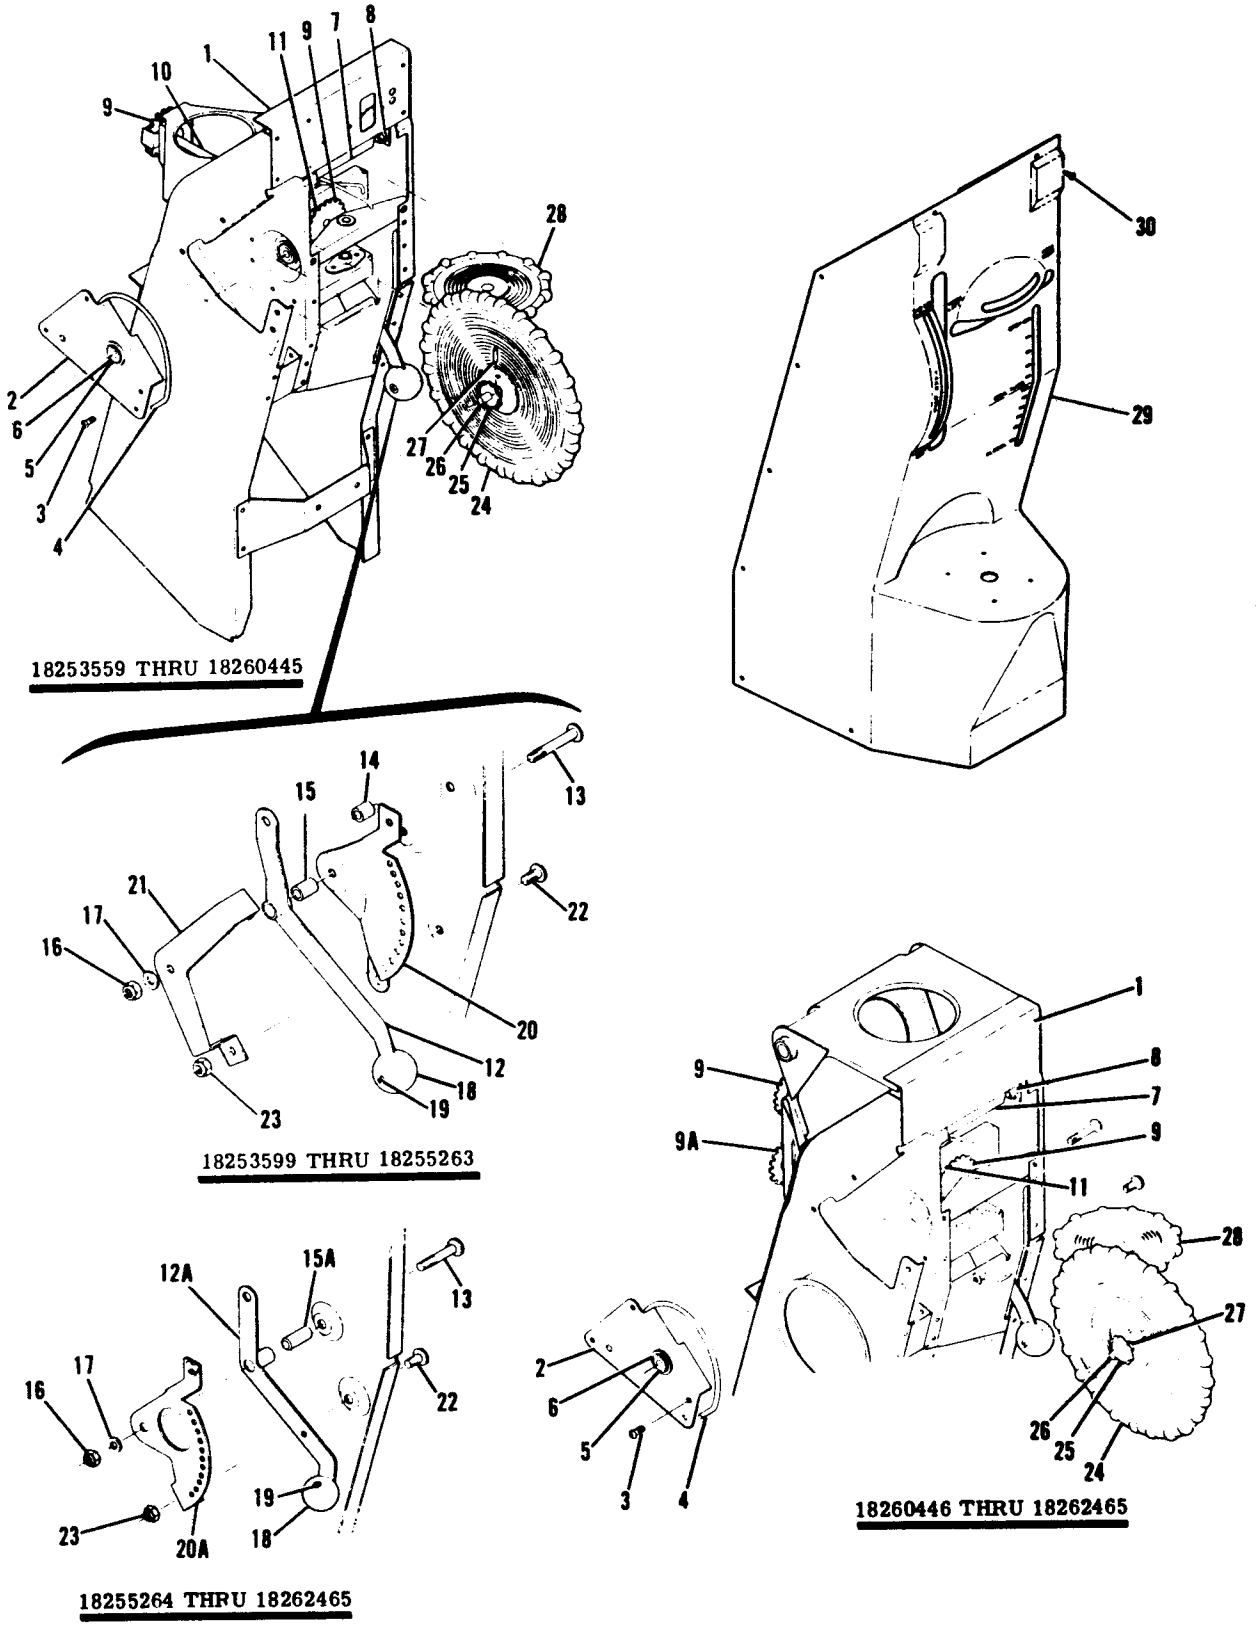



Figure 75. Console Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
75 -10	0713653-2	SHAFT	1	
-11	NAS43DD4-18	SPACER	1	
	AN960-416L	WASHER	AR	
-12	0713654-1	LEVER ASSEMBLY-COWL FLAP	1	A
-12A	0713315-1	LEVER ASSEMBLY-COWL FLAP	1	F
	0713315-5	LEVER ASSEMBLY-COWL FLAP	1	J
	0713315-6	LEVER ASSEMBLY-COWL FLAP	1	K
		ATTACHING PARTS		
-13	AN525-10R22	SCREW	1	
-14	NAS43DD3-21	SPACER	1	A
-15	NAS76A3-016	BUSHING	1	A
-15A	NAS76A3-028	BUSHING	1	B
-16	MS21044N3	NUT	1	
-17	AN960PD10	WASHER	1	
		---*---		
-18	S1249-1	KNOB	1	H
	S1249-2	KNOB	1	G
		ATTACHING PARTS		
-19	AN507-1032R8	SCREW	1	
	S1196-1	WASHER	1	
		---*---		
-20	0713714-2	POSITION BRACKET-COWL FLAP CONTROL	1	A
-20A	0713314-1	POSITION BRACKET-COWL FLAP CONTROL	1	B
-21	0713722-1	BRACKET ASSEMBLY-COWL FLAP LEVER SUPPORT	1	A
	NAS698A3K	NUTPLATE	1	
-22	AN525-10R6	SCREW	2	
-23	MS21044N3	NUT	2	
-24	0713656-1	WHEEL ASSEMBLY-ELEVATOR TRIM	1	
-25	0432134-1	SPROCKET	1	
-26	0713656-3	SHAFT	1	
-27	NAS561-3-8	PIN	2	
-28	1713269-1	WHEEL ASSEMBLY-RUDDER TRIM	1	
		ATTACHING PARTS		
	MS24665-132	PIN-COTTER	1	
		---*---		
-29	0713710-3-418	COVER ASSEMBLY-CONSOLE	1	C
	0713811-1 ¤	COVER ASSEMBLY-CONSOLE WHEN EXHAUSTED USE 0713811-2	1	D
	0713811-2 ¤	COVER ASSEMBLY-CONSOLE WHEN EXHAUSTED USE 0713811-3	1	E
	0713811-3 ¤	COVER ASSEMBLY-CONSOLE	1	E
	1200756-7 ¤	COVER ASSEMBLY-CONSOLE WITH LIGHTS	1	G
		ATTACHING PARTS		
-30	S1021-8-6	SCREW	11	
		---*---		

NOTE. ¤THIS PART MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18253599 THRU 18255263
B---182 SERIAL 18255264 THRU 18262465
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18253599 THRU 18255844
D---182 SERIAL 18255845 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
E---182 SERIAL 18257626 THRU 18258505
A182 SERIAL A182-0057 THRU A182-0096
F---182 SERIAL 18255264 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
G---182 SERIAL 18258506 THRU 18262465
A182 SERIAL A182-0097 & ON
H---182 SERIAL 18253599 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
J---182 SERIAL 18258506 THRU 18260055
A182 SERIAL A182-0097 THRU A182-0116
K---182 SERIAL 18260056 THRU 18262465
A182 SERIAL A182-0117 & ON
L---182 SERIAL 18260446 THRU 18262465

Flight Controls (Cont)

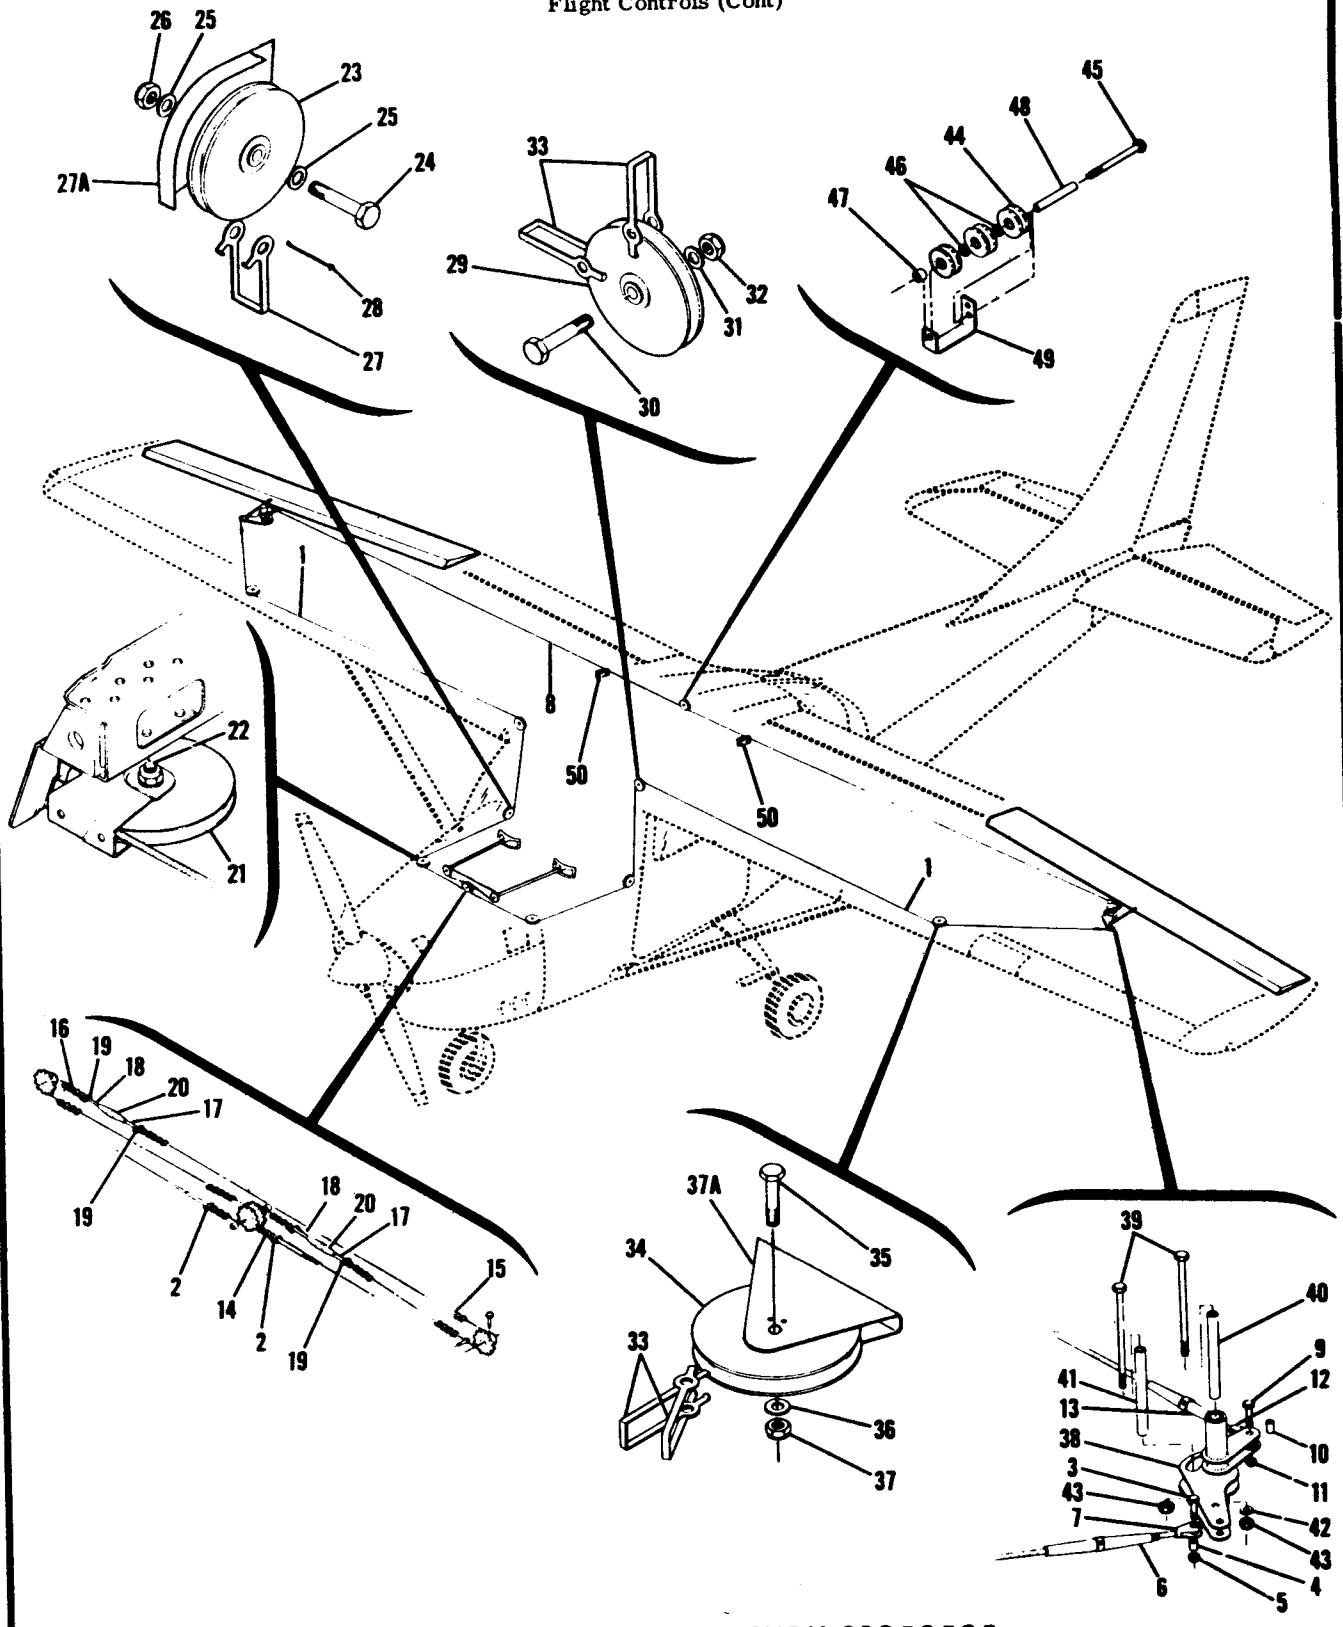

182 SERIAL 18253599 THRU 18258505

Figure 76. Aileron Control System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
76 -		AILERON CONTROL SYSTEM INSTALLATION	NP	B
- 1	0510105-95	CABLE ASSEMBLY-AILERON DIRECT	2	
	0510105-195	CABLE ASSEMBLY-AILERON DIRECT STAINLESS STEEL	2	
		ATTACHING PARTS		
- 2	AN21-10	BOLT	1	
	AN320-1	NUT	1	
	MS24665-7	PIN	1	
- 3	AN3-7A	BOLT	1	
- 4	0422280	BUSHING	1	
- 5	MS21044N3	NUT	1	
- 6	AN155B32L	BARREL	1	
- 7	AN161-32LL	FORK		
		---*---		
- 8	0510105-13	CABLE ASSEMBLY-AILERON CARRY THRU	1	
	0510105-113	CABLE ASSEMBLY-AILERON CARRY THRU STAINLESS STEEL	1	
		ATTACHING PARTS		
- 9	AN3-17A	BOLT	2	
-10	0422280	BUSHING	2	
-11	MS21044N3	NUT	2	
-12	AN161-32LL	FORK LH ONLY	1	
-13	AN155B32L	BARREL LH ONLY	1	
		---*---		
	0760668-1	CHAIN ASSEMBLY-AILERON	1	
-14	0760668-2	CHAIN-AILERON LH LOWER	1	
-15	0760668-3	CHAIN-AILERON LH	1	
-16	0760668-4	CHAIN-AILERON RH	1	
-17	NAS288-35LH	TERMINAL	2	
-18	NAS288-35RH	TERMINAL	2	
-19	AN21-10	BOLT	4	
	AN320-1	NUT	4	
	MS24665-7	PIN	4	
-20	AN155B32S	BARREL	2	
-21	S378-4	PULLEY	2	
		ATTACHING PARTS		
-22	AN4-10A	BOLT	1	
	AN960-416	WASHER	1	
	NAS679A4	NUT	1	
		---*---		
-23	MS20220-2	PULLEY	2	
		ATTACHING PARTS		
-24	AN5-13A	BOLT	1	
-25	AN960-516L	WASHER	2	
-26	NAS679A5	NUT	1	
		---*---		
-27	0760610-3	GUARD	2	
-27A	0760680-2	GUARD-PULLEY RH SIDE	1	A
	0760680-1	GUARD-PULLEY LH SIDE	1	A
-28	MS24665-285	PIN-COTTER	2	
-29	MS20220-2	PULLEY	2	
		ATTACHING PARTS		
-30	AN5-12A	BOLT	1	
-31	AN960-516	WASHER	1	
-32	NAS679A5	NUT	1	
		---*---		
-33	0760610-2	GUARD	8	
-34	S378-4	PULLEY	2	
		ATTACHING PARTS		
-35	AN4-11A	BOLT	1	
-36	AN960-416	WASHER	1	
-37	NAS679A4	NUT	1	
		---*---		


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
76 -37A	0760609-1	BRACKET-AILERON PULLEY	1	
-38	0760611-1	BELLCRANK ASSEMBLY-LH	1	
	0760611-2	BELLCRANK ASSEMBLY-RH	1	
		ATTACHING PARTS		
-39	AN4-42A	BOLT	2	
-40	0523221	BUSHING	1	
-41	0523222	BUSHING	1	
-42	0522629	WASHER	1	
-43	NAS679A4	NUT	2	
		---*---		
-44	S394	PULLEY	1	
		ATTACHING PARTS		
-45	AN3-21A	BOLT	1	
-46	AN960-416	WASHER	2	
-47	NAS43HT4-16	SPACER	1	
-48	0512138	BUSHING	1	
-49	0512136	GUARD	1	
		---*---		
-50	0760615-1	GUARD	2	
	0760616-1	RUB STRIP	2	
		ATTACHING PARTS		
	AN515-8R12	SCREW	2	
	NAS679A08	NUT	2	
		---*---		
		A---182 SERIAL 18254300 THRU 18258505 A182 SERIAL A182-0001 THRU A182-0096 B---182 SERIAL 18253599 THRU 18258505 A182 SERIAL A182-0001 THRU A182-0096		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
76A-		AILERON CONTROL SYSTEM INSTALLATION	NP	A
- 1	0510105-228	CABLE ASSEMBLY-AILERON DIRECT	1	
	0510105-328	CABLE ASSEMBLY-AILERON DIRECT STAINLESS STEEL	1	
		ATTACHING PARTS		
- 2	AN3-7A	BOLT	1	
- 3	0422280	BUSHING	1	
- 4	MS21044N3	NUT	1	
- 5	AN155B32L	BARREL	1	
- 6	AN161-32LL	FORK	1	
		---*---		
- 6A	0713944-1	GUARD-CABLE	2	B
- 7	0510105-13	CABLE ASSEMBLY-AILERON CARRY THRU	1	
	0510105-113	CABLE ASSEMBLY-AILERON CARRY THRU STAINLESS STEEL	1	
		ATTACHING PARTS		
- 8	AN3-7A	BOLT	2	
- 9	0422280	BUSHING	2	
-10	MS21044N3	NUT	2	
-11	AN161-32LL	FORK LH ONLY	1	
-12	AN155B32L	BARREL LH ONLY	1	
		---*---		

CONTINUED ON NEXT PAGE

Flight Controls (Cont)

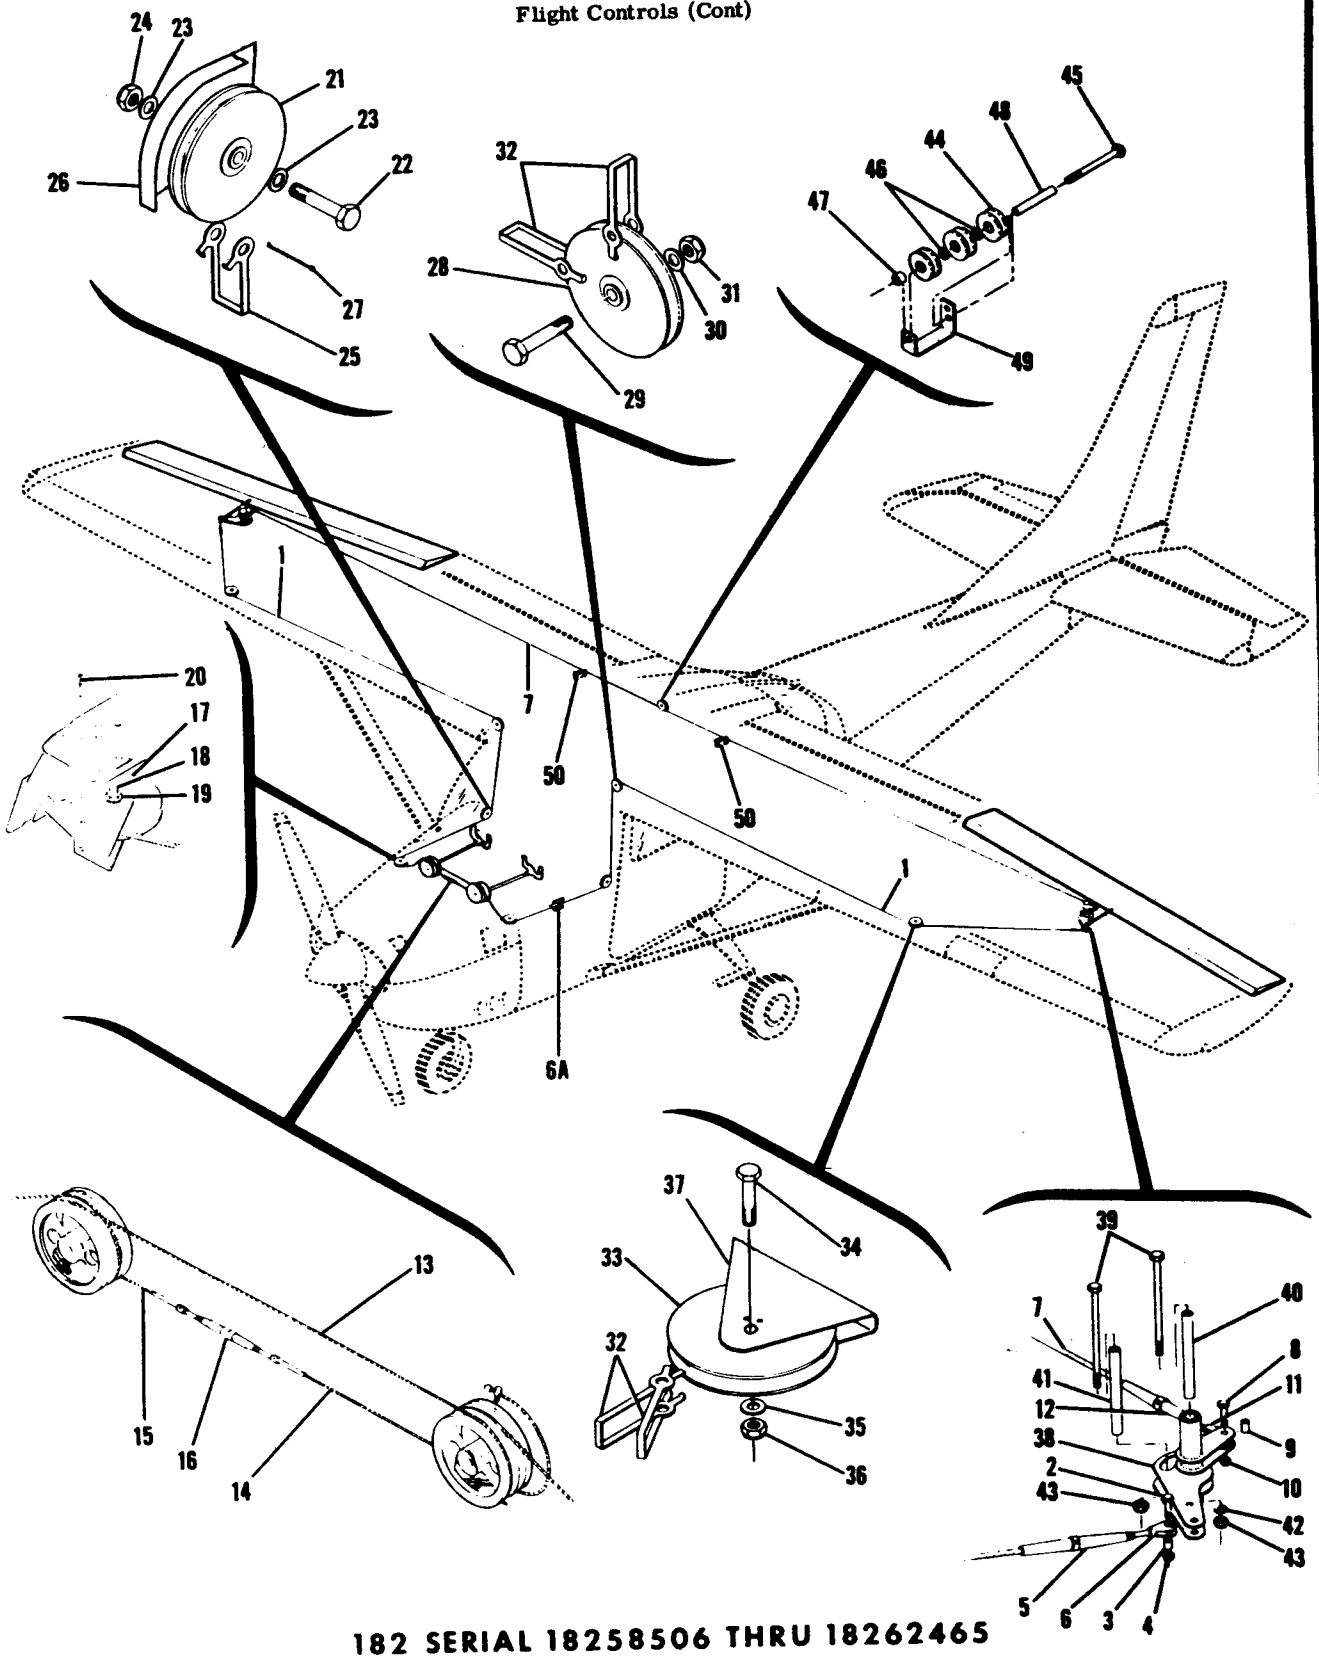


182 SERIAL 18258506 THRU 18262465

Figure 76A. Aileron Controls Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
76A-13	1260078-5	CABLE ASSEMBLY	1	
-14	1260078-2	CABLE ASSEMBLY LH	1	
	1260078-102	CABLE ASSEMBLY-LH STAINLESS STEEL	1	
-15	1260078-3	CABLE ASSEMBLY RH	1	
	1260078-103	CABLE ASSEMBLY-RH STAINLESS STEEL	1	
-16	AN155B32S	BARREL	1	
-17	MS20220-2	PULLEY	1	
		ATTACHING PARTS		
-18	AN5-11A	BOLT	1	
	AN960-516	WASHER	2	
-19	NAS679A5	NUT	1	
-20	MS24665-136	PIN-COTTER	1	
		---*---		
-21	MS2C220-2	PULLEY	2	
		ATTACHING PARTS		
-22	AN5-13A	BOLT	1	
-23	AN960-516L	WASHER	2	
-24	NAS679A5	NUT	1	
		---*---		
-25	0760610-1	GUARD	2	
-26	0760607-1	GUARD-PULLEY	1	
-27	MS24665-285	PIN-COTTER	2	
-28	MS20220-2	PULLEY	2	
		ATTACHING PARTS		
-29	AN5-13A	BOLT	1	
-30	AN960-516	WASHER	2	
-31	NAS679A5	NUT	1	
		---*---		
-32	0760610-2	GUARD	8	
-33	S378-4	PULLEY	2	
		ATTACHING PARTS		
-34	AN4-11A	BOLT	1	
-35	AN960-416	WASHER	6	
-36	NAS679A4	NUT	1	
		---*---		
-37	0760609-1	BRACKET-AILERON PULLEY	1	
-38	0760703-5	BELLCRANK ASSEMBLY-LH	1	
	0760703-6	BELLCRANK ASSEMBLY-RH	1	
		ATTACHING PARTS		
-39	AN4-42A	BOLT	2	
-40	0523321	BUSHING	1	
-41	0523222	BUSHING	1	
-42	0522629-1	WASHER	1	
-43	NAS679A4	NUT	2	
		---*---		
-44	S394	PULLEY	1	
		ATTACHING PARTS		
-45	AN3-21A	BOLT	1	
-46	AN960-416	WASHER	2	
-47	NAS43HT4-16	SPACER	1	
-48	0512138	BUSHING	1	
-49	0512136	GUARD	1	
		---*---		
-50	0760615-1	GUARD	2	
	0760616-1	RUB-STRIP	2	
		ATTACHING PARTS		
	AN515-8R12	SCREW	2	
	NAS679A08	NUT	2	
		---*---		
-51	1262005-1	BRACKET	1	
	MS21919DG6	CLAMP	1	
		ATTACHING PARTS		
	S1021Z10-6	SCREW	1	
	NAS446-1-3	NUT	1	
		---*---		

A---182 SERIAL 18258506 THRU 18262465
A182 SERIAL A182-0097 & ON
8---182 SERIAL 18260147 THRU 18262465
A182 SERIAL A182-0117 & ON

Flight Controls (Cont)

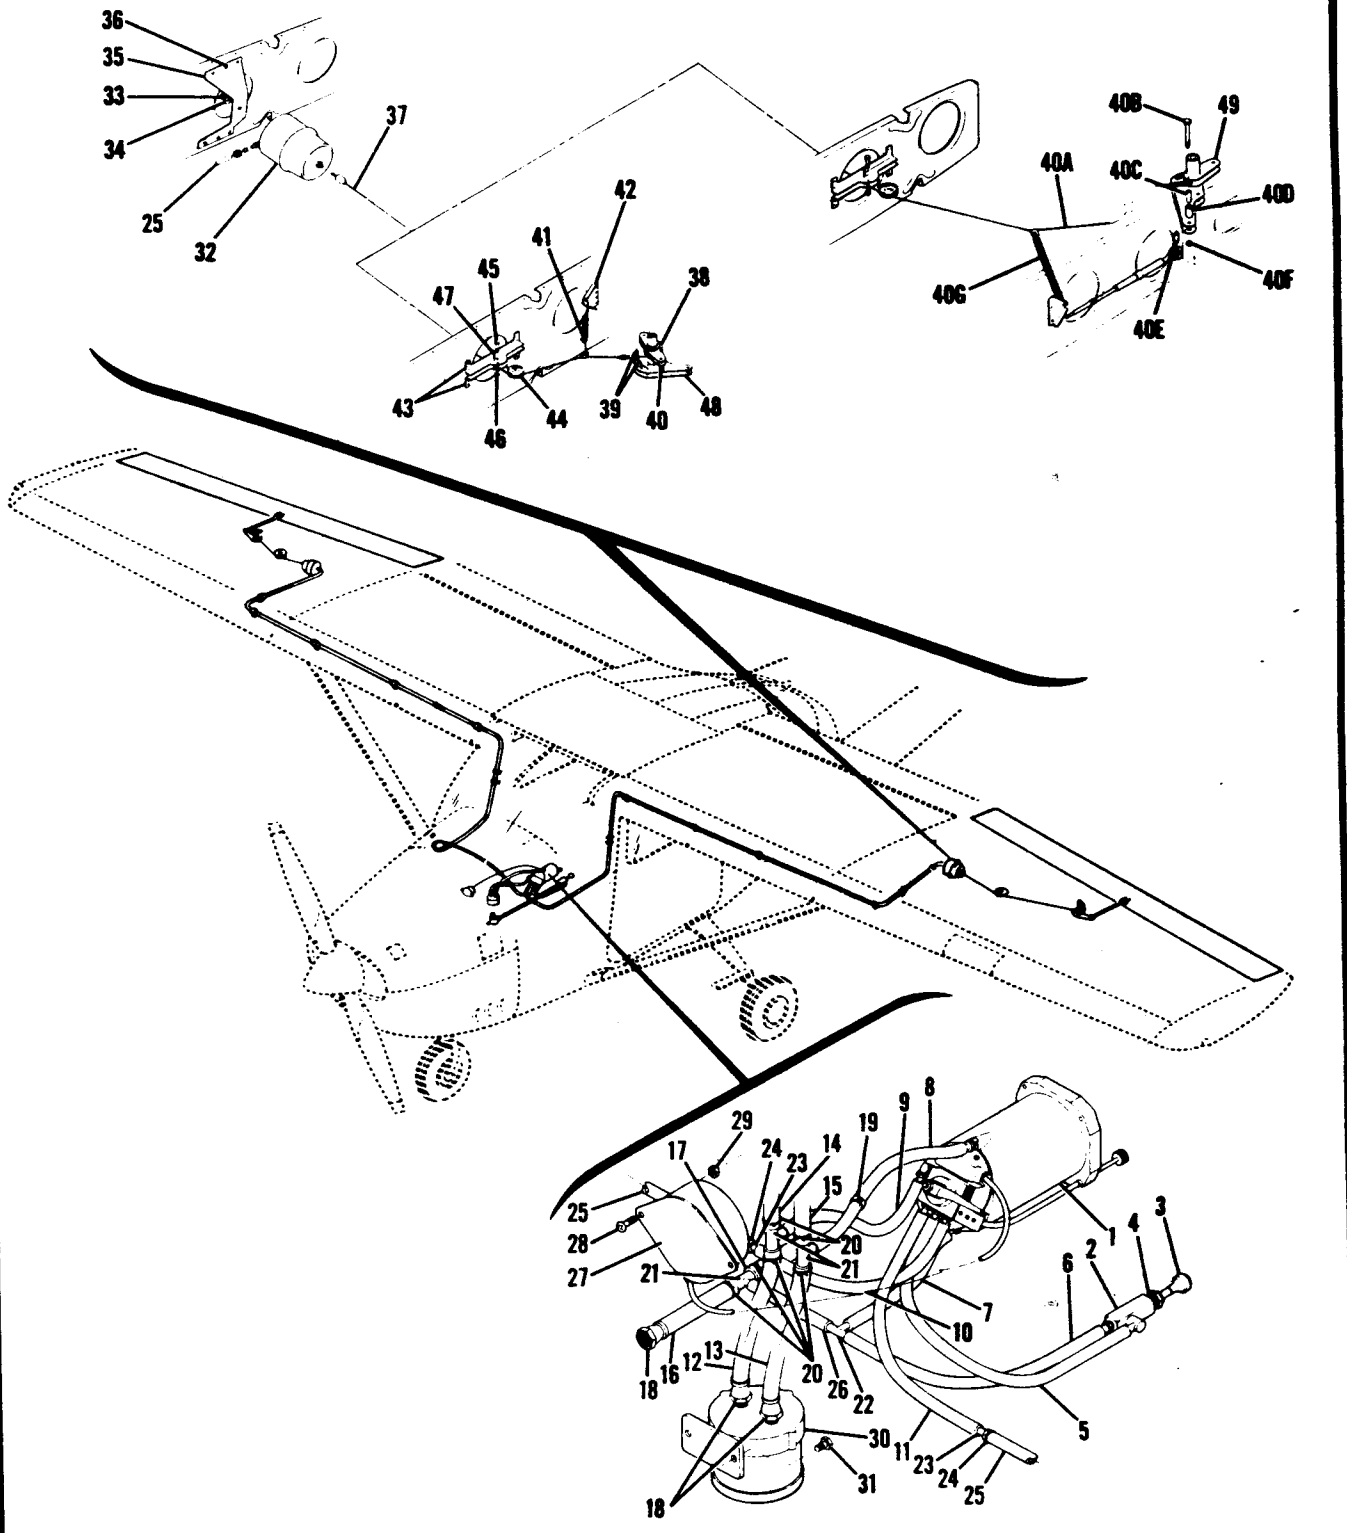

182 SERIAL 18258506 THRU 18262465

Figure 76B. Wing Leveler Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
768-		WING LEVELER INSTALLATION	NP	A
- 1	2904-1	TURN COORDINATOR BTID	1	
		ATTACHING PARTS		
	AN51586R16	SCREW	3	
	AN3406B	NUT	3	
		---*---		
	TVA-1315	CAPACITOR LOCATED ON BACK OF INSTRUMENT	1	
- 2	S1791-1	VALVE ASSEMBLY-ON-OFF	1	
- 3	S1760-1	KNOB-VALVE ASSEMBLY	1	
- 4	AN960PD616	WASHER	AR	
- 5	S1800-1	HOSE* IN LG BULK ITEM REF S1800-1-*	1	
- 6	S1800-1	HOSE* IN LG BULK ITEM REF S1800-1-*	1	
- 7	S1800-1	HOSE* IN LG BULK ITEM REF S1800-1-*	1	
- 8	S1800-1	HOSE* IN LG BULK ITEM REF S1800-1-*	1	
- 9	S1800-1	HOSE* IN LG BULK ITEM REF S1800-1-*	1	
-10	S1800-1	HOSE* IN LG BULK ITEM REF S1800-1-*	1	
-11	S1800-1	HOSE* IN LG BULK ITEM REF S1800-1-*	1	
-12	S1495-6	HOSE* IN LG BULK ITEM REF S1495-6-*	1	
-13	S1495-6	HOSE* IN LG BULK ITEM REF S1495-6-*	1	
-14	S1495-6	HOSE* IN LG BULK ITEM REF S1495-6-*	1	
-15	S1495-6	HOSE* IN LG BULK ITEM REF S1495-6-*	1	
-16	S1495-6	HOSE* IN LG BULK ITEM REF S1495-6-*	1	
-17	S1495-6	HOSE* IN LG BULK ITEM REF S1495-6-*	1	
-18	S1497-6	FITTING-SOCKETLESS	6	
-19		RESTRICTOR PART OF 2904-1 TURN COORDINATOR	NP	
-20	S1494-9	CLAMP	6	
-21	S1793-2	TEE	3	
-22	S1793-1	TEE	1	
-23	S1794-1	FITTING	2	
-24	S1494-6	CLAMP	2	
-25	S1071-3	TUBE-POLYETHYLENE* IN LG BULK ITEM REF S1071-3-*	1	
-26	S1800-1	HOSE* IN LG BULK ITEM REF S1800-1-*	1	
-27		INVERTER PART OF 2900-1 TURN COORDINATOR	NP	
		ATTACHING PARTS		
-28	AN515-8R8	SCREW	2	
-29	NAS679A08	NUT	2	
		---*---		
-30	C294501-0101	FILTER ASSEMBLY	1	
		ATTACHING PARTS		
-31	AN3-3A	BOLT	2	
		---*---		
-32	1220-1-0	SERVO ASSEMBLY BTID	2	B
	1005-1-0	SERVO ASSEMBLY BTID	2	C
		ATTACHING PARTS		
-33	NAS679A5	NUT	1	
-34	S1450-5A15-050	WASHER	2	
		---*---		
-35	0724106-1	BRACKET-MOUNTING AILERON SERVO	1	
		ATTACHING PARTS		
-36	AN515-8R7	SCREW	6	
		---*---		
-37	0422358-6	CABLE ASSEMBLY	2	B
		ATTACHING PARTS		
-38	AN23-12	BOLT	1	B
-39	NAS43HT3-6	SPACER	2	B
-40	AN310-3	NUT	1	B
	MS24665-134	PIN-COTTER	1	B
		---*---		
-40A	0422358-9	CABLE ASSEMBLY	2	C
		ATTACHING PARTS		
-40B	AN3-16A	BOLT	1	C
-40C	0760126-1	BUSHING	1	C
-40D	NAS43HT4-42	SPACER	1	C
-40E	0422280	BUSHING	1	C
-40F	MS21044N3	NUT	1	C
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
76B-40G	0760127-1	SPRING	1	C
-41	1222016-3	SPRING	1	B
		ATTACHING PARTS		
-42	0724108-1	BRACKET-LH	1	
	0724108-2	BRACKET-RH	1	
		---*---		
-43	0724107-1	PULLEY BRACKET	2	
-44	S378-1L	PULLEY	1	
		ATTACHING PARTS		
-45	AN3-5A	BOLT	1	
	AN960-10L	WASHER	2	
-46	MS21044N3	NUT	1	
		---*---		
-47	MS24665-134	PIN-COTTER	2	
-48	0760705-7	BELLCRANK ASSEMBLY-LH REPLACES 0760703-5	1	B
	0760705-5	BELLCRANK ASSEMBLY-RH REPLACES 0760703-6	1	B
-49	0760703-5	BELLCRANK ASSEMBLY-LH	1	C
	0760703-6	BELLCRANK ASSEMBLY-RH	1	C

NOTE. *LENGTH TO BE ADDED LATER

A---182 SERIAL 18258506 THRU 18262465
A182 SERIAL A182-0097 & ON
B---182 SERIAL 18258506 THRU 18258865
A182 SERIAL A182-0097 THRU A182-0116
C---182 SERIAL 18258866 THRU 18262465
A182 SERIAL A182-0117 & ON

Flight Controls (Cont)

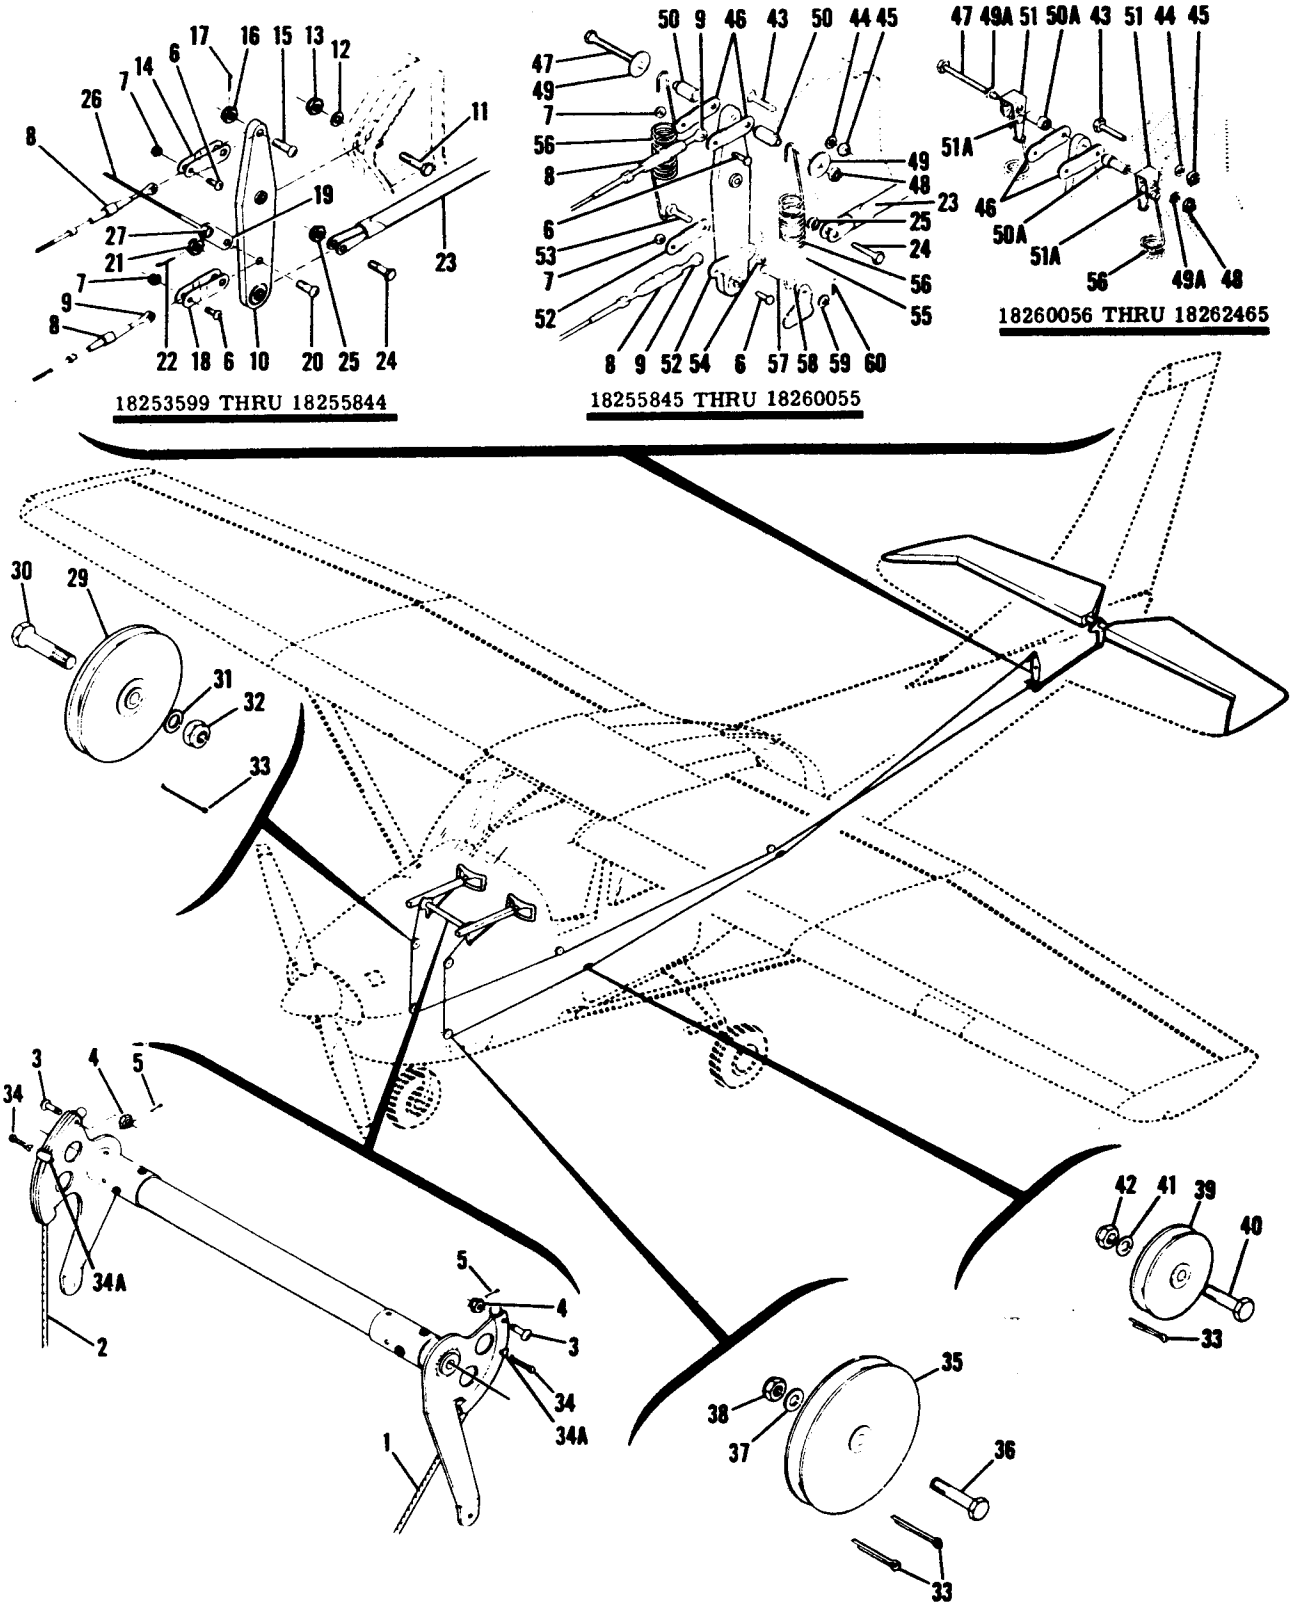


Figure 77. Elevator Control System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
77 -		ELEVATOR CONTROL SYSTEM	NP	
- 1	0510105-90	CABLE ASSEMBLY-LH	1	
	0510105-190	CABLE ASSEMBLY-LH STAINLESS STEEL	1	
- 2	0510105-89	CABLE ASSEMBLY-RH	1	
	0510105-189	CABLE ASSEMBLY-RH STAINLESS STEEL	1	
		ATTACHING PARTS		
- 3	AN21-10	BOLT	1	
- 4	AN320-1	NUT	1	
	AN960D6	WASHER	1	D
- 5	MS24665-24	PIN-COTTER	1	
- 6	AN23-10A	BOLT	1	
- 7	MS21044N3	NUT	1	
- 8	AN155B32S	BARREL	1	
- 9	AN165-22RS	EYE	1	
		---*---		
-10	0760675-1	BELLCRANK ASSEMBLY-ELEVATOR REAR	1	A
		ATTACHING PARTS		
-11	AN4-12A	BOLT	1	A
-12	AN960-416	WASHER	1	A
-13	NAS679A4	NUT	1	A
		---*---		
-14	0761202-2	LINK	2	
		ATTACHING PARTS		
-15	AN24-13	BOLT	1	
-16	AN320-4	NUT	1	
-17	MS24665-134	PIN-COTTER	1	
		---*---		
-18	0761202-2	LINK	2	
-19	1260012-2	LINK	1	
		ATTACHING PARTS		
-20	AN24-14	BOLT	1	
-21	AN320-4	NUT	1	
-22	MS24665-134	PIN-COTTER	1	
		---*---		
-23	0510111-11	LINK-PUSH PULL	1	
		ATTACHING PARTS		
-24	AN4-10A	BOLT	2	
-25	NAS679A4	NUT	2	
		---*---		
-26	0510105-88	CABLE ASSEMBLY-ELEVATOR DOWN SPRING	1	A
	0510105-188	CABLE ASSEMBLY-ELEVATOR DOWN SPRING STAINLESS STEEL	1	A
		ATTACHING PARTS		
-27	AN23-10A	BOLT	1	A
	MS21044N3	NUT	1	A
-28		DELETED-NEVER USED		
		---*---		
-29	MS20220-2	PULLEY LH ONLY	1	C
	MS20220-2	PULLEY	2	D
		ATTACHING PARTS		
-30	AN5-11A	BOLT	1	
-31	AN960-516	WASHER	1	
-32	NAS679A5	NUT	1	
		---*---		
-33	MS24665-136	PIN-COTTER		
-34	MS24665-132	PIN-COTTER	2	C
-34A	0760106-1	GUARD-CABLE	1	D
-35	S378-4	PULLEY	2	
		ATTACHING PARTS		
-36	AN4-10A	BOLT	1	
-37	AN960-416L	WASHER	1	
-38	NAS679A4	NUT	1	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
77 -39	S378-3L	PULLEY	4	
		ATTACHING PARTS		
-40	AN4-10A	BOLT	1	
-41	AN960-416L	WASHER	1	
-42	NAS679A4	NUT	1	
		---*---		
	0760675-3	BELLCRANK ASSEMBLY-ELEVATOR REAR	1	E
	0760675-5	BELLCRANK ASSEMBLY-ELEVATOR REAR	1	F
		ATTACHING PARTS		
-43	AN4-12A	BOLT	1	B
-44	AN960-416	WASHER	1	B
-45	NAS679A4	NUT	1	B
		---*---		
-46	0761202-4	LINK-ELEVATOR BELLCRANK	2	
		ATTACHING PARTS		
-47	AN4-31A	BOLT	1	
-48	NAS679A4	NUT	1	
-49	AN970-4	WASHER	2	E
-49A	AN960-416	WASHER	2	F
-50	0760687-1	SPACER	2	E
-50A	0760687-2	SPACER	2	F
-51	0760130-1	LINK ASSEMBLY	2	F
		---*---		
-51A	MS20392-3C25	PIN	2	F
	MS24665-132	COTTER PIN	2	
-52	0761202-2	LINK-ELEVATOR BELLCRANK	1	
		ATTACHING PARTS		
-53	AN24-14	BOLT	1	
-54	AN320-4	NUT	1	
-55	MS24665-134	COTTER PIN	2	B
		---*---		
-56	0760685-1	SPRING-ELEVATOR BELLCRANK	1	B
		ATTACHING PARTS		
-57	MS20392-3C19	PIN	1	B
-58	NAS43HT4-16	SPACER	1	B
-59	AN960-416L	WASHER	1	B
-60	MS24665-132	COTTER PIN		
		---*---		

A---182 SERIAL 18253599 THRU 18255844
B---182 SERIAL 18255845 THRU 18262465
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18253599 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
D---182 SERIAL 18258506 THRU 18262465
A182 SERIAL A182-0097 & ON
E---182 SERIAL 18255845 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
F---182 SERIAL 18260056 THRU 18262465
A182 SERIAL A182-0117 & ON

Flight Controls (Cont)

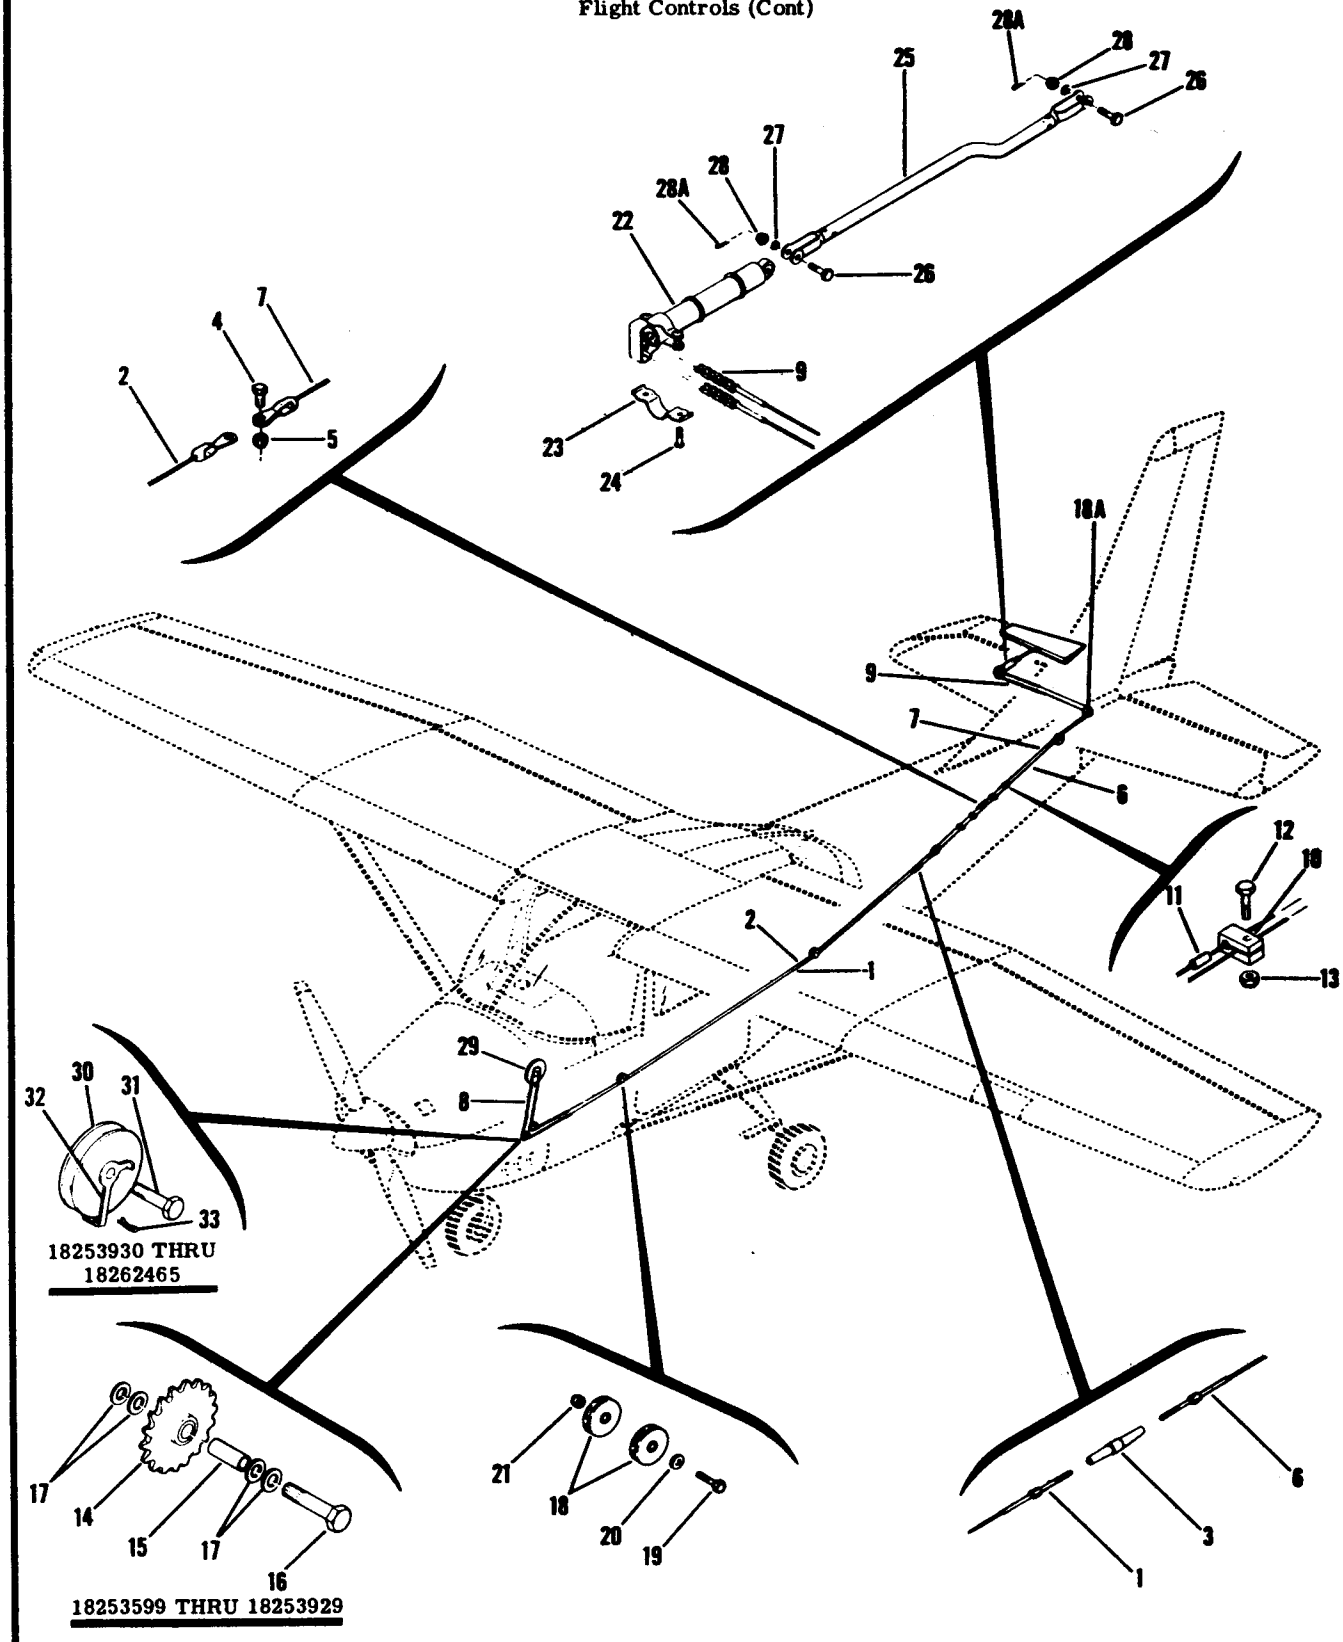


Figure 78. Elevator Trim Control System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
78 -		ELEVATOR TRIM CONTROL SYSTEM	NP	
- 1	0510105-86	CABLE ASSEMBLY-FWD LH	1	A
	0510105-186	CABLE ASSEMBLY-FWD LH STAINLESS STEEL	1	A
	0510105-202	CABLE ASSEMBLY-FWD LH	1	B
	0510105-302	CABLE ASSEMBLY-FWD LH STAINLESS STEEL	1	B
- 2	0510105-97	CABLE ASSEMBLY-FWD RH	1	A
	0510105-197	CABLE ASSEMBLY-FWD RH STAINLESS STEEL	1	A
	0510105-201	CABLE ASSEMBLY-FWD RH	1	B
	0510105-301	CABLE ASSEMBLY-FWD RH STAINLESS STEEL	1	B
		ATTACHING PARTS		
- 3	AN155B8S	BARREL LH ONLY	1	
- 4	AN3-3A	BOLT RH ONLY	1	
- 5	MS21044N3	NUT RH ONLY	1	
		---*---		
- 6	0510105-87	CABLE ASSEMBLY-AFT LH	1	
	0510105-187	CABLE ASSEMBLY-AFT LH STAINLESS STEEL	1	
- 7	0510105-98	CABLE ASSEMBLY-AFT RH	1	
	0510105-198	CABLE ASSEMBLY-AFT RH STAINLESS STEEL	1	
- 8	0432138-11	CHAIN-FORWARD	1	A
	0432138-6	CHAIN-FORWARD	1	B
- 9	0432138-10	CHAIN-AFT	1	A
	0432138-7	CHAIN-AFT	1	B
-10	0411523	BLOCK-ELEVATOR TAB STOP	4	
		ATTACHING PARTS		
-11	0411524	BUSHING	1	
-12	AN3-6A	BOLT	1	
-13	MS21044N3	NUT	1	
		---*---		
-14	0761210-4	SPROCKET	2	A
		ATTACHING PARTS		
-15	0411491	BUSHING	1	A
-16	AN3-10A	BOLT	4	A
-17	AN960-416	WASHER	4	A
		---*---		
-18	S378-1	PULLEY-ELEVATOR TRIM	2	
-18A	S378-1L	PULLEY-ELEVATOR TRIM	8	
-19	AN3-10A	BOLT	5	
-20	AN960-416L	WASHER	5	
-21	MS21044N3	NUT	5	
	MS24665-136	PIN-COTTER	3	
-22	0310293-2	ACTUATOR ASSEMBLY-ELEVATOR TRIM WHEN EXHAUSTED	1	C
		USE 0310293-14		
	0310293-14	ACTUATOR ASSEMBLY-ELEVATOR TRIM WHEN EXHAUSTED	1	D
		USE 1260074-1		
	1260074-1	ACTUATOR ASSEMBLY-ELEVATOR TRIM	1	E
		ATTACHING PARTS		
-23	0432126	CLAMP	2	
-24	AN520-10R8	SCREW	4	
		---*---		
-25	0760658-1	TUBE-PUSH PULL WEU 0760133-1	1	
	0760133-1	TUBE-PUSH PULL	1	
		ATTACHING PARTS		
-26	NAS464P3-9	BOLT	2	
-27	AN960-10L	WASHER	2	
-28	AN320C3	NUT	2	
-28A	MS24665-134	COTTER PIN	2	
		---*---		
-29	SEE FIG 75	CONSOLE INSTALLATION	1	
-30	S378-2	PULLEY	2	B
		ATTACHING PARTS		
-31	AN3-10A	BOLT	1	B
-32	0760610-4	GUARD-CABLE	1	B
-33	MS24665-144	COTTER PIN	1	F
		---*---		

A---182 SERIAL 18253599 THRU 18253929
B---182 SERIAL 18253930 THRU 18262465
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18253599 THRU 18256232
D---182 SERIAL 18256233 THRU 18256783
E---182 SERIAL 18256784 THRU 18262465
A182 SERIAL A182-0001 & ON
F---182 SERIAL 18258506 THRU 18262465
A182 SERIAL A182-0097 & ON

Flight Controls (Cont)

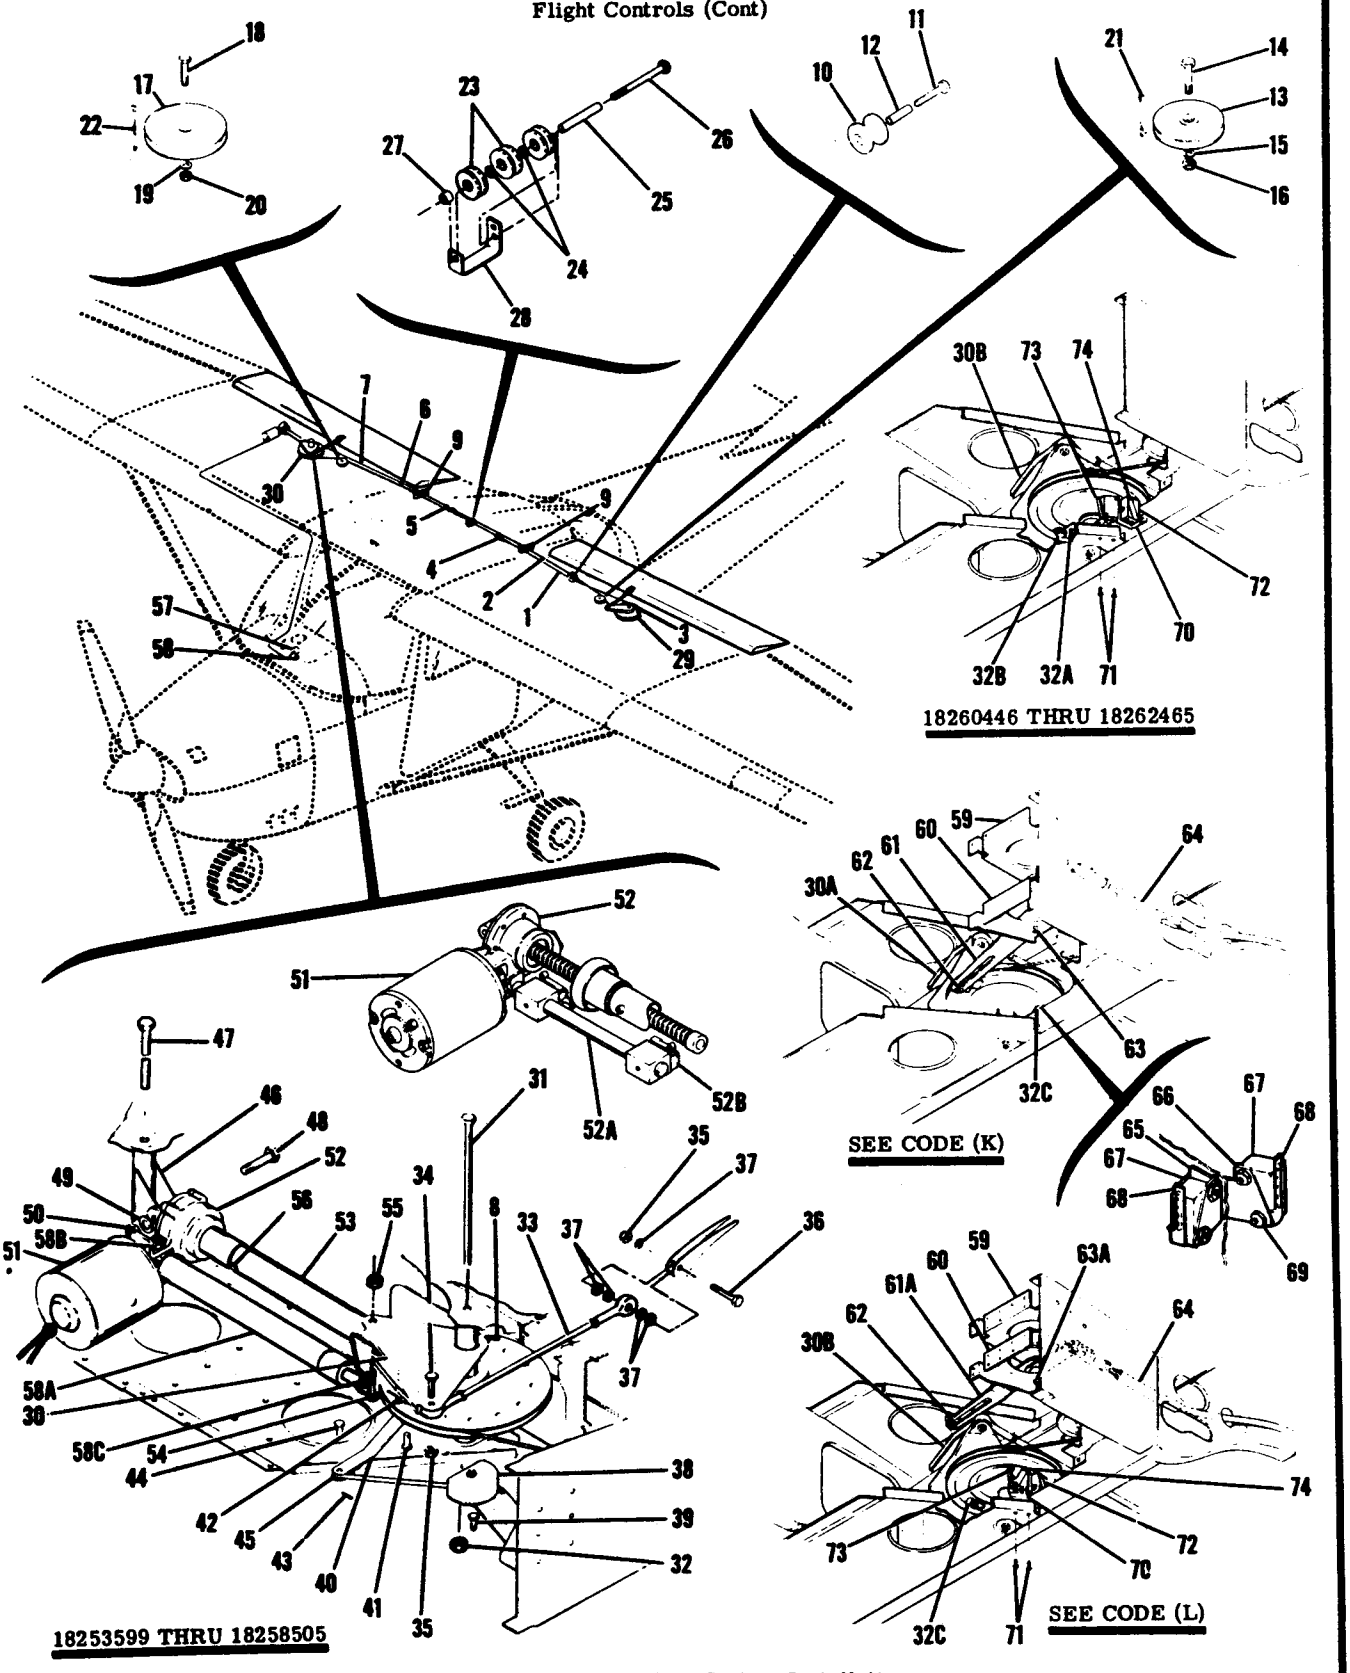


Figure 79. Electric Flap System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
79 -		FLAP SYSTEM INSTALLATION-ELECTRIC	NP	
- 1	0510105-93	CABLE-FLAP RETRACT LH	1	
	0510105-193	CABLE-FLAP RETRACT LH STAINLESS STEEL	1	
- 2	0510105-91	CABLE-FLAP DIRECT LH	1	
	0510105-191	CABLE-FLAP DIRECT LH STAINLESS STEEL	1	
		ATTACHING PARTS		
- 3	MS20392-1C11	PIN	1	
	MS24665-134	COTTER PIN	1	
- 4	AN155B16S	BARREL FLAP RETRACT ONLY	1	
- 5	AN155B32S	BARREL FLAP DIRECT ONLY	1	
		---*---		
- 6	0510105-94	CABLE-FLAP RETRACT RH	1	
	0510105-194	CABLE-FLAP RETRACT RH STAINLESS STEEL	1	
- 7	0510105-92	CABLE-FLAP DIRECT RH	1	
	0510105-192	CABLE-FLAP DIRECT RH STAINLESS STEEL	1	
		ATTACHING PARTS		
- 8	MS20392-1C11	PIN	1	
	MS24665-134	COTTER PIN	1	
		---*---		
- 9	0760616-1	RUB STRIP	2	
	0760615-1	GUARD	2	
		ATTACHING PARTS		
	AN515-8R12	SCREW	2	
	NAS679A08	NUT	2	
		---*---		
-10	S1052-1	PULLEY LH ONLY	1	
		ATTACHING PARTS		
-11	AN3-11A	BOLT	1	
-12	1260064-1	BUSHING	1	
		---*---		
-13	MS20220-2	PULLEY	1	
		ATTACHING PARTS		
-14	AN5-12A	BOLT	1	
-15	AN960-516L	WASHER	1	
-16	NAS679A5	NUT	1	
		---*---		
-17	S378-2	PULLEY	1	
		ATTACHING PARTS		
-18	AN3-6A	BOLT	1	
-19	AN960-10	WASHER	1	
-20	MS21044N3	NUT	1	
		---*---		
-21	MS24665-285	COTTER PIN	1	
-22	MS24665-283	COTTER PIN	1	
-23	S394	PULLEY	2	
		ATTACHING PARTS		
-24	AN960-416	WASHER	2	
-25	0512138	BUSHING	1	
-26	AN3-21A	BOLT	1	
-27	NAS43HT4-15	SPACER	1	
-28	0512136	GUARD	1	
		---*---		
-29	0760612-7	DRIVE PULLEY ASSEMBLY-LH	1	
-30	0760612-1	DRIVE PULLEY ASSEMBLY-RH	1	H
-30A	1262010-1	DRIVE PULLEY ASSEMBLY-RH	1	K
-30B	0762024-2	DRIVE PULLEY ASSEMBLY-RH	1	M
	0762024-14	DRIVE PULLEY ASSEMBLY-RH	1	X
	0762024-24	DRIVE PULLEY ASSEMBLY-RH	1	C
		ATTACHING PARTS		
-31	AN4-56A	BOLT	1	
	0523536	BUSHING	1	
	0522629-1	WASHER	1	
-32	NAS679A4	NUT	1	
		---*---		
	B610	BEARING TOR	2	
	1262007-1	BRACKET	1	S
	AN256-10	NUT-ANGLE PLATE	2	S
-32A	0762034-1	ARM-FLAP LIMIT SWITCH LH	1	X
	0762034-2	ARM-FLAP LIMIT SWITCH RH	1	X
		ATTACHING PARTS		
-32B	AN3-6	BOLT	2	X
	AN970-3	WASHER INSTALLED UNDER 0762034 ARM	2	X
	AN960-10	WASHER	3	X
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
79 -32C	NAS428H3-6		BOLT	2	S
	NAS428H3-5		BOLT ALTERNATE	2	S
-33	0523537		ROD ASSEMBLY	2	
			ATTACHING PARTS		
-34	AN3-6A		BOLT	1	
-35	MS21044N3		NUT	1	
-36	AN3-10A		BOLT	1	
-37	AN960-10		WASHER	5	

-38	C590501-0101	*	POSITION TRANSMITTER-FLAP	1	H
			ATTACHING PARTS		
-39	AN3-3A		BOLT	2	

-40	0510195-1		ARM ASSEMBLY-FLAP POSITION TRANSMITTER	1	H
			ATTACHING PARTS		
-41	MS20392-2C15		PIN	1	H
-42	AN960-10L		WASHER	1	H
-43	MS24665-132		COTTER PIN	2	H
-44	MS20392-2C9		PIN	1	H
-45	NAS43DD3-12		SPACER	1	H

-46	0760619-1		HINGE ASSEMBLY-FLAP MOTOR	1	
			ATTACHING PARTS		
-47	AN4-56A		BOLT	1	
	0760613-1		BUSHING	1	H
	NAS679A4		NUT	1	
	0522629		WASHER	1	
	0523536		BUSHING	1	G

	8610		BEARING TOR	2	
	C301002-0301		TRANSMISSION & MOTOR ASSEMBLY INTERNAL FILTERED	1	A
	C301002-0303		TRANSMISSION & MOTOR ASSEMBLY INTERNAL FILTERED	1	B
			ATTACHING PARTS		
-48	AN6-15A		BOLT	1	
-49	AN960-616		WASHER	1	
-50	NAS679A6		NUT	1	

-51	C301002-0103		MOTOR-FLAP ACTUATOR INTERNAL FILTERED	1	
	S1638-2		HOUSING CAP	1	
	S1635-2		PIN-HOUSING	2	
-52	C301002-0305		ACTUATOR-FLAP	1	A
	C301002-0306		ACTUATOR-FLAP	1	B
			ATTACHING PARTS		
	H14-3		NUT KNM	2	
	AN936A4		WASHER	2	

	11918		COUPLING DHDD	1	
	C301001-0211		COUPLING	1	
-52A	C301002-0307		SWITCH BAR ASSEMBLY	1	A
-52B	V3L-3-D9		SWITCH	2	A
			ATTACHING PARTS		
	AN515-4-9		SCREW	2	A
	AN936-A4		WASHER	2	A

-53	0760620-1		TUBE ASSEMBLY-FLAP	1	
			ATTACHING PARTS		
-54	AN4-15A		BOLT	1	
	0760614-1		BUSHING	1	
-55	AN310-4		NUT	1	
	MS24665-134		COTTER PIN	1	

	S500-1		BEARING-OILITE	1	
-56	AN565D832H3		SET SCREW	1	
-57	C668001-0101	*	INDICATOR-FLAP	1	Q
-58	0760632-1		SWITCH-FLAP	1	

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
79 -58A	10650	CYLINDER	1	D
		ATTACHING PARTS		
-58B	NAS221-14	SCREW	1	
	NAS43HT3-4	SPACER	1	
	AN960-10	WASHER	1	
	MS21044N3	NUT	1	
	0409007-2	BRACKET	1	
-58C	NAS221-10	SCREW	1	
	AN960-10L	WASHER	1	
	MS21044N3	NUT	1	
		---*---		
-59	1262011-2	SUPPORT-LEVER ARM UPPER	1	T
-60	1262011-1	SUPPORT-LEVER ARM LOWER	1	T
-61	1262014-1	BELLCRANK ASSEMBLY-FLAP CONTROL	1	K
-61A	0762032-1	BELLCRANK ASSEMBLY-FLAP CONTROL	1	M
	0762033-1	ARM ASSEMBLY-FLAP CONTROL	1	U
		ATTACHING PARTS		
-62	AN3-4A	BOLT	1	V
	MS21044N3	NUT	1	V
	NAS43HT3-8	SPACER	1	V
	AN970-3	WASHER	1	U
	AN960-10L	WASHER	1	U
-63	AN4-35A	BOLT	1	K
	AN960-416	WASHER	1	V
	NAS679A4	NUT	1	V
	1262008-1	WASHER	2	V
	NAS75-4-304	BUSHING	1	K
		---*---		
-63A	AN4-15A	BOLT	1	W
	NAS75-4-103	BUSHING	1	W
-64	SEE FIG 79B &79C	FLAP CONTROL DETAIL INSTALLATION	1	G
-65	1262019-2	BRACKET	1	G
-66	1262019-1	BRACKET	1	G
		ATTACHING PARTS		
	AN515-6R8	SCREW	2	
	NAS679A06	NUT	2	
	NAS620-4	WASHER	4	
		---*---		
-67	MS25253-1	SWITCH	2	G
-68	S1912-1	ACTUATOR MCS	2	G
		ATTACHING PARTS		
-69	AN515-4R12	SCREW	2	
	NAS620-4	WASHER	2	
	AN936A4	WASHER	2	
	AN340-4	NUT	2	
		---*---		
-70	0762029-3	BRACKET ASSEMBLY	1	M
	0762029-4	BRACKET ASSEMBLY	1	N
		ATTACHING PARTS		
-71	AN515-6R6	SCREW	2	L
	S1021Z6-8	SCREW	1	N
	1270808-1	SHIM	AR	P
		---*---		
-72	MS25253-1	SWITCH	2	L
-73	S1912-1	ACTUATOR MCS	2	L
		ATTACHING PARTS		
-74	AN340-4	NUT	2	L
	AN515-4R10	SCREW	2	L
	AN936A4	WASHER	2	L
	1670019-1	INSULATOR	2	D
		---*---		

NOTE. *WHEN INITIALLY ORDERING EITHER OF THESE PARTS FOR AIRPLANES PRIOR TO SERIAL 18256685 IT IS NECESSARY TO ORDER BOTH THE C590501-0101 TRANSMITTER & C668001-0101 INDICATOR.

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
79 -		A---182 SERIAL 18253599 THRU 18258505 18260699 THRU 18262465 A182 SERIAL A182-0001 THRU A182-0096 A182-0137 & ON B---182 SERIAL 18258506 THRU 18260698 A182 SERIAL A182-0097 THRU A182-0136 C---182 SERIAL 18260699 THRU 18262465 D---182 SERIAL 18253599 THRU 18260698 A182 SERIAL A182-0001 THRU A182-0136 E---DELETED NEVER USED F---DELETED NEVER USED DELETED NEVER USED G---182 SERIAL 18258506 THRU 18262465 A182 SERIAL A182-0097 & ON H---182 SERIAL 18253599 THRU 18258505 A182 SERIAL A182-0001 THRU A182-0096 J---DELETED NEVER USED K---182 SERIAL 18258506 THRU 18258605, 18258607 18258608, 18258610 THRU 18258617 18258619 THRU 18258624, 18258626 THRU 18258631, 18258633 THRU 18258638, 18258640 THRU 18258645 18258647 THRU 18258652, 18258654 THRU 18258659, 18258661 THRU 18258666, 18258668 THRU 18258673 18258675 THRJ 18258680, 18258682 THRU 18258688, 18258690 THRU 18258694, 18258696, THRU 18258701 18258703 THRU 18258708, 18258710 THRU 18258715, 18258717 THRU 18258722, 18258724, THRU 18258729, 18258731, THRU 18258736 A182 SERIAL A182-0097 THRU A182-0116 L---182 SERIAL 18258606, 18258609, 18258618 18258625, 18258632, 18258639 18258646, 18258653, 18258660 18258667, 18258674, 18258681 18258689, 18258695, 18258702 18258709, 18258716, 18258723 18258730, 18258737 THRU 18262465 A182 SERIAL A182-0117 & ON M---182 SERIAL 18258606, 18258609, 18258618 18258625, 18258632, 18258639 18258646, 18258653, 18258660 18258667, 18258674, 18258681 18258689, 18258695, 18258702 18258709, 18258716, 18258723 18258730, 18258737 THRU 18259991 N---182 SERIAL 18259992 THRU 18262465 A182 SERIAL A182-0117 & ON O---182 SERIAL 18259472 THRU 18262465 A182 SERIAL A182-0117 & ON P---182 SERIAL 18259306 THRU 18262465 A182 SERIAL A182-0117 & ON Q---182 SERIAL 18253599 THRU 18258505 R---DELETED NEVER USED S---182 SERIAL 18258506 THRU 18259991 A182 SERIAL A182-0097 THRU A182-0116 T---182 SERIAL 18258506 THRU 18260445 A182 SERIAL A182-0097 & ON U---182 SERIAL 18259992 THRU 18260445 A182 SERIAL A182-0117 & ON V---182 SERIAL 18253599 THRU 18260445 A182 SERIAL A182-0001 & ON W---182 SERIAL 18258606, 18258609, 18258618 18258625, 18258632, 18258639 18258646, 18258653, 18258660 18258667, 18258674, 18258681 18258689, 18258695, 18258702 18258709, 18258716, 18258723 18258730, 18258737 THRU 18260445 A182 SERIAL A182-0117 & ON X---182 SERIAL 18259992 THRU 18260698 A182 SERIAL A182-0117 THRU A182-0136		

Flight Controls(Cont)

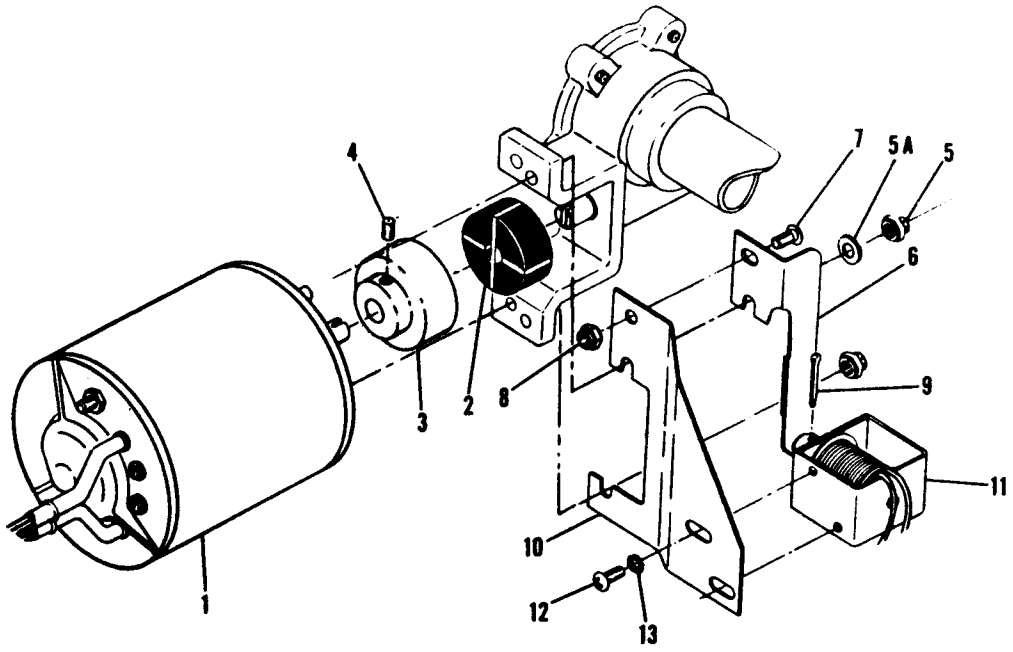

182 SERIAL 18255845 THRU 18257066


Figure 79A. Flap Actuator Transmission and Motor Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
79A-	0760657-5	FLAP ACTUATOR TRANSMISSION & MOTOR ASSEMBLY	1	A
- 1	M072218A	MOTOR-FLAP ACTUATOR AM	1	
	1016584	TRANSMISSION ASSEMBLY-FLAP ACTUATOR DHDD	1	
- 2	11918	COUPLING	1	
- 3	0760684-1	DRUM-BRAKE	1	
		ATTACHING PARTS		
- 4	AN565D6H3	SET SCREW	1	
		---*---		
	0760683-6	BRAKE ASSEMBLY	1	
		ATTACHING PARTS		
- 5	H14-3	NUT KNM	2	
- 5A	AN936810	WASHER	2	
		---*---		
- 6	0760683-7	SPRING ASSEMBLY	1	
		ATTACHING PARTS		
- 7	AN515-6R6	SCREW	1	
- 8	NAS679A06	NUT	1	
- 9	MS24665-132	COTTER PIN	1	
		---*---		
-10	0760683-9	BRACKET	1	
-11	28INT-120C	SOLENOID GN	1	
		ATTACHING PARTS		
-12	AN515-6R4	SCREW	2	
-13	AN93686	WASHER	2	
		---*---		
		A---182 SERIAL 18255845 THRU 18257066 18257069, 18257072 A182 SERIAL A182-0001 THRU A182-0006		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
79B-		FLAP CONTROLS DETAIL INSTALLATION	NP	A
- 1	1262026-1	LEVER ASSEMBLY-FLAP WHEN EXHAUSTED USE 1512280-13	1	B
	1512280-13	LEVER ASSEMBLY-FLAP	1	C
- 2	1512280-11	LEVER-FLAP	1	
- 3	1452530-6	CAM	1	
- 4	1560033-12	ARM ASSEMBLY FLAP	1	
- 5	1552531-4	ARM	1	
- 6	1562033-4	INDICATOR ASSEMBLY	1	
- 7	NAS75-3-016	BUSHING	1	
- 8	1512280-24	BUSHING	1	
- 9	1452533-4	WASHER	2	
-10	S1450-5-14-032	WASHER	1	
-11	1512280-25	WASHER	2	
-12	1452533-2	WASHER	1	
-13	MS25253-1	SWITCH	2	
		ATTACHING PARTS		
-14	AN515-4R12	SCREW	2	
-15	NAS620-4	WASHER	2	
-16	AN340-4	NUT	2	
		---*---		

CONTINUED ON NEXT PAGE

Flight Controls (Cont)

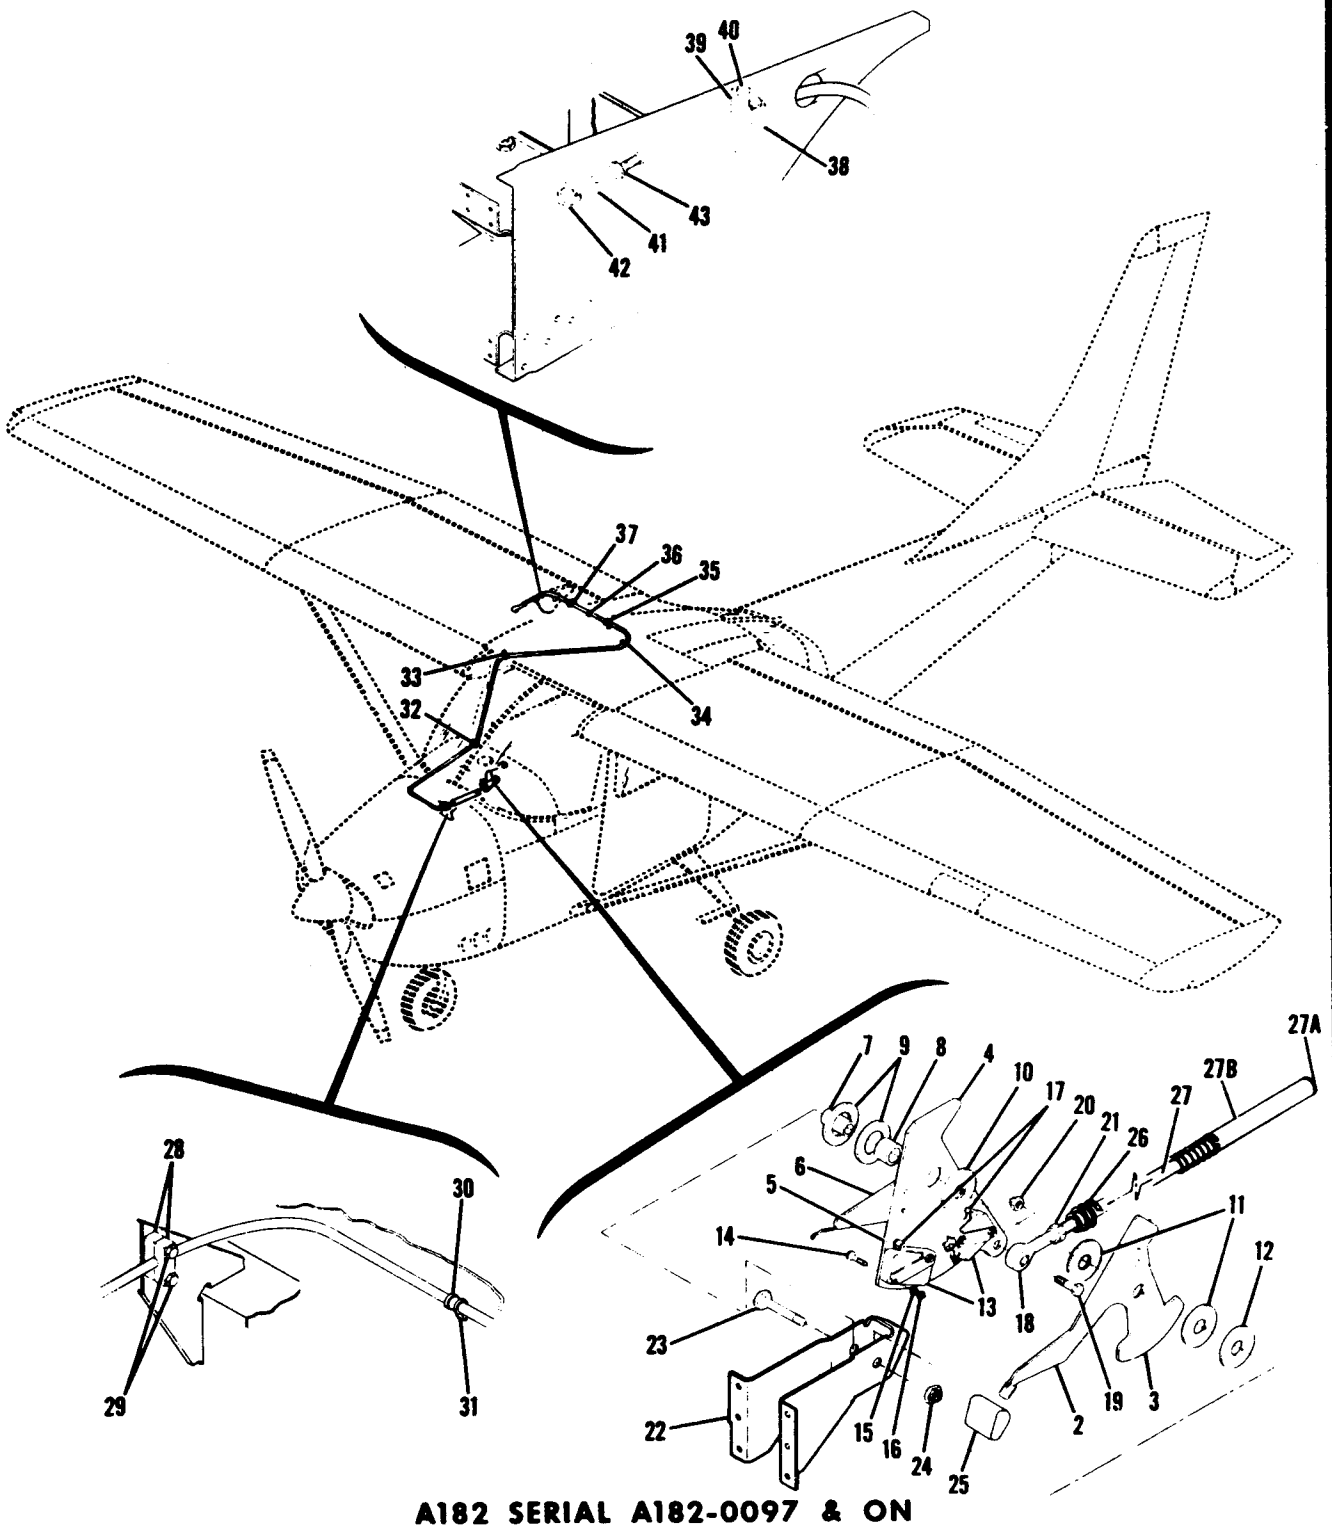


A182 SERIAL A182-0097 & ON
182 SERIAL 18258506 THRU 18260445

Figure 79B. Flap Control Detail Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
798-17	S1913-1	ACTUATOR	2	
-18	S1106-3	ROD END	1	
		ATTACHING PARTS		
-19	AN3-6A	BOLT	1	
-20	MS21044N3	NUT	1	
-21	AN316-4R	NUT	1	
		---*---		
-22	1262001-1	BRACKET	1	
-23	AN3-10A	BOLT	1	
-24	MS21044N3	NUT	1	
-25	S1771-2	KNOB ASSEMBLY	1	
-26	1452537-1	SPRING	1	
-27	S1244-20	CONTROL-PUSH PULL WEU S2095-1	1	E
	S2095-1	CONTROL-PUSH PULL	1	F
-27A	AN960C616	WASHER	2	D
-27B	NAS43DD6-132	SPACER	1	D
-28	0713307-6	CLAMP	2	
		ATTACHING PARTS		
-29	AN173-12A	BOLT	2	
	NAS679C3M	NUT	2	
		---*---		
-30	MS21919DG6	CLAMP	1	
		ATTACHING PARTS		
-31	S1021Z8-6	SCREW	1	
		---*---		
-32	NAS557-8A	GROMMET	1	
-33	AN742D6	CLAMP	1	
		ATTACHING PARTS		
	AN515-8R7	SCREW	1	
	NAS679A08	NUT	1	
		---*---		
-34	AN742D6	CLAMP	1	
		ATTACHING PARTS		
	AN515-8R7	SCREW	1	
		---*---		
-35	MS21919DG6	CLAMP	1	
		ATTACHING PARTS		
	S1021Z10-6	SCREW	1	
	NAS446-1-3	NUT	1	
		---*---		
-36	MS35489-38	GROMMET	1	
-37	AN742D5	CLAMP	1	
		ATTACHING PARTS		
	S1021Z10-6	SCREW	1	
	NAS446-1-3	NUT	1	
		---*---		
-38	0713307-1	MOUNT	1	
-39	0713307-4	CLAMP	1	
		ATTACHING PARTS		
-40	AN3-16A	BOLT	2	
	AN960-10	WASHER	2	
	MS21044N3	NUT	2	
		---*---		
-41	AN486-4	CLEVIS	1	
		ATTACHING PARTS		
-42	MS20392-2C11	PIN	1	
	AN960-10L	WASHER	2	
	MS24665-132	PIN-COTTER	1	
-43	AN316-4R	NUT	1	
		---*---		

A---182 SERIAL 18258506 THRU 18260445
A182 SERIAL A182-0097 & ON
B---182 SERIAL 18258506 THRU 18260020
A182 SERIAL A182-0097 THRU A182-0116
C---182 SERIAL 18260021 THRU 18260445
A182 SERIAL A182-0117 & ON
D---182 SERIAL 18259397 THRU 18260445
A182 SERIAL A182-0097 & ON
E---182 SERIAL 18258506 THRU 18260438
A182 SERIAL A182-0097 & ON
F---182 SERIAL 18260439 THRU 18260445

Flight Controls (Cont)

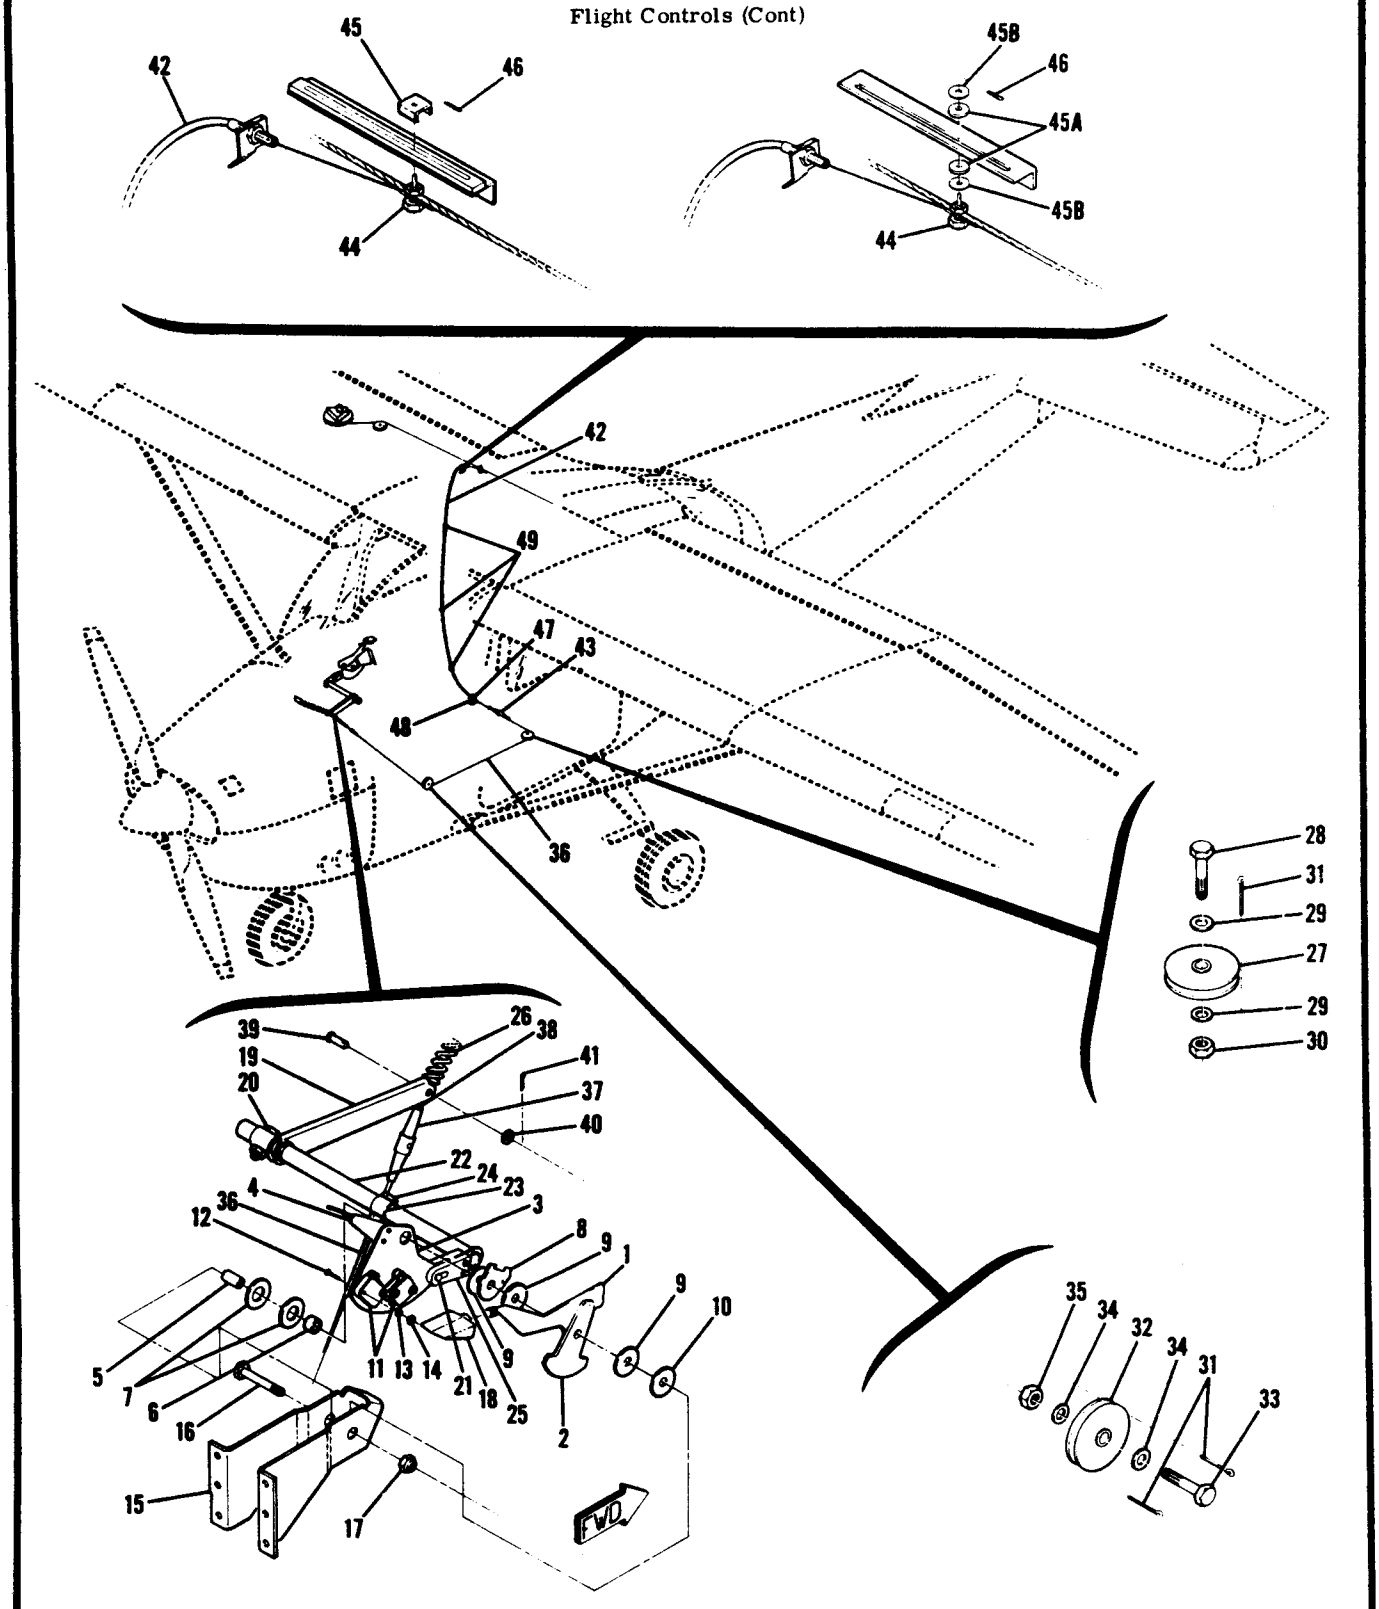

182 SERIAL 18260446 THRU 18262465

Figure 79C. Flap Control Detail Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
79C-		FLAP CONTROLS DETAIL INSTALLATION	NP	A
- 1	1512280-13	LEVER ASSEMBLY-FLAP	1	
	1512280-11	LEVER-FLAP	1	
- 2	1452530-6	CAM	1	
- 3	1562033-10	ARM ASSEMBLY-FLAP WEU 1562033-13	1	B
	1562033-13	ARM ASSEMBLY-FLAP	1	C
	1552531-6	ARM WEU 0762050-1	1	B
	0762050-1	ARM	1	C
- 4	1562033-4	INDICATOR ASSEMBLY	1	
- 5	NAS75-3-016	BUSHING	1	
- 6	1512280-24	BUSHING	1	
- 7	1452533-4	WASHER	2	
- 8	0762049-1	BRACKET	1	
- 9	1512280-25	WASHER	3	
-10	1452533-2	WASHER	1	
-11	S1906-1	SWITCH	2	
		ATTACHING PARTS		
-12	AN515-4R12	SCREW	2	
-13	NAS620-4	WASHER	2	
-14	AN340-4	NUT	2	
		---*---		
-15	1262001-1	BRACKET	1	
-16	AN3-11A	BOLT	1	
-17	MS21044N3	NUT	1	
-18	S1771-3	KNOB	1	
-19	0762039-1	ARM ASSEMBLY	1	
		ATTACHING PARTS		
-20	AN3-5A	BOLT	1	
	AN960-10L	WASHER	2	
	MS20364-1032C	NUT	1	
		---*---		
-21	MS20392-2C19	PIN	1	
	AN960-10L	WASHER	2	
	MS24665-132	PIN-COTTER	1	
-22	0762038-1	TUBE ASSEMBLY-TORQUE	1	
		ATTACHING PARTS		
-23	0762041-1	COLLAR	1	
-24	AN3-5A	BOLT	1	
	AN960-10L	WASHER	2	
	MS20364-1032C	NUT	1	
		---*---		
-25	0762038-2	BELLCRANK	1	
-26	0762040-1	SPRING	1	
-27	S378-1	PULLEY	1	
		ATTACHING PARTS		
-28	AN3-7A	BOLT	1	
-29	AN960-10	WASHER	2	
-30	MS21044N3	NUT	1	
		---*---		
-31	MS24665-136	PIN-COTTER	3	
-32	S378-1	PULLEY	1	
		ATTACHING PARTS		
-33	AN3-10A	BOLT	1	
-34	AN960-10L	WASHER	1	
-35	MS21044N3	NUT	1	
		---*---		
-36	0510105-231	CABLE ASSEMBLY	1	
		ATTACHING PARTS		
-37	AN155885	BARREL	1	
-38	AN161-8LS	FORK	1	
-39	MS20392-2C11	PIN	1	
-40	AN960-10L	WASHER	1	
-41	MS24665-132	PIN-COTTER	1	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
32C-42	S2083-1	CONTROL ASSEMBLY ATTACHING PARTS	1	
-43	AN3-4A	BOLT	1	
	AN960-10L	WASHER	1	
	MS21044N3	NUT	1	
-44	0762048-1	UNION	1	
-45	0762051-1	WASHER	1	D
-45A	0762052-1	WASHER	2	E
-45B	S1450-1-10-032	WASHER	2	E
-46	MS24665 132	PIN-COTTER	1	
-47	0713307-2	CLAMP	2	
-48	AN3-13A	BOLT	2	
	AN960-10L	WASHER	2	
-49	S1693-1	STRAP-STA	3	
		---*---		
		A---182 SERIAL 18260446 THRU 18262465 B---182 SERIAL 18260442 THRU 18260582 C---182 SERIAL 18260883 THRU 18262465 D---182 SERIAL 18260446 THRU 18261536 A182 SERIAL A182-0001 THRU A182-0146 E---182 SERIAL 18261537 THRU 18262465 A182 SERIAL A182-0147 & ON		

Flight Controls (Cont)

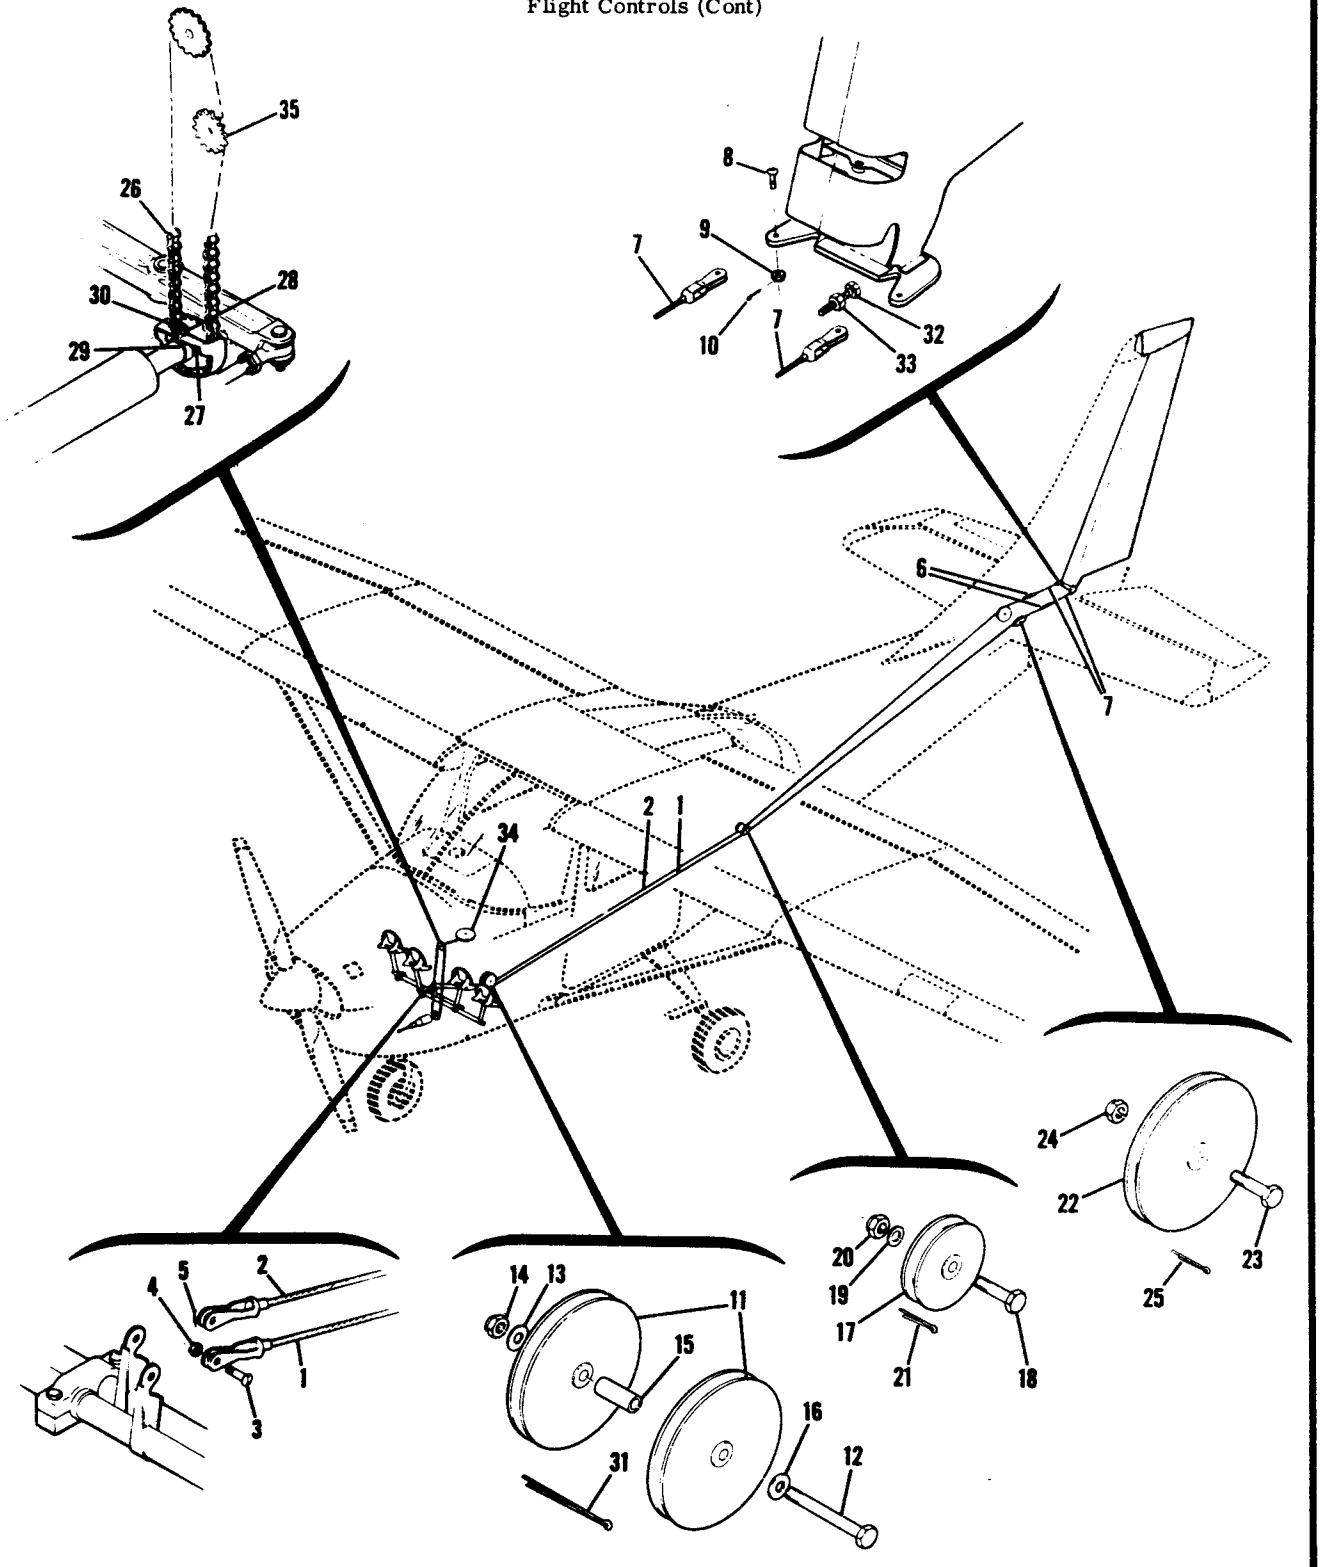


Figure 80. Rudder Control System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
80 -		RUDDER CONTROL SYSTEM INSTALLATION	NP	
- 1	0510105-77	CABLE ASSEMBLY-FWD LH	1	
	0510105-177	CABLE ASSEMBLY-FWD LH STAINLESS STEEL	1	
- 2	0510105-78	CABLE ASSEMBLY-FWD RH	1	
	0510105-178	CABLE ASSEMBLY-FWD RH STAINLESS STEEL	1	
		ATTACHING PARTS		
- 3	AN23-10A	BOLT	1	
- 4	AN310-3	NUT	1	
- 5	MS24665-134	PIN-COTTER	1	
- 6	AN155832S	BARREL	1	
		---*---		
- 7	1260105-9	CABLE ASSEMBLY-RUDDER AFT	2	
	1260105-109	CABLE ASSEMBLY-RUDDER AFT STAINLESS STEEL	2	
		ATTACHING PARTS		
- 8	AN23-10	BOLT	1	
- 9	AN310-3	NUT	1	
-10	MS24665-134	PIN-COTTER	1	
		---*---		
-11	S378-4	PULLEY	2	
		ATTACHING PARTS		
-12	AN4-22A	BOLT	1	
-13	AN960-416L	WASHER	1	
-14	NAS679A4	NUT	1	
-15	NAS43HT4-55	SPACER	1	
-16	AN960-416	WASHER	1	
		---*---		
-17	S378-3L	PULLEY	2	
		ATTACHING PARTS		
-18	AN4-10A	BOLT	1	
-19	AN960-416L	WASHER	1	
-20	NAS679A4	NUT	1	
		---*---		
-21	MS24665-136	PIN-COTTER	2	
-22	S378-4	PULLEY	2	
		ATTACHING PARTS		
-23	AN4-10A	BOLT	1	
-24	NAS679A4	NUT	1	
		---*---		
-25	MS24665-134	PIN-COTTER	1	
-26	0760667-1	CHAIN ASSEMBLY	1	B
	0760667-2	CHAIN ASSEMBLY	1	C
-27	0760671-1	GUARD	1	
		ATTACHING PARTS		
-28	AN3-3A	BOLT	1	
-29	AN735-9	CLAMP	1	
-30	MS21044N3	NUT	1	
	0760128-1	STOP	1	A
		---*---		
-31	MS24665-143	PIN-COTTER	1	
-32	NAS428H3-6	BOLT-RUDDER STOP	2	
-33	AN315-3R	NUT-RUDDER STOP	2	
-34	SEE FIG 75	CONSOLE INSTALLATION	NP	
-35	SEE FIG 75	SPROCKET-IDLER	1	

A---182 SERIAL 18259390 THRU 18262465
A182 SERIAL A182-0117 & ON
B---182 SERIAL 18259390 THRU 18261276
A182 SERIAL A182-0117 THRU A182-0136
C---182 SERIAL 18261277 THRU 18262465
A182 SERIAL A182-0137 & ON

Pitot System

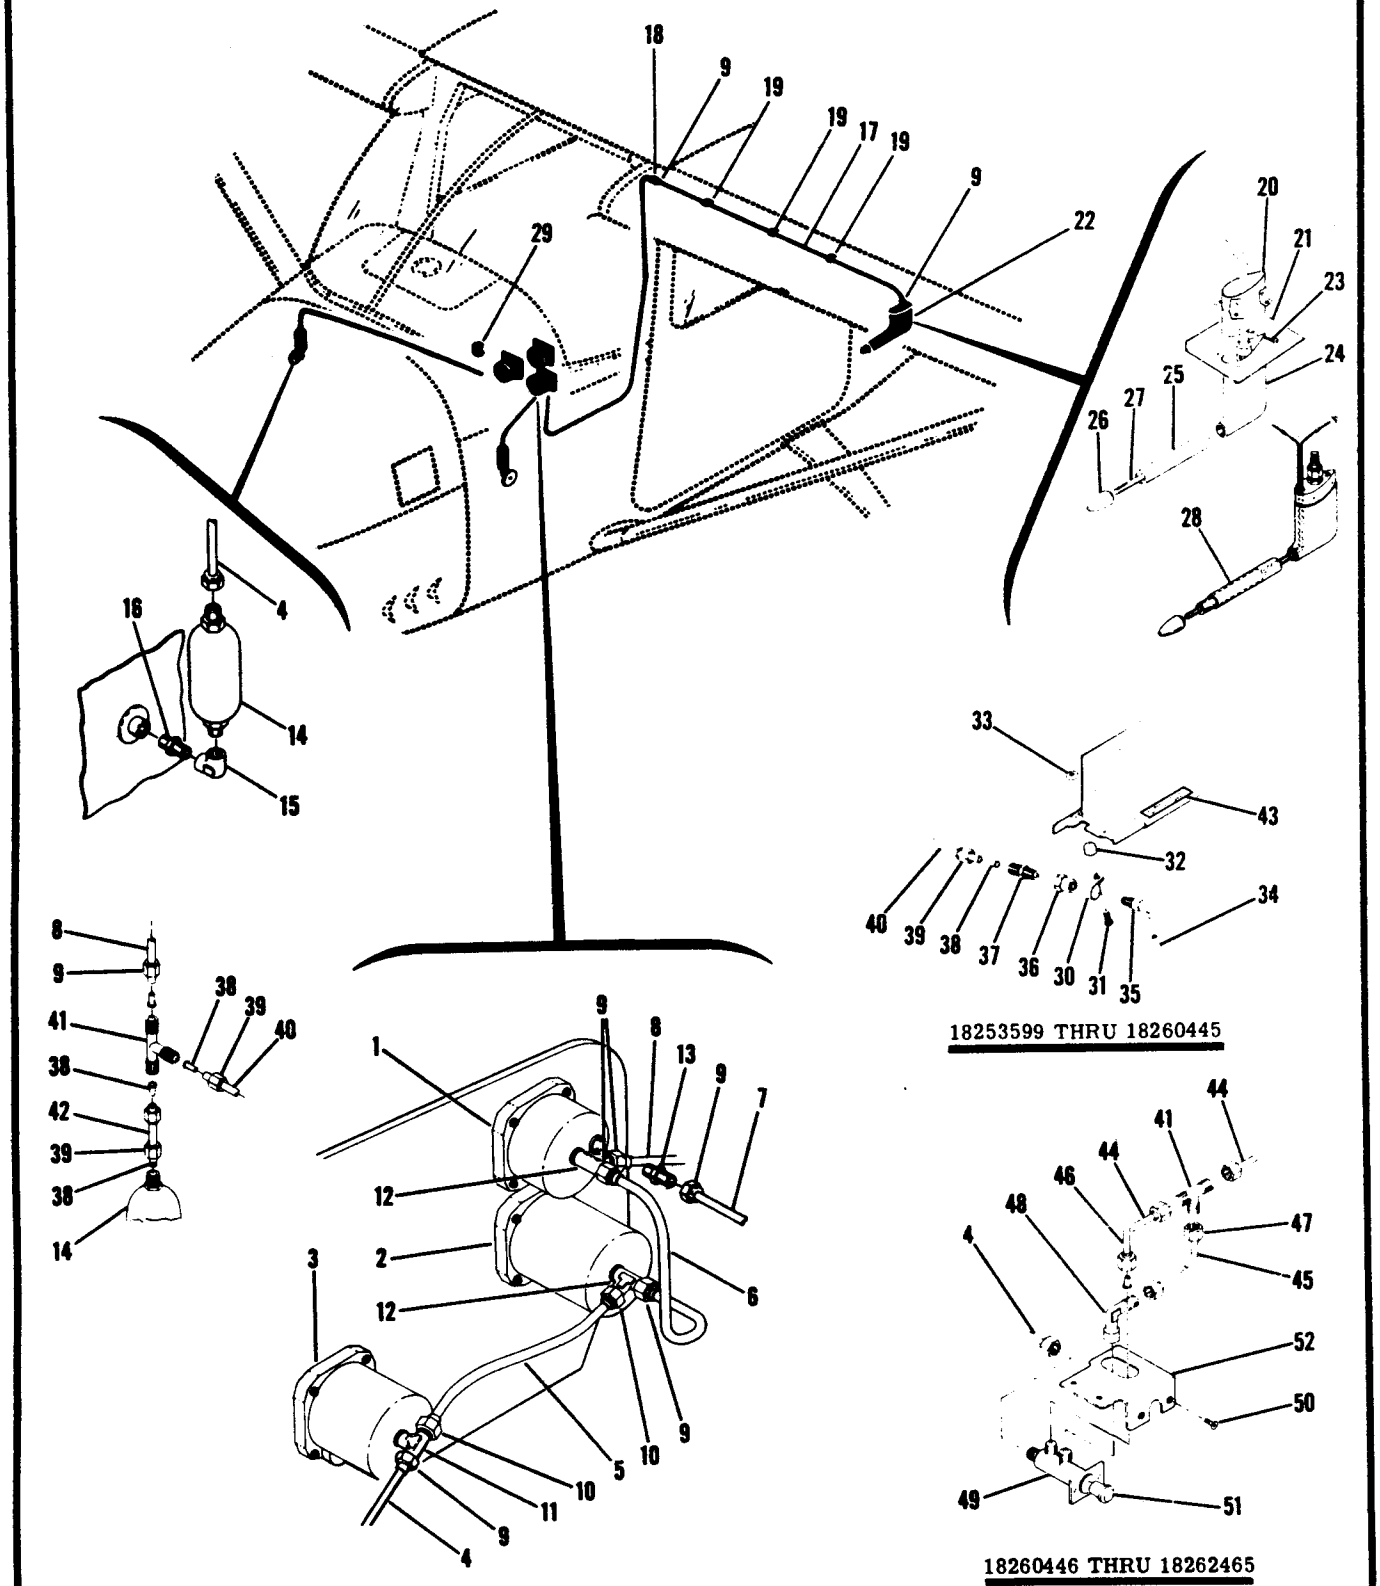


Figure 81. Pitot System Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
81 -			SYSTEM INSTALLATION-PITOT	NP	
- 1			INDICATOR-AIRSPEED SEE INST PANEL	1	
			ATTACHING PARTS		
	AN5078632R12		SCREW	4	
	AN960-10L		WASHER	4	
	AN34086		NUT	4	
			---*---		
- 2			ALTIMETER SEE INST PANEL	1	
			ATTACHING PARTS		
	AN5078632R12		SCREW	4	
	AN960-10L		WASHER	4	
	AN34086		NUT	4	
			---*---		
- 3			INDICATOR-VERTICAL SPEED SEE INST PANEL	1	
			ATTACHING PARTS		
	AN5078632R12		SCREW	4	
	AN960-10L		WASHER	4	
	AN34086		NUT	4	
			---*---		
- 4	S1071-1		TUBE-POLYETHLENE 51 IN LG BULK ITEM REF S-1071-1-51	1	
- 5	S1071-1	*	TUBE-POLYETHLENE 6 IN LG BULK ITEM REF S-1071-1-6	1	C
	S1071-1	*	TUBE-POLYETHLENE 7.50 IN LG BULK ITEM REF S1071-1-7.50-	1	L
- 5A	S1071-1	*	TUBE-POLYETHLENE 2.50 IN LG BKI REF S1071-1-2.50-	1	K
	S1071-1	**	TUBE-POLYETHENE 62.0 IN LG BKI REF S1071-1-62.00-	1	K
- 6	S1071-1		TUBE-POLYETHLENE 7.5 IN LG BULK ITEM REF S-1071-1-7.5	1	J
- 6A			TUBE POLYETHLENE 8.00 IN LG BKI REF S1071-1-8.00-	1	K
- 6B			TUBE POLYETHLENE 58.00 IN LG BKI REF S1071-1-58.00	1	K
- 7	S1071-1		TUBE-POLYETHLENE 51 IN LG BULK ITEM REF S-1071-1-51	1	C
	S1071-1		TUBE-POLYETHLENE 48 IN LG BULK ITEM REF S1071-1-48.0	1	D
- 8	S1071-1		TUBE-POLYETHLENE 16 IN LG BULK ITEM REF S-1071-1-16	1	
- 9	S1130-1		NUT TUBE END FITTINGS	10	
	S1131-1		INSERT TUBE END FITTINGS	10	
-10	S1130-1		NUT TUBE END FITTING	2	
	S1131-1		INSERT TUBE END FITTINGS	2	
-11	S1138-1		TEE	1	
-12	S1139-1		TEE	2	
-13	S1133-1		CONNECTOR	1	
-14	S1258-1		SUMP-STATIC SOURCE	2	
			ATTACHING PARTS		
-15	AN916-1D		ELBOW	1	
-16	AN911-1D		NIPPLE	1	
			---*---		
-17	S1071-1		TUBE-POLYETHLENE 63.7 IN LG BULK ITEM REF S-1071-1- 63.7	1	
			ATTACHING PARTS		
-18	S1132-1		UNION	1	
-19	AN742D4		CLAMP	3	
	NAS395-16-3		NUT	3	
	S1021Z8-8		SCREW	3	
			---*---		
-20	0721115-1		CONNECTOR ASSEMBLY-PITOT TUBE	1	
-21	0721114-1		DOUBLER	1	
-22	0721105-10		TUBE ASSEMBLY-L SHAPED PITOT	1	A
	0721105-14		TUBE ASSEMBLY-PITOT	1	B
	0721105-15		TUBE ASSEMBLY-PITOT HEATED	1	B
			ATTACHING PARTS		
-23	AN507-640R4		SCREW	4	
			---*---		
-24	0721105-7		BODY-PITOT TUBE	1	A
	0721105-13		BODY-PITOT TUBE	1	B
	S1133-2		CONNECTOR-NYLON	1	
-25	0721105-3		TUBE-PITOT	1	
-26	0721105-4		NOSE FITTING-PITOT TUBE	1	
-27	0721105-8		STEM-PITOT TUBE	1	
-28	0721105-5		HEATER ASSEMBLY-PITOT	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
81 -29	S1158-2-1	SWITCH-PITOT HEATER	1	G
	S1845-1-1	SWITCH-PITOT HEATER	1	H
		STATIC SOURCE INSTALLATION-ALTERNATE	NP	
-30	AN742D7	CLAMP	1	E
		ATTACHING PARTS		
-31	AN520-10R16	SCREW	1	E
-32	NAS43DD3-24	SPACER	1	E
-33	MS21044N3	NUT	1	E
		---*---		
-34	S430-1	KNOB	1	E
-35	0511199-20	VALVE	1	E
-36	AN910-1D	COUPLING	1	E
-37	S1133-1	CONNECTOR	1	E
-38	S1131-1	INSERT	4	E
-39	S1130-1	NUT	4	E
-40	S1071-1	TUBE-POLYETHYLENE # IN LG BKI REF S1071-1-#	1	E
-41	S1137-1	TEE	1	
-42	S1071-1	TUBE-POLYETHYLENE 2.0 IN LG BULK ITEM REF S1071-1-2.0	1	E
-43	SEE FIG 2	PLACARD	1	
-44	S1071-1	TUBE-POLYETHYLENE # IN LG BKI REF S1071-1-#	2	F
-45	S1071-1	TUBE-POLYETHYLENE # IN LG BKI REF S1071-1-#	1	F
-46	S1071-1	TUBE-POLYETHYLENE 6 IN LG BKI REF S1071-1-6	1	F
-47	S1130-1	NUT	6	F
	S1131-1	INSERT	6	F
-48	S2071-1	ELBOW	1	F
-49	2013142-1	VALVE	1	F
		ATTACHING PARTS		
-50	AN507-832R4	SCREW	2	F
		---*---		
-51	S1981-5	KNOB ASSEMBLY	1	F
-52	0701028-2	BRACKET	1	F
		ATTACHING PARTS		
	AN515-8R6	SCREW	2	F
	NAS679A08	NUT	2	F
		---*---		
		DUAL ALTIMETER INSTALLATION	NP	M
-53		ALTIMETER SEE INSTRUMENT PANEL	1	
-54	S1071-1	TUBE POLYETHLENE # IN LG BKI S1071-1-#	1	
-55	S1071-1	TUBE POLYETHLENE # IN LG BKI S1071-1-#	1	
-56	S1138-1	TEE	1	


NOTE. *USED ONLY ON THOSE AIRCRAFT WITH VERTICAL SPEED INDICATOR INSTALLED.

NOTE. #TUBE LENGTHS TO BE ADDED LATER

NOTE. **USED ON AIRCRAFT THAT DO NOT HAVE VERTICAL SPEED INDICATOR INSTALLED.

A---182 SERIAL 18253599 THRU 18255058
B---182 SERIAL 18255059 THRU 18262465
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18253599 THRU 18255845
D---182 SERIAL 18255845 THRU 18262465
A182 SERIAL A182-0001 & ON
E---182 SERIAL 18253599 THRU 18260445
A182 SERIAL A182-0001 & ON
F---182 SERIAL 18260446 THRU 18262465
G---182 SERIAL 18253599 THRU 18259305
A182 SERIAL A182-0001 THRU A182-0116
H---182 SERIAL 18259306 THRU 18262465
A182 SERIAL A182-0117 & ON
J---182 SERIAL 18253599 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0115
K---182 SERIAL 18258506 THRU 18262465
A182 SERIAL A182-0116 & ON
L---182 SERIAL 18255845 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0115
M---182 SERIAL 18261747 THRU 18261971 &
18261973 THRU 18262465

Fuel System

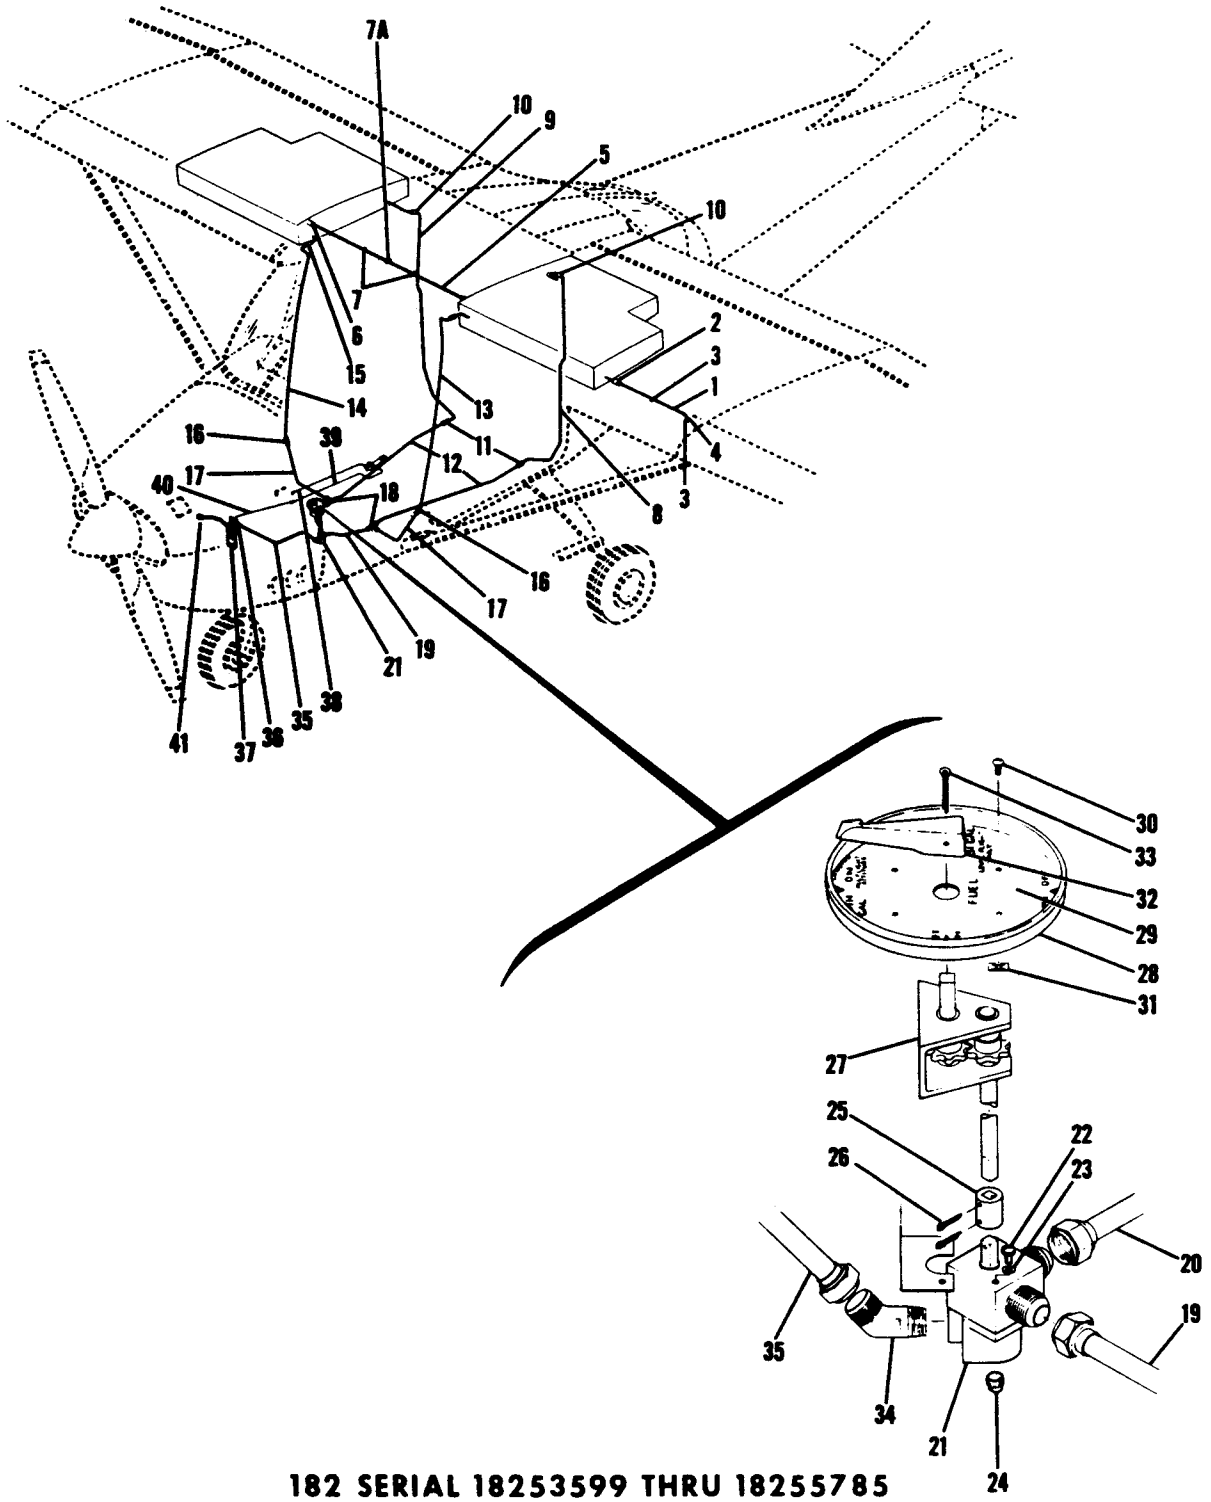

182 SERIAL 18253599 THRU 18255785

Figure 82. Fuel System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
82 -		FUEL SYSTEM INSTALLATION	NP	A
- 1	0716127-1	LINE-FUEL TANK VENT	1	
	1200106-51	LINE-FUEL TANK VENT EXTENDED RANGE ONLY	1	
		ATTACHING PARTS		
- 2	S51-8-8	HOSE	1	
	NAS397-14	CLAMP	1	
	AN737RM30	CLAMP	1	
- 3	S1486DG8U	CLAMP	2	
	S1021Z8-8	SCREW	2	
- 4	MS35489-14	GROMMET	1	
		---*---		
- 5	0700099-35	LINE-FUEL TANK VENT CARRY THRU	1	
	0700099-41	LINE-FUEL TANK VENT EXTENDED RANGE TANK	2	
		ATTACHING PARTS		
- 6	S1891-10	CLAMP BC	2	
- 7	NAS437-2C	CLAMP	2	
	AN815-6D	UNION EXTENDED RANGE TANK ONLY	1	
		---*---		
- 8	0700099-20	LINE ASSEMBLY-FUEL TANK TO UNION AFT LH	1	
- 9	0700099-19	LINE ASSEMBLY-FUEL TANK TO UNION AFT RH	1	
		ATTACHING PARTS		
-10	S1431-8-	HOSE-2.50 IN LG BULK ITEM WHEN EXHAUSTED USE S1495-8	1	
	S1495-8	HOSE-2.50 IN LG BULK ITEM REF S1495-8-2.50	1	
	S1891-10	CLAMP BC	2	
	MS21919DG8	CLAMP	2	
	S1021Z8-8	SCREW	2	
		---*---		
-11	AN815-8D	UNION	2	
	MS35489-49	GROMMET	4	
-12	0700099-17	LINE ASSEMBLY-UNION TO TEE	2	
		ATTACHING PARTS		
	MS21919DG8	CLAMP	1	
	S1486DG3U	CLAMP	1	
	S1021Z8-10	SCREW	1	
		---*---		
-13	0700099-23	LINE ASSEMBLY-FUEL TANK TO UNION FORWARD LH	1	
-14	0700099-24	LINE ASSEMBLY-FUEL TANK TO UNION FORWARD RH	1	
		ATTACHING PARTS		
-15	S1431-8-	HOSE-2.50 IN LG BULK ITEM WHEN EXHAUSTED USE S1495-8	1	
	S1495-8	HOSE-2.50 IN LG BULK ITEM REF S1495-8-2.50	1	
	S1891-10	CLAMP BC	2	
		---*---		
-16	AN815-8D	UNION	2	
-17	0700099-21	LINE ASSEMBLY-UNION TO TEE FORWARD LH	2	
-18	AN804D8	TEE	2	
	AN924-8D	NUT	2	
	AN960-1216L	WASHER FORWARD OF BULKHEAD	2	
	AN960-1216L	WASHER AFT OF BULKHEAD	2	
-19	0700099-15	LINE ASSEMBLY-TEE TO SELECTOR VALVE LH	1	
-20	0700099-16	LINE ASSEMBLY-TEE TO SELECTOR VALVE RH	1	
-21	0716613-1	SELECTOR VALVE-FUEL	1	
		ATTACHING PARTS		
-22	AN500-10-10	SCREW	2	
-23	AN935-10	WASHER	2	
		---*---		
	0716613-200	KIT-SPARE O RING	1	
-24	MS20913-1D	PLUG	1	
-25	0716611-1	COUPLING-SELECTOR VALVE SHAFT	1	
		ATTACHING PARTS		
-26	MS24665-134	COTTER PIN	2	
		---*---		


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
82 -27	0716607-1	GEAR ASSEMBLY-SELECTOR VALVE	1	
-28	0511198	CUP-HANDLE	1	
-29	S1286-1	PLACARD-FUEL SELECTOR VALVE	1	
	S1286-2	PLACARD-FUEL SELECTOR VALVE EXTENDED RANGE	1	
		ATTACHING PARTS		
-30	S1021Z4-4	SCREW	4	
-31	NAS446-1-3	NUT	4	
		---*---		
-32	0716612-201	HANDLE-FUEL SELECTOR VALVE	1	
		ATTACHING PARTS		
-33	NAS561-2-10	COTTER PIN	1	
		---*---		
-34	MS20823-8D	ELBOW	1	
-35	0700099-34	LINE ASSEMBLY-SELECTOR VALVE TO FUEL STRAINER	1	
	MS35489-20	GROMMET	2	
-36	MS20823-8D	ELBOW	1	
-37	SEE FIG 83	STRAINER ASSEMBLY	1	
-38	0700099-3	LINE ASSEMBLY-PRIMER	1	
-39	0700099-2	LINE ASSEMBLY-PRIMER	1	
-40	0700099-5	LINE ASSEMBLY-PRIMER FIREWALL TO STRAINER	1	
		WHEN EXHAUSTED USE 0700099-81		
	0700099-81	LINE ASSEMBLY-PRIMER FIREWALL TO STRAINER	1	
	MS20823-2D	ELBOW	1	
-41	S1167-8-0120	HOSE ASSEMBLY-STRAINER TO ENGINE	1	
	MS20822-8D	ELBOW AT STRAINER	1	
	8-4VTX-S	ELBOW AT CARBURETOR PA	1	
		A---182 SERIAL 18253599 THRU 18255785		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
82A-		FUEL SYSTEM INSTALLATION	NP	C
- 1	0716127-1	LINE-FUEL TANK VENT	1	
	1200106-51	LINE-FUEL TANK VENT EXTENDED RANGE ONLY	1	
		ATTACHING PARTS		
- 2	S1495-8	HOSE 2.00 IN LG BULK ITEM REF S1495-8-2.00	1	
	NAS397-14	CLAMP	2	
	AN737RM30	CLAMP	1	
- 3	S1486DG8U	CLAMP	2	
	S1021Z8-8	SCREW	2	
- 4	MS35489-4	GROMMET	2	
		---*---		
- 5	0700099-48	LINE-FUEL TANK VENT CARRY THRU	1	H
	0700099-77	LINE-FUEL TANK VENT CARRY THRU	1	J
	0700099-85	LINE ASSEMBLY-FUEL TANK VENT CARRY THRU	1	K
- 6	0716616-1	LINE ASSEMBLY-FUEL TANK TO VENT CARRY THRU STD WING	2	
- 7	0716622-1	VENT ADAPTER ASSEMBLY EXTENDED RANGE ONLY	2	B
- 8	0700099-46	FUEL LINE LH	1	
- 9	0700099-47	FUEL LINE RH	1	
-10	0716617-1	LINE ASSEMBLY-FUEL TANK TO UNION FORWARD LH	1	
-11	0716617-2	LINE ASSEMBLY-FUEL TANK TO UNION FORWARD RH	1	
		ATTACHING PARTS		
-11A	MS21921DG-8	CLAMP	1	
	AN509-8R14	SCREW	1	
	NAS43HT3-16	SPACER	1	
	NAS679A08	NUT	1	
		---*---		
-11B	S292-14	HOSE 2.00 IN LG BKI REF S292-14-2.00	2	
-12	0700099-19	LINE ASSY-LH AFT	1	L
	0700099-105	LINE ASSY-LH UPPER AFT	1	M
-12A	0700099-107	LINE ASSY-LH LOWER AFT	1	M
-13	0700099-20	LINE ASSY-RH AFT	1	L
	0700099-104	LINE ASSY-RH UPPER AFT	1	M
-13A	0700099-106	LINE ASSY-RH LOWER AFT	1	M
		ATTACHING PARTS		
-14	AN815-8D	UNION	2	
	MS35489-49	GROMMET	1	L
	S51-8-10	HOSE	1	M
	S1693-2	STA-STRAP	2	M
	MS21919DG8	CLAMP	2	
	S1021Z8-8	SCREW	2	
		---*---		
-15	S1495-6	HOSE 3.00 IN LG BULK ITEM REF S1495-6-3.00	6	
		ATTACHING PARTS		
	NAS397-12	CLAMP	2	
		---*---		
-16	S1891-10	CLAMP BC	2	
-17	S1495-8	HOSE 2.50 IN LG BULK ITEM REF S1495-8-2.50	4	
		ATTACHING PARTS		
	S1891-10	CLAMP AFT FUEL TANK BC	2	
	NAS397-10	CLAMP FORWARD FUEL TANK	2	
		---*---		
-18	0700099-17	LINE ASSEMBLY-UNION TO TEE	2	L
	0700099-94	LINE ASSEMBLY-UNION TO TEE	2	M
		ATTACHING PARTS		
	MS21919DG8	CLAMP	1	L
	S1486DG3U	CLAMP	1	L
	S1021Z8-10	SCREW	1	L
		---*---		
	MS35489-49	GROMMET	2	
-19	AN815-8D	UNION	2	
-20	0700099-21	LINE ASSEMBLY-UNION TO TEE FORWARD LH	2	
-21	AN804D8	TEE	2	
	AN924-8D	NUT	2	
	AN960-1216L	WASHER FORWARD OF BULKHEAD	2	
	AN960-1216L	WASHER AFT OF BULKHEAD	2	

CONTINUED ON NEXT PAGE

Fuel System (Cont)

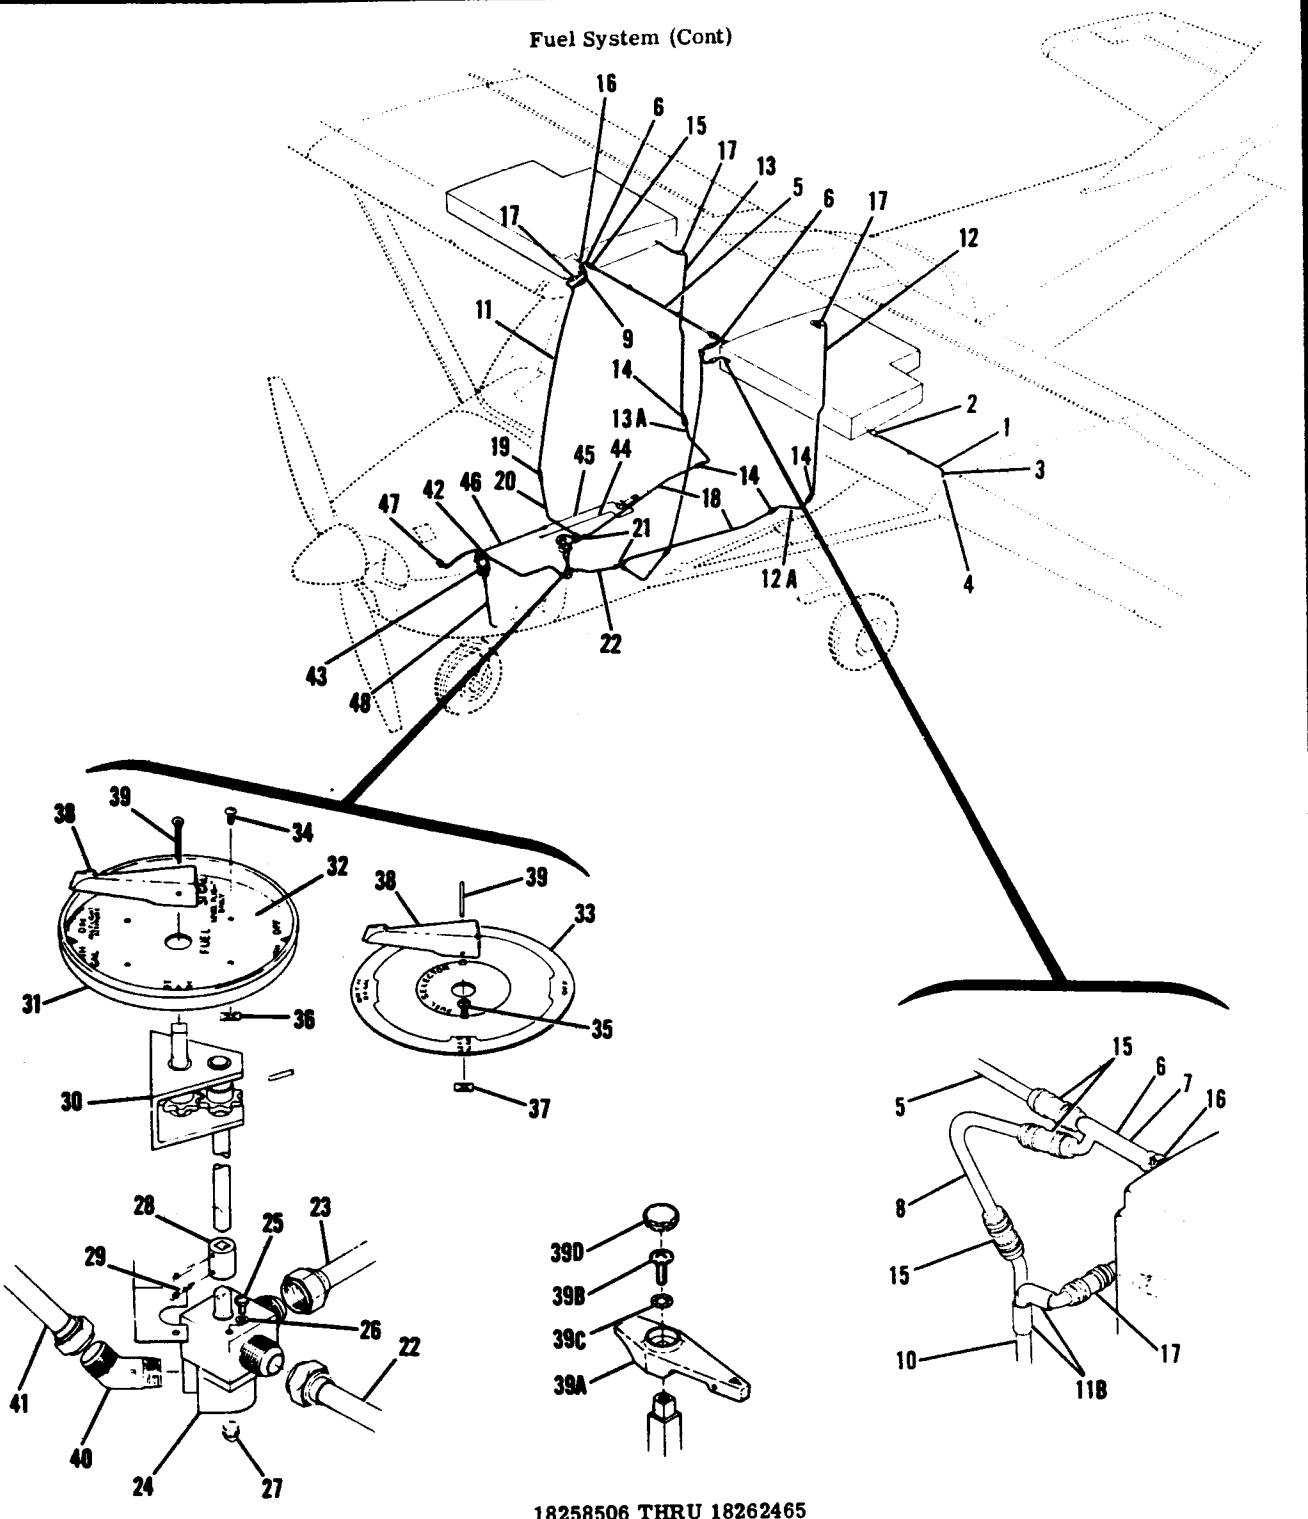

18258506 THRU 18262465


182 SERIAL 18255786 THRU 18262465

Figure 82A. Fuel System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
82A-22	0700099-15	LINE ASSEMBLY TEE TO SELECTOR VALVE LH	1	
-23	0700099-16	LINE ASSEMBLY TEE TO SELECTOR VALVE RH	1	
-24	0716613-1	SELECTOR VALVE-FUEL	1	
	5037-1	SELECTOR VALVE-FUEL ALT	1	
		ATTACHING PARTS		
-25	AN500-10-10	SCREW	2	
-26	AN935-10	WASHER	2	
		---*---		
	0716613-200	KIT-SPARE O RING	1	
-27	MS20913-1D	PLUG	1	
-28	0716611-1	COUPLING-SELECTOR VALVE SHAFT	1	
		ATTACHING PARTS		
-29	MS24665-134	COTTER PIN	2	
		---*---		
-30	0716607-1	GEAR ASSEMBLY-SELECTOR VALVE	1	F
	0716607-3	GEAR ASSEMBLY-SELECTOR VALVE	1	G
-31	0511198	CUP-HANDLE	1	A
-32	S1286-1	PLACARD-FUEL SELECTOR VALVE	1	A
	S1286-2	PLACARD-FUEL SELECTOR VALVE-EXTENDED RANGE ONLY	1	A
-33	0716615-1	PLACARD ASSEMBLY-FUEL SELECTOR VALVE	1	B
	0716615-2	PLACARD ASSEMBLY-FUEL SELECTOR VALVE EXTENDED RANGE ONLY-	1	B
		ATTACHING PARTS		
-34	S1021Z4-4	SCREW	4	A
-35	S1021Z4-4C	SCREW	2	B
-36	NAS446-1-3	NUT	4	A
-37	NAS446-1-3	NUT	2	B
		---*---		
-38	0716612-2D1	HANDLE	1	F
		ATTACHING PARTS		
-39	NAS561-2-10	PIN-SPRING	1	F
		---*---		
-39A	0716623-2	HANDLE-FUEL SELECTOR VALVE	1	G
		ATTACHING PARTS		
-39B	AN525-832R6	SCREW	1	G
-39C	AN936A8	WASHER	1	G
		---*---		
-39D	0716624-1	CAP	1	G
-40	MS20823-8D	ELBOW	1	
-41	0700099-34	LINE ASSEMBLY-SELECTOR VALVE TO FUEL STRAINER	1	
	MS35489-20	GROMMET	1	
-42	MS20823-8D	ELBOW	1	
	0750032-1	SHIELD	1	
	S354-3	GROMMET	1	
-43	SEE FIG 83	STRAINER ASSEMBLY	1	D
	SEE FIG 84A	STRAINER ASSEMBLY	1	E
-44	0700099-2	LINE ASSEMBLY-PRIMER	1	
-45	0700099-3	LINE ASSEMBLY-PRIMER	1	
-46	0700099-5	LINE ASSEMBLY-PRIMER FIREWALL TO STRAINER	1	
		WHEN EXHAUSTED USE 0700099-81		
	0700099-81	LINE ASSEMBLY-PRIMER FIREWALL TO STRAINER	1	
	MS20823-2D	ELBOW	1	A
	AN816-2D	NIPPLE	1	B
-47	S1167-8-0120	HOSE ASSEMBLY-STRAINER TO ENGINE	1	
	MS20822-8D	ELBOW AT STRAINER	1	
	8-4VTX-S	ELBOW AT CARBURETOR	1	
-48	0700099-53	LINE ASSEMBLY-DRAIN	1	B

A---182 SERIAL 18255786 THRU 18255844
B---182 SERIAL 18256144 THRU 18262465
A182 SERIAL A182-0001 & ON
C---182 SERIAL 18255786 THRU 18262465
A182 SERIAL A182-0001 & ON
D---182 SERIAL 18255786 THRU 18256039
E---182 SERIAL 18256040 THRU 18262465
A182 SERIAL A182-0001 & ON
F---182 SERIAL 18255786 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
G---182 SERIAL 18258506 THRU 18262465
A182 SERIAL A182-0097 & ON
H---182 SERIAL 18255786 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
J---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 & ON
K---182 SERIAL 18260446 THRU 18262465
L---182 SERIAL 18255786 THRU 18260825
A182 SERIAL A182-0001 & ON
M---182 SERIAL 18260826 THRU 18262465

Fuel System (Cont)

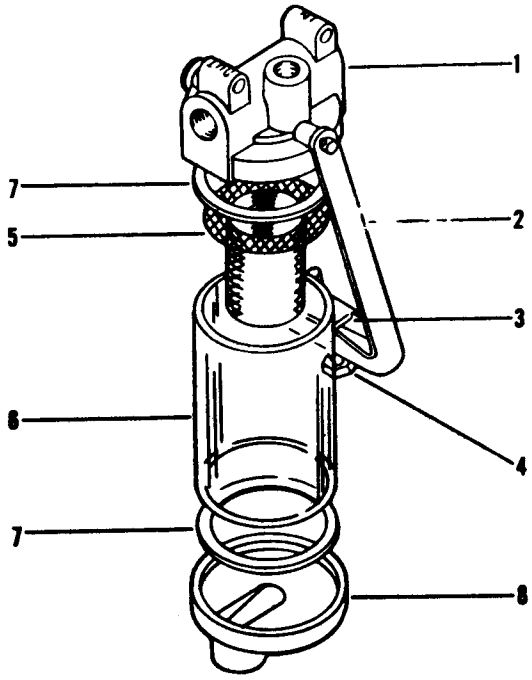


182 SERIAL 18253599 THRU 18256039

Figure 83. Fuel Strainer Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
83 -	0511199-23	STRAINER ASSEMBLY-FUEL	1	A
- 1	33-199-102	BODY-FUEL STRAINER GARW	1	
- 2	33-199-3	ARM GARW	1	
- 3	33-199-8	NUT GARW	1	
- 4	33-199-7	BOLT GARW	1	
- 5	33-199-911	SCREEN ASSEMBLY	1	
- 6	33-199-5	GLASS BOWL GARW	1	
- 7	33-199-6	GASKET GARW	2	
- 8	33-199-1	CAP GARW	1	

A---182 SERIAL 18253599 THRU 18256039

Fuel System (Cont)

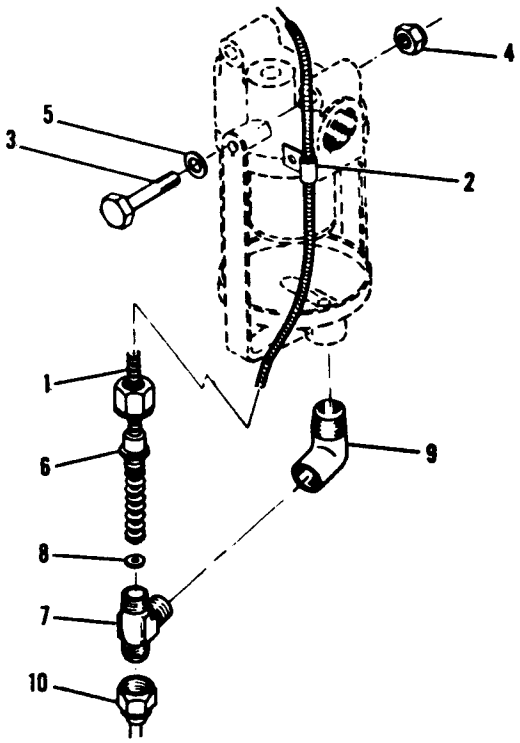


182 SERIAL 18253599 THRU 18256039

Figure 84. Fuel Strainer Drain Control Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
84 -		DRAIN CONTROL INSTALLATION-FUEL STRAINER	NP	A
- 1	S1290-1	CONTROL ASSEMBLY-STRAINER DRAIN	1	
		ATTACHING PARTS		
- 2	MS21919DG3	CLAMP	1	
- 3	AN4-14A	BOLT	1	
- 4	NAS679A4	NUT	1	
- 5	AN960-416	WASHER	1	
		---*---		
- 6	MS29513-8	O RING	1	
- 7	HE1437-1	BODY HEAC	1	
- 8	HE1433	SEAL HEAC	1	
- 9	AN914-1D	ELBOW	1	
-10	0700099-36	LINE ASSEMBLY-DRAIN	1	B
	0700099-53	LINE ASSEMBLY-DRAIN	1	C
		A---182 SERIAL 18253599 THRU 18256039		
		B---182 SERIAL 18253599 THRU 18255844		
		C---182 SERIAL 18255845 THRU 18256039		

Fuel System (Cont)

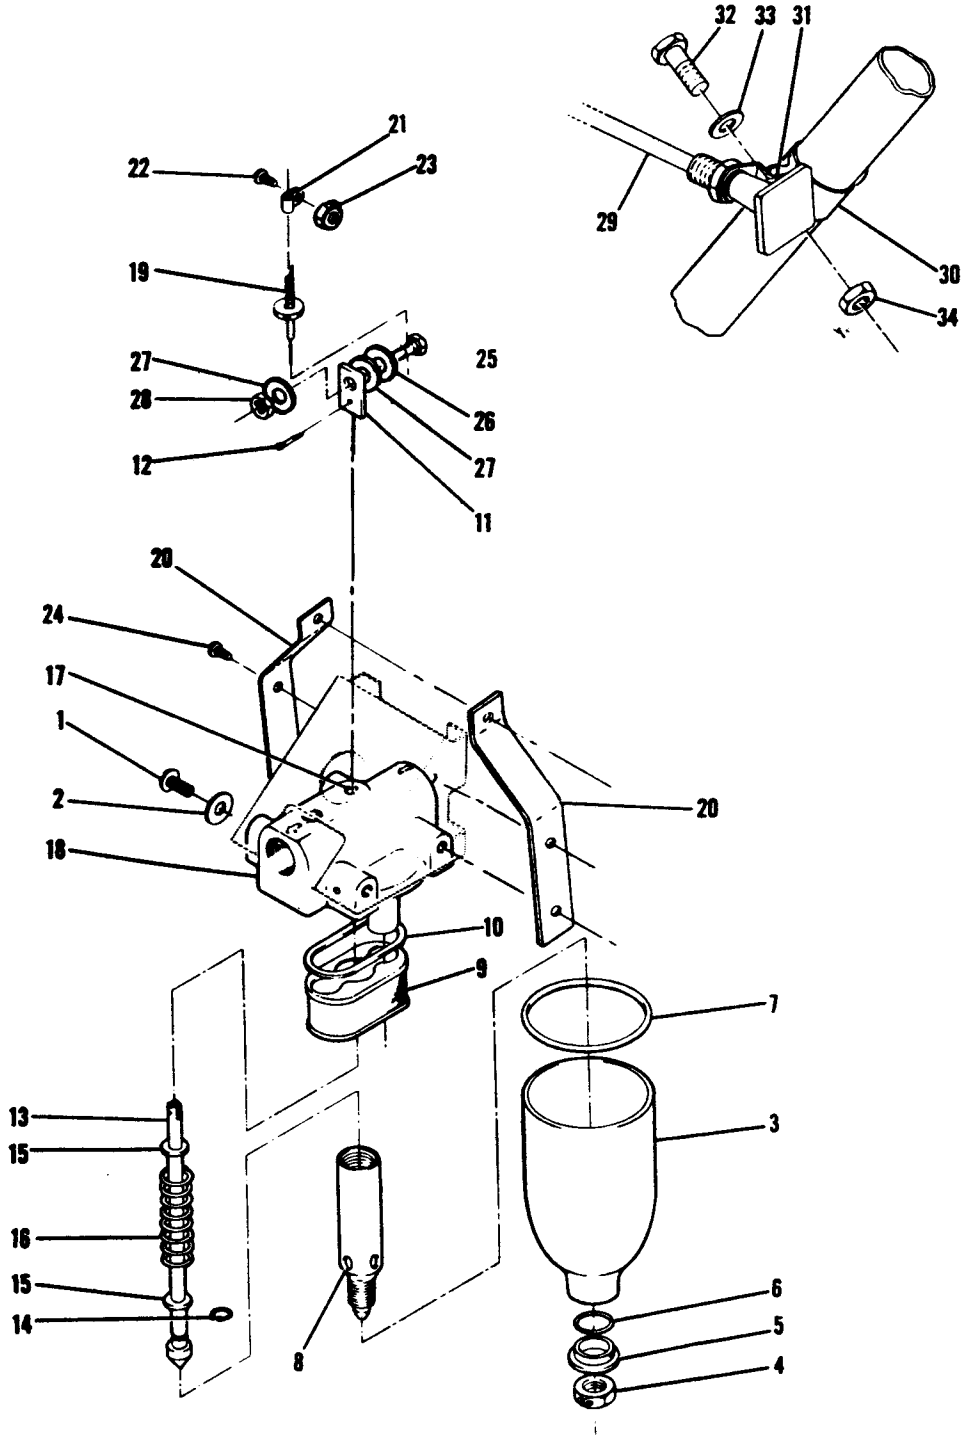

182 SERIAL 18256040 THRU 18262465

Figure 84A. Fuel Strainer & Drain Control Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
84A-		FUEL STRAINER & DRAIN CONTROL INSTALLATION	NP	A
	0756005-1	STRAINER ASSEMBLY-FUEL	1	
		ATTACHING PARTS		
- 1	AN515-10R8	SCREW	4	
- 2	AN936A10	WASHER	4	
		---*---		
- 3	0756008-1	BOWL-FUEL STRAINER	1	
		ATTACHING PARTS		
- 4	S1573-3	NUT	1	
- 5	0756015-1	WASHER	1	
- 6	MS29513-111	O RING	1	
- 7	MS29513-138	O RING	1	
		---*---		
- 8	0756011-1	STANDPIPE	1	
- 9	0756009-1	FILTER ASSEMBLY-FUEL STRAINER	1	
-10	0756009-8	GASKET	1	
-11	0756014-1	PLATE	1	
		ATTACHING PARTS		
-12	MS24665-132	COTTER PIN	1	
		---*---		
-13	0756010-1	PLUNGER ASSEMBLY-DRAIN	1	
-14	MS16624-1025	SNAP-RING	1	
-15	0756014-2	WASHER	1	
-16	0756012-1	SPRING	1	
-17	MS29513-10	O RING	1	
-18	0756005-2	TOP ASSEMBLY-FUEL STRAINER	1	
-19		CONTROL-STRAINER DRAIN SEE STATIONARY INSTRUMENT PANEL --		B
		ATTACHING PARTS		
-20	0716136-1	BRACKET	1	
-21	MS9025-02	CLAMP	1	
-22	AN520-10R8	SCREW	1	
-23	MS21044N3	NUT	2	
-24	AN525-10R8	SCREW	2	
	MS21044N3	NUT	2	
-25	0450311-3	CLAMP	1	
-26	AN960-416	WASHER	1	
-27	AN960-416L	WASHER	2	
-28	NAS679A4	NUT	1	
		---*---		
-29	S1517-2	CONTROL ASSEMBLY-STRAINER DRAIN	1	C
		ATTACHING PARTS		
-30	0750230-1	CLAMP	1	C
-31	AN741TD7	CLAMP	1	C
-32	AN4-6A	BOLT	2	C
-33	AN960-10L	WASHER	2	C
-34	NAS679A4	NUT	2	C
	AN742D3	CLAMP	1	C
	MS21919DG3	CLAMP	1	C
	NAS446-4-3	NUT	1	C
	NAS43DD3-16	SPACER	1	C
	S1021Z8-14	SCREW	1	D
	AN515-8R32	SCREW	1	D
	NAS43DD3-16	SPACER	1	D
		---*---		

A---182 SERIAL 18256040 THRU 18262465
A182 SERIAL A182-0001 & ON
B---182 SERIAL 18256040 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
C---182 SERIAL 18258506 THRU 18262465
A182 SERIAL A182-0097 & ON
D---182 SERIAL 18260078 THRU 18262465
A182 SERIAL A182-0117 & ON

Fuel System (Cont)

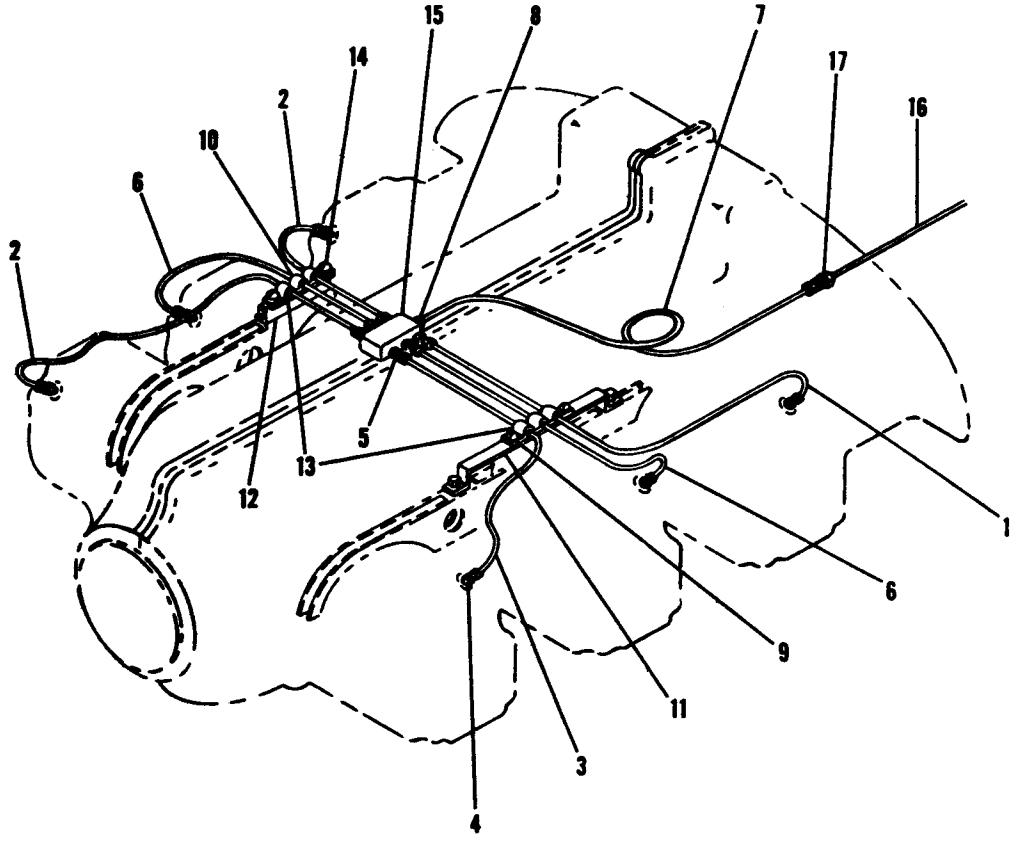


Figure 85. Fuel Primer System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
85 -		FUEL PRIMER INSTALLATION-SIX CYLINDER	NP	
- 1	0750125-1	LINE ASSEMBLY-CYLINDER 2 TO DISTRIBUTOR	1	
		ATTACHING PARTS		
	AN4022-1	JET-FUEL	1	
	AN780-2	NIPPLE	1	
		---*---		
- 2	0750125-2	LINE ASSEMBLY-CYLINDER 1 AND 5 TO DISTRIBUTOR	2	
		ATTACHING PARTS		
	AN4022-1	JET-FUEL	1	
	AN780-2	NIPPLE	1	
		---*---		
- 3	0750125-3	LINE ASSEMBLY-CYLINDER 6 TO DISTRIBUTOR	1	
		ATTACHING PARTS		
- 4	AN4022-1	JET-FUEL	1	
- 5	AN780-2	NIPPLE	1	
		---*---		
- 6	0750125-4	LINE ASSEMBLY-CYLINDER 3 AND 4 TO DISTRIBUTOR	2	
		ATTACHING PARTS		
	AN4022-1	JET-FUEL	1	
	AN780-2	NIPPLE	1	
		---*---		
- 7	0500106-173	LINE ASSEMBLY-DISTRIBUTOR TO BAFFLE WHEN EXHAUSTED USE 0700099-83	1	
	0700099-83	LINE ASSEMBLY-DISTRIBUTOR TO BAFFLE	1	
		ATTACHING PARTS		
- 8	AN816-2D	NIPPLE	1	
		---*---		
- 9	0750125-5	CLAMP ASSEMBLY-LH	1	
-10	0750125-6	CLAMP ASSEMBLY-RH	1	
-11	0750125-7	BRACKET-MOUNTING LH	1	
-12	0750125-8	BRACKET-MOUNTING RH	1	
-13	0750125-9	CLAMP	2	
		ATTACHING PARTS		
-14	S1021Z10-6	SCREW	4	
	0750125-11	NUT	4	
		---*---		
-15	0750125-10	DISTRIBUTOR-FUEL	1	
-16	0500106-133	LINE ASSEMBLY-FIREWALL TO BAFFLE WHEN EXHAUSTED USE 0700099-82	1	A
	0700099-82	LINE ASSEMBLY-FIREWALL TO BAFFLE	1	A
		ATTACHING PARTS		A
-17	AN832-2D	UNION	1	A
	AN924-2D	NUT	2	A
	AN960D516	WASHER	1	A
	AN833-2D	ELBOW		
		---*---		

A---182 SERIAL 18255059 THRU 18262465
A182 SERIAL A182-0001 & ON

Oil System

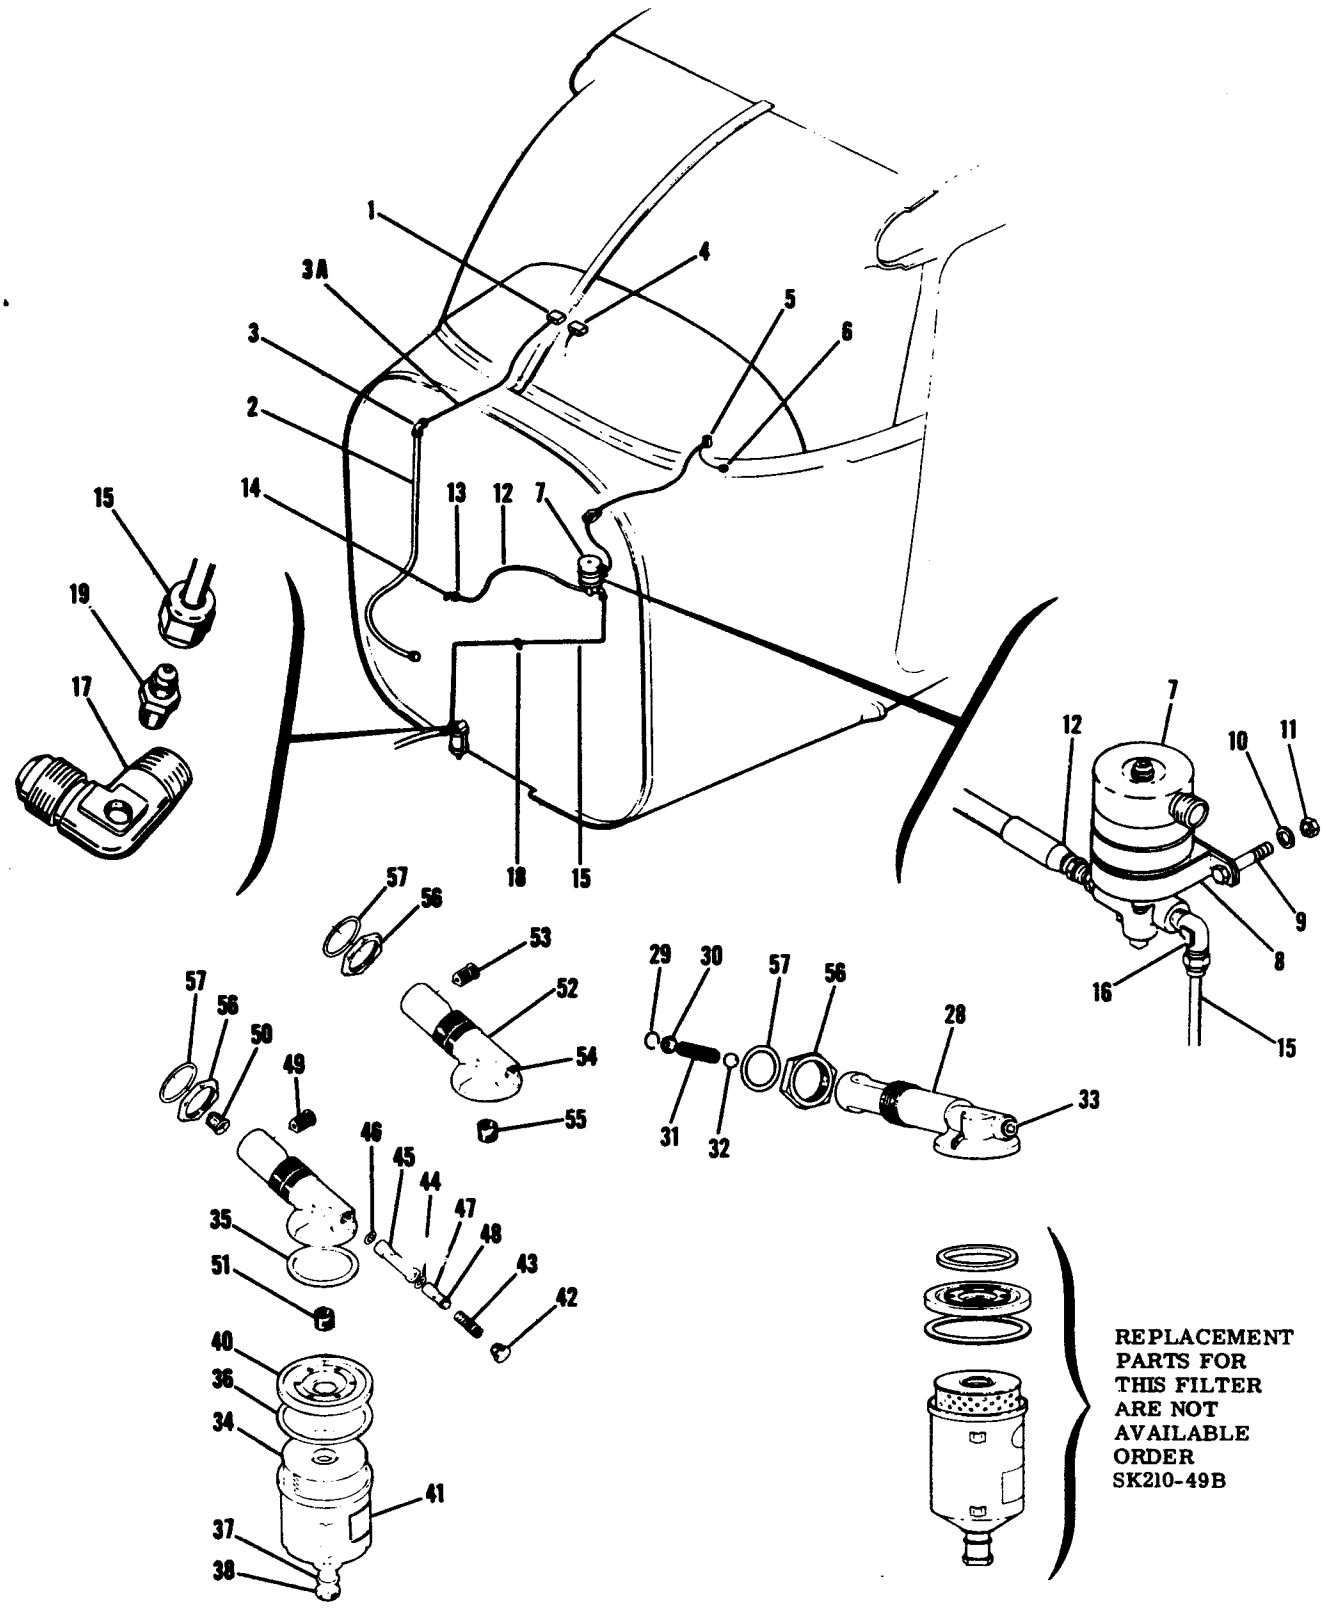


Figure 86. Oil System Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
			1 2 3 4 5 6 7		
86 -			OIL SYSTEM INSTALLATION	NP	
- 1			GAGE-OIL PRESSURE SEE INSTRUMENT PANEL	1	
- 2	S1167-4-0388		HOSE ASSEMBLY-OIL PRESSURE FIREWALL TO ENGINE	1	
			ATTACHING PARTS		
- 3	AN837-4D		ELBOW	1	
	AN960D716		WASHER	1	
	AN924-4D		NUT	1	
			---*---		
- 3A	0700099-37		LINE ASSEMBLY-OIL PRESSURE	1	
- 4			GAGE-OIL TEMPERATURE SEE INSTRUMENT PANEL	NP	F
			OIL DILUTION INSTALLATION	1	
- 5	S1158-1-1		SWITCH-OIL DILUTION	1	
			ATTACHING PARTS		
	AN507-632R3		SCREW	2	
			---*---		
- 6	S1360-10		CIRCUIT BREAKER	1	
- 7	AN4078-1		VALVE-SOLENOID	1	
			ATTACHING PARTS		
- 8	AN742D32		CLAMP	2	
- 9	AN3-5A		BOLT	2	
-10	AN960-10L		WASHER	2	
-11	MS21044N3		NUT	2	
			---*---		
-12	S1168-4-11		HOSE ASSEMBLY VALVE TO ENGINE OIL SUMP WHEN EXHAUSTED USE S1495-6 & S1497-6	1	F
	S1495-6		HOSE-11.0 IN LG BULK ITEM REF S1495-4JJ11.0	2	F
	S1497-6		FITTING-SOCKETLESS USED WITH S1495-6 HOSE		
			ATTACHING PARTS		
-13			DELETED, NEVER USED	1	
-14	MS20823-48		ELBOW	1	
			---*---		
-15	0500106-220		FUEL LINE VALVE TO STRAINER	1	
			ATTACHING PARTS		
-16	MS20822-4D		ELBOW	1	
-17	0750035-1		ELBOW	1	
-18	S1021Z8-10		CLAMP	1	
	S1021Z8-6		SCREW	1	
	NAS446-4-3		NUT	1	
-19	AN816-4D		UNION	1	
			---*---		
			OIL FILTER INSTALLATION	NP	
			OIL FILTER ASSEMBLY ORDER SK210-498	1	A
			DELETED-NOT AVAILABLE		
-20			DELETED-NOT AVAILABLE		
-21			DELETED-NOT AVAILABLE		
-22			DELETED-NOT AVAILABLE		
-23			DELETED-NOT AVAILABLE		
-24			DELETED-NOT AVAILABLE		
-25			DELETED-NOT AVAILABLE		
-26			DELETED-NOT AVAILABLE		
-27			ADAPTER ASSEMBLY-OIL FILTER ORDER 1250922-3	1	C
-28			SNAP RING	1	
-29	1250407-1		CAP-RETAINER	1	
-30	1250408-1		SPRING	1	
-31	1250409-1		BALL	1	
-32	S272-17		PLUG	1	B
-33	AN932C4		OIL FILTER ASSEMBLY	1	
	C294505-0101		FILTER ELEMENT KIT	1	
-34	C294505-0102	*	GASKET AC	1	
-35	6436635		GASKET AC	1	
-36	6436637		METAL GASKET AC	1	
-37	5579654		STUD-CENTER AC	1	
-38	6436916	*	DELETED-NOT AVAILABLE		
-39			LID-OIL FILTER AC	1	
-40	6436989	*	PLACARD-OIL FILTER	1	
-41	1250410-3	*	ADAPTER ASSEMBLY-OIL FILTER ORDER 1250922-3	1	D
			PLUG-ADAPTER	1	
-42	0756018-2		SPRING	1	
-43	0756021-1		O RING	1	
-44	AN6227B10		SLEEVE	1	
-45	0756019-1		WASHER	1	
-46	MS20002C6		PISTON	1	
-47	0756020-1		O RING	1	
-48	AN6227B6				

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
86 -49	0756022-1	VALVE-BY PASS	1	
-50	0756022-2	VALVE-OUTLET	1	
-51	MS124663	HELI COIL	1	
-52	1250922-3	ADAPTER ASSEMBLY-OIL FILTER	1	E
-53	0756022-1	VALVE-BY PASS	1	
-54	AN932C4	PLUG	1	
-55	MS124663	HELI-COIL	1	
-56	1250405-1	NUT-ADAPTER	1	
-57	AN123883	PACKING-ADAPTER NUT	1	
	SE709	WRENCH ADAPTER-OIL FILTER	1	
		NOTE. *THESE PARTS ARE ALSO REPLACEMENT PARTS FOR SK210-49B.		
		A---182 SERIAL 18253599 THRU 18256557		
		B---182 SERIAL 18256558 THRU 18262465 A182 SERIAL A182-0001 & ON		
		C---182 SERIAL 18253599 THRU 18256704		
		D---182 SERIAL 18256705 THRU 18267628 A182 SERIAL A182-0001 THRU A182-0056		
		E---182 SERIAL 18257629 THRU 18262465 A182 SERIAL A182-0057 & ON		
		F---182 SERIAL 18253599 THRU 18262465		

DIRECTIONAL & HORIZONTAL

GYRO USAGE


REFER TO FOLLOWING TABLE FOR REPLACEMENT GYROS WHEN ORIGINAL EQUIPMENT HAS BEEN EXHAUSTED

ORIGINAL GYRO	REPLACEMENT GYRO
HORIZONTAL GYROS	**HORIZONTAL GYROS**
S1309N1	C661001-0101 OR AK172-116
S1326N1	AK172-116*
S1472N1	C661001-0101 OR AK172-116*
S1473N1	C661001-0101 OR AK172-116*
C661001-0101	AK172-116*
DIRECTIONAL GYROS	**DIRECTIONAL GYROS**
S1316N1	C661002-0101 OR AK172-116
S1327N1	AK172-116*
S1476N1	C661002-0101 OR AK172-116*
C661002-0101	AK172-116*

*AK172-116 IS A KIT INCLUDING BOTH HORIZONTAL & DIRECTIONAL GYROS, A CENTRAL FILTER, SUCTION GAGE AND NECESSARY HARDWARE FOR INSTALLATION OF THESE PARTS

Figure 86A. Directional & Horizonal Gyro Usage

Vacuum System

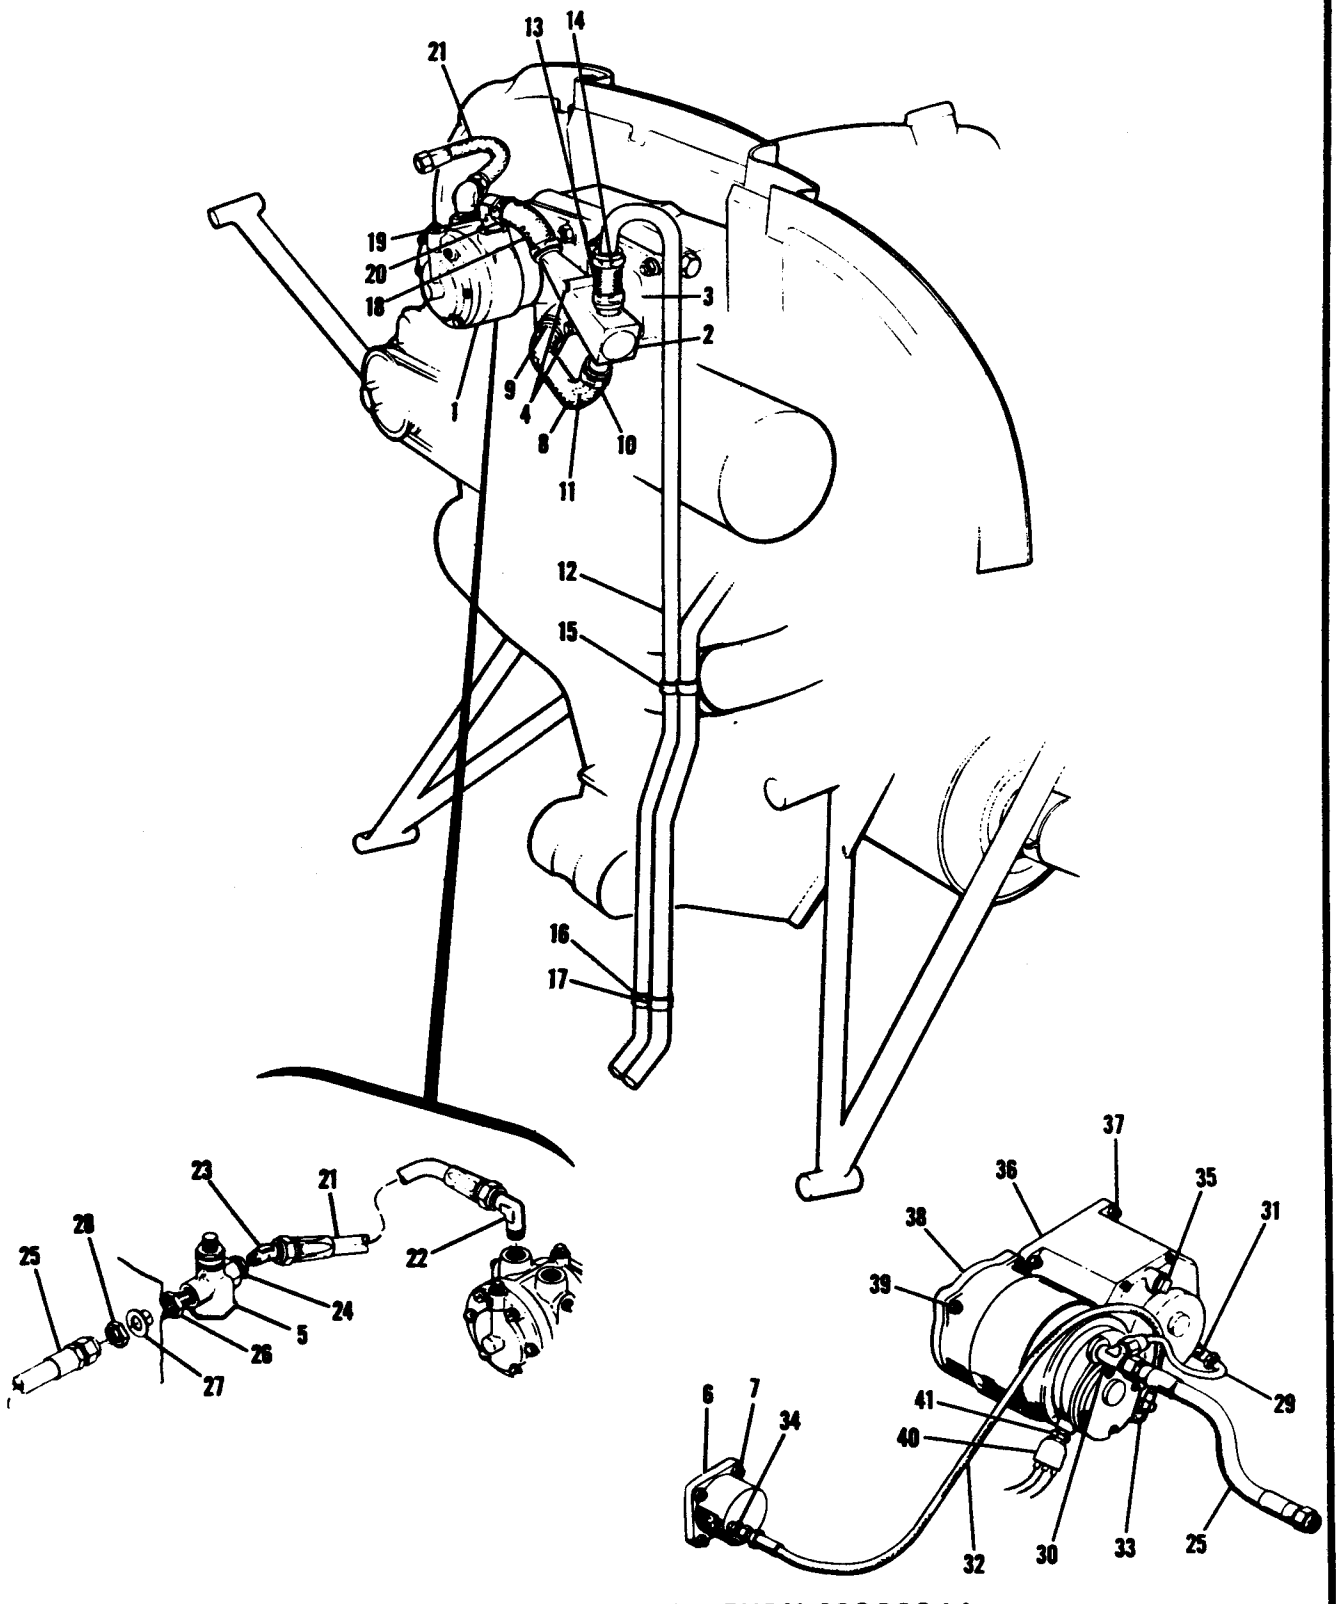

182 SERIAL 18253599 THRU 18255844

Figure 87. Vacuum System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
87 -		VACUUM SYSTEM INSTALLATION-ENGINE DRIVEN	NP	A
- 1	C431001-0101	PUMP-VACUUM	1	
- 2	0750103-1	OIL SEPARATOR	1	
		ATTACHING PARTS		
		BRACKET	1	
- 3	0750036-1	BOLT	2	
- 4	AN3-15A	WASHER	2	
	AN960D10L	NUT	2	
	MS21044N3	---*---		
- 5	0813619-3	VALVE-RELIEF	1	
	0813619-2	VALVE-RELIEF TACTAIR ONLY	1	
	AN912-4	BUSHING TACTAIR ONLY	1	
- 6	S1414N1	GAGE-SUCTION	1	
		ATTACHING PARTS		
- 7	AN5078632R12	SCREW	4	
	MS20365B632C	NUT	4	
		---*---		
- 8	S51-8	HOSE-OIL RETURN 9 IN LG BULK ITEM REF S51-8-36 --	1	
	S1495-8	HOSE 9 IN LG BULK ITEM REF S1495-8-9.0 ALT --	1	
		ATTACHING PARTS		
- 9	AN844-8	ELBOW	2	
-10	NAS397-14-1	CLAMP	1	
		---*---		
-11	0750036-1	LINE-OIL RETURN	1	
-12	0700099-33	LINE-VENT	1	
		ATTACHING PARTS		
-13	S51-8	HOSE-VENT 2 IN LG BULK ITEM REF S51-8-8	1	
	S1495-8	HOSE 2 IN LG BULK ITEM REF S1495-8-2.0 ALT --	1	
-14	NAS397-14-1	CLAMP	2	
-15	AN742D8	CLAMP	1	
-16	S1486DG12U	CLAMP	1	
-17	MS21919DG8	CLAMP	1	
	S1021-10-10	SCREW	1	
		---*---		
-18	S51-8	HOSE-DISCHARGE 3.25 IN LG BULK ITEM REF S51-8-13-	1	
	S1495-8	HOSE 3.25 IN LG BULK ITEM REF S1495-8-3.25 ALT ----	1	
		ATTACHING PARTS		
-19	AN842-8	ELBOW	1	
-20	NAS397-14-1	CLAMP	2	
		---*---		
-21	S1168-6-6 1/2	HOSE ASSEMBLY WHEN EXHAUSTED USE S1495-6 & S1497-6 ------	1	
	S1495-6	HOSE 6.50 IN LG BULK ITEM REF S1495-6-6.50 ------	1	
	S1497-6	FITTING-SOCKETLESS USE WITH S1495-6 HOSE ----------	2	
		ATTACHING PARTS		
-22	MS20822-6-6B	ELBOW	1	
-23	AN912-2	REDUCER BUSHING	1	
-24	AN912-2	BUSHING-REDUCER	1	
		---*---		
-25	S1168-6-9 1/2	HOSE ASSEMBLY WHEN EXHAUSTED USE S1495-6 & S1497-6 ------	1	
	S1495-6	HOSE 9.50 IN LG BULK ITEM REF S1495-6-9.50 ------	1	
	S1495-7	FITTING-SOCKETLESS USE WITH S1495-6 HOSE ----------	2	
		ATTACHING PARTS		
-26	S1988-1	FITTING	1	
-27	AN960D916	WASHER	1	
-28	AN924-6D	NUT	1	
		---*---		
-29	S1495-6-	HOSE 9.62 IN LG BULK ITEM REF S1495-6-9.62 ------	1	
	S1497-6	FITTING-HOSE	2	
		ATTACHING PARTS		
-30	MS20826-6D	TEE	1	
-31	MS20822-6D	ELBOW	1	
		---*---		
-32	S1168-2-36	HOSE ASSEMBLY-HORIZONTAL GYRO TO SUCTION GAGE	1	
		ATTACHING PARTS		
-33	MS20822-2D	ELBOW	1	
	AN912-1D	BUSHING	1	
-34	AN816-2D	NIPPLE	1	
		---*---		


CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
87 -35	MS20913-2D	PLUG	3	
-36	S1327N1	INDICATOR-DIRECTIONAL GYRO-PICTORIAL TYPE 34B USED WITH VACUUM WARNING LIGHTS WHEN EXHAUSTED SEE FIG 86A	1	
	S1316N1	DIRECTIONAL GYRO REMFD WHEN EXHAUSTED USE C661002-0101-	1	
	C661002-0101	DIRECTIONAL GYRO WHEN EXHAUSTED SEE FIG 86A ATTACHING PARTS	1	
-37	AN5078103 2R16	SCREW ---*---	4	
-38	S1326N1	INDICATOR-HORIZONTAL GYRO-PICTORIAL TYPE 34B WITH VACUUM WARNING LIGHTS WHEN EXHAUSTED SEE FIG 86A	1	
	S1429N1	INDICATOR-HORIZONTAL GYRO-PICTORIAL TYPE 34B WITHOUT VACUUM WARNING LIGHTS-USE WITH SUCTION GAGE WHEN EXHAUSTED USE C661001-0101	1	
	S1309N1	HORIZONTAL GYRO REMFD WHEN EXHAUSTED USE C661001-0101 -	1	
	C661001-0101	HORIZONTAL GYRO WHEN EXHAUSTED SEE FIG 86A ATTACHING PARTS	1	
-39	AN5078103 2R16	SCREW ---*---	4	
-40	S1365-1	SWITCH-VACUUM PICTORIAL GYROS ONLY	1	
	S1284-1	SWITCH-PRESS TO TEST PICTORIAL GYROS ONLY	1	
-41	AN912-1D	BUSHING PICTORIAL GYROS ONLY	1	
		A---182 SERIAL 18253599 THRU 18255844		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
88 -		VACUUM SYSTEM INSTALLATION	NP	A
- 1	C661002-0101	GYRO-DIRECTIONAL WHEN EXHAUSTED SEE FIG 86A	1	
- 2	30370-0100	GYRO-DIRECTIONAL ARC	1	
- 3	C661001-0101	GYRO-HORIZON WHEN EXHAUSTED SEE FIG 86A	1	
		DELETED-NOT AVAILABLE		
		DELETED-NOT AVAILABLE		
		ATTACHING PARTS		
- 4	30475-0100	GYRO-HORIZON ARC	1	
- 5	2104	RING-INSTRUMENT MOUNTING AUIM	1	
		ATTACHING PARTS		
- 6	AN515-6R12	SCREW	4	
		---*---		
- 7	0713749-6	PLATE ASSEMBLY-INSTRUMENT MOUNTING	1	
		ATTACHING PARTS		
- 8	AN520-10R6	SCREW	4	
		---*---		
- 9	NAS697A3	NUTPLATE	4	
-10	MS20823-6D	ELBOW	1	
-11	S1615-6	HOSE 3.62 IN LG BULK ITEM REF S1615-6-3.62	1	
		ATTACHING PARTS		
	NAS397-12	CLAMP	2	
		---*---		
-12	MS20826-6D	TEE	1	
-13	MS20822-4-4D	ELBOW	1	
-14	S1495-4-	HOSE 32.0 IN LG BULK ITEM REF S1495-6-32.00	1	
-15	S1414N1	GAGE-SUCTION	1	

CONTINUED ON NEXT PAGE

Vacuum System (Cont)

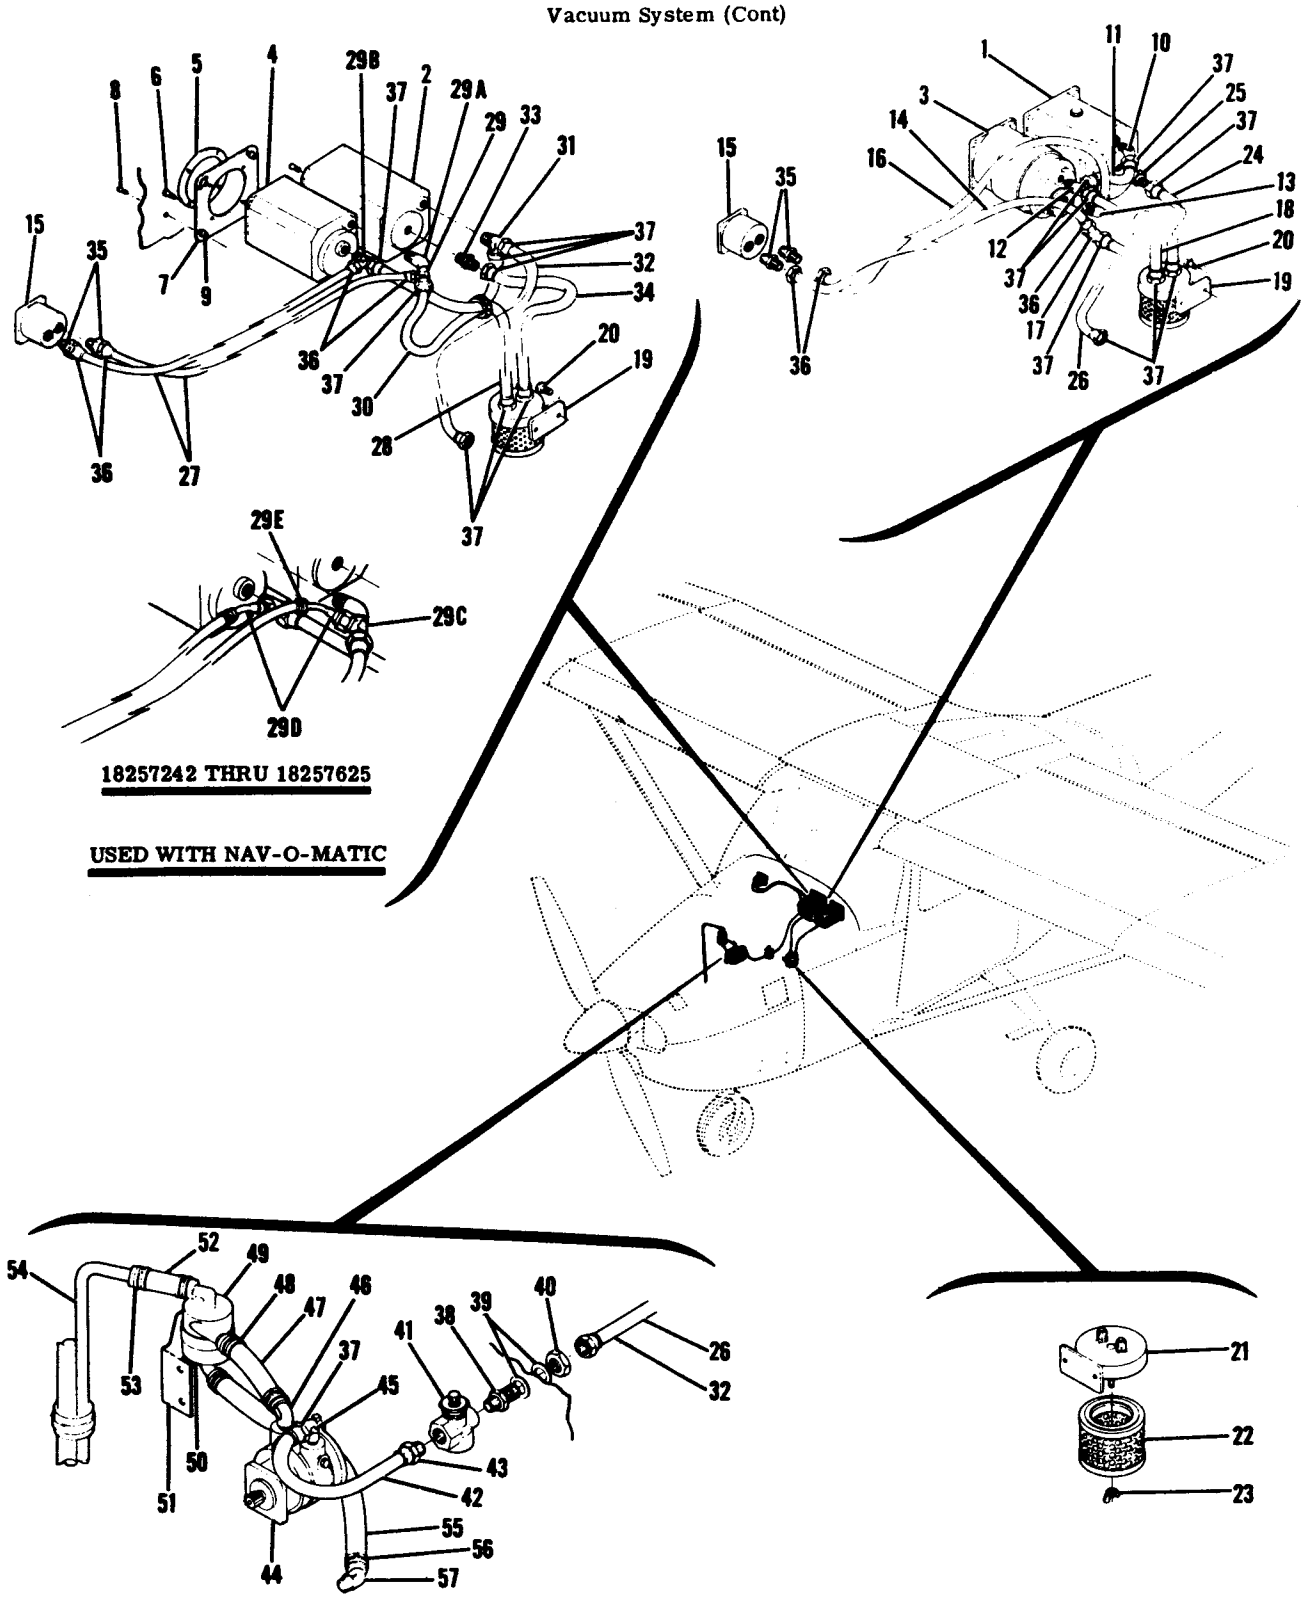

18257242 THRU 18257625

USED WITH NAV-O-MATIC

182 SERIAL 18255845 THRU 18257625


Figure 88. Vacuum System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
88 -16	S1495-4-	HOSE 36.0 IN LG BULK ITEM REF S1495-4-36.00	1	
-17	**	TEE	1	B
	MS20826-6D	TEE	1	C
	1713039-1	ELBOW ASSEMBLY	1	C
	NAS397-8	CLAMP	1	C
-18	S1495-6-	HOSE 19.25 IN LG BULK ITEM REF S1495-6-19.25	1	
-19	C294501-0101	FILTER ASSEMBLY	1	
		ATTACHING PARTS		
-20	AN3-3A	BOLT	2	
		---*---		
-21	C294501-0102	BRACKET	1	
-22	C294501-0103	FILTER ELEMENT	1	
		ATTACHING PARTS		
-23	P2274	NUT-WING DCI	1	
		---*---		
-24	S1495-6-	HOSE 19.25 IN LG BULK ITEM REF S1495-6-25.00	1	
-25	AN816-6D	NIPPLE	1	
-26	S1495-6-	HOSE 9.0 IN LG BULK ITEM REF S1495-6-9.0	1	
-27	S1495-4-	HOSE 32.00 IN LG BULK ITEM REF S1495-4-32.00	2	
-28	S1495-6-	HOSE * IN LG BULK ITEM REF S1495-6-**	1	
-29	**	TEE	1	B
-29A	AN915-2D	ELBOW	1	
-29B	**	TEE	1	B
-29C	MS20826-6D	TEE	2	C
-29D	1713039-1	ELBOW ASSEMBLY	2	C
-29E	NAS397-8	CLAMP	2	C
-30	S1495-6-	HOSE 19.25 IN LG BULK ITEM REF S1495-6-19.25	1	
-31	MS20826-6D	TEE	1	
-32	S1495-6-	HOSE 11.00 IN LG BULK ITEM REF S1495-6-11.00	1	
-33	AN816-6D	NIPPLE	1	
-34	S1495-6-	HOSE * IN LG BULK ITEM REF S1495-6-**	1	
-35	AN816-4D	NIPPLE	1	
-36	S1497-4	FITTING-HOSE	4	
-37	S1497-6	FITTING-HOSE	9	
-38	S1988-1	FITTING	1	
		ATTACHING PARTS		
-39	AN960D916	WASHER	2	
-40	AN924-6D	NUT	1	
		---*---		
-41	C482001-0101	VALVE-VACUUM RELIEF	1	
-42	S1495-6-	HOSE 10.50 IN LG BULK ITEM REF S1495-6-10.50	1	
-43	S1496-6A	FITTING-HOSE	1	
-44	C431001-0101	PUMP-VACUUM	1	
-45	MS20822-6-6	ELBOW	1	
-46	AN842-8	ELBOW	1	
-47	S1495-8-	HOSE 4.0 IN LG BULK ITEM REF S1495-8-3.25	1	
		ATTACHING PARTS		
-48	NAS397-14	CLAMP	2	
		---*---		
-49	C165001-0102	OIL SEPARATOR	1	
		ATTACHING PARTS		
-50	AN520-10R8	CLAMP	1	
	AN520-10R12	SCREW	1	
	MS21044N3	NUT	1	
-51	0750025-1	BRACKET	1	
		---*---		
-52	S1495-8-	HOSE 2.50 IN LG BULK ITEM REF S1495-8-2.50	1	
		ATTACHING PARTS		
-53	NAS397-14	CLAMP	2	
		---*---		
-54	0700099-42	LINE-VENT	1	
-55	S1495-8-	HOSE 7.00 IN LG BULK ITEM REF S1495-8-7.00	1	
		ATTACHING PARTS		
-56	NAS397-14	CLAMP	2	
		---*---		
-57	AN844-8	ELBOW	1	

NOTE. **ORDER 1 EACH MS20826-6D TEE, 1713039-1 ELBOW ASSEMBLY & NAS397-8 CLAMP.

A---182 SERIAL 18255845 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
B---182 SERIAL 18255845 THRU 18257241
A182 SERIAL A182-0001 THRU A182-0014
C---182 SERIAL 18257242 THRU 18262465
A182 SERIAL A182-0015 & ON

Vacuum System (Cont)

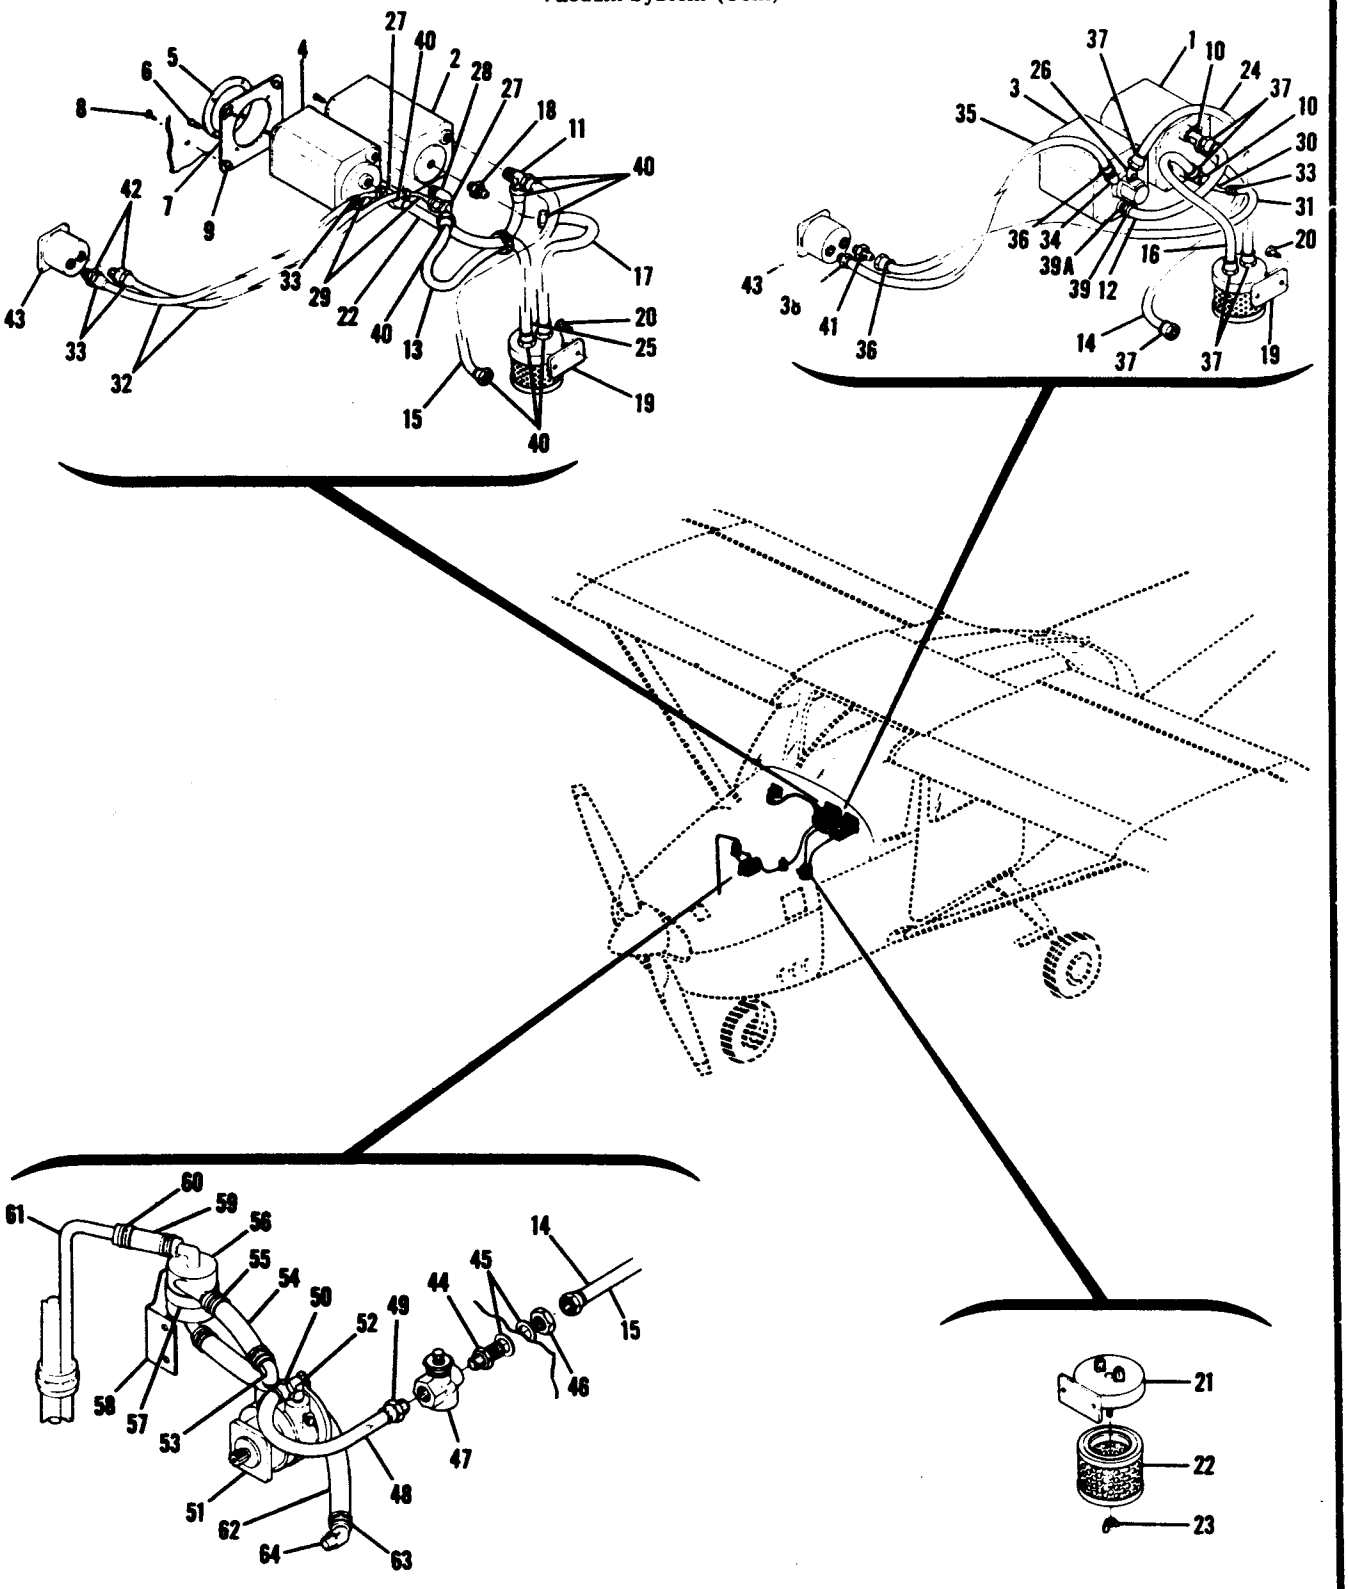

182 SERIAL 18257626 THRU 18258505

Figure 88A. Vacuum System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
88A-		VACUUM SYSTEM INSTALLATION	NP	A
- 1	C661002-0201	GYRO-DIRECTIONAL NEW	1	
	C661002-0201R	GYRO-DIRECTIONAL RECONDITIONED	1	
- 2	30370-0100	GYRO-DIRECTIONAL ARC	1	
- 3	C661001-0201	GYRO-HORIZON NEW	1	
	C661001-0201R	GYRO-HORIZON RECONDITIONED	1	
- 4	30475-0100	GYRO-HORIZON ARC	1	
- 5	2104	RING-INSTRUMENT MOUNTING AUIM	1	
		ATTACHING PARTS		
- 6	AN515-6R12	SCREW	4	
		---*---		
- 7	0713749-6	PLATE ASSEMBLY-INSTRUMENT MOUNTING	1	
		ATTACHING PARTS		
- 8	AN520-10R6	SCREW	4	
		---*---		
- 9	NAS697A3	NUTPLATE	4	
-10	MS20826-6D	TEE	2	
-11	MS20826-6D	TEE	1	
-12	S1495-6	HOSE 4.50 IN LG BULK ITEM REF S1495-6-4.50	1	
-13	S1495-6	HOSE 19.25 IN LG BULK ITEM REF S1495-6-19.25	1	
-14	S1495-6	HOSE 11.00 IN LG BULK ITEM REF S1495-6-11.00	1	
-15	S1495-6	HOSE 11.00 IN LG BULK ITEM REF S1495-6-11.00	1	
-16	S1495-6	HOSE 25.00 IN LG BULK ITEM REF S1495-6-25.00	1	
-17	S1495-6	HOSE *IN LG BULK ITEM REF S1495-6-*	1	
-18	AN816-6D	NIPPLE	1	
-19	C294501-0101	FILTER ASSEMBLY	1	
		ATTACHING PARTS		
-20	AN3-3A	BOLT	2	
		---*---		
-21	C294501-0102	BRACKET	1	
-22	C294501-0103	FILTER ELEMENT	1	
		ATTACHING PARTS		
-23	P2274	NUT-WING DCI	1	
		---*---		
-24	S1499-6	HOSE 25.00 IN LG BULK ITEM REF S1499-6-25.00	1	
-25	S1499-6	HOSE *IN LG BULK ITEM REF S1495-6	1	
-26	MS20823-6D	ELBOW	1	
-27	MS20826-6D	TEE	2	
-28	AN915-2D	ELBOW	1	
-29	1713039-1	ELBOW ASSEMBLY	2	
-30	1713039-1	ELBOW ASSEMBLY	1	
-31	S1495-4	HOSE 36.00 IN LG BULK ITEM REF S1495-4-36.00	1	
-32	S1495-4	HOSE *IN LG BULK ITEM REF S1495-4-*	2	
-33	NAS397-8	CLAMP	2	
-34	MS20823-4D	ELBOW	1	
-35	S1495-4	HOSE 32.00 IN LG BULK ITEM REF S1495-32.00	1	
-36	S1497-4	FITTING-FEMALE	2	
-37	S1497-6	FITTING-FEMALE	7	
-38	S1496-4	FITTING-MALE	1	
-39	S1496-6	FITTING-MALE	1	
-39A	MS20823-6D	ELBOW	1	
-40	S1497-6	FITTING-FEMALE	8	
-41	AN816-4D	NIPPLE	1	
-42	AN816-4D	NIPPLE	2	
-43	S1414N1	GAGE-SUCTION	1	
-44	S1988-1	FITTING	1	
		ATTACHING PARTS		
-45	AN960D916	WASHER	2	
-46	AN924-6D	NUT	1	
		---*---		
-47	C482001-0101	VALVE-VACUUM RELIEF	1	
-48	S1495-6	HOSE 10.50 IN LG BULK ITEM REF S1495-6-10.50	1	
-49	S1496-6A	FITTING-MALE	1	
-50	S1497-6	FITTING-FEMALE	1	
-51	C431001-0101	PUMP-VACUUM	1	
-52	MS20822-6-6	ELBOW	1	
-53	AN842-8	ELBOW	1	
-54	S1495-8	HOSE 4.00 IN LG BULK ITEM REF S1495-8-4.00	1	
		ATTACHING PARTS		
-55	NAS397-14	CLAMP	2	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
88A-56	C165001-0102	OIL SEPARATOR	1	
		ATTACHING PARTS		
-57	AN735D36	CLAMP	1	
	AN520-10R8	SCREW	1	
	MS21044N3	NUT	1	
		---*---		
-58	0750025-1	BRACKET	1	
-59	S1495-8	HOSE 2.50 IN LG BULK ITEM REF S1495-8-2.50	1	
		ATTACHING PARTS		
-60	NAS397-14	CLAMP	2	
		---*---		
-61	0700099-42	LINE-VENT	1	
-62	S1495-8	HOSE 7.00 IN LG BULK ITEM REF S1495-8-7.00	1	
		ATTACHING PARTS		
-63	NAS397-14	CLAMP	2	
		---*---		
-64	AN844-8	ELBOW	1	
		A---182 SERIAL 18257626 THRU 18258505 A182 SERIAL A182-0057 THRU A182-0096		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
88B-		VACUUM SYSTEM INSTALLATION	NP	A
- 1	C661001-0501 *	GYRO-HORIZON WEU C661001-0505	1	
	C661001-0502 *	GYRO-HORIZON	1	
	C661001-0503 *	GYRO-HORIZON	1	
	C661001-0504 *	GYRO-HORIZON	1	
	C661001-0505 *	GYRO-HORIZON	1	
		ATTACHING PARTS		
- 2	AN520-6R6	SCREW	4	
		---*---		
- 3	C661002-0501 **	GYRO-DIRECTIONAL WEU C661002-0505	1	
	C661002-0301 **	GYRO-DIRECTIONAL	1	
	C661002-0503 **	GYRO-DIRECTIONAL WEU C661002-0506	1	
	C661002-0504 **	GYRO-DIRECTIONAL	1	
	C661002-0505 **	GYRO-DIRECTIONAL	1	
	C661002-0506 **	GYRO-DIRECTIONAL	1	
		ATTACHING PARTS		
- 4	AN520-6R6	SCREW	3	
		---*---		
- 5	37570-0001	GYRO-HORIZON ARC	1	
		ATTACHING PARTS		
- 6	AN520-6R10	SCREW	4	
		---*---		
- 7	30370-0100	GYRO-DIRECTIONAL ARC	1	
		ATTACHING PARTS		
- 8	AN520-6R10	SCREW	3	
		---*---		
- 9	MS20825-6D	TEE NAV-O-MATIC 400	3	
-10	MS20825-6D	TEE	2	
-11	S1495-6	HOSE 11.65 IN LG BULK ITEM REF S1495-6-11.65 FROM HORIZON GYRO TO DIRECTIONAL GYRO	1	
-12	S1495-6	HOSE 25.00 IN LG BULK ITEM REF S1495-6-25.00 FROM HORIZON GYRO TO FILTER	1	B
	S1495-6	HOSE 14.75 IN LG BULK ITEM REF S1495-6-14.75 FROM HORIZON GYRO TO FILTER	1	C
-13	S1495-6	HOSE 25.00 IN LG BULK ITEM REF S1495-6-25.00 FROM DIRECTIONAL GYRO TO LH SIDE OF FILTER	1	B
	S1495-6	HOSE 14.75 IN LG BULK ITEM REF S1495-6-14.75 FROM DIRECTIONAL GYRO TO LH SIDE OF FILTER	1	C
-14	C294501-0101	FILTER ASSEMBLY	1	
		ATTACHING PARTS		
-15	AN3-3A	BOLT	2	
		---*---		
-16	C294501-0102	BRACKET	1	
-17	C294501-0103	FILTER ELEMENT	1	
		ATTACHING PARTS		
-18	P2274	NUT-WING	1	
		---*---		

CONTINUED ON NEXT PAGE

Vacuum System (Cont)

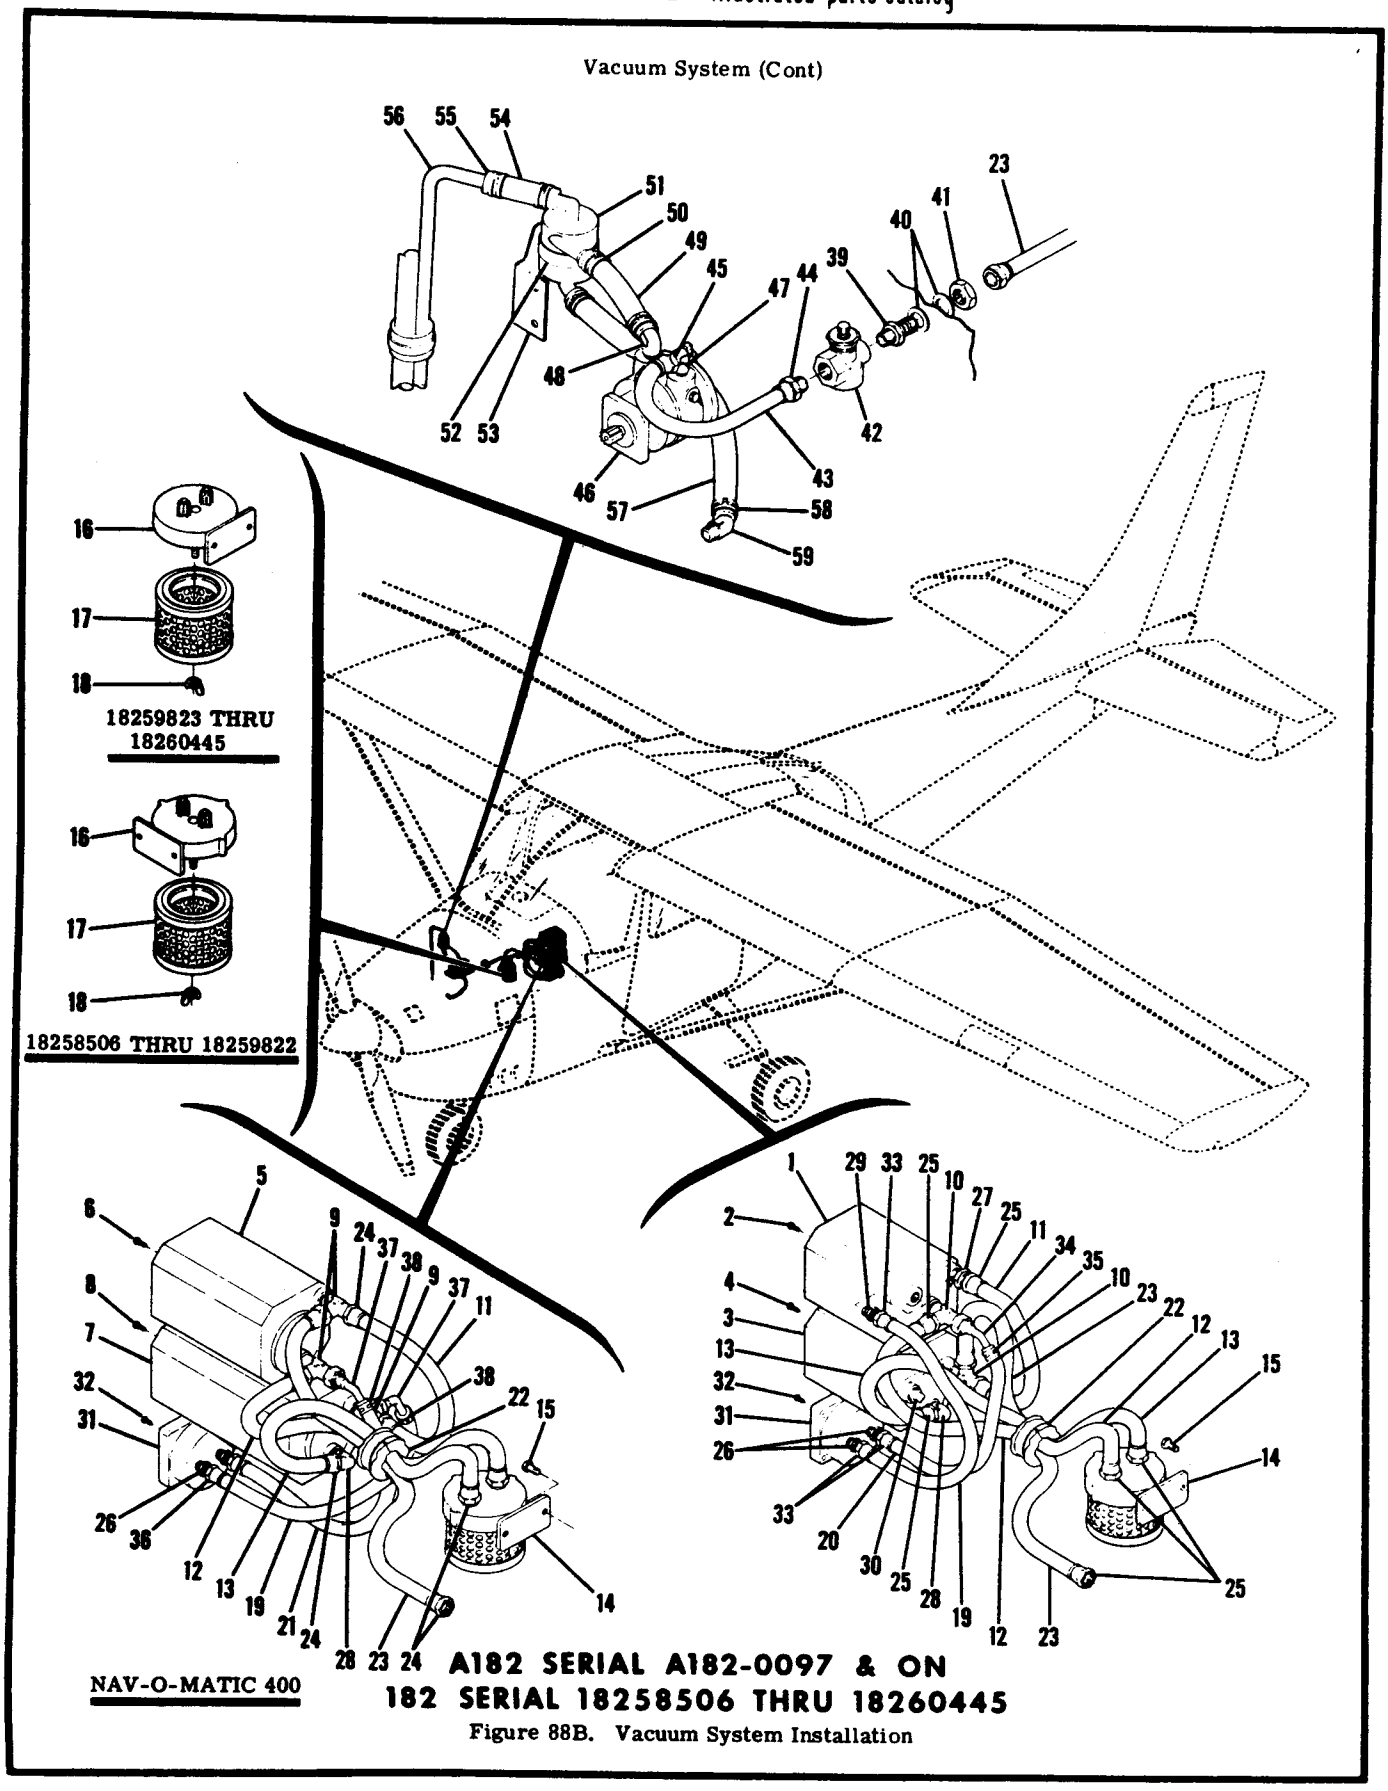


Figure 88B. Vacuum System Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
888-19	S1495-4	HOSE 13.50 IN LG BULK ITEM REF S1495-4-15.50 FROM DIRECTIONAL GYRO TO SUCTION GAGE	1	
-20	S1691-1	HOSE 14.75 IN LG BULK ITEM REF S1691-1-14.75 FROM HORIZON GYRO TO SUCTION GAGE	1	
-21	S1691-1	HOSE 12.25 IN LG BULK ITEM REF S1691-1-12.25 FROM HORIZON GYRO TO SUCTION GAGE NAV 400	1	8
-22	S1590-6	BAND	1	
-23	S1495-6	HOSE 15.15 IN LG BULK ITEM REF S1495-6-15.15	1	
-24	S1497-6	FITTING-FEMALE	8	
-25	S1497-6	FITTING-FEMALE	8	
-26	AN816-4D	NIPPLE	2	
-27	AN816-6D	NIPPLE NOT USED ON NAV-O-MATIC 400	1	
-28	MS20822-6D	ELBOW 90 DEGREE	1	
-29	AN816-4D	NIPPLE	1	
-30	MS20913-1D	PLUG	1	
	MS20913-2D	PLUG	1	
-31	S1414N1	GAGE-SUCTION		
		ATTACHING PARTS		
-32	AN51586R12	SCREW	4	
		---*---		
-33	S1497-4	FITTING	3	
-34	1713039-1	ELBOW ASSEMBLY	1	
-35	NAS397-8	CLAMP	1	
-36	S1497-4	FITTING	2	
-37	1713039-1	ELBOW ASSEMBLY	2	
-38	NAS397-8	CLAMP	2	
-39	S1988-1	FITTING	1	
		ATTACHING PARTS		
-40	AN960D916	WASHER	2	
-41	AN924-6D	NUT	1	
		---*---		
-42	C482001-0101	VALVE-VACUUM RELIEF	1	
-43	S1495-6	HOSE 10.50 IN LG BULK ITEM REF S1495-6-10.50	1	
-44	S1496-6A	FITTING-MALE	1	
-45	S1497-6	FITTING-FEMALE	1	
-46	C431001-0101	PUMP-VACUUM	1	
-47	MS20822-6-6	ELBOW	1	
-48	AN842-8	ELBOW	1	
-49	S1495-8	HOSE 4.00 IN LG BULK ITEM REF S1495-8-4.00	1	
		ATTACHING PARTS		
-50	NAS397-14	CLAMP	2	
		---*---		
-51	C165001-0102	OIL SEPARATOR	1	
		ATTACHING PARTS		
-52	AN735D36	CLAMP	1	
	AN520-10R8	SCREW	1	
	MS21044N3	NUT	1	
		---*---		
-53	0750025-1	BRACKET	1	
-54	S1495-8	HOSE 2.50 IN LG BULK ITEM S1495-8-2.50	1	
		ATTACHING PARTS		
-55	NAS397-14	CLAMP	2	
		---*---		
-56	0700099-42	LINE-VENT	1	
-57	S1495-8	HOSE 7.00 IN LG BULK ITEM S1495-8-7.00	1	
		ATTACHING PARTS		
-58	NAS397-14	CLAMP	2	
		---*---		
-59	AN844-8	ELBOW	1	

NOTE. *THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.

NOTE. **THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.

A---182 SERIAL 18258506 THRU 18260445
A182 SERIAL A182-0097 THRU A182-0117
B---182 SERIAL 18258506 THRU 18259822
A182 SERIAL A182-0097 THRU A182-0116
C---182 SERIAL 18259823 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136

Vacuum System (Cont)

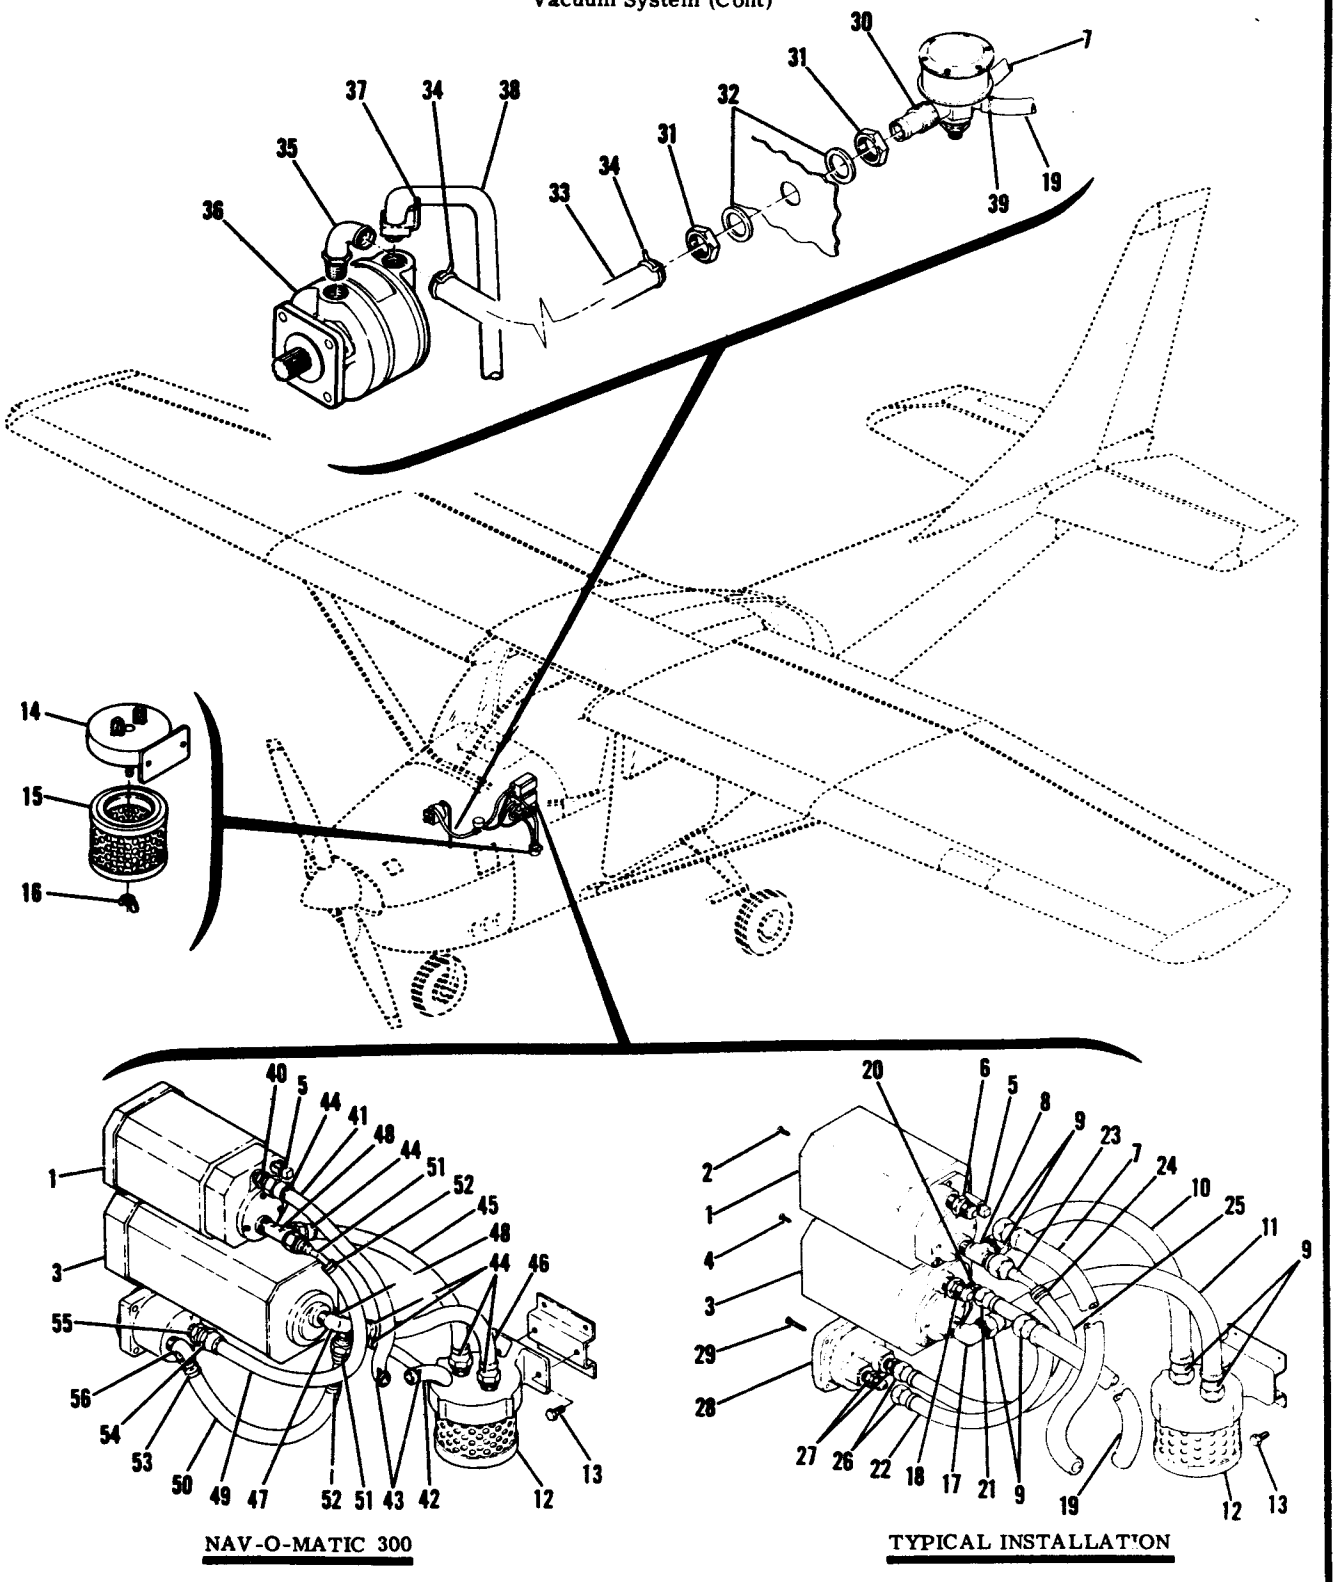

NAV-O-MATIC 300

TYPICAL INSTALLATION

182 SERIAL 18260446 THRU 18262465

Figure 88C. Vacuum System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
88C-		VACUUM SYSTEM INSTALLATION	NP	A
- 1	C661001-0505 **	GYRO-HORIZON WEU C661076-0104	1	B
	C661001-0503 **	GYRO-HORIZON WEU C661076-0102	1	B
	C661001-0504 **	GYRO-HORIZON WEU C661076-0103	1	B
	C661076-0102 **	GYRO HORIZON	1	C
	C661076-0103 **	GYRO-HORIZON ALTERNATE	1	C
	C661076-0104 **	GYRO-HORIZON ALTERNATE	1	C
	C661076-0101 **	GYRO-HORIZON ALTERNATE	1	
		ATTACHING PARTS		
- 2	AN515-6R6	SCREW	4	
		---*---		
- 3	C661002-0505 %	GYRO-DIRECTIONAL WEU C661075-0102	1	B
	C661002-0506 %	GYRO-DIRECTIONAL WEU C661075-0101	1	B
	C661002-0504 %	GYRO-DIRECTIONAL WEU C661075-0103	1	B
	30370-0102	GYRO-DIRECTIONAL ARC NAV-O-MATIC 300	1	D
	4C760-0104	GYRO-DIRECTIONAL ARC NAV-O-MATIC 300	1	E
	C661075-0102 %	GYRO-DIRECTIONAL	1	C
	C661075-0101 %	GYRO-DIRECTIONAL ALTERNATE	1	C
	C661075-0103 %	GYRO-DIRECTIONAL ALTERNATE	1	C
	C661075-0104 %	GYRO-DIRECTIONAL ALTERNATE	1	
	C661075-0105 %	GYRO-DIRECTIONAL WITH HEADING REFERENCE	1	
- 4	AN515-6R6	SCREW	4	
	AN515-6R10	SCREW ATTACH 4C760-0104 ONLY	3	
	AN515-6R12	SCREW ATTACH 30370-0102 ONLY	3	
- 5	MS20913-1D	PLUG	1	
- 6	AN816-6D	NIPPLE	1	
- 7	S1495-6	HOSE-12.00 IN LG 8KI REF S1499-6L-12.00 FROM HORIZON GYRO TO RELIEF VALVE	1	
- 8	MS20826-6D	TEE	6	
- 9	S1497-6	FITTING-SOCKETLESS	1	
-10	S1495-6	HOSE-14.75 IN LG 8KI REF S1499-6LL-14.75 FROM HORIZON GYRO TO FILTER	1	
-11	S1495-6	HOSE-14.75 IN LG 8KI REF S1499-6LL-14.75 FROM DIRECTIONAL GYRO TO FILTER	1	
-12	C294501-0101	FILTER ASSEMBLY	1	
		ATTACHING PARTS		
-13	AN3-3A	BOLT	2	
		---*---		
-14	C294501-0102	BRACKET	1	
-15	C294501-0103	FILTER ELEMENT	1	
		ATTACHING PARTS		
-16	P2274	NUT-WING	1	
		---*---		
-17	MS20822-6D	ELBOW	1	
-18	AN816-6D	ELBOW NOT USED ON NAV 300	1	
	MS20826-6D	TEE NAV 300 ONLY	1	
	1713039-1	ELBOW ASSEMBLY NAV 300 ONLY	1	
	NAS397-8	CLAMP NAV 300 ONLY	1	
-19	S1495-6	HOSE-12.00 IN LG 8KI REF S1499-6L-12.00 FROM DIRECTIONAL GYRO TO RELIEF VALVE	1	
-20	AN816-4D	NIPPLE NOT USED ON NAV 300	1	
-21	S1497-4	FITTING-SOCKETLESS NOT USED ON NAV 300	1	
-22	S1495-4	HOSE-13.50 IN LG 8KI REF S1499-4JJ-13.50 FROM DIRECTIONAL GYRO TO SUCTION GAGE	1	
	S1495-4	HOSE-9.00 IN LG 8KI REF S1691-1-9.00 NAV 300 ONLY FROM DIRECTIONAL GYRO TO SUCTION GAGE	1	
-23	1713039-1	ELBOW ASSEMBLY	1	
-24	NAS397-8	CLAMP	1	
-25	S1495-4	HOSE-14.75 IN LG 8KI REF S1691-1-14.75 FROM HORIZON GYRO TO SUCTION GAGE	1	
-26	S1497-4	FITTING-SOCKETLESS	2	
-27	AN816-4D	NIPPLE	2	
-28	C668540-0101	GAGE-SUCTION	1	
		ATTACHING PARTS		
-29	AN515B6R12	SCREW	4	
		---*---		
-30	C482001-0401	VALVE-VACUUM RELIEF	1	
		ATTACHING PARTS		
-31	AN924-10D	NUT	2	
-32	AN960PD1416L	WASHER	2	
		---*---		

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
88C-33	S51-10	HOSE-48.00 IN LG BKI REF S51-10-48.00	1	
		ATTACHING PARTS		
-34	S1494-16	CLAMP	2	
		---*---		
-35	1K1-6-10	ELBOW AIRB	1	
-36	C431003-0102	PUMP-VACUUM	1	
	C431003-0301	PUMP-VACUUM ALTERNATE	1	
	AN912-4D	BUSHING USED WITH C431003-0301	2	
-37	1250319-1	LOCATOR	1	
-38	1K66-1	TUBE ASSY-DRAIN	1	
-39	S1494-9	CLAMP	2	
-40	AN816-6D	NIPPLE	1	E
-41	S1495-6	HOSE-10.50 IN LG BKI REF S1499-6L-10.50	1	E
		FROM HORIZON GYRO TO RELIEF VALVE		
-42	S1495-6	HOSE-7.25 IN LG BKI REF S1499-6L-7.25	1	E
		FROM DIRECTIONAL GYRO TO RELIEF VALVE		
-43	S1494-6	CLAMP	2	E
-44	S1497-6	FITTING-SOCKETLESS	6	E
-45	S1495-6	HOSE-12.00 IN LG BKI REF S1499-6LL-12.00	1	E
		FROM HORIZON GYRO TO FILTER		
-46	S1495-6	HOSE-12.00 IN LG BKI REF S1499-6LL-12.00	1	E
		FROM DIRECTIONAL GYRO TO FILTER		
-47	MS20823-6D	ELBOW	1	E
-48	MS20826-6D	TEE	2	E
-49	S1495-4	HOSE-17.50 IN LG BKI REF S1691-1-17.50	1	E
		HORIZON GYRO TO SUCTION GAGE		
-50	S1495-4	HOSE-10.00 IN LG BKI REF S1691-2-10.00	1	E
		DIRECTIONAL GYRO TO SUCTION GAGE		
-51	1713039-1	ELBOW ASSEMBLY	2	E
-52	NAS397-8	CLAMP	2	E
-53	S1963-2	STA-STRAP ALSO ALTERNATE FOR NAS397-8	1	E
-54	S1497-4	FITTING-SOCKETLESS	1	E
-55	AN816-4D	NIPPLE	1	E
-56	AN844-4D	ELBOW	1	E

NOTE. **THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.

NOTE. ΣTHESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.

A---182 SERIAL 18260446 THRU 18262465
A182 SERIAL 182-0137 & ON
B---182 SERIAL 18260446 THRU 18260825
C---182 SERIAL 18260826 THRU 18262465
A182 SERIAL A182-0137 & ON
D---182 SERIAL 18260826 THRU 18261425
A182 SERIAL A182-0137 & ON
E---182 SERIAL 18261426 THRU 18262465

Oxygen System

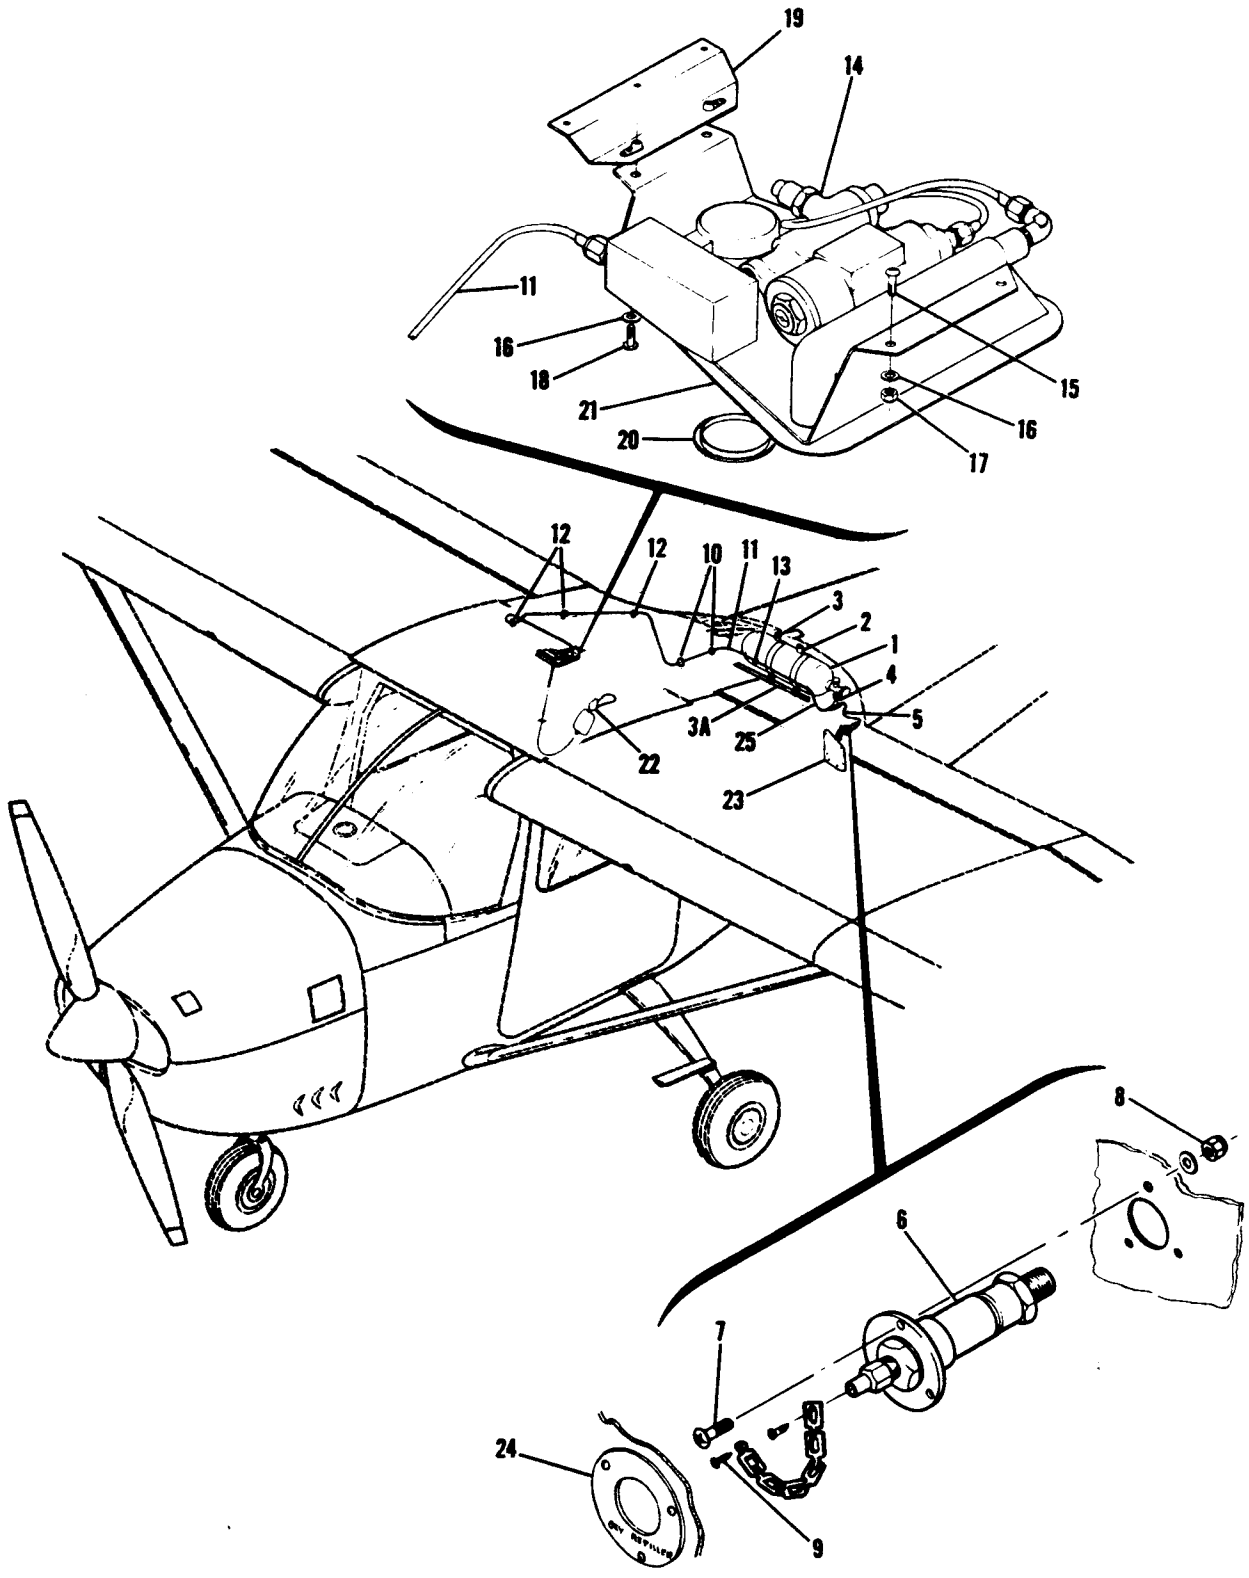


182 SERIAL 18253599 THRU 18255844

Figure 89. Oxygen System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
89 -		OXYGEN SYSTEM INSTALLATION	NP	C
- 1	1200058-1	CYLINDER & VALVE ASSEMBLY	1	
- 2	C166007-0102	MOUNTING BRACKET ASSEMBLY	2	
		ATTACHING PARTS		
- 3	AN3-4A	BOLT	2	A
	AN3-4A	BOLT LOWER ATTACHMENT	1	B
	AN3-11A	BOLT UPPER ATTACHMENT	1	B
	MS21044N3	NUT	2	
	AN960D10	WASHER	2	A
	0700613-2	SPACER-OXYGEN CYLINDER	2	A
	0700696-2	SPACER UPPER ATTACHMENT	1	B
		---*---		
- 3A	0700698-1	CHANNEL	1	B
		ATTACHING PARTS		
	AN3-11A	BOLT	2	B
	0700696-1	SPACER	2	B
	MS21044N3	NUT	2	B
		---*---		
- 4	0800045-15	TEE	1	
- 5	0800045-1	LINE ASSEMBLY-TEE TO REFILL VALVE	1	
- 6	C166008-0101	VALVE ASSEMBLY-FILLER	1	
		ATTACHING PARTS		
- 7	AN525-832R8	SCREW	3	
	AN960D8	WASHER	3	
- 8	NAS679A08	NUT	3	
		---*---		
- 9	S1021Z4-6	SCREW	1	
-10	MS35489-134S	GROMMET	2	A
	MS35489-134S	GROMMET	1	B
-11	0800045-25	LINE ASSEMBLY-TEE TO OXYGEN SYSTEM ASSEMBLY	1	
		ATTACHING PARTS		
-12	MS21919DG5	CLAMP	3	
	S1155-4	CLAMP	3	B
	S1021Z8-8	SCREW	3	A
	S1021Z8-8	SCREW	6	B
	NAS446-4-3	NUT-FLAT SPRING	3	
-13	S1486DG3U	CLAMP	1	
	S1021Z8-8	SCREW	1	
		---*---		
-14	1200055-1	OXYGEN SYSTEM ASSEMBLY-AUTOMATIC	1	
		ATTACHING PARTS		
-15	AN525-10R7	SCREW	2	
-16	AN960D10	WASHER	4	
-17	MS21044N3	NUT	2	
-18	AN520-10R7	SCREW	2	
-19	1200052-1	SUPPORT ASSEMBLY	1	
		---*---		
-20	1200055-3	RING-RETAINER	1	
-21	1200055-6	COVER PLATE	1	
	1200055-5	DECAL	1	
-22	1200059-1	OXYGEN MASK ASSEMBLY	4	
	0800030-19	CASE-OXYGEN MASK	1	
-23	0700613-4	COVER PLATE ASSEMBLY	1	A
	0700697-1	COVER PLATE ASSEMBLY	1	B
		ATTACHING PARTS		
	XX49330K2215	RIVET STUD UC	8	A
	S1878-1	RIVET STUD UC	8	B
		---*---		
-24	1200054-3	RETAINER-UPHOLSTERY	1	
-25	S292-14	SLEEVE-INSULATION 48.0 IN LG BULK ITEM	1	
		REF S-292-14-48.0		

A---182 SERIAL 18254424 THRU 18255058
B---182 SERIAL 18255059 THRU 18255844
C---182 SERIAL 18253599 THRU 18255844

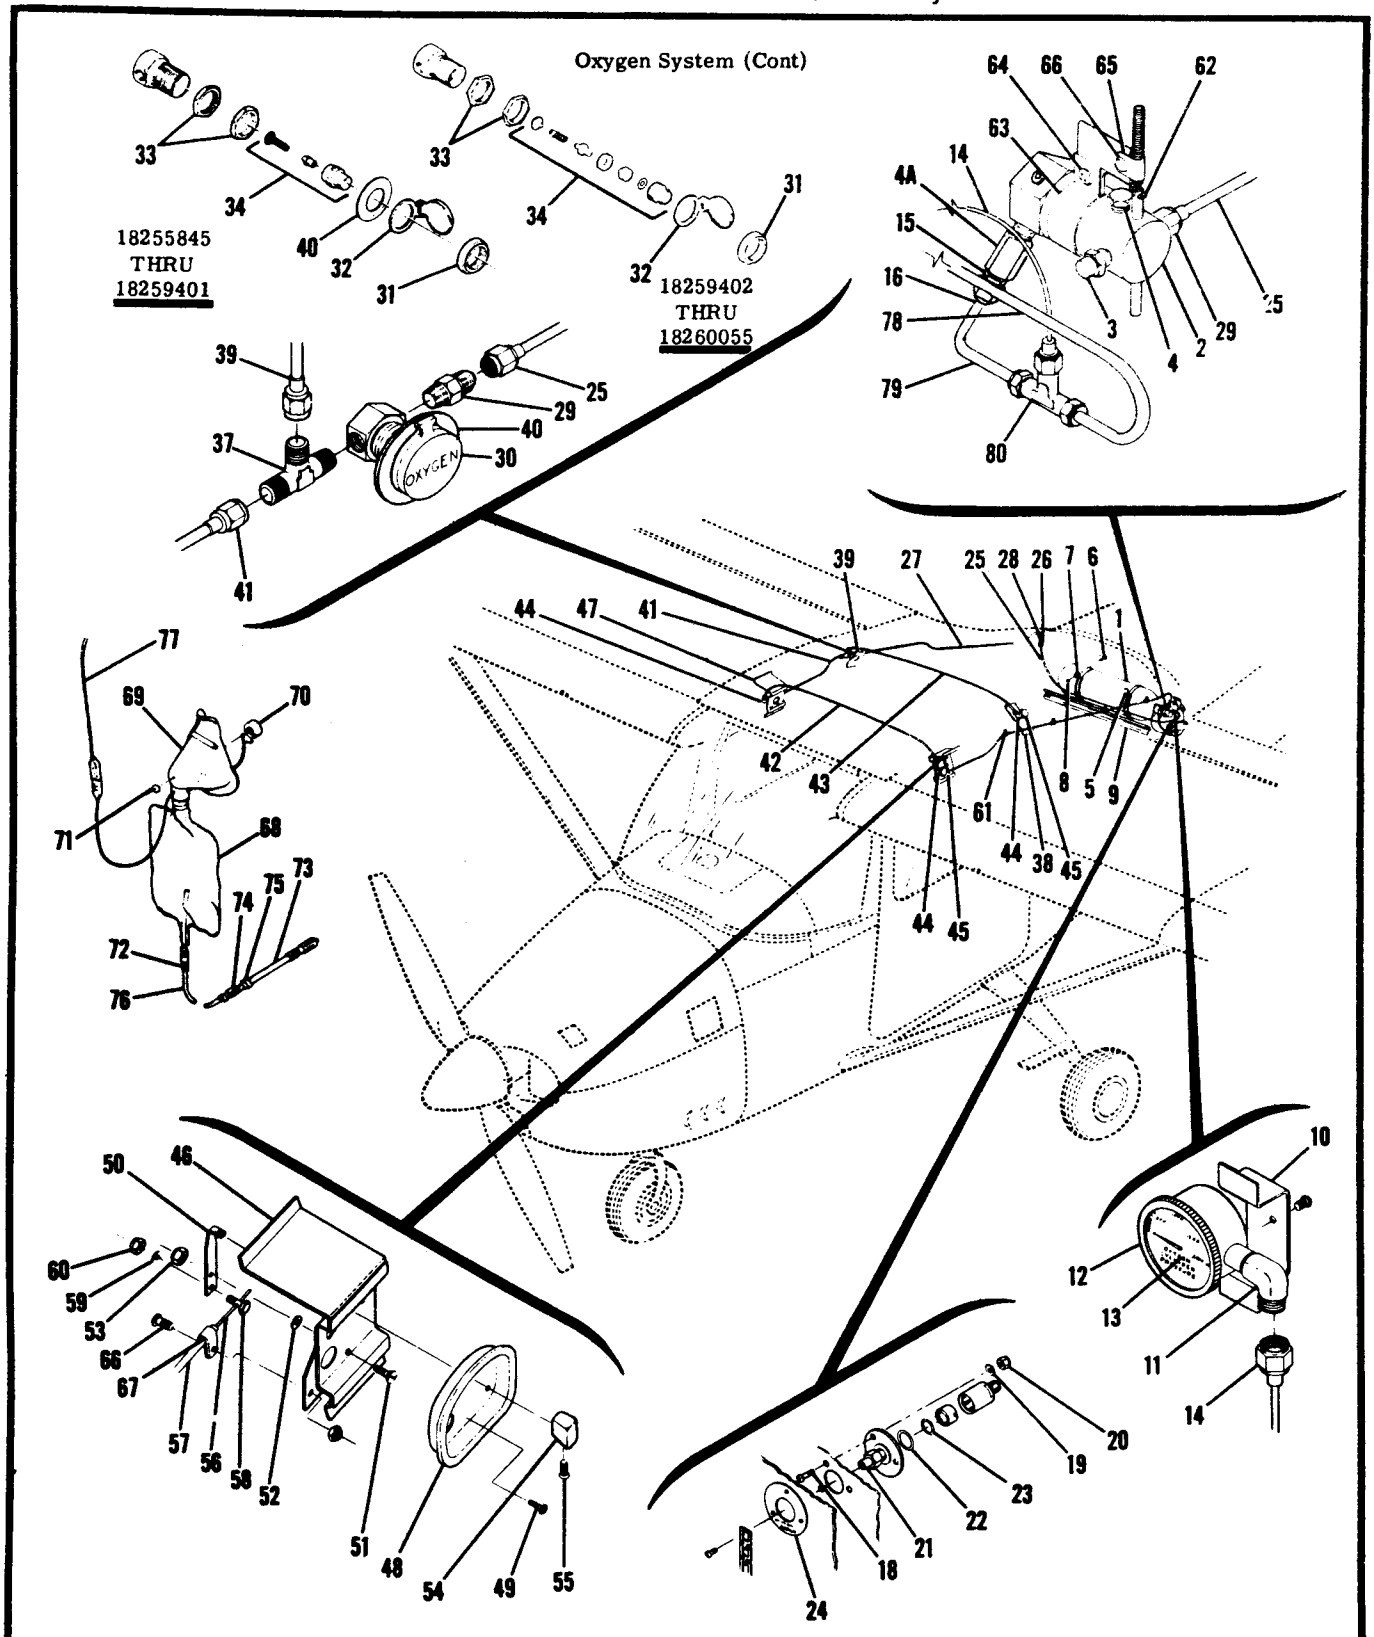

182 SERIAL 18255845 THRU 18260055

Figure 89A. Oxygen System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
89A-		OXYGEN SYSTEM INSTALLATION	NP	A
- 1	C166001-0104	CYLINDER & REGULATOR ASSEMBLY-OXYGEN 48 CU FT	1	F
- 2	C166002-0101	REGULATOR ASSEMBLY-OXYGEN VALVE	1	
- 3	C166002-0104	RELIEF VALVE-LOW PRESSURE	1	
	C166002-0103	RELIEF VALVE-HIGH PRESSURE	1	
- 4	AN932S2	PLUG	2	
- 4A	ZF604	ADAPTER	1	G
- 5	C166007-0102	BRACKET-CYLINDER MOUNTING	2	
		ATTACHING PARTS		
- 6	AN3-11A	BOLT UPPER	1	
- 7	0700696-2	SPACER UPPER	1	
- 8	MS21044N3	NUT	2	
		---*---		
- 9	0700698-2	CHANNEL-CYLINDER SUPPORT	1	
		ATTACHING PARTS		
	AN3-11A	BOLT	4	
	0700696-1	SPACER	4	
	MS21044N3	NUT	4	
		---*---		
	C166010-0101	GAGE ASSEMBLY-PRESSURE	1	
		ATTACHING PARTS		
-10	0700735-1	SUPPORT	1	
		---*---		
-11	S1529-1	ELBOW	1	
-12	C166010-0103	BEZEL	1	
-13	C166010-0102	GAGE	1	
-14	C166010-0105	LINE ASSEMBLY-PRESSURE GAGE	1	
-15	0800045-11	NIPPLE	2	F
-16	0800045-24	LINE ASSEMBLY-OXYGEN	1	F
-17	C166008-0101	VALVE ASSEMBLY-OXYGEN FILLER	1	
		ATTACHING PARTS		
-18	AN525-832R8	SCREW	3	
-19	AN960D8	WASHER	3	
-20	NAS679A08	NUT	3	
		---*---		
-21	S1520-1	CAP & CHAIN ASSEMBLY	1	
-22	2-11	O RING PKSC	1	
-23	2-15	O RING PKSC	1	
-24	1200054-3	RETAINER-UPHOLSTERY	1	
-25	1200417-15	LINE ASSEMBLY-OXYGEN	1	
-26	AN815-4D	UNION	1	
-27	1200417-9	LINE ASSEMBLY-OXYGEN	1	
-28	MS35489-13S	GROMMET	1	
-29	AN816-4D	NIPPLE	3	
-30	C166006-0101	VALVE-OXYGEN PORT WHEN EXHAUSTED USE C166006-0104	1	K
	C166006-0104	VALVE-OXYGEN PORT	1	L
-31	Z651-3	LOCK RING ZEP	1	
-32	Z651-1	COVER ASSEMBLY ZEP	1	
-33	Z651-13	NUT-JAMB ZEP	2	
-34	C166006-0108	REPAIR KIT-OXYGEN OUTLET	1	
-35	23-4677C	ADAPTER ZEPA	1	L
-36		DELETED-NOT AVAILABLE		
-37	MS20826-4D	TEE	1	
-38	0700730-1	BRACKET-VALVE LH	1	
-39	0700730-2	BRACKET-VALVE RH	1	
-40	1200415-7	ESCUTCHEON	1	
-41	1200417-7	LINE ASSEMBLY-OXYGEN	1	D
	1200417-25	LINE ASSEMBLY-OXYGEN	1	E
-42	1200417-8	LINE ASSEMBLY-OXYGEN	2	
-43	1200417-17	LINE ASSEMBLY-OXYGEN	1	D
	1200417-26	LINE ASSEMBLY-OXYGEN	1	E
-44	MS20822-4D	ELBOW	3	
-45	MS20913-1D	PLUG	2	
-46	0700729-1	BRACKET-LH	1	
-47	0700729-2	BRACKET-RH	1	
-48	1200536-1	COVER PILOT ONLY	1	
		ATTACHING PARTS		
-49	AN515-6R6	SCREW	2	
		---*---		
-50	0700732-1	LEVER-SHUT OFF VALVE	1	
		ATTACHING PARTS		
-51	AN525-10R7	SCREW	1	
-52	AN960-10L	WASHER	1	
-53	MS21044N3	NUT	1	
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
89A-54	0813808-2	KNOB-CONTROL LEVER	1	
		ATTACHING PARTS		
-55	S1022Z4-8	SCREW	1	
		---*---		
-56	S1398-1-	WIRE 78 IN LG BULK ITEM REF S1398-1-78.0	1	
-57	S1398-2-	CASING 72 IN LG BULK ITEM REF S1398-2-72.0	1	
		ATTACHING PARTS		
-58	0450311-5	CLAMP	1	
-59	AN960-10	WASHER	AR	
-60	MS21044N3	NUT	1	
-61	S1155-3	CLAMP	4	
	S1021Z8-8	SCREW	4	
-62	1200416-4	CLAMP	1	
	AN520C5-4	SCREW	1	
-63	1200415-5	CLAMP	1	
-64	AN520-10R10	SCREW	1	
	MS21044N3	NUT	1	
-65	S1155-3	CLAMP	2	
-66	AN515-8R8	SCREW	2	
	NAS679A08	NUT	2	
-67	MS21919DG3	CLAMP	1	
		---*---		
	C166005-0102	MASK ASSEMBLY-OXYGEN PILOT WHEN EXHAUSTED	1	B
		USE C166005-0402		
	C166005-0101	MASK ASSEMBLY-OXYGEN PASSENGER WHEN EXHAUSTED	1	B
		USE C166005-0501		
	C166005-0501	MASK & LINE ASSEMBLY-PASSENGER WHEN EXHAUSTED	3	H
		USE C166005-0204		
	C166005-0204	MASK & LINE ASSEMBLY-PASSENGER	3	J
	C166005-0504	LINE & FITTING ASSEMBLY-PASSENGER	1	
	ZH727-8	HOSE ASSEMBLY-PASSENGER	1	
	C166009-0501	MASK ASSEMBLY	1	
-68	C166005-0402	MASK & LINE ASSEMBLY-PILOT WITH MICROPHONE	1	C
-69	C166009-0401	MASK ASSEMBLY	1	
-70	AN8-MC1	MICROPHONE	1	
-71	Z736	NUT ZEP	1	
-72	C166005-0505	LINE & FITTING ASSEMBLY	1	
-73	ZH727-14	HOSE ASSEMBLY ZEP	1	
-74	8540-1	FLOW INDICATOR ZEP	1	
-75	Z730-7	CLAMP ZEP	1	
-76	ZH716	HOSE ASSEMBLY ZEP	1	
	X730-4	CLAMP ZEP	2	
	0713245-200	CONTROL WHEEL ASSEMBLY WITH MIKE BUTTON	1	C
-77	0770750-254	CABLE ASSEMBLY-MIKE JACK TO MASK	1	C
-78	S1721-12	LINE ASSEMBLY	1	G
-79	S1723-5	LINE ASSEMBLY	1	G
-80	S1724-1	TEE	1	G


NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18255845 THRU 18260055
B---182 SERIAL 18255845 THRU 18256684
C---182 SERIAL 18256685 THRU 18260055
D---182 SERIAL 18255845 THRU 18256941
E---182 SERIAL 18256942 THRU 18260055
F---182 SERIAL 18256685 THRU 18258036
G---182 SERIAL 18258037 THRU 18260055
H---182 SERIAL 18256685 THRU 18259050
J---182 SERIAL 18259051 THRU 18260055
K---182 SERIAL 18255845 THRU 18259401
L---182 SERIAL 18259402 THRU 18260055

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
89B-		OXYGEN SYSTEM INSTALLATION	NP	A
- 1	C166010-0101	GAGE ASSEMBLY-OXYGEN PRESSURE	1	
	C166010-0103	BEZEL	1	
	C166010-0102	GAGE	1	
- 2	AN910-1	COUPLING	1	
	S2037-1	NIPPLE	1	
- 3	SEE FIG 91A	COVER-SPEAKER OVERHEAD WITH OXYGEN	1	
- 5	1211077-5	SUPPORT ASSEMBLY-SPEAKER		
		ATTACHING PARTS		
- 6	AN507-832R12	SCREW	5	
		---*---		
- 7	NAS679A08	NUTPLATE	6	
- 8	1200415-7	ESCUTCHEON	1	
- 9	1211076-2	BRACKET ASSEMBLY-SPEAKER COVER SUPPORT	1	
		ATTACHING PARTS		
-10	AN507-832R8	SCREW	2	
		---*---		
-11	1211089-2	BRACKET	2	
-12	NAS696A08	NUTPLATE	2	
	NAS697A08	NUTPLATE	3	
-13	1211054-2	BRACKET-OXYGEN OUTLET	1	
-14	1211048-1	SUPPORT-OXYGEN GAGE	1	
-15	1211090-1	LEVER-OXYGEN CONTROL	1	
		ATTACHING PARTS		
-16	AN3-13A	BOLT	1	
-17	NAS43DD-13	SPACER INBOARD	1	
-18	NAS43DD3-45	SPACER OUTBOARD	1	
-19	AN960-10	WASHER	1	
-20	MS21044N3	NUT	1	
		---*---		
-21	S1953-3	KNOB-OXYGEN CONTROL	1	
-22	S1953-1	KNOB ASSEMBLY-OXYGEN CONTROL	1	
		ATTACHING PARTS		
-23	AN507DD440R8	SCREW	1	
		---*---		
-24	S1899-5	LIGHT ASSEMBLY-TAB MOUNT LH	1	
	S1899-6	LIGHT ASSEMBLY-TAB MOUNT RH	1	
-25	0450311	CLAMP	1	
-26		DELETED NEVER USED		
-27	NAS43DD3-6	SPACER	2	
-28	AN960-10	WASHER	1	
-29	MS21044N3	NUT		

CONTINUED ON NEXT PAGE

Oxygen System (Cont)

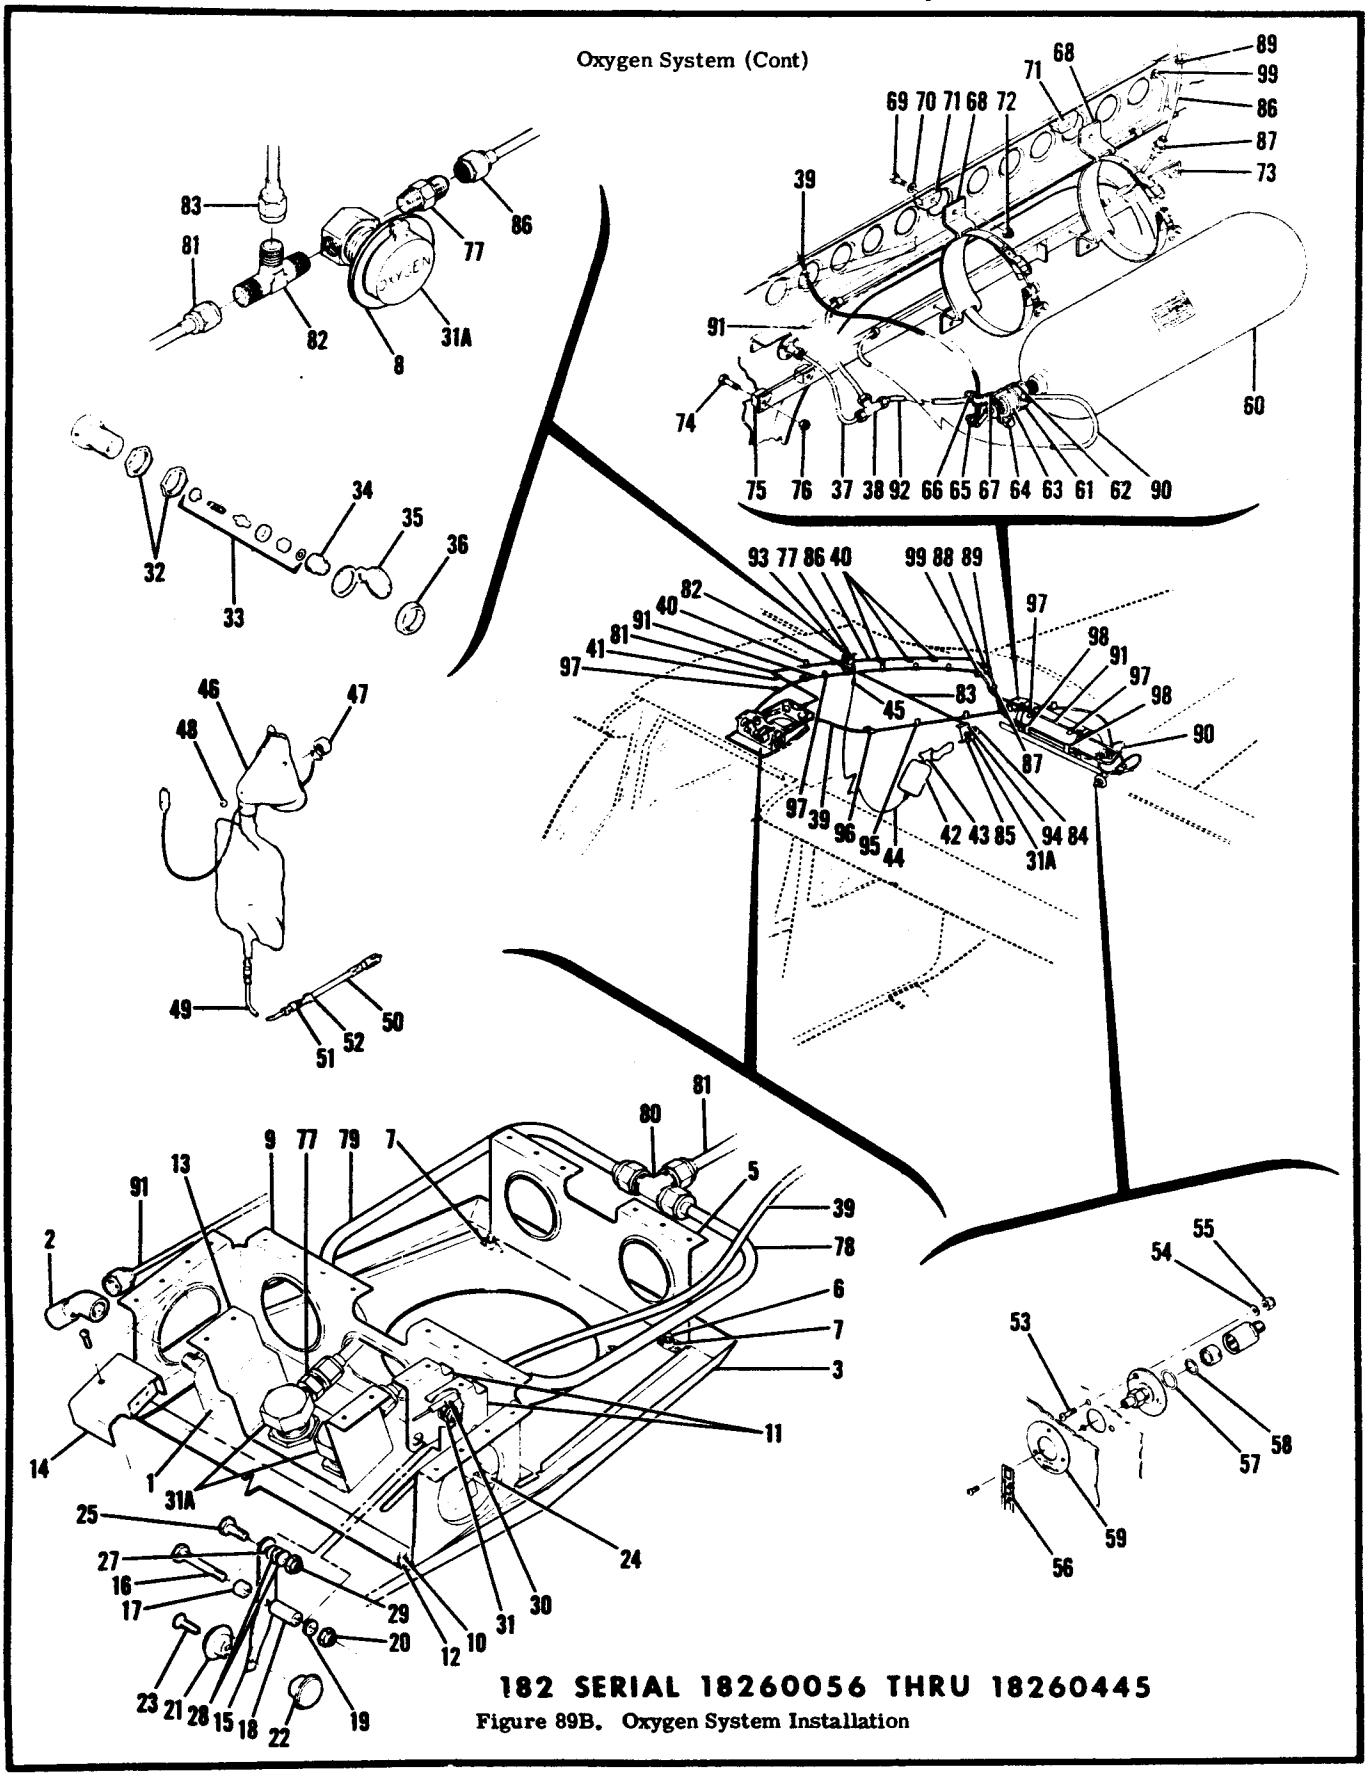

182 SERIAL 18260056 THRU 18260445

Figure 89B. Oxygen System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
898-30	AN742D3	CLAMP	1	
		ATTACHING PARTS		
-31	AN3-5A	BOLT	1	
	NAS43DD3-16	SPACER	1	
	AN960-10	WASHER	1	
	MS21044N3	NUT	1	
		---*---		
-31A	C166006-0104	VALVE OUTLET ASSEMBLY-OXYGEN	4	B
	C166006-0109	VALVE OUTLET ASSEMBLY-OXYGEN	4	C
-32	Z651-13	NUT ZEPA	2	
-33	C166006-0108	REPAIR KIT-OXYGEN OUTLET	1	
-34	Z651-3	ADAPTER ZEPA	1	
-35	Z651-1	COVER ASSEMBLY-OXYGEN VALVE ZEPA	1	
-36	10-4677C	RETAINER ZEPA	1	
-37	S1721-12	LINE ASSEMBLY	1	
-38	S1724-1	TEE	1	
-39	S1398-1	WIRE-CONTROL 102.00 IN LG BKI REF S1398-1-102.00	1	
	S1398-2	CASING-CONTROL 99.00 IN LG BKI REF S1398-2-99.00	1	
-40	S1155-4	CLAMP	4	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	1	
		---*---		
-41	S1155-4	CLAMP	1	
		ATTACHING PARTS		
	S1021Z6-6	SCREW	1	
		---*---		
	0800030-19	CASE ASSEMBLY-OXYGEN MASK NOT ILLUSTRATED	4	
-42	C166005-0204	MASK & LINE ASSEMBLY-PASSENGER	3	
-43	C166005-0205	MASK ASSEMBLY	1	
	C166005-0504	LINE & FITTING ASSEMBLY-PASSENGER 8,000-14,000 FT	1	
-44	ZH716	HOSE ASSEMBLY ZEPA	1	
-45	ZH727-8	LINE & FITTING ASSEMBLY-8,000-14,000 FT ZEPA	1	
	C166005-0402	MASK & LINE ASSEMBLY-PILOT WITH MICROPHONE	1	
-46	C166009-0401	MASK ASSEMBLY	1	
-47	ANB-MC1	MICROPHONE ZEPA	1	
-48	Z736	NUT	1	
	C166005-0505	LINE & FITTING ASSEMBLY 14,000-22,000 FT	1	
-49	ZH716	HOSE ASSEMBLY ZEPA	2	
	Z730-4	CLAMP ZEP	1	
-50	ZH727-14	LINE & FITTING ASSEMBLY-14,000-22,000 FT ZEPA	1	
-51	8540-1	FLOW INDICATOR ZEPA	1	
-52	Z730-7	CLAMP ZEPA	1	
	C166008-0101	VALVE ASSEMBLY-FILLER REMOTE OXYGEN	1	
		ATTACHING PARTS		
-53	AN525-832R8	SCREW	3	
-54	AN960D8	WASHER	3	
-55	NAS679A08	NUT	3	
		---*---		
-56	S1520-1	CAP & CHAIN ASSEMBLY	1	
-57	2-11	O RING PKSC	1	
-58	2-15	O RING PKSC	1	
-59	1200054-3	RETAINER-UPHOLSTERY	1	
-60	C166001-0601	CYLINDER & REGULATOR ASSEMBLY-OXYGEN	1	
-61	C166002-0401	REGULATOR ASSEMBLY-OXYGEN	1	
-62	12-4862	PLUG ZEPA	1	
	AN932-S2	PLUG	2	
-63	91-8000AC	BRACKET ASSEMBLY ZEPA	1	
		ATTACHING PARTS		
-64	97NTE-048	NUT ZEPA	1	
	16-2000C	BOLT ZEPA	1	
		---*---		
-65	10-8001C	NUT ZEPA	1	
	16-8375C	SET SCREW ZEPA	1	
-66	10-8001C	NUT ZEPA	1	
	16-8500C	SET SCREW ZEPA	1	
-67	ZF604	ADAPTER ZEPA	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
998-68	C166007-0102	BRACKET ASSEMBLY-CYLINDER MOUNTING	2	
		ATTACHING PARTS		
-69	AN3-11A	BOLT UPPER ONLY	1	
	AN3-4A	BOLT LOWER ONLY	1	
-70	AN970-3	WASHER UPPER ONLY	1	
-71	0700696-2	SPACER UPPER ONLY	1	
-72	MS21044N3	NUT UPPER & LOWER	2	
		---*---		
-73	0700698-2	CHANNEL-OXYGEN CYLINDER SUPPORT	1	
		ATTACHING PARTS		
-74	AN3-11A	BOLT	4	
-75	0700696-1	SPACER	4	
-76	MS21044N3	NUT	4	
		---*---		
-77	AN816-4D	NIPPLE	3	
-78	1200417-51	LINE ASSEMBLY	1	
-79	1200417-52	LINE ASSEMBLY	1	
-80	AN824-4D	TEE	1	
-81	1200417-69	LINE ASSEMBLY	1	
-82	MS20826-4D	TEE	1	
-83	1200417-17	LINE ASSEMBLY	1	
-84	MS20822-4D	ELBOW	1	
-85	MS20913-1D	PLUG	1	
-86	1200417-9	LINE ASSEMBLY	1	
-87	AN815-4D	UNION	1	
-88	S292-14	SLEEVING * IN LG BULK ITEM REF S292-14*	AR	
-89	MS35489-13	GROMMET	1	
-90	1200417-15	LINE ASSEMBLY	1	
-91	S1722	LINE ASSEMBLY	1	
-92	S1723-5	LINE ASSEMBLY	1	
-93	0700730-1	BRACKET-OXYGEN OUTLET	1	
-94	0700730-2	BRACKET-OXYGEN OUTLET RH	1	
-95	S1155-3	CLAMP	4	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	1	
		---*---		
-96	S1155-3	CLAMP	1	
		ATTACHING PARTS		
	S1021Z6-6	SCREW	1	
		---*---		
-97	S1155-2	CLAMP	9	
		ATTACHING PARTS		
	S1021Z6-6	SCREW	1	
		---*---		
-98	S1485D3U	CLAMP	2	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	1	
		---*---		
-99	MS35489-1	GROMMET	1	


NOTE. *LENGTH TO BE DETERMINED LATER

A---182 SERIAL 18260056 THRU 18260445
B---182 SERIAL 18260056 THRU 18260191
C---182 SERIAL 18260192 THRU 18260445

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
89C-		OXYGEN SYSTEM INSTALLATION	NP	A
- 1	C166010-0101	GAGE ASSY-OXYGEN PRESSURE	1	
	C166010-0103	BEZEL	1	
	C166010-0102	GAGE	1	
- 2	AN910-1	COUPLING	1	
- 3	S2037-1	NIPPLE	1	
- 4	SEE FIG 91A	COVER-SPEAKER OVERHEAD CONSOLE WITH OXYGEN	1	
- 5	1211077-5	SUPPORT ASSY-SPEAKER	1	
		ATTACHING PARTS		
- 6	AN507-832R12	SCREW	5	
		---*---		
- 7	NAS679A08	NUTPLATE	6	
- 8	1211076-2	BRACKET ASSY-SPEAKER COVER SUPPORT	1	
		ATTACHING PARTS		
- 9	AN515-8-8	SCREW	2	
		---*---		
-10	1211089-2	BRACKET	2	
-11	NAS696A08	NUTPLATE	2	
	NAS697A08	NUTPLATE	3	
-12	1211054-2	BRACKET-OXYGEN OUTLET	1	
-13	1211048-1	SUPPORT-OXYGEN GAGE	1	
-14	1211090-1	LEVER-OXYGEN CONTROL	1	
		ATTACHING PARTS		
-15	AN3-13A	BOLT	1	
-16	NAS43DD3-13	SPACER INBD	1	
-17	NAS43DD3-45	SPACER OUTBD	1	
-18	AN960-10	WASHER	1	
-19	MS21044N3	NUT	1	
		---*---		
-20	S1953-3	KNOB-OXYGEN CONTROL	1	
-21	S1953-1	KNOB ASSY-OXYGEN CONTROL	1	
		ATTACHING PARTS		
-22	AN507DD440R8	SCREW	1	
		---*---		
-23	0450311-5	CLAMP	1	
-24	NAS43DD3-6	SPACER	1	
-25	AN960-10	WASHER	2	
-26	MS21044N3	NUT	1	
-27	AN742D3	CLAMP	1	
		ATTACHING PARTS		
-28		BOLT	1	
	NAS43DD3-9	SPACER	1	
	AN960-10	WASHER	1	
-29	MS21044N3	NUT	1	
		---*---		
-30	C166006-0109	VALVE OUTLET ASSY-OXYGEN	1	
-31	Z651-13	NUT ZEPA	1	
-32	C166006-0108	REPAIR KIT-OXYGEN OUTLET	1	
-33	Z651-3	ADAPTER ZEPA	1	
-34	Z651-1	COVER ASSY-OXYGEN VALVE ZEPA	1	
-35	10-4677C	RETAINER ZEPA	1	
-36	1200415-7	ESCUTCHEON	1	
-37	S1721-12	LINE ASSY	1	
-38	S1724-1	TEE	1	
-39	S1723-5	LINE ASSY	1	
	C166008-0101	VALVE ASSY-FILLER REMOTE OXYGEN	1	
		ATTACHING PARTS		
-40	AN525-832R8	SCREW	3	
-41	AN960D8	WASHER	3	
-42	NAS679A08	NUT	3	
		---*---		
-43	S1520-1	CAP & CHAIN ASSY	1	
-44	2-11	O RING PKSC	1	
-45	2-15	O RING PKSC	1	

CONTINUED ON NEXT PAGE

Oxygen System (Cont)

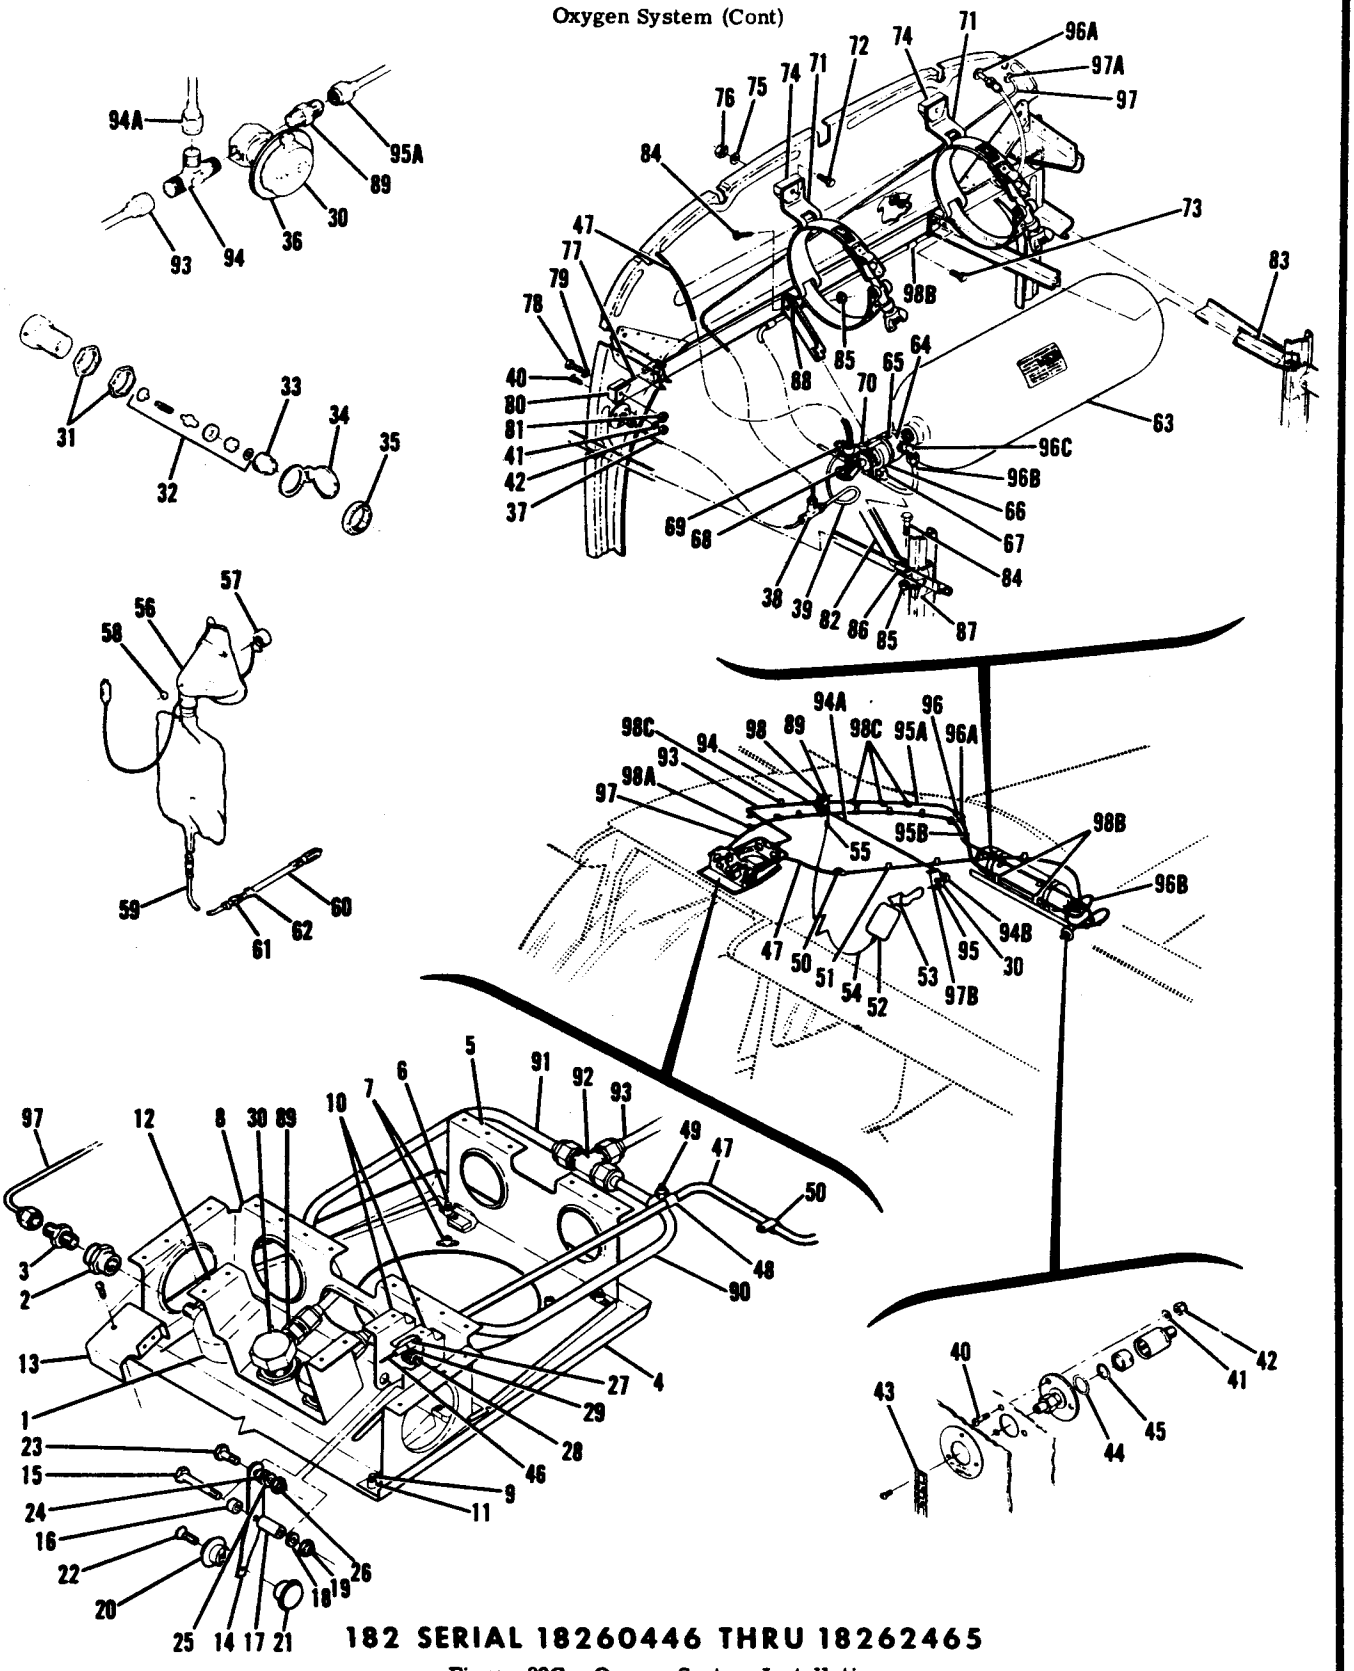

182 SERIAL 18260446 THRU 18262465

Figure 89C. Oxygen System Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
89C-46	S1398-1	WIRE-CONTROL 102.00 IN LG BKI REF S1398-1-102.00-	1	
-47	S1398-2	CASING-CONTROL 99.00 IN LG BKI REF S1398-2-99.00-	1	
		ATTACHING PARTS		
-48	S1155-3	CLAMP	2	
-49	AN520-10R8	SCREW	1	
	AN345-10	NUT	1	
-50	S1155-3	CLAMP	2	
	S1021Z10-6	SCREW	2	
-51	S1153-3	CLAMP	4	
	S1021Z8-8	SCREW	4	
		---*---		
	0800030-19	CASE ASSY-OXYGEN MASK NOT ILLUSTRATED	4	
-52	C166005-0204	MASK & LINE ASSY-PASSENGER	3	
-53		MASK ASSY	1	
	C166005-0504	LINE & FITTING ASSY-PASSENGER 8,000-14,000 FT	1	
-54	ZH716	HOSE ASSY ZEPA	1	
-55	ZH727-8	LINE & FITTING ASSY-8,000-14,000 FT ZEPA	1	
	C166005-0707	MASK & LINE ASSY-PILOT WITH MICROPHONE	1	
-56	C166009-0703	MASK ASSY	1	
-57	64881-00	MICROPHONE	1	
-58	Z736	NUT	1	
	C166005-0705	LINE & FITTING ASSY 14,000-22,000 FT	1	
-59	ZH716	HOSE ASSY ZEPA	1	
	Z730-4	CLAMP EEP	1	
-60	ZH727-14	LINE & FITTING ASSY-14,000-22,000 FT ZEPA	1	
-61	8540-1	FLOW INDICATOR ZEPA	1	
-62	Z730-7	CLAMP ZEPA	1	
-63	C166001-0601	CYLINDER & REGULATOR ASSY-OXYGEN	1	
-64	C166002-0401	REGULATOR ASSY-OXYGEN	1	
-65	12-4862	PLUG	1	
	AN932-S2	PLUG	2	
-66	91-8000AC	BRACKET ASSY ZEPA	1	
		ATTACHING PARTS		
-67	97NTE-048	NUT ZEPA	1	
	16-2000C	BOLT ZEPA	1	
		---*---		
-68	10-8001C	NUT ZEPA	1	
	16-8375C	SET SCREW ZEPA	1	
-69	10-8001C	NUT ZEPA	1	
	16-8500C	SET SCREW ZEPA	1	
-70	ZF604	ADAPTER ZEPA	1	
-71	C166007-0102	BRACKET ASSY-CYLINDER MOUNTING	2	
		ATTACHING PARTS		
-72	AN3-12A	BOLT UPPER ONLY	1	
-73	AN3-4A	BOLT LOWER ONLY	1	
-74	0700696-2	SPACER UPPER ONLY	1	
-75	AN970-3	WASHER UPPER & LOWER	2	
-76	MS21044N3	NUT UPPER & LOWER	2	
		---*---		
-77	0712508-1	CHANNEL-OXYGEN CYLINDER SUPPORT	1	
		ATTACHING PARTS		
-78	AN3-12A	BOLT	4	
-79	0700696-1	SPACER	4	
-80	AN970-3	WASHER	4	
-81	MS21044N3	NUT	4	
		---*---		
-82	0712755-1	SUPPORT-OXYGEN BOTTLE LH	1	
-83	0712755-2	SUPPORT-OXYGEN BOTTLE RH	1	
		ATTACHING PARTS		
-84	AN3-4A	BOLT	2	
-85	MS21044N3	NUT	2	
		---*---		
-86	0712754-1	BRACKET-OXYGEN BOTTLE SUPPORT LH	1	
	0712754-2	BRACKET-OXYGEN BOTTLE SUPPORT RH	1	
-87	0712753-1	BRACKET-BULKHEAD LH	1	
	0712753-2	BRACKET-BULKHEAD RH	1	
-88	0712756-1	CLIP-OXYGEN BOTTLE SUPPORT LH	1	
	0712756-2	CLIP-OXYGEN BOTTLE SUPPORT RH	1	

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
89C-89	AN816-4D	NIPPLE	3	
-90	1200417-51	LINE ASSY	1	
-91	1200417-52	LINE ASSY	1	
-92	AN824-4D	TEE	1	
-93	1200417-69	LINE ASSY	1	
-94	MS20826-4D	TEE	1	
-94A	1200417-17	LINE ASSY	1	
-94B	MS20822-4D	ELBOW	1	
-95	MS20913-10	PLUG	1	
-95A	1200417-85	LINE ASSY	1	
-95B	AN821-4D	ELBOW	1	
-96	S292-14	SLEEVING	1	
-96A	MS35489-13S	GROMMET	1	
-96B	1200417-84	LINE ASSY	1	
-96C	MS20822-4D	ELBOW	1	
-97	S1722	LINE ASSY 140.00 IN LG BKI REF S1722-144.00 IN LG-	1	
-97A	MS35489-2S	GROMMET	1	
-97B	0700730-1	BRACKET-OXYGEN OUTLET LH	1	
-98	0700730-2	BRACKET-OXYGEN OUTLET RH	1	
-98A	S1155-2	CLAMP	8	
		ATTACHING PARTS		
	S1021Z6-6	SCREW	1	
		---•---		
-98B	S1486DG4	CLAMP	2	
		ATTACHING PARTS		
	S1021Z8-6	SCREW	1	
		---•---		
-98C	S1155-4	CLAMP	4	
		ATTACHING PARTS		
	S1021Z8-8	SCREW	1	
		---•---		
		A---182 SERIAL 18260446 THRU 18262465		

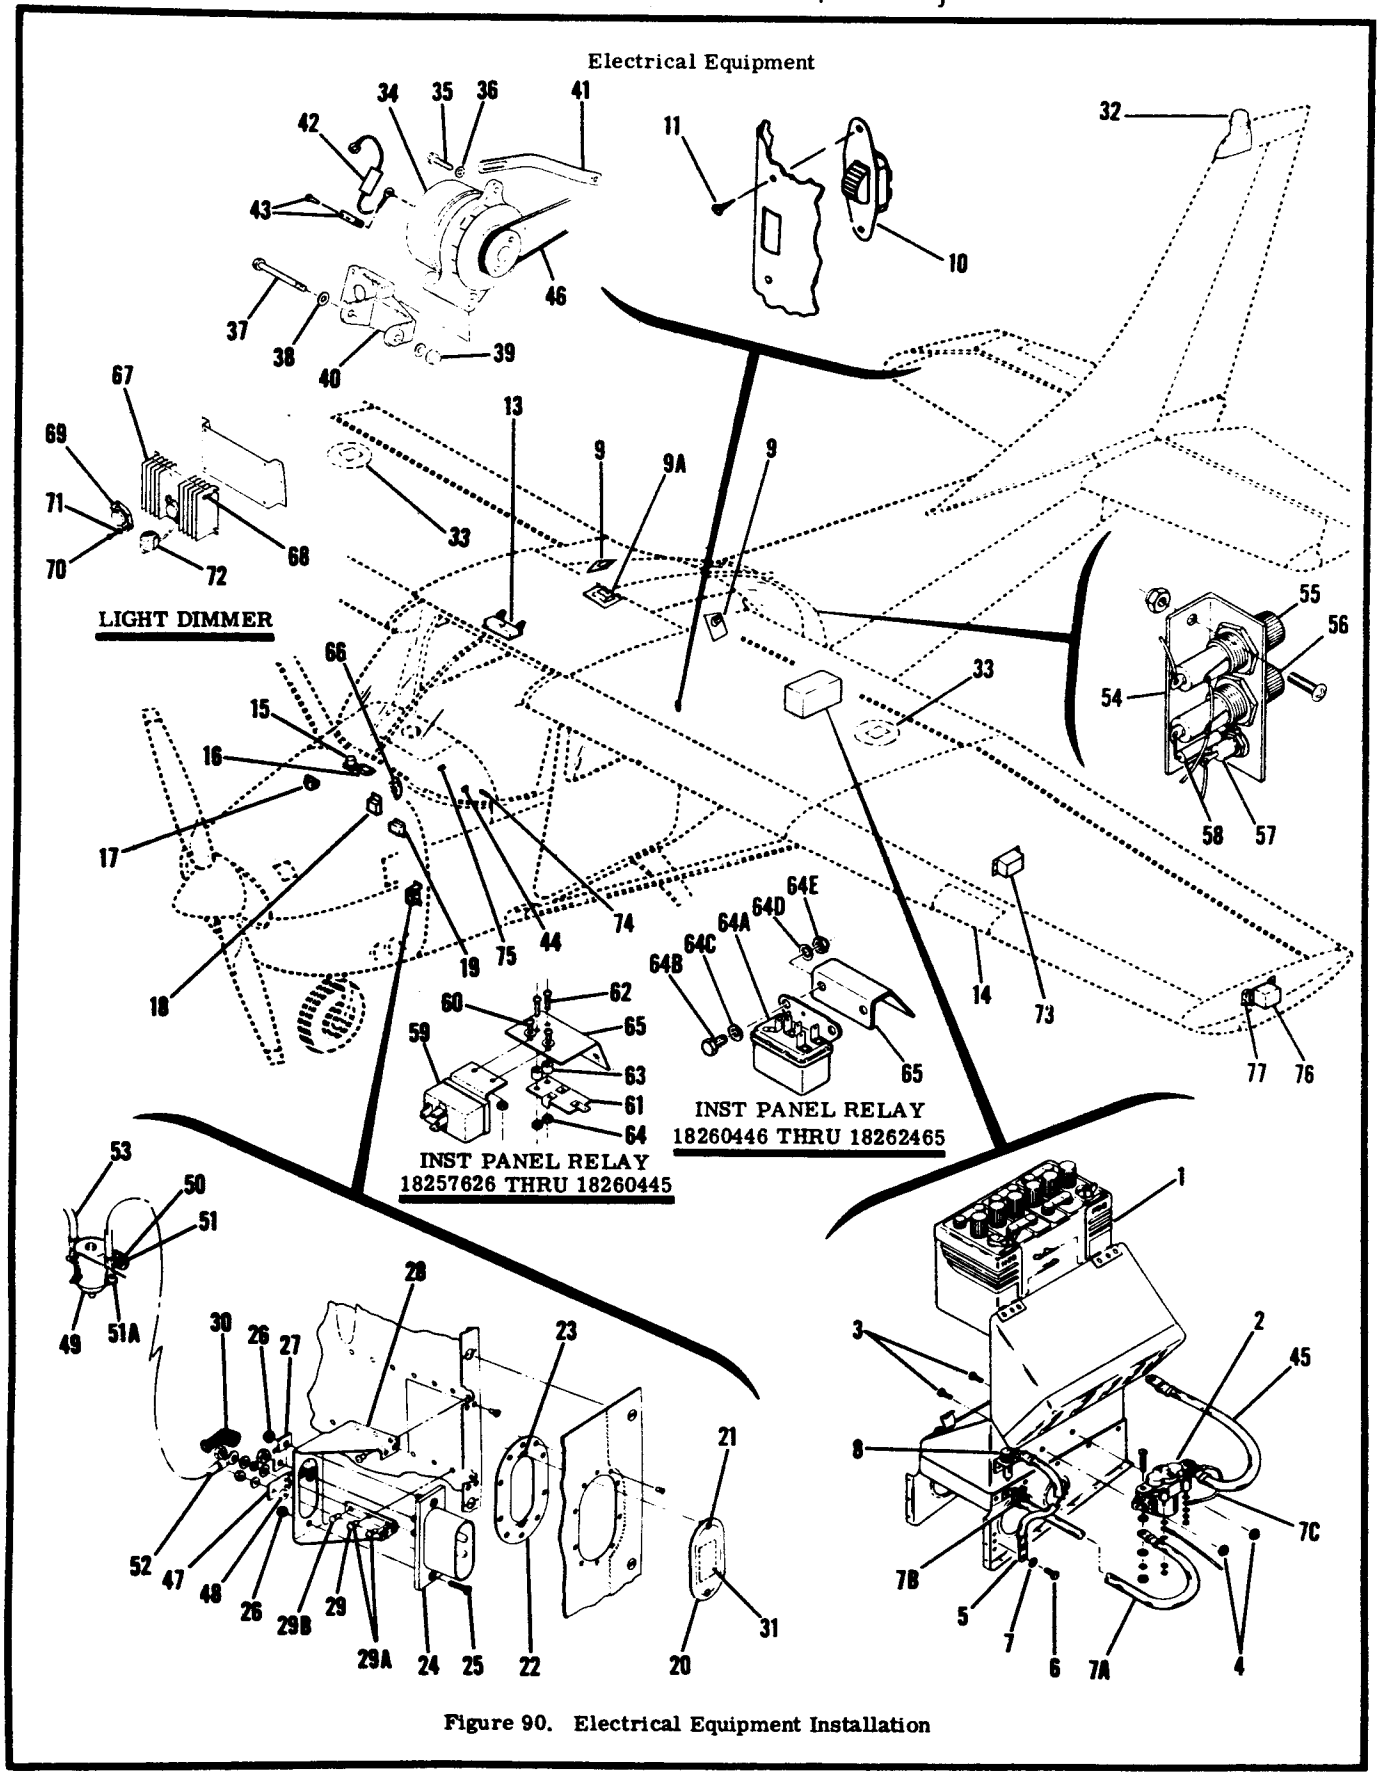


Figure 90. Electrical Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
90 -		ELECTRICAL EQUIPMENT INSTALLATION	NP	
- 1	0712605-201	BATTERY ASSEMBLY	1	
- 2	0712603-2	CONTACTOR ASSEMBLY	1	G
		ATTACHING PARTS		
	S1579-1	CONTACTOR WEU S1579-2	1	E
	S1579-2	CONTRACTOR	1	
- 3	AN3-3A	BOLT	2	
- 4	MS21044N3	NUT	2	
		---*---		
- 5	0412007-1	STRAP-BATTERY GROUND	1	
		ATTACHING PARTS		
- 6	AN4-4A	BOLT	1	
- 7	AN960-416L	WASHER	1	
		---*---		
- 7A	0770610PA3	CABLE-BATTERY	1	G
	0770610PA11	CABLE-BATTERY CONTACTOR TO STARTER	1	E
	S1807-1	COVER	1	D
	S1693-2	STA-STRAP	1	D
		ATTACHING PARTS		
- 7B	S1592-3A	CLAMP UC	1	
	S1021Z6-8	SCREW	1	
		---*---		
- 7C	0770728-1	DIODE ASSEMBLY	1	E
- 8	S1090-22	FUSE HOLDER	1	H
	S1091-1	FUSE-1 AMP	1	H
- 9	181522	DOME LIGHT ASSY UCTE	2	U
		ATTACHING PARTS		
	0700629-1	RETAINER-HEADLINER	1	U
	S1022A4-6	SCREW	4	U
		---*---		
	90	BULB GE	1	U
- 9A	0711779-1	ESCUTCHEON-DOME LIGHT	1	V
		ATTACHING PARTS		
	S1021A8-6	SCREW	1	V
	AN525-8R7	SCREW	2	V
		---*---		
	S1831-1	SWITCH-DOME LIGHT	1	V
		ATTACHING PARTS		
	AN515-4R4	SCREW	2	V
		---*---		
	S1893-1	BASE-DOME LIGHT	1	V
	S1876-1	LAMP-DOME LIGHT	1	V
	1706015-2	LENS-DOME LIGHT	1	V
-10	S1831-1	SWITCH-UTILITY	1	
		ATTACHING PARTS		
-11	AN515-4R4	SCREW	2	
-12		DELETE NEVER USED		
		---*---		
-13	SEE FIG 91	INSTRUMENT PANEL LIGHT INSTALLATION	1	
-14	SEE FIG 3	LANDING LIGHTS INSTALLATION	1	
-15	0511062-10	HORN ASSEMBLY-STALL WARNING	1	
		ATTACHING PARTS		
	AN507B632R12	SCREW	4	
		---*---		
-16	0713511-1	FLASHER-NAVIGATION LIGHT	1	
		ATTACHING PARTS		
	S1021Z6-6	SCREW	4	
	NAS446-2-3	NUT	4	
		---*---		
-17	S1673-1	CONTACTOR-STARTER	1	P
		ATTACHING PARTS		
	AN960-416L	WASHER	2	
	AN4-4A	BOLT	2	
		---*---		
-17A	S1991-1	CONTACTOR-STARTER	1	R
-18	0713130-1	STARTING VIBRATOR	1	A
		ATTACHING PARTS		
	AN3-6A	BOLT	2	A
		---*---		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
90 -19	0413205-11	REGULATOR-VOLTAGE USED WITH GENERATOR	1	
	0750216-1	REGULATOR-VOLTAGE USED WITH ALTERNATOR WHEN EXHAUSTED USE C611001-0101	1	B
	C611001-0101	REGULATOR-VOLTAGE	1	B
		ATTACHING PARTS		
	AN4-4A	BOLT	3	
	AN4-6A	BOLT	2	B
	AN520-416R8	SCREW USE WITH C611001-0101	2	B
		---*---		
	5FF10A568A	PLUG-VOLTAGE REGULATOR USED WITH 0750216-1	1	
	1250211-4	PLUG-VOLTAGE REGULATOR USED WITH C611001-0101	1	
-20	0752611-1	DOOR ASSEMBLY-POWER RECEPTACLE	1	
-21	S1115-30	STUD	2	
	S1115-9	RING	2	
-22	0752610-1	DOUBLER ASSEMBLY	1	
-23	S1115-19	RECEPTACLE-STUD	2	
-24	AN2552-3A	RECEPTACLE-EXTERNAL POWER	1	
		ATTACHING PARTS		
-25	AN509-10R14	SCREW	2	
-26	MS20365-1032	NUT	2	X
	MS21044N3	NUT	2	W
-27	0312155-10	GROUND STRAP	1	
		---*---		
-28	0713711-1	BRACKET-RECEPTACLE SUPPORT	1	X
	0701036-2	BRACKET-RECEPTACLE SUPPORT	1	W
		ATTACHING PARTS		
-29	CR117-4-4	RIVET CY	3	H
-29A	CR163-4-4	RIVET CY	2	J
-29B	CR163-4-6	RIVET CY	1	J
		---*---		
-30	MS25171-3S	NIPPLE	1	
-31	0500130-1	PLACARD-GROUND SERVICE RECEPTACLE	1	F
	1213535-1	PLACARD-POLARITY WHEN EXHAUSTED USE 1205024-1	1	M
	1205024-1	PLACARD-POLARITY	1	N
-32	SEE FIG 92	ROTATING BEACON INSTALLATION	1	
-33	SEE FIG 93	COURTESY LIGHT INSTALLATION	1	
-34	0750217-1	ALTERNATOR-52 AMP WHEN EXHAUSTED USE C611501-0102 REFER TO SERVICE LETTER 66-1 FOR REPLACEMENT	1	D
	C611501-0102	ALTERNATOR-60 AMP	1	K
		ATTACHING PARTS		
-35	0750220-1	BOLT UPPER	1	B
-36	S1450-6-14-080	WASHER UPPER	1	B
-37	AN7-40A	BOLT LOWER	1	B
-38	AN960-716	WASHER LOWER	1	B
-39	MS20365-720C	NUT LOWER	1	B
-40	0750213-1	SUPPORT-ALTERNATOR	1	B
-41	0750221-1	ARM-ALTERNATOR ADJUSTMENT	1	B
		---*---		
	S2114-1	NIPPLE-ALTERNATOR BATTERY TERMINAL	1	V
	S2114-2	NIPPLE-ALTERNATOR FIELD TERMINAL	1	V
	S2093-2	COVER-SHAFT	1	V
	SEE FIG 95	ALTERNATOR INSTALLATION-SHOCK MOUNTED	1	L
-42	S1915-1	FILTER-NOISE	1	D
		ATTACHING PARTS		
-43	AN742D12	CLAMP	1	D
	AN520-10R8	SCREW	1	D
	AN935-10	WASHER	1	D
		---*---		
-44	S550B	SUPPRESSOR	1	C
	0770719-1	DIODE-MASTER SWITCH	1	
-45	0770610PA2	CABLE-BATTERY	1	G
	0770610PA10	CABLE-BATTERY TO BATTERY CONTACTOR	1	E
	S1693-2	STA-STRAP	5	T
-46	S1597-1-31.2	DRIVE BELT-ALTERNATOR	1	D
	S1597-1-30.8	DRIVE BELT-ALTERNATOR	1	E
-47	1570043-3	DIODE BOARD	1	J
-48	NAS43DD3-8	SPACER	1	J
-49	S1660-1	CONTACTOR-12V	1	J
		ATTACHING PARTS		
-50	AN520-416R8	SCREW	2	J
-51	MS20365-428	NUT	2	J
		---*---		

CONTINUED ON NEXT PAGE


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
90 -51A	S1807-1	COVER-TERMINAL	2	D
	S1693-2	STA-STRAP	2	D
-52	0770610PC2	CABLE RECEPTACLE TO CONTACTOR	1	J
-53	0770610PA13	CABLE CONTACTOR TO STARTER SOLENOID	1	J
-54	0712031-1	MOUNTING BRACKET	1	J
-55	S1090-22	FUSEHOLDER ASSEMBLY	1	J
	S1091-1	FUSE-1 AMP	1	J
-56	S1090-2	FUSEHOLDER ASSEMBLY	1	J
	S1091-5	FUSE-5 AMP	1	J
-57	20H3P	DIODE SATA	1	J
-58	X26263	RESISTOR	1	
-59	S1668-1	RELAY-SPLIT BUS BAR	1	S
		ATTACHING PARTS		
-60	AN515-8R6	SCREW	2	S
	AN960-8	WASHER	2	S
	MS21045-08	NUT	2	S
		---*---		
-61	1570043-1	DIODE BOARD ASSEMBLY	1	S
		ATTACHING PARTS		
-62	AN515-8R10	SCREW	2	S
-63	NAS43DD3-16	SPACER	2	S
-64	MS21045-08	NUT	2	S
		---*---		
-64A	S1917-1	RELAY-SPLIT BUS BAR	1	T
		ATTACHING PARTS		
-64B	AN4-5A	BOLT	2	T
-64C	AN960-416L	WASHER	2	T
-64D	AN936A416	WASHER	2	T
-64E	NAS679A4	NUT	2	T
		---*---		
-65	SEE NOTE *	BRACKET-RELAY MOUNTING	1	J
-66	C613001-0201	POWER SUPPLY-ELECTROLUMINESCENT PANEL	1	N
		ATTACHING PARTS		
	AN520-10R8	SCREW	2	
	AN960-10	WASHER	2	
	MS21044N3	NUT	2	
		---*---		
-67	1570166-1	DIMMING ASSEMBLY-TRANSISTORIZED LIGHT	1	R
		ATTACHING PARTS		
-68	AN520-10R6	SCREW	4	R
	AN960-10L	WASHER	4	R
		---*---		
-69	2N3055	TRANSISTOR RCA	1	
		ATTACHING PARTS		
-70	S1021Z6-8	SCREW	2	
-71	AN960-10L	WASHER	2	
		---*---		
-72	S1641-6	HOUSING-SOCKET	1	
-73	C622004-0103	POWER SUPPLY-STROBE LIGHTS	1	Y
		ATTACHING PARTS		
	AN3-3A	BOLT	4	
	AN960-10L	WASHER	4	
		---*---		
-74	C593001-0101	SENSOR-OVERVOLTAGE	1	V
		ATTACHING PARTS		
	CM2679-2	TIE STRAP	1	
		---*---		
-75	34002-55	TERMINAL BLOCK TRANSISTORIZED DIMMING LIGHT	1	R
		ATTACHING PARTS		
	AN507-6R8	SCREW	1	
	AN936A6	WASHER	2	
	NAS679A06	NUT	1	
		---*---		
-76	C622007-0101	POWER SUPPLY-STROBE LIGHT	1	W
		ATTACHING PARTS		
	AN520-10R7	SCREW	2	
		---*---		
-77	1620075-3	BRACKET ASSY-STROBE LIGHT POWER SUPPLY	1	W
	NAS686A3K	NUTPLATE	4	


NOTE. *REFER TO APPLICABLE INSTRUMENT PANEL FIGURE.

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
90 -		A---182 SERIAL 18253599 THRU 18254423 B---182 SERIAL 18255101 THRU 18255125 182 SERIAL 18255845 THRU 18257445 A182 SERIAL A182-0001 THRU A182-0024 C---182 SERIAL 18255267 THRU 18262465 A182 SERIAL A182-0001 & ON D---182 SERIAL 18255101 THRU 18255125 182 SERIAL 18255845 THRU 18256684 E---182 SERIAL 18256685 THRU 18262465 A182 SERIAL A182-0001 & ON F---182 SERIAL 18253599 THRU 18255100 182 SERIAL 18255126 THRU 18255844 G---182 SERIAL 18253599 THRU 18256684 H---182 SERIAL 18253599 THRU 18257625 A182 SERIAL A182-0001 THRU A182-0056 J---182 SERIAL 18257626 THRU 18262465 A182 SERIAL A182-0001 & ON K---182 SERIAL 18256685 THRU 18257445 A182 SERIAL A182-0001 THRU A182-0024 L---182 SERIAL 18257446 THRU 18262465 A182 SERIAL A182-0025 & ON M---182 SERIAL 18255101 THRU 18255125 18255845 THRU 18259305 A182 SERIAL A182-0001 THRU A182-0116 N---182 SERIAL 18259306 THRU 18262465 A182 SERIAL A182-0117 & ON O---182 SERIAL 18258821 THRU 18262465 A182 SERIAL A182-0117 & ON P---182 SERIAL 18253599 THRU 18260055 A182 SERIAL A182-0001 THRU A182-0116 R---182 SERIAL 18260056 THRU 18262465 A182 SERIAL A182-0117 & ON S---182 SERIAL 18257626 THRU 18260445 A182 SERIAL A182-0001 & ON T---182 SERIAL 18260446 THRU 18262465 U---182 SERIAL 18253599 THRU 18260825 A182 SERIAL A182-0001 THRU A182-0136 V---182 SERIAL 18260826 THRU 18262465 W---182 SERIAL 18261426 THRU 18262465 X---182 SERIAL 18253599 THRU 18261425 Y---182 SERIAL 18260446 THRU 18261425		


Electrical Equipment (Cont)

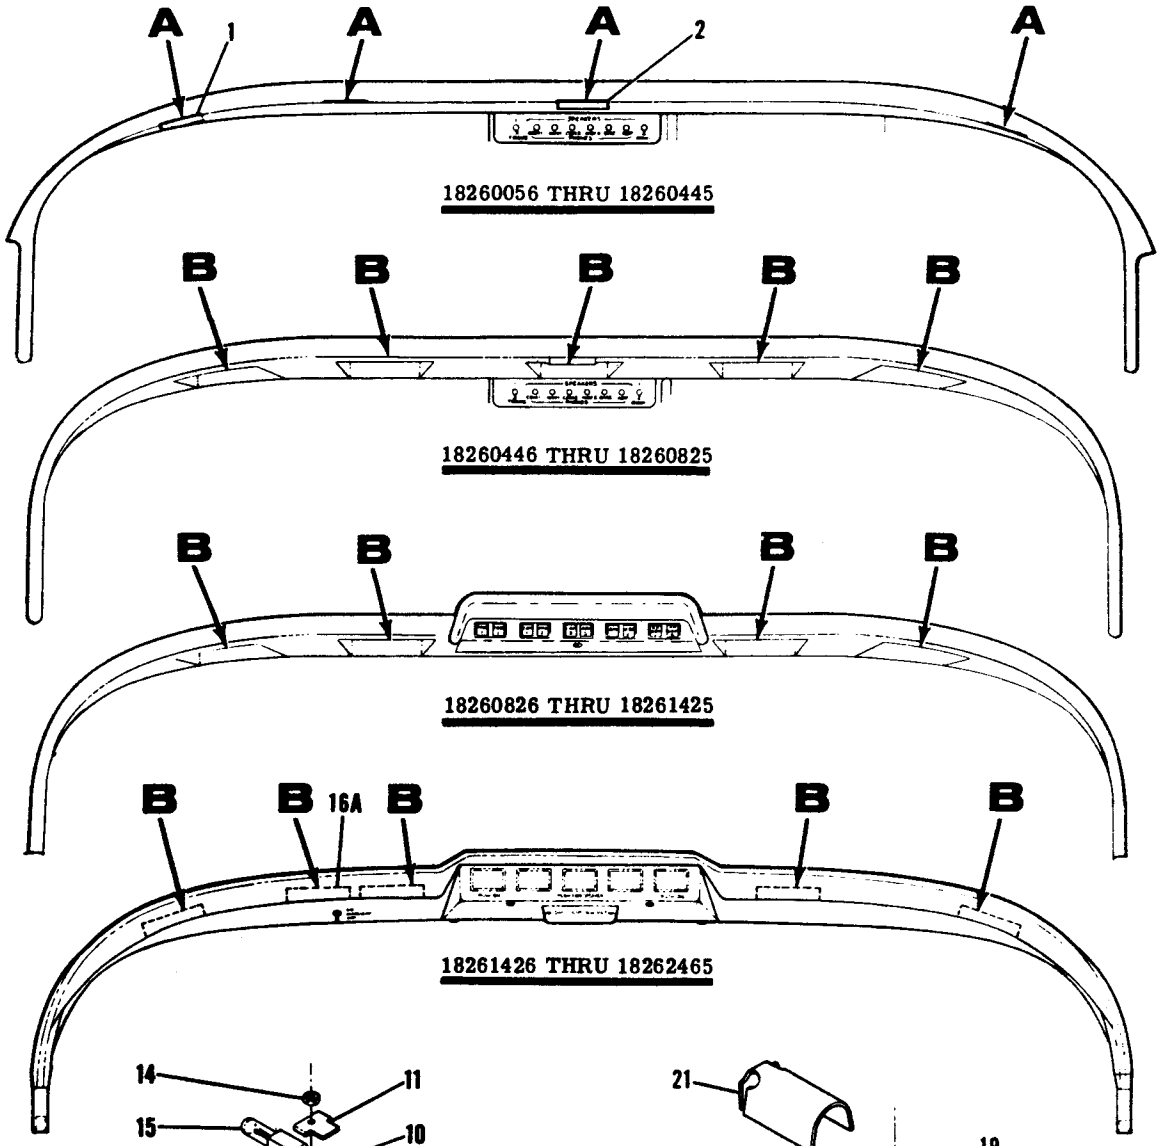

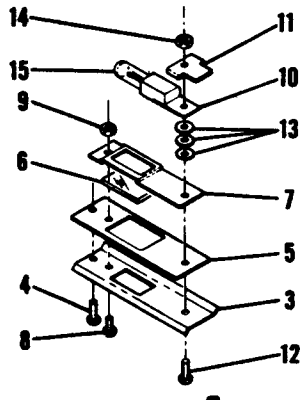

Detail A

18260056 THRU 18260445

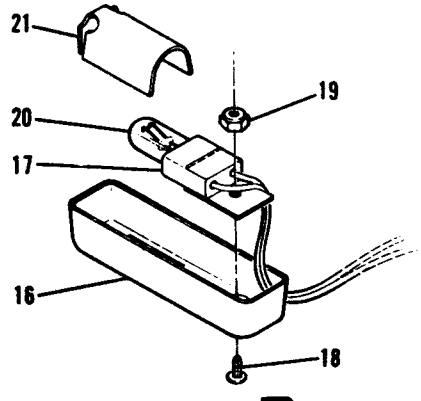

Detail B

18260446 THRU 18262465

182 SERIAL 18260056 THRU 18262465

Figure 90A. Instrument Panel Lights Installation


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
90A-			INSTRUMENT PANEL GLARE SHIELD LIGHTS INSTALLATION	NP	A
- 1	1213717-1		LIGHT FITTING ASSEMBLY-LH	1	
- 2	1213717-2		LIGHT FITTING ASSEMBLY-CENTER	1	
			ATTACHING PARTS		
	S1021Z4-4C		SCREW	3	
			---*---		
	NAS697A04L		NUTPLATE	1	
	NAS395-1-3		NUT	3	
- 3	1713083-1		COVER	4	
			ATTACHING PARTS		
- 4	AN515-4R6		SCREW	3	
	NAS696A04L		NUTPLATE	1	
	S1972-2		RIVET	2	
			---*---		
- 5	1713080-3		GASKET	4	
- 6	1713084-1		LENS RED	4	
	1713084-3	*	LENS BLUE	1	
- 7	1713082-1		BRACKET	4	
			ATTACHING PARTS		
- 8	AN515-4R4		SCREW	1	
- 9	AN340-4		NUT	1	
			---*---		
-10	S1910-1		LIGHT ASSEMBLY	4	
			ATTACHING PARTS		
-11	1713085-1		RETAINER	1	
-12	AN515-4R6		SCREW	1	
-13	AN960PD4		WASHER	3	
-14	AN340-4		NUT	1	
			---*---		
-15	S1901-1		BULB	4	
			INSTRUMENT PANEL GLARE SHIELD LIGHTS INSTALLATION	NP	B
			INSTRUMENT PANEL GLARE SHIELD LIGHTS INSTALLATION	NP	C
			INSTRUMENT PANEL GLARE SHIELD LIGHTS INSTALLATION	NP	D
-16	1213319-7		HOUSING ASSY-LIGHT RED LENS	5	B
	1213319-8	%	HOUSING ASSY-LIGHT BLUE LENS RADIO SWITCHES	1	B
	1213319-7		HOUSING ASSY-LIGHT RED LENS	4	E
-16A	1213319-8		HOUSING ASSY-LIGHT BLUE LENS MAPLIGHT SWITCH	1	D
-17	S1910-2		LIGHT ASSEMBLY	5	B
	S1910-2		LIGHT ASSEMBLY	4	C
	S1910-2		LIGHT ASSEMBLY	5	D
			ATTACHING PARTS		
-18	AN515-4R6		SCREW	1	
-19	AN340-4		NUT	1	
			---*---		
-20	S1901-1		LAMP	5	B
	S1901-1		LAMP	4	C
	S1901-1		LAMP	5	D
-21	1213321-2		REFLECTOR	5	B
	1213321-2		REFLECTOR	4	C
	1213321-2		REFLECTOR	5	D

NOTE. *USED WITH 1213717-2 LIGHT FITTING ASSEMBLY ONLY, WHEN POST LIGHTING IS INSTALLED.

NOTE. %USED ONLY WHEN POST LIGHTING IS INSTALLED

A---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 & ON
B---182 SERIAL 18260446 THRU 18260825
C---182 SERIAL 18260826 THRU 18261425
D---182 SERIAL 18261426 THRU 18262465
E---182 SERIAL 18260826 THRU 18262465

Electrical Equipment (Cont)

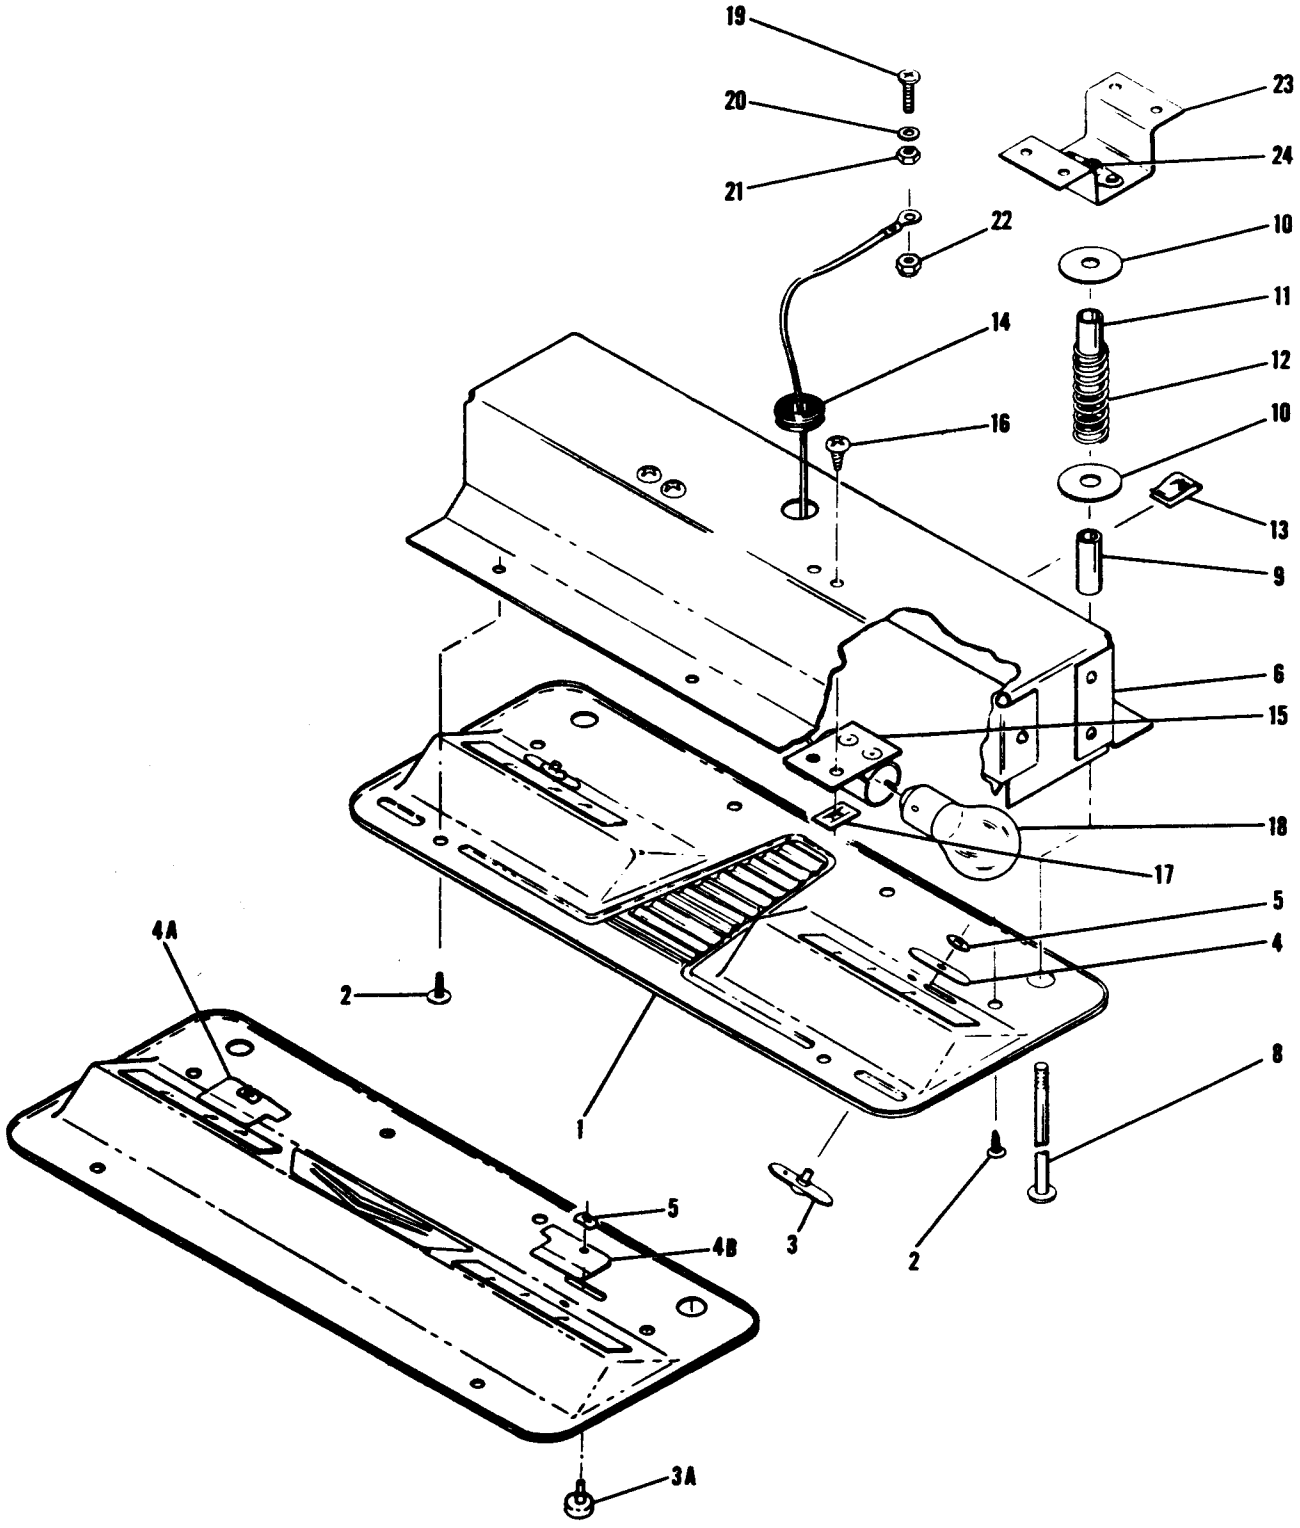

182 SERIAL 18253599 THRU 18260055


Figure 91. Instrument Panel Light Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
91 -		INSTRUMENT PANEL LIGHT INSTALLATION	NP	H
- 1	0700622-1	COVER ASSEMBLY-PANEL LIGHT	1	A
	0700628-1	COVER ASSEMBLY-PANEL LIGHT	1	C
	0700628-7	COVER ASSEMBLY-PANEL LIGHT WHEN EXHAUSTED USE 1213243-1	1	E
	1213243-3	COVER ASSEMBLY-PANEL LIGHT	1	F
		ATTACHING PARTS		
- 2	S1022Z8-14	SCREW	6	
		---*---		
- 3	0700622-4	SLIDE	2	A
- 3A	0700628-5	SLIDE	2	B
- 4	0700622-5	COVER-SLIDE	2	A
	0700628-4	COVER-SLIDE	2	C
- 4A	0700628-9	COVER-SLIDE RH	1	D
	1213154-1	COVER SLIDE-RH	1	G
- 4B	0700628-12	COVER-SLIDE LH	1	D
	1213154-2	COVER SLIDE-LH	1	G
		ATTACHING PARTS		
- 5	S1278-1	CLIP-PUSH ON	1	
		---*---		
- 6	0700623-14	HOUSING ASSEMBLY-PANEL LIGHT	1	
		ATTACHING PARTS		
- 7		DELETED-NOT AVAILABLE		
- 8	NAS602-40	SCREW	2	
- 9	NAS43DD3-48	SPACER	2	
-10	S1074-1	WASHER	4	
-11	NAS43DD3-70	SPACER	2	
-12	0713124-1	SPRING	2	
		---*---		
-13	NAS396-4-3	NUT	4	
-14	MS35489-6	GROMMET	1	
-15	0700623-11	SOCKET ASSEMBLY-LH	1	
	0700623-12	SOCKET ASSEMBLY-RH	1	
		ATTACHING PARTS		
-16	S1021Z6-6	SCREW	1	
-17	NAS446-2-3	NUT	1	
		---*---		
-18	94	LAMP-LH GE	1	
	90	LAMP-RH GE	1	
-19	AN515-6R8	SCREW GROUND	1	
-20	AN936A6	WASHER	1	
-21	AN340-6	NUT	1	
-22	NAS679A06	NUT	2	
-23	0700624-1	BRACKET ASSEMBLY-PANEL LIGHT	1	
-24	NAS680A08	NUTPLATE		

NOTE. .THIS PART MUST HAVE A SECOND DASH ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18253599 THRU 18254423
B---182 SERIAL 18254424 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
C---182 SERIAL 18254424 THRU 18255058
D---182 SERIAL 18255059 THRU 18257625
A182 SERIAL A182-0001 THRU A182-0056
E---182 SERIAL 18255059 THRU 18255155
F---182 SERIAL 18255156 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
G---182 SERIAL 18257626 THRU 18260055
A182 SERIAL A182-0057 THRU A182-0116
H---182 SERIAL 18253599 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116

Electrical Equipment (Cont)

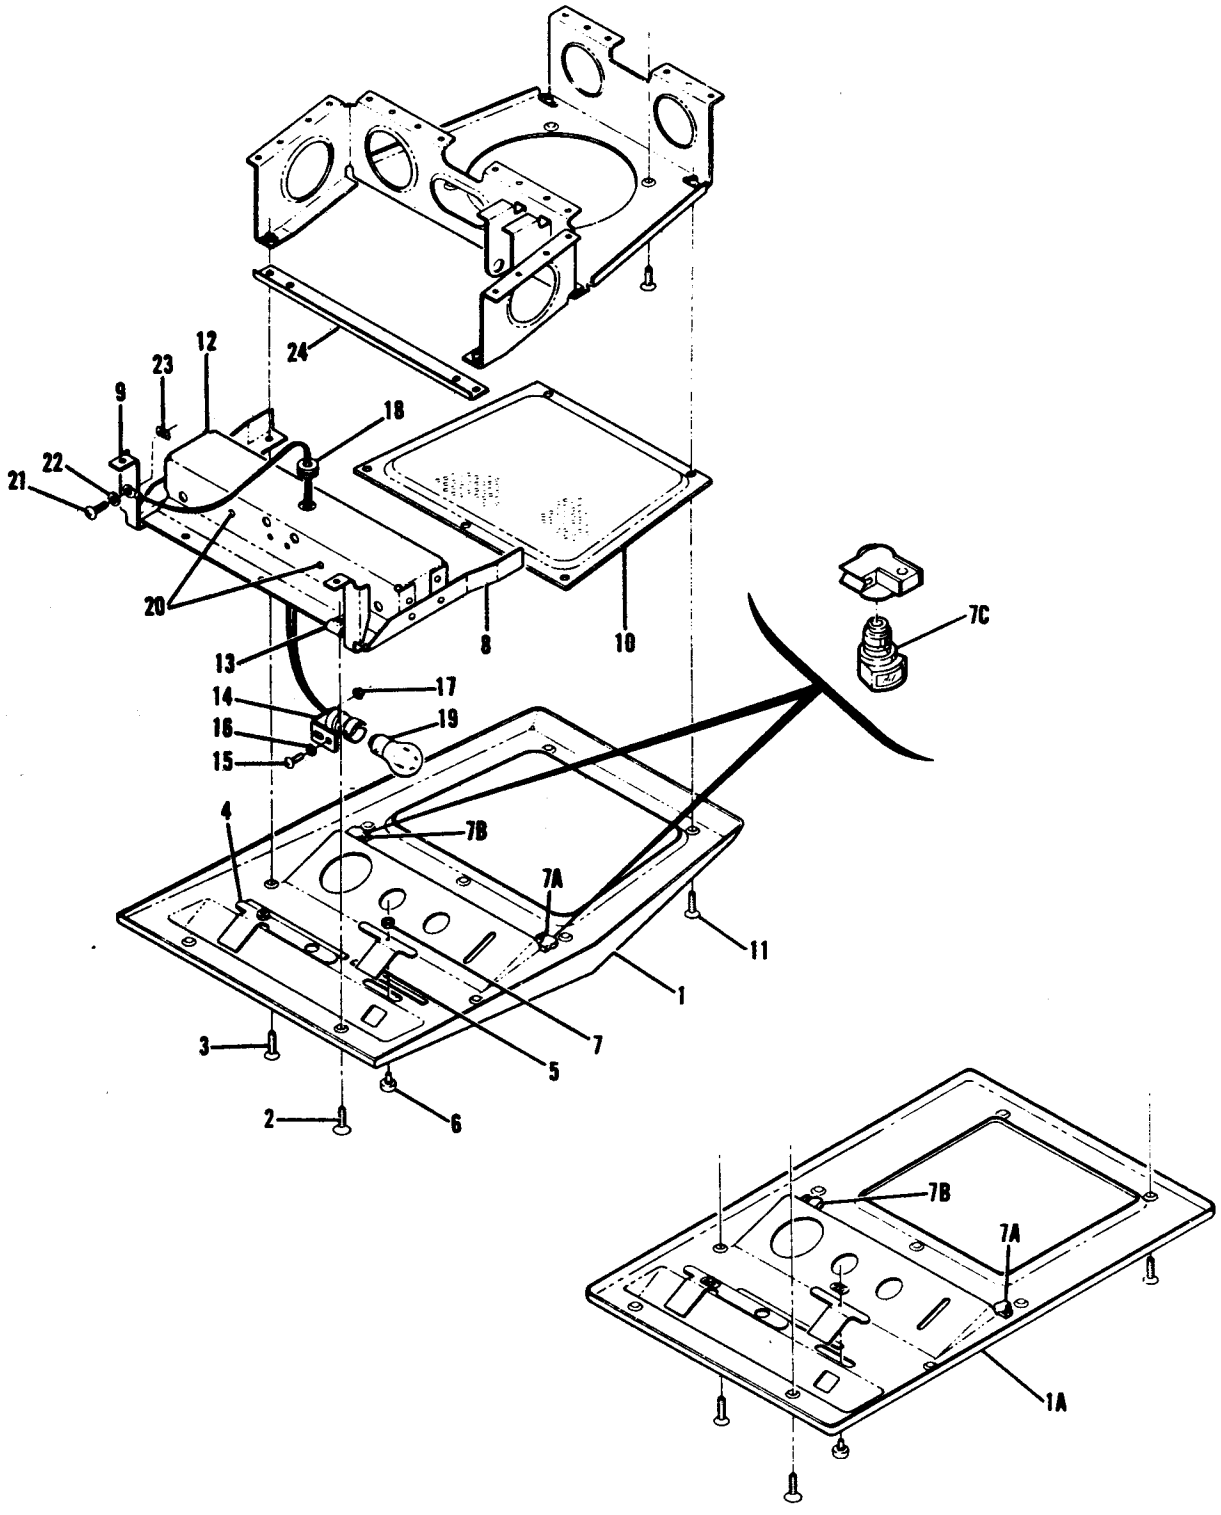

182 SERIAL 18260056 THRU 18262465

Figure 91A. Instrument Panel Light & Console Installation


FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
91A-			INSTRUMENT PANEL LIGHT & CONSOLE INSTALLATION		
- 1	0711778-1	#	COVER ASSEMBLY WITH OXYGEN CUTOUTS	1	C
	0711778-3	#	COVER ASSEMBLY WITHOUT OXYGEN CUTOUTS	1	C
- 1A	0711778-5	#	COVER ASSEMBLY WITH OXYGEN CUTOUTS	1	B
	0711778-6	#	COVER ASSEMBLY WITHOUT OXYGEN CUTOUTS	1	B
			ATTACHING PARTS		
- 2	S1022Z8-10		SCREW	2	
- 3	AN515-8R8		SCREW	2	
			---*---		
- 4	0711784-1		COVER-SLIDE RH	1	
- 5	1213152-3		COVER-SLIDE LH	1	
- 6	0700628-5		SLIDE	2	
			ATTACHING PARTS		
- 7	AN340-4		NUT	2	
			---*---		
- 7A	S1899-5	*	LIGHT ASSEMBLY-TAB MOUNTED LH	1	
- 7B	S1899-6	*	LIGHT ASSEMBLY-TAB MOUNTED RH	1	
- 7C	MS25237-330		BULB	1	
- 8	0711781-1		BRACKET-OVERHEAD CONSOLE LH	1	
- 9	0711781-2		BRACKET-OVERHEAD CONSOLE RH	1	
-10	1211080-1		SPEAKER GRILL	1	
			ATTACHING PARTS		
-11	AN507-832R12		SCREW	5	
			---*---		
-12	0711777-1		HOUSING ASSEMBLY-PANEL LIGHT	1	
			ATTACHING PARTS		
-13	NAS396-4-3		NUT	2	
			---*---		
-14	0513208-3		SOCKET ASSEMBLY-LAMP	1	
			ATTACHING PARTS		
-15	NAS1352-06-6		SCREW	1	
-16	AN960-6L		WASHER	1	
-17	NAS679-A06		NUT	1	
			---*---		
-18	MS35489-6		GROMMET	2	
-19	94		LAMP GE	1	
	0711780-3		BRACKET ASSEMBLY-PANEL LIGHT	1	
			ATTACHING PARTS		
-20	S1021Z8-6		SCREW	2	
	AN960-8L		WASHER	2	
	NAS446-4		NUT	2	
			---*---		
	AN515-8R24		SCREW-LIGHT ADJUSTMENT	1	
	AN960-8L		WASHER-LIGHT ADJUSTMENT	1	
	NAS679A08		NUT-LIGHT ADJUSTMENT	1	
-21	S1021Z6-6		SCREW-GROUND	1	
-22	AN960-6L		WASHER-GROUND	1	
-23	NAS446-2		NUT-GROUND	1	
-24	0700761-6		ANGLE SUPPORT	1	B

NOTE. .THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE VII.

NOTE. *THESE PARTS ARE REQUIRED ON 0711778-1 COVER ASSEMBLY ONLY.

A---182 SERIAL 18260056 THRU 18262465
A182 SERIAL A182-0117 & ON
B---182 SERIAL 18260446 THRU 18262465
A182 SERIAL A182-0137 & ON
C---182 SERIAL 18260056 THRU 18260445
A182 SERIAL A182-0117 THRU A182-0136

Electrical Equipment (Cont)

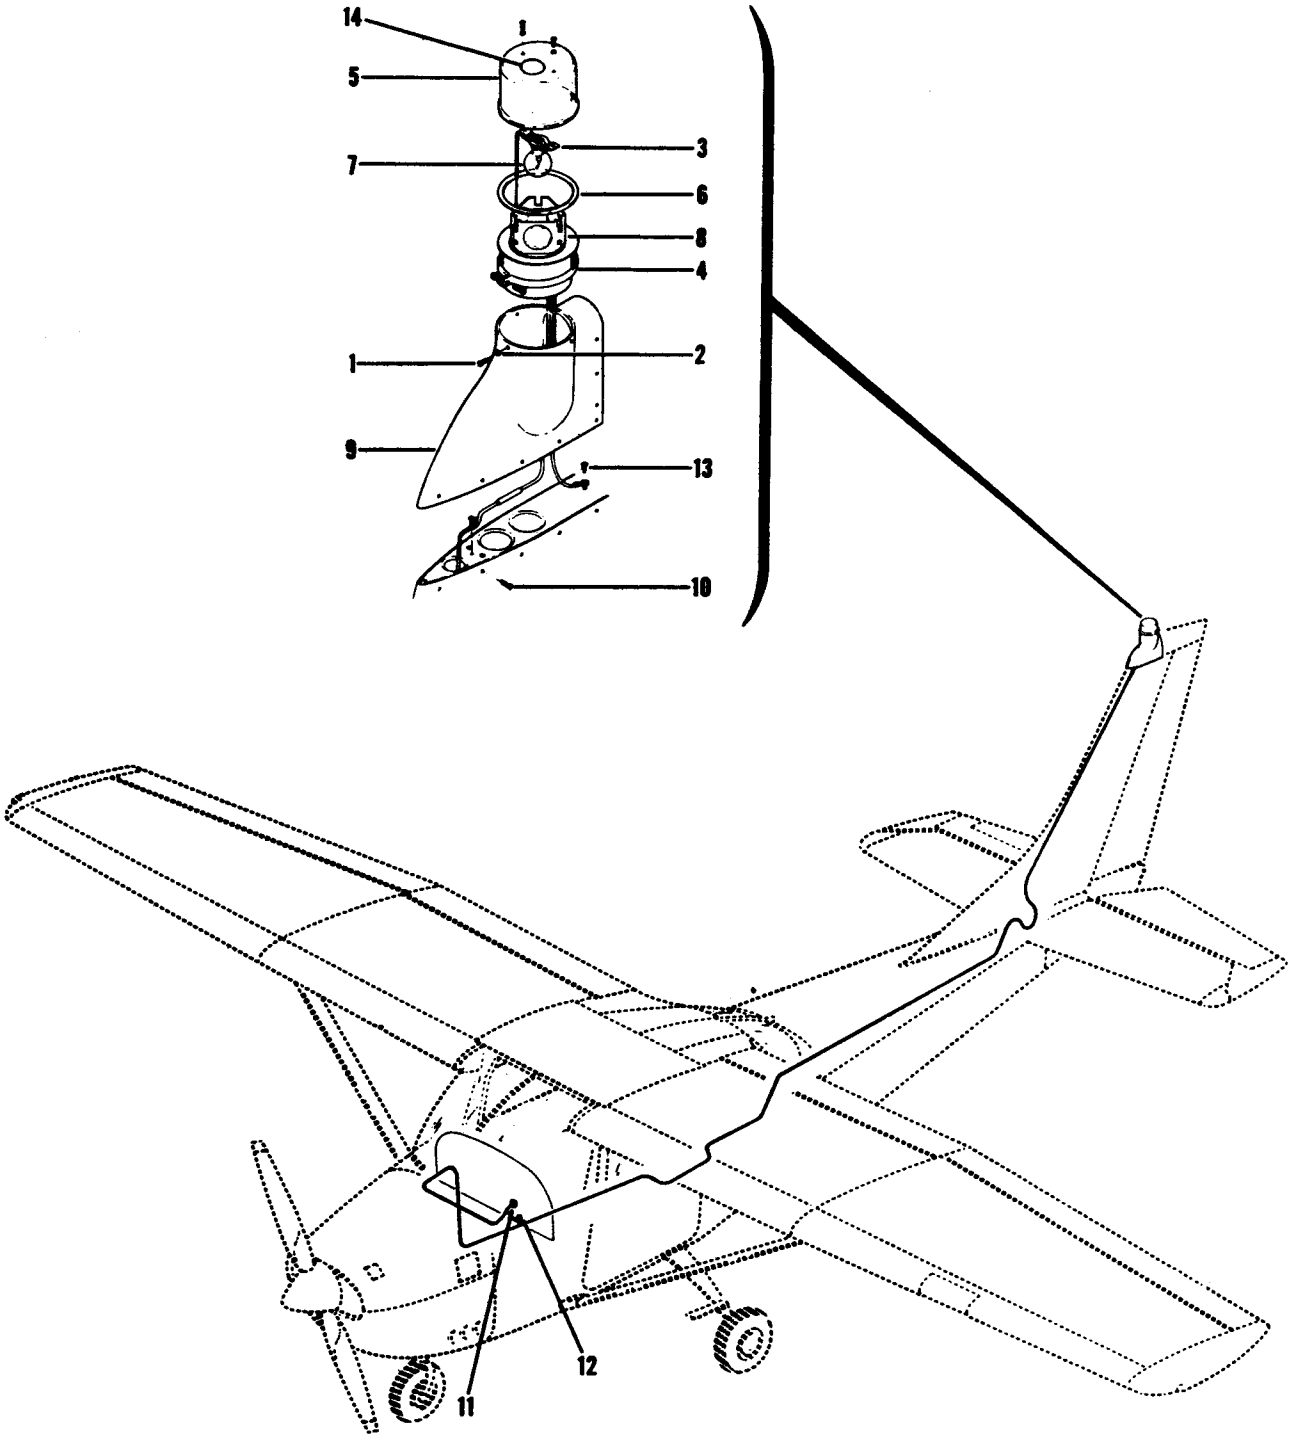


182 SERIAL 18253599 THRU 18257625

Figure 92. Rotating Beacon Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
92 -		ROTATING BEACON INSTALLATION	NP	A
	0700120-1	BEACON ASSEMBLY-ROTATING	1	
		ATTACHING PARTS		
- 1	AN515-8R6	SCREW	3	
- 2	AN960-6L	WASHER	3	
		---*---		
- 3	WRM-15	SOCKET ASSEMBLY WHEL	1	
- 4	WRM-25	CLAMP WHEL	1	
- 5	WRM-10	DOME ASSEMBLY WHEL	1	
- 6	WRM-30	GASKET-DOME WHEL	1	
- 7	WRM-44-12	BULB WHEL	1	
- 8	WRM-20	LENS ASSEMBLY WHEL	1	
- 9	1200039-2	TIP-FIN	1	
		ATTACHING PARTS		
-10	NAS220-6	SCREW	16	
		---*---		
-11	S1158-2-1	SWITCH	1	
-12	S1232-10	CIRCUIT BREAKER	1	
-13	AN515-8R6	SCREW GROUND	1	
	NAS679A08	NUT	1	
-14	S1433-1	NAMEPLATE	1	
		A---182 SERIAL 18253599 THRU 18257625 A182 SERIAL A182-0001 THRU A182-0056		

Electrical Equipment (Cont)

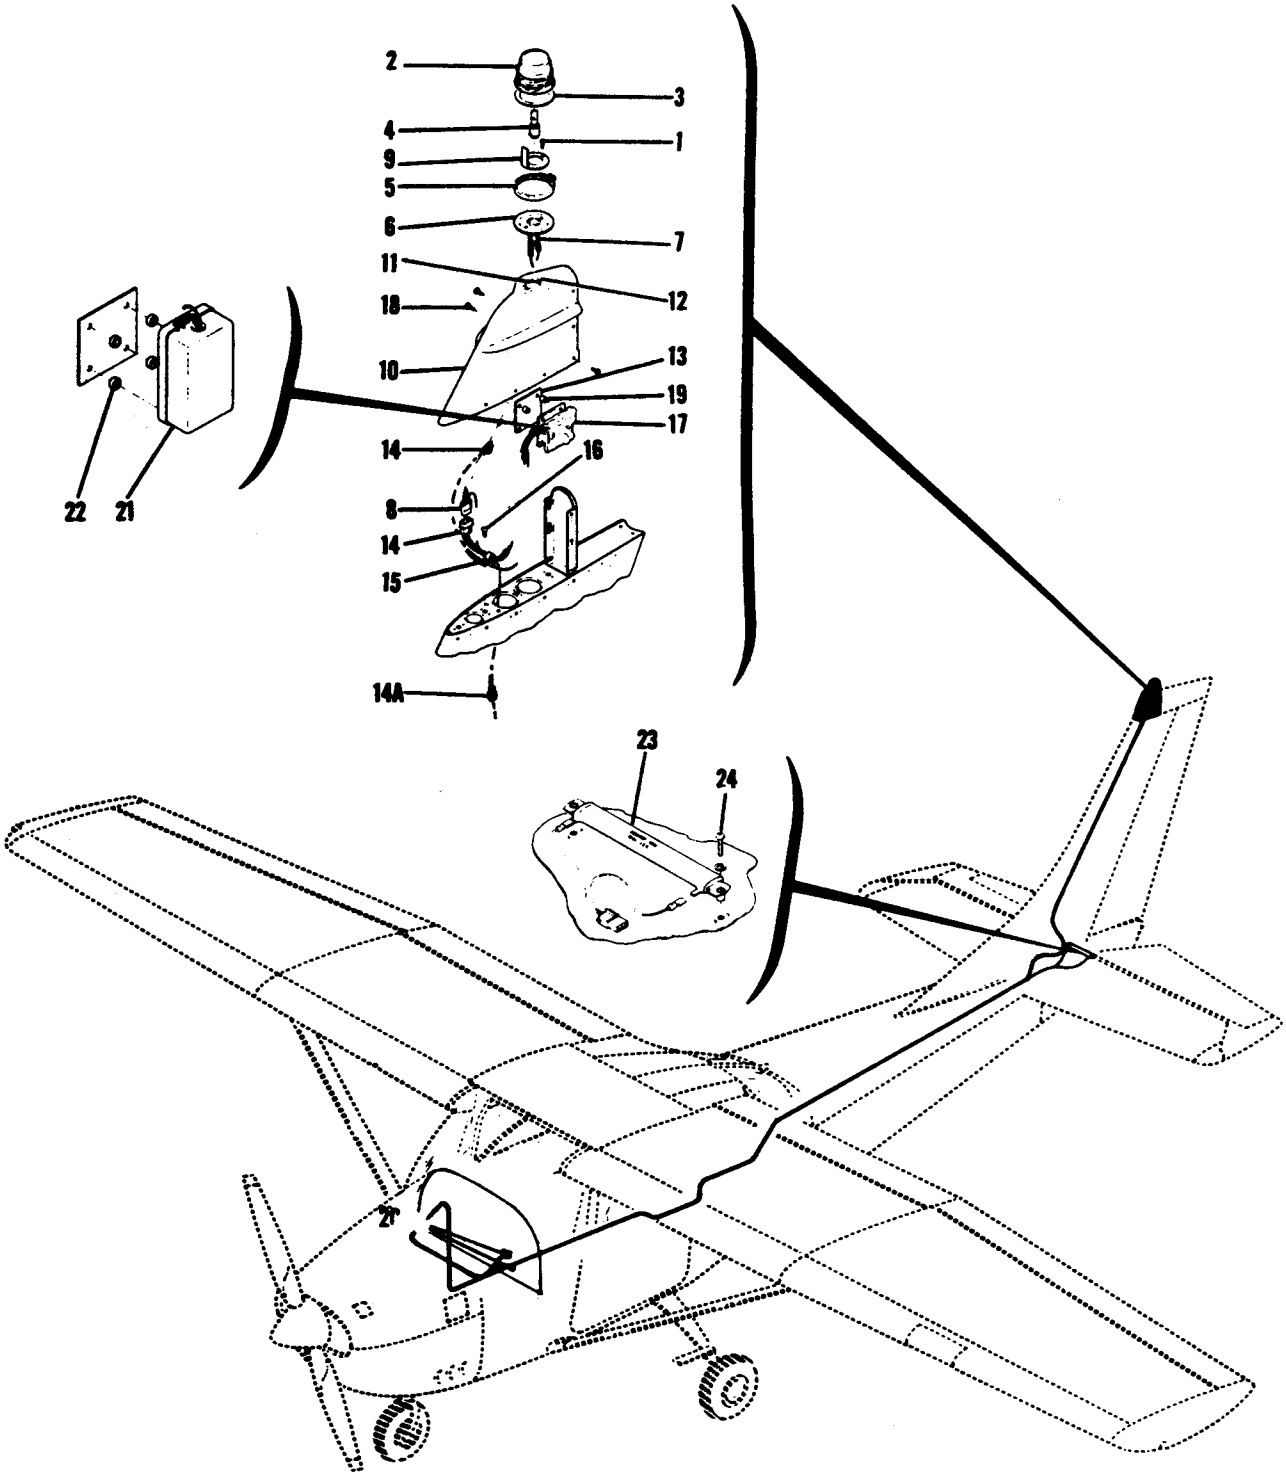

182 SERIAL 18257626 THRU 18262465

Figure 92A. Flashing Beacon Light Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
92A-		FLASHING BEACON LIGHT INSTALLATION	NP	A
	C621001-0106	LIGHT ASSEMBLY-FLASHING BEACON	1	
		ATTACHING PARTS		
- 1	AN515-8R8	SCREW	2	
		---*---		
- 2	C17325	DOME AEFC	1	
- 3	C17330	GASKET AEFC	1	
- 4	C17312-3	LAMP AEFC	1	
- 5	C17326	CLAMP ASSEMBLY AEFC	1	
- 6	C17331-3	PLATE-MOUNTING AEFC	1	
- 7	C17313	SOCKET ASSEMBLY AEFC	1	
- 8	S1638-1	HOUSING-PLUG	1	
- 9	0731607-1	BAFFLE	1	
-10	0731606-3	TIP ASSEMBLY-FIN	1	E
	1231059-1	TIP ASSEMBLY-FIN	1	F
-11	0431017-2	PLATE ASSEMBLY	1	
-12	NAS680A08	NUTPLATE	2	
-13	0731606-8	PLATE	1	E
-14	S1638-2	HOUSING-CAP	1	
	S1638-2	HOUSING-CAP	2	F
-14A	S1637-2	HOUSING-PLUG	1	F
	S1637-1	HOUSING-CAP	1	F
-15	AN74204	CLAMP	1	
		ATTACHING PARTS		
-16	AN515-6R8	SCREW	1	E
	AN515-6R7	SCREW	1	F
		---*---		
-17	C594501-0101	FLASHER ASSEMBLY-BEACON LIGHT WHEN EXHAUSTED USE C594501-0203	1	B
		ATTACHING PARTS		
-18	S1676-1-8	SCREW	4	B
-19	N233-2	SPACER NYLON	4	B
		---*---		
-20		CIRCUIT BREAKER SEE INSTRUMENT PANEL	1	
		SWITCH SEE INSTRUMENT PANEL	1	
-21	C594501-0203	FLASHER ASSEMBLY-BEACON LIGHT	1	C
	C594502-0101	FLASHER ASSEMBLY-BEACON LIGHT	1	F
		ATTACHING PARTS		
	AN515-8R8	SCREW	4	C
	AN525-832R7	SCREW	4	F
	NAS697A08	NUT	4	F
-22	NAS43HT3-8	SPACER	4	C
		---*---		
-23	OR95-1.5	RESISTOR	1	D
		ATTACHING PARTS		
-24	AN515-8R11	SCREW	2	D
		---*---		

A---182 SERIAL 18257626 THRU 18262465
A182 SERIAL A182-0057 & ON
B---182 SERIAL 18257626 THRU 18258521
A182 SERIAL A182-0057 THRU A182-0096
C---182 SERIAL 18258522 THRU 18262465
A182 SERIAL A182-0097 & ON
D---182 SERIAL 18260362 THRU 18262465
A182 SERIAL A182-0117 & ON
E---182 SERIAL 18257626 THRU 18261425
A182 SERIAL A182-0057 & ON
F---182 SERIAL 18261426 THRU 18262465

Electrical Equipment (Cont)


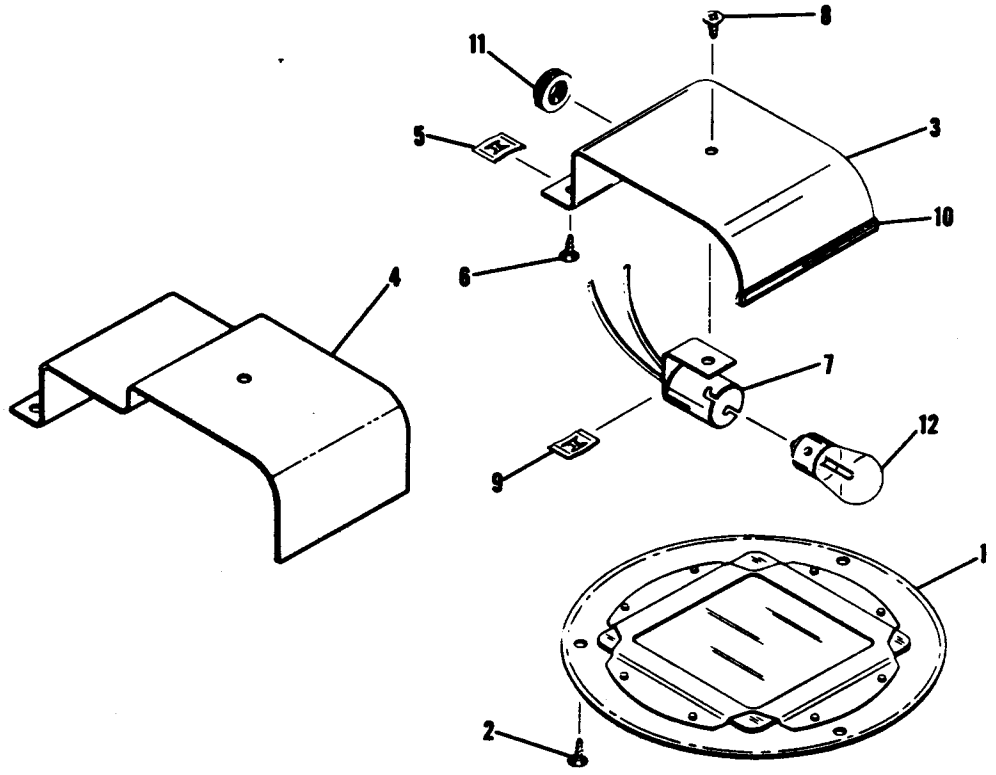



Figure 93. Courtesy Light Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
93 -		COURTESY LIGHT INSTALLATION	NP	
- 1	0700618-1	COVER PLATE ASSEMBLY	1	A
	1270432-2	COVER PLATE ASSEMBLY	1	B
	0762035-1	COVER PLATE ASSEMBLY	1	C
		ATTACHING PARTS		
- 2	S1021Z8-8	SCREW	AR	
		---•---		
- 3	0700616-1	SHIELD ASSEMBLY	1	D
- 4	0762036-1	SHIELD ASSEMBLY	1	C
		ATTACHING PARTS		
- 5	NAS446-2-3	NUT	2	
- 6	S1021Z6-8	SCREW	2	
		---•---		
- 7	0513208-1	SOCKET-LAMP	1	
		ATTACHING PARTS		
- 8	S1021Z6-6	SCREW	1	
- 9	NAS446-2-3	NUT	1	
		---•---		
-10	S1055-1	CHANNEL 2.25 IN LG BULK ITEM REF S1055-1-2.25 -	1	
-11	MS35489-134	GROMMET	1	
-12	MS15584-2	LAMP	1	
		A---182 SERIAL 18253599 THRU 18255870		
		B---182 SERIAL 18255871 THRU 18259986 A182 SERIAL A182-0001 THRU A182-0116		
		C---182 SERIAL 18259987 THRU 18262465 A182 SERIAL A182-0117 & ON		
		D---182 SERIAL 18253599 THRU 18259986 A182 SERIAL A182-0001 THRU A182-0116		

Electrical Equipment (Cont)

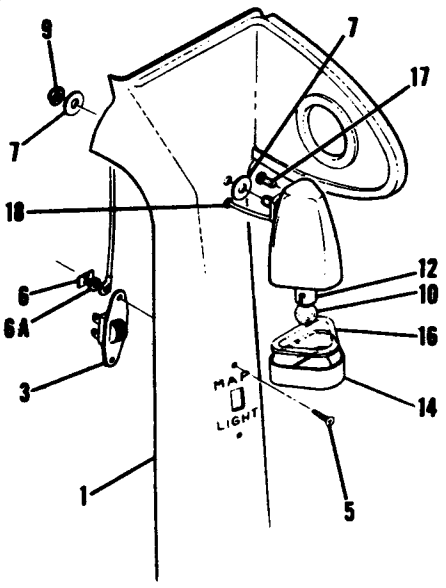

18255059 THRU 18255844

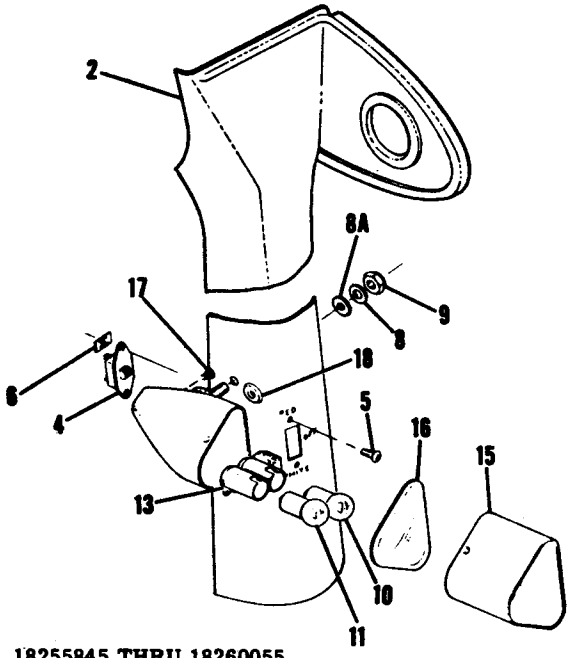

18255845 THRU 18260055

182 SERIAL 18255059 THRU 18260055


Figure 94. Map Light Installation

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
94 -		MAP LIGHT INSTALLATION	NP	A
- 1	1270463-2-434	SHIELD-FRONT DOORPOST LH	1	B
- 2	0770725-2 ¤	SHIELD-FRONT DOORPOST LH WHEN EXHAUSTED USE 0770725-9	1	D
	0770725-9 ¤	SHIELD-FRONT DOORPOST LH	1	E
	0770725-12 ¤	SHIELD-FRONT DOORPOST RH USED WITH POST LIGHTING	1	F
	0715007-1 ¤	SHIELD-FRONT DOORPOST LH	1	G
	0715007-4 ¤	SHIELD-FRONT DOORPOST RH USED WITH POST LIGHTING	1	G
- 3	0713029	SWITCH	1	B
- 4	S1501-1	SWITCH	1	C
		ATTACHING PARTS		
- 5	AN515-3R6	SCREW	2	
- 6	AN340-3	NUT	2	
		---*---		
	1470089-10-532	MAP LIGHT ASSEMBLY	1	B
	1470089-14 ¤	MAP LIGHT ASSEMBLY	1	C
		ATTACHING PARTS		
- 6A	AN935-3L	WASHER	2	
- 7	AN970-3	WASHER	2	B
- 8	AN960-10L	WASHER	1	C
- 8A	AN970-3	WASHER	2	
- 9	MS21044N3	NUT	1	
		---*---		
-10	S1876-1	LAMP-CLEAR GE	1	
-11	1816TR	LAMP-RED GE	1	C
-12	1924	SOCKET SHHI	1	B
-13	IDI-757	SOCKET ASSEMBLY ISES	1	C
-14	1470089-6	RETAINER-LENS	1	B
-15	0700148-1	HOOD ASSEMBLY	1	
-16	1470089-8	LENS	1	
-17	AN520-6-8	SCREW-ADJUSTMENT	1	
-18	MS35489-4	GROMMET	1	

NOTE. .THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE XIII.

A---182 SERIAL 18255059 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
B---182 SERIAL 18255059 THRU 18255844
C---182 SERIAL 18255845 THRU 18260055
A182 SERIAL A182-0001 THRU A182-0116
D---182 SERIAL 18255845 THRU 18256684
E---182 SERIAL 18256685 THRU 18258505
A182 SERIAL A182-0001 THRU A182-0096
F---182 SERIAL 18257626 THRU 18260055
A182 SERIAL A182-0057 THRU A182-0116
G---182 SERIAL 18258506 THRU 18260055
A182 SERIAL A182-0097 THRU A182-0116

Electrical Equipment (Cont)

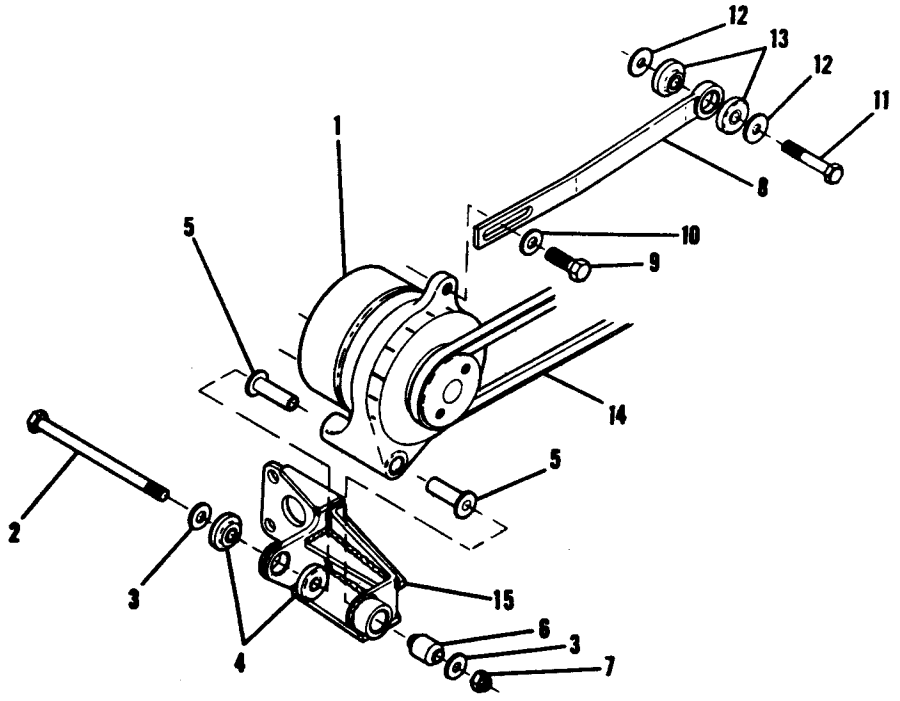

182 SERIAL 18257446 THRU 18262465

Figure 95. Shock Mounted Alternator Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
95 -		SHOCK MOUNTED ALTERNATOR INSTALLATION	NP	A
- 1	C611501-0102	ALTERNATOR ASSEMBLY 60 AMP	1	
		ATTACHING PARTS		
- 2	AN5-52A	BOLT	1	
- 3	S1450-5H14-063	WASHER	2	
- 4	J9534-20	BUSHING RUBBER LO	2	
- 5	1250214-1	BUSHING	2	
- 6	J2005-2	MOUNT-BONDED LO	1	
- 7	NAS679A5	NUT	1	
		---*---		
- 8	1250215-1	ADJUSTING ARM ASSEMBLY-ALTERNATOR	1	
		ATTACHING PARTS		
- 9	0750220-1	BOLT	1	
-10	S1450-6-14-080	WASHER	1	
-11	MS20074-05-14	BOLT	1	
-12	S1450-5H14-040	WASHER	2	
-13	J9534-20	BUSHING-RUBBER LO	2	
		---*---		
-14	S1597-1-30.8	BELT-ALTERNATOR	1	
-15	1250213-1	SUPPORT ASSEMBLY-ALTERNATOR WEU 1250213-5	1	
	1250213-15 *	SUPPORT ASSEMBLY-ALTERNATOR	1	B

NOTE. *WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES PRIOR TO SERIAL 18260873 & A182-0137 ALSO ORDER 0750233-1 THROTTLE CONTROL BRACKET.

A---182 SERIAL 18257446 THRU 18262465
A182 SERIAL A182-0001 & ON
B---182 SERIAL 18260873 THRU 18262465
A182 SERIAL A182-0137 & ON

NUMERICAL INDEX

PART NUMBER	FIGURE AND INDEX NO.
.5002DIA X1 1/8	60 - 4
.5002X1 1/8	58 -22
AN8-MC1	89A-70
AN8-MC1	89B-47
AN123883	86 -57
AN155B16S	79 - 4
AN155B32L	76 - 6
AN155B32L	76 -13
AN155B32L	76A- 5
AN155B32L	76A-12
AN155B32S	74 -12
AN155B32S	74A-37
AN155B32S	76 -20
AN155B32S	76A-16
AN155B32S	77 - 8
AN155B32S	79 - 5
AN155B32S	80 - 6
AN155B8S	78 - 3
AN155B8S	79C-37
AN161-32LL	76 - 7
AN161-32LL	76 -12
AN161-32LL	76A- 6
AN161-32LL	76A-11
AN161-8LS	79C-38
AN165-22RS	77 - 9
AN173-12A	34 - 7
AN173-12A	34 - 8
AN173-12A	34 -15
AN173-12A	79B-29
AN175-6A	17 -16
AN175-7A	17 -18
AN175-7A	17A-18
AN21-10	74 -23
AN21-10	74A-45
AN21-10	76 - 2
AN21-10	76 -19
AN21-10	77 - 3
AN227-6	52C- 8
AN227-7	52C- 8
AN23-10	80 - 8
AN23-10A	77 - 6
AN23-10A	77 -27
AN23-10A	80 - 3
AN23-12	76B-38
AN23-15A	49 -20
AN23-15A	49A-20
AN23-15A	49B-19
AN23-15A	49C-19
AN23-15A	51A-18
AN23-15A	52A-18
AN23-15A	52B-22
AN23-16	49 - 2
AN23-16A	51A- 2
AN23-16A	51B- 3
AN23-19	33 - 5
AN23-19	33A- 5
AN23-19A	49 -33
AN23-19A	49 -51A
AN23-19A	49A- 2
AN23-19A	49A-33
AN23-19A	49B- 2
AN23-19A	49B-32
AN23-19A	49C- 2
AN23-19A	49C-32
AN23-19A	51A-70
AN23-19A	51A-81A
AN23-19A	51C-18
AN23-20A	51D-89
AN23-20A	51E-93
AN23-20A	51F-80
AN24-13	49 -24
AN24-13	49 -25
AN24-13	77 -15
AN24-13A	49A-24

PART NUMBER	FIGURE AND INDEX NO.
AN24-13A	49A-25
AN24-13A	49B-23
AN24-13A	49B-24
AN24-13A	49C-23
AN24-13A	49C-24
AN24-14	77 -20
AN24-14	77 -53
AN24-16	49 -26
AN24-16A	49A-26
AN24-16A	49B-25
AN24-16A	49C-25
AN24-28A	50 -12
AN2552-3A	90 -24
AN256-10	79 -32
AN256-8	74 -48
AN3-10A	10 - 7
AN3-10A	15A-43
AN3-10A	51B-13
AN3-10A	51B-21
AN3-10A	52A-14
AN3-10A	52A-35
AN3-10A	52B-18
AN3-10A	52B-31
AN3-10A	67 - 5
AN3-10A	71 -16
AN3-10A	72 -26
AN3-10A	78 -16
AN3-10A	78 -19
AN3-10A	78 -31
AN3-10A	79 -36
AN3-10A	79B-23
AN3-10A	79C-33
AN3-11	52A- 3
AN3-11A	10 - 2
AN3-11A	48 -26
AN3-11A	51 -36
AN3-11A	52 - 1
AN3-11A	52B- 4
AN3-11A	62 -24
AN3-11A	67 -12
AN3-11A	72 -17
AN3-11A	74 -46
AN3-11A	79 -11
AN3-11A	79C-16
AN3-11A	89 - 3
AN3-11A	89 - 3A
AN3-11A	89A- 6
AN3-11A	89A- 9
AN3-11A	89B-69
AN3-11A	89B-74
AN3-12A	89C-72
AN3-12A	89C-78
AN3-13A	51B-21D
AN3-13A	71 -32
AN3-13A	71A-33
AN3-13A	79C-48
AN3-13A	89B-16
AN3-13A	89C-15
AN3-14A	72 -31
AN3-15A	56 -19
AN3-15A	87 - 4
AN3-16A	76B-40B
AN3-16A	79B-40
AN3-17A	51B-21C
AN3-17A	51D- 2
AN3-17A	51E- 2
AN3-17A	51F- 2
AN3-17A	76 - 9
AN3-20A	18 - 7
AN3-21A	18 - 4
AN3-21A	76 -45
AN3-21A	76A-45
AN3-21A	79 -26
AN3-24A	52A-29

PART NUMBER	FIGURE AND INDEX NO.
AN3-24A	52B-25
AN3-3A	16 - 8
AN3-3A	23A-52
AN3-3A	23A-53
AN3-3A	23A-54
AN3-3A	23A-54
AN3-3A	25 -10
AN3-3A	29 -13
AN3-3A	29 -14
AN3-3A	29 -15
AN3-3A	29 -16
AN3-3A	31 -18
AN3-3A	31A-18
AN3-3A	62 -13
AN3-3A	62 -41
AN3-3A	71 -19
AN3-3A	71A-20
AN3-3A	76B-31
AN3-3A	78 - 4
AN3-3A	79 -39
AN3-3A	80 -28
AN3-3A	88 -20
AN3-3A	88A-20
AN3-3A	88B-15
AN3-3A	88C-13
AN3-3A	90 - 3
AN3-3A	90 -73
AN3-31A	37 - 9
AN3-4A	10 -26
AN3-4A	16 -18
AN3-4A	48 -30
AN3-4A	49 -57
AN3-4A	49A-59
AN3-4A	49B-58
AN3-4A	49C-57
AN3-4A	50 - 5
AN3-4A	51A-83
AN3-4A	51A-87
AN3-4A	51B-32
AN3-4A	51B-36
AN3-4A	51E-98C
AN3-4A	51F-98
AN3-4A	52C- 2
AN3-4A	56 - 7A
AN3-4A	58A- 7
AN3-4A	63 -70
AN3-4A	65 - 8
AN3-4A	65 -14
AN3-4A	65A- 4
AN3-4A	65A- 9
AN3-4A	71A-17
AN3-4A	72 -12
AN3-4A	79 -62
AN3-4A	79C-43
AN3-4A	89 - 3
AN3-4A	89 - 3
AN3-4A	89B-69
AN3-4A	89C-73
AN3-4A	89C-84
AN3-5A	31 -16
AN3-5A	31A-16
AN3-5A	62 -22A
AN3-5A	63 -68
AN3-5A	71 -25
AN3-5A	71 -35
AN3-5A	71A-36
AN3-5A	76B-45
AN3-5A	79C-20
AN3-5A	79C-24
AN3-5A	86 - 9
AN3-5A	89B-31
AN3-6	79 -32B
AN3-6A	44 - 5
AN3-6A	62 -30

PART NUMBER	FIGURE AND INDEX NO.
AN3-6A	71A-26
AN3-6A	71A-31B
AN3-6A	75 - 9A
AN3-6A	78 -12
AN3-6A	79 -18
AN3-6A	79 -34
AN3-6A	79B-19
AN3-6A	90 -18
AN3-60A	66 -38
AN3-67A	66 -35
AN3-7A	9 - 9
AN3-7A	62 -19
AN3-7A	76 - 3
AN3-7A	76A- 2
AN3-7A	76A- 8
AN3-7A	79C-28
AN3H3A	35 -36B
AN3H3A	35A-40B
AN310-3	35 -45
AN310-3	35A-49
AN310-3	74A-37A
AN310-3	76B-40
AN310-3	80 - 4
AN310-3	80 - 9
AN310-4	35 -33
AN310-4	35 -41
AN310-4	35A-36
AN310-4	35A-45
AN310-4	67 -18
AN310-4	79 -55
AN310-5	33 -11
AN310-5	33 -23
AN310-5	33A-12
AN310-5	33A-24
AN310-5	74 -31
AN310-5	74 -43
AN310-5	74A-25
AN315-3R	62 -21A
AN315-3R	80 -33
AN316-4	67 - 3
AN316-4R	9 -12
AN316-4R	10 - 6
AN316-4R	67 -15
AN316-4R	73 - 3
AN316-4R	79B-21
AN316-4R	79B-43
AN316-5R	60 -21
AN316C5R	51C-25
AN320-1	74 -25
AN320-1	74A-45
AN320-1	76 - 2
AN320-1	76 -19
AN320-1	77 - 4
AN320-3	33 - 5
AN320-3	33A- 5
AN320-4	77 -16
AN320-4	77 -21
AN320-4	77 -54
AN320C3	15 -56
AN320C3	78 -28
AN340-3	94 - 6
AN340-4	79 -69
AN340-4	79 -74
AN340-4	79B-16
AN340-4	79C-14
AN340-4	90A- 9
AN340-4	90A-14
AN340-4	90A-19
AN340-4	91A- 7
AN340-6	53A-24
AN340-6	53C-29
AN340-6	91 -21
AN340-8	56 -48
AN340-8	64B-36

PART NUMBER	FIGURE AND INDEX NO.
AN340-8	64C-11
AN340B6	53 -16
AN340B6	53 -17
AN340B6	53 -18
AN340B6	53 -34
AN340B6	53 -35
AN340B6	53 -36
AN340B6	53 -37
AN340B6	53G-23
AN340B6	53J-69
AN340B6	53L-72
AN340B6	53N-75
AN340B6	53Q-83
AN340B6	76B- 1
AN340B6	81 - 1
AN340B6	81 - 2
AN340B6	81 - 3
AN340B8	53 -10
AN340B8	53 -54
AN340B8	53A-15
AN340B8	53A-57
AN340B8	53C-20
AN340B8	53C-65
AN340B8	53E-22
AN340B8	53E-99
AN340B8	53G-23
AN340B8	53G-96
AN340B8	53J-37
AN340B8	53J-70
AN340B8	53L-38
AN340B8	53L-73
AN340B8	53N-41
AN340B8	53N-76
AN340B8	53Q-47
AN340B8	53Q-84
AN345-10	89C-49
AN355-8	58 -21
AN355-8	60 - 3
AN363-624	58 -26
AN365-428	40A-14
AN4-10A	76 -22
AN4-10A	77 -24
AN4-10A	77 -36
AN4-10A	77 -40
AN4-10A	80 -18
AN4-10A	80 -23
AN4-11A	13 - 1
AN4-11A	14 - 1
AN4-11A	14A- 1
AN4-11A	15 - 1
AN4-11A	15 -40
AN4-11A	15A- 1
AN4-11A	15A-59
AN4-11A	52 -18
AN4-11A	62 -34
AN4-11A	76 -35
AN4-11A	76A-34
AN4-12A	14 - 2
AN4-12A	31 -29
AN4-12A	31A-33
AN4-12A	52A-22
AN4-12A	52B-42
AN4-12A	77 -11
AN4-12A	77 -43
AN4-13A	40 - 4
AN4-13A	48 - 4
AN4-13A	52 - 7
AN4-13A	52D- 3
AN4-14A	31 -33
AN4-14A	31A-37
AN4-14A	36 - 3
AN4-14A	51 -18
AN4-14A	51A-37
AN4-14A	51C-33

PART NUMBER	FIGURE AND INDEX NO.
AN4-14A	84 - 3
AN4-15A	79 -54
AN4-15A	79 -63A
AN4-17A	52D-10
AN4-22A	36A- 9
AN4-22A	80 -12
AN4-23A	52A-25
AN4-23A	52B-45
AN4-3A	21 -23
AN4-31	35 -30
AN4-31	35 -38
AN4-31	35A-33
AN4-31	35A-42
AN4-31A	77 -47
AN4-35A	79 -63
AN4-36A	40A-12
AN4-37A	37A-10
AN4-4A	52 - 2
AN4-4A	90 - 6
AN4-4A	90 -17
AN4-4A	90 -19
AN4-42A	9 - 2
AN4-42A	76 -39
AN4-42A	76A-39
AN4-5	52A- 4
AN4-5	67 -17
AN4-5A	48 -33
AN4-5A	49A-55
AN4-5A	49B-53
AN4-5A	49C-52
AN4-5A	50 - 8
AN4-5A	51E-98A
AN4-5A	51F-93
AN4-5A	52 -15
AN4-5A	52A- 1
AN4-5A	52B- 1
AN4-5A	52B- 6
AN4-5A	90 -64B
AN4-56A	79 -31
AN4-56A	79 -47
AN4-6A	12B- 1
AN4-6A	26 - 6A
AN4-6A	49 -53
AN4-6A	52C-18
AN4-6A	52D-21
AN4-6A	56 -11
AN4-6A	84A-32
AN4-6A	90 -19
AN4-7	33 - 5
AN4-7	33A- 5
AN4-7A	15 -41
AN4-7A	15A-60
AN4-7A	26 - 6B
AN4-7A	56 - 9
AN4022-1	63 -39
AN4022-1	85 - 1
AN4022-1	85 - 2
AN4022-1	85 - 4
AN4022-1	85 - 6
AN4023-1	62 -50
AN4078-1	86 - 7
AN415-2	30 - 6
AN415-2	30 -21
AN4284A	56 - 7
AN486-4	67 - 4
AN486-4	79B-41
AN5-10A	33 - 3
AN5-10A	33A- 3
AN5-11A	76A-18
AN5-11A	77 -30
AN5-12A	76 -30
AN5-12A	79 -14
AN5-13A	76 -24
AN5-13A	76A-22

PART NUMBER	FIGURE AND INDEX NO.
AN5-13A	76A-29
AN5-16A	35A-13
AN5-16A	74 - 4
AN5-17A	35A-13
AN5-17A	39B-20
AN5-21A	39B-20
AN5-22A	39 -13
AN5-22A	39A-13
AN5-25A	39 -13
AN5-27A	35 - 7
AN5-3A	16 - 8
AN5-31A	33 - 2
AN5-31A	33A- 2
AN5-33A	35 - 4
AN5-34A	33A-29
AN5-35A	37B- 3
AN5-35A	40A-12
AN5-47	33 -10
AN5-47A	33 -18
AN5-5B6R12	53C-20
AN5-51A	33 -18A
AN5-51A	35A- 8
AN5-51A	33 -18
AN5-52A	95 - 2
AN5-55	33A-10
AN5-56A	33A-18
AN5-6A	12 - 1
AN5-6A	12 - 7
AN5-6A	12A- 1
AN5-6A	12B- 2A
AN5-6A	17A-16
AN5-7A	6 -12
AN5-7A	6A-14
AN5-7A	12B- 2
AN5-7A	56 -39B
AN500-10-10	82 -22
AN500-10-10	82A-25
AN500-8-8	64B- 3
AN500A10-8	64C- 2
AN500A8-4	51B- 2
AN500A8-4	51D- 1
AN500A8-7	8 -22
AN500B8-6	57B- 7
AN501A10-10	60 -15
AN502-10-14	64B-43
AN502-10-6	40 -21
AN503-8-10	64 -23
AN503-8-10	64B-33
AN503-8-12	64C- 8
AN503-8-16	64B-35
AN503-8-16	64C-10
AN503-8-8	64C- 5
AN504-8R8	40 - 9
AN507-10R8	61B-66
AN507-1032R12	41 - 1
AN507-1032R12	41A- 2
AN507-1032R12	42 - 1
AN507-1032R12	42A- 2
AN507-1032R12	69A-15B
AN507-1032R14	56 -25
AN507-1032R6	74 -77
AN507-1032R6	74B- 4
AN507-1032R8	41 - 3
AN507-1032R8	42 - 3
AN507-1032R8	75 -19
AN507-428R7	8 -34
AN507-428R7	8 -43
AN507-440R4	53B-18
AN507-6R8	90 -75
AN507-632R10	55 -10
AN507-632R12	3 -38
AN507-632R12	3 -51
AN507-632R12	43 -24
AN507-632R12	43A- 6

PART NUMBER	FIGURE AND INDEX NO.
AN507-632R12	53A-24
AN507-632R12	53C-29
AN507-632R14	3 -51
AN507-632R3	53B-17
AN507-632R3	53D- 9
AN507-632R3	53F- 8
AN507-632R3	53H- 8
AN507-632R3	54 -18
AN507-632R3	86 - 5
AN507-632R4	10 -16
AN507-632R6	61 11
AN507-632R6	61B-13
AN507-632R8	3 -45
AN507-632R8	3 -50
AN507-640R4	81 -23
AN507-832R12	89B- 6
AN507-832R12	89C- 6
AN507-832R12	91A-11
AN507-832R14	49 - 6
AN507-832R14	49A- 8
AN507-832R14	49B- 8
AN507-832R14	49C- 8
AN507-832R14	51A- 6
AN507-832R14	52A-17
AN507-832R14	52B-21
AN507-832R4	81 -50
AN507-832R6	3 -53
AN507-832R6	11 -16
AN507-832R6	11 -16
AN507-832R6	17 -10
AN507-832R6	17 -63
AN507-832R6	17A-65
AN507-832R6	21 -24
AN507-832R6	44 -13
AN507-832R6	74 -65
AN507-832R7	74B-21
AN507-832R8	23A-26
AN507-832R8	41 - 3
AN507-832R8	42 - 3
AN507-832R8	89B-10
AN5078103 2R16	53 -30
AN5078103 2R16	87 -37
AN5078103 2R16	87 -39
AN507863RR12	53C-69
AN507863RR12	53E-31
AN5078632-6	53C-99A
AN5078632-6	53L-83
AN5078632-6	53N-86
AN5078632R12	53 - 7
AN5078632R12	53 - 9
AN5078632R12	53 -16
AN5078632R12	53 -17
AN5078632R12	53 -18
AN5078632R12	53 -34
AN5078632R12	53 -35
AN5078632R12	53 -36
AN5078632R12	53 -37
AN5078632R12	53 -58
AN5078632R12	53A-25
AN5078632R12	53A-68
AN5078632R12	53C-30
AN5078632R12	53C-73
AN5078632R12	53E-33
AN5078632R12	53G-23
AN5078632R12	53G-32
AN5078632R12	53G-34
AN5078632R12	53J-69
AN5078632R12	53J-79
AN5078632R12	53J-81
AN5078632R12	53L-72
AN5078632R12	53L-82
AN5078632R12	53L-84
AN5078632R12	53N-75
AN5078632R12	53N-85

PART NUMBER	FIGURE AND INDEX NO.
AN5078632R12	53N-87
AN5078632R12	53Q-83
AN5078632R12	53Q-90B
AN5078632R12	53Q-91
AN5078632R12	54 - 9
AN5078632R12	55 -16
AN5078632R12	81 - 1
AN5078632R12	81 - 2
AN5078632R12	81 - 3
AN5078632R12	87 - 7
AN5078632R12	90 -15
AN5078632R16	53 -33
AN5078632R4	53C-43
AN5078632R4	53E-43
AN5078632R4	53G-44
AN5078632R4	53J-92A
AN5078632R6	53Q-91A
AN5078632R7	53E-95
AN5078632R7	53G-90
AN5078832R14	57B-16
AN5078832R24	53 -10
AN5078832R24	53A-15
AN5078832R24	53C-20
AN5078832R24	53E-22
AN5078832R24	53G-23
AN5078832R24	53J-70
AN5078832R24	53L-73
AN5078832R24	53N-76
AN5078832R24	53Q-84
AN5078832R24	57A- 5A
AN5078832R8	57A- 5
AN5078832R8	57B- 5
AN507DD440R8	89B-23
AN507DD440R8	89C-22
AN5078R8	3 -33
AN507832R6	74A-17B
AN507832R7	74A-17B
AN509-10R12	28 - 9
AN509-10R14	41 - 1
AN509-10R14	41A- 1
AN509-10R14	42 - 1
AN509-10R14	42A- 1
AN509-10R14	90 -25
AN509-10R17	47A- 9
AN509-10R17	47B- 9
AN509-10R17	47C-11
AN509-10R23	15A-43
AN509-10R29	15 -15
AN509-10R31	13 -13
AN509-10R4	8 - 5
AN509-10R6	8 -33
AN509-10R6	8 -42
AN509-10R8	39B-10
AN509-10R8	41A-15
AN509-10R8	42A-13
AN509-10R8	61C-79
AN509-10R8	68B-11
AN509-416R12	14 -30
AN509-416R12	14A-50
AN509-416R13	14 -29
AN509-416R13	14A-51
AN509-8R14	82A-11A
AN509-8R7	53J-33
AN509-8R7	53L-33
AN509-8R7	53N-34
AN51084R8	57B-14
AN515-10R8	73 -18
AN515-10R8	84A- 1
AN515-2R10	74B-19
AN515-2R8	74B-15
AN515-3R6	94 - 5
AN515-4-9	79 -52B
AN515-4R10	45A-34
AN515-4R10	45B-25

PART NUMBER	FIGURE AND INDEX NO.
AN515-4R10	79 -74
AN515-4R12	79 -69
AN515-4R12	79B-14
AN515-4R12	79C-12
AN515-4R4	53 -58
AN515-4R4	62 -51
AN515-4R4	90 - 9A
AN515-4R4	90 -11
AN515-4R4	90A- 8
AN515-4R5	45A-32
AN515-4R5	45B-23
AN515-4R6	90A- 4
AN515-4R6	90A-12
AN515-4R6	90A-18
AN515-4R8	74B-28
AN515-6R10	9 -33
AN515-6R10	13 -34
AN515-6R10	41 -21
AN515-6R10	42 -20
AN515-6R10	70 -34
AN515-6R10	88C- 4
AN515-6R12	88 - 6
AN515-6R12	88A- 6
AN515-6R12	88C- 4
AN515-6R4	79A-12
AN515-6R5	53A-67
AN515-6R5	74 -39
AN515-6R6	3 -63
AN515-6R6	9 -33
AN515-6R6	13 -34
AN515-6R6	13 -34
AN515-6R6	16 -21
AN515-6R6	19 -20
AN515-6R6	19 -25
AN515-6R6	31 -27C
AN515-6R6	31A-31
AN515-6R6	41 -21
AN515-6R6	42 -20
AN515-6R6	53E-32
AN515-6R6	53G-33
AN515-6R6	53J-80
AN515-6R6	53N-71
AN515-6R6	53N-72
AN515-6R6	53Q-79
AN515-6R6	53Q-80
AN515-6R6	74A-55
AN515-6R6	74B-23
AN515-6R6	79 -71
AN515-6R6	79A- 7
AN515-6R6	88C- 2
AN515-6R6	88C- 4
AN515-6R6	89A-49
AN515-6R7	92A-16
AN515-6R8	47C- 2
AN515-6R8	47C-13
AN515-6R8	53Q- 4
AN515-6R8	71A-54
AN515-6R8	74 -69
AN515-6R8	74A-16
AN515-6R8	74B-28
AN515-6R8	74C-26
AN515-6R8	79 -66
AN515-6R8	91 -19
AN515-6R8	92A-16
AN515-8-10	69A-28
AN515-8-8	89C- 9
AN515-8R10	54 - 3
AN515-8R10	56 -47
AN515-8R10	90 -62
AN515-8R11	92A-24
AN515-8R12	54 - 3
AN515-8R12	56 -39
AN515-8R12	76 -50
AN515-8R12	76A-50

PART NUMBER	FIGURE AND INDEX NO.
AN515-8R12	79 - 9
AN515-8R14	52C-10
AN515-8R16	56 -36
AN515-8R24	3 -23
AN515-8R24	91A-20
AN515-8R32	84A-34
AN515-8R4	33 -35
AN515-8R4	39 -23
AN515-8R4	39 -73
AN515-8R4	39A-22
AN515-8R4	39A-61
AN515-8R4	39B-31
AN515-8R4	39B-72
AN515-8R4	70 -16
AN515-8R5	23A-70
AN515-8R5	25 - 38
AN515-8R6	3 -25
AN515-8R6	8 -31
AN515-8R6	12 -47
AN515-8R6	15A-66
AN515-8R6	20 -22
AN515-8R6	25 -70
AN515-8R6	39 - 9
AN515-8R6	39A- 9
AN515-8R6	47B-26
AN515-8R6	47C-32
AN515-8R6	47D-33
AN515-8R6	51D-85
AN515-8R6	51E-88
AN515-8R6	51F-73
AN515-8R6	75 - 7
AN515-8R6	81 -52
AN515-8R6	90 -60
AN515-8R6	92 - 1
AN515-8R6	92 -13
AN515-8R7	25 -61
AN515-8R7	25 -62
AN515-8R7	25 -76
AN515-8R7	52C- 6
AN515-8R7	55A- 3
AN515-8R7	76B-36
AN515-8R7	79B-33
AN515-8R7	79B-34
AN515-8R8	3 -31
AN515-8R8	3 -31
AN515-8R8	8 -21
AN515-8R8	11 -21
AN515-8R8	12 - 8
AN515-8R8	44 -19
AN515-8R8	52D- 2
AN515-8R8	52D- 7
AN515-8R8	56 -30
AN515-8R8	61B-51G
AN515-8R8	61C-77
AN515-8R8	68 - 3
AN515-8R8	68A- 3
AN515-8R8	69 -12
AN515-8R8	69A-12
AN515-8R8	74A-59
AN515-8R8	76B-28
AN515-8R8	89A-66
AN515-8R8	91A- 3
AN515-8R8	92A- 1
AN515-8R8	92A-21
AN51586-5	63 -17
AN51586R12	53A-23
AN51586R12	53E-20
AN51586R12	53G-11
AN51586R12	53G-12
AN51586R12	53G-18
AN51586R12	53G-21
AN51586R12	53G-30
AN51586R12	53G-31
AN51586R12	53J-57

PART NUMBER	FIGURE AND INDEX NO.
AN51586R12	53J-58
AN51586R12	53J-59
AN51586R12	53J-67
AN51586R12	53J-77
AN51586R12	53J-78
AN51586R12	53L-60
AN51586R12	53L-61
AN51586R12	53L-62
AN51586R12	53L-70
AN51586R12	53L-80
AN51586R12	53L-81
AN51586R12	53N-63
AN51586R12	53N-64
AN51586R12	53N-65
AN51586R12	53N-73
AN51586R12	53N-74
AN51586R12	53N-75
AN51586R12	53N-83
AN51586R12	53N-84
AN51586R12	53Q-71
AN51586R12	53Q-72
AN51586R12	53Q-73
AN51586R12	53Q-81
AN51586R12	53Q-82
AN51586R12	53Q-83
AN51586R12	53Q-91B
AN51586R12	53Q-91C
AN51586R12	88B-32
AN51586R12	88C-29
AN51596R16	53A-10E
AN51586R16	53C-15
AN51586R16	53C-57
AN51586R16	53E-16
AN51586R16	53G-17
AN51596R16	53J-64
AN51586R16	53L-67
AN51586R16	53N-70
AN51586R16	53Q-78
AN51586R16	76B- 1
AN51586R6	53 -48
AN51586R6	53A-54
AN51586R6	53C-62
AN5158632R12	56 -32
AN51588R12	53Q-68
AN51588R16	53A-49
AN51588R20	53 -44
AN51588R8	53Q-67
AN520-10P20	47C-14
AN520-10R8	51A-41
AN520-10R10	8 -27
AN520-10P10	33 -30
AN520-10R10	39 -40
AN520-10R10	39 -40
AN520-10R10	39 -44
AN520-10R10	39 -44
AN520-10R10	39 -45
AN520-10R10	39 -50
AN520-10R10	39 -63
AN520-10R10	39A-36
AN520-10R10	39A-38
AN520-10R10	39A-42
AN520-10R10	47A-12
AN520-10R10	47B-12
AN520-10R10	89A-64
AN520-10R12	39B-43
AN520-10R12	46 - 4
AN520-10R12	88 -50
AN520-10R14	56 -39
AN520-10R16	39A-54
AN520-10R16	39B-57
AN520-10R16	81 -31
AN520-10R20	46 - 4
AN520-10R20	47D-21
AN520-10R26	67 -10

PART NUMBER	FIGURE AND INDEX NO.
AN520-10R28	70 -13
AN520-10R5	39 -40
AN520-10R5	39 -44
AN520-10R5	39 -57
AN520-10R6	33 -31A
AN520-10R6	39B-37
AN520-10R6	68B- 4
AN520-10R6	68B- 5
AN520-10R6	68B- 5
AN520-10R6	88 - 8
AN520-10R6	88A- 8
AN520-10R6	90 -68
AN520-10R7	56 -59
AN520-10R7	58 -14
AN520-10R7	89 -18
AN520-10R7	90 -76
AN520-10R8	4 -37
AN520-10R8	4 -38
AN520-10R8	4A-38
AN520-10R8	4A-39
AN520-10R8	48-37
AN520-10R8	48-38
AN520-10R8	27 - 6
AN520-10R8	39 -44
AN520-10R8	39 -58
AN520-10R8	51D-31
AN520-10R8	51D-63
AN520-10R8	51E-32
AN520-10R8	51E-65
AN520-10R8	51F-31
AN520-10R8	51F-58
AN520-10R8	56 -61
AN520-10R8	61A-49
AN520-10R8	61B-52
AN520-10R8	68B- 6
AN520-10R8	78 -24
AN520-10R8	84A-22
AN520-10R8	88 -50
AN520-10R8	88A-57
AN520-10R8	88B-52
AN520-10R8	89C-49
AN520-10R8	90 -43
AN520-10R8	90 -66
AN520-10R9	43 -12
AN520-10R9	43A-25
AN520-416R6	58 -36
AN520-416R8	90 -19
AN520-416R8	90 -50
AN520-6-8	94 -17
AN520-6R10	88B- 6
AN520-6R10	88B- 8
AN520-6R6	53E-18
AN520-6R6	53E-19
AN520-6R6	53G-19
AN520-6R6	53G-20
AN520-6R6	53J-65
AN520-6R6	53J-66
AN520-6R6	53L-68
AN520-6R6	53L-69
AN520-6R6	88B- 2
AN520-6R6	88B- 4
AN520-8R6	29 -53
AN520-8R6	29A-41
AN520-8R6	29B-46
AN520-8R6	61C-48
AN520C5-4	89A-62
AN525-10R10	39A-56
AN525-10R10	39B-60
AN525-10R12	39A-57
AN525-10R12	39B-59
AN525-10R12	56 -65
AN525-10R14	39B-66
AN525-10R14	58 - 7
AN525-10R16	39B-65

PART NUMBER	FIGURE AND INDEX NO.
AN525-10R18	43A-13
AN525-10R20	56 -65
AN525-10R22	75 -13
AN525-10R6	75 -22
AN525-10R7	89 -15
AN525-10R7	89A-51
AN525-10R8	18 -21
AN525-10R8	24 -17
AN525-10R8	41 -37
AN525-10R8	41A-48
AN525-10R8	84A-24
AN525-8R7	90 - 9A
AN525-832R10	53Q-59
AN525-832R10	53Q-65
AN525-832R6	39B-47
AN525-832R6	82A-39B
AN525-832R7	12 - 8
AN525-832R7	12 -41
AN525-832R7	12A-43
AN525-832R7	12B- 7
AN525-832R7	12B-41
AN525-832R7	14 -42
AN525-832R7	14A-54
AN525-832R7	41A-31
AN525-832R7	42A-30
AN525-832R7	44 -108
AN525-832R7	92A-21
AN525-832R8	3 -31
AN525-832R8	17A-76
AN525-832R8	53Q-66
AN525-832R8	89 - 7
AN525-832R8	89A-18
AN525-832R8	89B-53
AN525-832R8	89C-40
AN530-6R10	32 - 4
AN535-0-2	64 -20
AN545-6R4	30 -15
AN565B2-3	53J-91
AN565B2-3	53L-90A
AN565B2-3	53N-92A
AN565B2-3	53Q-95
AN565B2H3	53J-91
AN565B2H3	53L-90A
AN565B2H3	53N-92A
AN565B2H3	53Q-95
AN565B4-2	74B- 5
AN565B4-2	74C-13
AN565D6H3	73 -17
AN565D6H3	79A- 4
AN565D832H3	79 -56
AN6-15A	79 -48
AN6-17A	39 -35
AN6-17A	39A-32
AN6-17A	39B-23
AN6-21A	39B-23
AN6-23A	39 -15
AN6-23A	39A-15
AN6-24A	39 -15
AN6-25A	62 - 3
AN6-34A	62 - 2
AN6-6A	39 -35
AN6-6A	39 -56
AN6-6A	39A-46
AN6-6A	39B-49
AN6-7A	12 - 1
AN6-7A	12 - 4
AN6-7A	12A- 2
AN6DD51A	60 -11
AN6227-89	64B-40
AN6227-18	38 - 7
AN6227B10	38A- 3
AN6227B10	38A-13
AN6227B10	38B- 4
AN6227B10	86 -44

PART NUMBER	FIGURE AND INDEX NO.
AN6227B13	60 -33
AN6227B20	38 - 7
AN6227B22	38A- 5
AN6227B22	39A-14
AN6227B22	38B- 3
AN6227B26	35 -10
AN6227B26	35A- 6
AN6227B3	38B-10
AN6227B32	35 -23
AN6227B32	35A-26
AN6227B42	60 -25
AN6227B5	35 -13
AN6227B5	35A- 7
AN6227B51	60 -40
AN6227B6	38 - 3
AN6227B6	38 - 8
AN6227B6	86 -48
AN6227B7	38 - 3
AN6227B7	38 - 8
AN6227B8	73 - 8
AN623082	40 -13
AN623082	40A-21
AN6230820	36 - 8
AN6230825	60 -26
AN6230828	40 - 1
AN623083	35 -16
AN623083	35A-19
AN623083	40 -14
AN623086	35 -25
AN623086	35A-28
AN623086	60 - 5
AN7-20A	3 - 4
AN7-33A	63 - 6
AN7-40A	90 -37
AN735-9	80 -29
AN735D20	56 -46
AN735D36	88A-57
AN735D36	88B-52
AN737R430	82 - 2
AN737R430	82A- 2
AN737TW46	69 -22B
AN741-18P	62 -24
AN741TD7	84A-31
AN742D12	63 -15
AN742D12	90 -43
AN742D3	62 -11
AN742D3	62 -12
AN742D3	84A-34
AN742D3	89B-30
AN742D3	89C-27
AN742D32	86 - 8
AN742D34	62 -42
AN742D34	63 -15
AN742D36	70 -22
AN742D4	4 - 4
AN742D4	4A- 4
AN742D4	48- 4
AN742D4	62 -40
AN742D4	81 -19
AN742D4	92A-15
AN742D5	79B-37
AN742D50	63 -61
AN742D50	70 -22
AN742D6	79B-33
AN742D6	79B-34
AN742D7	81 -30
AN742D8	87 -15
AN743-12	71A-54
AN780-2	85 - 1
AN780-2	85 - 2
AN780-2	85 - 5
AN780-2	85 - 6
AN8-20A	11 - 4
AN8-23A	3 - 1

PART NUMBER	FIGURE AND INDEX NO.
AN8-25A	11 - 2
AN8040B	82 -18
AN8040B	82A-21
AN815-3D	71A- 4
AN815-3D	71A- 6
AN815-3D	71A- 9
AN815-3D	71A-11
AN815-3D	71A-13
AN815-3D	71A-46
AN815-3D	71A-49
AN815-3D	71A-53
AN815-3D	71A-65
AN815-4D	39 -29
AN815-4D	71 - 6
AN815-4D	71 - 9
AN815-4D	71 -13
AN815-4D	89A-26
AN815-4D	89B-87
AN815-6D	82 - 7
AN815-8D	82 -11
AN815-8D	82 -16
AN815-8D	82A-14
AN815-8D	82A-19
AN816-2D	53A-21
AN816-2D	53C-27
AN816-2D	53E-29
AN816-2D	53G-30
AN816-2D	53J-77
AN816-2D	53L-80
AN816-2D	53N-83
AN816-2D	82A-46
AN816-2D	85 - 8
AN816-2D	87 -34
AN816-4D	39 -26
AN816-4D	40A-30
AN816-4D	86 -19
AN816-4D	88 -35
AN816-4D	88A-41
AN816-4D	88A-42
AN816-4D	88B-26
AN816-4D	88B-29
AN816-4D	88C-20
AN816-4D	88C-27
AN816-4D	88C-55
AN816-4D	89A-29
AN816-4D	89B-77
AN816-4D	89C-89
AN816-6D	88 -25
AN816-6D	88 -33
AN816-6D	88A-18
AN816-6D	88B-27
AN816-6D	88C- 6
AN816-6D	88C-18
AN816-6D	88C-40
AN818-2D	53Q-918
AN821-4D	89C-95B
AN824-4D	89B-80
AN824-4D	89C-92
AN832-2D	62 - 8
AN832-2D	66 -16
AN832-2D	85 -17
AN832-3D	71A-66
AN833-2D	62 - 9
AN833-2D	62 -43
AN833-2D	85 -17
AN833-3D	39B-34
AN833-3D	71A-57
AN833-4D	39 -26
AN834-2D	62 -47
AN834-2D	63 -40
AN837-3D	71A-63
AN837-4D	71 - 5
AN837-4D	71 -13
AN837-4D	86 - 3

PART NUMBER	FIGURE AND INDEX NO.
AN842-8	87 -19
AN842-8	88 -45
AN842-8	89A-53
AN842-8	88B-48
AN844-4D	88C-56
AN844-8	87 - 9
AN844-8	88 -57
AN844-8	88A-64
AN844-8	88B-59
AN900-10	62 -42
AN900-6	63 -65
AN901-5A	35 -15
AN901-5A	35A-18
AN910-1	89B- 2
AN910-1	89C- 2
AN910-1D	81 -36
AN911-1D	81 -16
AN912-1D	87 -33
AN912-1D	87 -41
AN912-2	87 -23
AN912-2	87 -24
AN912-3	63 -53
AN912-4	87 - 5
AN912-4D	88C-36
AN914-1D	39 -26A
AN914-1D	39A-25
AN914-1D	40A-30
AN914-1D	71A- 2
AN914-1D	84 - 9
AN914-1D	88 -29A
AN915-2D	88A-28
AN915-2D	71A- 2
AN916-1D	81 -15
AN916-1D	39A-26
AN919-2D	71A-61
AN921-3D	71 - 1
AN921-4D	71 - 2
AN921-4D	73 -11
AN921-4D	88C-31
AN924-10D	62 - 8
AN924-2D	62 - 9
AN924-2D	62 -43
AN924-2D	62 -49
AN924-2D	63 -40
AN924-2D	66 -17
AN924-2D	85 -17
AN924-2D	89B-34
AN924-3D	71A-56
AN924-3D	71A-62
AN924-3D	71A-64
AN924-3D	63 -87
AN924-4	39 -28
AN924-4D	71 - 1
AN924-4D	71 - 2
AN924-4D	71 - 5
AN924-4D	71 -13
AN924-4D	73 -13
AN924-4D	86 - 3
AN924-4D	87 -28
AN924-6D	88 -40
AN924-6D	88A-46
AN924-6D	88B-41
AN924-6D	82 -18
AN924-8D	82A-21
AN924-8D	89B-62
AN932-S2	89C-65
AN932-S2	64B- 6
AN932-1	86 -33
AN932C4	86 -54
AN932C4	89A- 4
AN932S2	64 - 4
AN935-10	64 -29
AN935-10	82 -23
AN935-10	82A-26
AN935-10	

PART NUMBER	FIGURE AND INDEX NO.
AN935-10	90 -43
AN935-10L	64B-44
AN935-3L	94 - 6A
AN935-416	58 -38
AN935-8L	64 -24
AN935-8L	64B-34
AN936-A4	79 -52R
AN936A10	84A- 2
AN936A4	79 -52
AN936A4	79 -69
AN936A4	79 -74
AN936A416	49 -27
AN936A416	49A-27
AN936A416	49B-26
AN936A416	49C-26
AN936A416	57A-17
AN936A416	57B-19
AN936A416	90 -64D
AN936A6	3 -63
AN936A6	9 -33
AN936A6	9 -33
AN936A6	13 -34
AN936A6	53C-29
AN936A6	90 -75
AN936A6	91 -20
AN936A68	63 -17
AN936A616	49 -27
AN936A616	49A-27
AN936A616	49B-26
AN936A616	49C-26
AN936A8	33 -35
AN936A8	39 -24
AN936A8	39 -74
AN936A8	39A-23
AN936A8	39A-61
AN936A8	39B-32
AN936A8	39B-72
AN936A8	53 -53
AN936A8	53A-58
AN936A8	53C-66
AN936A8	53E-98
AN936A8	53G-95
AN936A8	53J-36
AN936A8	53L-37
AN936A8	53N-40
AN936A8	53Q-46
AN936A8	64B- 4
AN936A8	69 -14
AN936A8	69A-14
AN936A8	70 -16
AN936A8	82A-39C
AN936B10	43 -13
AN936B10	62 -24
AN936B10	79A- 5A
AN93686	53A-67
AN93686	53A-67
AN93686	79A-13
AN936868	53 -16
AN936868	53 -17
AN936868	53 -18
AN936868	53 -34
AN936868	53 -35
AN936868	53 -36
AN936868	53C-20
AN936868	53N-64
AN936868	53Q-72
AN9369616	39 -37
AN9369516	39 -59
AN9368616	39A-34
AN9368616	39A-47
AN9369616	39B-50
AN936868	53A-23
AN936868	53G-11
AN936868	53G-12

PART NUMBER	FIGURE AND INDEX NO.
AN936868	53G-18
AN936868	53G-30
AN936868	53G-31
AN936868	53J-57
AN936868	53J-58
AN936868	53J-59
AN936868	53J-77
AN936868	53J-78
AN936868	53L-60
AN936868	53L-61
AN936868	53L-62
AN936868	53L-80
AN936868	53L-81
AN936D6	13 -34
AN936D6	53C-29
AN944-101A	35 -36
AN944-101A	35A-40
AN960-D10L	57B-11
AN960-10	4A-27
AN960-10	4B-28
AN960-10	10 - 3
AN960-10	13 -14
AN960-10	14 -39B
AN960-10	14A-36
AN960-10	15 -55
AN960-10	18 - 8
AN960-10	31 -16
AN960-10	31A-16
AN960-10	33 - 5
AN960-10	33 - 8
AN960-10	33 -31
AN960-10	33 -31B
AN960-10	33A- 5
AN960-10	33A- 8
AN960-10	34 - 9
AN960-10	39 -64
AN960-10	39A-54
AN960-10	39B-57
AN960-10	44 - 8
AN960-10	47 -11
AN960-10	51 -20
AN960-10	51 -33
AN960-10	51 -41
AN960-10	51A-44
AN960-10	51D-39
AN960-10	51D-71
AN960-10	51E-41
AN960-10	51E-60
AN960-10	51E-74
AN960-10	51F-64
AN960-10	56 -67
AN960-10	56 -67
AN960-10	58A- 8
AN960-10	62 -25A
AN960-10	65A-10
AN960-10	72 -31
AN960-10	79 -19
AN960-10	79 -32B
AN960-10	79 -37
AN960-10	79 -58B
AN960-10	79B-40
AN960-10	79C-29
AN960-10	89A-59
AN960-10	89B-19
AN960-10	89B-28
AN960-10	89B-31
AN960-10	89C-18
AN960-10	89C-25
AN960-10	89C-28
AN960-10	90 -66
AN960-10L	9 -10A
AN960-10L	15A-43
AN960-10L	16 - 8
AN960-10L	17A-77

PART NUMBER	FIGURE AND INDEX NO.
AN960-10L	34 -15
AN960-10L	35 -44
AN960-10L	35A-48
AN960-10L	39B-12
AN960-10L	41A- 3
AN960-10L	42A- 3
AN960-10L	46 - 4
AN960-10L	49 - 8
AN960-10L	49 -34
AN960-10L	49A- 6
AN960-10L	49A-34
AN960-10L	49B- 6
AN960-10L	49B-33
AN960-10L	49C- 6
AN960-10L	49C-33
AN960-10L	51A- 8
AN960-10L	51A-42
AN960-10L	51A-72
AN960-10L	51B- 6
AN960-10L	51B-13
AN960-10L	51B-21
AN960-10L	51B-21D
AN960-10L	51C-19
AN960-10L	51D- 3
AN960-10L	51D- 5
AN960-10L	51D-32
AN960-10L	51D-64
AN960-10L	51D-77
AN960-10L	51D-91
AN960-10L	51E- 3
AN960-10L	51E- 5
AN960-10L	51E-33
AN960-10L	51E-66
AN960-10L	51E-80
AN960-10L	51E-95
AN960-10L	51F- 3
AN960-10L	51F- 5
AN960-10L	51F-32
AN960-10L	51F-52
AN960-10L	51F-59
AN960-10L	51F-77
AN960-10L	51F-81
AN960-10L	52A-15
AN960-10L	52A-32
AN960-10L	52B- 5
AN960-10L	52B-19
AN960-10L	52B-28
AN960-10L	53 -37
AN960-10L	53G-23
AN960-10L	53J-69
AN960-10L	53L-72
AN960-10L	53N-75
AN960-10L	53Q-83
AN960-10L	56 - 6
AN960-10L	57 - 4
AN960-10L	62 -15
AN960-10L	63 -33
AN960-10L	63 -68
AN960-10L	63 -70
AN960-10L	67 - 6
AN960-10L	67 -10
AN960-10L	67 -13
AN960-10L	69 -38
AN960-10L	69A-30
AN960-10L	69A-43
AN960-10L	70 -11
AN960-10L	70 -13
AN960-10L	70 -42
AN960-10L	71A-31B
AN960-10L	74 -46
AN960-10L	75 - 9A
AN960-10L	76B-45
AN960-10L	78 -27
AN960-10L	79 -42

PART NUMBER	FIGURE AND INDEX NO.
AN960-10L	79 -58C
AN960-10L	79 -62
AN960-10L	79B-42
AN960-10L	79C-20
AN960-10L	79C-21
AN960-10L	79C-24
AN960-10L	79C-34
AN960-10L	79C-40
AN960-10L	79C-43
AN960-10L	79C-48
AN960-10L	81 - 1
AN960-10L	81 - 2
AN960-10L	81 - 3
AN960-10L	84A-33
AN960-10L	86 -10
AN960-10L	89A-52
AN960-10L	90 -68
AN960-10L	90 -71
AN960-10L	90 -73
AN960-10L	94 - 8
AN960-1216L	82 -18
AN960-1216L	82 -18
AN960-1216L	82A-21
AN960-1216L	82A-21
AN960-4	5A- 9
AN960-4	5B- 8
AN960-4	5B- 9
AN960-416	12B- 3
AN960-416	13 - 2
AN960-416	14 - 3
AN960-416	14 -31
AN960-416	14A- 2
AN960-416	14A-51
AN960-416	15A- 2
AN960-416	31 -30
AN960-416	31A-34
AN960-416	31A-38
AN960-416	36 - 4
AN960-416	36A-10
AN960-416	37 -10
AN960-416	37A-11
AN960-416	40 - 5
AN960-416	40A-13
AN960-416	51A-62
AN960-416	52A-13
AN960-416	52B-16
AN960-416	52D- 4
AN960-416	52D-11
AN960-416	52D-23
AN960-416	56 - 9
AN960-416	74 -74
AN960-416	74A-21
AN960-416	76 -22
AN960-416	76 -36
AN960-416	76 -46
AN960-416	76A-35
AN960-416	76A-46
AN960-416	77 -12
AN960-416	77 -44
AN960-416	77 -49A
AN960-416	78 -17
AN960-416	79 -24
AN960-416	79 -63
AN960-416	80 -16
AN960-416	84 - 5
AN960-416	84A-26
AN960-416L	15 - 2
AN960-416L	35 -32
AN960-416L	35 -40
AN960-416L	35A-35
AN960-416L	35A-44
AN960-416L	40A-23
AN960-416L	40A-26
AN960-416L	49B-55

PART NUMBER	FIGURE AND INDEX NO.
AN960-416L	49C-54
AN960-416L	50 -13
AN960-416L	51D-13
AN960-416L	51D-16
AN960-416L	51E-13
AN960-416L	51E-16
AN960-416L	51E-98A
AN960-416L	51F-12
AN960-416L	51F-95
AN960-416L	52B- 2
AN960-416L	52B-43
AN960-416L	62 -37
AN960-416L	62 -39
AN960-416L	67 -20
AN960-416L	70 -36
AN960-416L	74A-22
AN960-416L	75 -11
AN960-416L	77 -37
AN960-416L	77 -41
AN960-416L	77 -59
AN960-416L	78 -20
AN960-416L	80 -13
AN960-416L	80 -19
AN960-416L	84A-27
AN960-416L	90 - 7
AN960-416L	90 -17
AN960-416L	90 -64C
AN960-516	6 -13
AN960-516	6A-15
AN960-516	12 - 2
AN960-516	12A- 3
AN960-516	12B- 4
AN960-516	17 -17
AN960-516	17A-17
AN960-516	33 - 2
AN960-516	33 -19
AN960-516	33A- 2
AN960-516	37B- 4
AN960-516	40A-13
AN960-516	56 -15
AN960-516	74 - 6
AN960-516	76 -31
AN960-516	76A-18
AN960-516	76A-30
AN960-516	77 -31
AN960-516L	31 - 8
AN960-516L	31A- 6
AN960-516L	33 -13
AN960-516L	33A-11
AN960-516L	33A-20
AN960-516L	35A- 9
AN960-516L	35A-14
AN960-516L	39 -13
AN960-516L	39A-13
AN960-516L	39B-17
AN960-516L	39B-21
AN960-516L	56 -39C
AN960-516L	74 -42
AN960-516L	74A-24
AN960-516L	76 -25
AN960-516L	76A-23
AN960-516L	79 -15
AN960-6	19 -20
AN960-6L	71A-54
AN960-6L	91A-16
AN960-6L	91A-22
AN960-6L	92 - 2
AN960-616	12 - 2
AN960-616	12 - 5
AN960-616	12A- 4
AN960-616	34 - 3
AN960-616	39 - 6
AN960-616	39A- 6
AN960-616	39A-49

PART NUMBER	FIGURE AND INDEX NO.
AN960-616	39B-52
AN960-616	58 -24
AN960-616	60 -12
AN960-616	62 - 5
AN960-616	79 -49
AN960-616L	39 -15
AN960-616L	39 -36
AN960-616L	39 -60
AN960-616L	39A-15
AN960-616L	39A-33
AN960-616L	39A-48
AN960-616L	39B-24
AN960-616L	39B-51
AN960-616L	51A-55
AN960-716	3 - 5
AN960-716	51 -24
AN960-716	71 - 5
AN960-716	71 -13
AN960-716	90 -38
AN960-716L	63 - 7
AN960-8	51D-87A
AN960-8	51E-91
AN960-8	51F-88
AN960-8	69A-29
AN960-8	90 -60
AN960-8L	91A-20
AN960-8L	91A-20
AN960-816	3 - 2
AN960-816	11 - 6A
AN960-816	58 -20
AN960-816	60 - 2
AN960-816L	11 - 3
AN960A3	13 -35
AN960A6	13 -34
AN960C416L	49 -43
AN960C416L	49A-47
AN960C416L	49B-46
AN960C516L	74 -32
AN960C616	79B-27A
AN960C616L	51 -14
AN960C616L	51 -45
AN960D10	18 - 3
AN960D10	62 -20A
AN960D10	67 - 6
AN960D10	89 - 3
AN960D10	89 -16
AN960D10L	43A- 9
AN960D10L	68B- 4
AN960D10L	68B- 5
AN960D10L	68B- 5
AN960D10L	87 - 4
AN960D416	58 -37
AN960D416	66 -48
AN960D416L	33 - 5
AN960D416L	33A- 5
AN960D416L	52 - 8
AN960D516	62 - 8
AN960D516	62 - 9
AN960D516	62 -43
AN960D516	62 -48
AN960D516	63 -40
AN960D516	66 -18
AN960D516	85 -17
AN960D6	74 -25A
AN960D6	74A-45
AN960D6	77 - 4
AN960D616	51A-78
AN960D716	86 - 3
AN960D8	57A-13
AN960D8	89 - 7
AN960D8	89A-19
AN960D8	89B-54
AN960D8	89C-41
AN960D916	87 -27

PART NUMBER	FIGURE AND INDEX NO.
AN960D916	88 -39
AN960D916	89A-45
AN960D916	89B-40
AN960PD10	39B-67
AN960PD10	75 -17
AN960PD1416L	88C-32
AN960PD4	90A-13
AN960PD616	39B-34
AN960PD616	71A-67
AN960PD616	76B- 4
AN960PP616	71A-56
AN970-3	44 - 7
AN970-3	47 -23A
AN970-3	47A-25
AN970-3	47A-25C
AN970-3	79 -32B
AN970-3	79 -62
AN970-3	89B-70
AN970-3	89C-75
AN970-3	89C-80
AN970-3	94 - 7
AN970-3	94 - 8A
AN970-4	62 -35
AN970-4	77 -49
AN970-5	56 -14
AN970-5	56 -39E
A06K75	3 -62
A06K75	9 -32
A06K75	13 -33
A08-75	11 -20
A08-75	11 -22
A08-75	11 -23
A08K120	68A- 5
A08K75	68 - 4
A08K75	68A- 5
A1049-8Z-3	68A-11
A1257A	3 -35
A1280-2	3 -36
A1280-3	3 -36
A1552	59 -27
A1561-2	58 - 2
A1561-2	59 -35
A1561-4	59 -35
A1561-6	59 -35
A1562	58 - 3
A1562	59 -37
A1563-1	59 -15
A1580	59A-19
A1633-12	59 -22
A1633-12	59A-34
A1633-12	59B-21
A1633-13	59 - 8
A1633-13	59A-15
A1633-3	59 - 2
A1633-3	59A- 2
A1633-3	59B- 7
A1633-36	64C- 5
A1633-37	59B-43
A1633-9	59 -29
A1633-9	59 -34
A1633-9	59A-41
A1633-9	59A-46
A1633-9	59B-28
A1634-4	59 - 9
A1634-5	59A-21
A1634-6	59B-39
A1635-16	59 - 4
A1635-16	59A- 4
A1635-17	59 - 4
A1635-17	59A- 4
A1635-18	59 - 4
A1635-18	59A- 4
A1635-19	59 - 4
A1635-19	59A- 4

PART NUMBER	FIGURE AND INDEX NO.
A1635-21	59 - 4
A1635-21	59A- 4
A1635-22	59 - 4
A1635-22	59A- 4
A1635-27	59A- 9
A1635-36	59B- 9
A1635-37	59B- 9
A1635-40	59B- 9
A1635-56	59B- 9
A1635-65	59 -18
A1635-65	59A-30
A1635-65	59B-14
A1635-66	59B-27
A1635-67	59B- 9
A1635-68	59B- 9
A1636-23	36B-10
A1636-6	59 - 7
A1636-6	59A-12
A1636-7	59 -24
A1636-7	59A-36
A1636-7	59B-19
A1638-15	36B-12
A1638-2	58 - 4
A1638-2	59B- 3
A1638-29	36B-12
A1638-5	59A-10
A1638-9	59A-31
A1638-9	59B-15
A1639-14	36B-13
A1639-2	58 - 5
A1639-2	58A- 2
A1639-2	59 - 1
A1639-2	59A- 1
A1639-2	59B- 2
A1639-23	59B-10
A1639-26	36B-13
A1742	59 -10
A1793-6Z3	69 -29
A1882	59 -13
A1883	59 -12
A1934	59 -29
A1934	59A-41
A1935	59 -31
A1935	59A-43
A1936	59 -30
A1936	59A-42
A1937	59 -33
A1937	59B-29
A1937	59A-45
A1938	59 -20
A1938	59A-32
A1958	59 - 6
A1958	59A- 7
A20022	64C-27
A20026	64C-34
A20027	64C-35
A20034	64C- 9
A20037	64C-14
A20039	64C- 7
A20063	64C-23
A20064	64C-24
A20067	64C-13
A20068	64C-19
A20069-1	64C-17
A20070	64C-25
A20071	64C-15
A20072	64C-26
A20076	64C-28
A20078	64C-29
A20079	64C-30
A20081	64C-31
A20083	64C-11
A20084	64C-21
A20086	64C-16

PART NUMBER	FIGURE AND INDEX NO.
A2104	59 - 3
A2108	59B-20
A2108	59A-37
A2108-278	59 -25
A2109-3	32 - 8
A2185	59 -36
A2202	60 -24
A2204	60 -23
A2211	60 -47
A2213	60 -38
A2217	60 -32
A2230	59 -38
A2230	59A-49
A2230	59B- 5
A2245	60 - 7
A2246-1	58 -25
A2249	60 - 8
A2351	59 -23
A2351	59A-35
A2351	59B-33
A2356	59 -16
A2356	59A-28
A2356	59B-17
A2357	59 -26
A2412	60 -30
A2413	60 -22
A2414	60 -16
A2418	60 -28
A2420	60 -36
A2421	60 -45
A2423	59A- 3
A2424	60 -14
A2429	58 -19
A2429	60 - 1
A2430	60 -34
A2431	60 -10
A2433	58 -23
A2436	60 -27
A2513-34	36B-11
A2513-66	36B-11
A30047	36B- 9
A30048	36B- 8
A30078-1	36B- 4
A30078-2	36B- 7
A3047	59A-48
A3047-30	59A-48
A3047-45	59A-48
A3100	59A-17
A3110	59A-16
A3124	59A-39
A3124	59B-31
A3125	59A-38
A3125	59B-32
A3149	59A-18
A3150-5	59B-24
A3217	59A-27
A3902	59B-25
A3906	59B- 8
A39070	37A- 4
A39070	37B-10
A39070	40A-10
A4001	59B- 6
A4513-1	32 - 6
A5-35	61B-51
A6195-8Z3	12A-31
A6195-8Z3	12B-30
A6196-8Z3	12A-31
A6196-8Z3	12B-30
A6204-8Z3	5A- 6
A6204-8Z3	5B- 6
A7512-12	3 -34
A8002	74 -84
A8002	74B-12
A8566-8Z	17A-69

PART NUMBER	FIGURE AND INDEX NO.
B1316	64B-18
B1564	59 -14
B1843	60 -41
B1965	59 -21
B1965	59A-33
B20040	64C-18
B20055	64C- 6
B20060	64C-22
B20066	64C-12
B20074	64C- 4
B20077	64C-32
B20082	64C-33
B20085-2	64C- 5
B2192	59 -19
B2222	60 -19
B228	74 -59
B228	74A- 6
B2289-1	59 -11
B2289-2	59 -11
B2289-3	59 -11
B2345	59 -28
B2345	59A-40
B2345	59B-30
B2410	60 -29
B2417	59A- 8
B2419	60 -39
B2420-4	59A-13
B2420-6	59A-13
B2421-10	59A-14
B2421-12	59A-14
B2421-14	59A-14
B2421-16	59A-14
B2421-18	59A-14
B2421-20	59A-14
B2421-8	59A-14
B2422-1	59A-11
B2428	60 -42
B30077	36B- 5
B3099	59A-47
B3216	59A-26
B3414	59B-23
B3526	59B-18
B3905	59B-26
B3908	59B-11
B3920	59B- 4
B4014	59B-40
B4016	59B-12
B4017	59B-37
B4022	59B-36
B4023	59B-35
B4024	59B-34
B4138	59B-16
B55	74 -37
B55	74 -52
B610	9 - 7
B610	79 -32
B610	79 -47
CA-2	53G-97
CES1109CLASSC1A	47E-15
CES1109CLASSC1B	47E-15
CES1109CLASSC1C	47E-15
CES1109CLASSC1G	47E-15
CES1109CLASSC1H	47E-15
CES1109CLASSC4	47E-15
CM2629N1	54 - 9
CM2647N1	53 -37
CM2679-2	90 -74
CM2692-12H48	53N-61
CM2692-12P5S	39B- 5
CM2692-15.5H18	53J-55
CM2692-15.5H1B	53L-59
CM2692-15.5H1B	53N-60
CM2692-15.51HB	53E-68
CM2692-15.51HB	53G-65

PART NUMBER	FIGURE AND INDEX NO.
CM2692-20-1S	10 -13
CM2692-32-1S	17 -54
CM2692-8H18	53E-67
CM2692-8H18	53G-64
CM2692-8H18	53J-54
CM2692-8H18	53L-58
CM2692-8H18	53N-62
CM2791	61 - 7
CM2791	61 -37
CM2791	61A- 7
CM2791	61A-41
CM2791	67 - 7
CM2791-1	61B-19
CM2791-1	61B-39
CM2791-1	61B-51
CM2791-1	61C- 3
CM2791-1	61C-19
CR117-4-4	90 -29
CR163-4-2	29B-73
CR163-4-2	42 -31
CR163-4-2	42A-40
CR163-4-4	6 -18
CR163-4-4	6A-20
CR163-4-4	29B-72
CR163-4-4	41 -33
CR163-4-4	41 -43
CR163-4-4	41A-45
CR163-4-4	90 -29A
CR163-4-6	90 -29B
C1-C2	1 - 1
C156001-0102	8 -35
C156001-0104	8 -38
C161002-0201	58 - 1
C161002-0201	59A-
C161002-0202	59A-
C161009-0101	59B-
C161030-0102	64C-
C161031-0101	64C-
C161040-0103	64A-
C163001-0103	40A-
C163001-0104	40A-
C163002-0201	36B- 2
C163003-0201	36B- 2
C163030-0101	40A-14
C163030-0103	40A-14
C163030-0105	40A-14
C163030-0107	40A-14
C163030-113	40A-14
C165001-0102	88 -49
C165001-0102	88A-56
C165001-0102	88B-51
C166001-0104	89A- 1
C166001-0601	89B-60
C166001-0601	89C-63
C166002-0101	89A- 2
C166002-0103	89A- 3
C166002-0104	89A- 3
C166002-0401	89B-61
C166002-0401	89C-64
C166005-0101	89A-67
C166005-0102	89A-67
C166005-0204	89A-67
C166005-0204	89B-42
C166005-0204	89C-52
C166005-0205	89B-43
C166005-0205	89C-53
C166005-0402	89A-68
C166005-0402	89B-45
C166005-0501	89A-67
C166005-0504	89A-67
C166005-0504	89B-43
C166005-0504	89C-53
C166005-0505	89A-72
C166005-0505	89B-48

PART NUMBER	FIGURE AND INDEX NO.
C166005-0705	89C-58
C166005-0707	89C-55
C166006-0101	89A-30
C166006-0104	89A-30
C166006-0104	89B-31A
C166006-0108	89A-34
C166006-0108	89B-33
C166006-0108	89C-32
C166006-0109	89B-31A
C166006-0109	89C-30
C166007-0102	89 - 2
C166007-0102	89A- 5
C166007-0102	89B-68
C166007-0102	89C-71
C166008-0101	89 - 6
C166008-0101	89A-17
C166008-0101	89B-52
C166008-0101	89C-39
C166009-0401	89A-69
C166009-0401	89B-46
C166009-0501	89A-67
C166009-0703	89C-56
C166010-0101	89A- 9
C166010-0101	89B- 1
C166010-0101	89C- 1
C166010-0102	89A-13
C166010-0102	89B- 1
C166010-0102	89C- 1
C166010-0103	89A-12
C166010-0103	89B- 1
C166010-0103	89C- 1
C166010-0105	89A-14
C17312-3	92A- 4
C17313	92A- 7
C17325	92A- 2
C17326	92A- 5
C17330	92A- 3
C17331-3	92A- 6
C1904	59 -17
C1904	59A-29
C1939	59 -32
C1939	59A-44
C20057	64C- 1
C20073	64C- 3
C20075	64C-21
C2343	59 -34
C253001-0101	41 - 8
C253001-0101	41A-10
C253001-0101	44 - 9
C262001-0201	40A-31
C262001-0202	36A-12
C262001-0202	36B- 1
C262003-0101	37A-13
C262003-0101	37B-13
C262003-0202	36 - 9
C262003-0202	36A-12
C262003-0202	36B- 1
C262003-0204	40 -24
C262003-0204	40A-31
C262003-0207	40 -24
C262003-0302	36 - 9
C262003-0302	37 -12
C262003-0304	40 -24
C262023-0101	36 -10
C262023-0101	36A-13
C262023-0101	36B- 2
C262023-0102	37A-13
C262023-0102	37B-12
C262023-0102	40 -25
C262023-0102	40A-32
C262023-0104	40 -25
C291502-0101	53A-36
C291502-0101	53E-42
C291502-0101	53G-43

PART NUMBER	FIGURE AND INDEX NO.
C291502-0101	53J-89
C291502-0101	54 - 4
C291502-0103	53L-89
C291502-0103	53N-91B
C291502-0103	53Q-94B
C292501-0102	53A-38
C292501-0102	53C-44
C292501-0102	53E-44
C292501-0102	53G-45
C292501-0102	53J-92
C292501-0102	53L-91
C292501-0102	53N-92B
C292501-0102	54 - 7
C292501-0104	53N-92B
C292501-0104	53Q-95A
C294501-0101	76B-30
C294501-0101	88 -19
C294501-0101	88A-19
C294501-0101	88B-14
C294501-0101	88C-12
C294501-0102	88 -21
C294501-0102	88A-21
C294501-0102	88B-16
C294501-0102	88C-14
C294501-0103	88 -22
C294501-0103	88A-22
C294501-0103	88B-17
C294501-0103	88C-15
C294505-0101	86 -33
C294505-0102	86 -34
C2987	59A-20
C2987-1	59A-22
C2987-2	59A-23
C299505-0201	53J-87B
C299505-0201	53L-88
C299505-0201	53N-90C
C299505-0205	53Q-93C
C299506-0100	53J-87A
C299506-0102	53L-87B
C299506-0102	53N-90B
C299506-0102	53Q-93B
C30057	36B- 3
C301001-0211	79 -52
C301002-0103	79 -51
C301002-0301	79 -47
C301002-0303	79 -47
C301002-0305	79 -52
C301002-0306	79 -52
C301002-0307	79 -52A
C30172	36B- 6B
C30172-1	36B- 6A
C3054	59A-20
C3092	59A-24
C3105	59A-46
C3411-1	59B-41
C3411-2	59B-38
C3418	59B-22
C3903	59B-42
C3910	59B- 1
C4129	59B-13
C421001-0101	56 -57
C421001-0102	56 -58
C431001-0101	87 - 1
C431001-0101	88 -44
C431001-0101	88A-51
C431001-0101	88B-46
C431003-0102	88C-36
C431003-0301	88C-36
C482001-0101	88 -41
C482001-0101	88A-47
C482001-0101	88B-42
C482001-0401	88C-30
C590501-0101	79 -38
C592001-0101	3 -62

PART NUMBER	FIGURE AND INDEX NO.
C592001-0101	9 -32
C592001-0101	13 -33
C592001-0101	13 -33
C592001-0103	3 -62
C592001-0103	9 -32
C592001-0103	15A-64
C593001-0101	90 -74
C594501-0101	92A-17
C594501-0203	92A-21
C594502-0101	92A-21
C611001-0101	63A-33
C611001-0101	90 -19
C611501-0102	63A-28
C611501-0102	90 -34
C611501-0102	95 - 1
C613001-0201	90 -66
C621001-0106	92A-
C622001-0104	32 - 7
C622001-0201	3 -44
C622001-0202	3 -32
C622003-0101	3 -47
C622003-0103	2A-63
C622003-0104	3 -48
C622003-0105	2A-63
C622004-0103	90 -73
C622006-0102	3 -47
C622006-0103	3 -48
C622006-0105	3 -48
C622007-0101	90 -76
C65-3R-12	53B- 6
C65-3R-12	53B-10
C660501-0101	57A- 9
C660501-0101	57B-15
C661001-0101	53A-15
C661001-0101	87 -38
C661001-0101	88 - 3
C661001-0201	53C-20
C661001-0201	88A- 3
C661001-0201R	53C-20
C661001-0201R	88A- 3
C661001-0501	53E-18
C661001-0501	53G-19
C661001-0501	53J-65
C661001-0501	88B- 1
C661001-0502	53G-19
C661001-0502	53J-65
C661001-0502	53L-68
C661001-0502	88B- 1
C661001-0503	53G-19
C661001-0503	53J-65
C661001-0503	53L-68
C661001-0503	88B- 1
C661001-0503	88C- 1
C661001-0504	53J-65
C661001-0504	53L-68
C661001-0504	88B- 1
C661001-0504	88C- 1
C661001-0505	53L-68
C661001-0505	88B- 1
C661001-0505	88C- 1
C661002-0101	53A-14
C661002-0101	87 -36
C661002-0101	88 - 1
C661002-0201	53C-19
C661002-0201	88A- 1
C661002-0201R	53C-19
C661002-0201R	88A- 1
C661002-0301	53G-20
C661002-0301	53J-66
C661002-0301	53L-69
C661002-0301	88B- 3
C661002-0501	53E-19
C661002-0501	53G-20
C661002-0501	53J-66

PART NUMBER	FIGURE AND INDEX NO.
C661002-0501	88B- 3
C661002-0503	53G-20
C661002-0503	53J-66
C661002-0503	88B- 3
C661002-0504	88C- 3
C661002-0504	53J-66
C661002-0504	53L-69
C661002-0504	88B- 3
C661002-0505	88C- 3
C661002-0505	53L-69
C661002-0505	88B- 3
C661002-0506	88C- 3
C661002-0506	53L-69
C661002-0506	88B- 3
C661003-0201	53E-17
C661003-0501	53E-17
C661003-0501	53G-18
C661003-0501	53J-59
C661003-0501	53L-61
C661003-0504	53N-64
C661003-0504	53Q-72
C661010-0202	53A-10A
C661010-0202	53C-11
C661010-0202	53E-12
C661010-0202	53G-13
C661010-0213	53J-60
C661010-0213	53L-63
C661010-0606	53J-59
C661010-0606	53L-62
C661011-0101	53 -35
C661011-0105	53A-11
C661011-0105	53C-16
C661011-0105	53E-21
C661011-0105	53G-22
C661011-0105	53J-68
C661011-0105	53L-71
C661011-0106	53A-11
C661011-0106	53C-16
C661011-0106	53E-21
C661011-0106	53G-22
C661011-0106	53J-68
C661011-0106	53L-71
C661012-0101	53N-74
C661012-0101	53Q-82
C661060-0201	53N-65
C661060-0201	53Q-73
C661061-0201	53N-66
C661061-0201	53Q-74
C661071-0101	53N-74
C661071-0101	53Q-82
C661071-0102	53N-74
C661071-0102	53Q-82
C661075-0101	88C- 3
C661075-0101	53N-72
C661075-0101	53Q-80
C661075-0102	88C- 3
C661075-0102	53N-72
C661075-0102	53Q-80
C661075-0103	88C- 3
C661075-0103	53N-72
C661075-0103	53Q-80
C661075-0104	88C- 3
C661075-0104	53Q-80
C661075-0105	88C- 3
C661075-0105	53Q-80
C661076-0101	88C- 1
C661076-0102	53N-71
C661076-0102	53Q-79
C661076-0102	88C- 1
C661076-0103	53N-71
C661076-0103	53Q-79
C661076-0103	88C- 1
C661076-0104	53N-71
C661076-0104	53Q-79

PART NUMBER	FIGURE AND INDEX NO.
C661076-0104	88C- 1
C661080-0101	53N-75
C661080-0101	53Q-83
C662035-0101	53N-83
C662035-0101	53Q-91B
C6622001-0102	32 - 3
C664501-0101	53C-99A
C664501-0101	53E-32
C664501-0101	53G-33
C664501-0101	53J-80
C664501-0101	53L-83
C664501-0103	53N-86
C664501-0103	53Q-91A
C664508-0101	53N-63
C664508-0101	53Q-71
C668001-0101	53C-29
C668001-0101	79 -57
C668001-0101	53 -18
C668001-0101	53A-24
C668020-0104	53N-84
C668020-0104	53Q-91C
C668501-0101	53 -57
C668501-0101	53A-64
C668501-0102	53 -58
C668501-0102	62 -51
C668501-0103	53 -58
C668501-0103	53A-64
C668501-0104	53 -58
C668501-0104	53A-64
C668501-0110	53 -58
C668501-0110	53A-64
C668501-0110	62 -51
C668501-0201	53A-64
C668501-0201	53C-69
C668501-0201	53E-31
C668501-0201	53G-32
C668501-0201	53J-79
C668501-0201	53L-82
C668501-0201	53N-85
C668501-0204	53A-64
C668501-0204	62 -51
C668501-0206	53A-64
C668501-0206	53C-69
C668501-0211	53Q-90B
C668507-0101	56 -31
C668507-0102	56 -31
C668540-0101	53N-73
C668540-0101	53Q-81
C668540-0101	88C-28
C669502-0201	53A-15
C669502-0201	53C-20
C669502-0201	53E-22
C669502-0201	53G-23
C669502-0201	53J-70
C669502-0201	53L-73
C669502-0201	53N-76
C669502-0201	53Q-84
C669502-0203	53C-20
C669502-0203	53E-22
C7000-632-67	53A-25
C7000-632-67	53C-73
C7000-632-67	53E-33
C7000-632-67	53G-34
C7000-632-67	53Q-91
C7000-632-7	53J-81
C7000-632-7	53L-84
C7000-632-7	53N-87
D2201	60 - 5
D2201-1DET1	60 - 6
D2341/90M-8	59 - 5
D30058	36B- 6
D3102	59A-50
D3108/90A-8	59A- 5
D3223/90AT-8	59A- 5

PART NUMBER	FIGURE AND INDEX NO.
D366	57B-10
D4023X.375	57B-12
EC1239A-8	1 -10
EC1675A-8	1 -14A
EC776	1 -12
EC880	1 - 2
EQ5491S	63 -46
E0107	54 -14
FCC-20068	8 - 4
FCC-20068	8 - 4
FC6446	40A-27
FDC-2475-50	57 - 6
FRL5	53D- 8
FRL5	53F- 8
FRL5-2	53H- 8
FRL5-2	53K- 8
FRL5-2	53M- 9
FRL5-2	53P- 8
F3M14	74 -76
F5000-832	29 -59
GA5-375	61B-51
GB-59	64B- 8
GNB4012	33 - 8
GNB4012	33A- 8
GNB40120H	33 - 8
GNB40120H	33A- 8
G440404	53 -15
G440404	53A-17
G441304	53 -11
G441304	53A-16
G442697	53 -13
G442702	53 -12
G442702	53A-18
G442702	53C-23
G442702	53E-25
G442702	53G-26
G442702	53J-73
G442702	53L-76
G442702	53N-79
G442702	53Q-87
G444627	53 -14
G444627	53A-20
G444627	53C-25
G444627	53E-27
G444627	53G-28
G444627	53J-75
G444627	53L-78
G444627	53N-81
G444627	53Q-89
HE1433	84 - 8
HE1437-1	84 - 7
H14-3	79 -52
H14-3	79A- 5
H322-4-1	45B-14
H323-3-1-1	45A-18
H323-3-1-1	45B-14
H323-4-1-1	45B-14
H559-3-1	45A-18
H559-3-1	45B-14
I.R.1616	60 -18
IDI-757	94 -13
J2005-2	95 - 6
J2049-1D	53 -46
J2049-1D	53A-52
J2049-1D	53C-58
J9534-20	95 - 4
J9534-20	95 -13
KM610-.051	61A-19
KM610-.051	61B-15
KM610-051	61A-17
KM610-051	61B-10
KM610-051	61C- 8
KM610-051	61C-14
LM67010XL	36 - 6

PART NUMBER	FIGURE AND INDEX NO.
LM6708XL	36 - 7
LP4-17AM	40A-22
L4858-1	53 -19
L4858-1	53A-29
L4858-1	53C-34
L4858-1	53E-37
L4858-1	53G-38
L4858-1	53J-85
L4858-1	53L-86A
L4858-1	53N-89C
L4858-1	53Q-92C
MIL-P-8585	1 -14
MK7200-3	74 -55
MS100009	64 -21
MS100009	64A-17
MS100009	64B-22
MS100009	64C-36
MS124663	86 -51
MS124663	86 -55
MS15001-1	60 - 9
MS15002-3	35 -48
MS15002-3	35A-52
MS15584-2	93 -12
MS16562-16	63 -24
MS16562-16	70 -40
MS16624-1025	84A-14
MS16624-1137	74A- 9A
MS16624-1262	39B- 8
MS16624-1275	35 -28
MS16624-1275	35A-31
MS16624-137	74 -62
MS16625-1075	39B- 3
MS16625-131	38 - 2
MS16625-143	38A- 2
MS16625-143	38B- 1
MS16625-212	40 -19
MS20002-6C	39 - 6
MS20002-7C	39 - 4
MS20002C6	39A- 6
MS20002C6	86 -46
MS20002C7	39A- 4
MS20074-04-3	63 -19
MS20074-05-14	95 -11
MS20200KP4	15 -43
MS20200KP4	15A-62
MS20220-2	76 -23
MS20220-2	76 -29
MS20220-2	76A-17
MS20220-2	76A-21
MS20220-2	76A-28
MS20220-2	77 -29
MS20220-2	77 -29
MS20220-2	79 -13
MS20230AZ	5 -28
MS20230A2	5 - 3
MS20230A2	5 - 8
MS20230A2	5 -11
MS20230A2	5 -13
MS20230A2	5 -21
MS20230A2	5 -22
MS20230A2	5 -23
MS20230A2	5 -25
MS20230A2	5 -26
MS20230A2	5A- 3
MS20230A2	5A-11
MS20230A2	5A-13
MS20230A2	5A-16
MS20230A2	5A-18
MS20230A2	5A-21
MS20230A2	5A-23
MS20230A2	5A-33
MS20230A2	5A-34
MS20230A2	5A-35
MS20230A2	5A-37

PART NUMBER	FIGURE AND INDEX NO.
MS20230A2	5A-38
MS20230A2	5A-40
MS20230B20	66 -19
MS20230B20	66 -28
MS20253-2-29.46	15 -38
MS20253-2-4.04	61 -19B
MS20253-2-4046	15A-41
MS20253-2-596	61 -18
MS20253-2-646	55A- 8
MS20253-5-100	63 - 5
MS20364-1032	49B-19
MS20364-1032	49C-19
MS20364-1032C	39B-13
MS20364-1032C	62 -13
MS20364-1032C	62 -16
MS20364-1032C	62 -21
MS20364-1032C	62 -25A
MS20364-1032C	79C-20
MS20364-1032C	79C-24
MS20365-1032	90 -26
MS20365-1032C	21 -24
MS20365-428	90 -51
MS20365-624C	62 - 4
MS20365-720C	3 - 8
MS20365-720C	90 -39
MS20365-820C	3 - 3
MS20365-820C	11 - 6
MS203658632C	53 - 7
MS203658632C	53 - 9
MS203658632C	53 -49
MS203658632C	53 -58
MS203658632C	53A-25
MS203658632C	53A-55
MS203658632C	53A-68
MS203658632C	53C-30
MS203658632C	53C-63
MS203658632C	53C-69
MS203658632C	53C-73
MS203658632C	53E-31
MS203658632C	53E-33
MS203658632C	53G-32
MS203658632C	53G-34
MS203658632C	53J-79
MS203658632C	53J-81
MS203658632C	53L-82
MS203658632C	53L-84
MS203658632C	53N-85
MS203658632C	53N-87
MS203658632C	53Q-90B
MS203658632C	53Q-91
MS203658632C	87 - 7
MS203658832C	53 -47
MS203658832C	57A- 6
MS20392-1C11	51F-71
MS20392-1C11	79 - 3
MS20392-1C11	79 - 8
MS20392-1C15	48 -19
MS20392-1C15	49 -41
MS20392-1C15	51 -11
MS20392-1C15	51C-12
MS20392-1C15	51D-80
MS20392-1C15	51E-83
MS20392-1C17	57 - 3
MS20392-1C21	48 - 2
MS20392-1C21	49 - 1
MS20392-1C21	49A- 1
MS20392-1C21	49A-39
MS20392-1C21	49B- 1
MS20392-1C21	49B-38
MS20392-1C21	49C- 1
MS20392-1C21	50 - 2
MS20392-1C21	51A- 1
MS20392-1C21	51E- 1
MS20392-1C21	51F- 1

PART NUMBER	FIGURE AND INDEX NO.
MS20392-1C21	51F-68
MS20392-1C23	43 -23
MS20392-1C23	49C-38
MS20392-1C33	43 -21
MS20392-1C33	43A- 2
MS20392-1C37	44 - 2
MS20392-1C39	51 -48
MS20392-1C7	43 -18
MS20392-1C7	43A-22
MS20392-1C9	49A-45
MS20392-1C9	49B-44
MS20392-1C9	49C-47
MS20392-1C9	51B-23
MS20392-2C11	51D- 4
MS20392-2C11	51E- 4
MS20392-2C11	51F- 4
MS20392-2C11	79B-42
MS20392-2C11	79C-39
MS20392-2C13	67 - 5
MS20392-2C15	72 - 9
MS20392-2C15	72 -21
MS20392-2C15	79 -41
MS20392-2C17	51 -33
MS20392-2C17	51 -40
MS20392-2C17	51A-15
MS20392-2C17	51A-39
MS20392-2C17	51B-14
MS20392-2C17	51C- 2
MS20392-2C19	79C-21
MS20392-2C20	51 -20
MS20392-2C21	51C- 9
MS20392-2C23	33 - 5
MS20392-2C23	33A- 5
MS20392-2C27	51A-45
MS20392-2C31	33 - 5
MS20392-2C31	33A- 5
MS20392-2C31	48 -14
MS20392-2C37	51D-38
MS20392-2C37	51D-58
MS20392-2C37	51D-70
MS20392-2C37	51E-40
MS20392-2C37	51E-60
MS20392-2C37	51E-73
MS20392-2C37	51F-63
MS20392-2C41	11 -12
MS20392-2C43	49A-37
MS20392-2C43	49B-36
MS20392-2C43	49C-36
MS20392-2C45	43A- 7
MS20392-2C45	51D-76
MS20392-2C45	51E-79
MS20392-2C47	49 -38
MS20392-2C59	51F-76
MS20392-2C63	11 -13
MS20392-2C71	52A-19
MS20392-2C71	52B-23
MS20392-2C83	51D-76
MS20392-2C83	51E-79
MS20392-2C9	79 -44
MS20392-3C17	51D-15
MS20392-3C17	51E-15
MS20392-3C17	51F-14
MS20392-3C19	77 -57
MS20392-3C25	77 -51A
MS20392-3C49	51D-12
MS20392-3C49	51E-12
MS20392-3C49	51F-11
MS20392-4C13	71 -29
MS20392-4C13	71A-30
MS20392-5C65	51C-26
MS20392Z-2C17	51F-52
MS20426AD10	11 - 9
MS20615-4M10	41A-25
MS20615-4M10	42A-24

PART NUMBER	FIGURE AND INDEX NO.
MS20822-2D	87 -33
MS20822-3D	39B-35
MS20822-4-4D	88 -13
MS20822-4D	63 -86
MS20822-4D	86 -16
MS20822-4D	89A-44
MS20822-4D	89B-84
MS20822-4D	89C-94B
MS20822-4D	89C-96C
MS20822-6-6	88 -45
MS20822-6-6	88A-52
MS20822-6-6	88B-47
MS20822-6-6B	87 -22
MS20822-6D	87 -31
MS20822-6D	88B-28
MS20822-6D	88C-17
MS20822-8D	82 -41
MS20822-8D	82A-47
MS20823-2D	82 -40
MS20823-2D	82A-46
MS20823-4B	86 -14
MS20823-4D	39 -26
MS20823-4D	40A-30
MS20823-4D	88A-34
MS20823-6D	88 -10
MS20823-6D	88A-26
MS20823-6D	88A-39A
MS20823-6D	88C-47
MS20823-8D	82 -34
MS20823-8D	82 -36
MS20823-8D	82A-40
MS20823-8D	82A-42
MS20825-6D	88B- 9
MS20825-6D	88B-10
MS20826-4D	89A-37
MS20826-4D	89B-82
MS20826-4D	89C-94
MS20826-6D	87 -30
MS20826-6D	88 -12
MS20826-6D	88 -17
MS20826-6D	88 -29C
MS20826-6D	88 -31
MS20826-6D	88A-10
MS20826-6D	88A-11
MS20826-6D	88A-27
MS20826-6D	88C- 8
MS20826-6D	88C-18
MS20826-6D	88C-48
MS20913-1D	82 -24
MS20913-1D	82A-27
MS20913-1D	88B-30
MS20913-1D	88C- 5
MS20913-1D	89A-45
MS20913-1D	89B-85
MS20913-1D	89C-95
MS20913-2D	87 -35
MS20913-2D	88B-30
MS21042-3	74A-33
MS21042-4	26 - 68
MS21044D3	23A-53
MS21044D3	23A-54
MS21044N3	4 -37
MS21044N3	4 -38
MS21044N3	4A-27
MS21044N3	4A-38
MS21044N3	4A-39
MS21044N3	4B-28
MS21044N3	4B-37
MS21044N3	4B-38
MS21044N3	9 -10
MS21044N3	10 - 4
MS21044N3	10 -12
MS21044N3	13 -15
MS21044N3	14 -39B

PART NUMBER	FIGURE AND INDEX NO.
MS21044N3	16 - 8
MS21044N3	16 -18
MS21044N3	17 -62
MS21044N3	17A-64
MS21044N3	18 - 2
MS21044N3	18 - 9
MS21044N3	23A-52
MS21044N3	23A-54
MS21044N3	25 -10
MS21044N3	25 -34
MS21044N3	27 - 8
MS21044N3	29 -13
MS21044N3	29 -14
MS21044N3	29 -15
MS21044N3	29 -16
MS21044N3	31 -16
MS21044N3	31 -18
MS21044N3	31A-18
MS21044N3	33 - 8
MS21044N3	33 -29
MS21044N3	33 -31
MS21044N3	33 -31B
MS21044N3	33A- 8
MS21044N3	33A-28
MS21044N3	34 -10
MS21044N3	34 -17
MS21044N3	39 -40
MS21044N3	39 -40
MS21044N3	39 -40
MS21044N3	39 -65
MS21044N3	39A-36
MS21044N3	39A-54
MS21044N3	39B-37
MS21044N3	39B-57
MS21044N3	41 - 2
MS21044N3	41A- 4
MS21044N3	42 - 2
MS21044N3	42A- 4
MS21044N3	44 - 6
MS21044N3	47 -11
MS21044N3	48 -27
MS21044N3	48 -31
MS21044N3	49 -20
MS21044N3	49 -51B
MS21044N3	49 -59
MS21044N3	49A-20
MS21044N3	49A-61
MS21044N3	50 - 6
MS21044N3	51 -38
MS21044N3	51A-18
MS21044N3	51A-81B
MS21044N3	51A-89
MS21044N3	51B-13
MS21044N3	51B-21
MS21044N3	51B-21D
MS21044N3	51B-38
MS21044N3	51D- 3
MS21044N3	51E- 3
MS21044N3	51F- 3
MS21044N3	52A-16
MS21044N3	52A-18
MS21044N3	52A-34
MS21044N3	52B-20
MS21044N3	52B-30
MS21044N3	52C- 3
MS21044N3	53E-79
MS21044N3	53G-74
MS21044N3	53J- 6
MS21044N3	53J-26
MS21044N3	53J-28
MS21044N3	53L- 6
MS21044N3	53L-23
MS21044N3	53L-27
MS21044N3	53N- 6

PART NUMBER	FIGURE AND INDEX NO.
MS21044N3	56 - 5
MS21044N3	56 - 5A
MS21044N3	56 -20
MS21044N3	58 - 9
MS21044N3	58A- 9
MS21044N3	62 -32
MS21044N3	62 -41
MS21044N3	63 -68
MS21044N3	63 -70
MS21044N3	65 - 8
MS21044N3	65 -15
MS21044N3	65A- 4
MS21044N3	65A-11
MS21044N3	67 - 7
MS21044N3	67 -10
MS21044N3	67 -14
MS21044N3	69 -39
MS21044N3	69A-15E
MS21044N3	69A-44
MS21044N3	70 -12
MS21044N3	70 -13
MS21044N3	70 -43
MS21044N3	71 -18
MS21044N3	71 -26
MS21044N3	71 -33
MS21044N3	71 -36
MS21044N3	71A-19
MS21044N3	71A-27
MS21044N3	71A-31B
MS21044N3	71A-34
MS21044N3	71A-37
MS21044N3	72 -13
MS21044N3	72 -16
MS21044N3	72 -26
MS21044N3	72 -31
MS21044N3	74 -46
MS21044N3	74C- 6
MS21044N3	75 - 9A
MS21044N3	75 -16
MS21044N3	75 -23
MS21044N3	76 - 5
MS21044N3	76 -11
MS21044N3	76A- 4
MS21044N3	76A-10
MS21044N3	76B-40F
MS21044N3	76B-46
MS21044N3	77 - 7
MS21044N3	77 -27
MS21044N3	78 - 5
MS21044N3	78 -13
MS21044N3	78 -21
MS21044N3	79 -20
MS21044N3	79 -35
MS21044N3	79 -58B
MS21044N3	79 -58C
MS21044N3	79 -62
MS21044N3	79B-20
MS21044N3	79B-24
MS21044N3	79B-40
MS21044N3	79C-17
MS21044N3	79C-30
MS21044N3	79C-35
MS21044N3	79C-43
MS21044N3	80 -30
MS21044N3	81 -33
MS21044N3	84A-23
MS21044N3	84A-24
MS21044N3	86 -11
MS21044N3	87 - 4
MS21044N3	88 -50
MS21044N3	88A-57
MS21044N3	88B-52
MS21044N3	89 - 3
MS21044N3	89 - 3A

PART NUMBER	FIGURE AND INDEX NO.
MS21044N3	89 -17
MS21044N3	89A- 8
MS21044N3	89A- 9
MS21044N3	89A-53
MS21044N3	89A-60
MS21044N3	89A-64
MS21044N3	89B-20
MS21044N3	89B-29
MS21044N3	89B-31
MS21044N3	89B-72
MS21044N3	89B-76
MS21044N3	89C-19
MS21044N3	89C-26
MS21044N3	89C-29
MS21044N3	89C-76
MS21044N3	89C-81
MS21044N3	89C-85
MS21044N3	90 - 4
MS21044N3	90 -26
MS21044N3	90 -66
MS21044N3	94 - 9
MS21045-08	90 -60
MS21045-08	90 -64
MS21209-F1-10	74B- 4
MS21209F1-15	74 -78
MS21209F1-20	74C- 3
MS21209F4-20	38B-12
MS21919DG10	63 -41
MS21919DG2	62 -43
MS21919DG3	39B-37
MS21919DG3	71A- 4
MS21919DG3	71A- 7
MS21919DG3	71A-47
MS21919DG3	71A-71
MS21919DG3	84 - 2
MS21919DG3	84A-34
MS21919DG3	89A-67
MS21919DG34	62 -25A
MS21919DG4	3 -41
MS21919DG4	62 -42
MS21919DG4	63 -58
MS21919DG4	71 -19
MS21919DG4	71A-50
MS21919DG40	63 -71
MS21919DG5	89 -12
MS21919DG6	62 -25A
MS21919DG6	76A-51
MS21919DG6	79B-30
MS21919DG6	79B-35
MS21919DG8	63 -41
MS21919DG8	82 -10
MS21919DG8	82 -12
MS21919DG8	82A-14
MS21919DG8	82A-18
MS21919DG8	87 -17
MS21919DG9	63 -57
MS21919D6-11	62 -41
MS2192190G-8	82A-11A
MS24462-4	15 -44
MS24462-4	15A-63
MS24462-5	74 - 8
MS24463-4	74 -27
MS24655-132	51D- 6
MS24663-4	74A-46
MS24665-132	33 - 5
MS24665-132	33A- 5
MS24665-132	35 -46
MS24665-132	35A-50
MS24665-132	43 -19
MS24665-132	43 -25
MS24665-132	43A- 3
MS24665-132	43A- 8
MS24665-132	43A-22
MS24665-132	48 -21

PART NUMBER	FIGURE AND INDEX NO.
MS24665-132	49 -38
MS24665-132	49 -41
MS24665-132	49A-37
MS24665-132	49A-39
MS24665-132	49A-46
MS24665-132	49B-36
MS24665-132	49B-38
MS24665-132	49B-45
MS24665-132	49C-36
MS24665-132	49C-39
MS24665-132	49C-47
MS24665-132	51 - 9
MS24665-132	51 -20
MS24665-132	51 -33
MS24665-132	51 -42
MS24665-132	51 -4C
MS24665-132	51A-15
MS24665-132	51A-39
MS24665-132	51A-45
MS24665-132	51A-63
MS24665-132	51B-14
MS24665-132	51B-23
MS24665-132	51C- 3
MS24665-132	51C- 9
MS24665-132	51C-13
MS24665-132	51C-14
MS24665-132	51D-40
MS24665-132	51D-59
MS24665-132	51D-72
MS24665-132	51D-78
MS24665-132	51D-81
MS24665-132	51E- 6
MS24665-132	51E-42
MS24665-132	51E-61
MS24665-132	51E-75
MS24665-132	51E-81
MS24665-132	51E-84
MS24665-132	51F- 6
MS24665-132	51F-52
MS24665-132	51F-65
MS24665-132	51F-69
MS24665-132	51F-78
MS24665-132	52A-20
MS24665-132	52B-24
MS24665-132	70 -37
MS24665-132	71 -39
MS24665-132	71 -42
MS24665-132	71A-40
MS24665-132	71A-43
MS24665-132	72 - 8
MS24665-132	72 - 9A
MS24665-132	72 -23
MS24665-132	75 -28
MS24665-132	77 -34
MS24665-132	77 -51A
MS24665-132	77 -60
MS24665-132	79 -43
MS24665-132	79A- 9
MS24665-132	79B-42
MS24665-132	79C-21
MS24665-132	79C-41
MS24665-132	79C-46
MS24665-132	84A-12
MS24665-134	15 -56
MS24665-134	33 -12
MS24665-134	33A-13
MS24665-134	33A-25
MS24665-134	35 -34
MS24665-134	35 -42
MS24665-134	35A-37
MS24665-134	35A-46
MS24665-134	48 -15
MS24665-134	48 -20
MS24665-134	51 -11

PART NUMBER	FIGURE AND INDEX NO.
MS24665-134	51 -14
MS24665-134	51A-60
MS24665-134	51D-14
MS24665-134	51E-14
MS24665-134	51F-13
MS24665-134	61 -14
MS24665-134	67 -19
MS24665-134	71A-31D
MS24665-134	74 -33
MS24665-134	74 -44
MS24665-134	74A-26
MS24665-134	76B-40
MS24665-134	76B-47
MS24665-134	77 -17
MS24665-134	77 -22
MS24665-134	77 -55
MS24665-134	78 -28A
MS24665-134	79 - 3
MS24665-134	79 - 8
MS24665-134	79 -55
MS24665-134	80 - 5
MS24665-134	80 -10
MS24665-134	80 -25
MS24665-134	82 -26
MS24665-134	82A-29
MS24665-136	33 -24
MS24665-136	76A-20
MS24665-136	77 -33
MS24665-136	78 -21
MS24665-136	79C-31
MS24665-136	80 -21
MS24665-143	80 -31
MS24665-144	78 -33
MS24665-151	44 - 3
MS24665-151	48 - 2
MS24665-151	49 - 1
MS24665-151	49A- 1
MS24665-151	49B- 1
MS24665-151	49C- 1
MS24665-151	50 - 2
MS24665-151	51A- 1
MS24665-151	51E- 1
MS24665-151	51F- 1
MS24665-151	57 - 5
MS24665-24	74 -26
MS24665-24	74A-45
MS24665-24	77 - 5
MS24665-281	71 -30
MS24665-281	71A-31
MS24665-283	51B-25
MS24665-283	51C-28
MS24665-283	79 -22
MS24665-285	48 -17
MS24665-285	51 -12
MS24665-285	72 - 5
MS24665-285	76 -28
MS24665-285	76A-27
MS24665-285	79 -21
MS24665-351	39 -21
MS24665-351	39A-20
MS24665-351	39B-29
MS24665-351	51 -24
MS24665-355	60 -35
MS24665-362	39 -53
MS24665-362	39 -70
MS24665-362	39A-50
MS24665-362	39B-53
MS24665-5	51A-55
MS24665-7	76 - 2
MS24665-7	76 -19
MS24665-71	74A-37B
MS25171-3S	90 -30
MS25237-330	53B- 4
MS25237-330	53B- 9

PART NUMBER	FIGURE AND INDEX NO.
MS25237-330	53B-12
MS25237-330	53D- 4
MS25237-330	53D- 7
MS25237-330	53D-10
MS25237-330	53F- 4
MS25237-330	53F- 7
MS25237-330	53F-12
MS25237-330	53F-13
MS25237-330	53H- 4
MS25237-330	53H- 7
MS25237-330	53H-12
MS25237-330	53H-13
MS25237-330	53K- 4
MS25237-330	53M- 4
MS25237-330	53P- 2
MS25237-330	53P- 5
MS25237-330	53R- 2
MS25237-330	53R- 5
MS25237-330	91A- 7C
MS25253-1	79 -67
MS25253-1	79 -72
MS25253-1	79B-13
MS28775-018	60 -37
MS28775-027	38B- 3A
MS28775-112	38B- 4A
MS28775-113	64C-20
MS28778-3	8 -23
MS28778-3	71A-62
MS28778-4	39 -27
MS28778-4	40 -22
MS28778-4	63 -88
MS28778-4	71 - 1
MS28778-4	71 - 2
MS28778-4	71A- 2
MS28778-4	73 -12
MS28782-22	38A-10
MS28782-22	38B- 5
MS29513-10	84A-17
MS29513-111	84A- 6
MS29513-12	8 -37
MS29513-138	84A- 7
MS29513-8	84 - 6
MS35489-1	89B-99
MS35489-11	22 -15
MS35489-118	66 -24
MS35489-12S	66 -10A
MS35489-13	89B-89
MS35489-13S	89A-29
MS35489-13S	89C-96A
MS35489-134	93 -11
MS35489-134S	89 -10
MS35489-134S	89 -10
MS35489-14	8 -18
MS35489-14	82 - 4
MS35489-17	56 -13
MS35489-2S	89C-97A
MS35489-20	66 -33
MS35489-20	82 -35
MS35489-20	82A-41
MS35489-38	4A-27
MS35489-38	79B-36
MS35489-38S	4 -28
MS35489-4	82A- 4
MS35489-4	94 -18
MS35489-49	82 -11
MS35489-49	82A-14
MS35489-49	82A-18
MS35489-6	57A- 8
MS35489-6	57B- 6
MS35489-6	91 -14
MS35489-6	91A-18
MS35489-6S	17A-78
MS35489-9S	30 - 2
MS9021-038	63A-36

PART NUMBER	FIGURE AND INDEX NO.
MS9025-02	84A-21
M072218A	79A- 1
M20201	60 -17
M34-14	34 -11
M451	19 - 9
NAS1022A08	47B-26
NAS1022A08	47C-32
NAS1022A08	47D-33
NAS1054-6-3	18 -37
NAS1054-8-10	23A- 2
NAS1054-8-10	26A- 3
NAS1054-8-10	26A-11
NAS1054-8-11	18 -39
NAS1054-8-12	18 -40
NAS1054-8-12	26A- 7
NAS1054-8-13	18 -41
NAS1054-8-6	26A- 3
NAS1054-8-6	26A- 9
NAS1054-8-8	26A- 6
NAS1054-8-8	26A- 8
NAS1054-8-9	26A-10
NAS1067N3	25 -66
NAS1068A3	21 -25
NAS1068A3	21A-26
NAS1068A4	25 -29
NAS1068A4	25 -29
NAS1068A4	25 -57
NAS1329A06K120	3 -45
NAS1329A06K120	3 -51
NAS1329A08K120	3 -33
NAS1329S3K.080	39B-41
NAS1329S3K.130	39B-42
NAS1352-06-6	91A-15
NAS144-16	17 -14
NAS144-16	17A-14
NAS144-20	17A-14
NAS145-39	39 -13
NAS145-39	39A-13
NAS146-34	39 - 5
NAS146-34	39A- 5
NAS146-40	39 -15
NAS146-40	39A-15
NAS147-34	39 - 3
NAS147-34	39A- 3
NAS178-8-5	26 - 4
NAS178-8-5	26 -10
NAS178-8-6	26 - 3
NAS178-8-6	26 - 9
NAS178-8-7	23 - 2
NAS178-8-7	23A- 2
NAS178-8-7	24 - 2
NAS178-8-7	26 - 5
NAS178-8-8	23 - 2
NAS178-8-8	23A- 2
NAS178-8-8	24 - 1
NAS178-8-8	26 - 5A
NAS179-6	18 -38
NAS179-8	18 -42
NAS179-8	23A- 2
NAS179-8	26 - 6
NAS179-8	26 -11
NAS179-8	26A- 3
NAS179-8	26A-12
NAS220 8	12A- 7
NAS220-11	51D-87A
NAS220-11	51E-91
NAS220-11	51F-87
NAS220-11	74 -35
NAS220-11	74 -50
NAS220-11	74A-30
NAS220-13	74 -48
NAS220-14	74A-28
NAS220-14	74A-28C
NAS220-16	41A-26

PART NUMBER	FIGURE AND INDEX NO.
NAS220-16	42A-25
NAS220-24	74 -18
NAS220-24	74A-40
NAS220-5	17 -49
NAS220-5	41 -10
NAS220-5	41A-13
NAS220-5	42 - 9
NAS220-5	42A-11
NAS220-5	43 - 1
NAS220-5	75 - 3
NAS220-6	12 -45
NAS220-6	12A-41
NAS220-6	12B-38
NAS220-6	13 -32
NAS220-6	17 -10
NAS220-6	17 -41
NAS220-6	17 -41
NAS220-6	17A-10
NAS220-6	17A-41
NAS220-6	17A-41
NAS220-6	74 - 2
NAS220-6	74 -65
NAS220-6	74A-12
NAS220-6	92 -10
NAS220-8	13 -32
NAS221-10	56 - 4
NAS221-10	79 -58C
NAS221-11	74C- 5
NAS221-12	53J-32A
NAS221-12	53L-34
NAS221-12	53N-35
NAS221-12	53Q-39
NAS221-13	14 -39B
NAS221-13	14A-36
NAS221-13	33 - 8
NAS221-13	33A- 8
NAS221-14	79 -58B
NAS221-15	24 -22
NAS221-5	24 -24
NAS221-6	17 -61
NAS221-6	17A-63
NAS221-6	21 -24
NAS221-6	53J-32
NAS221-6	53L-32
NAS221-6	53N-33
NAS221-6	53Q-38
NAS221-6	74C-28
NAS221-7	33 -28
NAS221-7	33A-28
NAS221-8	4A-27
NAS221-8	48-28
NAS221-8	9 -31
NAS221-8	58 -15
NAS221-8	58 -29
NAS221-8	58 -32
NAS221-8	58A- 4
NAS221-9	39B-11
NAS221-9	74C- 3
NAS222-14	74 -22
NAS222-14	74A-44
NAS222-16	74 -72
NAS222-16	74A-19
NAS288-35LH	74 -13
NAS288-35LH	76 -17
NAS288-35RH	74 -14
NAS288-35RH	76 -18
NAS295M4	75 - 5
NAS395-1-3	47C- 3
NAS395-1-3	47D- 6
NAS395-1-3	90A- 2
NAS395-10-3	14 -42
NAS395-10-3	14A-54
NAS395-12-3	55 -18
NAS395-12-3	55A-12

PART NUMBER	FIGURE AND INDEX NO.
NAS395-12-3	68 - 8
NAS395-13-3	10 -30
NAS395-13-3	17 - 7
NAS395-13-3	17A- 7
NAS395-14-3	3 -20
NAS395-14-3	4 -26
NAS395-14-3	4A-25
NAS395-14-3	48-27
NAS395-14-3	14A-46
NAS395-14-3	17 -25
NAS395-14-3	17 -53
NAS395-14-3	17A-25
NAS395-14-3	17A-54
NAS395-14-3	25 -18
NAS395-14-3	29 -60
NAS395-14-3	29A-51
NAS395-14-3	29B-56
NAS395-14-3	32 - 3
NAS395-14-3	65A- 6
NAS395-16-3	4 - 4
NAS395-16-3	4A- 4
NAS395-16-3	48- 4
NAS395-16-3	17 -448
NAS395-16-3	17 -76
NAS395-16-3	39B-45
NAS395-16-3	81 -19
NAS396-4-3	91 -13
NAS396-4-3	91A-13
NAS396-6-3	69 -19
NAS397-10	30 -23
NAS397-10	82A-17
NAS397-12	82A-15
NAS397-12	88 -11
NAS397-14	8 -11
NAS397-14	8 -15
NAS397-14	8 -19
NAS397-14	82 - 2
NAS397-14	82A- 2
NAS397-14	88 -48
NAS397-14	88 -53
NAS397-14	88 -56
NAS397-14	88A-55
NAS397-14	88A-60
NAS397-14	88A-63
NAS397-14	88B-50
NAS397-14	88B-55
NAS397-14	88B-58
NAS397-14-1	87 -10
NAS397-14-1	87 -14
NAS397-14-1	87 -20
NAS397-16-1	63 -44
NAS397-18	69 -21
NAS397-18-1	63 -13
NAS397-22	5 - 6A
NAS397-22	5A- 9
NAS397-22	58- 9
NAS397-22	69 -228
NAS397-32-1	70 -18
NAS397-8	30 -13
NAS397-8	88 -17
NAS397-8	88 -29E
NAS397-8	88A-33
NAS397-8	88B-35
NAS397-8	88B-38
NAS397-8	88C-19
NAS397-8	88C-24
NAS397-8	88C-52
NAS398-42	63 -36
NAS398-42	63 -63
NAS398-42	70 -20
NAS398-42	70 -26
NAS398-50	62 -44
NAS398-50	63 -58A
NAS398-50	63 -60

PART NUMBER	FIGURE AND INDEX NO.
NAS398-50	63 -60
NAS398-50	63 -65
NAS398-50	69 -36
NAS398-50	69A-40
NAS398-50	70 -22
NAS398-50	70 -24
NAS42HT6-19	53J-32A
NAS42HT6-19	53L-34
NAS42HT6-19	53N-35
NAS42HT6-19	53Q-39
NAS428H3-5	79 -32C
NAS428H3-6	79 -32C
NAS428H3-6	80 -32
NAS430D-13	89B-17
NAS430D1-10	53N-58
NAS430D1-12	53A- 5
NAS430D1-16	53N-58
NAS430D1-18	53 -28
NAS430D1-21	53N-58
NAS430D12-64	53A-32
NAS430D12-64	53Q-93B
NAS430D3-12	43A-10
NAS430D3-12	51B-21C
NAS430D3-12	79 -45
NAS430D3-13	89C-16
NAS430D3-14	53 -45
NAS430D3-16	84A-34
NAS430D3-16	84A-34
NAS430D3-16	89B-31
NAS430D3-16	90 -63
NAS430D3-18	51F-76A
NAS430D3-18	53A-50
NAS430D3-21	75 -14
NAS430D3-24	81 -32
NAS430D3-3	51B-21C
NAS430D3-32	56 -68
NAS430D3-32	71 -17
NAS430D3-32	71A-18
NAS430D3-45	89B-18
NAS430D3-45	89C-17
NAS430D3-48	91 - 9
NAS430D3-6	89B-27
NAS430D3-6	89C-24
NAS430D3-64	53C-20
NAS430D3-64	53E-22
NAS430D3-64	53G-23
NAS430D3-64	53J-70
NAS430D3-64	53L-73
NAS430D3-64	53N-76
NAS430D3-64	53Q-84
NAS430D3-64	57A- 58
NAS430D3-70	91 -11
NAS430D3-8	90 -48
NAS430D3-9	89C-28
NAS430D4-16	53A- 3
NAS430D4-16	53B- 2
NAS430D4-16	53B- 8
NAS430D4-16	53C-59
NAS430D4-16	53D- 2
NAS430D4-16	53D- 6
NAS430D4-16	53E- 2
NAS430D4-16	53E- 7
NAS430D4-16	53F- 2
NAS430D4-16	53F- 6
NAS430D4-16	53G- 2
NAS430D4-16	53G- 8
NAS430D4-16	53H- 2
NAS430D4-16	53J-40
NAS430D4-16	53J-47
NAS430D4-16	53K- 2
NAS430D4-16	53K- 6
NAS430D4-16	53L-41
NAS430D4-16	53L-50
NAS430D4-16	53M- 2

PART NUMBER	FIGURE AND INDEX NO.
NAS43DD4-16	53M- 6
NAS43DD4-18	75 -11
NAS43DD6-132	79B-27B
NAS43DD6-33	51C-27
NAS43HT-80	52A-27
NAS43HT1-23	53 -33
NAS43HT3-12	49A- 5
NAS43HT3-12	49B- 5
NAS43HT3-12	49C- 5
NAS43HT3-12	72 -23
NAS43HT3-16	49 -51B
NAS43HT3-16	51A-81B
NAS43HT3-16	82A-11A
NAS43HT3-34	41 -46
NAS43HT3-34	41A-57
NAS43HT3-4	79 -58B
NAS43HT3-6	76B-39
NAS43HT3-64	53 -10
NAS43HT3-64	53A-15
NAS43HT3-8	79 -62
NAS43HT3-8	92A-22
NAS43HT3-9	62 -31
NAS43HT4-12	49B-54
NAS43HT4-12	49C-53
NAS43HT4-12	51E-98A
NAS43HT4-12	51F-94
NAS43HT4-12	52A-23
NAS43HT4-12	52A-26
NAS43HT4-12	52B-43
NAS43HT4-12	52B-46
NAS43HT4-16	76 -47
NAS43HT4-16	76A-47
NAS43HT4-16	77 -58
NAS43HT4-16	79 -27
NAS43HT4-18	51B- 4
NAS43HT4-20	48 -34
NAS43HT4-20	49A-56
NAS43HT4-20	50 - 9
NAS43HT4-20	52 -17
NAS43HT4-22	49 -94
NAS43HT4-22	51A-84
NAS43HT4-22	51B-33
NAS43HT4-32	52A-22
NAS43HT4-32	52B-42
NAS43HT4-42	76B-40D
NAS43HT4-47	52 -19
NAS43HT4-55	80 -15
NAS43HT4-80	52B-47
NAS43HT4-88	52B-47
NAS43HT5-17	74 - 5
NAS430D3-64	53 -10
NAS430D3-64	53A-15
NAS434-16-27	63 -64
NAS434A12-27	63 -58
NAS434A14-27	63 -45
NAS434A14-27	63 -64
NAS435A4-92	62 -42
NAS435A5-92	62 -26
NAS437-2C	82 - 7
NAS444-14-3	5 -14
NAS444-14-3	5 -17
NAS444-14-3	5A-24
NAS444-14-3	5A-29
NAS444-14-3	5B-14
NAS444-4-3	7 -23
NAS444-4-3	7A-23
NAS444-5	12 -31
NAS445-5	12 -30
NAS446-1	53G-99
NAS446-1-3	45A-37
NAS446-1-3	45B-28
NAS446-1-3	47 - 3
NAS446-1-3	47A- 3
NAS446-1-3	47B- 3

PART NUMBER	FIGURE AND INDEX NO.
NAS446-1-3	53E-71
NAS446-1-3	76A-51
NAS446-1-3	79B-35
NAS446-1-3	79B-37
NAS446-1-3	82 -31
NAS446-1-3	82A-36
NAS446-1-3	82A-37
NAS446-2	91A-23
NAS446-2-1	53A- 8
NAS446-2-1	53C- 8
NAS446-2-1	53E- 9
NAS446-2-1	53G-10
NAS446-2-1	53J-56
NAS446-2-1	53N-59
NAS446-2-1	53Q-69
NAS446-2-3	53 -27
NAS446-2-3	55 - 3
NAS446-2-3	55 - 6
NAS446-2-3	55 -14
NAS446-2-3	55 -20
NAS446-2-3	55A-16
NAS446-2-3	55A-18
NAS446-2-3	55A-20
NAS446-2-3	63 -50
NAS446-2-3	63 -80
NAS446-2-3	66 - 2
NAS446-2-3	66 - 5
NAS446-2-3	66 - 9
NAS446-2-3	66 -13
NAS446-2-3	66 -27
NAS446-2-3	66 -52
NAS446-2-3	90 -16
NAS446-2-3	91 -17
NAS446-2-3	93 - 5
NAS446-2-3	93 - 9
NAS446-3-3	47 -19
NAS446-3-3	47A-20
NAS446-3-3	47B-20
NAS446-4	91A-20
NAS446-4-3	5 - 6
NAS446-4-3	5A- 8
NAS446-4-3	5B- 8
NAS446-4-3	22 - 6
NAS446-4-3	22 -13
NAS446-4-3	22 -22
NAS446-4-3	39B-47
NAS446-4-3	53C-81
NAS446-4-3	53E-75
NAS446-4-3	53G-70
NAS446-4-3	53J- 4
NAS446-4-3	53L- 4
NAS446-4-3	53N- 4
NAS446-4-3	55 -18
NAS446-4-3	62 -11
NAS446-4-3	62 -42
NAS446-4-3	62 -43
NAS446-4-3	63 -58
NAS446-4-3	63 -58
NAS446-4-3	65 - 5
NAS446-4-3	69 - 3
NAS446-4-3	69A- 3
NAS446-4-3	71A- 4
NAS446-4-3	71A- 7
NAS446-4-3	71A-47
NAS446-4-3	71A-71
NAS446-4-3	84A-34
NAS446-4-3	86 -18
NAS446-4-3	89 -12
NAS446-5-3	63 -41
NAS448-1-3	61B-51E
NAS455-163C4-8	9 -19
NAS464-3-22	35 -43
NAS464-3-22	35A-47
NAS464P3-7	15 -54

PART NUMBER	FIGURE AND INDEX NO.
NAS464P3-9	78 -26
NAS464P4A8	56 -50
NAS464P5LA30	39B-16
NAS464P6LA32	34 - 2
NAS488-1-3	32 - 5
NAS488-1-3	61C-72
NAS488-10	70 -22
NAS488-5-3	32 - 5
NAS514-1032-14	41 -46
NAS514-1032-14	41A-57
NAS514-632R10	74A-16
NAS557-3A	22 -10
NAS557-3A	53L-21
NAS557-4A	22 - 7
NAS557-4A	22 -24
NAS557-4A	53N-22
NAS557-6A	22 - 3
NAS557-8A	48-49
NAS557-8A	58- 5
NAS557-8A	58-32
NAS557-8A	22 -18
NAS557-8A	79B-32
NAS561-P3-10	52A-10
NAS561-1-16	51F-89A
NAS561-2-10	82 -33
NAS561-2-10	82A-39
NAS561-2-12	49 -44
NAS561-2-12	49A-48
NAS561-2-12	49B-47
NAS561-2-12	49C-42
NAS561-3-16	51D-82
NAS561-3-16	51E-85
NAS561-3-8	49A-43
NAS561-3-8	49B-42
NAS561-3-8	49C-44
NAS561-3-8	75 - 9
NAS561-3-8	75 -27
NAS561-4-6	34 -12
NAS561-4-9	43 -17
NAS561-5-12	71 -27
NAS561-5-12	71A-28
NAS561-6-14	74 -30
NAS561-6-18	51 - 3
NAS561-6-18	51 - 5
NAS561-6-18	51 -31
NAS561-6-32	74A-49
NAS561C0-10	51A-81
NAS561C2-8	70 - 8
NAS561C3-10	49 -51
NAS561C3-10	49A-52
NAS561C3-10	49B-51
NAS561C3-10	49C-49
NAS561C3-10	50 -28
NAS561C3-10	51 -45
NAS561C3-10	52B-13
NAS561C3-10	52B-15
NAS561C3-12	51 -46
NAS561P3-8	41 -44
NAS561P3-8	41A-55
NAS561P3-8	51 -16
NAS561P3-8	51A-57
NAS561P4-10	51 -22
NAS561P4-10	51A-48
NAS561P4-10	51A-53
NAS561P4-10	51D-36
NAS561P4-10	51D-66
NAS561P4-10	51D-68
NAS561P4-10	51E-38
NAS561P4-10	51E-69
NAS561P4-10	51E-71
NAS561P4-12	51 -28
NAS561P4-12	51A-52
NAS561P4-12	51D-24
NAS561P4-12	51D-27

PART NUMBER	FIGURE AND INDEX NO.
NAS561P4-12	51D-29
NAS561P4-12	51D-34
NAS561P4-12	51D-61
NAS561P4-12	51E-25
NAS561P4-12	51E-28
NAS561P4-12	51E-30
NAS561P4-12	51E-36
NAS561P4-12	51E-63
NAS561P4-12	51F-22
NAS561P4-12	51F-29
NAS561P4-12	51F-34
NAS561P4-12	51F-54
NAS561P4-12	51F-56
NAS561P4-14	38 - 9
NAS561P4-15	43A-18
NAS561P4-15	51F-37
NAS561P4-18	38A- 9
NAS561P4-18	38B-11
NAS561P4-6	43A-21
NAS561P4-8	51 -26
NAS561P4-8	51A-50
NAS561P4-8	51F-66
NAS561P6-12	51F-26
NAS561P6-18	51A-35
NAS561P6-18	51C-31
NAS561P6-18	51D-49
NAS561P6-18	51D-52
NAS561P6-18	51E-51
NAS561P6-18	51E-54
NAS561P6-18	51F-49
NAS561P6-22	51A-33
NAS561P6-22	51C- 5
NAS561P6-22	51C- 7
NAS561P6-22	51D-54
NAS561P6-22	51E-56
NAS561P6-22	51F-47
NAS561P6-28	51D-45
NAS561P6-28	51E-47
NAS561P6-28	51F-42
NAS561P8-18	51D-48
NAS561P8-18	51D-56
NAS561P8-18	51E-50
NAS561P8-18	51E-58
NAS561P8-18	51F-43
NAS561P8-18	51F-45
NAS563-11	38A- 6
NAS563-11	38B-13
NAS563-21	62 -25A
NAS601-5	53J-38
NAS601-5	53L-39
NAS601-5	53N-42
NAS601-5	53Q-23
NAS602-40	91 - 8
NAS620-4	79 -66
NAS620-4	79 -69
NAS620-4	79B-15
NAS620-4	79C-13
NAS620-416	26 - 68
NAS620-8	47B-26
NAS620-8	47C-32
NAS620-8	47D-33
NAS620A416L	57A-17
NAS620A416L	57B-19
NAS679-A06	91A-17
NAS679A06	53G-33
NAS679A04	45A-32
NAS679A04	45A-35
NAS679A04	45B-23
NAS679A04	45B-26
NAS679A04	63 -65
NAS679A04	74B-29
NAS679A06	13 -33
NAS679A06	19 -20
NAS679A06	19 -25

PART NUMBER	FIGURE AND INDEX NO.
NAS679A06	31 -27C
NAS679A06	31A-31
NAS679A06	41 -22
NAS679A06	42 -21
NAS679A06	53E-32
NAS679A06	53J-80
NAS679A06	53L-83
NAS679A06	53N-86
NAS679A06	53Q-91A
NAS679A06	61A-11
NAS679A06	61B-13
NAS679A06	71A-54
NAS679A06	74A-17
NAS679A06	74B-21
NAS679A06	74B-29
NAS679A06	74C-27
NAS679A06	79 -66
NAS679A06	79A- 8
NAS679A06	90 -75
NAS679A06	91 -22
NAS679A08	3 -26
NAS679A08	8 -32
NAS679A08	11 -17
NAS679A08	11 -17
NAS679A08	14A-41
NAS679A08	15A-67
NAS679A08	17 -10
NAS679A08	17 -41
NAS679A08	17 -41
NAS679A08	17 -49
NAS679A08	17A-10
NAS679A08	17A-41
NAS679A08	17A-41
NAS679A08	20 -23
NAS679A08	23A-70
NAS679A08	41A-28
NAS679A08	42A-27
NAS679A08	49 - 7
NAS679A08	49A- 9
NAS679A08	49B- 9
NAS679A08	49C- 9
NAS679A08	51A- 7
NAS679A08	51D-85
NAS679A08	51D-87A
NAS679A08	51E-88
NAS679A08	51E-91
NAS679A08	51F-74
NAS679A08	51F-89
NAS679A08	52A-17
NAS679A08	52B-21
NAS679A08	52C- 7
NAS679A08	52C-11
NAS679A08	53A-53
NAS679A08	53C-61
NAS679A08	56 -37
NAS679A08	69A-28
NAS679A08	74 -19
NAS679A08	74 -36
NAS679A08	74 -40
NAS679A08	74 -51
NAS679A08	74 -66
NAS679A08	74 -70
NAS679A08	74A-13
NAS679A08	74A-17C
NAS679A08	74A-31
NAS679A08	74A-41
NAS679A08	74A-50
NAS679A08	75 - 8
NAS679A08	76 -50
NAS679A08	76A-50
NAS679A08	76B-29
NAS679A08	79 - 9
NAS679A08	79B-33
NAS679A08	81 -52

PART NUMBER	FIGURE AND INDEX NO.
NAS679A08	82A-11A
NAS679A08	89 - 8
NAS679A08	89A-20
NAS679A08	89A-66
NAS679A08	89B- 7
NAS679A08	89B-55
NAS679A08	89C- 7
NAS679A08	89C-42
NAS679A08	91A-20
NAS679A08	92 -13
NAS679A08K	52D-25
NAS679A4	9 - 6
NAS679A4	12B- 5
NAS679A4	13 - 3
NAS679A4	14 - 4
NAS679A4	14 -32
NAS679A4	14A- 3
NAS679A4	14A-51
NAS679A4	15 - 3
NAS679A4	15 -42
NAS679A4	15A- 3
NAS679A4	15A-61
NAS679A4	17 -14
NAS679A4	17A-14
NAS679A4	31 -31
NAS679A4	31 -34
NAS679A4	31A-35
NAS679A4	31A-39
NAS679A4	35 -12
NAS679A4	35A- 5
NAS679A4	36A-11
NAS679A4	37 -11
NAS679A4	37A-12
NAS679A4	40A-25
NAS679A4	48 -35
NAS679A4	49 -55
NAS679A4	49A-57
NAS679A4	49B-56
NAS679A4	49C-55
NAS679A4	50 -10
NAS679A4	51 -18
NAS679A4	51A-37
NAS679A4	51A-85
NAS679A4	51B-34
NAS679A4	51C-33
NAS679A4	51E-98A
NAS679A4	51F-96
NAS679A4	52 - 9
NAS679A4	52 -16
NAS679A4	52A- 2
NAS679A4	52A-24
NAS679A4	52A-28
NAS679A4	52B- 3
NAS679A4	52B-44
NAS679A4	52B-48
NAS679A4	52C-19
NAS679A4	52D- 5
NAS679A4	52D-12
NAS679A4	52D-22
NAS679A4	52D-24
NAS679A4	62 -36
NAS679A4	62 -39
NAS679A4	74 -24
NAS679A4	74 -75
NAS679A4	74A-22
NAS679A4	74A-44
NAS679A4	76 -22
NAS679A4	76 -37
NAS679A4	76 -43
NAS679A4	76A-36
NAS679A4	76A-43
NAS679A4	77 -13
NAS679A4	77 -25
NAS679A4	77 -38

PART NUMBER	FIGURE AND INDEX NO.
NAS679A4	77 -42
NAS679A4	77 -45
NAS679A4	77 -48
NAS679A4	79 -32
NAS679A4	79 -47
NAS679A4	79 -63
NAS679A4	80 -14
NAS679A4	80 -20
NAS679A4	80 -24
NAS679A4	84 - 4
NAS679A4	84A-28
NAS679A4	84A-34
NAS679A4	90 -64E
NAS679A5	6 -14
NAS679A5	6A-16
NAS679A5	12 - 3
NAS679A5	12 - 3
NAS679A5	12A- 5
NAS679A5	12B- 6
NAS679A5	17 -19
NAS679A5	17A-19
NAS679A5	31 - 9
NAS679A5	31A- 7
NAS679A5	33 - 2
NAS679A5	33 -21
NAS679A5	33A- 2
NAS679A5	33A-19
NAS679A5	35 - 5
NAS679A5	35 - 8
NAS679A5	35A-10
NAS679A5	35A-15
NAS679A5	37B- 5
NAS679A5	39 -14
NAS679A5	39A-14
NAS679A5	39B-18
NAS679A5	39B-22
NAS679A5	40A-14
NAS679A5	56 -16
NAS679A5	56 -39D
NAS679A5	74 - 7
NAS679A5	76 -26
NAS679A5	76 -32
NAS679A5	76A-19
NAS679A5	76A-24
NAS679A5	76A-31
NAS679A5	76B-33
NAS679A5	77 -32
NAS679A5	79 -16
NAS679A5	95 - 7
NAS679A6	12 - 3
NAS679A6	12 - 6
NAS679A6	12A- 6
NAS679A6	34 - 5
NAS679A6	39 - 6
NAS679A6	39 -16
NAS679A6	39A- 6
NAS679A6	39A-16
NAS679A6	39B-25
NAS679A6	60 -13
NAS679A6	60 -44
NAS679A6	79 -50
NAS679C3M	79B-29
NAS680A06	12A-11
NAS680A06	12B-11
NAS680A06	21A-24
NAS680A06K	39B-43
NAS680A08	5 -24
NAS680A08	5A-36
NAS680A08	13 - 9
NAS680A08	17A-44
NAS680A08	21 -14
NAS680A08	21B- 4
NAS680A08	21B-18
NAS680A08	23 - 8A

PART NUMBER	FIGURE AND INDEX NO.
NAS680A08	23 -58
NAS680A08	23A- 9
NAS680A08	23A-19
NAS680A08	24 -12
NAS680A08	44 -13
NAS680A08	44 -17
NAS680A08	68A- 4
NAS680A08	91 -24
NAS680A08	92A-12
NAS680A08K	1[illegible] - 9A
NAS680A08K	21 21
NAS680A08K	25 -49
NAS680A08K	25 -50
NAS680A08K	25 -68
NAS680A08K	25 -72
NAS680A3	10 -20
NAS680A3	15A-29
NAS680A3	17 -10
NAS680A3	18 -21
NAS680A3	18 -23
NAS680A3	18 -30A
NAS680A3	20 - 6
NAS680A3	21A- 7
NAS680A3	21B-33
NAS680A3	24 -12
NAS680A3	25 - 8A
NAS680A3	31A-12
NAS680A3	39 -47
NAS680A3	39A-40
NAS680A3	39B-55
NAS680A3	56 -62
NAS680A3	58 -12
NAS680A3	58 -28
NAS680A3	58 -30
NAS680A3	61B-49
NAS680A3	61C-53
NAS680A3	66 -36
NAS680A3	66 -39
NAS680A3	68B- 8
NAS680A3	68B- 9
NAS680A3	68B- 9
NAS680A3K	39 -68
NAS680A3K	39A-59
NAS680A3K	39B-63
NAS680A4	23A-45
NAS680A4	23A-47
NAS680A4	24 -26
NAS680A4	25 -27
NAS680A4	30 - 2
NAS680C08M	17 -28
NAS680C08M	17A-28
NAS682-A4	48 -23
NAS682A08	17A-10
NAS682A08	25 - 3C
NAS682A08	41 -25A
NAS682A08	41A-36
NAS682A08	42 -15A
NAS682A3	29B-17
NAS682A3	43A-14
NAS682A3	53Q-32
NAS684A08	74A-22A
NAS684A3	53Q- 6
NAS686A08	4A-20
NAS686A08	4B-24
NAS686A08	29B-53
NAS686A08	52D- 8
NAS686A08K	4 -25
NAS686A08K	4A-24
NAS686A3	4A-20
NAS686A3	4B-20
NAS686A3	15 -16
NAS686A3	18 -11
NAS686A3	20 - 4
NAS686A3	20 - 6

PART NUMBER	FIGURE AND INDEX NO.
NAS686A3	24 -18
NAS686A3	39 -46
NAS686A3	39 -46
NAS686A3	39 -46
NAS686A3	39 -69
NAS686A3	39A-39
NAS686A3	39A-58
NAS686A3	39B-62
NAS686A3K	90 -77
NAS687A3	24 - 6
NAS687A3	61A-14
NAS687A3K	25 -24
NAS696A04L	90A- 4
NAS696A06L	3 -51
NAS696A06LK	19 -18
NAS696A06LK	70 -35
NAS696A08	53-31
NAS696A08	17 -63
NAS696A08	17A-65
NAS696A08	17A-79
NAS696A08	21 -24
NAS696A08	23A-28
NAS696A08	23A-71
NAS696A08	31 -36
NAS696A08	41 -10
NAS696A08	41 -24
NAS696A08	41 -25
NAS696A08	41A-13
NAS696A08	41A-34
NAS696A08	41A-35
NAS696A08	42 - 9
NAS696A08	42 -14
NAS696A08	42 -15
NAS696A08	42A-11
NAS696A08	42A-17
NAS696A08	42A-18
NAS696A08	44 -20
NAS696A08	53N-37
NAS696A08	53Q-41
NAS696A08	74A-11
NAS696A08	89B-12
NAS696A08	89C-11
NAS696A08K	12 -20
NAS696A08K	12 -20
NAS696A08K	12A-10
NAS696A08K	12B-10
NAS696A08K	13 -27
NAS696A08K	21A-25
NAS696A08K	21A-25
NAS696A08K	21B-32
NAS696A08K	29 -64
NAS696A08K	29A-50
NAS696A08K	29B-55
NAS696A08K	29B-55
NAS696A3	14A-35
NAS696A3	31 - 3
NAS696A3	31A- 4
NAS696A3	41 -17
NAS696A3	41A-21
NAS696A3	42 -16
NAS696A3	42A-20
NAS696A3	56 -63
NAS696A3	61B-23
NAS696A3K	23A-55
NAS696A3K	53N-29
NAS697A08	4 -12
NAS697A04L	90A- 2
NAS697A06L	21B-30
NAS697A06L	53E-91
NAS697A06L	53E-92
NAS697A06L	53G-86
NAS697A06L	53G-87
NAS697A06L	53J-15
NAS697A06L	53J-18

PART NUMBER	FIGURE AND INDEX NO.
NAS697A06L	53L-15
NAS697A06L	53L-18
NAS697A06L	53N-16
NAS697A06L	53Q- 7
NAS697A06L	53Q- 9
NAS697A06L	53Q-17
NAS697A08	4A-11
NAS697A08	4A-16
NAS697A08	4B-11
NAS697A08	13 - 9
NAS697A08	17A-80
NAS697A08	19 - 2
NAS697A08	23A-27
NAS697A08	23A-28
NAS697A08	23A-44
NAS697A08	23A-71
NAS697A08	29 -50
NAS697A08	29A-38
NAS697A08	29B-43
NAS697A08	31 -35
NAS697A08	31A- 2
NAS697A08	31A-40
NAS697A08	41 -10
NAS697A08	41 -25
NAS697A08	41 -25A
NAS697A08	41A-13
NAS697A08	41A-35
NAS697A08	42 - 9
NAS697A08	42 -15
NAS697A08	42 -15A
NAS697A08	42A-11
NAS697A08	42A-18
NAS697A08	44 -10C
NAS697A08	53C-91
NAS697A08	53C-94
NAS697A08	53E-86
NAS697A08	53G-81
NAS697A08	53J-13
NAS697A08	53J-16
NAS697A08	53L-13
NAS697A08	53L-16
NAS697A08	53N-13
NAS697A08	53N-17
NAS697A08	53N-28
NAS697A08	53N-36
NAS697A08	53Q-15
NAS697A08	53Q-18
NAS697A08	53Q-26
NAS697A08	53Q-34
NAS697A08	53Q-40
NAS697A08	53Q-61
NAS697A08	61B-50A
NAS697A08	61C-50
NAS697A08	61C-57
NAS697A08	74A-11
NAS697A08	89B-12
NAS697A08	89C-11
NAS697A08	92A-21
NAS697A08K	12 -20
NAS697A08K	12A-10
NAS697A08K	12B-10
NAS697A08K	13 -28
NAS697AC8K	21B-34
NAS697A08K	29 -63
NAS697A08K	29A-49
NAS697A08K	29B-54
NAS697A08K	29B-54
NAS697A08K	39B-45
NAS697A08K	43 - 3
NAS697A3	14A-35
NAS697A3	23 -13
NAS697A3	25 - 8A
NAS697A3	28 -10
NAS697A3	29 -17

PART NUMBER	FIGURE AND INDEX NO.
NAS697A3	29 -23
NAS697A3	53C-92
NAS697A3	53J-30A
NAS697A3	53L-30
NAS697A3	53N-24
NAS697A3	53N-31
NAS697A3	53Q-29
NAS697A3	53Q-36
NAS697A3	56 -39
NAS697A3	88 - 9
NAS697A3	88A- 9
NAS697A3K	23A-44
NAS697A3K	23A-46
NAS697A3K	55A-18
NAS697A4	21A-16
NAS697A4	31 -20
NAS697A4	31A-20
NAS697A4K	21 - 7
NAS697A4K	21A- 8
NAS697A4K	21A- 9
NAS697A4K	21B-31
NAS697A4K	23A-55
NAS698A08	29 -51
NAS698A08	29A-39
NAS698A08	29B-44
NAS698A08	68A- 6
NAS698A08K	12 -18
NAS698A08K	12A-11
NAS698A08K	12B-11
NAS698A08K	13 -29
NAS698A08K	29B-55
NAS698A08K	43A-29
NAS698A3	25 - 8A
NAS698A3	43A-14
NAS698A3	53J-20
NAS698A3	53L-20
NAS698A3	53N-21
NAS698A3	53Q-27
NAS698A3K	75 -21
NAS70A-128-313	43 -26
NAS737RM30	8 -15A
NAS75-3-016	79B- 7
NAS75-3-016	79C- 5
NAS75-4-10	33 - 5
NAS75-4-10	33A- 5
NAS75-4-103	79 -63A
NAS75-4-304	79 -63
NAS75-5-225	33A-21
NAS76A3-016	75 -15
NAS76A3-028	75 -15A
NAS77-3-23	35 -35A
NAS77-3-23	35A-39
NAS77-6-88	35 -35
NAS77-6-88	35 -47
NAS77-6-88	35A-38
NAS77-6-88	35A-51
NTA-2233	74 -61
NTA-2233	74A- 8
N233-2	92A-19
PN-3A	15 -52
PR0890	1 -14B
P2274	88 -23
P2274	88A-23
P2274	88B-18
P2274	88C-16
R-12 1/2-75RS34	53A-40
R-12 1/2-8RS34	53A-39
R12 1/2-75RS34	53C-46
R12 1/2-8RS34	53C-45
R121/275RS34	53E-46
R121/28RS34	53E-45
R5673	64B-24
S-1550-1	61C-33
SEE NOTE *	69A-41

PART NUMBER	FIGURE AND INDEX NO.
SEE NOTE *	90 -65
SEE NOTE %	62 -10
SEE NOTE %	62 -17
SEE NOTE %	62 -27
SEE NOTE %	62 -38
SE709	86 -57
SF1030-268X	74B-24
SF1030BX	74C-14
SH15	63A-42
SH20A	63A-43
SH200A	63A-44
SK182-34	35 - 3
SM2H	74 -85
SM2H	74 -86
SM3P	74 -85
SM3S	74 -86
SS51058K2215	66 -19
S1003-43A	72 -34
S1004-1A	19 -12
S1004-1A	19 -17
S1004-1A	19 -25
S1021-10-10	87 -17
S1021-8-6	75 -30
S1021A4-6	17 -73
S1021A4-6	45B-18
S1021A4-6	46 - 5
S1021A4-6	46 - 6
S1021A4-6	47B-14
S1021A4-6	49B-14
S1021A4-6	49B-15
S1021A4-6	49C-14
S1021A4-6	49C-15
S1021A4-6	49C-18
S1021A4-6	51D- 9
S1021A4-6	51D-18
S1021A4-6	51D-21
S1021A4-6	51E-10
S1021A4-6	51E-11
S1021A4-6	51E-19
S1021A4-6	51E-22
S1021A4-6	51F- 9
S1021A4-6	51F-17
S1021A4-6	51F-20
S1021A4-6	52A-41
S1021A4-6	52B-38
S1021A4-6	53G-99
S1021A4-6	53N-55
S1021A4-6	53Q-60
S1021A4-6B	53E- 8
S1021A4-6B	53G- 9
S1021A4-6B	53J-53
S1021A4-6C	45A-36
S1021A4-6C	45B-27
S1021A6-12	47C- 2
S1021A6-6	53E- 4
S1021A6-6	53G- 5
S1021A6-6	53J-50
S1021A6-6	53L-53
S1021A6-6	53N-57
S1021A6-6	53Q-54
S1021A6-6B	53A- 7
S1021A6-6B	53B-21
S1021A6-8C	52A-41
S1021A8-6	74A-17E
S1021A8-6	90 - 9A
S1021Z10-10	63 -45
S1021Z10-10	63 -58
S1021Z10-12	63 -64
S1021Z10-6	76A-51
S1021Z10-6	79B-35
S1021Z10-6	79B-37
S1021Z10-6	85 -14
S1021Z10-6	89C-50
S1021Z10-8	63 -41

PART NUMBER	FIGURE AND INDEX NO.
1021Z10 8	63 -61
1021Z10-8	63 -71
1021Z10-8	70 -22
1021Z2-5	53D-11
1021Z2-5	53E-61
1021Z2-5	53F-10
1021Z2-5	53G-62
1021Z2-5	53H-10
S1021Z4-12	53 -28
S1021Z4-4	47 -19
S1021Z4-4	47 -21
S1021Z4-4	47A-20
S1021Z4-4	47A-22
S1021Z4-4	47B-20
S1021Z4-4	47B-22
S1021Z4-4	47C-22
S1021Z4-4	47C-25
S1021Z4-4	47D-39
S1021Z4-4	82 -30
S1021Z4-4	82A-34
S1021Z4-4C	82A-35
S1021Z4-4C	90A- 2
S1021Z4-6	44 -24
S1021Z4-6	45 -14
S1021Z4-6	45A-13
S1021Z4-6	45B- 6
S1021Z4-6	45B- 7
S1021Z4-6	45B- 9
S1021Z4-6	46 -12
S1021Z4-6	47 -14
S1021Z4-6	47 -15
S1021Z4-6	47A-14
S1021Z4-6	47A-16
S1021Z4-6	47B-16
S1021Z4-6	47C-15
S1021Z4-6	47D- 3
S1021Z4-6	47D- 9
S1021Z4-6	47D-20
S1021Z4-6	47D-23
S1021Z4-6	47D-24
S1021Z4-6	47D-25
S1021Z4-6	48 -10
S1021Z4-6	50 -24
S1021Z4-6	52 - 4
S1021Z4-6	52A- 7
S1021Z4-6	52B-10
S1021Z4-6	89 - 9
S1021Z4-6B	45 -10
S1021Z4-6B	45A- 9
S1021Z4-6B	45B- 4
S1021Z4-6C	45A-37
S1021Z4-6C	45B-28
S1021Z4-8	47 - 3
S1021Z4-8	47A- 3
S1021Z4-8	47B- 3
S1021Z4-8	47C- 3
S1021Z4-8	47D- 5
S1021Z4-8	53C-78
S1021Z4-8	53E-71
S1021Z6-10C	69 -28
S1021Z6-4	49 -19
S1021Z6-4	51A-21
S1021Z6-4	51A-24
S1021Z6-4	51B-17
S1021Z6-4	51B-19
S1021Z6-6	47 -19
S1021Z6-6	47 -23A
S1021Z6-6	47A-20
S1021Z6-6	47A-25
S1021Z6-6	47A-25C
S1021Z6-6	47B-20
S1021Z6-6	51B-28
S1021Z6-6	53Q-63
S1021Z6-6	55 - 2

PART NUMBER	FIGURE AND INDEX NO.
S1021Z6-6	55 - 5
S1021Z6-6	55 -14
S1021Z6-6	55 -19
S1021Z6-6	55A-15
S1021Z6-6	55A-17
S1021Z6-6	55A-20
S1021Z6-6	63 -49
S1021Z6-6	63 -79
S1021Z6-6	66 - 2
S1021Z6-6	66 - 5
S1021Z6-6	66 - 8
S1021Z6-6	66 -12
S1021Z6-6	66 -26
S1021Z6-6	66 -51
S1021Z6-6	89B-41
S1021Z6-6	89B-96
S1021Z6-6	89B-97
S1021Z6-6	89C-98A
S1021Z6-6	90 -16
S1021Z6-6	91 -16
S1021Z6-6	91A-21
S1021Z6-6	93 - 8
S1021Z6-8	45 - 5
S1021Z6-8	45A- 5
S1021Z6-8	45B- 3
S1021Z6-8	45B- 5
S1021Z6-8	48 -12
S1021Z6-8	49 -36
S1021Z6-8	51D-74
S1021Z6-8	51E-77
S1021Z6-8	53 -27
S1021Z6-8	53B-22
S1021Z6-8	61B-51F
S1021Z6-8	61C-71
S1021Z6-8	79 -71
S1021Z6-8	90 - 78
S1021Z6-8	90 -70
S1021Z6-8	93 - 6
S1021Z6-8B	53A- 4
S1021Z6-8B	53C- 3
S1021Z6R8	32 - 4
S1021Z8	41 -14
S1021Z8-10	69 -22
S1021Z8-10	69A-18
S1021Z8-10	71 - 7
S1021Z8-10	71A-50
S1021Z8-10	71A-54
S1021Z8-10	82 -12
S1021Z8-10	82A-18
S1021Z8-10	86 -18
S1021Z8-14	84A-34
S1021Z8-5	74A-53
S1021Z8-6	3 -43
S1021Z8-6	3 -45
S1021Z8-6	3 -59
S1021Z8-6	17 -52
S1021Z8-6	17A-53
S1021Z8-6	22 - 2
S1021Z8-6	22 - 5
S1021Z8-6	22 - 9
S1021Z8-6	22 -12
S1021Z8-6	22 -21
S1021Z8-6	25 -18
S1021Z8-6	29 -62
S1021Z8-6	29A-53
S1021Z8-6	29B-58
S1021Z8-6	39B-45
S1021Z8-6	46 - 7
S1021Z8-6	53N-29B
S1021Z8-6	55 -18
S1021Z8-6	62 -11
S1021Z8-6	62 -41
S1021Z8-6	62 -42
S1021Z8-6	62 -43

PART NUMBER	FIGURE AND INDEX NO.
S1021Z8-6	63 -58
S1021Z8-6	68 - 7
S1021Z8-6	68A-10
S1021Z8-6	69 - 4
S1021Z8-6	69A- 4
S1021Z8-6	71A- 4
S1021Z8-6	71A- 7
S1021Z8-6	71A-47
S1021Z8-6	71A-71
S1021Z8-6	79B-31
S1021Z8-6	86 -18
S1021Z8-6	89C-98B
S1021Z8-6	91A-20
S1021Z8-6C	49 -13
S1021Z8-6C	49A-14
S1021Z8-6C	51A-13
S1021Z8-6C	51B-11
S1021Z8-8	3 -17
S1021Z8-8	3 -31
S1021Z8-8	3 -31
S1021Z8-8	3 -42
S1021Z8-8	4 - 4
S1021Z8-8	4A- 4
S1021Z8-8	4B- 4
S1021Z8-8	5 - 6
S1021Z8-8	5A- 8
S1021Z8-8	5B- 8
S1021Z8-8	8 -17
S1021Z8-8	10 -29
S1021Z8-8	14 -42
S1021Z8-8	14 -44
S1021Z8-8	14A-47
S1021Z8-8	14A-54
S1021Z8-8	14A-57
S1021Z8-8	17 - 7
S1021Z8-8	17 -44B
S1021Z8-8	17 -75
S1021Z8-8	17A- 7
S1021Z8-8	22 -17
S1021Z8-8	32 - 2
S1021Z8-8	45 - 3
S1021Z8-8	45 - 4
S1021Z8-8	45 -18
S1021Z8-8	45A- 3
S1021Z8-8	45A- 4
S1021Z8-8	45B- 2
S1021Z8-8	46 -11
S1021Z8-8	47 -27
S1021Z8-8	47A-29
S1021Z8-8	47B-26
S1021Z8-8	47B-26
S1021Z8-8	47C-27
S1021Z8-8	47C-29
S1021Z8-8	47D-32
S1021Z8-8	47D-33
S1021Z8-8	53C-81
S1021Z8-8	53E-75
S1021Z8-8	53G-70
S1021Z8-8	53J- 4
S1021Z8-8	53L- 4
S1021Z8-8	53N- 4
S1021Z8-8	53N-55
S1021Z8-8	55A-11
S1021Z8-8	56 -30
S1021Z8-8	62 -25
S1021Z8-8	62 -26
S1021Z8-8	62 -42
S1021Z8-8	63 -15
S1021Z8-8	65 - 4
S1021Z8-8	65A- 6
S1021Z8-8	69 - 2
S1021Z8-8	69A- 2
S1021Z8-8	81 -19
S1021Z8-8	82 - 3

PART NUMBER	FIGURE AND INDEX NO.
S1021Z8-8	82 -10
S1021Z8-8	82A- 3
S1021Z8-8	82A-14
S1021Z8-8	89 -12
S1021Z8-8	89 -12
S1021Z8-8	89 -13
S1021Z8-8	89A-61
S1021Z8-8	89B-40
S1021Z8-8	89B-95
S1021Z8-8	89B-98
S1021Z8-8	89C-51
S1021Z8-8	89C-98C
S1021Z8-8	93 - 2
S1021Z8-8B	45A- 78
S1021Z8-8C	52D- 9
S1022A4-6	53B-20
S1022A4-6	90 - 9
S1022A6-6	53E- 5
S1022A6-6	53G- 6
S1022A6-6	53J-51
S1022A6-6	53L-54
S1022Z4-8	53G-59
S1022Z4-8	53Q-53
S1022Z4-8	89A-55
S1022Z6-10	50 -25
S1022Z6-10	51A-58
S1022Z6-10B	53A- 8
S1022Z6-10B	53C- 8
S1022Z6-8	53N-59
S1022Z6-8	53Q-69
S1022Z6-8B	53J-56
S1022Z6-88	53E- 9
S1022Z6-88	53G-10
S1022Z8-10	91A- 2
S1022Z8-14	91 - 2
S1022Z8-6	3 -19
S1022Z8-6	3 -20
S1022Z8-8	3 -15
S1022Z8-8	3 -19
S1022Z8-8	3 -29
S1022Z8-8	3 -50
S1022Z8-8	3 -53
S1022Z8-8	3 -53
S1022Z8-8	3 -57
S1022Z8-8	3 -60
S1022Z8-8	30 - 3
S1022Z8-8	39 -33
S1022Z8-8	39A-30
S1022Z8-8	41A-17
S1022Z8-8	69 -18
S1023A4-6	46 - 2
S1023A6-12B	53A- 5
S1023A6-12B	53C- 5
S1023A6-12B	53N-58
S1023A6-16B	53N-58
S1023A6-6C	69A-34
S1023A6-8B	56 -55
S1023A8-8	45 - 2
S1023A8-8	45A- 2
S1023A8-8	45B- 1A
S1023Z4-8C	45 -15
S1023Z4-8C	45A-14
S1023Z8-8B	47 -28
S1023Z8-8B	47A-30
S1023Z8-8B	47B-27
S1023Z8-8B	47C-30
S1023Z8-8B	47D-35
S10268G	1 -18
S10268G10.90X	70 -30
S1047-1	1 -20
S1047-2	1 -20
S1048-2	29 -60
S1048-2	29A-51
S1048-2	29B-56

PART NUMBER	FIGURE AND INDEX NO.
S1050-1	1 -48
S1050-1	23A-12
S1050-2	1 -48
S1050-3	1 -48
S1050-3	4A-21
S1052-1	79 -10
S1053E10T	1 -19
S1053E10T	69 -22A
S1053E10T	69A-20
S1053E12T	1 -19
S1053E16T	70 -17
S1053E20T	1 -19
S1053E24T	1 -19
S1053E24T	63 -59
S1053E24T	63 -65
S1053E24T	69 -35
S1053E24T	69A-39
S1053E24T	70 -23
S1053E28T	1 -19
S1053E32T	1 -19
S1053E7T	1 -19
S1053E8T	1 -19
S1053E8T	69 -20
S1053E8T	69 -20
S1053E8T	69A-17
S1053K10T	1 -19
S1053K12T	1 -19
S1053K20T	1 -19
S1053K20T	63 -35
S1053K20T	63 -35
S1053K20T	63 -62
S1053K20T	70 -19
S1053K20T	70 -25
S1053K20T	70 -25
S1053K24T	1 -19
S1053K24T	63 -58A
S1053K24T	63 -59
S1053K24T	63 -59
S1053K24T	70 -21
S1053K24T	70 -21A
S1053K24T	70 -21
S1053K24W	1 -19
S1053K28W	1 -19
S1053K32T	1 -19
S1055-1	1 -21
S1055-1	23A-25
S1055-1	93 -10
S1060-1	52A-21
S1060-14	52 -14
S1060-14	52A-21
S1060-15	48 -32
S1060-15	50 - 7
S1060-15	51A-82
S1060-3	51A-82
S1066C1	45B- 6
S1066C1	46 - 3
S1067-1	53C- 5
S1067B1	53A- 5
S1067B1	53N-58
S1067C1	45 - 2
S1067C1	45A- 2
S1067C1	45B- 1A
S1071-1	1 -22
S1071-1	4 - 3
S1071-1	4A- 3
S1071-1	4B- 3
S1071-1	81 - 4
S1071-1	81 - 6
S1071-1	81 - 7
S1071-1	81 - 7
S1071-1	81 - 8
S1071-1	81 -17
S1071-1	81 -40
S1071-1	81 -42

PART NUMBER	FIGURE AND INDEX NO.
S1071-1	81 -44
S1071-1	81 -45
S1071-1	81 -46
S1071-1	81 -54
S1071-1	81 -55
S1071-1	81 - 5
S1071-1	81 - 5
S1071-1	81 - 5A
S1071-1	81 - 5A
S1071-3	1 -22
S1071-3	76B-25
S1071-4	1 -22
S1071-5	1 -22
S1074-1	56 -11
S1074-1	91 -10
S1078-1	1 - 7
S1078-1	27 -12
S1078-2	1 - 8
S1078-3	1 - 9
S1080-1	19 -14
S1080-4	74 -63
S1080-4	74A-10
S1084-1	1 -23
S1090-2	90 -56
S1090-22	90 - 8
S1090-22	90 -55
S1091-1	90 - 8
S1091-1	90 -55
S1091-5	90 -56
S1093-1	10 -32
S1095-1	22 - 8
S1095-1	22 -20
S1095-2	22 - 4
S1095-3	22 - 1
S1095-4	22 -16
S1103-1	54 - 5
S1104-3	62 -18
S1106-3	10 - 5
S1106-3	79B-18
S1106-4	62 -33
S11065-21	35 -21
S11065-21	35A-24
S1110ET	1 -24
S1110ET	70 -29
S1115-19	90 -23
S1115-29	61C-47
S1115-30	90 -21
S1115-9	90 -21
S1116	1 -43
S1116-1	41 -26
S1116-1	41 -26
S1116-1	41 -26A
S1116-1	41A-38
S1116-1	42 -22
S1116-1	42A-37
S1116-1-	44 -14
S1117-24	39 -20
S1117-24	39A-19
S1117-24	39B-28
S1130-1	81 - 9
S1130-1	81 -10
S1130-1	81 -39
S1130-1	81 -47
S1131-1	4 - 2
S1131-1	4A- 2
S1131-1	4B- 2
S1131-1	81 - 4
S1131-1	81 -10
S1131-1	81 -38
S1131-1	81 -47
S1132-1	81 -18
S1133-1	81 -13
S1133-1	81 -37
S1133-2	81 -24

PART NUMBER	FIGURE AND INDEX NO.
S1137-1	81 -41
S1138-1	81 -11
S1138-1	81 -56
S1139-1	81 -12
S1141-1	17 -47
S1141-2	17 -47
S1146-1	51 -43
S1153-1	3 -40
S1153-3	89C-51
S1155-2	89B-97
S1155-2	89C-98A
S1155-3	89A-61
S1155-3	89A-65
S1155-3	89B-95
S1155-3	89B-96
S1155-3	89C-48
S1155-3	89C-50
S1155-4	89 -12
S1155-4	89B-40
S1155-4	89B-41
S1155-4	89C-98C
S1158-1-1	53A-47
S1158-1-1	53C-54
S1158-1-1	53E-48
S1158-1-1	54 -18
S1158-1-1	86 - 5
S1158-2-1	53A-46
S1158-2-1	53C-52
S1158-2-1	53C-53
S1158-2-1	53C-55
S1158-2-1	53E-49
S1158-2-1	53E-50
S1158-2-1	53E-51
S1158-2-1	54 -17
S1158-2-1	81 -29
S1158-2-1	92 -11
S1159-1-1	53A-37
S1159-1-1	53C-43
S1159-1-1	53E-43
S1159-1-1	54 - 6
S1160-1-1	53A-45
S1160-1-1	53C-51
S1160-1-1	53E-52
S1160-1-1	54 -15
S1160-1-1	54 -16
S1163-2	53A-39
S1163-2	53A-40
S1163-2	53C-45
S1163-2	53C-46
S1163-2	53E-45
S1163-2	53E-46
S1163-2	54 -14
S1164-1	58 - 8
S1166-1	28A-16
S1167-4-0090	39 -30
S1167-4-0090	71 - 2
S1167-4-0100	39 -30
S1167-4-0100	71 - 1
S1167-4-0388	86 - 2
S1167-4-0460	63 -55
S1167-8-0120	82 -41
S1167-8-0120	82A-47
S1167C3-0100	71A-58
S1168-2-36	87 -32
S1168-4-11	86 -12
S1168-6-6 1/2	87 -21
S1168-6-9 1/2	87 -25
S1189-1	61 -13
S1188-1	61 -19
S1188-1	61 -19C
S1194-1-17	44 -12
S1196-1	75 -19
S1209-1	25 -49
S1209-1	25 -55

PART NUMBER	FIGURE AND INDEX NO.
S1209-1	25 -68
S1216-1	53A-30
S1216-1	53C-35
S1216-3	57A-17
S1216-3	57B-18
S1222-13	53A-33
S1222-13	53C-38
S1222-16	53E-40
S1222-16	53G-41
S1222-16	53J-87B
S1222-6	53 -25
S1223-3	53 -24
S1223-6	53A-32
S1223-6	53C-37
S1223-7	53E-39
S1223-7	53G-40
S1223-7	53J-87A
S1230-10	53E-41
S1230-10	53G-42
S1230-10	53J-88
S1230-10	53L-89A
S1230-10	53N-91
S1230-10	53Q-94
S1230-3	53 -26
S1230-3	53A-34
S1230-3	53C-40
S1232-10	54 -11
S1232-10	92 -12
S1232-15	54 -12
S1232-50	54 -10
S1234-2	53 -23
S1234-3	53A-31
S1234-3	53C-36
S1234-5	53E-38
S1234-5	53G-39
S1234-5	53J-87
S1234-5	53L-87A
S1234-5	53N-90A
S1234-5	53Q-93A
S1238-2-1	53B-17
S1238-2-1	53D- 8
S1238-2-1	53E-47
S1238-2-1	53F- 3
S1240-6	53 -19
S1240-6	53A-29
S1240-6	53C-34
S1241-15	53E-36
S1241-15	53G-37
S1241-15	53J-84
S1241-16	53E-35
S1241-16	53G-36
S1241-16	53J-83
S1241-3	53 -21
S1241-3	53A-28
S1241-3	53C-33
S1241-3	70 - 9
S1241-36	53L-85A
S1241-36	53N-89A
S1241-36	53Q-92A
S1241-37	53L-86
S1241-37	53N-89B
S1241-37	53Q-92B
S1241-4	53 -20
S1241-4	53A-27
S1241-4	53C-32
S1241-4	69 -36
S1243-3	52C-20
S1243-6	52C-20
S1244-20	79B-27
S1244-3	67 - 1
S1244-4	67 - 2
S1247-1E	45 -17
S1247-1E	45 -29
S1247-1K	45A-16

PART NUMBER	FIGURE AND INDEX NO.
S1247-1K	45A-24
S1247-1K	45A-28A
S1247-1K	47A- 7
S1247-1K	47B- 7
S1247-1W	45 -25
S1247-1W	47 - 6A
S1249-1	75 -18
S1249-2	75 -18
S1255-6	54 - 7
S1258-1	81 -14
S1264-1-	42 -32
S1268-13	53G-35
S1268-13	53J-82
S1268-14	53L-85
S1268-14	53N-89
S1268-14	53Q-92
S1268-2	53A-26
S1268-2	53C-31
S1268-9	53E-34
S1278-1	91 - 5
S1284-1	53 -31
S1284-1	87 -40
S1286-1	2 -14
S1286-1	82 -29
S1286-1	82A-32
S1286-2	2 -15
S1286-2	82 -29
S1286-2	82A-32
S1290-1	53A-35
S1290-1	54 - 8
S1290-1	84 - 1
S1291-8	48-49
S1291-8	58- 5
S1291-8	59-32
S1301N1	53 -16
S1301N1	53A-21
S1301N1	53C-27
S1301N1	53E-29
S1301N1	53G-30
S1301N1	53J-77
S1301N1	53L-80
S1302N1	53 -36
S1302N1	53A-12
S1305N8	53 -17
S1305N8	53A-22
S1305N8	53C-28
S1305N8	53E-30
S1305N8	53G-31
S1305N8	53J-78
S1305N9	53L-81
S1309N1	53 -30
S1309N1	87 -38
S1311-1	53A-68
S1311-1	53C-73
S1311-1	53E-33
S1311-1	53G-34
S1311-1	53J-81
S1311-1	53L-84
S1311-3	53N-87
S1311-3	53Q-91
S1311N1	53 - 7
S1313N1	53 -35
S1313N1	53A-11
S1314N1	53 -35
S1314N1	53A-11
S1314N1	53E-21
S1314N1	53G-22
S1314N1	53J-68
S1314N1	53L-71
S1316N1	53 -33
S1316N1	87 -36
S1317N1	53A- 9
S1317N1	53C- 9
S1317N1	54 - 9

PART NUMBER	FIGURE AND INDEX NO.
S1317N1	54 - 9
S1317N2	53E-10
S1317N2	53G-11
S1317N2	53J-57
S1317N2	53L-60
S1318-2	53 -18
S1322-1	56 -31
S1324N4	53 -34
S1326N1	53 -30
S1326N1	87 -38
S1327N1	53 -33
S1327N1	87 -36
S1346-1	1 -25
S1346-1	42 -22
S1356	1 -44
S1357-3	56 -66
S1358-1	74 -62A
S1358-1	74A- 9
S1359-1	44 -11
S1359-6	44 -11A
S1359-7	44 -11A
S1360-10	53A-42
S1360-10	53C-49
S1360-10	53E-55
S1360-10	53G-56
S1360-10	53J-95A
S1360-10	53L-96
S1360-10	53N-96
S1360-10	53Q-97C
S1360-10	54 -11
S1360-10	86 - 6
S1360-15	53A-41
S1360-15	53C-50
S1360-15	53E-56
S1360-15	53G-57
S1360-15	53J-96
S1360-15	53L-96B
S1360-15	53N-96B
S1360-15	53Q-98A
S1360-15	54 -12
S1360-20	53A-43
S1360-20	53C-48
S1360-20	53E-54
S1360-20	53G-55
S1360-20	53J-96A
S1360-20	53L-97
S1360-20	53N-97
S1360-20	53Q-98B
S1360-20	54 -12A
S1360-5	53J-95B
S1360-5	53L-96A
S1360-5	53N-96A
S1360-5	53Q-98
S1360-50	53A-44
S1360-50	54 -10
S1360-60	53N-97A
S1360-60	53Q-98C
S1362-5	47A- 8
S1362-6	47A- 8
S1362-6	47B- 8
S1362-6	47C-10
S1363-2	53 -17
S1365-1	87 -40
S1366-1	1 -26
S1366-2	1 -26
S1366-3	1 -26
S1372-1	53 -15
S1372-1	53A-20A
S1372-1	53C-26
S1372-1	53E-28
S1372-1	53G-29
S1372-1	53J-76
S1372-1	53L-79
S1372-1	53N-82

PART NUMBER	FIGURE AND INDEX NO.
S1372-1	53Q-90
S1372-1	63 -65
S1378-1	1 -27
S1378-1	41 -38
S1378-2	1 -27
S1378-2	41 -38
S1384N1	53 -35
S1387N	53 -34
S1389-1	1 -28
S1389-1	28 -11
S1389-1	28A- 7
S1389-12	1 -28
S1389-12	27 - 3
S1389-12	27A- 2
S1389-2	27A- 4
S1389-3	1 -28
S1389-3	27 - 2
S1389-4	1 -28
S1389-5	1 -28
S1389-6	1 -28
S1389-7	1 -28
S1389-7	27A- 3
S1392N1	53 -37
S1392N1	53A-13
S1392N1	53E-22
S1392N1	53L-72
S1392N1	53N-75
S1392N1	53Q-83
S1392N2	53A-13
S1392N2	53C-18
S1392N2	53E-22
S1392N2	53G-23
S1392N2	53J-69
S1392N2	53L-72
S1397-1	2 -22
S1397-4	2 -51
S1397-4	2A-15
S1398-1	1 -29
S1398-1	89B-39
S1398-1	89C-46
S1398-1-	89A-56
S1398-2	1 -30
S1398-2	89B-39
S1398-2	89C-47
S1398-2-	89A-57
S1407-3	55 -15
S1413N1	53 -36
S1413N1	53A-12
S1413N1	53C-17
S1413N1	53E-17
S1413N1	53G-18
S1413N1	53J-58
S1413N1	53L-61
S1413N2	53N-64
S1413N2	53Q-72
S1414-1	53A-25
S1414N1	53 - 9
S1414N1	53C-30
S1414N1	53E-20
S1414N1	53G-21
S1414N1	53J-67
S1414N1	53L-70
S1414N1	87 - 6
S1414N1	88 -15
S1414N1	88A-43
S1414N1	88B-31
S1415-1	1 -31
S1426-1	57 - 2
S1429N1	53 -30
S1429N1	87 -38
S1430-1	45 -27
S1430-1	45A-26
S1430-1	45B-19
S1430-2	45A-26

PART NUMBER	FIGURE AND INDEX NO.
S1431-8-	82 -10
S1431-9-	82 -15
S1433-1	2A-10
S1433-1	92 -14
S1433-2	59A-51
S1438-2	72 - 7
S1438-2	72 -23
S1441-1	1 -32
S1441-1-	44 -25
S1441-1-	41 -26A
S1441-1-	42 -32
S1441-2	1 -32
S1441-2	41A-37
S1441-2	42A-36
S1441-2-6.56	69 - 9
S1441-2-6.56	69A- 9
S1441-3	1 -32
S1443-3	7 -19
S1443-3	7 -21
S1450-1-10-032	79C-45B
S1450-3-10-032	62 -20
S1450-3A14-.050	57A- 7
S1450-3A14-.050	57A- 7A
S1450-3D9-032	39A-57
S1450-3D9-032	39B-61
S1450-4-10-064	52B- 7
S1450-4A11-063	57A- 3
S1450-4A11-063	57B- 3
S1450-5-12-035	33 -19A
S1450-5-14-032	79B-10
S1450-5-14-063	56 -39G
S1450-5A15-050	76B-34
S1450-5A24-040	69A-15G
S1450-5H14-040	95 -12
S1450-5H14-063	95 - 3
S1450-6-14-080	90 -36
S1450-6-14-080	95 -10
S1470N4	53 -34
S1470N4	53A-10
S1470N4	53C-10
S1470N4	53E-11
S1470N4	53G-12
S1473N1	53 -30
S1476N1	53 -33
S1483-2	41 -44
S1483-2	41A-54
S1485D14U	63 -61
S1485D16U	63 -61
S1485D17U	69 -22
S1485D17U	69A-18
S1485D20U	63 -71
S1485D3U	89B-98
S1485D4U	56 -29
S1486DG12U	87 -16
S1486DG3U	62 -41
S1486DG3U	71 - 7
S1486DG3U	82 -12
S1486DG3U	82A-18
S1486DG3U	89 -13
S1486DG4	89C-98B
S1486DG4L	71A-54
S1486DG4U	71A-50
S1486DG52	62 -25
S1486DG6U	56 -28
S1486DG8U	8 -16
S1486DG8U	8 -16
S1486DG8U	56 -27
S1486DG8U	82 - 3
S1486DG8U	82A- 3
S1494-16	88C-34
S1494-6	76B-24
S1494-6	88C-43
S1494-9	76B-20
S1494-9	88C-39

PART NUMBER	FIGURE AND INDEX NO
S1495-10	1 -33
S1495-10	30 -13
S1495-3	1 -33
S1495-3	39A-38
S1495-4	1 -33
S1495-4	88A-11
S1495-4	88A-37
S1495-4	88A-35
S1495-4	88B-19
S1495-4	88C-22
S1495-4	88C-22
S1495-4	88C-25
S1495-4	88C-49
S1495-4	88C-50
S1495-4-	88 -14
S1495-4-	88 -16
S1495-4-	88 -27
S1495-6	1 -33
S1495-6	30 -13
S1495-6	30 -22
S1495-6	76B-12
S1495-6	76B-13
S1495-6	76B-14
S1495-6	76B-15
S1495-6	76B-16
S1495-6	76B-17
S1495-6	82A-15
S1495-6	86 -12
S1495-6	87 -21
S1495-6	87 -25
S1495-6	88A-12
S1495-6	88A-13
S1495-6	88A-14
S1495-6	88A-15
S1495-6	88A-16
S1495-6	88A-17
S1495-6	88A-48
S1495-6	88B-11
S1495-6	88B-12
S1495-6	88B-12
S1495-6	88B-13
S1495-6	88B-13
S1495-6	88B-23
S1495-6	88B-43
S1495-6	88C- 7
S1495-6	88C-10
S1495-6	88C-11
S1495-6	88C-19
S1495-6	88C-41
S1495-6	88C-42
S1495-6	88C-45
S1495-6	88C-46
S1495-6-	87 -29
S1495-6-	88 -18
S1495-6-	88 -24
S1495-6-	88 -26
S1495-6-	88 -28
S1495-6-	88 -30
S1495-6-	88 -32
S1495-6-	88 -34
S1495-6-	88 -42
S1495-7	87 -25
S1495-8	1 -33
S1495-8	8 -13
S1495-8	82 -10
S1495-8	82 -15
S1495-8	82A- 2
S1495-8	82A-17
S1495-8	87 - 8
S1495-8	87 -13
S1495-8	87 -18
S1495-8	88A-54
S1495-8	88A-59
S1495-8	88A-62

PART NUMBER	FIGURE AND INDEX NO
S1495-8	88B-49
S1495-8	88B-54
S1495-8	88B-57
S1495-8-	88 -47
S1495-8-	88 -52
S1495-8-	88 -55
S1496-4	88A-38
S1496-6	88A-10
S1496-6A	88 -43
S1496-6A	88A-40
S1496-6A	88B-44
S1497-4	88 -36
S1497-4	88A-36
S1497-4	88B-33
S1497-4	88B-36
S1497-4	88C-21
S1497-4	88C-26
S1497-4	88C-54
S1497-6	76B-18
S1497-6	86 -12
S1497-6	87 -21
S1497-6	87 -29
S1497-6	88 -37
S1497-6	88A-37
S1497-6	88A-40
S1497-6	88A-50
S1497-6	88B-24
S1497-6	88B-25
S1497-6	88B-45
S1497-6	88C- 9
S1497-6	88C-44
S1498-6	88A-24
S1498-6	88A-25
S1500	2 -70
S1501-1	94 - 4
S1503-1	54 - 8
S1511-1-13.00	39 -11
S1511-1-13.00	39A-11
S1517-2	84A-29
S1520-1	89A-21
S1520-1	89B-56
S1520-1	89C-41
S1524-2	51B-31
S1529-1	89A-11
S1533-1	53A-35
S1533-1	53C-41
S1550-1	61C-14
S1570-8-12	57A-13
S1571-8-10	57A-10
S1571-8-6	57A-14
S1573-3	84A- 4
S1579-1	90 - 2
S1579-2	90 - 2
S1588-1	8 -28
S1590-6	88B-22
S1592-3A	90 - 78
S1596-60	53C-47
S1596-60	53E-53
S1596-60	53G-54
S1596-60	53J-97
S1596-60	53L-97A
S1597-1-30.9	63A-30
S1597-1-30.8	90 -46
S1597-1-30.9	95 -14
S1597-1-31.2	63A-29
S1597-1-31.2	90 -46
S1600	2 -70
S1605-2	53A-22
S1605-2	53C-28
S1605-2	53E-30
S1605-2	53G-31
S1605-2	53J-78
S1605-2	53L-81
S1605-2	53N-84

PART NUMBER	FIGURE AND INDEX NO
S1605-2	510-91C
S1611-1	1 -34
S1613-1-75	41 -46
S1613-1-75	41A-57
S1614	1 -45
S1615-6	88 -11
S1618C1	57A-21
S1618C1	51A-82
S1618D1	57A-21
S1618D1	57A-21
S1618D1	51A-82
S1618D1	51A-82
S1618D1	51B-31
S1618F1	57A-21
S1618F1	51A-82
S1618H1	57A-21
S1618H1	51A-82
S1618J1	57A-21
S1618J1	51A-82
S1618J1	51B-31
S1618K1	57A-21
S1618K1	51A-82
S1618K1	51B-31
S1618M1	57A-21
S1618M1	51A-82
S1618M1	51B-31
S1619C1	51B-31
S1619D1	51B-31
S1619F1	51B-31
S1619H1	51B-31
S1620C1	52C-20
S1620D1	52C-20
S1620D1	52C-20
S1620F1	52C-20
S1620H1	52C-20
S1620J1	52C-20
S1620K1	52C-20
S1620M1	52C-20
S1628-027	38B- 38
S1628-117	38B- 48
S1628-329	35 -22
S1628-329	35A-25
S1635-1	1 -35
S1635-2	1 -35
S1635-2	79 -51
S1635-3	1 -35
S1636-1	1 -36
S1636-2	1 -36
S1636-3	1 -36
S1637-1	1 -37
S1637-1	92A-14A
S1637-2	1 -38
S1637-2	92A-14A
S1638-1	1 -39
S1638-1	92A- 8
S1638-2	1 -40
S1638-2	79 -51
S1638-2	92A-14
S1638-2	92A-14
S1640-12	1 -41
S1640-15	1 -41
S1640-6	1 -41
S1640-9	1 -41
S1641-12	1 -42
S1641-15	1 -42
S1641-6	1 -42
S1641-6	90 -72
S1641-9	1 -42
S1646-1	69 -27
S1648-06K75	9 -32
S1648-06K75	13 -33
S1656-8	2 -48
S1660-1	90 -49
S1661-1	53A-30

PART NUMBER	FIGURE AND INDEX NO.
S1661-1	53C-35
S1668-1	90 -59
S1673-1	90 -17
S1674-1	72 -27
S1675-1	72 -29
S1676-1-8	92A-18
S1691-1	88B-20
S1691-1	88B-21
S1693-1	74B-26
S1693-1	74C-23
S1693-1	79C-49
S1693-2	69A-19
S1693-2	69A-21
S1693-2	69A-22
S1693-2	74B-25
S1693-2	74C-24
S1693-2	82A-14
S1693-2	90 - 7A
S1693-2	90 -45
S1693-2	90 -51A
S1693-6	39B-39
S1695-2	53Q-70
S1702-1	17A-56
S1704-1	51F-79
S1710-1	71A-31A
S1711-1	63 -84
S1713-1	2 -50
S1713-1	2A-14
S1714-1	2 -52
S1714-1	2A-16
S1721-12	89A-78
S1721-12	89B-37
S1721-12	89C-37
S1722	89C-97
S1722	89B-91
S1723-5	89A-79
S1723-5	89B-92
S1723-5	89C-39
S1724-1	89A-80
S1724-1	89B-38
S1724-1	89C-38
S1726-1	41A-53
S1728-1	69A-29
S1741-1	17A-44
S1741-1	29B-63
S1743-2	71A- 2
S1746AA1	52B-41
S1746AA5	52D-17
S1746A1	52B-41
S1746A5	52D-17
S1746B1	52A-21
S1746B1	52B-41
S1746B1	52B-41
S1746B2	49 -52
S1746B5	52D-17
S1746B5	52D-17
S1746B5	52D-17
S1746C1	52B-41
S1746C5	52D-17
S1746D1	52A-21
S1746D2	49 -52
S1746D2	49A-54
S1746D2	51A-82
S1746D5	52C-20
S1746F1	52A-21
S1746F5	52D-17
S1746G1	52A-21
S1746G5	52D-17
S1746H1	52A-21
S1746H5	52D-17
S1746J1	52A-21
S1746J2	49 -52
S1746J2	49A-54
S1746J2	51A-82

PART NUMBER	FIGURE AND INDEX NO.
S1746J5	52C-20
S1746K1	52A-21
S1746K2	49 -52
S1746K2	49A-54
S1746K2	51A-82
S1746K5	52C-20
S1746L1	52B-41
S1746L5	52D-17
S1746M1	52A-21
S1746M2	49 -52
S1746M2	49A-54
S1746M2	51A-82
S1746M5	52C-20
S1746T1	52A-21
S1746T2	49A-54
S1746T2	51D-94
S1746T5	52D-17
S1746U1	52B-41
S1746V1	52A-21
S1746V2	49A-54
S1746V2	51D-94
S1746V5	52D-17
S1746V5	52D-17
S1746W1	52A-21
S1746W1	52A-21
S1746W1	52B-41
S1746W1	52B-41
S1746W2	49A-54
S1746W2	51D-94
S1746W5	52D-17
S1746W5	52D-17
S1746W5	52D-17
S1746Y1	52A-21
S1746Y2	49A-54
S1746Y2	51D-94
S1746Y5	52D-17
S1746Z1	52B-41
S1746Z5	52D-17
S1752-1	53E-42
S1752-1	53G-43
S1752-1	53J-89
S1752-1	54 - 4
S1752-2	53E-37
S1752-2	53G-38
S1753-1	53A-36
S1753-7	53G-46C
S1753-7	53G-47
S1760-1	76B- 3
S1762-1	47D- 4
S1771-2	79B-25
S1771-3	79C-18
S1776-3	17 -47
S1776-3	17A-50
S1776-5	17A-50
S1780-8	69A-15D
S1791-1	76B- 2
S1793-1	76B-22
S1793-2	76B-21
S1794-1	76B-23
S1800-1	76B- 5
S1800-1	76B- 6
S1800-1	76B- 7
S1800-1	76B- 8
S1800-1	76B- 9
S1800-1	76B-10
S1800-1	76B-11
S1800-1	76B-26
S1807-1	90 - 7A
S1807-1	90 -51A
S1809-1	57 - 6
S1810-0800	39 -30
S1810-0800	39A-24
S1810-1000	71A- 1
S1819-3	9 -11

PART NUMBER	FIGURE AND INDEX NO.
S1827-1	35 -15
S1827-1	35A-18
S1831-1	90 - 9A
S1831-1	90 -10
S1934-1	69A-15A
S1943-1	53J-98
S1943-1	53L-95A
S1943-1	53M- 8
S1843-1	53N-95A
S1843-1	53P- 8
S1843-1	53Q-97A
S1843-1	53R- 8
S1844-1-1	53G-44
S1844-1-2	53Q-96B
S1845-1-1	53G-50
S1845-1-1	53G-51
S1845-1-1	53G-52
S1845-1-1	81 -29
S1845-1-2	53J-93A
S1845-1-2	53J-93B
S1845-1-2	53J-94
S1845-1-2	53L-93A
S1845-1-2	53L-94
S1845-1-2	53N-94
S1845-1-2	53N-94A
S1845-1-2	53Q-96A
S1845-2-1	53G-49
S1845-2-2	53J-93
S1845-2-2	53L-93
S1845-2-2	53N-93B
S1845-2-2	53Q-96
S1846-1-1	53G-53
S1846-1-3	53J-95
S1846-1-3	53L-95
S1846-1-3	53N-95
S1846-1-3	53Q-96C
S1846-2-3	53L-94A
S1846-2-3	53N-94B
S1846-2-3	53Q-97
S1847-2-1	53G-48
S1847-2-1	53H- 8
S1847-2-2	53J-92B
S1847-2-2	53K- 8
S1847-2-2	53L-92A
S1847-2-2	53M- 8
S1847-2-2	53N-93A
S1847-2-2	53P- 7
S1847-2-2	53Q-95C
S1847-2-2	53R- 7
S1853-1	61B-50
S1853-1	61C-54
S1853-3	61 -39
S1853-3	61A-37
S1853-3	61B-41
S1853-4	63 -33
S1860-2	3 -45
S1860-2A	5A- 6
S1860-2A	5B- 6
S1860-2A	7 -19
S1860-2A	7 -19
S1860-2A	7 -21
S1860-2A	7 -21
S1860-2A	7A-17
S1860-2A	7A-19
S1860-2A	23 -51
S1860-2A	23A-19
S1862-1	18 -30
S1862-1	25 -54
S1862-1	29 -65
S1862-1	29A-54
S1862-1	29B-59
S1862-1	39B-69
S1862-2	21 -16
S1862-2	21A-18

PART NUMBER	FIGURE AND INDEX NO.
S1862-2	21A-18
S1862-2	21B-21
S1862-2A	14A-44
S1862-2A	21 - 8
S1862-2A	21A- 9
S1863-2	18 -29
S1863-2	24 - 7
S1863-2	39B-70
S1863-3	5B- 3
S1863-3	21 -15
S1863-3	21A-17
S1863-3	21A-17
S1863-3	21B-20
S1863-3	24 - 5
S1863-3A	4 -25
S1863-3A	5 - 4
S1863-3A	5A- 4
S1863-3A	14A-43
S1863-3A	21 - 6
S1863-3A	21A- 6
S1863-3A	21A-27
S1863-3A	21B-35
S1868-3	74B-15
S1876-1	90 - 9A
S1876-1	94 -10
S1878-1	25 -74
S1878-1	29B-64
S1878-1	29B-66
S1878-1	29B-66A
S1878-1	89 -23
S1880-3	53E-46
S1880-3	53G-47
S1880-4	53E-45
S1880-4	53G-46
S1880-6	53G-46A
S1891-10	8 - 9
S1891-10	82 - 6
S1891-10	82 -10
S1891-10	82 -15
S1891-10	82A-16
S1891-10	82A-17
S1891-48	63 -60
S1893-1	90 - 9A
S1894-1	53B-16
S1894-1	53B-22
S1894-1	53C-26
S1894-1	53C-39
S1894-1	53D-11
S1894-1	53D-12
S1894-1	53E-28
S1894-1	53F- 9
S1894-1	53F-10
S1894-1	53G-29
S1894-1	53H- 9
S1894-1	53H-10
S1894-1	53J-76
S1894-1	53K- 9
S1894-1	53K-10
S1894-1	53L-79
S1894-1	53M-13
S1894-1	53N-82
S1894-1	53P-12
S1894-1	53Q-90
S1894-1	53R-12
S1894-1	74B-23
S1894-3	53C-26
S1894-3	53E-28
S1894-3	53G-29
S1894-3	53J-76
S1894-3	53L-79
S1894-3	53N-82
S1894-3	53Q-90
S1895-1	55 -13
S1895-1	55A-19

PART NUMBER	FIGURE AND INDEX NO.
S1898-1	53A- 3
S1898-1	53B- 2
S1898-1	53B- 8
S1898-1	53D- 2
S1898-1	53D- 6
S1898-1	53E- 2
S1898-1	53E- 7
S1898-1	53F- 2
S1898-1	53F- 6
S1898-1	53G- 2
S1898-1	53G- 8
S1898-1	53H- 2
S1898-1	53H- 6
S1898-1	53H- 6
S1898-1	53K- 2
S1898-1	53K- 6
S1898-1	53L-41
S1898-1	53L-50
S1898-1	53M- 2
S1898-1	53M- 6
S1898-2	45B- 8
S1898-3	53J-40
S1898-3	53J-47
S1898-3	53K- 2
S1898-3	53K- 6
S1898-3	53L-41
S1898-3	53L-50
S1898-3	53M- 2
S1898-3	53M- 6
S1899-1	53D- 3
S1899-1	53D- 7
S1899-1	53F- 4
S1899-1	53F- 7
S1899-1	53F-13
S1899-1	53H- 4
S1899-1	53H- 7
S1899-1	53H-13
S1899-1	53K- 4
S1899-1	53K- 7
S1899-1	53K-11
S1899-1	53M- 4
S1899-1	53M- 7
S1899-1	53M-11
S1899-1	53P- 2
S1899-1	53P- 5
S1899-1	53P-10
S1899-1	53R-11
S1899-1G	53K- 4
S1899-1G	53K- 7
S1899-1G	53M- 4
S1899-1G	53M- 7
S1899-1G	53P- 2
S1899-1G	53P- 5
S1899-1G	53R- 2
S1899-1G	53R- 5
S1899-2	53D- 4
S1899-2	53D-10
S1899-2	53F- 3
S1899-2	53F-12
S1899-2	53H- 3
S1899-2	53H-12
S1899-2	53K- 3
S1899-2	53K-12
S1899-2	53M- 3
S1899-2	53M-12
S1899-2	53P-11
S1899-2	53R-10
S1899-2G	53K- 3
S1899-2G	53M- 3
S1899-5	53B- 3
S1899-5	53B- 9
S1899-5	53B-12
S1899-5	89B-24
S1899-5	91A- 7A

PART NUMBER	FIGURE AND INDEX NO.
S1899-6	53B- 4
S1899-6	89B-24
S1899-6	91A- 7B
S1901-1	90A-15
S1901-1	90A-20
S1901-1	90A-20
S1901-1	90A-20
S1904-3	53J-90
S1904-3	53L-90
S1904-3	53N-92
S1904-3	53Q-94C
S1906-1	79C-11
S1910-1	90A-10
S1910-2	90A-17
S1910-2	90A-17
S1910-2	90A-17
S1912-1	79 -68
S1912-1	79 -73
S1913-1	79B-17
S1914-8	49 - 9
S1914-8	49 -35
S1914-8	49A- 7
S1914-8	49A-35
S1914-8	49B- 7
S1914-8	49B-34
S1914-8	49C- 7
S1914-8	49C-34
S1914-8	51A- 9
S1914-8	51A-73
S1914-8	51B- 7
S1914-8	51C-20
S1914-8	51D-92
S1914-8	51E-96
S1914-8	51F-82
S1915-1	90 -42
S1917-1	90 -64A
S1929-1	21 -27
S1929-1	21A-28
S1929-1	21B-19
S1929-1	67 -22
S1931-8	44 -11D
S1935-3	53G-46B
S1941-1	53C-26
S1941-1	53D-12
S1941-1	53E-28
S1941-1	53F- 9
S1941-1	53G-29
S1941-1	53H- 9
S1941-1	53J-76
S1941-1	53K- 9
S1941-1	53L-79
S1941-1	53M-13
S1941-1	53N-82
S1941-1	53P-12
S1941-1	53Q-90
S1941-1	53R-12
S1948-1	45A-24
S1948-1	45A-28A
S1948-2	45A-16
S1948-2	47B- 7
S1948-2	45B-21
S1948-2-1	1 -47
S1948-2-1	46 -14
S1948-2-10	1 -47
S1948-2-11	1 -47
S1948-2-12	1 -47
S1948-2-13	1 -47
S1948-2-2	1 -47
S1948-2-3	1 -47
S1948-2-4	1 -47
S1948-2-5	1 -47
S1948-2-6	1 -47
S1948-2-7	1 -47
S1948-2-8	1 -47

PART NUMBER	FIGURE AND INDEX NO.
S1948-2-9	1 -47
S1950-1-E	47D-14
S1950-1-E	47D-16
S1953-1	89B-22
S1953-1	89C-21
S1953-3	89B-21
S1953-3	89C-20
S1957-1	47C-14
S1957-2	47 -12
S1957-2	47C-14
S1957-2	47D-22
S1957-2	49 -46
S1957-2	49A-53
S1957-2	51A-75
S1957-2	51B-29
S1957-2	51D-11
S1959-1	74B-19
S1963-2	88C-53
S1964-3	63 -90
S1972-2	90A- 4
S1974-1	53L-89
S1974-1	53N-91B
S1974-1	53Q-94B
S1980-1	53J-90
S1980-1	53L-90
S1980-1	53N-92
S1980-1	53Q-94C
S1981-5	81 -51
S1982-1	53J-85
S1982-1	53L-86A
S1982-1	53N-89C
S1982-1	53Q-92C
S1985-1	74B-10
S1985-1	74C-15
S1988-1	87 -26
S1988-1	88 -38
S1988-1	88A-44
S1988-1	88B-39
S1991-1	90 -17A
S1994-1-1	53J-92A
S1994-1-1	53L-92
S1994-1-1	53N-93
S1994-1-1	53Q-95B
S1995-1	53J-91
S1995-4	53L-90A
S1995-4	53N-92A
S1995-4	53Q-95
S2008-1	53J-91
S2013-2	51D-35A
S2013-2	51D-67A
S2013-2	51E-34
S2013-2	51E-67
S2013-2	51F-35
S2013-2	51F-60
S2014-2	51D-35A
S2014-2	51D-67A
S2014-2	51E-34
S2014-2	51E-67
S2014-2	51F-35
S2014-2	51F-60
S202	63 -76
S202	63 -77
S202	63 -81
S202RB	1 -16
S202RB	3 -61
S202RB	14 -40
S202RB	66 -54
S202R1750B	14A-55
S202VW	1 -16
S202VW	68A- 7
S2023-1	53R- 8
S2024-1	69 -10
S2024-1	69A-10
S2029-1	56 - 1

PART NUMBER	FIGURE AND INDEX NO.
S2034-1	30 - 3
S2037-1	89B- 2
S2037-1	89C- 3
S2070AA103	49C-51
S2070AA103	51F-92
S2070AA107	52B-41
S2070AA201	56 -49
S2070A103	49B-52
S2070A103	51E-98
S2070A107	52B-41
S2070A201	56 -49
S2070B103	49A-54
S2070B103	49B-52
S2070B103	49C-51
S2070B103	51D-94
S2070B103	51E-98
S2070B103	51F-92
S2070B107	52A-21
S2070B107	52B-41
S2070B107	52B-41
S2070B201	56 -49
S2070C103	49B-52
S2070C103	51E-98
S2070C107	52B-41
S2070C201	56 -49
S2070F103	49A-54
S2070F103	51D-94
S2070F107	52A-21
S2070F201	56 -49
S2070G103	49A-54
S2070G103	51D-94
S2070G107	52A-21
S2070G201	56 -49
S2070H103	49A-54
S2070H103	51D-94
S2070H107	52A-21
S2070H201	56 -49
S2070L103	49B-52
S2070L103	51E-98
S2070L107	52B-41
S2070L201	56 -49
S2070U103	49C-51
S2070U107	52B-41
S2070U201	56 -49
S2070V103	51F-92
S2070W103	49A-54
S2070W103	49B-52
S2070W103	49C-51
S2070W103	51D-94
S2070W103	51E-98
S2070W103	51F-92
S2070W107	52A-21
S2070W107	52B-41
S2070W107	52B-41
S2070W201	56 -49
S2070W201	56 -49
S2070Z103	49C-51
S2070Z103	51F-92
S2070Z107	52B-41
S2070Z201	56 -49
S2071-1	81 -48
S2074-1	56 -51
S2076-1	56 -53
S2077-5	55A- 9
S2081-1	56 -54
S2081-2	56 -56
S2083-1	79C-42
S2091-1	53L-90A
S2091-1	53N-92A
S2091-1	53Q-95
S2092-1	45B-17
S2092-2	45B-17
S2092-3	1 -49
S2092-3	45B-17

PART NUMBER	FIGURE AND INDEX NO.
S2092-4	1 -50
S2092-4	45B-17
S2093-1	74C-20
S2093-2	90 -41
S2095-1	79B-27
S21021	8A- 2
S2106-1	8A- 1
S2108-1	41 -38
S2108-1	41A-49
S2114-1	90 -41
S2114-2	90 -41
S2135-1	53N-88
S2135-1	53Q-90A
S2155-1	21B-12
S2163-1	53Q-19
S2163-1	53Q-24
S2163-1	53Q-42
S2163-2	53Q-20
S2163-3	53Q-21
S2163-3	53Q-43
S2178-3-0074	71A-60
S2178C3-0083	71A-59
S2191-8-4	33 -35
S225-1	3 -16
S225-1	3 -17
S225-1	17 -26
S225-1	17A-26
S225-1	25 -18
S225-1	25 -58
S225-1	25 -73
S225-1	29 -66
S225-1	29B-64
S225-1	29B-66
S225-2	3 -12
S225-2	3 -13
S225-3	10 -28
S225-3	17 -51
S225-3	17A-52
S225-4	3 -18
S225-4	3 -18
S225-4F	3 -13
S225-5	29 -61
S225-5	29A-52
S225-5	29B-57
S225-7	25 -60
S225-7	25 -69
S225-7	29B-66A
S226-2	5 -14
S226-2	5 -17
S226-2	5A-24
S226-2	5A-29
S226-2	5B-14
S226-2	5B-19
S226-2	7 -23
S226-2	7 -23
S226-2	7A-23
S226-3	25 -18
S226-5	7 -24
S237-2	7 -22
S237-2	7 -22
S237-2	7 -22A
S237-2	7A-21
S237-2	7A-22
S237-4	10 -27
S272-17	86 -32
S290D1032	69A-15C
S290D832	3 -54
S290D832	3 -57
S292-1	1 -17
S292-11	1 -17
S292-12	1 -17
S292-14	1 -17
S292-14	82A-11B
S292-14	89 -25

PART NUMBER	FIGURE AND INDEX NO.
S292-14	89B-88
S292-14	89C-96
S292-16	1 -17
S292-2	1 -17
S292-28	1 -17
S292-3	1 -17
S292-4	1 -17
S292-5	1 -17
S292-5-5	71A-14
S292-6	1 -17
S292-8	1 -17
S347-1	17 -47
S350	27 - 7
S351	62 -29
S352	22 -11
S354-1	22 -14
S354-3	82A-42
S354-5	22 -23
S355	53 -52
S378-1	78 -18
S378-1	79C-27
S378-1	79C-32
S378-1L	71 -34
S378-1L	71A-35
S378-1L	76B-44
S378-1L	78 -18A
S378-2	78 -30
S378-2	79 -17
S378-3L	77 -39
S378-3L	80 -17
S378-4	76 -21
S378-4	76 -34
S378-4	76A-33
S378-4	77 -35
S378-4	80 -11
S378-4	80 -22
S394	76 -44
S394	76A-44
S394	79 -23
S430-1	81 -34
S5A200	61B-23
S500-1	79 -55
S51-10	1 -15
S51-10	88C-33
S51-12	1 -15
S51-12	63 -12
S51-16	1 -15
S51-32	1 -15
S51-4	1 -15
S51-6	1 -15
S51-8	1 -15
S51-8	87 - 8
S51-8	87 -13
S51-8	87 -18
S51-8-10	82A-14
S51-8-8	82 - 2
S5508	90 -44
T-5/8	47 - 8
TA732042	63 -64
TRA-2233	74A- 7
TRA2233	74 -60
TVA-1315	53G-18
TVA-1315	76B- 1
TVA1315	53J-58
TVA1315	53L-61
V3L-3-D9	79 -52B
WL98293-3-.360	63 -32
WRM-10	92 - 5
WRM-15	92 - 3
WRM-20	92 - 8
WRM-25	92 - 4
WRM-30	92 - 6
WRM-44-12	92 - 7
XE49330	29 -66

PART NUMBER	FIGURE AND INDEX NO.
XH99608F1099	47A-15
XX49265K2215	47A-19
XX49265K2215	47B-15
XX49265K2215	47B-19
XX49319K1110	53 - 2
XX49330K2215	89 -23
XX49804K2215	53 - 6
X26263	90 -58
X730-4	89A-76
ZF604	89A- 4A
ZF604	89B-67
ZF604	89C-70
ZH716	89A-76
ZH716	89B-44
ZH716	89B-49
ZH716	89C-54
ZH716	89C-59
ZH727-14	89A-73
ZH727-14	89B-50
ZH727-14	89C-60
ZH727-8	89A-67
ZH727-8	89B-45
ZH727-8	89C-55
ZR-075-11.5	92A-23
Z651-1	89A-32
Z651-1	89B-35
Z651-1	89C-34
Z651-13	89A-33
Z651-13	89B-32
Z651-13	89C-31
Z651-3	89A-31
Z651-3	89B-34
Z651-3	89C-33
Z730-4	89B-49
Z730-4	89C-59
Z730-7	89A-75
Z730-7	89B-52
Z730-7	89C-62
Z736	89A-71
Z736	89B-48
Z736	89C-58
0-470-R	63 - 1
0-470-R	63 - 1
0R95-1.5	92A-23
0105-351	54 -13
0310196-15	51 -34
0310196-16	48 -22
0310293-14	78 -22
0310293-2	78 -22
0310453-0-270	72 - 1
0310453-5	72 - 2
0310453-6	72 - 3
0311018-11	63 -17
0311310	48 -24
0311310	51 -35
0311319-1	44 -19
0311319-2	44 -19
0311538-10	54 - 4
0311538-12	53C-42
0311586	48 -25
0311586	51 -37
0311623-1	44 -23
0311623-1	47 -21
0311623-1	47A-22
0311623-1	47B-22
0311623-1	47C-25
0311623-1	47D-38
0311644	48 -16
0311644	51 -10
0312155-10	90 -27
0313313-3	55 -17
0320105	8 -24
0322526-6	8 -20
0322526-7	8 -20

PART NUMBER	FIGURE AND INDEX NO.
0332136-6	14 -45
0332136-6	14A-58
0400135-1	2 -46
0400213-6	2A-74
040437	53Q-86
0405015-2	2A-49
0405020-1	2A-68
0409007-2	79 -58B
0411030-4	53C-78
0411030-4	53E-71
0411030-5	47 - 3
0411030-5	47A- 3
0411030-5	47B- 3
0411030-5	47C- 3
0411030-6	47 - 4
0411030-6	47A- 4
0411030-6	47B- 4
0411030-6	47C- 4
0411047-2	74 -28
0411047-2	74 -45
0411059-3	53 -50
0411129	18 - 6
0411174-3	23A-20
0411185-7	41 -32
0411185-9	41A-44
0411307	72 -15
0411320	19 - 9
0411369-2	72 - 4
0411420	75 - 6
0411491	78 -15
0411523	78 -10
0411524	78 -11
0411549	72 -10
0411550	72 -11
0411562	72 -25
0411563	72 -24
0411564	72 -18
0411573-1	72 -25
0411680	23 -16
0411680	23 -50
0411680	23A-18
0411680	23A-37
0411778-2	72 - 8
0411778-2	72 -23
0411783	71A-31B
0411851	41 - 9
0411851	41A-11
0411851	42 - 7
0411875-9	66 -43
0412007-1	90 - 5
0412147	30 - 6
0412151-1	30 - 7
0412151-1	30 -12
0412151-2	30 -10
0412151-3	30 -11
0412151-4	30 - 8
0412151-5	30 - 5
0412467	23A-51
0412467	25 -11
0412467	29 -12
0412467	31 -24
0412467	31A-25
0412470	30 - 9
0412471-3	30 -13
0412496	18 -10
0413157	5 - 5
0413157	5A- 7
0413163-11	69 - 8
0413163-11	69A- 8
0413163-18	69 - 7
0413163-18	69A- 7
0413163-200	69 - 3
0413163-200	69A- 3
0413163-203	69A- 3

PART NUMBER	FIGURE AND INDEX NO.
0413163-204	69A- 3
0413163-27	69 - 5
0413163-27	69A- 5
0413163-28	69 - 5
0413163-28	69A- 5
0413163-31	69 - 3
0413163-31	69A- 3
0413163-7	69 - 6
0413163-7	69A- 6
0413195-5	43 -11
0413195-5	43A-26
0413205-11	63A-31
0413205-11	90 -19
0413216	74 -80
0413216-2	74 -82
0413216-4	74 -81
0413216-5	74 -83
0413228	69 -13
0413228	69A-13
0413228	69A-15F
0413247	8 -30
0413247	53 -51
0413247	53A-59
0413247	53C-67
0413279	30 -14
0413307-13	30 -20
0413317	41 - 7
0413317	41A- 9
0413317	42 - 7
0413317-	42A- 9
0413317-1	41 - 7
0413317-1	42 - 7
0413323-5	41 - 8
0413323-7	44 - 9
0413347-1	69 -15
0413347-1	69A-15
0413517-1	57B- 6
0413517-15	57B-13
0413517-3	57B- 8
0413517-5	57B- 9
0414014-1	23A-21
0414014-2	23A-22
0422229-11	6 -19
0422229-11	6A-22
0422229-12	24 -14
0422229-13	24 -14
0422229-3	6 -19
0422280	76 - 4
0422280	76 -10
0422280	76A- 3
0422280	76A- 9
0422280	76B-40E
0422291	5A- 5
0422291	5B- 4
0422292	5 -11
0422292	5A-14
0422292	5A-19
0422344	31 - 7
0422344	31A- 5
0422358-6	76B-37
0422358-9	76B-40A
0423007-1	3 -37
0423008-4	3 -31
0423008-5	3 -31
0423008-8	3 -31
0423008-9	3 -31
0423542-6	3 -22
0423564-1	3 -37
0423564-2	3 -37
0431017-2	92A-11
0432126	78 -23
0432134-1	75 -25
0432138-10	78 - 9
0432138-11	78 - 8

PART NUMBER	FIGURE AND INDEX NO.
0432138-6	78 - 8
0432138-7	78 - 9
0433006-7	32 - 3
0441130-2	39 -52
0441130-2	39A-43
0441130-3	39 -51
0441130-4	39 -51
0441139-5	39 -17
0441139-5	39A-17
0441139-5	39B-26
0441139-6	39 -17
0441139-6	39A-17
0441139-6	39B-26
0441141-3	39 -18
0441141-4	39 -18
0441156-16	37A-
0442506-1	35A-32A
0442506-12	35 -29A
0442506-2	35 -37A
0442506-2	35A-41A
0442506-6	35 -36A
0442506-7	35 -29A
0442506-8	35A-40A
0442506-9	35 -36C
0442506-9	35A-40C
0450191-1	62 -23
0450234-24	66 -60
0450277-2	66 -47
0450277-3	66 -46
0450286	69 -40
0450286-1	17 -57
0450286-1	17A-59
0450311	70 -41
0450311	89B-25
0450311-3	84A-25
0450311-4	62 -39
0450311-5	62 -14
0450311-5	69 -37
0450311-5	69A-42
0450311-5	70 -10
0450311-5	89A-58
0450311-5	89C-23
0450314	5 - 6
0450314	5A- 8
0450314	5B- 8
0450314	69 - 1
0450314	69A- 1
0500010-4	45 -28
0500010-4	45A-27
0500085-1	2 - 8
0500085-2	2 - 7
0500104-89	48 - 9
0500105-133	85 -16
0500106-164	63 -11
0500106-170	63 -42
0500106-173	85 - 7
0500106-196	63 -37
0500106-197	63 -38
0500106-220	86 -15
0500120-2	56 -35
0500125-1	2 -44
0500125-10	2 -26
0500125-2	2 -24
0500125-29	2 -33
0500125-9	2 -25
0500130-1	2 -21
0500130-1	90 -31
0500210-155	49B-11
0500210-47	45A-29
0500228-2	56 -39A
0500228-3	56 -39H
0500228-5	56 -39F
0500236-1	47A-33
0500236-1	47B-30

PART NUMBER	FIGURE AND INDEX NO.
0500248-1	2 -36
0500310-1	57A- 4
0500312-2	57A- 1
0500312-2	57B- 1
0500313-1	57A- 2
0500313-1	57B- 2
0501019-1	56 -33
0501022-1	56 -64
0505005-2	2A-29
0505007-1	2A- 2
0505007-1	47B-16
0505009-2	2A- 7
0505009-2	68A-12
0505009-3	2A-58
0505015-1	2A-30
0505015-2	2A-30
0505020-2	2A-34
0505020-2	53J-99
0505020-2	53L-98
0505020-3	2A-57
0505020-3	53N-98
0510105-113	76 - 8
0510105-113	76A- 7
0510105-13	76 - 8
0510105-13	76A- 7
0510105-177	80 - 1
0510105-178	80 - 2
0510105-186	78 - 1
0510105-187	78 - 6
0510105-188	77 -26
0510105-189	77 - 2
0510105-190	77 - 1
0510105-191	79 - 2
0510105-192	79 - 7
0510105-193	79 - 1
0510105-194	79 - 6
0510105-195	76 - 1
0510105-197	78 - 2
0510105-198	78 - 7
0510105-201	78 - 2
0510105-202	78 - 1
0510105-228	76A- 1
0510105-231	79C-36
0510105-233	71A-29
0510105-301	78 - 2
0510105-302	78 - 1
0510105-328	76A- 1
0510105-77	80 - 1
0510105-78	80 - 2
0510105-85	71 -28
0510105-85	71A-29
0510105-86	78 - 1
0510105-87	78 - 6
0510105-88	77 -26
0510105-89	77 - 2
0510105-90	77 - 1
0510105-91	79 - 2
0510105-92	79 - 7
0510105-93	79 - 1
0510105-94	79 - 6
0510105-95	76 - 1
0510105-97	78 - 2
0510105-98	78 - 7
0510111-11	77 -23
0510146-3	31 -32
0510146-3	31A-36
0510146-8	31 -28
0510146-8	31A-32
0510195-1	79 -40
0510205-1	48 -29
0510205-1	49 -56
0510205-1	49A-58
0510205-1	50 - 3
0510205-1	51A-86

PART NUMBER	FIGURE AND INDEX NO.
0510205-1	51B-35
0510205-2	48 -28
0510205-2	49 -56
0510205-2	49A-58
0510205-2	50 - 4
0510205-2	51A-86
0510205-2	51B-35
0510205-5	16 -18
0510205-5	49B-57
0510205-5	49C-56
0510205-5	51E-98B
0510205-5	51F-97
0510205-6	16 -17
0510205-6	49B-57
0510205-6	49C-56
0510205-6	51E-98B
0510205-6	51F-97
0511000-63	27 -10
0511049	52 -11
0511049-1	52 -11
0511062-10	55 -15
0511062-10	90 -15
0511062-4	3 -20
0511062-5	3 -20
0511130-1	45 -12
0511130-1	45A-11
0511130-2	45A-11
0511165	56 -11
0511189-1	41 - 6
0511189-1	41A- 8
0511189-1	42 - 6
0511189-1	42A- 6
0511189-2	41 - 5
0511189-2	42 - 5
0511198	82 -28
0511198	82A-31
0511199-20	81 -35
0511199-23	83 -
0511229-2	47 - 7
0511232-3	56 - 2
0511242	51B- 1
0511242-1	51D- 1
0511797-1	23A-24
0511797-2	23A-24
0512006-1	8 -14
0512123	3 - 7
0512123-1	3 - 6
0512136	76 -49
0512136	76A-49
0512136	79 -28
0512137	24 -11
0512138	76 -48
0512138	76A-48
0512138	79 -25
0512160-2	23A-52
0512160-2	29 -13
0512166-3	2 - 3
0512166-3	47A-16
0512166-3	47B-16
0512167-10	30 -17
0512167-17	30 -18
0512167-27	30 -19
0512167-29	30 -16
0512167-30	30 -15
0513039-7	53 -19
0513039-7	53A-29
0513039-7	53C-34
0513039-7	53E-37
0513039-7	53G-38
0513039-7	53J-85
0513039-7	53L-86A
0513052-17	53N-89C
0513052-17	53Q-92C
0513166-1	74 -79

PART NUMBER		FIGURE AND INDEX NO.
0513167-14		74 -76
0513167-15		74 -76
0513208-1		93 - 7
0513208-3		91A-14
0513420-3		69A-26
0513425-1		47C- 9
0513425-1		47D-12
0514010-1		51F-17
0514010-2		51F-17
0514017-1	¤	51D-20
0514017-2	¤	51D-20
0514017-3	¤	51D-19
0514017-3	¤	51E-20
0514017-3	¤	51F-18
0514018-1	¤	51D- 8
0514018-15	¤	51D- 8
0514018-3	¤	51D-10
0514019-1		51E- 8
0514024-1		51D-40
0514024-1		51E-42
0514024-2		51D-40
0514024-2		51E-42
0514026-11		51D-22
0514026-11		51E-23
0514026-2		51D-43
0514026-2		51E-45
0514026-2		51F-40
0514026-4		51D-50
0514026-4		51E-52
0514026-4		51F-50
0514027-1		51D-67
0514027-2		51D-35
0514027-21		51F-61
0514027-5		51E-70
0514027-5		51D-67
0514027-6		51D-35
0514027-9		51E-37
0514028-10		51D-26
0514028-15		51E-27
0514028-16		51E-27
0514028-5		51D-47
0514028-5		51D-55
0514028-5		51E-49
0514028-5		51E-57
0514028-5		51F-44
0514028-6		51D-46
0514028-6		51E-48
0514028-6		51F-43
0514029-2		51D- 3
0514029-2		51E- 3
0514029-2		51F- 3
0514030-4		51D-23
0514030-4		51E-24
0514030-4		51F-21
0514032-1		51D-57
0514032-1		51E-59
0514032-1		51F-51
0514033-1		51D-30
0514033-1		51D-62
0514033-1		51E-31
0514033-1		51E-64
0514033-1		51F-30
0514033-2		51F-57
0514034-1		51D-44
0514034-1		51E-46
0514034-1		51F-41
0514035-1		51D-41
0514035-1		51E-43
0514035-17		51F-38
0514035-18		51F-39
0514035-2		51D-42
0514035-2		51E-44
0514036-1		51D-28
0514036-1		51E-29

PART NUMBER		FIGURE AND INDEX NO.
0514036-1		51F-28
0514037-1		51D-69
0514037-1		51E-72
0514042-1		52D- 1
0514043-1		49A-52
0514043-1		49B-51
0514043-1		49C-49
0514047-1		51D-75
0514047-1		51E-78
0514047-9		51D-75
0514047-9		51E-78
0514048-10	#	49A-63
0514048-10	#	49B-60
0514048-10	#	49C-59
0514048-10	#	51D-94
0514048-10	#	51E-97A
0514048-10	#	51F-91
0514048-10	#	52A-44
0514048-10	#	52B-40
0514048-2	#	49A-62
0514048-2	#	49B-59
0514048-2	#	49C-58
0514048-2	#	51D-93
0514048-2	#	51E-97
0514048-2	#	51F-90
0514048-2	#	52A-42
0514048-2	#	52B-39
0514051-1		51F-37
0514051-2		51F-37
0514052-1		49C-35
0514055-1	¤	49A-13
0514055-11	¤	49A-13
0514058-1		49A-18
0514058-1	¤	49B-18
0514058-1	¤	49C-18
0514060-5		51D-25
0514060-5		51E-26
0514060-5		51F-27
0514064-1		45B- 9
0514066-1		49C-37
0514067-2		45B- 8
0514075-2		49B-17
0514075-2		49C-17
0514075-2		51F-16
0514076-1	¤	49B-13
0514076-1	¤	49C-13
0514076-2	¤	51E- 9
0514077-3		51E-18
0514077-4	¤	51E-21
0514077-7	¤	51E-21
0514078-5		46 - 4
0514079-1		47C-14
0514079-1	#	47D-20
0514079-2		47C-14
0514079-2	#	47D-21
0514083-1	¤	51F- 8
0514089-1		51F-36
0514090-4		51F-75
0514101-1		51D-18
0514101-1		51E-19
0514101-2		51D-18
0514101-2		51E-19
0515001-11	#	51D-17
0515001-2	#	51D-
0515001-202	#	51D- 1
0515001-203	#	51D-11
0515001-209	#	51D-11
0515001-21	#	51D-
0515001-210	#	51D-11
0515001-211	#	51D- 1
0515001-213	#	51D-11
0515001-23	#	51D-
0515001-24	#	51D-
0515001-35	#	51D-17

PART NUMBER	FIGURE AND INDEX NO.
0515001-39 #	51D- 7
0515001-8 #	51D- 7
0515002-1	52D-
0515002-10	52D-16
0515002-11	52D-
0515002-4 #	52D-13
0515002-6 #	52D-15
0515002-9	52D-14
0517003-2	43A- 18
0517006-2	41A- 5
0517006-2	42A- 5
0520005-3	3 -55
0522629	9 - 3
0522629	76 -42
0522629	79 -47
0522629-1	76A-42
0522629-1	79 -31
0523003-40	7 -15
0523003-40	7A-13
0523005-50	6 -24
0523005-50	6A-28
0523005-51	6 -24
0523005-51	6A-28
0523106-4	5 -24
0523106-4	5A-36
0523107	5 - 7
0523107	5A-10
0523118-1	3 -21
0523215	6 -30
0523215	6A-34
0523215-1	6 -30
0523215-1	6A-34
0523216	6 -29
0523216	6A-33
0523218	9 - 8
0523219-2	4 -39
0523219-2	4A-40
0523219-2	4B-39
0523219-3	4 -39
0523219-3	4A-40
0523219-3	4B-39
0523219-4	4 -39
0523219-5	4 -39
0523219-6	4A-40
0523219-6	4B-39
0523219-7	4A-40
0523219-7	4B-39
0523221	9 - 4
0523221	76 -40
0523222	9 - 5
0523222	76 -41
0523222	76A-41
0523230	4 -32
0523230	4A-33
0523230	4B-32
0523230-1	4 -32
0523230-1	4A-33
0523230-1	4B-32
0523230-4	4 -32
0523230-4	4A-33
0523230-4	4B-32
0523230-5	4 -32
0523230-5	4A-33
0523230-5	4B-32
0523232-2	4 -27
0523232-2	4A-26
0523232-2	4B-26
0523233-10	4 -30
0523233-14	4 -30
0523233-14	4A-29
0523233-20	4A-30
0523233-20	4B-29
0523233-3	4 -31B
0523233-3	4A-32

PART NUMBER	FIGURE AND INDEX NO.
0523233-3	4B-31
0523233-6	4 -29
0523233-6	4 -29
0523233-6	4A-29
0523233-6	4B-29
0523233-7	4 -31A
0523233-7	4A-31
0523233-7	4B-30
0523306	6 -11
0523306	6A-13
0523307	11 - 5
0523308	6 - 5
0523308	6A- 6
0523309	6 - 2
0523309	6A- 2
0523309-1	6 - 2
0523309-1	6A- 2
0523315	6 - 6
0523315	6A- 7
0523315-1	6 - 6
0523315-1	6A- 7
0523316	6 - 9
0523316-1	6 - 9
0523321	76A-40
0523321-3	6 -10
0523321-4	6 -10
0523400-111	6A-21
0523400-112	6A-21
0523400-20	6 -22
0523400-20	6A-26
0523400-200	6 -18
0523400-201	6 -18
0523400-21	6 -22
0523400-21	6A-26
0523400-74	6 -18
0523400-75	6 -18
0523400-82	6 -18
0523400-83	6 -18
0523400-86	6 -23
0523400-87	6 -23
0523400-92	6 -18
0523400-93	6 -18
0523400-96	6A-27
0523400-97	6A-27
0523406	6 -24
0523406-1	6 -24
0523406-2	6 -24
0523406-2	6A-28
0523406-3	6 -24
0523406-3	6A-28
0523407	4 -38
0523407	4A-39
0523407	4B-38
0523407-1	4 -37
0523407-1	4A-38
0523407-1	4B-37
0523409	6 -21
0523409-1	6 -20
0523409-1	6A-24
0523409-2	6 -21
0523409-2	6A-25
0523509-2	4A-16
0523509-5	4A-16
0523510-6	4 -18
0523510-6	4A-17
0523510-7	4 -18
0523510-7	4A-17
0523511-16	4A-18
0523511-4	4 -33
0523511-4	4A-34
0523511-4	4B-33
0523511-6	4 -20
0523511-6	4A-19
0523511-6	4B-19

PART NUMBER	FIGURE AND INDEX NO.
0523511-7	4 -19
0523512-14	4 -21
0523512-24	4A-20
0523512-25	4A-20
0523512-4	4 -34
0523512-4	4A-35
0523512-4	4B-34
0523512-8	4 -21
0523513-10	4 -22
0523513-15	4A-21
0523513-16	4A-21
0523513-9	4 -22
0523536	79 -31
0523536	79 -47
0523537	10 - 1
0523537	79 -33
0523541-43	7 - 3
0523541-43	7A- 2
0523541-44	7 - 3
0523541-44	7A- 2
0523541-45	7 - 4
0523541-45	7 - 8
0523541-45	7A- 3
0523541-45	7A- 6
0523541-46	7 - 4
0523541-46	7 - 8
0523541-46	7A- 3
0523541-46	7A- 6
0523541-47	7 - 5
0523541-47	7A- 4
0523541-48	7 - 9
0523541-48	7A- 7
0523541-49	7 -10
0523541-49	7A- 8
0523541-50	7 -10
0523541-50	7A- 8
0523541-51	7 - 3
0523541-51	7A- 2
0523541-52	7 - 3
0523541-52	7A- 2
0523541-53	7 - 4
0523541-53	7 - 8
0523541-53	7A- 3
0523541-53	7A- 6
0523541-54	7 - 4
0523541-54	7 - 8
0523541-54	7A- 3
0523541-54	7A- 6
0523541-55	7 - 9
0523541-55	7A- 7
0523541-56	7 - 5
0523541-56	7A- 4
0523541-57	7 -10
0523541-57	7A- 8
0523541-58	7 -10
0523541-58	7A- 8
0523541-59	7 - 5
0523541-59	7A- 4
0523541-60	7 - 9
0523541-60	7A- 7
0523541-61	5 -19
0523541-61	5A-31
0523541-62	5 -20
0523541-62	5A-32
0523541-63	5 -21
0523541-63	5A-33
0523565-200	3 -31
0523565-201	3 -31
0523565-21	3 -31
0523565-22	3 -31
0523565-29	3 -31
0523565-30	3 -31
0523566-1	3 -49
0523566-2	3 -49

PART NUMBER	FIGURE AND INDEX NO.
0523566-5	3 -49
0523566-6	3 -49
0523614-1	11 - 7
0523615-1	11 -11
0523616-1	11 -15
0523702-3	3 -39
0523702-4	3 -39
0523800-10	9 -24
0523800-11	9 -24
0523800-12	9 -25
0523800-13	9 -25
0523800-16	9 -12
0523800-17	9 -12
0523800-24	9 -12
0523800-25	9 -12
0523800-6	9 -22
0523800-7	9 -22
0523800-8	9 -23
0523800-9	9 -23
0523806	9 -13
0523806-1	9 -13
0523807	9 -30
0523808	9 -14
0523808-2	9 -14
0523809	9 -15
0523809-1	9 -15
0523810	9 -16
0523811	9 -17
0523811-1	9 -17
0523813-1	9 -26
0523813-2	6 -26
0523813-2	6A-30
0523813-3	6 -25
0523813-3	6A-29
0523813-4	6 -27
0523813-4	6A-31
0523813-5	6 -28
0523813-5	6A-32
0523813-6	9 -28
0523813-7	9 -29
0523813-8	9 -27
0523814-5	9 -20
0523814-8	9 -20
0523901-10	10 -31
0523901-13	10 -17
0523901-14	10 -18
0523901-15	10 - 6
0523901-16	10 - 6
0523901-17	10 -22
0523901-18	10 -22
0523901-19	10 -24
0523901-20	10 -24
0523901-21	10 -23
0523901-22	10 -23
0523901-33	10 - 6
0523901-34	10 - 6
0523911-2	10 -14
0523911-3	10 -14
0523912	10 -21
0523912-1	10 -15
0523914-2	10 -19
0523918	10 -25
0523919	10 -10
0523920	10 - 9
0523921	10 - 8
0523923	10 -16
0526001-1	56 -39H
0532001-42	15 -47
0541105	39 - 6
0541105	39A- 6
0541111-2	39 -17
0541111-2	39A-17
0541115-2	56 -17
0541115-3	56 -12

PART NUMBER	FIGURE AND INDEX NO.
0541115-4	56 -17A
0541124-1	39 -12
0541124-1	39A-12
0541124-1	39B-19
0541138-16	73 -
0541138-3	73 -
0541138-5	73 - 3
0541139	73 - 1
0541140	73 - 2
0541143	73 - 5
0541144	73 - 6
0541147-2	73 -10
0541148	73 -14
0541148-1	73 - 9
0541149	73 -15
0541151	73 -16
0541157-1	39 -17
0541157-1	39A-17
0541157-1	39B-26
0541157-2	39 -17
0541157-2	39A-17
0541157-2	39B-26
0541157-3	39B-26
0541160-13	40 -
0541161-2	40 - 9
0541162-1	56 -33
0541180-1	39 -38
0541180-2	39 -38
0541180-2	39A-35
0541183-8	36 -
0541183-9	40 -
0541184-1	73 -10
0541184-200	73 -10
0541185-5	39 -34
0541185-6	39 -34
0541203-1	39A-45
0541203-14	39B-48
0541203-15	39B-48
0541203-2	39A-45
0541205-1	39A-53
0541205-1	39B-56
0541205-2	33 -27B
0541206-1	39A-51
0541206-1	39B-54
0541207-1	39A-52
0541207-1	39B-55
0541207-2	33 -26B
0542100-2	38 - 1
0542100-4	38 - 1
0542102-1	38 - 6
0542102-2	38 - 6
0542118-3	38 - 4
0542118-4	38 - 4
0542119-3	38 -
0542119-4	38 -
0543001	33 -14
0543003	33 -16
0543013-1	17 -13
0543013-1	17A-13
0543029	35 -26
0543029	35A-29
0543032-1	2 - 4
0543032-1	35 -49
0543032-1	35A-53
0543032-3	2 - 4
0543032-3	2A-62
0543032-3	35 -49
0543032-3	35A-53
0543035-3	35 -37
0543035-3	35A-41
0543036-1	35 -15
0543036-1	35A-18
0543037-1	33 -15
0543047-1	35 -31

PART NUMBER	FIGURE AND INDEX NO.
0543047-1	35 -39
0543047-1	35A-34
0543047-1	35A-43
0543048-1	35 -31A
0543048-1	35 -39A
0543048-1	35A-34
0543048-1	35A-43
0543065-1	33 -17B
0550100-6	39B-36
0550100-9	62 -25
0550153-1	62 - 6
0550153-1	62 - 6
0550209-1	63 -52
0550227-2	64B-
0700020-2	2 -20
0700029-1	2 - 9
0700054-1	2 -18
0700054-2	2 -19
0700099-10	71 - 8
0700099-104	82A-13
0700099-105	82A-12
0700099-106	82A-13A
0700099-107	82A-12A
0700099-11	71 -11
0700099-12	71 -12
0700099-13	39 -25
0700099-14	39 -25
0700099-15	82 -19
0700099-15	82A-22
0700099-16	82 -20
0700099-16	82A-23
0700099-17	82 -12
0700099-17	82A-18
0700099-19	82 - 9
0700099-19	82A-12
0700099-2	82 -39
0700099-2	82A-44
0700099-20	82 - 8
0700099-20	82A-13
0700099-21	82 -17
0700099-21	82A-20
0700099-23	82 -13
0700099-24	82 -14
0700099-3	82 -38
0700099-3	82A-45
0700099-32	63 -14
0700099-33	87 -12
0700099-34	82 -35
0700099-34	82A-41
0700099-35	82 - 5
0700099-36	84 -10
0700099-37	86 - 3A
0700099-39	62 -45
0700099-4	62 - 7
0700099-40	62 -46
0700099-41	82 - 5
0700099-42	88 -54
0700099-42	88A-61
0700099-42	88B-56
0700099-43	39 -25
0700099-44	39 -25
0700099-45	63 -14
0700099-46	82A- 8
0700099-47	82A- 9
0700099-48	82A- 5
0700099-5	82 -40
0700099-5	82A-46
0700099-53	82A-48
0700099-53	84 -10
0700099-54	39 -25
0700099-55	39 -25
0700099-56	71 -12
0700099-57	71 -11
0700099-58	39 -25

PART NUMBER		FIGURE AND INDEX NO.
0700099-59		39 -25
0700099-6		62 -43
0700099-60		71A-10
0700099-61		71A-12
0700099-62		71A- 5
0700099-63		71A- 8
0700099-64		71A- 3
0700099-67		71A- 5
0700099-68		71A- 3
0700099-69		71A-10
0700099-7		53A-21
0700099-7		53C-27
0700099-7		53E-29
0700099-7		53G-30
0700099-70		71A-12
0700099-71		71A- 8
0700099-72		39A-27
0700099-73		39A-27
0700099-74		71A- 5
0700099-75		71A- 3
0700099-77		82A- 5
0700099-78		62 -43
0700099-79		62 -45
0700099-8		71 - 3
0700099-80		62 -46
0700099-81		82 -40
0700099-81		82A-46
0700099-82		85 -16
0700099-83		85 - 7
0700099-84		53A-21
0700099-84		53C-27
0700099-84		53E-29
0700099-84		53G-30
0700099-84		53J-77
0700099-84		53L-80
0700099-84		53N-83
0700099-84		53Q-918
0700099-85		82A- 5
0700099-86		71A-48
0700099-87		71A-45
0700099-88		71A-51
0700099-89		71A-52
0700099-9		71 - 4
0700099-90		71A-55
0700099-92		39B-33
0700099-93		39B-33
0700099-94		82A-18
0700099-98		71A-70
0700099-99		71A-69
0700103-131		45 - 3
0700103-131		45A- 3
0700103-131		45B- 5
0700105-397		50 -18
0700105-425		48 - 5
0700105-425		50 -18
0700108-1		23 -23
0700108-1		23A-68
0700108-2		23 -24
0700108-2		23A-68
0700113-1		48 -11
0700113-1		49 -36
0700113-1		51D-73
0700113-1		51E-76
0700114-42	#	51B-15
0700114-44	#	51B- 8
0700120-1		92 -
0700122-1		56 -22
0700122-12		56 -23
0700122-13		56 -22
0700122-2		56 -23
0700123-10		63 -73
0700123-12		63 -73
0700123-12		66 -55
0700123-6		63 -73

PART NUMBER	FIGURE AND INDEX NO.
0700123-8	63 -78
0700128-1	2 -29
0700148-1	94 -15
0700162-1	53A-10D
0700162-1	53C-14
0700162-1	53E-15
0700162-1	53G-16
0700162-1	53J-63
0700162-1	53L-66
0700162-1	53N-69
0700162-1	53Q-77
0700162-3	53L-64
0700162-3	53N-67
0700162-3	53Q-75
0700162-4	53L-64
0700162-4	53N-67
0700162-4	53Q-75
0700162-6	53A-10B
0700162-6	53C-12
0700162-6	53E-13
0700162-6	53G-14
0700162-6	53J-61
0700162-6	53L-64
0700162-6	53N-67
0700162-6	53Q-75
0700162-7	53L-64
0700162-7	53N-67
0700162-7	53Q-75
0700163-3	53A-10C
0700164-6	57 - 1
0700166-1	41 - 4A
0700166-2	42 - 4A
0700176-1	2 -60
0700177-1	2 -54
0700178-1	2 -57
0700178-1	55A-23
0700178-2	2 -58
0700178-2	55A-23
0700179-1	2 -61
0700180-1	2 -55
0700182-1	2 -47
0700182-1	2A-11
0700184-1	2 -62
0700189-2	53C-13
0700189-2	53E-14
0700189-2	53G-15
0700189-2	53J-62
0700189-2	53L-65
0700189-9	53N-68
0700189-9	53Q-76
0700309-2	63 -48
0700309-7	63 -47
0700313-25	68 - 9
0700313-64	68 - 6
0700313-64	68A- 9
0700318-12	63 -75
0700318-7	63 -75
0700318-8	63 -74
0700319-10	68 - 1
0700319-11	68 - 2
0700319-12	2 -12
0700319-12	68 - 5
0700319-12	68A- 8
0700319-13	2 -12A
0700319-13	53 -56
0700319-13	68 - 9
0700319-13	68A-12
0700320-1	50 -19
0700320-1	52 -23
0700322-4	69 -16
0700325-2	69 -17
0700327-1	69 -25
0700612-2	56 -18
0700612-3	56 -21

PART NUMBER		FIGURE AND INDEX NO.
0700613-2		89 - 3
0700613-4		89 -23
0700616-1		93 - 3
0700618-1		93 - 1
0700619-1		23 -61
0700619-2		23 -61
0700622-1		91 - 1
0700622-4		91 - 3
0700622-5		91 - 4
0700623-11		91 -15
0700623-12		91 -15
0700623-14		91 - 6
0700624-1		91 -23
0700626-1		69 -23
0700628-1		91 - 1
0700628-12		91 - 4B
0700628-4		91 - 4
0700628-5		91 - 3A
0700628-5		91A- 6
0700628-7		91 - 1
0700628-9		91 - 4A
0700629-1		90 - 9
0700630-1	#	51A-
0700630-19	#	51A-
0700630-2	#	51A-
0700630-201	#	51A-14A
0700630-206	#	51A- 1
0700630-218	#	51A-14A
0700630-227	#	51A- 1
0700631-5		51A-24
0700631-5	¤	51A-24
0700631-6		51A-24
0700631-6	¤	51A-24
0700633-1		51A-32
0700633-1		51C- 6
0700633-2		51A-31
0700633-2		51C- 4
0700633-4		51A-32
0700633-4		51C- 6
0700633-5		51D-53
0700633-5		51E-55
0700633-5		51F-46
0700634-1		51A-38
0700634-1		51C- 1
0700636-1		51A-80
0700638-1		51A-40
0700639-1		51A-29
0700639-2		51A-30
0700639-2		51C-35
0700639-3		51C-34
0700640-1		51A-25
0700640-2		51A-25
0700640-5		51A-26
0700640-6		51A-26
0700641-1		51A-27
0700641-2		51A-28
0700641-3		51C-41
0700641-4		51C-42
0700641-5		51A-27
0700642-1		51A-54
0700643-1		51A-56
0700644-1		51A-59
0700645-1		51A-65
0700645-1		51C-38
0700645-2		51A-66
0700645-2		51C-39
0700645-3		51A-67
0700645-3		51C-40
0700645-4		51A-68
0700645-4		51C-40
0700646-1	¤	51A-19
0700646-2	¤	51A-20
0700650-5		45A-23
0700653-1		45 - 5

PART NUMBER		FIGURE AND INDEX NO.
0700653-1		45A- 5
0700653-1		45B- 3
0700654-1		47 -22
[illegible]	#	47A-23
0700654-10		47 -25
0700654-10	#	47A-27
0700654-10	#	47B-24
0700654-10	#	47C-28
0700654-10	#	47D-33
0700654-14		47 -29
0700654-14	#	47A-31
0700654-14	#	47B-28
0700654-14	#	47C-31
0700654-14	#	47D-31
0700654-15		47 -30
0700654-15	#	47A-32
0700654-15	#	47B-29
0700654-15	#	47C-32
0700654-15	#	47D-30
0700654-16	#	47A-27
0700654-16	#	47B-24
0700654-16	#	47C-28
0700654-16	#	47D-33
0700654-17		47 -24
0700654-17	#	47A-26
0700654-17	#	47B-23
0700654-17	#	47C-26
0700654-17	#	47D-32
0700654-18		45A- 7
0700654-2		47 -20
0700654-2	#	47A-21
0700654-20		45A- 6
0700654-21	#	45A- 6A
0700654-23	#	47C-24
0700654-23	#	47D-37
0700654-3		47 -24
0700654-4		47 -25
0700654-5		45 -19
0700654-6		45 - 7
0700654-6		45A- 6
0700654-7		45 - 8
0700654-7		45A- 7
0700655-10		45 -17
0700655-11		45 -25
0700655-12		45 -25
0700655-13		45 -26
0700655-14		45 -29
0700655-15-434		45A-15
0700655-16		45A-16
0700655-19		47A-17
0700655-20		45A-28
0700655-21		45A-25
0700655-25		47 -17
0700655-25		47A-18
0700655-26		45A-24
0700655-27		47A-19
0700655-6		47 -16
0700655-8		47 -18
0700655-9-273		45 -16
0700656-10		46 - 1
0700656-11		47 - 9
0700656-12		47 -10
0700656-7		47 - 1
0700656-8		47 - 2
0700656-9		46 - 1
0700657-1		45 -14
0700657-1		45A-13
0700657-9		45A-13
0700659-1		48 - 1
0700659-10		52 -13
0700659-2		52 -
0700659-3		48 - 7
0700659-4		52 - 3
0700659-5		48 - 3

PART NUMBER		FIGURE AND INDEX NO.
0700659-6		52 - 6
0700659-7		48 - 8
0700659-8		52 - 5
0700659-9		48 - 6
0700660-1		52 - 4
0700663-1		41 -13
0700664-1		45 -11
0700664-3		45 -11
0700664-3		45A-10
0700665-1		45 -21
0700665-2		45 -22
0700665-3		45 -20
0700665-3		45A-19
0700665-7		45A-20
0700665-8		45A-21
0700666-1		45 -18
0700667-1		45 -15
0700667-1		45A-14
0700668-1		47 -11
0700668-10		45A-23
0700668-11		45A-22
0700668-13	¤	47C-36
0700668-13	#	47B-33
0700668-13	#	47D-17
0700668-14	¤	47C-37
0700668-14	#	47B-33
0700668-14	#	47D-18
0700668-15	#	47B-33
0700668-2		47 -11
0700668-3		45 -23
0700668-4		45 -24
0700668-5		47 -31
0700668-5		47A-36
0700668-5		47B-33
0700668-7		17 -77
0700669-1		47 -23
0700669-1		47 -23A
0700671-1		45 -24A
0700677-1		45 -19
0700678-10	#	49 -15
0700678-10	#	49A-16
0700678-10	#	51A-16
0700678-11	#	52A- 5
0700678-2	#	49 -
0700678-200	#	49A- 1
0700678-201	#	49 -14
0700678-202	#	49A-15
0700678-203	#	49 - 1
0700678-22	#	49A-
0700678-27	#	52A-
0700678-3	#	52A-28
0700678-30	#	52A-
0700678-31	#	52A-28
0700678-32	#	52A-28
0700678-33		52A- 6
0700678-33		52B- 9
0700678-34		52A- 6
0700678-34		52B- 9
0700678-37	#	52A- 5
0700678-38		52A-39
0700678-38		52B-35
0700678-39	#	52A-37
0700678-4	#	52A-28
0700678-43		52A-39
0700678-43		52B-35
0700678-44	#	52A-38
0700678-46		52B-
0700678-47	#	52B-24
0700678-48	#	52B-24
0700678-49	#	52B-
0700678-5	#	52A-37
0700678-50	#	52B- 8
0700678-51	#	52B-33
0700678-52	#	52B-34

PART NUMBER		FIGURE AND INDEX NO.
0700678-6	#	52A-38
0700678-7	#	52A-
0700678-8	#	52A- 5
0700678-9	#	49 -10
0700678-9	#	49A-10
0700678-9	#	51A-10
0700681-1		46 - 1
0700681-2		46 - 1
0700682-2		47A- 2
0700683-1		47A-10
0700684-1		41 -17
0700684-1		41A-21
0700684-1		42 -16
0700684-1		42A-20
0700685-1		41 -13
0700685-1		41A-16
0700685-1		46 -10
0700688-1		25 -43A
0700689-1		23 -63
0700689-2		23 -63
0700690-1		29 -67
0700690-2		29 -67
0700692-1		5 - 6A
0700692-1		5A- 9
0700692-1		5B- 9
0700693-1		47A- 1
0700693-10		47A-11
0700693-2		47A- 2
0700693-3		46 - 1
0700693-4		46 - 1
0700693-9		47A-10
0700694-11	#	47A-25D
0700694-11	#	47B-21
0700694-12	¤	45A- 6A
0700694-22	#	47C-23
0700694-22	#	47D-36
0700694-7	#	47A-25A
0700696-1		89 - 3A
0700696-1		89A- 9
0700696-1		89B-75
0700696-1		89C-79
0700696-2		89 - 3
0700696-2		89A- 7
0700696-2		89B-71
0700696-2		89C-74
0700697-1		89 -23
0700698-1		89 - 3A
0700698-2		89A- 9
0700698-2		89B-73
0700699-1		47A- 1
0700699-1		47A- 1
0700699-10		47A-11
0700699-2		47A- 2
0700699-5		46 - 1
0700699-6		46 - 1
0700699-9		47A-10
0700702-1		47 - 5
0700702-1		47A- 5
0700702-10		47A-19
0700702-10	¤	47A-19
0700702-10	¤	47B-19
0700702-11		45A-28A
0700702-11	¤	45A-28A
0700702-12		45A-24
0700702-12	¤	45A-24
0700702-13	¤	47A- 5
0700702-14	¤	47A- 6
0700702-15	¤	45A-15A
0700702-15-434		45A-15A
0700702-16		45A-16
0700702-16	¤	45A-16
0700702-17	¤	47A- 5
0700702-18	¤	47A- 6
0700702-2		47 - 6

PART NUMBER		FIGURE AND INDEX NO.
0700702-2		47A- 6
0700702-21	¤	45B-12
0700702-5		47 -13
0700702-5		47A-13
0700702-5	¤	47A-13
0700702-5	¤	47B-13
0700702-5	¤	47C-15
0700702-5	¤	47D-23
0700702-6		47A-17
0700702-6	¤	47A-17
0700702-6	¤	47B-17
0700702-6	¤	47C-17
0700702-9		47A-18
0700702-9	¤	47A-18
0700702-9	¤	47B-18
0700703-1		23A-40
0700704-1		18 -31A
0700705-1		28A-10
0700705-2		28A-11
0700707-11		45A-31
0700707-11		45B-22
0700707-2		45A-31
0700707-5		45A-36
0700707-5		45B-27
0700707-6		45A-33
0700707-6		45B-24
0700707-8		45A-35A
0700707-8		45B-26
0700708-1		23A-69
0700708-2		23A-69
0700709-1		47A-24
0700709-1		47A-25B
0700709-2		47A-25D
0700710-1		23A-70
0700710-2		23A-70
0700712-1	#	47A- 1
0700712-10	#	47A-11
0700712-10	#	47A-11
0700712-3	#	47A- 2
0700712-5	#	46 - 1
0700712-6	#	46 - 1
0700712-9	#	47A-10
0700717-1		2 -31
0700719-1		51B-28
0700722-1		2 -34
0700723-1		2 -35
0700724-1		2 -31
0700729-1		89A-46
0700729-2		89A-47
0700730-1		89A-38
0700730-1		89B-93
0700730-1		89C-97B
0700730-2		89A-39
0700730-2		89B-94
0700730-2		89C-98
0700732-1		89A-50
0700734-3		68A- 1
0700734-4		68A- 2
0700735-1		89A-10
0700737-1		53B-22
0700737-10		53D-11
0700737-10		53F-10
0700737-10		53H-10
0700737-12		53D-11
0700737-12		53F-10
0700737-12		53H-10
0700737-3		53D-11
0700737-3		53E-61
0700737-3		53G-62
0700737-7		53D-11
0700737-7		53E-61
0700737-7		53G-62
0700737-9		53E-61
0700737-9		53F-10

PART NUMBER		FIGURE AND INDEX NO.
0700737-9		53G-62
0700737-9		53H-10
0700742-1		2 -38
0700742-1		2 -53
0700742-1		2A-17
0700743-1		2 -39
0700744-1		2 -40
0700745-1		2 -41
0700745-1		2 -56
0700748-1		2 -45
0700749-1		2 -42
0700751-1		2 -43
0700753-3	#	46 - 1
0700753-4	#	46 - 1
0700756-1		2 -59
0700756-1		2A-19
0700756-1		55A-22
0700757-1	#	47A- 1
0700757-1	#	47B- 1
0700757-2	#	47A- 2
0700757-2	#	47B- 2
0700757-3	#	46 - 1A
0700757-4	#	46 - 1A
0700757-5	#	47A-10
0700757-5	#	47B-10
0700757-6	#	47A-11
0700757-6	#	47B-11
0700761-6		91A-24
0700762-21		47E- 4
0700762-22		47E- 6
0700762-23		47E- 7
0700762-26		45 - 2
0700762-26		45A- 2
0700762-26		45B- 1A
0700762-27		45 - 1
0700762-27		45A- 1
0700762-27		45B- 1
0700762-4		47E- 3
0700762-5		47E- 2
0700762-6		47E- 1
0700762-9		47E- 5
0701017-200		23A-15
0701028-2		81 -52
0701036-2		90 -28
0705001-1		2 -70
0705001-1		2A-31
0705016-1		2A-32
0705016-2		2A-33
0705020-1		2A-61
0705020-1		47C-16
0705021-2		2A-23A
0705022-1		2A-59
0705023-1		2A-46
0705023-1		8 -40
0705023-2		2A-47
0705023-2		8 -40A
0705024-1		2A-67
0705024-4		2A-75
0705025-1		2A-60
0705027-1		2A-50
0705027-2		2A-51
0705028-1		2A-56
0705028-1		74C-29
0705041-1		2A-70
0705041-2		2A-69
0705041-3		2A-71
0705041-4		2A-71
0705048-4		2 -15A
0705048-4		2A- 8
0705048-5		2 -15B
0705048-5		2A- 9
0710013-4		69A-24
0710014-1		69A-27
0710014-12		69A-27A

PART NUMBER	FIGURE AND INDEX NO.
0710014-15	69A-27
0710014-3	69A-26
0710014-4	69A-25
0710014-8	69A-33
0710015-13	69A-31
0710015-6	69A-35
0710032-3	2 - 3
0710032-3	47 -15
0710302-1	51 -44
0710304-3	48 -18
0710308-1	51 -47
0710312-2	49 -47
0710312-2	50 -27
0710312-2	51A-76
0710312-2	52A- 9
0710312-2	52B-12
0710313-2	50 -14
0710316-2	48 -13
0710317-1	51 -46
0710600-2	25 -17
0710600-3	25 - 5
0710600-6	25 -63
0710600-7	25 -63
0710600-8	26 -
0710601-1	23 - 7
0710601-11	23A- 7
0710601-12	23A- 8
0710601-15	23A- 7
0710601-16	23A- 8
0710601-2	23 - 8
0710601-29	23A- 7
0710601-30	23A- 8
0710602-1	23 - 3
0710602-1	23A- 3
0710602-2	23 - 4
0710602-2	23A- 4
0710603-3	23 - 6
0710603-3	23A- 6
0710603-4	23 - 6
0710603-4	23A- 6
0710604-1	69 -24
0710605-1	23 -48
0710605-1	23A-13
0710605-10	23A-13
0710605-200	23A-14
0710606-1	25 - 2
0710606-10	25 - 3
0710606-2	25 - 3
0710606-7	25 - 3A
0710606-9	25 - 2
0710607-1	26 -19
0710607-3	26 -20
0710607-4	26 -19
0710608-1	26 -17
0710608-1	26A-18
0710608-2	26 -21
0710609-7	25 -71
0710609-9	25 -67
0710610-1	25 - 6
0710610-3	25 - 7
0710610-4	25 - 6
0710610-6	25 - 7
0710610-7	25 - 6
0710611-1	26 -16
0710611-3	26 -18
0710611-3	26A-19
0710611-4	26 -16
0710611-4	26A-17
0710612-3	25 - 4
0710612-4	25 - 4
0710612-5	25 - 4
0710612-6	25 - 4
0710613-1	25 - 8
0710614-1	25 -14

PART NUMBER		FIGURE AND INDEX NO.
0710614-2		25 -15
0710614-5		25 -16
0710615-1		26 -14
0710615-1		26A-15
0710615-2		26 -15
0710615-2		26A-16
0710616-1		26 -12
0710616-1		26A-13
0710616-2		26 -13
0710616-2		26A-14
0710617-1		25 -12
0710617-2		25 -13
0710618-1		25 -47
0710618-4		25 -45
0710618-5		25 -48
0710618-6		25 -46
0710619-1		41 -17
0710619-1		42 -16
0710620-10		42 -12
0710620-200		42 -11
0710620-201		41 -14
0710620-202		42 -11
0710620-203		41 -14
0710620-204	#	42 -11
0710620-205	#	41 -14
0710620-206	#	42 -11
0710620-207	#	41 -14
0710620-210		42 -11
0710620-211		41 -14
0710620-212		42 -11
0710620-213		41 -14
0710620-216		42 -11
0710620-217		41 -14
0710620-218		42 -11
0710620-219		41 -14
0710620-222		42 -11
0710620-223		41 -14
0710620-224		42 -11
0710620-225		41 -14
0710620-9		41 -15
0710622-1		41 -18
0710622-2		42 -17
0710623-1		41 -19
0710623-2		42 -18
0710624-1		41 -20
0710624-1		42 -19
0710624-3		41 -22
0710624-3		42 -21
0710624-4		41 -22
0710624-4		42 -21
0710625-1		41 -11
0710625-1		42 -11
0710625-5		41 -11
0710625-5		42 -11
0710626-11		41 -39
0710626-12		42 -28
0710628-4		56 - 3
0710629-1		23 - 8A
0710629-1		23A-10
0710629-2		23 - 9
0710629-2		23A-10
0710630-1		23 - 5
0710630-1		23A- 5
0710630-2		23 - 5
0710630-2		23A- 5
0710631-3		41 -25A
0710631-3		42 -15A
0710632-1		48 -31
0710632-1		49 -58
0710632-1		49A-60
0710632-1		50 - 6
0710632-1		51A-88
0710632-1		51B-37
0710633-1		25 -62

PART NUMBER		FIGURE AND INDEX NO.
0710633-1		25 -75
0710634-1		25 -50
0710634-1		25 -72
0710636-1		16 -19
0710636-2		16 -19
0710636-3		23A-11
0710637-1		41 -22
0710637-1		42 -21
0710638-1		16 -20
0710638-1		41 -47
0710638-1		41A-58
0710638-1		42 -33
0710638-1		42A-41
0710653-1		23A-30
0710656-1		25 - 8A
0710656-2		25 - 8A
0710657-1		25 - 8A
0710657-2		25 - 8A
0710658-2		25 -45
0710658-2		25 -46
0710658-2		25 -48
0710658-2		25 -77
0710700-2		25 -17
0710700-200		26A-
0710700-5		25 - 5
0710701-1		26A-19
0710701-2		26A-20
0710701-3		26A-21
0710701-4		26A-22
0710701-5		26A-23
0710701-6		26A-24
0710701-7		26A-24
0710702-1		25 -12
0710702-2		25 -13
0710703-1		25 -14
0710703-2		25 -15
0710703-3		25 -14
0710703-4		25 -15
0710705-1		25 - 1
0711016-1		43 -27
0711017-1		43 -15
0711018-19		43 - 6
0711018-20		43 - 7
0711018-22		43 -28
0711018-24		43 -16
0711018-25		43 - 8
0711018-27		43 - 4
0711018-32		43 -22
0711018-33		43 -22
0711018-36		43 -16
0711019-1		43 -14
0711021-1		41 -34
0711021-1		41A-20
0711021-4		41 -36
0711021-4		41A-47
0711021-9		41 -35
0711021-9		41A-46
0711024-2		24 -16
0711024-4		24 -15
0711027-1		41 - 4
0711027-1		42 - 4
0711029-1		43 -10
0711029-2		43 -10
0711033		41 - 8A
0711033-1		41A-12
0711034-1		41 -23
0711034-1		41A-32
0711034-1		42 -13
0711034-1		42A-15
0711037-14		42 -23
0711037-14		42A-31
0711037-15		41 -27
0711037-15		41A-39
0711037-16		42 -24

PART NUMBER		FIGURE AND INDEX NO.
0711037-16		42A-32
0711037-17		41 -28
0711037-17		41A-40
0711037-18		42 -25
0711037-18		42A-33
0711037-19		41 -29
0711037-19		41A-41
0711037-20		42 -26
0711037-20		42A-34
0711037-21		41 -30
0711037-21		41A-42
0711038-1		41 -31
0711038-1		41A-43
0711038-1		42 -27
0711038-1		42A-35
0711050-15		41 -43
0711050-15		41A-53
0711050-16		41 -39
0711050-17		41 -39
0711050-18		41 -40
0711050-18		41A-50
0711050-27		41A-49
0711051-5		41 -42
0711051-5		41A-52
0711051-6		41 -41
0711051-6		41A-51
0711051-7		41 -41
0711061-3		43 -
0711061-4		43 -
0711061-5		43 -
0711061-6		43 -
0711062-1		43 - 2
0711062-2		43 - 2
0711063-1		43 - 9
0711063-2		43 - 9
0711063-6		43A-23
0711064-1		41 -24
0711064-1		42 -14
0711064-5		41 -24
0711064-5		41A-34
0711064-5		42 -14
0711064-5		42A-17
0711065-1		41 -25
0711065-1		41A-35
0711065-1		42 -15
0711065-1		42A-18
0711066-2		18 -12
0711066-3		18 - 1
0711066-6		18 - 1
0711080-1	#	52C- 8
0711083-1		52C-17
0711083-1		52D-20
0711083-1		56 -11
0711083-1		56 -11
0711097-2		52C- 1
0711097-21		52C-12
0711097-4	#	52C- 9
0711101-21		44 -10
0711111-1		44 - 9A
0711121-2		56 - 8
0711121-3		56 -10
0711121-5		56 -10
0711126-1		43 -29
0711132-1		43 - 5
0711132-2		43 - 5
0711600-10		28 - 2
0711600-11		28 - 1
0711600-13		25 -21
0711600-14		25 -22
0711600-15		25 -19
0711600-16		25 -20
0711600-17		25 -37
0711600-18		25 -38
0711600-19		23 -41

PART NUMBER	FIGURE AND INDEX NO.
0711600-2	25 -40
0711600-20	23 -42
0711600-21	25 -35
0711600-22	25 -36
0711600-26	23 -43
0711600-27	23 -41
0711600-28	23 -42
0711600-29	28 - 1
0711600-3	25 -39
0711600-30	28 - 2
0711600-4	23 -47
0711600-5	23 -46
0711600-6	16 -10
0711600-7	16 - 9
0711600-8	23 -45
0711600-9	23 -44
0711601-1	23 -15
0711601-2	23 -16
0711602-1	23 -17
0711602-2	23 -18
0711603-1	23 -25
0711603-2	23 -26
0711604-11	24 - 9
0711604-12	24 - 9
0711604-201	24 - 3
0711604-202	24 - 4
0711604-203	24 - 3
0711604-204	24 - 4
0711604-205	24 -
0711604-206	24 -
0711604-207	24 - 3
0711604-208	24 - 4
0711604-209	24 -
0711604-210	24 -
0711604-211	24 - 3
0711604-212	24 - 4
0711604-213	24 - 3
0711604-214	24 - 4
0711604-215	24 -
0711604-25	24 -18
0711604-26	24 -18
0711604-48	24 -18
0711604-49	24 -18
0711605-200	24 -10
0711605-201	24 -10
0711605-3	24 -10
0711606-1	24 -13
0711606-2	24 -13
0711606-5	24 -13
0711606-6	24 -13
0711608-1	25 -51
0711608-11	25 -53A
0711608-12	25 -53B
0711608-14	25 -51A
0711608-4	25 -52
0711608-5	25 -53
0711608-6	25 -51
0711608-8	25 -51
0711609-1	23 -10
0711609-2	23 -11
0711609-7	23 -12
0711610-1	23 -37
0711610-1	23A-66
0711610-2	23 -37
0711610-2	23A-66
0711611-2	25 -30
0711612-1	28 - 8
0711613-1	25 -25
0711613-2	25 -26
0711613-4	25 -26
0711613-5	25 -25
0711613-6	25 -26
0711614-1	25 -23
0711614-3	25 -24

PART NUMBER	FIGURE AND INDEX NO.
0711614-4	25 -23
0711614-6	25 -24
0711614-7	25 -23
0711614-9	25 -24
0711615-1	23 -32
0711615-1	23A-67
0711615-1	28A-12
0711615-2	23 -33
0711615-2	23A-67
0711615-2	28A-12
0711615-3	23 -34
0711615-4	23 -35
0711616-1	16 -11
0711616-2	16 -12
0711617-1	23 -36
0711617-2	23 -36
0711618-1	23 -38
0711618-1	44 -15
0711618-2	44 -16
0711618-3	23A-60
0711618-3	44 -15
0711618-4	23A-59
0711618-4	44 -16
0711619-1	23 -57
0711619-1	44 -17
0711620-1	25 -41
0711620-1	44 -18
0711621-1	16 -13
0711621-3	16 -14
0711622-1	23 -60
0711623-1	16 -16
0711624-1	23 -52
0711625-1	23 -54
0711626-1	23 -30
0711626-2	23 -31
0711627-1	28 - 3
0711627-2	28 - 4
0711628-1	23 -39
0711628-1	23A-62
0711628-1	44 -21
0711628-2	23 -40
0711628-2	23A-63
0711628-2	44 -22
0711629-1	44 - 1
0711629-5	44 - 1
0711630-1	23 -22
0711630-2	23 -22
0711631-1	25 -42
0711631-2	25 -43
0711632-1	25 -56
0711632-7	25 -56
0711633-1	23 -27
0711633-2	23 -28
0711634-1	23 -29
0711634-2	23 -29
0711635-1	25 -28
0711636-1	28 - 5
0711636-2	28 - 5
0711637-1	28 - 6
0711637-2	28 - 6
0711638-1	28 - 7
0711638-2	28 - 7
0711639-1	23 -14
0711640-1	16 -15
0711640-2	16 -15
0711641-1	23 -59
0711642-1	25 -64
0711642-2	25 -64
0711643-1	44 - 4
0711644-2	52 -10
0711644-3	52 -10
0711644-7	52 -12
0711646-1	25 -29
0711647-1	25 -31

PART NUMBER	FIGURE AND INDEX NO.
0711651-1	44 -20
0711653-1	43 -20
0711653-2	43 -20
0711653-3	43A- 1
0711654-1	24 - 8
0711654-2	24 - 8
0711658-1	23 -55
0711659-1	23 -56
0711660-1	23 -53
0711661-1	23 -52
0711663-2	52C-13
0711663-5	52C- 4
0711663-6	52C- 5
0711663-7	52C-15
0711663-7	52D-18
0711663-8	52C-16
0711663-8	52D-19
0711665-1	24 - 8
0711665-2	24 - 8
0711667-1	49 - 5
0711667-1	49A- 5
0711667-1	49B- 5
0711667-1	49C- 5
0711667-1	51A- 5
0711667-1	52A-33
0711667-1	52B-29
0711668-1	49 - 4
0711668-1	49A- 4
0711668-1	49B- 4
0711668-1	49C- 4
0711668-1	51A- 4
0711668-1	52A-31
0711668-1	52B-27
0711669-1	45A-17
0711670-1	23 -62
0711671-1	23A-64
0711671-2	23A-65
0711671-3	23A-64
0711671-4	23A-65
0711673-1	23A-61
0711673-1	44 -17
0711674-3	25 -32
0711675-10	28A- 1
0711675-11	28A- 8
0711675-12	28A- 9
0711675-13	28A- 8
0711675-14	28A- 9
0711675-15	28A- 1
0711675-4	25 -39
0711675-7	28A-17
0711675-8	28A-18
0711676-2	23A-46
0711676-3	23A-44
0711676-5	23A-44
0711676-6	23A-46
0711676-7	23A-44
0711677-1	23A-32
0711677-2	23A-33
0711678-3	23A-34
0711678-4	23A-35
0711679-3	23A-38
0711680-1	28A-13
0711680-2	28A-14
0711680-3	28A-10
0711680-4	28A-11
0711680-5	28A-15
0711681-1	23A-39
0711681-1	28A- 4
0711681-3	28A- 2
0711681-4	28A- 3
0711682-1	45A-17
0711682-1	45B-13
0711683-1	23A-27A
0711684-1	23A-36

PART NUMBER		FIGURE AND INDEX NO.
0711684-2		23A-36
0711685-1		16 -11
0711685-2		16 -12
0711686-1		23A-41
0711686-2		23A-41
0711688-1		25 -21
0711688-11		25 -19
0711688-12		25 -20
0711688-13		25 -35
0711688-14		25 -36
0711688-17		25 -21
0711688-18		25 -22
0711688-2		25 -22
0711688-3		25 -19
0711688-4		25 -20
0711688-5		25 -35
0711688-6		25 -36
0711688-7		25 -37
0711688-8		25 -38
0711689-2		56 - 3A
0711689-3		56 - 7B
0711690-1		25 -65
0711690-2		25 -65
0711690-3		25 -65
0711690-4		25 -65
0711690-5		25 -65
0711690-6		25 -65
0711694-15		24 -19
0711694-16		24 -19
0711695-10		24 -20
0711695-11		24 -23
0711695-12		24 -23
0711695-7		24 -23
0711695-8		24 -23
0711695-9		24 -21
0711701-1		23A-73
0711705-1		44 -118
0711708-1		44 -10
0711709-1		44 -11D
0711775-1		52D-25
0711776-1		23A-72
0711776-2		23A-72
0711777-1		91A-12
0711778-1	*	91A- 1
0711778-3	*	91A- 1
0711778-5	*	91A- 1A
0711778-6	*	91A- 1A
0711779-1		90 - 9A
0711780-3		91A-19
0711781-1		23A-26
0711781-1		91A- 8
0711781-2		23A-26
0711781-2		91A- 9
0711784-1		91A- 4
0711788-1		43A- 4
0711790-1		44 -10A
0711790-2		44 -10C
0711791-1		44 - 1
0711793-1		23A-45
0711793-2		23A-47
0711793-5		23A-45
0711793-6		23A-47
0711800-3		25 -40
0711800-5		23A-57
0711800-6		23A-58
0711800-7		16 - 9
0711800-8		16 -10
0711800-9		23A-31
0712031-1		90 -54
0712306-5		31 -27
0712306-5		31A-28
0712503-2		29B-13
0712503-3		29B-14
0712503-4		29B-15

PART NUMBER	FIGURE AND INDEX NO.
0712503-5	29B-16
0712503-6	29B-13
0712504-10	29B-52
0712504-2	29B-52
0712504-200	29B-
0712504-201	29B-
0712504-3	29B-51
0712504-4	29B-49
0712504-5	29B-50
0712504-6	29B-50
0712504-7	29B-48
0712505-1	23A-49
0712505-3	23A-49
0712506-1	29B-60
0712507-1	29B-61
0712507-2	29B-62
0712508-1	89C-77
0712509-1	29B-69
0712510-1	29B-67
0712511-2	29B-11
0712511-4	29B-11
0712511-5	29B-12
0712512-1	29B-16A
0712512-2	29B-16B
0712513-1	30 -
0712513-4	30 - 3
0712514-1	29B-65
0712515-1	29B-70
0712516-1	29B-12
0712517-1	29B-17
0712517-2	29B-17
0712519-1	29B-76
0712519-2	29B-77
0712520-1	29B-74
0712520-2	29B-75
0712521-1	31A-23
0712522-1	31A-12
0712522-3	31A-12
0712523-1	31A- 1
0712524-1	31A-10
0712524-2	31A-10
0712525-1	29B- 1
0712525-2	31A-
0712525-3	31A-11
0712526-1	31A-13
0712526-2	31A-14
0712527-1	29B-47
0712528-1	31A- 3
0712603-2	90 - 2
0712605-201	90 - 1
0712607-1	29 -
0712607-10	29 -
0712607-11	29 -57
0712607-12	29 -56
0712607-3	29 -56A
0712607-4	29 -58
0712607-5	29 -57
0712607-6	29 -45
0712607-6	29B-71
0712607-7	29 -48
0712607-7	29A-42
0712607-7	29B-47
0712607-8	29 -49
0712607-8	29A-37
0712607-8	29B-42
0712607-9	29 -52
0712607-9	29A-40
0712607-9	29B-45
0712608-4	29 -10
0712608-7	29 -10
0712608-8	29 -10
0712609-2	29 - 9
0712609-2	29A- 9
0712609-3	29 - 9

PART NUMBER	FIGURE AND INDEX NO.
0712609-3	29A- 9
0712609-4	29 - 9
0712609-4	29A- 9
0712609-7	29B- 9
0712610-2	29 - 5
0712610-2	29A- 5
0712610-2	29B- 5
0712610-3	29 - 5
0712610-3	29A- 5
0712610-3	29B- 5
0712610-4	29 - 5
0712610-4	29A- 5
0712610-4	29B- 5
0712610-5	29 - 6
0712610-5	29A- 6
0712610-5	29B- 6
0712611-2	29 - 4
0712611-2	29A- 4
0712611-2	29B- 4
0712611-3	29 - 4
0712611-3	29A- 4
0712611-3	29B- 4
0712611-4	29 - 4
0712611-4	29A- 4
0712611-4	29B- 4
0712612-2	29 - 2
0712612-2	29A- 2
0712612-2	29B- 2
0712612-3	29 - 2
0712612-3	29A- 2
0712612-3	29B- 2
0712612-4	29 - 2
0712612-4	29A- 2
0712612-4	29B- 2
0712612-6	29 - 3
0712612-6	29A- 3
0712612-6	29B- 3
0712612-7	29 - 3
0712612-7	29A- 3
0712612-7	29B- 3
0712612-8	29 - 3
0712612-8	29A- 3
0712612-8	29B- 3
0712613-2	29 - 7
0712613-2	29A- 7
0712613-2	29B- 7
0712613-3	29 - 8
0712613-3	29A- 8
0712613-3	29B- 8
0712615-1	31 -15
0712615-3	31A-15
0712616-1	31 - 1
0712616-3	31 - 6
0712616-4	31 - 5
0712616-5	31 - 2
0712616-6	31 - 4
0712616-7	31 - 1
0712616-9	31 - 5
0712617-2	31 -14
0712618-1	31 -11
0712618-2	31 -11
0712618-3	31A- 9
0712618-4	31A- 9
0712619-1	31 -10
0712619-2	31A- 8
0712620-1	31 -22
0712621-5	31 -25
0712621-6	31 -26
0712621-7	31 -25
0712621-7	31A-26
0712621-8	31 -26
0712621-8	31A-27
0712622-2	31 -21
0712623-1	23 -21

PART NUMBER	FIGURE AND INDEX NO.
0712624-10	23 -19
0712624-11	25 -32
0712624-4	23 -19
0712624-5	23 -20
0712624-6	25 -32
0712625-2	29 -11
0712625-3	23A-50
0712625-3	29 -11A
0712625-4	23A-48
0712625-5	23A-49
0712626-1	29 -55
0712626-1	30 -24
0712626-4	298-63
0712627-1	29 -43
0712627-1	29A-33
0712627-1	298-38
0712627-10	29 -36
0712627-10	29A-26
0712627-10	298-31
0712627-11	29 -33
0712627-11	29A-23
0712627-11	298-28
0712627-12	29 -34
0712627-12	29A-24
0712627-12	298-29
0712627-13	29 -28
0712627-13	29A-21
0712627-13	298-26
0712627-14	29 -29
0712627-14	29A-22
0712627-14	298-27
0712627-15	29 -30
0712627-16	29 -31
0712627-17	29 -26
0712627-18	29 -27
0712627-19	29 -24
0712627-2	29 -44
0712627-2	29A-34
0712627-2	298-39
0712627-20	29 -25
0712627-21	29 -46
0712627-21	29A-35
0712627-21	298-40
0712627-22	29 -47
0712627-22	29A-36
0712627-22	298-41
0712627-23	29 -18
0712627-23	29A-13
0712627-23	298-18
0712627-24	298-18
0712627-25	298-32
0712627-26	298-33
0712627-3	29 -39
0712627-3	29A-31
0712627-3	298-36
0712627-4	29 -40
0712627-4	29A-32
0712627-4	298-37
0712627-5	29 -41
0712627-5	29A-29
0712627-5	298-34
0712627-6	29 -42
0712627-6	29A-30
0712627-6	298-35
0712627-7	29 -37
0712627-7	29A-27
0712627-7	298-32
0712627-8	29 -38
0712627-8	29A-28
0712627-8	298-33
0712627-9	29 -35
0712627-9	29A-25
0712627-9	298-30
0712628-2	29 - 1

PART NUMBER	FIGURE AND INDEX NO.
0712628-2	29A- 1
0712628-2	31 -
0712628-3	31 -13
0712628-4	298- 1
0712628-4	31 -
0712629-1	31 -12
0712629-2	31 -12
0712630-1	29 -48
0712630-1	29A-42
0712631-1	30 - 1
0712631-6	30 - 3
0712631-7	30 - 1
0712632-1	30 - 4
0712632-2	30 - 9
0712633-1	29 -32
0712634-1	29 -19
0712634-3	29 -20
0712634-4	29 -21
0712634-5	29 -22
0712635-1	32 - 1
0712636-1	31 -23
0712636-1	31A-24
0712637-2	23A-54
0712637-2	29 -15
0712638-2	25 - 9
0712638-3	23A-53
0712638-3	29 -14
0712639-1	23A-54
0712639-1	29 -16
0712639-3	25 -10
0712640-3	25 -33
0712640-4	25 -34
0712641-1	29 -11
0712641-2	29 -11
0712642-1	31 -14
0712645-2	29A-10
0712645-5	29A-11
0712645-6	29A-12
0712646-1	29A-14
0712646-1	29B-19
0712646-2	29B-19
0712647-3	29A-19
0712647-3	29B-24
0712647-4	29A-20
0712647-4	29B-25
0712648-1	23A-42
0712648-2	23A-43
0712650-1	31 -27A
0712650-1	31A-29
0712651-1	28A- 5
0712651-2	28A- 6
0712652-2	29A-47
0712652-200	29A-
0712652-3	29A-46
0712652-4	29A-44
0712652-5	29A-45
0712652-6	29A-45
0712652-7	29A-43
0712653-1	29A-15
0712653-1	29B-20
0712653-2	29A-16
0712653-2	29B-21
0712653-3	29A-17
0712653-3	29B-22
0712653-4	29A-18
0712653-4	29B-23
0712654-1	23A-56
0712654-2	23A-56
0712665-1	25 -57A
0712665-2	25 -57A
0712748-1	56 -40
0712748-2	56 -41
0712749-1	56 -43
0712750-1	56 -42

PART NUMBER	FIGURE AND INDEX NO.
0712750-2	56 -42
0712751-1	56 -44
0712752-1	56 -44
0712753-1	29B-10
0712753-1	89C-87
0712753-2	29B-10
0712753-2	89C-87
0712754-1	89C-86
0712754-2	89C-86
0712755-1	89C-82
0712755-2	89C-83
0712756-1	89C-88
0712756-2	89C-88
0712757-1	23A-55
0712757-2	23A-55
0712757-5	23A-55
0712758-1	25 -29
0712759-5	25 -28
0713003-45	17 -64
0713003-45	70 -14
0713003-74	22 -19
0713011-12	56 -24
0713019-24	70 -39
0713019-33	63 -75A
0713019-33	66 -32
0713019-33	66 -58
0713019-7	17 -64
0713019-7	70 -27
0713019-86	45 - 4
0713019-86	45A- 4
0713019-86	45B- 2
0713019-94	17 -64
0713019-94	70 -15
0713028-3	53 -29
0713028-8	53 -29
0713029	94 - 3
0713032-1	75 - 4
0713032-2	75 - 4
0713047	2 - 1
0713047	2A- 1
0713047	16 -18
0713068-1	56 -32
0713068-5	56 -32
0713070-15	71 -24
0713070-15	71A-25
0713070-19	71 -32
0713070-19	71A-33
0713070-20	71 -43
0713070-20	71A-44
0713070-24	71 -41
0713070-24	71A-42
0713070-25	71 -22
0713070-25	71A-23
0713070-32	71 -23
0713070-32	71A-24
0713070-6	71 -38
0713070-6	71A-39
0713070-9	71 -31
0713070-9	71A-32
0713074-1	48 - 2
0713074-1	49 - 1
0713074-1	49A- 1
0713074-1	49B- 1
0713074-1	49C- 1
0713074-1	50 - 2
0713074-1	51A- 1
0713074-1	51E- 1
0713074-1	51F- 1
0713124-1	3 -24
0713124-1	91 -12
0713129-4	53A-38
0713129-4	54 - 7
0713130-1	90 -18
0713135	69A-36

PART NUMBER		FIGURE AND INDEX NO.
0713135-1		69 -32
0713135-2		17 -56
0713135-2		17A-58
0713139		69A-37
0713139-1		17 -55
0713139-1		17A-57
0713139-1		69 -33
0713140-1		17 -56
0713140-1		17A-58
0713140-1		69 -34
0713140-1		69A-38
0713207-4		2 - 5
0713207-4		53 -41
0713207-4		55A-21
0713208-1		53 -10
0713208-1		53 -58
0713209-1		2 -10
0713209-1		2A- 4
0713209-1		53 - 8
0713215-2		2 -17
0713215-2		74 -85
0713216-2		2 -16
0713216-2		74 -85
0713245-200		74 -76
0713245-200		89A-76
0713250-1		69A-32
0713252-1	#	53C-71
0713252-2	#	53C-71
0713253-1		45 - 9
0713253-1		45A- 8
0713253-1		45B- 4
0713254-1		2 -57A
0713254-1		55A-23
0713254-2		2 -58A
0713254-2		2A-18
0713254-2		55A-23
0713254-2		55A-23
0713255-2		2 -68
0713255-7		2 -69
0713256-1		2 -67
0713260-1		53E-57
0713260-2		53E-58
0713261-1		74A-11A
0713262-2		74A-11
0713263-1		17 -30
0713263-1		17A-30
0713263-2		17 -31
0713263-2		17A-31
0713263-5		17 -30
0713263-5		17A-30
0713263-6		17 -32
0713263-6		17A-32
0713266-2		53E-76
0713266-2		53G-71
0713266-3		53Q- 2
0713266-4		53E-76
0713266-4		53G-71
0713266-4		53J- 2
0713266-4		53L- 2
0713266-4		53N- 2
0713267-1		53E-78
0713267-1		53G-73
0713267-1		53J-27
0713267-1		53L-22
0713267-1		53N-23
0713267-1		53Q-28
0713269-1	#	53E-69
0713269-2	#	53E-69
0713271-1		53E-63
0713272-1		71A- 4
0713272-1		71A- 7
0713272-1		71A-47
0713272-1		71A-71
0713273-200		17 -42

PART NUMBER		FIGURE AND INDEX NO.
0713273-200		53E-73
0713273-201		17 -42
0713273-201		53G-68
0713275-1		53E-81
0713275-2		53G-76
0713275-4		53J-25
0713275-4		53L-26
0713275-4		53N-27
0713275-5		53Q-33
0713276-1		53E-96
0713276-1		53G-93
0713277-1		53E-80
0713277-1		53G-75
0713278-11	#	53J-46
0713278-13	#	53L-49
0713278-17	#	53L-49
0713278-3	#	53E- 1
0713278-3	#	53G- 1
0713278-7	#	53J-46
0713282-1	#	53F- 1
0713282-1	#	53H- 1
0713282-2	#	53K- 1
0713282-3	#	53K- 1
0713282-4	#	53K- 1
0713282-5	#	53K- 1
0713282-6	#	53M- 1
0713282-7	#	53M- 1
0713282-8	#	53M- 1
0713282-9	#	53M- 1
0713285-1		53E- 8
0713285-1		53G- 9
0713287-11		27A- 1
0713287-20		17A-43
0713287-8		17 -43A
0713288-1		17A-70
0713288-2		17A-70
0713288-3		17A-70
0713288-4		17A-70
0713290-1		20 -20
0713290-2		20 -20
0713293-1		17 -36
0713293-1		17A-36
0713294-4		53Q-22
0713296-1		17A-47
0713303-2		69 -11
0713303-2		69A-11
0713303-2		70 -16
0713303-5		53C-42
0713303-7		55 - 9
0713307-1		67 - 8
0713307-1		70 -13
0713307-1		79B-38
0713307-2		67 - 9
0713307-2		70 -13
0713307-2		79C-47
0713307-4		79B-39
0713307-6		79B-28
0713314-1		75 -20A
0713315-1		75 -12A
0713315-5		75 -12A
0713315-6		75 -12A
0713318-1	#	53N-52
0713318-2	#	53P- 1
0713319-1	#	53N-43
0713319-2	#	53P- 4
0713323-1	#	53Q-57
0713323-2	#	53R- 1
0713324-1	#	53Q-48
0713324-2	#	53R- 4
0713325-1		53Q-64
0713326-1		53Q-25
0713327-1		53Q-37
0713328-1		53Q-17
0713329-1		17A-42

PART NUMBER		FIGURE AND INDEX NO.
0713329-1		53Q- 1
0713330-1	#	53Q-50
0713334-1		17A-
0713334-2		27A- 1
0713334-3		17A-48
0713334-3		17 -45
0713334-4		17A-49
0713334-4		17 -46
0713334-5		17 -50
0713334-5		17A-51
0713334-6		17A-43
0713334-7		17 -58
0713334-7		17A-60
0713334-7		27 -12
0713334-8		17 -59
0713334-8		17A-61
0713334-8		27 -12
0713335-1		17A-75
0713511-1		55 -19
0713511-1		90 -16
0713524-1	#	53G-66
0713524-2	#	53J-41
0713524-3	#	53L-42
0713524-3	#	53N-45
0713525-1	#	53G-59
0713525-11	#	53L-45
0713525-11	#	53N-48
0713525-13	#	53Q-54
0713525-3	#	53G-59
0713525-5	#	53G-59
0713525-8	#	53J-44
0713600-10		27 - 1
0713600-14		17 -43A
0713600-20		17 -43A
0713600-23		17 -43A
0713600-7		17 -43
0713600-8		27 - 1
0713602-2		53 -10
0713602-200	#	53 -12
0713602-5		53 -11
0713602-6		53 -12
0713602-7		53 -13
0713602-8		53 -14
0713602-9		53 -15
0713603-1		17 -12
0713603-1		17A-12
0713603-2		17 -12
0713603-2		17A-12
0713604-1		18 -
0713604-11		18 -13
0713604-12		18 -13
0713604-14		18 -
0713604-15		18 -
0713604-3		18 -13
0713604-4		18 -13
0713604-5		18 -14
0713604-6		18 -15
0713604-7		12B-29
0713604-7		18 -16
0713604-8		12B-30
0713604-8		18 -17
0713605-1		18 -35
0713606-1		18 -27
0713606-2		18 -27
0713607-1		18 -25
0713607-2		18 -25
0713608-1		18 -32
0713608-2		18 -32
0713608-3		18 -32
0713609-1		27 -11
0713609-1		27A- 7
0713609-2		27 -11
0713609-2		27A- 7
0713609-5		18 -28

PART NUMBER	FIGURE AND INDEX NO
0713609-6	18 -28
0713610-10	18 -33
0713610-9	18 -33
0713611-1	18 -26
0713611-2	19 -26
0713612-1	18 -18
0713612-2	18 -19
0713613-1	19 -34
0713613-2	18 -34
0713613-5	18 -34
0713613-6	18 -34
0713614-1	17 -20
0713614-1	17A-20
0713614-2	17 -20
0713614-2	17A-20
0713615-1	17 -22
0713615-1	17A-22
0713615-2	17 -22
0713615-2	17A-22
0713616-1	17 -30
0713616-2	17 -31
0713617-1	17 -21
0713617-1	17A-21
0713618-1	17 -34
0713618-2	17 -34
0713619-1	17 -24
0713619-1	17A-24
0713619-2	17 -24
0713619-2	17A-24
0713620-1	17 -42
0713621-2	53 -42
0713621-3	53 -42
0713622-2	54 - 1
0713622-4	54 - 1
0713623-1	17 -56
0713624-2	20 - 4
0713624-2	72 -14
0713625-1	71 -40
0713625-1	71A-41
0713626-1	17A-51
0713628-1	20 - 3
0713628-2	20 - 3
0713629-1	72 -20
0713629-2	72 -19
0713631-1	20 - 1
0713631-2	20 - 2
0713632-5	17 - 8
0713632-5	17A- 8
0713632-6	17 - 8
0713632-6	17A- 8
0713633-1	19 -22
0713633-2	19 -22
0713634-2	20 -10
0713634-3	20 -14
0713636-1	20 - 8
0713637-1	20 - 7
0713638-1	17 - 9
0713638-1	17A- 9
0713638-2	17 - 9
0713638-2	17A- 9
0713639-1	17 -29
0713639-1	17A-29
0713639-2	17 -29
0713639-2	17A-29
0713640-12	75 - 9A
0713640-200	19 -
0713640-201	19 -
0713640-202	19 -
0713640-3	19 - 1
0713640-4	19 - 3
0713641-1	19 - 8
0713641-3	19 -10
0713642-1	75 - 2
0713642-3	75 - 4

PART NUMBER	FIGURE AND INDEX NO
0713643-1	75 - 7
0713643-3	75 - 8
0713644-1	19 -21
0713645-2	19 -19
0713647-1	19 -11
0713647-3	19 -13
0713647-3	19 -17
0713647-3	19 -25
0713648-1	19 - 4
0713650-1	19 - 5
0713651-1	19 -20
0713652-2	19 - 6
0713652-4	19 - 7
0713653-1	75 - 9
0713653-2	75 -10
0713654-1	75 -12
0713656-1	75 -24
0713656-3	75 -26
0713657-1	19 -15
0713657-2	19 -17
0713658-1	17 -44
0713659-1	17 -74
0713659-5	17 -74
0713660-1	27 - 9
0713661-1	17 -54
0713661-1	17A-55
0713663-1	17 -10
0713663-1	17A-10
0713663-1	17 -10
0713663-2	17A-10
0713664-1	21 -24
0713664-2	21 -24
0713665-1	17 -38
0713665-1	17A-38
0713665-2	17 -39
0713665-2	17A-39
0713666-1	17 -37
0713666-1	17A-37
0713667-1	17 -40
0713667-2	17 -41
0713668-1	17 -25
0713668-1	17A-25
0713668-4	17A-25
0713669-1	20 -12
0713669-2	20 -13
0713670-1	17 -28
0713670-1	17A-28
0713670-2	17 -29
0713671-3	20 -17
0713671-4	20 -18
0713673-1	27 - 4
0713674-1	27 - 5
0713676-1	17 - 6
0713676-1	17A- 6
0713676-2	17 - 5
0713676-2	17A- 5
0713677-1	20 - 5
0713677-3	20 - 5
0713678-1	20 - 9
0713681-1	20 -19
0713682-1	17 -11
0713682-1	17A-11
0713682-2	17 -11
0713682-2	17A-11
0713683-1	18 -36
0713684-1	17 -33
0713684-1	17A-33
0713684-2	17A-33
0713685-1	17 -23
0713685-1	17A-23
0713685-2	17 -23
0713685-2	17A-23
0713693-2	71 -15
0713693-2	71A-16

PART NUMBER	FIGURE AND INDEX NO
0713693-3	71 -37
0713693-3	71A-38
0713693-4	71 -37
0713693-4	71A-38
0713694-1	20 -15
0713694-2	20 -16
0713695-1-418	53 - 3
0713695-2	53 - 4
0713695-3	53 - 4
0713696-2	53 - 5
0713696-6	53 - 5
0713697-1	55 - 4
0713697-4	55 -11
0713697-5	55 -12
0713697-6	55 - 7
0713697-9	55 - 8
0713698-1-418	53 - 1
0713699-1	54 - 2
0713699-2	54 - 2
0713699-5	54 - 2
0713699-6	54 - 2
0713700-1	21 -17
0713700-1	21A-19
0713700-1	21B-25
0713701-2	67 -16
0713702-1	25 - 8A
0713703-1	47 -27
0713703-1	47A-29
0713703-1	47B-26
0713703-1	47C-29
0713703-1	47D-33
0713703-2	47 -28
0713703-2	47A-30
0713703-2	47B-27
0713703-2	47C-30
0713703-2	47D-34
0713704-1	2 - 6
0713704-1	55 -21
0713705-2	2 -11
0713705-2	2A- 5
0713705-2	53 -32
0713708-1	55 - 1
0713710-3-418	75 -29
0713711-1	90 -28
0713714-2	75 -20
0713715-1	47 -26
0713715-1	47A-28
0713715-1	47B-25
0713715-1	47C-27
0713715-1	47D-32
0713715-2	47 -27
0713715-2	47A-29
0713715-2	47B-26
0713715-2	47C-29
0713715-2	47D-33
0713716-1	17 -48
0713717-1	17 -49
0713718-1	17 -49
0713718-2	17 -49
0713719-1	70 -28
0713719-2	70 -28
0713720-1	53 -27
0713721-1	53 -27
0713722-1	75 -21
0713723-1	56 -32
0713723-5	56 -32
0713723-7	56 -32
0713724	2 -13
0713724-1	53 -55
0713730-1	20 -11
0713732-5	18 -31
0713732-6	18 -31
0713733-1	17 -48
0713734-1	19 -24

PART NUMBER		FIGURE AND INDEX NO.
0713738-3		55 -17
0713738-3		55A-10
0713744-1		54 - 1
0713745-1		54 - 2
0713747-200		74 -76
0713747-201		74 -76
0713748-1		17 -73
0713749-6		88 - 7
0713749-6		88A- 7
0713757-1		17 -66
0713757-1		17A-67
0713757-1		21 -26
0713757-1		21B-24
0713770-1		17 -42
0713770-10		53G-82
0713770-10		53J- 9
0713770-11		53L- 9
0713770-11		53N- 9
0713770-11		53Q-11
0713770-200		17 -42
0713770-200		53C-79
0713770-9		53E-87
0713771-1		53C-92
0713772-1		53C-88
0713774-1		53C-94
0713775-1		53C-80
0713775-1		53E-77
0713775-1		53G-72
0713775-1		53J- 3
0713775-1		53L- 3
0713775-1		53N- 3
0713775-1		53Q- 3
0713776-1		53C-86
0713776-1		53E-84
0713776-1		53G-79
0713776-1		53J-11
0713776-1		53L-11
0713776-1		53N-11
0713776-1		53Q-13
0713777-3	¤	55A- 1
0713778-1		55A-13
0713778-4		55A-14
0713778-7		55A-14
0713778-9		55A-14
0713779-1		53C-96
0713779-1		53E-86
0713779-1		53G-81
0713779-1		53J-12
0713779-1		53L-12
0713779-1		53N-12
0713779-1		53Q-14
0713781-1		53A-48
0713781-2		53C-56
0713783-1		53C-84
0713783-3		53E-82
0713783-3		53G-77
0713783-3		53J-23
0713783-3		53L-24
0713783-3		53N-25
0713783-3		53Q-31
0713784-2		19 - 4A
0713785-1		55A- 7
0713786-1		53C-82
0713787-1		17 -34
0713787-2		17 -34
0713787-3		17 -34
0713787-4		17 -34
0713787-4		17A-34
0713787-5		17A-34
0713788-3		27A- 5
0713789-1		17 -69
0713790-1		17 -41
0713790-4		17 -41
0713791-2	¤	53A- 7

PART NUMBER		FIGURE AND INDEX NO.
0713791-3	¤	53A- 5
0713792-1	¤	53A- 1
0713792-2	¤	53A- 2
0713792-3	¤	53A- 1
0713792-7	¤	53A- 1
0713793-1	¤	53A- 4
0713793-1	¤	53C- 2
0713794-1	¤	53A- 6
0713796-1		55A- 4
0713796-2		53A-63
0713797-1		53A-62
0713798-1		53A-61
0713799-1		53A-60
0713800-5		53C- 5
0713801-1		53C-93
0713801-2		53C-97
0713801-2		53E-89
0713804-1		17 -70
0713804-2		17 -71
0713805-1		17 -72
0713809-1		53C-83
0713809-1		53E-99B
0713809-1		53G-92
0713809-1		53N-13
0713809-1		53Q-15
0713809-2		53J-13
0713809-2		53L-13
0713811-1	¤	75 -29
0713811-2	¤	75 -29
0713811-3	¤	75 -29
0713813-1		57A-12
0713815-1		53A- 5
0713816-2		53A-24
0713816-2		53C-29
0713817-1		57A-16
0713817-4		57B-17
0713819-1		57A-15
0713820-1		53A- 8
0713820-1		53C- 7
0713822-1		27A- 6
0713823-1		53A-24
0713823-1		53C-29
0713840-1		53A-67
0713846-1		17 -44A
0713847-1		17 -44B
0713847-11		17A-46
0713847-12		45A- 7A
0713847-4		45A- 7A
0713854-1		53J-97
0713854-1		53L-97A
0713854-1		53N-97A
0713854-1		53Q-98C
0713854-2		53J-97
0713854-2		53L-97A
0713854-2		53N-97A
0713854-2		53Q-98C
0713854-3		53J-97
0713854-4		53L-97A
0713854-4		53N-97A
0713854-4		53Q-98C
0713856-2		53C-90
0713856-2		53E-99A
0713856-2		53G-91
0713856-6		53J-24
0713859-1		17 -72
0713859-6		17 -72
0713860-1		55A- 5
0713861-1		53C-76
0713861-1		53E-70
0713861-2		53C-77
0713861-2		53E-70
0713863-2	¤	53C-75
0713863-4	¤	53C- 5
0713863-6	¤	53C-74

PART NUMBER		FIGURE AND INDEX NO.
0713864-1		53C-85
0713864-1		53E-83
0713864-1		53G-78
0713864-1		53J-14
0713864-1		53L-14
0713864-1		53N-14
0713864-1		53Q-16
0713865-1	¤	53C- 1
0713865-18	¤	53C- 1
0713865-6	¤	53C- 1
0713866-1	¤	53C- 4
0713866-10	¤	53K- 5
0713866-10	¤	53M- 5
0713866-6	¤	53E- 6
0713866-6	¤	53G- 7
0713866-6	¤	53J-39
0713866-6	¤	53L-40
0713866-9	¤	53F- 5
0713866-9	¤	53H- 5
0713866-9	¤	53K- 5
0713866-9	¤	53M- 5
0713874-3		53C-98
0713874-4		53C-99
0713874-6		53C-68
0713881-1	¤	55A- 2
0713881-10	¤	55A- 2
0713881-11	¤	55A- 2
0713881-13	¤	55A- 2
0713881-2	¤	55A- 2
0713883-1		55A- 5
0713931-7		53L-29
0713934-1	¤	53G-62
0713934-1	¤	53J-52
0713935-1		17A-44
0713935-2		17A-44
0713937-3		53N-18
0713938-2		53J-31
0713938-2		53L-31
0713938-3		53N-32
0713939-3		53N-15
0713940-200		17A-42
0713940-200		53J- 1
0713940-201		17A-42
0713940-201		53L- 1
0713940-3		17A-42
0713940-3		53N- 1
0713941-1		53J-30
0713941-3		53J-30
0713941-5		53L-29
0713941-5		53N-30
0713941-5		53Q-35
0713943-1		17A-72
0713944-1		17A-73
0713944-1		76A- 6A
0713945-11		56 -60
0713945-3		56 -60
0713946-1		56 -38
0713951-3		23A-23
0713951-4		23A-23
0713952-1		17 -65
0713952-1		17A-66
0713952-1		70 -32
0713954-1		53L-44
0713954-1		53N-47
0713955-1		53L-46
0713955-1		53N-49
0713955-1		53Q-55
0713955-2		53L-47
0713955-2		53N-50
0713955-2		53Q-56
0713955-3		55A- 8A
0713959-1		71A-31C
0713960-1		74A-11A
0714002-1		45B- 6

PART NUMBER		FIGURE AND INDEX NO.
0714002-4		45B- 6
0714002-7		45B- 6
0714002-8		45B- 6
0714003-1		45B- 7
0714004-1	#	51E-
0714004-2	#	51E-
0714004-200		51E- 1
0714004-201		51E-11
0714004-3	#	49B-
0714004-4		51E-17
0714004-5	#	51E- 7
0714004-6	#	49B-16
0714004-7	#	49B-10
0714005-1		52D-
0714005-3	#	52D-13
0714005-4	#	52D-15
0714006-1	¤	46 -12
0714006-2	¤	46 -12
0714008-1	#	51F-
0714008-10		49C-11
0714008-10		51F- 7A
0714008-2	#	51F-
0714008-3	#	49C-
0714008-4	#	51F-15
0714008-5	#	51F- 7
0714008-6	#	49C-16
0714008-7	#	49C-10
0714009-1		52B-
0714009-2	#	52B-
0714009-3	#	52B-24
0714009-4	#	52B-24
0714009-5	#	52B- 8
0714009-6	#	52B- 8
0714009-7	#	52B-33
0714009-8	#	52B-34
0714010-1	¤	51F-19
0714010-2	¤	51F-19
0715001-1	¤	49 -12
0715001-1	¤	51A-12
0715004-1	¤	52A-40
0715004-2	¤	52A-41
0715007-1	¤	47B- 5
0715007-1	¤	94 - 2
0715007-3	¤	47B- 6
0715007-4	¤	94 - 2
0715007-5	¤	47B- 5
0715008-3	¤	46 - 7
0715008-4	¤	46 - 7
0715008-7	¤	46 - 7
0715008-8	¤	46 - 7
0715009-1	¤	45A-15A
0715009-2	¤	45A-16
0715009-5	¤	45A-15A
0715009-6	¤	45A-16
0715010-1	¤	45A-24
0715010-2	¤	45B-18
0715011-1	#	47B- 1
0715011-2	#	47B- 2
0715011-3	#	46 - 1A
0715011-4	#	46 - 1A
0715011-5	#	47B-10
0715011-6	#	47B-11
0715013-1	#	47B- 1
0715013-2	#	47B- 2
0715013-3	#	46 - 1A
0715013-4	#	46 - 1A
0715013-5	#	47B-10
0715013-6	#	47B-11
0715016-1	¤	52A-40
0715016-1	¤	52B-37
0715016-2	¤	52A-41
0715016-2	¤	52B-38
0715017-1		52B-10
0715017-1	¤	52A- 7

PART NUMBER		FIGURE AND INDEX NO.
0715021-1	#	47C- 1
0715021-2	#	47C- 2
0715021-3	#	46 - 1A
0715021-4	#	46 - 1A
0715021-5	#	47C-12
0715021-6	#	47C-13
0715022-1	¤	47C- 5
0715022-10	¤	45B-11
0715022-12	¤	47C- 8
0715022-13	¤	47C- 7
0715022-2	¤	47C- 6
0715022-3	¤	47C- 7
0715022-4	¤	47C- 8
0715022-7	¤	45B-10
0715022-8	¤	45B-10
0715022-9	¤	45B-11
0715023-1	¤	47C-21
0715023-1	¤	47D-26
0715023-16	¤	47D-24
0715023-3	¤	47C-19
0715023-3	¤	47D-25
0715023-4	¤	47C-20
0715023-5	¤	45B-15
0715023-8	¤	45B-16
0715024-1		47D-10
0715024-2		47D-11
0715026-1		52D- 6
0715027-1	#	47C- 1
0715027-2	#	47C- 2
0715027-3	#	46 - 1A
0715027-4	#	46 - 1A
0715027-5	#	47C-12
0715027-6	#	47C-13
0715028-1	#	47D- 1
0715028-2	#	47D- 2
0715028-3	#	46 - 9
0715028-30	¤	47D-24A
0715028-4	#	46 - 9
0715028-54	#	47D-19
0715028-64	#	47D-20
0715031-1	¤	46 -11A
0715032-1	¤	47D-13
0715032-10	¤	45B-11
0715032-15	¤	46 -13
0715032-16	¤	46 -13
0715032-2	¤	47D-14
0715032-3	¤	47D-15
0715032-4	¤	47D-16
0715032-7	¤	45B-10
0715032-8	¤	45B-10
0715032-9	¤	45B-11
0716125-2		8 -10
0716127-1		8 -12
0716127-1		82 - 1
0716127-1		82A- 1
0716136-1		84A-20
0716607-1		82 -27
0716607-1		82A-30
0716607-3		82A-30
0716611-1		82 -25
0716611-1		82A-28
0716612-201		82 -32
0716612-201		82A-38
0716613-1		82 -21
0716613-1		82A-24
0716613-200		82 -23
0716613-200		82A-26
0716614-3		8 -44
0716614-4		8 -44
0716614-6		8 -44
0716615-1		82A-33
0716615-2		82A-33
0716616-1		82A- 6
0716617-1		82A-10

PART NUMBER	FIGURE AND INDEX NO.
0716617-2	82A-11
0716622-1	82A- 7
0716623-2	82A-39A
0716624-1	82A-39D
0716653-2	25 -47
0717009-1	41 -22
0717009-1	42 -21
0717010-11	41 -15
0717010-12	42 -12
0717010-16	42 -29
0717010-16	42A-38
0717010-18	42 -29
0717010-21	41 -16
0717010-23	41 -25A
0717010-23	41A-36
0717010-24	42 -15A
0717010-24	42A-19
0717010-27	42 -30
0717010-27	42A-39
0717010-28	41A-19
0720005-1	4 -40
0720005-1	4A-41
0720005-1	48-40
0720600-200	8 -32
0720601-11	5 - 1
0720601-12	5 - 1
0720601-14	5 -18
0720601-14	5A-28
0720601-15	5 -29
0720601-15	5A-41
0720601-16	5 -30
0720601-16	5A-42
0720601-17	7 - 2
0720601-17	7 - 2
0720601-18	7 - 7
0720601-19	7 - 1
0720601-20	7 -13
0720601-201	4 -
0720601-202	4 -
0720601-203	4 -
0720601-204	4 -
0720601-205	5 -15
0720601-205	5A-27
0720601-207	4 -
0720601-208	4 -
0720601-209	4 -
0720601-21	7 -11
0720601-21	7A- 9
0720601-210	4 -
0720601-211	4 -
0720601-212	4 -
0720601-213	4 -
0720601-214	4 -
0720601-22	7 - 6
0720601-23	7 - 6
0720601-24	7 -14
0720601-25	7 -12
0720601-25	7A-10
0720601-26	7 -12
0720601-29	5 -
0720601-3	5 -
0720601-30	5 -
0720601-31	7 - 6
0720601-32	7 - 6
0720601-4	5 -
0720601-5	5 -14
0720601-5	5A-26
0720601-57	5 - 1
0720601-57	5A- 1
0720601-58	5 - 1
0720601-58	5A- 1
0720601-59	5 -
0720601-6	5 -14
0720601-6	5A-26

PART NUMBER	FIGURE AND INDEX NO.
0720601-60	5 -
0720601-61	5 -
0720601-62	5 -
0720601-64	7A-10
0720601-64	7 -12
0720601-67	7 - 6
0720601-68	7 - 6
0720601-71	7 - 6
0720601-72	7 - 6
0720601-91	7 - 6
0720601-93	7 - 6
0720602-1	5 -22
0720602-1	5A-34
0720603-1	5 - 2
0720603-1	5A- 2
0720603-2	5 - 2
0720603-2	5A- 2
0720604-1	5 -12
0720604-1	5A-22
0720606-1	4 -35
0720606-10	4 -38
0720606-10	4A-39
0720606-10	4B-36
0720606-12	4 -36
0720606-2	4 -36
0720606-3	4 -37
0720606-3	4A-38
0720606-3	4B-35
0720606-4	4 -38
0720606-5	4A-36
0720606-5	4B-35
0720606-8	4A-37
0720606-8	4B-36
0720607-1	4 -23
0720607-1	4A-22
0720607-2	4 -24
0720607-2	4A-23
0720607-3	5 -26
0720607-3	5A-38
0720607-4	5 -31
0720607-4	5A-43
0720608-15	4 -25
0720608-15	4A-24
0720608-2	5 -32
0720608-2	5A-44
0720608-26	5A-44
0720608-3	5 -25
0720608-3	5A-37
0720608-7	4 -25
0720609-1	5 -23
0720609-1	5A-35
0720610-1	5 -27
0720610-1	5A-39
0720610-2	5 -28
0720610-2	5A-40
0720611-2	5A-12
0720611-4	5 - 9
0720611-4	5 - 9
0720611-4	5A-15
0720611-4	5A-17
0720611-5	5 -10
0720611-5	5A-17
0720611-7	5A-20
0720612-1	7 - 9
0720612-1	7A- 7
0720612-2	7 - 5
0720612-2	7A- 4
0720613-1	3 -58
0720613-2	3 -58
0720614-1	3 -56
0720614-2	3 -56
0720615-1	3 -52
0720615-2	3 -52
0720615-7	69 -31
0720615-8	69 -31
0720616-1	4 -44
0720617-5	4 -10
0720617-5	4A- 9
0720617-5	4B- 9
0720618-1	3 -52
0720618-2	3 -52
0721100-23	4 - 6
0721100-23	4A- 5
0721100-24	4 - 6
0721100-24	4A- 5
0721100-6	4 - 8
0721100-6	4 -16
0721100-6	4A- 7
0721100-6	4A-15
0721100-6	4B- 7
0721100-6	4B-15
0721100-7	4 - 9
0721100-7	4 -15
0721100-7	4A- 8
0721100-7	4A-14
0721100-7	4B- 8
0721100-7	4B-14
0721105-10	81 -22
0721105-13	81 -24
0721105-14	81 -22
0721105-15	81 -22
0721105-3	81 -25
0721105-4	81 -26
0721105-5	81 -28
0721105-7	81 -24
0721105-8	81 -27
0721107-1	3 -31
0721107-1	4B-25
0721107-2	3 -31
0721107-2	4B-25
0721111-21	4 -11
0721111-21	4A-10
0721111-21	4B-10
0721111-23	4 -13
0721111-23	4A-12
0721111-23	4B-12
0721111-24	4 -13
0721111-24	4A-12
0721111-24	4B-12
0721111-25	4 -11
0721111-25	4A-10
0721111-25	4B-10
0721111-26	4 -43
0721111-26	4A-44
0721111-28	4 -41
0721111-3	4 -43
0721111-3	4A-44
0721111-3	4B-44
0721111-33	4A-44
0721111-33	4B-44
0721111-4	4 -43
0721111-5	4 -41
0721112-1	4 -36
0721112-3	4 -35
0721114-1	81 -21
0721114-2	5B-15
0721115-1	5B-16
0721115-1	81 -20
0721117-1	4A-37
0721117-1	4B-36
0721117-3	4A-36
0721117-3	4B-35
0721182-200	4A-
0721182-201	4A-
0721182-202	4A-
0721182-203	4A-
0721182-204	4A-
0721182-205	4A-
0721182-206	4A-
0721182-207	4A-
0721182-5	5A-
0721182-6	5A-
0721182-7	5A-
0721182-8	5A-
0721201-51	7 -16
0721201-64	7 -16
0721306-1	8 -39
0721400-13	6 - 7
0721400-13	6A- 8
0721400-14	6 - 7
0721400-14	6A- 8
0721400-17	6 - 8
0721400-17	6A- 9
0721400-18	6 - 8
0721400-18	6A- 9
0721400-19	6 -15
0721400-20	6 -15
0721400-23	6 -16
0721400-24	6 -16
0721400-25	6 -
0721400-26	6 -
0721400-27	6 -16
0721400-28	6 -16
0721400-29	6 -
0721400-3	6 - 1
0721400-3	6A- 1
0721400-30	6 -
0721400-31	6 -18
0721400-31	6A-20
0721400-32	6A- 3
0721400-32	6 - 3
0721400-33	6A-19
0721400-33	6 -17
0721400-34	6 - 3
0721400-35	6 - 4
0721400-35	6A- 5
0721400-36	6 -
0721400-37	6 -
0721400-38	6 -
0721400-39	6 -
0721400-4	6 - 1
0721400-4	6A- 1
0721401-11	6A-
0721401-12	6A-
0721401-13	6A-12
0721401-14	6A-12
0721401-15	6A-17
0721401-16	6A-17
0721401-5	6A-18
0721401-6	6A-18
0721402-1	6 -10
0721402-1	6A-11
0721402-2	6 -10
0721402-2	6A-11
0721402-3	6 - 9
0721402-3	6A-10
0721402-4	6 - 9
0721402-4	6A-10
0722012-11	4A-42
0722012-11	4B-41
0722012-12	4A-42
0722012-16	4A-42
0722012-16	4B-41
0722014-1	7 -16
0722014-1	7A-14
0722014-2	7 -16
0722014-21	7A-14
0722015-55	7 -18
0722015-60	7A-16
0722015-61	7A-16
0722015-68	7 -18
0722016-1	4A-20

PART NUMBER	FIGURE AND INDEX NO.
0722016-1	4B-20
0722016-2	4A-20
0722016-2	4B-20
0722017-1	4B- 5
0722017-2	4B- 5
0722100-1	5 -16
0722100-1	5A-30
0722100-3	3 -28
0722100-4	3 -27
0722180-1	5B-
0722180-10	5B-
0722180-13	5B- 1
0722180-14	5B- 1
0722180-19	5B- 1
0722180-2	5B-
0722180-20	5B- 1
0722180-49	5B-17
0722180-50	5B-18
0722180-51	5B-16
0722180-52	5B-16
0722180-9	5B-
0722182-1	4B-
0722182-13	7A- 1
0722182-14	7A- 5
0722182-15	7A- 5
0722182-16	7A- 1
0722182-17	7A- 5
0722182-17	7A- 5
0722182-19	7A-11
0722182-2	4B-
0722182-24	7 -14
0722182-24	7A-12
0722182-3	4B-
0722182-4	4B-
0722183-1	5B- 2
0722183-2	5B- 2
0722184-1	5B-10
0722185-1	5B-11
0722185-2	5B-12
0722186-1	5B-13
0722187-7	4B-46
0722187-8	4B-46
0722188-1	5B-20
0722188-2	5B-21
0722189-1	5B-22
0722189-2	5B-23
0722190-1	5B-24
0722190-2	5B-25
0722191-1	5B-26
0722191-2	5B-27
0722192-1	5B-28
0722192-2	5B-29
0722193-1	5B-30
0722193-2	5B-31
0722194-1	4B-17
0722194-2	4B-17
0722195-1	4A-18
0722195-1	4B-18
0722196-1	4A-20
0722196-1	4B-20
0722196-2	4A-20
0722196-2	4B-20
0722197-1	4B-21
0722197-2	4B-21
0722197-3	4A-21
0722197-4	4A-21
0722198-1	4 -23
0722198-1	4A-22
0722198-1	4B-22
0722199-1	4 -24
0722199-1	4A-23
0722199-1	4B-23
0722200-1	4B-24
0722200-2	4B-24

PART NUMBER	FIGURE AND INDEX NO.
0722201-1	4 -17
0722201-1	4A-16
0722201-1	4B-16
0722202-1	5B- 7
0723200-10	3 -31
0723200-11	3 -31
0723200-12	3 -31
0723200-5	3 -31
0723200-6	3 -31
0723200-9	3 -31
0723201-1	3 -49
0723201-2	3 -49
0723201-3	3 -49
0723201-4	3 -49
0723600-6	11 - 9
0723601-2	11 -14
0723604-1	11 -10
0723605-3	11 -18
0723605-4	11 -18
0723605-6	3 -15
0723605-6	11 -23
0723605-7	3 -14
0723605-7	11 -22
0723605-8	3 -15
0723605-8	11 -23
0723605-9	3 -14
0723605-9	11 -22
0723610-5	11 - 1
0723610-6	11 - 1
0723612-3	11 -19
0723612-4	11 -19
0723614-1	11 - 8
0723615-200	3 -30
0723627-1	4 -31
0723627-1	4A-30
0724106-1	768-35
0724107-1	768-43
0724108-1	4 -21
0724108-1	4 -22
0724108-1	4A-20
0724108-1	4A-21
0724108-1	4B-21
0724108-1	768-42
0724108-2	768-42
0724115-1	9 -21
0724115-1	9 -21
0724115-3	9 -21
0724115-4	9 -21
0726001-17	8 - 1
0726001-18	8 - 1
0726001-3	8 - 3
0726001-7	8 -29
0726002-1	8 -25
0726002-1	8 -25
0726110-1	8 -26
0726603-14	8 - 7
0726603-16	8 - 8
0731601-1	12 -14
0731602-1	12 -12
0731602-1	12A-18
0731602-1	12B-18
0731602-1	12 -13
0731602-2	12A-19
0731602-2	12B-19
0731602-2	12 -11
0731603-1	12 -39
0731604-3	12 -40
0731604-4	12 -28
0731604-5	12A-30
0731604-5	12 -29
0731604-6	12A-31
0731604-6	12 -46
0731605-1	12 -42
0731606-1-791	12A-39
0731606-1-791	

PART NUMBER	FIGURE AND INDEX NO.
0731606-3	92A-10
0731606-3-791	12 -44
0731606-3-791	12A-40
0731606-6-791	13 -31A
0731606-8	92A-13
0731607-1	92A- 9
0732100-10	15 -11
0732100-10	15A-31
0732100-11	15 -10
0732100-3	15 -12
0732100-4	15 - 9
0732100-4	15A-30
0732100-6	14 -37
0732100-6	14A-11
0732100-7	14 -38
0732100-7	14A-12
0732100-8	14 -39
0732101-4	14A-10
0732103-1	14 -26
0732103-2	14 -26
0732106	14 -27
0732106	14A-33
0732106-1	14 -27
0732106-1	14A-32
0732600-1	14 -
0732600-2	14 - 9
0732600-3	14 - 6
0732600-3	14A-42
0732600-8	14 - 7
0732600-9	14 - 8
0732601-3	14A-48
0732602-1	14 -33B
0732602-2	14 -34
0732603-1	14 -35
0732603-2	14A- 9
0732604-1	14 -36
0732605-1	14 -12
0732606-1	14 -14
0732607-1	14 -13
0732608-1	14 -11
0732609-1	14 -12
0732610-1	14 -24
0732610-2	14 -23
0732610-3	14 -22
0732610-4	14 -21
0732610-5	14 -20
0732610-5	14A-17
0732610-6	14A-18
0732611-1	14 -15
0732611-1	14A-23
0732611-2	14 -16
0732611-2	14A-24
0732611-3	14 -17
0732611-3	14A-25
0732611-4	14 -18
0732611-4	14A-26
0732611-6	14 -19
0732611-6	14A-27
0732612-1	14 -28
0732612-2	14 -28
0732613-1	14 -10
0732614-1	14 -43
0732614-1	14A-56
0732614-2	14 -43
0732614-2	14A-57
0732615-1	14 -41
0732615-1	14A-53
0732615-2	14 -41
0732615-2	14A-54
0732615-5	14A-53
0732615-6	14A-54
0732617-1	14 -33B
0732618-1	14 -33A
0733101-2	15 -14A

PART NUMBER	FIGURE AND INDEX NO.
0733101-3	15 -14
0733103	13 -18
0733103-1	13 -18
[illegible]	13 -12
0733113-1	13 -17
0733113-1	13 -18
0734102-2	15A- 6
0734102-7	15A-11
0734102-8	15A-12
0734110-1	15 - 7
0734110-1	15A- 5
0734110-2	15 - 8
0734110-2	15A- 5
0734110-3	15A- 9
0734110-4	15A-10
0734110-5	15A- 7
0734110-6	15A- 8
0734110-7	15A-13
0734600-1	15 -
0734600-10	15 -37
0734600-11	15 -48
0734600-12	15 -49
0734600-13	15 -50
0734600-14	15 -28
0734600-15	15 -26
0734600-17	15 -33
0734600-17	15A-46
0734600-18	15 -34
0734600-20	15 -24A
0734600-200	15 -
0734600-201	15 -
0734600-24	15 -
0734600-25	15 -45
0734600-27	15 -
0734600-28	15 -29
0734600-29	15 -29
0734600-3	15 -32
0734600-4	15 -25
0734600-5	15 -24
0734600-7	15 -29
0734600-8	15 -31
0734600-8	15A-44
0734600-9	15 -27
0734601-1	15 - 4
0734601-2	15 - 5
0734601-3	15 - 6
0734602-1	15 -17
0734602-2	15 -21
0734602-2	15A-14
0734602-3	15 -19
0734602-3	15A-16
0734602-4	15 -18
0734602-4	15A-18
0734602-5	15 -22
0734602-5	15A-15
0734602-6	15 -20
0734602-6	15A-17
0734602-7	15 -17
0734602-8	15 -17
0734603-1	15 -51
0734603-1	15A-40
0734604-1	15 -13
0734604-2	15 -13
0734604-3	15 -13
0734605-1	15 -23
0734605-1	15A-26
0734606-1	15 -35
0734607-1	15 -36
0734607-2	15 -46
0734608-1	15 -30
0734609-1	15 -30
0734609-10	15 -30
0734609-9	15 -30
0734610-2	15 -14

PART NUMBER	FIGURE AND INDEX NO.
0734610-3	15 -14A
0741005-251	39B-40
0741015-1	39 -10
0741015-1	39A-10
0741016-1	39 - 8
0741016-1	39A- 8
0741046-11	39 -61
0741046-14	39 -62
0741046-15	39 -61
0741046-200	39 -55
0741046-201	39 -55
0741046-202	39 -55
0741046-203	39 -55
0741046-7	39 -66
0741046-7	39A-55
0741046-7	39B-58
0741046-8	39 -67
0741046-8	39A-55
0741046-8	39B-58
0741047-2	39 -70
0741047-2	39A-50
0741047-2	39B-53
0741048-1	39 -22
0741048-2	39 -72
0741048-7	39 -72
0741048-7	39A-61
0741048-7	39B-72
0741048-8	39 -22
0741048-8	39A-21
0741048-8	39B-30
0741601-1	39 - 1
0741601-1	39A- 1
0741601-2	39 - 1
0741601-2	39A- 1
0741602-1	26 - 7
0741602-2	26 - 8
0741603-1	26 - 1
0741603-2	26 - 2
0741604-1	39 - 2
0741604-1	39A- 2
0741605-1	39 - 7
0741605-1	39A- 7
0741605-2	39 - 7
0741605-2	39A- 7
0741610-11	39 -41
0741610-12	39 -43
0741610-13	39 -39
0741610-5	39 -34
0741610-6	39 -34
0741611-1	39 -32
0741611-1	39A-29
0741611-2	39 -32
0741611-2	39A-29
0741612-1	39 -31
0741612-1	39A-28
0741613-1	39 -42
0741613-2	39 -43
0741614-1	39 -48
0741614-2	39 -48
0741615-10	39 -34
0741615-10	39A-31
0741615-3	39 -34
0741615-4	39 -34
0741615-9	39 -34
0741615-9	39A-31
0741616-1	39 -54
0741616-1	39A-44
0741618-1	39 -43
0741618-1	39A-37
0741618-2	39 -43
0741618-2	39A-37
0741619-1	39 -49
0741619-1	39A-41
0741622-1	39B-46

PART NUMBER		FIGURE AND INDEX NO.
0741622-2		39B-46
0741623-1		39B- 9
0741623-4		39B-14
0741624-17		39B-44
0741624-18		39B-44
0741626-1		26A- 4
0741626-2		26A- 5
0741627-1		26A- 1
0741627-2		26A- 2
0741629-1		39B- 4
0741629-2		39B- 4
0741630-1		39B- 1
0741630-2		39B- 1
0741632-1		39B- 6
0741633-1		39B- 7
0741634-17		39B-64
0741634-18		39B-64
0741634-2		39B-64
0741634-5		39B-68
0741634-8		39B-64
0742410-14		33 -26
0742410-15		33 -22
0742410-27		33 -22
0742410-8		33 -25
0743001-2		36 -
0743001-4		37 -
0743009-1		33 -20
0743009-1		33A-22
0743009-1		35A-11
0743600-200		35 -
0743600-200		33 - 1
0743600-201		35A- 2
0743600-202		35A-
0743600-4		35 - 2
0743601-1		35 -27
0743601-1		35A-30
0743602-1		34 - 1
0743603-1		38 - 5
0743603-8		38 - 5
0743604-1		33 - 7
0743604-1		33A- 7
0743604-4		33 - 7
0743604-4		33A- 7A
0743604-6		33 - 7
0743605-1		35 -29
0743605-1		35A-32
0743606-1		17 -15
0743606-2		17 -15
0743606-2		17A-15
0743607-1		35 - 1
0743607-1		35A- 1
0743608-1		34 -13
0743608-2		34 -14
0743609-10		33 -32
0743609-201	##	33 -17
0743609-202		33 -25
0743609-5		33 -32
0743609-6		33 -27
0743609-8		33 -17
0743610-1		34 - 4
0743612-1		35 - 9
0743612-1		35A- 4
0743613-1		35 -11
0743613-1		35A- 3
0743616-1		38 -10
0743616-2		2 -37
0743616-2		38A-15
0743618-2		33A-17
0743618-4		33A-27
0743619-1		33A-26
0743621-200		33 - 1
0743621-200		35 -
0743621-201		35A- 2
0743621-202		35A-

PART NUMBER	FIGURE AND INDEX NO.
0743621-4	35 - 2
0743621-9	35 -14
0743621-9	35A-17
0743622-1	38B-12
0743623-1	38B- 6
0743623-3	38B- 8
0743623-4	38B- 9
0743623-6	38B- 7
0743624-1	38B-
0743625-11	33 -27A
0743625-14	33 -17A
0743625-15	33 -33A
0743625-7	33 -33
0743625-9	33 -26A
0743626-5	35 -11
0743626-5	35A- 3
0743627-1	33 -34
0743627-2	33 -34
0743627-3	33 -34
0743627-4	33 -34
0743627-5	33 -34
0743627-6	33 -34
0743628-1	33 - 8A
075000-1	74A-27
0750025-1	88 -51
0750025-1	88A-58
0750025-1	88B-53
0750032-1	82A-42
0750035-1	86 -17
0750036-1	87 - 3
0750036-1	87 -11
0750038-3	63A-41
0750038-4	63 -65
0750038-4	63A-40
0750101-61	64 -
0750101-66	64A-
0750103-1	87 - 2
0750111-19	63 -23
0750111-8	66 -20
0750113-1	63 -26
0750117-21	66 -23
0750117-31	66 -45
0750121	63 -43
0750125-1	85 - 1
0750125-10	85 -15
0750125-11	85 -14
0750125-2	85 - 2
0750125-3	85 - 3
0750125-4	85 - 6
0750125-5	85 - 9
0750125-6	85 -10
0750125-7	85 -11
0750125-8	85 -12
0750125-9	85 -13
0750126-4	63 -28
0750128-100	66 -11
0750128-108	66 -25
0750128-11	66 -14
0750128-11	66 -29
0750128-110	66 -25
0750128-13	66 -10
0750128-14	66 -30
0750128-15	66 -31
0750128-16	66 -22
0750128-17	66 -15
0750128-21	66 -21
0750128-37	66 - 3
0750128-42	66 - 4
0750128-44	66 -11
0750128-50	66 -11
0750128-53	66 -25
0750128-68	66 -25
0750128-73	66 - 7
0750128-74	66 - 6

PART NUMBER	FIGURE AND INDEX NO.
0750128-76	66 - 1
0750128-82	66 -108
0750128-93	66 - 7
0750128-94	66 - 6
0750130-3	65 -10
0750130-31	65 -13
0750130-4	65 -11
0750130-42	65 - 7
0750130-48	65 - 9
0750130-5	65 -12
0750130-51	65 - 3
0750130-53	65 - 1
0750130-54	65 - 2
0750130-59	65 - 1
0750130-6	65 - 6
0750130-60	65 - 2
0750130-61	65 - 3
0750131-1	63 -20
0750132-1	63 - 3
0750132-2	63 - 4
0750133-21	63 -22
0750133-22	63 -30
0750133-7	63 -21
0750133-8	63 -22
0750133-9	63 -25
0750135-1	66 -34
0750135-1	66 -37
0750135-10	66 -41
0750135-11	66 -41
0750135-3	66 -40
0750135-3	66 -41
0750135-4	66 -43
0750135-8	66 -42
0750137	63 - 2
0750138	62 -22
0750139	62 -42
0750140-5	63A-25
0750140-6	63 -44
0750142-1	63 -34
0750142-1	63A-37
0750144-1	63 -18
0750144-20	63 -31
0750144-21	63 -18
0750144-6	63 -31
0750148-1	66 -50
0750148-1	66 -53
0750148-2	66 -50
0750148-3	66 -53
0750149-10	66 -57
0750149-2	66 -56
0750149-4	66 -59
0750149-7	66 -55
0750150-1	63 -41
0750152-1	66 -49
0750152-2	63 -51
0750152-3	63 -82
0750152-3	66 -49
0750156-1	63 -27
0750157	63 -83
0750159-1	62 -41
0750161-200	65A-
0750161-22	65A- 3
0750161-24	65A- 2
0750161-25	65A- 8
0750161-28	65A- 5
0750161-31	65A- 1
0750161-36	65A- 7
0750161-40	65A- 6
0750161-49	65A-
0750161-50	65A-
0750161-51	65A- 1
0750161-57	65A-
0750161-58	65A- 6
0750161-63	65A-

PART NUMBER	FIGURE AND INDEX NO.
0750161-64	65A- 1
0750161-67	65A- 1
0750184-1	66 - 1
0750184-2	66 - 3
0750187-1	66 -55
0750187-2	66 -59
0750187-3	66 -55
0750188-1	66 -57
0750188-4	66 -57
0750196-1	66 - 1
0750196-3	66 - 3
0750197-1	66 -55
0750198-10	66 -55
0750212-1	63 -83
0750213-1	90 -40
0750216-1	63A-32
0750216-1	90 -19
0750217-1	90 -34
0750220-1	90 -35
0750220-1	95 - 9
0750221-1	90 -41
0750223-1	62 -28
0750225-1	63 -67
0750225-2	63 -69
0750230-1	84A-30
0750233-1	62 -28
0750236-1	61C-57A
0750239-3	61C-57A
0750282-1	62 -43
0750283-1	63 -45
0750606-3	66 -108
0750607-4	63 -66
0750607-5	63 -66
0750612-1	62 -28
0751600-1	63 - 8
0752000-117	61 -15
0752000-56	61 -12
0752000-64	61 - 4
0752000-64	61 - 4A
0752004-1	58 -11
0752004-6	58 -10
0752005-4	58 - 6
0752005-4	58A- 6
0752013-1	61 -45
0752013-1	61C-18
0752013-2	61 -46
0752013-2	61C-18
0752015-10	61 -21
0752015-10	61A-25
0752016-10	61 -39
0752016-10	61A-37
0752016-10	61B-41
0752016-10	61C-35
0752016-11	61 -39
0752016-11	61A-37
0752016-11	61B-41
0752016-11	61C-35
0752016-12	61 -39
0752016-12	61B-41
0752016-14	61B-41
0752016-14	61C-35
0752016-2	61A-37
0752016-7	61 -39
0752016-7	61A-37
0752016-7	61B-41
0752016-7	61C-35
0752016-8	61 -39
0752016-8	61A-37
0752019-10	61 -11
0752019-11	61 -10
0752021-1	61 -39
0752021-1	61A-37
0752021-1	61B-41
0752021-1	61C-35

PART NUMBER	FIGURE AND INDEX NO.
0752023-1	61 -40
0752023-1	61 -42
0752023-1	61A-38
0752023-1	61A-40
0752023-1	61B-43
0752023-1	61B-43A
0752023-1	61C-36
0752023-1	61C-38
0752023-2	61 -41
0752023-2	61 -42A
0752023-2	61A-39
0752023-2	61A-40A
0752023-3	61A-39
0752023-3	61A-40A
0752023-4	61B-43B
0752023-4	61C-39
0752023-5	61B-42
0752023-5	61C-37
0752024-3	58 - 1
0752024-3	59 -
0752026-6	61C-35
0752030-5	61 -10
0752030-6	61 -10
0752030-7	61 - 9
0752031-22	61 - 5
0752031-22	61A- 3
0752031-26	61 - 6
0752031-26	61A- 4
0752032-1	61 - 8
0752032-1	61A- 5
0752032-1	61B-22
0752032-1	61C-56
0752037-1	63 -54
0752038-1	63 -56
0752047-1	61C-35
0752048-1	61C-35
0752050-200	61B-48A
0752050-5	61B-48
0752050-6	61B-21
0752055-1	61B-65
0752055-1	61C-78
0752055-1	63 -65
0752056-1	61C-17
0752056-2	61C-52
0752058-1	61C-50
0752058-3	61C-49
0752058-4	61C-51
0752059-17	61C-55
0752059-18	61C-55
0752600-13	61 -32
0752600-13	61A-29
0752600-14	61 -32
0752600-14	61A-29
0752600-17	61 - 2
0752600-17	61A- 2
0752600-18	61 - 2
0752600-18	61A- 2
0752600-19	61 -31
0752600-19	61A-30
0752600-20	61 -31
0752600-20	61A-30
0752600-200	61 -20
0752600-201	61 -20
0752600-202	61A- 1
0752600-203	61A-20
0752600-21	61 -22
0752600-21	61 -22
0752600-21	61A-22
0752600-23	61 -30
0752600-23	61A-23
0752600-25	61 - 1
0752600-26	61 - 3
0752600-3	61 - 1
0752600-31	61 -22

PART NUMBER	FIGURE AND INDEX NO.
0752600-31	61A-21
0752600-32	61 -30
0752600-33	61 -35
0752600-37	61A- 8
0752600-38	61A- 9
0752600-4	61 -35
0752600-42	61A-27
0752600-43	61A-34
0752600-44	61A-28
0752600-5	61 -30
0752600-6	61 -30
0752600-7	61 - 3
0752601-1	61 -43
0752602-1	61 -38
0752602-1	61A-36
0752602-13	61B-40
0752602-13	61C-34
0752603-1	61 -44
0752603-1	61A-44
0752604-1	61 -34
0752604-3	61 -33
0752604-4	61 -33
0752604-5	61 -34
0752604-5	61A-33
0752604-5	61B-36
0752604-6	61 -33
0752604-6	61A-32
0752604-6	61B-35
0752605-1	61 -16
0752605-7	61 -17
0752606-1	61 -23
0752606-1	61A-24
0752606-1	61B-28
0752606-1	61C-45
0752607-1	61 -36
0752608-1	61 -35
0752608-1	61A-31
0752608-2	61 -35
0752608-2	61A-31
0752609-10	61 -51
0752609-10	61A-54
0752609-10	61B-57
0752609-11	61 -52
0752609-11	61A-55
0752609-11	61B-58
0752609-12	61 -53
0752609-12	61A-56
0752609-12	61B-59
0752609-13	61 -25
0752609-13	61A-45
0752609-13	61B-44
0752609-13	61C-40
0752609-14	61 -26
0752609-14	61A-46
0752609-14	61B-45
0752609-14	61C-41
0752609-15	61 -27
0752609-15	61A-47
0752609-15	61B-46
0752609-15	61C-42
0752609-16	61 -28
0752609-16	61A-48
0752609-16	61B-47
0752609-16	61C-43
0752609-19	61 -54
0752609-19	61A-57
0752609-19	61B-60
0752609-2	61 -57
0752609-2	61A-60
0752609-20	61 -55
0752609-20	61A-58
0752609-20	61B-61
0752609-20	61C-66
0752609-200	61 -47

PART NUMBER	FIGURE AND INDEX NO.
0752609-200	61A-50
0752609-200	61B-53
0752609-201	61 -48
0752609-201	61A-51
0752609-201	61B-54
0752609-202	61C-58
0752609-203	61C-59
0752609-27	61B-63
0752609-27	61C-68
0752609-28	61C-62
0752609-29	61C-63
0752609-30	61C-64
0752609-31	61C-65
0752609-35	61C-61
0752609-5	61 -55
0752609-5	61A-58
0752609-5	61B-61
0752609-5	61C-66
0752609-6	61 -55
0752609-6	61A-58
0752609-6	61B-61
0752609-6	61C-66
0752609-9	61 -50
0752609-9	61A-53
0752609-9	61B-56
0752610-1	61 -58
0752610-1	61A-61
0752610-1	61B-64
0752610-1	90 -22
0752611-1	90 -20
0752612-1	61 -24
0752612-1	61A-26
0752612-1	61B-29
0752612-1	61C-46
0752612-2	61 -24
0752612-2	61A-26
0752612-2	61B-29
0752612-2	61C-46
0752614-1	58 -13
0752615-1	58 -33
0752615-2	58 -16
0752616-1	58 -31
0752617-1	58 -29
0752618-1	58 -27
0752619-3	58 -18
0752619-3	60 -
0752620-1	58 -17
0752620-1	58 -34
0752620-1	58A-11
0752621-1	58 -35
0752623-1	61 -49
0752623-1	61A-52
0752623-1	61B-55
0752623-1	61C-60
0752624-1	61 -19A
0752624-8	61A-15
0752624-8	61B- 8
0752625-200	61 -56
0752625-200	61A-59
0752625-200	61B-62
0752625-200	61C-67
0752627-1	61B-20
0752635-1	61A-10
0752635-1	61B-12
0752635-2	61A-10
0752635-2	61B-12
0752636-1	61A-35
0752636-1	61B-38
0752637-1	58A- 5
0752637-11	58A- 3
0752637-5	58A- 3
0752639-1	61A-42
0752639-15	61A-43
0752639-16	61A-43

PART NUMBER	FIGURE AND INDEX NO.
0752639-17	61A-13
0752639-18	61A-13
0752639-2	61A-12
0752641-1	68B- 1
0752641-2	68B- 2
0752641-7	68B-10
0752643-1	68B- 3
0752644-1	61C-75
0752644-2	61C-76
0752644-5	61C-69
0752644-6	61C-70
0752645-1	61C-57
0752645-2	61C-57
0752646-1	61C-73
0752700-12	61B- 5
0752700-13	61B- 5
0752700-15	61B- 2
0752700-16	61B-27
0752700-16	61C-31
0752700-17	61B-33
0752700-18	61B-33
0752700-19	61B-37
0752700-20	61B-24
0752700-200	61B-23
0752700-201	61B-23
0752700-21	61B- 6
0752700-22	61B- 7
0752700-23	61B- 3
0752700-24	61B- 3
0752700-3	61B- 1
0752700-4	61B-31
0752700-5	61B-30
0752700-6	61B-32
0752700-7	61B-32
0752700-8	61B-25
0752700-8	61C-30
0752700-9	61B-26
0752700-9	61C-29
0752701-1	61B-18
0752706-200	61C-20
0752706-29	61C-43
0752706-3	61C- 1
0752706-30	61C-44
0752706-35	61C- 2
0752706-38	61C-32
0752706-39	61C-24
0752706-40	61C-25
0752706-7	61C-21
0752706-8	61C-22
0752707-1	61C-33A
0753000-1	21A-10
0753000-13	21 - 9
0753000-13	21A-11
0753000-13	21B-27
0753003-1	22 -25
0753004-1	21A-21
0753004-1	21B-28
0753004-2	21A-21
0753004-2	21B-28
0753010-1	70 - 2
0753011-1	70 - 1
0753027-1	17A-38
0753027-2	17A-39
0753028-1	17A-74
0753028-2	17A-74
0753029-1	21B-13
0753030-1	21B-14
0753030-2	21B-15
0753030-3	21B-16
0753030-6	21B-17
0753030-7	21B-17
0753030-8	21B-18
0753100-200	21A-
0753102-1	21A-22

PART NUMBER	FIGURE AND INDEX NO.
0753102-1	21B- 7
0753102-10	21B- 8
0753102-11	21 -20
0753102-11	21A-23
0753102-2	21A-23
0753102-2	21B- 8
0753102-5	21 -19
0753102-6	21 -20
0753102-9	21 -20
0753102-9	21A-23
0753102-9	21B- 8
0753103-2	21B-
0753105-3	21B- 4
0753106-8	21B- 6
0753107-4	21B- 9
0753107-7	21B-10
0753107-8	21B-11
0753108-3	21B- 5
0753108-4	21B- 5
0753600-11	21 - 2
0753600-11	21A- 2
0753600-11	21B- 2
0753600-12	21 - 3
0753600-12	21A- 3
0753600-12	21B- 3
0753600-13	21 -
0753600-14	21 -11
0753600-14	21A-13
0753600-14	21B-23
0753600-17	21A-14
0753600-18	21A-14
0753600-19	21A- 1
0753600-19	21B- 1
0753600-20	21 -13
0753600-20	21A-15
0753600-200	21A-
0753600-21	21 -22
0753600-3	21 - 1
0753600-4	21 -12
0753600-5	21 -12
0753600-7	21 - 5
0753600-7	21A- 5
0753601-1	17 -67
0753601-1	17A-68
0753601-16	17A-68
0753601-16	21B-36
0753602-1	21 -18
0753602-1	21A-20
0753602-1	21A-20
0753602-1	21B-22
0753603-1	21 -25
0753603-1	21A-26
0755002-1	63 -78
0755002-1	66 -50
0756005-1	84A-
0756005-2	84A-18
0756008-1	84A- 3
0756009-1	84A- 9
0756009-8	84A-10
0756010-1	84A-13
0756011-1	84A- 8
0756012-1	84A-16
0756014-1	84A-11
0756014-2	84A-15
0756015-1	84A- 5
0756018-2	86 -42
0756019-1	86 -45
0756020-1	86 -47
0756021-1	86 -43
0756022-1	86 -49
0756022-1	86 -53
0756022-2	86 -50
0760011-2	9 -18
0760014-1	20 -21

PART NUMBER	FIGURE AND INDEX NO.
0760016-1	74C- 2
0760017-2	74C- 4
0760018-1	74C- 7
0760019-1	74C- 1
0760019-3	74C- 1
0760021-1	74C-21
0760022-1	74C- 8
0760101-3	74A-17D
0760102-2	74A- 1
0760102-3	74A- 1
0760103-1	74A-18
0760104-1	74A-27
0760104-1	74A-27
0760104-2	74A-27
0760104-2	74A-27
0760104-2	74A-27
0760104-2	74A-28B
0760105-1	17 -60
0760105-2	17 -60
0760105-5	17A-62
0760105-6	17A-62
0760106-1	74A-51
0760106-1	77 -34A
0760107-1	74A-53
0760107-2	74A-53
0760118-4	74A-15
0760121-1	74A-27
0760121-1	74A-28B
0760126-1	76B-40C
0760127-1	76B-40G
0760128-1	80 -30
0760129-1	31 -27B
0760129-1	31A-30
0760130-1	77 -51
0760133-1	78 -25
0760602-1	18 -21
0760602-2	18 -21
0760604-1	72 -32
0760604-2	72 -33
0760605-1	72 -34
0760606-1	56 -34
0760607-1	76A-26
0760607-3	4 - 5
0760607-3	48-47
0760607-3	5A-25
0760607-4	4 - 5
0760607-4	48-47
0760607-4	5A-25
0760609-1	76 -37A
0760609-1	76A-37
0760610-1	76A-25
0760610-2	76 -33
0760610-2	76A-32
0760610-3	76 -27
0760610-4	78 -32
0760611-1	9 - 1
0760611-1	76 -38
0760611-2	9 - 1
0760611-2	76 -38
0760612-1	79 -30
0760612-7	79 -29
0760613-1	79 -47
0760614-1	79 -54
0760615-1	76 -50
0760615-1	76A-50
0760615-1	79 - 9
0760616-1	76 -50
0760616-1	76A-50
0760616-1	79 - 9
0760617-1	4 -44
0760617-1	4A-45
0760617-1	48-45
0760618-1	4 -37
0760618-1	4A-38

PART NUMBER	FIGURE AND INDEX NO.
0760618-1	48-37
0760618-2	4 -38
0760618-2	4A-39
0760618-2	48-38
0760619-1	79 -46
0760620-1	79 -53
0760621-1	31 -17
0760621-1	31A-17
0760621-2	31 -18
0760621-2	31A-18
0760622-1	34 - 6
0760630-1	34 -12
0760632-1	53 -22
0760632-1	53A-30
0760632-1	79 -58
0760633-1	74 -34
0760633-1	74 -49
0760633-1	74A-29
0760634-1	74 -70
0760634-1	74 -71
0760635-2	74 -64
0760636-1	74 -78
0760640-1	74 -53
0760640-6	74 -53
0760641-1	74 -41
0760642-1	74 -68
0760642-2	74 -67
0760642-2	74A-14
0760643-1	74 -58
0760644-1	74 -57
0760644-1	74A- 3
0760646-2	74 -54
0760646-2	74A- 2
0760648-1	74 -38
0760649-1	74 -29
0760649-2	74A-52
0760651-2	74A-28B
0760651-2	74 -47
0760654-1	74 -16
0760654-1	74A-38
0760655-1	74 -17
0760655-1	74A-39
0760657-5	79A-
0760658-1	15 -53
0760658-1	78 -25
0760660-1	34 -10A
0760663-1	74 - 1
0760664-1	74 - 3
0760667-1	80 -26
0760667-2	80 -26
0760668-1	74 - 8
0760668-1	76 -13
0760668-2	74 -10
0760668-2	76 -14
0760668-3	74 - 9
0760668-3	76 -15
0760668-4	74 -11
0760668-4	76 -16
0760669-1	72 - 7
0760669-3	72 -22
0760671-1	80 -27
0760673-1	21 - 4
0760673-1	21A- 4
0760673-1	21B-26
0760674-1	74 -73
0760674-1	74A-20
0760675-1	77 -10
0760675-3	77 -42
0760675-5	77 -42
0760676-1	15 -39
0760676-1	15A-58
0760678-1	72 - 2
0760678-2	72 - 3
0760680-1	76 -27A

PART NUMBER	FIGURE AND INDEX NO.
0760680-2	76 -27A
0760681-1	74 -47
0760681-1	74A-28B
0760681-2	74A-27
0760682-1	72 - 5A
0760683-6	79A- 4
0760683-7	79A- 6
0760683-9	79A-10
0760684-1	79A- 3
0760685-1	77 -56
0760686-1	74 - 0
0760686-1	74A-42
0760686-2	74 -21
0760686-2	74A-43
0760687-1	77 -50
0760687-2	77 -50A
0760691-1	17 -40
0760691-1	17A-40
0760691-1	74A-22A
0760691-2	17 -41
0760691-2	17A-41
0760691-2	74A-22A
0760693-1	74A-41A
0760693-2	74A-41B
0760695-1	74A-22A
0760695-2	74A-22A
0760695-3	74A-22A
0760695-3	74A-22A
0760699-1	74A- 5
0760700-1	74A-50
0760701-1	74A-54
0760702-200	74A-23
0760703-1	9 - 1
0760703-2	9 - 1
0760703-5	76A-38
0760703-5	76B-49
0760703-6	76A-38
0760703-6	76B-49
0760705-1	9 - 1
0760705-2	9 - 1
0760705-5	76B-48
0760705-7	76B-48
0761202-2	77 -14
0761202-2	77 -18
0761202-2	77 -52
0761202-4	77 -46
0761205-3	75 - 9
0761210-1	75 - 9
0761210-4	78 -14
0761210-5	75 - 9A
0762003-1	17 -35
0762003-1	17A-35
0762007-1	17 -28
0762007-2	17 -28
0762007-2	17A-28
0762024-14	79 -30B
0762024-2	79 -30B
0762024-24	79 -30B
0762029-3	79 -70
0762029-4	79 -70
0762032-1	79 -61A
0762033-1	79 -61A
0762034-1	79 -32A
0762034-2	79 -32A
0762035-1	93 - 1
0762036-1	93 - 4
0762037-3	19 -23
0762037-7	19 -22
0762038-1	79C-22
0762038-2	79C-25
0762039-1	79C-19
0762040-1	79C-26
0762041-1	79C-23
0762042-1	17A-25A

PART NUMBER		FIGURE AND INDEX NO.
0762043-1		26 -22
0762043-2		26A-25
0762044-1		24 -25
0762045-3		25 -66
0762045-3		25 -66
0762046-1		17A-35A
0762046-1		21B-29
0762047-2		24 -12A
0762048-1		79C-44
0762049-1		79C- 8
0762050-1		79C- 3
0762051-1		79C-45
0762052-1		79C-45A
0770610PA10		90 -45
0770610PA11		90 - 7A
0770610PA13		90 -53
0770610PA2		90 -45
0770610PA3		90 - 7A
0770610PC2		90 -52
0770648-1		53 -27
0770648-2		53 -27
0770719-1		53A-37
0770719-1		53C-43
0770719-1		53E-43
0770719-1		53G-44
0770719-1		53J-92A
0770719-1		90 -44
0770719-2		53L-92
0770719-2		53N-93
0770719-2		53Q-95B
0770725-12	¤	94 - 2
0770725-2	¤	94 - 2
0770725-9	¤	47A- 5
0770725-9	¤	94 - 2
0770728-1		90 - 7C
0770750-254		89A-77
0782001-1		71A-68
0791160-1		23 -
0791160-10		23A-
0791160-11		25 -
0791160-12		23A-
0791160-13		23A-
0791160-14		23A-
0791160-15		25 -44
0791160-16		25 -
0791160-17		23A-
0791160-18		23A-
0791160-2		23 -
0791160-3		25 -
0791160-4		25 -44
0791160-5		23 -
0791160-6		23 -
0791160-7		25 -
0791160-8		23A-
0791160-9		25 -
0791360-1		17 -
0791360-2		17 -
0791360-3		17 -
0791360-4		17 -
0791360-5		17 -
0791360-6		17 -
0791360-7		17A-
0791360-8		17A-
0800023-5		50 -19
0800030-19		89 -22
0800030-19		89B-41
0800030-19		89C-51
0800045-1		89 - 5
0800045-11		89A-15
0800045-15		89 - 4
0800045-24		89A-16
0800045-25		89 -11
0800111-2		56 -26
0811490-6		71 -27

PART NUMBER	FIGURE AND INDEX NO.
0811490-6	71A-28
08125	36A- 4
08125	37 - 4
0813150-54	71 -27
0813150-54	71A-28
0813150-55	71 -20
0813150-55	71A-21
0813156-4	71 -21
0813156-4	71A-22
0813526-6	44 -11E
0813526-6	53 -22
0813526-6	53A-30
0813526-6	53C-35
0813569-2	53 -28
0813569-3	53C- 6
0813610-3	69 -27
0813619-2	87 - 5
0813619-3	87 - 5
0813808-2	89A-54
08231	36A- 7
08231	37 - 7
0841200-15	35 -20
0841200-15	35A-23
0841200-19	35 -17
0841200-19	35A-20
0841200-25	35 -19
0841200-25	35A-22
0842000-44	35A-16
0851700-96	66 -44
1K1-6-10	88C-35
1K66-1	88C-38
10-4677C	89B-36
10-4677C	89C-35
10-8001C	89B-65
10-8001C	89B-66
10-8001C	89C-68
10-8001C	89C-69
100PDLT44-6	61 -49
100PDLT44-6	61A-52
100PDLT44-6	61B-55
100PDLT44-6	61C-60
1005-1-0	76B-32
1007	1 - 4
1016584	79A- 1
10182-006-1	56 - 8
102PDLN-4	53 -43
102PDLN-4	53A-51
102PDLN-4	53C-60
1024A-8	1 - 3
10650	79 -58A
110691	53C-26
110691	53E-28
110691	53G-29
110691	53J-76
110691	53L-79
110691	53N-82
110691	53Q-90
11918	79 -52
11918	79A- 2
12-4862	89B-62
12-4862	89C-65
12R8	74C-18
1200018-1	69 -30
1200018-2	69 -30
1200039-2	12 -43
1200039-2	92 - 9
1200052-1	89 -19
1200054-3	89 -24
1200054-3	89A-24
1200054-3	89B-59
1200055-1	89 -14
1200055-3	89 -20
1200055-5	89 -21
1200055-6	89 -21

PART NUMBER	FIGURE AND INDEX NO.
1200058-1	89 - 1
1200059-1	89 -22
1200065-23	8 - 2
1200065-24	8 - 2
1200065-5	8 - 2
1200065-6	8 - 2
1200084-21	47C-22
1200084-22	47C-22
1200089-4	46 - 4
1200092-1	51 -29
1200103-3	52 -21
1200103-4	52 -22
1200103-5	52 -20
1200106-108	63 -11
1200106-138	63 -89
1200106-51	82 - 1
1200106-51	82A- 1
1200108-1	50 -20
1200116-1	56 -22
1200116-2	56 -23
1200127-1	47A-35
1200127-1	47B-32
1200127-1	47C-35
1200127-1	47D-29
1200127-7	47E-13
1200127-8	47E-14
1200127-9	47E-15
1200134-1	50 -21
1200136-1	51 - 4
1200136-1	51A-34
1200136-1	51C-30
1200136-1	51D-51
1200136-1	51E-53
1200136-1	51F-48
1200137-1	51 -32
1200138-1	51 -22
1200138-1	51A-47
1200138-1	51D-65
1200138-1	51E-68
1200138-2	51D-33
1200138-2	51E-35
1200138-2	51F-33
1200138-2	51F-55
1200139-1	51 -19
1200139-1	51A-43
1200139-1	51D-37
1200139-1	51E-39
1200141-1	51 -17
1200141-1	51A-36
1200141-2	51 -17
1200141-2	51A-36
1200142-1	51 - 2
1200142-2	51 - 2
1200143-1	51 -30
1200143-2	51 -30
1200146-1	51 -13
1200147-1	51 - 6
1200147-2	51 - 7
1200152-1	51 - 8
1200154-1	51 -23
1200155-1	51 -21
1200155-1	51A-46
1200156-1	51 -25
1200156-1	51A-49
1200157-1	51 -15
1200158-1	51 -39
1200158-5	51 -39
1200159-1	51 -27
1200159-1	51A-51
1200159-3	51D-60
1200159-3	51E-62
1200159-3	51F-53
1200161-1	50 -23
1200162-13	50 - 1

PART NUMBER		FIGURE AND INDEX NO.
1200162-14		50 - 1
1200162-15		50 -22
1200162-16		50 -22
1200162-17		50 -11
1200162-18		50 -11
1200162-19		50 -26
1200162-20		50 -17
1200163-1		51 - 1
1200163-2		51 - 1
1200164-1		50 -25
1200164-1		51A-58
1200191-200		68A-13
1200191-200		68B-13
1200191-201		68A-14
1200191-201		68B-14
1200217-26		47E-10
1200217-4		47E- 8
1200217-5		47E- 9
1200231-1		47 -19
1200231-1		47A-20
1200231-1		47B-20
1200231-1		47C-22
1200231-1	¤	47D- 7
1200231-2		47 -19
1200231-2		47A-20
1200231-2		47B-20
1200231-2		47C-22
1200231-2	¤	47D- 8
1200415-5		89A-63
1200415-7		89B- 8
1200415-7		89C-36
1200415-7	¤	89A-40
1200416-4		89A-62
1200417-15		89A-25
1200417-15		89B-90
1200417-17		89A-43
1200417-17		89B-83
1200417-17		89C-94A
1200417-25		89A-41
1200417-26		89A-43
1200417-51		89B-78
1200417-51		89C-90
1200417-52		89B-79
1200417-52		89C-91
1200417-69		89B-81
1200417-69		89C-93
1200417-7		89A-41
1200417-8		89A-42
1200417-84		89C-96B
1200417-85		89C-95A
1200417-9		89A-27
1200417-9		89B-86
1200478-2		51B-26
1200503-1		49A-42
1200503-1		49B-41
1200503-1		49C-45
1200504-1		49A-36
1200504-1		49B-35
1200504-3		49A-41
1200504-3		49B-40
1200504-3		49C-43
1200505-1		49A-38
1200505-1		49B-37
1200535-27		46 - 8
1200536-1	¤	89A-48
1200612-5		45A-32
1200612-5		45B-23
1200612-6		45A-37
1200612-6		45B-28
1200614-2		63 -73
1200614-4		63 -78
1200614-6		63 -73
1200637-2		5 - 6A
1200637-2		5A- 9

PART NUMBER		FIGURE AND INDEX NO.
1200637-2		69A-16
1200637-5		58- 9
1200655-5		46 - 5
1200686-17	¤	53B- 1
1200686-18	¤	53B- 1
1200686-19	¤	53B- 1
1200686-20	¤	53B- 1
1200686-21	¤	53B- 7
1200686-23	¤	53B-11
1200686-26		53B-13
1200686-28		53B-14
1200686-30		53B-15
1200691-1		69 -23
1200691-1		69A-23
1200727-17	¤	53D- 5
1200727-21	¤	53D- 1
1200727-22	¤	53D- 1
1200727-26	¤	53D- 1
1200756-3	¤	53D- 9
1200756-7	¤	53D- 9
1200756-7	¤	53F-11
1200756-7	¤	53H-11
1200756-7	¤	53K-10
1200756-7	¤	53M-10
1200756-7	¤	53P- 9
1200756-7	¤	53R- 9
1200756-7	¤	75 -29
1201039-1		56 - 8
1205001-120		2A-64
1205001-121		2A-65
1205001-139		2A-77
1205001-29		2A-12
1205001-54		2A-12A
1205001-79		2A-43
1205001-80		2A-43
1205004-1		74B-31
1205009-1		2A-55
1205009-1		53E- 9
1205009-1		53G-10
1205009-1		53J-56
1205010-1		2 -65
1205010-2		2 -66
1205010-3		2A-23
1205010-4		2A-24
1205013-3		2 -63
1205013-3		2A-21
1205013-7		2 -64
1205013-7		2A-22
1205024-1		2A-13
1205024-1		90 -31
1205030-1		2A-26
1205030-11		2A-25
1205030-12		2A-27
1205030-2		2A-28
1205035-1		2A-37
1205035-2		2A-37
1205043-1		2A- 6
1205043-1		68A- 8
1205043-1		68B- 7
1205043-1		68B-12
1205052-1		2A-35
1205052-2		2A-36
1205061-1		2A-44
1205061-2		2A-45
1205074-1		2A-52
1205076-6		2A-53
1205076-7		2A-54
1205085-1		2A-76
1205088-5		2A-72
1205088-6		2A-73
1206003-9		53J-53
1208		37A- 3
1210020-10		23A-17
1210020-3		23 -49

PART NUMBER		FIGURE AND INDEX NO.
1210020-3		23A-16
1210032-1		23A-71
1210032-2		23A-71
1210032-8		23A-71
1210032-9		23A-71
1210051-1		18 -20
1210051-2		18 -20
1210050-202		74A- 1
1211048-1		89B-14
1211048-1		89C-13
1211054-2		89B-13
1211054-2		89C-12
1211061-61		46 - 6
1211076-1		23A-29
1211076-2		89B- 9
1211076-2		89C- 8
1211077-5		23A-27
1211077-5		89B- 5
1211077-5		89C- 5
1211080-1		91A-10
1211083-1		23A-27
1211089-1		23A-28
1211089-2		89B-11
1211089-2		89C-10
1211090-1		89B-15
1211090-1		89C-14
1211203-1		47A-34
1211203-1		47B-31
1211203-1		47C-34
1211203-1		47D-28
1211250-6		41 - 48
1211250-6		42 - 48
1211250-7		41 - 48
1211250-7		42 - 48
1211251-1		41 - 4C
1211251-1		42 - 4C
1211251-2		41 - 4C
1211251-2		42 - 4C
1211252-1		44 -11C
1211836-1		41 - 58
1211836-1		41A- 6
1211836-1		42 - 58
1211836-1		42A- 7
1212002-1		29 -59
1212002-1		29A-48
1212002-1		29B-53
1212003-1		31 -19
1212010-1-791		32 - 1
1212010-11-791		32 - 1
1212010-5-791		32 - 1
1212126-1		31A-22
1212127-1		31A-19
1212127-3		31A-21
1213004-1		53E- 9
1213004-1		53G-10
1213004-1		53J-56
1213004-2		53N-59
1213004-2		53Q-69
1213005-1	¤	53E-61
1213005-1	¤	53G-62
1213005-2	¤	53J-52
1213005-5	¤	53L-55
1213006-2		53E-64
1213008-5		17 -22
1213008-5		17 -22
1213008-5		17A-22
1213008-5		17A-22
1213037-1		67 -11
1213043-1		69 -26
1213062-11		53Q-32
1213062-4		53E-90
1213062-4		53G-85
1213062-4		53J-29
1213062-4		53L-28

PART NUMBER		FIGURE AND INDEX NO.
1213062-7		53N-29
1213064-1		17 -72
1213064-1		53E-94
1213064-1		53G-89
1213064-1		53L-18A
1213065-1		53E-91
1213065-1		53G-86
1213065-1		53L-17
1213065-2		53E-92
1213065-2		53G-87
1213065-2		53L-18
1213079-1		67 - 4
1213088-1	¤	53E- 8
1213088-1	¤	53G- 9
1213088-3	¤	53G- 9
1213115-1		18 -24
1213115-2		18 -24
1213116-1	¤	53E- 3
1213116-1	¤	53G- 4A
1213116-1	¤	53J-49
1213116-1	¤	53L-52
1213127-4		18 - 5
1213145-1		53C-95
1213145-1		53E-85
1213145-1		53G-80
1213145-1		53J-10
1213145-1		53L-10
1213145-1		53N-10
1213145-1		53Q-12
1213146-1	¤	55A- 2
1213147-1		74 -64
1213147-1		74A-17A
1213151-1		53C-87
1213151-1		53E-93
1213151-1		53G-88
1213151-1		53J- 7
1213151-1		53L- 7
1213151-1		53N- 7
1213152-3		91A- 5
1213154-1		91 - 4A
1213154-2		91 - 4B
1213158-1		63 -85
1213163-1		53E- 2A
1213163-1		53G- 3
1213163-1		53J-48
1213163-1		53L-51
1213163-1		53N-44
1213163-1		53P- 6
1213163-2		53J-48
1213163-2		53L-51
1213163-2		53N-44
1213163-2		53P- 6
1213163-2		53Q-49
1213163-2		53R- 6
1213169-11		53J- 5
1213169-11		53L- 5
1213169-11		53N- 5
1213169-12		53J-19
1213169-12		53L-19
1213169-12		53N-20
1213169-12		53Q-27
1213170-1		53J-34
1213170-1		53L-35
1213170-1		53N-38
1213170-1		53Q-44
1213173-2	¤	53J-53
1213191-3		53G-58
1213192-18		53J-43
1213192-9		53G-60
1213212-1		53N-19
1213243-3	¤	91 - 1
1213293-1		57A- 4A
1213293-1		57B- 4
1213294-1		53J-38

PART NUMBER		FIGURE AND INDEX NO.
1213294-1		53L-39
1213294-2		53N-42
1213295-1		53J-17
1213301-1		53G-98
1213301-2		53G-99
1213307-9		53J-45
1213309-5		61B-34
1213309-5		61C-26
1213309-6		61B-34
1213309-6		61C-27
1213310-5		61B-34
1213310-6		61B-34
1213314-9		53L-48
1213314-9		53N-51
1213319-7		90A-16
1213319-7		90A-16
1213319-8		90A-16A
1213319-8		90A-16
1213320-1		53L-56
1213321-2		90A-21
1213321-2		90A-21
1213321-2		90A-21
1213328-1		53N-55
1213329-1	¤	53N-56
1213330-3		53N-58
1213335-1		53N-53
1213335-1		53P- 3
1213335-1		53Q-58
1213335-1		53R- 3
1213335-2		53N-53
1213335-2		53P- 3
1213338-1	¤¤	53N-55
1213338-4	¤¤	53N-54
1213338-5	¤¤	53N-54
1213363-1		53N-47
1213363-1		53Q-52
1213364-3		53N-51
1213364-3		53Q-53
1213365-1		53Q-61
1213366-1	¤	53Q-62
1213374-5		53Q- 5
1213374-6		53Q- 8
1213377-1	¤¤	53Q-59
1213381-1	¤¤	53Q-60
1213383-1		53Q-58
1213412-11		17A-34
1213505-1		53 -10
1213505-200		53 -12
1213505-200		53A-18
1213505-200		53C-23
1213505-200		53E-25
1213508-1		17 -68
1213508-1		17A-69
1213535-1		2 -49
1213535-1		30 -20A
1213535-1		90 -31
1213618-1		69 -31A
1213618-2		69 -31A
1213630-4		53C-89
1213645-1		53A-56
1213645-1		53C-64
1213645-1		53E-97
1213645-1		53G-94
1213645-1		53J-35
1213645-1		53L-36
1213645-1		53N-39
1213645-1		53Q-45
1213646-1		53A-32
1213646-1		53C-37
1213646-1		53E-39
1213646-1		53G-40
1213646-1		53J-87A
1213646-1		53L-87B
1213646-1		53N-90B

PART NUMBER		FIGURE AND INDEX NO.
1213646-1		53Q-93B
1213646-2		53C-38
1213646-2		53E-40
1213646-2		53G-41
1213650-1		53C-81
1213650-1		53E-74
1213650-1		53G-69
1213650-1		53J- 4
1213650-1		53L- 4
1213650-1		53N- 4
1213650-1		53Q- 4
1213653-4	¤	53B-19
1213654-11		53B-23
1213677-1		53N-29A
1213717-1		90A- 1
1213717-2		90A- 2
1213718-1		17 -71A
1213718-1		17A-71
1213929-1		17A-45
1213942-1		41A-14
1213942-2		42A-12
1214050-3	#	49A-10
1214050-5		49A-11
1214051-1	#	49A-
1214051-2	#	49A-16
1214051-200	#	49A- 1
1214051-201	#	49A-15
1214051-202	#	49A- 1
1214051-203	#	49A-15
1214051-3		49A-17
1214051-5	#	49A-
1214051-7	#	49A-16
1214062-5	#	49B-15
1214062-5	#	49C-15
1214062-5	#	51E-11
1214062-5	#	51F-10
1215012-2		23A-29
1215012-3		23A-29
1215014-1		53E-61
1215014-1	¤	53G-62
1215042-1		47C-33
1215042-1		47D-27
1215045-5	¤¤	45B-29
1215045-6	¤¤	45B-29
1217005-2		43A- 1A
1217035-1		41A-33
1217035-1		42A-16
1217037-9		41A-18
1217037-9		42A-14
1217038-1		41A-22
1217038-1		42A-21
1217038-2		41A-23
1217038-2		42A-22
1220-1-0		76B-32
1220002-21		7 - 2
1220002-46		7 - 1
1220002-80		7 -14
1220003-15		7 - 1
1220003-25		5 - 1
1220003-25		5A- 1
1220003-26		5 - 1
1220003-26		5A- 1
1220003-5		5 - 1
1220003-6		7 - 1
1220004-24		5 - 1
1220004-24		5A- 1
1220004-25		5 - 1
1220004-25		5A- 1
1220004-4		5 - 1
1220006-21		7 -17
1220006-21		7A-15
1220006-22		7 -17
1220006-22		7A-15
1220007-19		7 -20

PART NUMBER	FIGURE AND INDEX NO.
1220007-28	7 -20
1220007-30	7 -21A
1220007-30	7A-20
1220007-36	7 -20
1220007-37	7 -20
1220007-60	7 -20
1220007-61	7 -20
1220007-62	7A-18
1220007-63	7A-18
1220019-13	4 -42
1220019-13	4A-43
1220019-13	4B-42
1220019-17	4 -42A
1220019-17	4A-43A
1220019-17	4B-43
1220019-18	4A- 9
1220019-18	4 -10
1220019-18	4B- 9
1220019-19	4 -12
1220019-19	4A-11
1220019-19	4B-11
1220019-20	4 -12
1220019-20	4A-11
1220019-20	4B-11
1220019-21	4 -14
1220019-21	4A-13
1220019-21	4B-13
1220019-22	4 -14
1220019-22	4A-13
1220019-22	4B-13
1220019-25	4 -42
1220019-27	4 -42
1220019-27	4A-43
1220019-35	4A-43
1220019-35	4B-42
1220022-3	8 -41
1220092-1	4 - 5A
1220092-1	4B-48
1220092-1	5A-26
1220092-2	4 - 5A
1220092-2	4B-48
1220092-2	5A-26
1220094-2	3 -18
1220094-2	3 -18
1220095-2	7 -24
1220095-3	7A-24
1220114-1	10 -11
1221010-13	4 -28
1221010-14	4 -28
1221010-15	4 -28
1221010-15	4A-27
1221010-15	4B-28
1221010-7	4 -28
1221024-1	6 - 3A
1221024-1	6A- 4
1221101-1	4 - 7
1221101-1	4A- 6
1221101-2	4 - 7
1221101-2	4A- 6
1221101-3	4B- 6
1221101-4	4B- 6
1221200-15	7 -18
1221200-16	7 -18
1221200-22	7 -18
1221200-23	7 -18
1221200-27	7 -18
1221200-28	7 -18
1221201-3	3 -40
1221201-4	3 -40
1222012-1	3 -13
1222013-3	7 -19
1222013-3	7 -21
1222013-3	7A-17
1222013-3	7A-19

PART NUMBER	FIGURE AND INDEX NO.
1222013-6	7 -19
1222013-6	7 -21
1222013-6	7A-17
1222013-6	7A-19
1222016-3	76B-41
1222021-1	7 -14
1222021-1	7 -25
1222021-1	7 -25
1222021-1	7A-25
1222022-1	3 -19
[illegible]-14	12 -32
1231000-15	12 -34
1231000-15	12A-36
1231000-16	12 -35
1231000-16	12A-37
1231000-17	12 -33
1231000-17	12A-35
1231000-17	12B-33
1231000-18	12 -38
1231000-18	12A-32
1231000-18	12B-31
1231000-19	12 -42
1231000-20	12 -
1231000-23	12 -
1231000-26	12 -
1231000-4	12 -36
1231000-4	12A-33
1231000-4	12B-32
1231000-7	12 -37
1231000-7	12A-34
1231000-7	12B-39
1231001-11	13 -
1231001-2	13 -31
1231001-3	13 -30
1231001-5	13 -
1231001-9	13 -
1231002-1	12 - 9
1231002-1	12A- 8
1231002-2	12 -10
1231002-2	12A- 9
1231002-2	12B- 9
1231002-3	12B- 8
1231005-2	12 -15
1231005-2	12A-14
1231005-3	12B-14
1231006-1	12 -16
1231006-1	12A-13
1231006-1	12B-13
1231007-1	12 -17
1231007-1	12A-12
1231007-1	12B-12
1231008-1	12 -18
1231008-1	12A-11
1231008-1	12B-11
1231009-1	12 -19
1231009-1	12A-16
1231009-1	12B-16
1231009-3	12A-17
1231009-3	12B-17
1231010-1	12 -20
1231010-3	12 -20
1231010-3	12A-10
1231010-3	12B-10
1231012-1	12 -21
1231012-2	12A-27
1231013-1	12 -22
1231013-2	12 -22
1231013-2	12A-25
1231014-2	12 -24
1231014-2	12A-28
1231014-2	12B-27
1231014-3	12 -23
1231014-3	12A-29
1231014-4	12B-28

PART NUMBER	FIGURE AND INDEX NO.
1231015-1	13 - 4
1231015-2	13 - 5
1231015-3	13 - 6
1231016-1	13 - 7
1231017-1	13 - 8
1231021-1	13 -16
1231021-2	13 -17
1231021-3	13 -18
1231021-7	13 -18
1231021-8	13 -17
1231021-9	13 -16
1231022-1	13 -19
1231023-1	12 -25
1231023-1	12A-24
1231023-1	12B-24
1231023-16	13 -20
1231023-17	13 -22
1231023-18	13 -24
1231023-19	13 -21
1231023-2	12 -26
1231023-2	12A-23
1231023-2	12B-23
1231023-20	13 -23
1231023-21	13 -25
1231023-3	12 -27
1231023-3	12A-22
1231023-3	12B-22
1231026-1	13 -26
1231026-2	13 -26
1231029-1	13 -10
1231029-2	13 -10
1231031-1	13 - 9A
1231032-1	13 -11
1231033-1	13 - 9
1231048-2	12A-38
1231048-2	12B-36
1231048-3	12A-
1231049-1	12A-15
1231049-1	12B-15
1231049-2	12A-20
1231049-2	12B-20
1231049-3	12A-21
1231049-3	12B-21
1231050-1	12A-42
1231050-2	12B-40
1231052-1	29B-53
1231054-1	12A-26
1231054-2	12A-27
1231056-1	12B-26
1231057-1	12B-
1231057-3	12B-34
1231057-4	12B-35
1231058-1	12B-25
1231059-1	12B-37
1231059-1	92A-10
1232104	14A-19
1232105	14A-20
1232106	14A-21
1232114-1	14A- 8
1232116	14A- 6
1232118-1	14A-28
1232118-2	14A-29
1232139-1	14A-35
1232139-3	14 -33
1232140-1	14 -25
1232140-1	14A-34
1232141-1	14A-47
1232142-1	14A-45
1232143-1	14A-52
1232400-1	14A-49
1232400-2	14A-49
1232600-19	14A-41
1232600-2	14A-38
1232600-3	14A-39

PART NUMBER	FIGURE AND INDEX NO.
1232600-4	14A-40
1232600-5	14 - 5
1232600-7	14A-
1232601-1	14A-15
1232602-1	14A-14
1232603-1	14A-16
1232603-2	14A-22
1232604-1	14A-37
1232605-1	14A- 5
1232606-1	14A-30
1232606-2	14A-31
1232610-1	14A- 6
1232610-2	14A- 3
1232610-3	14A- 7
1232610-4	14A- 4
1234023-1	14 -39A
1234023-1	14A-36
1234600-1	15A-
1234600-12	15A-33
1234600-13	15A-45
1234600-14	15A-47
1234600-15	15A-52
1234600-16	15A-53
1234600-2	15A-
1234600-3	15A-54
1234600-4	15A-55
1234600-5	15A-48
1234600-6	15A-49
1234600-7	15A-50
1234600-8	15A-51
1234601-1	15A-24
1234601-2	15A-25
1234602-1	15A- 3
1234602-2	15A- 3
1234602-3	15A- 4
1234602-4	15A- 5
1234603-1	15A-22
1234603-2	15A-23
1234604-1	15A-20
1234605-5	15A-42
1234605-6	15A-43
1234606-1	15A-29
1234607-1	15A-28
1234608-3	15A-56
1234608-4	15A-57
1234610-1	15A-34
1234611-1	15A-35
1234612-1	15A-19
1234613-1	15A-33
1234613-2	15A-37
1234613-3	15A-38
1234613-4	15A-36
1234613-5	15A-39
1234614-1	15A-27
1234626-1	14A-13
1234630-1	15A-32
1241061-1	39B-26
1241063-2	39 -22
1241156-11	37B-
1241156-12	36A-
1241214-2	39B- 2
1243021-1	35 -18
1243021-1	35A-21
1243030-5	35 -50
1243030-5	35A-54
1243030-6	35 -50
1243030-6	35A-54
1243030-7	35 -50
1243030-7	35A-54
1243623-2	35A-12
1243626-1	35 -24
1243626-1	35A-27
1250115-2	70 -38
1250115-3	17 -65

PART NUMBER	FIGURE AND INDEX NO.
1250115-3	17A-66
1250115-3	70 -35
1250116-1	17 -65
1250116-1	17A-66
1250116-1	70 -33
1250211-4	90 -19
1250213-1	95 -15
1250213-15	95 -15
1250214-1	95 - 5
1250215-1	95 - 8
1250319-1	88C-37
1250405-1	86 -56
1250407-1	86 -29
1250408-1	86 -30
1250409-1	86 -31
1250410-1	2 -23
1250410-3	2 -23
1250410-3	2A-66
1250410-3	86 -41
1250412-1	58A-10
1250503-1	70 -31
1250503-2	70 -31
1250922-3	86 -52
1252015-1	61B-51A
1252015-2	61B-51B
1252015-4	61B-51C
1252015-5	61B-51D
1252400-15	61B-11
1253032-1	70 - 3
1253033-2	70 - 5
1253034-1	70 - 4
1253037-1	70 - 6
1253040-1	70 - 5
1253041-1	70 - 7
1260012-2	77 -19
1260033-3	74A-47
1260033-4	74A-48
1260064-1	79 -12
1260074-1	78 -22
1260078-102	76A-14
1260078-103	76A-15
1260078-2	74A-35
1260078-2	76A-14
1260078-3	74A-36
1260078-3	76A-15
1260078-5	74A-32
1260078-5	76A-13
1260094-2	53E-59
1260098-4	74A- 1
1260105-109	80 - 7
1260105-9	80 - 7
1260112-1	74A-47
1260112-2	74A-48
1260140-7	74A- 1
1260140-9	74A- 1
1260141-10	74A-28A
1260141-6	74A-28A
1260143-12	74A- 1
1260143-4	74A- 1
1260144-3	56 -34
1260148-1	74A- 9C
1260463-1	56 -34
1260474-1	29B-78
1260476-3	74B- 2
1260477-2	2A-36
1260477-2	74B- 8
1260664-1	74 -56
1260664-1	74A- 4
1260665-1	74A- 9D
1260668-3	74A-15
1261454-1	74 -64
1261454-1	74 -64
1262001-1	53E-88
1262001-1	79B-22

PART NUMBER	FIGURE AND INDEX NO.
1262001-1	79C-15
1262001-2	53G-83
1262001-2	53J- 8
1262001-2	53L- 8
1262001-3	53N- 9
1262001-3	53Q-10
1262005-1	76A-51
1262007-1	79 -32
1262008-1	79 -63
1262010-1	79 -30A
1262011-1	4 -45
1262011-1	4A-46
1262011-1	79 -60
1262011-2	4 -45
1262011-2	4A-46
1262011-2	79 -59
1262014-1	79 -61
1262019-1	79 -66
1262019-2	79 -65
1262020-1	4 -31
1262026-1	79B- 1
1270060-1	74B-24A
1270060-1	74C-22
1270432-2	93 - 1
1270463-2-434	94 - 1
1270638-1	53E-95
1270638-1	53G-84
1270658-1	74B- 9
1270681-4	74B- 2
1270682-1	74B- 7
1270682-1	74C- 9
1270686-1	74B-20
1270687-2	74B-22
1270693-1	74B-23
1270695-1	53L-95B
1270695-1	53N-95B
1270695-1	53Q-97B
1270695-1	53L-95B
1270695-2	53N-95B
1270695-2	53Q-97B
1270695-2	53Q-30
1270707-1	53L-25
1270707-2	53N-26
1270707-2	53Q-30
1270707-2	79 -71
1270808-1	74 -41
1290001-8	74 -53
1290001K12	74 -53
1290001K13	40 - 7
13830	37A- 9
13836	37B- 6
13836	40A- 3
13836	37A- 6
13889	37B-11
13889	40 - 8
13889	40A- 9
13889	2 -30
1400014-1	56 -38
1400054-2	71 - 2
1400106-1	41 -45
1411202-201	41A-56
1411202-201	41A-27
1411206-1	42A-26
1411206-1	41A-24
1411206-7	42A-23
1411206-7	41A-29
1411207-1	42A-28
1411207-1	41A-30
1411207-2	42A-29
1411207-2	49 -14
1414045-2	51A-14
1414045-2	46 - 4
1414082-1	47A-12
1414082-1	46 - 4
1414082-13	

PART NUMBER		FIGURE AND INDEX NO.
1414082-13	#	47A-12
1414082-13	#	47B-12
1414082-13	#	47C-14
1414082-14		46 - 4
1414082-14		47A-12
1414082-18	#	46 - 4
1414082-18	#	47A-12
1414082-18	#	47B-12
1414082-18	#	47C-14
1414082-6		46 - 4
1414082-6		47A-12
1414082-7		46 - 4
1414082-7		47A-12
1414100-212		49 -32
1414100-212		49A-32
1414100-212		49B-31
1414100-212		49C-31
1414100-212		51A-69
1414100-212		51C-17
1414100-8		49 -16
1414100-8		49A-17
1414100-8		51A-17
1414100-9		49 -11
1414100-9		49A-11
1414100-9		51A-11
1414100-9		51B- 9
1414103-12		49 -22
1414103-2		49 -21
1414103-2		49A-21
1414103-2		49B-20
1414103-2		49C-20
1414103-45		49A-22
1414103-45		49B-21
1414103-45		49C-21
1414103-6		49 -23
1414103-6		49A-23
1414103-6		49B-22
1414103-6		49C-22
1414104-1		49 -48
1414104-1		51A-77
1414104-10		51A-71
1414104-2		49 -40
1414104-2		51A-60
1414104-39		49 -29
1414104-39		49A-29
1414104-39		49B-28
1414104-39		49C-28
1414104-4		49 - 3
1414104-4		49A- 3
1414104-4		49B- 3
1414104-4		49C- 3
1414104-4		51A- 3
1414104-4		51B- 5
1414104-4		52A-36
1414104-4		52B-32
1414104-40		49 -30
1414104-40		49A-30
1414104-40		49B-29
1414104-41		49 -31
1414104-41		49A-31
1414104-41		49B-30
1414104-41		49C-30
1414104-42		49 -31
1414104-42		49A-31
1414104-42		49B-30
1414104-42		49C-30
1414104-45		49 -37
1414104-46		49 -39
1414104-54		51D-90
1414104-54		51E-94
1414104-54		51F-85
1414104-56		51C-11
1414104-56		51D-79
1414104-56		51E-82

PART NUMBER		FIGURE AND INDEX NO.
1414104-61		49C-29
1414104-8		49 -45
1414104-8		49A-49
1414104-8		49B-48
1414104-8		49C-41
1414104-8		51A-64
1414104-8		51C-16
1414107-1		49 -50
1414107-1		49A-51
1414107-1		49B-50
[illegible]107-1		49C-50
1414107-1		51A-79
1414107-1		52A-12
1414107-1		52B-17
1414107-2		52A-12
1414107-2		52B-17
1414110-1	¤	49A-13
1414110-1	¤	51A-12
1414110-3	¤	49A-15
1414110-3	¤	51A-14
1414111-5		51A-14A
1414112-1		49 -28
1414112-1		49A-28
1414112-1		49B-27
1414112-1		49C-27
1414116-1		49 -42
1414116-1		49A-40
1414116-1		49B-39
1414116-1		49C-40
1414116-1		51A-61
1414116-1		51C-15
1414116-1		51D-86
1414116-1		51E-89
1414116-1		51F-70
1414200-10		52A- 6
1414200-19		52A-39
1414200-20		52A-39
1414200-21	#	52A-37
1414200-22	#	52A-38
1414200-23		52A- 6
1414200-39		52A- 6
1414200-40		52A- 6
1414200-49	#	52A-28
1414200-50	#	52A-28
1414211-22		52A-30
1414211-22		52B-26
1414211-24		52A- 8
1414211-24		52B-11
1414212-11		49 -11A
1414215-19	¤	52A-40
1414215-20	¤	52A-41
1414217-1		52A- 7
1414217-2		49 -17
1414217-2		49A-18
1414217-3		49 -18
1414217-3		49A-19
1414217-3		51A-22
1414217-3		51B-17
1414217-4		51A-23
1414217-7		51B-17
1414223-34		49A-50
1414223-34		49B-49
1414223-34		49C-48
1414230-1		49 -11A
1414230-1		49A-12
1414230-1		49B-12
1414230-1		49C-12
1414230-2		52A-39A
1414230-2		52B-36
1414231-1		49 -49
1414231-2		52A-11
1414231-2		52B-14
1414231-3		49 -49
1414231-4		49 -49

PART NUMBER		FIGURE AND INDEX NO.
1414231-4		49A-52
1414240-3		51C-
1414240-3	¤	51C-
1414240-4		51C-
1414240-4	¤	51C-
1414241-3		51C-36
1414241-4		51C-37
1414242-1		51C-29
1414243-1		51C-32
1414245-2		51C-10
1414247-1		51C-24
1414248-1		51C- 8
1414249-2		51C-23
1414251-1	#	52A-41
1414252-1		49 -59
1414252-1	#	51A-89
1414252-6		49 -61
1414252-6	#	51A-91
1414252-6	#	52A-43
1414252-7		49 -60
1414252-7		51A-90
1414257-5		51B-25
1414258-1		51B-22
1414259-1		51B-24
1414261-1		51B-21
1414262-1		51B-13
1414263-5	¤	51B-18
1414263-6	¤	51B-19
1414263-7	¤	51A-19
1414263-8	¤	51A-20
1414264-13	¤	51B-10
1414264-5	¤	51B-12
1414265-10	#	51B-
1414265-207	#	51B- 2
1414265-209	#	51B-13
1414265-8		51B-16
1414265-9	#	51B-
1414266-1		51B-20
1414267-1		51B-28
1414268-1		51B-27
1414269-1		51B-218
1441003-1		39 -12
1441003-1		39A-12
1441010-24		39 -43
1441010-27		39 -41
1441013-1		39 -40
1441013-1		39A-36
1442001-1		33A-16
1442001-2		33A-14
1442002-1		33A-15
1442013-1		33A-23
1442112-2		38A- 1
1442113-1		38A- 8
1442113-2		38A- 4
1442113-2		38A-11
1442113-2		38B- 2
1442113-5		38A-12
1442113-9		38B- 2A
1442114-5		38A-
1442114-6		38A- 7
145-10		40A-29
1452225-5		61 -19B
1452225-5		61A-16
1452225-5		61B- 9
1452530-6		79B- 3
1452530-6		79C- 2
1452533-2		79B-12
1452533-2		79C-10
1452533-4		79B- 9
1452533-4		79C- 7
1452537-1		79B-26
1460320-1		72 - 1
1460501-21		72 - 4
1470089-10-532		94 - 6

PART NUMBER		FIGURE AND INDEX NO.
1470089-14	¤	94 - 6
1470089-6		94 -14
1470089-8		94 -16
1505014-1		2A-42
1505015-12		2A-40
1505015-13		2A-41
1505015-43		2A-40
1505015-44		2A-41
1505022-1		2A-48
1511205-11		43A-
1511205-12		43A-
1511205-13		43A-
1511205-14		43A-
1511205-16		43A-
1511205-17		43A-
1511205-6		43A-
1511205-7		43A-
1511206-11		43A-15
1511206-13		43A-16
1511206-14		43A-16
1511206-20		43A-12
1511206-4		43A-19
1511207-1		43A-17
1511208-12		43A-28
1511208-13		43A-28
1511208-16		43A-30
1511208-17		43A-31
1511209-1		43A-27
1511209-10		43A-20
1511209-11		43A-20
1511209-12		43A- 5
1511209-8		43A-11
1511212-5		43A-24
1511212-6		43A-24
1512280-11		79B- 2
1512280-11		79C- 1
1512280-13		79B- 1
1512280-13		79C- 1
1512280-24		79B- 8
1512280-24		79C- 6
1512280-25		79B-11
1512280-25		79C- 9
1514051-6	#	49A-10
1514059-1		51B-21A
1514119-3		51F-62
1514223-28		49A-44
1514223-28		49B-43
1514223-28		49C-46
1520006-1		3 -46
153-10		37A- 1
153-15		37B- 8
153-15		40A- 5
153-8		36A- 2
153-8		37 - 2
154-13		37B- 9
154-13		40A- 6
154-6		36A- 3
154-6		37 - 3
154-9		37A- 5
155-2		36A- 1
155-2		37 - 1
1552004-10		61A-18
1552004-10		61B-14
1552004-12		61B-16
1552004-17		61C- 7
1552004-17		61C-13
1552004-22		61C- 6
1552004-22		61C-12
1552004-25		61B-17
1552004-25		61C-10
1552004-52		61C- 5
1552004-53		61C-11
1552010-1		61C- 9
1552010-1		61C-15

PART NUMBER	FIGURE AND INDEX NO.
1552531-4	79B- 5
1552531-6	79C- 3
1560001-10	74 -76
1560001-10	74B- 2
1560010-4	74B- 1
1560033-12	79B- 4
1560110-1	74B-12
1560110-3	74B- 6
1560110-3	74C-10
1560312-1	74A- 9B
1560319-1	74B- 3
1560319-2	74B- 3
1562033-10	79C- 3
1562033-13	79C- 3
1562033-4	79B- 6
1562033-4	79C- 4
1570043-1	90 -61
1570043-3	90 -47
1570102-1	15A-65
1570102-10	3 -31
1570102-8	13 -35
1570102-8	13 -36
1570141-1	74B-30
1570142-2	74B-17
1570150-1	74B-18
1570166-1	90 -67
16-2000C	89B-64
16-2000C	89C-67
16-8375C	89B-65
16-8375C	89C-68
16-8500C	89B-66
16-8500C	89C-69
161-18	37 - 5
161-23	37A- 8
161-24	37A- 7
161-30	37B- 2
161-30	40A- 1
161-31	36A- 5
161-49	40A- 1
1612030-1	56 -45
162-16	37 - 6
162-27	37B- 1
162-27	40A- 2
162-28	36A- 6
162-47	40A- 2
1620058-1	6A-23
1620075-3	90 -77
164-26A	40A-11
164-40	40A-11
1670019-1	79 -74
1700127-1	47E-11
1700127-4	47E-12
1705015-1	2A-38
1705015-1	41 - 5A
1705015-1	41A- 7
1705015-2	2A-39
1705015-2	42 - 5A
1705015-2	42A- 8
1706015-2	90 - 9A
1713039-1	88 -17
1713039-1	88 -29D
1713039-1	88A-29
1713039-1	88A-30
1713039-1	88B-34
1713039-1	88B-37
1713039-1	88C-18
1713039-1	88C-23
1713039-1	88C-51
1713080-3	90A- 5
1713082-1	90A- 7
1713083-1	90A- 3
1713084-1	90A- 6
1713084-3	90A- 6
1713085-1	90A-11

PART NUMBER		FIGURE AND INDEX NO.
1713269-1		75 -28
1714000-K200		51D-88
1714000-K200		51E-92
1714000-22		51F-83
1714000-33		51D-87
1714000-33		51E-90
1714000-33		51F-86
1714000-41		51F-84
1714035-1		51A-90
1714040-1		49A-62
1714040-1	#	51A-89
1714040-1	#	52A-41
1714040-2		49A-63
1714040-2	#	51A-91
1714040-2	#	52A-43
1714040-5	#	49A-62
1714040-5	#	51A-89
1714040-5	#	52A-41
1714040-6	#	49A-63
1714040-6	#	51A-91
1714040-6	#	52A-43
1714061-1		51D-84
1714061-1		51E-87
1714061-1		51F-72
1714067-2		51D-83
1714067-4		51D-83
1714067-4		51E-86
1714067-5		51F-67
1714074-13		51F-23
1714074-14		51F-24
1714074-6		51F-25
171467-2		51E-86
1715023-3	¤	49 -14
1715023-3	¤	51A-14
1741003-3		39B-15
1741003-4		39B-15
1741005-200		39B-40
1741005-201		39B-40
1741005-21		39B-43
1741005-22		39B-43
1741005-252		39B-40
1741022-1		39A-62
1741022-1		39B-73
1741022-2		39A-62
1741022-2		39B-73
1777		32 - 9
1777		32 - 9
1782001-1		71A- 2
18-1		53B-18
180231		64 -37
180231		64A-33
181522		90 - 9
1816TR		94 -11
182684		64 -38
182747		64A-34
183-1		40A-27
184793		64 -13
186320		64 -40
186320		64A-36
1866-22		37 - 8
188141		64A-25
188302		64 -31
188302		64A-27
188434		64 -28
188434		64A-24
189482		64A-19
189574		64A-16
189739		64A-20
189744		64A- 3
190094		64 -17
190576		64 -30
190733		64 -12
190734		64 - 6
1913035-1		53G-48

PART NUMBER		FIGURE AND INDEX NO.
1913035-1		53G-49
1913035-1		53G-52
1913035-1		53L-95A
1913035-1		53N-95A
1913035-1		53Q-97A
1913035-1	¤	53J-92B
1913035-1	¤	53J-93
1913035-1	¤	53J-94
191869		64 -32
191869		64A-28
192103		64 -18
1924		94 -12
192558		64 -42
192558		64A-38
192709		64 -35
192709		64A-31
193385		64 -19
193385		64A-15
196195		64A-13
2-11		89A-22
2-11		89B-57
2-11		89C-44
2-15		89A-23
2-15		89B-58
2-15		89C-45
2N3055		90 -69
20H3P		90 -57
2013142-1		81 -49
204864		64 - 9
204864		64A- 8
206336		64 - 5
206336		64A- 5
206337		64 -25
206337		64A-21
210031		64 -10
210031		64A- 9
210036		64 - 8
210036		64A- 7
210039		64 -27
210039		64A-23
210095		64 -11
210100		64 -33
210112		64 -16
210206		64 - 7
210207		64 -14
210214		64 -34
210216		64A-40
210253		64 - 1
210253		64A- 1
210257		64 -41
210257		64A-37
210259		64 - 2
210261		64A-10
210269		64 -36
210272		64 -22
210289		64 -15
210293		64 -26
210293		64A-22
210326		64A-30
210382		64A-11
210393		64A-12
210394		64A-14
210396		64A- 6
210398		64A-32
210399		64A-18
2104		88 - 5
2104		88A- 5
213200		64A-39
213201		64A-29
213214		64A- 2
214202		64A-14
217-1		36A- 8
218036		64 - 3
2182D-R		53A-20

PART NUMBER	FIGURE AND INDEX NO.
218446	64 -39
218446	64A-35
218537	64A-26
218547	64A- 4
22FH-428	36 - 5
22FH-428	40 - 6
22FH632	73 - 4
23-4677C	89A-35
244-16	21 -10
244-16	61C-23
244-16D	21A-12
255-10-30-190	74B- 9A
255-10-30-190	74C-11
2600SW2	61C- 4
2600SW2	61C-28
27 OHM 1/2 W	53Q-95
27 OHM 1/2 W 10	53Q-94C
27S-3-2	61C- 4
27S-3-2	61C-28
27S-3-3	61C-28
28INT-12DC	79A-11
2904-1	76B- 1
295055	8 - 6
295055	8 - 6
3/32X1 1/8	60 -31
3021	40A- 8
3022	40A- 7
3023	37B- 7
3023	40A- 4
30370-0100	88 - 2
30370-0100	88A- 2
30370-0100	88B- 7
30370-0100	88C- 3
30370-0102	88 - 3
30475-0100	88 - 4
30475-0100	88A- 4
33-199-1	83 - 8
33-199-102	83 - 1
33-199-3	83 - 2
33-199-5	83 - 6
33-199-6	83 - 7
33-199-7	83 - 4
33-199-8	83 - 3
33-199-911	83 - 5
330	53B- 6
330	53B-10
330	57A-11
330R	53 -30
34-828-1	64B- 1
34-828-10	64B-30
34-828-11	64B-14
34-828-12	64B-23
34-828-13	64B-41
34-828-14	64B-16
34-828-15	64B- 7
34-828-19	64B- 9
34-828-2	64B- 2
34-828-20	64B-13
34-828-24	64B-11
34-828-25	64B-12
34-828-26	64B-19
34-828-27	64B- 5
34-828-28	64B-31
34-828-29	64B-15
34-828-31	64B-45
34-828-7	64B-10
34-828-8	64B-29
34-828-9	64B-17
34-828-902	64B-42
34-828-903	64B-32
34-828-907	64B-39
34-831-905	64B-25
34002-55	90 -75
351-11-05-001	74C-12

PART NUMBER	FIGURE AND INDEX NO.
35985	63A-39
3680C	33 -35
3680C	39 -71
3680C	39A-60
3690-1/2	1 -46
3690-1/4	1 -46
3690-1/8	1 -46
37-206	40A-27
37570-0001	88B- 5
3859A-281-251A	74C-19
3859A-282-251A	74C-19
40S5-4	61B-19
40S5-4	61B-39
40S5-4	61B-51
40S5-4	61C- 3
40S5-4	61C-19
4002-H	61 - 7
4002-H	61 -37
4002-H	61A- 7
4002-H	61A-41
4002-H	61B-19
4002-H	61B-39
4002-H	61C- 3
4002-H	61C-19
4002-244-16	17 -39
4002-244-16	61 - 3
4002-244-16	61A- 6
4002-244-16	61B- 4
4002-4	61 - 7
4002-4	61 -37
4002-4	61A- 7
4002-4	61A-41
4002H	61B-51
401627	53A-20A
401627	53C-26
401627	53E-28
401627	53G-29
401627	53J-76
401627	53L-79
401627	53N-82
401627	53Q-90
40760-0104	88 - 3
41163-C-14	53B-16
41163L14	53C-39
4157-001	74C-17
4189	8 -37
4196	8 -36
4199	8 -37
42320-0014	53Q-72
42320-1014	53Q-72
440437	53C-22
440437	53E-24
440437	53G-25
440437	53J-72
440437	53L-75
440437	53N-78
441344	53C-21
441344	53E-23
441344	53G-24
441344	53J-71
441344	53L-74
441344	53N-77
441344	53Q-85
442785	53A-19
442785	53C-24
442785	53E-26
442785	53G-27
442785	53J-74
442785	53L-77
442785	53N-80
442785	53Q-88
4509	61B-51H
4509	61C-74
47 OHM,1/2W,10	53J-90

PART NUMBER	FIGURE AND INDEX NO.
47 OHM,1/2W,10	53L-90
47 OHM,1/2W,10	53N-92
49265-F-938	45 -13
49265-F-938	45A-12
49265-F-938	52C-14
49330	17 -27
49330	17A-27
49330	25 -59
5-171	74B-14
5/16-24X1 3/4	60 -20
5FF10A568A	90 -19
5037-1	82A-24
51045	51A-74
511846-4	40 -20
52NEE070	39 - 4
52NEE070	39A- 4
534750	63A- 5
537282	63A-21
537312	63A-22
538076	63A-34
539547	63A-26
539911	63 - 7
550	1 -13
5579654	86 -37
5602M-3LH-R-14	53B- 6
5602M-3RH-R-14	53B- 5
5602M-3RH-R-14	53B-10
561	40A-17
561	40A-19
576.1	1 - 5
579.6	1 - 6
582384-9	74B-27A
582384-9	74C-25
600-015-10-DS	38B-14
600-015-1005	38A- 7
60232-1	53 -19
60232-1	53A-29
60232-1	53C-34
60232-1	53E-37
60232-1	53G-38
60232-1	53J-85
60232-1	53L-86A
60232-1	53N-89C
60232-1	53Q-92C
61-19	40A-15
61-37	40A-15
624 1M	39 -71
624 1M	39A-60
6241B	33 -35
6241M	33 -35
6241M	39B-71
625017	63A-23
625093	63A-13
625298	63A- 7
625299	63A- 8
625303	63A-24
625765	63A- 4
625966	63 -72A
626189	63A-20
626332	63 -72
626332	63A-17
626341	63 -72A
626341	63A-19
626342	63 -72A
626342	63A-18
627392	63A-14
628472	63A- 1
628473	63A- 2
629076	63A- 6
629176	63A-35
630050	63A-16
631095	63A-15
631237	63A- 3
633005	63A- 9

PART NUMBER	FIGURE AND INDEX NO.
633006	63A-10
633007	63A-11
633027	63A-38
633311	63A-12
634592	63A-35
639151	63 -72A
639171	63 -72A
6436635	86 -35
6436637	86 -36
6436916	86 -38
6436989	86 -40
64881-00	89C-57
66-30	40A-17
66-30	40A-19
69-4	40A-24
700	1 -11
7000-3/8	60 -43
73-11	40A-18
74-10	40A-16
75-31	40A-28
75-37	40A-28
8-171	74B-27
8-32X1/2	37A- 2
8-4VTX-S	82 -41
8-4VTX-S	82A-47
800-001-6	73 - 7
811542	53 -15
811542	53A-20A
811542	53C-26
811542	53E-28
811542	53G-29
811542	53J-76
811542	53L-79
811542	53N-82
811542	53Q-90
8409	74 -86
8445	74B-16
8468-2	60 -46
8540-1	89A-74
8540-1	89B-51
8540-1	89C-61
90	90 - 9
90	91 -18
90DA-8	59B-44
91-22	40A-14
91-44	40A-14
91-8000AC	89B-63
91-8000AC	89C-66
92-17	40A-20
94	91 -18
94	91A-19
9511269	40 -15
9511271	40 -16
9520448	40 -22
9521184	40 -11
9524201	40 - 2
9524202	40 - 3
9524218	40 - 9
9524223	40 -12
9524318	40 - 3
9524343	40 -18
9524463	40 -23
9524491	40 - 9
9532277	40 -17
9532671	36 - 1
9532672	36 - 2
9541458	40 -10
9541898	36 - 1
9541899	36 - 2
97NTE-048	89B-64
97NTE-048	89C-67
99608-K2215	47 -14

PART NUMBER	FIGURE AND INDEX NO.

PART NUMBER	FIGURE AND INDEX NO.